

### Note on the Carrying Bag

The carrying bag is not provided with the PJ WX4130NM.

### Default Setting for Auto Keystone

The default setting for [Auto Keystone] under the [Default Settings] menu is [Off].

# RICOH

## Notes for Users of the PJ WX4130NM

The PJ WX4130NM is the wall mount model. The following is information about this model. For other information, see the manuals supplied with the projector.


### Installation Method

#### **WARNING**


If the projector is installed on a wall or projection screen incorrectly, the projector may fall down and cause an injury. Contact your sales or service representative if you want to install the projector on a wall or projection screen.

The PJ WX4130NM can be installed in the following two ways:

- Standard

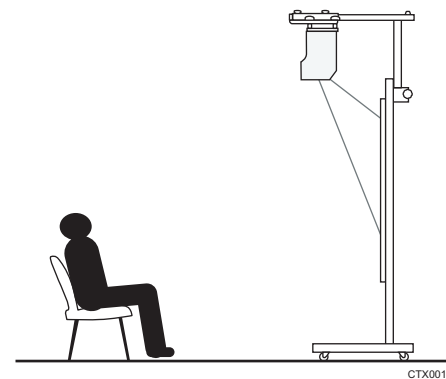


- Rear

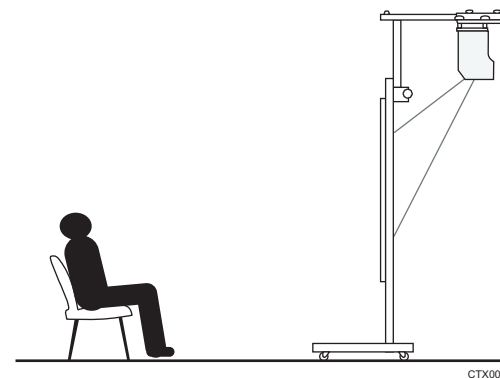

© 2012 Ricoh Co., Ltd.  
Printed in China  
EN (GB) EN (US) EN (AU)  
Y012-7563A

Relationship Between the Projection Distance and the Screen Size

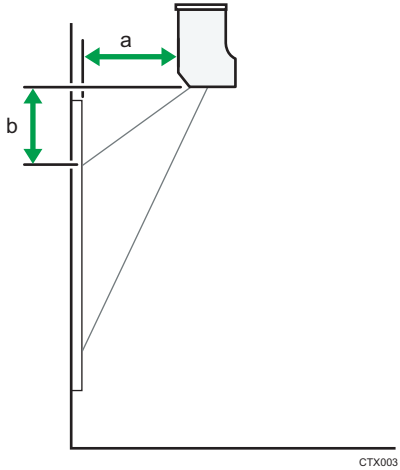


Projection size*1	a	b
48 inches	12 cm (4.6 inches)	9 cm (3.7 inches)
60 inches	17 cm (6.5 inches)	12 cm (4.7 inches)
80 inches	25 cm (9.8 inches)	16 cm (6.2 inches)


\*1 The sizes of the projected images are for a full size image without keystone adjustment.

Notes on the Adjustable Feet

The PJ WX4130NM is not equipped with adjustable feet. You cannot adjust the angle of projection using the adjustable feet as explained in the manual.

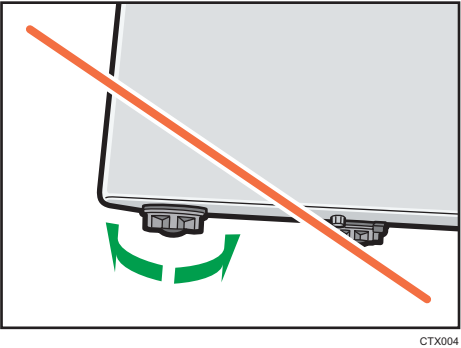

Effective Range of the Remote Control

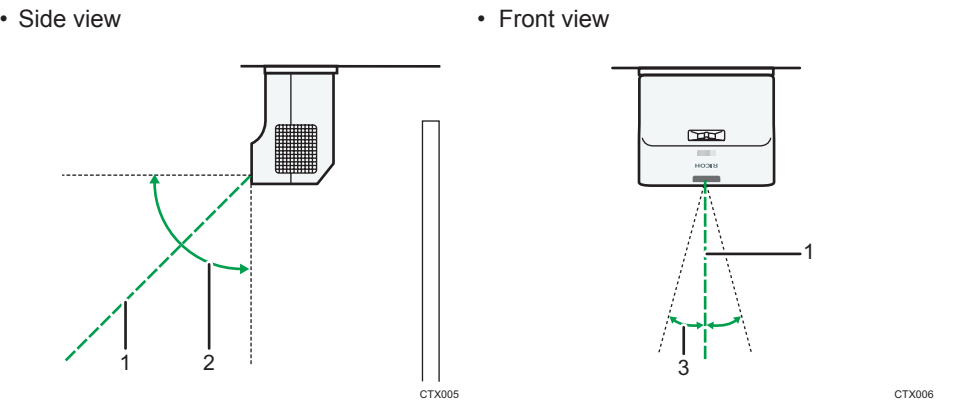

- 1. Distance: up to 4.5 meters (14.7 feet)
- 2. Effective vertical angle: within 90 degrees
- 3. Effective horizontal angle: within 15 degrees

Note

The remote control may not work if the remote control receiver on the projector is exposed to sunlight, fluorescent light, or strong light.

Cleaning the Projector/Replacing Parts

WARNING

Contact your sales or service representative when cleaning the wall-mounted projector or replacing its parts.

- Do not attempt to clean the wall-mounted projector or replace its parts if it is installed in a high location. Doing so may cause it to fall down, resulting in an injury.
- Do not open the lamp cover of the wall-mounted projector. Doing so may cause the lamp cover to fall down. If the lamp is broken, pieces of glass may fall out and cause an injury.

Contact your sales representative or service representative when doing the following:

- Cleaning the projector
- Replacing the lamp
- Cleaning/replacing the air filter

The message "Check the air filter for dirt." is displayed for approximately 30 seconds every 500 hours after the projector is first turned on. It indicates that it is time to check the condition of the air filter.