

Notes for Users

This supplement includes notes for the Operating Instructions provided with the projector.

The following settings have been added to [Security] in [Network Application Settings].

Item	Default
Application Authentication When projecting images using an application installed on a smart device, specify whether or not to enter the application password.	Off
Application Password Enter the application password up to 32 characters.	(blank)

Note

Application Authentication setting may not be available depending on the application you are using. See the application's help for details.

本製品をお使いのお客様へ

このたびは本製品をお買い上げいただき、ありがとうございます。

使用説明書に記載の「電子ペン用単四形ニッケル水素充電電池」の本数に誤りがありました。
次のように訂正し、お詫び申し上げます。

株式会社リコー

誤	正
単四形ニッケル水素電池 (<u>2本</u>)	単四形ニッケル水素電池 (<u>1本</u>)

Notes for Users

This supplement provides corrections for the manuals provided with this product.

Error	Correction
AAA Ni-MH rechargeable batteries × <u>2</u>	AAA Ni-MH rechargeable battery × <u>1</u>