



This course explains how to service the Kaus-PJ1 portable short-throw projector.

To learn about this machine, please study the user's guide and the field service manual in addition to this TTP.



No additional notes

## ■ Models in this Series

**RICOH**  
imagine. change.

- Kaus-PJ1cw (Y0AB): PJ WXC1110
- Uses an LED lamp, and not a mercury lamp
  - Life: 20,000 hours in Bright mode
- Weight: 0.45 kg (1 lb)
- Resolution: WXGA (1200 x 800)
- Brightness: 600 lumens in Bright mode

3

No additional notes

## Main Specifications

**RICOH**  
imagine. change.

 
	Kaus-PJ1cw
Type	0.45" WXGA DMD
Brightness	600 lm
Lamp type	Laser diode banks x 2
Resolution	WXGA (1280 x 800)
Projection distance	0.86m-1.72m
Projection screen size	50-100 inches
Dimensions (W x H x D, mm)	112.5 x 40.5 x 105
Weight	0.45 kg
Power Consumption	< 77 W (full power mode)
Speaker	1.5 W mono
Wireless LAN	No
Wired LAN	No
USB	USB A

4

See the specifications table in the service manual for more details.

## ■ Appearance


**RICOH**  
imagine. change.

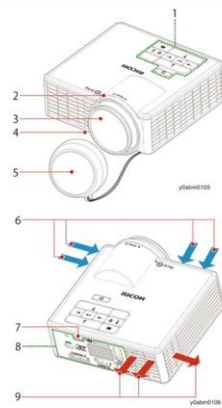

1. Control panel
2. Focus ring
3. Lens
4. Adjustable foot
5. Lens cap
6. Ventilation (inlet)
7. Infrared remote sensor
8. Connection ports
9. Ventilation (outlet)

5


No additional notes

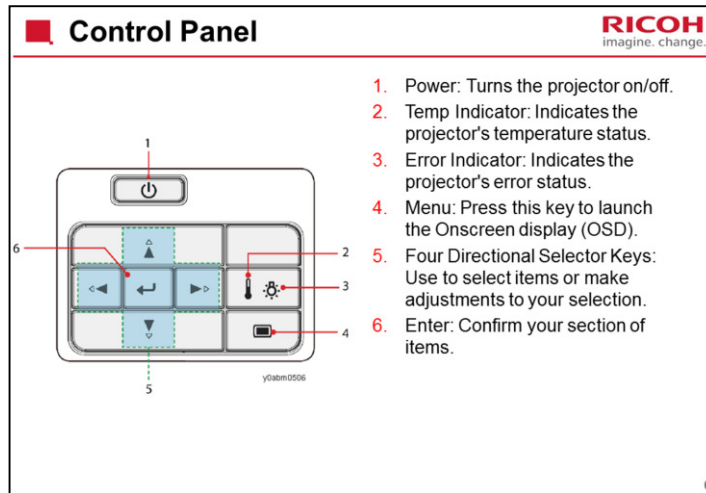

No additional notes

## Rear of the Projector

 **RICOH**  
imagine. change.

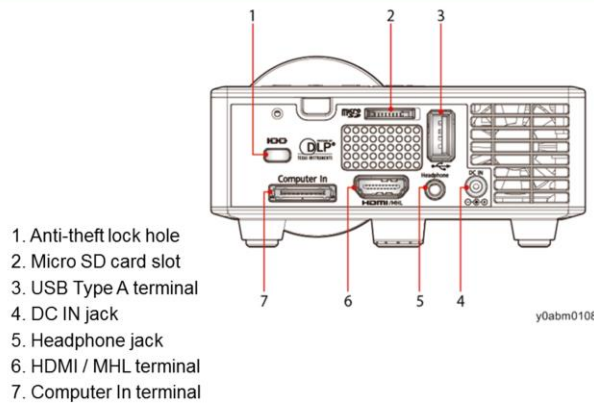

No additional notes

## Service Mode

imagine. change.

y0abm0509

DS1+ .8

Ver. C86 <Jan 19 2016 14:44>

MCU C85 MM C83 MST C87

System Hours 58:00

LED Hours 23:55

LED Hours (low) 0:00

Factory Reset

Burn In Test

Failure Log

Analog Settings

LED Calibration Settings

Optical Settings

Thermal Settings

Other Settings

G Sensor Calibration 4

Security Password ↑↑↑↑↑↑↑↑

Exit

y0abm0501

- Press the "Power [1]", "Left [2]", "Left [3]", and "Menu [4]" keys sequentially.

No additional notes





No additional notes

- After replacing parts or updating firmware, some adjustments may be needed. See the table in the following section of the service manual:  
Replacement and Adjustment - Required Action After Replacing Parts
  - Whenever you replace a component, check this table to see if you have to do any of these procedures.

No additional notes

## ■ Special Tools Needed

**RICOH**  
imagine. change.

- You need the following tools to perform adjustments that are necessary after replacing the optical engine or main board.
  - RS232 cable (9-pin to 9-pin)
  - USB cable (Type A to Mini)
  - USB cable (Type A to B)
- The procedures in the manual explain how to use these tools.
  - Study the procedures in the manual.

11

No additional notes

## Before Replacing the Main Board

**RICOH**  
imagine. change.

 
- You must make a note of the LED usage hours.
  - This is in the service mode menu.
  - There are two values in the menu: LED hours, and LED hours (low)
  - LED hours (low) is not used. Please ignore this value.

12

No additional notes

## ■ Installing a New Bottom Cover

**RICOH**  
imagine. change.

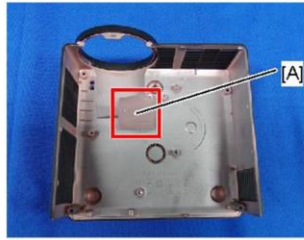

y0abm0169

- When installing a new bottom cover, install a new dissipation sheet [A].
  - It is possible to remove the sheet from the old cover and install it on the new one. However, the sheet is easily damaged, so this is not recommended.

13

The spare part for the bottom cover does not have the dissipation sheet attached. So, if you need to install a new cover, you must order a new dissipation sheet also.



This section explains the basic points about updating the firmware.

## ■ How Many Types of Firmware?

**RICOH**  
imagine. change.

- DPP6401 (System firmware)
- AM8250
  
- For each of these procedures, software must be installed on a PC connected to the projector.
- Normally, firmware update is not needed. Update the firmware only when specifically instructed to do so.
- The detailed procedures are in the Firmware Update section of the service manual.

15

No additional notes



The End