

Notes for Users

For PJ X3340/WX3340/X3340N/WX3340N/X3351N/WX3351N/X4240N/WX4240N/X4241N/WX4241N







The following section explains how to clean the air filter on the side of the projector.

The air filter prevents dust and dirt from entering the interior of the projector.

If the message "Check the air filter for dirt." is displayed, check the air filter for dirt or dust, and use the following procedure to clean off any dirt or dust.

★ Important

- Either of the following may occur if the air filter is clogged and the interior of the projector overheats due to inadequate air circulation. If this is the case, clean the air filter.

Status	Status of LED Indicators			
"Temperature Error" was displayed, and the projector turned off during operation.		Lamp 	Temp 	Flashing interval : 5 seconds
The lamp turned off during operation.		Lamp 	Temp 	

1. Unplug the power cable from the wall outlet.
2. With the intake vent cover attached to the projector, use a vacuum cleaner over the cover to remove any dust or dirt collected on the air filter.

↓ Note


- Do not use a vacuum cleaner to clean the air filter with the intake vent cover removed.

If dirt or dust remains on it cleaned with a vacuum cleaner, follow the procedure below to wash the cover with water.

3. Open the intake vent cover by pushing the tab at the top of the cover.
4. Remove the intake vent cover from the projector and wash the cover with water.

↓ Note

- After washing the intake vent cover with water, make sure to dry it completely before reinstalling it back in the projector.
- Do not wash the air filter with water.

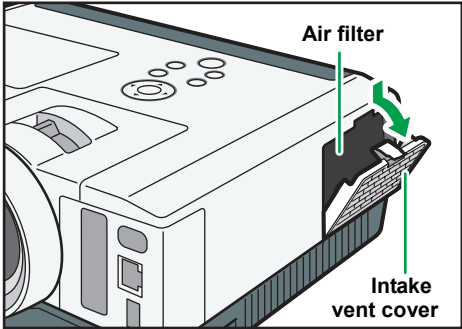

## 5. Attach the intake vent cover to the projector.

Insert the intake vent cover from its bottom to the opening on the projector, and then close the cover by pushing the tab at the top of the cover.

Make sure that the intake vent cover is installed correctly. Otherwise, dirt and dust may enter the projector through any gaps and cause it to stop or malfunction.

### Note

- The message is displayed for approximately 30 seconds every 500 hours after the projector is first turned on. The display closes when operation starts.
- Depending on the environment in which the projector is located, the filter may get clogged earlier than expected. When any dust or dirt has visibly collected on the air filter, clean it regardless of whether the warning message is displayed or not. A buildup of dust on the air filter may cause poor ventilation, causing the interior of the projector overheat and operations to stop or malfunction.