

RICOH PJ XC4660 (Y0C821)
RICOH PJ WXC4660 (Y0CC21)
RICOH PJ WUC4650 (Y0CD21)
RICOH PJ LX3800UST (Y0C921)
RICOH PJ LX3806UST (Y0CA21)
RICOH PJ LW3800UST (Y0CH21)
RICOH PJ LU3800UST (Y0CE21)

 
PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

CONTENTS

1. RICOH PJ-1	2 P
2. RICOH PJ-2	4 P
3. RICOH PJ-3	6 P
4. RICOH PJ-4	8 P
5. Parts Index	10 P

1. RICOH PJ-1

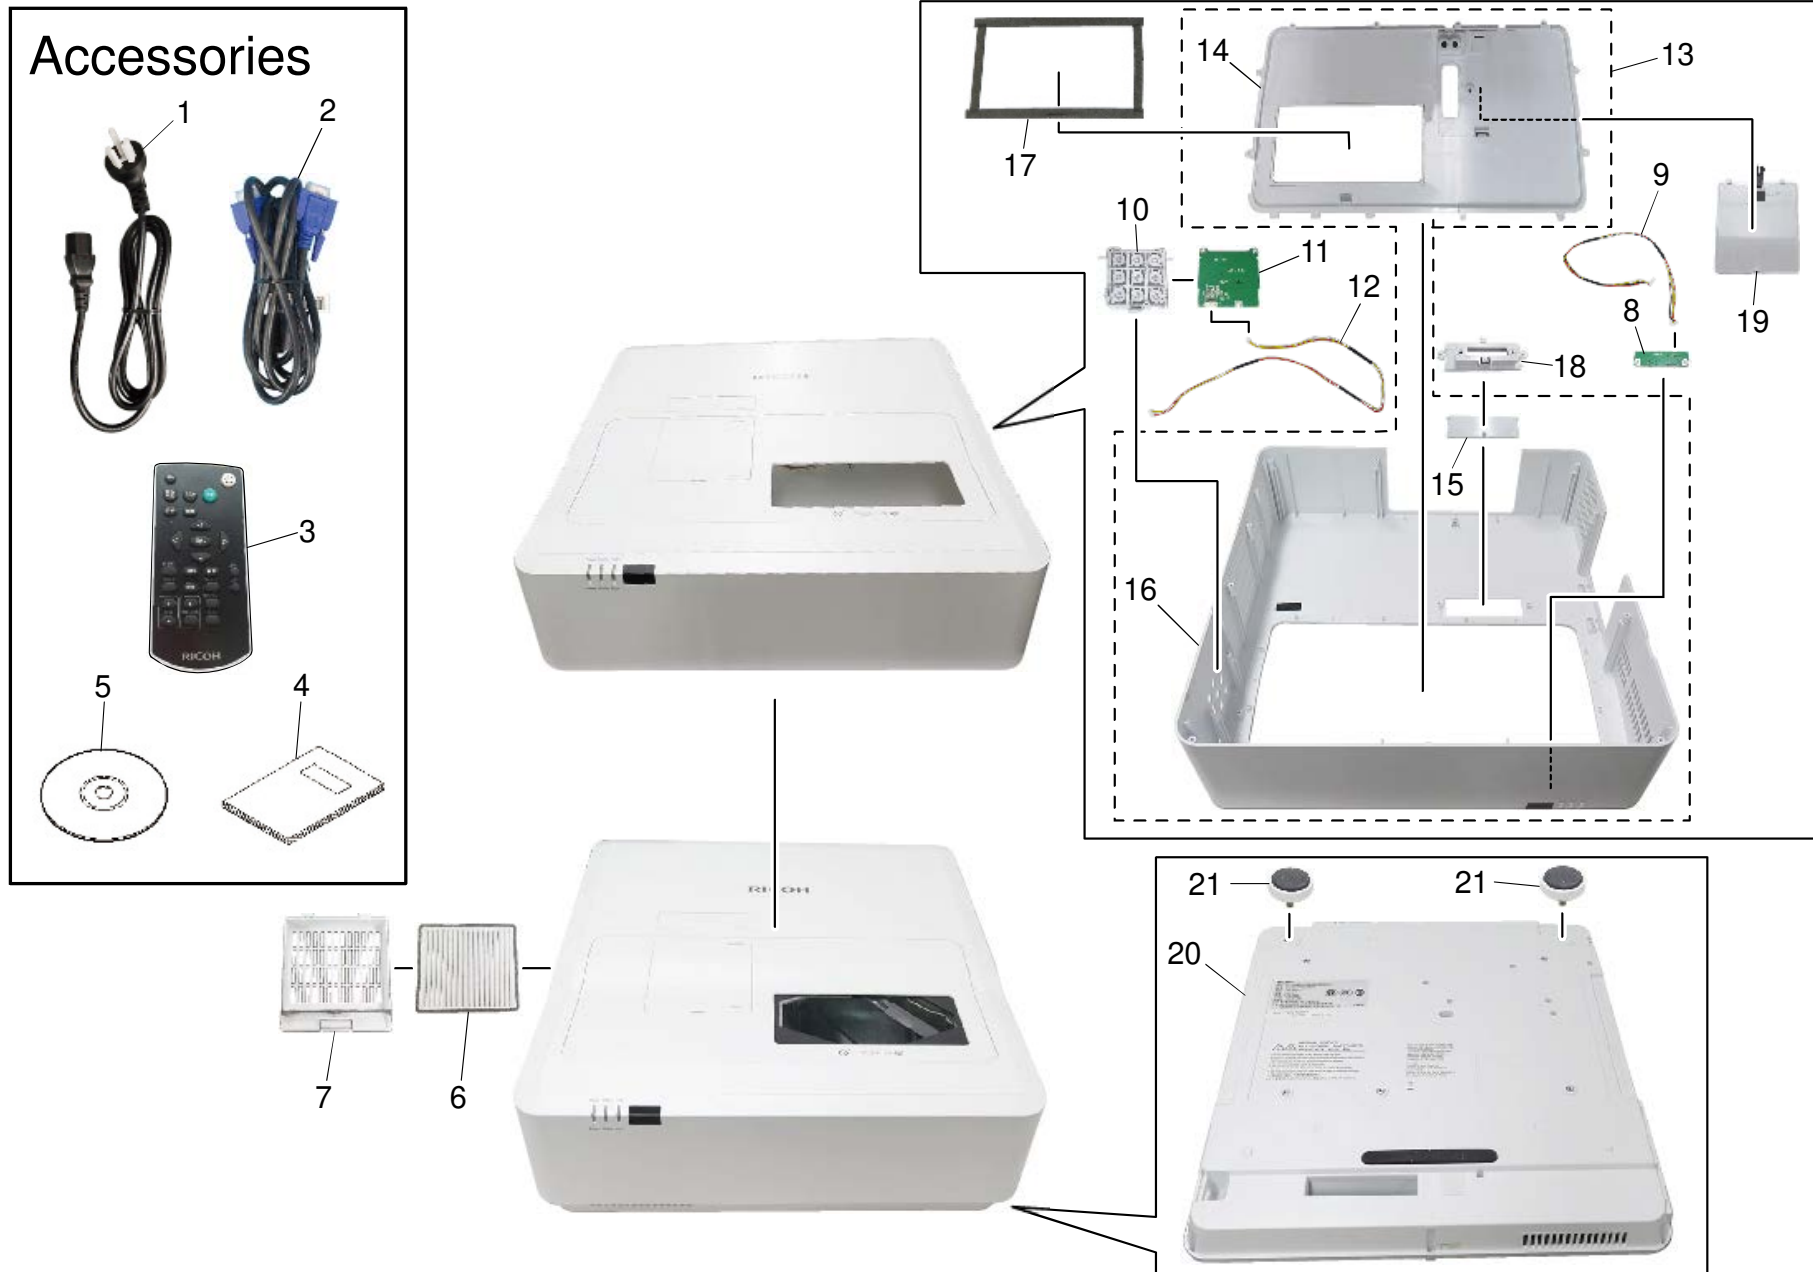


1. RICOH PJ-1

Index No.	Part No.	Description	Q'ty Per Assembly
1	Y0C86078	EFN:310000800:POWER_CORD_CH	1
2	Y0C86050	EFN:310001100:CORD_VGA	1
3	Y0C86021	EFN:393003900:REMOTE_CONTRO	1
4	Y0C86002	EFN:510014900:MANUAL_CHN	1
5	Y0C86012	EFN:510014800:CD_CHN	1
6	Y0C82600	EFN:410014600:AIR_FILTER	1
7	Y0C82650	EFN:410016500:SEAL_AIR_FILT	1
8	Y0C85515	EFN:394010402:PCB_LED	1
9	Y0C85540	EFN:311031600:HARNESS_LED_R	1
10	Y0C81140	EFN:440078500:KEY_TOP	1
11	Y0C81160	EFN:394010300:PCB_KEYBOARD	1
12	Y0C85530	EFN:311031500:HARNESS_KEY	1
13	Y0C81100	EFN:470004000:COVER_TOP_WIG (RICOH PJ XC4660, WXC4660, WUC4650, LX3806UST, LW3800UST)	1
13	Y0C81110	EFN:470005800:COVER_TOP_BLA (RICOH PJ LX3800UST, LU3800UST)	1
14	Y0C81310	EFN:440078700:COVER_LENS_WI (RICOH PJ XC4660, WXC4660, WUC4650, LX3806UST, LW3800UST)	1
14	Y0C81320	EFN:440086000:COVER_LENS_BL (RICOH PJ LX3800UST, LU3800UST)	1
15	Y0C81300	EFN:440034700:COVER_LEVER_Z	1
16	Y0C81105	EFN:440078600:COVER_TOP	1
17	Y0C81520	EFN:410026200:TAPE_COVER	1
18	Y0C81330	EFN:440034600:INNER_COVER_Z	1
19	Y0C81340	EFN:440078800:COVER_FORCUS_ (RICOH PJ XC4660, WXC4660, WUC4650, LX3806UST, LW3800UST)	1
19	Y0C81350	EFN:440086100:COVER_FORCUS_ (RICOH PJ LX3800UST, LU3800UST)	1

[illegible]

 
2. RICOH PJ-2

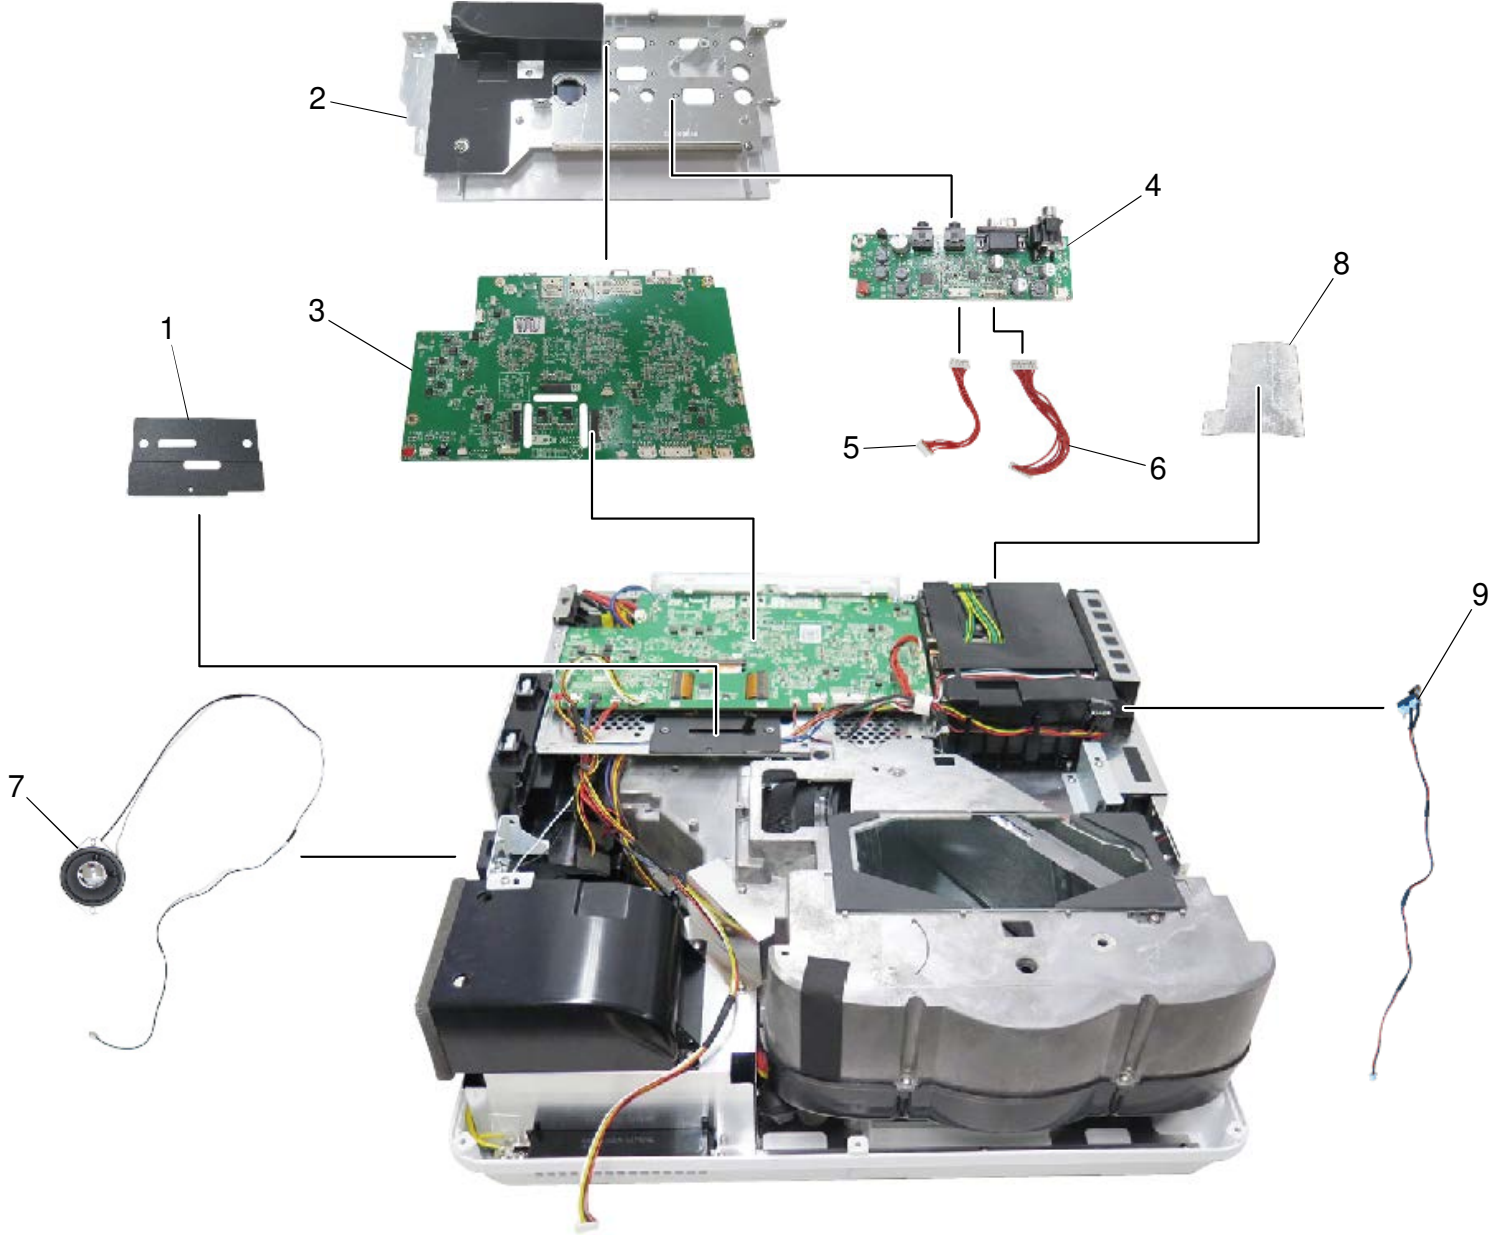

2. RICOH PJ-2

[illegible][illegible]

 
3. RICOH PJ-3

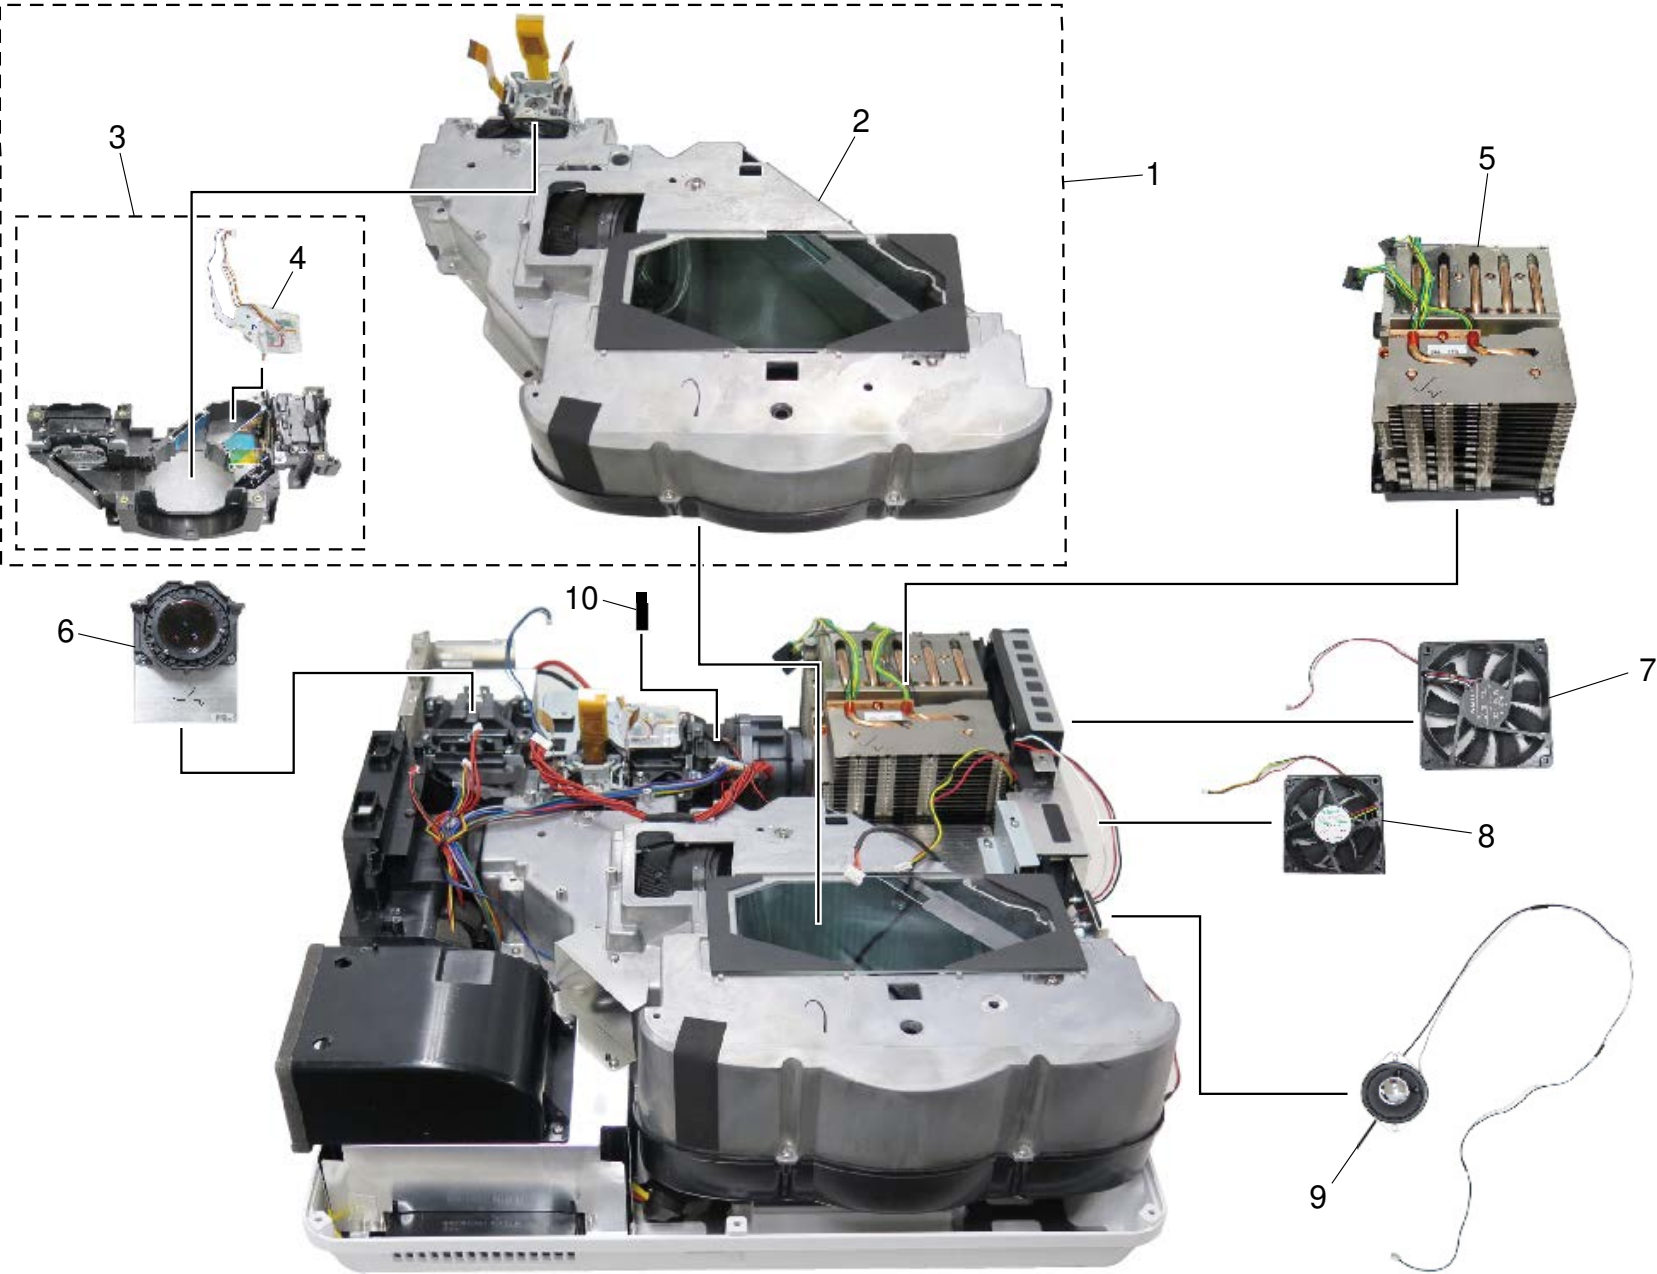

3. RICOH PJ-3

[illegible][illegible]

 4. RICOH PJ-4

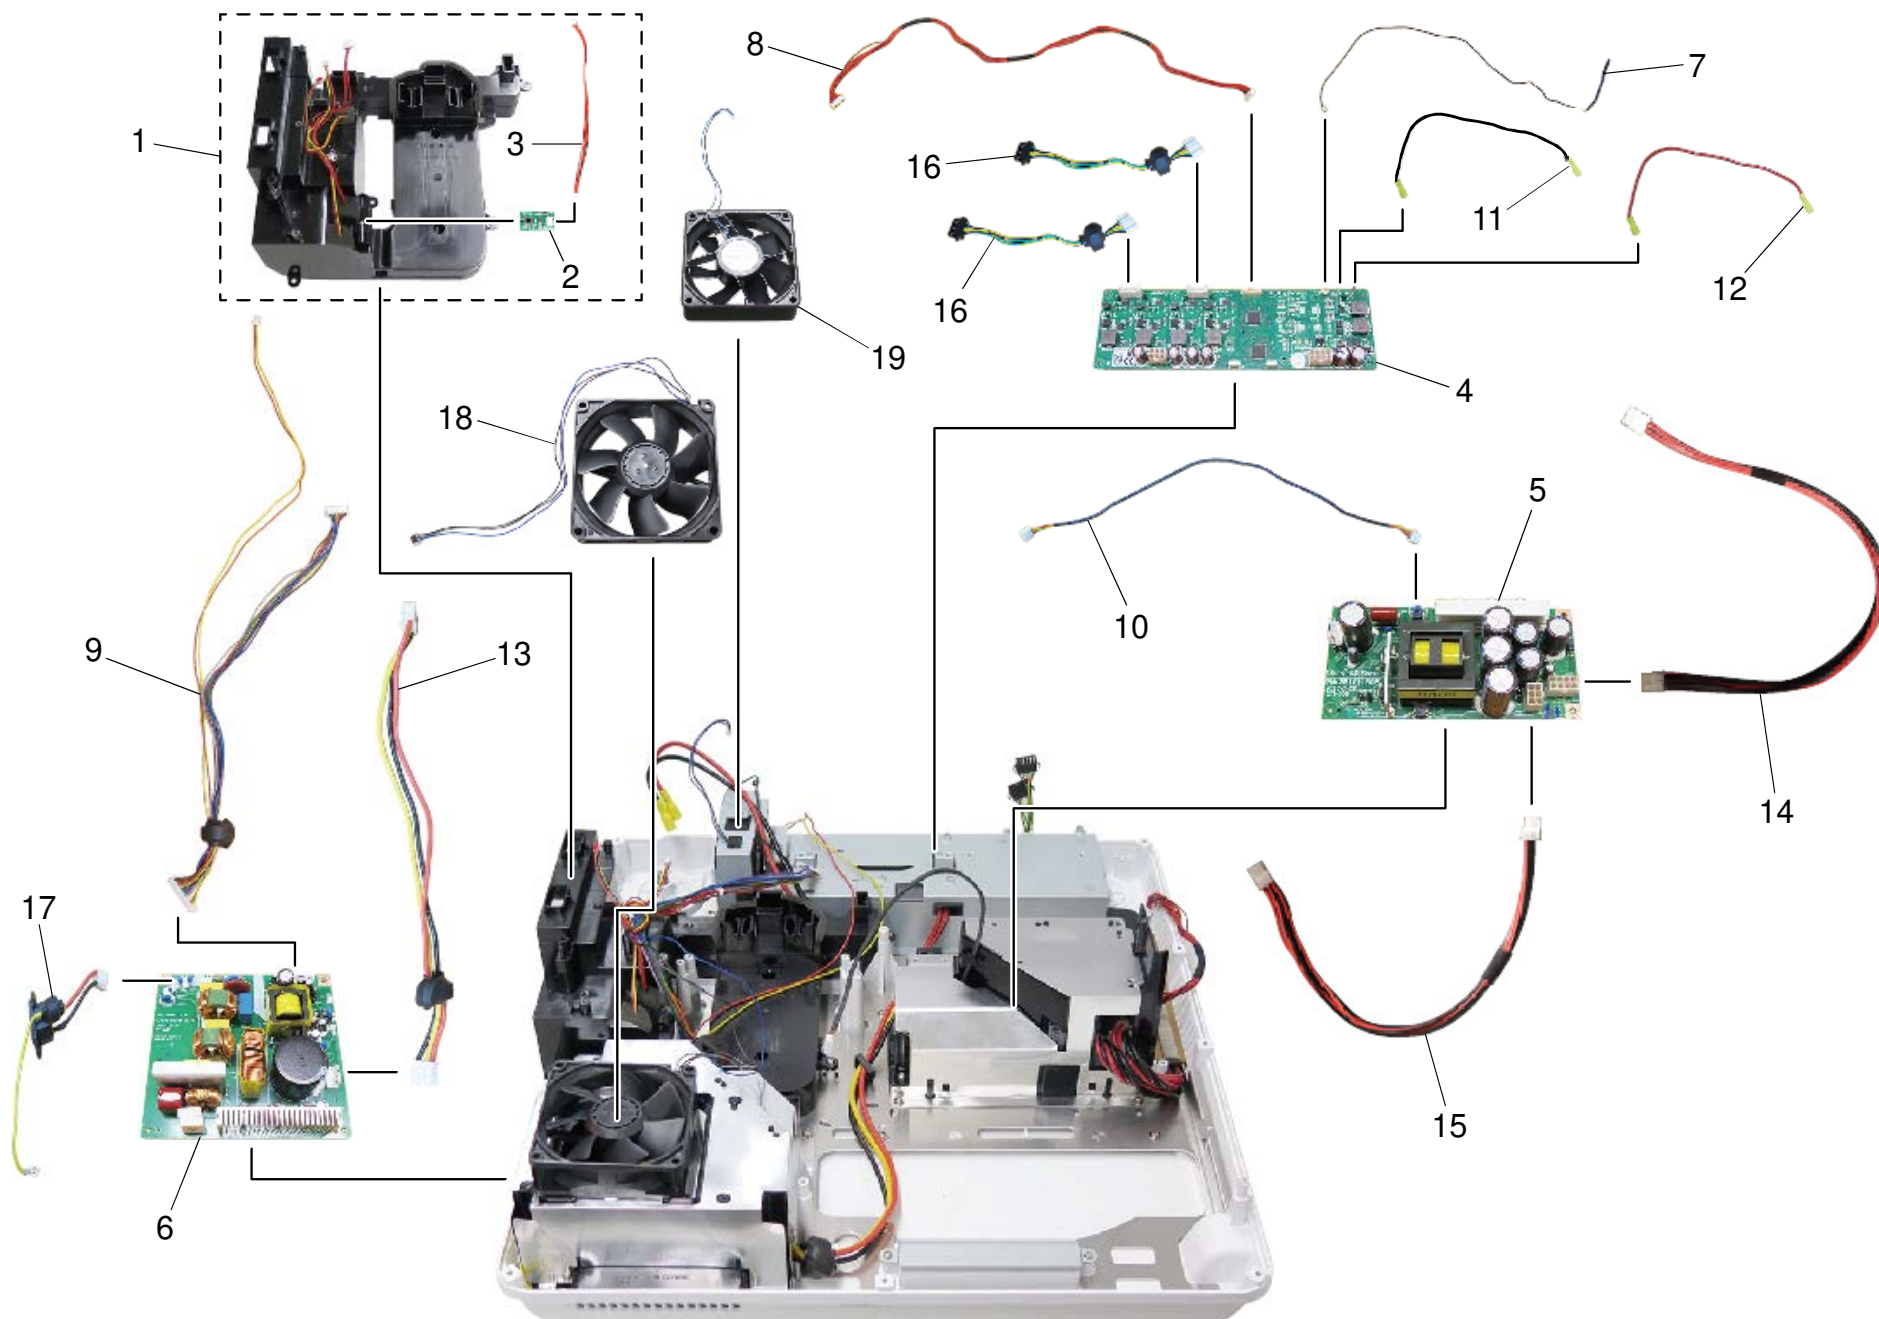

4. RICOH PJ-4

[illegible][illegible]

5. Parts Index

Part No.	Description	Page and Index No.
Y0C81010	EFN:384008700:SPEAKER_10W	2 - 7
Y0C81010	EFN:384008700:SPEAKER_10W	3 - 9
Y0C81100	EFN:470004000:COVER_TOP_WIG (RICOH PJ XC4660, WXC4660, WUC4650, LX3806UST, LW3800UST)	1 - 13
Y0C81105	EFN:440078600:COVER_TOP	1 - 16
Y0C81110	EFN:470005800:COVER_TOP_BLA (RICOH PJ LX3800UST, LU3800UST)	1 - 13
Y0C81140	EFN:440078500:KEY_TOP	1 - 10
Y0C81160	EFN:394010300:PCB_KEYBOARD	1 - 11
Y0C81210	EFN:470004100:COVER_INTERFA	2 - 2
Y0C81300	EFN:440034700:COVER_LEVER_Z	1 - 15
Y0C81310	EFN:440078700:COVER_LENS_WI (RICOH PJ XC4660, WXC4660, WUC4650, LX3806UST, LW3800UST)	1 - 14
Y0C81320	EFN:440086000:COVER_LENS_BL (RICOH PJ LX3800UST, LU3800UST)	1 - 14
Y0C81330	EFN:440034600:INNER_COVER_Z	1 - 18
Y0C81340	EFN:440078800:COVER_FORCUS_ (RICOH PJ XC4660, WXC4660, WUC4650, LX3806UST, LW3800UST)	1 - 19
Y0C81350	EFN:440086100:COVER_FORCUS_ (RICOH PJ LX3800UST, LU3800UST)	1 - 19
Y0C81360	EFN:410023500:SHEET_ZOOM_XG (RICOH PJ XC4660, LX3800UST, LX3806UST)	2 - 1
Y0C81500	EFN:410026600:SHEET_INSULAT	2 - 8
Y0C81510	EFN:410029600:TAPE_EVA	3 - 10
Y0C81520	EFN:410026200:TAPE_COVER	1 - 17
Y0C82020	EFN:470004200:FAN_AXIAL_FLO	3 - 7
Y0C82030	EFN:384005300:FAN_AXIAL_FLO	4 - 18
Y0C82040	EFN:470004300:FAN_AXIAL_FLO	3 - 8
Y0C82050	EFN:470004400:FAN_AXIAL_FLO	4 - 19
Y0C82500	EFN:470003900:COOLING_UNIT_	4 - 1

Part No.	Description	Page and Index No.
Y0C82600	EFN:410014600:AIR_FILTER	1 - 6
Y0C82650	EFN:410016500:SEAL_AIR_FILT	1 - 7
Y0C83001	EFN:250002700:OPTICAL_ENGIN (RICOH PJ XC4660, LX3800UST, LX3806UST)	3 - 1
Y0C83060	EFN:230006800:HLD_LIGHT_MOD	3 - 5
Y0C83070	EFN:230006900:LED_LIGHT_MOD	3 - 6
Y0C83500	EFN:230007200:OPTICAL_ENGIN (RICOH PJ XC4660, LX3800UST, LX3806UST)	3 - 2
Y0C83550	EFN:250005300:ILLUMINATION_ (RICOH PJ XC4660, LX3800UST, LX3806UST)	3 - 3
Y0C83560	EFN:230008700:SHUTTER	3 - 4
Y0C85000	EFN:394010605:PCB_MAIN_XGA_ (RICOH PJ XC4660, WXC4660, LX3800UST, LX3806UST, LW3800UST)	2 - 3
Y0C85010	EFN:394010703:PCB_AV	2 - 4
Y0C85020	EFN:391002600:DRIVER_HLD	4 4
Y0C85030	EFN:394010805:POWER_SUPPLY_	4 - 5
Y0C85035	EFN:394015801:POWER_SUPPLY_	4 - 6
Y0C85500	EFN:311029800:HARNESS_AV_1	2 5
Y0C85505	EFN:394010500:PCB_SENSOR	4 - 2
Y0C85510	EFN:311029900:HARNESS_AV_2	2 6
Y0C85515	EFN:394010402:PCB_LED	1 - 8
Y0C85520	EFN:311030200:HARNESS_SENDO	4 3
Y0C85530	EFN:311031500:HARNESS_KEY	1 - 12
Y0C85540	EFN:311031600:HARNESS_LED_R	1 - 9
Y0C85550	EFN:311031700:HARNESS_HLD_D	4 - 8
Y0C85560	EFN:311031800:HARNESS_SW	2 - 9
Y0C85570	EFN:311031900:HARNESS_PSU_1	4 - 9
Y0C85580	EFN:311032000:HARNESS_PSU_2	4 - 10
Y0C85590	EFN:311032500:HARNESS_LED_B	4 - 11
Y0C85610	EFN:311032600:HARNESS_LED_R	4 - 12

