

Model: Model HL-F1		Date: 18-Jun-10	No.: RH558001
Subject: How to access Maintenance Mode		Prepared by: Y. Gaman	
From: 2nd Overseas Tech Support Sec. 2nd PQM Dept			
Classification:	<input type="checkbox"/> Troubleshooting	<input type="checkbox"/> Part information	<input type="checkbox"/> Action required
	<input type="checkbox"/> Mechanical	<input type="checkbox"/> Electrical	<input checked="" type="checkbox"/> Service manual revision
	<input type="checkbox"/> Paper path	<input type="checkbox"/> Transmit/receive	<input type="checkbox"/> Retrofit information
	<input type="checkbox"/> Product Safety	<input type="checkbox"/> Other ()	<input checked="" type="checkbox"/> Tier 2

Important information regarding Maintenance Mode

To access Maintenance Mode, do one of the following:

- Type the following keys, in sequence:
[Menu/Set] → [*] → [2] → [8] → [6] → [4]

Note: This should take about three seconds.

Or,

- Type the following keys, in sequence:
[Menu/Set] → [Start] → [^] → [^] → [^] → [^]

Reissued: 02-Jun-11

Model: HL-F1	Date: 29-Jul-10	No.: RH558002a
--------------	-----------------	----------------

RTB Reissue

The items in bold italics have been added.

Subject: Firmware Release Note: Engine Firmware(Package)		Prepared by: Y. Gaman	
From: 2nd Overseas Tech Support Sec., 2nd PQM Dept.			
Classification:	<input type="checkbox"/> Troubleshooting	<input type="checkbox"/> Part information	<input type="checkbox"/> Action required
	<input type="checkbox"/> Mechanical	<input type="checkbox"/> Electrical	<input type="checkbox"/> Service manual revision
	<input type="checkbox"/> Paper path	<input type="checkbox"/> Transmit/receive	<input type="checkbox"/> Retrofit information
	<input type="checkbox"/> Product Safety	<input checked="" type="checkbox"/> Other (Firmware)	<input checked="" type="checkbox"/> Tier 2

This RTB has been issued to announce the firmware release information for the **Engine Firmware(Package)**.

Version	Program No.	Effective Date	Availability of RFU
9.00	<i>H558v009</i>	<i>May 2011 production</i>	<i>Not available</i>
8	H558v008	1st Mass production	Not available

Note: Definition of Availability of RFU via @Remote

“Available”: The firmware can be updated via RFU or SD card.

“Not available”: The firmware can only be updated via SD card.

Version	Modified Points or Symptom Corrected
9.00	<i>Other changes:</i> <i>1. The default timer setting for Sleep mode was changed from 5 minutes to 1 minute.</i> <i>2. Fax control was further improved.</i>
8	1st Mass production

Model: HL-F1	Date: 28-Jul-10	No.: RH558003
--------------	-----------------	---------------

Subject: Maintenance Utility Release Note: writeUSBserial		Prepared by: Y. Gaman	
From: 2nd Overseas Tech Support Sec., 2nd PQM Dept.			
Classification:	<input type="checkbox"/> Troubleshooting	<input type="checkbox"/> Part information	<input type="checkbox"/> Action required
	<input type="checkbox"/> Mechanical	<input type="checkbox"/> Electrical	<input type="checkbox"/> Service manual revision
	<input type="checkbox"/> Paper path	<input type="checkbox"/> Transmit/receive	<input type="checkbox"/> Retrofit information
	<input type="checkbox"/> Product Safety	<input checked="" type="checkbox"/> Other	<input checked="" type="checkbox"/> Tier 2

This RTB has been issued to announce the maintenance utility release information for the **writeUSBserial**.

Version	Program No.	Effective Date
3.04	H558v304	1st Mass production

Version	Modified Points or Symptom Corrected
3.04	1st Mass production

Model: Model HL-F1		Date: 24-Nov-10	No.:RH558004
Subject: Maintenance printer driver installation		Prepared by: Y. Gaman	
From: 2nd Overseas Tech Support Sec. 2nd PQM Dept			
Classification:	<input type="checkbox"/> Troubleshooting	<input type="checkbox"/> Part information	<input type="checkbox"/> Action required
	<input type="checkbox"/> Mechanical	<input type="checkbox"/> Electrical	<input checked="" type="checkbox"/> Service manual revision
	<input type="checkbox"/> Paper path	<input type="checkbox"/> Transmit/receive	<input type="checkbox"/> Retrofit information
	<input type="checkbox"/> Product Safety	<input type="checkbox"/> Other ()	<input type="checkbox"/> Tier 2

Notice of Change of the BHL2-Maintenance Printer Driver and New Installation Procedure

The BHL2-Maintenance Printer driver was changed to the “**Maintenance USB Printer Driver**”. See the modified installation procedure below.

Installing the Maintenance USB Printer Driver

IMPORTANT:

- After this procedure is performed for a given PC, no more driver/software installations are required for that PC.
- Before you do this procedure, make sure that the files for the **Maintenance USB Printer driver** are already stored on the PC (Windows XP or later).


1. Make sure that the machine’s power cord is unplugged.
2. If the machine is connected to PC via a USB cable, make sure this cable is also unplugged.
3. Turn on the PC.
4. Plug in the machine’s power cord.

Model: Model HL-F1	Date: 24-Nov-10	No.:RH558004
--------------------	-----------------	--------------

5. Run “DPInst.exe”. When the following screen appears, click “Next” to proceed.



6. A WHQL alert message will appear three times. Click “Continue Anyway” to proceed.

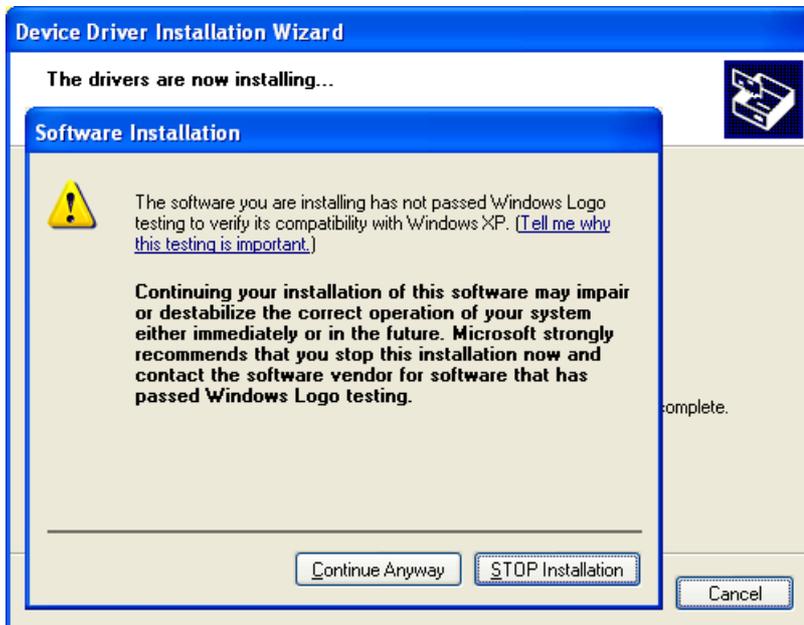


Model: Model HL-F1	Date: 24-Nov-10	No.:RH558004
--------------------	-----------------	--------------

7. If the device driver was successfully installed, the following dialog appears.
Note: The status of the three drivers will be displayed as "Ready to use".
8. Click "Finish".



9. Access "Maintenance Mode".
10. Connect the machine to your PC using a USB cable.
11. When the new hardware detection dialog appears, click "Next" to proceed.
12. When the following dialog appears, select "Install the software automatically (Recommended)", and then click "Next" to proceed.

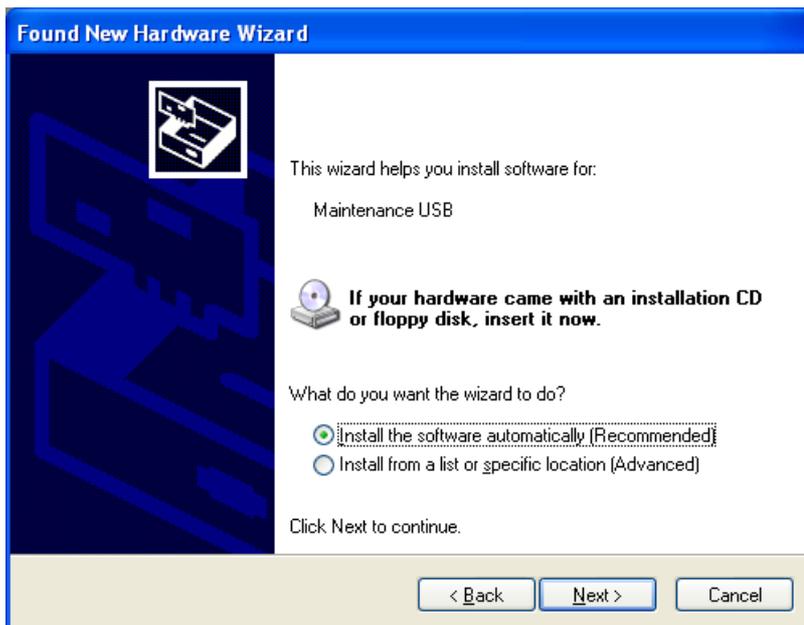


Model: Model HL-F1

Date: 24-Nov-10

No.:RH558004

13. When the WHQL alert message appears, click "Continue Anyway" to proceed.

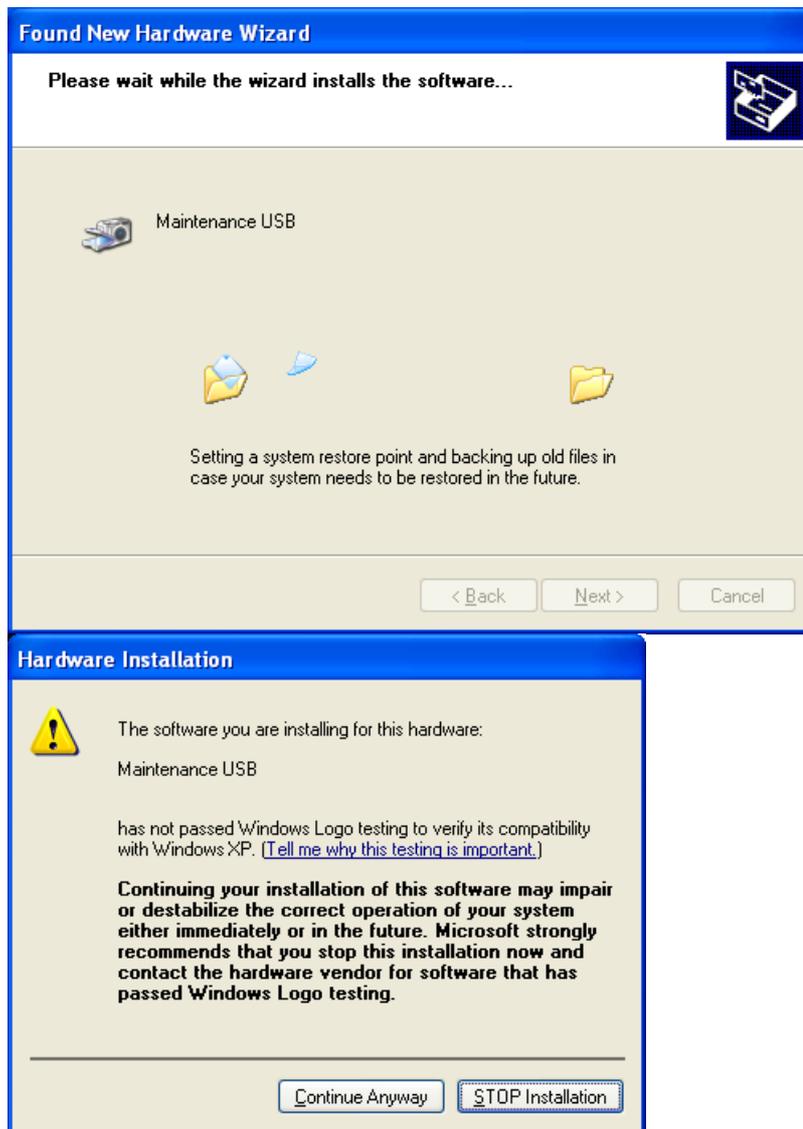

Model: Model HL-F1

Date: 24-Nov-10

No.:RH558004

14. If the Maintenance Printer Driver was successfully installed, the following dialog appears. Click "Finish".

15. Do Steps 9-11 for all three drivers.

16. Exit Maintenance Mode.



Model: Model HL-F1		Date: 6-Jan-11	No.: RH558005
Subject: Customizing Code List		Prepared by: I Soh	
From: 2nd Overseas Tech Support Sec. 2nd PQM Dept			
Classification:	<input type="checkbox"/> Troubleshooting	<input type="checkbox"/> Part information	<input type="checkbox"/> Action required
	<input type="checkbox"/> Mechanical	<input type="checkbox"/> Electrical	<input checked="" type="checkbox"/> Service manual revision
	<input type="checkbox"/> Paper path	<input type="checkbox"/> Transmit/receive	<input type="checkbox"/> Retrofit information
	<input type="checkbox"/> Other ()		<input checked="" type="checkbox"/> Tier2

Customizing Code List :

Detailed information for Customizing Codes. (See Field Service Manual page 159).


Product code	Factory default	Country	code
H558-11	0051	United States	8001
		Canada	0002
		Others	8060
H558-22	2054	UK	2004
		German	2003
		France	2005
		Italy	2016
		Spain	6015
		Netherlands	2009
		Belgium	6008
		Portugal	2018
		Switzerland	2010
		Sweden	2026
		Denmark	2013
		Norway	2007
		Finland	2012
		Hungary	3038
		Turkey	3025
		South Africa	2024
		Israel	3017
		General 1	2050
General 2	2070		
H558-25	2056	Australia	2006
		New Zealand	2027
H558-51	2090	Asia	2040
		Singapore	3040
		Others	2080
H558-21	3020	China	-

Model: HL-F1		Date: 5-Aug-15	No.: RH558006
Subject: Parts catalog revision - Drive Release Cam		Prepared by: Y Gaman	
From: 3rd Tech Service Sect., MFP/P Tech Service Dept.			
Classification:	<input type="checkbox"/> Troubleshooting	<input checked="" type="checkbox"/> Part information	<input type="checkbox"/> Action required
	<input type="checkbox"/> Mechanical	<input type="checkbox"/> Electrical	<input type="checkbox"/> Service manual revision
	<input type="checkbox"/> Paper path	<input type="checkbox"/> Transmit/receive	<input type="checkbox"/> Retrofit information
	<input type="checkbox"/> Product Safety	<input type="checkbox"/> Other ()	<input type="checkbox"/> Tier 2

Old part number	New part number	Description	Q'ty	Int	Page	Index	Note
H5581500	H5581665	MAIN FRAME L ASS'Y: LS3996001	1	O/O	17	1	
H5581518	H5581663	DRIVE RELEASE CAM: LU1327001	1	X/O	17	41	
-	H5581664	RUBBER SPACER:LU1323001	1	X/O	17	43	

Note: The cam and spacer must always be replaced as a set.

8. Drive and Frames (H558)

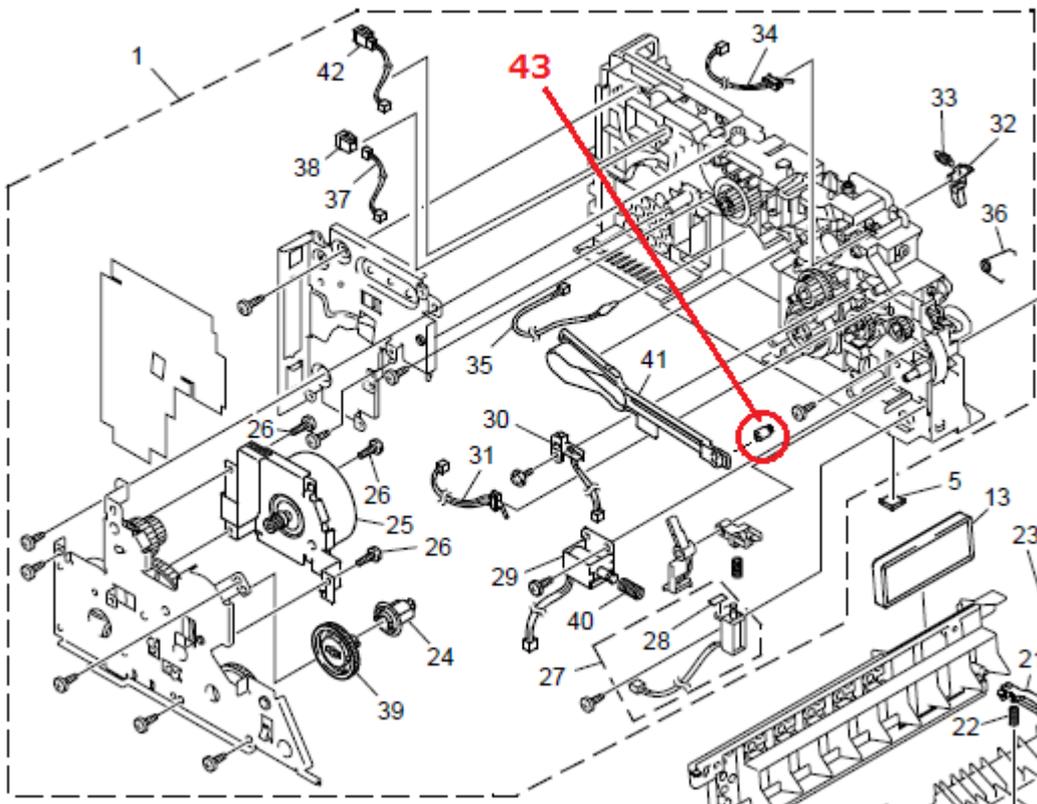



Model: HL-F1

Date: 5-Aug-15

No.: RH558006

Change:

The shape of the Drive Release Cam was changed and the Rubber Spacer was added.

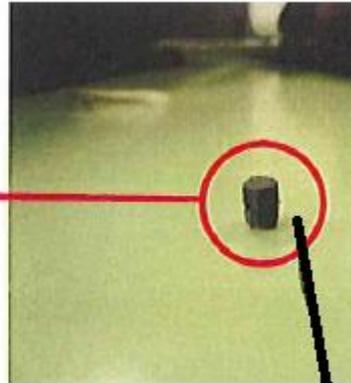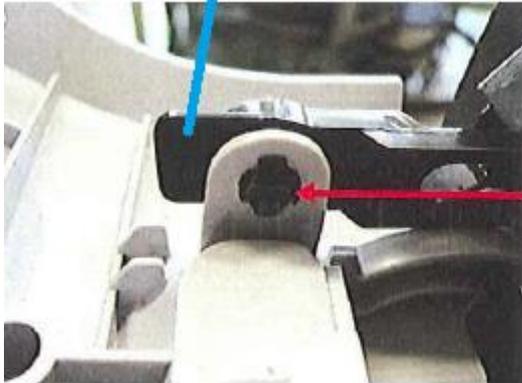DRIVE RELEASE CAM**RUBBER SPACER****Reason:**

To prevent the Drive Release Cam from detaching from the front cover.

