Model: S-C5 Fax connection unit Type C	Date: 21-Feb-13	No.: RD660001

Subject: Service Manual Revision_Installation Procedure_Fax Option Type C	Prepared by: M.Saiki
From: 2nd Tech Service Sect., MFP/P Tech Service Dept.	

Classification:	☐ Troubleshooting	☐ Part information	☐ Action required
	☐ Mechanical	☐ Electrical	☒ Service manual revision
	☐ Paper path	☐ Transmit/receive	☐ Retrofit information
	☐ Product Safety	☐ Other ( )	☐ Tier 2

Service Manual Revision

D660

Fax Connection Unit Type C (Remote Fax)

Installation Procedure

This unit allows a machine without the fax unit installed ("Client-side Machine") to send and receive faxes via a machine with the fax unit installed ("Remote Machine").

Requirements:
- Both the Client-side Machine and Remote Machine must have this unit, the Printer unit, and Scanner unit installed.
- Up to six machines can be registered as the Client-side Machines.
- Machines that have the fax unit installed **cannot** be used as the Client-side Machine.
- Only one machine can be registered as the Remote Machine.
- Firmware for this unit: "**aics**"（software number: **D6605780**）
- Remote Fax transmissions are possible on a G3 line.
- The remote fax function does not support User Code Authentication. Disable User Code Authentication on the Remote machine.
- Use this function to check the contents of a file that is stored in memory and not yet sent. Also, use this function to cancel a transmission from the Client-side Machine.
- To use this remote fax function, both the main machine and the sub-machines must have the **HDD option.**

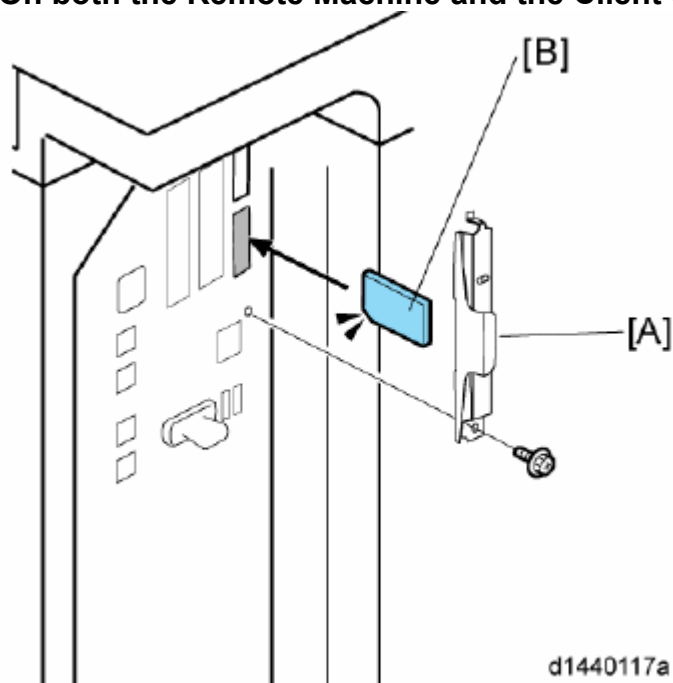| Model: S-C5 Fax connection unit Type C	Date: 21-Feb-13	No.: RD660001

CAUTION:

Before installing this option:

· Update the machine firmware to the following versions or newer.

Firmware	S/N	Suffix	Version
System/Copy	D1275780	K	3.12
Fax	D1275784	G	05.00.00
Remote Fax	D1275785	C	01.03.00
Scanner	D1275786	E	01.06
Web support	D1275787	F	1.05
WebUapl	D1275788	C	1.02
Network Support	D1275791	G	12.27
Network DocBox	D1275792	E	2.01
Printer	D1275793	F	1.06
PCL	D1275795	D	1.07
FCU	D6555570	G	05.00.00

1. Installing the application

On both the Remote Machine and the Client-side Machines:

d1440117a

1. Remove the SD-card slot cover [A] from the SD card slots (x 1)
2. Insert the SD card (**Fax Connection Unit Type C**) in SD slot 2 (lower) with its label face [B] towards the front of the machine. Then push it slowly into SD slot 2 (lower) until you hear a click.
3. Plug in, and then turn on the machine.

Model: S-C5 Fax connection unit Type C	Date: 21-Feb-13	No.: RD660001

4. Move the Fax Connection Unit Type C application from the SD card in SD slot 2 (lower) to the SD card in SD slot 1 (upper) with SP5-873-001.
5. Turn off the machine.
6. Remove the SD card from SD slot 2 (lower), and then keep it in a safe place.
7. Attach the SD-card slot cover, and then turn on the machine (1 screw)
8. Make sure that the machine can recognize the option (see 'Check All Connections' in the controller option section of the manual for the main frame)

2. Registering the Remote Machine

Note:
・ Only one machine can be registered as the Remote Machine.

On the Client-side Machine(s):
1. Press the [User Tools/Counter] key on the operation panel
2. Press [Administrator Tools].
3. Press [Program/Delete Device Certificate].
4. Enter the IP address or host name of the Remote Machine and press [Set].
5. Press [Exit] to exit from the set-up procedure.

3. Registering the Client-side Machine(s)

Note:
・Up to six machines can be registered as the Client-side Machines.

On the Remote Machine:
1. Press the [User Tools/Counter] key on the operation panel
2. Press [Administrator Tools].
3. Press [Program/Delete Device Certificate].
4. Enter the IP address or host name of the Client-side Machines and press [Set].

4. Configuring the Remote Reception Settings

Do the following procedure to enable the Client-side Machine(s) to receive faxes via the Remote Machine. You can forward or route received documents per line or special sender or box.

Note:
・   By performing procedures #1-3 above, the Client-side Machines can **send** faxes via the Remote Machine. The procedures shown below are necessary to enable the Client-side Machines to **receive** faxes.

On the Remote Machine:
1) If you use "Remote Reception Setting per Line"
1. Press [Facsimile Features.
2. Press [Remote Reception Setting per Line] in [Reception Settings].

3. Enter an IP address or a host name of the client-side machine to connect.
4. Press [Set], and [Exit] to exit from the setting.

2) If you use "Remote Reception per Sender"
1. Press [Facsimile Features].
2. Press [Program Special Sender] in [Reception Settings].
3. Select the Special Sender.
4. Press [Remote Reception Setting per Sender].
5. Press [On] and [Remote Machine].
6. Enter an IP address or a host name of the client-side machine to connect.
7. Press [OK] to exit from the setting.

3) If you use "Remote Reception per Box"
1. Press [Facsimile Features].
2. Press [Box Setting] in [General Settings].
3. Select the box.
4. Press [Personal Box].
5. Enter a dial-in number.
6. Press [Remote Machine].
7. Enter an IP address or a host name of the client-side machine to connect.
8. Press [OK] to exit from the set-up procedure.

5. Remote Fax Icon Addition

This procedure allows the remote fax icon to appear on the home screen of the operation panel.

On both the Remote Machine and the Client-side Machines:
1. Press [User Tools].
2. Press [Edit Home].
3. Press [Add Icon].
4. Press [Remote Fax].
5. Press a [Blank] to set a location for the remote fax icon.
6. Press [Exit] to exit from the set-up procedure.