

警告

・本製品に使用しているポリ袋・手袋などを乳幼児の近くに放置しないでください。口や鼻をふさぎ、窒息する恐れがあります。

注意

・子供の手の届かない所に保管してください。
 ・インクが衣服や周囲のものに付着すると落ちにくい場合があります。インク回収ユニットを交換するときは、インクで衣服や周囲のものを汚さないようご注意ください。
 ・インクが眼に入った場合、速やかに流水で洗い、異常のあるときは医師にご相談ください。
 ・インクを飲み込んだ場合、濃い食塩水を飲ませるなどして吐き出させ、医師にご相談ください。
 ・インクが皮膚についた場合は、すぐに水または石鹸水で洗い流してください。

長期間使用していない廃インクボックスは使用しないでください。

廃インクボックスのチップ部分には触れないでください。


お使いの機種によっては、イラストが異なる場合があります。

操作部に次のメッセージが表示されたときは、廃インクボックスを交換してください。次のメッセージは、廃インクボックスが満杯の時に表示されます。

インクボックスが満杯です
 マンパインナリマシタ

インクボックスが満杯です
 コウカンシテマシタサイ


- 箱の中に入っている新しい廃インクボックスを取り出します。
- 右前カバーのくぼんでいる箇所を押して (①) 開けます (②)。

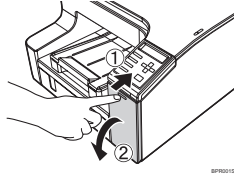

- 5秒以上待ってから、プリンター本体内部から、満杯になった廃インクボックスを取り出します。

重要

□ 廃インクボックスを落とさないようにしてください。

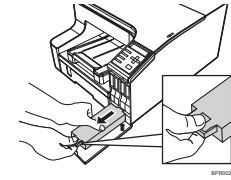


補足

□ 「PUSH」部分を押しながら、水平にして手前に引き出してください。


- 使用済みの廃インクボックスを、同梱されているビニール袋に入れます。

重要

□ 同梱されているビニール袋に入れる際に入れた後は、廃インクボックスを落とさないようにしてください。ビニール袋が破れ、インク漏れの原因となります。

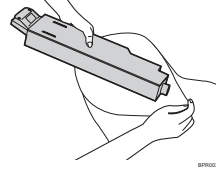


- 新しい廃インクボックスを差し込みます。

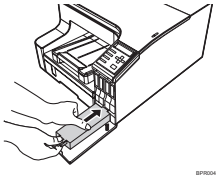

- 廃インクボックスを本体内部にカチッと音がして止まるところまでゆっくと差し込みます。

重要

□ 廃インクボックスはしっかりと奥まで押し込んでセットしてください。プリンター内部に液体が漏れる原因となります。

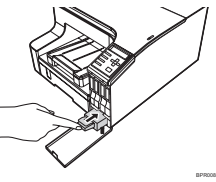

- 右前カバーのくぼんでいる箇所を押して閉じます。右前カバーが閉じていることを確認してください。

補足

□ ご使用後は、配送担当者、ご購入先または保守担当者に連絡の上、使用済み廃インクボックスをお渡しください。

Replacing the Ink Collector Unit GX e3300/e5500

WARNING:

・ Keep the polythene materials (bags, gloves, etc.) supplied with this machine away from babies and small children at all times. Suffocation can result if polythene materials are brought into contact with the mouth or nose.

CAUTION:

・ Keep the ink collector unit out of reach of children.
 ・ When replacing the ink collector unit, be careful not to spill ink on your clothes or nearby objects. Ink stains can be hard to remove.
 ・ If ink comes into contact with your eyes, rinse immediately in running water. For other symptoms, consult a doctor.
 ・ If ink is ingested, induce vomiting by drinking a strong saline solution. Consult a doctor immediately.
 ・ If your skin comes into contact with ink, wash the affected area thoroughly with soap and water.

Do not use an ink collector unit that has not been used for a long time.

Do not touch the ink collector unit' chip contacts.


The illustrations shown here might not match your model exactly.

Replace the ink collector unit when the following message appears on the control panel:
 The following message appears when the ink collector unit is full.

Ink Collector Unit is full

Replace Ink Collector Unit


- Take the new ink collector unit out of the box.
- While pressing the recessed part (①) of the right front cover, open the cover (②).

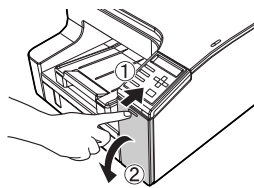

- Wait at least five seconds, and then remove the full ink collector unit from the printer.

Important

□ Take care not to drop the ink collector unit.

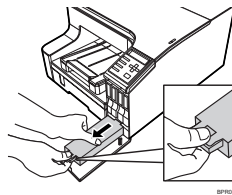


Note

□ When pulling the unit out, keep the unit level and press on the area marked "Push".


- Put the Ink collector unit in the supplied plastic bag.

Important

□ Take care not to drop the ink collector unit when putting it in the supplied plastic bag. The bag might tear, causing ink to spill.

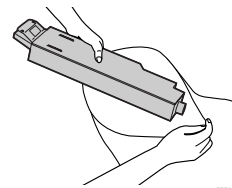


- Insert the new ink collector unit.

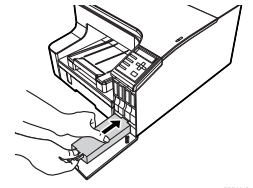

- Slide the ink collector unit carefully into the printer, until you hear it click.

Important

□ Make sure the ink collector unit is fully inserted. If it is not, ink will leak inside the printer.

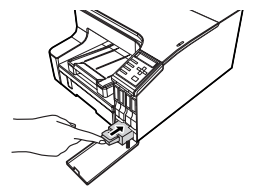

- Close the right front cover.

CE Marking Traceability Information (For EU Countries Only.)

Manufacturer:
 Ricoh Co., Ltd.
 3-6 Nakamagome 1-chome,
 Ohta-ku, Tokyo, 143-8555 Japan

Authorized representative:
 Ricoh Europe PLC
 66 Chiltern Street London W1U
 4AG U.K.