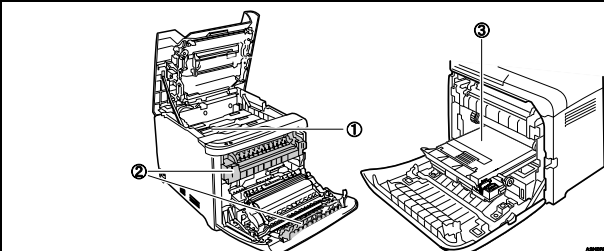# Notes for Users

These notes provide additional information on using this product, and errata for the descriptions in *Operating Instructions Hardware Guide* and *Safety Information*.

Operating Instructions Hardware Guide
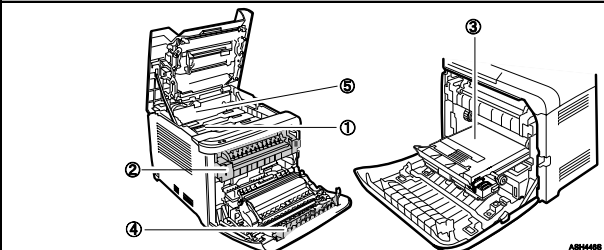*Safety Information*

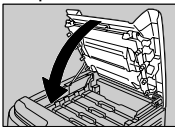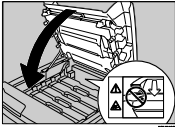| Positions of WARNING and CAUTION labels |
|---|
| **Errors** |
| |
| ② ⚠⚠🚫 Do not touch labelled gray areas. The areas can get very hot. |
| **Correction** |
| |
| ② ⚠⚠🚫 Do not touch labelled gray areas. The areas can get very hot. |
| ④ ⚠⚠➡ Do not touch labelled gray areas. The areas can get very hot. |
| ⑤ ⚠🚫 Be careful not to trap your fingers when opening or closing the top cover. |

2. Installing the Printer and Options > Installing the Printer > Unpacking

8. Removing Misfed Paper > When Paper is Jammed > When Paper Jams inside the Fusing Unit

9. Appendix > If the Printer is Not Going to Be Used for a Long Time > Preparing the Printer For a Long Period of Inactivity

9. Appendix > If the Printer is Not Going to Be Used for a Long Time > Using the Printer Again after it has been Inactive for a Long Period

Errors

Carefully lift the blue fusing unit levers.

Correction

The procedure above is not necessary.

---

2. Installing the Printer and Options > Installing the Printer > Unpacking

5. Replacing Consumables > Replacing the Print Cartridge

6. Cleaning the Printer > Cleaning the Toner Density Sensor > Preparing the Printer For a Long Period of Inactivity

Errors

Close the top cover with both hands carefully.

Correction

Close the top cover with both hands carefully. Be careful not to trap your fingers.

G1657510