


APPENDIX

DOCUMENT FEEDER HANDLE TYPE 5 INSTALLATION

ACCESSORY CHECK LIST

Check the quantity and condition of the accessories against the following list.

No.	Description	Parts No.	Q'ty
1	Handle Unit	B8621100	1
2	Holder	B8621300	1
3	Stud Bracket	B8621181	1
4	Securing Bracket	B8621186	1
5	Handle Bracket	B8621211	1
6	Hinge Stopper - Right	B8621242	1
7	Hinge Stopper - Left	B8621241	1
8	Spacer	AA132208A	1
9	Bushing - M6	07413906	1
10	Bushing - 6MM	50530447	1
11	Tapping Screw - M4 x 8	04514008N	4
12	Tapping Screw - M3 x 12	04503012N	2
13	Tapping Screw (Self Binding) - M3 x 12	04523012N	2
14	Screw - M3 x 8	03603008N	3
15	Operation Decal	B8626013	1
16	Stud Decal	B8626012	1

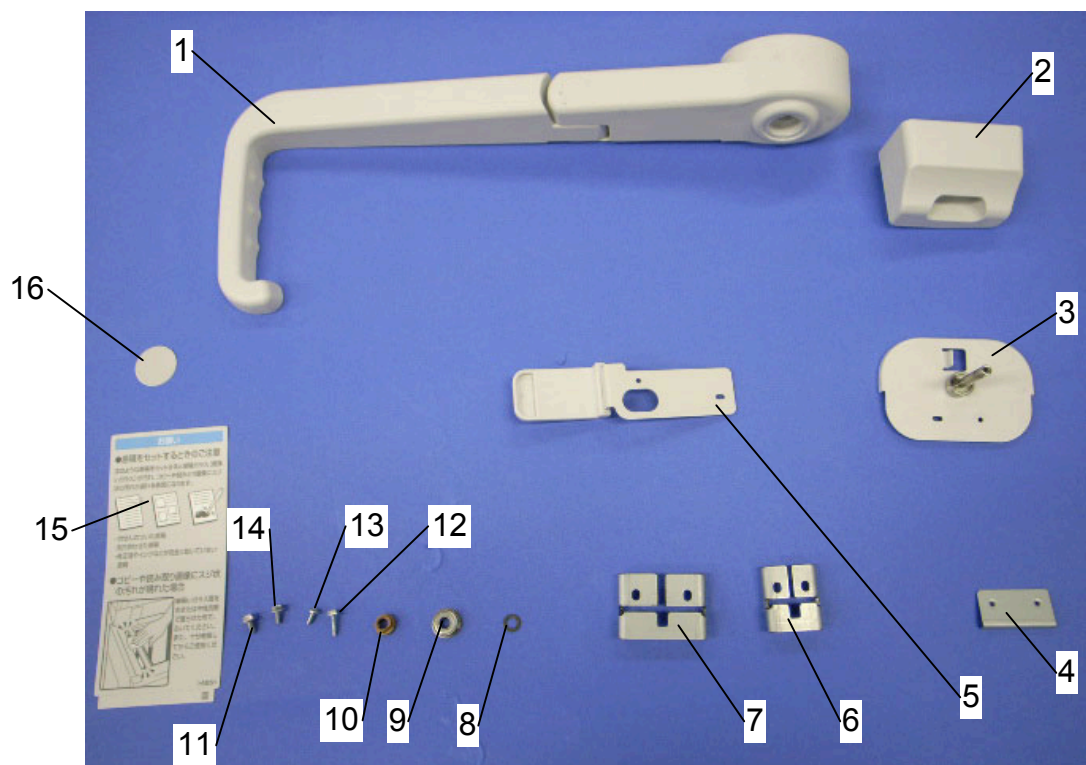

B8621516.JPG

INSTALLATION PROCEDURE


NOTE: This installation procedure uses the following symbols.

: Screws

CAUTION


Turn off the main switch of the copier and unplug the power cord before you start the installation procedure.


1. Open the ADF unit.

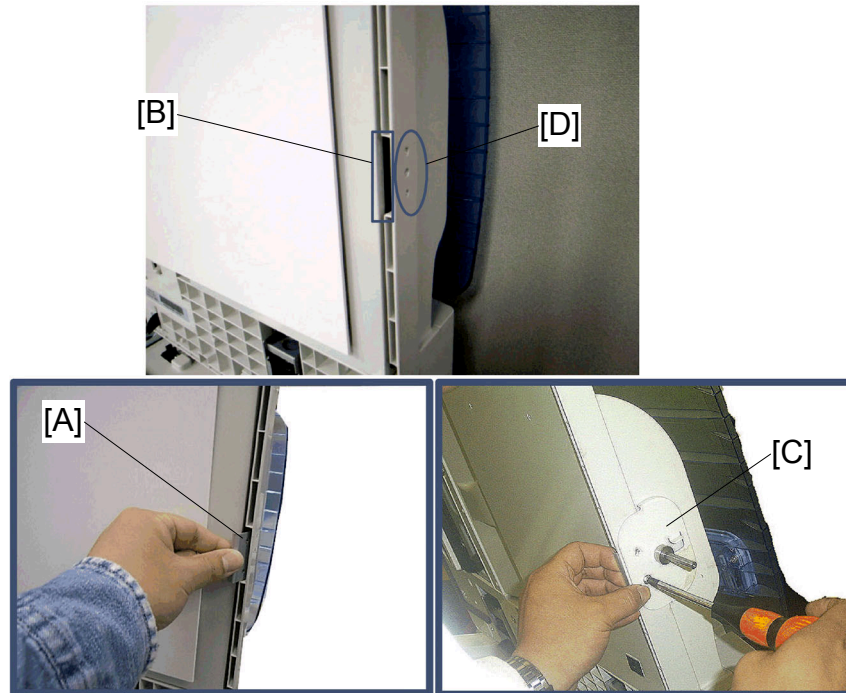


b862i501

B862i501.PNG


2. Hold the securing bracket [A] at the location [B], inside the ADF cover.
3. Secure the stud bracket [C] to the outside of the ADF cover at location [D] with two screws (M3x8:  x 2). The two screws must go through the ADF cover and the securing bracket [A].
4. Make two screw holes [E] in the scanner right cover with an M3x12 tapping screw from the accessories.

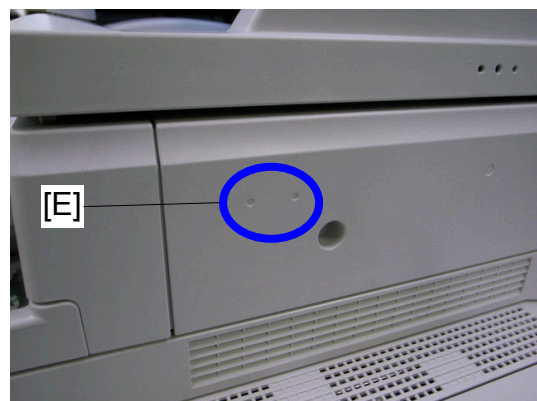

B862i515.JPG


5. Attach the holder [A] to the scanner right cover (Tapping Screw - M3x12:  x 2).

NOTE: At first, secure the screw at the rear side (away from the operation panel) temporarily and then at the front side temporarily. After that, secure them fully.

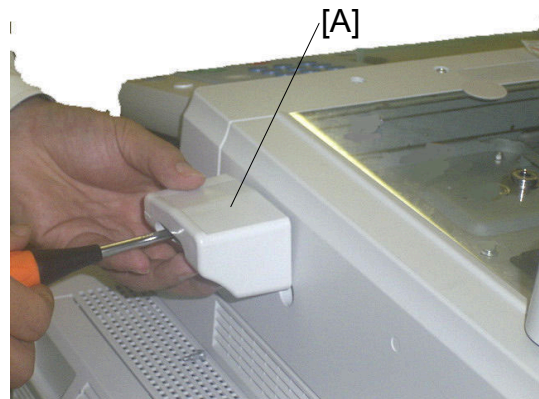

B862I509.JPG


6. Install the bushing - 6MM [B] in the inside of the handle unit.

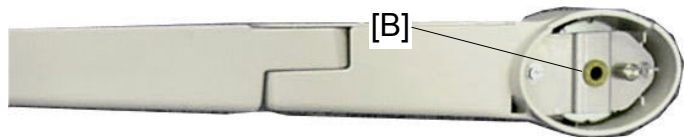


B862I513.JPG

7. Install the handle unit on the stud bracket.

8. Install the bushing - M6 [C] first, and then the spacer [D] in the outside of the handle unit.

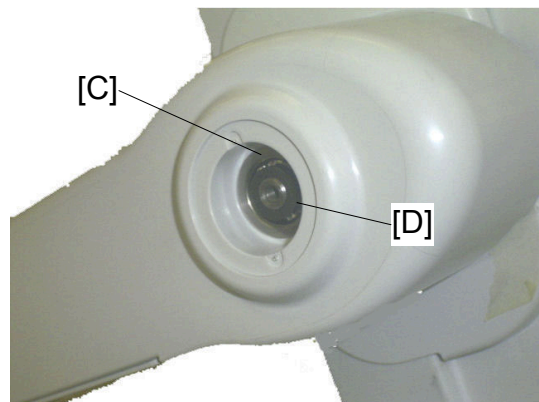


B862I510.JPG

9. Secure the handle unit with a screw (M3x8:  x 1).




B862I514.JPG

10. Clean the handle unit with alcohol.
Then attach the stud decal [A] at the
location that was cleaned.

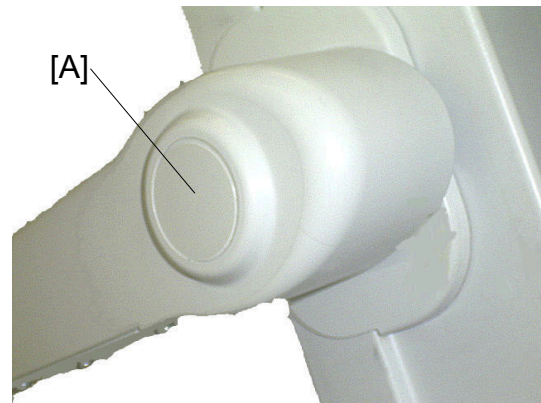

B862I511.JPG

11. Attach the handle bracket at the front
right side on the bottom of the ADF unit
(Tapping Screw [Self Binding] - M3x12:
🔩 x 2).
12. Close the ADF unit.

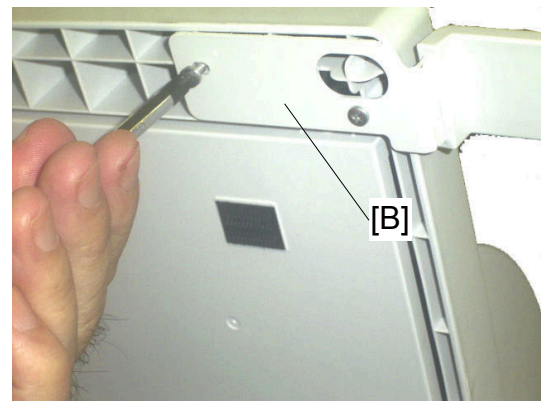


B862I503.JPG

13. Attach the hinge stoppers (left [C] and
right [D]) to the left and right hinges
(Tapping screw - M4x8: 🔩 x 2 each).



B862I504.JPG

14. Clean the front side of the duplex unit with alcohol. Then attach the operation decal [A] at the location that was cleaned.

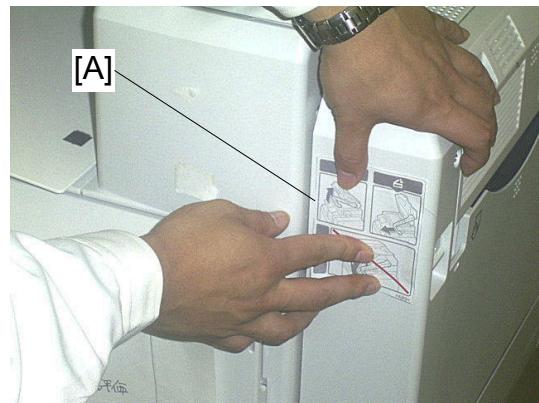

B862I505.JPG

15. Check the operation of the handle unit [B].



B862I506.JPG