

Model K-C3.5
(B268/B269)
PARTS CATALOG

First edition, February 2011

Ricoh Company, LTD.

Model K-C3.5 (B268/B269)

PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

Model K-C3.5	(B268/B269)
DF2000	(B813)
DF2010	(B814)
Platen Cover Type 1080	(B406)
PS460	(B385)
PS450	(B384)
PT340	(B621)
DDST Unit Type A/B	(B865/B866)

Model K-C3.5 (B268/B269)

Model K-C3.5 (B268/B269)


PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

.LOCATION OF UNIT.....	2	18.PAPER EXIT SECTION (B268/B269)	42
1.EXTERIOR 1 (B268).....	8	19.DUPLEX UNIT 1 (B268/B269).....	44
2.EXTERIOR 2 (B269).....	10	20.DUPLEX UNIT 2 (B268/B269).....	46
3.OPERATION PANEL (B268/B269)	12	21.DUPLEX UNIT 3 (B268/B269).....	48
4.OPTICS SECTION 1 (B268/B269)	14	22.DRIVE SECTION (B268/B269).....	50
5.OPTICS SECTION 2 (B268/B269)	16	23.ELECTRICAL SECTION 1 (B268/B269)	52
6.OPTICS SECTION 3 (B268/B269)	18	24.ELECTRICAL SECTION 2 (B268/B269)	54
7.LASER UNIT (B268/B269)	20	25.FRAME SECTION 1 (B268/B269)	56
8.BY-PASS FEED SECTION (B268/B269)	22	26.FRAME SECTION 2 (B268/B269)	58
9.PAPER CASSETTE (B268/B269)	24	27.GDI UNIT (B268/B269)	60
10.PAPER RESISTRATION (B268/B269).....	26	28.DECAL AND DOCUMENT (B268/B269)	62
11.1ST PAPER FEED SECTION (B268/B269)	28	29.SPECIAL TOOLS (B268/B269)	64
12.2ND PAPER FEED SECTION (B268/B269)	30	PARTS INDEX.....	6
13.VERTICAL TRANSPORT (B268/B269).....	32		
14.PCU 1 (B268/B269)	34		
15.PCU 2 (B268/B269)	36		
16.TONER SUPPLY UNIT (B268/B269)	38		
17.FUSING UNIT (B268/B269)	40		


LOCATIONS OF UNITS

1. EXTERIOR 1 (B268)

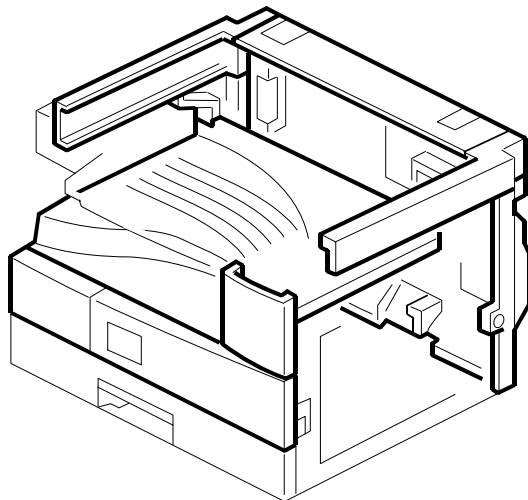


See Page 9

2. EXTERIOR 2 (B269)

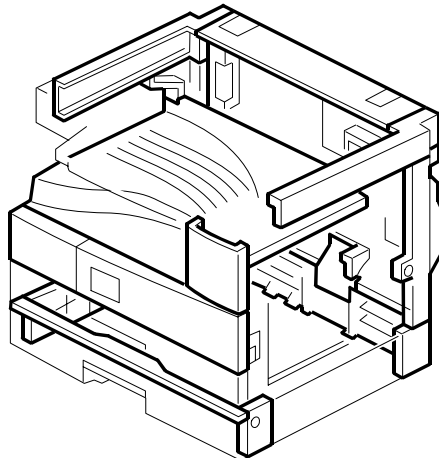


See Page 11

3. OPERATION PANEL (B268/B269)

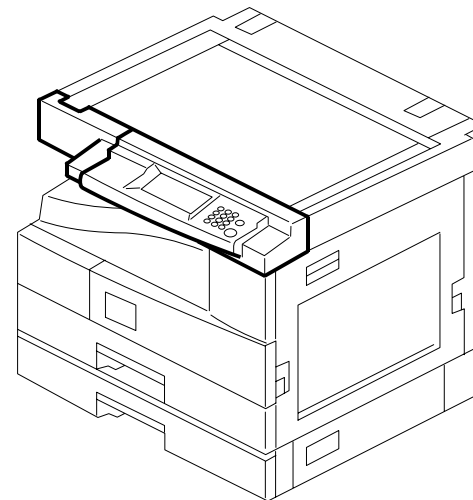


See Page 13

4. OPTICS SECTION 1 (B268/B269)

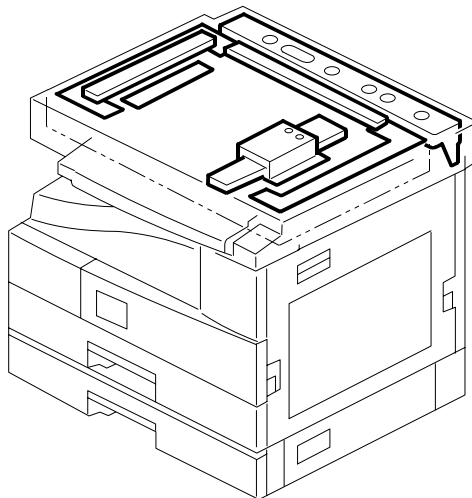


See Page 15

5. OPTICS SECTION 2 (B268/B269)

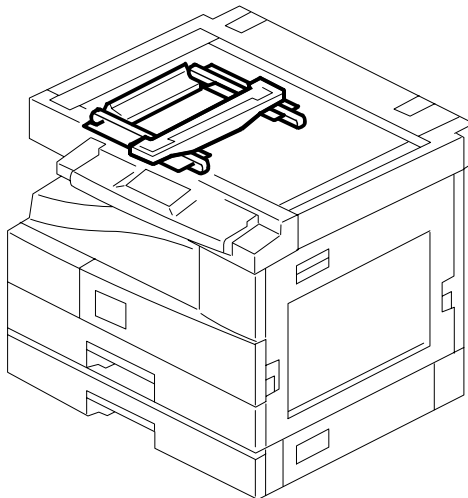

See Page 17


6. OPTICS SECTION 3 (B268/B269)

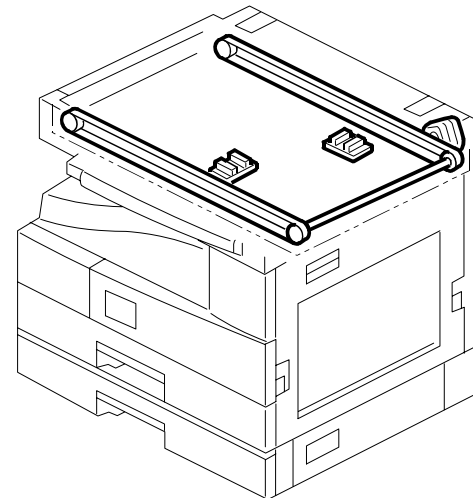

See Page 19


LOCATIONS OF UNITS

7. LASER UNIT (B268/B269)

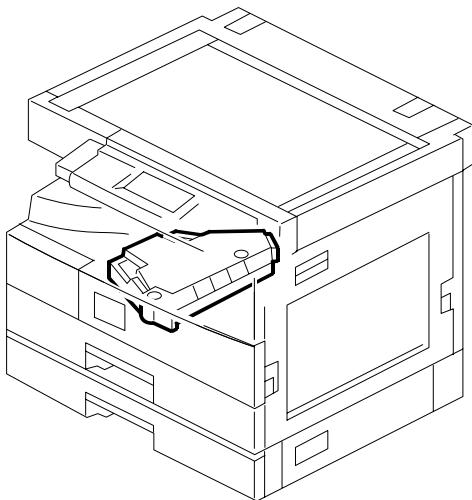


See Page 21

8. BY-PASS FEED SECTION (B268/B269)

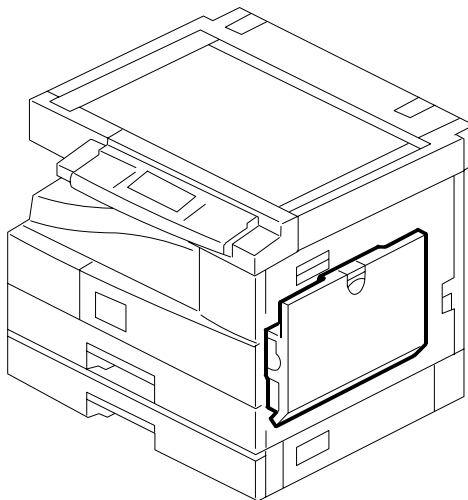


See Page 23

9. PAPER CASSETTE (B268/B269)

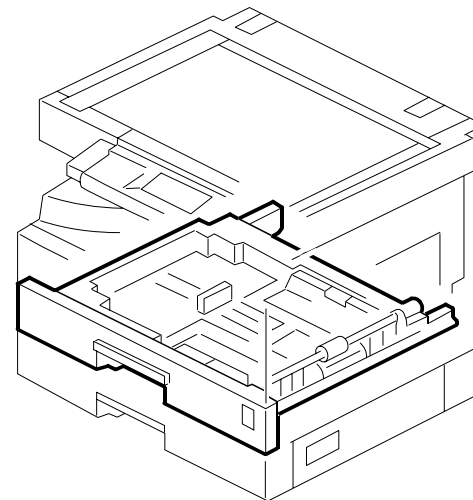


See Page 25

10. PAPER REGISTRATION (B268/B269)

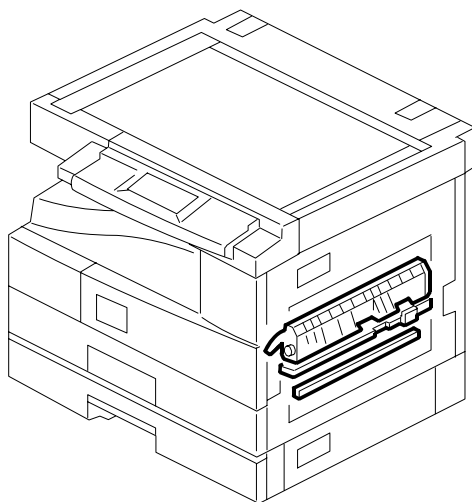


See Page 27

11. 1ST PAPER FEED SECTION (B268/B269)

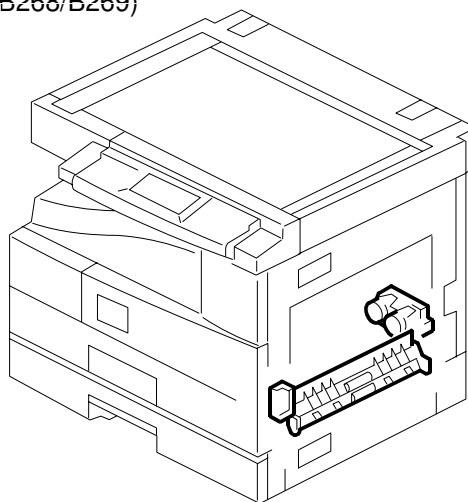

See Page 29


12. 2ND PAPER FEED SECTION (B268/B269)

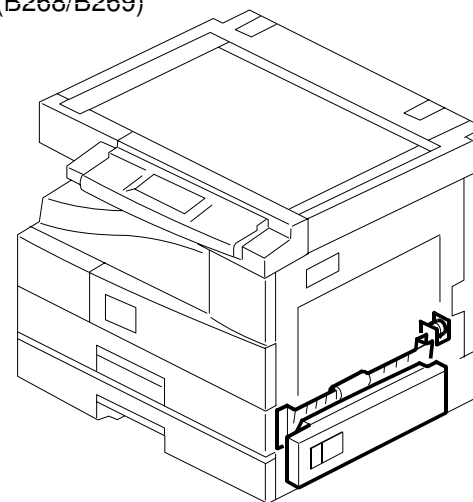

See Page 31


LOCATIONS OF UNITS

13. VERTICAL TRANSPORT (B268/B269)

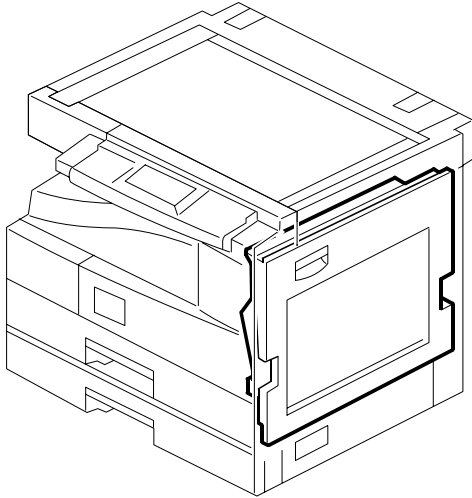


See Page 33

14. PCU 1 (B268/B269)

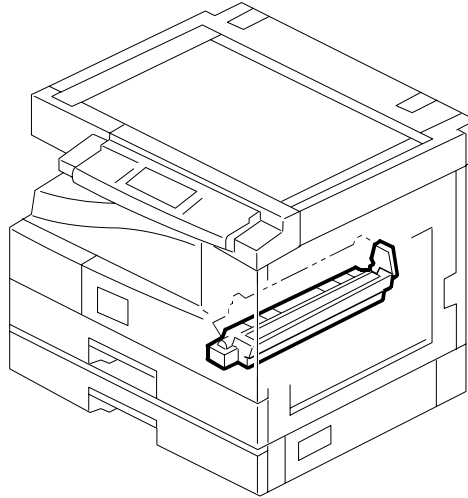


See Page 35

15. PCU 2 (B268/B269)

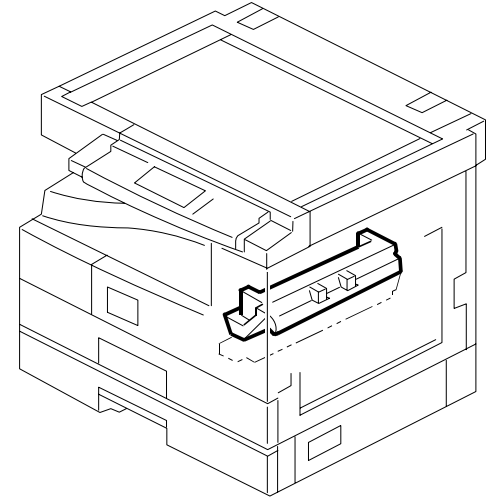


See Page 37

16. TONER SUPPLY UNIT (B268/B269)

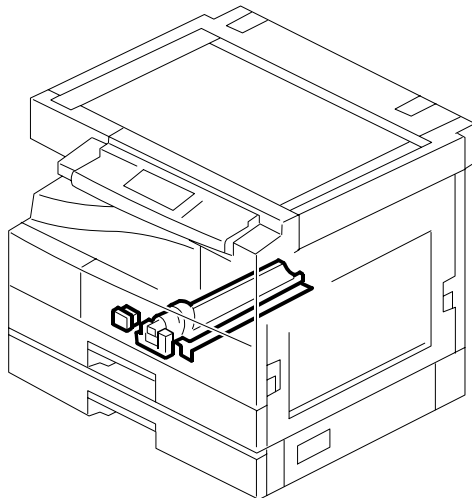


See Page 39

17. FUSING UNIT (B268/B269)

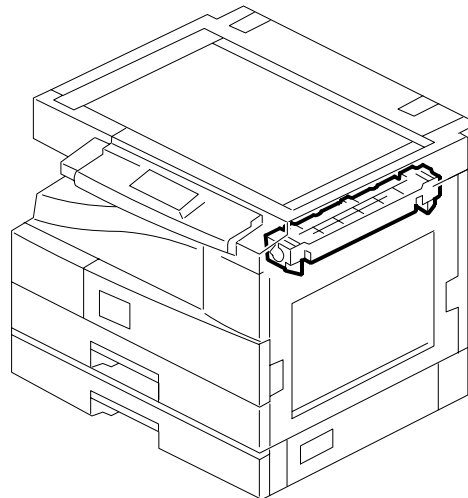

See Page 41


18. PAPER EXIT SECTION (B268/B269)

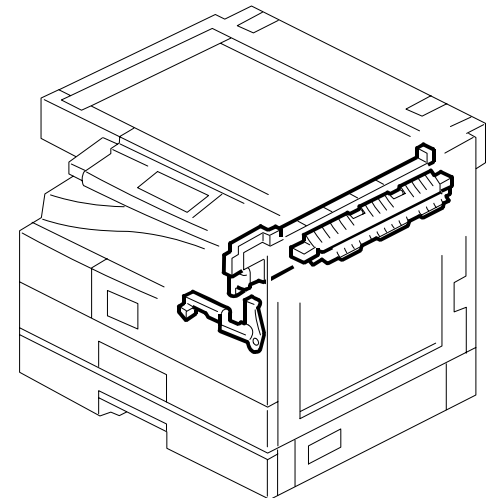

See Page 43


LOCATIONS OF UNITS

19. DUPLEX UNIT 1 (B269)

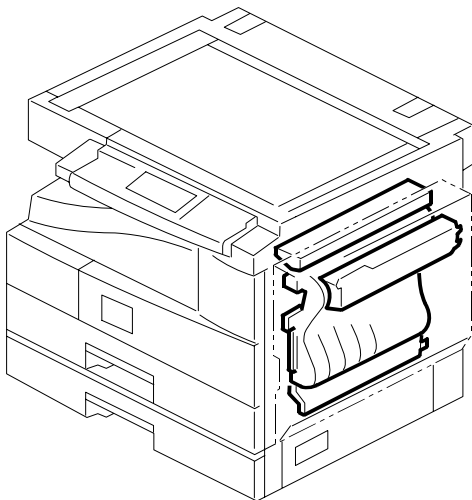


See Page 45

20. DUPLEX UNIT 2 (B269)

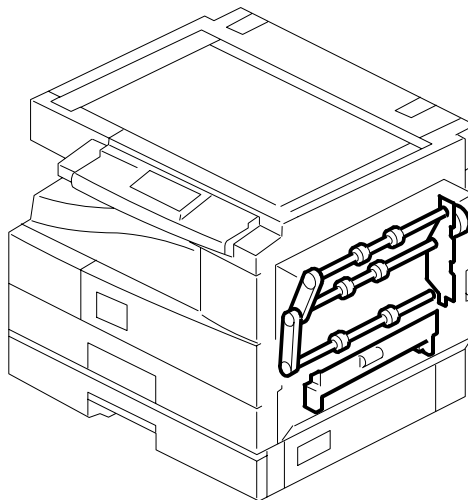


See Page 47

21. DUPLEX UNIT 3 (B269)

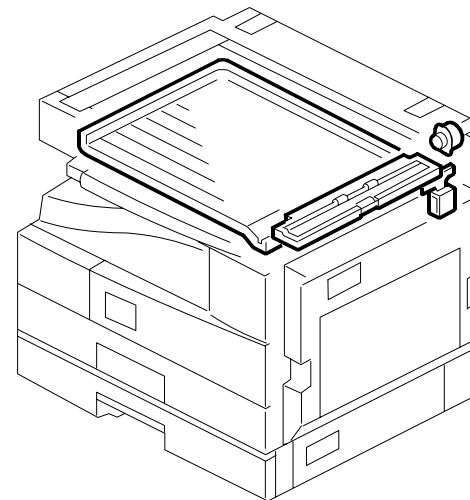


See Page 49

22. DRIVE SECTION (B268/B269)

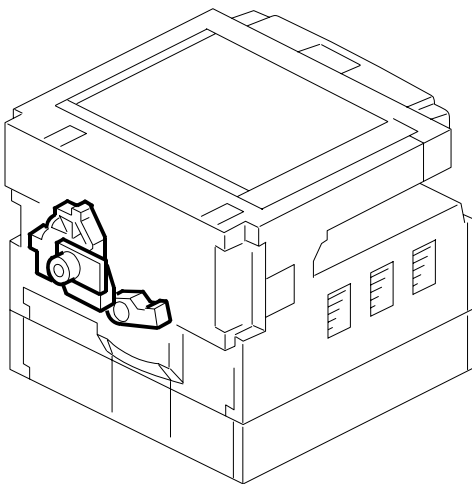


See Page 51

23. ELECTRICAL SECTION 1 (B268/B269)

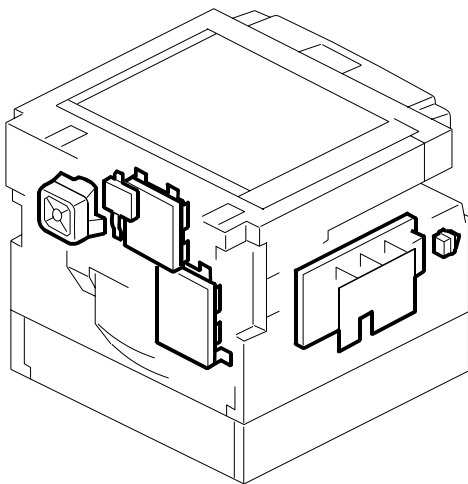

See Page 53


24. ELECTRICAL SECTION 2 (B268/B269)

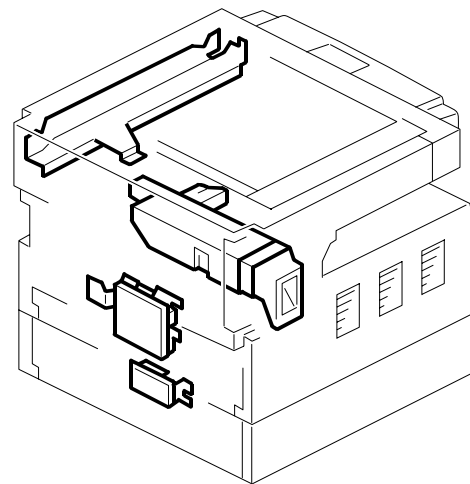

See Page 55


LOCATIONS OF UNITS

25. FRAME SECTION 1 (B268/B269)

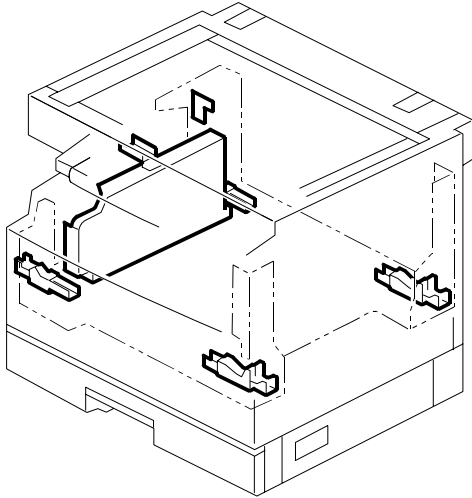


See Page 57

26. FRAME SECTION 2 (B268/B269)

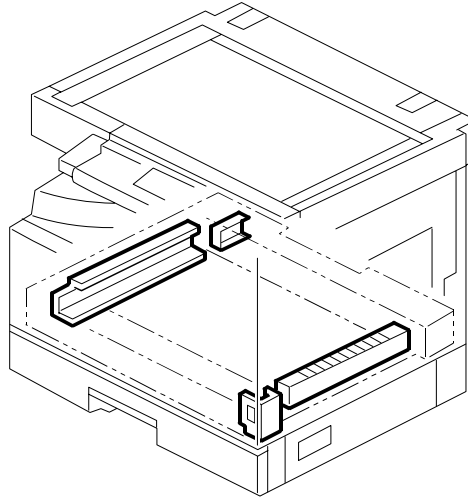

See Page 59

1.EXTERIOR 1 (B268)

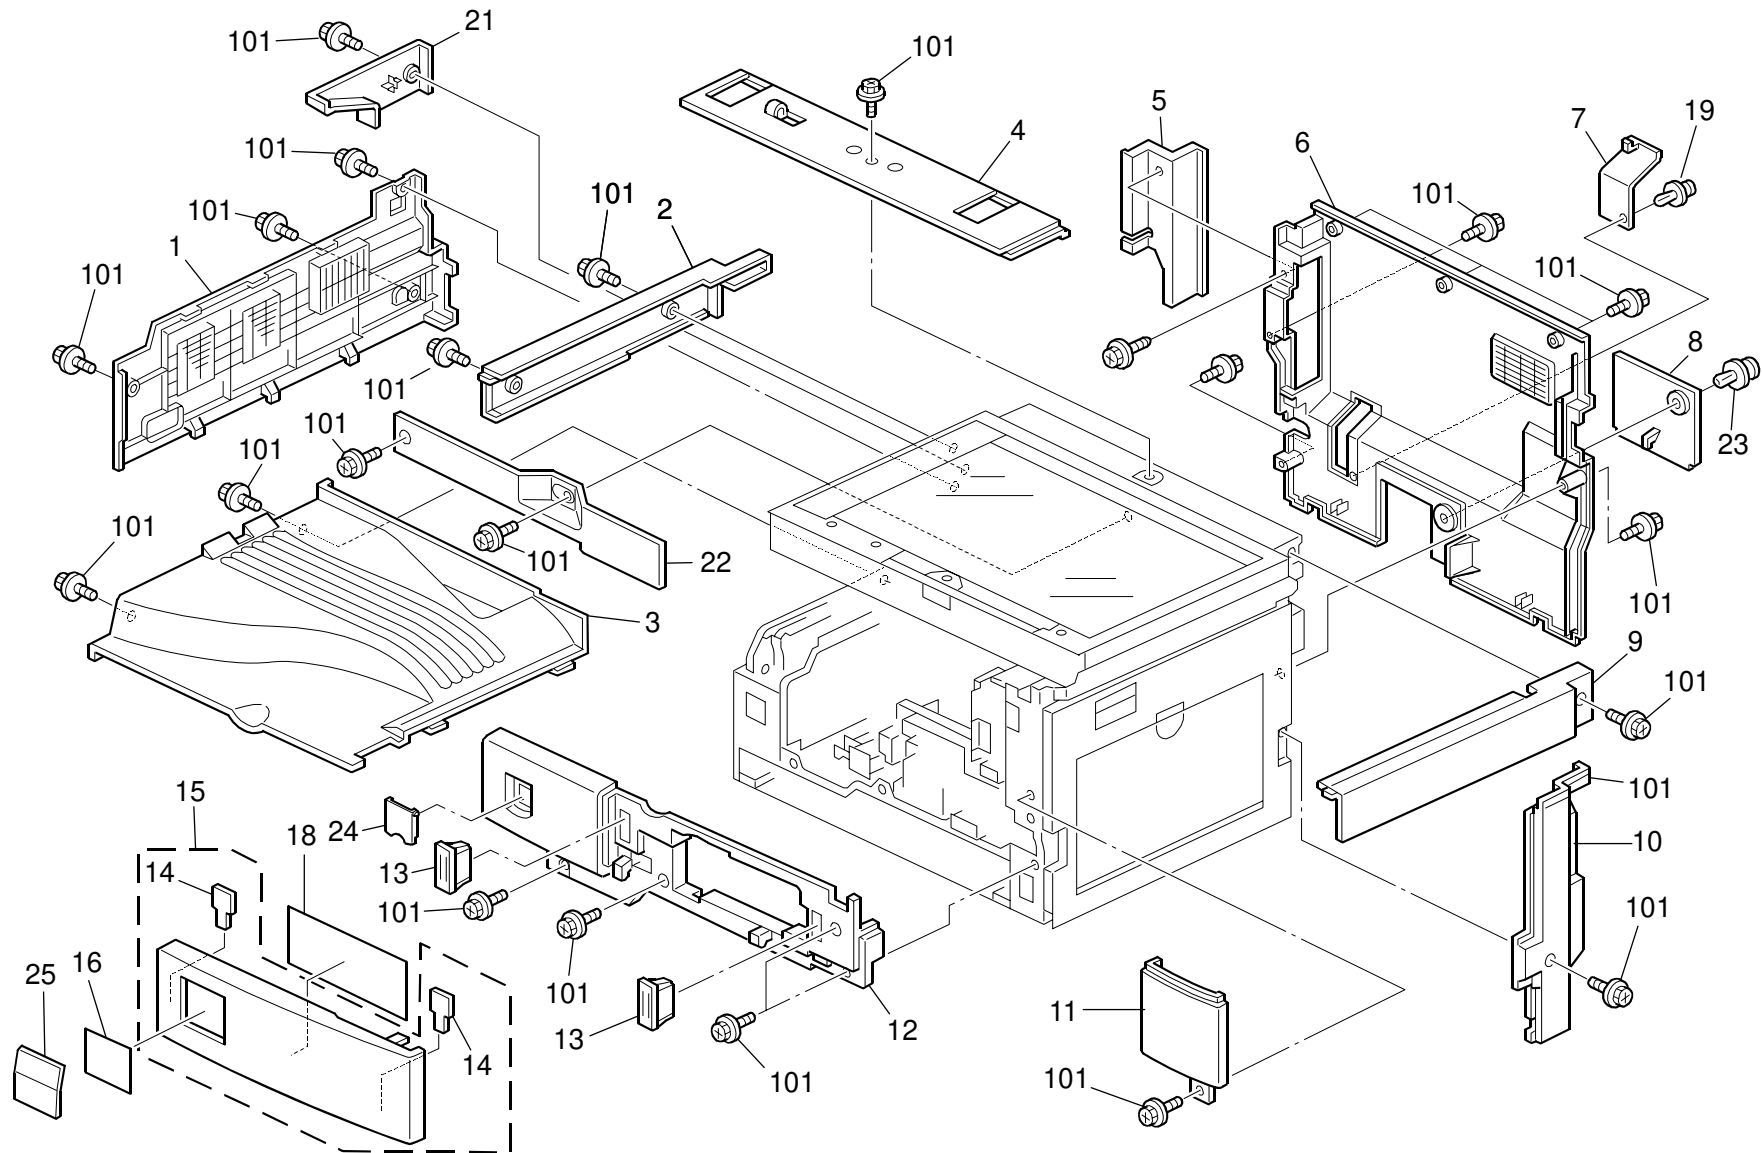


1.EXTERIOR 1 (B268)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B121 1315	Left Cover EU	1
2	B039 1302	Left Scanner Cover	1
3	B121 1353	Exit Cover EU	1
4	B039 1303	Rear Scanner Cover	1
5	B121 1314	Application Cap	1
6	B121 1336	Rear Cover B EU	1
7	B121 1313	IC Card Cap	1
8	B121 1348	Paper Bank Cap	1
9	B039 1304	Right Scanner Cover	1
10	B039 1317	Rear Cover	1
11	B039 1309	Front Right Upper Cover	1
12	B243 1350	Cover - Front EU	1
13	B259 1367	Cover Magnet	1
14	B039 1361	Magnet Catch	2
15	B243 1253	Door - Front EU	1
18	B039 1365	Sheet - Operation Instructions	1
19	B039 1367	Rivet - M6	2
20	B039 1364	Rivet - M7	1
21	B121 1322	Left Upper Cover B	1
22	B121 1367	Rear Exit Cover B EU	1
24	B039 1362	Main Switch Cover	1
25	B132 1531	Panel:Logo	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3008N	Tapping Screw - M3x8	
102	0450 3008N	Tapping Screw - M3x8	

2.EXTERIOR 2 (B269)

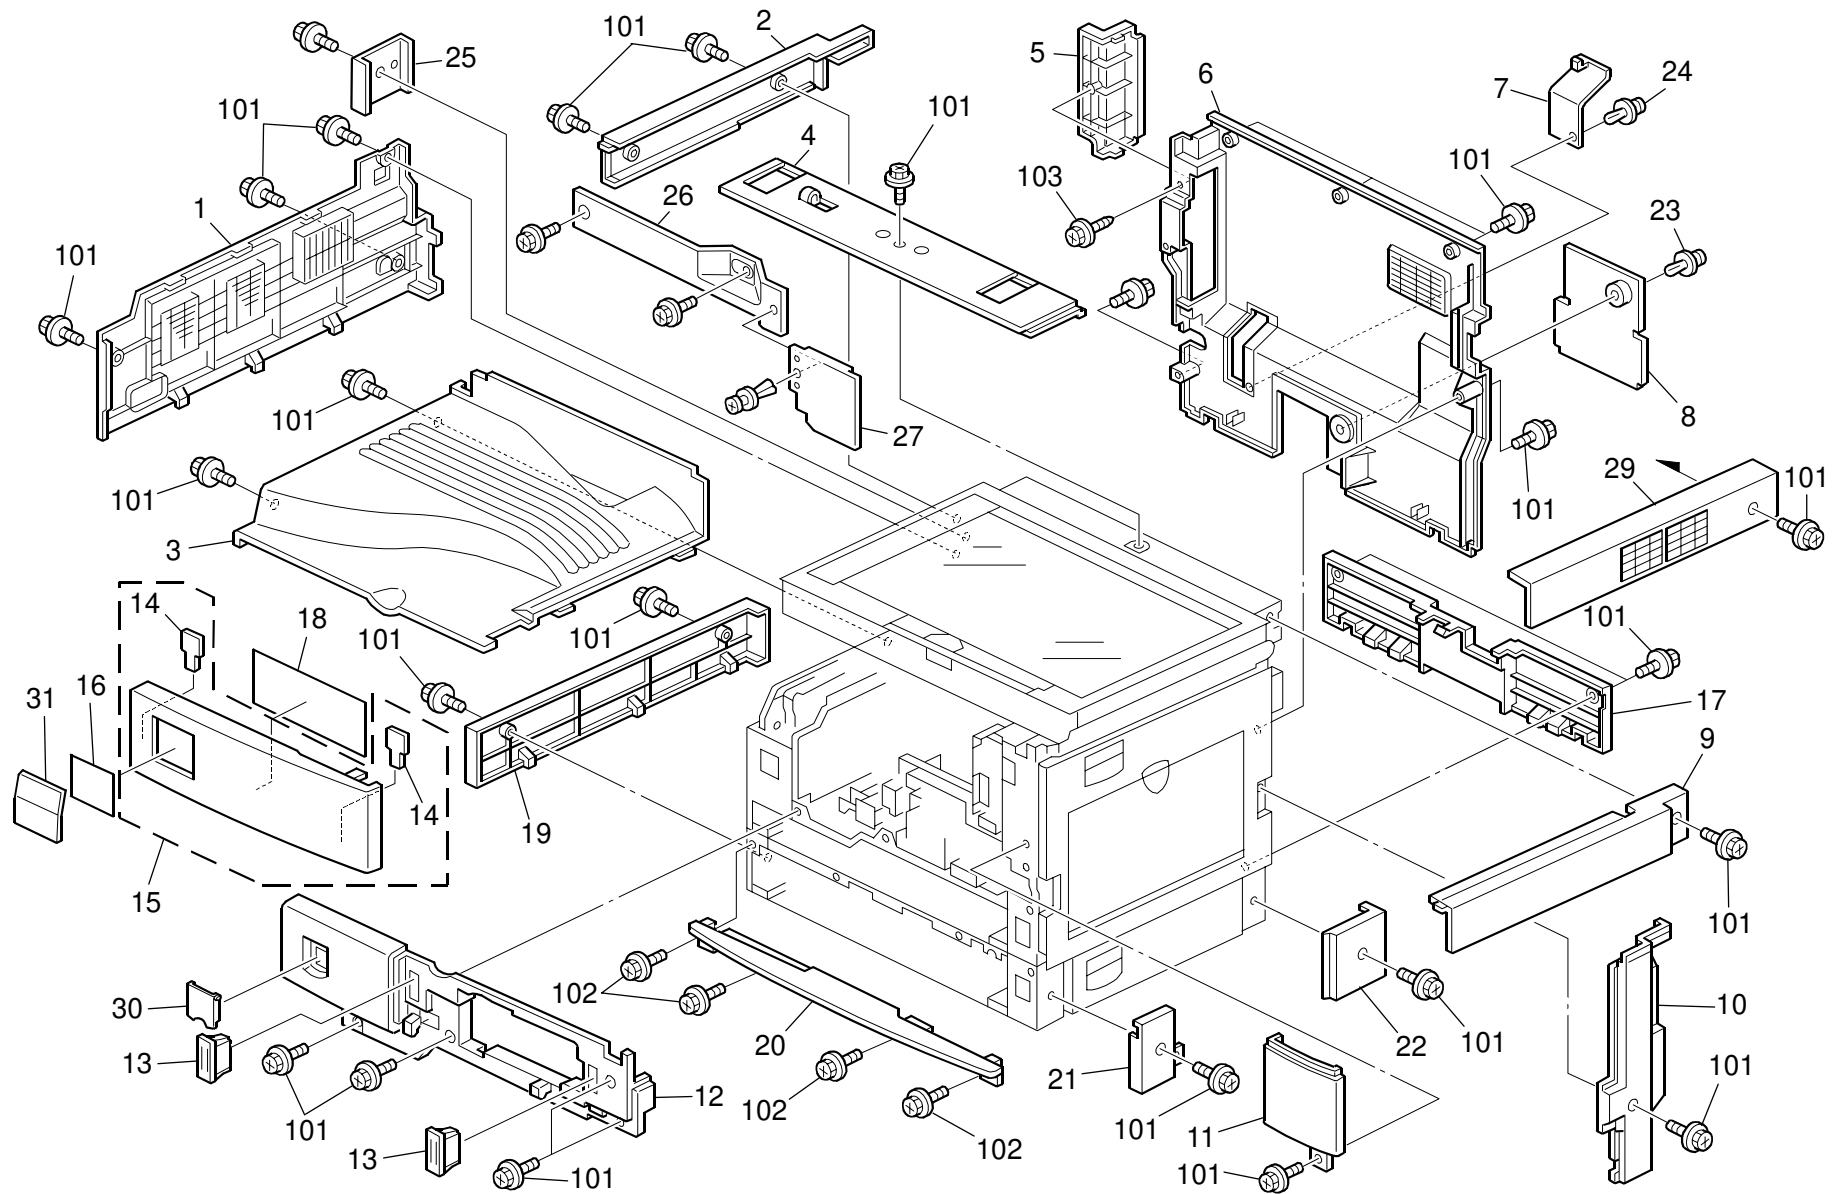


2.EXTERIOR 2 (B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B121 1315	Left Cover EU	1
2	B039 1302	Left Scanner Cover	1
3	B121 1353	Exit Cover EU	1
4	B039 1303	Rear Scanner Cover	1
5	B121 1314	Application Cap	1
6	B122 1338	Rear Cover EU	1
7	B121 1313	IC Card Cap	1
8	B122 1349	Paper Bank Cap	1
9	B039 1304	Right Scanner Cover	1
10	B122 1346	Right Rear Cover EU	1
11	B122 1309	Right Upper Front Cover EU	1
12	B243 1350	Cover - Front EU	1
13	B259 1367	Cover Magnet	1
14	B039 1361	Magnet Catch	2
15	B243 1253	Door - Front EU (B26959)	1
15	B268 1253	Door - Front EU (B26949)	1
16	B269 7434	Model Name Plate:B269:LAN	1
16	B269 7448	Model Name Plate:B269:GES	1
16	B269 7449	Model Name Plate:B269:RIC	1
17	B040 6138	Rear Lower Cover	1
18	B039 1365	Sheet - Operation Instructions	1
19	B040 6135	Left Lower Cover	1
20	B040 6126	Front Lower Cover	1
21	B040 6131	Cover - Right Lower Front	1
22	B040 6140	Cover - Right Lower Rear	1
23	B039 1364	Rivet - M7	1
24	B039 1367	Rivet - M6	2
25	B122 1323	Left Upper Cover	1
26	B122 1369	Rear Exit Cover EU	1
27	B122 1371	Sorter Cap EU	1
29	B039 1304	Right Scanner Cover (EU)	1
30	B039 1362	Main Switch Cover	1
31	B132 1531	Panel:Logo	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3008N	Tapping Screw - M3x8	
102	0451 3006N	Tapping Screw - 3x6	
103	0450 3008N	Tapping Screw - M3x8	

3. OPERATION PANEL (B268/B269)

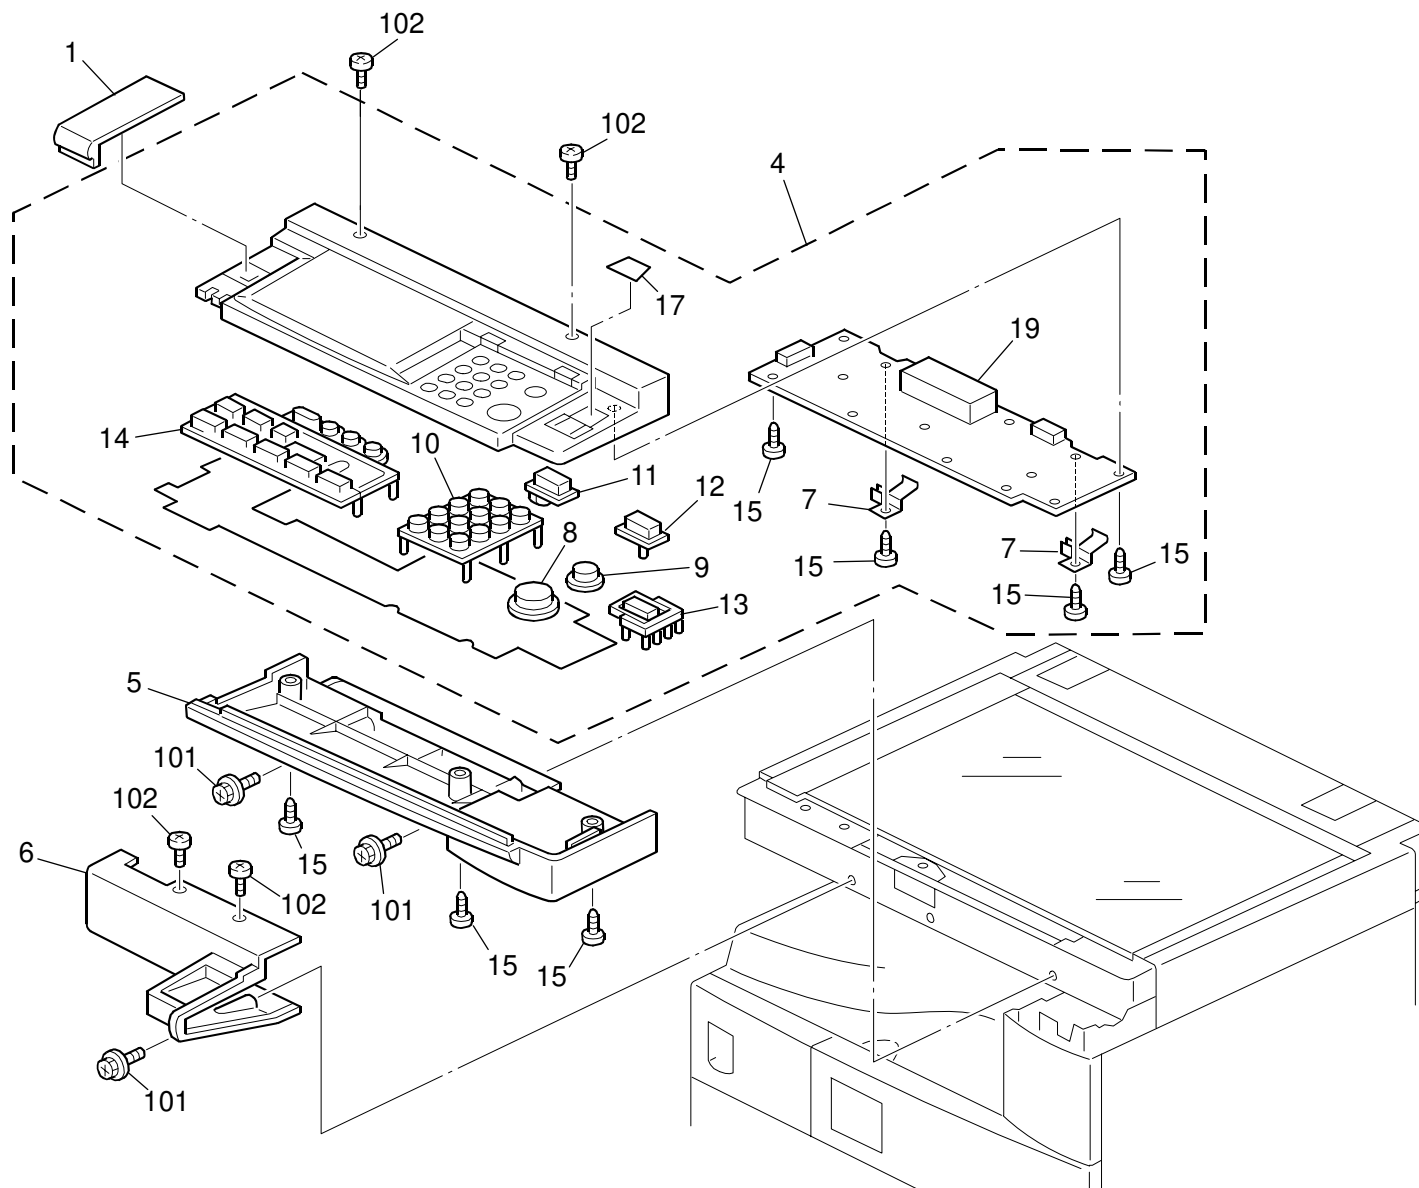


3.OPERATION PANEL (B268/B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B243 1466	Cover - CPS NA	1
4	B268 1424	Operation Panel:Base:B268:TWN:Ass'y	1
4	B269 1413	Operation Panel Unit ASIA (B26949)	1
4	B269 1424	Operation Panel:TWN (B26959)	1
5	B276 1452	Cover:Operation Sub-unit:Lower	1
6	B243 1425	Cover - Operation Panel	1
7	B039 1469	Ground Plate	2
8	B229 1453	Keytop - Start	1
9	B229 1454	Keytop - Clear/stop	1
10	B229 1475	Keytop - 10key	1
11	B229 1525	Keytop-initial	1
12	B229 1537	Keytop - Clear Modes	1
13	B243 1458	Keytop - Power Source	1
14	B243 1459	Keytop - Cursor	1
15	B259 1499	Tapping Screw - M3x8	7
17	B229 1521	Sheet-power Source-NA (B26949)	1
17	B229 1522	Sheet-power Source-EU (B26859/B26959)	1
19	B243 1487	PCB Operation Panel	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3008N	Tapping Screw - M3x8	
102	0353 0050N	Screw-m3x5	

4.OPTICS SECTION 1 (B268/B269)

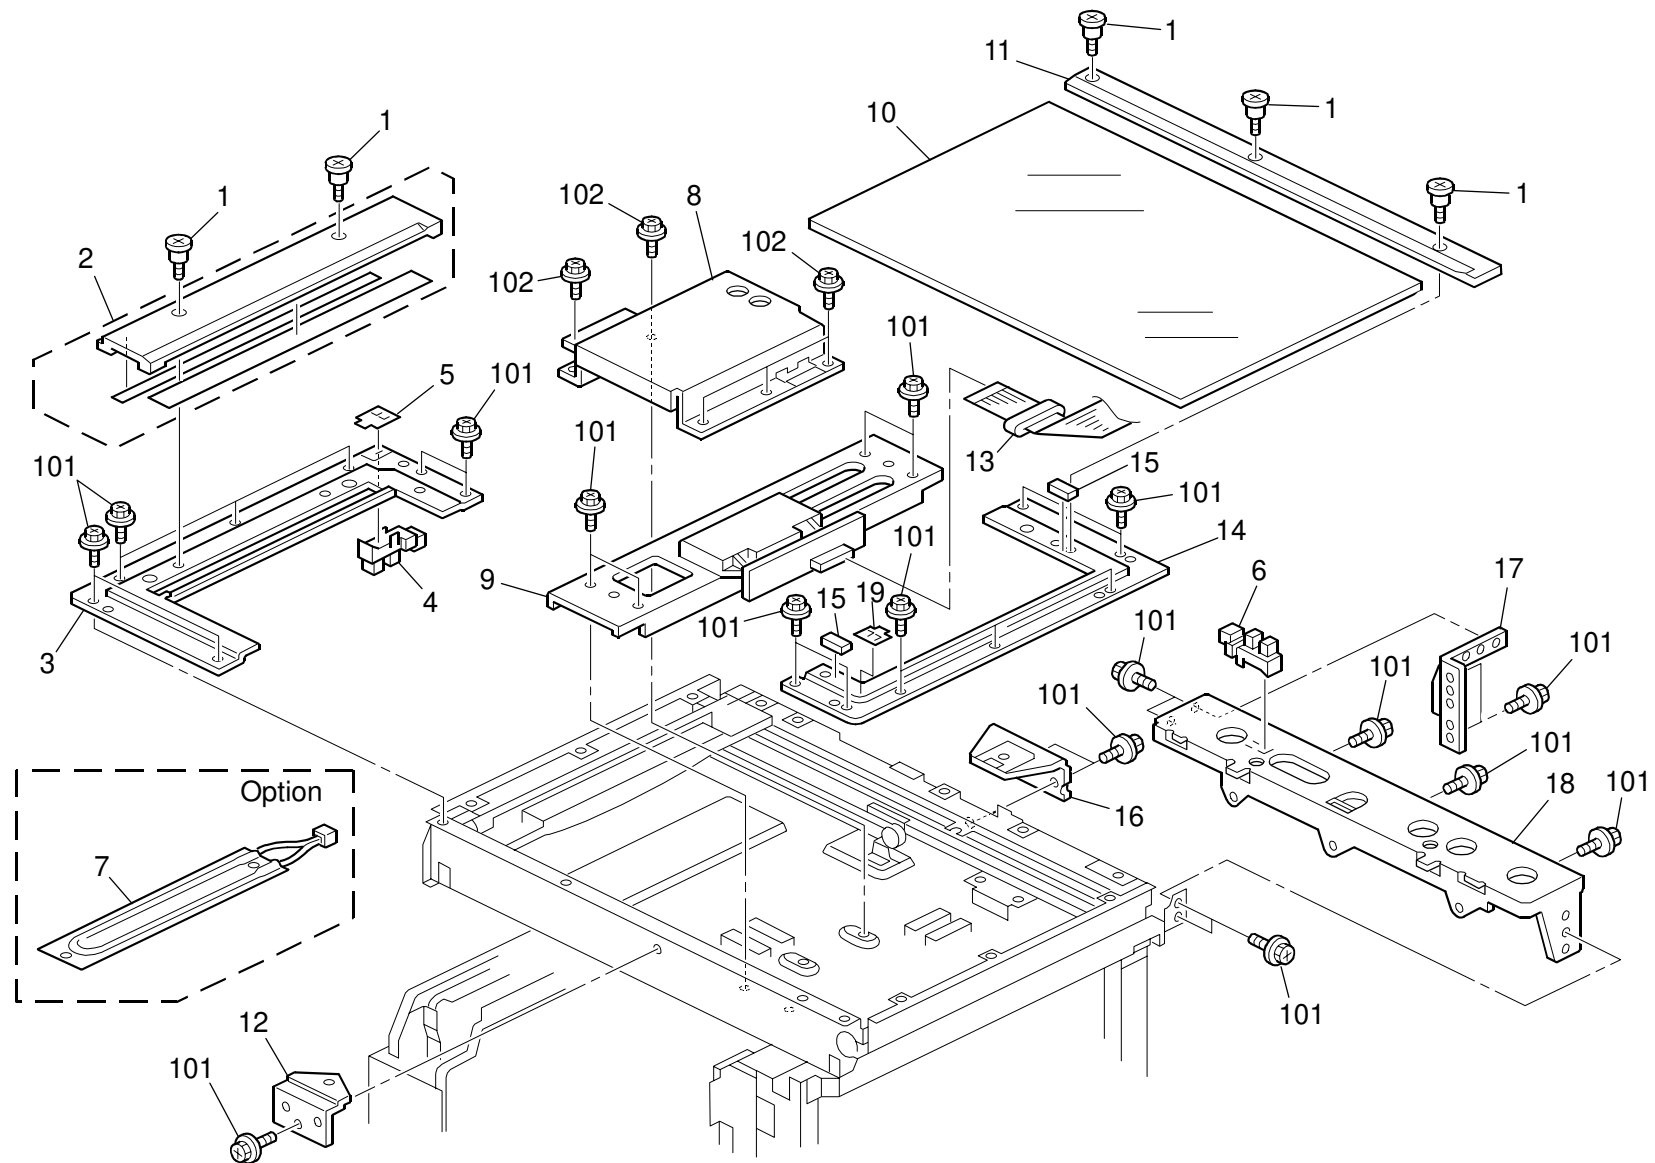


4.OPTICS SECTION 1 (B268/B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B390 1759	Shaft:Scale	2
2	B268 1749	Scale - Left	1
3	B039 1710	Left Scanner Bracket	1
4	AW02 0156	Photointerruptor:EE-SX4235A-P2	1
5	A193 1705	Sheet:Photointerruptor	1
6	GW02 0020	Photointerruptor:LG248NI1	2
7	A250 1821	Heater - 9W	1
8	B276 1808	Inner Cover:Lens	1
9	B259 1812	Lens Unit	1
10	A250 1752	Exposure Glass	1
11	B268 1751	Scale - Inner Back	1
12	B039 1666	Bracket - Operation Panel	1
13	B243 1804	Harness - FFC	1
14	B039 1712	Right Scanner Bracket	1
15	5442 1924	Exposure Glass Cushion	2
16	B039 1658	Rear Scale Bracket	1
17	B121 1069	Support Bracket	1
18	B039 1068	ADF Bracket	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - M3x6	
102	0454 3006Q	Tapping Screw With Washer - M3x6	

5.OPTICS SECTION 2 (B268/B269)

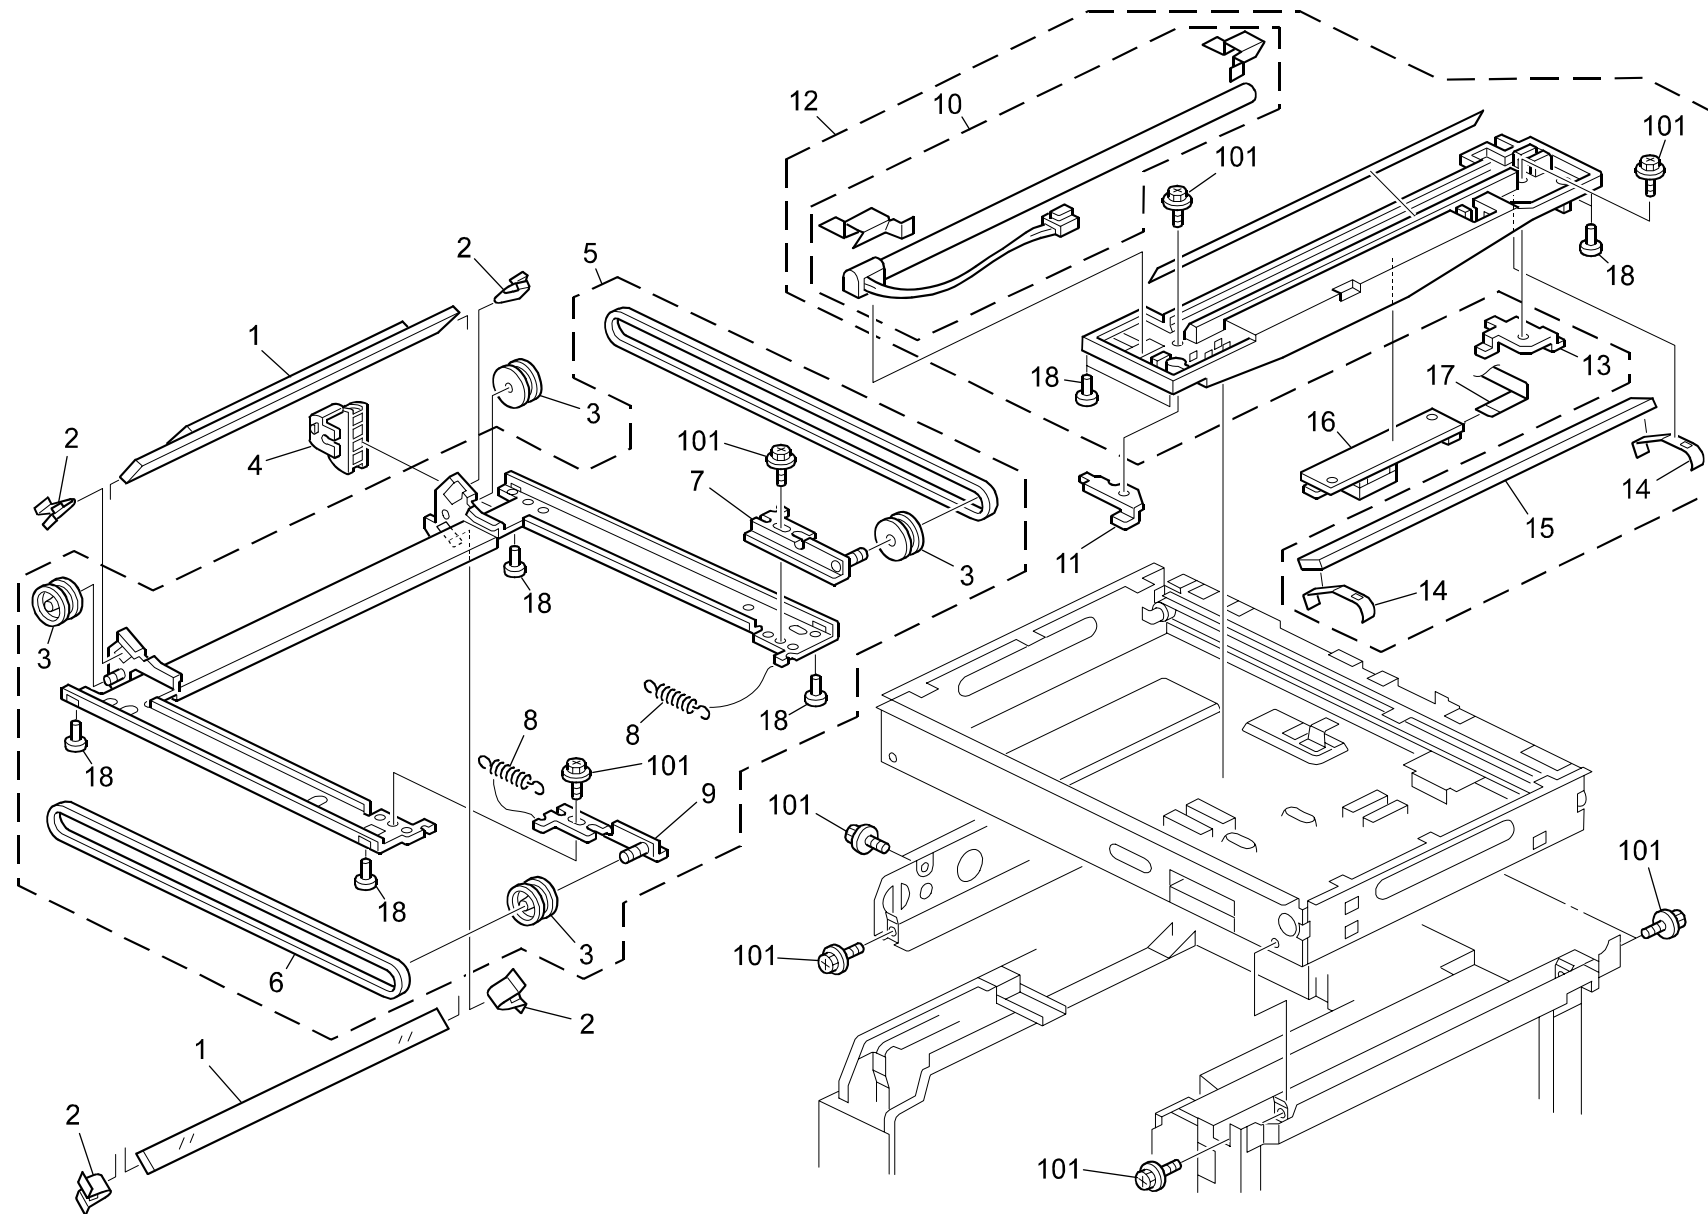


5.OPTICS SECTION 2 (B268/B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B039 1787	2nd Mirror	2
2	B039 1781	2nd Mirror Holder	4
3	B039 1785	Scanner Drive Pulley	4
4	B121 1782	Flexible Board Guide	1
5	B259 1768	Carriage No.2 Ass'y	1
6	B039 1784	Scanner Drive Belt	2
7	B259 1778	Idler Belt Pulley Bracket - Rear	1
8	B039 1790	Tension Spring	2
9	B259 1776	Idler Belt Pulley Bracket - Front	1
10	B121 1757	Xenon Lamp MM8 26000/70	1
11	B039 1758	Timing Belt Holder - Front	1
12	B121 1751	No.1 Carriage Ass'y	1
13	B039 1759	Timing Belt Holder - Rear	1
14	B121 1766	No.1 Mirror Clamp	2
15	B121 1762	No.1 Mirror	1
16	B259 1763	Xenon Lamp Stabilizer	1
17	B259 5223	Harness - Stabilizer	1
18	G570 2730	Slider - Scanner	

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	

6.OPTICS SECTION 3 (B268/B269)

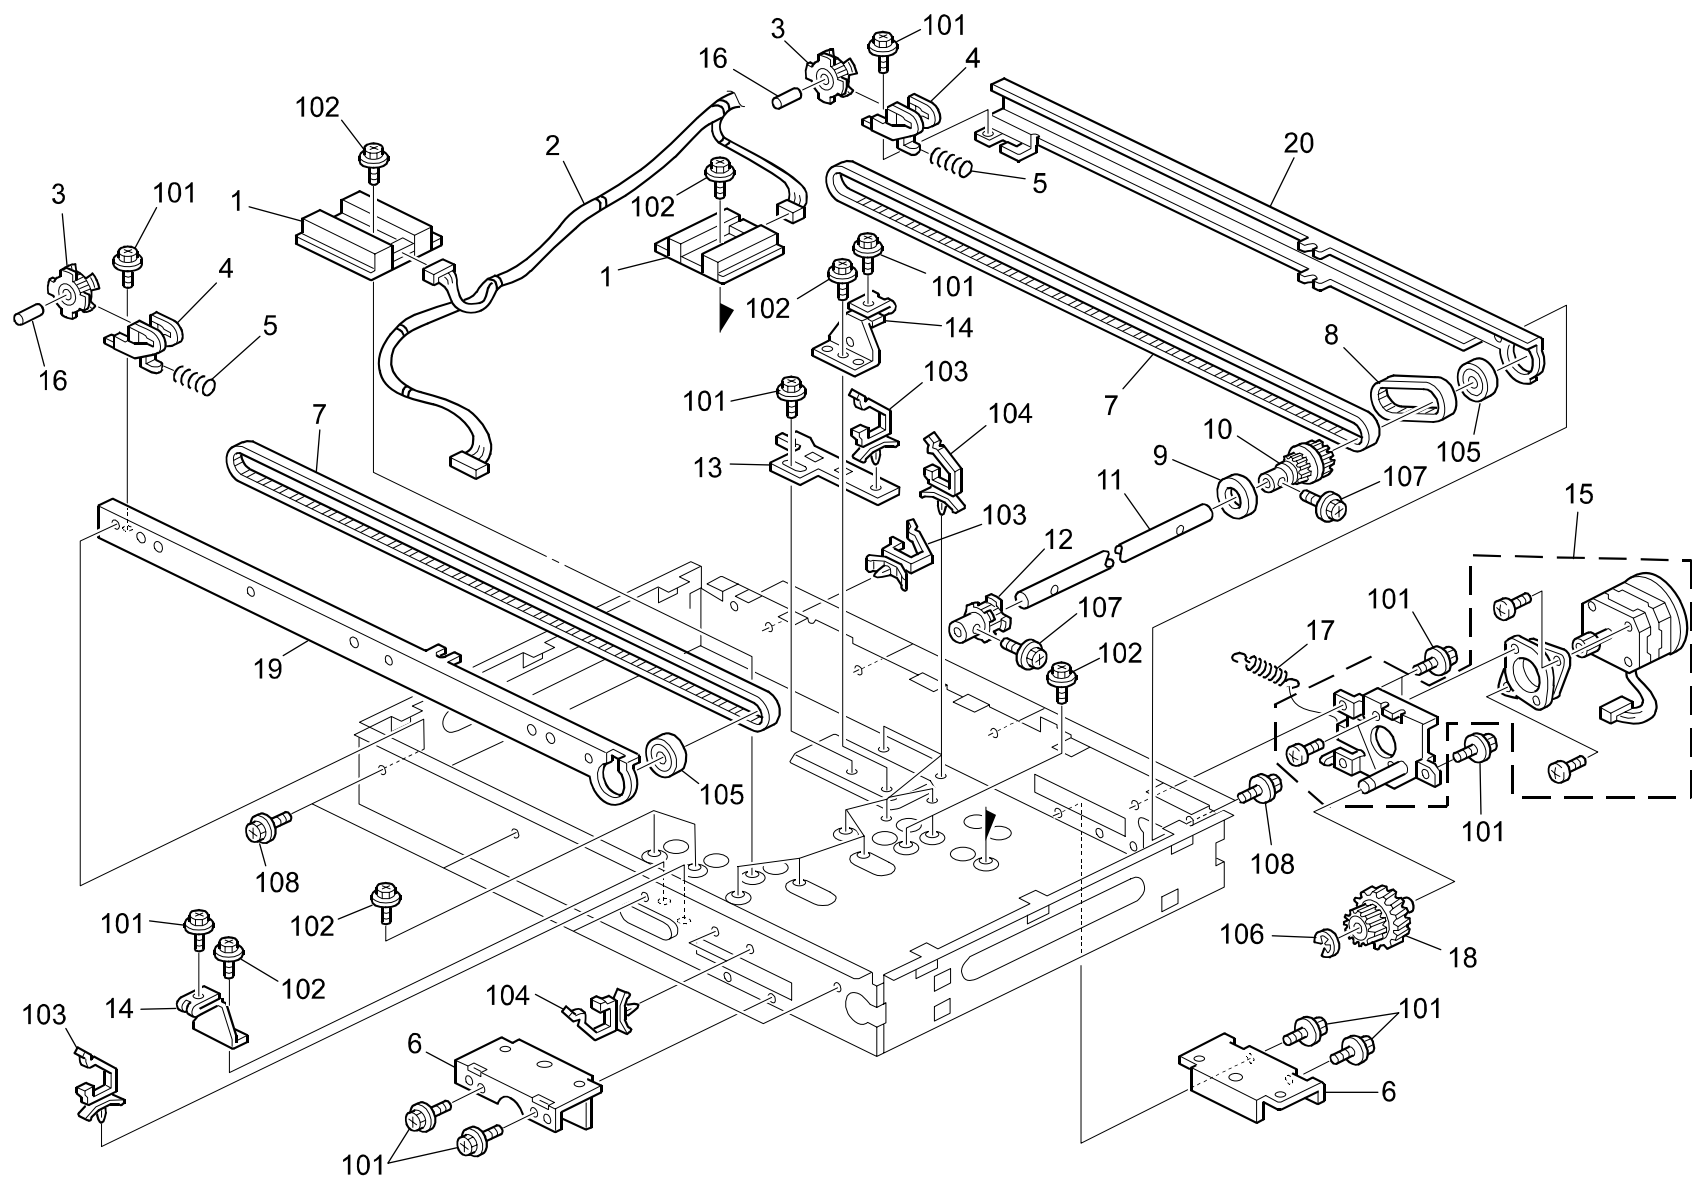


6.OPTICS SECTION 3 (B268/B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AW01 0126	Original Sensor:H=2-66	2
2	B243 5222	Harness - Scanner	1
3	B039 1703	Pulley - 37Z	2
4	B039 1705	Bracket:Idler	2
5	B039 1704	Spring - Timing Pulley	2
6	B121 1667	Lens Stay Bracket	2
7	B039 1697	Timing Belt - 1058.25XL	2
8	B121 1696	Timing Belt L147	1
9	B039 1695	Flange - Pulley	1
10	B039 1694	Pulley - 37/41Z	1
11	B259 1691	Scanner Drive Shaft	1
12	B039 1692	Pulley - 37Z	1
13	B039 1668	Bracket - Stabilizer Harness	1
14	B121 1664	Bracket - Timing Belt	1
15	B039 1699	Stepper Motor:MM42:2.9W	1
16	B259 1702	Pulley Shaft	2
17	B039 1683	Tension Spring - Stepper Motor	1
18	B121 1680	Gear - 53Z/60Z	1
19	B039 1662	Front Scanner Frame	1
20	B039 1663	Rear Scanner Frame	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw With Washer - M3x6	
103	1105 0511	Harness Clamp - LWS-0306ZC	
104	1105 0487	Harness Clamp	
105	0805 3530	Bearing 8x22x7	
106	0720 0060E	Retaining Ring - M6	
107	0360 3006N	Screw - M3X6	
108	0453 3006N	Tapping Screw - M3x6	

7.LASER UNIT (B268/B269)

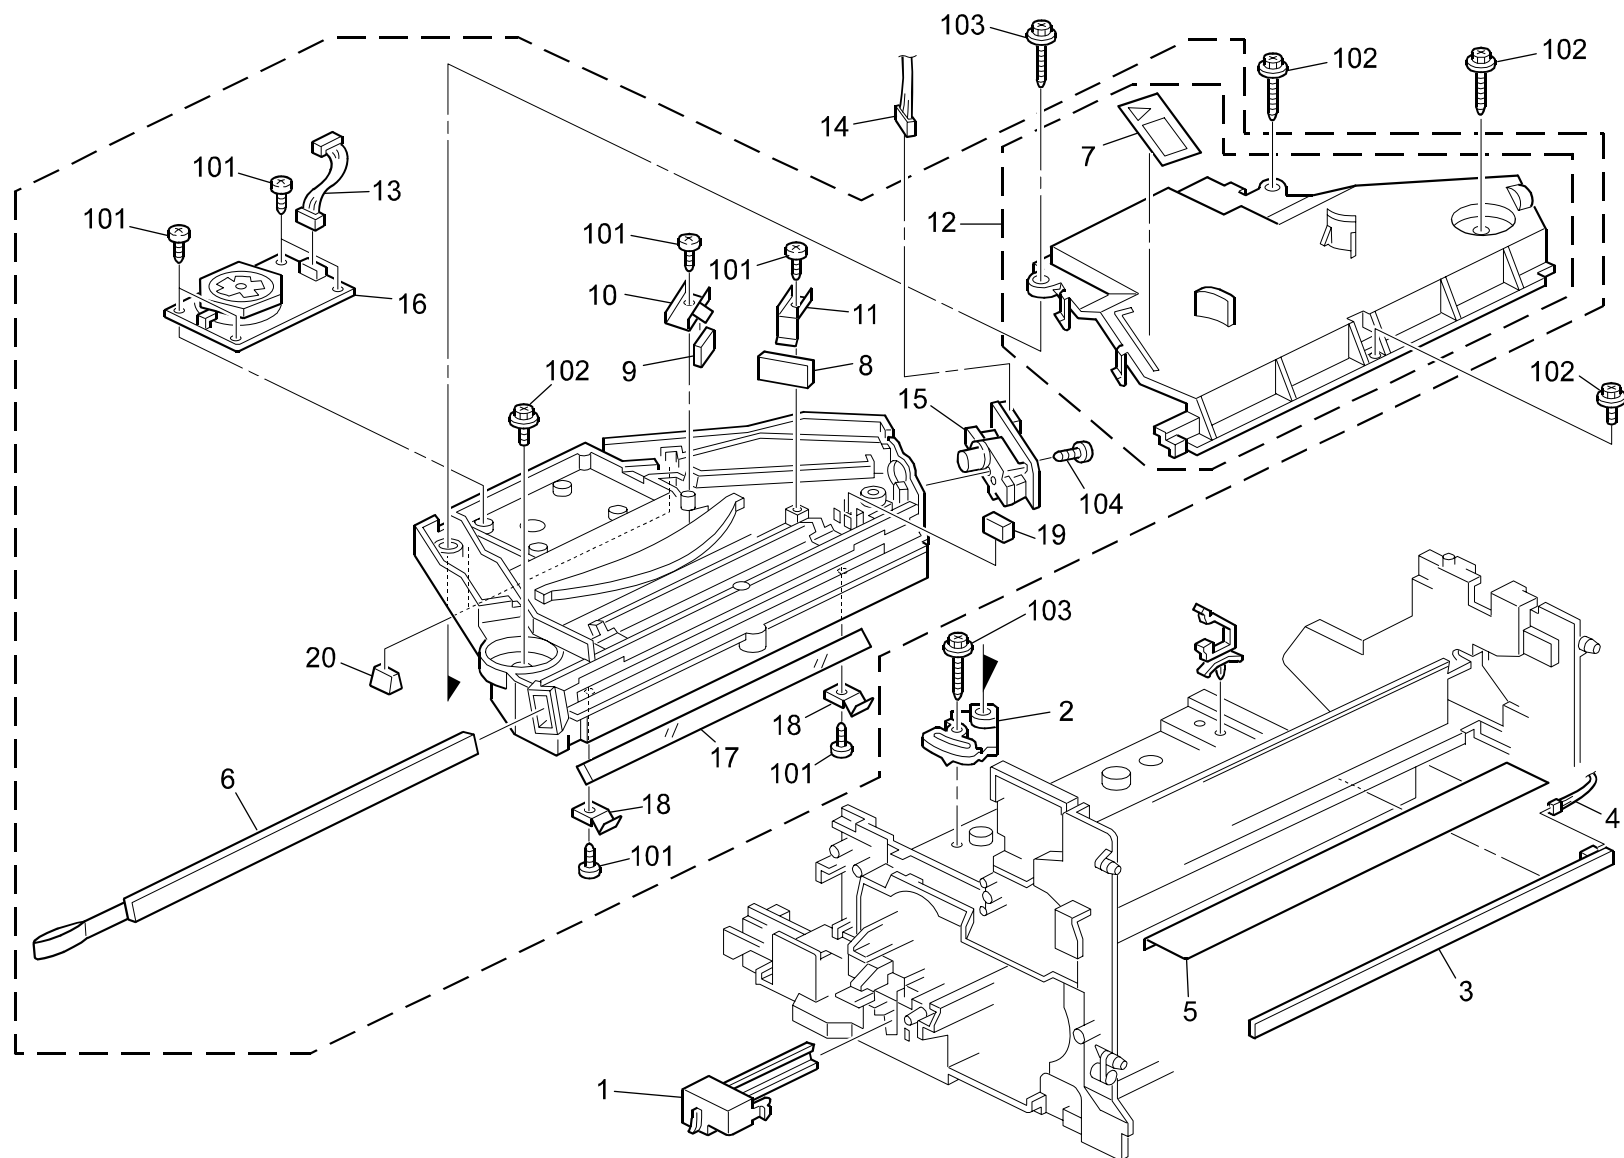


7.LASER UNIT (B268/B269)

Index No.	Part No.	Description	Q'ty Per Assembly
*	B283 1876	Imaging Unit:Ass'y	1
1	B276 1251	Cover:Shield Glass	1
2	B039 1905	Adjusting Plate	1
3	B259 2381	Discharge Lamp - QI	1
4	B121 5204	Harness - Discharge Lamp	1
5	B039 1088	Sheet - Duct	1
6	B283 1961	Shield Glass:Ass'y	1
7	B283 1981	Decal:LD	1
8	AC03 0139	Sync Detector Mirror	1
9	AC02 4009	Cylindrical Lens	1
10	B039 1942	Cylindrical Lens Holder	1
11	B039 1954	Holder - Sync Detector Mirror	1
12	B283 1971	Cover:Ass'y	1
13	B121 5439	Harness - Polygon Mirror Motor	1
14	B121 5250	Harness - LDD	1
15	B276 1917	Laser Diode Unit:Ass'y	1
16	AX06 0323	Polygon Motor - 23622rpm	1
17	AC03 0138	2nd Mirror	1
18	B039 1953	2nd Mirror Holder	2
19	AC02 0095	Sync Detector Lenz	1
20	B121 1975	Rubber Bushing	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0452 3010N	Tapping Bind Screw - M3x10	
102	0450 3012N	Tapping Screw -3x12	
103	0450 3020N	Tapping Screw:M3x20	
104	0452 3014N	Tapping Screw - M3x14	

8.BY-PASS FEED SECTION (B268/B269)

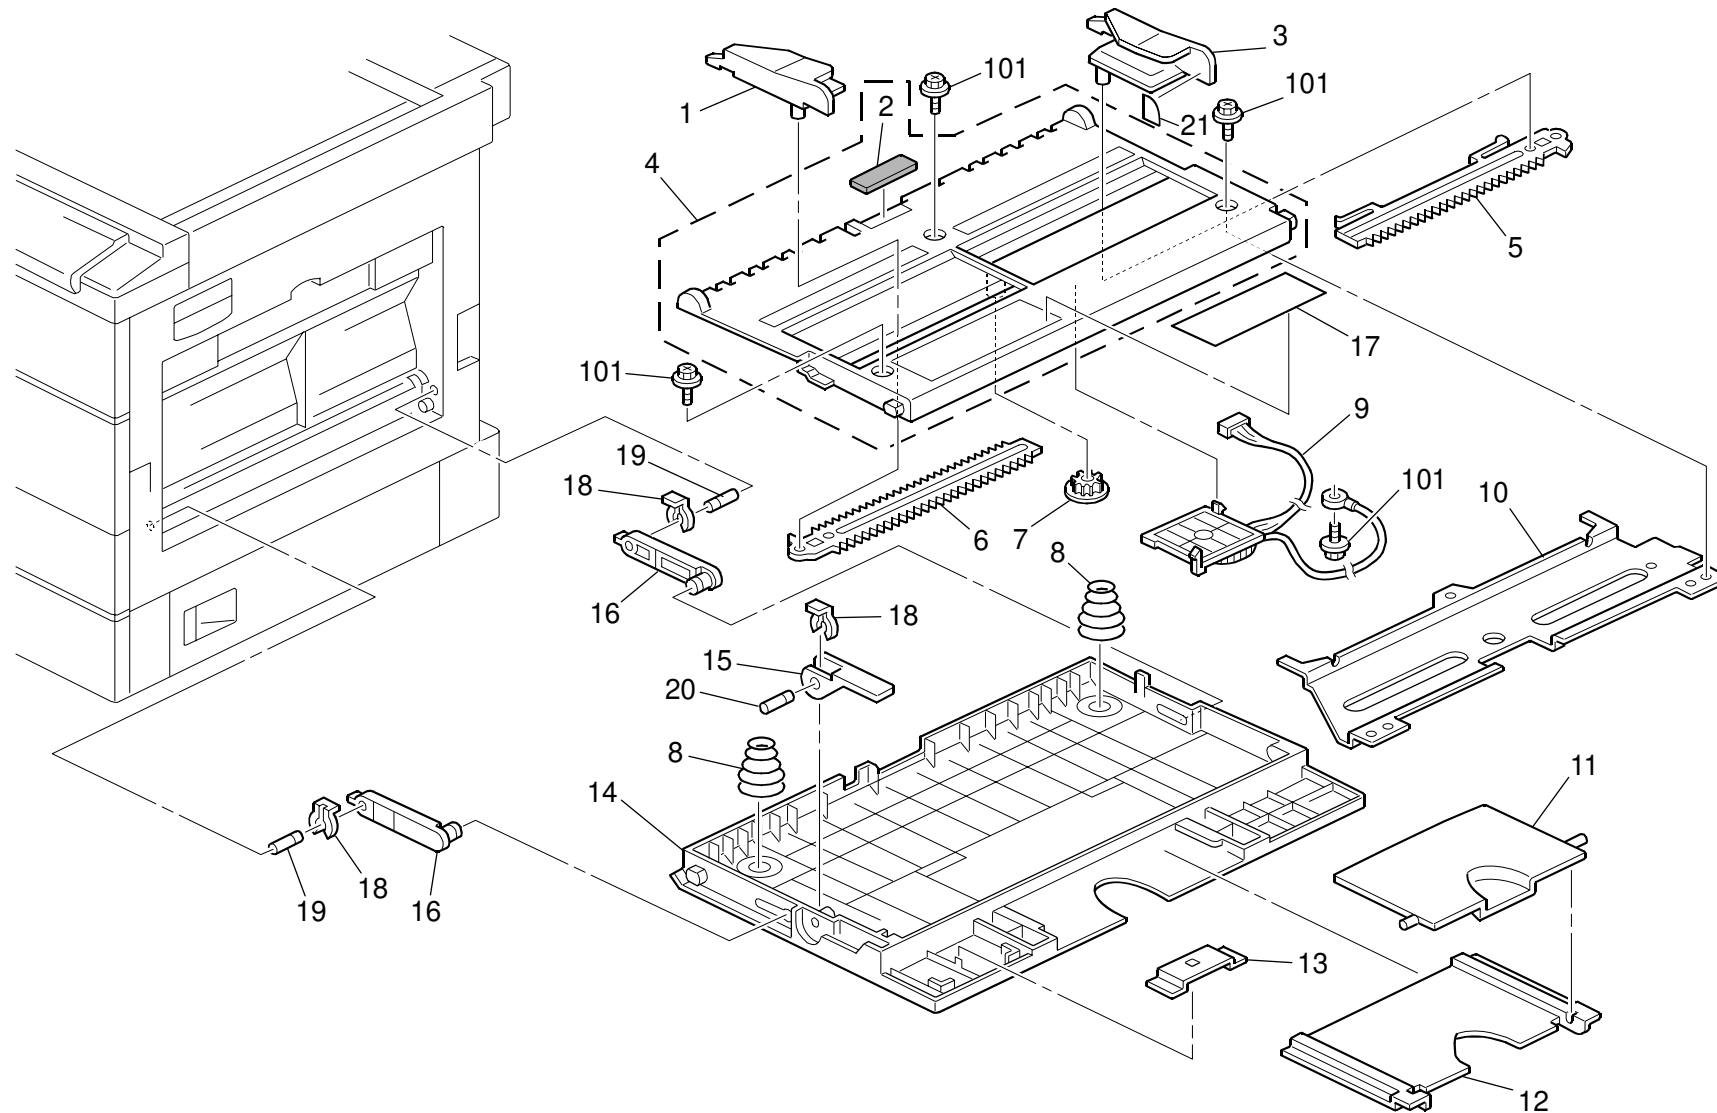


8.BY-PASS FEED SECTION (B268/B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B039 2631	Front Side Fence	1
2	B039 2628	Bottom Plate Pad	1
3	B039 2632	Rear Side Fence	1
4	B039 2630	Tray Bottom Plate	1
5	B039 2638	Rack - Rear Side Fence	1
6	B039 2637	Rack - Front Side Fence	1
7	G012 3050	Side Fence Gear	1
8	AA06 3643	Spring - By-pass Feed Table	2
9	B039 2645	Rotary Switch	1
10	B039 2629	Stay - Tray Bottom Plate	1
11	B039 2620	Paper Guide - Extension	1
12	B039 2621	Paper Guide	1
13	B121 2617	Magnet Catch - By-pass Feed	1
14	B039 2619	By-pass Feed Table	1
15	G020 2784	Lever - By-pass Feed Table	1
16	B039 2643	Link - By-pass Feed Table	2
17	B039 2633	Decal - By-pass Feed	1
18	5447 2681	Snap Ring	3
19	B259 2642	Pin - Mm6	2
20	B259 2786	Lever Shaft	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3008N	Tapping Screw - M3x8	

9.PAPER CASSETTE (B268/B269)

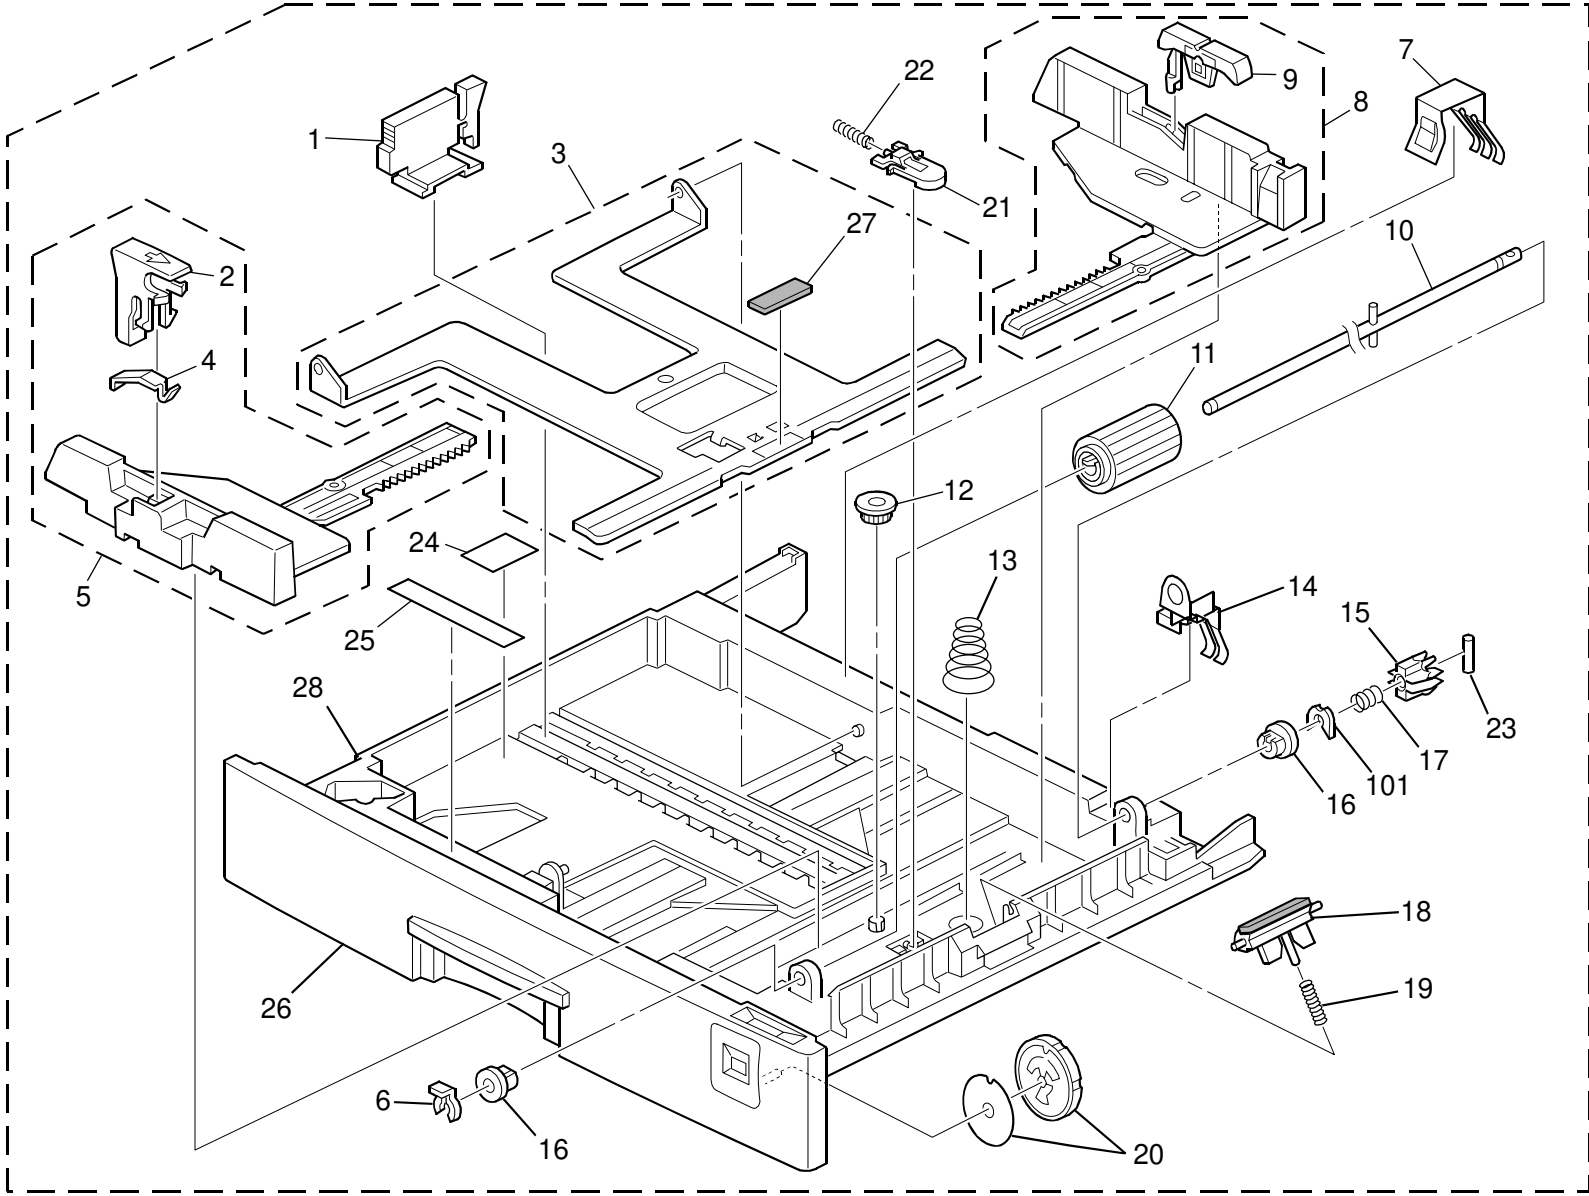


9.PAPER CASSETTE (B268/B269)

Index No.	Part No.	Description	Q'ty Per Assembly
*	B243 2840	Paper Tray Unit EU	1
1	B276 2644	End Fence:C3	1
2	B039 2704	Front Stopper Lever	1
3	B039 2701	Tray Bottom Plate	1
4	B039 2707	Spring Plate - Side Fence	1
5	B039 2734	Side Fence - Front	1
6	5215 2621	Snap Ring - M6	1
7	B039 2712	Ground Plate - Tray Bottom Plate	1
8	B039 2731	Side Fence - Rear	1
9	B039 2821	Rear Stopper Lever	1
10	B259 2737	Paper Feed Roller Shaft Ass'y	2
11	B039 2740	Paper Feed Roller	2
12	A267 2869	Gear - 16Z	1
13	B276 2719	Spring:Base:5.8N	1
14	B039 2742	Ground Plate - Paper Feed Roller	1
15	B039 2823	Joint - Paper Feed Roller	1
16	B039 2727	Bushing - 8x12x10	2
17	B039 2732	Spring - Paper Feed Roller	1
18	B039 2711	Friction Pad (B268)	1
18	G030 2670	Friction Pad (B269)	1
19	B039 2713	Spring - Friction Pad	1
20	B039 2724	Paper Size Detector - A4	1
21	A250 2808	Stopper Base	1
22	G020 2599	Spring - Release Lever	1
23	B039 2739	Shaft - Joint	1
24	B039 2720	Decal - Cassette Operation DLT	1
25	B039 2721	Decal - Cassette Operation	1
26	B243 2702	Cover - Paper Tray	1
27	5215 2713	Bottom Plate Pad	1


Index No.	Part No.	Description	Q'ty Per Assembly
101	0805 0088	Retaining Ring - M6	

10.PAPER RESISTRATION (B268/B269)

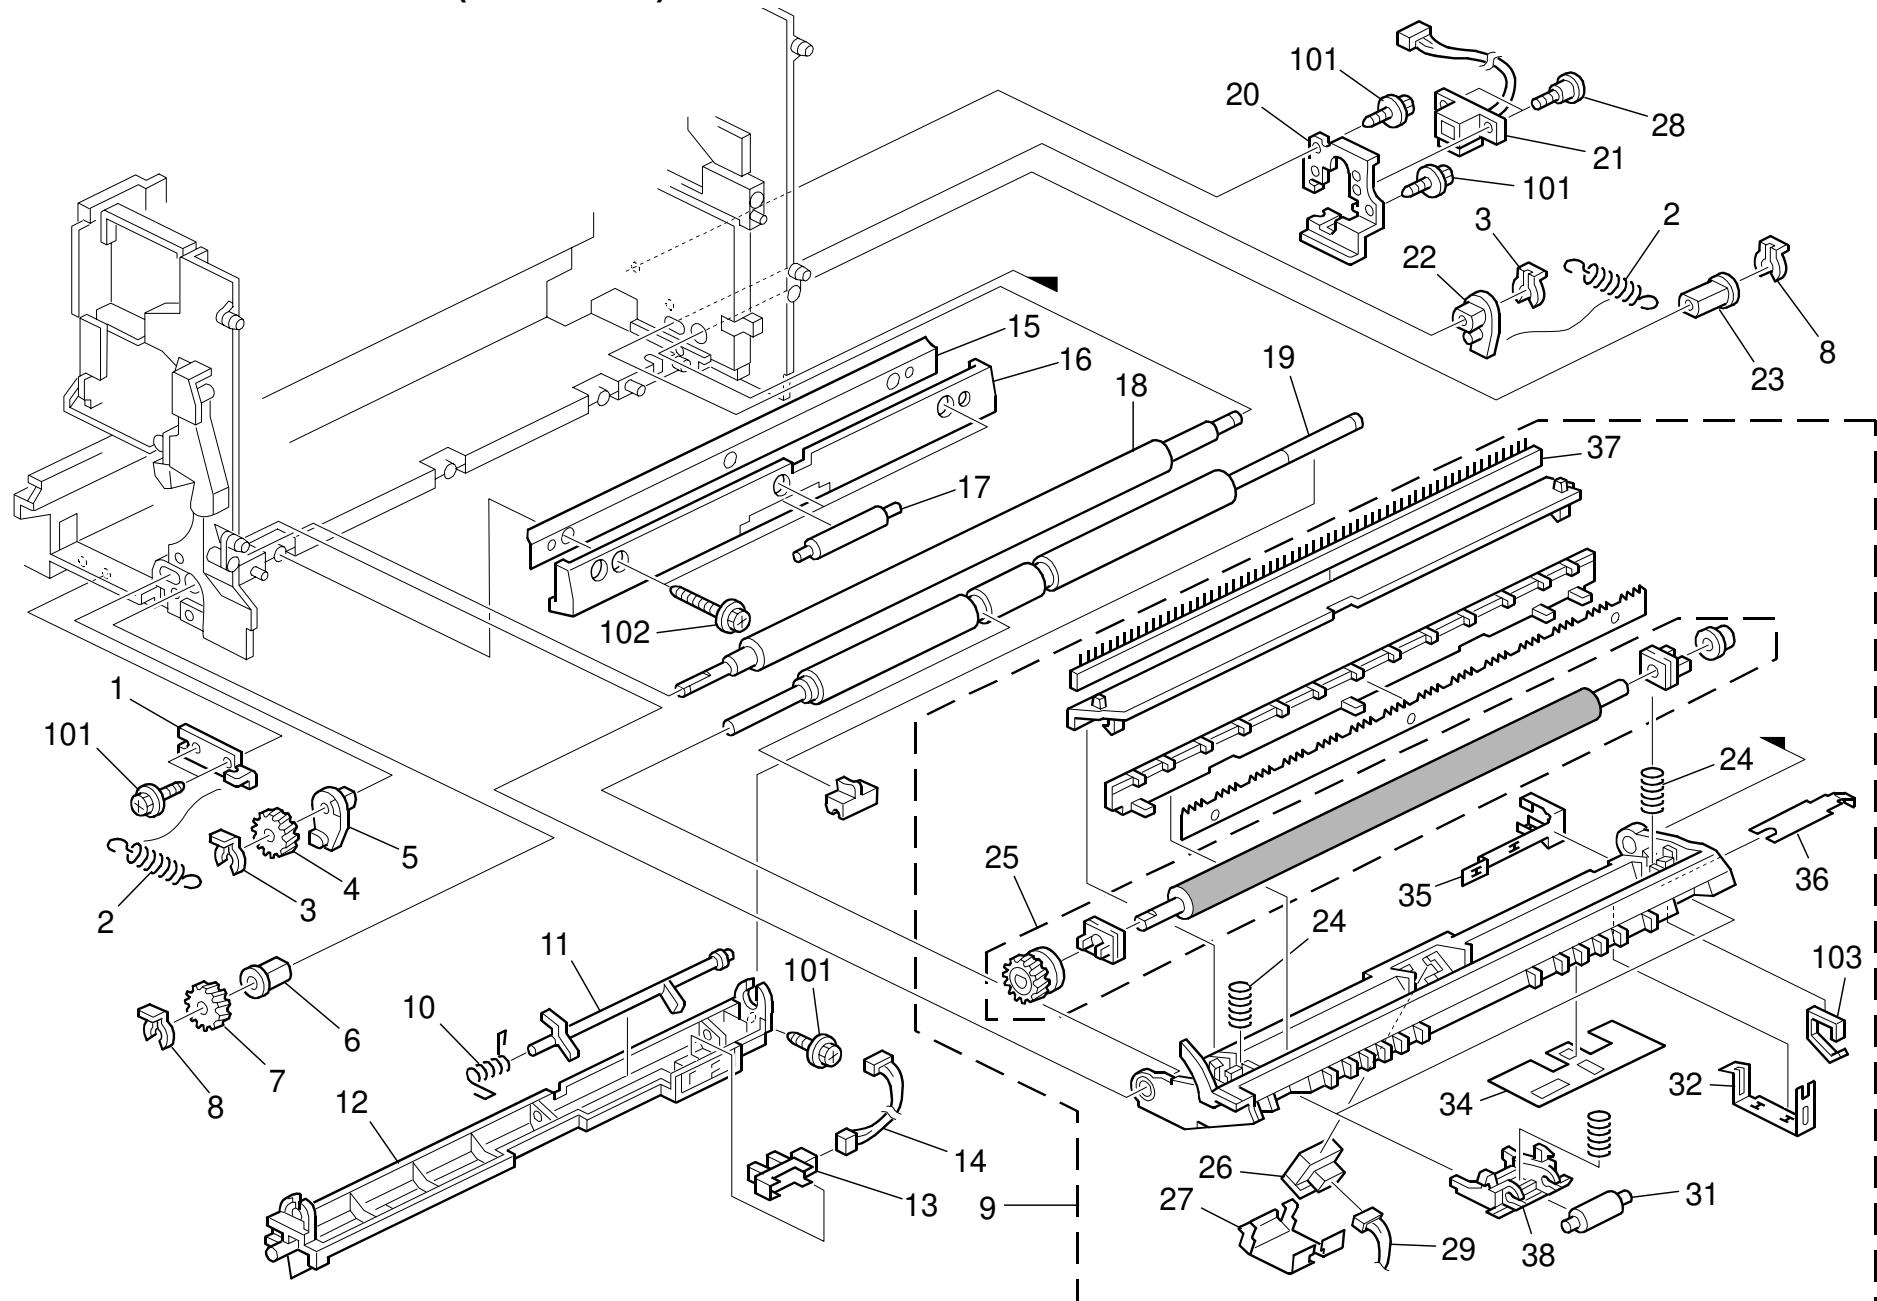


27

11.1ST PAPER FEED SECTION (B268/B269)

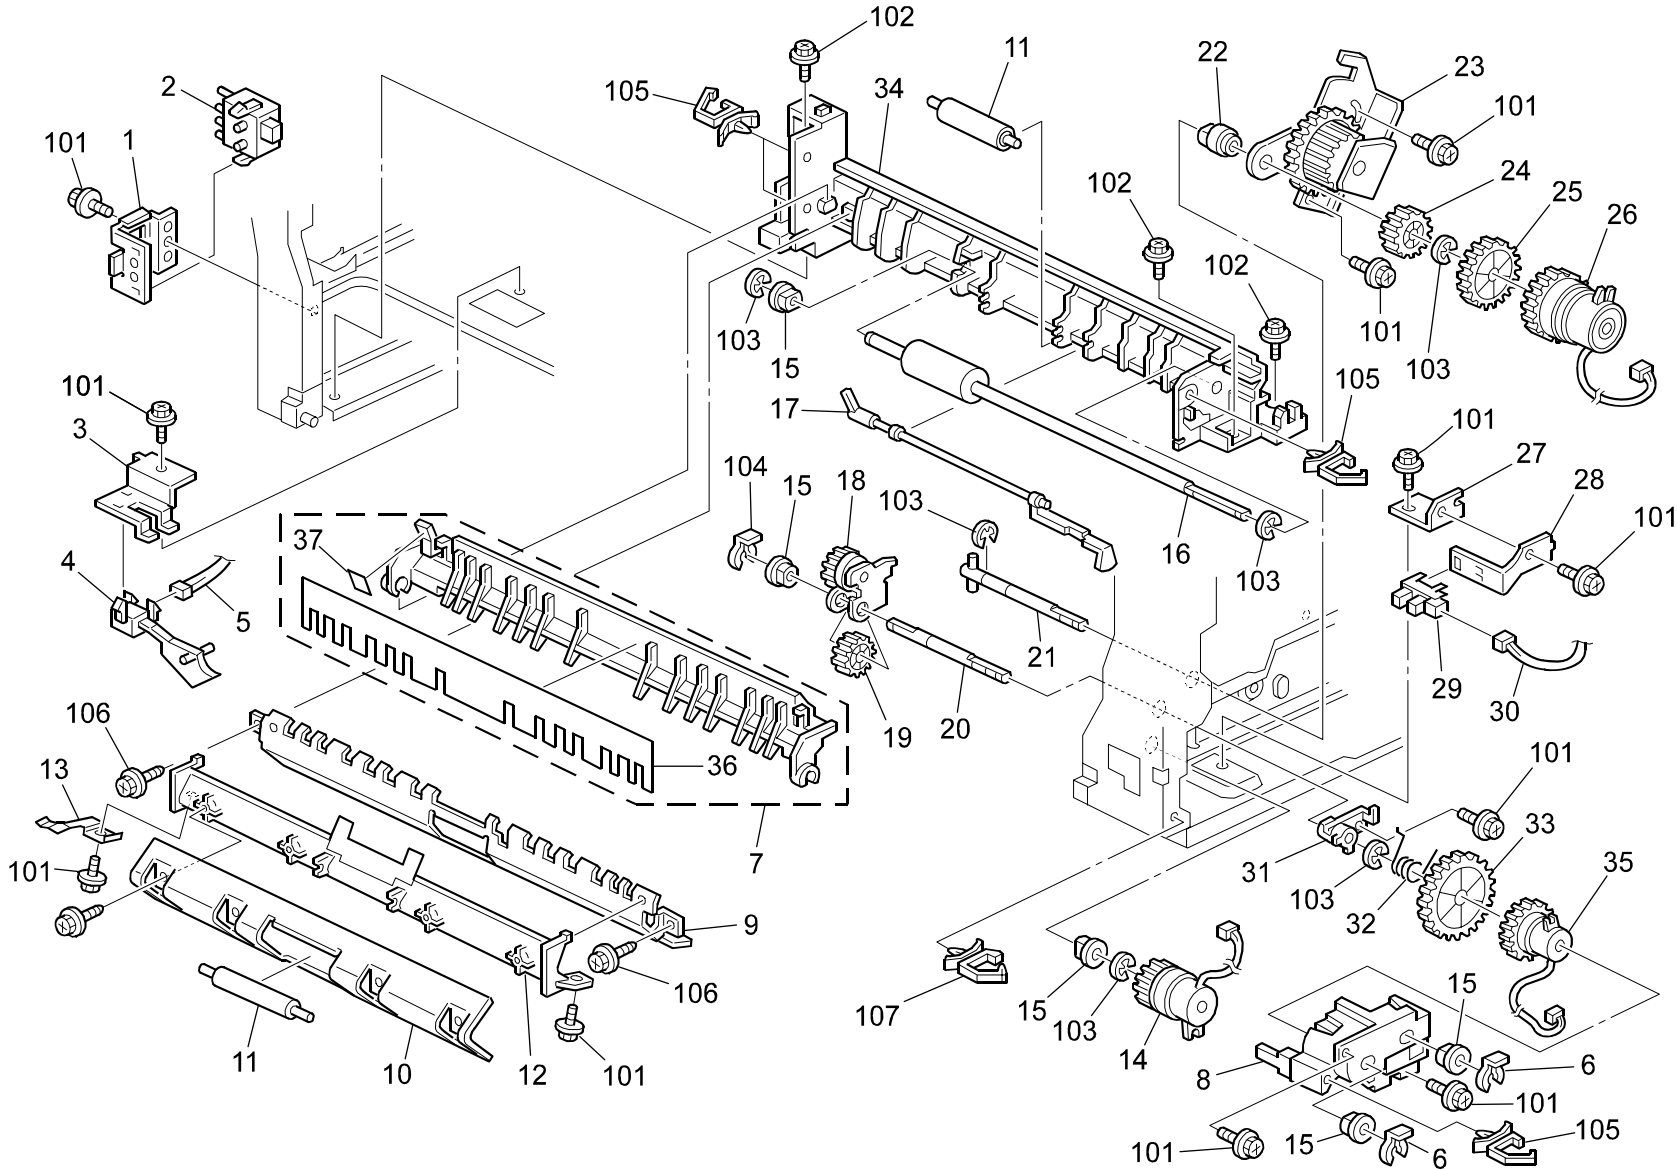

12.2ND PAPER FEED SECTION (B268/B269)

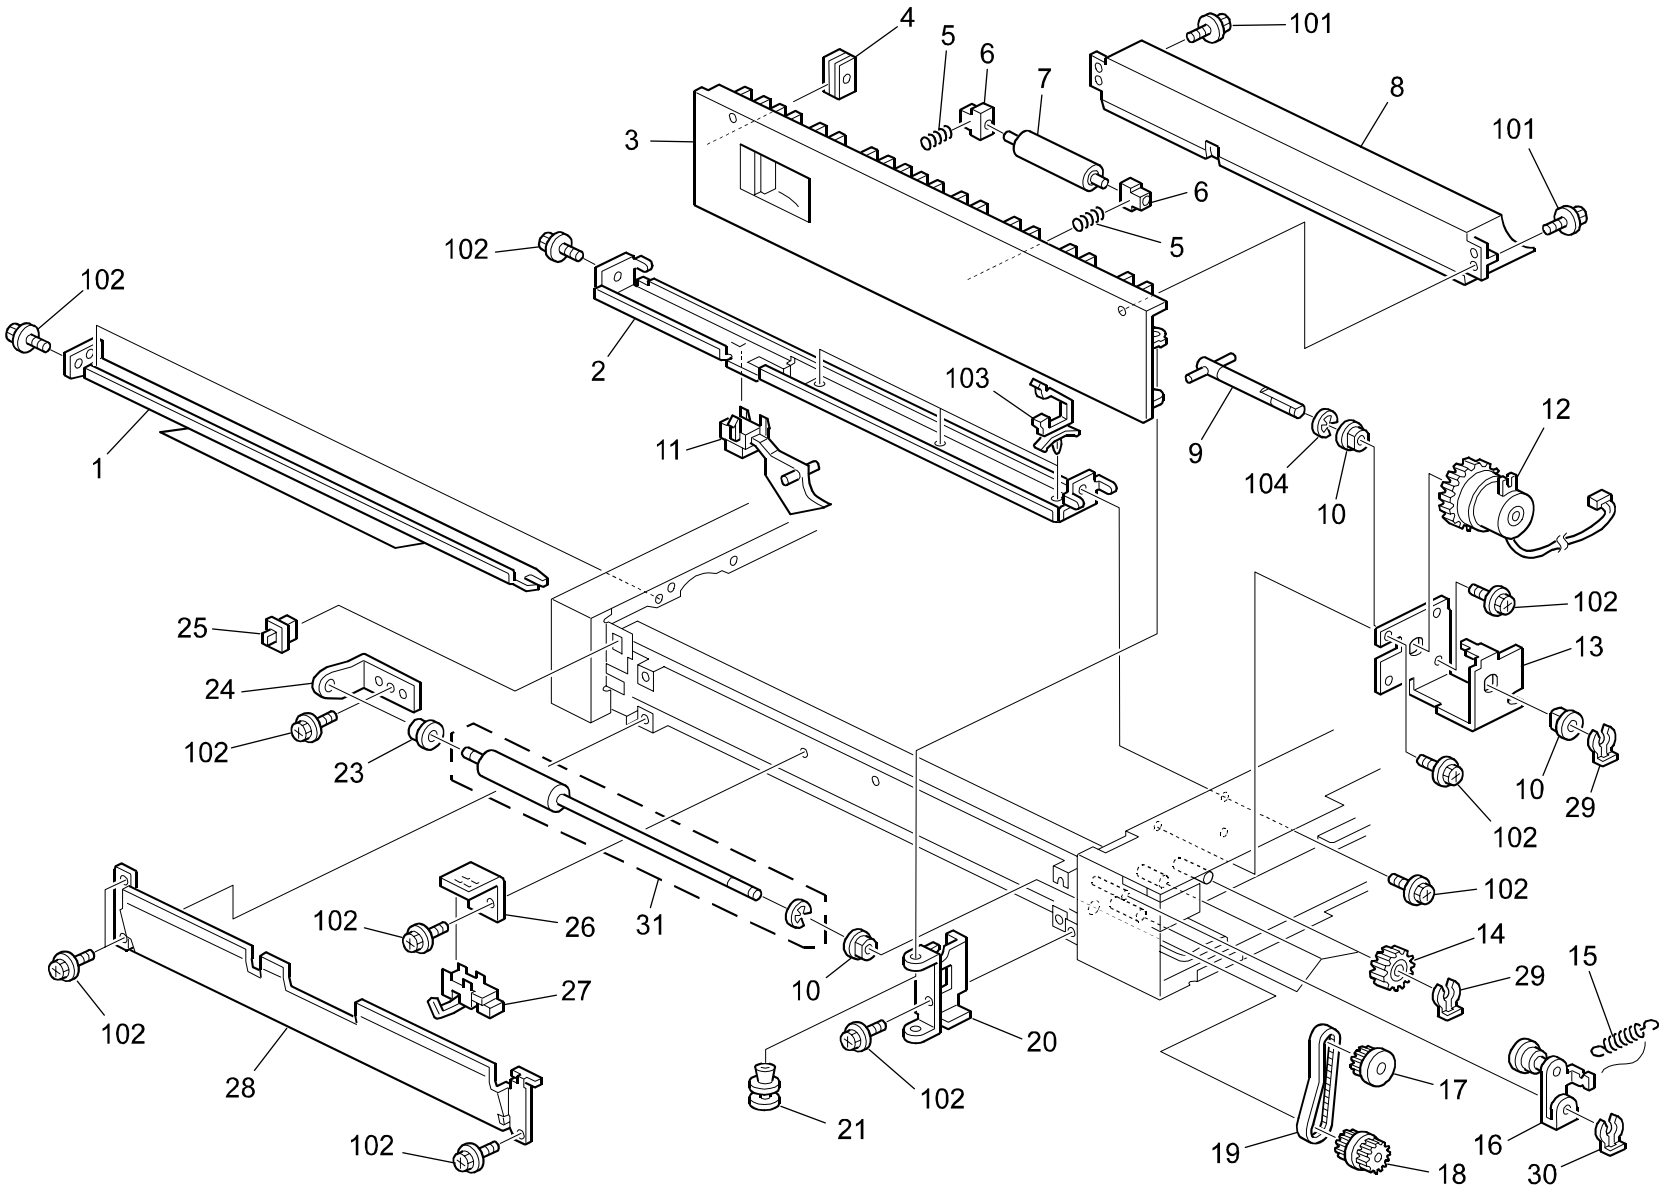


12.2ND PAPER FEED SECTION (B268/B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B040 6150	Guide Plate - Upper Paper Feed	1
2	B040 6058	Stay - Paper End Sensor	1
3	B040 6066	Vertical Transport Cover	1
4	AG07 0514	Magnet Catch	1
5	AA06 3334	Spring - Vertical Transport	2
6	AA08 0249	Bushing - Vertical Transport	2
7	B040 6069	Transport Driven Roller	1
8	B039 2653	Vertical Transport Guide (B268)	1
8	B277 6067	Guide Plate:Paper Feed:Right (B269)	1
9	B276 1183	Shaft:Paper Feed:Drive:Ass'y	1
10	AA08 2101	Bushing - 6x10x6	3
11	B039 2730	Paper End Sensor	1
13	B040 6091	Bracket - Vertical Transport Roller	1
14	AB01 2314	Gear - 25Z	3
15	AA06 0228	Spring - Transfer Drum Cleaning Sol	1
16	B040 6096	Tightener Bracket	1
17	AB03 0702	Timing Pulley - 30Z	1
18	AB03 0701	Gear/pulley - 24/30Z	1
19	AA04 3527	Timing Belt - 230XL	1
20	B040 6049	Bracket - Vertical Transport	1
21	A250 2779	Pin - M6	1
23	AA08 0252	Bushing - M4	1
24	B040 6074	Transport Roller Bracket	1
25	G020 5626	Push Switch	1
26	B040 6078	Bracket - Vertical Paper Sensor	1
27	AW02 0181	Paper Feed Sensor	1
28	B040 6071	Guide Plate - Vertical Transport	1
29	5447 2681	Snap Ring	2
30	5206 2686	Snap Ring	1
31	B260 6039	Transport Roller Connecting No.2	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 3008N	Tapping Screw - M3x8	
102	0451 3006N	Tapping Screw - 3x6	
103	1105 0511	Harness Clamp - LWS-0306ZC	
104	0720 0040E	Retaining Ring - M4	

13.VERTICAL TRANSPORT (B268/B269)

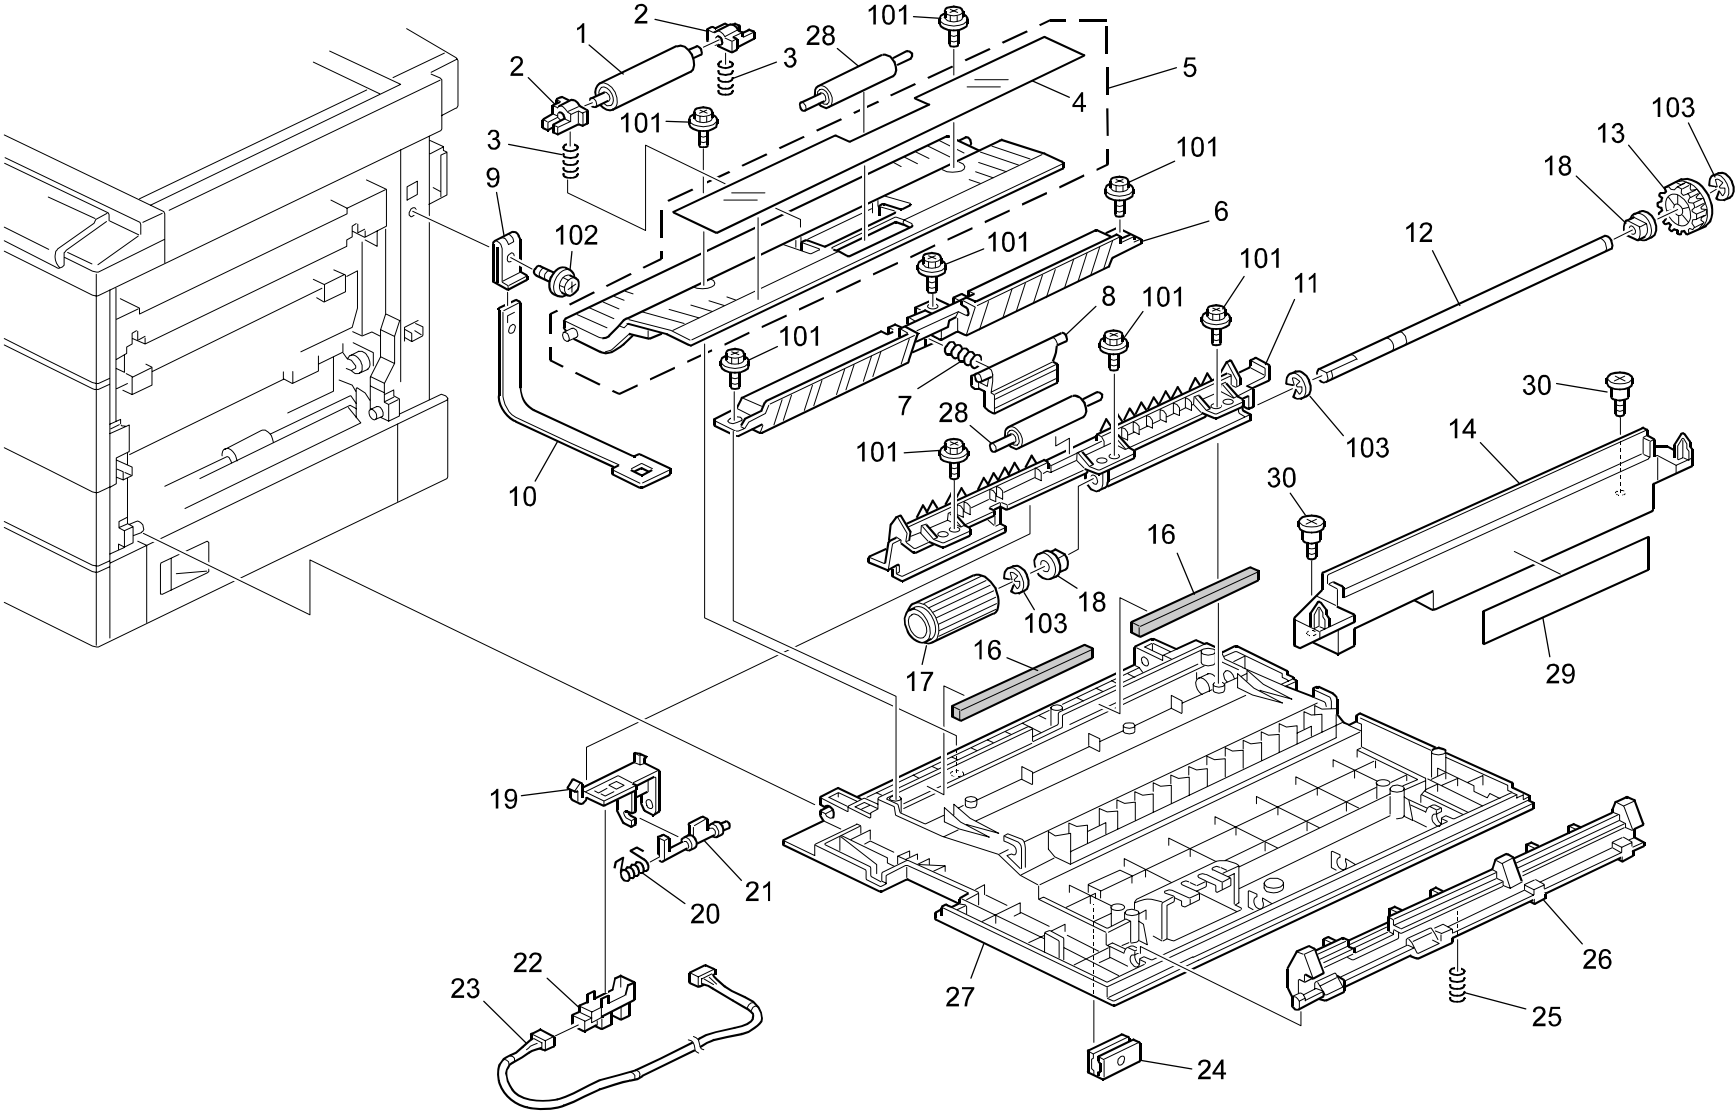


13.VERTICAL TRANSPORT (B268/B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AF02 2138	Vertical Transport Roller	1
2	AA08 0268	Bushing - Vertical Transport	2
3	AA06 3399	Spring - Vertical Transport	2
4	B039 2655	Vertical Transport Guide	1
5	B039 2653	Vertical Transport Guide	1
6	B039 2592	Lower Guide Plate - By-pass Feed	1
7	AA06 3398	Spring - Friction Pad	1
8	B039 2596	Friction Pad	1
9	A232 3962	Spring Plate - Band Stopper	1
10	B039 2660	Band - Right Door	1
11	B039 2594	Upper Guide Plate - By-pass Feed	1
12	B259 2594	Shaft - Feed	1
13	AB01 2313	Gear - 25Z	1
14	B121 4470	Right Lower Exit Guide Plate	1
16	B039 2658	Sponge - By-pass Feed	2
17	AF03 1060	By-pass Feed Roller	1
18	AA08 2101	Bushing - 6x10x6	2
19	B039 2610	Bracket - Paper End Sensor	1
20	AA06 6343	Spring - Paper End Sensor	1
21	B039 2611	Feeler - Paper End Sensor	1
22	GW02 0020	Photointerruptor:LG248NL1	1
23	B121 5259	Harness - Paper End Sensor	1
24	AG07 0514	Magnet Catch	1
25	B039 2651	Right Door Lever	1
26	A250 1388	Spring	1
27	B039 2670	Right Door	1
28	B039 2558	Driven Roller	2
29	B039 4488	Jam Removal Decal	1
30	B039 4480	Stepped Screw - M5	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 3008N	Tapping Screw - M3x8	
102	0451 3006N	Tapping Screw - 3x6	
103	0720 0040E	Retaining Ring - M4	

14.PCU 1 (B268/B269)

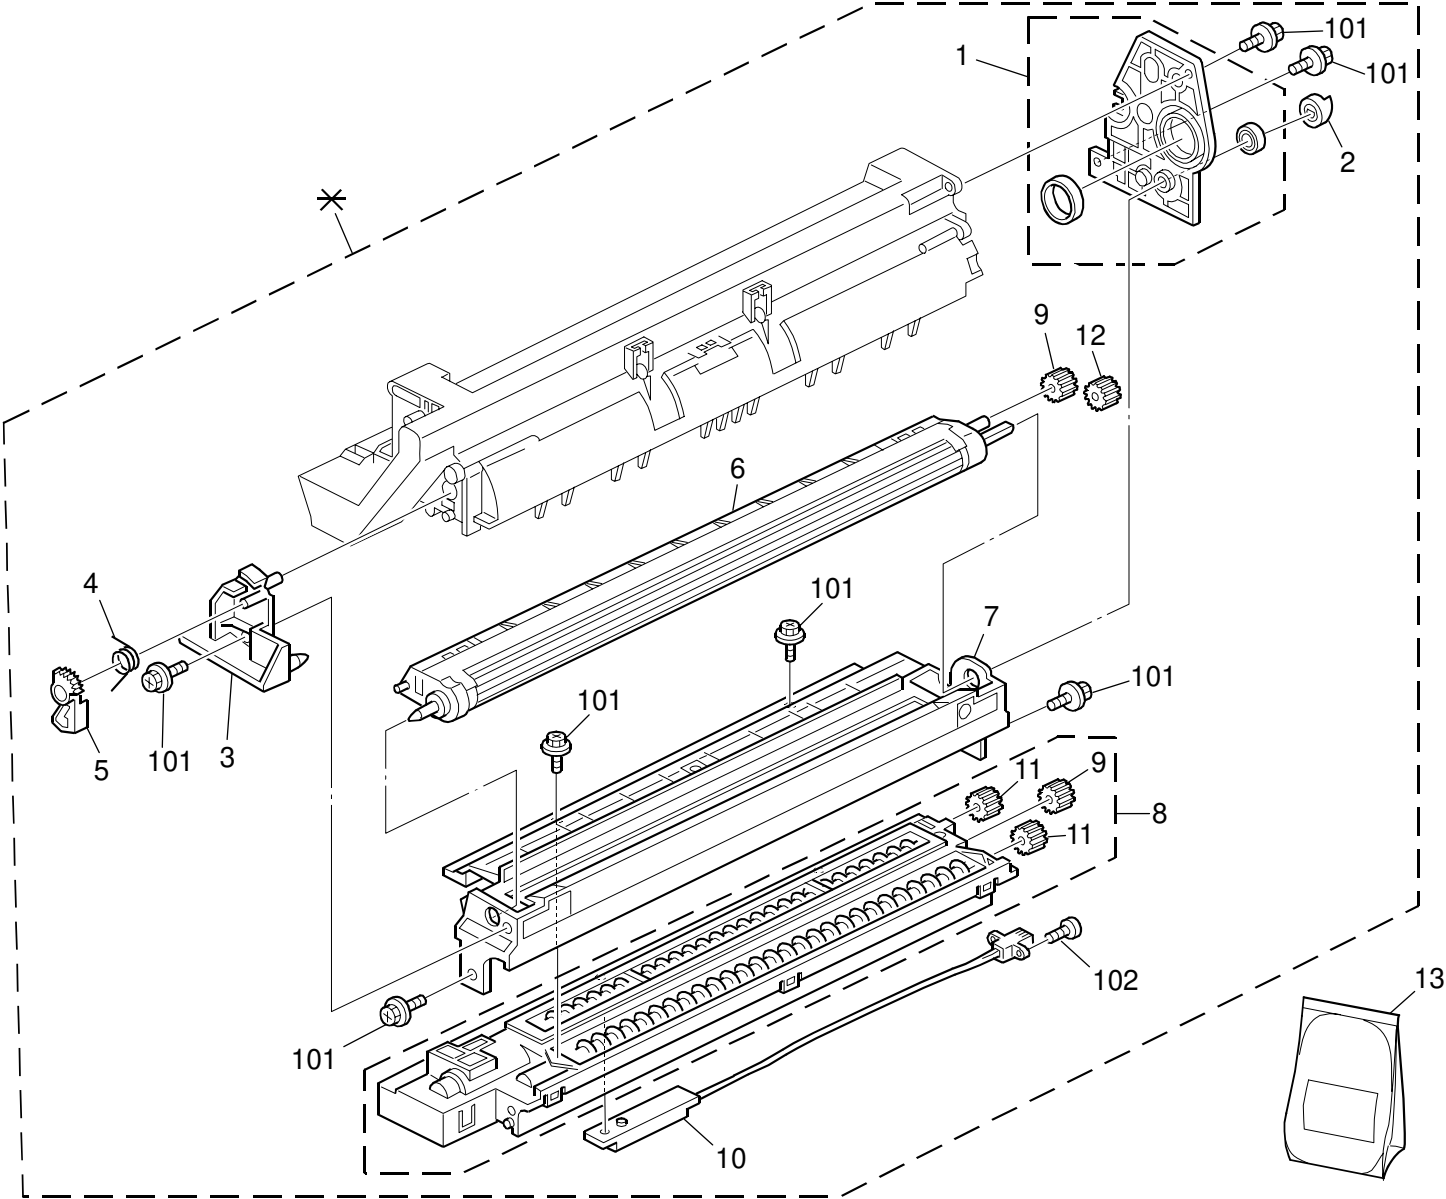


14.PCU 1 (B268/B269)



Index No.	Part No.	Description	Q'ty Per Assembly
*	B283 1876	Imaging Unit:Ass'y 	1
1	B259 2371	Rear Drum Stay	1
2	A267 3440	Development Joint	1
3	B039 2361	Front Side Plate - Drum	1
4	B039 2367	Drum Shutter Spring	1
5	B039 2362	Drum Shutter Gear	1
8	B259 3170	Development Case Ass'y	1
9	B039 3062	Idler Gear - 16z	2
10	B259 3390	Density Sensor:K-C2.5:Ass'y	1
11	B039 3245	Gear - 15Z	2
12	B039 3060	Development Roller Gear	1
13	B121 9640	Developer Type 28 Black	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0360 3006N	Screw - M3X6	
102	0452 3008N	Tapping Screw - M3x8	

15.PCU 2 (B268/B269)

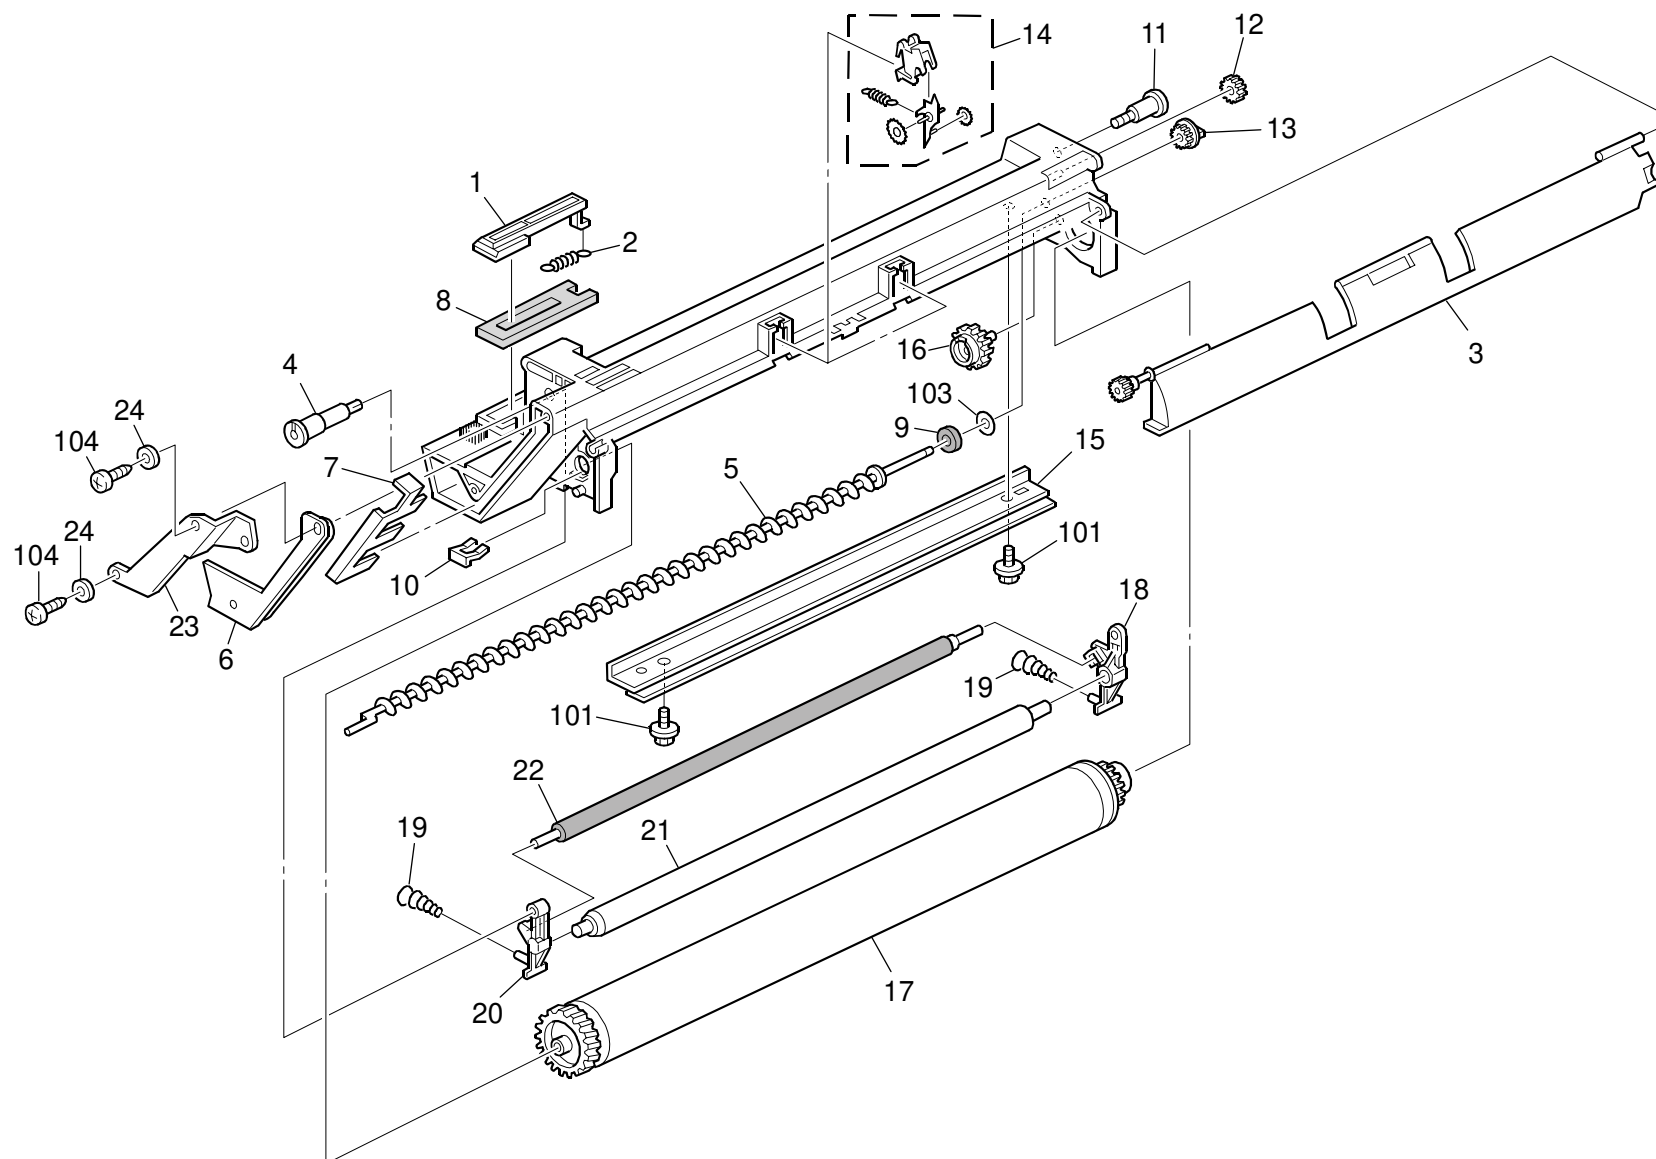


15.PCU 2 (B268/B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B121 2311	PCU Toner Supply Shutter	1
2	B039 2312	Shutter Spring	1
3	B039 2343	Drum Shutter	1
4	B039 2293	Pin - Front Pressure Arm	1
5	B039 2272	Recycled Toner Coil	1
6	B039 2321	Front PCU Cover	1
7	B039 2274	Recycled Toner Plate	1
9	B039 2276	Rear Bushing - Toner Coil	1
10	B039 2350	Drum Holder	1
11	AA14 3444	Stepped Screw	1
12	AB01 1403	Gear - 13Z	1
13	AB01 1402	Gear - 14Z	1
14	B039 2335	Pickoff Pawl	2
15	AD04 2059	Cleaning Blade Ass'y	1
16	B039 2288	Cam - Cleaning Blade	1
17	B039 9510	OPC Drum	1
18	B039 2295	Rear Pressure Arm - Charge Roller	1
19	B039 2287	Charge Roller Spring	2
20	B039 2292	Front Pressure Arm - Charge Roller	1
21	AD02 7018	Roller:Charge:A3	1
22	AD04 2058	Charge Cleaner Brush Roller	1
23	B259 2325	OPC Drum Shutter Plate	1
24	B039 2329	Spacer - M3	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0452 3008N	Tapping Screw - M3x8	
103	0736 0610	Bushing 6x10	
104	0452 3012N	Binding Self-tapping Screw:M3x12	

16.TONER SUPPLY UNIT (B268/B269)

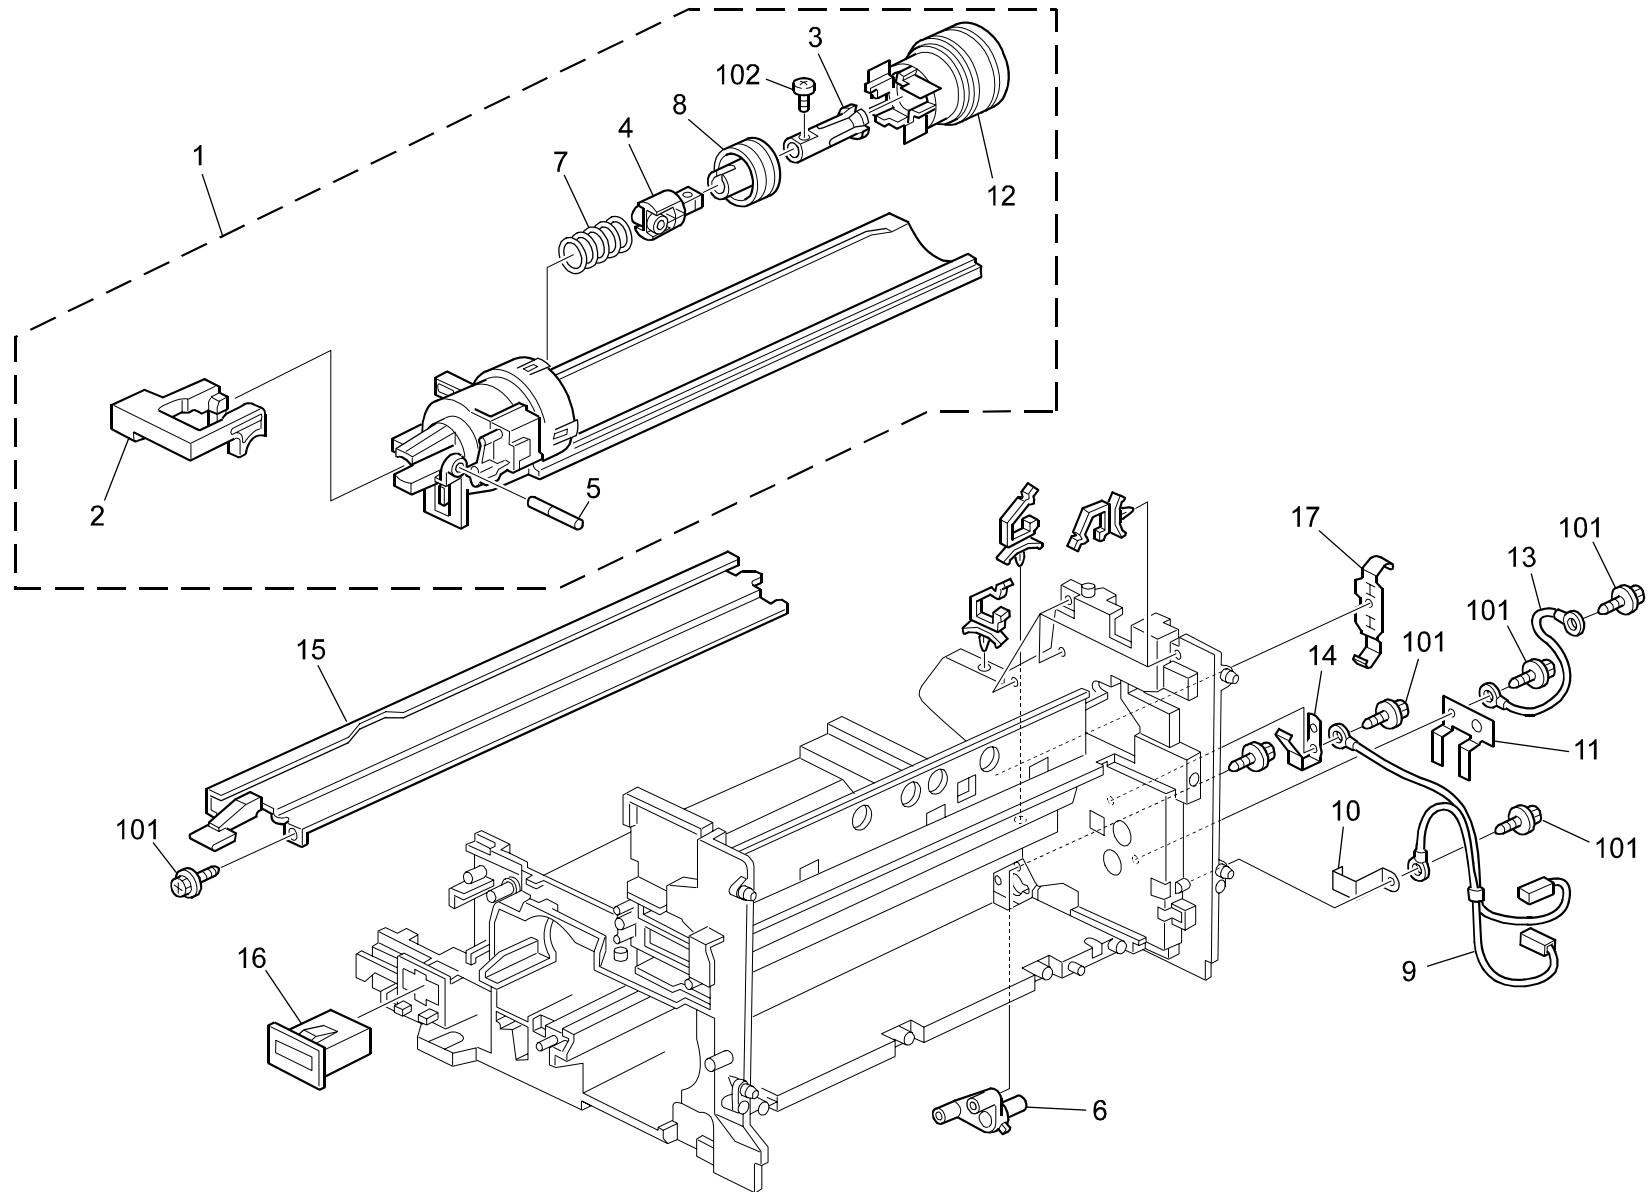


16.TONER SUPPLY UNIT (B268/B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B259 3031	Toner Supply Unit	1
2	B039 3360	Cam - Handle	1
3	A184 3420	Bottle Chuck	1
4	A184 3421	Chuck Shaft	1
5	B259 3422	Shaft:Slide	1
6	B039 1141	Shaft - Paper Feed Frame	1
7	A267 3556	Chuck Spring - Tonner Bottle	1
8	G020 3334	Slider Ass'y	1
9	B243 5233	Harness - High Voltage Line C/T	1
10	B039 3870	Terminal - Transfer	1
11	B039 2578	Grounding Plate	1
12	B039 3381	Cover:Toner Bottle:Ass'y	1
13	B121 5219	Harness - Ground Wire	1
14	B039 2382	Quenching Lamp Terminal	1
15	B039 3392	Guide Plate - Tonner Supply Unit	1
16	AX31 0046	Total Counter:7fig:24v	1
17	B039 3395	Ground Plate - Toner Supply Unit	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 3008N	Tapping Screw - M3x8	
102	0452 3008N	Tapping Screw - M3x8	

17.FUSING UNIT (B268/B269)

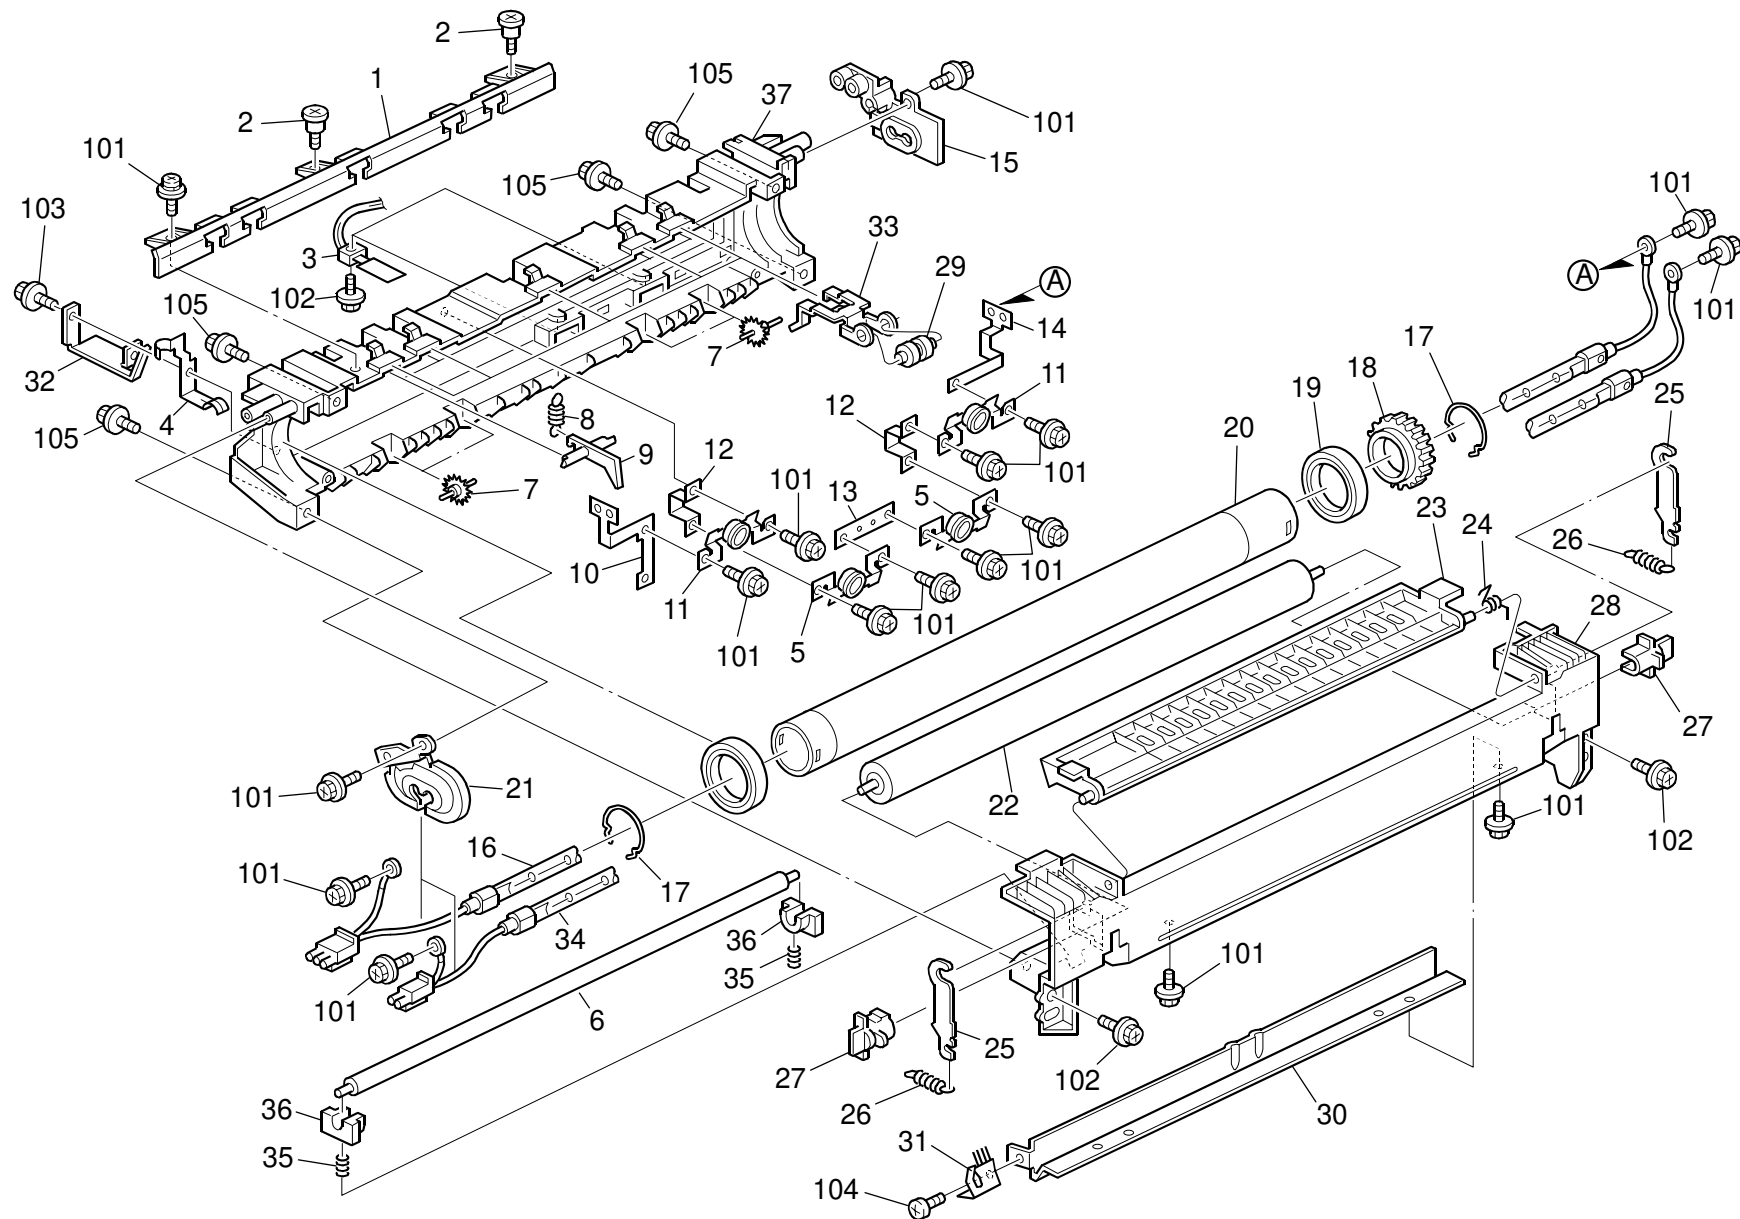


17.FUSING UNIT (B268/B269)

Index No.	Part No.	Description	Q'ty Per Assembly
*	B259 4006	Fusing Unit:EU:Ass'y (B26949)	1
*	B259 4007	Fusing Unit:TWN:Ass'y (B26859/B26959)	1
1	B039 4102	Fusing Exit Guide	1
2	AA14 3870	Stepped Screw	2
3	AW10 0073	Thermistor	1
4	B039 4118	Front Ground Plate	1
5	B039 4120	Thermostat	2
6	B259 4015	Fusing Cleaning Roller	1
7	A232 2374	Spur	4
8	AA06 6637	Stripper Pawl Spring	5
9	AE04 4062	Stripper Pawls	5
10	B121 4111	Front Electrode Plate	1
11	B121 4120	Thermostat Ass'y	2
12	B121 4113	Short Electrode Plate	2
13	B121 4112	Long Electrode Plate	1
14	B121 4114	Rear Electrode Plate	1
15	B259 4091	Rear Heater Holder	1
16	B259 4028	Heater - 230V/550W	1
16	B259 4212	Heater:110V:600W:Ass'y	1
16	B259 4216	Heater:110V:550W:Ass'y	1
17	G029 4140	External Circlip	2
18	B039 4171	Gear - 41Z	1
19	G052 4618	Bearing 30x42x7	2
20	AE01 1113	Hot Roller MM30	1
21	B121 4090	Front Heater Holder	1
22	AE02 0150	Pressure Roller	1
23	B039 4107	Fusing Exit Door	1
24	AA06 6635	Spring - Fusing Exit Guide	1
25	B039 4135	Pressure Roller Lever	2
26	AA06 2324	Pressure Spring	2
27	G029 4174	Pressure Roller Bushing	2
28	B245 4054	Frame:Pressure:Printing	1
29	B039 4170	Stripper Pawls Roller	5
30	B259 4115	Fusing Entrance Guide Plate	1
31	B039 4117	Discharge Brush	1


Index No.	Part No.	Description	Q'ty Per Assembly
32	B039 4114	Rear Ground Plate	1
33	B039 4168	Stripper Pawlsstopper	5
34	B259 4214	Heater - 230V/600W	1
35	AA06 3570	Tension Spring	2
36	AA08 2073	Roller Busing	2
37	B259 4103	Frame:Fusing	1
101	0804 6123	Hexagonal Bolt:W/Washer:M3x8	
102	0954 3010N	Screw:Polished Round/Spring:M3x10	
103	0452 3008N	Tapping Screw - M3x8	
104	0313 0060N	Screw - M3X6	
105	0954 3010N	Screw:Polished Round/Spring:M3x10	

18.PAPER EXIT SECTION (B268/B269)

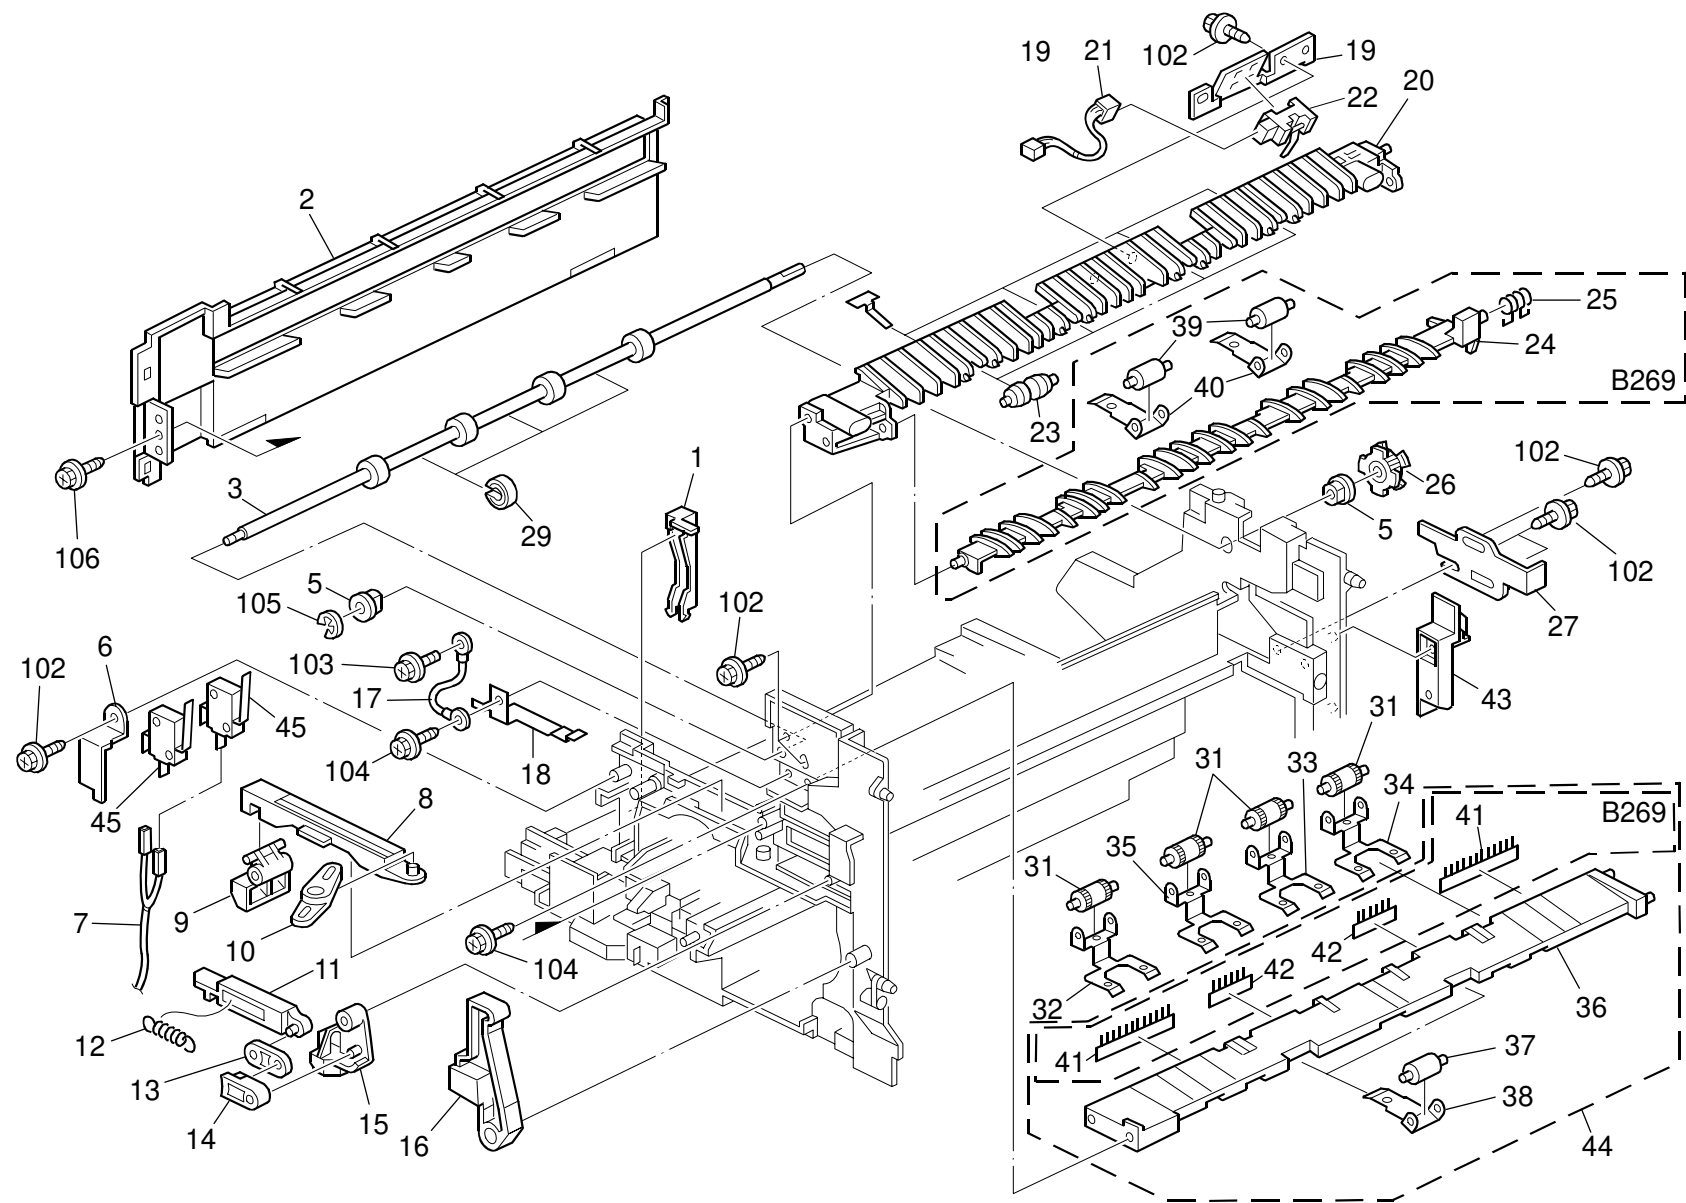

43

19.DUPLEX UNIT 1 (B269)

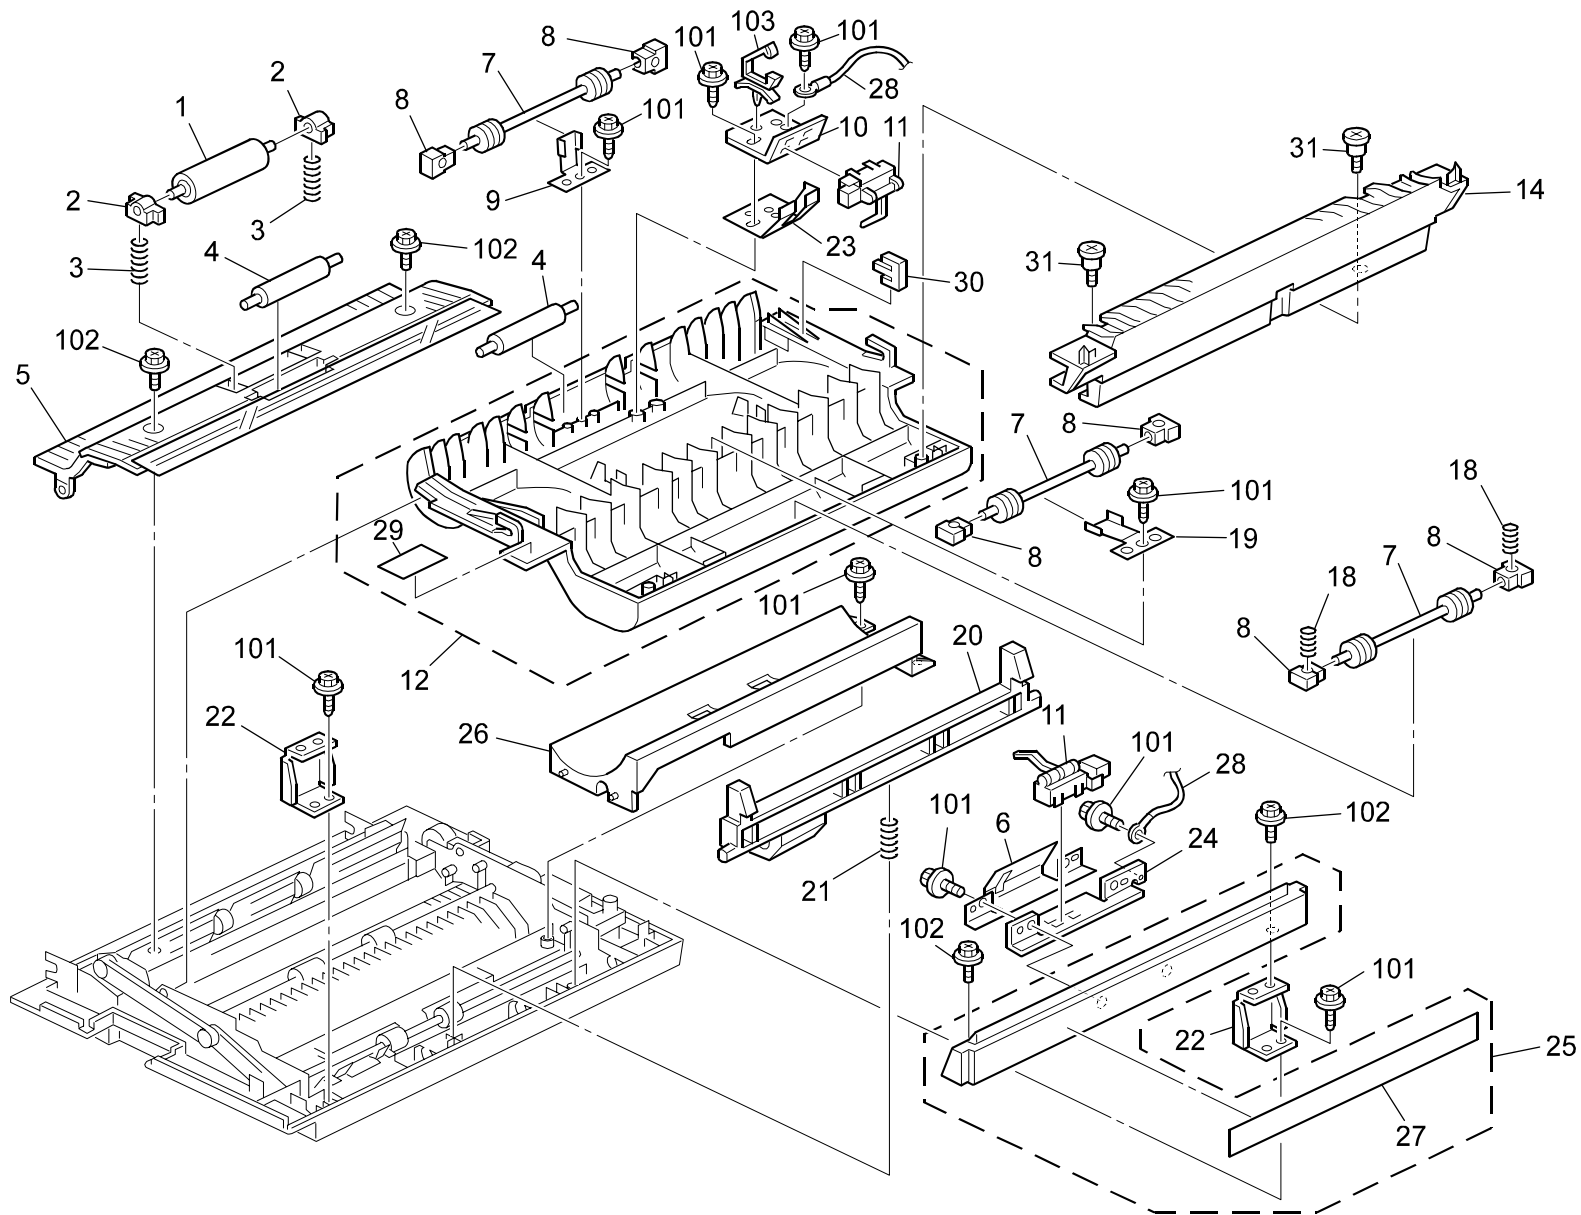


19.DUPLEX UNIT 1 (B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AF02 2138	Vertical Transport Roller	1
2	AA08 0268	Bushing - Vertical Transport	2
3	AA06 3399	Spring - Vertical Transport	2
4	B039 2558	Driven Roller	2
5	B043 4662	Guide Plate - Vertical Transport	1
6	B043 4676	Bracket - Duplex Entrance Sensor	1
7	G060 2641	Transport Driven Roller - Middle	3
8	AA08 0313	Driven Roller Bushing	6
9	B043 4647	Lower Spring Plate - Driven Roller	1
10	B123 4675	Exit Duplex Sensor Bracket	1
11	AW02 0181	Paper Feed Sensor	2
12	B123 4640	Driven Duplex Guide Plate Ass'y	1
14	B123 4670	Right Lower Exit Guide Plate Ass'y	1
18	B043 4645	Spring - 2n	2
19	B043 4646	Upper Spring Plate - Driven Roller	1
20	B043 4651	Door Lever	1
21	A250 1388	Spring	1
22	B043 4671	Bracket - Upper Guide Plate	2
23	B123 4679	Exit Sensor Cover	1
24	B043 4674	Cover - Duplex Entrance Sensor	1
25	B123 4977	Right Upper Exit Guide Plate Ass'y	1
26	B123 4617	Entrance Duplex Guide Plate	1
27	B123 4691	Decal	1
28	B123 5245	Harness:Duplex:Ground Wire	2
29	B043 4692	Grip Decal	1
30	B043 4642	Stopper - Guide Plate	1
31	B039 4480	Stepped Screw - M5	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 3008N	Tapping Screw - M3x8	
102	0451 3006N	Tapping Screw - 3x6	
103	1105 0511	Harness Clamp - LWS-0306ZC	

20.DUPLEX UNIT 2 (B269)

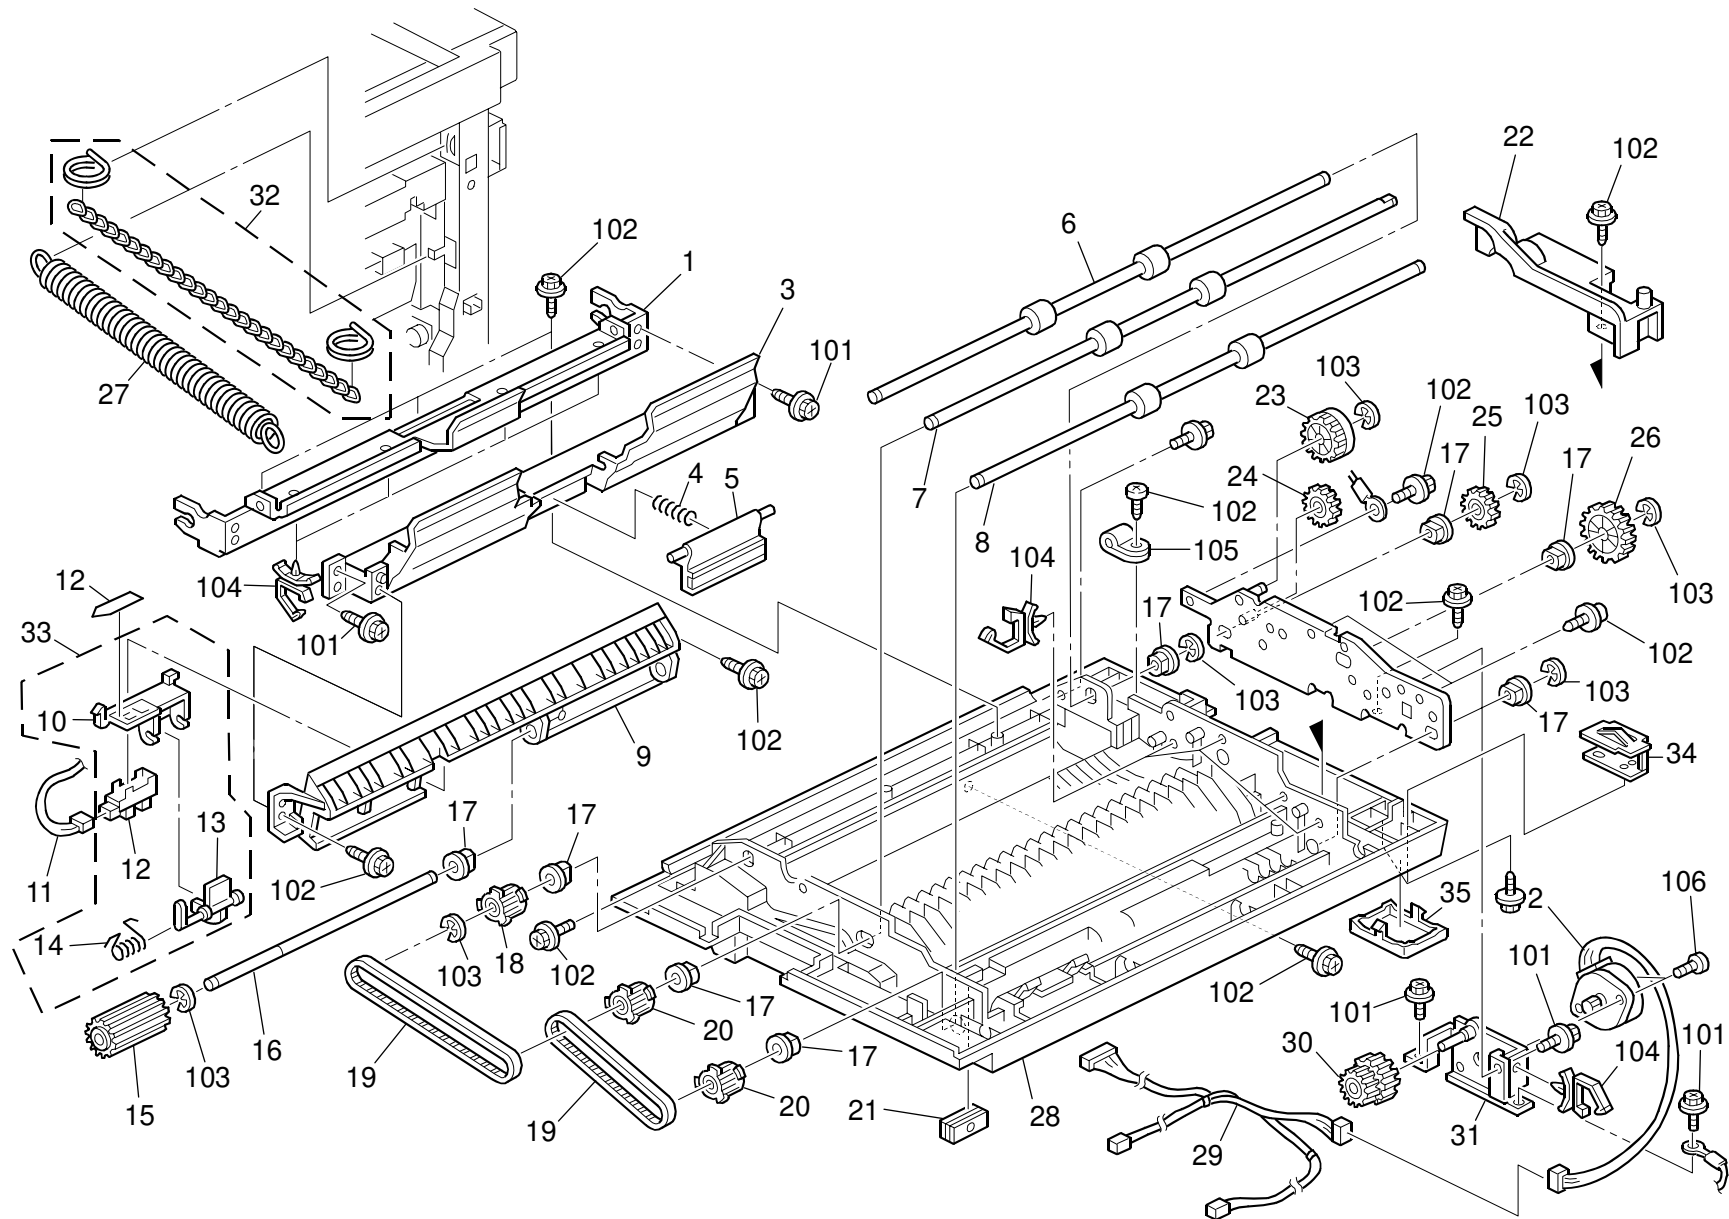


20.DUPLEX UNIT 2 (B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B043 4609	Duplex Lower Stay	1
2	B261 4710	Stepper Motor	1
3	B043 4667	By-pass Feed Guide - Lower	1
4	B043 4685	Spring - 2.8n	1
5	B261 4650	Separation Pad	1
6	B261 4624	Transport Roller:Drive:Duplex:Exit	1
7	B261 4623	Transport Roller - Connecting	1
8	B261 4625	Transport Roller:Drive:Duplex:Entrance	1
9	B043 4684	By-pass Feed Guide - Upper	1
10	B039 2610	Bracket - Paper End Sensor	1
11	B123 5252	Harness - Duplex Paper End Sensor	1
12	GW02 0020	Photointerruptor:LG248NI1	1
13	B039 2611	Feeler - Paper End Sensor	1
14	AA06 6343	Spring - Paper End Sensor	1
15	AF03 1060	By-pass Feed Roller	1
16	B261 4686	Manual Feed Drive Shaft	1
17	AA08 2101	Bushing - 6x10x6	8
18	B043 4624	Pulley - 30Z	1
19	B123 4505	Timing Belt - 40S2M290	2
20	AB03 0569	Pulley - 30T	2
21	AG07 0514	Magnet Catch	1
22	B123 4661	Rear Duplex Inner Cover	1
23	B043 4714	Gear - 25Z	1
24	B043 4633	Gear - 22Z	1
25	B043 4713	Gear - 25Z	1
26	B043 4631	Gear - 38Z	1
27	B123 4697	Tension Spring 27n	1
28	B123 4627	Adhesion Duplex Cover	1
29	B123 5241	Harness - Duplex Unit	1
30	B043 4632	Coupled Gear 25/59z	1
31	B261 4705	Stepper Motor Bracket	1
32	B282 4693	Stopper:Duplex Unit:Ass'y	1
34	B043 4694	Chain Bracket	1
35	B043 4698	Cap - 30x36	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0450 3008N	Tapping Screw - M3x8	
103	0720 0040E	Retaining Ring - M4	
104	1105 0511	Harness Clamp - LWS-0306ZC	
105	1105 0009	Nylon Clamp - 5n	
106	0433 0060N	Pan Self-tapping Screw:3x6	
107	0451 3006N	Tapping Screw - 3x6	

21.DUPLEX UNIT 3 (B269)

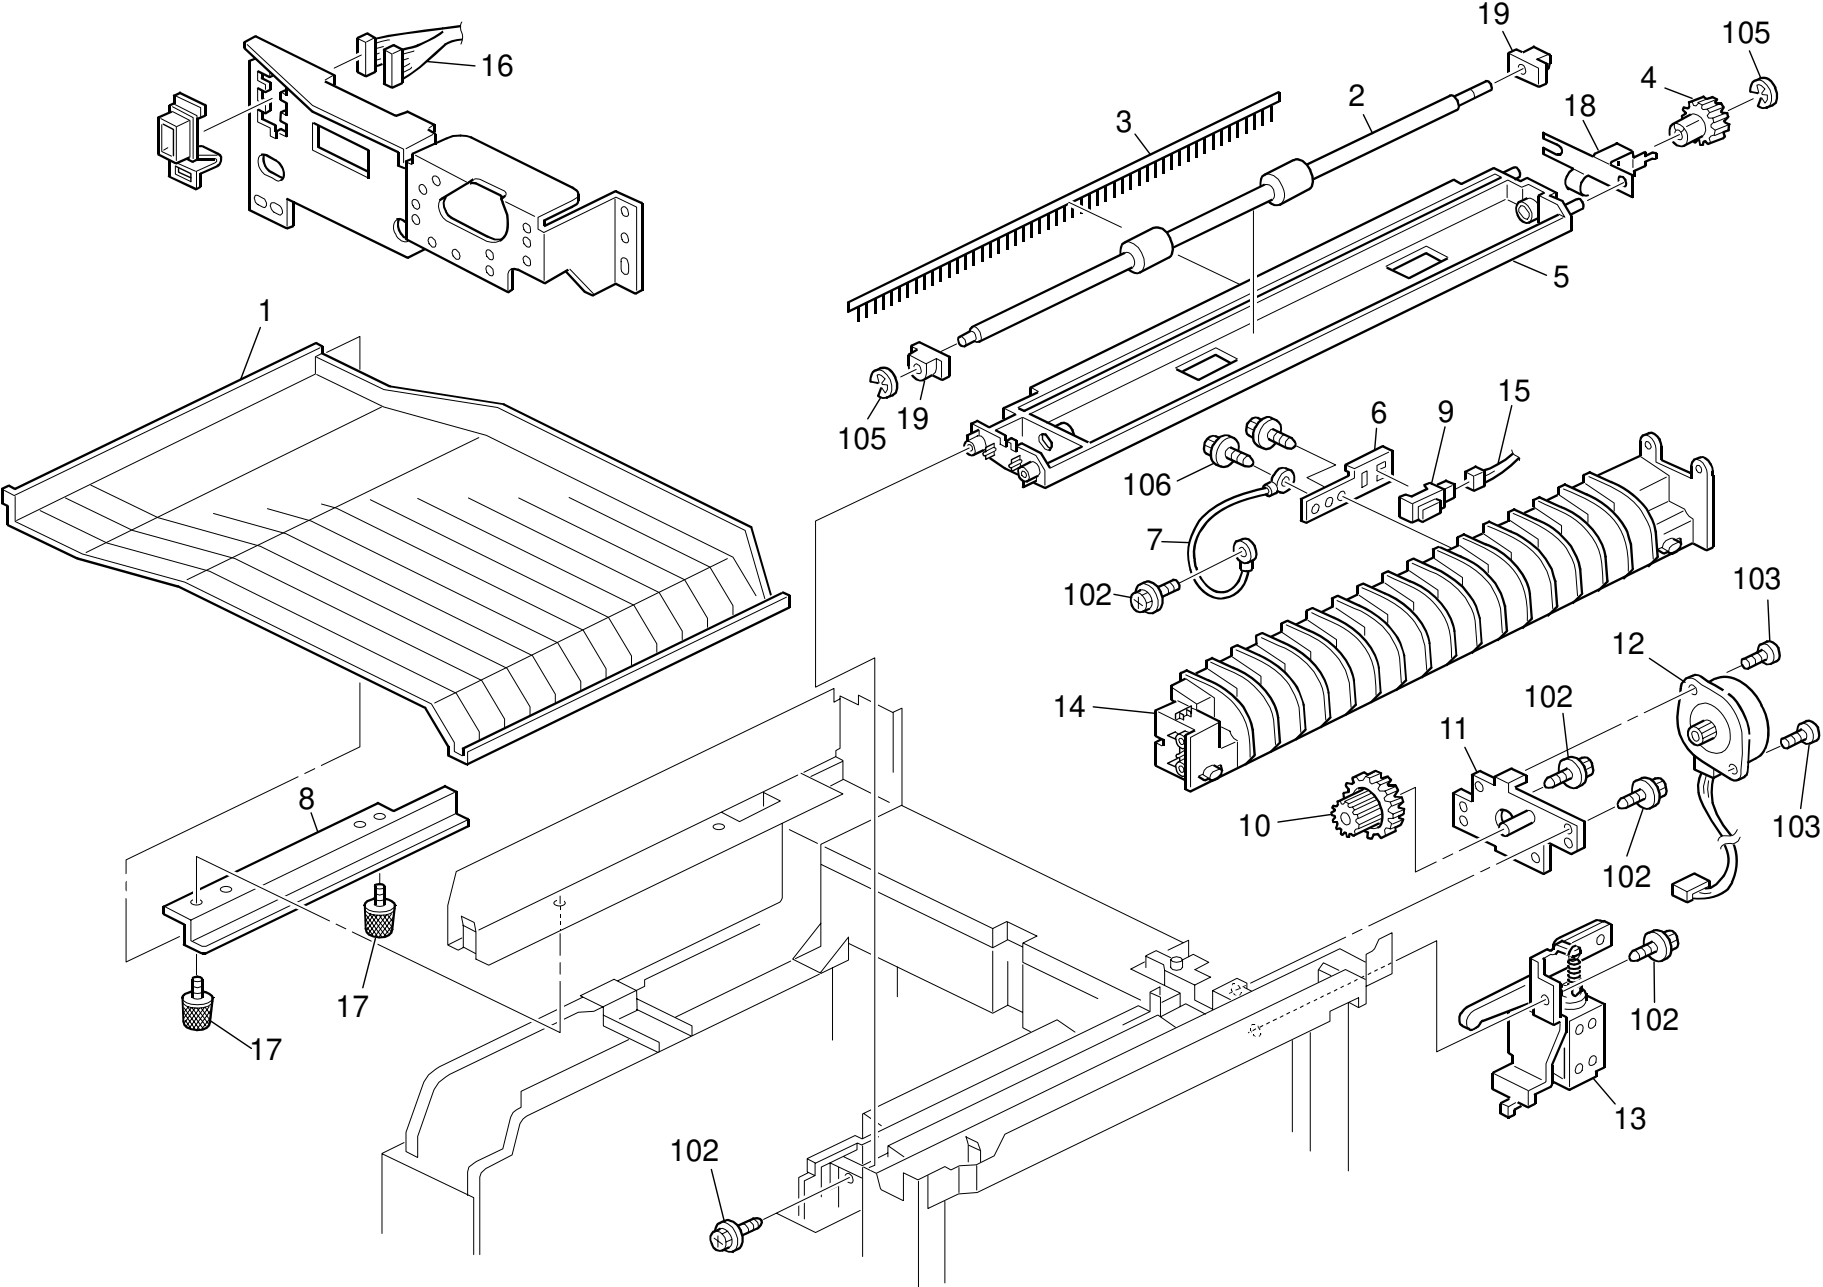


21.DUPLEX UNIT 3 (B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B043 4993	Reverser Shelf	1
2	B261 4989	Reverse Roller	1
3	B121 4490	Antistatic Brush	1
4	B043 4975	Gear - 18Z	1
5	B269 4981	Guide Plate:Reverse:Left Upper	1
6	B123 4973	Reverse Paper Feed Sensor Bracket	1
7	B123 5245	Harness:Duplex:Ground Wire	1
8	B043 4998	Rail - Reverser Shelf	1
9	GW01 0007	Photo Refiection Sensor:Exit	1
10	B043 4991	Coupled Gear - 15/51z	1
11	B261 4994	Stepper Motor Bracket	1
12	B261 4710	Stepper Motor	1
13	B277 4984	DC Solenoid:Ass'y	1
14	B123 4502	Middle Reverse Guide Plate	1
15	B123 5253	Harness - Duplex Sensor	1
16	B122 5255	Harness - 1bin Machine Or Copier	1
17	G104 5141	Knob Screw:M3	2
18	B123 4506	Reverse Roller Ground Plate	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3008N	Tapping Screw - M3x8	
102	0450 3008N	Tapping Screw - M3x8	
103	0313 0060N	Screw - M3X6	
105	0720 0040E	Retaining Ring - M4	
106	0451 3006N	Tapping Screw - M3x6	

22.DRIVE SECTION (B269)

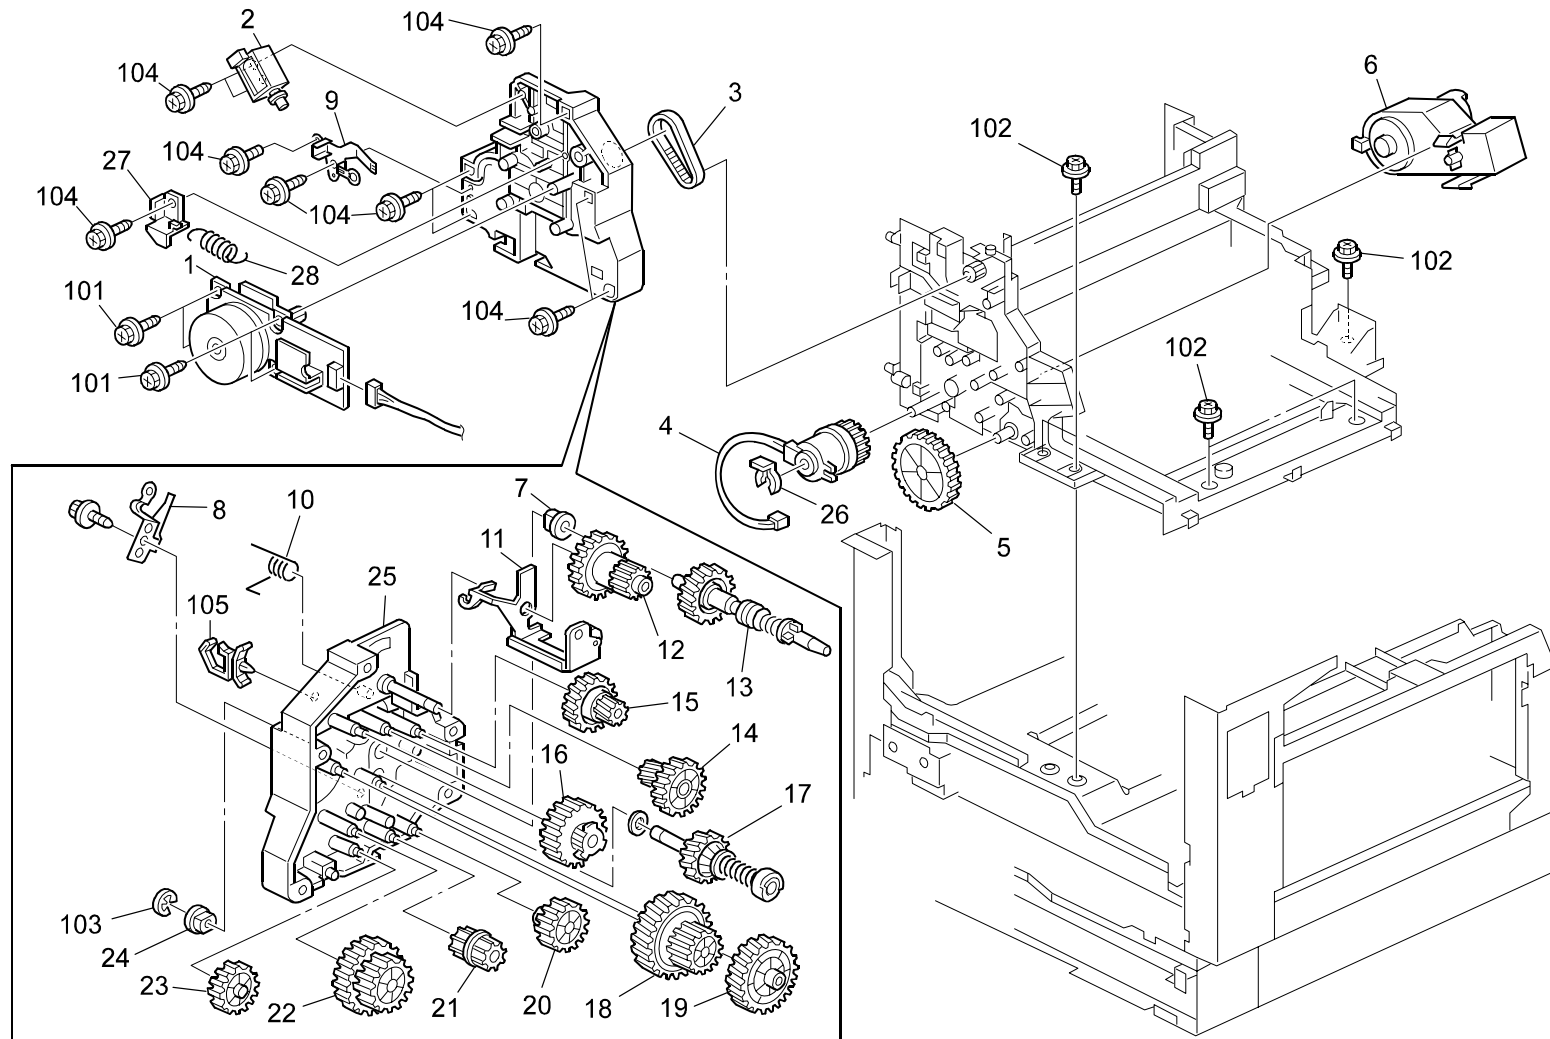


22.DRIVE SECTION (B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B276 1055	Brushless Motor DC24V/20W	1
2	B259 1135	DC Solenoid Ass'y	1
3	B039 1162	Timing Belt - 226XL	1
4	B276 1149	Magnetic Clutch:0.5N M:Z39	1
5	B039 1170	Gear - 63Z	1
6	B276 3310	DC Motor:Toner Bottle:Kir-C3:Ass'y	1
7	B039 1144	Bushing - 8x16x9	1
8	B282 1135	Electrode Plate:Development:Ass'y	1
9	B282 1128	Ground	1
10	B121 1161	Large Spring	1
11	B259 1157	Fusing Swivel Bracket	1
12	B039 1156	Coupled Gear - 20/49z (12)	1
13	B039 1148	Drum Shaft (02)	1
14	B039 1145	Coupled Gear - 34/63z (01)	1
15	B039 1146	Coupled Gear - 32/71z (04)	1
16	B039 1155	Gear/pulley - 61/34Z (11)	1
17	B259 1174	Development Drive Shaft (03)	1
18	B039 1154	Coupled Gear - 37/97z (05)	1
19	B039 1173	Gear - 78Z (06)	1
20	B039 1168	Gear - 32Z (10)	1
21	B039 1167	Gear - 22Z (09)	1
22	B039 1165	Coupled Gear - 49/59/38z (08)	1
23	B039 1166	Gear - 37Z (07)	1
24	5304 1639	Bushing - 8mm	1
25	B121 1140	Main Drive Housing	1
26	AA10 0015	Snap Ring - M6	1
27	B121 1145	Harness Hook	1
28	B121 1162	Small Spring	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 4010N	Tapping Screw:M4x10	
102	0454 3008Q	Tapping Screw	
103	0720 0060E	Retaining Ring - M6	
104	0450 3008N	Tapping Screw - M3x8	
105	1105 0488	Harness Clamp	

23.ELECTRICAL SECTION 1 (B268/B269)

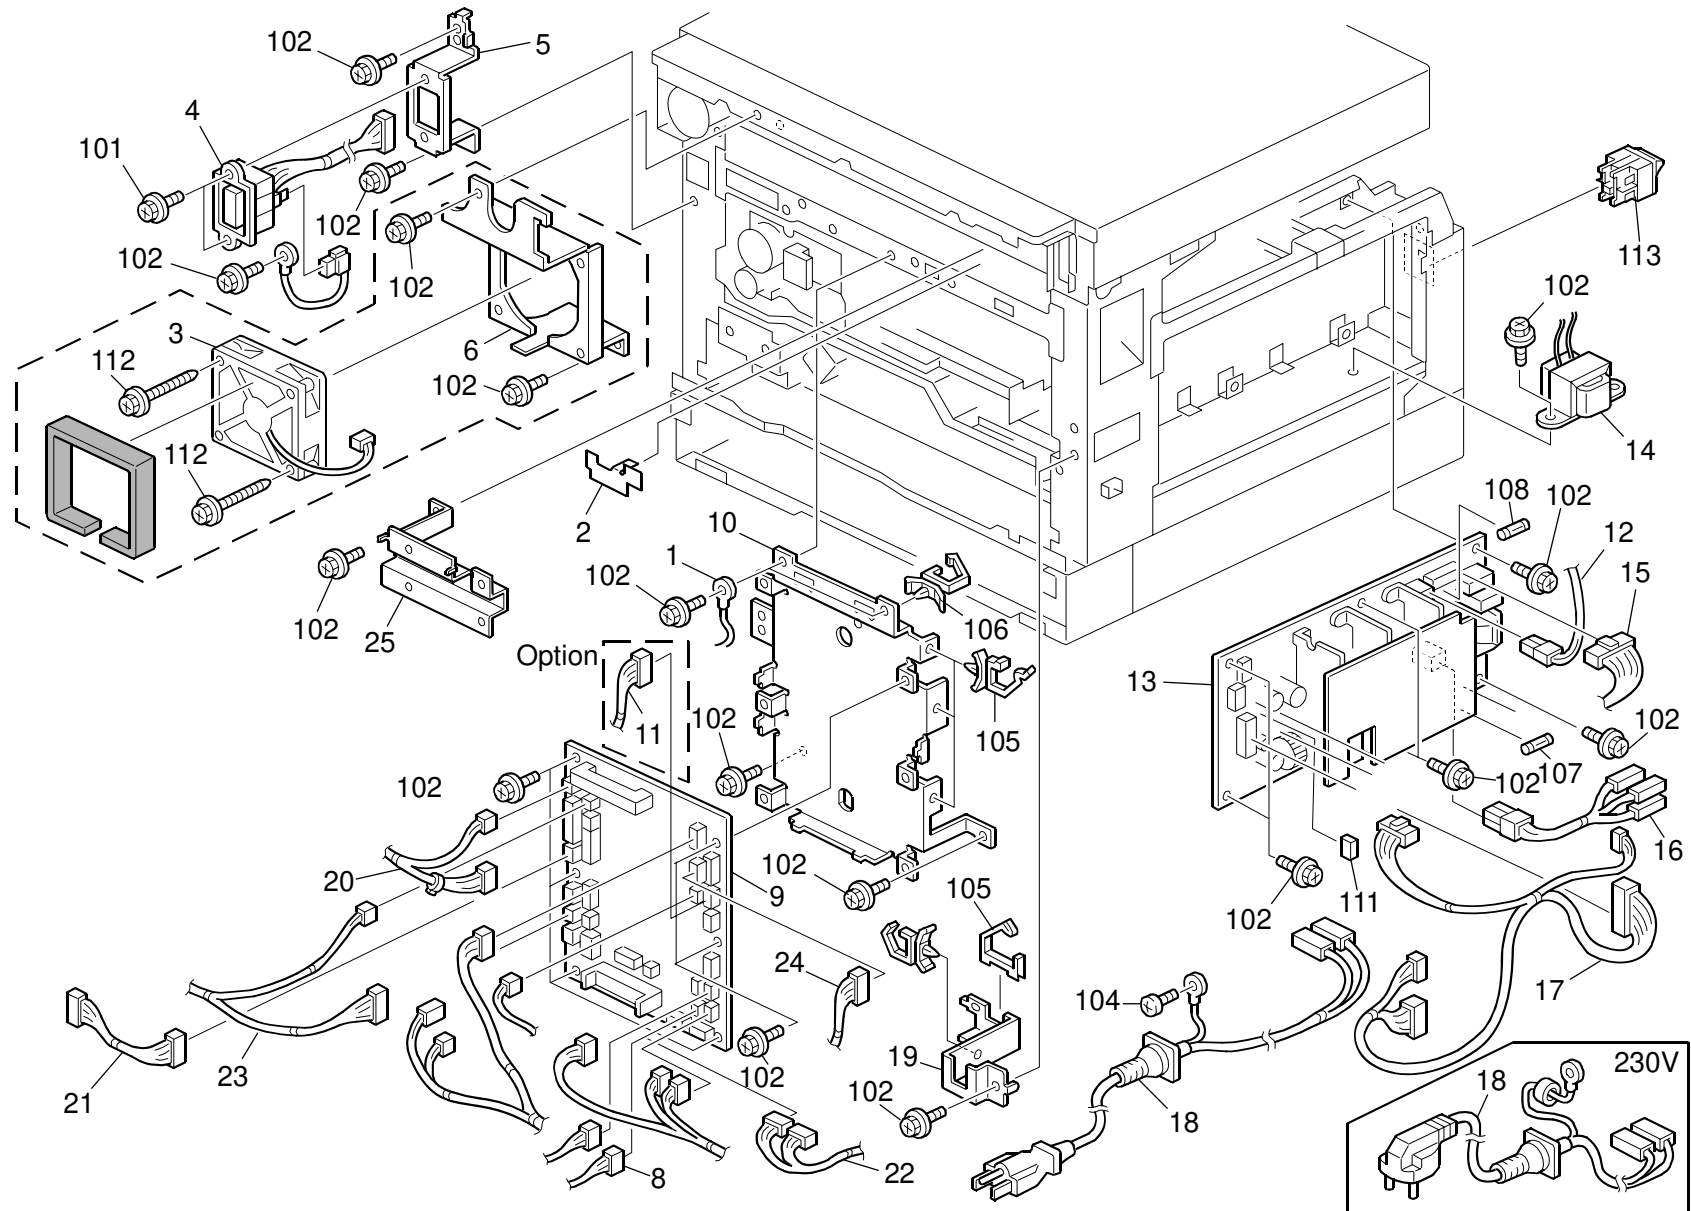


23.ELECTRICAL SECTION 1 (B268/B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B121 5208	Harness - Ground Wire Scanner (B26859)	1
1	B122 5208	Ground Wire (B26949/59)	1
2	B121 5822	Guide Mylar	1
3	AX64 0169	Fan DC24V 1.92W	1
4	B121 5240	Harness - Document Feeder	1
5	B039 5831	ADF Plug Bracket	1
6	B123 1102	Rear Fan Bracket	1
8	B121 5215	Harness - Paper End Sensor No.1	1
9	B276 5103	PCB BICU ASIA	1
10	B121 5810	BICU Bracket	1
11	B243 5261	Harness - Key Counter	1
11	B243 5262	Harness - Key Counter LAN (B26949/59)	1
12	B243 5214	Harness:AC:Fusing:TWN	1
12	B243 5217	Harness - AC Fusing EU	1
13	AZ23 0200	Power Supply Unit - 100V	1
13	AZ23 0219	Power Supply Unit - 230V	1
14	B243 5018	Choke Coil - B2435018	1
15	B243 5228	Harness - AC Dehumidifier EXP (B268)	1
15	B244 5228	Harness - AC Dehumidifier EXP (B269)	1
16	B243 5226	Harness - AC Switch 187	1
17	B243 5230	Harness - Power Supply Unit	1
18	B121 5742	Power Supply Cord Stopper NA Ass'y (B26859/B26959)	1
18	B039 5743	Power Supply Cord - 230v (B26949)	1
19	B121 5825	Power Supply Cord Bracket	1
20	B121 5200	Harness - Scanner Motor	1
21	B243 5203	Harness - Main Motor	1
22	B122 5211	Harness - Paper Feed No.2	1
23	B121 5212	Harness - Manual Feed	1
24	B121 5220	Harness - Hps	1
25	B122 5821	Box Holder	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3008N	Tapping Screw - M3x8	
102	0451 3006N	Tapping Screw - M3x6	
104	0805 0089	Retaining Ring - M4	
105	1105 0487	Harness Clamp	
106	1105 0511	Harness Clamp - LWS-0306ZC	
107	1107 0391	Fuse - 5A 125V	
108	1107 0629	Fuse: Ceramic Case:15A 125V	
112	0451 3030N	Tapping Screw:3x30	
113	1204 2608	Rocker Switch:Sddje33900	

24.ELECTRICAL SECTION 2 (B268/B269)

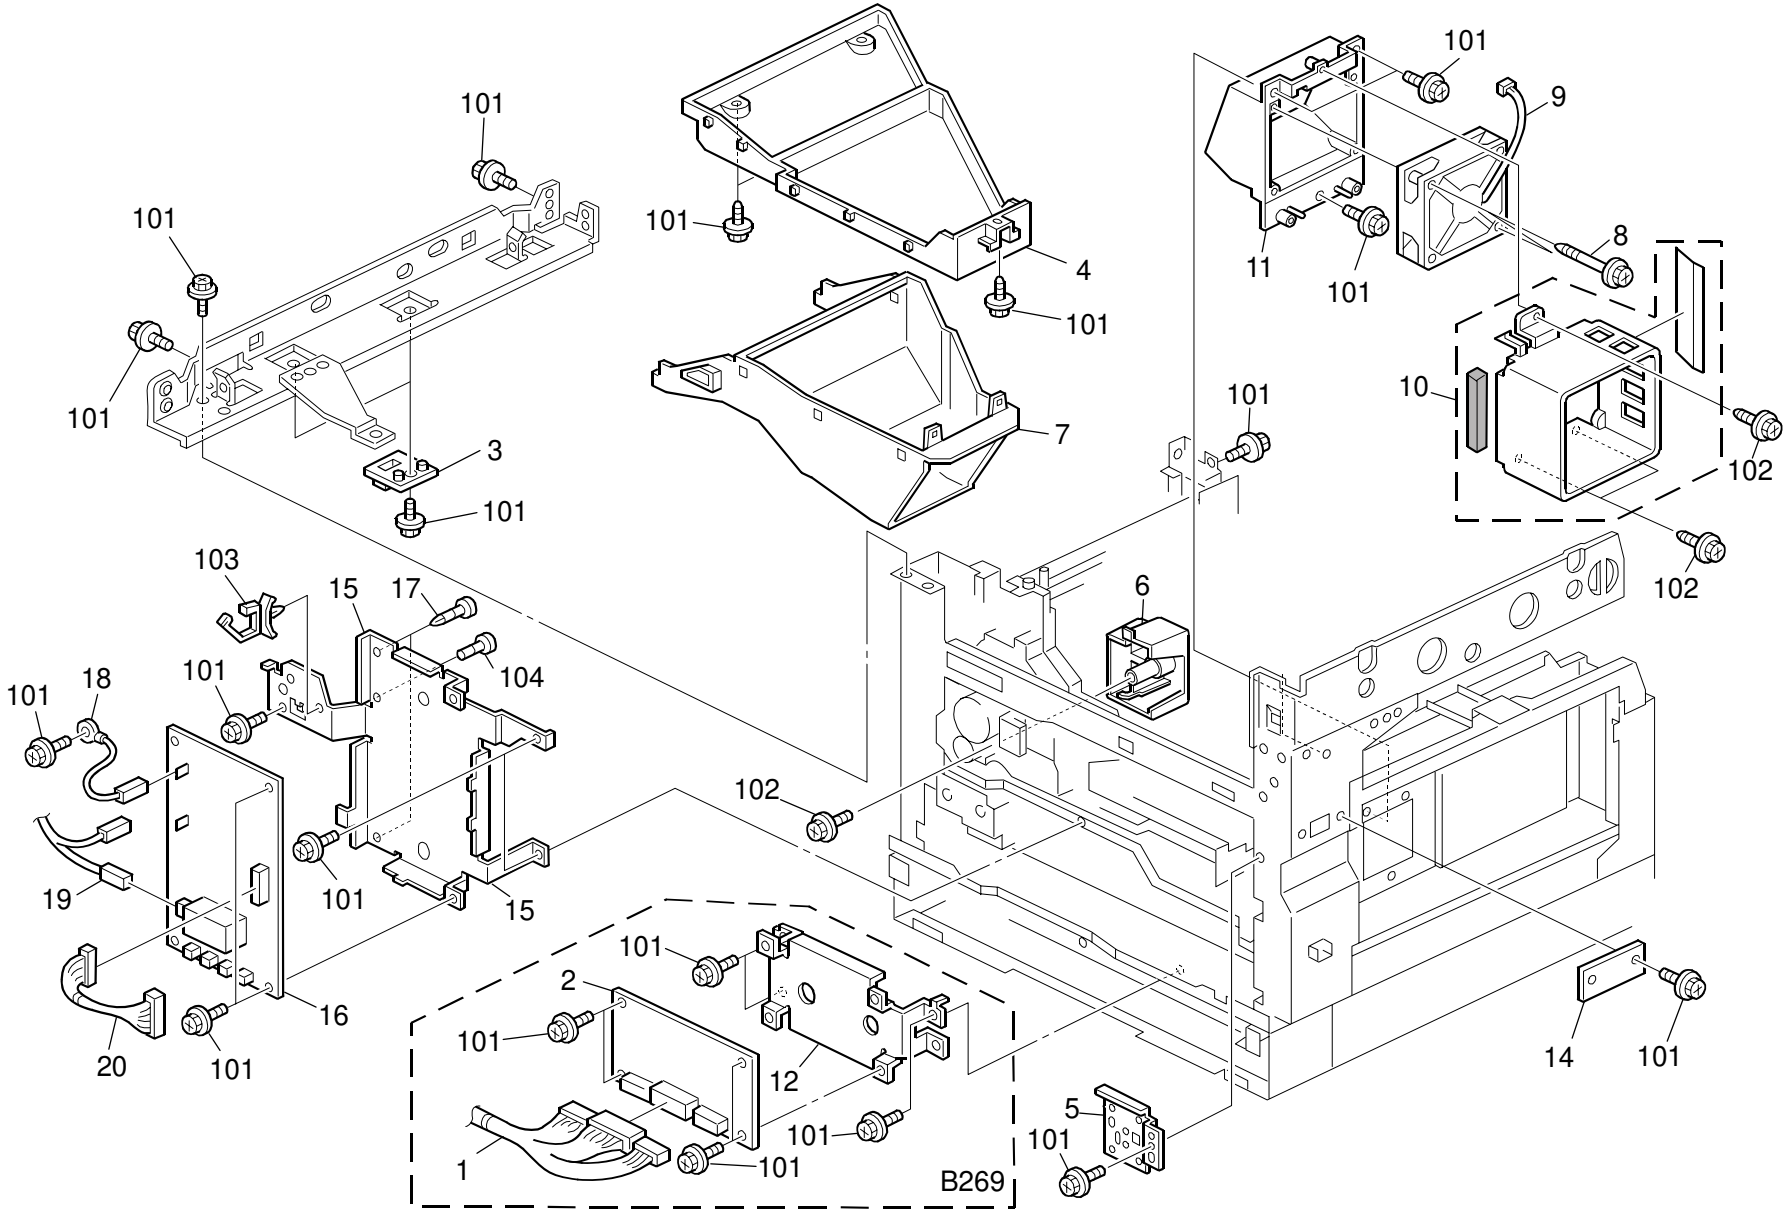


24.ELECTRICAL SECTION 2 (B268/B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B123 5243	Harness Duplex Ass'y	1
2	B244 5155	PCB DCB	1
3	B039 1073	Right Door Stopper	2
4	B121 1110	Upper Main Duct	1
5	B122 1075	Front Reverse Sub-unit Holder	1
6	B121 1112	Frame Duct	1
7	B121 1108	Lower Main Duct Ass'y	1
8	B259 1119	Tapping Screw:M3x33	2
9	B259 1106	Fan Motor - MM80	1
10	B121 1107	Exhaust Duct	1
11	B121 1109	Left Duct Ass'y	1
12	B123 5851	Dcu Bracket	1
14	B039 5887	Heater Switch Cover	1
15	B121 5841	Bct Power Pack Bracket	1
16	AZ32 0152	Power Pack Bct	1
17	G020 5871	Spacer - KGLS-12RF	2
18	B243 5232	Harness - High Voltage Line B	1
19	B243 5233	Harness - High Voltage Line C/T	1
20	B243 5231	Harness - High Voltage	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0450 3008N	Tapping Screw - M3x8	
103	1105 0487	Harness Clamp	
104	1105 0499	Support Spacer - M3x29	

25.FRAME SECTION 1 (B268/B269)

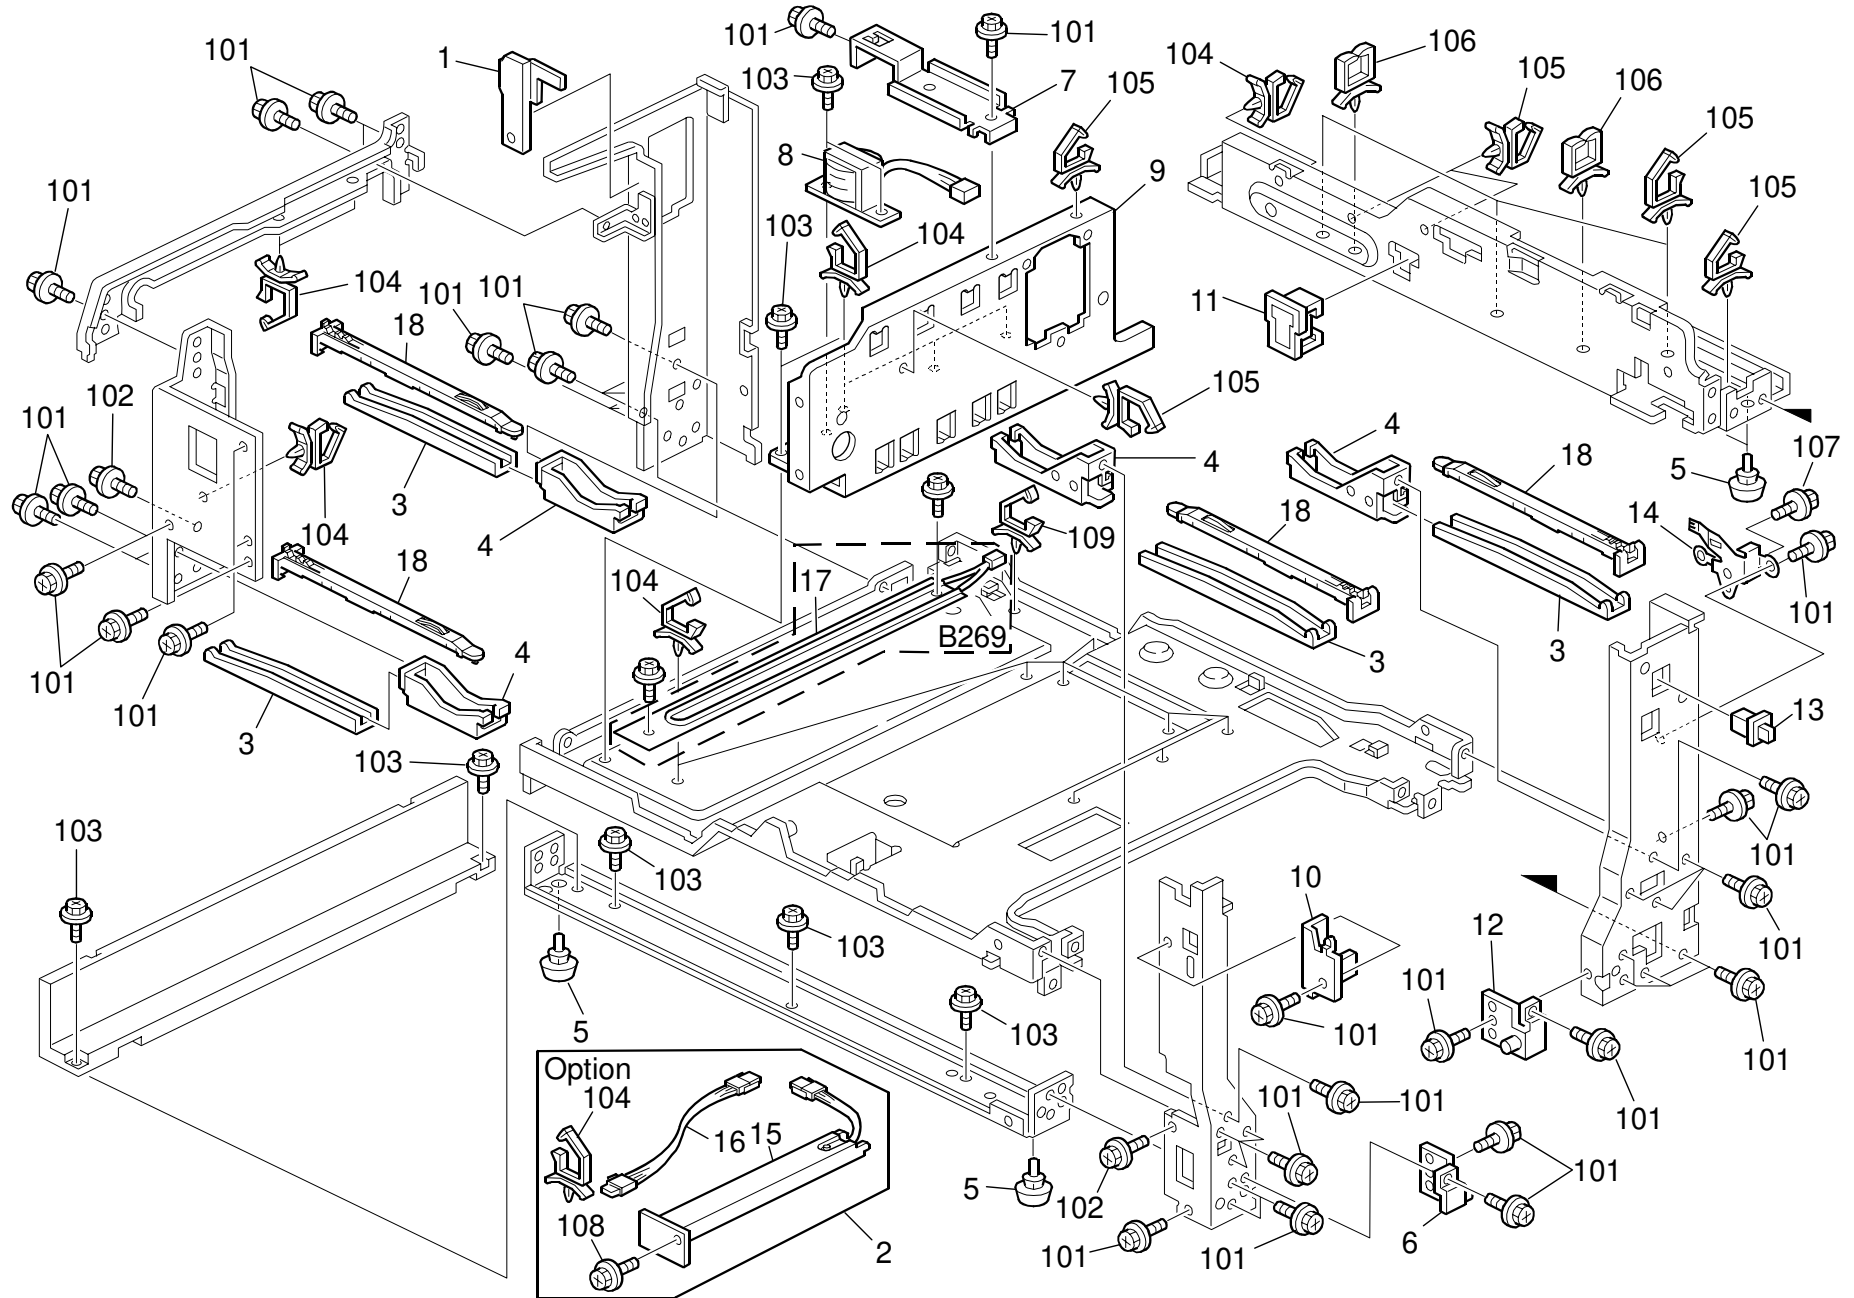


25.FRAME SECTION 1 (B268/B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B121 1367	Rear Exit Cover B EU (B268)	1
1	B122 1369	Rear Exit Cover EU (B269)	1
2	B040 7056	Heater:Paper Feed:NO.2:NA:Ass'y	1
2	B040 7057	Heater:Paper Feed:NO.2:EU:Ass'y	1
2	B259 6057	HEATER-NA-9W	1
2	B259 6058	HEATER-EU-9W	1
3	B276 1072	Grip	4
4	B121 1070	Grip Bracket 2	4
5	B276 2646	Rubber Bushing	4
6	B259 1053	Shaft:Door:Right Front:Ass'y	1
7	B121 5802	Guide Plate Bracket	1
8	B243 5018	Choke Coil - B2435018	1
9	B121 5801	Power Supply Unit Bracket	1
10	B121 4201	Front Heater Bracket	1
11	B180 2801	Holder:Paper Tray	1
12	B259 1058	Shaft:Door:Right Rear:Ass'y	1
13	G020 5626	Push Switch	1
14	B282 1135	Electrode Plate:Development:Ass'y	1
15	B039 2782	Tray Heater (B26859/B26959)	2
15	B039 2783	Tray Heater (B26949)	2
16	B243 5260	Harness - AC Dehumidifier	1
16	B244 5229	Harness - AC Dehumidifier	1
17	A250 1821	Heater - 9W (B269)	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0451 3008N	Tapping Screw - M3x8	
103	0454 3006Q	Tapping Screw With Washer - M3x6	
104	1105 0511	Harness Clamp - LWS-0306ZC	
105	1105 0487	Harness Clamp	
107	0450 3008N	Tapping Screw - M3x8	
108	0950 3006N	Screw:Spring Washer:M3x6	
109	1105 0488	Harness Clamp	

26.FRAME SECTION 2 (B268/B269)

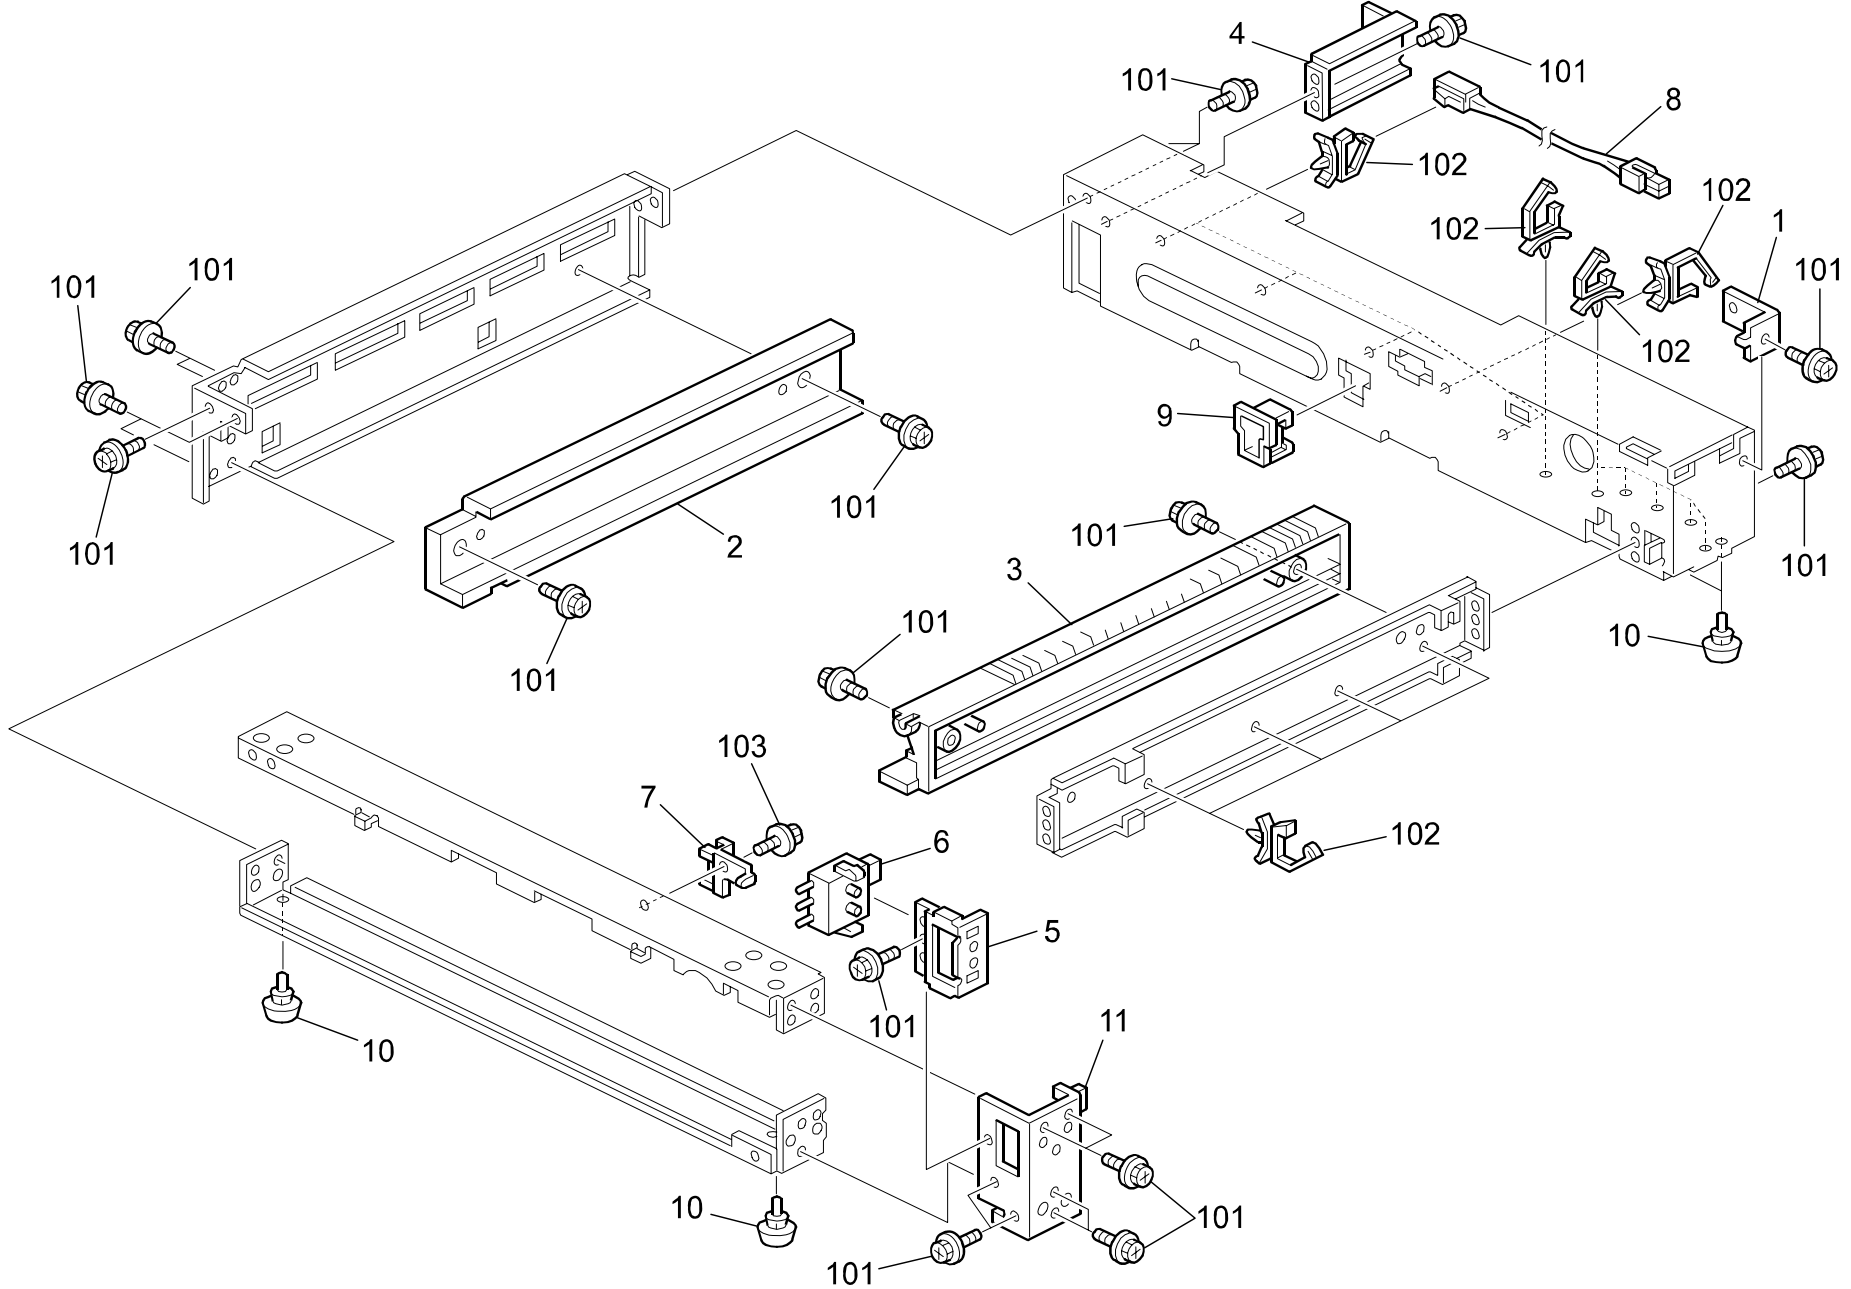


26.FRAME SECTION 2 (B268/B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B040 6143	Right Bracket - Rear Lower Cover	1
2	B040 6054	Left Rail	1
3	B040 6052	Right Rail	1
4	B040 6144	Left Bracket - Rear Lower Cover	1
5	B039 2754	Bracket - Paper Size Sensor	1
6	G800 3035	Push Sw - Paper Size	1
7	B040 6149	Lower Heater Bracket	1
8	B244 5229	Harness - AC Dehumidifier	1
9	B180 2801	Holder:Paper Tray	1
10	B276 2646	Rubber Bushing	4
11	B040 6046	Support Bracket - Paper Switch	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - M3x6	
102	1105 0511	Harness Clamp - LWS-0306ZC	
103	0950 3006N	Sem,s Screw - M3 X 6	

27.GDI UNIT (B268/B269)







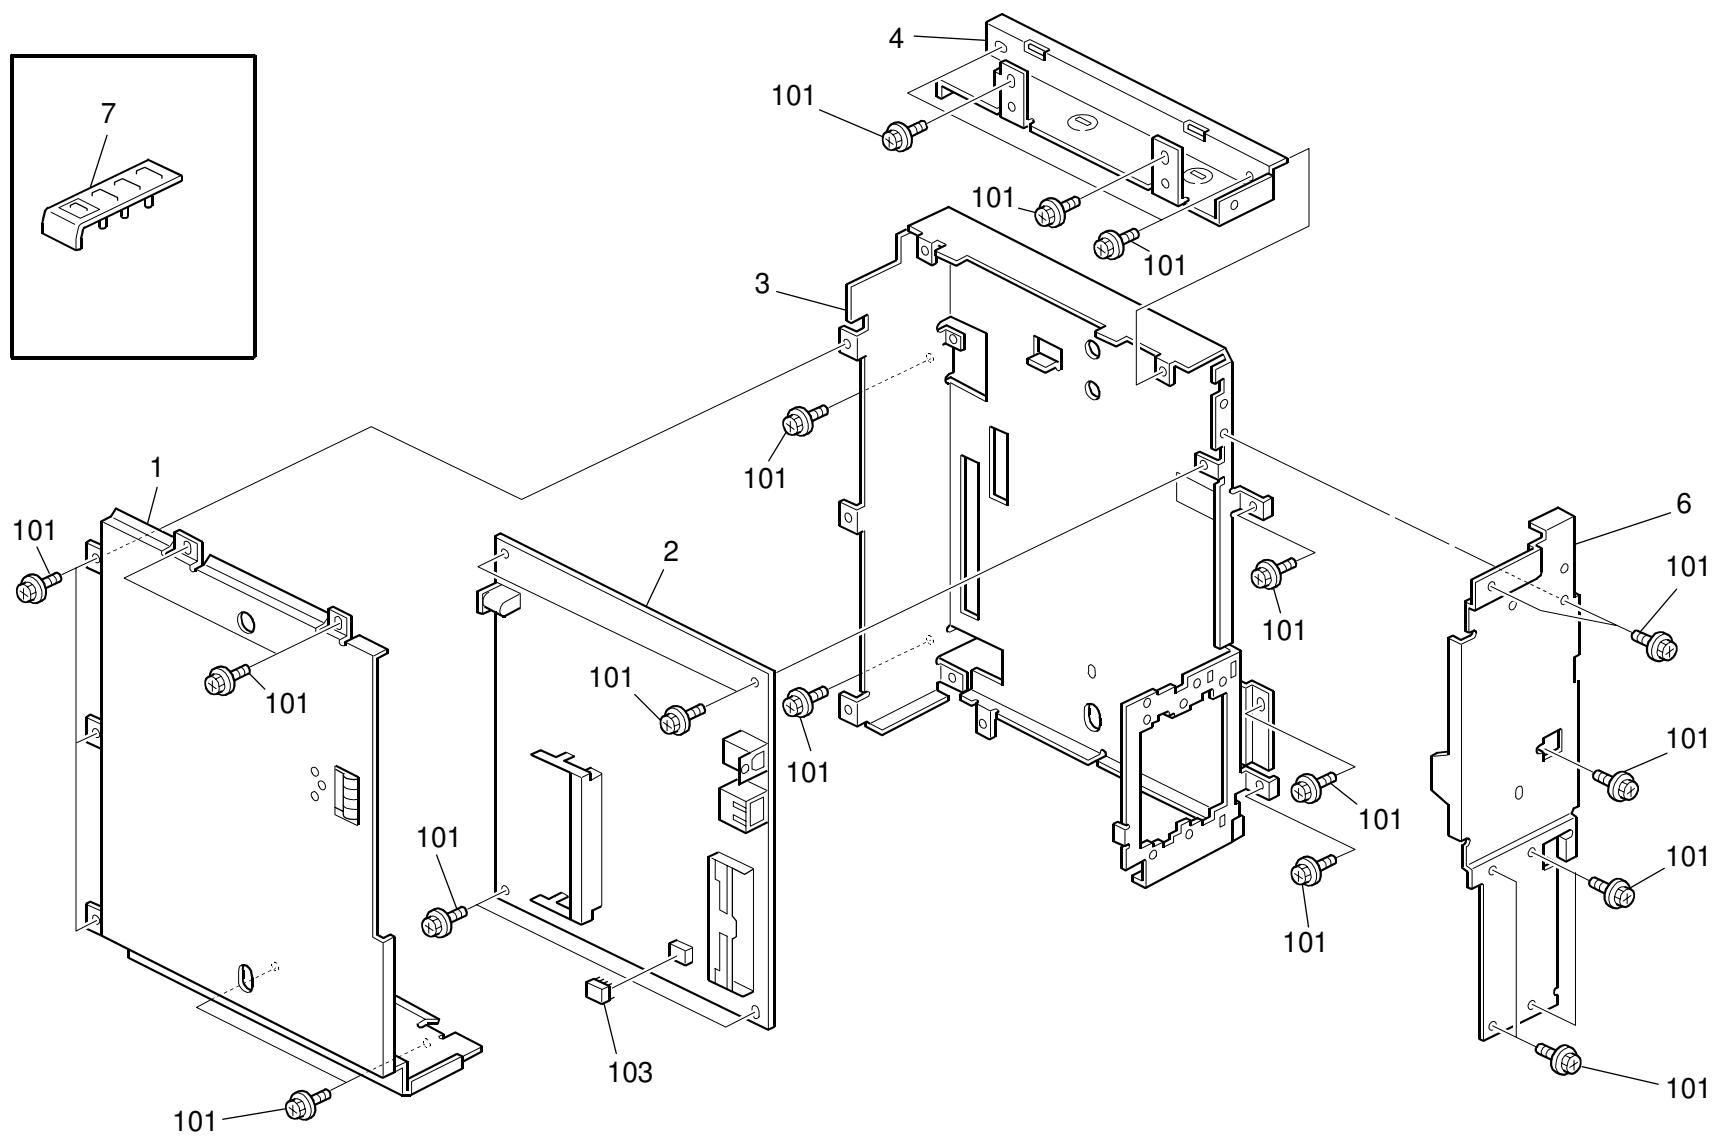


27.GDI UNIT (B268/B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B843 5880	Cover - Controller Box	1
2	B865 5040	PCB:3.5I:Gdi:Ass'y	1
3	B243 5870	PCB Bracket	1
4	B622 5872	Rail Holder	1
6	B268 5874	Cover:Expand:GDI	1
7	B243 1466	Cover - CPS NA	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	

28.DECAL AND DOCUMENT (B268/B269)



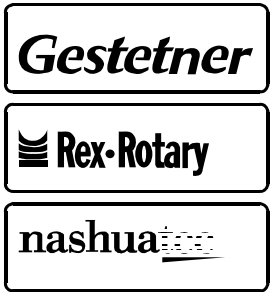
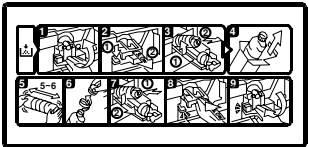

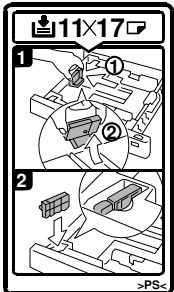


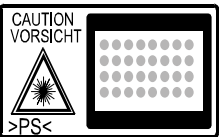
1 	2 	3 	4 	12 
5 				
6 				
9 	10 			

28.DECAL AND DOCUMENT (B268/B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B269 7434	Model Name Plate:B269:LAN	1
1	B269 7448	Model Name Plate:B269:GES	1
1	B269 7449	Model Name Plate:B269:RIC	1
2	B039 1365	Sheet - Operation Instructions	1
3	B039 2633	Decal - By-pass Feed	1
4	B039 2720	Decal - Cassette Operation DLT	1
5	B039 2721	Decal - Cassette Operation	1
6	B039 4488	Jam Removal Decal	1
9	B283 1981	Decal:LD	1
10	B043 4692	Grip Decal	1
12	B123 4691	Decal	1

Index No.	Part No.	Description	Q'ty Per Assembly

29.SPECIAL TOOLS (B268/B269)

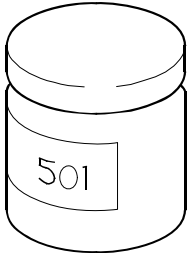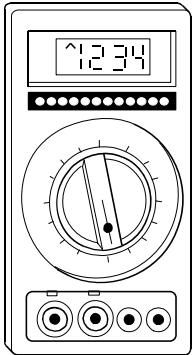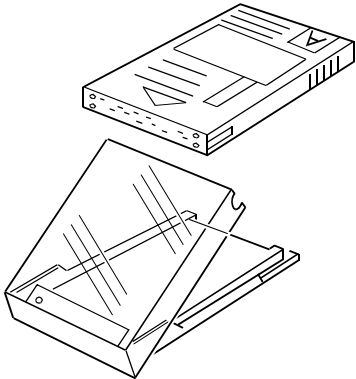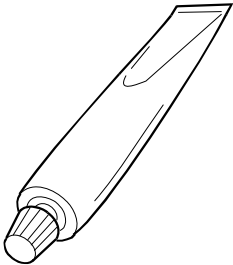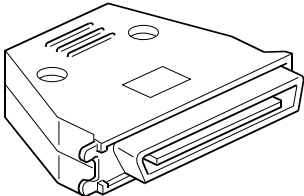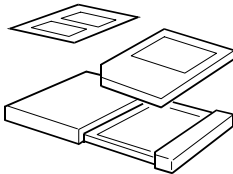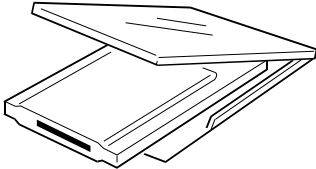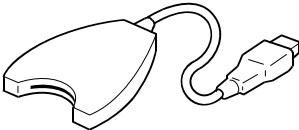1	2	3	4	5
				
6	7	8	9	10
				

29.SPECIAL TOOLS (B268/B269)

Index No.	Part No.	Description	Q'ty Per Assembly
1	5203 9502	Grease 501	1
2	A006 9104	Adjusting Scanner Pin (4pcs/set)	1
3	VSSM 9000	Digital Multimeter-fluke187	1
4	N803 6701	Flash Memory Card-4mb	1
5	A257 9300	Grease - Barrierta S552R	1
6	A292 9500	Test Chart - S5S (10 Pcs/set)	1
7	G021 9350	Loopback Connector - Parallel	1
8	B645 5010	SD-Card:Ass'y	1
9	B645 6700	SD-Card:Adapter:BN-SDAA2	1
10	B645 6800	SD-Card:USB:Writer:BN-SDCE2	1

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

PM Parts Index

Section Name	Part No.	Description in Service Manual	Description in Parts Catalog	Q'ty Per Assembly	Page and Index No.
PAPER CASSETTE (B268/B269)	B039 2740	Paper Feed Roller	Paper Feed Roller	2	25 - 11
	B039 2711	Friction Pad	Friction Pad	1	25 - 18
1ST PAPER FEED SECTION (B268/B269)	B039 3820	Transfer Roller	Transfer Roller	1	27 - 25
	B039 2335	Sepalation Pawl	Pickoff Pawl	1	37 - 14
	AD04 2059	Cleaning Blade	Cleaning Blade	1	37 - 15
	B039 9510	Drum	OPC Drum	1	37 - 17
	AD02 7018	Charge Roller	Roller:Charge:A3	1	37 - 21
TONER SUPPLY UNIT (B268/B269)	G060 2326	Cleaning Brush	Charge Roller Cleaner	1	37 - 22
	B259 4015	Cleaning Roller	Fusing Cleaning Roller	1	41 - 6
	AE04 4062	Hot Roller Stripper Pawls	Stripper Pawls	5	41 - 9
	AE01 1113	Hot Roller	Hot Roller MM30	1	41 - 20
	AE02 0150	Pressure Roller	Pressure Roller	1	41 - 22
	G029 4174	Pressure-roller Bushing	Pressure Roller Bushing	2	41 - 27
PAPER EXIT SECTION (B268/B269)					

Parts Index

Part No.	Description	Page and Index No.
B268 1253	Door - Front EU (B26949)	11 - 15
B268 1424	Operation Panel:Base:B268:TWN:Ass'y	13 - 4
B268 1749	Scale - Left	15 - 2
B268 1751	Scale - Inner Back	15 - 11
B268 5874	Cover:Expand:GDI	61 - 6
B269 1413	Operation Panel Unit ASIA (B26949)	13 - 4
B269 1424	Operation Panel:TWN (B26959)	13 - 4
B269 4981	Guide Plate:Reverse:Left Upper	49 - 5
B269 7434	Model Name Plate:B269:LAN	11 - 16
B269 7434	Model Name Plate:B269:LAN	63 - 1
B269 7448	Model Name Plate:B269:GES	11 - 16
B269 7448	Model Name Plate:B269:GES	63 - 1
B269 7449	Model Name Plate:B269:RIC	11 - 16
B269 7449	Model Name Plate:B269:RIC	63 - 1

Part No.	Description	Page and Index No.
A006 9104	Adjusting Scanner Pin (4pcs/set)	65 - 2
A184 3420	Bottle Chuck	39 - 3
A184 3421	Chuck Shaft	39 - 4
A193 1705	Sheet:Photointerruptor	15 - 5
A232 2374	Spur	41 - 7
A232 3962	Spring Plate - Band Stopper	33 - 9
A250 1388	Spring	45 - 21
A250 1388	Spring	33 - 26
A250 1752	Exposure Glass	15 - 10
A250 1821	Heater - 9W (B269)	57 - 17
A250 1821	Heater - 9W	15 - 7
A250 2779	Pin - M6	31 - 21
A250 2808	Stopper Base	25 - 21
A257 9300	Grease - Barrierta S552R	65 - 5
A267 2869	Gear - 16Z	25 - 12
A267 3440	Development Joint	35 - 2
A267 3556	Chuck Spring - Tonner Bottle	39 - 7
A292 9500	Test Chart - S5S (10 Pcs/set)	65 - 6
B039 1068	ADF Bracket	15 - 18
B039 1073	Right Door Stopper	55 - 3
B039 1082	Door Switch Bracket	43 - 6
B039 1088	Sheet - Duct	21 - 5
B039 1090	Door Switch Lever - 1	43 - 16
B039 1092	Door Switch Lever - 3	43 - 14
B039 1093	Door Switch Lever - 4	43 - 13
B039 1094	Door Switch Lever - 5	43 - 11
B039 1095	Door Switch Lever - 6	43 - 10
B039 1096	Door Switch Lever - 7	43 - 8
B039 1098	Door Switch Spring	43 - 12
B039 1099	Door Switch Lever - 2	43 - 15
B039 1123	Door Switch Lever - 8	43 - 9
B039 1130	Development Sensor Bracket	27 - 20
B039 1141	Shaft - Paper Feed Frame	39 - 6
B039 1142	Housing - Paper Feed	29 - 8
B039 1144	Bushing - 8x16x9	51 - 7

Part No.	Description	Page and Index No.
B039 1145	Coupled Gear - 34/63z (01)	51 - 14
B039 1146	Coupled Gear - 32/71z (04)	51 - 15
B039 1148	Drum Shaft (02)	51 - 13
B039 1154	Coupled Gear - 37/97z (05)	51 - 18
B039 1155	Gear/pulley - 61/34Z (11)	51 - 16
B039 1156	Coupled Gear - 20/49z (12)	51 - 12
B039 1162	Timing Belt - 226XL	51 - 3
B039 1163	Pulley - 23Z	43 - 26
B039 1165	Coupled Gear - 49/59/38z (08)	51 - 22
B039 1166	Gear - 37Z (07)	51 - 23
B039 1167	Gear - 22Z (09)	51 - 21
B039 1168	Gear - 32Z (10)	51 - 20
B039 1170	Gear - 63Z	51 - 5
B039 1173	Gear - 78Z (06)	51 - 19
B039 1186	Gear - 46Z	29 - 25
B039 1187	Gear - 30Z	29 - 24
B039 1191	Gear - 19Z	29 - 19
B039 1193	Bushing - By-pass Feed	29 - 31
B039 1199	Spring - By-pass Feed	29 - 32
B039 1234	Exit Cover (B26849)	43 - 2
B039 1302	Left Scanner Cover	9 - 2
B039 1302	Left Scanner Cover	11 - 2
B039 1303	Rear Scanner Cover	9 - 4
B039 1303	Rear Scanner Cover	11 - 4
B039 1304	Right Scanner Cover	11 - 9
B039 1304	Right Scanner Cover (EU)	11 - 29
B039 1304	Right Scanner Cover	9 - 9
B039 1309	Front Right Upper Cover	9 - 11
B039 1317	Rear Cover	9 - 10
B039 1361	Magnet Catch	11 - 14
B039 1361	Magnet Catch	9 - 14
B039 1362	Main Switch Cover	9 - 24
B039 1362	Main Switch Cover	11 - 30
B039 1364	Rivet - M7	11 - 23
B039 1364	Rivet - M7	9 - 20

Part No.	Description	Page and Index No.
B039 1365	Sheet - Operation Instructions	11 - 18
B039 1365	Sheet - Operation Instructions	63 - 2
B039 1365	Sheet - Operation Instructions	9 - 18
B039 1367	Rivet - M6	9 - 19
B039 1367	Rivet - M6	11 - 24
B039 1469	Ground Plate	13 - 7
B039 1658	Rear Scale Bracket	15 - 16
B039 1662	Front Scanner Frame	19 - 19
B039 1663	Rear Scanner Frame	19 - 20
B039 1666	Bracket - Operation Panel	15 - 12
B039 1668	Bracket - Stabilizer Harness	19 - 13
B039 1683	Tension Spring - Stepper Motor	19 - 17
B039 1692	Pulley - 37Z	19 - 12
B039 1694	Pulley - 37/41Z	19 - 10
B039 1695	Flange - Pulley	19 - 9
B039 1697	Timing Belt - 1058.25XL	19 - 7
B039 1699	Stepper Motor:MM42:2.9W	19 - 15
B039 1703	Pulley - 37Z	19 - 3
B039 1704	Spring - Timing Pulley	19 - 5
B039 1705	Bracket:Idler	19 - 4
B039 1710	Left Scanner Bracket	15 - 3
B039 1712	Right Scanner Bracket	15 - 14
B039 1758	Timing Belt Holder - Front	17 - 11
B039 1759	Timing Belt Holder - Rear	17 - 13
B039 1781	2nd Mirror Holder	17 - 2
B039 1784	Scanner Drive Belt	17 - 6
B039 1785	Scanner Drive Pulley	17 - 3
B039 1787	2nd Mirror	17 - 1
B039 1790	Tension Spring	17 - 8
B039 1905	Adjusting Plate	21 - 2
B039 1942	Cylindrical Lens Holder	21 - 10
B039 1953	2nd Mirror Holder	21 - 18
B039 1954	Holder - Sync Detector Mirror	21 - 11
B039 2272	Recycled Toner Coil	37 - 5
B039 2274	Recycled Toner Plate	37 - 7

Part No.	Description	Page and Index No.
B039 2276	Rear Bushing - Toner Coil	37 - 9
B039 2287	Charge Roller Spring	37 - 19
B039 2288	Cam - Cleaning Blade	37 - 16
B039 2292	Front Pressure Arm - Charge Roller	37 - 20
B039 2293	Pin - Front Pressure Arm	37 - 4
B039 2295	Rear Pressure Arm - Charge Roller	37 - 18
B039 2312	Shutter Spring	37 - 2
B039 2321	Front PCU Cover	37 - 6
B039 2329	Spacer - M3	37 - 24
B039 2335	Pickoff Pawl	37 - 14
B039 2343	Drum Shutter	37 - 3
B039 2350	Drum Holder	37 - 10
B039 2361	Front Side Plate - Drum	35 - 3
B039 2362	Drum Shutter Gear	35 - 5
B039 2367	Drum Shutter Spring	35 - 4
B039 2382	Quenching Lamp Terminal	39 - 14
B039 2558	Driven Roller	33 - 28
B039 2558	Driven Roller	29 - 11
B039 2558	Driven Roller	45 - 4
B039 2558	Driven Roller	27 - 17
B039 2560	Registration Cleaning Mylar	27 - 15
B039 2567	Guide - Right Registration Roller	27 - 12
B039 2570	Registration Feeler	27 - 11
B039 2572	Guide - Left Registration Roller	27 - 16
B039 2575	Bracket - Registration Roller	27 - 1
B039 2578	Grounding Plate	39 - 11
B039 2583	Vertical Transport Feeler	29 - 17
B039 2585	Exit Guide Plate	29 - 7
B039 2587	Mylar - Exit Guide Plate	29 - 36
B039 2592	Lower Guide Plate - By-pass Feed	33 - 6
B039 2594	Upper Guide Plate - By-pass Feed	33 - 11
B039 2596	Friction Pad	33 - 8
B039 2610	Bracket - Paper End Sensor	33 - 19
B039 2610	Bracket - Paper End Sensor	47 - 10
B039 2611	Feeler - Paper End Sensor	33 - 21

Part No.	Description	Page and Index No.
B039 2611	Feeler - Paper End Sensor	47 - 13
B039 2619	By-pass Feed Table	23 - 14
B039 2620	Paper Guide - Extension	23 - 11
B039 2621	Paper Guide	23 - 12
B039 2628	Bottom Plate Pad	23 - 2
B039 2629	Stay - Tray Bottom Plate	23 - 10
B039 2630	Tray Bottom Plate	23 - 4
B039 2631	Front Side Fence	23 - 1
B039 2632	Rear Side Fence	23 - 3
B039 2633	Decal - By-pass Feed	63 - 3
B039 2633	Decal - By-pass Feed	23 - 17
B039 2637	Rack - Front Side Fence	23 - 6
B039 2638	Rack - Rear Side Fence	23 - 5
B039 2643	Link - By-pass Feed Table	23 - 16
B039 2645	Rotary Switch	23 - 9
B039 2651	Right Door Lever	33 - 25
B039 2653	Vertical Transport Guide (B268)	31 - 8
B039 2653	Vertical Transport Guide	33 - 5
B039 2655	Vertical Transport Guide	33 - 4
B039 2658	Sponge - By-pass Feed	33 - 16
B039 2660	Band - Right Door	33 - 10
B039 2670	Right Door	33 - 27
B039 2701	Tray Bottom Plate	25 - 3
B039 2704	Front Stopper Lever	25 - 2
B039 2707	Spring Plate - Side Fence	25 - 4
B039 2711	Friction Pad (B268)	25 - 18
B039 2712	Ground Plate - Tray Bottom Plate	25 - 7
B039 2713	Spring - Friction Pad	25 - 19
B039 2720	Decal - Cassette Operation DLT	25 - 24
B039 2720	Decal - Cassette Operation DLT	63 - 4
B039 2721	Decal - Cassette Operation	63 - 5
B039 2721	Decal - Cassette Operation	25 - 25
B039 2724	Paper Size Detector - A4	25 - 20
B039 2727	Bushing - 8x12x10	25 - 16
B039 2730	Paper End Sensor	29 - 4

Part No.	Description	Page and Index No.
B039 2730	Paper End Sensor	31 - 11
B039 2731	Side Fence - Rear	25 - 8
B039 2732	Spring - Paper Feed Roller	25 - 17
B039 2734	Side Fence - Front	25 - 5
B039 2736	Bracket - Paper End Sensor	29 - 3
B039 2739	Shaft - Joint	25 - 23
B039 2740	Paper Feed Roller	25 - 11
B039 2742	Ground Plate - Paper Feed Roller	25 - 14
B039 2754	Bracket - Paper Size Sensor	29 - 1
B039 2754	Bracket - Paper Size Sensor	59 - 5
B039 2766	Guide Plate - Transport Roller	29 - 9
B039 2782	Tray Heater (B26859/B26959)	57 - 15
B039 2783	Tray Heater (B26949)	57 - 15
B039 2795	Guide Plate - Transport	29 - 12
B039 2797	Guide Plate - Transport Roller	29 - 10
B039 2812	Upper Bracket - Relay Sensor	29 - 28
B039 2813	Lower Bracket - Relay Sensor	29 - 27
B039 2821	Rear Stopper Lever	25 - 9
B039 2823	Joint - Paper Feed Roller	25 - 15
B039 2825	Ground Plate - Vertical Transport	29 - 13
B039 2830	Right Rail	29 - 34
B039 2834	Decal - Exit Paper Feed	29 - 37
B039 3060	Development Roller Gear	35 - 12
B039 3062	Idler Gear - 16z	35 - 9
B039 3245	Gear - 15Z	35 - 11
B039 3360	Cam - Handle	39 - 2
B039 3381	Cover:Toner Bottle:Ass'y	39 - 12
B039 3392	Guide Plate - Toner Supply Unit	39 - 15
B039 3395	Ground Plate - Toner Supply Unit	39 - 17
B039 3820	Transfer Roller	27 - 25
B039 3863	Quenching Terminal Plate	27 - 32
B039 3864	Quenching Terminal Plate-front	27 - 35
B039 3865	Transfer Terminal Plate	27 - 36
B039 3866	Pressure Cover	27 - 38
B039 3867	Roller - Transfer Unit	27 - 31

Part No.	Description	Page and Index No.
B039 3870	Terminal - Transfer	39 - 10
B039 3891	ID Sensor Cover	27 - 27
B039 4102	Fusing Exit Guide	41 - 1
B039 4107	Fusing Exit Door	41 - 23
B039 4114	Rear Ground Plate	41 - 32
B039 4116	Ground Plate - Fusing Unit	43 - 18
B039 4117	Discharge Brush	41 - 31
B039 4118	Front Ground Plate	41 - 4
B039 4119	Fusing Grounding Harness	43 - 17
B039 4120	Thermostat	41 - 5
B039 4135	Pressure Roller Lever	41 - 25
B039 4168	Stripper Pawlsstopper	41 - 33
B039 4170	Stripper Pawls Roller	41 - 29
B039 4171	Gear - 41Z	41 - 18
B039 4459	Exit Roller Holder - Inner	43 - 38
B039 4473	Ring:Exit Roller	43 - 4
B039 4480	Stepped Screw - M5	33 - 30
B039 4480	Stepped Screw - M5	45 - 31
B039 4488	Jam Removal Decal	63 - 6
B039 4488	Jam Removal Decal	33 - 29
B039 5743	Power Supply Cord - 230v (B26949)	53 - 18
B039 5831	ADF Plug Bracket	53 - 5
B039 5887	Heater Switch Cover	55 - 14
B039 9510	OPC Drum	37 - 17
B040 6046	Support Bracket - Paper Switch	59 - 11
B040 6049	Bracket - Vertical Transport	31 - 20
B040 6052	Right Rail	59 - 3
B040 6054	Left Rail	59 - 2
B040 6058	Stay - Paper End Sensor	31 - 2
B040 6066	Vertical Transport Cover	31 - 3
B040 6069	Transport Driven Roller	31 - 7
B040 6071	Guide Plate - Vertical Transport	31 - 28
B040 6074	Transport Roller Bracket	31 - 24
B040 6078	Bracket - Vertical Paper Sensor	31 - 26
B040 6091	Bracket - Vertical Transport Roller	31 - 13

Part No.	Description	Page and Index No.
B040 6096	Tightener Bracket	31 - 16
B040 6126	Front Lower Cover	11 - 20
B040 6131	Cover - Right Lower Front	11 - 21
B040 6135	Left Lower Cover	11 - 19
B040 6138	Rear Lower Cover	11 - 17
B040 6140	Cover - Right Lower Rear	11 - 22
B040 6143	Right Bracket - Rear Lower Cover	59 - 1
B040 6144	Left Bracket - Rear Lower Cover	59 - 4
B040 6149	Lower Heater Bracket	59 - 7
B040 6150	Guide Plate - Upper Paper Feed	31 - 1
B040 7056	Heater:Paper Feed:NO.2:NA:Ass'y	57 - 2
B040 7057	Heater:Paper Feed:NO.2:EU:Ass'y	57 - 2
B043 2554	Registration Guide Spacer	27 - 33
B043 4609	Duplex Lower Stay	47 - 1
B043 4624	Pulley - 30Z	47 - 18
B043 4631	Gear - 38Z	47 - 26
B043 4632	Coupled Gear 25/59z	47 - 30
B043 4633	Gear - 22Z	47 - 24
B043 4642	Stopper - Guide Plate	45 - 30
B043 4645	Spring - 2n	45 - 18
B043 4646	Upper Spring Plate - Driven Roller	45 - 19
B043 4647	Lower Spring Plate - Driven Roller	45 - 9
B043 4651	Door Lever	45 - 20
B043 4662	Guide Plate - Vertical Transport	45 - 5
B043 4667	By-pass Feed Guide - Lower	47 - 3
B043 4671	Bracket - Upper Guide Plate	45 - 22
B043 4674	Cover - Duplex Entrance Sensor	45 - 24
B043 4676	Bracket - Duplex Entrance Sensor	45 - 6
B043 4684	By-pass Feed Guide - Upper	47 - 9
B043 4685	Spring - 2.8n	47 - 4
B043 4692	Grip Decal	63 - 10
B043 4692	Grip Decal	45 - 29
B043 4694	Chain Bracket	47 - 34
B043 4698	Cap - 30x36	47 - 35
B043 4713	Gear - 25Z	47 - 25

Part No.	Description	Page and Index No.
B043 4714	Gear - 25Z	47 - 23
B043 4975	Gear - 18Z	49 - 4
B043 4979	Exit Roller	43 - 23
B043 4991	Coupled Gear - 15/51z	49 - 10
B043 4993	Reverser Shelf	49 - 1
B043 4998	Rail - Reverser Shelf	49 - 8
B120 2063	Bushing - 4mm	43 - 5
B120 3862	Front Discharge Brush	27 - 37
B121 1069	Support Bracket	15 - 17
B121 1070	Grip Bracket 2	57 - 4
B121 1084	Heater Wire Cover	43 - 1
B121 1107	Exhaust Duct	55 - 10
B121 1108	Lower Main Duct Ass'y	55 - 7
B121 1109	Left Duct Ass'y	55 - 11
B121 1110	Upper Main Duct	55 - 4
B121 1112	Frame Duct	55 - 6
B121 1126	Harness Guide	43 - 43
B121 1132	Fusing Drive Release Bracket	43 - 27
B121 1140	Main Drive Housing	51 - 25
B121 1145	Harness Hook	51 - 27
B121 1161	Large Spring	51 - 10
B121 1162	Small Spring	51 - 28
B121 1188	Bushing	29 - 22
B121 1313	IC Card Cap	11 - 7
B121 1313	IC Card Cap	9 - 7
B121 1314	Application Cap	9 - 5
B121 1314	Application Cap	11 - 5
B121 1315	Left Cover EU	11 - 1
B121 1315	Left Cover EU	9 - 1
B121 1322	Left Upper Cover B	9 - 21
B121 1336	Rear Cover B EU	9 - 6
B121 1348	Paper Bank Cap	9 - 8
B121 1353	Exit Cover EU	11 - 3
B121 1353	Exit Cover EU	9 - 3
B121 1367	Rear Exit Cover B EU (B268)	57 - 1

Part No.	Description	Page and Index No.
B121 1367	Rear Exit Cover B EU	9 - 22
B121 1664	Bracket - Timing Belt	19 - 14
B121 1667	Lens Stay Bracket	19 - 6
B121 1680	Gear - 53Z/60Z	19 - 18
B121 1696	Timing Belt L147	19 - 8
B121 1751	No.1 Carriage Ass'y	17 - 12
B121 1757	Xenon Lamp MM8 26000/70	17 - 10
B121 1762	No.1 Mirror	17 - 15
B121 1766	No.1 Mirror Clamp	17 - 14
B121 1782	Flexible Board Guide	17 - 4
B121 1975	Rubber Bushing	21 - 20
B121 2311	PCU Toner Supply Shutter	37 - 1
B121 2617	Magnet Catch - By-pass Feed	23 - 13
B121 3804	Transfer Unit	27 - 9
B121 3860	Harness Cover	27 - 34
B121 4090	Front Heater Holder	41 - 21
B121 4111	Front Electrode Plate	41 - 10
B121 4112	Long Electrode Plate	41 - 13
B121 4113	Short Electrode Plate	41 - 12
B121 4114	Rear Electrode Plate	41 - 14
B121 4120	Thermostat Ass'y	41 - 11
B121 4201	Front Heater Bracket	57 - 10
B121 4451	Exit Middle Guide Plate	43 - 20
B121 4461	Exit Lower Guide Plate	43 - 36
B121 4461	Exit Lower Guide Plate	43 - 44
B121 4465	Short Front Outer Holder	43 - 32
B121 4467	Long Front Middle Holder	43 - 35
B121 4469	Long Rear Middle Holder	43 - 33
B121 4470	Right Lower Exit Guide Plate	33 - 14
B121 4473	Exit Roller Ring Mm14	43 - 29
B121 4477	Short Rear Outer Holder	43 - 34
B121 4490	Antistatic Brush	49 - 3
B121 4503	Exit Photointerruptor Bracket	43 - 19
B121 5200	Harness - Scanner Motor	53 - 20
B121 5201	Harness - Registration Sensor	29 - 30

Part No.	Description	Page and Index No.
B121 5202	Harness - Registration Sensor	27 - 14
B121 5204	Harness - Discharge Lamp	21 - 4
B121 5205	Harness - Front Door Switch	43 - 7
B121 5206	Harness - Density Sensor	27 - 29
B121 5208	Harness - Ground Wire Scanner (B26859)	53 - 1
B121 5212	Harness - Manual Feed	53 - 23
B121 5215	Harness - Paper End Sensor No.1	29 - 5
B121 5215	Harness - Paper End Sensor No.1	53 - 8
B121 5219	Harness - Ground Wire	39 - 13
B121 5220	Harness - Hps	53 - 24
B121 5238	Harness - Paper Feed Sensor	43 - 21
B121 5240	Harness - Document Feeder	53 - 4
B121 5248	Harness - Development Sensor	27 - 21
B121 5250	Harness - LDD	21 - 14
B121 5259	Harness - Paper End Sensor	33 - 23
B121 5439	Harness - Polygon Mirror Motor	21 - 13
B121 5742	Power Supply Cord Stopper NA Ass'y (B26859/B26959)	53 - 18
B121 5801	Power Supply Unit Bracket	57 - 9
B121 5802	Guide Plate Bracket	57 - 7
B121 5810	BICU Bracket	53 - 10
B121 5822	Guide Mylar	53 - 2
B121 5825	Power Supply Cord Bracket	53 - 19
B121 5841	Bct Power Pack Bracket	55 - 15
B121 9640	Developer Type 28 Black	35 - 13
B122 1075	Front Reverse Sub-unit Holder	55 - 5
B122 1309	Right Upper Front Cover EU	11 - 11
B122 1323	Left Upper Cover	11 - 25
B122 1338	Rear Cover EU	11 - 6
B122 1346	Right Rear Cover EU	11 - 10
B122 1349	Paper Bank Cap	11 - 8
B122 1369	Rear Exit Cover EU (B269)	57 - 1
B122 1369	Rear Exit Cover EU	11 - 26
B122 1371	Sorter Cap EU	11 - 27
B122 4492	Large Exit Discharge Brush	43 - 41

Part No.	Description	Page and Index No.
B122 4493	Small Exit Discharge Brush	43 - 42
B122 5208	Ground Wire (B26949/59)	53 - 1
B122 5211	Harness - Paper Feed No.2	53 - 22
B122 5255	Harness - 1bin Machine Or Copier	49 - 16
B122 5821	Box Holder	53 - 25
B123 1102	Rear Fan Bracket	53 - 6
B123 1301	Fusing Cover (B269)	43 - 2
B123 4502	Middle Reverse Guide Plate	49 - 14
B123 4505	Timing Belt - 40S2M290	47 - 19
B123 4506	Reverse Roller Ground Plate	49 - 18
B123 4508	Middle:Reverse Holder	43 - 40
B123 4617	Entrance Duplex Guide Plate	45 - 26
B123 4627	Adhesion Duplex Cover	47 - 28
B123 4640	Driven Duplex Guide Plate Ass'y	45 - 12
B123 4661	Rear Duplex Inner Cover	47 - 22
B123 4670	Right Lower Exit Guide Plate Ass'y	45 - 14
B123 4675	Exit Duplex Sensor Bracket	45 - 10
B123 4679	Exit Sensor Cover	45 - 23
B123 4691	Decal	45 - 27
B123 4691	Decal	63 - 12
B123 4697	Tension Spring 27n	47 - 27
B123 4973	Reverse Paper Feed Sensor Bracket	49 - 6
B123 4977	Right Upper Exit Guide Plate Ass'y	45 - 25
B123 5241	Harness - Duplex Unit	47 - 29
B123 5243	Harness Duplex Ass'y	55 - 1
B123 5245	Harness:Duplex:Ground Wire	49 - 7
B123 5245	Harness:Duplex:Ground Wire	45 - 28
B123 5252	Harness - Duplex Paper End Sensor	47 - 11
B123 5253	Harness - Duplex Sensor	49 - 15
B123 5851	Dcu Bracket	55 - 12
B132 1531	Panel:Logo	9 - 25
B132 1531	Panel:Logo	11 - 31
B180 2801	Holder:Paper Tray	57 - 11
B180 2801	Holder:Paper Tray	59 - 9
B229 1453	Keytop - Start	13 - 8

Part No.	Description	Page and Index No.
B229 1454	Keytop - Clear/stop	13 - 9
B229 1475	Keytop - 10key	13 - 10
B229 1521	Sheet-power Source-NA (B26949)	13 - 17
B229 1522	Sheet-power Source-EU (B26859/B26959)	13 - 17
B229 1525	Keytop-initial	13 - 11
B229 1537	Keytop - Clear Modes	13 - 12
B243 1253	Door - Front EU	9 - 15
B243 1253	Door - Front EU (B26959)	11 - 15
B243 1350	Cover - Front EU	11 - 12
B243 1350	Cover - Front EU	9 - 12
B243 1425	Cover - Operation Panel	13 - 6
B243 1458	Keytop - Power Source	13 - 13
B243 1459	Keytop - Cursor	13 - 14
B243 1466	Cover - CPS NA	13 - 1
B243 1466	Cover - CPS NA	61 - 7
B243 1487	PCB Operation Panel	13 - 19
B243 1804	Harness - FFC	15 - 13
B243 2702	Cover - Paper Tray	25 - 26
B243 2840	Paper Tray Unit EU	25 - *
B243 5018	Choke Coil - B2435018	57 - 8
B243 5018	Choke Coil - B2435018	53 - 14
B243 5203	Harness - Main Motor	53 - 21
B243 5214	Harness:AC:Fusing:TWN	53 - 12
B243 5217	Harness - AC Fusing EU	53 - 12
B243 5222	Harness - Scanner	19 - 2
B243 5226	Harness - AC Switch 187	53 - 16
B243 5228	Harness - AC Dehumidifier EXP (B268)	53 - 15
B243 5230	Harness - Power Supply Unit	53 - 17
B243 5231	Harness - High Voltage	55 - 20
B243 5232	Harness - High Voltage Line B	55 - 18
B243 5233	Harness - High Voltage Line C/T	39 - 9
B243 5233	Harness - High Voltage Line C/T	55 - 19
B243 5260	Harness - AC Dehumidifier	57 - 16
B243 5261	Harness - Key Counter	53 - 11
B243 5262	Harness - Key Counter LAN (B26949/59)	53 - 11

Part No.	Description	Page and Index No.
B243 5870	PCB Bracket	61 - 3
B244 5155	PCB DCB	55 - 2
B244 5228	Harness - AC Dehumidifier EXP (B269)	53 - 15
B244 5229	Harness - AC Dehumidifier	57 - 16
B244 5229	Harness - AC Dehumidifier	59 - 8
B245 4054	Frame:Pressure:Printing	41 - 28
B259 1053	Shaft:Door:Right Front:Ass'y	57 - 6
B259 1058	Shaft:Door:Right Rear:Ass'y	57 - 12
B259 1106	Fan Motor - MM80	55 - 9
B259 1119	Tapping Screw:M3x33	55 - 8
B259 1131	Screw:PCU	27 - 28
B259 1135	DC Solenoid Ass'y	51 - 2
B259 1157	Fusing Swivel Bracket	51 - 11
B259 1174	Development Drive Shaft (03)	51 - 17
B259 1178	Paper Feed Drive Bracket	29 - 23
B259 1190	Shaft - Drive Manual Feed	29 - 20
B259 1194	Manual Feed Drivebracket	29 - 18
B259 1367	Cover Magnet	9 - 13
B259 1367	Cover Magnet	11 - 13
B259 1499	Tapping Screw - M3x8	13 - 15
B259 1691	Scanner Drive Shaft	19 - 11
B259 1702	Pulley Shaft	19 - 16
B259 1763	Xenon Lamp Stabilizer	17 - 16
B259 1768	Carriage No.2 Ass'y	17 - 5
B259 1776	Idler Belt Pulley Bracket - Front	17 - 9
B259 1778	Idler Belt Pulley Bracket - Rear	17 - 7
B259 1812	Lens Unit	15 - 9
B259 2325	OPC Drum Shutter Plate	37 - 23
B259 2371	Rear Drum Stay	35 - 1
B259 2381	Discharge Lamp - QI	21 - 3
B259 2562	Registration Roller Drive	27 - 19
B259 2571	Registration Roller Driven - Dia16	27 - 18
B259 2594	Shaft - Feed	33 - 12
B259 2642	Pin - Mm6	23 - 19
B259 2737	Paper Feed Roller Shaft Ass'y	25 - 10

Part No.	Description	Page and Index No.
B259 2786	Lever Shaft	23 - 20
B259 3031	Toner Supply Unit	39 - 1
B259 3170	Development Case Ass'y	35 - 8
B259 3390	Density Sensor:K-C2.5:Ass'y	35 - 10
B259 3422	Shaft:Slide	39 - 5
B259 3890	Density Sensor	27 - 26
B259 4006	Fusing Unit:EU:Ass'y (B26949)	41 - *
B259 4007	Fusing Unit:TWN:Ass'y (B26859/B26959)	41 - *
B259 4015	Fusing Cleaning Roller	41 - 6
B259 4028	Heater - 230V/550W	41 - 16
B259 4091	Rear Heater Holder	41 - 15
B259 4103	Frame:Fusing	41 - 37
B259 4115	Fusing Entrance Guide Plate	41 - 30
B259 4212	Heater:110V:600W:Ass'y	41 - 16
B259 4214	Heater - 230V/600W	41 - 34
B259 4216	Heater:110V:550W:Ass'y	41 - 16
B259 4471	Exit Roller 2	43 - 3
B259 5223	Harness - Stabilizer	17 - 17
B259 6057	HEATER-NA-9W	57 - 2
B259 6058	HEATER-EU-9W	57 - 2
B260 6039	Transport Roller Connecting No.2	31 - 31
B261 4623	Transport Roller - Connecting	47 - 7
B261 4624	Transport Roller:Drive:Duplex:Exit	47 - 6
B261 4625	Transport Roller:Drive:Duplex:Entrance	47 - 8
B261 4650	Separation Pad	47 - 5
B261 4686	Manual Feed Drive Shaft	47 - 16
B261 4705	Stepper Motor Bracket	47 - 31
B261 4710	Stepper Motor	49 - 12
B261 4710	Stepper Motor	47 - 2
B261 4983	Gate Pawl	43 - 24
B261 4989	Reverse Roller	49 - 2
B261 4994	Stepper Motor Bracket	49 - 11
B276 1055	Brushless Motor DC24V/20W	51 - 1
B276 1072	Grip	57 - 3
B276 1149	Magnetic Clutch:0.5N M:Z39	51 - 4

Part No.	Description	Page and Index No.
B276 1150	Magnetic Clutch:Paper Feed:Drive:Ass'y	29 - 26
B276 1151	Magnetic Clutch:0.5N M:Z31	29 - 14
B276 1152	Magnetic Clutch:Manual Feed:Ass'y	29 - 35
B276 1183	Shaft:Paper Feed:Drive:Ass'y	31 - 9
B276 1192	Gear:Idler:Connecting	29 - 33
B276 1251	Cover:Shield Glass	21 - 1
B276 1452	Cover:Operation Sub-unit:Lower	13 - 5
B276 1808	Inner Cover:Lens	15 - 8
B276 1917	Laser Diode Unit:Ass'y	21 - 15
B276 2576	Transport Roller	29 - 16
B276 2644	End Fence:C3	25 - 1
B276 2646	Rubber Bushing	59 - 10
B276 2646	Rubber Bushing	57 - 5
B276 2719	Spring:Base:5.8N	25 - 13
B276 3310	DC Motor:Toner Bottle:Kir-C3:Ass'y	51 - 6
B276 5103	PCB BICU ASIA	53 - 9
B277 4984	DC Solenoid:Ass'y	49 - 13
B277 6067	Guide Plate:Paper Feed:Right (B269)	31 - 8
B277 6093	Shaft:Drive:Paper Feed Roller:Ass'y	29 - 21
B282 1128	Ground	51 - 9
B282 1135	Electrode Plate:Development:Ass'y	51 - 8
B282 1135	Electrode Plate:Development:Ass'y	57 - 14
B282 4693	Stopper:Duplex Unit:Ass'y	47 - 32
B283 1876	Imaging Unit:Ass'y	35 - *
B283 1876	Imaging Unit:Ass'y	21 - *
B283 1961	Shield Glass:Ass'y	21 - 6
B283 1971	Cover:Ass'y	21 - 12
B283 1981	Decal:LD	21 - 7
B283 1981	Decal:LD	63 - 9
B390 1759	Shaft:Scale	15 - 1
B622 5872	Rail Holder	61 - 4
B645 5010	SD-Card:Ass'y	65 - 8
B645 6700	SD-Card:Adapter:BN-SDAA2	65 - 9
B645 6800	SD-Card:USB:Writer:BN-SDCE2	65 - 10
B843 5880	Cover - Controller Box	61 - 1

Part No.	Description	Page and Index No.
B865 5040	PCB:3.5I:Gdi:Ass'y	61 - 2
G012 3050	Side Fence Gear	23 - 7
G020 2599	Spring - Release Lever	25 - 22
G020 2784	Lever - By-pass Feed Table	23 - 15
G020 3334	Slider Ass'y	39 - 8
G020 5626	Push Switch	57 - 13
G020 5626	Push Switch	31 - 25
G020 5871	Spacer - KGLS-12RF	55 - 17
G021 9350	Loopback Connector - Parallel	65 - 7
G029 4140	External Circlip	41 - 17
G029 4174	Pressure Roller Bushing	41 - 27
G029 4176	Turn Roller - Exit Sub-unit	43 - 37
G030 2670	Friction Pad (B269)	25 - 18
G052 4618	Bearing 30x42x7	41 - 19
G052 4873	Outer Exit Cover Roller	43 - 31
G060 2641	Transport Driven Roller - Middle	45 - 7
G104 5141	Knob Screw:M3	49 - 17
G361 5570	Photointerruptor - Duplex	43 - 22
G570 2730	Slider - Scanner	17 - 18
G800 3035	Push Sw - Paper Size	29 - 2
G800 3035	Push Sw - Paper Size	59 - 6
G800 4854	Exit Roller	43 - 39

Part No.	Description	Page and Index No.
N803 6701	Flash Memory Card-4mb	65 - 4

Part No.	Description	Page and Index No.
AA04 3527	Timing Belt - 230XL	31 - 19
AA06 0228	Spring - Transfer Drum Cleaning Sol	31 - 15
AA06 2254	Registration Roller Spring	27 - 2
AA06 2324	Pressure Spring	41 - 26
AA06 3334	Spring - Vertical Transport	31 - 5
AA06 3398	Spring - Friction Pad	33 - 7
AA06 3399	Spring - Vertical Transport	33 - 3
AA06 3399	Spring - Vertical Transport	45 - 3
AA06 3570	Tension Spring	41 - 35
AA06 3607	Pressure Spring	27 - 24
AA06 3643	Spring - By-pass Feed Table	23 - 8
AA06 6342	Registration Sensor Spring	27 - 10
AA06 6343	Spring - Paper End Sensor	33 - 20
AA06 6343	Spring - Paper End Sensor	47 - 14
AA06 6635	Spring - Fusing Exit Guide	41 - 24
AA06 6637	Stripper Pawl Spring	41 - 8
AA06 6641	Gate Pawl Spring	43 - 25
AA08 0249	Bushing - Vertical Transport	31 - 6
AA08 0252	Bushing - M4	31 - 23
AA08 0267	Bushing - 8x12x18	27 - 6
AA08 0268	Bushing - Vertical Transport	33 - 2
AA08 0268	Bushing - Vertical Transport	45 - 2
AA08 0313	Driven Roller Bushing	45 - 8
AA08 0342	Fornt Bushing-registration Roller	27 - 5
AA08 0343	Rear Bushing-registration Roller	27 - 22
AA08 2073	Roller Busing	41 - 36
AA08 2101	Bushing - 6x10x6	47 - 17
AA08 2101	Bushing - 6x10x6	29 - 15
AA08 2101	Bushing - 6x10x6	31 - 10
AA08 2101	Bushing - 6x10x6	33 - 18
AA08 2110	Bushing - 8x12x22	27 - 23
AA10 0015	Snap Ring - M6	27 - 8
AA10 0015	Snap Ring - M6	51 - 26
AA14 3444	Stepped Screw	37 - 11
AA14 3870	Stepped Screw	41 - 2

Part No.	Description	Page and Index No.
AB01 1402	Gear - 14Z	37 - 13
AB01 1403	Gear - 13Z	37 - 12
AB01 2311	Gear - 18Z	27 - 7
AB01 2312	Gear - 16Z	27 - 4
AB01 2313	Gear - 25Z	33 - 13
AB01 2314	Gear - 25Z	31 - 14
AB03 0569	Pulley - 30T	47 - 20
AB03 0701	Gear/pulley - 24/30Z	31 - 18
AB03 0702	Timing Pulley - 30Z	31 - 17
AC02 0095	Sync Detector Lenz	21 - 19
AC02 4009	Cylindrical Lens	21 - 9
AC03 0138	2nd Mirror	21 - 17
AC03 0139	Sync Detector Mirror	21 - 8
AD02 7018	Roller:Charge:A3	37 - 21
AD04 2058	Charge Cleaner Brush Roller	37 - 22
AD04 2059	Cleaning Blade Ass'y	37 - 15
AE01 1113	Hot Roller MM30	41 - 20
AE02 0150	Pressure Roller	41 - 22
AE04 4062	Stripper Pawls	41 - 9
AF02 2138	Vertical Transport Roller	45 - 1
AF02 2138	Vertical Transport Roller	33 - 1
AF03 1060	By-pass Feed Roller	33 - 17
AF03 1060	By-pass Feed Roller	47 - 15
AG07 0514	Magnet Catch	47 - 21
AG07 0514	Magnet Catch	33 - 24
AG07 0514	Magnet Catch	31 - 4
AW01 0126	Original Sensor:H=2-66	19 - 1
AW02 0156	Photointerruptor:EE-SX4235A-P2	15 - 4
AW02 0181	Paper Feed Sensor	45 - 11
AW02 0181	Paper Feed Sensor	31 - 27
AW10 0073	Thermistor	41 - 3
AX06 0323	Polygon Motor - 23622rpm	21 - 16
AX31 0046	Total Counter:7fig:24v	39 - 16
AX64 0169	Fan DC24V 1.92W	53 - 3
AZ23 0200	Power Supply Unit - 100V	53 - 13

Part No.	Description	Page and Index No.
AZ23 0219	Power Supply Unit - 230V	53 - 13
AZ32 0152	Power Pack Bct	55 - 16
GW01 0007	Photo Refiection Sensor:Exit	49 - 9
GW02 0020	Photointerruptor:LG248NI1	47 - 12
GW02 0020	Photointerruptor:LG248NL1	33 - 22
GW02 0020	Photointerruptor:LG248NL1	29 - 29
GW02 0020	Photointerruptor:LG248NL1	27 - 13
GW02 0020	Photointerruptor:LG248NI1	15 - 6

Part No.	Description	Page and Index No.
VSSM 9000	Digital Multimeter-fluke187	65 - 3

Part No.	Description	Page and Index No.
0313 0060N	Screw - M3X6	41 - 104
0313 0060N	Screw - M3X6	49 - 103
0353 0050N	Screw-m3x5	13 - 102
0360 3006N	Screw - M3X6	19 - 107
0360 3006N	Screw - M3X6	35 - 101
0433 0060N	Pan Self-tapping Screw:3x6	47 - 106
0450 3008N	Tapping Screw - M3x8	43 - 102
0450 3008N	Tapping Screw - M3x8	33 - 101
0450 3008N	Tapping Screw - M3x8	45 - 101
0450 3008N	Tapping Screw - M3x8	31 - 101
0450 3008N	Tapping Screw - M3x8	29 - 106
0450 3008N	Tapping Screw - M3x8	47 - 102
0450 3008N	Tapping Screw - M3x8	27 - 101
0450 3008N	Tapping Screw - M3x8	49 - 102
0450 3008N	Tapping Screw - M3x8	51 - 104
0450 3008N	Tapping Screw - M3x8	39 - 101
0450 3008N	Tapping Screw - M3x8	9 - 102
0450 3008N	Tapping Screw - M3x8	57 - 107
0450 3008N	Tapping Screw - M3x8	55 - 102
0450 3008N	Tapping Screw - M3x8	11 - 103
0450 3012N	Tapping Screw -3x12	21 - 102
0450 3012N	Tapping Screw:3x12	27 - 102
0450 3012N	Tapping Screw:3x12	43 - 104
0450 3020N	Tapping Screw:M3x20	21 - 103
0450 4010N	Tapping Screw:M4x10	51 - 101
0450 4010N	Tapping Screw:M4x10	43 - 106
0451 3006N	Tapping Screw - 3x6	33 - 102
0451 3006N	Tapping Screw - 3x6	31 - 102
0451 3006N	Tapping Screw - M3x6	15 - 101
0451 3006N	Tapping Screw - 3x6	11 - 102
0451 3006N	Tapping Screw - 3x6	43 - 103
0451 3006N	Tapping Screw - 3x6	37 - 101
0451 3006N	Tapping Screw - M3x6	59 - 101
0451 3006N	Tapping Screw - 3x6	61 - 101
0451 3006N	Tapping Screw - 3x6	45 - 102

Part No.	Description	Page and Index No.
0451 3006N	Tapping Screw - 3x6	47 - 101
0451 3006N	Tapping Screw - 3x6	17 - 101
0451 3006N	Tapping Screw - 3x6	19 - 101
0451 3006N	Tapping Screw - 3x6	47 - 107
0451 3006N	Tapping Screw - 3x6	29 - 101
0451 3006N	Tapping Screw - 3x6	57 - 101
0451 3006N	Tapping Screw - 3x6	55 - 101
0451 3006N	Tapping Screw - M3x6	49 - 106
0451 3006N	Tapping Screw - M3x6	53 - 102
0451 3008N	Tapping Screw - M3x8	57 - 102
0451 3008N	Tapping Screw - M3x8	49 - 101
0451 3008N	Tapping Screw - M3x8	53 - 101
0451 3008N	Tapping Screw - M3x8	9 - 101
0451 3008N	Tapping Screw - M3x8	11 - 101
0451 3008N	Tapping Screw - M3x8	13 - 101
0451 3008N	Tapping Screw - M3x8	23 - 101
0451 3030N	Tapping Screw:3x30	53 - 112
0452 3008N	Tapping Screw - M3x8	35 - 102
0452 3008N	Tapping Screw - M3x8	39 - 102
0452 3008N	Tapping Screw - M3x8	41 - 103
0452 3008N	Tapping Screw - M3x8	37 - 102
0452 3010N	Tapping Bind Screw - M3x10	21 - 101
0452 3012N	Binding Self-tapping Screw:M3x12	37 - 104
0452 3014N	Tapping Screw - M3x14	21 - 104
0453 3006N	Tapping Screw - M3x6	19 - 108
0454 3006Q	Tapping Screw With Washer - M3x6	29 - 102
0454 3006Q	Tapping Screw With Washer - M3x6	57 - 103
0454 3006Q	Tapping Screw With Washer - M3x6	15 - 102
0454 3006Q	Tapping Screw With Washer - M3x6	19 - 102
0454 3008Q	Tapping Screw	51 - 102
0720 0030E	Retaining Ring - M3	43 - 105
0720 0040E	Retaining Ring - M4	49 - 105
0720 0040E	Retaining Ring - M4	31 - 104
0720 0040E	Retaining Ring - M4	33 - 103
0720 0040E	Retaining Ring - M4	47 - 103

Part No.	Description	Page and Index No.
0720 0040E	Retaining Ring - M4	29 - 103
0720 0060E	Retaining Ring - M6	19 - 106
0720 0060E	Retaining Ring - M6	51 - 103
0736 0610	Bushing 6x10	37 - 103
0804 6123	Hexagonal Bolt:W/Washer:M3x8	41 - 101
0805 0088	Retaining Ring - M6	25 - 101
0805 0089	Retaining Ring - M4	53 - 104
0805 0097	Ring Separator	29 - 104
0805 3530	Bearing 8x22x7	19 - 105
0950 3006N	Screw:Spring Washer:M3x6	57 - 108
0950 3006N	Sem,s Screw - M3 X 6	59 - 103
0954 3010N	Screw:Polished Round/Spring:M3x10	41 - 105
0954 3010N	Screw:Polished Round/Spring:M3x10	41 - 102
1105 0009	Nylon Clamp - 5n	47 - 105
1105 0487	Harness Clamp	53 - 105
1105 0487	Harness Clamp	57 - 105
1105 0487	Harness Clamp	19 - 104
1105 0487	Harness Clamp	55 - 103
1105 0487	Harness Clamp	29 - 107
1105 0488	Harness Clamp	51 - 105
1105 0488	Harness Clamp	57 - 109
1105 0499	Support Spacer - M3x29	55 - 104
1105 0511	Harness Clamp - LWS-0306ZC	59 - 102
1105 0511	Harness Clamp - LWS-0306ZC	57 - 104
1105 0511	Harness Clamp - LWS-0306ZC	47 - 104
1105 0511	Harness Clamp - LWS-0306ZC	19 - 103
1105 0511	Harness Clamp - LWS-0306ZC	31 - 103
1105 0511	Harness Clamp - LWS-0306ZC	53 - 106
1105 0511	Harness Clamp - LWS-0306ZC	45 - 103
1105 0511	Harness Clamp - LWS-0306ZC	29 - 105
1105 0522	Edge Saddle - Les0510	27 - 103
1107 0391	Fuse - 5A 125V	53 - 107
1107 0629	Fuse:Ceramic Case:15A 125V	53 - 108
1204 2608	Rocker Switch:Sddje33900	53 - 113

Part No.	Description	Page and Index No.
5203 9502	Grease 501	65 - 1
5206 2686	Snap Ring	31 - 30
5215 2621	Snap Ring - M6	25 - 6
5215 2713	Bottom Plate Pad	25 - 27
5304 1639	Bushing - 8mm	51 - 24
5442 1924	Exposure Glass Cushion	15 - 15
5447 2681	Snap Ring	23 - 18
5447 2681	Snap Ring	27 - 3
5447 2681	Snap Ring	29 - 6
5447 2681	Snap Ring	31 - 29

Part No.	Description	Page and Index No.