

C**9065**/C**9075** MP C6501sp/C7501sp *LD365C/LD375C* Aficio[™] MP C6501sp/C7501sp

Operating Instructions Scanner Reference



1	Sending Scan Files by E-mail
2	Sending Scan Files to Folders
3	Sending Scan Files Using WSD
4	Storing Files Using the Scanner Function
5	Saving Scan Files on a Removable Memory Device
6	Delivering Scan Files
7	Scanning Originals with the Network TWAIN Scanner
8	Various Scan Settings
9	Scanner Features
10	Appendix

Read this manual carefully before you use this machine and keep it handy for future reference. For safe and correct use, be sure to read the Safety Information in "About This Machine" before using the machine.

TABLE OF CONTENTS

Manuals for This Machine	7
Notice	9
Important	9
How to Read This Manual	10
Symbols	10
Notes	10
Laws and Regulations	11
Legal Prohibition	11
About the Scanner Functions	12
Display Panel	14
Simplified Display	14
Confirmation Displays	15
1. Sending Scan Files by E-mail	
Before Sending Scan Files by E-mail	
Overview of Sending Scan Files by E-mail	21
Preparation for Sending by E-mail	22
Registering E-mail Addresses in the Address Book	24
E-mail Screen	25
Basic Procedure for Sending Scan Files by E-mail	27
Switching to the E-mail Screen	
Specifying E-mail Destinations	
Selecting the Destination from the Machine's Address Book	
Entering an E-mail Address Manually	34
Selecting the Destination from Recent Destinations	35
Selecting Destinations by Searching an LDAP Server	
Registering a Directly-Entered Destination in the Address Book	
Registering a Recent Destination in the Address Book	40
Specifying the E-mail Sender	41
Selecting a Sender from the List	41
Using a Registration Number to Specify a Sender Name	42
Selecting the Sender by Searching the Machine's Address Book	42
Entering the E-mail Subject	45
Entering the E-mail Message	46

Selecting a Message from the List	46
Manual Entry of a Message	47
Simultaneous Storage and Sending by E-mail	
Security Settings to E-mails	
Sending Encrypted E-mail	49
Sending E-mail with a Signature	50
Sending the URL by E-mail	51
2. Sending Scan Files to Folders	
Before Sending Files by Scan to Folder	
Overview of Sending Scan Files by Scan to Folder	
Preparation for Sending by Scan to Folder	
Registering Destination Folders in the Address Book	
Scan to Folder Screen	
Basic Procedure When Using Scan to Folder	62
Switching to the Scan to Folder Screen	
Specifying Scan to Folder Destinations	
Selecting the Destination from the Machine's Address Book	
Sending Files to a Shared Network Folder	68
Sending Files to an FTP Server	72
Sending Files to NetWare Server	73
Selecting the Destination from Recent Destinations	
Registering the Path to the Selected Destination in the Address Book	
Registering the Path to a Recent Destination in the Address Book	
Simultaneous Storage and Sending by Scan to Folder	80
3. Sending Scan Files Using WSD	
Before Sending Scan Files Using WSD	
Overview of Sending Scan Files Using WSD	
Preparation for Sending Files Using WSD	
Using the WSD Scanner (Push Type)	
WSD Scanner (Push Type) Screen	
Basic Procedure for Sending Scan Files Using WSD	
Switching to the WSD Scanner Screen	
Specifying the Destination Client Computer	

Using the WSD Scanner (Pull Type)	94
Basic Procedure for Sending Scan Files Using WSD (Pull Type)	94
Configuring the Scan Settings on a Client Computer	96
Changing a Scan Profile	96
Creating a New Scan Profile	
Scan Profile Items and Settings	97
4. Storing Files Using the Scanner Function	
Before Storing Files	
Overview of File Storage under the Scanner Function	
Basic Procedure for Storing Scan Files	
Specifying File Information for a Stored File	103
Specifying a User Name	
Specifying a File Name	
Specifying a Password	
Displaying the List of Stored Files	
List of Stored Files	
Searching the List of Stored Files	
Checking Stored Files	
Checking a Stored File Selected from the List	
Checking Stored Files from a Client Computer	110
Sending a Stored File	112
Sending Stored Files	112
Managing Stored Files	114
Deleting a Stored File	114
Changing Information for a Stored File	115
5. Saving Scan Files on a Removable Memory Device	
Before Saving Files on a Removable Memory Device	119
Overview of Saving Files on a Removable Memory Device	119
Basic Procedure for Saving Scan Files on a Removable Memory Device	121
6. Delivering Scan Files	
Before Delivering Files	
Overview of Scan File Delivery	123
Preparing to Deliver Files	

Network Delivery Scanner Screen	127
Basic Procedure for Delivering Files	129
Switching to the Network Delivery Scanner Screen	132
Specifying Delivery Destinations	
Selecting Destinations Registered in the Delivery Server's Address Book	
Specifying the Sender	
Selecting a Sender from the Sender List	137
Selecting the Sender by Entering the Registration Number	
Selecting a Sender by Searching the Delivery Server's Destination List	
Entering the Subject of the E-mail to Be Transmitted via the Delivery Server	141
Simultaneous Storage and Delivery	142
7. Scanning Originals with the Network TWAIN Scanner	
Before Using the Network TWAIN Scanner	143
Overview of the Network TWAIN Scanner	143
Preparing to Use the Network TWAIN Scanner	144
Installing the TWAIN Driver from the Supplied CD-ROM	146
Basic Network TWAIN Scanner Procedure	148
Scan Settings When Using TWAIN Scanner	
Setting Original Orientation on the TWAIN Scanner	
When Scanning Originals of Mixed Sizes Using TWAIN Scanner	152
8. Various Scan Settings	
Specifying Scan Settings	153
Scan Settings	154
Original Type	154
Resolution	
Scan Size	
Edit	
Adjusting Image Density	
Setting of Original Feed Type	
Original Orientation	162
Original Settings	
Batch, SADF	
Divide	166

Scanning Multiple Pages of Originals as One File				
Specifying the File Type and File Name				
Specifying the File Type				
Notes About and Limitations of File Types				
Specifying the File Name				
Security Settings for PDF Files				
Programs				
Registering Frequently Used Settings				
Recalling a Registered Content				
Changing a Registered Program				
Deleting a Program				
Changing the Registered Program Name				
Changing the Default Functions of the Scanner's Initial Display				
9. Scanner Features				
Accessing User Tools				
Changing User Tools				
Closing User Tools				
General Settings				
Scan Settings				
Send Settings				
Initial Settings				
10. Appendix				
Relationship between Resolution and Scan Size				
When Using the E-mail, Folder Sending, WSD Scanner, Storing, or	Network Delivery Functions			
	195			
When Using as a TWAIN Scanner	196			
Software Supplied on CD-ROM				
Auto-Run Program				
TWAIN Driver				
Values of Various Set Items for Transmission/Storage/Delivery Function	on199			
Transmission Function				
Storage Function				
Network Delivery Function				

About WIA Scanning	204
Specifications	
Trademarks	210
INDEX	

Manuals for This Machine

Read this manual carefully before you use this machine.

Refer to the manuals that are relevant to what you want to do with the machine.

🔂 Important

- Media differ according to manual.
- The printed and electronic versions of a manual have the same contents.
- Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.
- A Web browser must be installed in order to view the html manuals.

About This Machine

Before using the machine, be sure to read the section of this manual entitled Safety Information.

This manual introduces the machine's various functions. It also explains the control panel, preparation procedures for using the machine, how to enter text, how to install the CD-ROMs provided, and how to replace paper, toner, staples, and other consumables.

Troubleshooting

Provides a guide for resolving common usage-related problems.

Copy and Document Server Reference

Explains Copier and Document Server functions and operations. Also refer to this manual for explanations on how to place originals.

Facsimile Reference

Explains Facsimile functions and operations.

Printer Reference

Explains Printer functions and operations.

Scanner Reference

Explains Scanner functions and operations.

Network and System Settings Reference

Explains how to connect to the machine to a network, configure and operate the machine in a network environment, and use the software provided. Also explains how to change User Tools settings and how to register information in the Address Book.

Security Reference

This manual is for administrators of the machine. It explains security functions that you can use to prevent unauthorized use of the machine, data tampering, or information leakage. For enhanced security, we recommend that you first make the following settings:

- Install the Device Certificate.
- Enable SSL (Secure Sockets Layer) Encryption.

• Change the user name and password of the administrator using Web Image Monitor.

For details, see "Setting Up the Machine", Security Reference.

Be sure to read this manual when setting the enhanced security functions, or user and administrator authentication.

PostScript 3 Supplement

Explains how to set up and use PostScript 3.

VM Card Extended Feature Settings Device Reference

Explains how to set up the extended features settings with the machine.

VM Card Extended Feature Settings Web Reference

Explains how to set up the extended features settings using Web Image Monitor.

Other manuals

- UNIX Supplement
- Quick Reference Copy Guide
- Quick Reference Printer Guide
- Quick Reference Fax Guide
- Quick Reference Scanner Guide
- App2Me Start Guide

• Note

- Manuals provided are specific to machine types.
- For "UNIX Supplement", please visit our Web site or consult an authorized dealer. This manual includes descriptions of functions and settings that might not be available on this machine.
- The following software products are referred to using general names:

Product name	General name		
DeskTopBinder Lite and DeskTopBinder Professional * ¹	DeskTopBinder		
ScanRouter EX Professional *1 and ScanRouter EX Enterprise *1	The ScanRouter delivery software		

*1 Optional

Notice

Important

In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

For good copy quality, the supplier recommends that you use genuine toner from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

How to Read This Manual

Symbols

This manual uses the following symbols:

Comportant 🔁

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

• Note

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

Reference

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[]

Indicates the names of keys on the machine's display or control panels.

Notes

Contents of this manual are subject to change without prior notice.

Two kinds of size notation are employed in this manual.

Colors on color keys or the color circle may differ slightly from the colors of actual copies.

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Depending on which country you are in, certain units may be optional. For details, please contact your local dealer.

Laws and Regulations

Legal Prohibition

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

This machine is equipped with a function that prevents making counterfeit bank bills. Due to this function the original images similar to bank bills may not be copied properly.

About the Scanner Functions

This section describes functions you can use in the scanner mode.

You can use the scanner functions to send scan files to computers, scan originals from a computer using the TWAIN driver, or store scan files on the machine's hard disk.

For details about each function, see respective chapters.

Sending scanned files (Network Scanner)

Scan files can be sent to or stored on a computer, and you can specify the format of a scan file according to how the file will be used.

• Sending by e-mail

You can send scan files to specified e-mail addresses.

For details, see chapter 1 "Sending Scan Files by E-mail".

Sending to folders

Scan files can be stored in shared network folders, or on FTP or Netware servers.

For details, see chapter 2 "Sending Scan Files to Folders".

• Sending using WSD

You can use Web Services on Devices (WSD) to send scan files to a client computer.

For details, see chapter 3 "Sending Scan Files Using WSD".

Delivering

You can deliver scan files using a delivery server.

For details, see chapter 6 "Delivering Scan Files".

Scanning originals from a client computer (TWAIN Scanner)

You can use the TWAIN driver to scan originals from networked client computers.

For details, see chapter 7 "Scanning Originals with the Network TWAIN Scanner".

Storing files

Scan files can be stored on the machine's hard disk or saved on a removable memory device.

• Storing files on the machine's hard disk

You can do various things with files that are stored on the hard disk, such as save them in shared folders or send them by e-mail.

For details, see chapter 4 "Storing Files Using the Scanner Function".

• Saving files on a removable memory device

You can save scan files on a removable memory device such as a USB memory stick or an SD card.

For details, see chapter 5 "Saving Scan Files on a Removable Memory Device".

Note

- When the Copy Data Security Unit is installed, if you scan an original that was printed using the data security for copying function, the machine beeps and an entirely gray page is sent or stored. You can use the log file to check who scanned the confidential original. For details about the data security for copying function, consult the administrator.
- This machine's scanner functions are only available as network functions. They are not available through direct USB connection.

Reference

- p.21 "Sending Scan Files by E-mail"
- p.53 "Sending Scan Files to Folders"
- p.81 "Sending Scan Files Using WSD"
- p.123 "Delivering Scan Files"
- p.143 "Scanning Originals with the Network TWAIN Scanner"
- p.99 "Storing Files Using the Scanner Function"
- p.119 "Saving Scan Files on a Removable Memory Device"

Display Panel

This section explains the simplified display and three confirmation screens: Check Modes, Preview, and Scanned Files Status.

In this manual you can find explanations about the E-mail screen, Scan to Folder screen, WSD scanner screen, list of stored files screen, and the network delivery scanner screen. For details about each of these screens, see "E-mail Screen", "Scan to Folder Screen", "WSD Scanner Screen", "List of Stored Files", and "Network Delivery Scanner Screen" respectively.

Reference


- p.25 "E-mail Screen"
- p.60 "Scan to Folder Screen"
- p.87 "WSD Scanner (Push Type) Screen"
- p.106 "List of Stored Files"
- p.127 "Network Delivery Scanner Screen"

Simplified Display


This section explains how to switch to the simplified display.

When you press the [Simplified Display] key, the screen changes from the initial display to the simplified display.

Letters and keys are displayed at a larger size, making operations easier.

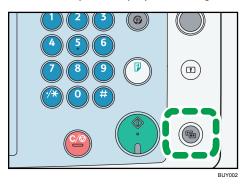

Example of Simplified Display

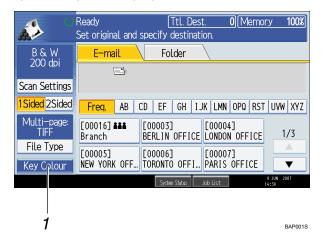

1. [Key Colour]

Press to increase screen contrast by changing the color of the keys. This is available only for the simplified display.

Note

- To return to the initial screen, press the [Simplified Display] key again.
- Certain keys do not appear on the simplified display.

Confirmation Displays

This section explains three confirmation displays: Check Modes, Preview, and Scanned Files Status.

Check Modes


This section explains items that are displayed and how to display the Check Modes screen.

Use the Check Modes screen to check scanning and transmission settings.

Pressing [Check Modes] switches the screen from the initial scanner screen to the Check Modes screen.

Store Fil	k Modes						
Search Dest.	Delivery Dest.	Preview	/ Ttl. Des	t. Memory			
tination.				J[100%]			
E-mail Address: 0							
			Prg. Dest.				
lecent		То	D Cc	Bcc			
EF GH IJ	K LMN OF	PQ RST	UVW XYZ	Change Title			
	NDÔN OFF TO	Ronto of P	00007] ARIS OFFI E	1/2			

Check Modes

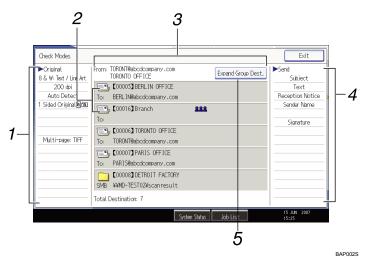

1. Original

Displays Scan Settings, Original Feed Type, and other scanning settings.

2. Transmission function icon

Displays the icon of the transmission function in use.

3. Sender and Destination

Displays the sender and transmission or delivery destinations.

The (**&&&**) symbol indicates a group destination.

The (🗒) symbol indicates a destination that can receive encrypted e-mail.

4. Send

Displays transmission settings such as Sender and Subject.

5. [Expand Group Dest.]

Press to display the members of the group, when a group is specified as the destination.

🕓 Note

• While this machine is being used as a WSD scanner, only the settings specified directly on the machine can be displayed.


Preview

Use the Preview screen to check that originals have been scanned correctly.

This section explains about the Preview screen that can be used before sending files by e-mail or Scan to Folder, or delivering files.

Before you start scanning, press [Preview]. If you scan originals while [Preview] is selected, the Preview screen appears. You can start or cancel sending the files after checking the preview and the scan settings used for scanning.

Preview

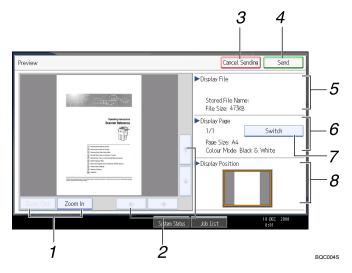

1. [Zoom Out] and [Zoom In]

Press to reduce or enlarge the displayed preview.

2. [←][→][↑][↓]

Press to shift the displayed area.

3. [Cancel Sending]

Press to close a preview and interrupt a transmission.

4. [Send]

Press to close a preview and continue a transmission.

5. Display File

Displays a file's name and size.

6. Display Page

Displays the number of the currently displayed page, total number of pages, page size, and color mode.

7. [Switch]

Press to change the page of the selected file that is displayed.

8. Display Position

Displays the position of an image when enlarged.

Note

- Preview is not available if you are scanning by WSD. View the scanned images on the destination computer instead.
- Preview is not available if a file is scanned using [Store to HDD].
- You can view a stored file using the Preview screen displayed from the list of stored files. For details about viewing a stored file, see "Checking a Stored File Selected from the List".

- Preview is not available if you select High Compression PDF as the file type.
- Preview might not be displayed if scanning failed or the image file is corrupted. If this is the case, scan the original again.

Reference

• p.109 "Checking a Stored File Selected from the List"

Scanned Files Status

This section explains items that are displayed and how to display the Scanned Files Status screen.


Use the Scanned Files Status screen to check e-mail transmission, Scan to Folder, and delivery results.

Press [Scanned Files Status] to display the Scanned Files Status screen.

Store File Scanned Files Status					Che	ck Modes	
Search Des	st. Deliv	very Dest	t.	Previe	w	Ttl. Des	st. Memory
tination. 0.100%							
E-mail Address: 0							
Prg. Dest,							
Recent To Cc Bcc				Bcc			
EF GH	IJK	LMN	OPQ	RST	UVW	XYZ	Change Title
C000053 C000043 C000053 C000073 NEW YORK 0 LONDON OFF TORONTO OF PARIS OFFI 1/2 FFICE ICE FICE 1/2							

Up to 9 transmission or delivery results are displayed at the same time. Press [] or [] to switch between results.

Scanned Files Status

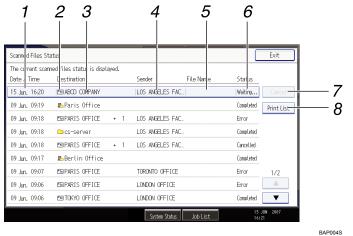

1. Date / Time

Displays the time and date transmission was specified by this machine or the time and date when Completed, Error, or Cancelled was confirmed.

2. Transmission function icon

Displays the icon of the transmission function used.

The (2) symbol indicates a destination that can receive encrypted e-mail.

3. Destination

Displays the transmission destination.

If you have selected multiple destinations, the first selected destination is displayed.

Other destinations appear as "+ X" (X indicates the number of destinations.) when sending files by e-mail or delivering them.

4. Sender

Displays the sender name.

5. File Name

Displays the stored file name of files that are simultaneously sent and stored, or of stored files that are sent.

6. Status

Displays one of the following transmission statuses: Completed, Trnsmtg., Waiting..., Error, or Cancelled.

7. [Cancel]

To cancel transmission, select a file whose status is "Waiting...", and then press [Cancel].

8. [Print List]

Press to print transmission results.

Note

- You cannot check scanner function transmission results by pressing [Job List] at the bottom of the screen. To check transmission results, press [Scanned Files Status], and then display the Scanned Files Status screen.
- Depending on security settings, some transmission results might not be displayed.

1. Sending Scan Files by E-mail


You can attach scan files to e-mails and send them via connections such as LAN and the Internet.

Before Sending Scan Files by E-mail

This section explains the necessary preparations and the procedure for sending scan files by e-mail.

Overview of Sending Scan Files by E-mail

This section describes the process for sending scan files by e-mail.

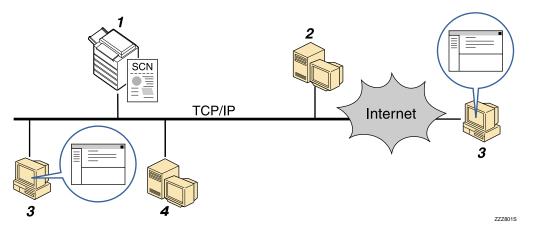

1. This machine

You can attach scan files to e-mail and send them to a mail server. You can also encrypt and/or attach a signature to the scan files you send by e-mail.

2. SMTP server

You need to have an access to an e-mail server that supports SMTP (Simple Mail Transfer Protocol), to send scan files by e-mail. However, it is not essential to have an e-mail server inside the LAN where this machine belongs. It transfers a received e-mail to a specified destination through a LAN or the Internet.

3. Client computer

Use e-mail client software to receive e-mail messages and scan file attachments that are generated by this machine.

4. LDAP Server

Use this server for administering e-mail accounts, searching the network, and authenticating the computers that access the machine. Using the LDAP server, you can search for destinations from the machine.

Vote V

• This machine does not support SMTPS (SMTP over SSL).

Preparation for Sending by E-mail

To send scanned files by e-mail, you must first perform the following:

- Check the machine is properly connected to the network
- Configure the network settings in [System Settings]
- Configure the necessary settings in [Scanner Features]

Checking the machine is properly connected to the network

Check that this machine is properly connected to the network.

For details about how to connect this machine to a network, see "Connecting to the Interface", Network and System Settings Reference.

Configuring the network settings in [System Settings]

Configure the network settings in [System Settings] according to your environment and how you will be using the machine.

The following procedure explains connecting this machine to an IPv4 network using Ethernet cable.


Note that the settings you must configure will vary depending on your operating environment. For details about network settings and configuration procedures, see "Network Settings Required to Use E-mail Function", Network and System Settings Reference.

1. Press the [User Tools/Counter] key, and then press [System Settings].



The System Settings screen appears.

2. Press the [Interface Settings] tab.

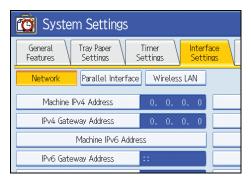


3. Press [Machine IPv4 Address] to specify the machine's IPv4 address.

To specify a static IPv4 address for this machine, press [Specify], and then enter the IPv4 address and subnet mask.

To obtain an IPv4 address from a DHCP server automatically, press [Auto-Obtain (DHCP)].

- 4. Press [IPv4 Gateway Address], and then enter the IPv4 gateway address.
- 5. Press [Effective Protocol], and then make [IPv4] active.
- 6. Press the [File Transfer] tab, and then press [SMTP Server].

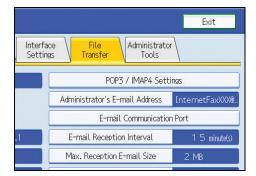

7. Press [Change], which is to the right of [Server Name], then enter the SMTP server host name or IPv4 address, and then press [OK].

If necessary, you can change the port number by pressing [Change], which is to the right of the port number.

8. Press [Exit] twice.

Note

• If an extended wireless LAN board (optional) is installed, press [LAN Type] on the [Interface Settings] tab, then press [Ethernet], and then configure the network settings.


23

Configuring the necessary settings in [Scanner Features]

Using [Scanner Features], you can make or change various settings related to the scanner function, such as compressing scan data or printing the scanner journal. Configure the scanner settings according to your environment and how you will be using the machine.

This section explains how to display the Scanner Features screen. For details about the settings on this screen, see "Scanner Features".

1. Press the [User Tools/Counter] key, and then press [Scanner Features].

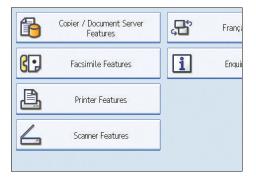

The Scanner Features screen appears.

2. Press the [General Settings], [Scan Settings], [Send Settings], or [Initial Settings] tabs and configure the relevant settings on those tabs.


Reference

• p.185 "Scanner Features"

Registering E-mail Addresses in the Address Book

You can register frequently used e-mail addresses in the address book. This section explains how to register e-mail addresses in the address book.

- 1. Press the [User Tools/Counter] key, and then press [System Settings].
- 2. Press the [Administrator Tools] tab.

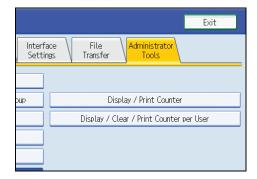

1

- 3. Press [Address Book Management].
- 4. Press [New Program], and then enter necessary information.

You can register the e-mail address in groups.

5. Press [Exit] twice.

Note

- For details about registering e-mail addresses in the address book, see "Registering Addresses and Users for Facsimile/Scanner Functions", Network and System Settings Reference.
- You can also register e-mail addresses in the address book using Web Image Monitor. For details
 about how to display Web Image Monitor, see "Monitoring and Configuring the Machine", Network
 and System Settings Reference. For details about registering addresses in the address book, see Web
 Image Monitor Help.
- Encrypted files can be sent by e-mail only to destinations for which decryption is set. For details about sending encrypted files by e-mail, see "Security Settings to E-mails".

Reference


• p.49 "Security Settings to E-mails"

E-mail Screen

This section explains the screen layout when sending scan files by e-mail.

The function items displayed serve as selector keys. You can select or specify an item by pressing it.

When you select or specify an item on the display panel, it is highlighted like selected appear like . Keys that cannot

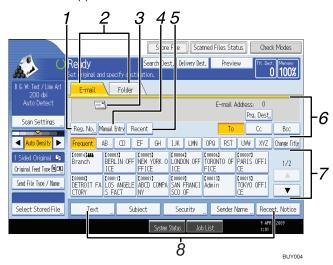

1. [Reg. No.]

Press this key to specify the destination using a five-digit registration number.

2. E-mail / Folder

Press these tabs to switch between the E-mail screen and Scan to Folder screen.

Switch the screen also when sending the same files by both e-mail and Scan to Folder.

3. E-mail icon

Indicates that the E-mail screen is displayed.

4. [Manual Entry]

To specify destinations not registered in the address book, press this key, and then enter the e-mail addresses using the soft keyboard that appears.

5. [Recent]

Press this key to select destinations that have been recently specified using [Manual Entry]. If there are multiple recent destinations, press [▲] or [▼] to scroll through them.

6. Destination field

The specified destination appears. If more than one destination has been specified, press [▲] or [▼] to scroll through the destinations.

7. Destination List

The list of destinations registered in the machine appears. If all of the destinations cannot be displayed, press [▲] or [▼] to switch the screen.

The (**233**) symbol indicates a group destination.

The (🖨 or 🚔) symbol indicates a destination that can receive encrypted e-mail.

8. [Text] [Subject] [Security] [Sender Name] [Recept. Notice]

Enter the message and specify the subject, security (encryption and a signature), sender, and whether or not to use Message Disposition Notification.

Basic Procedure for Sending Scan Files by E-mail


This section explains the basic procedure for sending scan files by e-mail.

1. Make sure that no previous settings remain.


If a previous setting remains, press the [Clear Modes] key.

2. If the network delivery scanner screen or Scan to Folder screen appears, switch to the Email screen.

For details, see "Switching to the E-mail Screen".

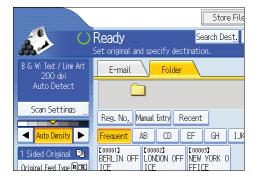

- 3. Place originals.
- 4. If necessary, press [Scan Settings] to specify scanner settings such as resolution and scan size.

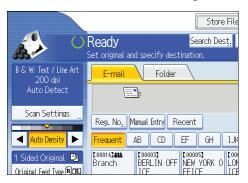

For details, see "Various Scan Settings".

5. If necessary, specify the scanning density.

For details, see "Adjusting Image Density".

- 6. If necessary, press [Original Feed Type] to specify settings such as original orientation. For details, see "Setting of Original Feed Type".
- If necessary, press [Send File Type / Name] to specify settings such as file format and file name.

For details, see "Specifying the File Type and File Name".

8. Specify the destination.

You can specify multiple destinations.

For details, see "Specifying E-mail Destinations".

- If necessary, press [Text] to enter the e-mail message.
 For details, see "Entering the E-mail Message".
- If necessary, press [Subject] to specify the e-mail subject.
 For details, see "Entering the E-mail Subject".
- To specify the e-mail sender, press [Sender Name].
 For details, see "Specifying the E-mail Sender".
- 12. If necessary, press [Security] to specify [Encryption] or [Signature].

For details, see "Security Settings to E-mails".

13. To use Message Disposition Notification, press [Recept. Notice].

If you select [Recept. Notice], the selected e-mail sender will receive e-mail notification when the email recipient has opened the e-mail.

14. Press the [Start] key.

If you are scanning batches, place the next originals.

Note

- If you have selected two or more destinations, the destinations can be made to appear one by one by pressing [▲] or [▼] next to the destination field.
- To cancel a selected destination, press [▲] or [▼] to display the destination in the destination field, and then press the [Clear/Stop] key. You can cancel a destination selected from the destination list by pressing the selected destination again.
- In [System Settings], you can specify the administrator's e-mail address as the default sender name. This lets you send e-mail without entering anything for [Sender Name]. For details, see "File Transfer", Network and System Settings Reference.
- Depending on the security setting, the logged-on user may be specified as [Sender Name].
- To use Message Disposition Notification, log on to the machine as a user and specify the sender. Note, however, that the [Recept. Notice] notification e-mail may not be transmitted if the e-mail software of the recipient does not support Message Disposition Notification.
- If you press [Check Modes] before pressing the [Start] key, the initial scanner screen switches to the Check Modes screen. You can use the Check Modes screen to check the settings such as destinations. For details, see "Check Modes".
- If you press [Preview] and then start scanning while [Preview] is selected, the Preview screen appears.
 You can use this screen to check how the originals are scanned and the scan setting used for scanning.
 After checking the preview, you can specify whether to send the file or not. For details, see "Preview".
- To cancel scanning, press the [Clear/Stop] key.

- You can also store a scan file and simultaneously send it by e-mail. For details, see "Simultaneous Storage and Sending by E-mail".
- When [Security] is set to [Encryption], if you specify multiple destinations, a delivery failure message will appear each time a scan file is sent to a destination where decryption settings have not been configured.
- After an e-mail is sent, the destination, sender, subject, text, and file name fields will be automatically cleared. If you want to preserve the information in these fields, contact your local dealer.

Reference

- p.30 "Switching to the E-mail Screen"
- p.153 "Various Scan Settings"
- p.161 "Adjusting Image Density"
- p.162 "Setting of Original Feed Type"
- p.170 "Specifying the File Type and File Name"
- p.31 "Specifying E-mail Destinations"
- p.46 "Entering the E-mail Message"
- p.45 "Entering the E-mail Subject"
- p.41 "Specifying the E-mail Sender"
- p.49 "Security Settings to E-mails"
- p.15 "Check Modes"
- p.16 "Preview"
- p.48 "Simultaneous Storage and Sending by E-mail"

1


Switching to the E-mail Screen

This section explains how to switch the screen to the E-mail screen.

If the Scan to Folder screen is being displayed, press [E-mail] to switch to the E-mail screen.


If the network delivery scanner screen is being displayed, switch to the E-mail screen as follows:

1. Press [Delivery Dest.].

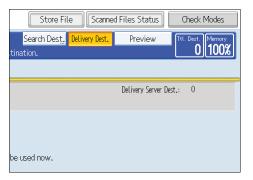

The E-mail screen or Scan to Folder screen appears.

2. If the Scan to Folder screen appears, press [E-mail].

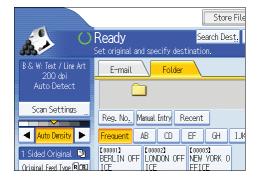

The E-mail screen appears.

🕓 Note

- You cannot switch from the network delivery scanner screen or other screens while destinations are being specified. To clear the specified destination, display the destination in the destination field, and then press the [Clear/Stop] key.
- If you are scanning files using WSD, [Swtch Dest.List] or [WSD Dest.] appears instead of [Delivery Dest.]. To switch to the E-mail screen, press [Swtch Dest.List], and then, on the screen that appears, press [E-mail / Folder], or press [WSD Dest.].

Specifying E-mail Destinations

This section explains how to specify e-mail destinations.

You can specify e-mail destinations by any of the following methods:

- Select the destination from the machine's address book
- Enter the e-mail address directly
- Select the destination from recent destinations
- Search the LDAP server for the destination and select it

Before you select destinations, make sure you have selected [To]. If necessary, press [Cc] or [Bcc], and then select destinations.

Note

• You can specify multiple destinations.

Selecting the Destination from the Machine's Address Book

This section explains how to select the destination from the machine's address book.

🚼 Important 🔵

 To use this function, you must register the destinations in [System Settings] in advance. For details, see "Registering Addresses and Users for Facsimile/Scanner Functions", Network and System Settings Reference.

You can use the following methods to select destinations registered in the machine's address book:

- Select a destination from the list
- Select a destination by entering the registration number
- Select a destination by searching the machine's address book

Selecting a destination from the list

Select the destination from the destination list.

1

1. In the destination list, press the key including the destination name.



The key of the selected destination is highlighted, and the destination appears in the destination field at the top of the screen.

If the target destination does not appear, take one of the following steps:

- Display the destination by selecting its initial letter from the title
- Display the destination by pressing [▲] or [▼]


Vote

• Depending on the security setting, some destinations may not appear in the destination list.

Selecting destinations by entering the registration numbers

Select the destination from the machine's address book using its registration number.

1. Press [Reg. No.].

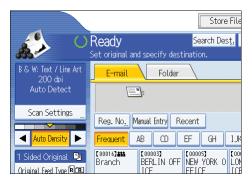

 Using the number keys, enter the five-digit registration number assigned to the required destination.

If the entered number is less than five digits, press the [#] key after the last number.

Example: To enter 00003

Press the [3] key, and then press the [#] key.

By pressing [Change], you can change the selected destination.


1

3. Press [OK].

Searching the machine's address book for the destination and selecting it

This section explains how to search the machine's address book for the destination and select it.

1. Press [Search Dest.].

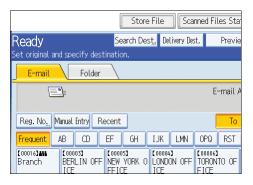

To search by destination name, press [Name].

To search by e-mail address, press [E-mail Address].

The soft keyboard appears.

You can also search by combining [Name] and [E-mail Address].

3. Enter the beginning of the destination name.

To search by e-mail address, enter the beginning of the address.

4. Press [OK].

If necessary, press [Advanced Search] to specify the detailed search criteria, and then press [OK].

By pressing [Advanced Search], you can search using criteria such as [Name], [Fax Destination], [Email Address], and [Folder Name]. You can specify search criteria such as [Beginning Word] or [End Word]. You can refine your search using multiple criteria.



The illustrated screen is an example. The items that actually appear on the screen may differ.

6. Press [Start Search].

Destinations that match the search criteria are displayed.

- 7. Select a destination.
- 8. Select [To], [Cc], or [Bcc].
- 9. Press [OK].

Vote

- If [LDAP Search] is set to [On] in [System Settings], check that [Address Book] has been selected before executing the search.
- Search criteria that appear in [Advanced Search], such as [Name], [Fax Destination], [E-mail Address], and [Folder Name], are registered in the machine's address book. For details, see "Registering Addresses and Users for Facsimile/Scanner Functions", Network and System Settings Reference.
- By pressing [Details], you can view details about the selected destinations.
- Up to 100 destinations can be displayed as search results.
- By pressing [Advanced Search], the following criteria appear:
 - [Beginning Word]: The names which start with the entered character or characters are targeted. For example, to search for "ABC", enter "A".
 - [End Word]: The names which end with the entered character or characters are targeted. For example, to search for "ABC", enter "C".
 - [Exact Match]: The names which correspond to an entered character or characters are targeted. For example, to search for "ABC", enter "ABC".
 - [Include one Word]: The names which contain an entered character or characters are targeted.
 For example, to search for "ABC", enter "A", "B", or "C".
 - [Exclude Words]: The names which do not contain an entered character or characters are targeted.


For example, to search for "ABC", enter "D".

Entering an E-mail Address Manually

This section explains how to enter an e-mail address manually.

1

1. Press [Manual Entry].

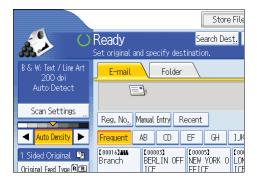

The soft keyboard appears.

- 2. Enter the e-mail address.
- 3. Press [OK].

Note

- Depending on the security settings, [Manual Entry] may not be displayed.
- To change a registered destination e-mail address, press [Edit] to the left of the destination field to display the soft keyboard, use the soft keyboard to enter the new address, and then click [OK].
- The e-mail address that is entered directly can be registered in the machine's address book. For details, see "Registering a Directly-Entered Destination in the Address Book".


Reference

• p.39 "Registering a Directly-Entered Destination in the Address Book"

Selecting the Destination from Recent Destinations


This section explains how to display destinations that have been recently entered directly, and how to select one of those destinations.

1. Press [Recent].

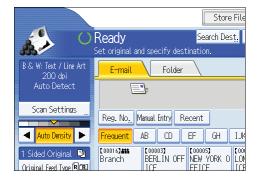

The most recent, directly entered destinations appear.

2. Select a destination.

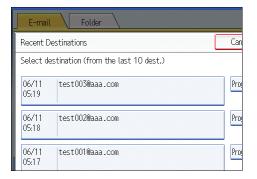

3. Press [OK].

Note

- Depending on the security settings, [Recent] may not be displayed.
- If there are multiple recent destinations, press [▲] or [▼] to scroll through them.
- The 10 most recent destinations are displayed. Destinations are deleted in chronological order, oldest first.
- You can add recent destinations to the machine's address book. For details, see "Registering a Recent Destination in the Address Book".

Reference

• p.40 "Registering a Recent Destination in the Address Book"


Selecting Destinations by Searching an LDAP Server

This section explains how to search for an address registered in an LDAP server and specify it as an e-mail destination.

🚼 Important 🗋

- To use this function, an LDAP server must be connected to the network.
- Under [System Settings], the LDAP server must be registered and [LDAP Search] must be set to [On]. For details, see "System Settings", Network and System Settings Reference.

1. Press [Search Dest.].

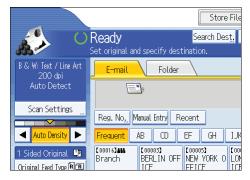

2. Select the LDAP server that appears next to [Address Book].

Register the LDAP server in advance in [System Settings].

Search Destination	
	tions, and press [Start Search]. ales Division Trading Divisi
Search Conditions	E-mail Folder
Name	
E-mail Address	

If authentication is required to access the selected server, the authentication screen appears. To authenticate, enter the user name and password.

To search by destination name, press [Name].

To search by e-mail address, press [E-mail Address].

The soft keyboard appears.

You can also search by combining [Name] and [E-mail Address]. If you search by [Name], LDAP server's settings determine whether the search is based on surname or first name. Consult your administrator.

4. Enter the beginning of the destination name.

To search by e-mail address, enter the beginning of the destination address.

- 5. Press [OK].
- If necessary, press [Advanced Search] to specify the detailed search criteria, and then press [OK].

By pressing [Advanced Search], you can search using criteria such as [Name], [Fax Destination], [Email Address], [Company Name], and [Department Name]. You can specify search criteria such as [Beginning Word] or [End Word]. You can refine your search using multiple criteria.

-						
Name	Beainning Word	End Word	Exact Match	Include one Word	Exclude Words	Fuzzy Search
Fax Destination	Beaining Word	End Word	Exact Match	Include one Word	Exclude Words	Fuzzy Search
E-mail Address	Beaining Mord	End Hard	Exact Match	Include one Word	Exclude Words	Fuzzy Search
Company Name	Bearning Mard	End Ward	Exact Match	Include are Word	Exclude Words	Fuzzy Search
Department Name	Beginning Mond	End Ward	Eact Match	Include one Word	Exclude Words	Fuzzy Search

The illustrated screen is an example. The items that actually appear on the screen may differ.

7. Press [Start Search].

Destinations that match the search criteria are displayed.

- 8. Select the destination.
- 9. Select [To], [Cc], or [Bcc].
- 10. Press [OK].

Vote

- Search criteria that appear in [Advanced Search], such as [Name], [Fax Destination], [E-mail Address], [Company Name], and [Department Name], are registered in the LDAP server.
- If you specified [Search Options] on [Program / Change / Delete LDAP Server] under [System Settings], you can add a search condition for LDAP search on the [Advanced Search] screen. For details, see "System Settings", Network and System Settings Reference.
- By pressing [Details], you can view details about the selected destinations.
- Up to 100 destinations can be displayed as search results.
- If an e-mail address returned by the LDAP server is too long, it will be impossible to specify it as the destination. For details about the number of characters that can be specified, see "Sending e-mail".
- You can register multiple e-mail addresses in individual LDAP server accounts. However, only one email address will be displayed as the search result. Usually, the address that was registered first on the LDAP server is the address that is displayed.
- By pressing [Advanced Search], the following criteria appear:
 - [Beginning Word]: The names which start with the entered character or characters are targeted. For example, to search for "ABC", enter "A".
 - [End Word]: The names which end with the entered character or characters are targeted. For example, to search for "ABC", enter "C".
 - [Exact Match]: The names which correspond to an entered character or characters are targeted. For example, to search for "ABC", enter "ABC".
 - [Include one Word]: The names which contain an entered character or characters are targeted.
 For example, to search for "ABC", enter "A", "B", or "C".

• [Exclude Words]: The names which do not contain an entered character or characters are targeted.

For example, to search for "ABC", enter "D".

• [Fuzzy Search]: a vague search (The function of this vague search depends on the system supported by the LDAP server.)


E Reference

• p.199 "Sending e-mail"


Registering a Directly-Entered Destination in the Address Book

This section explains how to register a directly-entered destination in the machine's address book. You can also register a destination selected from the LDAP server.

1. In the destination field, display the destination you want to register.

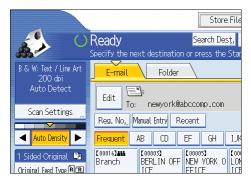

2. Press [Prg. Dest.].

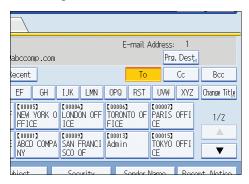

3. Press [Names], and then specify the name and other information to be registered.

For details about specifying the information to be registered, see "Registering Addresses and Users for Facsimile/Scanner Functions", Network and System Settings Reference.

4. Press [OK].


Note

- Depending on the security setting, [Prg. Dest.] may not appear. In such case, you cannot complete the registration.
- To register in the machine's address book a destination searched for and selected from the LDAP server, display the destination, and then press [Prg. Dest.].

Registering a Recent Destination in the Address Book

This section explains how to register recent destinations in the machine's address book.

1. Press [Recent].

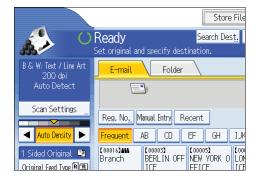

The most recent, directly entered destinations appear.

2. Press [Program Dest.].



3. Press [Names], and then enter the name and other necessary information.

For details about entering the other information, see "Registering Addresses and Users for Facsimile/ Scanner Functions", Network and System Settings Reference.

4. Press [OK].

Note

- Depending on the security settings, [Recent] may not be displayed.
- If there are multiple recent destinations, press [▲] or [▼] to scroll through them.

1

Specifying the E-mail Sender

This section explains how to specify the e-mail sender.

To send e-mail, you must specify the name of the sender.

You can specify the e-mail sender by any of the following methods:

- Select the sender from the sender list
- Select the sender by entering the registration number
- Select the sender by searching the machine's address book


Note

- Senders must be registered in advance under [System Settings]. For details, see "Registering Addresses and Users for Facsimile/Scanner Functions", Network and System Settings Reference.
- In [System Settings], you can specify the administrator's e-mail address as the default sender name. This lets you send e-mail without entering anything for [Sender Name]. For detail, see "File Transfer", Network and System Settings Reference.
- Depending on the security setting, the logged-on user may be specified as [Sender Name].
- When a protection code has been set, a screen for entering the protection code appears after selecting the sender. Enter the protection code, and then press [OK]. If the protection code you entered is correct, the sender name is displayed.

Selecting a Sender from the List

This section explains how to select the sender from the machine's sender list.

1. Press [Sender Name].

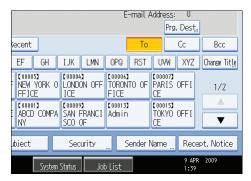


- 2. Select the sender.
- 3. Press [OK].

Using a Registration Number to Specify a Sender Name

Select the sender using the registration numbers specified by users in the machine's address book.

1. Press [Sender Name].

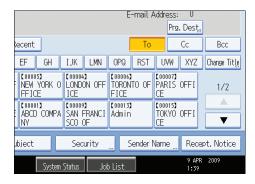

- 2. Press [Registration No.].
- 3. Using the number keys, enter the five-digit registration number assigned to the required destination.

If the entered number is less than five digits, press the [#] key after the last number.

Example: To enter 00006

Press the [6] key, and then press the [#] key.


By pressing [Change], you can change the selected destination.

4. Press [OK] twice.

Selecting the Sender by Searching the Machine's Address Book

This section explains how to select the sender by searching the machine's address book.

1. Press [Sender Name].

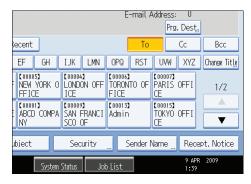

2. Press [Search].

3. To search by user name, press [Name].

To search by e-mail address, press [E-mail Address].

The soft keyboard appears.

You can also search by combining [Name] and [E-mail Address].

4. Enter the beginning of the sender's name you want to search for.

To search by e-mail address, enter the beginning of the address.

- 5. Press [OK].
- If necessary, press [Advanced Search] to specify the detailed search criteria, and then press [OK].

By pressing [Advanced Search], you can search using criteria such as [Name], [Fax Destination], [Email Address], and [Folder Name].

You can specify search criteria such as [Beginning Word] or [End Word]. You can refine your search using multiple criteria.



The illustrated screen is an example. The items that actually appear on the screen may differ.

7. Press [Start Search].

Destinations that match the search criteria are displayed.

- 8. Select the sender.
- 9. Press [OK] twice.

Note

- Search criteria that appear in [Advanced Search], such as [Name], [Fax Destination], [E-mail Address], and [Folder Name], are registered in the machine's address book. For details, see "Registering Addresses and Users for Facsimile/Scanner Functions", Network and System Settings Reference.
- By pressing [Details], you can view details about the selected sender.
- By pressing [Advanced Search], the following criteria appear:
 - [Beginning Word]: The names which start with the entered character or characters are targeted.
 For example, to search for "ABC", enter "A".
 - [End Word]: The names which end with the entered character or characters are targeted.

For example, to search for "ABC", enter "C".

- [Exact Match]: The names which correspond to an entered character or characters are targeted. For example, to search for "ABC", enter "ABC".
- [Include one Word]: The names which contain an entered character or characters are targeted. For example, to search for "ABC", enter "A", "B", or "C".
- [Exclude Words]: The names which do not contain an entered character or characters are targeted.

For example, to search for "ABC", enter "D".

Entering the E-mail Subject

When sending a scan file by e-mail, you can enter a subject line for the e-mail.

1. Press [Subject].

E	<u> </u>]=						E	-mail A
Reg. No,	Manual I	ntry R	ecent					То
Frequent	AB	Œ	EF	GH	IJK	LMN	OPQ	RST
[00016]### Branch	Coooc BERL ICE	IN OFF	(0000 NEW FFIC	York o	COODO LONDO ICE) ON OFF	[00006] TORON FICE	ITO OF
[00008] DETROIT F CTORY	A LOS S F/	ANGELE	COOOO ABCD NY	COMPA	[00009 SAN F SCO (RANCI	[00013] Admir	
Text	<u> </u>	Su	bject		Sec	urity	9	Sender N
				System	Status	Jol	b List	

2. Enter the subject.

To enter characters, press [Text Entry].

To enter symbols, press [Symbol Entry].

To add predefined User Text registered on this machine, press [User Text].

For details about entering the text, see "Entering Text", About This Machine.

3. Press [OK].

Note

 If you do not specify the e-mail subject, the settings specified in [Default E-mail Subject] on the [Send Settings] tab under [Scanner Features] will be applied. For details, see "Send Settings".

Reference

• p.191 "Send Settings"

Entering the E-mail Message

This section explains how to enter the e-mail message.

The message can be created in the following ways:

- Select the registered e-mail message from the list
- Enter the message directly


🔁 Important

• The messages that can be selected from the list must be registered in [System Settings] in advance. For details, see "File Transfer", Network and System Settings Reference.

Selecting a Message from the List

You can select a message from the list.

1. Press [Text].

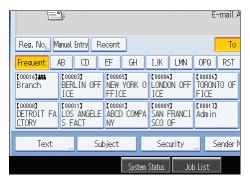

2. Select a message.



3. Press [OK].

Manual Entry of a Message

You can enter the message manually.

1. Press [Text].

E	ŀ			E-mail A
Reg. No M	lanual Entry R	ecent		То
Frequent /	AB CD	EF GH	IJK LMN	OPQ RST
[00016] am Branch	[00003] BERLIN OFF ICE	[00005] NEW YORK O FFICE	【00004】 LONDON OFF ICE	[00006] TORONTO OF FICE
[00008] DETROIT FA CTORY	【00011】 LOS ANGELE S FACT	(00001) ABCD COMPA NY	[00009] SAN FRANCI SCO OF	[00013] Admin
Text	Si	bject	Security	Sender N
		System	Status Joł	o List

2. Press [Manual Entry].


The soft keyboard appears.

- 3. Enter the message.
- 4. Press [OK] twice.

Simultaneous Storage and Sending by E-mail

This section explains how to store a file and simultaneously send it by e-mail.

1. Press [Store File].

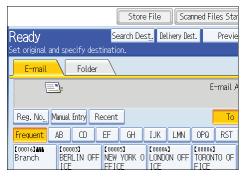

- 2. Select [Store to HDD + Send].
- If necessary, specify the stored file's information, such as [User Name], [File Name], and [Password].

For details, see "Specifying File Information for a Stored File".

- 4. Press [OK].
- 5. Specify the destination, make any other necessary settings, and then send the e-mail.

For details about sending a file by e-mail, see "Basic Procedure for Sending Scan Files by E-mail".

6. Press the [Start] key.

Note

- Depending on the security setting, [Access Privileges] may appear instead of [User Name]. For details about specifying [Access Privileges], consult the administrator.
- You can resend stored files by e-mail. To resend stored files, select the files on the Select Stored File screen, and then send them. For details, see "Sending a Stored File".
- If a file is sent and stored simultaneously with [Security] set, the e-mail will be encrypted and the signature applied, but the stored file will not be changed.

Reference

- p.103 "Specifying File Information for a Stored File"
- p.27 "Basic Procedure for Sending Scan Files by E-mail"
- p.112 "Sending a Stored File"

1

Security Settings to E-mails

This section explains the procedure for applying security (encryption and a signature) to e-mail.

Applying security (encryption and a signature) to e-mail helps prevent spoofing and information leakage.

Vote


- The S/MIME is used to set security. For details about security settings, consult your network administrator.
- Applying security to e-mail can reduce transmission speed.

Sending Encrypted E-mail

Use the following procedure to specify a destination for which encryption is configured, and encrypt and send an e-mail.

Destinations for which encryption can be configured for each transmission are indicated by this symbol

1. Press [Security].

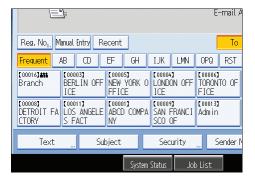

2. Select [Encryption].



3. Press [OK].

Note

- Encrypting e-mail will increase its size.
- When you specify a destination denoted by the symbol in (which indicates that e-mail sent to this destination is always encrypted) encrypted e-mail will be sent regardless of the setting specified in [Security].
- If you have selected multiple destinations including destinations for which encryption has not been configured, e-mail sent to such destinations will not be encrypted even if you specify encryption.
- If you selected [Store to HDD + Send], the e-mail will be encrypted, but the stored file will not be encrypted.

Sending E-mail with a Signature

Use the following procedure to apply a signature to an e-mail that has scan file attachments.

- 1. Press [Security].
- 2. Select [Signature].



3. Press [OK].

Note

- The certificate (device certificate) installed on this machine is used to attach signatures.
- Note that the following can result if certain signature settings are specified by the administrator:
 - [Signature] does not appear. This is because you cannot apply signatures to scan files that are sent by e-mail.
 - You cannot change the [Signature] settings. This is because a signature is always applied to scan files that are sent by e-mail.

Sending the URL by E-mail

This section explains how to send the URL of a scanned file by e-mail.

Use this function if network restrictions prevent you sending attachments by email.

🔁 Important

- Depending on your e-mail application, a phishing warning might appear after you receive an e-mail message. To prevent phishing warnings appearing after you receive e-mail from a specified sender, you must add the sender to your e-mail application's exclusion list. For details about how to do this, see your e-mail application's Help.
- 1. In [Scanner Features], on the [Send Settings] tab, press [Stored File E-mail Method], and then select [Send URL Link].

For details about specifying the setting, see "Send Settings".

2. Return to the initial scanner screen, and then press [Store File] to select [Store to HDD + Send1.

To send the URL by e-mail, you must select [Store to HDD + Send]. For details, see "Simultaneous Storage end Sending by E-mail".

- 3. Press [OK].
- 4. Specify the e-mail destination, make any other necessary settings, and then send the e-mail.

For details about sending e-mail, see "Basic Procedure for Sending Scan Files by E-mail".

An e-mail similar to the following will be sent to the destination:



RAP0445

5. In the e-mail destination, click the URL.

Web Image Monitor starts.

6. View, delete, send, or download the file over the network using Web Image Monitor.

Note

- For details about Web Image Monitor functions and their settings, see "Monitoring and Configuring the Machine", Network and System Settings Reference.
- It is recommended that you use Web Image Monitor on the same network environment.

- Depending on the environment, even if you click the URL in the file sent by e-mail, the browser may not start and you may not be able to view the file. If this happens, click the same URL again, or manually enter the URL in the browser's address bar.
- To display details about the functions for managing stored files using Web Image Monitor, click [Help] on the upper right of each Web browser's window.
 - You can send the URL by e-mail and simultaneously send it by Scan to Folder. In this case, the file is sent to the Scan to Folder destination, not the URL.
 - To send a stored file, see "Sending a Stored File".

Reference

- p.191 "Send Settings"
- p.48 "Simultaneous Storage and Sending by E-mail"
- p.27 "Basic Procedure for Sending Scan Files by E-mail"
- p.112 "Sending a Stored File"

2. Sending Scan Files to Folders


Using the Scan to Folder function, you can send scan files over the network to shared folders, FTP server folders, or NetWare folders.

Before Sending Files by Scan to Folder

This section describes the preparations and procedure for sending files by Scan to Folder.

Overview of Sending Scan Files by Scan to Folder

This section describes the process for sending scan files by Scan to Folder.

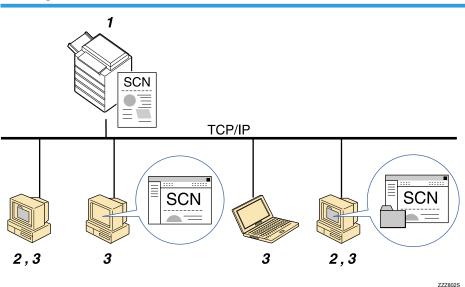

Sending files to shared folders

1. This machine

You can send scan files to shared network folders. To send scan files to shared network folders, use the SMB protocol.


2. Computer with a shared folder

To use this function, it is necessary to create a shared folder in advance. You can specify a shared folder to save scan files.

3. Client computer

You can also browse scanned files saved to a shared folder from a client computer.

Sending files to an FTP server

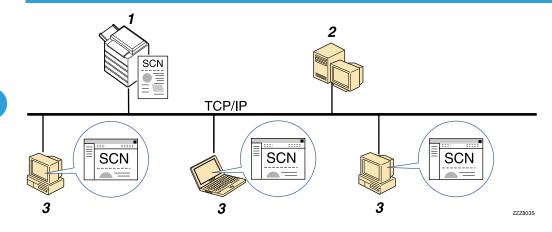

1. This machine


You can send scan files to FTP server folders. To send scan files to FTP server folders, use the FTP protocol.

2. FTP server

The FTP server is a server that provides file transfer services among computers on the same network. Transferred files are stored on this server. It is essential to have the FTP server inside the LAN/WAN where this machine belongs. It is not possible to access an FTP server via a proxy server.

3. Client computer

You can browse scanned files saved to an FTP server from a client computer. You need to have an FTP client program on the computer to connect to an FTP server.

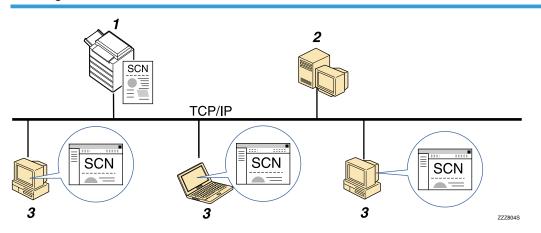

Sending files to a NetWare server

1. This machine

You can send scan files to NetWare folders. To send scan files to NetWare folders, use the NCP protocol.

2. NetWare server

You can use this server to share files over the network via NetWare. By sending image data to the server, files can be stored on the server.

3. Client computer

To download files, a computer must be running the NetWare client and be logged onto the server.

Preparation for Sending by Scan to Folder

To send scanned files by Scan to Folder, you must first perform the following:

- Check the machine is properly connected to the network
- Configure the network settings in [System Settings]
- Configure the necessary settings in [Scanner Features]
- Create a shared folder on a computer running Microsoft Windows
- Create a shared folder on a computer running Mac OS X

Vote

- If necessary, configure the shared folders, FTP server, and Netware server on the network in advance.
- You can create the shared folder under Windows 2000/XP/Vista, Windows Server 2003/2003 R2/2008, and Mac OS X 10.2 or later.
- Files can be sent by SMB in NetBIOS over TCP/IP environments only. Files cannot be sent by SMB in NetBEUI environments.
- Scan to Folder is still possible even if sending by SMB or FTP is disabled from the control panel, Web Image Monitor, or Telnet etc.

Checking the machine is properly connected to the network

Check that this machine is properly connected to the network.

For details about how to connect this machine to a network, see "Connecting to the Interface", Network and System Settings Reference.

Configuring the network settings in [System Settings]

Configure the network settings in [System Settings] according to your environment and how you will be using the machine.

The following procedure explains connecting this machine to an IPv4 network using Ethernet cable.

Note that the settings you must configure will vary depending on your operating environment. For details about network settings and configuration procedures, see "Network Settings Required to Use Scan to Folder Function", Network and System Settings Reference.

1. Press the [User Tools/Counter] key, and then press [System Settings].



The System Settings screen appears.

2. Press the [Interface Settings] tab.

🔞 Syste	m Settings		
General Features	Tray Paper Settings	Timer Settings	Interface Settings
Network	Parallel Interf	ace Wireles	is LAN
Machine	IPv4 Address	0. 0.	0. 0
IPv4 Gate	eway Address	0. 0.	0. 0
	Machine IPv6 A	ddress	
IPv6 Gate	eway Address	::	

3. Press [Machine IPv4 Address] to specify the machine's IPv4 address.

To specify a static IPv4 address for this machine, press [Specify], and then enter the IPv4 address and subnet mask.

To obtain an IPv4 address from a DHCP server automatically, press [Auto-Obtain (DHCP)].

- 4. Press [IPv4 Gateway Address], and then enter the IPv4 gateway address.
- 5. Press [Effective Protocol], and then make [IPv4] active.

To send files to shared folders, make [SMB] active.

To send files to Netware folders, make [NetWare] active.

6. Press [Exit] twice.

Note


• If an extended wireless LAN board (optional) is installed, press [LAN Type] on the [Interface Settings] tab, then press [Ethernet], and then configure the network settings.

Configure the necessary settings in [Scanner Features]

Using [Scanner Features], you can make or change various settings related to the scanner function, such as compressing scan data or printing the scanner journal. Configure the scanner settings according to your environment and how you will be using the machine.

This section explains how to display the Scanner Features screen. For details about the settings on this screen, see "Scanner Features".

1. Press the [User Tools/Counter] key, and then press [Scanner Features].

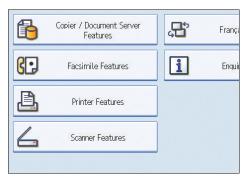

The Scanner Features screen appears.

2. Press the [General Settings], [Scan Settings], [Send Settings], or [Initial Settings] tabs and configure the relevant settings on those tabs.

Reference

• p.185 "Scanner Features"

Creating a shared folder on a computer running Microsoft Windows

If you want to send scanned files to a destination computer running Microsoft Windows, you must first create a shared folder on the destination computer. Using Windows XP Professional as an example, the following procedure explains how to create a shared folder with simple file sharing disabled.

Comportant 🔿

- If the destination computer is protected by a firewall or similar security measures, it might not be able to receive scanned documents through a shared folder. In such cases, register the machine's NetBIOS or IP address as an exception in the destination computer's firewall settings. For details, see Windows Help or the documentation of the firewall.
- You must log on as an Administrators group member to create a shared folder.

Step 1: Disable simple file sharing

- 1. On the [Start] menu, click [My Computer].
- 2. On the [Tools] menu, click [Folder Options], and then select the [View] tab.

- 3. Under [Advanced settings:], clear the [Use simple file sharing (Recommended)] check box.
- 4. Click [OK].

Step 2: Create a shared folder and set access privileges

- 1. Create the folder that you want to send scan files to.
- 2. Right-click the folder, and then click [Sharing and Security].
- 3. On the [Sharing] tab, select [Share this folder].
- 4. On the [Sharing] tab, click [Permissions].
- 5. In the [Group or user names:] list, select "Everyone", and then click [Remove].
- 6. Click [Add].
- 7. In the [Select Users or Groups] window, click [Advanced].
- 8. Specify one or more object types, select a location, and then click [Find Now].
- 9. From the list of results, select the groups and users you want to grant access to, and then click [OK].
- 10. In the [Select Users or Groups] window, click [OK].
- 11. In the [Groups or user names:] list, select a group or user, and then, in the [Allow] column of the permissions list, select either the [Full Control] or [Change] check box.

Configure the access permissions for each group and user.

- 12. Click [OK].
- 13. Select the [Security] tab, and then configure the access permissions.

Add to the list the groups and users whom you want to grant access to, and then configure the access permissions for each. The procedure is the same as the procedure explained in steps 5, 6, and 7.

14. Click [OK].

Note

- If you are creating a shared folder for the first time on this computer, you must enable the file sharing function. For details, see Windows Help.
- To register a shared folder in the machine's address book, you need the computer's IP address or computer name, and the user name and password of a user who has access permissions for the shared folder.

Creating a shared folder on a computer running Mac OS X

If you want to send scanned files to a destination computer running Mac OS X, you must first create a shared folder on the destination computer. Using Mac OS X 10.5 as an example, the following procedure explains how to create a shared folder.

🔂 Important

- You must log on as an administrator to create a shared folder.
- 1. Create the folder that you want to send scan files to.
- 2. On the Apple menu, click [System Preferences].
- 3. Click [Sharing].
- 4. Select the [File Sharing] check box.
- 5. Click [Options].
- 6. Select the [Share files and folders using SMB.] check box.
- 7. Select the account that will be used to access the shared folder.
- 8. If the [Authentication] screen appears, enter the password for the account, click [OK], and then click [Finish].
- 9. Under the [Shared Folders:] list, click [+] (new).
- 10. Select the folder you have created, and then click [Add].
- Make sure that the permissions for the user who will access this folder are set to [Read/ Write].


Note

- For more details about creating shared folders, ask your administrator.
- To register a shared folder in the machine's address book, you need the computer's IP address, and the user name and password of a user who has access permissions for the shared folder.

Registering Destination Folders in the Address Book

You can register the addresses of frequently-used destination folders in the address book. This section explains how to register destination folders in the address book.

- 1. Press the [User Tools/Counter] key, and then press [System Settings].
- 2. Press the [Administrator Tools] tab.

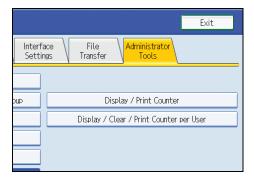

2

3. Press [Address Book Management].

4. Press [New Program], and then enter necessary information.

You can register the e-mail address in groups.


Vote

- For details about registering the address of a destination folder in the address book, see "Registering Addresses and Users for Facsimile/Scanner Functions", Network and System Settings Reference.
- You can register entries in the address book using Web Image Monitor. For details about how to display Web Image Monitor, see "Monitoring and Configuring the Machine", Network and System Settings Reference. For details about registering addresses in the address book, see Web Image Monitor Help.

Scan to Folder Screen

This section describes the screen layout when sending scan files by Scan to Folder.

The function items displayed serve as selector keys. You can select or specify an item by pressing it. When you select or specify an item on the display panel, it is highlighted like set. Keys that cannot be selected appear like .

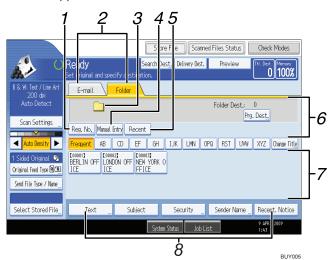

1. [Reg. No.]

Press to specify a destination using a five-digit registration number.

2. E-mail / Folder

Press to switch between the Scan to Folder screen and E-mail screen.

Also switch the screen when sending a file simultaneously by both Scan to Folder and e-mail.

3. Scan to Folder icon

Shows that the Scan to Folder screen is displayed.

4. [Manual Entry]

To specify destinations not registered in the address book, press this key to display the soft keyboard, and then enter the address of the destination folder.

5. [Recent]

Press this key to select destinations that have been recently specified using [Manual Entry]. If there is more than one recent destination, press [▲] or [▼] to scroll through them.

6. Destination field

The specified destination appears. If more than one destination has been specified, press $[\bullet]$ or $[\bullet]$ to scroll through the destinations.

7. Destination List

The list of destinations registered in the machine appears.

If all of the destinations cannot be displayed, press [▲] or [♥] to switch the screen.

The (**444**) symbol indicates a group destination.

8. [Text] [Subject] [Security] [Sender Name] [Recept. Notice]

Enter the message and specify the subject, e-mail security (encryption and a signature), sender, and whether or not to use Message Disposition Notification. The entries will be used for e-mail transmission when sending files simultaneously by Scan to Folder and e-mail. For details, see "Sending Scan Files by E-mail".

Reference

• p.21 "Sending Scan Files by E-mail"

Basic Procedure When Using Scan to Folder


This section describes the basic procedure involved in using Scan to Folder.

1. Make sure that no previous settings remain.


If a previous setting remains, press the [Clear Modes] key.


 If the network delivery scanner screen or E-mail screen appears, switch to the Scan to Folder screen.

For details, see "Switching to the Scan to Folder Screen".

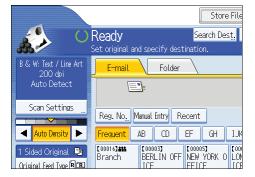

- 3. Place originals.
- If necessary, press [Scan Settings] to specify scanner settings such as resolution and scan size.



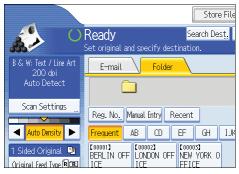

5. If necessary, specify the scanning density.

For details, see "Adjusting Image Density".

- 6. If necessary, press [Original Feed Type] to specify settings such as original orientation. For details, see "Setting of Original Feed Type".
- If necessary, press [Send File Type / Name] to specify settings such as file format and file name.

For details, see "Specifying the File Type and File Name".

8. Specify the destination.

You can specify multiple destinations.

For details, see "Specifying Scan to Folder Destinations".

9. Press the [Start] key.

If you are scanning batches, place the next originals.

Note

- If you have selected more than one destination, you can press [▲] or [▼] next to the destination field to scroll through the destinations.
- To cancel a selected destination, press [▲] or [▼] to display the destination in the destination field, and then press the [Clear/Stop] key. You can cancel a destination selected from the destination list by pressing the selected destination again.
- If you press [Check Modes] before pressing the [Start] key, the initial scanner screen switches to the Check Modes screen. You can use the Check Modes screen to check the settings such as destinations. For details, see "Check Modes".
- If you press [Preview], and then start scanning while [Preview] is highlighted, the Preview screen appears. You can use this screen to check how the originals are scanned and the scan settings used for scanning. After checking the preview, you can specify whether to send the file or not. For details, see "Preview".
- To cancel scanning, press the [Clear/Stop] key.
- You can also store a file and simultaneously send it by Scan to Folder. For details, see "Simultaneous Storage and Sending by Scan to Folder".
- After scan files are sent, the destination and file name fields will be automatically cleared. If you want
 to preserve the information in these fields, contact your local dealer.

Reference

- p.64 "Switching to the Scan to Folder Screen"
- p.153 "Various Scan Settings"
- p.161 "Adjusting Image Density"
- p.162 "Setting of Original Feed Type"
- p.170 "Specifying the File Type and File Name"
- p.65 "Specifying Scan to Folder Destinations"
- p.15 "Check Modes"
- p.16 "Preview"
- p.80 "Simultaneous Storage and Sending by Scan to Folder"


Switching to the Scan to Folder Screen

This section explains how to switch to the Scan to Folder screen.

If the E-mail screen is being displayed, press the [Folder] tab to switch to the Scan to Folder screen.

If the network delivery scanner screen is being displayed, switch to the Scan to Folder screen as follows:

1. Press [Delivery Dest.].

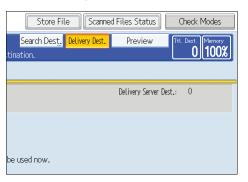

The E-mail screen or Scan to Folder screen appears.

2. If the E-mail screen appears, press the [Folder] tab.

	Store	e File	Sca	nned Fil	.es Sta
Ready	Search Des	st. Deli	very Des	it.	Previe
Set original and specify desti	nation.				
E-mail Folder					
E:				E	-mail A
Reg. No., Manual Entry Rec	cent				То
Frequent AB CD E	EF GH	IJK	LMN	OPQ	RST
	[00005] NEW YORK O FFICE	[00004] LONDO ICE	N OFF	[00006] TORON FICE	

The Scan to Folder screen appears.

Note

- You cannot switch from the network delivery scanner screen or other screens while destinations are being specified. To clear the specified destination, display the destination in the destination field, and then press the [Clear/Stop] key.
- If you are scanning files using WSD, [Swtch Dest.List] or [WSD Dest.] appears instead of [Delivery Dest.]. To switch to the Scan to Folder screen, press [Swtch Dest.List], and then, on the screen that appears, press [E-mail / Folder], or press [WSD Dest.].

Specifying Scan to Folder Destinations

This section explains how to specify Scan to Folder destinations.

You can send a file by Scan to Folder by any of the following methods:

- Select a destination registered in the machine's address book
- Send a file to a shared network folder
- Send a file to an FTP server
- Send a file to a NetWare server
- Select a destination from recent destinations

Vote

• You can specify multiple destinations.

Selecting the Destination from the Machine's Address Book

This section explains how to select the destination from the machine's address book.

🚼 Important

• To use this function, you must register the destinations in [System Settings] in advance.

You can select a destination registered in the machine's address book by any of the following methods:

- Select the destination from the destination list
- Select the destination by entering its registration number
- Select the destination by searching the machine's address book

Note

- If you have specified the address protection code for accessing the address book, the screen for
 entering the address protection code appears. Enter the protection code, and then press [OK]. If the
 protection code you entered is correct, you can specify Scan to Folder destinations from the address
 book.
- Depending on the security setting, some destinations may not appear in the destination list.

Selecting a destination registered in the destination list

Select the destination from the destination list.

1. In the destination list, press the key including the destination name.

The key of the selected destination is highlighted, and the destination appears in the destination field at the top of the screen.

E-mail F	older			
				Folder D
Reg. No <u>, </u> Manual Entr	y Recent			
Frequent AB C	D EF GH	IJK	LMN	OPQ RST
C000013 BERLIN OFF ICE	I OFF REW YORK	0		
Toyt	Subject	Socu	rity	Sondor N

If the target destination does not appear, take one of the following steps:

- Display the destination by selecting its initial letter from the title
- Display the destination by pressing [▲] or [▼]


Note

• Depending on the security setting, some destinations may not appear in the destination list.

Selecting destinations by entering the registration numbers

Select the destination from the machine's address book using its registration number.

1. Press [Reg. No.].

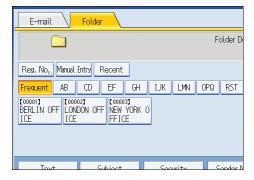

2. Enter the five-digit registration number that has been assigned to a destination folder using the number keys.

If the entered number is less than five digits, press the [#] key after the last number.

Example: To enter 00004

Press the [4] key, and then press the [#] key.


By pressing [Change], you can change the selected destination.

3. Press [OK].

Searching the machine's address book for the destination and selecting it

This section explains how to search the machine's address book for the destination and select it.

1. Press [Search Dest.].

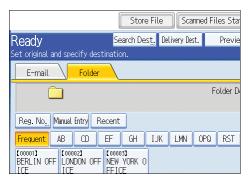

2. To search by destination name, press [Name].

To search by path, press [Folder Name].

Search Conditions	E-mail Folder
Name	
Folder Name	
Advanced Search	
Start Search	

The soft keyboard appears.

You can also search by combining [Name] and [Folder Name].

3. Enter the beginning of the destination name.

To search by path, enter the beginning of the path.

- 4. Press [OK].
- If necessary, press [Advanced Search] to specify the detailed search criteria, and then press [OK].

By pressing [Advanced Search], you can search using criteria such as [Name], [Fax Destination], [Email Address], and [Folder Name].

You can specify search criteria such as [Beginning Word] or [End Word]. You can refine your search using multiple criteria.

E-mail Address Beginning Mard End Ward Exact Match Include one Ward Exclude Words	Name	Beainning Word	End Word	Exact Match	Include one Word	Exclude Words
	Fax Destination	Beaining Word	End Word	Exact Match	Include one Word	Exclude Words
Folder Nerve Bearing Mert fol Wird Fuert Match Bride on Word Fartub Work	E-mail Address	Beginning Mord	End Word	Exact Match	Include one Word	Exclude Words
Look land a solution and the same concernation before and the	Folder Name	Beamine Word	End Word	Exact Match	Include one Word	Exclude Words

2

The illustrated screen is an example. The items that actually appear on the screen may differ.

6. Press [Start Search].

Destinations that match the search criterion are displayed.

- 7. Select the destination folder.
- 8. Press [OK].

Vote

- Search criteria that appear in [Advanced Search], such as [Name], [Fax Destination], [E-mail Address], and [Folder Name], are registered in the machine's address book. For details, see "Registering Addresses and Users for Facsimile/Scanner Functions", Network and System Settings Reference.
- By pressing [Details], you can view details about the selected destinations.
- Up to 100 destinations can be displayed as search results.
- By pressing [Advanced Search], the following criteria appear:
 - [Beginning Word]: The names which start with the entered character or characters are targeted. For example, to search for "ABC", enter "A".
 - [End Word]: The names which end with the entered character or characters are targeted. For example, to search for "ABC", enter "C".
 - [Exact Match]: The names which correspond to an entered character or characters are targeted. For example, to search for "ABC", enter "ABC".
 - [Include one Word]: The names which contain an entered character or characters are targeted. For example, to search for "ABC", enter "A", "B", or "C".
 - [Exclude Words]: The names which do not contain an entered character or characters are targeted.

For example, to search for "ABC", enter "D".

Sending Files to a Shared Network Folder

This section explains how to specify the destination when sending files to a shared network folder.

🔂 Important

- The shared folder must have been created on the client computer in advance. For details about creating shared folders, see "Preparation for Sending by Scan to Folder".
- Depending on the operating system of the client computer, access to the shared folder may require authentication.
- This machine does not support DFS (Distributed File System).

You can send a file to a shared folder over the network by any of the following methods:

- Enter the path to the destination directly
- Specify the path by browsing the network for the destination

Entering the path to the destination manually

You can enter the path to the destination folder manually.

1. Press [Manual Entry].



- 2. Press [SMB].
- 3. Press [Manual Entry] on the right side of the path field.

The soft keyboard appears.

4. Enter the path for the folder.

The following is an example of a path where the folder name is "user" and the computer name is "desk01": \\desk01\user.

Instead of the computer name, you can also use its IPv4 address.

- 5. Press [OK].
- 6. Depending on the destination setting, enter the user name for logging on to the computer. Press [Manual Entry] to the right of the user name field to display the soft keyboard.
- 7. Depending on the destination setting, enter the password for logging on to the computer. Press [Manual Entry] for the password to display the soft keyboard.

8. Press [Connection Test].

A connection test is performed to check whether the specified shared folder exists.

If the message "Connection with PC has failed. Check the settings." appears, see "Troubleshooting When Using the Scanner Function", Troubleshooting.

9. Check the connection test result, and then press [Exit].

10. Press [OK].

Note

- If authentication is required to access the folder, the login screen appears. Enter the user name and password.
- If you change the protocol after entering the path name, user name, or password, a confirmation message appears.
- To change the path for the folder that has been entered, press [Edit] on the left side of the destination field. Enter the correct path for the folder, and then press [OK].
- The connection test may take time.
- You may not be able to press [Connection Test] right after pressing [Cancel] during a connection test.
- Even if the connection test was successful, the machine may fail to transfer the file if you do not have write privileges for the file or there is not enough free hard disk space.
- You can register the path to the destination in the machine's address book. For details, see "Registering the Path to the Selected Destination in the Address Book".


Reference

- p.55 "Preparation for Sending by Scan to Folder"
- p.78 "Registering the Path to the Selected Destination in the Address Book"

Specifying the path by browsing the network for destinations

You can browse computers on the network for the destination folder, and then specify the path.

1. Press [Manual Entry].

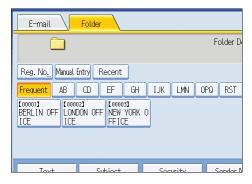

2. Press [SMB].

3. Press [Browse Network] under the path name field.

Enter Destination		
▶ Protocol	SMB	FTP
▶Path	Browse Network]
►User Name		
▶Password	Manual Entry	

Domains or workgroups on the network appear.

If the message "Cannot find the specified path. Please check the settings." appears, see "Troubleshooting When Using the Scanner Function", Troubleshooting.

- 4. Select the domain or workgroup in which the destination folder is located.
- 5. Select the client computer that has the destination folder.

If you cannot find the computer you are looking for, press [Up One Level] and browse that level.

If authentication is required to access the selected computer, the authentication screen appears. To authenticate, enter the user name and password.

6. Select the destination folder.

When the selected folder has sub-folders, the sub-folders list appears.

If you cannot find the destination folder, press [Up One Level], and then search for the folder at that level.

7. Press [OK] twice.

Vote

- If authentication is required to access the folder, the login screen appears. Enter the user name and password.
- If you change the protocol after entering the path name, user name, or password, a confirmation message appears.
- Up to 100 computers or shared folders can be displayed.
- The machine may fail to transfer the file if you do not have the write privileges for the shared folder or there is not enough free hard disk space.
- You can register the path to the destination in the machine' address book. For details, see "Registering the Path to the Selected Destination in the Address Book".

Reference

• p.78 "Registering the Path to the Selected Destination in the Address Book"


Sending Files to an FTP Server

This section explains how to specify destinations when sending files to an FTP server.

Entering the path to an FTP server manually

You can enter the path to an FTP server manually.

1. Press [Manual Entry].

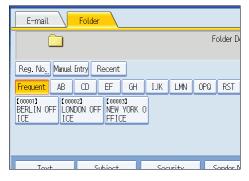

- 2. Press [FTP].
- 3. Press [Manual Entry] on the right side of the server name field.

The soft keyboard appears.

4. Enter a server name.

Instead of the server name, you can also use its IPv4 address.

- 5. Press [OK].
- 6. Press [Manual Entry] on the right side of the path field.
- 7. Enter the path for the folder.

The following is an example of a path where the folder name is "user" and the subfolder name is "lib": user\lib.

- 8. Press [OK].
- 9. Enter the user name according to the setting at the destination.

Press [Manual Entry] to the right of the user name field to display the soft keyboard.

10. Enter the password according to the setting at the destination.

Press [Manual Entry] next to the password field to make the soft keyboard appear.

 To change the port number which is set in [System Settings], press [Change] on the right side of the port number field. Enter a port number using the number keys, and then press the [#] key.

12. Press [Connection Test].

A connection test is performed to check whether the specified folder exists.

If the message "Connection with PC has failed. Check the settings." appears, see "Troubleshooting When Using the Scanner Function", Troubleshooting.

13. Check the connection test result, and then press [Exit].

14. Press [OK].

🕓 Note 📃

- If you change the protocol after entering the path name, user name, or password, a confirmation message appears.
- The connection test may take time.
- You may not be able to press [Connection Test] right after pressing [Cancel] during a connection test.
- To change the registered path to a destination folder, press [Edit] to the left of the destination field to display the soft keyboard, enter the new path, and then click [OK].
- You can register the path to the destination in the machine's address book. For details, see "Registering the Path to the Selected Destination in the Address Book".
- The machine may fail to transfer the file if you do not have write privileges for the folder or there is not enough free hard disk space.

Reference

• p.78 "Registering the Path to the Selected Destination in the Address Book"

Sending Files to NetWare Server

This section explains how to specify destinations when sending files to a NetWare server.

The NetWare folder of the destination can be specified in an NDS tree or on a NetWare Bindery server, depending on the NetWare environment. Consult your administrator.


You can send a file to NetWare server by any of the following methods:

- Enter the destination path of the Netware server directly
- Specify the path by browsing to the destination on the Netware server

Entering the path of the NetWare server directly

You can enter the path of the NetWare server.

1. Press [Manual Entry].

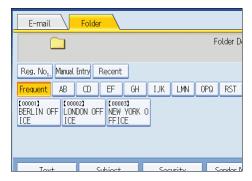

- 2. Press [NCP].
- 3. Select the connection type.

Press [NDS] to specify the folder in the NDS tree.

Press [Bindery] to specify the folder on the NetWare Bindery server.

4. Press [Manual Entry] on the right side of the path field.

	Manual Entry
rk	
	Manual Entry
Bindery	
	Connection Test

The soft keyboard appears.

5. Enter the path for the folder.

If you set the connection type to [NDS], and when the NDS tree name is "tree", the name of the context including the volume is "context", the volume name is "volume", and the folder name is "folder", the path will be "\\tree\volume.context\folder".

If you set the connection type to [Bindery], and when the NetWare server name is "server", the volume name is "volume", and the folder name is "folder", the path will be "\\server\volume\folder".

- 6. Press [OK].
- 7. Enter the user name for logging on to the NDS tree or NetWare Bindery server.

Press [Manual Entry] to the right of the user name field. The soft keyboard appears.

If you press [NDS] for [Connection Type], enter the user name, and then enter the name of the context containing the user object. If the user name is "user" and the name of the Context is "context", the user name will be "user.context".

8. If a password is specified for the log on user, enter it.

Press [Manual Entry] to the right of the password field. The soft keyboard appears.

9. Press [Connection Test].

A connection test is performed to check whether the specified folder exists.

If the message "Connection with PC has failed. Check the settings." appears, see "Troubleshooting When Using the Scanner Function", Troubleshooting.

10. Check the connection test result, and then press [Exit].

11. Press [OK].

Note

- If you change the protocol after entering the path name, user name, or password, a confirmation message appears.
- To change a registered path to a destination folder, press [Edit] to the left to the destination field to display the soft keyboard, enter the correct path to the folder, and then press [OK].
- You can connect only to folders that you have the read privileges for.
- The connection test may take time.
- You may not be able to press [Connection Test] right after pressing [Cancel] during a connection test.
- Even if the connection test was successful, the machine may fail to transfer the file if you do not have write privileges for the file or there is not enough free hard disk space.
- You can register the path to the destination in the machine's address book. For details, see "Registering the Path to the Selected Destination in the Address Book".


Reference

• p.78 "Registering the Path to the Selected Destination in the Address Book"

Specify the path by browsing to the destination on the Netware server

Specify the path by browsing to the destination folder in an NDS tree or on a NetWare Bindery server.

1. Press [Manual Entry].

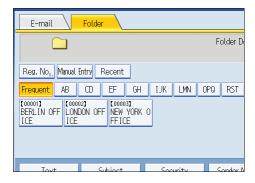

2

- 2. Press [NCP].
- 3. Select the connection type.

Press [NDS] to specify a folder in the NDS tree.

Press [Bindery] to specify a folder on the NetWare Bindery server.

4. Press [Browse Network] under the path name field.

▶Path	
	Browse Network
►User Name	
▶Password	Manual Entry
►Connection Type	NDS Bindery

If you selected [NDS] under [Connection Type], the NDS tree list appears.

If you selected [Bindery] under [Connection Type], the NetWare Bindery server list appears.

5. Search for the destination folder in the NDS tree or NetWare Bindery server.

If you cannot find the destination folder, press [Up One Level], and then search for the folder at that level.

- 6. Select the destination folder.
- 7. Press [OK] twice.

Note

- If you change the protocol after entering the path name, user name, or password, a confirmation message appears.
- Only folders that you have the read privileges for are displayed.
- If the language used for the NDS tree or by the NetWare Bindery server differs from that used by the machine, file names in the NDS tree or on the NetWare Bindery server might appear garbled.
- Up to 100 items can be displayed.
- If the selected NDS tree or NetWare Bindery server requires authentication, a login screen appears. Enter a user name and password for logging on to the NDS tree or NetWare Bindery server. If you log on to the NDS tree, enter a user name, and then enter the name of the context containing the user object. If the user name is "user" and the name of the Context is "context", the user name will be "user.context".
- The machine may fail to transfer the file if you do not have write privileges for the folder or there is not enough free hard disk space.
- You can register the path to the destination in the machine's address book. For details, see "Registering the Path to the Selected Destination in the Address Book".

Reference

• p.78 "Registering the Path to the Selected Destination in the Address Book"

Selecting the Destination from Recent Destinations


This section explains how to display destinations that have been recently entered directly, and how to select one of those destinations.

1. Press [Recent].

E-mail	Folder		
			Folder D
Reg. No <u>.,</u> Manual B	intry Recent		
Frequent AB	CD EF GH	IJK LMN	OPQ RST
[00001] BERLIN OFF LOND ICE ICE	2) ION OFF NEW YORK FFICE	0	
Tovt	Subject	Socurity	Sondor N

The most recent, directly entered destinations appear.

2. Select a destination.

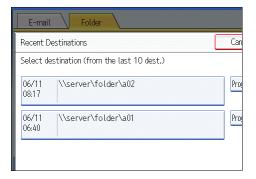

3. Press [OK].

Note

- Depending on the security settings, [Recent] may not be displayed.
- If there are multiple recent destinations, press [▲] or [♥] to scroll through them.
- The 10 most recent destinations are displayed. Destinations are deleted in chronological order, oldest first.
- You can register the folder paths of recent destinations to the machine's address book. For details, see "Registering the Path to a Recent Destination in the Address Book".


Reference

• p.78 "Registering the Path to a Recent Destination in the Address Book"

Registering the Path to the Selected Destination in the Address Book

This section explains how to register folder paths you have entered manually or specified by browsing the network to the machine's address book.

1. In the destination field, display the destination you want to register.

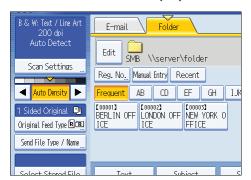

2. Press [Prg. Dest.].

	Folder Dest.: 1
\folder	Prg. Dest.
lecent	
EF GH	IJK LMN OPQ RST UVW XYZ Change Title
C00003] NEW YORK O FFICE	
ubject	Socurity Sonder Name Recent Nation

3. Press [Names], and then specify the name and other information to be registered.

For details about specifying the information to be registered, see "Registering Addresses and Users for Facsimile/Scanner Functions", Network and System Settings Reference.

4. Press [OK].


🕗 Note

• Depending on the security setting, [Prg. Dest.] may not appear.

Registering the Path to a Recent Destination in the Address Book

This section explains how to register the folder paths of recent destinations to the machine's address book.

1. Press [Recent].

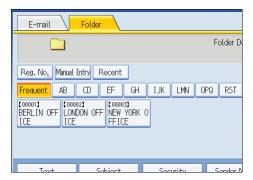

The most recent, directly entered destinations appear.

2. Press [Program Dest.].

	Cancel OK
the last 10 dest.)	
Ider\a02	Program Dest.
Ider\a01	Program Dest.

3. Press [Names], and then enter the name and other necessary information.

For details about entering the information, see "Registering Addresses and Users for Facsimile/ Scanner Functions", Network and System Settings Reference.

4. Press [OK].

Note


- Depending on the security settings, [Recent] may not be displayed.
- If there are multiple recent destinations, press [▲] or [▼] to scroll through them.

2

Simultaneous Storage and Sending by Scan to Folder

This section explains how to store a file and simultaneously send it by Scan to Folder.

1. Press [Store File].

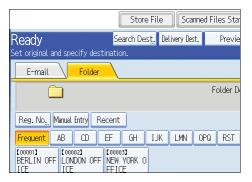

- 2. Make sure that [Store to HDD + Send] is selected.
- If necessary, specify the stored file's information, such as [User Name], [File Name], and [Password].

For details, see "Specifying File Information for a Stored File".

- 4. Press [OK].
- 5. Specify the setting for sending the file by Scan to Folder, and then send the file.

For details about sending a file by Scan to Folder, see "Basic Procedure When Using Scan to Folder".

6. Press the [Start] key.

Note

- Depending on the security setting, [Access Privileges] may appear instead of [User Name]. For details
 about specifying [Access Privileges], consult the administrator.
- You can resend stored files by Scan to Folder. To resend stored files, select the files on the Select Stored File screen, and then send them. For details, see "Sending a Stored File".

Reference

- p.103 "Specifying File Information for a Stored File"
- p.62 "Basic Procedure When Using Scan to Folder"
- p.112 "Sending a Stored File"

3. Sending Scan Files Using WSD

If your computer has a WSD-compliant operating system such as Windows Vista, you can send scan files to the computer or send scanning requests to this machine from the computer simply by connecting the computer to the network.

Before Sending Scan Files Using WSD

This section explains the preparations and procedures for using WSD.

This machine provides the following two forms of WSD scanning:

• WSD (Push Type)

This allows you to send scan files to a client computer through the network.

To begin a scan job, press the [Start] key on the machine. Note that you cannot scan originals from client computers.

• WSD (Pull Type)

This allows you to send scanning requests to this machine from a client computer through the network.

To begin a scan job, send a scanning request from a client computer.

🔁 Important


- This function is available only if your computer has a WSD-compliant operating system such as Windows Vista. Check your computer's settings before using the WSD scanner.
- The example explanations shown in this manual are based on Windows Vista Ultimate.
- When you configure the personal authentication function or user code authentication, the WSD scanner function will be automatically disabled. To perform WSD scanning again, you must enable the WSD scanner function. For details about enabling this function, see "Enabling WSD using Web Image Monitor".

Reference

• p.84 "Enabling WSD using Web Image Monitor"

Overview of Sending Scan Files Using WSD

This section describes the process of sending scan files using WSD.

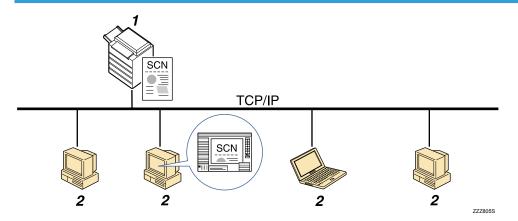


1. This machine

From this machine you can specify destinations, and then send scan files to WSD-compliant client computers.

2. Client computers (WSD-compliant)

WSD-compliant computers receive the sent scan files via the network.

Sending files using WSD (Pull Type)

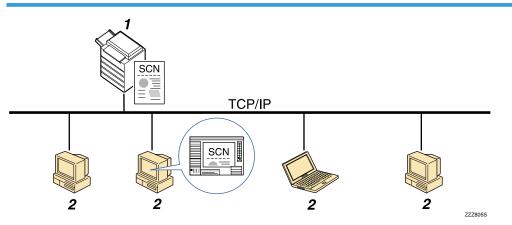

1. This machine

Scans originals after receiving a scanning request from a client computer, and then sends the scan files over the network to the client computer.

2. Client computers (WSD-compliant)

You can specify scan settings and send scanning requests from client computers using Windows Fax and Scan or a similar application. Client computers can receive files scanned by this machine.

Preparation for Sending Files Using WSD

To send scanned files using WSD, you must first perform the following:

- Check the machine is properly connected to the network
- Configure the network settings in [System Settings]
- Enable WSD using Web Image Monitor
- Register the machine to a client computer

Checking the machine is properly connected to the network

Check that this machine is properly connected to the network.

For details about how to connect this machine to a network, see "Connecting to the Interface", Network and System Settings Reference.

Configuring the network settings in [System Settings]

Configure the network settings in [System Settings] according to your environment and how you will be using the machine.

The following procedure explains connecting this machine to an IPv4 network using Ethernet cable.


Note that the settings you must configure will vary depending on your operating environment. For details about network settings and configuration procedures, see "Network Settings Required to Use WSD Scanner", Network and System Settings Reference.

1. Press the [User Tools/Counter] key, and then press [System Settings].



The System Settings screen appears.

2. Press the [Interface Settings] tab.

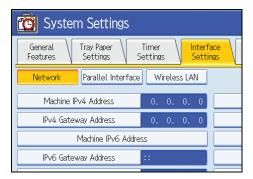

3. Press [Machine IPv4 Address] to specify the machine's IPv4 address.

To specify a static IPv4 address for this machine, press [Specify], and then enter the IPv4 address and subnet mask.

To obtain an IPv4 address from a DHCP server automatically, press [Auto-Obtain (DHCP)].

- 4. Press [IPv4 Gateway Address], and then enter the IPv4 gateway address.
- 5. Press [Effective Protocol], and then make [IPv4] active.
- 6. Press [Exit] twice.

```
Note
```

• If an extended wireless LAN board (optional) is installed, press [LAN Type] on the [Interface Settings] tab, then press [Ethernet], and then configure the network settings.

Enabling WSD using Web Image Monitor

To use this machine as a WSD scanner, you must first configure the following settings using Web Image Monitor on a client computer:

- Settings for WSD (Push Type) and WSD (Pull Type)
 - WSD protocol (default setting: [Active])
 - Click [Configuration], click [IPv4] or [IPv6] under [Network], and then enable [WSD (Scanner)].
- Settings to enable WSD (Push Type)
 - [Display WSD Destination List] (default setting: [Do not Display])

Click [Configuration], click [Initial Settings] under [Scanner], and then set [Display WSD Destination List] to [Display].

- Settings to enable WSD (Pull Type)
 - [Prohibit WSD Scan Command] (default setting: [Prohibit])

Click [Configuration], click [Initial Settings] under [Scanner], and then set [Prohibit WSD Scan Command] to [Do not Prohibit].

Use the following procedure to enable both WSD (Push Type) and WSD (Pull Type).

- 1. On the [Start] menu, click [Network].
- 2. Double-click the icon for this machine.
- 3. Click [Login].

The Web Image Monitor login page appears.

 Enter your login user name and password in the [Login User Name] and [Login Password] boxes respectively, and then click [Login].

Consult your administrator if you require a login user name and password.

- 5. On the menu in the left frame, click [Configuration].
- 6. Under [Scanner], click [Initial Settings].

The [Initial Settings] page appears.

- 7. Set [Display WSD Destination List] to [Display].
- 8. Set [Prohibit WSD Scan Command] to [Do not Prohibit].
- 9. Click [OK].

Vote

 For details about displaying Web Image Monitor, see "Monitoring and Configuring the Machine", Network and System Settings Reference. For details about using Web Image Monitor, see Web Image Monitor Help.

Registering the machine to a client computer

Use the following procedure to register this machine to a client computer.

🔂 Important

- You must log on as an Administrators group member to register the machine.
- The client computer cannot detect the machine if they are on different network segments or if the Windows Vista's Network Search setting is disabled. For details, see Windows Help.
- 1. On the [Start] menu, click [Network].

The [Network] window appears and the device search starts automatically.

2. Right-click the icon for this machine, and then click [Install].

The [User Account Control] dialog box appears.

3. Click [Continue].

Note

• If the message "Found New Hardware" appears, install the printer driver using the procedure shown under "Installing the Printer Driver", Printer Reference.

• When registration is complete, the scan profile is created automatically. To change the scan profile, see "Changing a Scan Profile".

Reference

• p.96 "Changing a Scan Profile"


Using the WSD Scanner (Push Type)

This section explains the WSD Scanner (Push Type) functions.

WSD Scanner (Push Type) Screen

This section explains the layout of the screen that allows you to send scan files using WSD (Push Type).

The function items displayed serve as selector keys. You can select or specify an item by pressing it. When you select or specify an item on the display panel, it is highlighted like <u>set</u>. Keys that cannot be selected appear like <u>ccc</u>.

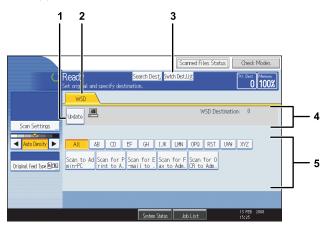

BHF001S

1. [Update]

Press this key to update the destination list.

2. WSD

This tab is highlighted whenever the machine is used as a WSD scanner.

3. [Swtch Dest.List]

Press this key to switch from the screen that is currently displayed to the WSD scanner screen.

If you are not using the network delivery function, [WSD Dest.] appears instead of [Swtch Dest.List].

4. Destination field

The specified destination is displayed here. You can specify only one destination.

5. Destination List

The list of available destinations is displayed here.

If all of the destinations cannot be displayed, press [] or [] to move through the list.

Basic Procedure for Sending Scan Files Using WSD

This section explains the basic procedure for sending scan files using WSD (Push Type).

🔁 Important 🔵

- If the message "Updating the destination list has failed. Try again?" appears, press [OK]. The destination list will then be updated.
- 1. Make sure that no previous settings remain.

If a previous setting remains, press the [Clear Modes] key.

2. If the E-mail screen, Scan to Folder screen, or network delivery scanner screen is displayed, switch to the WSD scanner screen.

For details, see "Switching to the WSD Scanner Screen".

Store File Sca	nned Files Status	Check	Modes
Search Dest, Swtch Dest.L	.i <u>st</u> Preview	Ttl. Dest.	Memory
tination.			100%
	E-mail Addres		
	F	Prg. Dest.	
lecent	То	20	Bcc
EF GH IJK LMN	OPQ RST UV	♦ XYZ	Change Title
[00005] NEW YORK O LONDON OFF FFICE ICE	[00006] TORONTO OF PARI FICE CE	7) S OFFI	1/2

- 3. Place originals.
- 4. If necessary, press [Scan Settings] to configure the scan settings.

	WSD				
	Update				
Scan Settings "					
Auto Density	All	AB CD	EF	GH	IJĸ
Original Feed Type 🖪 🕿	Scan to A min-PC	d Scan for rint to A			

Note that only [Erase Border] can be specified directly from this machine. Use the client computer to configure the other scan settings. For details, see "Changing a Scan Profile".

5. If necessary, specify the scanning density.

For details, see "Adjusting Image Density".

 If necessary, press [Original Feed Type] to configure the original orientation settings. For details, see "Setting of Original Feed Type". 7. Specify the destination.

For details, see "Specifying the Destination Client Computer".

8. Press the [Start] key.

When scanning batches, place subsequent originals after the scan files have been sent.

Vote

- If you are using this machine as a WSD scanner, you can specify only one destination per scan job.
- You cannot preview scanned images. After pressing the [Start] key, you can view the scanned images on your computer.
- To cancel a specified destination, press the destination again, or press the [Clear/Stop] key.
- To cancel scanning, press the [Clear/Stop] key. You cannot cancel scanning from a client computer.
- You cannot store files scanned using WSD on the machine.
- You cannot use WSD to send files stored on the machine.
- You cannot scan originals while other originals are being scanned.
- Two-sided originals are scanned for sideways opening (top-to-top orientation).
- If scanning takes too long, the client computer might time out, causing the error message "Automatic Scanning could not be completed" to appear. If this happens, the scan files are sent again. Depending on the settings of the client computer, you might have to perform a procedure on the client computer directly. To check the files have been sent successfully, use the machine's Scanned Files Status screen or a client computer. For details, see "Scanned Files Status".
- If scanning does not begin after you press the [Start] key, the machine might not be registered to the computer or the profile might be incorrectly configured. For details, see "Registering the machine to a client computer" or "Creating a New Scan Profile".
- After scan files are sent, their destination settings are automatically cleared. If you want to preserve this information, contact your local dealer for details.

Reference

- p.90 "Switching to the WSD Scanner Screen"
- p.96 "Changing a Scan Profile"
- p.161 "Adjusting Image Density"
- p.162 "Setting of Original Feed Type"
- p.92 "Searching for a Destination Client Computer"
- p.18 "Scanned Files Status"
- p.85 "Registering the machine to a client computer"
- p.97 "Creating a New Scan Profile"

Switching to the WSD Scanner Screen

This section explains how to switch from the screen that is currently displayed to the WSD scanner screen.

When the E-mail screen, Scan to Folder screen, or network delivery screen is displayed, you can use the following procedure to switch to the WSD scanner screen.

1. Press [Swtch Dest.List].

Store File Scan	ned Files Status	Check	Modes
Search Dest, Swtch Dest.Lis	t Preview	Ttl. Dest.	Memory
tination.			[100%]
	E-mail Addres		
	P	rg. Dest.	
lecent	То	Cc	Bcc
EF GH IJK LMN	OPQ RST UVW	XYZ	Change Title
	[00006] [ORONTO OF PARI: FICE CE	S OFFI	1/2

The [Switch Destination List] screen appears.

2. Press [WSD], and then press [OK].

		OK
to display.		
Delivery Server	WSD	
		_
	1	

The WSD scanner screen appears.

Note

- You cannot switch the screen while e-mail or other destinations are being specified. To clear a specified
 destination, display the destination in the destination field of each screen, and then press the [Clear/
 Stop] key.
- If you are not using the network delivery function, [WSD Dest.] is displayed instead of [Swtch Dest.List]. Press [WSD Dest.] to switch to the WSD scanner screen.



• p.83 "Preparation for Sending Files Using WSD"

Specifying the Destination Client Computer

This section explains how to specify a destination client computer for the scan files you are sending by WSD.

You can specify the destination computer using either of the following methods:

- Selecting a destination computer from the destination list
- Searching for a destination computer and then selecting it

C Important

• If you are using this machine as a WSD scanner, you can specify only one destination per scan job.


Selecting a Destination Client Computer from the Destination List

Use the following procedure to select a destination client computer from the destination list.

Destinations appear in the destination list after you log on to your computer.

C Important

- If the destination computer does not appear but the machine is already registered to the destination computer, press [Update]. This will update the destination list with the latest information.
- 1. In the destination list, press the destination computer that you want to send to.

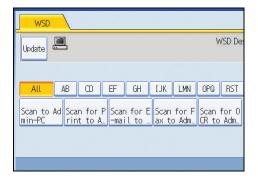

The key of the selected destination client computer is highlighted, and the destination appears in the destination field at the top of the screen.

Note

- In the destination list, each destination client computer is displayed using up to 20 characters.
- We recommend you register easily recognizable computer names.
- If a WSD-compatible computer is connected to the network, the following five destinations appear on the display panel automatically. For details about the saving location of files in each destination, see the relevant computer's settings.
 - Scan to "Computer Name"

3

- Scan for Print to "Computer Name"
- Scan for E-mail to "Computer Name"
- Scan for Fax to "Computer Name"
- Scan for OCR to "Computer Name" (Scan for OCR to "Computer Name" might not be available depending on the destination client computer.)
- If the target destination does not appear, take one of the following steps:
 - Display the destination by selecting the initial letter of its title
 - Display the destination by pressing [▲] or [▼]
- You can also search for the destination by pressing [Search Dest.]. For details, see "Searching for a Destination Client Computer".
- The destination list can display up to 250 client computer destinations.


Reference

• p.92 "Searching for a Destination Client Computer"

Searching for a Destination Client Computer

Use the following procedure to search for a destination client computer and select it.

1. Press [Search Dest.].

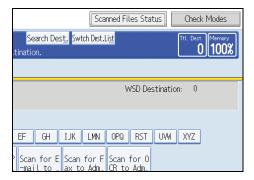

2. Press [Name].

Search Destination		
Enter the search cond	tions, and press [Start Search].	
►Search Conditions		
Name		
Name		

The soft keyboard appears.

- 3. Enter the search characters, and then press [OK].
- 4. If necessary, press [Advanced Search] to specify the detailed search criteria.

You can specify up to three search criteria. You can specify [Beginning Word] or [End Word] as the matching criterion. You can refine your search using multiple criteria.

- 5. Press [OK].
- 6. Press [Start Search].

Destinations that match the search criteria are displayed.

7. Select a destination, and then press [OK].

Vote

- Search targets are computer names.
- By pressing [Details], you can view details about the selected destinations.
- Up to 100 destinations can be displayed as search results.
- By pressing [Advanced Search], the following criteria appear:
 - [Beginning Word]: The names which start with the entered character or characters are targeted. For example, to search for "ABC", enter "A".
 - [End Word]: The names which end with the entered character or characters are targeted. For example, to search for "ABC", enter "C".
 - [Exact Match]: The names which correspond to an entered character or characters are targeted. For example, to search for "ABC", enter "ABC".
 - [Include one Word]: The names which contain an entered character or characters are targeted.
 For example, to search for "ABC", enter "A", "B", or "C".
 - [Exclude Words]: The names which do not contain an entered character or characters are targeted.

For example, to search for "ABC", enter "D".

3

Using the WSD Scanner (Pull Type)

This section explains the WSD Scanner (Pull Type) functions.

Basic Procedure for Sending Scan Files Using WSD (Pull Type)

This section explains the basic procedure for sending scan files using WSD (Pull Type).

- On the client computer, click the [Start] menu, point to [All Programs], and then click [Windows Fax and Scan].
- 2. Place an original on this machine.
- In the [Windows Fax and Scan] window, click the [File] menu, point to [New], and then click [Scan...].
- 4. If a dialog box for selecting the device you want to use appears, select the name of the device in the list, and then click [OK].

The [New Scan] dialog box appears.

- Make settings for the type of original, type of scanning, and orientation of the original, etc. For details, see "Scan Profile Items and Settings".
- 6. In the [New Scan] dialog box, click [Scan].

The original is scanned.

Send the scan data by e-mail as an attachment or save it as a file.

Vote

- If the [Initial Settings] are not enabled in Web Image Monitor, you cannot use the WSD scanner function. To use this function, you must set the external scan setting to [Do not Prohibit]. For details see "Enabling WSD using Web Image Monitor".
- Only one original can be scanned per scanning request. If you select [Feeder (Scan one side)], only
 one side of the original will be scanned. If you select [Feeder (Scan both sides)], both sides of the
 original will be scanned.
- If you select [TIFF] for [File Type] in the scan profile, scanned pages of two-sided originals are combined and sent as a single file.
- When scanning from the ADF, you must click [Scan] in the [New Scan] dialog box each time you scan an original.
- You cannot scan originals while other originals are being scanned.
- Two-sided originals are scanned for sideways opening (top-to-top orientation).
- Transmission results of WSD scanning (Pull Type) jobs do not appear in File Status.

- If scanning takes too long, the computer might time out and the error message "Automatic Scanning could not be completed" will appear on the computer screen. If this happens, change the scan settings or scan the originals one side at a time.
- The Blank Page Detect function is not available when you are using the WSD scanner (Pull Type).
- To scan an original correctly, place it as shown in the following table: Placing an original

Scanning method (Exposure glass/ADF)	Original orientation
Exposure glass	top corner touching top left corner of exposure glass
Auto Document Feeder (ADF)	top edge leading

Reference

- p.97 "Scan Profile Items and Settings"
- p.84 "Enabling WSD using Web Image Monitor"

Configuring the Scan Settings on a Client Computer

This section explains how to configure a scan profile. A scan profile contains scan settings specified on a client computer.

Changing a Scan Profile

Use the following procedure to change a scan profile.

Whenever the machine is first registered to a computer, a profile is created automatically. Using the following procedure, you can change this profile on the computer.

1. On the [Start] menu, click [Control Panel].

Control Panel opens.

2. Click [Hardware and Sound].

You do not have to perform this step depending on the Control Panel settings.

3. Click [Scanners and Cameras].

The [Scanners and Cameras] dialog box appears.

4. Select this machine, and then click [Scan Profiles].

The [Scan Profiles] dialog box appears.

5. Select a profile, and then click [Edit].

The [Edit Profile] dialog box appears.

- 6. Configure the necessary settings.
- 7. Click [Save Profile].

The changed scan settings are saved as a profile.

Note

- If a profile does not appear in the [Scanners and Cameras] dialog box, the associated machine might be turned off, or the required WSD scanner settings might not have been specified. For details about WSD scanner settings, see "Preparation for Sending Files Using WSD".
- If a profile does not appear in the [Scan Profiles] dialog box, recreate it as a new profile. For details, see "Creating a New Scan Profile".
- You can create multiple profiles.

Reference

- p.97 "Scan Profile Items and Settings"
- p.83 "Preparation for Sending Files Using WSD"

• p.97 "Creating a New Scan Profile"

Creating a New Scan Profile

Use the following procedure to create a new profile.

- 1. On the [Start] menu, click [Control Panel]. Control Panel opens.
- 2. Click [Hardware and Sound].

You do not have to perform this step depending on the Control Panel settings.

3. Click [Scanners and Cameras].

The [Scanners and Cameras] dialog box appears.

4. Select this machine, and then click [Scan Profiles].

The [Scan Profiles] dialog box appears.

5. Click [Add].

The [Add New Profile] dialog box appears.

- 6. Configure the necessary settings for the profile.
- 7. Click [Save Profile].

The scan settings are saved as a new profile.

Note

- You can register multiple profiles. If multiple profiles are registered, the profile specified as default in the [Scan Profiles] dialog box is applied.
- To specify a scan profile as the default profile, perform one of the following procedures:
 - In the [Scan Profiles] dialog box, click the scan profile, and then click [Set as Default].
 - After you create a new scan profile, in the [Add New Profile] dialog box, select the [Set this profile as default] check box.

Reference

• p.97 "Scan Profile Items and Settings"

Scan Profile Items and Settings

The following table tells you the scan profile settings that you can configure.

3

Scan Profile Items and Settings

ltem	Scan settings			
Scanner:	Select this machine.			
Profile name:	Enter the profile name.			
Source:	Select one of the following: Flatbed Feeder (Scan one side) Feeder (Scan both sides)			
Paper size:	If you select [Feeder (Scan one side)] or [Feeder (Scan both sides)] in [Source], you must specify the paper size.			
Color format:	Select one of the following: Color Grayscale Black and white			
File type:	Select one of the following: BMP (Bitmap Image) JPG (JPEG Image) PNG (PNG Image) TIF (TIFF Image)			
Resolution (DPI):	Specify the resolution.			
Brightness:	The setting you specify here will not be applied for scanning.			
Contrast:	The setting you specify here will not be applied for scanning.			

4. Storing Files Using the Scanner Function

Using the scanner function, you can store scan files in the machine and then send the stored files by e-mail or Scan to Folder.

Before Storing Files


This section outlines file storage under the scanner function and provides related cautions.

Overview of File Storage under the Scanner Function

This section describes the process of storing files under the scanner function.

C Important

- You can specify a password for each stored file. Files that are not password-protected can be accessed by other users on the same local area network using DeskTopBinder. We recommend that you protect stored files from unauthorized access by specifying passwords.
- Scan file stored in the machine may be lost if some kind of failure occurs. We advise against using the hard disk to store important files. The supplier shall not be responsible for any damage that may result from the loss of files. For long-term storage of files, we recommend the use of DeskTopBinder. For details, contact your local dealer.

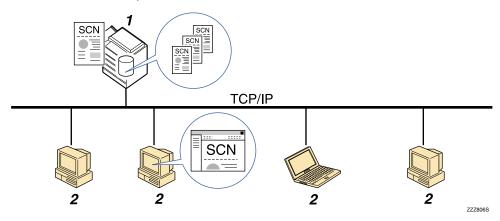

1. This Machine

You can store scan files on the machine's hard disk. The stored files can be sent by e-mail, Scan to Folder, or the network delivery scanner.

2. Client Computer

Using DeskTopBinder, you can, over the network, view, copy, or delete files stored in the machine. Using Web Image Monitor, you can, over the network, view, download, send, or delete files stored in the machine. For

details about DeskTopBinder Lite, see DeskTopBinder Lite-related manuals. For details about Web Image Monitor, Web Image Monitor Help.

Note

- You can download DeskTopBinder Lite from the Web site and then install it on the client computer.
- Stored files will be deleted after a set period. For details about specifying the period, see "Administrator Tools", Network and System Settings Reference.
- Files stored under the scanner function cannot be printed from the machine's control panel. Print the files from a client computer after receiving them on the computer.
- You can also store a file and simultaneously send it. For details, see "Simultaneous Storage and Sending by E-mail", "Simultaneous Storage and Sending by Scan to Folder", and "Simultaneous Storage and Delivery".
- If a media slot (optional) is installed on the machine, you can save scan files on a removable memory device. For details, see "Basic Procedure for Saving Scan Files on a Removable Memory Device".

Reference

- p.48 "Simultaneous Storage and Sending by E-mail"
- p.80 "Simultaneous Storage and Sending by Scan to Folder"
- p.142 "Simultaneous Storage and Delivery"
- p.121 "Basic Procedure for Saving Scan Files on a Removable Memory Device"


Basic Procedure for Storing Scan Files

This section explains the basic procedure for storing scan files.

1. Make sure that no previous settings remain.

If a previous setting remains, press the [Clear Modes] key.

- 2. Place originals.
- 3. Press [Store File].

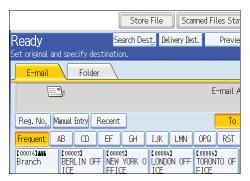

- 4. Press [Store to HDD].
- If necessary, specify file information, such as [User Name], [File Name], and [Password].
 For details, see "Specifying File Information for a Stored File".
- 6. Press [OK].
- If necessary, press [Scan Settings] to specify scanner settings such as resolution and scan size.

For details, see "Various Scan Settings".

B & W: Text / Line Art 200 dpi	E-mail Folder				
Auto Detect					
Scan Settings	Reg. No. Manual Entry Recent				
Auto Density	Frequent AB CD EF GH IJK				
1 Sided Original 🗳 Original Feed Type 🖭	E000013 BERLIN OFF LONDON OFF NEW YORK O ICE				
Send File Type / Name					
Salast Stared Eila	Taxt Subject S				

- If necessary, specify the scanning density.
 For details, see "Adjusting Image Density".
- If necessary, press [Original Feed Type] to specify settings such as original orientation. For details, see "Setting of Original Feed Type".

4

10. Press the [Start] key.

If you are scanning batches, place the next originals.

Note

- Depending on the security setting, [Access Privileges] may appear instead of [User Name]. For details about specifying [Access Privileges], consult the administrator.
- By pressing [Store to HDD + Send], you can simultaneously store scan files and send them. For details, see "Simultaneous Storage and Sending by E-mail", "Simultaneous Storage and Sending by Scan to Folder", and "Simultaneous Storage and Delivery".
- You cannot press [Store File] if:
 - "PDF" is selected as the file type and security is applied
 - High Compression PDF is selected as the file type
- You cannot specify [Store to HDD] if:
 - a destination is specified
 - [Preview] is selected
- To cancel scanning, press the [Clear/Stop] key.
- After scan files are stored, the file information fields will be automatically cleared. If you want to preserve the information in these fields, contact your local dealer.

Reference

- p.103 "Specifying File Information for a Stored File"
- p.153 "Various Scan Settings"
- p.161 "Adjusting Image Density"
- p.162 "Setting of Original Feed Type"
- p.48 "Simultaneous Storage and Sending by E-mail"
- p.80 "Simultaneous Storage and Sending by Scan to Folder"
- p.142 "Simultaneous Storage and Delivery"

Specifying File Information for a Stored File

You can specify information for a stored file, such as user name, file name, and password.

By specifying information for a stored file, you can search for the file by user name or file name, or protect the file with a password to prevent other people from accessing the file.

Specifying a User Name

You can specify a user name for the stored file.

1. Press [Store File].

	Store File Scanned Files Sta							
Ready	Search Dest, Delivery D		ery Des	st. Previe				
Set original and specify destination.								
E-mail Folder								
				Fo	older D			
Reg. No, Manual Entry Reco	ent							
Frequent AB CD EF	F GH :	IJK	LMN	OPQ	RST			
BERLIN OFF LONDON OFF N	00003) IEW YORK O							

The Store File screen appears.

2. Press [User Name].

A list of user names appears.

3. Press the user name you want to specify.

The user names shown here are names that were registered on the [Administrator Tools] tab in [System Settings]. To specify a name not shown here, press [Manual Entry], and then enter the user name.

4. Press [OK] twice.

Note

Depending on the security setting, [Access Privileges] may appear instead of [User Name]. For details
about specifying [Access Privileges], consult the administrator.

Specifying a File Name

This section explains how to change the name of a stored file.


A stored file is allocated a name starting with "SCAN" followed by a 4-digit number.

• Example: SCAN0001

4

You can change this file name.

1. Press [Store File].

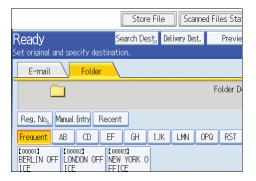

The Store File screen appears.

2. Press [File Name].

The soft keyboard appears.

- Change the file name.
- 4. Press [OK] twice.

Vote

• For details about entering the text, see "Entering Text", About This Machine.

Specifying a Password


You can specify a password for the stored file.

🚼 Important

• Do not forget the password. If you forget it, consult the system administrator of the machine.


By specifying a password, you can ensure that only the people who know the password can view the file.

1. Press [Store File].

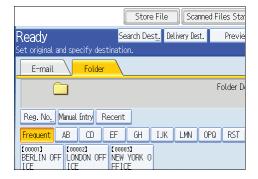

The Store File screen appears.

- 2. Press [Password].
- 3. Using the number keys, enter a four to eight-digit number.
- 4. Press [OK].
- 5. Enter the same number again using the number keys.

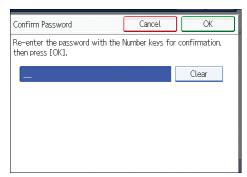

6. Press [OK] twice.

Displaying the List of Stored Files


This section describes the list of stored files. Using the list of stored files, you can delete stored files or change the file's information.

List of Stored Files

This section describes how the list of stored files is displayed.

To display the list of stored files, press [Select Stored File] on the initial scanner screen.

The function items displayed serve as selector keys. You can select or specify an item by pressing it. When you select or specify an item on the display panel, it is highlighted like <u>set</u>. Keys that cannot be selected appear like <u>cx</u>.

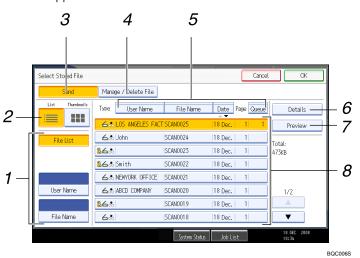

1. Keys for searching for files

Press to switch to the screens for searching for a file by user name or file name, or to the screen for displaying all files.

2. List / Thumbnails

You can select whether to display stored files as a list or as thumbnails.

3. [Send]

Press this to deliver or send a stored file by e-mail or Scan to Folder.

4. [Manage / Delete File]

Press this to delete stored files or change the file data.

5. Keys for sorting files

Press to sort the files using the selected item. Select the same item once more for a reverse sort. However, the files cannot be sorted in reverse delivery.

6. [Details]

Press this to display details about the selected file.

7. [Preview]

Press this to display a preview of the selected file. For details, see "Checking a Stored File Selected from the List".

8. List of stored files

Displays the list of stored files.

If the file you want to select is not displayed in the list, press [] or [] to scroll the screen. If a password has been specified for a file, a key icon appears to the left of the user name for the file.

Vote

- Depending on the security setting, some files may not appear in the list.
- Files stored under functions other than the scanner function do not appear on this screen.

Reference

• p.109 "Checking a Stored File Selected from the List"

Searching the List of Stored Files

You can search for files from the stored files using the user name or file name.


You can search the list of stored files by either of the following methods:

- Search by user name
- Search by file name

Searching by user name

You can search for a stored file by its user name.

1. Press [Select Stored File].

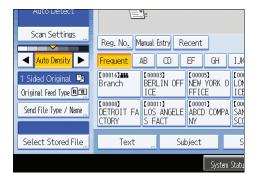

2. Press [User Name].

3. Select the user name to be used for the search.

The user names shown here are names that were registered on the [Administrator Tools] tab in [System Settings]. To change a user name not shown here, press [Manual Entry], and then enter the user name.

4. Press [OK].

The search begins, and then files belonging to the specified user appear.

Searching by file name

You can search for a stored file by its file name.

1. Press [Select Stored File].

AUTO DETECT	E	F				
Scan Settings <u>"</u>	Reg. No, Ma	nual Ei	ntry Re	ecent		
Auto Density 🕨	Frequent A	B	CD	EF	GH	IJĸ
1 Sided Original 💵 Original Feed Type 🛙 😰	Branch	(0000) BERL ICE	3) IN OFF	【00005】 NEW Y FFICE	ORK 0	COO LON ICE
Send File Type / Name	DETROIT FA	(0001 LOS S FA	ANGELE	(00001) ABCD NY		COO SAN SCC
Select Stored File	Text		Sub	ject		S
					System	Statu

2. Press [File Name].

The soft keyboard appears.

3. Enter the file name.

For information about how to enter characters, see "Entering Text", About This Machine.

4. Press [OK].

The search starts, and files whose name starts with the entered string appear.

Checking Stored Files

You can display the Preview screen and check a stored file on the machine or from the client computer.

Checking a Stored File Selected from the List

This section explains how to preview a file selected from the list of stored files.

1. Press [Select Stored File].

AUTO L'ETECT				
Scan Settings	Reg. No, Manua	l Entry Re	cent	
🔺 🗛 Auto Density 🕨	Frequent AB	CD I	EF GH	IJĸ
1 Sided Original 🛄 Original Feed Type 🛙 📳		RLIN OFF	[00005] NEW YORK O FFICE	LON LON
Send File Type / Name	DETROIT FA LO	S ANGELE	[00001] ABCD COMPA NY	C001 SAN SCC
Select Stored File	Text		iect	S
			Svstem	.

The list of stored files appears.

For details about the list of stored files, see "List of Stored Files".

2. From the list of stored files, select the file you want to check.

You can select more than one file.

3. Press [Preview].

A preview of the selected stored file appears.


Note

• If you select a password-protected stored file, a screen for entering the password appears. To select the file, enter the correct password, and then press [OK].

Reference

• p.106 "List of Stored Files"

Stored File Preview Screen

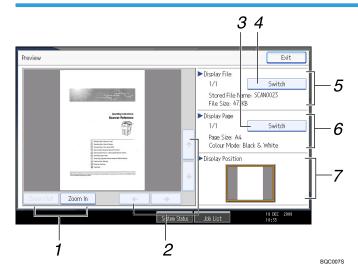

1. [Zoom Out], [Zoom In]

In previewing, you can reduce or enlarge the file image.

2. [←] [→] [↑] [↓]

Press to shift the displayed area.

3. [Switch]

You can switch to a preview of another page.

4. [Switch]

You can switch to a preview of another file.

5. Display File

The name and size of the selected file appear.

6. Display Page

The page number of the previewed page, total number of pages, page size, and color mode appear.

7. Display Position

When the preview is enlarged, the location of the part of the page displayed on the preview screen is indicated.

Checking Stored Files from a Client Computer

Using DeskTopBinder Lite or Web Image Monitor, you can also display the files stored in the machine on a client computer.

C Important

• To view stored files from a client computer, you must first make the required IPv4 or IPv6 address settings using DeskTopBinder or Web Image Monitor.

You can also check files stored under the copier, Document Server, and printer functions.

Using DeskTopBinder Lite to display stored files

The stored files are displayed and can be checked on a client computer using DeskTopBinder Lite.

Note

- You can also transfer the stored files to the client computer.
- You can download DeskTopBinder Lite from the Web site and then install it on the client computer.
- For details about DeskTopBinder, see the DeskTopBinder-related manuals.

Using Web Image Monitor to display stored files

The stored files are displayed and can be checked also on a client computer using Web Image Monitor.

If you enter "http:// (machine IPv4 or IPv6 address, or host name)/" in the address bar of the client computer's Web browser, the top page of Web Image Monitor appears.

🚼 Important

 Do not begin IPv4 segments with zeros. For example: if the address is "192.168.001.010", enter it as "192.168.1.10".

Note

- You can also download the stored files.
- It is recommended that you use Web Image Monitor only within your local area network.
- For details about displaying or downloading stored files using Web Image Monitor, see "Displaying Stored Documents with Web Image Monitor", "Downloading Stored Documents with Web Image Monitor", Copy and Document Server Reference.
- For details about making settings for using Web Image Monitor, see "Monitoring and Configuring the Machine", Network and System Settings Reference.
- For details about functions for managing stored files using Web Image Monitor, click [Help] on the upper-right corner of the displayed screen.

Sending a Stored File

This section explains how to send a stored file.

Stored files can be sent by e-mail, Scan to Folder, or the network delivery scanner.

There are two methods of sending stored files by e-mail. Settings made under [Scanner Features] determine which method is used. For details, see "Send Settings".

• To send the URL by e-mail:

Under [Scanner Features], [Stored File E-mail Method], select [Send URL Link]. This method is useful when network restrictions prevent you sending attachments.

• To send an attached file by e-mail:

Under [Scanner Features], [Stored File E-mail Method], select [Send File].

🔁 Important

 Depending on your e-mail application, a phishing warning might appear after you receive an e-mail message. To prevent phishing warnings appearing after you receive e-mail from a specified sender, you must add the sender to your e-mail application's exclusion list. For details about how to do this, see your e-mail application's Help.

🖪 Reference 🔵

• p.191 "Send Settings"

Sending Stored Files

This section mainly explains how to select the files you want to send.

For details about how to select stored files and make settings for sending those files, see respective pages.

1. Press [Select Stored File].

AUTO DETECT	
Scan Settings "	Reg. No Manual Entry Recent
Auto Density 🕨	Frequent AB CD EF GH IJK
1 Sided Original 🕒 Original Feed Type 🖻 🖭	C00015Jam C00003J C00005J C000 Branch BERLIN OFF NEW YORK 0 LON ICE FFICE ICE
Send File Type / Name	C000083 C000113 C000013 C000 DETROIT FA LOS ANGELE ABCD COMPA SAN CTORY S FACT NY SCO
Select Stored File	Text Subject S
	System Statu

The list of stored files appears.

2. Select the file you want to send.

You can select multiple files.

The selected files are sent in the order they were selected.

If you press [Queue], only the files you have selected are displayed in the order they will be sent. For details about selecting the stored files, see "Displaying the List of Stored Files".

- 3. Press [OK].
- 4. If necessary, switch to the E-mail, Scan to Folder, or network delivery scanner screen.

For details about switching the screen, see "Switching to the E-mail Screen", "Switching to the Scan to Folder Screen", or "Switching to the Network Delivery Scanner Screen".

5. Specify the destination, make any other necessary settings.

For details about how to send a file by e-mail or Scan to Folder, or how to deliver a file, see "Basic Procedure for Sending Scan Files by E-mail", "Basic Procedure When Using Scan to Folder", or "Basic Procedure for Delivering Files".

6. Press the [Start] key.

The stored file will be sent.

Note

- If you select a password-protected stored file, a screen for entering the password appears. To select the file, enter the correct password, and then press [OK].
- When the URL has been sent by e-mail, the recipient can check the stored file by clicking that URL. For details, see "Sending the URL by E-mail".
- You can encrypt e-mail or attach a signature to it. For details, see "Security Settings to E-mails".

Reference

- p.30 "Switching to the E-mail Screen"
- p.64 "Switching to the Scan to Folder Screen"
- p.132 "Switching to the Network Delivery Scanner Screen"
- p.27 "Basic Procedure for Sending Scan Files by E-mail"
- p.62 "Basic Procedure When Using Scan to Folder"
- p.129 "Basic Procedure for Delivering Files"
- p.51 "Sending the URL by E-mail"
- p.49 "Security Settings to E-mails"

Managing Stored Files

This section explains how to delete stored files and how to change the data for stored files.

Deleting a Stored File


This section explains how to delete a stored file.

1. Press [Select Stored File].

AUTO DETECT	E	7=		
Scan Settings "	Reg. No. M	anual Entry Re	ecent	
📕 🖌 🖌 🖌	Frequent	AB CD	EF GH	IJĸ
1 Sided Original 💵 Original Feed Type 🖭	[00016] 488 Branch	【00003】 BERLIN OFF ICE	【00005】 NEW YORK O FFICE	COO Lon Ice
Send File Type / Name	[00008] DETROIT FA CTORY	【00011】 LOS ANGELE S FACT	[00001] ABCD COMPA NY	COO SAN SCO
Select Stored File	Text	Sut	oject	S
			System	Statı

The list of stored files appears.

2. Press [Manage / Delete File].

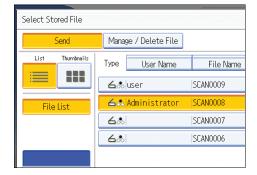

3. Select the file you want to delete.

If you select a password-protected stored file, a screen for entering the password appears. To select the file, enter the correct password, and then press [OK].

4. Press [Delete File].

A confirmation message about deleting the file appears.

5. Press [Yes].

Note

• Files waiting for sending cannot be deleted.

 You can also delete files stored in the machine by accessing the machine from a client computer using Web Image Monitor or DeskTopBinder. For detail about Web Image Monitor, see Web Image Monitor Help. For details about DeskTopBinder, see the manuals supplied with DeskTopBinder.

Changing Information for a Stored File

You can change information for a stored file, such as [User Name], [File Name], and [Password].

\rm Note

• Information for files waiting for being sent cannot be changed.

Changing a user name


You can change the user name for a stored file.

1. Press [Select Stored File].

AUTO DETECT	
Scan Settings "	Reg. No., Manual Entry Recent
Auto Density 🕨	Frequent AB CD EF GH IJ
1 Sided Original 🕒 Original Feed Type 🖭 🖭	C00016JathC000033C000053C00BranchBERLIN OFFNEW YORK 0LOICEFFICEIC
Send File Type / Name	C000083 C000113 C000013 C000013 <t< td=""></t<>
Select Stored File	Text <u>"</u> Subject S
	System State

The list of stored files appears.

2. Press [Manage / Delete File].

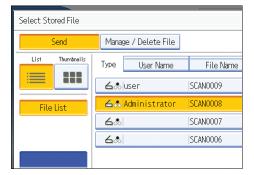

3. Select the file containing the information you want to change.

If you select a password-protected stored file, a screen for entering the password appears. Enter the password, and then press [OK].

- 4. Press [Change User Name].
- 5. Enter a new user name.

The user names shown here are names that were registered on the [Administrator Tools] tab in [System Settings]. To change a user name not shown here, press [Manual Entry], and then enter the user name.

- 6. Press [OK].
- 7. Make sure that the user name was changed as necessary, and press [Exit].

Vote

- Using Web Image Monitor or DeskTopBinder you can also change the user name of a file stored in the machine from the client computer. For details about Web Image Monitor, see Web Image Monitor Help. For details about DeskTopBinder, see the manuals supplied with DeskTopBinder.
- Depending on the security setting, [Change Access Priv.] may appear instead of [Change User Name]. For details about specifying [Change Access Priv.] consult the administrator.

Changing a file name


You can change the file name of a stored file.

1. Press [Select Stored File].

Auto Detect	E	ŀ				
Scan Settings "	Reg. No, M	anual Entry	Re	cent]	
Auto Density 🕨	Frequent	AB CD		EF	GH	IJł
1 Sided Original 🛄 Original Feed Type 🛙 📳	[00016] 488 Branch	【00003】 BERLIN ICE	OFF	Coooo: NEW FFIC	YORK O	LOI LOI ICI
Send File Type / Name	[00008] DETROIT FA CTORY	(00011) LOS ANG S FACT	ELE	(0000 ABCD NY	COMPA	COU SAI SCU
Select Stored File	Text		Sub	iect		S
				,		_
					System	Statu

The list of stored files appears.

2. Press [Manage / Delete File].

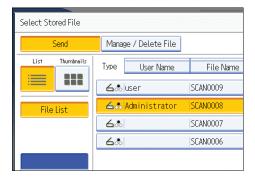

3. Select the file containing the file information you want to change.

If you select a password-protected stored file, a screen for entering the password appears. Enter the password, and then press [OK].

- 4. Press [Change File Name].
- 5. Change the file name.
- 6. Press [OK].
- 7. Make sure that the file information was changed as necessary, and press [Exit].

Vote

- For information about how to enter characters, see "Entering Text", About This Machine.
- Using Web Image Monitor or DeskTopBinder, you can also change the file name of a file stored in the machine from the client computer. For details about Web Image Monitor, see Web Image Monitor Help. For details about DeskTopBinder, see the manuals supplied with DeskTopBinder.

Changing a password

Enter the password for accessing the stored file.

🚼 Important

- Be sure not to forget the password. If you forget it, consult the system administrator of the machine.
- 1. Press [Select Stored File].

Auto Detect	
Scan Settings <u>"</u>	Reg. No., Manual Entry Recent
Auto Density 🕨	Frequent AB CD EF GH IJK
1 Sided Original 💵 Original Feed Type 🖭	C00016Jats C000033 C000053 C000053 Branch BERLIN OFF NEW YORK 0 LON ICE FFICE ICE
Send File Type / Name	C000083 DETROIT FA LOS ANGELE ABCD COMPA SAN CTORY S FACT NY
Select Stored File	Text Subject S
	System Statu

The list of stored files appears.

- 2. Press [Manage / Delete File].
- 3. Select the file containing the file information you want to change.

If you select a password-protected stored file, a screen for entering the password appears. Enter the password, and then press [OK].

- 4. Press [Change Password].
- 5. Using the number keys, enter a new four to eight-digit password.
- 6. Press [OK].

- 7. Enter the same number again using the number keys.
- 8. Press [OK].
- 9. Press [Exit].
- Note
 - Using Web Image Monitor or DeskTopBinder, you can also change the password of a file stored in the machine from the client computer. For details about Web Image Monitor, see Web Image Monitor Help. For details about DeskTopBinder, see the manuals supplied with DeskTopBinder.

5. Saving Scan Files on a Removable Memory Device

If the optional media slot is installed on your machine, you can save scan files on a removable memory device using the scanner function.

Before Saving Files on a Removable Memory Device


This section explains saving scan files on a removable memory device and provides related cautions.

Overview of Saving Files on a Removable Memory Device

The following diagram explains saving scan files on a removable memory device.

🚼 Important

- This machine supports FAT16 or FAT32 format USB memory sticks and SD cards. Other forms of removable memory device are not compatible.
- Make sure that the format of the removable memory device is FAT16 or FAT32.
- Saving might fail if the USB memory stick features password protection or other security features.
- Certain types of USB memory sticks cannot be used.
- Do not connect the optional media slot to other machines.
- Connect only USB memory sticks to the USB slot, not any other form of USB device.
- Do not turn the machine's main power switch to off while data is being written. Doing so can result in corrupted data.
- If the machine's main power is accidentally switched off while data is being written, you must check the data on your media for corruption when you switch the machine back on.

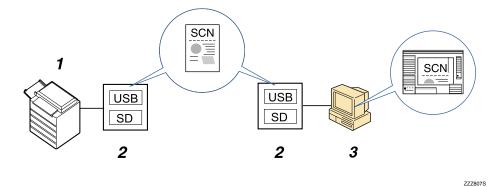

1. This Machine

If the optional media slot is installed, the machine can save scan files on a removable memory device.

2. Removable Memory Device

Scan files are saved on a removable memory device.

3. Client Computer

Using applications on a client computer, scan files saved on a removable memory device can be printed or viewed.

Note

- Files saved on a removable memory device will not appear in the list of stored files.
- Files saved on a removable memory device cannot be printed or sent using the machine's control panel. To perform operations on files saved on a removable memory device, you must use an application on a client computer.

Basic Procedure for Saving Scan Files on a Removable Memory Device

Use the following procedure to save scan files on a removable memory device.

1. Insert a removable memory device in the media slot.

You can connect only one removable memory device at a time.

2. Make sure that no previous settings remain.

If a previous setting remains, press the [Clear Modes] key.

- 3. Place originals.
- 4. Press [Store File].
- 5. Press [Store to Memory Device].



- 6. Press [OK].
- 7. If necessary, press [Scan Settings] to specify scanner settings such as resolution and scan size.

For details, see "Various Scan Settings".

B & W: Text / Line Art 200 dpi	E-mail Folder
Auto Detect	
Scan Settings	Reg. No Manual Entry Recent
Auto Density	Frequent AB CD EF GH IJ
1 Sided Original 🗳 Original Feed Type 🖭	[00001] [00002] [00003] BERLIN OFF LONDON OFF NEW YORK O ICE ICE FFICE
Send File Type / Name	
Soloct Stored File	Tayt Subject S

- 8. If necessary, specify the scanning density. For details, see "Adjusting Image Density".
- **9.** If necessary, press [Original Feed Type] to specify settings such as original orientation. For details, see "Setting of Original Feed Type".

 If necessary, press [Send File Type / Name] to specify settings such as file format and file name.

For details, see "Specifying the File Type and File Name".

11. Press the [Start] key.

When scanning batches, place subsequent originals after the scan files have been sent.

When writing is complete, a confirmation message appears.

- 12. Press [Exit].
- 13. Remove the memory device from the media slot.

Do not remove the memory device while writing is in process. Doing so can corrupt the data that is stored on it.

Note

- You cannot specify where the data is saved. Files are saved in the root directory of the removable memory device.
- If the removable memory device is partitioned, files are saved on the first partition.
- You cannot configure file information such as [User Name], [File Name], and [Password].
- To cancel writing, press the [Clear/Stop] key. If files are being written when writing is cancelled, any partially written files are deleted. Only complete files are stored on the removable memory device.
- The LED lamp on the media slot flashes when an inserted SD card is being accessed and remains lit when a USB memory stick is attached.
- The amount of free space on the memory device is displayed. Note that if the amount of free space exceeds 10 GB, "9999.99 MB" will be displayed.

Reference

- p.153 "Various Scan Settings"
- p.161 "Adjusting Image Density"
- p.162 "Setting of Original Feed Type"
- p.170 "Specifying the File Type and File Name"

6. Delivering Scan Files

Using the ScanRouter delivery software, you can deliver by various methods scan files produced by the machine.

Before Delivering Files

This section describes the necessary preparations and the procedure for using the network delivery scanner.

Content Important

• To use the network delivery scanner function, your network must have a delivery server on which the ScanRouter delivery software (optional) is installed. You must also register destination and sender information on the delivery server. For details about the ScanRouter delivery software, see the manuals that are supplied with it.

Overview of Scan File Delivery

This section describes the process for delivering files using the network delivery scanner.

1. This machine

You can send scan files to the delivery server.

2. Delivery server

Install the ScanRouter delivery software on this computer to use it as the delivery server.

After receiving a scan file, the delivery server delivers the file according to the setting specified for the destination. The delivery settings are as follows:

- Storing the file in an in-tray
- Delivering the file by e-mail
- Storing the file in a selected folder

For details about the ScanRouter delivery software, see the manuals supplied with ScanRouter delivery software.

3. Client Computer

How to check a file from the client computer depends on the delivery method. For example, you can check a file by one of the following methods:

- Use DeskTopBinder to view a file delivered to the in-tray.
- Use e-mail software to receive e-mail with an attached file.
- Browse a folder for a stored file.

Preparing to Deliver Files

To deliver scanned files, you must first perform the following:

- Check the machine is properly connected to the network
- Configure the network settings in [System Settings]
- Configure the necessary settings in [Scanner Features]
- Configure the settings in ScanRouter delivery software

Checking the machine is properly connected to the network

Check that this machine is properly connected to the network.

For details about how to connect this machine to a network, see "Connecting to the Interface", Network and System Settings Reference.

Configuring the network settings in [System Settings]

Configure the network settings in [System Settings] according to your environment and how you will be using the machine.

The following procedure explains connecting this machine to an IPv4 network using Ethernet cable.


Note that the settings you must configure will vary depending on your operating environment. For details about network settings and configuration procedures, see "Network Settings Required to Use the Network Delivery Scanner", Network and System Settings Reference.

1. Press the [User Tools/Counter] key, and then press [System Settings].



The System Settings screen appears.

2. Press the [Interface Settings] tab.

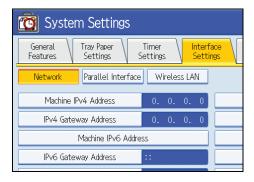


3. Press [Machine IPv4 Address] to specify the machine's IPv4 address.

To specify a static IPv4 address for this machine, press [Specify], and then enter the IPv4 address and subnet mask.

To obtain an IPv4 address from a DHCP server automatically, press [Auto-Obtain (DHCP)].

- 4. Press [IPv4 Gateway Address], and then enter the IPv4 gateway address.
- 5. Press [Effective Protocol], and then make [IPv4] active.
- 6. Press the [File Transfer] tab.

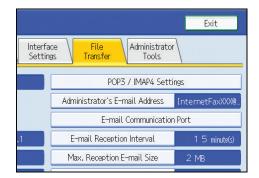

7. Press [Delivery Option], and then press [On].

125

8. Press [Exit] twice.

Vote


• If an extended wireless LAN board (optional) is installed, press [LAN Type]on the [Interface Settings] tab, then press [Ethernet], and then configure the network settings.

Configure the necessary settings in [Scanner Features]

Using [Scanner Features], you can make or change various settings related to the scanner function, such as compressing scan data or viewing the scanner journal. Configure the scanner settings according to your environment and how you will be using the machine.

This section explains how to display the Scanner Features screen. For details about the settings on this screen, see "Scanner Features".

1. Press the [User Tools/Counter] key, and then press [Scanner Features].

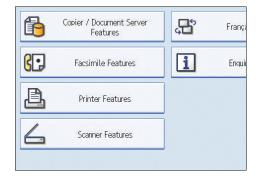

The Scanner Features screen appears.

2. Press the [General Settings], [Scan Settings], [Send Settings], or [Initial Settings] tabs and configure the relevant settings on those tabs.

🖪 Reference 🔵

• p.185 "Scanner Features"

Configure the settings in ScanRouter delivery software

Using SR Manager (a tool for the ScanRouter delivery software), register this machine as an I/O device. In addition, register destinations and specify such settings as the delivery type and sender.

For details about settings, see the manuals supplied with the ScanRouter delivery software.

Vote


• To view files delivered to an in-tray, DeskTopBinder Lite must be installed on the client computer. You can download DeskTopBinder Lite from the Web site and then install it on the client computer.

 The settings you must configure in [System Settings] vary depending on your network environment.
 For details about network settings, see "Connecting the Machine", Network and System Settings Reference.

Network Delivery Scanner Screen

This section describes the screen layout when using the network delivery scanner.

The function items displayed serve as selector keys. You can select or specify an item by pressing it. When you select or specify an item on the display panel, it is highlighted like selected appear like . Keys that cannot be selected appear like .

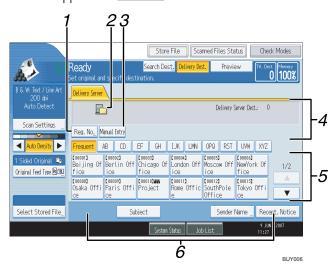

1. [Reg. No.]

Press this key to specify the destination using a 3-digit registration number.

2. Network delivery scanner icon

Indicates that the network delivery scanner screen is displayed.

3. [Manual Entry]

To send a file by e-mail via the delivery server to a destination not registered in the delivery server's Destination List, press this key to display the soft keyboard. Then use the soft keyboard to enter the e-mail address. For details about how to send a file by e-mail via the delivery server, see ScanRouter delivery software manual.

4. Destination Field

The specified destination appears. If more than one destination has been specified, press [▲] or [▼] to scroll through the destinations.

5. Destination List

The list of destinations registered in the delivery server appears. If all of the destinations cannot be displayed, press [▲] or [▼] to switch the screen.

The (**444**) symbol indicates a group destination.

6. [Subject] [Sender Name] [Recept. Notice]

Specify the subject, sender, and whether or not to enable Message Disposition Notification for the file to be transmitted.

Basic Procedure for Delivering Files

This section explains the basic procedure for delivering scan files using the network delivery scanner.

🔿 Important 🔵

- You must register destinations and senders in advance using the ScanRouter delivery software installed on the delivery server.
- 1. Make sure that no previous settings remain.

If a previous setting remains, press the [Clear Modes] key.

2. If the E-mail screen or Scan to Folder screen appears, switch to the network delivery scanner screen.

For details, see "Switching to the Network Delivery Scanner Screen".

Stor	e File	Sca	Scanned Files Status			Check Modes		
Search De	est. De	livery Des	st.	Previe	w	Ttl. Dest	. Memory	
tination.) 100%	
			E	-mail A		0 . Dest.		
Recent				То		Cc	Bcc	
EF GH	IJK	LMN	OPQ	RST	UVW	XYZ	Change Title	
(00008) NEW YORK I								

- 3. Place originals.
- 4. If necessary, press [Scan Settings] to specify scanner settings such as resolution and scan size.

Delivery Serve 200 dpi Auto Detect ß Scan Settings Reg. No. Manual Entry Auto Density 🕨 🕨 AB CD EF GH ◄ Frequent IJł [00001] Beijing Of Berlin Off [00003] €00 Lor 1 Sided Original 🛄 Chicago Of Original Feed Type 🖪 🖪 fice ice fice ice [00008] 【00009】 Paris Offi (00010]**### [** 00 Osaka Offi Project Ror ce ce e Soloct Storod File

For details, see "Various Scan Settings".

5. If necessary, specify the scanning density.

For details, see "Adjusting Image Density".

- 6. If necessary, press [Original Feed Type] to specify settings such as original orientation. For details, see "Setting of Original Feed Type".
- 7. Specify the destination.

You can specify multiple destinations.

For details, see "Specifying Delivery Destinations".

8. If necessary, press [Subject] to specify the e-mail subject.

For details, see "Entering the Subject of the E-mail to Be Transmitted via the Delivery Server".

9. If necessary, press [Sender Name] to specify the sender.

For details, see "Specifying the Sender".

10. Press the [Start] key.

If you are scanning batches, place the next originals.

🕗 Note

- By pressing [Manual Entry] on the network delivery scanner screen, you can send a file by e-mail via the delivery server's network. For details about entering the e-mail address directly, see "Entering an E-mail Address Manually".
- If you have selected more than one destination, press [▲] or [▼] next to the destination field to scroll through the destinations.
- To cancel a selected destination, display the destination in the destination field, and then press the [Clear/Stop] key. You can cancel a destination selected from the address book by pressing the selected destination again.
- You can use the Message Disposition Notification function when sending e-mail via delivery server. An e-mail is sent to the sender selected in step 9, notifying him/her that the recipient has read his/ her e-mail. To specify this setting, press [Recept. Notice].
- To enable the Return Receipt function, you must specify the SMTP e-mail transmission settings using ScanRouter delivery software. For details about specifying this setting, see the ScanRouter delivery software manual. Note, however, that if the e-mail software used at the destination does not support Message Disposition Notification (MDN), e-mail notification that the e-mail has been opened may not be sent.
- Register the sender's e-mail address using the ScanRouter delivery software in advance.
- If you press [Check Modes] before pressing the [Start] key, the initial scanner screen switches to the Check Modes screen. You can use the Check Modes screen to check the settings such as destinations. For details, see "Check Modes".
- If you press [Preview] and start scanning while [Preview] is highlighted, the Preview screen appears. For details, see "Preview".
- To cancel scanning, press the [Clear/Stop] key.
- You can also store a scan file and simultaneously deliver it. For details, see "Simultaneous Storage and Delivery".

• After scan files are delivered, the destination, sender, and subject fields will be automatically cleared. If you want to preserve the information in these fields, contact your local dealer.

Reference

- p.132 "Switching to the Network Delivery Scanner Screen"
- p.153 "Various Scan Settings"
- p.161 "Adjusting Image Density"
- p.162 "Setting of Original Feed Type"
- p.133 "Specifying Delivery Destinations"
- p.141 "Entering the Subject of the E-mail to Be Transmitted via the Delivery Server"
- p.137 "Specifying the Sender"
- p.34 "Entering an E-mail Address Manually"
- p.15 "Check Modes"
- p.16 "Preview"
- p.142 "Simultaneous Storage and Delivery"

Switching to the Network Delivery Scanner Screen

This section explains how to switch the screen to the network delivery scanner screen.

If the E-mail screen or Scan to Folder screen is being displayed, switch to the network delivery scanner screen.

1. Press [Delivery Dest.].

Store F	ile Scanned	d Files Status	Check	< Modes
Search Dest.	Delivery Dest.	Preview	Ttl. Dest	. Memory
tination.) 100%
		E-mail Addres	ss: 0	
		F	Prg. Dest.	
lecent		То	Cc	Bcc
EF GH I	JK LMN OF	PQ RST UVI	N XYZ	Change Title
(00008) NEW YORK O FEICE				

The network delivery scanner screen appears.



- You cannot switch the screen while e-mail or other destinations are being specified. To clear the specified destination, display the destination in the destination field of each screen, and then press the [Clear/Stop] key.
- When WSD is enabled, [Swtch Dest.List] appears instead of [Delivery Dest.]. To switch to the network delivery screen, press [Swtch Dest.List], and then press [Delivery Server].

Specifying Delivery Destinations

This section explains how to specify delivery destinations.

Vote

• You can specify multiple destinations.

Selecting Destinations Registered in the Delivery Server's Address Book

This section explains how to select destinations registered in the delivery server's address book

You can select a delivery destination registered in Destination List of the delivery server by any of the following methods:

- Select the destination from the delivery destination list
- Select the destination by entering the registration numbers
- Select the destination by searching in the delivery server

Selecting a destination from the Destination List

From the destination list, select a destination.

1. In the destination list, press the key including the destination name.

B & W: Text / Line Art 200 dpi	Delivery Server
Auto Detect	
Scan Settings	Reg. No,,, Manual Entry
Auto Density 🕨	Frequent AB CD EF GH I.
1 Sided Original 🛄 Original Feed Type 🕅 🏨	C00001) Beijing Of Berlin Off Chicago Of Lo fice fice fice
	C00008) Osaka Offi Paris Offi Project Re ce ce e
Soloct Storod Filo	Subject

The selected destination is highlighted and also is displayed in the destination field at the top of the screen.

Destinations are registered in the delivery server under captions. The destination list is updated automatically.

Vote

- If the target destination does not appear, press [▲] or [▼] to scroll through the destinations until it does.
- Depending on the security setting, some destinations may not appear in the destination list.

Selecting destinations by entering their registration numbers

Select a destination by entering its Short ID number (registered using the ScanRouter delivery software). For details about how to set Short IDs, see the manuals supplied with the ScanRouter delivery software.

1. Press [Reg. No.].

B & W: Text / Line Art 200 dpi	Delivery Server
Auto Detect	
Scan Settings	Reg. No Manual Entry
Auto Density 🕨	Frequent AB CD EF GH I.
1 Sided Original 🕒 Original Feed Type 🖭	[00001][00002][00003][0Beijing OfBerlin OffChicago OfLoficeiceficeio
	[000008][000009][00010]ABB[0Osaka OffiParis OffiProjectRoceceParisParis
Salact Starad Fila	Subject

2. Using the number keys, enter the three-digit registration number, and then press the [#] key.

You can also enter a registration number of fewer than three digits.

Example: To enter 009

Press the [9] key, and then press the [#] key.

By pressing [Change], you can change the selected destination.

3. Press [OK].

Note

• To cancel a selected destination, press [▲] or [▼] next to the destination field to scroll through the destinations until the one you want to cancel appears, and then press the [Clear/Stop] key.

Selecting destinations by searching the delivery server's Destination List

In the delivery server's Destination List, you can search for destinations and select them.

1. Press [Search Dest.].

	Store	File	Sca	nned Fil	es Sta
Ready	Search Des	st. Del	ivery Des	st.	Previe
Set original and specify destir	nation.				
Delivery Server					
Ŀ				De	livery Si
Reg. No, Manual Entry					
Frequent AB CD E	EF GH	IJK	LMN	OPQ	RST
Beijing Of Berlin Off ((00003) Chicago Of fice	【00004 Londo ice		[00005] Moscow ice	v Off

2. To search by destination name, press [Name].

To search by comment, press [Comment].

The soft keyboard appears.

You can also search by combining [Name] and [Comment].

3. Enter the beginning of the destination name.

To search by comment, enter the beginning of the comment.

- 4. Press [OK].
- If necessary, press [Advanced Search] to specify the detailed search criteria, and then press [OK].

By pressing [Advanced Search], you can search by [Name] and [Comment]. You can specify search criteria such as [Beginning Word] or [End Word]. You can refine your search using multiple criteria.

Specify search condi	tions.		
Name	Beginning Word	End Word	Exact Match
Comment	Beginning Word	End Word	Exact Match

6. Press [Start Search].

Destinations that match the search criteria are displayed.

- 7. Select the destination.
- 8. Press [OK].

Note

- The Comment search function searches for destinations by comment information, which is a registration item required by the ScanRouter delivery software.
- By pressing [Details], you can view details about the selected destinations.
- Up to 100 destinations can be displayed as search results.
- By pressing [Advanced Search], the following criteria appear:
 - [Beginning Word]: The names which start with the entered character or characters are targeted. For example, to search for "ABC", enter "A".
 - [End Word]: The names which end with the entered character or characters are targeted. For example, to search for "ABC", enter "C".
 - [Exact Match]: The names which correspond to an entered character or characters are targeted.

For example, to search for "ABC", enter "ABC".

- [Include one Word]: The names which contain an entered character or characters are targeted. For example, to search for "ABC", enter "A", "B", or "C".
- [Exclude Words]: The names which do not contain an entered character or characters are targeted.

For example, to search for "ABC", enter "D".

Specifying the Sender

This section explains how to specify the e-mail sender when sending a file by e-mail via the delivery server.

You can specify the sender by any of the following methods:


- Select the sender from the sender list
- Select the sender by entering the registration number
- Select the sender by searching the delivery server's Destination List

Selecting a Sender from the Sender List

This section explains how to select a sender from the sender list.

The sender list displays destinations that are registered on the delivery server.


1. Press [Sender Name].

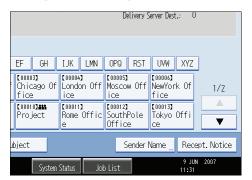

- 2. Select the sender.
- 3. Press [OK].

Selecting the Sender by Entering the Registration Number

Select a sender by entering its Short ID number (registered using the ScanRouter delivery software). For details about how to set Short IDs, see the manuals supplied with the ScanRouter delivery software. 1. Press [Sender Name].

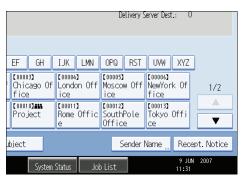

2. Press [Registration No.].

Sender Name				
Select name to b	e attached.			
				Clear
Registration	No	Search		
Frequent	AB CD	EF GH	IJK LMN	OPQ F
【00001】 ABCD Compa ny	【00002】 Beijing Of fice	【00003】 Berlin Off ice	【00004】 Chicago Of fice	[00005] London (ice
[00007] NewYork Of fice	【00008】 Osaka Offi ce	【00009】 Paris Offi ce	[00010]### Project	【00011】 Rome Of e

3. Using the number keys, enter the three-digit registration number assigned to the required destination folder.

If the entered number is less than five digits, press the [#] key after the last number.

Example: To enter 006

Press the [6] key, and then press the [#] key.


By pressing [Change], you can change the selected destination.

4. Press [OK] twice.

Selecting a Sender by Searching the Delivery Server's Destination List

This section explains how to select a sender by searching the delivery server's Destination List.

1. Press [Sender Name].

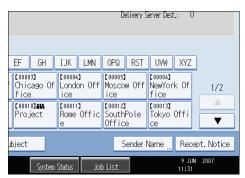

2. Press [Search].

Sender Name				
Select name to b	e attached.			
				Clear
Registration	No.	Search		
Frequent	AB CD	EF GH	IJK LMN	OPQ F
[00001] ABCD Compa ny	【00002】 Beijing Of fice	【00003】 Berlin Off ice	【00004】 Chicago Of fice	[00005] London (ice
[00007] NewYork Of fice	[00008] Osaka Offi ce	【00009】 Paris Offi ce	【00010】AMA Project	【00011】 Rome Of e

3. To search by destination name, press [Name].

To search by comment, press [Comment].

The soft keyboard appears.

You can also search by combining [Name] and [Comment].

4. Enter the beginning of the sender's name.

To search by comment, enter beginning of the comment.

- 5. Press [OK].
- 6. If necessary, press [Advanced Search] to specify the detailed search criteria, and then press [OK].

By pressing [Advanced Search], you can search by [Name] and [Comment]. You can specify search criteria such as [Beginning Word] or [End Word]. You can refine your search using multiple criteria.

				(Cancel	OK
ify search cond	tions.					
Name	Beairning Word	End Word	Eract Match	Include one Word	Exclude Words	
Comment	Beginning Word	End Word	Exact Match	Include one Word	Exclude Words	

7. Press [Start Search].

Destinations that match the search criteria are displayed.

- 8. Select the sender.
- 9. Press [OK].

Note


- The Comment search function searches for destinations by comment information, which is a registration item required by the ScanRouter delivery software.
- By pressing [Details], you can view details about the selected sender.
- Up to 100 items can be displayed as the search results.
- By pressing [Advanced Search], the following criteria appear:
 - [Beginning Word]: The names which start with the entered character or characters are targeted. For example, to search for "ABC", enter "A".
 - [End Word]: The names which end with the entered character or characters are targeted. For example, to search for "ABC", enter "C".
 - [Exact Match]: The names which correspond to an entered character or characters are targeted. For example, to search for "ABC", enter "ABC".
 - [Include one Word]: The names which contain an entered character or characters are targeted. For example, to search for "ABC", enter "A", "B", or "C".
 - [Exclude Words]: The names which do not contain an entered character or characters are targeted.

For example, to search for "ABC", enter "D".

Entering the Subject of the E-mail to Be Transmitted via the Delivery Server

This section explains how to enter the e-mail subject when sending a file by e-mail via the delivery server.

1. Press [Subject].

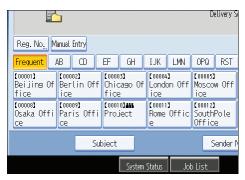

2. Enter the subject.

To enter characters, press [Text Entry].

To enter symbols, press [Symbol Entry].

To add predefined User Text registered on this machine, press [User Text].


For details about entering the text, see "Entering Text", About This Machine.

3. Press [OK].

Simultaneous Storage and Delivery

This section explains how to store a file and simultaneously deliver it.

1. Press [Store File].

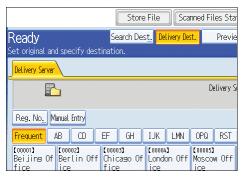

- 2. Make sure that [Store to HDD + Send] is selected.
- If necessary, specify the stored file's information, such as [User Name], [File Name], and [Password].

For details, see "Specifying File Information for a Stored File".

- 4. Press [OK].
- 5. Specify the setting for delivering the file, and then send the file.

For details about delivering a file, see "Basic Procedure for Delivering Files".

Vote

- Depending on the security setting, [Access Privileges] may appear instead of [User Name]. For details about specifying [Access Privileges], consult the administrator.
- You can resend stored files. To resend stored files, select the files on the Select Stored File screen, and then send them. For details, see "Sending a Stored File".

Reference

- p.103 "Specifying File Information for a Stored File"
- p.129 "Basic Procedure for Delivering Files"
- p.112 "Sending a Stored File"

7. Scanning Originals with the Network TWAIN Scanner

The TWAIN driver allows you to scan originals on the machine from a client computer via the network.

Before Using the Network TWAIN Scanner

This section describes the preparations and procedure for using the network TWAIN scanner.

🔂 Important

- To use the network TWAIN scanner, you must install the TWAIN driver, which is on the supplied CD-ROM. For details about installing the TWAIN driver, see "Installing the TWAIN Driver from the Supplied CD-ROM".
- To use the network TWAIN scanner, a TWAIN-compliant application, such as DeskTopBinder, must be installed on the client computer. You can download DeskTopBinder Lite from the Web site and then install it on the client computer.


Reference

• p.146 "Installing the TWAIN Driver from the Supplied CD-ROM"

Overview of the Network TWAIN Scanner

This section describes the network TWAIN scanner function.

In the TWAIN scanner mode, you can share this machine among multiple computers. Therefore, you don't have to prepare a special computer for scanner or reconnect the scanner and each computer every time you need to use it.

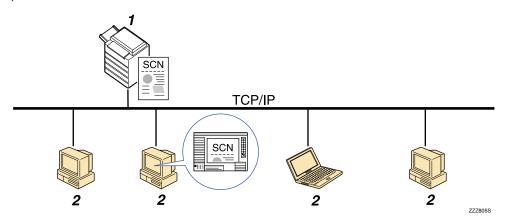

1. This Machine

Scans an original after receiving a scan instruction from a client computer, and then sends the scan file over the network to the client computer.

2. Client Computer

Specifies the scanner settings and controls the scanner using an application, such as DeskTopBinder Lite, that supports the network TWAIN scanner. Receives the files scanned by the machine and displays them using an application that supports the network TWAIN scanner.

Vote

When using the machine as a network TWAIN scanner, you do not need to press the [Scanner] key
on the machine's control panel. The screen switches automatically when you scan an original from a
client computer using the TWAIN driver. To use functions other than the network TWAIN scanner,
press [Exit].



Preparing to Use the Network TWAIN Scanner

To use this machine as a network TWAIN scanner, you must first perform the following:

- Check the machine is properly connected to the network
- Configure the network settings in [System Settings]
- Install the TWAIN driver on a client computer
- Install a TWAIN-compliant application on the same client computer

Checking the machine is properly connected to the network

Check that this machine is properly connected to the network.

For details about how to connect this machine to a network, see "Connecting to the Interface", Network and System Settings Reference.

Configuring the network settings in [System Settings]

Configure the network settings in [System Settings] according to your environment and how you will be using the machine.

The following procedure explains connecting this machine to an IPv4 network using Ethernet cable.


Note that the settings you must configure will vary depending on your operating environment. For details about network settings and configuration procedures, see "Network Settings Required to Use Network TWAIN Scanner", Network and System Settings Reference.

1. Press the [User Tools/Counter] key, and then press [System Settings].

🧼 U:	ser Tools / Cou	inter / E	inquiry
æ		6	Copier / Document Features
	System Settings	8.	Facsimile Feat
		<u>B</u>	Printer Featur
ß	Maintenance		Scanner Featu

The System Settings screen appears.

2. Press the [Interface Settings] tab.

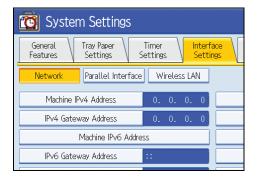

3. Press [Machine IPv4 Address] to specify the machine's IPv4 address.

To specify a static IPv4 address for this machine, press [Specify], and then enter the IPv4 address and subnet mask.

To obtain an IPv4 address from a DHCP server automatically, press [Auto-Obtain (DHCP)].

- 4. Press [IPv4 Gateway Address], and then enter the IPv4 gateway address.
- 5. Press [Effective Protocol], and then make [IPv4] active.
- 6. Press [Exit] twice.

```
Note
```

• If an extended wireless LAN board (optional) is installed, press [LAN Type] on the [Interface Settings] tab, then press [Ethernet], and then configure the network settings.

Installing the TWAIN driver on a client computer

Install the TWAIN driver on your computer.

For details about installing the TWAIN driver, see "Installing the TWAIN Driver from the Supplied CD-ROM".

Reference

• p.146 "Installing the TWAIN Driver from the Supplied CD-ROM"

Installing a TWAIN-compliant application on the same client computer

To use this machine as a network TWAIN scanner, a TWAIN-compliant application, such as DeskTopBinder, must be installed on the client computer.

You can download DeskTopBinder Lite from the Web site and then install it on the client computer.

Installing the TWAIN Driver from the Supplied CD-ROM

This section explains how to install the TWAIN driver on a client computer from the supplied CD-ROM.

To use the network TWAIN scanner, you must install the TWAIN driver on a client computer.

- Start Windows, and then insert the CD-ROM into the CD-ROM drive of the client computer. The installer starts.
- 2. Click [TWAIN Driver].
- 3. The installer of the TWAIN driver starts. Follow the instructions.

Vote

- Before you start the installation, check the system requirements for the TWAIN driver. For details about the system requirements, see "Software Supplied on CD-ROM".
- You can install the software using the auto-run program. For details about the auto-run program, see "Auto-Run Program".
- If the installer does not start automatically, see "Auto-Run Program".
- When the installation is complete, a message about restarting the client computer may appear. In this case, restart the client computer.
- After the installation is complete, a folder with the name of the machine in use is added in [Programs] or [All Programs] on the [Start] menu. Help can be displayed from here.
- Notes on using the network TWAIN scanner are provided in "Readme.txt". Be sure to read them before use.

Reference

• p.198 "Software Supplied on CD-ROM"

• p.198 "Auto-Run Program"

Basic Network TWAIN Scanner Procedure

This section explains the basic procedure for scanning with the network TWAIN scanner.

🚼 Important 🔵

- To use the network TWAIN scanner, a TWAIN-compliant application, such as DeskTopBinder and the TWAIN driver must be installed on the client computer.
- You can download DeskTopBinder Lite from the Web site and then install it on the client computer.
- Under the Windows XP SP2/Vista or Windows Server 2003/2003 R2/2008 operating system, when the Windows firewall or an antivirus program is enabled, "Cannot find the scanner." or "No response from the scanner." may appear and scanning with the TWAIN scanner may fail. In this case, change the settings of the Windows firewall or antivirus program. For details, see Windows Help.

The following procedure uses Windows XP and DeskTopBinder Lite by way of example.

- 1. On the [Start] menu, point to [All Programs], point to DeskTopBinder, and then click DeskTopBinder.
- 2. On the [Tools] menu, click [Scanner Settings...].
- 3. Click [Select Scanner Driver...].
- 4. Select the name of the machine you want to use in the list, and then click [Select].
- 5. Click [OK].
- 6. Place originals.
- On the [File] menu, point to [Add Document], and then click [Scan...] to display the Scanner Control dialog box.

The Scanner Control dialog box and DeskTopBinder Viewer will appear.

A dialog box that is used to control a scanner using the TWAIN driver is referred to as the Scanner Control dialog box.

8. Make settings according to such factors as the type of original, type of scanning, and orientation of the original.

For details, see the TWAIN driver Help.

9. In the Scanner Control dialog box, click [Scan].

Depending on the security setting, if you press [Scan], a dialog box for entering the user name and password may appear.

If there are more originals to be scanned, place the next original, and then click [Continue].

If there are no more originals to be scanned, click [Complete].

- 10. On the [File] menu of the DeskTopBinder Viewer, click [Exit].
- 11. Enter the document name, and then click [OK].

The DeskTopBinder Viewer closes and the image is stored in DeskTopBinder Lite.

Vote

- If you have already selected a scanner, you do not need to select the scanner unless you want to change it.
- Using DeskTopBinder, you can edit and print scan files. For more information about DeskTopBinder, see DeskTopBinder manuals.
- The model name of the connected scanner appears in the title bar of the Scanner Control dialog box. If there is more than one scanner of the same model on the network, make sure you have selected the correct scanner. If you have not, click [Select Scanner Driver...], and then select the scanner again. If the correct scanner does not appear in the list, check that the scanner is correctly connected to the network and that its IPv4 address has been specified. If the correct scanner still does not appear; in the Network Connection Tool that is installed with the TWAIN driver, select the [Use a specific scanner.] check box, and then specify the IP address or host name of the scanner you want to use. For details, see the Help for the Network Connection Tool.
- If you are scanning originals from DeskTopBinder using the network TWAIN scanner, you cannot cancel scanning without first saving the documents. If you are no longer using the documents, save them first, and then delete them using DeskTopBinder.
- The Blank Page Detect function is not available when you are using the TWAIN scanner.

Scan Settings When Using TWAIN Scanner

This section explains how to specify original orientation and scan setting for a bundle of mixed size originals when using the TWAIN scanner.

Setting Original Orientation on the TWAIN Scanner

To correctly display the top/bottom orientation of the scanned original on a client computer, the placement of the original and the settings made in the Scanner Control dialog box must match.

1. Open the Scanner Control dialog box.

For details about how to open the Scanner Control dialog box, see "Basic Network TWAIN Scanner Procedure".

- 2. In the [Original Scan Method:] list, select the place where the original is placed.
- 3. In the [Orig.Orientn.:] list, select [🖛 🗋 Long Edge] or [🆛 🗂 Short Edge].
- 4. In the [Orientation:] list, select [♣ Right 90 deg./♠ Right 90 deg.], [♣ Left 90 deg./♠ Left 90 deg.], [♣ Standard 0 deg./♠ R Standard 0 deg.], or [♣ 180 deg./♣ N 180 deg.].
- If an original is placed in the ADF, from the drop down menu of [Scan Settings:], select [1 Sided], [2 Sided(Top to Top)], or [2 Sided(Top to Bottom)].

E Reference


7

p.148 "Basic Network TWAIN Scanner Procedure"

Placing Originals

The following table shows the relationship between the original orientation and the Scanner Properties dialog box settings:

Exposure Glass

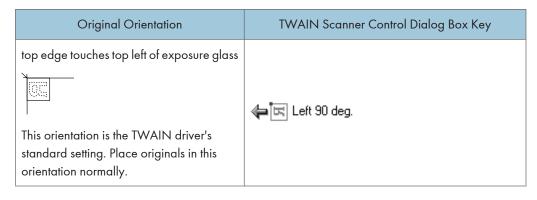

Original Orientation	TWAIN Scanner Control Dialog Box Key
top edge touches rear of exposure glass	🖨 🗐 Standard 0 deg.
bottom edge touches left side of exposure glass	👍 🔄 Right 90 deg.
bottom edge touches top of exposure glass	🖨 🔣 180 deg.

ADF

Original Orientation	TWAIN Scanner Control Dialog Box Key
top edge of original placed first	🖨 🚘 Left 90 deg.
top edge touches rear of ADF	🖨 🖪 Standard 0 deg.
bottom edge touches left side of ADF	두 🗩 Right 90 deg.
bottom edge touches top of ADF	(고전) 180 deg.

Note

- Originals are normally rectangular (^B) or horizontally long (^B). However, the table above uses squares to make original orientation easier to understand. Even if the actual shape of the original is different, the combination of original orientation and the orientation specified on the scanner driver does not change.
- For details about the Scanner Control dialog box, see the TWAIN driver Help.
- Depending on the settings, originals of different sizes are scanned differently.

When Scanning Originals of Mixed Sizes Using TWAIN Scanner

This section explains the differences between scanning mixed-size originals using the TWAIN scanner and normal scanning.

- If [Auto detect(Mixed-size)] is selected in the [Original Size:] list, the machine detects the length of each original and then scans them.
- If [Auto detect(Uni-size)] is selected in the [Original Size:] list, the machine detects the size of the first original of the batch and scans all subsequent originals at that size.
- Note

7


• The paper guides cannot be adjusted to small size originals, which may cause slightly tilted scanning.

This chapter describes various scan settings.

Specifying Scan Settings


This section explains how to make scan settings.

1. Press [Scan Settings].

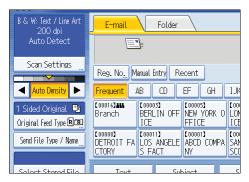

2. Specify resolution, scan size, and other settings, as required.

For details about individual scan setting items, see "Scan Settings".

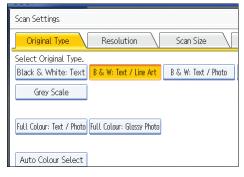

3. Press [OK].



• p.189 "Scan Settings"

Scan Settings

This section describes the items for Scan Settings.

Original Type

Select a Original type that is appropriate for your original.

[Black & White: Text]

Appropriate to increase OCR readability using an OCR-compliant application.

• [Dropout Colour]

You can select not to scan the following colors: [Chromatic Colour], [Red], [Green], and [Blue]. When you select a color to leave out of the scan, specify its level of coverage. There are five levels. Press [Narrow] to leave out colors that are closest to the specified color. Press [Wide] to broaden the coverage of the specified color and not scan those colors.

[B & W: Text / Line Art]

Standard black and white originals containing mainly characters. Creates scanned images suitable for printing.

[B & W: Text / Photo]

Originals containing a mixture of photographs, pictures and characters (two-value). Creates scanned images suitable for printing.

[Black & White: Photo]

Originals containing photographs and other pictures (two-value). Creates scanned images suitable for printing.

[Grey Scale]

Originals containing photographs and other pictures (multi-value). Creates scanned images suitable for displaying on a computer screen.

[Full Colour: Text / Photo]

Originals for color printing mainly consisting of characters.

[Full Colour: Glossy Photo]

Originals of silver salt photographs and other color pictures.

[Auto Colour Select]

Scans originals by automatically judging the colors of the originals.

Vote

• [Dropout Colour] can be set when [Black & White: Text] is selected for [Original Type].

- If [Auto Colour Select] is selected, the machine may fail to correctly judge colors depending on the scanning condition or the contents of originals.
- If you select [High Compression PDF] as the file type, you must then select one of the following for Original Type: [Grey Scale], [Full Colour: Text / Photo], or [Full Colour: Glossy Photo].

Resolution

Select resolution for scanning originals.

Select [100 dpi], [150 dpi], [200 dpi], [300 dpi], [400 dpi], or [600 dpi] as the scanning resolution.

Note

If [High Compression PDF] is selected as the file type, you cannot select [100 dpi] and [150 dpi]. For
details about file types, see "Specifying the File Type and File Name".

Reference

• p.170 "Specifying the File Type and File Name"

Scan Size

Select the size of the original to be scanned.

[Auto Detect]

Scans original sizes using the automatic size detect function.

[Mixed Original Sizes]

Select [Mixed Original Sizes] to scan a batch of originals that have different lengths.

Originals are scanned by the ADF and the length of each is automatically detected.

[Custom Size]

Select [Custom Size] to scan originals whose sizes do not match a standard template or to scan only a part of an original.

You can specify the length and width of your originals in mm or inches.

Template size

Select a template size to scan originals at a specified size regardless of the actual size of the originals you have placed.

You can specify the following template sizes:

🖖 Note

• Selecting both [Mixed Original Sizes] and [Erase Border] reduces the scanning speed.

• You can enter 140 mm (5.5 inches) or higher in Original Size (X1 and Y1) under [Custom Size].


Relationship of original of mixed sizes and scan size

Scanning methods for originals mixed with different sizes (such as A3 & A4 or B4 & B5) differ depending on the settings you make for the scan size and whether you use the exposure glass or the ADF.

- If you select [Mixed Original Sizes], the machine detects the length of each original and scans them.
- If a template size is selected, the machine scans originals at the selected size regardless of the actual size of originals. If an original is smaller than the selected size, the machine applies margins to the scan area.
- If [Auto Detect] is selected for scanning originals from the exposure glass, the machine detects the size of individual originals and scans accordingly.
- If only [Auto Detect] is selected for scanning originals from the ADF, the machine detects the size of the first original and scans all the other originals based on that size.

Note

• When scanning originals of different length at the same time, place them correctly by referring to the chart below. The paper guides cannot be adjusted to small size originals, which may cause slightly tilted scanning.

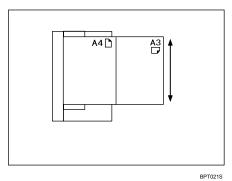

• If you do not select [Mixed Original Sizes] and place originals of different sizes in the ADF, paper jams might occur or parts of the originals might not be scanned.

Scanning the entire area of a custom size original

This section explains how to specify a custom size for scanning the entire area of an original. If you want to scan the entire area of a custom size original, select [Custom Size] as the scan size.


To display the custom size setting screen, on the initial scanner screen, press [Scan Settings] > [Scan Size] > [Custom Size].

The following tables explain how to measure custom size originals and how to specify the scan settings on the custom size settings screen.

How to measure sizes

Orientation and placement of original	Measuring method for scanning the entire area of a custom size original	
In the 🖻 📧 orientation on the exposure glass or in the ADF	Y2=0 Y1 (Y3) BP50015	
In the बिल्ल orientation on the exposure glass or in the ADF	Y2=0 Y1 (Y3) BP50025	

Scan settings on the custom size setting screen

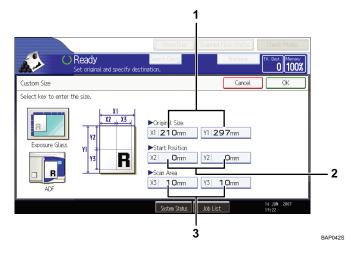

1. Original Size (X1 and Y1)

Specify the length and width of the original. Enter the actual width and length in [X1] and [Y1], respectively, and then press the [#] key.

2. Start Position (X2 and Y2)

Set Start Position to 0 mm (0 inch).

Enter "O" in both [X2] and [Y2], and then press the [#] key.


3. Scan Area (X3 and Y3)

Specify the same values as Original Size (X1, Y1).

Enter the same values in [X3] and [Y3] as Original Size (X1 and Y1 respectively), and then press the [#]] key.

Note

- For X1 and Y1, you can specify 140 mm (5.5 inches) or larger.
- When scanning originals using [Custom Size], you cannot enter specific values in [Original Size] and [Start Position]. To configure the scan area, specify [Scan Area] and [Start Position] first, and then [Original Size].
- To scan an original that is smaller than 140 mm (5.5 inches), configure the settings as though you
 were scanning part of an original that is larger than 140 mm (5.5 inches). For example: to scan a CD
 label on the exposure glass, specify X1 X3 and Y1 Y3 based on the chart below. For details about
 scanning procedures, see "Scanning part of a custom size original".

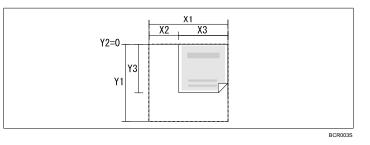

• For details about how to place originals, see "Setting of Original Feed Type".

Reference

- p.158 "Scanning part of a custom size original"
- p.162 "Setting of Original Feed Type"

Scanning part of a custom size original

If you want to scan only a part of a custom size original, select [Custom Size] as the scan size.

To display the custom size setting screen, on the initial scanner screen, press [Scan Settings] > [Scan Size] > [Custom Size].

To scan part of an original, measure Original Size (X1 and Y1), Start Position (X2 and Y2), and Scan Area (X3 and Y3) on the surface of the original, and then enter those values in the same order on the custom size setting screen.


Measuring methods differ depending on where the original is placed and the orientation it is placed in. For details about how to measure Original Size (X1 and Y1), Start Position (X2 and Y2), and Scan Area (X3 and Y3) correctly, see "How to measure sizes".

Enter the sizes while referring to "Scan settings on the custom size setting screen".

How to measure sizes

Orientation and placement of original	Measuring method for scanning the "R" section
In the 🖻 Te orientation on the exposure glass or in the ADF.	$\begin{array}{c c} X1 \\ \hline X2 \\ Y1 \\ \hline Y3 \\ \hline BAC0145 \end{array}$
In the 🖻 crientation in the ADF.	$\begin{array}{c c} X1 \\ \hline X2 \\ \hline Y1 \\ \hline Y3 \\ \hline \\ BACOTS \end{array}$
In the 🖻 crientation on the exposure glass.	$\begin{array}{c c} X1 \\ \hline X3 \\ Y1 \\ \hline Y2 \\ \hline \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ $

Scan settings on the custom size setting screen

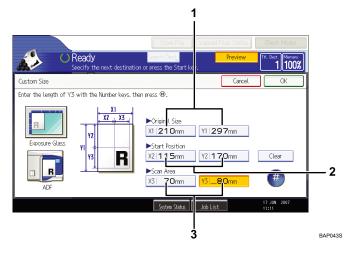

1. Original Size (X1 and Y1)

Specify the original's entire size.

Enter the actual values in [X1] and [Y1] while referring to "How to measure sizes", and then press the [#] key.

2. Start Position (X2 and Y2)

Specify the scanning start position.

Enter the actual values in [X2] and [Y2] while referring to "How to measure sizes", and then press the [#] key.

3. Scan Area (X3 and Y3)

Specify sizes of the area you want to scan.

Enter the actual values in [X3] and [Y3] while referring to "How to measure sizes", and then press the [#] key.

Vote

- When scanning originals using [Custom Size], you cannot enter specific values in [Original Size] and [Start Position]. To configure the scan area, specify [Scan Area] and [Start Position] first, and then [Original Size].
- For details about how to place originals, see "Setting of Original Feed Type".

Reference

p.162 "Setting of Original Feed Type"

Edit

Make editing settings.

[Erase Border]

Deletes the borders of the scanned original according to the specified width.

If you select [Same Width], you can specify a uniform width for deletion all around the original (top, bottom, left, and right sides). If you select [Different Width], you can specify a different width for deletion for each side.

Adjusting Image Density

This section explains how to adjust image density.

To adjust image density, press [◀] or [▶], at the left and right of [Auto Density]. These keys increase or decrease the image density in single increments up to 7.

Selecting [Auto Density] corrects scanning density to improve resolution of paper types such as non-white paper like newspaper or transparent originals.

120000000000000000000000000000000000000						1
B & W: Text / Line Art 200 dpi	E-mail		Folder			
Auto Detect	2:					
Scan Settings	Reg. No.	Manual	Entry R	ecent	7	
		- Harrona c		000110		
🔺 Auto Density 🕨	Frequent	AB	CD	EF	GH	١J
1 Sided Original 🕒	[00016]##	[000 BEBI	IN OFF	[0000 NFW	5) York ([00] LOI
Original Feed Type 🖪 🖪		ICE		FFIC		IC
Send File Type / Name	[00008] DETROIT F CTORY	A LOS S Fr	ANGELE	C0000 ABCE NY	1] I COMP/	1 500 SAI SCO
						1
Soloct Storod Filo	Tovt		C.,	bioct		<

Note

• When scanning originals in full color, you can specify the [Auto Density] level in [Background Density of ADS (Full Colour)] under [Scanner Features]. For details, see "Scan Settings".

Reference

• p.189 "Scan Settings"

Setting of Original Feed Type

This section explains Original Feed Type settings such as orientation and scan sides of originals.

Original Orientation

This section explains how to correctly display the top/bottom orientation of scanned originals on a client computer screen.

- 1. Press [Original Feed Type].
- 2. Press [BR] or [BR] to select the same orientation as that of original.

Original Feed Type		
Select item.		
►Original Orientation		
RR	ee	
Original Settings 1 Sided Original	2 Sided Original	
1 2		

3. Press [OK].

Placing Originals

To correctly display the top/bottom orientation of the scanned original on a client computer, the placement of the original and the settings made on the control panel must match.


Place originals correctly by referring to the following tables:

Exposure Glass

Place the original face down on the exposure glass in either the left-right (landscape) or up-down (portrait) orientation.

Original orientation and control panel key selection




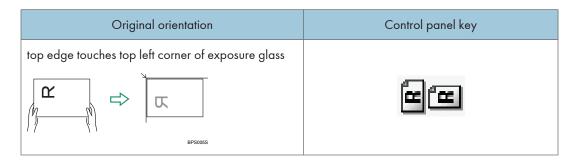

ADF

Note

Hold the original so that its text is in the natural readable orientation, and then place it face up in the ADF.

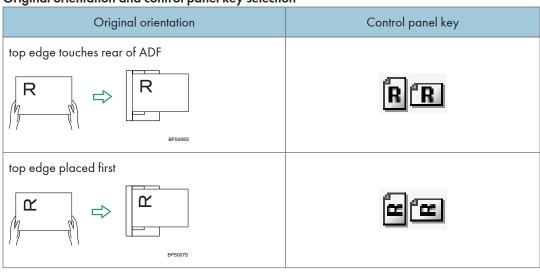


Original orientation and control panel key selection

 When you specify full color, gray scale, or [Auto Colour Select] for Original Type, and single page TIFF/JPEG or multi-page TIFF is selected as the file type, refer to the tables below for how to place originals. Originals placed in orientations that are not recommended in the table might appear incorrectly top/bottom oriented on client computer displays.

Exposure glass

Original orientation	Control panel key
top edge touches top left corner of exposure glass	
BPS005S	

ADF

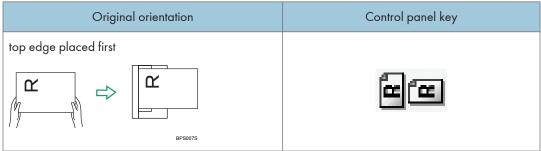

Original Settings

This section explains the settings for the scanning the sides of originals.

One-sided original

This section explains the settings for scanning only one side of originals.

- 1. Press [Original Feed Type].
- 2. In [Original Settings], select [1 Sided Original].


Original Feed Type		
Select item.		
►Original Orientation		
R R		
►Original Settings		
1 Sided Original	2 Sided Original	

3. Press [OK].

Two-sided original

This section explains the settings for scanning both sides of originals.

- 1. Press [Original Feed Type].
- 2. In [Original Settings], select [2 Sided Original].
- 3. In [Page Opening Orientation], select [Top to Top] or [Top to Bottom] according to the binding orientation of the originals.

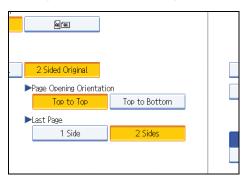

Binding orientation and required page opening orientation

Binding orientation	Page opening orientation
RSRS	Top to Top
	Top to Bottom

If the last page of the last original is blank, in [Last Page], select [1 Side] or [2 Sides].
 To skip the last page, select [1 Side].

To scan the last page as blank page, select [2 Sides].

- 5. Press [OK].
- Note
 - If you selected [Divide], the setting made here is applied to the last page of each batch of divided originals.

Batch, SADF

This section explains the settings you need to configure if you want to scan a large number of originals in several batches and send them together as a single job.

To scan originals in several batches using the [Start] key, select [Batch].

To scan the originals individually in the ADF, select [SADF].

- If you select [Batch], scanning starts when you place the additional originals and press the [Start] key. When all the originals have been scanned, press the [#] key. If you select [Batch], regardless of the default settings, the machine waits until additional originals are placed.
- If [SADF] is selected, scanning starts as soon as you place additional originals in the ADF. Select
 which operation the machine performs while waiting for additional originals in [Wait Time for Next
 Original(s): SADF] under [Scanner Features]. For details about [Wait Time for Next Original(s):
 SADF], see "Scan Settings".
- 1. Press [Original Feed Type].
- 2. Select [Batch] or [SADF].

3. Press [OK].

Note

- If [SADF] is selected, scanning starts as soon as you place additional originals in the ADF. However, in the following cases you must press the [Start] key to start scanning additional originals.
 - After scanning additional originals using the exposure glass
 - After changing settings while waiting for additional originals
 - After opening/closing the ADF
- For more details about procedures, see "Scanning Multiple Pages of Originals as One File".

Reference

- p.154 "Scan Settings"
- p.168 "Scanning Multiple Pages of Originals as One File"

Divide


This section explains settings for dividing multiple originals by a specified number of pages and then sending them.

1. Press [Original Feed Type].

2. Press [Divide].

Batch
SADF
Divide

3. Press [Change], and then use the number keys to enter the number of pages you want to divide the job into sets of.

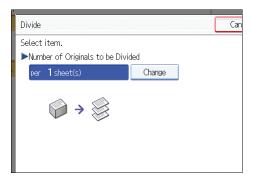

- 4. Press the [#] key.
- 5. If necessary, press [Division Check].

When you select [Division Check], if the originals were not scanned in order due to a paper jam or multi-sheet feed, a screen for stopping or continuing scanning appears at the end of the scan.

6. Press [OK] twice.

The current settings are displayed.

Vote

• If the last page of a batch of divided two-sided originals is blank, you can skip that page. To skip scanning, in [Last Page] under [2 Sided Original], select [1 Side]. To scan the last page as a blank page, select [2 Sides]. For details, see "Two-sided original".

Reference

• p.165 "Two-sided original"

Scanning Multiple Pages of Originals as One File

This section explains the procedure for sending multiple originals as a multi-page file or storing them as a single stored file.

Comportant 🗋

- To send multiple originals as a multi-page file, in [Send File Type / Name], select a multi-page file type. For details about file types, see "Specifying the File Type".
- 1. Press [Original Feed Type].
- 2. Select [Batch] or [SADF].

To scan originals using the exposure glass, select [Batch]. To scan originals using the ADF, select [SADF]. For detail about [Batch] and [SADF], see "Batch, SADF".

Batch
SADF
Divide

- 3. Press [OK].
- 4. Place originals.
- 5. Make settings for sending or storing.
- 6. Press the [Start] key to scan originals.

If [Batch] is selected, place additional originals, and then press the [Start] key.

If [SADF] is selected, scanning starts automatically when you place additional originals. Place subsequent originals after the originals have been scanned.

Repeat this step until all originals are scanned.

7. After all originals are scanned, press the [#] key.

Storing or transmission starts.

Note

- If [Batch] is selected, originals can be scanned using the ADF.
- When scanning originals using the exposure glass, depending on the settings for [Wait Time for Next Orig.: Exposure Glass] under [Scanner Features], the machine can wait for additional originals even if [Batch] is not selected in [Original Feed Type]. For details about [Wait Time for Next Orig.: Exposure Glass], see "Scan Settings".

- If, under [Scanner Features], [Set Wait Time] is set for [Wait Time for Next Orig.: Exposure Glass] or [Wait Time for Next Original(s): SADF], place additional originals within the specified time. When the countdown ends, transmission or storage starts automatically. To start transmission or storage before the countdown is completed, press the [#] key. Countdown is canceled if Scan Settings or other settings are changed in the meantime. Place additional originals, and then press the [Start] key. The machine scans the originals and the countdown is resumed. For details about [Wait Time for Next Orig.: Exposure Glass] and [Wait Time for Next Original(s): SADF], see "Scan Settings".
- If [SADF] is selected, scanning from the exposure glass is enabled after scanning from the ADF. If this happens, you must press the [Start] key to start scanning.

Reference

- p.165 "Batch, SADF"
- p.170 "Specifying the File Type"
- p.154 "Scan Settings"

Specifying the File Type and File Name

This section explains the procedure for specifying the file type, file name, and security for PDF files.

Specifying the File Type

This section explains the procedure for specifying the file type of a file you want to send.

File types can be specified when sending files by e-mail or Scan to Folder, sending stored files by e-mail or Scan to Folder, and saving files on a removable memory device.

You can select one of the following file types:

• Single Page: [TIFF / JPEG], [PDF], [High Compression PDF]

If you select a single-page file type when scanning multiple originals, one file is created for each single page and the number of files sent is the same as the number of pages scanned.

• Multi-page: [TIFF], [PDF], [High Compression PDF]


If you select a multi-page file type when scan multiple originals, scanned pages are combined and sent as a single file.

Selectable file types differ depending on the scan settings and other conditions. For details about file types, see "Notes About and Limitations of File Types".

1. Press [Send File Type / Name].

Auto Detect	
Scan Settings "	Reg. No. Manual Entry Recent
Auto Density 🕨	Frequent AB CD EF GH IJK
1 Sided Original 💵 Original Feed Type 🖭	C00016Jats C000033 C000053 C000053 Branch BERLIN OFF NEW YORK 0 LON ICE FFICE ICE ICE
Send File Type / Name	C000083 DETROIT FA LOS ANGELE ABCD COMPA SAN CTORY S FACT NY
Select Stored File	Text Subject S
	System Statu

2. Select a file type.

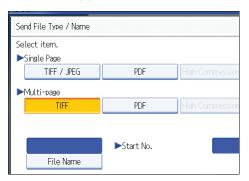

3. Press [OK].



- To deliver files, specify the file type using the delivery server computer. For details, see the manuals provided with the ScanRouter delivery software.
- If you select [Store to HDD] under [Store File], you cannot specify the file type.
- If you select [Store to HDD + Send] under [Store File], files are sent in the specified file type by e-mail
 or Scan to Folder. However, files cannot be stored in the specified format-instead, they are
 automatically stored in one of the following file types, depending on the compression and Original
 Type settings:
 - JPEG

Under [Scanner Features], [Compression (Grey Scale / Full Colour)] is set to [On], and originals are scanned in full color or gray scale.

• TIFF

All other scanning methods

- The version of the created PDF files is 1.4.
- High Compression PDF files retain the character legibility of uncompressed PDF files but have much lower data volume. For details about the limitations of High Compression PDF files, see "Notes About and Limitations of File Types".

Reference

• p.171 "Notes About and Limitations of File Types"

Notes About and Limitations of File Types

Depending on the file format you select, the following limitations will apply:

Single Page [TIFF / JPEG]

• Originals scanned in black and white are sent as TIFF files.

- According to the settings specified for [Compression (Grey Scale / Full Colour)] under [Scanner Features], originals scanned in full color or gray scale are sent in one of the following file types:
 - [On] : JPEG file
 - [Off] : TIFF file

Multi-page [TIFF]

- When full color, gray scale, or [Auto Colour Select] is specified under [Original Type] and [Compression (Grey Scale / Full Colour)] is set to [On] under [Scanner Features], you cannot select [TIFF] under [Multi-page].
- Even if you select [TIFF] under [Multi-page], files stored in JPEG format are automatically changed to multi-page PDF files and then sent.

High Compression PDF

- You cannot select [High Compression PDF] if:
 - [Store to HDD + Send] is selected under [Store File].
 - [Black & White: Text], [B & W: Text / Line Art], [B & W: Text / Photo], [Black & White: Photo], or [Auto Colour Select] is selected under [Original Type].
 - [100 dpi] or [150 dpi] is selected as the resolution.
 - [Preview] is selected.
 - The machine is working with the ScanRouter delivery software and the Capture function is in use. For details about the capture function, see the manuals provided with the ScanRouter delivery software.
- Adobe Acrobat Reader 5.0 / Adobe Reader 6.0 and later versions support High Compression PDF.
- High Compression PDF files cannot be displayed correctly using DeskTopBinder Easy Viewer. For details about the capture function, see the manuals supplied with the ScanRouter delivery software.

Specifying the File Name

This section explains the procedure for specifying a file name.

Scanned file will be given a file name consisting of the time and date of scanning, 4-digit page number, etc.

• Single-page and divided multi-page files are assigned file names that contain the date and time of scanning and a four-digit page number. An underscore is inserted between the date and time and the four-digit page number.

(Example: For a file scanned in single-page TIFF at 10 ms, 15 sec., 15:30 hours on Dec. 31, 2020, the file name will be 20201231153015010_0001.tif)

• Multi-page files are given file names that contain the time and date of scanning.

(Example: For a file scanned in multi-page TIFF at 10 ms, 15 sec., 15:30 hours on Dec. 31, 2020, the file name will be 20201231153015010.tif)

If necessary, you can change the file name.

1. Press [Send File Type / Name].

Auto Detect	E	1				
Scan Settings <u>"</u>	Reg. No.	Manual B	intry Re	ecent		
Auto Density 🕨	Frequent	AB	CD	EF	GH	IJĸ
1 Sided Original 🛄 Original Feed Type 🛙 🔳	[00016] 488 Branch	C0000 BERL ICE	IS) IN OFF	【0000 NEW FFIC	YORK O	LON LON ICE
Send File Type / Name	[00008] DETROIT FA	4 LOS S F/	ANGELE	(0000 ABCE NY		C001 SAN SCC
Select Stored File	Text		Sut	oject		S
					System	Statu

2. Press [File Name].

Send File Type / Name		
Select item.		
►Single Page		
TIFF / JPEG	PDF	High Compression
►Multi-page		
TIFF	PDF	High Compression
	►Start No	
Eile Manae	► Start INO.	
File Name		

The soft keyboard appears.

- 3. Enter a file name.
- 4. Press [OK] twice.

Changing the starting digit of file name serial numbers

A single-page file is assigned a serial number after the file name. The starting number of this serial number can be changed as follows:

1. Press [Send File Type / Name].



2. Press [Change] to the right of the entry box.

High Compression PDF	►PDF File Security	Settings
High Compression PDF		
	Change]
System Status	Job List	9 JUN 2007 11:44

- 3. Using the number keys, enter the starting digit of the serial number.
- 4. Press the [#] key.
- 5. Press [OK].

Note

- You can change the starting digit only if a single-page file type is selected.
- You can change the number of digits in the serial number. Change the number under [Scanner Features], [No. of Digits for Single Page Files]. You can select 4 or 8.

Security Settings for PDF Files

This section explains security settings for PDF files.

Use security settings to prevent unauthorized access to PDF files.

Comportant 🔁

• Security settings can be made for PDF and High Compression PDF files only.

Encrypting PDF files

Set a document password to protect and encrypt a PDF file. Only users who have the password can open and decrypt the PDF file.

🔂 Important

- Encryption is possible only for scan files that are sent by e-mail or Scan to Folder and saved on a removable memory device.
- You cannot open an encrypted file without a document password. Make sure you do not forget the file's password.
- 1. Press [Send File Type / Name].



- 2. Check that [PDF] or [High Compression PDF] is selected.
- 3. Press [Security Settings].
- 4. Select [Encryption].
- 5. In [Document Password], press [Enter].

PDF File Security Settings	
►Document Password	Enter
►Encryption Level	40 bit RC4

6. Enter a password, and then press [OK].

The password entered here will be required to open the PDF file.

- 7. Enter the password again to confirm it, and then press [OK].
- 8. In [Encryption Level], select [40 bit RC4], [128 bit RC4] or [128 bit AES].
- 9. Press [OK] twice.

• Note


- A document password cannot be the same as the master password.
- Document passwords can contain up to 32 alphanumeric characters.
- You cannot use Adobe Acrobat Reader 3.0 or 4.0 to view PDF files that were created using [128 bit RC4] encryption.
- PDF files created using [128 bit AES] encryption can be viewed only with Adobe Reader 7.0 or later.
- If [Low Resolution Only] is selected as the print permission, you cannot select [40 bit RC4] as the PDF encryption level.

Changing security permissions for PDF files

Set a master password to restrict unauthorized printing, changing, copying, or extracting of a PDF file's content. Only users who have the master password can reset or change these restrictions.

C Important

- Encryption is possible only for scan files that are sent by e-mail or Scan to Folder and saved on a removable memory device.
- You cannot reset or change a file's restriction settings without the master password. Write down the master password and keep it secure.
- 1. Press [Send File Type / Name].

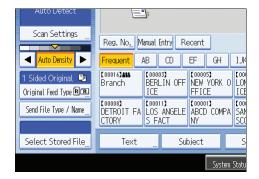

- 2. Check that [PDF] or [High Compression PDF] is selected.
- 3. Press [Security Settings].
- 4. Select the [Permissions] tab.

5. In [Master Password], select [Set].

PDF File Security Settings	
Encryption Permissions	
►Master Password	Set
▶Permissions	
Printing	Prohibit
Changes	Prohibit
Content Copying and Extraction	Prohibit

6. In [Password], press [Enter].

tings		Can
nissions		
	Set	Do not Set
	Password	Enter
	Prohibit	Allow
	Prohibit	Allow
d Extraction	Prohibit	Allow


7. Enter a password, and then press [OK].

The password entered here will be required to change the security settings of the PDF file.

- 8. Enter the password again to confirm it, and then press [OK].
- 9. Select the security permission setting.

You can specify the following security settings:

- Print permission: [Prohibit], [Allow], or [Low Resolution Only]
- Editing permission: [Prohibit] or [Allow]
- Copying or extracting content permission: [Prohibit] or [Allow]

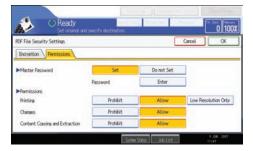

10. Press [OK] twice.

Vote

- The master password cannot be the same as a document password.
- Master passwords can contain up to 32 alphanumeric characters.
- If [40 bit RC4] is selected as the PDF encryption level, you cannot select [Low Resolution Only] as the print permission.

Programs

You can register frequently used settings in the machine memory and recall them for future use.


Note

- You can register up to 10 programs for the scanner mode.
- Programs are not deleted by turning the power off or by pressing the [Clear Modes] key unless the content is deleted or newly registered.
- The following settings can be registered to programs: Scan Settings, 1 Sided/2 Sided Original, Top to Top/Top to Bottom, 1 Side/2 Sides for the Last Page, Divide, Original Orientation, File Type, Batch/SADF, Store File, Preview, Reception Notice, and Security (E-mail Encryption and Signature).
- Setting made on the simplified display cannot be registered to a program.

Registering Frequently Used Settings

To register frequently used settings in a program:

- 1. On the initial scanner screen, make the settings you want to register in a program.
- 2. Press the [Program] key.

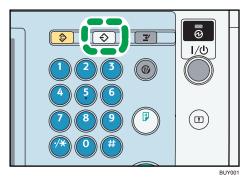

3. Press [Program].

Program (Scanner)			
Select No. to program.			
Recall Program Change Name			
♦001 security	≎002 origina		
♦003 preview	004 × Not		
005 × Not Programmed	006 × Not		
007 × Not Programmed	008 * Not		
009 × Not Programmed	010 * Not		

4. Select the number of the program in which you want to register the settings.

Program numbers with ⇒ already have settings in them.

- 5. Enter the program name.
- 6. Press [OK].

The Program screen reappears. When the settings are successfully registered, ⇒appears on the left side of the registered program number and the program name appears on the right side. The initial screen reappears after a moment.

Recalling a Registered Content

To recall settings registered in a program and use them for scanning:

- 1. Press the [Program] key.
- 2. Press [Recall].

Program (Scanner)			
inge Name			
≎002 origina			
004 米 Not			
006 * Not			
008 * Not			
010 * Not			

3. Press the number of the program you want to recall.

Settings registered in the program are recalled and the initial scanner screen reappears.

Settings are not registered in numbers that appear without�.

4. Place originals, and then press the [Start] key.

Changing a Registered Program

To change the settings registered to a program:

- 1. Press the [Program] key.
- 2. Press [Recall].
- 3. Press the number of the program you want to change.

Settings registered in the program are recalled and the initial scanner screen reappears.

4. Change settings of the program.

- 5. Press the [Program] key.
- 6. Press [Program].
- Press the number of the program whose settings you changed or the number of a different program in which you want to register the changed settings.
- 8. If you select a program that is already registered, a confirmation message appears. To overwrite the program, press [Yes].

If you select a new program number, you can omit this step. Proceed to the next step.

- 9. Enter a program name.
- 10. Press [OK].

If overwritten, the registered program is deleted.

The new program name appears briefly, and then the initial screen reappears after a moment.

Deleting a Program

To delete a registered program:

- 1. Press the [Program] key.
- 2. Press [Delete].

		Exit		
ange Name	Delete	Program as Defaults		
♦002 original feed type				
004 × Not Programmed				
006 * No				
008 * Not Programmed				
010 × No				

3. Press the number of the program you want to delete.

A confirmation screen appears.

4. Press [Yes].

The program is deleted, and the initial screen reappears after a moment.

Changing the Registered Program Name

To change the name of a registered program:

1. Press the [Program] key.

2. Press [Change Name].

inge the name of			
Program	Change Name	Delete	
	≎002 orig	inal feed type	
	004 × N	lot Programmed	
ed	006 * N	lot Programmed	
	008 * N	008 × Not Programmed	
	010 × Not Programmed		

3. Press the number of the program whose name you want to change.

The soft keyboard appears.

- 4. Enter a new program name.
- 5. Press [OK].


The new program name appears briefly, and then the initial screen reappears.

Changing the Default Functions of the Scanner's Initial Display

This section explains how to set defaults for the initial screen, which appears when the machine is turned on or when settings are cleared or reset.

The following settings can be registered as defaults: Scan Settings, 1 Sided/2 Sided Original, Top to Top/ Top to Bottom, 1 Side/2 Sides for the Last Page, Divide, Original Orientation, File Type, Batch/SADF, Store File, Preview, Reception Notice, and Security (E-mail Encryption and Signature).

- 1. Make the necessary scan settings on the initial screen.
- 2. Press the [Program] key.

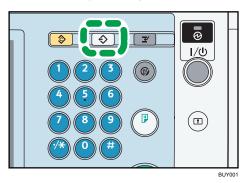

3. Press [Program as Defaults].



4. Press [Program].

A confirmation screen appears.

5. Press [Yes].

The current settings are registered as defaults, and then the initial screen reappears.

• Note

• To restore the initial screen's original default settings, press [Restore Factory Defaults].

• Default settings for the initial screen can be registered for normal screens and simplified displays respectively.

9. Scanner Features

This chapter describes the user tools in the Scanner Features menu.

Accessing User Tools

This section describes how to access User Tools.

User Tools allows you to change the settings of [Scanner Features].

Note

- Procedures for configuring system settings differ from procedures for configuring other settings. You must return to the initial screen when you finish configuring the system settings. For details about returning to the initial screen, see "Closing User Tools".
- Any changes you make in [Scanner Features] remain in effect even if the main power switch or operation switch is turned off, or the [Energy Saver] or [Clear Modes] key is pressed.
- Depending on the sending method, some settings cannot be applied.

Reference


• p.186 "Closing User Tools"

Changing User Tools

This section describes how to change the settings of [Scanner Features].

Comportant 🔁

- If Administrator Authentication Management is specified, contact your administrator.
- 1. Press the [User Tools/Counter] key.

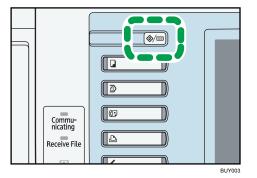

- 2. Press [Scanner Features].
- 3. Select the item you want to change.
- 4. Change settings by following instructions on the display, and then press [OK].


Vote

• To cancel changes made to the settings and return to the initial display, press the [User Tools/Counter] key.

Closing User Tools

This section describes how to quit User Tools.

1. Press the [User Tools/Counter] key.

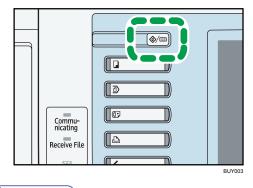

Note

• You can also quit User Tools by pressing [Exit].

General Settings

This section describes the user tools on the [General Settings] tab in [Scanner Features].

Switch Title

Select the title to be shown on the destination list.

Default: [Title 1]

Update Delivery Server Destination List

Press [Update Delivery Server Destination List] to update the receivers from the delivery server. To use this function, it is necessary to set [Delivery Option] to [On].

For details about "Delivery Option", see "File Transfer", Network and System Settings Reference.

Search Destination

Select a destination list to be used in "Search Destination". To search from LDAP server, it is necessary to register the LDAP server in [System Settings] and set [LDAP Search] to [On].

Default: [Address Book]

For details about "LDAP Search", see "Administrator Tools", Network and System Settings Reference.

PC Scan Command Standby Time

If the machine receives a TWAIN or WSD (Pull Type) scanning request while it is writing data to memory or performing e-mail, Scan to Folder, network delivery, or WSD scanning jobs, it switches to the network TWAIN or WSD (Pull Type) scanner function either immediately or after a specified standby time elapses following the last key operation.

Use this setting to select whether the machine switches to TWAIN or WSD (Pull Type) immediately or waits until the standby time elapses when it receives a TWAIN or WSD (Pull Type) scanning request.

Default: [On], 10 second(s)

If you select [Off], the machine will switch to the network TWAIN or WSD (Pull Type) scanner function immediately.

If you select [On], enter a standby time using the number keys (3-30 seconds). The machine will switch to the network TWAIN or WSD (Pull Type) scanner function when the time set here elapses following the last key operation.

Destination List Display Priority 1

Select a destination list to be displayed when the machine is in the initial state.

You can select [E-mail / Folder], [Delivery Server], or [WSD].

Default: [Delivery Server]

Destination List Display Priority 2

In the machine's address book, select which address book appears by default.

You can select either [E-mail Address] or [Folder].

Default: [E-mail Address]

Print & Delete Scanner Journal

Up to 250 transmission/delivery results can be checked on this machine. If the stored transmission/ delivery results reach 250, select whether to print the delivery journal.

Default: [On]

• On

The transmission/delivery journal is printed automatically. The printed journal is deleted.

• Off

Transmission/delivery results are deleted one by one as new results are stored.

• Do not Print: Disable Send

Transmission/delivery cannot be performed when the journal is full.

When printed, all records are deleted after printing. When not printed, records over the limit are automatically deleted in succession from the oldest record.

While the journal is being printed, files with the status waiting cannot be sent.

Print Scanner Journal

The scanner journal is printed and deleted.

Delete Scanner Journal

The scanner journal is deleted without being printed.

Delete Recent Destinations

The recent destinations are deleted.

Scan Settings

This section describes the user tools in the [Scan Settings] tab under [Scanner Features].

A.C.S. Sensitivity Level

Sets the sensitivity level for judging color/black and white for scanning originals when [Original Type] is set to [Auto Colour Select].

Default: The default setting is the middle of 5 adjustment levels.

Wait Time for Next Orig.: Exposure Glass

If you want to divide your originals and scan them separately using the exposure glass and then send them together as a single job, select [Continuous Wait], [Off], or [Set Wait Time] as the waiting status.

Default: [Set Wait Time], 60 second(s)

If you specify [SADF] or [Batch] for the [Original Feed Type] setting, the [Wait Time for Next Orig.: Exposure Glass] setting becomes invalid.

If [Off] is selected, the machine forwards the scan data as soon as it finishes scanning each original.

If [Set Wait Time] is selected, enter the wait time in seconds (3-999) for placing additional originals with the number keys. Scanning will start if additional originals are placed and the [Start] key is pressed within this time. You can end scanning and begin transmission by pressing the [#] key within this time. Once the specified time has elapsed, transmission starts automatically.

If [Continuous Wait] is selected, the machine will wait for additional originals until the [#] key is pressed. Scanning will start when additional originals are placed and the [Start] key is pressed. You can end scanning and begin sending by pressing the [#] key.

If originals are placed in the ADF (auto document feeder), transmission will start without waiting for additional originals after all originals in the ADF have been scanned, regardless of the specified settings.

If a paper misfeed occurs or any of the following operations are performed while the machine is waiting for additional originals, the countdown stops and does not start again until the [#] key is pressed.

- Changing the settings such as the scan settings
- Opening the upper cover of the ADF
- Pressing the [Interrupt] key to activate the copy mode

Wait Time for Next Original(s): SADF

If you want to divide your originals and scan them separately using the ADF and then send them together as a single job, select [Set Wait Time] or [Continuous Wait] as the waiting status.

Default: [Set Wait Time], 60 second(s)

This setting is valid if [SADF] is specified for [Original Feed Type] when scanning.

If [Set Wait Time] is selected, enter the wait time in seconds (3-999) for placing additional originals with the number keys. Scanning will start automatically if additional originals are placed within this time. You can end scanning and begin transmission by pressing the [#] key within this time. Once the specified time has elapsed, transmission starts automatically.

If [Continuous Wait] is selected, the machine will wait for the additional originals until the [#] key is pressed. Scanning will start automatically when additional originals are placed. You can end scanning and begin sending by pressing the [#] key.

Even if originals are placed on the exposure glass, the machine will operate according to the specified settings. However, every time originals are placed on the exposure glass, you must press the [Start] key to start scanning.

If a paper misfeed occurs or any of the following operations are performed while the machine is waiting for additional originals, the countdown stops and does not start again until the [#] key is pressed.

- · Changing the settings such as the scan settings
- Opening the upper cover of the ADF
- Pressing the [Interrupt] key to activate the copy mode

Background Density of ADS (Full Colour)

Characteristics due to the type of paper such as nonwhiteness like newspaper or transparent originals can be reduced by correcting the scanning density.

Default: The default setting is the middle of 5 adjustment levels.

Blank Page Detect

Use the Blank Page Detect function to prevent blank pages being scanned.

If the first page of the originals is blank, the machine beeps to warn you that you might have placed blank originals.

Default: [On]

- On
- Off

When the Blank Page Detect function is set to [On], the outermost 1 mm of an original's edge border cannot be scanned.

Blank pages of custom size originals may not be detected.

This function is available only for scanning from the ADF.

The machine cannot perform blank page detection on the second or subsequent pages of an original.

Send Settings

This section describes the user tools in the [Send Settings] tab under [Scanner Features].

Compression (Black & White)

Select whether or not to compress black and white scan files.

Default: [On]

Compression reduces the time required for transferring the scan file.

The actual time required for file transfer will vary depending on the file size and network load.

Compression (Grey Scale / Full Colour)

Specify whether or not to compress multi-level (grayscale / full color) scan files.

Default: [**On**]

If you select [On], you can specify the compression level between one and five.

The image quality is better for lower compression, but the time required for file transfer increases accordingly.

The actual time required for file transfer will vary depending on the file size and network load.

Compression Method for High Compression PDF

Select the compression method for compressing image data when creating high compression PDF files.

Default: [JPEG]

- JPEG
- JPEG 2000

High Compression PDF Level

Select compression level when creating high compression PDF files.

Default: [Standard]

Max. E-mail Size

Select whether or not to limit the size of an e-mail to which an image is attached.

Default: [On], 2048KB

When [On] is selected, enter the size limit (128-102400 KB) with the number keys.

When the SMTP limits the size, match that setting.

Divide & Send E-mail

This function is effective only when [On] is selected for [Max. E-mail Size].

Select whether or not an image exceeding the size specified in [Max. E-mail Size] should be divided and sent using more than one e-mail.

Default: [Yes (per max. size)], 5

When [Yes (per Max. Size)] is selected, enter the Max. Number of Divisions (2-500) with the number keys.

When [TIFF] or [PDF] under [Multi-page] is selected for [File Type], the image will not be divided even if [Yes (per Page)] is selected.

When [Yes (per Max. Size)] is selected, some received files may not be able to be restored, depending on the type of e-mail software.

When [No] is selected, the e-mail is not sent if its size exceeds the limit, and an error message appears. The scan file is discarded.

Set the maximum e-mail size within the capacity of the SMTP server.

Insert Additional E-mail Info

Select the language in which e-mail information such as title, document name, and sender's name is sent.

If you select [On], select one of the following 22 languages:

British English, American English, German, French, Italian, Spanish, Dutch, Portuguese, Polish, Czech, Swedish, Finnish, Hungarian, Norwegian, Danish, Japanese, Simplified Chinese, Traditional Chinese, Russian, Hangul, Catalan, and Turkish.

Default: [On], [British English]

The e-mail text which is a template cannot be changed.

No. of Digits for Single Page Files

Sets digit number for serial number to attach to Single Page file name.

Default: [4 Digits]

Stored File E-mail Method

Specify the e-mail setting for sending stored files. You can select [Send File] or [Send URL Link]. This setting can be used for the following:

Default: [Send File]

• Send File

Sending Stored Files by E-mail

• Send URL Link

Simultaneous Storage and Sending by E-mail

If you select [Send File], actual files are attached to e-mails.

If you select [Send URL Link], URL links to file locations are attached to e-mails.

If [Send URL Link] is selected in [Stored File E-mail Method], a phishing warning may appear after you receive a stored file e-mail, depending on your e-mail application. To prevent phishing warnings appearing after you receive a stored file e-mail, you must add the sender to your e-mail application's exclusion list. For details about how to do this, see your e-mail application's Help.

Default E-mail Subject

If an e-mail subject is not entered on the machine's control panel, the default e-mail subject is applied when scan files are sent by e-mail.

Select whether to use the host name or a specified text as the default e-mail subject.

Default: [Host Name]

If you select [Host Name], the host name configured on the [Interface Settings] tab under [System Settings] is applied.

Initial Settings

This section describes the user tools in the [Initial Settings] tab under [Scanner Features].

Menu Protect

You can specify user access levels for functions whose settings can be changed by users other than the administrator. Using Menu Protect, you can prevent unauthenticated users from changing the user tools.

Menu Protect is a Scanner Features setting item. You can also specify user access levels for each function's default setting.

For details, consult your administrator.

10. Appendix

Relationship between Resolution and Scan Size

This section explains the relationship between resolution and scan size.

Resolution and scan size are inversely related. The higher the resolution (dpi) is set, the smaller the area that can be scanned. Similarly, the larger the scan area, the lower the resolution that can be set.

The relationship between the scanning resolution and scan size is shown below. If the combination is unreadable, "Exceeded max. data capacity. Check the scanning resolution, then press the Start key again." appears on the machine's control panel display. Change the condition until scanning is enabled.

Note

• Image compression level can limit Maximum image size.

When Using the E-mail, Folder Sending, WSD Scanner, Storing, or Network Delivery Functions

This section explains the relationship between resolution and scan size when using the e-mail, Scan to Folder, WSD Scanner, storing, or network delivery functions.

If [Black & White: Text], [B & W: Text / Line Art], [B & W: Text / Photo], [Black & White: Photo], or [Grey Scale] is selected for Original Type:

All combinations up to A3 and 600 dpi can be scanned.

If [Full Colour: Text / Photo] or [Full Colour: Glossy Photo] is selected as Original Type:

The scan size determines the maximum resolution possible.

Refer to the table below for the maximum resolution available for each scan size.

Scan size and maximum resolution

Scan size	Maximum resolution (dpi)
A3, B4, 11×17, Legal (8 ¹ / ₂ ×14), 8 ¹ / ₂ ×13	400
A4, A5, A6, A7, B5, B6, Letter $(8^1/_2 \times 11)$, $5^1/_2 \times 8^1/_2$	600

Vote

- Enter B6, A6, and A7 sizes directly.
 - B6 (128 mm/5.0 inches × 182 mm/7.1 inches)
 - A6 (105 mm/4.1 inches × 148 mm/5.8 inches)

• A7 (74 mm/2.9 inches × 105 mm/4.1 inches)

When Using as a TWAIN Scanner

This section explains the relationship between resolution and scan size when using the machine as a TWAIN scanner.

To specify the scan area or resolution on the machine you are using as a network TWAIN scanner directly, see the TWAIN driver Help.

Note

• Certain original types and resolution settings can reduce scanning quality.

If [Binary(Text)], [Binary(Photo)], [Grey Scale], [8 Colors], or [8 Colors(Photo)] is selected in [Col./Grad.:]

The scan size determines the maximum possible resolution.

Refer to the table below for the maximum resolution available for each scan size.

Scan size and maximum resolution

Scan size	Maximum resolution (dpi)
A3, 11×17	600
В4	693
Legal $(8^1/_2 \times 14)$	728
8 ¹ / ₂ ×13	785
Letter $(8^1/_2 \times 11)$	825
A4	848
В5	979
A5, B6, A6, 5 ¹ / ₂ ×8 ¹ / ₂	1200

If [16770K colors] is selected in [Col./Grad.:]

The scan size determines the maximum possible resolution.

Refer to the table below for the maximum resolution available for each scan size.

Scan size and maximum resolution

Scan size	Maximum resolution (dpi)
A3	425

Scan size	Maximum resolution (dpi)
11×17	432
B4	491
Legal (8 ¹ / ₂ ×14)	542
8 ¹ / ₂ ×13	563
A4	601
Letter $(8^1/_2 \times 11)$	612
В5	695
A5	852
5 ¹ / ₂ ×8 ¹ / ₂	865
Вб	984
A6	1200

Software Supplied on CD-ROM

This section explains the applications on the supplied CD-ROM.

Auto-Run Program

This section explains the auto-run program.

When the CD-ROM is inserted into a client computer running Windows 2000/XP/Vista or Windows Server 2003/2003 R2/2008, the installer starts up automatically (auto run) to install various software.

Vote

- For installation, log on as an Administrators group member.
- Auto-run program may not automatically work with certain operating system settings. If this happens, start "Setup.exe" on the CD-ROM root directory.
- To disable auto-run, set CD-ROM while pressing the Shift key. Keep the Shift key pressed until the computer finishes reading from the CD-ROM.
- If [Cancel] is clicked during installation, the installation of all the software thereafter will be stopped. If cancelled, reinstall the remaining software after restarting the client computer.

TWAIN Driver

This section tells you the file path to the TWAIN driver and the TWAIN driver's system requirements.

You must install this driver if you want to scan originals or use the machine as a network TWAIN scanner.

File path

The TWAIN driver is stored in the following folder on the CD-ROM:

\DRIVERS\TWAIN

System requirements

- Computer hardware
 - PC/AT-compatible machines that support the operating system properly
- Operating system

Microsoft Windows 2000/XP/Vista

Microsoft Windows Server 2003/2003 R2/2008

Display resolution
 800 × 600 pixels, 256 colors or higher

Values of Various Set Items for Transmission/ Storage/Delivery Function

This section explains the values of various transmission/storage/delivery function settings.

Note

• Depending on the type or settings of the file or original, you may not be able to specify the destination or enter the maximum number of characters stated below.

Transmission Function

This section explains the values of transmission function settings.

Sending e-mail

The following table tells you the maximum values of the e-mail sending function settings.

Values of Set Items for Sending by E-mail

ltem	Maximum value	Comments
Number of subject line characters	128 alphanumeric characters	-
Number of e-mail message characters	 Selecting from the list: 400 alphanumeric characters (80 alphanumeric characters × 5 lines) Entering manually: 80 alphanumeric characters 	You cannot enter messages from the list and manually at the same time.
Number of e-mail address characters	128 alphanumeric characters	E-mail addresses found via LDAP server search cannot be selected if they contain more than 128 characters.
Number of addresses you can specify at the same time	500 addresses	You can specify 100 destinations by direct entry, including LDAP search. Select the remaining 400 destinations from registered addresses.

ltem	Maximum value	Comments
Sendable file size	725.3 MB per file	-
Sendable number of pages	3,000 pages per file	-

Folder transmission

The following table tells you the maximum values of the Scan to Folder function settings.

Values of Set Items for Scan to Folder

ltem	Maximum value	Comments
Number of path name characters on SMB	256 alphanumeric characters	-
Number of user name characters on SMB	128 alphanumeric characters	-
Number of password characters on SMB	128 alphanumeric characters	-
Number of server name characters on FTP	64 alphanumeric characters	-
Number of path name characters on FTP	256 alphanumeric characters	-
Number of user name characters on FTP	64 alphanumeric characters	-
Number of password characters on FTP	64 alphanumeric characters	-
Number of path name characters on NCP	256 alphanumeric characters	-
Number of user name characters on NCP	128 alphanumeric characters	-
Number of password characters on NCP	64 alphanumeric characters	-
Number of addresses you can specify at the same time	50 addresses	You can specify a maximum of 50 directly entered destinations.

ltem	Maximum value	Comments
Sendable file size	2,000 MB per file	-

Simultaneous transmission

The following table tells you the maximum values of settings for using the E-mail and Scan to Folder functions simultaneously.

Values of Set Items for Simultaneous transmission

ltem	Maximum value	Comments
Number of destinations you can select for E-mail and Scan to Folder	550 addresses	-
Number of destinations you can select for sending by e- mail	500 addresses	You can specify a maximum of 100 directly entered destinations, including LDAP search-retrieved destinations.
Number of destinations you can set for sending by Scan to Folder	50 addresses	-

WSD scanner transmission

The following table tells you the maximum values available for the WSD scanner function settings.

Values of Set Items for WSD Scanner Transmission

ltem	Maximum value	Comments
Number of destinations you can specify at the same time	1 destination	-
Sendable file size	2,000 MB per file	-
Sendable number of pages	3,000 pages per file	-

Storage Function

The following table tells you the maximum values of the storage function settings.

Values of Set Items for File Storage

ltem	Maximum value	Comments
Number of file name characters	64 alphanumeric characters	On the control panel, the first 16 characters are displayed. When viewing the stored files from a client computer using DeskTopBinder, all the entered characters can be viewed.
Number of user name characters	20 alphanumeric characters	On the control panel, the first 16 characters are displayed. When viewing the stored files from a client computer using DeskTopBinder, all the entered characters can be viewed.
Number of password characters	4-8 digit number	-
Number of stored files you can select at the same time	30 files	-
Storable number of files	3,000 files	This is the total number of files stored under the scanner, copier, document server, and printer functions.
Storable number of pages	15,000 pages	This is the total number of files stored under the scanner, copier, document server, and printer functions.
Storable number of pages per file	3,000 pages	-
Storable size	2,000 MB per file	-

Network Delivery Function

The following table tells you the values of setting items for the network delivery scanner function.

ltem	Maximum value	Comments
Number of subject line characters	128 alphanumeric characters	This is the total number of characters selected from the list and the number of characters entered directly from text.
Number of e-mail address characters	128 alphanumeric characters	-
Number of addresses you can specify at the same time	500 addresses	You can specify 65 destinations by direct entry, including LDAP search. Select the remaining 435 destinations from registered addresses.
		The maximum number of destinations you can specify differs depending on which ScanRouter delivery software you are using. For details, see the manuals supplied with the ScanRouter delivery software.
Sendable file size	2,000 MB per file	-

Values of Set Items for Network Delivery

About WIA Scanning

WIA allows computers that are running Windows Vista to perform scanning through the network.

Comportant 🔿

• To use this machine as a WIA scanner, you must first download the WIA driver from the supplier's Web site and install it on your computer.

Network TWAIN also allows you to perform scanning through a network; however, TWAIN and WIA do not provide the same scan functions.

The following table tells you the functions available or not available with TWAIN and WIA. For details about TWAIN, see "Scanning Originals with the Network TWAIN Scanner".

Reference

• p.143 "Scanning Originals with the Network TWAIN Scanner"

Functions of the TWAIN and WIA scanners

Functions	TWAIN	WIA
1. Scan		
Scan from the exposure glass	Yes	Yes
Continuous scanning from the ADF	Yes	Yes
ADF Read-ahead	Yes	Yes ^{*1}
Specify the number of originals to be scanned from the ADF	Yes ^{*2}	Yes ^{*2}
Preview	Yes	Yes ^{*3}
Auto detect		
• When scanning from the exposure glass	Yes	No
• When scanning from the ADF (Mixed-size)	Yes	Yes
• When scanning from the ADF (Uni-size)	Yes	No
Scan using an application that do not have user interface	Yes	Yes
2. Setting		
Driver selection	Yes	Yes
Initial Settings		

Functions	TWAIN	WIA
• Unit of Measure: (mm, inch, pixel)	Yes	No
Compression	Yes	No
Deskew	Yes	No
Start from Scanner	Yes	No
Orient.auto detect	Yes	No
Save/Delete Mode	Yes	No
Specify original size		
• When scanning from the exposure glass	Yes	Yes ^{*2}
• When scanning from the ADF	Yes	Yes
Orig.Orientn.:	Yes	Yes ^{*2}
Orientation:	Yes	Yes ^{*2}
Scan Settings:		
• 1 Sided	Yes	Yes
• 2 Sided	Yes	Yes
• 2 Sided (Top to Top, Top to Bottom)	Yes	No
Resolution	Yes	Yes
Brightness:	Yes	Yes
Contrast:	Yes	Yes
Threshold:	Yes	Yes ^{*2}
Col./Grad.:		
• Binary	Yes	Yes
• Grey Scale	Yes	Yes
• 8 Colors	Yes	No
• 16770K colors (Full color)	Yes	Yes
Gam-Curve:	Yes	No

Functions	TWAIN	WIA
Eras.Bgrnd:	Yes	No
Advanced		
• Filter (Filter, Dropout Col.)	Yes	No
Color Matching (ICM:, Inversion)	Yes	No
Save/Delete Scanning Area	Yes	No
Specify original size (specify scan area manually)	Yes	No
Comb./Series	Yes	No
Endorser	Yes	No
3. Properties		
General		
• Diagnosis (Scan test)	No	Yes
Authenticate		
• User Code:	Yes	Yes
General User Authentication	Yes	Yes
Network Connection		
Settings for using a specific scanner	Yes	Yes
SNMP V3 Auth.information	Yes	Yes
Driver version display	Yes	Yes

*1 You cannot disable this function.

*² You might not be able to specify settings for this function from some applications.

^{*3} The preview does not reflect changes made for settings while it is displayed. To display the preview image with the changed settings applied, first close the preview, and then open it again.

Specifications

The following table tells you the specifications of the scanner.

Specifications

Component	Specifications
Туре	Full-color scanner
Scan method	Flatbed scanning
Image sensor type	CCD Image Sensor
Scan type	Sheet, book, three-dimensional object
Original sizes that can be scanned	 Length 140 - 297 mm (5¹/₂ - 11 inches) Width 140 - 432 mm (5¹/₂ - 17 inches)
Scan sizes automatically detectable from the exposure glass	 Metric version A3⁽²⁾, B4 JIS⁽²⁾, A4⁽¹⁾, A4⁽²⁾, B5 JIS⁽²⁾, B5 JIS ⁽²⁾, 8¹/₂ × 13⁽²⁾ Inch version 11 × 17⁽²⁾, 8¹/₂ × 14⁽²⁾, 8¹/₂ × 11⁽²⁾, 8¹/₂ × 11⁽²⁾
Scan sizes automatically detectable from the ADF	 Metric version A3@, B4 JIS@, A4@, A4@, B5 JIS@, B5 JIS @, A5@, A5@, B6@, B6@, 11 × 17@, 8¹/₂ × 11@, 8¹/₂ × 13@ Inch version A3@, A4@, A4@, 11 × 17@, 8¹/₂ × 14 @, 8¹/₂ × 11@, 8¹/₂ × 11@, 5¹/₂ × 8¹/₂ @, 5¹/₂ × 8¹/₂@, 10 × 14@, 7¹/₄ × 10¹/₂@

Component	Specifications
	When using the E-mail/Scan to Folder/WSD(Push Type)/Scan to Removable device/network delivery scanner function (Original size: A4 ^d , Resolution: 200 dpi, 1-side scanning):
	Black and white: 82 pages/min
	(Original Type: B & W: Text / Line Art, Compression (Black & White): MH, ITU-T No 1 Chart)
Scan speed	Full Color: 70 pages/min
	(Original Type: Full Colour: Text / Photo, Compression (Grey Scale / Full Colour): Default, Original Chart)
	Scanning speed differs depending on the following; operating environment of the machine and computer, scan settings, and the content of originals (denser images require more time).
T	Black and white: 2 tones
Tone	Full color / Gray scale: 256 tones
Basic scanning resolution	600 dpi
Image compression type for black and white (two- value)	TIFF (MH, MR, MMR)
Image compression type for gray scale/full color	JPEG
	Standard:
Interface	• Ethernet interface (100BASE-TX/10BASE-T)
	• USB 2.0
	Option:
	 Gigabit Ethernet interface (1000BASE-T/ 100BASE-TX/10BASE-T)
	• IEEE 802.11a/b/g wireless LAN interface
Network protocol	TCP/IP
Selectable scanning resolutions when using the E- mail function (main scanning × sub scanning)	100 dpi, 150 dpi, 200 dpi, 300 dpi, 400 dpi, 600 dpi

Component	Specifications
Protocol for sending e-mail	SMTP, POP3
Sendable file formats when using the E-mail function	TIFF, JPEG, PDF, High Compression PDF
Selectable scanning resolutions when using the Scan to Folder function (main scanning × sub scanning)	100 dpi, 150 dpi, 200 dpi, 300 dpi, 400 dpi, 600 dpi
Protocol for Scan to Folder	SMB, FTP, NCP
Sendable file formats when using the Scan to Folder function	TIFF, JPEG, PDF, High Compression PDF
Protocol for sending using WSD	Web Services on Devices for scanning
Selectable scanning resolution when using TWAIN scanner (main scanning × sub scanning)	100 dpi to 1200 dpi
Protocol for TWAIN scanner	TCP/IP
Operating system for TWAIN scanner	Windows 2000/XP/Vista, Windows Server 2003/2003 R2/2008
Selectable scanning resolutions when using the network delivery scanner function (main scanning × sub scanning)	100 dpi, 150 dpi, 200 dpi, 300 dpi, 400 dpi, 600 dpi
Selectable scanning resolutions when using WIA scanner (main scanning × sub scanning)	100 dpi to 1200 dpi
Protocol for WIA scanner	TCP/IP
Operating system for WIA scanner	Windows Vista (SP1 or later), Windows Server 2008 (WIA scanner can function under both 32- and 64- bit operating systems.)

Vote

• Specifications are subject to change without notice.

Trademarks

Adobe, Acrobat, Acrobat Reader, PostScript, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Pentium[®] is a registered trademark of Intel Corporation.

NetWare[®] is a registered trademark of Novell, Inc.

Microsoft[®], Windows[®], Windows Server[®], and Windows Vista[®] are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Mac OS is a trademark of Apple Inc., registered in the U.S. and other countries.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

- The product names of Windows 2000 are as follows: Microsoft[®] Windows[®] 2000 Professional Microsoft[®] Windows[®] 2000 Server Microsoft[®] Windows[®] 2000 Advanced Server
- The product names of Windows XP are as follows: Microsoft[®] Windows[®] XP Home Edition Microsoft[®] Windows[®] XP Professional
- The product names of Windows Vista are as follows: Microsoft[®] Windows Vista[®] Ultimate Microsoft[®] Windows Vista[®] Enterprise Microsoft[®] Windows Vista[®] Business Microsoft[®] Windows Vista[®] Home Premium Microsoft[®] Windows Vista[®] Home Basic
- The product names of Windows Server 2003 are as follows: Microsoft[®] Windows Server[®] 2003 Standard Edition Microsoft[®] Windows Server[®] 2003 Enterprise Edition
- The product names of Windows Server 2003 R2 are as follows: Microsoft[®] Windows Server[®] 2003 R2 Standard Edition Microsoft[®] Windows Server[®] 2003 R2 Enterprise Edition
- The product names of Windows Server 2008 are as follows: Microsoft[®] Windows Server[®] 2008 Standard Microsoft[®] Windows Server[®] 2008 Enterprise

Microsoft[®] Windows Server[®] 2008 Datacenter

10. Appendix

INDEX

Α
A.C.S. Sensitivity Level
Access Privileges
Accessing User Tools185
Address book
registering destination folders59
registering e-mail addresses24
ADF151, 163
Adjusting image density161
Advanced Search
Auto Colour Select154
Auto Density161
Auto Detect155
Auto-run program198

В

B & W Text / Line Art154
B & W Text / Photo154
Background Density of ADS (Full Colour)190
Basic operation
delivering scan files129
network TWAIN scanner148
saving on a memory device121
sending scan files by e-mail27
sending scan files by Scan to Folder62
storing scan files101
WSD scanner (Pull Type)94
WSD scanner (Push Type)88
Batch165, 168
Black & White Photo154
Black & White Text154
Blank Page Detect190
с

Compression Method for High Compression PDF
Configuring scan settings on a client computer
Confirmation displays
Connecting to the network22, 23, 55, 83, 124, 144
Custom Size

D
Delete
Delete File
Delete Recent Destinations
Delete Scanner Journal
Delivering scan files
Delivery123
Delivery Dest
Delivery destination
Delivery server
DeskTopBinder Lite110, 111, 126, 146
Destination (delivery)
searching the delivery server's destination list
selecting by entering the registration numbers134
selecting from the delivery server's address book133
selecting from the list133
Destination (e-mail)
entering an e-mail address manually34
registering a directly-entered destination in the address book
registering a recent destination in the address book40
searching an LDAP server36
searching the machine's address book33
selecting by entering the registration numbers32
selecting from the list
selecting from the machine's address book
selecting the destination from recent destinations
Destination (folder)
entering the path of the NetWare server directly73
entering the path to a shared network folder manually 69
entering the path to an FTP server manually72

registering the path to a recent destination in the address book78
registering the path to the selected destination in the address book
searching the machine's address book67
selecting by entering the registration numbers66
selecting from the list65
selecting from the machine's address book65
selecting the destination from recent destinations77
specifying the path by browsing the NetWare server75
specifying the path by browsing the shared network folder 70
Destination (WSD scanner)
searching the destination
selecting the destination91
Destination list26, 31, 61, 65, 87, 127, 133
Destination List Display Priority 1187
Destination List Display Priority 2
Display
confirmation displays
simplified display14
Display panel14
Divide
Divide & Send E-mail191
Dropout Colour
E
E multiple stimution 21

E-mail destination	31
E-mail message	46
entering manually	47
selecting from the list	46
E-mail screen	25, 30
E-mail sender	41
Edit	160
Enabling WSD	84
Encryption	
e-mail	49
PDF	175
Erase Border	160
Expand Group Dest	16
Exposure glass	150, 162
_	

F

File Name	172
sending files	
stored files	103

File type	170
FTP	54, 72
FTP server	54
Full Colour Glossy Photo	154
Full Colour Text / Photo	154
Functions	12

G

General Settings	.187
Grey Scale	154

Н

High Compression PDF	.170, 171
High Compression PDF Level	191
How to read this manual	10

194
192
146

K

Key Colour.....15

L –

11
21, 36
11
171

Μ

Manage / Delete File	
Manual Entry	.26, 34, 61, 127
Manuals for this machine	7
Max. E-mail Size	191
Memory device	119, 121
Menu Protect	194
Mixed Original Sizes	155, 156
Mixed size originals	152, 156
Multi-page	
Multiple pages scanned as one file	ə168

Ν

NCP	.54,	73

NetWare server	55, 73
Network delivery function	202
Network delivery scanner screen	127, 132
Network TWAIN scanner	143
No. of Digits for Single Page Files	192
Notes	10
Notes about file types	171
Notice	9

0

One sided original	164
Original Feed Type	162
Original orientation	162
TWAIN scanner	150
Original Settings	164
Original Type	154
Outline	
delivering scan files	
network TWAIN scanner	
saving on a memory device	119
sending scan files by e-mail	
sending scan files by Scan to Folder	53
storing scan files	
WSD scanner	81

Ρ

Password104
PC Scan Command Standby Time187
PDF170
changing security permissions176
encryption175
security174
Permissions176
Placing originals
Original feed type162
Preparation
network TWAIN scanner144
sending scan files by e-mail22
sending scan files by Scan to Folder55
WSD scanner83
Preview
viewing a file before sending16
Prg. Dest
Print & Delete Scanner Journal188
Print List
Print Scanner Journal

Program as Defaults	
Program Dest	40, 78
Programs	179
changing	
defaults	
deleting	
recalling	
registering	

R

Recall	
Recent	35, 40, 77, 78
Recent Destinations	
Recept. Notice	
Reg. No	
Registering of WSD scanner	85
Registration number	32, 42, 66, 134, 137
Resolution	
Resolution and scan size	195
e-mail	
network delivery	
Scan to Folder	
storing	195
TWAIN scanner	196
Restore Factory Defaults	
Result of sending	

S

S/MIME	49
SADF	165, 168
Saving on a memory device	119, 121
Scan profile	
changing	96
creating	
Scan settings	153, 189
Scan Settings	154
Scan Size	155
Scan to e-mail	21
Scan to Folder	53
Scan to Folder destination	65
Scan to Folder screen	60, 64
Scanner Features	24, 57, 126
accessing	
changing	
quitting	

Scanner functions12
ScanRouter delivery software123, 126
Screen layout
delivering scan files127
list of stored files106
sending scan files by e-mail25
sending scan files by Scan to Folder60
WSD scanner
Search Dest
Search Destination187
Security
e-mail49
encryption (e-mail)49
PDF174
signature50
Security Settings174
Select Stored File106
Send Settings191
Sender (delivery)137
searching the delivery server's destination list138
selecting by entering a registration number137
selecting from the list137
Sender (e-mail)41
searching the machine's address book42
selecting by entering a registration number42
selecting from the list41
Sender Name41, 42, 137, 138
Sending a stored file112
Sending files
WSD scanner (Pull Type)82
WSD scanner (Push Type)82
Sending scan files by e-mail21, 27
Sending scan files by Scan to Folder62
Sending scan files to folders53
Sending scan files with WSD81
Sending scan files with WSD (Pull Type)94
Sending scan files with WSD (Push Type)
Sending the URL by e-mail
Serial number173
Shared folder
creating on Mac OS X
creating on Windows57
Signature
Simplified Display14
Single Page
JJ

SMB	53, 68
SMTP server	21
Specifications	
' Storage function	
Store File	
Store to HDD	
Store to HDD + Send48, 8	
Stored file	0, 142
changing a file name	116
changing a password	
changing a user name	
changing information	
checking	
checking from a client computer	
checking from the list	
deleting	
displaying the list	
displaying with DeskTopBinder Lite	
displaying with Web Image Monitor	
managing	
preview screen	
searching by file name	108
searching by user name	
searching the list	
sending	112
Stored File E-mail Method	192
Storing scan files	99
specifying a file name	103
specifying a password	104
specifying a user name	103
specifying file information	103
Subject4	5, 141
Switch Title	187
Switching screen	
E-mail	
network delivery scanner	132
Scan to Folder	
WSD scanner	90
Symbols	10
, System Settings22, 55, 83, 12	
-,;;;;	.,

T

Template size	155
Text	46, 47
TIFF	170
TIFF / JPEG	170

Trademarks21	0
Transmission function19	9
TWAIN driver146, 148, 19	8
TWAIN scanner143, 148, 150, 15	2
Scan settings15	0
Two sided original16	5

U

Update	87
Update Delivery Server Destination List	
URL	51
User Name	.103
User Tools	
accessing	185
changing	185
quitting	186

V_____

Values of set items	
e-mail	
network delivery	
Scan to Folder	
simultaneous transmission	
storage	
WSD scanner	

W

Wait Time for Next Orig. Exposure Glass	189
Wait Time for Next Original(s) SADF	189
Web Image Monitor25, 110,	111
WIA scanning	204
WSD scanner	81
WSD scanner (Pull Type)	94
WSD scanner (Push Type)	87
WSD scanner destination	91
WSD scanner screen87	, 90

MEMO

MEMO

MEMO





