


PostScript 3 Supplement

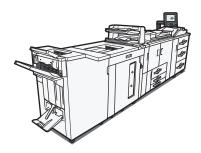

- 1 Windows Configuration
- 2 Mac OS Configuration
- 3 Using PostScript 3
- 4 Printer Utility for Mac
- **5** Appendix

TABLE OF CONTENTS

Manuals for This Machine	6			
Notice	8			
Important	8			
How to Read This Manual	9			
Symbols				
Note	9			
About IP Address	9			
Laws and Regulations.	10			
Legal Prohibition	10			
1. Windows Configuration				
Using the DeskTop Binder-SmartDeviceMonitor for Client Port	11			
Installing DeskTop Binder-SmartDeviceMonitor for Client	11			
Installing the PostScript 3 Printer Driver (Windows 2000 - TCP/IP)	12			
Installing the PostScript 3 Printer Driver (Windows 2000 - IPP)	13			
Installing the PostScript 3 Printer Driver (Windows XP, Windows Server 2003 / 2003 R2 - TC				
Installing the PostScript 3 Printer Driver (Windows XP, Windows Server 2003 / 2003 R2 - IPF	•			
Installing the PostScript 3 Printer Driver (Windows Vista, Windows Server 2008 - TCP/IP)				
Installing the PostScript 3 Printer Driver (Windows Vista, Windows Server 2008 - IPP)				
Changing the Port Settings DeskTop Binder-SmartDeviceMonitor for Client				
Using the Standard TCP/IP Port				
Installing the PostScript 3 Printer Driver (Windows 2000)				
Installing the PostScript 3 Printer Driver (Windows XP, Windows Server 2003 / 2003 R2)				
Installing the PostScript 3 Printer Driver (Windows Vista, Windows Server 2008)				
Using the LPR Port				
Installing the PostScript 3 Printer Driver (Windows 2000)	26			
Installing the PostScript 3 Printer Driver (Windows XP, Windows Server 2003 / 2003 R2)	27			
Installing the PostScript 3 Printer Driver (Windows Vista, Windows Server 2008)	28			
Using as the Windows Network Printer	30			
Installing the PostScript 3 Printer Driver (Windows 2000)	30			
Installing the PostScript 3 Printer Driver (Windows XP, Windows Server 2003 / 2003 R2)				
Installing the PostScript 3 Printer Driver (Windows Vista, Windows Server 2008)	32			
Using the WSD port	33			

Using as the NetWare Print Server / Remote Printer	35		
When using the PostScript 3 Printer Driver	35		
Installing the Printer Driver Using USB	36		
Windows 2000 - USB	36		
Windows XP, Windows Server 2003 / 2003 R2 - USB			
Windows Vista, Windows Server 2008 - USB			
Troubleshooting for using USB	39		
Printing with Parallel Connection	40		
Installing the PostScript 3 printer driver (Windows 2000)			
Installing the PostScript 3 Printer Driver (Windows XP, Windows Server 2003 / 2003 R2)			
Installing the PostScript 3 Printer Driver (Windows Vista, Windows Server 2008)	42		
Printing with Bluetooth Connection.	44		
Supported Profiles	44		
Adding a Bluetooth Printer	44		
If a Message Appears during Installation	47		
Making Option Settings for the Printer			
Setting Up the Printer Driver			
Windows 2000 - Accessing the Printer	50		
Windows XP, Windows Server 2003 / 2003 R2 - Accessing the Printer Properties	51		
Windows Vista, Windows Server 2008 - Accessing the Printer Properties	53		
2. Mac OS Configuration			
Mac OS			
Installing the PostScript 3 Printer Driver and PPD File	57		
Setting Up PPD Files	58		
Setting Up Options	58		
Installing Adobe Type Manager	59		
Installing Screen fonts	59		
Changing to EtherTalk	60		
Mac OS X	61		
Installing the PPD Files	61		
Setting Up the PPD File	61		
Setting Up Options	62		
Using USB Interface	62		

Using Bonjour	63
Changing to EtherTalk	64
Configuring the Printer	65
3. Using PostScript 3	
Setting Up Options	67
Printing a Document	68
Job Type	68
User Code	83
Paper Size	84
Fit to Paper	84
Input Slot	85
Resolution	85
Orientation	86
Rotate by 180 degrees	86
Copies	87
Orientation Override	87
Print Mode	88
Duplex Printing	88
Pages per Sheet	89
Booklet Binding Edge	90
Pages per Sheet Layout	90
Draw Border	91
Collate	91
Paper Type	92
Destination Tray	92
Staple	92
Punch	
Fold Type	93
Z-fold	95
Perfect/Ring Binding	96
Ring Binding Position	97
Perfect Binding Cutting Options	97
Perfect Binding Position	98

Adjust Image Position (Along Binding Edge)	99
Adjust Image Position (Across Binding Edge)	99
Perfect Binding Finishing Size	99
Cut Position Adjustment (Head Edge)	100
Cut Position Adjustment (Tail Edge)	100
Cut Position Adjustment (Fore Edge)	101
Finishing Size (Along Binding Edge)	101
Multi-sheet Fold	101
Perfect Binding Cover Sheet Print	102
Cover Sheet Image Position (Along Binding Edge)	102
Cover Sheet Image Position (Across Binding Edge)	103
Adjust Fore Edge Cut Position	103
Reduce/Enlarge	104
Watermark	104
Watermark Text	104
Watermark Font	105
Watermark Size	105
Watermark Angle	106
Watermark Style	106
Dithering	106
Image Smoothing	107
4. Printer Utility for Mac	
Installing Printer Utility for Mac	
Starting Printer Utility for Mac	110
Mac OS	110
Mac OS X	110
Printer Utility for Mac Functions	111
Downloading PS Fonts	112
Displaying Printer's Fonts	112
Deleting Fonts	113
Initializing the Printer Disk	113
Page Setup	114
Printing Fonts Catalog	114

Printing Fonts Sample	114
Renaming the Printer	114
Restarting the Printer	115
Downloading PostScript Files	115
Selecting the Zone	116
Displaying the Printer Status	117
Launching the Dialogue Console	117
5. Appendix	
Trademarks	
INDEX	121

Manuals for This Machine

Read this manual carefully before you use this machine.

Refer to the manuals that are relevant to what you want to do with the machine.

Important

- Media differ according to manual.
- The printed and electronic versions of a manual have the same contents.
- Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.
- A Web browser must be installed in order to view the html manuals.

About This Machine

Before using the machine, be sure to read the section of this manual entitled Safety Information.

This manual introduces the machine's various functions. It also explains the control panel, preparation procedures for using the machine, how to enter text, how to install the CD-ROMs provided, and how to replace paper, toner, staples, and other consumables.

Trouble Shooting

Provides a guide for resolving common usage-related problems, and explains how to replace paper, toner, and other consumables.

Copy and Document Server Reference

Explains Copier and Document Server functions and operations. Also refer to this manual for explanations on how to place originals.

Printer Reference

Explains Printer functions and operations.

Scanner Reference

Explains Scanner functions and operations.

Network and System Settings Guide

Explains how to connect the machine to a network, configure and operate the machine in a network environment, and use the software provided. Also explains how to change User Tools settings and how to register information in the Address Book.

Security Reference

This manual is for administrators of the machine. It explains security functions that you can use to prevent unauthorized use of the machine, data tampering, or information leakage. For enhanced security, we recommend the following settings:

- Install the Device Certificate.
- Enable SSL (Secure Sockets Layer) Encryption.
- Change the user name and password of the administrator using Web Image Monitor.

For details, see "Setting Up the Machine", Security Reference.

Be sure to read this manual when setting the enhanced security functions, or user and administrator authentication.

PostScript 3 Supplement

Explains how to set up and use PostScript 3.

Other manuals

- UNIX Supplement
- Quick Reference Copy Guide
- Quick Reference Printer Guide
- Quick Reference Scanner Guide
- Manuals for DeskTopBinder Lite
 - DeskTopBinder Lite Setup Guide
 - DeskTopBinder Introduction Guide
 - Auto Document Link Guide



- Manuals provided are specific to machine types.
- For "UNIX Supplement", please visit our Web site or consult an authorized dealer. This manual includes descriptions of functions and settings that might not be available on this machine.

Notice

Important

In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

For good copy quality, the supplier recommends that you use genuine toner from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

How to Read This Manual

Symbols

This manual uses the following symbols:

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

UNote

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

■ Reference

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[]

Indicates the names of keys that appear on the machine's display panel.

[]

Indicates the names of keys on the machine's control panel.

Note

Contents of this manual are subject to change without prior notice.

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Depending on which country you are in, certain units may be optional. For details, please contact your local dealer.

About IP Address

In this manual, "IP address" covers both IPv4 and IPv6 environments. Read the instructions that are relevant to the environment you are using.

Laws and Regulations

Legal Prohibition

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

This machine is equipped with a function that prevents making counterfeit bank bills. Due to this function the original images similar to bank bills may not be copied properly.

1. Windows Configuration

Using the DeskTop Binder-SmartDeviceMonitor for Client Port

Installing DeskTop Binder-SmartDeviceMonitor for Client

Mportant (

- To install DeskTop Binder-SmartDeviceMonitor for Client under Windows 2000 / XP Professional / Vista and Windows Server 2003 / 2003 R2 / 2008, you must have an account that has Manage Printers permission. Log on as an Administrator.
- Install DeskTop Binder-SmartDeviceMonitor for Client before installing the printer driver when using the DeskTop Binder-SmartDeviceMonitor for Client port.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

- 3. Select an interface language, and then click [OK].
- 4. Click [DeskTopBinder SmartDeviceMonitor for Client].
- Select an interface language, and then click [Next >].
- The message to quit all other applications appears. Quit all applications, and then click [Next
].
- The software license agreement appears in the [License Agreement] dialog box. After reading through its contents, click [Yes].
- 8. Click [Full install] or [Custom install].

[Full install] installs all required applications: DeskTopBinder Lite and SmartDeviceMonitor for Client.

[Custom install] installs selected applications.

- 9. Follow the instructions on the display and click [Next >] to proceed to the next step.
- After the installation is completed, select one of the options to restart the computer either now or later, and click [Complete].

Restart the computer to complete installation.



- Depending on your computer's operating system, the [AutoPlay] dialog box may appear. If this happens, click [Run SETUP.EXE]. If the [User Account Control] dialog box appears, click [Continue] to allow the auto play program to run.
- To stop installation of the selected software, click [Cancel] before installation is complete.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

Installing the PostScript 3 Printer Driver (Windows 2000 - TCP/IP)



- Installing this printer driver requires Administrators permission. Log on using an account that has Administrators permission.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The printer driver with the selected language will be installed. The English printer driver is installed when the following language is selected: Suomi, Magyar, Cestina, Polski, Portugues, Russian, Catala, Turkce.

4. Click [PostScript 3 Printer Driver].

Add Printer Wizard starts.

- 5. Click [Next>].
- 6. Click [Local printer], and then click [Next >].
- 7. Click [Create a new port:].
- 8. Click [DeskTop Binder SmartDeviceMonitor], and then click [Next >].
- 9. Click [TCP/IP], and then click [Search].

A list of printers using TCP/IP appears.

10. Select the printer you want to use, and then click [OK].

Only printers that respond to a broadcast from the computer appear. To use a machine not listed here, click [Specify Address], and then enter the IP address or host name of the machine.

- Check that the name of the machine whose driver you want to install is selected, and then click [Next >].
- 12. Change the printer name if you want, and then click [Next >].

Select the [Yes] check box to configure the printer as default.

- 13. Specify whether or not to share the printer, and then click [Next >].
- 14. Specify whether or not to print a test page, and then click [Next >].
- 15. Click [Finish].

The printer driver installation starts.



- A user code can be set after the printer driver installation. For information about user code, see the
 printer driver Help.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

Installing the PostScript 3 Printer Driver (Windows 2000 - IPP)

Mportant !

- Installing this printer driver requires Administrators permission. Log on using an account that has Administrators permission.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The printer driver with the selected language will be installed. The English printer driver is installed when the following language is selected: Suomi, Magyar, Cestina, Polski, Portugues, Russian, Catala, Turkce.

4. Click [PostScript 3 Printer Driver].

Add Printer Wizard starts.

- Click [Next>].
- 6. Click [Local printer attached to this computer], and then click [Next >].
- 7. Click [Create a new port:].
- 8. Click [DeskTop Binder SmartDeviceMonitor], and then click [Next >].
- 9. Click [IPP].
- In the [Printer URL] box, enter "http://(machine's IP address or host name)/printer" as the printer's address.

If the server authentication is issued, to enable SSL (a protocol for encrypted communication), enter "https://(machine's IP address or host name)/printer" (Internet Explorer 5.01, or a higher version must be installed).

(example IP address: 192.168.15.16)

П

http://192.168.15.16/printer

https://192.168.15.16/printer

You can enter "http://machine's IP address or host name/ipp" as the printer's address.

If the address is "192.168.001.010", you must enter it as "192.168.1.10" to connect to the machine.

11. Enter a name for identifying the printer in [IPP Port Name]. Use a name different from the name of any existing port.

If a name is not specified here, the address entered in the [Printer URL] box becomes the IPP port

12. Click [Detailed Settings] to configure proxy server, the IPP user name and other settings. Specify the necessary settings, and then click [OK].

For information about the settings, see DeskTop Binder-SmartDeviceMonitor for Client Help.

- 13. Click [OK].
- 14. Check that the name of the machine whose driver you want to install is selected, and then click [Next >].
- 15. Change the printer name if you want, and then click [Next >].

Select the [Yes] check box to configure the printer as default.

- 16. Specify whether or not to share the printer, and then click [Next >].
- 17. Specify whether or not to print a test page, and then click [Next >].
- 18. Click [Finish].

The printer driver installation starts.



- A user code can be set after the printer driver installation. For information about user code, see the
 printer driver Help.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

Installing the PostScript 3 Printer Driver (Windows XP, Windows Server 2003 / 2003 R2 - TCP/IP)



- Installing this printer driver requires Administrators permission. Log on using an account that has Administrators permission.
- You can install the printer driver from the CD-ROM provided with this machine or download it from the supplier's Web site.

- If your operating system is Windows XP Professional x64, Windows Server 2003 / 2003 R2 x64, you must download the printer driver from the manufacturer's Web site. Select this printer and the operating system you are using, and then download it.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The printer driver with the selected language will be installed. The English printer driver is installed when the following language is selected: Suomi, Magyar, Cestina, Polski, Portugues, Russian, Catala. Turkce.

4. Click [PostScript 3 Printer Driver].

Add Printer Wizard starts.

- 5. Click [Next>].
- 6. Click [Local printer attached to this computer.], and then click [Next >].
- 7. Click [Create a new port:].
- 8. Click [DeskTop Binder SmartDeviceMonitor], and then click [Next >].
- 9. Click [TCP/IP], and then click [Search].

A list of printers using TCP/IP appears.

10. Select the printer you want to use, and then click [OK].

Only printers that respond to a broadcast from the computer appear. To use a machine not listed here, click [Specify Address], and then enter the IP address or host name of the machine.

- Check that the name of the machine whose driver you want to install is selected, and then click [Next >].
- 12. Change the printer name if you want, and then click [Next >].

Select the [Yes] check box to configure the printer as default.

- 13. Specify whether or not to share the printer, and then click [Next >].
- 14. Specify whether or not to print a test page, and then click [Next >].
- 15. Click [Finish].

The printer driver installation starts.

UNote

- A user code can be set after the printer driver installation. For information about user code, see the
 printer driver Help.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

1

Installing the PostScript 3 Printer Driver (Windows XP, Windows Server 2003 / 2003 R2 - IPP)

Important

- Installing this printer driver requires Administrators permission. Log on using an account that has Administrators permission.
- You can install the printer driver from the CD-ROM provided with this machine or download it from the supplier's Web site.
- If your operating system is Windows XP Professional x64, Windows Server 2003 / 2003 R2 x64, you must download the printer driver from the manufacturer's Web site. Select this printer and the operating system you are using, and then download it.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The printer driver with the selected language will be installed. The English printer driver is installed when the following language is selected: Suomi, Magyar, Cestina, Polski, Portugues, Russian, Catala, Turkce.

4. Click [PostScript 3 Printer Driver].

Add Printer Wizard starts.

- 5. Click [Next >].
- 6. Click [Local printer attached to this computer.], and then click [Next >].
- 7. Click [Create a new port:].
- 8. Click [DeskTop Binder SmartDeviceMonitor], and then click [Next >].
- 9. Click [IPP].
- In the [Printer URL] box, enter "http://(machine's IP address or host name)/printer" as the printer's address.

If the server authentication is issued, to enable SSL (a protocol for encrypted communication), enter "https://(machine's IP address or host name)/printer" (Internet Explorer 5.01, or a higher version must be installed).

(example IP address: 192.168.15.16)

http://192.168.15.16/printer

https://192.168.15.16/printer

You can enter "http://machine's IP address or host name/ipp" as the printer's address.

If the address is "192.168.001.010", you must enter it as "192.168.1.10" to connect to the machine.

 Enter a name for identifying the printer in [IPP Port Name]. Use a name different from the one of any existing port.

If a name is not specified here, the address entered in the [Printer URL] box becomes the IPP port name.

12. Click [Detailed Settings] to make necessary settings.

For information about the settings, see DeskTop Binder-SmartDeviceMonitor for Client Help.

- 13. Click [OK].
- Check that the name of the printer driver you want to install is selected, and then click [Next
].
- Change the name of the printer if you want, and then click [Next>].

Select the [Yes] check box to configure the printer as default.

- 16. Specify whether or not to share the printer, and then click [Next >].
- 17. Specify whether or not to print a test page, and then click [Next >].
- 18. Click [Finish].

The printer driver installation starts.



- A user code can be set after the printer driver installation. For information about user code, see the printer driver Help.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

Installing the PostScript 3 Printer Driver (Windows Vista, Windows Server 2008 - TCP/IP)

- Installing this printer driver requires Administrators permission. Log on using an account that has Administrators permission.
- You can install the printer driver from the CD-ROM provided with this machine or download it from the supplier's Web site.
- f your operating system is Windows Vista x64, Windows Server 2008 x64, you must download the
 printer driver from the manufacturer's Web site. Select this printer and the operating system you are
 using, and then download it.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

1

3. Select an interface language, and then click [OK].

The printer driver with the selected language will be installed. The English printer driver is installed when the following language is selected: Suomi, Magyar, Cestina, Polski, Portugues, Russian, Catala, Turkce.

4. Click [PostScript 3 Printer Driver].

Add Printer Wizard starts.

- 5. Click [Local printer attached to this computer.].
- 6. Click [Create a new port:].
- 7. Click [DeskTop Binder SmartDeviceMonitor], and then click [Next >].
- 8. Click [TCP/IP], and then click [Search].

A list of printers using TCP/IP appears.

9. Select the printer you want to use, and then click [OK].

Only printers that respond to a broadcast from the computer appear. To use a machine not listed here, click [Specify Address], and then enter the IP address or host name of the machine.

- Check that the name of the machine whose driver you want to install is selected, and then click [Next >].
- 11. Change the printer name if you want, and then click [Next >].

Select the [Yes] check box to configure the printer as default.

- 12. Specify whether or not to share the printer, and then click [Next >].
- 13. Specify whether or not to print a test page, and then click [Finish].

The printer driver installation starts.



- Depending on your computer's operating system, the [AutoPlay] dialog box may appear. If this
 happens, click [Run SETUP.EXE]. If the [User Account Control] dialog box appears, click [Continue]
 to allow the auto play program to run.
- A user code can be set after the printer driver installation. For information about user code, see the printer driver Help.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

Installing the PostScript 3 Printer Driver (Windows Vista, Windows Server 2008 - IPP)



 Installing this printer driver requires Administrators permission. Log on using an account that has Administrators permission.

- You can install the printer driver from the CD-ROM provided with this machine or download it from the supplier's Web site.
- If your operating system is Windows Vista x64, Windows Server 2008 x64, you must download the
 printer driver from the manufacturer's Web site. Select this printer and the operating system you are
 using, and then download it.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The printer driver with the selected language will be installed. The English printer driver is installed when the following language is selected: Suomi, Magyar, Cestina, Polski, Portugues, Russian, Catala, Turkce.

4. Click [PostScript 3 Printer Driver].

Add Printer Wizard starts.

- 5. Click [Local printer attached to this computer.].
- 6. Click [Create a new port:].
- 7. Click [DeskTop Binder SmartDeviceMonitor], and then click [Next >].
- 8. Click [IPP].
- In the [Printer URL] box, enter "http://(machine's IP address or host name)/printer" as the printer's address.

If the server authentication is issued, to enable SSL (a protocol for encrypted communication), enter "https://(machine's IP address or host name)/printer" (Internet Explorer 5.01, or a higher version must be installed).

(example IP address: 192.168.15.16)

http://192.168.15.16/printer

https://192.168.15.16/printer

You can enter "http://machine's IP address or host name/ipp" as the printer's address.

If the address is "192.168.001.010", you must enter it as "192.168.1.10" to connect to the machine.

 Enter a name for identifying the printer in [IPP Port Name]. Use a name different from the one of any existing port.

If a name is not specified here, the address entered in the [Printer URL] box becomes the IPP port name.

11. Click [Detailed Settings] to make necessary settings.

For information about the settings, see DeskTop Binder-SmartDeviceMonitor for Client Help.

12. Click [OK].

- 1
- Check that the name of the printer driver you want to install is selected, and then click [Next
].
- 14. Change the name of the printer if you want, and then click [Next >].
 Select the [Yes] check box to configure the printer as default.
- 15. Specify whether or not to share the printer, and then click [Next >].
- 16. Specify whether or not to print a test page, and then click [Finish].
 The printer driver installation starts.



- Depending on your computer's operating system, the [AutoPlay] dialog box may appear. If this happens, click [Run SETUP.EXE]. If the [User Account Control] dialog box appears, click [Continue] to allow the auto play program to run.
- user code can be set after the printer driver installation. For information about user code, see the printer driver Help.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

Changing the Port Settings DeskTop Binder-SmartDeviceMonitor for Client

Follow the procedure below to change the DeskTop Binder-SmartDeviceMonitor for Client settings, such as TCP/IP timeout, recovery/parallel printing, and printer groups.

Windows 2000:

- 1. Open the [Printers] window from the [Start] menu.
- Click the icon of the printer you want to use. On the [File] menu, click [Properties].
 The printer properties appear.
- On the [Ports] tab, click [Configure Port].
 The [Port Configuration] dialog box appears.

Windows XP, Windows Server 2003 / 2003 R2:

- 1. Open the [Printers and Faxes] window from the [Start] menu.
 - The [Printers and Faxes] window appears.
- Click the icon of the printer you want to use. On the [File] menu, click [Properties].
 The printer properties appear.

3. Click the [Port] tab, and then click [Configure Port].

The [Port Configuration] dialog box appears.

- For TCP/IP, timeout setting can be configured.
- · User, proxy, and timeout settings can be configured for IPP.

Reference

For information about these settings, see DeskTop Binder-SmartDevice-Monitor for Client Help.

Windows Vista, Windows Server 2008:

1. Open the [Printers] window from [Control Panel] on the [Start] menu.

The [Printers] window appears.

2. Right - click the icon of the printer you want to use, and then click the [Properties].

The printer properties appear.

3. Click the [Port] tab, and then click [Configure Port].

The [Port Configuration] dialog box appears.

- For TCP/IP, timeout setting can be configured.
- User, proxy, and timeout settings can be configured for IPP.

Reference

For information about these settings, see DeskTop Binder-SmartDevice-Monitor for Client Help.

How to enable Recovery/Parallel Printing

If no settings on the [Recovery/Parallel Printing] tab are available, follow the procedure below.

- Start DeskTop Binder-SmartDeviceMonitor for Client, and then right-click the DeskTop Binder-SmartDeviceMonitor for Client icon on the taskbar.
- 2. Click [Extended Features Settings], and then select the [Set Recovery/Parallel Printing for each port] check box.
- 3. Click [OK] to close the [Extended Features Settings] dialog box.

Using the Standard TCP/IP Port

Installing the PostScript 3 Printer Driver (Windows 2000)

- Installing this printer driver requires Administrators permission. Log on using an account that has Administrators permission.
- In an IPv6 environment, you cannot use the Standard TCP/IP Port. Use the DeskTop Binder-SmartDeviceMonitor port.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The printer driver with the selected language will be installed. The English printer driver is installed when the following language is selected: Suomi, Magyar, Cestina, Polski, Portugues, Russian, Catala, Turkce.

4. Click [PostScript 3 Printer Driver].

Add Printer Wizard starts.

- 5. Click [Next>].
- 6. Click [Local printer], and then click [Next>].
- 7. Click [Create a new port:].
- 8. Click [Standard TCP/IP Port], and then click [Next >].
- 9. Click [Next >] in the [Add Standard TCP/IP Printer Port Wizard] dialog box.
- 10. Enter the printer name or IP address in the [Printer Name or IP Address] box.

The [Port Name] text box automatically obtains a port name. Change this name if necessary. When screen for Device selection appears, select "RICOH NetworkPrinter Driver C Model".

- 11. Click [Next>].
- 12. Click [Finish] in the [Add Standard TCP/IP Printer Port Wizard-dialog box.
- Check that the name of the machine whose driver you want to install is selected, and then click [Next >].
- 14. Change the printer name if you want, and then click [Next >].

Select the [Yes] check box to configure the printer as default.

- 15. Click [Next >].
- 16. Specify whether or not to share the printer, and then click [Next >].

1

- 17. Specify whether or not to print a test page, and then click [Next >].
- 18. Click [Finish].

The printer driver installation starts.



- A user code can be set after the printer driver installation. For information about user code, see the
 printer driver Help.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

Installing the PostScript 3 Printer Driver (Windows XP, Windows Server 2003 / 2003 R2)

Important

- Installing this printer driver requires Administrators permission. Log on using an account that has Administrators permission.
- In an IPv6 environment, you cannot use the Standard TCP/IP Port. Use the DeskTop Binder-SmartDeviceMonitor port.
- You can install the printer driver from the CD-ROM provided with this machine or download it from the supplier's Web site.
- If your operating system is Windows XP Professional x64, Windows Server 2003 / 2003 R2 x64, you must download the printer driver from the manufacturer's Web site. Select this printer and the operating system you are using, and then download it.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The printer driver with the selected language will be installed. The English printer driver is installed when the following language is selected: Suomi, Magyar, Cestina, Polski, Portugues, Russian, Catala, Turkce.

4. Click [PostScript 3 Printer Driver].

Add Printer Wizard starts.

- 5. Click [Next>].
- 6. Click [Local printer attached to this printer], and then click [Next >].
- 7. Click [Create a new port:].
- 8. Click [Standard TCP/IP Port] in [Create a new port], and then click [Next >].

- 9. Click [Next >] in the [Add Standard TCP/IP Printer Port Wizard] dialog box.
- 10. Enter the printer name or IP address in the [Printer Name or IP Address] box.
 The [Port Name] text box automatically obtains a port name. Change this name if necessary.
 When screen for Device selection appears, select "RICOH NetworkPrinter Driver C Model".
- 11. Click [Next>].
- 12. Click [Finish] in the [Add Standard TCP/IP Printer Port Wizard] dialog box.
- Check that the name of the machine whose driver you want to install is selected, and then click [Next >].
- 14. Change the printer name if you want, and then click [Next >].
 Select the [Yes] check box to configure the printer as default.
- 15. Specify whether or not to share the printer, and then click [Next >].
- 16. Specify whether or not to print a test page, and then click [Next>].
- 17. Click [Finish].
 The printer driver installation starts.



- A user code can be set after the printer driver installation. For information about user code, see the
 printer driver Help.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

Installing the PostScript 3 Printer Driver (Windows Vista, Windows Server 2008)

Important

- Installing this printer driver requires Administrators permission. Log on using an account that has Administrators permission.
- In an IPv6 environment, you cannot use the Standard TCP/IP Port. Use the DeskTop Binder-SmartDeviceMonitor port.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The printer driver with the selected language will be installed. The English printer driver is installed when the following language is selected: Suomi, Magyar, Cestina, Polski, Portugues, Russian, Catala, Turkce.

4. Click [PostScript 3 Printer Driver].

Add Printer Wizard starts.

- 5. Click [Local printer attached to this printer].
- 6. Click [Create a new port:].
- 7. Click [Standard TCP/IP Port] in [Create a new port], and then click [Next >].
- 8. Click [Next >] in the [Add Standard TCP/IP Printer Port Wizard] dialog box.
- 9. Enter the printer name or IP address in the [Printer Name or IP Address] box.

The [Port Name] text box automatically obtains a port name. Change this name if necessary. When screen for Device selection appears, select "RICOH NetworkPrinter Driver C Model".

- 10. Click [Next >].
- 11. Click [Finish] in the [Add Standard TCP/IP Printer Port Wizard] dialog box.
- 12. Check that the name of the machine whose driver you want to install is selected, and then click [Next >].
- 13. Change the printer name if you want, and then click [Next >].
 Select the [Yes] check box to configure the printer as default.
- 14. Specify whether or not to share the printer, and then click [Next >].
- 15. Specify whether or not to print a test page, and then click [Finish].
 The printer driver installation starts.



- Depending on your computer's operating system, the [AutoPlay] dialog box may appear. If this happens, click [Run SETUP.EXE]. If the [User Account Control] dialog box appears, click [Continue] to allow the auto play program to run.
- A user code can be set after the printer driver installation. For information about user code, see the printer driver Help.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

Using the LPR Port

Installing the PostScript 3 Printer Driver (Windows 2000)



- Installing this printer driver requires Administrators permission. Log on using an account that has Administrators permission.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The printer driver with the selected language will be installed. The English printer driver is installed when the following language is selected: Suomi, Magyar, Cestina, Polski, Portugues, Russian, Catala, Turkce,

4. Click [PostScript 3 Printer Driver].

Add Printer Wizard starts.

- 5. Click [Next>].
- 6. Click [Local printer], and then click [Next >].
- 7. Click [Create a new port:].
- 8. Click [LPR Port], and then click [Next>].
- 9. Enter the printer's IP address in the [Name or address of server providing Ipd] box.
- 10. Enter "Ip" in the [Name of printer or print queue on that server] box, and then click [OK].
- Check that the name of the machine whose driver you want to install is selected, and then click [Next >].
- 12. Change the printer name if you want, and then click [Next >].

Select the [Yes] check box to configure the printer as default.

- 13. Specify whether or not to share the printer, and then click [Next >].
- 14. Specify whether or not to print a test page, and then click [Next >].
- 15. Click [Finish].

The printer driver installation starts.



A user code can be set after the printer driver installation. For information about user code, see the
printer driver Help.

 Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

Installing the PostScript 3 Printer Driver (Windows XP, Windows Server 2003 / 2003 R2)

Mportant !

- Installing this printer driver requires Administrators permission. Log on using an account that has Administrators permission.
- In an IPv6 environment, you cannot use the LPR Port. Use the DeskTop Binder-SmartDeviceMonitor port.
- You can install the printer driver from the CD-ROM provided with this machine or download it from the supplier's Web site.
- If your operating system is Windows XP Professional x64, Windows Server 2003 / 2003 R2 x64, you must download the printer driver from the manufacturer's Web site. Select this printer and the operating system you are using, and then download it.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The printer driver with the selected language will be installed. The English printer driver is installed when the following language is selected: Suomi, Magyar, Cestina, Polski, Portugues, Russian, Catala, Turkce.

4. Click [PostScript 3 Printer Driver].

Add Printer Wizard starts.

- 5. Select [My Computer], and then click [Next >].
- 6. Click [Local Printer attached to this computer.], and then click [Next >].
- 7. Click [Create a new port:].
- 8. Click [LPR Port] in [Create a new port], and then click [Next >].
- 9. Enter the printer's IP address in the [Name or address of server providing [pd] box.
- 10. Enter "Ip" in the [Name of printer or print queue on that server box], and then click [OK].
- 11. Check that the name of the machine whose driver you want to install is selected, and then click [Next >].
- 12. Change the printer name if you want, and then click [Next >].

Select the [Yes] check box to configure the printer as default.

- 1
- 13. Specify whether or not to share the printer, and then click [Next >].
- 14. Specify whether or not to print a test page, and then click [Next >].
- 15. Click [Finish].

The printer driver installation starts.



- A user code can be set after the printer driver installation. For information about user code, see the
 printer driver Help.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

Installing the PostScript 3 Printer Driver (Windows Vista, Windows Server 2008)

Mportant (

- Installing this printer driver requires Administrators permission. Log on using an account that has Administrators permission.
- In an IPv6 environment, you cannot use the LPR Port. Use the DeskTop Binder-SmartDeviceMonitor port.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The printer driver with the selected language will be installed. The English printer driver is installed when the following language is selected: Suomi, Magyar, Cestina, Polski, Portugues, Russian, Catala, Turkce.

4. Click [PostScript 3 Printer Driver].

Add Printer Wizard starts.

- 5. Click [Local Printer attached to this computer.].
- 6. Click [Create a new port:].
- 7. Click [LPR Port] in [Create a new port], and then click [Next >].
- 8. Enter the printer's IP address in the [Name or address of server providing lpd] box.
- 9. Enter "Ip" in the [Name of printer or print queue on that server box], and then click [OK].
- Check that the name of the machine whose driver you want to install is selected, and then click [Next >].
- 11. Change the printer name if you want, and then click [Next >].

 Select the [Yes] check box to configure the printer as default.

12. Specify whether or not to print a test page, and then click [Finish].

The printer driver installation starts.



- Depending on your computer's operating system, the [AutoPlay] dialog box may appear. If this happens, click [Run SETUP.EXE]. If the [User Account Control] dialog box appears, click [Continue] to allow the auto play program to run.
- A user code can be set after the printer driver installation. For information about user code, see the printer driver Help.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

Using as the Windows Network Printer

Installing the PostScript 3 Printer Driver (Windows 2000)

Important

- Installing a printer driver requires Administrators permission. Log on using an account that has Administrators permission.
- If you print from a print server connected to the printer using the DeskTop Binder-SmartDeviceMonitor port, the client cannot use Recovery Printing and Parallel Printing.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The printer driver with the selected language will be installed. The English printer driver is installed when the following language is selected: Suomi, Magyar, Cestina, Polski, Portugues, Russian, Catala, Turkce.

4. Click [PostScript 3 Printer Driver].

Add Printer Wizard starts.

- 5. Click [Next>].
- 6. Click [Network printer], and then click [Next >].
- 7. Select the location method from the [Locate Your Printer] screen, and then click [Next >].
- 8. Double-click the computer name you want to use as a print server in the [Shared printers] window.
- 9. Select the printer you want to use, and then click [Next >].
- 10. The printer driver installation starts.
- 11. Click [Next>].

Select the [Yes] check box to configure the printer as default.

12. Click [Finish].

Restart the computer to complete installation.



- A user code can be set after the printer driver installation. For information about user code, see the
 printer driver Help.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

1

Installing the PostScript 3 Printer Driver (Windows XP, Windows Server 2003 / 2003 R2)

Important

- Installing this printer driver requires Administrators permission. Log on using an account that has Administrators permission.
- If you print from a print server connected to the printer using the DeskTop Binder-SmartDeviceMonitor port, the client cannot use Recovery Printing and Parallel Printing.
- If you print with a Windows XP or Windows Server 2003 / 2003 R2 print server, DeskTop Binder-SmartDeviceMonitor notification functions may not be possible for the client.
- You can install the printer driver from the CD-ROM provided with this machine or download it from the supplier's Web site.
- If your operating system is Windows XP Professional x64, Windows Server 2003 / 2003 R2 x64, you must download the printer driver from the manufacturer's Web site. Select this printer and the operating system you are using, and then download it.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The printer driver with the selected language will be installed. The English printer driver is installed when the following language is selected: Suomi, Magyar, Cestina, Polski, Portugues, Russian, Catala, Turkce.

4. Click [PostScript 3 Printer Driver].

Add Printer Wizard starts.

- 5. Click [Next>].
- 6. Click [A network printer, or a printer attached to another computer] and then click [Next>].
- 7. Select [Browse for a printer], and then click [Next >].
- 8. Double-click the computer name you want to use as a print server in the [Shared printers] window.
- 9. Select the printer you want to use, and then click [Next >].
- 10. The printer driver installation starts.
- 11. Click [Next >].

Select the [Yes] check box to configure the printer as default.

12. Click [Finish].

Restart the computer to complete installation.



- A user code can be set after the printer driver installation. For information about user code, see the printer driver Help.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

Installing the PostScript 3 Printer Driver (Windows Vista, Windows Server 2008)

Mportant !

- Installing this printer driver requires Administrators permission. Log on using an account that has Administrators permission.
- If you print from a print server connected to the printer using the DeskTop Binder-SmartDeviceMonitor port, the client cannot use Recovery Printing and Parallel Printing.
- If you print with a Windows Vista or Windows Server 2008 print server, DeskTop Binder-SmartDeviceMonitor notification functions may not be possible for the client.
- You can install the printer driver from the CD-ROM provided with this machine or download it from the supplier's Web site.
- If your operating system is Windows Vista x64, Windows Server 2008 x64, you must download the
 printer driver from the manufacturer's Web site. Select this printer and the operating system you are
 using, and then download it.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The printer driver with the selected language will be installed. The English printer driver is installed when the following language is selected: Suomi, Magyar, Cestina, Polski, Portugues, Russian, Catala, Turkce.

4. Click [PostScript 3 Printer Driver].

Add Printer Wizard starts.

- 5. Click [A network printer, or a printer attached to another computer].
- 6. Select [Browse for a printer], and then click [Next >].
- 7. Double-click the computer name you want to use as a print server in the [Shared printers] window.
- 8. Select the printer you want to use, and then click [Next >].
- 9. The printer driver installation starts.

10. Click [Next >].

Select the [Yes] check box to configure the printer as default.

- 11. Specify whether or not to share the printer, and then click [Next >].
- 12. Click [Finish].

Restart the computer to complete installation.



- Depending on your computer's operating system, the [AutoPlay] dialog box may appear. If this
 happens, click [Run SETUP.EXE]. If the [User Account Control] dialog box appears, click [Continue]
 to allow the auto play program to run.
- A user code can be set after the printer driver installation. For information about user code, see the
 printer driver Help.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

Using the WSD port

This section explains installation when using the WSD port.

Important

- The WSD Port can be used under Windows Vista or Windows Server 2008.
- To install under Windows Vista or Windows Server 2008, you must have an account that has Manage Printers permission. Log on as an Administrator.
- If the machine is connected using the WSD port, bi-directional communication is not possible. For details about bi-directional communication, see "Making Option Settings for the Printer".
- You can connect to the machine only if both the machine and computer are on the same network segment, or "Network discovery" is enabled. For details, see Windows Help.
- 1. Quit all applications currently running.
- 2. Click [Start], and then click [Network].

The [Network] window appears, and the device search begins automatically.

3. Using as the NetWare Print Server / Remote Printer

If the [User Account Control] dialog box appears, click [Continue].

The [Found New Hardware] dialog box appears.

4. Click [Locate and install driver software (Recommended)].

If the [User Account Control] dialog box appears, click [Continue].

The [Found New Hardware] window appears.

Click [Don't search online].

- 6. Click [Browse my computer for driver software (advanced)].
- 7. Insert the provided CD-ROM into the computer's CD-ROM drive.
 If the [AutoPlay] dialog box appears, click the [close] button and then proceed to step 8.
- 8. Click [Browse...], and then specify a location for the printer driver.

 If the CD-ROM drive letter is D, the printer driver's source files are stored in "D:\DRIVERS\PS\((Language)\XP_VISTA\DISK1".
- 9. Click [Next].

If the [Windows can't verify the publisher of this driver software] message appears, click [Install this driver software anyway].

10. Click [Close].

If installation is successful, the icon of the printer connected to the "WSD" port is added to the [Printers] window.



- Depending on your computer's operating system, the [AutoPlay] dialog box may appear. If this happens, click [Run SETUP.EXE]. If the [User Account Control] dialog box appears, click [Continue] to allow the auto play program to run.
- The port name that follows "WSD" uses random character strings. It cannot be changed freely.
- To stop the installation, click [Cancel] before the installation is complete. When re-installing the WSD
 Port, right-click the machine's icon in the [Network] window, and then click [Uninstall].

Reference

• p.49 "Making Option Settings for the Printer"

Using as the NetWare Print Server / Remote Printer

When using the PostScript 3 Printer Driver

• In an IPv6 environment, Netware servers cannot be used.

Follow the procedure below to set up the PostScript 3 printer driver.

- 1. In the [Printers] or [Printers and Faxes] window, open the printer properties.
- 2. Click the [Device Settings] tab.
- 3. Select a [No] on the [Send CTRL+D before job] and [Send CTRL+D after job], and then click [OK].
- 4. Click [OK] to close the printer properties dialog box.

Installing the Printer Driver Using USB

This section explains how to install printer drivers using USB.

Mportant !

- Make sure that machine is connected to the computer's USB ports using the USB interface cable.
- Before installing, check that only the operating system is running on the computer and no print jobs are in progress.
- The printer drivers can be installed from the CD-ROM provided with this machine.
- You can install the printer driver from the CD-ROM provided with this machine or download it from the supplier's Web site.
- If your operating system is Windows XP Professional x64, Windows Vista x64, or Windows Server 2003 / 2003 R2 / 2008 x64, you must download the printer driver from the manufacturer's Web site. Select this printer and the operating system you are using, and then download it.

Windows 2000 - USB



 Installing a printer driver requires Administrators permission. Log on using an account that has Administrators permission.

If the printer driver has already been installed, plug and play is enabled, and the icon of the printer connected to the "USB" port is added to the [Printers] window.

If the printer driver is not installed, follow the plug-and-play instructions of the printer to install it from the CD-ROM provided.

- 1. Connect the machine to the computer using the USB cable.
 - Connect the USB cable firmly.
- 2. In the Found New Hardware Wizard display, click [Search for a suitable driver for my device [recommended]], and then click [Next >].
- 3. Select the [Specify location] check box, and then click [Next >].
- 4. Insert the CD-ROM into the CD-ROM drive.
- 5. When Auto Run starts, click [Exit].

To disable Auto Run, press the left [Shift] key when inserting the CD-ROM into the drive and keep it pressed until the computer finishes reading from the CD-ROM.

- 6. Specify the location where the source files of the printer driver is stored.
 - If the CD-ROM drive is D, the source files of the printer driver are stored in the following location:
 - PostScript 3

D:\DRIVERS\PS\XP_VISTA\(Language)\DISK1

- Check the printer driver location, and then click [OK].
- 8. Click [Next>].
- 9. Click [Finish].

If the printer driver has already been installed, plug and play is enabled, and the icon of the printer connected to the "USB001" port is added to the [Printers] window.



- When Auto Run starts, click [Exit].
- To disable Auto Run, press the left [Shift] key when inserting the CD-ROM into the drive and keep it
 pressed until the computer finishes reading from the CD-ROM.
- The number after "USB" varies depending on the number of printers connected.

Windows XP, Windows Server 2003 / 2003 R2 - USB

• Installing a printer driver requires Administrators permission. Log on using an account that has Administrators permission.

If the printer driver has already been installed, plug and play is enabled, and the icon of the printer connected to the "USB" port is added to the [Printers] window.

The printer drivers can be installed from the CD-ROM provided with this machine.

If the printer driver is not installed, follow the plug-and-play instructions of the printer to install it from the CD-ROM provided.

1. Connect the machine to the computer using the USB cable.

Connect the USB cable firmly.

- In the Found New Hardware Wizard display, click Install the software automatically (Recommended), and then click [Next >].
- Insert the CD-ROM into the CD-ROM drive.

If Auto Run starts, click [Cancel], and then [Exit].

To disable Auto Run, press the left [Shift] key when inserting the CD-ROM into the drive and keep it pressed until the computer finishes reading from the CD-ROM.

4. Select the [Include this location in the search] check box under [Search for the best driver in these location], and then click [Browse] to select the printer driver location.

If the CD-ROM drive is D, the source files of the printer driver are stored in the following location:

PostScript 3
 D:\DRIVERS\PS\XP_VISTA\(Language)\DISK1

- 5. Check the printer driver location, and then click [Next >].
- 6. Click [Continue].
- 7. Click [Finish].

If installation is successful, the icon of the printer connected to the "USB001" port is added to the [Printers] window.



- If Auto Run starts, click [Cancel], and then [Exit].
- The number after "USB" varies depending on the number of printers connected.

Windows Vista, Windows Server 2008 - USB

Mportant !

 Installing a printer driver requires Administrators permission. Log on using an account that has Administrators permission.

If the printer driver has already been installed, plug and play is enabled, and the icon of the printer connected to

the "USB" port is added to the [Printers] window.

The printer drivers can be installed from the supplied CD-ROM provided with this machine.

If the printer driver is not installed, follow the plug-and-play instructions of the printer to install it from the supplied

CD-ROM.

1. Connect the machine to the computer using the USB cable.

Connect the USB cable firmly.

In the Found New Hardware display, select [Locate and install driver software (Recommended)].

Click [Continue] if the [User Account Control] window appears.

When a message prompting insertion of the CD-ROM, insert the CD-ROM into the CD-ROM drive.

Installation of the printer driver is automatically started.

If "Windows can't verify the publisher of this software" display appears in the installation, select the [Install this driver software anyway].

4. Click [Exit].

If installation is successful, the icon of this printer is added to the [Printers] window.



- Depending on your computer's operating system, the [AutoPlay] dialog box may appear. If this happens, click [Run SETUP.EXE]. If the [User Account Control] dialog box appears, click [Continue] to allow the auto play program to run.
- When a printer driver meeting this printer is found on a network, a message prompting insertion of the CD-ROM is not displayed.
- The number after "USB" varies depending on the number of printers connected.

Troubleshooting for using USB

Problems	Solutions
The machine is not automatically recognized.	Turn off the power of the machine, reconnect the USB cable, and then turn it on again.
Windows has already configured the USB settings.	Open Windows' Device Manager, and then, under [Universal Serial Bus controllers], remove any conflicting devices. Conflicting devices have a yellow [!] or [?] icon by them. Take care not to accidentally remove required devices. For details, see Windows Help.



 When using Windows 2000 / XP / Vista or Windows Server 2003 / 2003 R2 / 2008, an erroneous device is displayed under [USB Controller] in the [Device Manager] dialog box.

Printing with Parallel Connection

To use a machine connected using a parallel interface, click [LPT1] when installing the printer driver.

Installing the PostScript 3 printer driver (Windows 2000)



- Installing this printer driver requires Administrators permission. Log on using an account that has Administrators permission.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The printer driver with the selected language will be installed. The English printer driver is installed when the following language is selected: Suomi, Magyar, Cestina, Polski, Portugues, Russian, Catala, Turkce.

4. Click [PostScript 3 Printer Driver].

Add Printer Wizard starts.

- 5. Click [Next>].
- 6. Click [Local printer], and then click [Next >].

A dialog box for selecting the printer manufacturer and model name appears.

- 7. Select [LPT1] at the [Printer Port] dialog box, and then click [Next >].
- 8. Select whether or not to share the printer, and then click [Next >].
- 9. Select the name of the machine whose driver you want to install, and then click [Next >].
- 10. Select whether or not you want to print a test page, and then click [Finish].

The printer driver installation starts.

11. Restart the computer to complete installation if necessary.



- A user code can be set after the printer driver installation. For information about user code, see the printer driver Help.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

Installing the PostScript 3 Printer Driver (Windows XP, Windows Server 2003 / 2003 R2)

Mportant (

- Installing this printer driver requires Administrators permission. Log on using an account that has Administrators permission.
- You can install the printer driver from the CD-ROM provided with this machine or download it from the supplier's Web site.
- If your operating system is Windows XP Professional x64, Windows Server 2003 / 2003 R2 x64, you must download the printer driver from the manufacturer's Web site. Select this printer and the operating system you are using, and then download it.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The printer driver with the selected language will be installed. The English printer driver is installed when the following language is selected: Suomi, Magyar, Cestina, Polski, Portugues, Russian, Catala, Turkce.

4. Click [PostScript 3 Printer Driver].

Add Printer Wizard starts.

- 5. Click [Next>].
- 6. Click [Local printer attached to this computer], and then click [Next >].
- 7. Select the port you want to use, and then click [Next >].

A dialog box for selecting the printer manufacturer and model name appears.

- 8. Select the name of the machine whose driver you want to install, and then click [Next>].
- 9. Click [Close] to close the [Printer Port] dialog box.
- 10. Click [Next>].
- 11. Change the printer name if you want, and then click [Next >].
- 12. Select whether or not to share the printer, and then click [Next >].
- 13. Specify whether or not to print a test page, and then click [Finish].

The printer driver installation starts.

14. Restart the computer to complete installation.



A user code can be set after the printer driver installation. For information about user code, see the
printer driver Help.

 Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

Installing the PostScript 3 Printer Driver (Windows Vista, Windows Server 2008)

Mportant !

- Installing this printer driver requires Administrators permission. Log on using an account that has Administrators permission.
- You can install the printer driver from the CD-ROM provided with this machine or download it from the supplier's Web site.
- If your operating system is Windows Vista x64, Windows Server 2008 x64, you must download the
 printer driver from the manufacturer's Web site. Select this printer and the operating system you are
 using, and then download it.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The printer driver with the selected language will be installed. The English printer driver is installed when the following language is selected: Suomi, Magyar, Cestina, Polski, Portugues, Russian, Catala, Turkce.

4. Click [PostScript 3 Printer Driver].

Add Printer Wizard starts.

- 5. Click [Local printer attached to this computer].
- 6. Select the port you want to use, and then click [Next >].

A dialog box for selecting the printer manufacturer and model name appears.

- 7. Select the name of the machine whose driver you want to install, and then click [Next >].
- 8. Click [Close] to close the [Printer Port] dialog box.
- 9. Click [Next>].
- Change the printer name if you want, and then click [Next >].
- 11. Specify whether or not to print a test page, and then click [Finish].

The printer driver installation starts.

12. Restart the computer to complete installation.

- Depending on your computer's operating system, the [AutoPlay] dialog box may appear. If this happens, click [Run SETUP.EXE]. If the [User Account Control] dialog box appears, click [Continue] to allow the auto play program to run.
- A user code can be set after the printer driver installation. For information about user code, see the printer driver Help.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

Printing with Bluetooth Connection

This describes how to print with Bluetooth devices.

Supported Profiles

The following profiles are supported:

- SPP (Serial Port Profile)
- HCRP (Hardcopy Cable Profile)
- BIP (Basic Imaging Profile)

Restrictions on SPP, HCRP

- A maximum of two Bluetooth adaptor or Bluetooth-equipped computers can be connected at the same time using the Bluetooth interface: one by SPP, one by HCRP.
- When connecting more than one Bluetooth adaptor or Bluetooth-equipped computer at the same time, the first device that establishes connection is selected. When selecting the connection between the other devices, cancel the first established connection.
- SPP connection does not support bidirectional communications.
- HCRP connection supports bidirectional communications.

Restrictions on BIP

- For BIP connection, a module including PostScript 3 must be installed in the machine.
- Only one Bluetooth adaptor or Bluetooth-equipped computer can be connected via BIP.
- Only JPEG images can be printed using BIP.
- User codes are disabled for BIP.
- You cannot print if print functions are restricted.
- Some printers do not support BIP.

Instructions in this manual relate to printing via HRCP. To print using SPP or BIP, see the Help supplied with the Bluetooth adapter you want to use, or the Microsoft Web site.

Adding a Bluetooth Printer

The following procedures explain how to install a Bluetooth printer on a computer that is running Windows XP or Windows Vista.

If your computer is running SP1 or an earlier version of Windows XP, there are additional applications that you must install. For details about these, see the Help supplied with your Bluetooth device.



- To perform a printer installation, your account must have Manage Printers permission. Log on as an Administrators or Power Users group member.
- To connect to a Bluetooth printer, your computer must have a Bluetooth device installed. Make sure
 a Bluetooth device is installed on your computer.

Windows XP

1. On the [Start] menu, click [Printers and Faxes].

The [Printers and Faxes] window appears.

2. Click [Add a printer].

The [Add Printer Wizard] window opens.

- 3. Click [Next >].
- 4. Click [Bluetooth Printer], and then click [Next >].

The computer begins searching for available Bluetooth printers.

If a new printer is discovered, the [Found New Hardware Wizard] window appears. To ignore a discovered device and continue searching, click [Cancel]. The computer resumes searching for other available Bluetooth printers.

- Click [No, I will not connect], and then click [Next >].
- 6. Click [Install from a list or specific location (Advanced)], and then click [Next >].
- Insert the CD-ROM provided with this machine into your computer's CD-ROM drive, select
 the [Search removable media (floppy, CD-ROM...)] check box, and then click [Next >].
- 8. If the [Hardware Installation] window appears, click [Continue].
- 9. If the installation was successful, click [Finish].
- 10. Select [Test Print], and then click [Next >].
- 11. Click [Finish].



- Actual Bluetooth printer operations will vary according to your Bluetooth device and/or Bluetoothinstalled computer. For details, see the Help supplied with your Bluetooth device and/or Bluetoothequipped computer.
- After printing the test page, check it, and then click [Close] to close the window.
- If there is a problem with the test page, click [Troubleshooting] in the test print window.

Windows Vista



- To perform a printer installation, your account must have Manage Printers permission. Log on as an Administrators or Power Users group member.
- 1. On the [Start] menu, click [Control Panel].
- 2. In the "Hardware and Sound" area, click [Printers].
- 3. In the top part of the window, click [Add a printer].
- 4. In the [Add Printer] window, select [Add a network, wireless or Bluetooth printer], and then click [Next].

The computer begins searching for available Bluetooth devices.

From the list of discovered devices, select the printer you want to use, and then click [Next].

All discovered wireless printers appear in the list of discovered printers, not only Bluetooth printers. Make sure the printer you select is a Bluetooth printer.

- 6. Insert the CD-ROM provided with this machine into your computer's CD-ROM drive, and then click [Browse my computer for driver software (advanced)] on the [Found New Hardware] display.
- 7. In the [Found New Hardware] window, select the printer driver you want to use, and then click [Next].

The printer driver installation starts.

- 8. If the [Windows Security] window appears, click [Install this driver software anyway].
- 9. Click [Close].
- If you want to change the printer name, enter the new name in the [Printer Name Settings]
 window.
- 11. If you want to print a test page, click [Printing Test Page] on the "Test Print" page. Otherwise, click [Finish].



- Depending on your computer's operating system, the [AutoPlay] dialog box may appear. If this happens, click [Run SETUP.EXE]. If the [User Account Control] dialog box appears, click [Continue] to allow the auto play program to run.
- If you print the test page, after checking it, click [Close] to close the test print window.
- If there is a problem with the test page, click [Troubleshooting Printer Problems] in the test print window.

If a Message Appears during Installation

Message number 58 or 34 indicates the printer driver cannot be installed using Auto Run. Install the printer driver using [Add Printer] or [Install Printer].

For Windows 2000:

- 1. On the [Start] menu, point to [Settings], and then click [Printers].
- 2. Double-click the Add Printer icon.
- 3. Follow the instructions in Add Printer Wizard.



- If the printer driver is on a CD-ROM, the location of the PostScript 3 printer driver is D:\DRIVERS\PS\XP_VISTA\(Language\)\DISK1.
- If the installer starts, click [Cancel] to quit.

For Windows XP Professional and Windows Server 2003 / 2003 R2:

- 1. On the [Start] menu, click [Printers and Faxes].
- 2. Click [Add a printer].
- 3. Follow the instructions in Add Printer Wizard.



- If the printer driver is on a CD-ROM, the location of the PostScript 3 printer driver is D:\DRIVERS\PS\XP_VISTA\(Language\)\DISK1.
- If the installer starts, click [Cancel] to quit.

For Windows XP Home Editions:

- 1. On the [Start] menu, click [Control Panel].
- 2. Click [Printers and Other Hardware].
- 3. Click [Printers and Faxes].
- 4. Click [Install Printer].
- 5. Follow the instructions in Add Printer Wizard.



- If the printer driver is on a CD-ROM, the location of the PostScript 3 printer driver is D:\DRIVERS\PS\XP_VISTA\(Language\)\DISK1.
- If the installer starts, click [Cancel] to quit.

For Windows Vista and Windows Server 2008:

- On the [Start] menu, click [Control Panel].
 The [Control Panel] window appears.
- 2. Click [Printer] in "Hardware and Sound".
- 3. Click [Install Printer].
- 4. Follow the instructions in Add Printer Wizard.



- If the printer driver is on a CD-ROM, the location of the PostScript 3 printer driver is D:\DRIVERS\PS \XP_VISTA\(Language)\DISK1.
- If the installer starts, click [Cancel] to quit.

Making Option Settings for the Printer

Make option settings for the machine using the printer driver when bidirectional communication is disabled. Set up option settings when bidirectional communications are disabled.

- Under Windows 2000 / XP / Vista and Windows Server 2003 / 2003 R2 / 2008, Manage Printers
 permission is required to change the printer properties in the [Printers] folder. Log on as an
 Administrators or Power Users group member.
- 1. On the [Start] menu, click [Printers and Faxes] or [Printers].
 The [Printers and Faxes] or [Printers] window appears.
- 2. Click the icon of the printer you want to use.
- 3. On the [File] menu, click [Properties].

Under Windows Vista, Windows Server 2008, Right - click the icon of the printer you want to use, and then click the [Properties].

- 4. Click the [Device Settings] tab.
- 5. Select options installed from the [Install Options] area, and then make the necessary settings.
- 6. Click [Apply], and then click [OK] to close the printer properties dialog box.

Reference

• For details about making option settings for the printer, see Setting Up Options.

Setting Up the Printer Driver

Windows 2000 - Accessing the Printer

Making printer default settings - the printer properties

Important

- To change the printer default settings including option configuration settings, log on using an account that has Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default.
- You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.
- On the [Start] menu, point to [Settings], and then click [Printers].
 The [Printers] window appears.
- 2. Click the icon of the printer you want to use.
- On the [File] menu, click [Properties].
 The printer properties dialog box appears.
- 4. Make the necessary settings, and then click [OK].

U Note

- Settings you make here are used as the default settings for all applications.
- Do not make a setting for [Form to Tray Assignment].

Reference

• For details, see the printer driver Help.

Making printer default settings - Printing Preferences

Mportant !

- You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.
- On the [Start] menu, point to [Settings], and then click [Printers].
 The [Printers] window appears.
- 2. Click the icon of the printer you want to use.
- 3. On the [File] menu, click [Printing Preferences...].

The [Printing Preferences] dialog box appears.

Make the necessary settings, and then click [OK].



• Settings you make here are used as the default settings for all applications.

■ Reference

• For details, see the printer driver Help.

Making printer settings from an application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the [Printing Preferences] dialog box from that application. The following explains how to make settings for the WordPad application provided with Windows 2000.

- On the [File] menu, click [Print...].
 The [Print] dialog box appears.
- 2. Select the printer you want to use in the [Select Printer] list, and then click the tab for the settings you want to change.
- 3. Make the necessary settings, and then click [OK].



- The procedure to open the [Printing Preferences] dialog box may vary depending on the application. For details, see the manuals provided with the application you use.
- Any settings you make in the following procedure are valid for the current application only.
- General users can change the properties displayed in the [Print] dialog box of an application. Settings made here are used as defaults when printing from this application.

Reference

• For details, see the printer driver Help.

Windows XP, Windows Server 2003 / 2003 R2 - Accessing the Printer Properties

Making printer default settings - the printer properties



 To change the printer default settings including option configuration settings, log on using an account that has Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default.

- You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.
- 1. On the [Start] menu, click [Printers and Faxes].

The [Printers and Faxes] window appears.

- 2. Click the icon of the printer you want to use.
- On the [File] menu, click [Properties].
 The printer properties dialog box appears.
- 4. Make the necessary settings, and then click [OK].



- Settings you make here are used as the default settings for all applications.
- Do not make a setting for [Form to Tray Assignment].

■ Reference

• For details, see the printer driver Help.

Making printer default settings - Printing Preferences



- You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.
- 1. On the [Start] menu, click [Printers and Faxes].

The [Printers and Faxes] window appears.

- 2. Click the icon of the printer you want to use.
- 3. On the [File] menu, click [Printing Preferences...].

The [Printing Preferences] dialog box appears.

4. Make the necessary settings, and then click [OK].



• Settings you make here are used as the default settings for all applications.

Reference

• For details, see the printer driver Help.

Making printer settings from an application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the [Printing Preferences] dialog box from that application. The following explains how to make settings for the WordPad application provided with Windows XP.

- On the [File] menu, click [Print...].
 The [Print] dialog box appears.
- 2. Select the printer you want to use in the [Select Printer] list, and then click [Preferences].
- 3. Make the necessary settings, and then click [OK].



- The procedure to open the [Printing Preferences] dialog box may vary depending on the application. For details, see the manuals provided with the application you use
- Any settings you make in the following procedure are valid for the current application only.
- General users can change the properties displayed in the [Print] dialog box of an application. Settings
 made here are used as defaults when printing from this application.

Reference

• For details, see the printer driver Help.

Windows Vista, Windows Server 2008 - Accessing the Printer Properties

Making printer default settings - the printer properties



- To change the printer default settings including option configuration settings, log on using an account that has Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default.
- You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.
- On the [Start] menu, click [Control Panel].
 The [Control Panel] window appears.
- 2. Click [Printer] in "Hardware and Sound".
- 3. Right click the icon of the printer you want to use, and then click the [Properties].
- 4. Make the necessary settings, and then click [OK].



- Settings you make here are used as the default settings for all applications.
- Do not make a setting for [Form to Tray Assignment].

■ Reference

• For details, see the printer driver Help.

Making printer default settings - Printing Preferences

Mportant !

- You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.
- On the [Start] menu, click [Control Panel].
 The [Control Panel] window appears.
- 2. Click [Printer] in "Hardware and Sound".
- 3. Right click the icon of the printer you want to use, and then click the [Printing Preferences...].

 The [Printing Preferences] dialog box appears.
- 4. Make the necessary settings, and then click [OK].



• Settings you make here are used as the default settings for all applications.

Reference

• For details, see the printer driver Help.

Making printer settings from an application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the [Printing Preferences] dialog box from that application. The following explains how to make settings for the WordPad application provided with Windows XP.

- On the [File] menu, click [Print...].
 The [Print] dialog box appears.
- 2. Select the printer you want to use in the [Select Printer] list, and then click [Preferences].
- 3. Make the necessary settings, and then click [OK].



- The procedure to open the [Printing Preferences] dialog box may vary depending on the application. For details, see the manuals provided with the application you use
- Any settings you make in the following procedure are valid for the current application only.
- General users can change the properties displayed in the [Print] dialog box of an application. Settings made here are used as defaults when printing from this application.

• For details, see the printer driver Help.

1

2. Mac OS Configuration

Mac OS

This section explains how to configure a Mac OS to use EtherTalk and USB.

The following explains how to configure Mac OS 9.1. If you are not using Mac OS 9.1, see the manual of the Mac OS you are using for details.



For Mac OS 8.6 and higher. (Mac OS X Classic environment is supported.)



• The PostScript 3 printer driver is stored in the following folder on the CD-ROM.

Mac OS 8 and 9:PS Driver:(language):Disk1

Installing the PostScript 3 Printer Driver and PPD File

It is necessary to install a printer driver and PostScript Printer Description (PPD) files to print from a Mac OS

Follow the procedure below to install a printer driver and a PPD file into a Mac OS using Mac OS 8.6 and higher.

PostScript 3 Printer Driver

- 1. Insert the CD-ROM into the CD-ROM drive.
- 2. Double-click the CD-ROM drive icon.
- 3. Double-click the [Mac OS 8 and 9] folder.
- 4. Double-click the [PS Driver] folder.
- 5. Double-click the folder of the language you use.
- 6. Open [Disk1], and then double-click the installer icon.
- 7. Follow the instructions on the screen.

PPD Files

- 1. Double-click the CD-ROM drive icon.
- 2. Double-click the [Mac OS 8 and 9] folder.
- 3. Double-click the [Printer Descriptions] folder.
- 4. Double-click the folder of the language you are using.
- 5. Open the [DISK1] folder.

- 6. Drag the PPD file and the plugin file into [Printer Descriptions] in [Extensions] under [System Folder].
- 7. Restart the Mac OS.

Setting Up PPD Files



- Make sure that the printers are connected to an AppleTalk network before performing the following procedure.
- 1. On the [Apple] menu, click [Chooser].
- 2. Click the Adobe PS icon.
- 3. In the [Select a PostScript Printer:] list, click the name of the printer you want to use.
- 4. Click [Create].
- 5. Click the printer you want to use, and then click [Setup].

A PPD file is set up and the Adobe PS icon appears at the left of the printer name in the list. Follow the procedure on Setting Up Options to make option settings; otherwise close the [Chooser] dialog box.

Setting Up Options

- 1. On the [Apple] menu, click [Chooser].
- 2. Click the Adobe PS icon.
- 3. In the [Select a PostScript Printer:] list, click the name of the printer you want to use, and then click [Setup].
- 4. Click [Configure].

A list of options appears.

- 5. Select the option you want to set up, and then select an appropriate setting for it.
- 6. Click [OK].

The list of options closes.

7. Click [OK].

The [Chooser] dialog box appears.

8. Close the [Chooser] dialog box.



• If the option you want to select is not displayed, PPD files may not be set up correctly. To complete the setup, check the name of the PPD file displayed in the dialog box.

Installing Adobe Type Manager

- Quit all applications currently running before installation. Install ATM after you restart the computer.
- 1. Start a Mac OS.
- 2. Insert the CD-ROM into the CD-ROM drive.
- 3. Double-click the CD-ROM drive con.
- 4. Double-click the [Mac OS 8 and 9] folder.
- 5. Double-click the [ATM] folder.
- 6. Double-click the ATM 4.6.2 installer icon.
- 7. Follow the instructions on the screen.
- 8. When the procedure is complete, restart the computer. ATM will be completely installed only after restarting.
- 9. On the [Apple] menu, open [Control Panel], and then click [~ATM].
- 10. The ATM control panel opens.



• For details about installation, see the operating instructions in the ATM folder.

Installing Screen fonts

Follow the procedure below to install screen fonts.

The screen fonts described below can be found in the [Fonts] folder on the CD-ROM.

- 1. Start a Mac OS.
- Insert the CD-ROM into the CD-ROM drive.

The CD-ROM drive icon appears.

3. Double-click the CD-ROM drive icon.

The contents of the CD-ROM appear.

- 4. Double-click the [Mac OS 8 and 9] folder.
- 5. Double-click the [Fonts] folder.
- 6. Double-click the [Screen font] folder.
- 7. Double-click the [TrueType] or [Type1] folder.

Select the font type you want to use.

8. Copy the fonts you want to install in [System Folder].

A confirmation message appears.

9. Click [OK].

The fonts are installed.

10. Restart the Mac OS.

Changing to EtherTalk

Follow the procedure below to configure to a Mac OS to use EtherTalk.

- 1. Open [Control Panel], and then double-click the AppleTalk icon.
- 2. On the [Connect via:] pop-up menu, click [Ethernet].
- 3. If you change zones, select a name on the [Current zone:] pop-up menu.
- 4. Close the AppleTalk control panel.
- 5. Restart the computer.



- The procedures used to configure Mac OS may vary depending on the Mac OS version. The following
 describes how to configure Mac OS 9.1. If you are using a different version of Mac OS, use the
 following procedures as a reference and see the manuals for your Mac OS version.
- Confirm the Connection to the Printer with TCP/IP.

Reference

For information about installing applications required for EtherTalk, see the Mac OS manuals.

Mac OS X

This section explains how to configure a Mac OS X to use EtherTalk, USB and TCP/IP.

Follow the procedure below to configure Mac OS X 10.3.8. If you are not using Mac OS X 10.3.8, see the manual of the Mac OS X you are using for details.



• For Mac OS X 10.1 or higher.



• The PPD files are stored in the following folder on the CD-ROM.

Mac OS X: MacOSX PPD Installer

Installing the PPD Files

Follow the procedure below to install a PPD file to print from Mac OS X.

- You need an administrator name and a password (phrase). For details, consult your network administrator.
- 1. Insert the CD-ROM into the CD-ROM drive.
- 2. Double-click the CD-ROM drive icon.
- 3. Double-click the [Mac OS X] folder.
- 4. Double-click the [MacOSX PPD Installer] folder.
- Double-click the [MAC OSX 10.1 or later] or [MAC OSX 10.5 or later] folder, depending on your operating system.
- 6. Double-click the installer icon.
- 7. Follow the instructions on the screen.

Setting Up the PPD File

1. Start Printer Setup Utility.

Under Mac OS X 10.5, start System Preferences and click [Print & FAX].

2. Click [Add] or [+] button.

Mac OS X 10.5

Click [Default]. If the printer name is not displayed, select the icon that corresponds to your network environment (AppleTalk, etc.).

If several AppleTalk zones exist on the network, select the zone the printer belongs to.

Mac OS X 10.4

Click [More Printers...]. Then select the zone from the second pop-up menu.

Other Mac OS X

Click [AppleTalk] on the first pop-up menu.

If the zone is set, select the zone from the second pop-up menu.

3. Select the printer, and then select its manufacturer from the [Printer Model:] pop-up menu.

Under Mac OS X 10.4, select the printer you are using from the [Print Using] popup menu.

Under Mac OS X 10.5, select the printer you are using from the [Printer Name] list.

- 4. Select the PPD file for the model you are using, and then click [Add].
- 5. Quit Printer Setup Utility or System Preferences.

Setting Up Options

- 1. Start System Preferences.
- 2. Click [Print& Fax].
- In the [Printer] list, click the name of the printer you want to use, and then click [Printer Setup...].
- 4. Select the option you want to set up, and then select an appropriate setting for it.
- 5. Click [Apply Changes].



• If the option you want to select is not displayed, PPD files may not be set up correctly. To complete the setup, check the name of the PPD file displayed in the dialog box.

Using USB Interface

Follow the procedure below to set up USB connection.

1. Start Printer Setup Utility.

Under Mac OS X 10.5, start System Preferences and click [Print & FAX].

2. Click [Add] or [+] button.

Mac OS X 10.5

Click [Default].

Mac OS X 10.4

Click a printer that has "USB" indicated in the "Connection" column.

Other Mac OS X

Click [USB] on the pop-up menu.

The connected printer appears.

3. Select the printer, and then select its manufacturer from the [Printer Model:] pop-up menu.

Under Mac OS X 10.4, select the printer you are using from the [Print Using] pop-up menu.

A list of printer types appears.

Under Mac OS X 10.5, select the printer you are using from the [Printer Name] list, and [kind] of USB.

- 4. Select the connected printer from the list of printer models, and then click [Add].
- 5. Quit Printer Setup Utility or System Preferences.



- When printing with a USB connection to a Macintosh computer, printer language does not change automatically. Use the control panel on this printer to change printer language to [Auto Detect] or [PS] before printing.
- USB2.0 can be used only with Mac OS X 10.3.3 or higher.

Using Bonjour

Follow the procedure below to print using Bonjour under Mac OS X 10.2.3 or higher. Ethernet, wireless LAN connections can also be used.

1. Start Printer Setup Utility.

Under Mac OS X 10.5, start System Preferences and click [Print & FAX].

2. Click [Add] or [+] button.

Mac OS X 10.5

Click [Default]. If the printer name is not displayed, select the icon that corresponds to your network environment (AppleTalk, etc.).

If several AppleTalk zones exist on the network, select the zone the printer belongs to.

Mac OS X 10.4

Click a printer that has "Bonjour" indicated in the "Connection" column.

Other Mac OS X

Click [Rendezvous] on the pop-up menu.

Select the name of the connected printer from the list of printer models, and then click [Add].

Under Mac OS X 10.4, Installable Options window appears. Select the option you want to set up, and then select an appropriate setting for it, and then [Continue].

Under Mac OS X 10.5, select the printer you are using from the [Printer Name] list, and [kind] of bonjour.

4. Quit Printer Setup Utility or System Preferences.

When printing with a Rendezvous connection to a Macintosh computer, printer language does not change automatically. Use the control panel on this printer to change printer language to [Auto Detect] or [PS] before printing.



 When printing with a Rendezvous connection to a Macintosh computer, printer language does not change automatically. Use the control panel on this printer to change printer language to [Auto Detect] or [PS] before printing.

Changing to EtherTalk

Follow the procedure below to configure a Mac OS X to use EtherTalk.

Important

- You need an administrator name and a password (phrase). For details, consult your network administrator.
- 1. Open [System Preferences], and then click the Network icon.
- 2. Click [Built-in Ethernet] in the [Show:] list box.
- 3. Click the [AppleTalk] tab.
- 4. Select the [Make AppleTalk Active] check box.
- 5. To change AppleTalk zones, select a name from the [AppleTalk Zone:] pop-up menu.
- 6. When the settings are made, click [Apple Now].

Reference

• For information about installing applications required for EtherTalk, see the Mac OS manuals.

Configuring the Printer

Use the control panel to enable AppleTalk. (The default is active.)

3. Using PostScript 3

Setting Up Options

To use installed options correctly, first set up the printer driver. If the options are not recognized, you cannot use them, even though they are physically installed. The procedure to set up a printer driver varies depending on the operating system.

Windows



- If your system is Windows 2000, Windows XP Professional, Windows Vista, or Windows Server 2003 / 2003 R2 / 2008, changing printer driver settings requires Manage Printers permission. Members of Administrators and Power Users groups have Manage Printers permission by default. When you change printer driver settings, log on with an account that has Manage Printers permission.
- If you are using Adobe PageMaker 6.0, 6.5, or 7.0, you have to set up options in the Adobe PageMaker's print dialog box.

You can set up any of the options using the following tabs:

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Installable Options] on the [Device Settings] tab.
Mac OS	For Ethernet, [Chooser] on the Apple Menu. For USB, [Change Setup] from the [Printing] menu to open the Desktop printer.
Mac OS X	[Printer Setup] in [Print & Fax] to open the System Preferences.



To set up options, access the printer driver from Windows. You cannot set up options if you
access the printer driver from an application.

Mac OS



• If you are using Mac OS X, this functions cannot be used.

You can set up all options using the [Chooser] dialog box.



• See, Making Option Settings for the Printer, Setting Up Options or Setting Up Options for the installation method appropriate to your printing environment.

Printing a Document

This documentation describes the specific printer functions and menus that are added by installing the PPD file.



- On a Macintosh, Mac OS 8.6 or higher (Mac OS X Classic environment is supported.), or Mac OS X 10.1 or higher is required.
- If you are using Mac OS X 10.1.x, the following functions cannot be used:
 - Sample Print
 - Locked Print
 - Hold Print
 - Stored Print
 - Store and Print
 - Document Server
 - User Code
- Applications, such as PageMaker, that have their own drivers do not support the following functions:
 - Sample Print
 - Locked Print
 - Hold Print
 - Stored Print
 - Store and Print
 - Document Server
 - User Code



- If you are using Mac OS X 10.2.x or higher, the Job Type function can be used.
- "Mac OS X" in the tables below refers to Mac OS X 10.2.3. Depending on the version, [Features x] is displayed as [Set x] (x is a number). Make adjustments according to the version you use.

Job Type

Use this to select the type of print job.

The following table shows the tabs or menus where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Job Type:] on the [Job/Log] tab in the Printing Preferences dialog box.
Mac OS	[Job Type:] on [Job Log] in the print dialog box.
Mac OS X	[Job Type:] on [Job Log] in the print dialog box.

You can select the following items:

Normal Print

Select this for normal printing. The print job starts immediately after the print command is given.

Sample Print

Use this function to print only one set of a multiple print jobs.

The other sets are saved in the machine. The saved job can be printed from the machine's control panel. You can also delete the saved job.



- The "User ID" can contain up to eight alphanumeric (a- z, A- Z, 0- 9) characters.
- Entering the "User ID" helps you distinguish your print job from others.

Reference

• For details about how to use Sample Print, see Job Type.

Locked Print

Use this function to save documents in the machine memory with a password, and then edit and print them as you want.



- The "User ID" can contain to eight alphanumeric (a-z, A-Z, 0-9) characters. The "Password" must be 4-8 digits.
- Entering the "User ID" helps you distinguish your print job from others.

Reference

• For details about how to use Locked Print, see Job Type.

Hold Print

Use this function to temporarily hold a file in the machine, and print it from the computer or the machine's control panel later.



- The "User ID" can contain up to eight alphanumeric (a- z, A- Z, O- 9) characters.
- The "File Name" can contain to 16 alphanumeric (a-z, A-Z, 0-9) characters.
- Entering the "User ID" helps you distinguish your print job from others.

Reference

• For details about how to use Hold Print, see Job Type.

Stored Print

Use this function to store a file in the machine, and then print it from the computer or the machine's control panel later.



- The "User ID" can contain up to eight alphanumeric (a- z, A- Z, 0- 9) characters. The "Password" must be 4-8 digits.
- The File Name can contain to 16 alphanumeric (a-z, A-Z, 0-9) characters.
- You can assign a password to a saved document, but password assignment is not mandatory.
- Entering the "User ID" helps you distinguish your print job from others.

Reference

• For details about how to use Stored Print, see Job Type.

Store and Normal Print

Use this function to print the file at once and also store the file in the printer.



- The "User ID" can contain up to eight alphanumeric (a- z, A- Z, 0- 9) characters. The "Password" must be 4-8 digits.
- The "File Name" can contain to 16 alphanumeric (a-z, A-Z, 0-9) characters.
- You can assign a password to a saved document, but password assignment is not mandatory.
- Entering the "User ID" helps you distinguish your print job from others.

Reference

• For details about how to use Stored Print, see Job Type.

Send to Document Server

Use this function to store documents that you want to print in the printer, as well as documents you might want to later combine or process for printing.



• The "File Name" can contain to 16 alphanumeric (a-z, A-Z, 0-9) characters.

Reference

 For details about the Document Server function, see "Accessing the Document Server", Printer Reference.

How to Use Sample Print

Follow the procedure below to print a document using the Sample Print function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008

1. In the application, on the [File] menu, click [Print].

The [Print] dialog box appears.

If you are using Windows 2000, select the printer, and then perform the following steps.

If you are using Windows XP / Vista or Windows Server 2003 / 2003 R2 / 2008, select the printer, and then click [Preferences].

- 2. Click the [Job/Log] tab.
- 3. In the [Job Type:] list, click [Sample Print].
- 4. In the [User ID:] box, enter a user ID using up to eight alphanumeric (a-z, A-Z, 0-9) characters.

The user ID associates the user with his / her jobs.

5. Click [OK] to close the printer properties dialog box.

If you are using Windows 2000, perform the following steps.

6. Set the number of copies to two or more, and then start the printing from the application's [Print] dialog box.

The sample print job is sent to the machine, and one set is printed.

7. Check the printed output to make sure the settings are correct.

If the settings are correct, perform the following steps to print the remaining sets.

If you want to delete a saved job, see Job Type.

- 8. On the machine's control panel, press the [Printer] key to display the printer screen.
- 9. Press [Print Jobs].
- 10. Press [Sample Print Job List].

A list of sample print files stored in the machine appears.

[User ID], [Date/Time] and [File Name] also appear.

11. Select the file you want to print by pressing it.

A list of print files stored in the machine appears.

- 12. Press [Print] to change the number of sets to be printed.
- 13. Enter the new number of sets using the number keys.

If you do not want to change the set quantity, perform the following steps.

You can enter up to 999 sets.

Press [Clear/Stop] to correct any entry mistakes.

3

When multiple files are selected without setting a quantity, 1 page less than the minimum number of all settings is applied.

14. Press [Yes].

The remaining sets are printed.



- Press [Stop] to cancel printing.
- When printing finishes, the stored file is deleted.
- To cancel printing, press [Exit]. Then, press [Job Reset]. After it has started, the file is deleted.
- If there is a print job outstanding, this will be printed before the sample print job.
- If the application has a collate option, make sure it is not selected before sending a print job. The printer driver automatically collates Sample Print jobs by default. If the collate option is selected in the application's [Print] dialog box, there may be more prints than required.

Mac OS / Mac OS X

1. In the application, on the [File] menu, click [Print].

The [Print] dialog box appears.

2. Set the number of copies to two or more.

The sample print job is sent to the machine, and one set is printed.

- 3. In the pop-up menu, click [Job Log].
- 4. On the [Job Type:] pop-up menu, select [Sample Print].
- In the [User ID:] box, enter a user ID using up to eight alphanumeric (a-z, A-Z, 0-9) characters.

The user ID associates the user with his / her jobs.

6. Check the printed output to make sure the settings are correct.

If the settings are correct, perform the following steps to print the remaining sets.

If you want to delete a saved job, see Job Type.

- 7. On the machine's control panel, press the [Printer] key to display the printer screen.
- 8. Press [Print Jobs].
- 9. Press [Sample Print Job List].

A list of sample print files stored in the machine appears.

[User ID], [Date/Time] and [File Name] also appear.

10. Select the file you want to print by pressing it.

A list of print files stored in the machine appears.

11. Press [Print] to change the number of sets to be printed.

12. Enter the new number of sets using the number keys.

If you do not want to change the set quantity, perform the following steps.

You can enter up to 999 sets.

Press [Clear/Stop] to correct any entry mistakes.

When multiple files are selected without setting a quantity, 1 page less than the minimum number of all settings is applied.

13. Press [Yes].

The remaining sets are printed.



- Press [Stop] to cancel printing.
- When printing finishes, the stored file is deleted.
- To cancel printing, press [Exit]. Then, press [Job Reset]. After it has started, the file is deleted.
- If there is a print job outstanding, this is printed before the sample print job.

Deleting a Sample Print File

If the printed document is no longer required, you can delete the Sample Print file.

- 1. On the machine's control panel, press the [Printer] key to display the printer screen.
- 2. Press [Print Jobs].

A list of print files stored in the machine appears.

3. Press [Stored Print Job List].

A list of sample print files stored in the machine appears.

4. Select the file you want to delete by pressing it.

To cancel a selection, press the highlighted jobs again.

Only one file can be selected at a time.

5. Press [Delete].

A confirmation screen appears.

6. Press [Yes] to delete the file.

After the file is deleted the printer screen reappears.

Press [No] to cancel the delete request.

How to Use Locked Print

Follow the procedure below to print a document using the Locked Print function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008

1. In the application, on the [File] menu, click [Print].

The [Print] dialog box appears.

If you are using Windows 2000, select the printer, and then perform the following steps.

If you are using Windows XP/Vista or Windows Server 2003 / 2003 R2 / 2008, select the printer, and then click [Preferences].

- 2. Click the [Job/Log] tab.
- 3. In the [Job Type:] list, click [Locked Print].
- 4. In the [User ID:] box, enter a user ID using up to eight alphanumeric (a-z, A-Z, 0-9) characters, and then enter a 4-8 digit password in the [Password:] box.

The user ID associates user with his / her jobs.

5. Click [OK] to close the printer properties dialog box.

If you are using Windows 2000, perform the following steps.

6. Start the printing from the application's [Print] dialog box.

The document file is saved in the machine.

To print the document, perform the following steps.

To delete the document, see Job Type.

- On the machine's control panel, press the [Printer] key to display the printer screen.
- 8. Press [Print Jobs].

A list of print files stored in the machine appears.

9. Press [Locked Print Job List].

A list of locked print files stored in the machine appears.

[User ID], [Date/Time] and [File Name] also appear.

- 10. Select the file you want to print by pressing it.
- 11. Press [Print].

The password screen appears.

12. Enter the password using the number keys, and then press [OK].

A confirmation screen appears.

A confirmation screen will appear if the password is not entered correctly. Press [OK] to enter the password again.

When multiple print files are selected, the machine prints only files that correspond to the entered password. The number of files is displayed on the confirmation screen.

13. Press [Yes].

The locked file is printed.



- Press [Stop] to cancel printing.
- To cancel printing, press [Exit]. Then, press [Job Reset]. After it has started, the file is deleted.
- If the application has a collate option, make sure it is not selected before sending a print job. The
 printer driver automatically collates Locked Print jobs by default. If the collate option is selected in the
 application's [Print] dialog box, there may be more prints than required.

Mac OS / Mac OS X

1. In the application, click [Print] on the [File] menu.

The [Print] dialog box appears.

- 2. In the pop-up menu, click [Job Log].
- 3. On the [Job Type:] pop-up menu, click [Locked Print].
- 4. In the [User ID:] box, enter a user ID using up to eight alphanumeric (a-z, A-Z, 0-9) characters, and then enter a 4-8 digit password in the [Password:] box.

The user ID associates the user with his / her jobs.

5. After making the necessary settings, click [Print].

The document file is saved in the machine.

To print the document, perform the following steps.

To delete the document, see Job Type.

- 6. On the machine's control panel, press the [Printer] key to display the printer screen.
- 7. Press [Print Jobs].

A list of print files stored in the machine appears.

8. Press [Locked Print Job List].

A list of locked print files stored in the machine appears.

[User ID], [Date/Time] and [File Name] also appear.

- 9. Select the file you want to print by pressing it.
- 10. Press [Print].

The password screen appears.

11. Enter the password using the number keys, and then press [OK].

A confirmation screen appears.

A confirmation screen will appear if the password is not entered correctly. Press [OK] to enter the password again.

When multiple print files are selected, the machine prints only files that correspond to the entered password. The number of files is displayed on the confirmation screen.

The locked file is printed.



- Press [Stop] to cancel printing.
- To cancel printing, press [Exit]. Then, press [Job Reset]. After it has started, the file is deleted.

Deleting a Locked Print File

If the printed document is no longer required, you can delete the Locked Print file.

- 1. On the machine's control panel, press the [Printer] key to display the printer screen.
- 2. Press [Print Jobs].

A list of print files stored in the machine appears.

3. Press [Locked Print Job List].

A list of locked print files stored in the machine appears.

4. Select the file you want to delete by pressing it.

To cancel a selection, press the highlighted job again.

Only one file can be selected at a time.

5. Press [Delete].

A password screen appears.

6. Enter the password using the number keys, and then press [OK].

A confirmation screen appears.

A confirmation screen will reappear if the password was entered incorrectly. Press [OK] to enter the password again.

When multiple files are selected, the machine deletes only files that correspond to the entered password. The number of files to be deleted is displayed on the confirmation screen.

7. Press [Yes].

After the file is deleted, the printer screen reappears.



• Press [No] to cancel the delete request.

How to Use Hold Print

Follow the procedure below to print a document using the Hold Print function.

3

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008

1. In the application, on the [File] menu, click [Print].

The [Print] dialog box appears.

If you are using Windows 2000, select the printer, and then perform the following steps.

If you are using Windows XP/Vista or Windows Server 2003 / 2003 R2 / 2008, select the printer, and then click [Preferences].

- 2. Click the [Job/Log] tab.
- 3. In the [Job Type:] list, click [Hold Print].
- 4. In the [User ID]: box, enter a user ID using up to eight alphanumeric (a-z, A-Z, 0-9) characters. [File Name] can also be set.

The user ID associates the user with his / her jobs.

5. Click [OK] to close the printer properties dialog box.

If you are using Windows 2000, perform the following steps.

6. Start the printing from the application's [Print] dialog box.

The document file is saved in the machine.

To print the document, perform the following steps.

To delete the document, see JobType.

- On the machine's control panel, press the [Printer] key to display the printer screen.
- 8. Press [Print Jobs].

A list of print files stored in the machine appears.

9. Press [Hold Print Job List].

A list of hold print files stored in the machine appears.

[User ID], [Date/Time] and [File Name] also appear.

Depending on the security settings, certain print jobs may not be displayed.

- 10. Select the file you want to print by pressing it.
- 11. Press [Print].
- 12. A confirmation screen appears.
- 13. Press [Yes].

The hold print file is printed.



- Press [Stop] to cancel printing.
- To cancel printing, press [Exit]. Then, press [Job Reset]. After it has started, the file is deleted.
- When printing finishes, the stored file is deleted.

If the application has a collate option, make sure it is not selected before sending a print job. The
printer driver automatically collates Hold Print files by default. If a collate option is selected from the
application's Print dialog box, there may be more prints than required.

Mac OS / Mac OS X

1. From an application, on the [File] menu, click [Print].

The [Print] dialog box appears.

- 2. In the pop-up menu, click [Job Log].
- 3. On the [Job Type:] pop-up menu, click [Hold Print].
- 4. In the [User ID:] box, enter the user ID using up to eight alphanumeric (a-z, A-Z, 0-9) characters. [File Name] can also be set.

The user ID associates the user with his / her jobs.

5. After making the necessary settings, click [Print].

The document file is saved in the machine.

To print the document, perform the following steps.

To delete the document, see Job Type.

- 6. On the machine's control panel, press the [Printer] key to display the printer screen.
- 7. Press [Print Jobs].

A list of print files stored in the machine appears.

8. Press [Hold Print Job List].

A list of hold print files stored in the machine appears.

[User ID], [Date/Time] and [File Name] also appear.

Depending on the security settings, certain print jobs may not be displayed.

- 9. Select the file you want to print by pressing it.
- 10. Press [Print].

A confirmation screen appears.

11. Press [Yes].

The hold print file is printed.



- Press [Stop] to cancel printing.
- To cancel printing, press [Exit]. Then, press [Job Reset]. After it has started, the file is deleted.
- When printing is completed, the stored file is deleted.

Deleting a Hold Print File

If the printed document is no longer required, you can delete the Hold Print file.

- 1. On the machine's control panel, press the [Printer] key to display the printer screen.
- 2. Press [Print Jobs].

A list of the print files stored in the machine appears.

3. Press [Hold Print Job List].

A list of Hold Print files stored in the machine appears.

Depending on the security settings, certain print jobs may not be displayed.

- 4. Select the file you want to delete by pressing it.
- 5. Press [Delete].

A confirmation screen appears.

6. Press [Yes].

After the file is deleted, the printer screen reappears.



• Press [No] to cancel the delete request.

How to Use Stored Print/Store and Print

Follow the procedure below to print a document using the Stored Print function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008

1. In the application, on the [File] menu, click [Print].

The [Print] dialog box appears.

If you are using Windows 2000, select the printer, and then perform the following steps.

If you are using Windows XP/Vista or Windows Server 2003 / 2003 R2 / 2008, select the printer, and then click [Preferences].

- 2. Click the [Job/Log] tab.
- 3. In the [Job Type:] list, click [Stored Print] or [Store and Normal Print].
 - [Stored Print]

Stores the file in the printer and print it later using the control panel.

• [Store and Normal Print]

Prints the file at once and also stores the file in the printer.

4. In the [User ID:] box, enter a user ID using up to eight alphanumeric (a-z, A-Z, 0-9) characters, and then enter a 4-8 digit password in the [Password:] box. [File Name] can also be set.

The user ID associates the user with his / her job.

You can assign a password to a saved document, but password assignment is not mandatory.

The same password must be entered when printing or deleting.

5. Click [OK] to close the printer properties dialog box.

If you are using Windows 2000, perform the following steps.

6. Start the printing from the application's [Print] dialog box.

The document file is saved in the machine.

To print the document, perform the following steps.

To delete the document, see Job Type.

- 7. On the machine's control panel, press the [Printer] key to display the printer screen.
- 8. Press [Print Jobs].

A list of print files stored in the machine appears.

9. Press [Stored Print Job List].

A list of stored print files stored in the machine appears.

[User ID], [Date/Time] and [File Name] also appear.

Depending on the security settings, certain print jobs may not be displayed.

- 10. Select the file you want to print by pressing it.
- 11. Press [Print].

A confirmation screen appears.

If you have already set a password, proceed to the following step.

12. Enter a password using the number keys on the password screen, and then press [OK].

A confirmation screen will appear if the password is not entered correctly. Press [OK] to enter the password again.

If you have not set the password, proceed to the following step.

13. Press [Yes].

The stored file is printed.



- Press [Stop] to cancel printing.
- To cancel printing, press [Exit]. Then, press [Job Reset]. After it has started, the file is deleted.
- Stored Print files sent to the machine are not deleted unless you delete them in the machine or select [Auto Delete Stored Print Jobs] (see "System", Printer Reference). Foe details, see Job Type.

If the application has a collate option, make sure it is not selected before sending a print job. The
printer driver automatically collate Stored Print files by default. If a collate option is selected from the
application's Print dialog box, there may be more prints than required.

Mac OS / Mac OS X

1. In the application, on the [File] menu, click [Print].

The [Print] dialog box appears.

- 2. In the pop-up menu, click [Job Log].
- 3. On the [Job Type:] pop-up menu, click [Stored Print] or [Store and Print].
 - [Stored Print]
 - Stores the file in the printer and print it later using the control panel.
 - [Store and Print]

Prints the file at once and also stores the file in the printer.

4. In the [User ID:] box, enter a user ID using up to eight alphanumeric (a-z, A-Z, 0-9) characters, and then enter a 4-8 digit password in the [Password:] box. [File Name] can also be set.

The user ID associates the user with his / her jobs.

You can assign a password to a saved document, but password assignment is not mandatory.

The password must be entered when printing or deleting.

5. After making the necessary settings, click [Print].

The document file is saved in the machine.

To print the document, perform the following steps.

To delete the document, see Job Type.

- 6. On the machine's control panel, press the [Printer] key to display the printer screen.
- 7. Press [Print Jobs].

A list of print files stored in the machine appears.

8. Press [Stored Print Job List].

A list of stored print files stored in the machine appears.

[User ID], [Date/Time] and [File Name] also appear.

Depending on the security settings, certain print jobs may not be displayed.

- 9. Select the file you want to print by pressing it.
- 10. Press [Print].

A confirmation screen appears.

If you have already set a password, proceed to the following step.

11. Enter a password using the number keys on the password screen, and then press [OK].

A confirmation screen will appear if the password is not entered correctly. Press [OK] to enter the password again.

If you have not set the password, proceed to the following step.

12. Press [Yes].

The stored file is printed.



- Press [Stop] to cancel printing.
- To cancel printing, press [Exit]. Then, press [Job Reset]. After it has started, the file is deleted.
- Stored Print files sent to the machine is not deleted unless you delete them in the machine or select [Auto Delete Stored Print Jobs] (see "System", Printer Reference). For details, see Job Type.

Deleting a Stored Print File

If the printed document is no longer required, you can delete the Stored Print file.

- 1. On the machine's control panel, press the [Printer] key to display the printer screen.
- 2. Press [Print Jobs].

A list of print files stored in the machine appears.

3. Press [Stored Print Job List].

A list of stored print files stored in the machine appears.

4. Select the file you want to delete by pressing it.

To cancel a selection, press the highlighted job again.

5. Press [Delete].

A confirmation screen appears.

6. Press [Yes].

After the file is deleted, the printer screen reappears.



- Press [No] to cancel the delete request.
- If you have already set a password in the printer driver, enter it to delete.

How to Use Document Server

Follow the procedure below to print a document using the Document Server function.



• An optional hard disk drive is required to use the Document Server function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008

1. In the application, on the [File] menu, click [Print].

The [Print] dialog box appears.

If you are using Windows 2000, select the printer, and then perform the following steps.

If you are using Windows XP/Vista or Windows Server 2003 / 2003 R2 / 2008, select the printer, and then click [Preferences].

- 2. Click the [Job/Log] tab.
- 3. In the [Job Type:] list, click [Document Server].
- 4. Enter a user ID, file name, and password in the dialog box that appears. The file name and password are optional.
- 5. Click [OK].

If you are using Windows 2000, perform the following steps.

6. Start the printing from the application's [Print] dialog box.

Mac OS X



• If you are using Mac OS X 10.1.x, this function cannot be used.

If you are using Mac OS X 10.2.x or higher, the Job Type function can be used.

- 1. In the application, on the [File] menu, click [Print].
 - The [Print] dialog box appears.
- 2. In the pop-up menu, click [Job Log].
- 3. On the [Job Type:] pop-up menu, click [Document Server].
- 4. Enter a user ID, file name, and password in the dialog box that appears. The file name and password are optional.
- 5. Start the printing from the application's [Print] dialog box.

User Code

Use this to set a user code for print logging.

Enter a user code using up to eight digits. A user code identifies a group of users and allows you to check the number of sheets printed under each code with SmartDeviceMonitor for Admin.

The following table shows the tabs or menus where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	Select [Enabled] on [Log], and then enter a user code in the [User Code:] box on the [Job/Log] tab in the Printing Preferences dialog box.
Mac OS	Select the [Enable User Code] check box, and then enter a user code in the [User Code] box on [Job Log] in the print dialog box.
Mac OS X	Select the [Enable User Code] check box, and then enter a user code in the [User Code] box on [Job Log] in the print dialog box.

■ Reference

• For details about using SmartDeviceMonitor for Admin, see Help.

Paper Size

Use this to select the size of paper you want to use.

The following table shows the tabs or menus where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Paper Size:] on [Paper Options] on the [Paper/Quality] tab in the Printing Preference dialog box.
Mac OS	[Paper:] on the [Page Attributes] tab in the Page Setup dialog box.
Mac OS X	[Paper Size:] in the Page Setup dialog box.

Reference

• For details about the paper sizes supported by this machine, see General Setting Guide.

Fit to Paper

When the size of the document and paper size differ, set whether or not to print according to paper size.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Fit to Paper] on [Document Options] on the [Advanced] tab in the Printing Preferences dialog box.
Mac OS	[Fit to Paper] on [Printer Specific Options] in the print dialog box.
Mac OS X	[Fit to Paper] on the [Features x] tab on [Printer Features] in the print dialog box.

[Prompt User]

Print is performed with the size of document to be printed unchanged.

[Nearest Size and Scale]

If the paper size is smaller than the selected paper size, the driver reduces the print size.

If the paper size is larger than the size of document to be printed, print is not to fit the paper size.

[Nearest Size and Crop]

When the paper size is smaller than the size of document to be printed, print is adjusted to meet the paper size.

Input Slot

Use this to select the paper sources.

The following table shows the tabs or menus where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Paper Size:] on [Paper Options] on the [Paper/Quality] tab in the Printing Preference dialog box.
Mac OS	[Paper Source] on [General] in the print dialog box.
Mac OS X	[All Pages from:] on [Paper Feed] in the print dialog box.

Reference

• For details about the paper sources, see Printer Reference.

Resolution

Use this to set the resolution types.

The following table shows the tabs or menus where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Resolutions] on [Print Quality] on the [Paper/Quality] tab in the Printing Preferences dialog box.
Mac OS	[Resolution] on [Printer Specific Options] in the print dialog box.
Mac OS X	[Resolution] on the [Features x] tab on [Printer Features] in the print dialog box.

Reference

• For more information about the resolution types, see Printer Reference.

Orientation

Use this to set the paper orientation.

The following table shows the tabs or menus where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Orientation] on the [Paper/Quality] tab in the Printing Preferences dialog box.
Mac OS	[Orientation] on the [Page Attributes] tab in the Page Setup dialog box.
Mac OS X	[Orientation] in the Page Setup dialog box.

You can select the following items:

- [Landscape]
- [Portrait]
- [Rotated Landscape]

U Note

- If you are using a Mac OS or Mac OS X, click to select the button that means "Landscape" or "Portrait".
- Under Mac OS, "Rotated Landscape" cannot be selected.

Rotate by 180 degrees

Use this to rotate the print image by 180 degrees.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Rotate by 180 degrees] on [Orientation] on the [Paper/Quality] tab in the Printing Preference dialog box.
Mac OS	[Rotate by 180 degrees] in [Printer Specific Options] in the print dialog box.
Mac OS X	[Rotate by 180 degrees] on the [Features x] tab in [Printer Features] in the print dialog box.

Copies

Use this function to specify the number of copies to print.

The following table shows the tabs or menus where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Copies] on the [Paper/Quality] tab in the Printing Preferences dialog box.
Mac OS	[Copies:] on [General] in the print dialog box.
Mac OS X	[Copies:] on [Copies & Pages] in the print dialog box.

Orientation Override

Use this to set the paper orientation.

The following table shows the tabs or menus where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Orientation Override] on [Document Options] on the [Advanced] tab in the Printing Preferences dialog box.
Mac OS	[Orientation Override] on [Printer Specific Options] in the print dialog box.
Mac OS X	[Orientation Override] on the [Features x] tab on [Printer Features] in the print dialog box.

You can select the following items:

- [Off]
- [Landscape]

• [Portrait]

Print Mode

Use this to select the print mode.

The following table shows the tabs or menus where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Print Mode] on [Paper Quality] tab in the Printing Preferences dialog box.
Mac OS	[Print Mode:] on [Printer Specific Options] in the print dialog box.
Mac OS X	[Print Mode:] on the [Features x] tab on [Printer Features] in the print dialog box.

You can select the following items:

Through

Disables print mode.

Edge Smoothing

Smoothes jagged lines in text and graphics to produce a finer image.

Toner Saving

Reduces the amount of toner used when printing.

Duplex Printing

Use this function to select duplex printing.



• To use this function, the optional duplex unit must be installed on the machine.

The following table shows the tabs or menus where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Print on Both Sides] on the [Finishing] tab in the Printing Preferences dialog box.
Mac OS	[Print on Both Sides] on [Layout] in the print dialog box.
Mac OS X	• 10.3 or higher

The [Two Sided Printing] check box on [Layout] in the print dialog box.

• Other Mac OS X

The [Print on both Sides] check box on [Duplex] in the print dialog box.

The following items may vary depending on the operating system you are using.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008, Mac OS

Off

Disables Duplex Printing.

Long Edge

Prints output so that you can open it to the long edge when bound along the long edge.

Short Edge

Prints output so that you can open it to the short edge when bound along the short edge.



 If you are using a Mac OS, click to select the button that means "Flip on Long Edge" or "Flip on Short Edge".

Mac OS X

The following functions are selectable under Mac OS X 10.3 or higher (for Mac OS X 10.2 or earlier, see Windows 2000 / XP, Windows Server 2003 / 2003 R2, Mac OS in Duplex Printing)

Off

Disables Duplex Printing.

Long-Edge Binding

Prints output so that you can open it to the long edge when bound along the long edge.

Short-Edge Binding

Prints output so that you can open it to the short edge when bound along the short edge.

Pages per Sheet

Use this function to specify the number of pages to be printed on a single sheet of paper.

The following table shows the tabs or menus where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Pages per Sheet] on [Finishing] tab in the Printing Preferences dialog box.
Mac OS	[Pages per Sheet:] on [Layout] in the print dialog box.
Mac OS X	[Pages per Sheet:] on [Layout] in the print dialog box.

Booklet Binding Edge

Use this function to specify the binding method for booklet printing.

The following table shows the tabs or menus where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Booklet Binding Edge] on [Finishing] tab in the Printing Preferences dialog box.
Mac OS	[Booklet Binding Edge:] on [Layout] in the print dialog box.
Mac OS X	[Booklet Binding Edge:] on [Layout] in the print dialog box.

Pages per Sheet Layout

Use this function to specify the layout when printing multiple pages onto a single sheet of paper.

The following table shows the tabs or menus where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Pages per Sheet Layout] on [Finishing] tab in the Printing Preferences dialog box.
Mac OS	[Layout Direction:] on [Layout] in the print dialog box.
Mac OS X	[Layout Direction:] on [Layout] in the print dialog box.



• If you are using a Mac OS or Mac OS X, click to select the button.

Draw Border

Use this function to specify whether or not to draw a page border on each page.

The following table shows the tabs or menus where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Draw Border] on [Edit] tab in the Printing Preferences dialog box.
Mac OS	[Border:] on [Layout] in the print dialog box.
Mac OS X	[Border:] on [Layout] in the print dialog box.

Collate

Use this function to enable collation. With this feature, the machine can efficiently print collated sets of multiple-page documents.



- To use this function, a memory unit of at least 192 MB or hard disk drive must be installed on the machine.
- If you are using Mac OS or Mac OS X, make sure that the following check boxes have not been selected.
 - Mac OS
 The [Collate] check box in the print dialog box.
 - Mac OS X
 The [Collate] check box on [Copies & Pages] in the printer dialog box.

The following table shows the tabs or menus where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	Set the number of copies to two or more, and then click the [Collate] checkbox on the [Paper/Quality] tab in the Printing Preference dialog box.
Mac OS	[Collate:] on [Printer Specific Options] in the print dialog box.
Mac OS X	[Collate:] on the [Copies & Pages] in the printer dialog box.

Paper Type

Use this to select the paper type.

The following table shows the tabs or menus where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Media Type] on [Paper Options] on the [Paper/Quality] tab in the Printing Preference dialog box.
Mac OS	[Paper Type] on [Printer Specific Options] in the print dialog box.
Mac OS X	[Paper Type] on the [Features x] tab on [Printer Features] in the print dialog box.

Reference

• For details about the media type supported by this machine, see General Setting Guide.

Destination Tray

Use this to select the destination tray.

The following table shows where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Destination] on [Output Tray] on the [Finishing] tab in the Printing Preference dialog box.
Mac OS	[Destination] in [Printer Specific Options] in the print dialog box.
Mac OS X	[Destination] on the [Features x] tab in [Printer Features] in the print dialog box.

Reference

• For details about the destination tray supported by this machine, see Network and System Settings Guide.

Staple

Use this function to staple sheets of printed paper together.

• When stapling, use the finisher option. See General Setting Guide or Printer Reference.

The following table shows where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Staple] on [Print Job] on the [Finishing] tab in the Printing Preference dialog box.
Mac OS	[Staple:] in [Printer Specific Options] in the print dialog box.
Mac OS X	[Staple:] on the [Features x] tab in [Printer Features] in the print dialog box.



• The stapling location might differ depending on the orientation of the machine set in the printer and the orientation of the data to be printed. For details, see Printer Reference.

Punch

Use this function to punch holes in the printed documents.

• When punching holes, use the finisher option. See Printer Reference.

The following table shows where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Punch] on [Print Job] on the [Finishing] tab in the Printing Preference dialog box.
Mac OS	[Punch:] in [Printer Specific Options] in the print dialog box.
Mac OS X	[Punch:] on the [Features x] tab in [Printer Features] in the print dialog box.



Punch positions and the number of punch holes that are available will change depending on the type
of finisher, the original's orientation, and the printing paper size and orientation. For details, see Printer
Reference.

Fold Type

Use this function to select a fold type for your printed documents.



• This function requires the optional folding finisher unit. See Printer Reference.

The following table shows where you can select this function.

Windows	[Fold Type:] on [Document Options] on the [Advanced] tab in the Printing Preference dialog box.
Mac OS	[Fold Type:] in [Printer Specific Options] in the print dialog box.
Mac OS X	[Fold Type:] on the [Features x] tab in [Printer Features] in the print dialog box.

You can select the following fold types:

None

Disables fold.

Half fold

Folds prints in half along their long edge.

Letter Fold-in

Folds prints into thirds with their two end segments folded one on top of the other.

Letter Fold-out

Folds prints into thirds with their two end segments folded in opposite directions.

Double Parallel Fold

Folds prints in half and then in half again with all folding edges aligned parallel to each other.

Gate fold

Folds prints into four segments, with their two end segments folded inward.

You can print inside or outside of paper to be folded:

Inside printing

In the print dialog box, specify only the type of fold that you require. By default, the print will appear on the inside of the folds.

If you want the folded sheets to open to the left or top, you must also select [Rotate by 180 degrees] in the print dialog box.

Outside printing

If you want the print to appear on the outside of the folds, in the print dialog box you must select [Letter Fold-out] for the type of fold. When this fold is selected, the print appears on the outside of the folds by default. If you select any other type of fold, the print will appear on the inside of the folds.

If you want the folded sheets to open to the left or top, you must also select [Rotate by 180 degrees] in the print dialog box.

If you want to specify other types of fold, use one of the following procedures.

- When specifying one-side printing
 In the print dialog box, select the fold type you require and set [Eject Face-up] to [On].
 If you want the folded sheets to open to the left or top, you must also select [Rotate by 180 degrees] in the print dialog box.
- · When specifying duplex printing

Windows

In the print dialog box, select the fold type you require and set [Page Output Order] to [Back to Front].

If you want the folded sheets to open to the left or top, you must also select [Rotate by 180 degrees] in the print dialog box.

Mac OS X

In the print dialog box, select the fold type you require and set [Page Order] to [Reverse]. If you want the folded sheets to open to the left or top, you must also select [Rotate by 180 degrees] in the print dialog box.



- In some applications, changing the [Orientation:] setting to [Landscape] can result in folded sheets opening in the opposite direction to that specified in the print dialog box.
- The reverse order printing function might not work from some applications. If this is the case, specify reverse order printing using the application's settings.
- [Page Order] can be set to [Reverse] only under Mac OS X 10.3 and later.
- For details about how output of sheets varies according to the type of fold, see Printer Reference.

Z-fold

Use this function to specify the position of the folds when using Z-fold function.



This function requires the optional folding finisher unit. See Printer Reference.

Windows 2000 / XP / Vista, Windows Server	[Z-fold] on [Print Job] on the [Finishing] tab in the
2003 / 2003 R2 / 2008	Printing Preference dialog box.

3

Mac OS	[Z-fold:] in [Printer Specific Options] in the print dialog box.
Mac OS X	[Z-fold:] on the [Features x] tab in [Printer Features] in the print dialog box.

You can select the following items:

Off

Disables Z-fold.

Bottom Fold

Folds prints so that their bottom end segment is on top.

Right Fold

Folds prints so that their rightmost segment is on top.

Left Fold

Folds prints so that their leftmost segment is on top.

Perfect/Ring Binding

Use this function to apply either perfect or ring binding to your prints.

The following table shows where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Perfect/Ring Binding:] on [Document Options] on the [Advanced] tab in the Printing Preference dialog box.
Mac OS	[Perfect/Ring Binding:] in [Printer Specific Options] in the print dialog box.
Mac OS X	[Perfect/Ring Binding:] on the [Features x] tab in [Printer Features] in the print dialog box.

You can select the following items:

Off

Disables Perfect/Ring Binding.

Perfect Binding

Applies perfect binging to prints.

Ring Binding

Applies ring binding to prints.

Punch only for Ring Binding

Punches ring binding holes into prints.

Ring Binding Position

Use this function to specify the binding position for ring binding.

The following table shows where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Ring Binding Position:] on [Document Options] on the [Advanced] tab in the Printing Preference dialog box.
Mac OS	[Ring Binding Position:] in [Printer Specific Options] in the print dialog box.
Mac OS X	[Ring Binding Position:] on the [Features x] tab in [Printer Features] in the print dialog box.

You can select the following items:

Left Bind

Binds prints along their left edge.

Right Bind

Binds prints along their right edge.

Top Bind

Binds prints along their top edge.

Perfect Binding Cutting Options

Use this function to specify the cut for perfect binding.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Perfect Binding Cutting Options:] on [Document Options] on the [Advanced] tab in the Printing Preference dialog box.
Mac OS	[Perfect Binding Cutting Options:] in [Printer Specific Options] in the print dialog box.
Mac OS X	[Perfect Binding Cutting Options:] on the [Features x] tab in [Printer Features] in the print dialog box.

You can select the following items:

Do not Cut

Prints are not cut.

Cut Fore Edge (Specify Finishing Size)

Cuts prints along their fore edge according to a specified finishing size.

Cut Fore Edge (Specify Margin)

Cuts prints along their fore edge according to a specified width.

Cut 3 Edges (Specify Finishing Size)

Cuts prints along three of their edges according to a specified finishing size.

Cut 3 Edges (Specify Margins)

Cuts prints along three of their edges according to a specified margin.

Perfect Binding Position

Use this function to specify the binding position for perfect binding.

The following table shows where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Ring Binding Position:] on [Document Options] on the [Advanced] tab in the Printing Preference dialog box.
Mac OS	[Ring Binding Position:] in [Printer Specific Options] in the print dialog box.
Mac OS X	[Ring Binding Position:] on the [Features x] tab in [Printer Features] in the print dialog box.

You can select the following items:

Left Bind

Binds prints along their left edge.

Right Bind

Binds prints along their right edge.

Top Bind

Binds prints along their top edge.

Adjust Image Position (Along Binding Edge)

Use this function to specify the position of the image along the binding edge.

The following table shows where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Adjust Image Position (Along Binding Edge):] on [Document Options] on the [Advanced] tab in the Printing Preference dialog box.
Mac OS	[Adjust Image Position (Along Binding Edge):] in [Printer Specific Options] in the print dialog box.
Mac OS X	[Adjust Image Position (Along Binding Edge):] on the [Features x] tab in [Printer Features] in the print dialog box.

Adjust Image Position (Across Binding Edge)

Use this function to specify the position of the image across the binding edge.

The following table shows where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Adjust Image Position (Across Binding Edge):] on [Document Options] on the [Advanced] tab in the Printing Preference dialog box.
Mac OS	[Adjust Image Position (Across Binding Edge):] in [Printer Specific Options] in the print dialog box.
Mac OS X	[Adjust Image Position (Across Binding Edge):] on the [Features x] tab in [Printer Features] in the print dialog box.

Perfect Binding Finishing Size

Use this function to specify the finishing size for perfect binding.

Cut Position Adjustment (Head Edge)

Use this function to specify the position of the head edge cut.

The following table shows where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Cut Position Adjustment (Head Edge):] on [Document Options] on the [Advanced] tab in the Printing Preference dialog box.	
Mac OS	[Cut Position Adjustment (Head Edge):] in [Printer Specific Options] in the print dialog box.	
Mac OS X	[Cut Position Adjustment (Head Edge):] on the [Features x] tab in [Printer Features] in the print dialog box.	

Cut Position Adjustment (Tail Edge)

Use this function to specify the position of the tail edge cut.

The following table shows where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Cut Position Adjustment (Tail Edge):] on [Document Options] on the [Advanced] tab in the Printing Preference dialog box.
Mac OS	[Cut Position Adjustment (Tail Edge):] in [Printer Specific Options] in the print dialog box.
Mac OS X	[Cut Position Adjustment (Tail Edge):] on the [Features x] tab in [Printer Features] in the print dialog box.

3

Cut Position Adjustment (Fore Edge)

Use this function to specify the position of the fore edge cut.

The following table shows where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Cut Position Adjustment (Fore Edge):] on [Document Options] on the [Advanced] tab in the Printing Preference dialog box.
Mac OS	[Cut Position Adjustment (Fore Edge):] in [Printer Specific Options] in the print dialog box.
Mac OS X	[Cut Position Adjustment (Fore Edge):] on the [Features x] tab in [Printer Features] in the print dialog box.

Finishing Size (Along Binding Edge)

Use this function to specify the finishing size across the binding edge when using the perfect binding function. The following table shows where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Finishing Size (Along Binding Edge):] on [Document Options] on the [Advanced] tab in the Printing Preference dialog box.
Mac OS	[Finishing Size (Along Binding Edge):] in [Printer Specific Options] in the print dialog box.
Mac OS X	[Finishing Size (Along Binding Edge):] on the [Features x] tab in [Printer Features] in the print dialog box.

Multi-sheet Fold

Use this function to specify multi-sheet fold.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Multi-sheet Fold:] on [Document Options] on the [Advanced] tab in the Printing Preference dialog box.	
---	--	--

Mac OS	[Multi-sheet Fold:] in [Printer Specific Options] in the print dialog box.
Mac OS X	[Multi-sheet Fold:] on the [Features x] tab in [Printer Features] in the print dialog box.

Perfect Binding Cover Sheet Print

Use this function or not or select whether to print on the cover sheets when using the perfect binding function.

The following table shows where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Perfect Binding Cover Sheet Print:] on [Document Options] on the [Advanced] tab in the Printing Preference dialog box.
Mac OS	[Perfect Binding Cover Sheet Print:] in [Printer Specific Options] in the print dialog box.
Mac OS X	[Perfect Binding Cover Sheet Print:] on the [Features x] tab in [Printer Features] in the print dialog box.

You can select the following items:

Off

Disables Perfect Binding Cover Sheet Print.

Back Cover (Inside)

Prints the last page of the job on the inside of the perfect binding cover sheet.

Front Cover (Outside)

Prints the last page of the job on the outside of the perfect binding cover sheet.

Front (Outside) / Back (Inside)

If one-sided printing is specified for the inside pages, the job is cancelled.

If duplex printing is specified for the inside pages, the last page of the job is printed on the outside of the perfect binding cover sheet and the second page from the last is printed on the outside of the cover sheet.

Cover Sheet Image Position (Along Binding Edge)

Use this function to specify the position of the image along the binding edge of the cover sheet.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Cover Sheet Image Position (Along Binding Edge):] on [Document Options] on the [Advanced] tab in the Printing Preference dialog box.
Mac OS	[Cover Sheet Image Position (Along Binding Edge):] in [Printer Specific Options] in the print dialog box.
Mac OS X	[Cover Sheet Image Position (Along Binding Edge):] on the [Features x] tab in [Printer Features] in the print dialog box.

Cover Sheet Image Position (Across Binding Edge)

Use this function to specify the position of the cover sheet image across the binding edge.

The following table shows where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Cover Sheet Image Position (Across Binding Edge):] on [Document Options] on the [Advanced] tab in the Printing Preference dialog box.
Mac OS	[Cover Sheet Image Position (Across Binding Edge):] in [Printer Specific Options] in the print dialog box.
Mac OS X	[Cover Sheet Image Position (Across Binding Edge):] on the [Features x] tab in [Printer Features] in the print dialog box.

Adjust Fore Edge Cut Position

Use this function to specify the position of the fore edge cut.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Adjust Fore Edge Cut Position:] on [Document Options] on the [Advanced] tab in the Printing Preference dialog box.
Mac OS	[Adjust Fore Edge Cut Position:] in [Printer Specific Options] in the print dialog box.

Mac OS X	[Adjust Fore Edge Cut Position:] on the [Features x] tab in [Printer Features] in the print dialog box.
----------	---

Reduce/Enlarge

Use this function to specify a scaling mode for reducing or enlarging the print size of documents.

The following table shows the tabs or menus where you can select this function.

Windows 2000 / XP / Vista, Windows Server	[Reduce/Enlarge] on [Effects] tab in the Printing
2003 / 2003 R2 / 2008	Preferences dialog box.

You can select the following items:

Full Size

Prints the document at its original size.

Print on

Prints the document by scaling it up or down to fit the specified paper size.

Scale To Fit

Prints the document at the specified reproduction ratio.

Watermark

Set the Watermark function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Watermark] on [Document Option] on the [Advanced] tab in the Printing Preferences dialog box.
MacOS X	[Watermark] on the [Features x] tab in the Print dialog box.

U Note

 When using this function under Mac OS, see the printer driver Help. The following explains the procedure for Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008.

Watermark Text

Select the Watermark Text type.

3

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Watermark Text] on the [Advanced] tab in the Printing Preferences dialog box.	
MacOS X	[Watermark Text] on the [Features x] tab in the Print dialog box.	



 When using this function under Mac OS, see the printer driver Help. The following explains the procedure for Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008.

Watermark Font

Select the Watermark Font type.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Watermark Font] on the [Advanced] tab in the Printing Preferences dialog box.
MacOS X	[Watermark Font] on the [Features x] tab in the Print dialog box.



 When using this function under Mac OS, see the printer driver Help. The following explains the procedure for Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008.

Watermark Size

Select the Watermark size.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Watermark Size] on the [Advanced] tab in the Printing Preferences dialog box.
MacOS X	[Watermark Size] on the [Features x] tab in the Print dialog box.



 When using this function under Mac OS, see the printer driver Help. The following explains the procedure for Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008.

Watermark Angle

Select the Watermark angle.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Watermark Angle] on the [Advanced] tab in the Printing Preferences dialog box.
MacOS X	[Watermark Angle] on the [Features x] tab in the Print dialog box.



 When using this function under Mac OS, see the printer driver Help. The following explains the procedure for Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008.

Watermark Style

Select the Watermark style.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Watermark Style] on the [Advanced] tab in the Printing Preferences dialog box.
MacOS X	[Watermark Style] on the [Features x] tab in the Print dialog box.



 When using this function under Mac OS, see the printer driver Help. The following explains the procedure for Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008.

Dithering

Use this to set the Image Rendering mode.

The following table shows the tabs or menus where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Dithering] on [Document Options] on the [Advanced] tab in the Printing Preferences dialog box.
Mac OS	[Dithering:] on [Printer Specific Options] in the print dialog box.

Mac OS X	[Dithering:] on the [Features x] tab on [Printer Features] in the print dialog box.
----------	---

You can select the following items:

Auto

Use this setting to configure the best dithering method automatically depending on the appearance of the document to be printed.

Photographic

Performs dithering using an appropriate pattern for photographs.

Text

Performs dithering using an appropriate pattern for text.

User Setting

Use this setting to print images set in half tone in your application.

Image Smoothing

Use this to select the image smoothing type.

The following table shows the tabs or menus where you can select this function.

Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2 / 2008	[Image Smoothing] on [Document Options] on the [Advanced] tab in the Printing Preferences dialog box.
Mac OS	[Image Smoothing:] on [Printer Specific Options] in the print dialog box.
Mac OS X	[Image Smoothing:] on the [Features x] tab on [Printer Features] in the print dialog box.

You can select the following items:

Off

Disables image smoothing.

On

Performs image smoothing unconditionally.

Auto

Performs image smoothing automatically for images that have a resolution less than 25% of supported printer resolution.

Less than 90 ppi - Less than 300 ppi

Performs image smoothing only when the image has an image resolution (pixels per inch) less than the respective value you have selected in the list.



- When [Auto] is selected, data processing may take a long time.
- When Image Smoothing is used for a mask image, this function may have an undesired effect on the print result.

4. Printer Utility for Mac

Installing Printer Utility for Mac

Follow these steps to install Printer Utility for Mac on the machine.

Mportant)

- If a Macintosh and printer are connected by USB, you cannot use Printer Utility for Mac.
- 1. Start the Mac OS.
- 2. Insert the CD-ROM into the CD-ROM drive.

The CD-ROM icon appears.

3. Double-click the CD-ROM icon.

The contents of the CD-ROM appear.

4. Double-click the [Mac OS] folder.

Under Mac OS X, double-click the [Mac OS X] folder.

- 5. Double-click the [PS Utility] folder on the CD-ROM, and then drag the [Printer Utility for Mac] file, and then drop it into the Macintosh hard disk.
- 6. Drag the CD-ROM icon and drop it into [Trash] to eject the CD-ROM.
 Printer Utility for Mac is installed.



- Printer Utility for Mac is included on the CD-ROM labeled "Printer Drivers and Utilities".
- Printer Utility for Mac requires Mac OS 8.1 or higher. (Mac OS X Classic environment is supported.)
- Printer Utility for Mac cannot use Mac OS X (native mode).

Starting Printer Utility for Mac

The following instructions describe how to start Printer Utility for Mac.

Mac OS



- Before starting Printer Utility for Mac, make sure the printer is selected in [Chooser] on the Apple menu.
- Double-click the Printer Utility for Mac icon.
 The [Printer Utility for Mac] dialog box appears.
- 2. Click [OK].

Printer Utility for Mac will take a few seconds to start.

Mac OS X

1. Double-click the Printer Utility for Mac icon.

The [Printer Utility for Mac] dialog box appears.

- 2. Click [OK].
- 3. In the [Available Printers:] box, select the printer you want to use.

If you change zones, select a name from [Available Network Zones:].

Click [Choose Printer...] on the Printer Utility for Mac menu if you want to change the printer.

4. Select the printer you want to use.

Printer Utility for Mac will take a few seconds to start.

5. Click [Choose].

Printer Utility for Mac Functions

Printer Utility for Mac functions are described below.

File menu

• [Download PS Fonts...]

Download fonts (PostScript Type 1) to the printer. See Downloading PS Fonts.

• [Display Printer's Fonts...]

Display and delete the fonts in printer memory and the printer's hard disk drive.

See Displaying Printer's Fonts.

• [Initialize Printer's Disk...]

Initialize the printer's hard disk drive. See Initializing the Printer Disk.

• [Page Setup...]

Set up the paper size to print "Printer Font Catalog" and "Printer Font Sample".

See Page Setup.

• [Print Fonts Catalog...]

Print the names of available fonts. See Printing Fonts Catalog.

• [Print Fonts Sample...]

Print a sample of fonts. See Printing Fonts Sample.

• [Rename Printer...]

Change the printer's name when viewed via AppleTalk. See Renaming the Printer.

• [Restart Printer]

Restart the printer. See Restarting the Printer.

Utility menu

• [Download PostScript File...]

Download a PostScript file. See Downloading PostScript Files.

• [Select Zone...]

Change the zone to which the printer belongs to via AppleTalk. See Selecting the Zone.

• [Display Printer Status...]

Display the status of the printer. See Displaying the Printer Status.

• [Launch Dialogue Console...]

Create and edit a PostScript file, and then download it to the printer. See Launching the Dialogue Console.

Downloading PS Fonts

You can download the PS fonts to the printer's memory or hard disk drive.

- The following procedures to download the fonts assume that you are a system administrator. If you
 are not, be sure to consult your system administrator.
- If the printer restarts, all the printer settings return to their defaults.
- Confirm that a Mac OS and the printer are connected with AppleTalk.
- During the download, do not turn off the power switch, operate the panel or open or close the cover.
- 1. Select [Download PS Fonts...] on the [File] menu.
- 2. Click [Add to list].

The dialog box to select fonts appears.

3. Click to select the desired font files, and then click [Open].

The list of selectable font names appears.

4. After adding all the fonts you want to download, click [OK].

The dialog box of selected fonts to download appears.

5. Click [Download].

The fonts begin to download, and the download status is shown.

- 6. When the completion message appears, click [OK].
- 7. Click [Cancel].



- Some fonts cannot be downloaded.
- Before downloading, read the documentation about the fonts you want to use.

Displaying Printer's Fonts

You can display the available fonts currently downloaded to the printer. Fonts in the printer's memory and hard disk drive can be displayed.

1. Select [Display Printer's Fonts...] on the [File] menu.

A dialog box appears.

- 2. Select [Printer's memory] or [Printer's disk].
- 3. Click [OK].



• The fonts displayed in italics are the default fonts.

Deleting Fonts

You can delete fonts from the printer's memory or hard disk drive.



- You cannot delete the fonts displayed in italic.
- 1. Select [Display Printer's fonts] on the [File] menu.

A dialog box appears.

- 2. Select [Printer's memory] or [Printer's disk].
- 3. Select the fonts you want to delete.
- 4. Click [Delete].

A confirmation message appears.

- Confirm the fonts you want to delete and the printer name from which you want to delete the fonts.
- 6. Click [Continue], and then click [OK].
- 7. Click [OK].

Initializing the Printer Disk

When initializing the printer's hard disk drive, all the fonts downloaded to the printer's hard disk drive are deleted. Before initializing, be sure to check the fonts on the hard disk drive.

Mportant !

- When initializing the printer's hard disk drive from the operation panel, all of the data on the printer's hard disk drive is deleted. Before initializing, be sure to check the data on the hard disk drive.
- Do not turn off the power switch until initializing is completed, otherwise the hard disk drive might be damaged.
- 1. Select [Initialize Printer's Disk...] on the [File] menu.

The confirmation message appears.

To cancel initialization, click [Cancel].

2. Click [Execute].

Initializing starts.

3. When the completion message appears, click [OK].

You can set the paper size on which to print "Print Fonts Catalogue" and "Prints Fonts Sample".

- 1. Select [Page Setup...] on the [File] menu.
- 2. Choose the paper size.

Printing Fonts Catalog

Print the names of fonts available on the printer.

- 1. Select [Print Fonts Catalogue] on the [File] menu.
- 2. Click [Print].



• The paper selected under [Page Setup] is used.

Printing Fonts Sample

You can print samples of fonts downloaded to the hard disk drive or memory.

- 1. Select [Print Fonts Sample...] on the [File] menu.
- 2. Click [Print].

●Note

• Print by using the paper selected on [Page Setup].

Renaming the Printer

You can change the printer name displayed under AppleTalk. If you connect several printers on the network, assign different names so you can identify them. If several printers have the same name, a digit appears next to the printer name in [Chooser].

Mportant !

- You can enter up to 31 digits and letters.
- Do not use symbols, for example "*", ":", "=", "@", "~".

Mac OS

- 1. On the [File] menu, click [Rename Printer...].
- 2. In the [New Name:] filed enter a new name.

3. Click [Rename].

The printer name is changed.

- 4. Click [OK].
- 5. On the Apple menu, click [Chooser].
- 6. Click the [AdobePS] icon.
- 7. Select the printer whose name you changed, and then close the [Chooser] dialog box.
 If there are several AppleTalk zones, select the zone the machine belongs to.

Mac OS X

- 1. On the [File] menu, click [Rename Printer...].
- 2. In the [New Name:] filed enter a new name.
- 3. Click [Rename].

The printer name is changed.

- 4. Click [OK].
- 5. On the Printer Utility for Mac menu, click [Choose Printer...].
- 6. In the [Available Network Zones:] list, select the zone for the Macintosh in use.
- In the [Available Printers:] list, select the printer whose name you changed, and then click [Choose].

Restarting the Printer

You can restart the printer.

- 1. Select [Restart Printer] on the [File] menu.
- 2. Confirm the message that appears on the screen, and then click [Restart].

The printer restarts.

The fonts that you downloaded in the printer's memory will be deleted.

If the printer restarts, all the printer settings return to their defaults.

Downloading PostScript Files

You can download a Postscript file to the printer.

- 1. Select [Download PostScript File...] on the [Utility] menu.
- 2. Select the file name to download and click the file name, and then click [Open].

3. Type the log file name, and then click [Save...].

The selected file is downloaded.

Errors are recorded in the log file.

Selecting the Zone

You can change the zone to which the printer belongs under AppleTalk.

Confirm that a Macintosh and printer are connected with AppleTalk.

Mac OS

1. On the [Utility] menu, click [Select Zone...].

The zone to which the printer belongs and the available zone list appear.

2. Select the zone in which you want to locate the printer, and then click [Change].

A confirmation message appears.

3. Click [Continue].

A confirmation message appears.

- 4. Click [OK].
- 5. On the Apple menu, click [Chooser].
- 6. Click the [AdobePS] icon.
- 7. In the [AppleTalk zone:] list, select the zone you changed.
- 8. In the [Select a PostScript Printer:] list, select the printer you want to use.
- 9. Close the [Chooser] dialog box.

Mac OS X

1. On the [Utility] menu, click [Select Zone...].

The zone to which the printer belongs and the available zone list appear.

2. Select the zone which you want to locate the printer in, and then click [Change].

A confirmation message appears.

3. Click [Continue].

A confirmation message appears.

- 4. Click [OK].
- 5. On the [Printer Utility for Mac] menu, click [Choose Printer...].
- 6. In the [Available Network Zones:] list, select the zone you changed.

7. In the [Available Printers:] list, select the model of printer in use, and then click [Choose].

Displaying the Printer Status

You can display and confirm the current status of the printer.

1. Select [Display Printer Status...] on the [Utility] menu.

The current status of the printer appears.

2. Confirm the current status of the printer.

You can confirm the memory capacity, the VM (Virtual Memory) space, the hard disk drive status and available space on the hard disk drive. You can also confirm the zone to which the printer belongs to.

3. Click [OK].

Launching the Dialogue Console

You can create and edit a PostScript file for printing, and then download it to the printer.

- "Launch Dialogue Console" is recommended for users with an understanding of PostScript.
- Do not download any file other than PostScript files to the printer.
- "Launch Dialogue Console" must be used at your own responsibility.
- 1. Select [Launch Dialogue Console...] on the [Utility] menu.

Open the editing screen. The Dialogue Console menu bar appears.

2. Type the PostScript command in the editor screen.

To edit a PostScript file, select [Open] on the [File] menu to open it.

You can search or replace a character string by using the [Search] menu.

After editing the PostScript file, select [Download Top Window] on [Console] menu to start printing.

The PostScript file is sent to the printer.

The [Reply from Printer] box opens, depending on the PostScript file you sent.

4. Select [Return To Main Menu] on the [Console] menu to close the PostScript file.

5. Appendix

Trademarks

Microsoft[®], Windows[®], Windows Server[®], and Windows Vista[®] are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Adobe, Acrobat, Acrobat Reader, Adobe Type Manager, PageMaker, PostScript, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Apple, AppleTalk, Bonjour, EtherTalk, Macintosh, Mac OS, and TrueType are registered trademarks of Apple Inc., registered in the United States and other countries.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Ricoh Company. Ltd. is under license.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

• The product names of Windows 2000 are as follows:

Microsoft® Windows® 2000 Professional

Microsoft® Windows® 2000 Server

Microsoft® Windows® 2000 Advanced Server

• The product names of Windows XP are as follows:

Microsoft® Windows® XP Professional

Microsoft® Windows® XP Home Edition

Microsoft® Windows® XP Media Center Edition

Microsoft® Windows® XP Tablet PC Edition

• The product names of Windows Vista are as follows:

Microsoft® Windows® Vista Ultimate

Microsoft® Windows® Vista Business

Microsoft® Windows® Vista Home Premium

Microsoft® Windows® Vista Home Basic

Microsoft® Windows® Vista Enterprise

• The product names of Windows Server 2003 are as follows:

Microsoft® Windows Server® 2003 Standard Edition

Microsoft® Windows Server® 2003 Enterprise Edition

Microsoft® Windows Server® 2003 Web Edition

5

Microsoft® Windows Server® 2003 Datacenter Edition

• The product names of Windows Server 2003 R2 are as follows:

Microsoft® Windows Server® 2003 R2 Standard Edition

Microsoft® Windows Server® 2003 R2 Enterprise Edition

Microsoft® Windows Server® 2003 R2 Datacenter Edition

• The product names of Windows Server 2008 are as follows:

Microsoft® Windows Server® 2008 Standard

Microsoft® Windows Server® 2008 Enterprise

Microsoft® Windows Server® 2008 Datacenter

INDEX

A	Fold Type93
About This Machine6	Functions
Adjust Fore Edge Cut Position	Printer Utility for Mac111
Adjust Image Position(Across Binding Edge)99	H
Adjust Image Position(Along Binding Edge)99	How to Read This Manual9
B	<u> </u>
Bluetooth	Image Smoothing107
Adding a Printer44	Initializing Printer Disk113
Booklet Binding Edge90	Input Slot85
С	Installing
Changing to EtherTalk	Printer Utility for Mac109
Mac OS	Installing Adobe Type Manager
Collate91	Mac OS59
Copies87	Installing Screen fonts Mac OS59
Copy and Document Server Reference6	Installing the PostScript 3 Printer Driver and PPD File
Cover Sheet Image Position (Across Binding Edge)	Mac OS57
103	Installing the PPD Files
Cover Sheet Image Position (Along Binding Edge)	Mac OSX61
102	Installing the Printer Driver Using USB
Cut Position Adjustment (Fore Edge)101	Windows 200036
Cut Position Adjustment (Head Edge)100	Windows Me36
Cut Position Adjustment (Tail Edge)100	Windows Vista
D	Windows XP/2003/2003 R236
Deleting a Hold Print File79	J
Deleting a Locked Print File76	Job Type68
Deleting a Sample Print File73	
Deleting a Stored Print File82	<u></u>
Deleting Fonts113	Launching the Dialogue Console117
Destination Tray92	M
Displaying Printer's Fonts112	Mac OS X61
Displaying the Printer Status117	
Dithering106	Multi-sheet Fold101
Document Server82	N
Downloading PostScript Files115	Network and System Settings Guide6
Downloading PS Fonts112	-
Draw Border91	0
Duplex Printing88	Orientation86
F	Other manuals6
	P
Finishing Size (Along Binding Edge)101	Page Setup114
Fit to Paper84	Pages per Sheet89
	1 4900 por oncom

Pages per Sheet Layout90
Paper Size84
Paper Type92
Perfect Binding Cover Sheet Print102
Perfect Binding Cutting Options97
Perfect Binding Finishing Size99
Perfect Binding Position98
Perfect/Ring Binding96
PostScript 3 Supplement6
Print Mode88
Printer Reference6
Printer Utility for Mac109, 114, 116
Printing Fonts Catalog114
Printing Fonts Sample114
Printing with Parallel Connection
Windows 200040
Punch93
R
Reduce/Enlarge104
Renaming the Printer114
Resolution85
Restarting the Printer115
Ring Binding Position97
Rotate by 180 degrees86
S
Scanner Reference
Security Reference
Selecting the Zone116
Setting Up Options67
Mac OSX
Setting Up PPD Files
Mac OS58
Setting Up the PPD File
Mac OSX61
Staple92
Т
Trouble Shooting6
U
User Code 83

Jsing Bonjour Mac OSX Jsing USB Interface Mac OSX	
W	
Watermark	104
Watermark Angle	106
Watermark Font	105
Watermark Size	105
Watermark Style	106
Watermark Text	104
Windows 2000	
printer properties, PostScript 3	50
Windows Server 2003	
printer properties, PostScript 3	51
Windows Vista	
printer properties, PostScript 3	53
Windows XP	
printer properties, PostScript 3	51
Z	
Z-fold	95

MEMO

MEMO

