Please note the following corrections to the manuals for this machine.

Operator's Guide

Maintenance > Maintaining Your Machine

Additional information

Cleaning the TIM-Mag Unit




 Before cleaning the TIM-Mag unit, turn off the machine and wait for a while to allow the machine to cool down fully. Not doing so could result in burns.


Cleaning the Unit

Wipe the surface of the glass, shading correction plate, and glass scale of the revolver using the cleaning cloth provided with the machine. Use a soft dry cloth to wipe the counter roller of the revolver.


- 1. Open the front cover.
- 2. Lower the lever C1.

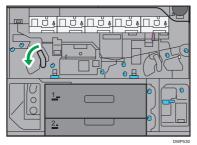


3. Pull out the drawer unit until it stops.

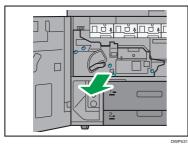


4. Raise the cover.

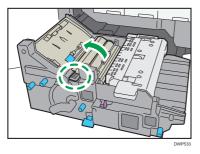

5. Wipe the glass surface in one direction, either from the back to the front or from the front to the back.

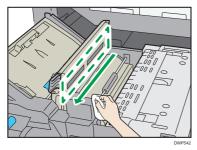


6. Wipe the counter roller on the revolver.

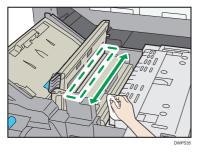




- The revolver consists of the counter roller, shading correction plate, and glass scale. When you turn off the power, the counter roller stops at the upper position.
- The shading correction plate is a plate with a white curved surface between the black counter rollers. The glass scale is located between the white counter rollers.

7. While pressing a cloth on the counter roller, push the roller toward the front or back to turn the revolver.

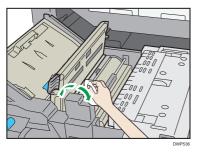


8. Repeat Steps 6 and 7 to clean the counter roller, the shading correction plate, and the glass scale.


Wipe the shading correction plate and the glass scale in one direction, either from the back to the front or from the front to the back, using the cleaning cloth provided with the machine.

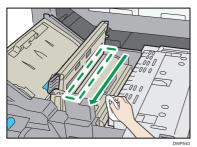


9. Lower the cover.

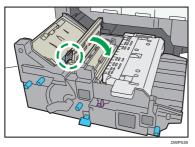

10. Push the drawer into its original position.

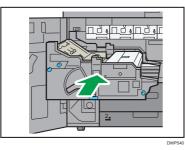

11. Raise the lever C1.

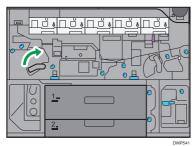

12. Close the front cover.

Maintenance and Management

Daily Maintenance > Maintaining Your Machine > Cleaning the TIM-Mag Unit

Correction	
Error	Correction
Cleaning the Unit	Cleaning the Unit
Wipe the unit using a soft and dry cloth. Use the cleaning cloth provided with the machine to wipe the glass.	Wipe the surface of the glass, shading correction plate, and glass scale of the revolver using the cleaning cloth provided with the machine. Use a soft dry cloth to wipe the counter roller of the revolver.

Error	Correction
5. Wipe the glass surface.	5. Wipe the glass surface in one direction, either from the back to the front or from the front to the back.
6. Wipe the <u>transport</u> roller on the revolver.	6. Wipe the <u>counter</u> roller on the revolver.
revolver.	Tevorver.
• The revolver consists of the transport roller, bias roller, shading correction plate, and glass scale. When you turn off the power, the transport roller stops at the upper position.	 Note The revolver consists of a counter roller, a shading correction plate, and a glass scale. When you turn off the power, the counter roller stops at the upper position. The shading correction plate is a plate with a white curved surface between the black counter rollers. The glass scale is located between the white counter rollers.

Error	Correction
<text></text>	<text></text>
8. Repeat Steps 6 and 7 to clean <u>the shading correction plate and glass scale in the same manner as the transport roller.</u>	8. Repeat Steps 6 and 7 to clean the counter roller, the shading correction plate, and the glass scale. Wipe the shading correction plate and the glass scale in one direction, either from the back to the front or from the front to the back, using the cleaning cloth provided with the machine.