Printer/Scanner Unit Type 2045

Operating Instructions Scanner Reference



- (1) Network Scanner
- 2 Preparations for Use as a Network Scanner
- 3 Setting Originals
- 4 Sending Stored Scan Data by E-mail
- 5 Using the Network Delivery Scanner Function
- 6 Using the Document Server Function
- 7 Using the Network TWAIN Scanner Function
- **8** Appendix

Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine, all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

The scanner function is available when the Printer/Scanner option is installed in the machine.

Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

Manuals for This Machine

The following manuals describe the operational procedures of this machine. For particular functions, see the relevant parts of the manual.

Note

- ☐ Manuals provided are specific to machine type.
- ☐ Adobe Acrobat Reader is necessary to view the manuals as a PDF file.
- ☐ Two CD-ROMs are provided:
 - CD-ROM 1 "Operating Instructions for Printer / Scanner"
 - CD-ROM 2 "Scanner Driver & Document Management Utilities"

General Settings Guide

Provides an overview of the machine.

It also describes System Settings (such as paper trays and user codes settings), Document Server functions, and troubleshooting.

Network Guide (PDF file - CD-ROM1)

Describes procedures for configuring the machine and computers in a network environment.

Copy Reference

Describes operations, functions, and troubleshooting for the machine's copier function.

Facsimile Reference < Basic Features>

Describes operations, functions, and troubleshooting for the machine's facsimile function.

❖ Facsimile Reference <Advanced Features>

Describes advanced functions and settings for key operators.

Printer Reference 1

Describes system settings and operations for the machine's printer function.

❖ Printer Reference 2 (PDF file - CD-ROM1)

Describes operations, functions, and troubleshooting for the machine's printer function.

Scanner Reference (this manual) (PDF file - CD-ROM1)

Describes operations, functions, and troubleshooting for the machine's scanner function.

Manuals for DeskTopBinder V2 Lite

DeskTopBinder V2 Lite is a utility included on the CD-ROM labeled "Scanner Driver & Document Management Utilities".

- DeskTopBinder V2 Lite Setup Guide (PDF file CD-ROM2)
 Describes installation of, and the operating environment for DeskTop-Binder V2 Lite in detail. This guide can be displayed from the [Setup] dialog box when DeskTopBinder V2 Lite is installed.
- DeskTopBinder V2 Lite Introduction Guide (PDF file CD-ROM2)
 Describes operations of DeskTopBinder V2 Lite and provides an overview of its functions. This guide is added to the [Start] menu when DeskTopBinder V2 Lite is installed.
- Auto Document Link Guide (PDF file CD-ROM2)
 Describes operations and functions of Auto Document Link installed with DeskTopBinder V2 Lite. This guide is added to the [Start] menu when DeskTopBinder V2 Lite is installed.

Manuals for ScanRouter V2 Lite

ScanRouter V2 Lite is a utility included on the CD-ROM labeled "Scanner Driver & Document Management Utilities".

- ScanRouter V2 Lite Setup Guide (PDF file CD-ROM2)
 Describes installation of, settings, and the operating environment for Scan-Router V2 Lite in detail. This guide can be displayed from the [Setup] dialog box when ScanRouter V2 Lite is installed.
- ScanRouter V2 Lite Management Guide (PDF file CD-ROM2)
 Describes delivery server management and operations, and provides an overview of ScanRouter V2 Lite functions. This guide is added to the [Start] menu when ScanRouter V2 Lite is installed.

Other manuals

- PS3 Supplement (PDF file CD-ROM1)
- Unix Supplement (Available from an authorized dealer, or as a PDF file on our Web site.)

TABLE OF CONTENTS

Manuals for This Machine	i
How to Read This Manual	1
Symbols	
Names of Major Options	2
1. Network Scanner	
Outline	3
E-mail	
Network Delivery Scanner Document Server	
Network TWAIN Scanner	
Names and Functions of Control Panel	
Display Contents	
2. Preparations for Use as a Network Scanner	
Initial Scanner Setup	11
Default Settings	11
Basic Settings	
Scanner Settings	
Subject Settings	
Installing Software	
Software for Using a Network TWAIN Scanner	
Software for Using the Network Delivery Scanner Function	
DeskTopBinder V2 Lite	
Software Supplied on CD-ROM	27
3. Setting Originals	
Placing Originals	31
Placing on the Exposure Glass	
Placing in the Auto Document Feeder Original Orientation and Scan Area	
For a Network Delivery Scanner and E-mail	
For a Network TWAIN Scanner	
Scanning Originals in Several Times	
4. Sending Stored Scan Data by E-mail	
Preparation for Sending by E-mail	
Screen Configuration	
Procedure for Sending E-mail	
Simultaneous Storage and Sending of E-mail	
Checking the Status of E-mail	49

5. Using the Network Delivery Scanner Function

Preparation for Delivering	
Delivering Stored Scan Data	
Delivery Procedure	
Simultaneous Delivery and Storage	
Checking the Status of Delivery	60
6. Using the Document Server Function	
Storing Data	62
Storage Procedure	62
Viewing a List of Stored Files	66
Viewing the List	67
Searching for Files	70
Delivering or Sending Stored Files	71
Managing Stored Files	72
Deleting Files	
Changing File Information	73
7. Using the Network TWAIN Scanner Function	
Preparation for Using the Network TWAIN Scanner	75
Scanning Originals	76
Functions of the TWAIN Driver	78
8. Appendix	
Relationship between Resolution and Data Size	79
For Use as E-mail, Network Delivery Scanner, or Document Server	
For Use as Network TWAIN Scanner	
Relationship between File Type Specified and File Type Used When Sending	E-mail 82
Troubleshooting	83
When Scanning Is Not Performed as Expected	83
When the Delivery Function Does Not Work	
When an Error Message Appears on the Control Panel	
When an Error Message Appears on the Computer	
Specifications	93
INDEV	~4

How to Read This Manual



In this manual, the following symbols are used:

∰Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates the prior knowledge or preparations required before operating.

Note

This symbol indicates precautions for operation or actions to take after misoperation

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

This symbol indicates a reference.

[]

Keys that appear on the machine's panel display.

[]

Keys and buttons that appear on the computer's display.

Keys built into the operation panel of the machine.

Keys on the computer's keyboard.

Names of Major Options

Major options of this machine are referred to as follows in this documentation:

• Printer/Scanner Unit Type 2045 → printer/scanner controller

The following software products are referred to using a general name:

- DeskTopBinder V2 Lite and DeskTopBinder V2 Professional → DeskTopBinder V2 Lite/Professional
- ScanRouter V2 Lite and ScanRouter V2 Professional (optional) → ScanRouter V2 Lite/Professional

1. Network Scanner

Outline


By installing the printer/scanner controller, the machine can be used as a network scanner.

As a network scanner, the machine can send e-mail, operate as a network delivery scanner, store scan data in the Document Server, and operate as a network TWAIN scanner.

E-mail

A scanned image that is attached to an e-mail can be delivered using the e-mail system through a LAN or the Internet.

p.39 "Sending Stored Scan Data by E-mail"

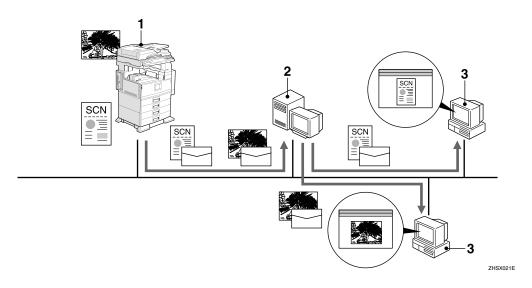

1. This machine

A scanned image that is attached to an e-mail can be delivered to an e-mail server. In combination with the document storage function, scanned images and documents that have been temporarily stored can be delivered all at once.

2. E-mail server

An e-mail server is the SMTP server used for an e-mail system. It transfers a received e-mail to a specified destination through a LAN or the Internet.

3. Client computer

An e-mail with images attached is received from the e-mail server using e-mail software.

Check the content of the images using an application appropriate for selected file type.

Network Delivery Scanner


The machine is used as a delivery scanner with ScanRouter V2 Lite/Professional. The data from the originals scanned by the machine is stored in the delivery server and delivered to the folders of client computers on the same network.

₽ Reference

p.51 "Using the Network Delivery Scanner Function"

Note

☐ When the optional ScanRouter V2 Professional is used, the machine can also deliver scan data using e-mail, and documents can be viewed from a client computer using a Web browser.

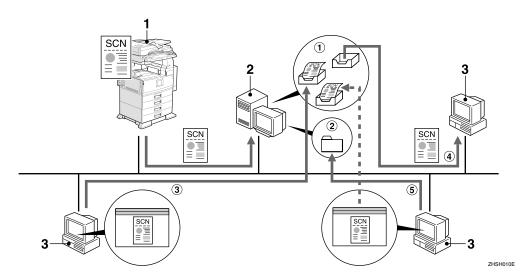

1. This machine

The data from the originals scanned by the scanner is sent to the delivery server. When used with the Document Server, multiple documents can be stored and then delivered.

2. Delivery server

ScanRouter V2 Lite/Professional is installed in this computer which is used as a delivery server.

Received data is delivered to the in-tray of the specified destination (① in the figure). According to the settings of the intray, the data is stored in the in-tray or in a Windows folder (② in the figure).

3. Client computer

The contents of a stored document can be checked in the following ways:

- View the document in the in-tray using DeskTopBinder V2 Lite to check the contents. (③ in the figure)
- Use Auto Document Link to receive the document stored in the in-tray, and check the contents with an application corresponding to the file format. (4) in the figure)
- Access the Windows folder where the document is stored via the network, and check the contents with an application corresponding to the file format. (⑤ in the figure)

For more information about ScanRouter V2 Lite, DeskTopBinder V2 Lite, or Auto Document Link, see the respective documentation. See p.i "Manuals for This Machine".

Document Server


The data from a scanned original is stored as a document on the hard disk of the machine, and can be viewed, copied, or deleted using DeskTopBinder V2 Lite/Professional from a client computer via a network. A document can be searched for using the user name or the document name. Also, others can be kept from viewing a document by setting a password for the document.

p.61 "Using the Document Server Function"

The documents stored in the hard disk of the machine can be viewed, downloaded, printed, or deleted using Web browser from a client computer.

For more information about setting Web browser, see Network Guide.

For details about how to view, download, print, or delete stored documents, see *General Settings Guide*.

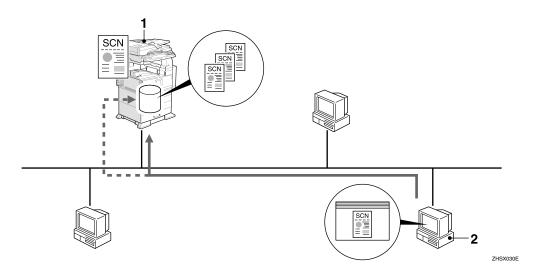

1. This machine

The data from the originals scanned by the scanner are stored.

2. Client computer

A stored document can be viewed, copied, or deleted by connecting to the machine using DeskTopBinder V2 Lite/Professional.


Also, a document stored in the machine using a Web browser can be viewed, downloaded or deleted.

For more information about DeskTopBinder V2 Lite, see the DeskTopBinder V2 Lite manuals. See p.i "Manuals for This Machine".

Network TWAIN Scanner

The scanning function of this machine can be used from a client computer via a network (Ethernet, IEEE 1394 [optional], or a wireless LAN). Originals can be scanned with the same operation used for SCSI- and USB-connected scanners.

p.75 "Using the Network TWAIN Scanner Function"

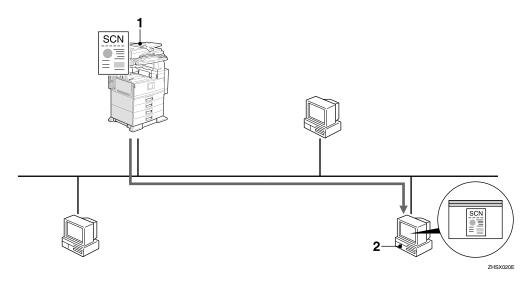

1. This machine

The scanning function of the machine can be used from a client computer via a network.


2. Client computer

Originals are scanned using the TWAIN driver for the machine from an application.

П

Names and Functions of Control Panel

This illustration shows the control panel when options are installed.

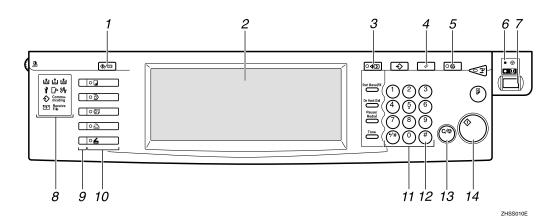

1. [User Tools/Counter] key

Use to change default or operation parameters according to the operating conditions.

2. Display

Shows the operation status and messages.

3. [Check Modes] key

Press to check the current settings.

4. [Clear Modes] key

Press to clear the current settings.

5. [Energy Saver] key

Press this key for about one second to begin warm-up.

Pressing this key again while in warm-up mode cancels warm-up.

Note

☐ This key is inactive while scanning or setting scanner defaults.

6. Main power indicator and power indicator

The main power indicator lights up when the main power switch is set to on. The power indicator lights up when the machine is on.

#Important

☐ Do not turn off the main power while the power indicator is lit or blinking. Doing so may cause a failure of the hard disk.

7. Operation switch

Press this switch to turn the machine on. The power indicator lights up. To turn the machine off, press this switch again.

Note

☐ This key is inactive while setting scanner defaults.

8. Indicators

Show errors and machine status.

: Add Staple indicator

■: Add Paper indicator : Service Call indicator

: Open Cover indicator

%: Misfeed indicator

For more information, see *General Settings Guide*.

9. Status indicators

Show the status of the selected function.

- When lit yellow, the corresponding function is selected.
- When lit green, the corresponding function is active.
- When lit red, the corresponding function is interrupted. Press the respective key, and then follow the instructions that appear on the screen.

10. Function keys

Press the **[Copy]**, **[Document Server]**, **[Facsimile]**, **[Printer]**, or **[Scanner]** key to activate the respective function. The display content changes accordingly.

The indicator for the selected function lights up.

11. Number keys

Use to enter numeric values.

12. [#] key (Enter key)

Use to enter a numeric value.

13. [Clear/Stop] key

- Clear: Clears an entered numeric value
- Stop: Stops scanning

14. [Start] key

Use to begin scanning, file storing, or delivery.

Display Contents

The normal screen configuration is as follows.

The display's contents differ depending on the function.

𝚱 Note

☐ The Copy screen is set as the default screen when the machine is turned on. You can change this setting in the System Settings. See *General Settings Guide*.

Using as a network TWAIN scanner

When using the machine as a network TWAIN scanner, it is not necessary to press the **[Scanner]** key on the control panel. When the TWAIN driver becomes active on a client computer, the display automatically switches to the following screen.



Press [Cancel] to use functions other than the network TWAIN scanner function.

Using as a network delivery scanner

Press the **[Scanner]** key to display the Network Delivery Scanner screen (when **[Delivery Server]** has been selected in **[Destination List Priority]**). If the Network TWAIN Scanner screen appears, press **[Cancel]**.



₽ Reference

For information about Destination List Priority, see p.16 "Scanner Settings".

Using e-mail

Press the **[Scanner]** key to display the E-mail screen (when **[E-mail]** has been selected in **[Destination List Priority]**). If the Network TWAIN Scanner screen appears, press **[Cancel]**.



For information about Destination List Priority, see p.16 "Scanner Settings".

2. Preparations for Use as a Network Scanner

To use the machine as a network scanner, you must make settings required for use as a scanner as well as basic settings for use in a network.

First, see *General Settings Guide* for details about how to make basic settings, and then make scanner settings.

For more information about settings for sending by e-mail, see Network Guide.

Initial Scanner Setup

This section explains all required settings and procedures for using the machine as a network scanner.

Default Settings

The settings for using the network scanner functions of the machine are listed below. Make the necessary settings.

∰Important

☐ Items marked ○ should be set if required.

Scanner Features

For explanations of scanner settings, see the corresponding pages.

Settings		Default	TWAIN *1	Delivery *2	E-mail *3	Store *4
Basic Settings	Scan Type	Text (Print)		0	0	0
See p.13 "Basic Settings".	Resolution	200 dpi		О	О	0
	Image Density	Auto Image Density (Medium)		О	О	О
	Scan Size	Auto Detect		О	О	0
Scanner Settings See p.16 "Scanner Settings".	Send/Store Connection Timeout	10 sec	0	0	0	О
	Compression (Black & White)	On		0	0	О
	Compression (Gray Scale)	Standard		0	0	О
	Destination List Priority	E-mail		0	0	

Settings		Default	TWAIN *1	Delivery *2	E-mail *3	Store *4
Scanner Settings See p.16	Update Delivery Server Destination List			0		
"Scanner Settings".	Sender's Name Default	No			О	
	Max. E-mail Size	2048KB			О	
	Divide & Send E-mail	Yes (per max. size)			О	
mation guage Job Re in Ado	E-mail Infor- mation Lan- guage	British Eng- lish			О	
	Job Reset Time in Adding Original	Off		0	0	О
	Original Setting	1 sided orig- inal		О	О	О
	Original Orientation Priority	hr		О	О	О
	Mixed Original Sizes Priority	Off		О	0	0
	Switch to Batch	SADF		0	О	0
	File Type Priority	Multi-page: TIFF			О	
	Print & Delete Scanner Journal	Delete Old- est Only		О	О	
	Select Title	Title 1		О	О	
Subject Settir See p.20 "Sub	ngs pject Settings".	Not Programmed		О	0	

 ^{*1} Settings for the network TWAIN scanner function
 *2 Settings for the network delivery scanner function
 *3 Settings for the e-mail function
 *4 Settings for the Document Server function

Basic Settings

Various basic settings (scan type, resolution, image density, scan size) can be set. When using the same type of original repeatedly, storing the optimum settings in advance makes them easy to select whenever you deliver or store scan data.

𝚱 Note

- ☐ Ten sets of settings named "Initial Setup" and "Program 1" to "Program 9" can be stored for quick recall. The settings stored as Initial Setup are the scanning defaults. If the settings are not selected before scanning, the originals are scanned with the settings stored in the Initial Setup.
- ☐ "Program 1" to "Program 9" can be changed to names of up to 20 characters.

The Basic Settings consist of the following items:

Scan Type

Select the scan type suitable for the original from the following:

- Text (Print)
 For standard originals containing mainly text (Print)
- Text (OCR)
 For standard originals containing mainly text (for OCR)
- Text/Photo
 For originals containing a mix-ture of text and photographs
- Photo
 For originals containing photographs and other pictures (two-value)
- Gray Scale
 For originals containing photographs and other pictures (multi-value)

Note

- ☐ Printer printing is best scanned with Text (Print). Text (OCR) is suitable for higher OCR accuracy.
- ☐ An image is scanned in black & white with Photo, and in gray-scale with Gray Scale. As a general rule, scanning for the purpose of printing is best done with Photo and scanning for viewing on the computer screen with Gray Scale.

Resolution

Select the resolution from 100 dpi, 200 dpi, 300 dpi, 400 dpi, or 600 dpi.

Image Density

Select the image density in seven steps from Lighter (1) to Darker (7) or use Auto Image Density.

Scan Size

Select the size of the original to be scanned.

- When [Auto Detect] is selected, the auto detect function of the machine is used to set the original size.
- When the size is specified, scanning is performed for that size, regardless of the actual size of the original. The following sizes can be selected:

A3 \square , A4 \square , A4 \square , A5 \square , A5 \square , A5 \square , 11 x 17 \square , 8 $^{1}/_{2}$ x 14 \square , 8 $^{1}/_{2}$ x 13 \square , 8 $^{1}/_{2}$ x 11 \square , 8 $^{1}/_{2}$ x 11 \square , 5 $^{1}/_{2}$ x 8 $^{1}/_{2}$ \square , B4 JIS \square (Japanese Industrial Standard), B5 JIS \square , B5 JIS \square , Custom Size

Note

☐ When **[Custom size]** is selected, the dimensions of the scan area (width and height) can be specified.

Setting procedure

1 Press the [User Tools/Counter] key.



- **2** Press [Scanner Features].
- Make sure that the [Basic Settings] tab is displayed.
- 4 Check that [Program/Change] is selected, and then select the name of the basic settings set you want to program.



The soft keyboard is displayed for entering a name for the set of settings.

Enter the name, and then press [OK].

₽ Reference

For information about entering characters, see *General Settings Guide*.

The screen for the basic settings appears.


6 Select the item, and then select the value to be set.

To select an item, touch its key on the screen. The item is highlighted.


Example: resolution setting



Example: image density setting



- ☐ When selecting [Custom size] for [Scan Size], see p.15 "Selecting a custom size".
- When all settings have been made, press [OK].
- To program another basic settings set, repeat the procedure from step 4.
- When all settings have been made, press [Exit].




Press [Exit].

The main menu reappears.

Selecting a custom size


When selecting [Custom size] as the scan size, follow the procedure below.

1 Press [Custom size] on the Scan Size Setting screen.




2 Enter the original size with the number keys.

Select and enter values for [X1] and [Y1].




Enter the scan starting point in relation to the standard scan starting point.

Select and enter values for [X2] and [Y2].




4 Enter the scan size (area) with the number keys.

Select and enter values for [X3] and [Y3].



Depending on how the original is positioned, the scan area will be as shown.

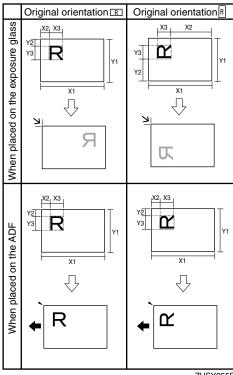

ZHSY055E

The range of possible original sizes and scan sizes is as follows:

Original Size


X1: 10 mm - 432 mm (0.4" - 17.0") Y1: 10 mm - 297 mm (0.4" - 11.7")

• Scan Size

X3: 10 mm - 432 mm (0.4" - 17.0") Y3: 10 mm - 297 mm (0.4" - 11.7")

Keep the scan area settings within these range.

When all dimensions are entered, press [OK].



Make sure that the area specified in step 4 (X3 and Y3) is shown next to the [Custom size] field, and then press [OK].



- **7** Press [Exit].
- 8 Press [Exit].

The main menu reappears.

Deleting programmed scan settings

- 1 Press the [User Tools/Counter] key.
- 2 Press [Scanner Features].
- Make sure that the [Basic Settings] tab is displayed.
- 4 Press [Delete].
- **5** Select the set of settings you want to delete.



A confirmation message appears.

6 Press [Yes].

- **7** Press [Exit].
- 8 Press [Exit].

The main menu reappears.

Scanner Settings

This section explains how to set the defaults for scan settings such as the compression level for scan data and how the machine switches between the e-mail or network delivery scanner or Document Server function and the network TWAIN scanner function.

The scanner settings consist of the following. For the list about settings and defaults, see p.11 "Scanner Features".

Send/Store Connection Timeout

When the machine is functioning as an e-mail or network delivery scanner or Document Server, a scanning request to the machine as a TWAIN scanner will switch the machine to the network TWAIN scanner function. This setting determines the delay until the machine switches to network TWAIN scanner function.

- When [Immediate] is selected, the machine will switch to the network TWAIN scanner function at once.
- When **[Set Time]** is selected, you can enter the delay time with the number keys (3 to 30 seconds). The machine switch to the network TWAIN scanner function when the time set here passes after the last key operation.

Compression (Black & White)

This setting determines whether image data scanned with the black-and-white setting is to be compressed.

Note

- ☐ The actual time required for data transfer will vary depending on the data size and network load.
- ☐ Compression reduces the time required for transferring the scan data to the computer or email server.

Compression (Gray Scale)

This setting determines to what extent image data scanned with the grayscale setting is to be compressed. You can select [Standard], [High], [Low], or [Off].

Note

- ☐ The compression ratio decreases in the order [High], [Standard], [Low], and [Off], and the time required for data transfer increases accordingly.
- ☐ The actual time required for data transfer will vary depending on the data size and network load.

Destination List Priority

Select a destination list to be displayed when the machine is in the initial state. Select either [Delivery Server] or [E-mail].

Update Delivery Server Destination List

To update the Delivery Server Destination List, press [Update Delivery Server Destination List].

Ordinarily, the Delivery Server Destination List is automatically updated. This function allows updating at any time.

Sender's Name Default

Select whether an administrator is registered as a sender or a sender is specified each time an e-mail is sent.

- Select **[No]** when a sender is to be specified each time.
- Select **[Yes]** when an administrator is to be the sender.

#Important

☐ It is recommended that a password be set to prevent the sender's name from being misused.

Max. E-mail Size

Select whether the size of an e-mail is limited or not.

When **[On]** is selected, enter the size limit (64 to 102,400 KB) using the number keys.

Ø Note

☐ When the SMTP limits the size, match that setting.

Divide & Send E-mail

This function is effective only when [On] is selected for [Max. Email Size].

Select whether or not an image exceeding the size specified in [Max. E-mail Size] should be divided and sent using more than one e-mail. Select either [No], [Yes (per page)], or [Yes (per max. size)].

Ø Note

- ☐ When [Multi-page: TIFF] or [Multi-page: PDF] is selected for File Type Priority, the image will not be divided even if [Yes (per page)] is selected.
- ☐ When [Yes (per max. size)] is selected, some received files may not be able to be restored, depending on the type of e-mail software.

- ☐ When **[No]** is selected, the e-mail is not sent if its size exceeds the limit, and an error message appears. The scanned data is discarded.
- ☐ Set the maximum e-mail size within the capacity of the SMTP server.

❖ E-mail Information Language

Select a language for E-mail Information Language with which Title, Document name, Sender's name and others are sent.

Select one of the following 18 languages: British English, American English, German, French, Italian, Spanish, Dutch, Portuguese, Polish, Czech, Swedish, Finnish, Hungarian, Norwegian, Danish, Japanese, Simplified Chinese, and Traditional Chinese.

Note

☐ The e-mail text is a template and cannot be changed.

❖ Job Reset Time in Adding Original

When SADF mode is specified, select whether or not the machine waits for another original to be set after all originals in the Auto Document Feeder (ADF) or on the exposure glass have been scanned.

Note

☐ If either of SADF mode and Batch mode is not specified when scanning, this setting becomes invalid and scanning operation is completed before placing originals.

- If **[Off]** is selected, the countdown does not occur and the machine enters the waiting state when all originals in the ADF have been scanned in SADF mode or Batch mode until another original is inserted or the **[#]** key is pressed.
- If **[On]** is selected, enter the number of seconds (3 to 900) for the Job Reset Time in Adding Original with the number keys. When an original is placed within this time, it is scanned as part of the same document as the previously scanned originals. However, when Batch mode is specified, the waiting state is kept regardless of the setting time until another original is inserted or the **[#]** key is pressed.

Original Setting

Set the default for whether originals are one-sided or two-sided and if two-sided, the relationship between those sides. When the originals are always the same, set this for the default to make operation easier. You can select "1 Sided Original", "2 Sided Orig.: T to T" (Top to Top), or "2 Sided Orig.: T to B" (Top to Bottom).

₽ Reference

p.35 "Original Orientation and Scan Area"

Original Orientation Priority

Select the default for original placement orientation. When originals are always positioned the same way, select that orientation as the default to make operation easier.

p.35 "Original Orientation and Scan Area"

Mixed Original Sizes Priority

This setting determines whether the original size is to be automatically detected when originals of different sizes are inserted in the ADF. You can select [On] or [Off].

Note

- ☐ If the original size is specified when scanning, this setting is ignored.
- ☐ When **[Off]** is selected and originals of different sizes are placed in the ADF, the size of the first page is detected as the max. size and all originals are scanned as that size.

Switch to Batch

When placing additional originals in the ADF, select whether to add sheets individually or to add batches.

∅ Note

☐ Even if [On] is selected for [Job Reset Time in Adding Original], the countdown to scan another original stops when scanning conditions are changed, the exposure glass is used to scan, or the mode of the machine is switched to another mode such as copier mode. Press the [Start] key to restart scanning.

❖ File Type Priority

Select whether to send the data of scanned originals using a single page or multiple pages.

When sending using multiple pages, select either TIFF or PDF.

𝒯 Note

☐ If you specify a multi-page TIFF format for data in a JPEG format, the format is automatically changed to a PDF format.

Print & Delete Scanner Journal

Select whether to print the Scanner Journal automatically when the number of delivered e-mails reaches 50.

Note

- ☐ When printed, all records are deleted after printing. When not printed, records over the limit are automatically deleted in succession from the oldest record.
- ☐ While the journal is being printed, sending e-mail will be on standby, and will not be sent.

Select Title

Select what titles are displayed on the screen. Selecting a title on the screen will display the destinations programmed for that title. This allows for easy selection of destinations including e-mail destinations. Select either [Title 1] (ten titles), [Title 2] (ten titles), or [Title 3] (five titles).

Setting procedure

- 1 Press the [User Tools/Counter] key.
- 2 Press [Scanner Features].
- Press the [Scanner Settings] tab.
- 4 Press the item to be set.



Example: Send/Store Connection Timeout setting

5 Change the setting.



- To select an item, touch its key on the screen. The item is highlighted.
- To enter numbers, use the number keys.

Note

- ☐ To cancel changing a setting, press **[Cancel]**. The setting returns to the previous condition.
- 6 Press [OK].
- Repeat steps 4 to 6 to make other settings.
- 8 Press [Exit].
- 9 Press [Exit].

The main menu reappears.

Subject Settings


Subject information can be added to the scan data files. This information is added to the data to be delivered. When the file is sent by e-mail with the optional ScanRouter V2 Professional, the subject is automatically entered as the subject of the e-mail. If you often send files with similar content, storing subject names will allow you to easily select a subject for delivery.

The subject can be up to 20 characters long. Up to 12 subjects can be stored.

Setting procedure

This section describes the steps for making subject settings.

- 1 Press the [User Tools/Counter] key.
- 2 Press [Scanner Features].
- Press the [Subject Settings] tab.
- 4 Check that [Program/Change] is selected, and then select the key you want to program.



The soft keyboard is displayed for entering a subject.

5 Enter the subject string.

For information about how to enter characters, see *General Settings Guide*.

Note


☐ If the selected key already has a programmed subject, it can be changed.

- 6 Press [OK].
- 7 To program more subjects, repeat steps 4 to 6.
- 8 Press [Exit].
- 9 Press [Exit].

The main menu reappears.

Deleting programmed subject settings

- 1 Press the [User Tools/Counter] key.
- **2** Press [Scanner Features].
- Press the [Subject Settings] tab.
- 4 Press [Delete].



5 Select the subject you want to delete.



A confirmation message appears.

- 6 Press [Yes].
- To delete more subjects, repeat steps 5 to 6.
- 8 Press [Exit].
- 9 Press [Exit].

The main menu reappears.

Installing Software

The machine comes with two CD-ROMs containing various software.

The CD-ROM labeled "Scanner Driver & Document Management Utilities" contains the necessary software to use the machine as a network scanner. The CD-ROM labeled "Printer Driver & Utilities" contains the necessary software to use the machine as a printer.

This section explains the software contained on the "Scanner Driver & Document Management Utilities" CD-ROM.

For information about the software contained on the "Printer Driver & Utilities" CD-ROM, see *Printer Reference*.

Auto Run Program

When the CD-ROM is inserted into a computer in Windows 95/98/Me, Windows XP, Windows 2000, or Windows NT 4.0, the installer starts automatically (Auto Run) to install the TWAIN driver and various software.

Ø Note


- ☐ Auto Run might not automatically work with certain operating system settings. In this case, launch "Set up.exe" located in the CD-ROM root directory.
- ☐ If you want to install the software without using Auto Run, hold down the **[Shift]** key while inserting the CD-ROM. Keep the **[Shift]** key held down until the computer has finished accessing the CD-ROM.
- ☐ If **[Cancel]** is pressed during installation, the installation will be stopped and all the remaining software will not be installed. If **[Cancel]** has been pressed, reinstall the remaining software after restarting the computer.

Limitation

☐ For installation in Windows 2000, Windows XP, or Windows NT 4.0, log on as a member of the administrators group.

The installing sequence using Auto Run is as follows.

Installation Sequence

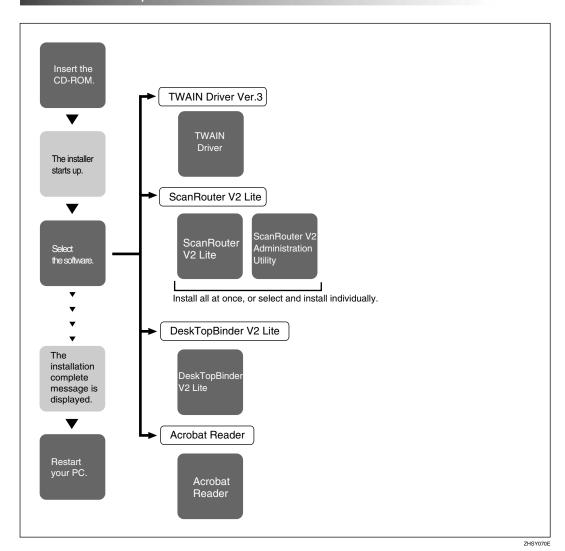

For information about the software that can be installed by Auto Run, see p.27 "Software Supplied on CD-ROM".

Software for Using a Network TWAIN Scanner

To use the machine as a network TWAIN scanner, it is essential to install the TWAIN driver.

If you do not have applications that work with TWAIN, it is necessary to also install DeskTopBinder V2 Lite. For information about the installation of DeskTopBinder V2 Lite, see p.26 "DeskTopBinder V2 Lite".

Preparation

Before installation, check the operating environment for the TWAIN driver. See p.27 "Type2045 TWAIN Driver".

Using Windows 95/98/Me, Windows XP, Windows 2000, or Windows NT 4.0

Install the TWAIN driver using Auto Run.

1 Start Windows, and then insert the supplied CD-ROM labeled "Scanner Driver & Document Management Utilities" into the CD-ROM drive of the computer.

The Choose Setup Language screen appears.

₽ Reference

If the installer does not start automatically, see p.22 "Auto Run Program".

2 Select a setup language, and then click [OK].

The CD-ROM Launcher screen appears.

Click [TWAIN Driver].

The Software Setup screen appears.

The installer of the TWAIN driver starts. Follow the instructions on the screen.

- ☐ When the installation is complete, a message to prompt you to restart the computer may appear. In this case, restart the computer.
- ☐ After the installation is complete, the "Type2045 TWAIN V3" folder is in the "Program" folder on the Start menu. Help can be displayed from here.
- ☐ Notes on using the network TWAIN scanner are provided in "Readme.txt". Be sure to read them before use.

Software for Using the Network Delivery Scanner Function

To use the machine as a network delivery scanner, it is essential to install Scan-Router V2 Lite on the delivery server. To check an in-tray or retrieve documents, it is necessary to install DeskTopBinder V2 Lite on the client computer.

Use Auto Run for installation.

Preparation

Before installation, check the system requirements for the software. See p.27 "Software Supplied on CD-ROM".

1 Start Windows, and then insert the supplied CD-ROM labeled "Scanner Driver & Document Management Utilities" into the CD-ROM drive of the computer.

The Choose Setup Language screen appears.

2 Select a setup language, and then click [OK].

The CD-ROM Launcher screen appears.

- Click the key of the software to be installed.
 - The ScanRouter V2 Lite installer starts by clicking [ScanRouter V2 Lite].
 - The DeskTopBinder V2 Lite installer starts by clicking [DeskTopBinder V2 Lite].

The Change The Language screen appears.

For information about the subsequent installation procedure, see *Setup Guide* that can be displayed from the Setup screen of the respective software.

4 Select a language, and then click [OK].

The Software Setup screen appears.

DeskTopBinder V2 Lite

Use Auto Run for installation.

Preparation

Before installation, check the system requirements for DeskTopBinder V2 Lite. See p.28 "DeskTopBinder V2 Lite".

1 Start Windows, and then insert the supplied CD-ROM labeled "Scanner Driver & Document Management Utilities" into the CD-ROM drive of the computer.

The Choose Setup Language screen appears.

2 Select a language, and then click [OK].

The CD-ROM Launcher screen appears.

Click [DeskTopBinder V2 Lite].

The Change The Language screen appears.

₽ Reference

For information about the subsequent installation procedure, see *Setup Guide* that can be displayed from the Setup screen of DeskTopBinder V2 Lite.

A Select a language, and then click [OK].

The Software Setup screen appears.

Software Supplied on CD-ROM

List of Files

Drive	Mizard for the TWAIN driver and utilities			
	Drivers	Twain	TWAIN driver for Windows 95/98/Me, Windows XP, Windows 2000, Windows NT 4.0	
	□Utility	□RouterV2	ScanRouter V2 Lite , ScanRouter V2 Administration Utility ScanRouter V2 Administration Utility	
		□DeskV2	■DeskTopBinder V2 Lite	
		<u></u> Acroread	Acrobat Reader	

Type2045 TWAIN Driver

This driver is required to scan an original on the machine.

To use the machine as a network TWAIN scanner, this driver must be installed.

❖ File storage folder

The files are stored in the following folder on the CD-ROM provided with this machine.

\DRIVERS\TWAIN

System requirements

 Hardware PC/AT compatible

Limitation

- ☐ Under Windows NT with RISC-based processors (MIPS R series, Alpha AXP, and PowerPC), this driver is not available.
- CPU

Pentium or faster (Pentium 150 MHz or faster recommended)

Operating system

Microsoft Windows 95

Microsoft Windows 98

Microsoft Windows Millennium Edition

Microsoft Windows XP Professional

Microsoft Windows XP Home Edition

Microsoft Windows 2000 Server

Microsoft Windows 2000 Professional

Microsoft Windows NT Server 4.0 (Service Pack 5 or later)

Microsoft Windows NT Workstation 4.0 (Service Pack 5 or later)

- Memory
 OS min. Operation Memory + 8 MB (64 MB or more recommended)
- Hard disk space 100 MB or more
- Display resolution 800 × 600 pixels, 256 colours or higher
- Network protocol TCP/IP

DeskTopBinder V2 Lite

DeskTopBinder V2 Lite is to be installed on the client computers for integration and management of various kinds of data such as scanned image data, files created with applications, and existing image files. The software allows you to view documents in in-trays of the delivery server. This software can be used to use the machine as a network TWAIN scanner. Also, the documents stored in the Document Server can be viewed.

See the manuals for DeskTopBinder V2 Lite or DeskTopBinder V2 Lite Help.

❖ File storage folder

The files are stored in the following folder on the CD-ROM provided with this machine.

\UTILITY\DESKV2

System requirements

- Hardware PC/AT compatible
- CPU

Pentium 133 MHz or faster (Pentium II 266 MHz or faster recommended)

Operating system

Microsoft Windows 95 (OSR 2 or later)

Microsoft Windows 98

Microsoft Windows Millennium Edition

Microsoft Windows XP Professional

Microsoft Windows XP Home Edition

Microsoft Windows 2000 Server (Service Pack 1 or later)

Microsoft Windows 2000 Professional (Service Pack 1 or later)

Microsoft Windows NT Server 4.0 (Service Pack 5 or later)

Microsoft Windows NT Workstation 4.0 (Service Pack 5 or later)

Memory

48 MB or more (128 MB or more recommended)

Hard disk space

50 MB or more (200 MB or more recommended)

- Display resolution 800 × 600 pixels, 64K colours or higher
- Network protocol TCP/IP

♦ Software installed with DeskTopBinder V2 Lite

• Auto Document Link

Auto Document Link on the client computer monitors in-trays of the delivery server. In addition, the documents delivered to in-trays can be retrieved or a notification of document arrival can be received at the client computer with this software.

ScanRouter V2 Lite

ScanRouter V2 Lite is to be installed on the delivery server. The data scanned by the machine can be sorted in the delivery server, stored in specified in-trays, or saved in folders of client computers on the same network.

See the manuals for ScanRouter V2 Lite or ScanRouter V2 Lite Help.

File storage folder

The files are stored in the following folder on the CD-ROM provided with this machine.

\UTILITY\ROUTERV2

System requirements

The following system requirements must be met to use ScanRouter V2 Lite.

Limitation

☐ If you install this software in an operating system, such as Windows NT Workstation and Windows 2000 Professional, in which a client server is not permitted to be used in a network, you may violate the license agreement of Microsoft Corporation.

Note

- ☐ When installing the software in Windows NT Server or Windows 2000 Server, a stand-alone server must be used. Do not use the primary domain controller or backup domain controller.
- Hardware PC/AT compatible
- CPU

Pentium 200 MHz or faster (Pentium II 350 MHz or faster recommended)

Operating system

Microsoft Windows 95 (OSR 2 or later)

Microsoft Windows 98

Microsoft Windows Millennium Edition

Microsoft Windows XP Professional

Microsoft Windows XP Home Edition

Microsoft Windows 2000 Server (Service Pack 1 or later)

Microsoft Windows 2000 Professional (Service Pack 1 or later)

Microsoft Windows NT Server 4.0 (Service Pack 5 or later)

Microsoft Windows NT Workstation 4.0 (Service Pack 5 or later)

Memory

64 MB or more (128 MB or more recommended)

Hard disk space

Minimum free space required for installing: 200 MB



- ☐ In addition to the space required for installation, the hard disk should have at least 500 MB of free space for files.
- Network protocol TCP/IP

Software installed with ScanRouter V2 Lite

• ScanRouter V2 Administration Utility

ScanRouter V2 Administration Utility manages the delivery system run by ScanRouter V2 Lite.

You can register destination and sender information for the scanned documents in the delivery server. In addition, you can perform maintenance for free disk space monitoring, error log recording, and other features of the delivery server.



☐ ScanRouter V2 Administration Utility can be installed not only on the delivery server but also on client computers. To install it, click **[Scan-Router V2 Administration Utility]** on the ScanRouter V2 Lite Setup screen.

3. Setting Originals

This chapter explains the procedure for placing originals on the exposure glass and in the ADF, and setting the original scan area and orientation according to the placement method.

To correctly display the top/bottom orientation of the scanned original on a computer, the placement of the original and the settings made on the control panel and scanner driver must match.

Placing Originals

There are two orientations for placing the original. See the table below.

Note

□ Normally, an original is 🗈 or 🗈, but in the table below, a square original is used to make original orientation easy to understand. If the actual shape of the original is different, the combination of original orientation and the orientation specified on the control panel or scanner driver does not change.

Specifying Original Orientation and Setting Originals

An original to be scanned	R			
Decide the placement method.	Exposure glass		ADF	
Place the original. (There are two original orientations.)	Place the original so that the top edge touches the top left of the exposure glass.	Place the original so that the top edge touches the rear of the exposure glass.	Place the top edge of the original first.	Place the original so that the top edge touches the back of the ADF.
				R

Specify the orientation.	When scanning using the delivery scanner function, Document Server function, or for sending e-mail. (Specified on the con- trol panel screen)	Original Orientation	Original Orientation	Original Orientation	Original Orientation
	When scanning using the TWAIN scanner function (Specified in the Scan- ner Control dialog box)	◆ □□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□	◆ রিক্র	◆ ⊠₩	◆RR
The original displayed on a computer		R			

Placing on the Exposure Glass

Originals which do not fit into the ADF, such as sheets with glued-on parts, books, etc., can be placed directly on the exposure glass for scanning.

Note

- ☐ For information about the originals which can be placed on the exposure glass, see *Copy Reference*.
- 1 Lift the exposure glass cover or the ADF.


Note

☐ Lift the exposure glass cover or ADF more than 30 degrees. The opening/closing action triggers the automatic original size detection process.

2 Place the original on the exposure glass with the side to be scanned facing down. Align the original with the back left corner mark.

There are two original orientations.


One way is to place the original so that the top edge touches the rear of the exposure glass.

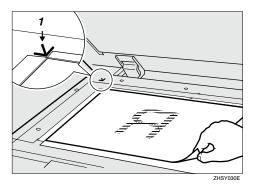

1. Positioning mark

Another way is to place the original so that the top edge touches the top left of the exposure glass.

When using the machine as a network TWAIN scanner, this orientation is the standard setting for the TWAIN driver. Normally, use this orientation for placing documents.

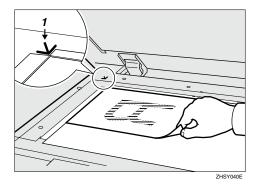

1. Positioning mark

- Close the exposure glass cover or the ADF.
- 4 Select the original orientation according to the orientation of the placed original.

p.31 "Specifying Original Orientation and Setting Originals"

Proceed to p.35 "Original Orientation and Scan Area".

Placing in the Auto Document Feeder

The ADF allows you to place several originals at one time. Originals placed in the ADF can be scanned on one side or both sides.

Originals that can and cannot be placed in the ADF

For information about the originals that can and cannot be placed in the ADF, see *Copy Reference*.


Attempting to use unsuitable originals in the ADF can lead to a misfeed and damage to the originals. Place such originals directly on the exposure glass.

∰Important

- ☐ For information about which original sizes can be detected automatically and notes on placing originals in the ADF, see *Copy Reference*.
- **1** Adjust the original guide to match the size of the originals.
- Place the originals with the side to be scanned facing up. (For originals which are to be scanned on both sides, the first side should face up.)


There are two orientations.

One way is to place the originals so that the top edges touch the back of the ADF.

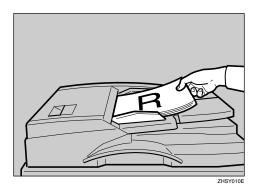


Another way is to place the top edges of the originals first.

When using the machine as a network TWAIN scanner, this orientation is the standard setting for the TWAIN driver. Normally, use this orientation for placement.

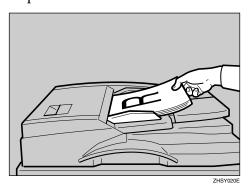

𝚱 Note

☐ When using the network delivery scanner, Document Server, or the network TWAIN scanner function, originals with different sizes can be placed at the same time. Place the originals as shown in the figure below.

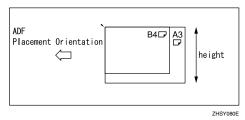

☐ Originals are scanned in the inserted order, starting with the topmost page.

3 Select the original orientation according to the orientation of the placed originals.

p.31 "Specifying Original Orientation and Setting Originals"

Proceed to p.35 "Original Orientation and Scan Area".

Original Orientation and Scan Area

To correctly display the top/bottom orientation of a scanned original on a computer, original orientation and page flow must be set when placing the original.

When using the network delivery scanner function and e-mail function, settings are made on the control panel of the machine. When using the machine as a network TWAIN scanner, settings are made with the TWAIN driver.

Ø Note

☐ The difference between scanning with the TWAIN scanner function, the network delivery scanner function, or for e-mail is shown in the following table.

	TWAIN Scanner	Network Delivery Scanner/E-mail
Auto Detect Mixed Original Sizes Auto Detect Non-Mixed Original Sizes	A whole batch of originals is scanned using the size of the first original.	A whole batch of originals is scanned using the max. size set for the ADF.
Auto Detect Mixed Original Sizes	Auto detection is used to deter- mine the size of each original.	Auto detection is used to determine the size of each original placed on the exposure glass. A whole batch of originals is scanned using the size of the first original set for the ADF.

	TWAIN Scanner	Network Delivery Scanner/E-mail	
Size Specification	the specified size,	hen an original is smaller than e specified size, a blank space ap- ears in the resulting image.	

For a Network Delivery Scanner and E-mail

1 On the network delivery scanner function or e-mail function screen, press [Original Settings].



2 Make settings for original orientation, one-sided/two-sided combination, SADF/Batch, and mixed original sizes.



Note

☐ The defaults can be changed using the initial scanner settings [Original Setting], [Original Orientation Priority], [Switch to Batch], and [Mixed Original Sizes Priority]. See p.16 "Scanner Settings".

One-sided original/Two-sided original selection

- When scanning one-sided originals, make sure that [2 Sided Original] is not selected.
- When scanning two-sided originals, press [2 Sided Original] to select [2 Sided Orig.: T to T] or [2 Sided Orig.: T to B] according to the binding orientation of the original.

Top to top original:



Top to bottom original:



Note

- ☐ When the last page of twosided originals is blank, select [1 Side] to skip that side and finish scanning, or select [2 Sides] to scan that side as a blank page.
- ☐ If **[1 Side]** is selected for the last page when scanning originals in several batches, the maximum number of pages per file may decrease depending on the number of batches set.
- ☐ If **[1 Side]** is selected for the last page, the image size might become larger than original and may exceed the maximum e-mail size possible. In this case, change the settings of **[Max. E-mail Size]** in scanner settings. See p.11 "Initial Scanner Setup".
- ☐ When scanning originals on the exposure glass with the [2 Sided Original] setting, set [1 Sided Original] for the last original.

Orientation selection

Press the key for the same orientation as the actual orientation of the original

or

e.

₽ Reference

p.31 "Specifying Original Orientation and Setting Originals"

SADF/Batch selection

• When scanning a large number of originals using the ADF by dividing the originals and scanning them individually or in batches, check that [SADF] or [Batch] is selected.

Note

- ☐ Select [SADF] for adding originals one by one, or select [Batch] for adding the originals in batches.
- ☐ Select whether **[SADF]** or **[Batch]** is displayed using the initial scanner setting **[Switch to Batch]**.

Mixed size selection

■ When originals of different sizes are placed, make sure that [Mixed Size] is selected.

Note

☐ If [Mixed Size] is not selected, the maximum size detected is set as the scan size. For originals smaller than this size, a blank space will appear in the resulting image.

Press [OK].

∅ Note

☐ The current settings are displayed with characters and icons.



For a Network TWAIN Scanner

Open the [Scanner Properties] dialog box.

p.76 "Scanning Originals"

- 2 Select the position from the [Document:] list in the [Document] area.
- Select [♣❷❷/♣录◎] or [♣��/♣��] from the [Orientation:] list.

p.31 "Specifying Original Orientation and Setting Originals"

When the originals are placed in the ADF, select [Simplex] or [Duplex] from the [Side:] list.

Note

☐ If originals of different sizes are placed in the ADF, specify the document size or detection method in the [Size:] box. If [Auto detection (Uni-size)] is selected, all originals are scanned as their widths are considered the same as the size of the first page. If [Auto detection (Multi-size)] is selected, the originals are respectively scanned in accordance with each page width. And, the size range for scanning originals in forwarding direction corresponds to the length of individual page to be fed (to the ending edge) in both cases of Multi-size and Uni-size.

Scanning Originals in Several Times

A large number of originals can be scanned as a single document by dividing them and scanning them individually or in batches using the exposure glass or the ADF. Select [On] in [Job Reset Time in Adding Original], and then specify a job reset time. If another original or batch of originals is placed within this time after all previously placed originals have been scanned, it is possible to scan all of these originals as a single document.

p.18 "Job Reset Time in Adding Original"

Select [On] in [Job Reset Time in Adding Original], and then specify a job reset time in seconds.

p.18 "Job Reset Time in Adding Original"

2 Place the originals.

p.31 "Placing Originals"

Make settings for scanning area and original orientation.



p.35 "Original Orientation and Scan Area"

- ☐ When placing originals on the exposure glass, if [On] is selected in [Job Reset Time in Adding Original], it is not necessary to select SADF or Batch.
- Make settings for delivering, sending by e-mail, or storing.


p.53 "Delivery Procedure"

p.41 "Procedure for Sending Email"

p.62 "Storage Procedure"

When the **[Start]** key is pressed, the originals are scanned.

After the originals are scanned, the remaining time for accepting the next original is displayed.



If you want to change the basic settings, the scanning area, or the original orientation, change the settings before placing the next original.

Note

- ☐ While settings are being changed, the countdown until originals are no longer accepted stops.
- When there are other originals to scan, place them within the specified time.

When placed, the originals are fed and scanned automatically.

- **7** Repeat from step **6** until all originals are scanned.
- If there are no more originals, press the [#] key.

Note

- ☐ Originals are scanned in order. Place them from the first page.
- ☐ Press the **[Start]** key if you want to restart before the countdown stops.
- □ When **[SADF]** is selected and originals are being scanned by dividing them and scanning them consecutively using the ADF, the next original to be added can be placed on the exposure glass to be scanned. In this case, the **[Start]** key must be pressed to begin scanning.

4. Sending Stored Scan Data by E-mail

Stored scan data can be sent to a specified destination using e-mail. This chapter explains the preparation for sending data by e-mail, various display screens, delivery procedures, and how to check the sending result when this function is used.

Preparation for Sending by E-mail

To send an e-mail, the preparation described below is required.



Connect the machine to the network with an Ethernet cable or IEEE 1394 (optional) cable, or use a wireless LAN (optional). See *Network Guide*.



Make the network or the destination (sender) settings in System Settings.

See Network Guide, General Settings Guide.



Make settings for sending e-mail such as e-mail information language and file type priority.

See p.11 "Initial Scanner Setup".



Make settings for sending e-mail such as for the SMTP server and TCP/IP using a client computer's Web browser.

See Network Guide.




Set up an e-mail server as necessary.

For information about setting up an e-mail server, see the instruction manuals of the e-mail server to be used and the software to be installed.

Screen Configuration

The screen configuration when using the machine for e-mail is as shown.

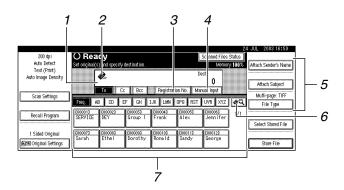

1. Destination Field

The selected destination is shown here. If multiple destinations are selected, the destinations are displayed in the order they were selected by pressing [APrev.] or [VNext].

Ø Note

☐ Pressing the **[Check Modes]** key lets you check the selected destinations.

2. E-mail Icon ()

This icon shows that the screen for sending e-mail is displayed.

3. [Registration No.]

Press this button to specify a destination using a five-digit short ID number.

4. [Manual Input]

When specifying a destination that is not listed, press [Manual Input], and then enter the destination with the soft keyboard.

[Attach Sender's Name] [Attach Subject] [File Type]

Set the sender and the subject of the document to be delivered.

If necessary, select the file type of the image file attached to the e-mail.

6. [8] Switch Destination List/Search/Switch Title

Press this button to switch a destination from the delivery server list to the destination list of this machine, to search using the e-mail destination, or to switch the titles.

7. Destination List

Displays the destinations programmed in the delivery server or this machine.


Note

- □ When the entire list does not fit on one screen, [▲] or [▼] can be used to scroll through the display.
- ☐ Group destinations are denoted by this symbol (***).
- ☐ A bar above a title indicates that a destination that belongs to it has been selected.

Procedure for Sending E-mail

Data is sent after specifying scan settings and destination.

1 Press the [Scanner] key.

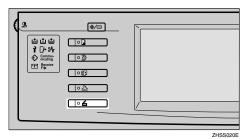

2 If user codes are set, enter a user code with the number keys, and then press the [#] key.

The Scanner Function screen appears.

For information about user codes, see *General Settings Guide*.

𝚱 Note

☐ If the Network TWAIN Scanner screen appears, press [Cancel].



Make sure that no previous settings remain.

Note

☐ If a previous setting remains, press the **[Clear Modes]** key.

Place the original in the machine, and then adjust the settings for original size and orientation if required.

p.31 "Setting Originals"

- If the network delivery scanner screen appears, switch to the screen for sending e-mail.
 - Press [].
 - 2 Press [Switch Destination List].



3 Press [E-mail].



4 Press [Exit].

The E-mail screen appears.

6 Select the destination.

Four methods are available for selecting a destination: selecting it from the list, selecting it by specifying a short ID number, entering the e-mail address directly, or searching for the destination and selecting it.



□ Before selecting the destination, be sure to select [To]. When necessary, select [Cc] or [Bcc] and the respective destinations. More than 100 destinations cannot be specified for [To], [Cc], and [Bcc].

When selecting a destination from the list

• Press the title for the destination. The destinations for that title are displayed.

If the destination is not displayed, press $[\blacktriangle]$ or $[\blacktriangledown]$ to display the destination.



2 Select the destination to which the scan data is to be sent.



The selected destination is highlighted and also is displayed in the destination field at the top of the screen.

3 To select more destinations, repeat step **2**.

Ø Note


□ To deselect a destination, press the destination once more, or press [APrev.] or [VNext] to display the destination in the destination field, and then press the [Clear/Stop] key. Using a short ID number to select a destination

- Press [Registration No.].
- 2 Use the number keys to enter the five-digit short ID number that has been assigned to a destination.

If the entered number is less than five digits long, press the **[#]** key after the last number.

Example: To enter 00003

Press the [3] key, and then the [#] key.



3 To select more destinations, repeat step 2.

𝒯 Note

□ To deselect a destination, press [▲Prev.] or [▼Next] to display the destination in the destination field, and then press the [Clear/Stop] key.

Manual entry of an e-mail address

1 Press [Manual Input].

The soft keyboard is displayed for entering the e-mail address.

2 Enter the e-mail address.



☐ It is possible to use letters, numbers, and periods. The symbols ()\,;:" cannot be used.

For information about how to enter characters, see *General Settings Guide*.

3 Press [OK].

Ø Note

- ☐ For changing an e-mail address that has been entered, press [Modify] located on the left side of the destination field. A soft keyboard for entering the e-mail address is displayed. Make any changes, and then press [OK].
- ☐ Pressing the **[Check Modes]** key on the control panel lets you check the list of selected destinations.
- 4 To enter more destinations, repeat steps 1 to 3.

𝚱 Note

□ To deselect a destination, press [▲Prev.] or [▼Next] to display the destination in the destination field, and then press the [Clear/Stop] key.

Searching for a destination to select

1 Press 🙉 l.



2 Press [Search].



3 Press [Srch.by Dest.Name/Index].

Note

☐ To search using e-mail addresses, press [Search by E-mail].

The soft keyboard is displayed for entering a destination name.

4 Enter part of the destination name.

Note

- ☐ Enter the first character or characters of the destination name.
- ☐ It is also possible to perform a combined search using [Srch.by Dest.Name/Index] and [Search by E-mail].
- ☐ It is necessary to discriminate uppercase and lowercase letters.

₽ Reference

For information about how to enter characters, see *General Settings Guide*.

- **6** Press [OK].
- 6 Select a destination.



Press [Exit].

Checking selected destinations

Use the destination field at the top of the screen to check which destinations are selected.

Note

- □ When multiple destinations are selected, the selected destinations are displayed in the order they were selected by pressing [APrev.] or [VNext].
- ☐ Pressing the **[Check Modes]** key on the control panel lets you check the list of selected destinations.

7 Make the basic settings.

To make the basic settings, recall stored settings or make the settings individually.

p.13 "Basic Settings"

Recalling stored scan settings

- Press [Recall Program].
- 2 Select a user program of scan settings.



3 Press [OK].



The selected user program settings are applied.

Making the settings individually

- Press [Scan Settings].
- Select items such as resolution and original size, and then change their settings.



Scan settings can be made in the same way as basic settings. See p.13 "Basic Settings".

- Press [OK].
- 8 Select the file type if necessary.
 - Press [File Type].
 - 2 Select the file type of the file to be attached to the e-mail from the displayed types.



9 Specify the e-mail sender.

Three methods are available for selecting a sender: selecting the sender from the list, entering the five-digit short ID number of the sender with the number keys, and searching for the sender and selecting it.

𝚱 Note

☐ When a sender is selected, the sender name is automatically placed in the From field of the email so that the sender can be identified when the e-mail is received.


- ☐ To prevent misuse of a sender name, we recommend you set up a password for that sender name.
- ☐ Be sure to select or enter a sender name. Otherwise [Key Operator's E-mail Address] is used as the sender name. See *General Settings Guide*.

When selecting a sender from the list

1 Press [Attach Sender's Name].




2 Select the sender.





- ☐ If a password has been set, a screen for entering the password appears after selecting the sender. Enter the password, and then press [OK]. After verification of the password, the sender name is displayed.
- **3** For a reception confirmation email, press [Return Receipt].



Note

- □ When [Return Receipt] is selected, an e-mail notifying that the e-mail has been read by the destination party is sent to the sender selected here. However, if the mailing software used by the destination party does not support MDN (Message Disposition Notification), the setting in [Return Receipt] becomes invalid.
- 4 Press [OK].

Using a short ID number to specify a sender name

1 Press [Attach Sender's Name].




2 Use the number keys to enter the five-digit short ID number that has been assigned to a sender.

If the entered number is less than five digits long, press the **[#]** key after the last number.


Example: To enter 00006

Press the **[6]** key, and then the **[#]** key.





- ☐ If a password has been set, a screen for entering the password appears after selecting the sender. Enter the password, and then press [OK]. After verification of the password, the sender name is displayed.
- For a reception confirmation email, press [Return Receipt].



𝚱 Note


- □ When [Return Receipt] is selected, an e-mail notifying that the e-mail has been read by the destination party is sent to the sender selected here. However, if the mailing software used by the destination party does not support MDN (Message Disposition Notification), the setting in [Return Receipt] becomes invalid.
- 4 Press [OK].

Searching for a sender to select

1 Press [Attach Sender's Name].



2 Press [<u>__</u>].



3 Press [Srch.by Dest.Name/Index].

To search using e-mail addresses, press [Search by E-mail].



The soft keyboard is displayed for entering a destination name.

4 Enter part of the sender name.

𝚱 Note

- ☐ Enter the first character or characters of the sender name.
- ☐ It is also possible to perform a combined search using [Srch.by Dest.Name/Index] and [Search by E-mail].
- ☐ It is necessary for searching to discriminate uppercase and lowercase letters.


For information about how to enter characters, see *General Settings Guide*.

- **6** Press [OK].
- **6** Select the sender.



Note

- ☐ If a password has been set, a screen for entering the password appears after selecting the sender. Enter the password, and then press [OK]. After verification of the password, the sender name is displayed.
- Press [Exit].
- 8 For a reception confirmation email, press [Return Receipt].



Press [OK].

Note

□ When [Return Receipt] is selected, an e-mail notifying that the e-mail has been read by the destination party is sent to the sender selected here. However, if the mailing software used by the destination party does not support MDN (Message Disposition Notification), the setting in [Return Receipt] becomes invalid.

If required, select a subject.

Select a subject from the registered ones. See p.20 "Subject Settings".

𝚱 Note


- ☐ The selected subject name is automatically placed in the Subject field of the e-mail.
- ☐ Two methods are available for selecting a subject, selecting it from the list or entering it directly.

When selecting a subject from the list

• Press [Attach Subject].



2 Select a subject.



3 Press [OK].

Manual entry of a subject

• Press [Attach Subject].



2 Press [Manual Input].

The soft keyboard is displayed for entering a subject.

3 Enter the subject.

For information about how to enter characters, see *General Settings Guide*.

4 Press [OK] twice.

11 Press the [Start] key.

Note

- ☐ To interrupt scanning, press the **[Clear/Stop]** key or press **[Stop]** on the screen.
- ☐ When using the SADF function, place the next original after the others have been scanned. See p.37 "Scanning Originals in Several Times".
- ☐ Regardless of the divide e-mail size setting, it is not possible to send e-mail containing a document over 725.3MB. It is also not possible to send a document with more than 2,000 pages.

Simultaneous Storage and Sending of E-mail

You can use e-mail with the Document Server.

Scanned data is stored in the Document Server at the same time the data is sent by e-mail.

Note

- ☐ This section explains mainly the operation for simultaneous sending and storage of e-mail. For more information, see p.53 "Delivery Procedure".
- ☐ The data stored when simultaneously storing data and sending data by e-mail cannot be resent immediately after it is stored. To resend the data, select the data file in the Select Stored File screen and send it. See p.71 "Delivering or Sending Stored Files".

- 1 Place the original, and then adjust the settings for original size and orientation if required.

p.31 "Setting Originals"

- **2** Make the basic settings.
- **3** Select the destination.
- 4 If required, specify the sender (scan data delivery source) and a subject.
- **5** Press [Store File].



Make sure [Send & Store] is selected.



- **7** Press [File Information] to set file information.

p.64 "Specifying file information"

- 8 Press [OK] twice.
- 9 Press the [Start] key.

Checking the Status of E-mail

The status of the last 50 e-mails can be checked. For every new e-mail record after 50, the oldest record is deleted.

Ø Note


☐ When [Print & Delete Scanner Journal] is set to [Delete All after Printing], the whole journal is printed when the number of records reaches 50.

Items that can be checked

- Date/Time The date and time the e-mail was sent is displayed.
- Destination
 When multiple destinations
 were selected, the first selected
 destination is displayed.
- Sender
- File Name
- Status
 Indicates whether the delivery
 was completed properly, failed,
 is on standby, or has been suspended.
- 1 Press [Scanned Files Status] on the screen for sending e-mail.



2 Check the displayed records.



Note

- ☐ One screen shows the records for five delivery operations. Use [▲Prev.] or [▼Next] to scroll through the screen.
- ☐ When the status of a document is in waiting mode, the delivery can be stopped by selecting that document, and then pressing [Cancel].

Press [Exit].

The display returns to the screen for sending e-mail.

5. Using the Network Delivery Scanner Function

Stored scan data can be sent to a specified destination using the network delivery scanner function. This chapter explains the preparation sequence, various display screens, delivery procedures, and how to check the delivery result when this function is used.

∰Important

□ A delivery server in which ScanRouter V2 Lite/Professional is installed is necessary to use the network delivery scanner function. Information about delivery destinations and senders must be registered first into the delivery server. Also, configure connected devices in **[Set I/O Device]** of ScanRouter V2 Administration Utility. For more information, see ScanRouter V2 Administration Utility Help.

Preparation for Delivering

To use the machine as a network delivery scanner, the preparation described below is required.



Connect the machine to the network with an Ethernet cable, IEEE 1394 (optional) cable, or connect to a wireless LAN (optional).

See Network Guide.



Check the network settings in System Settings, and change if required.

See Network Guide.



Make settings for the network delivery scanner function, such as Basic Settings and Subject Settings.

See p.11 "Initial Scanner Setup".



Install the software required for using the network delivery scanner functions, such as ScanRouter V2 Lite, on the delivery server. After installing the software, make the required settings for server maintenance and delivery service.

See p.29 "ScanRouter V2 Lite".

Set Destination, Sender Information, and connected devices

Use ScanRouter V2 Administration Utility to set the destination, sender information, and connected devices.




On the client computers, install the software required for viewing or retrieving documents by connecting to the delivery server, such as DeskTopBinder V2 Lite.

See p.26 "DeskTopBinder V2 Lite".

Screen Configuration

The screen configuration when using the machine as a network delivery scanner is as shown.

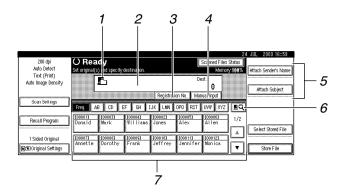

1. Network Delivery Scanner Icon (♣)

This icon shows that the screen for network delivery scanner function is displayed.

2. Destination Field

The selected destination is shown here. If multiple destinations are selected, the destinations are displayed in the order they were selected by pressing [APrev.] or [VNext].

Ø Note

☐ Pressing the **[Check Modes]** key lets you check the selected destinations.

3. [Registration No.]

Press this button to specify a destination using a five-digit short ID number.

4. [Manual Input]

When specifying a destination that is not listed, press [Manual Input], and then enter the destination with the soft keyboard that is displayed. For information about sending e-mail from the delivery server, see the manual for ScanRouter V2. See p.i "Manuals for This Machine".

5. [Attach Sender's Name] [Attach Subject]

Set the sender and subject of the document to be delivered.

6. Switch Destination List/Search

Press this button to switch a destination list from the delivery server to the destination list of this machine or to search by user name.

7. Destination List

Displays the destinations programmed in the delivery server or this machine.

Note


- □ When the entire list does not fit on one screen, [▲] or [▼] can be used to scroll through the display.
- ☐ Group destinations are denoted by this symbol (♣♣♣).
- ☐ A bar above a title indicates that a destination that belongs to it has been selected.

Delivering Stored Scan Data

Delivery Procedure

Data is delivered after scan settings and destination are specified. If necessary, you can select a sender and a subject.

1 Press the [Scanner] key.

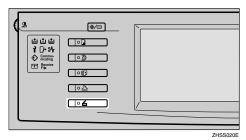

2 If user codes are set, enter a user code with the number keys, and then press the [#] key.

The Scanner Function screen appears.

₽ Reference

For information about the user codes, see *General Settings Guide*.

Note

☐ If the Network TWAIN Scanner screen appears, press [Cancel].



Make sure that no previous settings remain.

Ø Note

☐ If a previous setting remains, press the [Clear Modes] key.

4 Place the original in the machine, and then adjust the settings for original size and orientation if required.

p.31 "Setting Originals"

- If the E-mail screen appears, switch to the screen for network delivery scanner.
 - Press 🖭.
 - 2 Press [Switch Destination List].



3 Press [Delivery Server].



4 Press [Exit].

The Network Delivery Scanner screen appears.

6 Select the destination.

Four methods are available for specifying a destination: selecting it from the list, specifying a short ID number, selecting it after searching for it, or directly typing the e-mail address.

Note

☐ When using ScanRouter V2 Lite/Professional, the destination list is updated automatically. When selecting a destination from the list

• Press the title for the destination. The destinations for that title are displayed.

If the destination is not displayed, press $[\blacktriangle]$ or $[\blacktriangledown]$ to display the destination.





- ☐ The destination titles are programmed in the delivery server.
- 2 Select the destination to which the scan data is to be delivered.



The selected destination is highlighted and also is displayed in the destination field at the top of the screen.

3 To select more destinations, repeat step 2.



□ To deselect a destination, press the destination once more, or press [▲Prev.] or [▼Next] to display the destination in the destination field, and then press the [Clear/Stop] key.


Using a short ID number to select a destination

- Press [Registration No.].
- 2 Use the number keys to enter the five-digit short ID number that has been assigned to a destination.

If the entered number is less than five digits long, press the [#] key after the last number.

Example: To enter 00009

Press the [9] key, and then the [#] key.



3 To select more destinations, repeat step **2**.

𝚱 Note

□ To deselect a destination, press [▲Prev.] or [▼Next] to display the destination in the destination field, and then press the [Clear/Stop] key.

Searching for a destination to select

1 Press [1].



2 Press [Search].



3 Press [Search by User Name].

Note

☐ When using ScanRouter V2 Professional, it is possible to search by comments.

The soft keyboard is displayed for entering a user name.

4 Enter part of the destination name.

𝚱 Note

- ☐ Enter the first character or characters of the destination name.
- ☐ It is necessary to discriminate uppercase and lowercase letters.

For information about how to enter characters, see *General Settings Guide*.

- 6 Press [OK].
- 6 Select a destination.



Press [Exit].

Manual entry of a destination

Note

- ☐ When using ScanRouter V2 Professional, it is possible to enter the destination e-mail address directly.
- Press [Manual Input].

The soft keyboard is displayed for entering a destination (email address).

2 Enter the destination.

Note

- ☐ Enter the e-mail address of the destination when sending via the delivery server.
- ☐ It is possible to use letters, numbers, and periods. The symbols ()\,;:" cannot be used.

For information about how to enter characters, see *General Settings Guide*.

- 3 Press [OK].
- 4 To enter more destinations, repeat steps 1 to 3.

Note

- □ To deselect a destination, press [▲Prev.] or [▼Next] to display the destination in the destination field, and then press the [Clear/Stop] key.
- ☐ Pressing the **[Check Modes]** key on the control panel lets you check the list of selected destinations.

Checking selected destinations

Use the destination field at the top of the screen to check which destinations are selected.

Note

- □ When multiple destinations are selected, the selected destinations are displayed in the order they were selected by pressing [APrev.] or [VNext].
- ☐ Pressing the **[Check Modes]** key on the control panel lets you check the list of selected destinations.

Make the basic settings.

To make the basic settings, recall stored settings or make the settings individually.

p.13 "Basic Settings"

Recalling stored scan settings

- 1 Press [Recall Program].
- 2 Select a user program of scan settings.



3 Press [OK].



The selected user program settings are applied.

Making the settings individually

- Press [Scan Settings].
- 2 Select items such as resolution and original size, and then change their settings.



Scan settings can be made in the same way as basic settings. See p.13 "Basic Settings".

3 Press [OK].

Specify the sender (scan data file delivery source) if necessary.

Three methods are available for selecting a sender: selecting the sender from the list, entering the five-digit short ID number of the sender with the number keys, and searching for the sender and selecting it.

Ø Note


☐ When a sender has been specified, this information is added to the scan data file. Select a sender from the senders programmed in the delivery server.

When selecting a sender from the list

1 Press [Attach Sender's Name].




2 Select the sender.



The selected sender and its short ID number are displayed.




- ☐ When using ScanRouter V2 Professional, [Return Receipt] is displayed when a sender is selected.
- □ When [Return Receipt] is selected, an e-mail notifying that the document file has been read by the destination party is sent to the sender selected here. To make [Return Receipt] effective, it is necessary to make the settings such as e-mail address in advance on ScanRouter V2 Professional.



3 Press [OK].

Using a short ID number to specify a sender name


1 Press [Attach Sender's Name].



2 Use the number keys to enter the five-digit short ID number that has been assigned to a sender.


Example: To enter 00006

Press the **[6]** key, and then the **[#]** key.



Note

- ☐ When using ScanRouter V2 Professional, [Return Receipt] is displayed when a sender is selected.
- □ When [Return Receipt] is selected, an e-mail notifying that the document file has been read by the destination party is sent to the sender selected here. To make [Return Receipt] effective, it is necessary to make the settings such as e-mail address in advance on ScanRouter V2 Professional.




3 Press [OK].

Searching for a sender to select

• Press [Attach Sender's Name].



2 Press [<u>__</u>].



3 Press [Search by User Name].



The soft keyboard is displayed for entering a sender name.

4 Enter part of the sender name.

Note

- ☐ Enter the first character or characters of the sender name.
- ☐ It is necessary to discriminate uppercase and lowercase letters.

For information about how to enter characters, see *General Settings Guide*.

- 6 Press [OK].
- 6 Select a sender.
- Press [Exit].
- **8** Press [OK].
- **9** If required, select a subject.

Select a subject from the registered ones. See p.20 "Subject Settings".


Note

☐ When a subject has been specified, this information is added to the scan data file.


- ☐ When ScanRouter V2 Professional is used to send documents using e-mail, the subject is automatically entered as the message subject.
- ☐ Two methods are available for selecting a subject, selecting it from the list or entering it directly.

When selecting a subject from the list

• Press [Attach Subject].



2 Select a subject.



3 Press [OK].

Manual entry of a subject

• Press [Attach Subject].



2 Press [Manual Input].

The soft keyboard is displayed for entering a subject.

3 Enter the subject.

For information about how to enter characters, see *General Settings Guide*.

- 4 Press [OK] twice.
- 11 Press the [Start] key.
 - Note
 - ☐ To interrupt scanning, press the **[Clear/Stop]** key or **[Stop]** in the displayed screen.
 - ☐ When using the SADF or Batch function, place the next original after the others have been scanned. See p.37 "Scanning Originals in Several Times".

Simultaneous Delivery and Storage

You can use the network delivery scanner function with the Document Server.

Scanned data is stored in the Document Server at the same time the data is delivered.

- ☐ This section explains mainly the operation for simultaneous delivery and storage. For more information, see p.53 "Delivering Stored Scan Data".
- 1 Place the original, and then adjust the settings for original size and orientation if required.

p.31 "Setting Originals"

- 2 Make the basic settings.
- 3 Select the destination.

- If required, specify the sender (scan data delivery source) and a subject.
- Press [Store File].



Make sure [Send & Store] is selected.



- **7** Press [File Information] to set file information.

p.64 "Specifying file information"

- 8 Press [OK] twice.
- Press the [Start] key.

Checking the Status of Delivery

The status of the last 50 deliveries can be checked. For every new delivery record after 50, the oldest record is deleted.


☐ When [Print & Delete Scanner Journal] is set to [Delete All after Printing], the whole journal is printed when the number of records reaches 50.

Items that can be checked

- Date/Time
 The date and time the delivery was requested is displayed.
- Destination
 When multiple destinations
 were selected, the first selected
 destination is displayed.
- Sender
- File Name
- Status
 Indicates whether the delivery was completed properly, failed, is on standby, or has been suspended.
- 1 Press [Scanned Files Status] on the Network Delivery Scanner screen.



2 Check the displayed records.



Note

- □ One screen shows the records for five delivery operations. Use [▲Prev.] or [▼Next] to scroll through the screen.
- ☐ When the status of a document is in waiting mode, the delivery can be stopped by selecting that document, and then pressing [Cancel].

Press [Exit].

The display returns to the Network Delivery Scanner screen.

6. Using the Document Server Function

Data obtained by scanning originals can be stored in the hard disk of the machine using the Document Server, and the stored data can be used later. Using DeskTopBinder V2 Lite/Professional, stored data can be viewed, retrieved, or deleted with a client computer.

Or, the stored data can be viewed, downloaded, printed, or deleted using Web browser from a client computer.

For more information about using the Document Server, see *General Settings Guide*.

∰Important

- ☐ As the Document Server can be accessed by remote DeskTopBinder users, consider a security system that acts as a protective boundary between your network and external networks if you want to restrict access from outside your network.
- □ Data stored in the machine might be lost if some kind of failure occurs. The supplier shall not be responsible for any damage that might result from the loss of data. For long-term storage of data, we recommend the use of Desk-TopBinder V2 Lite or DeskTopBinder V2 Professional (option). For more information, please contact your local dealer.

Note

☐ When a delivery server is added to the network, data stored in the Document Server can be delivered. You can store scanned data in the Document Server and simultaneously deliver it with the network delivery scanner function or send it by e-mail. See p.71 "Delivering or Sending Stored Files".

Storing Data


This section describes how to store data in the Document Server and how to specify file information to stored data.

- ☐ The data stored in the Document Server is deleted automatically after a certain number of days have passed. For information about making settings and changes, see *General Settings Guide*.
- ☐ The theoretical maximum number of files that can be stored is 2,500 (1,000 pages per file). However, the actual maximum may be less depending on the space used by the copier function and other functions of the machine.
- ☐ Stored documents scanned using the scanner function cannot be printed from the control panel. Print the documents after retrieving them, using DeskTop-Binder V2 Lite/Professional.

Storage Procedure

Scan and store the document in the Document Server.

1 Press the [Scanner] key.

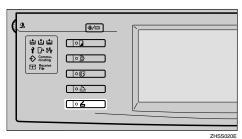

2 If the user codes are set, enter a user code with the number keys, and then press the [#] key.

The Scanner Function screen appears.

For information about the user codes, see *General Settings Guide*.

Note

☐ If the Network TWAIN Scanner screen appears, press [Cancel].



Make sure that no previous settings remain.

Note

- ☐ If a previous setting remains, press the [Clear Modes] key.
- Place the original in the machine, and then adjust the settings for original size and orientation if required.

p.31 "Setting Originals"

5 Make the basic settings.

To make the basic settings, recall the stored settings or make the settings individually.

p.13 "Basic Settings"

Recalling stored scan settings

- 1 Press [Recall Program].
- 2 Select a user program of scan settings.



3 Press [OK].



The selected user program settings are applied.

Making settings individually

- Press [Scan Settings].
- Select items such as resolution and original size and change their settings.




Scan settings can be made in the same way as basic settings. See p.13 "Basic Settings".

- 3 Press [OK].
- Make the settings for storing scanned data files.
 - 1 Press [Store File].



2 Press [Store Only].



Note

- ☐ To store and deliver scanned data, press [Send & Store]. See p.59 "Simultaneous Delivery and Storage" and p.48 "Simultaneous Storage and Sending of E-mail".
- ☐ [Store Only] cannot be pressed if even a single destination is selected.

7 Specify file information.

Specify a user name, file name, and password for the file to be stored.

For more information about how to specify file information, see p.64 "Specifying file information".

- 1 Press [OK] twice.
- 8 Press the [Start] key.

Note

- ☐ To abort the scanning process, press the [Clear/Stop] key or press [Stop] on the screen.
- ☐ When using the SADF function, place the next original after the others have been scanned. See p.37 "Scanning Originals in Several Times".

Specifying file information

You can specify a user name, file name, and password for a stored scan data file.

According to the settings made, you can search for files by user name or file name and you can prevent unauthorized persons from accessing the files.

Note

- ☐ The file name can be up to 64 characters long. The user name can be up to 20 characters long. The first 16 characters are shown on the control panel. From a client computer with DeskTopBinder V2 Lite/Professional installed, you can view all the characters entered.
- 1 Display the File Information screen.
 - Press [Store File].



2 Press [File Information].



The File Information screen appears.



2 Specify file information.

Specifying a user name


1 Press [User Name].

Note

- ☐ If no user name is programmed on the Key Operator Tools tab in System Settings, the User Name screen does not appear. Instead, the Non-programmed Name screen appears. Enter the user name.
- 2 Select the user name.



- **𝒯** Note
- ☐ The user names shown here are names that were programmed on the Key Operator Tools tab in System Settings. To enter a name not shown here, press [Non-programmed Name], and then enter the user name.
- 3 Press [OK].



Specifying a file name

Scanned data files are automatically named SCAN0001, SCAN0002, etc. If necessary, you can change the file name.

1 Press [File Name].

The soft keyboard is displayed for entering a file name.

2 Enter the file name.

₽ Reference


For information about how to enter characters, see *General Settings Guide*.

3 Press [OK].

Specifying a password

When a password is specified, only a person who knows the password can view the data.

- 1 Press [Password].
- 2 Enter a four-digit password.



3 Press [OK].

∰Important

☐ Do not forget the password. If you forget it, consult the system administrator of the machine.


Press [OK] twice to return to the Scanner Function screen or Email screen.



Viewing a List of Stored Files

From the list of stored files, you can delete the files stored in the Document Server or change the file information. To show the list of stored files, perform the following steps.

1 Press the [Scanner] key.

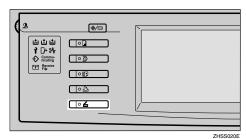

2 If user codes are set, enter a user code using the number keys, and then press the [#] key.

The Scanner Function screen appears.

For information about the user codes, see *General Settings Guide*.

- Note
- ☐ If the Network TWAIN Scanner screen appears, press [Cancel].



- The list of stored files is displayed.
 - 1 Press [Select Stored File].




2 Press [Manage/Delete File].

6


Viewing the List

The list of stored files has the following elements.


When using the network delivery scanner function or e-mail

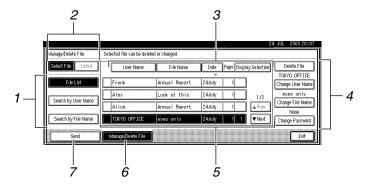

When using the Document Server function only

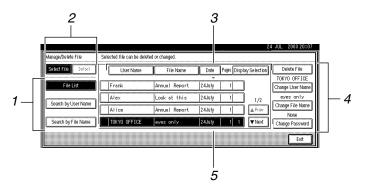

When displaying information of a selected stored file

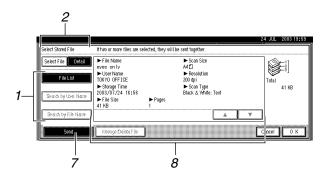

1. Keys for searching files

Switch to the screens for searching for a file by user name or file name, or to the screen for displaying all files.

2. Key to switch to the information display

Use to switch between the stored file list and the detailed information of the selected file.

3. Keys for sorting files

Sorts the files using the selected item. Select the same item once more for a reverse sort. However, the files cannot be sorted in reverse delivery order.

4. Keys for changing file information

Use for deleting the selected file or changing the user name, file name, or password.

5. List of stored files

The list of stored files is displayed.

Note

- ☐ Stored files cannot be shown when a function other than the scanning function is being used.
- ☐ If the file is not visible, use [▲Prev.] or [▼Next] to scroll through the list.
- ☐ For files which are password protected, a key symbol(1) is shown to the left of the file name.

6. [Manage/Delete File]

Press to manage or delete the files stored in the Document Server or to change the file information.

7. [Send]


Press to deliver or send the files stored in the Document Server. For more information, see p.71 "Delivering or Sending Stored Files".

8. Information of a selected stored file

Press [Detail] to display the information of a file after selecting the file from the file list.

Viewing a list of stored files in DeskTopBinder V2 Lite

The files stored in the Document Server are shown below using DeskTopBinder V2 Lite.

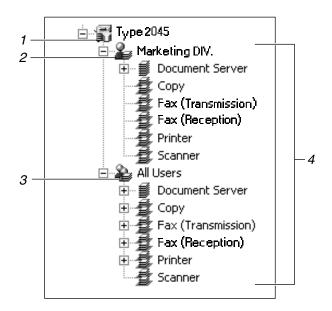

1. Connected device name

Displays the files stored in the connected device on the desk tree by dividing into User name and All Users folders.

2. User name

Displays only the files stored with the same user name specified in the connected device properties. The files stored from the scanner are shown in the Scanner folder.

3. All Users

Displays all files stored in the connected device.

4. Folder contents display

Displays the files in the selected folder.

Searching for Files

You can search for files from the stored files using the user name or file name.

Searching by user name

- 1 On the screen with the list of stored files, press [Search by User Name].
- 2 Select the user name to be used for the search.



Ø Note

☐ The user names shown here are names that were registered on the Key Operator Tools tab in System Settings. To enter a user name not shown here, press [Non-programmed Name], and then enter the name.

Press [OK].

The search starts, and files whose user name starts with the entered string are displayed.



Searching by file name

1 On the screen with the list of stored files, press [Search by File Name].

The soft keyboard is displayed for searching by file name.

2 Enter the file name to search for.

For information about how to enter characters, see *General Settings Guide*.

Press [OK].

The search starts, and files whose name starts with the entered string are displayed.



Delivering or Sending Stored Files


Files stored in the Document Server can be delivered to the delivery server or sent as e-mail.

Note

- ☐ This section explains how to select files to be delivered or sent. For more information about the delivery procedure, see p.53 "Delivery Procedure". For more information about sending by e-mail, see p.41 "Procedure for Sending E-mail".
- □ When stored files are delivered or sent, basic settings cannot be made. The files are delivered or sent with the basic settings specified when they were stored in the Document Server.
- 1 Display the list of stored files by pressing [Select Stored File].

See p.66 "Viewing a List of Stored Files".

2 Select a file to be delivered or sent.



Note

☐ When you select a password protected file, the Password screen appears. After you have entered the correct password and pressed [OK], the file will be selected.

To select multiple files, repeat step 2.



Note

- ☐ You can select up to 30 files for one operation.
- ☐ If you select multiple files, the files will be delivered or sent in the order they were selected.
- ☐ If you press [Display Selection], the selected files will be shown in the order of delivery.

Press [OK].

The screen for specifying a destination appears.

- 5 Switch the Destination List as necessary.
- 6 Specify a destination.
- If required, select the sender (scan data delivery source) and a subject.
- 8 Press the [Start] key.

Managing Stored Files

Displaying and Downloading Stored Files Using a Web Browser

Using a Web browser in a client computer, you can display or download the files in the Document Server. When http:// (machine IP address) / is entered in the address bar of the Web browser in a client computer, the Stored Files List screen for the Document Server is displayed. For more information, click [Help] on the upperright corner of the displayed screen.

For displaying or downloading stored files using a Web browser, see *General Settings Guide*.

For more information about making settings for using a Web browser, see *Network Guide*.

Deleting Files

You can delete files that are no longer needed.

Limitation

☐ Files waiting for delivery cannot be deleted.

Using a Web browser from a client computer, you can also delete the files stored in the Document Server. See *General Settings Guide*.


1 Display the list of stored files by pressing [Select Stored File].

p.66 "Viewing a List of Stored Files"

2 Press [Manage/Delete File].

The Manage/Delete File screen appears.


3 Select the file to be deleted.



Note

- \square Up to 30 files can be selected.
- ☐ When you select a password protected file, the Password screen appears. Enter the correct password, and then press [OK]. When more than one file is selected, the Password screen appears each time a password protected file is selected.

4 Press [Delete File].



A confirmation message for file deleting appears.

- **5** Press [Delete].
- 6 Press [Exit].

Changing File Information

The information about files stored in the Document Server (user name, file name, and password) can be changed.

Limitation

☐ Information about files waiting for delivery cannot be changed.

Using a Web browser from a client computer, you can change the information of files stored in the Document Server. See *General Settings Guide*.

1 Display the list of stored files by pressing [Select Stored File].

p.66 "Viewing a List of Stored

2 Press [Manage/Delete File].

3 Select the file for which you want to change the file information.




- Note
- ☐ When you select a password protected file, the Password screen appears. Enter the correct password, and then press [OK].
- 4 Change the file information.

Changing the user name

1 Press [Change User Name].



2 Select the new user name.



Note


☐ The user names shown here are names that were registered on the Key Operator Tools tab in System Settings. To enter a user name not shown here, press [Non-programmed Name], and then enter the user name.

3 Press [OK].



Changing the file name

1 Press [Change File Name].



The soft keyboard is displayed for changing the file name.


2 Enter the new file name.

For information about how to enter characters, see *General Settings Guide*.

3 Press [OK].

Changing the password

1 Press [Change Password].



2 Enter a new four-digit password.



3 Press [OK].

∰Important

- ☐ Do not forget the password. If you forget it, consult the system administrator of the machine.
- Make sure that the file information was changed as necessary, and press [Exit].




7. Using the Network TWAIN Scanner Function

This chapter describes the operations for scanning originals with the network TWAIN scanner using DeskTopBinder V2 Lite. In addition, the preparation for using the network TWAIN scanner and some functions of the TWAIN driver are introduced.

Preparation for Using the Network TWAIN Scanner

To use the machine as a network TWAIN scanner, the preparation described below is required.

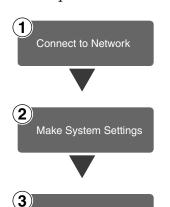

Install Software

Connect the machine to the network with an Ethernet cable, IEEE 1394 (optional) cable, or use a wireless LAN (optional). See *Network Guide*.

Check the network settings in System Settings, and change if required.

See Network Guide.

On the client computers, install the software required for using the network TWAIN scanner functions, such as a TWAIN driver and DeskTopBinder V2 Lite.

See p.24 "Software for Using a Network TWAIN Scanner".

Scanning Originals

This section explains how to scan originals using the network TWAIN scanner function.

- **1** Start DeskTopBinder V2 Lite, and then select the scanner driver.
 - On the [Start] menu, point to [Program], point to [DeskTop-Binder V2], and then click [Desk-TopBinder V2].
 - 2 Click [Scanner Settings] on the [Tools] menu.

If the scanner is already selected, no scanner settings are necessary. Check the settings in the [File format for scanned image(s)] area, and then go to step **5**.

- 3 Click [Select Scanner Driver].
- 4 Select the name of the machine you want to use in the list, and then click [Select].
- 6 Click [OK].
- **2** Place the original in the scanner.
 - Reference p.31 "Setting Originals"
- **3** Make the basic settings.
 - ① On the [File] menu, point to [Add Document], and then click [Scan].

The TWAIN driver starts.

After a short while, the dialog box of the TWAIN driver that operates the scanner appears. This dialog box is called the Scanner Properties dialog box.

Note

- ☐ The name of the scanner currently being used is shown on the title bar of the dialog box. When multiple machines are connected, make sure that the indicated machine is the machine you want to use. If it is different, click [Select Source] to select the scanner again.
- ☐ If the machine you want to use is not displayed in the list, make sure that the IP address is configured and that the machine is correctly connected to the network. If the machine is still not displayed in the list after confirming the above, consult with your network administrator.
- 2 Depending on the type of original or the objective for scanning, select the icon in [Mode].
 - [Standard] is suitable for scanning standard originals that are comprised of mainly text.
 - [Photo] is suitable for scanning originals that include photos, shaded illustrations, etc.
 - **[OCR]** is suitable for conversion processing with an OCR (Optical Character Reading) application after scanning the original.
 - **[Filing]** is suitable for use with filing applications, etc.

𝚱 Note

☐ For advanced settings, click [Detail] to display the Detail window. For information about the Detail window, see TWAIN driver Help.

According to the settings of [Document:] and [Orientation:], change the other setting of the [Document] group.

p.37 "For a Network TWAIN Scanner"

For information about making settings for the [Document] group, see TWAIN driver Help.

When you want to configure the scanning area

When you do not configure the scanning area, the area scanned is the size specified in the [Size:] box.

• Click [Preview].

The original that was placed is scanned and the [Preview] dialog box appears. The scanning area in the preview is displayed within the broken lines.

2 Configure the scanning area by dragging a border or a corner.

When reconfiguring the area, click and drag one corner of the area towards or away from its opposite corner.

Note

☐ Depending on the scanning resolution, the area to be scanned may be subject to restrictions.

3 Click [Close].

Ø Note

☐ When an original placed in the ADF is previewed, place that original again.

4 Click [Scan].

When there is another original to scan, place the original, and then click [Continue]. When there are no more originals, click [Complete].

- **5** Save the scanned image in Desk-TopBinder V2 Lite.
 - ① On the [File] menu, click [Exit].
 - 2 Enter the file name, and then click [OK].

The image is stored in DeskTop-Binder V2 Lite, and DeskTop-Binder Viewer closes.

Fediting and printing scanned data

With DeskTopBinder V2 Lite, it is possible to edit and print scanned data. For more information about how to edit and print, see DeskTopBinder V2 Lite Help.

Functions of the TWAIN Driver

The following is an introduction to the various functions of the TWAIN driver:

For more information about these functions or other functions, see TWAIN driver Help.

Automatic Tilt Correction

This function automatically corrects character strings that were scanned slanted.

Printing to the Image

This function allows you to imprint dates, page numbers, or your favorite characters on a scanned image. You can also change the fonts of the imprints as well as change the ascending order of images to a descending order.

Scanning Mode Registration

This function allows you to register other scanning configurations that are often used as scanning modes besides the already pre-installed ones. After registration, you can quickly scan with these scanning configurations.

8. Appendix

Relationship between Resolution and Data Size

Resolution and scan area are inversely related. The higher the resolution is set, the smaller the area that can be scanned. Conversely, the larger the scan area, the lower the resolution that can be set.

The relationship between the scanning resolution and the data size is shown below. If the data size is too large, the message "Exceeded max. data capacity. Check the scanning resolution." appears on the control panel of the machine. Specify the scan size and resolution again.

Limitation

☐ Depending on the image compression level, the maximum image size will be limited.

For Use as E-mail, Network Delivery Scanner, or Document Server

♦ When Text, Text/Photo, or Photo is selected as the Scan Type All combinations up to A3/297 × 432 mm (11 × 17 inches) and 600 dpi are possible.

When Gray Scale is selected as the Scan Type

The originals can be scanned using combinations marked with O in the table.

	100 dpi	200 dpi	300 dpi	400 dpi	600 dpi
A3	0	0	0		
B4	0	О	О	О	
A4	0	О	О	О	
B5	0	0	О	О	О
A5	0	0	0	0	О
B6 *1	0	0	О	О	О
A6 *1	0	0	О	О	О
A7 *1	0	О	О	О	О
11 x 17	0	О	О		
Legal (8 ¹ / ₂ x 14)	0	0	О	О	
$8^{1}/_{2} \times 13$	0	0	0	0	
Letter $(8^1/_2 \times 11)$	О	0	О	О	
$5^{1}/_{2} \times 8^{1}/_{2}$	О	0	0	0	О

[†] The scanning size must be manually entered.

For Use as Network TWAIN Scanner

₽ Reference

To specify the scanning area or resolution when using the machine as a network TWAIN scanner, see TWAIN driver Help.

♦ When Text, Text/Photo, or Photo is selected as the Scan Type

The originals can be scanned using combinations marked with O in the table.

	100 dpi	200 dpi	300 dpi	400 dpi	500 dpi	600 dpi	700 dpi	800 dpi	900 dpi	1000 dpi	1100 dpi	1200 dpi
A3	О	О	О	О	О	О						
B4	О	О	О	О	О	0						
A4	О	О	О	О	О	О	О	О				
B5	О	О	О	О	О	О	О	О	О			
A5	О	О	О	О	О	0	О	О	O	О	0	0
B6	О	О	О	О	О	О	О	О	О	О	0	0
A6	О	О	О	О	О	О	О	О	О	О	0	0
A7 *1	0	0	O	O	0	0	0	0	O	0	0	О
11x17	0	0	0	0	0	0						
Legal (8 ¹ / ₂ x14)	0	О	О	О	О	О	О					
$8^{1}/_{2}x13$	О	О	О	О	О	О	О					
Letter $(8^1/_2x11)$	0	О	О	О	О	О	О	О				
$5^1/_2 x 8^1/_2$	О	О	О	О	О	О	О	О	О	О	О	0

^{*1} The scanning size must be manually entered.

♦ When Gray Scale is selected as the Scan Type

The originals can be scanned using combinations marked with O in the table.

	100 dpi	200 dpi	300 dpi	400 dpi	500 dpi	600 dpi	700 dpi	800 dpi	900 dpi	1000 dpi	1100 dpi	1200 dpi
A3	О	О	О									
B4	О	О	О	О								
A4	О	O	О	O								
B5	О	O	О	O	O							
A5	О	О	О	О	О	O	О					
B6	О	0	0	O	0	0	0	0				
A6	0	0	0	0	0	0	0	0	0			
A7 *1	О	О	О	О	О	O	О	0	О	О	0	О
11x17	О	0	0									
Legal (8 ¹ / ₂ x14)	О	О	О	О								
$8^{1}/_{2}x13$	О	О	О	О								
Letter $(8^1/_2x11)$	О	О	О	О	О							
$5^1/_2 x 8^1/_2$	О	О	О	О	О	О	О					

^{*1} The scanning size must be manually entered.

Relationship between File Type Specified and File Type Used When Sending E-mail

The relationship between the file type specified when scanning originals and the file type converted into when sending e-mail or storing files is shown below by scan type.

File type specified	Single page	Multi page			
Scan type	TIFF/JPEG	TIFF	PDF		
Text (Print)					
Text (OCR)	TIFF	Multi-page TIFF			
Text / Photo	111/1	Multi-page That			
Photo			PDF		
Gray Scale	TIFF (Non-compression) / JPEG (Compression) *1	PDF			

^{*1} When Gray Scale is used, the file format is converted to JPEG when [Standard], [High], or [Low] is selected in [Compression (Gray Scale)] of [Scanner Settings], and TIFF when [Off] is selected.

🔗 Note

- ☐ Stored documents are saved in single-page style. When sending stored documents by e-mail, you can select single-page style or multi-page style.
- ☐ When multi-page TIFF is specified for the documents saved in JPEG format, they are automatically changed to PDF format.

Ŏ

Troubleshooting

This section contains advice on what to do if you have problems scanning an original, or if the network delivery scanner or e-mail function does not work. Various messages that may appear on the control panel or client computer are listed, along with causes and solutions.

When Scanning Is Not Performed as Expected

Problems	Causes and Solutions
No image results from scanning.	The original was placed with the front and back reversed. When the original is placed directly on the exposure glass, the side to be scanned must face down. When the original is fed via the ADF, the side to be scanned must face up. See p.31 "Setting Originals".
The image is distorted or out of position.	 The original was moved during scanning. Do not move the original during scanning. The original was not pressed flat against the exposure glass. Make sure that the original is pressed flat against the exposure glass.
The scanned image is dirty.	The exposure glass or the exposure glass cover is dirty. Clean these parts. See <i>General Settings Guide</i> .
The scanned image is upside down.	The original was placed upside down. Place the original in the correct orientation. See p.31 "Setting Originals".

When the Delivery Function Does Not Work

Problems	Causes and Solutions
The delivery scanner function screen is not displayed.	 If the network TWAIN scanner screen appears when the machine is switched to scanner mode, press [Cancel] to switch to the network delivery scanner screen. If the display does not switch from network TWAIN scanner to network delivery scanner, the delivery scanner settings are not correct. See p.11 "Default Settings", and then make the appropriate settings.

When an Error Message Appears on the Control Panel

𝚱 Note

☐ If an error message that is not included in this section appears, turn off the main power switch of the machine, and then turn it on again. If the message still appears, note the content of the message and the error number (if listed in the table), and contact your service representative. For information about how to turn off the main power switch, see *General Settings Guide*.

Message	Causes and Solutions
Cannot cancel sending certain file(s). To confirm the result, check [Scanned Files Status].	Only files in waiting can be canceled. Files with a delivery status of successful or other result cannot be canceled.
Cannot communicate with SMTP server. Check the server status.	 Check whether this machine and the SMTP server are correctly connected to the network. The SMTP server is not running or is not in service. Check whether the Network settings in System Settings are correct.
Cannot communicate with the delivery server. Check the server status.	 There was no response from the delivery server. Possible causes are as follows: The delivery server is not running or has not started delivery service. The delivery server IP address is not set correctly in System Settings. The delivery server does not recognize the connected device. Configure the connected device in Set I/O Device of ScanRouter V2 Administration Utility. See ScanRouter V2 Administration Utility Help. The machine may not be correctly connected to the network. Check the LED indicators of the Ethernet board. See Network Guide.

Message	Causes and Solutions
Cannot detect original size. Select scan size.	Place the original correctly.
	Specify the scan size.
☐ These messages appear alternately.	When placing an original directly on the exposure glass, the open- ing/closing action of the ADF triggers the automatic original size detection process. Lift the ADF by more than 30 degrees.
Cannot find SMTP server. Check DNS or SMTP.	 Check whether this machine and the e-mail server are correctly connected to the network. The e-mail server is not running or is not in service. Check whether the Network settings in System Settings are correct.
Cannot select over 30 files at the same time.	To deliver more than 30 stored files, divide the files and perform the operation several times.
Cannot specify more than 500 destinations at the same time.	When there are 500 or more destinations for delivery or e-mail, split the destinations into two or more groups.
Exceeded max. data capacity. Check the scanning resolution, then press Start again.	Specify the scan size and resolution again. Note that it may not be possible to scan very large originals at a high resolution. See p.79 "Relationship between Resolution and Data Size".
Exceeded max. data capacity. Check the scanning resolution, then reset the original.	Specify the scan size and resolution again. Note that it may not be possible to scan very large originals at a high resolution. See p.79 "Relationship between Resolution and Data Size".
Exceeded max. E-mail size. Complete scan has not been made. Press [Send] to send the current scanned data, or press [Cancel & Delete].	The size of the e-mail exceeded the maximum size possible. Reduce the volume of images and send it again.
Exceeded max. E-mail size. Sending E-mail has been cancelled. Check [Max. E-mail Size] in Scanner Features.	 Increase the size of [Max. E-mail Size]. Set [Divide & Send E-mail] to [Yes (per page)] or [Yes (per max. size)].
Exceeded max. file capacity. Delete the unnecessary stored files.	The maximum number of files that can be stored is 3000. Delete unneeded files.

Message	Causes and Solutions
Exceeded max. number of pages per file. Do you want to store the scanned pages as 1 file?	The maximum number of pages per file is 1000. Specify whether to use the data or not. Scan the pages that were not scanned and store them as a new file.
Exceeded max. number of search results which can be displayed.	Search again after changing the search conditions.
Exceeded max. number of standby files. Try again after the current file is sent.	There are 50 files waiting in the sending queue for the delivery server. Wait until files have been sent.
Exceeded max. page capacity per file. The current scanned data will be sent.	Because the number of pages has reached the maximum number that can be sent, the data up to this point is sent. Scan the remaining pages after transmission.
Load paper of the following sizes.Required: A3,B4,A4 ☐ B4☐ JIS A4☐ A4☐	Load paper of the sizes listed in the message.
Load the following paper in	Load paper in the tray indicated.
Memory is full. Cannot scan.	Because of insufficient hard disk space, the first page could not be scanned. Try one of the following measures: • Wait for a while, and then retry the scan operation. • Reduce the scan area or scanning resolution. • Delete unneeded stored files.
Memory is full. Delete the unnecessary stored files.	There is not enough free hard disk space. Delete unneeded files.
Ø Note	
☐ These messages appear alternately.	
Memory is full. Press [Send] to send the current scanned data, or press [Cancel] to delete.	Because there is not enough free hard disk space in the machine for delivering or sending by e-mail while storing into the document server, only some of the pages could be scanned. Specify whether to use the data or not.
Memory is full. Scanning has been cancelled. Do you want to store the scanned data? Note These messages appear alternately.	Because there is not enough free hard disk space in the machine for storing into the document server, only some of the pages could be scanned. Specify whether to use the data or not.

Message	Causes and Solutions
Memory is full. Scanning has been cancelled. Press [Send] to send the scanned data or press [Cancel] to delete.	Because there is not enough free hard disk space in the machine for delivery or e-mail, only some of the pages could be scanned. Specify whether or not to deliver the data.
No HDD is available for this function. Cannot store. Set original and select the TWAIN settings from the PC.	Files can be scanned with TWAIN by switching to the network TWAIN scanner function.
No sender is programmed for this number.	The short ID number specified has not been programmed in the delivery server. Specify the correct short ID number.
Output buffer is full. Sending the data has been cancelled. Please try again later.	Too many files are waiting to be delivered. Please try again after they have been delivered.
Password entered is not correct. Try again.	Enter the password again.
Scanner is currently in use for another function. Switch to another function to confirm the status. Note These messages appear alternately.	The machine is using another function such as copying. Retry scanning after the operation with the other function is completed.
Selected file is currently in use. Cannot change file name.	The name of a file that is being edited with DeskTopBinder V2 Lite/Professional or that is waiting for delivery cannot be changed. Try the operation again after editing is finished or delivery is canceled.
Selected file is currently in use. Cannot change password.	The password of a file that is being edited with DeskTopBinder V2 Lite/Professional or that is waiting for delivery cannot be changed. Try the operation again after editing is finished or delivery is canceled.
Selected file is currently in use. Cannot change user name.	The user name of a file that is being edited with DeskTopBinder V2 Lite/Professional or that is waiting for delivery cannot be changed. Try the operation again after editing is finished or delivery is canceled.
Selected file is currently in use. Cannot delete it.	A file that is being edited with Desk- TopBinder V2 Lite/Professional or that is waiting for delivery cannot be deleted. Try the operation again after editing is finished or delivery is can- celed.

Message	Causes and Solutions
Sender's name is not selected. Sending E-mail has been cancelled.	A sender's name should be specified before sending e-mail. Send e-mail after specifying the sender's name.
Sending the data has been cancelled due to containing some deleted file(s). Try again after checking the stored files.	After the files were selected, some files were deleted with DeskTop-Binder V2 Lite/Professional. Perform the selection process again.
Sending the data has failed. Insufficient memory in SMTP server.	There is not enough free space on the hard disk of the SMTP server. Free up the required amount.
Sending the data has failed. Insufficient memory in the delivery server.	There is not enough free space on the hard disk of the delivery server. Free up the required amount.
Sending the data to SMTP server has failed. The data will be resent later.	A network error has occurred and a file was not sent correctly to the SMTP server. Wait until delivery is retried automatically after the preset interval. If the delivery fails again, consult the network administrator.
Sending the data to SMTP server has failed. To confirm the result, check [Scanned Files Status].	While a file was being sent to the SMTP server, a network error occurred and the file could not be sent correctly. Try the operation once more.
	If the message is still shown, the network may be crowded. Consult the network administrator.
	If multiple files were sent, use the Scanned Files Status screen to check for which file the problem occurred. See p.60 "Checking the Status of Delivery" and p.49 "Checking the Status of E-mail".
Sending the data to the delivery server has failed. To confirm the result, check [Scanned Files Status].	While a file was being sent to the de- livery server, a network error oc- curred and the file could not be sent correctly. Try the operation once more.
	If the message is still shown, the network may be crowded. Consult the network administrator.
	If multiple files were sent, use the Scanned Files Status screen to check for which file the problem occurred. See p.60 "Checking the Status of Delivery".

Message	Causes and Solutions
Sending the data to the delivery server has failed. The data will be resent later.	While a file was being sent to the delivery server, a network error occurred and the file could not be sent correctly. Wait until delivery is retried automatically after the preset interval. If the delivery fails again, consult the network administrator.
Specified SMTP server is not set correctly. Sending Email has been cancelled.	Check whether the Network settings in System Settings are correct.
The destination list has been updated. Specified destination(s) or sender's name has been cleared.	A specified destination or sender's name was cleared when the destination list in the delivery server was updated. Specify the destination or sender's name again.
The E-mail address entered is not correct. Please re-enter.	Make sure the e-mail address is correct, and then enter it again.
The specified group contains some invalid destination(s). Do you want to select only valid destination(s)?	The group contains members whose e-mail addresses are not registered. Please check the e-mail addresses of the group and make selections again.
Updating the destination list. Please wait. Specified destination(s) or sender's name has been cleared.	If a destination or sender's name was already selected, re-select it after this message is cleared.
Updating the destination list has failed. Try again?	Check whether the delivery server has started operation.

When an Error Message Appears on the Computer

This section describes the main possible causes and actions for error messages displayed on the client computer when the TWAIN driver is used.

Note

☐ If an error message that is not contained in this section appears, turn off the main power switch of the machine, and then turn it on again. If the message is still shown after scanning is performed again, note the content of the message and the error number (if listed in the table), and contact your service representative. For information about how to turn off the main power switch, see *General Settings Guide*.

Message	Causes and Solutions
[Cannot connect to the scanner. Check the network Access Mask settings in User Tools.]	The access mask is set. Consult the network or scanner administrator.
[Cannot detect the paper size of the original. Specify the scanning size.]	 Place the original correctly. Specify the scan size. When placing an original directly on the exposure glass, the opening/closing action of the ADF triggers the automatic original size detection process. Lift the ADF by more than 30 degrees.
[Cannot find the scanner. Check if the scanner main power is on.]	 Check whether the main power switch of the machine is turned off. Check whether the machine is connected to the network correctly. Deselect the personal firewall function of the client computers.
[Cannot find the scanner used for the previous scan. Another scanner will be used instead.]	Check whether the power switch of the previously used scanner is turned on. Reselect the scanner.
[Cannot save to the default file.]	The default file cannot be overwrite-saved. Save the data to other file.
[Error has occurred in the scanner.]	Check whether the scanning settings made with the application exceed the setting range of the machine.
[Error has occurred in the scanner driver.]	 Check whether the network cable is connected correctly to the computer. Check whether the Ethernet board of the computer is recognized correctly by Windows. Check whether your computer can use the TCP/IP protocol.
[Failed to create the file.]	There is not enough free space on the hard disk. Delete the unnecessary files.

Message	Causes and Solutions
[Failed to save the preview image.]	There is not enough free space on the hard disk. Delete the unnecessary files.
[Insufficient memory. Close all applications, then restart scanning.]	Close all the unnecessary applications running on the computer.
[Insufficient memory. Reduce the scanning area.]	Reset the scan size.
	Lower the resolution.
	Set with no compression. See p.16 "Scanner Settings".
	Ø Note
	"The Relationship between the Resolution and the Scanning Area" chart in Help for halftone scanning might not always apply. Scanning cannot be performed if large values are set for brightness when using halftone or high resolution.
	☐ When a paper misfeed occurs in the machine during printing, scanning cannot be performed. In this case, after the misfed paper has been removed, proceed with scanning.
[No response from the scanner.]	 Check whether the machine is connected to the network correctly. The network is crowded. Wait for a while, and then try to reconnect.
[No User Code is registered. Consult your system administrator.]	Access is restricted with user codes. Consult the system administrator of the machine.
[Please call your service representative.]	An unrecoverable error has occurred in the machine. Call your service representative.
[Please wait.]	The machine is in warming up. Please wait. Automatic scanning will start soon.
[Scanner is in use for other function. Please wait.]	A function of the machine other than the scanner function is being used such as the copier function. Wait for a while and reconnect.
[Scanner is in use by other user. Please wait.]	Another user is using the machine to scan originals. Wait for a while and reconnect.
[Scanner is not available. Check the scanner connection status.]	 Check whether the main power switch of the machine is turned off. Check whether the machine is connected to the network correctly.
	Deselect the personal firewall function of the client computers.

Message	Causes and Solutions
[Scanner is not ready. Check the scanner and the options.]	Check whether the ADF cover is closed.
[The name is already in use. Check the registered names.]	You tried to register a name that is already in use. Use another name.
[The scanner power is off.]	 Check whether the main power switch of the machine is turned on. Check whether the machine is connect-
	ed to the network correctly.

Specifications

Scan method	Flat bed scanning
Image sensor type	CCD Image Sensor
Scan type	Sheet, book
Interface	Ethernet interface (10BASE-T or 100BASE-TX), IEEE 1394(optional), and wireless LAN(optional)
Maximum scan size	A3/297 × 432 mm (11 × 17 inches)
Scan density	600 dpi
Variable range of scan resolution	 When used as a network TWAIN scanner Setting range: 100 dpi - 1200 dpi When used as a network delivery scanner or for sending e-mail Setting range: 100 dpi, 200 dpi, 300 dpi, 400 dpi, and 600 dpi
File format that cannot be sent by e-mail	TIFF, JPEG, PDF
Mailing protocol *1	Send: SMTP

^{*1} This machine is not adapted to SMTP or POP authentification.

INDEX

A	J
Automatic Tilt Correction, 78 Auto run program, 22	Job Reset Time in Adding Original, 18
В	<u>-</u>
Basic Settings, 13	List displays Stored Files, 67
С	М
Checking the status of delivery, 60 [Check Modes] key, 7 [Clear Modes] key, 7 [Clear/Stop] key, 8 Compression (Black & White), 17 Compression (Gray Scale), 17	Main power indicator and power indicator, 7 Max. E-mail Size, 17 Mixed Original Sizes Priority, 19 Mode, 76
Default settings, 11 DeskTopBinder V2 Lite, 26, 28, 75 Destination List Priority, 17 Display, 7 Display Contents E-mail, 9 Network delivery scanner, 9 Network TWAIN scanner, 8	Network delivery scanner, 4 Network TWAIN scanner, 6 Number keys, 8
	O
	Operation switch, 7 Original orientation and scan area, 35 Original Orientation Priority, 18 Original Setting, 18
Divide & Send E-mail, 17 Document Server, 5	Р
<u>É</u>	Placing on the exposure glass, 32 Placing original in the Auto Document
E-mail, 3 E-mail Information Language, 18 [Energy Saver] key, 7 [#] Enter key, 8	Feeder (ADF), 33 Preview, 77 Print & Delete Scanner Journal, 19 Printing to the image, 78
F	R
File Type Priority, 19 Function keys, 8	Relationship between File Type Specified and File Type Used When Sending E-mail, 82 Relationship between resolution and data size, 79
Image density, 13 Indicators, 7 Initial scanner setup, 11 Installing software, 22	Resolution, 13

S

Save, 77 Scanning mode registration, 78 Scanning originals, 76 ScanRouter V2 Lite, 29 Scan size, 13 Scan type, 13 Selecting a custom size, 15 Select Title, 19 Sender's Name Default, 17 Send/Store Connection timeout, 16 Software supplied on CD-ROM, 27 [Start] key, 8 Status indicators, 8 Stored files Searching, 70 Storing data, 62 Switch to Batch, 19

Т

Troubleshooting, 83 Type2045 TWAIN Driver, 27

U

Update delivery server destination list, 17 [User Tools/Counter] key, 7

ν

Viewing a list of stored files in DeskTopBinder V2 Lite, 69

96 GB GB B548-8700

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

I means POWER ON.

() means STAND BY.



Declaration of Conformity

"The Product complies with the requirements of the EMC Directive 89/336/EEC and its amending directives and the Low Voltage Directive 73/23/EEC and its amending directives."

Trademarks

Adobe and Acrobat are trademarks of Adobe Systems Incorporated.

Ethernet is a registered trademark of Xerox Corporation.

Pentium is a registered trademark of Intel Corporation.

MS, Microsoft, and Windows are registered trademarks of Microsoft Corporation.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights in those marks.

- The product name of Windows®95 is Microsoft® Windows® 95.
- The product name of Windows®98 is Microsoft® Windows® 98.
- The product name of Windows® Me is Microsoft® Windows® Millennium Edition (Windows Me).
- The product names of Windows® XP are as follows:

Microsoft® Windows® XP Professional

Microsoft® Windows® XP Home Edition

• The product names of Windows® 2000 are as follows:

Microsoft® Windows® 2000 Advanced Server

Microsoft® Windows® 2000 Server

Microsoft® Windows® 2000 Professional

• The product names of Windows NT® are as follows:

Microsoft® Windows NT® Server 4.0

Microsoft® Windows NT® Workstation 4.0