

Booklet Finisher BK5000 (B836)

Booklet Finisher BK5000 (B836)


PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.Exterior (B836)	2	19.Decals And Documents (B836)	38
2.Paper Transfer 1 (B836)	4	Parts Index	42
3.Paper Transfer 2 (B836)	6		
4.Paper Transfer 3 (B836)	8		
5.Staple Transfer Section 1 (B836)	10		
6.Staple Transfer Section 2 (B836)	12		
7.Staple Tray 1 (B836)	14		
8.Staple Tray 2 (B836)	16		
9.Staple Tray 3 (B836)	18		
10.Staple Tray 4 (B836)	20		
11.Staple Tray 5 (B836)	22		
12.Paper Crimp Section 1 (B836)	24		
13.Paper Crimp Section 2 (B836)	26		
14.Paper Crimp Section 3 (B836)	28		
15.Drive Section (B836)	30		
16.Electrical Section 1 (B836)	32		
17.Electrical Section 2 (B836)	34		
18.Frame Section (B836)	36		

April ,30 ' 2008

1.Exterior (B836)

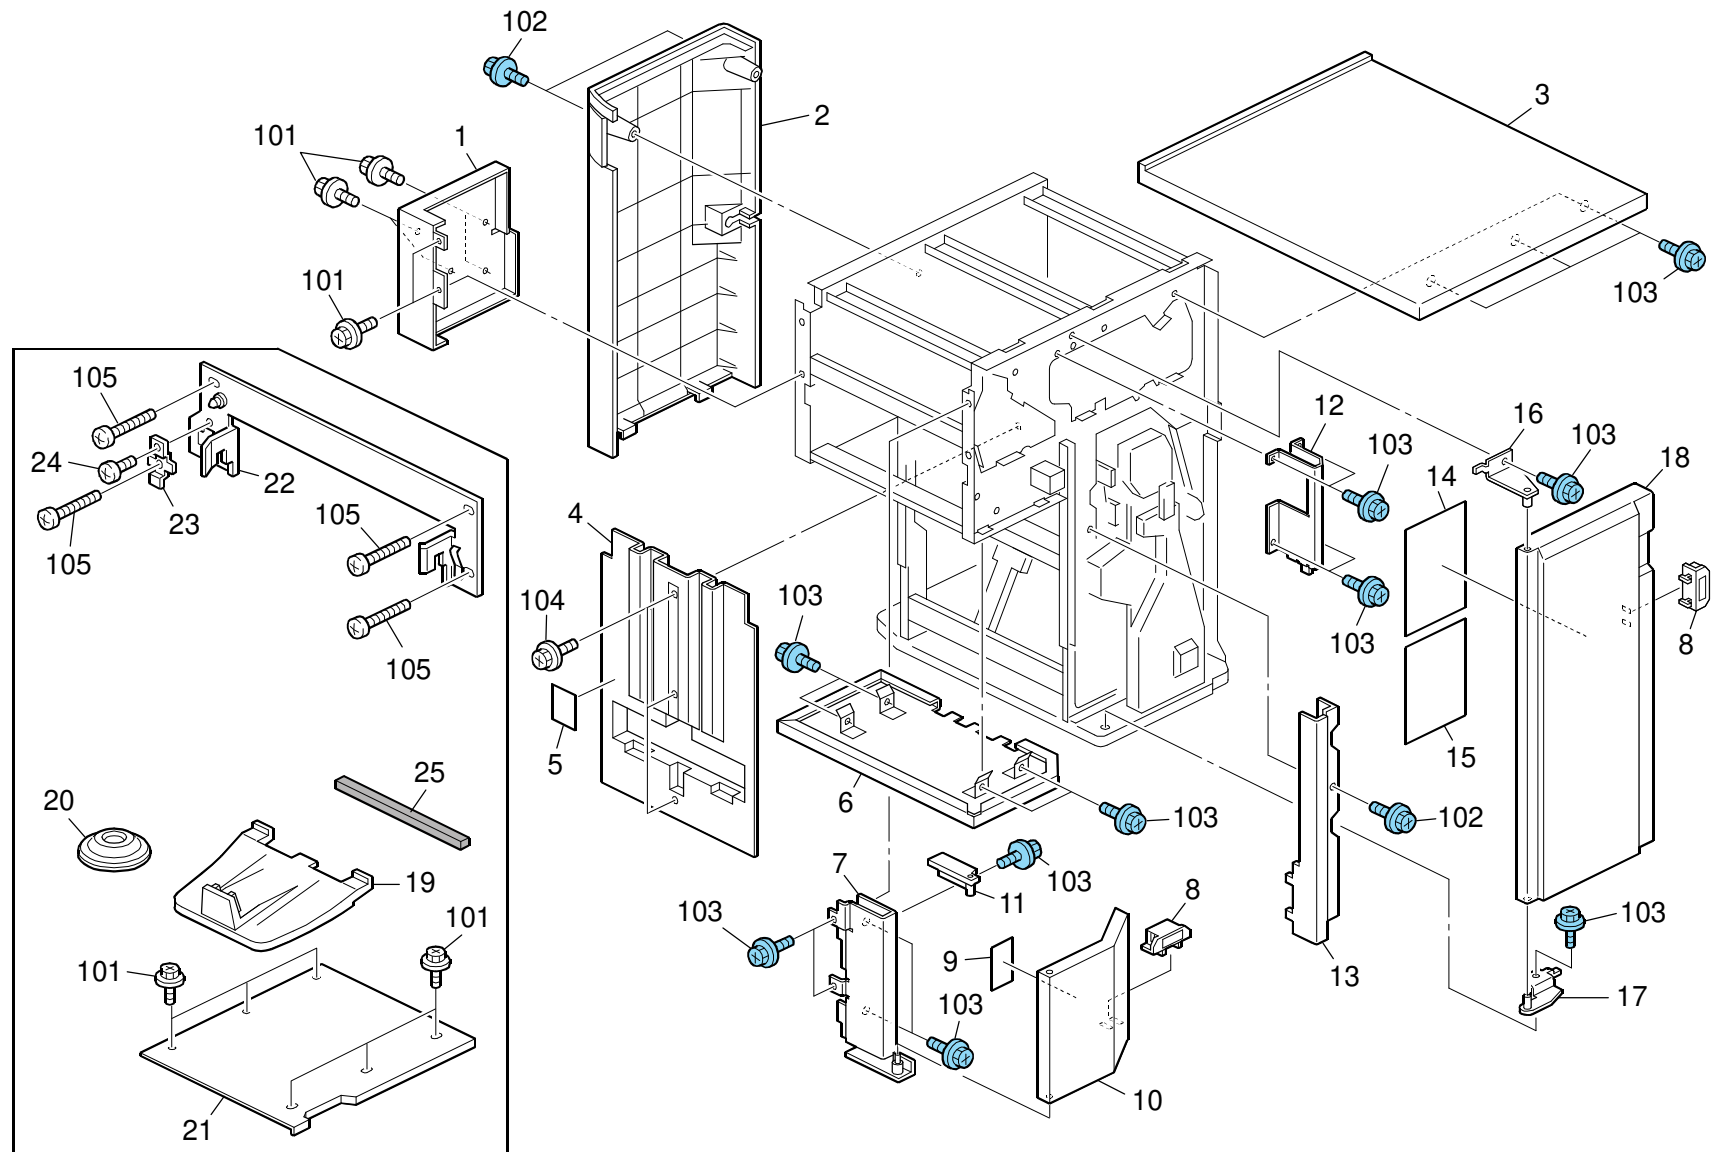


1.Exterior (B836)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B836 6162	Rear Cover - Left Upper	1
2	B700 6175	Cover:Rear	1
3	B836 6151	Cover - Upper	1
4	B836 3165	End Fence	1
5	B793 7898	Decal:Paper Exit Sub-unit	1
6	B836 6121	Tray Cover - Upper	1
7	B836 6181	Front Cover - Left Upper	1
8	AG07 0512	Magnet Catch:Ass'y	2
9	B836 7864	Decal - Misfeed Removal Left	1
10	B836 6131	Cover - Left Front	1
11	B836 1151	Cover Hinge - Left Upper	1
12	B836 6171	Left Cover - Upper Welding	1
13	B836 6195	Cover - Left Front	1
14	B836 7850	Decal - Misfeed Removal	1
15	B836 7851	Decal - Staple Exchange	1
16	B700 6125	Hinge:Door:Upper:Ass'y	1
17	B700 6120	Hinge:Door:Lower:Ass'y	1
18	B700 6115	Cover:Front	1
19	B700 3851	Tray:Paper Crimp Sub-unit	1
20	B132 1226	Holder:Stand	4
21	B836 6185	Cover - Right Lower	1
22	B830 7530	Coupling Bracket	1
23	B830 7536	Coupling Bracket - Correct	1
24	AA14 3396	Screw - M4x4	1
25	B706 7531	Cushion:Spacer	1



Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3008Q	Tapping Screw:3x8	
103	0454 3006Q	Tapping Screw - M3x6	
104	0451 3008N	Tapping Screw - M3x8	
105	0354 4014N	Screw M4x14	

2.Paper Transfer 1 (B836)

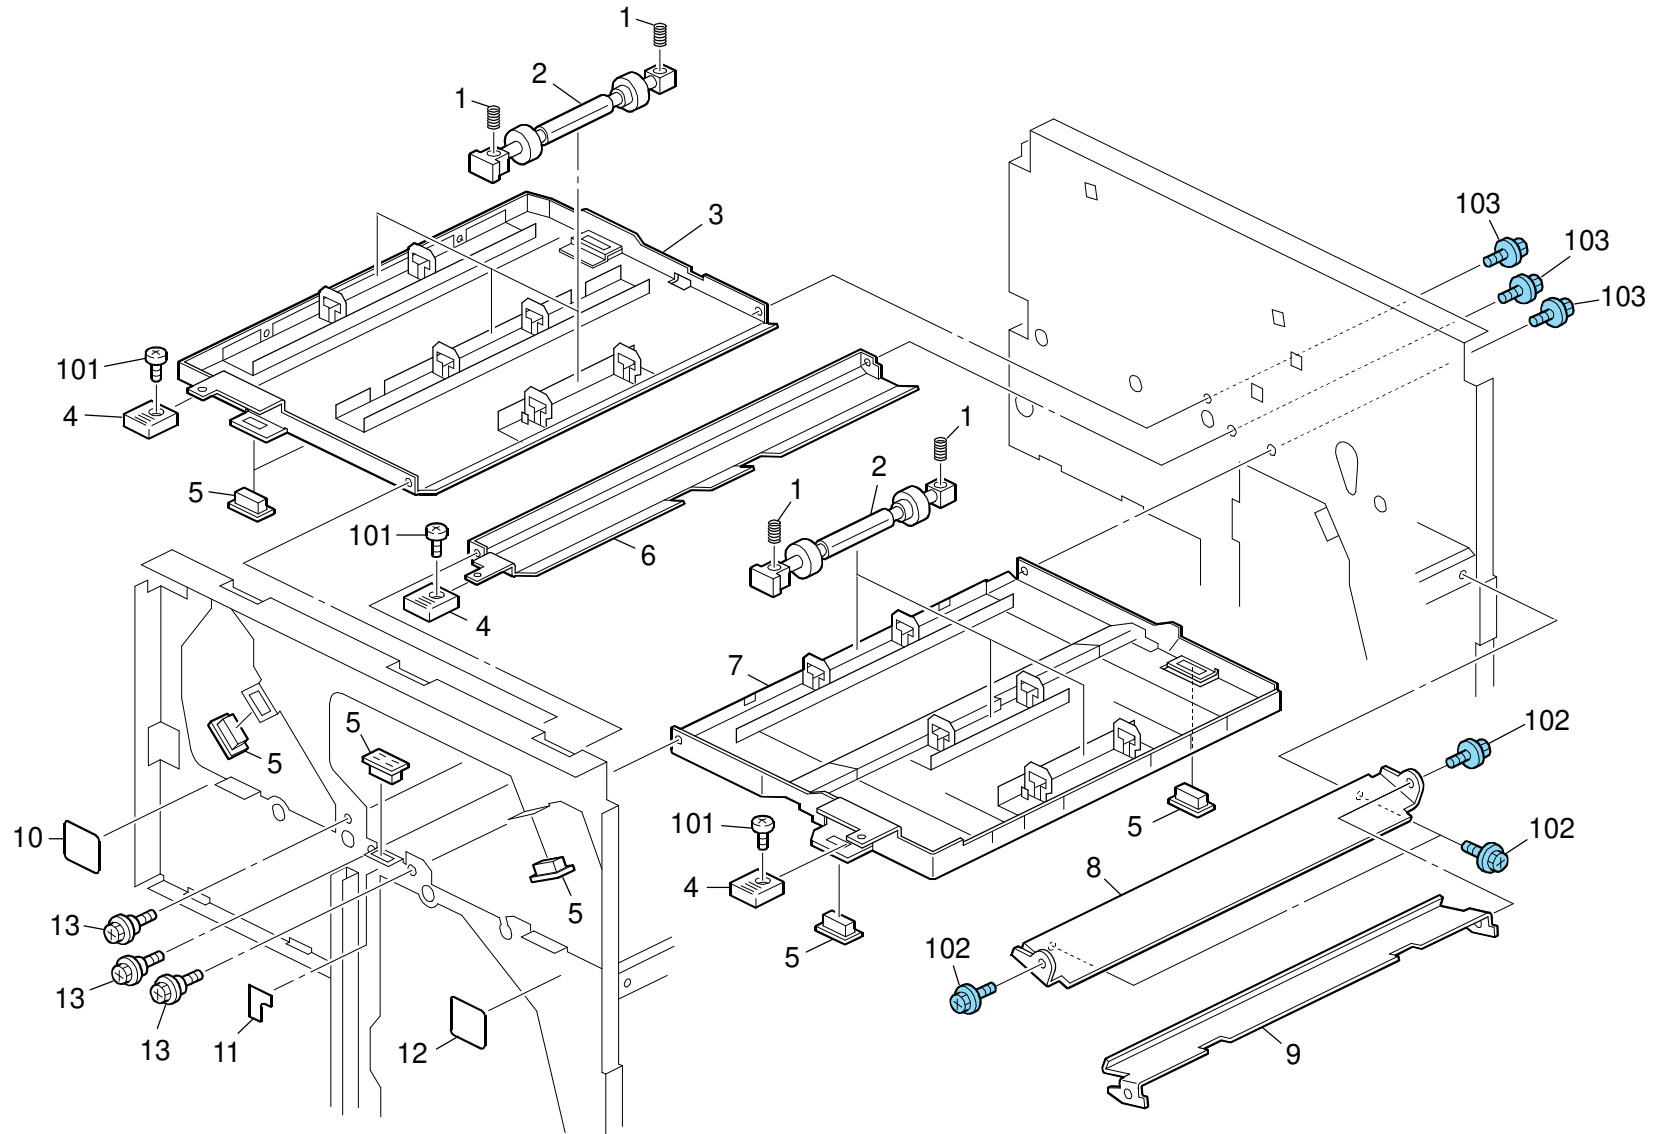


2.Paper Transfer 1 (B836)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B836 2852	Compression Spring	4
2	AF02 2147	Driven Roller	2
3	B836 2821	Exit Guide Plate - Lower	1
4	A353 2243	Lever Knob	3
5	AG07 0513	Magnet Catch	5
6	B836 2842	Guide Plate - Middle Gate	1
7	B836 2811	Guide Plate - Entrance	1
8	B830 7511	Connecting Guide Plate - Lower	1
9	B830 7512	Connecting Guide Plate - Upper	1
10	B836 7863	Decal - Guide Plate Exit	1
11	B836 7862	Decal - Guide Plate Middle	1
12	B836 7861	Decal - Guide Plate Entrance	1
13	B830 1135	Screw	3

Index No.	Part No.	Description	Q'ty Per Assembly
101	0353 0040N	Screw - M3x4	
102	0454 3006Q	Tapping Screw - M3x6	
103	0454 3008Q	Tapping Screw:3x8	

3.Paper Transfer 2 (B836)

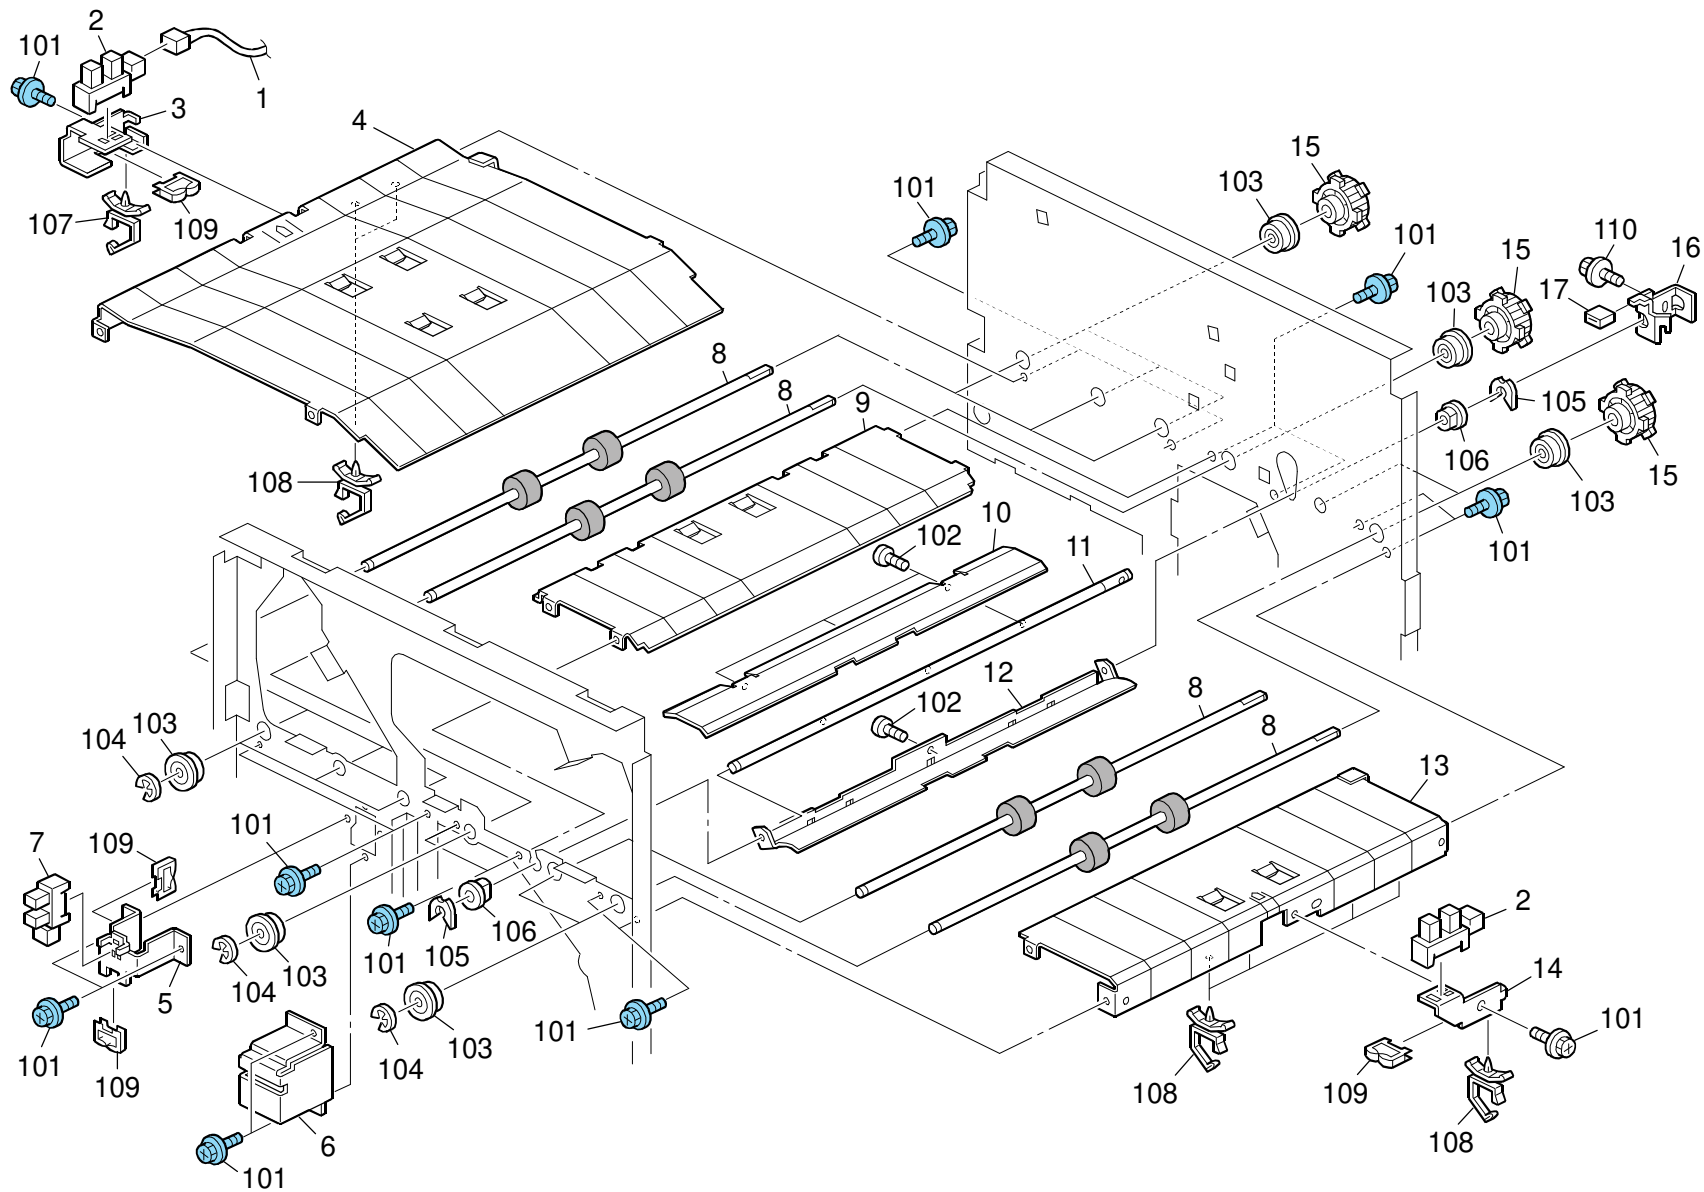


3.Paper Transfer 2 (B836)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B836 5373	Harness - Paper Feed Sensor	1
2	GW01 0007	Photo Refiection Sensor:Exit	2
3	B836 2845	Paper Feed Sensor Bracket	1
4	B836 2844	Exit Guide Plate - Lower	1
5	B836 1156	Sensor Bracket	1
6	B836 1155	Cover: - Sensor	1
7	AW02 0114	Photo Interruptor - Lower Limit	1
8	B836 2851	Transport Roller	4
9	B836 2843	Guide Plate - Lower Middle	1
10	B836 2833	Stripper Plate - Upper	1
11	B836 2831	Gate Plate Shaft	1
12	B836 2832	Stripper Plate - Lower	1
13	B836 2841	Guide Plate - Entrance	1
14	B836 2846	Entrance Sensor Bracket	1
15	B352 1607	Timing Pulley - T20-S3M	3
16	B836 2834	Gate Plate Stopper	1
17	A697 2102	Damper - Junction Gate Solenoid	1



Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0353 0060N	Bind Screw - M3x6	
103	0805 3537	Ball Bearing:DIA6xDIA13x5:DIA14.5	
104	0720 0040E	Retaining Ring - M4	
105	0805 0089	Retaining Ring - M4	
106	0805 3263	Bearing - 6x10x6mm	
107	1105 0623	Clamp - LBWS-0206S-V0	
108	1105 0516	Clamp	
109	1105 0328	Harness Clamp - ES-0505	
110	0451 3006N	Tapping Screw - 3x6	

4.Paper Transfer 3 (B836)

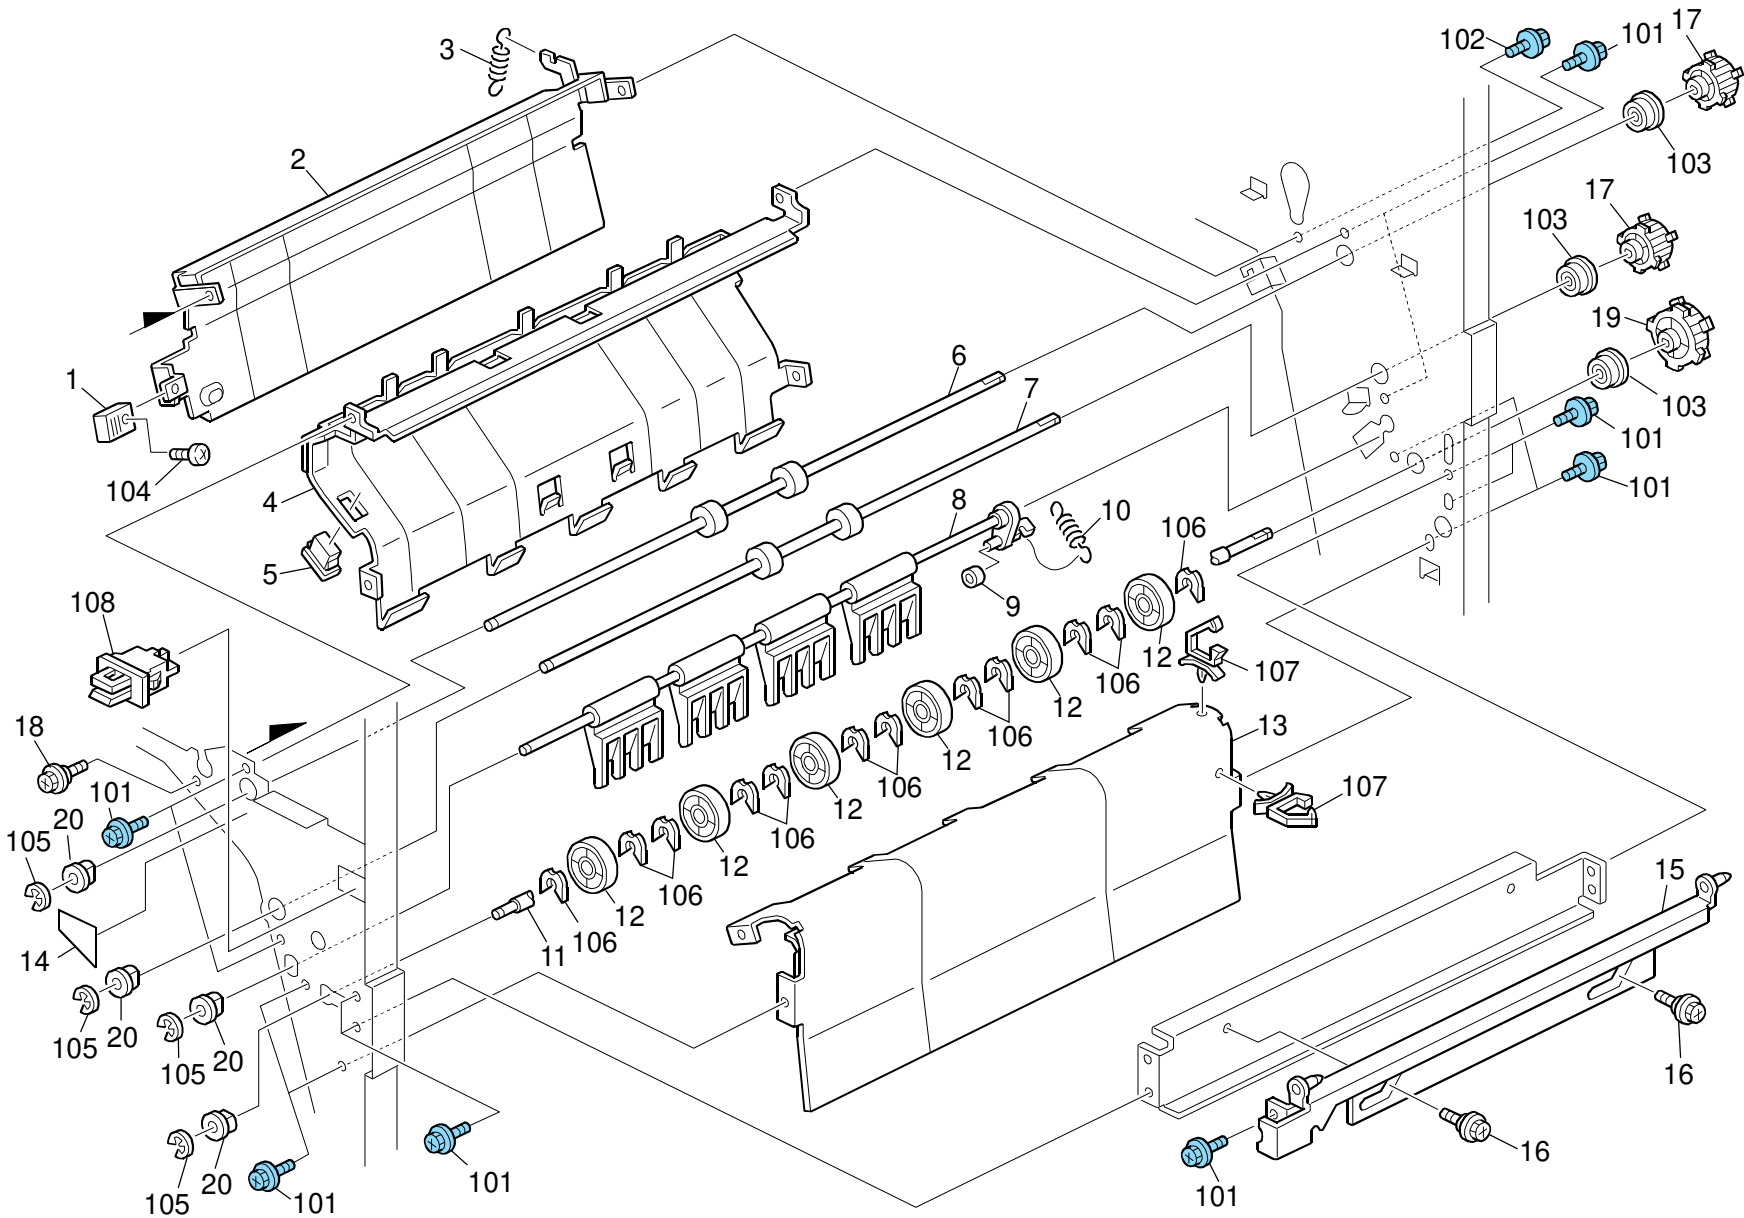


4.Paper Transfer 3 (B836)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A353 2243	Lever Knob	1
2	B836 2424	Guide Plate - Turn	1
3	B700 2422	Tension Spring:Turn:Open and Close	1
4	B700 2411	Guide Plate:Turn:Ass'y	1
5	AG07 0513	Magnet Catch	1
6	B836 2851	Transport Roller	1
7	B700 2461	Transport Roller:Duplex Stack:Lower	1
8	B700 2431	Polarization Powl:Duplex Stack	1
9	A458 2251	Cushion - Bin Solenoid Lever	1
10	B700 2432	Tension Spring	1
11	B700 2452	Shaft:Turn:Guide	1
12	B700 2453	Guide:Turn	6
13	B700 2441	Guide Plate:Duplex Stack:Ass'y	1
14	B836 7867	Decal - Turn Open and Close	1
15	B830 1130	Lever - Coupling	1
16	B830 1135	Screw	2
17	B352 1607	Timing Pulley - T20-S3M	2
18	AA14 3790	Screw:Contact Point	1
19	B700 1701	Timing Pulley:40T	1
20	5053 0447	Bushing - 6mm	4

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0454 3008Q	Tapping Screw:3x8	
103	0805 3537	Ball Bearing:DIA6xDIA13x5:DIA14.5	
104	0353 0040N	Screw - M3x4	
105	0720 0040E	Retaining Ring - M4	
106	0805 0088	Retaining Ring - M6	
107	1105 0516	Clamp	
108	1204 2541	Interlock Switch	

5.Staple Transfer Section 1 (B836)

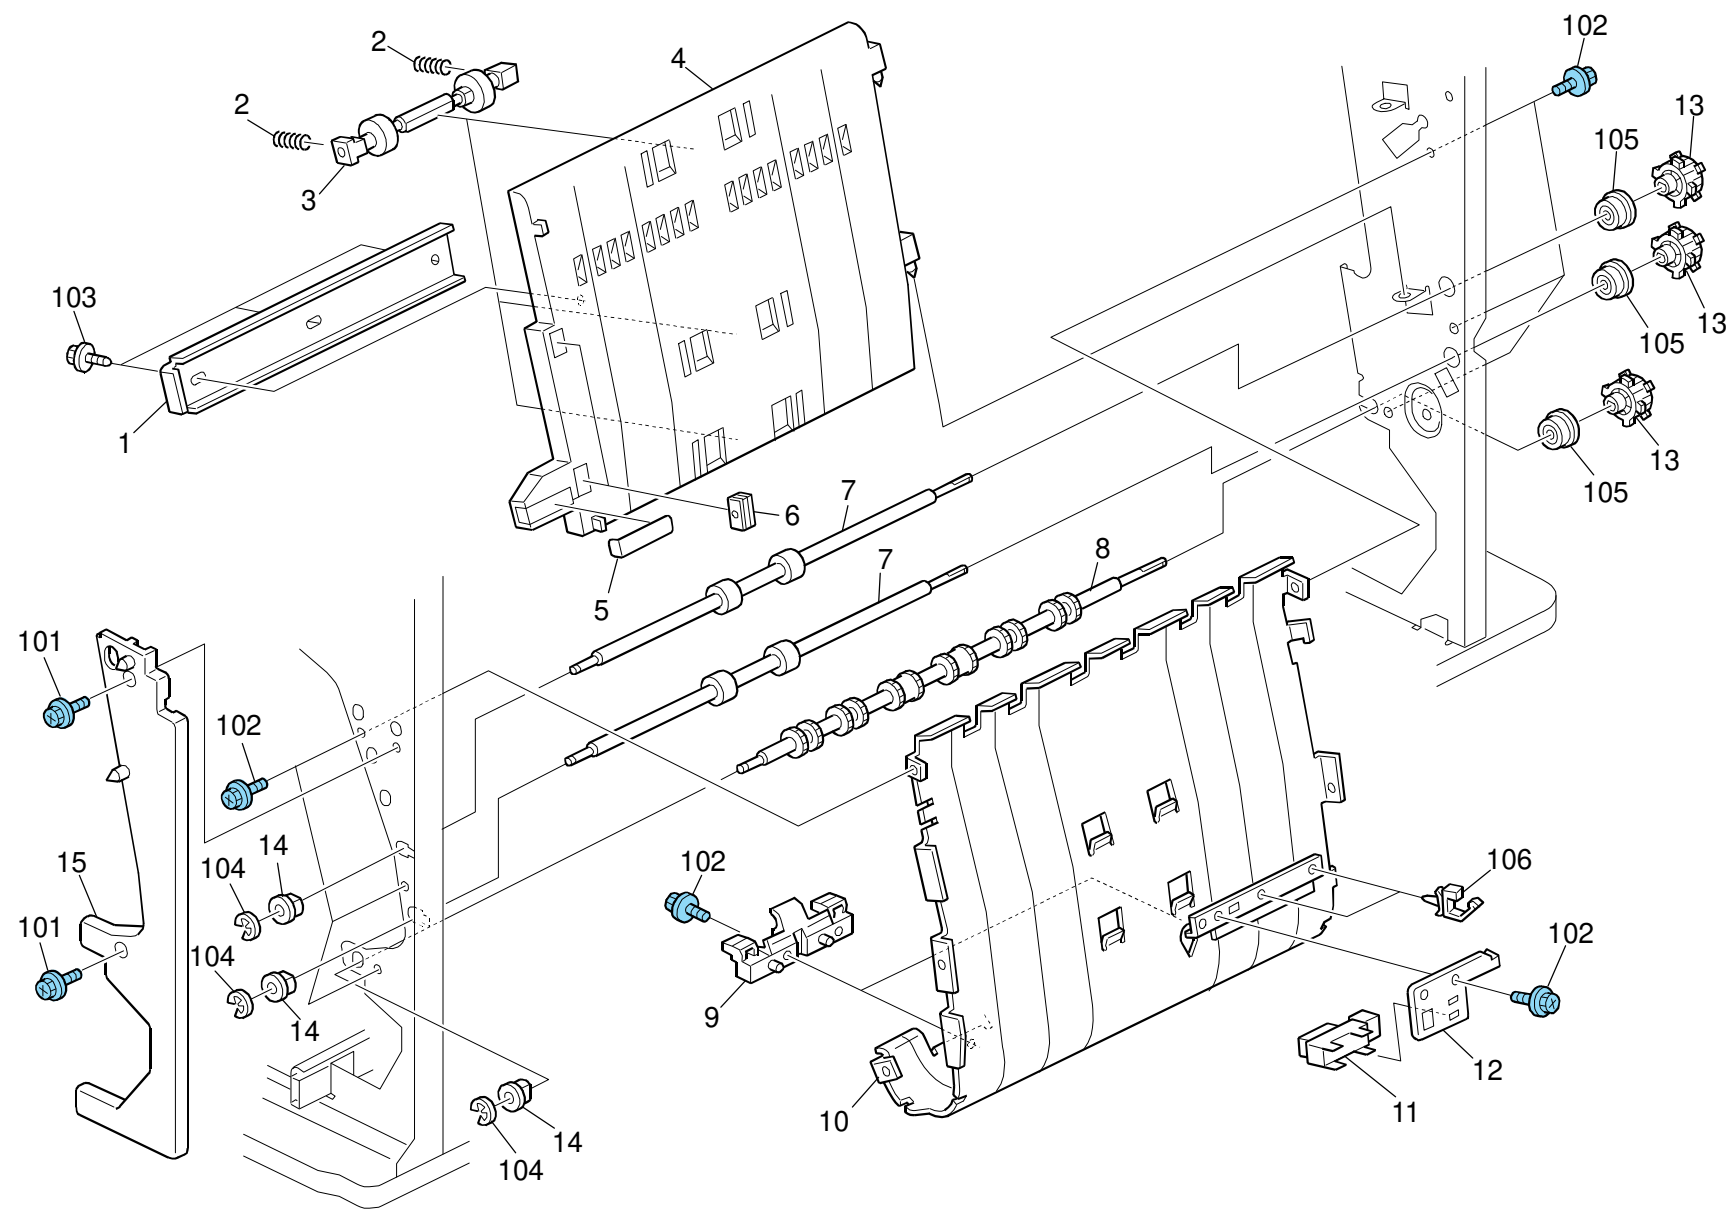


5.Staple Transfer Section 1 (B836)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A612 2435	Support Plate	1
2	B700 2476	Compression Spring:Exit:Driven	6
3	AF02 2147	Driven Roller	3
4	B700 2471	Guide Plate:Lengthwise	1
5	B836 7865	Decal - Vertical Transport	1
6	AG07 0514	Magnet Catch	1
7	B700 2461	Transport Roller:Duplex Stack:Lower	2
8	B700 2491	Exit Roller:Stapler Tray	1
9	B700 2486	Guide Plate:Exit:Stapler Tray	1
10	B700 2481	Guide Plate:Lengthwise:Ass'y	1
11	GW01 0007	Photo Refiection Sensor:Exit	1
12	B700 2485	Bracket:Sensor:Duplex Tray	1
13	B352 1607	Timing Pulley - T20-S3M	3
14	5053 0447	Bushing - 6mm	3
15	B700 6105	Inner Cover:Lower	1


Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3008Q	Tapping Screw:3x8	
102	0454 3006Q	Tapping Screw - M3x6	
103	0450 3008N	Tapping Screw - M3x8	
104	0720 0040E	Retaining Ring - M4	
105	0805 3537	Ball Bearing:DIA6xDIA13x5:DIA14.5	
106	1105 0623	Clamp - LBWS-0206S-V0	

6.Staple Transfer Section 2 (B836)

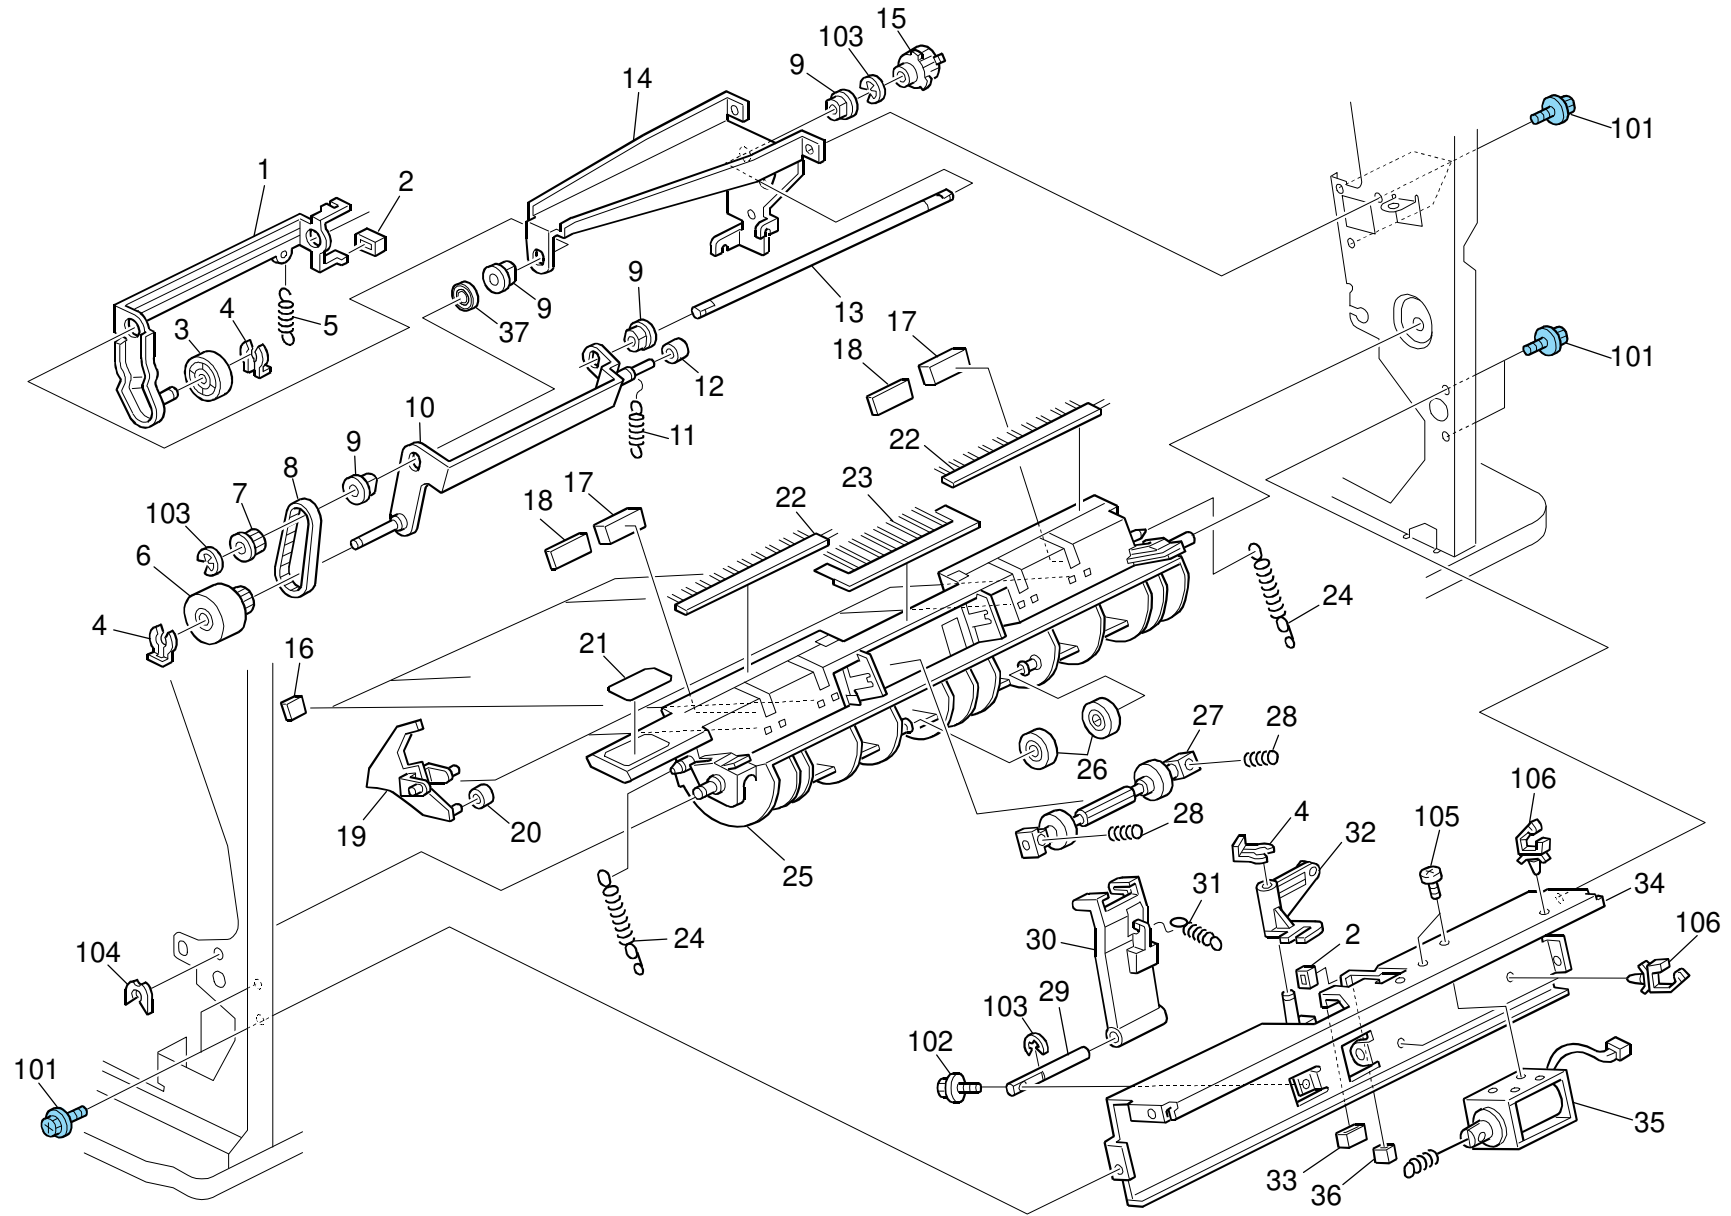

13

7.Staple Tray 1 (B836)

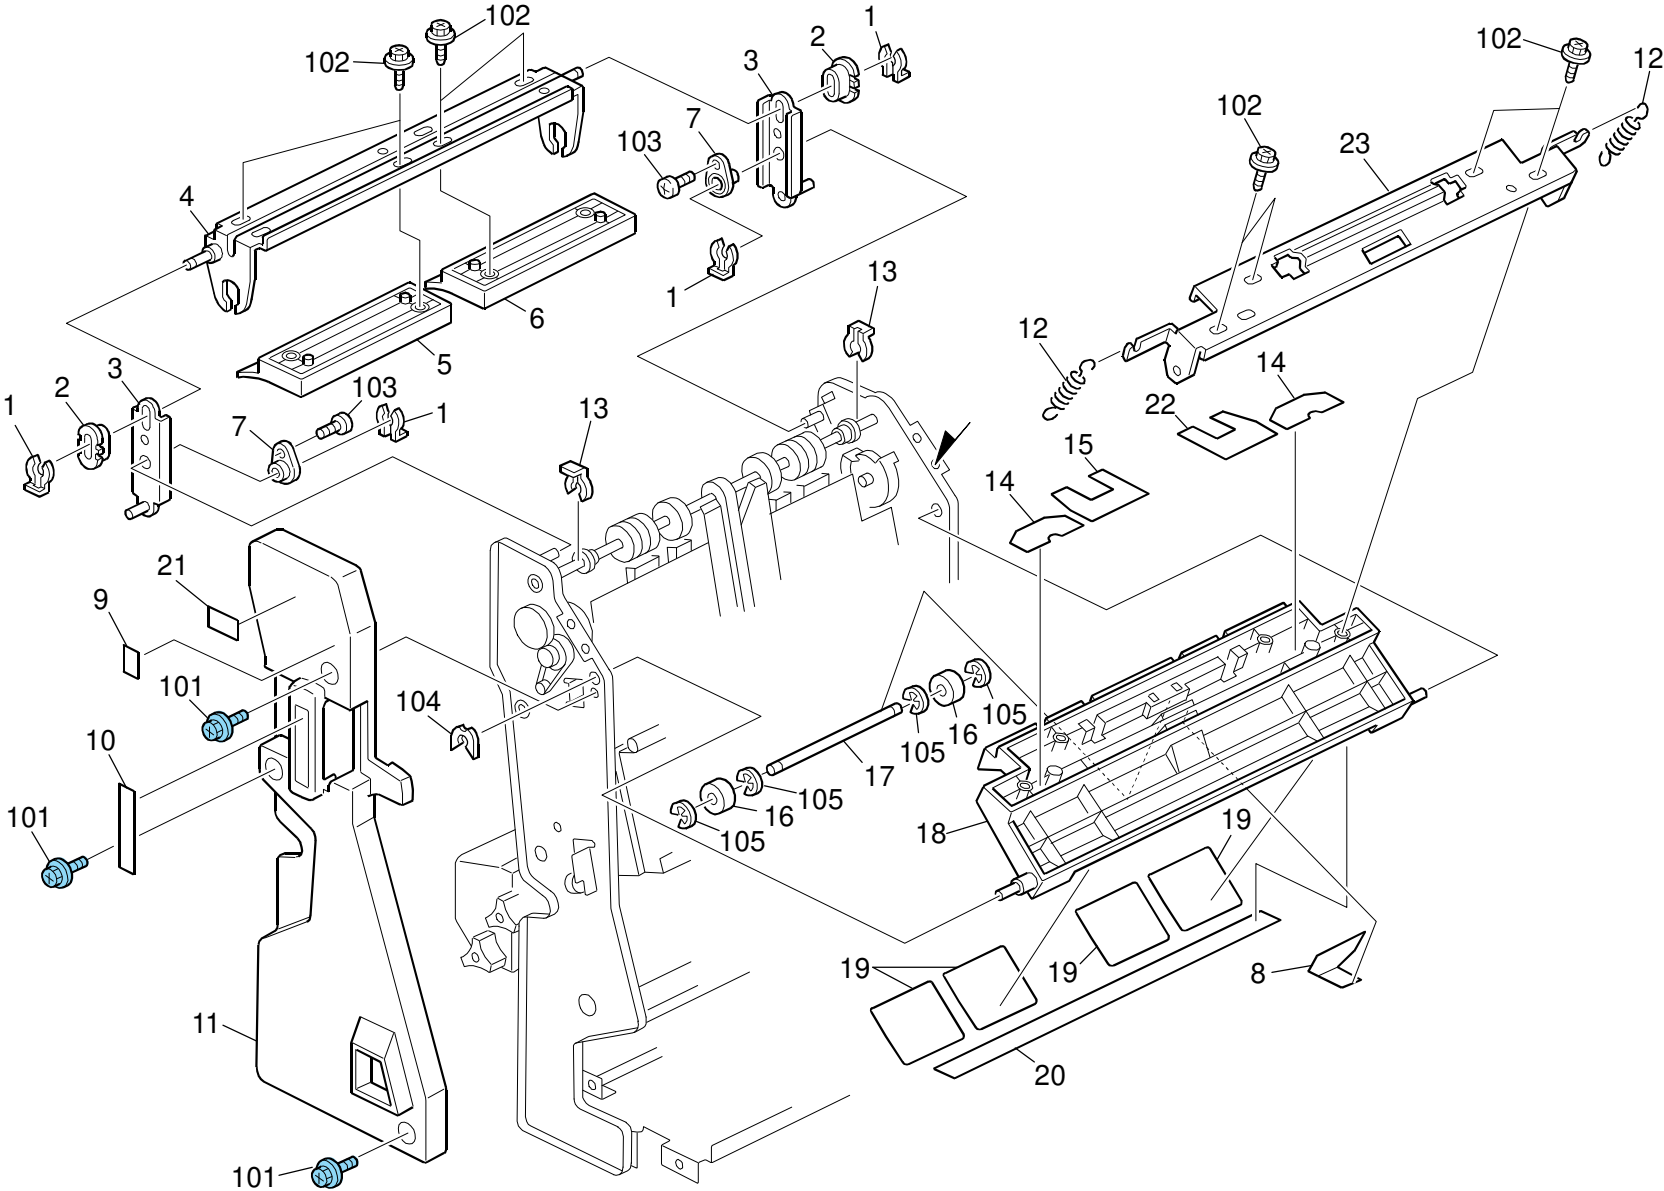


7.Staple Tray 1 (B836)

Index No.	Part No.	Description	Q'ty Per Assembly
1	5447 2681	Snap Ring	4
2	B700 4419	Slider:Guide:Reverse	2
3	B700 4422	Lever:Reverse:Stapler Tray:Ass'y	2
4	B700 4416	Supporting Plate:Reverse:Ass'y	1
5	B700 4414	Guide Plate:Reverse:Front	1
6	B700 4415	Guide Plate:Reverse:Inner Back	1
7	B702 7225	Bushing:Punch Unit:Slide	1
8	B804 4405	Guide:Leading Edge:Stapler Tray:Middle	1
9	B836 7892	Decal - Stapler	1
10	B836 7870	Decal - Stapler Tray	1
11	B700 4540	Inner Cover:Stapler Unit	1
12	B700 4412	Tension Spring:Pressure:Turn	2
13	5215 2621	Snap Ring - M6	1
14	B700 4408	Guide:Leading Edge:Outer	2
15	B700 4405	Guide:Leading Edge:Front	1
16	B700 4410	Roller:DIA22	2
17	B700 4411	Shaft:Driven:Turn	1
18	B700 4401	Guide Plate:Pressure:Reverse:Stapler Tray	1
19	B700 4431	Guide:Leading Edge:Upper	4
20	B700 4407	Sheet:Plate:Leading Edge	1
21	B468 7860	Decal:Stapler:Refill:EH185	1
22	B700 4406	Guide:Leading Edge:Rear	1
23	B700 4444	Guide Plate:Pressure	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3008Q	Tapping Screw:3x8	
102	0450 3008N	Tapping Screw - M3x8	
103	0453 3006N	Tapping Screw - M3x6	
104	0805 0089	Retaining Ring - M4	
105	0720 0040E	Retaining Ring - M4	

8.Staple Tray 2 (B836)

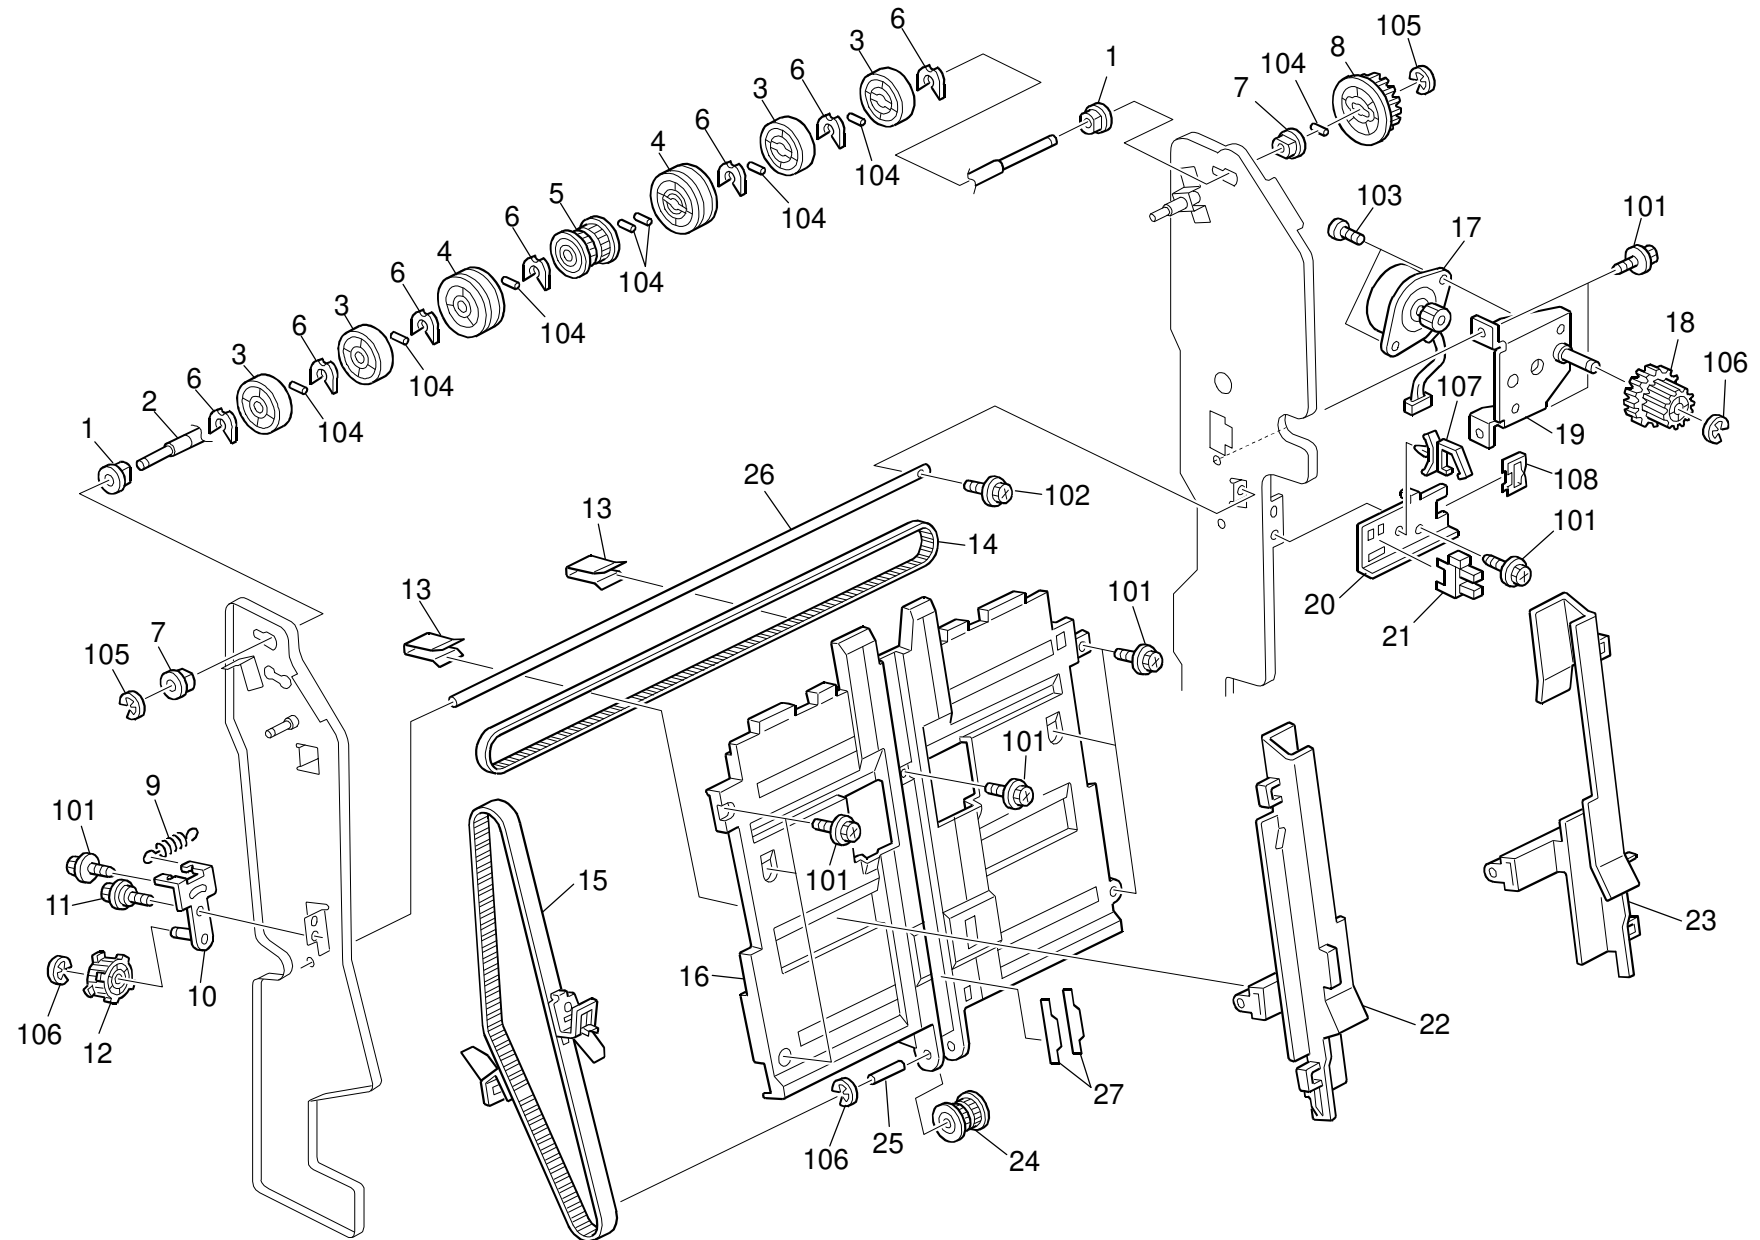

8.Staple Tray 2 (B836)


Index No.	Part No.	Description	Q'ty Per Assembly
1	5053 0419	Bushing - 10mm	2
2	B700 4258	Shaft:Exit	1
3	B700 4260	Collar:Mm40	4
4	B700 4259	Exit Roller:Mm45	2
5	B700 4261	Timing Pulley:55T	1
6	AA10 0011	Retaining Ring:Silencer:Mm7	7
7	5053 0223	Bushing - 8mm	2
8	B700 4271	Timing Pulley:55T	1
9	B700 1501	Tension Spring - Pressure	1
10	B408 4223	Belt Tensioner - Stapler	1
11	AA14 3790	Screw:Contact Point	1
12	A697 4170	Pulley - 32T	1
13	B468 4381	Stopper - Timing Belt	2
14	B700 4213	Timing Belt:1040S2M4-E	1
15	B700 4250	Exit Belt:Ass'y	1
16	B700 4180	Stapler Tray	1
17	B700 5804	Stepper Motor:DIA42:Z17:Ass'y	1
18	B700 4209	Pulley:32T	1
19	B700 4210	Bracket:Motor:Jogger:Ass'y	1
20	B700 4207	Bracket:Sensor:Jogger	1
21	AW02 0141	Photointerruptor	1
22	B700 4201	Jogger Fence:Front:Ass'y	1
23	B700 4204	Jogger Fence:Rear:Ass'y	1
24	A666 3180	Timing Pulley - Z32	1
25	B700 4181	Shaft:Idler:Exit	1
26	B700 4200	Shaft:Guide:Jogger Fence	1
27	B700 4182	Guide:Transport:Stapler Tray	2



Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0451 3010N	Tapping Screw:3x10	
103	0453 3006N	Tapping Screw - M3x6	
104	0632 0160G	Parallel Pin-M2x16	
105	0720 0060E	Retaining Ring - M6	
106	0720 0040E	Retaining Ring - M4	
107	1105 0623	Clamp - LBWS-0206S-V0	
108	1105 0328	Harness Clamp - ES-0505	



9.Staple Tray 3 (B836)

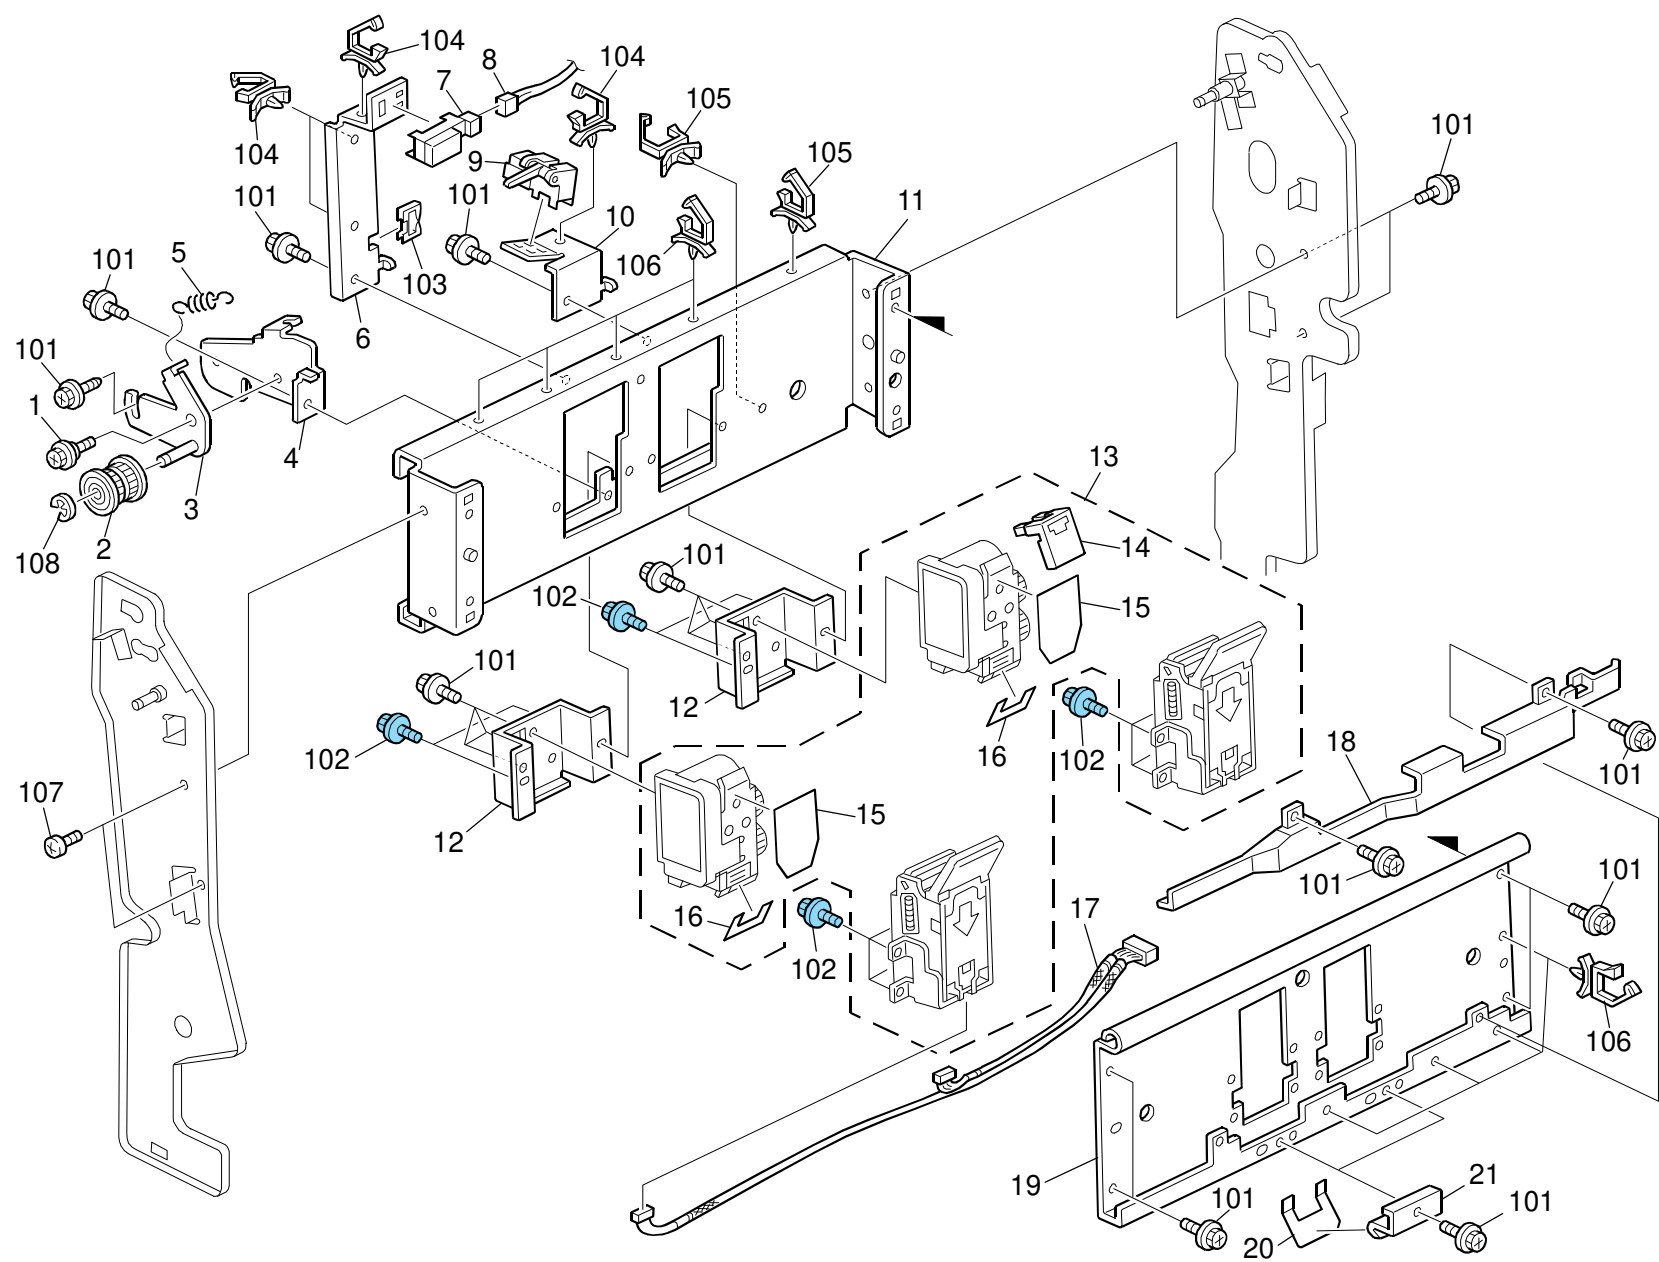


9.Staple Tray 3 (B836)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA14 3790	Screw:Contact Point	1
2	A666 3180	Timing Pulley - Z32	1
3	B700 4267	Bracket:Tightener:Exit:Ass'y	1
4	B700 4265	Bracket:Tightener:Exit:Fix	1
5	B700 4276	Tension Spring	1
6	B700 4170	Bracket:Positioning Sensor	1
7	GW01 0007	Photo Refiection Sensor:Exit	1
8	B700 5418	Harness:Connecting:Sensor	1
9	AW02 0166	Photointerruptor:Paper Feed Sensor	1
10	B700 4255	Bracket:Home Position Sensor:Pawl	1
11	B700 4161	Stay:Middle:Stapler Tray	1
12	B700 4351	Bracket:Stapler:EH185	2
13	B700 7852	Stapler:Service Parts:Ass'y	1
14	B468 6411	Adjusting Pin - Booklet Stapler	1
15	B468 4136	Middle Myler	2
16	B700 4352	Sheet:Guide:Stapler	2
17	B700 5405	Harness:Stapler:Staple Exchange	1
18	B700 4356	Cover:Harness:Stapler	1
19	B700 4353	Stay:Middle:Stapler Tray:Small	1
20	B700 4355	Guide:Stapler:Middle	2
21	B700 4354	Guide:Stapler:Middle	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	1105 0328	Harness Clamp - ES-0505	
104	1105 0623	Clamp - LBWS-0206S-V0	
105	1105 0489	Harness Clamp - LWS 1316	
106	1105 0487	Harness Clamp	
107	0353 0060N	Bind Screw - M3x6	
108	0720 0040E	Retaining Ring - M4	

10.Staple Tray 4 (B836)

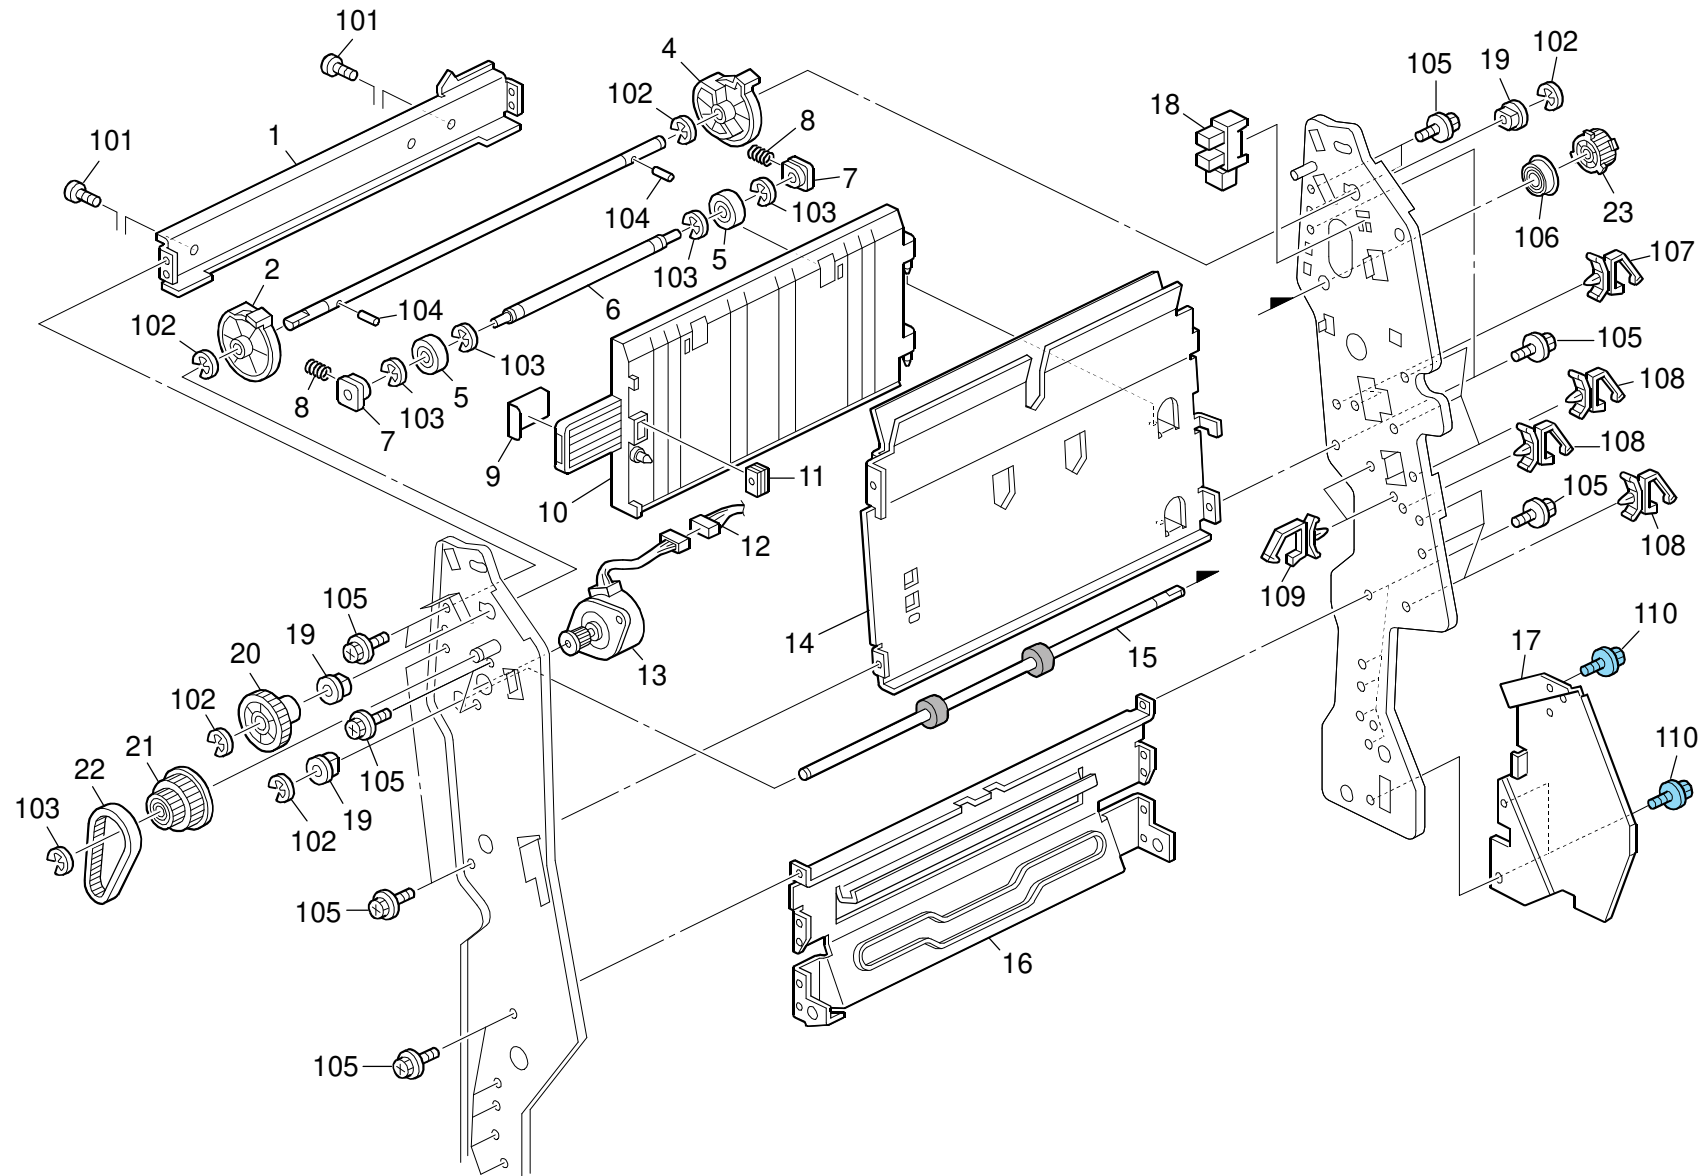


10.Staple Tray 4 (B836)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B700 4159	Stay:Upper:Slide Rail	1
2	B700 4426	Cam:Guide Plate:Front	1
3	B700 4425	Shaft:Drive:Cam	1
4	B700 4427	Cam:Guide Plate:Inner Back	1
5	B478 2328	Exit Roller:Driven	2
6	B700 4455	Shaft:Driven:Transport Unit	1
7	B352 2205	Bushing - Driven Roller	2
8	AA06 3529	Pressure Spring - 14.5mm	2
9	B836 7871	Decal - Transport Unit	1
10	B700 4454	Guide Plate:Transport Unit	1
11	AG07 0514	Magnet Catch	1
12	B700 5414	Harness:Gate:Open and Close:Motor	1
13	B700 5802	Stepper Motor:PM:S2M:T12:Ass'y	1
14	B700 4450	Guide Plate:Transport Unit	1
15	B700 4457	Transport Roller:Transport Unit	1
16	B700 4163	Stay:Guide:Stapler:Move	1
17	B836 4175	Guard Side Plate - Stapler Unit	1
18	AW02 0141	Photointerruptor	1
19	5053 0223	Bushing - 8mm	3
20	B700 4430	Gear:43Z	1
21	B700 4429	Gear:Pulley:17Z/48T	1
22	B700 4428	Timing Belt:B40S2M158	1
23	B700 4272	Timing Pulley:30T	1



Index No.	Part No.	Description	Q'ty Per Assembly
101	0453 3006N	Tapping Screw - M3x6	
102	0720 0060E	Retaining Ring - M6	
103	0720 0040E	Retaining Ring - M4	
104	0632 0160G	Parallel Pin-M2x16	
105	0451 3006N	Tapping Screw - 3x6	
106	0805 3537	Ball Bearing:DIA6xDIA13x5:DIA14.5	
107	1105 0488	Harness Clamp	
108	1105 0487	Harness Clamp	
109	1105 0623	Clamp - LBWS-0206S-V0	
110	0454 3006Q	Tapping Screw - M3x6	

11.Staple Tray 5 (B836)

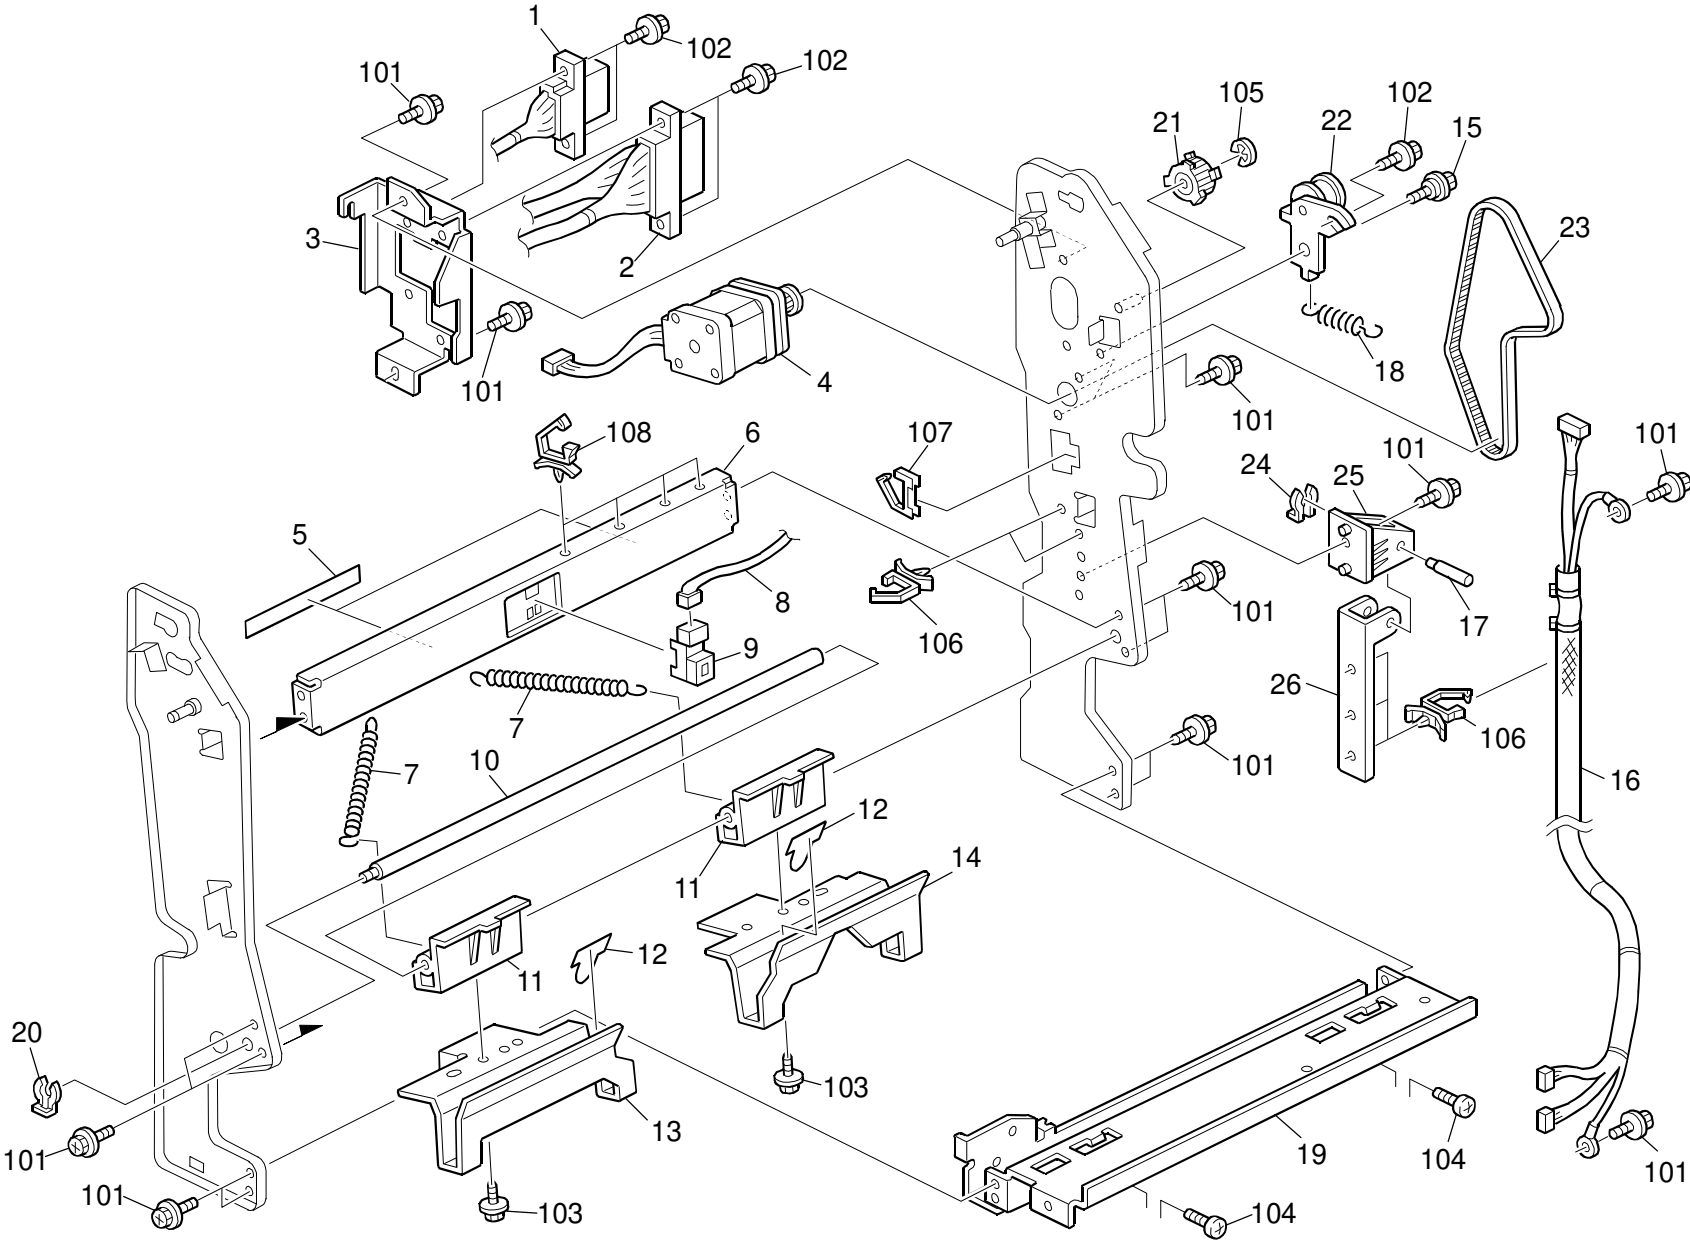


11.Staple Tray 5 (B836)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B836 5367	Harness - Sensor Stapler Tray	1
2	B700 5431	Harness - Staple	1
3	B700 4524	Bracket:Stapler Tray:Moveable	1
4	B700 5808	Stepper Motor:Exit:Ass'y	1
5	B700 4168	Sheet:Slider	2
6	B700 4167	Stay:Lower:Positioning Sensor	1
7	B700 4107	Spring:Return:Standard Fence	2
8	B700 5419	Harness:Connecting:Sensor	1
9	GW01 0007	Photo Refiection Sensor:Exit	1
10	B700 4100	Shaft:Slider:Standard Fence	1
11	B700 4103	Slider:Standard Fence	2
12	B700 4104	Guide:Entrance:Stapler:Inner Back	2
13	B700 4102	Standard Fence:Front:Staple	1
14	B700 4106	Standard Fence:Rear:Staple	1
15	AA14 3790	Screw:Contact Point	1
16	B700 5317	Harness:Motor:Stapler Unit	1
17	B700 4523	Pin:Fix:Arm	1
18	B700 1501	Tension Spring - Pressure	1
19	B700 4165	Stay:Lower:Slide Rail	1
20	5447 2681	Snap Ring	1
21	B700 4273	Timing Pulley:30T	1
22	B312 1600	Tightener	1
23	B700 4275	Timing Belt:B40S2M474	1
24	5206 2686	Snap Ring	1
25	B700 4521	Holder:Arm:Harness	1
26	B700 4522	Arm:Harness:Stapler Unit	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0451 3008N	Tapping Screw - M3x8	
103	0450 3008N	Tapping Screw - M3x8	
104	0453 3006N	Tapping Screw - M3x6	
105	0720 0040E	Retaining Ring - M4	
106	1105 0488	Harness Clamp	
107	1105 0334	Edge - 17	
108	1105 0623	Clamp - LBWS-0206S-V0	

12.Paper Crimp Section 1 (B836)

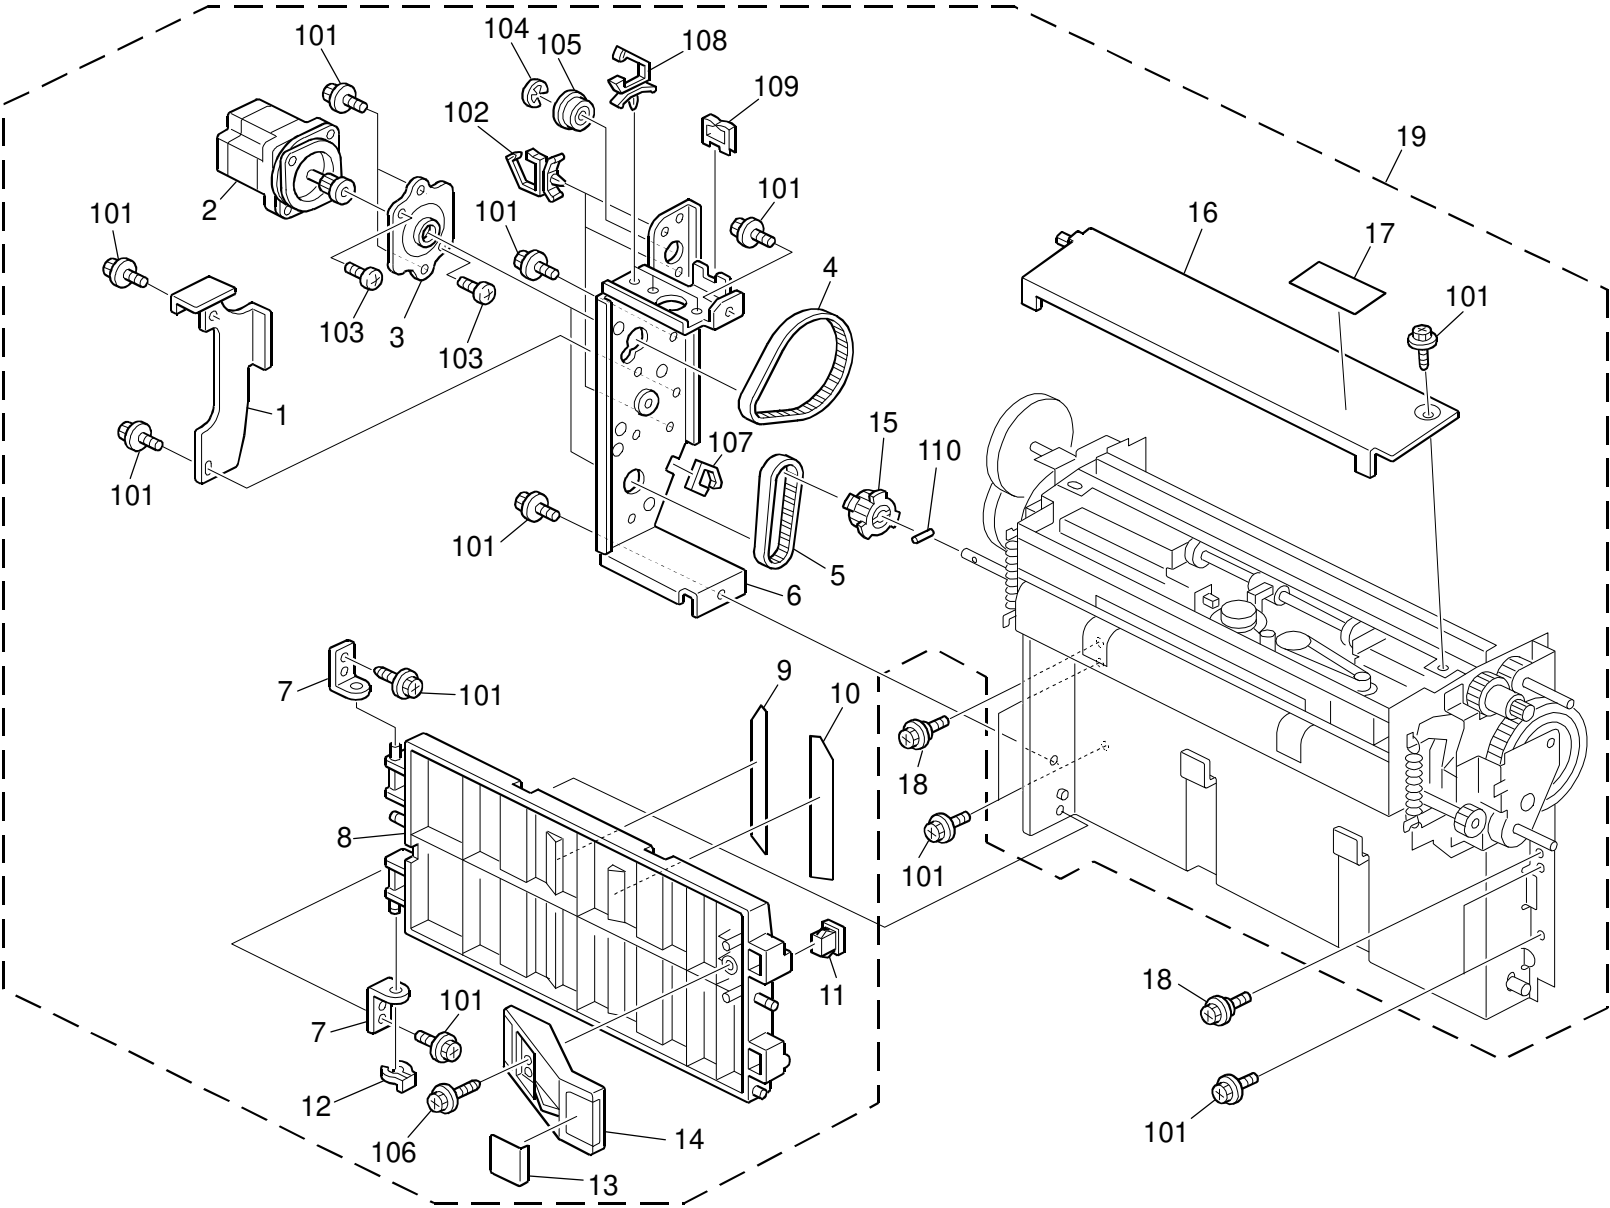

12.Paper Crimp Section 1 (B836)


Index No.	Part No.	Description	Q'ty Per Assembly
1	B700 4895	Cover:Drive	1
2	B700 5812	Stepper Motor:Mm56:S3M:T14:Ass'y	1
3	B700 4797	Bracket:Motor:Mm56	1
4	B700 4787	Timing Belt:B80S3M237	1
5	B700 4785	Timing Belt:B80S3M156	1
6	B700 4790	Bracket:Auxiliary:Rear	1
7	B700 4879	Bracket:Contact Point	2
8	B700 4875	Guide Plate:Open and Close:Lower	1
9	B700 4874	Guide:Open and Close:Rear	1
10	B700 4873	Guide:Open and Close:Front	1
11	B352 2650	Magnet Catch - 5N	1
12	5206 2686	Snap Ring	1
13	B836 7872	Decal - Paper Crimp Unit	1
14	B700 4877	Grip:Guide Plate	1
15	B700 4784	Pulley:22T	1
16	B700 4897	Cover:Upper	1
17	B804 7896	Decal:Paper Crimp	1
18	AA14 3790	Screw:Contact Point	2
19	B836 4061	Paper Crimp Unit	1



Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	1105 0487	Harness Clamp	
103	0453 4006N	Binding Self Tapping Screw:4x6	
104	0720 0060E	Retaining Ring - M6	
105	0742 3808	Ball Bearing - 8x16x5	
106	0450 3008N	Tapping Screw - M3x8	
107	1105 0522	Edge Saddle - LES0510	
108	1105 0516	Clamp	
109	1105 0328	Harness Clamp - ES-0505	
110	0633 0140G	Parallel Pin - 3x14	



13.Paper Crimp Section 2 (B836)

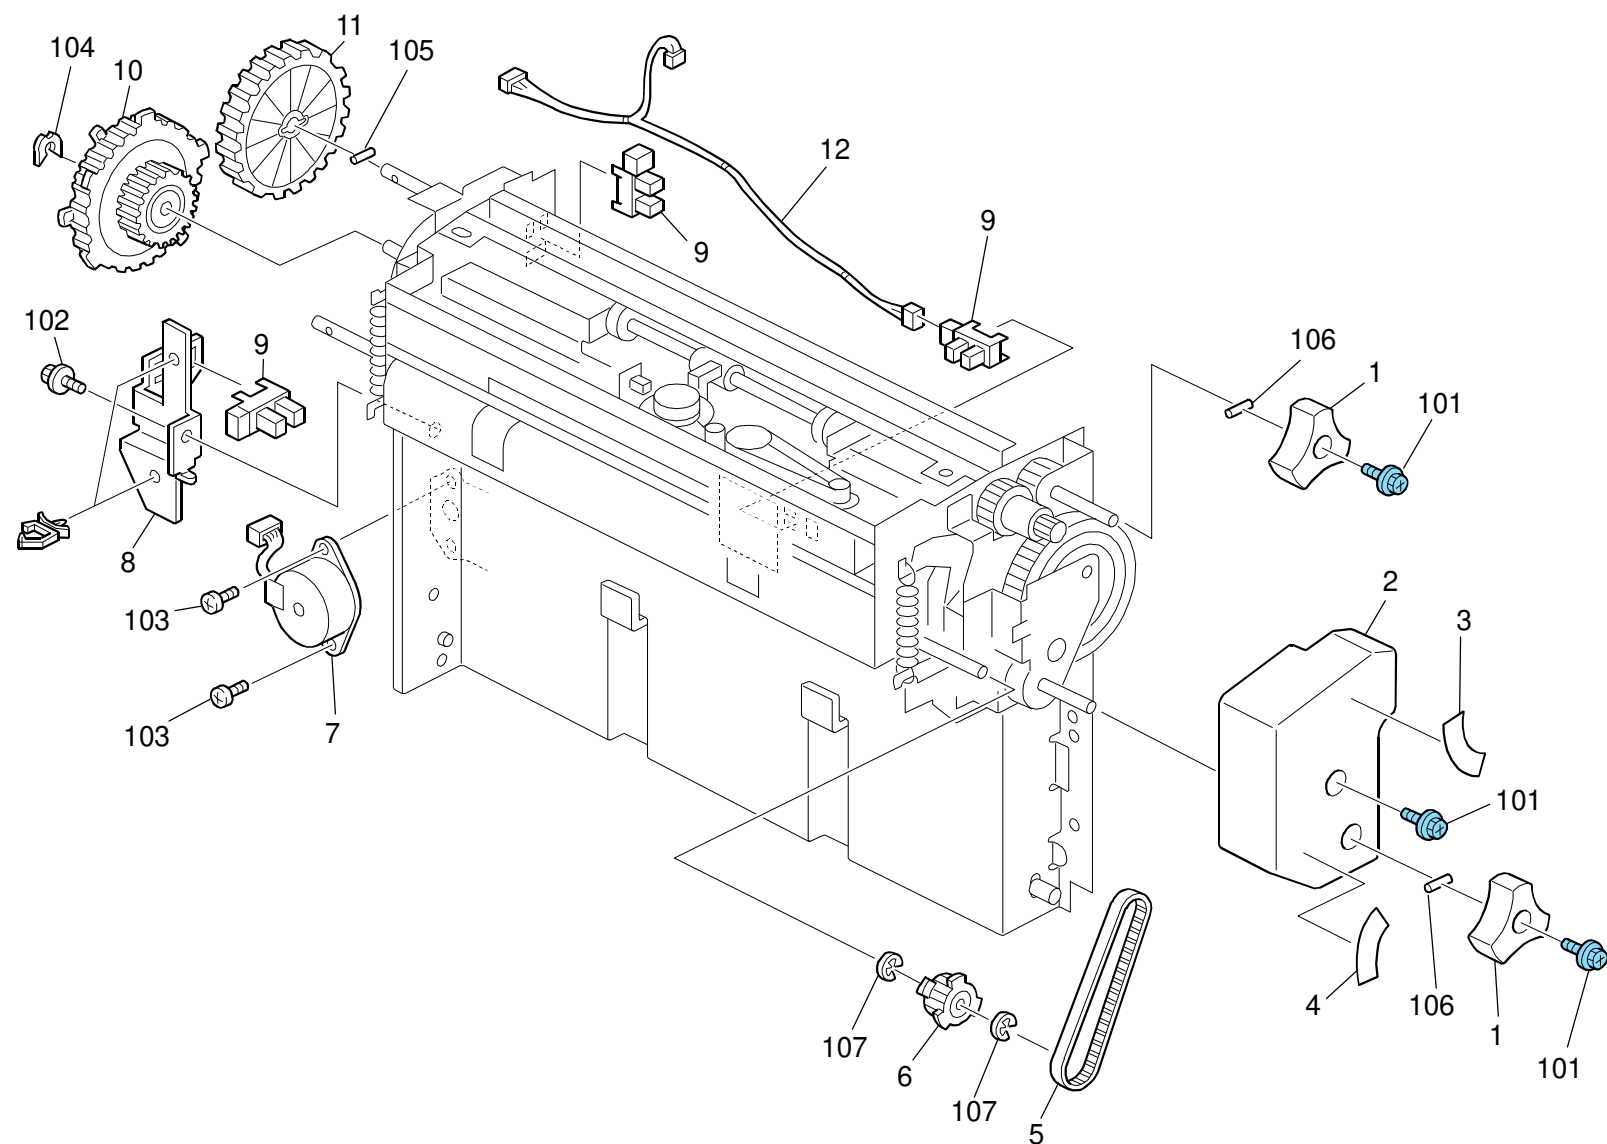


13.Paper Crimp Section 2 (B836)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B700 4885	Knob:Paper Crimp	2
2	B700 4891	Inner Cover	1
3	B836 7869	Decal - Knob Roller	1
4	B836 7868	Decal - Knob Blade	1
5	B700 4720	Timing Belt:B40S2M214	1
6	B700 4718	Pulley:27T	1
7	B700 5804	Stepper Motor:DIA42:Z17:Ass'y	1
8	B700 4770	Bracket:Home Position Sensor:Blade	1
9	AW02 0141	Photointerruptor	3
10	B700 4782	Pulley:31T	1
11	B700 4781	Gear:62T	1
12	B700 5411	Harness:Sensor:Plate:End Fence	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3008Q	Tapping Screw:3x8	
102	0451 3006N	Tapping Screw - 3x6	
103	0453 3006N	Tapping Screw - M3x6	
104	0805 0088	Retaining Ring - M6	
105	0633 0140G	Parallel Pin - 3x14	
106	0633 0180G	Parallel Pin - 3x18mm	
107	0720 0040E	Retaining Ring - M4	

14.Paper Crimp Section 3 (B836)

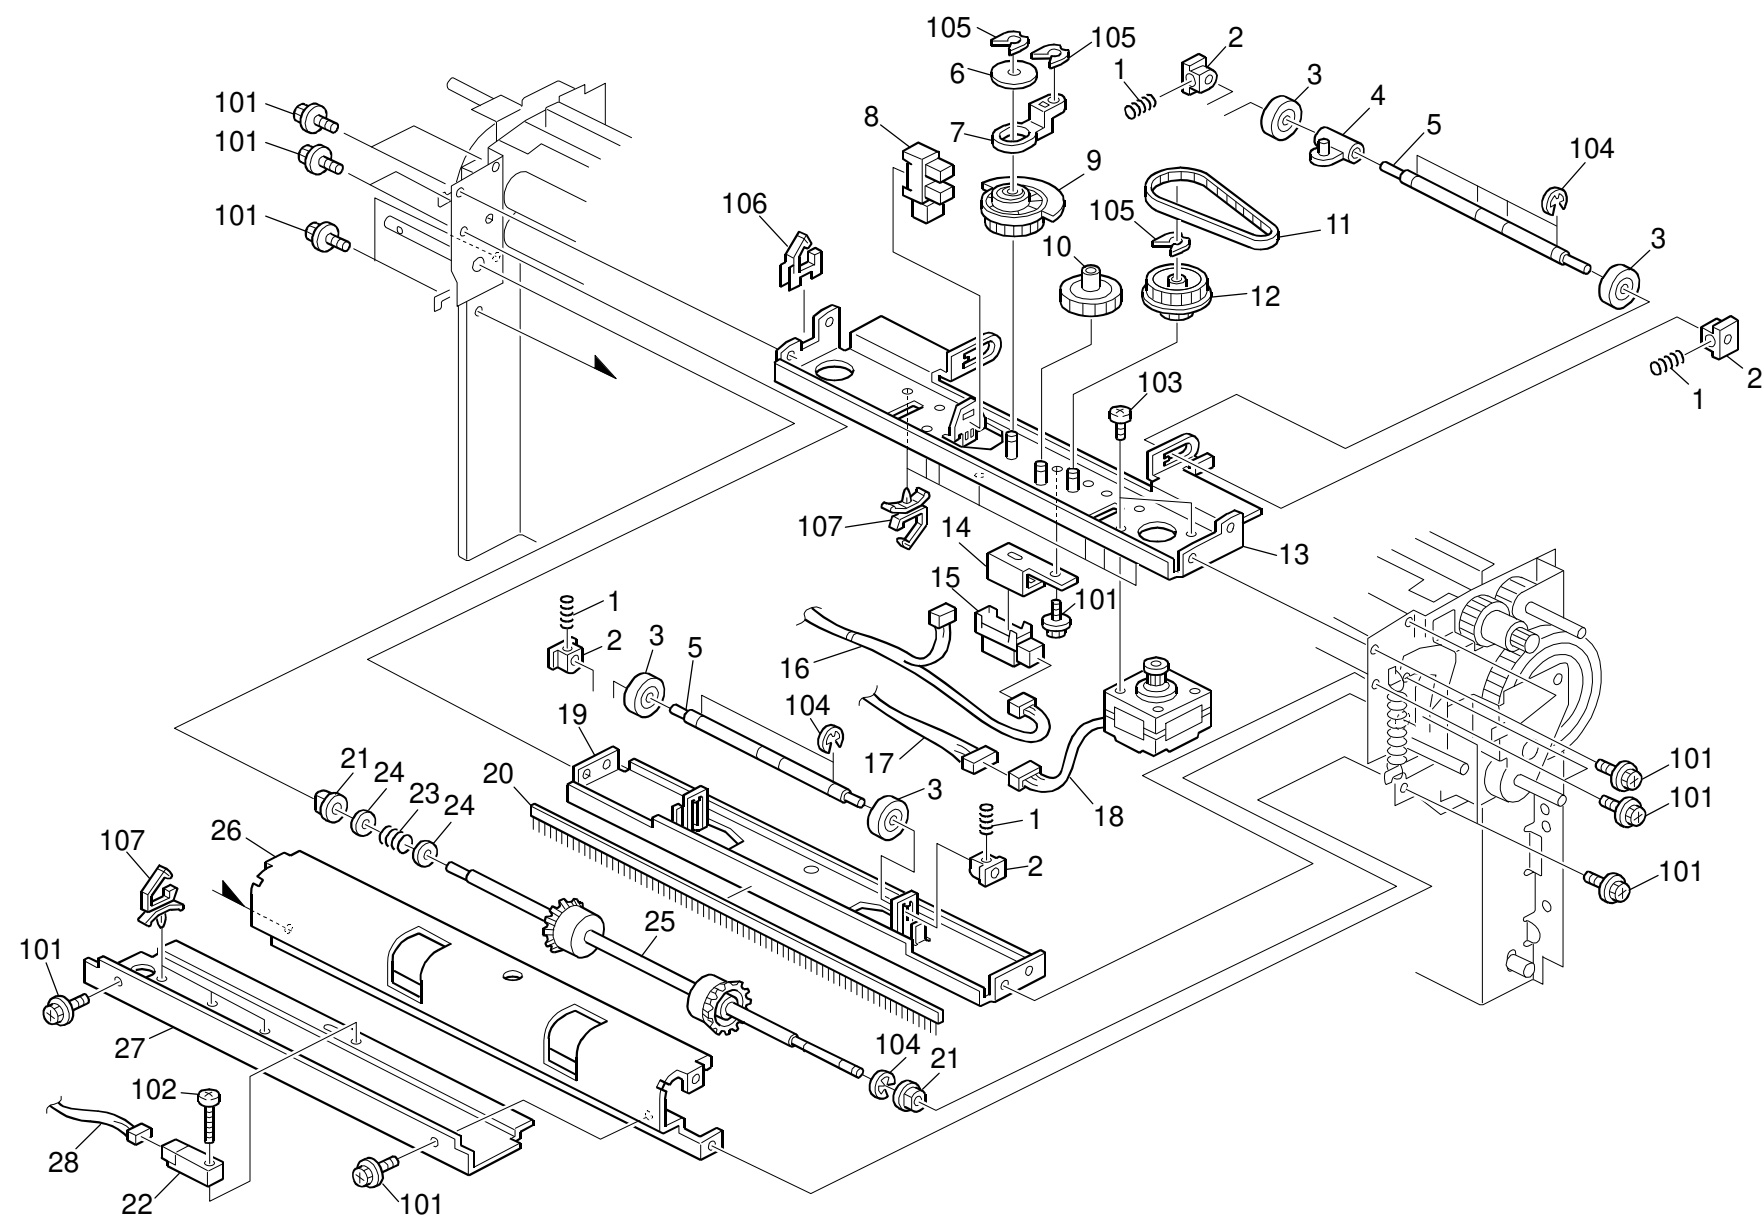


14.Paper Crimp Section 3 (B836)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B700 4757	Compression Spring:Transport Roller	2
2	AA08 0237	Bushing - 4x5x7	2
3	B478 2328	Exit Roller:Driven	2
4	B700 4810	Shaft:Driven:Release	1
5	B700 4755	Shaft:Driven	1
6	B700 4829	Spacer:Release:Transport	1
7	B700 4827	Joint:Release:Transport	1
8	AW02 0141	Photointerruptor	1
9	B700 4821	Cam:Release:Transport	1
10	B700 4823	Gear:56Z	1
11	B700 4720	Timing Belt:B40S2M214	1
12	B700 4825	Gear:28Z	1
13	B700 4805	Stay:Release:Transport	1
14	B700 4835	Bracket:Paper Feed Ssensor	1
15	GW01 0007	Photo Refiection Sensor:Exit	1
16	B700 5410	Harness:Sensor	1
17	B700 5415	Harness:Drive:Swivle:Motor	1
18	B700 5810	Stepper Motor:DC24V 2.5W	1
19	B700 4753	Guide Plate:Exit:Upper	1
20	B700 4759	Discharge Brush:Exit	1
21	5053 0447	Bushing - 6mm	2
22	AW01 0109	Photo Refiection Sensor:PS117ED1	1
23	B700 4713	Compression Spring	1
24	AA13 2208	Spacer - M6	1
25	B700 4715	Exit Roller:Paper Crimp Sub-Unit	1
26	B700 4745	Guide Plate:Exit:Lower	1
27	B700 4763	Guide Plate:Roller:Lower	1
28	B700 5412	Harness:Connecting:Sensor	1



Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0453 3014N	Binding Self Tapping Screw 3x14	
103	0353 0040N	Screw - M3x4	
104	0720 0040E	Retaining Ring - M4	
105	0805 0089	Retaining Ring - M4	
106	1105 0522	Edge Saddle - LES0510	
107	1105 0623	Clamp - LBWS-0206S-V0	

15. Drive Section (B836)

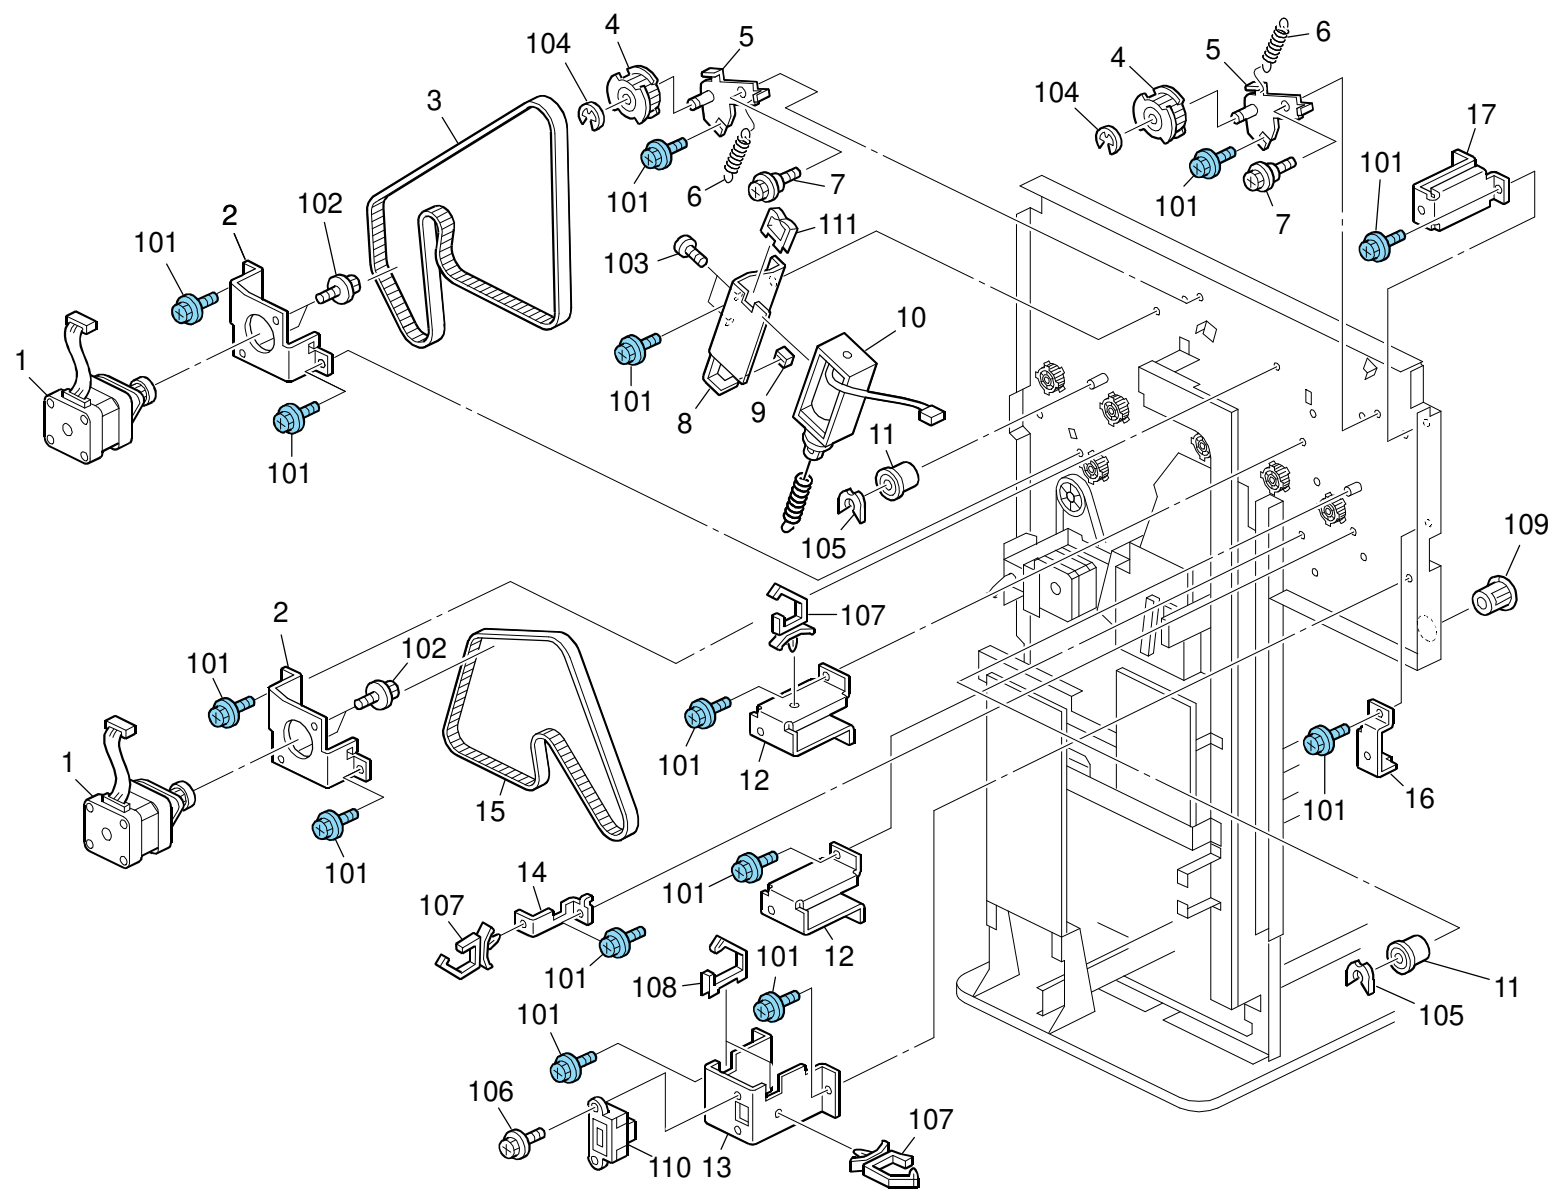


15. Drive Section (B836)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B700 5806	Stepper Motor:Mm42:S3M:T14:Ass'y	2
2	B700 1600	Bracket:Stepper Motor:Transport	2
3	B836 1912	Timing Belt - B60S3M954	1
4	B302 1542	Timing Pulley - 20Z	2
5	B706 1545	Tightener Bracket	2
6	A352 2260	Release Spring	2
7	B830 1135	Screw	12
8	B700 2510	Bracket:Dcsol:Gate Pawl:Proof Tray	1
9	A697 2102	Damper - Junction Gate Solenoid	1
10	B836 2836	DC Solenoid 24V	1
11	A458 3281	Idler Roller	2
12	B836 1163	Rear Cover Bracket - Left	3
13	B836 1162	Connector Bracket	1
14	B706 5151	Angle:Printed Circuit Board:ST	1
15	B836 1913	Timing Belt - B60S3M699	1
16	B836 1139	Cover - Guide Plate	1
17	B836 1163	Rear Cover Bracket - Left	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0451 3006N	Tapping Screw - 3x6	
103	0353 0040N	Screw - M3x4	
104	0720 0040E	Retaining Ring - M4	
105	0805 0088	Retaining Ring - M6	
106	0451 3008N	Tapping Screw - M3x8	
107	1105 0487	Harness Clamp	
108	1105 0518	Edge Saddle - LES-1010	
109	1106 0107	Snapbushing-17.9mm	
110	1102 8502	Connector - 54679-1615	
111	1105 0334	Edge - 17	

16.Electrical Section 1 (B836)

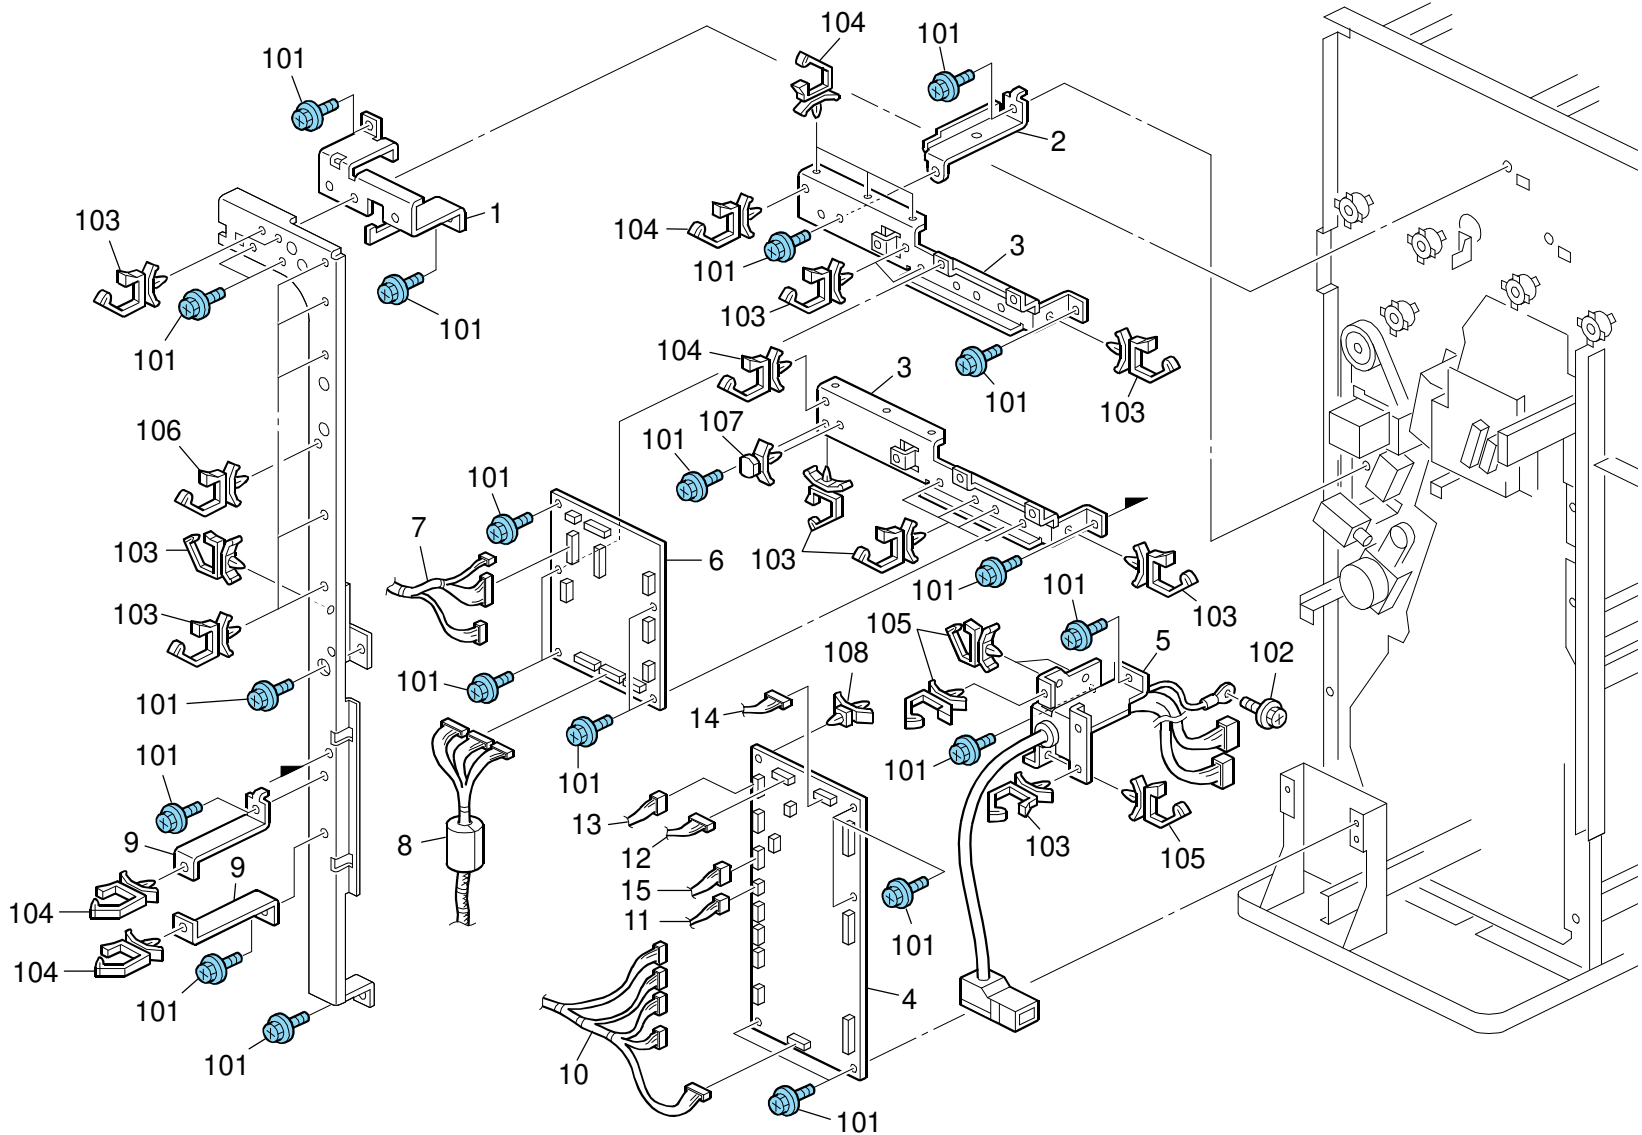


16.Electrical Section 1 (B836)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B836 3175	Sensor Bracket	1
2	B700 5956	Bracket:Printed Circuit Board	1
3	B700 5955	Stay:Fix:Main Control Board	2
4	B836 5502	PCB Main Control	1
5	B700 5350	Harness:Interface:Sub-ass'y	1
6	B700 5200	PCB:STP:Control	1
7	B700 5401	Harness:Staple	1
8	B700 5413	Harness:Staple:Motor	1
9	B468 5991	Harness Bracket	2
10	B836 5310	Harness - Stepper Motor	1
11	B700 5301	Harness:Safety Switch	1
12	B836 5302	Harness - Entrance Sensor	1
13	B836 5460	Harness - Interface:Finishing Section	1
14	B836 5305	Harness - Sensor Exit	1
15	B836 5470	Harness:Connecting:Interface	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0451 3008N	Tapping Screw - M3x8	
103	1105 0487	Harness Clamp	
104	1105 0488	Harness Clamp	
105	1105 0511	Harness Clamp - LWS-0306ZC	
106	1105 0489	Harness Clamp - LWS 1316	
107	1105 0367	Spacer	
108	1105 0192	Locking Support	

17.Electrical Section 2 (B836)

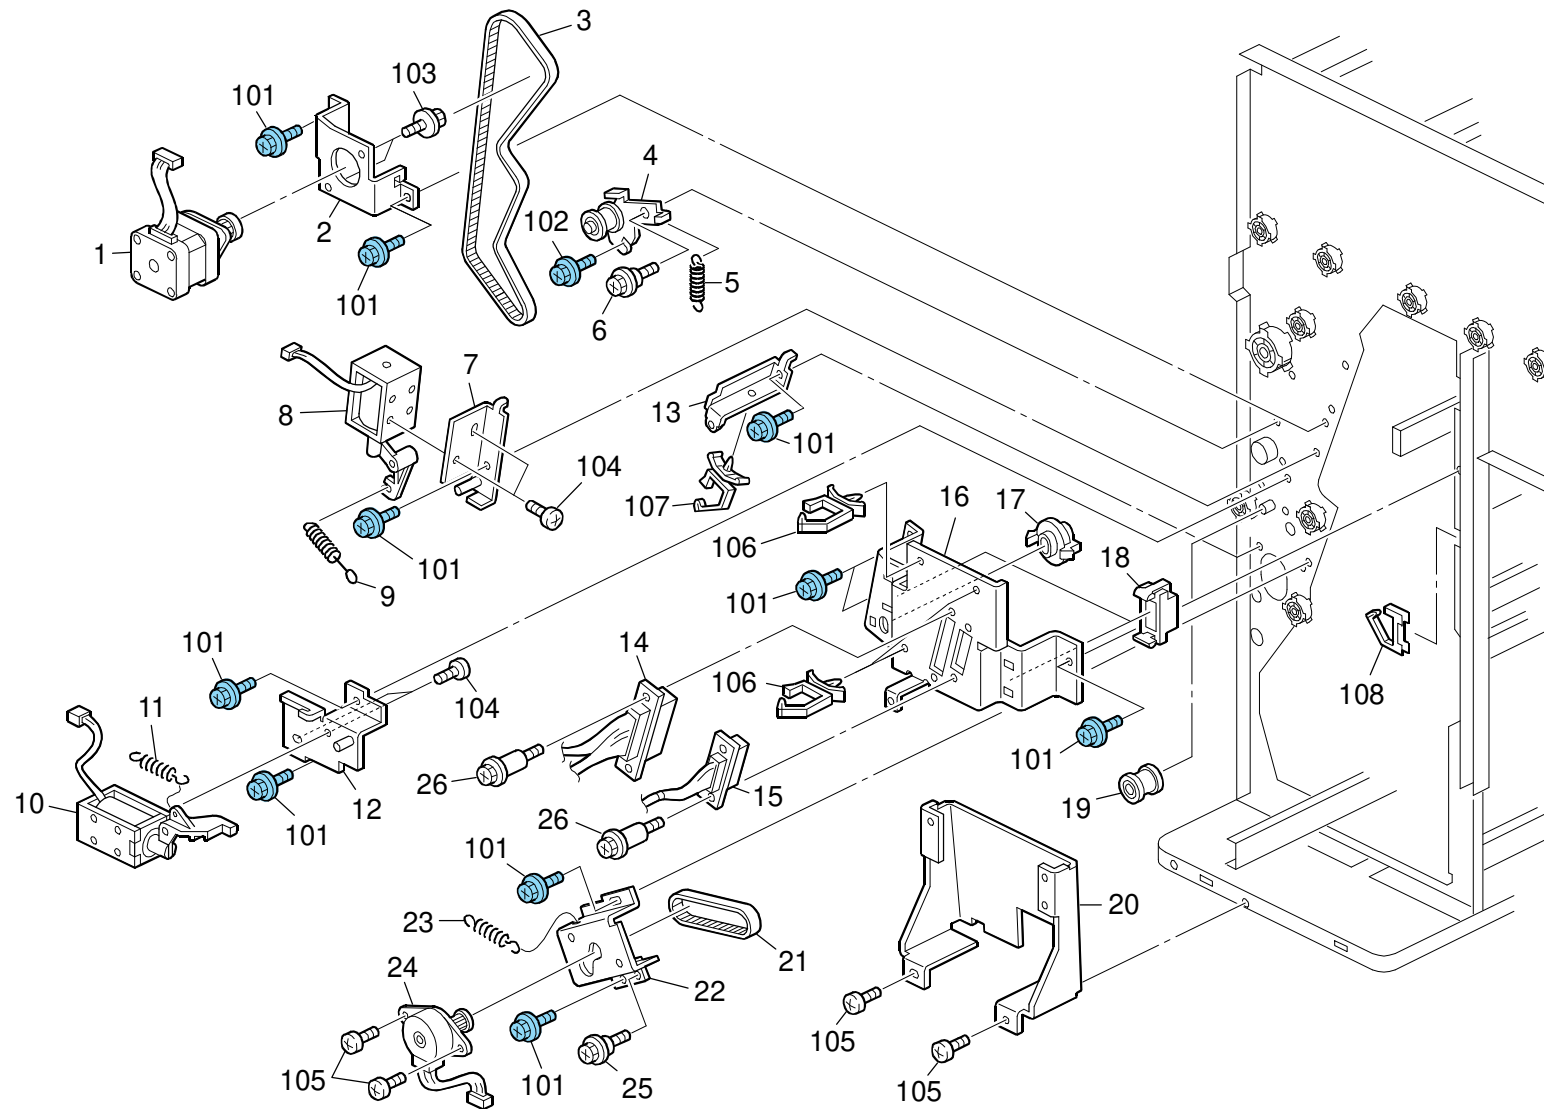


17.Electrical Section 2 (B836)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B700 5806	Stepper Motor:Mm42:S3M:T14:Ass'y	1
2	B700 1600	Bracket:Stepper Motor:Transport	2
3	B700 1702	Timing Belt:B40S3M789	1
4	B312 1600	Tightener	1
5	B700 1501	Tension Spring - Pressure	1
6	B830 1135	Screw	1
7	B700 2661	Bracket:Solenoid:Plate:Ass'y	1
8	B700 2665	DC Solenoid:Plate:Ass'y	1
9	B700 2667	Tension Spring:Solenoid:Plate	1
10	B700 2655	DC Solenoid:Gathering Roller:Ass'y	1
11	A300 3865	Release Spring	1
12	B700 2651	Bracket:Solenoid:Gathering Roller	1
13	B700 5956	Bracket:Printed Circuit Board	1
14	B700 5430	Harness - Staple	1
15	B836 5306	Harness - Stapler Tray Unit	1
16	B700 1162	Bracket:Connector:Stapler Tray	1
17	B700 1165	Holder:Coupling:Stapler Unit	1
18	AG07 1012	Magnet Catch:Ass'y	1
19	B312 1615	Tension Roller	1
20	B700 5957	Bracket:Main Control Board:Lower	1
21	B700 1802	Timing Belt:B40S2M134	1
22	B700 1801	Bracket:Stepper Motor	1
23	B700 1803	Tension Spring	1
24	B700 5803	Stepper Motor:PM:T17:Ass'y	1
25	B700 4867	Screw:Contact Point:M3	1
26	B700 1163	Screw:Connector	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0454 3008Q	Tapping Screw:3x8	
103	0451 3006N	Tapping Screw - 3x6	
104	0353 0040N	Screw - M3x4	
105	0453 3006N	Tapping Screw - M3x6	
106	1105 0488	Harness Clamp	
107	1105 0511	Harness Clamp - LWS-0306ZC	
108	1105 0334	Edge - 17	

18.Frame Section (B836)

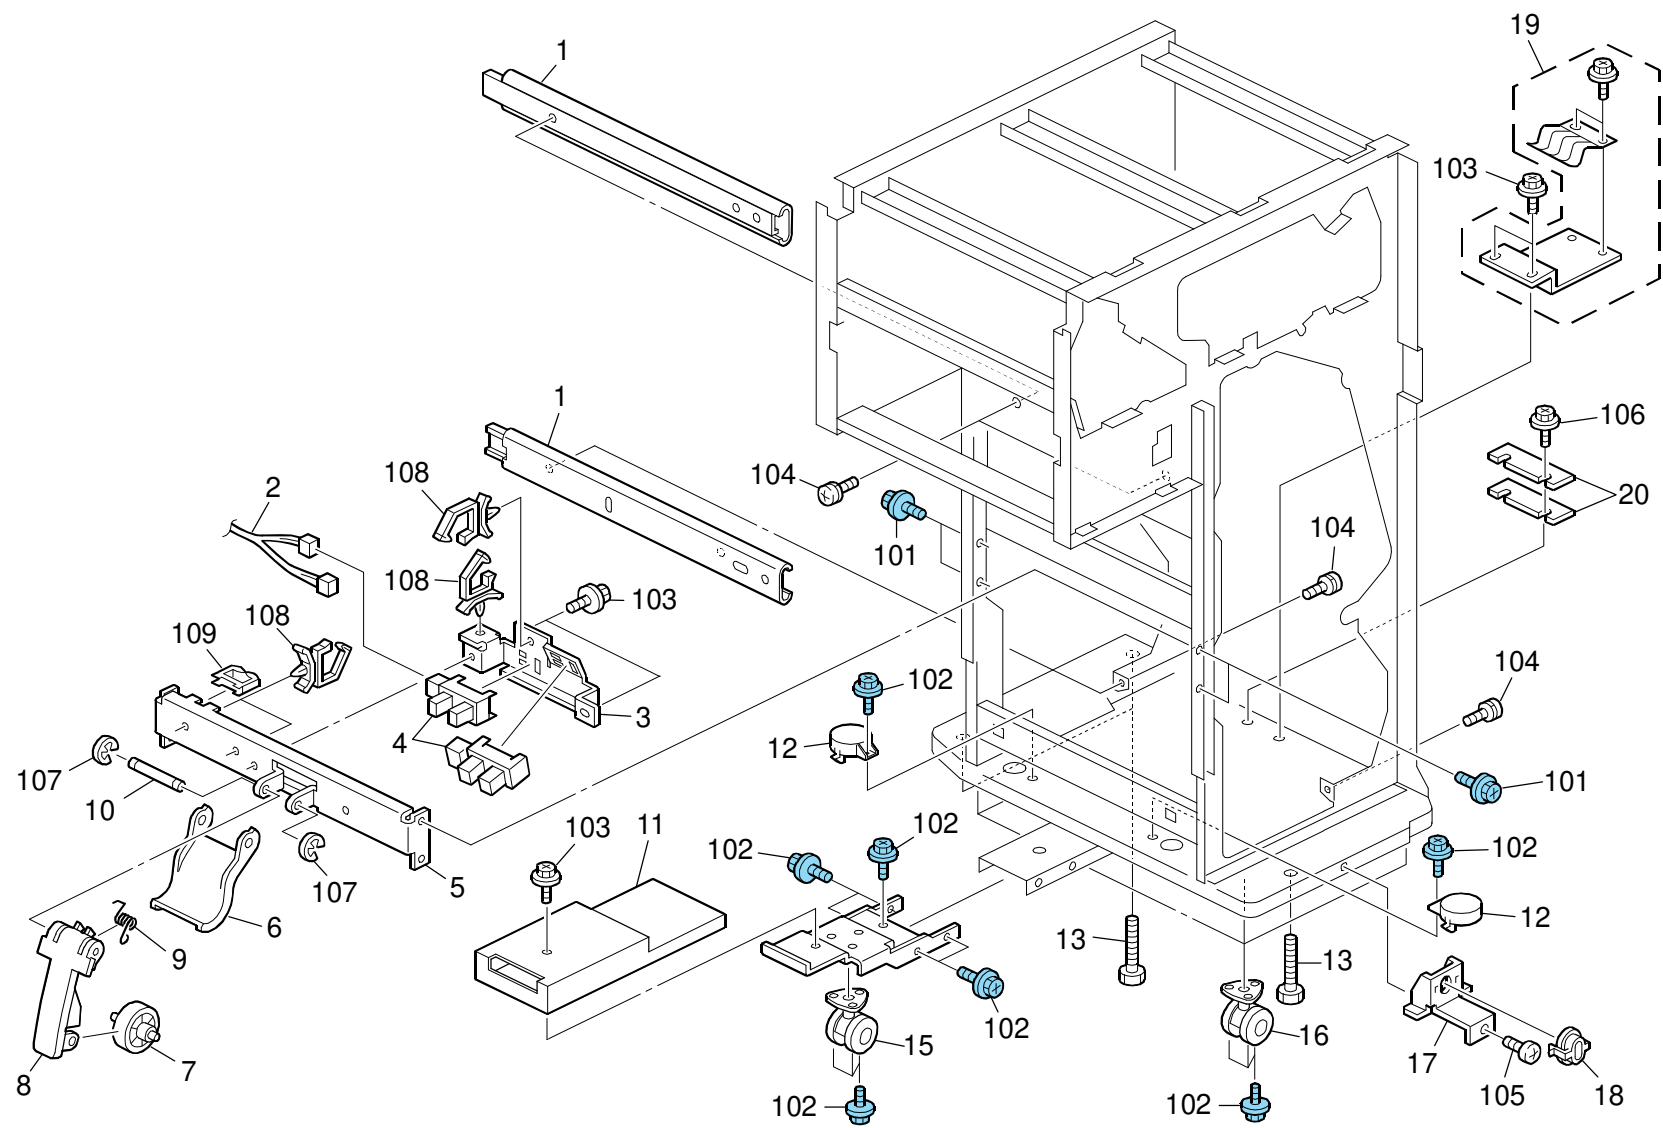


18.Frame Section (B836)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B700 1161	Slide Rail:Stapler Unit:508mm	2
2	B700 5407	Harness:Paper Exit Sub-unit	1
3	B700 3710	Bracket:Surface of Paper Sensor	1
4	AW02 0141	Photointerruptor	2
5	B700 3705	Guide Plate:Paper Exit Sub-unit	1
6	B700 3725	Arm:Plate:Paper Exit Sub-unit	1
7	B700 3730	Roller:Plate:Paper Exit Sub-unit	1
8	B700 3720	Arm:Paper Senser:Paper Exit Sub-unit	1
9	B700 3740	Spring:Arm:16mn.m	1
10	B700 3715	Shaft:Arm:Paper Exit Sub-unit	1
11	B836 6194	Cover Bracket - Lower	1
12	B804 1117	Cap - Base	2
13	B706 1156	Hexagonal Bolt - M12x30	3
14	B836 1150	Caster Bracket	1
15	B793 1312	Caster H43	1
16	AH01 2030	Caster:DIA50:400N	2
17	B700 1166	Bracket:Stopper:Stapler Unit	1
18	B700 1165	Holder:Coupling:Stapler Unit	1
19	B700 1031	Bracket:Ground Plate:Ass'y	1
20	B830 7537	Adjusting Plate:Bracket:Coupling	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0454 3008Q	Tapping Screw:3x8	
103	0451 3006N	Tapping Screw - 3x6	
104	0950 3005N	Screw:Spring Washer:M3x5	
105	0453 3006N	Tapping Screw - M3x6	
106	0451 3008N	Tapping Screw - M3x8	
107	0720 0040E	Retaining Ring - M4	
108	1105 0623	Clamp - LBWS-0206S-V0	
109	1105 0328	Harness Clamp - ES-0505	

19.Decals And Documents (B836)

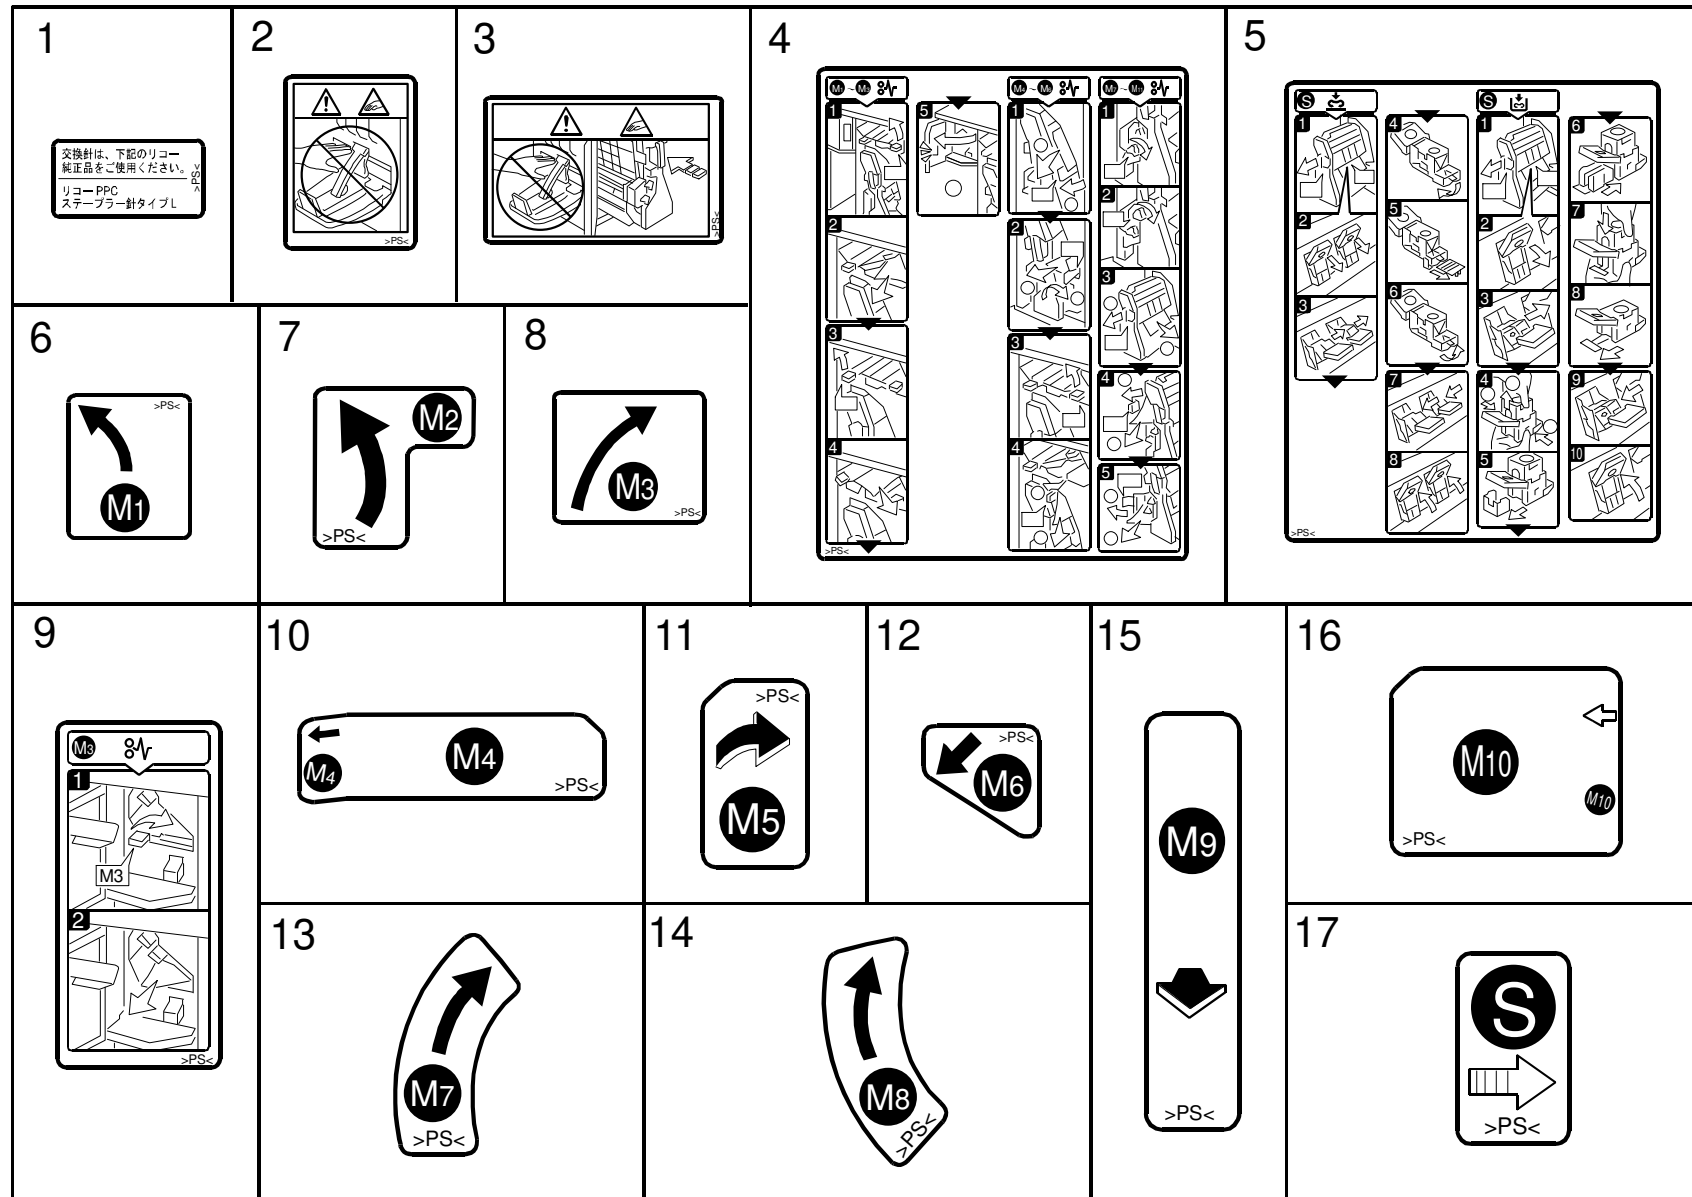

19.Decals And Documents (B836)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B468 7860	Decal:Stapler:Refill:EH185	1
2	B793 7898	Decal:Paper Exit Sub-Unit	1
3	B804 7896	Decal:Paper Crimp Sub-Unit	1
4	B836 7850	Decal - Misfeed Removal	1
5	B836 7851	Decal - Staple Exchange	1
6	B836 7861	Decal - Guide Plate Entrance	1
7	B836 7862	Decal - Guide Plate Middle	1
8	B836 7863	Decal - Guide Plate Exit	1
9	B836 7864	Decal - Misfeed Removal Left	1
10	B836 7865	Decal - Vertical Transport	1
11	B836 7866	Decal - Exit	1
12	B836 7867	Decal - Turn Open and Close	1
13	B836 7868	Decal - Knob Blade	1
14	B836 7869	Decal - Knob Roller	1
15	B836 7870	Decal - Stapler Tray	1
16	B836 7871	Decal - Transport Unit	1
17	B836 7872	Decal - Paper Crimp Unit	1

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

Parts Index

Part No.	Description	Page and Index No.
B836 1139	Cover - Guide Plate	31 - 16
B836 1150	Caster Bracket	37 - 14
B836 1151	Cover Hinge - Left Upper	3 - 11
B836 1155	Cover: - Sensor	7 - 6
B836 1156	Sensor Bracket	7 - 5
B836 1162	Connector Bracket	31 - 13
B836 1163	Rear Cover Bracket - Left	31 - 17
B836 1163	Rear Cover Bracket - Left	31 - 12
B836 1912	Timing Belt - B60S3M954	31 - 3
B836 1913	Timing Belt - B60S3M699	31 - 15
B836 2424	Guide Plate - Turn	9 - 2
B836 2626	Roller - Guide	13 - 37
B836 2811	Guide Plate - Entrance	5 - 7
B836 2821	Exit Guide Plate - Lower	5 - 3
B836 2831	Gate Plate Shaft	7 - 11
B836 2832	Stripper Plate - Lower	7 - 12
B836 2833	Stripper Plate - Upper	7 - 10
B836 2834	Gate Plate Stopper	7 - 16
B836 2836	DC Solenoid 24V	31 - 10
B836 2841	Guide Plate - Entrance	7 - 13
B836 2842	Guide Plate - Middle Gate	5 - 6
B836 2843	Guide Plate - Lower Middle	7 - 9
B836 2844	Exit Guide Plate - Lower	7 - 4
B836 2845	Paper Feed Sensor Bracket	7 - 3
B836 2846	Entrance Sensor Bracket	7 - 14
B836 2851	Transport Roller	9 - 6
B836 2851	Transport Roller	7 - 8
B836 2852	Compression Spring	5 - 1
B836 3165	End Fence	3 - 4
B836 3175	Sensor Bracket	33 - 1
B836 4061	Paper Crimp Unit	35 - 19
B836 4175	Guard Side Plate - Stapler Unit	21 - 17
B836 5302	Harness - Entrance Sensor	33 - 12
B836 5305	Harness - Sensor Exit	33 - 14
B836 5306	Harness - Stapler Tray Unit	35 - 15

Part No.	Description	Page and Index No.
B836 5310	Harness - Stepper Motor	33 - 10
B836 5367	Harness - Sensor Stapler Tray	23 - 1
B836 5373	Harness - Paper Feed Sensor	7 - 1
B836 5460	Harness - Interface:Finishing Section	33 - 13
B836 5470	Harness:Connecting:Interface	33 - 15
B836 5502	PCB Main Control	33 - 4
B836 6121	Tray Cover - Upper	3 - 6
B836 6131	Cover - Left Front	3 - 10
B836 6151	Cover - Upper	3 - 3
B836 6162	Rear Cover - Left Upper	3 - 1
B836 6171	Left Cover - Upper Welding	3 - 12
B836 6181	Front Cover - Left Upper	3 - 7
B836 6185	Cover - Right Lower	3 - 21
B836 6194	Cover Bracket - Lower	37 - 11
B836 6195	Cover - Left Front	3 - 13
B836 7850	Decal - Misfeed Removal	3 - 14
B836 7850	Decal - Misfeed Removal	39 - 4
B836 7851	Decal - Staple Exchange	3 - 15
B836 7851	Decal - Staple Exchange	39 - 5
B836 7861	Decal - Guide Plate Entrance	39 - 6
B836 7861	Decal - Guide Plate Entrance	5 - 12
B836 7862	Decal - Guide Plate Middle	39 - 7
B836 7862	Decal - Guide Plate Middle	5 - 11
B836 7863	Decal - Guide Plate Exit	39 - 8
B836 7863	Decal - Guide Plate Exit	5 - 10
B836 7864	Decal - Misfeed Removal Left	3 - 9
B836 7864	Decal - Misfeed Removal Left	39 - 9
B836 7865	Decal - Vertical Transport	39 - 10
B836 7865	Decal - Vertical Transport	11 - 5
B836 7866	Decal - Exit	39 - 11
B836 7866	Decal - Exit	13 - 21
B836 7867	Decal - Turn Open and Close	39 - 12
B836 7867	Decal - Turn Open and Close	9 - 14
B836 7868	Decal - Knob Blade	37 - 4
B836 7868	Decal - Knob Blade	39 - 13

Part No.	Description	Page and Index No.
B836 7869	Decal - Knob Roller	39 - 14
B836 7869	Decal - Knob Roller	37 - 3
B836 7870	Decal - Stapler Tray	15 - 10
B836 7870	Decal - Stapler Tray	39 - 15
B836 7871	Decal - Transport Unit	39 - 16
B836 7871	Decal - Transport Unit	21 - 9
B836 7872	Decal - Paper Crimp Unit	39 - 17
B836 7872	Decal - Paper Crimp Unit	35 - 13
B836 7892	Decal - Stapler	15 - 9

Part No.	Description	Page and Index No.
A300 3865	Release Spring	35 - 11
A352 2260	Release Spring	31 - 6
A353 2243	Lever Knob	9 - 1
A353 2243	Lever Knob	5 - 4
A353 3351	Exit Driven Roller	13 - 3
A458 2251	Cushion - Bin Solenoid Lever	9 - 9
A458 2251	Cushion - Bin Solenoid Lever	13 - 20
A458 3281	Idler Roller	31 - 11
A498 4625	Arm Cushion	13 - 2
A612 2435	Support Plate	11 - 1
A666 3180	Timing Pulley - Z32	17 - 24
A666 3180	Timing Pulley - Z32	19 - 2
A680 4223	Cushion	13 - 17
A697 2102	Damper - Junction Gate Solenoid	13 - 36
A697 2102	Damper - Junction Gate Solenoid	31 - 9
A697 2102	Damper - Junction Gate Solenoid	7 - 17
A697 4170	Pulley - 32T	17 - 12
B132 1226	Holder:Stand	3 - 20
B302 1542	Timing Pulley - 20Z	31 - 4
B312 1600	Tightener	35 - 4
B312 1600	Tightener	23 - 22
B312 1615	Tension Roller	35 - 19
B352 1600	Timing Pulley - S2M T24	13 - 15
B352 1607	Timing Pulley - T20-S3M	7 - 15
B352 1607	Timing Pulley - T20-S3M	9 - 17
B352 1607	Timing Pulley - T20-S3M	11 - 13
B352 2205	Bushing - Driven Roller	21 - 7
B352 2650	Magnet Catch - 5N	35 - 11
B408 2113	Guide - Trailing Edge	13 - 19
B408 2422	Pulley - T16	13 - 7
B408 2435	Gathering Roller:Ass'y	13 - 6
B408 4223	Belt Tensioner - Stapler	17 - 10
B468 2832	Driven Exit Roller	13 - 26
B468 4136	Middle Myler	19 - 15
B468 4381	Stopper - Timing Belt	17 - 13

Part No.	Description	Page and Index No.
B468 5991	Harness Bracket	33 - 9
B468 6411	Adjusting Pin - Booklet Stapler	19 - 14
B468 7860	Decal:Stapler:Refill:EH185	15 - 21
B468 7860	Decal:Stapler:Refill:EH185	39 - 1
B477 2333	Motor Bracket Cushion	13 - 18
B478 2328	Exit Roller:Driven	21 - 5
B478 2328	Exit Roller:Driven	39 - 3
B700 1031	Bracket:Ground Plate:Ass'y	37 - 19
B700 1161	Slide Rail:Stapler Unit:508mm	37 - 1
B700 1162	Bracket:Connector:Stapler Tray	35 - 16
B700 1163	Screw:Connector	35 - 26
B700 1165	Holder:Coupling:Stapler Unit	35 - 17
B700 1165	Holder:Coupling:Stapler Unit	37 - 18
B700 1166	Bracket:Stopper:Stapler Unit	37 - 17
B700 1501	Tension Spring - Pressure	17 - 9
B700 1501	Tension Spring - Pressure	35 - 5
B700 1501	Tension Spring - Pressure	23 - 18
B700 1600	Bracket:Stepper Motor:Transport	35 - 2
B700 1600	Bracket:Stepper Motor:Transport	31 - 2
B700 1701	Timing Pulley:40T	9 - 19
B700 1702	Timing Belt:B40S3M789	35 - 3
B700 1801	Bracket:Stepper Motor	35 - 22
B700 1802	Timing Belt:B40S2M134	35 - 21
B700 1803	Tension Spring	35 - 23
B700 2411	Guide Plate:Turn:Ass'y	9 - 4
B700 2422	Tension Spring:Turn:Open and Close	9 - 3
B700 2431	Polarization Powl:Duplex Stack	9 - 8
B700 2432	Tension Spring	9 - 10
B700 2441	Guide Plate:Duplex Stack:Ass'y	9 - 13
B700 2452	Shaft:Turn:Guide	9 - 11
B700 2453	Guide:Turn	9 - 12
B700 2461	Transport Roller:Duplex Stack:Lower	9 - 7
B700 2461	Transport Roller:Duplex Stack:Lower	11 - 7
B700 2471	Guide Plate:Lengthwise	11 - 4
B700 2473	Guide Plate:Lower:Open and Close	13 - 25

Part No.	Description	Page and Index No.
B700 2474	Discharge Brush:Exit:Stapler Tray	13 - 22
B700 2476	Compression Spring:Exit:Driven	13 - 28
B700 2476	Compression Spring:Exit:Driven	11 - 2
B700 2477	Discharge Brush:Exit:Stapler Tray	13 - 23
B700 2478	Tension Spring	13 - 24
B700 2481	Guide Plate:Lengthwise:Ass'y	11 - 10
B700 2485	Bracket:Sensor:Duplex Tray	11 - 12
B700 2486	Guide Plate:Exit:Stapler Tray	11 - 9
B700 2491	Exit Roller:Stapler Tray	11 - 8
B700 2510	Bracket:Dcsol:Gate Pawl:Proof Tray	31 - 8
B700 2520	Cushion:Gate Pawl	13 - 16
B700 2611	Bracket:Gathering Roller	13 - 14
B700 2612	Shaft:Gathering Roller:Drive	13 - 13
B700 2621	Arm:Gathering Roller:Ass'y	13 - 10
B700 2631	Arm:Plate:Ass'y	13 - 1
B700 2635	Tension Spring	13 - 5
B700 2649	Timing Belt:40S2M144	13 - 8
B700 2651	Bracket:Solenoid:Gathering Roller	35 - 12
B700 2655	DC Solenoid:Gathering Roller:Ass'y	35 - 10
B700 2661	Bracket:Solenoid:Plate:Ass'y	35 - 7
B700 2665	DC Solenoid:Plate:Ass'y	35 - 8
B700 2667	Tension Spring:Solenoid:Plate	35 - 9
B700 2711	Stay:Swivel:Ass'y	13 - 34
B700 2721	Guide:Trailing Edge	13 - 30
B700 2722	Shaft:Contact Point:Swivel	13 - 29
B700 2723	Tension Spring:Release:Swivel	13 - 31
B700 2725	Arm:Solenoid:Swivel	13 - 32
B700 2729	Cushion:Arm	13 - 33
B700 2731	DC Solenoid:Swivel:Ass'y	13 - 35
B700 3705	Guide Plate:Paper Exit Sub-unit	37 - 5
B700 3710	Bracket:Surface of Paper Sensor	37 - 3
B700 3715	Shaft:Arm:Paper Exit Sub-unit	37 - 10
B700 3720	Arm:Paper Senser:Paper Exit Sub-unit	37 - 8
B700 3725	Arm:Plate:Paper Exit Sub-unit	37 - 6
B700 3730	Roller:Plate:Paper Exit Sub-unit	37 - 7

Part No.	Description	Page and Index No.
B700 3740	Spring:Arm:16mn.m	37 - 9
B700 3851	Tray:Paper Crimp Sub-unit	3 - 19
B700 4100	Shaft:Slider:Standard Fence	23 - 10
B700 4102	Standard Fence:Front:Staple	23 - 13
B700 4103	Slider:Standard Fence	23 - 11
B700 4104	Guide:Entrance:Stapler:Inner Back	23 - 12
B700 4106	Standard Fence:Rear:Staple	23 - 14
B700 4107	Spring:Return:Standard Fence	23 - 7
B700 4159	Stay:Upper:Slide Rail	21 - 1
B700 4161	Stay:Middle:Stapler Tray	19 - 11
B700 4163	Stay:Guide:Stapler:Move	21 - 16
B700 4165	Stay:Lower:Slide Rail	23 - 19
B700 4167	Stay:Lower:Positioning Sensor	23 - 6
B700 4168	Sheet:Slider	23 - 5
B700 4170	Bracket:Positioning Sensor	19 - 6
B700 4180	Stapler Tray	17 - 16
B700 4181	Shaft:Idler:Exit	17 - 25
B700 4182	Guide:Transport:Stapler Tray	17 - 27
B700 4200	Shaft:Guide:Jogger Fence	17 - 26
B700 4201	Jogger Fence:Front:Ass'y	17 - 22
B700 4204	Jogger Fence:Rear:Ass'y	17 - 23
B700 4207	Bracket:Sensor:Jogger	17 - 20
B700 4209	Pulley:32T	17 - 18
B700 4210	Bracket:Motor:Jogger:Ass'y	17 - 19
B700 4213	Timing Belt:1040S2M4-E	17 - 14
B700 4250	Exit Belt:Ass'y	17 - 15
B700 4255	Bracket:Home Position Sensor:Pawl	19 - 10
B700 4258	Shaft:Exit	17 - 2
B700 4259	Exit Roller:Mm45	17 - 4
B700 4260	Collar:Mm40	17 - 3
B700 4261	Timing Pulley:55T	17 - 5
B700 4265	Bracket:Tightener:Exit:Fix	19 - 4
B700 4267	Bracket:Tightener:Exit:Ass'y	19 - 3
B700 4271	Timing Pulley:55T	17 - 8
B700 4272	Timing Pulley:30T	21 - 23

Part No.	Description	Page and Index No.
B700 4273	Timing Pulley:30T	23 - 21
B700 4275	Timing Belt:B40S2M474	23 - 23
B700 4276	Tension Spring	19 - 5
B700 4351	Bracket:Stapler:EH185	19 - 12
B700 4352	Sheet:Guide:Stapler	19 - 16
B700 4353	Stay:Middle:Stapler Tray:Small	19 - 19
B700 4354	Guide:Stapler:Middle	19 - 21
B700 4355	Guide:Stapler:Middle	19 - 20
B700 4356	Cover:Harness:Stapler	19 - 18
B700 4401	Guide Plate:Pressure:Reverse:Stapler Tray	15 - 18
B700 4405	Guide:Leading Edge:Front	15 - 15
B700 4406	Guide:Leading Edge:Rear	15 - 22
B700 4407	Sheet:Plate:Leading Edge	15 - 20
B700 4408	Guide:Leading Edge:Outer	15 - 14
B700 4410	Roller:DIA22	15 - 16
B700 4411	Shaft:Driven:Turn	15 - 17
B700 4412	Tension Spring:Pressure:Turn	15 - 12
B700 4414	Guide Plate:Reverse:Front	15 - 5
B700 4415	Guide Plate:Reverse:Inner Back	15 - 6
B700 4416	Supporting Plate:Reverse:Ass'y	15 - 4
B700 4419	Slider:Guide:Reverse	15 - 2
B700 4422	Lever:Reverse:Stapler Tray:Ass'y	15 - 3
B700 4425	Shaft:Drive:Cam	21 - 3
B700 4426	Cam:Guide Plate:Front	21 - 2
B700 4427	Cam:Guide Plate:Inner Back	21 - 4
B700 4428	Timing Belt:B40S2M158	21 - 22
B700 4429	Gear:Pulley:17Z/48T	21 - 21
B700 4430	Gear:43Z	21 - 20
B700 4431	Guide:Leading Edge:Upper	15 - 19
B700 4444	Guide Plate:Pressure	15 - 23
B700 4450	Guide Plate:Transport Unit	21 - 14
B700 4454	Guide Plate:Transport Unit	21 - 10
B700 4455	Shaft:Driven:Transport Unit	21 - 6
B700 4457	Transport Roller:Transport Unit	21 - 15
B700 4521	Holder:Arm:Harness	23 - 25

Part No.	Description	Page and Index No.
B700 4522	Arm:Harness:Stapler Unit	23 - 26
B700 4523	Pin:Fix:Arm	23 - 17
B700 4524	Bracket:Stapler Tray:Moveable	23 - 3
B700 4540	Inner Cover:Stapler Unit	15 - 11
B700 4713	Compression Spring	39 - 23
B700 4715	Exit Roller:Paper Crimp Sub-Unit	39 - 25
B700 4718	Pulley:27T	37 - 6
B700 4720	Timing Belt:B40S2M214	37 - 5
B700 4720	Timing Belt:B40S2M214	39 - 11
B700 4745	Guide Plate:Exit:Lower	39 - 26
B700 4753	Guide Plate:Exit:Upper	39 - 19
B700 4755	Shaft:Driven	39 - 5
B700 4757	Compression Spring:Transport Roller	39 - 1
B700 4759	Discharge Brush:Exit	39 - 20
B700 4763	Guide Plate:Roller:Lower	39 - 27
B700 4770	Bracket:Home Position Sensor:Blade	37 - 8
B700 4781	Gear:62T	37 - 11
B700 4782	Pulley:31T	37 - 10
B700 4784	Pulley:22T	35 - 15
B700 4785	Timing Belt:B80S3M156	35 - 5
B700 4787	Timing Belt:B80S3M237	35 - 4
B700 4790	Bracket:Auxiliary:Rear	35 - 6
B700 4797	Bracket:Motor:Mm56	35 - 3
B700 4805	Stay:Release:Transport	39 - 13
B700 4810	Shaft:Driven:Release	39 - 4
B700 4821	Cam:Release:Transport	39 - 9
B700 4823	Gear:56Z	39 - 10
B700 4825	Gear:28Z	39 - 12
B700 4827	Joint:Release:Transport	39 - 7
B700 4829	Spacer:Release:Transport	39 - 6
B700 4835	Bracket:Paper Feed Ssensor	39 - 14
B700 4867	Screw:Contact Point:M3	35 - 25
B700 4873	Guide:Open and Close:Front	35 - 10
B700 4874	Guide:Open and Close:Rear	35 - 9
B700 4875	Guide Plate:Open and Close:Lower	35 - 8

Part No.	Description	Page and Index No.
B700 4877	Grip:Guide Plate	35 - 14
B700 4879	Bracket:Contact Point	35 - 7
B700 4885	Knob:Paper Crimp	37 - 1
B700 4891	Inner Cover	37 - 2
B700 4895	Cover:Drive	35 - 1
B700 4897	Cover:Upper	35 - 16
B700 5200	PCB:STP:Control	33 - 6
B700 5301	Harness:Safety Switch	33 - 11
B700 5317	Harness:Motor:Stapler Unit	23 - 16
B700 5350	Harness:Interface:Sub-ass'y	33 - 5
B700 5401	Harness:Staple	33 - 7
B700 5405	Harness:Stapler:Staple Exchange	19 - 17
B700 5407	Harness:Paper Exit Sub-unit	37 - 2
B700 5410	Harness:Sensor	39 - 16
B700 5411	Harness:Sensor:Plate:End Fence	37 - 12
B700 5412	Harness:Connecting:Sensor	39 - 28
B700 5413	Harness:Staple:Motor	33 - 8
B700 5414	Harness:Gate:Open and Close:Motor	21 - 12
B700 5415	Harness:Drive:Swivle:Motor	39 - 17
B700 5418	Harness:Connecting:Sensor	19 - 8
B700 5419	Harness:Connecting:Sensor	23 - 8
B700 5430	Harness - Staple	35 - 14
B700 5431	Harness - Staple	23 - 2
B700 5802	Stepper Motor:PM:S2M:T12:Ass'y	21 - 13
B700 5803	Stepper Motor:PM:T17:Ass'y	35 - 24
B700 5804	Stepper Motor:DIA42:Z17:Ass'y	17 - 17
B700 5804	Stepper Motor:DIA42:Z17:Ass'y	37 - 7
B700 5806	Stepper Motor:Mm42:S3M:T14:Ass'y	31 - 1
B700 5806	Stepper Motor:Mm42:S3M:T14:Ass'y	35 - 1
B700 5808	Stepper Motor:Exit:Ass'y	23 - 4
B700 5810	Stepper Motor:DC24V 2.5W	39 - 18
B700 5812	Stepper Motor:Mm56:S3M:T14:Ass'y	35 - 2
B700 5955	Stay:Fix:Main Control Board	33 - 3
B700 5956	Bracket:Printed Circuit Board	35 - 13
B700 5956	Bracket:Printed Circuit Board	33 - 2

Part No.	Description	Page and Index No.
B700 5957	Bracket:Main Control Board:Lower	35 - 20
B700 6105	Inner Cover:Lower	11 - 15
B700 6115	Cover:Front	3 - 18
B700 6120	Hinge:Door:Lower:Ass'y	3 - 17
B700 6125	Hinge:Door:Upper:Ass'y	3 - 16
B700 6175	Cover:Rear	3 - 2
B700 7852	Stapler:Service Parts:Ass'y	19 - 13
B702 7225	Bushing:Punch Unit:Slide	15 - 7
B706 1156	Hexagonal Bolt - M12x30	37 - 13
B706 1545	Tightener Bracket	31 - 5
B706 5151	Angle:Printed Circuit Board:ST	31 - 14
B706 7531	Cushion:Spacer	3 - 25
B793 1312	Caster H43	37 - 15
B793 7898	Decal:Paper Exit Sub-Unit	39 - 2
B793 7898	Decal:Paper Exit Sub-unit	3 - 5
B804 1117	Cap - Base	37 - 12
B804 4405	Guide:Leading Edge:Stapler Tray:Middle	15 - 8
B804 7896	Decal:Paper Crimp	35 - 17
B804 7896	Decal:Paper Crimp Sub-Unit	39 - 3
B830 1130	Lever - Coupling	9 - 15
B830 1135	Screw	5 - 13
B830 1135	Screw	9 - 16
B830 1135	Screw	31 - 7
B830 1135	Screw	35 - 6
B830 7511	Connecting Guide Plate - Lower	5 - 8
B830 7512	Connecting Guide Plate - Upper	5 - 9
B830 7530	Coupling Bracket	3 - 22
B830 7536	Coupling Bracket - Correct	3 - 23
B830 7537	Adjusting Plate:Bracket:Coupling	37 - 20

Part No.	Description	Page and Index No.
AA06 0557	Positioning Roller Spring	13 - 11
AA06 3529	Pressure Spring - 14.5mm	21 - 8
AA08 0237	Bushing - 4x5x7	39 - 2
AA08 2058	Bushing - 6x10x9mm	13 - 9
AA10 0011	Retaining Ring:Silencer:Mm7	17 - 6
AA13 2208	Spacer - M6	39 - 24
AA14 3396	Screw - M4x4	3 - 24
AA14 3790	Screw:Contact Point	17 - 11
AA14 3790	Screw:Contact Point	35 - 18
AA14 3790	Screw:Contact Point	23 - 15
AA14 3790	Screw:Contact Point	9 - 18
AA14 3790	Screw:Contact Point	19 - 1
AA16 1099	Lever Cushion	13 - 12
AF02 2147	Driven Roller	5 - 2
AF02 2147	Driven Roller	11 - 3
AF02 2147	Driven Roller	13 - 27
AG07 0512	Magnet Catch:Ass'y	3 - 8
AG07 0513	Magnet Catch	9 - 5
AG07 0513	Magnet Catch	5 - 5
AG07 0514	Magnet Catch	11 - 6
AG07 0514	Magnet Catch	21 - 11
AG07 1012	Magnet Catch:Ass'y	35 - 18
AH01 2030	Caster:DIA50:400N	37 - 16
AW01 0109	Photo Refiection Sensor:PS117ED1	39 - 22
AW02 0114	Photo Interruptor - Lower Limit	7 - 7
AW02 0141	Photointerruptor	21 - 18
AW02 0141	Photointerruptor	17 - 21
AW02 0141	Photointerruptor	37 - 4
AW02 0141	Photointerruptor	37 - 9
AW02 0141	Photointerruptor	39 - 8
AW02 0166	Photointerruptor:Paper Feed Sensor	19 - 9
GW01 0007	Photo Refiection Sensor:Exit	39 - 15
GW01 0007	Photo Refiection Sensor:Exit	11 - 11
GW01 0007	Photo Refiection Sensor:Exit	7 - 2
GW01 0007	Photo Refiection Sensor:Exit	23 - 9

Part No.	Description	Page and Index No.
GW01 0007	Photo Refiection Sensor:Exit	19 - 7

Part No.	Description	Page and Index No.
0353 0040N	Screw - M3x4	5 - 101
0353 0040N	Screw - M3x4	13 - 105
0353 0040N	Screw - M3x4	9 - 104
0353 0040N	Screw - M3x4	39 - 103
0353 0040N	Screw - M3x4	31 - 103
0353 0040N	Screw - M3x4	35 - 104
0353 0060N	Bind Screw - M3x6	19 - 107
0353 0060N	Bind Screw - M3x6	7 - 102
0354 4014N	Screw M4x14	3 - 105
0450 3008N	Tapping Screw - M3x8	35 - 106
0450 3008N	Tapping Screw - M3x8	23 - 103
0450 3008N	Tapping Screw - M3x8	11 - 103
0450 3008N	Tapping Screw - M3x8	15 - 102
0451 3006N	Tapping Screw - 3x6	35 - 101
0451 3006N	Tapping Screw - 3x6	21 - 105
0451 3006N	Tapping Screw - 3x6	3 - 101
0451 3006N	Tapping Screw - 3x6	35 - 103
0451 3006N	Tapping Screw - 3x6	23 - 101
0451 3006N	Tapping Screw - 3x6	37 - 102
0451 3006N	Tapping Screw - 3x6	17 - 101
0451 3006N	Tapping Screw - 3x6	7 - 110
0451 3006N	Tapping Screw - 3x6	37 - 103
0451 3006N	Tapping Screw - 3x6	19 - 101
0451 3006N	Tapping Screw - 3x6	31 - 102
0451 3006N	Tapping Screw - 3x6	39 - 101
0451 3008N	Tapping Screw - M3x8	33 - 102
0451 3008N	Tapping Screw - M3x8	23 - 102
0451 3008N	Tapping Screw - M3x8	31 - 106
0451 3008N	Tapping Screw - M3x8	13 - 102
0451 3008N	Tapping Screw - M3x8	3 - 104
0451 3008N	Tapping Screw - M3x8	37 - 106
0451 3010N	Tapping Screw:3x10	17 - 102
0453 3006N	Tapping Screw - M3x6	15 - 103
0453 3006N	Tapping Screw - M3x6	23 - 104
0453 3006N	Tapping Screw - M3x6	21 - 101

Part No.	Description	Page and Index No.
0453 3006N	Tapping Screw - M3x6	37 - 105
0453 3006N	Tapping Screw - M3x6	37 - 103
0453 3006N	Tapping Screw - M3x6	17 - 103
0453 3006N	Tapping Screw - M3x6	35 - 105
0453 3014N	Binding Self Tapping Screw 3x14	39 - 102
0453 4006N	Binding Self Tapping Screw:4x6	35 - 103
0454 3006Q	Tapping Screw - M3x6	33 - 101
0454 3006Q	Tapping Screw - M3x6	7 - 101
0454 3006Q	Tapping Screw - M3x6	21 - 110
0454 3006Q	Tapping Screw - M3x6	19 - 102
0454 3006Q	Tapping Screw - M3x6	13 - 101
0454 3006Q	Tapping Screw - M3x6	5 - 102
0454 3006Q	Tapping Screw - M3x6	31 - 101
0454 3006Q	Tapping Screw - M3x6	11 - 102
0454 3006Q	Tapping Screw - M3x6	37 - 101
0454 3006Q	Tapping Screw - M3x6	35 - 101
0454 3006Q	Tapping Screw - M3x6	3 - 103
0454 3006Q	Tapping Screw - M3x6	9 - 101
0454 3008Q	Tapping Screw:3x8	5 - 103
0454 3008Q	Tapping Screw:3x8	3 - 102
0454 3008Q	Tapping Screw:3x8	37 - 101
0454 3008Q	Tapping Screw:3x8	11 - 101
0454 3008Q	Tapping Screw:3x8	35 - 102
0454 3008Q	Tapping Screw:3x8	37 - 102
0454 3008Q	Tapping Screw:3x8	9 - 102
0454 3008Q	Tapping Screw:3x8	15 - 101
0632 0160G	Parallel Pin-M2x16	21 - 104
0632 0160G	Parallel Pin-M2x16	17 - 104
0633 0140G	Parallel Pin - 3x14	37 - 105
0633 0140G	Parallel Pin - 3x14	35 - 110
0633 0180G	Parallel Pin - 3x18mm	37 - 106
0720 0040E	Retaining Ring - M4	31 - 104
0720 0040E	Retaining Ring - M4	23 - 105
0720 0040E	Retaining Ring - M4	37 - 107
0720 0040E	Retaining Ring - M4	19 - 108

Part No.	Description	Page and Index No.
0720 0040E	Retaining Ring - M4	15 - 105
0720 0040E	Retaining Ring - M4	11 - 104
0720 0040E	Retaining Ring - M4	17 - 106
0720 0040E	Retaining Ring - M4	39 - 104
0720 0040E	Retaining Ring - M4	9 - 105
0720 0040E	Retaining Ring - M4	7 - 104
0720 0040E	Retaining Ring - M4	21 - 103
0720 0040E	Retaining Ring - M4	13 - 103
0720 0060E	Retaining Ring - M6	21 - 102
0720 0060E	Retaining Ring - M6	35 - 104
0720 0060E	Retaining Ring - M6	17 - 105
0742 3808	Ball Bearing - 8x16x5	35 - 105
0805 0088	Retaining Ring - M6	31 - 105
0805 0088	Retaining Ring - M6	37 - 104
0805 0088	Retaining Ring - M6	9 - 106
0805 0089	Retaining Ring - M4	13 - 104
0805 0089	Retaining Ring - M4	7 - 105
0805 0089	Retaining Ring - M4	15 - 104
0805 0089	Retaining Ring - M4	39 - 105
0805 3263	Bearing - 6x10x6mm	7 - 106
0805 3537	Ball Bearing:DIA6xDIA13x5:DIA14.5	9 - 103
0805 3537	Ball Bearing:DIA6xDIA13x5:DIA14.5	11 - 105
0805 3537	Ball Bearing:DIA6xDIA13x5:DIA14.5	21 - 106
0805 3537	Ball Bearing:DIA6xDIA13x5:DIA14.5	7 - 103
0950 3005N	Screw:Spring Washer:M3x5	37 - 104
1102 8502	Connector - 54679-1615	31 - 110
1105 0192	Locking Support	33 - 108
1105 0328	Harness Clamp - ES-0505	7 - 109
1105 0328	Harness Clamp - ES-0505	17 - 108
1105 0328	Harness Clamp - ES-0505	19 - 103
1105 0328	Harness Clamp - ES-0505	35 - 109
1105 0328	Harness Clamp - ES-0505	37 - 109
1105 0334	Edge - 17	35 - 108
1105 0334	Edge - 17	31 - 111
1105 0334	Edge - 17	23 - 107

Part No.	Description	Page and Index No.
1105 0367	Spacer	33 - 107
1105 0487	Harness Clamp	21 - 108
1105 0487	Harness Clamp	19 - 106
1105 0487	Harness Clamp	31 - 107
1105 0487	Harness Clamp	35 - 102
1105 0487	Harness Clamp	33 - 103
1105 0488	Harness Clamp	33 - 104
1105 0488	Harness Clamp	21 - 107
1105 0488	Harness Clamp	23 - 106
1105 0488	Harness Clamp	35 - 106
1105 0489	Harness Clamp - LWS 1316	33 - 106
1105 0489	Harness Clamp - LWS 1316	19 - 105
1105 0511	Harness Clamp - LWS-0306ZC	33 - 105
1105 0511	Harness Clamp - LWS-0306ZC	35 - 107
1105 0516	Clamp	9 - 107
1105 0516	Clamp	7 - 108
1105 0516	Clamp	35 - 108
1105 0518	Edge Saddle - LES-1010	31 - 108
1105 0522	Edge Saddle - LES0510	39 - 106
1105 0522	Edge Saddle - LES0510	35 - 107
1105 0623	Clamp - LBWS-0206S-V0	39 - 107
1105 0623	Clamp - LBWS-0206S-V0	37 - 108
1105 0623	Clamp - LBWS-0206S-V0	21 - 109
1105 0623	Clamp - LBWS-0206S-V0	23 - 108
1105 0623	Clamp - LBWS-0206S-V0	19 - 104
1105 0623	Clamp - LBWS-0206S-V0	17 - 107
1105 0623	Clamp - LBWS-0206S-V0	13 - 106
1105 0623	Clamp - LBWS-0206S-V0	11 - 106
1105 0623	Clamp - LBWS-0206S-V0	7 - 107
1106 0107	Snapbushing-17.9mm	31 - 109
1204 2541	Interlock Switch	9 - 108

Part No.	Description	Page and Index No.
5053 0223	Bushing - 8mm	21 - 19
5053 0223	Bushing - 8mm	17 - 7
5053 0419	Bushing - 10mm	17 - 1
5053 0447	Bushing - 6mm	39 - 21
5053 0447	Bushing - 6mm	9 - 20
5053 0447	Bushing - 6mm	11 - 14
5206 2686	Snap Ring	23 - 24
5206 2686	Snap Ring	35 - 12
5215 2621	Snap Ring - M6	15 - 13
5447 2681	Snap Ring	15 - 1
5447 2681	Snap Ring	13 - 4
5447 2681	Snap Ring	23 - 20