

DF3070 (D630)

DF3070 (D630)

PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.


CONTENTS

CONTENTS (Continued)

1.Exterior (D6300)	2
2.Original Feed 1 (D630)	4
3.Original Feed 2 (D630)	6
4.Original Feed 3 (D630)	8
5.Original Transfer 1 (D630)	10
6.Original Transfer 2 (D630)	12
7.Original Transfer 3 (D630)	14
8.Drive Section 1 (D630)	16
9.Drive Section 2 (D630)	18
10.Electrical Sectio (D630)	20
11.Frame Section (D630)	22
12.Decals and Documents (D630)	24
Parts Index	27

December 19, 2011

1.Exterior (D6300)

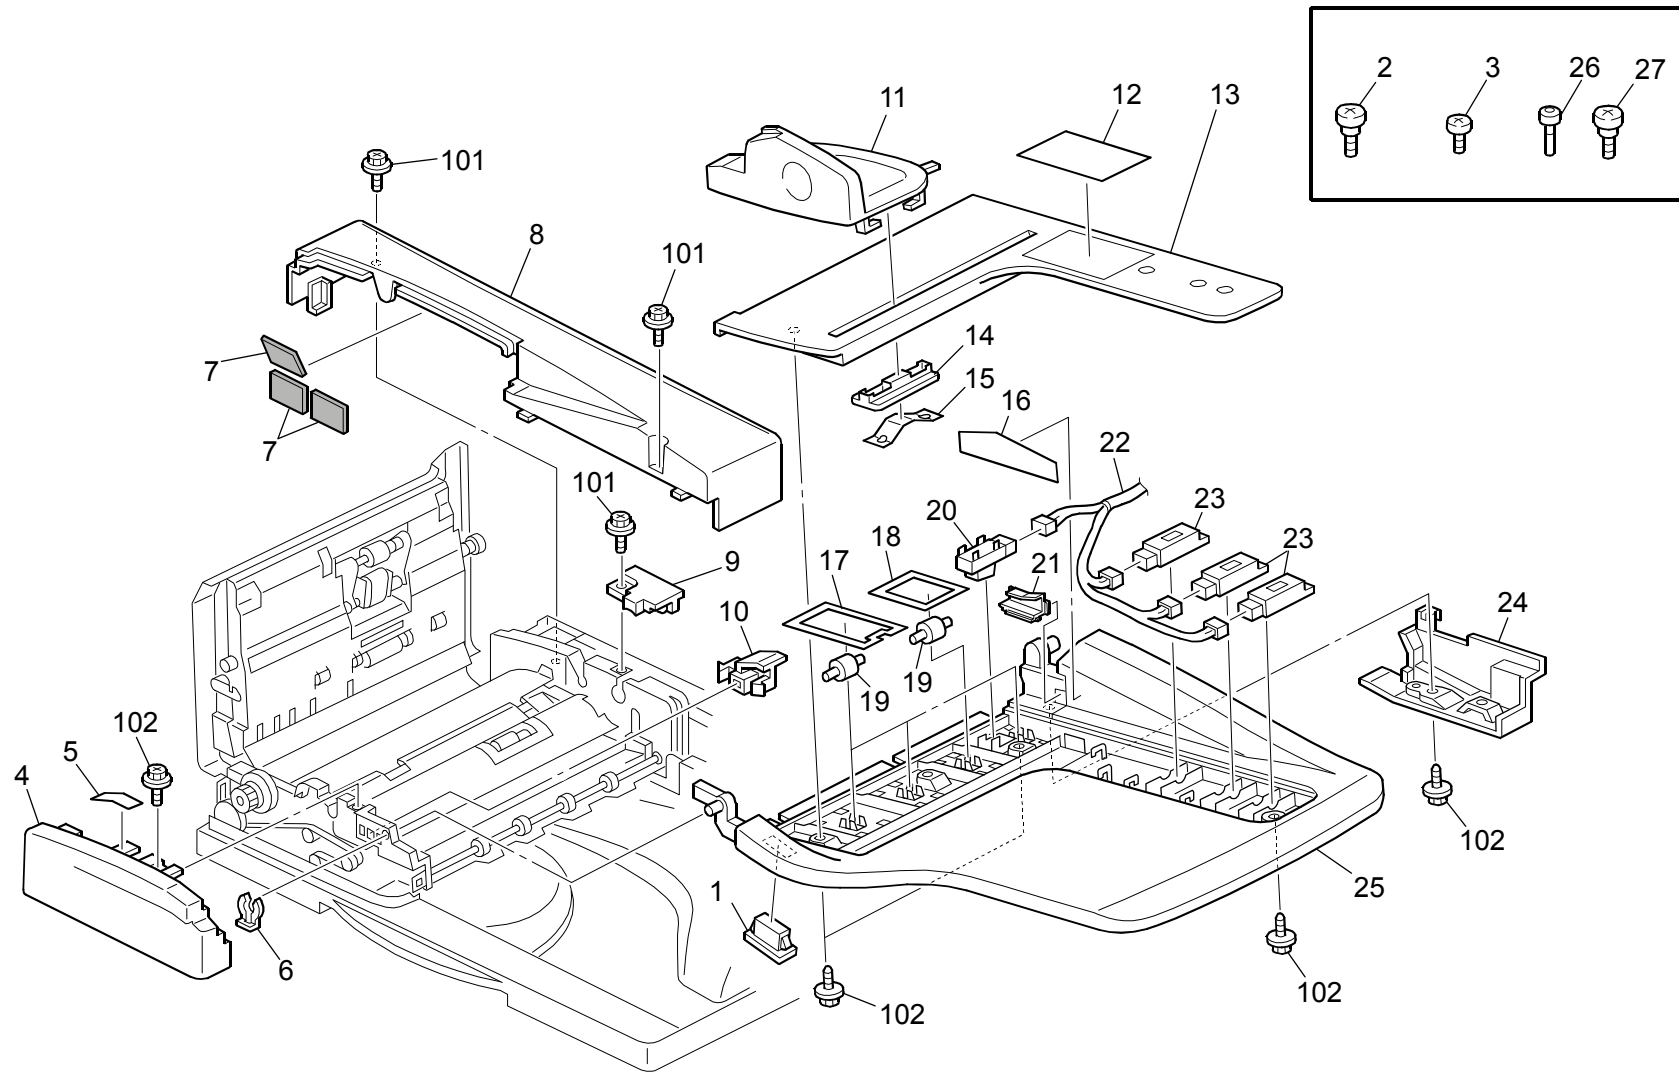


1.Exterior (D6300)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AG07 0513	Magnet Catch	1
2	A859 7211	Stepped Screw	2
3	D540 6121	Full Dug Point Screw:Fix:Hinge	2
4	D630 4411	Cover:Front	1
5	D630 6013	Decal:Display:Misfeed Removal:P1	1
6	5215 2621	Snap Ring - M6	1
7	B802 4712	Sound Proofing Material:Cover:Rear	3
8	D630 4511	Cover:Rear	1
9	B802 2551	Stay:Original Table:Contact Point	1
10	B802 2581	Stopper:Original Table	1
11	D630 2526	Side Fence	1
12	D578 6031	Decal - Original Table	1
13	D630 2522	Original Table:Face Front	1
14	B802 2536	Slider:Side Fence	1
15	B802 2532	Spring Plate:Side Fence	1
16	D630 6011	Decal:Side Fence	1
17	B802 2571	Spring Plate:0.2T	3
18	A858 4676	Spring Plate - Pressure Roller	1
19	A858 4671	Roller Driven	4
20	GW01 0007	Photo Refiection Sensor:Exit	1
21	D630 2541	Guide:Original Insert	1
22	B802 5880	Harness:Sensor:Original Table	1
23	AW01 0129	Photo Refiection Sensor	3
24	B802 2562	Plate:Contact Point	1
25	D630 2512	Original Table	1
26	H511 5007	Stamp	1
27	AA14 3542	Screw:M3:DIA4X5.6	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0450 3008N	Tapping Screw - M3x8	

2.Original Feed 1 (D630)

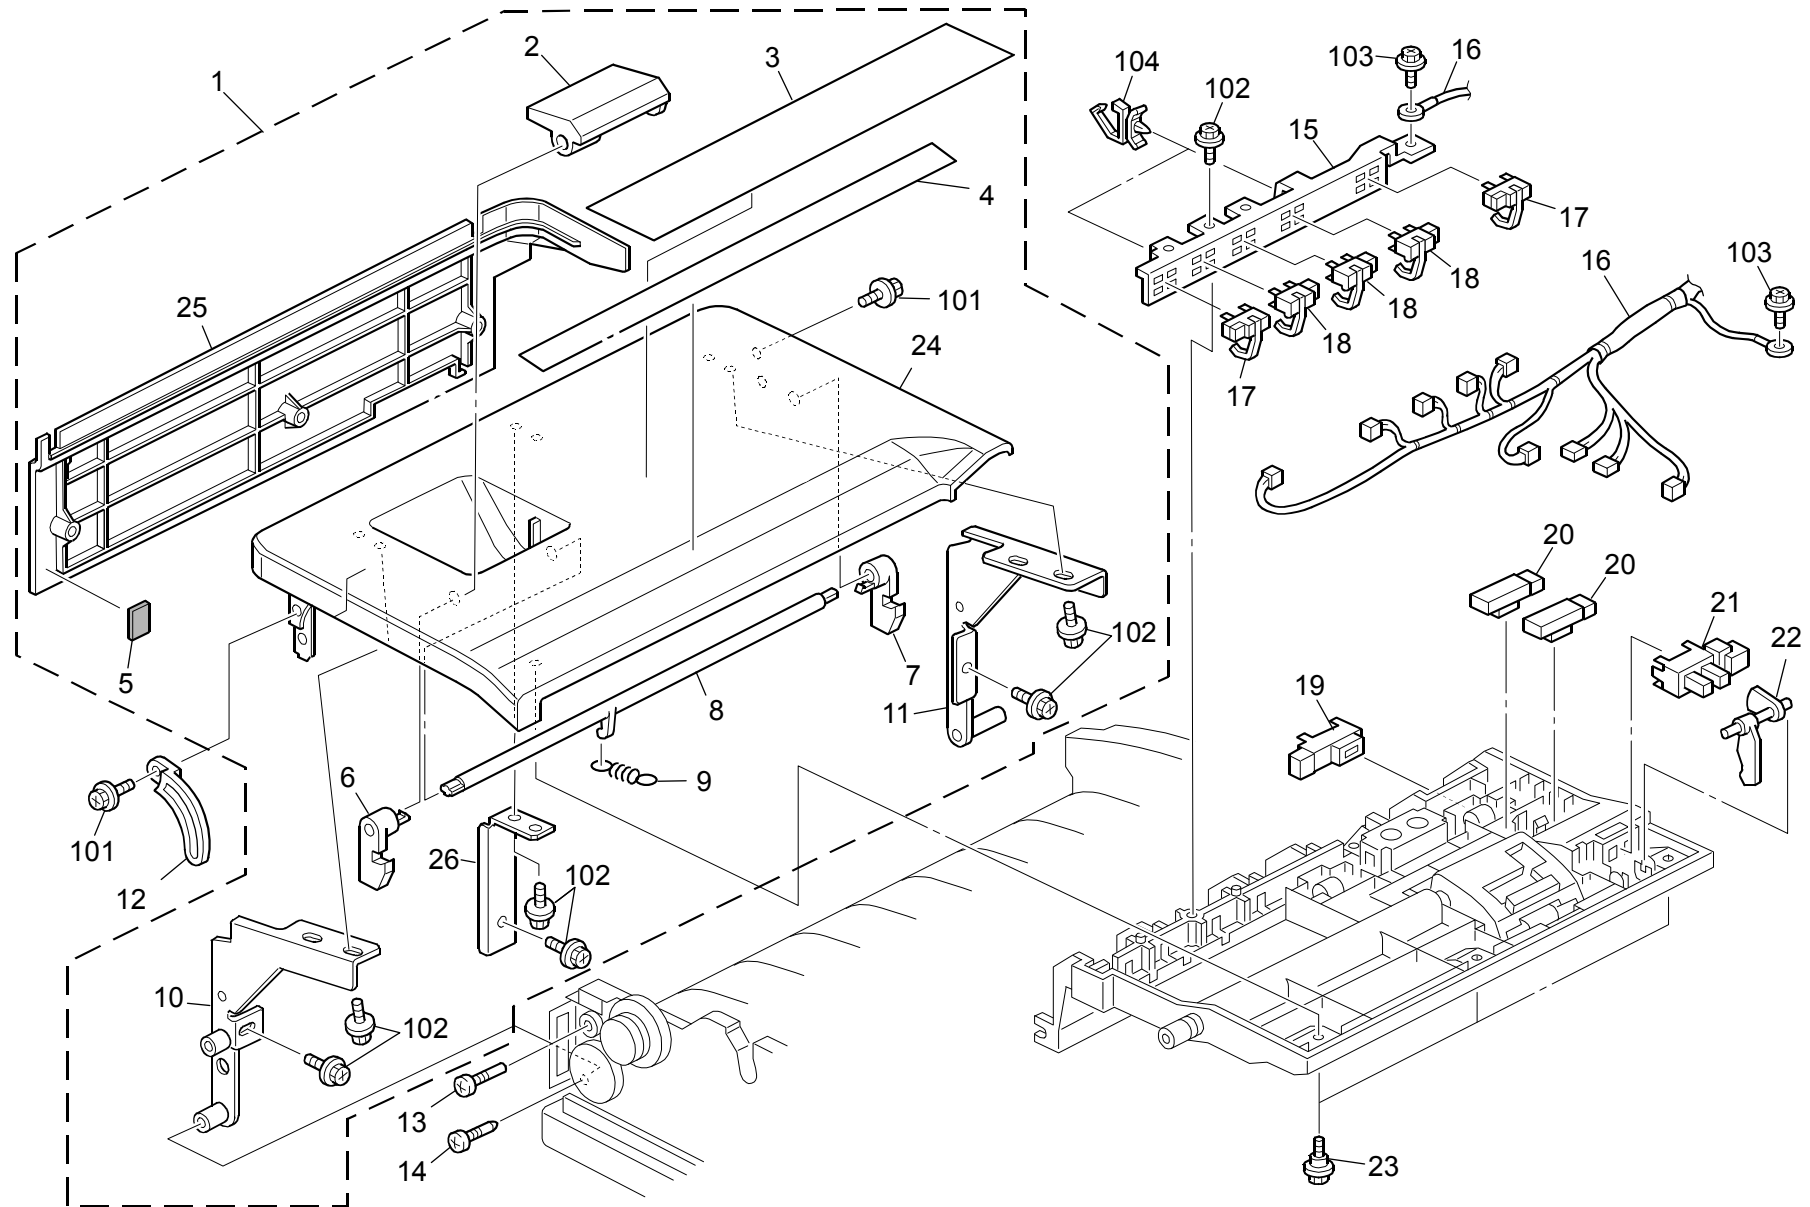


2.Original Feed 1 (D630)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D630 4121	Cover:Paper Feed	1
2	D630 4152	Grip:Cover:Paper Feed	1
3	D630 6013	Decal:Display:Misfeed Removal:P1	1
4	D578 6021	Decal:Size:Original	1
5	B802 4712	Sound Proofing Material:Cover:Rear	5
6	B802 4154	Hook:Grip:Cover:Front	1
7	B802 4155	Hook:Grip:Cover:Inner Back	1
8	B802 4158	Shaft:Grip:Cover	1
9	AA06 2262	Tension Spring	1
10	D630 4241	Bracket:Cover:Paper Feed:Front:Ass'y	1
11	D630 4231	Bracket:Cover:Paper Feed:Inner Back:Ass'y	1
12	B802 4162	Stopper:Cover	1
13	AA14 3789	Shaft:Cleaner	1
14	AA14 3788	Pin:Guide Plate:Paper Feed	1
15	B802 4252	Bracket:Paper Size Sensor	1
16	D630 5870	Harness:Sensor:Paper Feed	1
17	AW02 0154	Photointerruptor:Entrance	2
18	AW02 0155	Photointerruptor:Paper Size Sensor	3
19	GW01 0007	Photo Refiection Sensor:Exit	1
20	AW01 0091	Photo Reflection Sensor	2
21	AW02 0198	Photointerruptor:LG2A14NI1	1
22	B802 4263	Feeler:Original Sensor	1
23	GA14 3003	Screw:MM5:2.5mm	3
24	D630 4141	Cover:Upper:Paper Feed	1
25	D630 4142	Cover:Left:Paper Feed	1
26	D630 4221	Bracket:Cover:Paper Feed:Middle	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3010N	Tapping Screw:3x10	
102	0450 3008N	Tapping Screw - M3x8	
103	0451 3006N	Tapping Screw - 3x6	
104	1105 0516	Clamp	

3.Original Feed 2 (D630)

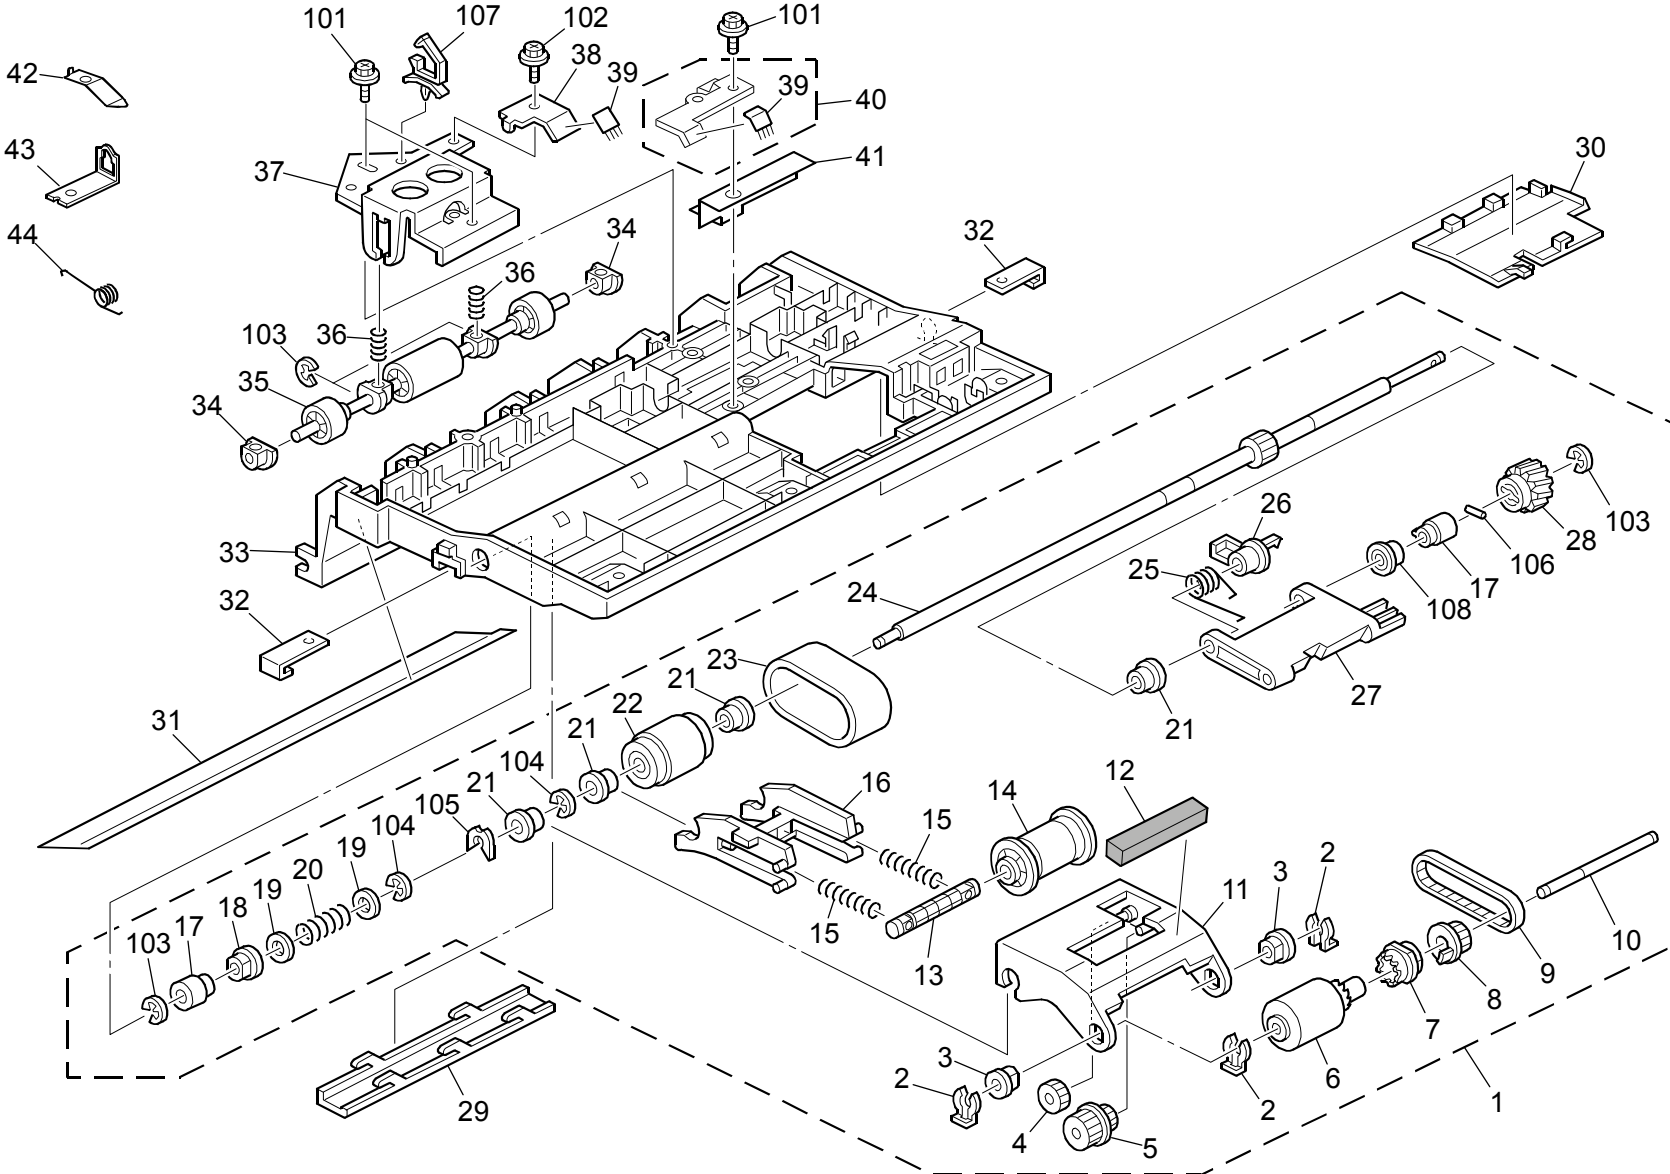


3.Original Feed 2 (D630)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B802 4311	Paper Feed:Unit	1
2	5447 2681	Snap Ring	3
3	AA08 2101	Bushing - 6x10x6	2
4	B802 4357	Gear:Z19	1
5	B802 4358	Timing Pulley:Gear:T19/Z22	1
6	B802 4361	Roller:Pickup	1
7	B387 2163	Pickup Collar	1
8	B802 4372	Timing Pulley:T21	1
9	AA04 3328	Timing Belt:40S2M130	1
10	B802 4352	Shaft:Pickup	1
11	B802 4355	Bracket:Pickup	1
12	B802 4359	Cushion:Pickup	1
13	A859 2112	Drive Shaft - Paper Feed Belt	1
14	B387 2113	Roller - Paper Feed Belt	1
15	B386 3320	Spring:Belt:Paper Feed:8N	2
16	B802 4333	Bracket:Paper Feed Belt	1
17	B802 4326	Collar:Shaft	2
18	AA08 2104	Bushing - 8x12x7	1
19	AA13 2013	Spacer	2
20	AA06 3435	Compression Spring:Paper Feed:Joint	1
21	A628 1225	Bushing - 8mm	4
22	B789 2114	Paper Feed Belt Roller	1
23	A806 1295	Feed Belt	1
24	B802 4322	Shaft:Drive	1
25	B652 3174	Tension Spring	1
26	B802 4323	Holder	1
27	B802 4325	Lever:Pickup:Release	1
28	B802 4328	Gear:Z20	1
29	B802 4228	Drum Stay:Upper:Front	1
30	B802 4227	Drum Stay:Upper:Inner Back	1
31	B802 4229	Sheet:Guide:Upper	1
32	B802 4224	Spring Plate:Upper	2
33	B802 4222	Guide:Upper	1
34	AA08 0288	Bushing:DIA6	2
35	B802 4295	Driven Roller:Pull Out	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	AA06 3441	Compression Spring	2
37	B802 4282	Bracket:Driven Roller:Pull Out	1
38	B802 4292	Ground Plate:Driven Roller:Pull Out	1
39	G052 4892	Discharge Brush:Exit:Small	2
40	B802 4265	Ground Plate	1
41	B802 4225	Sheet:Driven Roller:Pull Out	1
42	B802 3149	Spring Plate:Guide Plate:Scanning:Inner Back	1
43	B802 3148	Guide Plate:Guide Plate:Scanning	1
44	AA06 6376	Torsion Spring:Pickup:Pressure	1
101	0450 3008N	Tapping Screw - M3x8	
102	0451 3006N	Tapping Screw - 3x6	
103	0720 0040E	Retaining Ring - M4	
104	0720 0060E	Retaining Ring - M6	
105	0805 0088	Retaining Ring - M6	
106	0632 0100G	Pin - 2x10mm	
107	1105 0516	Clamp	
108	0741 3506	Ball Bearing - 6x12x4 MM	

4.Original Feed 3 (D630)

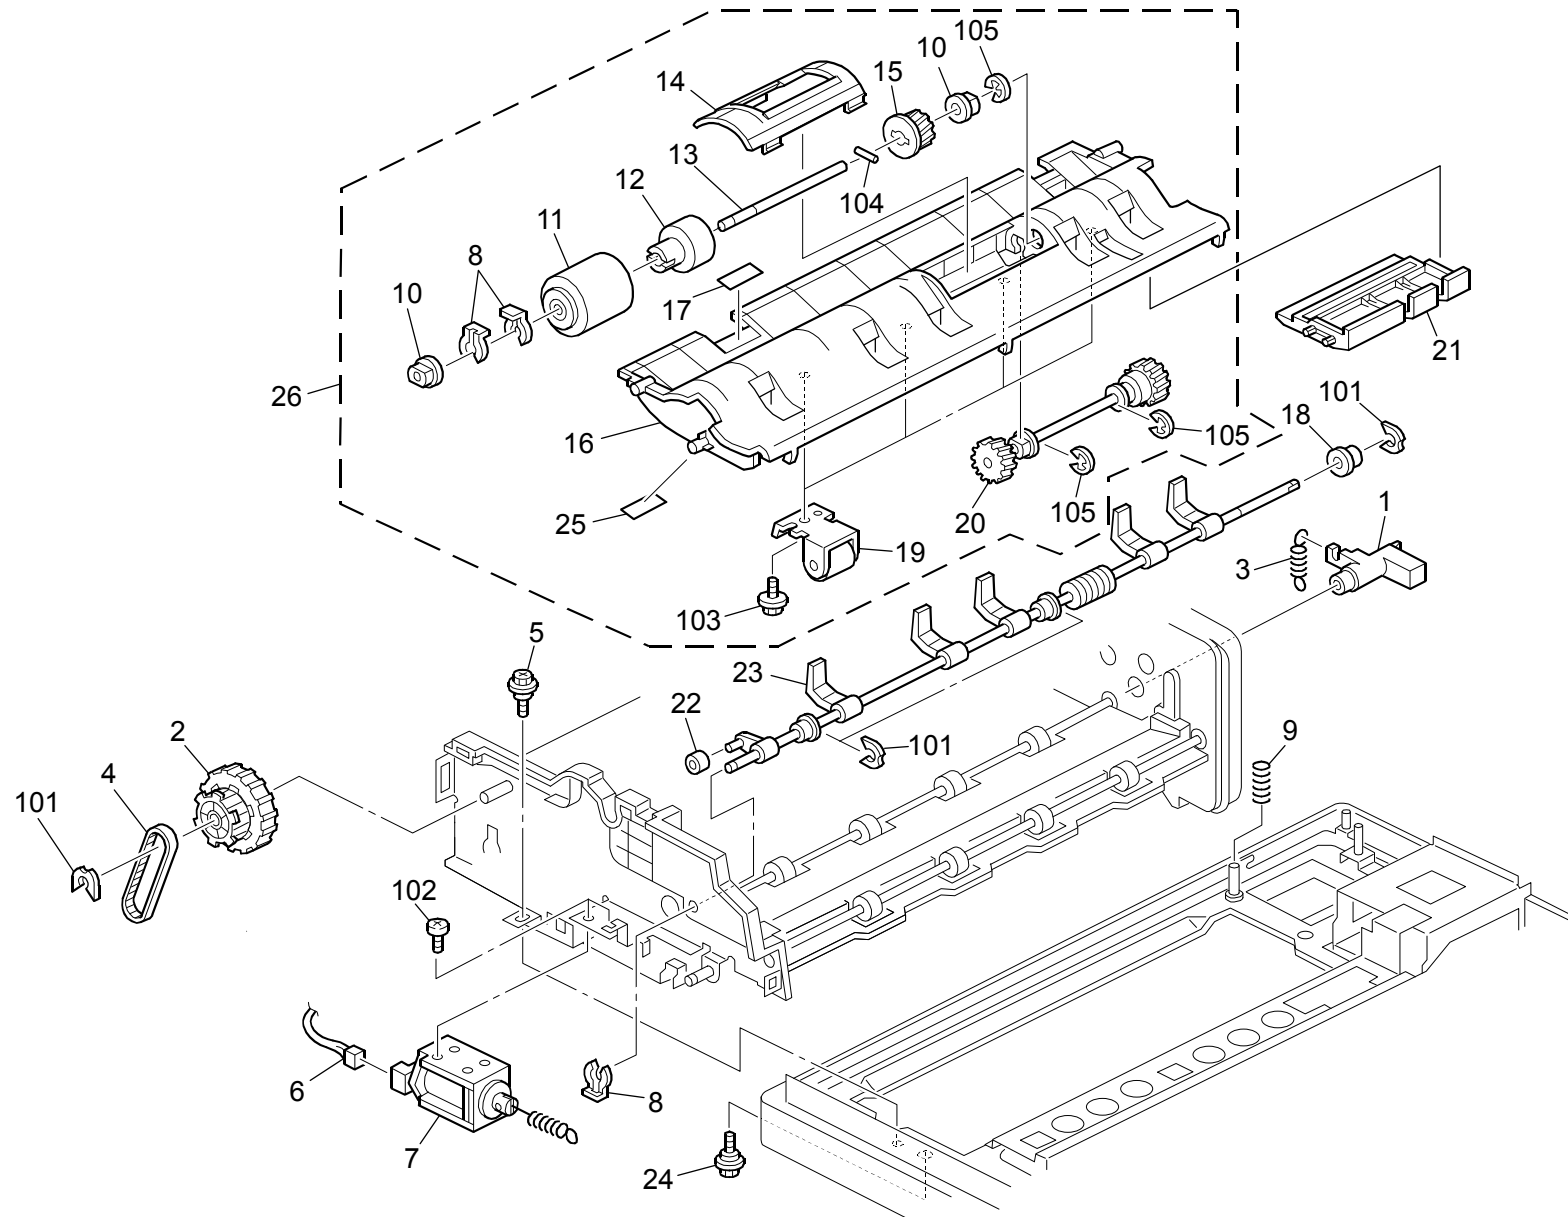


4.Original Feed 3 (D630)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B802 2115	Lever:Stopper Pawl	1
2	D630 1777	Knob:Misfeed Removal:T27	1
3	AA06 0843	Tension Spring	1
4	B802 1774	Timing Belt:40S3M186	1
5	AA14 3823	Tapping Screw	1
6	B802 5790	Harness:Solenoid	1
7	B802 3811	DC Solenoid:24V	1
8	5447 2681	Snap Ring	3
9	AA06 3919	Spring:Pressure	1
10	AA08 2101	Bushing - 6x10x6	2
11	A859 2241	Reverse Roller	1
12	B802 2255	Torque Limiter Mechanical Clutch:Separator	1
13	B802 2252	Shaft:Roller:Reverse	1
14	B802 2225	Drum Stay:Guide:Reverse	1
15	B802 2253	Gear:Z20	1
16	B802 2228	Guide:Reverse:Open And Close	1
17	D630 6014	Decal:Display:Misfeed Removal:P2	1
18	AA08 0265	Bushing:6x8x5	1
19	B802 2285	Roller:Reverse Exit:Driven	4
20	B802 2231	Shaft:Reverse:Drive:Press Fit	1
21	B802 2227	Guide:Reverse:Open And Close:Behind	1
22	A458 2251	Cushion - Bin Solenoid Lever	1
23	B802 2111	Stopper Pawl:Paper Feed	1
24	AA14 3790	Screw:Contact Point	1
25	B802 2223	Sheet:Guard	2
26	B802 2229	Guide:Reverse:Open And Close:Sub-Ass'y	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0805 0089	Retaining Ring - M4	
102	0353 0040N	Screw - M3x4	
103	0450 3008N	Tapping Screw - M3x8	
104	0632 0120G	Parallel Pin - 2x12	
105	0720 0040E	Retaining Ring - M4	

5.Original Transfer 1 (D630)

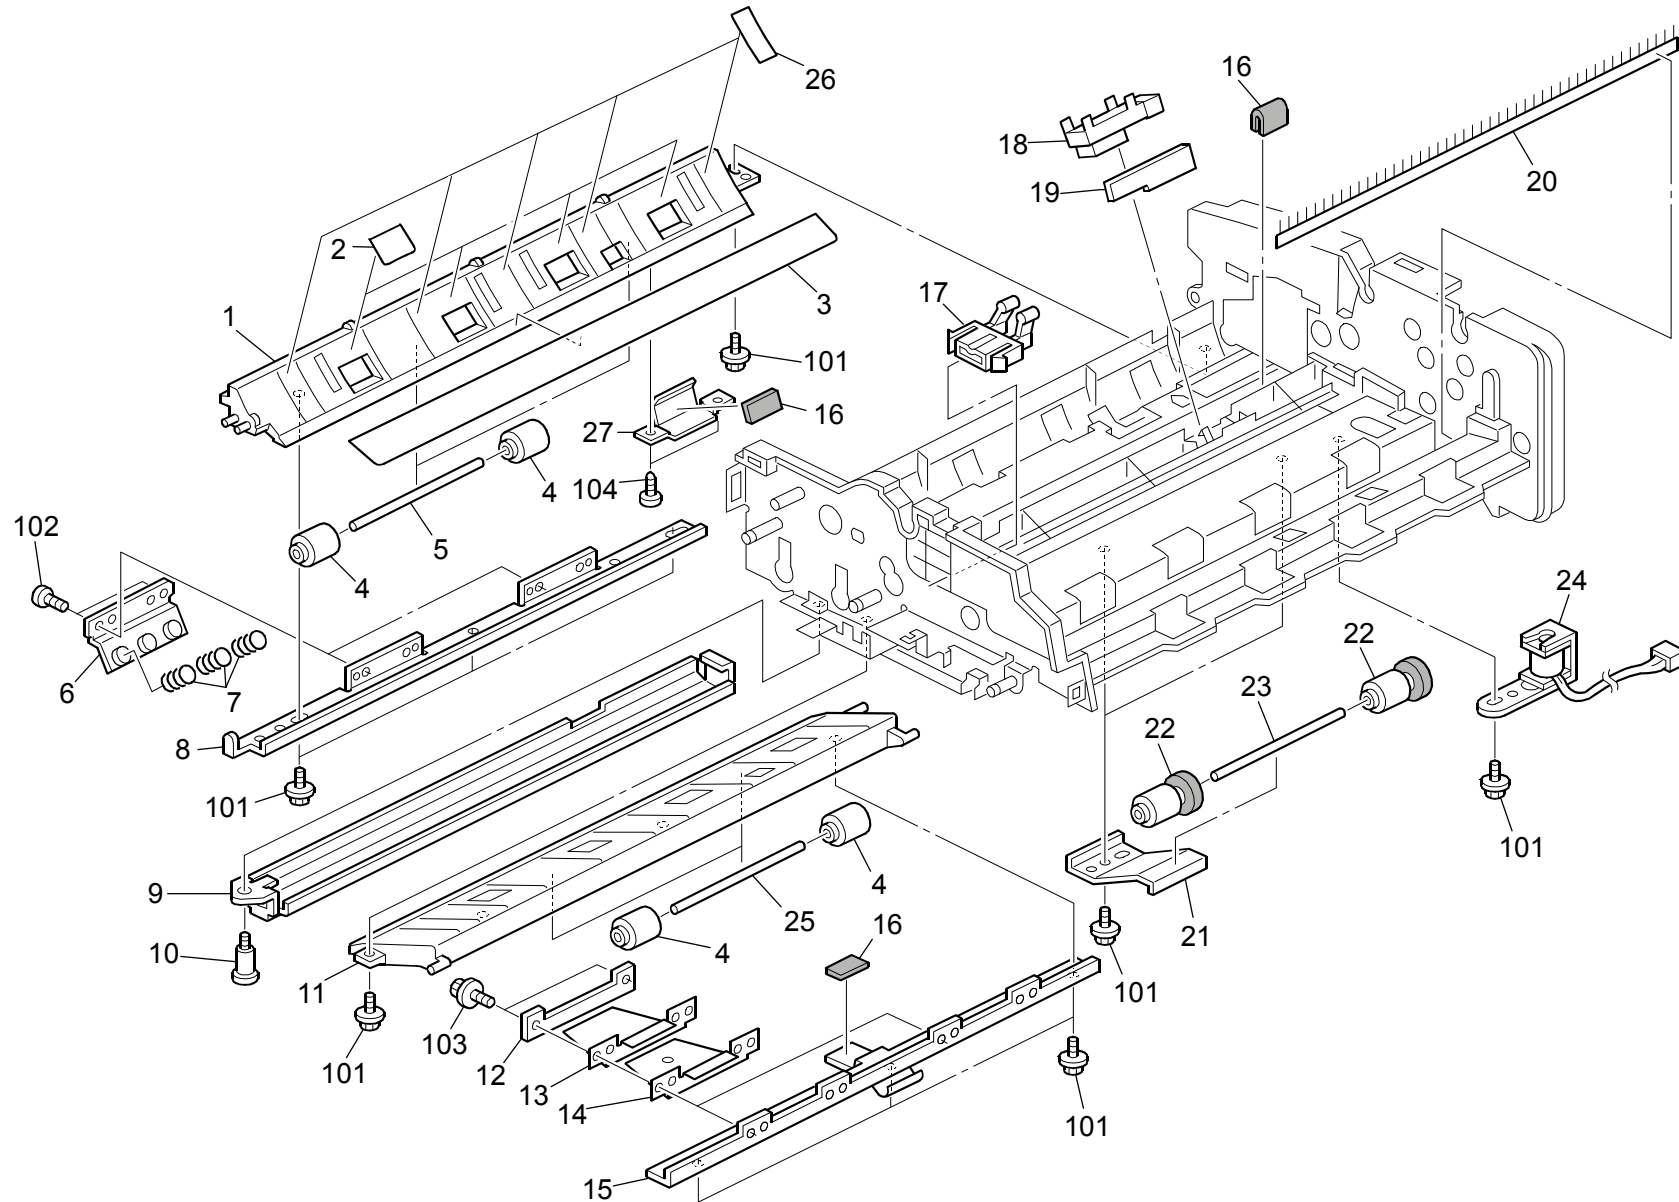


5.Original Transfer 1 (D630)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B802 3415	Guide:Scanning:Entrance:Lower	1
2	B802 3413	Sheet:Roller:Scanning:Entrance	4
3	D630 3413	Sheet:Scanning:Entrance	1
4	B802 3471	Roller:Scanning:Driven	8
5	B802 3492	Shaft:Driven:Entrance	2
6	B802 3431	Bracket:Entrance:Pressure:Ass'y	2
7	B802 3435	Compression Spring:3.3n	6
8	B802 3422	Stay:Scanning:Entrance:Lower	1
9	B802 3511	Guide Plate:Scanning	1
10	AA14 3569	Screw	1
11	B802 3553	Guide:Scanning:Exit:Lower	1
12	B802 3566	Plate:Exit:Pressure:Auxiliary	2
13	B802 3567	Spring Plate:Scanning:Exit:Driven:Upper	2
14	B802 3569	Spring Plate:Scanning:Exit:Driven:Lower	2
15	B802 3561	Stay:Scanning:Exit:Lower	1
16	A422 1063	Seal - 0.7x13x20	3
17	B802 2291	Stopper:Guide:Reverse	1
18	GW01 0007	Photo Refiection Sensor:Exit	1
19	B802 3851	Bracket:Sensor:Scanning:Exit	1
20	B802 3755	Discharge Brush:Reverse	1
21	B802 3711	Spring Plate	2
22	B789 3712	Exit Driven Roller	4
23	B789 3491	Scanning Driven Shaft	2
24	B714 5006	DC Solenoid:Transmitted Rubber Stamp	1
25	B802 3592	Shaft:Driven:Exit	2
26	B802 3417	Sheet:Auxiliary:Scanning:Entrance	5
27	B802 3442	Sensor Barcket	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 3008N	Tapping Screw - M3x8	
102	0453 3006N	Tapping Screw - M3x6	
103	0451 3006N	Tapping Screw - 3x6	
104	0452 3006N	Binding Self-tapping Screw:3x6	

6.Original Transfer 2 (D630)

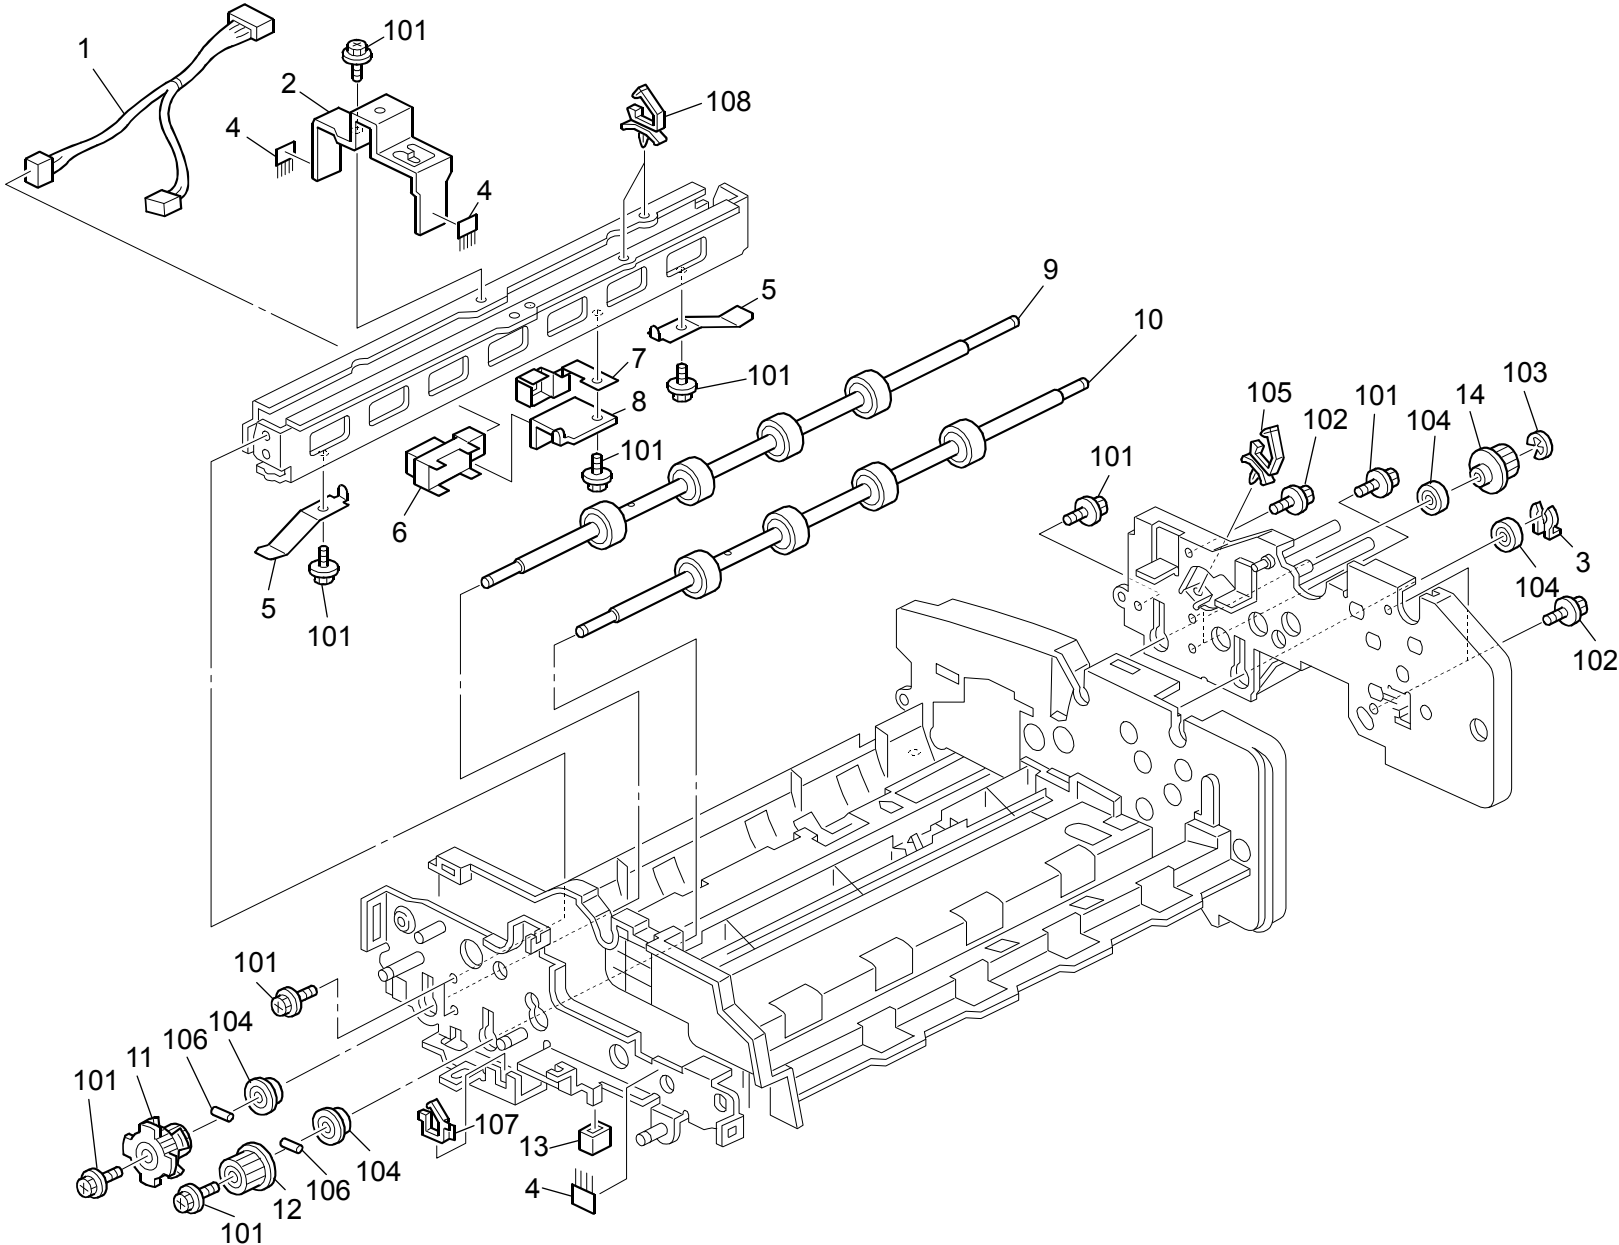


6.Original Transfer 2 (D630)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B802 5810	Harness:Registration Sensor	1
2	B802 3382	Bracket:Guide:Paper Feed:Lower	1
3	5447 2681	Snap Ring	1
4	G052 4892	Discharge Brush:Exit:Small	3
5	B802 3145	Spring Plate	2
6	GW01 0007	Photo Refiection Sensor:Exit	1
7	B802 3833	Shielding Plate:Sensor	1
8	B802 3834	Bracket:Registration Sensor	1
9	B802 3231	Roller:Scanning:Entrance	1
10	B802 3251	Roller:Scanning:Exit	1
11	B802 3235	Timing Pulley:T33-T24	1
12	B802 3252	Timing Pulley:T33	1
13	A697 2102	Damper - Junction Gate Solenoid	1
14	B802 3233	Timing Pulley:T33	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0450 3008N	Tapping Screw - M3x8	
103	0720 0040E	Retaining Ring - M4	
104	0741 3506	Ball Bearing - 6x12x4 MM	
105	1105 0511	Harness Clamp - LWS-0306ZC	
106	0632 0100G	Pin - 2x10mm	
107	1105 0514	Edge Saddle - EDS-0607I	

7.Original Transfer 3 (D630)

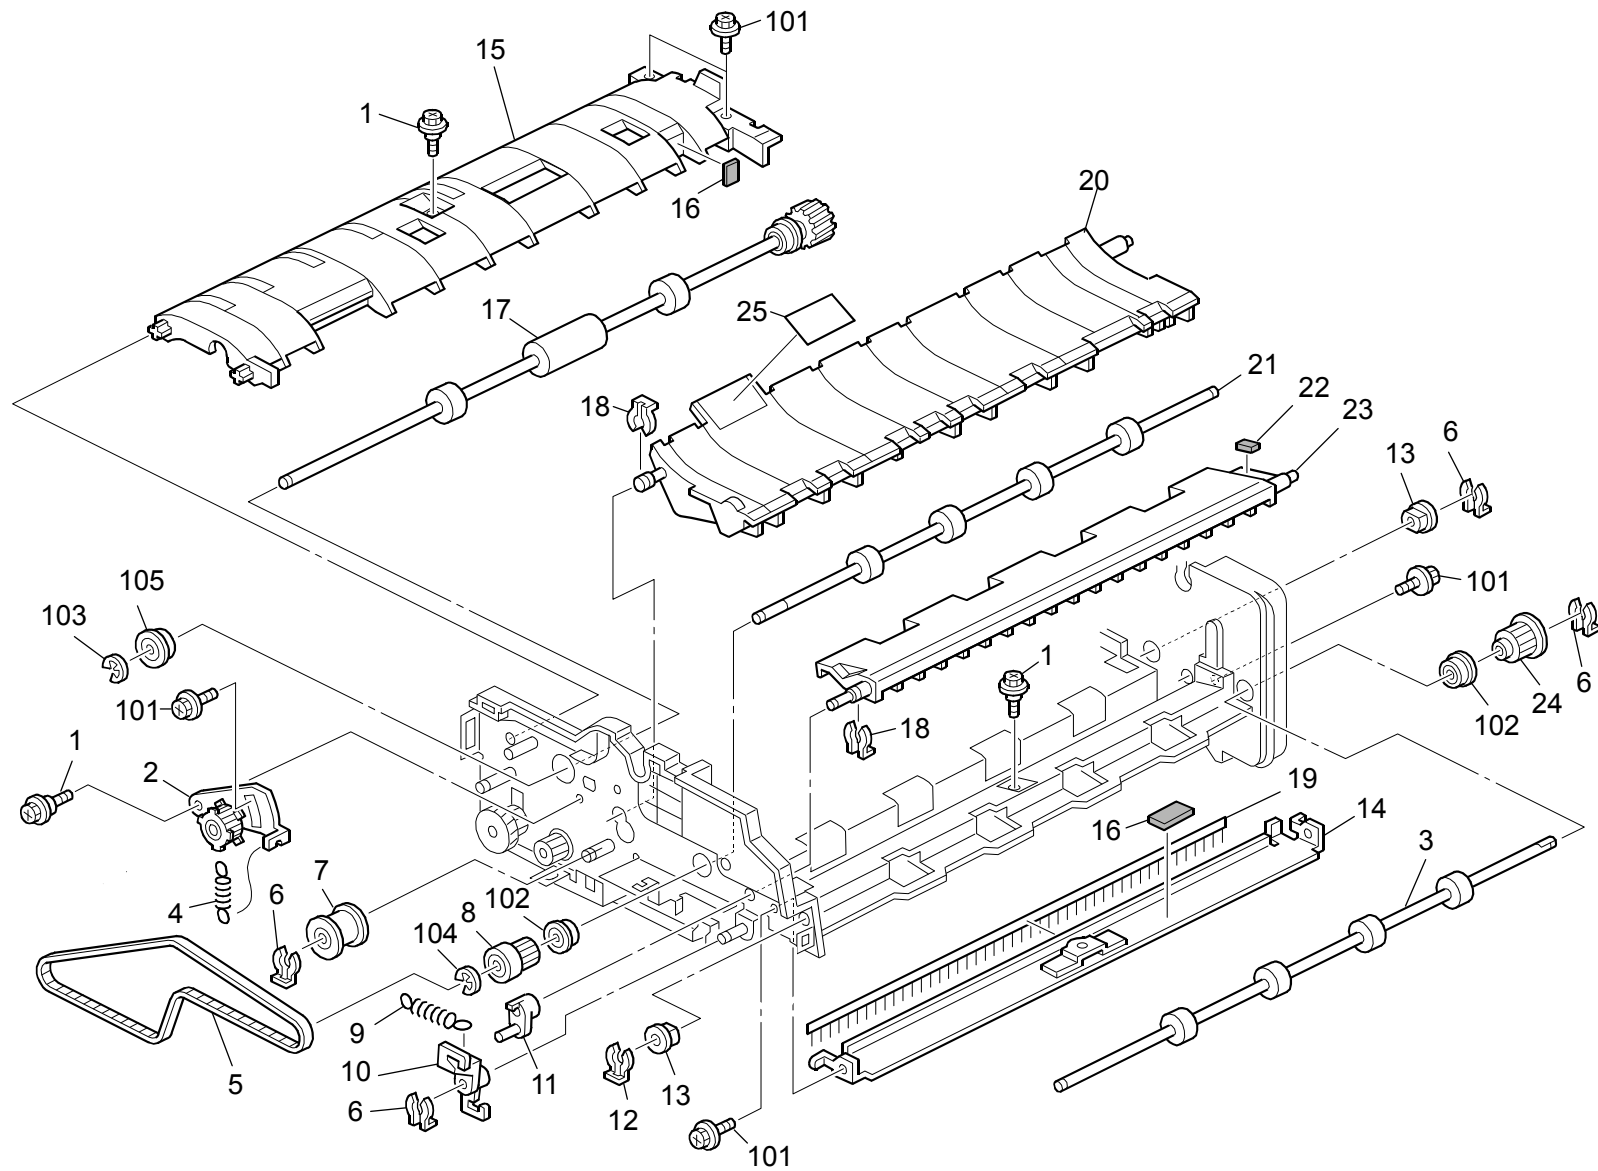


7.Original Transfer 3 (D630)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA14 3790	Screw:Contact Point	3
2	B802 1752	Timing Pulley:T31:Idler:Ass'y	1
3	B802 3331	Roller:Reverse	1
4	AA06 0842	Tension Spring	1
5	AA04 3321	Timing Belt:40S1.5M378	1
6	5447 2681	Snap Ring	4
7	B802 1768	Pulley:Idler:DIA16:ASS'Y	1
8	B802 3312	Timing Pulley:T26	1
9	AA06 2260	Tension Spring	1
10	B802 3631	Link:Solenoid	1
11	B802 3615	Lever:Exchange Powl:Reverse	1
12	G020 1160	Snap Ring	1
13	AA08 2101	Bushing - 6x10x6	2
14	B802 3751	Stay:Reverse	1
15	B802 3351	Guide:Paper Feed:Lower	1
16	A422 1063	Seal - 0.7x13x20	2
17	B802 3211	Roller:Pull Out	1
18	5215 2621	Snap Ring - M6	2
19	B802 3756	Discharge Brush:Exit	1
20	B802 3653	Guide:Exit:Upper	1
21	B802 3311	Roller:Exit	1
22	B802 3612	Cushion:Exchange Powl	1
23	B802 3611	Exchange Powl:Reverse	1
24	B802 3332	Timing Pulley:T23	1
25	D630 6015	Decal:Display:Misfeed Removal:P3	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0741 3506	Ball Bearing - 6x12x4mm	
103	0720 0060E	Retaining Ring - M6	
104	0720 0030E	Retaining Ring - M3	
105	0742 3808	Ball Bearing - 8x16x5	

8. Drive Section 1 (D630)

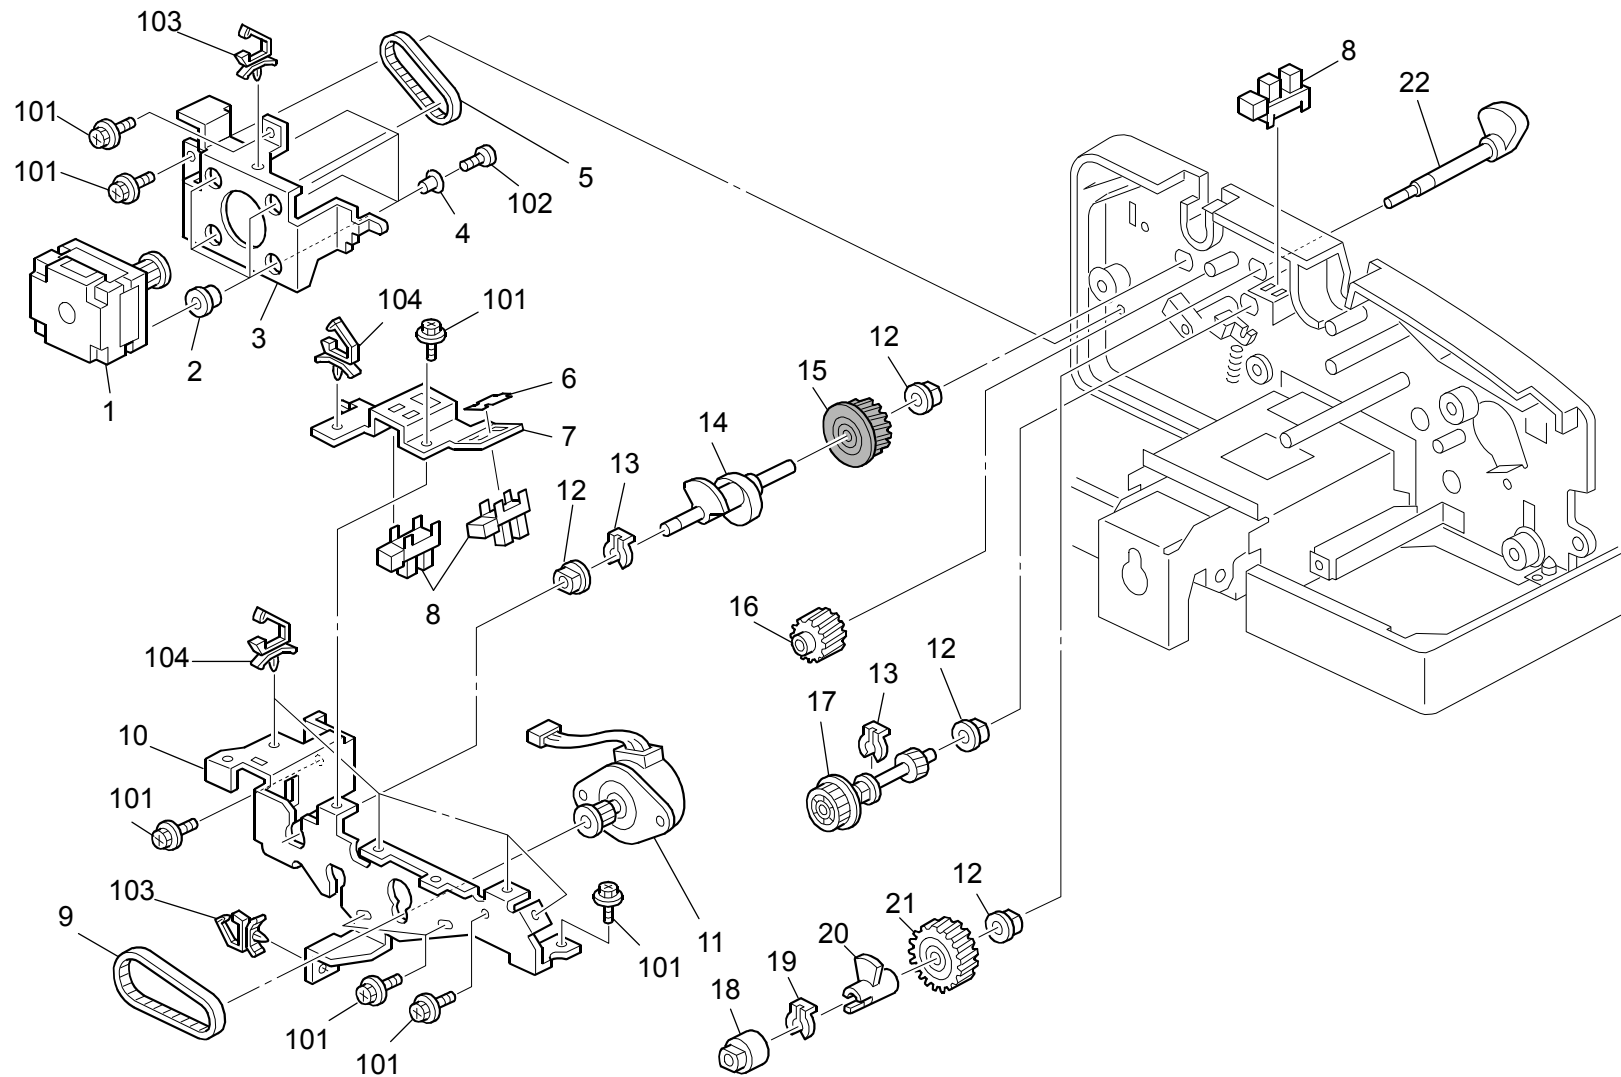


8. Drive Section 1 (D630)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B802 1812	Stepper Motor:DC4.08V 2.4W	1
2	AA10 1021	Rubber Bushing - 6 45HS	4
3	B802 1815	Bracket:Reverse:Drive	1
4	B044 1825	Collar	4
5	J503 3116	Timing Belt:40S2M128	1
6	G570 1225	Sensor Shielding Plate	1
7	B802 1985	Bracket:Sensor:Pickup	1
8	AW02 0198	Photointerruptor:LG2A14NI1	3
9	AA04 3323	Timing Belt:40S2M120	1
10	B802 1925	Bracket:Pickup:Drive	1
11	B700 5805	Stepper Motor:PM:S2M:T15:Ass'y	1
12	AA08 2101	Bushing - 6x10x6	4
13	5447 2681	Snap Ring	2
14	B802 1951	Cam:Stopper Pawl	1
15	B802 1956	Gear:Stopper:Original Insert:Z25	1
16	B351 1781	Gear - 18Z	1
17	B802 1931	Timing Pulley:T33-Z17	1
18	B802 1942	Stopper:Cam:Pickup	1
19	5206 2686	Snap Ring	1
20	B802 1943	Feeler:Cam:Pickup	1
21	B802 1946	Gear:Drive:Arm:Pickup	1
22	B802 1941	Cam:Pickup	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0353 0060N	Bind Screw - M3x6	
103	1105 0511	Harness Clamp - LWS-0306ZC	
104	1105 0516	Clamp	

9. Drive Section 2 (D630)

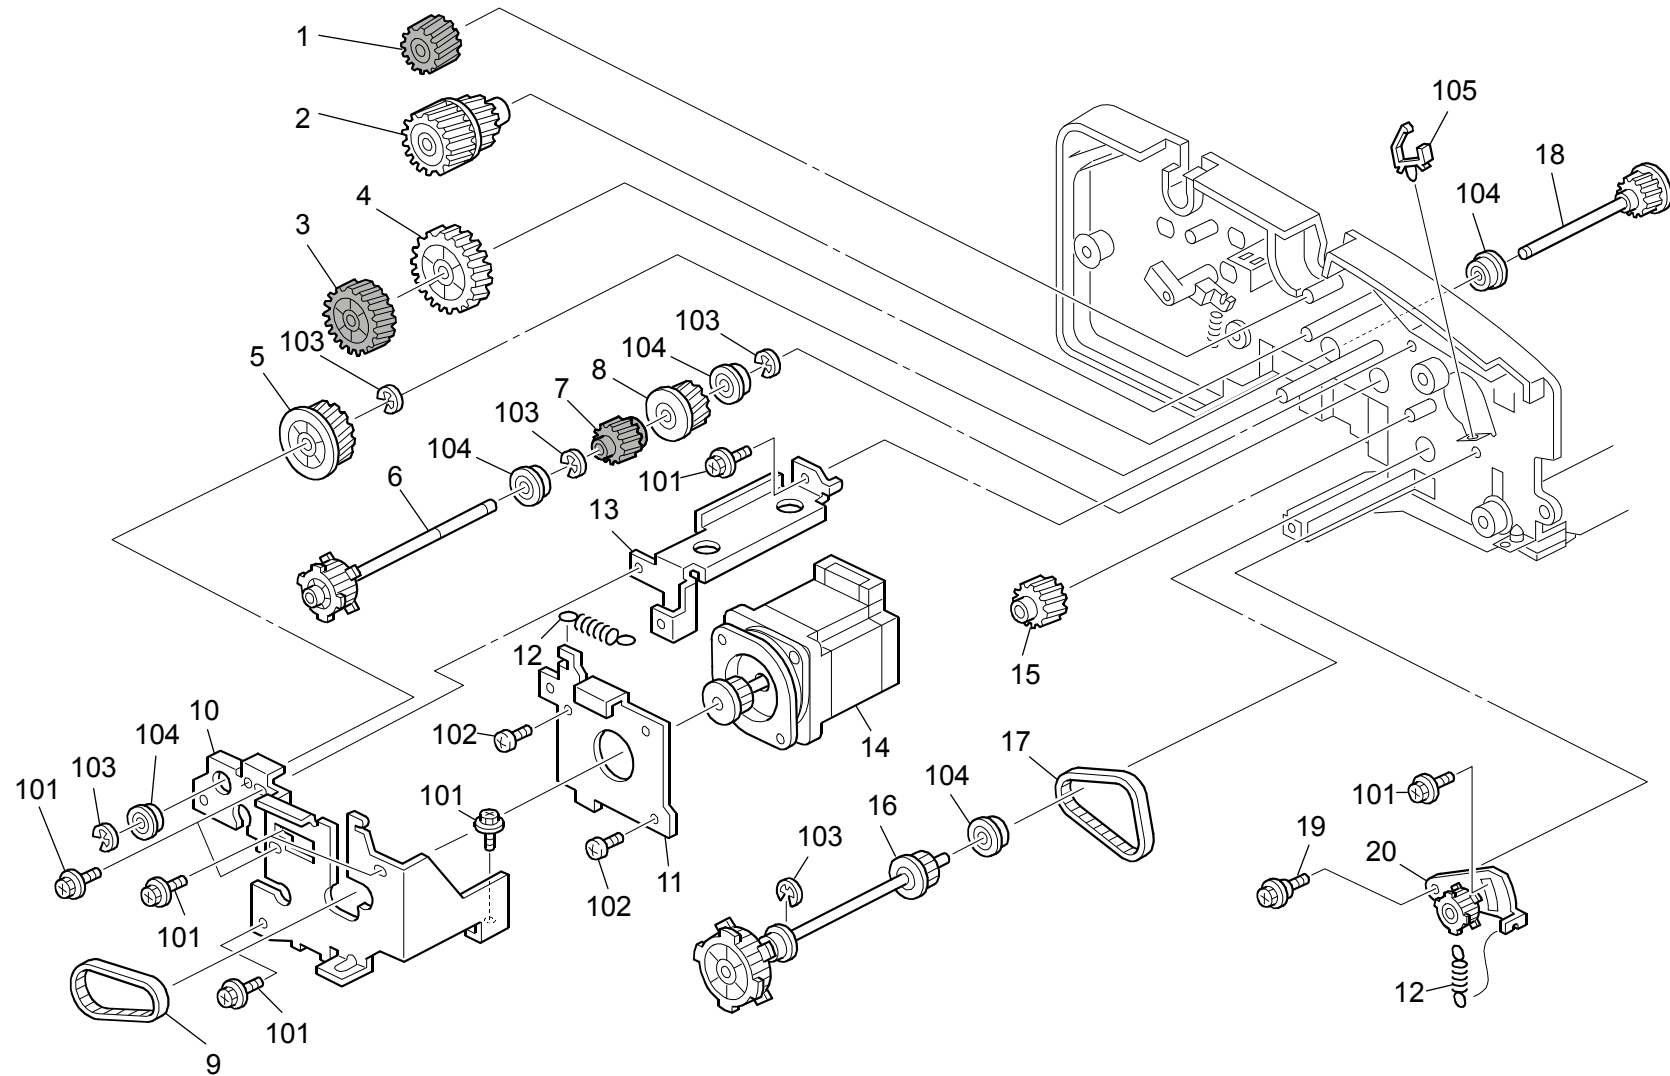


9. Drive Section 2 (D630)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B802 1671	Gear:Z17	1
2	B802 1661	Gear:Z21/Z23	1
3	B802 1642	Gear:Z37	1
4	B802 1643	Gear:Z26	1
5	B802 1651	Gear:Z25	1
6	B802 1631	Timing Pulley:T31	1
7	B802 1632	Gear:Z18	1
8	B802 1633	Gear:Z19	1
9	AA04 3320	Timing Belt:40S1.5M150	1
10	B802 1715	Bracket:Stepper Motor	1
11	B802 1731	Stay:Motor:Scanning	1
12	AA06 0842	Tension Spring	2
13	B802 1736	Bracket:Protect:Drive	1
14	D540 1721	Stepper Motor:Scanning:DC 72W	1
15	B802 1681	Gear:Z18	1
16	B802 1741	Timing Pulley:T31/T61	1
17	AA04 3322	Timing Belt:40S1.5M157.5	1
18	B802 1641	Gear:Z18	1
19	AA14 3790	Screw:Contact Point	1
20	B802 1752	Timing Pulley:T31:Idler:Ass'y	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0453 4006N	Binding Self Tapping Screw:4x6	
103	0720 0040E	Retaining Ring - M4	
104	0741 3506	Ball Bearing - 6x12x4mm	
105	1105 0511	Harness Clamp - LWS-0306ZC	

10.Electrical Sectio (D630)

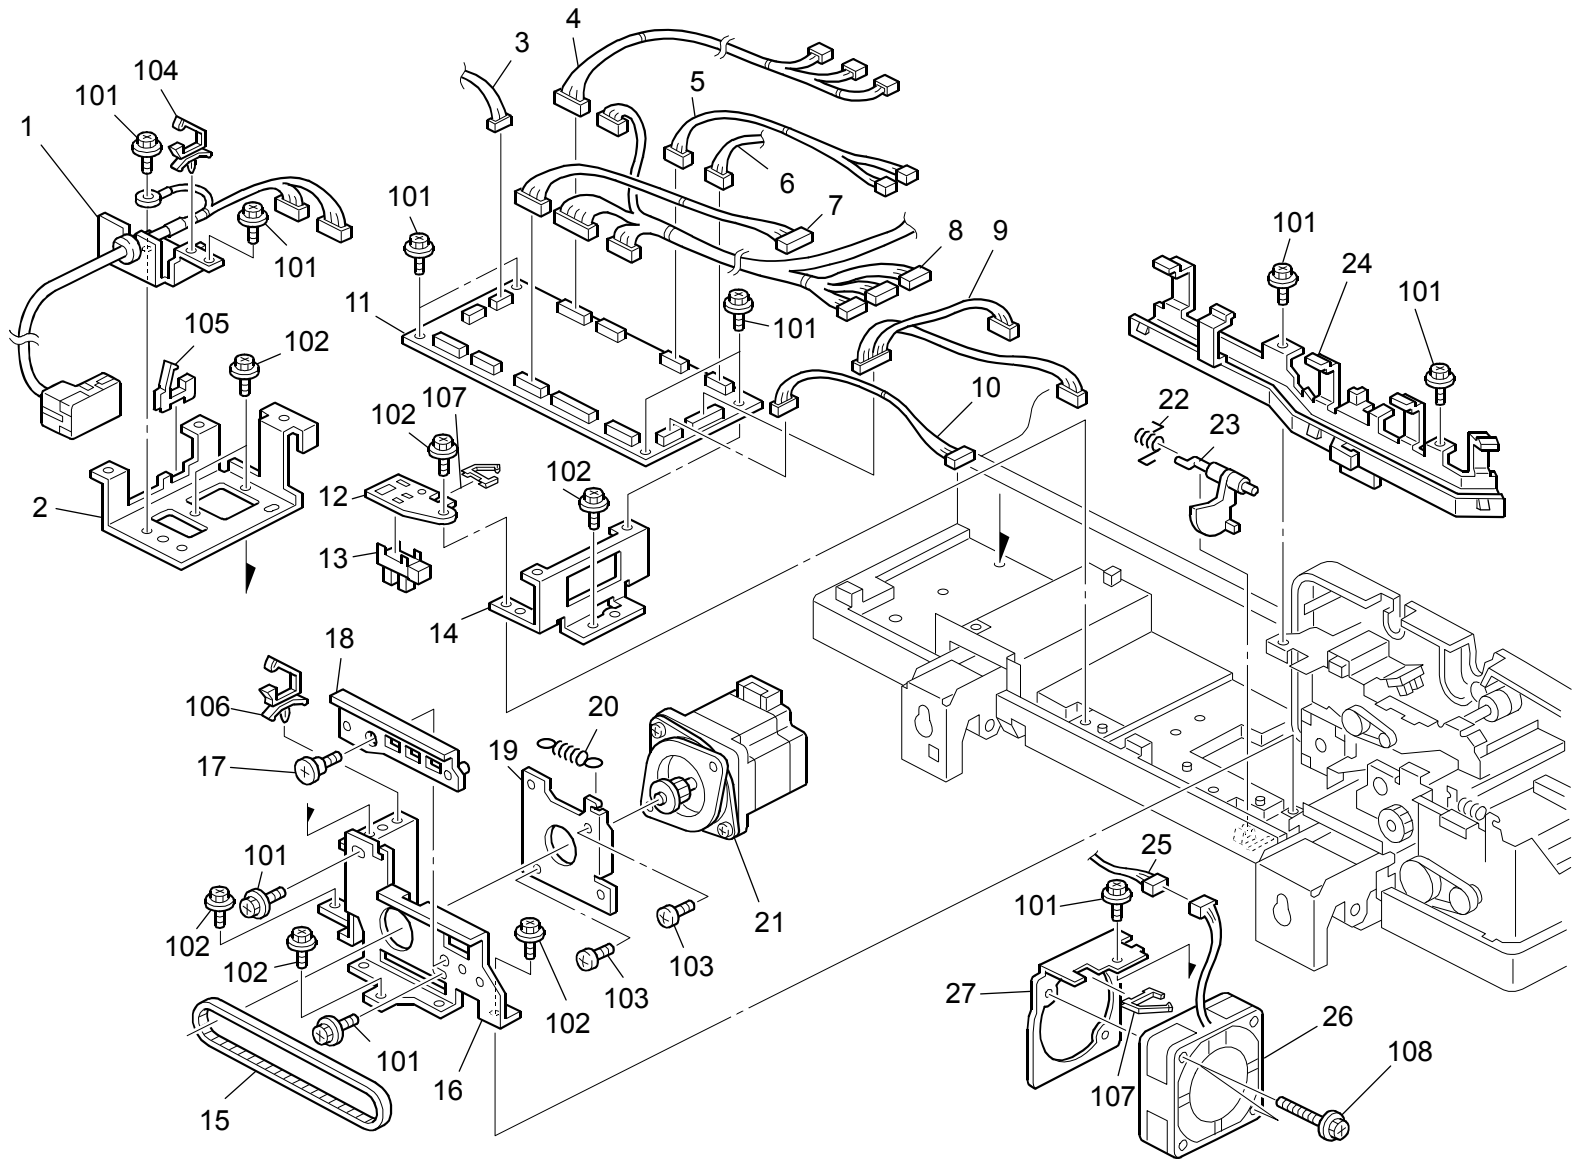


10.Electrical Sectio (D630)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B802 5710	Harness:Interface	1
2	B802 1231	Bracket:PCB:Right	1
3	B802 5780	Harness:Lift_Up	1
4	B802 5730	Harness:Paper Feed	1
5	B802 5800	Harness:Solenoid	1
6	B802 5770	Harness:Motor:Reverse	1
7	B802 5880	Harness:Sensor:Original Table	1
8	D630 5870	Harness:Sensor:Paper Feed	1
9	D540 5763	Harness:Motor:Scanning:Jst	1
10	B802 5820	Harness:Motor:Pick Up	1
11	D630 5500	PCB:Main Control Board: Document Feeder:Ass'y	1
12	B802 1246	Bracket:On Off Detector	1
13	AW02 0198	Photointerruptor:LG2A14NI1	1
14	B802 1236	Bracket:PCB:Left	1
15	B703 1165	Timing Belt:B40S2M390	1
16	B802 1612	Bracket:Motor	1
17	AA14 3802	Screw:6x1.7	1
18	B802 1624	Bracket:Coupling	1
19	B802 1616	Stay:Motor	1
20	AA06 0842	Tension Spring	1
21	B802 1621	Stepper Motor:DC24V 4.8W	1
22	B387 1951	Spring - Paper Size Sensor	1
23	D630 1252	Feeler:Paper Size Sensor:Pressure Plate	1
24	B802 1412	Plate:Harness:Guide	1
25	D540 5851	Harness:Connecting:DC Fan Motor	1
26	AX64 0202	Fan:MM40x15:NIDEC:H	1
27	D540 1629	Bracket:Fan:Fix:0.8mm	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0450 3008N	Tapping Screw - M3x8	
103	0453 4006N	Binding Self Tapping Screw:4x6	
104	1105 0511	Harness Clamp - LWS-0306ZC	
105	1105 0522	Edge Saddle - LES0510	
106	1105 0487	Harness Clamp	
107	1105 0514	Edge Saddle - EDS-0607I	
108	0451 3020N	Tapping Screw:3x20	

11.Frame Section (D630)

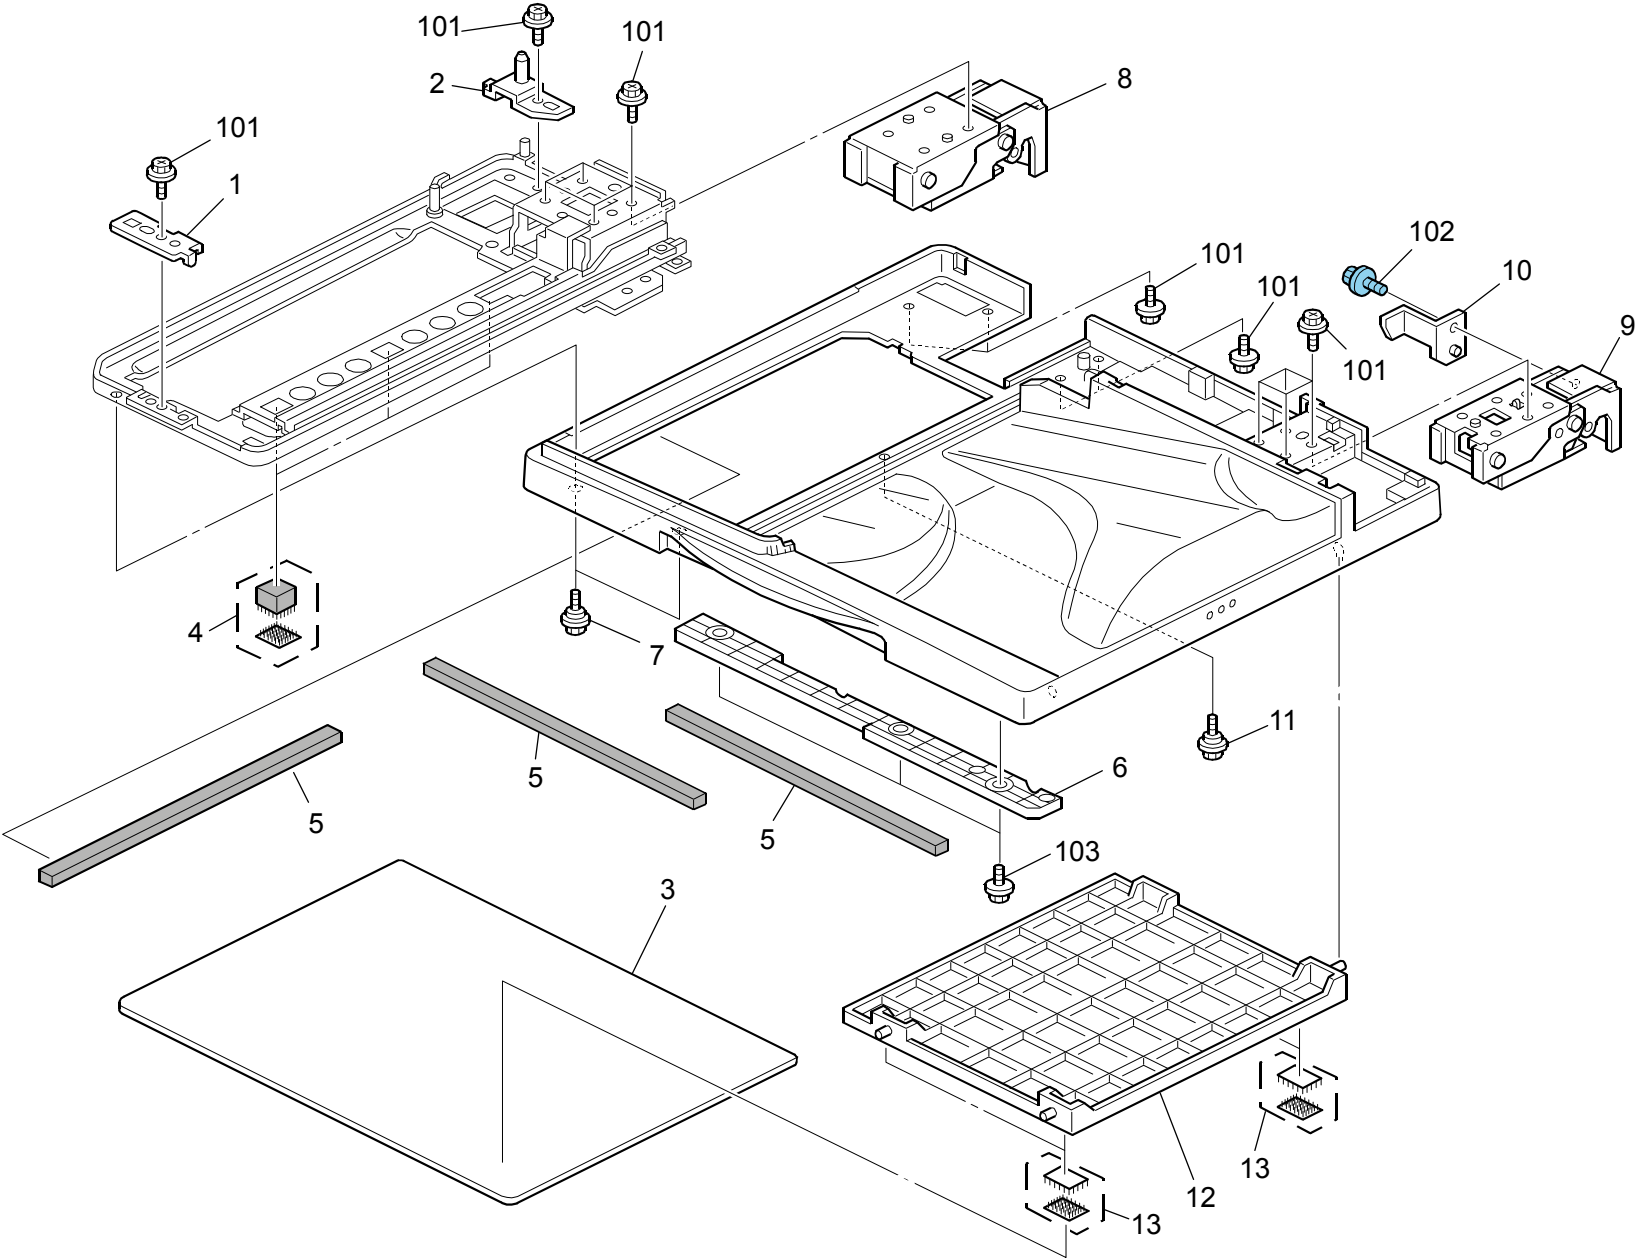


11.Frame Section (D630)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B802 1121	Positioning Plate:Front	1
2	B802 1131	Positioning Plate:Rear	1
3	B802 4611	Pressure Plate	1
4	B802 4632	Cushion:Pressure Plate:Left	3
5	B802 4712	Sound Proofing Material:Cover:Rear	3
6	D630 1261	Grip:Lower	1
7	AA14 3790	Screw:Contact Point	2
8	B802 1321	Hinge:Left:Ass'y	1
9	B802 1361	Damper:Hinge:Right:Ass'y	1
10	A859 1841	Filter - DF Open Sensor	1
11	AA14 3520	Shoulder Screw - M3	1
12	D630 4621	Drum Stay:Pressure Plate	1
13	B477 2715	Pressure Plate Tape	4

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0450 3008N	Tapping Screw - M3x8	

12.Decals and Documents (D630)

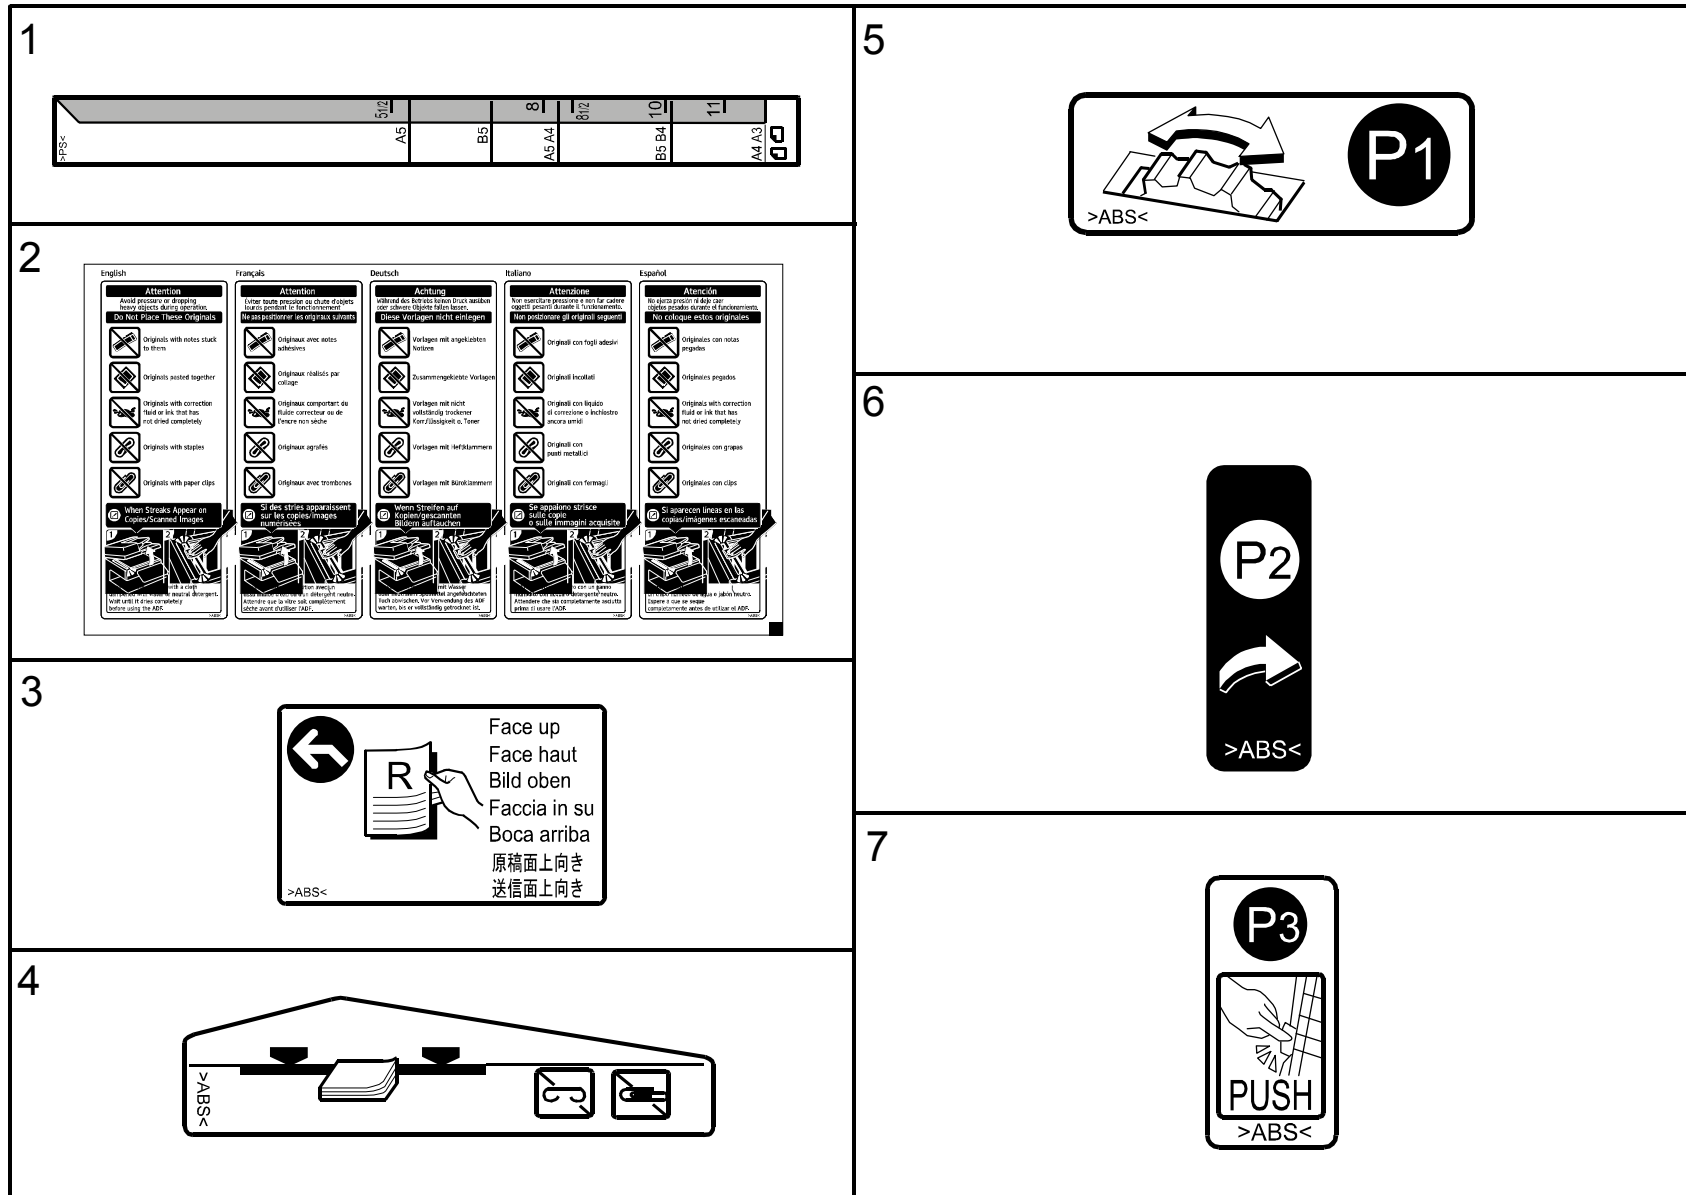

12.Decals and Documents (D630)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D578 6021	Decal:Size:Original	1
2	D630 6022	Decal:Caution:Original:Many Languages	1
3	D578 6031	Decal:Original Table	1
4	D630 6011	Decal:Side Fence	1
5	D630 6013	Decal:Display:Misfeed Removal:P1	1
6	D630 6014	Decal:Display:Misfeed Removal:P2	1
7	D630 6015	Decal:Display:Misfeed Removal:P3	1
			

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

PM Parts Index

Section Name	Part No.	Description in Service Manual	Description in Parts Catalog	Q'ty Per Assembly	Page and Index No.
Original Feed 2 (D630)	A806 1295	Feed Belt	Feed Belt	1	7 - 23
	B802 4361	Roller:Pickup	Roller:Pickup	1	7 - 6
Original Feed 3 (D630)	A859 2241	Reverse Roller	Reverse Roller	1	9 - 11

Parts Index

Part No.	Description	Page and Index No.
D630 1252	Feeler:Paper Size Sensor:Pressure Plate	21 - 23
D630 1261	Grip:Lower	23 - 6
D630 1777	Knob:Misfeed Removal:T27	9 - 2
D630 2512	Original Table	3 - 25
D630 2522	Original Table:Face Front	3 - 13
D630 2526	Side Fence	3 - 11
D630 2541	Guide:Original Insert	3 - 21
D630 3413	Sheet:Scanning:Entrance	11 - 3
D630 4121	Cover:Paper Feed	5 - 1
D630 4141	Cover:Upper:Paper Feed	5 - 24
D630 4142	Cover:Left:Paper Feed	5 - 25
D630 4152	Grip:Cover:Paper Feed	5 - 2
D630 4221	Bracket:Cover:Paper Feed:Middle	5 - 26
D630 4231	Bracket:Cover:Paper Feed:Inner Back:Ass'y	5 - 11
D630 4241	Bracket:Cover:Paper Feed:Front:Ass'y	5 - 10
D630 4411	Cover:Front	3 - 4
D630 4511	Cover:Rear	3 - 8
D630 4621	Drum Stay:Pressure Plate	23 - 12
D630 5500	PCB:Main Control Board:	
	Document Feeder:Ass'y	21 - 11
D630 5870	Harness:Sensor:Paper Feed	5 - 16
D630 5870	Harness:Sensor:Paper Feed	21 - 8
D630 6011	Decal:Side Fence	3 - 16
D630 6011	Decal:Side Fence	25 - 4
D630 6013	Decal:Display:Misfeed Removal:P1	5 - 3
D630 6013	Decal:Display:Misfeed Removal:P1	3 - 5
D630 6013	Decal:Display:Misfeed Removal:P1	25 - 5
D630 6014	Decal:Display:Misfeed Removal:P2	9 - 17
D630 6014	Decal:Display:Misfeed Removal:P2	25 - 6
D630 6015	Decal:Display:Misfeed Removal:P3	15 - 25
D630 6015	Decal:Display:Misfeed Removal:P3	25 - 7
D630 6022	Decal:Caution:Original:Many Languages	25 - 2

Part No.	Description	Page and Index No.
A422 1063	Seal - 0.7x13x20	11 - 16
A422 1063	Seal - 0.7x13x20	15 - 16
A458 2251	Cushion - Bin Solenoid Lever	9 - 22
A628 1225	Bushing - 8mm	7 - 21
A697 2102	Damper - Junction Gate Solenoid	13 - 13
A806 1295	Feed Belt	7 - 23
A858 4671	Roller Driven	3 - 19
A858 4676	Spring Plate - Pressure Roller	3 - 18
A859 1841	Filter - DF Open Sensor	23 - 10
A859 2112	Drive Shaft - Paper Feed Belt	7 - 13
A859 2241	Reverse Roller	9 - 11
A859 7211	Stepped Screw	3 - 2
B044 1825	Collar	17 - 4
B351 1781	Gear - 18Z	17 - 16
B386 3320	Spring:Belt:Paper Feed:8N	7 - 15
B387 1951	Spring - Paper Size Sensor	21 - 22
B387 2113	Roller - Paper Feed Belt	7 - 14
B387 2163	Pickup Collar	7 - 7
B477 2715	Pressure Plate Tape	23 - 13
B652 3174	Tension Spring	7 - 25
B700 5805	Stepper Motor:PM:S2M:T15:Ass'y	17 - 11
B703 1165	Timing Belt:B40S2M390	21 - 15
B714 5006	DC Solenoid:Transmitted Rubber Stamp	11 - 24
B789 2114	Paper Feed Belt Roller	7 - 22
B789 3491	Scanning Driven Shaft	11 - 23
B789 3712	Exit Driven Roller	11 - 22
B802 1121	Positioning Plate:Front	23 - 1
B802 1131	Positioning Plate:Rear	23 - 2
B802 1231	Bracket:PCB:Right	21 - 2
B802 1236	Bracket:PCB:Left	21 - 14
B802 1246	Bracket:On Off Detector	21 - 12
B802 1321	Hinge:Left:Ass'y	23 - 8
B802 1361	Damper:Hinge:Right:Ass'y	23 - 9
B802 1412	Plate:Harness:Guide	21 - 24
B802 1612	Bracket:Motor	21 - 16

Part No.	Description	Page and Index No.
B802 1616	Stay:Motor	21 - 19
B802 1621	Stepper Motor:DC24V 4.8W	21 - 21
B802 1624	Bracket:Coupling	21 - 18
B802 1631	Timing Pulley:T31	19 - 6
B802 1632	Gear:Z18	19 - 7
B802 1633	Gear:Z19	19 - 8
B802 1641	Gear:Z18	19 - 18
B802 1642	Gear:Z37	19 - 3
B802 1643	Gear:Z26	19 - 4
B802 1651	Gear:Z25	19 - 5
B802 1661	Gear:Z21/Z23	19 - 2
B802 1671	Gear:Z17	19 - 1
B802 1681	Gear:Z18	19 - 15
B802 1715	Bracket:Stepper Motor	19 - 10
B802 1731	Stay:Motor:Scanning	19 - 11
B802 1736	Bracket:Protect:Drive	19 - 13
B802 1741	Timing Pulley:T31/T61	19 - 16
B802 1752	Timing Pulley:T31:Idler:Ass'y	15 - 2
B802 1752	Timing Pulley:T31:Idler:Ass'y	19 - 20
B802 1768	Pulley:Idler:DIA16:ASS'Y	15 - 7
B802 1774	Timing Belt:40S3M186	9 - 4
B802 1812	Stepper Motor:DC4.08V 2.4W	17 - 1
B802 1815	Bracket:Reverse:Drive	17 - 3
B802 1925	Bracket:Pickup:Drive	17 - 10
B802 1931	Timing Pulley:T33-Z17	17 - 17
B802 1941	Cam:Pickup	17 - 22
B802 1942	Stopper:Cam:Pickup	17 - 18
B802 1943	Feeler:Cam:Pickup	17 - 20
B802 1946	Gear:Drive:Arm:Pickup	17 - 21
B802 1951	Cam:Stopper Pawl	17 - 14
B802 1956	Gear:Stopper:Original Insert:Z25	17 - 15
B802 1985	Bracket:Sensor:Pickup	17 - 7
B802 2111	Stopper Pawl:Paper Feed	9 - 23
B802 2115	Lever:Stopper Pawl	9 - 1
B802 2223	Sheet:Guard	9 - 25

Part No.	Description	Page and Index No.
B802 2225	Drum Stay:Guide:Reverse	9 - 14
B802 2227	Guide:Reverse:Open And Close:Behind	9 - 21
B802 2228	Guide:Reverse:Open And Close	
	S-BOM ADD	9 - 16
B802 2229	Guide:Reverse:Open And Close:Sub-Ass'y	9 - 26
B802 2231	Shaft:Reverse:Drive:Press Fit	9 - 20
B802 2252	Shaft:Roller:Reverse	9 - 13
B802 2253	Gear:Z20	9 - 15
B802 2255	Torque Limiter Mechanical Clutch:Separator	9 - 12
B802 2285	Roller:Reverse Exit:Driven	9 - 19
B802 2291	Stopper:Guide:Reverse	11 - 17
B802 2532	Spring Plate:Side Fence	3 - 15
B802 2536	Slider:Side Fence	3 - 14
B802 2551	Stay:Original Table:Contact Point	3 - 9
B802 2562	Plate:Contact Point	3 - 24
B802 2571	Spring Plate:0.2T	3 - 17
B802 2581	Stopper:Original Table	3 - 10
B802 3145	Spring Plate	13 - 5
B802 3148	Guide Plate:Guide Plate:Scanning	7 - 43
B802 3149	Spring Plate:Guide Plate:Scanning:Inner Back	7 - 42
B802 3211	Roller:Pull Out	15 - 17
B802 3231	Roller:Scanning:Entrance	13 - 9
B802 3233	Timing Pulley:T33	13 - 14
B802 3235	Timing Pulley:T33-T24	13 - 11
B802 3251	Roller:Scanning:Exit	13 - 10
B802 3252	Timing Pulley:T33	13 - 12
B802 3311	Roller:Exit	15 - 21
B802 3312	Timing Pulley:T26	15 - 8
B802 3331	Roller:Reverse	15 - 3
B802 3332	Timing Pulley:T23	15 - 24
B802 3351	Guide:Paper Feed:Lower	15 - 15
B802 3382	Bracket:Guide:Paper Feed:Lower	13 - 2
B802 3413	Sheet:Roller:Scanning:Entrance	11 - 2
B802 3415	Guide:Scanning:Entrance:Lower	11 - 1
B802 3417	Sheet:Auxiliary:Scanning:Entrance	11 - 26

Part No.	Description	Page and Index No.
B802 3422	Stay:Scanning:Entrance:Lower	11 - 8
B802 3431	Bracket:Entrance:Pressure:Ass'y	11 - 6
B802 3435	Compression Spring:3.3n	11 - 7
B802 3442	Sensor Bracket	11 - 27
B802 3471	Roller:Scanning:Driven	11 - 4
B802 3492	Shaft:Driven:Entrance	11 - 5
B802 3511	Guide Plate:Scanning	11 - 9
B802 3553	Guide:Scanning:Exit:Lower	11 - 11
B802 3561	Stay:Scanning:Exit:Lower	11 - 15
B802 3566	Plate:Exit:Pressure:Auxiliary	11 - 12
B802 3567	Spring Plate:Scanning:Exit:Driven:Upper	11 - 13
B802 3569	Spring Plate:Scanning:Exit:Driven:Lower	11 - 14
B802 3592	Shaft:Driven:Exit	11 - 25
B802 3611	Exchange Powl:Reverse	15 - 23
B802 3612	Cushion:Exchange Powl	15 - 22
B802 3615	Lever:Exchange Powl:Reverse	15 - 11
B802 3631	Link:Solenoid	15 - 10
B802 3653	Guide:Exit:Upper	15 - 20
B802 3711	Spring Plate	11 - 21
B802 3751	Stay:Reverse	15 - 14
B802 3755	Discharge Brush:Reverse	11 - 20
B802 3756	Discharge Brush:Exit	15 - 19
B802 3811	DC Solenoid:24V	9 - 7
B802 3833	Shielding Plate:Sensor	13 - 7
B802 3834	Bracket:Registration Sensor	13 - 8
B802 3851	Bracket:Sensor:Scanning:Exit	11 - 19
B802 4154	Hook:Grip:Cover:Front	5 - 6
B802 4155	Hook:Grip:Cover:Inner Back	5 - 7
B802 4158	Shaft:Grip:Cover	5 - 8
B802 4162	Stopper:Cover	5 - 12
B802 4222	Guide:Upper	7 - 33
B802 4224	Spring Plate:Upper	7 - 32
B802 4225	Sheet:Driven Roller:Pull Out	7 - 41
B802 4227	Drum Stay:Upper:Inner Back	7 - 30
B802 4228	Drum Stay:Upper:Front	7 - 29

Part No.	Description	Page and Index No.
B802 4229	Sheet:Guide:Upper	7 - 31
B802 4252	Bracket:Paper Size Sensor	5 - 15
B802 4263	Feeler:Original Sensor	5 - 22
B802 4265	Ground Plate	7 - 40
B802 4282	Bracket:Driven Roller:Pull Out	7 - 37
B802 4292	Ground Plate:Driven Roller:Pull Out	7 - 38
B802 4295	Driven Roller:Pull Out	7 - 35
B802 4311	Paper Feed:Unit	7 - 1
B802 4322	Shaft:Drive	7 - 24
B802 4323	Holder	7 - 26
B802 4325	Lever:Pickup:Release	7 - 27
B802 4326	Collar:Shaft	7 - 17
B802 4328	Gear:Z20	7 - 28
B802 4333	Bracket:Paper Feed Belt	7 - 16
B802 4352	Shaft:Pickup	7 - 10
B802 4355	Bracket:Pickup	7 - 11
B802 4357	Gear:Z19	7 - 4
B802 4358	Timing Pulley:Gear:T19/Z22	7 - 5
B802 4359	Cushion:Pickup	7 - 12
B802 4361	Roller:Pickup	7 - 6
B802 4372	Timing Pulley:T21	7 - 8
B802 4611	Pressure Plate	23 - 3
B802 4632	Cushion:Pressure Plate:Left	23 - 4
B802 4712	Sound Proofing Material:Cover:Rear	3 - 7
B802 4712	Sound Proofing Material:Cover:Rear	23 - 5
B802 4712	Sound Proofing Material:Cover:Rear	5 - 5
B802 5710	Harness:Interface	21 - 1
B802 5730	Harness:Paper Feed	21 - 4
B802 5770	Harness:Motor:Reverse	21 - 6
B802 5780	Harness:Lift_Up	21 - 3
B802 5790	Harness:Solenoid	9 - 6
B802 5800	Harness:Solenoid	21 - 5
B802 5810	Harness:Registration Sensor	13 - 1
B802 5820	Harness:Motor:Pick Up	21 - 10
B802 5880	Harness:Sensor:Original Table	3 - 22

Part No.	Description	Page and Index No.
B802 5880	Harness:Sensor:Original Table	21 - 7
D540 1629	Bracket:Fan:Fix:0.8mm	21 - 27
D540 1721	Stepper Motor:Scanning:DC 72W	19 - 14
D540 5763	Harness:Motor:Scanning:Jst	21 - 9
D540 5851	Harness:Connecting:DC Fan Motor	21 - 25
D540 6121	Full Dug Point Screw:Fix:Hinge	3 - 3
D578 6021	Decal:Size:Original	5 - 4
D578 6021	Decal:Size:Original	25 - 1
D578 6031	Decal:Original Table	25 - 3
D578 6031	Decal - Original Table	3 - 12
G020 1160	Snap Ring	15 - 12
G052 4892	Discharge Brush:Exit:Small	7 - 39
G052 4892	Discharge Brush:Exit:Small	13 - 4
G570 1225	Sensor Shielding Plate	17 - 6
H511 5007	Stamp	3 - 26
J503 3116	Timing Belt:40S2M128	17 - 5

Part No.	Description	Page and Index No.
AA04 3320	Timing Belt:40S1.5M150	19 - 9
AA04 3321	Timing Belt:40S1.5M378	15 - 5
AA04 3322	Timing Belt:40S1.5M157.5	19 - 17
AA04 3323	Timing Belt:40S2M120	17 - 9
AA04 3328	Timing Belt:40S2M130	7 - 9
AA06 0842	Tension Spring	21 - 20
AA06 0842	Tension Spring	19 - 12
AA06 0842	Tension Spring	15 - 4
AA06 0843	Tension Spring	9 - 3
AA06 2260	Tension Spring	15 - 9
AA06 2262	Tension Spring	5 - 9
AA06 3435	Compression Spring:Paper Feed:Joint	7 - 20
AA06 3441	Compression Spring	7 - 36
AA06 3919	Spring:Pressure	9 - 9
AA06 6376	Torsion Spring:Pickup:Pressure	7 - 44
AA08 0265	Bushing:6x8x5	9 - 18
AA08 0288	Bushing:DIA6	7 - 34
AA08 2101	Bushing - 6x10x6	7 - 3
AA08 2101	Bushing - 6x10x6	15 - 13
AA08 2101	Bushing - 6x10x6	17 - 12
AA08 2101	Bushing - 6x10x6	9 - 10
AA08 2104	Bushing - 8x12x7	7 - 18
AA10 1021	Rubber Bushing - 6 45HS	17 - 2
AA13 2013	Spacer	7 - 19
AA14 3520	Shoulder Screw - M3	23 - 11
AA14 3542	Screw:M3:DIA4X5.6	3 - 27
AA14 3569	Screw	11 - 10
AA14 3788	Pin:Guide Plate:Paper Feed	5 - 14
AA14 3789	Shaft:Cleaner	5 - 13
AA14 3790	Screw:Contact Point	9 - 24
AA14 3790	Screw:Contact Point	23 - 7
AA14 3790	Screw:Contact Point	15 - 1
AA14 3790	Screw:Contact Point	19 - 19
AA14 3802	Screw:6x1.7	21 - 17
AA14 3823	Tapping Screw	9 - 5

Part No.	Description	Page and Index No.
AG07 0513	Magnet Catch	3 - 1
AW01 0091	Photo Reflection Sensor	5 - 20
AW01 0129	Photo Refiection Sensor	3 - 23
AW02 0154	Photointerruptor:Entrance	5 - 17
AW02 0155	Photointerruptor:Paper Size Sensor	5 - 18
AW02 0198	Photointerruptor:LG2A14NI1	5 - 21
AW02 0198	Photointerruptor:LG2A14NI1	21 - 13
AW02 0198	Photointerruptor:LG2A14NI1	17 - 8
AX64 0202	Fan:MM40x15:NIDEC:H	21 - 26
GA14 3003	Screw:MM5:2.5mm	5 - 23
GW01 0007	Photo Refiection Sensor:Exit	5 - 19
GW01 0007	Photo Refiection Sensor:Exit	13 - 6
GW01 0007	Photo Refiection Sensor:Exit	3 - 20
GW01 0007	Photo Refiection Sensor:Exit	11 - 18

Part No.	Description	Page and Index No.
0353 0040N	Screw - M3x4	9 - 102
0353 0060N	Bind Screw - M3x6	17 - 102
0450 3008N	Tapping Screw - M3x8	7 - 101
0450 3008N	Tapping Screw - M3x8	9 - 103
0450 3008N	Tapping Screw - M3x8	13 - 102
0450 3008N	Tapping Screw - M3x8	23 - 103
0450 3008N	Tapping Screw - M3x8	11 - 101
0450 3008N	Tapping Screw - M3x8	21 - 102
0450 3008N	Tapping Screw - M3x8	5 - 102
0450 3008N	Tapping Screw - M3x8	3 - 102
0451 3006N	Tapping Screw - 3x6	19 - 101
0451 3006N	Tapping Screw - 3x6	21 - 101
0451 3006N	Tapping Screw - 3x6	17 - 101
0451 3006N	Tapping Screw - 3x6	15 - 101
0451 3006N	Tapping Screw - 3x6	13 - 101
0451 3006N	Tapping Screw - 3x6	11 - 103
0451 3006N	Tapping Screw - 3x6	23 - 101
0451 3006N	Tapping Screw - 3x6	3 - 101
0451 3006N	Tapping Screw - 3x6	5 - 103
0451 3006N	Tapping Screw - 3x6	7 - 102
0451 3010N	Tapping Screw:3x10	5 - 101
0451 3020N	Tapping Screw:3x20	21 - 108
0452 3006N	Binding Self-tapping Screw:3x6	11 - 104
0453 3006N	Tapping Screw - M3x6	11 - 102
0453 4006N	Binding Self Tapping Screw:4x6	21 - 103
0453 4006N	Binding Self Tapping Screw:4x6	19 - 102
0454 3006Q	Tapping Screw - M3x6	23 - 102
0632 0100G	Pin - 2x10mm	7 - 106
0632 0100G	Pin - 2x10mm	13 - 106
0632 0120G	Parallel Pin - 2x12	9 - 104
0720 0030E	Retaining Ring - M3	15 - 104
0720 0040E	Retaining Ring - M4	19 - 103
0720 0040E	Retaining Ring - M4	7 - 103
0720 0040E	Retaining Ring - M4	9 - 105
0720 0040E	Retaining Ring - M4	13 - 103

Part No.	Description	Page and Index No.
0720 0060E	Retaining Ring - M6	7 - 104
0720 0060E	Retaining Ring - M6	15 - 103
0741 3506	Ball Bearing - 6x12x4 MM	7 - 108
0741 3506	Ball Bearing - 6x12x4mm	15 - 102
0741 3506	Ball Bearing - 6x12x4mm	19 - 104
0741 3506	Ball Bearing - 6x12x4 MM	13 - 104
0742 3808	Ball Bearing - 8x16x5	15 - 105
0805 0088	Retaining Ring - M6	7 - 105
0805 0089	Retaining Ring - M4	9 - 101
1105 0487	Harness Clamp	21 - 106
1105 0511	Harness Clamp - LWS-0306ZC	21 - 104
1105 0511	Harness Clamp - LWS-0306ZC	13 - 105
1105 0511	Harness Clamp - LWS-0306ZC	19 - 105
1105 0511	Harness Clamp - LWS-0306ZC	17 - 103
1105 0514	Edge Saddle - EDS-0607I	13 - 107
1105 0514	Edge Saddle - EDS-0607I	21 - 107
1105 0516	Clamp	7 - 107
1105 0516	Clamp	17 - 104
1105 0516	Clamp	5 - 104
1105 0522	Edge Saddle - LES0510	21 - 105

Part No.	Description	Page and Index No.
5206 2686	Snap Ring	17 - 19
5215 2621	Snap Ring - M6	3 - 6
5215 2621	Snap Ring - M6	15 - 18
5447 2681	Snap Ring	7 - 2
5447 2681	Snap Ring	9 - 8
5447 2681	Snap Ring	13 - 3
5447 2681	Snap Ring	15 - 6
5447 2681	Snap Ring	17 - 13