

Perfect Binder GB5000 (D391)

3rd edition, March 2011

Perfect Binder GB5000 (D391)

PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.


1.Exterior 1 (D391)	2	26.Signature Transport Section 5 (D391).....	52
2.Exterior 2 (D391)	4	27.Signature Delivery Section 1 (D391)	54
3.Exterior 3 (D391)	6	28.Signature Delivery Section 2 (D391)	56
4.Transit Pass Unit 1 (D391)	8	29.Signature Delivery Section 3 (D391)	58
5.Transit Pass Unit 2 (D391)	10	30.Signature Delivery Section 4 (D391)	60
6.Transit Pass Unit 3 (D391)	12	31.Signature Delivery Section 5 (D391)	62
7.Inserter Section 1 (D391)	14	32.Stacking Tray Section 1 (D391).....	64
8.Inserter Section 2 (D391)	16	33.Stacking Tray Section 2 (D391).....	66
9.Inserter Section 3 (D391)	18	34.Stacking Tray Section 3 (D391).....	68
10.Inserter Section 4 (D391)	20	35.Stacking Tray Section 4 (D391).....	70
11.Inserter Section 5 (D391)	22	36.Stacking Tray Section 5 (D391).....	72
12.Inserter Section 6 (D391)	24	37.Stacking Tray Section 6 (D391).....	74
13.Inserter Section 7 (D391)	26	38.Sub Gripper Section 1 (D391)	76
14.Inserter Section 8 (D391)	28	39.Sub Gripper Section 2 (D391)	78
15.Inserter Section 9 (D391)	30	40.Sub Gripper Section 3 (D391)	80
16.Inserter Section 10 (D391)	32	41.Sub Gripper Section 4 (D391)	82
17.Inserter Section 11 (D391)	34	42.Sub Gripper Section 5 (D391)	84
18.Inserter Section 12 (D391)	36	43.Main Gripper Section 1 (D391).....	86
19.Inserter Section 13 (D391)	38	44.Main Gripper Section 2 (D391).....	88
20.Vertical Feed Section 1 (D391)	40	45.Main Gripper Section 3 (D391).....	90
21.Vertical Feed Section 2 (D391)	42	46.Main Gripper Section 4 (D391).....	92
22.Signature Transport Section 1 (D391).....	44	47.Main Gripper Section 5 (D391).....	94
23.Signature Transport Section 2 (D391).....	46	48.Glue Supply Section 1 (D391).....	96
24.Signature Transport Section 3 (D391).....	48	49.Glue Supply Section 2 (D391).....	98
25.Signature Transport Section 4 (D391).....	50	50.Glue Supply Section 3 (D391).....	100

March 7, 2011

51.Glue Supply Section 4 (D391)	102
52.Gluing Section 1 (D391)	104
53.Gluing Section 2 (D391)	106
54.Gluing Section 3 (D391)	108
55.Cover Feed Regist Section 1 (D391).....	110
56.Cover Feed Regist Section 2 (D391).....	112
57.Cover Feed Path Section 1 (D391)	114
58.Cover Feed Path Section 2 (D391)	116
59.Cover Feed Path Section 3 (D391)	118
60.Cover Feed Path Section 4 (D391)	120
61.Cover Feed Path Section 5 (D391)	122
62.Cover Feed Path Section 6 (D391)	124
63.Cover Feed Path Section 7 (D391)	126
64.Cover Feed Path Section 8 (D391)	128
65.Cover Feed Path Section 9 (D391)	130
66.Cover Feed Path Section 10 (D391)	132
67.Cover Feed Path Section 11 (D391)	134
68.Rear Folder Section 1 (D391).....	136
69.Rear Folder Section 2 (D391).....	138
70.Rear Folder Section 3 (D391).....	140
71.Rear Folder Section 4 (D391).....	142
72.Bundle Feed Section 1 (D391)	144
73.Bundle Feed Section 2 (D391)	146
74.Bundle Feed Section 3 (D391)	148
75.Bundle Feed Section 4 (D391)	150

76.Stack Rotation Section 1 (D391).....	152
77.Stack Rotation Section 2 (D391).....	154
78.Stack Rotation Section 3 (D391).....	156
79.Stack Rotation Section 4 (D391).....	158
80.Stack Rotation Section 5 (D391).....	160
81.Stack Rotation Section 6 (D391).....	162
82.Trimming Section 1 (D391).....	164
83.Waste Paper Case Section 1 (D391).....	166
84.Waste Paper Case Section 2 (D391).....	168
85.Waste Paper Case Section 3 (D391).....	170
86.Waste Paper Case Section 4 (D391).....	172
87.Book Stacking Section 1 (D391).....	174
88.Book Stacking Section 2 (D391).....	176
89.Book Stacking Section 3 (D391).....	178
90.Book Stacking Section 4 (D391).....	180
91.Book Stacking Section 5 (D391).....	182
92.Electrical Section 1 (D391)	184
93.Electrical Section 2 (D391)	186
Parts Index.....	190

1.Exterior 1 (D391)

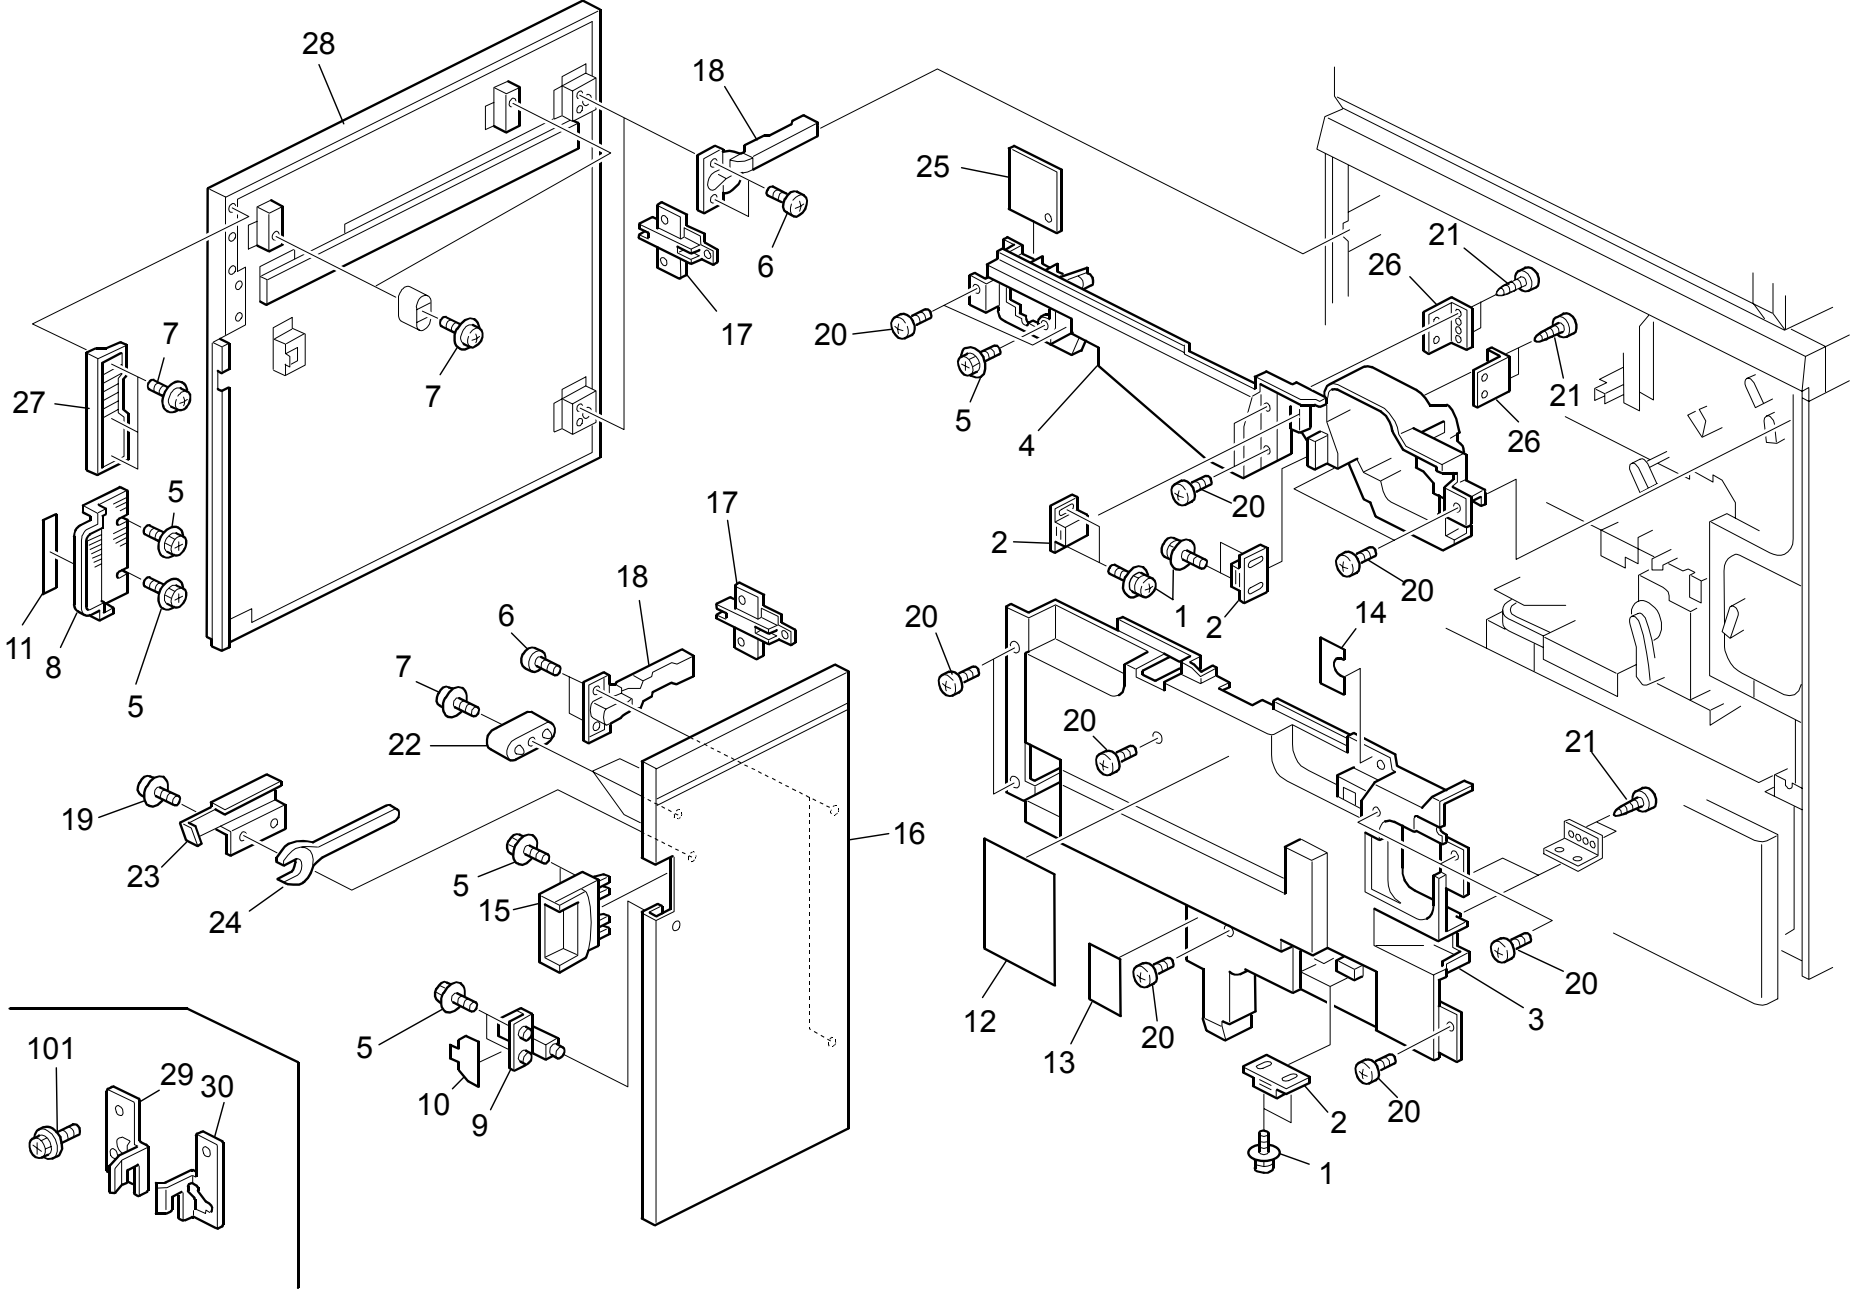


1.Exterior 1 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1114	Washer:M3x6:030060FWSW	6
2	D391 1266	Magnet Catch:20N:PF4130P412A	4
3	D391 2009	Inner Cover:Cutter:PF4140Q531E1	1
4	D391 2008	Inner Cover:Upper:PF4140Q530C1	1
5	D391 1129	Tapping Screw:M4x8:040080FWIT	7
6	D391 1113	Screw:M3x6:030060FNBI	4
7	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	6
8	D391 2007	Handle:Door:Left:PF4140Q529	1
9	D391 2017	LED:Lock:Door:PF4140Q542B2	1
10	D391 2021	Decal:LED:Lock:Door:PF4140Q554A	1
11	D391 6530	Decal:Set:Paper Jam	1
12	D391 6530	Decal:Set:Paper Jam	1
13	D391 6564	Decal:Caution:Paper Exit Sub-Unit	1
14	D391 6520	Decal:Set:Lever:2	1
15	D391 2001	Handle:Front:PF4140P917A	1
16	D391 2028	Door:Front Right:PF4155Q501	1
17	D391 1470	Base:Hinge:Door:Front:PF4140P91	4
18	D391 1471	Arm:Hinge:Door:Front:PF4140P920	4
19	D391 1244	Screw:M4x8:NS-SCR00050B	1
20	B660 4835	Screw:NS-SCR00045A	13
21	D391 1117	Binding Self-Tapping Screw:M3x8:030080FWBB	6
22	D391 2025	Bracket:Pick-up Paper Jam:Door:PF4140Q543	1
23	D391 2026	Holder:Wrench:PF4140P010	1
24	D391 2027	Wrench:19MM:PF4140P900	1
25	D391 2029	Inner Cover:Base:PF4140Q511	1
26	D391 2030	Plate:Magnetic:Door:PF4140Q510	2
27	D391 2022	Cover:Door:Left:PF4155Q555	1
28	D391 2023	Door:Front Left:PF4155Q500	1
29	B660 4148	Coupling Bracket - Rear	1
30	B660 4149	Coupling Bracket - Front	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0354 0140N	Screw M4x14	

2.Exterior 2 (D391)

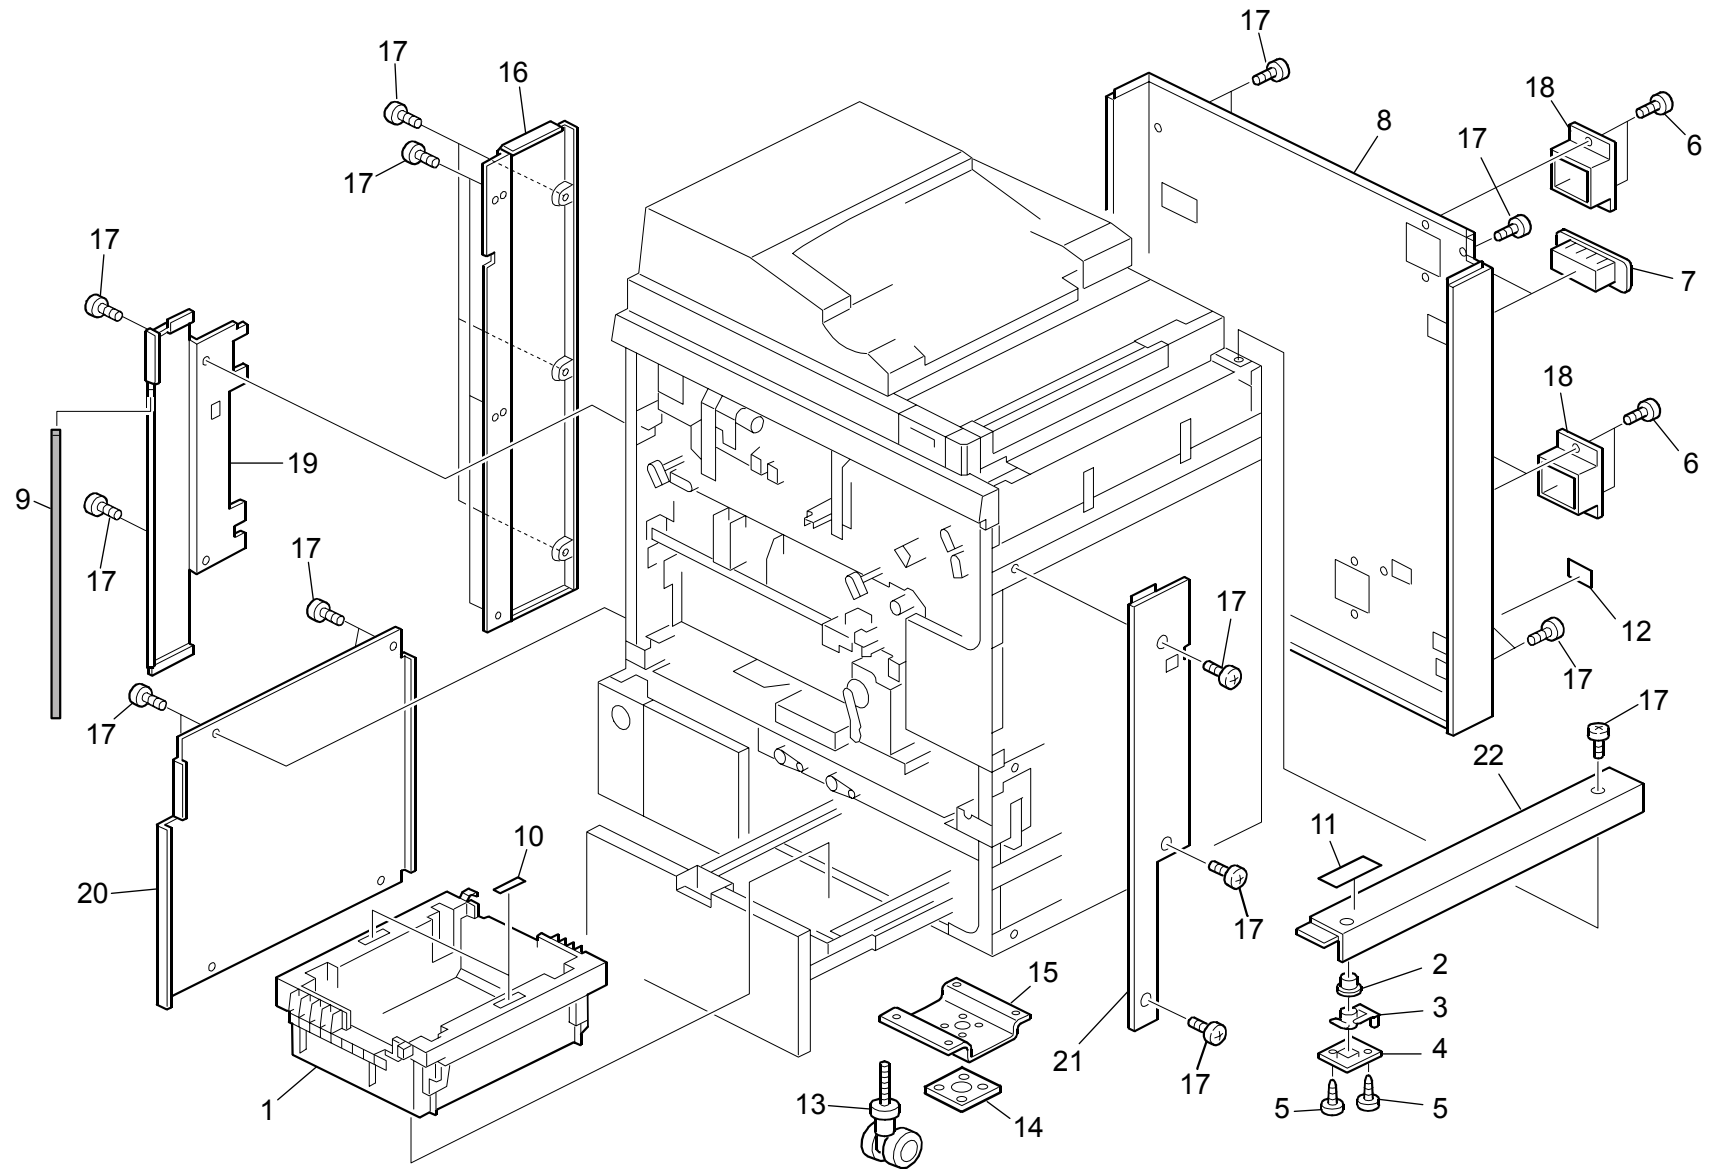


2.Exterior 2 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1269	Case:Paper Chip:PF4155K376:Ass'y	1
2	D391 2018	Keytop:PF4155Q544	1
3	D391 2019	Coil Spring:KEY:PF4140Q545A1	1
4	D391 5267	PCB:Switch:PF4140K624	1
5	D391 1121	Binding Self-Tapping Screw:M3x10: 030100FWBB	2
6	B660 4835	Screw:NS-SCR00045A	6
7	D391 2002	Grip:Rear:PF4155K106	2
8	D391 2005	Cover:Rear:PF4155Q508	1
9	D391 1107	Sponge:Contact Point:Cover:Front: PF4155Q731A	1
10	D391 6530	Decal:Set:Paper Jam	2
11	D391 6530	Decal:Set:Paper Jam	1
12	D391 6565	Decal:Caution:Power Supply Plug	1
13	D391 1442	Caster:PF4140P902	4
14	D391 1443	Holder:Caster:PF4140P903	4
15	D391 1444	Bracket:Caster:PF4155P096	4
16	D391 4500	Cover:Left Rear:PF4165Q525	1
17	B660 4835	Screw:NS-SCR00045A	21
18	D391 2034	Cover:Fan:PF4155K102	2
19	D391 2031	Cover:Left:PF4155Q522	1
20	D391 2032	Cover:Left Lower:PF4155Q513	1
21	D391 2033	Cover:Right:PF4155Q506	1
22	D391 2035	Cover:Main Swithc:PF4155Q537	1

Index No.	Part No.	Description	Q'ty Per Assembly
			

3.Exterior 3 (D391)

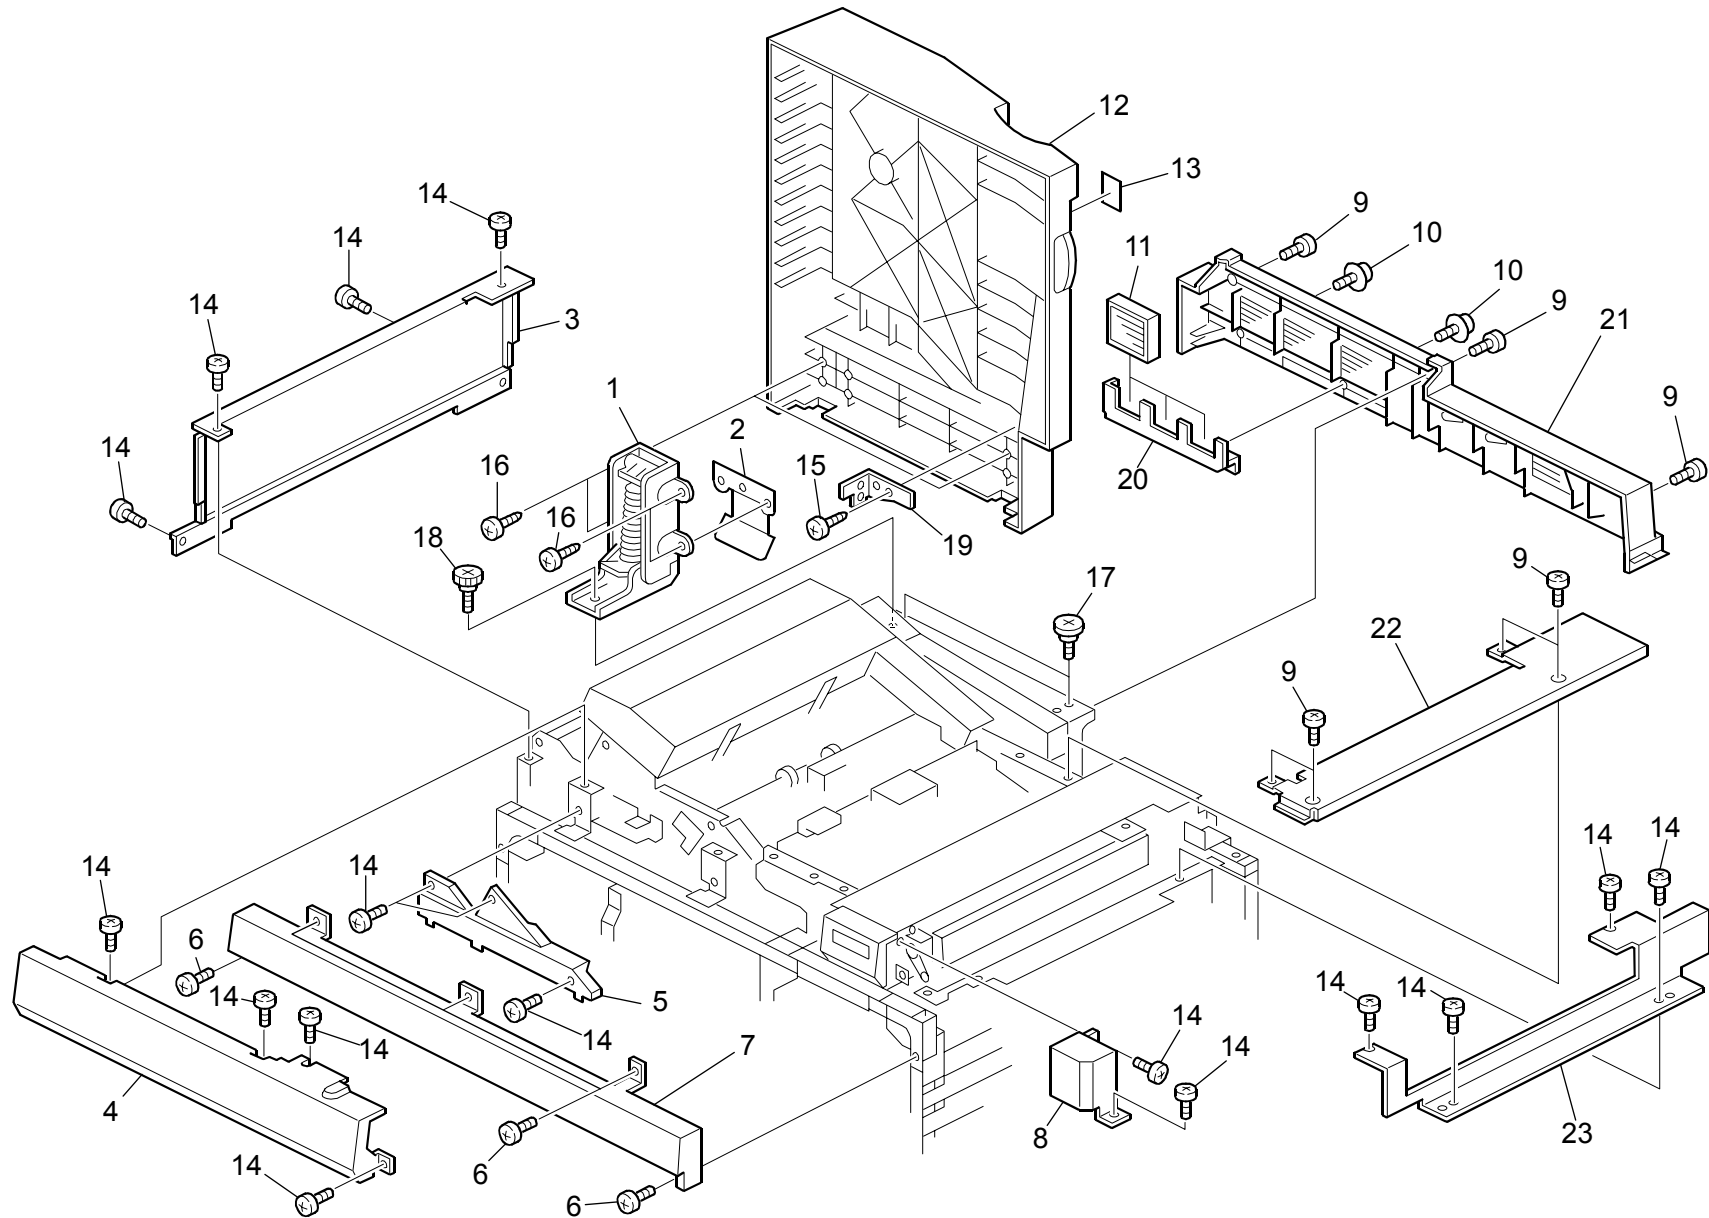


3.Exterior 3 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 2000	Hinge:Cover:Upper:PF4140K101A	2
2	D391 2020	Decal:Caution:Hinge:PF4140Q550C2	2
3	D391 2004	Cover:Left:Upper:PF4155Q507	1
4	D391 2015	Cover:Left Front:Upper:PF4155Q538	1
5	D391 2010	Inner Cover:PF4140Q532B1	1
6	D391 1246	Flat Screw:M4x10:NS-SCR00088B	4
7	D391 2003	Cover:Front Upper:PF4155Q505	1
8	D391 2014	Cover:Right Front:Upper:PF4155Q536	1
9	B660 4835	Screw:NS-SCR00045A	7
10	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	2
11	D391 1348	Filter:VOC:PF4140P915A	3
12	D391 2011	Cover:Upper:Open/Close:PF4155Q533	1
13	D391 6530	Decal:Set:Paper Jam	1
14	B660 4835	Screw:NS-SCR00045A	17
15	D391 1117	Binding Self-Tapping Screw:M3x8: 030080FWBB	1
16	D391 1131	Binding Self-Tapping Screw:M4x10: 040100FWBB	8
17	D391 4111	Screw:PF3091P352	2
18	D391 4112	Screw:PF3091P356	2
19	D391 2036	Feeler:Sensor:PF4140Q523	1
20	D391 2037	Bracket:Holder:Filter:PF4140Q559	1
21	D391 2038	Cover:Rear Upper:PF4155Q534	1
22	D391 2039	Cover:Upper Middle:PF4155Q509	1
23	D391 2040	Cover:Right Upper:PF3099P808	1

Index No.	Part No.	Description	Q'ty Per Assembly

4.Transit Pass Unit 1 (D391)

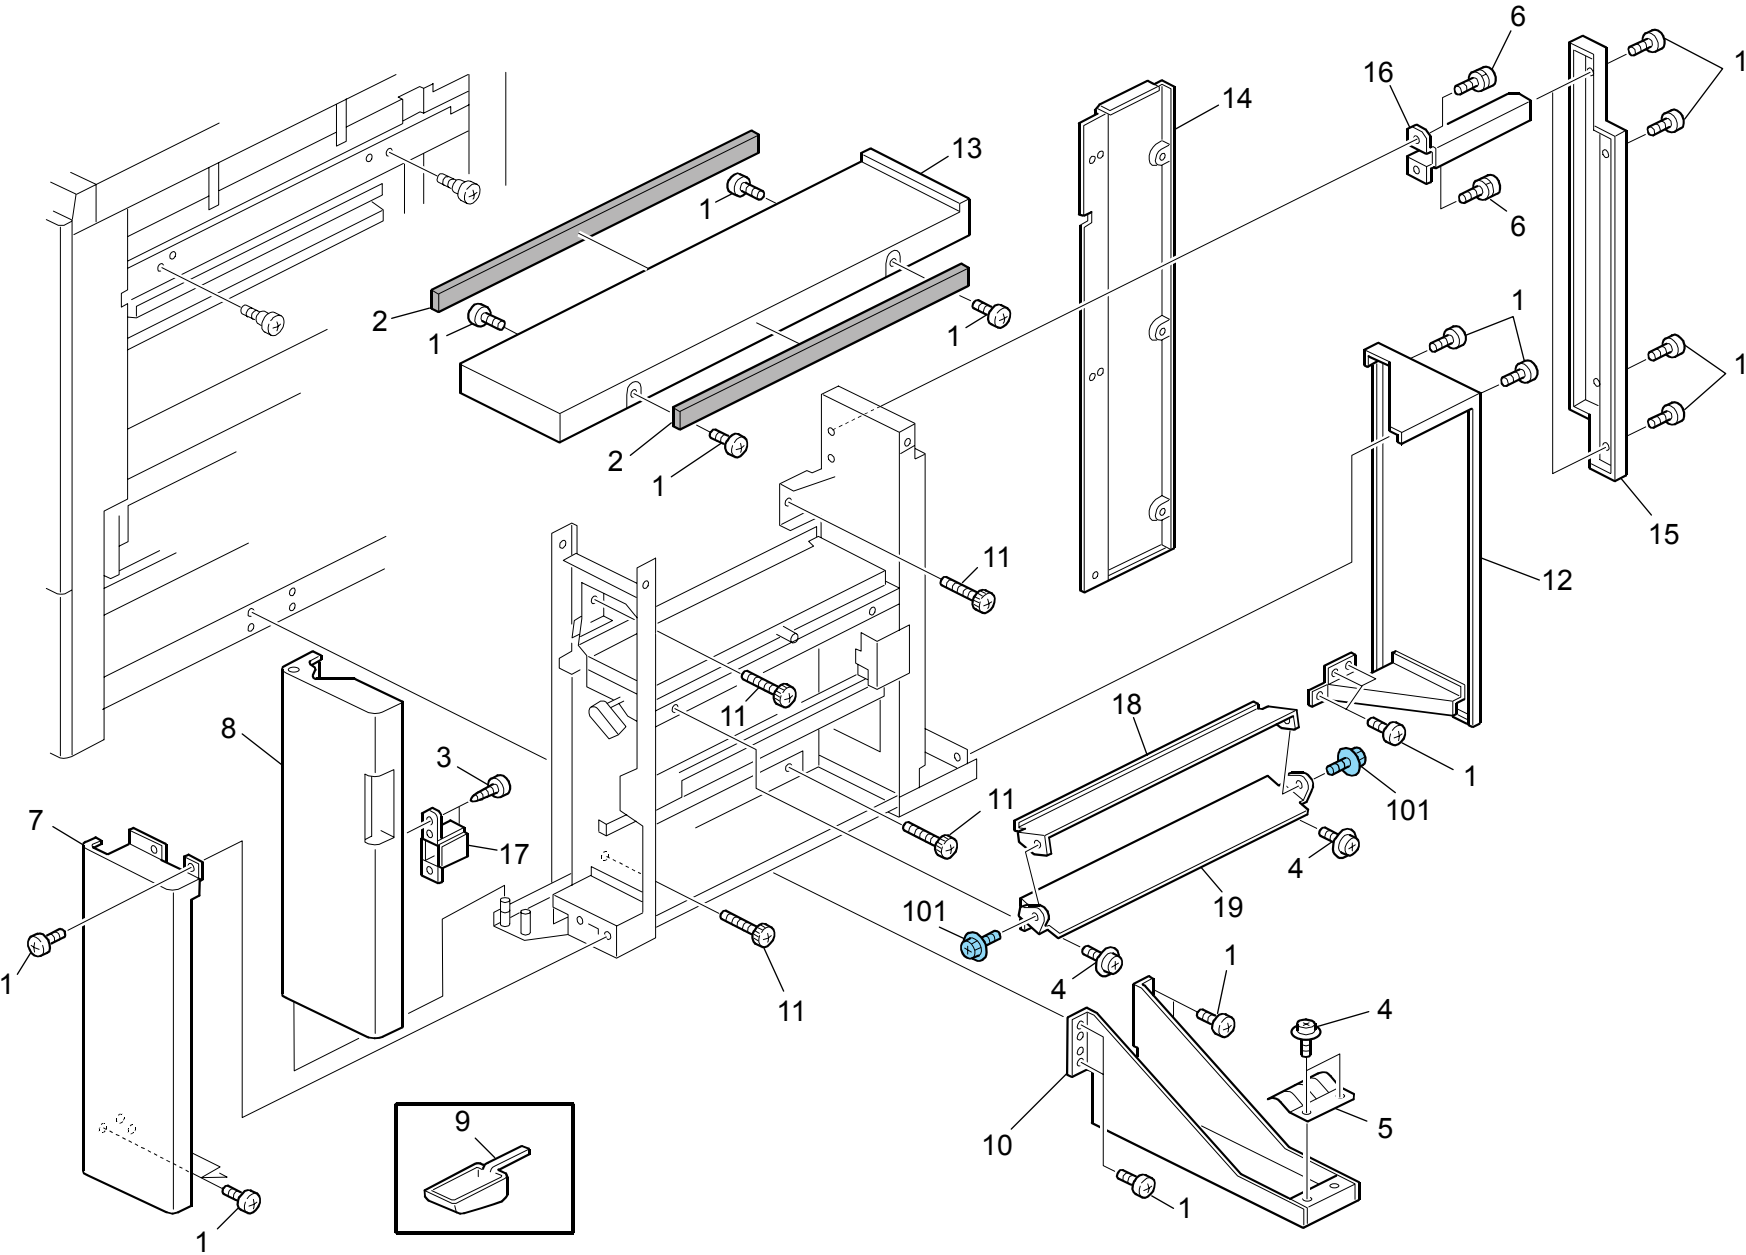


4.Transit Pass Unit 1 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B660 4835	Screw:NS-SCR00045A	19
2	B660 4161	Right Cover Sponge	2
3	D391 1121	Binding Self-Tapping Screw:M3x10: 030100FWBB	2
4	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	4
5	D391 4523	Spring Plate:PF4132P705A	1
6	D391 1114	Washer:M3x6:030060FWSW	2
7	D391 4503	Cover:Front Lower:PF4165Q680	1
8	D391 4504	Cover:Front:Joint Unit:PF4165Q681	1
9	D391 4510	Hopper:Glue:PF4140R643	1
10	D391 4511	Ground Plate:PF4165K811A	1
11	D391 4512	Flat Screw:PF4102P382	4
12	D391 4508	Cover:Rear Lower:PF4165Q683B	1
13	D391 4507	Cover:Upper:Joint Unit:PF4165Q684	1
14	D391 4500	Cover:Left Rear:PF4165Q525	1
15	D391 4505	Cover:Rear Upper:Joint Unit:PF4165Q682	1
16	D391 4513	Bracket:Cover:Rear:PF4165Q625	1
17	D391 4514	Bracket:Magnet Catch:PF4165Q626	1
18	B660 1768	Guide Plate:Connecting:PF4147P818A	1
19	B830 7511	Guide Plate:Connecting:Lower	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	

5.Transit Pass Unit 2 (D391)

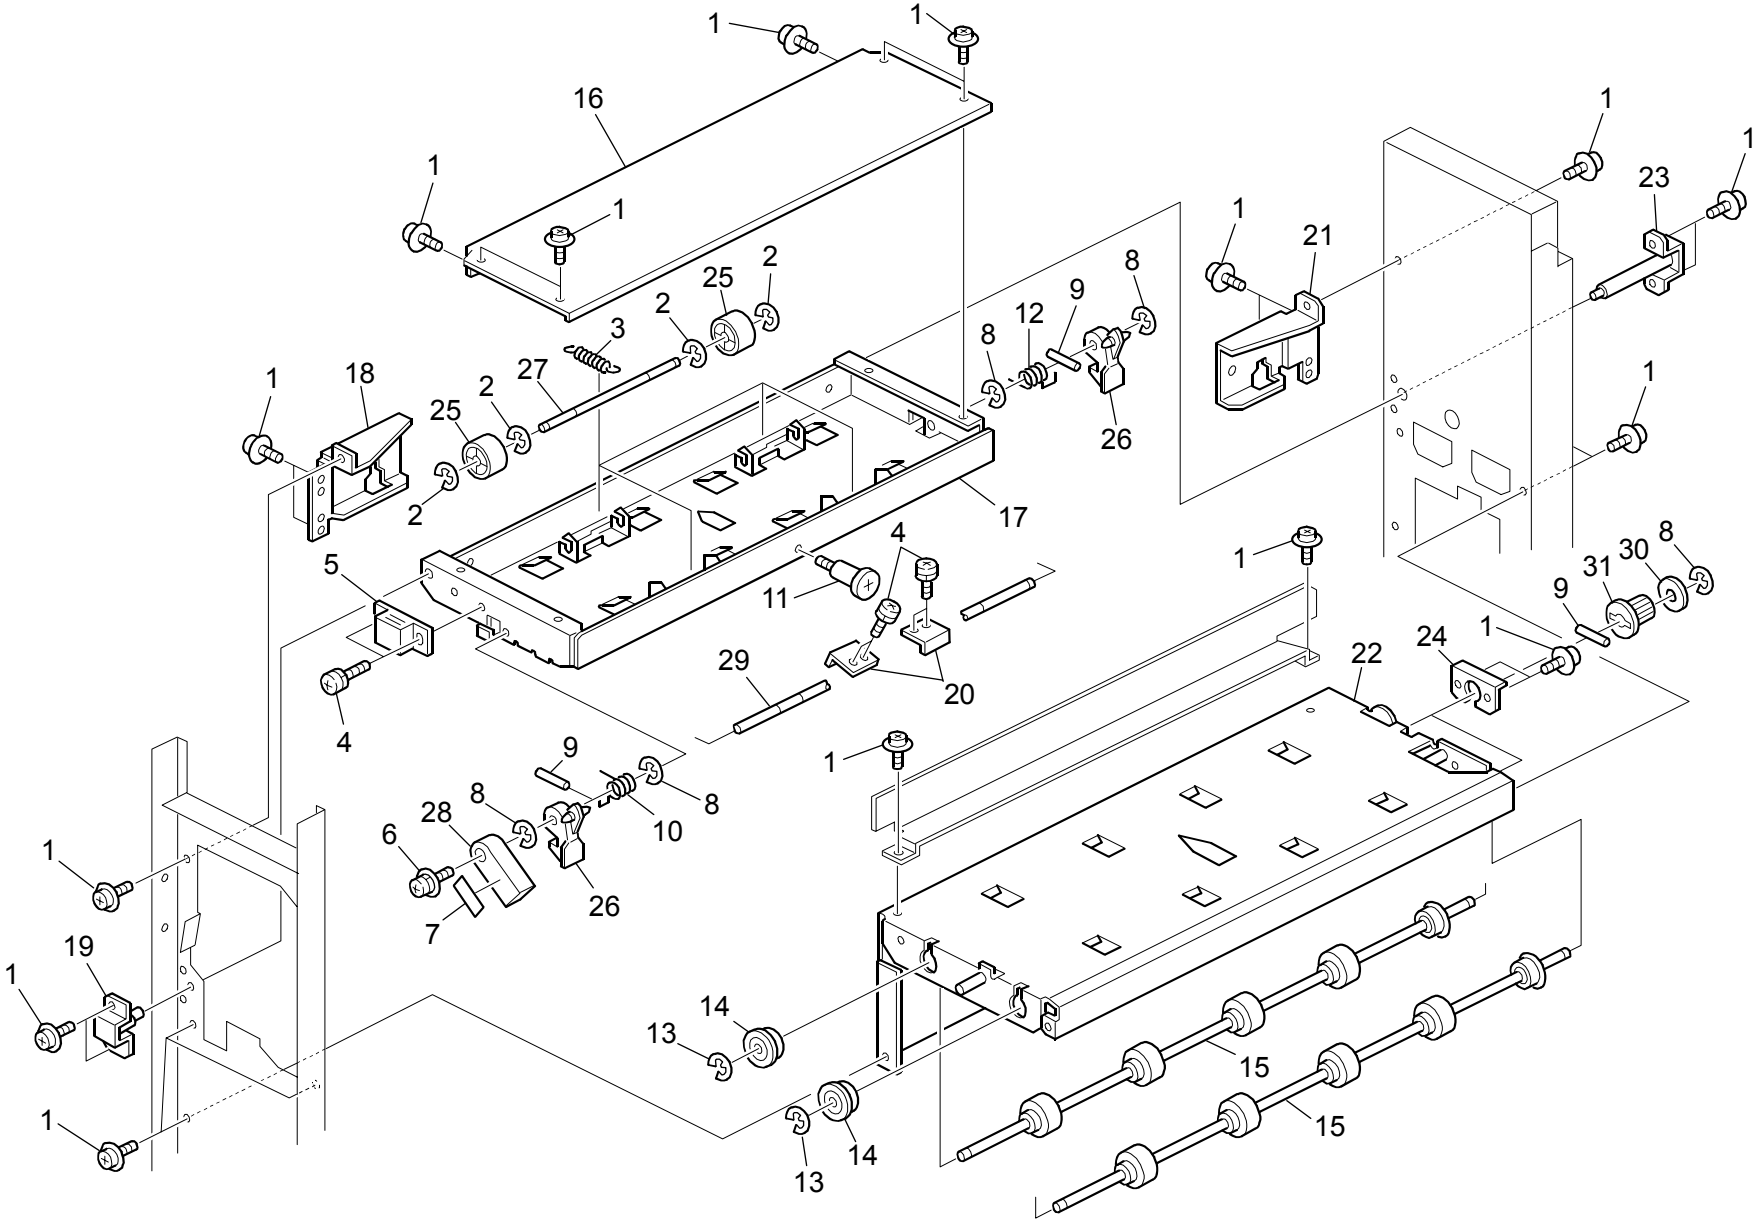


5.Transit Pass Unit 2 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	24
2	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	16
3	D391 1339	Coil Spring:Transport Roller: PF4140P700A1	4
4	D391 1114	Washer:M3x6:030060FWSW	6
5	D391 4522	Magnetic:35N:PF4132P350A1	1
6	D391 1116	Screw With Washer:M3x6:030060FWWS	1
7	D391 6550	Decal:Set:Joint Unit	1
8	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	6
9	D391 1154	Parallel Pin:2x10:HP020100SCH	4
10	D391 1104	Torsion Spring:Front:PF4099P804B	1
11	B660 4841	Screw:NS-SCR00202A	1
12	D391 1105	Torsion Spring:Rear:PF4099P805B	1
13	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	2
14	D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	2
15	D391 4502	Roller:Joint Unit:PF4165Q650A	2
16	D391 4515	Cover:Upper:PF4165Q618	1
17	D391 4516	Stay:Transport:Upper:PF4165Q604	1
18	D391 4517	Bracket:Transport:Front:PF4165Q607	1
19	D391 4526	Shaft:Transport Sub-Unit:Front: PF4165K604	1
20	D391 4529	Plate:Release:PF4140P637	2
21	D391 4531	Bracket:Transport:Rear:PF4165Q608	1
22	D391 4532	Stay:Transport:Lower:PF4165Q606	1
23	D391 4533	Shaft:Transport Sub-Unit:Rear: PF4165K605	1
24	D391 4536	Bracket:Shaft:Transport Roller: PF4165Q609	2
25	D391 1350	Collar:PF4140P958A	8
26	D391 4528	Bracket:Release:PF4140P120	2
27	D391 4518	Shaft:Roller:PF4140P618	4
28	D391 4519	Holder:Shaft:Release:PF4155P607	1
29	D391 4530	Shaft:Release:PF4165Q651	1
30	D391 4535	Flange:Timing Pulley:PF4099P225	2
31	D391 4534	Timing Pulley:S2MX16:PF4140P631	2

Index No.	Part No.	Description	Q'ty Per Assembly

6.Transit Pass Unit 3 (D391)

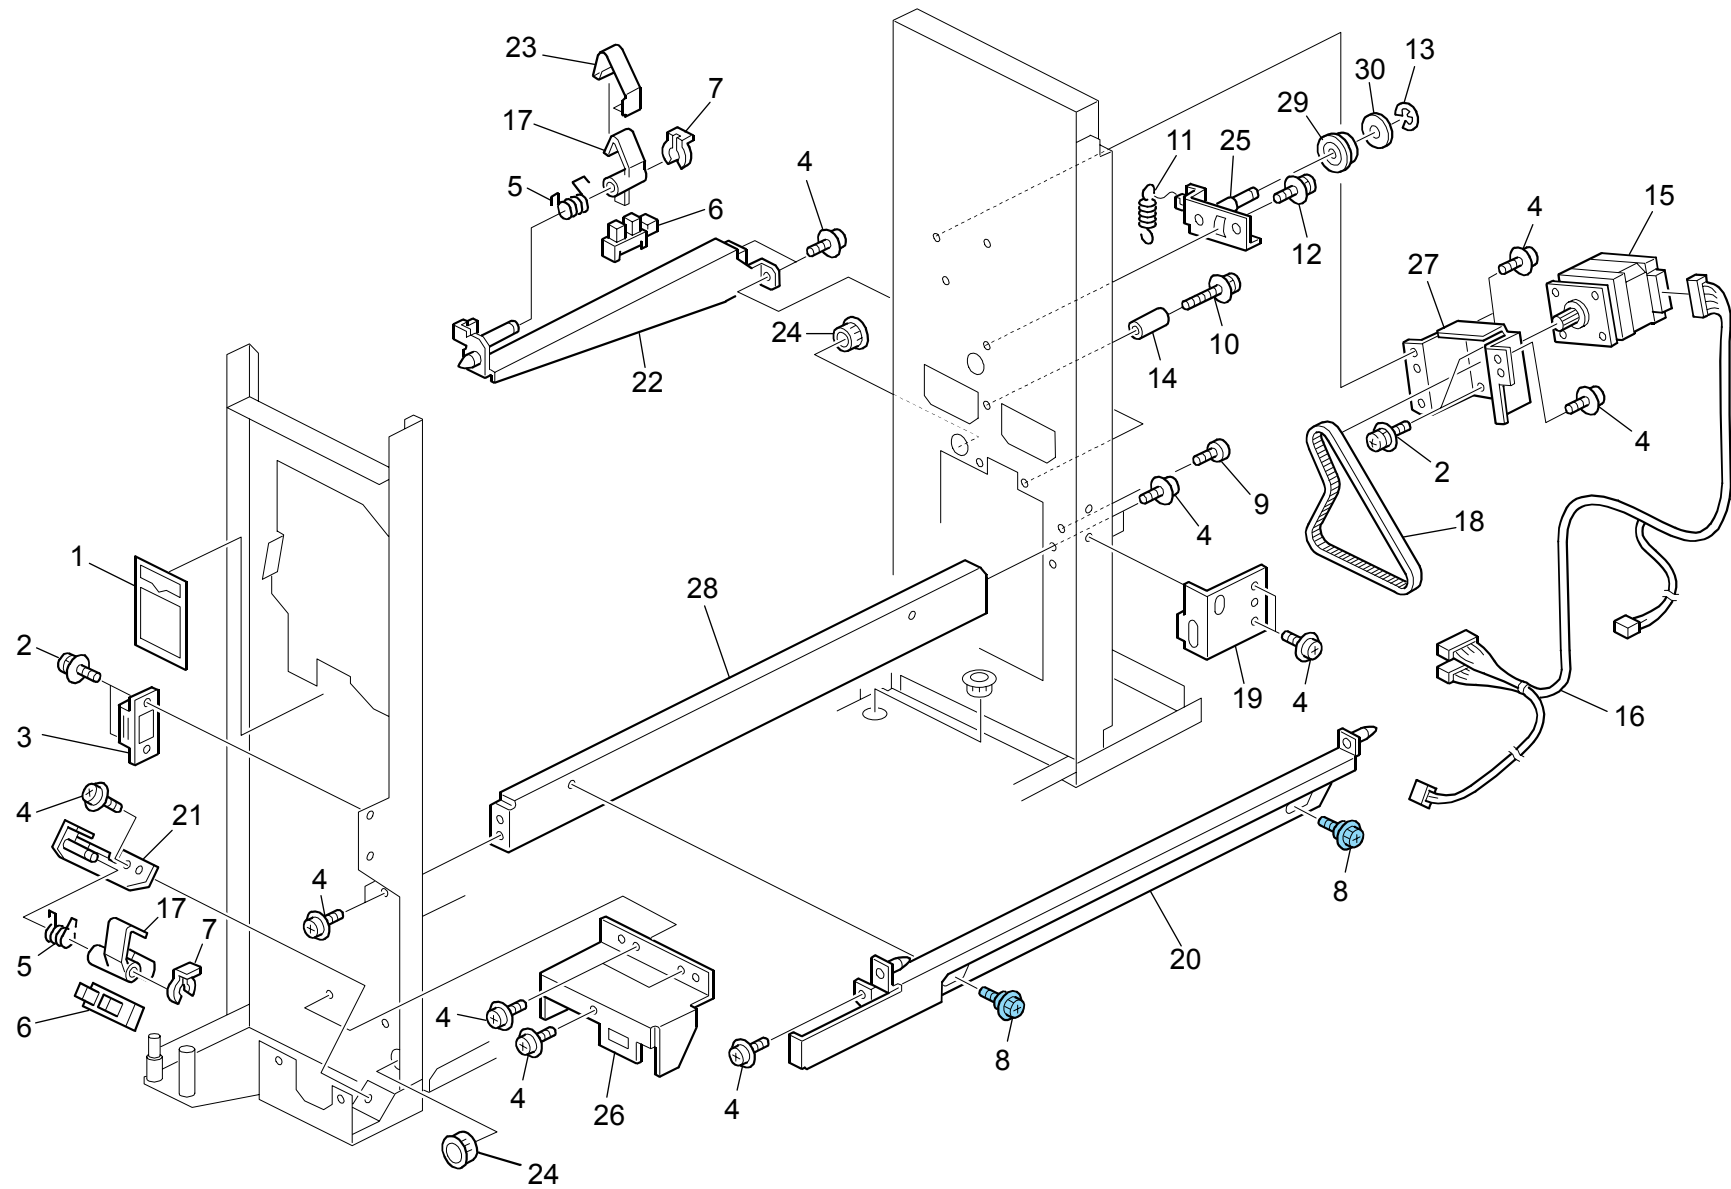


6. Transit Pass Unit 3 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 6550	Decal:Set:Joint Unit	1
2	D391 1116	Screw With Washer:M3x6:030060FWWS	4
3	B660 1111	Magnet Catch	1
4	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	16
5	D391 4520	Torsion Spring:PF3091P347A2	2
6	D391 5254	Photointerruptor:PF2286P475	2
7	B660 4815	External Circlip:NS-CLP00003A	2
8	B830 1135	Screw	2
9	B660 4835	Screw:NS-SCR00045A	1
10	D391 1123	Screw With Washer:M3x16:030160FWWS	1
11	D391 4524	Tension Spring:PF4143P310A	1
12	B660 4581	Screw:NS-SCR00080A	1
13	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	1
14	D391 1140	Spacer:CL030120FW	1
15	D391 5275	DC Stepper Motor:PF4140K637	1
16	D391 4546	Harness:Joint Unit:PF4165K906	1
17	D391 1328	Lever:Sensor:PF4140P614B2	2
18	D391 4525	Synchronous Belt:NS-BLT00452A	1
19	B660 1436	Bracket:Ground Plate:PF4147P139A	1
20	B660 1212	Lever:Coupling:PF4147P197A	1
21	D391 4537	Bracket:Sensor:PF4140K059:PEEN	1
22	D391 4538	Bracket:Sensor:Release:PF4165K608	1
23	D391 4539	Spring Plate:Sensor:Release:PF4140P714	1
24	D391 4540	Timing Pulley:E450001234	2
25	D391 4541	Bracket:Tightener:PF4165K606	1
26	D391 4542	Cover:Sensor:Release:PF4165Q619	1
27	D391 4545	Bracket:DC Stepper Motor:PF4140P629	1
28	D391 4547	Stay:Right:PF4165Q603	1
29	D391 4543	Roller:Synchronous Belt:PR5100P216	1
30	D391 4544	Flange:Roller:PF4099P950	1
			

Index No.	Part No.	Description	Q'ty Per Assembly

7.Inserter Section 1 (D391)

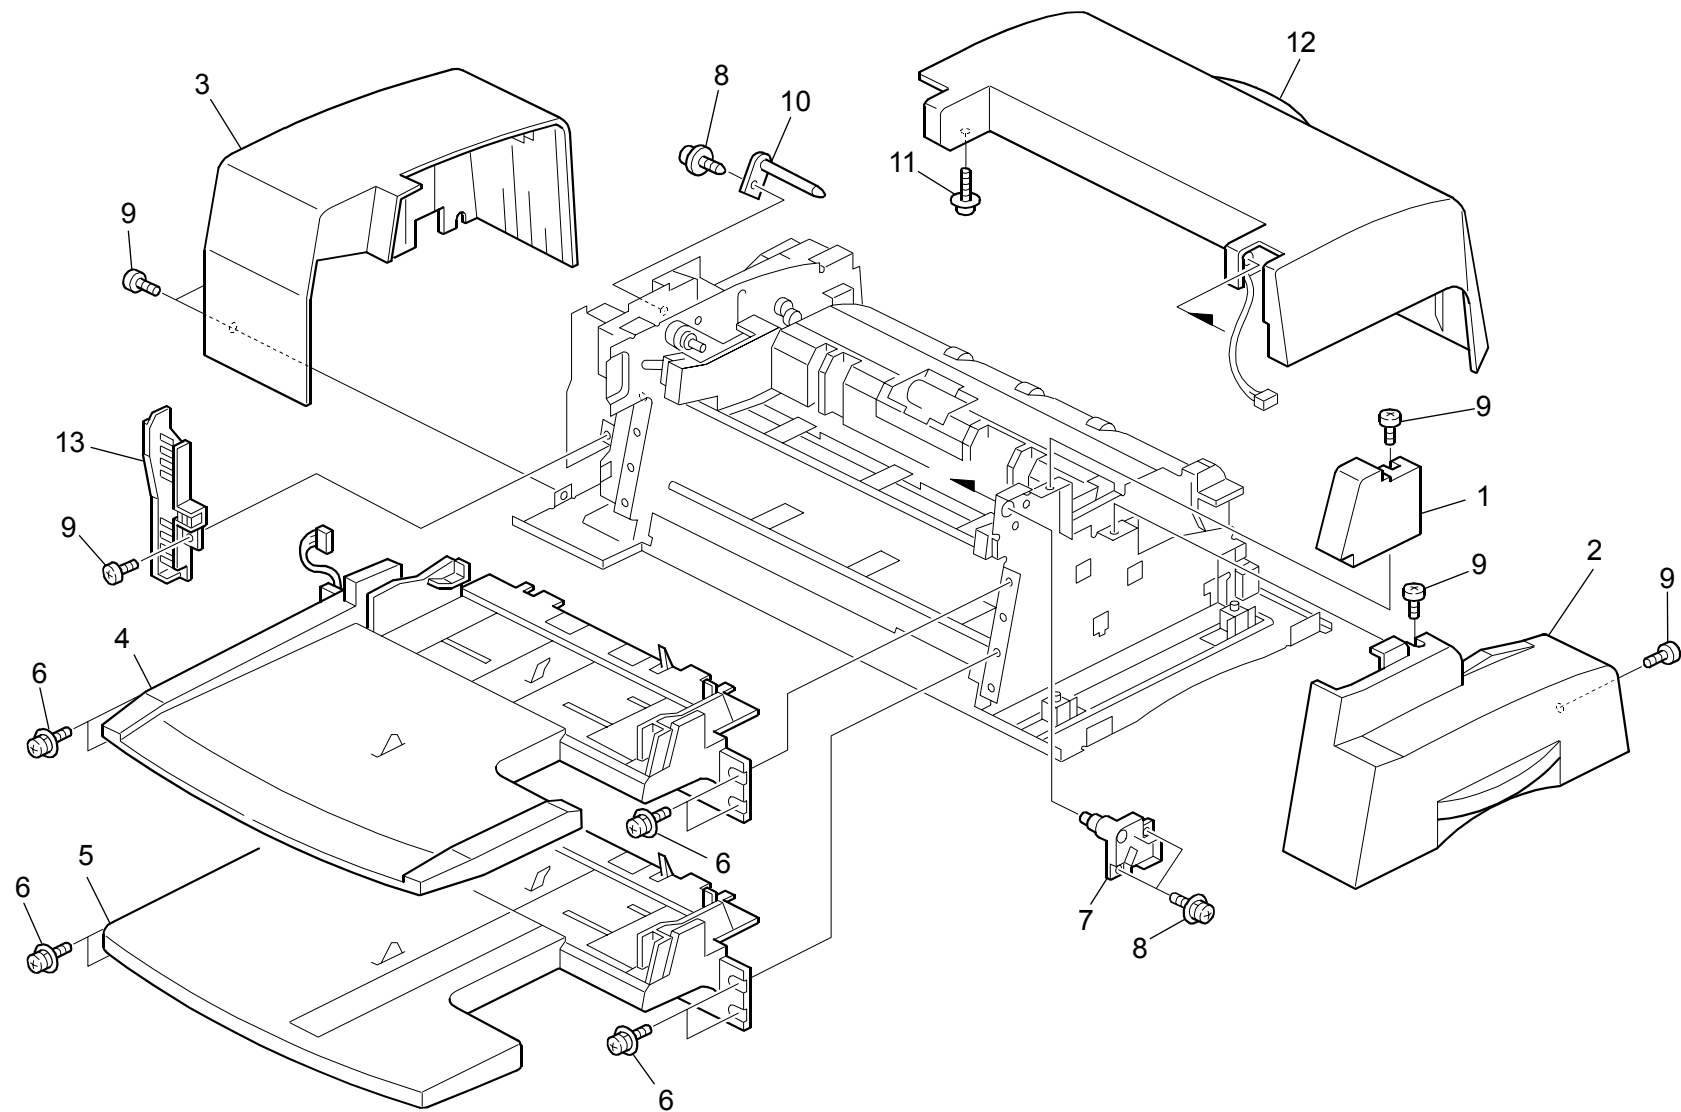


7.Inserter Section 1 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 4030	Cover:Front:Sub:PF3099P002	1
2	D391 4029	Cover:Front:PF3099P001	1
3	D391 4031	Cover:Rear:PF3099P003	1
4	D391 4026	Tray Unit:Upper:PF3099K152:Ass'y	1
5	D391 4025	Tray Unit:Lower:PF3099K144:Ass'y	1
6	B660 4835	Screw:NS-SCR00045A	8
7	D391 4051	Holder:Contact Point:PF3091P028A	1
8	D391 1116	Screw With Washer:M3x6:030060FWWS	3
9	B660 4835	Screw:NS-SCR00045A	6
10	D391 4114	Stopper:Open And Close:Cover: PF3091K015:PEEN	1
11	D391 4116	Tapping Screw:M3x8:030080FWTP	1
12	D391 4115	Cover:Upper:PF3099P004	1
13	D391 4113	Duct:Upper:PF3091P095	1

Index No.	Part No.	Description	Q'ty Per Assembly

8.Inserter Section 2 (D391)

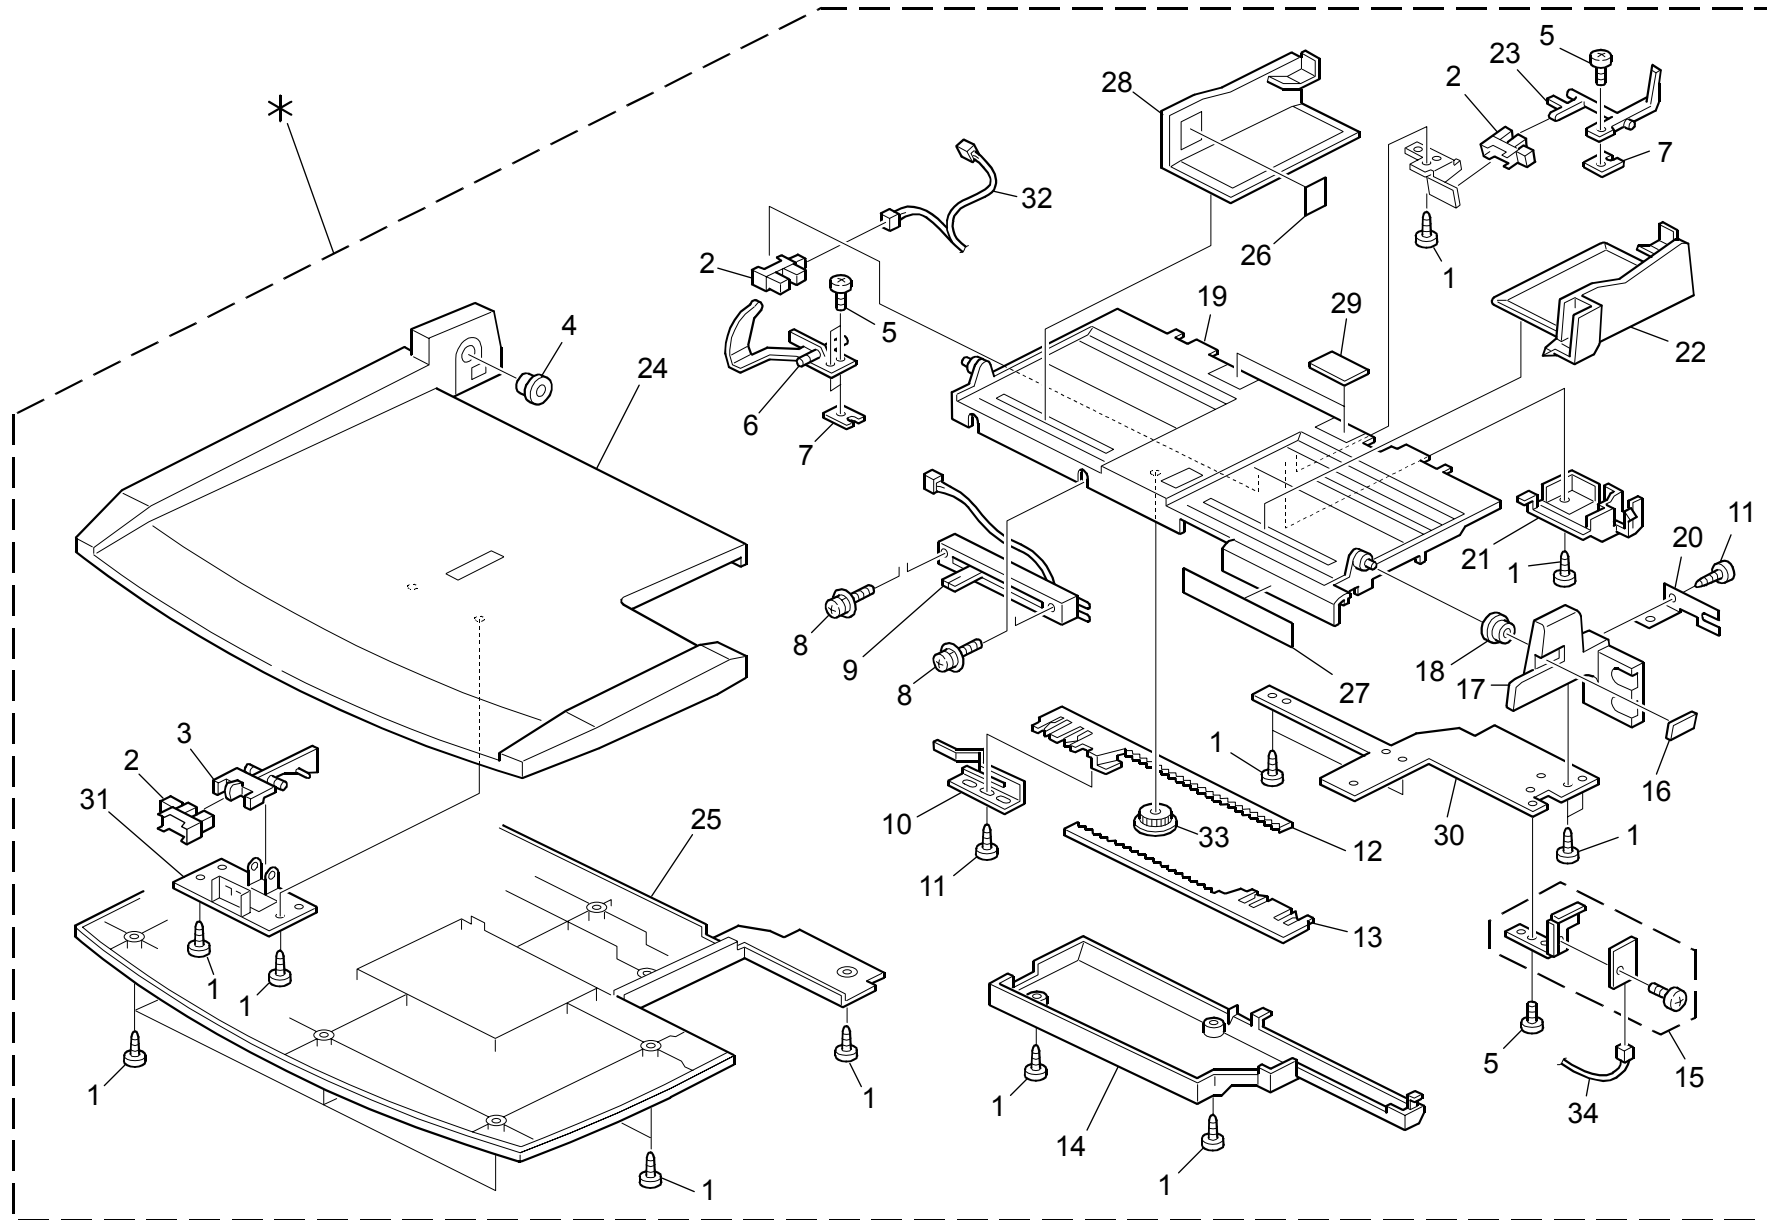


8.Inserter Section 2 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
*	D391 4026	Tray Unit:Upper:PF3099K152:Ass'y	1
1	D391 4018	Tapping Screw:M4x8:NS-SCR00053A	15
2	D391 5780	Photointerruptor:PF2286P475	3
3	D391 4061	Lever:PF3099P046	1
4	D391 4068	Bushing:Contact Point:PF3091P076A	1
5	D391 4002	Screw:M3x4:030040FWBI	3
6	D391 4063	Lever:PF3099P048	1
7	D391 4076	Balancer:PF3091P142A	2
8	D391 1120	Screw With Washer:M3x8:030080FWWS	2
9	D391 5782	Positioning Sensor:PF3091K324	1
10	D391 4082	Spring Plate:Click:PF3091P161A	1
11	D391 4017	Tapping Screw:M3x8:NS-SCR00026A	2
12	D391 4065	Rack:Tray:Rear:PF3091P050A	1
13	D391 4064	Rack:Tray:Front:PF3091P049A	1
14	D391 4046	Cover:Tray:Upper Lower:PF3099P021	1
15	D391 5781	PCB:LED:PF3091K149	1
16	D391 4062	Cover:LED:PF3091P047A	1
17	D391 4044	Tray:Base:Sub:PF3099P015	1
18	D391 4068	Bushing:Contact Point:PF3091P076A	1
19	D391 4021	Tray:Upper Lower:Bin:Upper:PF3099K102	1
20	D391 4083	Spring Plate:Earth:Tray:PF3091P162A	1
21	D391 4066	Cover:Sensor:Supply:PF3091P051A	1
22	D391 4047	Guide:Tray:Upper:Front:PF3099P022	1
23	D391 4067	Lever:Sensor:Supply:PF3091P052A	1
24	D391 4000	Tray:Upper:PF3099P0P13	1
25	D391 4001	Cover:Tray:Upper:PF3099P016	1
26	D391 6540	Decal:Set:Paper Feed	1
27	D391 6540	Decal:Set:Paper Feed	1
28	D391 4118	Side Fence:Tray:Upper:PF3099P023	1
29	D391 4119	Friction Pad:Pickup:PF3091P327	1
30	D391 4121	Frame:Tray:PF3091P120	1
31	D391 4125	Holder:Sensor:PF3091P045	1
32	D391 4117	Harness:Tray:Upper:PF3099K911	1
33	D391 4124	Gear:Pinion:Tray:PF3091P053	1
34	D391 4122	Harness:Design Sketch:LED:PF3091K320	1

Index No.	Part No.	Description	Q'ty Per Assembly

9.Inserter Section 3 (D391)

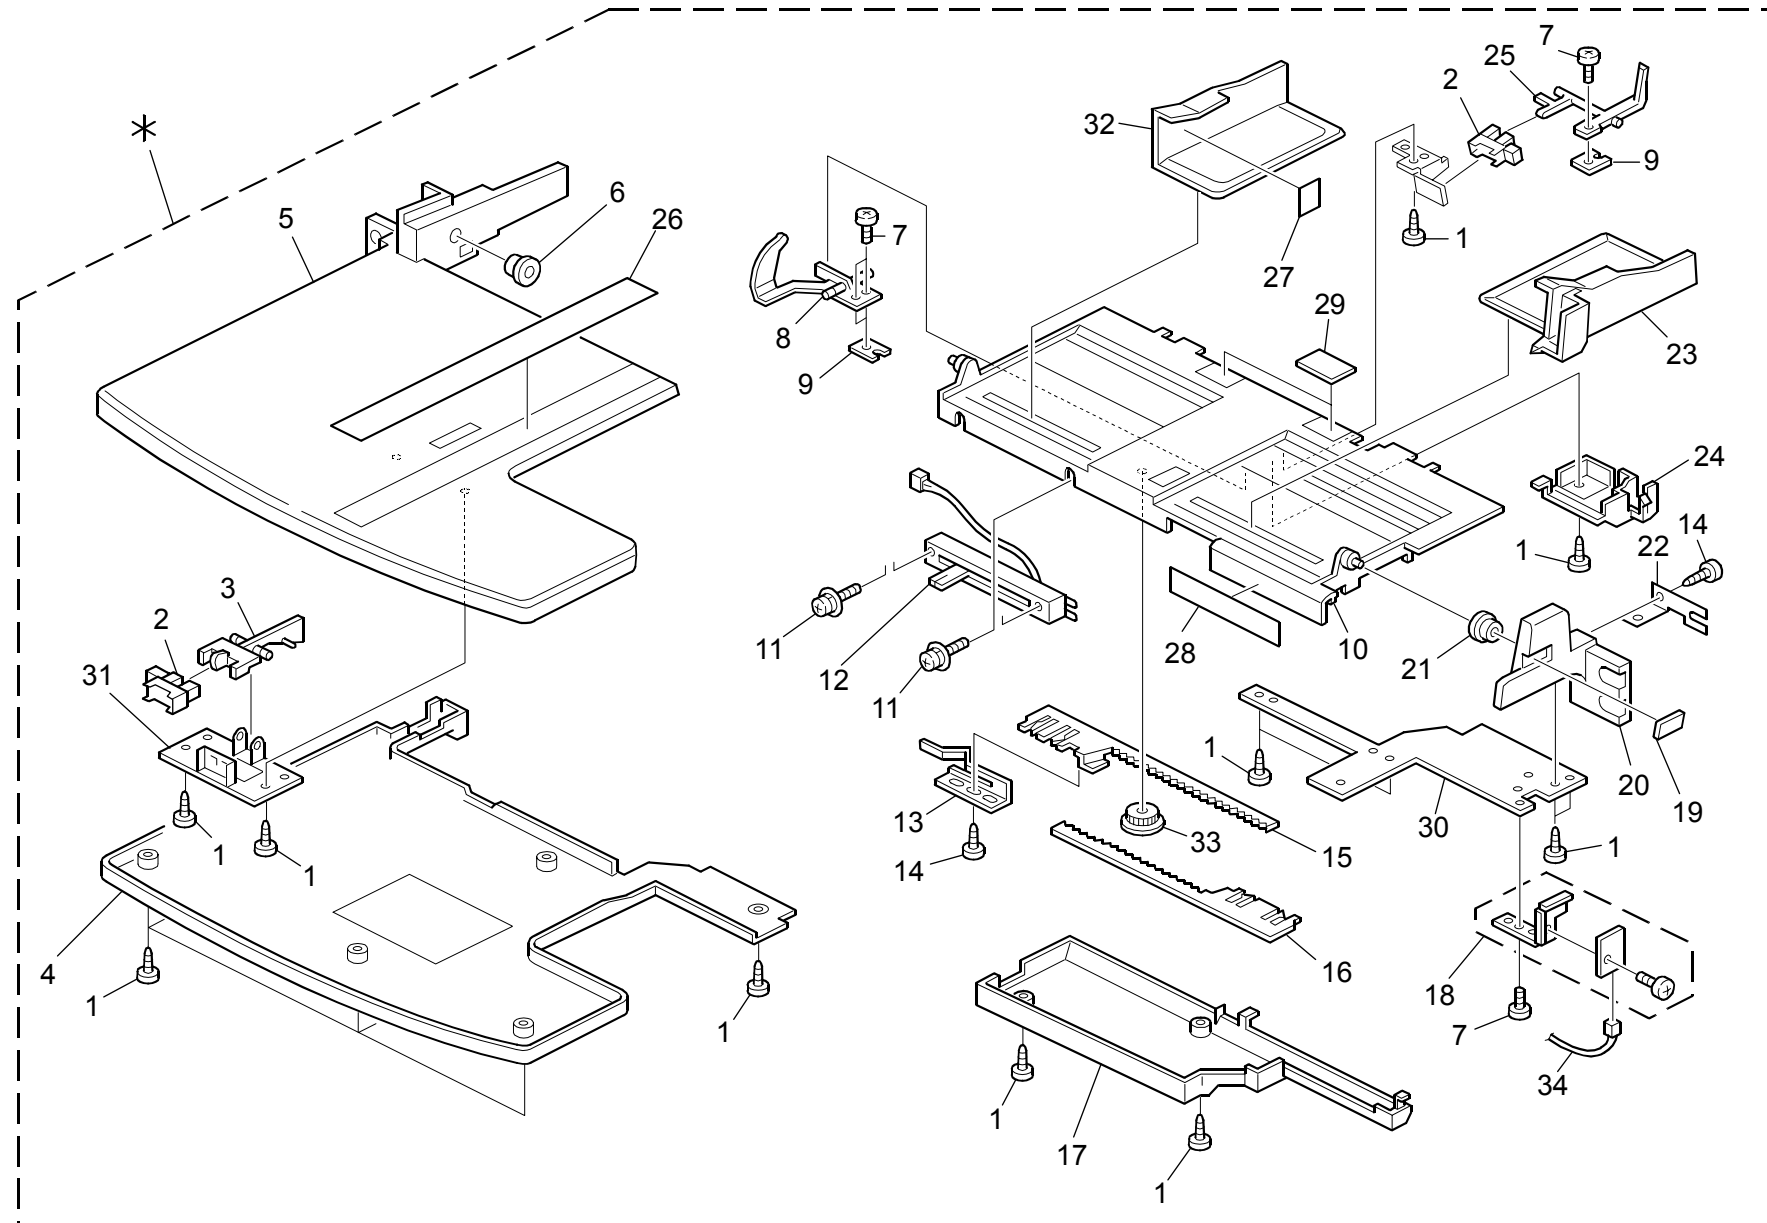


9.Inserter Section 3 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
*	D391 4025	Tray Unit:Lower:PF3099K144:Ass'y	1
1	D391 4018	Tapping Screw:M4x8:NS-SCR00053A	14
2	D391 5780	Photointerruptor:PF2286P475	2
3	D391 4061	Lever:PF3091P046A	1
4	D391 4045	Cover:Tray:Lower:PF3099P017	1
5	D391 4033	Base:Tray:Lower:PF3099P014	1
6	D391 4068	Bushing:Contact Point:PF3091P076A	1
7	D391 4002	Screw:M3x4:030040FWBI	4
8	D391 4063	Lever:PF3099P048	1
9	D391 4076	Balancer:PF3091P142A	2
10	D391 4022	Tray:Upper Lower:Bin:Lower:PF3099K103A	1
11	D391 1120	Screw With Washer:M3x8:030080FWWS	2
12	D391 5782	Positioning Sensor:PF3091K324	1
13	D391 4082	Spring Plate:Click:PF3091P161A	1
14	D391 4017	Tapping Screw:M3x8:NS-SCR00026A	2
15	D391 4065	Rack:Tray:Rear:PF3091P050A	1
16	D391 4064	Rack:Tray:Front:PF3091P049A	1
17	D391 4046	Cover:Tray:Upper Lower:PF3091P021A	1
18	D391 5781	PCB:LED:PF3091K149	1
19	D391 4062	Cover:LED:PF3091P047A	1
20	D391 4044	Tray:Base:Sub:PF3099P015	1
21	D391 4068	Bushing:Contact Point:PF3091P076A	1
22	D391 4083	Spring Plate:Earth:Tray:PF3091P162A	1
23	D391 4048	Guide:Tray:Lower:Front:PF3099P024	1
24	D391 4066	Cover:Sensor:Supply:PF3091P051A	1
25	D391 4067	Lever:Sensor:Supply:PF3091P052A	1
26	D391 6547	Decal:Cover:Paper Feed	1
27	D391 6540	Decal:Set:Paper Feed	1
28	D391 6540	Decal:Set:Paper Feed	1
29	D391 4119	Friction Pad:Pickup:PF3091P327	2
30	D391 4121	Frame:Tray:PF3091P120	1
31	D391 4125	Holder:Sensor:PF3091P045	1
32	D391 4126	Side Fence:Tray Lower:PF3099P025	1
33	D391 4124	Gear:Pinion:Tray:PF3091P053	1
34	D391 4130	Harness:Bin Display:PF3091K326	1

Index No.	Part No.	Description	Q'ty Per Assembly

10.Inserter Section 4 (D391)

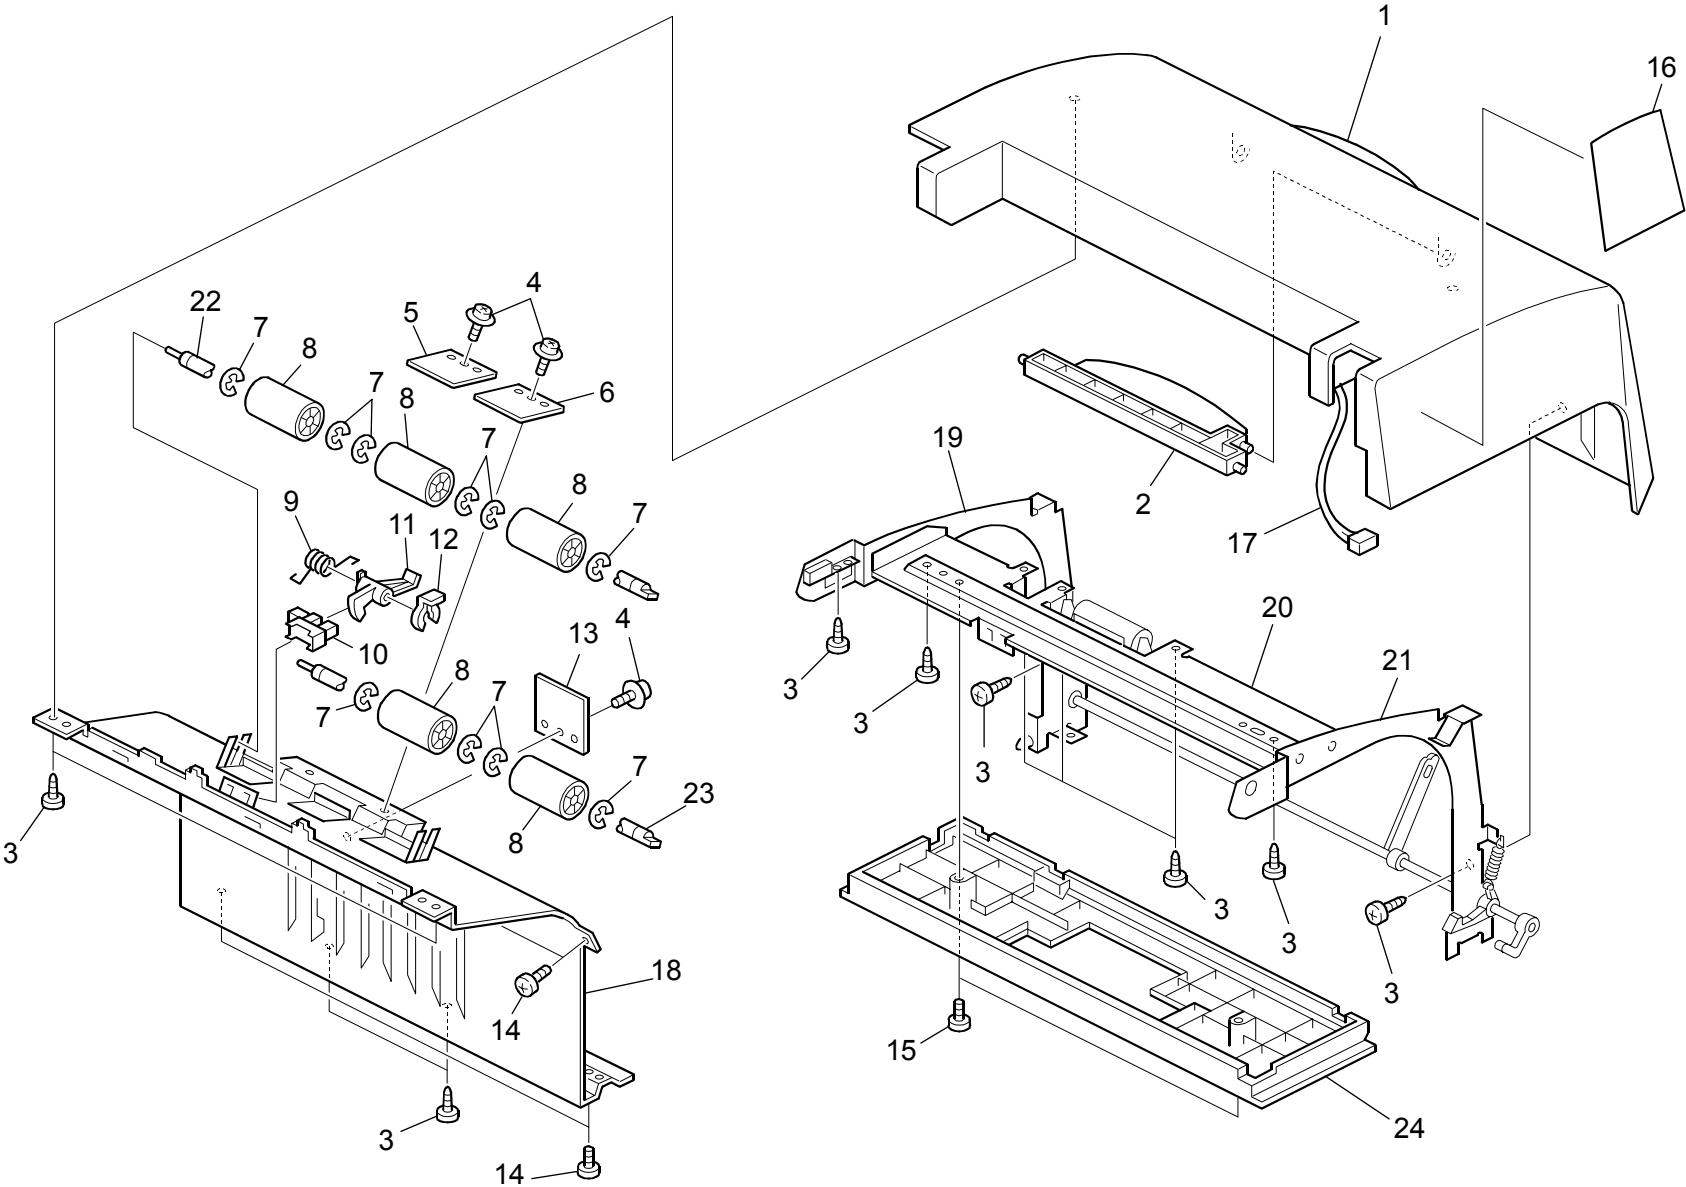


10.Inserter Section 4 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 4032	Cover:Upper:PF3099P004	1
2	D391 4052	Lever:Open And Close:Cover:Upper:PF3099P029	1
3	D391 4018	Tapping Screw:M4x8:NS-SCR00053A	12
4	D391 4003	Tapping Screw:M3x6:030060FWIT	3
5	D391 4027	Spring Plate:Registration Roller:F:PF3091K172	1
6	D391 4028	Spring Plate:Registration Roller:R:PF3091K173	1
7	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	10
8	D391 4059	Driven Roller:PF3091P039A	5
9	D391 4096	Coil Spring:Registration Sensor:BIN:Upper:PF3091P346A	1
10	D391 5780	Photointerruptor:PF2286P475	1
11	D391 4057	Lever:Registration Sensor:Bin:Upper:PF3091P03	1
12	B660 4811	External Circlip:NS-CLP00001A	1
13	D391 4080	Spring Plate:Plate:Registration Roller:PF3091P159A	1
14	B660 4831	Screw:NS-SCR00016A	4
15	B660 4835	Screw:NS-SCR00045A	2
16	D391 6540	Decal:Set:Paper Feed	1
17	D391 5787	Harness:Cover:Upper:PF3091K312	1
18	D391 4136	Guide:Bin:Upper:PF3091P111	1
19	D391 4137	Side Plate:Cover:Rear:PF3091P109	1
20	D391 4138	Stay:Cover:Upper:PF3091P110	1
21	D391 4139	Side Plate:Cover:Front:PF3091P108	1
22	D391 4134	Shaft:Registration Roller:PF3091P213	1
23	D391 4135	Shat:Transport Roller:PF3091P214	1
24	D391 4140	Guide:Pickup:PF3091P007	1

Index No.	Part No.	Description	Q'ty Per Assembly

11.Inserter Section 5 (D391)

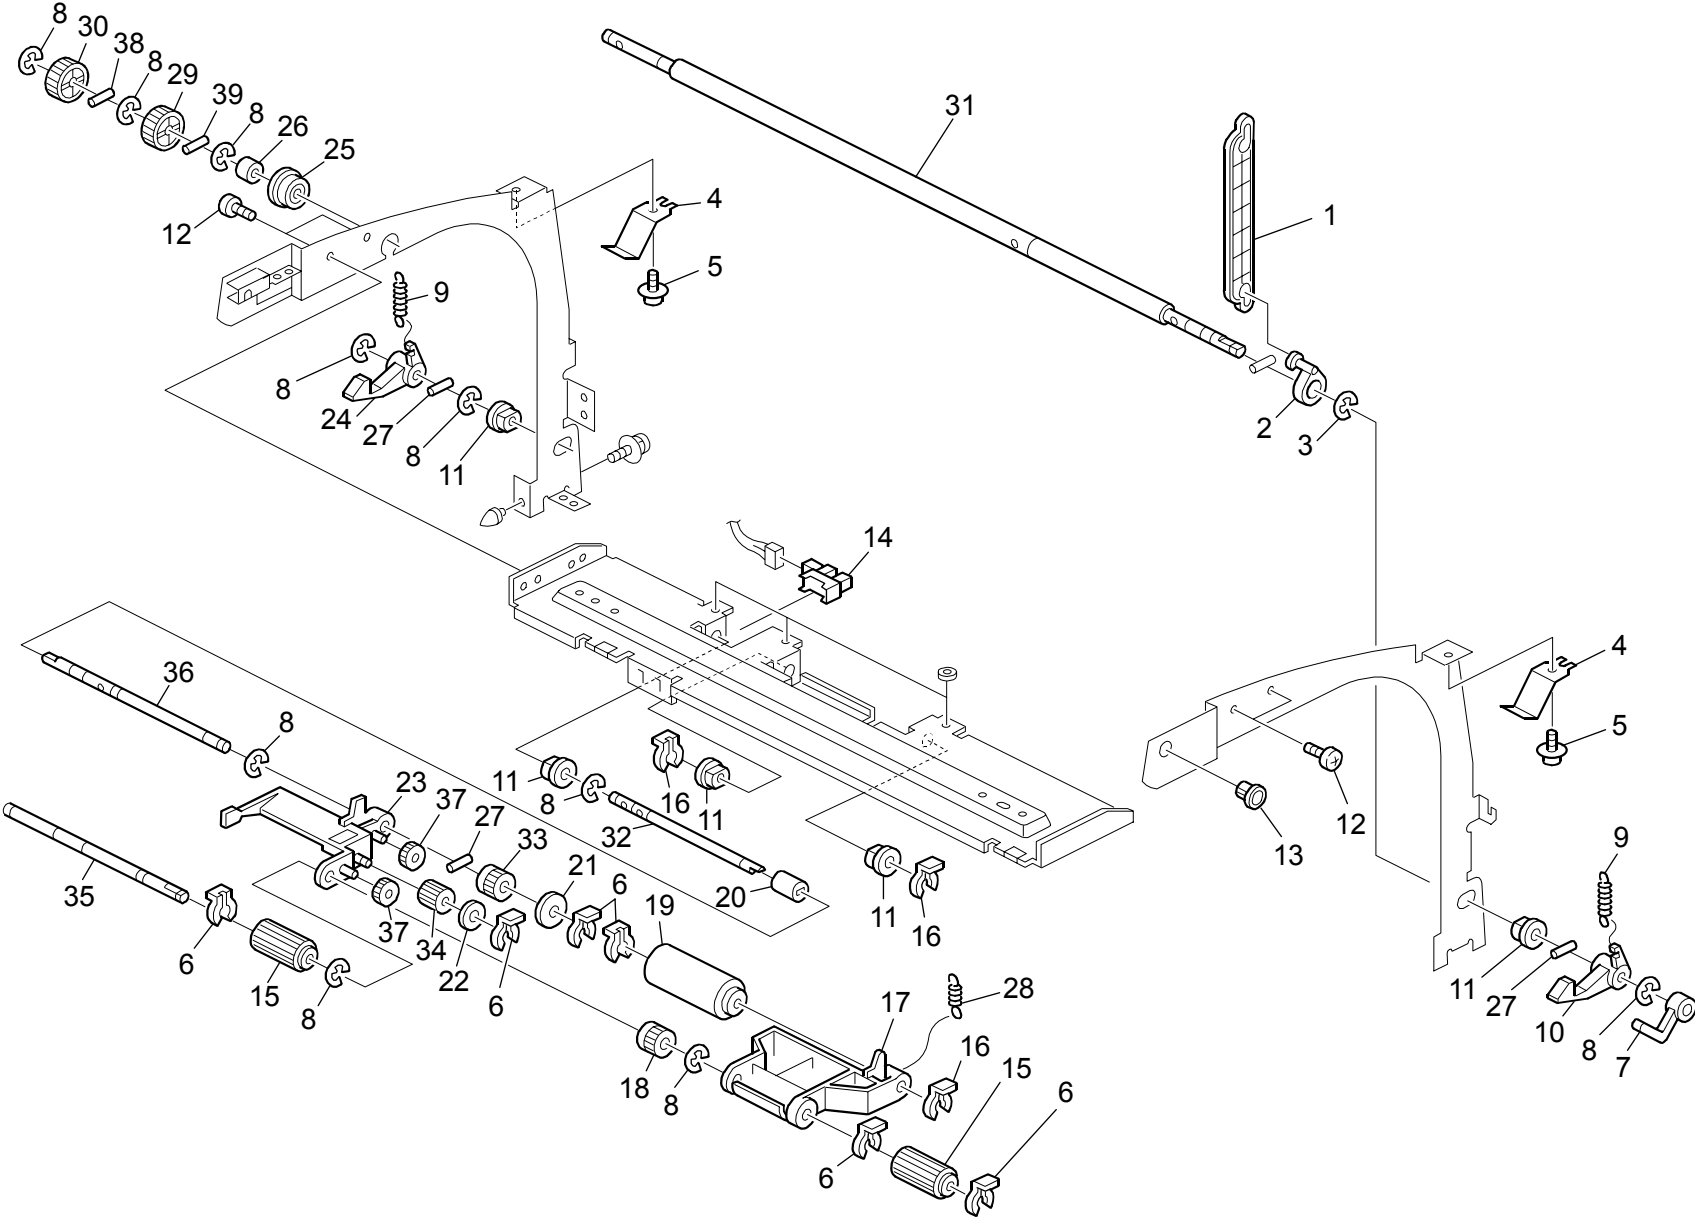


11.Inserter Section 5 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 4053	Link:Open And Close:Cover:Upper:PF3091P030A	1
2	D391 4054	Hook:Open And Close:Cover:Upper:PF3091P031A	1
3	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	1
4	D391 4077	Spring Plate:Lock:Cover:Upper:PF3091P155A	2
5	D391 4003	Tapping Screw:M3x6:030060FWIT	2
6	B660 4815	External Circlip:NS-CLP00003A	6
7	D391 4070	Lever:On Off Detector:Cover:Upper:PF3091P078A	1
8	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	10
9	D391 4095	Coil Spring:Lock:Cover:Upper:PF3091P343A	2
10	D391 4055	Pawl:Lock:Cover:Upper:PF3091P032A	1
11	B660 4847	Bushing:NS-MTL00009A	5
12	B660 4835	Screw:NS-SCR00045A	4
13	D391 4068	Bushing:Contact Point:PF3091P076A	1
14	D391 5780	Photointerruptor:PF2286P475	1
15	D391 4086	Pickup Roller:PF3091P302A	2
16	D391 4016	Retaining Rings-C:NS-Clip00007A	3
17	D391 4049	Arm:Pickup:Front:PF3091P026A	1
18	D391 4091	Gear:Mechanical Roller Clutch:PF3091P306A	1
19	D391 4085	Paper Feed Roller:PF3091P301A	1
20	D391 4020	Bushing:PF2166P035C	1
21	D391 4092	Flange:PF3091P335A	1
22	D391 4104	Flange:PF4062P779A	1
23	D391 4050	Arm:Pickup:Rear:PF3091P027A	1
24	D391 4069	Pawl:Lock:Cover:Upper:PF3091P077A	1
25	D391 1233	Radial Ball Bearing:DIA6:NS-BRG00110A	1
26	D391 4006	Collar:CL060030FW	1
27	D391 1154	Parallel Pin:2x10:HP020100SCH	3
28	D391 4094	Coil Spring:Pickup:PF3091P342A	1
29	D391 1532	Timing Pulley:Z18XS3M:PF4051P056	1

Index No.	Part No.	Description	Q'ty Per Assembly
30	D391 1589	Gear:Z26:PF4051P025	1
31	D391 1590	Shaft:Lock:Cover:PF3091P209	1
32	D391 1591	Shaft:Coupling:Feed Roller:PF3091P204	1
33	D391 1592	Gear:Z22:PF3091P056	1
34	D391 1593	Gear:Z18:PF3091P099	1
35	D391 1594	Shaft:Pickup Roller:PF3091P206	1
36	D391 1595	Shaft:Feed Roller:PF3091P203	1
37	D391 1596	Gear:Z18:PF3091P054	2
38	D391 1155	Parallel Pin:2x14:HP020140SCH	1
39	B660 4715	Parallel Pin:HP020120SCH	1

12.Inserter Section 6 (D391)

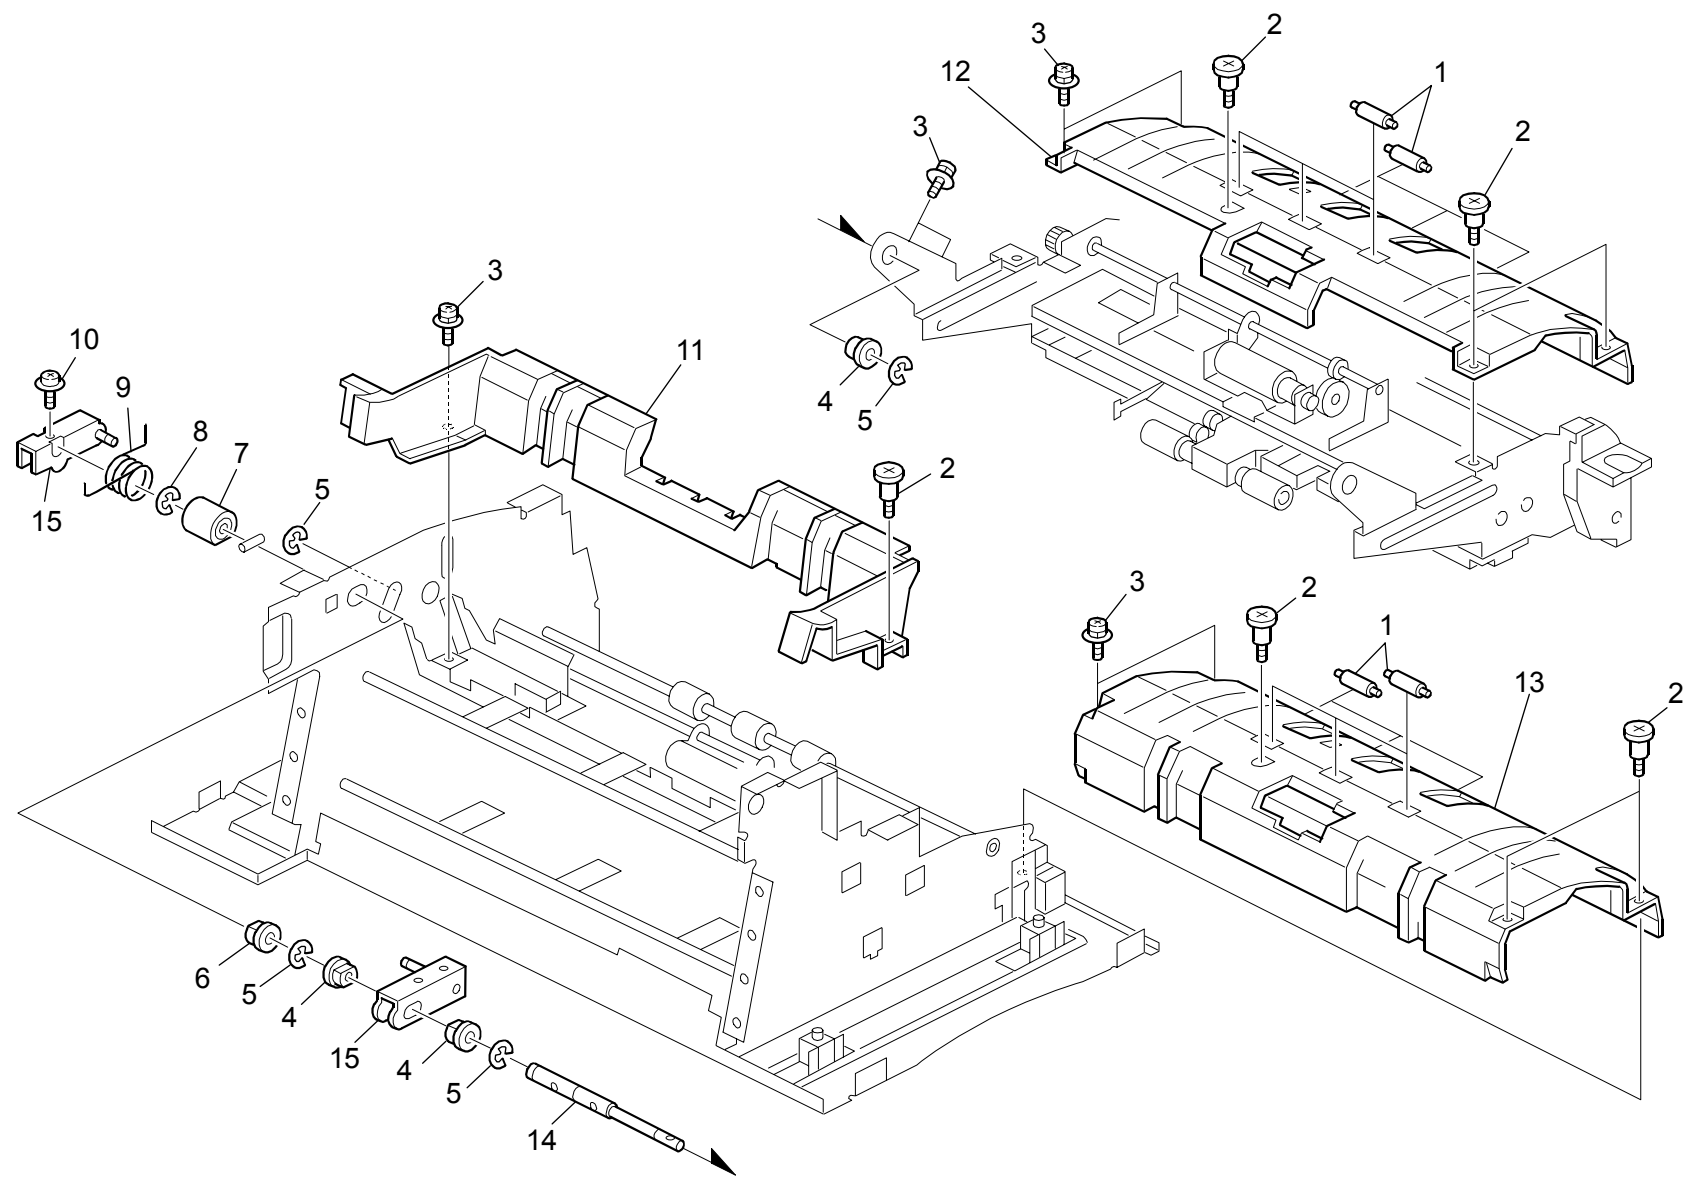


12. Inserter Section 6 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 4073	Roller:PF3091P090A	12
2	D391 4019	Screw:M3:NS-SCR00206A	7
3	D391 1116	Screw With Washer:M3x6:030060FWWS	7
4	D391 4107	Mechanical Roller Clutch:PR5300P429A	3
5	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	4
6	D391 1240	Bushing:NS-MTL00017B	1
7	D391 4074	Case:Support:Coil Spring:PF3091P091A	1
8	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	1
9	D391 4100	Coil Spring:Auxiliary:Cover:Upper: PF3091P363A	1
10	D391 4003	Tapping Screw:M3x6:030060FWIT	1
11	D391 1597	Guide:Bin:Upper:PF3099P009	1
12	D391 1598	Guide:Inner:Bin:Upper:PF3099K100	1
13	D391 1599	Guide:Inner:Bin:PF3099K101	1
14	D391 1600	Shaft:Coupling:PF3091P211	1
15	D391 1601	Bracket:Auxiliary:Cover:PF3091K013	2

Index No.	Part No.	Description	Q'ty Per Assembly

13.Inserter Section 7 (D391)

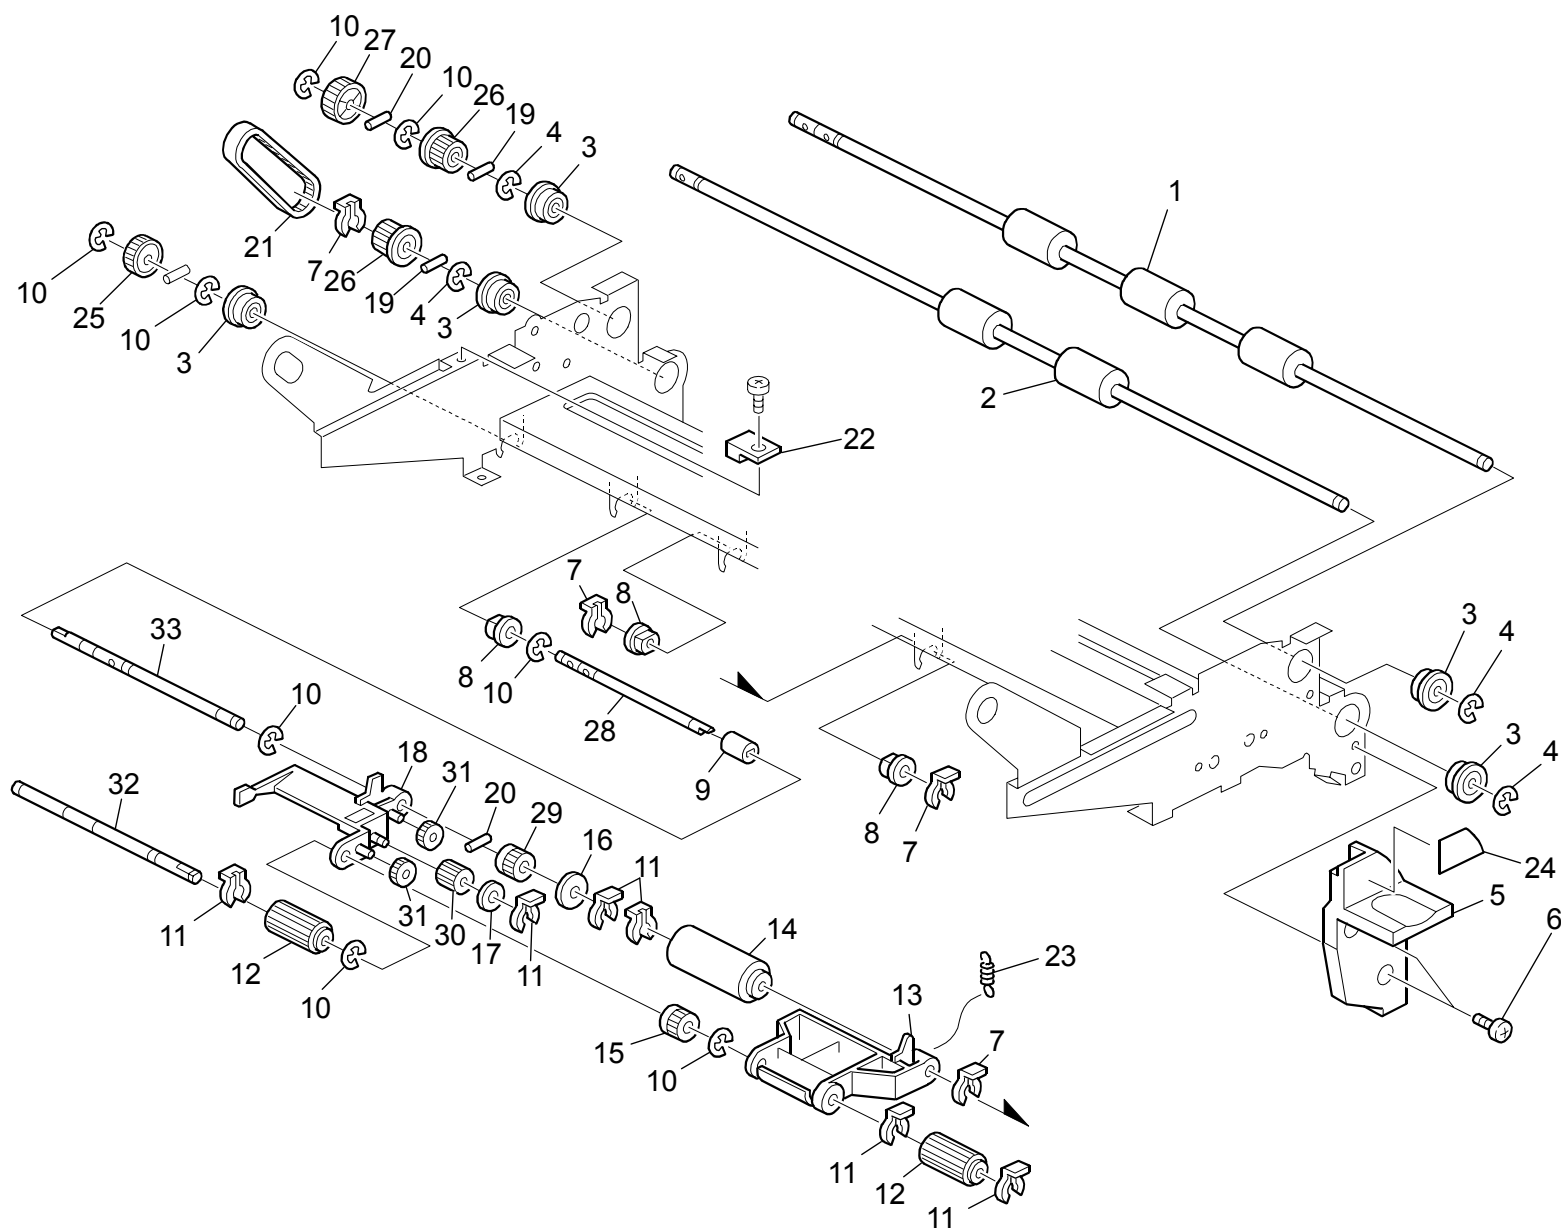


13.Inserter Section 7 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 4087	Registration Roller:Bin:Upper: PF3091P303A	1
2	D391 4090	Transport Roller:PF3091P305A	1
3	D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	5
4	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	4
5	D391 4056	Lever:Open And Close:Middle: PF3091P033A	1
6	B660 4835	Screw:NS-SCR00045A	2
7	D391 4016	Retaining Rings-C:NS-Clip00007A	4
8	B660 4847	Bushing:NS-MTL00009A	3
9	D391 4020	Bushing:PF2166P035C	1
10	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	8
11	B660 4815	External Circlip:NS-CLP00003A	6
12	D391 4086	Pickup Roller:PF3091P302A	2
13	D391 4049	Arm:Pickup:Front:PF3091P026A	1
14	D391 4085	Paper Feed Roller:PF3091P301A	1
15	D391 4091	Gear:Mechanical Roller Clutch: PF3091P306A	1
16	D391 4092	Flange:PF3091P335A	1
17	D391 4104	Flange:PF4062P779A	1
18	D391 4050	Arm:Pickup:Rear:PF3091P027A	1
19	B660 4715	Parallel Pin:HP020120SCH	2
20	D391 1154	Parallel Pin:2x10:HP020100SCH	2
21	D391 1176	Synchronous Belt:NS-BLT00122A	1
22	D391 4072	Control Plate:Thrust:Middle:A PF3091P082	1
23	D391 4094	Coil Spring:Pickup:PF3091P342A	1
24	D391 6546	Decal:Grip:MK1	1
25	D391 1602	Gear:Z20:PF3091P405	1
26	D391 1532	Timing Pulley:Z18XS3M:PF4051P056	2
27	D391 1589	Gear:Z26:PF4051P025	1
28	D391 1591	Shaft:Coupling:Feed Roller:PF3091P204	1
29	D391 1592	Gear:Z22:PF3091P056	1
30	D391 1593	Gear:Z18:PF3091P099	1
31	D391 1596	Gear:Z18:PF3091P054	2

Index No.	Part No.	Description	Q'ty Per Assembly
32	D391 1594	Shaft:Pickup Roller:PF3091P206	1
33	D391 1595	Shaft:Feed Roller:PF3091P203	1

14.Inserter Section 8 (D391)

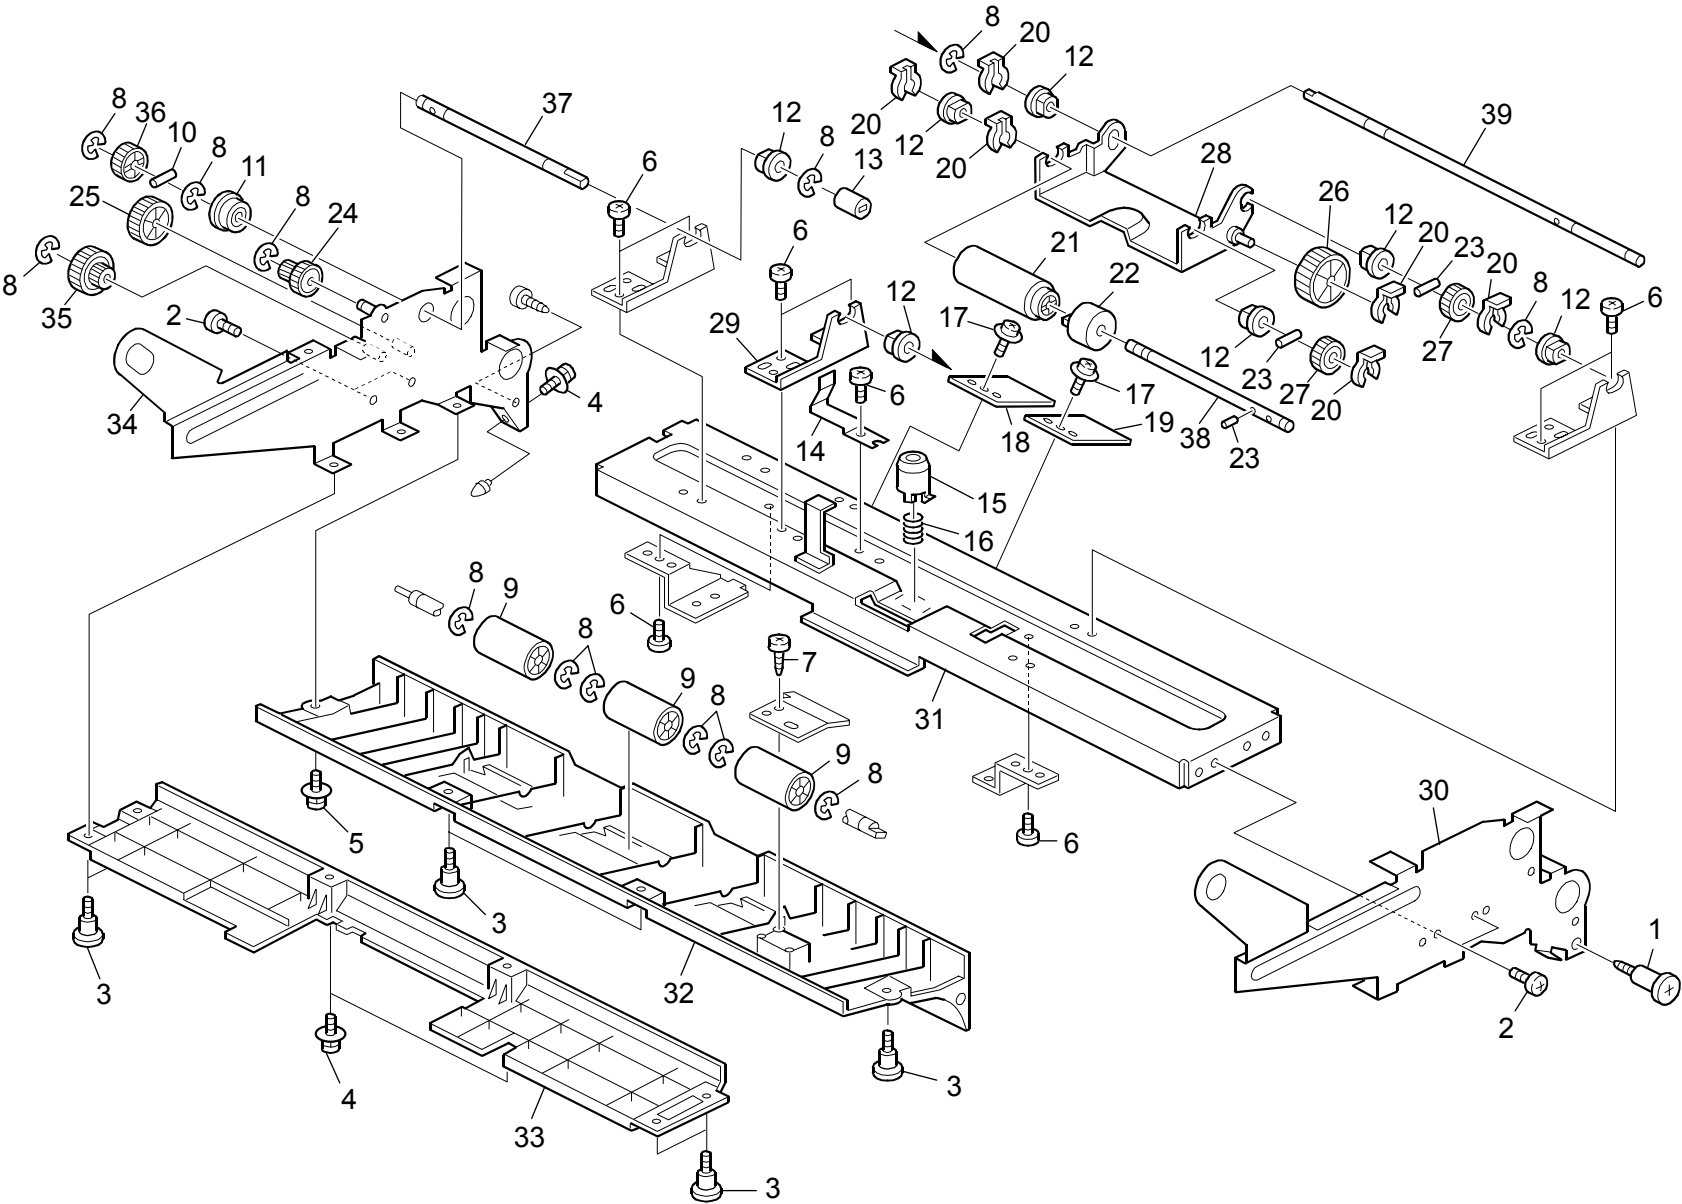


14. Inserter Section 8 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 4106	Tapping Screw:PF4102P123C	1
2	B660 4835	Screw:NS-SCR00045A	4
3	D391 4019	Screw:M3:NS-SCR00206A	7
4	B660 4831	Screw:NS-SCR00016A	3
5	D391 1116	Screw With Washer:M3x6:030060FWWS	1
6	B660 4831	Screw:NS-SCR00016A	9
7	D391 4018	Tapping Screw:M4x8:NS-SCR00053A	1
8	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	13
9	D391 4059	Driven Roller:PF3091P039A	3
10	B660 4711	Parallel Pin:HP020080SCH	1
11	D391 1233	Radial Ball Bearing:DIA6:NS-BRG00110A	1
12	B660 4847	Bushing:NS-MTL00009A	7
13	D391 4020	Bushing:PF2166P035C	1
14	D391 4081	Spring Plate:Roller:Separation: PF3091P160A	1
15	D391 4060	Case:Coil Spring:Separation:PF3091P040A	1
16	D391 4093	Coil Spring:Separation Sub-Unit: PF3091P341A	1
17	D391 4003	Tapping Screw:M3x6:030060FWIT	2
18	D391 4028	Spring Plate:Registration Roller:R: PF3091K173	1
19	D391 4027	Spring Plate:Registration Roller:F: PF3091K172	1
20	B660 4815	External Circlip:NS-CLP00003A	6
21	D391 4084	Roller:Separation:PF3091P300A	1
22	D391 4099	Torque Limiter Mechanical Clutch: PF3091P357A	1
23	B660 4711	Parallel Pin:HP020080SCH	3
24	D391 1603	Gear:Z20/Z14:PF3091P063	1
25	D391 1604	Gear:Z28:PF3091P065	1
26	D391 1605	Gear:Z49:PF3091P098	1
27	D391 1596	Gear:Z18:PF3091P054	2
28	D391 1606	Bracket:Support:Roller:PF3091K104	1
29	D391 1607	Guide Plate:Shaft:Separation: PF3091P183	1

Index No.	Part No.	Description	Q'ty Per Assembly
30	D391 1608	Side Plate:Front:PF3091P105	1
31	D391 1609	Stay:Main:PF3091P107	1
32	D391 1610	Guide:Bin:PF3099K105	1
33	D391 1611	Guide:Pickup:Bin:Lower:PF3091K175	1
34	D391 1612	Side Plate:Rear:PF3091K003	1
35	D391 1602	Gear:Z20:PF3091P405	1
36	D391 1613	Gear:Z28/14:PF3091P062	1
37	D391 1886	Shaft:Contact Point:Roller:PF3091P200	1
38	D391 1887	Shaft:Roller:Separation:PF3091P202	1
39	D391 1888	Shaft:Roller:Separation:PF3091P237	1

15. Insert Section 9 (D391)

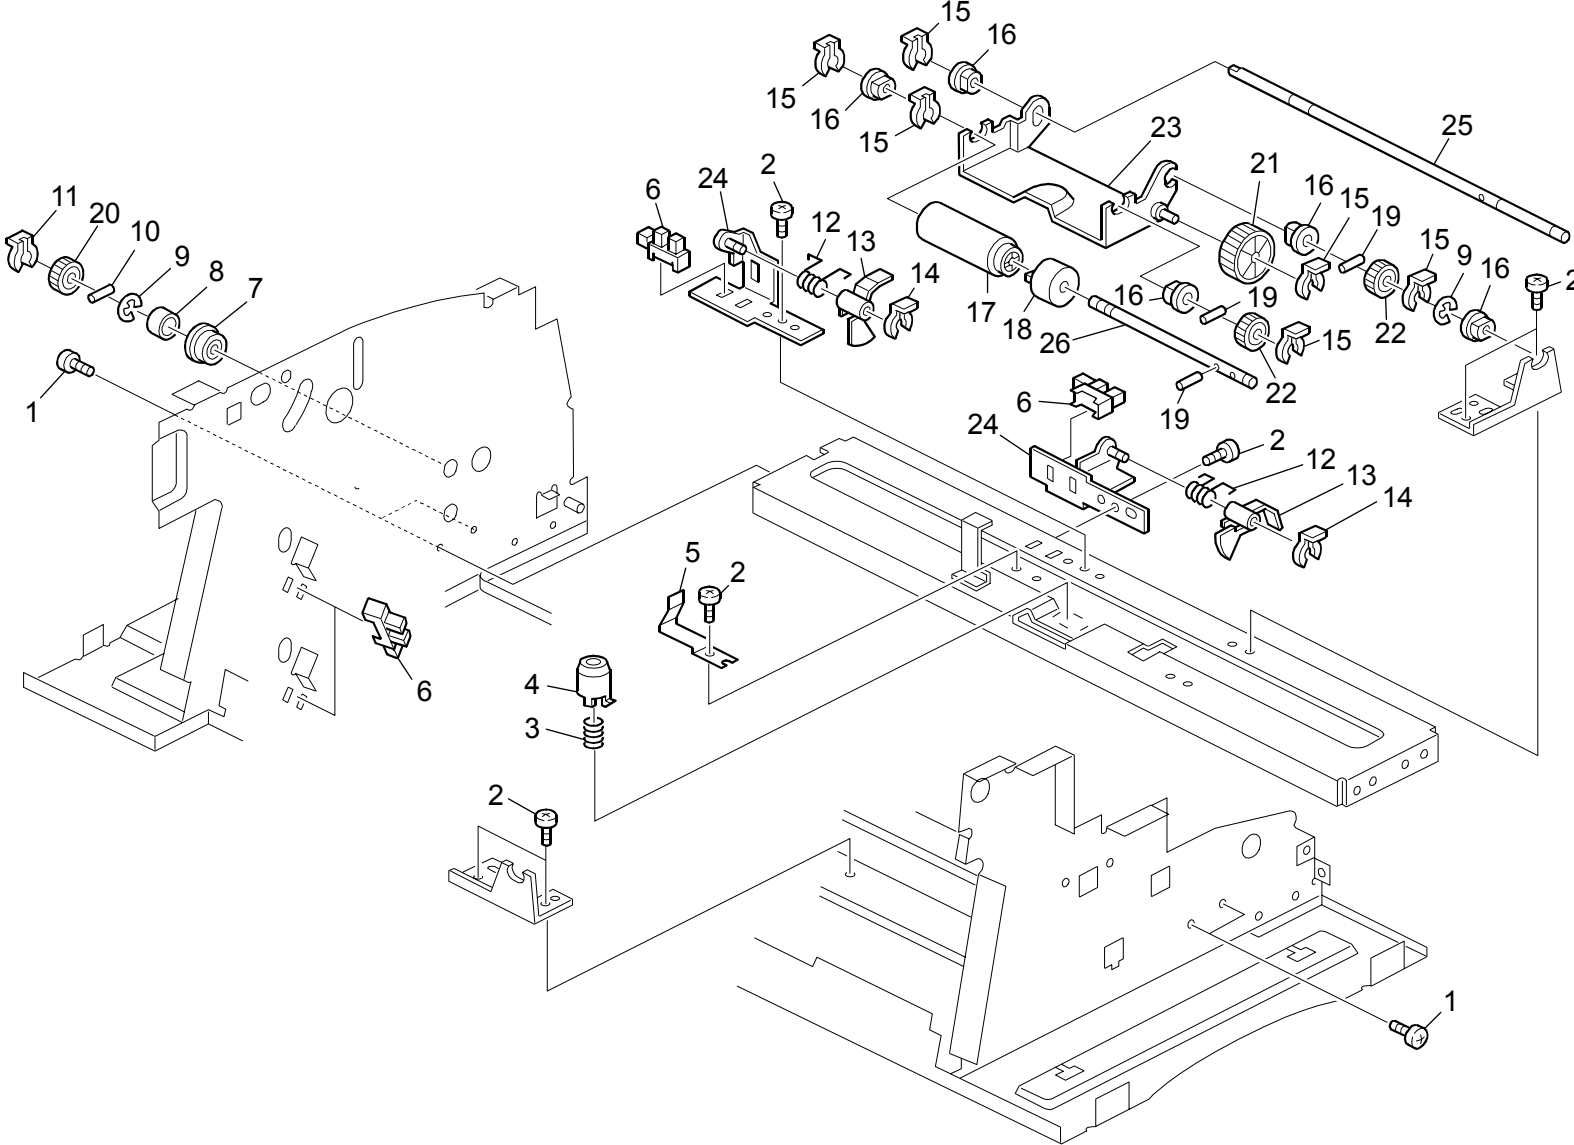


15.Inserter Section 9 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B660 4835	Screw:NS-SCR00045A	4
2	B660 4831	Screw:NS-SCR00016A	7
3	D391 4093	Coil Spring:Separation Sub-Unit: PF3091P341A	1
4	D391 4060	Case:Coil Spring:Separation: PF3091P040A	1
5	D391 4081	Spring Plate:Roller:Separation: PF3091P160A	1
6	D391 5780	Photointerruptor:PF2286P475	4
7	D391 1233	Radial Ball Bearing:DIA6:NS-BRG00110A	1
8	D391 4006	Collar:CL060030FW	1
9	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	2
10	D391 1154	Parallel Pin:2x10:HP020100SCH	1
11	D391 4016	Retaining Rings-C:NS-Clip00007A	1
12	D391 4097	Coil Spring:Registration Sensor:BIN:Lower: PF3091P347A	2
13	D391 4058	Lever:Registration Sensor:Bin:Lower: PF3091P037A	2
14	B660 4811	External Circlip:NS-CLP00001A	2
15	B660 4815	External Circlip:NS-CLP00003A	6
16	B660 4847	Bushing:NS-MTL00009A	5
17	D391 4084	Roller:Separation:PF3091P300A	1
18	D391 4099	Torque Limiter Mechanical Clutch: PF3091P357A	1
19	B660 4711	Parallel Pin:HP020080SCH	3
20	D391 1602	Gear:Z20:PF3091P405	1
21	D391 1605	Gear:Z49:PF3091P098	1
22	D391 1596	Gear:Z18:PF3091P054	2
23	D391 1606	Bracket:Support:Roller:PF3091K104	1
24	D391 1614	Bracket:Registration Sensor:PF3091K008	1
25	D391 1890	Shaft:Contact Point:Roller:PF3091P201	1
26	D391 1887	Shaft:Roller:Separation:PF3091P202	1

Index No.	Part No.	Description	Q'ty Per Assembly

16. Inserter Section 10 (D391)

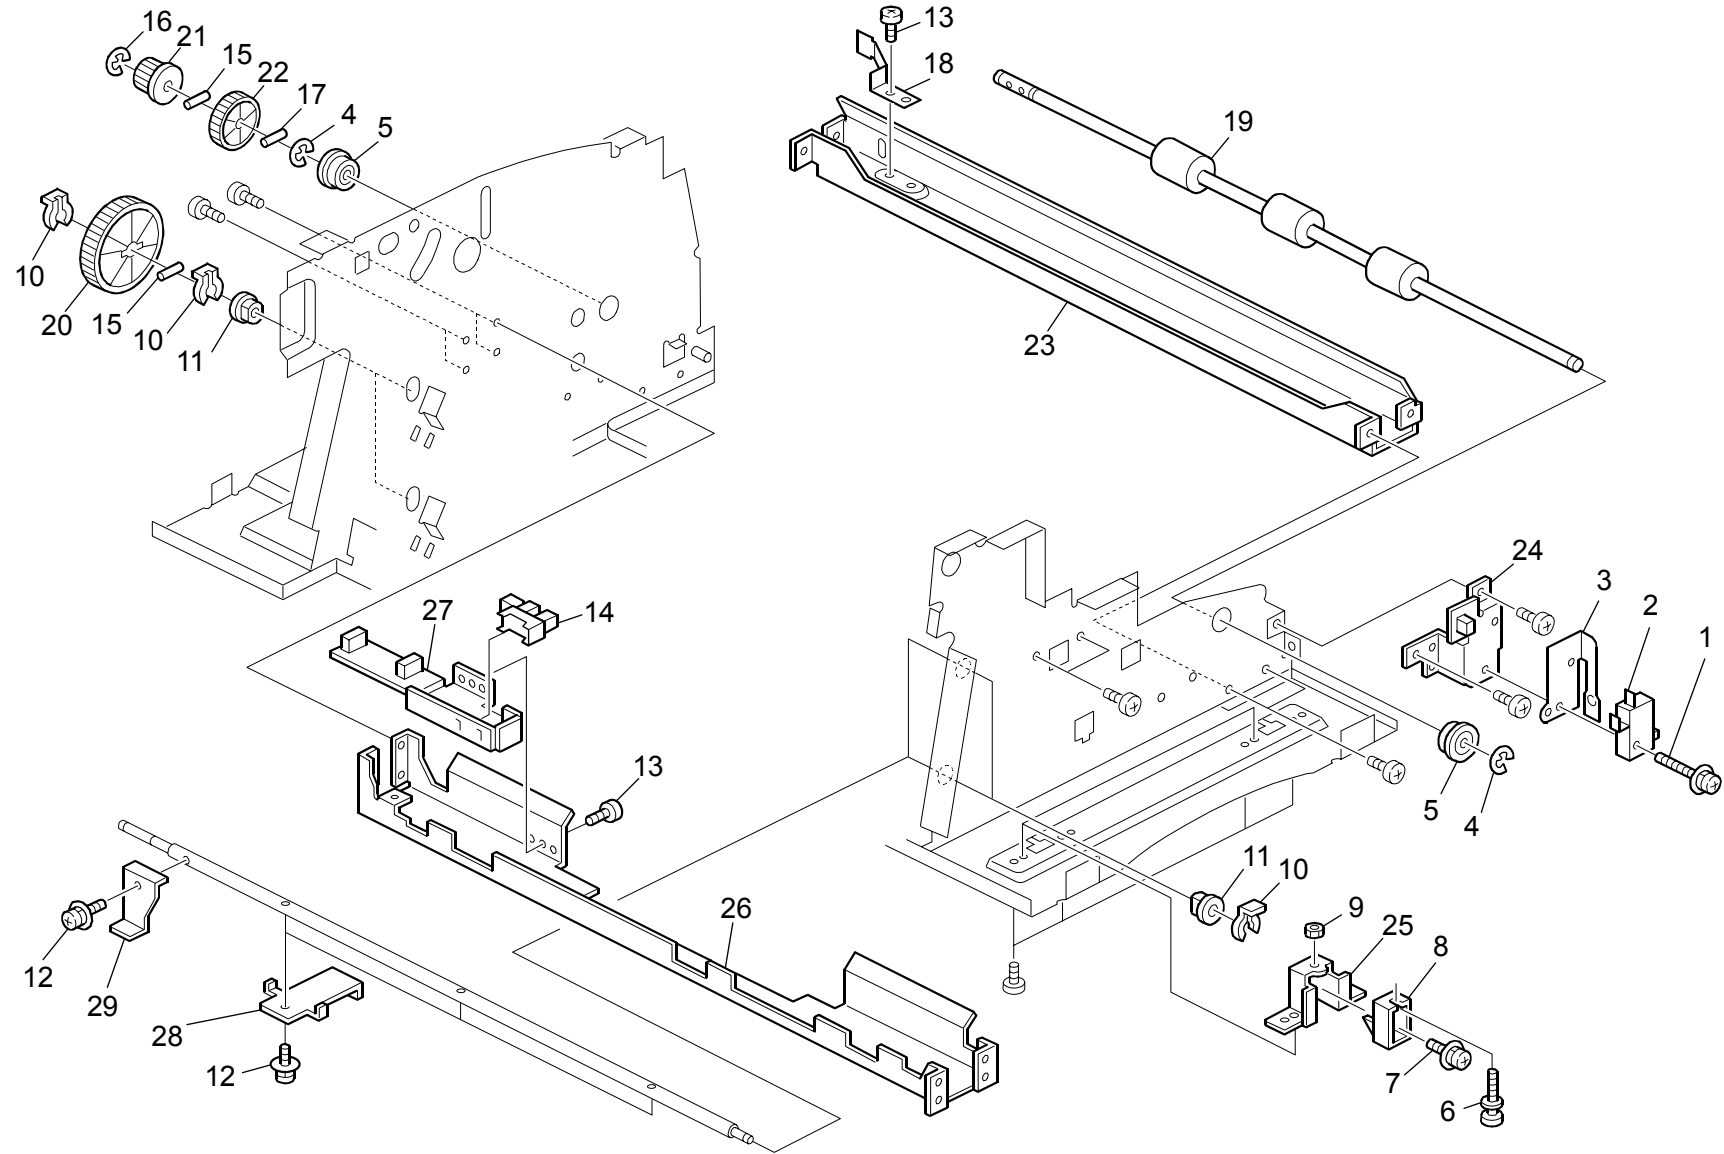


16.Inserter Section 10 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1123	Screw With Washer:M3x16:030160FWWS	1
2	D391 4007	Micro Switch:E120001580	1
3	D391 4079	Spring Plate:On Off Detector:Cover:Upper:PF3091P157A	1
4	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	2
5	D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	2
6	D391 1256	Flat Screw:Adjusting Screw:Hinge:PF2269P385A1	1
7	D391 1116	Screw With Washer:M3x6:030060FWWS	1
8	D391 4071	Adjusting Plate:PF3091P079A	1
9	B660 4751	Nut:NT040FN2	1
10	D391 4016	Retaining Rings-C:NS-Clip00007A	3
11	B660 4847	Bushing:NS-MTL00009A	2
12	D391 1120	Screw With Washer:M3x8:030080FWWS	4
13	B660 4831	Screw:NS-SCR00016A	2
14	D391 5780	Photointerruptor:PF2286P475	1
15	B660 4715	Parallel Pin:HP020120SCH	2
16	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	1
17	D391 1154	Parallel Pin:2x10:HP020100SCH	1
18	D391 4078	Spring Plate:Earth:Cover:Upper:PF3091P156A	1
19	D391 4089	Registration Roller:Bin:Lower:PF3091P304A	1
20	D391 1615	Gear:Z74:PF3091P089	1
21	D391 1532	Timing Pulley:Z18XS3M:PF4051P056	1
22	D391 1616	Gear:Z35:PF3091P088	1
23	D391 1617	Guide:Exit:PF3091P115	1
24	D391 1618	Bracket:Sensor:On Off Detector:PF3091P146	1
25	D391 1619	Bracket:Adjusting Pin:PF3091P134	1
26	D391 1620	Frame:Bin:Lower:PF3091K018	1
27	D391 1621	Bracket:Sensor:Bin:Lower:PF3091P144	1
28	D391 1622	Bracket:Rise:PF3091P137	3
29	D391 1623	Bracket:Sensor:PF3091P141	1

Index No.	Part No.	Description	Q'ty Per Assembly

17. Inserter Section 11 (D391)

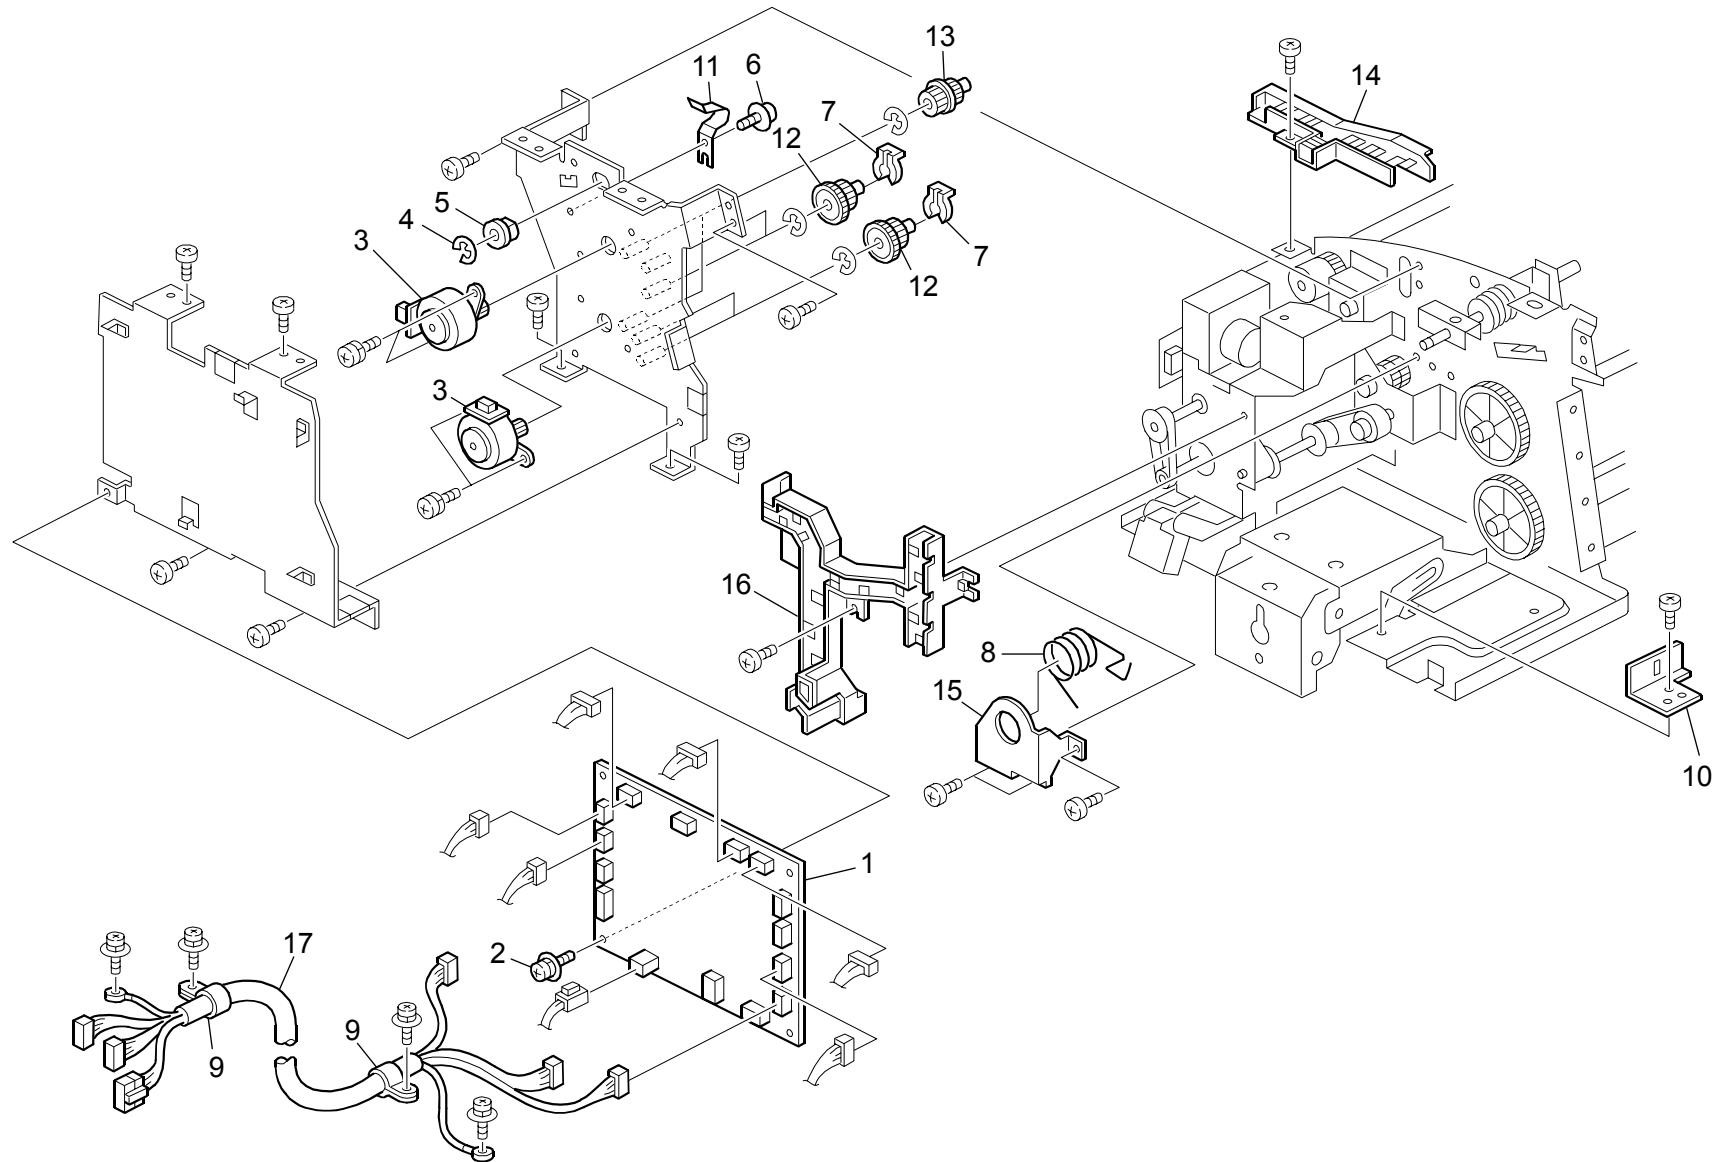


17.Inserter Section 11 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5700	PCB:Paper Feed Unit:Ass'y	1
2	D391 4005	Screw With Washer:M4x8:040080FWWS	1
3	D391 5296	DC Stepper Motor:PF4140R405	2
4	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	1
5	B660 4847	Bushing:NS-MTL00009A	1
6	D391 4003	Tapping Screw:M3x6:030060FWIT	1
7	D391 4016	Retaining Rings-C:NS-Clip00007A	2
8	D391 4101	Coil Spring:Auxiliary:Middle:PF3091P364A	1
9	D391 4009	Nylon Clamp:E450000075	2
10	D391 4108	Bracket:PF3091P171	1
11	D391 1624	Spring Plate:Lock:PF2214P455	1
12	D391 1625	Gear:Z16/Z28:PF4090P241	2
13	D391 1626	Gear:Z28/Z16:PF3091P086	1
14	D391 1627	Duct:Upper:PF3091P095	1
15	D391 1628	Holder:Coil Spring:Auxiliary:PF3091P176	1
16	D391 1629	Duct:Main:PF3091P094	1
17	D391 1905	Harness:Interface Section:PF3091K316	1

Index No.	Part No.	Description	Q'ty Per Assembly

18.Inserter Section 12 (D391)

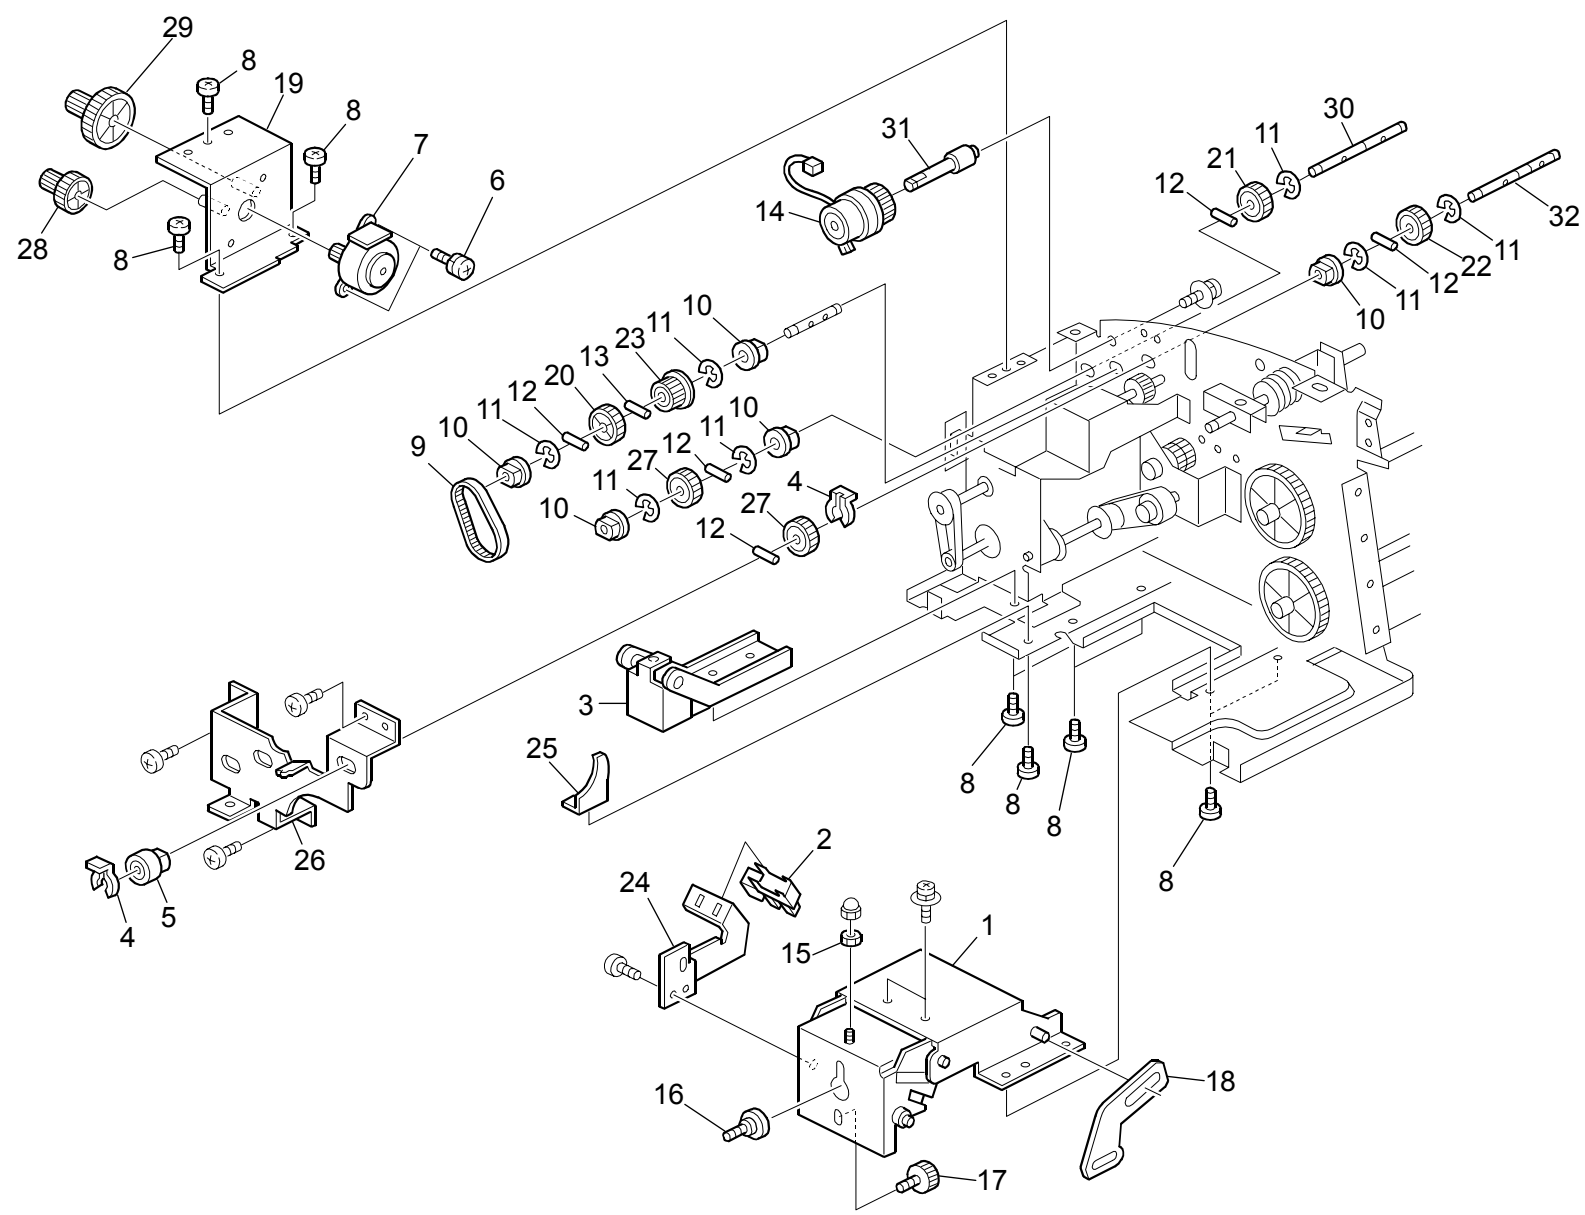


18. Inserter Section 12 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 4023	Hinge:Main:PF3091K120A:Ass'y	1
2	D391 5780	Photointerruptor:PF2286P475	1
3	D391 4024	Hinge:Sub:PF3091K122A:Ass'y	1
4	D391 4016	Retaining Rings-C:NS-Clip00007A	2
5	D391 1255	Mechanical Roller Clutch:Joint: PF2268P344B	1
6	D391 1114	Washer:M3x6:030060FWSW	2
7	D391 5785	DC Stepper Motor:PF3091P500	1
8	B660 4835	Screw:NS-SCR00045A	10
9	D391 4013	Synchronous Belt:NS-BLT00166A	1
10	B660 4847	Bushing:NS-MTL00009A	5
11	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	7
12	D391 1154	Parallel Pin:2x10:HP020100SCH	5
13	B660 4715	Parallel Pin:HP020120SCH	1
14	D391 5784	Electromagnetic Clutch:PF3091K345	1
15	D391 4110	Nut:PF3091P339	1
16	D391 4111	Screw:PF3091P352	1
17	D391 4112	Screw:PF3091P356	1
18	D391 4109	Stopper:Hinge:PF3091P185	1
19	D391 1630	Bracket:DC Stepper Motor:PF3091K010	1
20	D391 1604	Gear:Z28:PF3091P065	1
21	D391 1631	Gear:Z18:PF3091P069	1
22	D391 1632	Gear:Z20:PF3091P067	1
23	D391 1532	Timing Pulley:Z18XS3M:PF4051P056	1
24	D391 1633	Bracket:Sensor:On Off Detector: PF3091P150	1
25	D391 1634	Bracket:Sensor:On Off Detector: PF3091P149	1
26	D391 1635	Bracket:Drive:Registration:PF3091P127	1
27	D391 1602	Gear:Z20:PF3091P405	2
28	D391 1636	Gear:Z16/Z40:PF3091P404	1
29	D391 1637	Gear:Z16/Z60:PF3091P407	1
30	D391 1891	Shaft:Bin:Upper:PF3091P223	1
31	D391 1892	Shaft:Electromagnetic Clutch:PF3091P266	1
32	D391 1893	Shaft:Separation:PF3091P224	1

Index No.	Part No.	Description	Q'ty Per Assembly

19.Inserter Section 13 (D391)

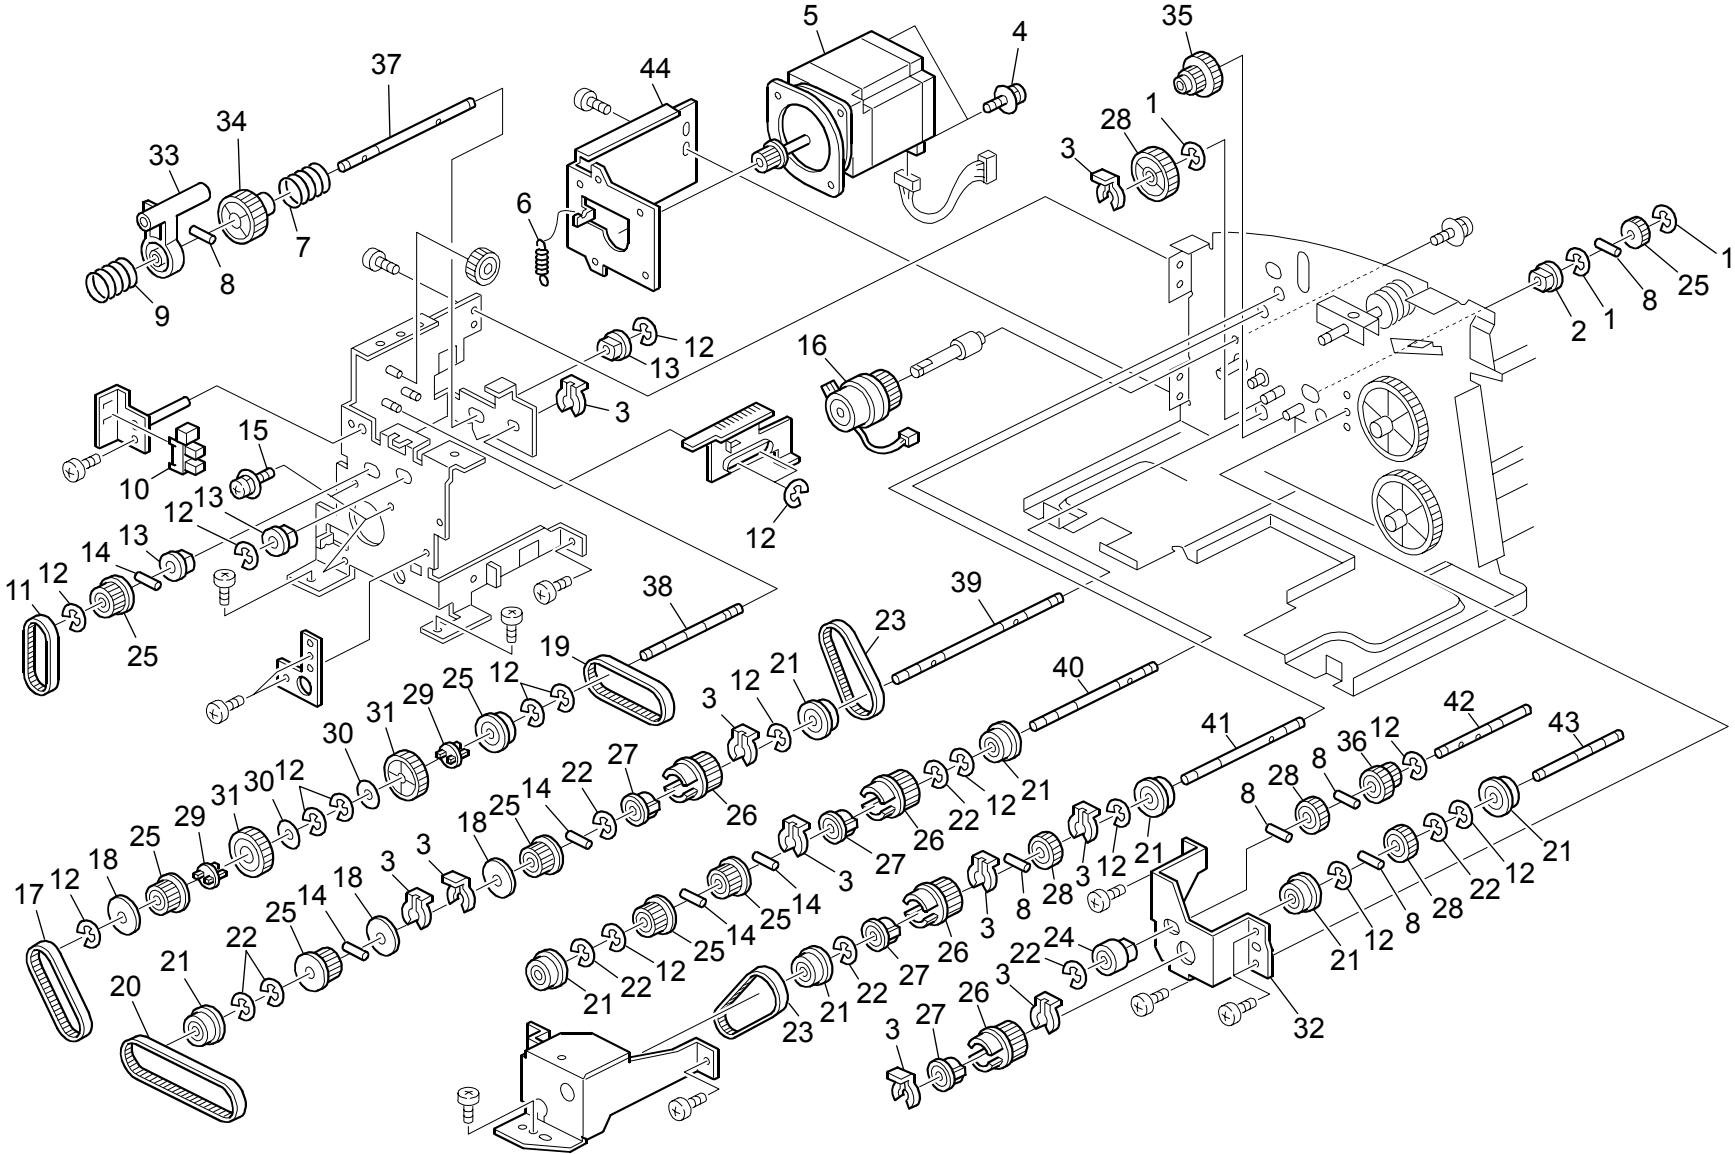


19. Inserter Section 13 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	3
2	B660 4846	Bushing:NS-MTL00004A	1
3	D391 4016	Retaining Rings-C:NS-Clip00007A	10
4	D391 4005	Screw With Washer:M4x8:040080FWWS	2
5	D391 5783	DC Stepper Motor:PF3091K330	1
6	D391 4098	Coil Spring:Tension:PF3091P351A	1
7	D391 4102	Coil Spring:PF3091P400A	1
8	D391 1154	Parallel Pin:2x10:HP020100SCH	6
9	D391 4103	Coil Spring:Gear:PF3091P401A	1
10	D391 5780	Photointerruptor:PF2286P475	1
11	D391 4015	Synchronous Belt:NS-BLT00381A	1
12	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	17
13	B660 4847	Bushing:NS-MTL00009A	3
14	B660 4715	Parallel Pin:HP020120SCH	5
15	D391 1130	Washer:M4x8:040080FWSW	3
16	D391 5784	Electromagnetic Clutch:PF3091K345	1
17	D391 4014	Synchronous Belt:NS-BLT00344A	1
18	D391 4105	Flange:PF4099P223A	3
19	D391 4011	Synchronous Belt:NS-BLT00121A	1
20	D391 4012	Synchronous Belt:NS-BLT00126A	1
21	D391 1233	Radial Ball Bearing:DIA6:NS-BRG00110A	8
22	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	8
23	D391 4013	Synchronous Belt:NS-BLT00166A	2
24	D391 1255	Mechanical Roller Clutch:Joint: PF2268P344B	1
25	D391 1532	Timing Pulley:Z18XS3M:PF4051P056	8
26	D391 1644	Timing Pulley:T24:PF2269P057	4
27	D391 1529	Joint:PF2268P344	4
28	D391 1602	Gear:Z20:PF3091P405	4
29	D391 1638	Joint:DIA6:PF3091P097	2
30	D391 1640	Slider:PW060050	2
31	D391 1641	Gear:Z30:PF3091P410	2
32	D391 1639	Bracket:Drive:Registration:PF3091P128	1
33	D391 1642	Lever:Pressure:PF3091P406	1
34	D391 1643	Gear:Z30:PF3091P085	1


Index No.	Part No.	Description	Q'ty Per Assembly
35	D391 1616	Gear:Z35:PF3091P088	1
36	D391 1603	Gear:Z20/Z14:PF3091P063	1
37	D391 1894	Shaft:Drive:Change:PF3091P235	1
38	D391 1895	Shaft:Drive:Change:PF3091P234	1
39	D391 1896	Shaft:Middle:Bin:Lower:PF3091P228	1
40	D391 1897	Shaft:Separation:Bin:Lower:PF3091P222	1
41	D391 1898	Shaft:Separation:Bin:Upper:PF3091P220	1
42	D391 1899	Shaft:Separation:Bin:Lower:PF3091P226	1
43	D391 1900	Shaft:Separation:Bin:Lower:PF3091P225	1
44	D391 4141	Bracket:Motor:PF3091P179	1

20.Vertical Feed Section 1 (D391)

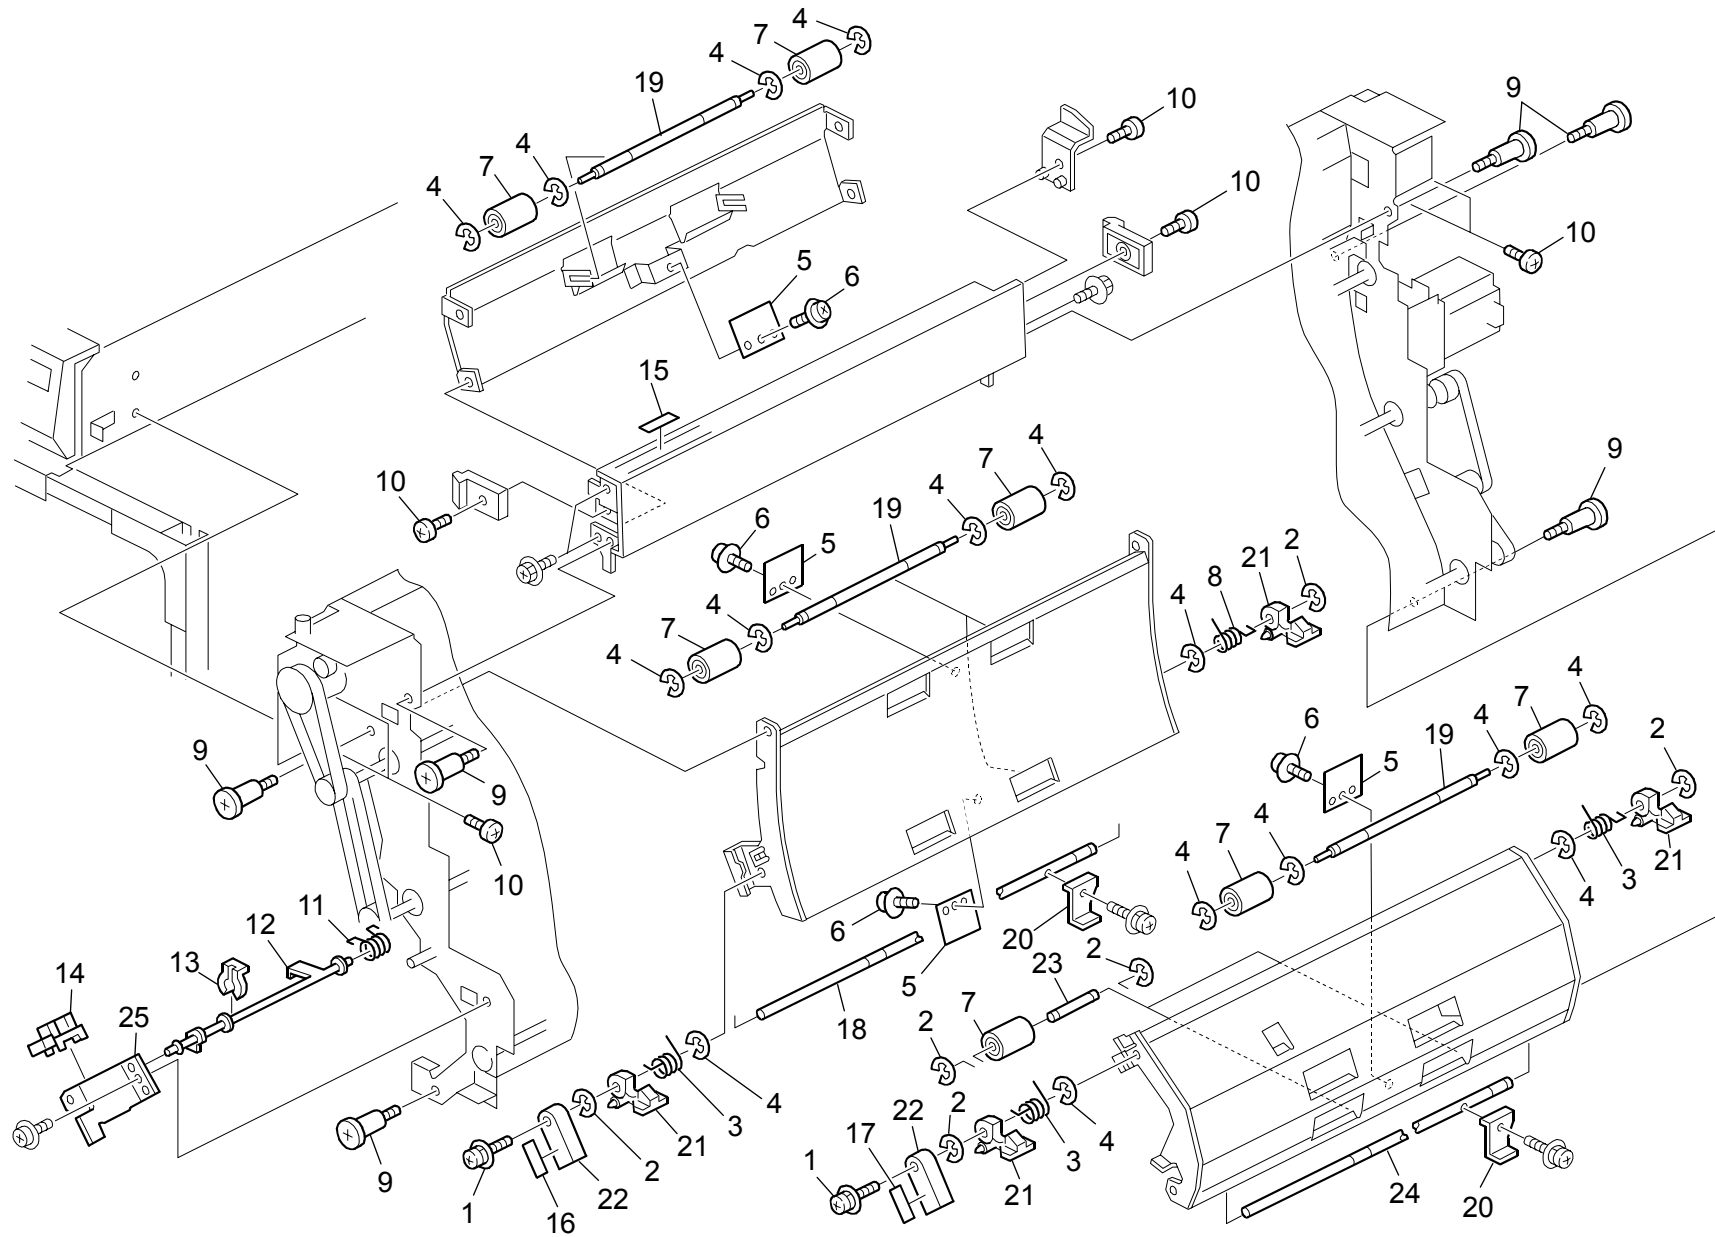



21.Vertical Feed Section 2 (D391)

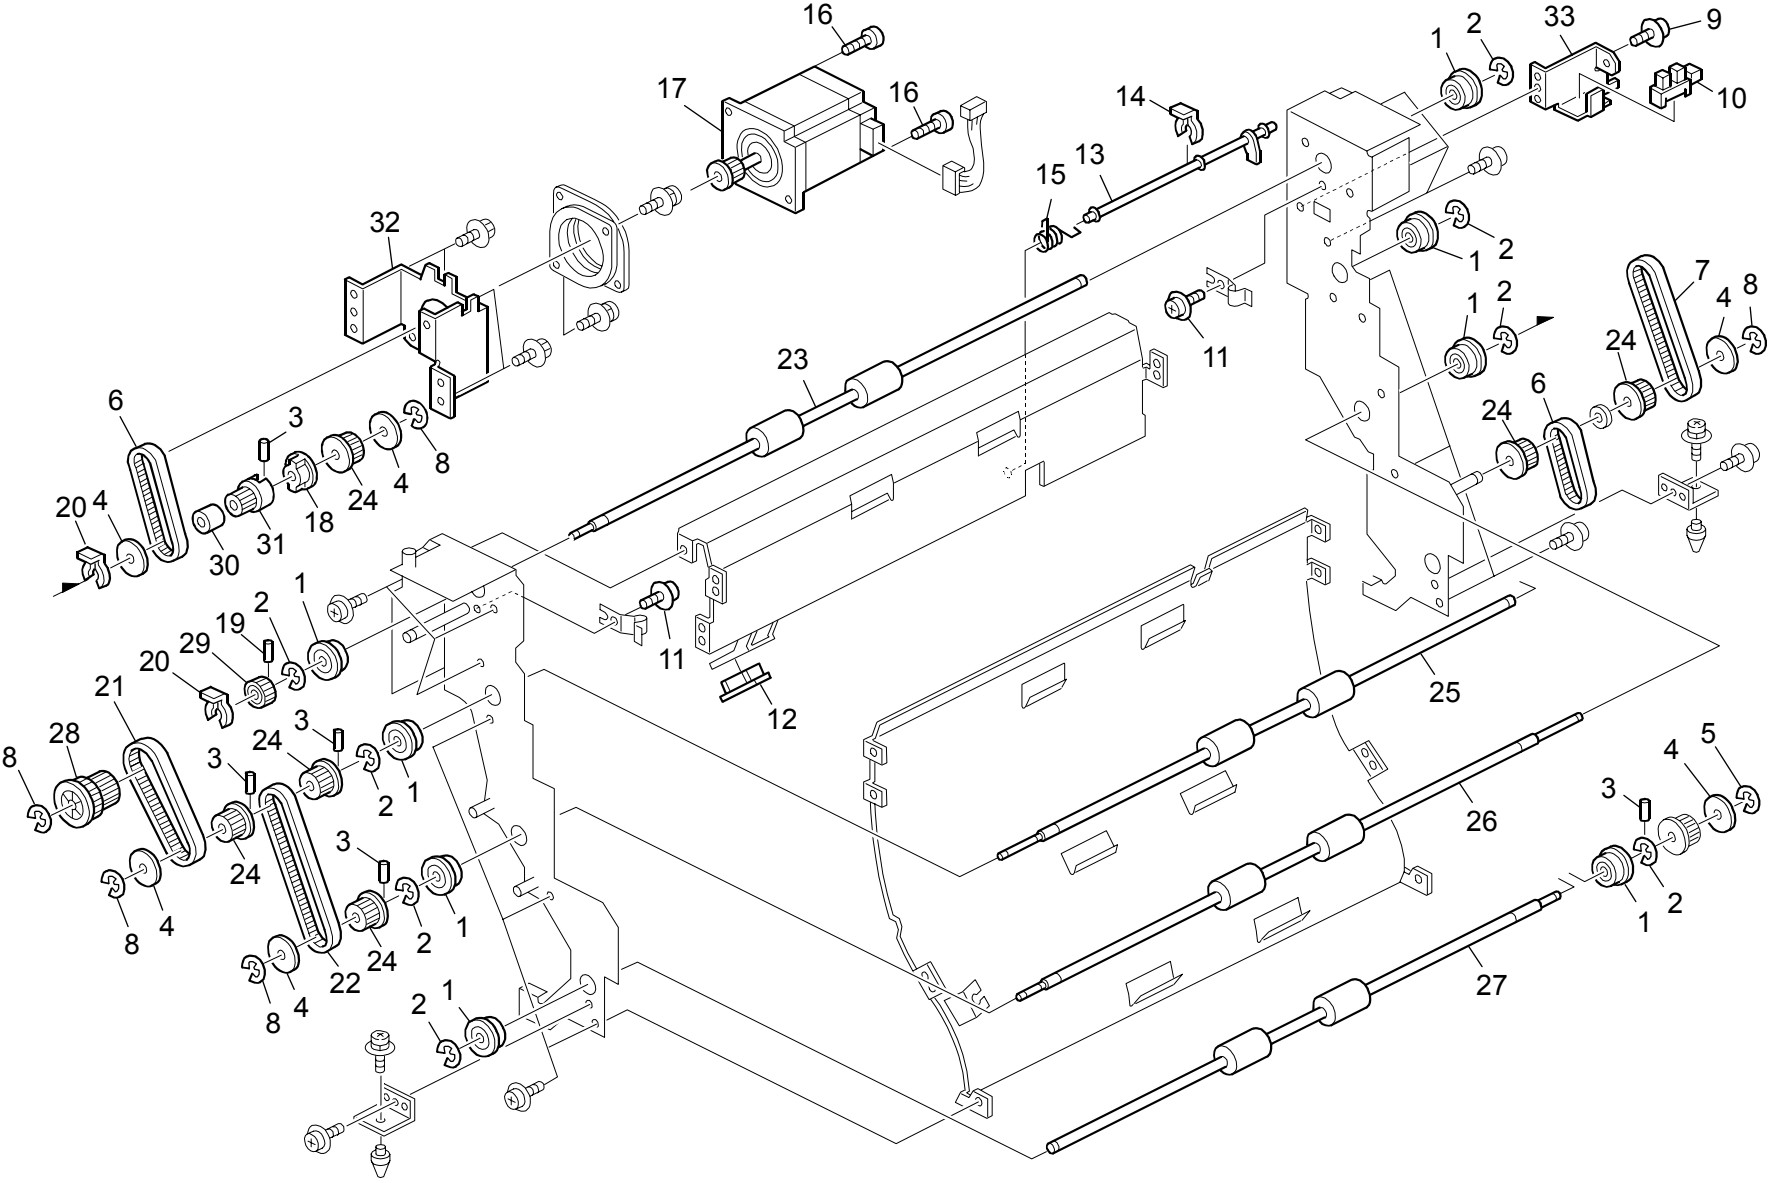


21.Vertical Feed Section 2 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	8
2	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	8
3	B660 4715	Parallel Pin:HP020120SCH	5
4	D391 4105	Flange:PF4099P223A	6
5	D391 1149	Retaining Rings-E:DIA4:ER040SU-D	1
6	D391 1208	Synchronous Belt:NS-BLT00387B	2
7	D391 1177	Synchronous Belt:NS-BLT00128B	1
8	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	5
9	D391 1130	Washer:M4x8:040080FWSW	1
10	D391 5254	Photointerruptor:PF2286P475	1
11	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	2
12	D391 1262	Magnetic:40N:PF3091P854A	1
13	B660 1651	Sensor Lever	1
14	D391 4016	Retaining Rings-C:NS-Clip00007A	1
15	D391 1260	Coil Spring:Registration Sensor:Bin:Upper: PF3091P346	1
16	D391 1130	Washer:M4x8:040080FWSW	2
17	D391 5255	DC Stepper Motor:PF3091K335	1
18	D391 1255	Mechanical Roller Clutch:Joint: PF2268P344B	1
19	D391 1154	Parallel Pin:2x10:HP020100SCH	1
20	B660 4815	External Circlip:NS-CLP00003A	2
21	D391 1207	Synchronous Belt:NS-BLT00386B	1
22	D391 1178	Synchronous Belt:NS-BLT00136B	1
23	D391 1531	Transport Roller:PF3091P850	1
24	D391 1532	Timing Pulley:Z18XS3M:PF4051P056	6
25	D391 1533	Transport Roller:PF3091P851	1
26	D391 1534	Transport Roller:PF3091P852	1
27	D391 1535	Transport Roller:PF3091P853	1
28	D391 1536	Gear:Z24:PF3091P833	1
29	D391 1537	Gear:Z16:PF4090P168	1
30	D391 1529	Joint:PF2268P344	1
31	D391 1530	Timing Pulley:Z14XS3M:PF3091P611	1
32	D391 2198	Bracket:Motor:PF3091P822	1
33	D391 2197	Bracket:Sensor:Transport:PF3091P818	1

Index No.	Part No.	Description	Q'ty Per Assembly

22.Signature Transport Section 1 (D391)

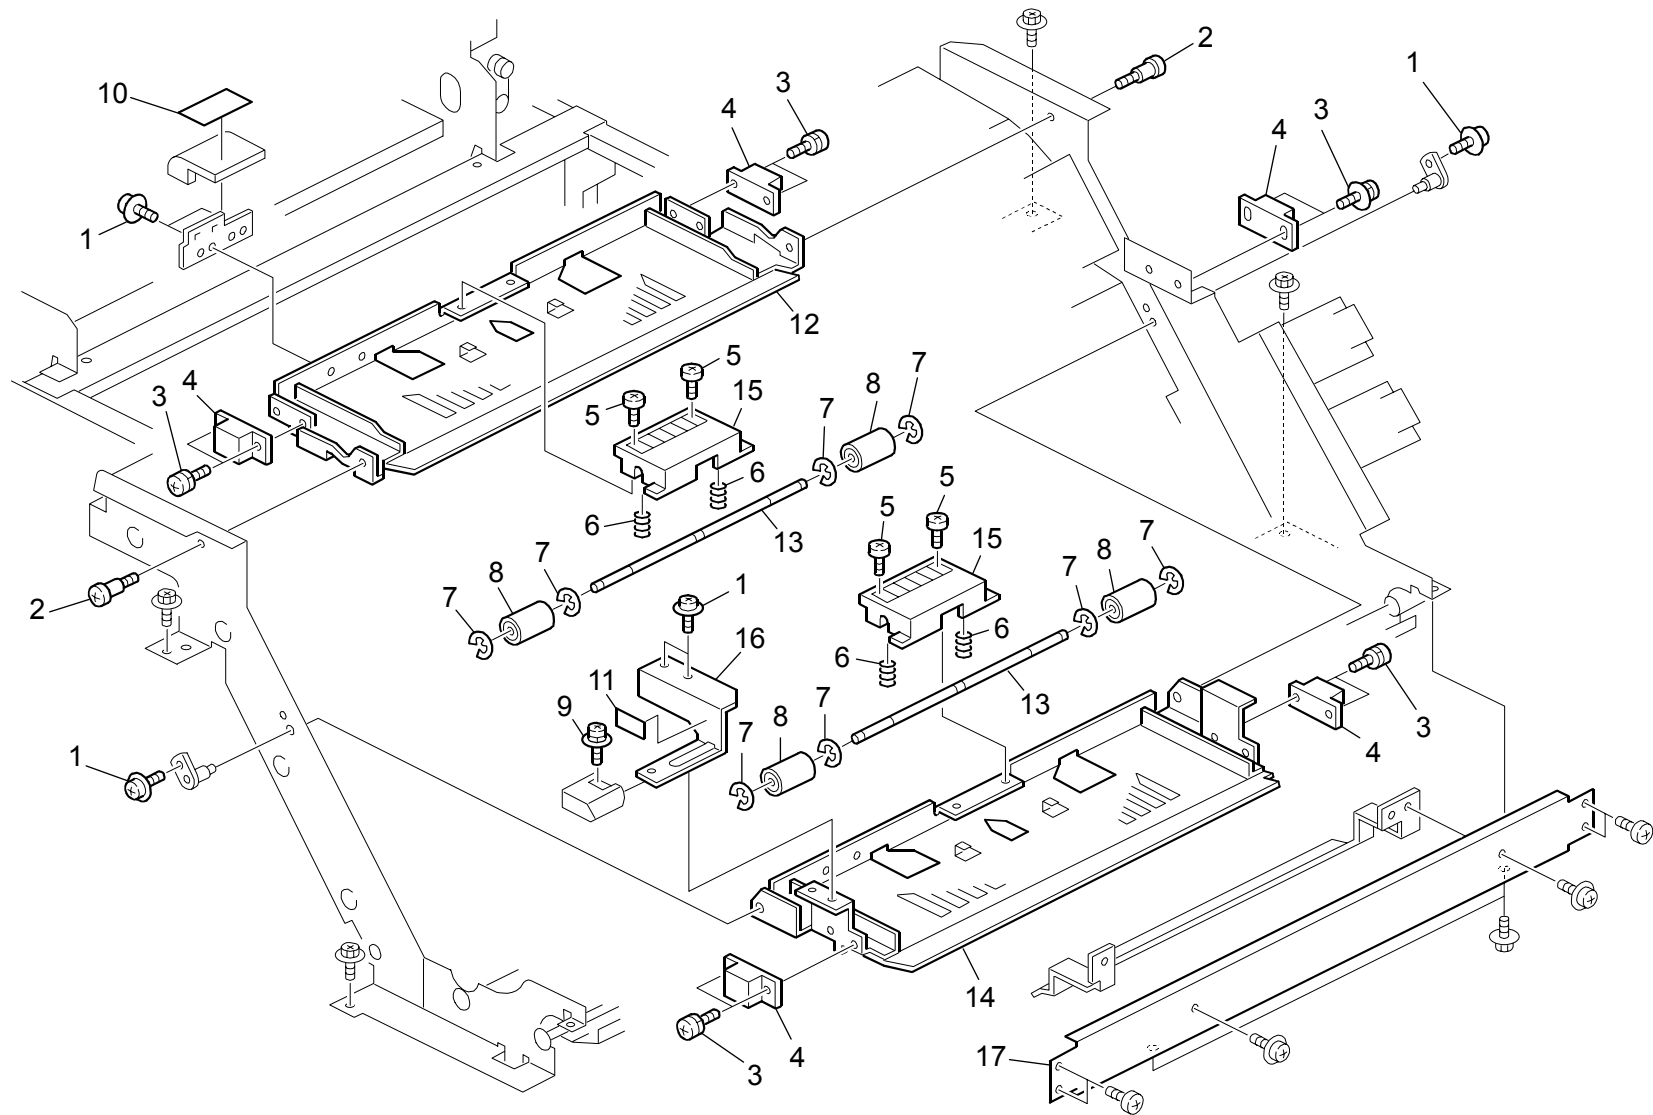


22.Signature Transport Section 1 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	6
2	D391 1264	Screw:PF4103P331B	2
3	D391 1114	Washer:M3x6:030060FWSW	10
4	B660 1111	Magnet Catch	5
5	D391 1113	Screw:M3x6:030060FNBI	4
6	D391 1281	Coil Spring:Roller:PF4140P106A1	4
7	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	8
8	D391 1258	Driven Roller:PF3091P039A1	4
9	D391 1120	Screw With Washer:M3x8:030080FWWS	1
10	D391 6510	Decal:Set:Lever:1	1
11	D391 6520	Decal:Set:Lever:2	1
12	D391 1538	Guide:PF4140P129	1
13	D391 1539	Shaft:Roller:PF4140P117	1
14	D391 1540	Guide:PF4140P124	1
15	D391 1541	Holder:Roller:PF4140P107	1
16	D391 2199	Grip:Feed:PF4140P125	1
17	D391 2200	Stay:Slide Rail:PF4140P014	1

Index No.	Part No.	Description	Q'ty Per Assembly

23. Signature Transport Section 2 (D391)

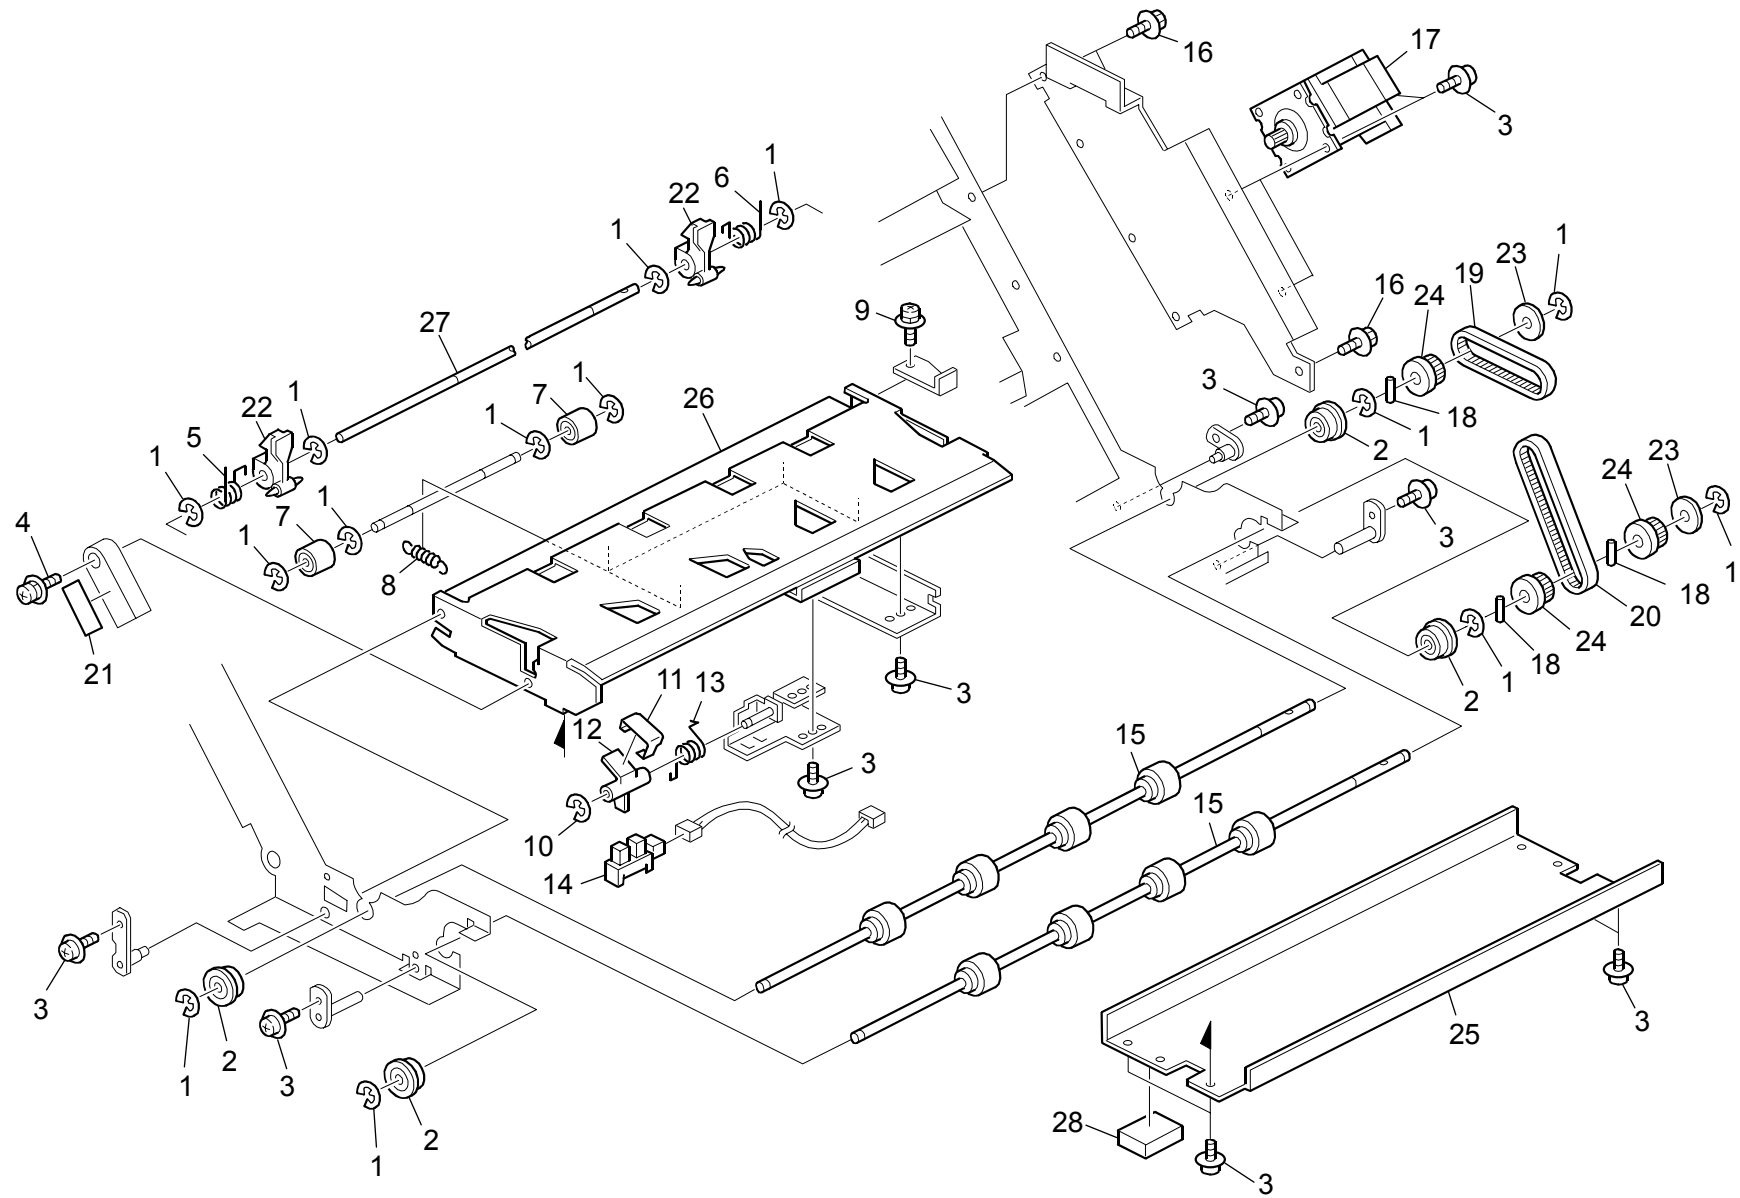


23. Signature Transport Section 2 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	26
2	D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	4
3	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	12
4	D391 1120	Screw With Washer:M3x8:030080FWWS	1
5	D391 1104	Torsion Spring:Front:PF4099P804B	1
6	D391 1105	Torsion Spring:Rear:PF4099P805B	1
7	D391 1350	Roller:PF4140P958A	8
8	D391 1339	Coil Spring:Transport Roller:PF4140P700A1	4
9	D391 1114	Washer:M3x6:030060FWSW	1
10	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	1
11	D391 1298	Spring Plate:Paper Sensor:Surface: PF4140P237B	1
12	D391 1282	Lever:Transport Sensor:PF4140P112B1	1
13	D391 1285	Coil Spring:Lever:Sensor:PF4140P132	1
14	D391 5254	Photointerruptor:PF2286P475	1
15	D391 1290	Roller:Entrance:PF4140P147A1	2
16	B660 4835	Screw:NS-SCR00045A	5
17	D391 5270	DC Stepper Motor:PF4140K631	1
18	B660 4715	Parallel Pin:HP020120SCH	3
19	D391 1198	Synchronous Belt:NS-BLT00365C	1
20	D391 1200	Synchronous Belt:NS-BLT00377B	1
21	D391 6510	Decal:Set:Lever:1	1
22	D391 1523	Arm:Lock:PF4140P120	2
23	D391 1662	Flange:15mm:PF4099P225	2
24	D391 1544	Timing Pulley:S2M:PF4140P631	2
25	D391 1545	Cover:Guide:PF4140P137	3
26	D391 1546	Guide:Entrance:PF4140P134	1
27	D391 1902	Shaft:Latch:Transport:PF4140P110	1
28	D391 2201	Guide:Entrance:Rubber:33-44-10: PF4140P115	1

Index No.	Part No.	Description	Q'ty Per Assembly

24.Signature Transport Section 3 (D391)

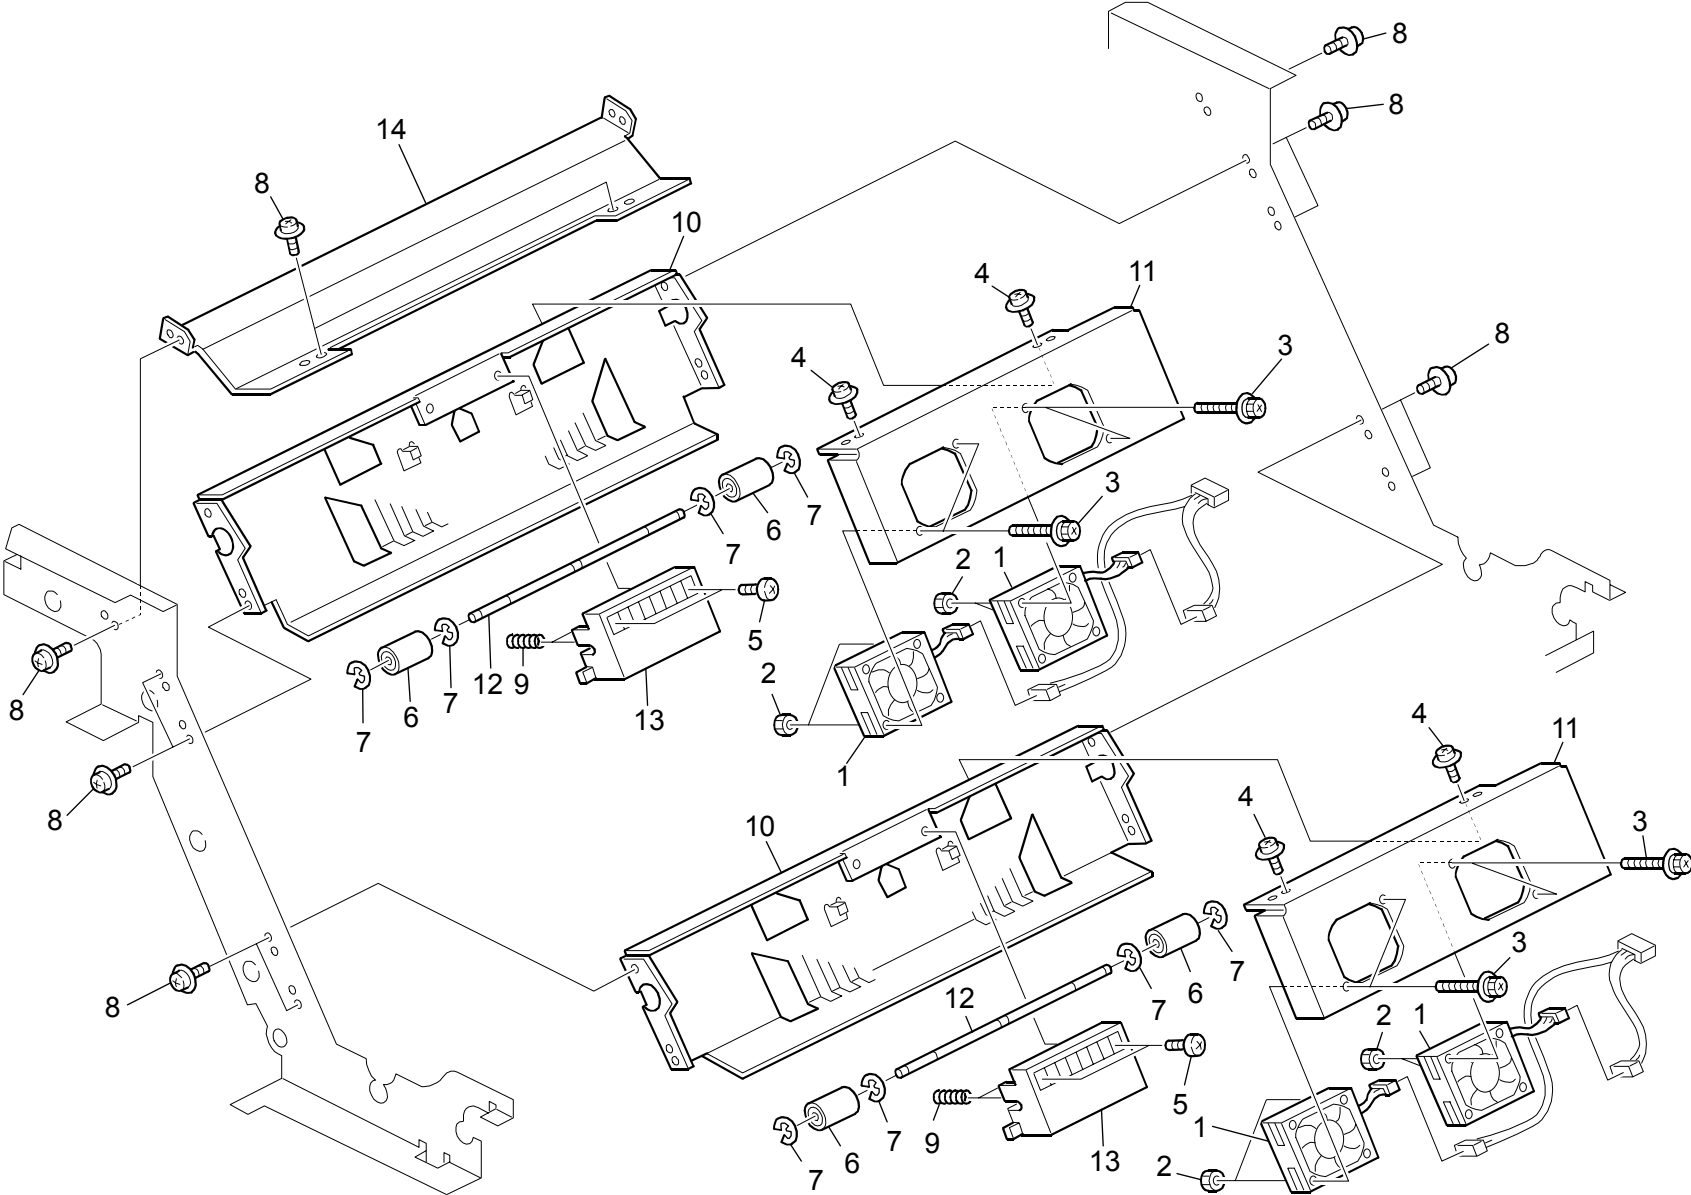


24. Signature Transport Section 3 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5297	DC Fan Motor:PF4140R406	4
2	D391 1249	Flanged Hexagonal Nut:NT030FN2	8
3	D391 1124	Pan Head Screw:Spring Washer: 030300FWWS	8
4	D391 1168	Tapping Screw:IR4016P167A	4
5	D391 1113	Screw:M3x6:030060FNBI	4
6	D391 1258	Driven Roller:PF3091P039A1	4
7	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	8
8	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	12
9	D391 1281	Coil Spring:Roller:PF4140P106A1	4
10	D391 1547	Guide Plate:Feed:PF4140P100	2
11	D391 1548	Bracket:Fan:PF4140P104	2
12	D391 1539	Shaft:Roller:PF4140P117	2
13	D391 1541	Holder:Roller:PF4140P107	2
14	D391 1549	Guide Plate:Sub:PF4140P157	1

Index No.	Part No.	Description	Q'ty Per Assembly

25.Signature Transport Section 4 (D391)

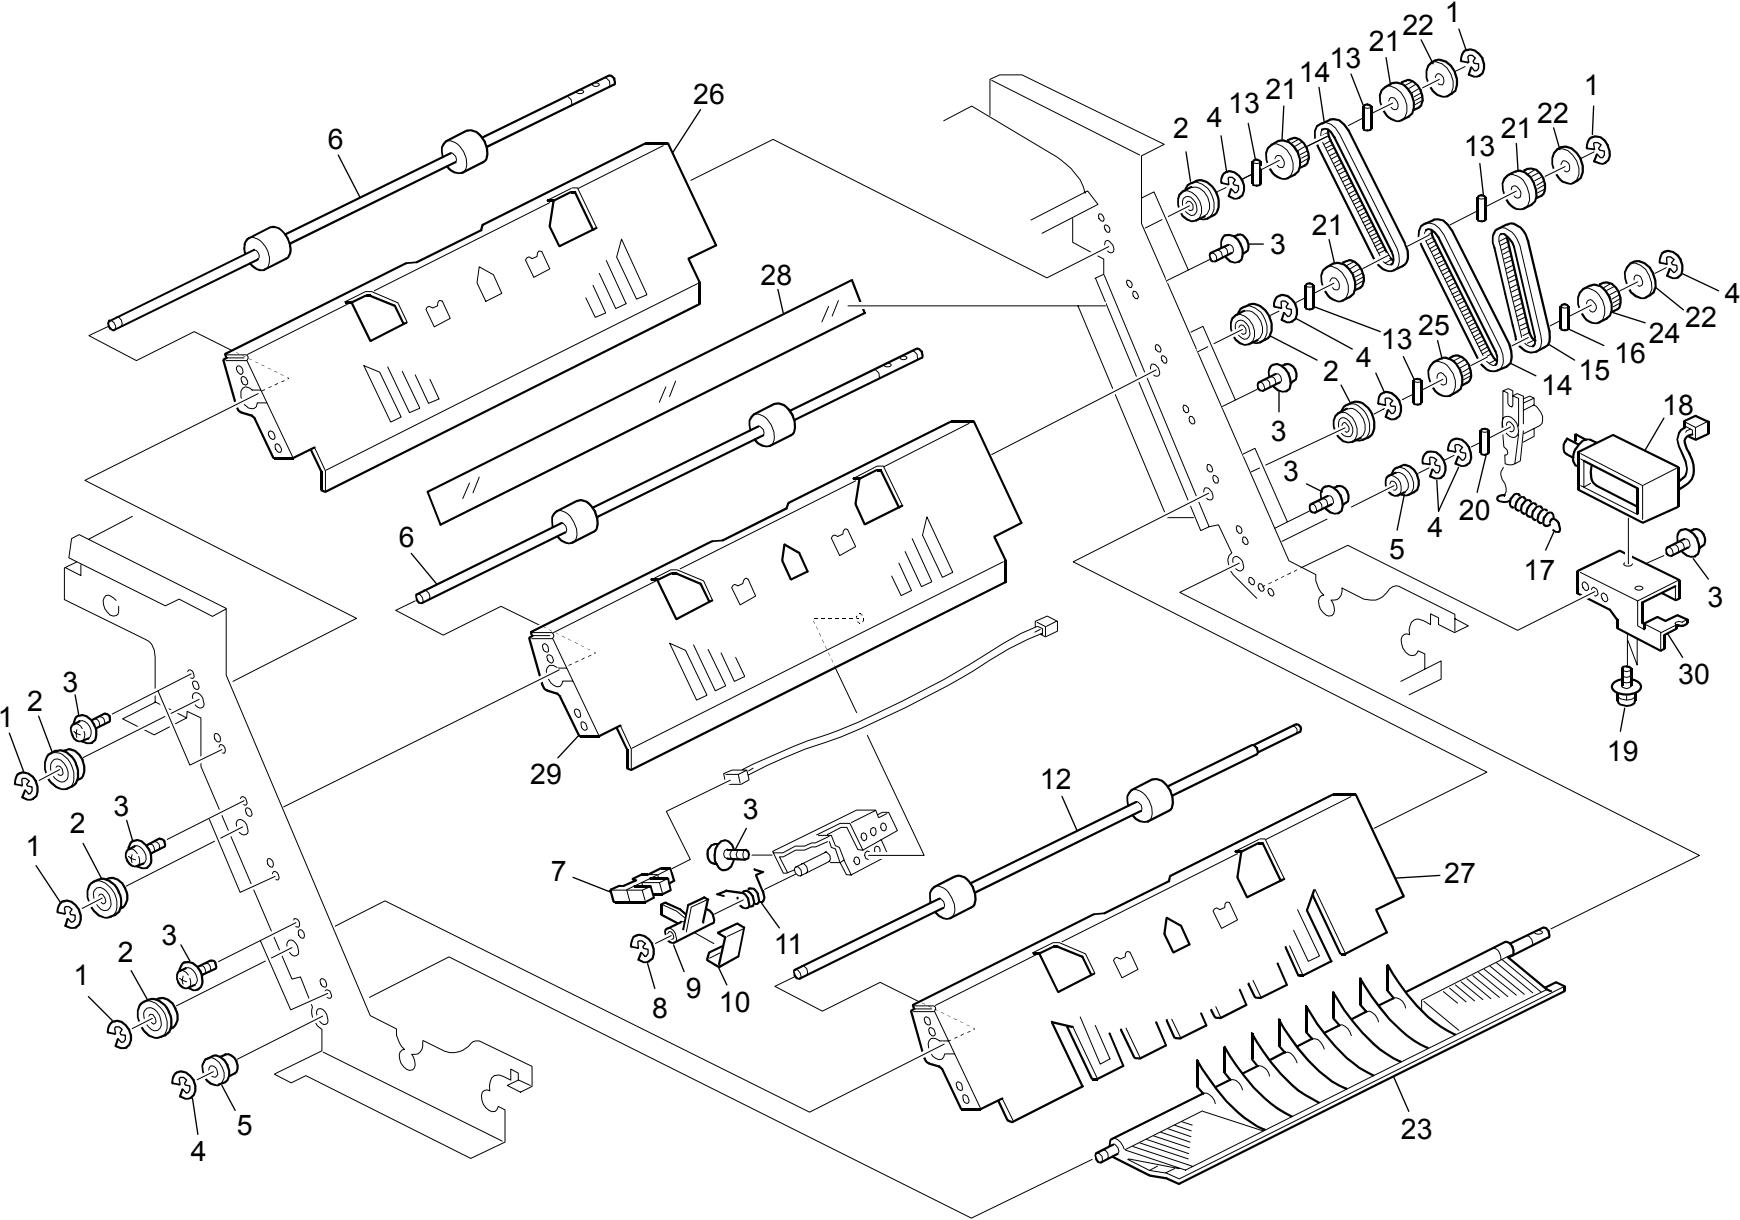


25. Signature Transport Section 4 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	5
2	D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	6
3	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	14
4	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	7
5	D391 1239	Bushing:DIA8:NS-MTL00013B	2
6	D391 1289	Roller:2:PF4140P146A1	2
7	D391 5254	Photointerruptor:PF2286P475	1
8	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	1
9	D391 1282	Lever:Transport Sensor:PF4140P112B1	1
10	D391 1298	Spring Plate:Paper Sensor:Surface: PF4140P237B	1
11	D391 1285	Coil Spring:Lever:Sensor:PF4140P132	1
12	D391 1288	Roller:1:PF4140P145A1	1
13	B660 4715	Parallel Pin:HP020120SCH	5
14	D391 1202	Synchronous Belt:NS-BLT00379B	2
15	D391 1200	Synchronous Belt:NS-BLT00377B	1
16	D391 1154	Parallel Pin:2x10:HP020100SCH	1
17	D391 1287	Coil Spring:Entrance:PF4140P144A1	1
18	D391 5253	DC Solenoid:PF2252P930	1
19	D391 1111	Screw With Washer:M3x5:030050FWWS	2
20	D391 1156	Parallel Pin:2x16:HP020160SCH	1
21	D391 1550	Timing Pulley:S2M:PF4140P976	4
22	D391 1681	Flange:22mm:PF4099P755	3
23	D391 1553	Gate Plate:Entrance:PF4140P141	1
24	D391 1552	Timing Pulley:S2M:PF4140P953	1
25	D391 1544	Timing Pulley:S2M:PF4140P631	1
26	D391 1547	Guide Plate:Feed:PF4140P100	1
27	D391 1554	Guide Plate:Lower:PF4140P156	1
28	D391 1555	Sheet:Cover:PF4140P052	1
29	D391 1556	Guide Plate:Lower:PF4140P102	1
30	D391 2202	Bracket:Entrance:Solenoid:PF4140P158	1

Index No.	Part No.	Description	Q'ty Per Assembly

26.Signature Transport Section 5 (D391)

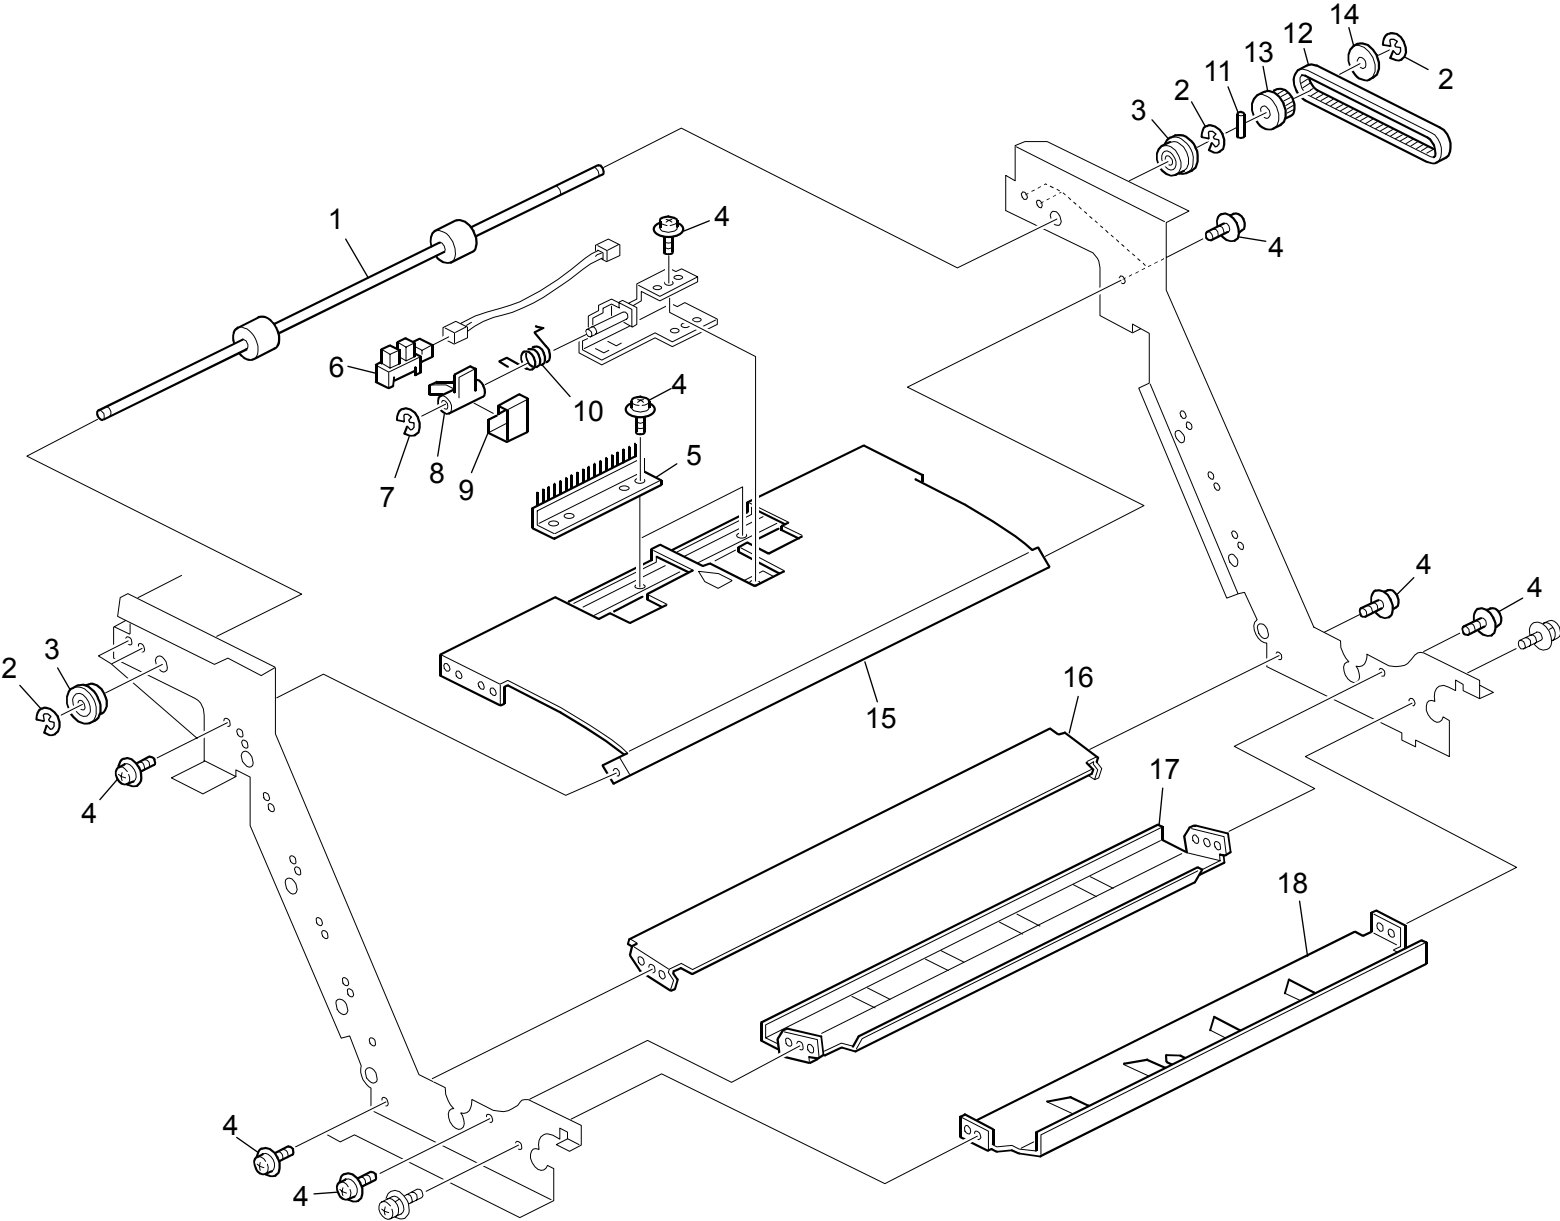


26. Signature Transport Section 5 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1289	Roller:2:PF4140P146A1	1
2	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	3
3	D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	2
4	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	15
5	D391 1286	Discharge Brush:PF4140P136B1	2
6	D391 5254	Photointerruptor:PF2286P475	1
7	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	1
8	D391 1282	Lever:Transport Sensor:PF4140P112B1	1
9	D391 1298	Spring Plate:Paper Sensor:Surface:PF4140P237B	1
10	D391 1285	Coil Spring:Lever:Sensor:PF4140P132	1
11	B660 4715	Parallel Pin:HP020120SCH	1
12	D391 1200	Synchronous Belt:NS-BLT00377B	1
13	D391 1550	Timing Pulley:S2M:PF4140P976	1
14	D391 1681	Flange:22mm:PF4099P755	1
15	D391 1557	Guide Plate:Lower:PF4140P113	1
16	D391 1558	Guide:Entrance:Lower:PF4140P154	1
17	D391 1559	Guide:Entrance:Upper:PF4140P155	1
18	D391 1560	Guide:Entrance:PF4140P138	1

Index No.	Part No.	Description	Q'ty Per Assembly

27. Signature Delivery Section 1 (D391)

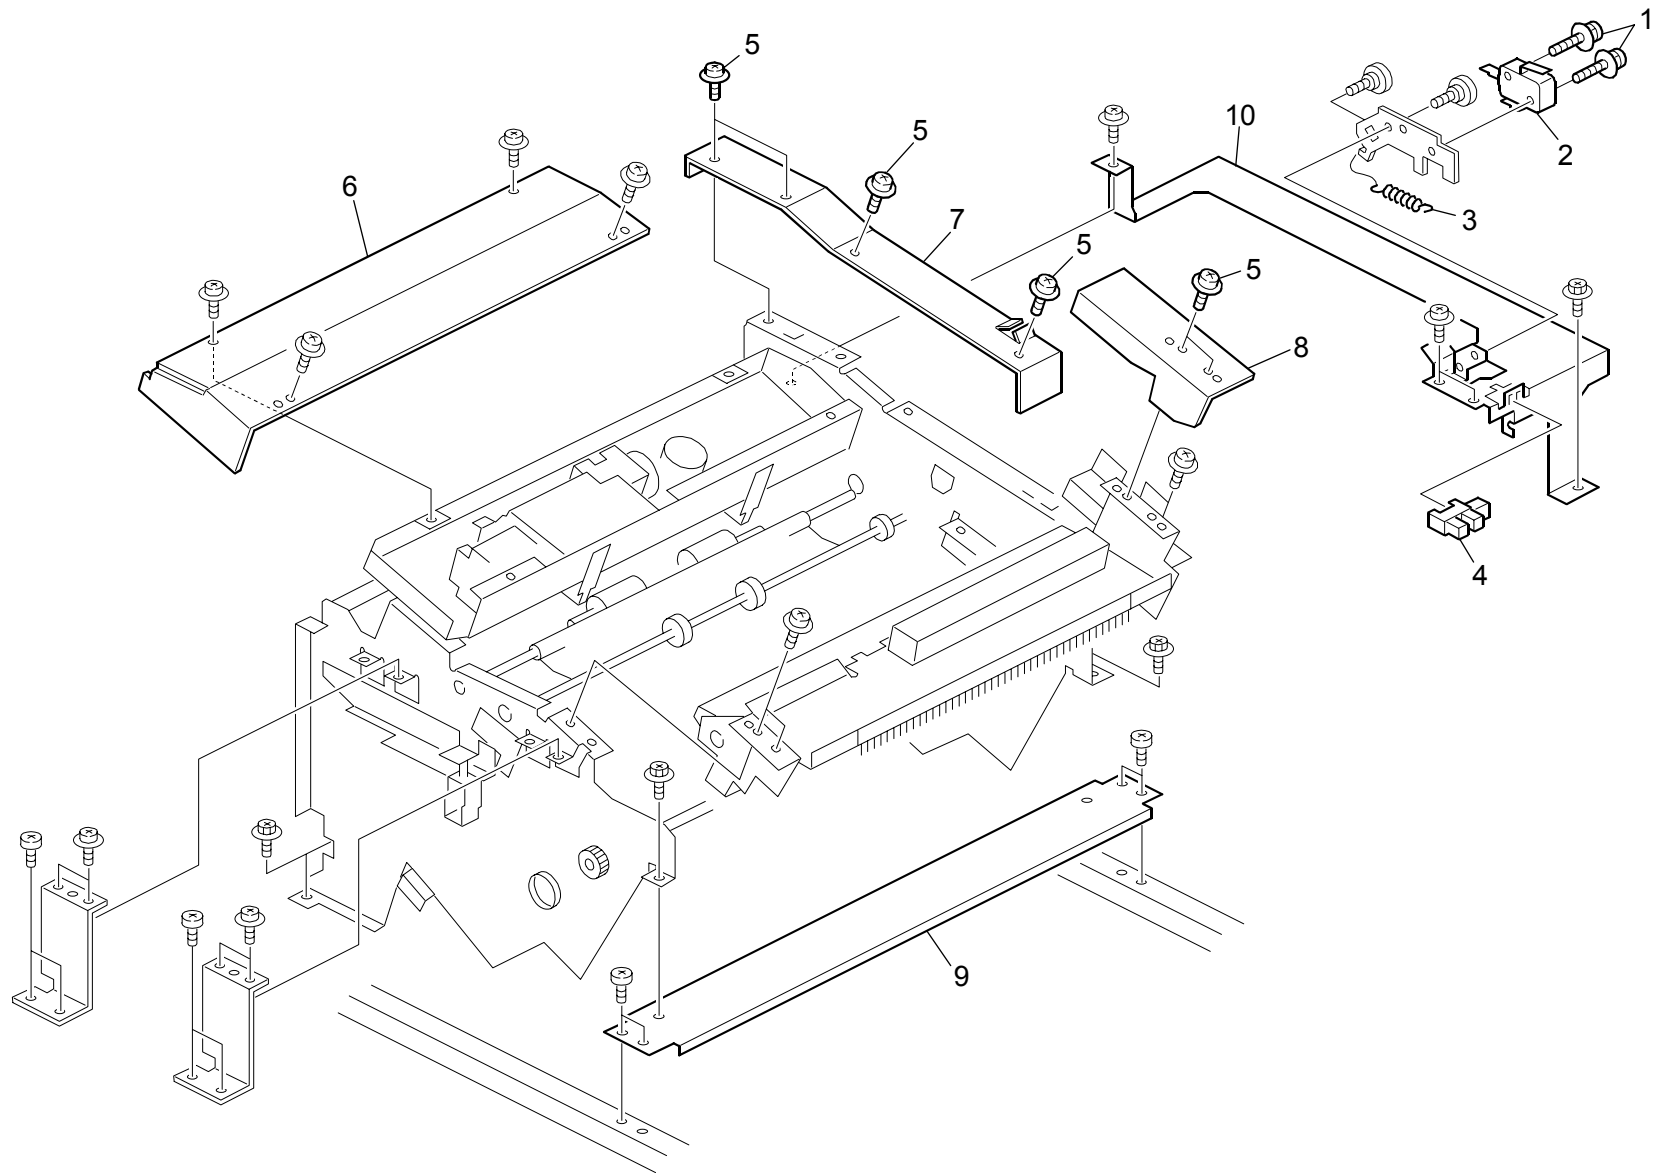


27. Signature Delivery Section 1 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1139	Screw:30140FWBI	2
2	D391 5250	Micro Switch:E120001934	1
3	D391 1280	Coil Spring:Hinge:Cover:Upper: PF4140P099A	1
4	D391 5254	Photointerruptor:PF2286P475	1
5	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	6
6	D391 1561	Cover:Upper:PF4140P275	1
7	D391 1562	Cover:Side Plate:Rear:PF4140P082	1
8	D391 1563	Cover:Connector:PF4140P219	1
9	D391 1564	Stay:Slide Rail:PF4140P014	1
10	D391 2203	Stay:Cover:Hinge:PF4140Q517	1

Index No.	Part No.	Description	Q'ty Per Assembly

28.Signature Delivery Section 2 (D391)

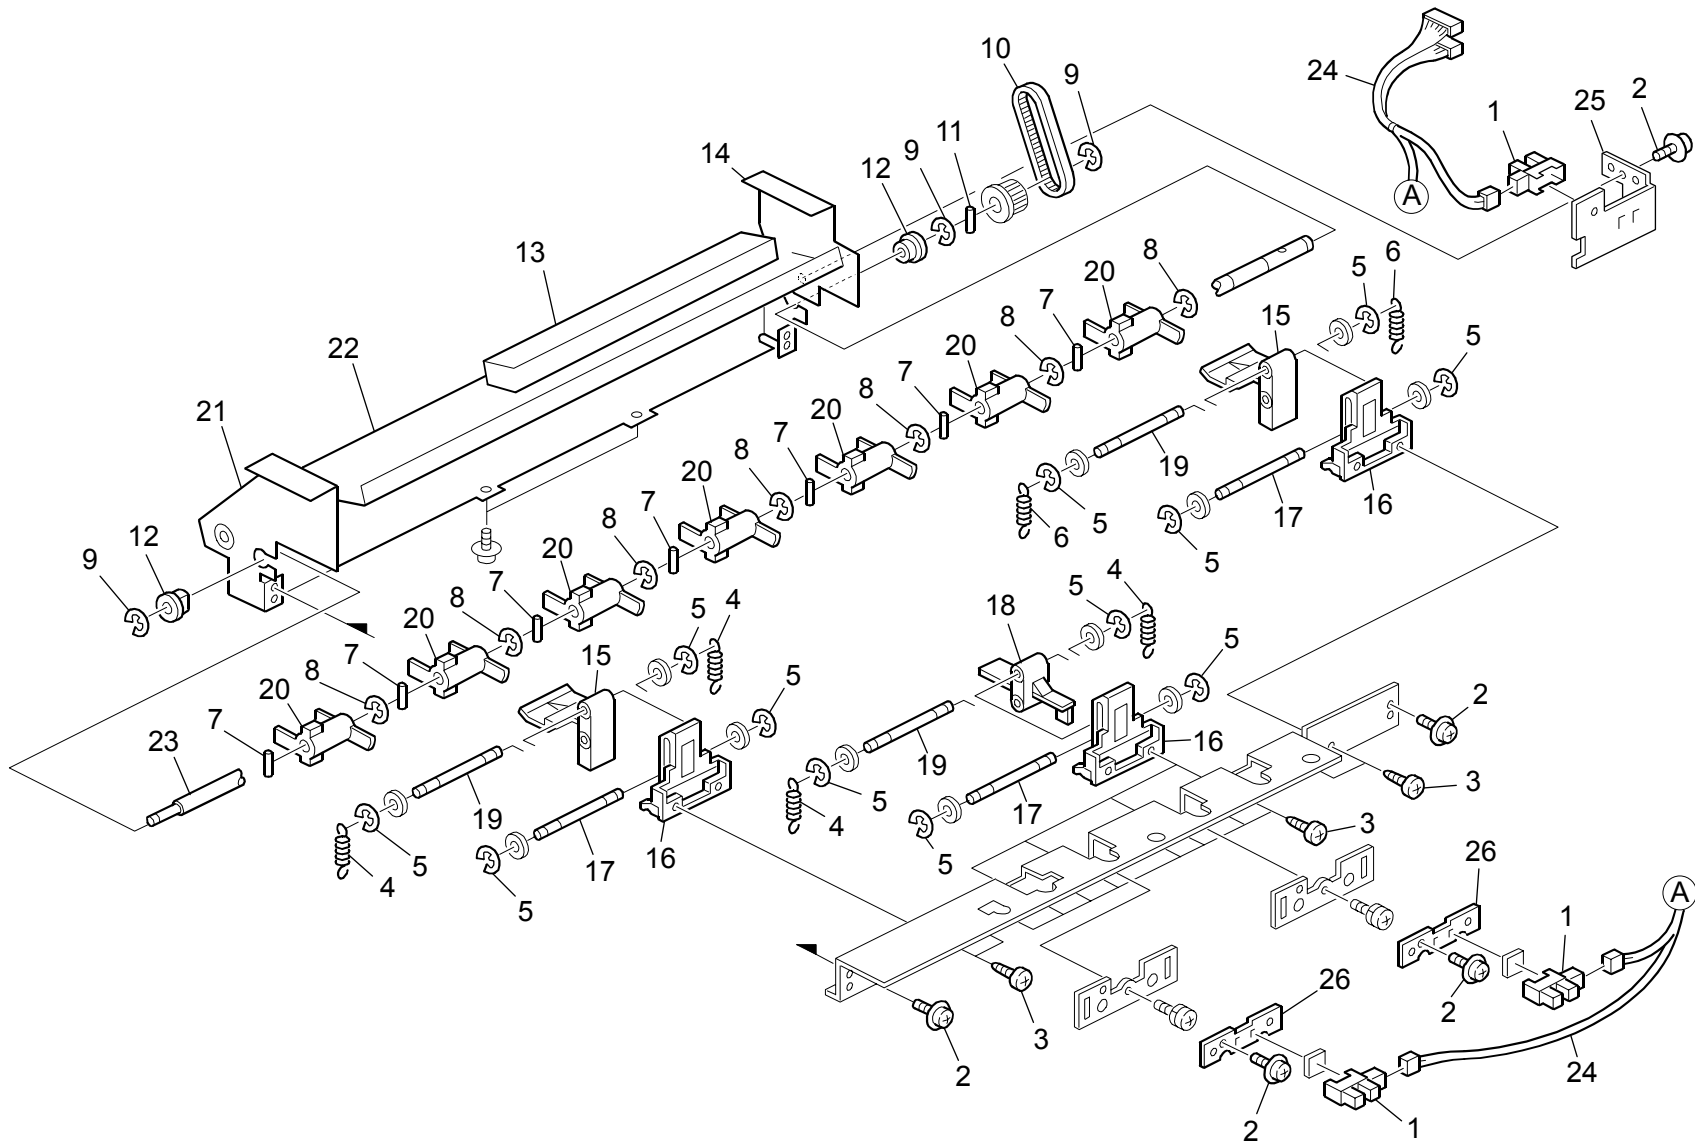


28. Signature Delivery Section 2 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5254	Photointerruptor:PF2286P475	3
2	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	5
3	D391 1121	Binding Self-Tapping Screw:M3x10: 030100FWBB	12
4	D391 1293	Coil Spring:Plate:Trailing Edge:Middle: PF4140P216B2	10
5	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	24
6	D391 1294	Coil Spring:Plate:Trailing Edge:Front Rear: PF4140P217A	2
7	D391 1160	Parallel Pin:3x14:HP030140SCH	7
8	D391 1152	Retaining Rings-E:DIA8:ER080SU-D	7
9	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	3
10	D391 1185	Synchronous Belt:NS-BLT00284B	1
11	B660 4715	Parallel Pin:HP020120SCH	1
12	D391 1239	Bushing:DIA8:NS-MTL00013B	2
13	D391 1565	Cover:Exit Roller:PF4140P224	1
14	D391 1566	Side Plate:Rear:Guide:Lower:PF4140K074	1
15	D391 1567	Lever:Plate:PF4140P288	2
16	D391 1568	Lever:Plate:Trailing Edge:PF4140K116	3
17	D391 1569	Shaft:Lever:PF4140P287	3
18	D391 1570	Lever:Plate:Trailing Edge:PF4140K115	1
19	D391 1571	Shaft:Lever:Plate:PF4140P286	3
20	D391 1572	Lever:Drive:Plate:PF4140P290	7
21	D391 1573	Side Plate:Front:Guide:Lower:PF4140P231	1
22	D391 1574	Guide:Upper:PF4140P225	1
23	D391 1903	Shaft:Cam:Plate:PF4140P208	1
24	D391 1906	Harness:Surface Of Paper Sensor: PF4140K651	1
25	D391 2204	Bracket:Trailing Edge:Plate: Home Position Sensor:PF4140P223	1
26	D391 2205	Bracket:Trailing Edge:Plate:Sensor: PF4140P215	2

Index No.	Part No.	Description	Q'ty Per Assembly

29. Signature Delivery Section 3 (D391)

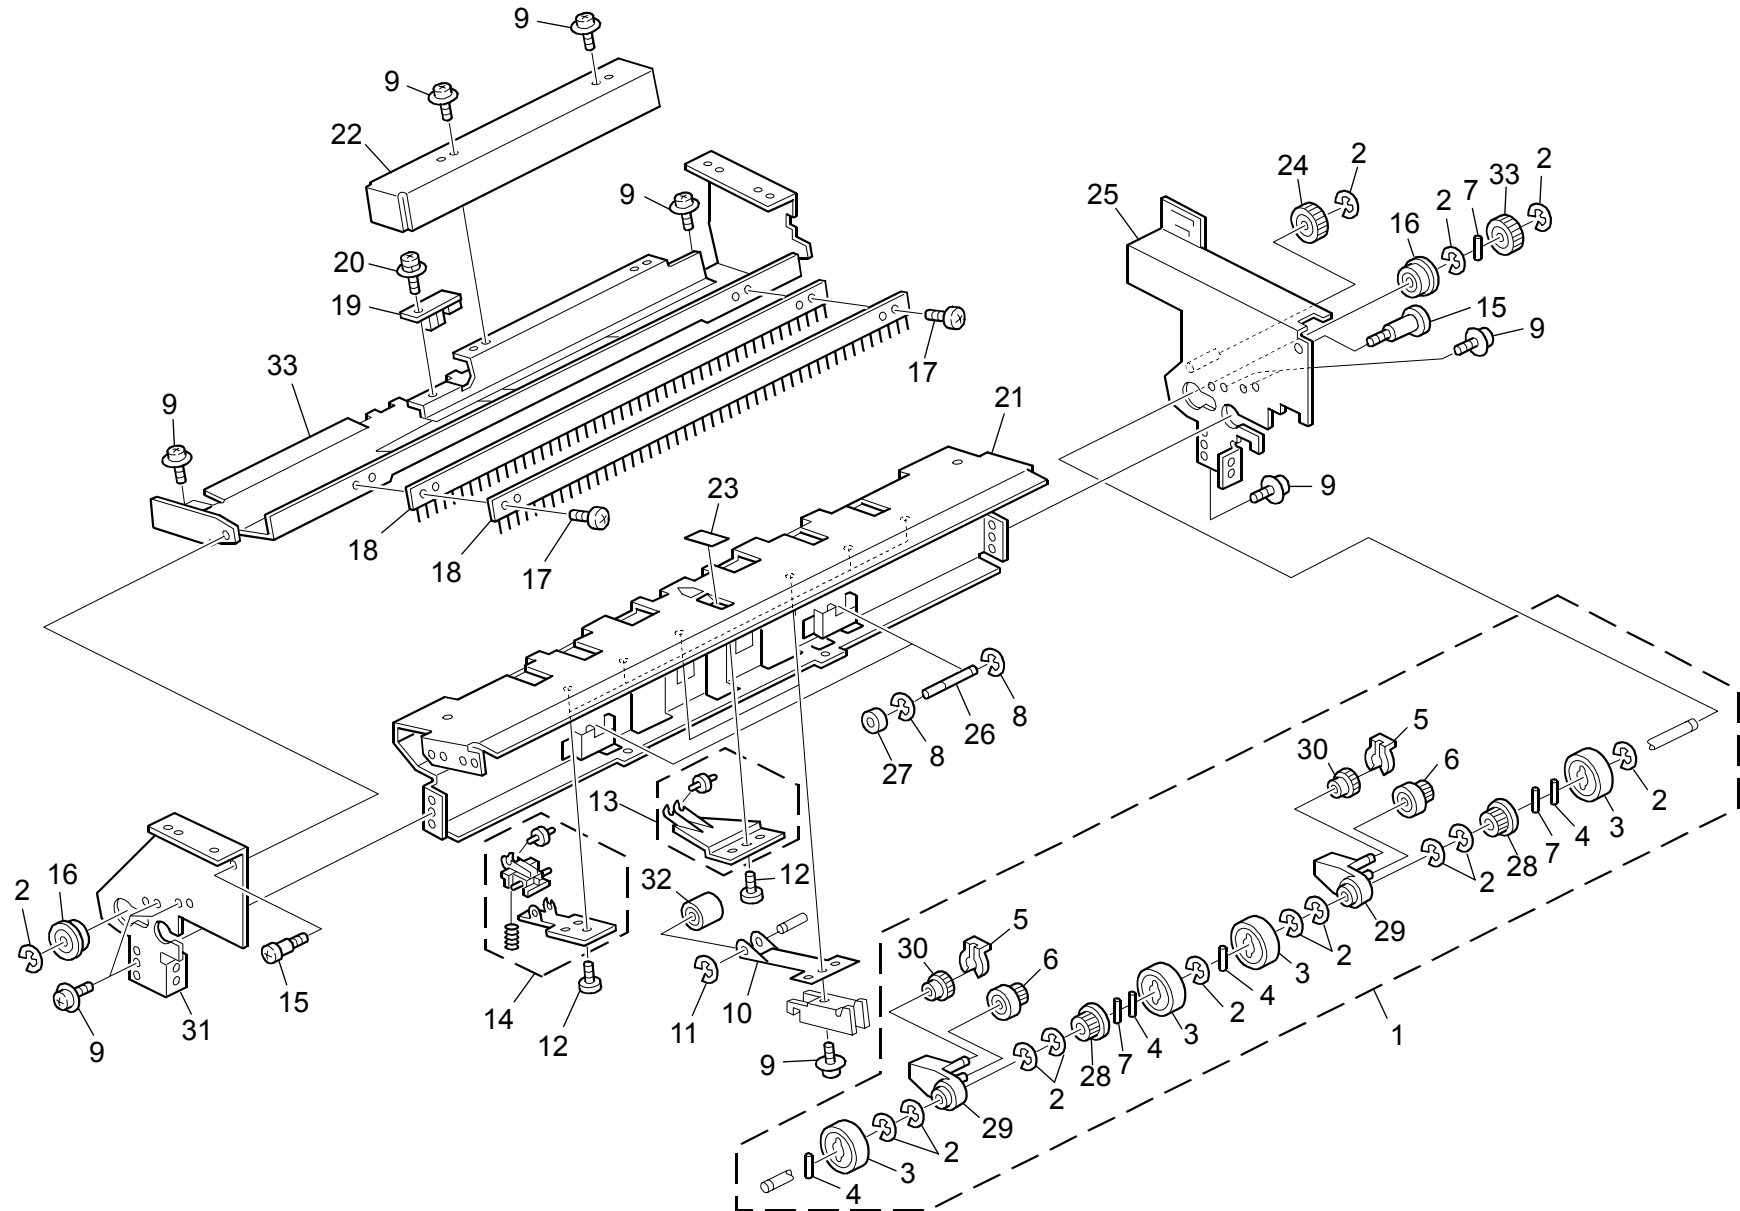


29.Signature Delivery Section 3 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1278	Roller:Plate:Trailing Edge:PF4140L411A	1
2	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	14
3	D391 1295	Roller:Plate:Trailing Edge:PF4140P220A1	4
4	D391 1160	Parallel Pin:3x14:HP030140SCH	4
5	B660 4815	External Circlip:NS-CLP00003A	2
6	D391 1284	Roller:Plate:Trailing Edge:PF4140P131A1	2
7	B660 4715	Parallel Pin:HP020120SCH	3
8	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	4
9	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	12
10	D391 1296	Spring Plate:Transport Roller: PF4140P227B1	2
11	D391 1149	Retaining Rings-E:DIA4:ER040SU-D	2
12	D391 1113	Screw:M3x6:030060FNBI	2
13	D391 1277	Roller:Wing:2:PF4140L394A	1
14	D391 1276	Roller:Wing:PF4140L393A	1
15	D391 1247	Screw:NS-SCR00207B	2
16	D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	2
17	D391 1168	Tapping Screw:IR4016P167A	2
18	D391 1304	Discharge Brush:Transport:PF4140P272A2	2
19	B660 5451	No.2 Entrance Sensor	1
20	D391 1120	Screw With Washer:M3x8:030080FWWS	1
21	D391 1480	Guide Plate:Paper Exit Sub-unit:Middle: PF4140P232	1
22	D391 1565	Cover:Exit Roller:PF4140P224	1
23	D391 1575	Reflector:PF4140P235	1
24	D391 1654	Gear:Z24:PF4140P937	2
25	D391 1566	Side Plate:Rear:Guide:Lower:PF4140K074	1
26	D391 1577	Shaft:Tray:PF4140P103	1
27	D391 1578	Roller:Plate:PF4140P213	1
28	D391 1579	Gear:Flange Type:PF4140P133	2
29	D391 1580	Holder:Roller:Plate:PF4140P109	2
30	D391 1581	Gear:PF4140P108	2
31	D391 1573	Side Plate:Front:Guide:Lower:PF4140P231	1
32	D391 1582	Exit Roller:Tray:PF4140P228	1
33	D391 1574	Guide:Upper:PF4140P225	1

Index No.	Part No.	Description	Q'ty Per Assembly

30. Signature Delivery Section 4 (D391)

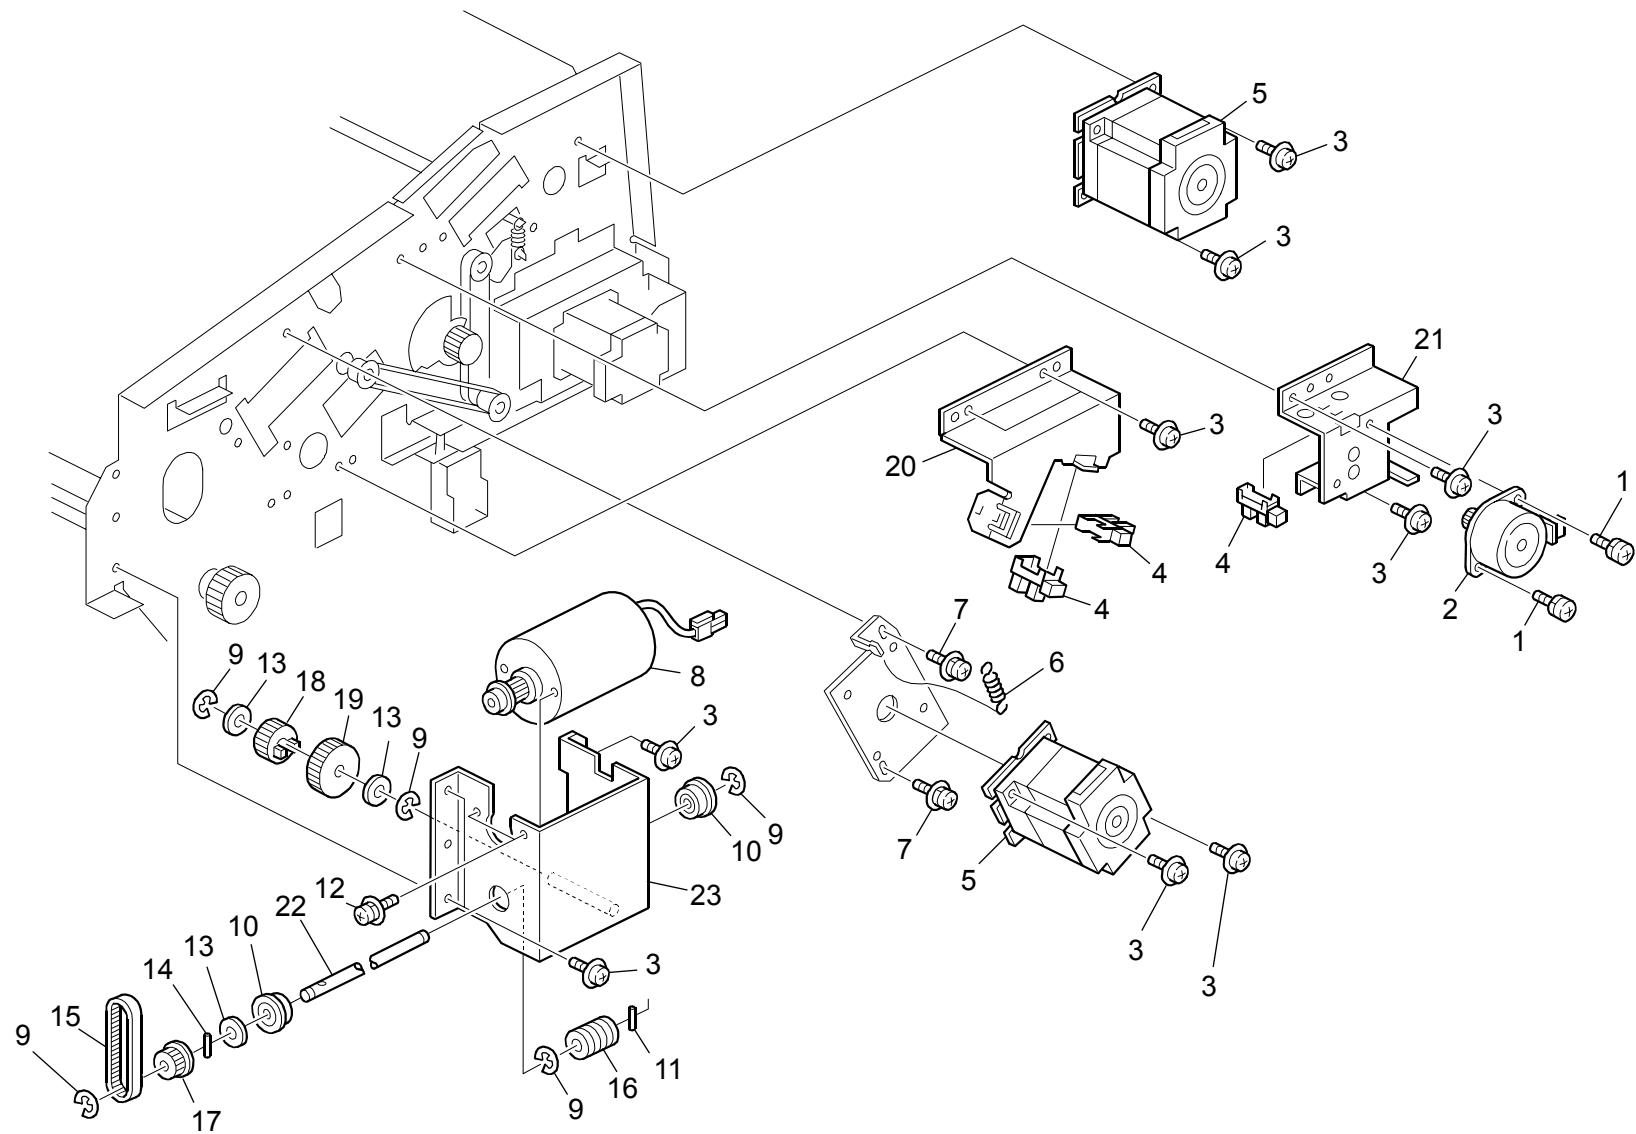


30. Signature Delivery Section 4 (D391)


Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1114	Washer:M3x6:030060FWSW	2
2	D391 5296	DC Stepper Motor:PF4140R405	1
3	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	11
4	D391 5254	Photointerruptor:PF2286P475	3
5	D391 5270	DC Stepper Motor:PF4140K631	2
6	D391 1305	Coil Spring:Motor:Plate:Trailing Edge: PF4140P293A2	1
7	D391 1120	Screw With Washer:M3x8:030080FWWS	2
8	D391 5271	DC Motor:PF4140K632	1
9	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	5
10	D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	2
11	D391 1155	Parallel Pin:2x14:HP020140SCH	1
12	D391 4005	Screw With Washer:M4x8:040080FWWS	2
13	D391 1165	Washer:HW080FWSN	3
14	B660 4715	Parallel Pin:HP020120SCH	1
15	D391 1176	Synchronous Belt:NS-BLT00122A	1
16	D391 1157	Parallel Pin:2x20:HP020200SCH	1
17	D391 1492	Pulley:T18:PF4140P998A	1
18	D391 1496	Gear:100-20-30:PF4140P488B2	1
19	D391 1506	Gear:PF4140P394	1
20	D391 1795	Bracket:Sensor:Turn:PF4140P485	1
21	D391 1796	Bracket:DC Stepper Motor:PF4140P202	1
22	D391 1904	Shaft:DC Motor:PF4140P482	1
23	D391 2206	Bracket:Turn:Motor:PF4140K041:Peen	1

Index No.	Part No.	Description	Q'ty Per Assembly

31.Signature Delivery Section 5 (D391)

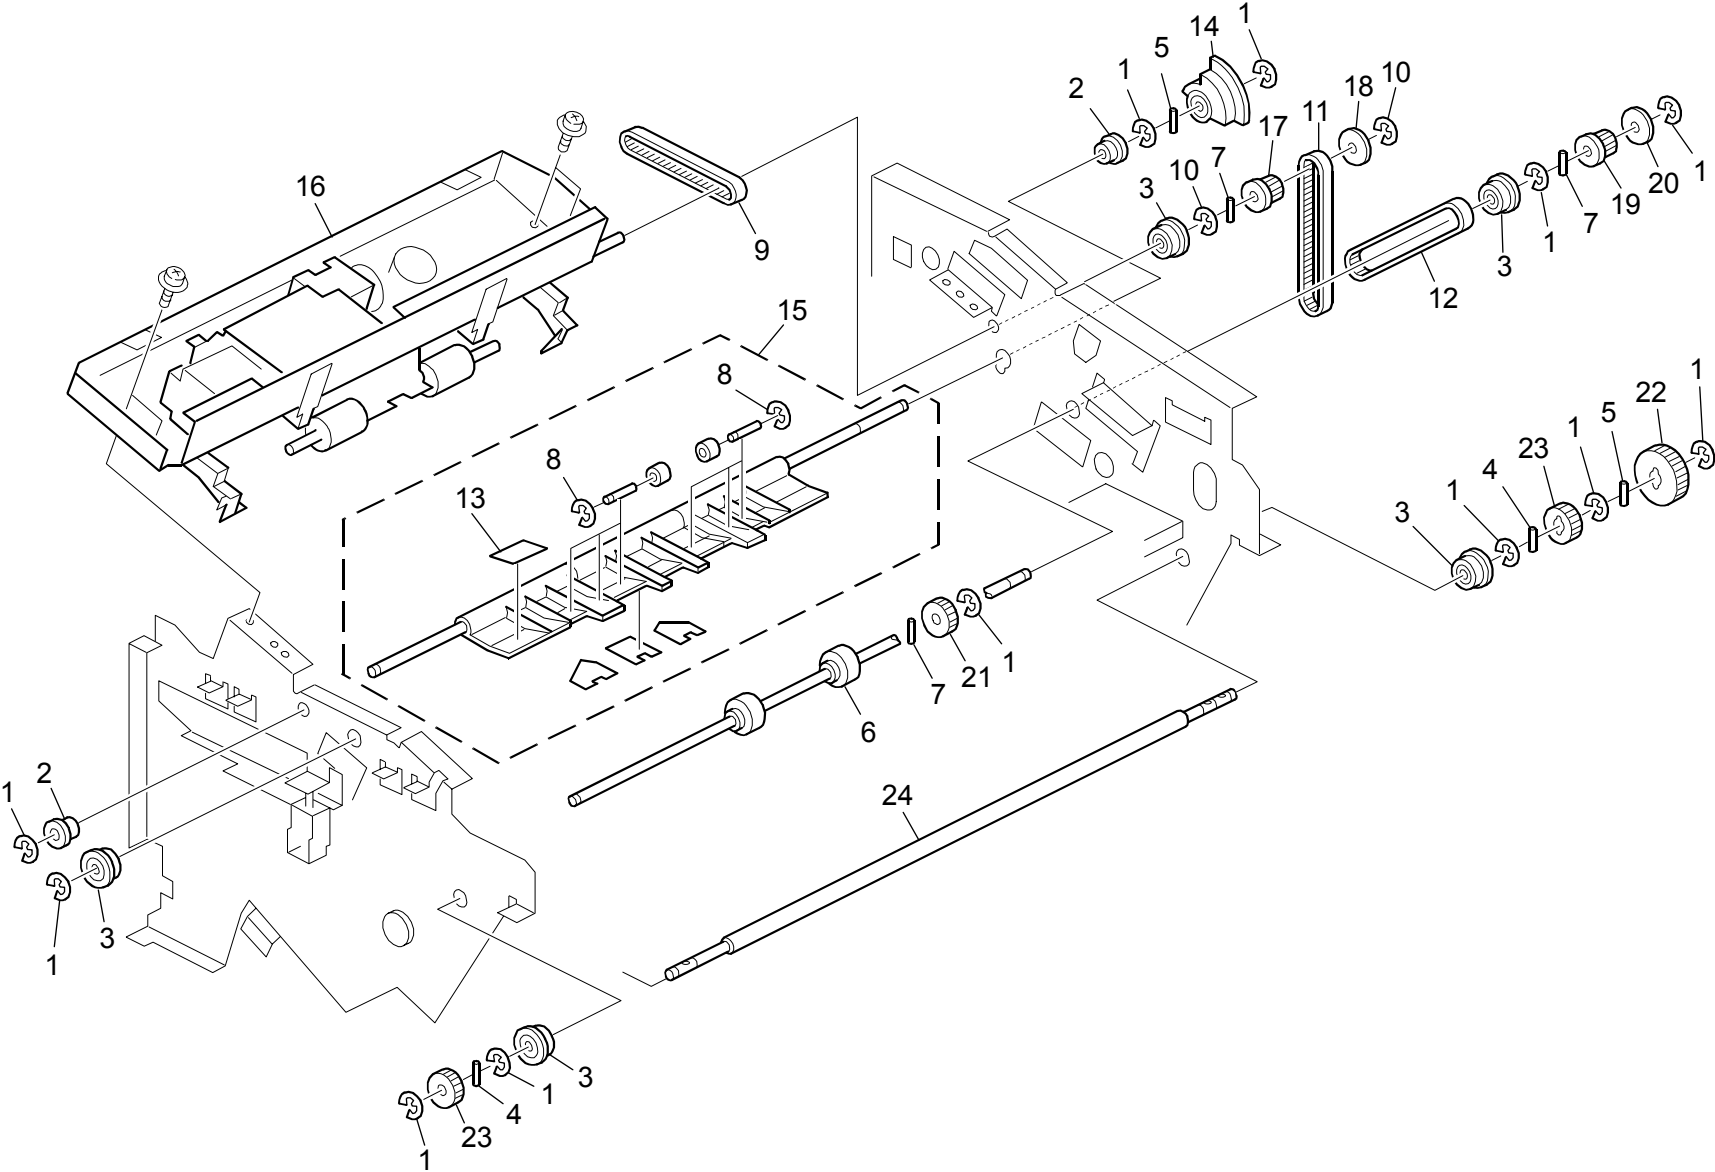

32.Stacking Tray Section 1 (D391)

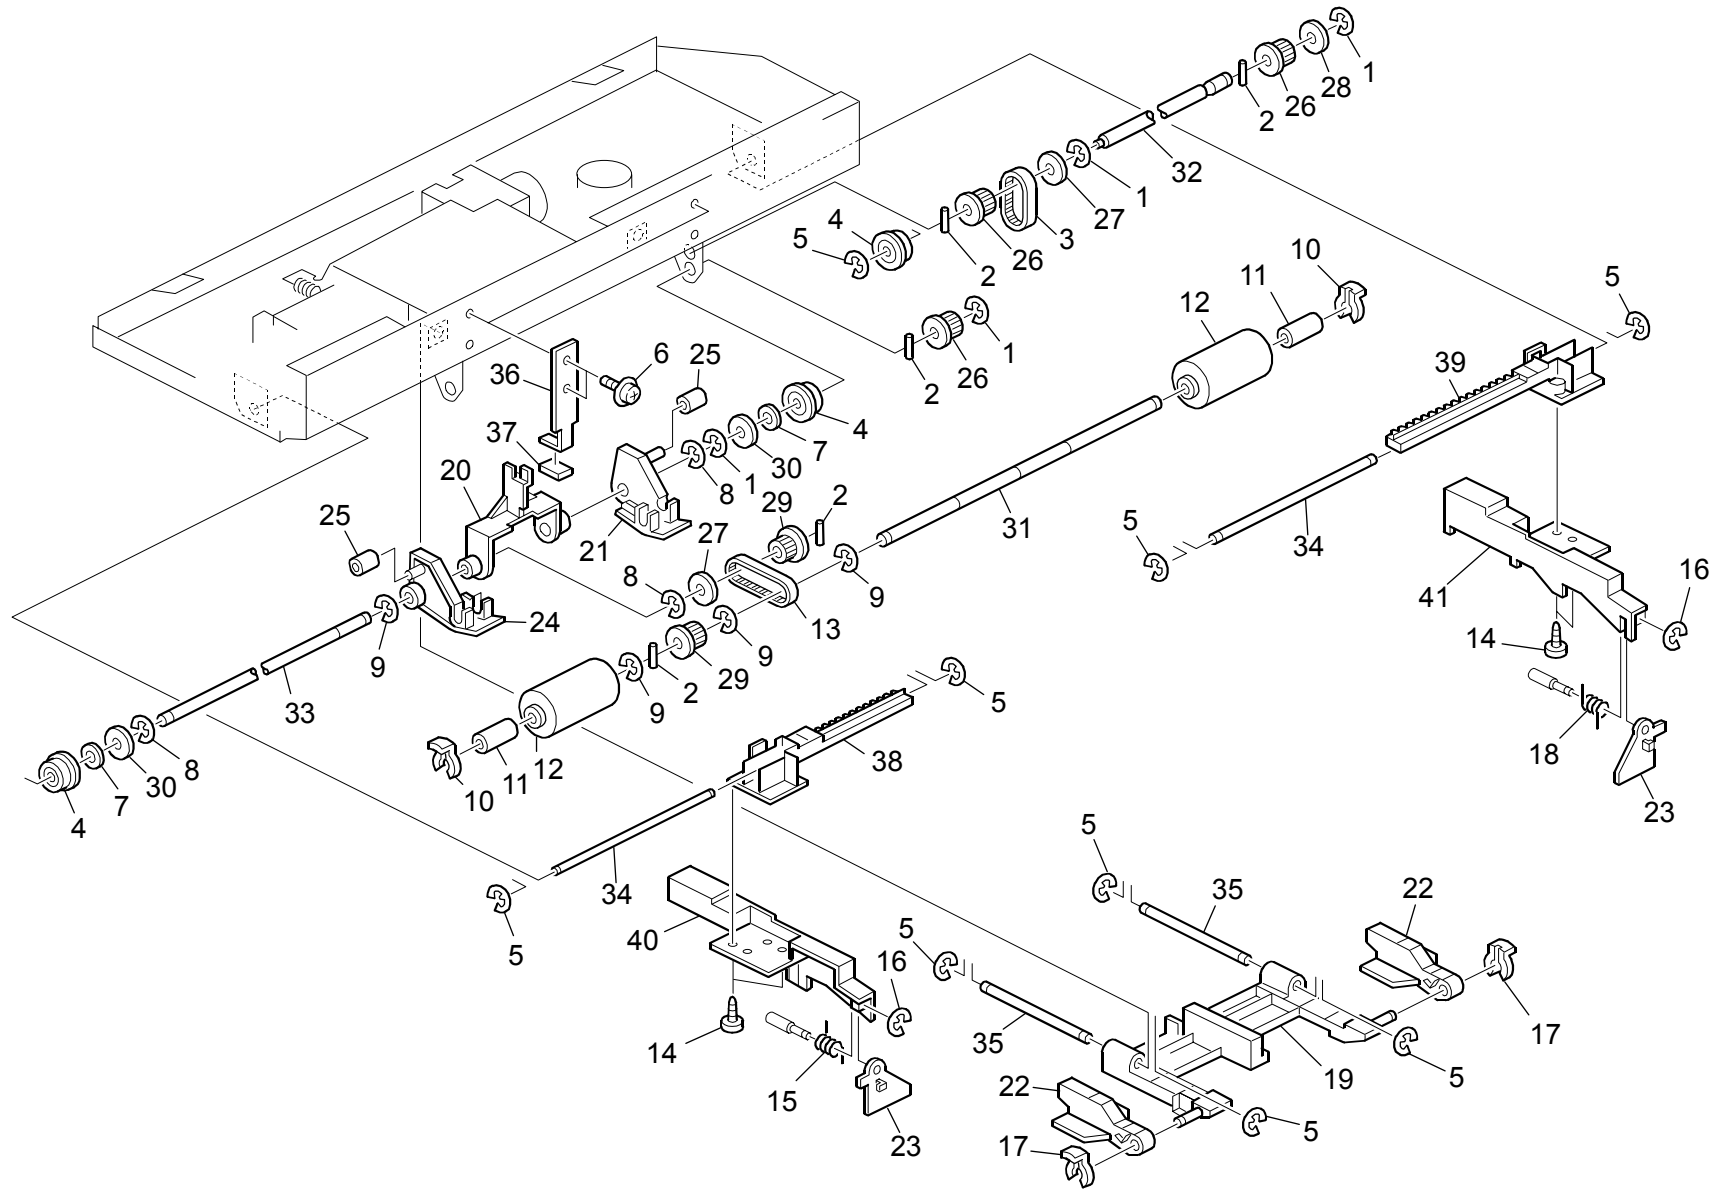


32.Stacking Tray Section 1 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1149	Retaining Rings-E:DIA4:ER040SU-D	4
2	B660 4715	Parallel Pin:HP020120SCH	5
3	D391 1187	Synchronous Belt:NS-BLT00347B	1
4	D391 1263	Radial Ball Bearing:6x10:PF4096P347A	3
5	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	9
6	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	2
7	D391 1164	Washer:HW060FNSN	2
8	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	3
9	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	4
10	D391 1236	Retaining Rings-C:NS-CLP00007D	2
11	D391 1142	Spacer:CL080180FW	2
12	D391 1301	Roller:PF4140P243A1	2
13	D391 1188	Synchronous Belt:NS-BLT00348B	1
14	D391 1121	Binding Self-Tapping Screw:M3x10: 030100FWBB	4
15	D391 1302	Coil Spring:Lever:Front:Uniform: PF4140P262B1	1
16	D391 1145	Washer:ER017SU-D	2
17	B660 4815	External Circlip:NS-CLP00003A	2
18	D391 1303	Coil Spring:Lever:Rear:UNIFORM: PF4140P266B1	1
19	D391 2213	Holder:Front:Tray:PF4140P281	1
20	D391 1655	Holder:Roller:Switchback:Middle: PF4140P245	1
21	D391 1656	Holder:Roller:Switchback:Rear:PF4140P247	1
22	D391 1657	Lever:Tray:PF4140P282	2
23	D391 1658	Lever:PF4140P259	2
24	D391 1659	Holder:Roller:Switchback:Front:PF4140P246	1
25	D391 1660	Holder:Roller:PF4140P206	2
26	D391 1544	Timing Pulley:S2M:PF4140P631	3
27	D391 1662	Flange:15mm:PF4099P225	2
28	D391 1663	Flange:18mm:PF4099P950	1
29	D391 1664	Timing Pulley:T24:PF4140P242	2
30	D391 1665	Roller:Tray:PF4140P184	2
31	D391 1797	Shaft:Transport Roller:PF4140P244	1

Index No.	Part No.	Description	Q'ty Per Assembly
32	D391 1798	Shaft:Transport Roller:PF4140P248	1
33	D391 1799	Shaft:Transport Roller:PF4140P249	1
34	D391 1800	Shaft:Pin:PF4140P274	2
35	D391 1801	Shaft:Tray:PF4140P283	2
36	D391 2207	Bracket:Stopper:PF4140P207	1
37	D391 2208	Rubber Bushing:Stopper:PF4140P289	1
38	D391 2209	Rack:Set:Front:PF4140P263	1
39	D391 2210	Rack:Set:Rear:PF4140P267	1
40	D391 2211	Adjusting Plate:Front:PF4140P260	1
41	D391 2212	Adjusting Plate:Rear:PF4140P265	1

33.Stacking Tray Section 2 (D391)

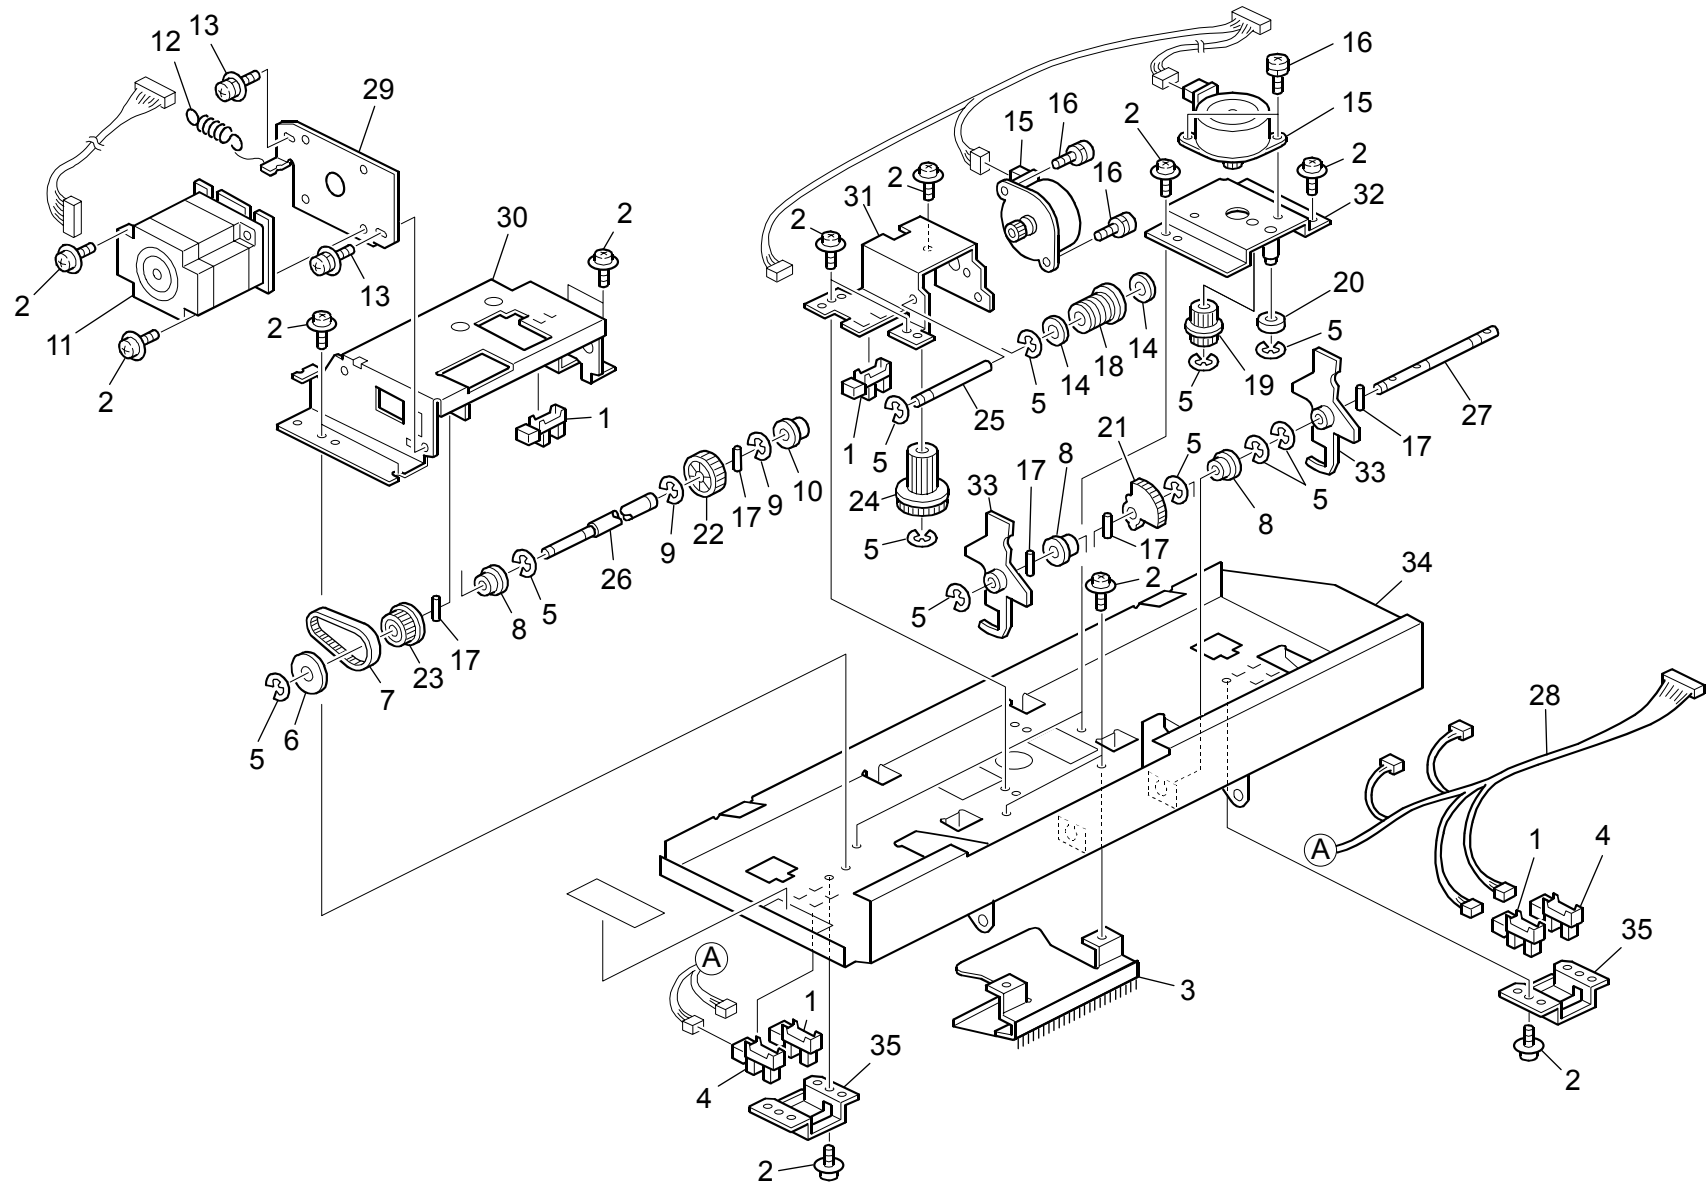


33.Stacking Tray Section 2 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5254	Photointerruptor:PF2286P475	4
2	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	17
3	D391 1274	Bracket:PF4140L157A	1
4	D391 5251	Photointerruptor:E314000729	2
5	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	11
6	B660 2815	Spacer:PF4099P337	1
7	D391 1169	Synchronous Belt:NS-BLT00049B	1
8	D391 1238	Bushing:DIA6:NS-MTL00007B	3
9	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	2
10	D391 1239	Bushing:DIA8:NS-MTL00013B	1
11	D391 5270	DC Stepper Motor:PF4140K631	1
12	D391 1305	Coil Spring:Motor:Plate:Trailing Edge: PF4140P293A2	1
13	D391 1120	Screw With Washer:M3x8:030080FWWS	2
14	D391 1164	Washer:HW060FNSN	2
15	D391 5296	DC Stepper Motor:PF4140R405	2
16	D391 1114	Washer:M3x6:030060FWSW	4
17	B660 4715	Parallel Pin:HP020120SCH	5
18	D391 1666	Gear:PF4140P277	1
19	D391 1667	Gear:PF4140P268	1
20	D391 1668	Roller:Spacer:PF4140P298	1
21	D391 1669	Gear:Switchback:PF4140P252	1
22	D391 1670	Gear:Z30:PF4140P957	1
23	D391 1671	Timing Pulley:T36:PF2210P016	1
24	D391 1672	Gear:PF4140P276	1
25	D391 1802	Shaft:Worm Gear:PF4140P279	1
26	D391 1803	Shaft:DC Stepper Motor:PF4140P258	1
27	D391 1804	Shaft:Lever:PF4140P253	1
28	D391 1907	Harness:Sensor:PF4140K656	1
29	D391 2214	Bracket:Trailing Edge:Plate:Motor: PF4140P291	1
30	D391 2215	Bracket:Upper Lower:Motor:PF4140P257	1
31	D391 2216	Worm Gear:Front:Tray:PF4140K019:Peen	1
32	D391 2217	Uniform Part:Front:Motor:PF4140K020:Peen	1
33	D391 2218	Lever:Switchback:Upper Lower:PF4140P251	2

Index No.	Part No.	Description	Q'ty Per Assembly
34	D391 2219	Stay:Upper:Main:PF4140P273	1
35	D391 2220	Sensor Cover:Set:PF4140P236	2

34.Stacking Tray Section 3 (D391)

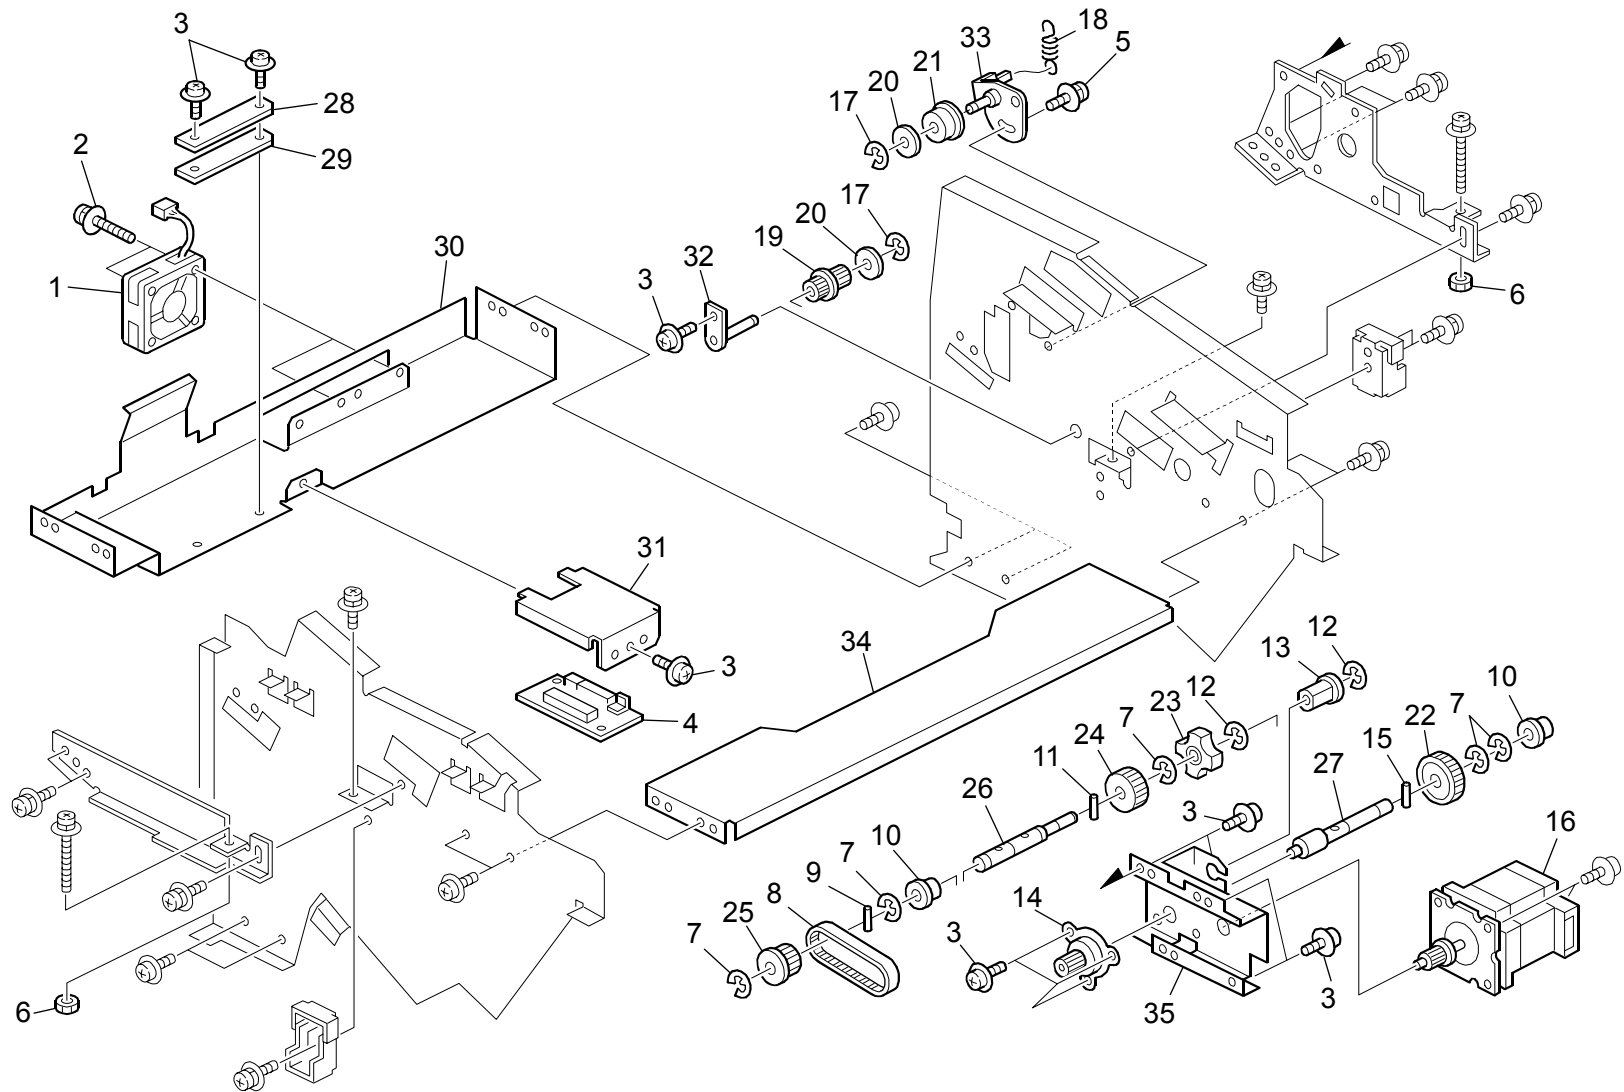


34.Stacking Tray Section 3 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5297	DC Fan Motor:PF4140R406	2
2	D391 1135	Pan Head Screw:Spring Washer:M4x30:040300FWWS	4
3	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	11
4	D391 5257	Interface Board:PF4140K614	1
5	D391 1110	Pan Head Screw:Spring Washer:030040FWWS	8
6	D391 1250	Flanged Hexagonal Nut:NT040FN2	2
7	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	5
8	D391 1185	Synchronous Belt:NS-BLT00284B	1
9	D391 1155	Parallel Pin:2x14:HP020140SCH	1
10	D391 1239	Bushing:DIA8:NS-MTL00013B	2
11	B660 4715	Parallel Pin:HP020120SCH	1
12	D391 1149	Retaining Rings-E:DIA4:ER040SU-D	2
13	D391 1237	Bushing:DIA5:NS-MTL00003B	1
14	D391 1268	Tray:Torque Diode:PF4140K117A:Ass'y	1
15	D391 1156	Parallel Pin:2x16:HP020160SCH	1
16	D391 5285	DC Stepper Motor:PF4140K916	1
17	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	2
18	D391 1102	Tension Spring:PF4099P426B	1
19	D391 1673	Timing Pulley:T24:PF2217P309	1
20	D391 1663	Flange:18mm:PF4099P950	2
21	D391 1675	Roller:Tension:PR5100P216	1
22	D391 1676	Gear:Z36:PF4140P960	1
23	D391 1677	Knob:DC Stepper Motor:PF4140Q196	1
24	D391 1678	Gear:Z20:PF4140P955	1
25	D391 1679	Timing Pulley:T32:PF4140P297	1
26	D391 1805	Shaft:Drive:Tray:PF4140P198	1
27	D391 1806	Shaft:Tray:PF4140P197	1
28	D391 2221	Plate:Plate:PF4140P392	1
29	D391 2222	Rubber Bushing:Plate:PF4140P393	1
30	D391 2223	Stay:Move:PF4140P390	1
31	D391 2224	Bracket:Base:Cover:PF4140P377	1
32	D391 2225	Tensioner:Drive:PF4140K018:Peen	1
33	D391 2226	Bracket:Tension:PF4140K063:Peen	1

Index No.	Part No.	Description	Q'ty Per Assembly
34	D391 2227	Stay:B:Lower:PF4140P038	1
35	D391 2228	Bracket:Tray:Diode:PF4140P196	1

35.Stacking Tray Section 4 (D391)

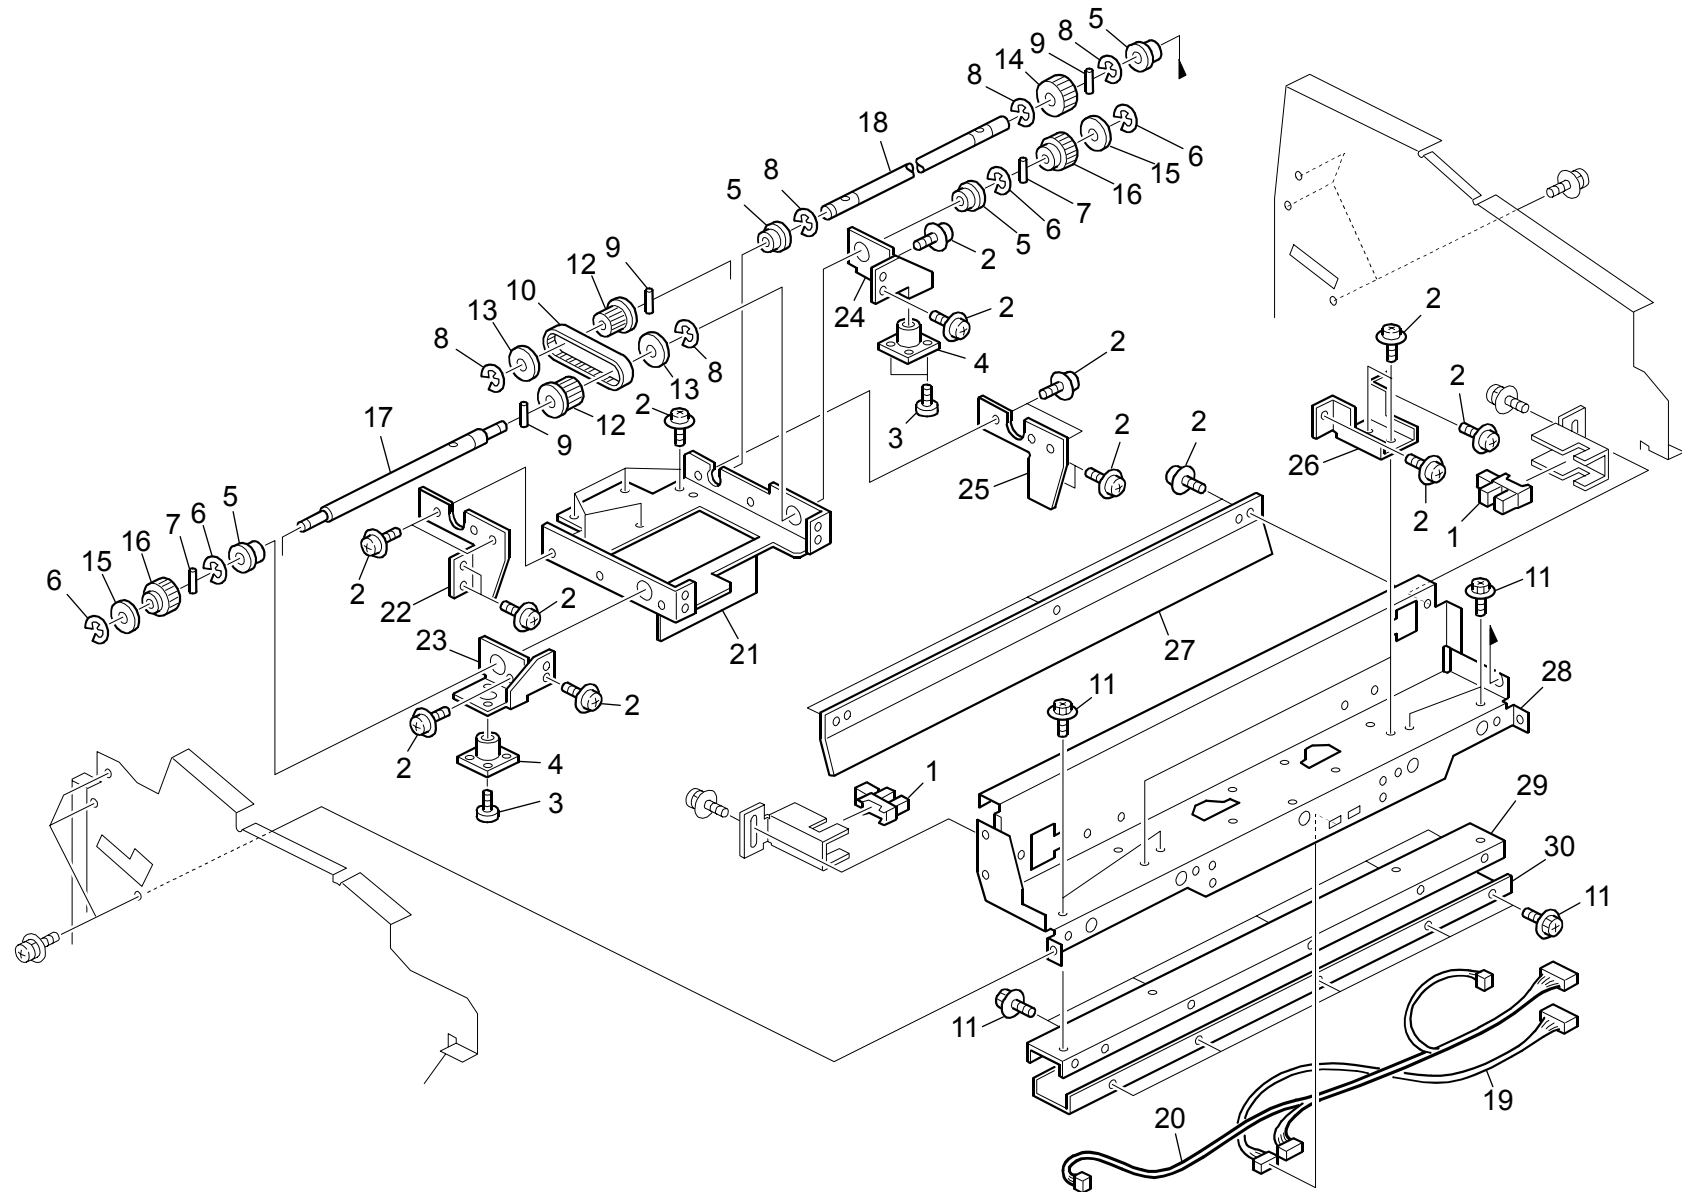


35.Stacking Tray Section 4 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5254	Photointerruptor:PF2286P475	2
2	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	24
3	D391 1113	Screw:M3x6:030060FNBI	4
4	D391 1355	Radial Ball Bearing:Slide:PF4140P989A	2
5	D391 1239	Bushing:DIA8:NS-MTL00013B	4
6	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	4
7	D391 1154	Parallel Pin:2x10:HP020100SCH	2
8	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	5
9	B660 4715	Parallel Pin:HP020120SCH	3
10	D391 1221	Synchronous Belt:NS-BLT00407B	1
11	B660 4835	Screw:NS-SCR00045A	14
12	D391 1664	Timing Pulley:T24:PF4140P242	1
13	D391 1681	Flange:22mm:PF4099P755	1
14	D391 1678	Gear:Z20:PF4140P955	1
15	D391 1665	Roller:Tray:PF4140P184	2
16	D391 1683	Gear:PF4140P164	2
17	D391 1807	Shaft:Drive:Base:PF4140P185	1
18	D391 1808	Shaft:Drive:Rising Tray:PF4140P192	1
19	D391 1908	Harness:Connecting:Motor:PF4140K705	1
20	D391 1909	Harness:Sensor:Stack:PF4140K653	1
21	D391 2229	Panel:Front:Tray Bottom Plate:PF4140P183	1
22	D391 2230	Bracket:Tray Bottom Plate:Front:Sub: PF4140P14	1
23	D391 2231	Bracket:Tray Bottom Plate:Front: PF4140P127	1
24	D391 2232	Bracket:Tray Bottom Plate:Rear: PF4140P128	1
25	D391 2233	Bracket:Tray Bottom Plate:Rear:Sub: PF4140P149	1
26	D391 2234	Bracket:Tray:Stay:Sub:PF4140P167	1
27	D391 2235	Cover:Tray:Stay:Upper Lower:PF4140P299	1
28	D391 2236	Stay:Tray:Upper Lower:PF4140P190	1
29	D391 2237	Stay:Tray:Upper Lower:Auxiliary: PF4140P153	1

Index No.	Part No.	Description	Q'ty Per Assembly
30	D391 2238	Stay:Tray:Upper Lower:Auxiliary: PF4140P116	1

36.Stacking Tray Section 5 (D391)

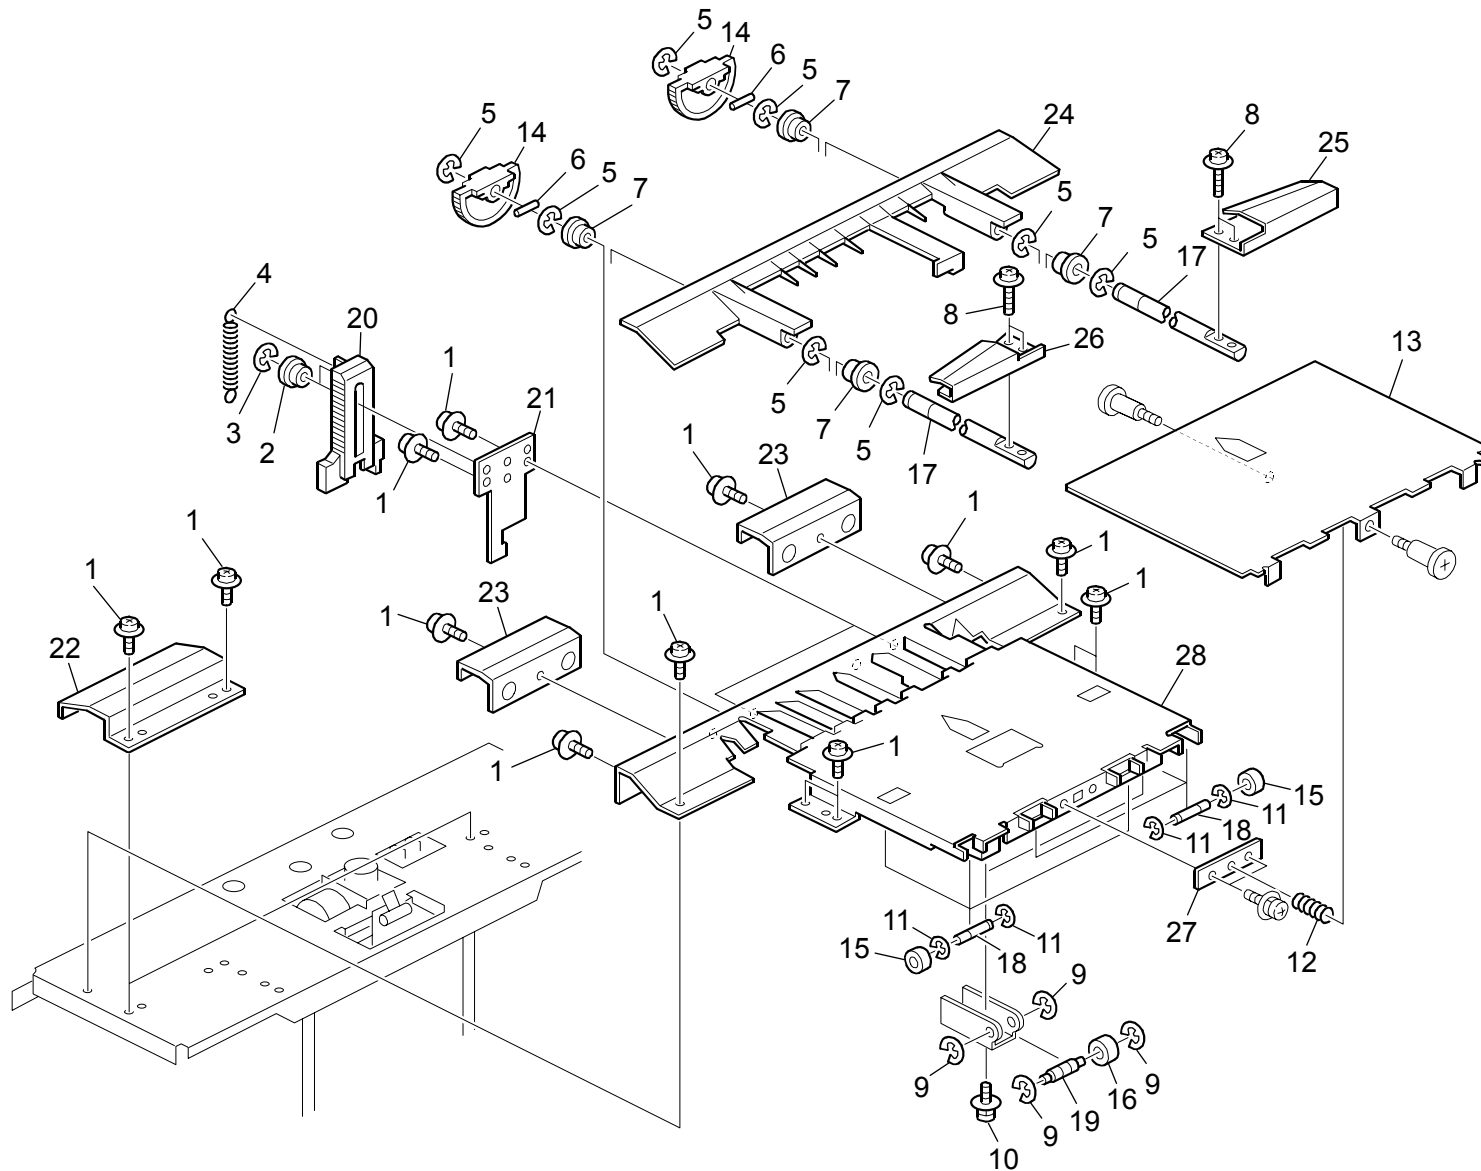


36.Stacking Tray Section 5 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	16
2	D391 1349	Bushing:Pipe:PF4140P943A	2
3	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	2
4	D391 1292	Torsion Spring:Tray:PF4140P161A1	2
5	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	8
6	B660 4715	Parallel Pin:HP020120SCH	2
7	D391 1238	Bushing:DIA6:NS-MTL00007B	4
8	D391 1118	Tapping Screw:M3x8:030080FWIT	4
9	D391 1149	Retaining Rings-E:DIA4:ER040SU-D	8
10	D391 1120	Screw With Washer:M3x8:030080FWWS	2
11	D391 1145	Washer:ER017SU-D	12
12	D391 1283	Spring Plate:Tray:Sub:PF4140P122A2	1
13	D391 1938	Tray Bottom Plate:Sub:PF4140P101	1
14	D391 1684	Gear:PF4140P175	2
15	D391 1685	Roller:PF4140P213	2
16	D391 1668	Roller:Spacer:PF4140P298	1
17	D391 1809	Shaft:Tray:Auxiliary:PF4140P163	2
18	D391 1810	Shaft:Roller:Tray:PF4140Q720	2
19	D391 1811	Shaft:Roller:Tray:PF4140P180	1
20	D391 2239	Rack:Front:Tray:Sub:PF4140P160	1
21	D391 2240	Tray:Sub:PF4140K022:Peen	1
22	D391 2241	Tray:PF4140P174	1
23	D391 2242	Bracket:Tray:Main:Sub:PF4140P177	2
24	D391 2243	Guide:Tray:Move:PF4140P199	1
25	D391 2244	Bracket:Sub:Tray:Rear:PF4140P165	2
26	D391 2245	Bracket:Sub:Tray:Front:PF4140P162	1
27	D391 2246	Plate:Sub:Tray:PF4140Q711	1
28	D391 2247	Tray:Main:PF4140P166	1

Index No.	Part No.	Description	Q'ty Per Assembly

37.Stacking Tray Section 6 (D391)

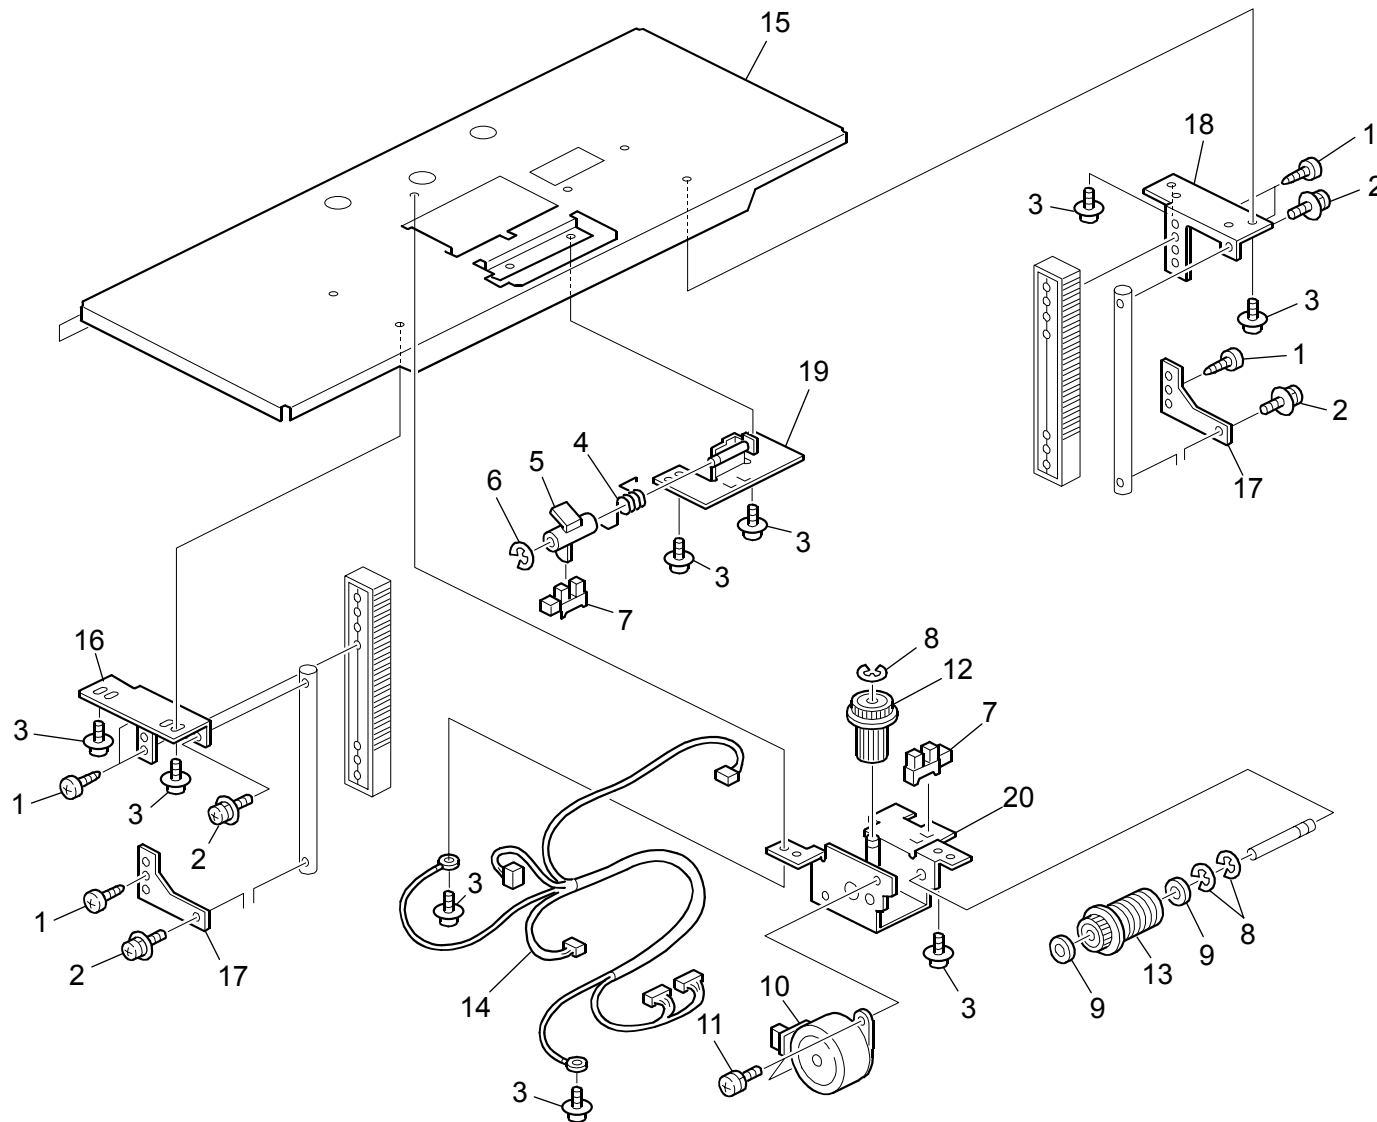


37.Stacking Tray Section 6 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1121	Binding Self-Tapping Screw:M3x10:030100FWBB	6
2	D391 1120	Screw With Washer:M3x8:030080FWWS	4
3	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	9
4	D391 1291	Coil Spring:Lever:Supply:Tray:PF4140P159B1	1
5	D391 1282	Lever:Transport Sensor:PF4140P112B1	1
6	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	1
7	D391 5254	Photointerruptor:PF2286P475	2
8	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	3
9	D391 1164	Washer:HW060FNSN	2
10	D391 5296	DC Stepper Motor:PF4140R405	1
11	D391 1114	Washer:M3x6:030060FWSW	2
12	D391 1672	Gear:PF4140P276	1
13	D391 1666	Gear:PF4140P277	1
14	D391 1910	Harness:Tray:PF4140K667	1
15	D391 2248	Tray:Stay:PF4140P172	1
16	D391 2249	Bracket:Tray:Rack:Upper Front:PF4140P169	1
17	D391 2252	Bracket:Tray:Rack:Lower:PF4140P168	2
18	D391 2251	Bracket:Tray:Rack:Upper Rear:PF4140P171	1
19	D391 2253	Tray:Sensor:PF4140K021:Peen	1
20	D391 2254	Tray:Worm Gear:PF4140K019:Peen	1

Index No.	Part No.	Description	Q'ty Per Assembly

38.Sub Gripper Section 1 (D391)

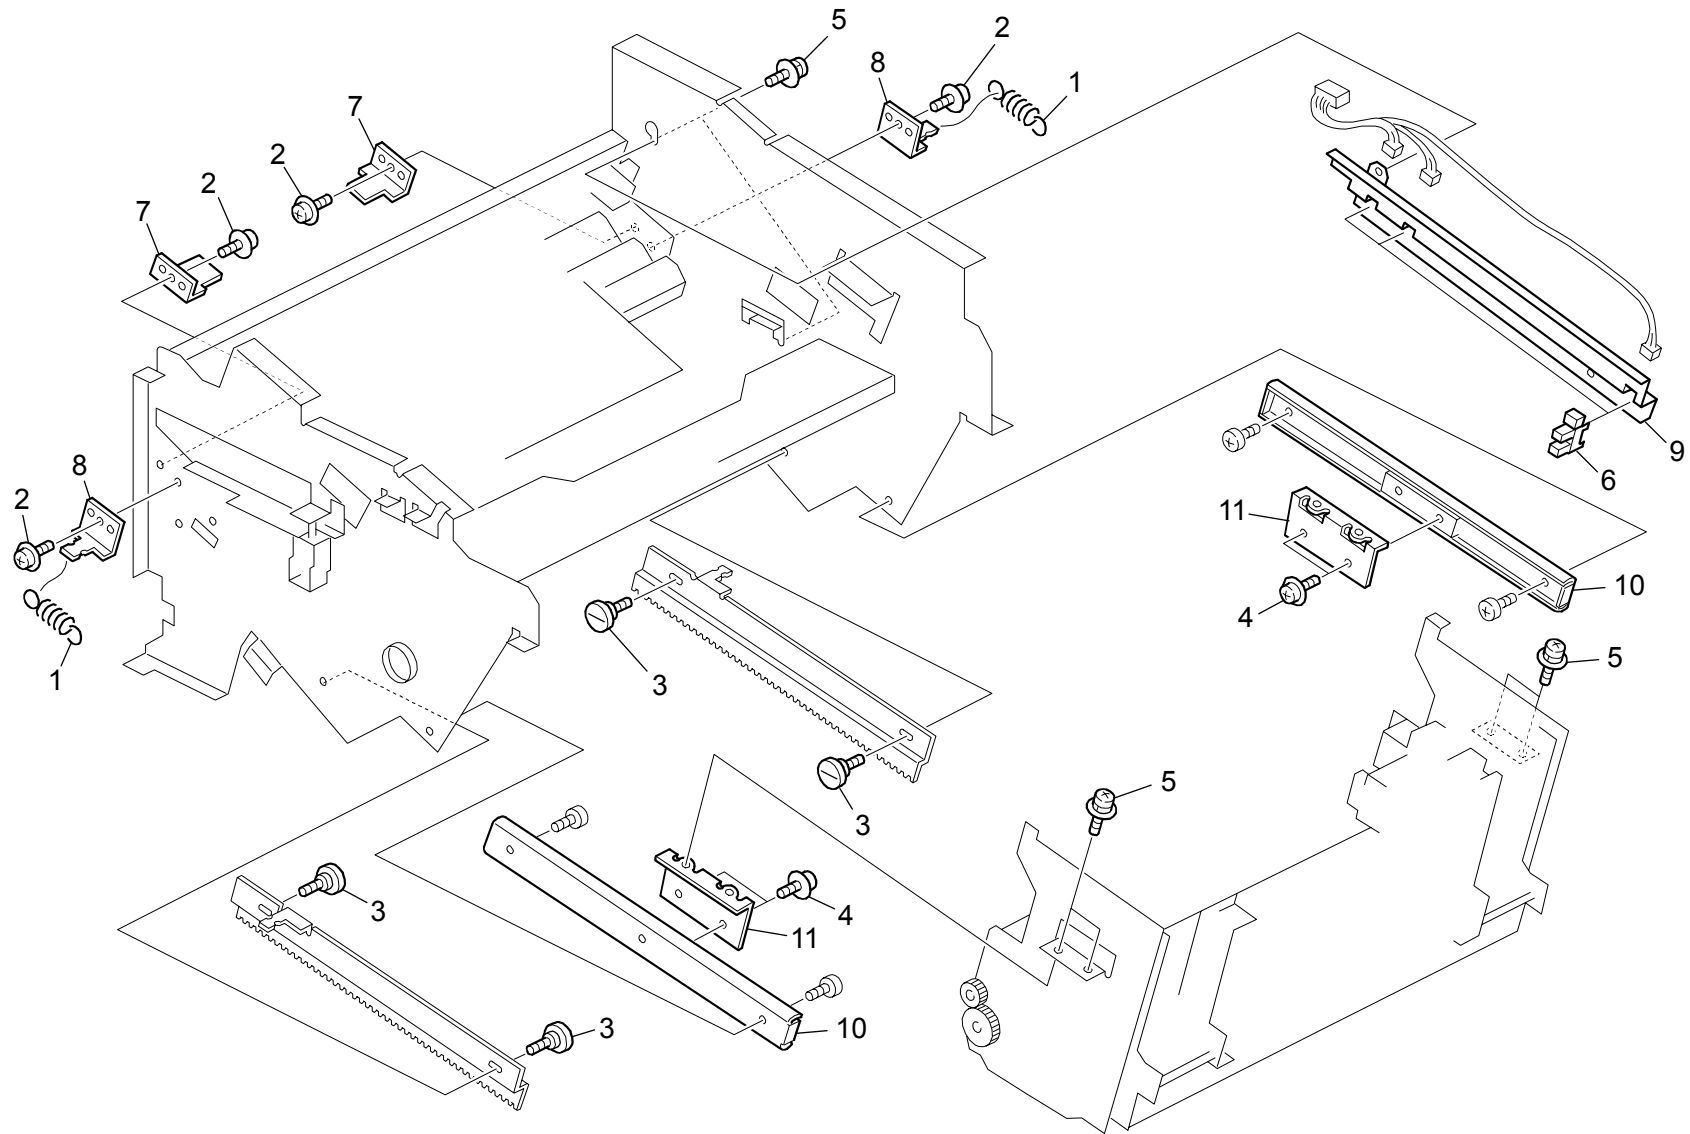


38.Sub Gripper Section 1 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1308	Coil Spring:PF4140P362A	2
2	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	4
3	D391 1319	Screw:PF4140P545A1	4
4	D391 1126	Pan Head Screw W/Washer:M4x4: 040040FWIT	4
5	D391 1120	Screw With Washer:M3x8:030080FWWS	6
6	D391 5254	Photointerruptor:PF2286P475	3
7	D391 2255	Bracket:Sub:Grip:Stopper:PF4140Q700	2
8	D391 2256	Bracket:Coil Spring:Slide:PF4140P359	2
9	D391 2257	Bracket:Sensor:Slide:PF4140P364	1
10	D391 2258	Rail:2715-35:PF4140P983	2
11	D391 2259	Bracket:Rail:Move:PF4140P358	2

Index No.	Part No.	Description	Q'ty Per Assembly

39.Sub Gripper Section 2 (D391)

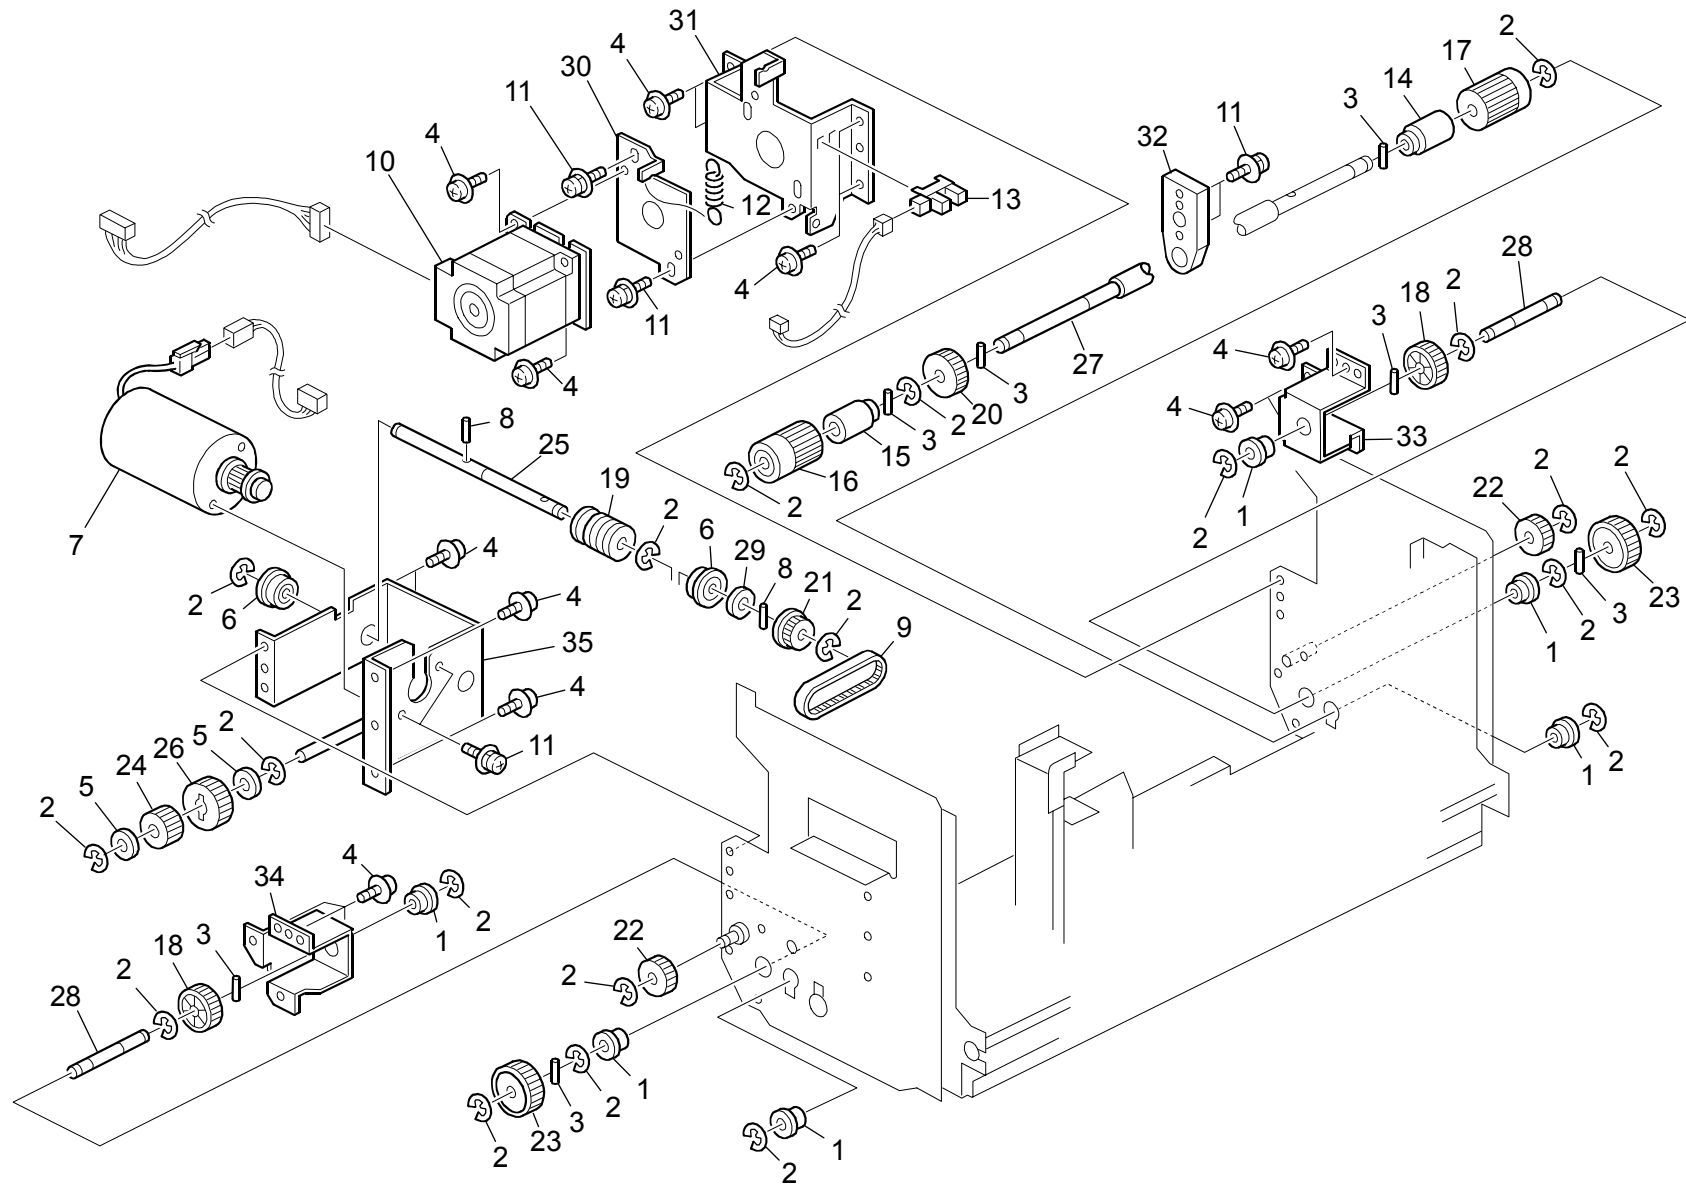


39.Sub Gripper Section 2 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1108	Bushing:606262	6
2	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	20
3	D391 1156	Parallel Pin:2x16:HP020160SCH	7
4	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	16
5	D391 1165	Washer:HW080FWSN	2
6	D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	2
7	D391 5271	DC Motor:PF4140K632	1
8	D391 1155	Parallel Pin:2x14:HP020140SCH	2
9	D391 1204	Synchronous Belt:NS-BLT00381A	1
10	D391 5270	DC Stepper Motor:PF4140K631	1
11	D391 1120	Screw With Washer:M3x8:030080FWWS	6
12	D391 1310	Tension Spring:PF4140P391D1	1
13	D391 5254	Photointerruptor:PF2286P475	1
14	D391 1351	Torque Limiter Mechanical Clutch:500:Left: PF4140P985A	1
15	D391 1352	Torque Limiter Mechanical Clutch:500:Right: PF4140P986A	1
16	D391 1430	Gear:Mechanical Roller Clutch:Front: PF4140P311	1
17	D391 1431	Gear:Mechanical Roller Clutch:Rear: PF4140P312	1
18	D391 1433	Gear:30Z:PF4140P997A	2
19	D391 1507	Gear:Worm Gear:PF4140P484	1
20	D391 1491	Gear:Z24:PF4140P387A	1
21	D391 1492	Pulley:T18:PF4140P998A	1
22	D391 1493	Gear:Grip:Main:PF4140P406A1	2
23	D391 1494	Gear:Z30:PF4140P996A	2
24	D391 1496	Gear:100-20-30:PF4140P488B2	1
25	D391 1503	Shaft:Gear:Worm Gear:PF4140P388	1
26	D391 1506	Gear:PF4140P394	1
27	D391 1812	Shaft:Move:PF4140P313	1
28	D391 1813	Shaft:Drive:Move:PF4140P310	1
29	D391 1686	Slider:Pw080100	1
30	D391 2260	Plate:Tension:Motor:PF4140P379	1

Index No.	Part No.	Description	Q'ty Per Assembly
31	D391 2261	Bracket:Motor:Upper Lower:Move: PF4140P315	1
32	D391 2262	Holder:Shaft:Move:PF4140P398	1
33	D391 2263	Bracket:Shaft:Move:Rear:PF4140P385	1
34	D391 2264	Bracket:Shaft:Move:Front:PF4140P386	1
35	D391 2265	Bracket:Move:Motor:PF4140K024:Peen	1

40.Sub Gripper Section 3 (D391)

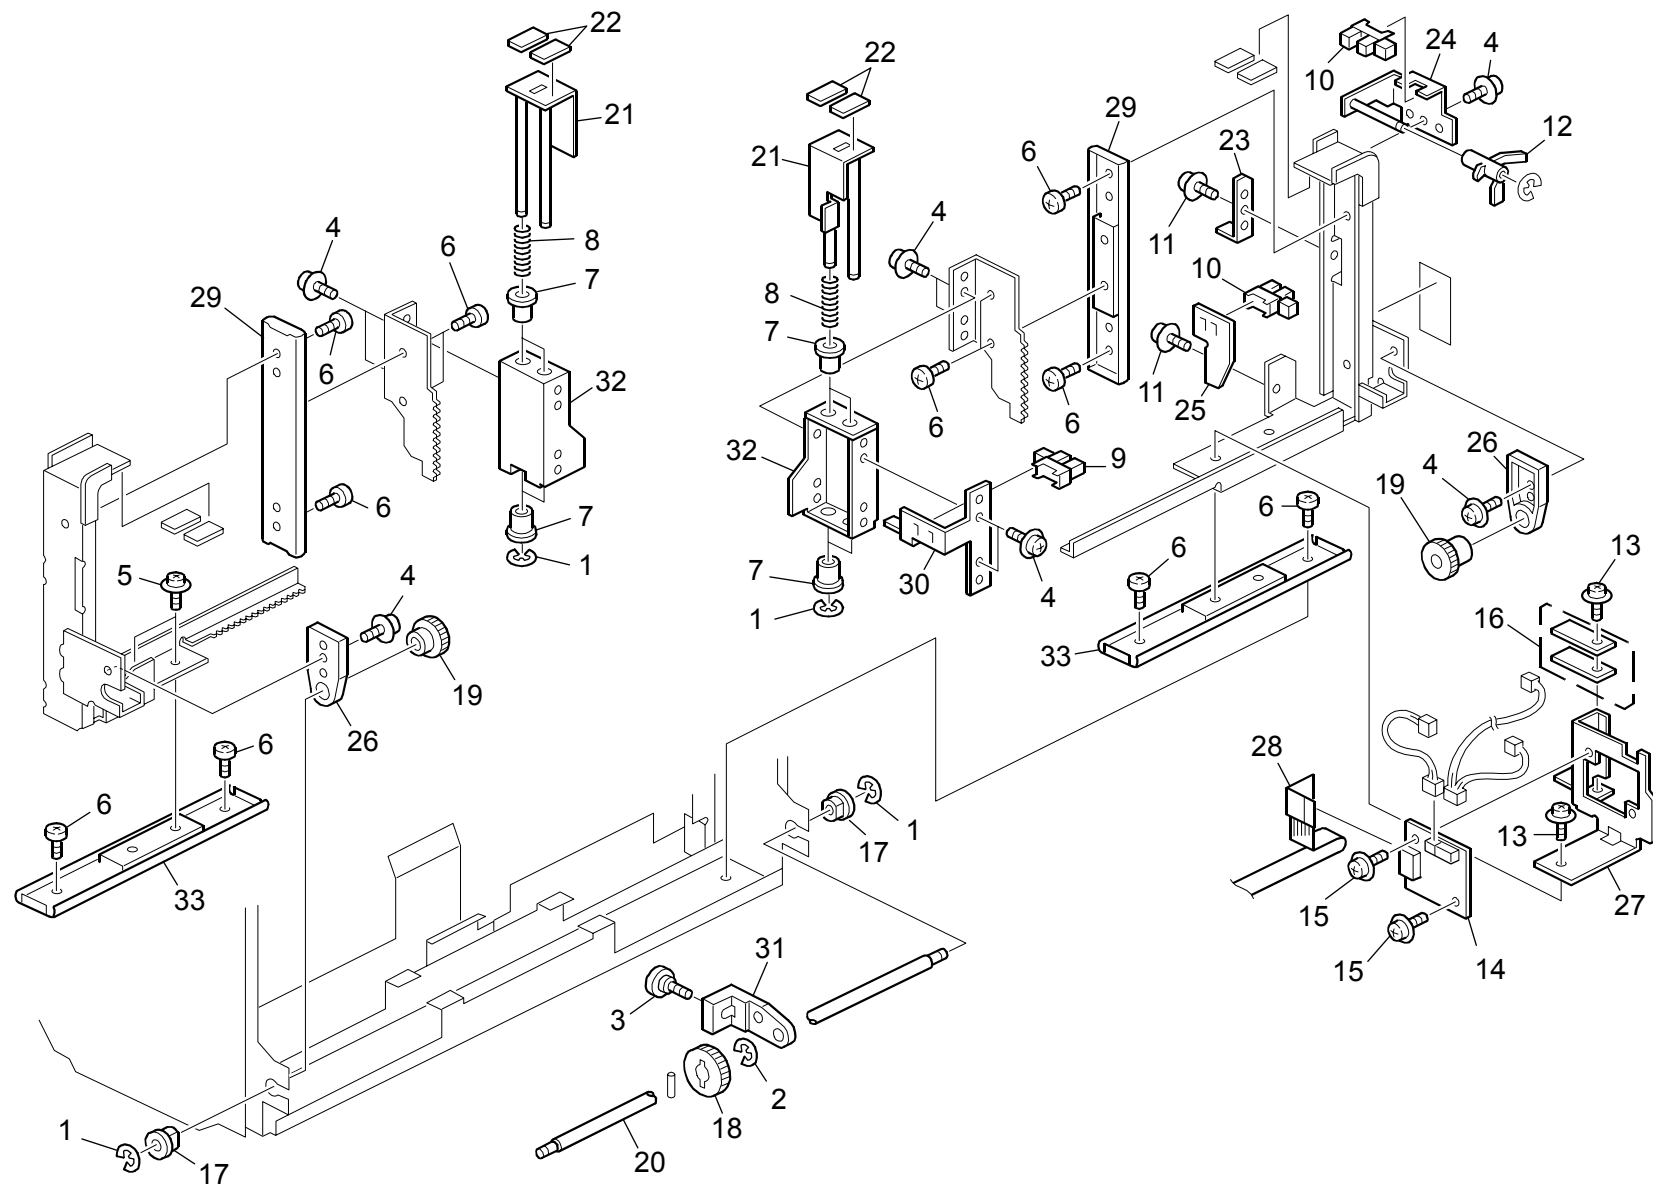


40.Sub Gripper Section 3 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	6
2	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	1
3	D391 1254	Screw:3.4x6:PF2254P326A1	1
4	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	9
5	D391 1126	Pan Head Screw W/Washer:M4x4: 040040FWIT	2
6	B660 4572	Screw:040040FNBI	12
7	D391 1309	Bushing:PF4140P371A1	8
8	D391 1306	Coil Spring:Grip:PF4140P348A	4
9	D391 5251	Photointerruptor:E314000729	1
10	D391 5254	Photointerruptor:PF2286P475	2
11	D391 1109	Tapping Screw:M3x4:030040fwit	2
12	D391 1307	Lever:Paper Sensor:Surface:PF4140P357C2	1
13	D391 1129	Tapping Screw:M4x8:040080FWIT	2
14	D391 5260	Interface Board:PF4140K617	1
15	D391 1120	Screw With Washer:M3x8:030080FWWS	2
16	D391 1510	Bracket:Plate:Core:PF4140K085A:Ass'y	1
17	D391 1687	Plain Shaft Bearing:NS-MTI00009	2
18	D391 1688	Gear:Z30:PF4155P305	1
19	D391 1689	Gear:Z20:PF4140P332	2
20	D391 1814	Shaft:Grip:PF4140P330	1
21	D391 2266	Grip:Plate:PF4140K029:Peen	2
22	D391 2267	Grip:Rubber:PF4140P341	4
23	D391 2268	Plate:Size:Move:Sensor:PF4140P353	1
24	D391 2269	Bracket:Sensor:PF4140K045:Peen	1
25	D391 2270	Bracket:Home Position Sensor:Grip: PF4140P354	1
26	D391 2271	Grip:Fix:PF4140P396	2
27	D391 2272	Bracket:Holder:Grip:PF4140P352	1
28	D391 5308	Harness:Size:Move:PF4140R005	1
29	D391 2275	Rail:2715-15:PF4140P984	2
30	D391 2276	Bracket:Pressure Sensor:Grip:PF4140P350	1
31	D391 2277	Holder:Shaft:Grip:PF4140P331	1
32	D391 2278	Holder:Grip:PF4140P345	2
33	D391 2279	Rail:2715-20:PF4140P982	2

Index No.	Part No.	Description	Q'ty Per Assembly



41.Sub Gripper Section 4 (D391)

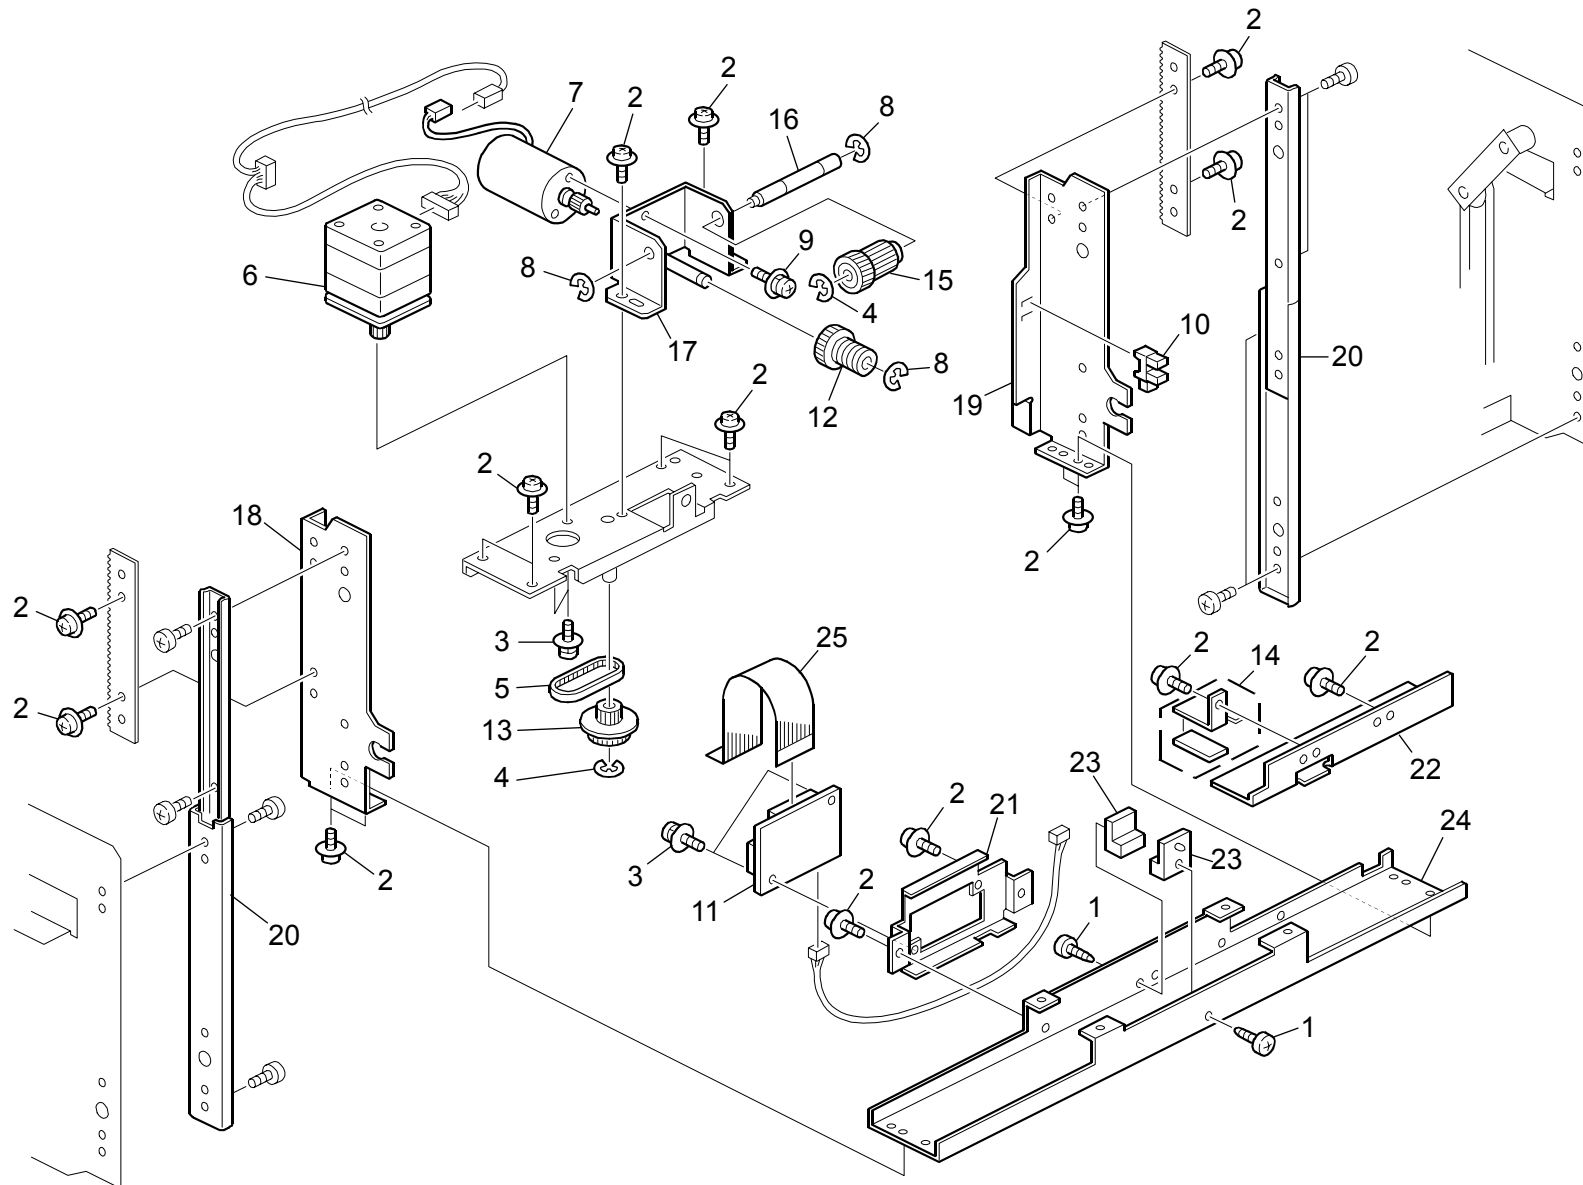


41.Sub Gripper Section 4 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1121	Binding Self-Tapping Screw:M3x10:030100FWBB	2
2	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	18
3	D391 1120	Screw With Washer:M3x8:030080FWWS	4
4	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	2
5	D391 1170	Synchronous Belt:NS-BLT00050B	1
6	D391 5275	DC Stepper Motor:PF4140K637	1
7	D391 5277	DC Motor:PF4140K643	1
8	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	3
9	D391 1111	Screw With Washer:M3x5:030050FWWS	2
10	D391 5254	Photointerruptor:PF2286P475	1
11	D391 5259	Interface Board:PF4140K616	1
12	D391 1497	Gear:Worm Gear:PF4140P383A2	1
13	D391 1498	Pulley:T20:PF4140P338A1	1
14	D391 1509	Bracket:Plate:Cavity:PF4140K084A:Ass'y	1
15	D391 1425	Gear:GRIP:MAIN:PF4140P382A2	1
16	D391 1815	Shaft:Grip:PF4140P381	1
17	D391 2280	Bracket:Motor:Grip:PF4140K027:Peen	1
18	D391 2281	Frame:Upper Lower:Move:Front:PF4140P325	1
19	D391 2282	Frame:Upper Lower:Move:Rear:PF4140P326	1
20	D391 2283	Rail:2721-20:PF4140P981	2
21	D391 2284	Bracket:Holder:Base:PF4140P372	1
22	D391 2285	Bracket:Holder:Move:PF4140P366	1
23	D391 2286	Holder:Sub:Grip:PF4140P397	2
24	D391 2287	Stay:Upper Lower:Move:PF4140P324	1
25	D391 5291	Harness:Sub:Grip:PF4140R004	1

Index No.	Part No.	Description	Q'ty Per Assembly

42.Sub Gripper Section 5 (D391)

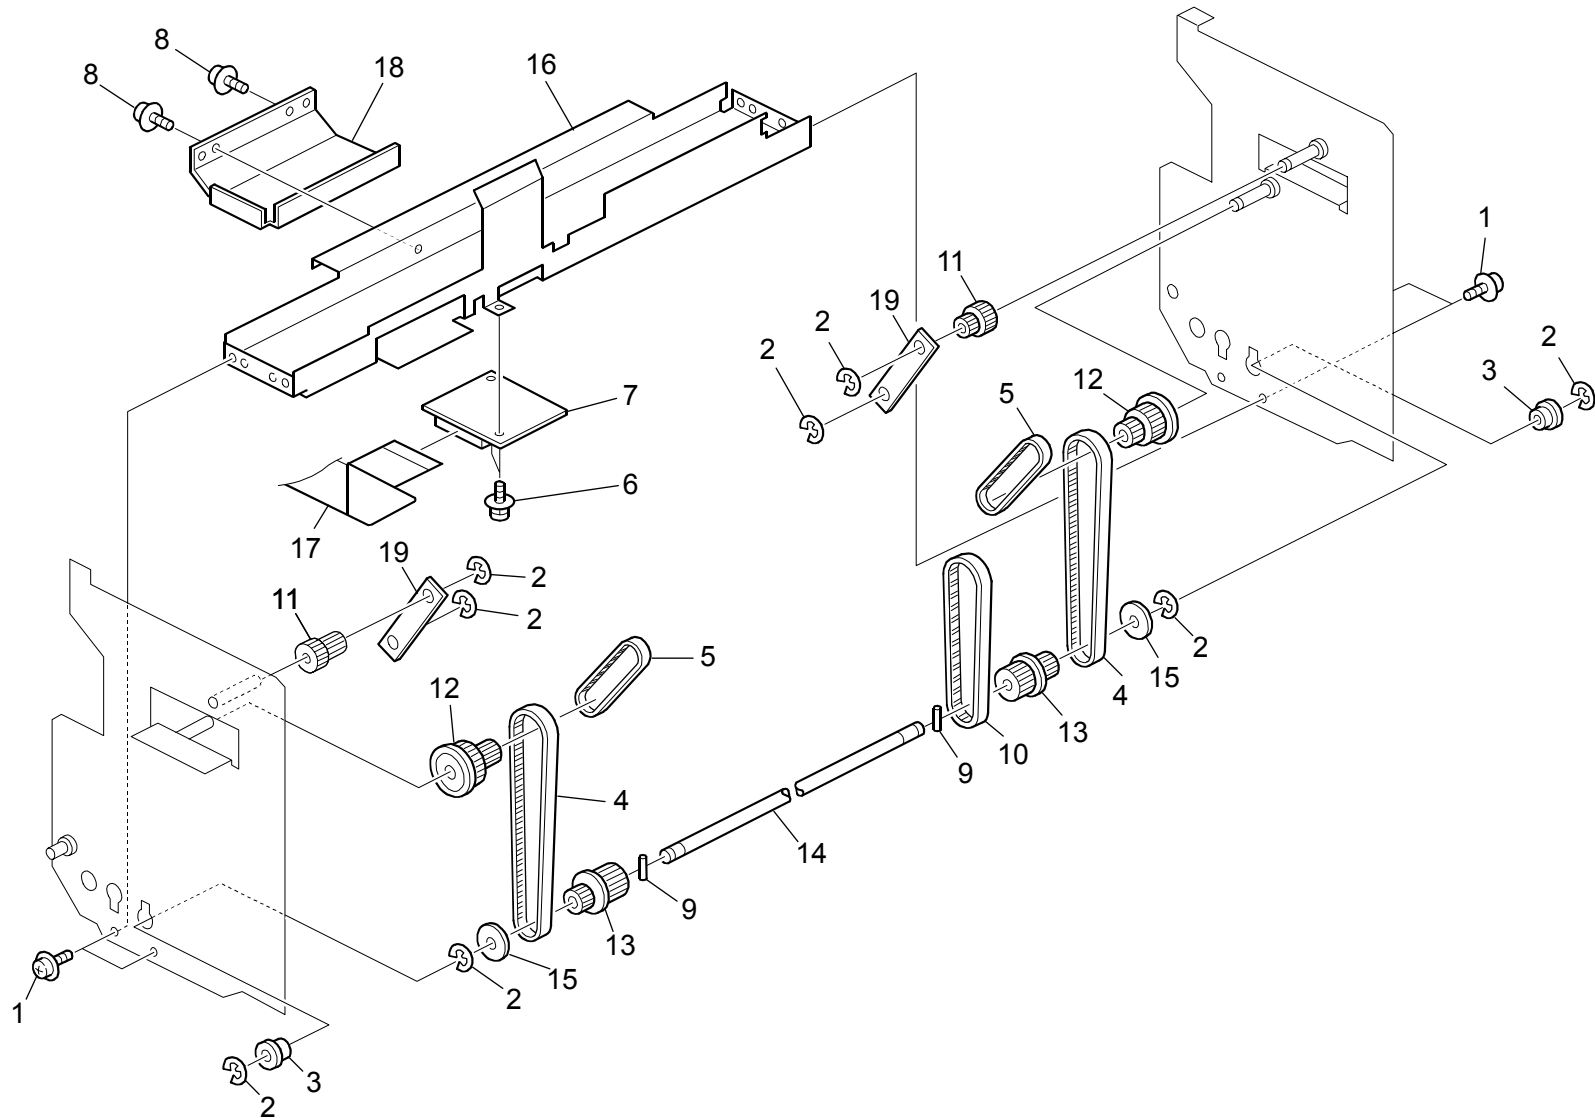


42.Sub Gripper Section 5 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	4
2	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	8
3	D391 1108	Bushing:606262	2
4	D391 1195	Synchronous Belt:NS-BLT00358B	2
5	D391 1174	Synchronous Belt:NS-BLT00067B	2
6	D391 1120	Screw With Washer:M3x8:030080FWWS	2
7	D391 5258	Interface Board:PF4140K615	1
8	D391 1127	Tapping Screw:M4x8:040080FNTP	2
9	D391 1155	Parallel Pin:2x14:HP020140SCH	2
10	D391 1190	Synchronous Belt:NS-BLT00353B	1
11	D391 1513	Timing Pulley:S2MX20:PF4140P321	2
12	D391 1690	Timing Pulley:PF4140P322	2
13	D391 1691	Timing Pulley:PF4140P318	2
14	D391 1816	Shaft:Move:PF4140P317	1
15	D391 1681	Flange:22mm:PF4099P755	2
16	D391 2288	Stay:Base:PF4140P302	1
17	D391 5306	Harness:Move:PF4140R003	1
18	D391 2289	Bracket:Sensor:Cover:PF4140P376	1
19	D391 2290	Plate:PF4140P320	2

Index No.	Part No.	Description	Q'ty Per Assembly

43.Main Gripper Section 1 (D391)

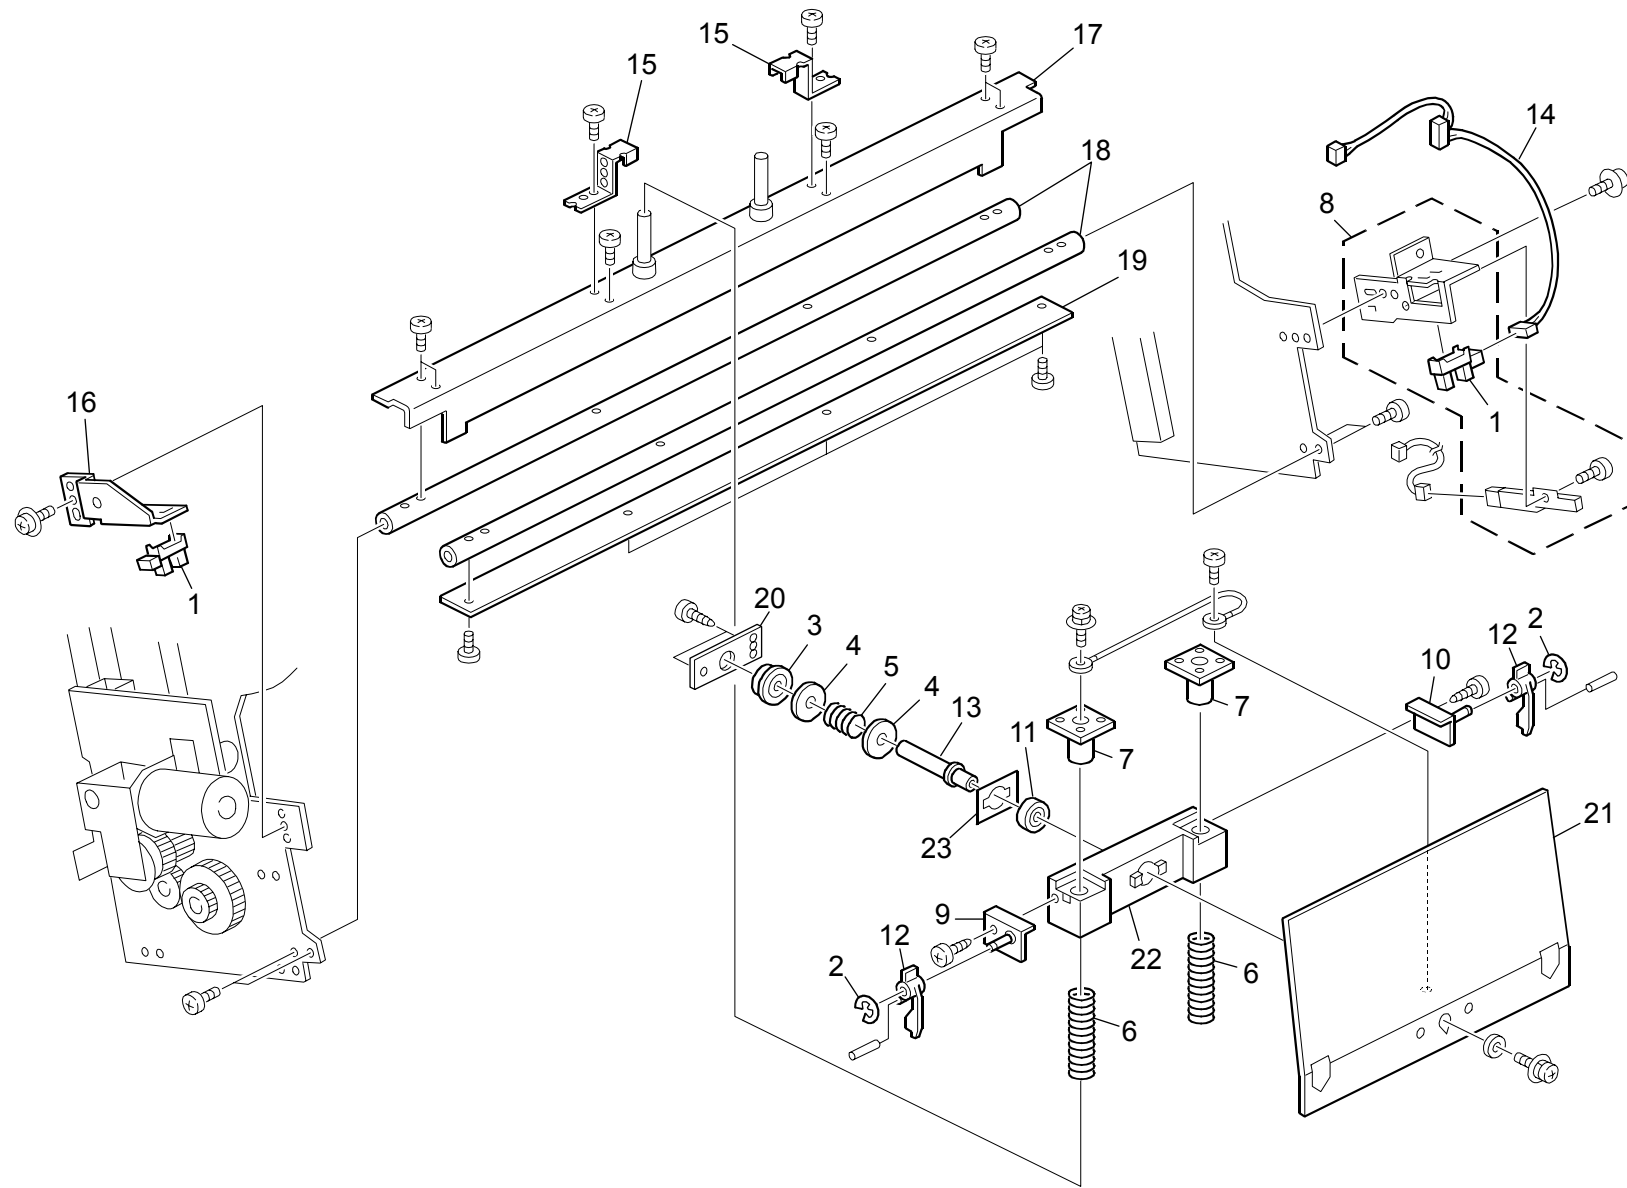


43.Main Gripper Section 1 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5254	Photointerruptor:PF2286P475	2
2	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	2
3	D391 1692	Radial Ball Bearing:NS-BRG00117	1
4	D391 1313	Washer:PF4140P449A	2
5	D391 1314	Compression Spring:PF4140P451D1	1
6	D391 1315	Compression Spring:PF4140P453D1	2
7	D391 1355	Radial Ball Bearing:Slide:PF4140P989A	2
8	D391 1001	Pressure Sensor:PF4140L418	1
9	D391 1936	Bracket:Clip:PF4140K071:Peen	1
10	D391 1937	Bracket:Clip:PF4140K046:Peen	1
11	D391 1692	Radial Ball Bearing:NS-BRG00117	1
12	D391 1693	Lever:Stopper:PF4140P486	2
13	D391 1817	Shaft:Grip:PF4140P446	1
14	D391 1911	Harness:Mg:PF4140K792	1
15	D391 2291	Bracket:Stopper:PF4140P443	2
16	D391 2292	Bracket:Pressure Sensor:PF4140P476	1
17	D391 2293	Bracket:PF4140K039:Peen	1
18	D391 2294	Plate:Shaft:PF4140P497:Peen	2
19	D391 2295	Plate:Main:Grip:PF4140P498:Peen	1
20	D391 2296	Plate:Grip:Small:PF4140P448:Peen	1
21	D391 2298	Guide Plate:Grip:Small:PF4140P442:Peen	1
22	D391 2299	Block:Grip:Small:PF4140P445:Peen	1
23	D391 2301	Supporting Plate:Main:Small:Grip:PF4140P339	1

Index No.	Part No.	Description	Q'ty Per Assembly

44.Main Gripper Section 2 (D391)

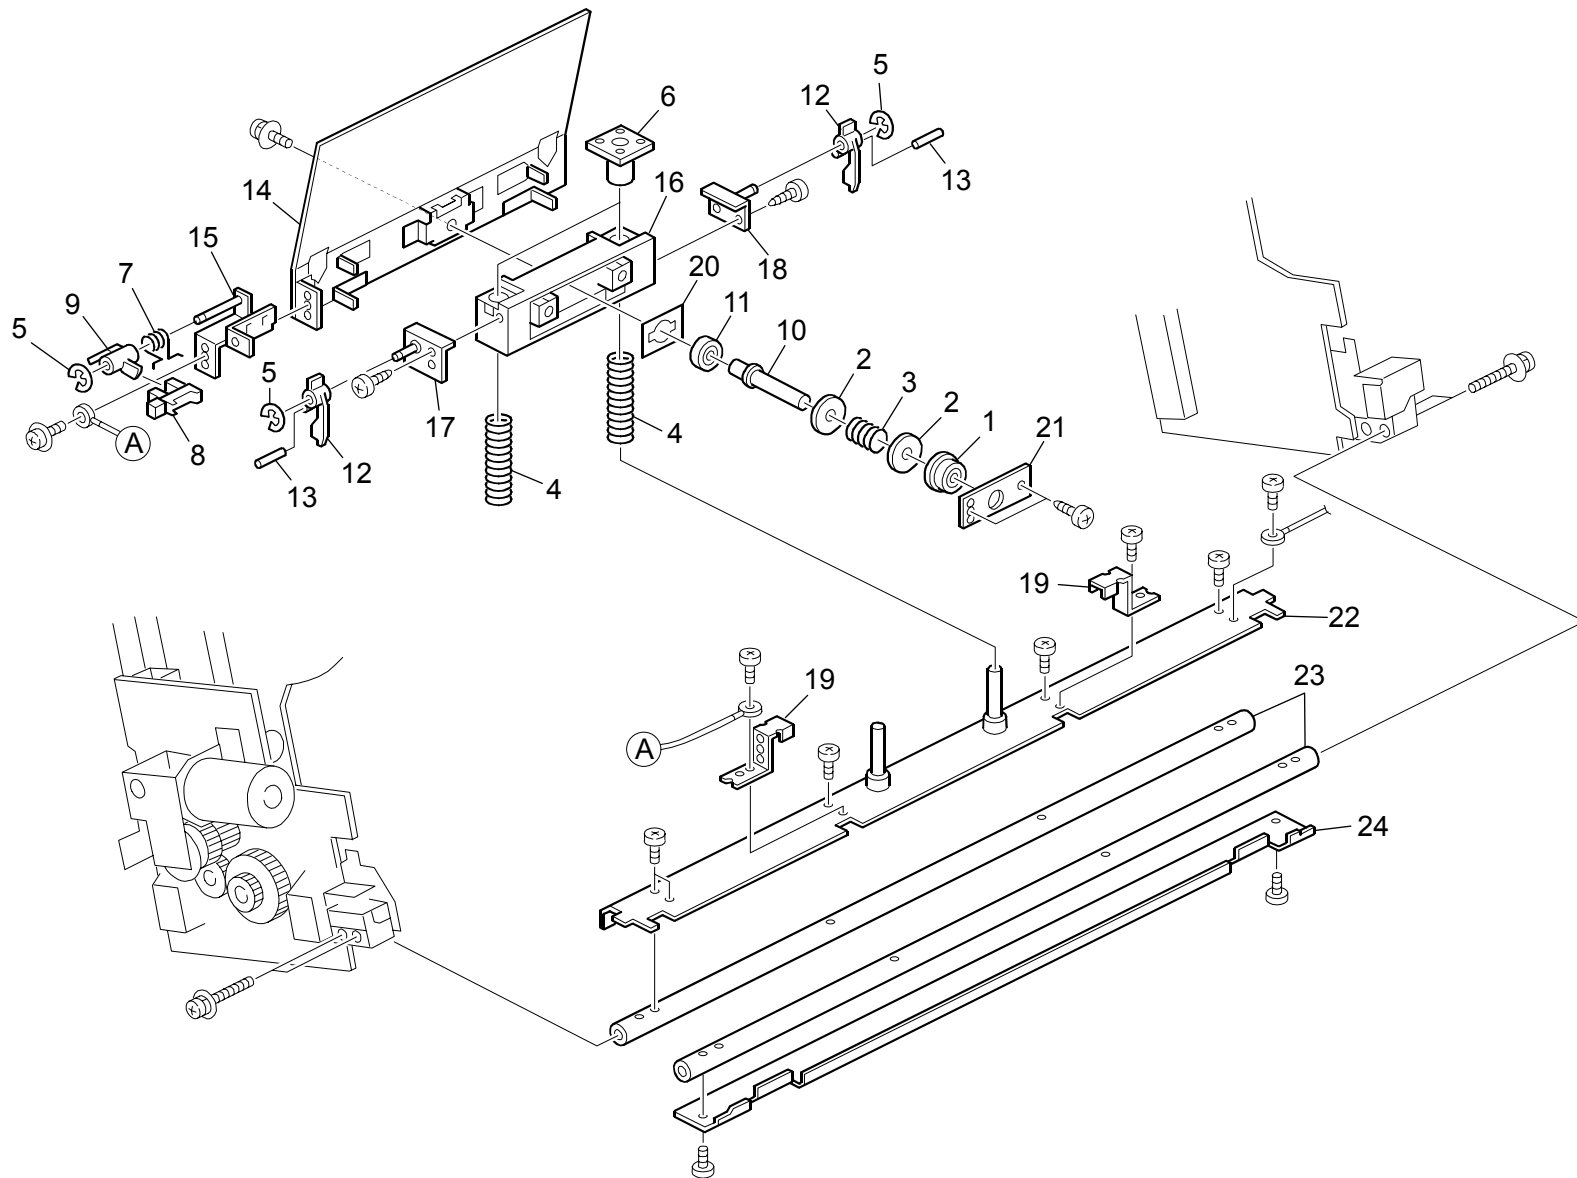


44.Main Gripper Section 2 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1231	Radial Ball Bearing:DIA8DIA12: NS-BRG00084B	1
2	D391 1313	Washer:PF4140P449A	2
3	D391 1314	Compression Spring:PF4140P451D1	1
4	D391 1317	Compression Spring:PF4140P496A	2
5	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	3
6	D391 1355	Radial Ball Bearing:Slide:PF4140P989A	2
7	D391 1285	Coil Spring:Lever:Sensor:PF4140P132	1
8	D391 5254	Photointerruptor:PF2286P475	1
9	D391 1282	Lever:Transport Sensor:PF4140P112B1	1
10	D391 1818	Shaft:Grip:PF4140P447	1
11	D391 1692	Radial Ball Bearing:NS-BRG00117	1
12	D391 1693	Lever:Stopper:PF4140P486	2
13	D391 1160	Parallel Pin:3x14:HP030140SCH	2
14	D391 2298	Guide Plate:Grip:Small:PF4140P442:Peen	1
15	D391 2303	Bracket:Sensor:PF4140K042:Peen	1
16	D391 2299	Block:Grip:Small:PF4140P445:Peen	1
17	D391 2305	Bracket:Stopper:1:PF4140K043:Peen	1
18	D391 2306	Bracket:Stopper:2:PF4140K044:Peen	1
19	D391 2291	Bracket:Stopper:PF4140P443	2
20	D391 2301	Supporting Plate:Main:Small:Grip: PF4140P339	1
21	D391 2296	Plate:Grip:Small:PF4140P448:Peen	1
22	D391 2310	Bracket:Main:Grip:PF4140K040:Peen	1
23	D391 2311	Shaft:Main:Grip:PF4140P473	2
24	D391 2312	Plate:Main:Grip:PF4140P499	1

Index No.	Part No.	Description	Q'ty Per Assembly

45.Main Gripper Section 3 (D391)

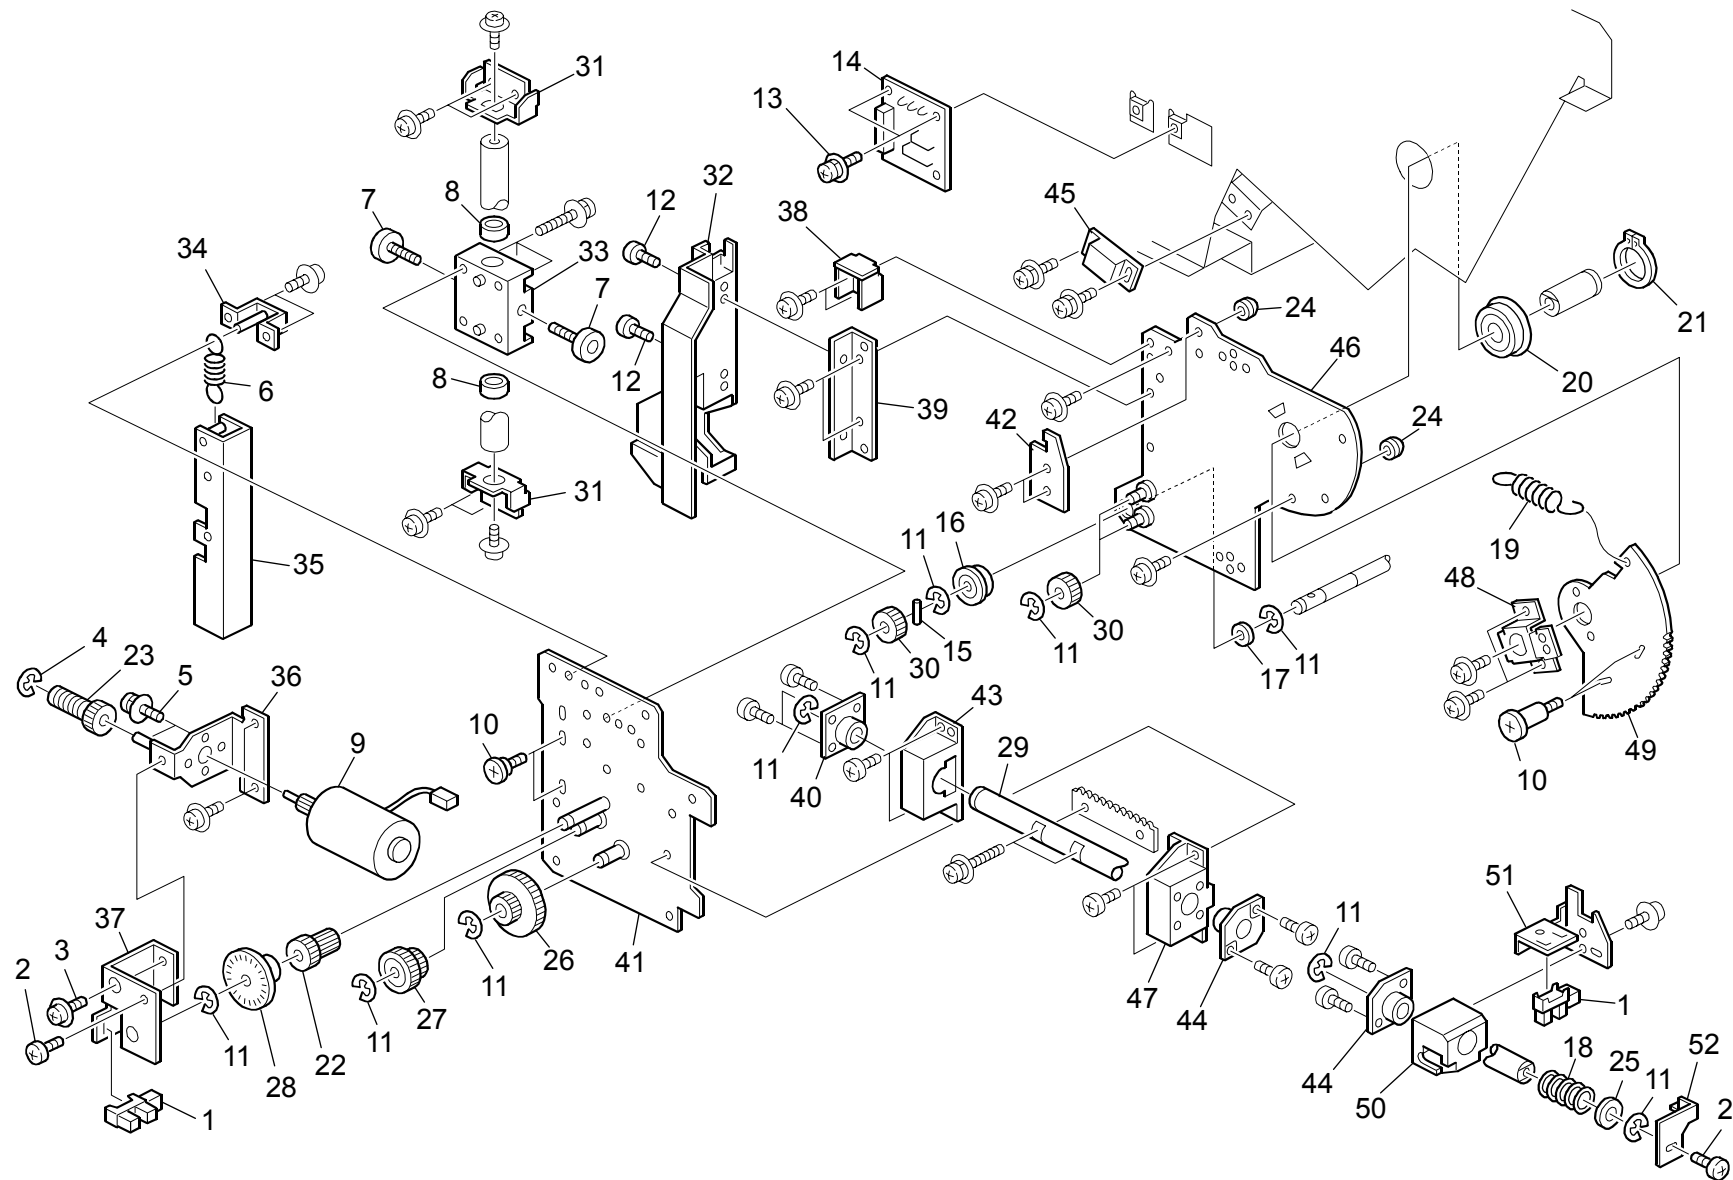


45.Main Gripper Section 3 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5254	Photointerruptor:PF2286P475	2
2	D391 1168	Tapping Screw:IR4016P167A	2
3	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	1
4	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	1
5	D391 1111	Screw With Washer:M3x5:030050FWWS	2
6	D391 1312	Tension Spring:PF4140P428A	1
7	D391 1354	Roller:PF4140P988A	2
8	D391 1353	Bushing:PF4140P987A	2
9	D391 5277	DC Motor:PF4140K643	1
10	D391 1254	Screw:3.4x6:PF2254P326A1	4
11	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	10
12	B660 4835	Screw:NS-SCR00045A	2
13	D391 1120	Screw With Washer:M3x8:030080FWWS	2
14	D391 5266	PCB:Service:PF4140K623	1
15	D391 1155	Parallel Pin:2x14:HP020140SCH	1
16	D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	1
17	D391 1165	Washer:HW080FWSN	1
18	D391 1316	Compression Spring:PF4140P462A	1
19	D391 1311	Tension Spring:PF4140P407A	1
20	D391 1234	Radial Ball Bearing:DIA15DIA32: NS-BRG00115C	1
21	D391 1356	Retaining Rings-C:PF4140P990A	1
22	D391 1425	Gear:Grip:Main:PF4140P382A2	1
23	D391 1497	Gear:WORM GEAR:PF4140P383A2	1
24	D391 1695	Shaft:Stopper:PF4140P441	2
25	D391 1696	Plain Washer:PF4140P461	1
26	D391 1697	Gear:Z20/Z54:PF4140P419	1
27	D391 1698	Gear:Z16/Z28:PF4140P474	1
28	D391 1699	Encoder:PF4140P475	1
29	D391 1819	Shaft:Grip:PF4140P460	1
30	D391 1493	Gear:GRIP:MAIN:PF4140P406A1	2
31	D391 2313	Bracket:Slide Rail:Upper Lower: PF4140P495	2
32	D391 2314	Cover:Front:Main:Grip:PF4140P466	1
33	D391 2315	Block:Rail:Main:Grip:PF4140P494	1

Index No.	Part No.	Description	Q'ty Per Assembly
34	D391 2316	Bracket:Slide:PF4140K033:Peen	1
35	D391 2317	Rack:Slide:PF4140K034:Peen	1
36	D391 2318	Bracket:Motor:PF4140K032:Peen	1
37	D391 2319	Bracket:Motor:PF4140P423	1
38	D391 2320	Bracket:Turn:Stopper:PF4140P468	1
39	D391 2321	Bracket:Cover:PF4140P483	1
40	D391 2322	Holder:Shaft:PF4140P420	1
41	D391 2323	Frame:Slide:PF4140K035:Peen	1
42	D391 2324	Plate:Turn:Coil Spring:PF4140P405	1
43	D391 2325	Bracket:Slide:PF4140P430	1
44	D391 2326	Holder:Shaft:PF4140P431	2
45	D391 2327	Magnet Catch:PF4130P412	1
46	D391 2328	Frame:Turn:PF4140K030:Peen	1
47	D391 2329	Bracket:Slide:PF4140P422	1
48	D391 2330	Bracket:Turn:Shaft:PF4140P403	1
49	D391 2331	Bracket:Turn:Gear:PF4140P402	1
50	D391 2335	Block:Grip:PF4140P457	1
51	D391 2333	Bracket:Home Position Sensor:PF4140P465	1
52	D391 2334	Plate:Sensor:PF4140P463	1

46.Main Gripper Section 4 (D391)

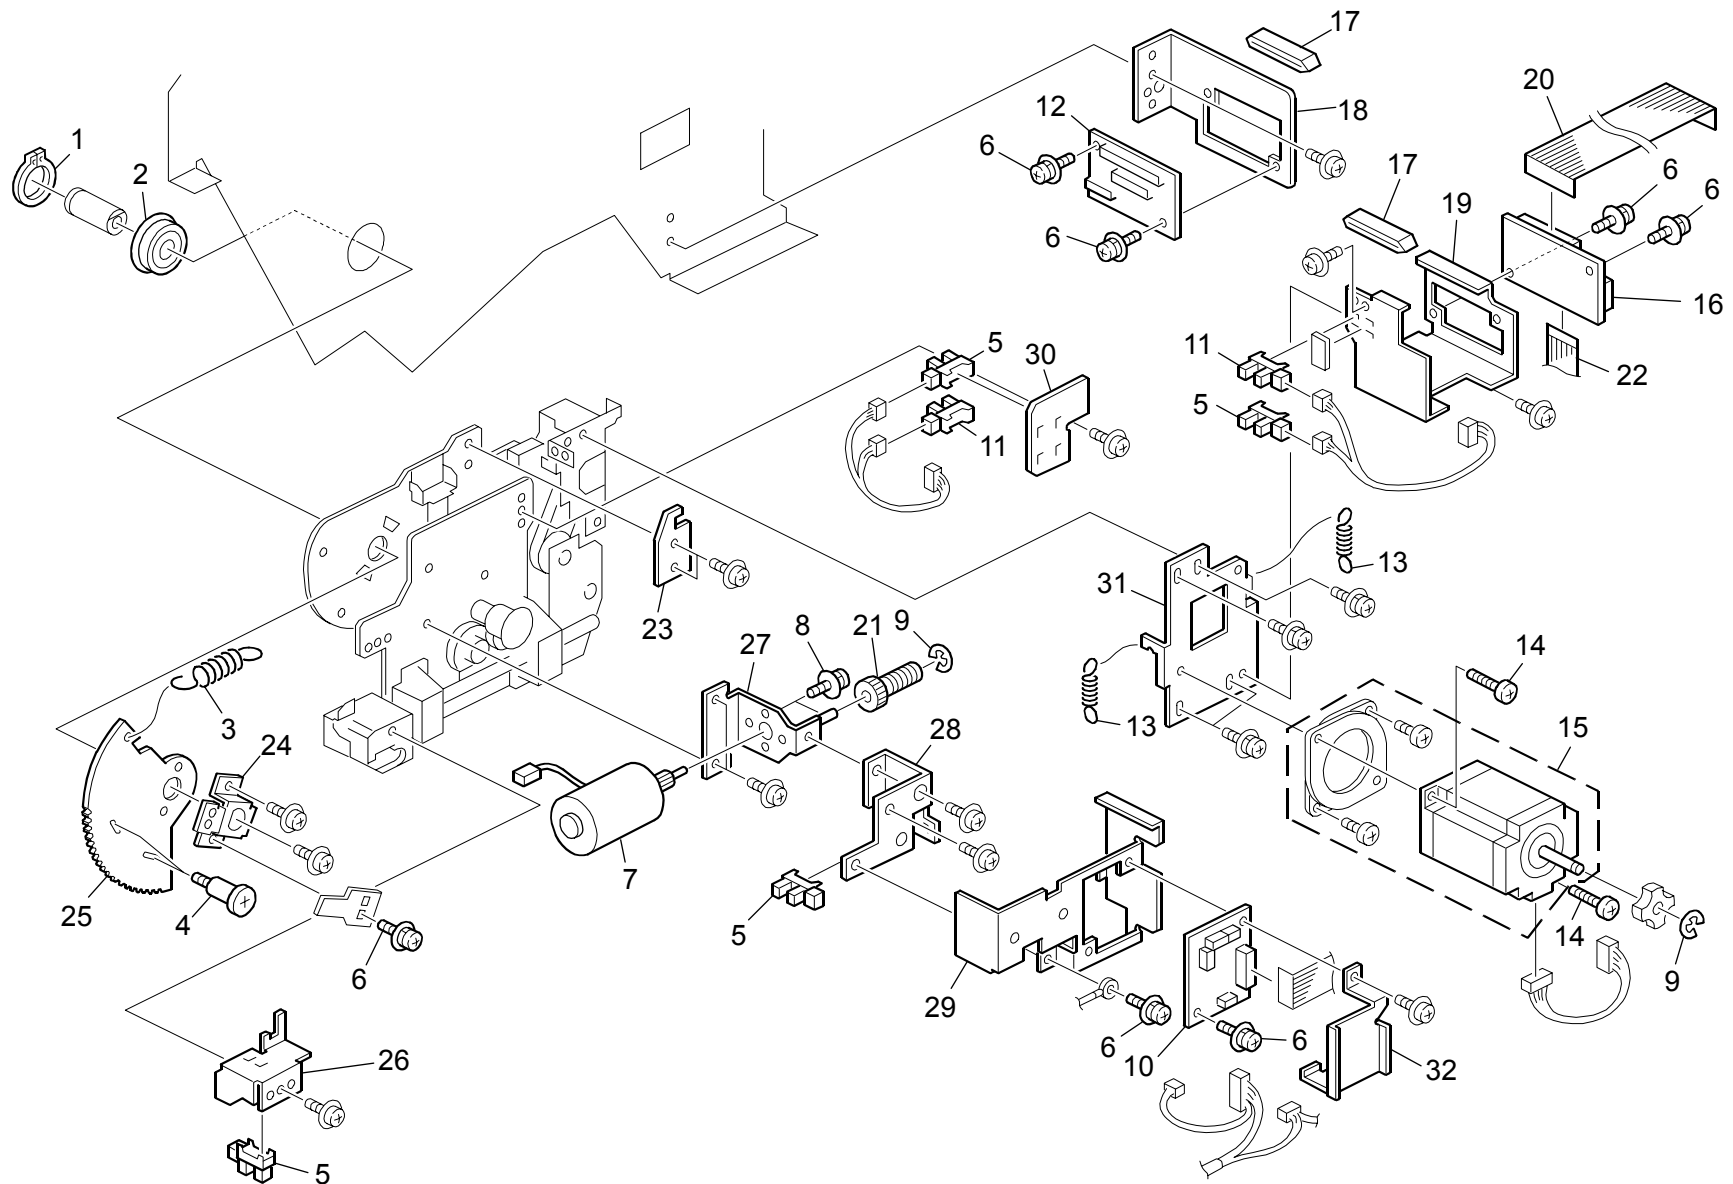


46.Main Gripper Section 4 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1356	Retaining Rings-C:PF4140P990A	1
2	D391 1234	Radial Ball Bearing:DIA15DIA32: NS-BRG00115C	1
3	D391 1311	Tension Spring:PF4140P407A	1
4	D391 1254	Screw:3.4x6:PF2254P326A1	2
5	D391 5254	Photointerruptor:PF2286P475	4
6	D391 1120	Screw With Washer:M3x8:030080FWWS	7
7	D391 5277	DC Motor:PF4140K643	1
8	D391 1111	Screw With Washer:M3x5:030050FWWS	2
9	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	2
10	D391 5263	Interface Board:PF4140K620	1
11	D391 5251	Photointerruptor:E314000729	2
12	D391 5261	Interface Board:PF4140K618	1
13	D391 1310	Tension Spring:PF4140P391D1	2
14	D391 1120	Screw With Washer:M3x8:030080FWWS	2
15	D391 5272	DC Stepper Motor:PF4140K633	1
16	D391 5262	Interface Board:PF4140K619	1
17	D391 1484	Clamp:FFC:E450001316 (Old Type)	2
17	D391 1485	Clamp:FFC:E450001317 (New Type) (NA:M9700300013-)(EU:M9700300016-)	2
18	D391 1482	Bracket:Stay:FFC:1:PF4140P489	1
19	D391 1483	Bracket:Stay:FFC:2:PF4140P490	1
20	D391 5310	Harness:Turn:Grip:PF4140R001	1
21	D391 1497	Gear:WORM GEAR:PF4140P383A2	1
22	D391 2196	Harness:Main:Grip:PF4140R002	1
23	D391 2324	Plate:Turn:Coil Spring:PF4140P405	1
24	D391 2330	Bracket:Turn:Shaft:PF4140P403	1
25	D391 2331	Bracket:Turn:Gear:PF4140P402	1
26	D391 2339	Bracket:Home Position Sensor:Grip: PF4140P464	1
27	D391 2340	Bracket:Grip:Motor:PF4140K036:Peen	1
28	D391 2341	Bracket:Grip:Motor:PF4140P432	1
29	D391 2342	Bracket:Motor:Holder:PF4140P491	1
30	D391 2343	Bracket:Sensor:Upper Lower:Move: PF4140P434	1

Index No.	Part No.	Description	Q'ty Per Assembly
31	D391 2344	Plate:Tension:Motor:PF4140P459	1
32	D391 2308	Bracket:Protector:PF4140P328	1
			
			

47.Main Gripper Section 5 (D391)

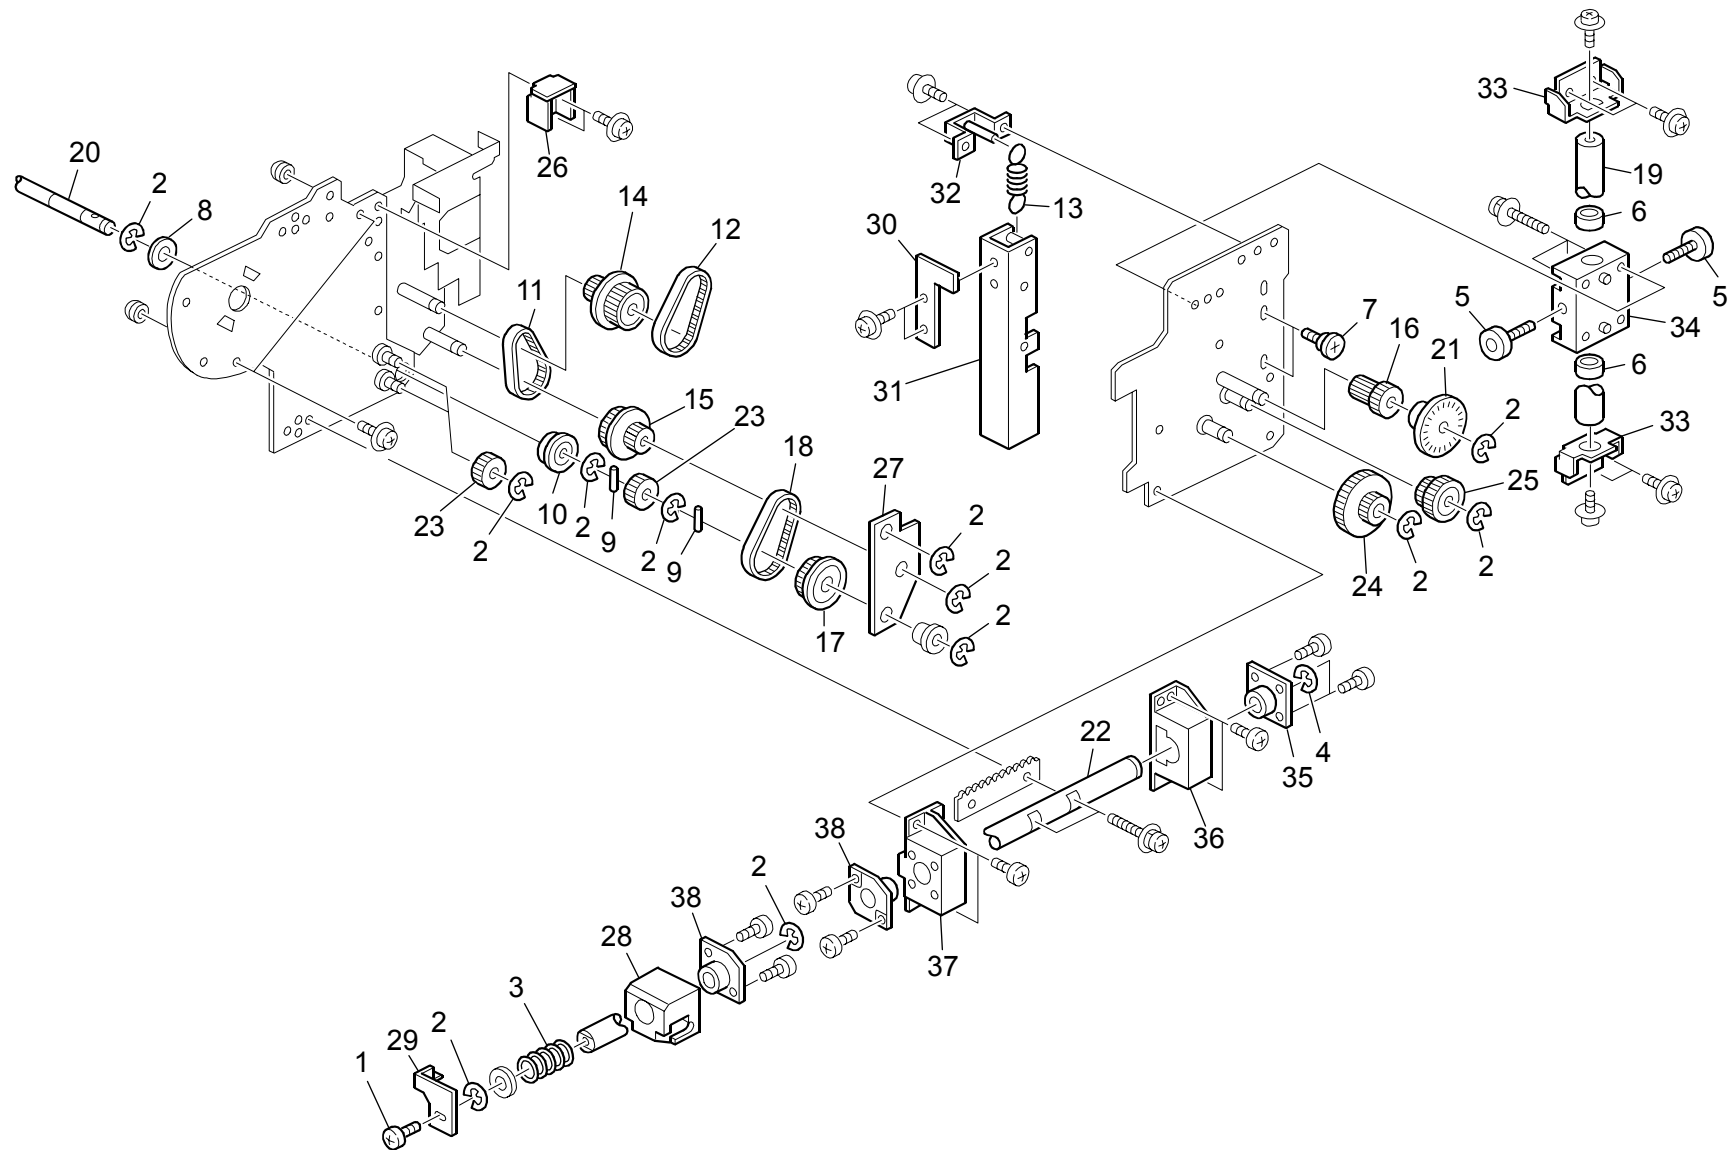


47.Main Gripper Section 5 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1168	Tapping Screw:IR4016P167A	1
2	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	12
3	D391 1316	Compression Spring:PF4140P462A	1
4	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	1
5	D391 1354	Roller:PF4140P988A	2
6	D391 1353	Bushing:PF4140P987A	2
7	D391 1254	Screw:3.4x6:PF2254P326A1	2
8	D391 1165	Washer:HW080FWSN	1
9	D391 1155	Parallel Pin:2x14:HP020140SCH	2
10	D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	1
11	D391 1197	Synchronous Belt:NS-BLT00364B	1
12	D391 1181	Synchronous Belt:NS-BLT00167B	1
13	D391 1312	Tension Spring:PF4140P428A	1
14	D391 1700	Timing Pulley:T48/T18:PF4140P413	1
15	D391 1701	Timing Pulley:T20/T44:PF4140P414	1
16	D391 1702	Worm Wheel:PF4140P382	1
17	D391 1703	Timing Pulley:T36:PF4140P416	1
18	D391 1181	Synchronous Belt:NS-BLT00167B	1
19	D391 1820	Shaft:Move:PF4140P493	1
20	D391 1821	Shaft:Move:PF4140P415	1
21	D391 1699	Encoder:PF4140P475	1
22	D391 1819	Shaft:Grip:PF4140P460	1
23	D391 1493	Gear:GRIP:MAIN:PF4140P406A1	2
24	D391 1697	Gear:Z20/Z54:PF4140P419	1
25	D391 1698	Gear:Z16/Z28:PF4140P474	1
26	D391 2320	Bracket:Turn:Stopper:PF4140P468	1
27	D391 2347	Plate:Drive:PF4140P469	1
28	D391 2335	Block:Grip:PF4140P457	1
29	D391 2334	Plate:Sensor:PF4140P463	1
30	D391 2350	Plate:Slide:Rack:PF4140P436	1
31	D391 2351	Rack:Slide:PF4140K037:Peen	1
32	D391 2316	Bracket:Slide:PF4140K033:Peen	1
33	D391 2313	Bracket:Slide Rail:Upper Lower:PF4140P495	2
34	D391 2315	Block:Rail:Main:Grip:PF4140P494	1
35	D391 2322	Holder:Shaft:PF4140P420	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	D391 2325	Bracket:Slide:PF4140P430	1
37	D391 2329	Bracket:Slide:PF4140P422	1
38	D391 2326	Holder:Shaft:PF4140P431	2

48.Glue Supply Section 1 (D391)

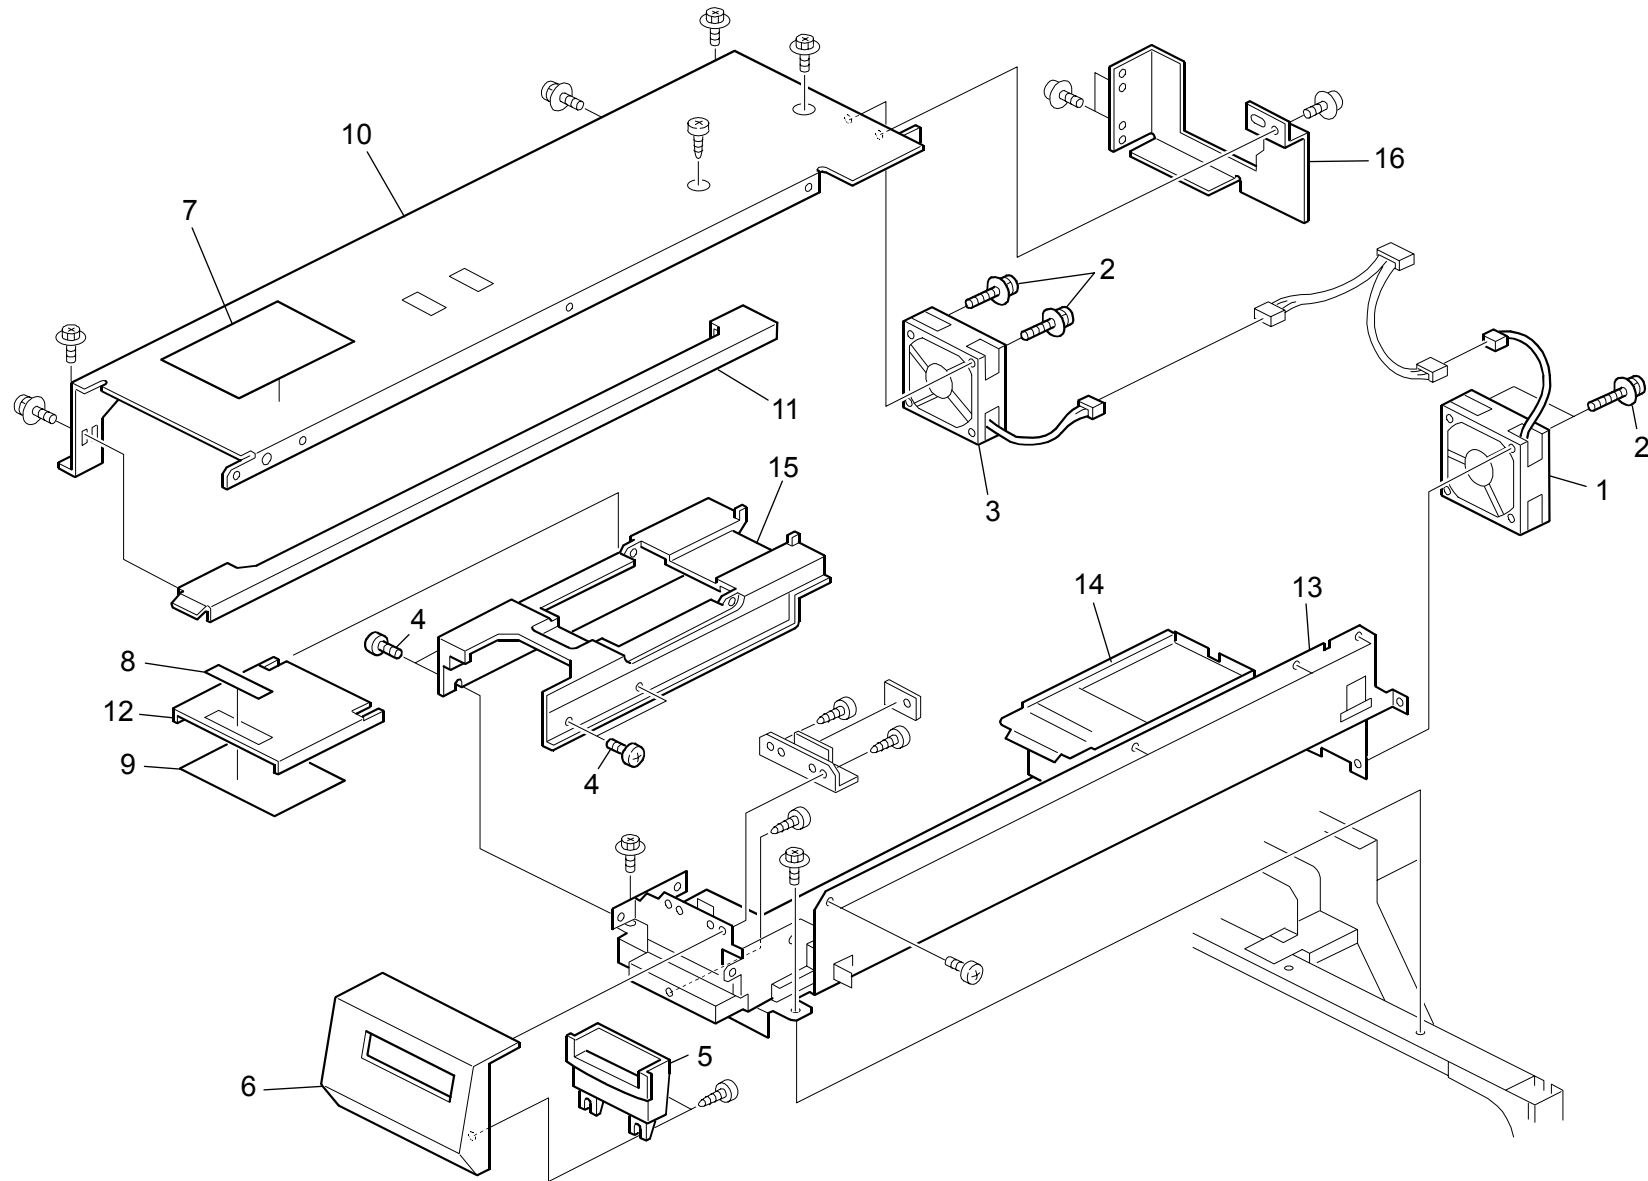


48.Glue Supply Section 1 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5297	DC Fan Motor:PF4140R406	1
2	D391 1135	Pan Head Screw:Spring Washer:M4x30:040300FWWS	4
3	D391 5298	DC Fan Motor:PF4140R409	1
4	B660 4835	Screw:NS-SCR00045A	4
5	D391 2006	Grip:Supply:Glue:PF4140Q524A	1
6	D391 2013	Cover:Supply:Glue:PF4140Q535B1	1
7	D391 6530	Decal:Set:Paper Jam	1
8	D391 6500	Decal:Set:Glue	1
9	D391 6500	Decal:Set:Glue	1
10	D391 1704	Frame:Base:Upper:PF4140P863	1
11	D391 1705	Rail:Supply:PF4140P743	1
12	D391 1706	Cover:Tank:PF4140P802	1
13	D391 1707	Frame:Base:PF4140K072	1
14	D391 1708	Tank:Supply:Glue:PF4140P878	1
15	D391 1709	Inner Cover:Supply:PF4140P071	1
16	D391 1710	Side Fence:Tank:Supply:PF4140P088	1

Index No.	Part No.	Description	Q'ty Per Assembly

49.Glue Supply Section 2 (D391)

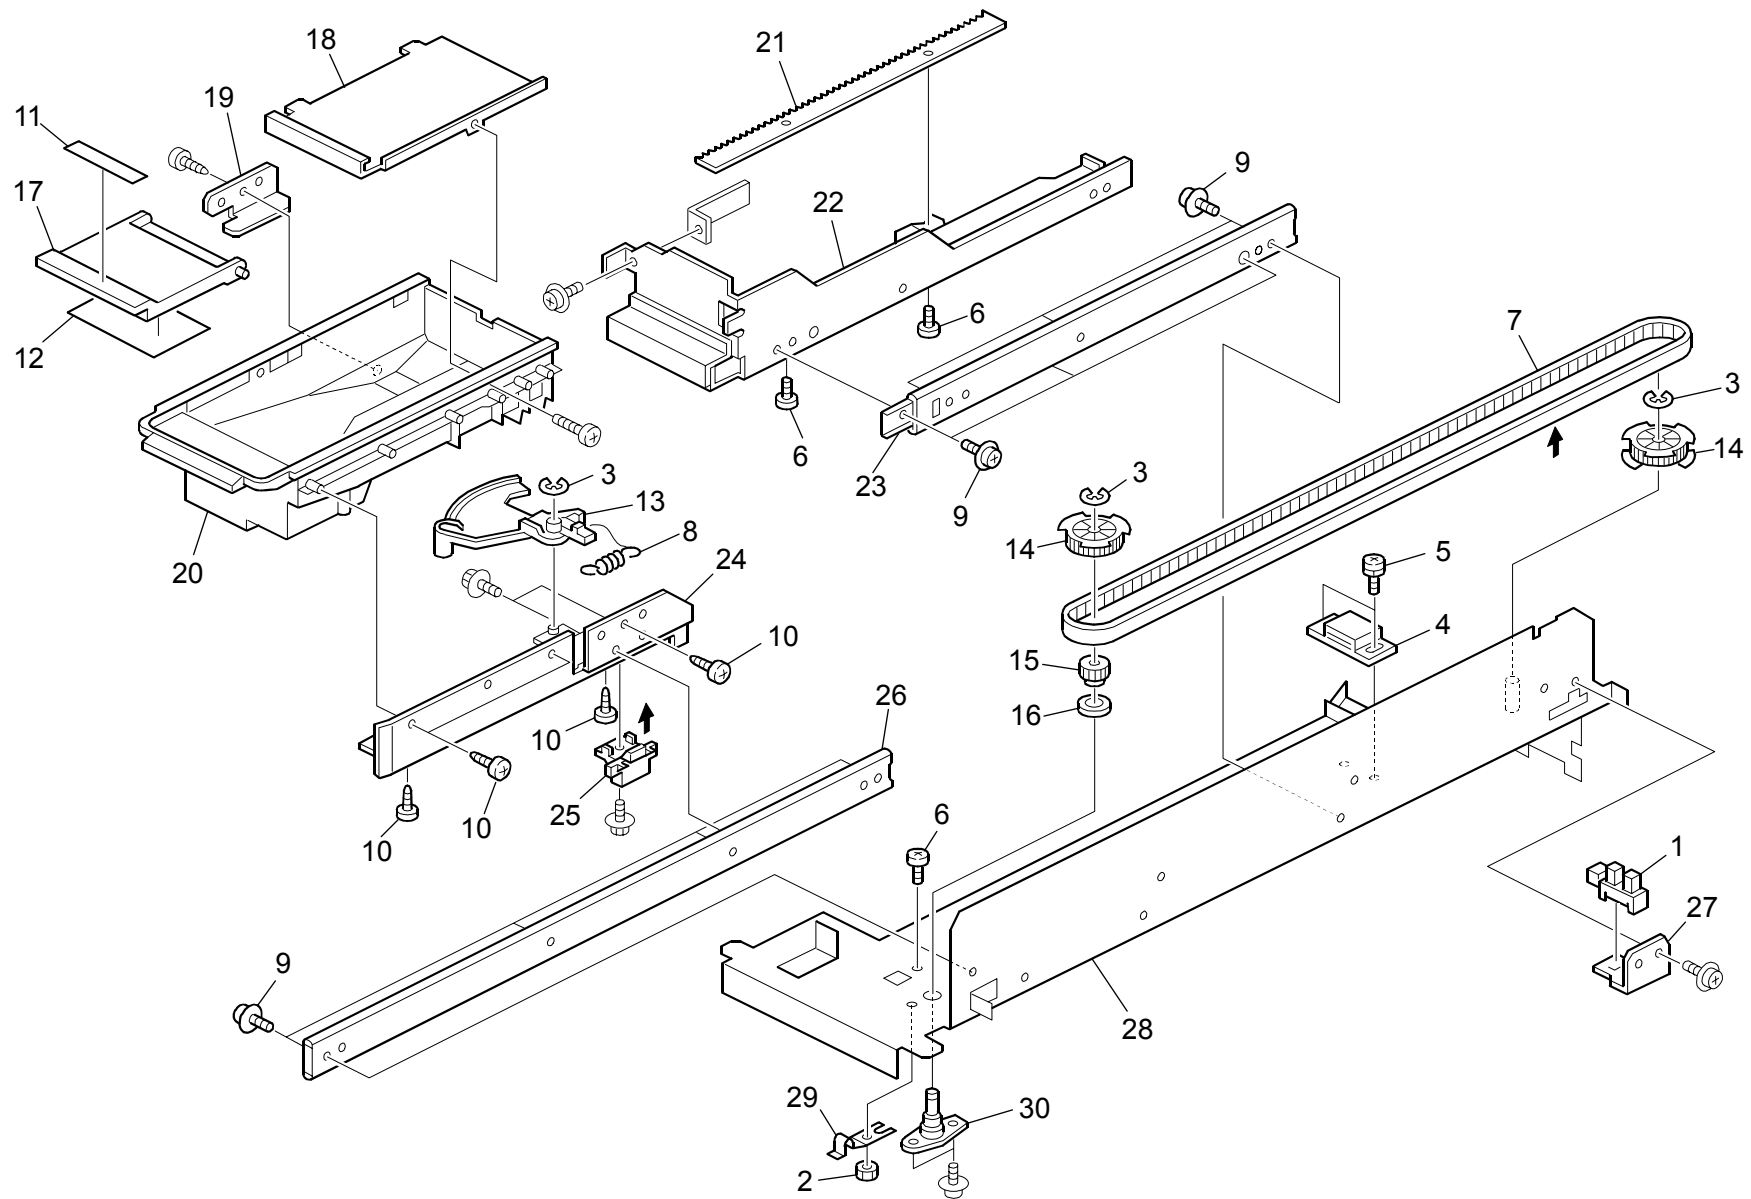


49.Glue Supply Section 2 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5254	Photointerruptor:PF2286P475	1
2	D391 1249	Flanged Hexagonal Nut:NT030FN2	1
3	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	3
4	B660 1795	Magnet Catch	1
5	D391 1114	Washer:M3x6:030060FWSW	2
6	D391 1168	Tapping Screw:IR4016P167A	3
7	D391 1209	Synchronous Belt:NS-BLT00389B	1
8	D391 1346	Tension Spring:PF4140P889A2	1
9	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	10
10	D391 1121	Binding Self-Tapping Screw:M3x10: 030100FWBB	5
11	D391 6500	Decal:Set:Glue	1
12	D391 6500	Decal:Set:Glue	1
13	D391 1939	Shutter:PF4140P884	1
14	D391 1711	Timing Pulley:T40:PF4140P740	1
15	D391 1712	Gear:Z18:PF4140P898	1
16	D391 1713	Spacer:Rack:PF4140P757	1
17	D391 2070	Cover:Supply:Cover:PF4140P023	1
18	D391 2071	Bracket:Supply:Cover:PF4140P808	1
19	D391 2072	Bracket:Supply:Shutter:PF4140P812	1
20	D391 1708	Tank:Supply:Glue:PF4140P878	1
21	D391 2073	Rack:Supply:Glue:PF4140P886	1
22	D391 2074	Bracket:Handle:Supply:PF4140P876	1
23	D391 2075	Slide Rail:350mm:PF4140P940	1
24	D391 2076	Shutter:Supply:PF4140K050:Peen	1
25	D391 2077	Holder:Belt:Supply:Glue:PF4140P864	1
26	D391 2078	Slide Rail:630mm:PF4140P939	1
27	D391 2079	Bracket:Sensor:Supply:PF4140P888	1
28	D391 1707	Frame:Base:PF4140K072	1
29	D391 1624	Spring Plate:Lock:PF2214P455	1
30	D391 2080	Frame:Base:PF4140K047:Peen	1

Index No.	Part No.	Description	Q'ty Per Assembly

50.Glue Supply Section 3 (D391)

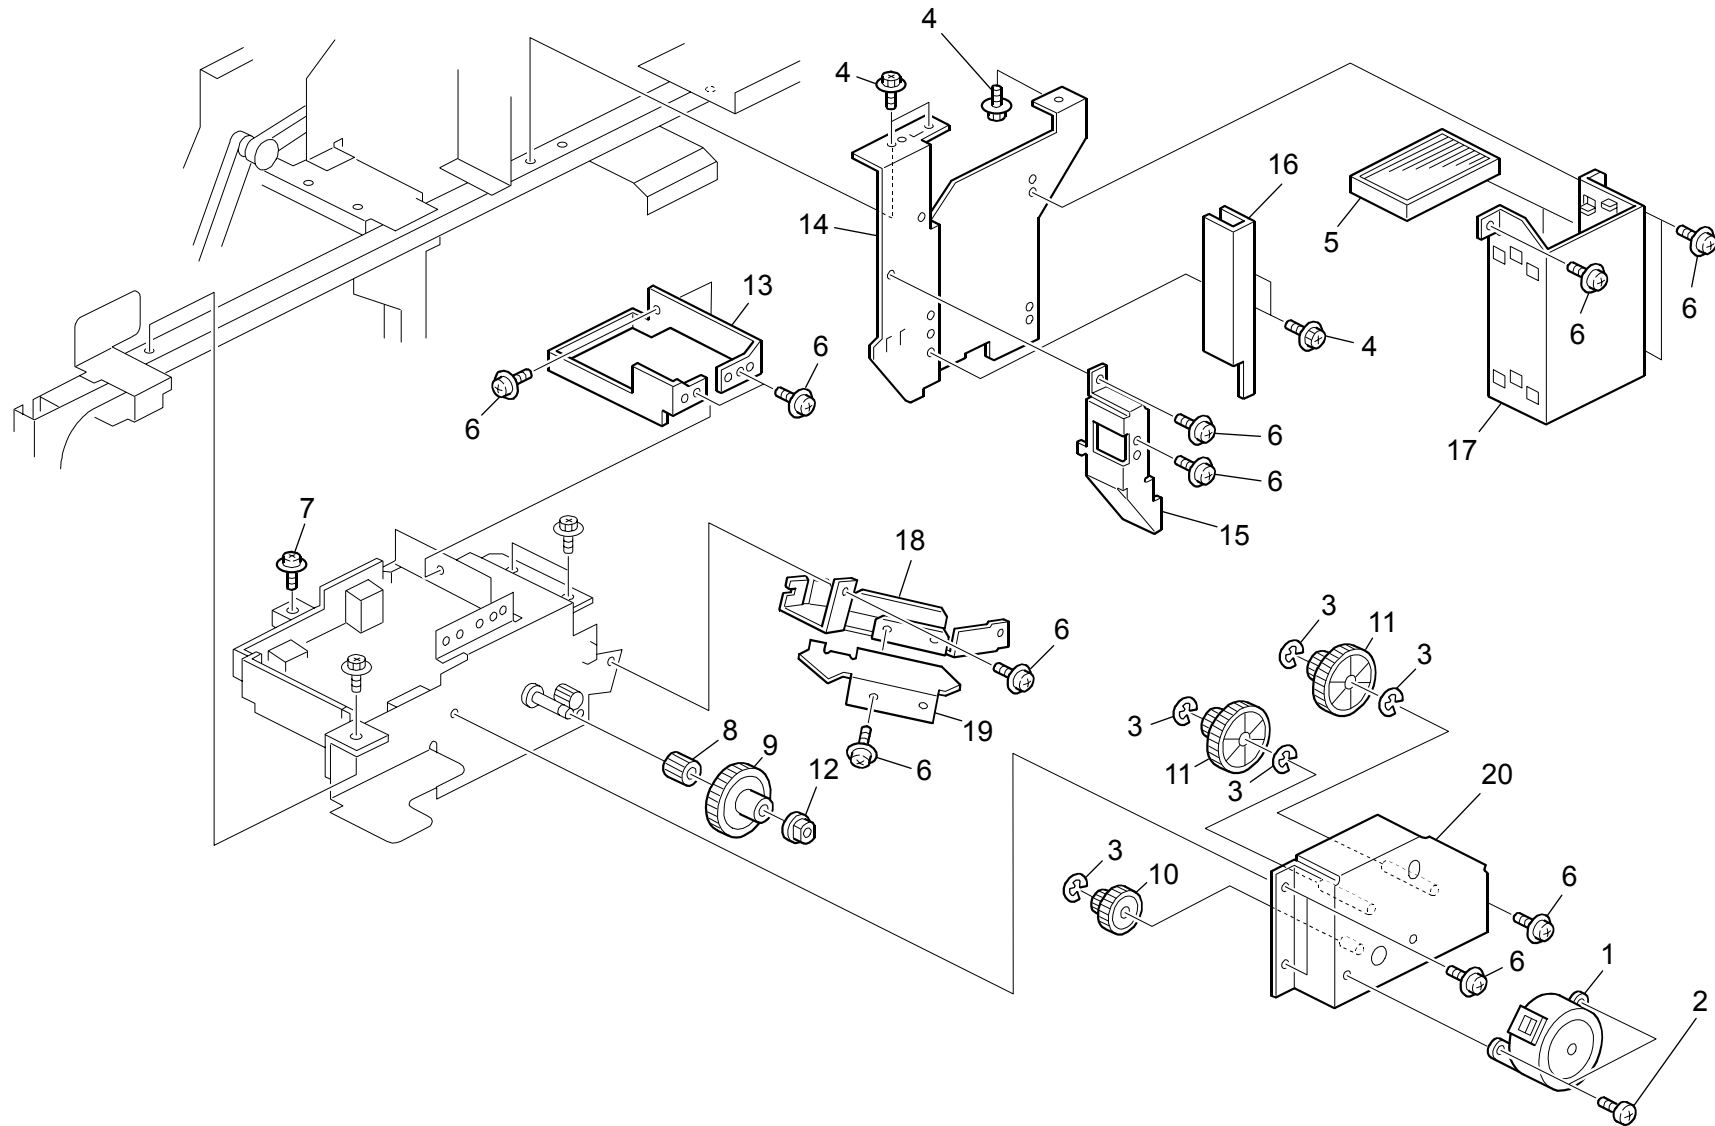


50.Glue Supply Section 3 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5296	DC Stepper Motor:PF4140R405	1
2	B660 4831	Screw:NS-SCR00016A	2
3	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	5
4	D391 1244	Screw:M4x8:NS-SCR00050B	5
5	D391 1279	Filter:VOC:PF4140P026A	2
6	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	12
7	D391 1133	Binding Self-Tapping Screw:M4x12: 040120FWBB	1
8	D391 1714	Gear:Z16:PF4140P842	1
9	D391 1715	Gear:Z50:PF4140P899	1
10	D391 1716	Gear:Z50/Z16:PF4140P858	1
11	D391 1717	Gear:Z50/Z20:PF4051P033	2
12	D391 1687	Plain Shaft Bearing:NS-MTL00009	1
13	D391 2081	Bracket:Protector:Glue:PF4140P836	1
14	D391 2082	Bracket:Supply:Cylinder:1:PF4140P868	1
15	D391 2083	Bracket:Supply:Cylinder:4:PF4140P086	1
16	D391 2084	Bracket:Supply:Cylinder:2:PF4140P867	1
17	D391 2085	Bracket:Supply:Cylinder:3:PF4140P029	1
18	D391 2086	Bracket:Supply:Transport:PF4140P885	1
19	D391 2087	Bracket:Glue:Tray:Upper:PF4140Q704	1
20	D391 2088	Bracket:Slow Down:PF4140K051:Peen	1

Index No.	Part No.	Description	Q'ty Per Assembly

51.Glue Supply Section 4 (D391)

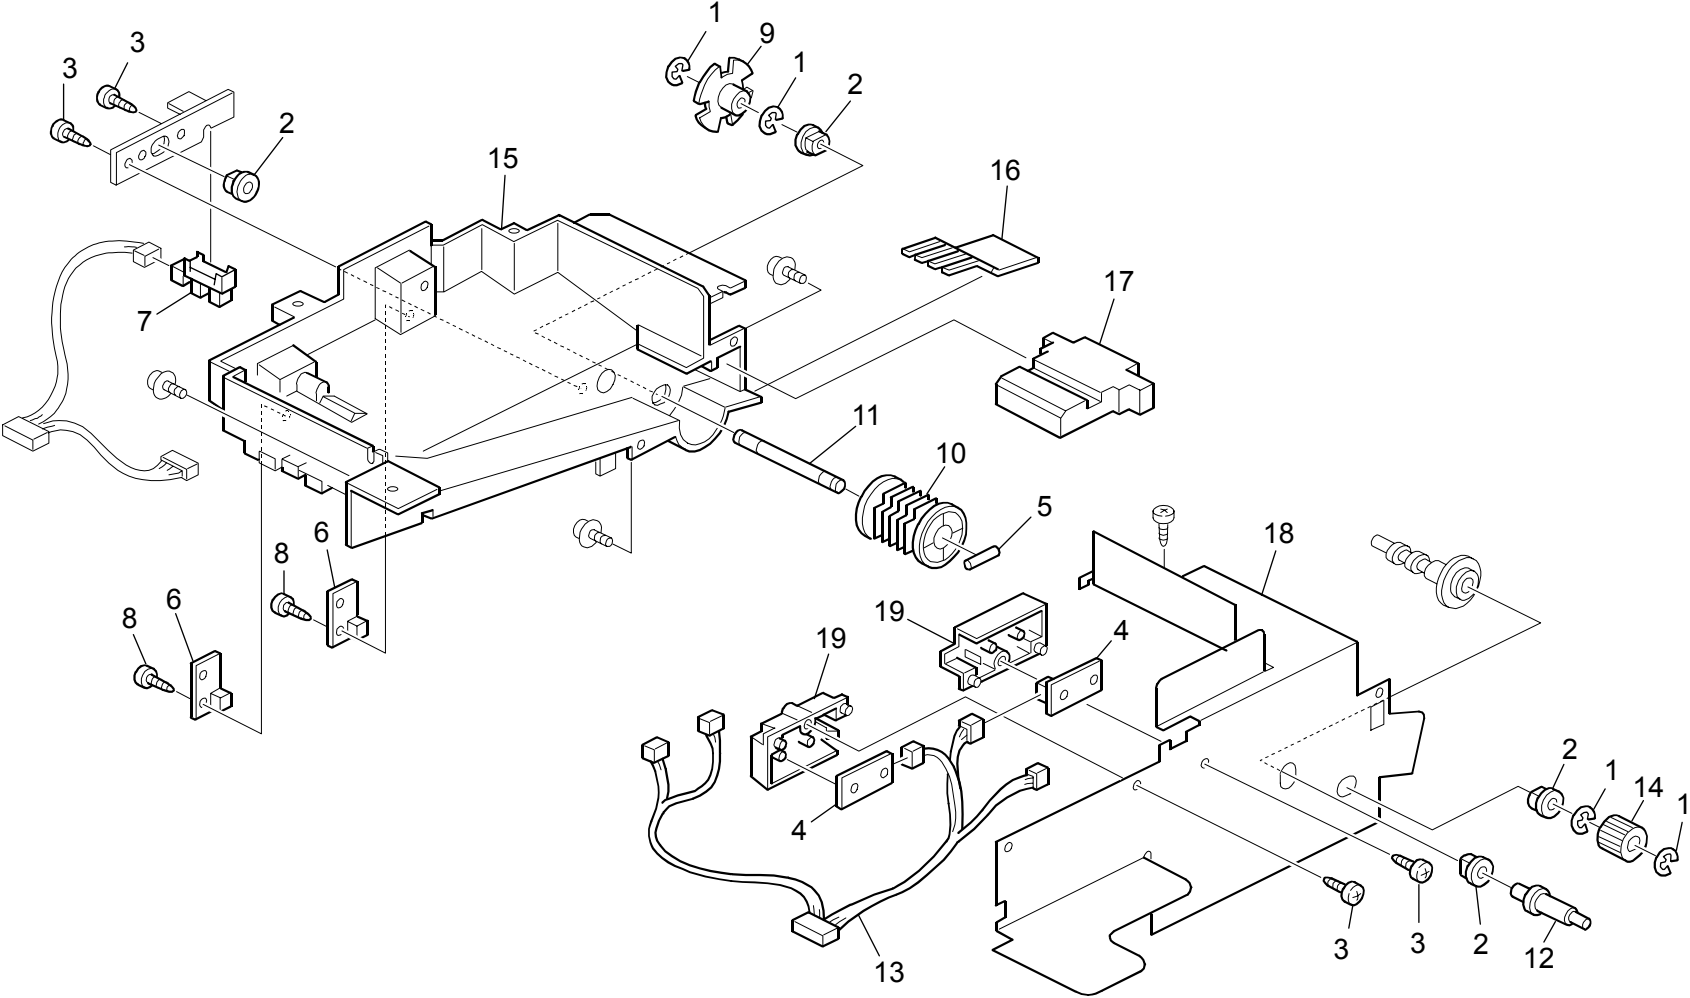


51.Glue Supply Section 4 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	4
2	D391 1235	Bushing:DIA8:NS-BSH00004B	4
3	D391 1121	Binding Self-Tapping Screw:M3x10: 030100FWBB	4
4	D391 5282	Optics Sensor:Photo:PF4140K906	2
5	D391 1159	Parallel Pin:3x12:HP030120SCH	1
6	D391 5281	Optics Sensor:Radiate:PF4140K905	2
7	D391 5254	Photointerruptor:PF2286P475	1
8	D391 1112	Tapping Screw:030060FBNB	2
9	D391 1718	Feeler:Positioning Control:Case: PF4140P853	1
10	D391 1719	Case:PF4140P851	1
11	D391 1824	Shaft:Mixture:PF4140P854	1
12	D391 1825	Shaft:Glue:PF4140P862	1
13	D391 1912	Harness:Sensor:Supply:PF4140K695	1
14	D391 1714	Gear:Z16:PF4140P842	1
15	D391 2089	Tank:PF4140P856	1
16	D391 2090	Plate:PF4140Q710	1
17	D391 2091	Separation Sub-unit:Rubber:PF4140P896	1
18	D391 2092	Tank:Cover:PF4140P857	1
19	D391 2093	Holder:Sensor:PF4140P870	2

Index No.	Part No.	Description	Q'ty Per Assembly

52.Gluing Section 1 (D391)

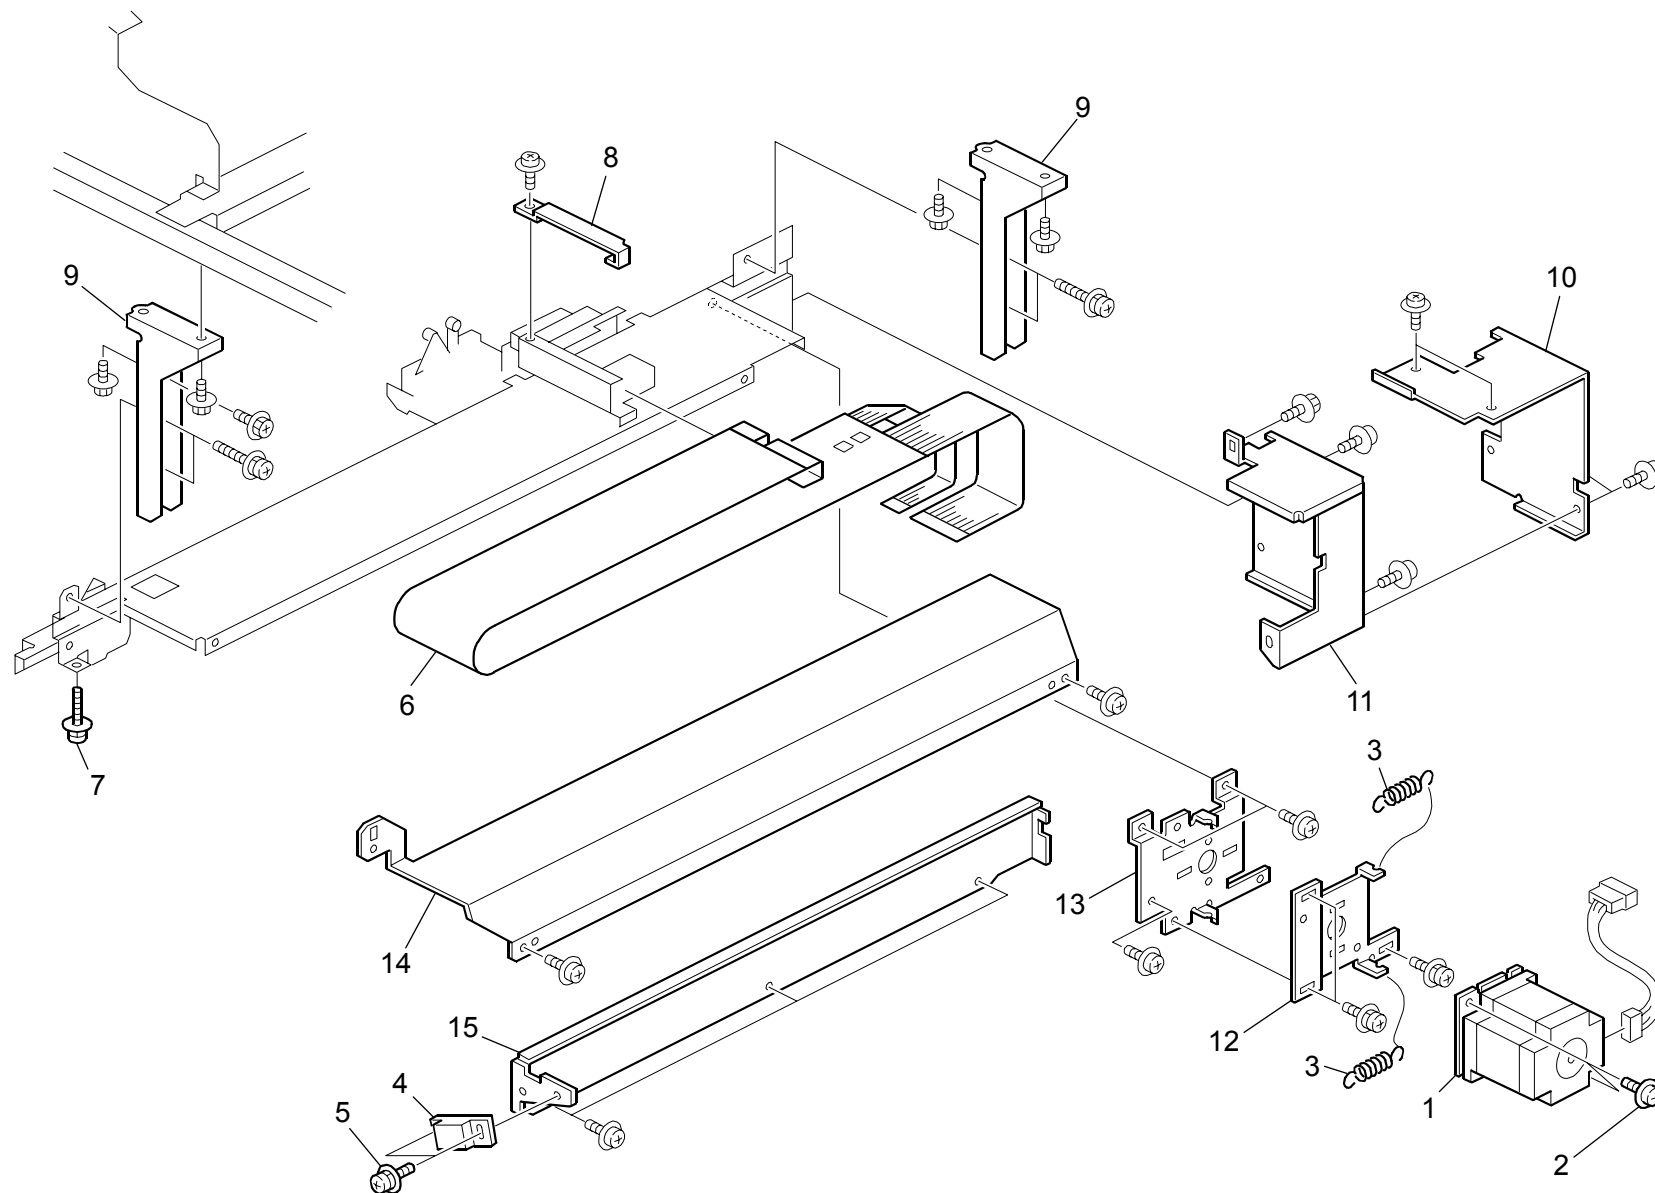


52.Gluing Section 1 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5270	DC Stepper Motor:PF4140K631	1
2	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	2
3	D391 1347	Tension Spring:PF4140P895A1	2
4	D391 1266	Magnet Catch:20N:PF4130P412A	1
5	D391 1114	Washer:M3x6:030060FWSW	2
6	D391 1272	Cable:Glue:PF4140L096A	1
7	D391 1122	Screw With Washer:M3x14:030140FWWS	1
8	D391 2095	Bracket:Holder:PF4140P827	1
9	D391 2096	Bracket:PF4140P005	2
10	D391 2097	Bracket:PF4140P841	1
11	D391 2098	Bracket:Guide:PF4140P810	1
12	D391 2099	Bracket:Transport:PF4140P801	1
13	D391 2100	Bracket:Transport:Motor:PF4140P872	1
14	D391 2101	Bracket:Guide:PF4140P807	1
15	D391 2102	Bracket:Auxiliary:PF4140P871	1

Index No.	Part No.	Description	Q'ty Per Assembly

53.Gluing Section 2 (D391)

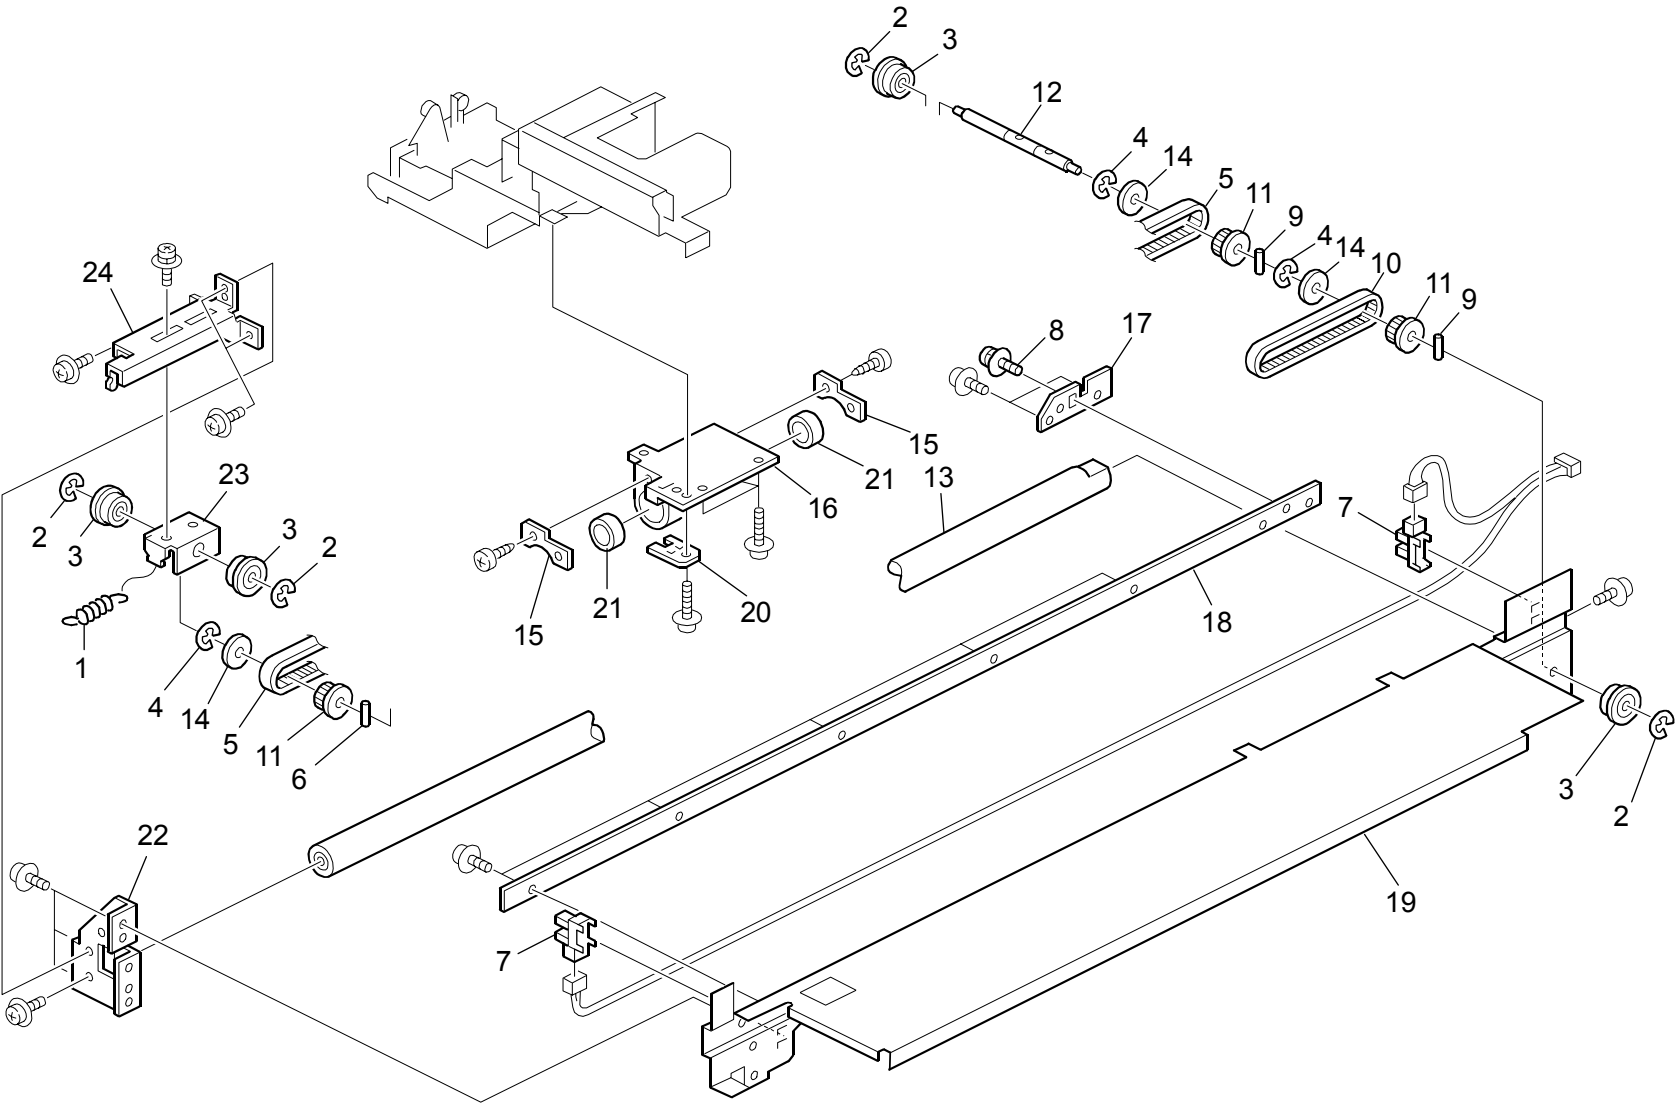


53.Gluing Section 2 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1345	Tension Spring:PF4140P850B1	1
2	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	4
3	D391 1263	Radial Ball Bearing:6x10:PF4096P347A	4
4	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	3
5	D391 1196	Synchronous Belt:NS-BLT00362B	1
6	D391 1154	Parallel Pin:2x10:HP020100SCH	1
7	D391 5254	Photointerruptor:PF2286P475	2
8	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	1
9	D391 1154	Parallel Pin:2x10:HP020100SCH	2
10	D391 1193	Synchronous Belt:NS-BLT00355C	1
11	D391 1720	Timing Pulley:T24:PF4140P930	3
12	D391 1826	Shaft:Timing Pulley:PF4140P817	1
13	D391 1827	Shaft:DIA25:PF4140P849	1
14	D391 1663	Flange:18mm:PF4099P950	3
15	D391 2103	Plate:Guard:PF4140P731	2
16	D391 2104	Holder:Receive:PF4140P813	1
17	D391 2105	Plate:Bearing Case:PF4140P843	1
18	D391 2106	Bracket:PF4140P880	1
19	D391 2107	Bracket:PF4140P891	1
20	D391 2108	Holder:Belt:Plate:PF4140P805	1
21	D391 2109	Plain Shaft Bearing:2510:PF4140P922	2
22	D391 2110	Bracket:Holder:Transport:PF4140P847	1
23	D391 2111	Bracket:Pulley:Front:PF4140P814	1

Index No.	Part No.	Description	Q'ty Per Assembly

54.Gluing Section 3 (D391)

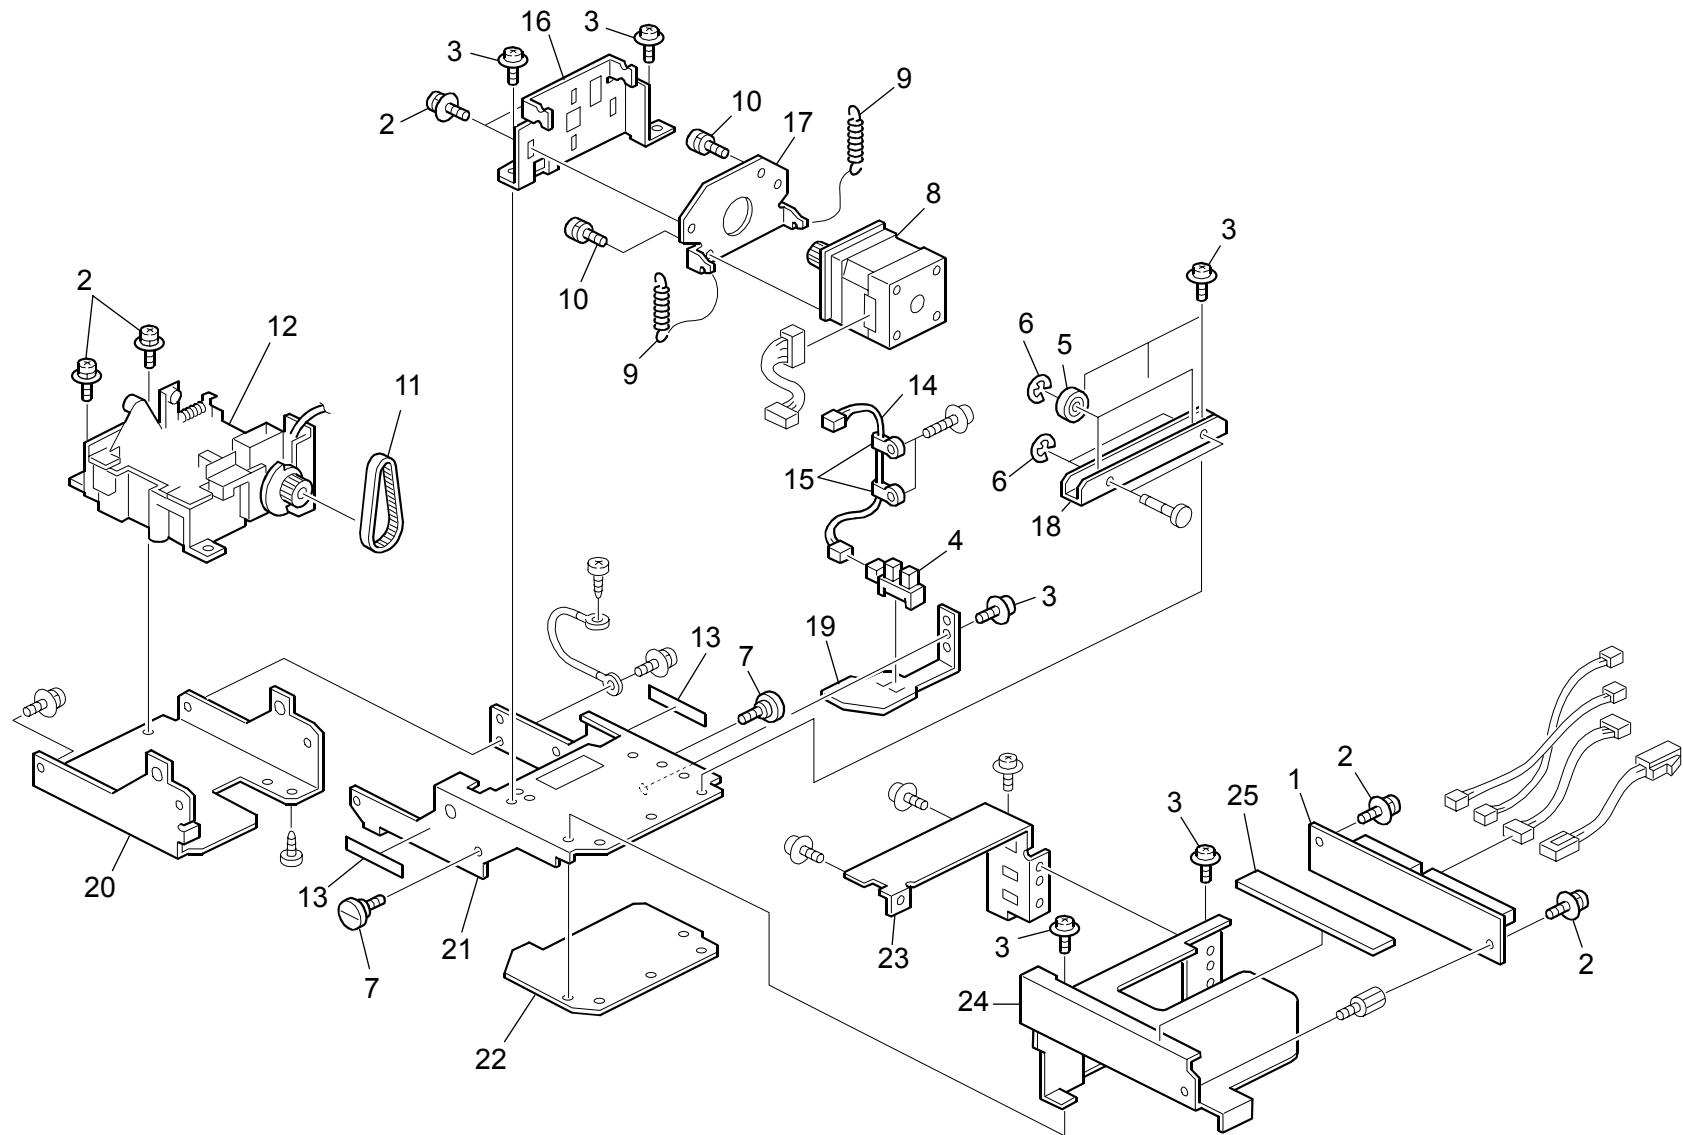


54.Gluing Section 3 (D391)


Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5264	Interface Board:PF4140K621	1
2	D391 1116	Screw With Washer:M3x6:030060FWWS	6
3	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	8
4	D391 5254	Photointerruptor:PF2286P475	1
5	D391 1226	Radial Ball Bearing:DIA6DIA12: NS-BRG00030B	2
6	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	4
7	D391 1324	Screw:PF4140P570A	2
8	D391 5275	DC Stepper Motor:PF4140K637	1
9	D391 1267	Coil Spring:PF4138P541A	2
10	D391 1114	Washer:M3x6:030060FWSW	2
11	D391 1199	Synchronous Belt:NS-BLT00366B	1
12	D391 1275	Glue:Tub:Unit:PF4140L386A	1
13	D391 6563	Decal:H-Temp Warning:Glue	2
14	D391 1913	Harness:Sensor:Roller:PF4140K733	1
15	D391 1914	Clamp:HARNESS:WT2-5077-000	2
16	D391 2112	Bracket:Motor:Receive:Upper:PF4140P824	1
17	D391 2113	Bracket:Motor:Receive:Rear:PF4140P825	1
18	D391 2114	Bracket:Supporting Plate:PF4140P809	1
19	D391 2115	Bracket:Turn:Sensor:Plate:PF4140P800	1
20	D391 2116	Bracket:Receive:Lower:Plate:PF4140P823	1
21	D391 2117	Bracket:Holder:Upper:PF4140P822	1
22	D391 2118	Plate:Base:Receive:PF4140P806	1
23	D391 2119	Bracket:Relay:Transport:PF4140P783	1
24	D391 2120	Bracket:Base:Relay:PF4140P818	1
25	D391 2121	Holder Plate:Rubber:PF4140P828	1

Index No.	Part No.	Description	Q'ty Per Assembly

55.Cover Feed Regist Section 1 (D391)

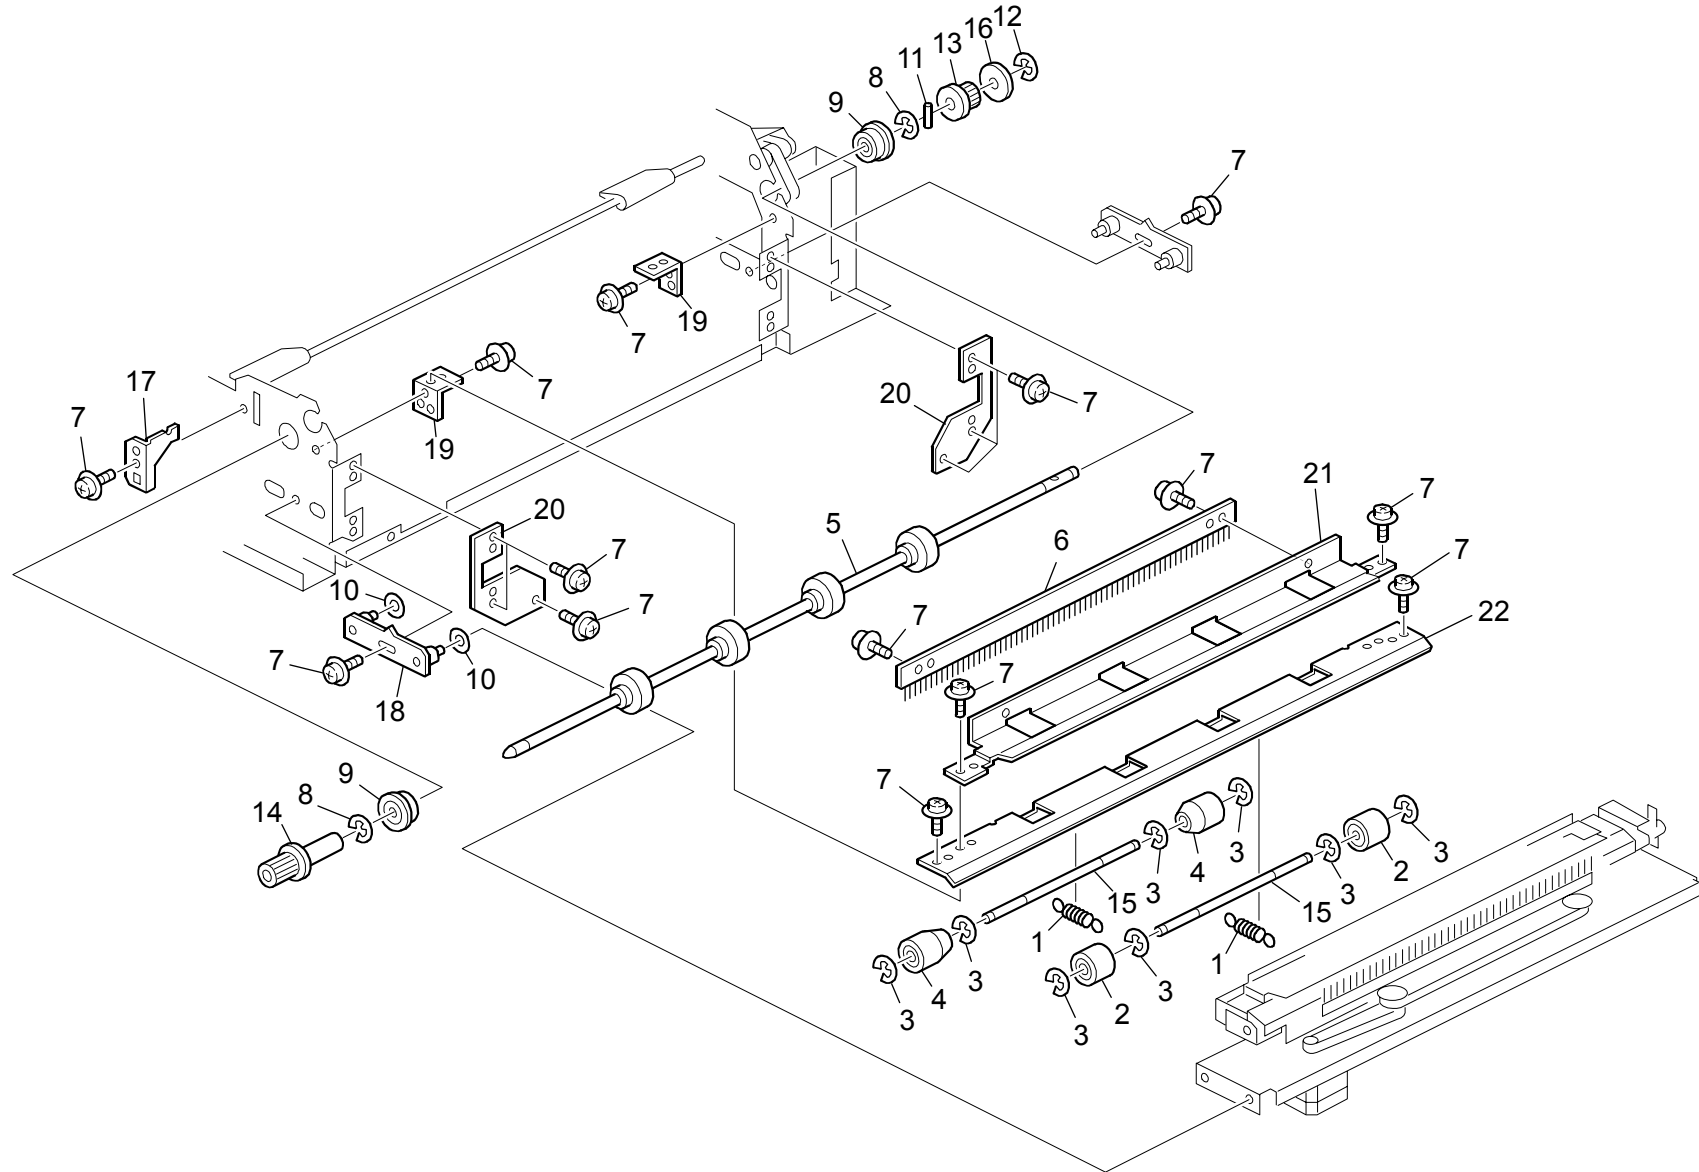

56.Cover Feed Regist Section 2 (D391)

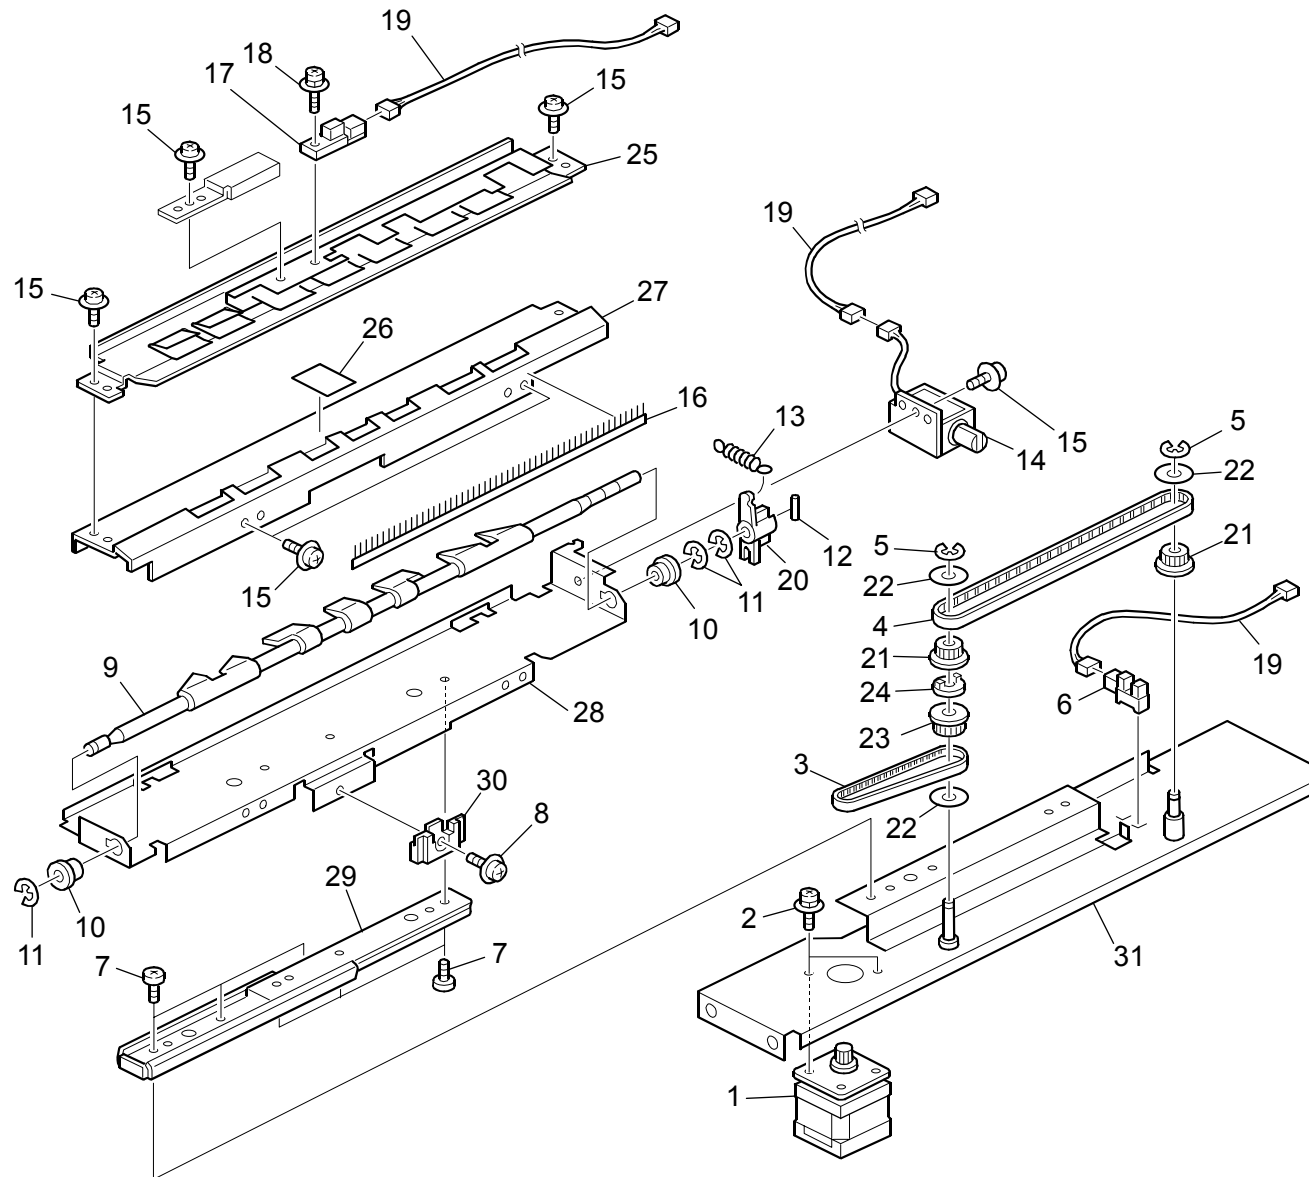


56.Cover Feed Regist Section 2 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5275	DC Stepper Motor:PF4140K637	1
2	D391 1120	Screw With Washer:M3x8:030080FWWS	2
3	D391 1183	Synchronous Belt:NS-BLT00209B	1
4	D391 1180	Synchronous Belt:NS-BLT00147B	1
5	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	2
6	D391 5254	Photointerruptor:PF2286P475	1
7	D391 1128	Binding Self-Tapping Screw:M4x8: 040080FWBI	6
8	D391 1115	Pan Head Screw W/Washer:M3x6: 030060FWTP	1
9	D391 1273	Registration Guide:PF4140L107A	1
10	D391 1238	Bushing:DIA6:NS-MTL00007B	2
11	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	3
12	D391 1155	Parallel Pin:2x14:HP020140SCH	1
13	D391 1340	Coil Spring:Registration:Side:PF4140P702A	1
14	D391 5274	DC Solenoid:PF4140K635	1
15	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	6
16	D391 1329	Discharge Brush:Registration:Side: PF4140P625A	1
17	B660 5451	No.2 Entrance Sensor	1
18	D391 1119	Screw With Washer:M3x8:030080FWSW	1
19	D391 5313	Harness:Registration:PF4140K681:Ass'y	3
20	D391 1723	Link:DC Solenoid:PF4140P949	1
21	D391 1724	Timing Pulley:T20:PF4140P969	2
22	D391 1725	Flange:DIA26:PF4140P554	3
23	D391 1726	Timing Pulley:T30:PF4140P977	1
24	D391 1727	Joint:PF4140P553	1
25	D391 2128	Guide:Side:Registration:Upper:PF4140P687	1
26	D391 1338	Mirror:Registration:Side:PF4140P680A1	1
27	D391 2129	Guide:Side:Registration:PF4140P679	1
28	D391 2130	Base:Side:Registration:PF4140P676	1
29	D391 2131	Rail:2721-20:PF4140P981	1
30	D391 2132	Holder:Transport:Belt:PF4140P520	1
31	D391 2133	Bracket:PF4140K015:Peen	1

Index No.	Part No.	Description	Q'ty Per Assembly

57.Cover Feed Path Section 1 (D391)

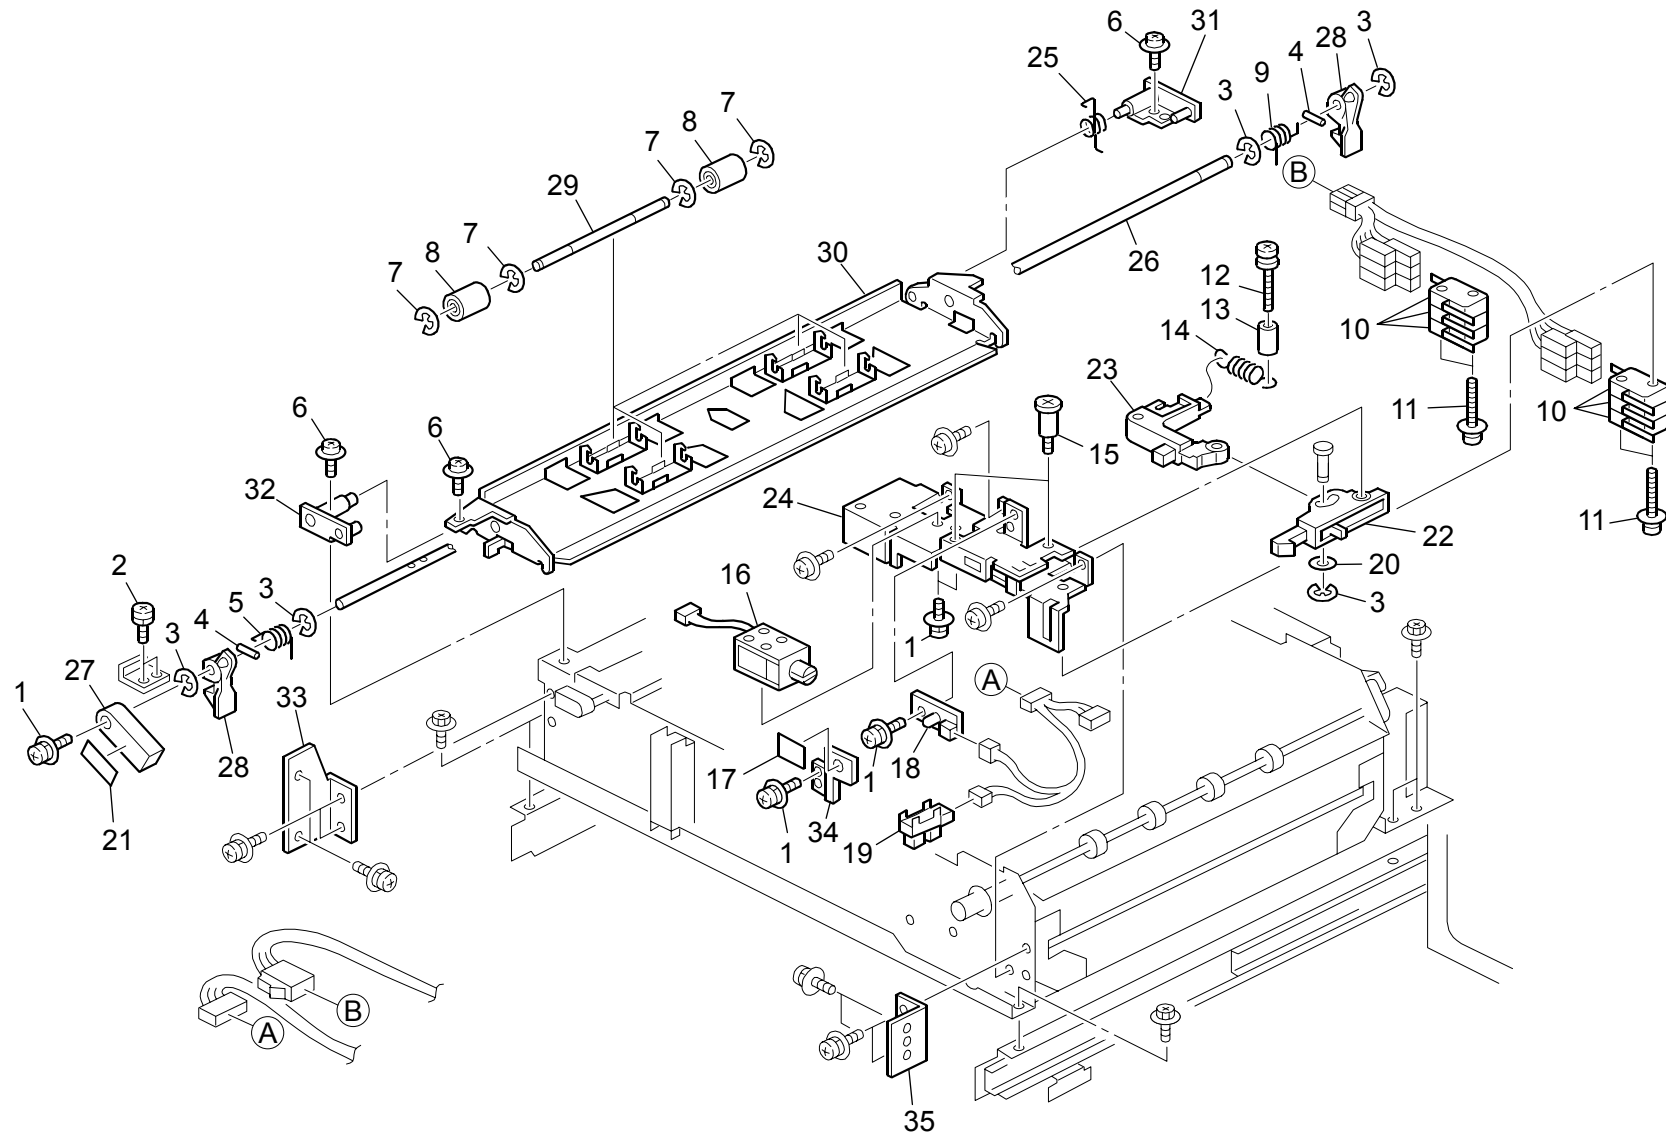


57.Cover Feed Path Section 1 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1120	Screw With Washer:M3x8:030080FWWS	4
2	D391 1114	Washer:M3x6:030060FSWS	2
3	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	5
4	D391 1154	Parallel Pin:2x10:HP020100SCH	2
5	D391 1104	Torsion Spring:Front:PF4099P804B	1
6	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	3
7	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	4
8	D391 1350	Roller:PF4140P958A	2
9	D391 1105	Torsion Spring:Rear:PF4099P805B	1
10	D391 5295	Micro Switch:PF4140R123	6
11	D391 1125	Screw With Washer:M3x35:030350FWWS	4
12	D391 1256	Flat Screw:Adjusting Screw:Hinge: PF2269P385A1	1
13	D391 1142	Spacer:CL080180FW	1
14	D391 1397	Coil Spring:Lock:Door:Front:PF4140Q546B	1
15	D391 1265	Screw:PF4123Q908A	2
16	D391 5276	Keep Solenoid:PF4140K638	1
17	D391 1396	Sheet:LED:Lock:Door:PF4140Q526B	1
18	D391 5268	PCB:LED:PF4140K628	1
19	D391 5254	Photointerruptor:PF2286P475	1
20	B660 4636	Spacer:PW060050	1
21	D391 6510	Decal:Set:Lever:1	1
22	D391 1438	Lever:PF4140Q540	1
23	D391 1439	Link:PF4140Q541	1
24	D391 1440	Bracket:Lock:Solenoid:Front:PF4140Q512	1
25	D391 1728	Torsion Spring:Guide:PF4140P749	1
26	D391 1829	Shaft:Latch:PF4140P742	1
27	D391 1525	Handle:Arm:Lock:PF4155P607	1
28	D391 1523	Arm:Lock:PF4140P120	2
29	D391 4518	Shaft:Roller:PF4140P618	1
30	D391 2134	Guide:Transport:L2:PF4140P656	1
31	D391 2135	Bracket:Turn:Rear:PF4140K069:Peen	1
32	D391 2136	Bracket:Turn:Front:PF4140K060:Peen	1
33	D391 2137	Bracket:Cover:Feed:Left:PF4140P717	1
34	D391 2138	Ground Plate:LED:Front:Door:PF4140Q557	1

Index No.	Part No.	Description	Q'ty Per Assembly
35	D391 2139	Bracket:Cover:Feed:Right:PF4140P716	1

58.Cover Feed Path Section 2 (D391)

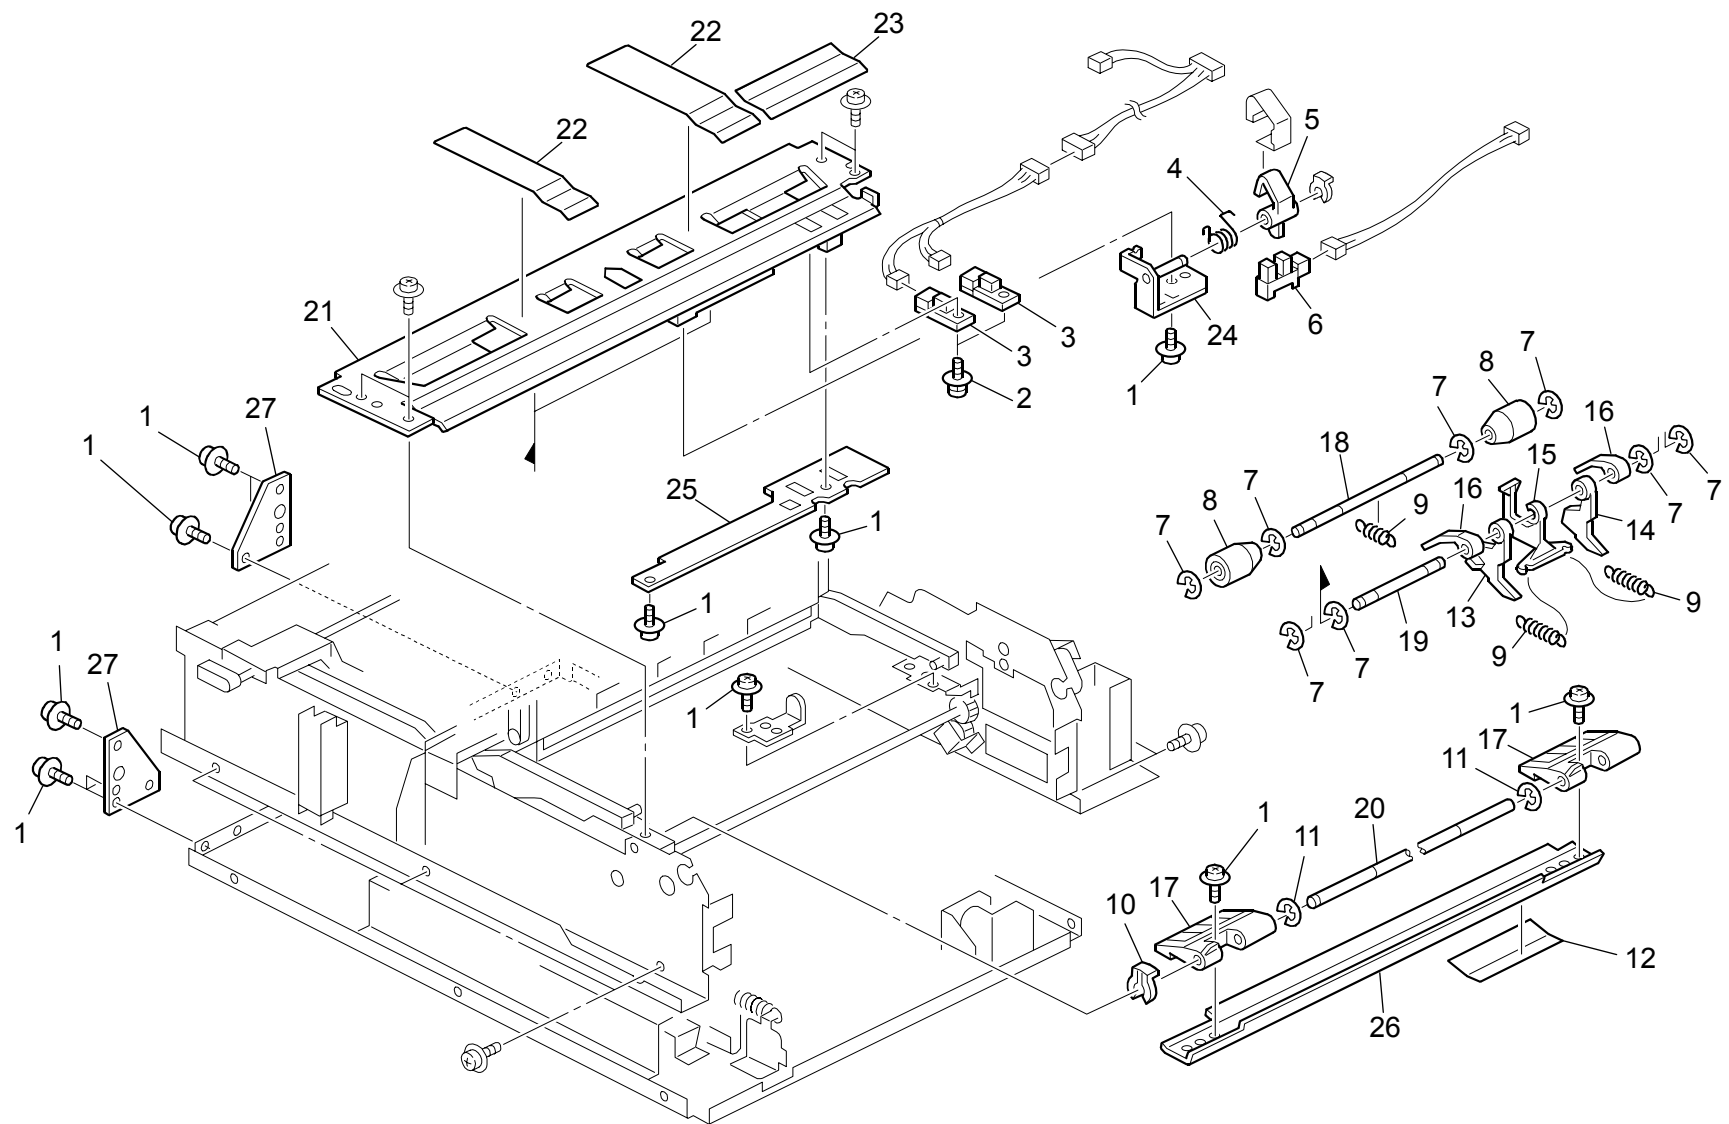


58.Cover Feed Path Section 2 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	13
2	D391 1120	Screw With Washer:M3x8:030080FWWS	2
3	B660 5451	No.2 Entrance Sensor	2
4	D391 1261	Coil Spring:Registration Sensor:Bin:Lower: PF3091P347A	1
5	D391 1328	Lever:Sensor:PF4140P614B2	1
6	D391 5254	Photointerruptor:PF2286P475	1
7	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	8
8	D391 1337	Roller:Transport:2:PF4140P651A1	2
9	D391 1339	Coil Spring:Transport Roller:PF4140P700A1	3
10	B660 4821	External Circlip:NS-CLP00008A	1
11	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	2
12	D391 1344	Mirror:PF4140P791A2	1
13	D391 1446	Lever:Front:PF4140P649	1
14	D391 1447	Lever:Rear:PF4140P650	1
15	D391 1448	Lever:Coil Spring:PF4140P659	1
16	D391 1449	Lever:Shaft:PF4140P660	2
17	D391 1729	Arm:Guide:Mirror:PF4140P788	2
18	D391 1831	Shaft:Roller:Transport:PF4140P701	1
19	D391 1832	Shaft:Contact Point:On-off:Roller: PF4140P648	1
20	D391 1833	Shaft:Guide:Mirror:PF4140P789	1
21	D391 2140	Guide:Transport:Lower:PF4140P621	1
22	D391 2141	Guide:Transport:Lower:Sheet:PF4140P779	2
23	D391 2142	Sheet:Registration:Sensor:PF4140P796	1
24	D391 2143	Bracket:Sensor:PF4140K059:Peen	1
25	D391 2144	Plate:Harness:Cover:PF4140P622	1
26	D391 2145	Guide:Mirror:PF4140P790	1
27	D391 2146	Supporting Plate:PF4140P602	2
		 	

Index No.	Part No.	Description	Q'ty Per Assembly

59.Cover Feed Path Section 3 (D391)

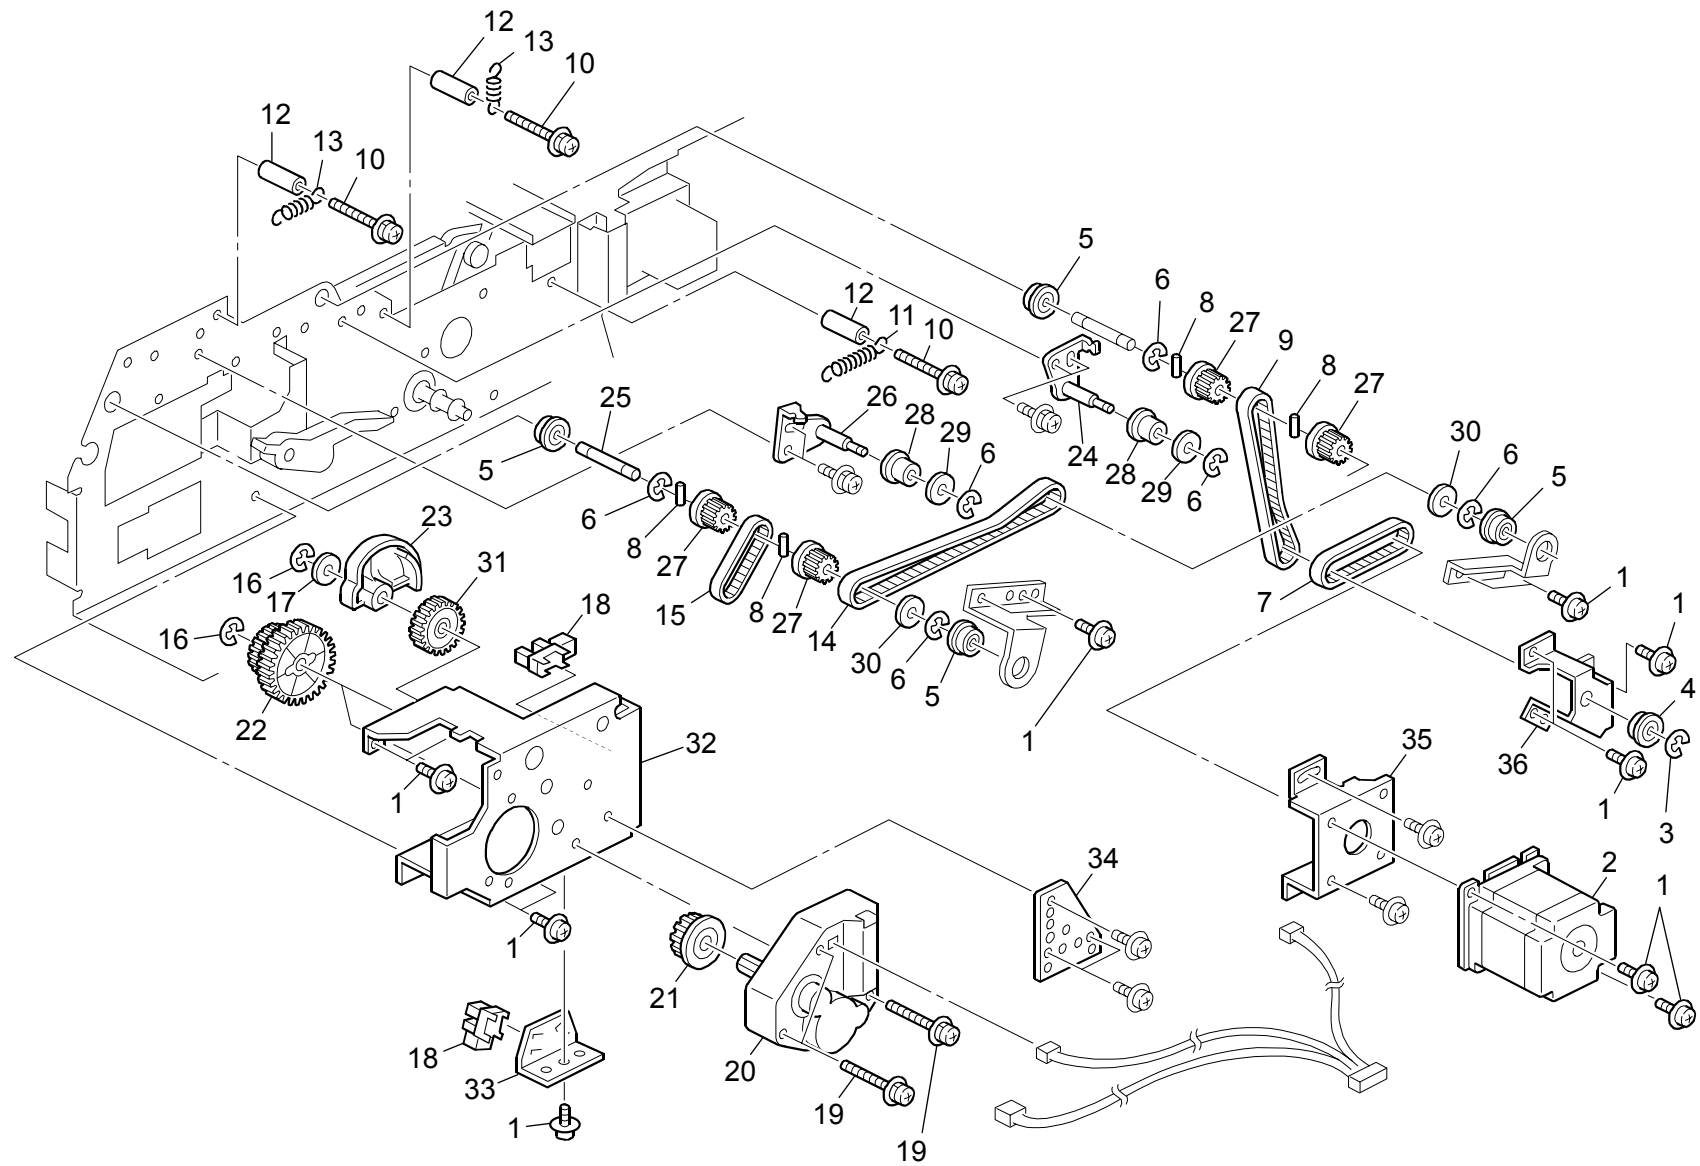


59.Cover Feed Path Section 3 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	14
2	D391 5270	DC Stepper Motor:PF4140K631	1
3	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	1
4	D391 1233	Radial Ball Bearing:DIA6:NS-BRG00110A	1
5	D391 1229	Radial Ball Bearing:DIA6DIA13: NS-BRG00047B	4
6	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	6
7	D391 1175	Synchronous Belt:NS-BLT00078B	1
8	D391 1154	Parallel Pin:2x10:HP020100SCH	4
9	D391 1205	Synchronous Belt:NS-BLT00382B	1
10	D391 1123	Screw With Washer:M3x16:030160FWWS	3
11	D391 1167	Coil Spring:Tension:Transport Sub-Unit: IR3012P356A1	1
12	D391 1140	Spacer:CL030120FW	3
13	D391 1102	Tension Spring:PF4099P426B	2
14	D391 1186	Synchronous Belt:NS-BLT00295B	1
15	D391 1184	Synchronous Belt:NS-BLT00278C	1
16	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	2
17	D391 1165	Washer:HW080FWSN	1
18	D391 5254	Photointerruptor:PF2286P475	2
19	D391 1124	Pan Head Screw:Spring Washer: 030300FWWS	3
20	D391 5273	DC Motor:PF4140K634	1
21	D391 1730	Gear:Z26:PF4140P334	1
22	D391 1731	Gear:Z26/Z40:PF4140P677	1
23	D391 1732	Cam:On-off:PF4140P721	1
24	D391 1834	Bracket:Tension:PF4140K057	1
25	D391 1835	Shaft:Idler:PF4155P609	1
26	D391 1836	Bracket:Tension:PF4140K056	1
27	D391 1721	Timing Pulley:T20:PF4048P189	4
28	D391 1675	Roller:Tension:PR5100P216	2
29	D391 1663	Flange:18mm:PF4099P950	2
30	D391 1662	Flange:15mm:PF4099P225	2
31	D391 1494	Gear:Z30:PF4140P996A	1
32	D391 2147	Bracket:Cam:Motor:PF4140K055:Peen	1

Index No.	Part No.	Description	Q'ty Per Assembly
33	D391 2148	Bracket:Cam:Sensor:PF4140P708	1
34	D391 2149	Supporting Plate:PF4140P602	1
35	D391 2150	Bracket:Transport:Motor:PF4140P725	1
36	D391 2151	Bracket:Idler:PF4140P770	1
			

60.Cover Feed Path Section 4 (D391)

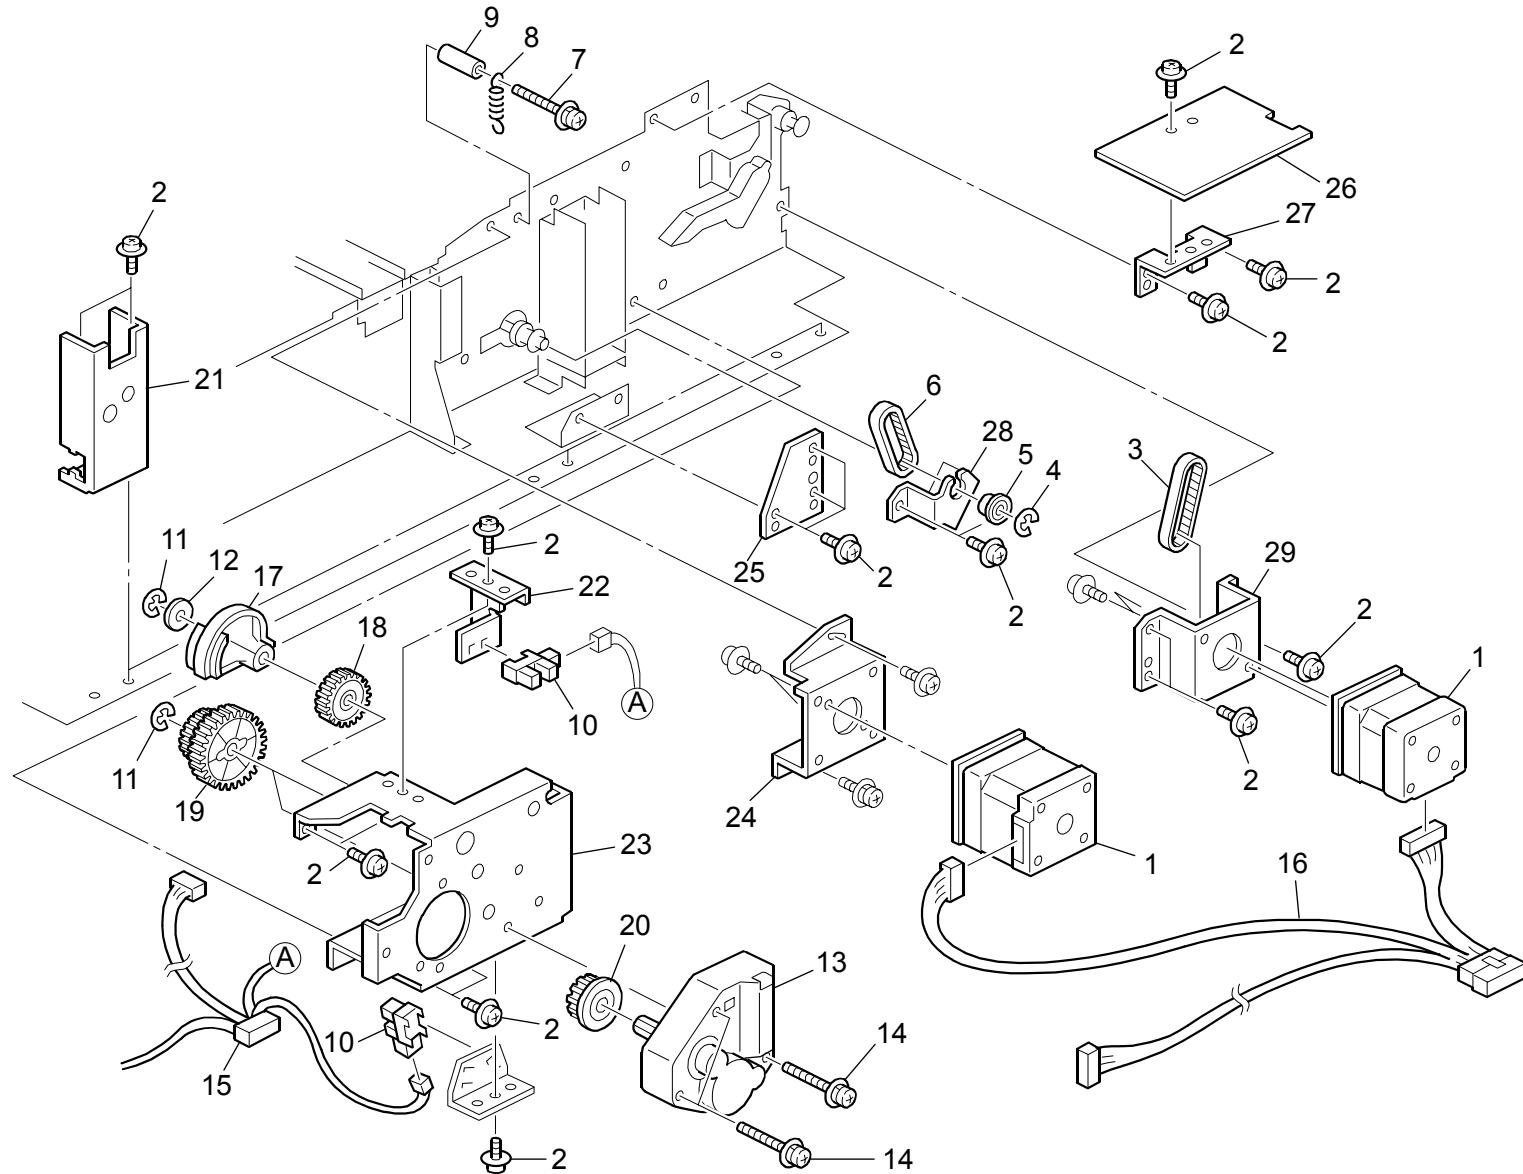


60.Cover Feed Path Section 4 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5275	DC Stepper Motor:PF4140K637	2
2	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	19
3	D391 1172	Synchronous Belt:NS-BLT00062B	1
4	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	1
5	D391 1233	Radial Ball Bearing:DIA6:NS-BRG00110A	1
6	D391 1171	Synchronous Belt:NS-BLT00054B	1
7	D391 1123	Screw With Washer:M3x16:030160FWWS	1
8	D391 1167	Coil Spring:Tension:Transport Sub-Unit: IR3012P356A1	1
9	D391 1140	Spacer:CL030120FW	1
10	D391 5254	Photointerruptor:PF2286P475	2
11	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	2
12	D391 1165	Washer:HW080FWSN	1
13	D391 5273	DC Motor:PF4140K634	1
14	D391 1124	Pan Head Screw:Spring Washer: 030300FWWS	3
15	D391 1915	Harness:Sensor:On-off:PF4140K671	1
16	D391 1916	Harness:Dc Stepper Motor:Transport: PF4140K678	1
17	D391 1732	Cam:On-off:PF4140P721	1
18	D391 1494	Gear:Z30:PF4140P996A	1
19	D391 1731	Gear:Z26/Z40:PF4140P677	1
20	D391 1730	Gear:Z26:PF4140P334	1
21	D391 2152	Bracket:Panel:PF4140P658	1
22	D391 2153	Bracket:Cam:Sensor:PF4140P762	1
23	D391 2154	Bracket:Cam:Motor:PF4140K055:Peen	1
24	D391 2155	Bracket:Transport:Motor:PF4140P724	1
25	D391 2156	Supporting Plate:PF4140P602	1
26	D391 2157	Bracket:Block Light:PF4140P638	1
27	D391 2158	Bracket:Install:Guide:PF4140P654	1
28	D391 2159	Bracket:Idler:PF4140P763	1
29	D391 2160	Bracket:Motor:PF4140P629	1

Index No.	Part No.	Description	Q'ty Per Assembly

61.Cover Feed Path Section 5 (D391)

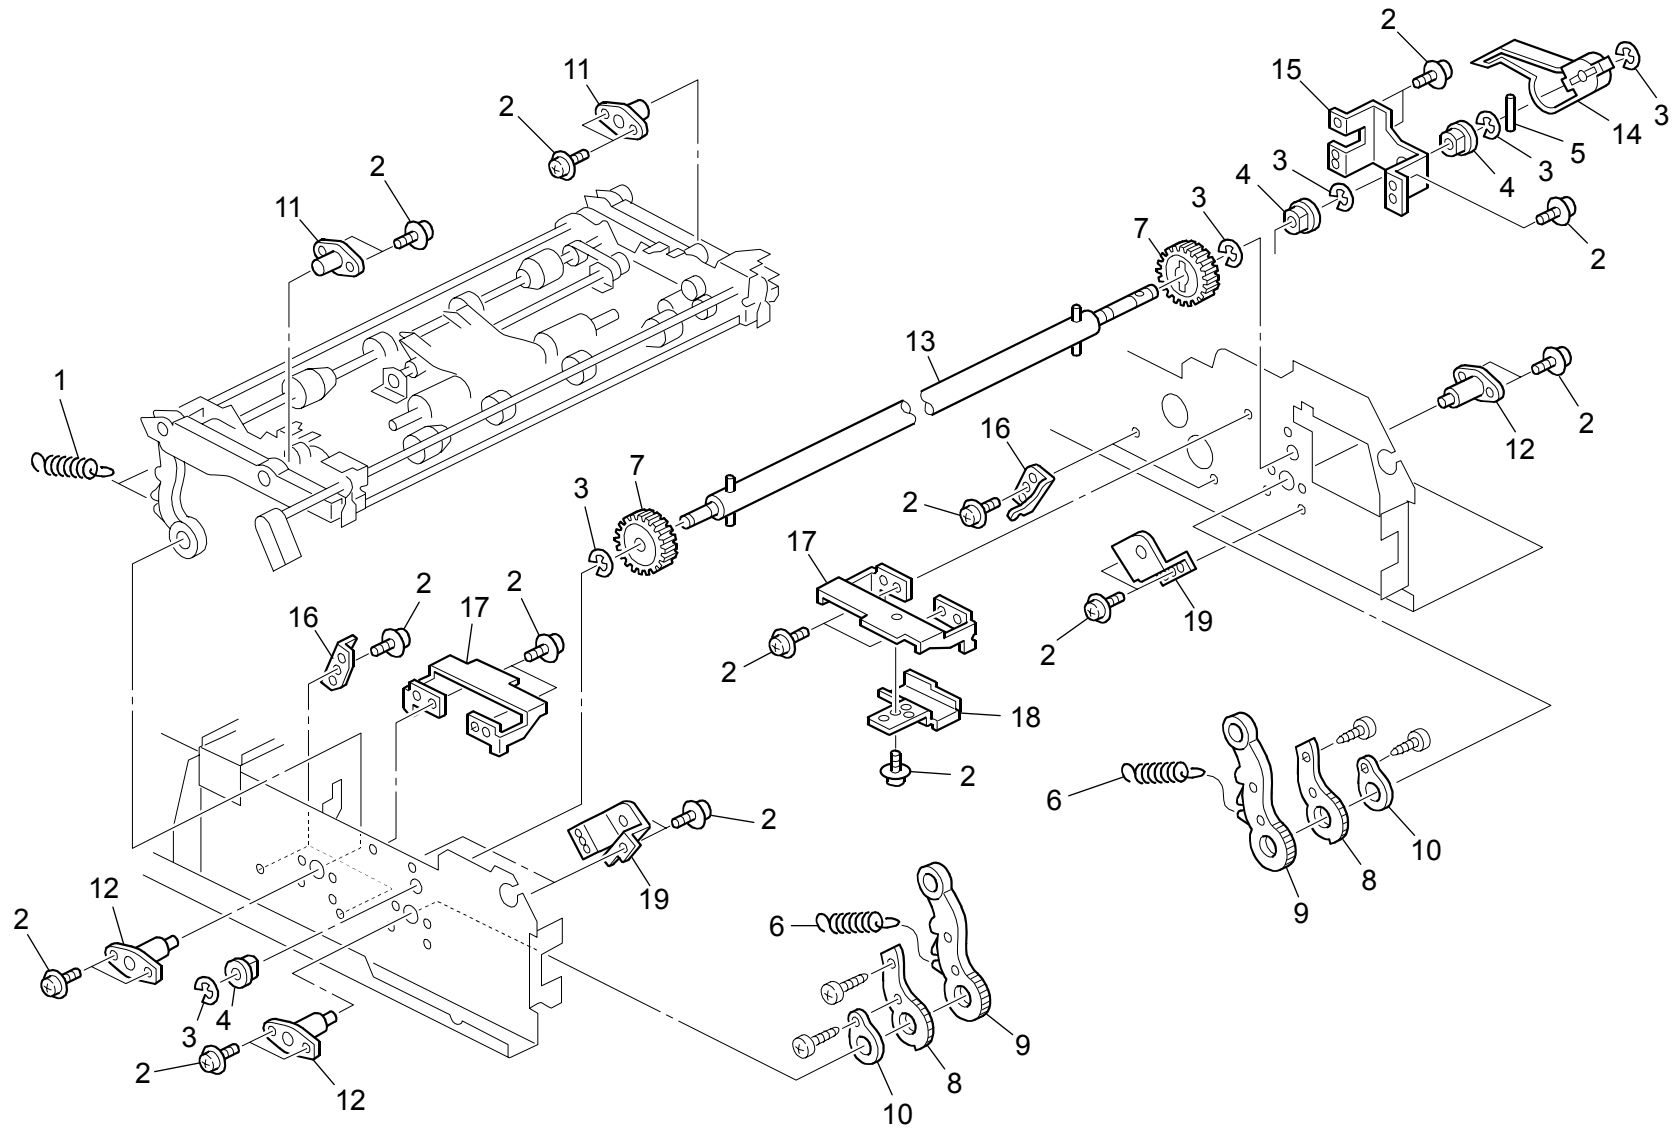


61.Cover Feed Path Section 5 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1342	Link:PF4140P773A1	2
2	D391 1243	Tapping Screw:NS-SCR00047A	24
3	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	6
4	D391 1240	Bushing:NS-MTL00017B	3
5	D391 1163	Parallel Pin:3x25:HP030250SCH	1
6	D391 1342	Link:PF4140P773A1	2
7	D391 1733	Gear:Z30:PF4140P669	2
8	D391 1734	Link:On-off:PF4140P668	2
9	D391 1735	Link:PF4140P696	2
10	D391 1736	Bushing:Contact Point:PF4140P686	2
11	D391 1837	Bracket:Contact Point:PF4140K068	2
12	D391 1838	Bracket:Contact Point:PF4140K058	3
13	D391 1839	Shaft:Drive:Transmission:PF4140P601	1
14	D391 1499	Lever:Release:PF4140P722D1	1
15	D391 2161	Bracket:Shift:Lever:PF4140P784	1
16	D391 2162	Bracket:Coil Spring:Hook:PF4140P627	2
17	D391 2163	Bracket:Install:Guide:PF4140P712	2
18	D391 2164	Bracket:Harness:Cover:PF4140P798	1
19	D391 2165	Bracket:Contact Point:Link:PF4140P727	2

Index No.	Part No.	Description	Q'ty Per Assembly

62.Cover Feed Path Section 6 (D391)

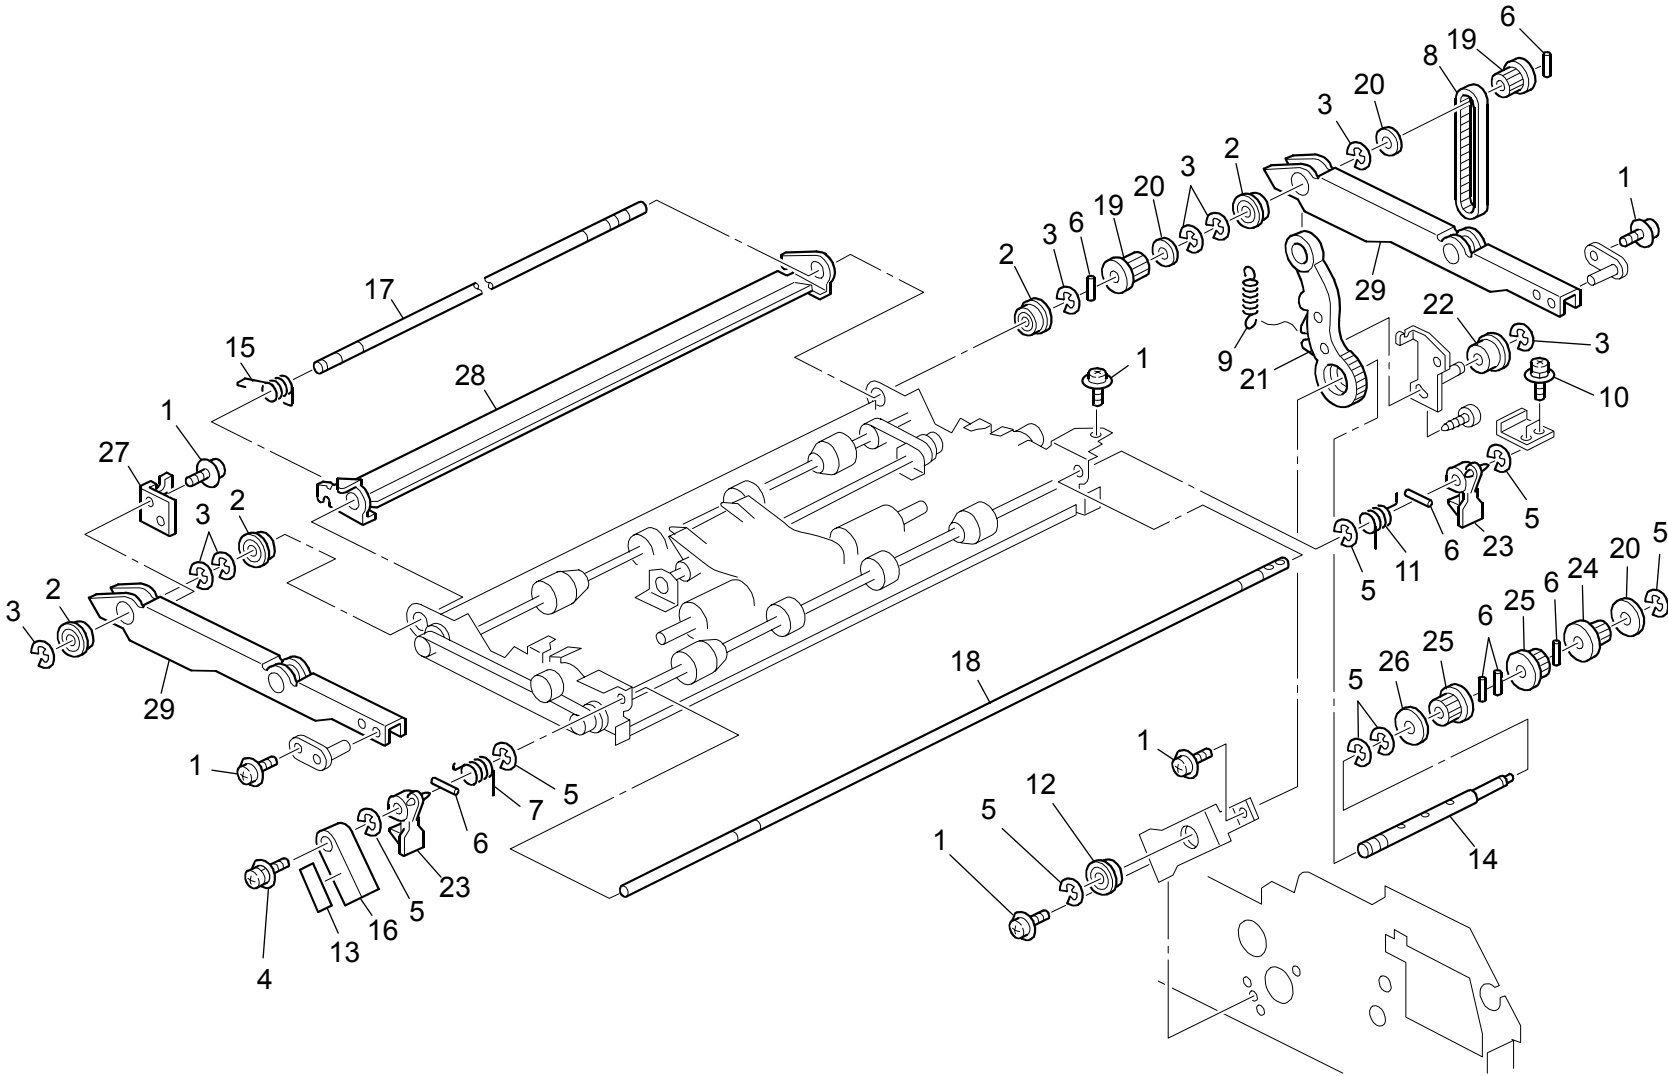


62.Cover Feed Path Section 6 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	6
2	D391 1229	Radial Ball Bearing:DIA6DIA13: NS-BRG00047B	4
3	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	8
4	D391 1120	Screw With Washer:M3x8:030080FWWS	1
5	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	8
6	D391 1154	Parallel Pin:2x10:HP020100SCH	7
7	D391 1104	Torsion Spring:Front:PF4099P804B	1
8	D391 1206	Synchronous Belt:NS-BLT00384B	1
9	D391 1103	Tension Spring:PF4099P476B	1
10	D391 1114	Washer:M3x6:030060FWSW	2
11	D391 1105	Torsion Spring:Rear:PF4099P805B	1
12	D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	1
13	D391 6510	Decal:Set:Lever:1	1
14	D391 1515	Shaft:Idler:Transport Sub-Unit: PF4155P761	1
15	D391 1737	Torsion Spring:Guide:PF4140P793	1
16	D391 1525	Handle:Arm:Lock:PF4155P607	1
17	D391 1840	Shaft:Drive:PF4140P643	1
18	D391 1841	Shaft:Latch:PF4140P744	1
19	D391 1721	Timing Pulley:T20:PF4048P189	2
20	D391 1662	Flange:15mm:PF4099P225	3
21	D391 1735	Link:PF4140P696	1
22	D391 1675	Roller:Tension:PR5100P216	1
23	D391 1523	Arm:Lock:PF4140P120	2
24	D391 1544	Timing Pulley:S2M:PF4140P631	1
25	D391 1550	Timing Pulley:S2M:PF4140P976	2
26	D391 1681	Flange:22mm:PF4099P755	1
27	D391 2166	Bracket:Turn:Fix:PF4140P640	1
28	D391 2167	Guide:Transport:Upper:PF4140P723	1
29	D391 2168	Bracket:Link:Base:PF4140P698	2

Index No.	Part No.	Description	Q'ty Per Assembly

63.Cover Feed Path Section 7 (D391)

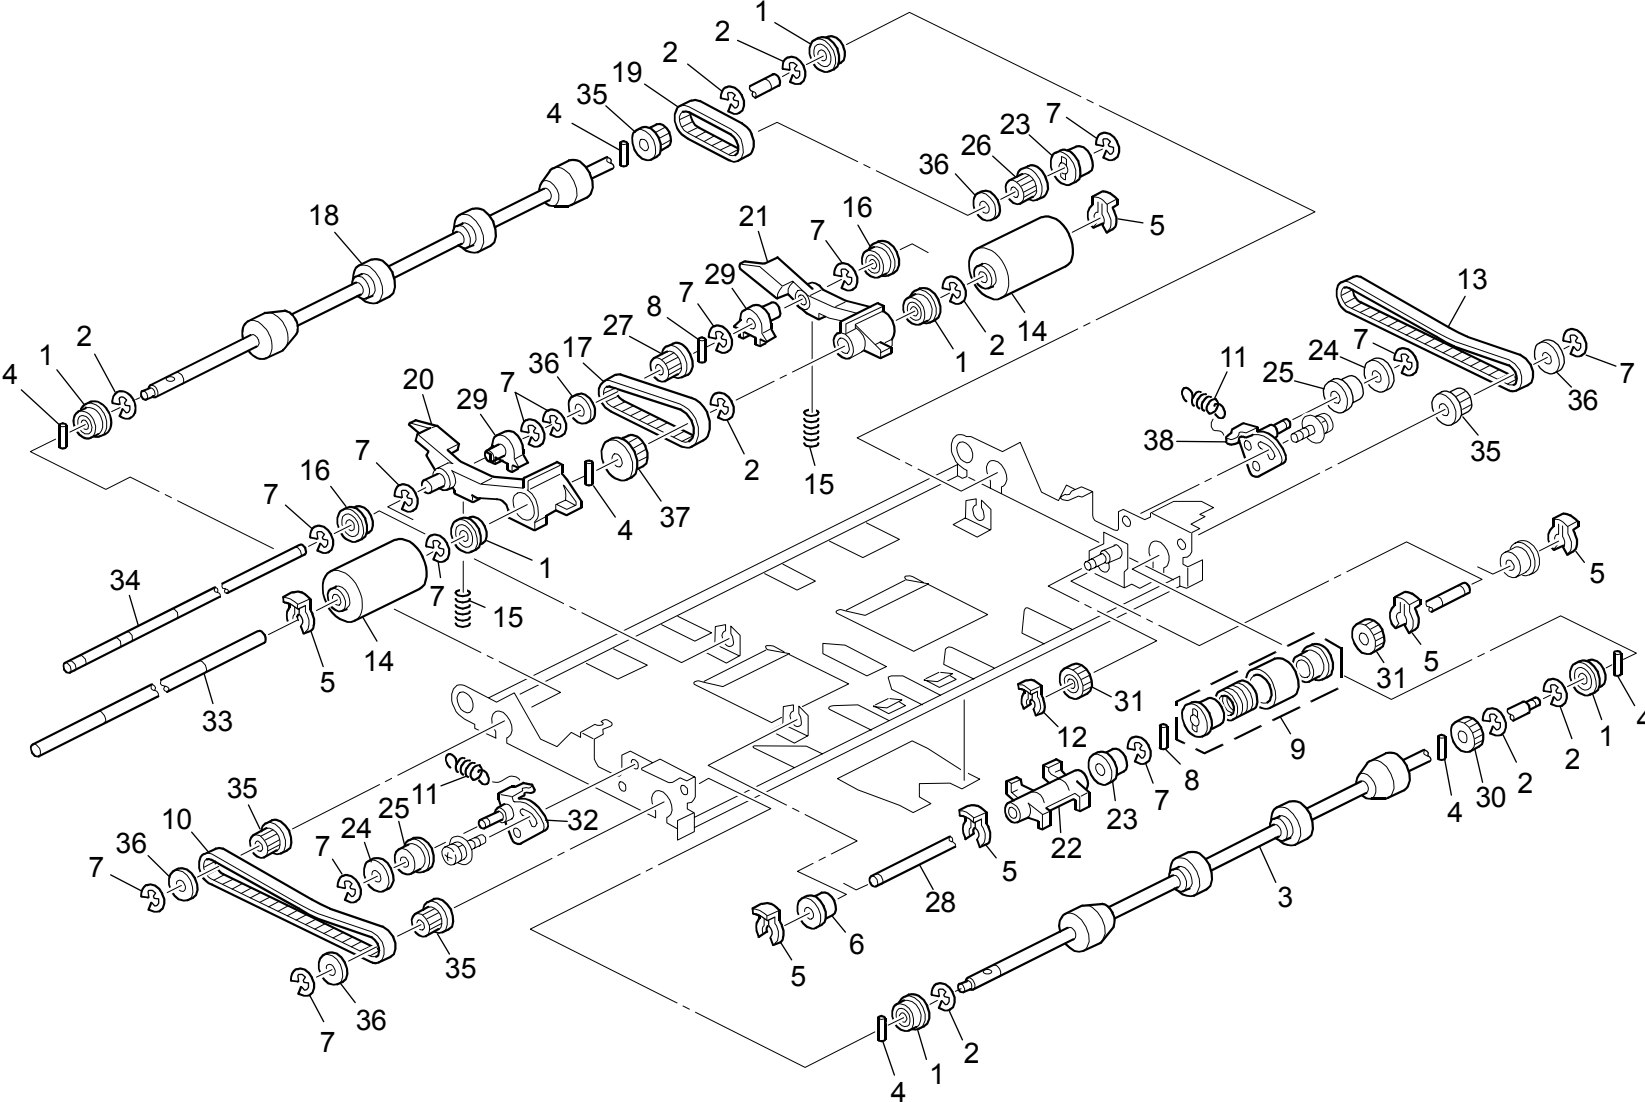


63.Cover Feed Path Section 7 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	6
2	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	8
3	D391 1331	Transport Roller:M1:PF4140P633C3	1
4	B660 4715	Parallel Pin:HP020120SCH	6
5	B660 4821	External Circlip:NS-CLP00008A	6
6	D391 1238	Bushing:DIA6:NS-MTL00007B	1
7	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	14
8	D391 1154	Parallel Pin:2x10:HP020100SCH	2
9	D391 1257	Torque Limiter Mechanical Clutch: PF3064K029B	1
10	D391 1200	Synchronous Belt:NS-BLT00377B	1
11	D391 1102	Tension Spring:PF4099P426B	2
12	B660 4815	External Circlip:NS-CLP00003A	1
13	D391 1203	Synchronous Belt:NS-BLT00380B	1
14	D391 1301	Roller:PF4140P243A1	2
15	D391 1327	Coil Spring:Roller:PF4140P606B2	2
16	D391 1229	Radial Ball Bearing:DIA6DIA13: NS-BRG00047B	2
17	D391 1173	Synchronous Belt:NS-BLT00065B	1
18	D391 1341	Transport Roller:M4:PF4140P729B1	1
19	D391 1222	Synchronous Belt:NS-BLT00409B	1
20	D391 1649	Arm:Roller:Inner Back:PF4140P690	1
21	D391 1650	Arm:Roller:Front:PF4140P691	1
22	D391 1652	Arm:Open And Close:PF4140P693	1
23	D391 1653	Roller Bearing:PF4051P347	2
24	D391 1663	Flange:18mm:PF4099P950	2
25	D391 1675	Roller:Tension:PR5100P216	2
26	D391 1544	Timing Pulley:S2M:PF4140P631	1
27	D391 1721	Timing Pulley:T20:PF4048P189	1
28	D391 1793	Shaft:Move:PF4140P641	1
29	D391 1739	Arm:Contact Point:Roller:PF4140P785	2
30	D391 1740	Gear:Z20:PF4140P590	1
31	D391 1741	Gear:Z20:PF4051P034	2
32	D391 1742	Bracket:Tension:PF4140K062	1
33	D391 1843	Shaft:Roller:PF4140P776	1

Index No.	Part No.	Description	Q'ty Per Assembly
34	D391 1844	Shaft:Drive:Roller:PF4140P768	1
35	D391 1550	Timing Pulley:S2M:PF4140P976	5
36	D391 1662	Flange:15mm:PF4099P225	4
37	D391 1726	Timing Pulley:T30:PF4140P977	1
38	D391 2169	Bracket:Tension:PF4140K063:Peen	1

64.Cover Feed Path Section 8 (D391)

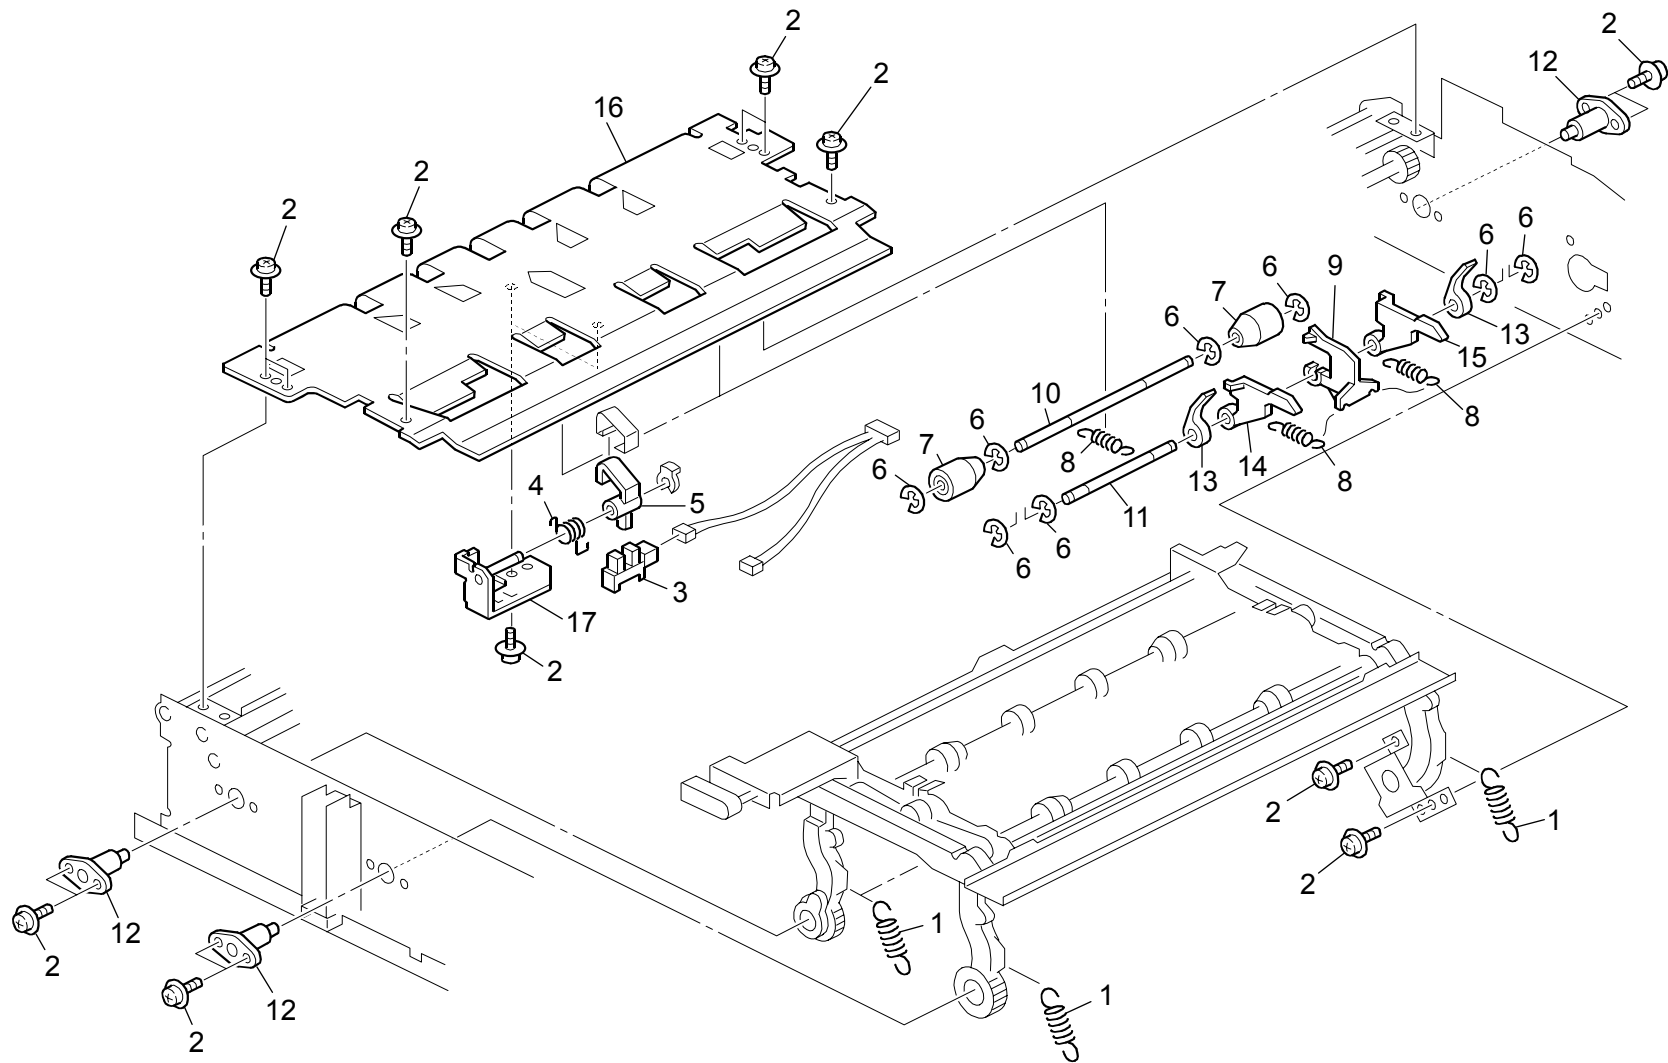


64.Cover Feed Path Section 8 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1342	Link:PF4140P773A1	4
2	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	15
3	D391 5254	Photointerruptor:PF2286P475	1
4	D391 1261	Coil Spring:Registration Sensor:Bin:Lower:PF3091P347A	1
5	D391 1328	Lever:Sensor:PF4140P614B2	1
6	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	8
7	D391 1337	Roller:Transport:2:PF4140P651A1	2
8	D391 1339	Coil Spring:Transport Roller:PF4140P700A1	3
9	D391 1448	Lever:Coil Spring:PF4140P659	1
10	D391 1831	Shaft:Roller:Transport:PF4140P701	1
11	D391 1832	Shaft:Contact Point:On-off:Roller:PF4140P648	1
12	D391 1838	Bracket:Contact Point:PF4140K058	3
13	D391 1449	Lever:Shaft:PF4140P660	1
14	D391 1446	Lever:Front:PF4140P649	2
15	D391 1447	Lever:Rear:PF4140P650	1
16	D391 2170	Guide:Transport:Lower:PF4140P611	1
17	D391 2171	Bracket:Sensor:PF4140K059:Peen	1

Index No.	Part No.	Description	Q'ty Per Assembly

65.Cover Feed Path Section 9 (D391)

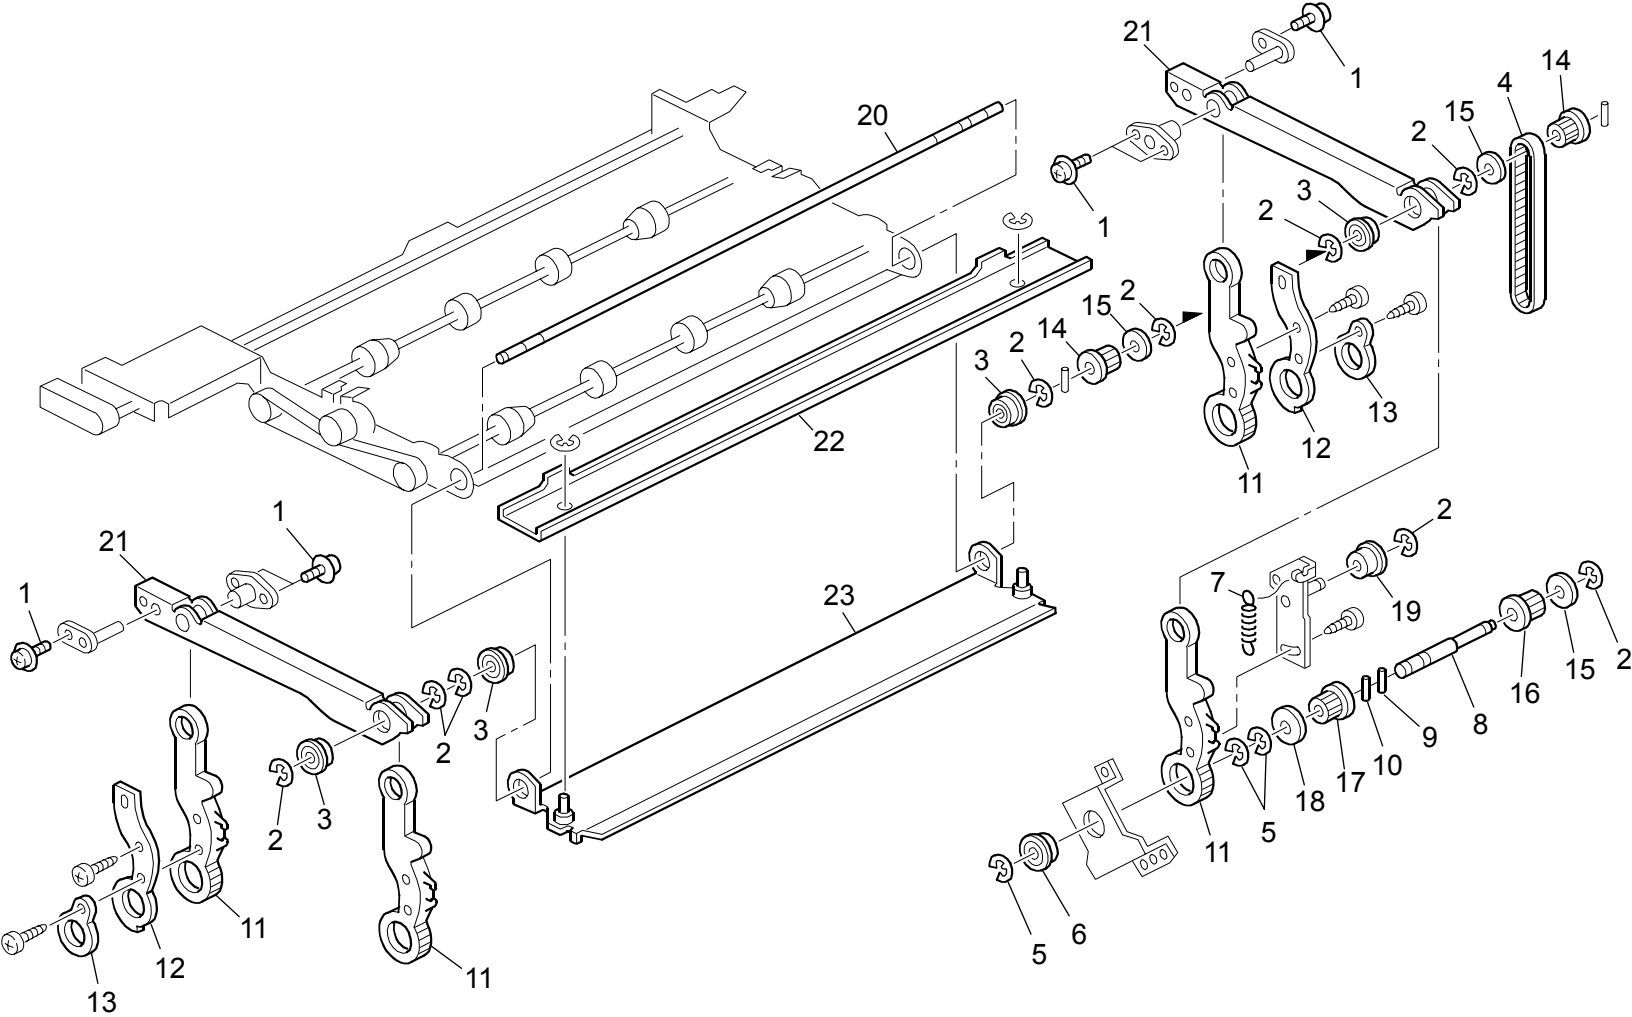


65.Cover Feed Path Section 9 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1243	Tapping Screw:NS-SCR00047A	6
2	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	9
3	D391 1229	Radial Ball Bearing:DIA6DIA13: NS-BRG00047B	4
4	D391 1206	Synchronous Belt:NS-BLT00384B	1
5	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	3
6	D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	1
7	D391 1103	Tension Spring:PF4099P476B	1
8	D391 1514	Shaft:Contact Point:Transport Sub-Unit: PF4155P695	1
9	D391 1743	Stopper Pin:SP02010FPA	1
10	D391 1744	Stopper Pin:SP02012FPA	1
11	D391 1735	Link:PF4140P696	4
12	D391 1734	Link:On-off:PF4140P668	2
13	D391 1736	Bushing:Contact Point:PF4140P686	2
14	D391 1721	Timing Pulley:T20:PF4048P189	2
15	D391 1662	Flange:15mm:PF4099P225	2
16	D391 1544	Timing Pulley:S2M:PF4140P631	1
17	D391 1550	Timing Pulley:S2M:PF4140P976	1
18	D391 1681	Flange:22mm:PF4099P755	1
19	D391 1675	Roller:Tension:PR5100P216	1
20	D391 1840	Shaft:Drive:PF4140P643	1
21	D391 2172	Bracket:Link:PF4140P795	2
22	D391 2173	Guide:Registration:PF4140P782	1
23	D391 2174	Guide:PF4140K054:Peen	1

Index No.	Part No.	Description	Q'ty Per Assembly

66.Cover Feed Path Section 10 (D391)

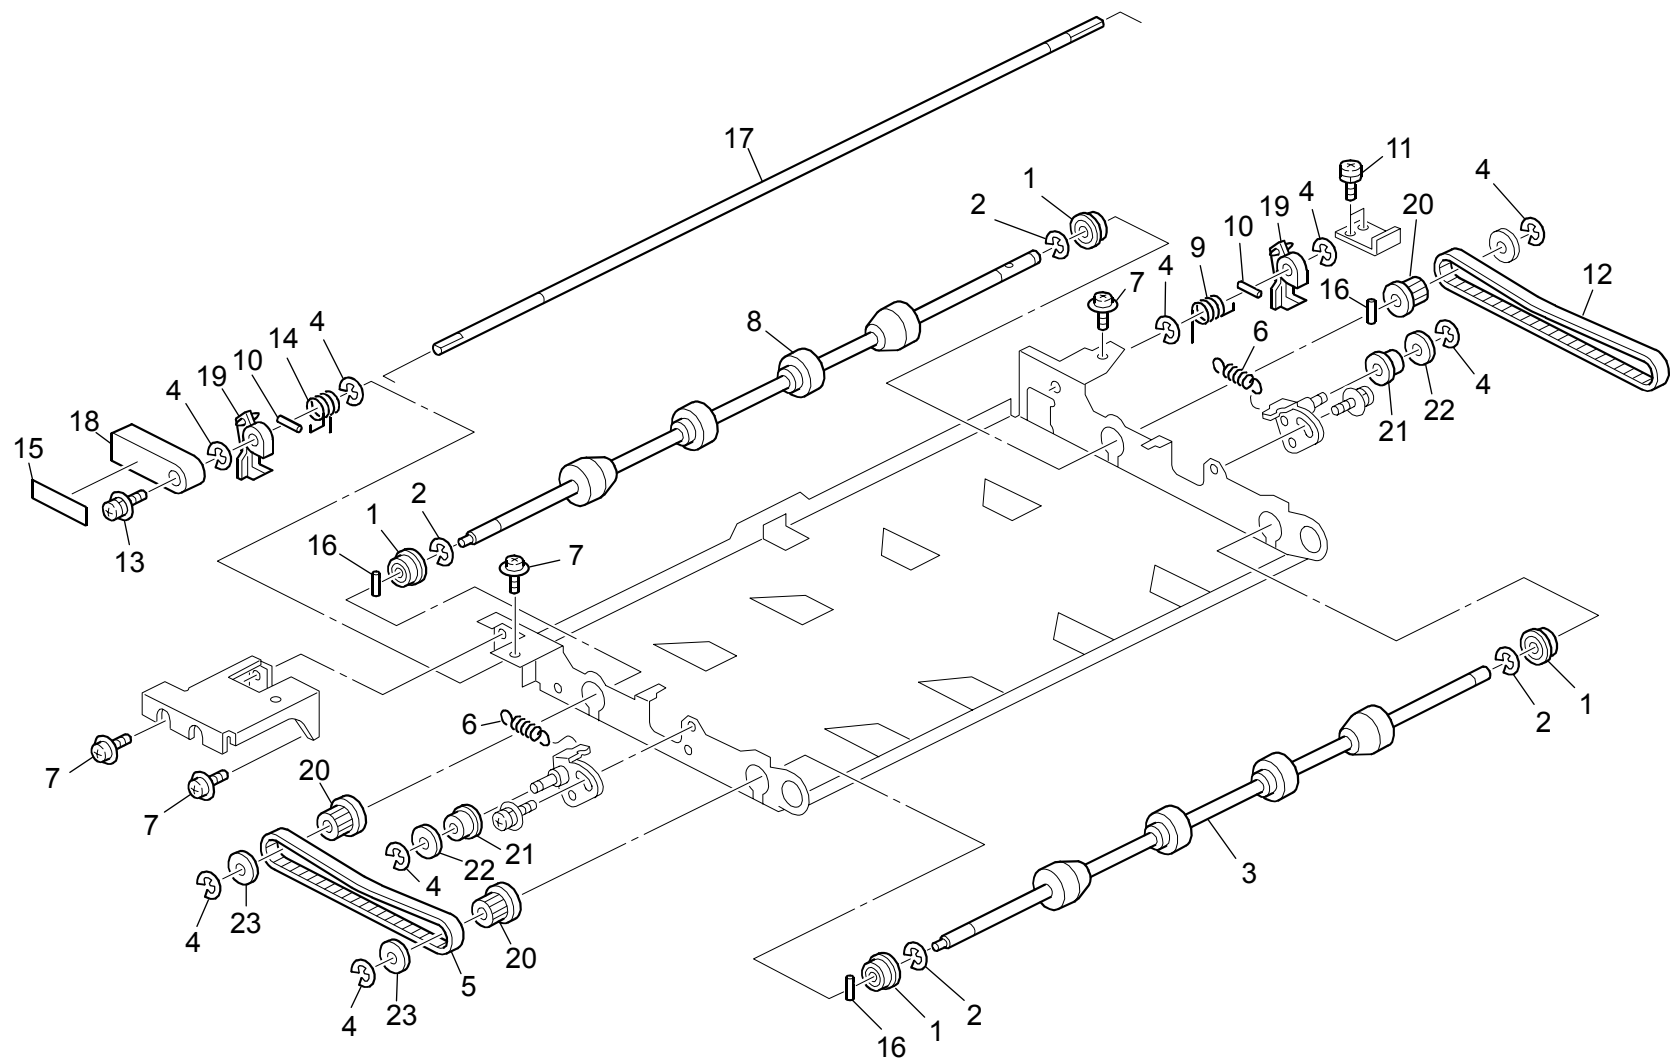


66.Cover Feed Path Section 10 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	4
2	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	4
3	D391 1333	Transport Roller:M6:PF4140P635A2	1
4	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	9
5	D391 1200	Synchronous Belt:NS-BLT00377B	1
6	D391 1102	Tension Spring:PF4099P426B	2
7	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	4
8	D391 1334	Transport Roller:M7:PF4140P636B2	1
9	D391 1104	Torsion Spring:Front:PF4099P804B	1
10	D391 1154	Parallel Pin:2x10:HP020100SCH	2
11	D391 1114	Washer:M3x6:030060FWSW	2
12	D391 1201	Synchronous Belt:NS-BLT00378B	1
13	D391 1120	Screw With Washer:M3x8:030080FWWS	1
14	D391 1105	Torsion Spring:Rear:PF4099P805B	1
15	D391 6510	Decal:Set:Lever:1	1
16	B660 4715	Parallel Pin:HP020120SCH	3
17	D391 1845	Shaft:Latch:PF4155P102	1
18	D391 1525	Handle:Arm:Lock:PF4155P607	1
19	D391 1523	Arm:Lock:PF4140P120	2
20	D391 1550	Timing Pulley:S2M:PF4140P976	3
21	D391 1675	Roller:Tension:PR5100P216	2
22	D391 1663	Flange:18mm:PF4099P950	2
23	D391 1662	Flange:15mm:PF4099P225	2

Index No.	Part No.	Description	Q'ty Per Assembly

67.Cover Feed Path Section 11 (D391)

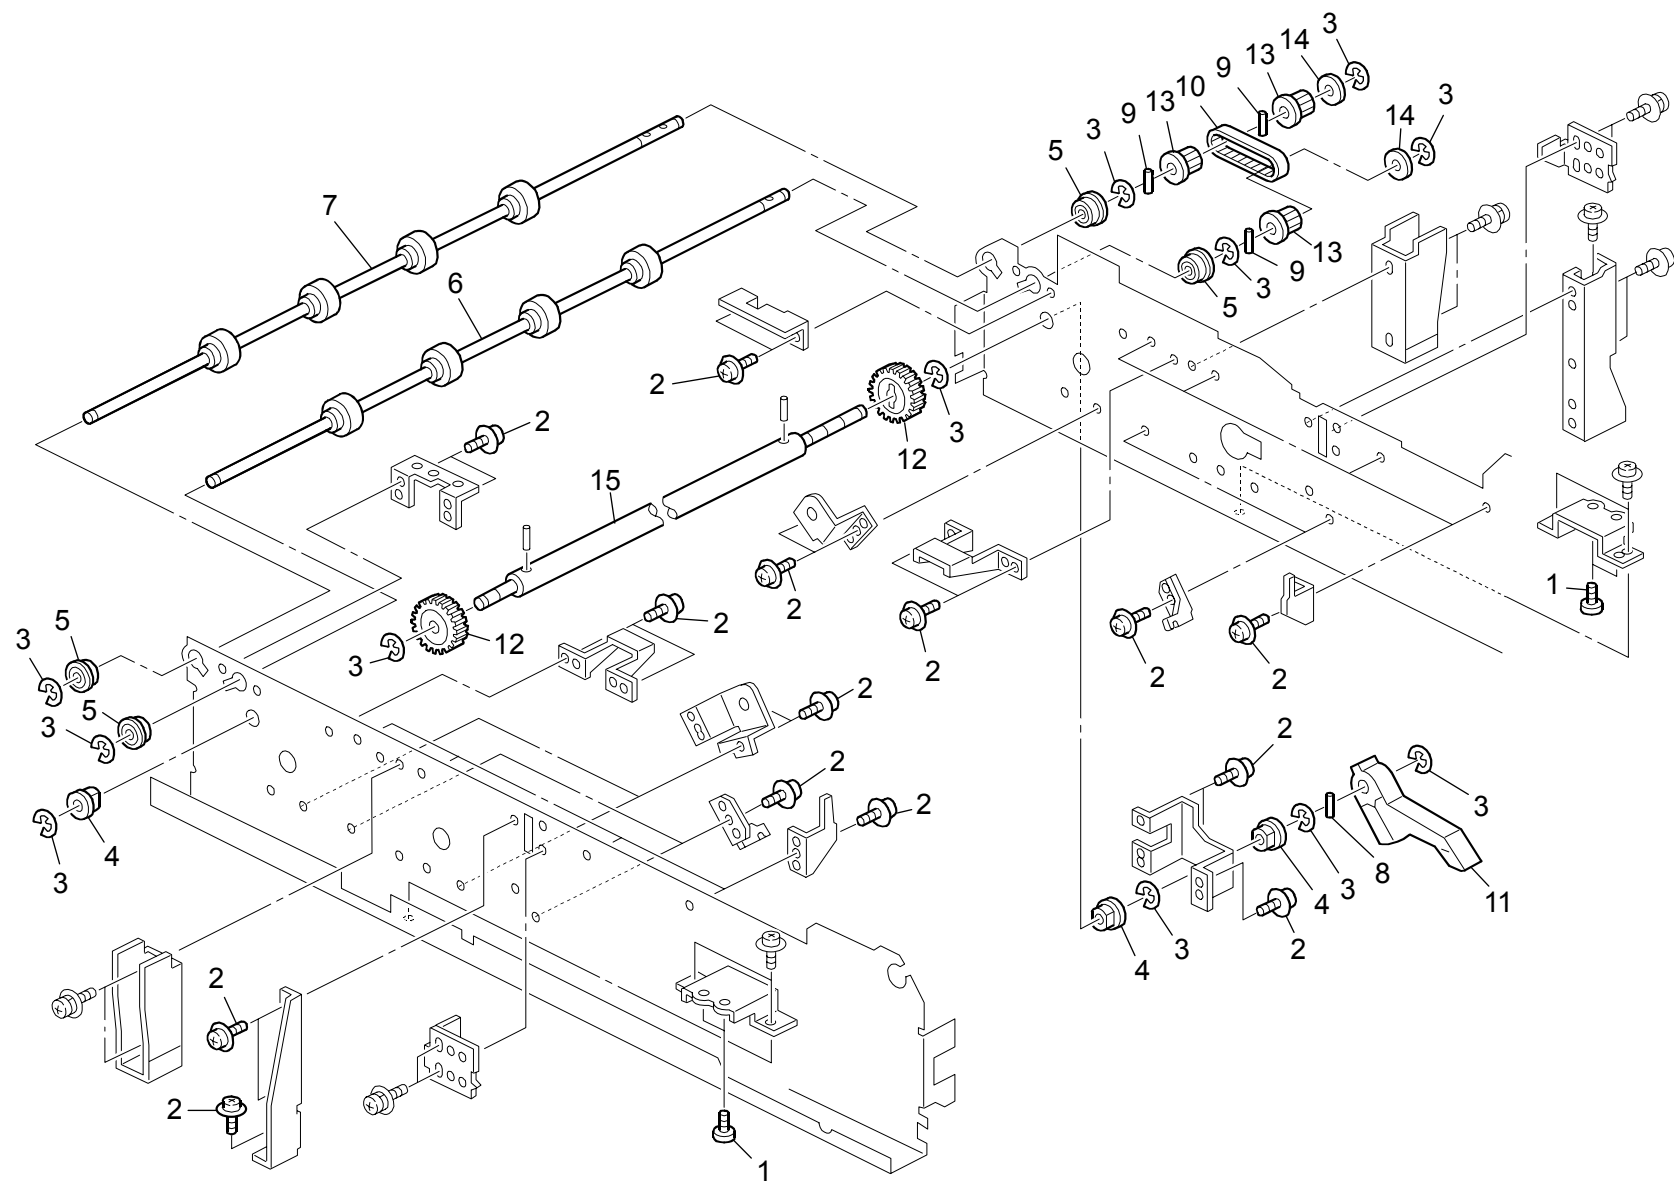


67.Cover Feed Path Section 11 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1246	Flat Screw:M4x10:NS-SCR00088B	4
2	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	32
3	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	12
4	D391 1240	Bushing:NS-MTL00017B	3
5	D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	4
6	D391 1336	Transport Roller:M5:PF4140P646A1	1
7	D391 1332	Transport Roller:M2:PF4140P634A1	1
8	D391 1163	Parallel Pin:3x25:HP030250SCH	1
9	B660 4715	Parallel Pin:HP020120SCH	3
10	D391 1189	Synchronous Belt:NS-BLT00350B	1
11	D391 1499	Lever:Release:PF4140P722D1	1
12	D391 1733	Gear:Z30:PF4140P669	2
13	D391 1544	Timing Pulley:S2M:PF4140P631	3
14	D391 1662	Flange:15mm:PF4099P225	2
15	D391 1839	Shaft:Drive:Transmission:PF4140P601	1

Index No.	Part No.	Description	Q'ty Per Assembly

68.Rear Folder Section 1 (D391)

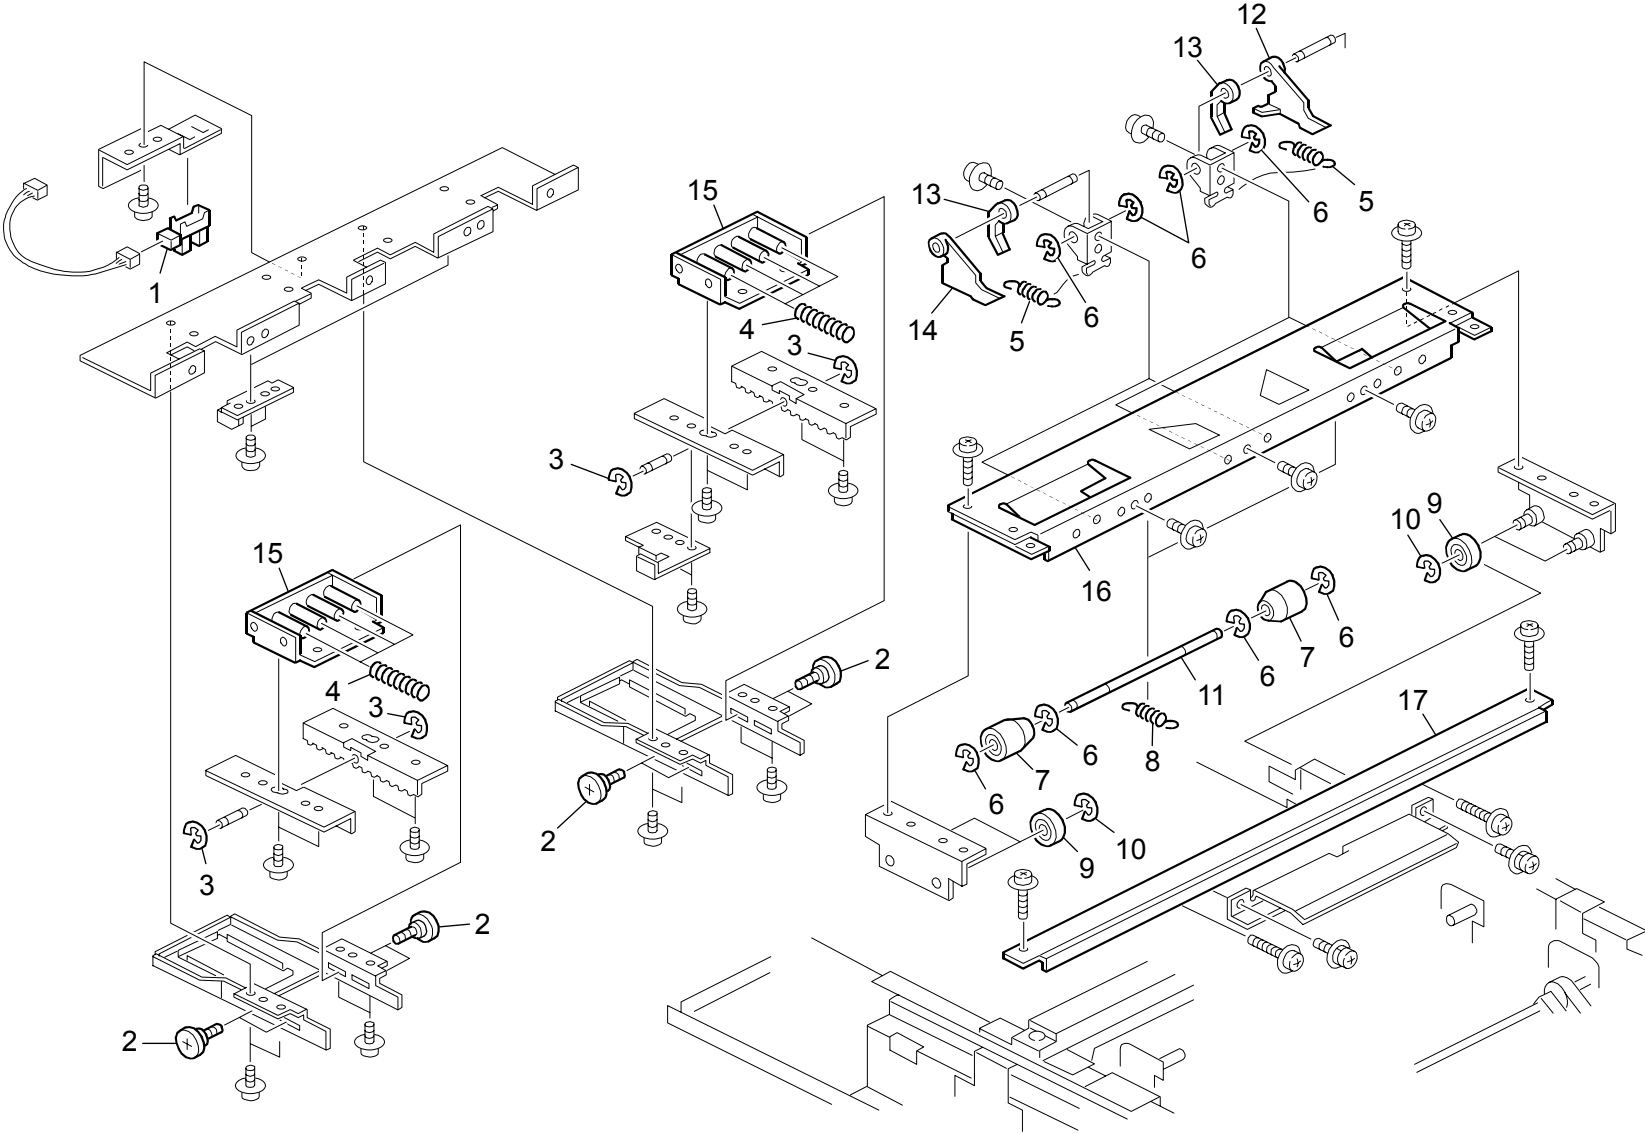


68.Rear Folder Section 1 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5254	Photointerruptor:PF2286P475	1
2	D391 1248	Screw:NS-SCR00212B	8
3	D391 1146	Retaining Rings-E:DIA2.4:ER024SU-D	4
4	D391 1320	Compression Spring:PF4140P546A	8
5	D391 1339	Coil Spring:Transport Roller:PF4140P700A1	2
6	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	8
7	D391 1337	Roller:Transport:2:PF4140P651A1	4
8	D391 1330	Coil Spring:Transport Roller:PF4140P632A	2
9	D391 1228	Radial Ball Bearing:DIA8DIA22: NS-BRG00039B	4
10	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	4
11	D391 1852	Shaft:On-off:Roller:PF4140P584	1
12	D391 1446	Lever:Front:PF4140P649	1
13	D391 1449	Lever:Shaft:PF4140P660	2
14	D391 1447	Lever:Rear:PF4140P650	1
15	D391 2175	Bracket:Spring Plate:PF4140K005:Peen	2
16	D391 2176	Bracket:Spring Plate:Left:PF4140P534	1
17	D391 2177	Block:Spring Plate:Left:PF4140P549	1
		  	

Index No.	Part No.	Description	Q'ty Per Assembly

69.Rear Folder Section 2 (D391)

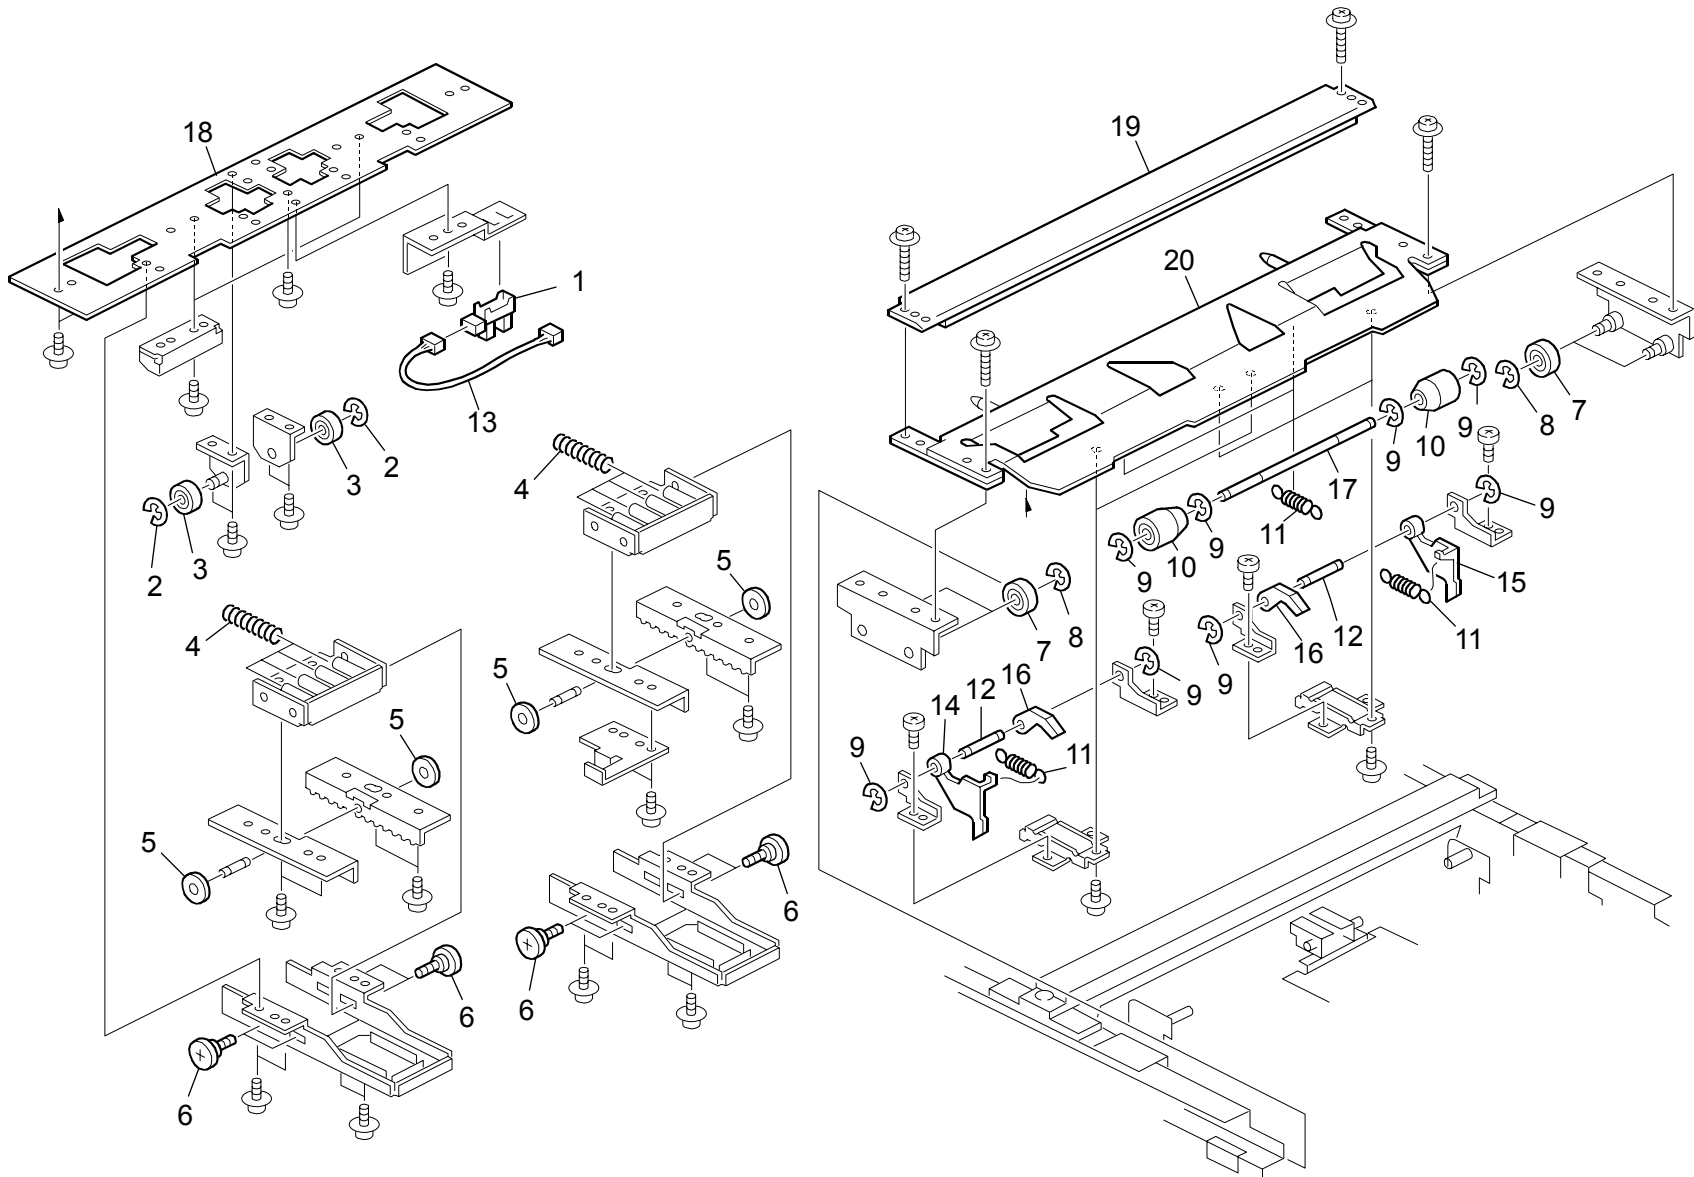


69.Rear Folder Section 2 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5254	Photointerruptor:PF2286P475	1
2	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	2
3	D391 1227	Radial Ball Bearing:DIA6DIA15: NS-BRG00033B	2
4	D391 1325	Compression Spring:PF4140P591A	8
5	D391 2361	Spacer:PF4140P745	4
6	D391 1248	Screw:NS-SCR00212B	8
7	D391 1228	Radial Ball Bearing:DIA8DIA22: NS-BRG00039B	4
8	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	4
9	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	16
10	D391 1337	Roller:Transport:2:PF4140P651A1	4
11	D391 1339	Coil Spring:Transport Roller:PF4140P700A1	6
12	D391 1854	Shaft:Contact Point:Roller:PF4140P667	1
13	D391 5303	Harness:Right:PF4140K783	1
14	D391 1446	Lever:Front:PF4140P649	1
15	D391 1447	Lever:Rear:PF4140P650	1
16	D391 1449	Lever:Shaft:PF4140P660	2
17	D391 1852	Shaft:On-off:Roller:PF4140P584	1
18	D391 2178	Bracket:Right Lower:PF4140P595	1
19	D391 2179	Block:Right:PF4140P550	1
20	D391 2180	Bracket:Right:PF4140P548	1

Index No.	Part No.	Description	Q'ty Per Assembly

70.Rear Folder Section 3 (D391)

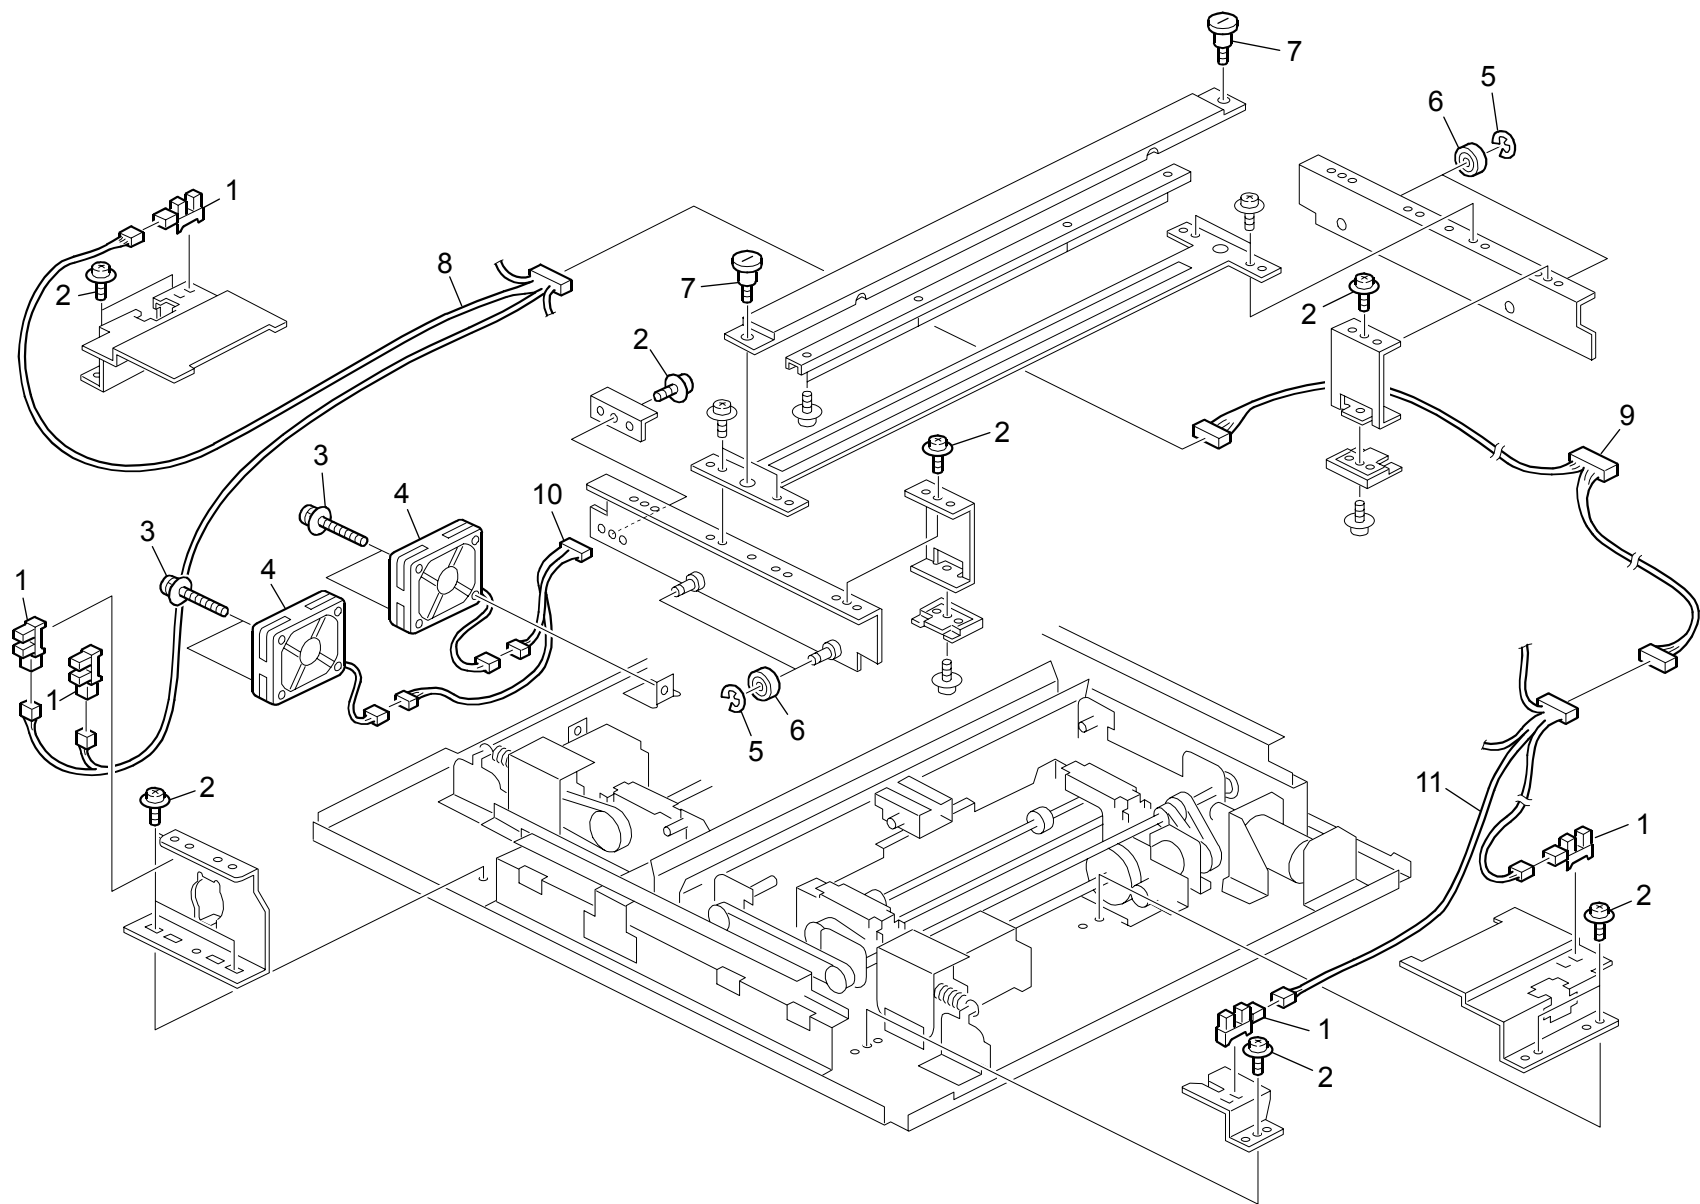


70.Rear Folder Section 3 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5254	Photointerruptor:PF2286P475	5
2	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	10
3	D391 1135	Pan Head Screw:Spring Washer:M4x30:040300FWWS	4
4	D391 5298	DC Fan Motor:PF4140R409	2
5	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	4
6	D391 1108	Bushing:606262	4
7	D391 1318	Screw:PF4140P536A1	2
8	D391 1917	Harness:Sensor:Left:PF4140K736	1
9	D391 1918	Harness:Sensor:Transport Sub-unit:PF4140K735	1
10	D391 1919	Harness:DC Fan Motor:PF4140K775	1
11	D391 1920	Harness:Sensor:Right:PF4140K738	1
			

Index No.	Part No.	Description	Q'ty Per Assembly

71.Rear Folder Section 4 (D391)

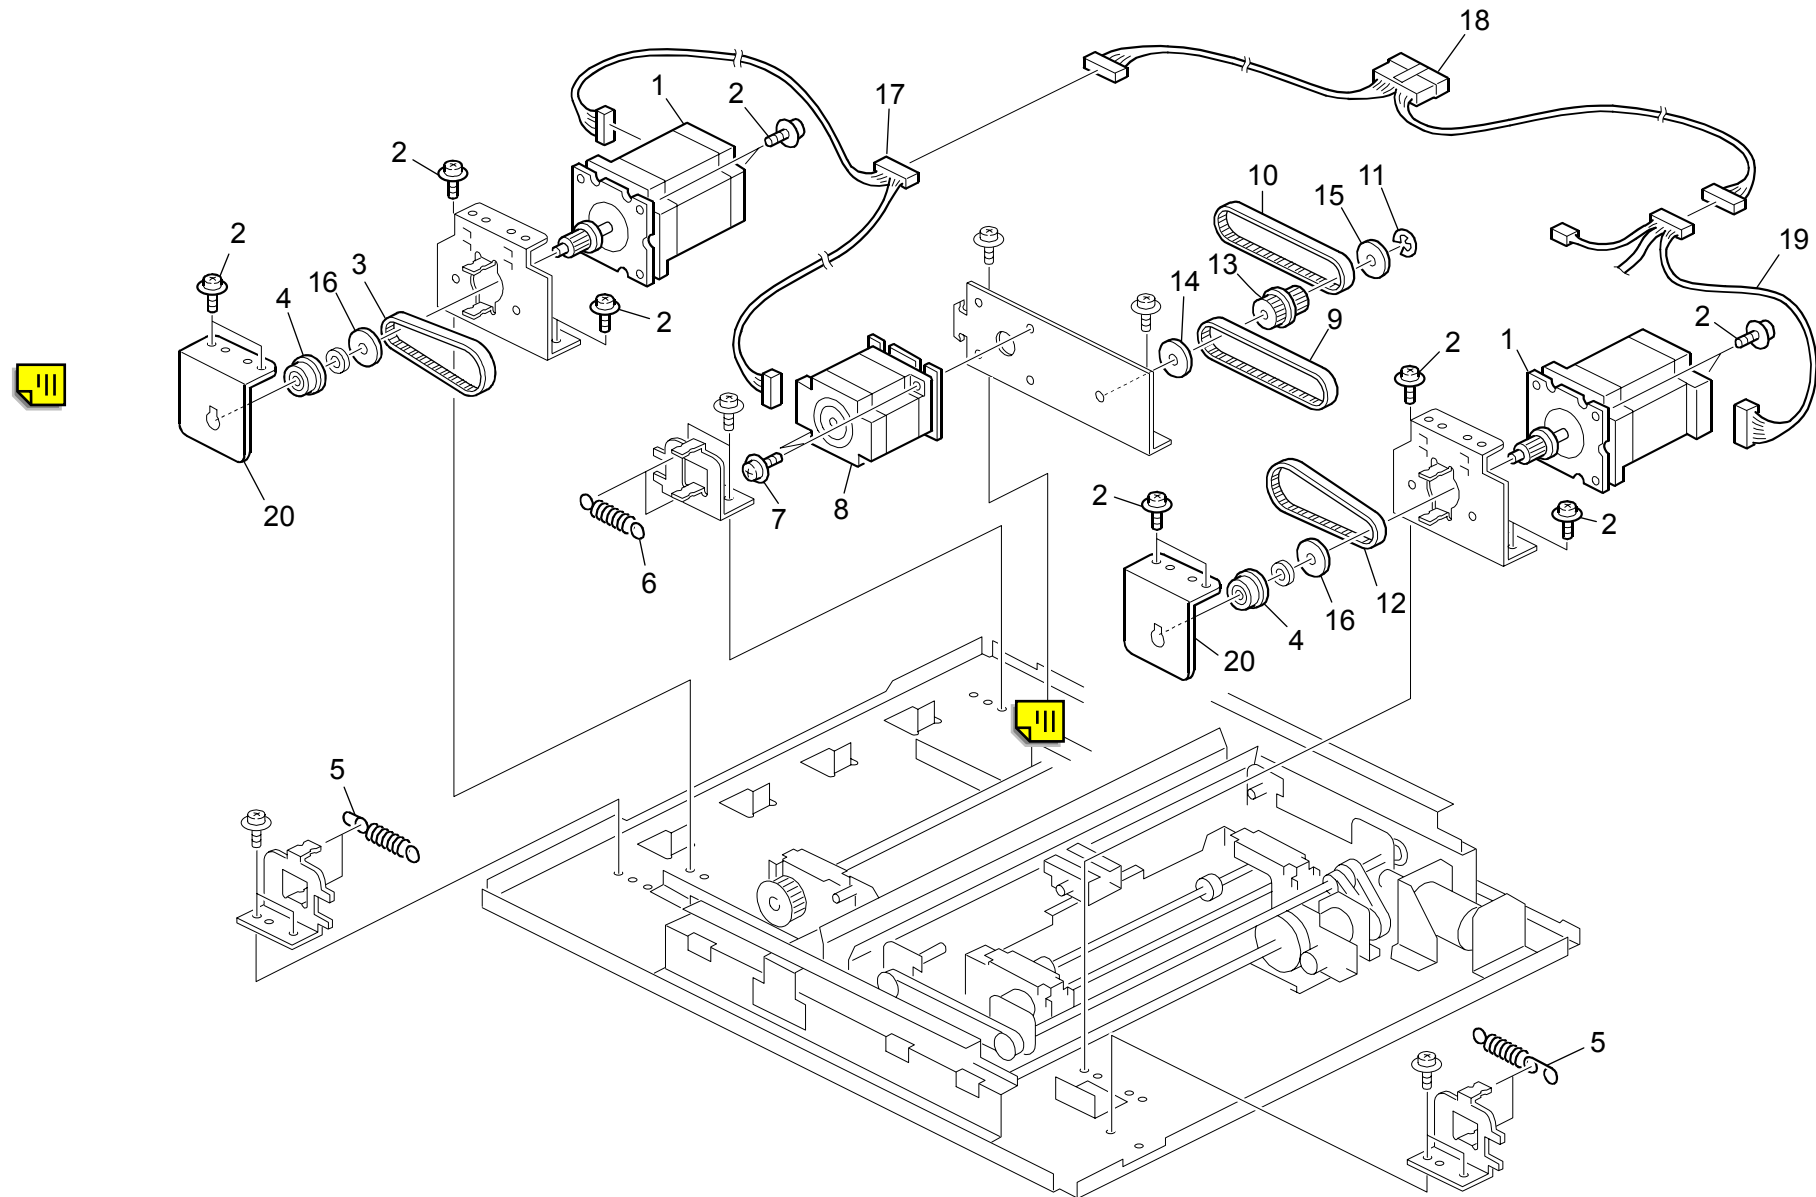


71.Rear Folder Section 4 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5269	DC Stepper Motor:PF4140K630	2
2	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	14
3	D391 1182	Synchronous Belt:NS-BLT00172B	1
4	D391 1233	Radial Ball Bearing:DIA6:NS-BRG00110A	2
5	D391 1321	Tension Spring:PR4140P547C1	2
6	D391 1342	Link:PF4140P773A1	2
7	D391 1243	Tapping Screw:NS-SCR00047A	2
8	D391 5270	DC Stepper Motor:PF4140K631	1
9	D391 1183	Synchronous Belt:NS-BLT00209B	1
10	D391 1193	Synchronous Belt:NS-BLT00355C	1
11	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	1
12	D391 1182	Synchronous Belt:NS-BLT00172B	1
13	D391 1745	Timing Pulley:T20/T32:PF4140P678	1
14	D391 1725	Flange:DIA26:PF4140P554	1
15	D391 1681	Flange:22mm:PF4099P755	1
16	D391 1663	Flange:18mm:PF4099P950	2
17	D391 5316	Harness:DC Stepper Motor:PF4140K741	1
18	D391 5317	Harness:Motor:Transport Sub-unit: PF4140K740	1
19	D391 5318	Harness:DC Stepper Motor:PF4140K742	1
20	D391 2181	Bracket:Transport:Motor:PF4140K007:Peen	2

Index No.	Part No.	Description	Q'ty Per Assembly

72.Bundle Feed Section 1 (D391)

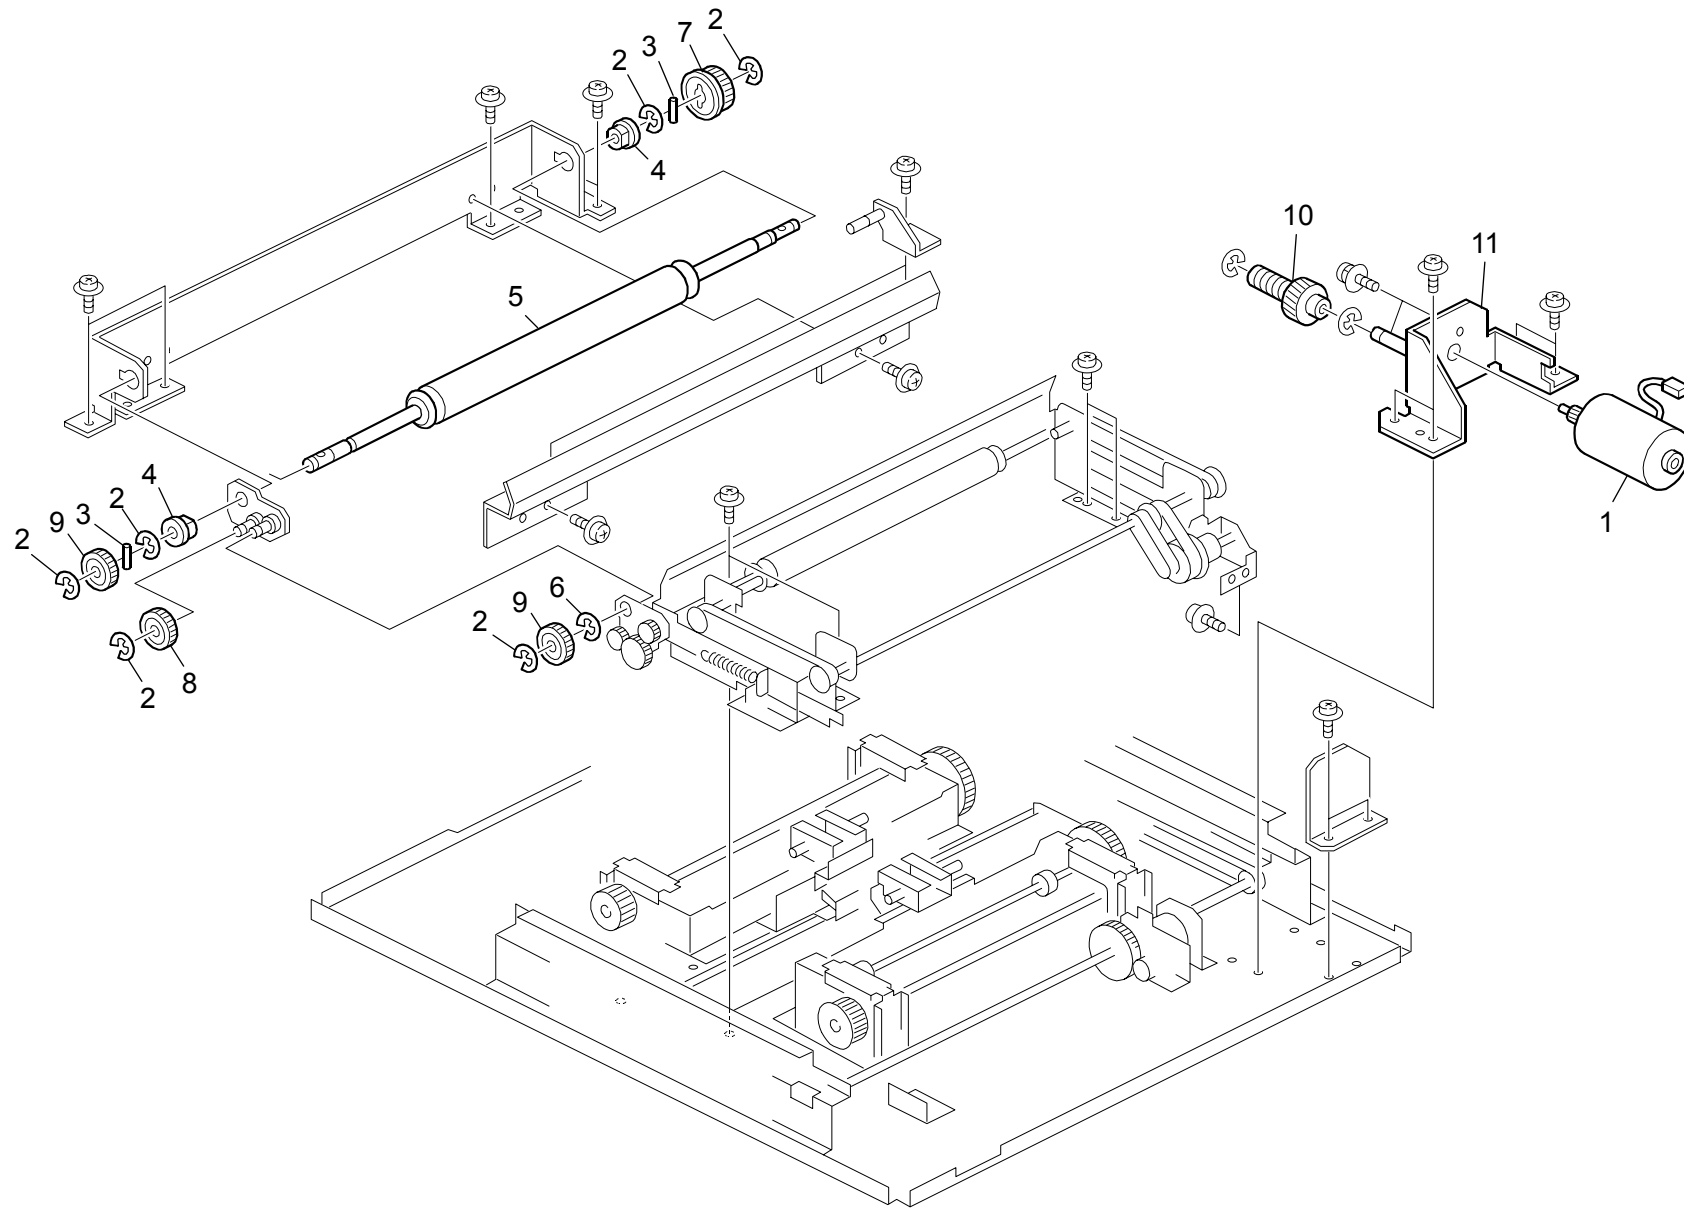


72.Bundle Feed Section 1 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5277	DC Motor:PF4140K643	1
2	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	6
3	D391 1155	Parallel Pin:2x14:HP020140SCH	2
4	D391 1240	Bushing:NS-MTL00017B	2
5	D391 1323	Transport Roller:1:PF4140P561C2	1
6	D391 1152	Retaining Rings-E:DIA8:ER080SU-D	1
7	D391 1747	Timing Pulley:T40:PF4140P966	1
8	D391 1748	Gear:Idler:PF4140P964	1
9	D391 1740	Gear:Z20:PF4140P590	2
10	D391 1497	Gear:Worm Gear:PF4140P383A2	1
11	D391 2181	Bracket:Transport:Motor:PF4140K007:Peen	1

Index No.	Part No.	Description	Q'ty Per Assembly

73.Bundle Feed Section 2 (D391)

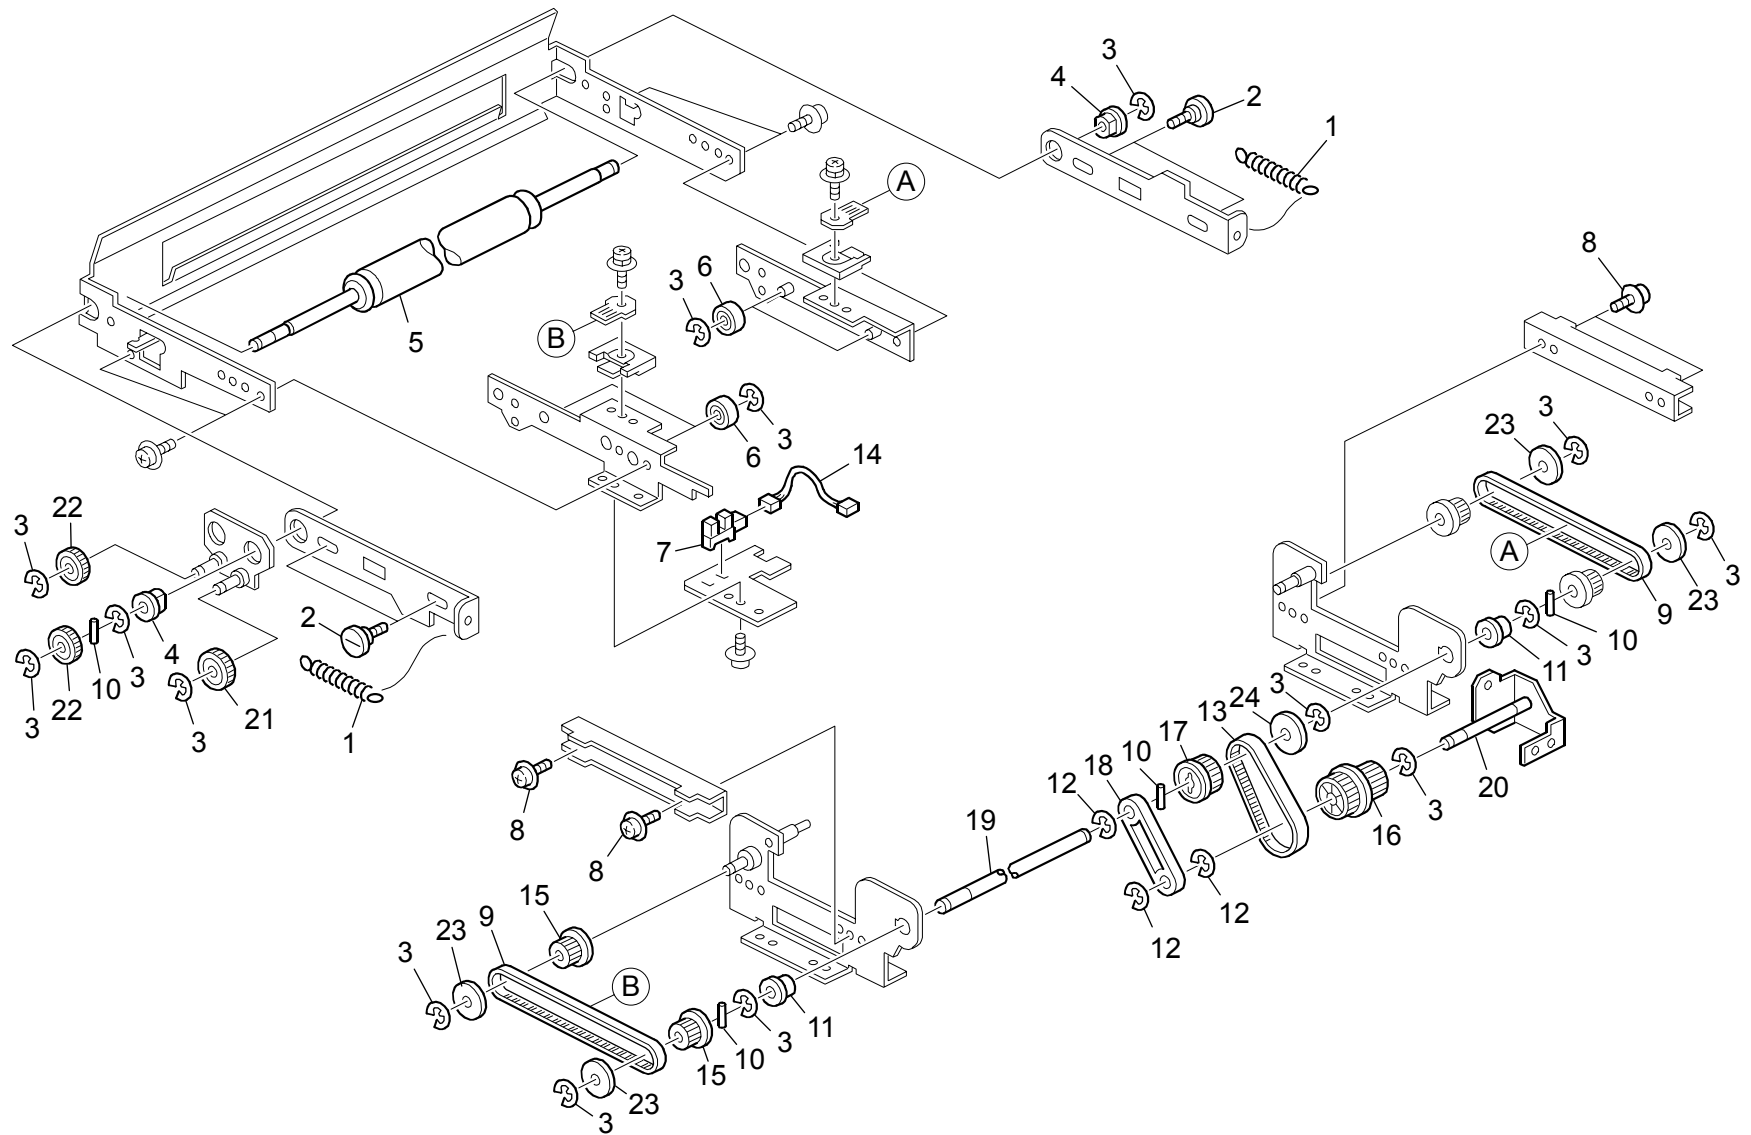


73.Bundle Feed Section 2 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1326	Tension Spring:PF4140P592A	2
2	D391 1324	Screw:PF4140P570A	4
3	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	17
4	D391 1240	Bushing:NS-MTL00017B	2
5	D391 1322	Transport Roller:2:PF4140P560B2	1
6	D391 1228	Radial Ball Bearing:DIA8DIA22: NS-BRG00039B	4
7	D391 5254	Photointerruptor:PF2286P475	1
8	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	4
9	D391 1179	Synchronous Belt:NS-BLT00138B	2
10	D391 1155	Parallel Pin:2x14:HP020140SCH	4
11	D391 1108	Bushing:606262	2
12	D391 1324	Screw:PF4140P570A	3
13	D391 1181	Synchronous Belt:NS-BLT00167B	1
14	D391 5314	Harness:Paper Feed Sensor:PF4140K782	1
15	D391 1749	Timing Pulley:T14:PF4140P515	2
16	D391 1750	Gear:Guide:Transport:PF4140P538	1
17	D391 1751	Timing Pulley:T24:PF4140P967	1
18	D391 1752	Holder:Tension:PF4140P521	1
19	D391 1855	Shaft:Drive:Transport:PF4140P557	1
20	D391 1856	Bracket:Motor:Transport:PF4140K016	1
21	D391 1748	Gear:Idler:PF4140P964	1
22	D391 1740	Gear:Z20:PF4140P590	2
23	D391 1681	Flange:22mm:PF4099P755	4
24	D391 1725	Flange:DIA26:PF4140P554	1
			

Index No.	Part No.	Description	Q'ty Per Assembly

74.Bundle Feed Section 3 (D391)

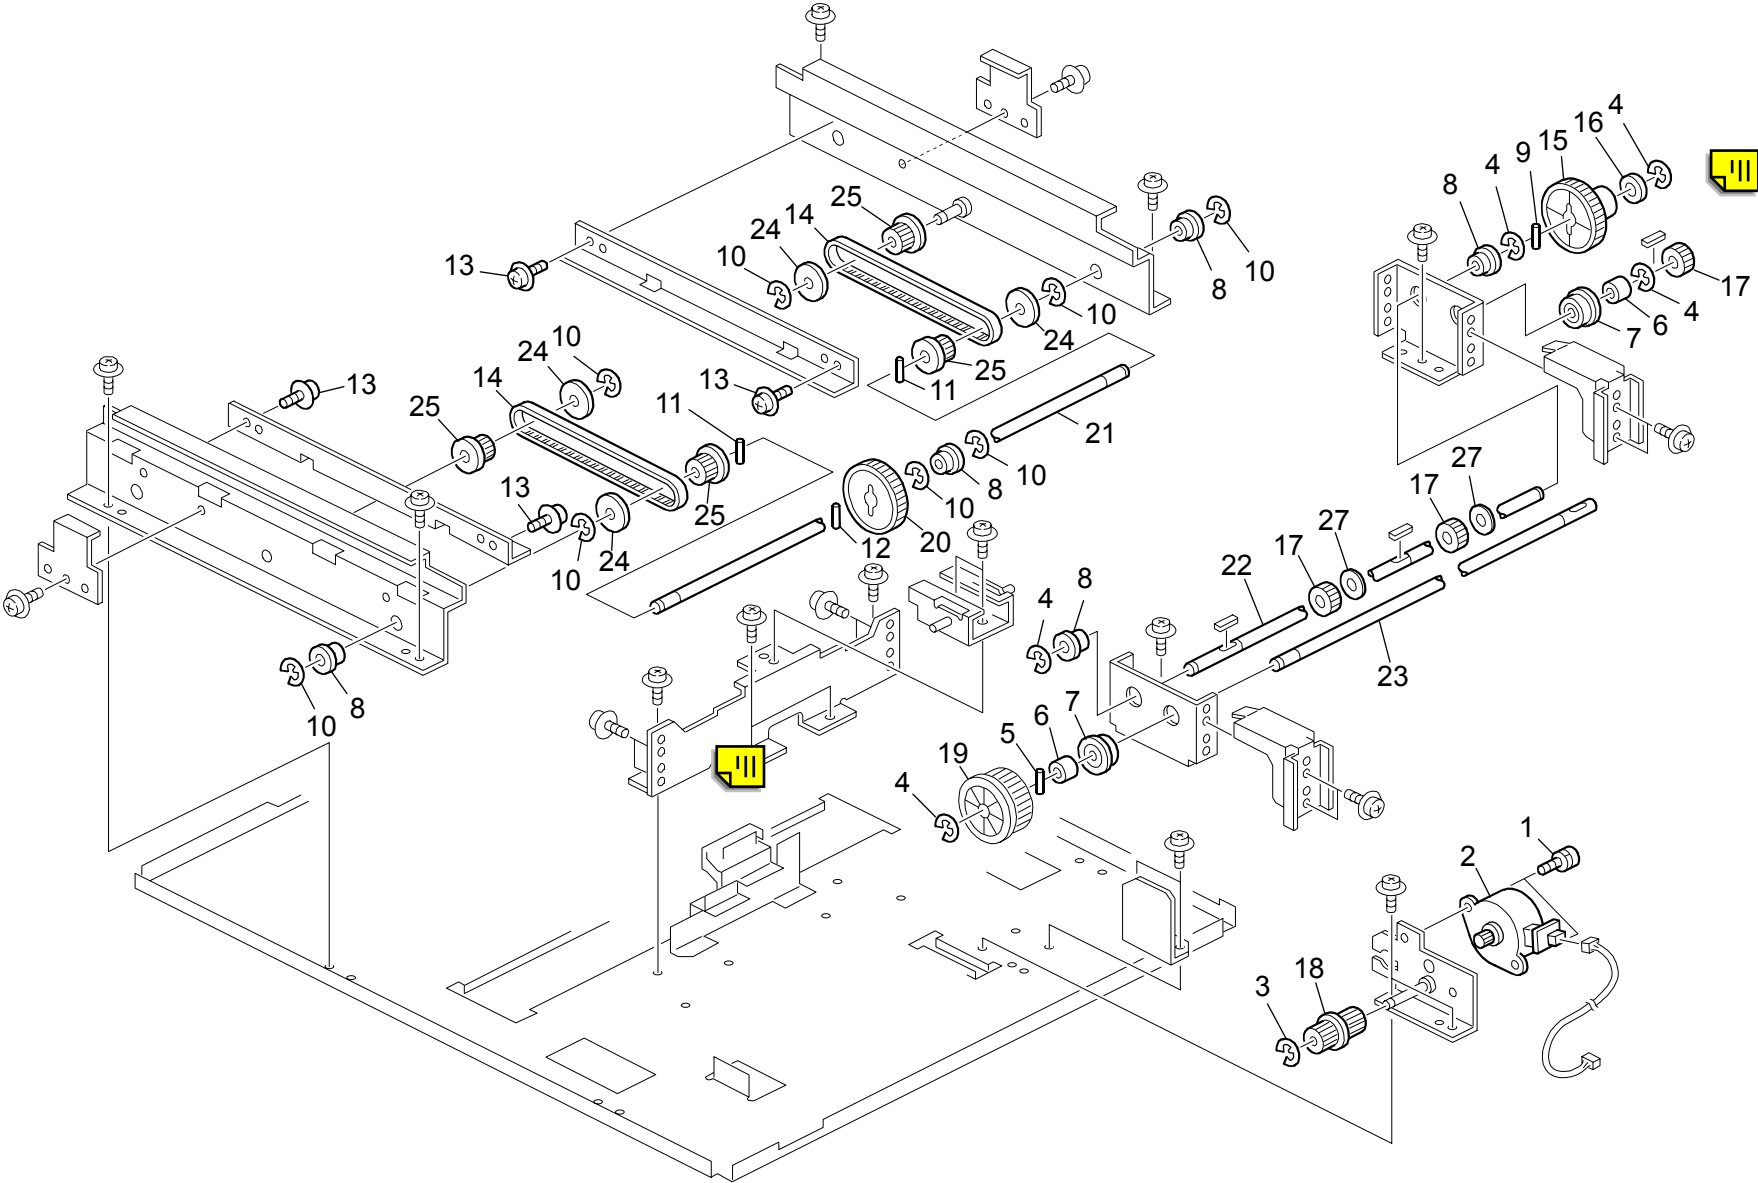


74.Bundle Feed Section 3 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1114	Washer:M3x6:030060FWSW	2
2	D391 5296	DC Stepper Motor:PF4140R405	1
3	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	1
4	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	5
5	D391 1160	Parallel Pin:3x14:HP030140SCH	1
6	D391 1141	Spacer:CL080050FW	2
7	D391 1231	Radial Ball Bearing:DIA8DIA12: NS-BRG00084B	2
8	D391 1108	Bushing:606262	5
9	D391 1161	Parallel Pin:3x16:HP030160SCH	1
10	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	8
11	D391 1155	Parallel Pin:2x14:HP020140SCH	2
12	B660 4715	Parallel Pin:HP020120SCH	1
13	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	4
14	D391 1179	Synchronous Belt:NS-BLT00138B	1
15	D391 1753	Gear:Z48:PF4140P971	1
16	D391 1754	Spacer:DIA16:PF4140P564	1
17	D391 1755	Gear:Z16:PF4140Q225	3
18	D391 1756	Gear:Z32/Z20:PF4140P588	1
19	D391 1757	Timing Pulley:T34:PF4140P555	1
20	D391 1758	Gear:Reverse Roller:Z60:PF4140P970	1
21	D391 1857	Shaft:Drive:Guide Plate:PF4140P501	1
22	D391 1859	Shaft:Gear:Drive:PF4140P508	1
23	D391 1860	Shaft:Timing Pulley:Drive:PF4140P509	1
24	D391 1681	Flange:22mm:PF4099P755	4
25	D391 1749	Timing Pulley:T14:PF4140P515	4
26	D391 1858	Shaft:Gear:Drive:PF4155P508	1
27	D391 2361	Spacer:PF4140P745	2

Index No.	Part No.	Description	Q'ty Per Assembly

75.Bundle Feed Section 4 (D391)

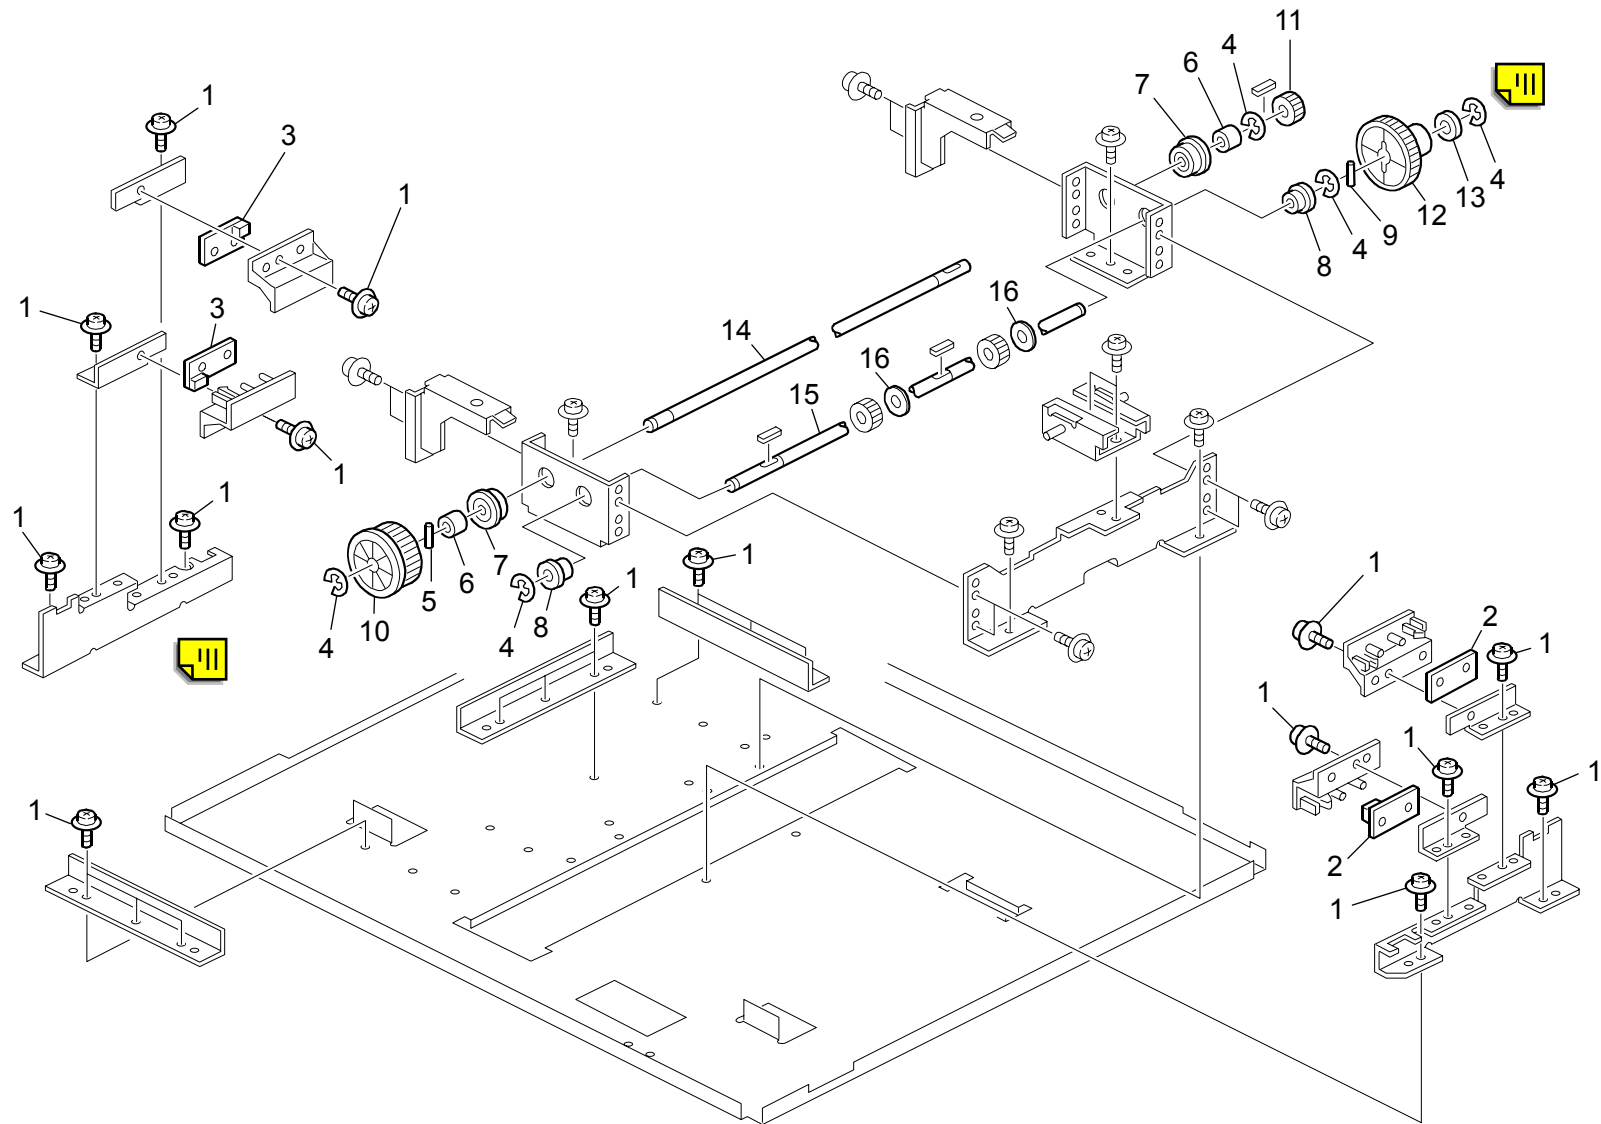


75.Bundle Feed Section 4 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	21
2	D391 5282	Optics Sensor:Photo:PF4140K906	2
3	D391 5281	Optics Sensor:Radiate:PF4140K905	2
4	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	5
5	D391 1160	Parallel Pin:3x14:HP030140SCH	1
6	D391 1141	Spacer:CL080050FW	2
7	D391 1231	Radial Ball Bearing:DIA8DIA12: NS-BRG00084B	2
8	D391 1108	Bushing:606262	2
9	D391 1161	Parallel Pin:3x16:HP030160SCH	1
10	D391 1757	Timing Pulley:T34:PF4140P555	1
11	D391 1755	Gear:Z16:PF4140Q225	1
12	D391 1753	Gear:Z48:PF4140P971	1
13	D391 1754	Spacer:DIA16:PF4140P564	1
14	D391 1860	Shaft:Timing Pulley:Drive:PF4140P509	1
15	D391 1859	Shaft:Gear:Drive:PF4140P508	1
16	D391 2361	Spacer:PF4140P745	2

Index No.	Part No.	Description	Q'ty Per Assembly

76.Stack Rotation Section 1 (D391)

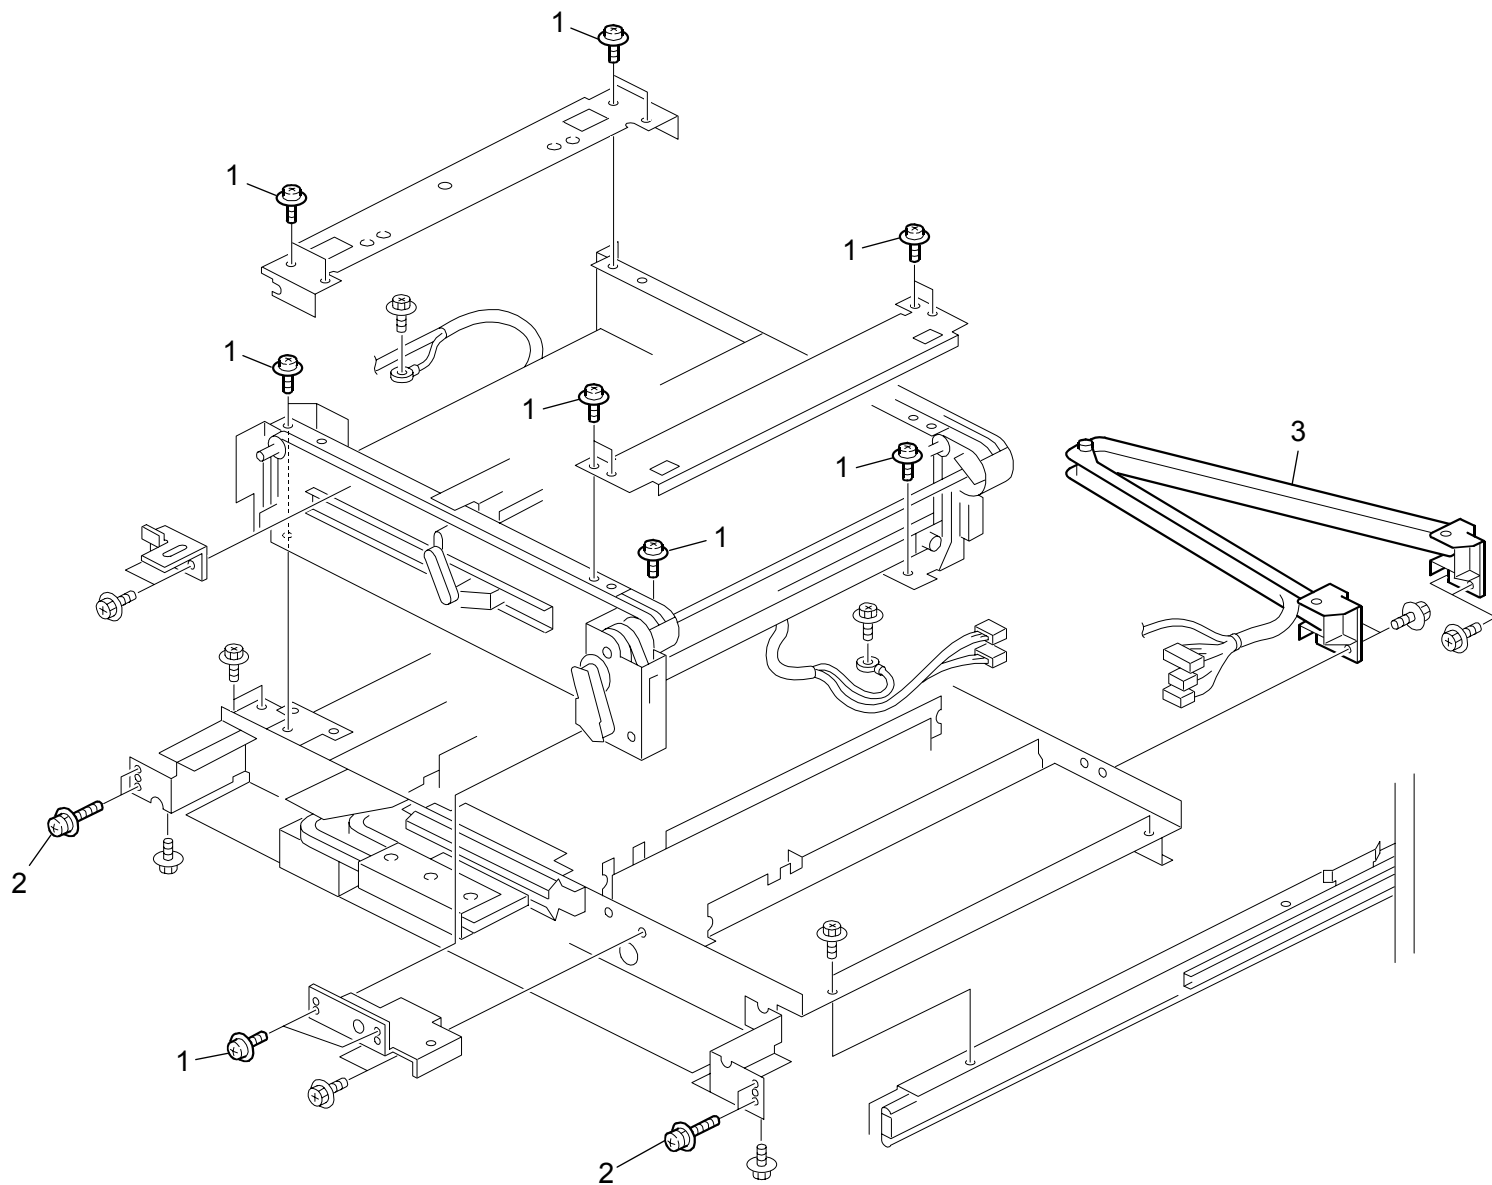


76.Stack Rotation Section 1 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	13
2	D391 1132	Screw With Washer:M4x10:040100FWWS	4
3	D391 1921	Harness:Arm:PF4140K965	1
			
			
			

Index No.	Part No.	Description	Q'ty Per Assembly

77.Stack Rotation Section 2 (D391)

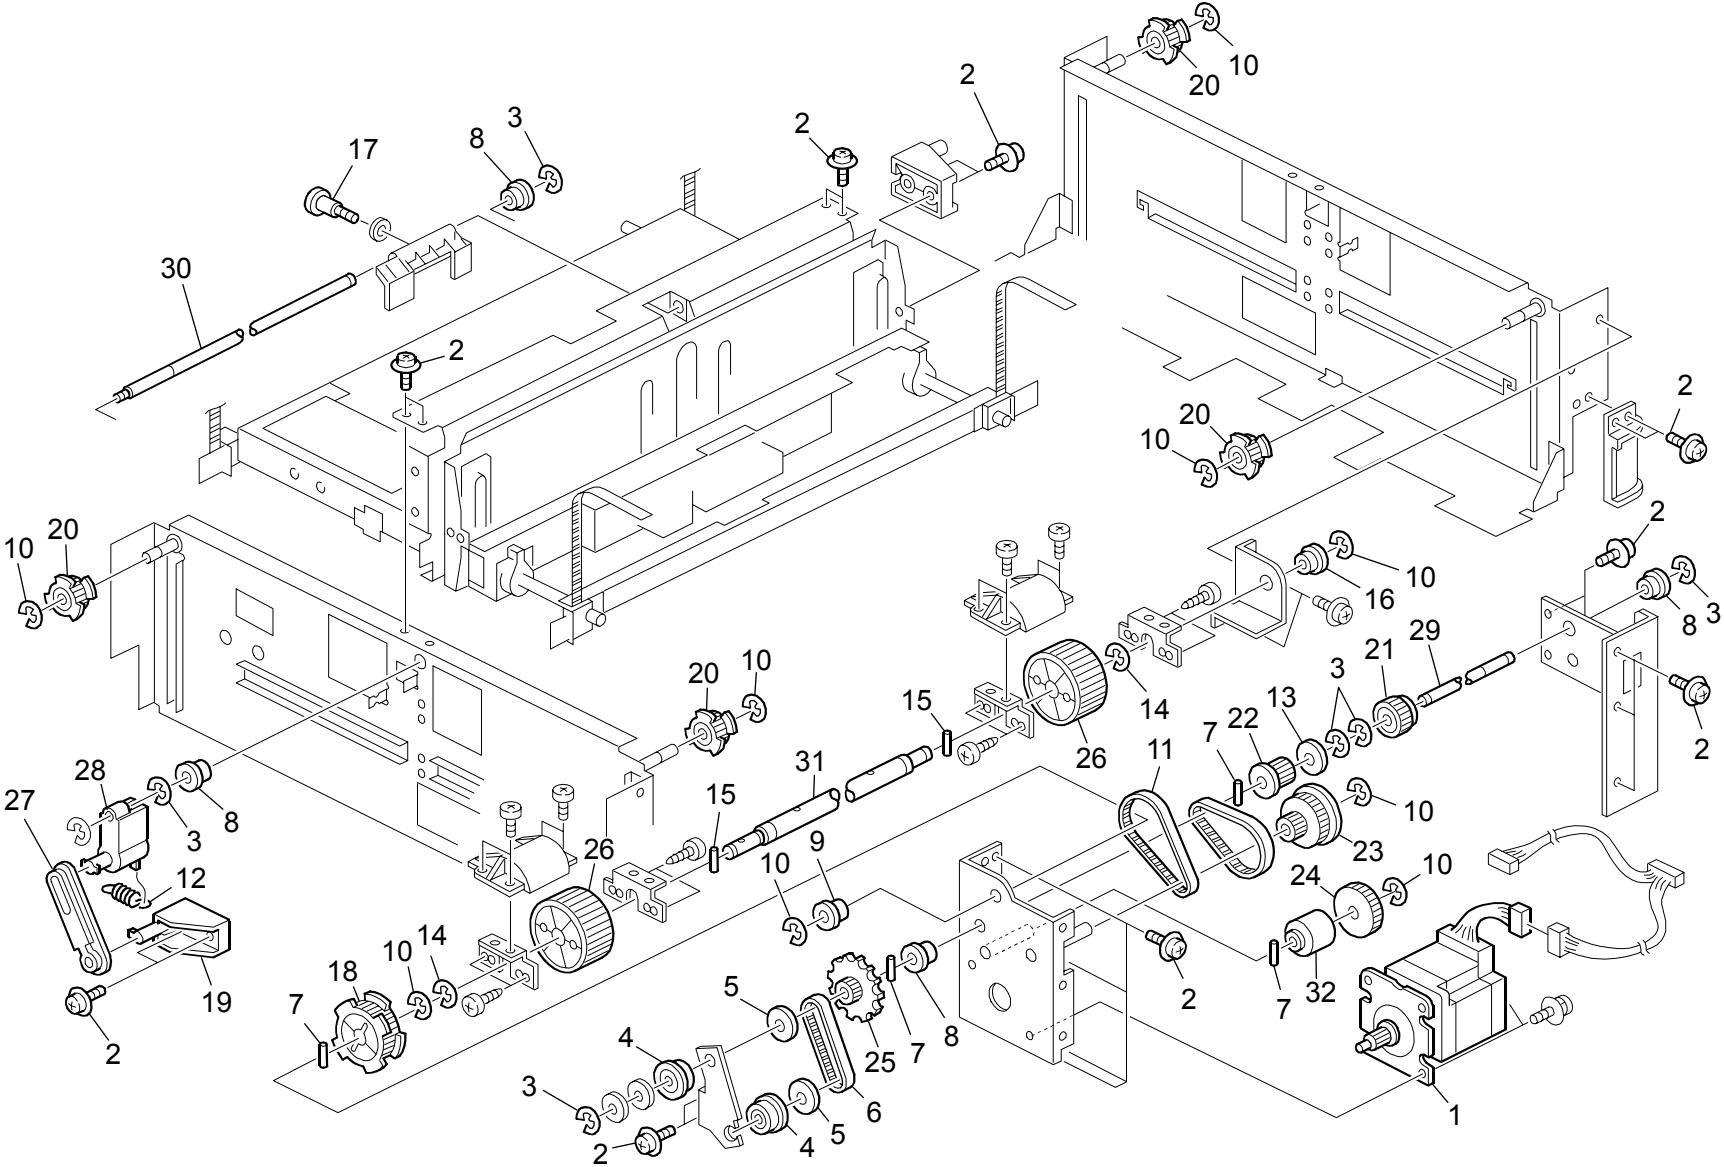


77.Stack Rotation Section 2 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5285	DC Stepper Motor:PF4140K916	1
2	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	21
3	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	6
4	D391 1263	Radial Ball Bearing:6x10:PF4096P347A	2
5	D391 1380	Flange:PF4140Q417A	2
6	D391 1211	Synchronous Belt:NS-BLT00394B	1
7	D391 1157	Parallel Pin:2x20:HP020200SCH	4
8	D391 1238	Bushing:DIA6:NS-MTL00007B	4
9	D391 1108	Bushing:606262	1
10	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	9
11	D391 1421	Synchronous Belt:NS-BLT00461	1
12	D391 1373	Tension Spring:PF4140Q269A	1
13	D391 1380	Flange:PF4140Q417A	1
14	D391 1152	Retaining Rings-E:DIA8:ER080SU-D	2
15	D391 1162	Parallel Pin:3x20:HP030200SCH	2
16	D391 1108	Bushing:606262	1
17	D391 1393	Screw:PF4140Q464A	1
18	D391 1511	Timing Pulley:PF4140Q753A1	1
19	D391 1930	Slider:Grip:PF4140Q280	1
20	D391 1759	Timing Pulley:T20:PF4140Q418	4
21	D391 1760	Gear:Z16:PF4140Q410	1
22	D391 1761	Timing Pulley:T16:PF4140Q755	1
23	D391 1762	Timing Pulley:T60/T18:PF4140Q754	1
24	D391 1763	Gear:Z32:PF4140Q027	1
25	D391 1764	Timing Pulley:T22:PF4140Q281	1
26	D391 1765	Timing Pulley:T52:PF4140Q008	2
27	D391 1766	Arm:Link:PF4140Q277	1
28	D391 1767	Link:Vibrating Plate:PF4140Q278	1
29	D391 1864	Shaft:Drive:Slide:PF4140Q261	1
30	D391 1865	Shaft:Vibrating Plate:PF4140Q263	1
31	D391 1866	Shaft:Drive:Slide:PF4140Q262	1
32	D391 1427	Torque Limiter Mechanical Clutch: PF4140Q422	1

Index No.	Part No.	Description	Q'ty Per Assembly

78.Stack Rotation Section 3 (D391)

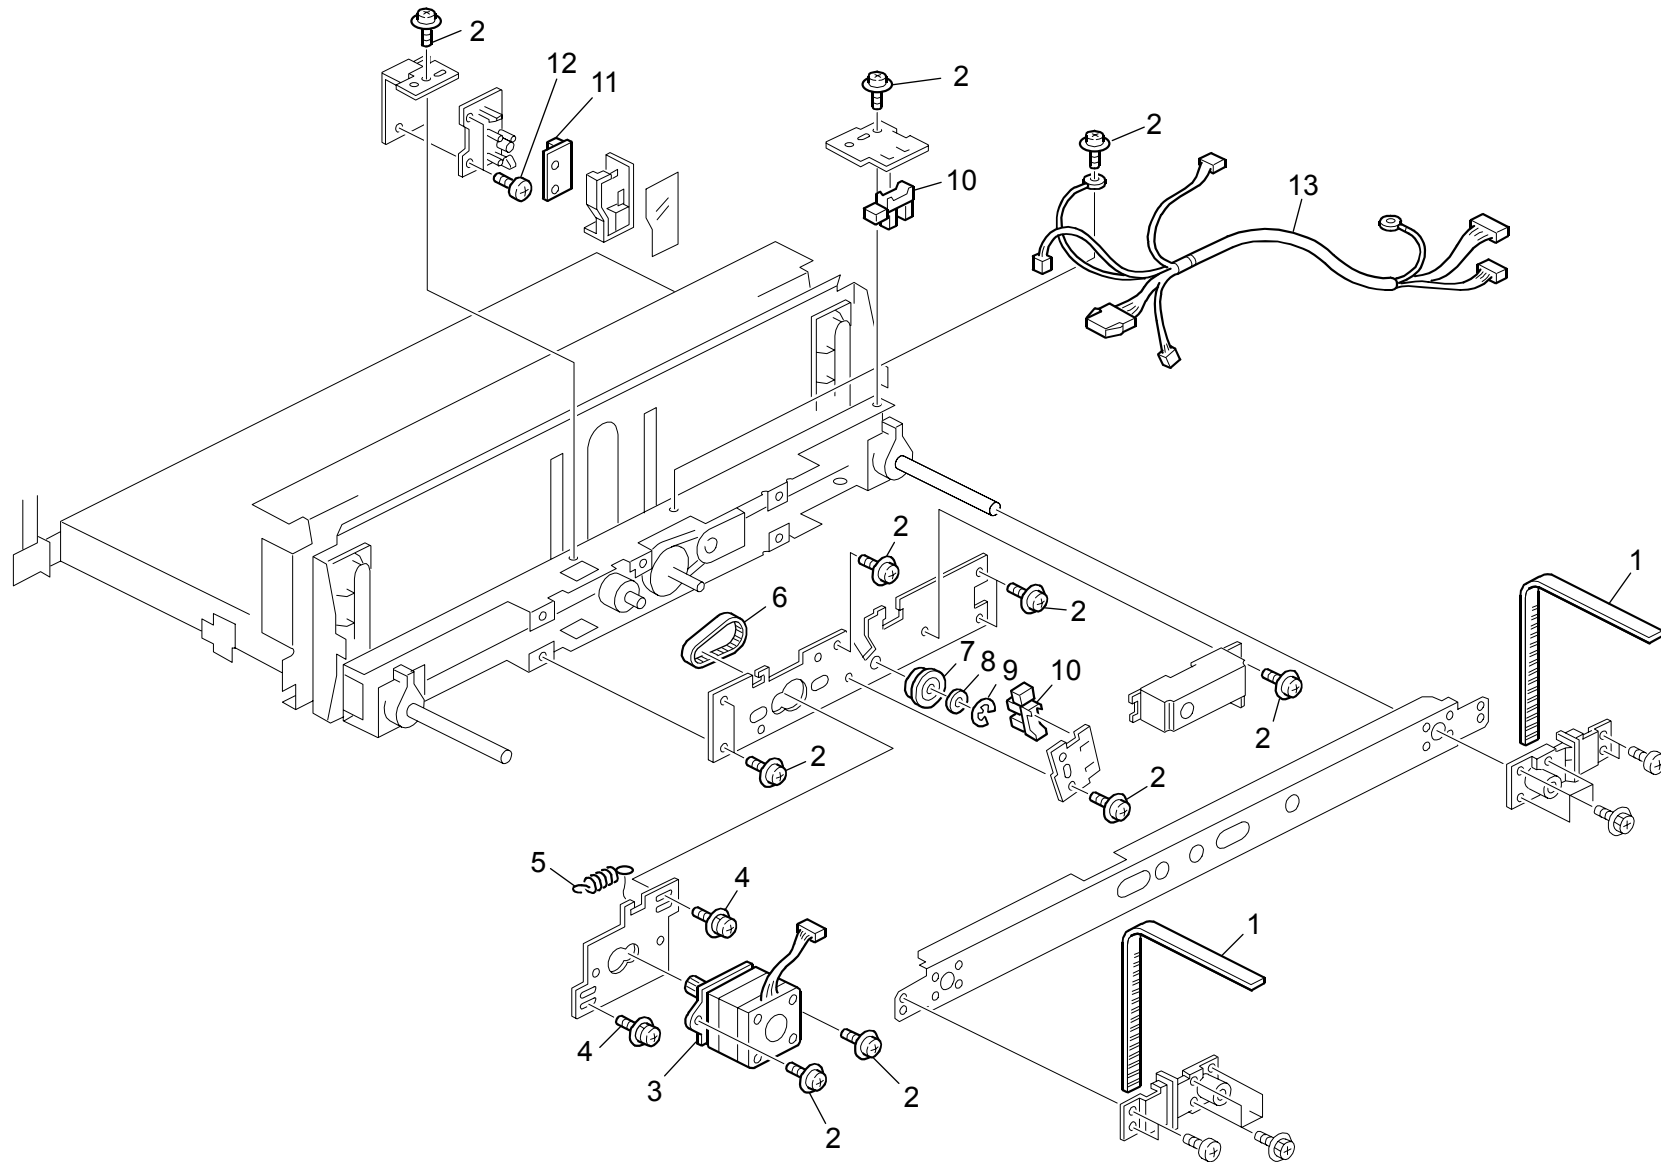


78.Stack Rotation Section 3 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1213	Synchronous Belt:NS-BLT00397B	2
2	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	12
3	D391 5286	DC Stepper Motor:PF4140K917	1
4	D391 1130	Washer:M4x8:040080FWSW	2
5	D391 1371	Tension Spring:PF4140A236A1	1
6	D391 1223	Synchronous Belt:NS-BLT00410B	1
7	D391 1263	Radial Ball Bearing:6x10:PF4096P347A	1
8	B660 4636	Spacer:PW060050	1
9	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	1
10	D391 5254	Photointerruptor:PF2286P475	2
11	D391 5281	Optics Sensor:Radiate:PF4140K905	1
12	B660 4511	Screw:030040FNBI	2
13	D391 1922	Harness:Turn:PF4140K963	1
			

Index No.	Part No.	Description	Q'ty Per Assembly

79.Stack Rotation Section 4 (D391)

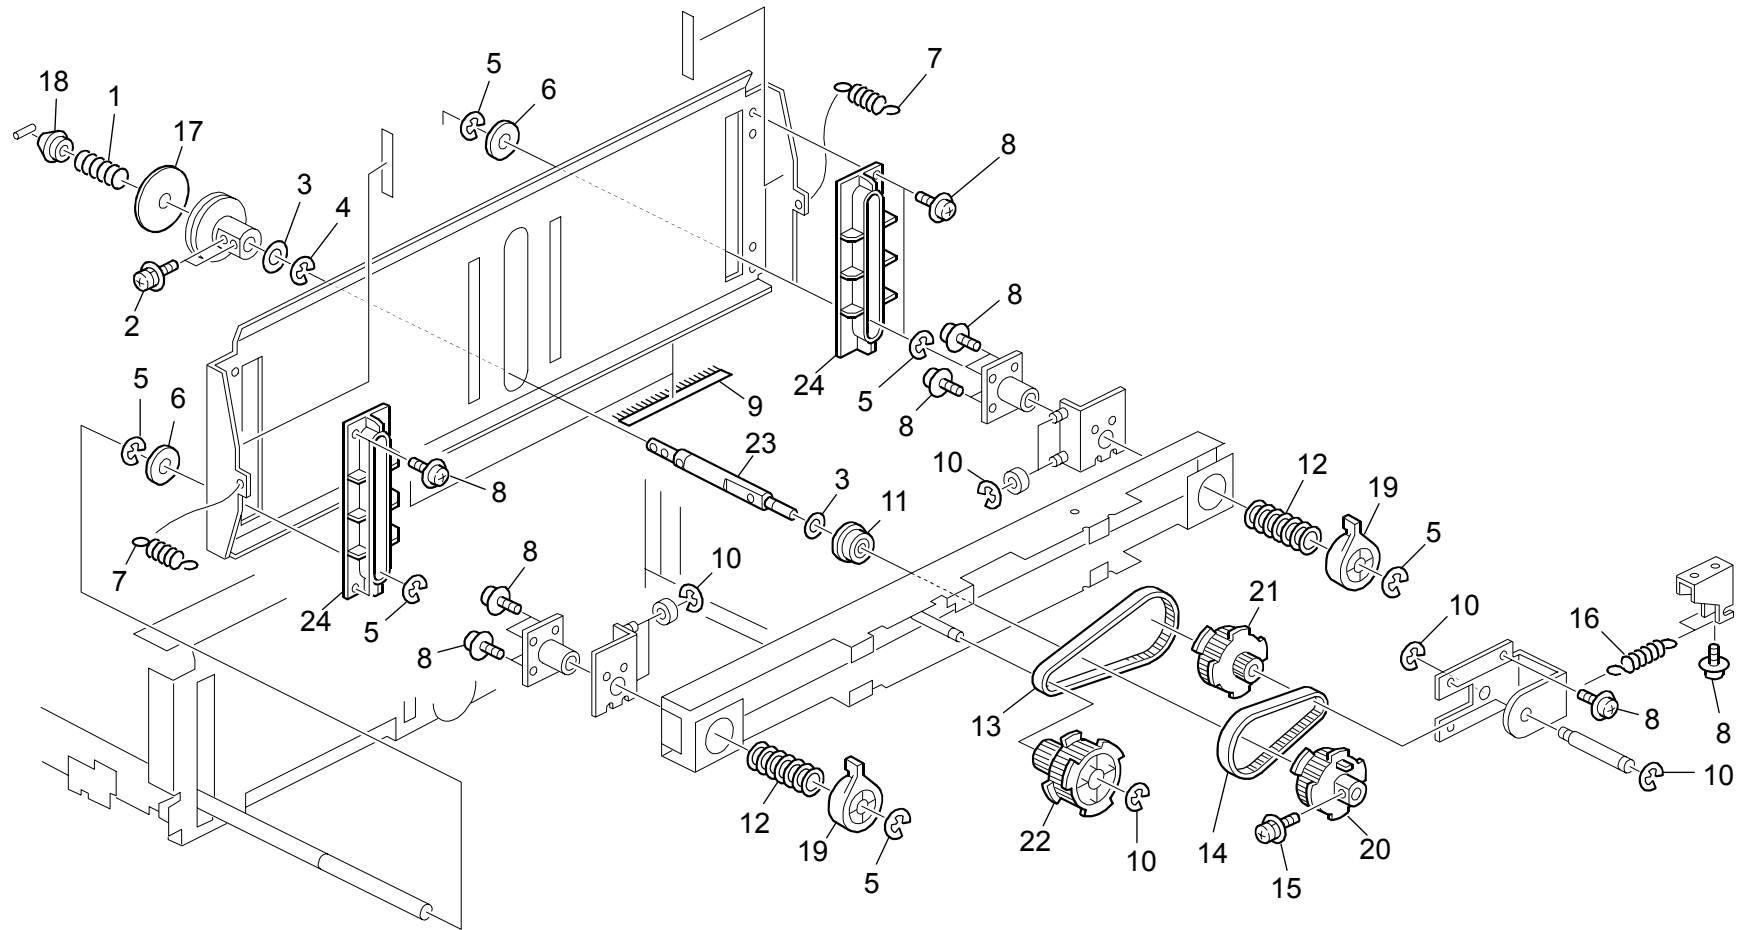


79.Stack Rotation Section 4 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1370	Compression Spring:PF4140Q234B1	1
2	B660 4521	Screw:030080FNBI	2
3	D391 1394	Washer:DIA8.2:PF4140Q472A	2
4	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	1
5	D391 1152	Retaining Rings-E:DIA8:ER080SU-D	6
6	D391 1166	Washer:HW100FWMN	2
7	D391 1369	Tension Spring:PF4140Q215A1	2
8	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	15
9	D391 1299	Discharge Brush:PF4140P238A	2
10	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	7
11	D391 1379	Radial Ball Bearing:PF4140Q415A	1
12	D391 1372	Coil Spring:Grip:PF4140Q254A1	2
13	D391 1224	Synchronous Belt:NS-BLT00411A	1
14	D391 1225	Synchronous Belt:NS-BLT00412B	1
15	D391 1120	Screw With Washer:M3x8:030080FWWS	1
16	D391 1371	Tension Spring:PF4140A236A1	2
17	D391 1481	Sheet:Turn:PF4140Q204	1
18	D391 1768	Guide:Pressure:PF4140Q233	1
19	D391 1769	Indicator:Coil Spring:Grip:PF4140Q255	2
20	D391 1770	Timing Pulley:T40:PF4140Q239	1
21	D391 1771	Timing Pulley:T15/T40:PF4140Q238	1
22	D391 1772	Timing Pulley:T16/T48:PF4140Q237	1
23	D391 1867	Shaft:Turn:PF4140Q205	1
24	D391 2182	Guide:Slide:PF4140Q276	2

Index No.	Part No.	Description	Q'ty Per Assembly

80.Stack Rotation Section 5 (D391)

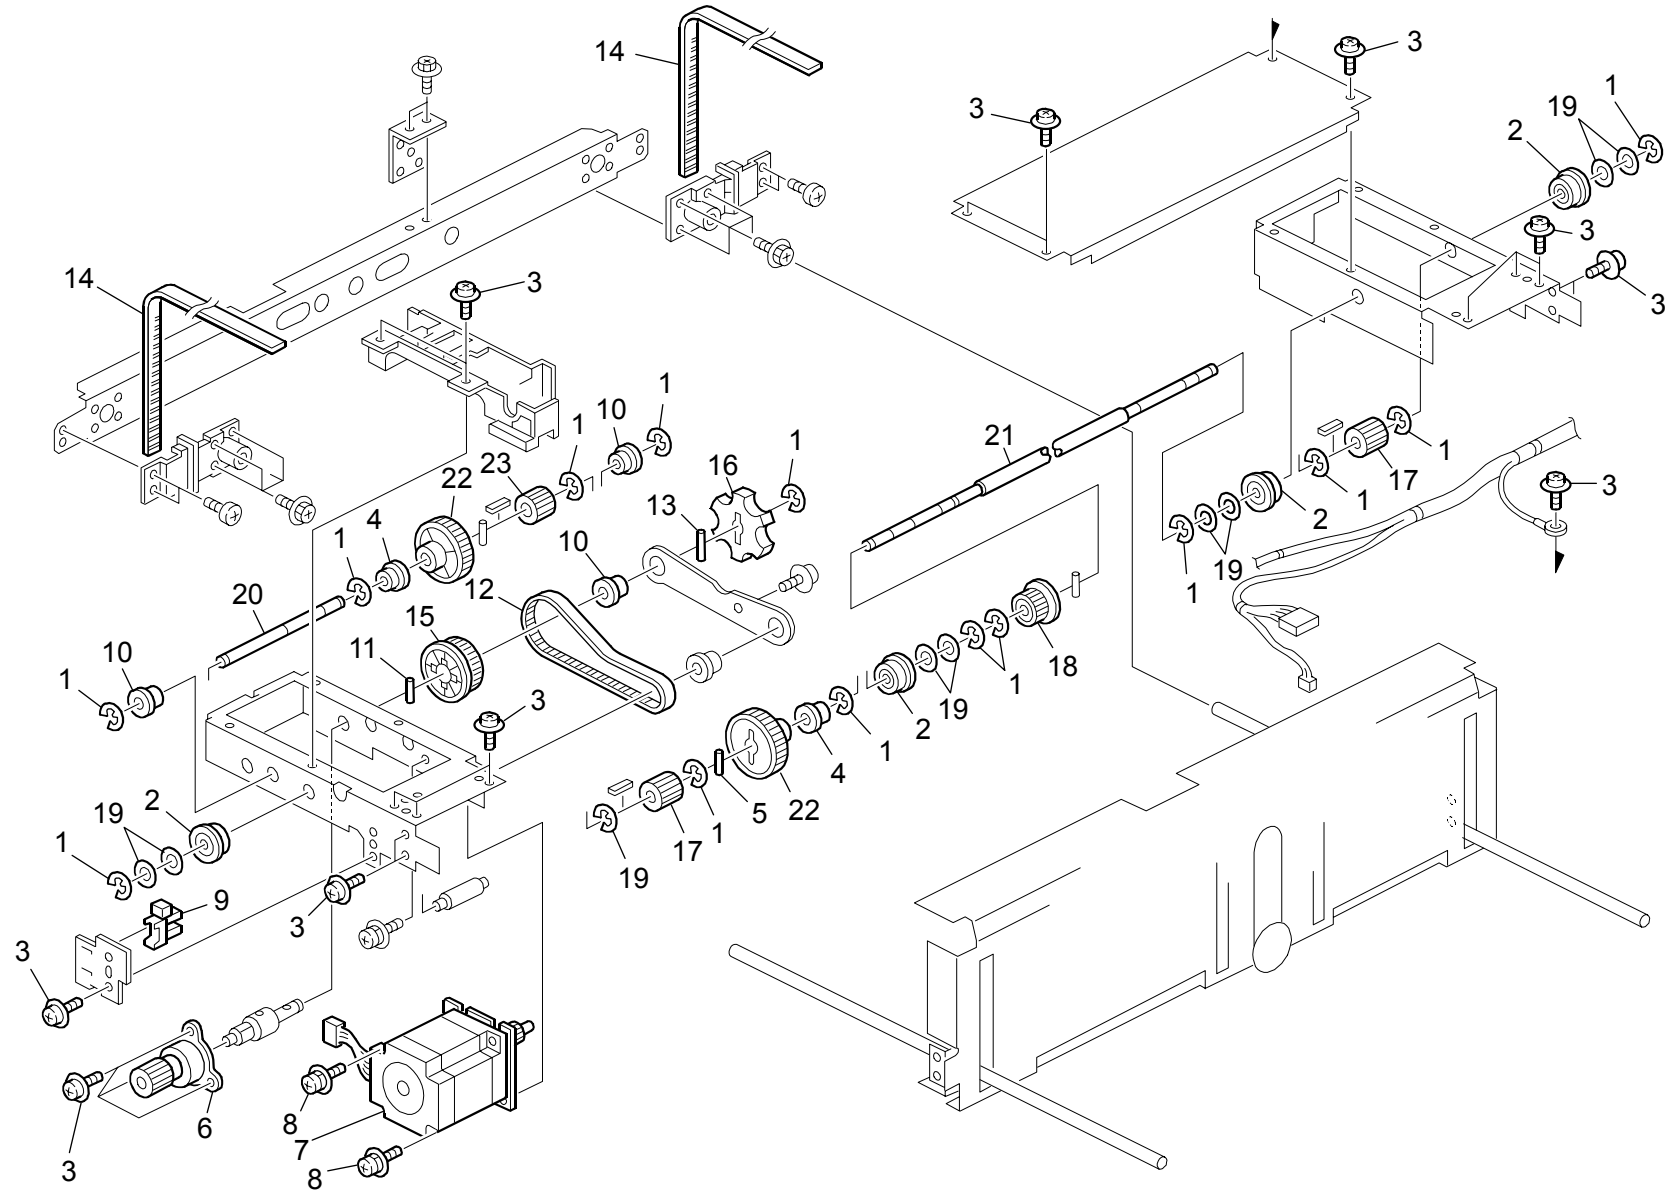


80.Stack Rotation Section 5 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	15
2	D391 1230	Radial Ball Bearing:DIA8DIA14: NS-BRG00050B	4
3	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	19
4	D391 1391	Bushing:DIA8:PF4140Q455A	2
5	D391 1161	Parallel Pin:3x16:HP030160SCH	1
6	D391 1270	Diode:Torque:PF4140K458A1:Ass'y	1
7	D391 5285	DC Stepper Motor:PF4140K916	1
8	D391 1130	Washer:M4x8:040080FWSW	2
9	D391 5254	Photointerruptor:PF2286P475	1
10	D391 1108	Bushing:606262	3
11	D391 1162	Parallel Pin:3x20:HP030200SCH	1
12	D391 1210	Synchronous Belt:NS-BLT00390B	1
13	D391 1157	Parallel Pin:2x20:HP020200SCH	1
14	D391 1214	Synchronous Belt:NS-BLT00398B	2
15	D391 1773	Timing Pulley:T60:PF4140Q408	1
16	D391 1774	Handle:Grip:PF4140Q220	1
17	D391 1775	Gear:Z16:PF4140Q594	2
18	D391 1776	Timing Pulley:T36:PF4140Q401	1
19	D391 1777	Slider:DIA8:PW080050	7
20	D391 1868	Shaft:Gear:Drive:Grip:PF4140Q219	1
21	D391 1869	Shaft:Drive:Grip:PF4140Q216	1
22	D391 1753	Gear:Z48:PF4140P971	2
23	D391 1775	Gear:Z16:PF4140Q594	1



Index No.	Part No.	Description	Q'ty Per Assembly

81.Stack Rotation Section 6 (D391)

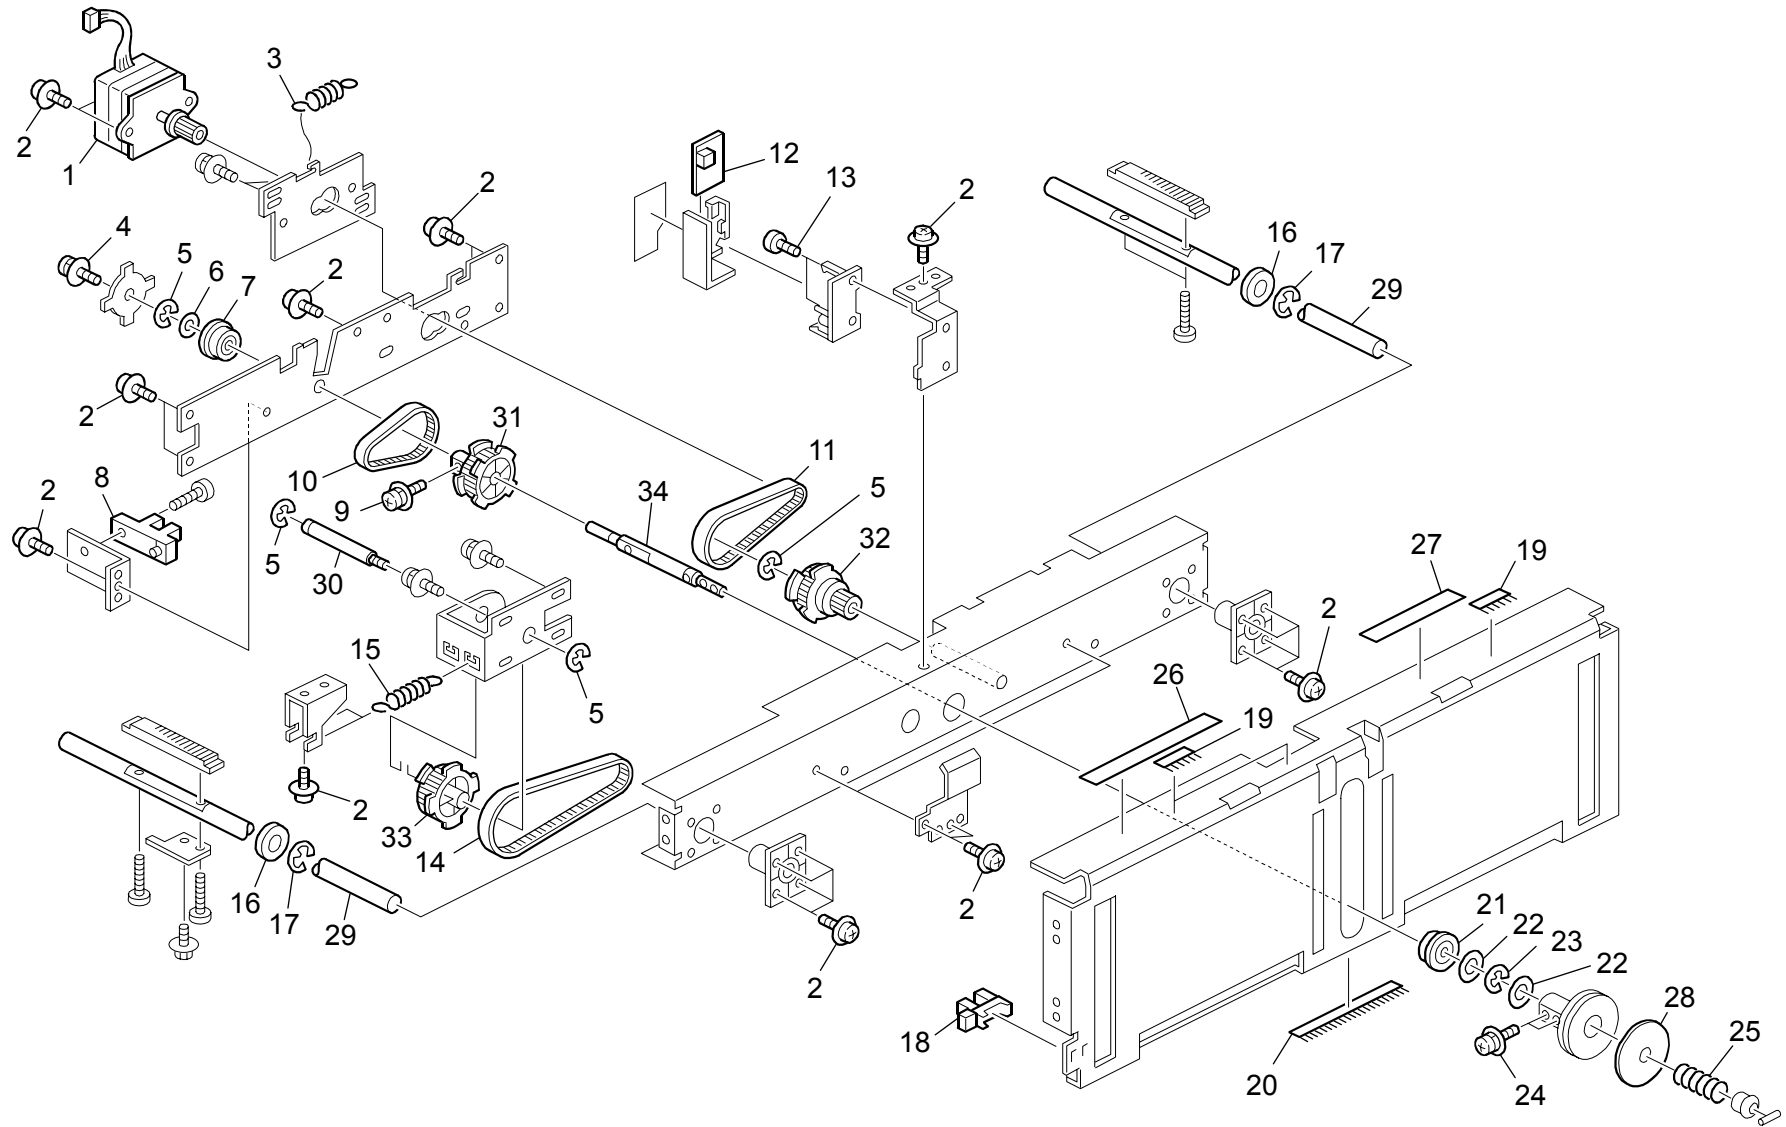


81.Stack Rotation Section 6 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5286	DC Stepper Motor:PF4140K917	1
2	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	20
3	D391 1371	Tension Spring:PF4140A236A1	1
4	D391 1116	Screw With Washer:M3x6:030060FWWS	1
5	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	4
6	B660 4636	Spacer:PW060050	1
7	D391 1263	Radial Ball Bearing:6x10:PF4096P347A	1
8	D391 5252	Photointerruptor:E314000804	1
9	D391 1120	Screw With Washer:M3x8:030080FWWS	1
10	D391 1225	Synchronous Belt:NS-BLT00412B	1
11	D391 1223	Synchronous Belt:NS-BLT00410B	1
12	D391 5282	Optics Sensor:Photo:PF4140K906	1
13	B660 4511	Screw:030040FNBI	2
14	D391 1224	Synchronous Belt:NS-BLT00411A	1
15	D391 1371	Tension Spring:PF4140A236A1	2
16	D391 1166	Washer:HW100FWMN	2
17	D391 1152	Retaining Rings-E:DIA8:ER080SU-D	2
18	D391 5254	Photointerruptor:PF2286P475	1
19	D391 1385	Discharge Brush:Guide:Upper: PF4140Q432A	3
20	D391 1299	Discharge Brush:PF4140P238A	1
21	D391 1379	Radial Ball Bearing:PF4140Q415A	1
22	D391 1394	Washer:DIA8.2:PF4140Q472A	2
23	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	1
24	B660 4521	Screw:030080FNBI	2
25	D391 1370	Compression Spring:PF4140Q234B1	1
26	D391 6560	Decal:Caution:Press:1	1
27	D391 6561	Decal:Caution:Press:2	1
28	D391 1481	Sheet:Turn:PF4140Q204	1
29	D391 1870	Shaft:Grip:PF4140Q251	2
30	D391 1871	Shaft:Tension:Synchronous Belt: PF4140Q241	1
31	D391 1770	Timing Pulley:T40:PF4140Q239	1
32	D391 1772	Timing Pulley:T16/T48:PF4140Q237	1
33	D391 1771	Timing Pulley:T15/T40:PF4140Q238	1

Index No.	Part No.	Description	Q'ty Per Assembly
34	D391 1867	Shaft:Turn:PF4140Q205	1

82.Trimming Section 1 (D391)

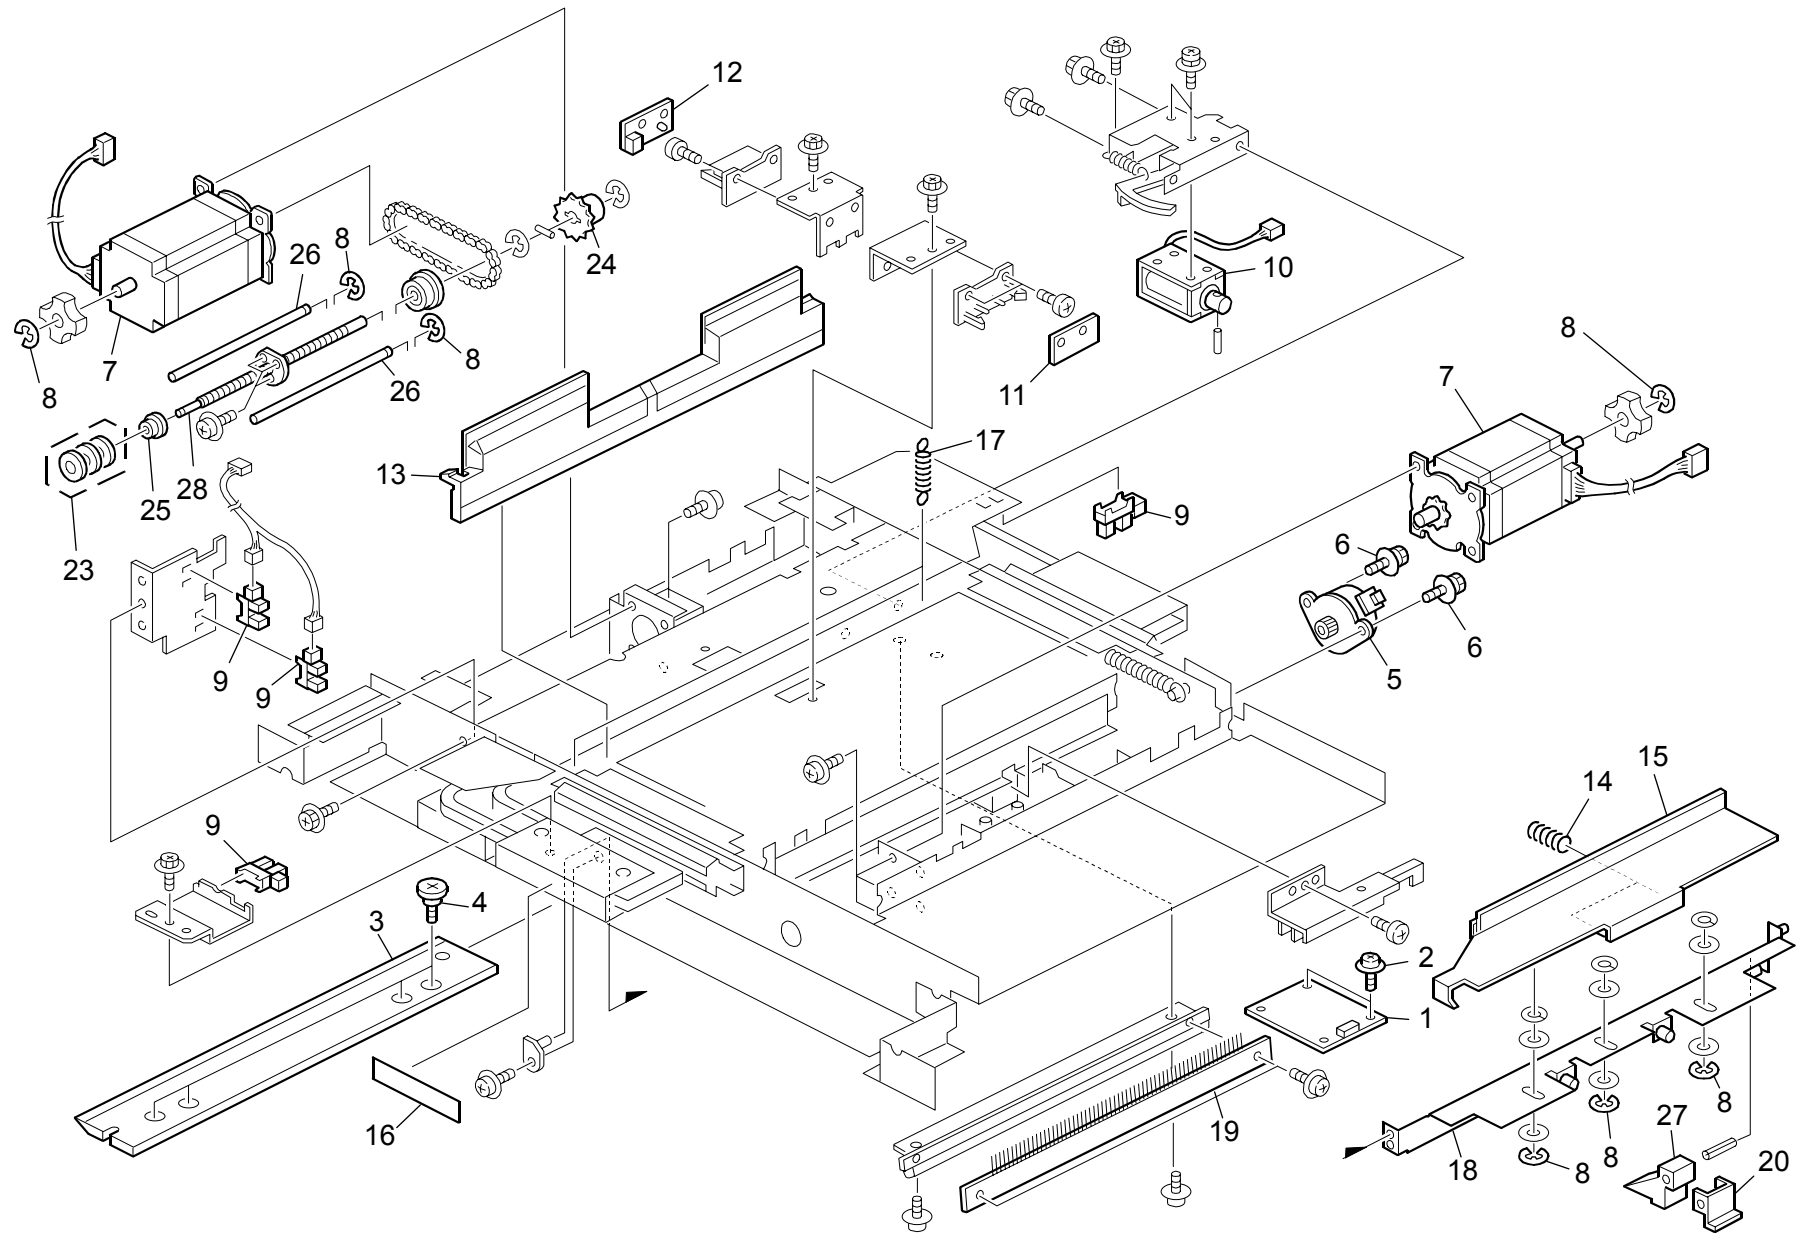


82.Trimming Section 1 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5280	PCB:Sensor:PF4140K903	1
2	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	2
3	D391 1000	Cutter Unit:PF4140K399A	1
4	D391 1363	Flat Screw:Fix:Cutter:PF4140Q113B1	4
5	D391 5296	DC Stepper Motor:PF4140R405	1
6	D391 1116	Screw With Washer:M3x6:030060FWWS	2
7	D391 5284	DC Stepper Motor:PF4140K915	2
8	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	7
9	D391 5254	Photointerruptor:PF2286P475	4
10	D391 5256	DC Solenoid:PF4109K542	1
11	D391 5281	Optics Sensor:Radiate:PF4140K905	1
12	D391 5282	Optics Sensor:Photo:PF4140K906	1
13	D391 1414	Receive Plate:Edge:PF4164K206A:Ass'y	1
14	D391 1413	Coil Spring:Paper Chip:PF4140Q871A1	2
15	D391 1271	Guide Plate:Slide:Paper Chip:PF4140K461C	1
16	D391 6562	Decal:Caution:Cutter	1
17	D391 1364	Coil Spring:Receive Plate:Cutter: PF4140Q121B1	2
18	D391 1648	Base:Slide:Paper Chip:PF4155L800	1
19	D391 1512	Sheet:Discharge:PF4140Q476	1
20	D391 1923	Arm:Stopper:PF4140Q580	1
21	D391 1519	Sprocket:PF4140L508:Ass'y	3
22	D391 1516	Guide Plate:Sprocket:PF4140Q148	1
23	D391 1384	Radial Ball Bearin: Thrust:pF4140Q430A	1
24	D391 1435	Sprocket:PF4140Q166	1
25	D391 1436	Spacer:PF4140Q182	1
26	D391 1437	Shaft:PF4140Q486	2
27	D391 1646	Stopper:PF4140Q579	1
28	D391 1395	Screw Shaft:PF4140Q483A	1

Index No.	Part No.	Description	Q'ty Per Assembly

83.Waste Paper Case Section 1 (D391)

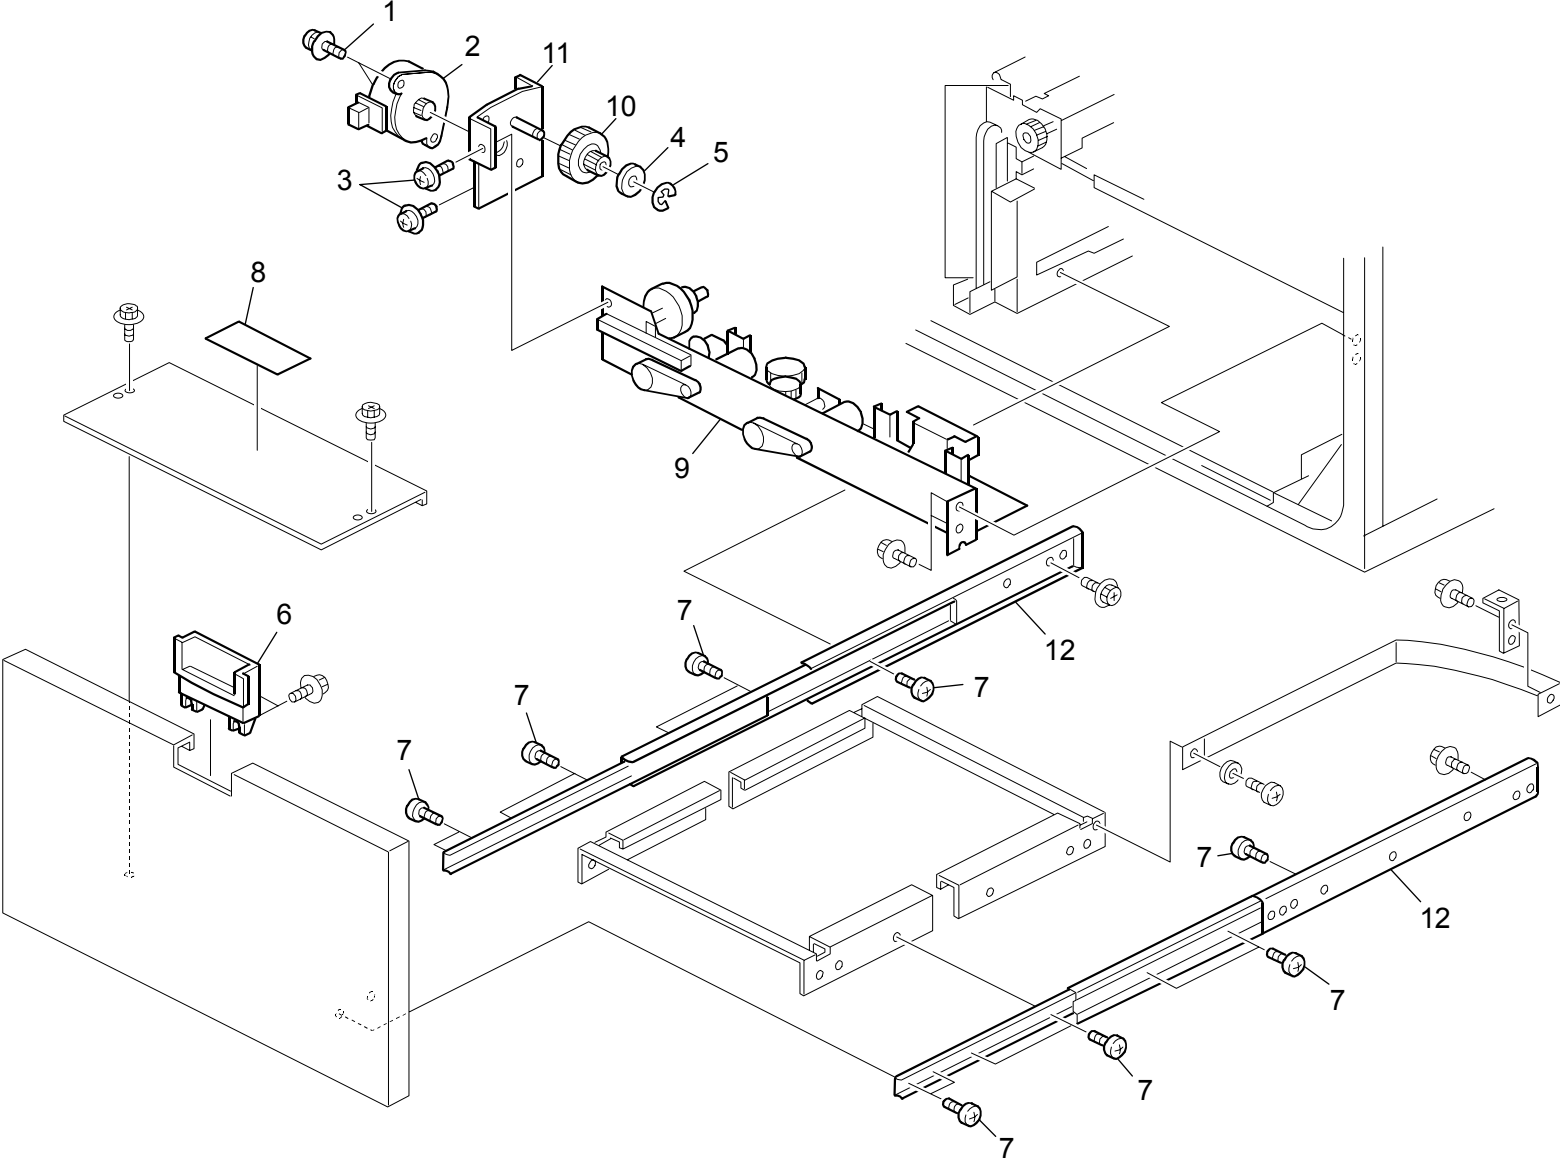


83.Waste Paper Case Section 1 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1116	Screw With Washer:M3x6:030060FWWS	2
2	D391 5296	DC Stepper Motor:PF4140R405	1
3	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	2
4	D391 1380	Flange:PF4140Q417A	1
5	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	1
6	D391 2015	Cover:Left Front:Upper:PF4140Q538C1	1
7	D391 1244	Screw:M4x8:NS-SCR00050B	14
8	D391 6530	Decal:Set:Paper Jam	1
9	D391 1460	Drive Sub-unt:Paper Chip:PF4140L392	1
10	D391 1778	Gear:Z60/T16:PF4140Q126	1
11	D391 2183	Stack:Drive:PF4140K326:Ass'y	1
12	D391 2184	Slide Rail:5:PF4140Q363	2

Index No.	Part No.	Description	Q'ty Per Assembly

84.Waste Paper Case Section 2 (D391)

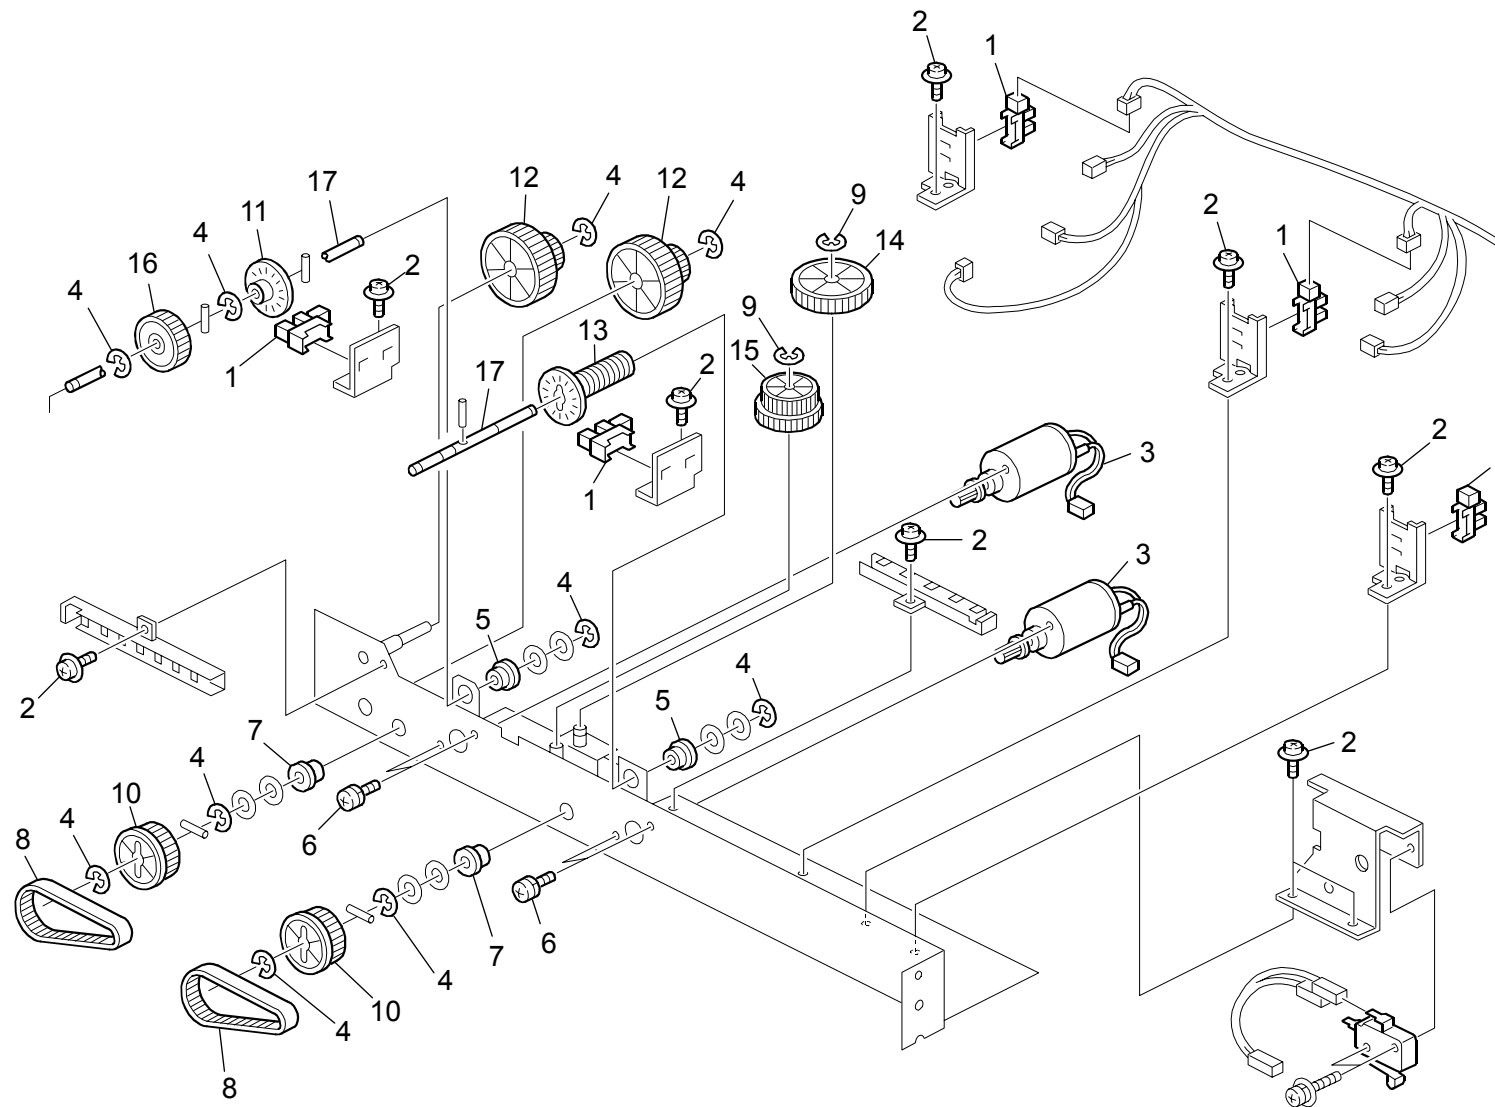


84.Waste Paper Case Section 2 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5254	Photointerruptor:PF2286P475	5
2	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	9
3	D391 5287	DC Motor:PF4140K918	2
4	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	10
5	D391 1238	Bushing:DIA6:NS-MTL00007B	2
6	D391 1114	Washer:M3x6:030060FWSW	4
7	D391 1238	Bushing:DIA6:NS-MTL00007B	2
8	D391 1215	Synchronous Belt:NS-BLT00400B	2
9	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	2
10	D391 1645	Timing Pulley:T40:PF4140Q402	2
11	D391 1779	Encoder:PF4140Q068	1
12	D391 1780	Gear:Z20/Z50:PF4140Q087	2
13	D391 1781	Worm Gear:PF4140Q019	1
14	D391 1782	Gear:Z44:PF4140Q812	1
15	D391 1783	Gear:Z32:PF4140Q020	1
16	D391 1784	Gear:Z28:PF4140Q411	1
17	D391 1873	Shaft:Worm Gear:PF4140Q029	2



Index No.	Part No.	Description	Q'ty Per Assembly

85.Waste Paper Case Section 3 (D391)

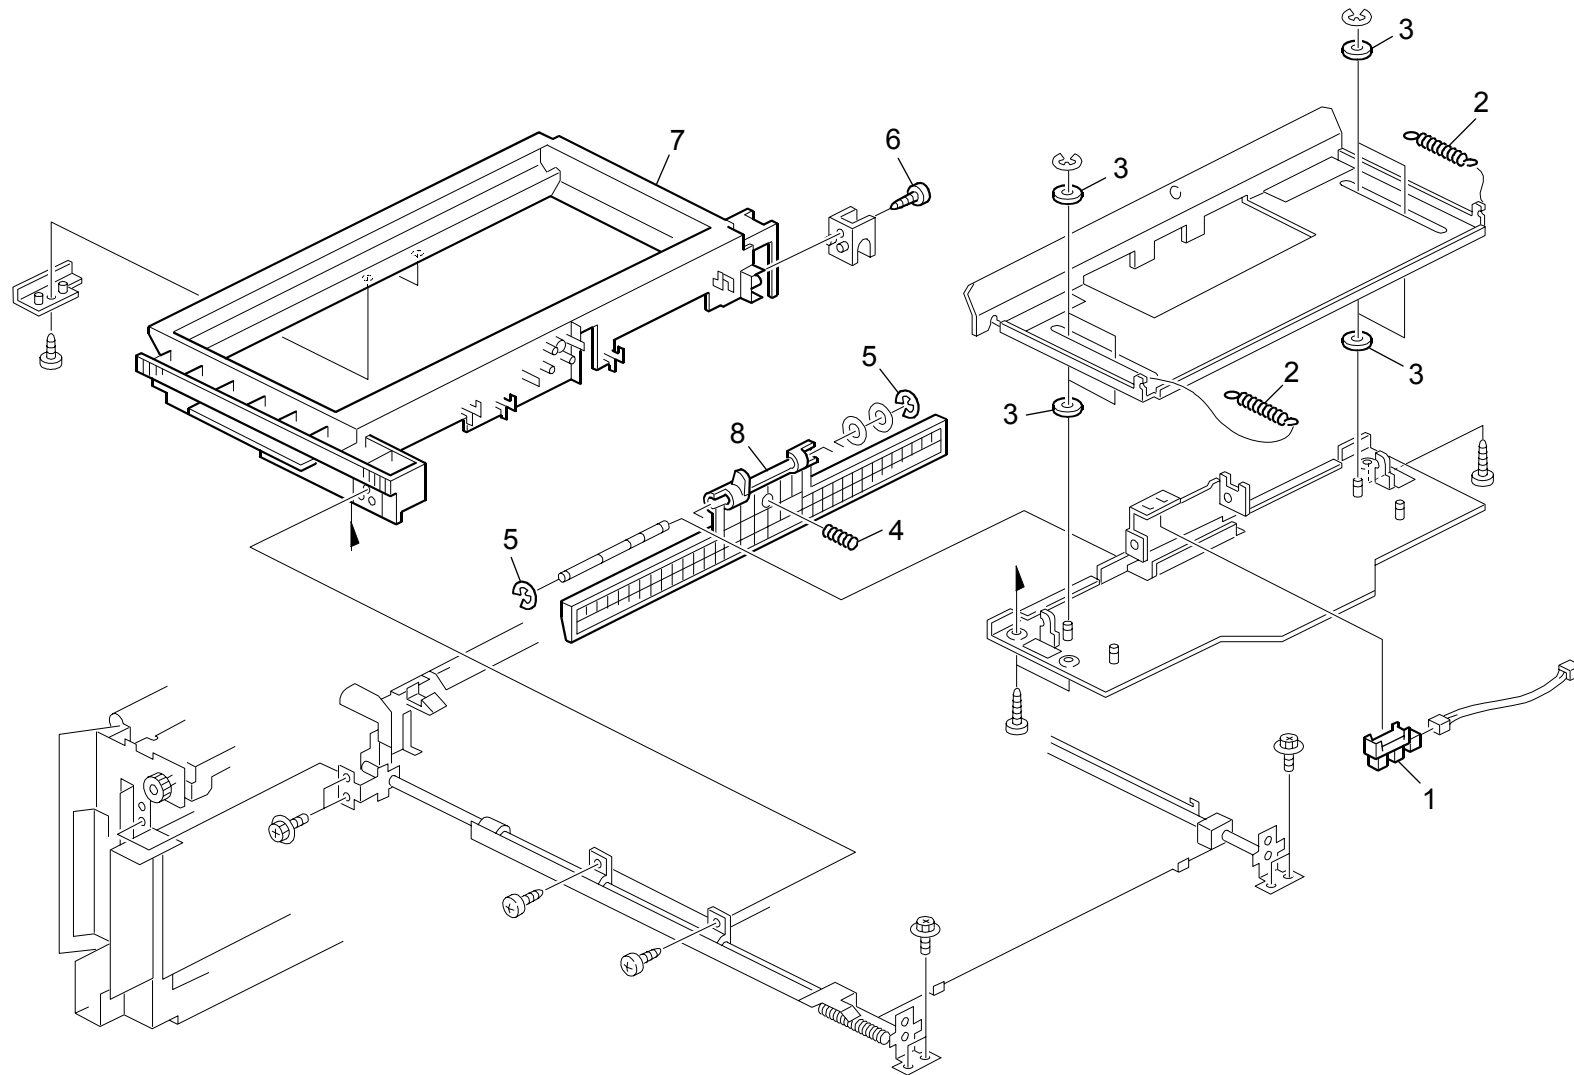


85.Waste Paper Case Section 3 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5254	Photointerruptor:PF2286P475	1
2	D391 1410	Coil Spring:Stopper:Paper Chip: PF4140Q859A	2
3	D391 1380	Flange:PF4140Q417A	6
4	D391 1357	Compression Spring:PF4140Q022A1	1
5	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	2
6	B660 4835	Screw:NS-SCR00045A	1
7	D391 2352	Tank:Discharge:Seal:pF4155K817	1
8	D391 1785	Vibrating Plate:PF4140Q012	1
		 	
			
			

Index No.	Part No.	Description	Q'ty Per Assembly

86.Waste Paper Case Section 4 (D391)

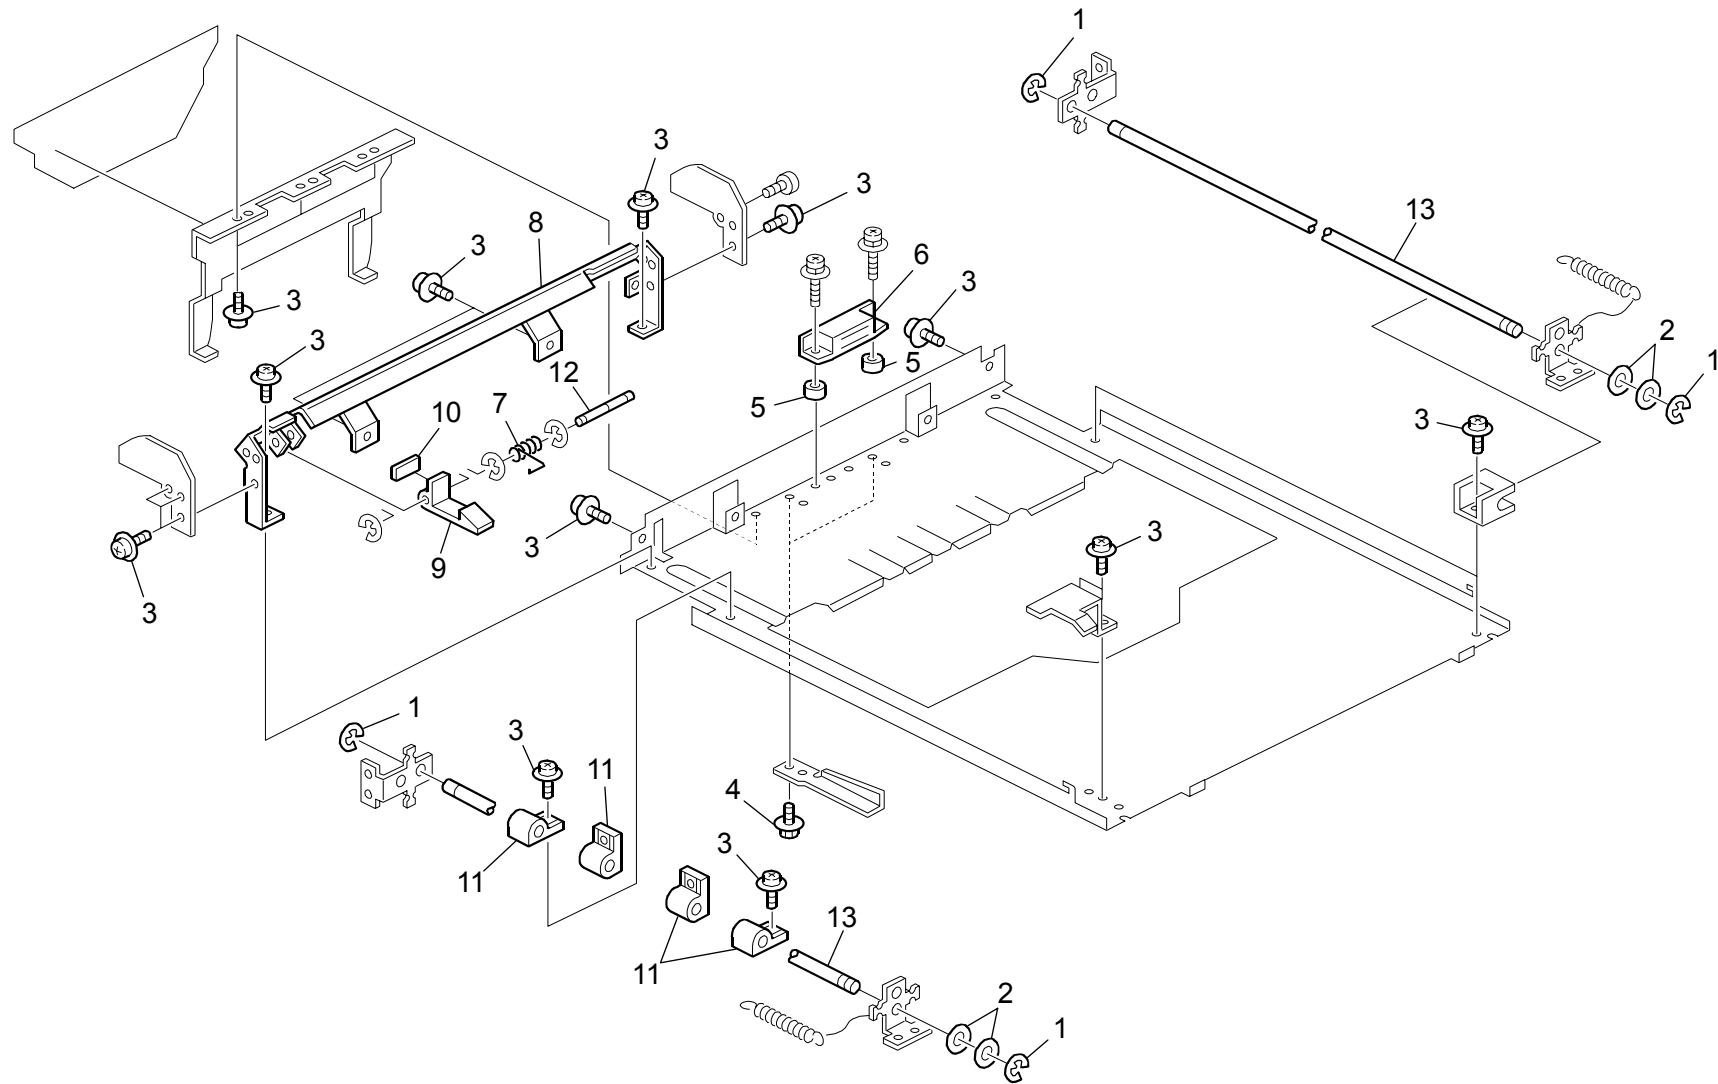


86.Waste Paper Case Section 4 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	4
2	D391 1400	Washer:DIA10:PF4140Q593A	4
3	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	18
4	D391 1244	Screw:M4x8:NS-SCR00050B	2
5	D391 1411	Washer:3x9x5:PF4140Q860A	2
6	D391 1412	Magnetic:Paper Chip:PF4140Q862A	1
7	D391 1406	Coil Spring:Hook:PF4140Q825A	1
8	D391 1501	Bracket:Shutter:Exhaust:PF4155K333	1
9	D391 1502	Hook:Arm:PF4140Q815A	1
10	D391 1505	Cushion:PF4140Q816	1
11	D391 1786	Slider:Tank:PF4140Q006	4
12	D391 1874	Shaft:Contact Point:Hook:PF4140Q820	1
13	D391 1875	Shaft:Receiving Sub-unit:PF4140Q017	2

Index No.	Part No.	Description	Q'ty Per Assembly

87.Book Stacking Section 1 (D391)

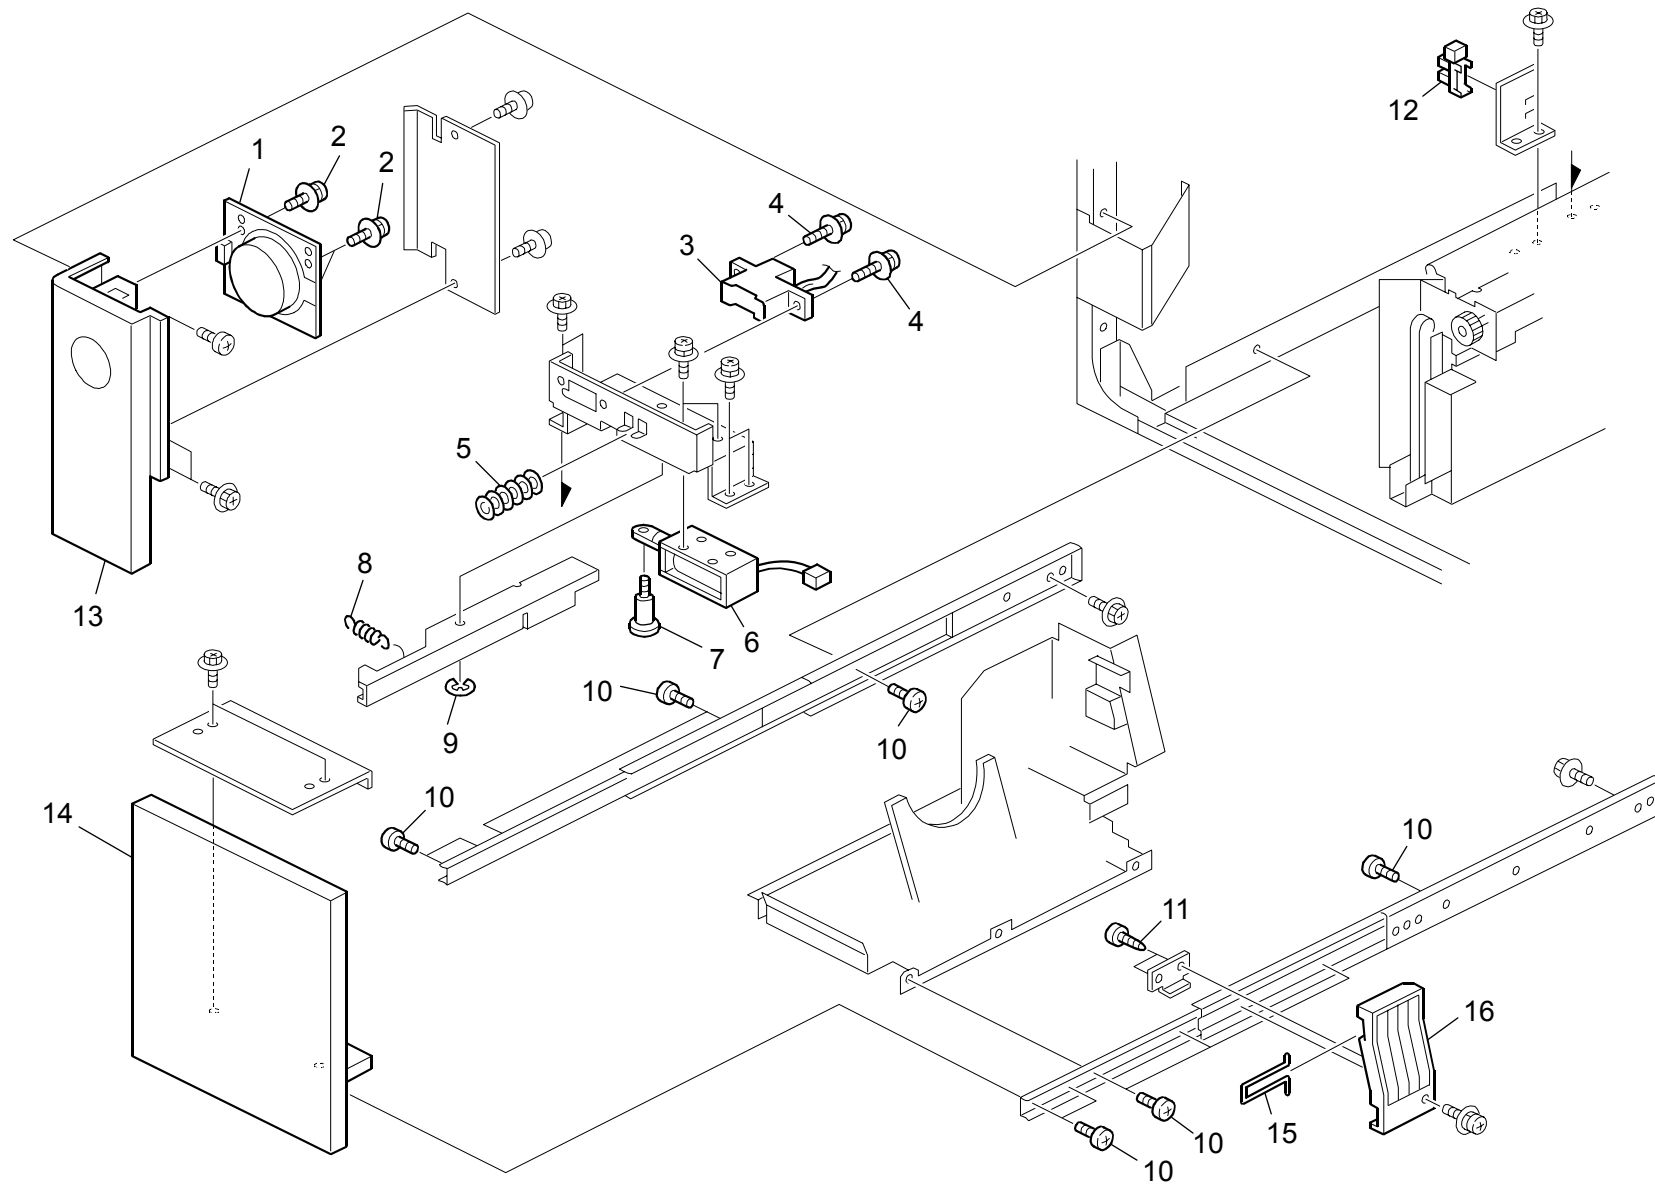


87.Book Stacking Section 1 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5283	Button:Release:PF4140K907	1
2	D391 1139	Screw:30140FWBI	3
3	D391 5288	Drawer:PF4140K956	1
4	D391 1405	Screw:M3:PF4140Q813A1	2
5	D391 1386	Compression Spring:PF4140Q436A	1
6	D391 5299	DC Solenoid:PF4140R411	1
7	D391 1265	Screw:PF4123Q908A	1
8	D391 1387	Tension Spring:PF4140Q437A	1
9	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	1
10	D391 1244	Screw:M4x8:NS-SCR00050B	11
11	D391 1245	Tapping Screw:M4x10:NS-SCR00061B	2
12	D391 5254	Photointerruptor:PF2286P475	1
13	D391 2054	Cover:F:Tray:Pull Out:PF4155Q504	1
14	D391 2053	Cover:Front:Tray:PF4155Q503	1
15	D391 2185	Plate:Wire:PF4140Q564	1
16	D391 2186	Guide:PF4140Q093	1

Index No.	Part No.	Description	Q'ty Per Assembly

88.Book Stacking Section 2 (D391)

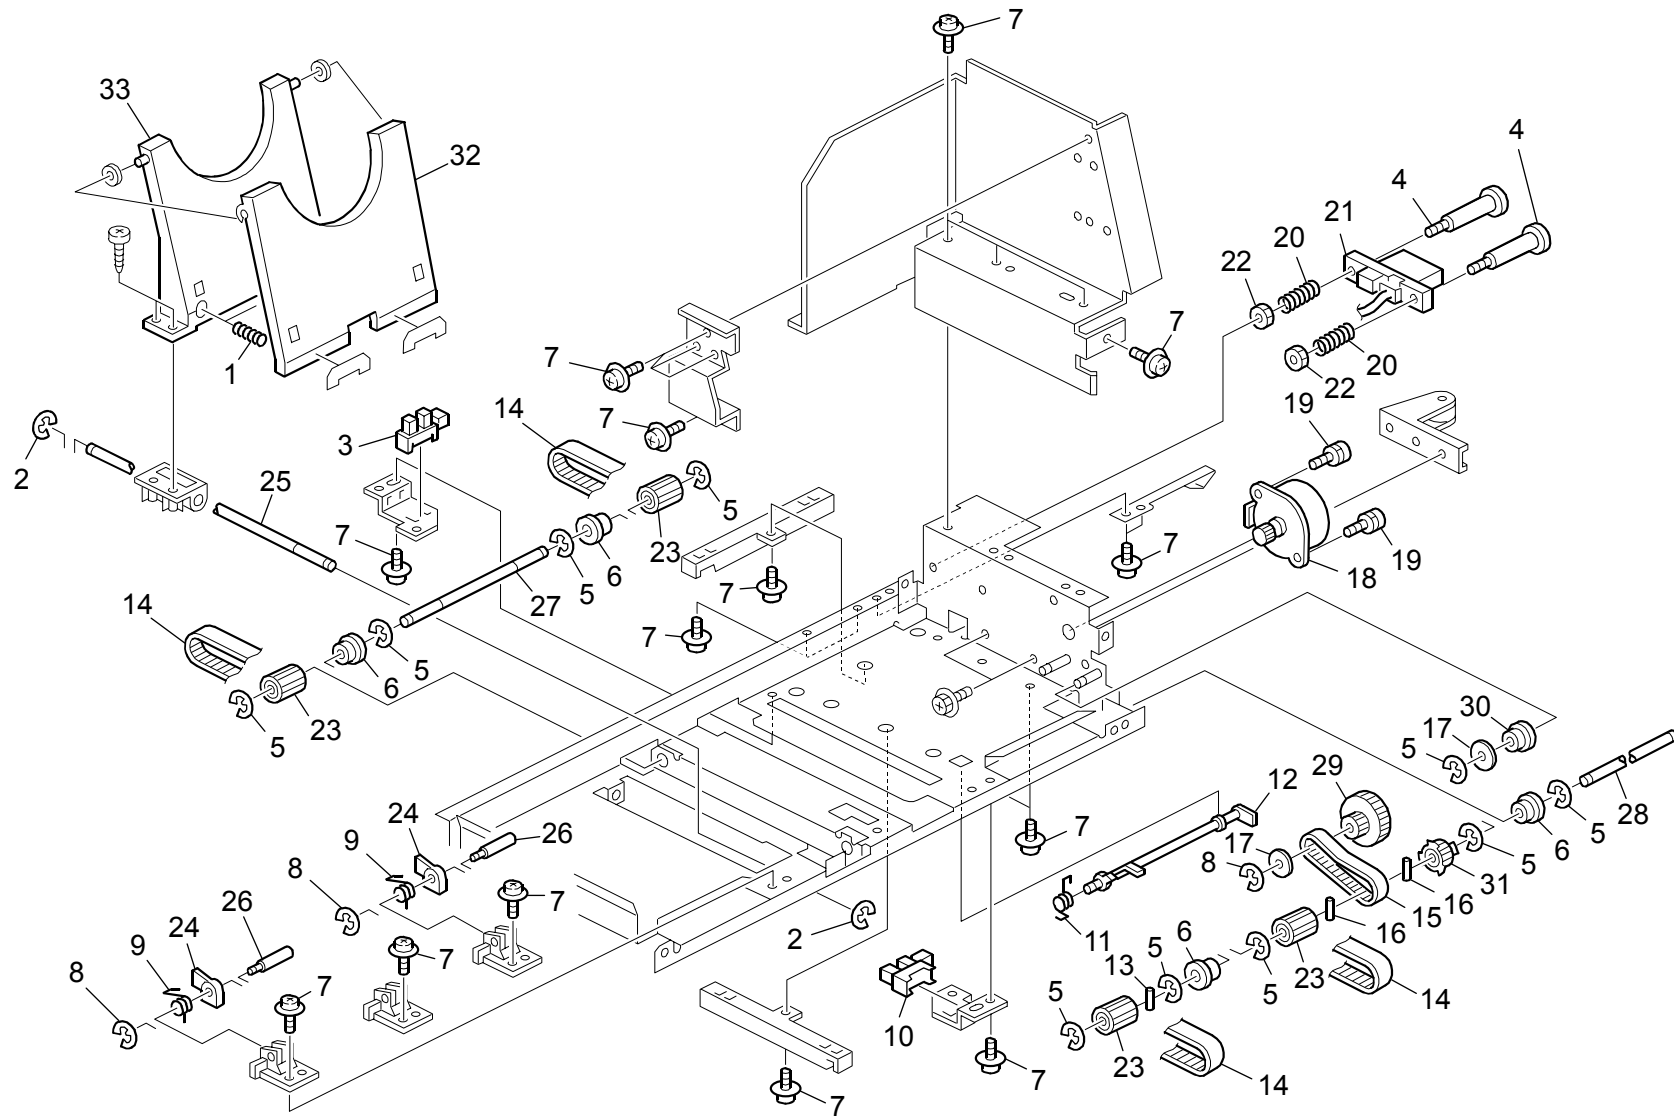


88.Book Stacking Section 2 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1359	Compression Spring:PF4140Q071A1	2
2	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	2
3	D391 5254	Photointerruptor:PF2286P475	1
4	D391 1405	Screw:M3:PF4140Q813A1	2
5	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	10
6	D391 1238	Bushing:DIA6:NS-MTL00007B	4
7	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	20
8	D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	3
9	D391 1362	Torsion Spring:PF4140Q096B1	2
10	D391 5254	Photointerruptor:PF2286P475	1
11	D391 1360	Torsion Spring:PF4140Q086A1	1
12	D391 1361	Paper Sensor:Surface:PR4140Q088B1	1
13	D391 1158	Parallel Pin:3x10:HP030100SCH	1
14	D391 1375	U Conveyer Belt:PF4140Q370B2	2
15	D391 1217	Synchronous Belt:NS-BLT00402B	1
16	D391 1154	Parallel Pin:2x10:HP020100SCH	2
17	D391 1380	Flange:PF4140Q417A	2
18	D391 5296	DC Stepper Motor:PF4140R405	1
19	D391 1114	Washer:M3x6:030060FWSW	2
20	D391 1404	Coil Spring:Drawer:PF4140Q811A	2
21	D391 5289	Drawer:Tray:PF4140K957	1
22	D391 1787	Nut:M6:Nt060fn2	2
23	D391 1788	Timing Pulley:PF4140Q048	4
24	D391 1789	Feeler:Stopper:PF4140Q097	2
25	D391 1876	Shaft:Tray:Slide:PF4140Q089	1
26	D391 1877	Shaft:Stopper:PF4140Q095	2
27	D391 1878	Shaft:Drive:Tray:PF4140Q046	1
28	D391 1879	Shaft:Drive:Tray:PF4140Q045	1
29	D391 1778	Gear:Z60/T16:PF4140Q126	1
30	D391 1675	Roller:Tension:PR5100P216	1
31	D391 1759	Timing Pulley:T20:PF4140Q418	1
32	D391 2187	Plate:Slide:Plate:PF4140Q069	1
33	D391 2188	Tray:Slide:PF4140Q050	1
			

Index No.	Part No.	Description	Q'ty Per Assembly

89.Book Stacking Section 3 (D391)

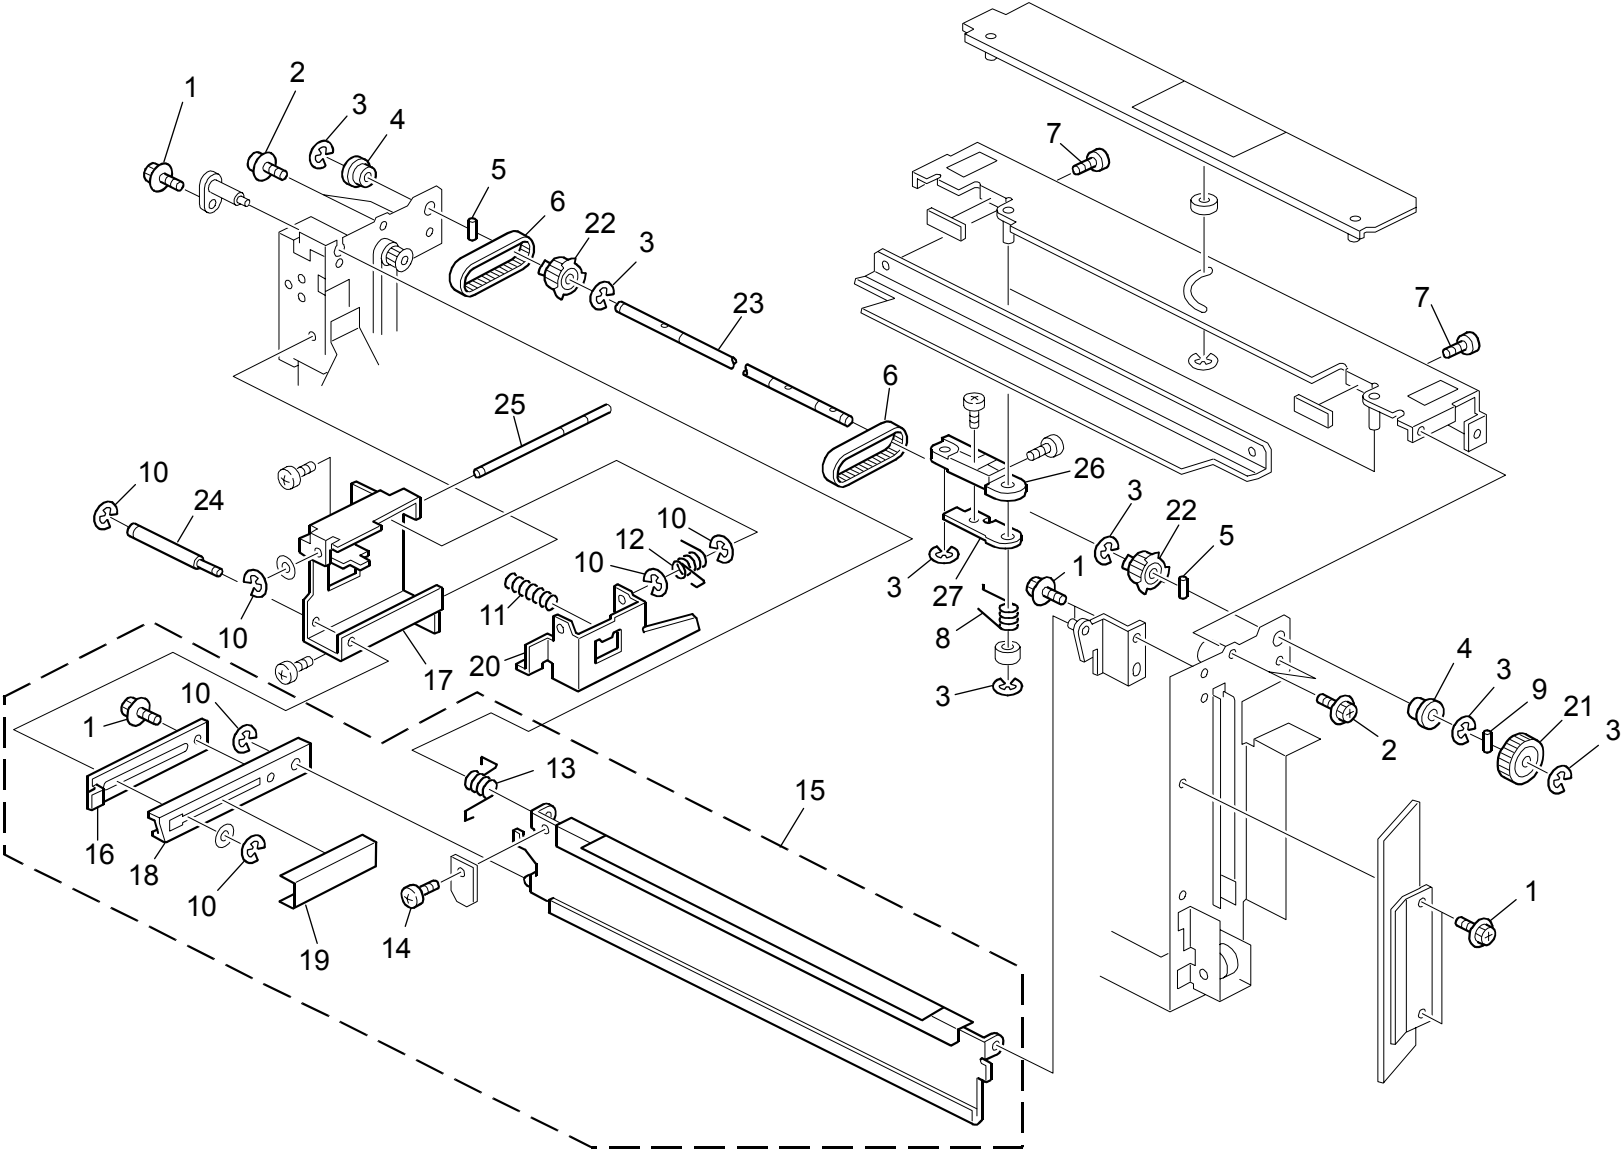


89.Book Stacking Section 3 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1244	Screw:M4x8:NS-SCR00050B	6
2	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	4
3	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	7
4	D391 1238	Bushing:DIA6:NS-MTL00007B	2
5	D391 1158	Parallel Pin:3x10:HP030100SCH	2
6	D391 1216	Synchronous Belt:NS-BLT00401B	2
7	B660 4835	Screw:NS-SCR00045A	2
8	D391 1407	Coil Spring:Return:Paper Chip: PF4140Q826A	1
9	D391 1155	Parallel Pin:2x14:HP020140SCH	1
10	D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	6
11	D391 1408	Coil Spring:Auxiliary:Stopper:PF4140Q844A	1
12	D391 1409	Coil Spring:Stopper:PF4140Q845A	1
13	D391 1403	Coil Spring:Guide:Tray:Upper Lower: PF4140Q805A1	1
14	D391 1241	Flat Screw:M3x5:NS-SCR00006B	1
15	D391 1528	Separation Plate:Exhaust:PF4164L852	1
16	D391 1931	Link:Stopper:Tray:PF4140Q839	1
17	D391 1932	Bracket:Stopper:Tray:PF4140Q847	1
18	D391 1933	Link:Stopper:Tray:Auxiliary:PF4140Q850	1
19	D391 1934	Sheet:Cover:PF4140Q874	1
20	D391 1935	Stopper:Separation Plate:PF4140Q838	1
21	D391 1790	Gear:Z24:PF4140Q409	1
22	D391 1791	Timing Pulley:T18:PF4140Q450	2
23	D391 1880	Shaft:Drive:Move:PF4140Q057	1
24	D391 1881	Shaft:Stopper:Tray:PF4140Q841	1
25	D391 1882	Shaft:Stopper:Tray:PF4140Q840	1
26	D391 2189	Arm:Turn:PF4140Q817	1
27	D391 2190	Arm:Turn:Plate:PF4140Q583	1

Index No.	Part No.	Description	Q'ty Per Assembly

90.Book Stacking Section 4 (D391)

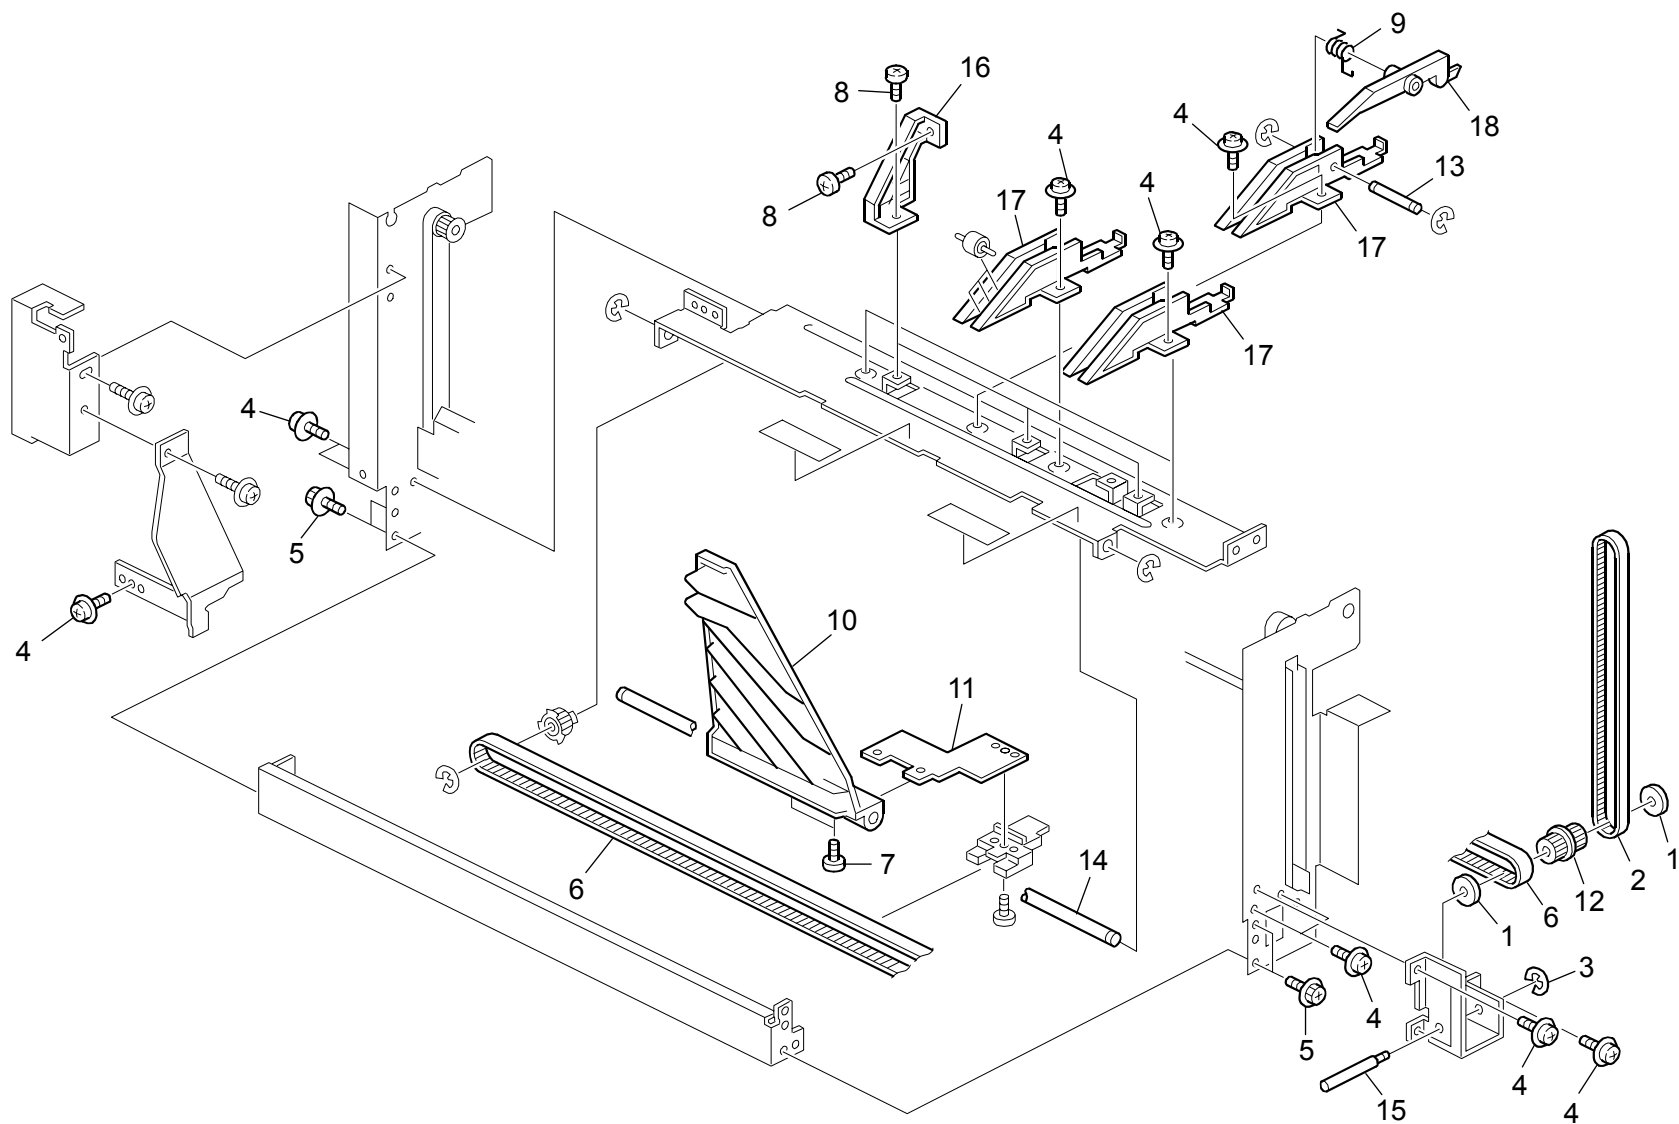


90.Book Stacking Section 4 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1380	Flange:PF4140Q417A	2
2	D391 1218	Synchronous Belt:NS-BLT00403B	1
3	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	1
4	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	11
5	D391 1244	Screw:M4x8:NS-SCR00050B	4
6	D391 1219	Synchronous Belt:NS-BLT00404B	2
7	D391 1241	Flat Screw:M3x5:NS-SCR00006B	2
8	B660 4835	Screw:NS-SCR00045A	2
9	D391 1358	Torsion Spring:PF4140Q064A	1
10	D391 1926	Tray:Exhaust:PF4140Q030	1
11	D391 1927	Bracket:Exhaust:PF4140Q042	1
12	D391 1792	Timing Pulley:T18:PF4140Q082	1
13	D391 1883	Shaft:Sensor:PF4140Q063	1
14	D391 1884	Shaft:Receiving Sub-unit:PF4140Q039	1
15	D391 1885	Shaft:Drive:PF4140Q033	1
16	D391 2191	Slope:2:PF4140Q098	1
17	D391 2192	Slope:1:PF4140Q035	3
18	D391 2193	Cushion:Sensor:PF4140Q061	1

Index No.	Part No.	Description	Q'ty Per Assembly

91.Book Stacking Section 5 (D391)

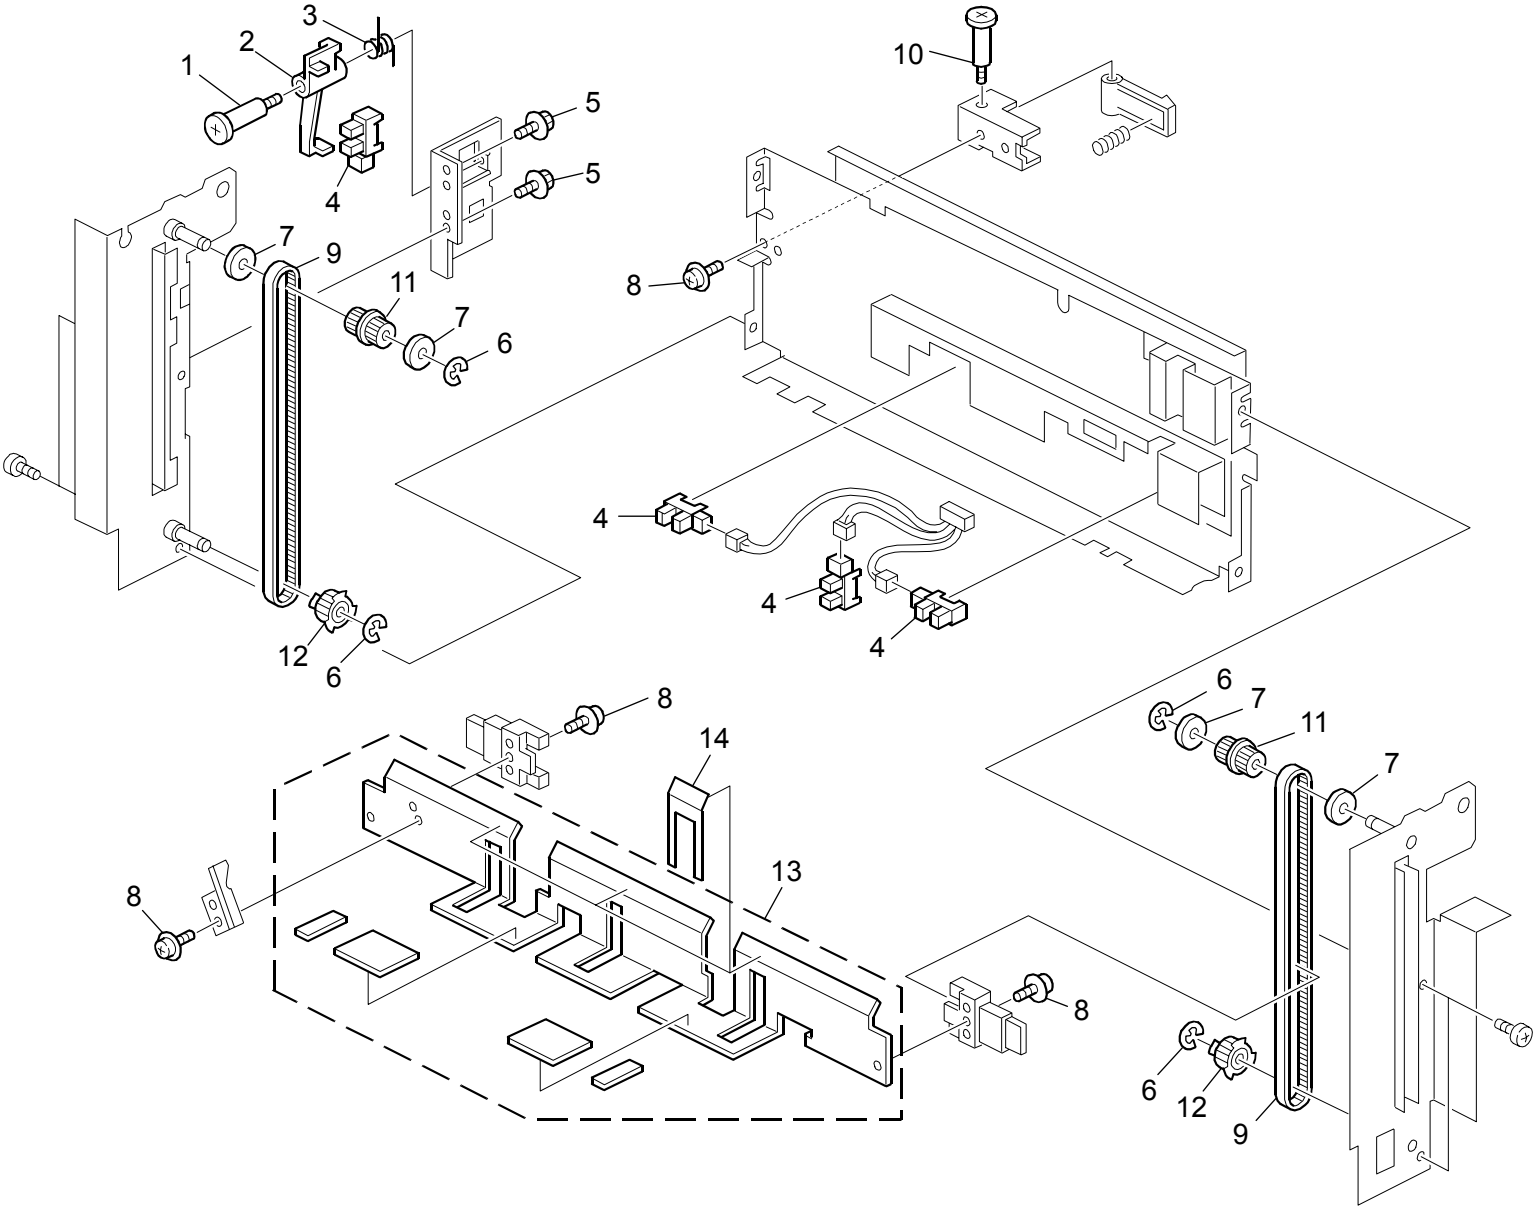


91.Book Stacking Section 5 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 1390	Screw:M3:PF4140Q449A	1
2	D391 1388	Paper Sensor:Surface:PF4140Q442A	1
3	D391 1389	Coil Spring:Sensor:PF4140Q447A	1
4	D391 5254	Photointerruptor:PF2286P475	4
5	D391 1244	Screw:M4x8:NS-SCR00050B	2
6	D391 1150	Retaining Rings-E:DIA5:ER050SU-D	4
7	D391 1380	Flange:PF4140Q417A	4
8	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	4
9	D391 1218	Synchronous Belt:NS-BLT00403B	2
10	D391 1264	Screw:PF4103P331B	1
11	D391 1792	Timing Pulley:T18:PF4140Q082	2
12	D391 1791	Timing Pulley:T18:PF4140Q450	2
13	D391 2194	Tray:PF4140K330:Ass'y	1
14	D391 2195	Tray:Sheet:PF4140Q935	1
			

Index No.	Part No.	Description	Q'ty Per Assembly

92.Electrical Section 1 (D391)

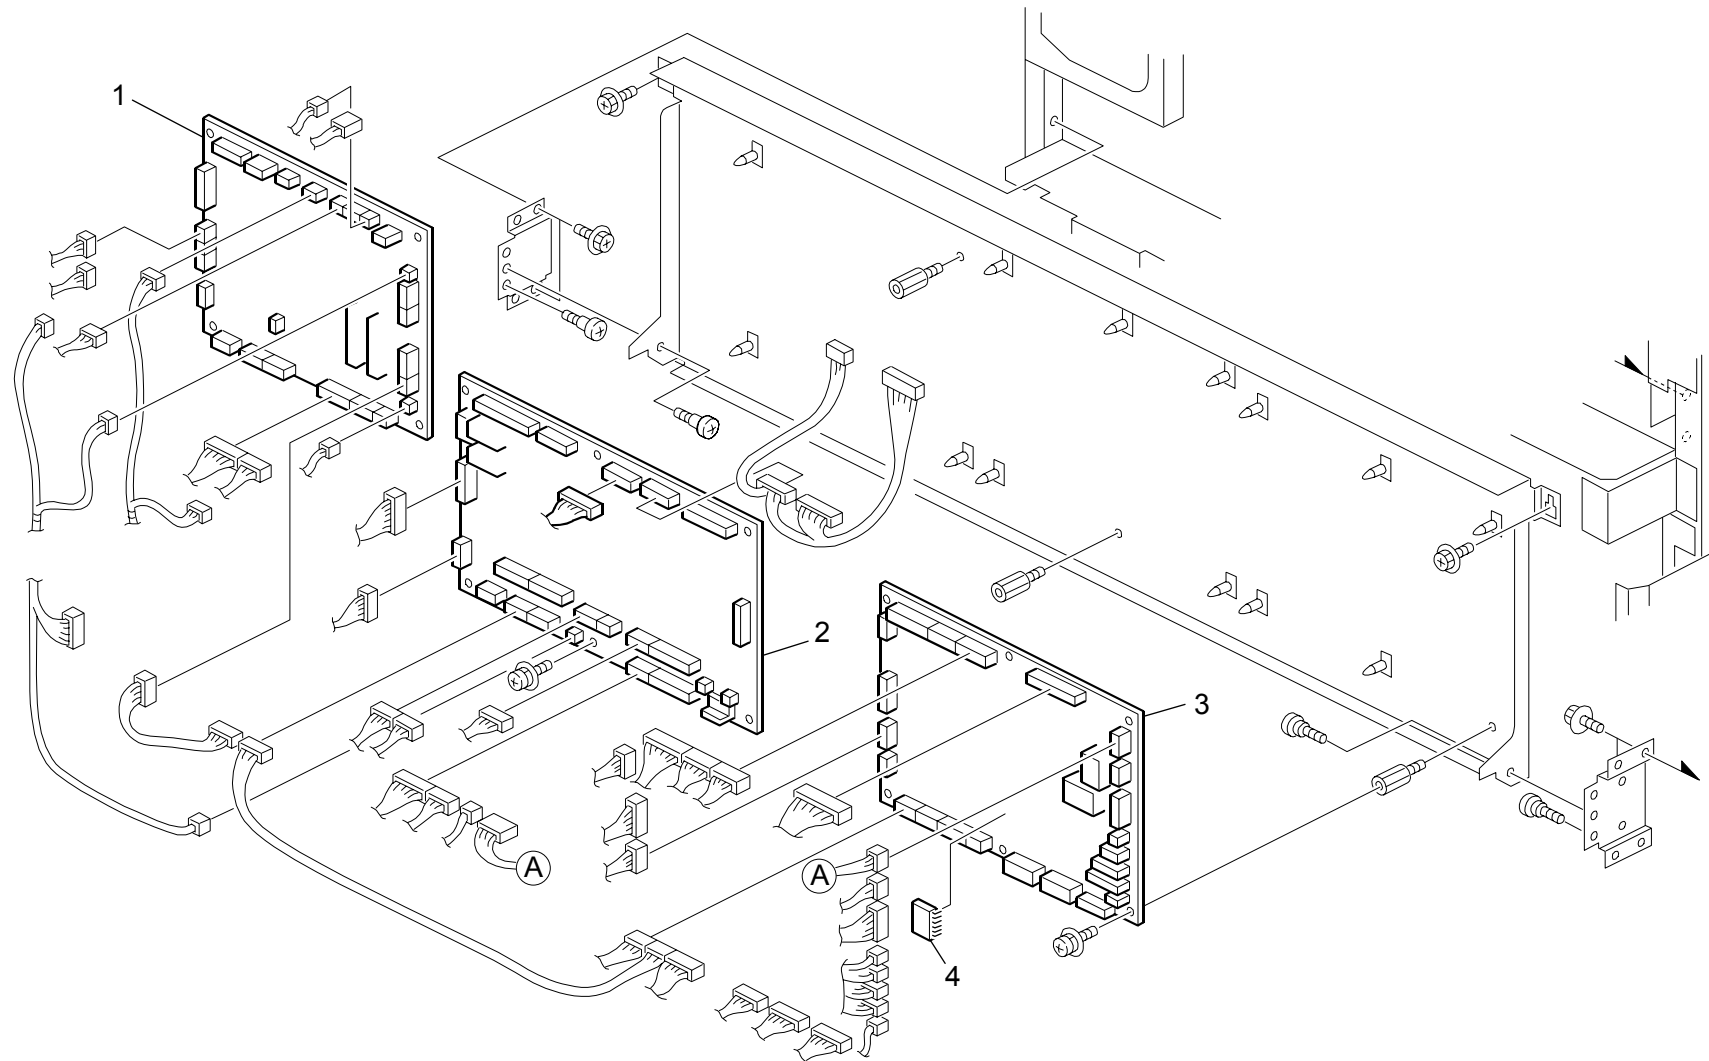


92.Electrical Section 1 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5530	PCB:Cutter:Ass'y	1
2	D391 5520	PCB:Sub:Ass'y	1
3	D391 5510	PCB:Main:Ass'y	1
4	D391 5515	Eerom:Main:E323000484	1



Index No.	Part No.	Description	Q'ty Per Assembly

93.Electrical Section 2 (D391)

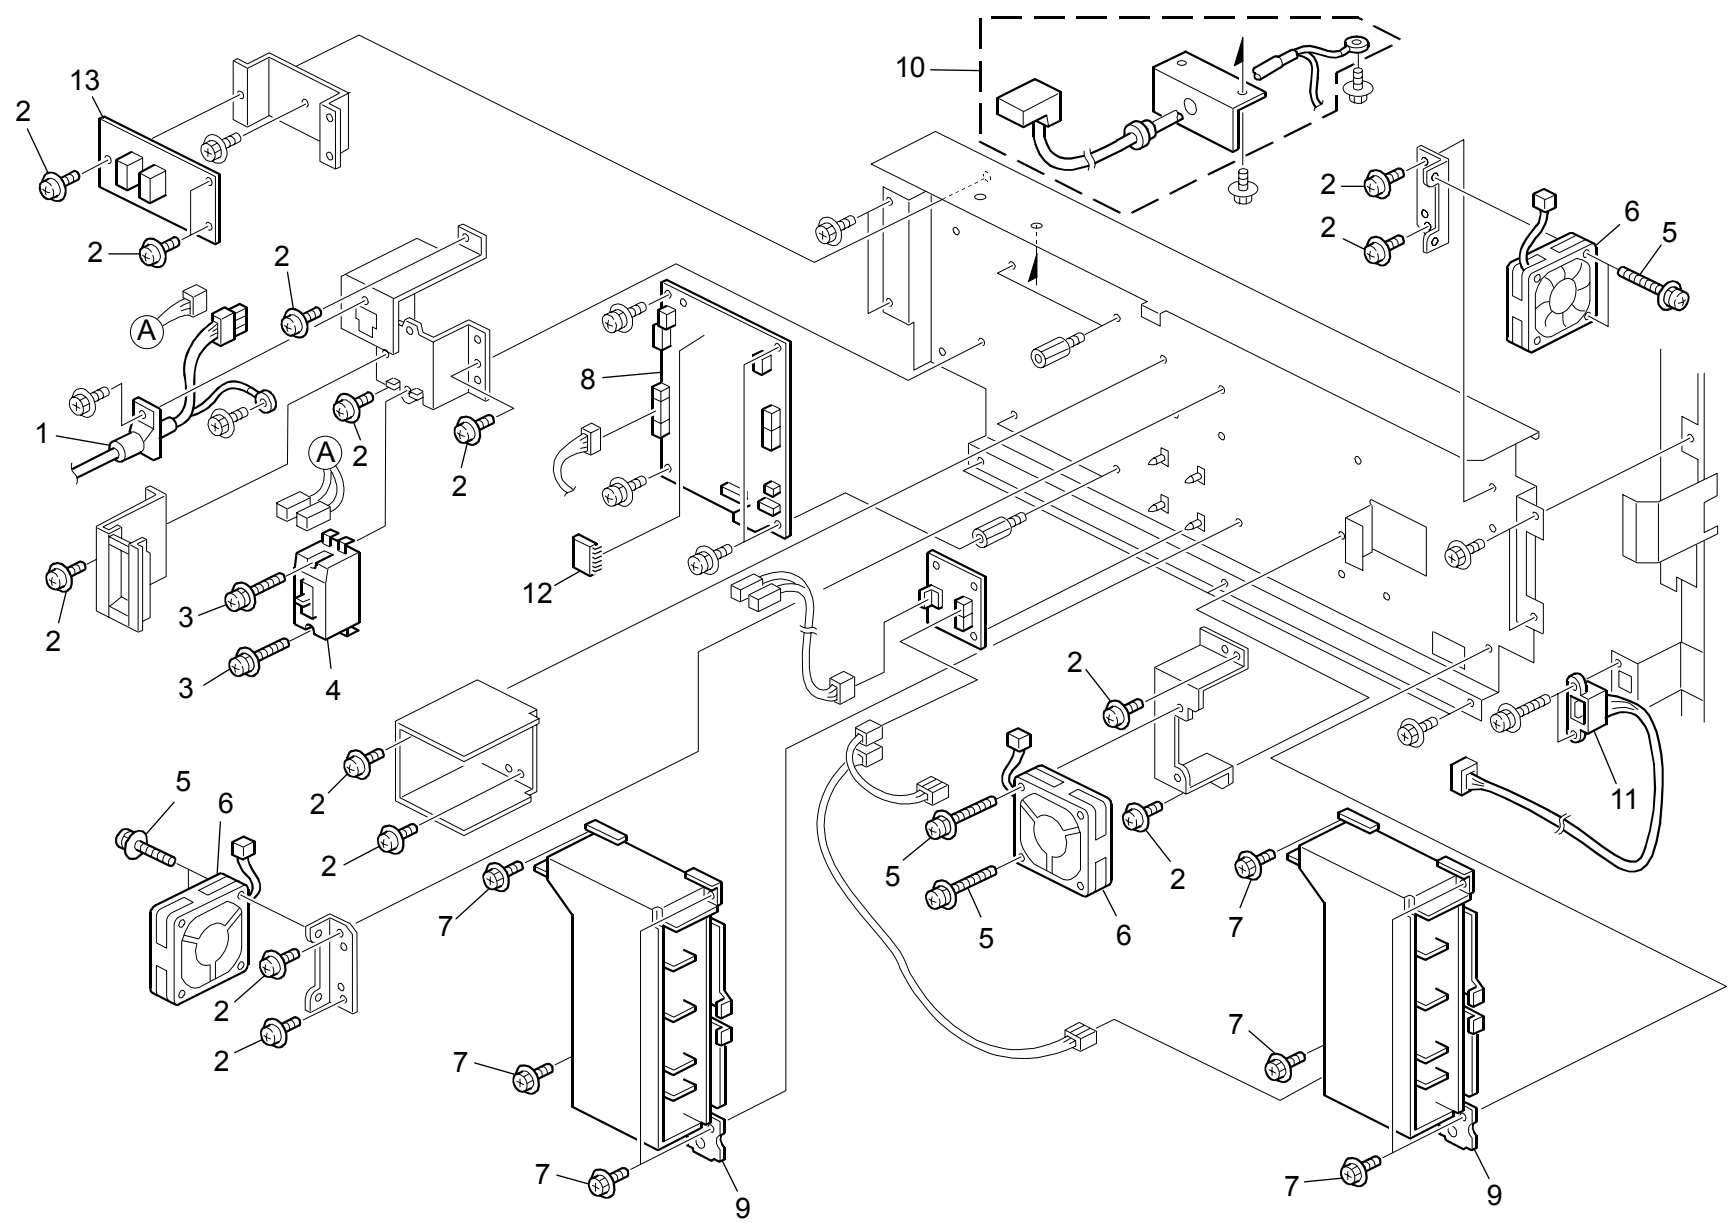

93.Electrical Section 2 (D391)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D391 5279	Power Supply Cord:NA:PF4140K712	1
2	D391 1242	Tapping Screw:M3x6:NS-SCR00017B	15
3	D391 1134	Screw With Washer:M4x20:040200FWSW	2
4	D391 5300	Leak Breaker:PF4140R412	1
5	D391 1135	Pan Head Screw:Spring Washer:M4x30: 040300FWWS	6
6	D391 5297	DC Fan Motor:PF4140R406	3
7	D391 1129	Tapping Screw:M4x8:040080FWIT	8
8	D391 5500	PCB:Connecting:Ass'y	1
9	D391 5305	Power Supply Unit:PF4140R403B	2
10	D391 5311	Interface Cable:Inner Assembly:PF4155K201	1
11	D391 5312	Harness:Connectiong:PF4155K908	1
12	D391 5505	Eerom:Connecting:E323000483	1
13	D391 5210	PCB:Surge Absorber:PF4155K936	1

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

Parts Index

Part No.	Description	Page and Index No.
D391 1000	Cutter Unit:PF4140K399A	165 - 3
D391 1001	Pressure Sensor:PF4140L418	87 - 8
D391 1102	Tension Spring:PF4099P426B	133 - 6
D391 1102	Tension Spring:PF4099P426B	119 - 13
D391 1102	Tension Spring:PF4099P426B	127 - 11
D391 1102	Tension Spring:PF4099P426B	69 - 18
D391 1103	Tension Spring:PF4099P476B	131 - 7
D391 1103	Tension Spring:PF4099P476B	125 - 9
D391 1104	Torsion Spring:Front:PF4099P804B	133 - 9
D391 1104	Torsion Spring:Front:PF4099P804B	125 - 7
D391 1104	Torsion Spring:Front:PF4099P804B	47 - 5
D391 1104	Torsion Spring:Front:PF4099P804B	41 - 8
D391 1104	Torsion Spring:Front:PF4099P804B	11 - 10
D391 1104	Torsion Spring:Front:PF4099P804B	115 - 5
D391 1105	Torsion Spring:Rear:PF4099P805B	125 - 11
D391 1105	Torsion Spring:Rear:PF4099P805B	115 - 9
D391 1105	Torsion Spring:Rear:PF4099P805B	47 - 6
D391 1105	Torsion Spring:Rear:PF4099P805B	133 - 14
D391 1105	Torsion Spring:Rear:PF4099P805B	11 - 12
D391 1105	Torsion Spring:Rear:PF4099P805B	41 - 3
D391 1106	Discharge Brush:PF4110P489A2	111 - 6
D391 1107	Sponge:Contact Point:Cover:Front: PF4155Q731A	5 - 9
D391 1108	Bushing:606262	155 - 16
D391 1108	Bushing:606262	155 - 9
D391 1108	Bushing:606262	79 - 1
D391 1108	Bushing:606262	149 - 8
D391 1108	Bushing:606262	161 - 10
D391 1108	Bushing:606262	85 - 3
D391 1108	Bushing:606262	151 - 8
D391 1108	Bushing:606262	147 - 11
D391 1108	Bushing:606262	141 - 6
D391 1109	Tapping Screw:M3x4:030040fwit	81 - 11
D391 1110	Pan Head Screw:Spring Washer: 030040FWWS	69 - 5

Part No.	Description	Page and Index No.
D391 1111	Screw With Washer:M3x5:030050FWWS	91 - 5
D391 1111	Screw With Washer:M3x5:030050FWWS	51 - 19
D391 1111	Screw With Washer:M3x5:030050FWWS	93 - 8
D391 1111	Screw With Washer:M3x5:030050FWWS	83 - 9
D391 1112	Tapping Screw:030060FBNB	103 - 8
D391 1113	Screw:M3x6:030060FNBI	45 - 5
D391 1113	Screw:M3x6:030060FNBI	3 - 6
D391 1113	Screw:M3x6:030060FNBI	71 - 3
D391 1113	Screw:M3x6:030060FNBI	49 - 5
D391 1113	Screw:M3x6:030060FNBI	59 - 12
D391 1114	Washer:M3x6:030060FWSW	149 - 1
D391 1114	Washer:M3x6:030060FWSW	47 - 9
D391 1114	Washer:M3x6:030060FWSW	125 - 10
D391 1114	Washer:M3x6:030060FWSW	133 - 11
D391 1114	Washer:M3x6:030060FWSW	61 - 1
D391 1114	Washer:M3x6:030060FWSW	109 - 10
D391 1114	Washer:M3x6:030060FWSW	99 - 5
D391 1114	Washer:M3x6:030060FWSW	177 - 19
D391 1114	Washer:M3x6:030060FWSW	9 - 6
D391 1114	Washer:M3x6:030060FWSW	169 - 6
D391 1114	Washer:M3x6:030060FWSW	3 - 1
D391 1114	Washer:M3x6:030060FWSW	105 - 5
D391 1114	Washer:M3x6:030060FWSW	115 - 2
D391 1114	Washer:M3x6:030060FWSW	67 - 16
D391 1114	Washer:M3x6:030060FWSW	45 - 3
D391 1114	Washer:M3x6:030060FWSW	11 - 4
D391 1114	Washer:M3x6:030060FWSW	37 - 6
D391 1114	Washer:M3x6:030060FWSW	75 - 11
D391 1115	Pan Head Screw W/Washer:M3x6: 030060FWTP	113 - 8
D391 1116	Screw With Washer:M3x6:030060FWWS	29 - 5
D391 1116	Screw With Washer:M3x6:030060FWWS	15 - 8
D391 1116	Screw With Washer:M3x6:030060FWWS	165 - 6
D391 1116	Screw With Washer:M3x6:030060FWWS	11 - 6
D391 1116	Screw With Washer:M3x6:030060FWWS	167 - 1

Part No.	Description	Page and Index No.
D391 1116	Screw With Washer:M3x6:030060FWWS	163 - 4
D391 1116	Screw With Washer:M3x6:030060FWWS	13 - 2
D391 1116	Screw With Washer:M3x6:030060FWWS	33 - 7
D391 1116	Screw With Washer:M3x6:030060FWWS	109 - 2
D391 1116	Screw With Washer:M3x6:030060FWWS	25 - 3
D391 1117	Binding Self-Tapping Screw:M3x8: 030080FWBB	7 - 15
D391 1117	Binding Self-Tapping Screw:M3x8: 030080FWBB	3 - 21
D391 1118	Tapping Screw:M3x8:030080FWIT	73 - 8
D391 1119	Screw With Washer:M3x8:030080FWWS	113 - 18
D391 1120	Screw With Washer:M3x8:030080FWWS	17 - 8
D391 1120	Screw With Washer:M3x8:030080FWWS	59 - 20
D391 1120	Screw With Washer:M3x8:030080FWWS	125 - 4
D391 1120	Screw With Washer:M3x8:030080FWWS	41 - 1
D391 1120	Screw With Washer:M3x8:030080FWWS	113 - 2
D391 1120	Screw With Washer:M3x8:030080FWWS	159 - 15
D391 1120	Screw With Washer:M3x8:030080FWWS	85 - 6
D391 1120	Screw With Washer:M3x8:030080FWWS	79 - 11
D391 1120	Screw With Washer:M3x8:030080FWWS	77 - 5
D391 1120	Screw With Washer:M3x8:030080FWWS	73 - 10
D391 1120	Screw With Washer:M3x8:030080FWWS	117 - 2
D391 1120	Screw With Washer:M3x8:030080FWWS	81 - 15
D391 1120	Screw With Washer:M3x8:030080FWWS	61 - 7
D391 1120	Screw With Washer:M3x8:030080FWWS	47 - 4
D391 1120	Screw With Washer:M3x8:030080FWWS	45 - 9
D391 1120	Screw With Washer:M3x8:030080FWWS	91 - 13
D391 1120	Screw With Washer:M3x8:030080FWWS	83 - 3
D391 1120	Screw With Washer:M3x8:030080FWWS	93 - 14
D391 1120	Screw With Washer:M3x8:030080FWWS	19 - 11
D391 1120	Screw With Washer:M3x8:030080FWWS	93 - 6
D391 1120	Screw With Washer:M3x8:030080FWWS	75 - 2
D391 1120	Screw With Washer:M3x8:030080FWWS	115 - 1
D391 1120	Screw With Washer:M3x8:030080FWWS	33 - 12
D391 1120	Screw With Washer:M3x8:030080FWWS	67 - 13

Part No.	Description	Page and Index No.
D391 1120	Screw With Washer:M3x8:030080FWWS	133 - 13
D391 1120	Screw With Washer:M3x8:030080FWWS	163 - 9
D391 1121	Binding Self-Tapping Screw:M3x10: 030100FWBB	65 - 14
D391 1121	Binding Self-Tapping Screw:M3x10: 030100FWBB	5 - 5
D391 1121	Binding Self-Tapping Screw:M3x10: 030100FWBB	75 - 1
D391 1121	Binding Self-Tapping Screw:M3x10: 030100FWBB	103 - 3
D391 1121	Binding Self-Tapping Screw:M3x10: 030100FWBB	57 - 3
D391 1121	Binding Self-Tapping Screw:M3x10: 030100FWBB	99 - 10
D391 1121	Binding Self-Tapping Screw:M3x10: 030100FWBB	9 - 3
D391 1121	Binding Self-Tapping Screw:M3x10: 030100FWBB	83 - 1
D391 1122	Screw With Washer:M3x14:030140FWWS	105 - 7
D391 1123	Screw With Washer:M3x16:030160FWWS	13 - 10
D391 1123	Screw With Washer:M3x16:030160FWWS	121 - 7
D391 1123	Screw With Washer:M3x16:030160FWWS	119 - 10
D391 1123	Screw With Washer:M3x16:030160FWWS	33 - 1
D391 1124	Pan Head Screw:Spring Washer: 030300FWWS	119 - 19
D391 1124	Pan Head Screw:Spring Washer: 030300FWWS	121 - 14
D391 1124	Pan Head Screw:Spring Washer: 030300FWWS	49 - 3
D391 1125	Screw With Washer:M3x35:030350FWWS	115 - 11
D391 1126	Pan Head Screw W/Washer:M4x4: 040040FWIT	81 - 5
D391 1126	Pan Head Screw W/Washer:M4x4: 040040FWIT	77 - 4
D391 1127	Tapping Screw:M4x8:040080FNTP	85 - 8

Part No.	Description	Page and Index No.
D391 1128	Binding Self-Tapping Screw:M4x8: 040080FWBI	113 - 7
D391 1129	Tapping Screw:M4x8:040080FWIT	3 - 5
D391 1129	Tapping Screw:M4x8:040080FWIT	81 - 13
D391 1129	Tapping Screw:M4x8:040080FWIT	187 - 7
D391 1130	Washer:M4x8:040080FWSW	157 - 4
D391 1130	Washer:M4x8:040080FWSW	161 - 8
D391 1130	Washer:M4x8:040080FWSW	39 - 15
D391 1130	Washer:M4x8:040080FWSW	43 - 16
D391 1130	Washer:M4x8:040080FWSW	43 - 9
D391 1131	Binding Self-Tapping Screw:M4x10: 040100FWBB	7 - 16
D391 1132	Screw With Washer:M4x10:040100FWWS	153 - 2
D391 1133	Binding Self-Tapping Screw:M4x12: 040120FWBB	101 - 7
D391 1134	Screw With Washer:M4x20:040200FWSW	187 - 3
D391 1135	Pan Head Screw:Spring Washer:M4x30: 040300FWWS	187 - 5
D391 1135	Pan Head Screw:Spring Washer:M4x30: 040300FWWS	97 - 2
D391 1135	Pan Head Screw:Spring Washer:M4x30: 040300FWWS	69 - 2
D391 1135	Pan Head Screw:Spring Washer:M4x30: 040300FWWS	141 - 3
D391 1139	Screw:30140FWBI	175 - 2
D391 1139	Screw:30140FWBI	55 - 1
D391 1140	Spacer:CL030120FW	13 - 14
D391 1140	Spacer:CL030120FW	119 - 12
D391 1140	Spacer:CL030120FW	121 - 9
D391 1141	Spacer:CL080050FW	151 - 6
D391 1141	Spacer:CL080050FW	149 - 6
D391 1142	Spacer:CL080180FW	115 - 13
D391 1142	Spacer:CL080180FW	65 - 11
D391 1145	Washer:ER017SU-D	63 - 8
D391 1145	Washer:ER017SU-D	65 - 16

Part No.	Description	Page and Index No.
D391 1145	Washer:ER017SU-D	73 - 11
D391 1146	Retaining Rings-E:DIA2.4:ER024SU-D	137 - 3
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	89 - 5
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	149 - 4
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	115 - 7
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	169 - 4
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	59 - 8
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	121 - 4
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	111 - 3
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	53 - 7
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	57 - 5
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	139 - 9
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	117 - 7
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	51 - 8
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	179 - 10
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	47 - 10
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	107 - 2
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	129 - 6
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	167 - 5
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	151 - 4
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	137 - 6
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	171 - 5
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	11 - 2
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	65 - 5
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	73 - 3
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	39 - 22
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	87 - 2
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	75 - 6
D391 1148	Retaining Rings-E:DIA3.2:ER032SU-D	119 - 3
D391 1149	Retaining Rings-E:DIA4:ER040SU-D	59 - 11
D391 1149	Retaining Rings-E:DIA4:ER040SU-D	63 - 10
D391 1149	Retaining Rings-E:DIA4:ER040SU-D	41 - 2
D391 1149	Retaining Rings-E:DIA4:ER040SU-D	69 - 12
D391 1149	Retaining Rings-E:DIA4:ER040SU-D	43 - 5
D391 1149	Retaining Rings-E:DIA4:ER040SU-D	65 - 1

Part No.	Description	Page and Index No.
D391 1149	Retaining Rings-E:DIA4:ER040SU-D	73 - 9
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	73 - 5
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	157 - 9
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	183 - 6
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	131 - 2
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	149 - 3
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	139 - 2
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	71 - 6
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	155 - 3
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	115 - 3
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	67 - 5
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	81 - 1
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	175 - 9
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	125 - 3
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	101 - 3
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	21 - 7
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	111 - 12
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	177 - 5
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	113 - 11
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	11 - 8
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	41 - 4
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	75 - 8
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	25 - 5
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	51 - 4
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	13 - 13
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	29 - 8
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	117 - 11
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	165 - 8
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	93 - 9
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	179 - 3
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	69 - 17
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	65 - 8
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	83 - 8
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	45 - 7
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	95 - 4

Part No.	Description	Page and Index No.
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	133 - 4
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	23 - 8
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	163 - 5
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	37 - 11
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	39 - 12
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	31 - 9
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	107 - 4
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	27 - 10
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	33 - 16
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	127 - 7
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	181 - 3
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	109 - 6
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	119 - 6
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	159 - 10
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	91 - 4
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	49 - 7
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	43 - 8
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	47 - 1
D391 1150	Retaining Rings-E:DIA5:ER050SU-D	39 - 1
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	63 - 1
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	161 - 1
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	59 - 2
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	51 - 1
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	61 - 9
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	143 - 11
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	81 - 2
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	53 - 2
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	35 - 4
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	155 - 10
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	173 - 1
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	79 - 2
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	163 - 23
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	177 - 2
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	95 - 2
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	147 - 3

Part No.	Description	Page and Index No.
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	91 - 11
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	85 - 2
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	149 - 10
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	123 - 3
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	25 - 8
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	103 - 1
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	159 - 4
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	99 - 3
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	141 - 5
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	119 - 16
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	125 - 5
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	27 - 4
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	65 - 9
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	177 - 8
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	83 - 4
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	23 - 3
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	43 - 2
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	133 - 2
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	67 - 9
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	127 - 2
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	69 - 7
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	169 - 9
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	145 - 2
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	135 - 3
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	71 - 8
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	131 - 5
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	113 - 5
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	137 - 10
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	139 - 8
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	11 - 13
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	33 - 4
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	111 - 8
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	57 - 9
D391 1151	Retaining Rings-E:DIA6.4:ER064SU-D	121 - 11
D391 1152	Retaining Rings-E:DIA8:ER080SU-D	57 - 8

Part No.	Description	Page and Index No.
D391 1152	Retaining Rings-E:DIA8:ER080SU-D	145 - 6
D391 1152	Retaining Rings-E:DIA8:ER080SU-D	155 - 14
D391 1152	Retaining Rings-E:DIA8:ER080SU-D	159 - 5
D391 1152	Retaining Rings-E:DIA8:ER080SU-D	163 - 17
D391 1154	Parallel Pin:2x10:HP020100SCH	119 - 8
D391 1154	Parallel Pin:2x10:HP020100SCH	177 - 16
D391 1154	Parallel Pin:2x10:HP020100SCH	11 - 9
D391 1154	Parallel Pin:2x10:HP020100SCH	71 - 7
D391 1154	Parallel Pin:2x10:HP020100SCH	43 - 19
D391 1154	Parallel Pin:2x10:HP020100SCH	51 - 16
D391 1154	Parallel Pin:2x10:HP020100SCH	27 - 20
D391 1154	Parallel Pin:2x10:HP020100SCH	127 - 8
D391 1154	Parallel Pin:2x10:HP020100SCH	23 - 27
D391 1154	Parallel Pin:2x10:HP020100SCH	39 - 8
D391 1154	Parallel Pin:2x10:HP020100SCH	107 - 9
D391 1154	Parallel Pin:2x10:HP020100SCH	31 - 10
D391 1154	Parallel Pin:2x10:HP020100SCH	107 - 6
D391 1154	Parallel Pin:2x10:HP020100SCH	33 - 17
D391 1154	Parallel Pin:2x10:HP020100SCH	111 - 11
D391 1154	Parallel Pin:2x10:HP020100SCH	125 - 6
D391 1154	Parallel Pin:2x10:HP020100SCH	37 - 12
D391 1154	Parallel Pin:2x10:HP020100SCH	115 - 4
D391 1154	Parallel Pin:2x10:HP020100SCH	133 - 10
D391 1155	Parallel Pin:2x14:HP020140SCH	149 - 11
D391 1155	Parallel Pin:2x14:HP020140SCH	145 - 3
D391 1155	Parallel Pin:2x14:HP020140SCH	113 - 12
D391 1155	Parallel Pin:2x14:HP020140SCH	61 - 11
D391 1155	Parallel Pin:2x14:HP020140SCH	79 - 8
D391 1155	Parallel Pin:2x14:HP020140SCH	85 - 9
D391 1155	Parallel Pin:2x14:HP020140SCH	63 - 4
D391 1155	Parallel Pin:2x14:HP020140SCH	23 - 38
D391 1155	Parallel Pin:2x14:HP020140SCH	95 - 9
D391 1155	Parallel Pin:2x14:HP020140SCH	69 - 9
D391 1155	Parallel Pin:2x14:HP020140SCH	179 - 9
D391 1155	Parallel Pin:2x14:HP020140SCH	147 - 10

Part No.	Description	Page and Index No.
D391 1155	Parallel Pin:2x14:HP020140SCH	91 - 15
D391 1156	Parallel Pin:2x16:HP020160SCH	51 - 20
D391 1156	Parallel Pin:2x16:HP020160SCH	79 - 3
D391 1156	Parallel Pin:2x16:HP020160SCH	69 - 15
D391 1157	Parallel Pin:2x20:HP020200SCH	161 - 13
D391 1157	Parallel Pin:2x20:HP020200SCH	61 - 16
D391 1157	Parallel Pin:2x20:HP020200SCH	155 - 7
D391 1158	Parallel Pin:3x10:HP030100SCH	179 - 5
D391 1158	Parallel Pin:3x10:HP030100SCH	177 - 13
D391 1159	Parallel Pin:3x12:HP030120SCH	103 - 5
D391 1160	Parallel Pin:3x14:HP030140SCH	59 - 4
D391 1160	Parallel Pin:3x14:HP030140SCH	89 - 13
D391 1160	Parallel Pin:3x14:HP030140SCH	57 - 7
D391 1160	Parallel Pin:3x14:HP030140SCH	149 - 5
D391 1160	Parallel Pin:3x14:HP030140SCH	151 - 5
D391 1160	Parallel Pin:3x14:HP030140SCH	63 - 5
D391 1161	Parallel Pin:3x16:HP030160SCH	151 - 9
D391 1161	Parallel Pin:3x16:HP030160SCH	161 - 5
D391 1161	Parallel Pin:3x16:HP030160SCH	149 - 9
D391 1162	Parallel Pin:3x20:HP030200SCH	161 - 11
D391 1162	Parallel Pin:3x20:HP030200SCH	155 - 15
D391 1163	Parallel Pin:3x25:HP030250SCH	123 - 5
D391 1163	Parallel Pin:3x25:HP030250SCH	135 - 8
D391 1164	Washer:HW060FNSN	65 - 7
D391 1164	Washer:HW060FNSN	75 - 9
D391 1164	Washer:HW060FNSN	67 - 14
D391 1165	Washer:HW080FWSN	121 - 12
D391 1165	Washer:HW080FWSN	79 - 5
D391 1165	Washer:HW080FWSN	119 - 17
D391 1165	Washer:HW080FWSN	95 - 8
D391 1165	Washer:HW080FWSN	91 - 17
D391 1165	Washer:HW080FWSN	61 - 13
D391 1166	Washer:HW100FWMN	163 - 16
D391 1166	Washer:HW100FWMN	159 - 6

Part No.	Description	Page and Index No.
D391 1167	Coil Spring:Tension:Transport Sub-Unit:IR3012P356A1	121 - 8
D391 1167	Coil Spring:Tension:Transport Sub-Unit:IR3012P356A1	119 - 11
D391 1168	Tapping Screw:IR4016P167A	99 - 6
D391 1168	Tapping Screw:IR4016P167A	59 - 17
D391 1168	Tapping Screw:IR4016P167A	95 - 1
D391 1168	Tapping Screw:IR4016P167A	91 - 2
D391 1168	Tapping Screw:IR4016P167A	49 - 4
D391 1169	Synchronous Belt:NS-BLT00049B	67 - 7
D391 1170	Synchronous Belt:NS-BLT00050B	83 - 5
D391 1171	Synchronous Belt:NS-BLT00054B	121 - 6
D391 1172	Synchronous Belt:NS-BLT00062B	121 - 3
D391 1173	Synchronous Belt:NS-BLT00065B	127 - 17
D391 1174	Synchronous Belt:NS-BLT00067B	85 - 5
D391 1175	Synchronous Belt:NS-BLT00078B	119 - 7
D391 1176	Synchronous Belt:NS-BLT00122A	61 - 15
D391 1176	Synchronous Belt:NS-BLT00122A	27 - 21
D391 1177	Synchronous Belt:NS-BLT00128B	43 - 7
D391 1178	Synchronous Belt:NS-BLT00136B	43 - 22
D391 1179	Synchronous Belt:NS-BLT00138B	149 - 14
D391 1179	Synchronous Belt:NS-BLT00138B	147 - 9
D391 1180	Synchronous Belt:NS-BLT00147B	113 - 4
D391 1181	Synchronous Belt:NS-BLT00167B	95 - 12
D391 1181	Synchronous Belt:NS-BLT00167B	95 - 18
D391 1181	Synchronous Belt:NS-BLT00167B	147 - 13
D391 1182	Synchronous Belt:NS-BLT00172B	143 - 3
D391 1182	Synchronous Belt:NS-BLT00172B	143 - 12
D391 1183	Synchronous Belt:NS-BLT00209B	63 - 9
D391 1183	Synchronous Belt:NS-BLT00209B	143 - 9
D391 1183	Synchronous Belt:NS-BLT00209B	113 - 3
D391 1184	Synchronous Belt:NS-BLT00278C	119 - 15
D391 1185	Synchronous Belt:NS-BLT00284B	69 - 8
D391 1185	Synchronous Belt:NS-BLT00284B	57 - 10
D391 1186	Synchronous Belt:NS-BLT00295B	119 - 14

Part No.	Description	Page and Index No.
D391 1187	Synchronous Belt:NS-BLT00347B	65 - 3
D391 1188	Synchronous Belt:NS-BLT00348B	65 - 13
D391 1189	Synchronous Belt:NS-BLT00350B	135 - 10
D391 1190	Synchronous Belt:NS-BLT00353B	85 - 10
D391 1193	Synchronous Belt:NS-BLT00355C	107 - 10
D391 1193	Synchronous Belt:NS-BLT00355C	143 - 10
D391 1194	Synchronous Belt:NS-BLT00356B	63 - 11
D391 1195	Synchronous Belt:NS-BLT00358B	85 - 4
D391 1196	Synchronous Belt:NS-BLT00362B	107 - 5
D391 1197	Synchronous Belt:NS-BLT00364B	95 - 11
D391 1198	Synchronous Belt:NS-BLT00365C	47 - 19
D391 1199	Synchronous Belt:NS-BLT00366B	109 - 11
D391 1200	Synchronous Belt:NS-BLT00377B	63 - 12
D391 1200	Synchronous Belt:NS-BLT00377B	51 - 15
D391 1200	Synchronous Belt:NS-BLT00377B	53 - 12
D391 1200	Synchronous Belt:NS-BLT00377B	127 - 10
D391 1200	Synchronous Belt:NS-BLT00377B	47 - 20
D391 1200	Synchronous Belt:NS-BLT00377B	133 - 5
D391 1201	Synchronous Belt:NS-BLT00378B	133 - 12
D391 1202	Synchronous Belt:NS-BLT00379B	51 - 14
D391 1203	Synchronous Belt:NS-BLT00380B	127 - 13
D391 1204	Synchronous Belt:NS-BLT00381A	79 - 9
D391 1205	Synchronous Belt:NS-BLT00382B	119 - 9
D391 1206	Synchronous Belt:NS-BLT00384B	125 - 8
D391 1206	Synchronous Belt:NS-BLT00384B	131 - 4
D391 1207	Synchronous Belt:NS-BLT00386B	43 - 21
D391 1208	Synchronous Belt:NS-BLT00387B	43 - 6
D391 1209	Synchronous Belt:NS-BLT00389B	99 - 7
D391 1210	Synchronous Belt:NS-BLT00390B	161 - 12
D391 1211	Synchronous Belt:NS-BLT00394B	155 - 6
D391 1213	Synchronous Belt:NS-BLT00397B	157 - 1
D391 1214	Synchronous Belt:NS-BLT00398B	161 - 14
D391 1215	Synchronous Belt:NS-BLT00400B	169 - 8
D391 1216	Synchronous Belt:NS-BLT00401B	179 - 6
D391 1217	Synchronous Belt:NS-BLT00402B	177 - 15

Part No.	Description	Page and Index No.
D391 1218	Synchronous Belt:NS-BLT00403B	183 - 9
D391 1218	Synchronous Belt:NS-BLT00403B	181 - 2
D391 1219	Synchronous Belt:NS-BLT00404B	181 - 6
D391 1221	Synchronous Belt:NS-BLT00407B	71 - 10
D391 1222	Synchronous Belt:NS-BLT00409B	127 - 19
D391 1223	Synchronous Belt:NS-BLT00410B	163 - 11
D391 1223	Synchronous Belt:NS-BLT00410B	157 - 6
D391 1224	Synchronous Belt:NS-BLT00411A	159 - 13
D391 1224	Synchronous Belt:NS-BLT00411A	163 - 14
D391 1225	Synchronous Belt:NS-BLT00412B	163 - 10
D391 1225	Synchronous Belt:NS-BLT00412B	159 - 14
D391 1226	Radial Ball Bearing:DIA6DIA12: NS-BRG00030B	109 - 5
D391 1227	Radial Ball Bearing:DIA6DIA15: NS-BRG00033B	139 - 3
D391 1228	Radial Ball Bearing:DIA8DIA22: NS-BRG00039B	147 - 6
D391 1228	Radial Ball Bearing:DIA8DIA22: NS-BRG00039B	139 - 7
D391 1228	Radial Ball Bearing:DIA8DIA22: NS-BRG00039B	137 - 9
D391 1229	Radial Ball Bearing:DIA6DIA13: NS-BRG00047B	131 - 3
D391 1229	Radial Ball Bearing:DIA6DIA13: NS-BRG00047B	127 - 16
D391 1229	Radial Ball Bearing:DIA6DIA13: NS-BRG00047B	125 - 2
D391 1229	Radial Ball Bearing:DIA6DIA13: NS-BRG00047B	119 - 5
D391 1230	Radial Ball Bearing:DIA8DIA14: NS-BRG00050B	161 - 2
D391 1231	Radial Ball Bearing:DIA8DIA12: NS-BRG00084B	149 - 7
D391 1231	Radial Ball Bearing:DIA8DIA12: NS-BRG00084B	151 - 7

Part No.	Description	Page and Index No.
D391 1231	Radial Ball Bearing:DIA8DIA12: NS-BRG00084B	89 - 1
D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	135 - 5
D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	125 - 12
D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	27 - 3
D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	127 - 1
D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	79 - 6
D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	33 - 5
D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	131 - 6
D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	61 - 10
D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	47 - 2
D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	111 - 9
D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	51 - 2
D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	133 - 1
D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	59 - 16
D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	95 - 10
D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	53 - 3
D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	11 - 14
D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	91 - 16
D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	63 - 3
D391 1232	Radial Ball Bearing:DIA8:NS-BRG00103A	43 - 1
D391 1233	Radial Ball Bearing:DIA6:NS-BRG00110A	121 - 5
D391 1233	Radial Ball Bearing:DIA6:NS-BRG00110A	119 - 4
D391 1233	Radial Ball Bearing:DIA6:NS-BRG00110A	29 - 11
D391 1233	Radial Ball Bearing:DIA6:NS-BRG00110A	143 - 4
D391 1233	Radial Ball Bearing:DIA6:NS-BRG00110A	39 - 21
D391 1233	Radial Ball Bearing:DIA6:NS-BRG00110A	23 - 25
D391 1233	Radial Ball Bearing:DIA6:NS-BRG00110A	31 - 7
D391 1234	Radial Ball Bearing:DIA15DIA32: NS-BRG00115C	91 - 20
D391 1234	Radial Ball Bearing:DIA15DIA32: NS-BRG00115C	93 - 2
D391 1235	Bushing:DIA8:NS-BSH00004B	103 - 2
D391 1236	Retaining Rings-C:NS-CLP00007D	65 - 10
D391 1237	Bushing:DIA5:NS-MTL00003B	69 - 13

Part No.	Description	Page and Index No.
D391 1238	Bushing:DIA6:NS-MTL00007B	113 - 10
D391 1238	Bushing:DIA6:NS-MTL00007B	177 - 6
D391 1238	Bushing:DIA6:NS-MTL00007B	169 - 7
D391 1238	Bushing:DIA6:NS-MTL00007B	67 - 8
D391 1238	Bushing:DIA6:NS-MTL00007B	73 - 7
D391 1238	Bushing:DIA6:NS-MTL00007B	155 - 8
D391 1238	Bushing:DIA6:NS-MTL00007B	127 - 6
D391 1238	Bushing:DIA6:NS-MTL00007B	179 - 4
D391 1238	Bushing:DIA6:NS-MTL00007B	169 - 5
D391 1239	Bushing:DIA8:NS-MTL00013B	63 - 2
D391 1239	Bushing:DIA8:NS-MTL00013B	51 - 5
D391 1239	Bushing:DIA8:NS-MTL00013B	71 - 5
D391 1239	Bushing:DIA8:NS-MTL00013B	69 - 10
D391 1239	Bushing:DIA8:NS-MTL00013B	67 - 10
D391 1239	Bushing:DIA8:NS-MTL00013B	57 - 12
D391 1240	Bushing:NS-MTL00017B	135 - 4
D391 1240	Bushing:NS-MTL00017B	145 - 4
D391 1240	Bushing:NS-MTL00017B	147 - 4
D391 1240	Bushing:NS-MTL00017B	123 - 4
D391 1240	Bushing:NS-MTL00017B	25 - 6
D391 1241	Flat Screw:M3x5:NS-SCR00006B	181 - 7
D391 1241	Flat Screw:M3x5:NS-SCR00006B	179 - 14
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	67 - 2
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	77 - 2
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	169 - 2
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	47 - 3
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	157 - 2
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	179 - 2
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	165 - 2
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	59 - 9
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	121 - 2
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	7 - 10
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	133 - 7
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	109 - 3
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	187 - 2

Part No.	Description	Page and Index No.
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	51 - 3
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	91 - 3
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	147 - 8
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	163 - 2
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	49 - 8
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	111 - 7
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	57 - 2
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	173 - 3
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	183 - 8
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	159 - 8
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	149 - 13
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	167 - 3
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	181 - 4
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	41 - 6
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	65 - 6
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	79 - 4
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	115 - 6
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	105 - 2
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	9 - 4
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	101 - 6
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	125 - 1
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	55 - 5
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	113 - 15
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	85 - 1
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	143 - 2
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	107 - 8
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	11 - 1
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	73 - 1
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	151 - 1
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	53 - 4
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	81 - 4
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	71 - 2
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	135 - 2
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	43 - 11
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	119 - 1

Part No.	Description	Page and Index No.
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	153 - 1
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	155 - 2
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	141 - 2
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	129 - 2
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	177 - 7
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	3 - 7
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	45 - 1
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	117 - 1
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	69 - 3
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	13 - 4
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	83 - 2
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	75 - 3
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	161 - 3
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	99 - 9
D391 1242	Tapping Screw:M3x6:NS-SCR00017B	61 - 3
D391 1243	Tapping Screw:NS-SCR00047A	123 - 2
D391 1243	Tapping Screw:NS-SCR00047A	131 - 1
D391 1243	Tapping Screw:NS-SCR00047A	143 - 7
D391 1244	Screw:M4x8:NS-SCR00050B	179 - 1
D391 1244	Screw:M4x8:NS-SCR00050B	173 - 4
D391 1244	Screw:M4x8:NS-SCR00050B	3 - 19
D391 1244	Screw:M4x8:NS-SCR00050B	167 - 7
D391 1244	Screw:M4x8:NS-SCR00050B	183 - 5
D391 1244	Screw:M4x8:NS-SCR00050B	101 - 4
D391 1244	Screw:M4x8:NS-SCR00050B	175 - 10
D391 1244	Screw:M4x8:NS-SCR00050B	181 - 5
D391 1245	Tapping Screw:M4x10:NS-SCR00061B	175 - 11
D391 1246	Flat Screw:M4x10:NS-SCR00088B	135 - 1
D391 1246	Flat Screw:M4x10:NS-SCR00088B	7 - 6
D391 1247	Screw:NS-SCR00207B	59 - 15
D391 1248	Screw:NS-SCR00212B	137 - 2
D391 1248	Screw:NS-SCR00212B	139 - 6
D391 1249	Flanged Hexagonal Nut:NT030FN2	49 - 2
D391 1249	Flanged Hexagonal Nut:NT030FN2	99 - 2
D391 1250	Flanged Hexagonal Nut:NT040FN2	69 - 6

Part No.	Description	Page and Index No.
D391 1252	Spring Washer:PR2112P094A	111 - 10
D391 1253	Screw:PF2171P583B	41 - 9
D391 1254	Screw:3.4x6:PF2254P326A1	81 - 3
D391 1254	Screw:3.4x6:PF2254P326A1	93 - 4
D391 1254	Screw:3.4x6:PF2254P326A1	91 - 10
D391 1254	Screw:3.4x6:PF2254P326A1	95 - 7
D391 1255	Mechanical Roller Clutch:Joint: PF2268P344B	43 - 18
D391 1255	Mechanical Roller Clutch:Joint: PF2268P344B	37 - 5
D391 1255	Mechanical Roller Clutch:Joint: PF2268P344B	39 - 24
D391 1256	Flat Screw:Adjusting Screw:Hinge: PF2269P385A1	33 - 6
D391 1256	Flat Screw:Adjusting Screw:Hinge: PF2269P385A1	115 - 12
D391 1257	Torque Limiter Mechanical Clutch: PF3064K029B	127 - 9
D391 1258	Driven Roller:PF3091P039A1	45 - 8
D391 1258	Driven Roller:PF3091P039A1	41 - 7
D391 1258	Driven Roller:PF3091P039A1	49 - 6
D391 1259	Spring Plate:Registration Roller:Plate: PF3091P159C	41 - 5
D391 1260	Coil Spring:Registration Sensor:Bin:Upper: PF3091P346	41 - 11
D391 1260	Coil Spring:Registration Sensor:Bin:Upper: PF3091P346	43 - 15
D391 1261	Coil Spring:Registration Sensor:Bin:Lower: PF3091P347A	117 - 4
D391 1261	Coil Spring:Registration Sensor:Bin:Lower: PF3091P347A	129 - 4
D391 1262	Magnetic:40N:PF3091P854A	43 - 12
D391 1263	Radial Ball Bearing:6x10:PF4096P347A	107 - 3
D391 1263	Radial Ball Bearing:6x10:PF4096P347A	155 - 4
D391 1263	Radial Ball Bearing:6x10:PF4096P347A	65 - 4

Part No.	Description	Page and Index No.
D391 1263	Radial Ball Bearing:6x10:PF4096P347A	163 - 7
D391 1263	Radial Ball Bearing:6x10:PF4096P347A	157 - 7
D391 1264	Screw:PF4103P331B	183 - 10
D391 1264	Screw:PF4103P331B	45 - 2
D391 1265	Screw:PF4123Q908A	175 - 7
D391 1265	Screw:PF4123Q908A	115 - 15
D391 1266	Magnet Catch:20N:PF4130P412A	105 - 4
D391 1266	Magnet Catch:20N:PF4130P412A	3 - 2
D391 1267	Coil Spring:PF4138P541A	109 - 9
D391 1268	Tray:Torque Diode:PF4140K117A:Ass'y	69 - 14
D391 1269	Case:Paper Chip:PF4155K376:Ass'y	5 - 1
D391 1270	Diode:Torque:PF4140K458A1:Ass'y	161 - 6
D391 1271	Guide Plate:Slide:Paper Chip:PF4140K461C	165 - 15
D391 1272	Cable:Glue:PF4140L096A	105 - 6
D391 1273	Registration Guide:PF4140L107A	113 - 9
D391 1274	Bracket:PF4140L157A	67 - 3
D391 1275	Glue:Tub:Unit:PF4140L386A	109 - 12
D391 1276	Roller:Wing:PF4140L393A	59 - 14
D391 1277	Roller:Wing:2:PF4140L394A	59 - 13
D391 1278	Roller:Plate:Trailing Edge:PF4140L411A	59 - 1
D391 1279	Filter:VOC:PF4140P026A	101 - 5
D391 1280	Coil Spring:Hinge:Cover:Upper: PF4140P099A	55 - 3
D391 1281	Coil Spring:Roller:PF4140P106A1	49 - 9
D391 1281	Coil Spring:Roller:PF4140P106A1	45 - 6
D391 1282	Lever:Transport Sensor:PF4140P112B1	47 - 12
D391 1282	Lever:Transport Sensor:PF4140P112B1	89 - 9
D391 1282	Lever:Transport Sensor:PF4140P112B1	75 - 5
D391 1282	Lever:Transport Sensor:PF4140P112B1	51 - 9
D391 1282	Lever:Transport Sensor:PF4140P112B1	53 - 8
D391 1283	Spring Plate:Tray:Sub:PF4140P122A2	73 - 12
D391 1284	Roller:Plate:Trailing Edge:PF4140P131A1	59 - 6
D391 1285	Coil Spring:Lever:Sensor:PF4140P132	47 - 13
D391 1285	Coil Spring:Lever:Sensor:PF4140P132	53 - 10
D391 1285	Coil Spring:Lever:Sensor:PF4140P132	89 - 7

Part No.	Description	Page and Index No.
D391 1285	Coil Spring:Lever:Sensor:PF4140P132	51 - 11
D391 1286	Discharge Brush:PF4140P136B1	53 - 5
D391 1287	Coil Spring:Entrance:PF4140P144A1	51 - 17
D391 1288	Roller:1:PF4140P145A1	51 - 12
D391 1289	Roller:2:PF4140P146A1	51 - 6
D391 1289	Roller:2:PF4140P146A1	53 - 1
D391 1290	Roller:Entrance:PF4140P147A1	47 - 15
D391 1291	Coil Spring:Lever:Supply:Tray: PF4140P159B1	75 - 4
D391 1292	Torsion Spring:Tray:PF4140P161A1	73 - 4
D391 1293	Coil Spring:Plate:Trailing Edge:Middle: PF4140P216B2	57 - 4
D391 1294	Coil Spring:Plate:Trailing Edge:Front Rear: PF4140P217A	57 - 6
D391 1295	Roller:Plate:Trailing Edge:PF4140P220A1	59 - 3
D391 1296	Spring Plate:Transport Roller: PF4140P227B1	59 - 10
D391 1298	Spring Plate:Paper Sensor:Surface: PF4140P237B	51 - 10
D391 1298	Spring Plate:Paper Sensor:Surface: PF4140P237B	47 - 11
D391 1298	Spring Plate:Paper Sensor:Surface: PF4140P237B	53 - 9
D391 1299	Discharge Brush:PF4140P238A	159 - 9
D391 1299	Discharge Brush:PF4140P238A	163 - 20
D391 1300	Roller:Tray:PF4140P241B	63 - 6
D391 1301	Roller:PF4140P243A1	65 - 12
D391 1301	Roller:PF4140P243A1	127 - 14
D391 1302	Coil Spring:Lever:Front:Uniform: PF4140P262B1	65 - 15
D391 1303	Coil Spring:Lever:Rear:UNIFORM: PF4140P266B1	65 - 18
D391 1304	Discharge Brush:Transport:PF4140P272A2	59 - 18
D391 1305	Coil Spring:Motor:Plate:Trailing Edge: PF4140P293A2	67 - 12

Part No.	Description	Page and Index No.
D391 1305	Coil Spring:Motor:Plate:Trailing Edge: PF4140P293A2	61 - 6
D391 1306	Coil Spring:Grip:PF4140P348A	81 - 8
D391 1307	Lever:Paper Sensor:Surface:PF4140P357C2	81 - 12
D391 1308	Coil Spring:PF4140P362A	77 - 1
D391 1309	Bushing:PF4140P371A1	81 - 7
D391 1310	Tension Spring:PF4140P391D1	79 - 12
D391 1310	Tension Spring:PF4140P391D1	93 - 13
D391 1311	Tension Spring:PF4140P407A	93 - 3
D391 1311	Tension Spring:PF4140P407A	91 - 19
D391 1312	Tension Spring:PF4140P428A	91 - 6
D391 1312	Tension Spring:PF4140P428A	95 - 13
D391 1313	Washer:PF4140P449A	89 - 2
D391 1313	Washer:PF4140P449A	87 - 4
D391 1314	Compression Spring:PF4140P451D1	89 - 3
D391 1314	Compression Spring:PF4140P451D1	87 - 5
D391 1315	Compression Spring:PF4140P453D1	87 - 6
D391 1316	Compression Spring:PF4140P462A	95 - 3
D391 1316	Compression Spring:PF4140P462A	91 - 18
D391 1317	Compression Spring:PF4140P496A	89 - 4
D391 1318	Screw:PF4140P536A1	141 - 7
D391 1319	Screw:PF4140P545A1	77 - 3
D391 1320	Compression Spring:PF4140P546A	137 - 4
D391 1321	Tension Spring:PR4140P547C1	143 - 5
D391 1322	Transport Roller:2:PF4140P560B2	147 - 5
D391 1323	Transport Roller:1:PF4140P561C2	145 - 5
D391 1324	Screw:PF4140P570A	147 - 2
D391 1324	Screw:PF4140P570A	109 - 7
D391 1324	Screw:PF4140P570A	147 - 12
D391 1325	Compression Spring:PF4140P591A	139 - 4
D391 1326	Tension Spring:PF4140P592A	147 - 1
D391 1327	Coil Spring:Roller:PF4140P606B2	127 - 15
D391 1328	Lever:Sensor:PF4140P614B2	13 - 17
D391 1328	Lever:Sensor:PF4140P614B2	117 - 5
D391 1328	Lever:Sensor:PF4140P614B2	129 - 5

Part No.	Description	Page and Index No.
D391 1329	Discharge Brush:Registration:Side: PF4140P625A	113 - 16
D391 1330	Coil Spring:Transport Roller:PF4140P632A	137 - 8
D391 1331	Transport Roller:M1:PF4140P633C3	127 - 3
D391 1332	Transport Roller:M2:PF4140P634A1	135 - 7
D391 1333	Transport Roller:M6:PF4140P635A2	133 - 3
D391 1334	Transport Roller:M7:PF4140P636B2	133 - 8
D391 1335	Transport Roller:M3:PF4140P645B1	111 - 5
D391 1336	Transport Roller:M5:PF4140P646A1	135 - 6
D391 1337	Roller:Transport:2:PF4140P651A1	117 - 8
D391 1337	Roller:Transport:2:PF4140P651A1	139 - 10
D391 1337	Roller:Transport:2:PF4140P651A1	137 - 7
D391 1337	Roller:Transport:2:PF4140P651A1	129 - 7
D391 1337	Roller:Transport:2:PF4140P651A1	111 - 4
D391 1338	Mirror:Registration:Side:PF4140P680A1	113 - 26
D391 1339	Coil Spring:Transport Roller:PF4140P700A1	129 - 8
D391 1339	Coil Spring:Transport Roller:PF4140P700A1	117 - 9
D391 1339	Coil Spring:Transport Roller:PF4140P700A1	47 - 8
D391 1339	Coil Spring:Transport Roller:PF4140P700A1	137 - 5
D391 1339	Coil Spring:Transport Roller: PF4140P700A1	11 - 3
D391 1339	Coil Spring:Transport Roller:PF4140P700A1	139 - 11
D391 1339	Coil Spring:Transport Roller:PF4140P700A1	111 - 1
D391 1340	Coil Spring:Registration:Side:PF4140P702A	113 - 13
D391 1341	Transport Roller:M4:PF4140P729B1	127 - 18
D391 1342	Link:PF4140P773A1	143 - 6
D391 1342	Link:PF4140P773A1	123 - 6
D391 1342	Link:PF4140P773A1	123 - 1
D391 1342	Link:PF4140P773A1	129 - 1
D391 1344	Mirror:PF4140P791A2	117 - 12
D391 1345	Tension Spring:PF4140P850B1	107 - 1
D391 1346	Tension Spring:PF4140P889A2	99 - 8
D391 1347	Tension Spring:PF4140P895A1	105 - 3
D391 1348	Filter:VOC:PF4140P915A	7 - 11
D391 1349	Bushing:Pipe:PF4140P943A	73 - 2

Part No.	Description	Page and Index No.
D391 1350	Collar:PF4140P958A	11 - 25
D391 1350	Roller:PF4140P958A	111 - 2
D391 1350	Roller:PF4140P958A	47 - 7
D391 1350	Roller:PF4140P958A	115 - 8
D391 1351	Torque Limiter Mechanical Clutch:500:Left: PF4140P985A	79 - 14
D391 1352	Torque Limiter Mechanical Clutch:500:Right: PF4140P986A	79 - 15
D391 1353	Bushing:PF4140P987A	95 - 6
D391 1353	Bushing:PF4140P987A	91 - 8
D391 1354	Roller:PF4140P988A	95 - 5
D391 1354	Roller:PF4140P988A	91 - 7
D391 1355	Radial Ball Bearing:Slide:PF4140P989A	71 - 4
D391 1355	Radial Ball Bearing:Slide:PF4140P989A	87 - 7
D391 1355	Radial Ball Bearing:Slide:PF4140P989A	89 - 6
D391 1356	Retaining Rings-C:PF4140P990A	91 - 21
D391 1356	Retaining Rings-C:PF4140P990A	93 - 1
D391 1357	Compression Spring:PF4140Q022A1	171 - 4
D391 1358	Torsion Spring:PF4140Q064A	181 - 9
D391 1359	Compression Spring:PF4140Q071A1	177 - 1
D391 1360	Torsion Spring:PF4140Q086A1	177 - 11
D391 1361	Paper Sensor:Surface:PR4140Q088B1	177 - 12
D391 1362	Torsion Spring:PF4140Q096B1	177 - 9
D391 1363	Flat Screw:Fix:Cutter:PF4140Q113B1	165 - 4
D391 1364	Coil Spring:Receive Plate:Cutter: PF4140Q121B1	165 - 17
D391 1369	Tension Spring:PF4140Q215A1	159 - 7
D391 1370	Compression Spring:PF4140Q234B1	163 - 25
D391 1370	Compression Spring:PF4140Q234B1	159 - 1
D391 1371	Tension Spring:PF4140A236A1	159 - 16
D391 1371	Tension Spring:PF4140A236A1	163 - 15
D391 1371	Tension Spring:PF4140A236A1	157 - 5
D391 1371	Tension Spring:PF4140A236A1	163 - 3
D391 1372	Coil Spring:Grip:PF4140Q254A1	159 - 12
D391 1373	Tension Spring:PF4140Q269A	155 - 12

Part No.	Description	Page and Index No.
D391 1375	U Conveyer Belt:PF4140Q370B2	177 - 14
D391 1379	Radial Ball Bearing:PF4140Q415A	159 - 11
D391 1379	Radial Ball Bearing:PF4140Q415A	163 - 21
D391 1380	Flange:PF4140Q417A	183 - 7
D391 1380	Flange:PF4140Q417A	155 - 13
D391 1380	Flange:PF4140Q417A	155 - 5
D391 1380	Flange:PF4140Q417A	171 - 3
D391 1380	Flange:PF4140Q417A	181 - 1
D391 1380	Flange:PF4140Q417A	177 - 17
D391 1380	Flange:PF4140Q417A	167 - 4
D391 1384	Radial Ball Bearin: Thrust:PF4140Q430A	165 - 23
D391 1385	Discharge Brush:Guide:Upper: PF4140Q432A	163 - 19
D391 1386	Compression Spring:PF4140Q436A	175 - 5
D391 1387	Tension Spring:PF4140Q437A	175 - 8
D391 1388	Paper Sensor:Surface:PF4140Q442A	183 - 2
D391 1389	Coil Spring:Sensor:PF4140Q447A	183 - 3
D391 1390	Screw:M3:PF4140Q449A	183 - 1
D391 1391	Bushing:DIA8:PF4140Q455A	161 - 4
D391 1393	Screw:PF4140Q464A	155 - 17
D391 1394	Washer:DIA8.2:PF4140Q472A	163 - 22
D391 1394	Washer:DIA8.2:PF4140Q472A	159 - 3
D391 1395	Screw Shaft:PF4140Q483A	165 - 28
D391 1396	Sheet:LED:Lock:Door:PF4140Q526B	115 - 17
D391 1397	Coil Spring:Lock:Door:Front:PF4140Q546B	115 - 14
D391 1400	Washer:DIA10:PF4140Q593A	173 - 2
D391 1403	Coil Spring:Guide:Tray:Upper Lower: PF4140Q805A1	179 - 13
D391 1404	Coil Spring:Drawer:PF4140Q811A	177 - 20
D391 1405	Screw:M3:PF4140Q813A1	177 - 4
D391 1405	Screw:M3:PF4140Q813A1	175 - 4
D391 1406	Coil Spring:Hook:PF4140Q825A	173 - 7
D391 1407	Coil Spring:Return:Paper Chip: PF4140Q826A	179 - 8
D391 1408	Coil Spring:Auxiliary:Stopper:PF4140Q844A	179 - 11

Part No.	Description	Page and Index No.
D391 1409	Coil Spring:Stopper:PF4140Q845A	179 - 12
D391 1410	Coil Spring:Stopper:Paper Chip: PF4140Q859A	171 - 2
D391 1411	Washer:3x9x5:PF4140Q860A	173 - 5
D391 1412	Magnetic:Paper Chip:PF4140Q862A	173 - 6
D391 1413	Coil Spring:Paper Chip:PF4140Q871A1	165 - 14
D391 1414	Receive Plate:Edge:PF4164K206A:Ass'y	165 - 13
D391 1421	Synchronous Belt:NS-BLT00461	155 - 11
D391 1425	Gear:Grip:Main:PF4140P382A2	91 - 22
D391 1425	Gear:GRIP:MAIN:PF4140P382A2	83 - 15
D391 1427	Torque Limiter Mechanical Clutch: PF4140Q422	155 - 32
D391 1430	Gear:Mechanical Roller Clutch:Front: PF4140P311	79 - 16
D391 1431	Gear:Mechanical Roller Clutch:Rear: PF4140P312	79 - 17
D391 1433	Gear:30Z:PF4140P997A	79 - 18
D391 1435	Sprocket:PF4140Q166	165 - 24
D391 1436	Spacer:PF4140Q182	165 - 25
D391 1437	Shaft:PF4140Q486	165 - 26
D391 1438	Lever:PF4140Q540	115 - 22
D391 1439	Link:PF4140Q541	115 - 23
D391 1440	Bracket:Lock:Solenoid:Front:PF4140Q512	115 - 24
D391 1442	Caster:PF4140P902	5 - 13
D391 1443	Holder:Caster:PF4140P903	5 - 14
D391 1444	Bracket:Caster:PF4155P096	5 - 15
D391 1446	Lever:Front:PF4140P649	137 - 12
D391 1446	Lever:Front:PF4140P649	117 - 13
D391 1446	Lever:Front:PF4140P649	129 - 14
D391 1446	Lever:Front:PF4140P649	139 - 14
D391 1447	Lever:Rear:PF4140P650	129 - 15
D391 1447	Lever:Rear:PF4140P650	137 - 14
D391 1447	Lever:Rear:PF4140P650	139 - 15
D391 1447	Lever:Rear:PF4140P650	117 - 14
D391 1448	Lever:Coil Spring:PF4140P659	117 - 15

Part No.	Description	Page and Index No.
D391 1448	Lever:Coil Spring:PF4140P659	129 - 9
D391 1449	Lever:Shaft:PF4140P660	137 - 13
D391 1449	Lever:Shaft:PF4140P660	139 - 16
D391 1449	Lever:Shaft:PF4140P660	117 - 16
D391 1449	Lever:Shaft:PF4140P660	129 - 13
D391 1460	Drive Sub-unt:Paper Chip:PF4140L392	167 - 9
D391 1470	Base:Hinge:Door:Front:PF4140P91	3 - 17
D391 1471	Arm:Hinge:Door:Front:PF4140P920	3 - 18
D391 1480	Guide Plate:Paper Exit Sub-unit:Middle: PF4140P232	59 - 21
D391 1481	Sheet:Turn:PF4140Q204	159 - 17
D391 1481	Sheet:Turn:PF4140Q204	163 - 28
D391 1482	Bracket:Stay:FFC:1:PF4140P489	93 - 18
D391 1483	Bracket:Stay:FFC:2:PF4140P490	93 - 19
D391 1484	Clamp:FFC:E450001316 (Old Type)	93 - 17
D391 1485	Clamp:FFC:E450001317 (New Type)	93 - 17
D391 1491	Gear:Z24:PF4140P387A	79 - 20
D391 1492	Pulley:T18:PF4140P998A	79 - 21
D391 1492	Pulley:T18:PF4140P998A	61 - 17
D391 1493	Gear:Grip:Main:PF4140P406A1	63 - 23
D391 1493	Gear:GRIP:MAIN:PF4140P406A1	95 - 23
D391 1493	Gear:GRIP:MAIN:PF4140P406A1	91 - 30
D391 1493	Gear:Grip:Main:PF4140P406A1	79 - 22
D391 1494	Gear:Z30:PF4140P996A	79 - 23
D391 1494	Gear:Z30:PF4140P996A	121 - 18
D391 1494	Gear:Z30:PF4140P996A	119 - 31
D391 1496	Gear:100-20-30:PF4140P488B2	79 - 24
D391 1496	Gear:100-20-30:PF4140P488B2	61 - 18
D391 1497	Gear:WORM GEAR:PF4140P383A2	91 - 23
D391 1497	Gear:WORM GEAR:PF4140P383A2	93 - 21
D391 1497	Gear:Worm Gear:PF4140P383A2	145 - 10
D391 1497	Gear:Worm Gear:PF4140P383A2	83 - 12
D391 1498	Pulley:T20:PF4140P338A1	83 - 13
D391 1499	Lever:Release:PF4140P722D1	123 - 14
D391 1499	Lever:Release:PF4140P722D1	135 - 11

Part No.	Description	Page and Index No.
D391 1501	Bracket:Shutter:Exhaust:PF4155K333	173 - 8
D391 1502	Hook:Arm:PF4140Q815A	173 - 9
D391 1503	Shaft:Gear:Worm Gear:PF4140P388	79 - 25
D391 1504	Gear:Switchback:PF4140P201A2	63 - 14
D391 1505	Cushion:PF4140Q816	173 - 10
D391 1506	Gear:PF4140P394	79 - 26
D391 1506	Gear:PF4140P394	61 - 19
D391 1507	Gear:Worm Gear:PF4140P484	79 - 19
D391 1508	Vibrating Plate:Tray:PF4155L105:Ass'y	63 - 15
D391 1509	Bracket:Plate:Cavity:PF4140K084A:Ass'y	83 - 14
D391 1510	Bracket:Plate:Core:PF4140K085A:Ass'y	81 - 16
D391 1511	Timing Pulley:PF4140Q753A1	155 - 18
D391 1512	Sheet:Discharge:PF4140Q476	165 - 19
D391 1513	Timing Pulley:S2MX20:PF4140P321	85 - 11
D391 1514	Shaft:Contact Point:Transport Sub-Unit: PF4155P695	131 - 8
D391 1515	Shaft:Idler:Transport Sub-Unit: PF4155P761	125 - 14
D391 1516	Guide Plate:Sprocket:PF4140Q148	165 - 22
D391 1519	Sprocket:PF4140L508:Ass'y	165 - 21
D391 1520	Shaft:Lock:PF3091P845	41 - 18
D391 1521	Shaft:TFD:PF3091P847	41 - 19
D391 1522	Bracket:Positioning:Sensor:PF3091P141	41 - 20
D391 1523	Arm:Lock:PF4140P120	133 - 19
D391 1523	Arm:Lock:PF4140P120	115 - 28
D391 1523	Arm:Lock:PF4140P120	47 - 22
D391 1523	Arm:Lock:PF4140P120	125 - 23
D391 1523	Arm:Lock:PF4140P120	41 - 21
D391 1525	Handle:Arm:Lock:PF4155P607	133 - 18
D391 1525	Handle:Arm:Lock:PF4155P607	115 - 27
D391 1525	Handle:Arm:Lock:PF4155P607	41 - 22
D391 1525	Handle:Arm:Lock:PF4155P607	125 - 16
D391 1526	Shaft:TFD:PF3091P846	41 - 23
D391 1527	Shaft:Lock:Guide:PF3091P843	41 - 24
D391 1528	Separation Plate:Exhaust:PF4164L852	179 - 15

Part No.	Description	Page and Index No.
D391 1529	Joint:PF2268P344	39 - 27
D391 1529	Joint:PF2268P344	43 - 30
D391 1530	Timing Pulley:Z14XS3M:PF3091P611	43 - 31
D391 1531	Transport Roller:PF3091P850	43 - 23
D391 1532	Timing Pulley:Z18XS3M:PF4051P056	37 - 23
D391 1532	Timing Pulley:Z18XS3M:PF4051P056	43 - 24
D391 1532	Timing Pulley:Z18XS3M:PF4051P056	23 - 29
D391 1532	Timing Pulley:Z18XS3M:PF4051P056	27 - 26
D391 1532	Timing Pulley:Z18XS3M:PF4051P056	33 - 21
D391 1532	Timing Pulley:Z18XS3M:PF4051P056	39 - 25
D391 1533	Transport Roller:PF3091P851	43 - 25
D391 1534	Transport Roller:PF3091P852	43 - 26
D391 1535	Transport Roller:PF3091P853	43 - 27
D391 1536	Gear:Z24:PF3091P833	43 - 28
D391 1537	Gear:Z16:PF4090P168	43 - 29
D391 1538	Guide:PF4140P129	45 - 12
D391 1539	Shaft:Roller:PF4140P117	49 - 12
D391 1539	Shaft:Roller:PF4140P117	45 - 13
D391 1540	Guide:PF4140P124	45 - 14
D391 1541	Holder:Roller:PF4140P107	45 - 15
D391 1541	Holder:Roller:PF4140P107	49 - 13
D391 1544	Timing Pulley:S2M:PF4140P631	47 - 24
D391 1544	Timing Pulley:S2M:PF4140P631	51 - 25
D391 1544	Timing Pulley:S2M:PF4140P631	135 - 13
D391 1544	Timing Pulley:S2M:PF4140P631	65 - 26
D391 1544	Timing Pulley:S2M:PF4140P631	131 - 16
D391 1544	Timing Pulley:S2M:PF4140P631	127 - 26
D391 1544	Timing Pulley:S2M:PF4140P631	125 - 24
D391 1545	Cover:Guide:PF4140P137	47 - 25
D391 1546	Guide:Entrance:PF4140P134	47 - 26
D391 1547	Guide Plate:Feed:PF4140P100	49 - 10
D391 1547	Guide Plate:Feed:PF4140P100	51 - 26
D391 1548	Bracket:Fan:PF4140P104	49 - 11
D391 1549	Guide Plate:Sub:PF4140P157	49 - 14
D391 1550	Timing Pulley:S2M:PF4140P976	53 - 13

Part No.	Description	Page and Index No.
D391 1550	Timing Pulley:S2M:PF4140P976	127 - 35
D391 1550	Timing Pulley:S2M:PF4140P976	131 - 17
D391 1550	Timing Pulley:S2M:PF4140P976	51 - 21
D391 1550	Timing Pulley:S2M:PF4140P976	125 - 25
D391 1550	Timing Pulley:S2M:PF4140P976	133 - 20
D391 1550	Timing Pulley:S2M:PF4140P976	63 - 19
D391 1552	Timing Pulley:S2M:PF4140P953	63 - 17
D391 1552	Timing Pulley:S2M:PF4140P953	51 - 24
D391 1553	Gate Plate:Entrance:PF4140P141	51 - 23
D391 1554	Guide Plate:Lower:PF4140P156	51 - 27
D391 1555	Sheet:Cover:PF4140P052	51 - 28
D391 1556	Guide Plate:Lower:PF4140P102	51 - 29
D391 1557	Guide Plate:Lower:PF4140P113	53 - 15
D391 1558	Guide:Entrance:Lower:PF4140P154	53 - 16
D391 1559	Guide:Entrance:Upper:PF4140P155	53 - 17
D391 1560	Guide:Entrance:PF4140P138	53 - 18
D391 1561	Cover:Upper:PF4140P275	55 - 6
D391 1562	Cover:Side Plate:Rear:PF4140P082	55 - 7
D391 1563	Cover:Connector:PF4140P219	55 - 8
D391 1564	Stay:Slide Rail:PF4140P014	55 - 9
D391 1565	Cover:Exit Roller:PF4140P224	59 - 22
D391 1565	Cover:Exit Roller:PF4140P224	57 - 13
D391 1566	Side Plate:Rear:Guide:Lower:PF4140K074	59 - 25
D391 1566	Side Plate:Rear:Guide:Lower:PF4140K074	57 - 14
D391 1567	Lever:Plate:PF4140P288	57 - 15
D391 1568	Lever:Plate:Trailing Edge:PF4140K116	57 - 16
D391 1569	Shaft:Lever:PF4140P287	57 - 17
D391 1570	Lever:Plate:Trailing Edge:PF4140K115	57 - 18
D391 1571	Shaft:Lever:Plate:PF4140P286	57 - 19
D391 1572	Lever:Drive:Plate:PF4140P290	57 - 20
D391 1573	Side Plate:Front:Guide:Lower:PF4140P231	57 - 21
D391 1573	Side Plate:Front:Guide:Lower:PF4140P231	59 - 31
D391 1574	Guide:Upper:PF4140P225	59 - 33
D391 1574	Guide:Upper:PF4140P225	57 - 22
D391 1575	Reflector:PF4140P235	59 - 23

Part No.	Description	Page and Index No.
D391 1577	Shaft:Tray:PF4140P103	59 - 26
D391 1578	Roller:Plate:PF4140P213	59 - 27
D391 1579	Gear:Flange Type:PF4140P133	59 - 28
D391 1580	Holder:Roller:Plate:PF4140P109	59 - 29
D391 1581	Gear:PF4140P108	59 - 30
D391 1582	Exit Roller:Tray:PF4140P228	59 - 32
D391 1583	Stay:Upper:PF4140P273	63 - 16
D391 1585	Gear:Z24:PF4140P937	63 - 21
D391 1586	Gear:PF4140P479	63 - 22
D391 1588	Shaft:Turn:PF4140P477	63 - 24
D391 1589	Gear:Z26:PF4051P025	27 - 27
D391 1589	Gear:Z26:PF4051P025	23 - 30
D391 1590	Shaft:Lock:Cover:PF3091P209	23 - 31
D391 1591	Shaft:Coupling:Feed Roller:PF3091P204	23 - 32
D391 1591	Shaft:Coupling:Feed Roller:PF3091P204	27 - 28
D391 1592	Gear:Z22:PF3091P056	23 - 33
D391 1592	Gear:Z22:PF3091P056	27 - 29
D391 1593	Gear:Z18:PF3091P099	27 - 30
D391 1593	Gear:Z18:PF3091P099	23 - 34
D391 1594	Shaft:Pickup Roller:PF3091P206	27 - 32
D391 1594	Shaft:Pickup Roller:PF3091P206	23 - 35
D391 1595	Shaft:Feed Roller:PF3091P203	27 - 33
D391 1595	Shaft:Feed Roller:PF3091P203	23 - 36
D391 1596	Gear:Z18:PF3091P054	29 - 27
D391 1596	Gear:Z18:PF3091P054	27 - 31
D391 1596	Gear:Z18:PF3091P054	23 - 37
D391 1596	Gear:Z18:PF3091P054	31 - 22
D391 1597	Guide:Bin:Upper:PF3099P009	25 - 11
D391 1598	Guide:Inner:Bin:Upper:PF3099K100	25 - 12
D391 1599	Guide:Inner:Bin:PF3099K101	25 - 13
D391 1600	Shaft:Coupling:PF3091P211	25 - 14
D391 1601	Bracket:Auxiliary:Cover:PF3091K013	25 - 15
D391 1602	Gear:Z20:PF3091P405	39 - 28
D391 1602	Gear:Z20:PF3091P405	37 - 27
D391 1602	Gear:Z20:PF3091P405	27 - 25

Part No.	Description	Page and Index No.
D391 1602	Gear:Z20:PF3091P405	29 - 35
D391 1602	Gear:Z20:PF3091P405	31 - 20
D391 1603	Gear:Z20/Z14:PF3091P063	39 - 36
D391 1603	Gear:Z20/Z14:PF3091P063	29 - 24
D391 1604	Gear:Z28:PF3091P065	37 - 20
D391 1604	Gear:Z28:PF3091P065	29 - 25
D391 1605	Gear:Z49:PF3091P098	31 - 21
D391 1605	Gear:Z49:PF3091P098	29 - 26
D391 1606	Bracket:Support:Roller:PF3091K104	29 - 28
D391 1606	Bracket:Support:Roller:PF3091K104	31 - 23
D391 1607	Guide Plate:Shaft:Separation: PF3091P183	29 - 29
D391 1608	Side Plate:Front:PF3091P105	29 - 30
D391 1609	Stay:Main:PF3091P107	29 - 31
D391 1610	Guide:Bin:PF3099K105	29 - 32
D391 1611	Guide:Pickup:Bin:Lower:PF3091K175	29 - 33
D391 1612	Side Plate:Rear:PF3091K003	29 - 34
D391 1613	Gear:Z28/14:PF3091P062	29 - 36
D391 1614	Bracket:Registration Sensor:PF3091K008	31 - 24
D391 1615	Gear:Z74:PF3091P089	33 - 20
D391 1616	Gear:Z35:PF3091P088	33 - 22
D391 1616	Gear:Z35:PF3091P088	39 - 35
D391 1617	Guide:Exit:PF3091P115	33 - 23
D391 1618	Bracket:Sensor:On Off Detector: PF3091P146	33 - 24
D391 1619	Bracket:Adjusting Pin:PF3091P134	33 - 25
D391 1620	Frame:Bin:Lower:PF3091K018	33 - 26
D391 1621	Bracket:Sensor:Bin:Lower:PF3091P144	33 - 27
D391 1622	Bracket:Rise:PF3091P137	33 - 28
D391 1623	Bracket:Sensor:PF3091P141	33 - 29
D391 1624	Spring Plate:Lock:PF2214P455	99 - 29
D391 1624	Spring Plate:Lock:PF2214P455	35 - 11
D391 1625	Gear:Z16/Z28:PF4090P241	35 - 12
D391 1626	Gear:Z28/Z16:PF3091P086	35 - 13
D391 1627	Duct:Upper:PF3091P095	35 - 14

Part No.	Description	Page and Index No.
D391 1628	Holder:Coil Spring:Auxiliary:PF3091P176	35 - 15
D391 1629	Duct:Main:PF3091P094	35 - 16
D391 1630	Bracket:DC Stepper Motor:PF3091K010	37 - 19
D391 1631	Gear:Z18:PF3091P069	37 - 21
D391 1632	Gear:Z20:PF3091P067	37 - 22
D391 1633	Bracket:Sensor:On Off Detector: PF3091P150	37 - 24
D391 1634	Bracket:Sensor:On Off Detector: PF3091P149	37 - 25
D391 1635	Bracket:Drive:Registration:PF3091P127	37 - 26
D391 1636	Gear:Z16/Z40:PF3091P404	37 - 28
D391 1637	Gear:Z16/Z60:PF3091P407	37 - 29
D391 1638	Joint:DIA6:PF3091P097	39 - 29
D391 1639	Bracket:Drive:Registration:PF3091P128	39 - 32
D391 1640	Slider:PW060050	39 - 30
D391 1641	Gear:Z30:PF3091P410	39 - 31
D391 1642	Lever:Pressure:PF3091P406	39 - 33
D391 1643	Gear:Z30:PF3091P085	39 - 34
D391 1644	Timing Pulley:T24:PF2269P057	39 - 26
D391 1645	Timing Pulley:T40:PF4140Q402	169 - 10
D391 1646	Stopper:PF4140Q579	165 - 27
D391 1648	Base:Slide:Paper Chip:PF4155L800	165 - 18
D391 1649	Arm:Roller:Inner Back:PF4140P690	127 - 20
D391 1650	Arm:Roller:Front:PF4140P691	127 - 21
D391 1652	Arm:Open And Close:PF4140P693	127 - 22
D391 1653	Roller Bearing:PF4051P347	127 - 23
D391 1654	Gear:Z24:PF4140P937	59 - 24
D391 1655	Holder:Roller:Switchback:Middle: PF4140P245	65 - 20
D391 1656	Holder:Roller:Switchback:Rear:PF4140P247	65 - 21
D391 1657	Lever:Tray:PF4140P282	65 - 22
D391 1658	Lever:PF4140P259	65 - 23
D391 1659	Holder:Roller:Switchback:Front:PF4140P246	65 - 24
D391 1660	Holder:Roller:PF4140P206	65 - 25
D391 1662	Flange:15mm:PF4099P225	111 - 16

Part No.	Description	Page and Index No.
D391 1662	Flange:15mm:PF4099P225	131 - 15
D391 1662	Flange:15mm:PF4099P225	65 - 27
D391 1662	Flange:15mm:PF4099P225	127 - 36
D391 1662	Flange:15mm:PF4099P225	133 - 23
D391 1662	Flange:15mm:PF4099P225	125 - 20
D391 1662	Flange:15mm:PF4099P225	47 - 23
D391 1662	Flange:15mm:PF4099P225	119 - 30
D391 1662	Flange:15mm:PF4099P225	135 - 14
D391 1663	Flange:18mm:PF4099P950	127 - 24
D391 1663	Flange:18mm:PF4099P950	65 - 28
D391 1663	Flange:18mm:PF4099P950	69 - 20
D391 1663	Flange:18mm:PF4099P950	143 - 16
D391 1663	Flange:18mm:PF4099P950	133 - 22
D391 1663	Flange:18mm:PF4099P950	63 - 18
D391 1663	Flange:18mm:PF4099P950	119 - 29
D391 1663	Flange:18mm:PF4099P950	107 - 14
D391 1664	Timing Pulley:T24:PF4140P242	71 - 12
D391 1664	Timing Pulley:T24:PF4140P242	65 - 29
D391 1665	Roller:Tray:PF4140P184	71 - 15
D391 1665	Roller:Tray:PF4140P184	65 - 30
D391 1666	Gear:PF4140P277	75 - 13
D391 1666	Gear:PF4140P277	67 - 18
D391 1667	Gear:PF4140P268	67 - 19
D391 1668	Roller:Spacer:PF4140P298	67 - 20
D391 1668	Roller:Spacer:PF4140P298	73 - 16
D391 1669	Gear:Switchback:PF4140P252	67 - 21
D391 1670	Gear:Z30:PF4140P957	67 - 22
D391 1671	Timing Pulley:T36:PF2210P016	67 - 23
D391 1672	Gear:PF4140P276	67 - 24
D391 1672	Gear:PF4140P276	75 - 12
D391 1673	Timing Pulley:T24:PF2217P309	69 - 19
D391 1675	Roller:Tension:PR5100P216	125 - 22
D391 1675	Roller:Tension:PR5100P216	127 - 25
D391 1675	Roller:Tension:PR5100P216	133 - 21
D391 1675	Roller:Tension:PR5100P216	177 - 30

Part No.	Description	Page and Index No.
D391 1675	Roller:Tension:PR5100P216	69 - 21
D391 1675	Roller:Tension:PR5100P216	131 - 19
D391 1675	Roller:Tension:PR5100P216	119 - 28
D391 1676	Gear:Z36:PF4140P960	69 - 22
D391 1677	Knob:DC Stepper Motor:PF4140Q196	69 - 23
D391 1678	Gear:Z20:PF4140P955	71 - 14
D391 1678	Gear:Z20:PF4140P955	69 - 24
D391 1679	Timing Pulley:T32:PF4140P297	69 - 25
D391 1681	Flange:22mm:PF4099P755	85 - 15
D391 1681	Flange:22mm:PF4099P755	71 - 13
D391 1681	Flange:22mm:PF4099P755	53 - 14
D391 1681	Flange:22mm:PF4099P755	125 - 26
D391 1681	Flange:22mm:PF4099P755	149 - 24
D391 1681	Flange:22mm:PF4099P755	147 - 23
D391 1681	Flange:22mm:PF4099P755	51 - 22
D391 1681	Flange:22mm:PF4099P755	143 - 15
D391 1681	Flange:22mm:PF4099P755	63 - 20
D391 1681	Flange:22mm:PF4099P755	131 - 18
D391 1683	Gear:PF4140P164	71 - 16
D391 1684	Gear:PF4140P175	73 - 14
D391 1685	Roller:PF4140P213	73 - 15
D391 1686	Slider:Pw080100	79 - 29
D391 1687	Plain Shaft Bearing:NS-MTL00009	101 - 12
D391 1687	Plain Shaft Bearing:NS-MTI00009	81 - 17
D391 1688	Gear:Z30:PF4155P305	81 - 18
D391 1689	Gear:Z20:PF4140P332	81 - 19
D391 1690	Timing Pulley:PF4140P322	85 - 12
D391 1691	Timing Pulley:PF4140P318	85 - 13
D391 1692	Radial Ball Bearing:NS-BRG00117	89 - 11
D391 1692	Radial Ball Bearing:NS-BRG00117	87 - 11
D391 1692	Radial Ball Bearing:NS-BRG00117	87 - 3
D391 1693	Lever:Stopper:PF4140P486	89 - 12
D391 1693	Lever:Stopper:PF4140P486	87 - 12
D391 1695	Shaft:Stopper:PF4140P441	91 - 24
D391 1696	Plain Washer:PF4140P461	91 - 25

Part No.	Description	Page and Index No.
D391 1697	Gear:Z20/Z54:PF4140P419	95 - 24
D391 1697	Gear:Z20/Z54:PF4140P419	91 - 26
D391 1698	Gear:Z16/Z28:PF4140P474	95 - 25
D391 1698	Gear:Z16/Z28:PF4140P474	91 - 27
D391 1699	Encoder:PF4140P475	91 - 28
D391 1699	Encoder:PF4140P475	95 - 21
D391 1700	Timing Pulley:T48/T18:PF4140P413	95 - 14
D391 1701	Timing Pulley:T20/T44:PF4140P414	95 - 15
D391 1702	Worm Wheel:PF4140P382	95 - 16
D391 1703	Timing Pulley:T36:PF4140P416	95 - 17
D391 1704	Frame:Base:Upper:PF4140P863	97 - 10
D391 1705	Rail:Supply:PF4140P743	97 - 11
D391 1706	Cover:Tank:PF4140P802	97 - 12
D391 1707	Frame:Base:PF4140K072	99 - 28
D391 1707	Frame:Base:PF4140K072	97 - 13
D391 1708	Tank:Supply:Glue:PF4140P878	99 - 20
D391 1708	Tank:Supply:Glue:PF4140P878	97 - 14
D391 1709	Inner Cover:Supply:PF4140P071	97 - 15
D391 1710	Side Fence:Tank:Supply:PF4140P088	97 - 16
D391 1711	Timing Pulley:T40:PF4140P740	99 - 14
D391 1712	Gear:Z18:PF4140P898	99 - 15
D391 1713	Spacer:Rack:PF4140P757	99 - 16
D391 1714	Gear:Z16:PF4140P842	103 - 14
D391 1714	Gear:Z16:PF4140P842	101 - 8
D391 1715	Gear:Z50:PF4140P899	101 - 9
D391 1716	Gear:Z50/Z16:PF4140P858	101 - 10
D391 1717	Gear:Z50/Z20:PF4051P033	101 - 11
D391 1718	Feeler:Positioning Control:Case: PF4140P853	103 - 9
D391 1719	Case:PF4140P851	103 - 10
D391 1720	Timing Pulley:T24:PF4140P930	107 - 11
D391 1721	Timing Pulley:T20:PF4048P189	127 - 27
D391 1721	Timing Pulley:T20:PF4048P189	119 - 27
D391 1721	Timing Pulley:T20:PF4048P189	131 - 14
D391 1721	Timing Pulley:T20:PF4048P189	111 - 13

Part No.	Description	Page and Index No.
D391 1721	Timing Pulley:T20:PF4048P189	125 - 19
D391 1722	Lever:Move:PF4121Q090	111 - 14
D391 1723	Link:DC Solenoid:PF4140P949	113 - 20
D391 1724	Timing Pulley:T20:PF4140P969	113 - 21
D391 1725	Flange:DIA26:PF4140P554	113 - 22
D391 1725	Flange:DIA26:PF4140P554	143 - 14
D391 1725	Flange:DIA26:PF4140P554	147 - 24
D391 1726	Timing Pulley:T30:PF4140P977	127 - 37
D391 1726	Timing Pulley:T30:PF4140P977	113 - 23
D391 1727	Joint:PF4140P553	113 - 24
D391 1728	Torsion Spring:Guide:PF4140P749	115 - 25
D391 1729	Arm:Guide:Mirror:PF4140P788	117 - 17
D391 1730	Gear:Z26:PF4140P334	121 - 20
D391 1730	Gear:Z26:PF4140P334	119 - 21
D391 1731	Gear:Z26/Z40:PF4140P677	119 - 22
D391 1731	Gear:Z26/Z40:PF4140P677	121 - 19
D391 1732	Cam:On-off:PF4140P721	119 - 23
D391 1732	Cam:On-off:PF4140P721	121 - 17
D391 1733	Gear:Z30:PF4140P669	135 - 12
D391 1733	Gear:Z30:PF4140P669	123 - 7
D391 1734	Link:On-off:PF4140P668	131 - 12
D391 1734	Link:On-off:PF4140P668	123 - 8
D391 1735	Link:PF4140P696	123 - 9
D391 1735	Link:PF4140P696	125 - 21
D391 1735	Link:PF4140P696	131 - 11
D391 1736	Bushing:Contact Point:PF4140P686	123 - 10
D391 1736	Bushing:Contact Point:PF4140P686	131 - 13
D391 1737	Torsion Spring:Guide:PF4140P793	125 - 15
D391 1739	Arm:Contact Point:Roller:PF4140P785	127 - 29
D391 1740	Gear:Z20:PF4140P590	145 - 9
D391 1740	Gear:Z20:PF4140P590	127 - 30
D391 1740	Gear:Z20:PF4140P590	147 - 22
D391 1741	Gear:Z20:PF4051P034	127 - 31
D391 1742	Bracket:Tension:PF4140K062	127 - 32
D391 1743	Stopper Pin:SP02010FPA	131 - 9

Part No.	Description	Page and Index No.
D391 1744	Stopper Pin:SP02012FPA	131 - 10
D391 1745	Timing Pulley:T20/T32:PF4140P678	143 - 13
D391 1747	Timing Pulley:T40:PF4140P966	145 - 7
D391 1748	Gear:Idler:PF4140P964	145 - 8
D391 1748	Gear:Idler:PF4140P964	147 - 21
D391 1749	Timing Pulley:T14:PF4140P515	147 - 15
D391 1749	Timing Pulley:T14:PF4140P515	149 - 25
D391 1750	Gear:Guide:Transport:PF4140P538	147 - 16
D391 1751	Timing Pulley:T24:PF4140P967	147 - 17
D391 1752	Holder:Tension:PF4140P521	147 - 18
D391 1753	Gear:Z48:PF4140P971	151 - 12
D391 1753	Gear:Z48:PF4140P971	149 - 15
D391 1753	Gear:Z48:PF4140P971	161 - 22
D391 1754	Spacer:DIA16:PF4140P564	151 - 13
D391 1754	Spacer:DIA16:PF4140P564	149 - 16
D391 1755	Gear:Z16:PF4140Q225	151 - 11
D391 1755	Gear:Z16:PF4140Q225	149 - 17
D391 1756	Gear:Z32/Z20:PF4140P588	149 - 18
D391 1757	Timing Pulley:T34:PF4140P555	149 - 19
D391 1757	Timing Pulley:T34:PF4140P555	151 - 10
D391 1758	Gear:Reverse Roller:Z60:PF4140P970	149 - 20
D391 1759	Timing Pulley:T20:PF4140Q418	155 - 20
D391 1759	Timing Pulley:T20:PF4140Q418	177 - 31
D391 1760	Gear:Z16:PF4140Q410	155 - 21
D391 1761	Timing Pulley:T16:PF4140Q755	155 - 22
D391 1762	Timing Pulley:T60/T18:PF4140Q754	155 - 23
D391 1763	Gear:Z32:PF4140Q027	155 - 24
D391 1764	Timing Pulley:T22:PF4140Q281	155 - 25
D391 1765	Timing Pulley:T52:PF4140Q008	155 - 26
D391 1766	Arm:Link:PF4140Q277	155 - 27
D391 1767	Link:Vibrating Plate:PF4140Q278	155 - 28
D391 1768	Guide:Pressure:PF4140Q233	159 - 18
D391 1769	Indicator:Coil Spring:Grip:PF4140Q255	159 - 19
D391 1770	Timing Pulley:T40:PF4140Q239	159 - 20
D391 1770	Timing Pulley:T40:PF4140Q239	163 - 31

Part No.	Description	Page and Index No.
D391 1771	Timing Pulley:T15/T40:PF4140Q238	159 - 21
D391 1771	Timing Pulley:T15/T40:PF4140Q238	163 - 33
D391 1772	Timing Pulley:T16/T48:PF4140Q237	159 - 22
D391 1772	Timing Pulley:T16/T48:PF4140Q237	163 - 32
D391 1773	Timing Pulley:T60:PF4140Q408	161 - 15
D391 1774	Handle:Grip:PF4140Q220	161 - 16
D391 1775	Gear:Z16:PF4140Q594	161 - 17
D391 1775	Gear:Z16:PF4140Q594	161 - 23
D391 1776	Timing Pulley:T36:PF4140Q401	161 - 18
D391 1777	Slider:DIA8:PW080050	161 - 19
D391 1778	Gear:Z60/T16:PF4140Q126	167 - 10
D391 1778	Gear:Z60/T16:PF4140Q126	177 - 29
D391 1779	Encoder:PF4140Q068	169 - 11
D391 1780	Gear:Z20/Z50:PF4140Q087	169 - 12
D391 1781	Worm Gear:PF4140Q019	169 - 13
D391 1782	Gear:Z44:PF4140Q812	169 - 14
D391 1783	Gear:Z32:PF4140Q020	169 - 15
D391 1784	Gear:Z28:PF4140Q411	169 - 16
D391 1785	Vibrating Plate:PF4140Q012	171 - 8
D391 1786	Slider:Tank:PF4140Q006	173 - 11
D391 1787	Nut:M6:Nt060fn2	177 - 22
D391 1788	Timing Pulley:PF4140Q048	177 - 23
D391 1789	Feeler:Stopper:PF4140Q097	177 - 24
D391 1790	Gear:Z24:PF4140Q409	179 - 21
D391 1791	Timing Pulley:T18:PF4140Q450	179 - 22
D391 1791	Timing Pulley:T18:PF4140Q450	183 - 12
D391 1792	Timing Pulley:T18:PF4140Q082	181 - 12
D391 1792	Timing Pulley:T18:PF4140Q082	183 - 11
D391 1793	Shaft:Move:PF4140P641	127 - 28
D391 1795	Bracket:Sensor:Turn:PF4140P485	61 - 20
D391 1796	Bracket:DC Stepper Motor:PF4140P202	61 - 21
D391 1797	Shaft:Transport Roller:PF4140P244	65 - 31
D391 1798	Shaft:Transport Roller:PF4140P248	65 - 32
D391 1799	Shaft:Transport Roller:PF4140P249	65 - 33
D391 1800	Shaft:Pin:PF4140P274	65 - 34

Part No.	Description	Page and Index No.
D391 1801	Shaft:Tray:PF4140P283	65 - 35
D391 1802	Shaft:Worm Gear:PF4140P279	67 - 25
D391 1803	Shaft:DC Stepper Motor:PF4140P258	67 - 26
D391 1804	Shaft:Lever:PF4140P253	67 - 27
D391 1805	Shaft:Drive:Tray:PF4140P198	69 - 26
D391 1806	Shaft:Tray:PF4140P197	69 - 27
D391 1807	Shaft:Drive:Base:PF4140P185	71 - 17
D391 1808	Shaft:Drive:Rising Tray:PF4140P192	71 - 18
D391 1809	Shaft:Tray:Auxiliary:PF4140P163	73 - 17
D391 1810	Shaft:Roller:Tray:PF4140Q720	73 - 18
D391 1811	Shaft:Roller:Tray:PF4140P180	73 - 19
D391 1812	Shaft:Move:PF4140P313	79 - 27
D391 1813	Shaft:Drive:Move:PF4140P310	79 - 28
D391 1814	Shaft:Grip:PF4140P330	81 - 20
D391 1815	Shaft:Grip:PF4140P381	83 - 16
D391 1816	Shaft:Move:PF4140P317	85 - 14
D391 1817	Shaft:Grip:PF4140P446	87 - 13
D391 1818	Shaft:Grip:PF4140P447	89 - 10
D391 1819	Shaft:Grip:PF4140P460	95 - 22
D391 1819	Shaft:Grip:PF4140P460	91 - 29
D391 1820	Shaft:Move:PF4140P493	95 - 19
D391 1821	Shaft:Move:PF4140P415	95 - 20
D391 1824	Shaft:Mixture:PF4140P854	103 - 11
D391 1825	Shaft:Glue:PF4140P862	103 - 12
D391 1826	Shaft:Timing Pulley:PF4140P817	107 - 12
D391 1827	Shaft:DIA25:PF4140P849	107 - 13
D391 1829	Shaft:Latch:PF4140P742	115 - 26
D391 1831	Shaft:Roller:Transport:PF4140P701	129 - 10
D391 1831	Shaft:Roller:Transport:PF4140P701	117 - 18
D391 1832	Shaft:Contact Point:On-off:Roller: PF4140P648	129 - 11
D391 1832	Shaft:Contact Point:On-off:Roller: PF4140P648	117 - 19
D391 1833	Shaft:Guide:Mirror:PF4140P789	117 - 20
D391 1834	Bracket:Tension:PF4140K057	119 - 24

Part No.	Description	Page and Index No.
D391 1835	Shaft:Idler:PF4155P609	119 - 25
D391 1836	Bracket:Tension:PF4140K056	119 - 26
D391 1837	Bracket:Contact Point:PF4140K068	123 - 11
D391 1838	Bracket:Contact Point:PF4140K058	123 - 12
D391 1838	Bracket:Contact Point:PF4140K058	129 - 12
D391 1839	Shaft:Drive:Transmission:PF4140P601	135 - 15
D391 1839	Shaft:Drive:Transmission:PF4140P601	123 - 13
D391 1840	Shaft:Drive:PF4140P643	131 - 20
D391 1840	Shaft:Drive:PF4140P643	125 - 17
D391 1841	Shaft:Latch:PF4140P744	125 - 18
D391 1843	Shaft:Roller:PF4140P776	127 - 33
D391 1844	Shaft:Drive:Roller:PF4140P768	127 - 34
D391 1845	Shaft:Latch:PF4155P102	133 - 17
D391 1852	Shaft:On-off:Roller:PF4140P584	139 - 17
D391 1852	Shaft:On-off:Roller:PF4140P584	137 - 11
D391 1854	Shaft:Contact Point:Roller:PF4140P667	139 - 12
D391 1855	Shaft:Drive:Transport:PF4140P557	147 - 19
D391 1856	Bracket:Motor:Transport:PF4140K016	147 - 20
D391 1857	Shaft:Drive:Guide Plate:PF4140P501	149 - 21
D391 1858	Shaft:Gear:Drive:PF4155P508	149 - 26
D391 1859	Shaft:Gear:Drive:PF4140P508	149 - 22
D391 1859	Shaft:Gear:Drive:PF4140P508	151 - 15
D391 1860	Shaft:Timing Pulley:Drive:PF4140P509	149 - 23
D391 1860	Shaft:Timing Pulley:Drive:PF4140P509	151 - 14
D391 1864	Shaft:Drive:Slide:PF4140Q261	155 - 29
D391 1865	Shaft:Vibrating Plate:PF4140Q263	155 - 30
D391 1866	Shaft:Drive:Slide:PF4140Q262	155 - 31
D391 1867	Shaft:Turn:PF4140Q205	159 - 23
D391 1867	Shaft:Turn:PF4140Q205	163 - 34
D391 1868	Shaft:Gear:Drive:Grip:PF4140Q219	161 - 20
D391 1869	Shaft:Drive:Grip:PF4140Q216	161 - 21
D391 1870	Shaft:Grip:PF4140Q251	163 - 29
D391 1871	Shaft:Tension:Synchronous Belt: PF4140Q241	163 - 30
D391 1873	Shaft:Worm Gear:PF4140Q029	169 - 17

Part No.	Description	Page and Index No.
D391 1874	Shaft:Contact Point:Hook:PF4140Q820	173 - 12
D391 1875	Shaft:Receiving Sub-unit:PF4140Q017	173 - 13
D391 1876	Shaft:Tray:Slide:PF4140Q089	177 - 25
D391 1877	Shaft:Stopper:PF4140Q095	177 - 26
D391 1878	Shaft:Drive:Tray:PF4140Q046	177 - 27
D391 1879	Shaft:Drive:Tray:PF4140Q045	177 - 28
D391 1880	Shaft:Drive:Move:PF4140Q057	179 - 23
D391 1881	Shaft:Stopper:Tray:PF4140Q841	179 - 24
D391 1882	Shaft:Stopper:Tray:PF4140Q840	179 - 25
D391 1883	Shaft:Sensor:PF4140Q063	181 - 13
D391 1884	Shaft:Receiving Sub-unit:PF4140Q039	181 - 14
D391 1885	Shaft:Drive:PF4140Q033	181 - 15
D391 1886	Shaft:Contact Point:Roller:PF3091P200	29 - 37
D391 1887	Shaft:Roller:Separation:PF3091P202	31 - 26
D391 1887	Shaft:Roller:Separation:PF3091P202	29 - 38
D391 1888	Shaft:Roller:Separation:PF3091P237	29 - 39
D391 1890	Shaft:Contact Point:Roller:PF3091P201	31 - 25
D391 1891	Shaft:Bin:Upper:PF3091P223	37 - 30
D391 1892	Shaft:Electromagnetic Clutch:PF3091P266	37 - 31
D391 1893	Shaft:Separation:PF3091P224	37 - 32
D391 1894	Shaft:Drive:Change:PF3091P235	39 - 37
D391 1895	Shaft:Drive:Change:PF3091P234	39 - 38
D391 1896	Shaft:Middle:Bin:Lower:PF3091P228	39 - 39
D391 1897	Shaft:Separation:Bin:Lower:PF3091P222	39 - 40
D391 1898	Shaft:Separation:Bin:Upper:PF3091P220	39 - 41
D391 1899	Shaft:Separation:Bin:Lower:PF3091P226	39 - 42
D391 1900	Shaft:Separation:Bin:Lower:PF3091P225	39 - 43
D391 1902	Shaft:Latch:Transport:PF4140P110	47 - 27
D391 1903	Shaft:Cam:Plate:PF4140P208	57 - 23
D391 1904	Shaft:DC Motor:PF4140P482	61 - 22
D391 1905	Harness:Interface Section:PF3091K316	35 - 17
D391 1906	Harness:Surface Of Paper Sensor: PF4140K651	57 - 24
D391 1907	Harness:Sensor:PF4140K656	67 - 28
D391 1908	Harness:Connecting:Motor:PF4140K705	71 - 19

Part No.	Description	Page and Index No.
D391 1909	Harness:Sensor:Stack:PF4140K653	71 - 20
D391 1910	Harness:Tray:PF4140K667	75 - 14
D391 1911	Harness:Mg:PF4140K792	87 - 14
D391 1912	Harness:Sensor:Supply:PF4140K695	103 - 13
D391 1913	Harness:Sensor:Roller:PF4140K733	109 - 14
D391 1914	Clamp:HARNESS:WT2-5077-000	109 - 15
D391 1915	Harness:Sensor:On-off:PF4140K671	121 - 15
D391 1916	Harness:Dc Stepper Motor:Transport:PF4140K678	121 - 16
D391 1917	Harness:Sensor:Left:PF4140K736	141 - 8
D391 1918	Harness:Sensor:Transport Sub-unit:PF4140K735	141 - 9
D391 1919	Harness:Dc Fan Motor:PF4140K775	141 - 10
D391 1920	Harness:Sensor:Right:PF4140K738	141 - 11
D391 1921	Harness:Arm:PF4140K965	153 - 3
D391 1922	Harness:Turn:PF4140K963	157 - 13
D391 1923	Arm:Stopper:PF4140Q580	165 - 20
D391 1926	Tray:Exhaust:PF4140Q030	181 - 10
D391 1927	Bracket:Exhaust:PF4140Q042	181 - 11
D391 1928	Tank:PF4140Q004	171 - 7
D391 1930	Slider:Grip:PF4140Q280	155 - 19
D391 1931	Link:Stopper:Tray:PF4140Q839	179 - 16
D391 1932	Bracket:Stopper:Tray:PF4140Q847	179 - 17
D391 1933	Link:Stopper:Tray:Auxiliary:PF4140Q850	179 - 18
D391 1934	Sheet:Cover:PF4140Q874	179 - 19
D391 1935	Stopper:Separation Plate:PF4140Q838	179 - 20
D391 1936	Bracket:Clip:PF4140K071:Peen	87 - 9
D391 1937	Bracket:Clip:PF4140K046:Peen	87 - 10
D391 1938	Tray Bottom Plate:Sub:PF4140P101	73 - 13
D391 1939	Shutter:PF4140P884	99 - 13
D391 2000	Hinge:Cover:Upper:PF4140K101A	7 - 1
D391 2001	Handle:Front:PF4140P917A	3 - 15
D391 2002	Grip:Rear:PF4155K106	5 - 7
D391 2003	Cover:Front Upper:PF4155Q505	7 - 7
D391 2004	Cover:Left:Upper:PF4155Q507	7 - 3

Part No.	Description	Page and Index No.
D391 2005	Cover:Rear:PF4155Q508	5 - 8
D391 2006	Grip:Supply:Glue:PF4140Q524A	97 - 5
D391 2007	Handle:Door:Left:PF4140Q529	3 - 8
D391 2008	Inner Cover:Upper:PF4140Q530C1	3 - 4
D391 2009	Inner Cover:Cutter:PF4140Q531E1	3 - 3
D391 2010	Inner Cover:PF4140Q532B1	7 - 5
D391 2011	Cover:Upper:Open/Close:PF4155Q533	7 - 12
D391 2013	Cover:Supply:Glue:PF4140Q535B1	97 - 6
D391 2014	Cover:Right Front:Upper:PF4155Q536	7 - 8
D391 2015	Cover:Left Front:Upper:PF4155Q538	7 - 4
D391 2015	Cover:Left Front:Upper:PF4140Q538C1	167 - 6
D391 2017	LED:Lock:Door:PF4140Q542B2	3 - 9
D391 2018	Keytop:PF4155Q544	5 - 2
D391 2019	Coil Spring:KEY:PF4140Q545A1	5 - 3
D391 2020	Decal:Caution:Hinge:PF4140Q550C2	7 - 2
D391 2021	Decal:LED:Lock:Door:PF4140Q554A	3 - 10
D391 2022	Cover:Door:Left:PF4155Q555	3 - 27
D391 2023	Door:Front Left:PF4155Q500	3 - 28
D391 2025	Bracket:Pick-up Paper Jam:Door:PF4140Q543	3 - 22
D391 2026	Holder:Wrench:PF4140P010	3 - 23
D391 2027	Wrench:19MM:PF4140P900	3 - 24
D391 2028	Door:Front Right:PF4155Q501	3 - 16
D391 2029	Inner Cover:Base:PF4140Q511	3 - 25
D391 2030	Plate:Magnetic:Door:PF4140Q510	3 - 26
D391 2031	Cover:Left:PF4155Q522	5 - 19
D391 2032	Cover:Left Lower:PF4155Q513	5 - 20
D391 2033	Cover:Right:PF4155Q506	5 - 21
D391 2034	Cover:Fan:PF4155K102	5 - 18
D391 2035	Cover:Main Swithc:PF4155Q537	5 - 22
D391 2036	Feeler:Sensor:PF4140Q523	7 - 19
D391 2037	Bracket:Holder:Filter:PF4140Q559	7 - 20
D391 2038	Cover:Rear Upper:PF4155Q534	7 - 21
D391 2039	Cover:Upper Middle:PF4155Q509	7 - 22
D391 2040	Cover:Right Upper:PF3099P808	7 - 23

Part No.	Description	Page and Index No.
D391 2053	Cover:Front:Tray:PF4155Q503	175 - 14
D391 2054	Cover:F:Tray:Pull Out:PF4155Q504	175 - 13
D391 2070	Cover:Supply:Cover:PF4140P023	99 - 17
D391 2071	Bracket:Supply:Cover:PF4140P808	99 - 18
D391 2072	Bracket:Supply:Shutter:PF4140P812	99 - 19
D391 2073	Rack:Supply:Glue:PF4140P886	99 - 21
D391 2074	Bracket:Handle:Supply:PF4140P876	99 - 22
D391 2075	Slide Rail:350mm:PF4140P940	99 - 23
D391 2076	Shutter:Supply:PF4140K050:Peen	99 - 24
D391 2077	Holder:Belt:Supply:Glue:PF4140P864	99 - 25
D391 2078	Slide Rail:630mm:PF4140P939	99 - 26
D391 2079	Bracket:Sensor:Supply:PF4140P888	99 - 27
D391 2080	Frame:Base:PF4140K047:Peen	99 - 30
D391 2081	Bracket:Protector:Glue:PF4140P836	101 - 13
D391 2082	Bracket:Supply:Cylinder:1:PF4140P868	101 - 14
D391 2083	Bracket:Supply:Cylinder:4:PF4140P086	101 - 15
D391 2084	Bracket:Supply:Cylinder:2:PF4140P867	101 - 16
D391 2085	Bracket:Supply:Cylinder:3:PF4140P029	101 - 17
D391 2086	Bracket:Supply:Transport:PF4140P885	101 - 18
D391 2087	Bracket:Glue:Tray:Upper:PF4140Q704	101 - 19
D391 2088	Bracket:Slow Down:PF4140K051:Peen	101 - 20
D391 2089	Tank:PF4140P856	103 - 15
D391 2090	Plate:PF4140Q710	103 - 16
D391 2091	Separation Sub-unit:Rubber:PF4140P896	103 - 17
D391 2092	Tank:Cover:PF4140P857	103 - 18
D391 2093	Holder:Sensor:PF4140P870	103 - 19
D391 2095	Bracket:Holder:PF4140P827	105 - 8
D391 2096	Bracket:PF4140P005	105 - 9
D391 2097	Bracket:PF4140P841	105 - 10
D391 2098	Bracket:Guide:PF4140P810	105 - 11
D391 2099	Bracket:Transport:PF4140P801	105 - 12
D391 2100	Bracket:Transport:Motor:PF4140P872	105 - 13
D391 2101	Bracket:Guide:PF4140P807	105 - 14
D391 2102	Bracket:Auxiliary:PF4140P871	105 - 15
D391 2103	Plate:Guard:PF4140P731	107 - 15

Part No.	Description	Page and Index No.
D391 2104	Holder:Receive:PF4140P813	107 - 16
D391 2105	Plate:Bearing Case:PF4140P843	107 - 17
D391 2106	Bracket:PF4140P880	107 - 18
D391 2107	Bracket:PF4140P891	107 - 19
D391 2108	Holder:Belt:Plate:PF4140P805	107 - 20
D391 2109	Plain Shaft Bearing:2510:PF4140P922	107 - 21
D391 2110	Bracket:Holder:Transport:PF4140P847	107 - 22
D391 2111	Bracket:Pulley:Front:PF4140P814	107 - 23
D391 2112	Bracket:Motor:Receive:Upper:PF4140P824	109 - 16
D391 2113	Bracket:Motor:Receive:Rear:PF4140P825	109 - 17
D391 2114	Bracket:Supporting Plate:PF4140P809	109 - 18
D391 2115	Bracket:Turn:Sensor:Plate:PF4140P800	109 - 19
D391 2116	Bracket:Receive:Lower:Plate:PF4140P823	109 - 20
D391 2117	Bracket:Holder:Upper:PF4140P822	109 - 21
D391 2118	Plate:Base:Receive:PF4140P806	109 - 22
D391 2119	Bracket:Relay:Transport:PF4140P783	109 - 23
D391 2120	Bracket:Base:Relay:PF4140P818	109 - 24
D391 2121	Holder Plate:Rubber:PF4140P828	109 - 25
D391 2122	Bracket:Coil Spring:Hook:PF4140P627	111 - 17
D391 2123	Bracket:Contact Point:PF4140K061:Peen	111 - 18
D391 2124	Bracket:Install:Guide:PF4140P736	111 - 19
D391 2125	Plate:Protect:PF4140P604	111 - 20
D391 2126	Guide:Transport:Upper:PF4140P684	111 - 21
D391 2127	Guide:Transport:PF4140P619	111 - 22
D391 2128	Guide:Side:Registration:Upper:PF4140P687	113 - 25
D391 2129	Guide:Side:Registration:PF4140P679	113 - 27
D391 2130	Base:Side:Registration:PF4140P676	113 - 28
D391 2131	Rail:2721-20:PF4140P981	113 - 29
D391 2132	Holder:Transport:Belt:PF4140P520	113 - 30
D391 2133	Bracket:PF4140K015:Peen	113 - 31
D391 2134	Guide:Transport:L2:PF4140P656	115 - 30
D391 2135	Bracket:Turn:Rear:PF4140K069:Peen	115 - 31
D391 2136	Bracket:Turn:Front:PF4140K060:Peen	115 - 32
D391 2137	Bracket:Cover:Feed:Left:PF4140P717	115 - 33
D391 2138	Ground Plate:LED:Front:Door:PF4140Q557	115 - 34

Part No.	Description	Page and Index No.
D391 2139	Bracket:Cover:Feed:Right:PF4140P716	115 - 35
D391 2140	Guide:Transport:Lower:PF4140P621	117 - 21
D391 2141	Guide:Transport:Lower:Sheet:PF4140P779	117 - 22
D391 2142	Sheet:Registration:Sensor:PF4140P796	117 - 23
D391 2143	Bracket:Sensor:PF4140K059:Peen	117 - 24
D391 2144	Plate:Harness:Cover:PF4140P622	117 - 25
D391 2145	Guide:Mirror:PF4140P790	117 - 26
D391 2146	Supporting Plate:PF4140P602	117 - 27
D391 2147	Bracket:Cam:Motor:PF4140K055:Peen	119 - 32
D391 2148	Bracket:Cam:Sensor:PF4140P708	119 - 33
D391 2149	Supporting Plate:PF4140P602	119 - 34
D391 2150	Bracket:Transport:Motor:PF4140P725	119 - 35
D391 2151	Bracket:Idler:PF4140P770	119 - 36
D391 2152	Bracket:Panel:PF4140P658	121 - 21
D391 2153	Bracket:Cam:Sensor:PF4140P762	121 - 22
D391 2154	Bracket:Cam:Motor:PF4140K055:Peen	121 - 23
D391 2155	Bracket:Transport:Motor:PF4140P724	121 - 24
D391 2156	Supporting Plate:PF4140P602	121 - 25
D391 2157	Bracket:Block Light:PF4140P638	121 - 26
D391 2158	Bracket:Install:Guide:PF4140P654	121 - 27
D391 2159	Bracket:Idler:PF4140P763	121 - 28
D391 2160	Bracket:Motor:PF4140P629	121 - 29
D391 2161	Bracket:Shift:Lever:PF4140P784	123 - 15
D391 2162	Bracket:Coil Spring:Hook:PF4140P627	123 - 16
D391 2163	Bracket:Install:Guide:PF4140P712	123 - 17
D391 2164	Bracket:Harness:Cover:PF4140P798	123 - 18
D391 2165	Bracket:Contact Point:Link:PF4140P727	123 - 19
D391 2166	Bracket:Turn:Fix:PF4140P640	125 - 27
D391 2167	Guide:Transport:Upper:PF4140P723	125 - 28
D391 2168	Bracket:Link:Base:PF4140P698	125 - 29
D391 2169	Bracket:Tension:PF4140K063:Peen	127 - 38
D391 2170	Guide:Transport:Lower:PF4140P611	129 - 16
D391 2171	Bracket:Sensor:PF4140K059:Peen	129 - 17
D391 2172	Bracket:Link:PF4140P795	131 - 21
D391 2173	Guide:Registration:PF4140P782	131 - 22

Part No.	Description	Page and Index No.
D391 2174	Guide:PF4140K054:Peen	131 - 23
D391 2175	Bracket:Spring Plate:PF4140K005:Peen	137 - 15
D391 2176	Bracket:Spring Plate:Left:PF4140P534	137 - 16
D391 2177	Block:Spring Plate:Left:PF4140P549	137 - 17
D391 2178	Bracket:Right Lower:PF4140P595	139 - 18
D391 2179	Block:Right:PF4140P550	139 - 19
D391 2180	Bracket:Right:PF4140P548	139 - 20
D391 2181	Bracket:Transport:Motor:PF4140K007:Peen	143 - 20
D391 2181	Bracket:Transport:Motor:PF4140K007:Peen	145 - 11
D391 2182	Guide:Slide:PF4140Q276	159 - 24
D391 2183	Stack:Drive:PF4140K326:Ass'y	167 - 11
D391 2184	Slide Rail:5:PF4140Q363	167 - 12
D391 2185	Plate:Wire:PF4140Q564	175 - 15
D391 2186	Guide:PF4140Q093	175 - 16
D391 2187	Plate:Slide:Plate:PF4140Q069	177 - 32
D391 2188	Tray:Slide:PF4140Q050	177 - 33
D391 2189	Arm:Turn:PF4140Q817	179 - 26
D391 2190	Arm:Turn:Plate:PF4140Q583	179 - 27
D391 2191	Slope:2:PF4140Q098	181 - 16
D391 2192	Slope:1:PF4140Q035	181 - 17
D391 2193	Cushion:Sensor:PF4140Q061	181 - 18
D391 2194	Tray:PF4140K330:Ass'y	183 - 13
D391 2195	Tray:Sheet:PF4140Q935	183 - 14
D391 2196	Harness:Main:Grip:PF4140R002	93 - 22
D391 2197	Bracket:Sensor:Transport:PF3091P818	41 - 25
D391 2197	Bracket:Sensor:Transport:PF3091P818	43 - 33
D391 2198	Bracket:Motor:PF3091P822	43 - 32
D391 2199	Grip:Feed:PF4140P125	45 - 16
D391 2200	Stay:Slide Rail:PF4140P014	45 - 17
D391 2201	Guide:Entrance:Rubber:33-44-10: PF4140P115	47 - 28
D391 2202	Bracket:Entrance:Solenoid:PF4140P158	51 - 30
D391 2203	Stay:Cover:Hinge:PF4140Q517	55 - 10
D391 2204	Bracket:Trailing Edge:Plate: Home Position Sensor:PF4140P223	57 - 25

Part No.	Description	Page and Index No.
D391 2205	Bracket:Trailing Edge:Plate:Sensor: PF4140P215	57 - 26
D391 2206	Bracket:Turn:Motor:PF4140K041:Peen	61 - 23
D391 2207	Bracket:Stopper:PF4140P207	65 - 36
D391 2208	Rubber Bushing:Stopper:PF4140P289	65 - 37
D391 2209	Rack:Set:Front:PF4140P263	65 - 38
D391 2210	Rack:Set:Rear:PF4140P267	65 - 39
D391 2211	Adjusting Plate:Front:PF4140P260	65 - 40
D391 2212	Adjusting Plate:Rear:PF4140P265	65 - 41
D391 2213	Holder:Front:Tray:PF4140P281	65 - 19
D391 2214	Bracket:Trailing Edge:Plate:Motor: PF4140P291	67 - 29
D391 2215	Bracket:Upper Lower:Motor:PF4140P257	67 - 30
D391 2216	Worm Gear:Front:Tray:PF4140K019:Peen	67 - 31
D391 2217	Uniform Part:Front:Motor:PF4140K020:Peen	67 - 32
D391 2218	Lever:Switchback:Upper Lower:PF4140P251	67 - 33
D391 2219	Stay:Upper:Main:PF4140P273	67 - 34
D391 2220	Sensor Cover:Set:PF4140P236	67 - 35
D391 2221	Plate:Plate:PF4140P392	69 - 28
D391 2222	Rubber Bushing:Plate:PF4140P393	69 - 29
D391 2223	Stay:Move:PF4140P390	69 - 30
D391 2224	Bracket:Base:Cover:PF4140P377	69 - 31
D391 2225	Tensioner:Drive:PF4140K018:Peen	69 - 32
D391 2226	Bracket:Tension:PF4140K063:Peen	69 - 33
D391 2227	Stay:B:Lower:PF4140P038	69 - 34
D391 2228	Bracket:Tray:Diode:PF4140P196	69 - 35
D391 2229	Panel:Front:Tray Bottom Plate:PF4140P183	71 - 21
D391 2230	Bracket:Tray Bottom Plate:Front:Sub: PF4140P14	71 - 22
D391 2231	Bracket:Tray Bottom Plate:Front: PF4140P127	71 - 23
D391 2232	Bracket:Tray Bottom Plate:Rear: PF4140P128	71 - 24
D391 2233	Bracket:Tray Bottom Plate:Rear:Sub: PF4140P149	71 - 25

Part No.	Description	Page and Index No.
D391 2234	Bracket:Tray:Stay:Sub:PF4140P167	71 - 26
D391 2235	Cover:Tray:Stay:Upper Lower:PF4140P299	71 - 27
D391 2236	Stay:Tray:Upper Lower:PF4140P190	71 - 28
D391 2237	Stay:Tray:Upper Lower:Auxiliary: PF4140P153	71 - 29
D391 2238	Stay:Tray:Upper Lower:Auxiliary: PF4140P116	71 - 30
D391 2239	Rack:Front:Tray:Sub:PF4140P160	73 - 20
D391 2240	Tray:Sub:PF4140K022:Peen	73 - 21
D391 2241	Tray:PF4140P174	73 - 22
D391 2242	Bracket:Tray:Main:Sub:PF4140P177	73 - 23
D391 2243	Guide:Tray:Move:PF4140P199	73 - 24
D391 2244	Bracket:Sub:Tray:Rear:PF4140P165	73 - 25
D391 2245	Bracket:Sub:Tray:Front:PF4140P162	73 - 26
D391 2246	Plate:Sub:Tray:PF4140Q711	73 - 27
D391 2247	Tray:Main:PF4140P166	73 - 28
D391 2248	Tray:Stay:PF4140P172	75 - 15
D391 2249	Bracket:Tray:Rack:Upper Front:PF4140P169	75 - 16
D391 2251	Bracket:Tray:Rack:Upper Rear:PF4140P171	75 - 18
D391 2252	Bracket:Tray:Rack:Lower:PF4140P168	75 - 17
D391 2253	Tray:Sensor:PF4140K021:Peen	75 - 19
D391 2254	Tray:Worm Gear:PF4140K019:Peen	75 - 20
D391 2255	Bracket:Sub:Grip:Stopper:PF4140Q700	77 - 7
D391 2256	Bracket:Coil Spring:Slide:PF4140P359	77 - 8
D391 2257	Bracket:Sensor:Slide:PF4140P364	77 - 9
D391 2258	Rail:2715-35:PF4140P983	77 - 10
D391 2259	Bracket:Rail:Move:PF4140P358	77 - 11
D391 2260	Plate:Tension:Motor:PF4140P379	79 - 30
D391 2261	Bracket:Motor:Upper Lower:Move: PF4140P315	79 - 31
D391 2262	Holder:Shaft:Move:PF4140P398	79 - 32
D391 2263	Bracket:Shaft:Move:Rear:PF4140P385	79 - 33
D391 2264	Bracket:Shaft:Move:Front:PF4140P386	79 - 34
D391 2265	Bracket:Move:Motor:PF4140K024:Peen	79 - 35
D391 2266	Grip:Plate:PF4140K029:Peen	81 - 21

Part No.	Description	Page and Index No.
D391 2267	Grip:Rubber:PF4140P341	81 - 22
D391 2268	Plate:Size:Move:Sensor:PF4140P353	81 - 23
D391 2269	Bracket:Sensor:PF4140K045:Peen	81 - 24
D391 2270	Bracket:Home Position Sensor:Grip: PF4140P354	81 - 25
D391 2271	Grip:Fix:PF4140P396	81 - 26
D391 2272	Bracket:Holder:Grip:PF4140P352	81 - 27
D391 2275	Rail:2715-15:PF4140P984	81 - 29
D391 2276	Bracket:Pressure Sensor:Grip:PF4140P350	81 - 30
D391 2277	Holder:Shaft:Grip:PF4140P331	81 - 31
D391 2278	Holder:Grip:PF4140P345	81 - 32
D391 2279	Rail:2715-20:PF4140P982	81 - 33
D391 2280	Bracket:Motor:Grip:PF4140K027:Peen	83 - 17
D391 2281	Frame:Upper Lower:Move:Front: PF4140P325	83 - 18
D391 2282	Frame:Upper Lower:Move:Rear: PF4140P326	83 - 19
D391 2283	Rail:2721-20:PF4140P981	83 - 20
D391 2284	Bracket:Holder:Base:PF4140P372	83 - 21
D391 2285	Bracket:Holder:Move:PF4140P366	83 - 22
D391 2286	Holder:Sub:Grip:PF4140P397	83 - 23
D391 2287	Stay:Upper Lower:Move:PF4140P324	83 - 24
D391 2288	Stay:Base:PF4140P302	85 - 16
D391 2289	Bracket:Sensor:Cover:PF4140P376	85 - 18
D391 2290	Plate:PF4140P320	85 - 19
D391 2291	Bracket:Stopper:PF4140P443	89 - 19
D391 2291	Bracket:Stopper:PF4140P443	87 - 15
D391 2292	Bracket:Pressure Sensor:PF4140P476	87 - 16
D391 2293	Bracket:PF4140K039:Peen	87 - 17
D391 2294	Plate:Shaft:PF4140P497:Peen	87 - 18
D391 2295	Plate:Main:Grip:PF4140P498:Peen	87 - 19
D391 2296	Plate:Grip:Small:PF4140P448:Peen	89 - 21
D391 2296	Plate:Grip:Small:PF4140P448:Peen	87 - 20
D391 2298	Guide Plate:Grip:Small:PF4140P442:Peen	87 - 21
D391 2298	Guide Plate:Grip:Small:PF4140P442:Peen	89 - 14

Part No.	Description	Page and Index No.
D391 2299	Block:Grip:Small:PF4140P445:Peen	87 - 22
D391 2299	Block:Grip:Small:PF4140P445:Peen	89 - 16
D391 2301	Supporting Plate:Main:Small:Grip: PF4140P339	87 - 23
D391 2301	Supporting Plate:Main:Small:Grip:PF4140P339	89 - 20
D391 2303	Bracket:Sensor:PF4140K042:Peen	89 - 15
D391 2305	Bracket:Stopper:1:PF4140K043:Peen	89 - 17
D391 2306	Bracket:Stopper:2:PF4140K044:Peen	89 - 18
D391 2308	Bracket:Protector:PF4140P328	93 - 32
D391 2310	Bracket:Main:Grip:PF4140K040:Peen	89 - 22
D391 2311	Shaft:Main:Grip:PF4140P473	89 - 23
D391 2312	Plate:Main:Grip:PF4140P499	89 - 24
D391 2313	Bracket:Slide Rail:Upper Lower:PF4140P495	95 - 33
D391 2313	Bracket:Slide Rail:Upper Lower: PF4140P495	91 - 31
D391 2314	Cover:Front:Main:Grip:PF4140P466	91 - 32
D391 2315	Block:Rail:Main:Grip:PF4140P494	91 - 33
D391 2315	Block:Rail:Main:Grip:PF4140P494	95 - 34
D391 2316	Bracket:Slide:PF4140K033:Peen	91 - 34
D391 2316	Bracket:Slide:PF4140K033:Peen	95 - 32
D391 2317	Rack:Slide:PF4140K034:Peen	91 - 35
D391 2318	Bracket:Motor:PF4140K032:Peen	91 - 36
D391 2319	Bracket:Motor:PF4140P423	91 - 37
D391 2320	Bracket:Turn:Stopper:PF4140P468	95 - 26
D391 2320	Bracket:Turn:Stopper:PF4140P468	91 - 38
D391 2321	Bracket:Cover:PF4140P483	91 - 39
D391 2322	Holder:Shaft:PF4140P420	91 - 40
D391 2322	Holder:Shaft:PF4140P420	95 - 35
D391 2323	Frame:Slide:PF4140K035:Peen	91 - 41
D391 2324	Plate:Turn:Coil Spring:PF4140P405	91 - 42
D391 2324	Plate:Turn:Coil Spring:PF4140P405	93 - 23
D391 2325	Bracket:Slide:PF4140P430	91 - 43
D391 2325	Bracket:Slide:PF4140P430	95 - 36
D391 2326	Holder:Shaft:PF4140P431	95 - 38
D391 2326	Holder:Shaft:PF4140P431	91 - 44

Part No.	Description	Page and Index No.
D391 2327	Magnet Catch:PF4130P412	91 - 45
D391 2328	Frame:Turn:PF4140K030:Peen	91 - 46
D391 2329	Bracket:Slide:PF4140P422	95 - 37
D391 2329	Bracket:Slide:PF4140P422	91 - 47
D391 2330	Bracket:Turn:Shaft:PF4140P403	91 - 48
D391 2330	Bracket:Turn:Shaft:PF4140P403	93 - 24
D391 2331	Bracket:Turn:Gear:PF4140P402	91 - 49
D391 2331	Bracket:Turn:Gear:PF4140P402	93 - 25
D391 2333	Bracket:Home Position Sensor:PF4140P465	91 - 51
D391 2334	Plate:Sensor:PF4140P463	91 - 52
D391 2334	Plate:Sensor:PF4140P463	95 - 29
D391 2335	Block:Grip:PF4140P457	91 - 50
D391 2335	Block:Grip:PF4140P457	95 - 28
D391 2339	Bracket:Home Position Sensor:Grip: PF4140P464	93 - 26
D391 2340	Bracket:Grip:Motor:PF4140K036:Peen	93 - 27
D391 2341	Bracket:Grip:Motor:PF4140P432	93 - 28
D391 2342	Bracket:Motor:Holder:PF4140P491	93 - 29
D391 2343	Bracket:Sensor:Upper Lower:Move: PF4140P434	93 - 30
D391 2344	Plate:Tension:Motor:PF4140P459	93 - 31
D391 2347	Plate:Drive:PF4140P469	95 - 27
D391 2350	Plate:Slide:Rack:PF4140P436	95 - 30
D391 2351	Rack:Slide:PF4140K037:Peen	95 - 31
D391 2352	Tank:Discharge:Seal:PF4155K817	171 - 7
D391 2361	Spacer:PF4140P745	139 - 5
D391 2361	Spacer:PF4140P745	151 - 16
D391 2361	Spacer:PF4140P745	149 - 27
D391 2361	Spacer:PF4140P745	139 - 21
D391 4000	Tray:Upper:PF3099P0P13	17 - 24
D391 4001	Cover:Tray:Upper:PF3099P016	17 - 25
D391 4002	Screw:M3x4:030040FWBI	19 - 7
D391 4002	Screw:M3x4:030040FWBI	17 - 5
D391 4003	Tapping Screw:M3x6:030060FWIT	35 - 6
D391 4003	Tapping Screw:M3x6:030060FWIT	25 - 10

Part No.	Description	Page and Index No.
D391 4003	Tapping Screw:M3x6:030060FWIT	23 - 5
D391 4003	Tapping Screw:M3x6:030060FWIT	21 - 4
D391 4003	Tapping Screw:M3x6:030060FWIT	29 - 17
D391 4005	Screw With Washer:M4x8:040080FWWS	39 - 4
D391 4005	Screw With Washer:M4x8:040080FWWS	61 - 12
D391 4005	Screw With Washer:M4x8:040080FWWS	35 - 2
D391 4006	Collar:CL060030FW	23 - 26
D391 4006	Collar:CL060030FW	31 - 8
D391 4007	Micro Switch:E120001580	33 - 2
D391 4009	Nylon Clamp:E450000075	35 - 9
D391 4011	Synchronous Belt:NS-BLT00121A	39 - 19
D391 4012	Synchronous Belt:NS-BLT00126A	39 - 20
D391 4013	Synchronous Belt:NS-BLT00166A	39 - 23
D391 4013	Synchronous Belt:NS-BLT00166A	37 - 9
D391 4014	Synchronous Belt:NS-BLT00344A	39 - 17
D391 4015	Synchronous Belt:NS-BLT00381A	39 - 11
D391 4016	Retaining Rings-C:NS-Clip00007A	33 - 10
D391 4016	Retaining Rings-C:NS-Clip00007A	23 - 16
D391 4016	Retaining Rings-C:NS-Clip00007A	39 - 3
D391 4016	Retaining Rings-C:NS-Clip00007A	27 - 7
D391 4016	Retaining Rings-C:NS-Clip00007A	37 - 4
D391 4016	Retaining Rings-C:NS-Clip00007A	43 - 14
D391 4016	Retaining Rings-C:NS-Clip00007A	41 - 13
D391 4016	Retaining Rings-C:NS-Clip00007A	31 - 11
D391 4016	Retaining Rings-C:NS-Clip00007A	35 - 7
D391 4017	Tapping Screw:M3x8:NS-SCR00026A	17 - 11
D391 4017	Tapping Screw:M3x8:NS-SCR00026A	19 - 14
D391 4018	Tapping Screw:M4x8:NS-SCR00053A	19 - 1
D391 4018	Tapping Screw:M4x8:NS-SCR00053A	21 - 3
D391 4018	Tapping Screw:M4x8:NS-SCR00053A	29 - 7
D391 4018	Tapping Screw:M4x8:NS-SCR00053A	17 - 1
D391 4019	Screw:M3:NS-SCR00206A	29 - 3
D391 4019	Screw:M3:NS-SCR00206A	25 - 2
D391 4020	Bushing:PF2166P035C	23 - 20
D391 4020	Bushing:PF2166P035C	27 - 9

Part No.	Description	Page and Index No.
D391 4020	Bushing:PF2166P035C	29 - 13
D391 4021	Tray:Upper Lower:Bin:Upper:PF3099K102	17 - 19
D391 4022	Tray:Upper Lower:Bin:Lower:PF3099K103A	19 - 10
D391 4023	Hinge:Main:PF3091K120A:Ass'y	37 - 1
D391 4024	Hinge:Sub:PF3091K122A:Ass'y	37 - 3
D391 4025	Tray Unit:Lower:PF3099K144:Ass'y	19 - *
D391 4025	Tray Unit:Lower:PF3099K144:Ass'y	15 - 5
D391 4026	Tray Unit:Upper:PF3099K152:Ass'y	17 - *
D391 4026	Tray Unit:Upper:PF3099K152:Ass'y	15 - 4
D391 4027	Spring Plate:Registration Roller:F: PF3091K172	29 - 19
D391 4027	Spring Plate:Registration Roller:F: PF3091K172	21 - 5
D391 4028	Spring Plate:Registration Roller:R: PF3091K173	21 - 6
D391 4028	Spring Plate:Registration Roller:R: PF3091K173	29 - 18
D391 4029	Cover:Front:PF3099P001	15 - 2
D391 4030	Cover:Front:Sub:PF3099P002	15 - 1
D391 4031	Cover:Rear:PF3099P003	15 - 3
D391 4032	Cover:Upper:PF3099P004	21 - 1
D391 4033	Base:Tray:Lower:PF3099P014	19 - 5
D391 4044	Tray:Base:Sub:PF3099P015	19 - 20
D391 4044	Tray:Base:Sub:PF3099P015	17 - 17
D391 4045	Cover:Tray:Lower:PF3099P017	19 - 4
D391 4046	Cover:Tray:Upper Lower:PF3099P021	17 - 14
D391 4046	Cover:Tray:Upper Lower:PF3091P021A	19 - 17
D391 4047	Guide:Tray:Upper:Front:PF3099P022	17 - 22
D391 4048	Guide:Tray:Lower:Front:PF3099P024	19 - 23
D391 4049	Arm:Pickup:Front:PF3091P026A	27 - 13
D391 4049	Arm:Pickup:Front:PF3091P026A	23 - 17
D391 4050	Arm:Pickup:Rear:PF3091P027A	27 - 18
D391 4050	Arm:Pickup:Rear:PF3091P027A	23 - 23
D391 4051	Holder:Contact Point:PF3091P028A	15 - 7
D391 4052	Lever:Open And Close:Cover:Upper:	

Part No.	Description	Page and Index No.
	PF3099P029	21 - 2
D391 4053	Link:Open And Close:Cover:Upper: PF3091P030A	23 - 1
D391 4054	Hook:Open And Close:Cover:Upper: PF3091P031A	23 - 2
D391 4055	Pawl:Lock:Cover:Upper:PF3091P032A	23 - 10
D391 4056	Lever:Open And Close:Middle: PF3091P033A	27 - 5
D391 4057	Lever:Registration Sensor:Bin:Upper: PF3091P03	21 - 11
D391 4058	Lever:Registration Sensor:Bin:Lower: PF3091P037A	31 - 13
D391 4059	Driven Roller:PF3091P039A	21 - 8
D391 4059	Driven Roller:PF3091P039A	29 - 9
D391 4060	Case:Coil Spring:Separation:PF3091P040A	29 - 15
D391 4060	Case:Coil Spring:Separation: PF3091P040A	31 - 4
D391 4061	Lever:PF3099P046	17 - 3
D391 4061	Lever:PF3091P046A	19 - 3
D391 4062	Cover:LED:PF3091P047A	17 - 16
D391 4062	Cover:LED:PF3091P047A	19 - 19
D391 4063	Lever:PF3099P048	17 - 6
D391 4063	Lever:PF3099P048	19 - 8
D391 4064	Rack:Tray:Front:PF3091P049A	17 - 13
D391 4064	Rack:Tray:Front:PF3091P049A	19 - 16
D391 4065	Rack:Tray:Rear:PF3091P050A	17 - 12
D391 4065	Rack:Tray:Rear:PF3091P050A	19 - 15
D391 4066	Cover:Sensor:Supply:PF3091P051A	17 - 21
D391 4066	Cover:Sensor:Supply:PF3091P051A	19 - 24
D391 4067	Lever:Sensor:Supply:PF3091P052A	17 - 23
D391 4067	Lever:Sensor:Supply:PF3091P052A	19 - 25
D391 4068	Bushing:Contact Point:PF3091P076A	19 - 21
D391 4068	Bushing:Contact Point:PF3091P076A	17 - 18
D391 4068	Bushing:Contact Point:PF3091P076A	17 - 4
D391 4068	Bushing:Contact Point:PF3091P076A	19 - 6

Part No.	Description	Page and Index No.
D391 4068	Bushing:Contact Point:PF3091P076A	23 - 13
D391 4069	Pawl:Lock:Cover:Upper:PF3091P077A	23 - 24
D391 4070	Lever:On Off Detector:Cover:Upper: PF3091P078A	23 - 7
D391 4071	Adjusting Plate:PF3091P079A	33 - 8
D391 4072	Control Plate:Thrust:Middle:A PF3091P082	27 - 22
D391 4073	Roller:PF3091P090A	25 - 1
D391 4074	Case:Support:Coil Spring:PF3091P091A	25 - 7
D391 4076	Balancer:PF3091P142A	17 - 7
D391 4076	Balancer:PF3091P142A	19 - 9
D391 4077	Spring Plate:Lock:Cover:Upper: PF3091P155A	23 - 4
D391 4078	Spring Plate:Earth:Cover:Upper: PF3091P156A	33 - 18
D391 4079	Spring Plate:On Off Detector:Cover:Upper: PF3091P157A	33 - 3
D391 4080	Spring Plate:Plate:Registration Roller: PF3091P159A	21 - 13
D391 4081	Spring Plate:Roller:Separation: PF3091P160A	29 - 14
D391 4081	Spring Plate:Roller:Separation: PF3091P160A	31 - 5
D391 4082	Spring Plate:Click:PF3091P161A	19 - 13
D391 4082	Spring Plate:Click:PF3091P161A	17 - 10
D391 4083	Spring Plate:Earth:Tray:PF3091P162A	17 - 20
D391 4083	Spring Plate:Earth:Tray:PF3091P162A	19 - 22
D391 4084	Roller:Separation:PF3091P300A	31 - 17
D391 4084	Roller:Separation:PF3091P300A	29 - 21
D391 4085	Paper Feed Roller:PF3091P301A	27 - 14
D391 4085	Paper Feed Roller:PF3091P301A	23 - 19
D391 4086	Pickup Roller:PF3091P302A	23 - 15
D391 4086	Pickup Roller:PF3091P302A	27 - 12
D391 4087	Registration Roller:Bin:Upper: PF3091P303A	27 - 1

Part No.	Description	Page and Index No.
D391 4089	Registration Roller:Bin:Lower:PF3091P304A	33 - 19
D391 4090	Transport Roller:PF3091P305A	27 - 2
D391 4091	Gear:Mechanical Roller Clutch: PF3091P306A	27 - 15
D391 4091	Gear:Mechanical Roller Clutch: PF3091P306A	23 - 18
D391 4092	Flange:PF3091P335A	27 - 16
D391 4092	Flange:PF3091P335A	23 - 21
D391 4093	Coil Spring:Separation Sub-Unit: PF3091P341A	29 - 16
D391 4093	Coil Spring:Separation Sub-Unit: PF3091P341A	31 - 3
D391 4094	Coil Spring:Pickup:PF3091P342A	27 - 23
D391 4094	Coil Spring:Pickup:PF3091P342A	23 - 28
D391 4095	Coil Spring:Lock:Cover:Upper: PF3091P343A	23 - 9
D391 4096	Coil Spring:Registration Sensor:BIN:Upper: PF3091P346A	21 - 9
D391 4097	Coil Spring:Registration Sensor:BIN:Lower: PF3091P347A	31 - 12
D391 4098	Coil Spring:Tension:PF3091P351A	39 - 6
D391 4099	Torque Limiter Mechanical Clutch: PF3091P357A	29 - 22
D391 4099	Torque Limiter Mechanical Clutch: PF3091P357A	31 - 18
D391 4100	Coil Spring:Auxiliary:Cover:Upper: PF3091P363A	25 - 9
D391 4101	Coil Spring:Auxiliary:Middle:PF3091P364A	35 - 8
D391 4102	Coil Spring:PF3091P400A	39 - 7
D391 4103	Coil Spring:Gear:PF3091P401A	39 - 9
D391 4104	Flange:PF4062P779A	23 - 22
D391 4104	Flange:PF4062P779A	27 - 17
D391 4105	Flange:PF4099P223A	39 - 18
D391 4105	Flange:PF4099P223A	43 - 4
D391 4106	Tapping Screw:PF4102P123C	29 - 1

Part No.	Description	Page and Index No.
D391 4107	Mechanical Roller Clutch:PR5300P429A	25 - 4
D391 4108	Bracket:PF3091P171	35 - 10
D391 4109	Stopper:Hinge:PF3091P185	37 - 18
D391 4110	Nut:PF3091P339	37 - 15
D391 4111	Screw:PF3091P352	37 - 16
D391 4111	Screw:PF3091P352	7 - 17
D391 4112	Screw:PF3091P356	37 - 17
D391 4112	Screw:PF3091P356	7 - 18
D391 4113	Duct:Upper:PF3091P095	15 - 13
D391 4114	Stopper:Open And Close:Cover: PF3091K015:PEEN	15 - 10
D391 4115	Cover:Upper:PF3099P004	15 - 12
D391 4116	Tapping Screw:M3x8:030080FWTP	15 - 11
D391 4117	Harness:Tray:Upper:PF3099K911	17 - 32
D391 4118	Side Fence:Tray:Upper:PF3099P023	17 - 28
D391 4119	Friction Pad:Pickup:PF3091P327	17 - 29
D391 4119	Friction Pad:Pickup:PF3091P327	19 - 29
D391 4121	Frame:Tray:PF3091P120	17 - 30
D391 4121	Frame:Tray:PF3091P120	19 - 30
D391 4122	Harness:Design Sketch:LED:PF3091K320	17 - 34
D391 4124	Gear:Pinion:Tray:PF3091P053	17 - 33
D391 4124	Gear:Pinion:Tray:PF3091P053	19 - 33
D391 4125	Holder:Sensor:PF3091P045	17 - 31
D391 4125	Holder:Sensor:PF3091P045	19 - 31
D391 4126	Side Fence:Tray Lower:PF3099P025	19 - 32
D391 4130	Harness:Bin Display:PF3091K326	19 - 34
D391 4134	Shaft:Registration Roller: PF3091P213	21 - 22
D391 4135	Shat:Transport Roller:PF3091P214	21 - 23
D391 4136	Guide:Bin:Upper:PF3091P111	21 - 18
D391 4137	Side Plate:Cover:Rear:PF3091P109	21 - 19
D391 4138	Stay:Cover:Upper:PF3091P110	21 - 20
D391 4139	Side Plate:Cover:Front:PF3091P108	21 - 21
D391 4140	Guide:Pickup:PF3091P007	21 - 24
D391 4141	Bracket:Motor:PF3091P179	39 - 44

Part No.	Description	Page and Index No.
D391 4500	Cover:Left Rear:PF4165Q525	5 - 16
D391 4500	Cover:Left Rear:PF4165Q525	9 - 14
D391 4502	Roller:Joint Unit:PF4165Q650A	11 - 15
D391 4503	Cover:Front Lower:PF4165Q680	9 - 7
D391 4504	Cover:Front:Joint Unit:PF4165Q681	9 - 8
D391 4505	Cover:Rear Upper:Joint Unit:PF4165Q682	9 - 15
D391 4507	Cover:Upper:Joint Unit:PF4165Q684	9 - 13
D391 4508	Cover:Rear Lower:PF4165Q683B	9 - 12
D391 4510	Hopper:Glue:PF4140R643	9 - 9
D391 4511	Ground Plate:PF4165K811A	9 - 10
D391 4512	Flat Screw:PF4102P382	9 - 11
D391 4513	Bracket:Cover:Rear:PF4165Q625	9 - 16
D391 4514	Bracket:Magnet Catch:PF4165Q626	9 - 17
D391 4515	Cover:Upper:PF4165Q618	11 - 16
D391 4516	Stay:Transport:Upper:PF4165Q604	11 - 17
D391 4517	Bracket:Transport:Front:PF4165Q607	11 - 18
D391 4518	Shaft:Roller:PF4140P618	11 - 27
D391 4518	Shaft:Roller:PF4140P618	111 - 15
D391 4518	Shaft:Roller:PF4140P618	115 - 29
D391 4519	Holder:Shaft:Rlease:PF4155P607	11 - 28
D391 4520	Torsion Spring:PF3091P347A2	13 - 5
D391 4522	Magnetic:35N:PF4132P350A1	11 - 5
D391 4523	Spring Plate:PF4132P705A	9 - 5
D391 4524	Tension Spring:PF4143P310A	13 - 11
D391 4525	Synchronous Belt:NS-BLT00452A	13 - 18
D391 4526	Shaft:Transport Sub-Unit:Front: PF4165K604	11 - 19
D391 4528	Bracket:Release:PF4140P120	11 - 26
D391 4529	Plate:Release:PF4140P637	11 - 20
D391 4530	Shaft:Release:PF4165Q651	11 - 29
D391 4531	Bracket:Transport:Rear:PF4165Q608	11 - 21
D391 4532	Stay:Transport:Lower:PF4165Q606	11 - 22
D391 4533	Shaft:Transport Sub-Unit:Rear: PF4165K605	11 - 23

Part No.	Description	Page and Index No.
D391 4534	Timing Pulley:S2MX16:PF4140P631	11 - 31
D391 4535	Flange:Timing Pulley:PF4099P225	11 - 30
D391 4536	Bracket:Shaft:Transport Roller: PF4165Q609	11 - 24
D391 4537	Bracket:Sensor:PF4140K059:PEEN	13 - 21
D391 4538	Bracket:Sensor:Release:PF4165K608	13 - 22
D391 4539	Spring Plate:Sensor:Release:PF4140P714	13 - 23
D391 4540	Timing Pulley:E450001234	13 - 24
D391 4541	Bracket:Tightener:PF4165K606	13 - 25
D391 4542	Cover:Sensor:Release:PF4165Q619	13 - 26
D391 4543	Roller:Synchronous Belt:PR5100P216	13 - 29
D391 4544	Flange:Roller:PF4099P950	13 - 30
D391 4545	Bracket:DC Stepper Motor:PF4140P629	13 - 27
D391 4546	Harness:Joint Unit:PF4165K906	13 - 16
D391 4547	Stay:Right:PF4165Q603	13 - 28
D391 5210	PCB:Surge Absorber:PF4155K936	187 - 13
D391 5250	Micro Switch:E120001934	55 - 2
D391 5251	Photointerruptor:E314000729	81 - 9
D391 5251	Photointerruptor:E314000729	93 - 11
D391 5251	Photointerruptor:E314000729	67 - 4
D391 5252	Photointerruptor:E314000804	163 - 8
D391 5253	DC Solenoid:PF2252P930	51 - 18
D391 5254	Photointerruptor:PF2286P475	163 - 18
D391 5254	Photointerruptor:PF2286P475	47 - 14
D391 5254	Photointerruptor:PF2286P475	43 - 10
D391 5254	Photointerruptor:PF2286P475	41 - 14
D391 5254	Photointerruptor:PF2286P475	99 - 1
D391 5254	Photointerruptor:PF2286P475	89 - 8
D391 5254	Photointerruptor:PF2286P475	113 - 6
D391 5254	Photointerruptor:PF2286P475	171 - 1
D391 5254	Photointerruptor:PF2286P475	93 - 5
D391 5254	Photointerruptor:PF2286P475	139 - 1
D391 5254	Photointerruptor:PF2286P475	109 - 4
D391 5254	Photointerruptor:PF2286P475	161 - 9
D391 5254	Photointerruptor:PF2286P475	157 - 10

Part No.	Description	Page and Index No.
D391 5254	Photointerruptor:PF2286P475	169 - 1
D391 5254	Photointerruptor:PF2286P475	107 - 7
D391 5254	Photointerruptor:PF2286P475	71 - 1
D391 5254	Photointerruptor:PF2286P475	83 - 10
D391 5254	Photointerruptor:PF2286P475	81 - 10
D391 5254	Photointerruptor:PF2286P475	79 - 13
D391 5254	Photointerruptor:PF2286P475	77 - 6
D391 5254	Photointerruptor:PF2286P475	75 - 7
D391 5254	Photointerruptor:PF2286P475	177 - 10
D391 5254	Photointerruptor:PF2286P475	121 - 10
D391 5254	Photointerruptor:PF2286P475	51 - 7
D391 5254	Photointerruptor:PF2286P475	177 - 3
D391 5254	Photointerruptor:PF2286P475	67 - 1
D391 5254	Photointerruptor:PF2286P475	175 - 12
D391 5254	Photointerruptor:PF2286P475	119 - 18
D391 5254	Photointerruptor:PF2286P475	61 - 4
D391 5254	Photointerruptor:PF2286P475	57 - 1
D391 5254	Photointerruptor:PF2286P475	55 - 4
D391 5254	Photointerruptor:PF2286P475	53 - 6
D391 5254	Photointerruptor:PF2286P475	87 - 1
D391 5254	Photointerruptor:PF2286P475	183 - 4
D391 5254	Photointerruptor:PF2286P475	147 - 7
D391 5254	Photointerruptor:PF2286P475	137 - 1
D391 5254	Photointerruptor:PF2286P475	13 - 6
D391 5254	Photointerruptor:PF2286P475	91 - 1
D391 5254	Photointerruptor:PF2286P475	115 - 19
D391 5254	Photointerruptor:PF2286P475	141 - 1
D391 5254	Photointerruptor:PF2286P475	103 - 7
D391 5254	Photointerruptor:PF2286P475	129 - 3
D391 5254	Photointerruptor:PF2286P475	165 - 9
D391 5254	Photointerruptor:PF2286P475	117 - 6
D391 5255	DC Stepper Motor:PF3091K335	43 - 17
D391 5256	DC Solenoid:PF4109K542	165 - 10
D391 5257	Interface Board:PF4140K614	69 - 4
D391 5258	Interface Board:PF4140K615	85 - 7

Part No.	Description	Page and Index No.
D391 5259	Interface Board:PF4140K616	83 - 11
D391 5260	Interface Board:PF4140K617	81 - 14
D391 5261	Interface Board:PF4140K618	93 - 12
D391 5262	Interface Board:PF4140K619	93 - 16
D391 5263	Interface Board:PF4140K620	93 - 10
D391 5264	Interface Board:PF4140K621	109 - 1
D391 5266	PCB:Service:PF4140K623	91 - 14
D391 5267	PCB:Switch:PF4140K624	5 - 4
D391 5268	PCB:LED:PF4140K628	115 - 18
D391 5269	DC Stepper Motor:PF4140K630	143 - 1
D391 5270	DC Stepper Motor:PF4140K631	61 - 5
D391 5270	DC Stepper Motor:PF4140K631	143 - 8
D391 5270	DC Stepper Motor:PF4140K631	67 - 11
D391 5270	DC Stepper Motor:PF4140K631	79 - 10
D391 5270	DC Stepper Motor:PF4140K631	105 - 1
D391 5270	DC Stepper Motor:PF4140K631	119 - 2
D391 5270	DC Stepper Motor:PF4140K631	47 - 17
D391 5271	DC Motor:PF4140K632	61 - 8
D391 5271	DC Motor:PF4140K632	79 - 7
D391 5272	DC Stepper Motor:PF4140K633	93 - 15
D391 5273	DC Motor:PF4140K634	119 - 20
D391 5273	DC Motor:PF4140K634	121 - 13
D391 5274	DC Solenoid:PF4140K635	113 - 14
D391 5275	DC Stepper Motor:PF4140K637	113 - 1
D391 5275	DC Stepper Motor:PF4140K637	13 - 15
D391 5275	DC Stepper Motor:PF4140K637	121 - 1
D391 5275	DC Stepper Motor:PF4140K637	109 - 8
D391 5275	DC Stepper Motor:PF4140K637	83 - 6
D391 5276	Keep Solenoid:PF4140K638	115 - 16
D391 5277	DC Motor:PF4140K643	83 - 7
D391 5277	DC Motor:PF4140K643	93 - 7
D391 5277	DC Motor:PF4140K643	145 - 1
D391 5277	DC Motor:PF4140K643	91 - 9
D391 5279	Power Supply Cord:NA:PF4140K712	187 - 1
D391 5280	PCB:Sensor:PF4140K903	165 - 1

Part No.	Description	Page and Index No.
D391 5281	Optics Sensor:Radiate:PF4140K905	157 - 11
D391 5281	Optics Sensor:Radiate:PF4140K905	165 - 11
D391 5281	Optics Sensor:Radiate:PF4140K905	151 - 3
D391 5281	Optics Sensor:Radiate:PF4140K905	103 - 6
D391 5282	Optics Sensor:Photo:PF4140K906	165 - 12
D391 5282	Optics Sensor:Photo:PF4140K906	151 - 2
D391 5282	Optics Sensor:Photo:PF4140K906	103 - 4
D391 5282	Optics Sensor:Photo:PF4140K906	163 - 12
D391 5283	Button:Release:PF4140K907	175 - 1
D391 5284	DC Stepper Motor:PF4140K915	165 - 7
D391 5285	DC Stepper Motor:PF4140K916	155 - 1
D391 5285	DC Stepper Motor:PF4140K916	161 - 7
D391 5285	DC Stepper Motor:PF4140K916	69 - 16
D391 5286	DC Stepper Motor:PF4140K917	163 - 1
D391 5286	DC Stepper Motor:PF4140K917	157 - 3
D391 5287	DC Motor:PF4140K918	169 - 3
D391 5288	Drawer:PF4140K956	175 - 3
D391 5289	Drawer:Tray:PF4140K957	177 - 21
D391 5291	Harness:Sub:Grip:PF4140R004	83 - 25
D391 5295	Micro Switch:PF4140R123	115 - 10
D391 5296	DC Stepper Motor:PF4140R405	61 - 2
D391 5296	DC Stepper Motor:PF4140R405	101 - 1
D391 5296	DC Stepper Motor:PF4140R405	149 - 2
D391 5296	DC Stepper Motor:PF4140R405	177 - 18
D391 5296	DC Stepper Motor:PF4140R405	35 - 3
D391 5296	DC Stepper Motor:PF4140R405	67 - 15
D391 5296	DC Stepper Motor:PF4140R405	167 - 2
D391 5296	DC Stepper Motor:PF4140R405	75 - 10
D391 5296	DC Stepper Motor:PF4140R405	165 - 5
D391 5297	DC Fan Motor:PF4140R406	187 - 6
D391 5297	DC Fan Motor:PF4140R406	69 - 1
D391 5297	DC Fan Motor:PF4140R406	97 - 1
D391 5297	DC Fan Motor:PF4140R406	49 - 1
D391 5298	DC Fan Motor:PF4140R409	97 - 3
D391 5298	DC Fan Motor:PF4140R409	141 - 4

Part No.	Description	Page and Index No.
D391 5299	DC Solenoid:PF4140R411	175 - 6
D391 5300	Leak Breaker:PF4140R412	187 - 4
D391 5303	Harness:Right:PF4140K783	139 - 13
D391 5305	Power Supply Unit:PF4140R403B	187 - 9
D391 5306	Harness:Move:PF4140R003	85 - 17
D391 5308	Harness:Size:Move:PF4140R005	81 - 28
D391 5310	Harness:Turn:Grip:PF4140R001	93 - 20
D391 5311	Interface Cable:Inner Assembly:PF4155K201	187 - 10
D391 5312	Harness:Connectiong:PF4155K908	187 - 11
D391 5313	Harness:Registration:PF4140K681:Ass'y	113 - 19
D391 5314	Harness:Paper Feed Sensor:PF4140K782	147 - 14
D391 5316	Harness:Dc Stepper Motor:PF4140K741	143 - 17
D391 5317	Harness:Motor:Transport Sub-unit: PF4140K740	143 - 18
D391 5318	Harness:Dc Stepper Motor:PF4140K742	143 - 19
D391 5500	PCB:Connecting:Ass'y	187 - 8
D391 5505	Eerom:Connecting:E323000483	187 - 12
D391 5510	PCB:Main:Ass'y	185 - 3
D391 5515	Eerom:Main:E323000484	185 - 4
D391 5520	PCB:Sub:Ass'y	185 - 2
D391 5530	PCB:Cutter:Ass'y	185 - 1
D391 5700	PCB:Paper Feed Unit:Ass'y	35 - 1
D391 5780	Photointerruptor:PF2286P475	23 - 14
D391 5780	Photointerruptor:PF2286P475	39 - 10
D391 5780	Photointerruptor:PF2286P475	37 - 2
D391 5780	Photointerruptor:PF2286P475	33 - 14
D391 5780	Photointerruptor:PF2286P475	31 - 6
D391 5780	Photointerruptor:PF2286P475	17 - 2
D391 5780	Photointerruptor:PF2286P475	21 - 10
D391 5780	Photointerruptor:PF2286P475	19 - 2
D391 5781	PCB:LED:PF3091K149	19 - 18
D391 5781	PCB:LED:PF3091K149	17 - 15
D391 5782	Positioning Sensor:PF3091K324	19 - 12
D391 5782	Positioning Sensor:PF3091K324	17 - 9
D391 5783	DC Stepper Motor:PF3091K330	39 - 5

Part No.	Description	Page and Index No.
D391 5784	Electromagnetic Clutch:PF3091K345	37 - 14
D391 5784	Electromagnetic Clutch:PF3091K345	39 - 16
D391 5785	DC Stepper Motor:PF3091P500	37 - 7
D391 5787	Harness:Cover:Upper:PF3091K312	21 - 17
D391 6500	Decal:Set:Glue	99 - 11
D391 6500	Decal:Set:Glue	99 - 12
D391 6500	Decal:Set:Glue	97 - 8
D391 6500	Decal:Set:Glue	97 - 9
D391 6510	Decal:Set:Lever:1	41 - 17
D391 6510	Decal:Set:Lever:1	45 - 10
D391 6510	Decal:Set:Lever:1	47 - 21
D391 6510	Decal:Set:Lever:1	63 - 13
D391 6510	Decal:Set:Lever:1	125 - 13
D391 6510	Decal:Set:Lever:1	41 - 16
D391 6510	Decal:Set:Lever:1	115 - 21
D391 6510	Decal:Set:Lever:1	133 - 15
D391 6520	Decal:Set:Lever:2	3 - 14
D391 6520	Decal:Set:Lever:2	45 - 11
D391 6530	Decal:Set:Paper Jam	7 - 13
D391 6530	Decal:Set:Paper Jam	97 - 7
D391 6530	Decal:Set:Paper Jam	5 - 11
D391 6530	Decal:Set:Paper Jam	167 - 8
D391 6530	Decal:Set:Paper Jam	5 - 10
D391 6530	Decal:Set:Paper Jam	3 - 11
D391 6530	Decal:Set:Paper Jam	3 - 12
D391 6530	Decal:Set:Paper Jam	41 - 15
D391 6540	Decal:Set:Paper Feed	21 - 16
D391 6540	Decal:Set:Paper Feed	19 - 28
D391 6540	Decal:Set:Paper Feed	19 - 27
D391 6540	Decal:Set:Paper Feed	17 - 27
D391 6540	Decal:Set:Paper Feed	17 - 26
D391 6546	Decal:Grip:MK1	27 - 24
D391 6547	Decal:Cover:Paper Feed	19 - 26
D391 6550	Decal:Set:Joint Unit	13 - 1
D391 6550	Decal:Set:Joint Unit	11 - 7

Part No.	Description	Page and Index No.
D391 6560	Decal:Caution:Press:1	163 - 26
D391 6561	Decal:Caution:Press:2	163 - 27
D391 6562	Decal:Caution:Cutter	165 - 16
D391 6563	Decal:H-Temp Warning:Glue	109 - 13
D391 6564	Decal:Caution:Paper Exit Sub-Unit	3 - 13
D391 6565	Decal:Caution:Power Supply Plug	5 - 12

Part No.	Description	Page and Index No.
B660 1111	Magnet Catch	45 - 4
B660 1111	Magnet Catch	13 - 3
B660 1212	Lever:Coupling:PF4147P197A	13 - 20
B660 1436	Bracket:Ground Plate:PF4147P139A	13 - 19
B660 1651	Sensor Lever	41 - 12
B660 1651	Sensor Lever	43 - 13
B660 1768	Guide Plate:Connecting:PF4147P818A	9 - 18
B660 1795	Magnet Catch	99 - 4
B660 2815	Spacer:PF4099P337	67 - 6
B660 4148	Coupling Bracket - Rear	3 - 29
B660 4149	Coupling Bracket - Front	3 - 30
B660 4161	Right Cover Sponge	9 - 2
B660 4511	Screw:030040FNBI	163 - 13
B660 4511	Screw:030040FNBI	157 - 12
B660 4521	Screw:030080FNBI	163 - 24
B660 4521	Screw:030080FNBI	159 - 2
B660 4572	Screw:040040FNBI	81 - 6
B660 4581	Screw:NS-SCR00080A	13 - 12
B660 4636	Spacer:PW060050	163 - 6
B660 4636	Spacer:PW060050	157 - 8
B660 4636	Spacer:PW060050	115 - 20
B660 4711	Parallel Pin:HP020080SCH	29 - 10
B660 4711	Parallel Pin:HP020080SCH	29 - 23
B660 4711	Parallel Pin:HP020080SCH	31 - 19
B660 4715	Parallel Pin:HP020120SCH	47 - 18
B660 4715	Parallel Pin:HP020120SCH	43 - 3
B660 4715	Parallel Pin:HP020120SCH	51 - 13
B660 4715	Parallel Pin:HP020120SCH	39 - 14
B660 4715	Parallel Pin:HP020120SCH	67 - 17
B660 4715	Parallel Pin:HP020120SCH	57 - 11
B660 4715	Parallel Pin:HP020120SCH	69 - 11
B660 4715	Parallel Pin:HP020120SCH	37 - 13
B660 4715	Parallel Pin:HP020120SCH	71 - 9
B660 4715	Parallel Pin:HP020120SCH	73 - 6
B660 4715	Parallel Pin:HP020120SCH	33 - 15

Part No.	Description	Page and Index No.
B660 4715	Parallel Pin:HP020120SCH	59 - 7
B660 4715	Parallel Pin:HP020120SCH	65 - 2
B660 4715	Parallel Pin:HP020120SCH	61 - 14
B660 4715	Parallel Pin:HP020120SCH	53 - 11
B660 4715	Parallel Pin:HP020120SCH	63 - 7
B660 4715	Parallel Pin:HP020120SCH	27 - 19
B660 4715	Parallel Pin:HP020120SCH	127 - 4
B660 4715	Parallel Pin:HP020120SCH	23 - 39
B660 4715	Parallel Pin:HP020120SCH	149 - 12
B660 4715	Parallel Pin:HP020120SCH	135 - 9
B660 4715	Parallel Pin:HP020120SCH	133 - 16
B660 4751	Nut:NT040FN2	33 - 9
B660 4811	External Circlip:NS-CLP00001A	31 - 14
B660 4811	External Circlip:NS-CLP00001A	21 - 12
B660 4815	External Circlip:NS-CLP00003A	127 - 12
B660 4815	External Circlip:NS-CLP00003A	23 - 6
B660 4815	External Circlip:NS-CLP00003A	27 - 11
B660 4815	External Circlip:NS-CLP00003A	43 - 20
B660 4815	External Circlip:NS-CLP00003A	65 - 17
B660 4815	External Circlip:NS-CLP00003A	29 - 20
B660 4815	External Circlip:NS-CLP00003A	59 - 5
B660 4815	External Circlip:NS-CLP00003A	13 - 7
B660 4815	External Circlip:NS-CLP00003A	31 - 15
B660 4821	External Circlip:NS-CLP00008A	117 - 10
B660 4821	External Circlip:NS-CLP00008A	127 - 5
B660 4831	Screw:NS-SCR00016A	21 - 14
B660 4831	Screw:NS-SCR00016A	31 - 2
B660 4831	Screw:NS-SCR00016A	101 - 2
B660 4831	Screw:NS-SCR00016A	29 - 4
B660 4831	Screw:NS-SCR00016A	29 - 6
B660 4831	Screw:NS-SCR00016A	33 - 13
B660 4835	Screw:NS-SCR00045A	71 - 11
B660 4835	Screw:NS-SCR00045A	97 - 4
B660 4835	Screw:NS-SCR00045A	91 - 12
B660 4835	Screw:NS-SCR00045A	171 - 6

Part No.	Description	Page and Index No.
B660 4835	Screw:NS-SCR00045A	179 - 7
B660 4835	Screw:NS-SCR00045A	181 - 8
B660 4835	Screw:NS-SCR00045A	29 - 2
B660 4835	Screw:NS-SCR00045A	9 - 1
B660 4835	Screw:NS-SCR00045A	5 - 17
B660 4835	Screw:NS-SCR00045A	5 - 6
B660 4835	Screw:NS-SCR00045A	13 - 9
B660 4835	Screw:NS-SCR00045A	15 - 6
B660 4835	Screw:NS-SCR00045A	15 - 9
B660 4835	Screw:NS-SCR00045A	21 - 15
B660 4835	Screw:NS-SCR00045A	23 - 12
B660 4835	Screw:NS-SCR00045A	27 - 6
B660 4835	Screw:NS-SCR00045A	7 - 9
B660 4835	Screw:NS-SCR00045A	7 - 14
B660 4835	Screw:NS-SCR00045A	31 - 1
B660 4835	Screw:NS-SCR00045A	37 - 8
B660 4835	Screw:NS-SCR00045A	3 - 20
B660 4835	Screw:NS-SCR00045A	41 - 10
B660 4835	Screw:NS-SCR00045A	47 - 16
B660 4841	Screw:NS-SCR00202A	11 - 11
B660 4846	Bushing:NS-MTL00004A	39 - 2
B660 4847	Bushing:NS-MTL00009A	29 - 12
B660 4847	Bushing:NS-MTL00009A	27 - 8
B660 4847	Bushing:NS-MTL00009A	37 - 10
B660 4847	Bushing:NS-MTL00009A	31 - 16
B660 4847	Bushing:NS-MTL00009A	33 - 11
B660 4847	Bushing:NS-MTL00009A	23 - 11
B660 4847	Bushing:NS-MTL00009A	35 - 5
B660 4847	Bushing:NS-MTL00009A	39 - 13
B660 5451	No.2 Entrance Sensor	59 - 19
B660 5451	No.2 Entrance Sensor	117 - 3
B660 5451	No.2 Entrance Sensor	113 - 17
B830 1135	Screw	13 - 8
B830 7511	Guide Plate:Connecting:Lower	9 - 19

