

LCIT PB3050 (D352)

LCIT PB3050 (D352)


PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.Exterior 1 (D352)	2
2.Exterior 2 (D352)	4
3.Right Tray 1 (D352)	6
4.Right Tray 2 (D352)	8
5.Left Tray (D352)	10
6.Paper Feed Section (D352)	12
7.Electrical Section (D352)	14
8.Drive Section (D352)	16
Parts Index	20

June ,18 ' 2008

1.Exterior 1 (D352)

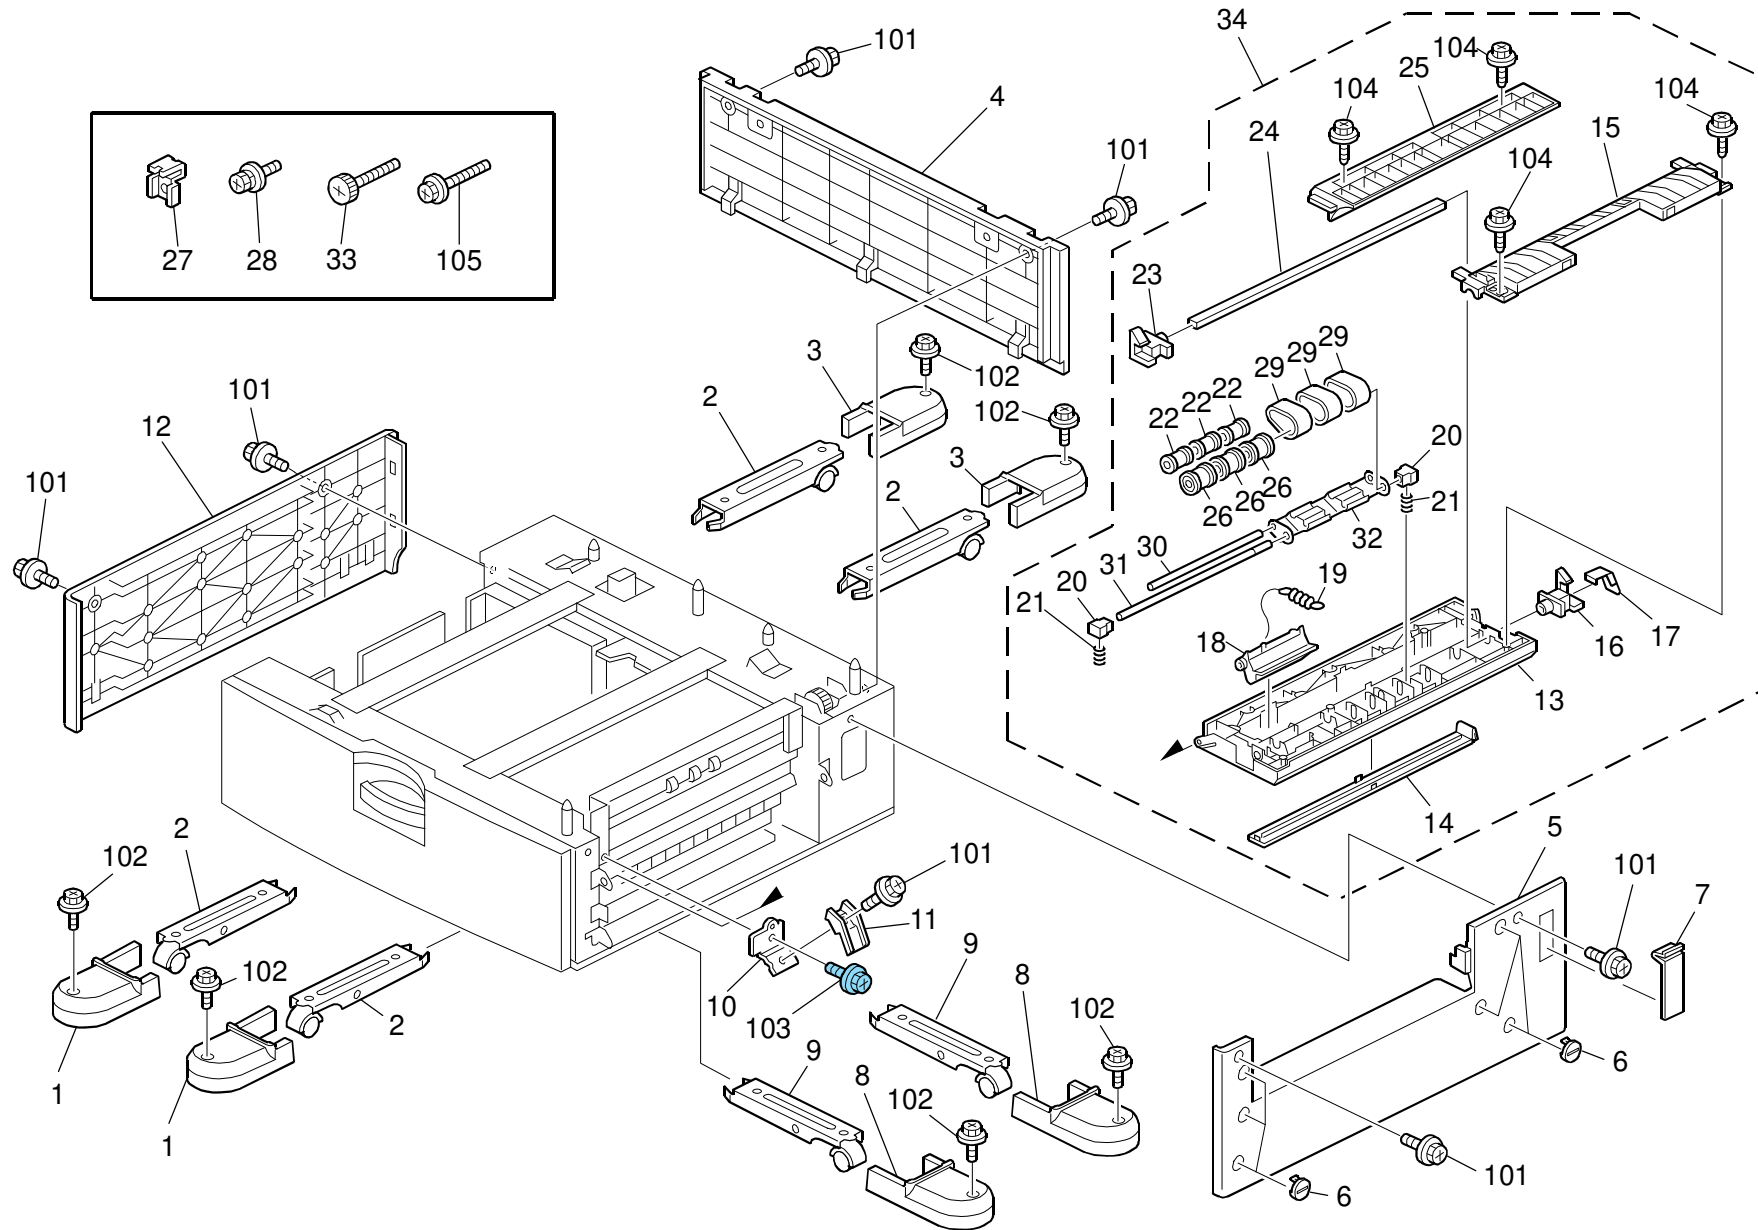


1.Exterior 1 (D352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B800 6115	Cover:Arm:Front	2
2	B800 6110	Arm Ass'y	4
3	B800 6117	Cover:Arm:Rear	2
4	B801 1281	Cover - Rear	1
5	D352 1272	Right Cover	1
6	D352 1273	Cap - Cover	6
7	D352 2564	Connector Cover - LCT	1
8	D351 6122	Arm Cover - Right	2
9	D351 6120	Arm Ass'y	1
10	D352 2581	Upper Stopper - Vertical Transport	1
11	D352 2583	Lower Topper - Vertical Transpor	1
12	B801 1260	Cover - Left	1
13	D352 2562	Cover:Vertical Transport	1
14	D352 2555	Cover - Transport Guide	1
15	D352 2558	Guide:Vertical Transport:Upper	1
16	G832 2584	Rear Hook	1
17	G832 2570	Ground Plate	1
18	D352 2557	Lever - Vertical Transport	1
19	AA06 2347	Spring - Vertical Transport Lever	1
20	G060 2652	Bushing - M4	2
21	AA06 3930	Compression Spring:Transport Roller	2
22	D009 2574	Pulley - Idler	3
23	G832 2583	Front Hook	1
24	G832 2582	Shaft	1
25	D352 2561	Guide:Vertical Transport:Lower	1
26	D009 2573	Pulley - Vertical Transport	3
27	G832 8510	Coupling Bracket	2
28	G832 7900	Screw:Spring Washer:Round Point:M4x10	1
29	D029 2677	Transport Belt:Driven:Vertical Transport	3
30	D009 2575	Shaft - Idler	1
31	D009 2576	Shaft - Vertical Transport	1
32	D009 2571	Holder - Vertical Transport	1
33	AA14 3575	Flat Screw:Knob Screw:M4x10	3
34	D352 2550	Guide:Vertical Transport:Ass'y	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3008N	Tapping Screw - M3x8	
102	0360 3006N	Screw - M3x6	
103	0454 3006Q	Tapping Screw - M3x6	
104	0450 3010N	Tapping Screw - M3x10	
105	0360 4010N	Screw:M4x10	

2.Exterior 2 (D352)

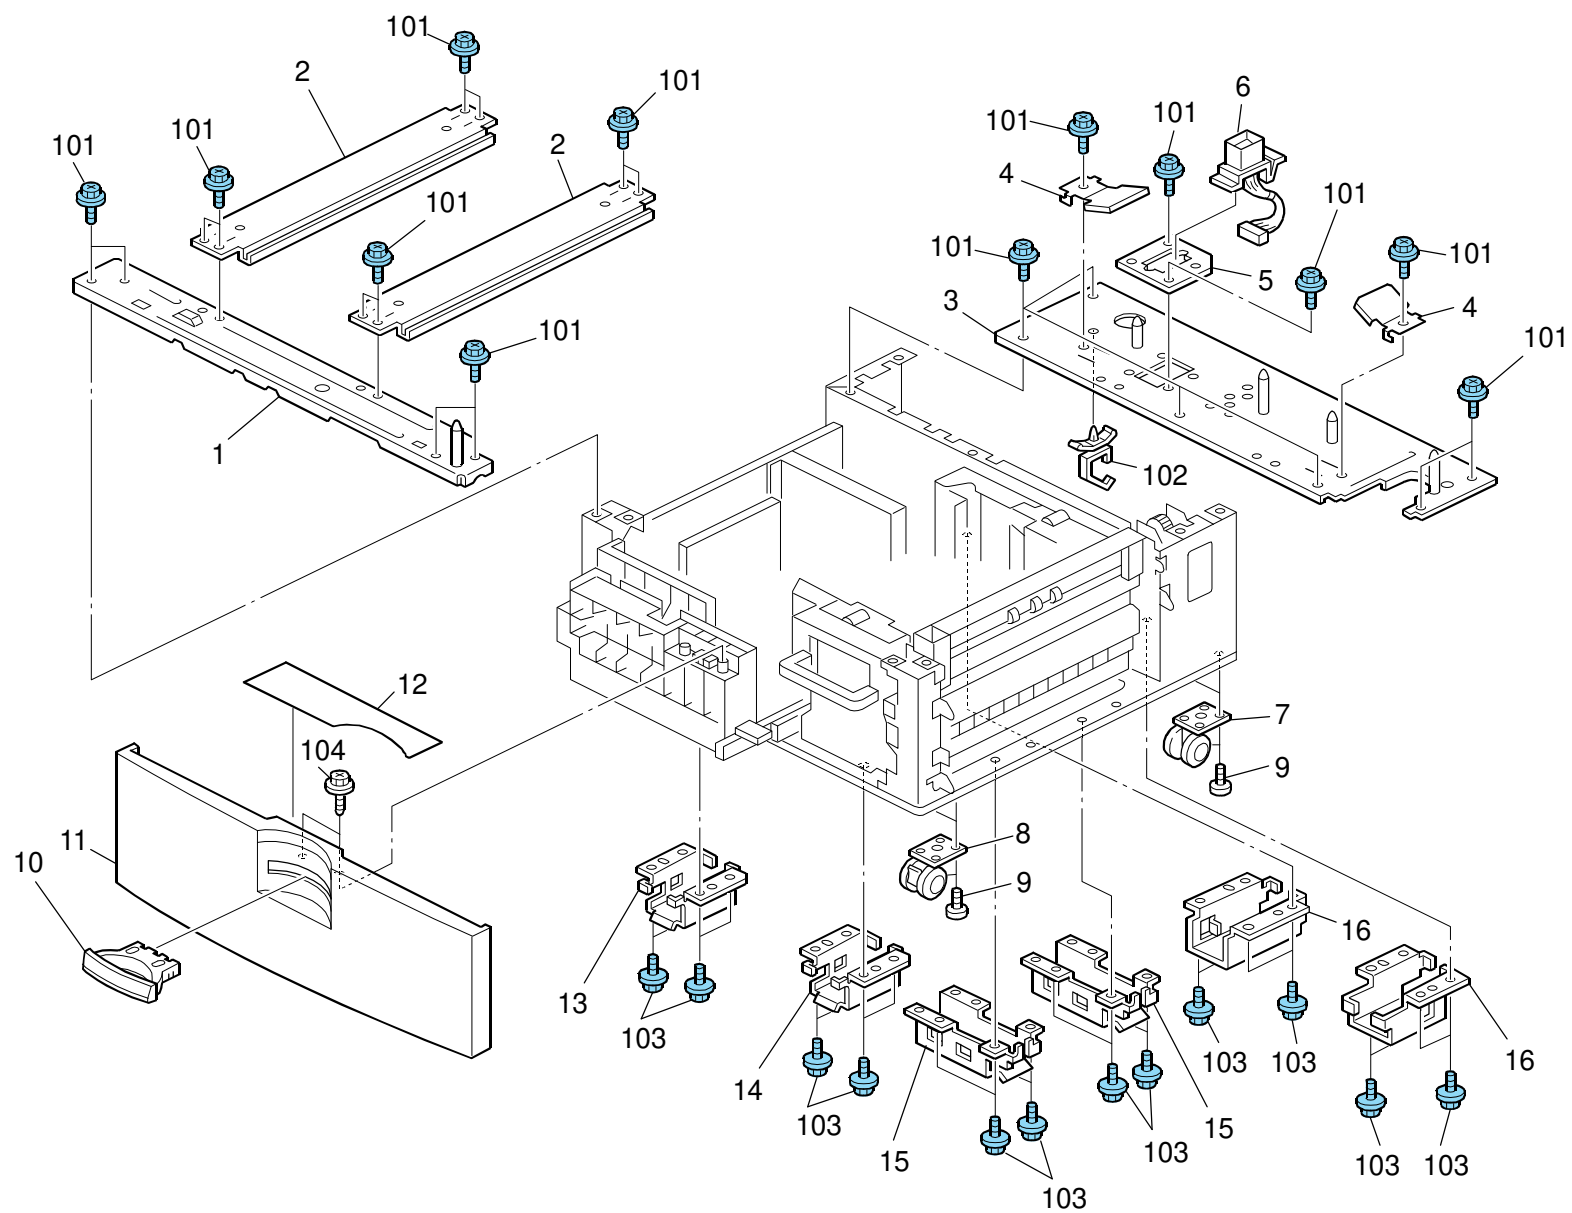


2.Exterior 2 (D352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B800 1133	Stay:Upper Front:Peen	1
2	B801 1117	Upper Stay - Front Rear	2
3	D351 1143	Stay:Upper Rear	1
4	B384 1146	Spring Plate	2
5	G832 1146	Connector Bracket	1
6	B801 5312	Harness - Interface Cable	1
7	AH01 2037	Caster	2
8	AH01 2036	Caster:DIA50H59:Stopper:Yes	2
9	B800 1103	Pan Head Screw - M5x5	8
10	B223 2860	Paper Tray Grip	1
11	B801 2793	Cover - LCT Front	1
12	B801 2795	Sheet - Paper Set Direction	1
13	B801 6127	Arm Bracket - Front Left	1
14	B801 6128	Arm Bracket - Front Right	1
15	B800 6123	Bracket:Arm:Remover/install:Right	2
16	B801 6126	Bracket:Arm:Remover/install:Rear Right	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	1105 0516	Clamp	
103	0454 4008Q	Tapping Screw - M4x8	
104	0450 3010N	Tapping Screw - M3x10	



3.Right Tray 1 (D352)

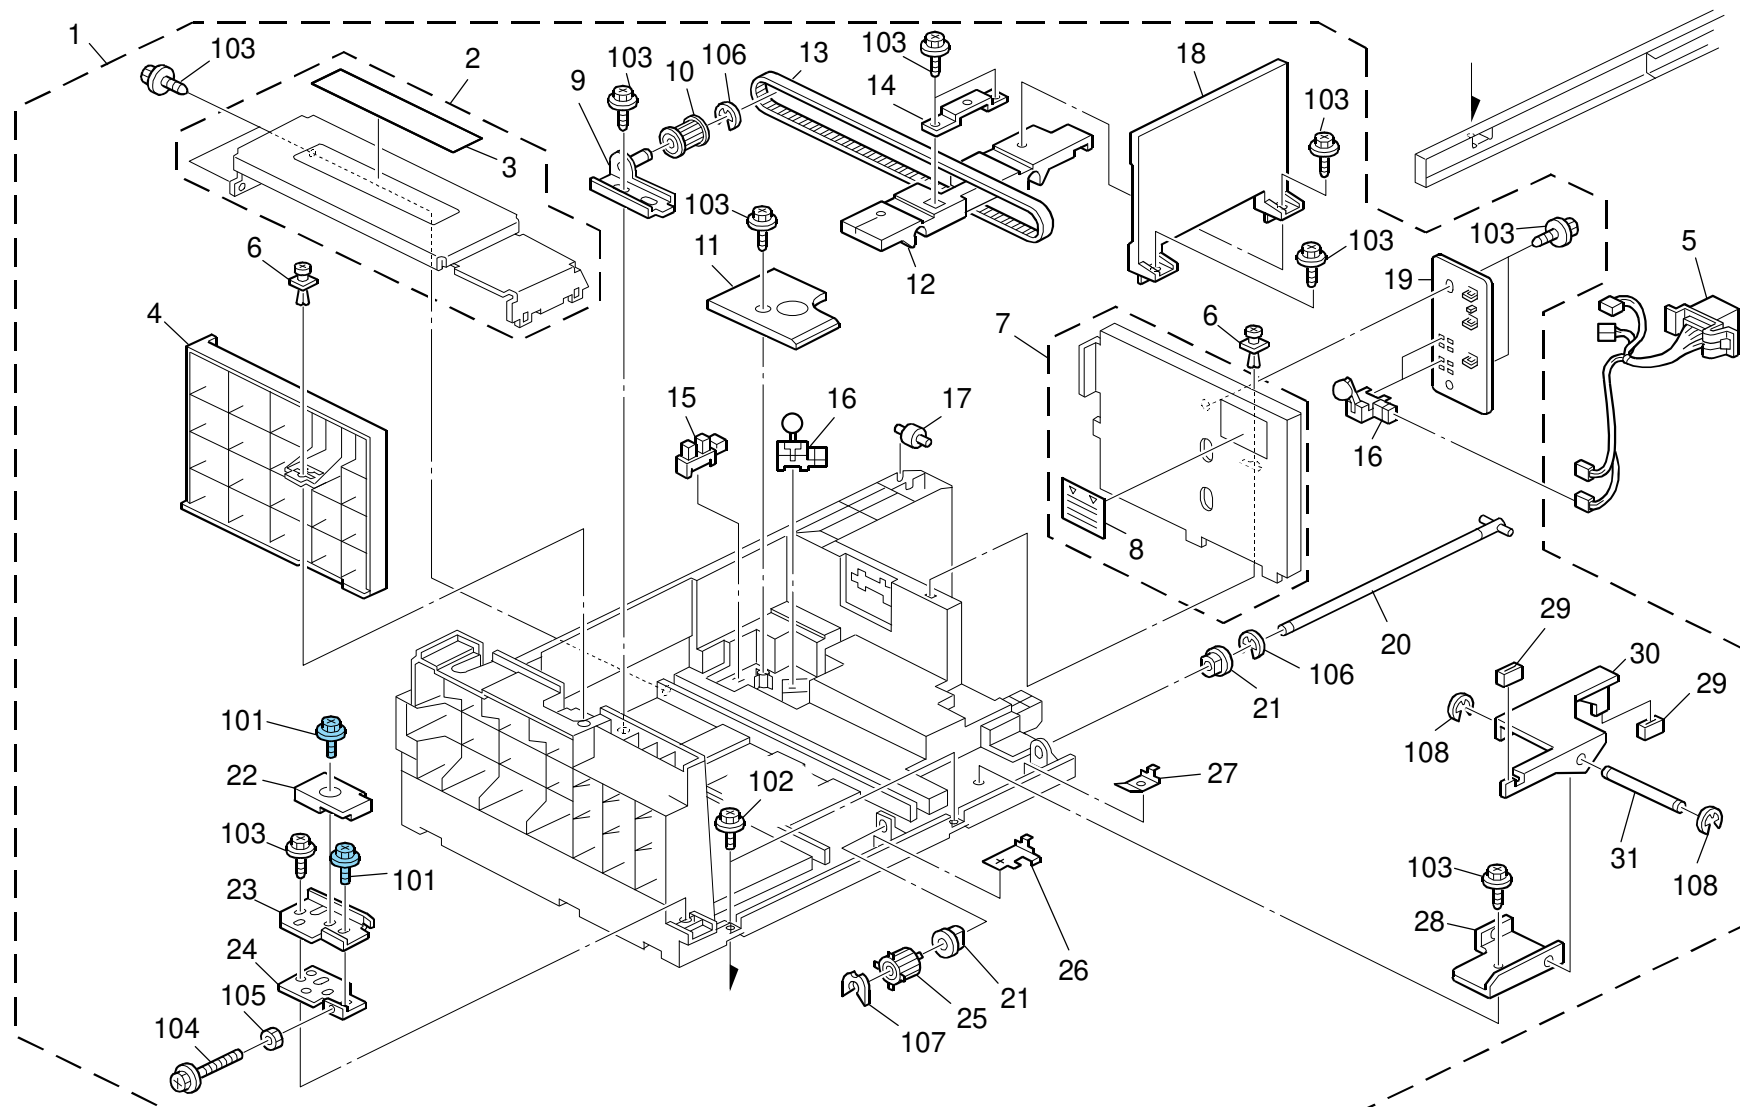




3.Right Tray 1 (D352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B801 2711	Tandem LCT Unit - Left	1
2	B801 2742	Timing Belt Cover	1
3	AA00 0715	Decal - Left Paper Set	1
4	B801 2758	Side Fence - Left Front	1
5	B801 5311	Harness - Tandem Tray	1
6	G569 2761	Rivet - 31J5	2
7	B801 2753	Side Fence - Left Rear	1
8	AA00 0713	Decal - Side Fence Rear	1
9	B801 2735	Timing Belt Bracket	1
10	AB03 3085	Timing Pulley - 15T	1
11	B801 2748	Cover:Positioning Sensor	1
12	B801 2744	Back Fence Slider	1
13	AA04 3599	Timing Belt - 60S3M588	1
14	B801 2746	Timing Belt Slider Stopper	1
15	AW02 0145	Photointerruptor:Flat	1
16	AW02 0162	Photointerruptor:Paper Volume Sensor	3
17	A232 2987	Roller - Paper Tray	1
18	B801 2745	Back Fence	1
19	B801 2756	Paper Volume Sensor Bracket	1
20	B801 2730	Shaft - Slider Drive	1
21	AA08 2101	Bushing - 6x10x6	2
22	B801 2727	Tray Cover Plate- Right	1
23	B801 2726	Tray Plate - Right	1
24	B801 2728	Tray Plate Bracket - Right	1
25	AB03 0787	Timing Pulley - 15T	1
26	B801 2811	Ground Plate - Cover Timing Belt	1
27	B801 2812	Ground Plate - Joint Drive	1
28	B801 2762	Lever Lock Bracket	1
29	B801 2765	Lever Cap	2
30	B801 2764	Coupling Lever	1
31	B801 2763	Lock Lever Shaft	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0451 3008N	Tapping Screw - M3x8	
103	0450 3010N	Tapping Screw - M3x10	
104	0360 3010N	Screw:M3x10	
105	0711 0030N	Hexagonal Nut:M3	
106	0720 0040E	Retaining Ring - M4	
107	0805 0089	Retaining Ring - M4	
108	0720 0030E	Retaining Ring - M3	

4.Right Tray 2 (D352)

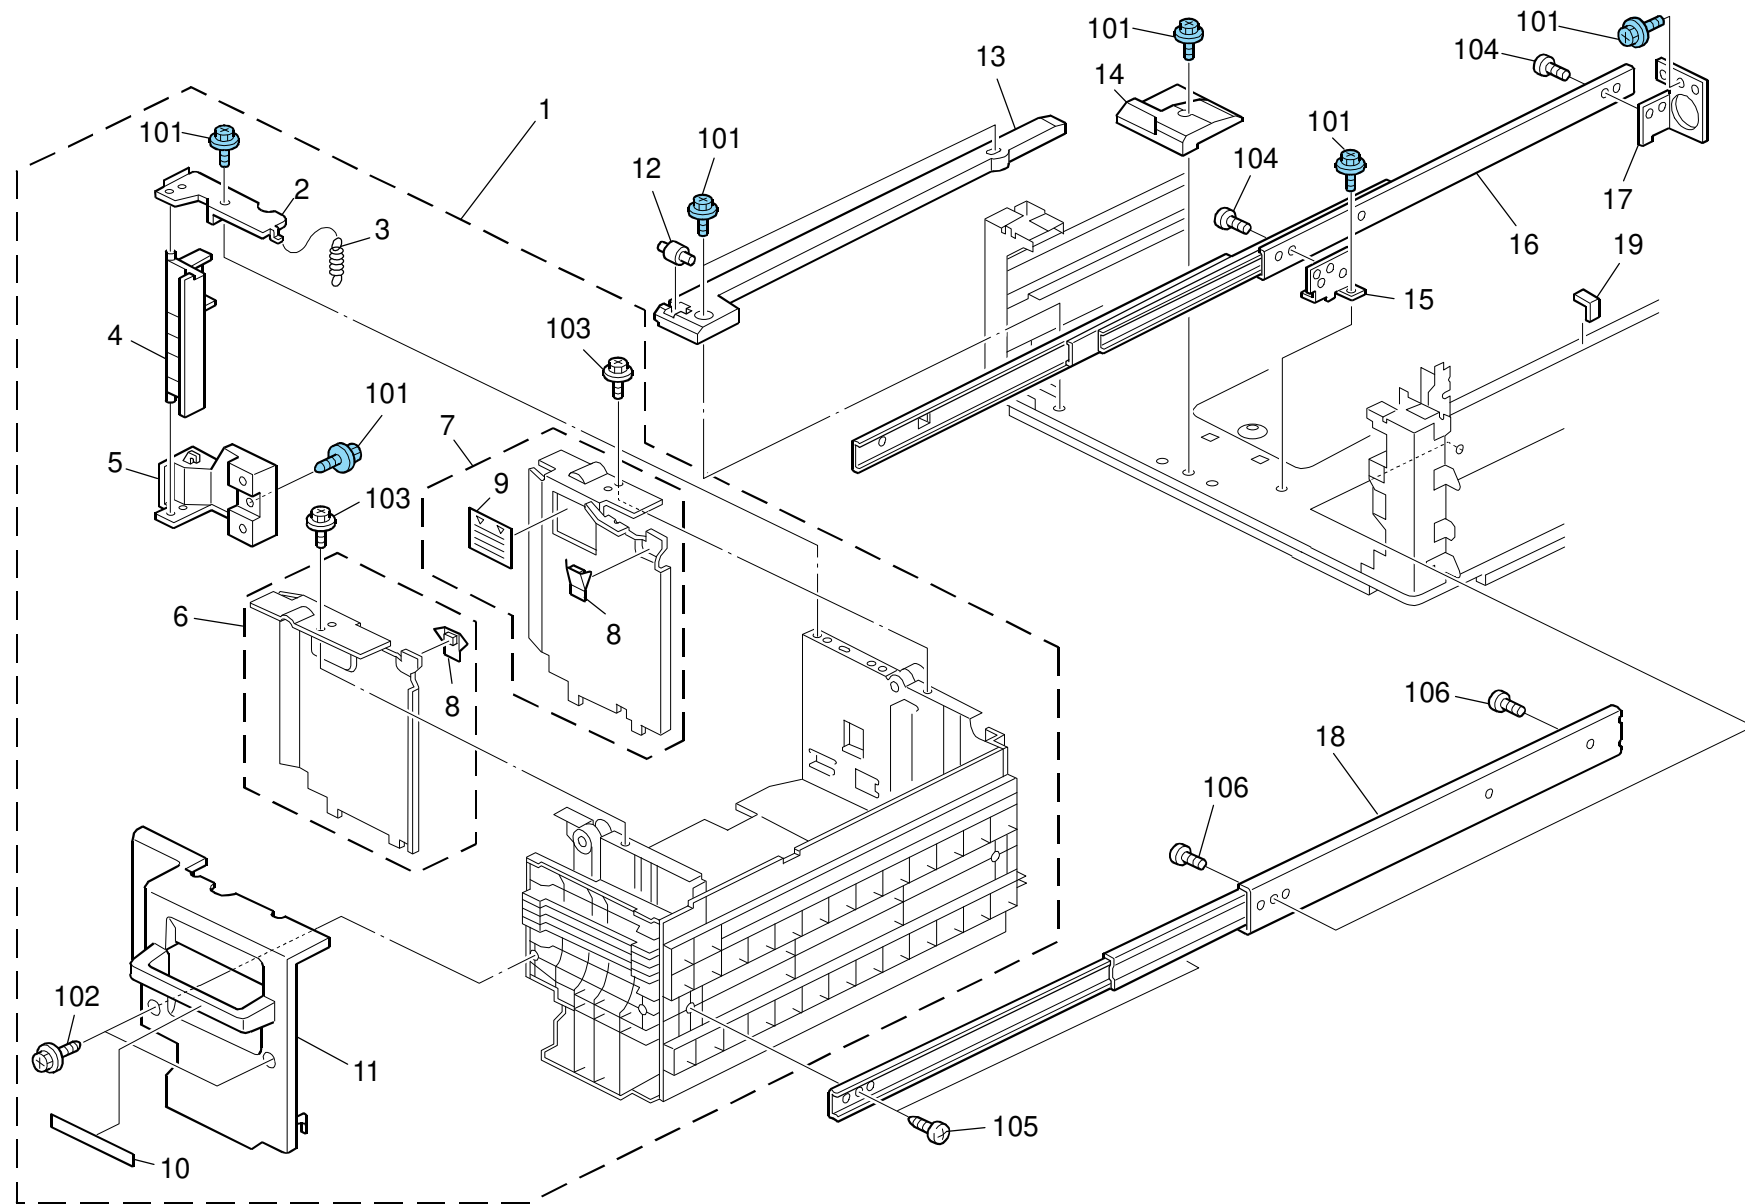




4.Right Tray 2 (D352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D352 2610	Tandem LCT Ass'y:Right	1
2	B801 2677	End Fence Bracket	1
3	G569 2712	Tension Spring	1
4	B801 2665	End Fence	1
5	B801 2678	End Fence Guide Plate	1
6	B801 2695	Side Fence Ass'y - Right Front	1
7	B801 2690	Side Fence Ass'y - Right Rear	1
8	B801 2801	Paper Plate	2
9	AA00 0713	Decal - Side Fence Rear	1
10	B801 2681	Decal - Grip Inner Cover Right	1
11	B801 2680	Inner Cover Grip - Right	1
12	A232 2987	Roller - Paper Tray	1
13	B801 1123	Guide - Left Lower	1
14	B801 1135	Tray Stopper - Left	1
15	B801 1128	Slide Rail Bracket - Front	1
16	AA07 0074	Slide Rail - Middle	1
17	B801 1131	Slide Rail Bracket - Rear	1
18	AA07 0073	Slide Rail - Right	1
19	AA16 1163	Cushion	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0450 3010N	Tapping Screw - M3x10	
103	0451 4008N	Tapping Screw:4x8	
104	0354 0050N	Screw - M4x5	
105	0452 3008N	Tapping Screw - M3x8	
106	0453 3006N	Tapping Screw - M3x6	

5.Left Tray (D352)

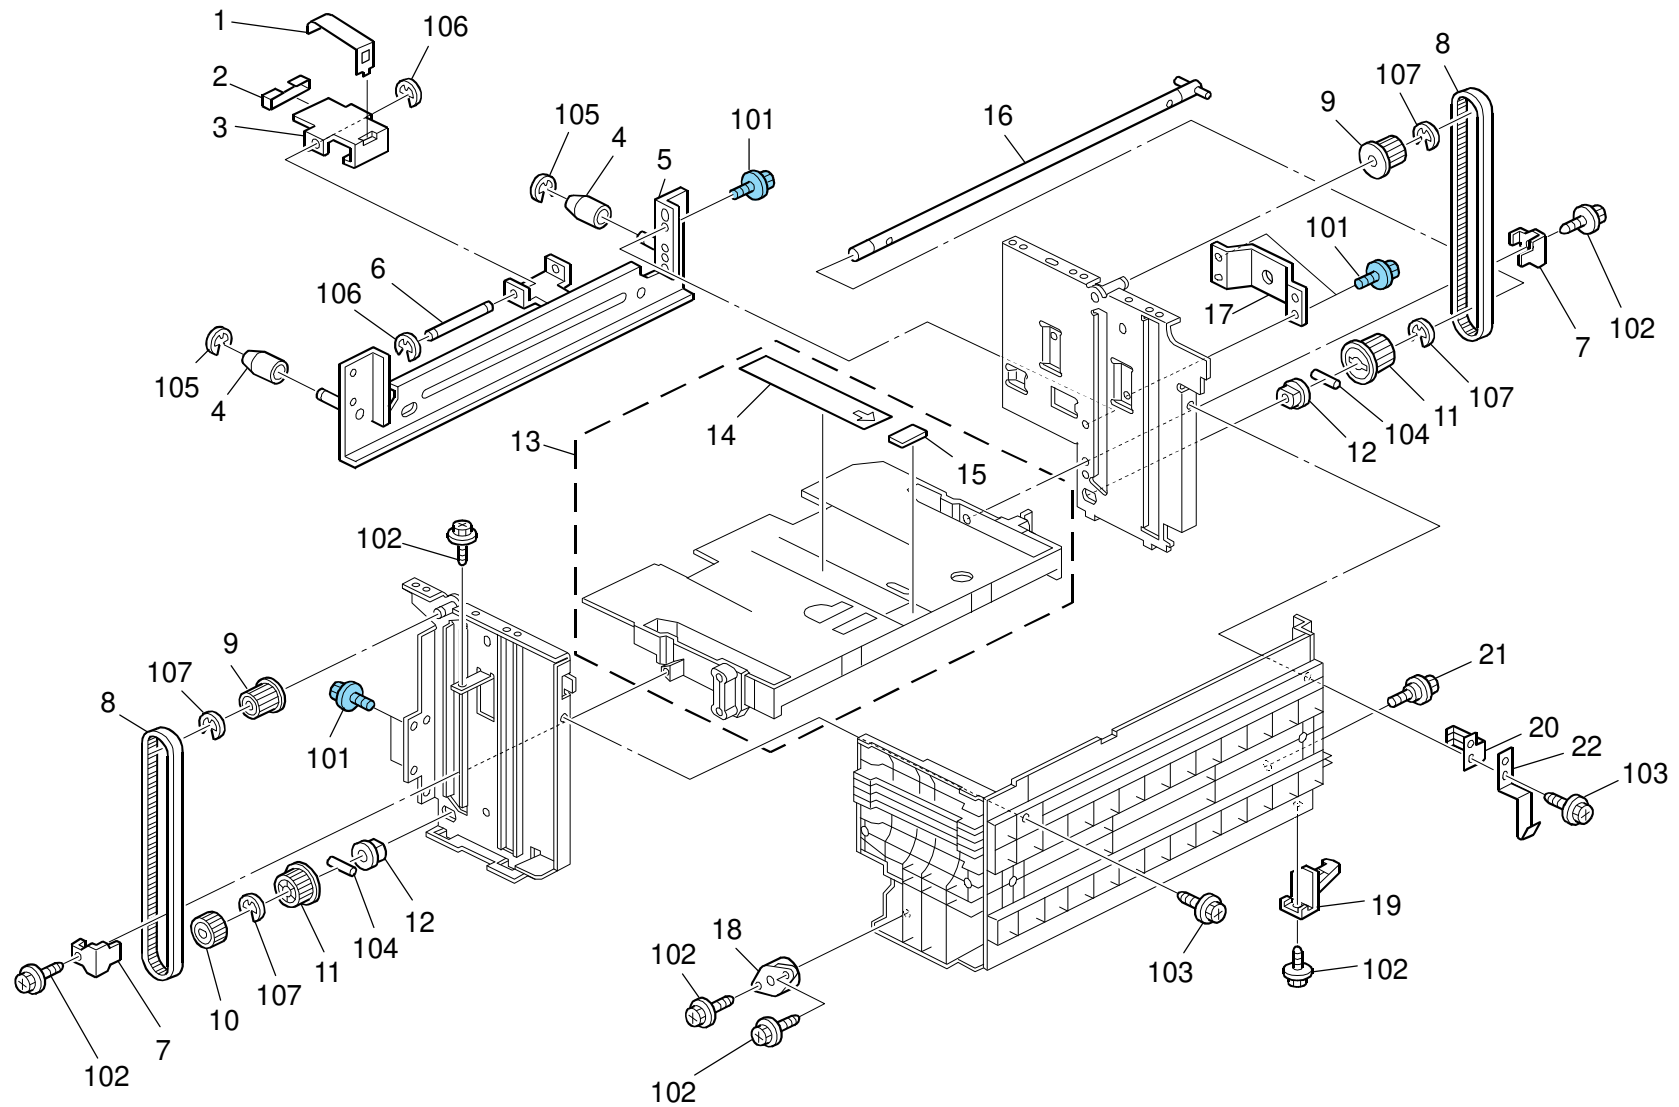




5.Left Tray (D352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B801 2654	Lock Lever	1
2	B801 2652	Coupling Bracket Sheet	1
3	B801 2653	Base Coupling Bracket	1
4	B801 2651	Guide Roller	2
5	B801 2657	Tandem Tray Stay - Right	1
6	B801 2649	Tray Stay Shaft - Right	1
7	B801 2684	Timing Belt Holder	2
8	AA04 3600	Timing Belt - 60S3M378	2
9	G569 2710	Timing Pulley - Tray Bottom Plate	2
10	C410 7626	Gear Damper - 18Z	1
11	AB03 0633	Timing Pulley - Tray Bottom Plate	2
12	AA08 2104	Bushing - 8x12x7	2
13	B801 2655	Tray Bottom Plate	1
14	AA00 0714	Decal - Right Paper Set	1
15	A421 2543	Friction Pad	1
16	C410 2681	Shaft - Tray Bottom Plate Rise	1
17	B801 2638	Supporting Plate:Side Plate:Large Capacity Tray	1
18	C410 7534	Oil Damper	1
19	B801 2624	Lock Tray Arm	1
20	B801 2679	Tray Ground Plate - Right	1
21	AA14 3823	Tapping Screw	1
22	D352 2686	Ground Plate:Tray:Right	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0450 3010N	Tapping Screw - M3x10	
103	0451 3008N	Tapping Screw - M3x8	
104	0623 0140E	Spring Pin - 3x14mm	
105	0720 0040E	Retaining Ring - M4	
106	0720 0030E	Retaining Ring - M3	
107	0720 0060E	Retaining Ring - M6	

6.Paper Feed Section (D352)

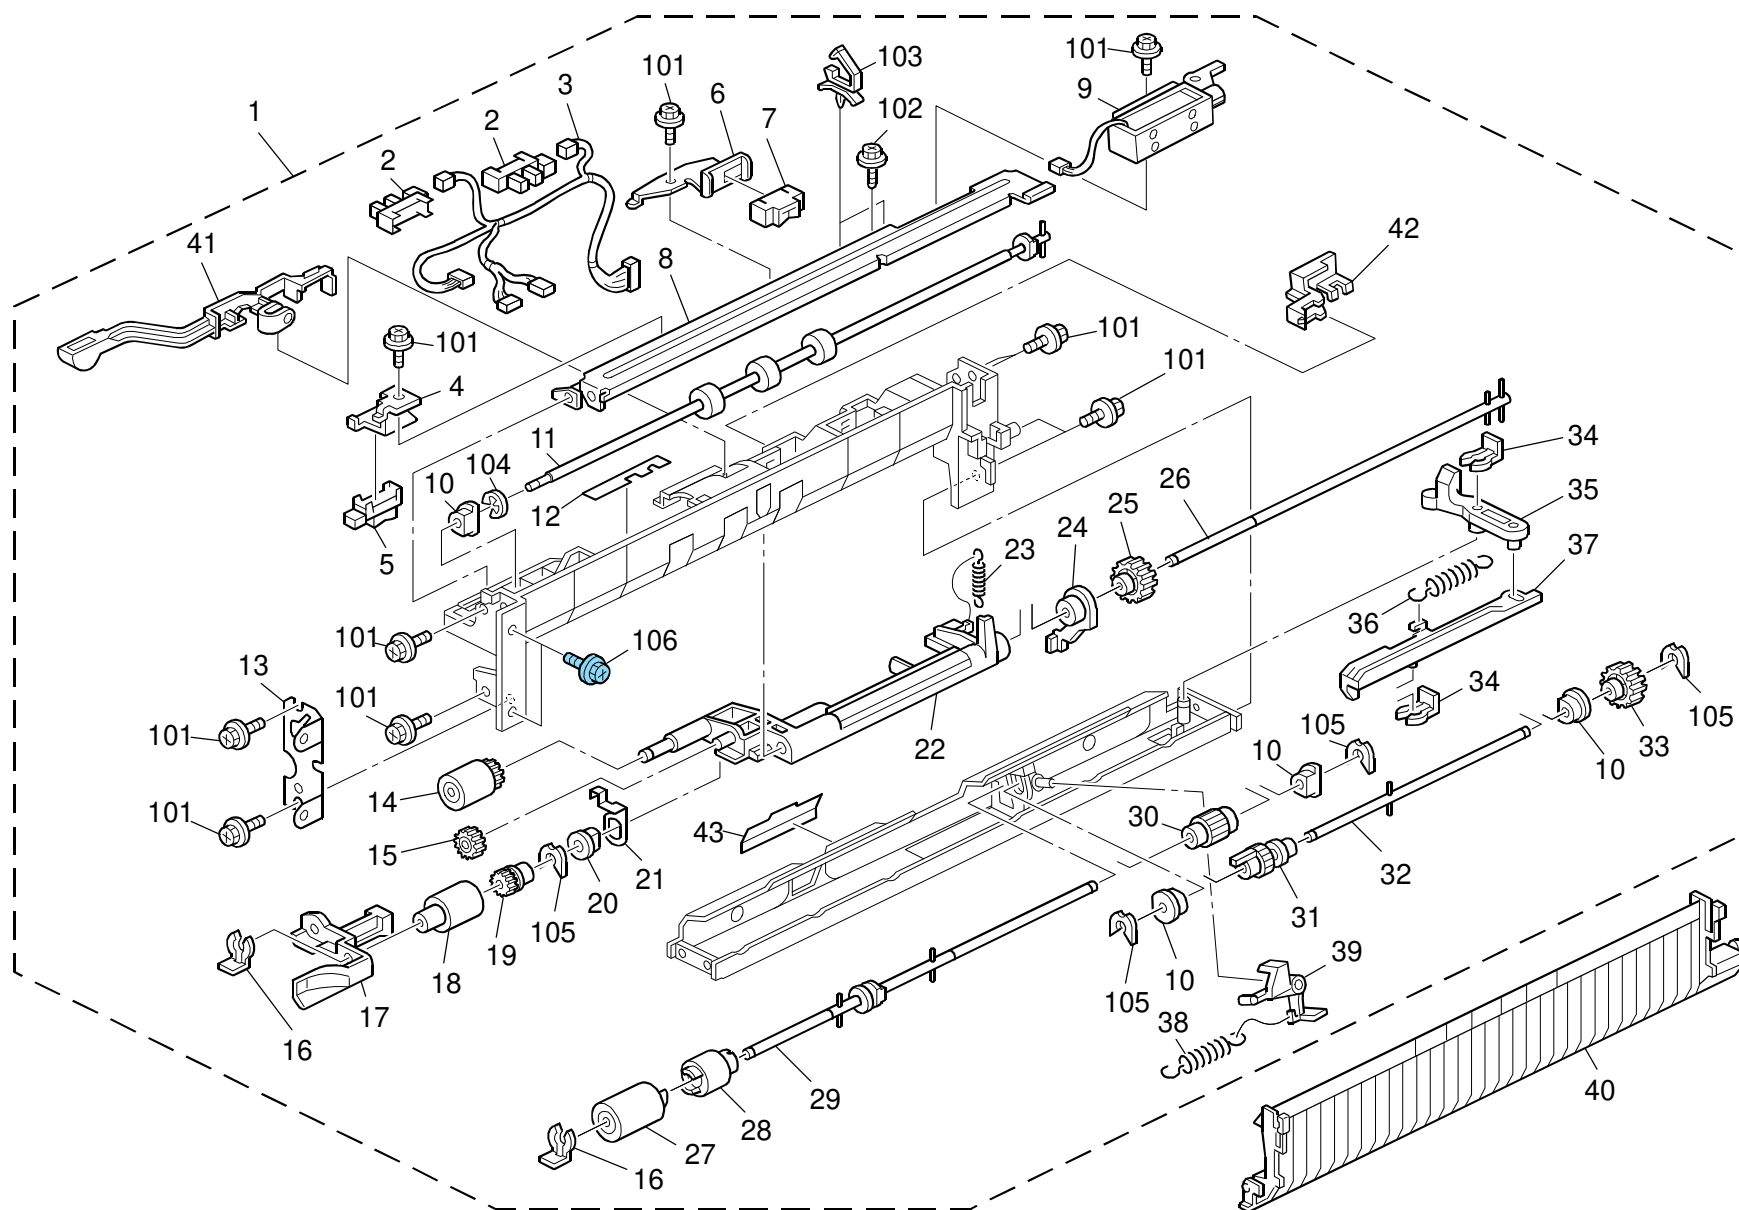


6.Paper Feed Section (D352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D352 2511	Paper Feed Unit:LCT:Ass'y	1
2	AW02 0145	Photointerruptor:Flat	2
3	D029 2773	Harness:Paper Feed Unit	1
4	B223 2778	Sensor Bracket	1
5	AW01 0128	Paper Feed Sensor	1
6	B082 2781	Bracket:Sensor	1
7	AW01 0122	Paper Feed Sensor	1
8	B223 2776	Stay	1
9	B223 2780	DC Solenoid 24V	1
10	AA08 2143	Bushing - 6x10x6	4
11	D009 2757	Transport Roller:Drive:Ass'y	1
12	B223 2772	Harness Sheet	1
13	B223 2786	Ground Plate - Front	1
14	AF03 0090	Paper Feed Roller:Pickup	1
15	AB01 1252	Gear - 20Z	1
16	AA10 0014	Retaining Ring C - Separate	2
17	B223 2829	Feed Guide	1
18	AF03 1090	Paper Feed Roller:Feed	1
19	AB01 1218	Gear - Roller Clutch	1
20	AA08 2101	Bushing - 6x10x6	5
21	B223 2765	Ground Plate - Feed	1
22	B223 2761	Pickup Arm	1
23	AA06 0691	Tension Spring	1
24	G065 2767	Lever - Feed	1
25	B223 2764	Gear-24Z	1
26	B223 2762	Feed Shaft	1
27	AF03 2090	Paper Feed Roller:Separate	1
28	B004 2783	Torque Limiter	1
29	B223 2810	Separate Driven Shaft	1
30	AB01 0157	Gear:Separate:Driven	1
31	AB01 0156	Gear:Separate:Drive	1
32	B223 2815	Separate Drive Shaft	1
33	B223 2819	Gear - 22Z	1
34	5206 2686	Snap Ring	2
35	G065 2776	Release Lever	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	AA06 2259	Spring - Release	1
37	G065 2775	Link Lever	1
38	AA06 0693	Tension Spring	1
39	G065 2774	Pressure Lever	1
40	D009 2836	Guide Plate	1
41	B801 2821	Feeler - Paper End Sensor	1
42	B801 2822	Bracket - Paper End Sensor	1
43	B801 2515	Guide:Paper Feed Unit:Lower	1
101	0451 3006N	Tapping Screw - 3x6	
102	0456 3008N	Tapping Screw - M3x8	
103	1105 0511	Harness Clamp - LWS-0306ZC	
104	0720 0040E	Retaining Ring - M4	
105	0805 0089	Retaining Ring - M4	
106	0454 3008Q	Tapping Screw:3x8	

7.Electrical Section (D352)

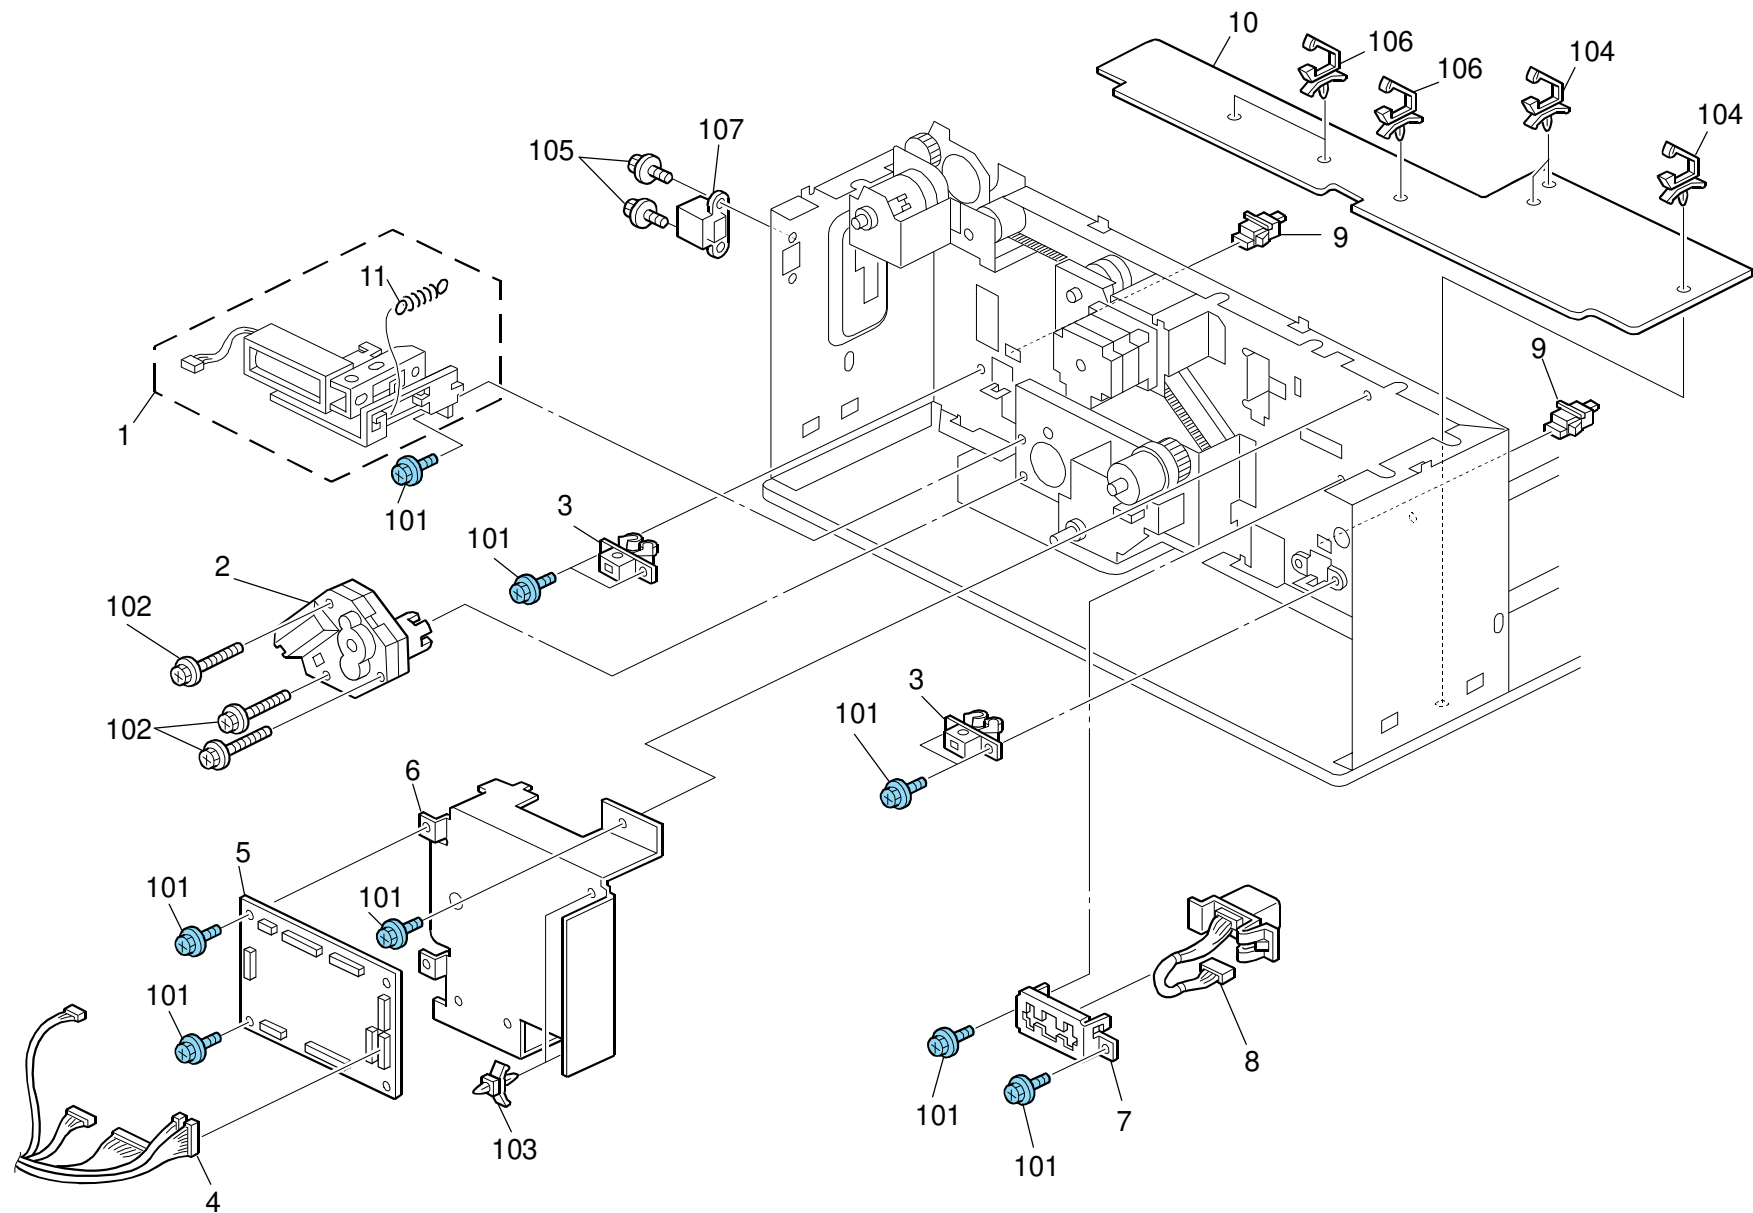


7.Electrical Section (D352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B801 1140	Lock:Tray Bracket Ass'y - Right	1
2	C410 5710	DC Motor 24V	1
3	B600 1082	Holder:Paper Tray	2
4	D352 5310	Main Harness - LCT	1
5	D352 5111	PCB:CEBU-B:Ass'y	1
6	B801 1152	Main Board Bracket	1
7	B600 1085	Bracket:Drawer:Arabia	1
8	B801 5313	Harness - Tandem Tray	1
9	AW50 0023	Push Switch	2
10	B800 1059	Cover:Burring:Base	1
11	G569 2712	Tension Spring	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0451 3030N	Tapping Screw:3x30	
103	1105 0192	Locking Support	
104	1105 0516	Clamp	
105	0360 3008N	Screw:M3x8	
106	1105 0487	Harness Clamp	
107	1102 8504	Connector	

8. Drive Section (D352)

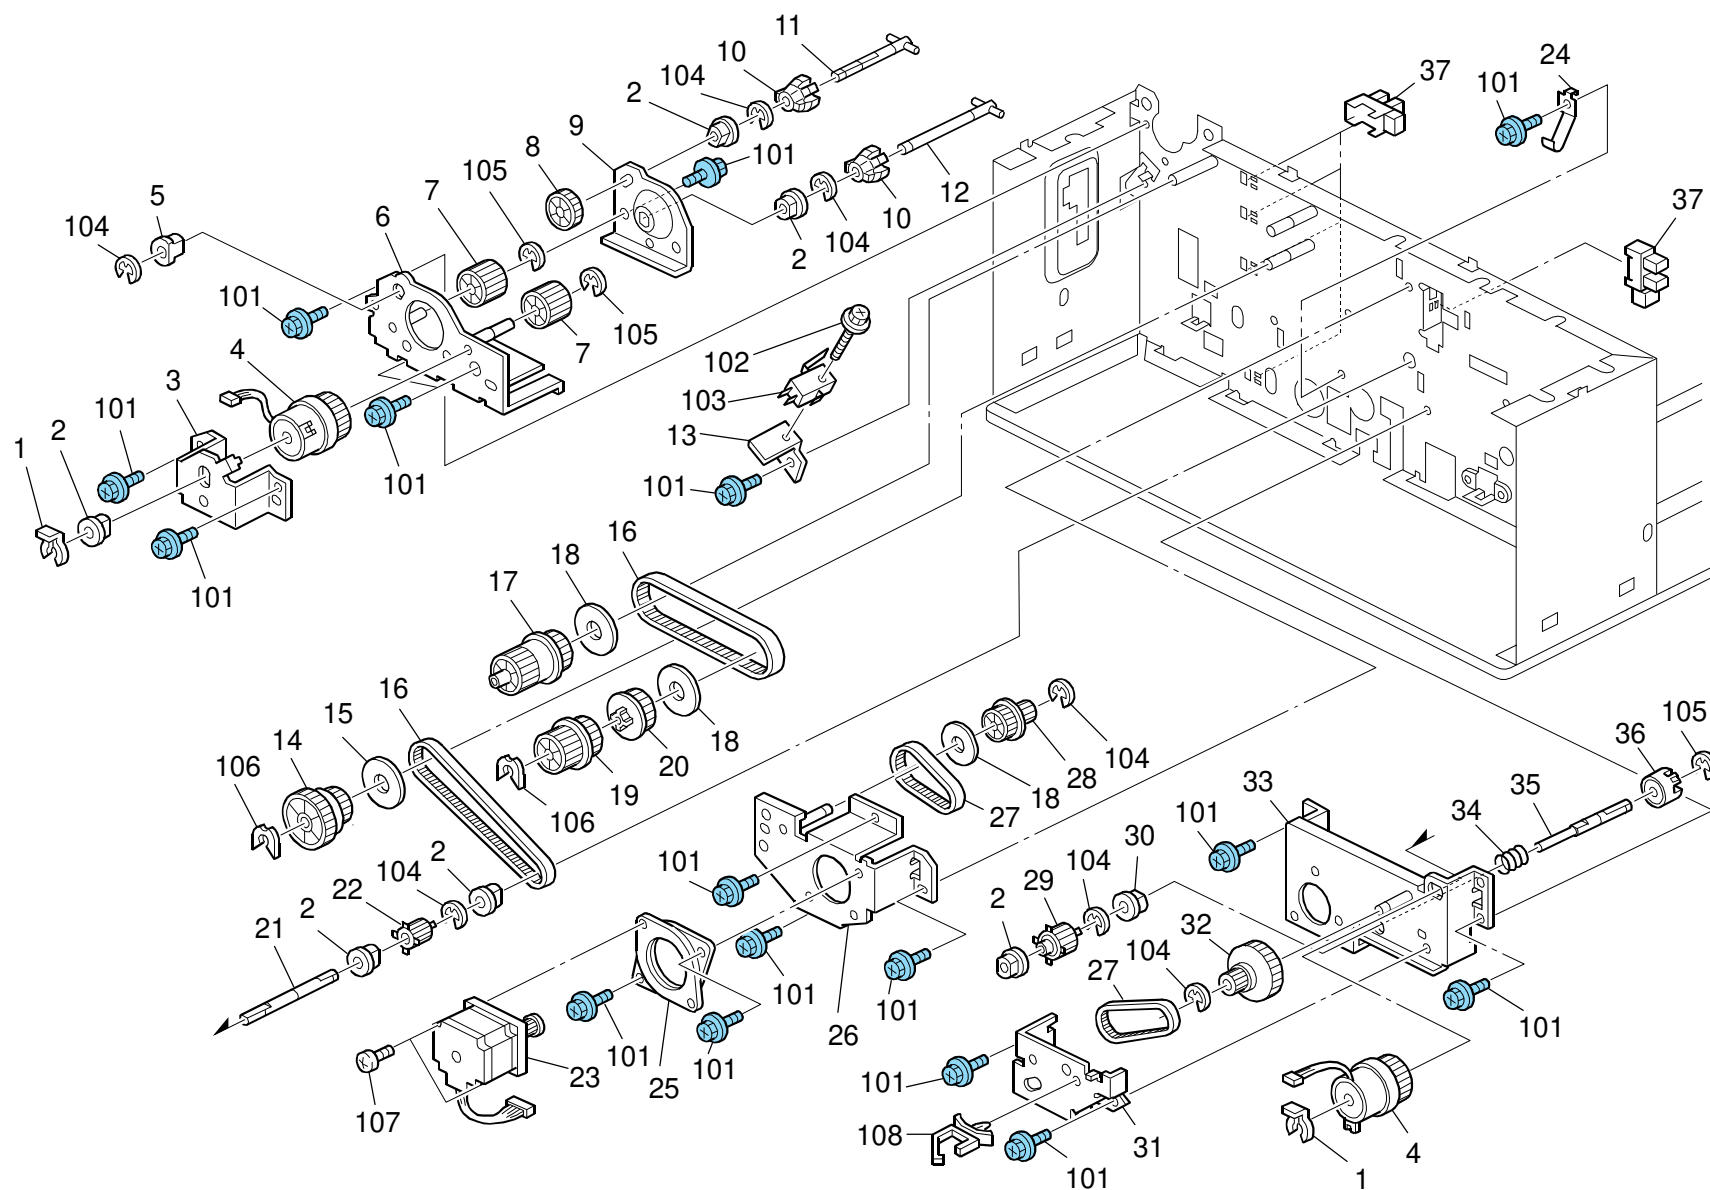

17

Parts Index

Parts Index

Part No.	Description	Page and Index No.
D352 1272	Right Cover	3 - 5
D352 1273	Cap - Cover	3 - 6
D352 2511	Paper Feed Unit:LCT:Ass'y	13 - 1
D352 2550	Guide:Vertical Transport:Ass'y	3 - 34
D352 2555	Cover - Transport Guide	3 - 14
D352 2557	Lever - Vertical Transport	3 - 18
D352 2558	Guide:Vertical Transport:Upper	3 - 15
D352 2561	Guide:Vertical Transport:Lower	3 - 25
D352 2562	Cover:Vertical Transport	3 - 13
D352 2564	Connector Cover - LCT	3 - 7
D352 2581	Upper Stopper - Vertical Transport	3 - 10
D352 2583	Lower Topper - Vertical Transpor	3 - 11
D352 2610	Tandem LCT Ass'y:Right	9 - 1
D352 2686	Ground Plate:Tray:Right	11 - 22
D352 5111	PCB:CEBU-B:Ass'y	15 - 5
D352 5310	Main Harness - LCT	15 - 4

Part No.	Description	Page and Index No.
A232 2987	Roller - Paper Tray	7 - 17
A232 2987	Roller - Paper Tray	9 - 12
A421 2543	Friction Pad	11 - 15
B004 2783	Torque Limiter	13 - 28
B082 2781	Bracket:Sensor	13 - 6
B223 1186	Drive Joint	17 - 10
B223 2761	Pickup Arm	13 - 22
B223 2762	Feed Shaft	13 - 26
B223 2764	Gear-24Z	13 - 25
B223 2765	Ground Plate - Feed	13 - 21
B223 2772	Harness Sheet	13 - 12
B223 2776	Stay	13 - 8
B223 2778	Sensor Bracket	13 - 4
B223 2780	DC Solenoid 24V	13 - 9
B223 2786	Ground Plate - Front	13 - 13
B223 2810	Separate Driven Shaft	13 - 29
B223 2815	Separate Drive Shaft	13 - 32
B223 2819	Gear - 22Z	13 - 33
B223 2829	Feed Guide	13 - 17
B223 2860	Paper Tray Grip	5 - 10
B384 1146	Spring Plate	5 - 4
B600 1082	Holder:Paper Tray	15 - 3
B600 1085	Bracket:Drawer:Arabia	15 - 7
B800 1059	Cover:Burring:Base	15 - 10
B800 1103	Pan Head Screw - M5x5	5 - 9
B800 1133	Stay:Upper Front:Peen	5 - 1
B800 6110	Arm Ass'y	3 - 2
B800 6115	Cover:Arm:Front	3 - 1
B800 6117	Cover:Arm:Rear	3 - 3
B800 6123	Bracket:Arm:Remover/install:Right	5 - 15
B801 1077	Joint:Drive Shaft	17 - 21
B801 1078	Timing Belt Spacer	17 - 15
B801 1079	Ground Plate - Slide Rail	17 - 24
B801 1113	Motor Bracket	17 - 33
B801 1115	Joint Bracket	17 - 31

Part No.	Description	Page and Index No.
B801 1116	Joint	17 - 36
B801 1117	Upper Stay - Front Rear	5 - 2
B801 1118	Joint Shaft	17 - 35
B801 1123	Guide - Left Lower	9 - 13
B801 1128	Slide Rail Bracket - Front	9 - 15
B801 1131	Slide Rail Bracket - Rear	9 - 17
B801 1135	Tray Stopper - Left	9 - 14
B801 1140	Lock:Tray Bracket Ass'y - Right	15 - 1
B801 1152	Main Board Bracket	15 - 6
B801 1180	Stepper Motor Bracket	17 - 26
B801 1184	Timing Belt Spacer	17 - 18
B801 1260	Cover - Left	3 - 12
B801 1281	Cover - Rear	3 - 4
B801 2515	Guide:Paper Feed Unit:Lower	13 - 43
B801 2624	Lock Tray Arm	11 - 19
B801 2638	Supporting Plate:Side Plate:Large Capacity Tray	11 - 17
B801 2649	Tray Stay Shaft - Right	11 - 6
B801 2651	Guide Roller	11 - 4
B801 2652	Coupling Bracket Sheet	11 - 2
B801 2653	Base Coupling Bracket	11 - 3
B801 2654	Lock Lever	11 - 1
B801 2655	Tray Bottom Plate	11 - 13
B801 2657	Tandem Tray Stay - Right	11 - 5
B801 2665	End Fence	9 - 4
B801 2677	End Fence Bracket	9 - 2
B801 2678	End Fence Guide Plate	9 - 5
B801 2679	Tray Ground Plate - Right	11 - 20
B801 2680	Inner Cover Grip - Right	9 - 11
B801 2681	Decal - Grip Inner Cover Right	9 - 10
B801 2684	Timing Belt Holder	11 - 7
B801 2690	Side Fence Ass'y - Right Rear	9 - 7
B801 2695	Side Fence Ass'y - Right Front	9 - 6
B801 2711	Tandem LCT Unit - Left	7 - 1
B801 2726	Tray Plate - Right	7 - 23
B801 2727	Tray Cover Plate- Right	7 - 22

Part No.	Description	Page and Index No.
B801 2728	Tray Plate Bracket - Right	7 - 24
B801 2730	Shaft - Slider Drive	7 - 20
B801 2735	Timing Belt Bracket	7 - 9
B801 2742	Timing Belt Cover	7 - 2
B801 2744	Back Fence Slider	7 - 12
B801 2745	Back Fence	7 - 18
B801 2746	Timing Belt Slider Stopper	7 - 14
B801 2748	Cover:Positioning Sensor	7 - 11
B801 2753	Side Fence - Left Rear	7 - 7
B801 2756	Paper Volume Sensor Bracket	7 - 19
B801 2758	Side Fence - Left Front	7 - 4
B801 2762	Lever Lock Bracket	7 - 28
B801 2763	Lock Lever Shaft	7 - 31
B801 2764	Coupling Lever	7 - 30
B801 2765	Lever Cap	7 - 29
B801 2793	Cover - LCT Front	5 - 11
B801 2795	Sheet - Paper Set Direction	5 - 12
B801 2801	Paper Plate	9 - 8
B801 2811	Ground Plate - Cover Timing Belt	7 - 26
B801 2812	Ground Plate - Joint Drive	7 - 27
B801 2821	Feeler - Paper End Sensor	13 - 41
B801 2822	Bracket - Paper End Sensor	13 - 42
B801 5311	Harness - Tandem Tray	7 - 5
B801 5312	Harness - Interface Cable	5 - 6
B801 5313	Harness - Tandem Tray	15 - 8
B801 6126	Bracket:Arm:Remover/install:Rear Right	5 - 16
B801 6127	Arm Bracket - Front Left	5 - 13
B801 6128	Arm Bracket - Front Right	5 - 14
B802 1622	Stepper Motor Damper	17 - 25
C410 2681	Shaft - Tray Bottom Plate Rise	11 - 16
C410 5710	DC Motor 24V	15 - 2
C410 7534	Oil Damper	11 - 18
C410 7626	Gear Damper - 18Z	11 - 10
D009 2571	Holder - Vertical Transport	3 - 32
D009 2573	Pulley - Vertical Transport	3 - 26

Part No.	Description	Page and Index No.
D009 2574	Pulley - Idler	3 - 22
D009 2575	Shaft - Idler	3 - 30
D009 2576	Shaft - Vertical Transport	3 - 31
D009 2757	Transport Roller:Drive:Ass'y	13 - 11
D009 2836	Guide Plate	13 - 40
D029 2677	Transport Belt:Driven:Vertical Transport	3 - 29
D029 2773	Harness:Paper Feed Unit	13 - 3
D351 1143	Stay:Upper Rear	5 - 3
D351 1190	Stepper Motor:Paper Feed:Ass'y	17 - 23
D351 6120	Arm Ass'y	3 - 9
D351 6122	Arm Cover - Right	3 - 8
G060 2652	Bushing - M4	3 - 20
G065 2767	Lever - Feed	13 - 24
G065 2774	Pressure Lever	13 - 39
G065 2775	Link Lever	13 - 37
G065 2776	Release Lever	13 - 35
G569 2710	Timing Pulley - Tray Bottom Plate	11 - 9
G569 2712	Tension Spring	15 - 11
G569 2712	Tension Spring	9 - 3
G569 2761	Rivet - 31J5	7 - 6
G569 2901	Spring - Lift Motor	17 - 34
G832 1146	Connector Bracket	5 - 5
G832 1158	Drive Unit Bracket	17 - 6
G832 1161	Drum Stay	17 - 9
G832 1175	Feed Shaft	17 - 12
G832 1178	Grip Shaft	17 - 11
G832 1183	Micro Switch Bracket	17 - 13
G832 2570	Ground Plate	3 - 17
G832 2582	Shaft	3 - 24
G832 2583	Front Hook	3 - 23
G832 2584	Rear Hook	3 - 16
G832 3619	Magnetic Clutch Bracket	17 - 3
G832 7900	Screw:Spring Washer:Round Point:M4x10	3 - 28
G832 8510	Coupling Bracket	3 - 27

Part No.	Description	Page and Index No.
AA00 0713	Decal - Side Fence Rear	7 - 8
AA00 0713	Decal - Side Fence Rear	9 - 9
AA00 0714	Decal - Right Paper Set	11 - 14
AA00 0715	Decal - Left Paper Set	7 - 3
AA04 3318	Timing Belt - 40S3M144	17 - 27
AA04 3591	Timing Belt - 40S3M285	17 - 16
AA04 3599	Timing Belt - 60S3M588	7 - 13
AA04 3600	Timing Belt - 60S3M378	11 - 8
AA06 0691	Tension Spring	13 - 23
AA06 0693	Tension Spring	13 - 38
AA06 2259	Spring - Release	13 - 36
AA06 2347	Spring - Vertical Transport Lever	3 - 19
AA06 3930	Compression Spring:Transport Roller	3 - 21
AA07 0073	Slide Rail - Right	9 - 18
AA07 0074	Slide Rail - Middle	9 - 16
AA08 2101	Bushing - 6x10x6	13 - 20
AA08 2101	Bushing - 6x10x6	7 - 21
AA08 2101	Bushing - 6x10x6	17 - 2
AA08 2102	Bushing - 6x10x6	17 - 5
AA08 2104	Bushing - 8x12x7	11 - 12
AA08 2104	Bushing - 8x12x7	17 - 30
AA08 2143	Bushing - 6x10x6	13 - 10
AA10 0014	Retaining Ring C - Separate	17 - 1
AA10 0014	Retaining Ring C - Separate	13 - 16
AA14 3575	Flat Screw:Knob Screw:M4x10	3 - 33
AA14 3823	Tapping Screw	11 - 21
AA16 1163	Cushion	9 - 19
AB01 0156	Gear:Separate:Drive	13 - 31
AB01 0157	Gear:Separate:Driven	13 - 30
AB01 1218	Gear - Roller Clutch	13 - 19
AB01 1252	Gear - 20Z	13 - 15
AB01 1259	Gear - 32Z	17 - 8
AB01 1500	Gear - 27Z	17 - 7
AB01 7704	Gear/Pulley - 30Z/27T	17 - 19
AB01 7705	Gear/Pulley - 21Z/27T	17 - 28

Part No.	Description	Page and Index No.
AB01 7707	Gear - 28Z/28T	17 - 17
AB01 7708	Gear - 43Z	17 - 14
AB01 7709	Gear/Pulley - 46Z/15T	17 - 32
AB03 0633	Timing Pulley - Tray Bottom Plate	11 - 11
AB03 0785	Timing Pulley - 27T	17 - 20
AB03 0786	Timing Pulley - 22T	17 - 29
AB03 0787	Timing Pulley - 15T	17 - 22
AB03 0787	Timing Pulley - 15T	7 - 25
AB03 3085	Timing Pulley - 15T	7 - 10
AF03 0090	Paper Feed Roller:Pickup	13 - 14
AF03 1090	Paper Feed Roller:Feed	13 - 18
AF03 2090	Paper Feed Roller:Separate	13 - 27
AH01 2036	Caster:DIA50H59:Stopper:Yes	5 - 8
AH01 2037	Caster	5 - 7
AW01 0122	Paper Feed Sensor	13 - 7
AW01 0128	Paper Feed Sensor	13 - 5
AW02 0145	Photointerruptor:Flat	17 - 37
AW02 0145	Photointerruptor:Flat	7 - 15
AW02 0145	Photointerruptor:Flat	13 - 2
AW02 0162	Photointerruptor:Paper Volume Sensor	7 - 16
AW50 0023	Push Switch	15 - 9
AX20 0289	Magnetic Clutch - 32Z	17 - 4

Part No.	Description	Page and Index No.
0314 0080N	Philips Pan Head Screw - M4x8	17 - 107
0354 0050N	Screw - M4x5	9 - 104
0360 3006N	Screw - M3x6	3 - 102
0360 3008N	Screw:M3x8	15 - 105
0360 3010N	Screw:M3x10	7 - 104
0360 4010N	Screw:M4x10	3 - 105
0450 3010N	Tapping Screw - M3x10	9 - 102
0450 3010N	Tapping Screw - M3x10	3 - 104
0450 3010N	Tapping Screw - M3x10	5 - 104
0450 3010N	Tapping Screw - M3x10	11 - 102
0450 3010N	Tapping Screw - M3x10	7 - 103
0451 3006N	Tapping Screw - 3x6	13 - 101
0451 3008N	Tapping Screw - M3x8	11 - 103
0451 3008N	Tapping Screw - M3x8	3 - 101
0451 3008N	Tapping Screw - M3x8	7 - 102
0451 3014N	Tapping Screw:3x14	17 - 102
0451 3030N	Tapping Screw:3x30	15 - 102
0451 4008N	Tapping Screw:4x8	9 - 103
0452 3008N	Tapping Screw - M3x8	9 - 105
0453 3006N	Tapping Screw - M3x6	9 - 106
0454 3006Q	Tapping Screw - M3x6	7 - 101
0454 3006Q	Tapping Screw - M3x6	15 - 101
0454 3006Q	Tapping Screw - M3x6	3 - 103
0454 3006Q	Tapping Screw - M3x6	5 - 101
0454 3006Q	Tapping Screw - M3x6	17 - 101
0454 3006Q	Tapping Screw - M3x6	11 - 101
0454 3006Q	Tapping Screw - M3x6	9 - 101
0454 3008Q	Tapping Screw:3x8	13 - 106
0454 4008Q	Tapping Screw - M4x8	5 - 103
0456 3008N	Tapping Screw - M3x8	13 - 102
0623 0140E	Spring Pin - 3x14mm	11 - 104
0711 0030N	Hexagonal Nut:M3	7 - 105
0720 0030E	Retaining Ring - M3	11 - 106
0720 0030E	Retaining Ring - M3	7 - 108
0720 0040E	Retaining Ring - M4	11 - 105

Part No.	Description	Page and Index No.
0720 0040E	Retaining Ring - M4	17 - 104
0720 0040E	Retaining Ring - M4	7 - 106
0720 0040E	Retaining Ring - M4	13 - 104
0720 0060E	Retaining Ring - M6	17 - 105
0720 0060E	Retaining Ring - M6	11 - 107
0805 0088	Retaining Ring - M6	17 - 106
0805 0089	Retaining Ring - M4	13 - 105
0805 0089	Retaining Ring - M4	7 - 107
1102 8504	Connector	15 - 107
1105 0192	Locking Support	15 - 103
1105 0487	Harness Clamp	15 - 106
1105 0511	Harness Clamp - LWS-0306ZC	13 - 103
1105 0516	Clamp	15 - 104
1105 0516	Clamp	5 - 102
1105 0516	Clamp	17 - 108
1204 2529	Switch - V-5F912DN	17 - 103

Part No.	Description	Page and Index No.
5206 2686	Snap Ring	13 - 34