

LCIT RT4000 (D350)

LCIT RT4000 (D350)


PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.Exterior 1 (D350)	2	19.Decals And Documents (D350)	38
2.Exterior 2 (D350)	4	Parts Index	44
3.Paper Tray 1 (D350)	6		
4.Paper Tray 2 (D350)	8		
5.Paper Tray 3 (D350)	10		
6.Paper Tray 4 (D350)	12		
7.Paper Tray 5 (D350)	14		
8.Paper Tray 6 (D350)	16		
9.Paper Tray 7 (D350)	18		
10.Paper Tray 8 (D350)	20		
11.Paper Feed Section 1 (D350)	22		
12.Paper Feed Section 2 (D350)	24		
13.Transfer Section 1 (D350)	26		
14.Transfer Section 2 (D350)	28		
15.Transfer Section 3 (D350)	30		
16.Drive Section (D350)	32		
17.Electrical Section (D350)	34		
18.Frame Section (D350)	36		

October ,26 ' 2007

1.Exterior 1 (D350)

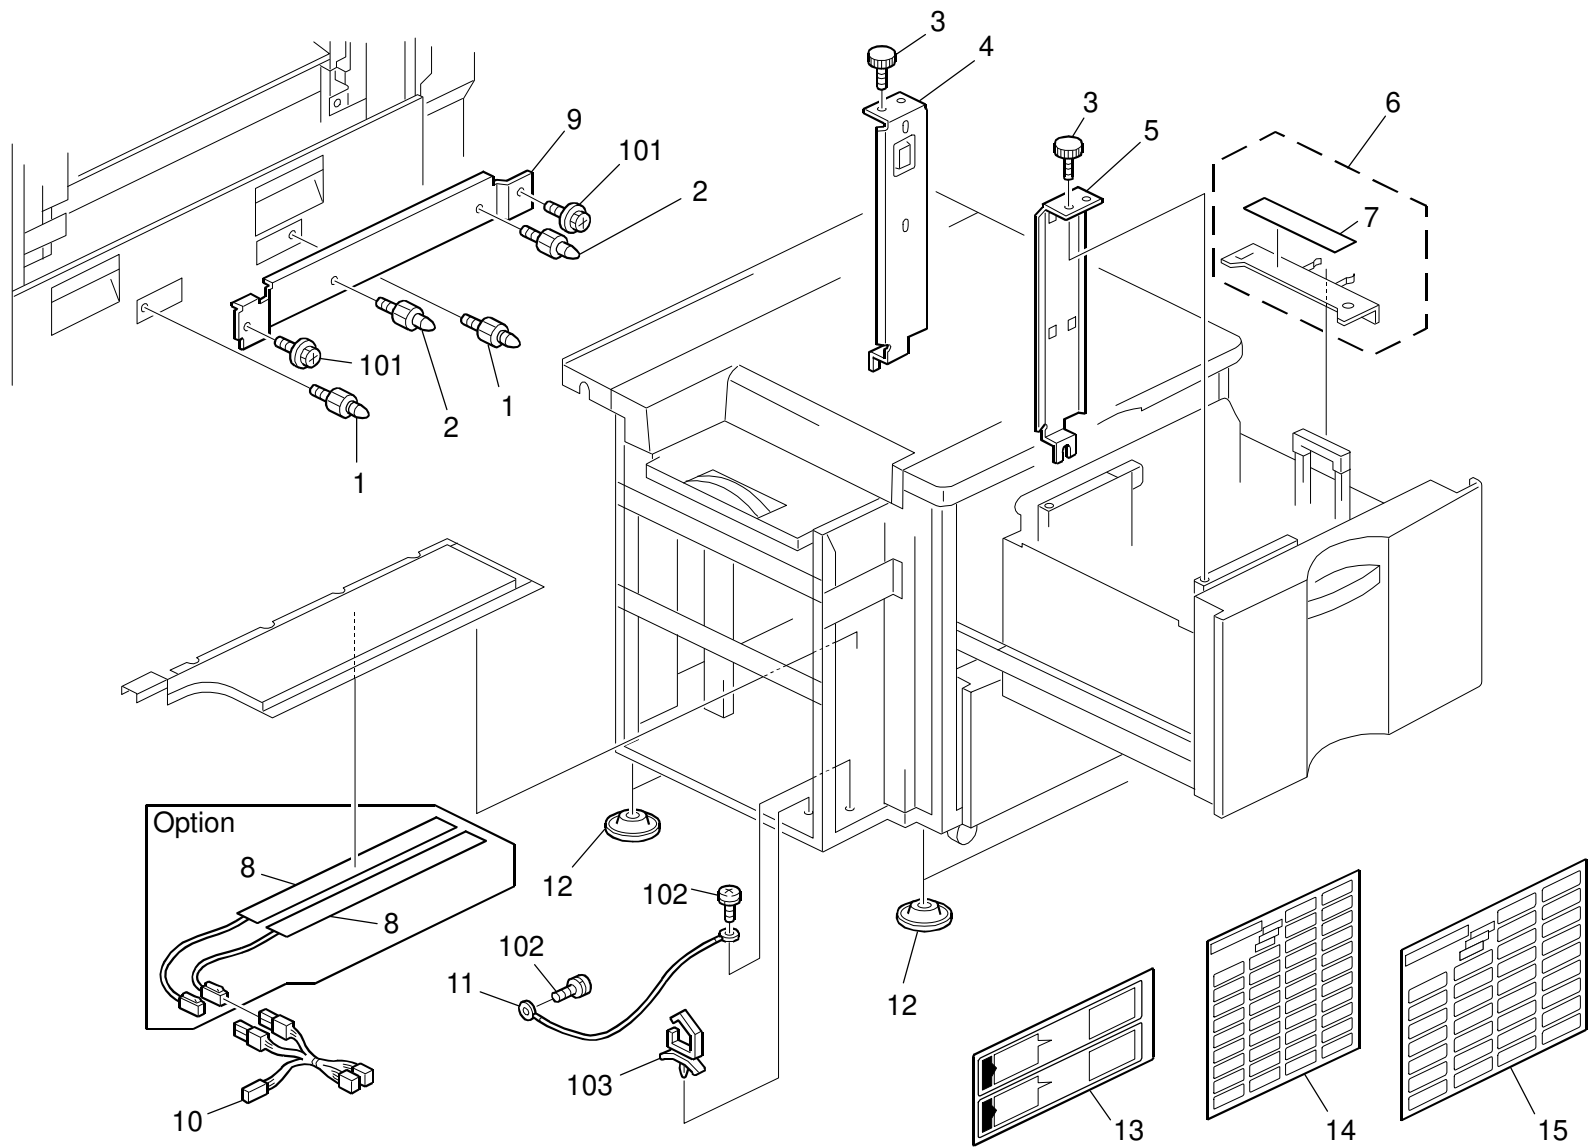


1.Exterior 1 (D350)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA14 0915	Positioning Pin:Machine Or Copier:Upper	2
2	AA14 0916	Positioning Pin - Lower	2
3	B832 2877	Knob Screw:Tray:Guide:Green	2
4	B834 2711	Bracket:Postcard:No.2:Rear	1
5	B834 2714	Bracket:Postcard:No.2:Front	1
6	D350 2784	End Fence:Tab	1
7	D350 1322	Decal:End Fence:Tab	1
8	D350 0900	Anti-Condensation Heater:120V	2
8	D350 0901	Heater:Dehumidifier:208-240V:Kit	2
9	D350 1116	Stay:Coupling:Main	1
10	D350 5360	Harness:Heater	1
11	D350 5340	Harness:Earth	1
12	B132 1226	Holder:Stand	4
13	B070 1307	Decal:Paper Set Direction	1
14	B070 1308	Decal:Size Indication:Paper Tray	1
15	B511 1308	Decal:Paper:Size:Multi-language	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0950 4008N	Philips Truss Screw - M4x8	
103	1105 0488	Harness Clamp	

2.Exterior 2 (D350)

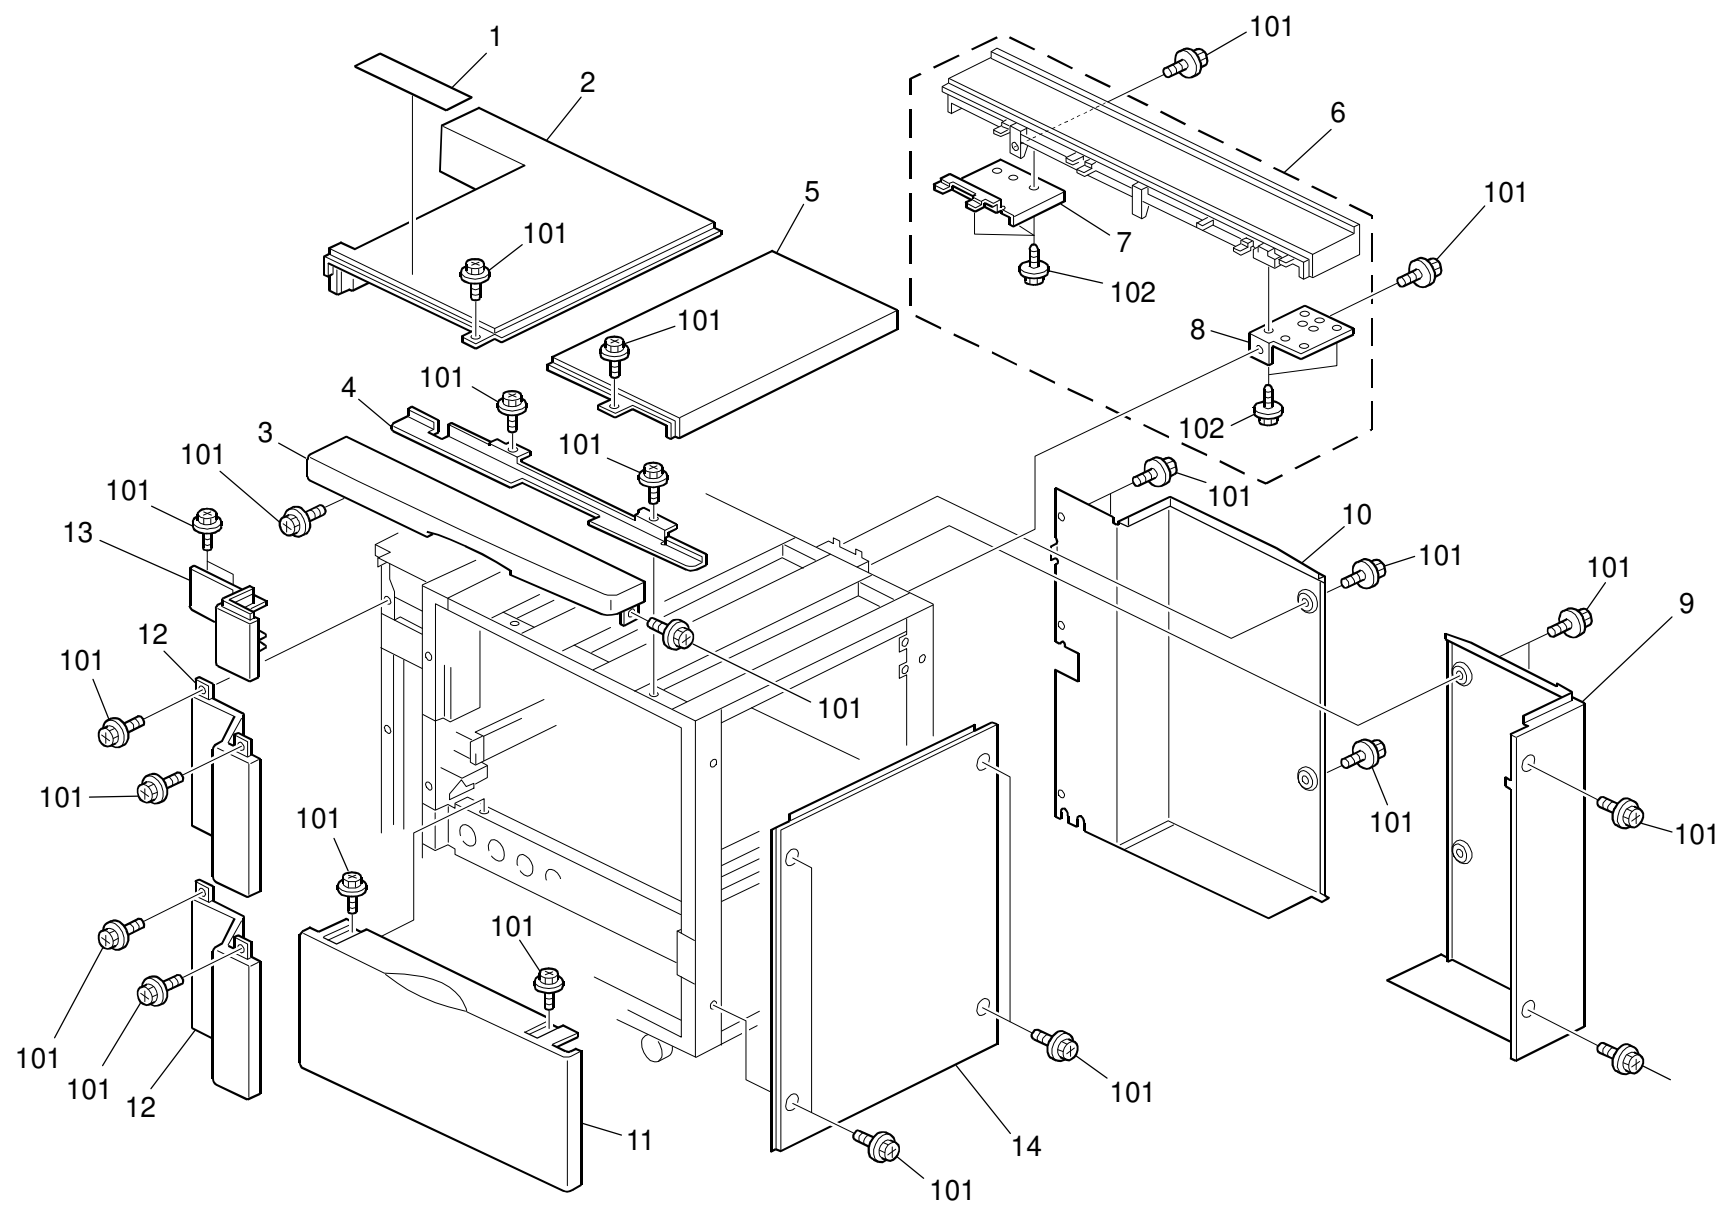


2.Exterior 2 (D350)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D350 1331	Decal: Misfeed Removal	1
2	D350 0040	Cover: Upper Left	1
3	D350 1373	Cover: Upper Front	1
4	D350 1377	Bracket: Fix: Cover: Upper Front	1
5	D355 1363	Cover: Upper Right	1
6	D350 1370	Cover: Upper Rear	1
7	D350 1378	Bracket: Fix: Cover: Upper Rear	1
8	D355 1378	Bracket: Fix: Cover: Rear Right	1
9	D350 1376	Cover: Rear Right	1
10	D350 1371	Cover: Rear Left: Welding	1
11	D350 1382	Cover: Front	1
12	D350 1361	Cover: Left Lower	2
13	D350 1363	Cover: Left Upper	1
14	D350 1385	Cover: Right	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw: 4x8	2
102	0450 3008N	Tapping Screw - M3x8	

3.Paper Tray 1 (D350)

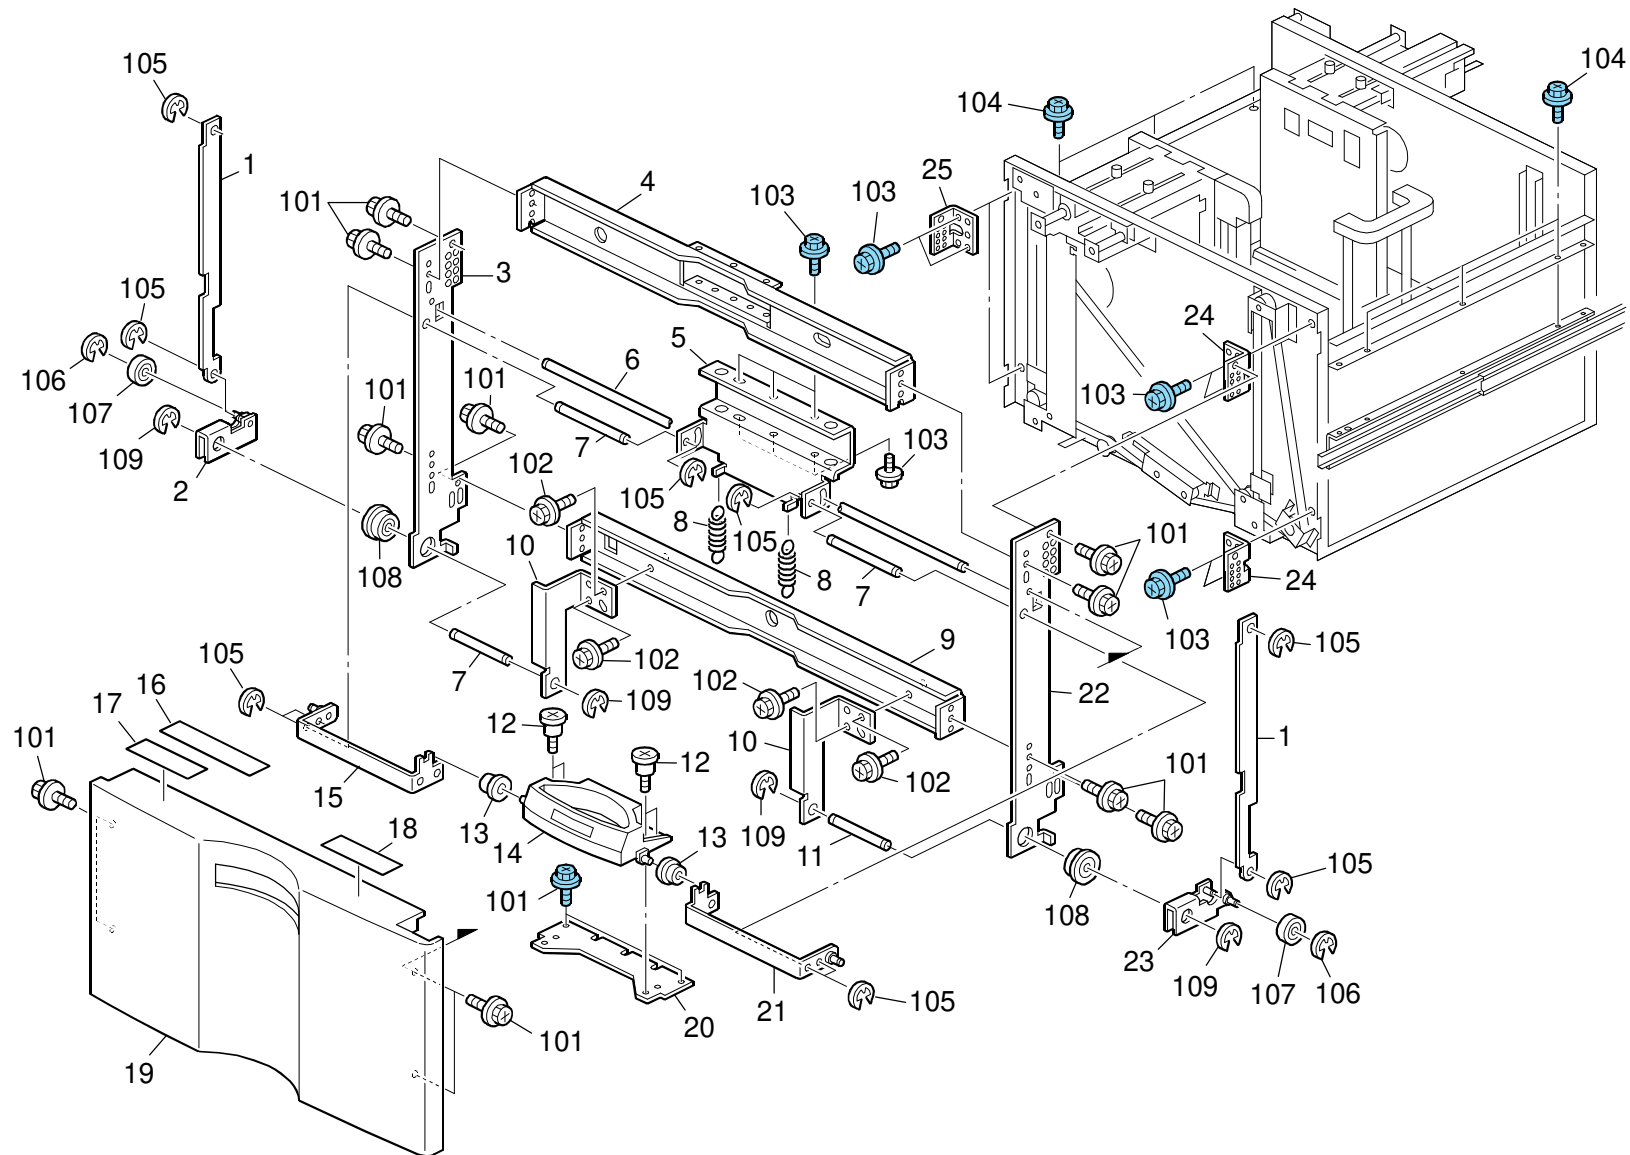


3.Paper Tray 1 (D350)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 3386	Link Handle	2
2	B834 3400	Stopper Guide - Left	1
3	B834 3395	Plate - Left	1
4	B834 3283	Stay:Main	1
5	B834 3475	Bracket	1
6	B834 3438	Link Shaft	1
7	B834 3384	Contact Point Shaft	2
8	H516 3666	Spring - 19.6mm	2
9	B834 3378	Stay	1
10	B834 3390	Contact Point Stay	2
11	B834 3389	Stopper Shaft	2
12	AA14 3718	Stepped Screw - M4	2
13	B834 3312	Collar	2
14	B834 1380	Paper Tray Grip	1
15	B834 3379	Arm:Swivel:Left:Peen	1
16	D350 1323	Decal:Side Fence:Postcard	1
17	D350 1313	Decal:Paper:Supply:Left	1
18	D350 1312	Decal:Paper:Supply:Right	1
19	B834 1382	Paper Tray Cover - Middle	1
20	B834 3377	Plate Handle	1
21	B834 3385	Arm - Right	1
22	B834 3396	Plate - Right	1
23	B834 3425	Stopper Guide - Right	1
24	B834 4891	Registration Side Plate - Right	1
25	B834 4892	Registration Side Plate - Left	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0451 4006N	Tapping Screw - 4x6	
103	0454 4006Q	Tapping Screw:4x6	
104	0454 4008Q	Tapping Screw - M4x8	
105	0720 0040E	Retaining Ring - M4	
106	0720 0050E	Retaining Ring - M5	
107	0740 3506	Ball Bearing - 6x12x4 MM	
108	0741 3808	Ball Bearing - 8x16x5MM	
109	0720 0060E	Retaining Ring - M6	

4. Paper Tray 2 (D350)

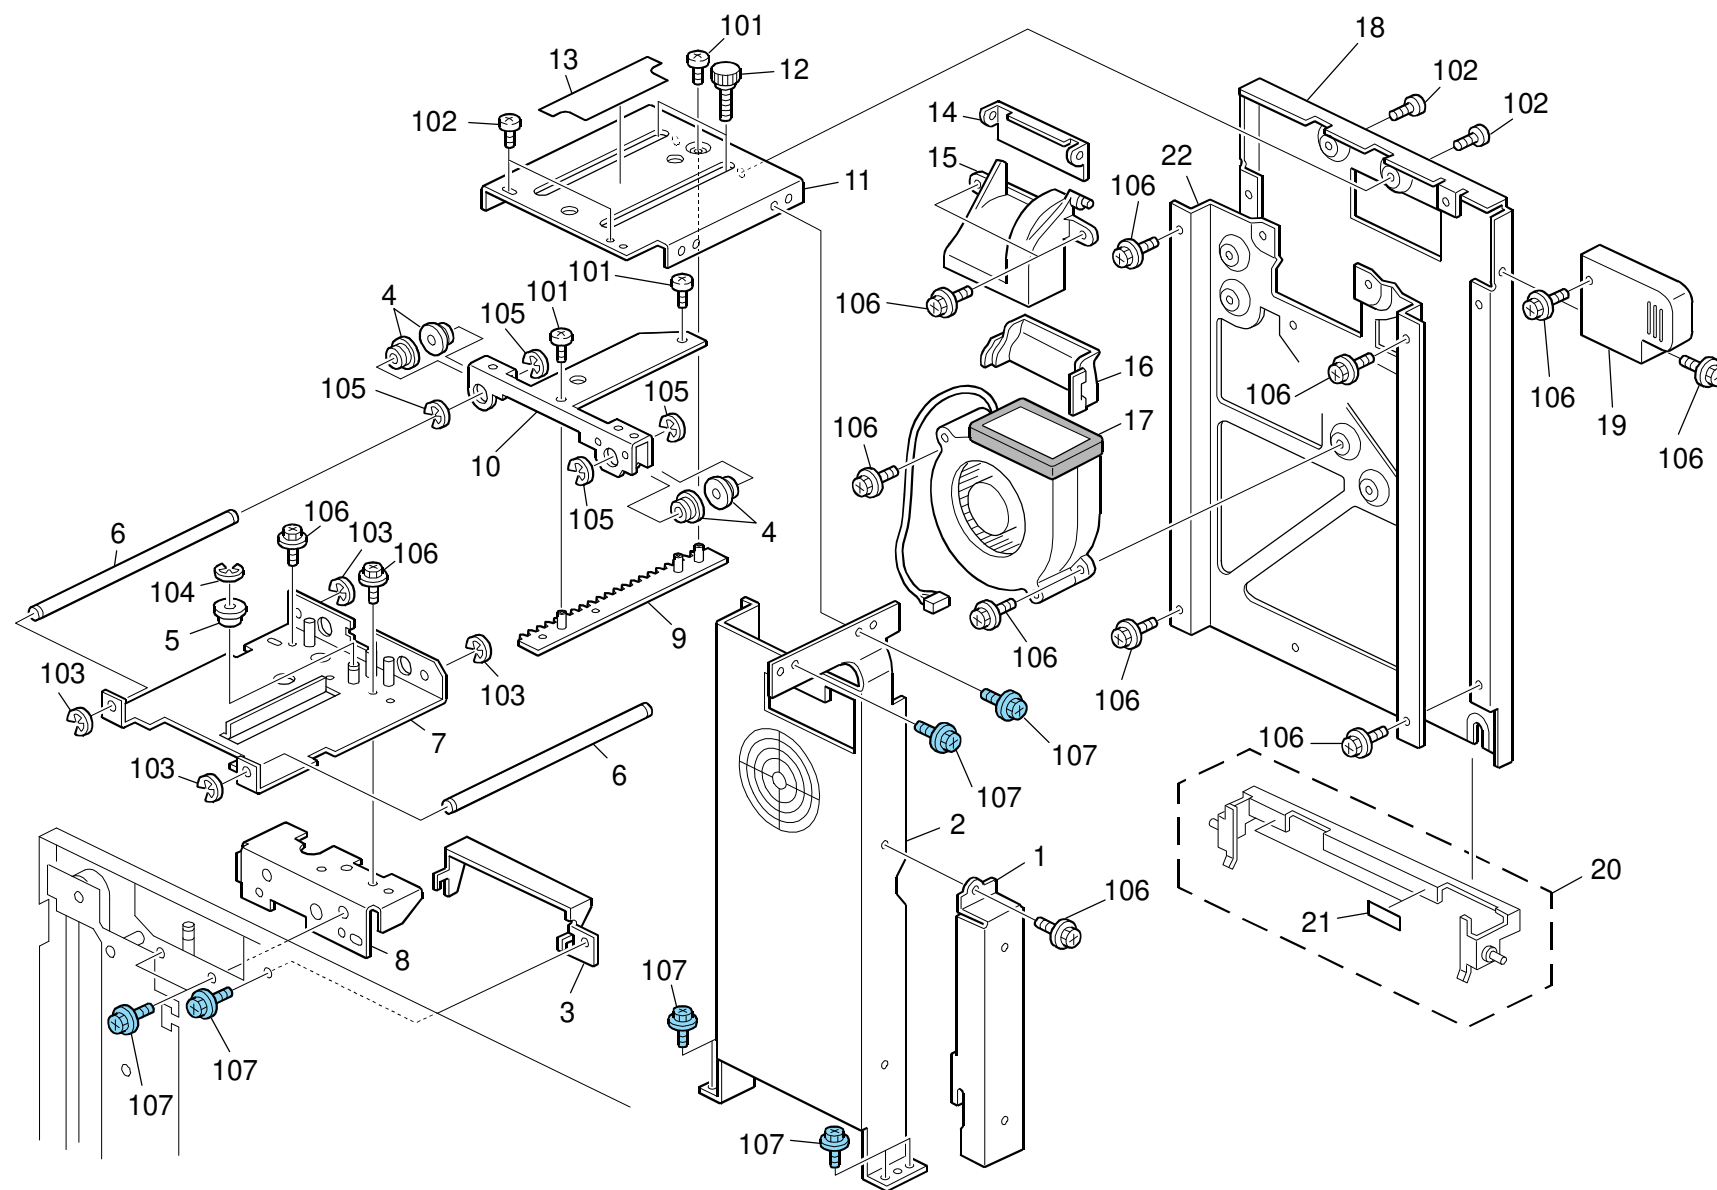


4.Paper Tray 2 (D350)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D355 3462	Cover:Blower:Harness	1
2	D355 3459	Guard:Blower:Front	1
3	D350 4516	Guard:Tray:Side Fence	1
4	B834 3350	Bushing - 6x10x6.5	4
5	B834 3312	Collar	1
6	B834 3368	Slide Shaft - Upper	2
7	B834 3323	Holder - :Upper Front	1
8	B834 3321	Side Fence Bracket - Upper Front	1
9	D350 3339	Rack:Upper Front:Peen	1
10	B834 3332	Guide - Upper Front	1
11	B834 3337	Cover - Upper Front	1
12	B832 2877	Knob Screw:Tray:Guide:Green	1
13	B834 1304	Decal - Side Fence Scale Front	1
14	D355 3363	Cover:Duct	1
15	D355 3361	Duct:Upper Front:Blower	1
16	D355 3372	Duct:Lower:Blower	1
17	D355 5515	Blower:Fan:DC24V 18.24W	1
18	D355 4651	Side Fence:Front	1
19	B834 4153	Side Fence Grip	1
20	D355 4621	Tray Bottom Plate - Support	1
21	B834 3490	Spacer - Side Fence	2
22	D355 4652	Supporting Plate:Side Fence:Front	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0453 3006N	Tapping Screw - M3x6	
102	0453 4006N	Binding Self Tapping Screw:4x6	
103	0720 0040E	Retaining Ring - M4	
104	0720 0030E	Retaining Ring - M3	
105	0720 0080E	Retaining Ring - M8	
106	0451 4008N	Tapping Screw:4x8	
107	0454 4006Q	Tapping Screw:4x6	
108	1105 0511	Harness Clamp - LWS-0306ZC	

5. Paper Tray 3 (D350)

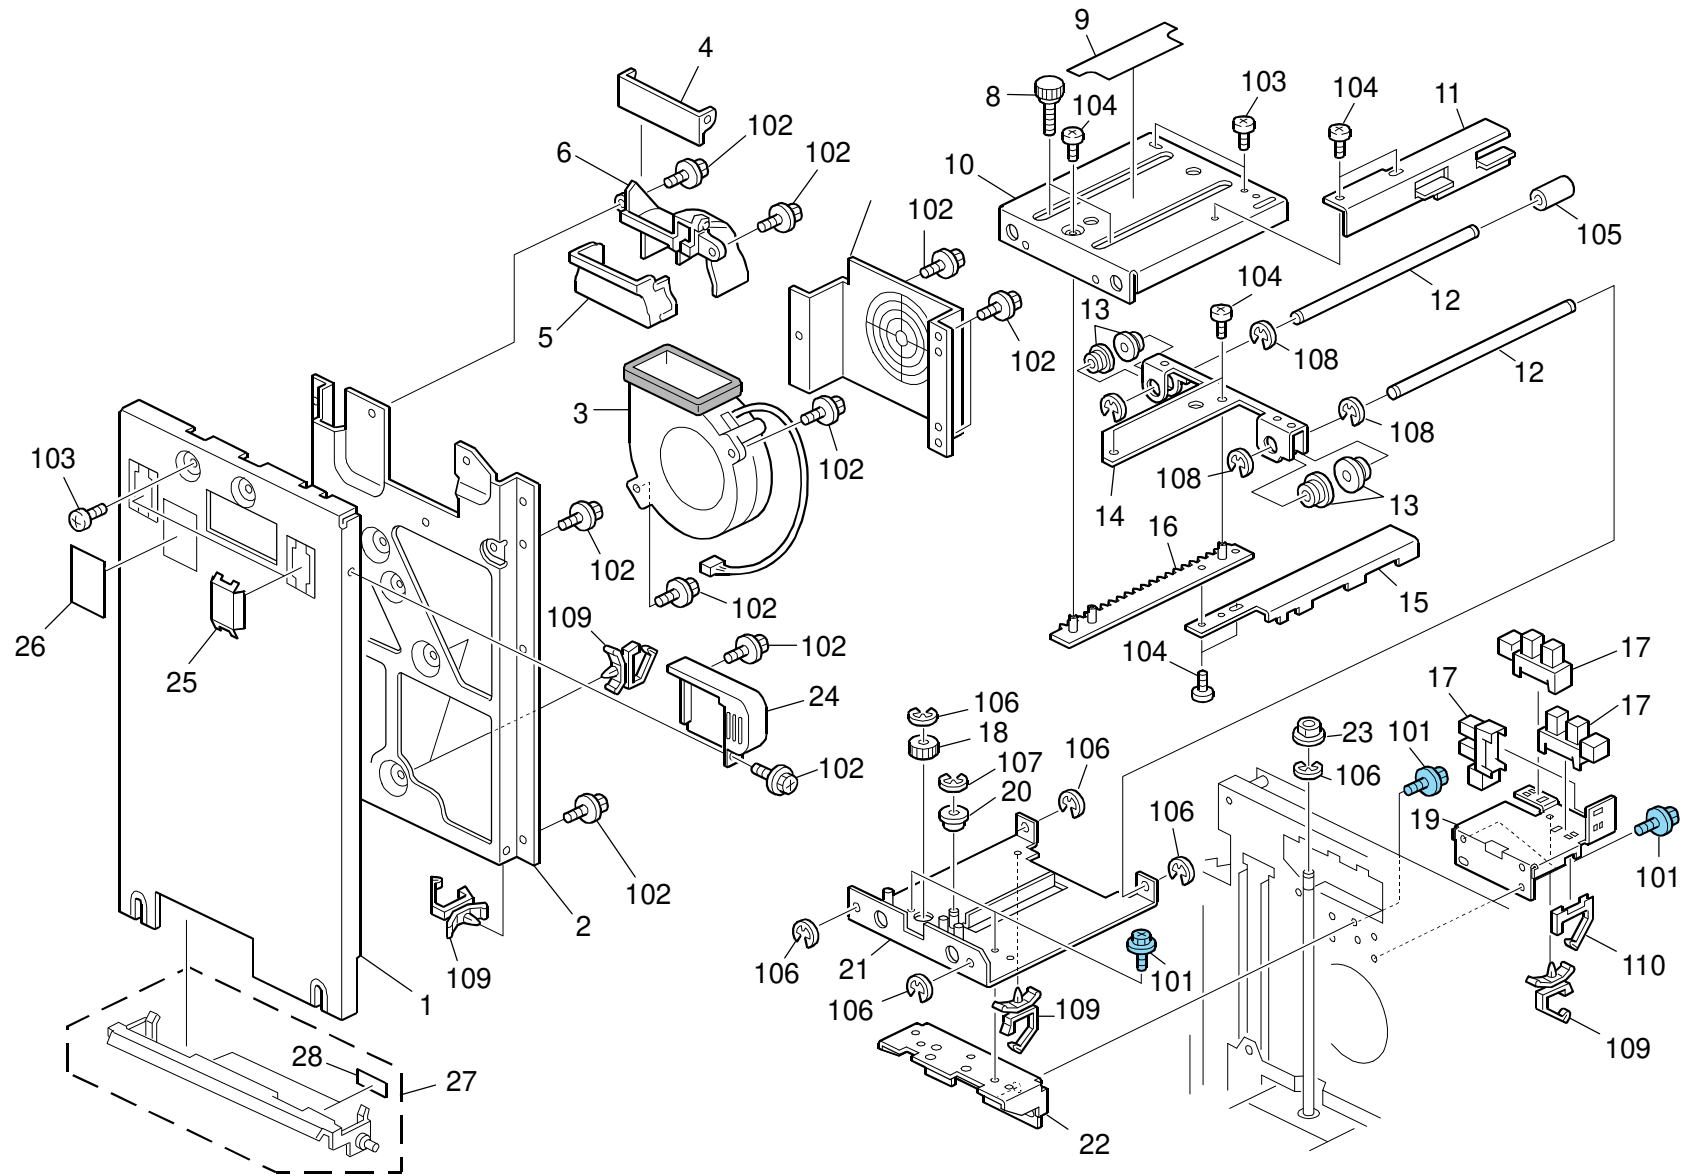


5.Paper Tray 3 (D350)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D355 4661	Side Fence:Rear	1
2	D355 4662	Supporting Plate:Side Fence:Rear	1
3	D355 5515	Blower:Fan:DC24V 18.24W	1
4	D355 3363	Cover:Duct	1
5	D355 3372	Duct:Lower:Blower	1
6	D355 3371	Duct:Upper Rear:Blower	1
7	D355 3461	Guard:Blower:Rear	1
8	B832 2877	Knob Screw:Tray:Guide:Green	1
9	B834 1305	Decal - Side Fence Scale Rear	1
10	B834 3338	Cover - Upper Rear	1
11	B834 4743	Feeler - Paper Size Sensor No.2	1
12	B834 3368	Slide Shaft - Upper	2
13	B834 3350	Bushing - 6x10x6.5	4
14	B834 3334	Guide - Upper Rear	1
15	B834 4742	Feeler - Paper Size Sensor No.1	1
16	B834 3349	Rack - Upper Rear	1
17	AW02 0160	Paper Feed Sensor	3
18	B834 3316	Gear - 13Z	1
19	B834 4741	Paper Size Sensor Bracket	1
20	B834 3312	Collar	3
21	B834 3329	Holder - Upper Rear	1
22	B834 3322	Side Fence Bracket - Upper Rear	1
23	AA08 2101	Bushing - 6x10x6	1
24	B834 4163	Side Fence Grip - Rear	1
25	D355 2777	Plate:Auxiliary:Small:Adhesion	2
26	D355 2674	Decal - Paper Volume	1
27	D355 4621	Tray Bottom Plate - Support	1
28	B834 3490	Spacer - Side Fence	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 4008Q	Tapping Screw - M4x8	
102	0451 4008N	Tapping Screw:4x8	
103	0453 4006N	Binding Self Tapping Screw:4x6	
104	0453 3006N	Tapping Screw - M3x6	
105	0707 6100N	Bushing:DIA6x10	
106	0720 0040E	Retaining Ring - M4	
107	0720 0030E	Retaining Ring - M3	
108	0720 0080E	Retaining Ring - M8	
109	1105 0511	Harness Clamp - LWS-0306ZC	
110	1105 0522	Edge Saddle - LES0510	

6.Paper Tray 4 (D350)

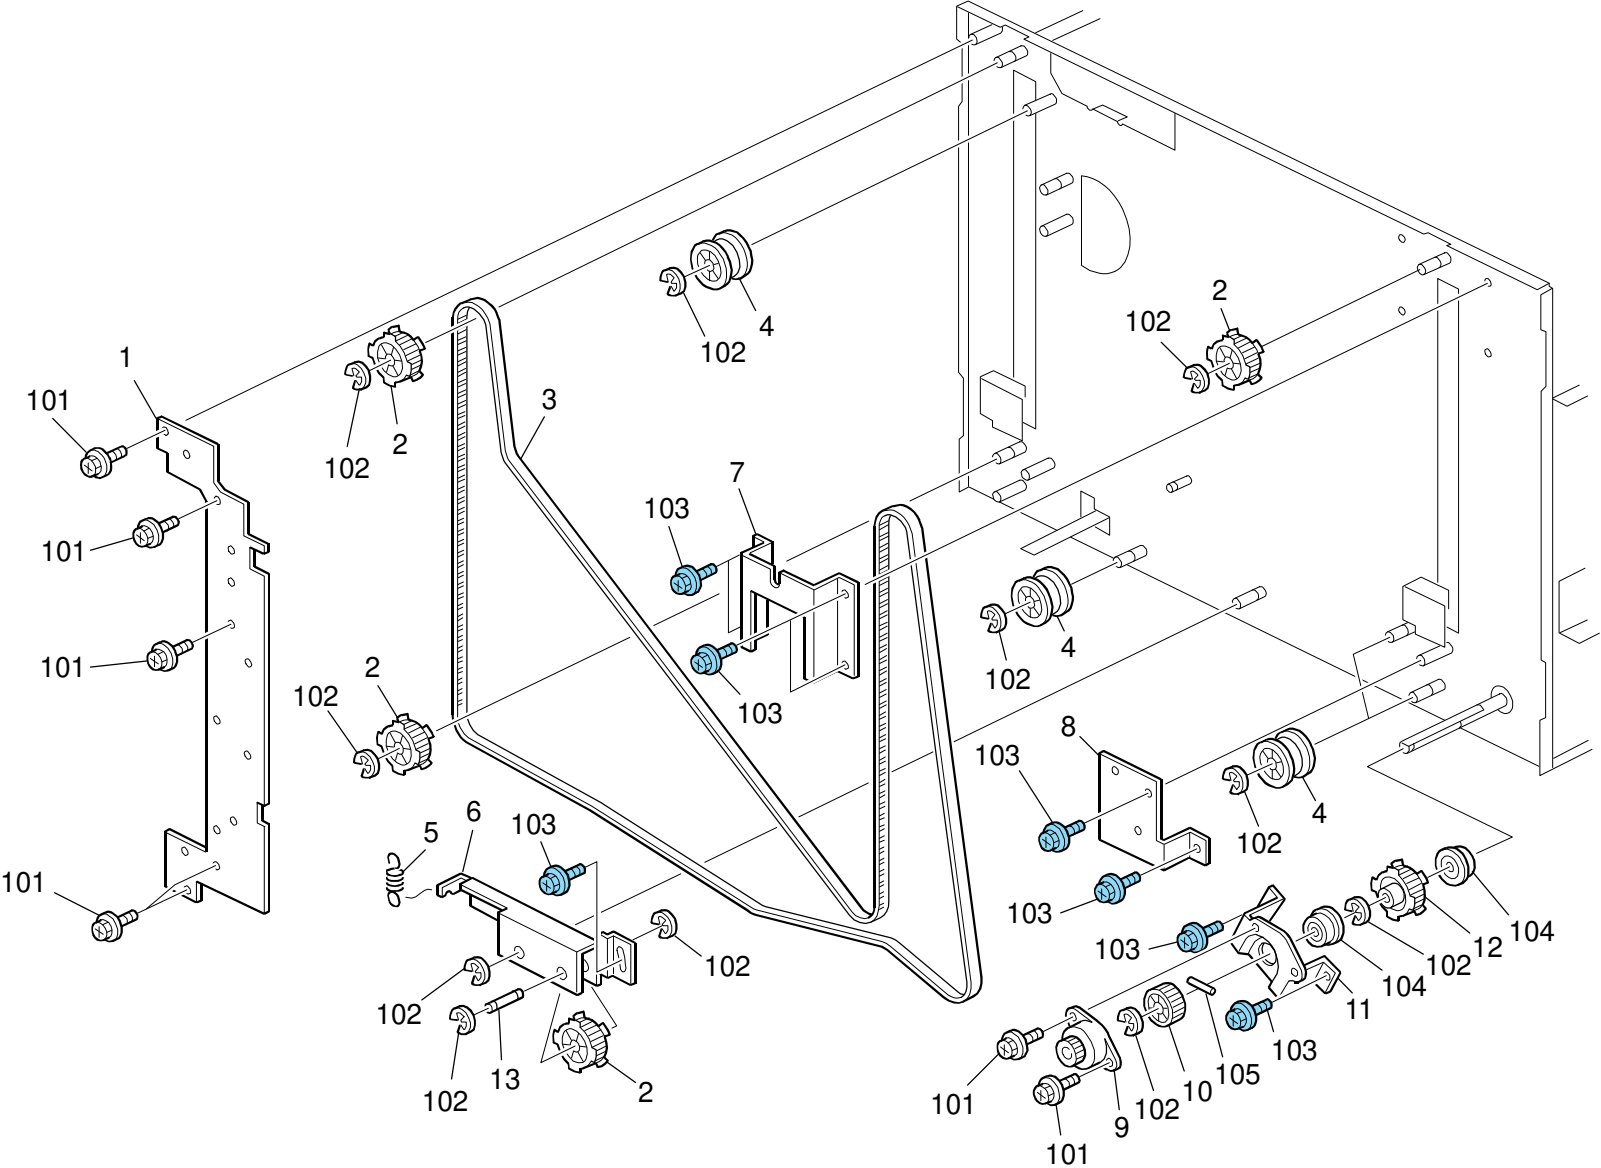


6.Paper Tray 4 (D350)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 4563	Plate	1
2	B834 4557	Timing Pulley:Drive:No.2:Ass'y	4
3	B834 4572	Timing Belt - B100S5M2000	1
4	B834 4559	Tensioner	4
5	AA06 0840	Pressure Spring - 29N	1
6	B834 3245	Tension Bracket No.2 - Front	1
7	B834 3237	Bracket - Front	1
8	B834 4564	Holder - Front	1
9	B834 3493	Oil Damper:0.2nm	1
10	D355 4140	Gear - 24Z	1
11	D355 4562	Drive Bracket - Front Lower	1
12	B834 4565	Timing Pulley - 20T	1
13	B834 4568	Stud	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0720 0060E	Retaining Ring - M6	
103	0454 4008Q	Tapping Screw - M4x8	
104	0742 3808	Ball Bearing - 8x16x5	
105	0633 0140G	Parallel Pin - 3x14	

7. Paper Tray 5 (D350)

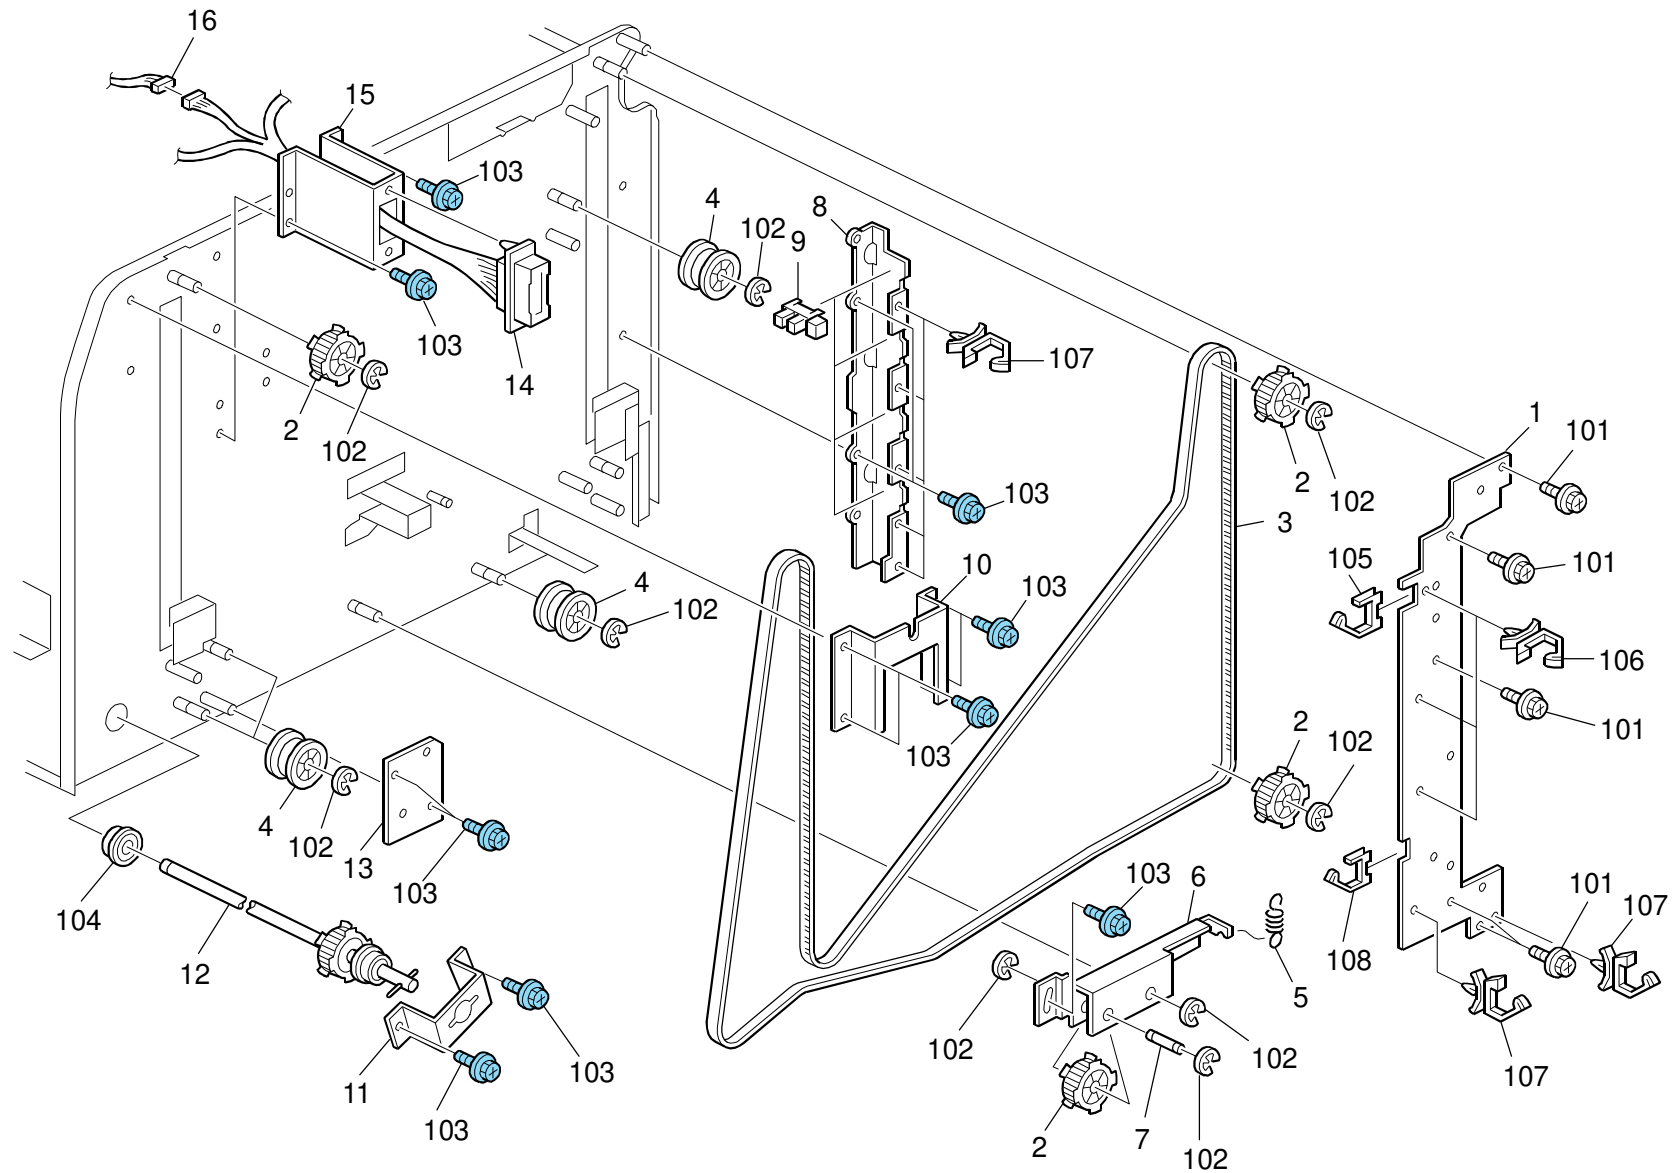


7.Paper Tray 5 (D350)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 4563	Plate	1
2	B834 4557	Timing Pulley:Drive:No.2:Ass'Y	4
3	B834 4572	Timing Belt - B100S5M2000	1
4	B834 4559	Tensioner	4
5	AA06 0840	Pressure Spring - 29N	1
6	B834 4566	Tension Bracket No.2 - Rear	1
7	B834 4568	Stud	1
8	D355 4596	Bracket:Paper Volume Sensor	1
9	AW02 0160	Paper Feed Sensor	4
10	B834 3248	Bracket - Rear	1
11	D355 4563	Drive Bracket - Rear Lower	1
12	D355 4531	Shaft:Main:Drive	1
13	D355 4534	Holder:Driven:Rear	1
14	D355 5315	Harness:Connecting:Tray	1
15	B834 4881	Drawer Connector Bracket	1
16	D355 5316	Harness:Fan	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0720 0060E	Retaining Ring - M6	
103	0454 4008Q	Tapping Screw - M4x8	
104	0742 3808	Ball Bearing - 8x16x5	
105	1105 0518	Edge Saddle - LES-1010	
106	1105 0487	Harness Clamp	
107	1105 0511	Harness Clamp - LWS-0306ZC	
108	1105 0522	Edge Saddle - LES0510	

8. Paper Tray 6 (D350)

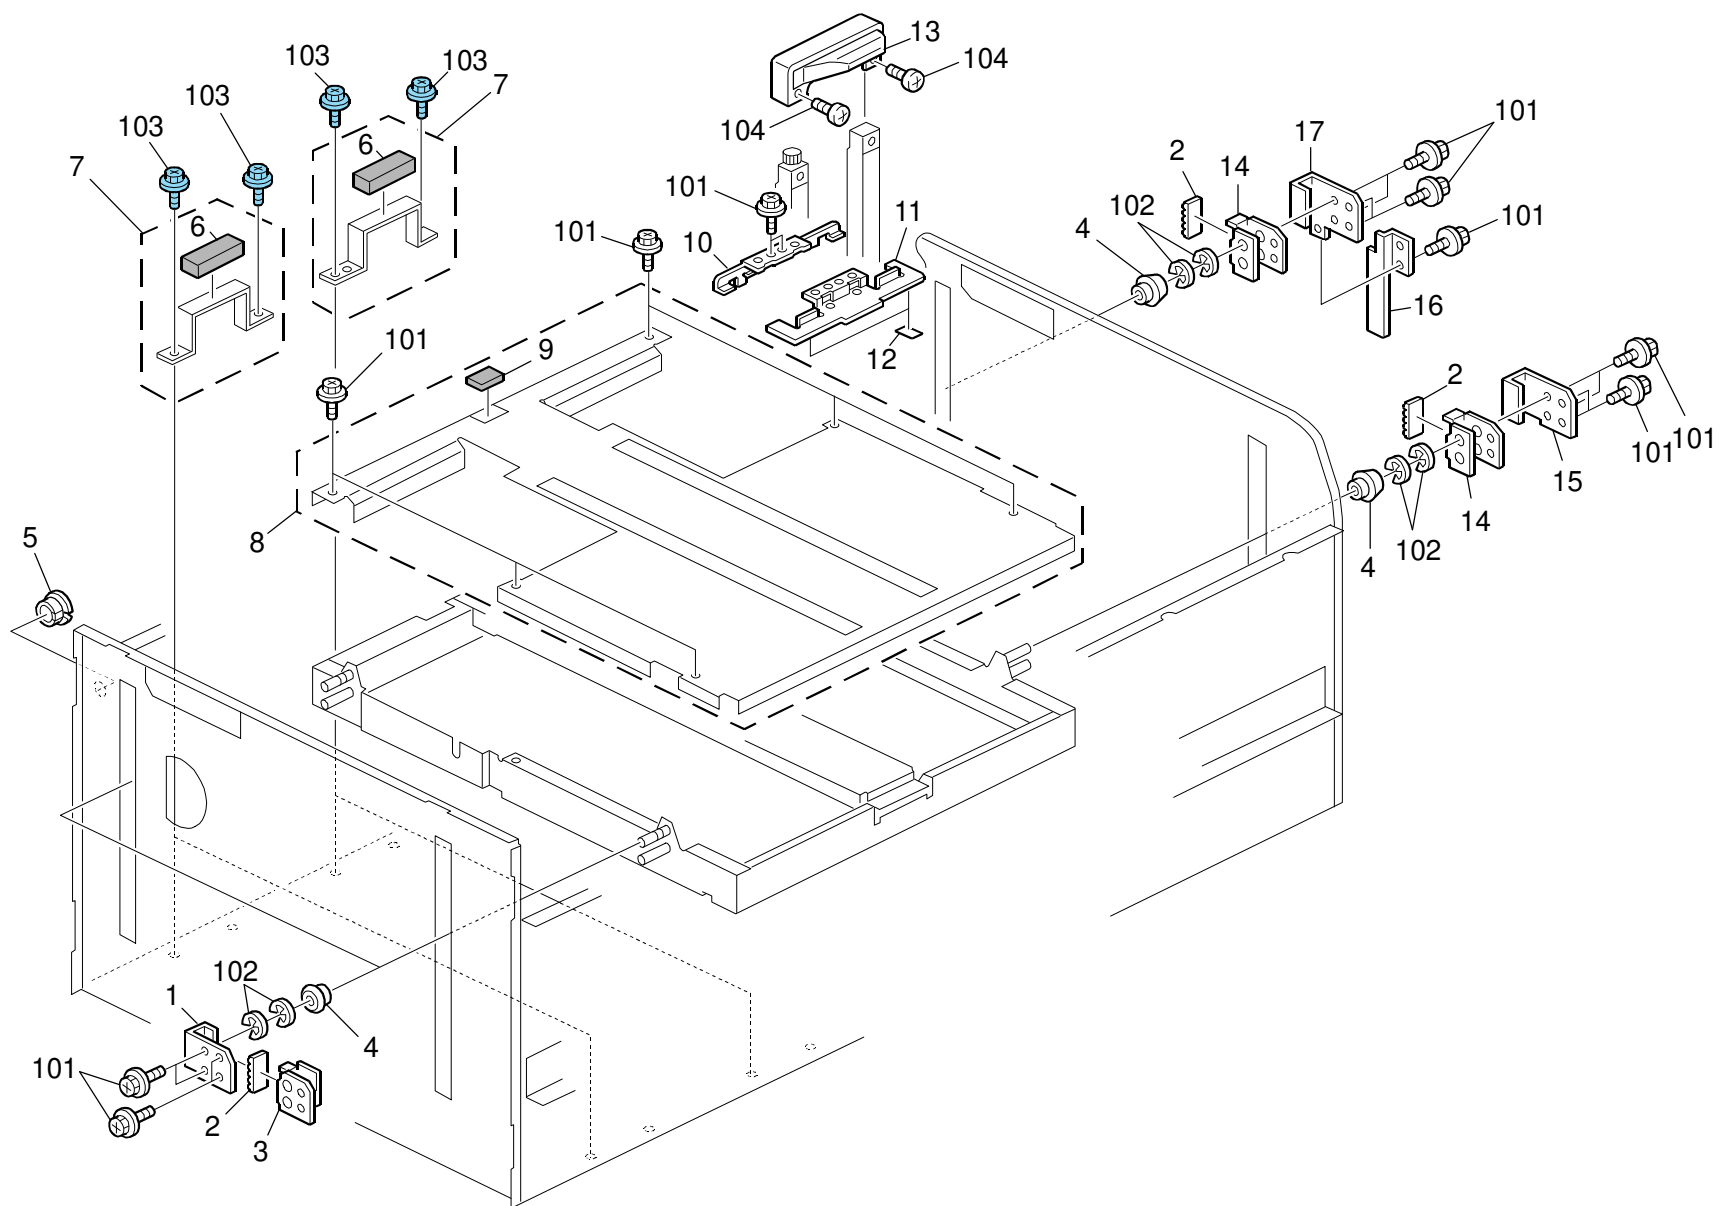


8.Paper Tray 6 (D350)

	Index No.	Part No.	Description	Q'ty Per Assembly
	1	B834 3242	Timing Belt Bracket - Front	2
	2	C563 3116	Belt Joint	4
	3	B834 3243	Timing Belt Holder - Front	2
	4	A335 4351	Guide Roller	4
	5	B234 6141	Positioning Sleeve - Inner Back	1
	6	B834 4032	Cushion:Tray:No.1	4
	7	B834 2715	Tray Cushion Holder	4
	8	D355 4620	Tray Bottom Plate:Adhesion	1
	9	5201 2858	Friction Pad	1
	10	D355 4595	Guide:End Fence:Left	1
	11	D355 4573	Guide:End Fence:Right	1
	12	B834 3490	Spacer - Side Fence	2
	13	D355 4590	Grip:End Fence	1
	14	B834 3231	Timing Belt Holder - Rear	2
	15	B834 3230	Timing Belt Bracket - Rear	2
	16	D355 4576	Feeler:Paper Volume Sensor	1
	17	D355 3230	Bracket:Timing Belt:Rear	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0720 0060E	Retaining Ring - M6	
103	0454 4006Q	Tapping Screw:4x6	
104	0453 4006N	Binding Self Tapping Screw:4x6	

9.Paper Tray 7 (D350)

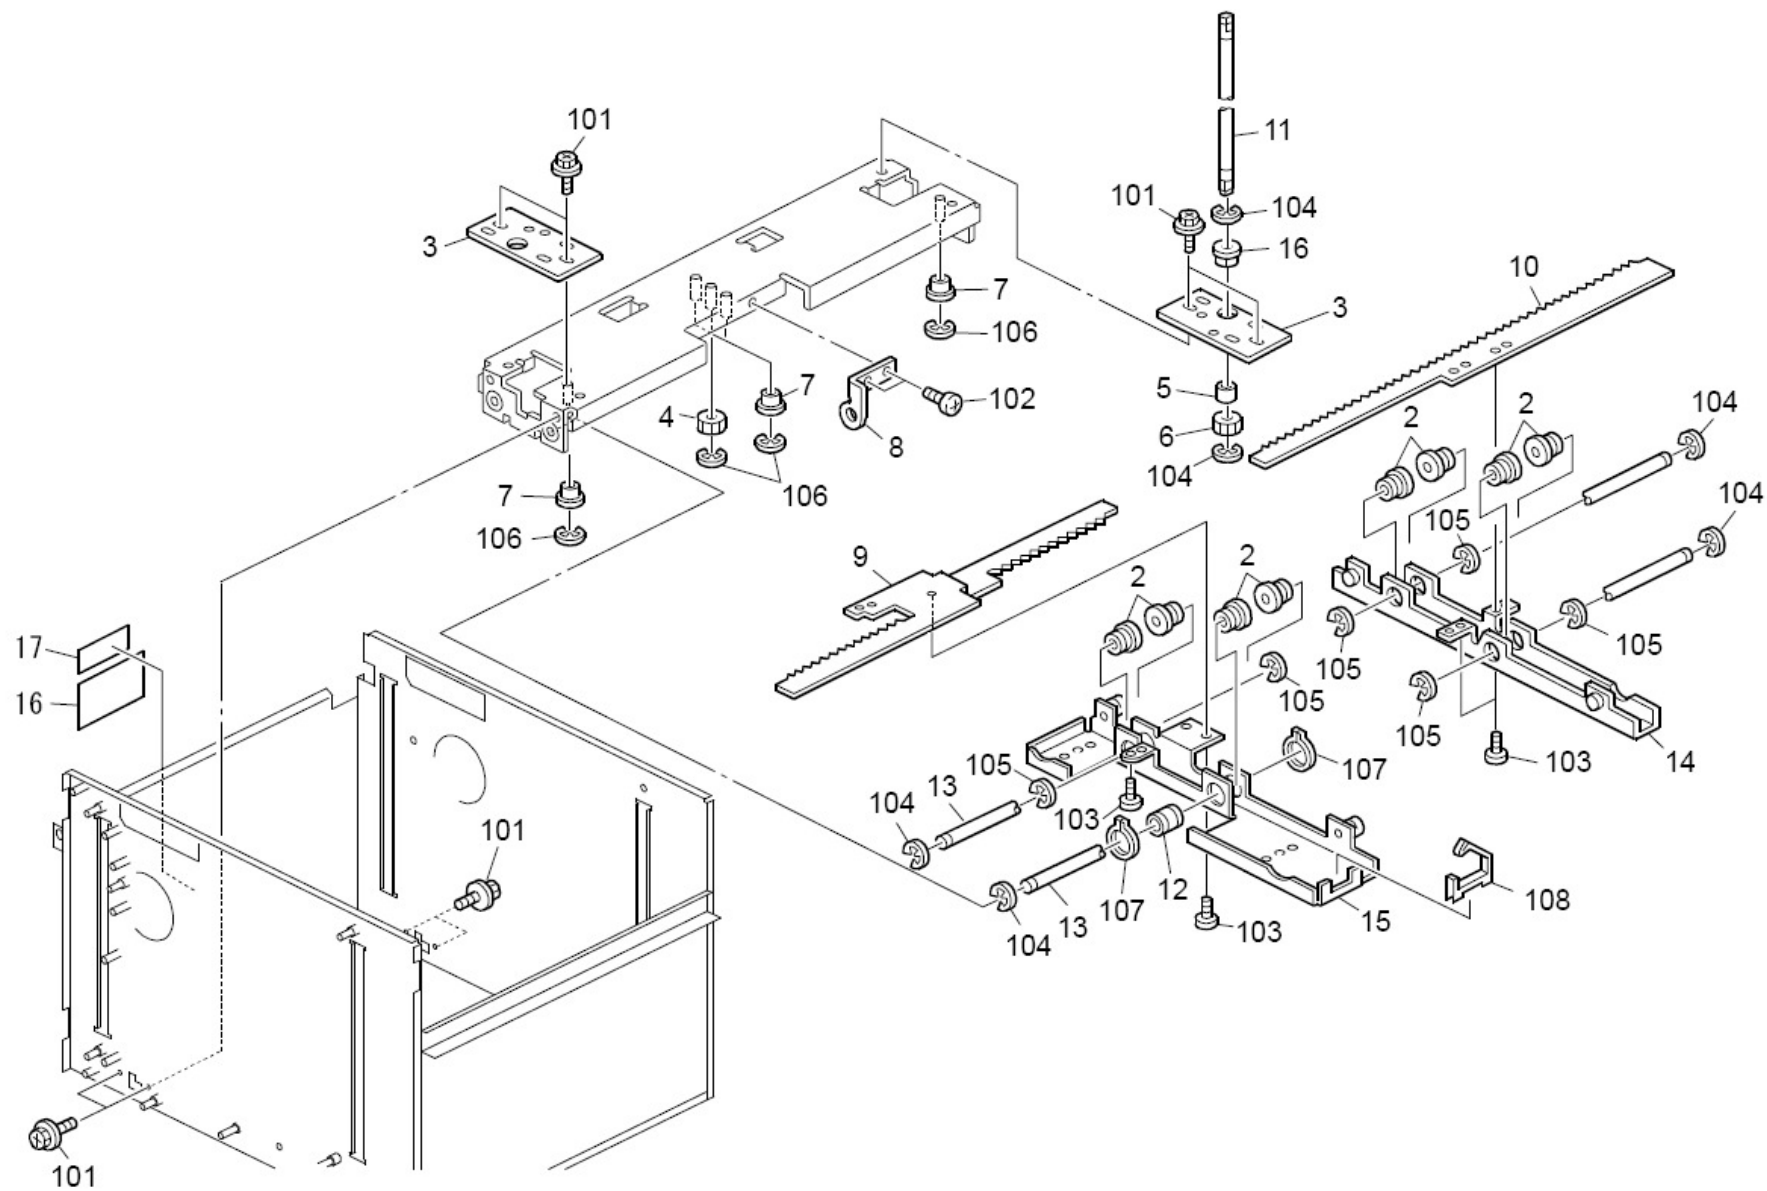


9.Paper Tray 7 (D350)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA08 2101	Bushing - 6x10x6	1
2	B834 3350	Bushing - 6x10x6.5	8
3	B834 3318	Plate:Lower	2
4	B834 3315	Gear - 13Z	1
5	A376 1295	Spacer - M6x10x5	1
6	B834 3316	Gear - 13Z	1
7	B834 3312	Collar	4
8	B834 3314	Shaft Holder - Lower	1
9	B834 3313	Rack - Front:Lower	1
10	B834 4696	Rack - Rear Lower	1
11	B834 3346	Coupling Shaft - Rear	1
12	D355 4866	Ball Bearing:Slide:DIA6	1
13	B834 3111	Side Fence Shaft - Lower	2
14	B834 3309	Side Fence Bracket - Lower Rear	1
15	D355 3306	Bracket:Side Fence:Lower Front	1
16	D355 4572	Decal:Paper Tray:Warning	
17	D355 4574	Decal:Paper Tray:Caution	

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0453 3006N	Tapping Screw - M3x6	
103	0453 4006N	Binding Self Tapping Screw:4x6	
104	0720 0040E	Retaining Ring - M4	
105	0720 0080E	Retaining Ring - M8	
106	0720 0030E	Retaining Ring - M3	
107	0725 0120E	Retaining Ring C - M12	
108	1105 0522	Edge Saddle - LES0510	

10.Paper Tray 8 (D350)

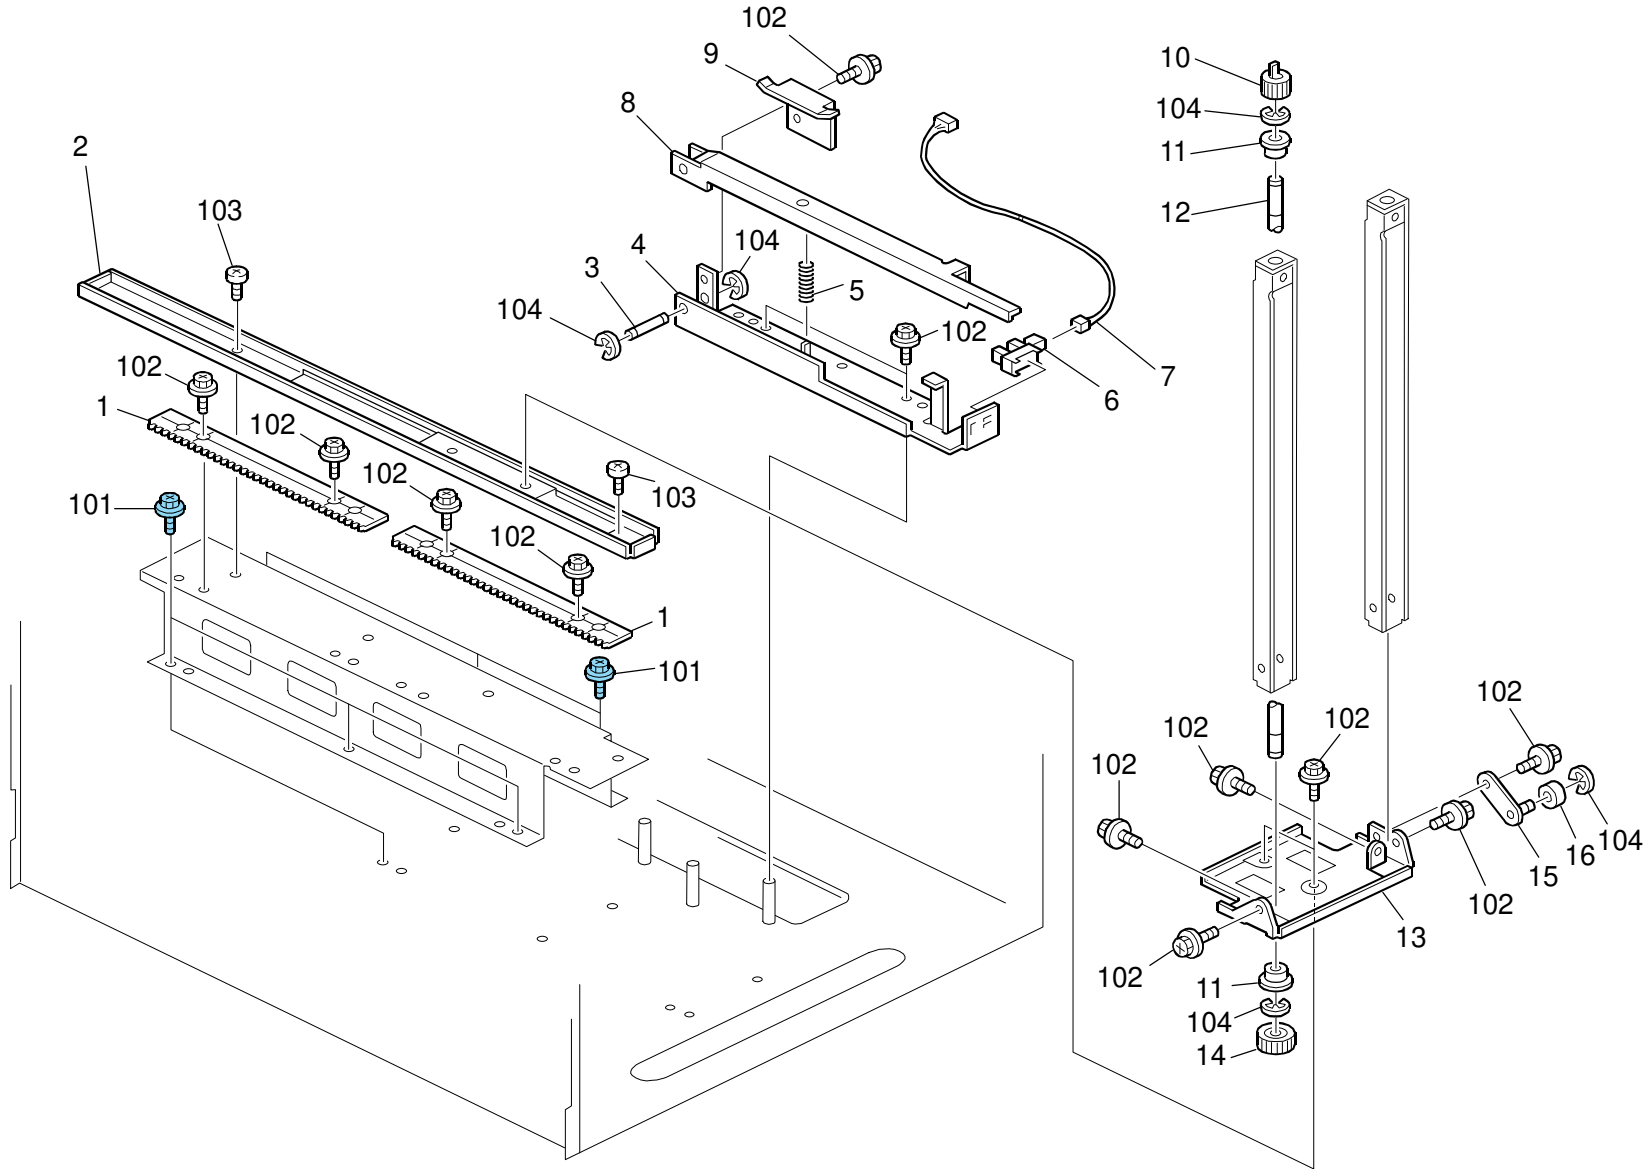


10.Paper Tray 8 (D350)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D355 4593	Rack:Base:End Fence	2
2	B834 3065	Slide Rail - End Fence	1
3	B834 4595	Contact Point Shaft - Long	1
4	B834 4593	Paper Size Sensor Bracket - Long	1
5	G052 1518	Spring - Lock Lever	1
6	AW02 0160	Paper Feed Sensor	1
7	D350 5322	Harness:Tray:Sensor	1
8	B834 4594	Shielding Plate - Long	1
9	B834 3169	Paper Size Sensor Plate	1
10	A294 4156	Gear - 23Z	1
11	H085 1109	Bushing - M6x5	2
12	D355 4597	Shaft:End Fence:Coupling	1
13	D355 4583	Bracket:End Fence	1
14	A228 3613	Gear - 20Z	1
15	D355 4581	Bracket:Paper Size Sensor	1
16	D355 4598	Roller:Slider	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 4006Q	Tapping Screw:4x6	
102	0451 4008N	Tapping Screw:4x8	
103	0453 4006N	Binding Self Tapping Screw:4x6	
104	0720 0040E	Retaining Ring - M4	

11.Paper Feed Section 1 (D350)

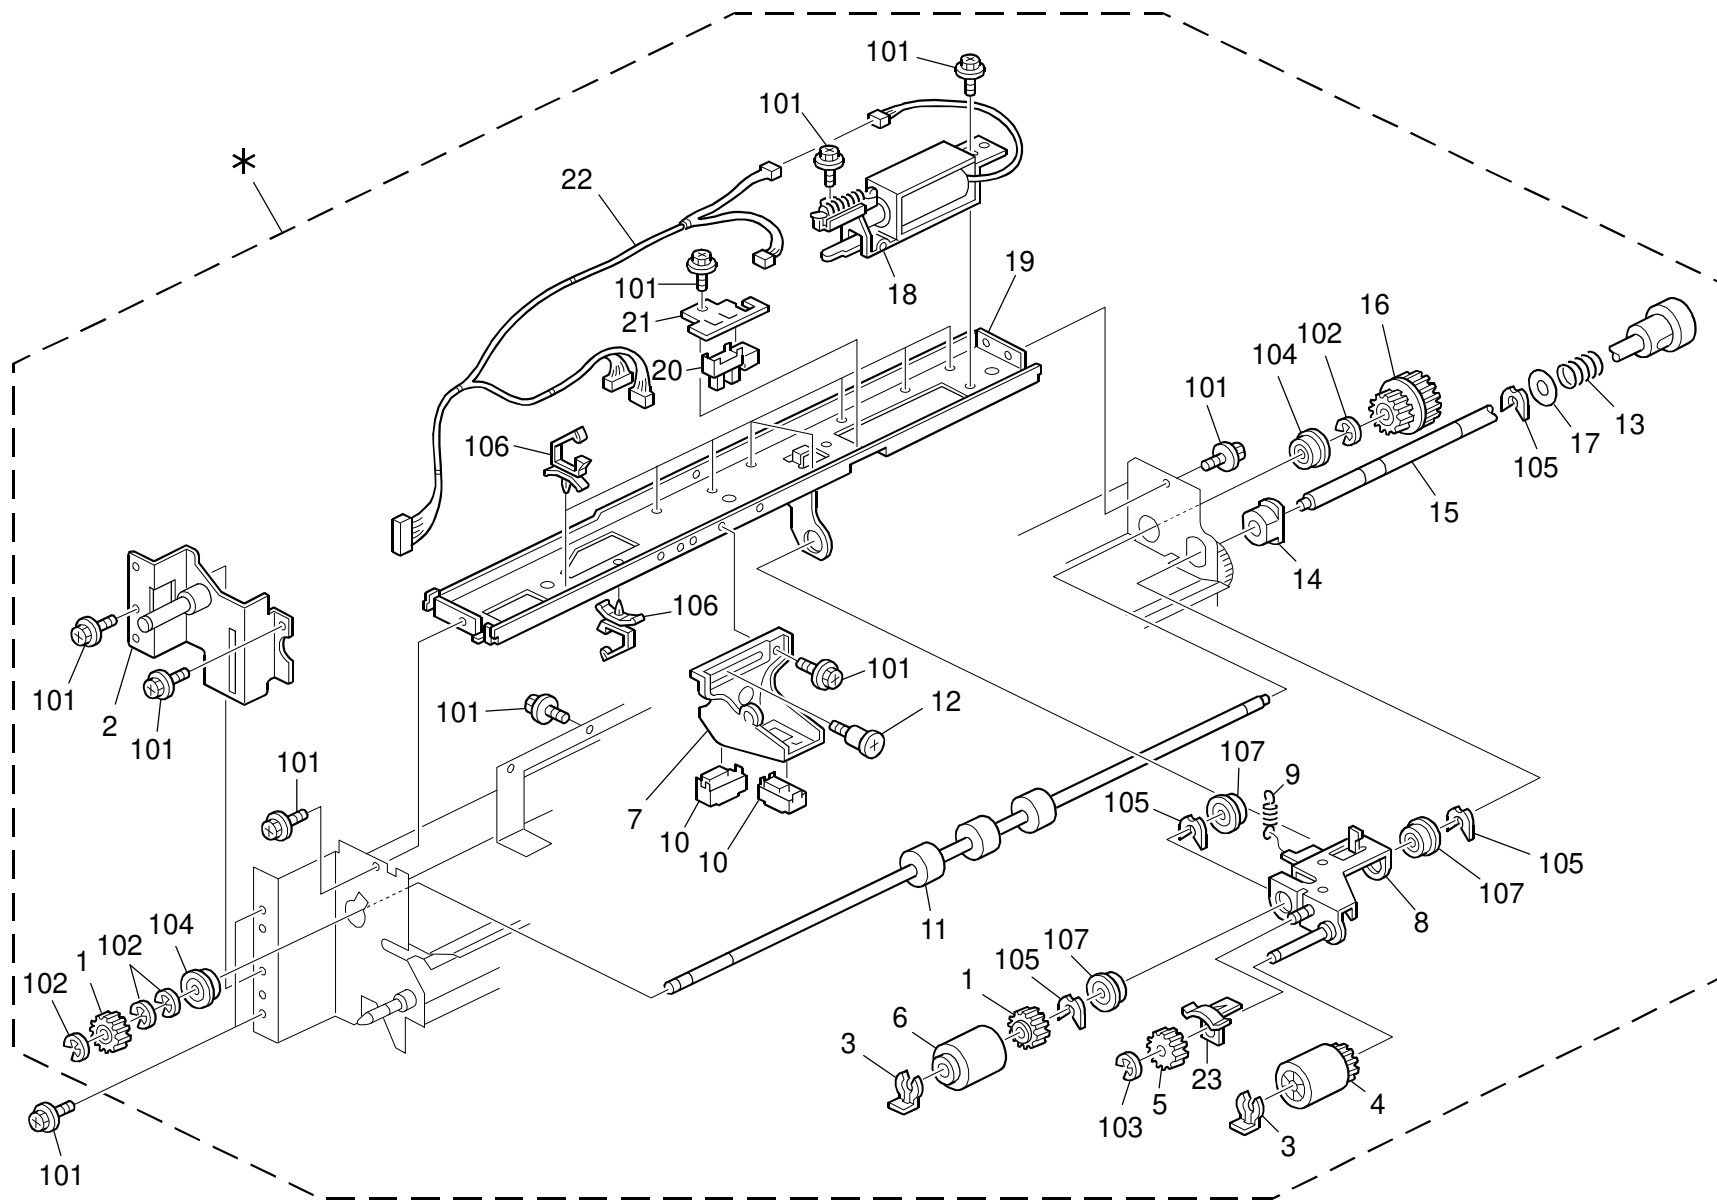


11.Paper Feed Section 1 (D350)

Index No.	Part No.	Description	Q'ty Per Assembly
*	D350 2500	Paper Feed Unit	1
1	AB01 1478	Gear - 18Z	2
2	D350 2631	Stay	1
3	AA10 0014	Retaining Ring C - Separate	2
4	AF03 0080	Paper Feed Roller:Pickup	1
5	5447 2706	Gear - 15T	1
6	AF03 1083	Paper Feed Roller:Feed:Manual Feed	1
7	D355 2577	Bracket:Sensor:Paper Feed	1
8	B832 2574	Pickup Arm	1
9	AA06 6677	Tension Spring	1
10	AW01 0122	Paper Feed Sensor	2
11	AF02 1410	Transport Roller	1
12	AA14 3812	Screw - Scale	1
13	AA06 3204	Compression Spring	1
14	AA08 3015	Roller Clutch	1
15	D350 2585	Shaft:Feed Roller	1
16	AB01 7724	Gear - 23Z/28Z	1
17	B132 4119	Spacer:Gear:Idler	1
18	B832 2578	DC Solenoid 24V	1
19	B832 2571	Stay:Feed:Peen	1
20	AW02 0145	Photointerruptor:Flat	1
21	B511 2677	Sensor Bracket	1
22	D350 5311	Harness:Paper Feed Unit	1
23	D355 2571	Paper Feed Roller:Guard	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0720 0060E	Retaining Ring - M6	
103	0720 0040E	Retaining Ring - M4	
104	0742 3808	Ball Bearing - 8x16x5	
105	0805 0088	Retaining Ring - M6	
106	1105 0511	Harness Clamp - LWS-0306ZC	
107	0741 3708	Ball Bearing - 8x12x3.5MM	

12.Paper Feed Section 2 (D350)

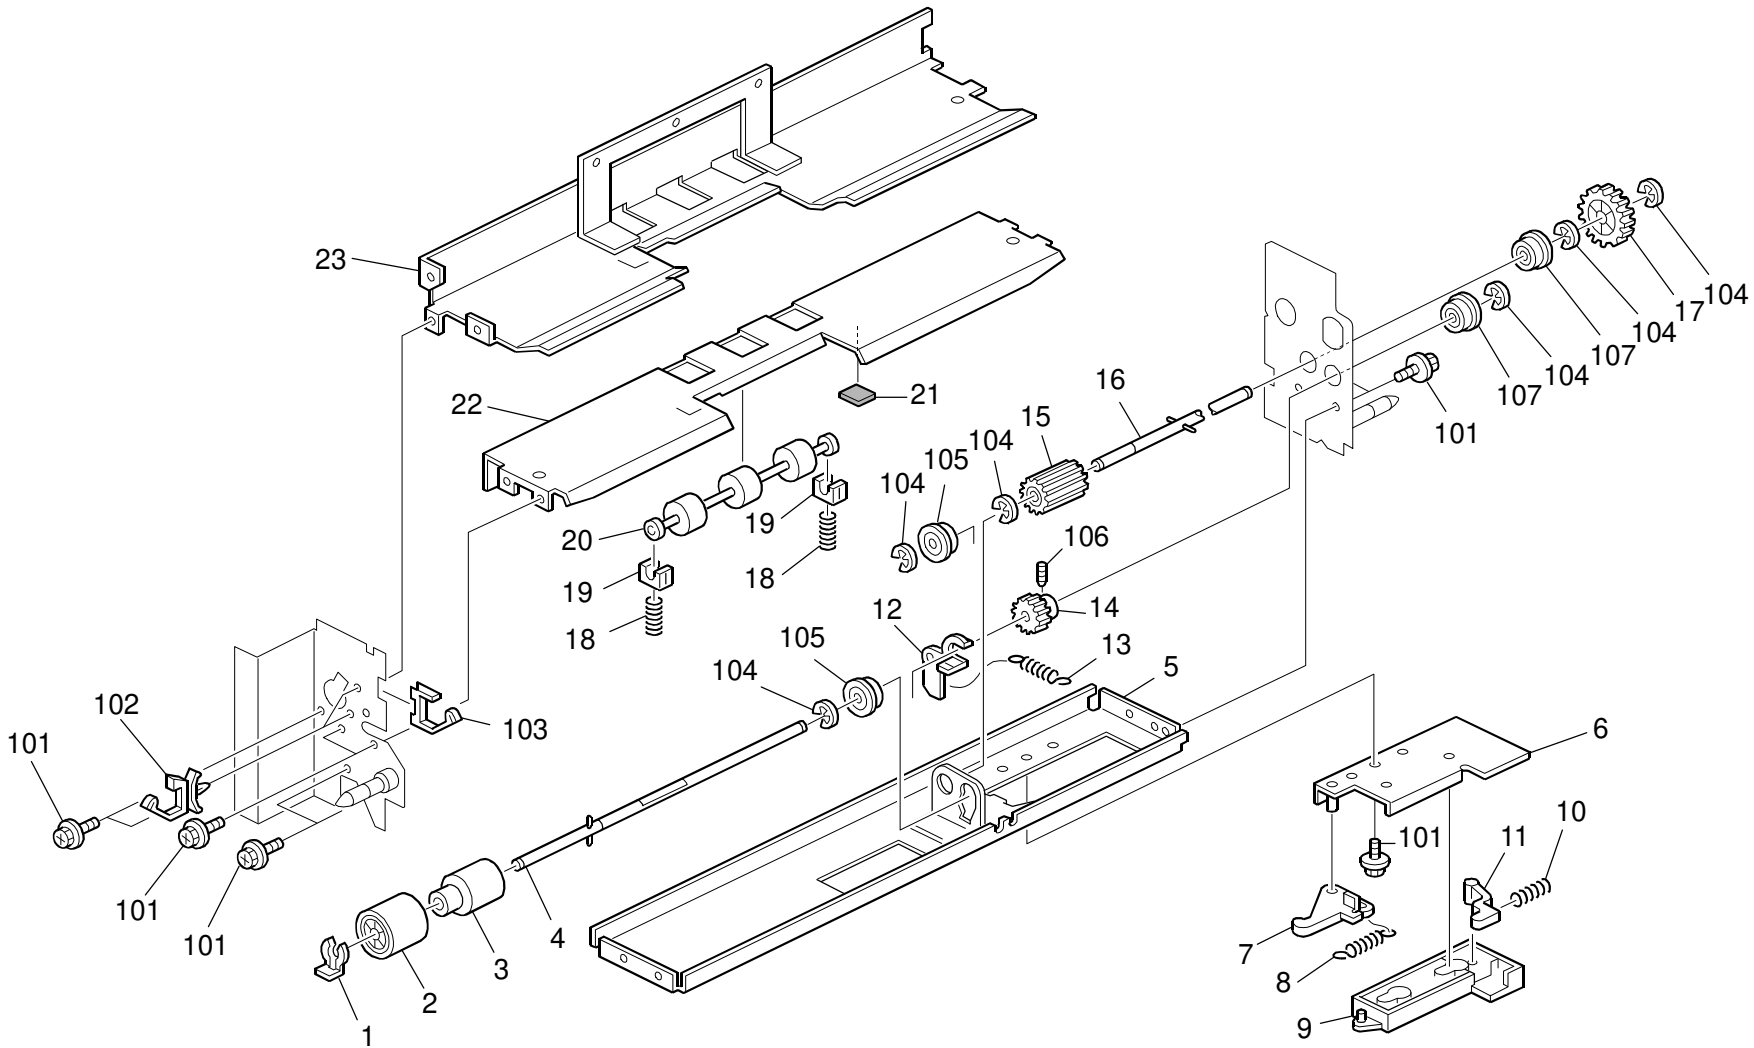


12.Paper Feed Section 2 (D350)



Index No.	Part No.	Description	Q'ty Per Assembly
1	AA10 0014	Retaining Ring C - Separate	1
2	AF03 2080	Paper Feed Roller:Separate	1
3	B234 6300	Torque Limiter	1
4	B234 6223	Driven Reverse Shaft	1
5	B832 2541	Stay	1
6	D355 2561	Bracket:Reverse:Release	1
7	B303 2559	Lever:Pressure Release:Reverse	1
8	D355 2559	Tension Spring:Reverse	1
9	D355 2554	Hook:Reverse:Pressure	1
10	D355 2563	Compression Spring:Reverse: Pressure:Auxiliary	1
11	D355 2556	Lever:Reverse:Pressure:Swivel	1
12	B303 2556	Reverse Pressure Lever	1
13	B833 2567	Tension Spring	1
14	AB01 1591	Gear:Reverse	1
15	AB01 1392	Drive Reverse Gear - 24Z	1
16	B234 6222	Reverse Drive Shaft	1
17	BB01 3008	Gear - 31Z	1
18	B833 2565	Compression Spring	2
19	AA08 4059	Ball Bearing Holder	2
20	B834 2568	Transport Roller - Driven	1
21	A229 2692	Damping Insulation	1
22	B832 2535	Reverse Guide Plate	1
23	B834 2520	Feed Guide Plate	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	1105 0511	Harness Clamp - LWS-0306ZC	
103	1105 0522	Edge Saddle - LES0510	
104	0720 0040E	Retaining Ring - M4	
105	0741 3506	Ball Bearing - 6x12x4 MM	
106	0573 0030E	Hexagon Headless Set Screw - M3x3	
107	0741 3706	Ball Bearing - 6x10x3	

13.Transfer Section 1 (D350)

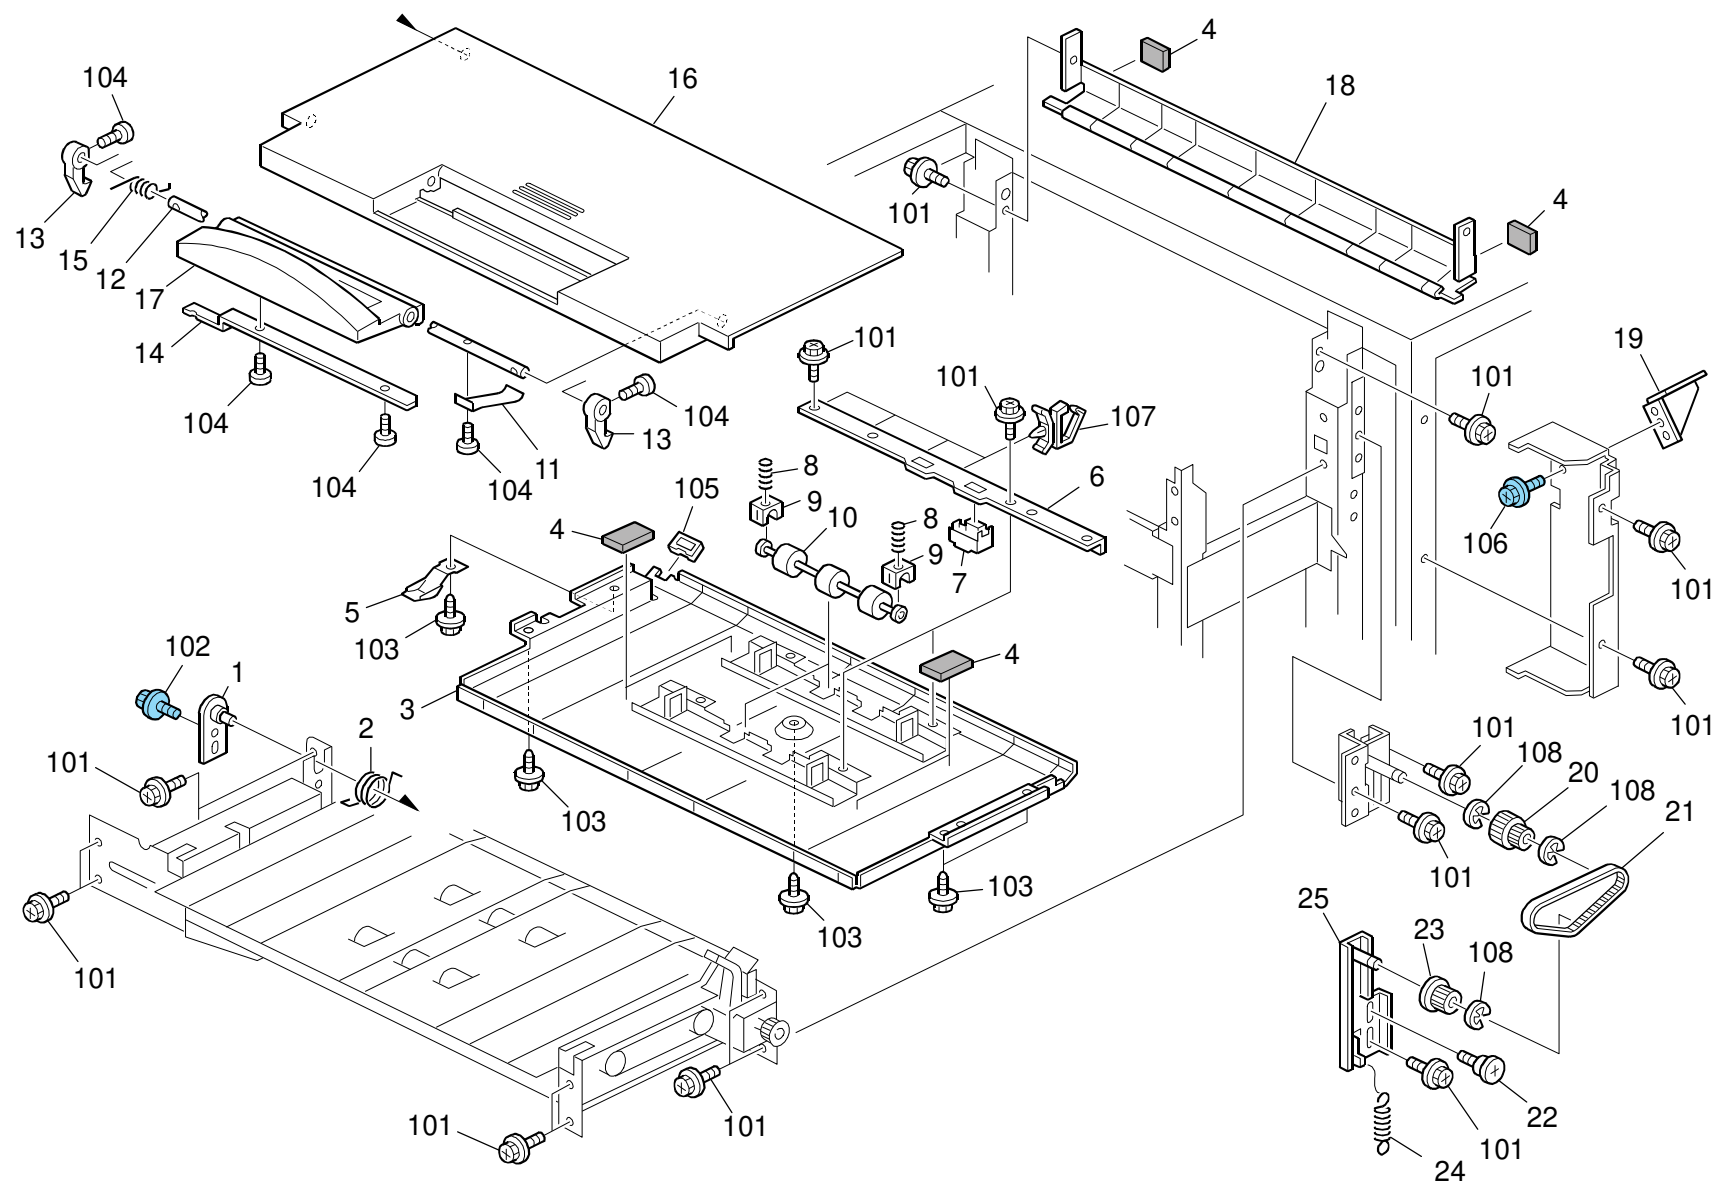


13.Transfer Section 1 (D350)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D350 2858	Bracket:Pin:Fix	1
2	D350 4836	Torsion Spring:Cover:Transport	1
3	D350 3960	Guide Plate:Cover:Transport	1
4	D350 1394	Cushion:Guide Plate:6.0	6
5	D350 4827	Ground Plate:Guide Plate	1
6	D355 3998	Bracket:Sensor:Transport	1
7	AW01 0122	Paper Feed Sensor	1
8	D350 4834	Compression Spring:Transport	2
9	AA08 4059	Ball Bearing Holder	2
10	B834 2568	Transport Roller - Driven	1
11	D350 4823	Ground Plate:Shaft:Lock	1
12	D350 4821	Shaft:Lock:Guide Plate	1
13	D350 2714	Pawl:Lock	2
14	D350 4824	Bracket:Grip:Fix	1
15	D350 4825	Torsion Spring:Grip	1
16	D350 3964	Cover:Transport	1
17	D350 4811	Grip:Cover:Transport	1
18	D350 2532	Guide Plate:Feed:Upper	1
19	B834 3836	Stopper Stay	1
20	D350 2560	Timing Pulley - 16T	1
21	AA04 3607	Timing Belt - 60S3M180	1
22	C218 2185	Stepper Screw	1
23	G569 2710	Timing Pulley - Tray Bottom Plate	1
24	B234 6508	Tension Spring	1
25	D350 3871	Bracket:Tightener	1

Index No.	Part No.	Description	Q'ty Per Assembly
102	0454 4006Q	Tapping Screw:4x6	
102	0454 4008Q	Tapping Screw - M4x8	
103	0450 3008N	Tapping Screw - M3x8	
103	0720 0060E	Retaining Ring - M6	
104	0353 0060N	Bind Screw - M3x6	
105	1105 0551	Clamp:LES-0505	
106	0454 3008Q	Tapping Screw:3x8	
107	1105 0511	Harness Clamp - LWS-0306ZC	
108	0720 0060E	Retaining Ring - M6	

14.Transfer Section 2 (D350)

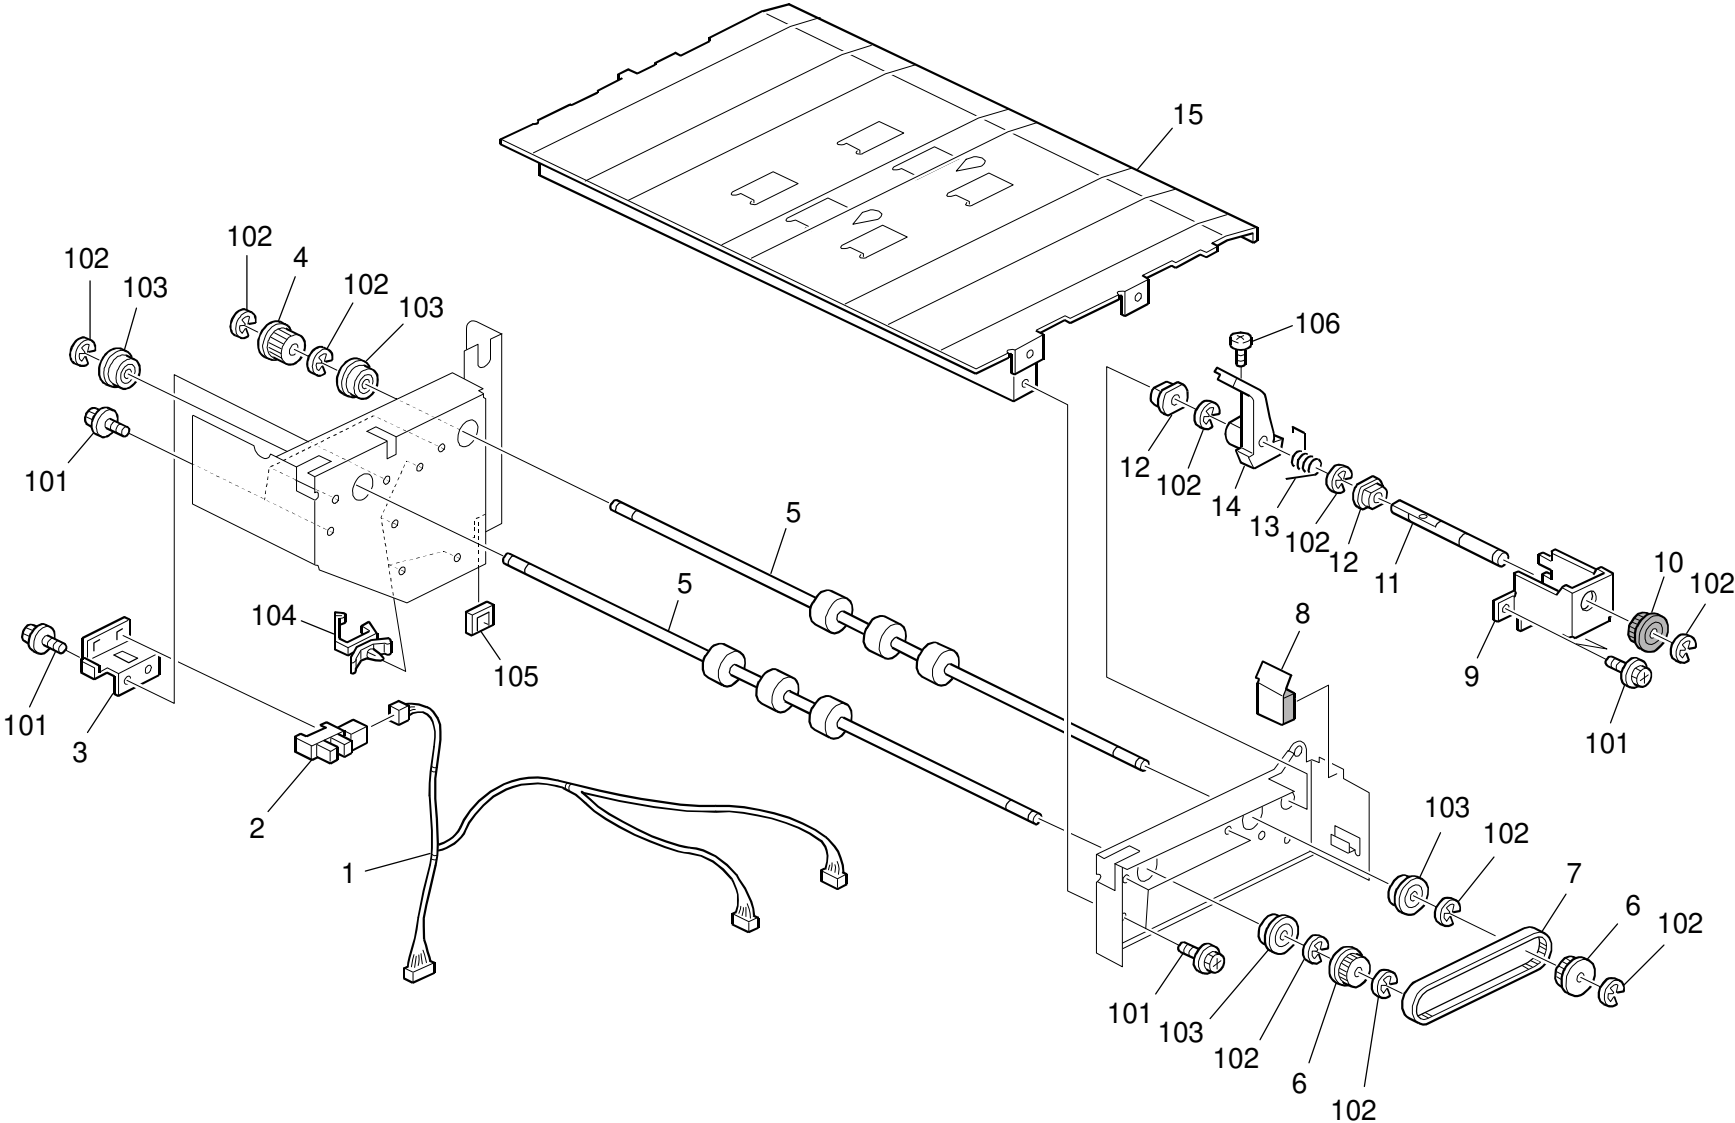


14.Transfer Section 2 (D350)



Index No.	Part No.	Description	Q'ty Per Assembly
1	D350 5312	Harness:Transport Unit	1
2	AW02 0145	Photointerruptor:Flat	1
3	D350 3865	Bracket:Photointerruptor	1
4	B234 6507	Timing Pulley - 25T	1
5	D350 1410	Transport Roller:Grip	2
6	B234 6506	Timing Pulley - 30T	2
7	B834 1645	Timing Belt - B60S2M220	1
8	D350 3869	Seal:Cover:Transport	1
9	D350 2557	Bracket:Knob:Misfeed Removal	1
10	G569 2836	Timing Pulley - 20T	1
11	D350 2559	Shaft:Knob:Misfeed Removal	1
12	B872 2614	Bushing:R1	2
13	D350 4837	Torsion Spring:Knob:Misfeed Removal	1
14	D350 2563	Knob:Misfeed Removal	1
15	D350 2530	Guide Plate:Feed:Peen	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0720 0060E	Retaining Ring - M6	
103	0742 3808	Ball Bearing - 8x16x5	
104	1105 0511	Harness Clamp - LWS-0306ZC	
105	1105 0551	Clamp:LES-0505	
106	0353 0060N	Bind Screw - M3x6	

15.Transfer Section 3 (D350)

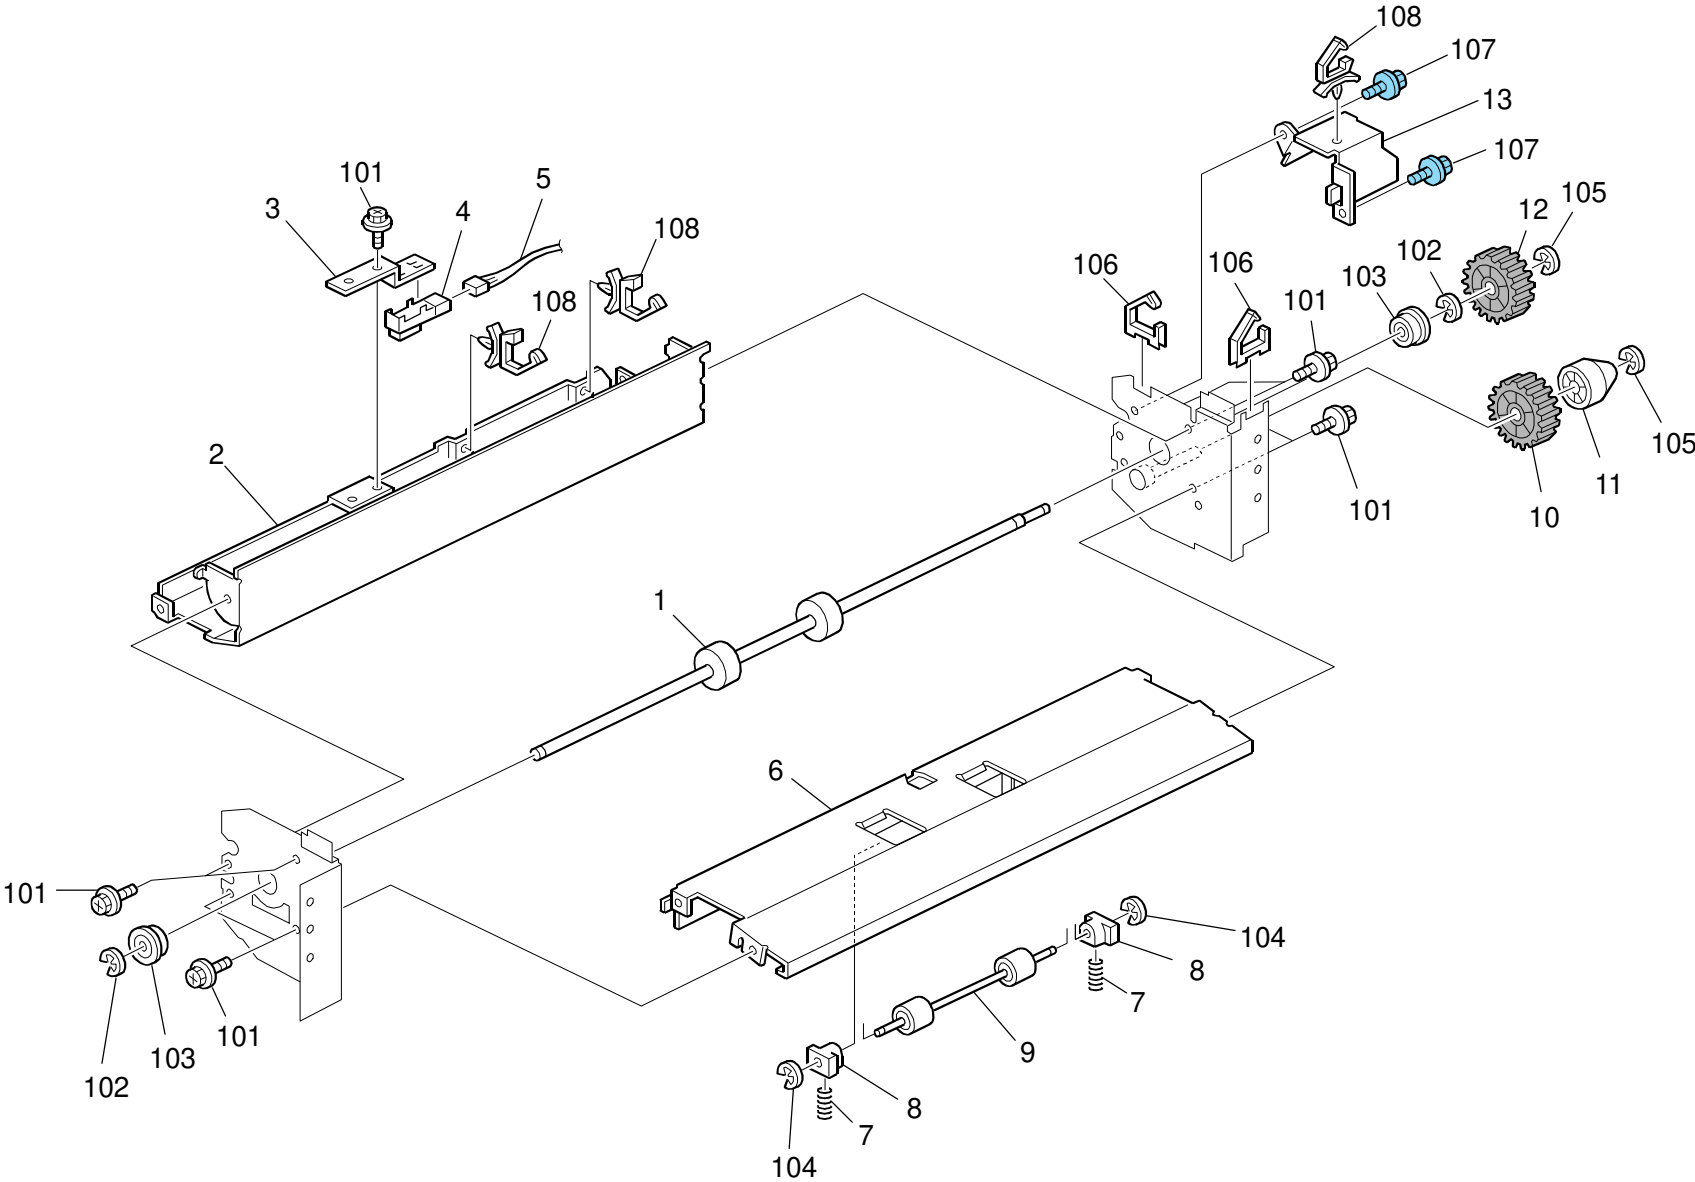




15.Transfer Section 3 (D350)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D350 2830	Roller:Connecting:Drive	1
2	D350 2824	Guide Plate:Upper Paper Feed	1
3	D350 2855	Bracket:Sensor:Manual Feed	1
4	AW01 0107	Paper Feed Sensor	1
5	D350 5350	Harness:Joint Unit	1
6	D350 2826	Guide Plate:Separator	1
7	AA06 3433	Exit Roller Spring	2
8	AA08 0034	Bushing - 4x5x7	2
9	B132 2675	Transport Roller:Driven:Duplex	1
10	D350 2832	Gear - 36Z/60Z	1
11	B132 2856	Roller:Manual Feed Unit:Drive	1
12	D350 2835	Gear - 42Z	1
13	B132 2857	Stopper:Magnetic Clutch	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0314 0080N	Philips Pan Head Screw - M4x8	
102	0720 0060E	Retaining Ring - M6	
103	0742 3808	Ball Bearing - 8x16x5	
104	0720 0025E	Retaining Ring - M2.5	
105	0720 0040E	Retaining Ring - M4	
106	0454 3006Q	Tapping Screw - M3x6	

16. Drive Section (D350)

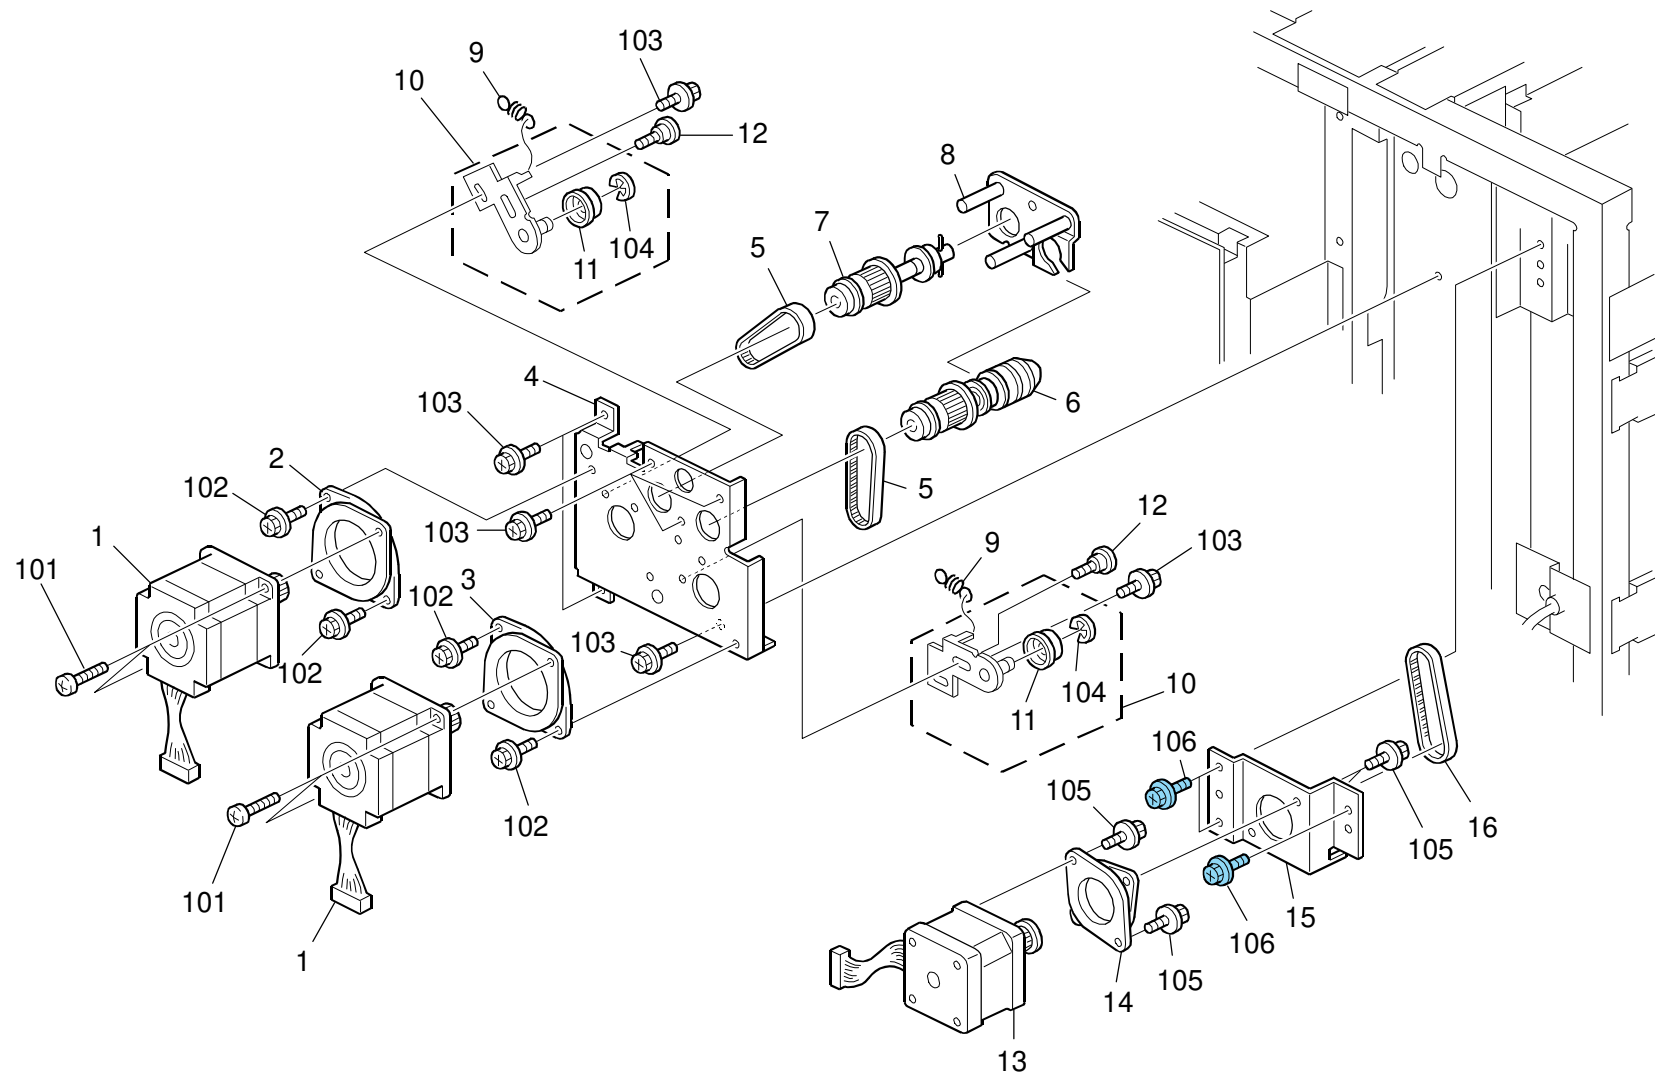


16. Drive Section (D350)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AX04 0157	Stepper Motor DC1.68V 6.7W	2
2	AA16 1122	Motor Cushion	1
3	B802 1622	Stepper Motor Damper	1
4	B834 1725	Paper Feed Unit Drive Bracket	1
5	AA04 2550	Timing Belt - S2M138	2
6	B834 1730	Grip Drive Shaft	1
7	B834 1740	Shaft	1
8	B834 1718	Bracket	1
9	B234 6508	Tension Spring	2
10	B832 1750	Tension Bracket	2
11	AB03 0665	Idler Pulley - 18Z	2
12	AA14 3562	Screw:M4:DIA6x1.2	2
13	AX04 0158	Stepper Motor DC2.64V 6.3W	1
14	A232 4666	Cushion - Stepper Motor	1
15	D350 3972	Bracket:Stepper Motor	1
16	B834 1648	Timing Belt - B60S2M120	1



Index No.	Part No.	Description	Q'ty Per Assembly
102	0454 4006Q	Tapping Screw:4x6	
103	0451 4006N	Tapping Screw - 4x6	
103	0451 4008N	Tapping Screw:4x8	
104	0453 4006N	Binding Self Tapping Screw:4x6	
105	0360 3006N	Screw - M3x6	
105	0720 0040E	Retaining Ring - M4	
106	0454 4008Q	Tapping Screw - M4x8	
106	1105 0511	Harness Clamp - LWS-0306ZC	
107	0451 4008N	Tapping Screw:4x8	
108	0740 3506	Ball Bearing - 6x12x4 MM	

17.Electrical Section (D350)

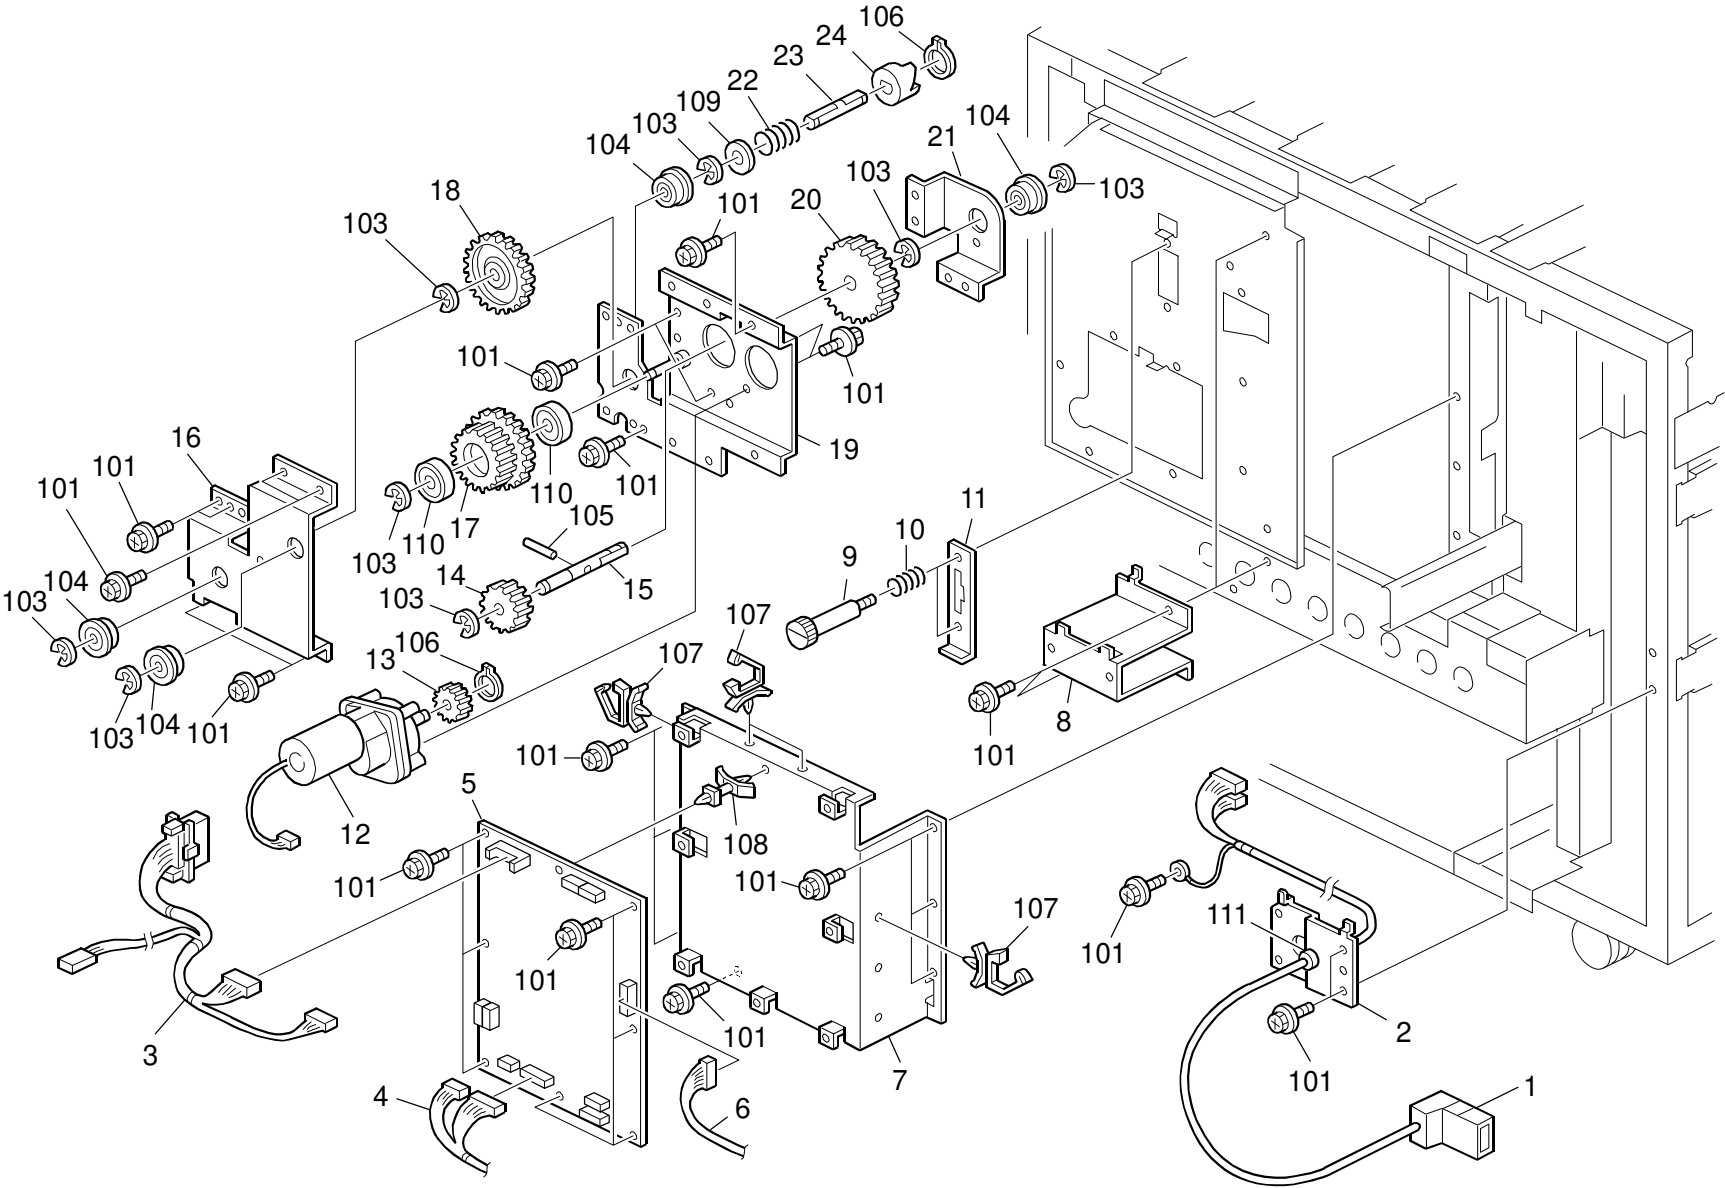


17.Electrical Section (D350)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D350 5330	Harness:Interface	1
2	B834 1082	Bracket:Power Supply Cord	1
3	D350 5320	Harness:Drawer	1
4	D350 5310	Harness:Interface:Paper Feed Unit	1
5	D350 5110	PCB:Main	1
6	D350 5300	Harness:Stepper Motor	1
7	D355 1174	Bracket:PCB	1
8	B834 1365	Rear Cover Bracket	2
9	D355 4784	Screw:Drawer:Connector	2
10	D355 4875	Compression Spring	2
11	B834 4883	Drawer:Connector Bracket - Rear	1
12	AX04 0229	DC Motor 24V 21.6W	1
13	D355 3214	Gear - 30Z	1
14	B834 3214	Gear - 30Z	1
15	D355 4549	Shaft:Gear:Drive	1
16	D355 4934	Plate:Drive:Rear	1
17	B834 4547	Gear - 36Z/60Z	1
18	B834 3203	Gear - 48Z	1
19	D355 4931	Plate:Drive:Middle	1
20	B834 3217	Gear - 60Z	1
21	D355 4933	Plate:Drive:Front	1
22	B834 4388	Compression Spring	1
23	D355 4548	Shaft:Main:Drive	1
24	B303 1185	Metal Joint	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0451 3006N	Tapping Screw - 3x6	
103	0720 0060E	Retaining Ring - M6	
104	0742 3808	Ball Bearing - 8x16x5	
105	0633 0140G	Parallel Pin - 3x14	
106	0727 0080E	Retaining Ring - M8	
107	1105 0487	Harness Clamp	
108	1105 0194	PCB Stud	
109	0708 0080N	Washer-DIA8	
110	0740 3008	Ball Bearing - 8x22x7	
111	1106 0289	Bushing - SR-5N-1	

18.Frame Section (D350)

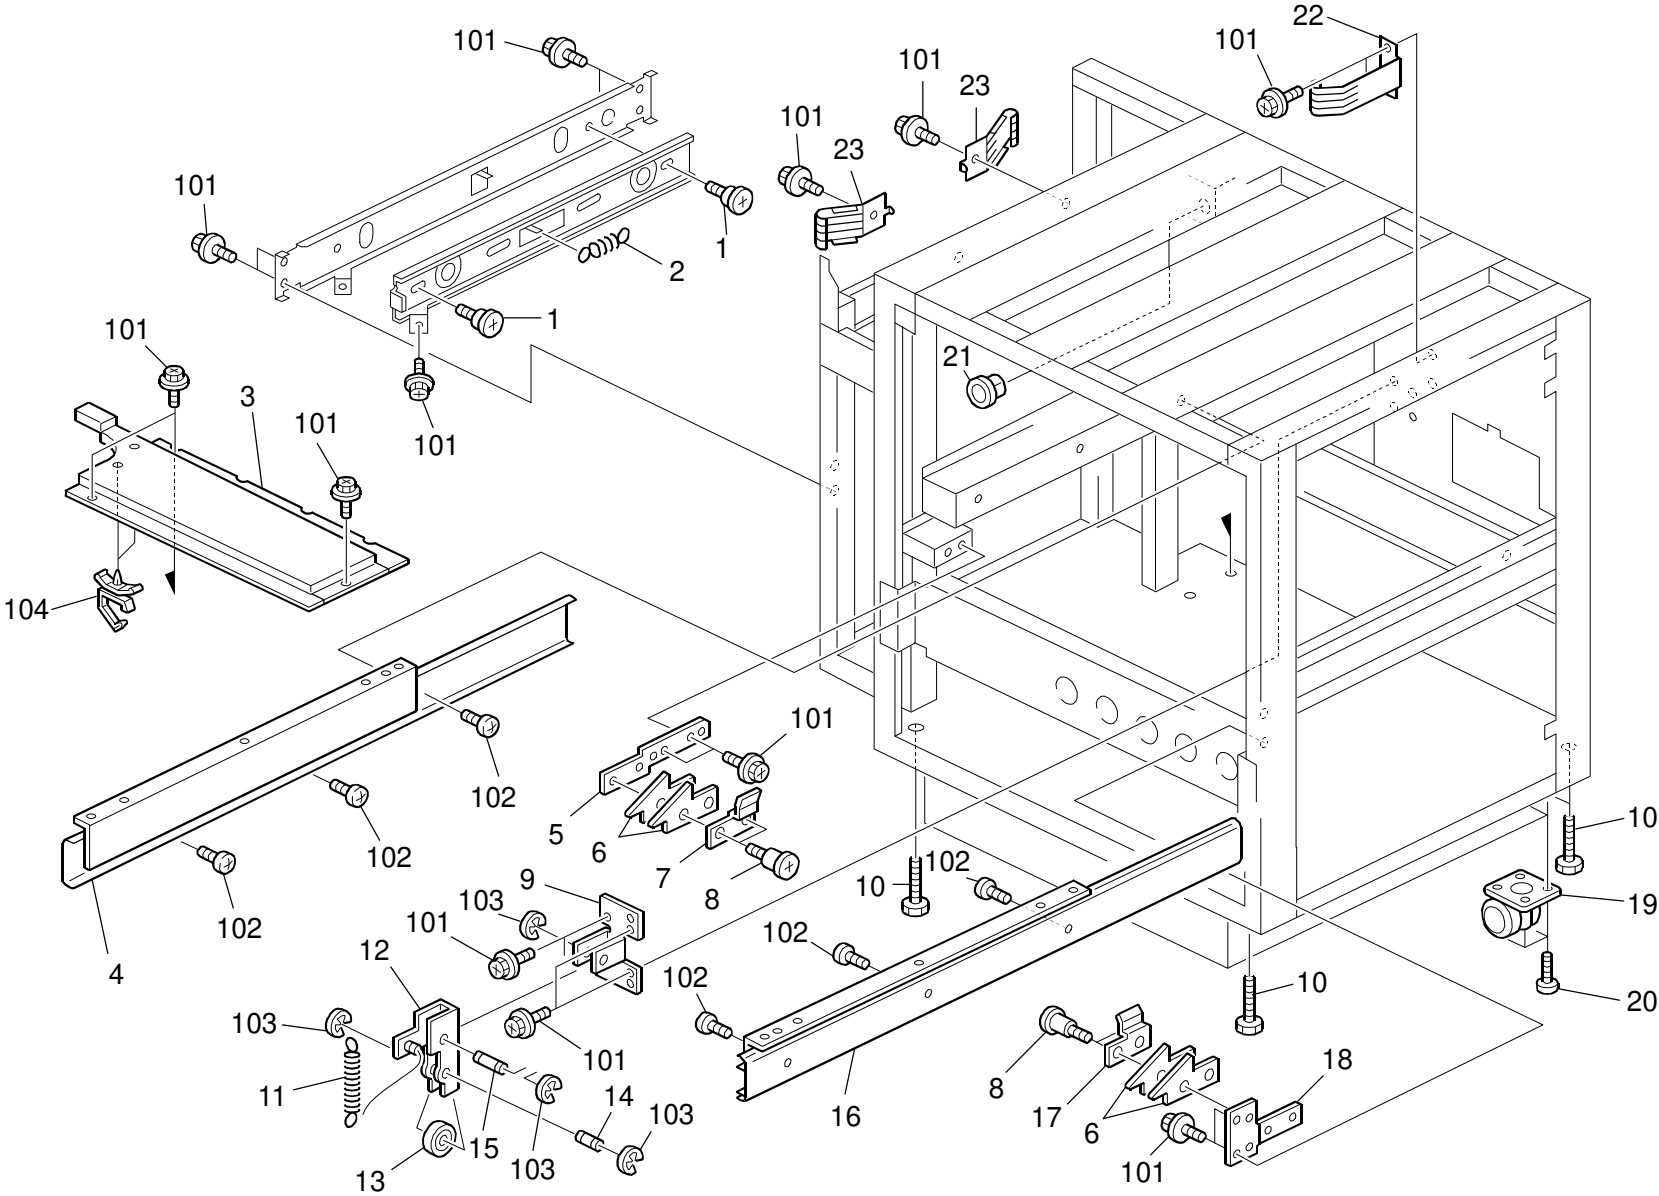

18.Frame Section (D350)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA14 0912	Screw - 8x14x2.8	2
2	AA06 6671	Lock Spring	1
3	D350 1059	Heat Sink:Heater	1
4	B834 1145	Slide Rail - Left Middle	1
5	B834 3442	Stopper Holder - Left	1
6	B834 3443	Stopper Holder	4
7	B834 1056	Guide:Lock:Left:Tray	1
8	B834 3460	Screw	2
9	B834 4832	Pressure Roller Bracket - Rear	1
10	B834 1089	Hexagonal Bolt - M12x50	4
11	B834 3264	Spring	1
12	B834 4821	Cam	1
13	G070 6201	Roller - Transfer Roller	1
14	B834 3263	Pressure Roller Shaft	1
15	B834 3262	Contact Point Shaft	1
16	B834 1155	Slide Rail - Right Middle	1
17	B834 1055	Guide:Lock:Right:Tray	1
18	B834 4793	Stopper Bracket	1
19	AH01 2014	Caster - 60kgf	4
20	A507 1096	Philips Screw - M5x6	16
21	B234 6141	Positioning Sleeve - Inner Back	1
22	D355 4915	Spring Plate:Earth:Tray	1
23	B303 1116	Grounding Plate	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0453 4008N	Binding Self Tapping Screw:4x8	
103	0720 0060E	Retaining Ring - M6	
104	1105 0516	Clamp	

19.Decals And Documents (D350)

1

2

1		B5	11×17	8×13
		8½×11	11×17	8¼×13
		A4	8½×14	10×14
A3	B5		8½×14	11×15
A3	B5		8½×11	×
B4	A5		8½×11	×
B4	A5		8½×11	F
A4	A5		8½×11	*
A4	レター		8½×13	
A4	レター		8×10½	
A4	5½×8½		8×10	
B5	5½×8½			


3

4		B5	5½×8½	5½×8½
		8½×11	5½×8½	5½×8½
		A4	5½×8½	5½×8½
A5	A5		5½×8½	5½×8½
A5	A5		8½×11	8½×11
A5	A5		8½×11	8½×11
B5	A4		*	*
B5	A4		×	×
B5	A4			
A4	A4			


4

19.Decals And Documents (D350)


5

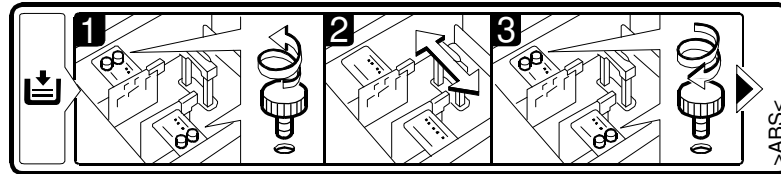





6

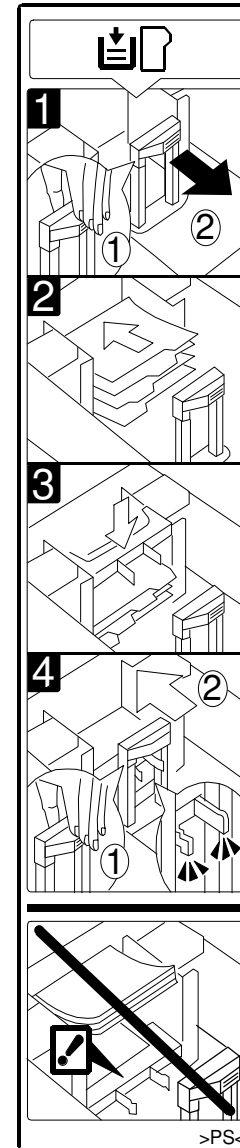

7

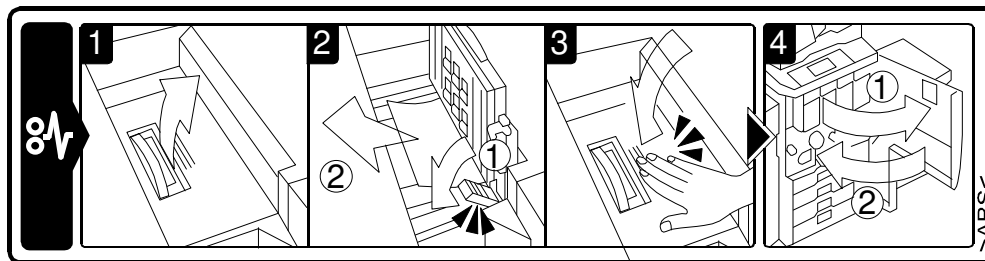

19.Decals And Documents (D350)

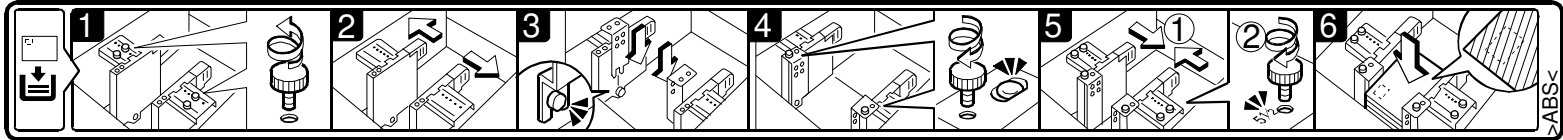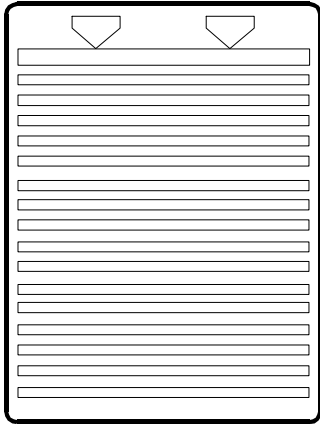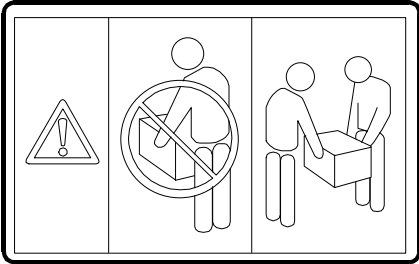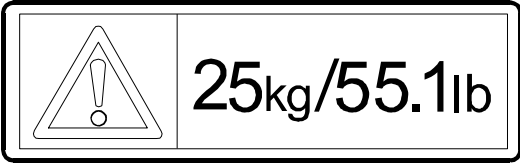8 	9 	10  11 
---	---	---

19.Decals And Documents (D350)



Index No.	Part No.	Description	Q'ty Per Assembly
1	B070 1307	Decal:Paper Set Direction	1
2	B070 1308	Decal:Size Indication:Paper Tray	1
3	B511 1308	Decal:Paper:Size:Multi-language	1
4	B834 1304	Decal - Side Fence Scale Front	1
5	D350 1313	Decal:Paper:Supply:Left	1
6	D350 1322	Decal:End Fence:Tab	1
7	D350 1331	Decal:Misfeed Removal	1
8	D350 1323	Decal:Side Fence:Postcard	1
9	D355 2674	Decal - Paper Volume	1
10	D355 4572	Decal:Paper Tray:Warning	1
11	D355 4574	Decal:Paper Tray:Caution	1

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

Parts Index

Part No.	Description	Page and Index No.
D350 0040	Cover:Upper Left	5 - 2
D350 0900	Anti-Condensation Heater:120V	3 - 8
D350 0901	Heater:Dehumidifier:208-240V:Kit	3 - 8
D350 1059	Heat Sink:Heater	37 - 3
D350 1116	Stay:Coupling:Main	3 - 9
D350 1312	Decal:Paper:Supply:Right	7 - 18
D350 1313	Decal:Paper:Supply:Left	7 - 17
D350 1313	Decal:Paper:Supply:Left	41 - 5
D350 1322	Decal:End Fence:Tab	41 - 6
D350 1322	Decal:End Fence:Tab	3 - 7
D350 1323	Decal:Side Fence:Postcard	41 - 8
D350 1323	Decal:Side Fence:Postcard	7 - 16
D350 1331	Decal:Misfeed Removal	5 - 1
D350 1331	Decal:Misfeed Removal	41 - 7
D350 1361	Cover:Left Lower	5 - 12
D350 1363	Cover:Left Upper	5 - 13
D350 1370	Cover:Upper Rear	5 - 6
D350 1371	Cover:Rear Left:Welding	5 - 10
D350 1373	Cover:Upper Front	5 - 3
D350 1376	Cover:Rear Right	5 - 9
D350 1377	Bracket:Fix:Cover:Upper Front	5 - 4
D350 1378	Bracket:Fix:Cover:Upper Rear	5 - 7
D350 1382	Cover:Front	5 - 11
D350 1385	Cover:Right	5 - 14
D350 1394	Cushion:Guide Plate:6.0	27 - 4
D350 1410	Transport Roller:Grip	29 - 5
D350 2500	Paper Feed Unit	23 - *
D350 2530	Guide Plate:Feed:Peen	29 - 15
D350 2532	Guide Plate:Feed:Upper	27 - 18
D350 2557	Bracket:Knob:Misfeed Removal	29 - 9
D350 2559	Shaft:Knob:Misfeed Removal	29 - 11
D350 2560	Timing Pulley - 16T	27 - 20
D350 2563	Knob:Misfeed Removal	29 - 14
D350 2585	Shaft:Feed Roller	23 - 15
D350 2631	Stay	23 - 2

Part No.	Description	Page and Index No.
D350 2714	Pawl:Lock	27 - 13
D350 2784	End Fence:Tab	3 - 6
D350 2824	Guide Plate:Upper Paper Feed	31 - 2
D350 2826	Guide Plate:Separator	31 - 6
D350 2830	Roller:Connecting:Drive	31 - 1
D350 2832	Gear - 36Z/60Z	31 - 10
D350 2835	Gear - 42Z	31 - 12
D350 2855	Bracket:Sensor:Manual Feed	31 - 3
D350 2858	Bracket:Pin:Fix	27 - 1
D350 3339	Rack:Upper Front:Peen	9 - 9
D350 3865	Bracket:Photointerruptor	29 - 3
D350 3869	Seal:Cover:Transport	29 - 8
D350 3871	Bracket:Tightener	27 - 25
D350 3960	Guide Plate:Cover:Transport	27 - 3
D350 3964	Cover:Transport	27 - 16
D350 3972	Bracket:Stepper Motor	33 - 15
D350 4516	Guard:Tray:Side Fence	9 - 3
D350 4811	Grip:Cover:Transport	27 - 17
D350 4821	Shaft:Lock:Guide Plate	27 - 12
D350 4823	Ground Plate:Shaft:Lock	27 - 11
D350 4824	Bracket:Grip:Fix	27 - 14
D350 4825	Torsion Spring:Grip	27 - 15
D350 4827	Ground Plate:Guide Plate	27 - 5
D350 4834	Compression Spring:Transport	27 - 8
D350 4836	Torsion Spring:Cover:Transport	27 - 2
D350 4837	Torsion Spring:Knob:Misfeed Removal	29 - 13
D350 5110	PCB:Main	35 - 5
D350 5300	Harness:Stepper Motor	35 - 6
D350 5310	Harness:Interface:Paper Feed Unit	35 - 4
D350 5311	Harness:Paper Feed Unit	23 - 22
D350 5312	Harness:Transport Unit	29 - 1
D350 5320	Harness:Drawer	35 - 3
D350 5322	Harness:Tray:Sensor	21 - 7
D350 5330	Harness:Interface	35 - 1
D350 5340	Harness:Earth	3 - 11

Part No.	Description	Page and Index No.
D350 5350	Harness:Joint Unit	31 - 5
D350 5360	Harness:Heater	3 - 10

Part No.	Description	Page and Index No.
A228 3613	Gear - 20Z	21 - 14
A229 2692	Damping Insulation	25 - 21
A232 4666	Cushion - Stepper Motor	33 - 14
A294 4156	Gear - 23Z	21 - 10
A335 4351	Guide Roller	17 - 4
A376 1295	Spacer - M6x10x5	19 - 5
A507 1096	Philips Screw - M5x6	37 - 20
B070 1307	Decal:Paper Set Direction	41 - 1
B070 1307	Decal:Paper Set Direction	3 - 13
B070 1308	Decal:Size Indication:Paper Tray	41 - 2
B070 1308	Decal:Size Indication:Paper Tray	3 - 14
B132 1226	Holder:Stand	3 - 12
B132 2675	Transport Roller:Driven:Duplex	31 - 9
B132 2856	Roller:Manual Feed Unit:Drive	31 - 11
B132 2857	Stopper:Magnetic Clutch	31 - 13
B132 4119	Spacer:Gear:Idler	23 - 17
B234 6141	Positioning Sleeve - Inner Back	37 - 21
B234 6141	Positioning Sleeve - Inner Back	17 - 5
B234 6222	Reverse Drive Shaft	25 - 16
B234 6223	Driven Reverse Shaft	25 - 4
B234 6300	Torque Limiter	25 - 3
B234 6506	Timing Pulley - 30T	29 - 6
B234 6507	Timing Pulley - 25T	29 - 4
B234 6508	Tension Spring	27 - 24
B234 6508	Tension Spring	33 - 9
B303 1116	Grounding Plate	37 - 23
B303 1185	Metal Joint	35 - 24
B303 2556	Reverse Pressure Lever	25 - 12
B303 2559	Lever:Pressure Release:Reverse	25 - 7
B511 1308	Decal:Paper:Size:Multi-language	41 - 3
B511 1308	Decal:Paper:Size:Multi-language	3 - 15
B511 2677	Sensor Bracket	23 - 21
B802 1622	Stepper Motor Damper	33 - 3
B832 1750	Tension Bracket	33 - 10
B832 2535	Reverse Guide Plate	25 - 22

Part No.	Description	Page and Index No.
B832 2541	Stay	25 - 5
B832 2571	Stay:Feed:Peen	23 - 19
B832 2574	Pickup Arm	23 - 8
B832 2578	DC Solenoid 24V	23 - 18
B832 2877	Knob Screw:Tray:Guide:Green	3 - 3
B832 2877	Knob Screw:Tray:Guide:Green	9 - 12
B832 2877	Knob Screw:Tray:Guide:Green	11 - 8
B833 2565	Compression Spring	25 - 18
B833 2567	Tension Spring	25 - 13
B834 1055	Guide:Lock:Right:Tray	37 - 17
B834 1056	Guide:Lock:Left:Tray	37 - 7
B834 1082	Bracket:Power Supply Cord	35 - 2
B834 1089	Hexagonal Bolt - M12x50	37 - 10
B834 1145	Slide Rail - Left Middle	37 - 4
B834 1155	Slide Rail - Right Middle	37 - 16
B834 1304	Decal - Side Fence Scale Front	41 - 4
B834 1304	Decal - Side Fence Scale Front	9 - 13
B834 1305	Decal - Side Fence Scale Rear	11 - 9
B834 1365	Rear Cover Bracket	35 - 8
B834 1380	Paper Tray Grip	7 - 14
B834 1382	Paper Tray Cover - Middle	7 - 19
B834 1645	Timing Belt - B60S2M220	29 - 7
B834 1648	Timing Belt - B60S2M120	33 - 16
B834 1718	Bracket	33 - 8
B834 1725	Paper Feed Unit Drive Bracket	33 - 4
B834 1730	Grip Drive Shaft	33 - 6
B834 1740	Shaft	33 - 7
B834 2520	Feed Guide Plate	25 - 23
B834 2568	Transport Roller - Driven	25 - 20
B834 2568	Transport Roller - Driven	27 - 10
B834 2711	Bracket:Postcard:No.2:Rear	3 - 4
B834 2714	Bracket:Postcard:No.2:Front	3 - 5
B834 2715	Tray Cushion Holder	17 - 7
B834 3065	Slide Rail - End Fence	21 - 2
B834 3111	Side Fence Shaft - Lower	19 - 13

Part No.	Description	Page and Index No.
B834 3169	Paper Size Sensor Plate	21 - 9
B834 3203	Gear - 48Z	35 - 18
B834 3214	Gear - 30Z	35 - 14
B834 3217	Gear - 60Z	35 - 20
B834 3230	Timing Belt Bracket - Rear	17 - 15
B834 3231	Timing Belt Holder - Rear	17 - 14
B834 3237	Bracket - Front	13 - 7
B834 3242	Timing Belt Bracket - Front	17 - 1
B834 3243	Timing Belt Holder - Front	17 - 3
B834 3245	Tension Bracket No.2 - Front	13 - 6
B834 3248	Bracket - Rear	15 - 10
B834 3262	Contact Point Shaft	37 - 15
B834 3263	Pressure Roller Shaft	37 - 14
B834 3264	Spring	37 - 11
B834 3283	Stay:Main	7 - 4
B834 3309	Side Fence Bracket - Lower Rear	19 - 14
B834 3312	Collar	9 - 5
B834 3312	Collar	7 - 13
B834 3312	Collar	19 - 7
B834 3312	Collar	11 - 20
B834 3313	Rack - Front:Lower	19 - 9
B834 3314	Shaft Holder - Lower	19 - 8
B834 3315	Gear - 13Z	19 - 4
B834 3316	Gear - 13Z	11 - 18
B834 3316	Gear - 13Z	19 - 6
B834 3318	Plate:Lower	19 - 3
B834 3321	Side Fence Bracket - Upper Front	9 - 8
B834 3322	Side Fence Bracket - Upper Rear	11 - 22
B834 3323	Holder - :Upper Front	9 - 7
B834 3329	Holder - Upper Rear	11 - 21
B834 3332	Guide - Upper Front	9 - 10
B834 3334	Guide - Upper Rear	11 - 14
B834 3337	Cover - Upper Front	9 - 11
B834 3338	Cover - Upper Rear	11 - 10
B834 3346	Coupling Shaft - Rear	19 - 11

Part No.	Description	Page and Index No.
B834 3349	Rack - Upper Rear	11 - 16
B834 3350	Bushing - 6x10x6.5	11 - 13
B834 3350	Bushing - 6x10x6.5	9 - 4
B834 3350	Bushing - 6x10x6.5	19 - 2
B834 3368	Slide Shaft - Upper	11 - 12
B834 3368	Slide Shaft - Upper	9 - 6
B834 3377	Plate Handle	7 - 20
B834 3378	Stay	7 - 9
B834 3379	Arm:Swivel:Left:Peen	7 - 15
B834 3384	Contact Point Shaft	7 - 7
B834 3385	Arm - Right	7 - 21
B834 3386	Link Handle	7 - 1
B834 3389	Stopper Shaft	7 - 11
B834 3390	Contact Point Stay	7 - 10
B834 3395	Plate - Left	7 - 3
B834 3396	Plate - Right	7 - 22
B834 3400	Stopper Guide - Left	7 - 2
B834 3425	Stopper Guide - Right	7 - 23
B834 3438	Link Shaft	7 - 6
B834 3442	Stopper Holder - Left	37 - 5
B834 3443	Stopper Holder	37 - 6
B834 3460	Screw	37 - 8
B834 3475	Bracket	7 - 5
B834 3490	Spacer - Side Fence	11 - 28
B834 3490	Spacer - Side Fence	17 - 12
B834 3490	Spacer - Side Fence	9 - 21
B834 3493	Oil Damper:0.2nm	13 - 9
B834 3836	Stopper Stay	27 - 19
B834 4032	Cushion:Tray:No.1	17 - 6
B834 4153	Side Fence Grip	9 - 19
B834 4163	Side Fence Grip - Rear	11 - 24
B834 4388	Compression Spring	35 - 22
B834 4547	Gear - 36Z/60Z	35 - 17
B834 4557	Timing Pulley:Drive:No.2:Ass'y	13 - 2
B834 4557	Timing Pulley:Drive:No.2:Ass'Y	15 - 2

Part No.	Description	Page and Index No.
B834 4559	Tensioner	13 - 4
B834 4559	Tensioner	15 - 4
B834 4563	Plate	15 - 1
B834 4563	Plate	13 - 1
B834 4564	Holder - Front	13 - 8
B834 4565	Timing Pulley - 20T	13 - 12
B834 4566	Tension Bracket No.2 - Rear	15 - 6
B834 4568	Stud	13 - 13
B834 4568	Stud	15 - 7
B834 4572	Timing Belt - B100S5M2000	13 - 3
B834 4572	Timing Belt - B100S5M2000	15 - 3
B834 4593	Paper Size Sensor Bracket - Long	21 - 4
B834 4594	Shielding Plate - Long	21 - 8
B834 4595	Contact Point Shaft - Long	21 - 3
B834 4696	Rack - Rear Lower	19 - 10
B834 4741	Paper Size Sensor Bracket	11 - 19
B834 4742	Feeler - Paper Size Sensor No.1	11 - 15
B834 4743	Feeler - Paper Size Sensor No.2	11 - 11
B834 4793	Stopper Bracket	37 - 18
B834 4821	Cam	37 - 12
B834 4832	Pressure Roller Bracket - Rear	37 - 9
B834 4881	Drawer Connector Bracket	15 - 15
B834 4883	Drawer:Connector Bracket - Rear	35 - 11
B834 4891	Registration Side Plate - Right	7 - 24
B834 4892	Registration Side Plate - Left	7 - 25
B872 2614	Bushing:R1	29 - 12
C218 2185	Stepper Screw	27 - 22
C563 3116	Belt Joint	17 - 2
D355 1174	Bracket:PCB	35 - 7
D355 1363	Cover:Upper Right	5 - 5
D355 1378	Bracket:Fix:Cover:Rear Right	5 - 8
D355 2554	Hook:Reverse:Pressure	25 - 9
D355 2556	Lever:Reverse:Pressure:Swivel	25 - 11
D355 2559	Tension Spring:Reverse	25 - 8
D355 2561	Bracket:Reverse:Release	25 - 6

Part No.	Description	Page and Index No.
D355 2563	Compression Spring:Reverse:Pressure:Auxiliary	25 - 10
D355 2571	Paper Feed Roller:Guard	23 - 23
D355 2577	Bracket:Sensor:Paper Feed	23 - 7
D355 2674	Decal - Paper Volume	11 - 26
D355 2674	Decal - Paper Volume	41 - 9
D355 2777	Plate:Auxiliary:Small:Adhesion	11 - 25
D355 3214	Gear - 30Z	35 - 13
D355 3230	Bracket:Timing Belt:Rear	17 - 17
D355 3306	Bracket:Side Fence:Lower Front	19 - 15
D355 3361	Duct:Upper Front:Blower	9 - 15
D355 3363	Cover:Duct	11 - 4
D355 3363	Cover:Duct	9 - 14
D355 3371	Duct:Upper Rear:Blower	11 - 6
D355 3372	Duct:Lower:Blower	11 - 5
D355 3372	Duct:Lower:Blower	9 - 16
D355 3459	Guard:Blower:Front	9 - 2
D355 3461	Guard:Blower:Rear	11 - 7
D355 3462	Cover:Blower:Harness	9 - 1
D355 3998	Bracket:Sensor:Transport	27 - 6
D355 4140	Gear - 24Z	13 - 10
D355 4531	Shaft:Main:Drive	15 - 12
D355 4534	Holder:Driven:Rear	15 - 13
D355 4548	Shaft:Main:Drive	35 - 23
D355 4549	Shaft:Gear:Drive	35 - 15
D355 4562	Drive Bracket - Front Lower	13 - 11
D355 4563	Drive Bracket - Rear Lower	15 - 11
D355 4572	Decal:Paper Tray:Warning	19 - 16
D355 4572	Decal:Paper Tray:Warning	41 - 10
D355 4573	Guide:End Fence:Right	17 - 11
D355 4574	Decal:Paper Tray:Caution	41 - 11
D355 4574	Decal:Paper Tray:Caution	19 - 17
D355 4576	Feeler:Paper Volume Sensor	17 - 16
D355 4581	Bracket:Paper Size Sensor	21 - 15
D355 4583	Bracket:End Fence	21 - 13
D355 4590	Grip:End Fence	17 - 13

Part No.	Description	Page and Index No.
D355 4593	Rack:Base:End Fence	21 - 1
D355 4595	Guide:End Fence:Left	17 - 10
D355 4596	Bracket:Paper Volume Sensor	15 - 8
D355 4597	Shaft:End Fence:Coupling	21 - 12
D355 4598	Roller:Slider	21 - 16
D355 4620	Tray Bottom Plate:Adhesion	17 - 8
D355 4621	Tray Bottom Plate - Support	9 - 20
D355 4621	Tray Bottom Plate - Support	11 - 27
D355 4651	Side Fence:Front	9 - 18
D355 4652	Supporting Plate:Side Fence:Front	9 - 22
D355 4661	Side Fence:Rear	11 - 1
D355 4662	Supporting Plate:Side Fence:Rear	11 - 2
D355 4784	Screw:Drawer:Connector	35 - 9
D355 4866	Ball Bearing:Slide:DIA6	19 - 12
D355 4875	Compression Spring	35 - 10
D355 4915	Spring Plate:Earth:Tray	37 - 22
D355 4931	Plate:Drive:Middle	35 - 19
D355 4933	Plate:Drive:Front	35 - 21
D355 4934	Plate:Drive:Rear	35 - 16
D355 5315	Harness:Connecting:Tray	15 - 14
D355 5316	Harness:Fan	15 - 16
D355 5515	Blower:Fan:DC24V 18.24W	11 - 3
D355 5515	Blower:Fan:DC24V 18.24W	9 - 17
G052 1518	Spring - Lock Lever	21 - 5
G070 6201	Roller - Transfer Roller	37 - 13
G569 2710	Timing Pulley - Tray Bottom Plate	27 - 23
G569 2836	Timing Pulley - 20T	29 - 10
H085 1109	Bushing - M6x5	21 - 11
H516 3666	Spring - 19.6mm	7 - 8

Part No.	Description	Page and Index No.
AA04 2550	Timing Belt - S2M138	33 - 5
AA04 3607	Timing Belt - 60S3M180	27 - 21
AA06 0840	Pressure Spring - 29N	13 - 5
AA06 0840	Pressure Spring - 29N	15 - 5
AA06 3204	Compression Spring	23 - 13
AA06 3433	Exit Roller Spring	31 - 7
AA06 6671	Lock Spring	37 - 2
AA06 6677	Tension Spring	23 - 9
AA08 0034	Bushing - 4x5x7	31 - 8
AA08 2101	Bushing - 6x10x6	11 - 23
AA08 2101	Bushing - 6x10x6	19 - 1
AA08 3015	Roller Clutch	23 - 14
AA08 4059	Ball Bearing Holder	25 - 19
AA08 4059	Ball Bearing Holder	27 - 9
AA10 0014	Retaining Ring C - Separate	23 - 3
AA10 0014	Retaining Ring C - Separate	25 - 1
AA14 0912	Screw - 8x14x2.8	37 - 1
AA14 0915	Positioning Pin:Machine Or Copier:Upper	3 - 1
AA14 0916	Positioning Pin - Lower	3 - 2
AA14 3562	Screw:M4:DIA6x1.2	33 - 12
AA14 3718	Stepped Screw - M4	7 - 12
AA14 3812	Screw - Scale	23 - 12
AA16 1122	Motor Cushion	33 - 2
AB01 1392	Drive Reverse Gear - 24Z	25 - 15
AB01 1478	Gear - 18Z	23 - 1
AB01 1591	Gear:Reverse	25 - 14
AB01 7724	Gear - 23Z/28Z	23 - 16
AB03 0665	Idler Pulley - 18Z	33 - 11
AF02 1410	Transport Roller	23 - 11
AF03 0080	Paper Feed Roller:Pickup	23 - 4
AF03 1083	Paper Feed Roller:Feed:Manual Feed	23 - 6
AF03 2080	Paper Feed Roller:Separate	25 - 2
AH01 2014	Caster - 60kgf	37 - 19
AW01 0107	Paper Feed Sensor	31 - 4
AW01 0122	Paper Feed Sensor	27 - 7

Part No.	Description	Page and Index No.
AW01 0122	Paper Feed Sensor	23 - 10
AW02 0145	Photointerruptor:Flat	29 - 2
AW02 0145	Photointerruptor:Flat	23 - 20
AW02 0160	Paper Feed Sensor	21 - 6
AW02 0160	Paper Feed Sensor	15 - 9
AW02 0160	Paper Feed Sensor	11 - 17
AX04 0157	Stepper Motor DC1.68V 6.7W	33 - 1
AX04 0158	Stepper Motor DC2.64V 6.3W	33 - 13
AX04 0229	DC Motor 24V 21.6W	35 - 12
BB01 3008	Gear - 31Z	25 - 17

Part No.	Description	Page and Index No.
0314 0080N	Philips Pan Head Screw - M4x8	31 - 101
0353 0060N	Bind Screw - M3x6	27 - 104
0353 0060N	Bind Screw - M3x6	29 - 106
0360 3006N	Screw - M3x6	33 - 105
0450 3008N	Tapping Screw - M3x8	5 - 102
0450 3008N	Tapping Screw - M3x8	27 - 103
0451 3006N	Tapping Screw - 3x6	35 - 102
0451 4006N	Tapping Screw - 4x6	7 - 102
0451 4006N	Tapping Screw - 4x6	33 - 103
0451 4008N	Tapping Screw:4x8	9 - 106
0451 4008N	Tapping Screw:4x8	29 - 101
0451 4008N	Tapping Screw:4x8	15 - 101
0451 4008N	Tapping Screw:4x8	17 - 101
0451 4008N	Tapping Screw:4x8	13 - 101
0451 4008N	Tapping Screw:4x8	25 - 101
0451 4008N	Tapping Screw:4x8	33 - 103
0451 4008N	Tapping Screw:4x8	11 - 102
0451 4008N	Tapping Screw:4x8	19 - 101
0451 4008N	Tapping Screw:4x8	37 - 101
0451 4008N	Tapping Screw:4x8	5 - 101
0451 4008N	Tapping Screw:4x8	7 - 101
0451 4008N	Tapping Screw:4x8	23 - 101
0451 4008N	Tapping Screw:4x8	3 - 101
0451 4008N	Tapping Screw:4x8	21 - 102
0451 4008N	Tapping Screw:4x8	35 - 101
0451 4008N	Tapping Screw:4x8	33 - 107
0453 3006N	Tapping Screw - M3x6	9 - 101
0453 3006N	Tapping Screw - M3x6	19 - 102
0453 3006N	Tapping Screw - M3x6	11 - 104
0453 4006N	Binding Self Tapping Screw:4x6	33 - 104
0453 4006N	Binding Self Tapping Screw:4x6	17 - 104
0453 4006N	Binding Self Tapping Screw:4x6	11 - 103
0453 4006N	Binding Self Tapping Screw:4x6	21 - 103
0453 4006N	Binding Self Tapping Screw:4x6	9 - 102
0453 4006N	Binding Self Tapping Screw:4x6	19 - 103

Part No.	Description	Page and Index No.
0453 4008N	Binding Self Tapping Screw:4x8	37 - 102
0454 3006Q	Tapping Screw - M3x6	31 - 106
0454 3008Q	Tapping Screw:3x8	27 - 106
0454 4006Q	Tapping Screw:4x6	17 - 103
0454 4006Q	Tapping Screw:4x6	21 - 101
0454 4006Q	Tapping Screw:4x6	27 - 102
0454 4006Q	Tapping Screw:4x6	33 - 102
0454 4006Q	Tapping Screw:4x6	7 - 103
0454 4006Q	Tapping Screw:4x6	9 - 107
0454 4008Q	Tapping Screw - M4x8	11 - 101
0454 4008Q	Tapping Screw - M4x8	7 - 104
0454 4008Q	Tapping Screw - M4x8	33 - 106
0454 4008Q	Tapping Screw - M4x8	27 - 102
0454 4008Q	Tapping Screw - M4x8	15 - 103
0454 4008Q	Tapping Screw - M4x8	13 - 103
0573 0030E	Hexagon Headless Set Screw - M3x3	25 - 106
0633 0140G	Parallel Pin - 3x14	35 - 105
0633 0140G	Parallel Pin - 3x14	13 - 105
0707 6100N	Bushing:DIA6x10	11 - 105
0708 0080N	Washer-DIA8	35 - 109
0720 0025E	Retaining Ring - M2.5	31 - 104
0720 0030E	Retaining Ring - M3	11 - 107
0720 0030E	Retaining Ring - M3	9 - 104
0720 0030E	Retaining Ring - M3	19 - 106
0720 0040E	Retaining Ring - M4	33 - 105
0720 0040E	Retaining Ring - M4	25 - 104
0720 0040E	Retaining Ring - M4	31 - 105
0720 0040E	Retaining Ring - M4	23 - 103
0720 0040E	Retaining Ring - M4	21 - 104
0720 0040E	Retaining Ring - M4	11 - 106
0720 0040E	Retaining Ring - M4	9 - 103
0720 0040E	Retaining Ring - M4	7 - 105
0720 0040E	Retaining Ring - M4	19 - 104
0720 0050E	Retaining Ring - M5	7 - 106
0720 0060E	Retaining Ring - M6	17 - 102

Part No.	Description	Page and Index No.
0720 0060E	Retaining Ring - M6	13 - 102
0720 0060E	Retaining Ring - M6	31 - 102
0720 0060E	Retaining Ring - M6	7 - 109
0720 0060E	Retaining Ring - M6	29 - 102
0720 0060E	Retaining Ring - M6	27 - 108
0720 0060E	Retaining Ring - M6	35 - 103
0720 0060E	Retaining Ring - M6	27 - 103
0720 0060E	Retaining Ring - M6	15 - 102
0720 0060E	Retaining Ring - M6	23 - 102
0720 0060E	Retaining Ring - M6	37 - 103
0720 0080E	Retaining Ring - M8	19 - 105
0720 0080E	Retaining Ring - M8	9 - 105
0720 0080E	Retaining Ring - M8	11 - 108
0725 0120E	Retaining Ring C - M12	19 - 107
0727 0080E	Retaining Ring - M8	35 - 106
0740 3008	Ball Bearing - 8x22x7	35 - 110
0740 3506	Ball Bearing - 6x12x4 MM	7 - 107
0740 3506	Ball Bearing - 6x12x4 MM	33 - 108
0741 3506	Ball Bearing - 6x12x4 MM	25 - 105
0741 3706	Ball Bearing - 6x10x3	25 - 107
0741 3708	Ball Bearing - 8x12x3.5MM	23 - 107
0741 3808	Ball Bearing - 8x16x5MM	7 - 108
0742 3808	Ball Bearing - 8x16x5	35 - 104
0742 3808	Ball Bearing - 8x16x5	13 - 104
0742 3808	Ball Bearing - 8x16x5	23 - 104
0742 3808	Ball Bearing - 8x16x5	31 - 103
0742 3808	Ball Bearing - 8x16x5	15 - 104
0742 3808	Ball Bearing - 8x16x5	29 - 103
0805 0088	Retaining Ring - M6	23 - 105
0950 4008N	Philips Truss Screw - M4x8	3 - 102
1105 0194	PCB Stud	35 - 108
1105 0487	Harness Clamp	35 - 107
1105 0487	Harness Clamp	15 - 106
1105 0488	Harness Clamp	3 - 103
1105 0511	Harness Clamp - LWS-0306ZC	23 - 106

Part No.	Description	Page and Index No.
1105 0511	Harness Clamp - LWS-0306ZC	25 - 102
1105 0511	Harness Clamp - LWS-0306ZC	15 - 107
1105 0511	Harness Clamp - LWS-0306ZC	27 - 107
1105 0511	Harness Clamp - LWS-0306ZC	33 - 106
1105 0511	Harness Clamp - LWS-0306ZC	29 - 104
1105 0511	Harness Clamp - LWS-0306ZC	9 - 108
1105 0511	Harness Clamp - LWS-0306ZC	11 - 109
1105 0516	Clamp	37 - 104
1105 0518	Edge Saddle - LES-1010	15 - 105
1105 0522	Edge Saddle - LES0510	15 - 108
1105 0522	Edge Saddle - LES0510	19 - 108
1105 0522	Edge Saddle - LES0510	25 - 103
1105 0522	Edge Saddle - LES0510	11 - 110
1105 0551	Clamp:LES-0505	27 - 105
1105 0551	Clamp:LES-0505	29 - 105
1106 0289	Bushing - SR-5N-1	35 - 111

