

LCIT RT4010 (D613)

LCIT RT4010 (D613)

PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.


CONTENTS

CONTENTS (Continued)

1.EXTERIOR (D613)	2
2.PAPER FEED 1 (D613)	4
3.PAPER FEED 2 (D613)	6
4.TRAY DRIVE 1 (D613)	8
5.TRAY DRIVE 2 (D613)	10
6.TRAY DRIVE 3 (D613)	12
7.TRAY EXTENSION KIT (D613)	14
8.DECALS AND DOCUMENTS (D613)	18
PARTS INDEX	20

April 26, 2012

1.EXTERIOR (D613)

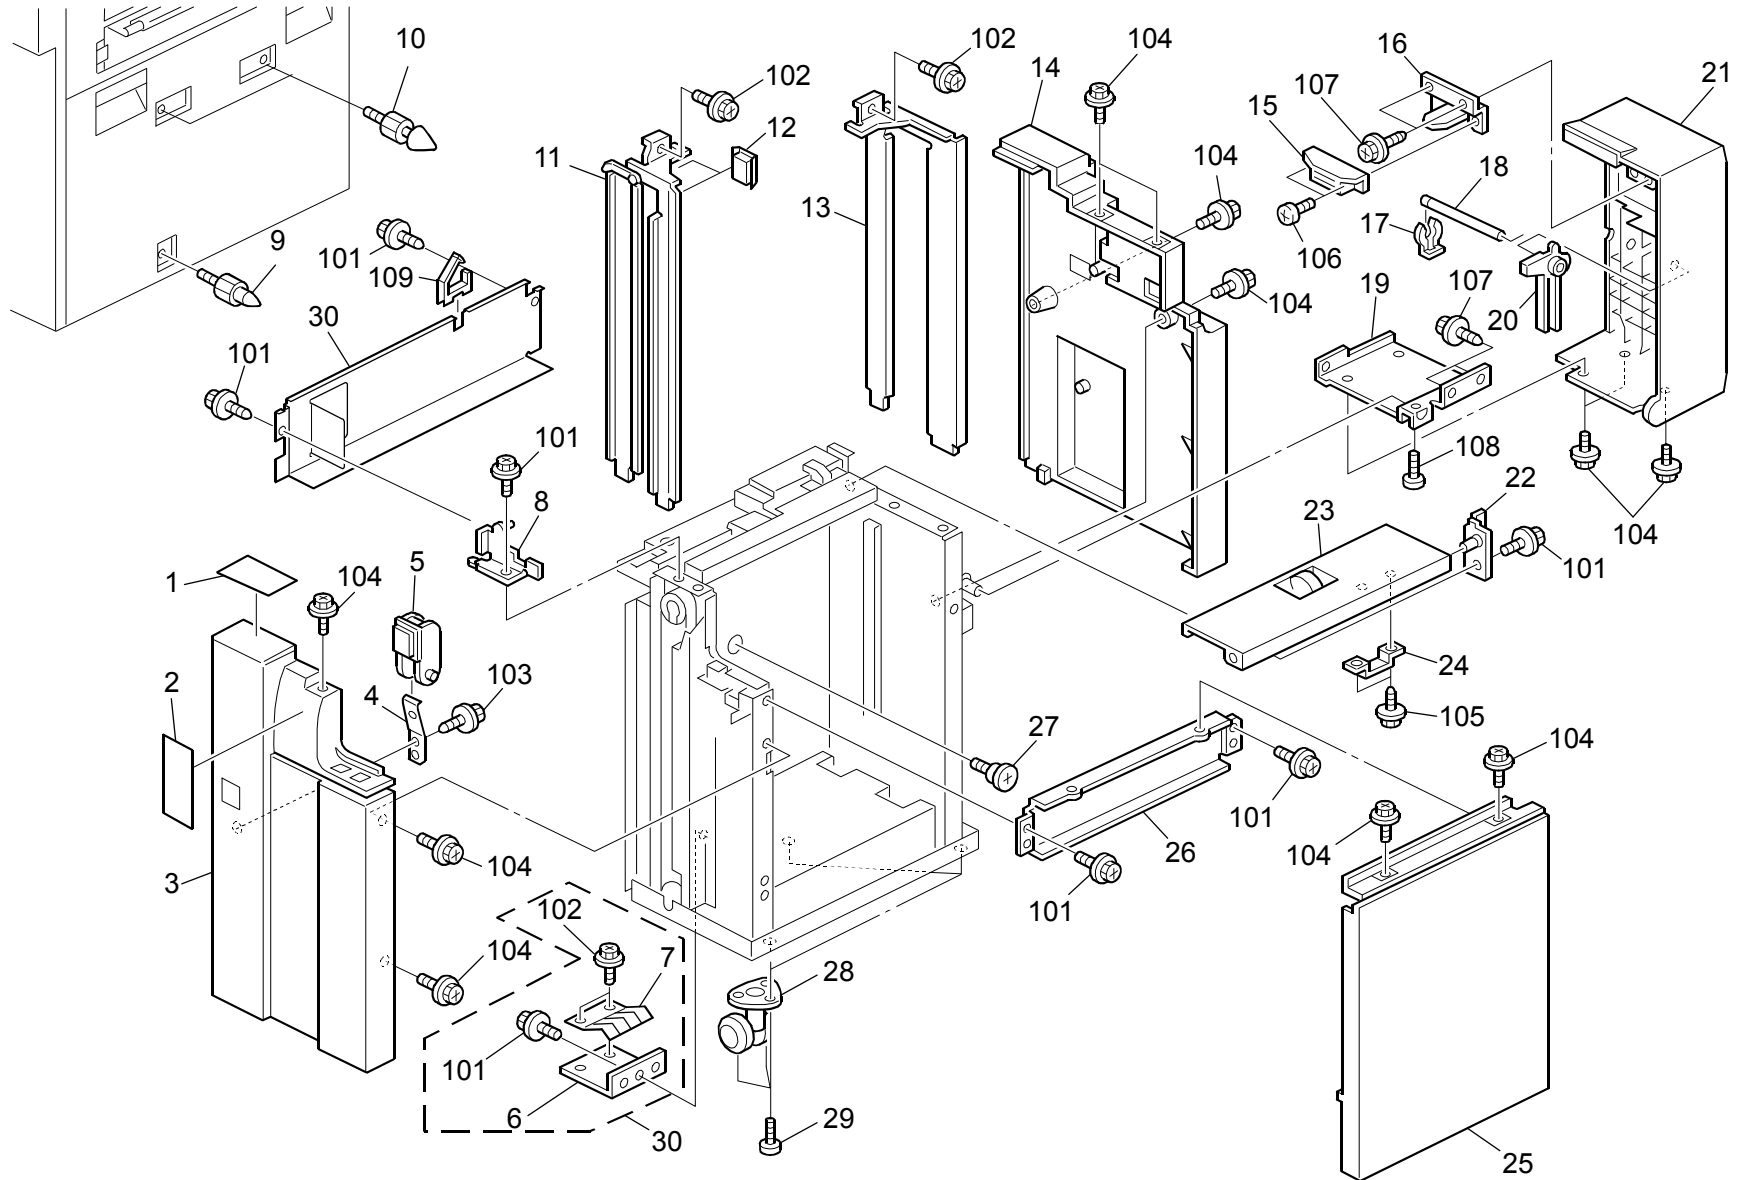


1.EXTERIOR (D613)



Index No.	Part No.	Description	Q'ty Per Assembly
1	D613 1397	Decal: Misfeed Removal: Large Capacity Tray	1
2	D613 1398	Decal: Paper Set Direction: Large Capacity Tray	1
3	D613 1150	Cover: Front	1
4	B473 1156	Lever Spring Plate	1
5	D613 1155	Lever: Un Lock	1
6	B473 1841	Grounding Plate Bracket	1
7	B473 1842	Base Grounding Plate	1
8	B473 1209	Hinge: Misfeed Removal: Front: Peen	1
9	AA14 0916	Positioning Pin - Lower	1
10	AA14 0915	Positioning Pin: Machine Or Copier: Upper	2
11	B473 1900	Front Side Fence	1
12	B473 1914	Plate	2
13	B473 1920	Rear Side Fence	1
14	D613 1160	Cover: Rear	1
15	AG07 1012	Magnet Catch: Ass'y	1
16	B473 1232	Door Catcher - LCT	1
17	5447 2681	Snap Ring	1
18	AA14 0914	Shaft: End Fence	1
19	B473 1231	Angle Hinge	1
20	A698 1234	End Fence - LCT	1
21	D613 1221	Cover: Upper	1
22	B473 1215	Rear Hinge	1
23	D613 1081	Cover: Misfeed Removal: Ass'y	1
25	D613 1250	Cover: Right	1
26	B473 1356	Right Stay	1
27	AA14 3718	Stepped Screw - M4	1
28	AH01 2032	Caster: 392N	3
29	B473 1841	Grounding Plate Bracket	1
30	D613 1360	Cover: Bracket: Left	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Philips Tapping Screw - M4x8	
102	0454 4006Q	Tapping Screw: 4x6	
103	0450 3010N	Tapping Screw - M3x10	
104	0451 4008N	Tapping Screw - 4x8	
105	0454 4008Q	Tapping Screw - M4x8	
106	0314 0060N	Philips Pan Head Screw - M4x6	
107	0450 3008N	Tapping Screw - M3x8	
108	0314 0120N	Philips Pan Head Screw - M4x12	
109	11050518	Edge Saddle - LES-1010	

2.PAPER FEED 1 (D613)

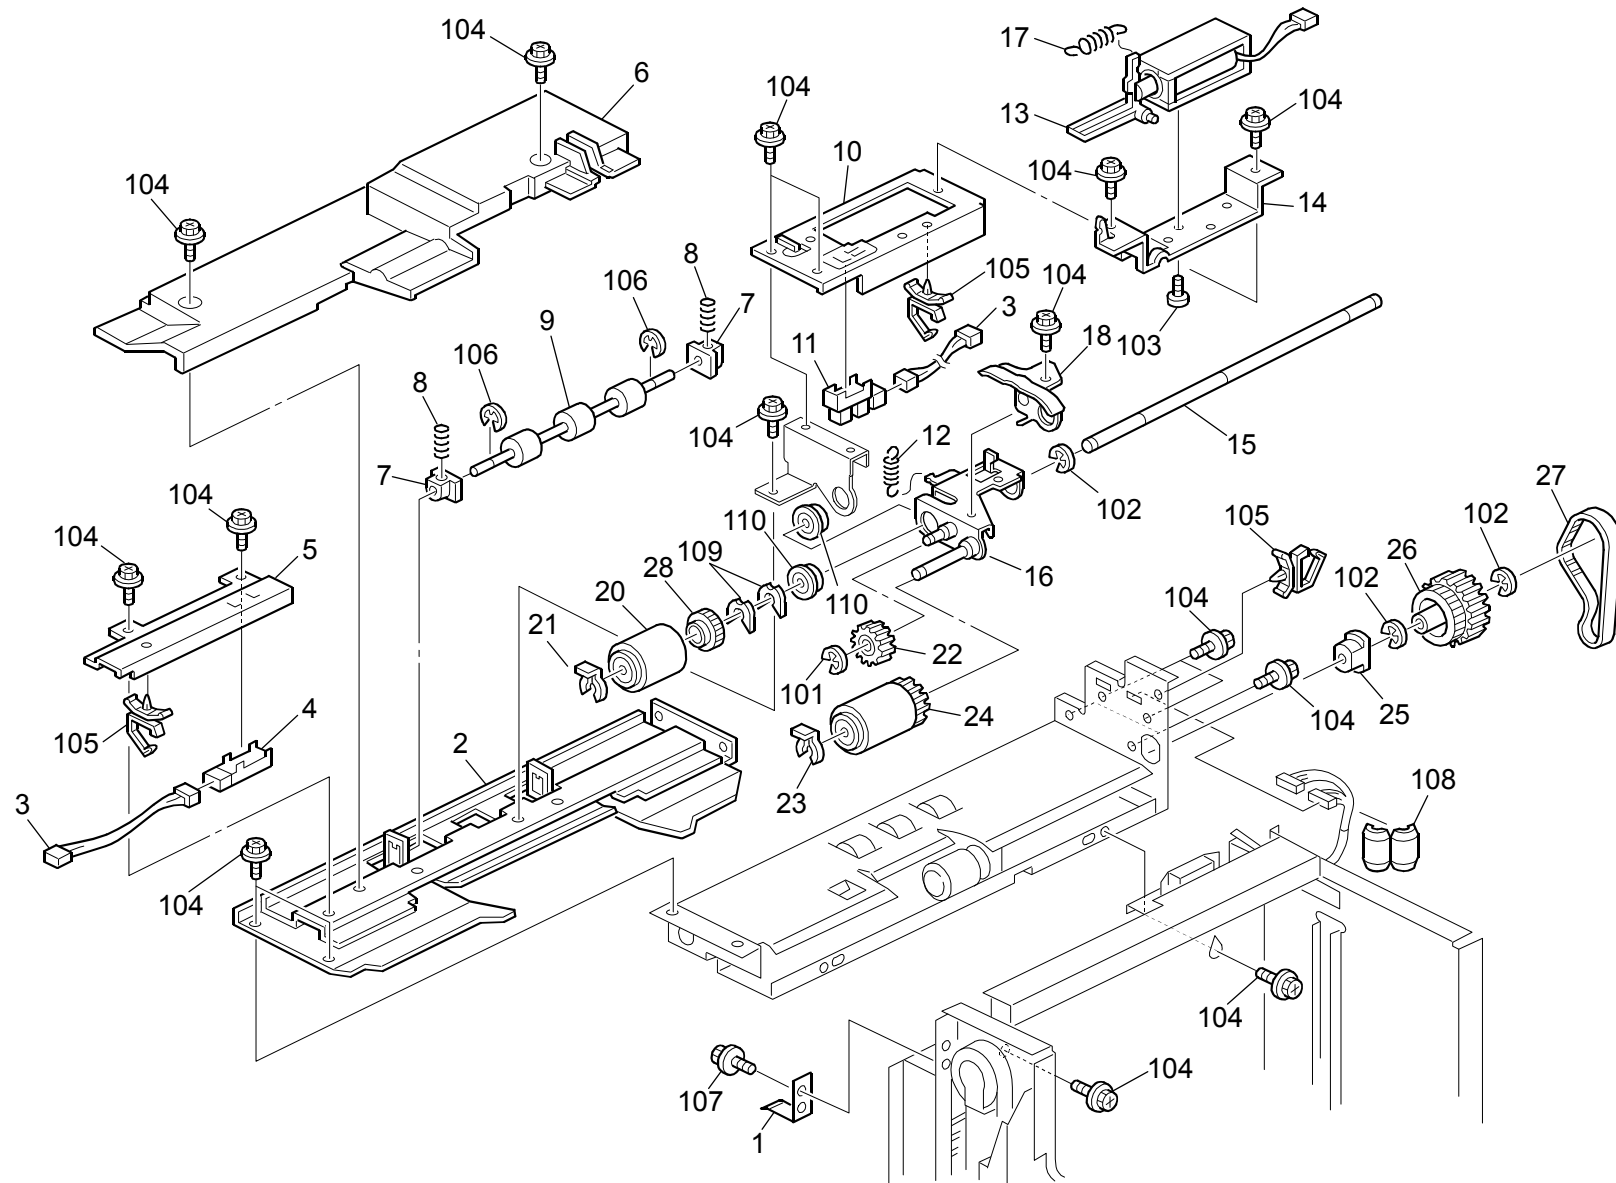


2.PAPER FEED 1 (D613)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B473 1362	Grounding Plate - Paper Feed Unit	1
2	B473 2351	Entrance Guide Plate	1
3	B473 5321	Harness:Paper Feed:Sensor:Maui	2
4	AW01 0149	Photo Refiection Sensor:PS122TL8-A	1
5	B473 2331	Sensor Bracket	1
6	D613 2430	Inner Cover:Paper Feed Unit	1
7	AA08 0034	Bushing - 4x5x7	2
8	AA06 3852	Pressure Spring	2
9	AF02 0489	Transport Relay Roller	1
10	D613 2271	Stay:Upper:Paper Feed Unit	1
11	AW02 0204	Photointerruptor:LGRC102	1
12	AA06 2583	Spring:Pickup:Pressure	1
13	B473 2280	DC Solenoid:Pickup Roller:Ass'y	1
14	D613 2281	Housing:DCSOL	1
15	D613 0812	Shaft:Feed Roller	1
16	D452 2574	Arm:Pickup	1
17	A380 2460	Pick-up Release Spring	1
18	D452 2573	Cover:Paper Feed Roller	1
19	AA08 2070	Bushing - 8x16x7	1
20	AF03 1083	Paper Feed Roller:Feed:Manual Feed	1
21	5447 2681	Snap Ring	1
22	5447 2706	Gear - 15T	1
23	5447 2681	Snap Ring	1
24	AF03 0080	Paper Feed Roller:Pickup	1
25	AA08 3015	Roller Clutch	1
26	AB01 7603	Timing Pulley - Feed	1
27	AA04 3944	Timing Belt - S2MT140	1
28	AB01 1478	Gear - 18Z	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0720 0040E	Retaining Ring - M4	
102	0720 0060E	Retaining Ring - M6	
103	0313 0040N	Philips Pan Head Screw - M3x4	
104	0451 4008N	Philips Tapping Screw - M4x8	
105	1105 0511	Harness Clamp - LWS-0306ZC	
106	0720 0030E	Retaining Ring - M3	
107	0454 4008Q	Tapping Screw - M4x8	
108	1607 0621	Sleeve Core - SFC-4	
109	0805 0088	Retaining Ring - M6	
110	0741 3708	Ball Bearing:DIA8XDIA12x3.5	

3.PAPER FEED 2 (D613)

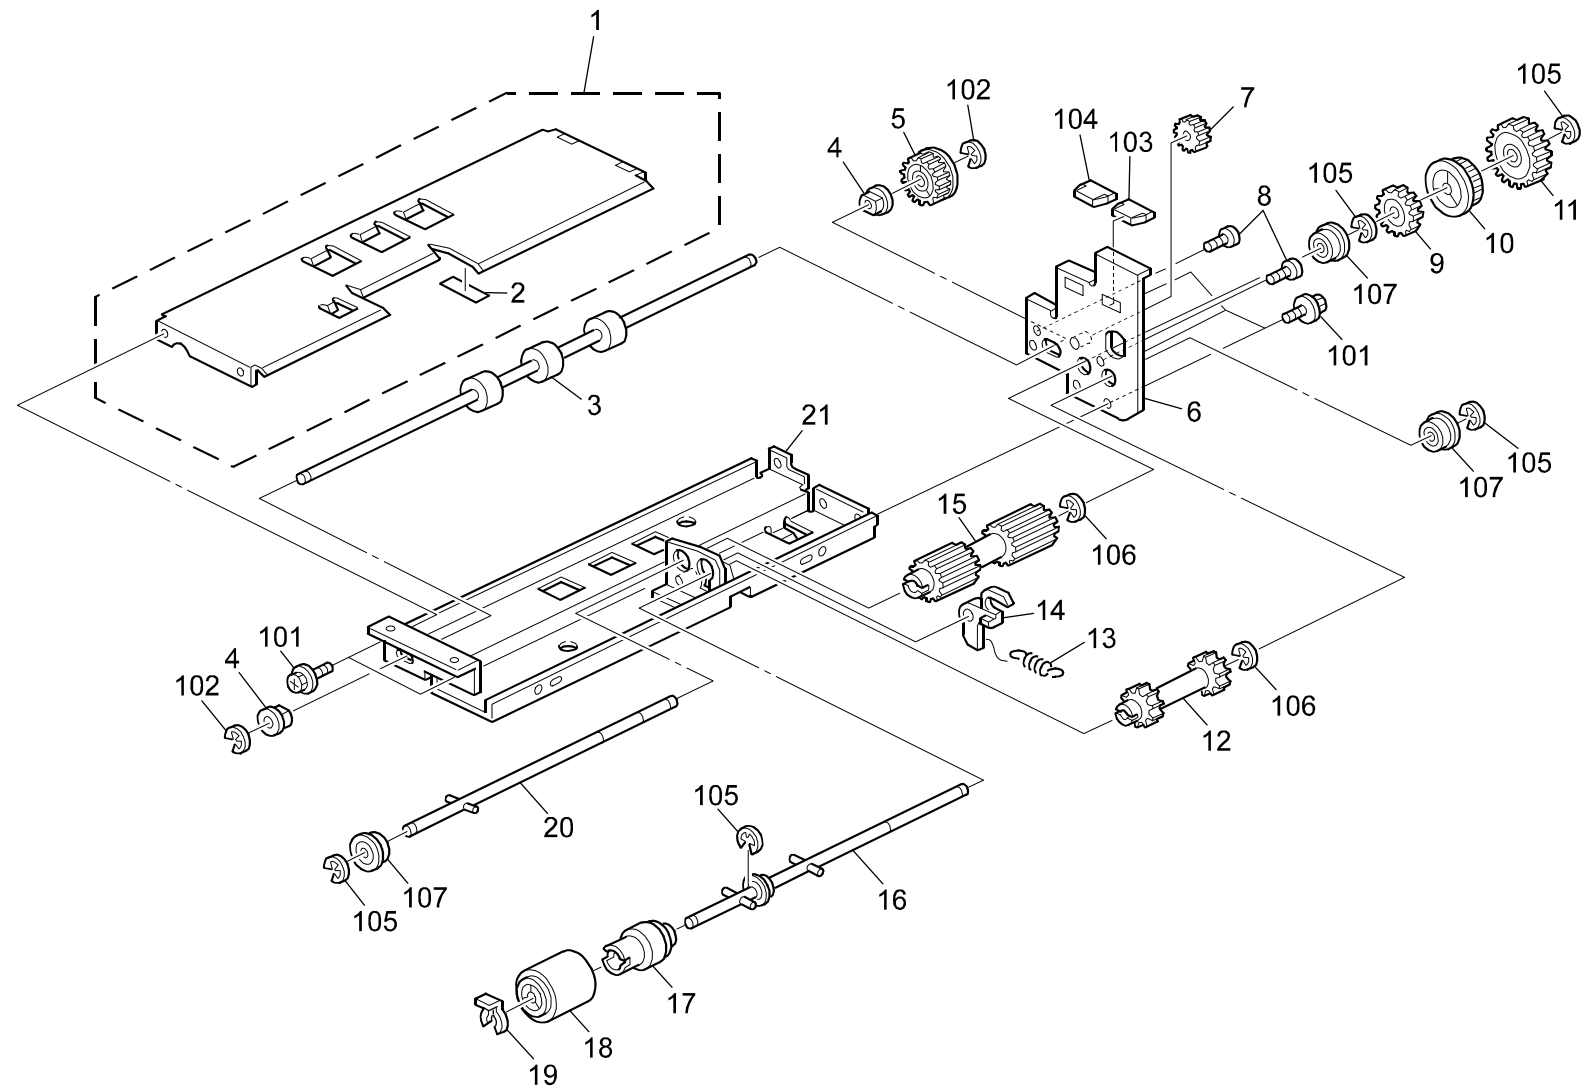


3.PAPER FEED 2 (D613)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B473 2360	Lower Guide Plate	1
2	A698 2362	Shock Absorber	1
3	AF02 0561	Transport Roller	1
4	AA08 2070	Bushing - 8x16x7	2
5	AB01 4227	Gear - Z22	1
6	B473 2171	Side Plate:Rear:Paper Feed Unit:Peen	1
7	AB01 4228	Idler Gear - Z15	1
8	5875 2088	Shoulder Screw - M4	2
9	AB01 4226	Grip Gear - Z22	1
10	AB03 0721	Timing Pulley - Drive	1
11	AB01 4225	Drive Gear - Z31	1
12	AB01 1591	Gear:Reverse	1
13	AA06 2344	Spring:Pressure:Reverse	1
14	A683 2666	Pressure Lever	1
15	AB01 1392	Drive Reverse Gear - 24z	1
16	B473 2262	Shaft:Driven:Reverse	1
17	A294 6700	Torque Limiter - 53mnxm	1
18	AF03 2080	Paper Feed Roller:Separate	1
19	5447 2681	Snap Ring	1
20	B473 2252	Shaft:Drive:Reverse	1
21	B473 2155	Base:Paper Feed Unit:Ass'y	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Philips Tapping Screw - M4x8	
102	0720 0060E	Retaining Ring - M6	
103	1102 6246	Relay Connector - 4P	
104	1102 6245	Relay Connector - 2P	
105	0720 0040E	Retaining Ring - M4	
106	0573 0030E	Hexagon Headless Set Screw - M3x3	
107	0741 3506	Ball Bearing - 6x12x4 mm	

4. TRAY DRIVE 1 (D613)

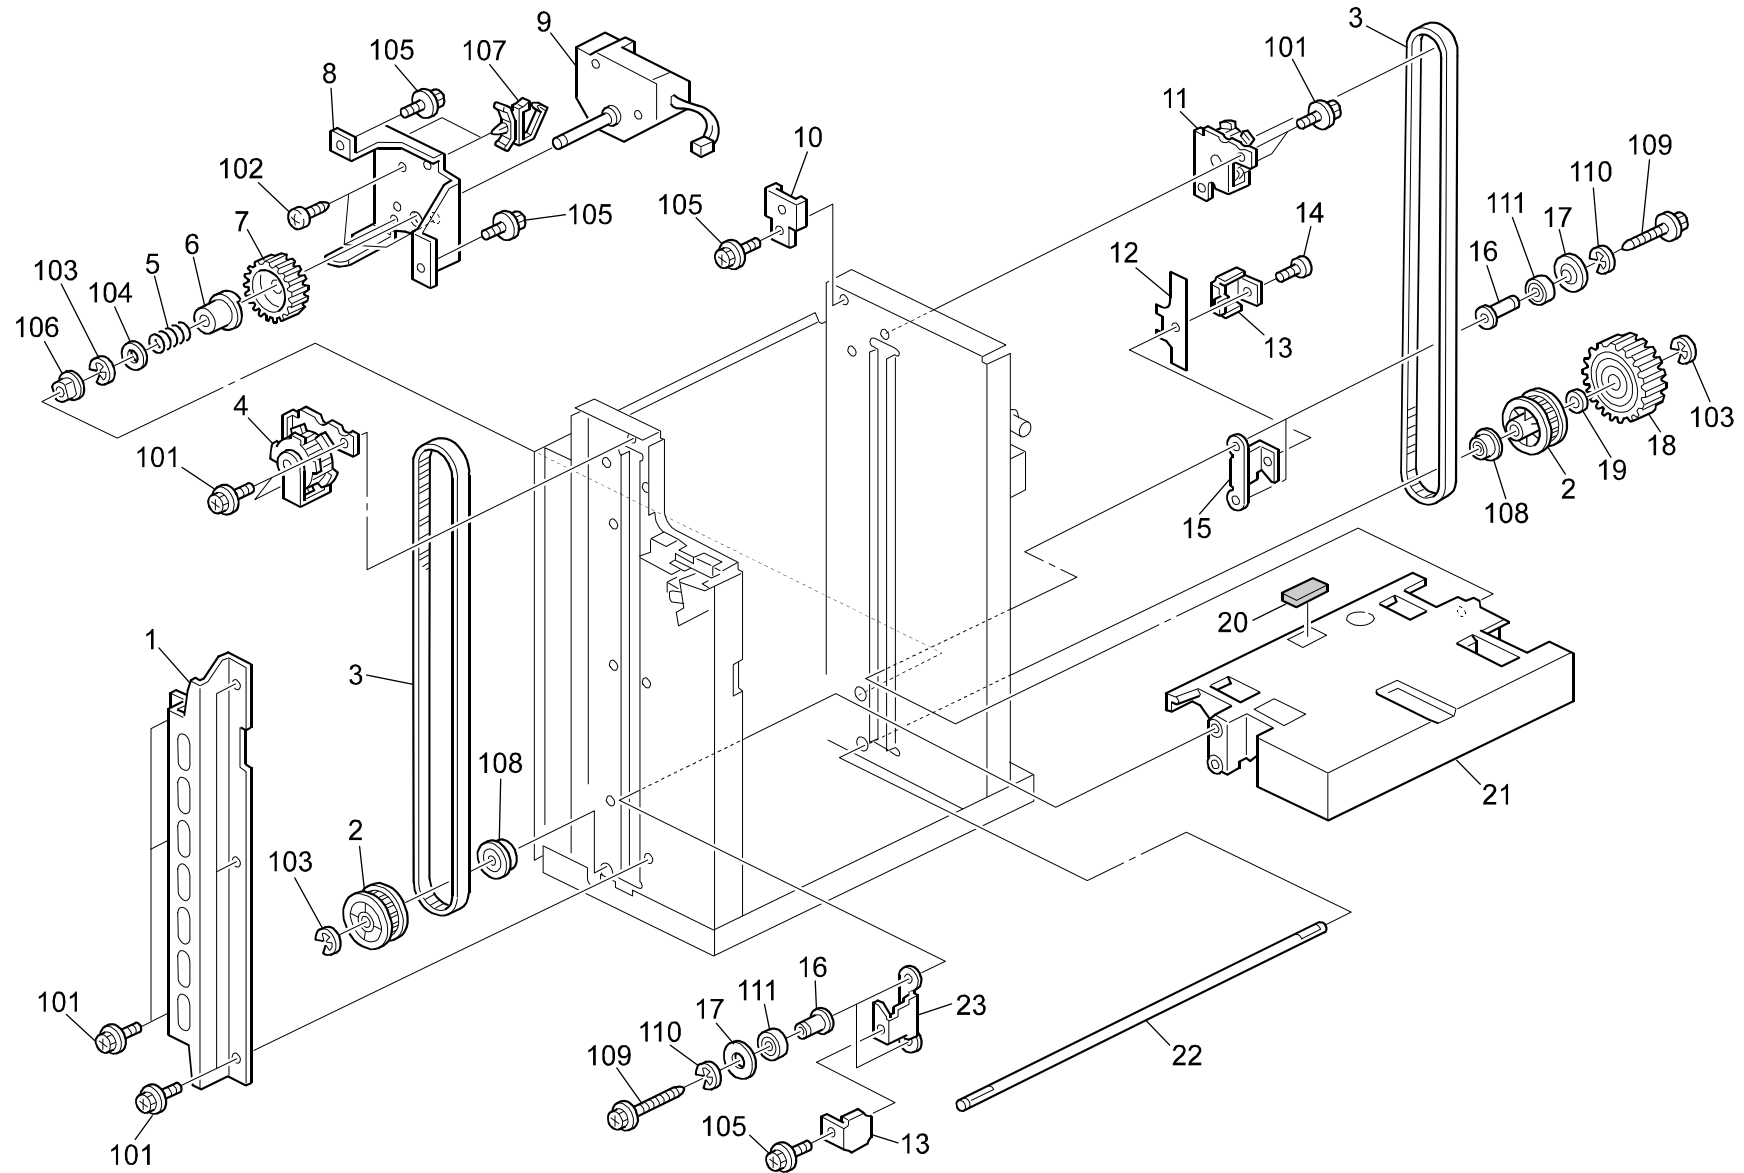


4. TRAY DRIVE 1 (D613)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B473 1382	Supporting Plate:Side Plate:Front	1
2	A380 1803	Timing Pulley - S5M 22Z	2
3	AA04 3943	Timing Belt - S5M227	2
4	B473 1830	Bracket:Idler:Front:Peen	1
5	AA06 2582	Compression Spring:29.41N	1
6	A609 1602	Joint - Drive	1
7	A609 1603	Drive Gear	1
8	B473 1601	Motor Bracket	1
9	AX04 0256	DC Motor:Lcf	1
10	B473 1213	Rear Bracket - Misfeed	1
11	B473 1845	Bracket:Idler:Rear:Peen	1
12	B473 1811	Sensor Shield Plate	1
13	A380 1810	Timing Belt Clamp	2
14	5875 2088	Shoulder Screw - M4	1
15	B473 1757	Rear Bracket - Timing Belt	1
16	A380 1752	Roller Shaft	4
17	A380 1754	Ball Bearing Guide	4
18	A380 1806	Dreive Gear - 42Z	1
19	A042 2568	Spacer - 8.1x10x3.7	1
20	A421 2543	Friction Pad	1
21	B473 1785	Table	1
22	AA14 0910	Shaft:Rise	1
23	B473 1756	Front Bracket - Timing Belt	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 4008Q	Tapping Screw - M4x8	
102	0452 4010N	Binding Self-tapping Screw:4x10	
103	0720 0050E	Retaining Ring - M5	
104	0807 5066	Washer - M8.1xM14x0.3	
105	0451 4008N	Philips Tapping Screw - M4x8	
106	0805 3389	Bushing - 8x10x6mm	
107	1105 0508	Harness Clamp - LWS-0711	
108	0743 3808	Radial Ball Bearing:DIA8XDIA16x5	
109	0450 4025N	Tapping Screw With Washer - M4x25	
110	0720 0060E	Retaining Ring - M6	
111	0740 3808	Ball Bearing - 8x16x5mm	

5. TRAY DRIVE 2 (D613)

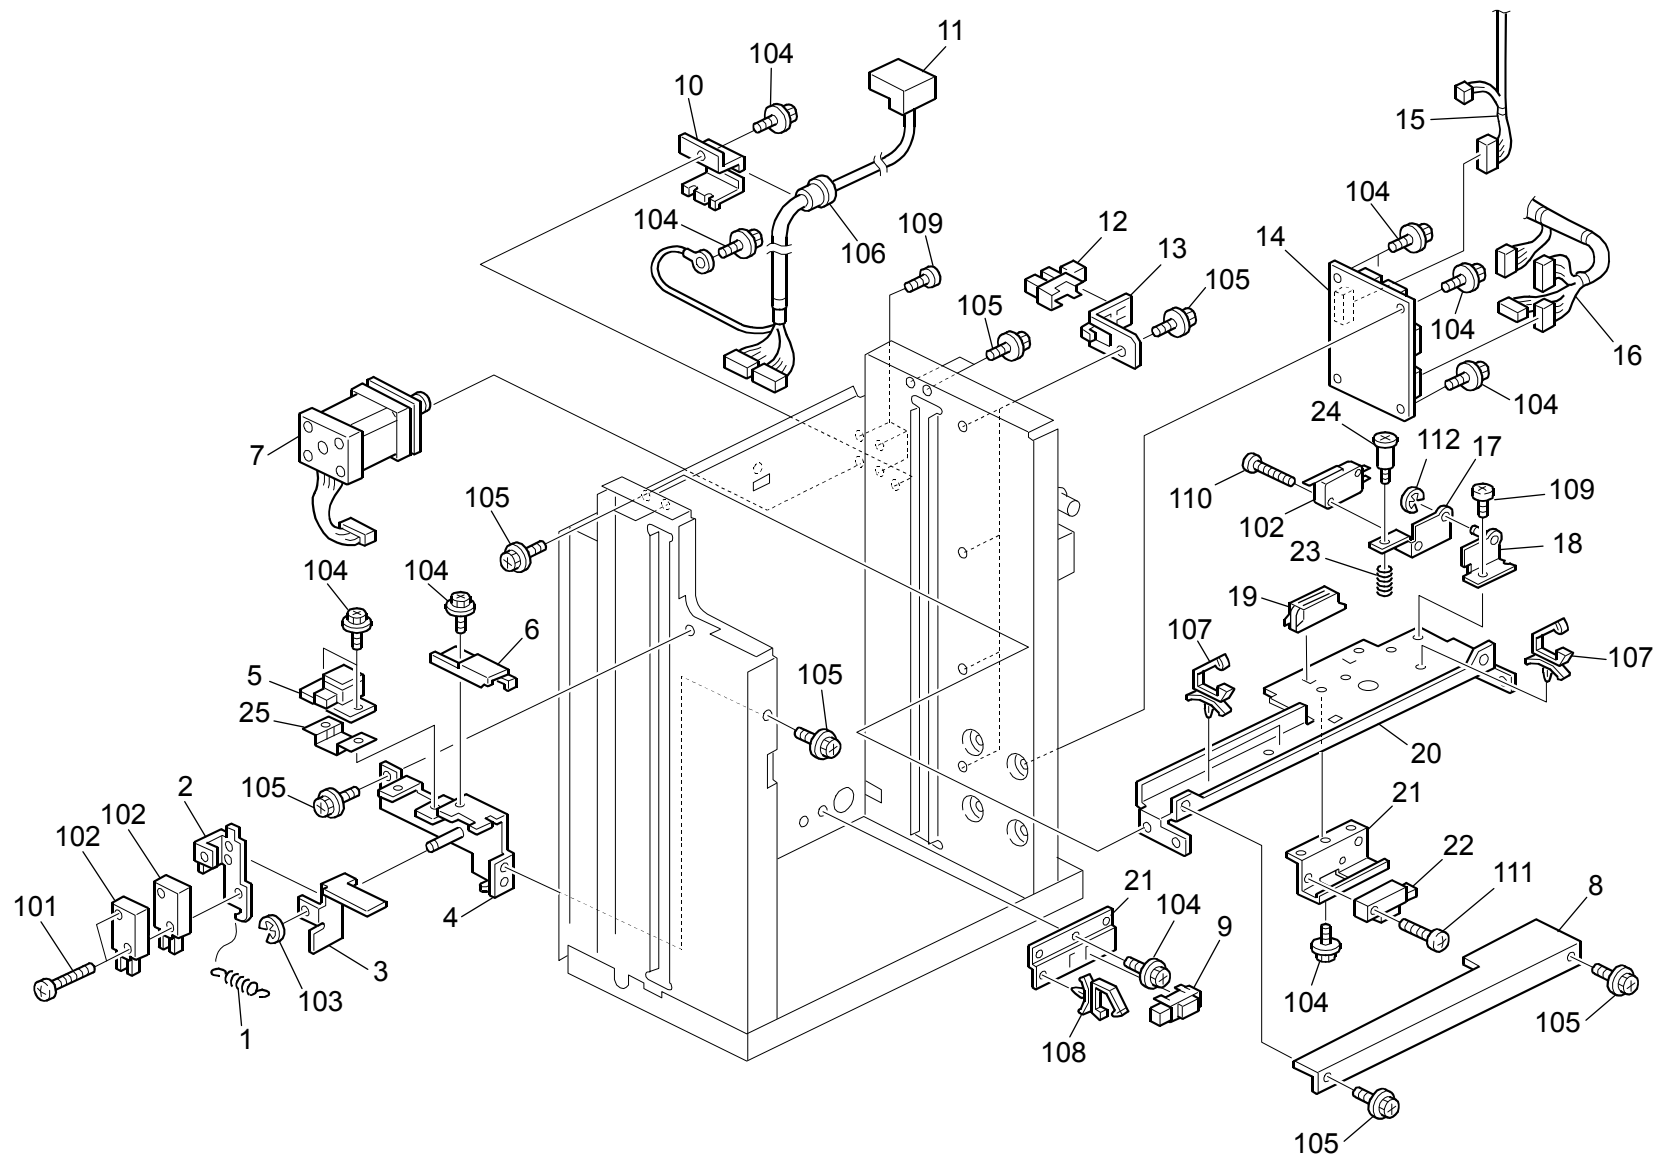


5. TRAY DRIVE 2 (D613)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA06 2580	Spring:Reverse:Pressure	1
2	D613 1261	Bracket:Switch:Movable	1
3	D613 1262	Plate:Switch:Open And Close	1
4	B473 1285	Bracket:Switch:Open And Close:Ass'y	1
5	B473 2691	Push Switch:Ass'y	1
6	B473 1267	Magnetic Holder	1
7	B132 6655	Stepper Motor:Paper Feed Unit:Ass'y	1
8	B473 1943	Positioning Plate:Side Fence:Upper	1
9	AW01 0149	Photo Refiection Sensor:PS122TL8-A	1
10	B473 5331	Harness Bracket	1
11	B473 5332	Harness:Interface	1
12	AW02 0198	Photointerruptor:LG2A14NL1	4
13	B473 1375	Sensor Bracket	4
14	D613 5100	PCB:Maui-c:Ass'y	1
15	B473 5313	Harness:Paper Volume Sensor	1
16	D613 5300	Harness:Main:Ass'y	1
17	D613 1344	Bracket:Safety Switch:Swivel	1
18	D613 1342	Bracket:Safety Switch:Peen	1
19	AG07 1012	Magnet Catch:Ass'y	1
20	D613 1347	Stay:Upper	1
21	D613 1349	Bracket:Sensor:Paper End	1
22	AW01 0091	Photo Reflection Sensor	1
23	AA06 3529	Pressure Spring - 14.5mm	1
24	AA14 3561	Screw - MM3:M2.5	1
25	D613 1313	Cover:Switch	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0313 0250N	Philips Pan Head Screw - M3x25	
102	1204 2466	Micro Switch - V-16506-1c25	
103	0720 0040E	Retaining Ring - M4	
104	0451 4008N	Philips Tapping Screw - M4x8	
105	0454 4008Q	Tapping Screw - M4x8	
106	1106 0289	Bushing - Sr-5n-1	
107	1105 0487	Harness Clamp	
108	1105 0511	Harness Clamp - LWS-0306ZC	
109	0453 3006N	Tapping Screw - M3x6	
110	0313 0120N	Pan Head Screw:M3x12	
111	0353 0120N	Screw M3x12	
112	0720 0020E	Retaining Ring - M2	

6. TRAY DRIVE 3 (D613)

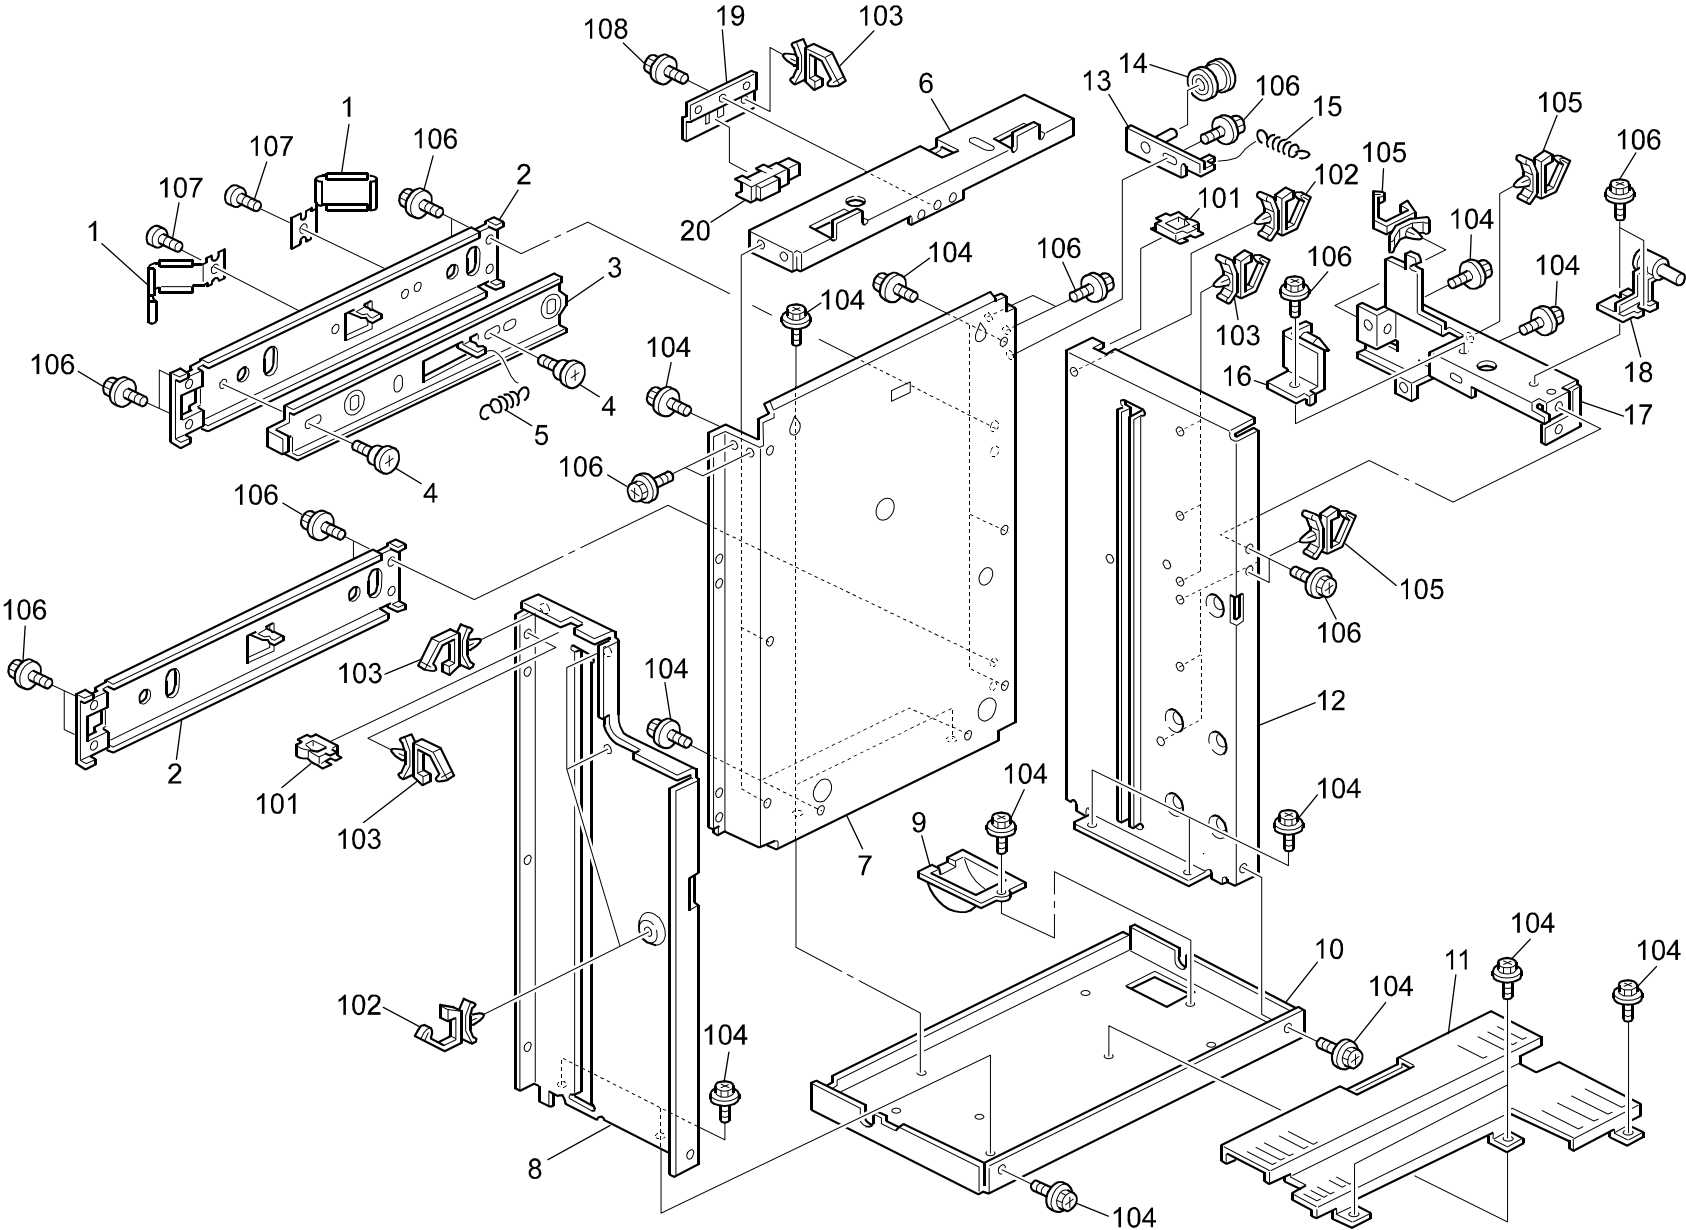


6. TRAY DRIVE 3 (D613)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B473 1032	Grounding Plate	2
2	B473 1031	Lock Stay	2
3	B473 1033	Lock Slider	1
4	AA14 0912	Screw - 8x14x2.8	2
5	AA06 2584	Spring:Lock	1
6	B473 1355	Stay - Paper Feed Unit	1
7	AW01 0091	Photo Reflection Sensor	1
8	D613 1349	Bracket:Sensor:Paper End	1
9	B473 1357	Cover - Base	1
11	B473 1942	Lower Positioning Plate	1
12	B473 1753	Cover Hinge	1
13	B473 1365	Tightner Bracket	1
14	B312 1615	Tension Roller	1
15	D613 2581	Coil Spring:Tensioner	1
16	B473 1272	Hinge Bracket	1
17	B473 1274	Bracket:Hinge:Large	1
			

Index No.	Part No.	Description	Q'ty Per Assembly
101	1105 0723	Clamps:WES-0507	
102	1105 0487	Harness Clamp	
103	1105 0511	Harness Clamp - LWS-0306ZC	
104	0454 4008Q	Tapping Screw - M4x8	
105	1105 0508	Harness Clamp - LWS-0711	
106	0451 4008N	Philips Tapping Screw - M4x8	
107	0453 3006N	Tapping Screw - M3x6	

7. TRAY EXTENSION KIT (D613)

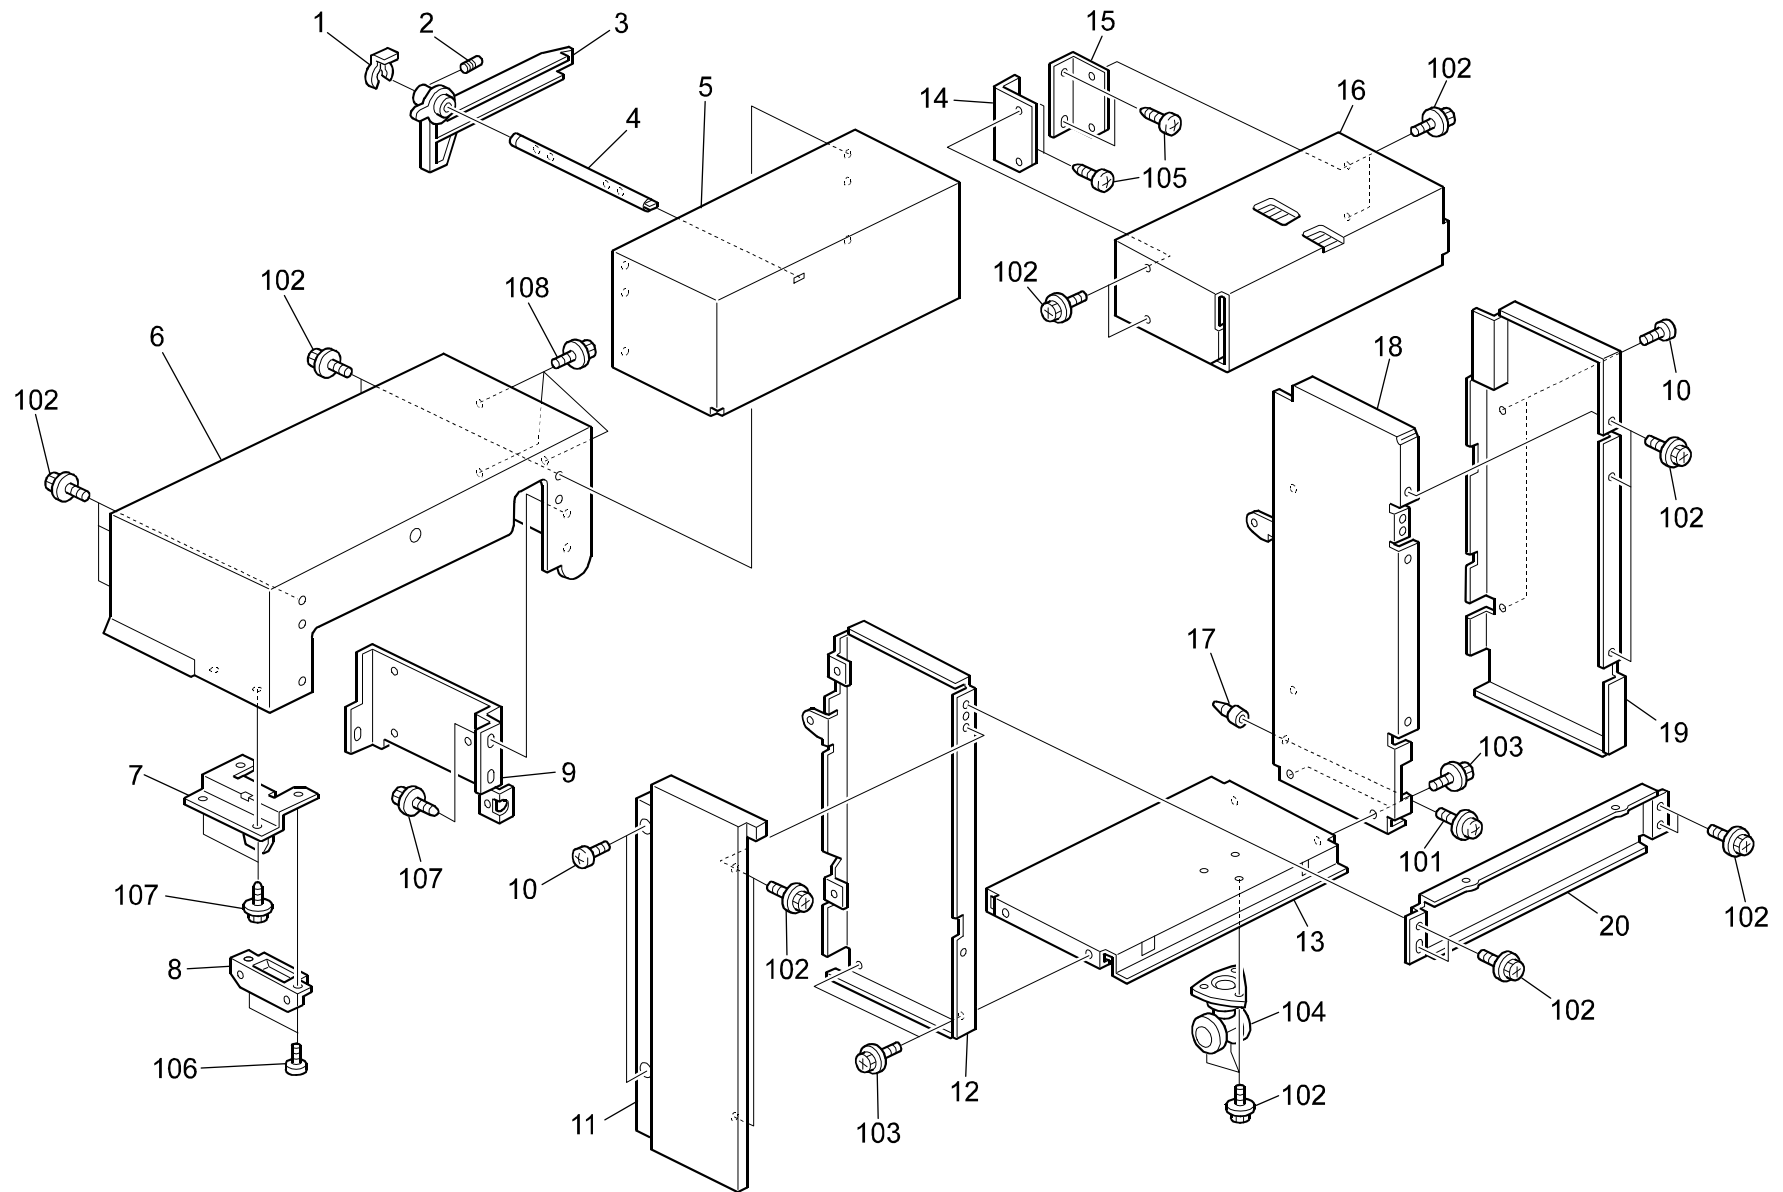


7. TRAY EXTENSION KIT (D613)

Index No.	Part No.	Description	Q'ty Per Assembly
1	5447 2681	Snap Ring	1
2	5410 1291	Pin	1
3	B474 1234	End Fence - Option	1
4	B474 4307	End Fence Shaft - Option	1
5	B474 4411	Cover:Upper:Small	1
6	B474 1225	Cover:Upper:Large	1
7	B473 1232	Door Catcher - LCT	1
8	AG07 0504	Magnet Catch:44.1N	1
9	B473 1231	Angle Hinge	1
10	5875 2088	Shoulder Screw - M4	4
11	B474 4412	Cover:Front:Option	1
12	B474 4202	Front Side Plate - Option	1
13	B474 4201	Base - Option	1
14	B474 4103	Front Bracket - Option	1
15	B474 4104	Rear Bracket - Option	1
16	B474 4101	Option Tray	1
17	B375 4305	Guide Pin	1
18	B474 4203	Rear Side Plate - Option	1
19	B474 4322	Cover:Rear:Option	1
20	B473 1356	Right Stay	1
22	B474 4323	Cover:Spacer:Rear:Option	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0360 3006N	Screw - M3x6	1
102	0451 4008N	Philips Tapping Screw - M4x8	
103	0454 4008Q	Tapping Screw - M4x8	
104	B804 1035	Caster:DIA50:400N	
105	0452 4008N	Tapping Screw:M4x8	
106	0314 0060N	Philips Pan Head Screw - M4x6	
107	0450 3008N	Tapping Screw - M3x8	
108	0454 4008N	Tapping Screw:Round Point:4x8	

8.DECALS AND DOCUMENTS (D613)

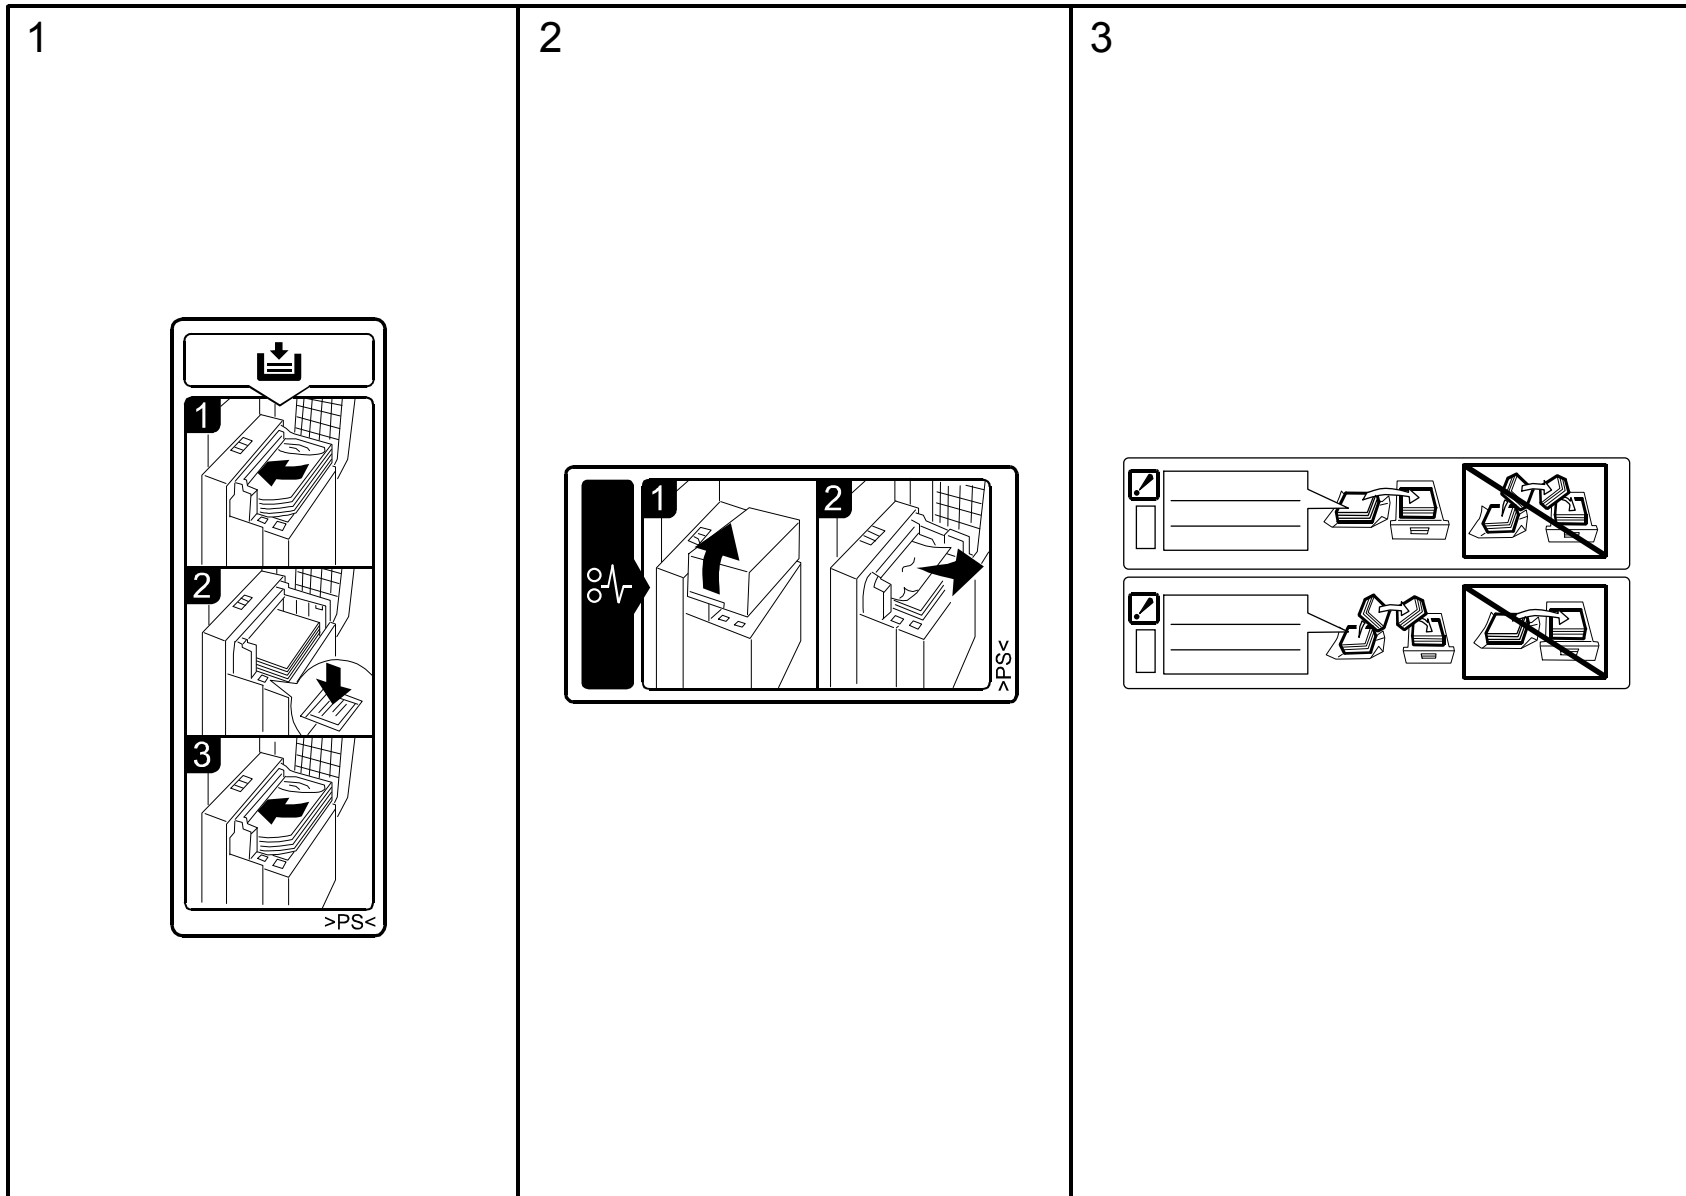

8.DECALS AND DOCUMENTS (D613)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D613 1398	Decal:Paper Set Direction:Large Capacity Tray	1
2	D613 1397	Decal:Misfeed Removal:Large Capacity Tray	1
3	AA00 3048	Decal:Caution Chart:Paper Set Direction	1

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

PM Parts Index

Section Name	Part No.	Description in Service Manual	Description in Parts Catalog	Q'ty Per Assembly	Page and Index No.
PAPER FEED 1 (D613)	AF03 1083	Feed Roller	Paper Feed Roller:Feed:Manual Feed	1	5 - 20
PAPER FEED 1 (D613)	AF03 0080	Pick-up Roller	Paper Feed Roller:Pickup	1	5 - 24
PAPER FEED 2 (D613)	AF03 2080	Separation Roller	Paper Feed Roller:Separate	1	7 - 18

Parts Index

Part No.	Description	Page and Index No.
D613 0812	Shaft:Feed Roller	5 - 15
D613 1081	Cover:Misfeed Removal:Ass'y	3 - 23
D613 1150	Cover:Front	3 - 3
D613 1155	Lever:Un Lock	3 - 5
D613 1160	Cover:Rear	3 - 14
D613 1221	Cover:Upper	3 - 21
D613 1250	Cover:Right	3 - 25
D613 1261	Bracket:Switch:Movable	11 - 2
D613 1262	Plate:Switch:Open And Close	11 - 3
D613 1342	Bracket:Safety Switch:Peen	11 - 18
D613 1344	Bracket:Safety Switch:Swivel	11 - 17
D613 1347	Stay:Upper	11 - 20
D613 1349	Bracket:Sensor:Paper End	13 - 8
D613 1349	Bracket:Sensor:Paper End	11 - 21
D613 1397	Decal:Misfeed Removal:Large Capacity Tray	17 - 2
D613 1397	Decal:Misfeed Removal:Large Capacity Tray	3 - 1
D613 1398	Decal:Paper Set Direction:Large Capacity Tray	17 - 1
D613 1398	Decal:Paper Set Direction:Large Capacity Tray	3 - 2
D613 2271	Stay:Upper:Paper Feed Unit	5 - 10
D613 2281	Housing:DCSOL	5 - 14
D613 2430	Inner Cover:Paper Feed Unit	5 - 6
D613 2581	Coil Spring:Tensioner	13 - 15
D613 5100	PCB:Maui-c:Ass'y	11 - 14
D613 5300	Harness:Main:Ass'y	11 - 16

Part No.	Description	Page and Index No.
A042 2568	Spacer - 8.1x10x3.7	9 - 19
A294 6700	Torque Limiter - 53mnm	7 - 17
A380 1752	Roller Shaft	9 - 16
A380 1754	Ball Bearing Guide	9 - 17
A380 1803	Timing Pulley - S5M 22Z	9 - 2
A380 1806	Drive Gear - 42Z	9 - 18
A380 1810	Timing Belt Clamp	9 - 13
A380 2460	Pick-up Release Spring	5 - 12
A380 2460	Pick-up Release Spring	5 - 17
A421 2543	Friction Pad	9 - 20
A609 1602	Joint - Drive	9 - 6
A609 1603	Drive Gear	9 - 7
A683 2666	Pressure Lever	7 - 14
A698 1234	End Fence - LCT	3 - 20
A698 2362	Shock Absorber	7 - 2
B132 6655	Stepper Motor:Paper Feed Unit:Ass'y	11 - 7
B312 1615	Tension Roller	13 - 14
B375 4305	Guide Pin	15 - 17
B473 1031	Lock Stay	13 - 2
B473 1032	Grounding Plate	13 - 1
B473 1033	Lock Slider	13 - 3
B473 1156	Lever Spring Plate	3 - 4
B473 1209	Hinge:Misfeed Removal:Front:Peen	3 - 8
B473 1213	Rear Bracket - Misfeed	9 - 10
B473 1215	Rear Hinge	3 - 22
B473 1231	Angle Hinge	15 - 9
B473 1231	Angle Hinge	3 - 19
B473 1232	Door Catcher - LCT	3 - 16
B473 1232	Door Catcher - LCT	15 - 7
B473 1267	Magnetic Holder	11 - 6
B473 1272	Hinge Bracket	13 - 16
B473 1274	Bracket:Hinge:Large	13 - 17
B473 1285	Bracket:Switch:Open And Close:Ass'y	11 - 4
B473 1355	Stay - Paper Feed Unit	13 - 6
B473 1356	Right Stay	15 - 20

Part No.	Description	Page and Index No.
B473 1356	Right Stay	3 - 26
B473 1357	Cover - Base	13 - 9
B473 1362	Grounding Plate - Paper Feed Unit	5 - 1
B473 1365	Tightner Bracket	13 - 13
B473 1375	Sensor Bracket	11 - 13
B473 1382	Supporting Plate:Side Plate:Front	9 - 1
B473 1601	Motor Bracket	9 - 8
B473 1753	Cover Hinge	13 - 12
B473 1756	Front Bracket - Timing Belt	9 - 23
B473 1757	Rear Bracket - Timing Belt	9 - 15
B473 1785	Table	9 - 21
B473 1811	Sensor Shield Plate	9 - 12
B473 1830	Bracket:Idler:Front:Peen	9 - 4
B473 1841	Grounding Plate Bracket	3 - 6
B473 1841	Grounding Plate Bracket	3 - 29
B473 1842	Base Grounding Plate	3 - 7
B473 1845	Bracket:Idler:Rear:Peen	9 - 11
B473 1900	Front Side Fence	3 - 11
B473 1914	Plate	3 - 12
B473 1920	Rear Side Fence	3 - 13
B473 1942	Lower Positioning Plate	13 - 11
B473 1943	Positioning Plate:Side Fence:Upper	11 - 8
B473 2155	Base:Paper Feed Unit:Ass'y	7 - 21
B473 2171	Side Plate:Rear:Paper Feed Unit:Peen	7 - 6
B473 2252	Shaft:Drive:Reverse	7 - 20
B473 2262	Shaft:Driven:Reverse	7 - 16
B473 2280	DC Solenoid:Pickup Roller:Ass'y	5 - 13
B473 2331	Sensor Bracket	5 - 5
B473 2351	Entrance Guide Plate	5 - 2
B473 2360	Lower Guide Plate	7 - 1
B473 2691	Push Switch:Ass'y	11 - 5
B473 5313	Harness:Paper Volume Sensor	11 - 15
B473 5321	Harness:Paper Feed:Sensor:Maui	5 - 3
B473 5331	Harness Bracket	11 - 10
B473 5332	Harness:Interface	11 - 11

Part No.	Description	Page and Index No.
B474 1225	Cover:Upper:Large	15 - 6
B474 1234	End Fence - Option	15 - 3
B474 4101	Option Tray	15 - 16
B474 4103	Front Bracket - Option	15 - 14
B474 4104	Rear Bracket - Option	15 - 15
B474 4201	Base - Option	15 - 13
B474 4202	Front Side Plate - Option	15 - 12
B474 4203	Rear Side Plate - Option	15 - 18
B474 4307	End Fence Shaft - Option	15 - 4
B474 4322	Cover:Rear:Option	15 - 19
B474 4323	Cover:Spacer:Rear:Option	15 - 22
B474 4411	Cover:Upper:Small	15 - 5
B474 4412	Cover:Front:Option	15 - 11
B804 1035	Caster:DIA50:400N	15 - 104
D452 2574	Arm:Pickup	5 - 16

Part No.	Description	Page and Index No.
AA00 3048	Decal:Caution Chart:Paper Set Direction	17 - 3
AA04 3943	Timing Belt - S5M227	9 - 3
AA04 3944	Timing Belt - S2MT140	5 - 27
AA06 2344	Spring:Pressure:Reverse	7 - 13
AA06 2580	Spring:Reverse:Pressure	11 - 1
AA06 2582	Compression Spring:29.41N	9 - 5
AA06 2584	Spring:Lock	13 - 5
AA06 3529	Pressure Spring - 14.5mm	11 - 23
AA06 3852	Pressure Spring	5 - 8
AA08 0034	Bushing - 4x5x7	5 - 7
AA08 2070	Bushing - 8x16x7	5 - 19
AA08 2070	Bushing - 8x16x7	7 - 4
AA08 3015	Roller Clutch	5 - 25
AA14 0910	Shaft:Rise	9 - 22
AA14 0912	Screw - 8x14x2.8	13 - 4
AA14 0914	Shaft:End Fence	3 - 18
AA14 0915	Positioning Pin:Machine Or Copier:Upper	3 - 10
AA14 0916	Positioning Pin - Lower	3 - 9
AA14 3561	Screw - MM3:M2.5	11 - 24
AA14 3718	Stepped Screw - M4	3 - 27
AB01 1392	Drive Reverse Gear - 24z	7 - 15
AB01 1591	Gear:Reverse	7 - 12
AB01 4225	Drive Gear - Z31	7 - 11
AB01 4226	Grip Gear - Z22	7 - 9
AB01 4227	Gear - Z22	7 - 5
AB01 4228	Idler Gear - Z15	7 - 7
AB01 7603	Timing Pulley - Feed	5 - 26
AB03 0721	Timing Pulley - Drive	7 - 10
AF02 0489	Transport Relay Roller	5 - 9
AF02 0561	Transport Roller	7 - 3
AF03 0080	Paper Feed Roller:Pickup	5 - 24
AF03 1083	Paper Feed Roller:Feed:Manual Feed	5 - 20
AF03 2080	Paper Feed Roller:Separate	7 - 18
AG07 0504	Magnet Catch:44.1N	15 - 8
AG07 1012	Magnet Catch:Ass'y	11 - 19

Part No.	Description	Page and Index No.
AG07 1012	Magnet Catch:Ass'y	3 - 15
AH01 2032	Caster:392N	3 - 28
AW01 0091	Photo Reflection Sensor	11 - 22
AW01 0091	Photo Reflection Sensor	13 - 7
AW01 0149	Photo Refiection Sensor:PS122TL8-A	5 - 4
AW01 0149	Photo Refiection Sensor:PS122TL8-A	11 - 9
AW02 0198	Photointerruptor:LG2A14NL1	11 - 12
AW02 0204	Photointerruptor:LGRC102	5 - 11
AX04 0256	DC Motor:Lcf	9 - 9

Part No.	Description	Page and Index No.
0313 0040N	Philips Pan Head Screw - M3x4	5 - 103
0313 0120N	Pan Head Screw:M3x12	11 - 110
0313 0250N	Philips Pan Head Screw - M3x25	11 - 101
0314 0060N	Philips Pan Head Screw - M4x6	3 - 106
0314 0060N	Philips Pan Head Screw - M4x6	15 - 106
0314 0120N	Philips Pan Head Screw - M4x12	3 - 108
0353 0120N	Screw M3x12	11 - 111
0360 3006N	Screw - M3x6	15 - 101
0450 3008N	Tapping Screw - M3x8	15 - 107
0450 3008N	Tapping Screw - M3x8	3 - 107
0450 3010N	Tapping Screw - M3x10	3 - 103
0450 4025N	Tapping Screw With Washer - M4x25	9 - 109
0451 4008N	Philips Tapping Screw - M4x8	7 - 101
0451 4008N	Philips Tapping Screw - M4x8	3 - 101
0451 4008N	Philips Tapping Screw - M4x8	11 - 104
0451 4008N	Philips Tapping Screw - M4x8	9 - 105
0451 4008N	Philips Tapping Screw - M4x8	13 - 106
0451 4008N	Philips Tapping Screw - M4x8	15 - 102
0451 4008N	Philips Tapping Screw - M4x8	5 - 104
0451 4008N	Tapping Screw - 4x8	3 - 104
0452 4008N	Tapping Screw:M4x8	15 - 105
0452 4010N	Binding Self-tapping Screw:4x10	9 - 102
0453 3006N	Tapping Screw - M3x6	13 - 107
0453 3006N	Tapping Screw - M3x6	11 - 109
0454 4006Q	Tapping Screw:4x6	3 - 102
0454 4008N	Tapping Screw:Round Point:4x8	15 - 108
0454 4008Q	Tapping Screw - M4x8	3 - 105
0454 4008Q	Tapping Screw - M4x8	15 - 103
0454 4008Q	Tapping Screw - M4x8	11 - 105
0454 4008Q	Tapping Screw - M4x8	13 - 104
0454 4008Q	Tapping Screw - M4x8	5 - 107
0454 4008Q	Tapping Screw - M4x8	9 - 101
0573 0030E	Hexagon Headless Set Screw - M3x3	7 - 106
0720 0020E	Retaining Ring - M2	11 - 112
0720 0030E	Retaining Ring - M3	5 - 106

Part No.	Description	Page and Index No.
0720 0040E	Retaining Ring - M4	7 - 105
0720 0040E	Retaining Ring - M4	5 - 101
0720 0040E	Retaining Ring - M4	11 - 103
0720 0050E	Retaining Ring - M5	9 - 103
0720 0060E	Retaining Ring - M6	9 - 110
0720 0060E	Retaining Ring - M6	5 - 102
0720 0060E	Retaining Ring - M6	7 - 102
0740 3808	Ball Bearing - 8x16x5mm	9 - 111
0741 3506	Ball Bearing - 6x12x4 mm	7 - 107
0743 3808	Radial Ball Bearing:DIA8XDIA16x5	9 - 108
0805 3389	Bushing - 8x10x6mm	9 - 106
0807 5066	Washer - M8.1xM14x0.3	9 - 104
1102 6245	Relay Connector - 2P	7 - 104
1102 6246	Relay Connector - 4P	7 - 103
1105 0487	Harness Clamp	13 - 102
1105 0487	Harness Clamp	11 - 107
1105 0508	Harness Clamp - LWS-0711	13 - 105
1105 0508	Harness Clamp - LWS-0711	9 - 107
1105 0511	Harness Clamp - LWS-0306ZC	13 - 103
1105 0511	Harness Clamp - LWS-0306ZC	5 - 105
1105 0511	Harness Clamp - LWS-0306ZC	11 - 108
1105 0723	Clamps:WES-0507	13 - 101
1106 0289	Bushing - Sr-5n-1	11 - 106
1204 2466	Micro Switch - V-16506-1c25	11 - 102
1607 0621	Sleeve Core - SFC-4	5 - 108

Part No.	Description	Page and Index No.
5410 1291	Pin	15 - 2
5447 2681	Snap Ring	3 - 17
5447 2681	Snap Ring	5 - 21
5447 2681	Snap Ring	5 - 23
5447 2681	Snap Ring	7 - 19
5447 2681	Snap Ring	15 - 1
5447 2706	Gear - 15T	5 - 22
5875 2088	Shoulder Screw - M4	7 - 8
5875 2088	Shoulder Screw - M4	9 - 14
5875 2088	Shoulder Screw - M4	15 - 10

Part No.	Description	Page and Index No.