

LCIT RT5020 (D355)

LCIT RT5020 (D355)


PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.Exterior 1 (D355)	2	19.Drive Section 2 (D355).....	38
2.Exterior 2 (D355)	4	20.Electrical Section (D355)	40
3.Paper Tray 1 (D355)	6	21.Frame Section 1 (D355).....	42
4.Paper Tray 2 (D355)	8	22.Frame Section 2 (D355).....	44
5.Paper Tray 3 (D355)	10	23.Frame Section 3 (D355).....	46
6.Paper Tray 4 (D355)	12	24.Decals And Documents (D355)	48
7.Paper Tray 5 (D355)	14	Parts Index	54
8.Paper Tray 6 (D355)	16		
9.Paper Tray 7 (D355)	18		
10.Paper Tray 8 (D355)	20		
11.Paper Feed Section 1 (D355)	22		
12.Paper Feed Section 2 (D355)	24		
13.Transfer Section 1 (D355).....	26		
14.Transfer Section 2 (D355).....	28		
15.Transfer Section 3 (D355).....	30		
16.Transfer Section 4 (D355).....	32		
17.Transfer Section 5 (D355).....	34		
18.Drive Section 1 (D355).....	36		

January 30, 2009

1.Exterior 1 (D355)

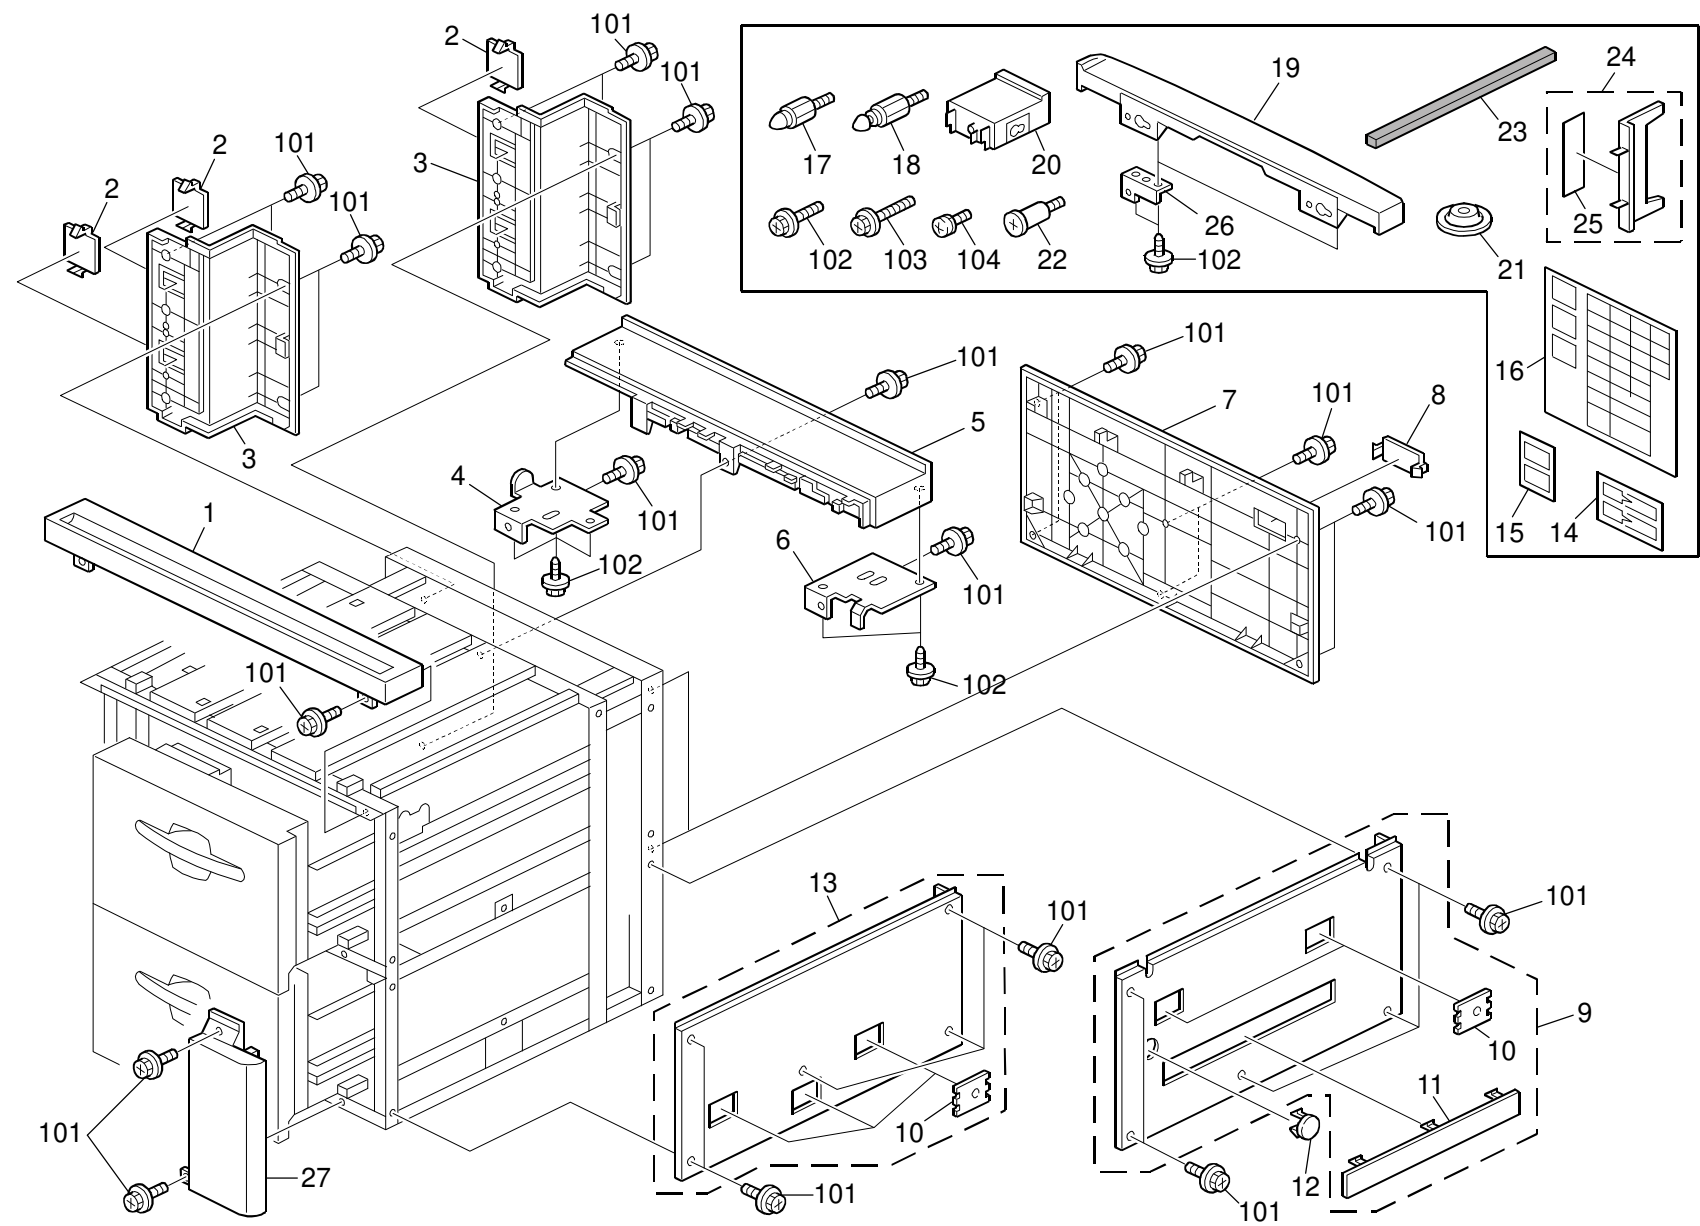


1.Exterior 1 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D355 1361	Cover:Upper Front:Printer	1
2	B065 1343	NCU Cap	3
3	D355 1327	Cover:Rear Left	2
4	D355 1379	Bracket:Support:Cover:Upper Rear:Left	1
5	D355 1364	Cover:Upper Rear	1
6	D355 1378	Bracket:Fix:Cover:Rear Right	1
7	D355 1326	Cover:Rear Middle	1
8	B065 1341	Connector Cap	1
9	D355 1321	Cover:Right Upper:Ass'y	1
10	B070 1312	Cap:Joint:Large Capacity Tray	5
11	B234 1313	Cover - Large Capacity Tray	1
12	B065 1299	Cap:MM22	1
13	D355 1323	Cover:Right Lower:Ass'y	1
14	B070 1307	Decal:Paper Set Direction	2
15	D355 4575	Decal:Paper Tray:LCT	1
16	G178 2958	Decal:Size Indication:Multi-Language	1
17	B832 1101	Positioning Pin - Lower	2
18	B832 1100	Positioning Pin - Upper	2
19	D355 1371	Cover:Upper:Extension	1
20	D355 1365	Cover:Upper Left:Rear	1
21	B132 1226	Holder:Stand	4
22	B706 1859	Screw:Slider:Lock	3
23	B832 1371	Spacer Cushion	1
24	D355 2784	End Fence:Tab:Ass'y	1
25	D350 1322	Decal:End Fence:Tab	1
26	D016 1372	Bracket:Cover:Extension	2
27	D355 1345	Cover:Front Right:Lower	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0450 4008N	Tapping Screw - M4x8	
103	0451 4020N	Tapping Screw - M4x20	
104	0954 4008N	Screw - M4x8	

2.Exterior 2 (D355)

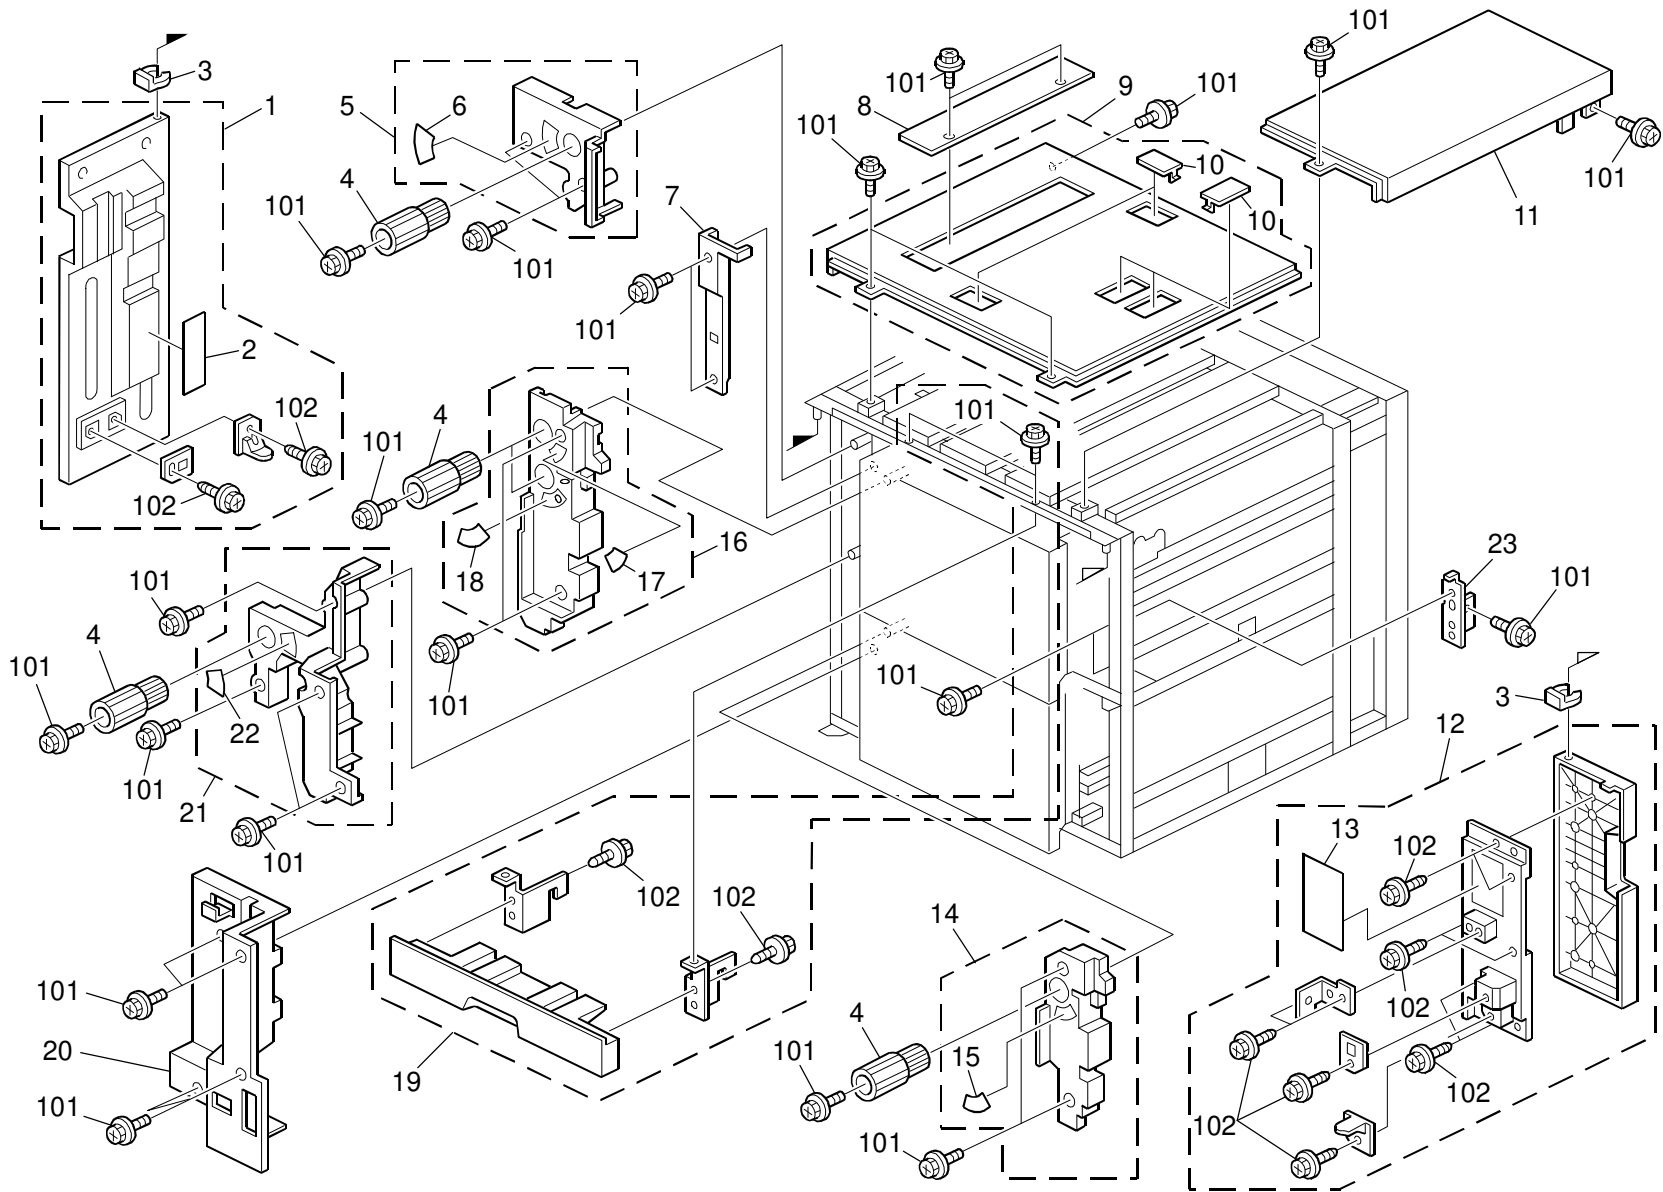


2.Exterior 2 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D355 1331	Cover:Front Left:Open And Close:Ass'y	1
2	D355 1350	Decal:Misfeed Removal:Left	1
3	5447 2681	Snap Ring	2
4	D355 3846	Knob:Misfeed Removal	5
5	D355 1317	Inner Cover:Left Upper:Ass'y	1
6	D355 1308	Decal:Knob:Left Upper	1
7	D355 1303	Inner Cover:Middle Upper	1
8	B511 1378	Cover:Cover:Upper	1
9	D355 1356	Cover:Upper Left:Ass'y	1
10	B024 1365	Cap - 38x77	4
11	D355 1363	Cover:Upper Right	1
12	D355 1338	Cover:Front Right:Open And Close:Ass'y	1
13	D355 1352	Decal:Misfeed Removal:Horizontal:Transport	1
14	D355 1319	Inner Cover:Paper Feed:Lower:Ass'y	1
15	D355 1315	Decal:Knob:Paper Feed Unit:Lower	1
16	D355 1318	Inner Cover:Paper Feed:Upper:Ass'y	1
17	D355 1314	Decal:Knob:Transport:Middle Upper	1
18	D355 1313	Decal:Knob:Paper Feed Unit:Upper	1
19	D355 3090	Transport Unit:Horizontal:Exterior:Ass'y	1
20	D355 1305	Inner Cover:Left Lower	1
21	D355 1316	Inner Cover:Left Middle:Ass'y	1
22	D355 1307	Decal:Knob:Left Middle	1
23	D355 1185	Bracket:Fix:Cover:Right Front	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0450 4008N	Tapping Screw - M4x8	

3.Paper Tray 1 (D355)

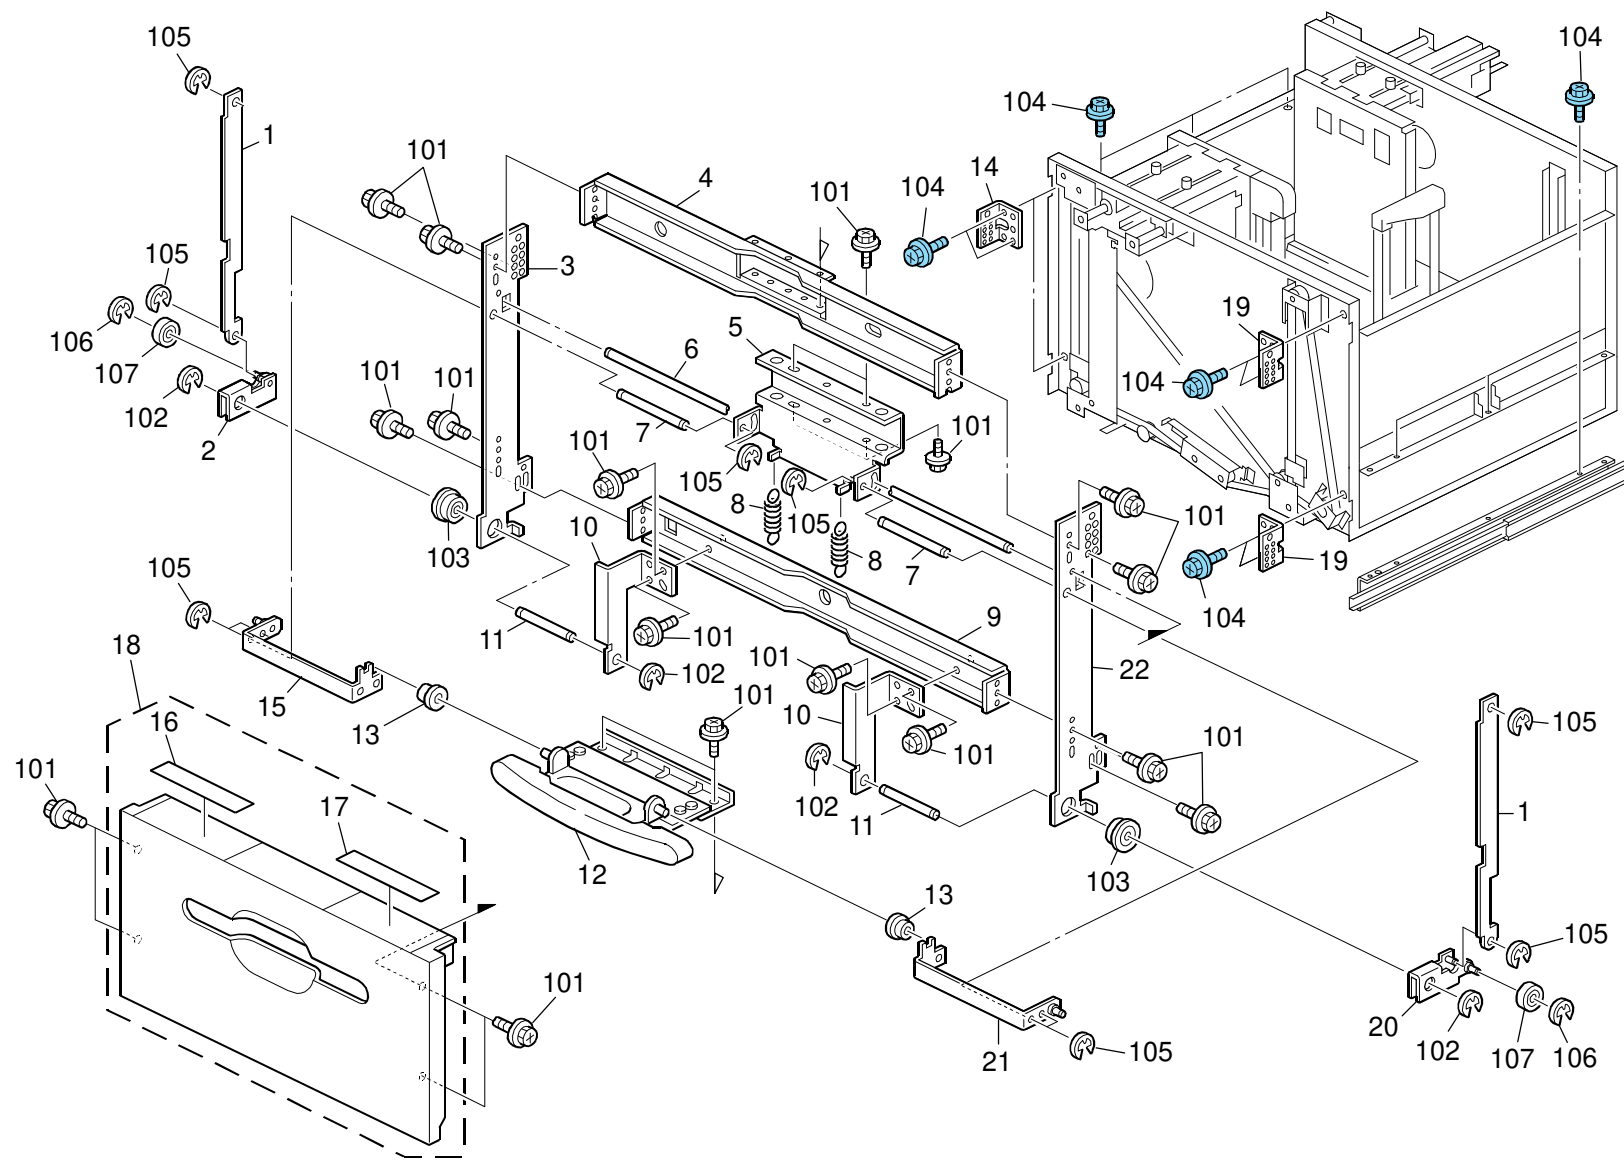


3.Paper Tray 1 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 3386	Link Handle	2
2	B834 3400	Stopper Guide - Left	1
3	B834 3395	Plate - Left	1
4	B834 3283	Stay:Main	1
5	B834 3475	Bracket	1
6	B834 3438	Link Shaft	1
7	B834 3384	Contact Point Shaft	2
8	H516 3666	Spring - 19.6mm	2
9	B834 3378	Stay	1
10	B834 3390	Contact Point Stay	2
11	B834 3389	Stopper Shaft	2
12	D355 1384	Grip:Paper Tray:Ass'y	1
13	B834 3312	Collar	2
14	B834 4892	Registration Side Plate - Left	2
15	B834 3379	Arm:Swivel:Left:Peen	1
16	D350 1313	Decal:Paper:Supply:Left	1
17	D350 1312	Decal:Paper:Supply:Right	1
18	D355 1387	Cover:Paper Tray:Ass'y	1
19	B834 4891	Registration Side Plate - Right	2
20	B834 3425	Stopper Guide - Right	1
21	B834 3385	Arm - Right	1
22	B834 3396	Plate - Right	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0720 0060E	Retaining Ring - M6	
103	0741 3808	Ball Bearing - 8x16x5mm	
104	0454 4008Q	Tapping Screw - M4x8	
105	0720 0040E	Retaining Ring - M4	
106	0720 0050E	Retaining Ring - M5	
107	0740 3506	Ball Bearing - 6x12x4 mm	

4.Paper Tray 2 (D355)

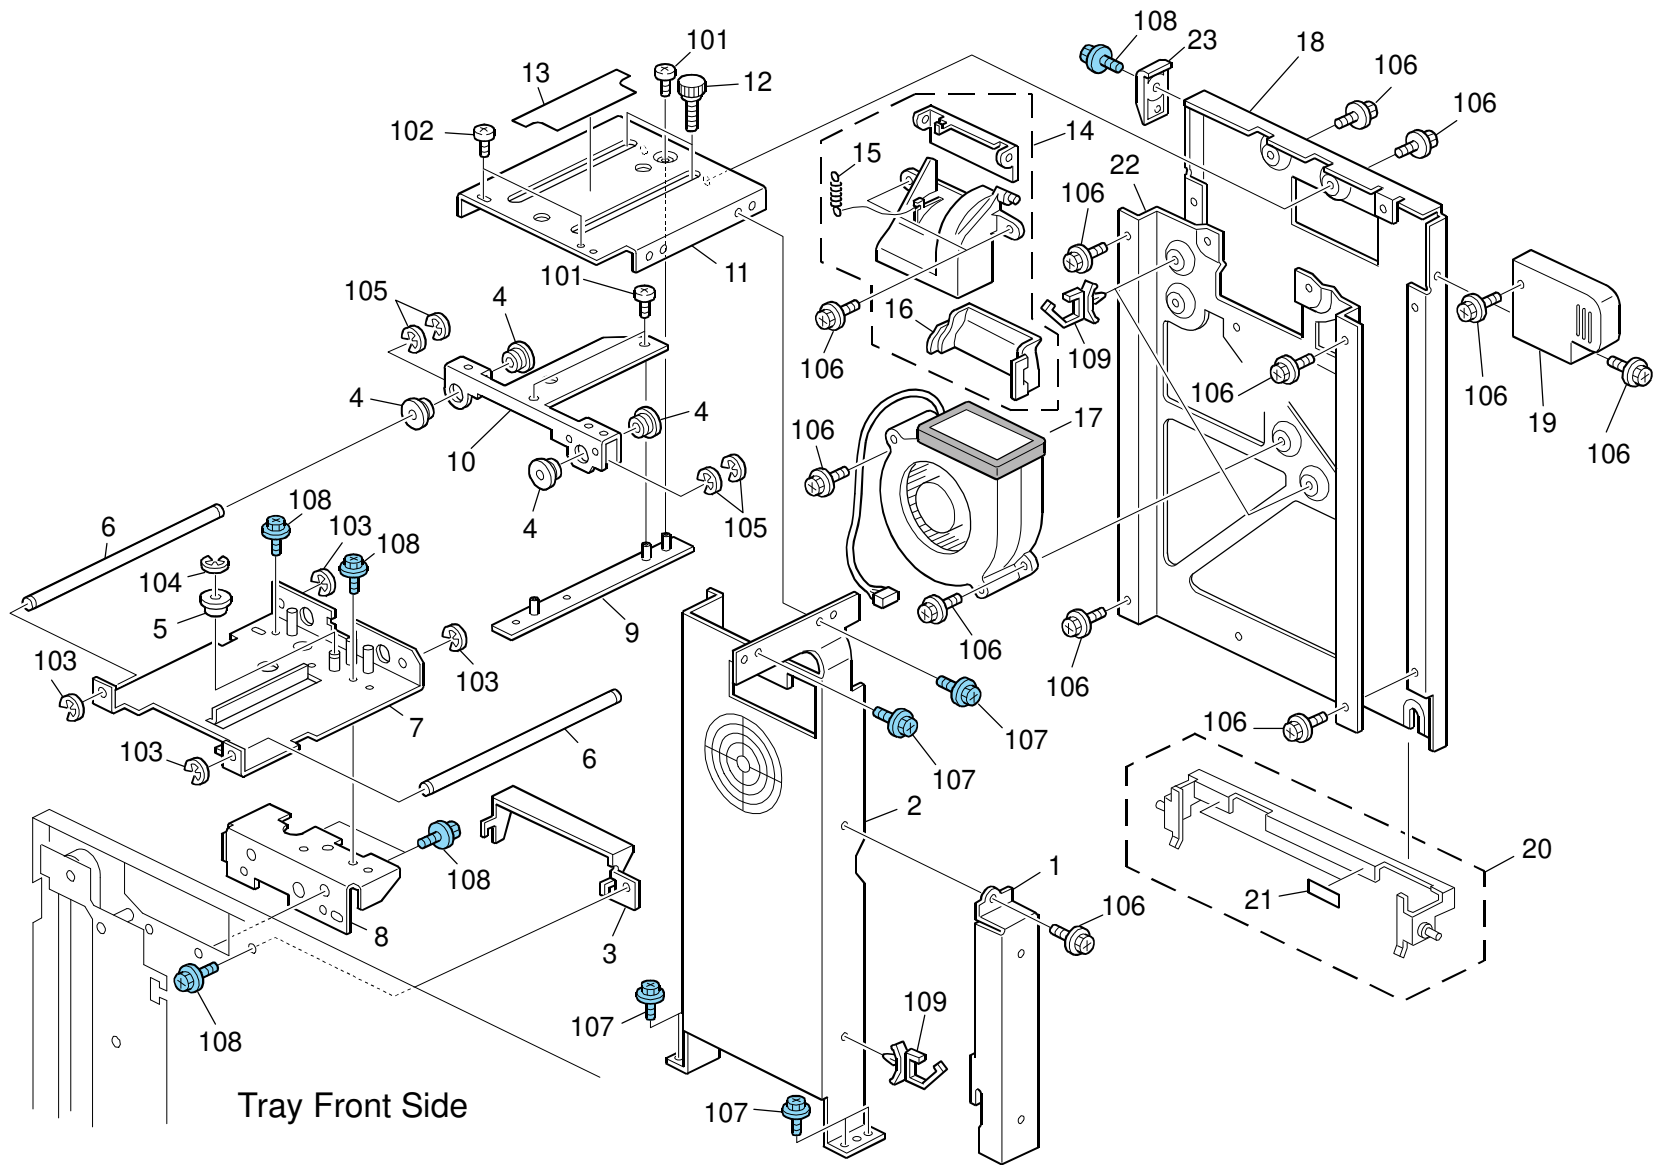


4.Paper Tray 2 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D355 3462	Cover:Blower:Harness	1
2	D355 3459	Guard:Blower:Front	1
3	D350 4516	Guard:Tray:Side Fence	1
4	B834 3350	Bushing - 6x10x6.5	4
5	B834 3312	Collar	1
6	B834 3368	Slide Shaft - Upper	2
7	B834 3323	Holder - :Upper Front	1
8	B834 3321	Side Fence Bracket - Upper Front	1
9	D350 3339	Rack:Upper Front:Peen	1
10	B834 3332	Guide - Upper Front	1
11	B834 3337	Cover - Upper Front	1
12	B832 2877	Knob Screw:Tray:Guide:Green	2
13	D355 1394	Decal:Side Fence:Scale:Front	1
14	D355 3365	Duct:Upper Front:Blower:Ass'y	1
15	AA06 0858	DC Solenoid Spring	1
16	D355 3372	Duct:Lower:Blower	1
17	D355 5515	Blower:Fan:DC24V 18.24W	1
18	D355 4656	Side Fence:Front	1
19	B834 4153	Side Fence Grip	1
20	D355 4630	Tray Bottom Plate - Support	1
21	B834 3490	Spacer - Side Fence	2
22	D355 4652	Supporting Plate:Side Fence:Front	1
23	D355 4654	Cover:Side Fence	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0453 3006N	Tapping Screw - M3x6	
102	0453 4006N	Binding Self Tapping Screw:4x6	
103	0720 0040E	Retaining Ring - M4	
104	0720 0030E	Retaining Ring - M3	
105	0720 0080E	Retaining Ring - M8	
106	0451 4008N	Tapping Screw:4x8	
107	0454 4006Q	Tapping Screw:4x6	
108	0454 4008Q	Tapping Screw - M4x8	
109	1105 0511	Harness Clamp - LWS-0306ZC	

5.Paper Tray 3 (D355)

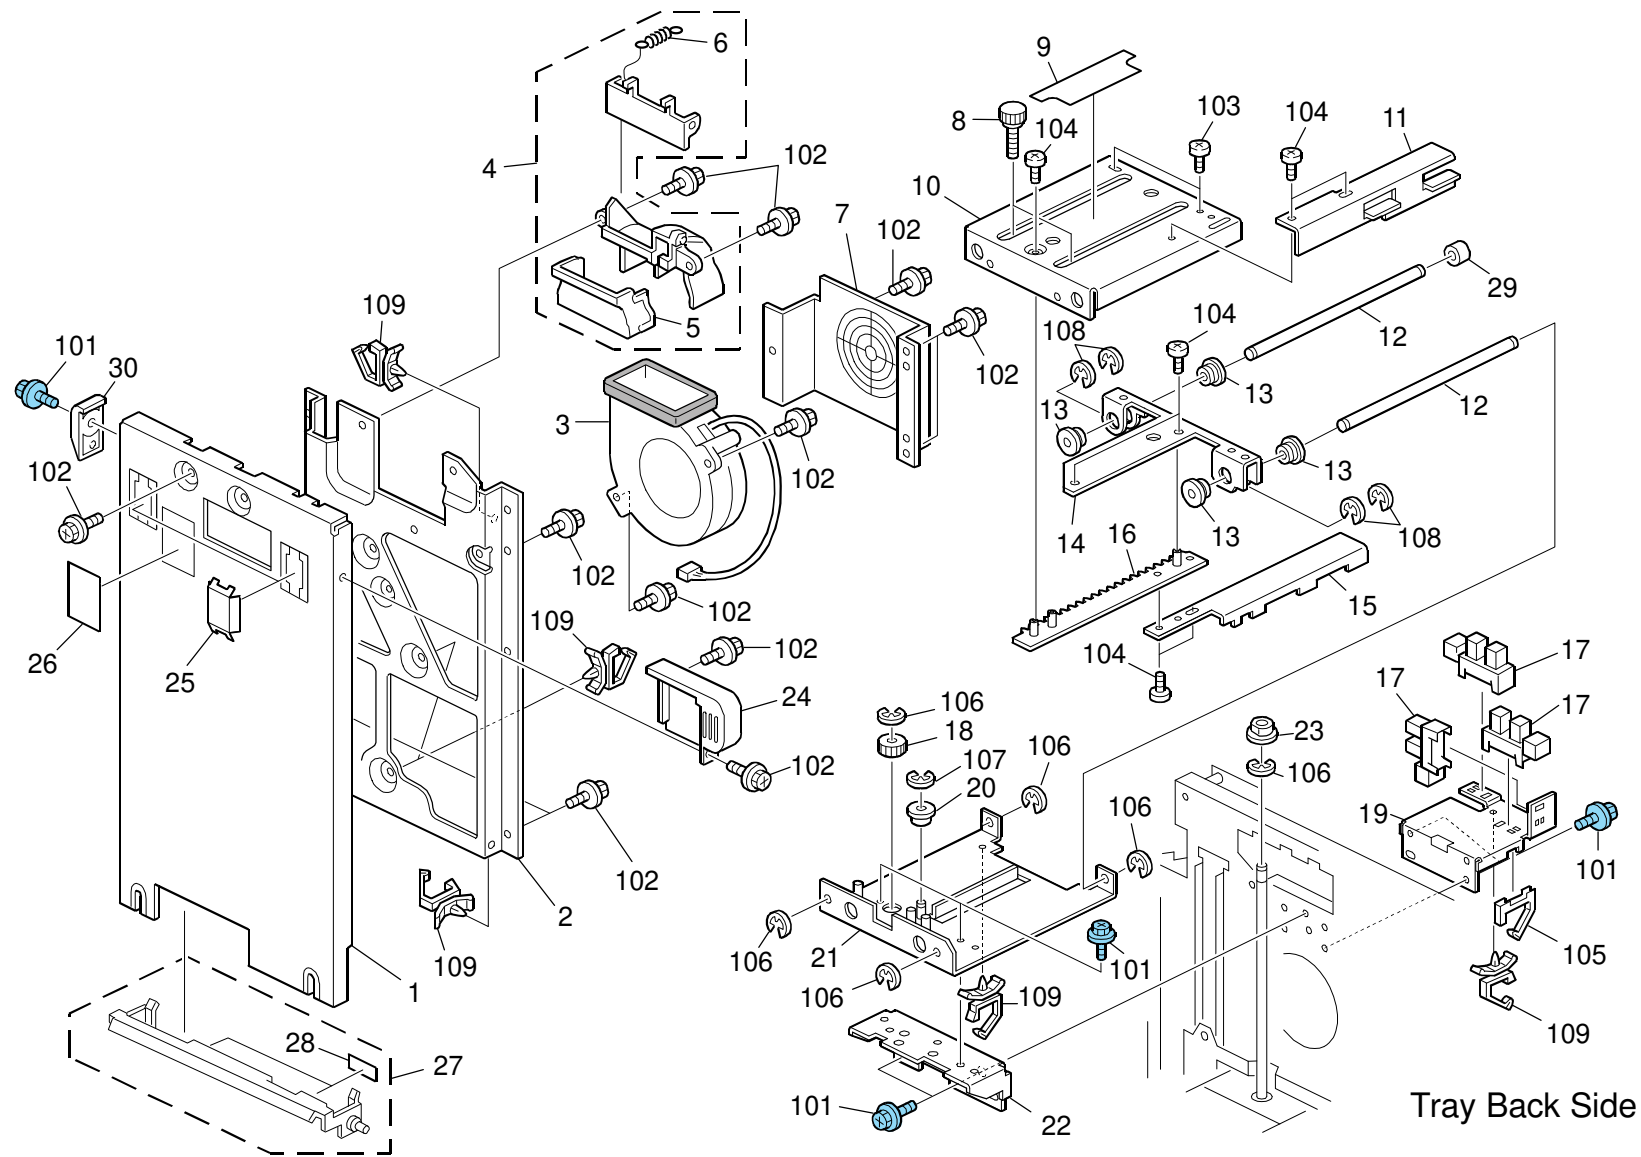

5.Paper Tray 3 (D355)














Index No.	Part No.	Description	Q'ty Per Assembly
1	D355 4664	Side Fence:Rear	1
2	D355 4662	Supporting Plate:Side Fence:Rear	1
3	D355 5515	Blower:Fan:DC24V 18.24W	1
4	D355 3375	Duct:Upper Rear:Blower:Ass'y	1
5	D355 3372	Duct:Lower:Blower	1
6	AA06 0858	DC Solenoid Spring	1
7	D355 3461	Guard:Blower:Rear	1
8	B832 2877	Knob Screw:Tray:Guide:Green	1
9	D355 1395	Decal:Side Fence:Scale:Rear	1
10	B834 3338	Cover - Upper Rear	1
11	B834 4743	Feeler - Paper Size Sensor No.2	1
12	B834 3368	Slide Shaft - Upper	2
13	B834 3350	Bushing - 6x10x6.5	4
14	B834 3334	Guide - Upper Rear	1
15	B834 4742	Feeler - Paper Size Sensor No.1	1
16	B834 3349	Rack - Upper Rear	1
17	AW02 0160	Paper Feed Sensor	3
18	B834 3316	Gear - 13Z	1
19	B834 4741	Paper Size Sensor Bracket	1
20	B834 3312	Collar	3
21	B834 3329	Holder - Upper Rear	1
22	B834 3322	Side Fence Bracket - Upper Rear	1
23	AA08 2101	Bushing - 6x10x6	1
24	B834 4163	Side Fence Grip - Rear	1
25	D355 2777	Plate:Auxiliary:Small:Adhesion	2
26	D355 2674	Decal - Paper Volume	1
27	D355 4621	Tray Bottom Plate - Support	1
28	B834 3490	Spacer - Side Fence	2
29	C236 3237	Collar 6x11.2x1.5	1
30	D355 4654	Cover:Side Fence	1



Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 4008Q	Tapping Screw - M4x8	
102	0451 4008N	Tapping Screw:4x8	
103	0453 4006N	Binding Self Tapping Screw:4x6	
104	0453 3006N	Tapping Screw - M3x6	
105	1105 0522	Edge Saddle - LES0510	
106	0720 0040E	Retaining Ring - M4	
107	0720 0030E	Retaining Ring - M3	
108	0720 0080E	Retaining Ring - M8	
109	1105 0511	Harness Clamp - LWS-0306ZC	

6.Paper Tray 4 (D355)

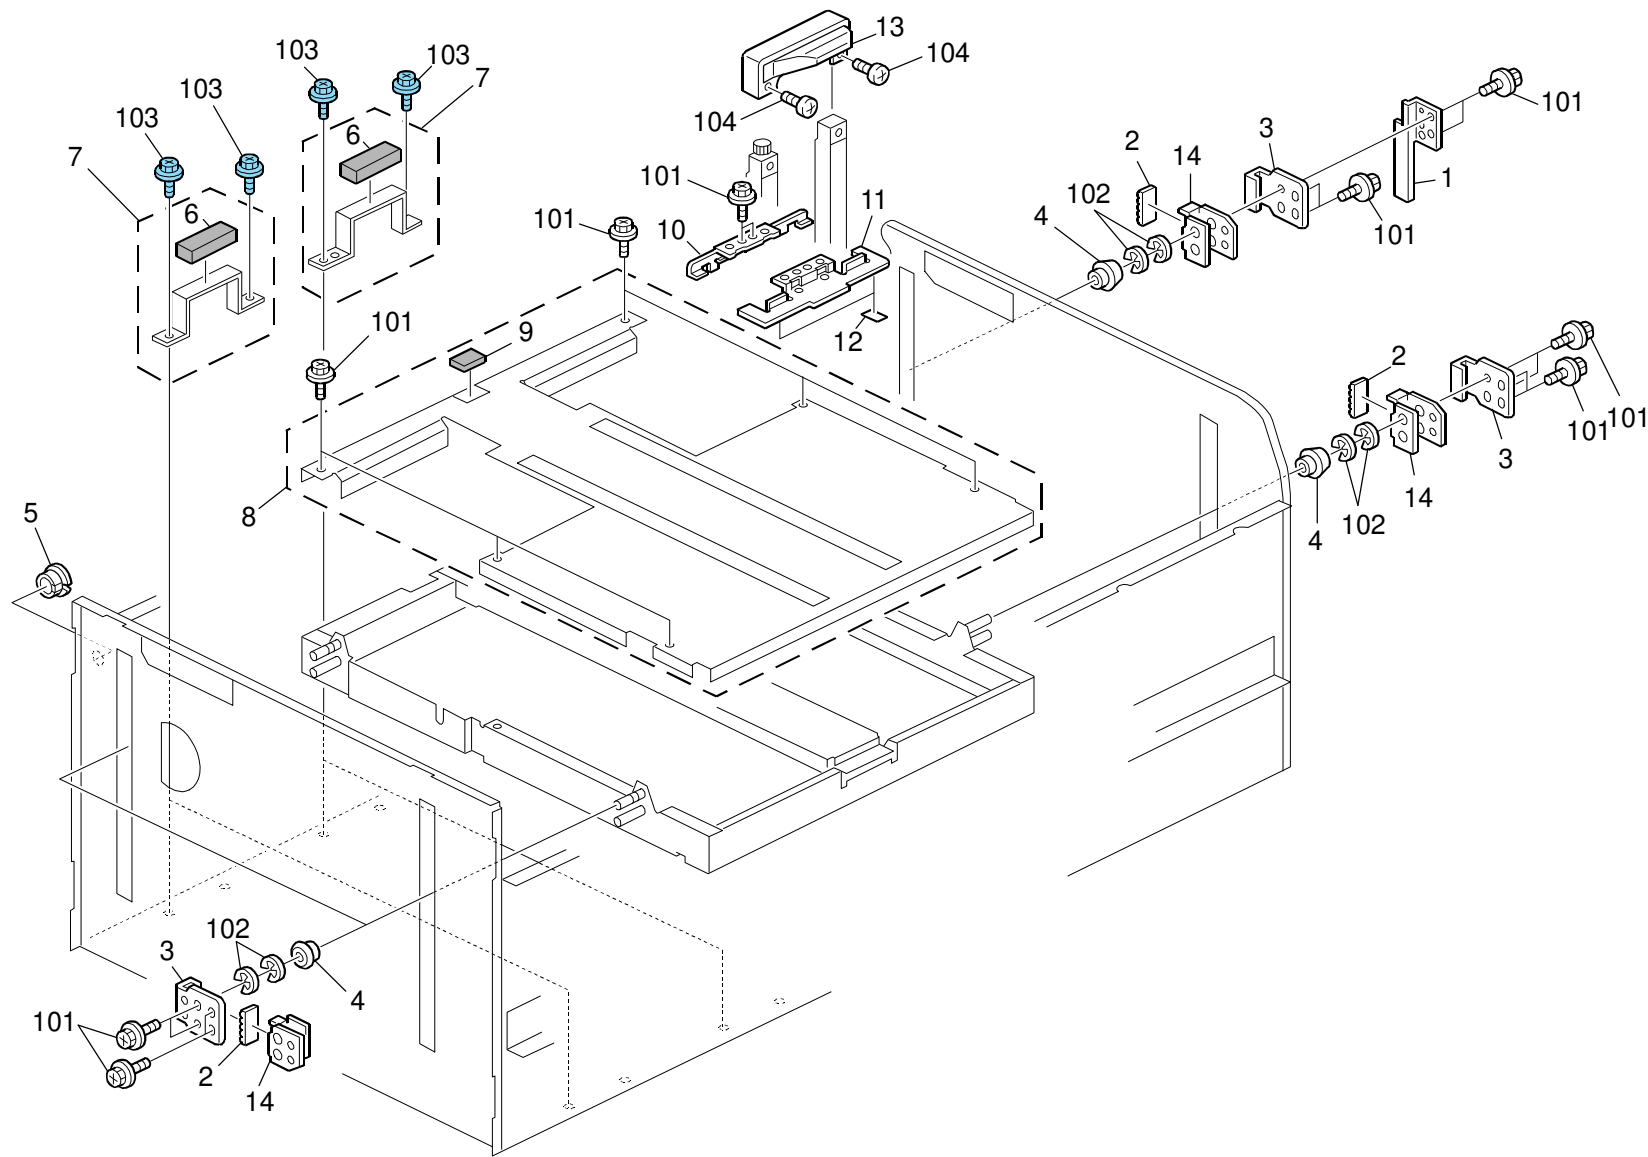


6.Paper Tray 4 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D355 4568	Feeler:Paper Volume Sensor	1
2	C563 3116	Belt Joint	4
3	D355 3232	Bracket:Timing Belt:Rear	4
4	A335 4351	Guide Roller	4
5	B234 6141	Positioning Sleeve - Inner Back	1
6	B834 4032	Cushion:Tray:No.1	4
7	B834 2715	Tray Cushion Holder	4
8	D355 4620	Tray Bottom Plate:Adhesion	1
9	5201 2858	Friction Pad	1
10	D355 4579	Guide:End Fence:Left	1
11	D355 4578	Guide:End Fence:Right	1
12	B834 3490	Spacer - Side Fence	2
13	D355 4591	Grip:End Fence	1
14	B834 3231	Timing Belt Holder - Rear	4

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0720 0060E	Retaining Ring - M6	
103	0454 4008Q	Tapping Screw - M4x8	
104	0453 4006N	Binding Self Tapping Screw:4x6	

7. Paper Tray 5 (D355)

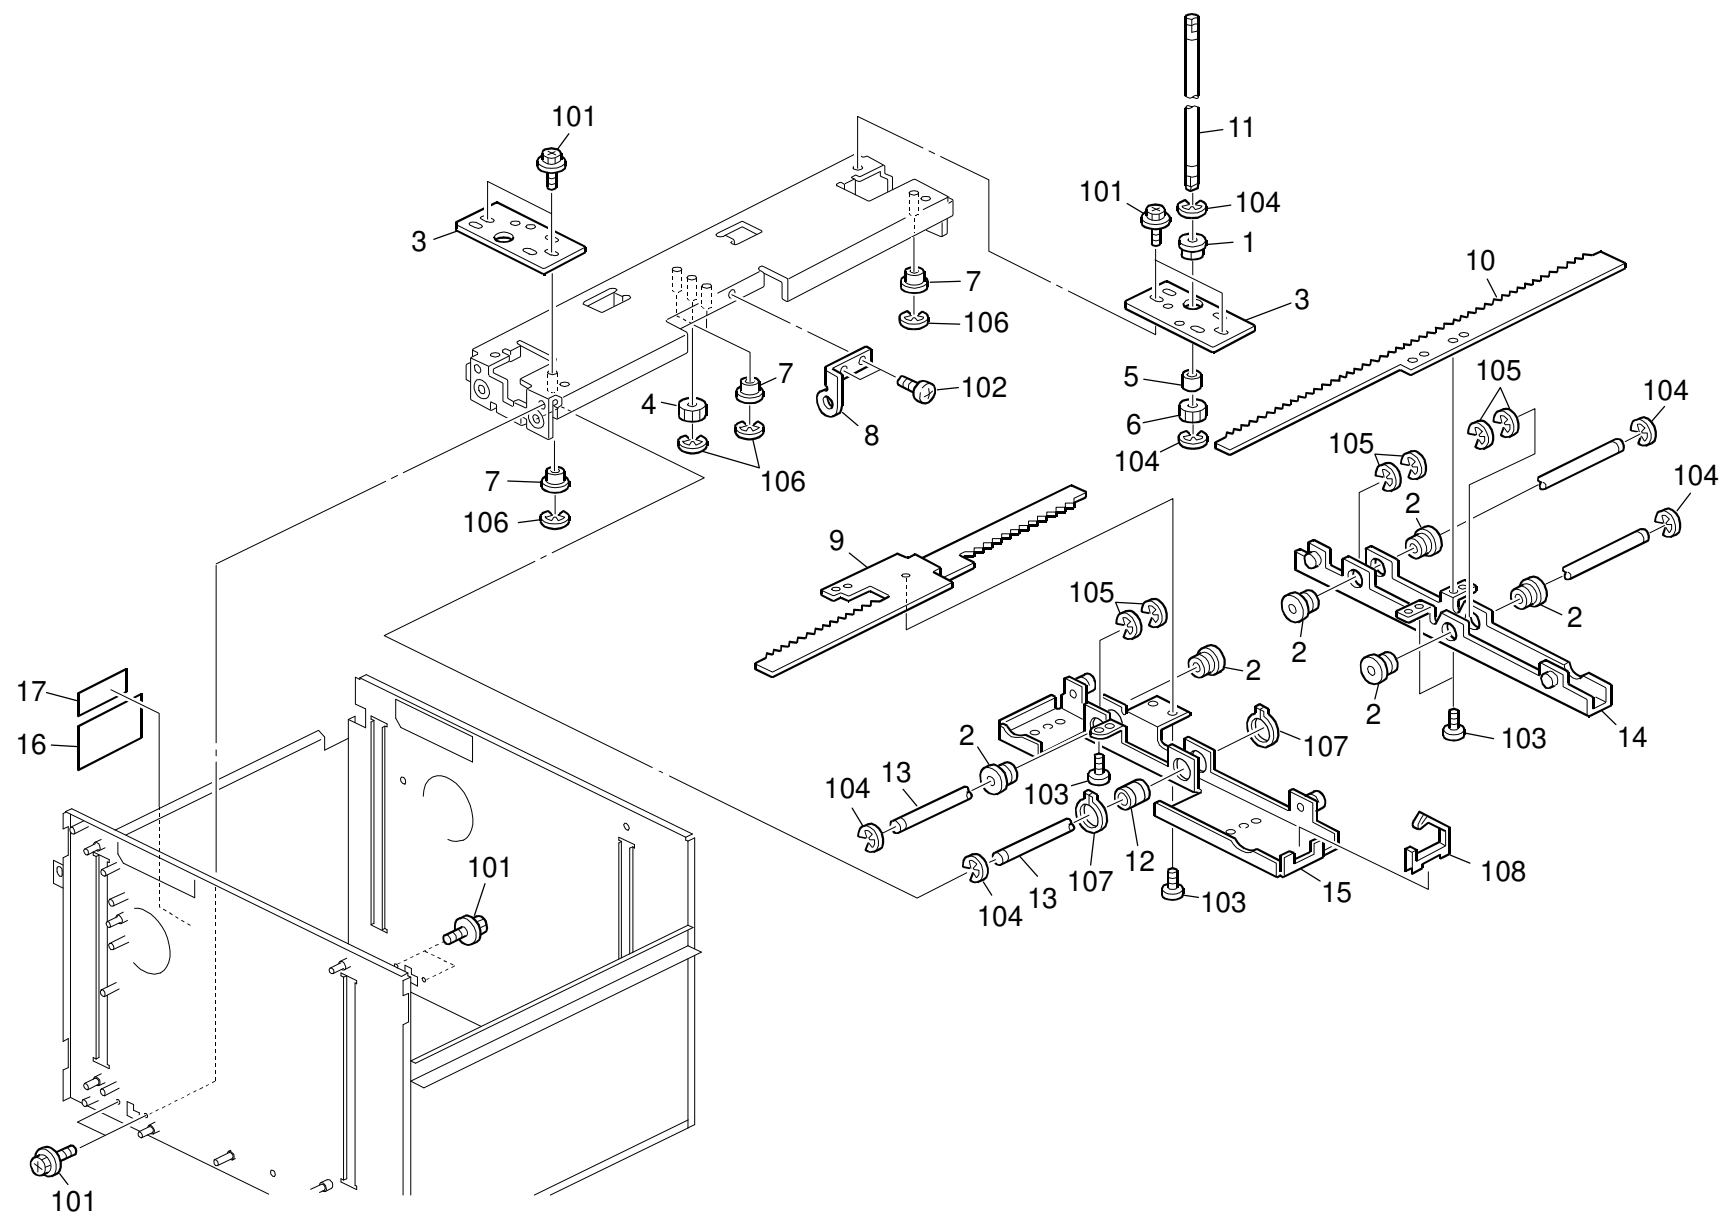


7.Paper Tray 5 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA08 2101	Bushing - 6x10x6	1
2	B834 3350	Bushing - 6x10x6.5	6
3	B834 3318	Plate:Lower	2
4	B834 3315	Gear - 13Z	1
5	A376 1295	Spacer - M6x10x5	1
6	B834 3316	Gear - 13Z	1
7	B834 3312	Collar	4
8	B834 3314	Shaft Holder - Lower	1
9	B834 3313	Rack - Front:Lower	1
10	B834 4696	Rack - Rear Lower	1
11	B834 3346	Coupling Shaft - Rear	1
12	D355 4866	Ball Bearing:Slide:DIA6	1
13	B834 3111	Side Fence Shaft - Lower	2
14	B834 3309	Side Fence Bracket - Lower Rear	1
15	D355 3306	Bracket:Side Fence:Lower Front	1
16	D355 4572	Decal:Paper Tray:Warning	1
17	D355 4574	Decal:Paper Tray:Caution	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0453 3006N	Tapping Screw - M3x6	
103	0453 4006N	Binding Self Tapping Screw:4x6	
104	0720 0040E	Retaining Ring - M4	
105	0720 0080E	Retaining Ring - M8	
106	0720 0030E	Retaining Ring - M3	
107	0725 0120E	Retaining Ring C - M12	
108	1105 0522	Edge Saddle - LES0510	

8.Paper Tray 6 (D355)

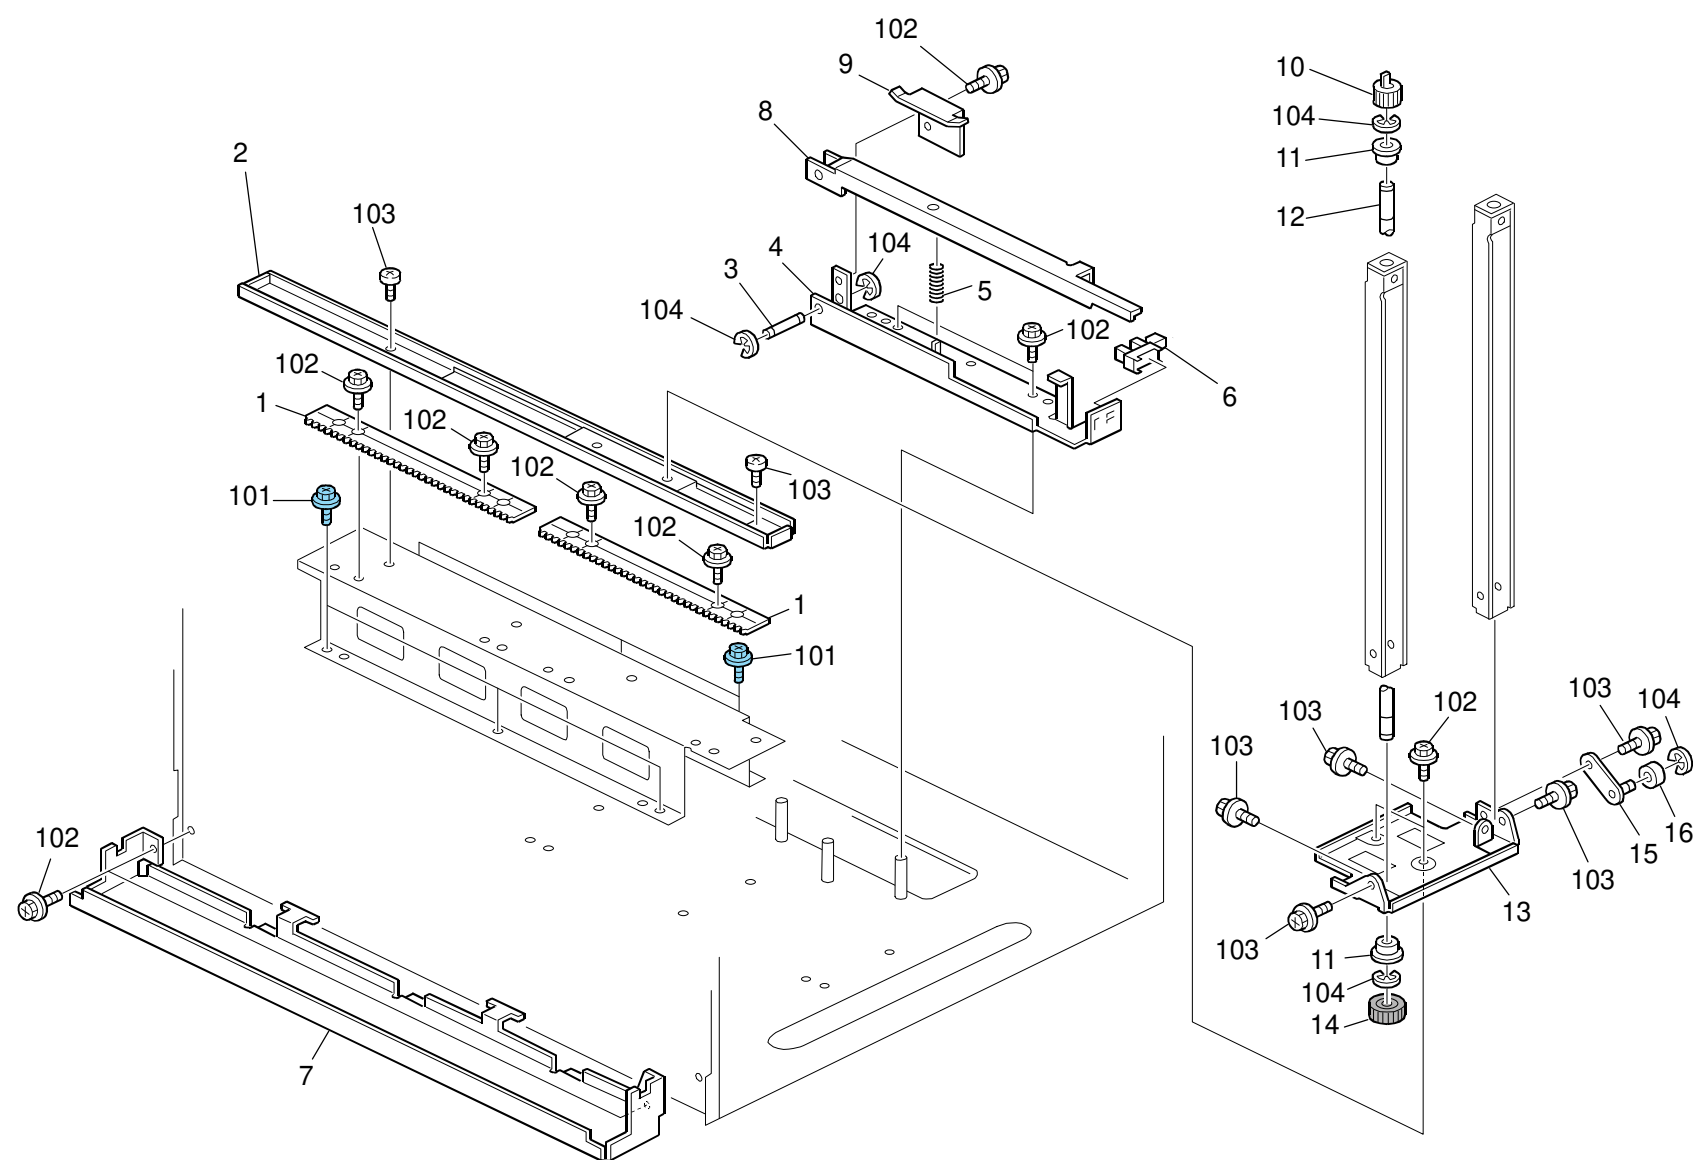


8.Paper Tray 6 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D355 4593	Rack:Base:End Fence	2
2	B834 3065	Slide Rail - End Fence	1
3	B834 4595	Contact Point Shaft - Long	1
4	B834 4593	Paper Size Sensor Bracket - Long	1
5	G052 1518	Spring - Lock Lever	1
6	AW02 0160	Paper Feed Sensor	1
7	D355 2719	Separation Plate:Drive Unit	1
8	B834 4594	Shielding Plate - Long	1
9	B834 3169	Paper Size Sensor Plate	1
10	A294 4156	Gear - 23Z	1
11	H085 1109	Bushing - M6x5	2
12	D355 4597	Shaft:End Fence:Coupling	1
13	D355 4587	Bracket:End Fence	1
14	A228 3613	Gear - 20Z	1
15	D355 4589	Bracket:Paper Size Sensor	1
16	D355 4598	Roller:Slider	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 4008Q	Tapping Screw - M4x8	
102	0451 4008N	Tapping Screw:4x8	
103	0453 4006N	Binding Self Tapping Screw:4x6	
104	0720 0040E	Retaining Ring - M4	

9.Paper Tray 7 (D355)

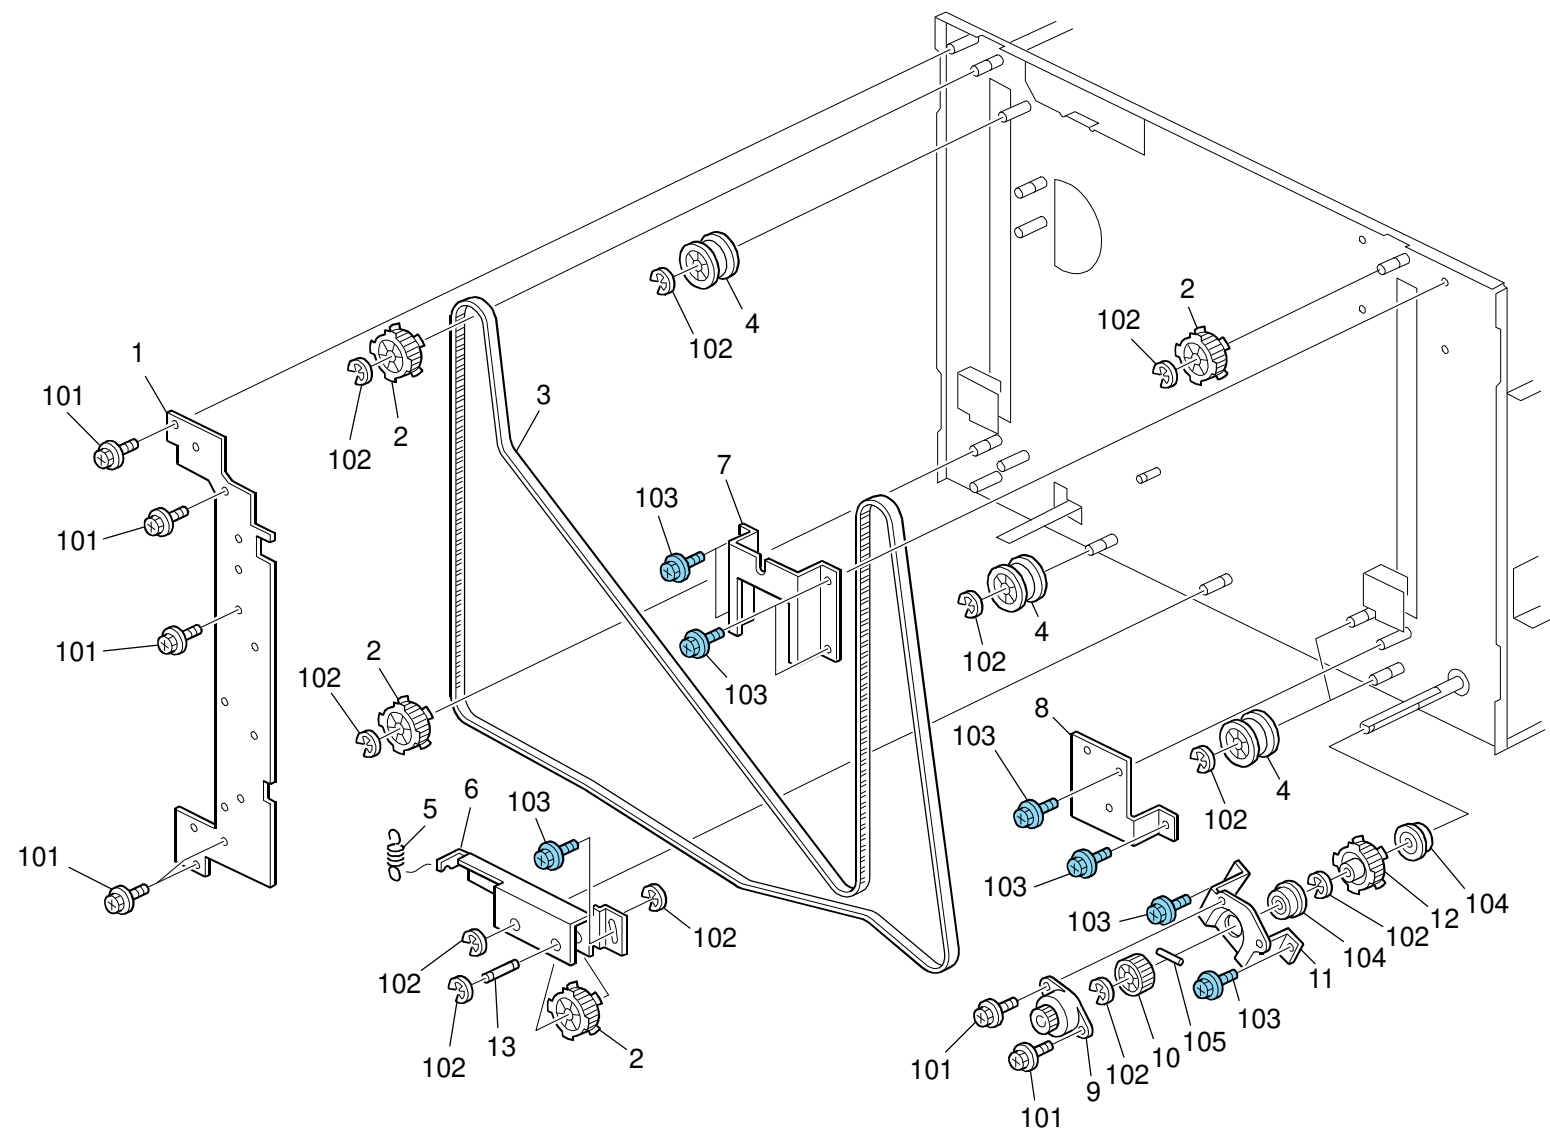

9.Paper Tray 7 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 4563	Plate	2
2	B834 4557	Timing Pulley:Drive:No.2:Ass'y	4
3	B834 4572	Timing Belt - B100S5M2000	2
4	B834 4559	Tensioner	4
5	AA06 0840	Pressure Spring - 29N	1
6	B834 3245	Tension Bracket No.2 - Front	1
7	B834 3237	Bracket - Front	1
8	B834 4564	Holder - Front	1
9	B834 3493	Oil Damper:0.2N	1
10	D355 4140	Gear - 24Z	1
11	D355 4564	Bracket:Drive:Front Lower	1
12	B834 4565	Timing Pulley - 20T	1
13	B834 4568	Stud	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0720 0060E	Retaining Ring - M6	
103	0454 4008Q	Tapping Screw - M4x8	
104	0742 3808	Ball Bearing - 8x16x5	
105	0633 0140G	Parallel Pin - 3x14	

This diagram illustrates the exploded view of a mechanical assembly, likely a printer or scanner mechanism. The components are numbered as follows:

- 1**: Small screw or pin at the top right.
- 2**: Gear or pulley component, appearing in multiple locations.
- 3**: Long, thin metal strip or frame component.
- 4**: Small pulley or wheel component.
- 5**: Spring component at the bottom right.
- 6**: Small metal bracket or plate.
- 7**: Small pin or screw.
- 8**: Small metal bracket or plate.
- 9**: Small metal bracket or plate.
- 10**: Small metal bracket or plate.
- 11**: Small metal bracket or plate.
- 12**: Long metal rod or shaft.
- 13**: Small metal plate or bracket.
- 14**: Small metal bracket or plate.
- 15**: Small metal bracket or plate.
- 16**: Cable or wire assembly at the top left.
- 101**: Small screw or pin.
- 102**: Small pin or screw, appearing frequently throughout the assembly.
- 103**: Small screw or pin, appearing frequently throughout the assembly.
- 104**: Small pulley or wheel component.
- 105**: Small metal bracket or plate.
- 106**: Small metal bracket or plate.
- 107**: Small metal bracket or plate.
- 108**: Small metal bracket or plate.

10.Paper Tray 8 (D355)


Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 4563	Plate	1
2	B834 4557	Timing Pulley:Drive:No.2:Ass'y	4
3	B834 4572	Timing Belt - B100S5M2000	1
4	B834 4559	Tensioner	4
5	AA06 0840	Pressure Spring - 29N	1
6	B834 4566	Tension Bracket No.2 - Rear	1
7	B834 4568	Stud	1
8	D355 4596	Bracket:Paper Volume Sensor	1
9	AW02 0160	Paper Feed Sensor	4
10	B834 3248	Bracket - Rear	1
11	D355 4563	Drive Bracket - Rear Lower	1
12	D355 4531	Shaft:Main:Drive	1
13	D355 4534	Holder:Driven:Rear	1
14	D355 5315	Harness:Connecting:Tray	1
15	B834 4881	Drawer Connector Bracket	1
16	D355 5316	Harness:Fan	1



Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0720 0060E	Retaining Ring - M6	
103	0454 4008Q	Tapping Screw - M4x8	
104	0742 3808	Ball Bearing - 8x16x5	
105	1105 0518	Edge Saddle - LES-1010	
106	1105 0487	Harness Clamp	
107	1105 0511	Harness Clamp - LWS-0306ZC	
108	1105 0522	Edge Saddle - LES0510	



11.Paper Feed Section 1 (D355)

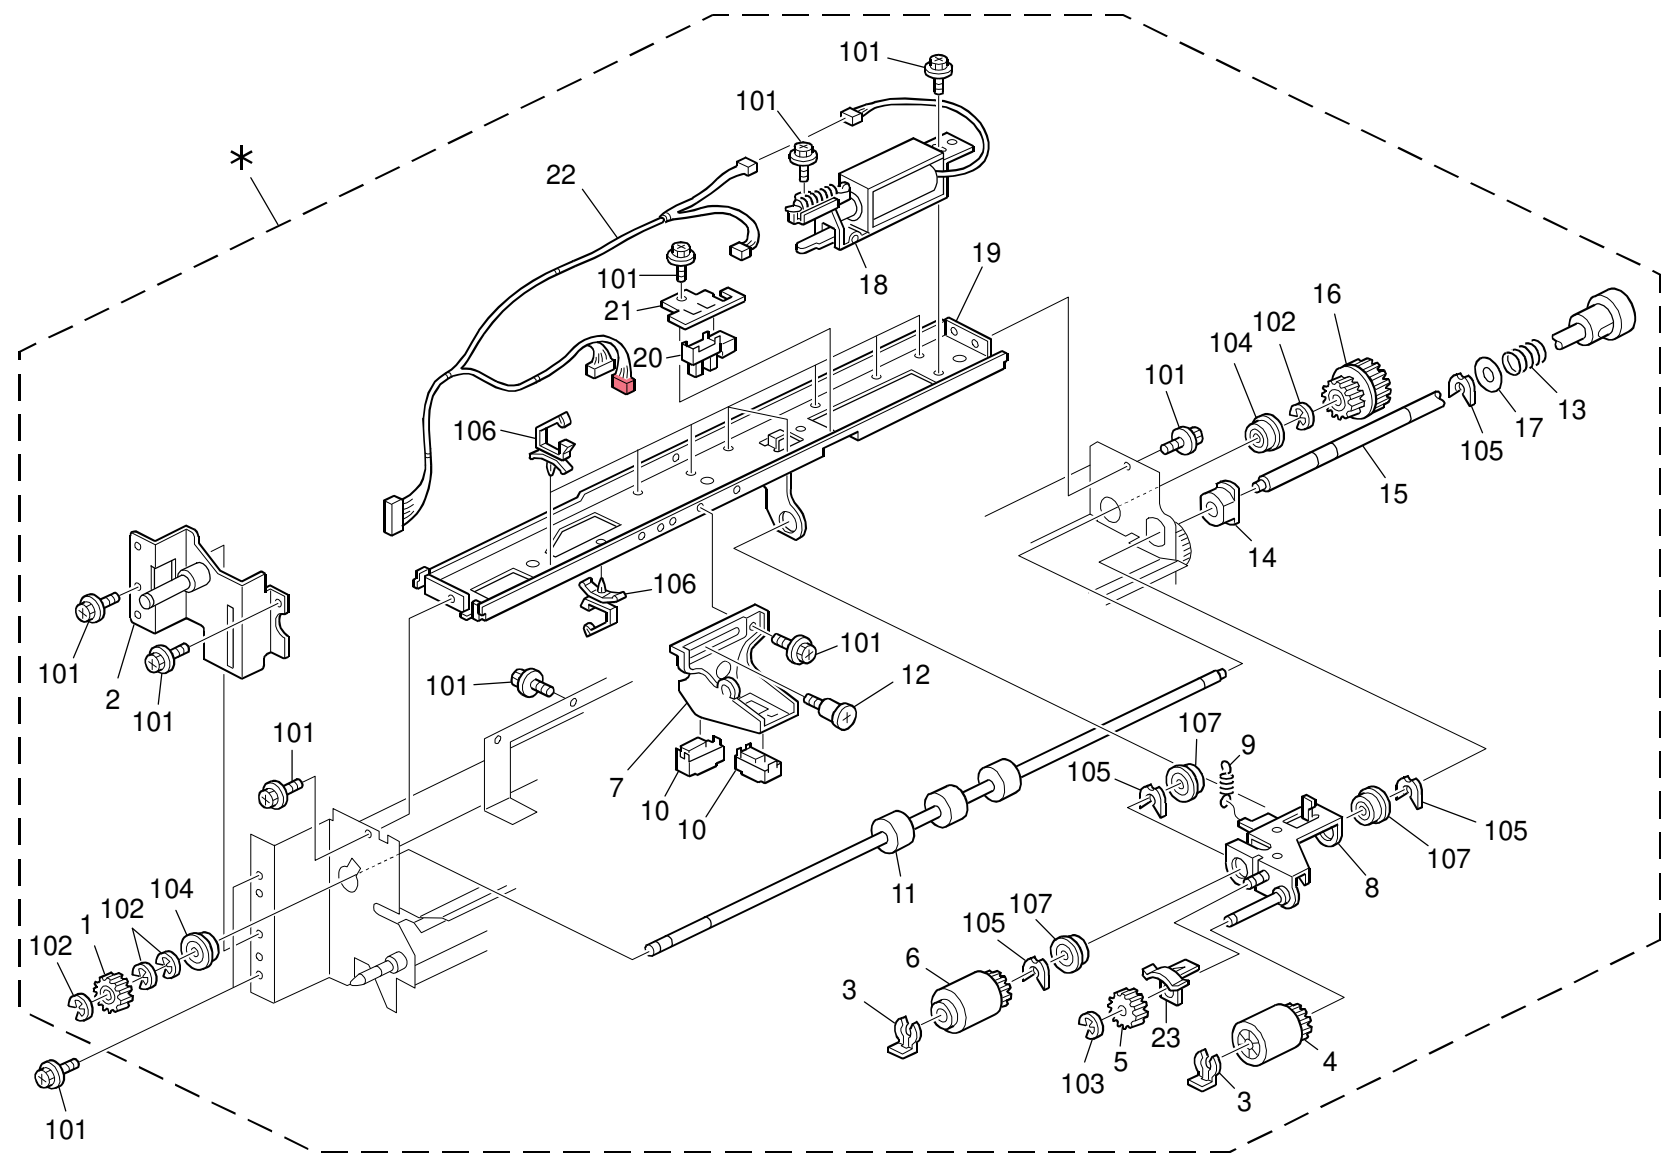


11.Paper Feed Section 1 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
*	D355 2501	Paper Feed Unit:Ass'y	2
1	AB01 1478	Gear - 18Z	2
2	B834 2631	Stay	1
3	AA10 0014	Retaining Ring C - Separate	2
4	AF03 0071	Pick-up Roller	1
5	5447 2706	Gear - 15T	1
6	AF03 1041	Feed Roller - Bypass Feed	1
7	D355 2577	Bracket:Sensor:Paper Feed	1
8	B832 2574	Pickup Arm	1
9	AA06 6677	Tension Spring	1
10	AW01 0122	Paper Feed Sensor	2
11	AF02 1410	Transport Roller	1
12	AA14 3812	Screw - Scale	1
13	AA06 3204	Compression Spring	1
14	AA08 3015	Roller Clutch	1
15	B832 2585	Feed Roller Shaft	1
16	AB01 7724	Gear - 23Z/28Z	1
17	B132 4119	Spacer:Gear:Idler	1
18	B832 2578	DC Solenoid 24V	1
19	B832 2569	Stay:Feed:Peen	1
20	AW02 0160	Paper Feed Sensor	1
21	B511 2677	Sensor Bracket	1
22	D350 5311	Harness:Paper Feed Unit	1
23	D355 2571	Paper Feed Roller:Guard	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0720 0060E	Retaining Ring - M6	
103	0720 0040E	Retaining Ring - M4	
104	0742 3808	Ball Bearing - 8x16x5	
105	0805 0088	Retaining Ring - M6	
106	1105 0511	Harness Clamp - LWS-0306ZC	
107	0741 3708	Ball Bearing - 8x12x3.5mm	

12.Paper Feed Section 2 (D355)

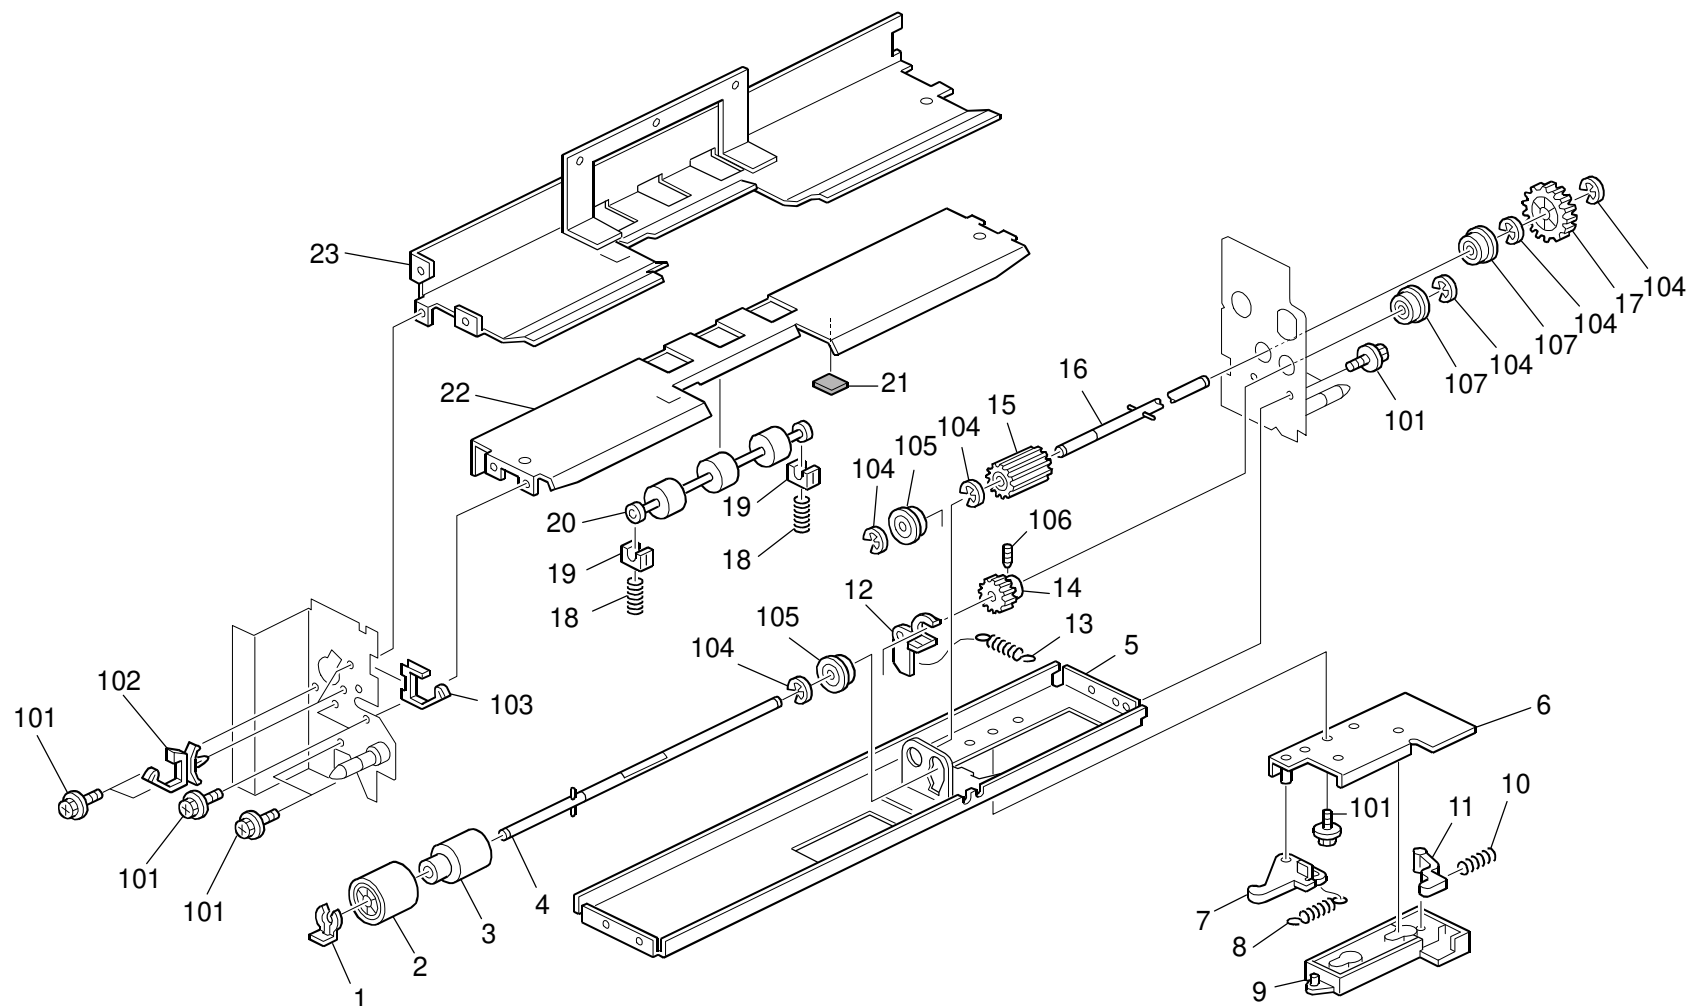


12.Paper Feed Section 2 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA10 0014	Retaining Ring C - Separate	1
2	AF03 2041	Separation Roller - Bypass Feed	1
3	B234 6301	Torque Limiter:75mN m	1
4	B234 6223	Driven Reverse Shaft	1
5	B832 2541	Stay	1
6	D355 2551	Bracket:Reverse:Release	1
7	B303 2559	Lever:Pressure Release:Reverse	1
8	D355 2559	Tension Spring:Reverse	1
9	D355 2554	Hook:Reverse:Pressure	1
10	D355 2563	Compression Spring:Reverse: Pressure:Auxiliary	1
11	D355 2556	Lever:Reverse:Pressure:Swivel	1
12	B303 2556	Reverse Pressure Lever	1
13	B833 2567	Tension Spring	1
14	AB01 1591	Gear:Reverse	1
15	AB01 1392	Drive Reverse Gear - 24Z	1
16	B234 6222	Reverse Drive Shaft	1
17	BB01 3008	Gear - 31Z	1
18	B833 2565	Compression Spring	2
19	AA08 4059	Ball Bearing Holder	2
20	B834 2568	Transport Roller - Driven	1
21	A229 2692	Damping Insulation	1
22	B832 2535	Reverse Guide Plate	1
23	B834 2520	Feed Guide Plate	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	1105 0511	Harness Clamp - LWS-0306ZC	
103	1105 0522	Edge Saddle - LES0510	
104	0720 0040E	Retaining Ring - M4	
105	0741 3506	Ball Bearing - 6x12x4 mm	
106	0573 0030E	Hexagon Headless Set Screw - M3x3	
107	0741 3706	Ball Bearing - 6x10x3	

13.Transfer Section 1 (D355)

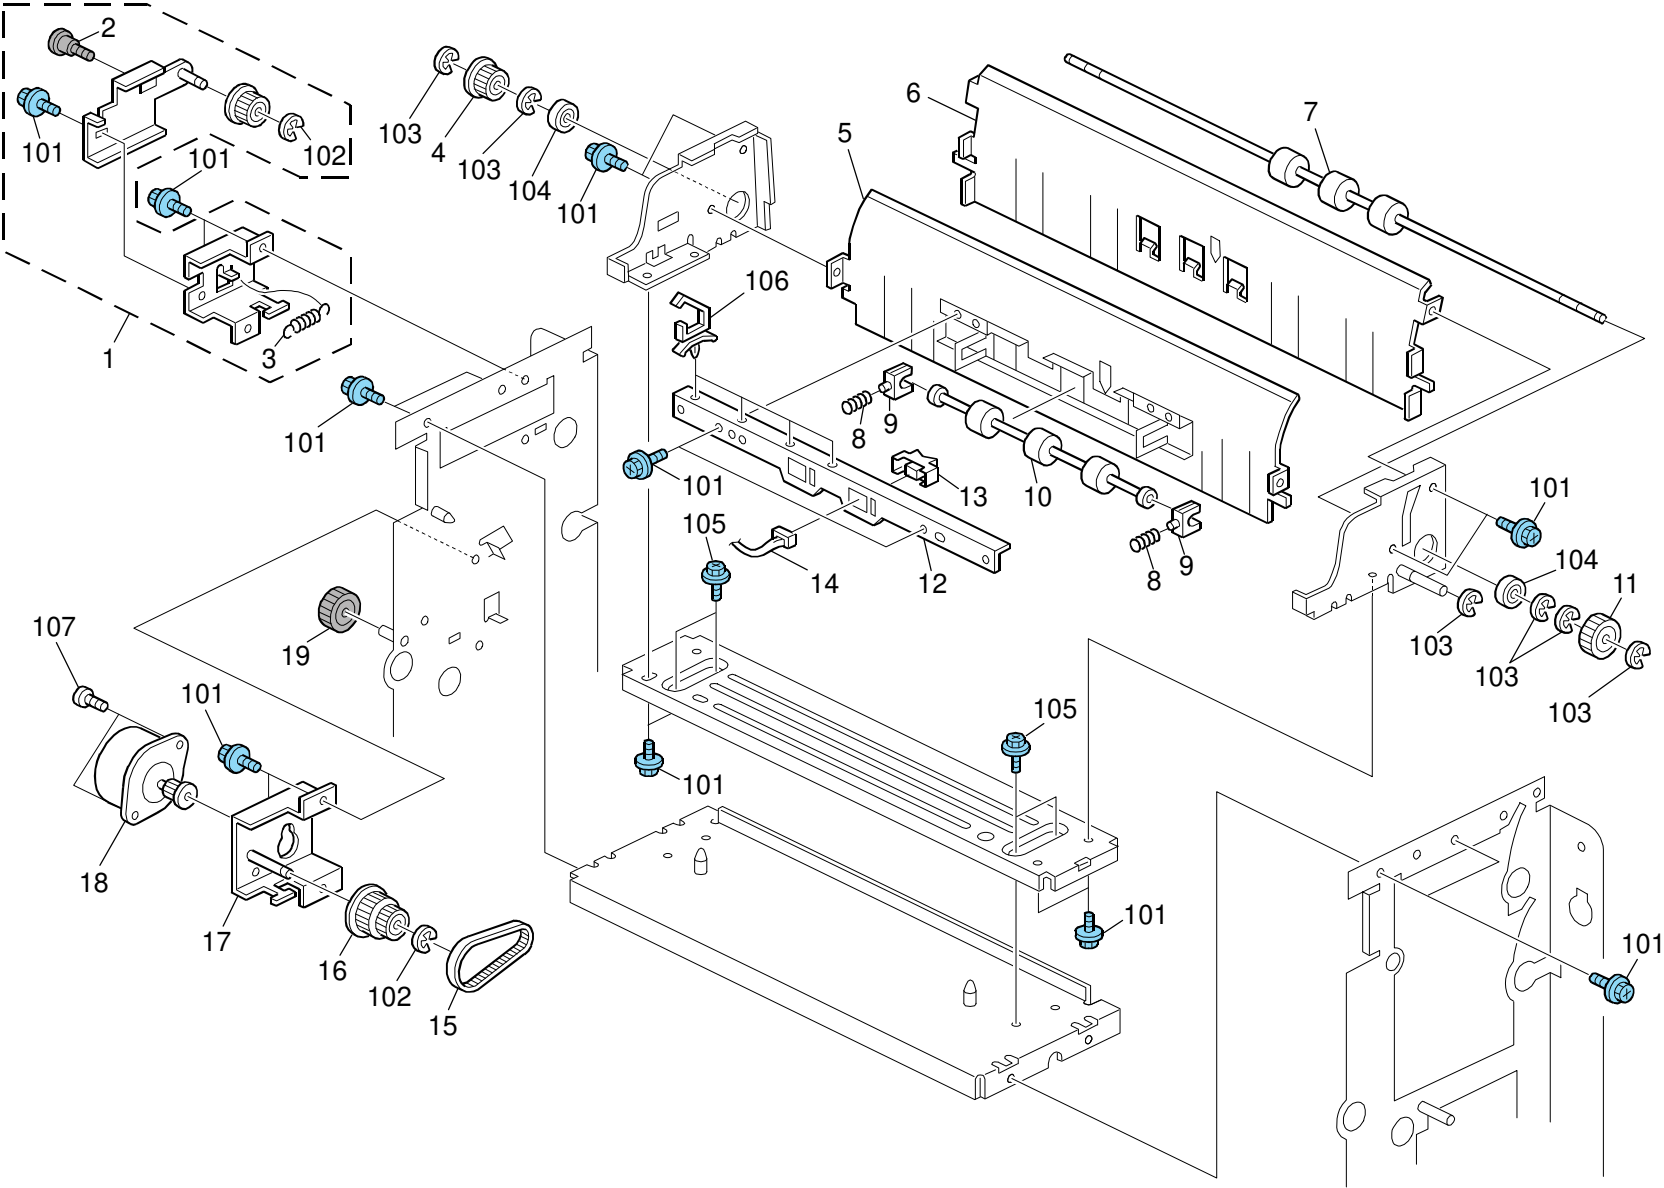




13.Transfer Section 1 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D355 3870	Bracket:Tension:Manual Feed Unit:Sub-ass'y	1
2	AA14 3810	Development Cover Screw	1
3	B234 6508	Tension Spring	1
4	B234 6506	Timing Pulley - 30T	1
5	D355 3861	Guide Plate:Left:Manual Feed:Peen	1
6	D355 3864	Guide Plate:Manual Feed:Right	1
7	D355 3806	Drive Roller:Transport:CW	1
8	AA06 6675	Compression Spring	2
9	AA08 4059	Ball Bearing Holder	2
10	D355 3803	Transport Roller:Driven	1
11	D355 3817	Gear:Drive:Grip:Z22	1
12	D355 3998	Bracket:Sensor:Transport	1
13	AW01 0122	Paper Feed Sensor	1
14	D355 5311	Harness:Sensor:Transport:Ass'y	1
15	B835 2826	Timing Belt - B60S2M110	1
16	B835 2825	Gear - 29Z/36T	1
17	D355 3829	Bracket:Stepper Motor:Peen	1
18	AX06 0333	Stepper Motor DC2.4V 13W	1
19	B132 3350	Gear:Idler:Transport Screw:Small	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 4008Q	Tapping Screw - M4x8	
102	0720 0040E	Retaining Ring - M4	
103	0720 0060E	Retaining Ring - M6	
104	0742 3808	Ball Bearing - 8x16x5	
105	0454 4006Q	Tapping Screw:4x6	
106	1105 0511	Harness Clamp - LWS-0306ZC	
107	0453 3006N	Tapping Screw - M3x6	

14.Transfer Section 2 (D355)

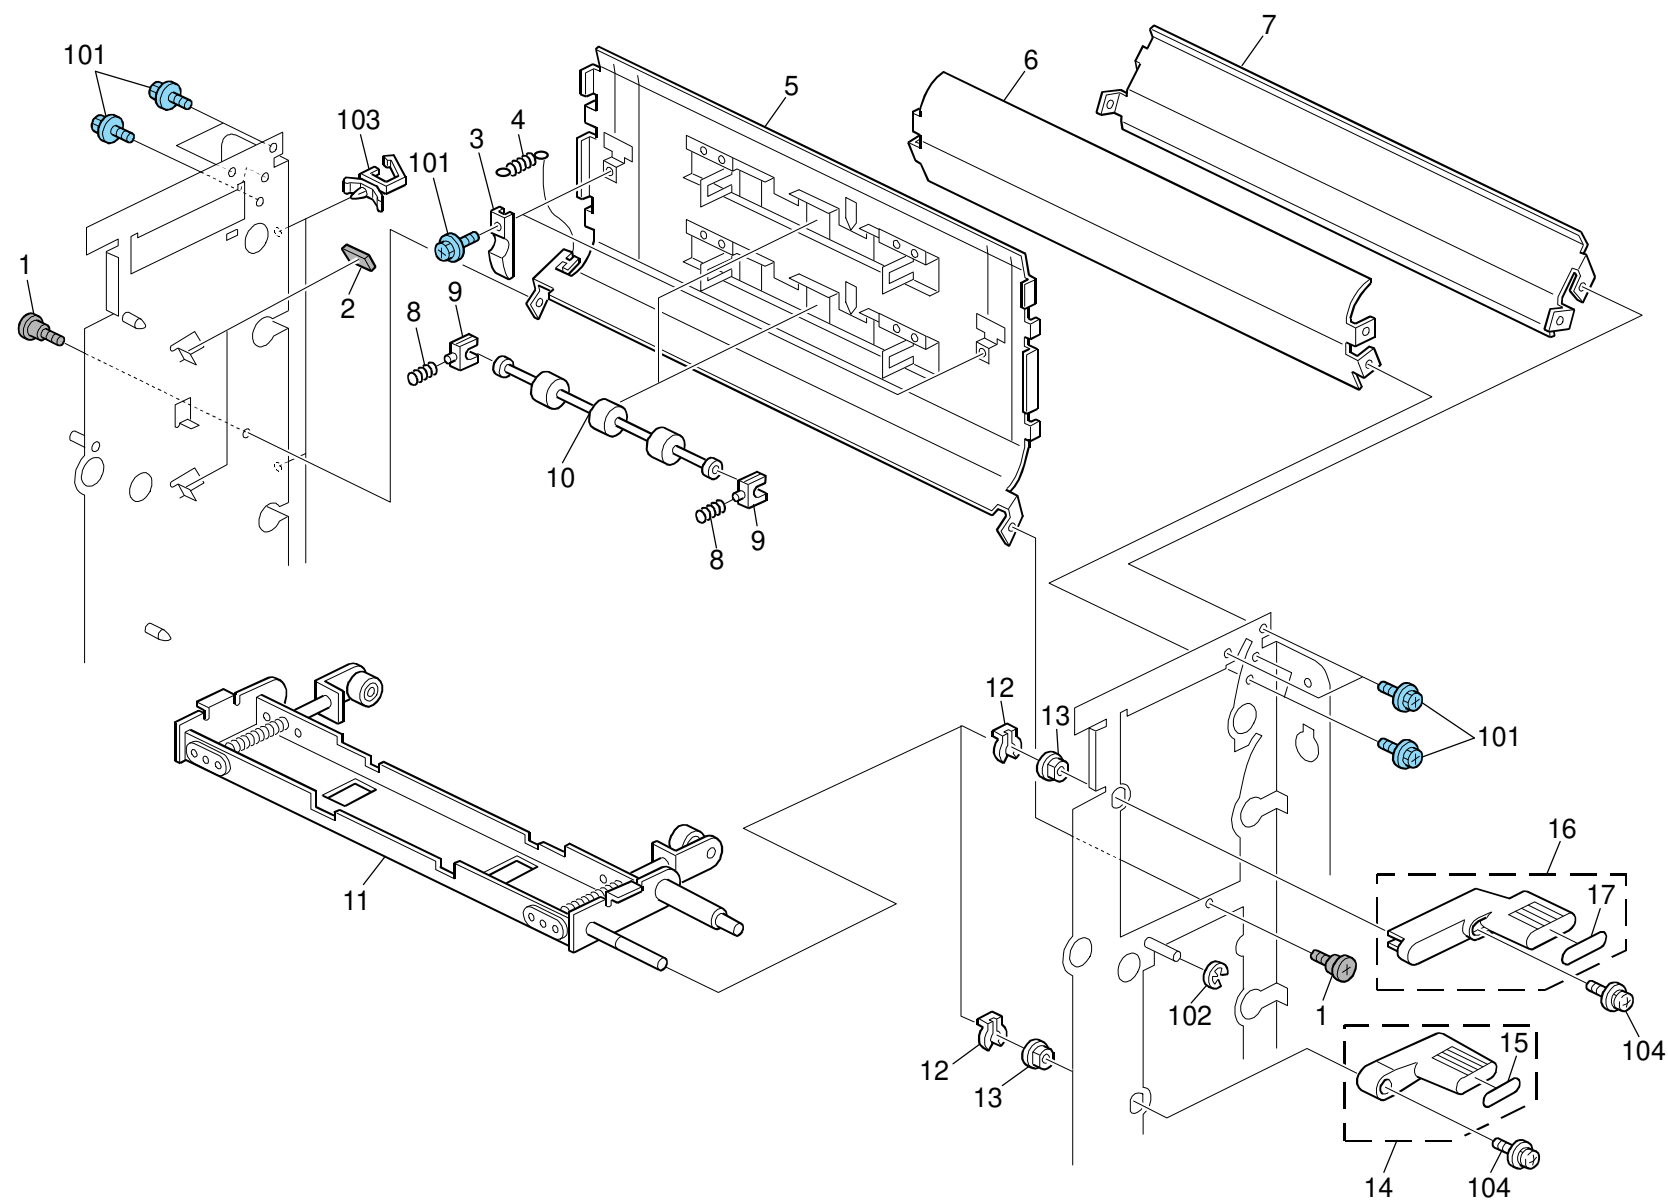


14.Transfer Section 2 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D355 3897	Screw:M4:3M	2
2	D355 3809	Cushion:Stay	2
3	D355 3828	Holder:Stay:Guide Plate	2
4	D355 3857	Tension Spring:Guide Plate:12N	1
5	D355 3832	Guide Plate:Upper:Open And Close:Peen	1
6	D355 3859	Guide Plate:Horizontal Transport:Lower	1
7	D355 3873	Guide Plate:Horizontal Transport:Upper	1
8	AA06 6675	Compression Spring	4
9	AA08 4059	Ball Bearing Holder	4
10	D355 3803	Transport Roller:Driven	2
11	D355 3566	Handle:Ass'y	2
12	5215 2621	Snap Ring - M6	1
13	AA08 2070	Bushing - 8x16x7	1
14	D355 3894	Lever:Misfeed Removal:Ass'y	1
15	D355 3892	Decal:U3:Lever:Operate:Display	1
16	D355 3893	Lever:Misfeed Removal:Ass'y	1
17	D355 3891	Decal:U1:Lever:Operate:Display	

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 4008Q	Tapping Screw - M4x8	
102	0720 0060E	Retaining Ring - M6	
103	1105 0511	Harness Clamp - LWS-0306ZC	
104	0954 4010N	Screw:Polished Round/Spring:M4x10	

15.Transfer Section 3 (D355)

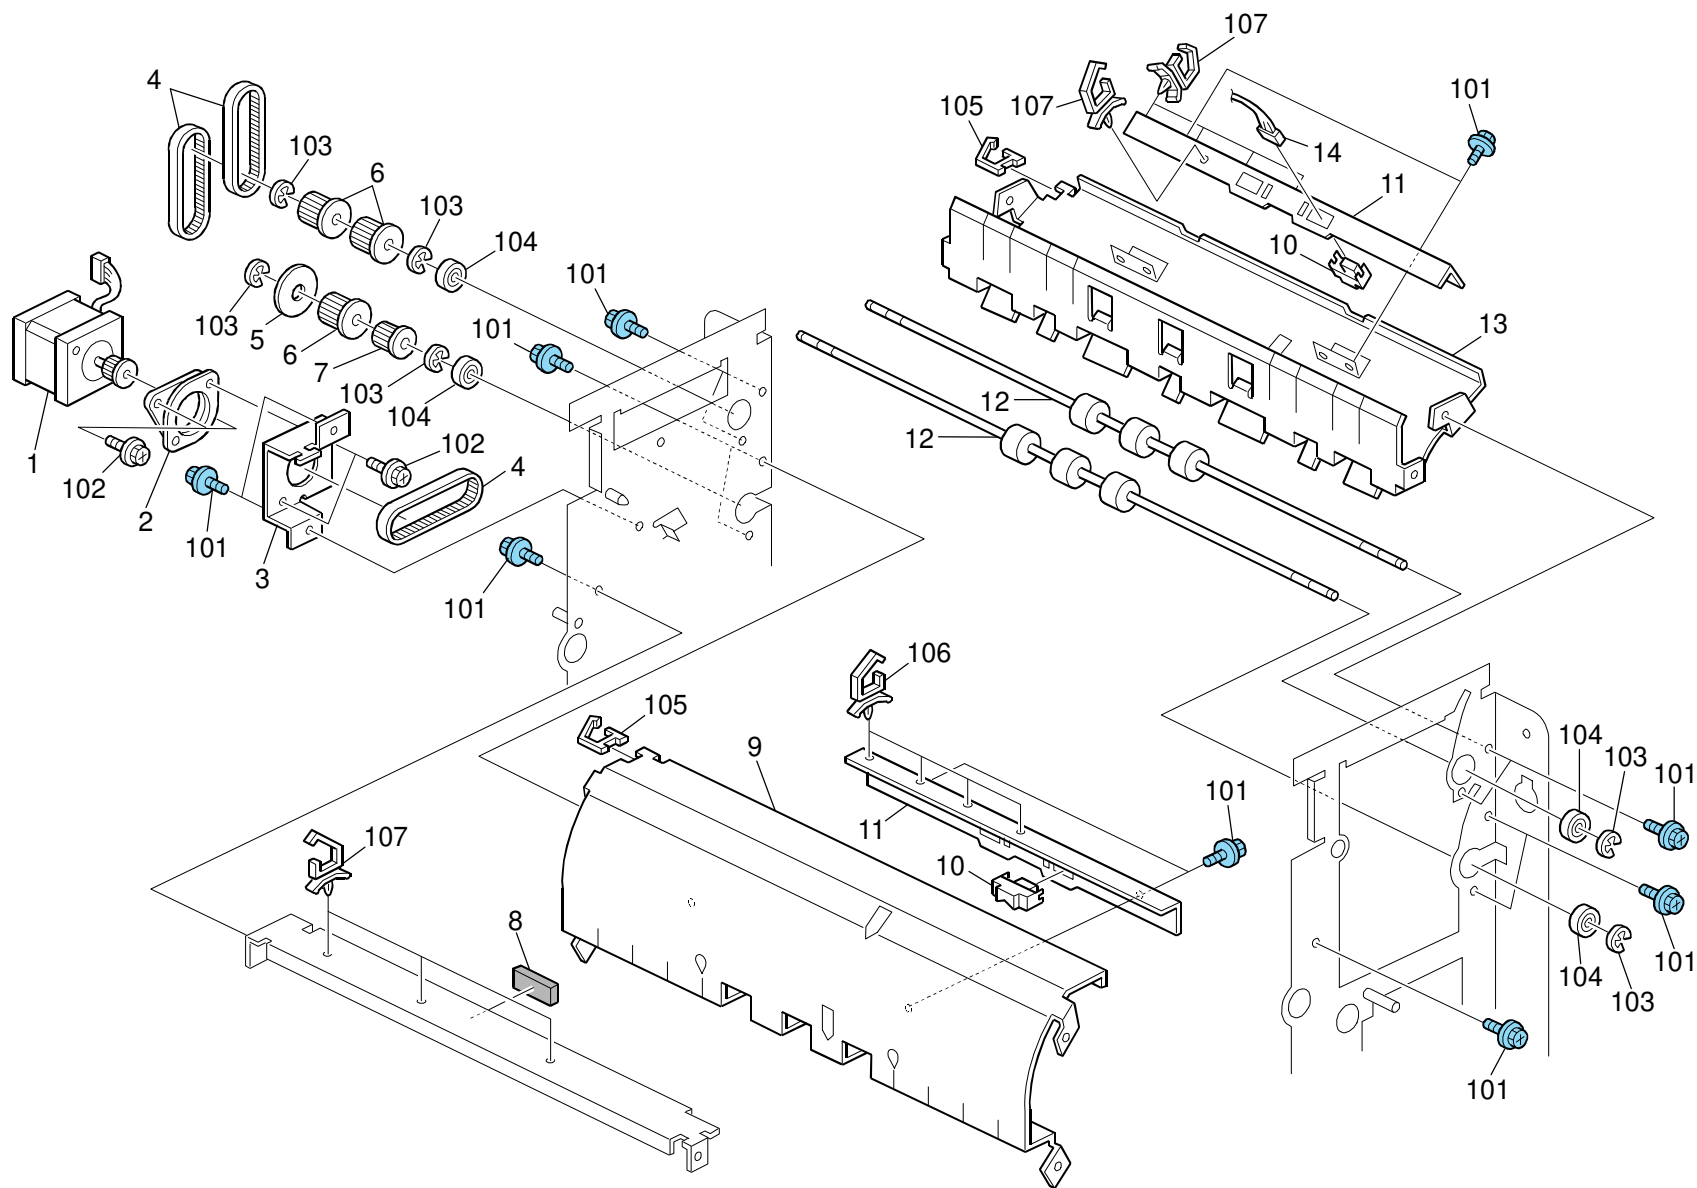


15.Transfer Section 3 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AX04 0158	Stepper Motor DC2.64V 6.3W	1
2	A232 4666	Cushion - Stepper Motor	1
3	D355 3821	Bracket:Stepper Motor	1
4	D355 3874	Timing Belt:60S2M210	3
5	A017 2988	Ring	1
6	B234 6506	Timing Pulley - 30T	3
7	B234 6507	Timing Pulley - 25T	1
8	B832 3909	Bracket Cushion	1
9	D355 3841	Guide Plate:Upper Paper Feed:Lower:Peen	1
10	AW01 0122	Paper Feed Sensor	2
11	D355 3998	Bracket:Sensor:Transport	2
12	D355 3806	Drive Roller:Transport:CW	2
13	D355 3845	Guide Plate:Upper Paper Feed:Upper:Peen	1
14	D355 5312	Harness:Sensor:F1:Vertical Transport:Ass'y	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 4008Q	Tapping Screw - M4x8	
102	0360 3006N	Screw - M3x6	
103	0720 0060E	Retaining Ring - M6	
104	0742 3808	Ball Bearing - 8x16x5	
105	1105 0551	Clamp:LES-0505	
106	1105 0534	Clamp	
107	1105 0511	Harness Clamp - LWS-0306ZC	

16.Transfer Section 4 (D355)

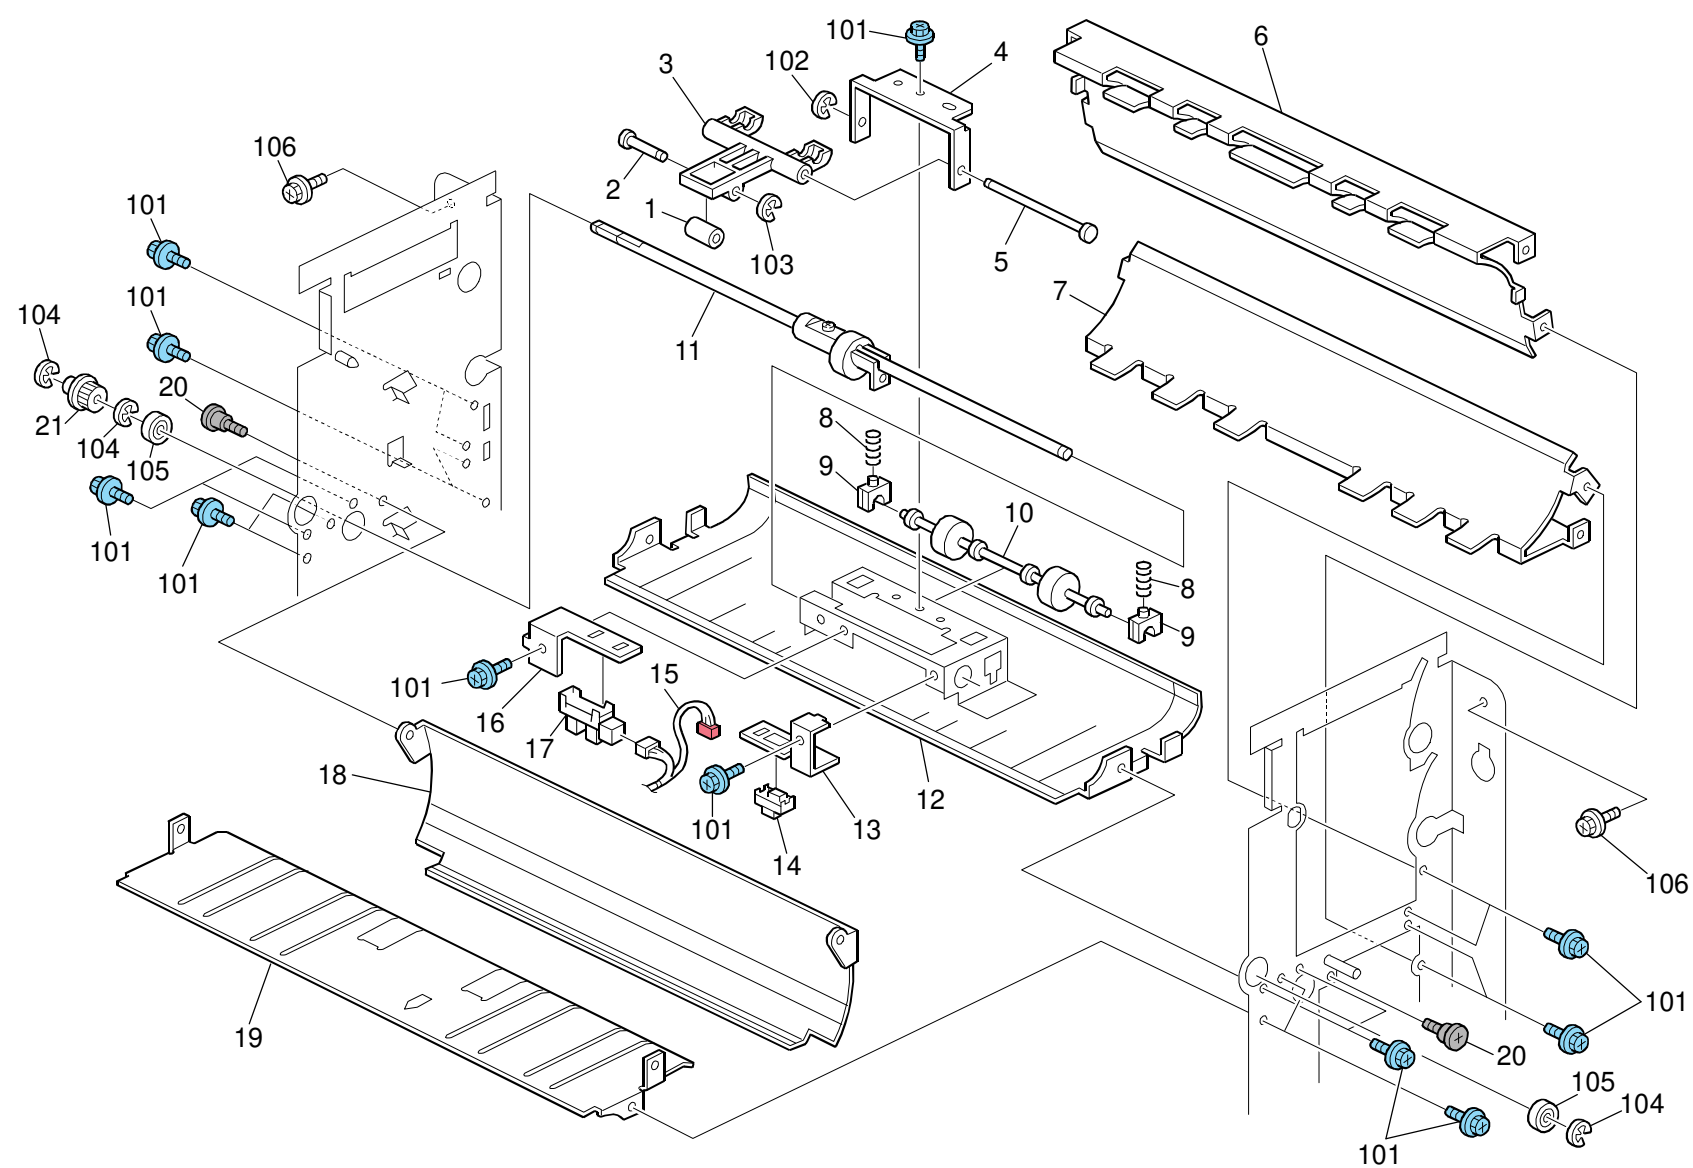


16.Transfer Section 4 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D355 3882	Roller:Pressure Release	1
2	D355 3886	Shaft:Arm:On-Off	1
3	D355 3889	Arm:On-Off	1
4	D355 3883	Bracket:Arm	1
5	B234 4842	Shaft:Arm:On-Off	1
6	D355 3872	Guide Plate:Middle Lower	1
7	D355 3851	Guide Plate:Middle Upper	1
8	B234 4818	Compression Spring	2
9	AA08 4059	Ball Bearing Holder	2
10	D355 3804	Transport Roller:Release:Driven	1
11	D355 3853	Shaft:Cam:Pickup Roller:Ass'y	1
12	D355 3830	Guide Plate:Middle Upper:Exit:Peen	1
13	D355 3836	Bracket:Pressure Release: Photo Refiection Sensor	1
14	AW01 0122	Paper Feed Sensor	1
15	D355 5314	Harness:Sensor:Exit:Ass'y	1
16	D355 3837	Bracket:Pressure Release:Photointerruptor:Flat	1
17	AW02 0145	Photointerruptor:Flat	1
18	D355 3877	Guide Plate:Middle Lower:Open And Close	1
19	D355 3823	Guide Plate:Middle Lower:Exit	1
20	D355 3897	Screw:M4:3M	2
21	B835 2790	Gear - 14Z	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 4008Q	Tapping Screw - M4x8	
102	0720 0030E	Retaining Ring - M3	
103	0720 0020E	Retaining Ring - M2	
104	0720 0040E	Retaining Ring - M4	
105	0741 3906	Bushing - M6	
106	0451 4008N	Tapping Screw:4x8	

17.Transfer Section 5 (D355)

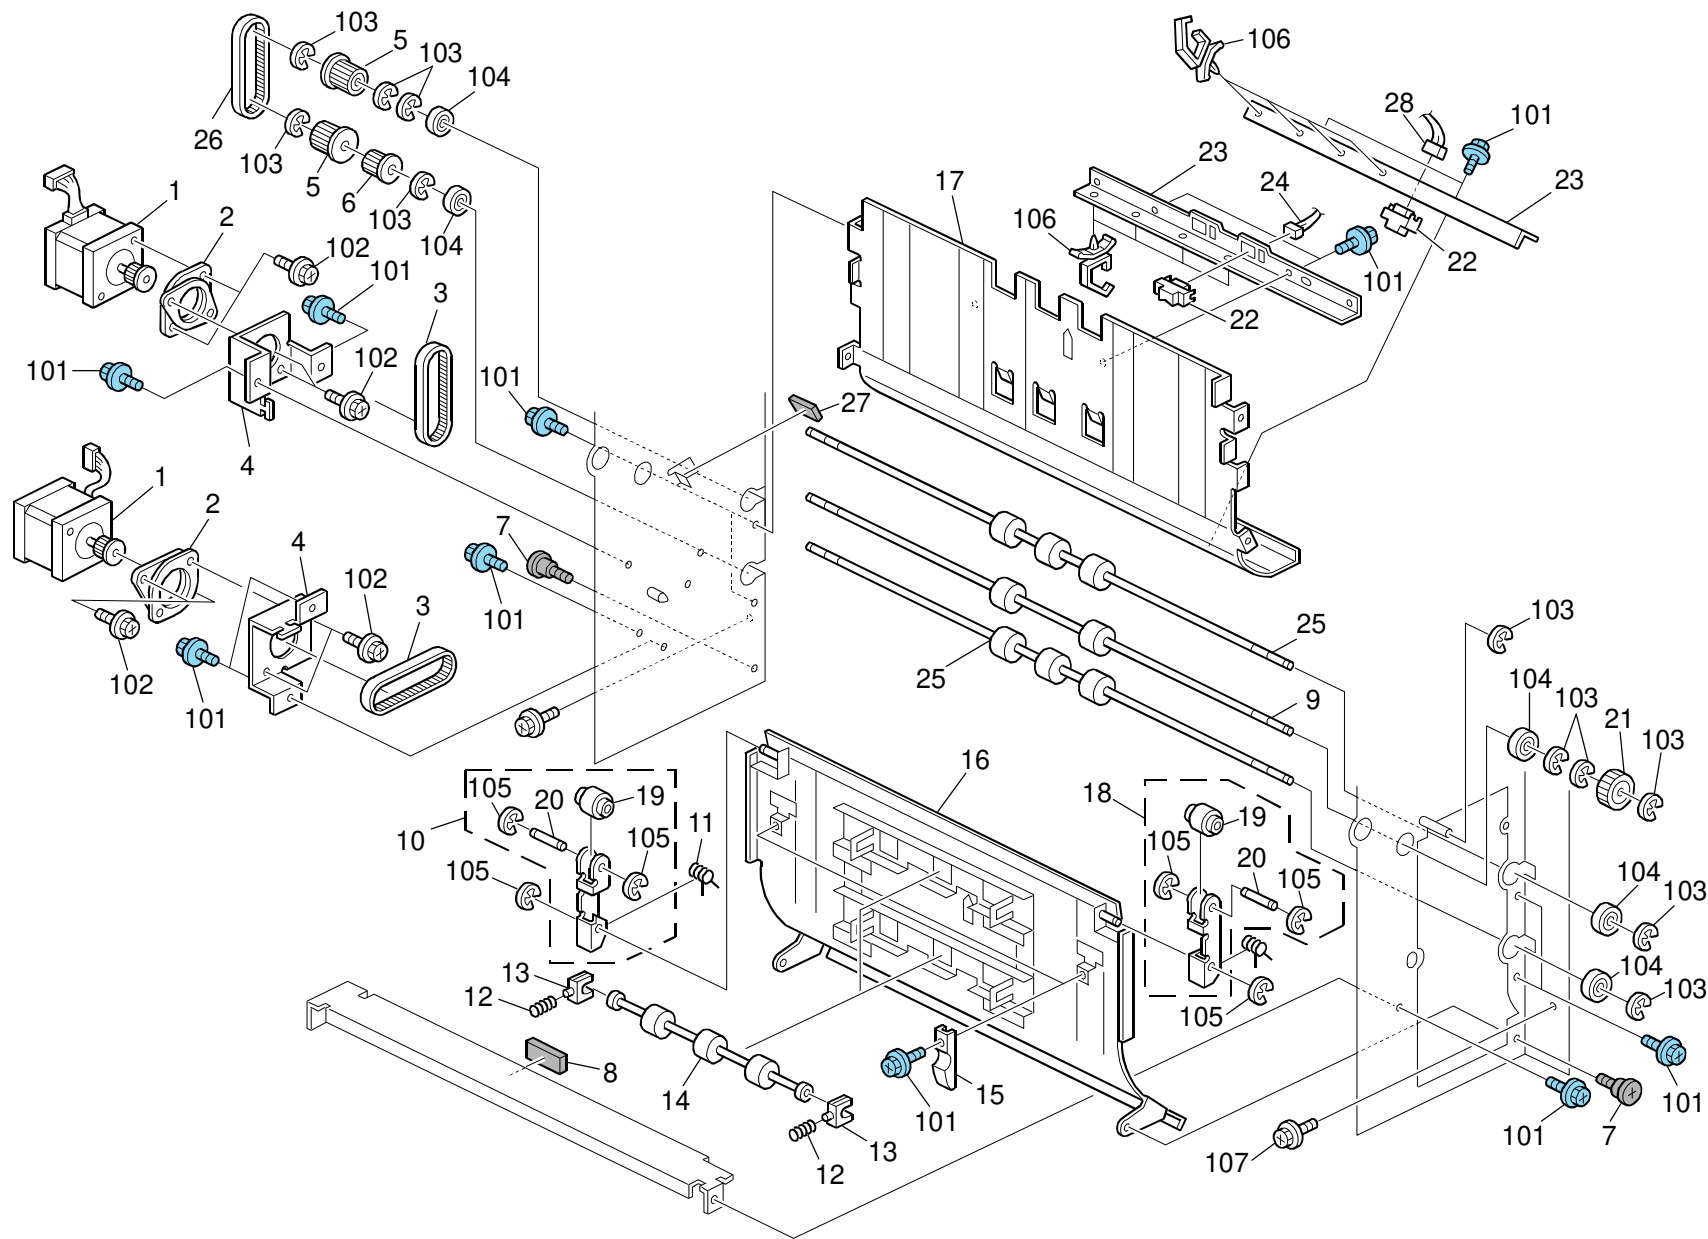


17.Transfer Section 5 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AX04 0158	Stepper Motor DC2.64V 6.3W	2
2	A232 4666	Cushion - Stepper Motor	2
3	D355 3874	Timing Belt:60S2M210	2
4	D355 3821	Bracket:Stepper Motor	2
5	B234 6506	Timing Pulley - 30T	2
6	B234 6507	Timing Pulley - 25T	1
7	D355 3897	Screw:M4:3M	2
8	B832 3909	Bracket Cushion	1
9	D355 3805	Drive Roller:Transport:Exit	1
10	D355 3840	Bracket:Detent:Ass'y	1
11	D355 3858	Torsion Spring:Guide Plate:16N	2
12	AA06 6675	Compression Spring	4
13	AA08 4059	Ball Bearing Holder	4
14	D355 3803	Transport Roller:Driven	2
15	D355 3828	Holder:Stay:Guide Plate	2
16	D355 3850	Guide Plate:Lower Left:Open And Close:Peen	1
17	D355 3842	Guide Plate:Lower Right:Paper Tray: No.2:Peen	1
18	D355 3810	Bracket:Detent:Right:Ass'y	1
19	D355 1196	Roller:Detent	2
20	G363 1105	Detent Roller Shaft	2
21	D355 3817	Gear:Drive:Grip:Z22	1
22	AW01 0122	Paper Feed Sensor	2
23	D355 3998	Bracket:Sensor:Transport	2
24	D355 5313	Harness:Sensor:F2:Vertical Transport:Ass'y	1
25	D355 3807	Drive Roller:Transport:CCW	2
26	D355 3875	Timing Belt:60S2M224	1
27	D355 3809	Cushion:Stay	1
28	D355 5311	Harness:Sensor:Transport:Ass'y	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 4008Q	Tapping Screw - M4x8	
102	0360 3006N	Screw - M3x6	
103	0720 0060E	Retaining Ring - M6	
104	0742 3808	Ball Bearing - 8x16x5	
105	0720 0030E	Retaining Ring - M3	
106	1105 0511	Harness Clamp - LWS-0306ZC	
107	0451 4008N	Tapping Screw:4x8	

18. Drive Section 1 (D355)

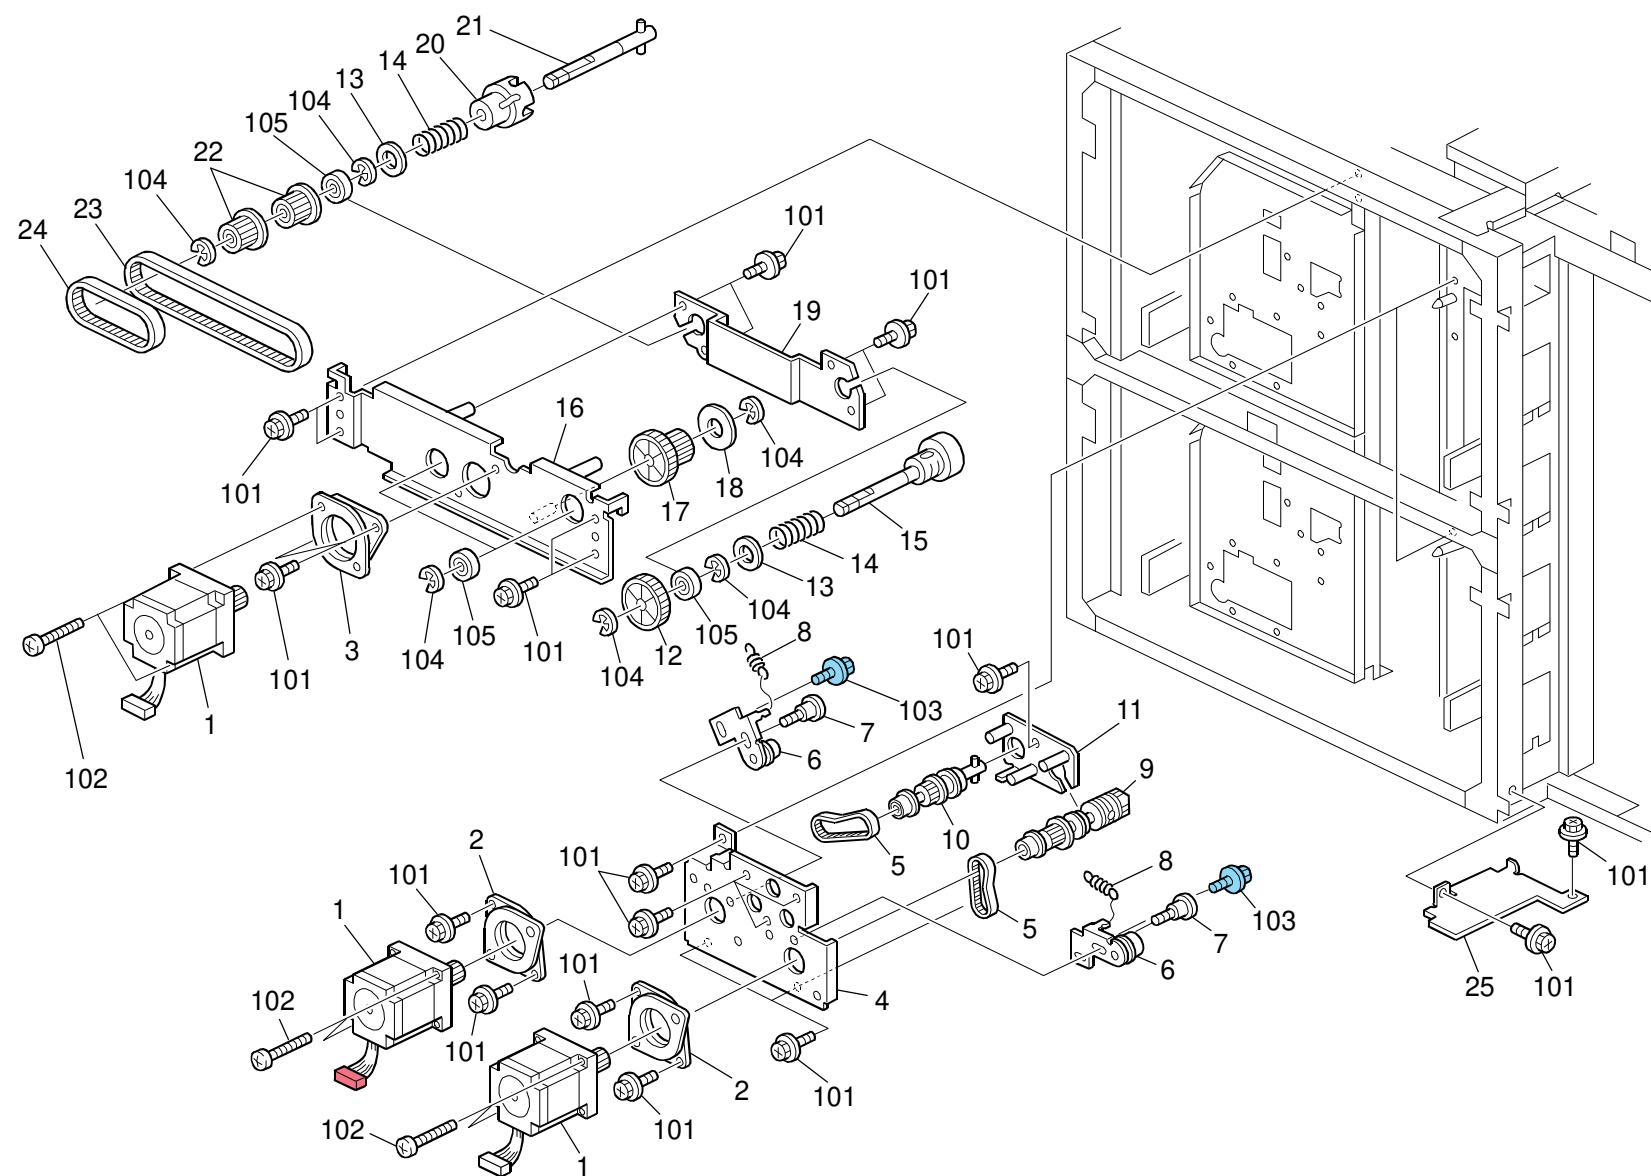


18. Drive Section 1 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AX04 0157	Stepper Motor DC1.68V 6.7W	3
2	B802 1622	Stepper Motor Damper	1
3	AA16 1122	Motor Cushion	2
4	B834 1725	Paper Feed Unit Drive Bracket	1
5	AA04 2550	Timing Belt - S2M138	2
6	B832 1750	Tension Bracket	2
7	AA14 3562	Screw:M4:DIA6x1.2	2
8	B234 6508	Tension Spring	2
9	B834 1730	Grip Drive Shaft	1
10	B834 1740	Shaft	1
11	B834 1718	Bracket	1
12	AB01 3654	Gear - 30Z	1
13	B125 3230	Spacer - 0.3	2
14	D355 1167	Compression Spring:Joint:Drive	2
15	D355 1168	Joint:Horizontal Transport:Drive:Shaft:Ass'y	1
16	D355 1159	Bracket:Horizontal Transport:Drive: Rear:Peen	1
17	B834 3885	Gear/pulley - 31Z/31T	1
18	AA13 2205	Spacer - Timing Belt	1
19	D355 1157	Bracket:Horizontal Transport:Drive:Front	1
20	D355 1137	Joint:Transport Unit	1
21	D355 1136	Shaft:Horizontal Transport:Drive:Ass'y	1
22	B234 6506	Timing Pulley - 30T	2
23	D355 1197	Timing Belt:60S2M286	1
24	B835 2977	Timing Belt - B40S2M150	1
25	D355 1328	Bracket:Cover:Rear Left	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0314 0080N	Philips Pan Head Screw - M4x8	
103	0454 4006Q	Tapping Screw:4x6	
104	0720 0060E	Retaining Ring - M6	
105	0742 3808	Ball Bearing - 8x16x5	

19.Drive Section 2 (D355)

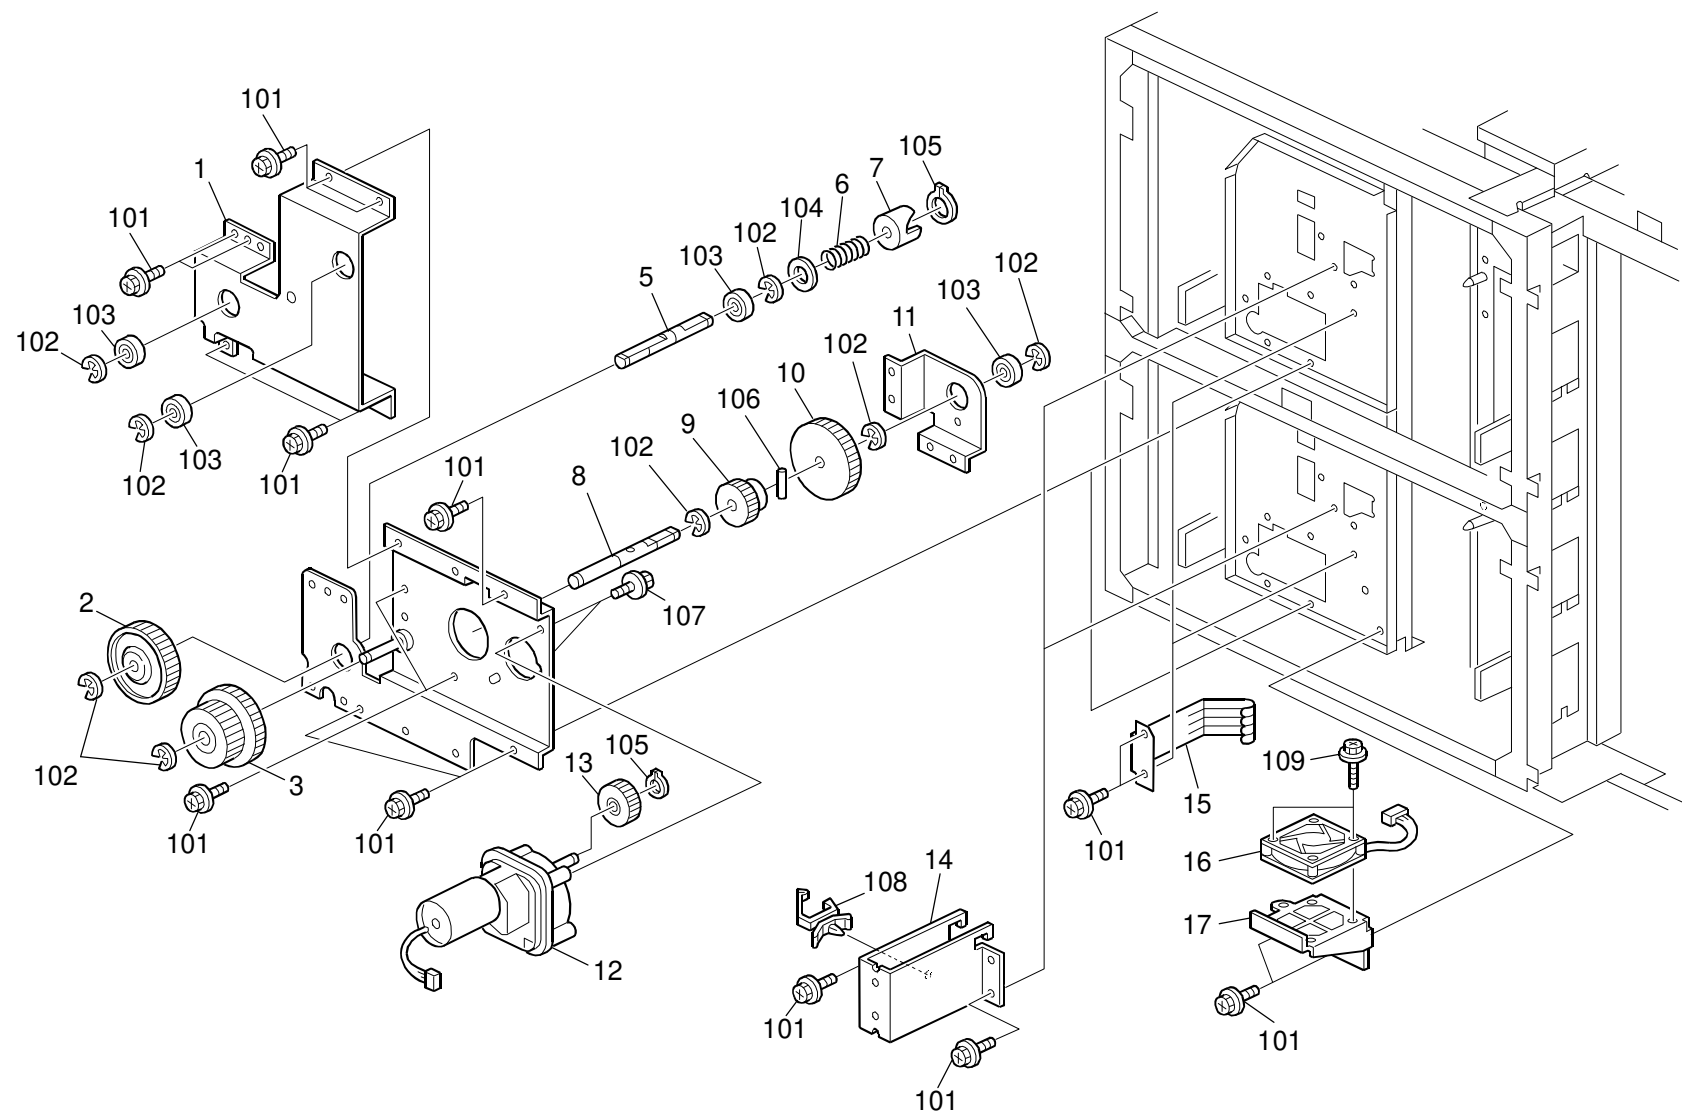


19. Drive Section 2 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D355 4934	Plate:Drive:Rear	2
2	B834 3203	Gear - 48Z	2
3	B834 4547	Gear - 36Z/60Z	2
4	D355 4931	Plate:Drive:Middle	2
5	D355 4548	Shaft:Main:Drive	2
6	B834 4388	Compression Spring	2
7	B303 1185	Metal Joint	2
8	D355 4549	Shaft:Gear:Drive	2
9	B834 3214	Gear - 30Z	2
10	B834 3217	Gear - 60Z	2
11	D355 4933	Plate:Drive:Front	2
12	AX04 0229	DC Motor 24V 21.6W	2
13	D355 3214	Gear - 30Z	2
14	D355 1096	Bracket:Cover:Rear	2
15	D355 4915	Spring Plate:Earth:Tray	2
16	GX64 0024	Fan Motor - DC 3.12W	1
17	D355 1172	Bracket:Cooling Unit	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0720 0060E	Retaining Ring - M6	
103	0742 3808	Ball Bearing - 8x16x5	
104	0708 0080N	Washer-DIA8	
105	0727 0080E	Retaining Ring - M8	
106	0633 0140G	Parallel Pin - 3x14	
107	0451 3006N	Tapping Screw - 3x6	
108	1105 0487	Harness Clamp	
109	0451 4030N	Tapping Screw:M4x30	

20.Electrical Section (D355)

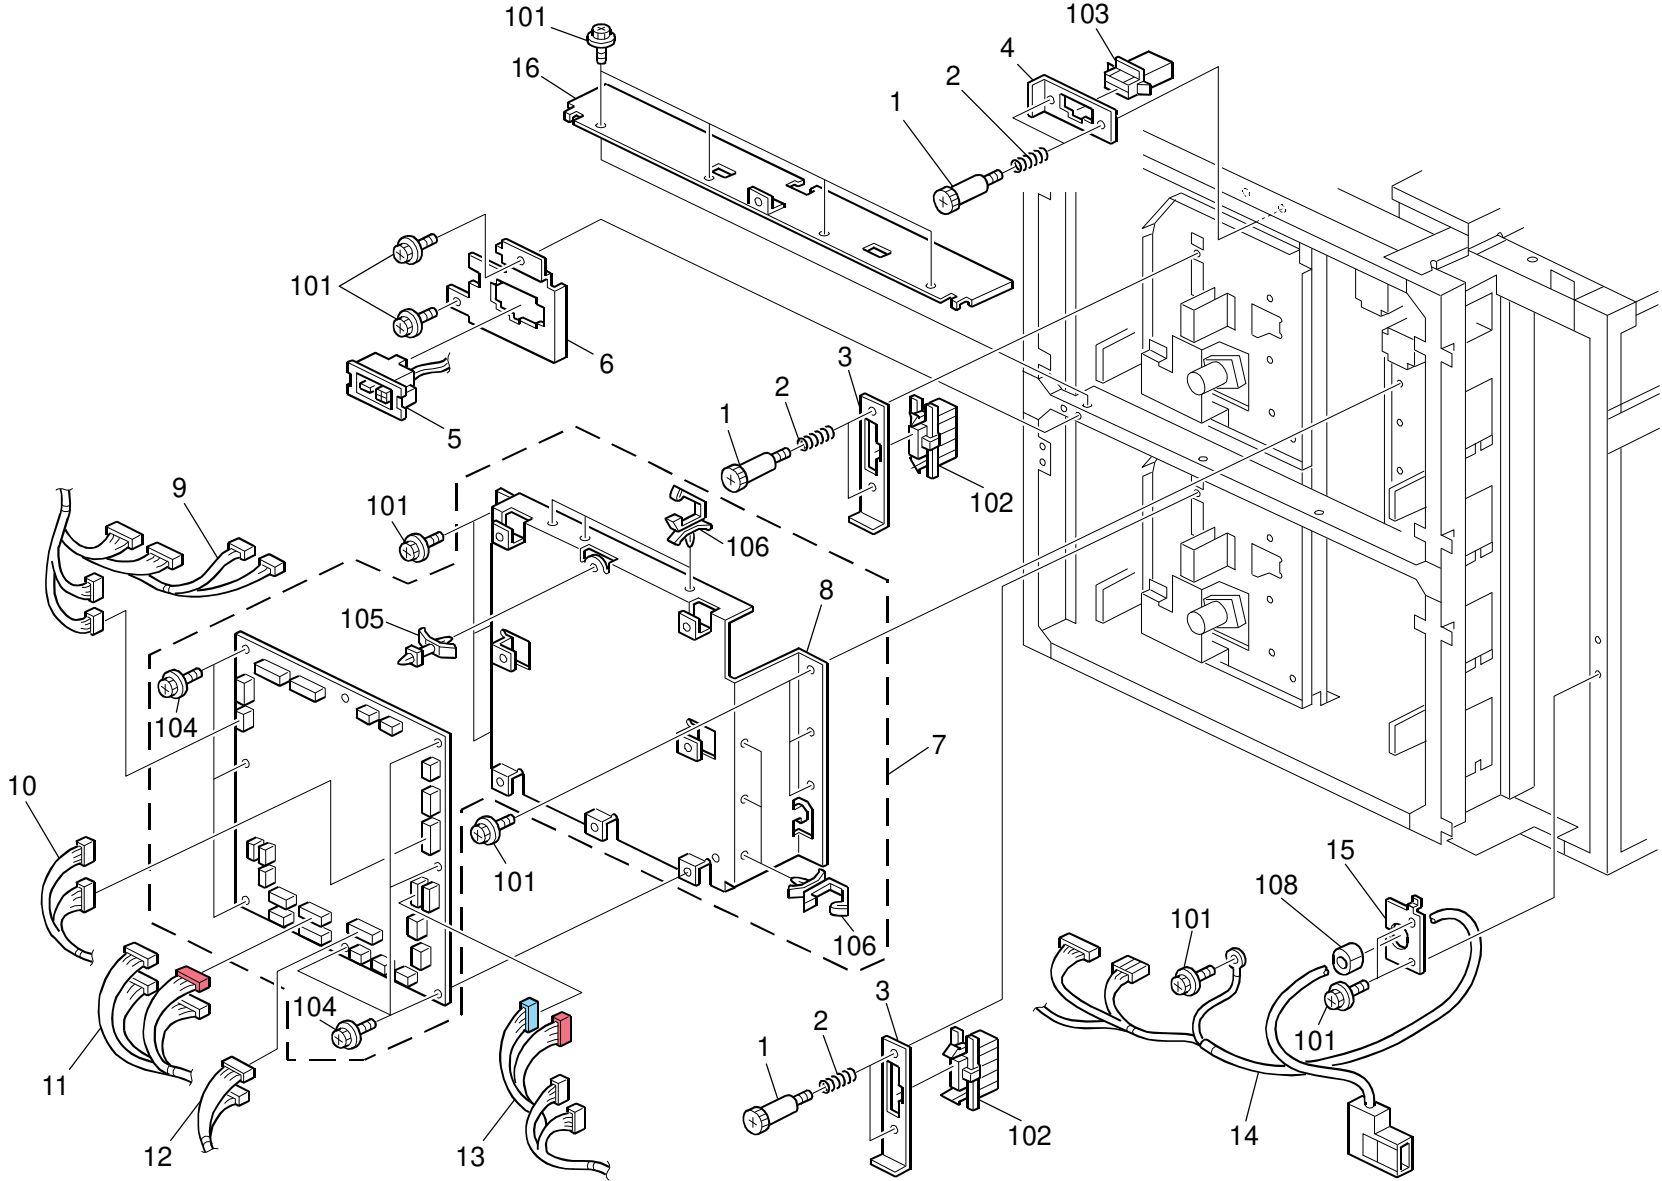


20.Electrical Section (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D355 4784	Screw:Drawer:Connector	6
2	D355 4875	Compression Spring	6
3	B834 4883	Drawer:Connector Bracket - Rear	2
4	D355 1152	Bracket:Drawer:Connector	1
5	D355 5331	Harness:Power Source:Connecting: Large Capacity Tray	1
6	D355 1143	Bracket:Plug:Coupling	1
7	D355 5020	PCB:Ass'y	1
8	D355 1174	Bracket:PCB	1
9	D355 5301	Harness:Main:Drawer:Ass'y	1
10	D355 5303	Harness:Main:Motor:Ass'y	1
11	D355 5302	Harness:Main:Paper Feed:Ass'y	1
12	D355 5304	Harness:Safety Switch:Ass'y	1
13	D355 5318	Harness:Interface:ALE:Ass'y	1
14	D355 5300	Harness:Interface:Main:Ass'y	1
15	D355 1132	Bracket:Power Supply Cord	1
16	D355 1181	Bracket:Harness Clamp:Peen	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	1102 9781	Connector:51405-3919	
103	1102 9430	Connector:Drawer:1612257-7	
104	0451 3006N	Tapping Screw - 3x6	
105	1105 0194	PCB Stud	
106	1105 0488	Harness Clamp	
107	1105 0511	Harness Clamp - LWS-0306ZC	
108	1105 0022	Cord Stopper - AWG 18/16 UL	

21.Frame Section 1 (D355)

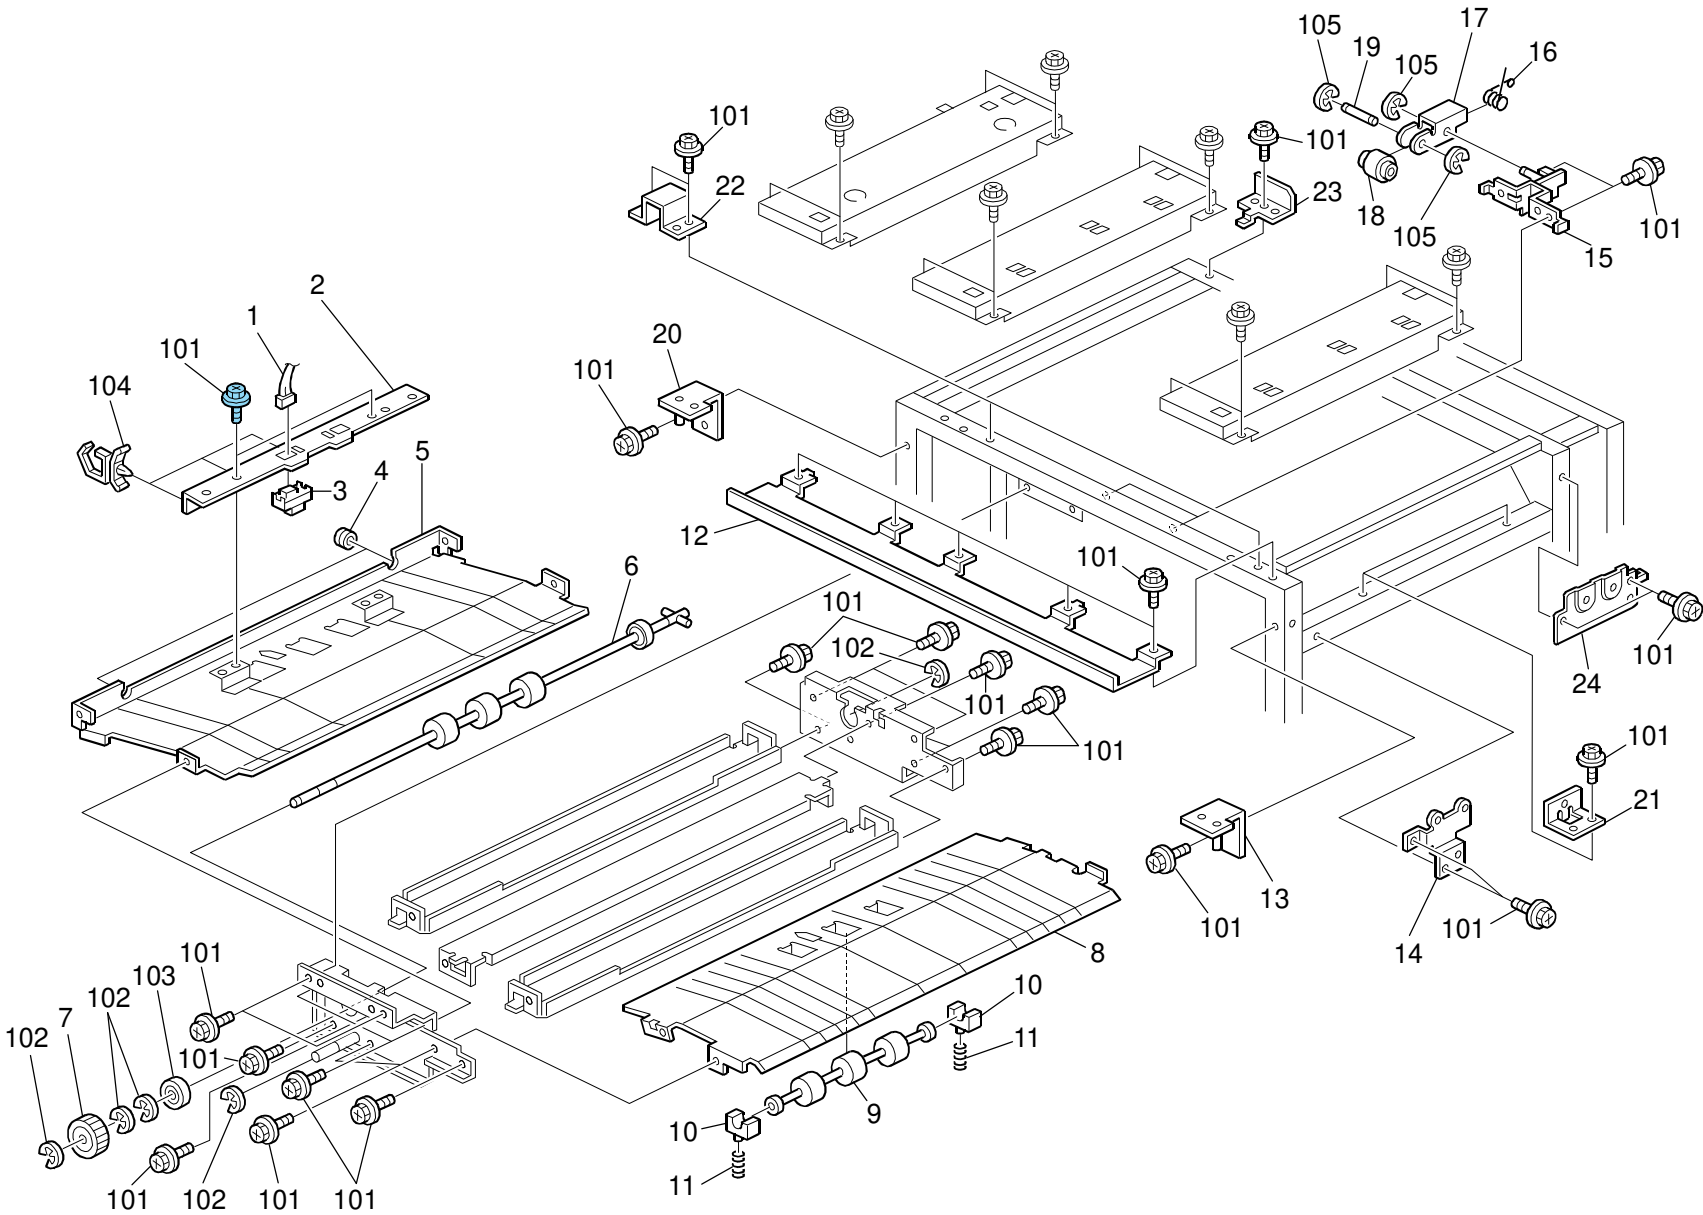


21.Frame Section 1 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D355 5309	Harness:Sensor:Horizontal Transport: Exit:Ass'y	1
2	D355 3998	Bracket:Sensor:Transport	1
3	AW01 0122	Paper Feed Sensor	1
4	J502 3127	Bushing:Stepper Motor	2
5	D355 3993	Guide Plate:Joint Unit:Upper:Peen	1
6	D355 3995	Transport Roller:Joint Unit:Ass'y	1
7	AB01 1478	Gear - 18Z	1
8	D355 3990	Guide Plate:Joint Unit:Lower:Peen	1
9	D355 3803	Transport Roller:Driven	1
10	AA08 4059	Ball Bearing Holder	2
11	AA06 6675	Compression Spring	2
12	D355 1366	Bracket:Fix:Cover:Upper Front	1
13	D355 1341	Hinge:Cover:Front Right:Upper:Peen	1
14	D355 1372	Bracket:Fix:Cover:Extension:Front	1
15	D355 1102	Bracket:Detent:Peen	1
16	D355 1195	Torsion Spring:Detent:8N	1
17	D355 1198	Bracket:Detent	1
18	D355 1196	Roller:Detent	1
19	G363 1105	Detent Roller Shaft	1
20	D355 1334	Hinge:Cover:Front Left:Upper:Peen	1
21	D355 1043	Bracket:Fix:Transport Unit	2
22	D355 1367	Bracket:Fix:Cover:Upper Left	2
23	D355 1059	Bracket:Channel:Rear	1
24	D355 1373	Bracket:Fix:Cover:Extension:Rear	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0720 0060E	Retaining Ring - M6	
103	0742 3808	Ball Bearing - 8x16x5	
104	1105 0511	Harness Clamp - LWS-0306ZC	
105	0720 0030E	Retaining Ring - M3	

22.Frame Section 2 (D355)

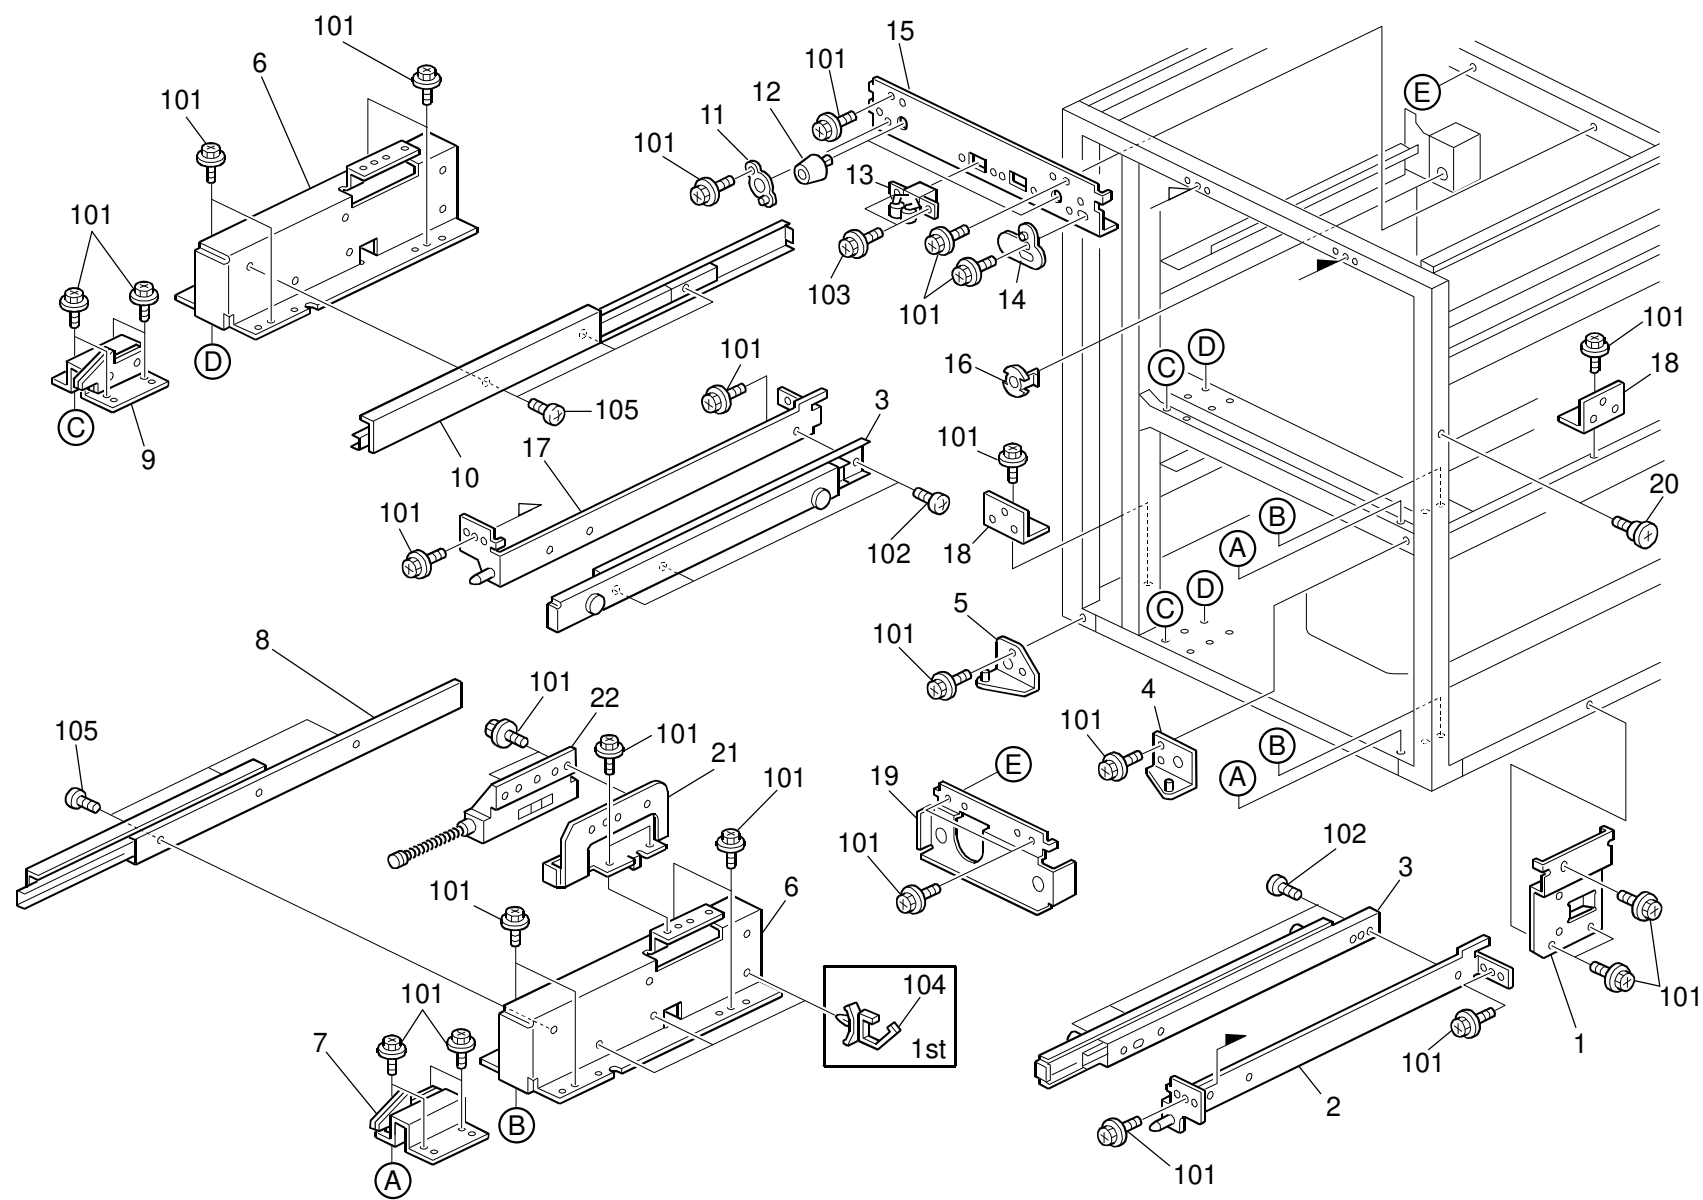


22.Frame Section 2 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B234 7559	Connector Bracket	1
2	D355 1122	Bracket:Slide Rail:Right:Peen	1
3	D355 3958	Slide Rail:Transport Unit	2
4	D355 1342	Hinge:Cover:Front Right:Lower:Peen	1
5	D355 1336	Hinge:Cover:Front Left:Lower:Peen	1
6	D355 1173	Bracket:Slide Rail	4
7	D355 1015	Bracket:Holder:Stopper:Right:Ass'y	2
8	B834 1155	Slide Rail - Right Middle	2
9	D355 1016	Bracket:Holder:Stopper:Left:Ass'y	2
10	B834 1145	Slide Rail - Left Middle	2
11	B512 1078	Positioning Pin:Guide:Rear	1
12	G570 1540	Rubber Foot H=10	2
13	B600 1082	Holder:Paper Tray	1
14	B512 1079	Positioning Pin:Guide:Front	1
15	D355 1164	Bracket:Horizontal Transport Unit: Receive Plate:Rear	1
16	B234 6141	Positioning Sleeve - Inner Back	2
17	D355 1121	Bracket:Slide Rail:Left:Peen	1
18	D355 1058	Bracket:Frame:Base	2
19	D355 1163	Bracket:Joint Unit:Receive Plate:Rear	1
20	AA14 0912	Screw - 8x14x2.8	2
21	D355 1902	Bracket:Tray:Stopper	2
22	D355 1162	Damper:Tray:Lock:Right	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0453 3008N	Binding Self Tapping Screw:3x8	
103	0451 3008N	Tapping Screw - M3x8	
104	1105 0487	Harness Clamp	
105	0453 4008N	Binding Self Tapping Screw:4x8	

23.Frame Section 3 (D355)







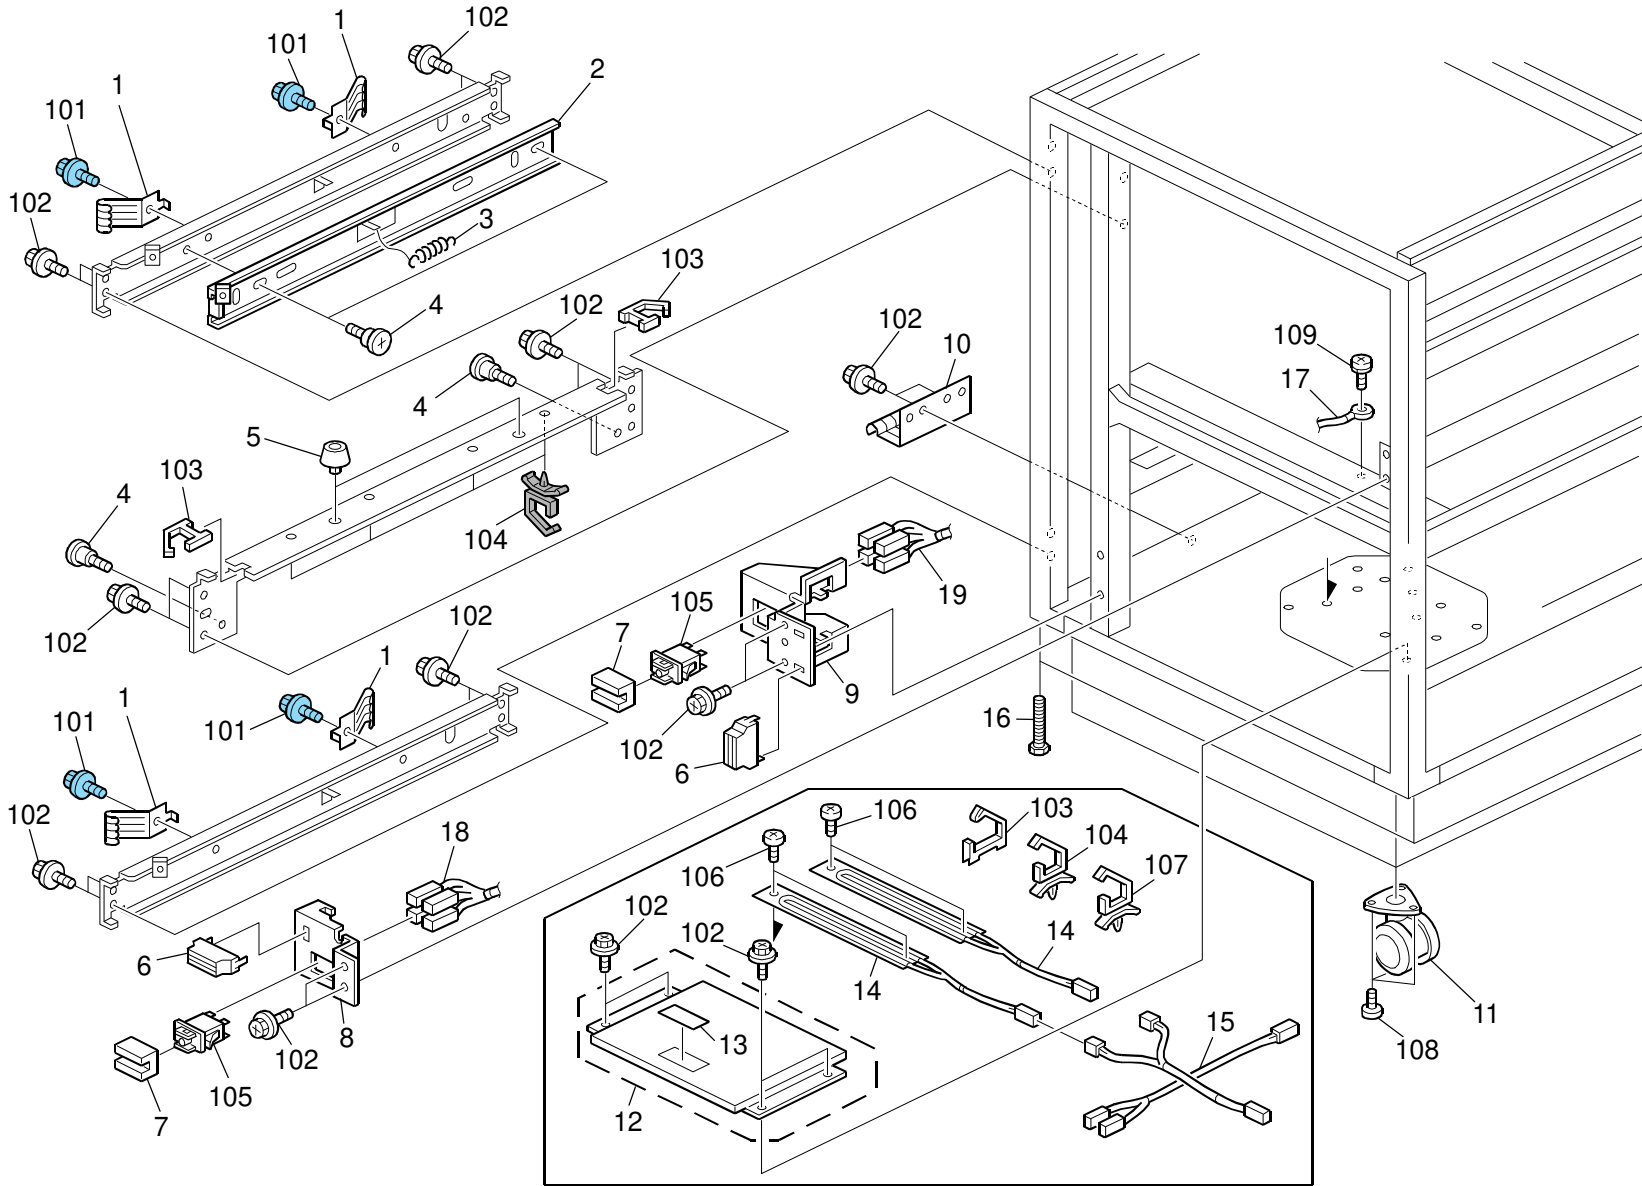


23.Frame Section 3 (D355)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B303 1116	Grounding Plate	4
2	D355 1114	Slider:Lock	1
3	AA06 6671	Lock Spring	1
4	AA14 0912	Screw - 8x14x2.8	4
5	GH01 0007	Rubber Foot - FF-006(P4070)N	2
6	AG07 1012	Magnet Catch:Ass'y	2
7	D355 1325	Cover:Push Switch	2
8	D355 1349	Bracket:Safety Switch:Right	1
9	D355 1347	Bracket:Safety Switch:Left	1
10	D355 1183	Ground Plate:Lower	1
11	AH01 2031	Caster:1470N	6
12	D355 1144	Cover:Dehumidifier:Heater	1
13	GA00 0036	Decal - (High Temperature) Left	1
14	AX40 0012	Heater - 230V/18W	2
15	D355 5340	Harness:Connecting:Heater:Ass'y	1
16	AA14 3798	Hexagonal Bolt:M12x35	4
17	D355 5317	Harness:Earth:Ass'y	1
18	D355 5304	Harness:Safety Switch:Ass'y	1
19	D355 5305	Harness:Safety Switch:Connecting:Exit	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 4008Q	Tapping Screw - M4x8	
102	0451 4008N	Tapping Screw:4x8	
103	1105 0522	Edge Saddle - LES0510	
104	1105 0600	Clamp:LWSM-0306-2M	
105	1204 2382	Interlock Switch - Fail-CA22	
106	0314 0060N	Screw - M4x6	
107	1105 0487	Harness Clamp	
108	0951 6012N	Screw - M6x12	
109	0954 4008N	Screw - M4x8	

24.Decals And Documents (D355)

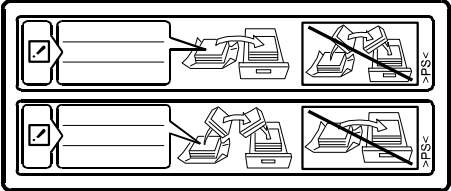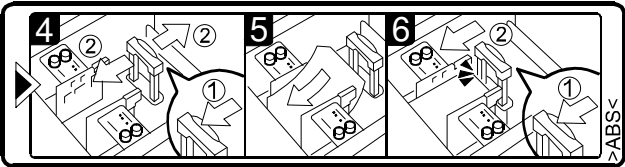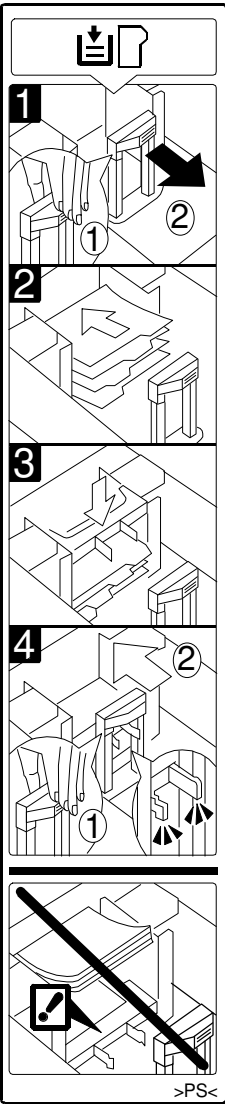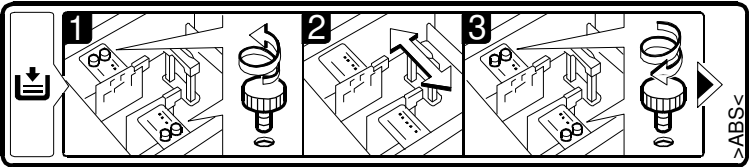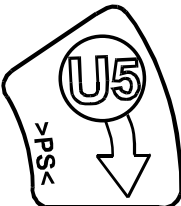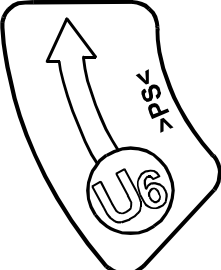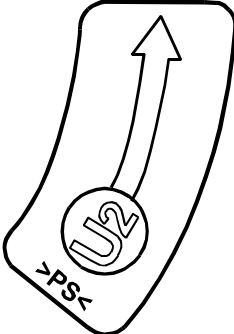1 	2 	4 
3 		
5 	6 	7 

24.Decals And Documents (D355)

8

9

10

11

12

13

14

49

15

>ABS<

U1

16

>ABS<

U3

17

18

25kg/55.1lb

19

>ABS<

3

>ABS<

4

20

A4

A3

5½×8½

8½×14

A4

A3

7¼×10½

8½×14

8½×11

SRA3

10½×7¼

11×17

8½×11

SRA3

8×13

11×17

B4

B5

8¼×13

12×18

B4

B5

8½×11

A4

B5

8½×11

A4

B5

11×8½

A4

A5

11×8½

A4

A5

8½×13

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270

271

272

273

274

275

276

277

278

279

280

281

282

283

284

285

286

287

288

289

290

291

292

293

294

295

296

297

298

299

300

301

302

303

304

305

306

307

308

309

310

311

312

313

314

315

316

317

318

319

320

321

322

323

324

325

326

327

328

329

330

331

332

333

334

335

336

337

338

339

340

341

342

343

344

345

346

347

348

349

350

351

352

353

354

355

356

357

358

359

360

361

362

363

364

365

366

367

368

369

370

371

372

373

374

375

376

377

378

379

380

381

382

383

384

385

386

387

388

389

390

391

392

393

394

395

396

397

398

399

400

401

402

403

404

405

406

407

408

409

410

411

412

413

414

415

416

417

418

419

420

421

422

423

424

425

426

427

428

429

430

431

432

433

434

435

436

437

438

439

440

441

442

443

444

445

446

447

448

449

450

451

452

453

454

455

456

457

458

459

460

461

462

463

464

465

466

467

468

469

470

471

472

473

474

475

476

477

478

479

480

481

482

483

484

485

486

487

488

489

<

51

Parts Index

Parts Index

Part No.	Description	Page and Index No.
D355 1015	Bracket:Holder:Stopper:Right:Ass'y	45 - 7
D355 1016	Bracket:Holder:Stopper:Left:Ass'y	45 - 9
D355 1043	Bracket:Fix:Transport Unit	43 - 21
D355 1058	Bracket:Frame:Base	45 - 18
D355 1059	Bracket:Channel:Rear	43 - 23
D355 1096	Bracket:Cover:Rear	39 - 14
D355 1102	Bracket:Detent:Peen	43 - 15
D355 1114	Slider:Lock	47 - 2
D355 1121	Bracket:Slide Rail:Left:Peen	45 - 17
D355 1122	Bracket:Slide Rail:Right:Peen	45 - 2
D355 1132	Bracket:Power Supply Cord	41 - 15
D355 1136	Shaft:Horizontal Transport:Drive:Ass'y	37 - 21
D355 1137	Joint:Transport Unit	37 - 20
D355 1143	Bracket:Plug:Coupling	41 - 6
D355 1144	Cover:Dehumidifier:Heater	47 - 12
D355 1152	Bracket:Drawer:Connector	41 - 4
D355 1157	Bracket:Horizontal Transport:Drive:Front	37 - 19
D355 1159	Bracket:Horizontal Transport:Drive:	37 - 16
D355 1162	Damper:Tray:Lock:Right	45 - 22
D355 1163	Bracket:Joint Unit:Receive Plate:Rear	45 - 19
D355 1164	Bracket:Horizontal Transport Unit:Receive Plate:Rear	45 - 15
D355 1167	Compression Spring:Joint:Drive	37 - 14
D355 1168	Joint:Horizontal Transport:Drive:Shaft:Ass'y	37 - 15
D355 1172	Bracket:Cooling Unit	39 - 17
D355 1173	Bracket:Slide Rail	45 - 6
D355 1174	Bracket:PCB	41 - 8
D355 1181	Bracket:Harness Clamp:Peen	41 - 16
D355 1183	Ground Plate:Lower	47 - 10
D355 1185	Bracket:Fix:Cover:Right Front	5 - 23
D355 1195	Torsion Spring:Detent:8N	43 - 16
D355 1196	Roller:Detent	35 - 19
D355 1196	Roller:Detent	43 - 18
D355 1197	Timing Belt:60S2M286	37 - 23
D355 1198	Bracket:Detent	43 - 17
D355 1303	Inner Cover:Middle Upper	5 - 7

Part No.	Description	Page and Index No.
D355 1305	Inner Cover:Left Lower	5 - 20
D355 1307	Decal:Knob:Left Middle	5 - 22
D355 1307	Decal:Knob:Left Middle	51 - 5
D355 1308	Decal:Knob:Left Upper	51 - 6
D355 1308	Decal:Knob:Left Upper	5 - 6
D355 1313	Decal:Knob:Paper Feed Unit:Upper	5 - 18
D355 1313	Decal:Knob:Paper Feed Unit:Upper	51 - 7
D355 1314	Decal:Knob:Transport:Middle Upper	5 - 17
D355 1314	Decal:Knob:Transport:Middle Upper	51 - 8
D355 1315	Decal:Knob:Paper Feed Unit:Lower	5 - 15
D355 1315	Decal:Knob:Paper Feed Unit:Lower	51 - 9
D355 1316	Inner Cover:Left Middle:Ass'y	5 - 21
D355 1317	Inner Cover:Left Upper:Ass'y	5 - 5
D355 1318	Inner Cover:Paper Feed:Upper:Ass'y	5 - 16
D355 1319	Inner Cover:Paper Feed:Lower:Ass'y	5 - 14
D355 1321	Cover:Right Upper:Ass'y	3 - 9
D355 1323	Cover:Right Lower:Ass'y	3 - 13
D355 1325	Cover:Push Switch	47 - 7
D355 1326	Cover:Rear Middle	3 - 7
D355 1327	Cover:Rear Left	3 - 3
D355 1328	Bracket:Cover:Rear Left	37 - 25
D355 1331	Cover:Front Left:Open And Close:Ass'y	5 - 1
D355 1334	Hinge:Cover:Front Left:Upper:Peen	43 - 20
D355 1336	Hinge:Cover:Front Left:Lower:Peen	45 - 5
D355 1338	Cover:Front Right:Open And Close:Ass'y	5 - 12
D355 1341	Hinge:Cover:Front Right:Upper:Peen	43 - 13
D355 1342	Hinge:Cover:Front Right:Lower:Peen	45 - 4
D355 1345	Cover:Front Right:Lower	3 - 27
D355 1347	Bracket:Safety Switch:Left	47 - 9
D355 1349	Bracket:Safety Switch:Right	47 - 8
D355 1350	Decal:Misfeed Removal:Left	51 - 10
D355 1350	Decal:Misfeed Removal:Left	5 - 2
D355 1352	Decal:Misfeed Removal:Horizontal:Transport	5 - 13
D355 1352	Decal:Misfeed Removal:Horizontal:Transport	51 - 11
D355 1356	Cover:Upper Left:Ass'y	5 - 9

Part No.	Description	Page and Index No.
D355 1361	Cover:Upper Front:Printer	3 - 1
D355 1363	Cover:Upper Right	5 - 11
D355 1364	Cover:Upper Rear	3 - 5
D355 1365	Cover:Upper Left:Rear	3 - 20
D355 1366	Bracket:Fix:Cover:Upper Front	43 - 12
D355 1367	Bracket:Fix:Cover:Upper Left	43 - 22
D355 1371	Cover:Upper:Extension	3 - 19
D355 1372	Bracket:Fix:Cover:Extension:Front	43 - 14
D355 1373	Bracket:Fix:Cover:Extension:Rear	43 - 24
D355 1378	Bracket:Fix:Cover:Rear Right	3 - 6
D355 1379	Bracket:Support:Cover:Upper Rear:Left	3 - 4
D355 1384	Grip:Paper Tray:Ass'y	7 - 12
D355 1387	Cover:Paper Tray:Ass'y	7 - 18
D355 1394	Decal:Side Fence:Scale:Front	9 - 13
D355 1394	Decal:Side Fence:Scale:Front	51 - 12
D355 1395	Decal:Side Fence:Scale:Rear	51 - 13
D355 1395	Decal:Side Fence:Scale:Rear	11 - 9
D355 1902	Bracket:Tray:Stopper	45 - 21
D355 2501	Paper Feed Unit:Ass'y	23 - *
D355 2551	Bracket:Reverse:Release	25 - 6
D355 2554	Hook:Reverse:Pressure	25 - 9
D355 2556	Lever:Reverse:Pressure:Swivel	25 - 11
D355 2559	Tension Spring:Reverse	25 - 8
D355 2563	Compression Spring:Reverse:	25 - 10
D355 2571	Paper Feed Roller:Guard	23 - 23
D355 2577	Bracket:Sensor:Paper Feed	23 - 7
D355 2674	Decal - Paper Volume	51 - 14
D355 2674	Decal - Paper Volume	11 - 26
D355 2719	Separation Plate:Drive Unit	17 - 7
D355 2777	Plate:Auxiliary:Small:Adhesion	11 - 25
D355 2784	End Fence:Tab:Ass'y	3 - 24
D355 3090	Transport Unit:Horizontal:Exterior:Ass'y	5 - 19
D355 3214	Gear - 30Z	39 - 13
D355 3232	Bracket:Timing Belt:Rear	13 - 3
D355 3306	Bracket:Side Fence:Lower Front	15 - 15

Part No.	Description	Page and Index No.
D355 3365	Duct:Upper Front:Blower:Ass'y	9 - 14
D355 3372	Duct:Lower:Blower	9 - 16
D355 3372	Duct:Lower:Blower	11 - 5
D355 3375	Duct:Upper Rear:Blower:Ass'y	11 - 4
D355 3459	Guard:Blower:Front	9 - 2
D355 3461	Guard:Blower:Rear	11 - 7
D355 3462	Cover:Blower:Harness	9 - 1
D355 3566	Handle:Ass'y	29 - 11
D355 3803	Transport Roller:Driven	29 - 10
D355 3803	Transport Roller:Driven	43 - 9
D355 3803	Transport Roller:Driven	27 - 10
D355 3803	Transport Roller:Driven	35 - 14
D355 3804	Transport Roller:Release:Driven	33 - 10
D355 3805	Drive Roller:Transport:Exit	35 - 9
D355 3806	Drive Roller:Transport:CW	31 - 12
D355 3806	Drive Roller:Transport:CW	27 - 7
D355 3807	Drive Roller:Transport:CCW	35 - 25
D355 3809	Cushion:Stay	29 - 2
D355 3809	Cushion:Stay	35 - 27
D355 3810	Bracket:Detent:Right:Ass'y	35 - 18
D355 3817	Gear:Drive:Grip:Z22	35 - 21
D355 3817	Gear:Drive:Grip:Z22	27 - 11
D355 3821	Bracket:Stepper Motor	35 - 4
D355 3821	Bracket:Stepper Motor	31 - 3
D355 3823	Guide Plate:Middle Lower:Exit	33 - 19
D355 3828	Holder:Stay:Guide Plate	35 - 15
D355 3828	Holder:Stay:Guide Plate	29 - 3
D355 3829	Bracket:Stepper Motor:Peen	27 - 17
D355 3830	Guide Plate:Middle Upper:Exit:Peen	33 - 12
D355 3832	Guide Plate:Upper:Open And Close:Peen	29 - 5
D355 3836	Bracket:Pressure Release:Photo Refiection Sensor	33 - 13
D355 3837	Bracket:Pressure Release:Photointerruptor:Flat	33 - 16
D355 3840	Bracket:Detent:Ass'y	35 - 10
D355 3841	Guide Plate:Upper Paper Feed:Lower:Peen	31 - 9
D355 3842	Guide Plate:Lower Right:Paper Tray:	35 - 17

Part No.	Description	Page and Index No.
D355 3845	Guide Plate:Upper Paper Feed:Upper:Peen	31 - 13
D355 3846	Knob:Misfeed Removal	5 - 4
D355 3850	Guide Plate:Lower Left:Open And Close:Peen	35 - 16
D355 3851	Guide Plate:Middle Upper	33 - 7
D355 3853	Shaft:Cam:Pickup Roller:Ass'y	33 - 11
D355 3857	Tension Spring:Guide Plate:12N	29 - 4
D355 3858	Torsion Spring:Guide Plate:16N	35 - 11
D355 3859	Guide Plate:Horizontal Transport:Lower	29 - 6
D355 3861	Guide Plate:Left:Manual Feed:Peen	27 - 5
D355 3864	Guide Plate:Manual Feed:Right	27 - 6
D355 3870	Bracket:Tension:Manual Feed Unit:	27 - 1
D355 3872	Guide Plate:Middle Lower	33 - 6
D355 3873	Guide Plate:Horizontal Transport:Upper	29 - 7
D355 3874	Timing Belt:60S2M210	31 - 4
D355 3874	Timing Belt:60S2M210	35 - 3
D355 3875	Timing Belt:60S2M224	35 - 26
D355 3877	Guide Plate:Middle Lower:Open And Close	33 - 18
D355 3882	Roller:Pressure Release	33 - 1
D355 3883	Bracket:Arm	33 - 4
D355 3886	Shaft:Arm:On-Off	33 - 2
D355 3889	Arm:On-Off	33 - 3
D355 3891	Decal:U1:Lever:Operate:Display	51 - 15
D355 3891	Decal:U1:Lever:Operate:Display	29 - 17
D355 3892	Decal:U3:Lever:Operate:Display	51 - 16
D355 3892	Decal:U3:Lever:Operate:Display	29 - 15
D355 3893	Lever:Misfeed Removal:Ass'y	29 - 16
D355 3894	Lever:Misfeed Removal:Ass'y	29 - 14
D355 3897	Screw:M4:3M	29 - 1
D355 3897	Screw:M4:3M	35 - 7
D355 3897	Screw:M4:3M	33 - 20
D355 3958	Slide Rail:Transport Unit	45 - 3
D355 3990	Guide Plate:Joint Unit:Lower:Peen	43 - 8
D355 3993	Guide Plate:Joint Unit:Upper:Peen	43 - 5
D355 3995	Transport Roller:Joint Unit:Ass'y	43 - 6
D355 3998	Bracket:Sensor:Transport	27 - 12

Part No.	Description	Page and Index No.
D355 3998	Bracket:Sensor:Transport	35 - 23
D355 3998	Bracket:Sensor:Transport	31 - 11
D355 3998	Bracket:Sensor:Transport	43 - 2
D355 4140	Gear - 24Z	19 - 10
D355 4531	Shaft:Main:Drive	21 - 12
D355 4534	Holder:Driven:Rear	21 - 13
D355 4548	Shaft:Main:Drive	39 - 5
D355 4549	Shaft:Gear:Drive	39 - 8
D355 4563	Drive Bracket - Rear Lower	21 - 11
D355 4564	Bracket:Drive:Front Lower	19 - 11
D355 4568	Feeler:Paper Volume Sensor	13 - 1
D355 4572	Decal:Paper Tray:Warning	51 - 17
D355 4572	Decal:Paper Tray:Warning	15 - 16
D355 4574	Decal:Paper Tray:Caution	51 - 18
D355 4574	Decal:Paper Tray:Caution	15 - 17
D355 4575	Decal:Paper Tray:LCT	3 - 15
D355 4575	Decal:Paper Tray:LCT	51 - 19
D355 4578	Guide:End Fence:Right	13 - 11
D355 4579	Guide:End Fence:Left	13 - 10
D355 4587	Bracket:End Fence	17 - 13
D355 4589	Bracket:Paper Size Sensor	17 - 15
D355 4591	Grip:End Fence	13 - 13
D355 4593	Rack:Base:End Fence	17 - 1
D355 4596	Bracket:Paper Volume Sensor	21 - 8
D355 4597	Shaft:End Fence:Coupling	17 - 12
D355 4598	Roller:Slider	17 - 16
D355 4620	Tray Bottom Plate:Adhesion	13 - 8
D355 4621	Tray Bottom Plate - Support	11 - 27
D355 4630	Tray Bottom Plate - Support	9 - 20
D355 4652	Supporting Plate:Side Fence:Front	9 - 22
D355 4654	Cover:Side Fence	9 - 23
D355 4654	Cover:Side Fence	11 - 30
D355 4656	Side Fence:Front	9 - 18
D355 4662	Supporting Plate:Side Fence:Rear	11 - 2
D355 4664	Side Fence:Rear	11 - 1

Part No.	Description	Page and Index No.
D355 4784	Screw:Drawer:Connector	41 - 1
D355 4866	Ball Bearing:Slide:DIA6	15 - 12
D355 4875	Compression Spring	41 - 2
D355 4915	Spring Plate:Earth:Tray	39 - 15
D355 4931	Plate:Drive:Middle	39 - 4
D355 4933	Plate:Drive:Front	39 - 11
D355 4934	Plate:Drive:Rear	39 - 1
D355 5020	PCB:Ass'y	41 - 7
D355 5300	Harness:Interface:Main:Ass'y	41 - 14
D355 5301	Harness:Main:Drawer:Ass'y	41 - 9
D355 5302	Harness:Main:Paper Feed:Ass'y	41 - 11
D355 5303	Harness:Main:Motor:Ass'y	41 - 10
D355 5304	Harness:Safety Switch:Ass'y	41 - 12
D355 5304	Harness:Safety Switch:Ass'y	47 - 18
D355 5305	Harness:Safety Switch:Connecting:Exit	47 - 19
D355 5309	Harness:Sensor:Horizontal Transport:	43 - 1
D355 5311	Harness:Sensor:Transport:Ass'y	35 - 28
D355 5311	Harness:Sensor:Transport:Ass'y	27 - 14
D355 5312	Harness:Sensor:F1:Vertical Transport:Ass'y	31 - 14
D355 5313	Harness:Sensor:F2:Vertical Transport:Ass'y	35 - 24
D355 5314	Harness:Sensor:Exit:Ass'y	33 - 15
D355 5315	Harness:Connecting:Tray	21 - 14
D355 5316	Harness:Fan	21 - 16
D355 5317	Harness:Earth:Ass'y	47 - 17
D355 5318	Harness:Interface:ALE:Ass'y	41 - 13
D355 5331	Harness:Power Source:Connecting: Large Capacity Tray	41 - 5
D355 5340	Harness:Connecting:Heater:Ass'y	47 - 15
D355 5515	Blower:Fan:DC24V 18.24W	11 - 3
D355 5515	Blower:Fan:DC24V 18.24W	9 - 17

Part No.	Description	Page and Index No.
A017 2988	Ring	31 - 5
A228 3613	Gear - 20Z	17 - 14
A229 2692	Damping Insulation	25 - 21
A232 4666	Cushion - Stepper Motor	31 - 2
A232 4666	Cushion - Stepper Motor	35 - 2
A294 4156	Gear - 23Z	17 - 10
A335 4351	Guide Roller	13 - 4
A376 1295	Spacer - M6x10x5	15 - 5
B024 1365	Cap - 38x77	5 - 10
B065 1299	Cap:MM22	3 - 12
B065 1341	Connector Cap	3 - 8
B065 1343	NCU Cap	3 - 2
B070 1307	Decal:Paper Set Direction	3 - 14
B070 1307	Decal:Paper Set Direction	51 - 1
B070 1312	Cap:Joint:Large Capacity Tray	3 - 10
B125 3230	Spacer - 0.3	37 - 13
B132 1226	Holder:Stand	3 - 21
B132 3350	Gear:Idler:Transport Screw:Small	27 - 19
B132 4119	Spacer:Gear:Idler	23 - 17
B234 1313	Cover - Large Capacity Tray	3 - 11
B234 4818	Compression Spring	33 - 8
B234 4842	Shaft:Arm:On-Off	33 - 5
B234 6141	Positioning Sleeve - Inner Back	45 - 16
B234 6141	Positioning Sleeve - Inner Back	13 - 5
B234 6222	Reverse Drive Shaft	25 - 16
B234 6223	Driven Reverse Shaft	25 - 4
B234 6301	Torque Limiter:75mN m	25 - 3
B234 6506	Timing Pulley - 30T	37 - 22
B234 6506	Timing Pulley - 30T	35 - 5
B234 6506	Timing Pulley - 30T	27 - 4
B234 6506	Timing Pulley - 30T	31 - 6
B234 6507	Timing Pulley - 25T	35 - 6
B234 6507	Timing Pulley - 25T	31 - 7
B234 6508	Tension Spring	27 - 3
B234 6508	Tension Spring	37 - 8

Part No.	Description	Page and Index No.
B234 7559	Connector Bracket	45 - 1
B303 1116	Grounding Plate	47 - 1
B303 1185	Metal Joint	39 - 7
B303 2556	Reverse Pressure Lever	25 - 12
B303 2559	Lever:Pressure Release:Reverse	25 - 7
B511 1378	Cover:Cover:Upper	5 - 8
B511 2677	Sensor Bracket	23 - 21
B512 1078	Positioning Pin:Guide:Rear	45 - 11
B512 1079	Positioning Pin:Guide:Front	45 - 14
B600 1082	Holder:Paper Tray	45 - 13
B706 1859	Screw:Slider:Lock	3 - 22
B802 1622	Stepper Motor Damper	37 - 2
B832 1100	Positioning Pin - Upper	3 - 18
B832 1101	Positioning Pin - Lower	3 - 17
B832 1371	Spacer Cushion	3 - 23
B832 1750	Tension Bracket	37 - 6
B832 2535	Reverse Guide Plate	25 - 22
B832 2541	Stay	25 - 5
B832 2569	Stay:Feed:Peen	23 - 19
B832 2574	Pickup Arm	23 - 8
B832 2578	DC Solenoid 24V	23 - 18
B832 2585	Feed Roller Shaft	23 - 15
B832 2877	Knob Screw:Tray:Guide:Green	9 - 12
B832 2877	Knob Screw:Tray:Guide:Green	11 - 8
B832 3909	Bracket Cushion	35 - 8
B832 3909	Bracket Cushion	31 - 8
B833 2565	Compression Spring	25 - 18
B833 2567	Tension Spring	25 - 13
B834 1145	Slide Rail - Left Middle	45 - 10
B834 1155	Slide Rail - Right Middle	45 - 8
B834 1718	Bracket	37 - 11
B834 1725	Paper Feed Unit Drive Bracket	37 - 4
B834 1730	Grip Drive Shaft	37 - 9
B834 1740	Shaft	37 - 10
B834 2520	Feed Guide Plate	25 - 23

Part No.	Description	Page and Index No.
B834 2568	Transport Roller - Driven	25 - 20
B834 2631	Stay	23 - 2
B834 2715	Tray Cushion Holder	13 - 7
B834 3065	Slide Rail - End Fence	17 - 2
B834 3111	Side Fence Shaft - Lower	15 - 13
B834 3169	Paper Size Sensor Plate	17 - 9
B834 3203	Gear - 48Z	39 - 2
B834 3214	Gear - 30Z	39 - 9
B834 3217	Gear - 60Z	39 - 10
B834 3231	Timing Belt Holder - Rear	13 - 14
B834 3237	Bracket - Front	19 - 7
B834 3245	Tension Bracket No.2 - Front	19 - 6
B834 3248	Bracket - Rear	21 - 10
B834 3283	Stay:Main	7 - 4
B834 3309	Side Fence Bracket - Lower Rear	15 - 14
B834 3312	Collar	9 - 5
B834 3312	Collar	7 - 13
B834 3312	Collar	15 - 7
B834 3312	Collar	11 - 20
B834 3313	Rack - Front:Lower	15 - 9
B834 3314	Shaft Holder - Lower	15 - 8
B834 3315	Gear - 13Z	15 - 4
B834 3316	Gear - 13Z	11 - 18
B834 3316	Gear - 13Z	15 - 6
B834 3318	Plate:Lower	15 - 3
B834 3321	Side Fence Bracket - Upper Front	9 - 8
B834 3322	Side Fence Bracket - Upper Rear	11 - 22
B834 3323	Holder - :Upper Front	9 - 7
B834 3329	Holder - Upper Rear	11 - 21
B834 3332	Guide - Upper Front	9 - 10
B834 3334	Guide - Upper Rear	11 - 14
B834 3337	Cover - Upper Front	9 - 11
B834 3338	Cover - Upper Rear	11 - 10
B834 3346	Coupling Shaft - Rear	15 - 11
B834 3349	Rack - Upper Rear	11 - 16

Part No.	Description	Page and Index No.
B834 3350	Bushing - 6x10x6.5	11 - 13
B834 3350	Bushing - 6x10x6.5	15 - 2
B834 3350	Bushing - 6x10x6.5	9 - 4
B834 3368	Slide Shaft - Upper	11 - 12
B834 3368	Slide Shaft - Upper	9 - 6
B834 3378	Stay	7 - 9
B834 3379	Arm:Swivel:Left:Peen	7 - 15
B834 3384	Contact Point Shaft	7 - 7
B834 3385	Arm - Right	7 - 21
B834 3386	Link Handle	7 - 1
B834 3389	Stopper Shaft	7 - 11
B834 3390	Contact Point Stay	7 - 10
B834 3395	Plate - Left	7 - 3
B834 3396	Plate - Right	7 - 22
B834 3400	Stopper Guide - Left	7 - 2
B834 3425	Stopper Guide - Right	7 - 20
B834 3438	Link Shaft	7 - 6
B834 3475	Bracket	7 - 5
B834 3490	Spacer - Side Fence	9 - 21
B834 3490	Spacer - Side Fence	13 - 12
B834 3490	Spacer - Side Fence	11 - 28
B834 3493	Oil Damper:0.2N	19 - 9
B834 3885	Gear/pulley - 31Z/31T	37 - 17
B834 4032	Cushion:Tray:No.1	13 - 6
B834 4153	Side Fence Grip	9 - 19
B834 4163	Side Fence Grip - Rear	11 - 24
B834 4388	Compression Spring	39 - 6
B834 4547	Gear - 36Z/60Z	39 - 3
B834 4557	Timing Pulley:Drive:No.2:Ass'y	19 - 2
B834 4557	Timing Pulley:Drive:No.2:Ass'y	21 - 2
B834 4559	Tensioner	21 - 4
B834 4559	Tensioner	19 - 4
B834 4563	Plate	19 - 1
B834 4563	Plate	21 - 1
B834 4564	Holder - Front	19 - 8

Part No.	Description	Page and Index No.
B834 4565	Timing Pulley - 20T	19 - 12
B834 4566	Tension Bracket No.2 - Rear	21 - 6
B834 4568	Stud	19 - 13
B834 4568	Stud	21 - 7
B834 4572	Timing Belt - B100S5M2000	21 - 3
B834 4572	Timing Belt - B100S5M2000	19 - 3
B834 4593	Paper Size Sensor Bracket - Long	17 - 4
B834 4594	Shielding Plate - Long	17 - 8
B834 4595	Contact Point Shaft - Long	17 - 3
B834 4696	Rack - Rear Lower	15 - 10
B834 4741	Paper Size Sensor Bracket	11 - 19
B834 4742	Feeler - Paper Size Sensor No.1	11 - 15
B834 4743	Feeler - Paper Size Sensor No.2	11 - 11
B834 4881	Drawer Connector Bracket	21 - 15
B834 4883	Drawer:Connector Bracket - Rear	41 - 3
B834 4891	Registration Side Plate - Right	7 - 19
B834 4892	Registration Side Plate - Left	7 - 14
B835 2790	Gear - 14Z	33 - 21
B835 2825	Gear - 29Z/36T	27 - 16
B835 2826	Timing Belt - B60S2M110	27 - 15
B835 2977	Timing Belt - B40S2M150	37 - 24
C236 3237	Collar 6x11.2x1.5	11 - 29
C563 3116	Belt Joint	13 - 2
D016 1372	Bracket:Cover:Extension	3 - 26
D350 1312	Decal:Paper:Supply:Right	51 - 2
D350 1312	Decal:Paper:Supply:Right	7 - 17
D350 1313	Decal:Paper:Supply:Left	7 - 16
D350 1313	Decal:Paper:Supply:Left	51 - 3
D350 1322	Decal:End Fence:Tab	3 - 25
D350 1322	Decal:End Fence:Tab	51 - 4
D350 3339	Rack:Upper Front:Peen	9 - 9
D350 4516	Guard:Tray:Side Fence	9 - 3
D350 5311	Harness:Paper Feed Unit	23 - 22
G052 1518	Spring - Lock Lever	17 - 5
G178 2958	Decal:Size Indication:Multi-Language	51 - 20

Part No.	Description	Page and Index No.
G178 2958	Decal:Size Indication:Multi-Language	3 - 16
G363 1105	Detent Roller Shaft	43 - 19
G363 1105	Detent Roller Shaft	35 - 20
G570 1540	Rubber Foot H=10	45 - 12
H085 1109	Bushing - M6x5	17 - 11
H516 3666	Spring - 19.6mm	7 - 8
J502 3127	Bushing:Stepper Motor	43 - 4

Part No.	Description	Page and Index No.
AA04 2550	Timing Belt - S2M138	37 - 5
AA06 0840	Pressure Spring - 29N	19 - 5
AA06 0840	Pressure Spring - 29N	21 - 5
AA06 0858	DC Solenoid Spring	11 - 6
AA06 0858	DC Solenoid Spring	9 - 15
AA06 3204	Compression Spring	23 - 13
AA06 6671	Lock Spring	47 - 3
AA06 6675	Compression Spring	43 - 11
AA06 6675	Compression Spring	35 - 12
AA06 6675	Compression Spring	27 - 8
AA06 6675	Compression Spring	29 - 8
AA06 6677	Tension Spring	23 - 9
AA08 2070	Bushing - 8x16x7	29 - 13
AA08 2101	Bushing - 6x10x6	15 - 1
AA08 2101	Bushing - 6x10x6	11 - 23
AA08 3015	Roller Clutch	23 - 14
AA08 4059	Ball Bearing Holder	43 - 10
AA08 4059	Ball Bearing Holder	25 - 19
AA08 4059	Ball Bearing Holder	29 - 9
AA08 4059	Ball Bearing Holder	27 - 9
AA08 4059	Ball Bearing Holder	33 - 9
AA08 4059	Ball Bearing Holder	35 - 13
AA10 0014	Retaining Ring C - Separate	25 - 1
AA10 0014	Retaining Ring C - Separate	23 - 3
AA13 2205	Spacer - Timing Belt	37 - 18
AA14 0912	Screw - 8x14x2.8	45 - 20
AA14 0912	Screw - 8x14x2.8	47 - 4
AA14 3562	Screw:M4:DIA6x1.2	37 - 7
AA14 3798	Hexagonal Bolt:M12x35	47 - 16
AA14 3810	Development Cover Screw	27 - 2
AA14 3812	Screw - Scale	23 - 12
AA16 1122	Motor Cushion	37 - 3
AB01 1392	Drive Reverse Gear - 24Z	25 - 15
AB01 1478	Gear - 18Z	23 - 1
AB01 1478	Gear - 18Z	43 - 7

Part No.	Description	Page and Index No.
AB01 1591	Gear:Reverse	25 - 14
AB01 3654	Gear - 30Z	37 - 12
AB01 7724	Gear - 23Z/28Z	23 - 16
AF02 1410	Transport Roller	23 - 11
AF03 0071	Pick-up Roller	23 - 4
AF03 1041	Feed Roller - Bypass Feed	23 - 6
AF03 2041	Separation Roller - Bypass Feed	25 - 2
AG07 1012	Magnet Catch:Ass'y	47 - 6
AH01 2031	Caster:1470N	47 - 11
AW01 0122	Paper Feed Sensor	43 - 3
AW01 0122	Paper Feed Sensor	33 - 14
AW01 0122	Paper Feed Sensor	35 - 22
AW01 0122	Paper Feed Sensor	23 - 10
AW01 0122	Paper Feed Sensor	27 - 13
AW01 0122	Paper Feed Sensor	31 - 10
AW02 0145	Photointerruptor:Flat	33 - 17
AW02 0160	Paper Feed Sensor	21 - 9
AW02 0160	Paper Feed Sensor	17 - 6
AW02 0160	Paper Feed Sensor	23 - 20
AW02 0160	Paper Feed Sensor	11 - 17
AX04 0157	Stepper Motor DC1.68V 6.7W	37 - 1
AX04 0158	Stepper Motor DC2.64V 6.3W	31 - 1
AX04 0158	Stepper Motor DC2.64V 6.3W	35 - 1
AX04 0229	DC Motor 24V 21.6W	39 - 12
AX06 0333	Stepper Motor DC2.4V 13W	27 - 18
AX40 0012	Heater - 230V/18W	47 - 14
BB01 3008	Gear - 31Z	25 - 17
GA00 0036	Decal - (High Temperature) Left	47 - 13
GA00 0036	Decal - (High Temperature) Left	51 - 21
GH01 0007	Rubber Foot - FF-006(P4070)N	47 - 5
GX64 0024	Fan Motor - DC 3.12W	39 - 16

Part No.	Description	Page and Index No.
0314 0060N	Screw - M4x6	47 - 106
0314 0080N	Philips Pan Head Screw - M4x8	37 - 102
0360 3006N	Screw - M3x6	31 - 102
0360 3006N	Screw - M3x6	35 - 102
0450 4008N	Tapping Screw - M4x8	3 - 102
0450 4008N	Tapping Screw - M4x8	5 - 102
0451 3006N	Tapping Screw - 3x6	41 - 104
0451 3006N	Tapping Screw - 3x6	39 - 107
0451 3008N	Tapping Screw - M3x8	45 - 103
0451 4008N	Tapping Screw:4x8	15 - 101
0451 4008N	Tapping Screw:4x8	11 - 102
0451 4008N	Tapping Screw:4x8	39 - 101
0451 4008N	Tapping Screw:4x8	13 - 101
0451 4008N	Tapping Screw:4x8	37 - 101
0451 4008N	Tapping Screw:4x8	33 - 106
0451 4008N	Tapping Screw:4x8	35 - 107
0451 4008N	Tapping Screw:4x8	17 - 102
0451 4008N	Tapping Screw:4x8	19 - 101
0451 4008N	Tapping Screw:4x8	21 - 101
0451 4008N	Tapping Screw:4x8	3 - 101
0451 4008N	Tapping Screw:4x8	25 - 101
0451 4008N	Tapping Screw:4x8	23 - 101
0451 4008N	Tapping Screw:4x8	41 - 101
0451 4008N	Tapping Screw:4x8	5 - 101
0451 4008N	Tapping Screw:4x8	7 - 101
0451 4008N	Tapping Screw:4x8	47 - 102
0451 4008N	Tapping Screw:4x8	9 - 106
0451 4008N	Tapping Screw:4x8	43 - 101
0451 4008N	Tapping Screw:4x8	45 - 101
0451 4020N	Tapping Screw - M4x20	3 - 103
0451 4030N	Tapping Screw:M4x30	39 - 109
0453 3006N	Tapping Screw - M3x6	15 - 102
0453 3006N	Tapping Screw - M3x6	11 - 104
0453 3006N	Tapping Screw - M3x6	27 - 107
0453 3006N	Tapping Screw - M3x6	9 - 101

Part No.	Description	Page and Index No.
0453 3008N	Binding Self Tapping Screw:3x8	45 - 102
0453 4006N	Binding Self Tapping Screw:4x6	15 - 103
0453 4006N	Binding Self Tapping Screw:4x6	13 - 104
0453 4006N	Binding Self Tapping Screw:4x6	11 - 103
0453 4006N	Binding Self Tapping Screw:4x6	17 - 103
0453 4006N	Binding Self Tapping Screw:4x6	9 - 102
0453 4008N	Binding Self Tapping Screw:4x8	45 - 105
0454 4006Q	Tapping Screw:4x6	27 - 105
0454 4006Q	Tapping Screw:4x6	37 - 103
0454 4006Q	Tapping Screw:4x6	9 - 107
0454 4008Q	Tapping Screw - M4x8	29 - 101
0454 4008Q	Tapping Screw - M4x8	11 - 101
0454 4008Q	Tapping Screw - M4x8	27 - 101
0454 4008Q	Tapping Screw - M4x8	21 - 103
0454 4008Q	Tapping Screw - M4x8	9 - 108
0454 4008Q	Tapping Screw - M4x8	47 - 101
0454 4008Q	Tapping Screw - M4x8	19 - 103
0454 4008Q	Tapping Screw - M4x8	31 - 101
0454 4008Q	Tapping Screw - M4x8	7 - 104
0454 4008Q	Tapping Screw - M4x8	17 - 101
0454 4008Q	Tapping Screw - M4x8	33 - 101
0454 4008Q	Tapping Screw - M4x8	35 - 101
0454 4008Q	Tapping Screw - M4x8	13 - 103
0573 0030E	Hexagon Headless Set Screw - M3x3	25 - 106
0633 0140G	Parallel Pin - 3x14	39 - 106
0633 0140G	Parallel Pin - 3x14	19 - 105
0708 0080N	Washer-DIA8	39 - 104
0720 0020E	Retaining Ring - M2	33 - 103
0720 0030E	Retaining Ring - M3	11 - 107
0720 0030E	Retaining Ring - M3	35 - 105
0720 0030E	Retaining Ring - M3	15 - 106
0720 0030E	Retaining Ring - M3	33 - 102
0720 0030E	Retaining Ring - M3	9 - 104
0720 0030E	Retaining Ring - M3	43 - 105
0720 0040E	Retaining Ring - M4	27 - 102

Part No.	Description	Page and Index No.
0720 0040E	Retaining Ring - M4	15 - 104
0720 0040E	Retaining Ring - M4	11 - 106
0720 0040E	Retaining Ring - M4	33 - 104
0720 0040E	Retaining Ring - M4	9 - 103
0720 0040E	Retaining Ring - M4	17 - 104
0720 0040E	Retaining Ring - M4	7 - 105
0720 0040E	Retaining Ring - M4	23 - 103
0720 0040E	Retaining Ring - M4	25 - 104
0720 0050E	Retaining Ring - M5	7 - 106
0720 0060E	Retaining Ring - M6	13 - 102
0720 0060E	Retaining Ring - M6	43 - 102
0720 0060E	Retaining Ring - M6	35 - 103
0720 0060E	Retaining Ring - M6	31 - 103
0720 0060E	Retaining Ring - M6	19 - 102
0720 0060E	Retaining Ring - M6	7 - 102
0720 0060E	Retaining Ring - M6	29 - 102
0720 0060E	Retaining Ring - M6	23 - 102
0720 0060E	Retaining Ring - M6	37 - 104
0720 0060E	Retaining Ring - M6	21 - 102
0720 0060E	Retaining Ring - M6	39 - 102
0720 0060E	Retaining Ring - M6	27 - 103
0720 0080E	Retaining Ring - M8	11 - 108
0720 0080E	Retaining Ring - M8	9 - 105
0720 0080E	Retaining Ring - M8	15 - 105
0725 0120E	Retaining Ring C - M12	15 - 107
0727 0080E	Retaining Ring - M8	39 - 105
0740 3506	Ball Bearing - 6x12x4 mm	7 - 107
0741 3506	Ball Bearing - 6x12x4 mm	25 - 105
0741 3706	Ball Bearing - 6x10x3	25 - 107
0741 3708	Ball Bearing - 8x12x3.5mm	23 - 107
0741 3808	Ball Bearing - 8x16x5mm	7 - 103
0741 3906	Bushing - M6	33 - 105
0742 3808	Ball Bearing - 8x16x5	21 - 104
0742 3808	Ball Bearing - 8x16x5	39 - 103
0742 3808	Ball Bearing - 8x16x5	27 - 104

Part No.	Description	Page and Index No.
0742 3808	Ball Bearing - 8x16x5	37 - 105
0742 3808	Ball Bearing - 8x16x5	31 - 104
0742 3808	Ball Bearing - 8x16x5	19 - 104
0742 3808	Ball Bearing - 8x16x5	23 - 104
0742 3808	Ball Bearing - 8x16x5	35 - 104
0742 3808	Ball Bearing - 8x16x5	43 - 103
0805 0088	Retaining Ring - M6	23 - 105
0951 6012N	Screw - M6x12	47 - 108
0954 4008N	Screw - M4x8	3 - 104
0954 4008N	Screw - M4x8	47 - 109
0954 4010N	Screw:Polished Round/Spring:M4x10	29 - 104
1102 9430	Connector:Drawer:1612257-7	41 - 103
1102 9781	Connector:51405-3919	41 - 102
1105 0022	Cord Stopper - AWG 18/16 UL	41 - 108
1105 0194	PCB Stud	41 - 105
1105 0487	Harness Clamp	39 - 108
1105 0487	Harness Clamp	47 - 107
1105 0487	Harness Clamp	21 - 106
1105 0487	Harness Clamp	45 - 104
1105 0488	Harness Clamp	41 - 106
1105 0511	Harness Clamp - LWS-0306ZC	21 - 107
1105 0511	Harness Clamp - LWS-0306ZC	23 - 106
1105 0511	Harness Clamp - LWS-0306ZC	25 - 102
1105 0511	Harness Clamp - LWS-0306ZC	27 - 106
1105 0511	Harness Clamp - LWS-0306ZC	29 - 103
1105 0511	Harness Clamp - LWS-0306ZC	11 - 109
1105 0511	Harness Clamp - LWS-0306ZC	43 - 104
1105 0511	Harness Clamp - LWS-0306ZC	31 - 107
1105 0511	Harness Clamp - LWS-0306ZC	41 - 107
1105 0511	Harness Clamp - LWS-0306ZC	9 - 109
1105 0511	Harness Clamp - LWS-0306ZC	35 - 106
1105 0518	Edge Saddle - LES-1010	21 - 105
1105 0522	Edge Saddle - LES0510	25 - 103
1105 0522	Edge Saddle - LES0510	15 - 108
1105 0522	Edge Saddle - LES0510	47 - 103

Part No.	Description	Page and Index No.
1105 0522	Edge Saddle - LES0510	11 - 105
1105 0522	Edge Saddle - LES0510	21 - 108
1105 0534	Clamp	31 - 106
1105 0551	Clamp:LES-0505	31 - 105
1105 0600	Clamp:LWSM-0306-2M	47 - 104
1204 2382	Interlock Switch - Fail-CA22	47 - 105

