

Internal Shift Tray SH3030
Machine Code: D428
Field Service Manual

August 2008
Subject to change

TABLE OF CONTENTS

1. Replacement and Adjustment


Tray Cover.....	3
Tray Motor and Half Turn Sensor Board.....	4



1. Replacement and Adjustment

Tray Cover

1

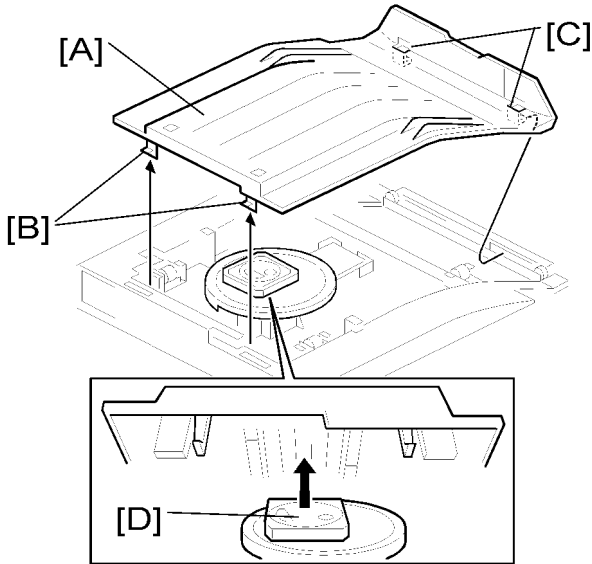


1. Remove the tray cover [A] by pressing on the two pawls [B] on the left side of the cover.

– When Attaching the Tray Cover –

↓ Note

- The right side of the tray cover should be attached first.
1. Fit the pawls [C] on the shift tray.
 2. Align the square [D] so that it fits into the groove in the underside of the tray cover and does not interfere with the attachment of the cover.
 3. Complete the attachment by inserting the left side pawls [B] into place.

Tray Motor and Half Turn Sensor Board

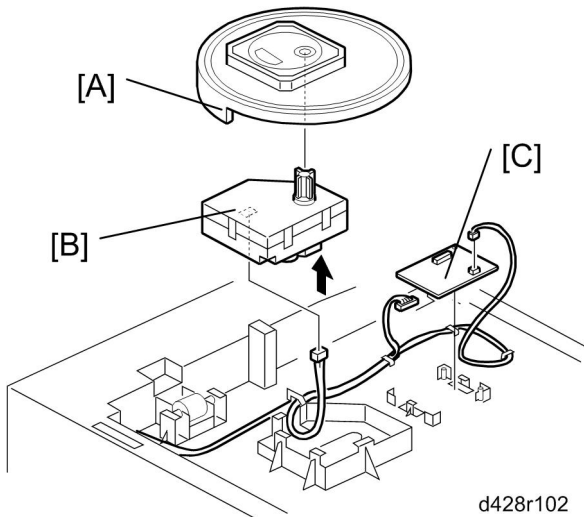

d428r102

1. Top cover (☛ Tray Cover)
2. Slip disc [A]
3. Tray motor [B] (☛ x 1)
4. Half turn sensor board [C] (☛ x 1).