

SR730 (A697)

PARTS CATALOG

INTRODUCTION


This chapter instructs you the numbers and names of parts on this machine.

INDEX to PARTS CATALOG

LOCATION OF UNIT	2
1.EXTERIOR (A697)	6
2.STAPLE TRANSPORT 1 (A697).....	8
3.STAPLE TRANSPORT 2 (A697).....	10
4.STAPLE TRAY 1 (A697)	12
5.STAPLE TRAY 2 (A697)	14
6.STAPLER UNIT (A697)	16
7.TRANSPORT SECTION 1 (A697).....	18
8.TRANSPORT SECTION 2 (A697).....	20
9.PUNCH UNIT (A697).....	22
10.PAPER EXIT SECTION 1 (A697).....	24
11.PAPER EXIT SECTION 2 (A697).....	26
12.FRAME SECTION (A697)	28
13.DRIVE SECTION (A697).....	30
14.ELECTRICAL SECTION (A697).....	32
15.DECAL AND DOCUMENT (A697)	34
PARTS INDEX	39


LOCATION OF UNIT

1.EXTERIOR (A697)

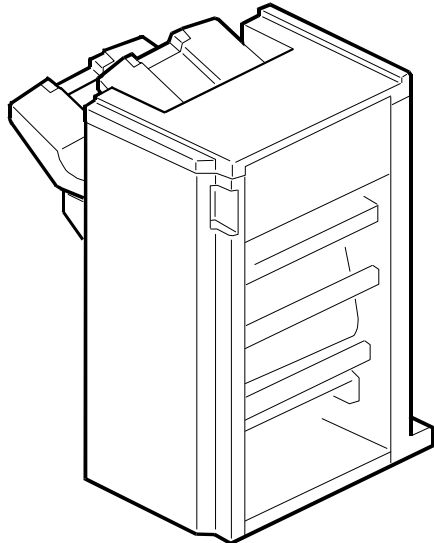


See Page 7

2.STAPLE TRANSPORT 1 (A697)

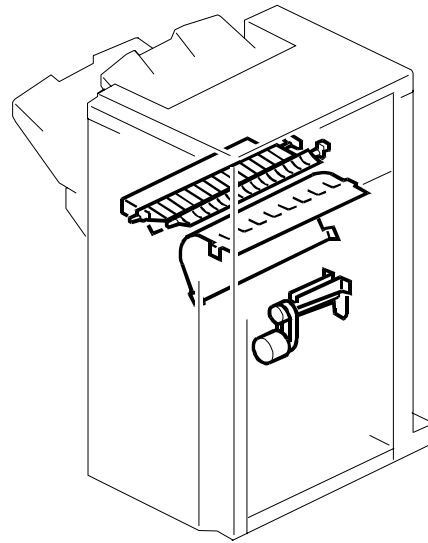


See Page 9

3.STAPLE TRANSPORT 2 (A697)

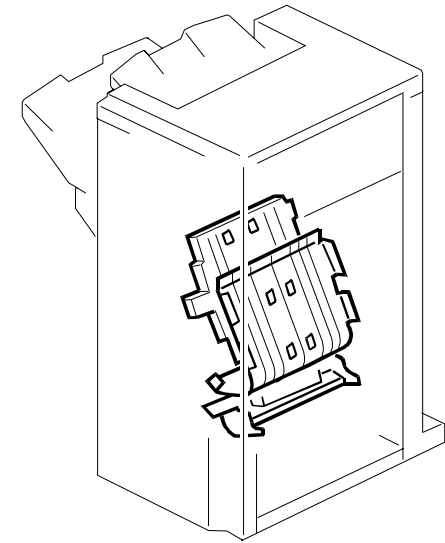


See Page 11

4.STAPLE TRAY 1 (A697)

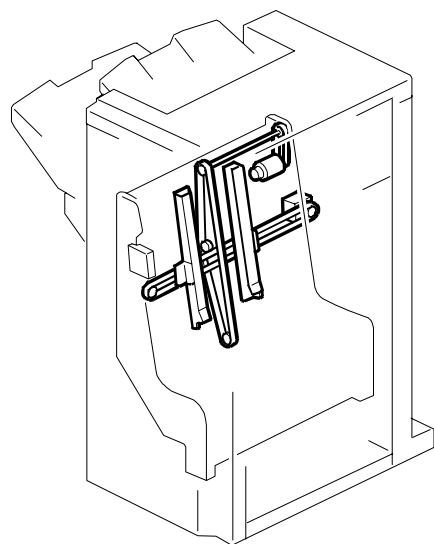


See Page 13

5.STAPLE TRAY 2 (A697)

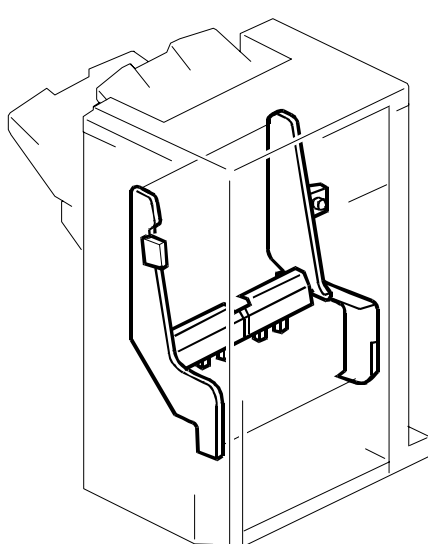

See Page 15


6.STAPLER UNIT (A697)

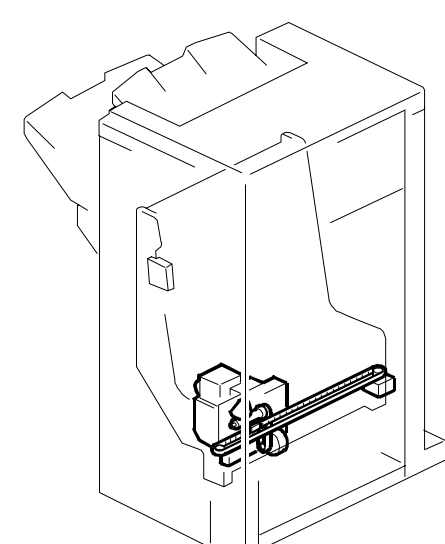

See Page 17


LOCATION OF UNIT

7.TRANSPORT SECTION 1 (A697)

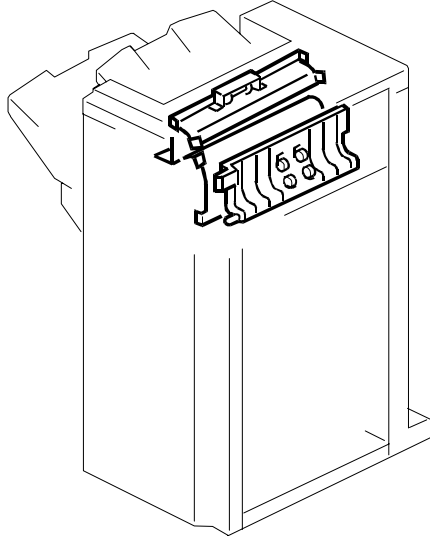


See Page 19

8.TRANSPORT SECTION 2 (A697)

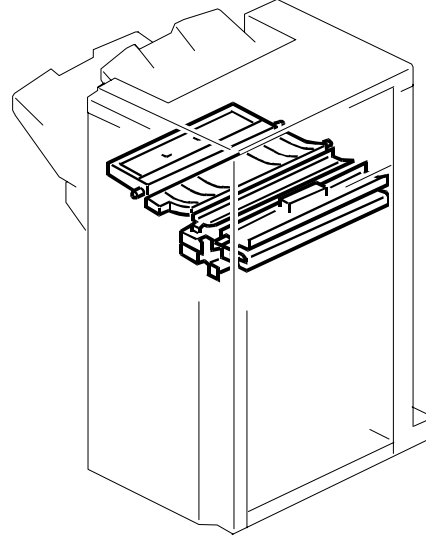


See Page 21

9.PUNCH UNIT (A697)

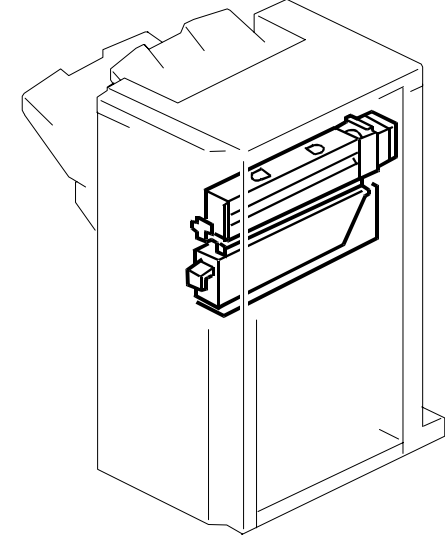


See Page 23

10.PAPER EXIT SECTION 1 (A697)

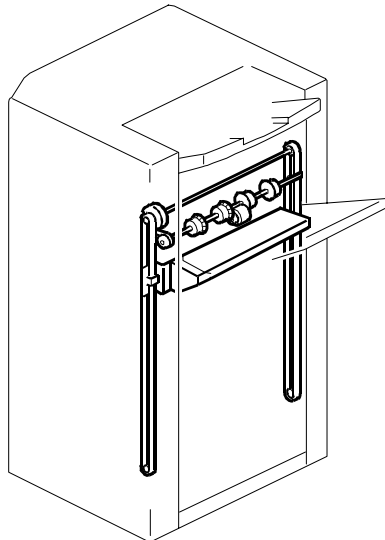


See Page 25

11.PAPER EXIT SECTION 2 (A697)

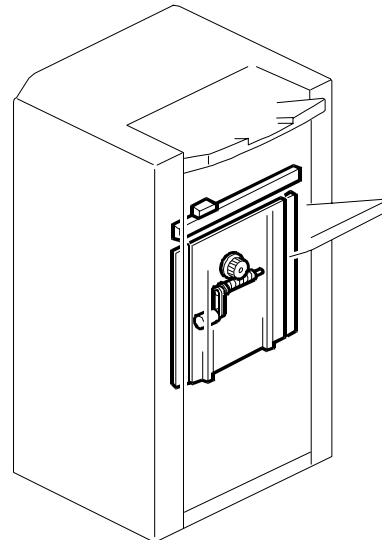



See Page 27

12.FRAME SECTION (A697)

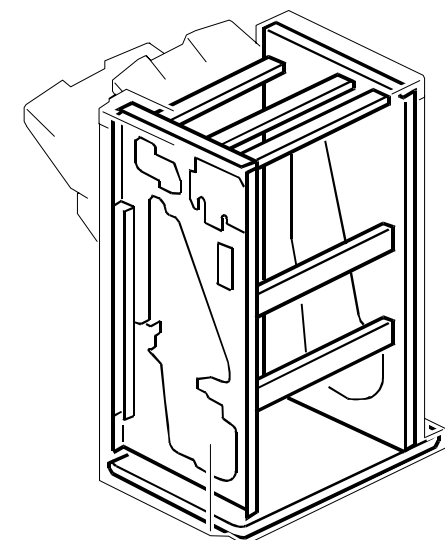


See Page 29

LOCATION OF UNIT

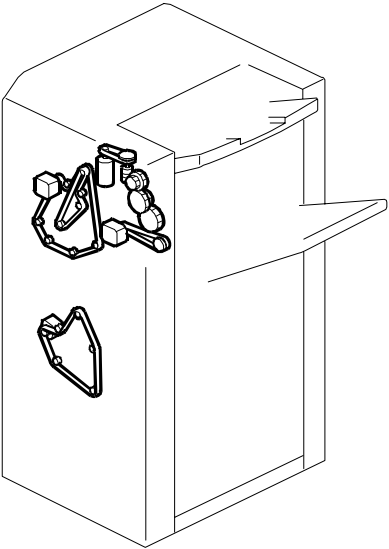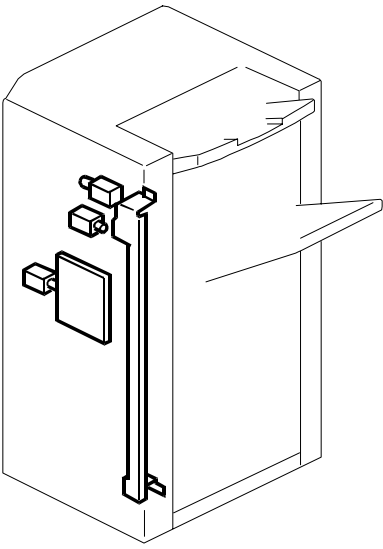13.DRIVE SECTION (A697)  See Page 31	14.ELECTRICAL SECTION (A697)  See Page 33	

1.EXTERIOR (A697)

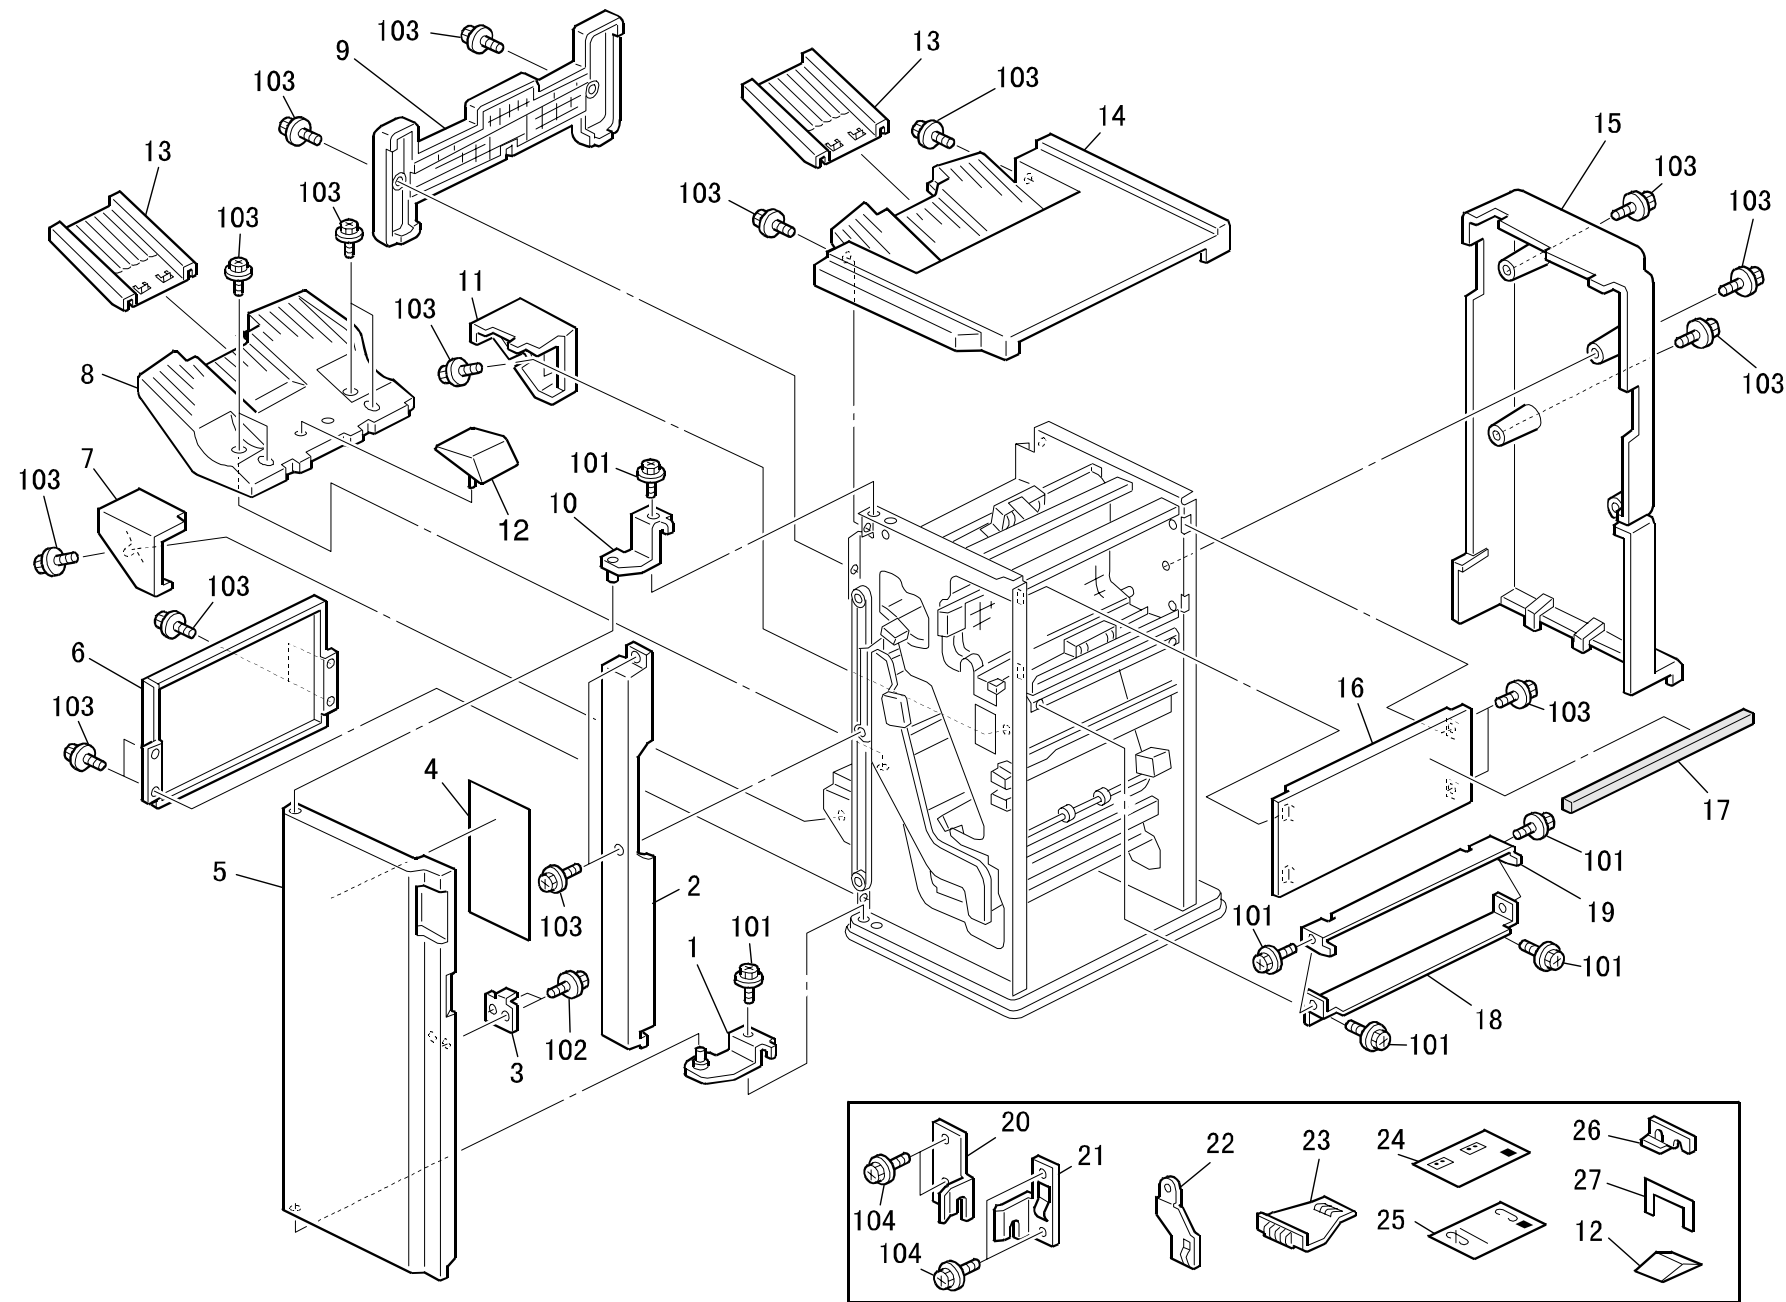


1.EXTERIOR (A697)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A697 6145	Lower Hinge - Front Cover	1
2	A697 6151	Left Inner Cover	1
3	A377 1651	Magnet Catch Plate	1
4	A697 5700	Decal Misfeed Removal	1
5	A697 6131	Front Cover	1
6	A697 6191	Left Lower Cover	1
7	A697 6101	Front Cover - Shift Tray	1
8	A697 3031	Shift Tray	1
9	A697 6181	Left Upper Cover	1
10	A697 6140	Upper Hinge - Front Cover	1
11	A697 6111	Rear Cover - Shift Tray	1
12	A697 3041	Sub Shift Tray	1
13	A666 2421	Sub - Shift Tray	1
14	A697 6171	Upper Cover	1
15	A697 6161	Rear Cover	1
16	A697 6121	Right Cover	1
17	5316 3062	Cushion - Cutter	1
18	A697 2250	Lower Relay Guide	1
19	A697 2251	Upper Relay Guide	1
20	A697 1136	Rear Joint Bracket	1
21	A697 1135	Front Joint Bracket	1
22	A697 1137	Grounding Plate	1
23	A612 5955	Grounding Plate - Bank	2
24	A606 1890	Decal - Punch Position (A4)	1
24	A606 8195	Decal - Punch Position (LT)	1
25	A697 5900	Staple Position Decal	1
26	A812 7412	Spacer - 1mm	1
27	A379 2215	Exit Mylar	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006B	Tapping Screw - M3x6	
102	0450 4008B	Tapping Screw - 4x8	
103	0451 3008H	Tapping Screw - 3x8	
104	0451 4014B	Tapping Screw:4x14	

2.STAPLE TRANSPORT 1 (A697)

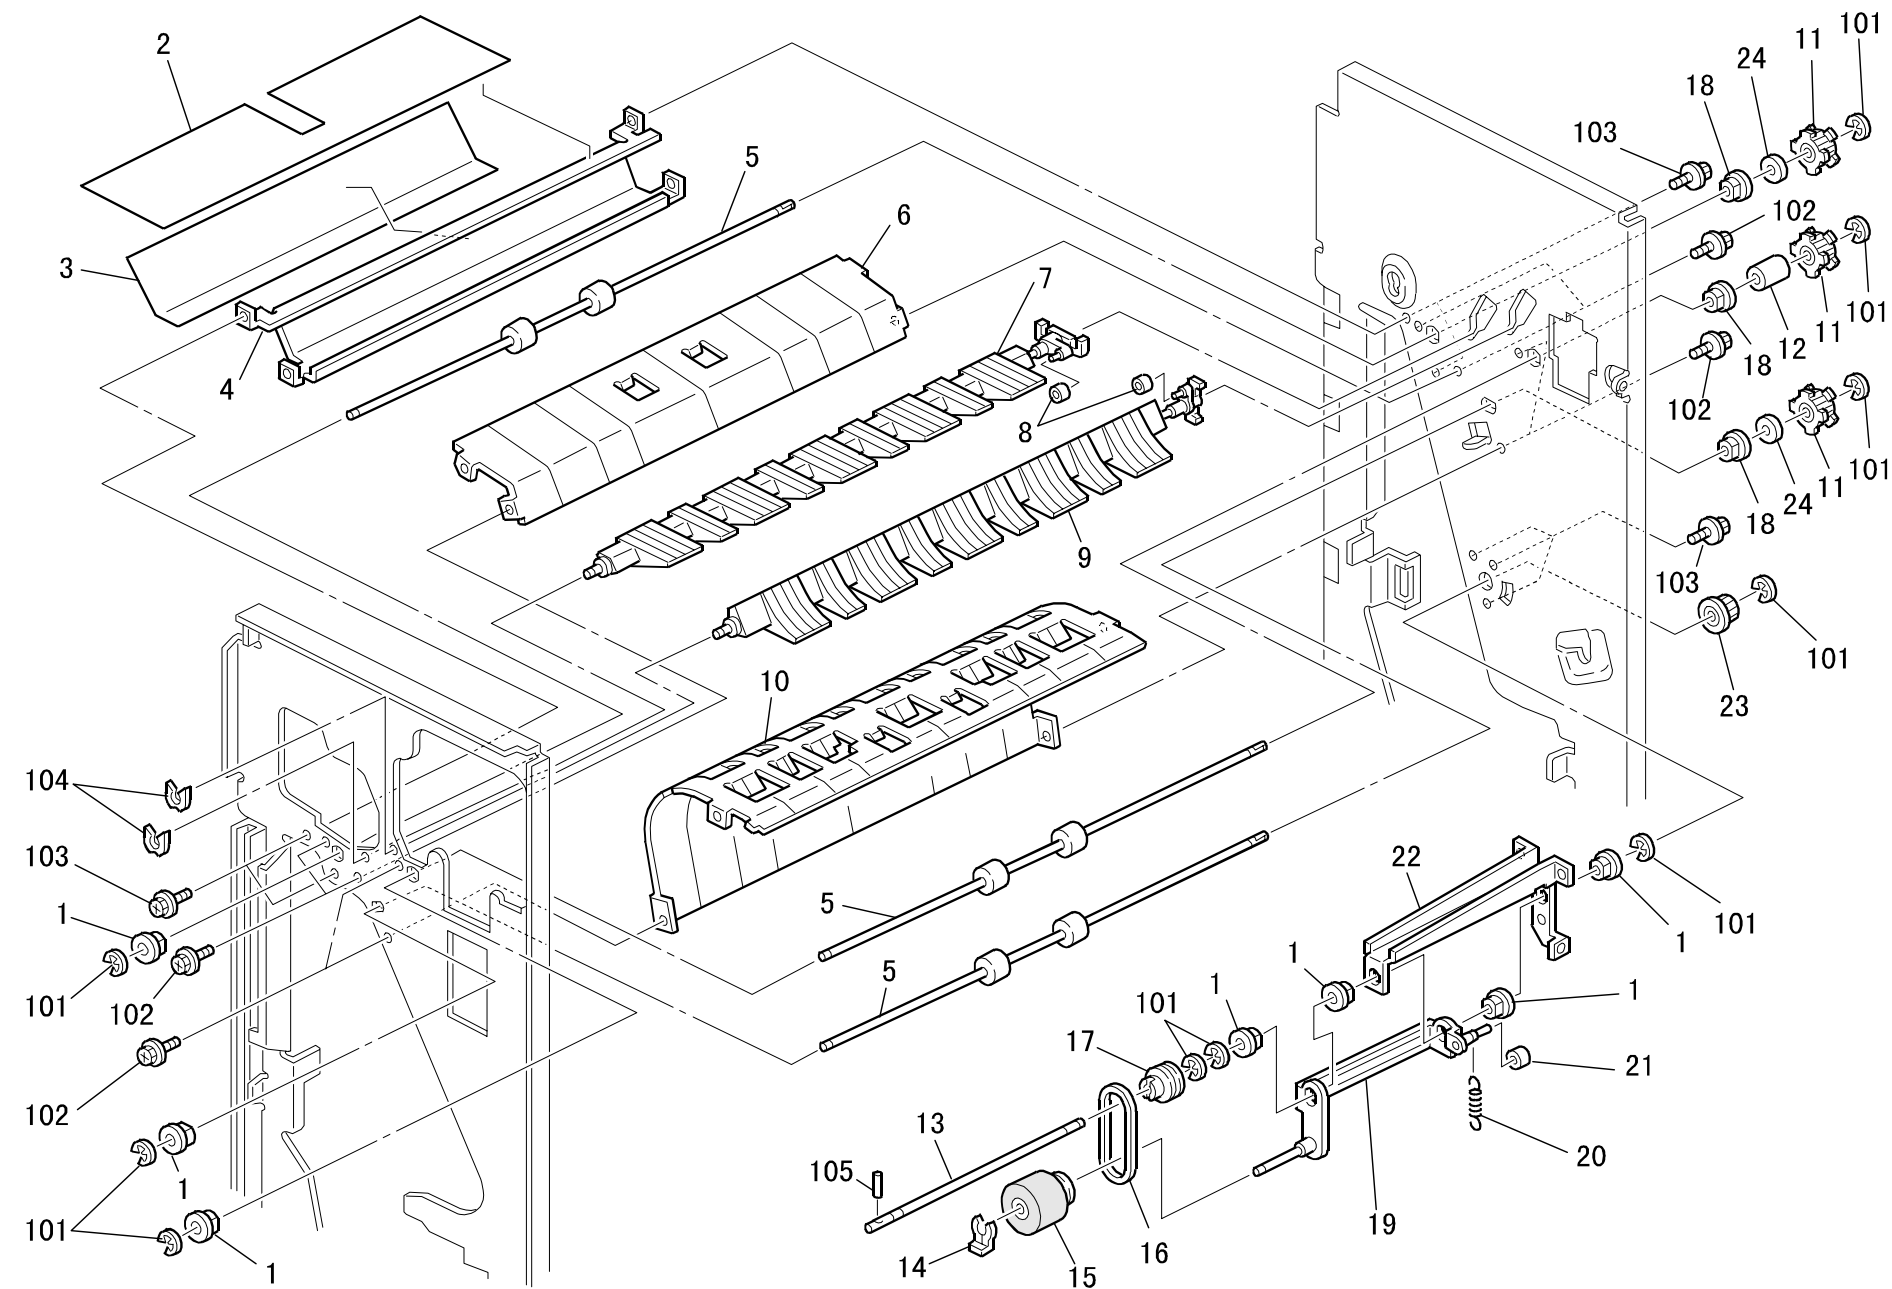


2.STAPLE TRANSPORT 1 (A697)

Index No.	Part No.	Description	Q'ty Per Assembly
1	5053 0447	Bushing - 6mm	1
2	A379 2523	Exit Guide Mylar	1
3	A379 2525	Exit Guide Mylar - 2	1
4	A379 2521	Exit Guide Plate	1
5	AF02 0439	Transport Roller	1
6	A697 2170	Lower Guide - Shift Tray	1
7	A697 2110	Junction Gate	1
8	A458 2251	Cushion - Bin Solenoid Lever	1
9	A697 2245	Junction Gate - Proof Tray	1
10	A697 2155	Lower Guide - Junction Gate	1
11	AB03 0374	Timing Pulley - 20Z	1
12	A697 1605	Spacer - 6x10x15.2mm	1
13	A608 2816	Positioning Roller Shaft	1
14	5447 2681	Snap Ring	1
15	A697 2265	Positioning Roller	1
16	5919 2132	Positioning Roller Belt	1
17	5919 2127	Positioning Roller Pulley	1
18	AA08 0238	Bushing - M6	1
19	A608 2813	Positioning Roller Arm	1
20	AA06 0557	Positioning Roller Spring	1
21	AA16 1099	Lever Cushion	1
22	A300 3851	Positioning Roller Bracket	1
23	A697 2260	Pulley - 17T	1
24	A697 1606	Spacer - 6x12x2.7mm	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0720 0040B	Retaining Ring - M4	
102	0451 3006B	Tapping Screw - M3x6	
103	0451 4006B	Tapping Screw - 4x6	
104	0805 0089	Retaining Ring - M4	
105	0623 0120E	Spring Pin - M3x12	

3.STAPLE TRANSPORT 2 (A697)

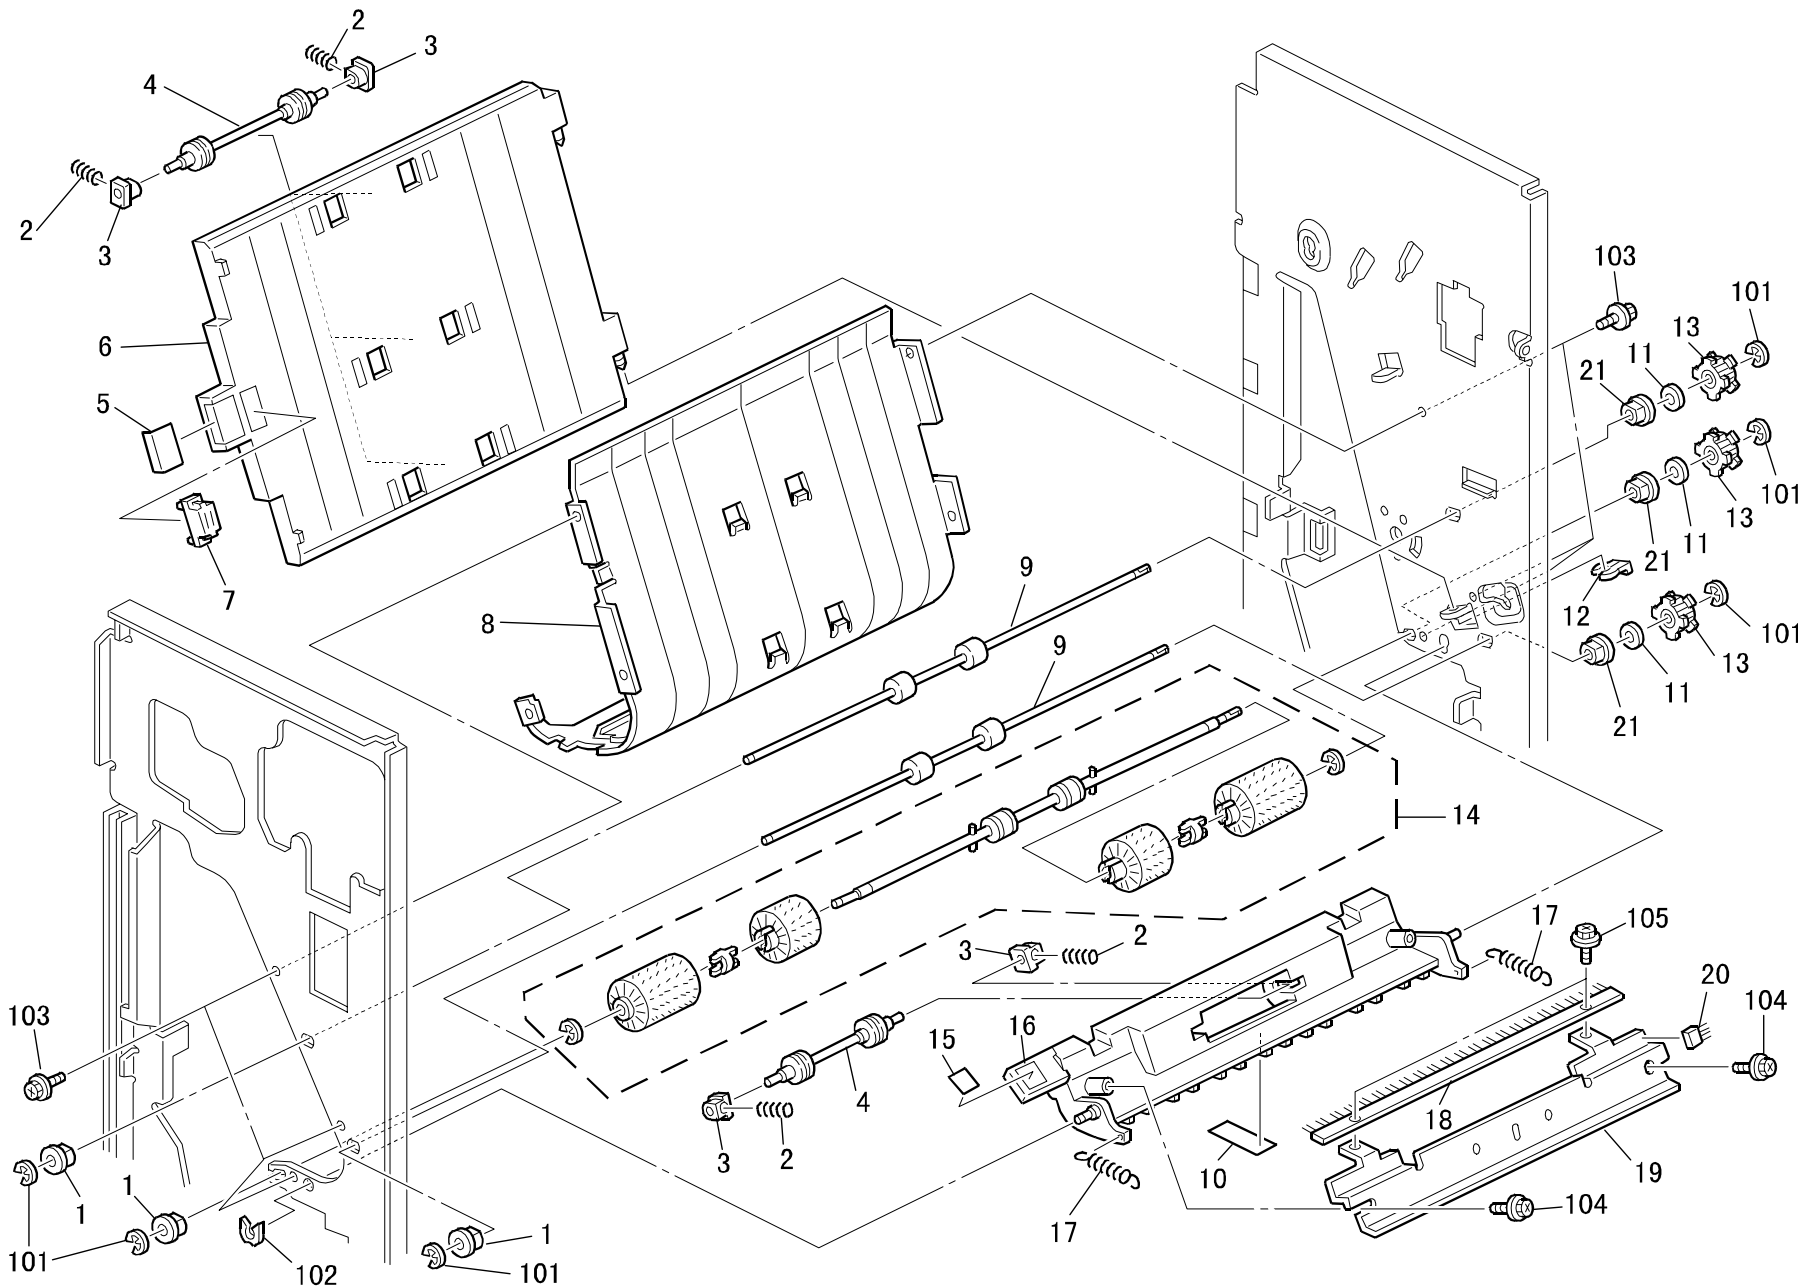


3.STAPLE TRANSPORT 2 (A697)

Index No.	Part No.	Description	Q'ty Per Assembly
1	5053 0447	Bushing - 6mm	1
2	AA06 3529	Pressure Spring - 14.5mm	1
3	AA08 0242	Bushing - 4mm	1
4	AF02 2106	Driven Roller	1
5	A697 5500	Decal - Replacement R4	1
6	A697 2115	Left Guide - Vertical Transport	1
7	AG07 1010	Magnet Catch	1
8	A697 2120	Right Guide - Vertical Transport	1
9	AF02 0439	Transport Roller	1
10	A697 2270	Guide Mylar - Stapler Tray	1
11	A697 1606	Spacer - 6x12x2.7mm	1
12	5447 2681	Snap Ring	1
13	AB03 0374	Timing Pulley - 20Z	1
14	A697 2135	Exit Roller - Staple Tray	1
15	A697 5600	Decal - Replacement R5	1
16	A697 2130	Upper Entrance Guide - Staple Tray	1
17	5920 2144	Spring - Lock	1
18	AA12 0027	Antistatic Brush	1
19	A379 2519	Supporting Lower Guide	1
20	A697 2131	Antistatic Brush	1
21	AA08 0238	Bushing - M6	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0720 0040B	Retaining Ring - M4	
102	0805 0089	Retaining Ring - M4	
103	0451 3006B	Tapping Screw - M3x6	
104	0450 4008B	Tapping Screw - 4x8	
105	0451 4006B	Tapping Screw - 4x6	

4.STAPLE TRAY 1 (A697)

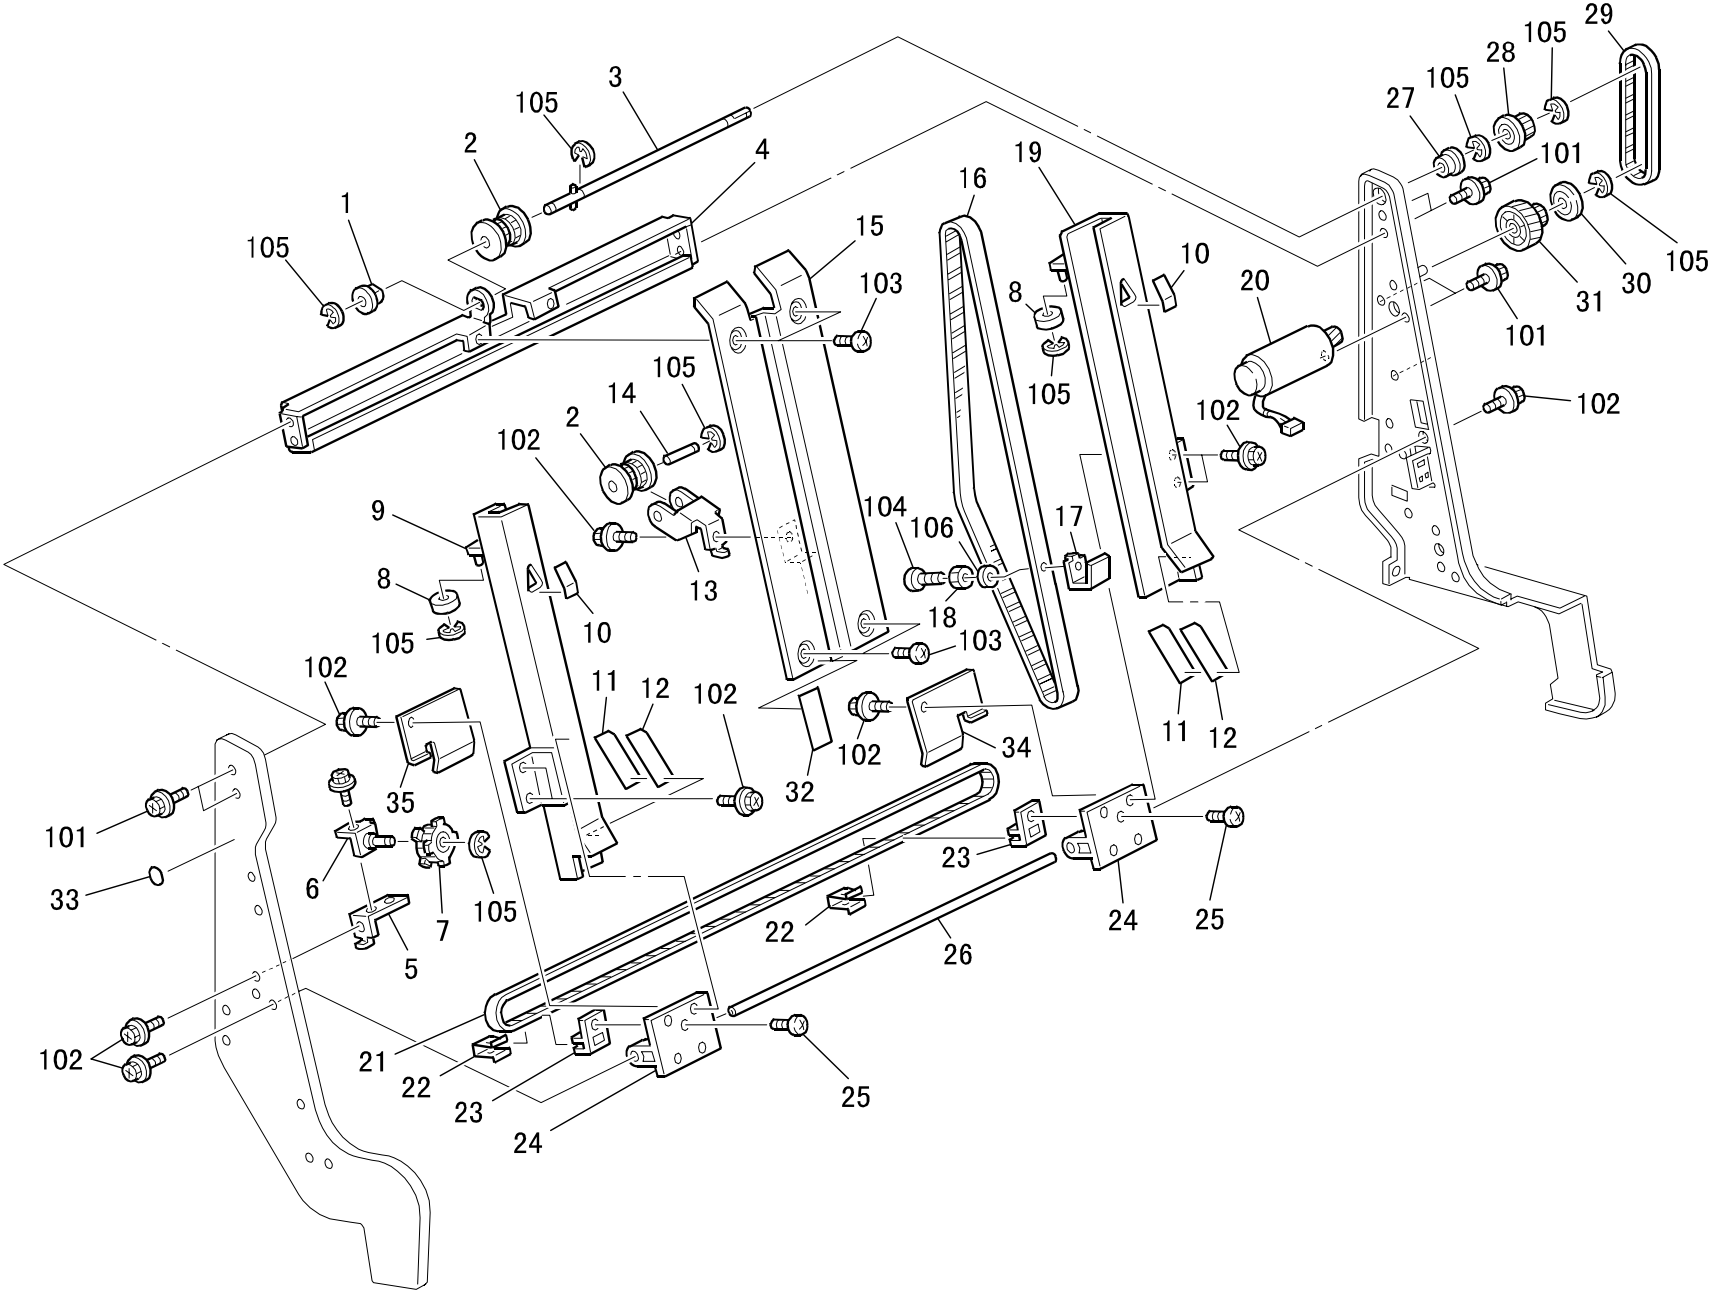


4.STAPLE TRAY 1 (A697)

Index No.	Part No.	Description	Q'ty Per Assembly
1	5053 0447	Bushing - 6mm	1
2	A666 3180	Timing Pulley - Z32	1
3	A379 4401	Upper Exit Shaft	1
4	A697 4175	Upper Stay - Staple Unit	1
5	A300 3641	Fixing Plate	1
6	A300 3646	Jogger Idler Bracket	1
7	A697 4170	Pulley - 32T	1
8	5201 2722	Bushing - M6x5	1
9	A300 3611	Front Jogger Fence	1
10	A379 4127	Middle Guide Seal	1
11	A300 3618	Antistatic Guide Seal	1
12	A300 3626	Lower Guide Seal	1
13	A300 3815	Spring Plate	1
14	A300 3813	Shaft - 6x21.5	1
15	A697 4225	Paper Feed Guide	1
16	A697 4230	Timing Belt - B140S2M910	1
17	A697 4235	Paper Exit Pawl	1
18	A353 2763	Washer - M5	1
19	A300 3621	Rear Jogger Fence	1
20	AX05 0096	Motor - DC 9W	1
21	AA04 3100	Timing Belt - 900 P2M4	1
22	A300 3634	Spring Plate - Timing Belt	1
23	A300 3635	Belt Clamp	1
24	A379 4131	Jogger Fence Slider	1
25	5875 2088	Shoulder Screw - M4	1
26	A300 3661	Slider Guide Rod	1
27	A422 1078	Bushing - 6x12x4mm	1
28	A697 2260	Pulley - 17T	1
29	AA04 3104	Timing Belt - 219 P3M4	1
30	A300 3822	Spacer - 11x15x1	1
31	AB01 0055	Gear - 46Z/13Z	1
32	A697 4228	Cover - Paper Feed Guide	1
33	A697 5750	Decal - R6	1
34	A697 4172	Guide Plate - Front Jogger Rear	1
35	A697 4171	Guide Plate - Front Jogger Fence	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006B	Tapping Screw - M3x6	
102	0451 4006B	Tapping Screw - 4x6	
103	0453 3006B	Tapping Screw - M3x6	
104	0242 0035B	Pan Head Screw - M2x3.5	
105	0720 0040E	Retaining Ring - M4	
106	0710 0020W	Hexagonal Nut - M2	

5.STAPLE TRAY 2 (A697)

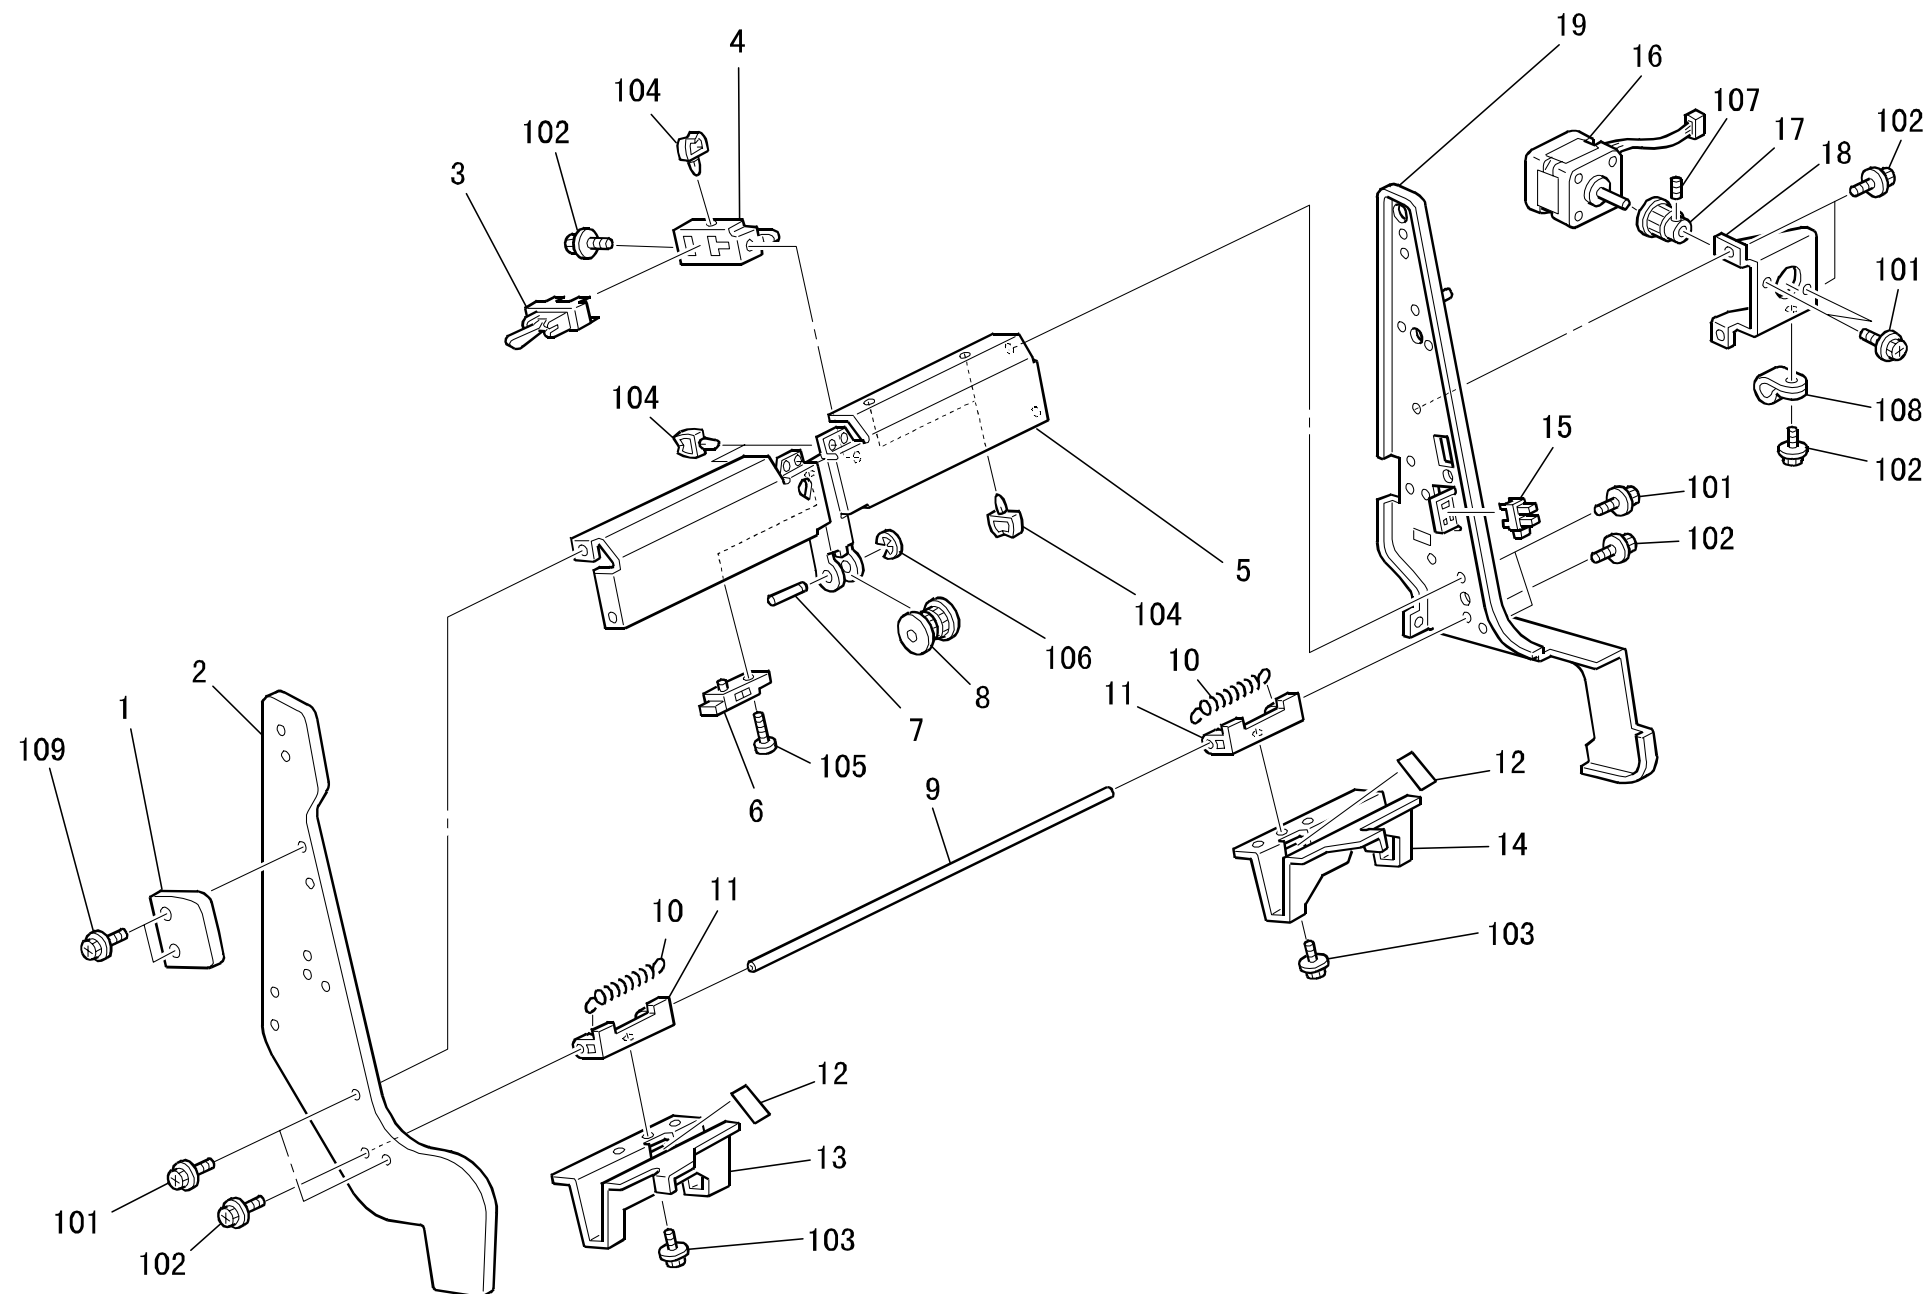


5.STAPLE TRAY 2 (A697)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A300 3551	Grip Stapler Unit	1
2	A697 4190	Front Side Plate - Staple Tray	1
3	AW02 0049	Photointerruptor - Os - 580213-703	1
4	A697 4215	Positioning Sensor Bracket	1
5	A697 4220	Positioning Guide Plate	1
6	AW01 0066	Photosensor - PS-R50D1-B	1
7	A300 3813	Shaft - 6x21.5	1
8	A666 3180	Timing Pulley - Z32	1
9	A300 3661	Slider Guide Rod	1
10	A300 3759	Spring	1
11	A697 4200	Slide Holder	1
12	A697 4206	Mylar Guide	1
13	A697 4210	Front Positioning Fence	1
14	A697 4205	Rear Positioning Fence	1
15	AW02 0075	Photointerrupter	1
16	AX05 0121	Stepper Motor - DC 8.9W	1
17	AB03 0382	Timing Pulley - 24Z	1
18	A379 4155	Jogger Motor Bracket	1
19	A697 4195	Rear Side Plate - Staple Tray	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006B	Tapping Screw - M3x6	
102	0451 4006B	Tapping Screw - 4x6	
103	0450 3008B	Tapping Screw - M3x8	
104	1105 0199	Clamp	
105	0313 0100B	Philips Pan Head Screw - M3x10	
106	0720 0040E	Retaining Ring - M4	
107	0574 0040E	Hexagon Headless Set Screw - M4x4	
108	1105 0005	Nylon Clamp - 3n	

6.STAPLER UNIT (A697)

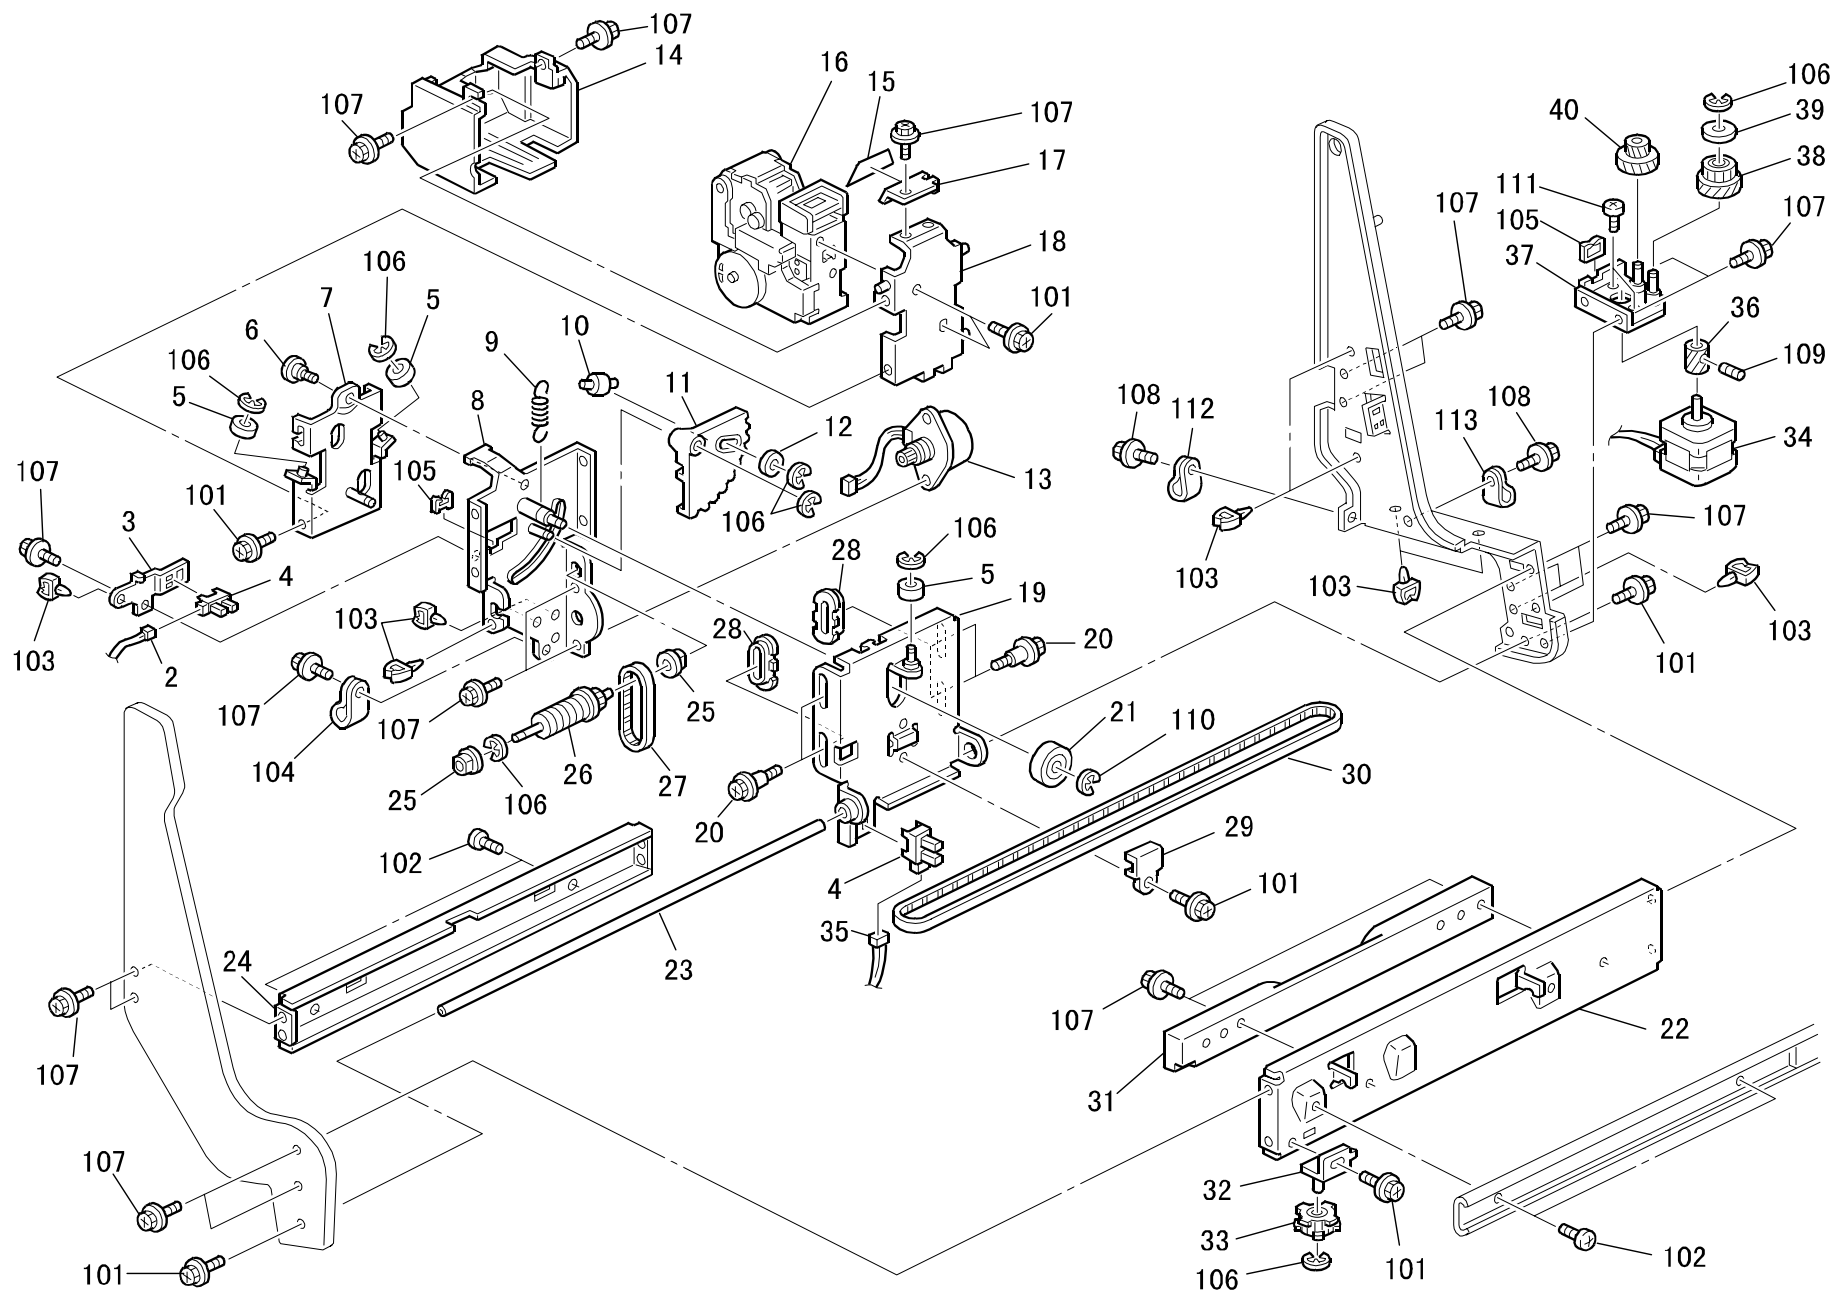


6.STAPLER UNIT (A697)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A697 4190	Front Side Plate - Staple Tray	1
2	A697 5249	Relay Harness	1
3	A697 4135	Sensor Bracket	1
4	AW02 0075	Photointerrupter	1
5	A300 2132	Guide Roller	1
6	5201 1796	Stepped Screw - M4	1
7	A697 4125	Stapler Unit Bracket	1
8	A697 4145	Staple Unit Holder	1
9	A697 4155	Lift Up Spring	1
10	A376 1343	Original Pressure Roller	1
11	A697 4140	Sector Gear - 144Z	1
12	AA13 2024	Spacer - M6	1
13	AX04 0067	Stepping Motor - DC 9W	1
14	A697 4115	Stapler Unit Cover	1
15	A697 4105	Mylar Guide	1
16	AJ01 1010	Stapler - Eh-560	1
17	A697 4100	Guide Plate	1
18	A697 4110	Stapler Unit Base	1
19	A697 4130	Stapler Unit Slider	1
20	A697 4150	Stepped Screw - M5	1
21	A232 3552	Ball Bearing - 8x22x7	1
22	A697 4185	Lower Stay - Staple Unit	1
23	A697 4160	Slider Guide Rod	1
24	A697 4180	Middle Stay - Staple Unit	1
25	5053 0447	Bushing - 6mm	1
26	A697 3215	Pulley - 19T	1
27	A697 3220	Timing Belt - B40S2M112	1
28	A300 3731	Slide Supporter	1
29	A300 3717	Slide Belt Holder - Stapler	1
30	A697 4165	Timing Belt - B40S2M976	1
31	A697 4186	Stapler Guide Rail	1
32	A300 3646	Jogger Idler Bracket	1
33	A697 4170	Pulley - 32T	1
34	AX05 0121	Stepper Motor - DC 8.9W	1
35	A697 5248	Stapler Harness	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	AB01 1141	Gear - 14Z	1
37	A697 4120	Slide Motor Bracket	1
38	AB03 3028	Pulley - 32Z/31Z	1
39	A300 3812	Spacer - 6x22x1.5	1
40	AB01 1085	Gear -14Z/31Z	1
			
101	0451 4006B	Tapping Screw - 4x6	
102	0453 3006B	Tapping Screw - M3x6	
103	1105 0199	Clamp	
104	1105 0062	Nylon Clamp - 6n	
105	1105 0328	Harness Clamp - ES-0505	
106	0720 0040B	Retaining Ring - M4	
107	0451 3006B	Tapping Screw - M3x6	
108	0451 3008B	Tapping Screw - M3x8	
109	0574 0040E	Hexagon Headless Set Screw - M4x4	
110	0720 0060B	Retaining Ring - M6	
111	0313 0040B	Philips Pan Head Screw - M3x4	
112	1105 0372	Nylon Clamp	
113	1105 0061	Nylon Clip - 5n	

7.TRANSPORT SECTION 1 (A697)

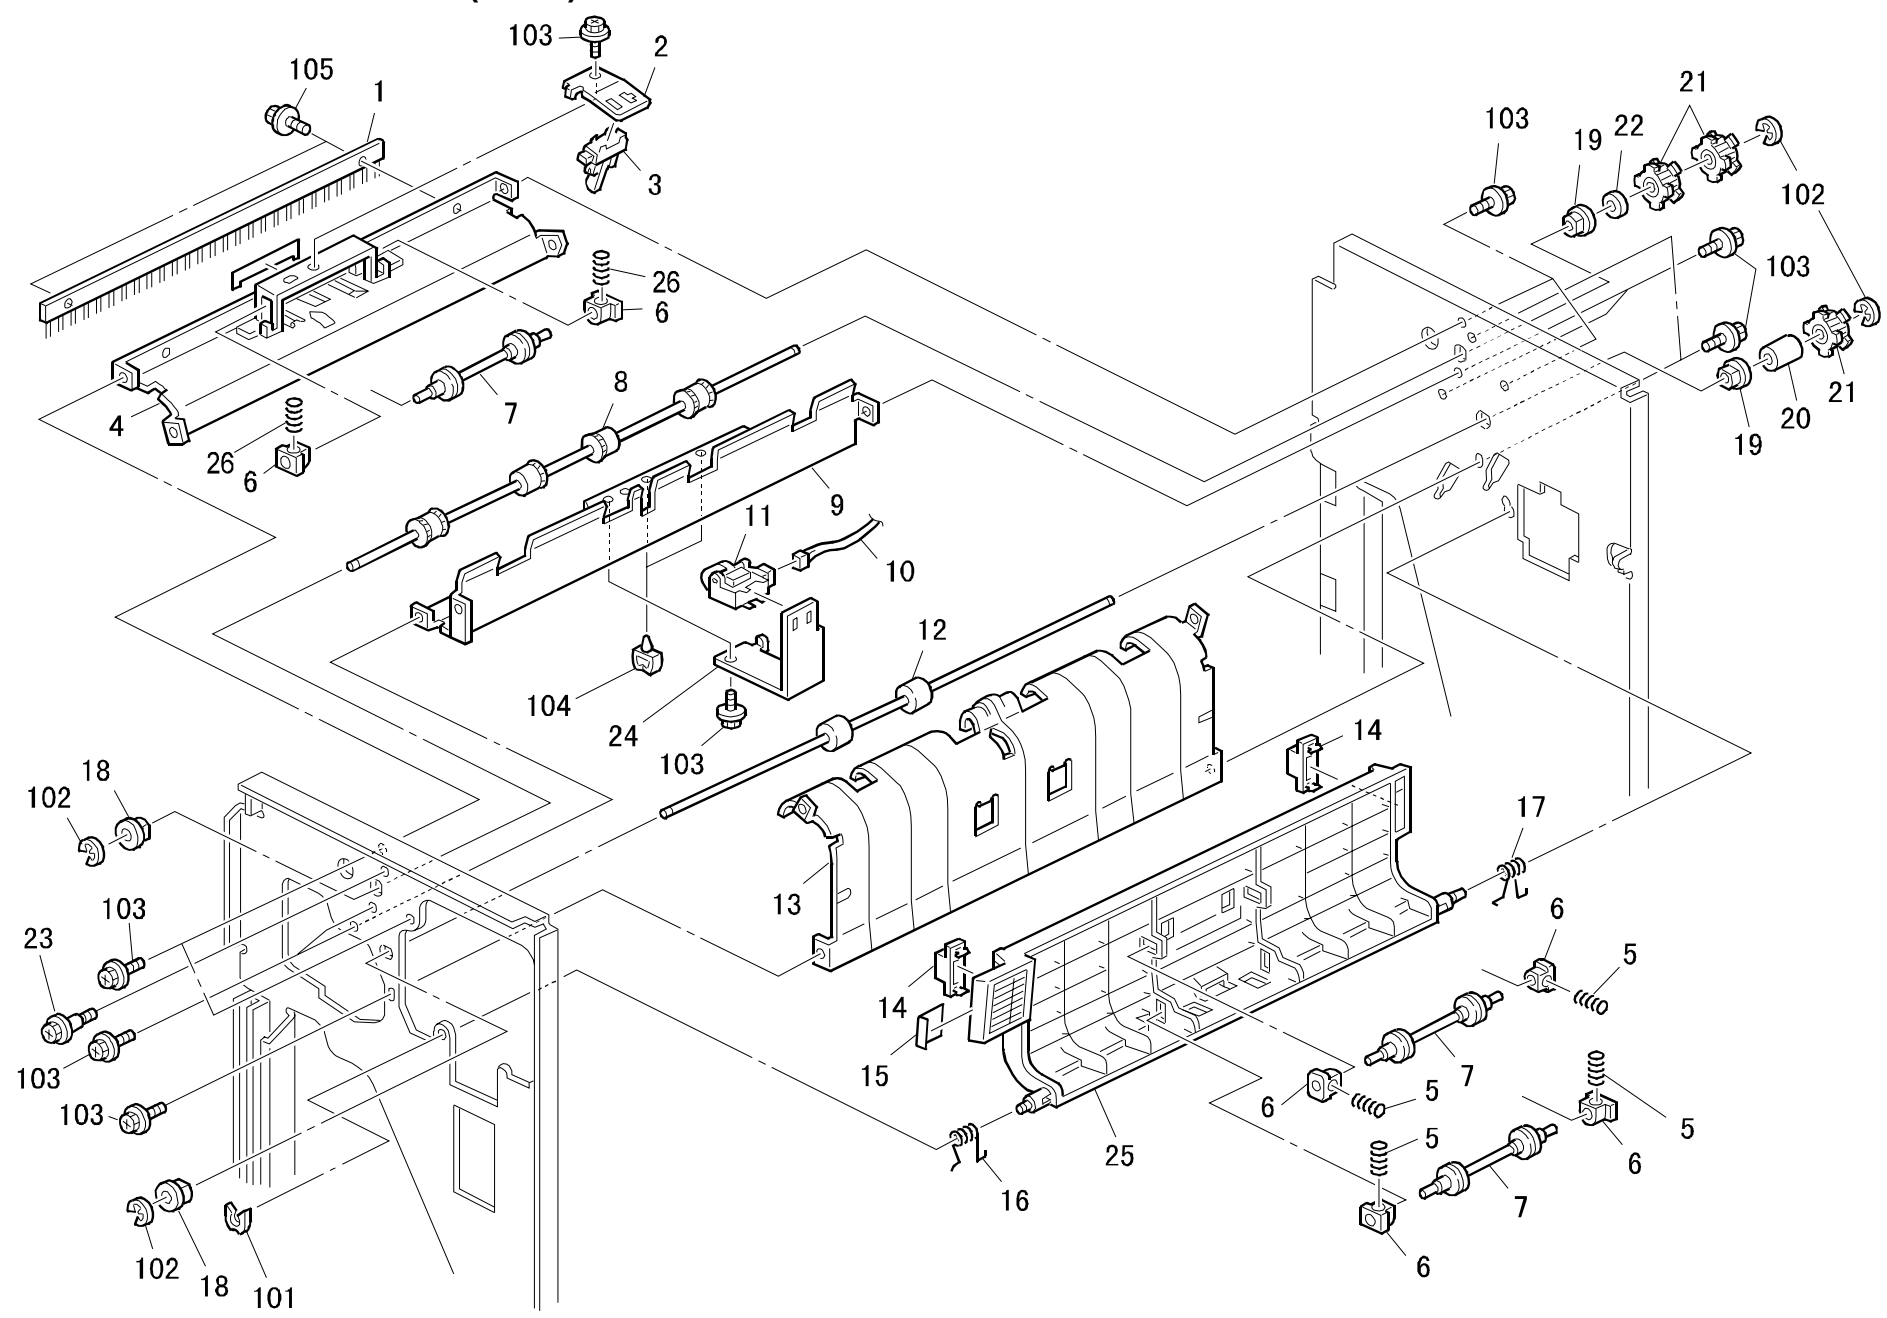


7.TRANSPORT SECTION 1 (A697)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA12 0027	Antistatic Brush	1
2	A697 2230	Exit Sensor Bracket	1
3	AW02 0049	Photointerruptor - OS - 580213-703	1
4	A697 2185	Right Upper Guide - Proof Tray	1
5	AA06 3529	Pressure Spring - 14.5mm	1
6	AA08 0242	Bushing	1
7	AF02 2106	Driven Roller	1
8	A697 2220	Exit Roller - Proof Tray	1
9	A697 2210	Lower Guide - Proof Tray	1
10	A697 5244	Relay Harness - Overflow Sensor	1
11	AW02 0079	Photointerruptor	1
12	A697 2215	Transport Roller	1
13	A697 2225	Left Guide - Proof Tray	1
14	AG07 1010	Magnet Catch	1
15	A697 5300	Decal - R2	1
16	A697 2195	Front Spring - Right Lower Guide	1
17	A697 2200	Rear Spring - Right Lower Guide	1
18	5053 0447	Bushing - 6mm	1
19	AA08 0238	Bushing - M6	1
20	A697 1605	Spacer - 6x10x15.2mm	1
21	AB03 0374	Timing Pulley - 20Z	1
22	A697 1606	Spacer - 6x12x2.7mm	1
23	A666 4170	Stepped Screw - M3x6	1
24	A697 2205	Overflow Sensor Bracket	1
25	A697 2190	Right Lower Guide - Proof Tray	1
26	A697 2187	Pressure Spring - 14.1mm	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0805 0089	Retaining Ring - M4	
102	0720 0040B	Retaining Ring - M4	
103	0451 3006B	Tapping Screw - M3x6	
104	1105 0199	Clamp	
105	0451 4006B	Tapping Screw - 4x6	

8.TRANSPORT SECTION 2 (A697)

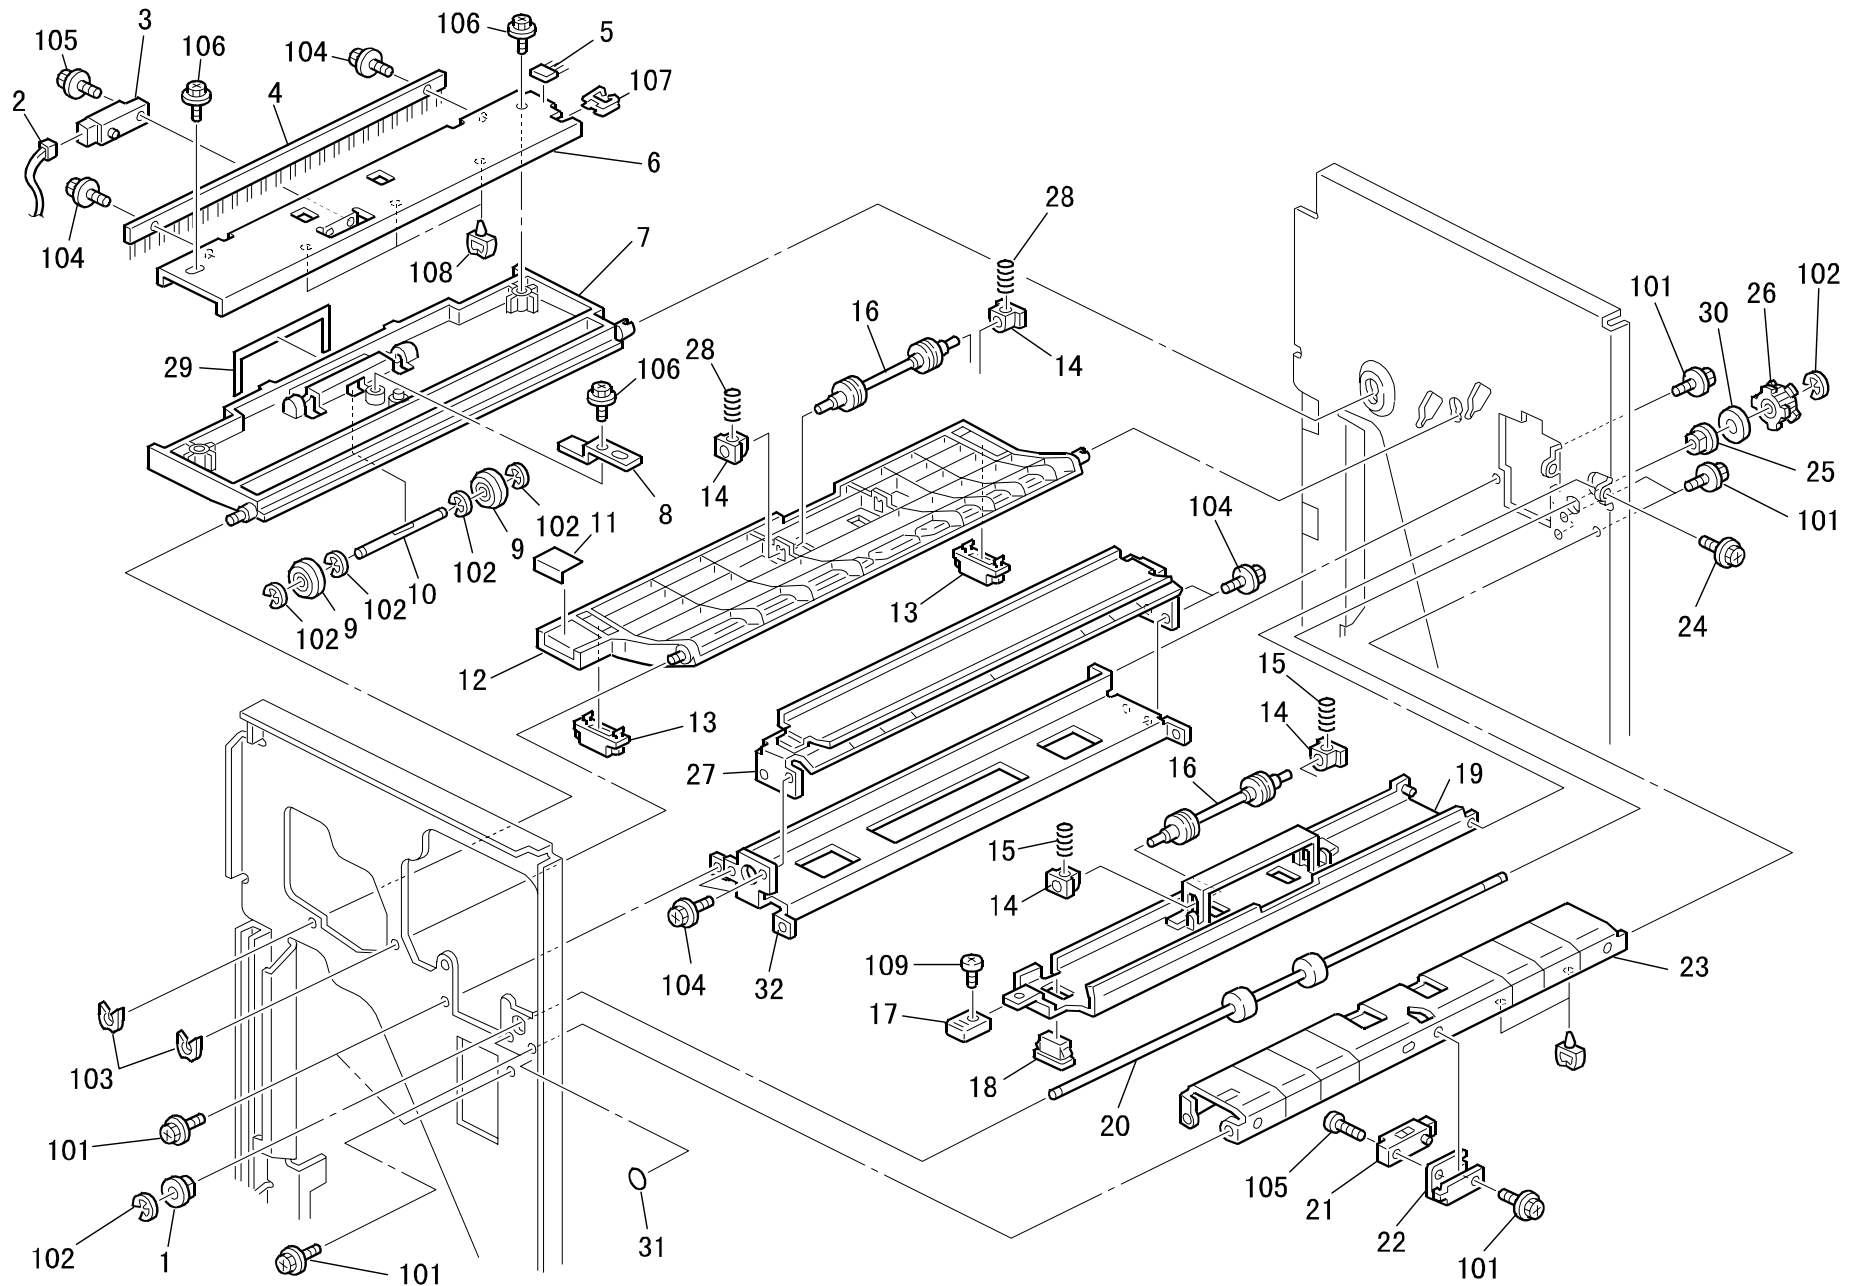


8.TRANSPORT SECTION 2 (A697)

Index No.	Part No.	Description	Q'ty Per Assembly
1	5053 0447	Bushing - 6mm	1
2	A697 5243	Relay Harness - Exit Sensor	1
3	AW01 0070	Photosensor - PS-R11D1-B	1
4	AA12 0027	Antistatic Brush	1
5	A697 2131	Antistatic Brush	1
6	A379 2213	Exit Guide Bracket	1
7	A697 2175	Upper Exit Guide	1
8	A353 3354	Driven Roller Holder	1
9	A353 3351	Exit Driven Roller	1
10	A379 2212	Driven Roller Shaft	1
11	A697 5400	Decal - R3	1
12	A697 2165	Upper Guide - Shift Tray	1
13	AG07 1010	Magnet Catch	1
14	AA08 0242	Bushing - 4mm	1
15	A697 2144	Pressure Spring	1
16	AF02 2106	Driven Roller	1
17	A353 2243	Lever Knob	1
18	A680 1181	Magnetic Catch	1
19	A697 2140	Upper Entrance Guide	1
20	AF02 0439	Transport Roller	1
21	AW01 0066	Photosensor - PS-R50D1-B	1
22	A697 2145	Entrance Sensor Bracket	1
23	A697 2150	Lower Entrance Guide	1
24	A697 1125	Stepped Screw - M3	1
25	AA08 0238	Bushing - M6	1
26	AB03 0374	Timing Pulley - 20Z	1
27	A697 2160	Guide Plate - Punch Unit	1
28	AA06 3529	Pressure Spring - 14.5mm	1
29	A379 2215	Exit Mylar	1
30	A697 1606	Spacer - 6x12x2.7mm	1
31	A379 4751	Decal - R1	1
32	A697 1130	Middle Stay	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006B	Tapping Screw - M3x6	
102	0720 0040B	Retaining Ring - M4	
103	0805 0089	Retaining Ring - M4	
104	0451 4006B	Tapping Screw - 4x6	
105	0313 0100B	Philips Pan Head Screw - M3x10	
106	0450 4008B	Tapping Screw - 4x8	
107	1105 0328	Harness Clamp - ES-0505	
108	1105 0199	Clamp	
109	0313 0040B	Philips Pan Head Screw - M3x4	

9.PUNCH UNIT (A697)

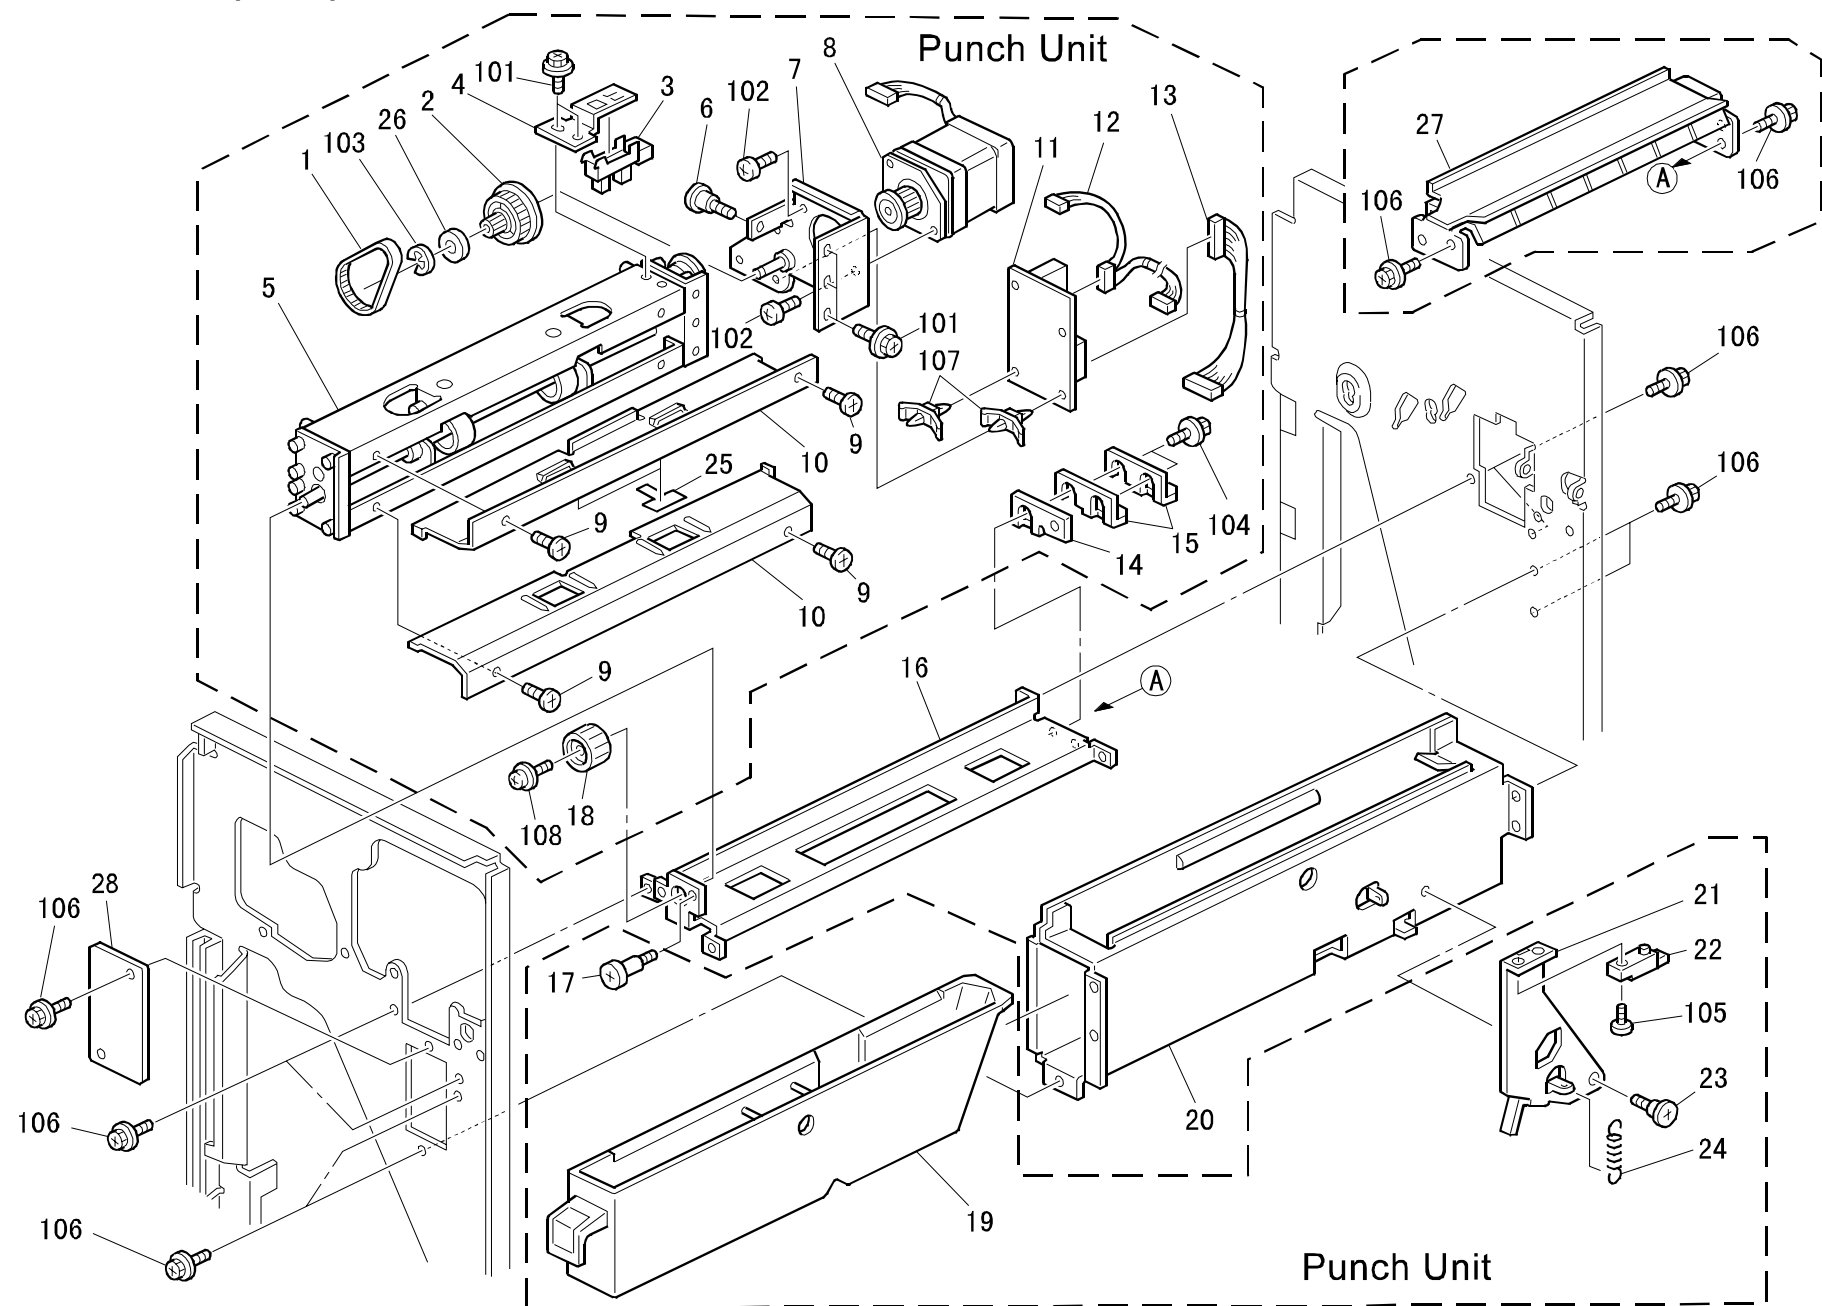


9.PUNCH UNIT (A697)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A812 7126	Timing Belt - 166S2M	1
2	AB03 3061	Pulley - 50/15Z	1
3	A377 7147	H.P Sensor Bracket	1
4	AW02 0075	Photointerrupter	1
5	A812 7110	Punch Unit - 2hole	1
6	5419 5714	Stepped Screw - M4	1
7	A812 7121	Drive Motor Bracket	1
8	A812 7150	Stepped Motor - DC4.48V 12.5W	1
9	5875 2088	Shoulder Screw - M4	1
10	A377 7122	Guide Plate	2
11	A812 5110	Punch Drive Board	1
12	A812 5251	Harness - Punch Control	1
13	A812 5250	Harness Punch Unit	1
14	A812 7411	Spacer - 2mm	1
15	A812 7412	Spacer - 1mm	1
16	A697 1130	Middle Stay	1
17	A471 1085	Stepped Screw	1
18	A377 7161	Knob	1
19	A812 7200	Dust Hopper	1
20	A697 1150	Hopper Bracket	1
21	A812 7321	Dust Hopper Stopper	2
22	AW01 0070	Photosebsor - PS-R11D1-B	1
23	A697 1125	Stepped Screw - M3	1
24	A812 7331	Lock Spring	1
25	A812 7141	Guide Mylar	1
26	A812 7124	Positioning Screw	1
27	A697 2160	Guide Plate - Punch Unit	1
28	A697 1160	Hopper Cover	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4006B	Tapping Screw - 4x6	
102	0313 0040B	Philips Pan Head Screw - M3x4	
103	0720 0060E	Retaining Ring - M6	
104	0951 4006W	Philips Screw With Flate Washer - M4x6	
105	0313 0100B	Philips Pan Head Screw - M3x10	
106	0451 3006B	Tapping Screw - M3x6	
107	1105 0159	PCB Stud	

10.PAPER EXIT SECTION 1 (A697)

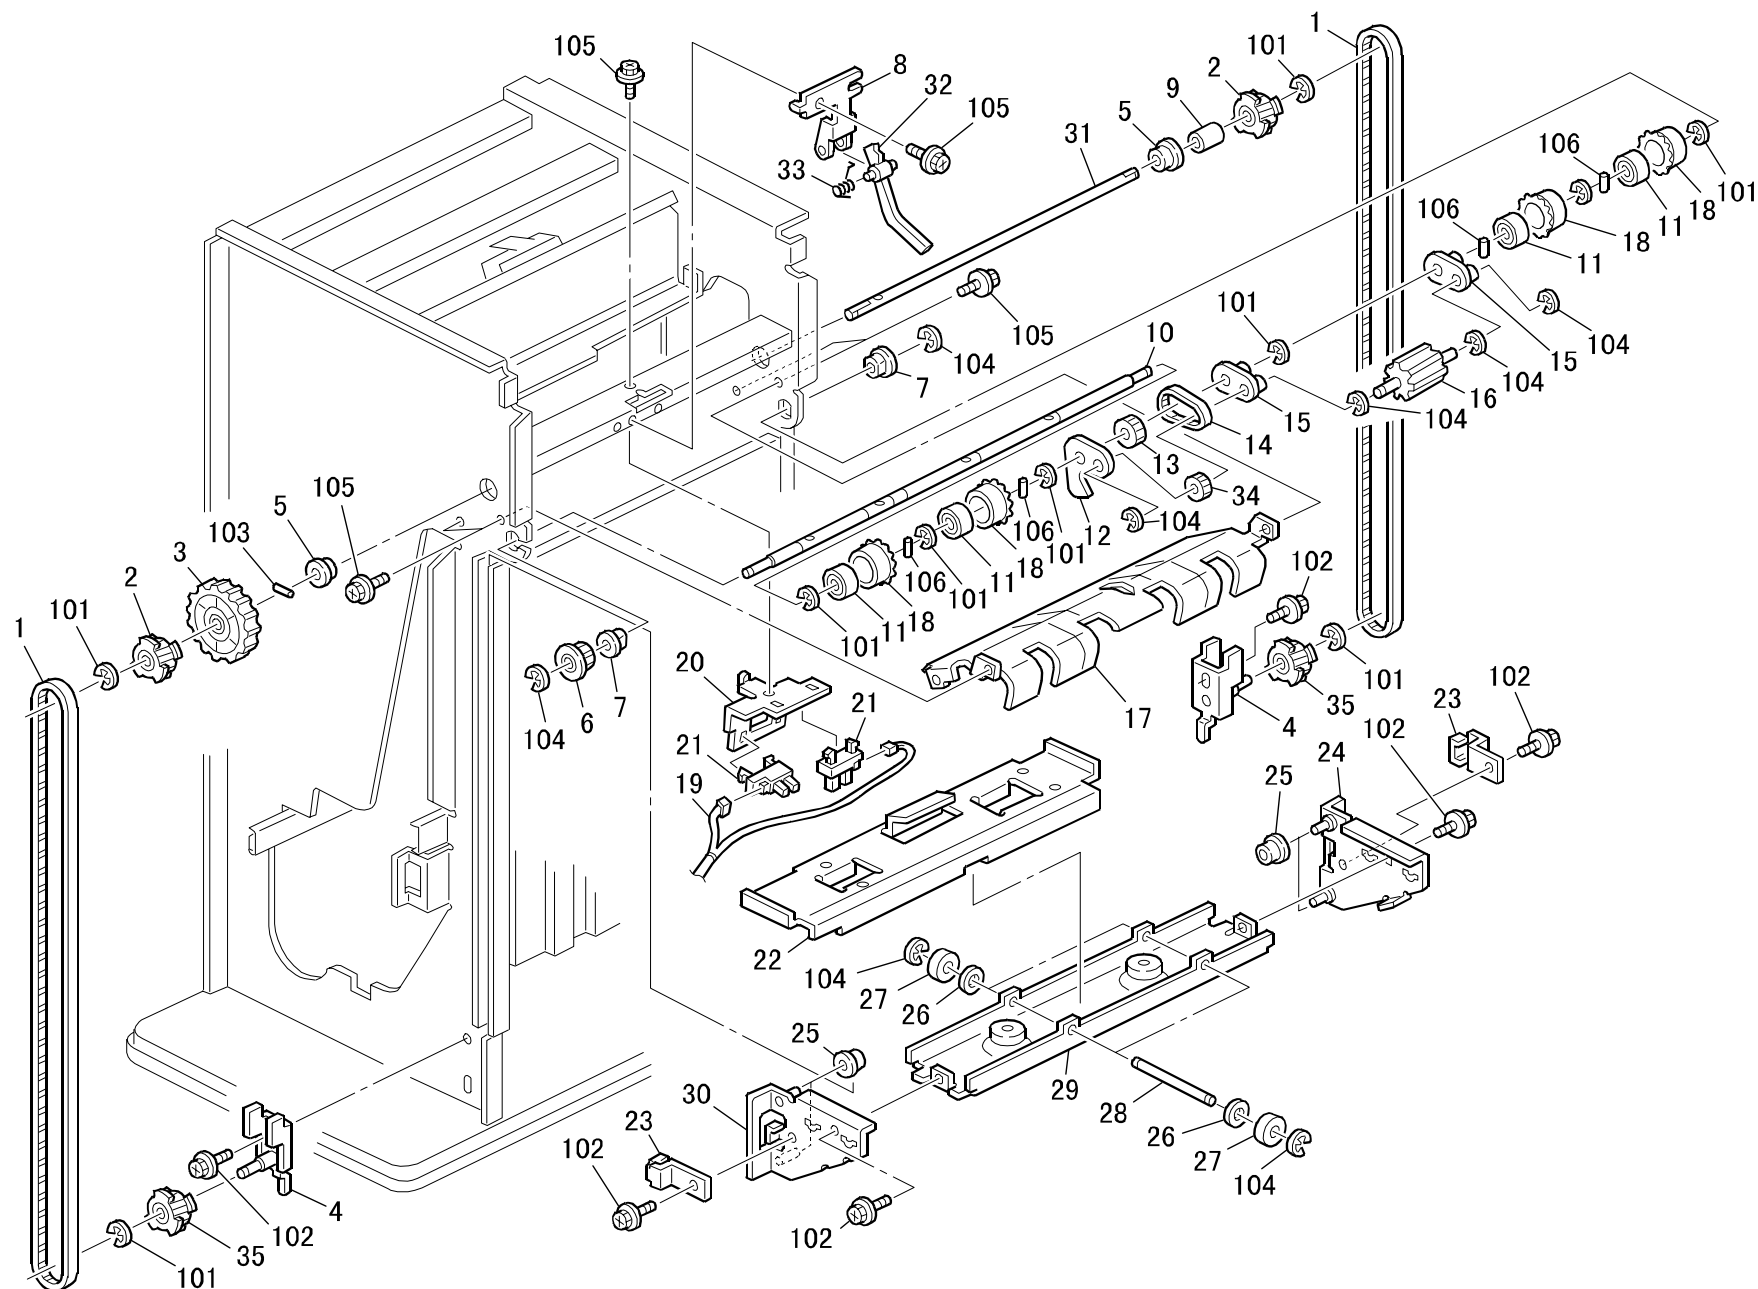


10.PAPER EXIT SECTION 1 (A697)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A697 3155	Timing Belt - B60S5M1420	1
2	A697 3180	Pulley - 18T	2
3	A697 3170	Gear - 42Z	1
4	A697 3190	Tightener	1
5	C203 5135	Bushing - 10x14x5.9	1
6	AB03 0340	Brush Roller Pulley	1
7	5053 0447	Bushing - 6mm	1
8	A353 3172	Actuator Bracket	1
9	A697 3175	Spacer - 10x14x13.5mm	1
10	A379 2111	Exit Roller Shaft	1
11	A353 3201	Exit Roller	1
12	A353 3197	Rear Arm	1
13	AB03 0377	Timing Pulley - 28Z	1
14	AA04 3181	Timing Belt - B40S2M80	1
15	A353 3192	Front Arm	1
16	A379 2115	Reverse Roller	1
17	A697 2180	Lower Exit Guide	1
18	A379 2112	Exit Roller Ring	1
19	A697 5242	Harness - Paper Hight Sensor	1
20	A353 3181	Exit Sensor Bracket	1
21	AW02 0006	Photointerruptor - EE-SX460-P2	1
22	A697 3125	Shift Tray Holder	1
23	A697 3150	Fixing Plate - Timing Belt	1
24	A697 3110	Front Side Plate - Sift Tray	1
25	A379 3316	Shift Guide Roller	1
26	AA13 2024	Spacer - M6	1
27	A353 3272	Guide Roller	1
28	A353 3271	Tray Shift Shaft	1
29	A697 3120	Shift Tray Base	1
30	A697 3115	Rear Side Plate - Shift Tray	1
31	A697 3165	Tray Drive Shaft	1
32	A379 1225	Upper Sensor Actuator	1
33	A353 3173	Pressure Spring	1
34	AB03 0378	Timing Pulley - 20Z	1
35	A697 3185	Pulley - 18T	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0720 0060B	Retaining Ring - M6	
102	0451 3006B	Tapping Screw - M3x6	
103	0634 0200G	Parallel Pin - 4x20	
104	0720 0040B	Retaining Ring - M4	
105	0451 4006B	Tapping Screw - 4x6	
106	0633 0120G	Parallel Pin - 3x12	

11.PAPER EXIT SECTION 2 (A697)

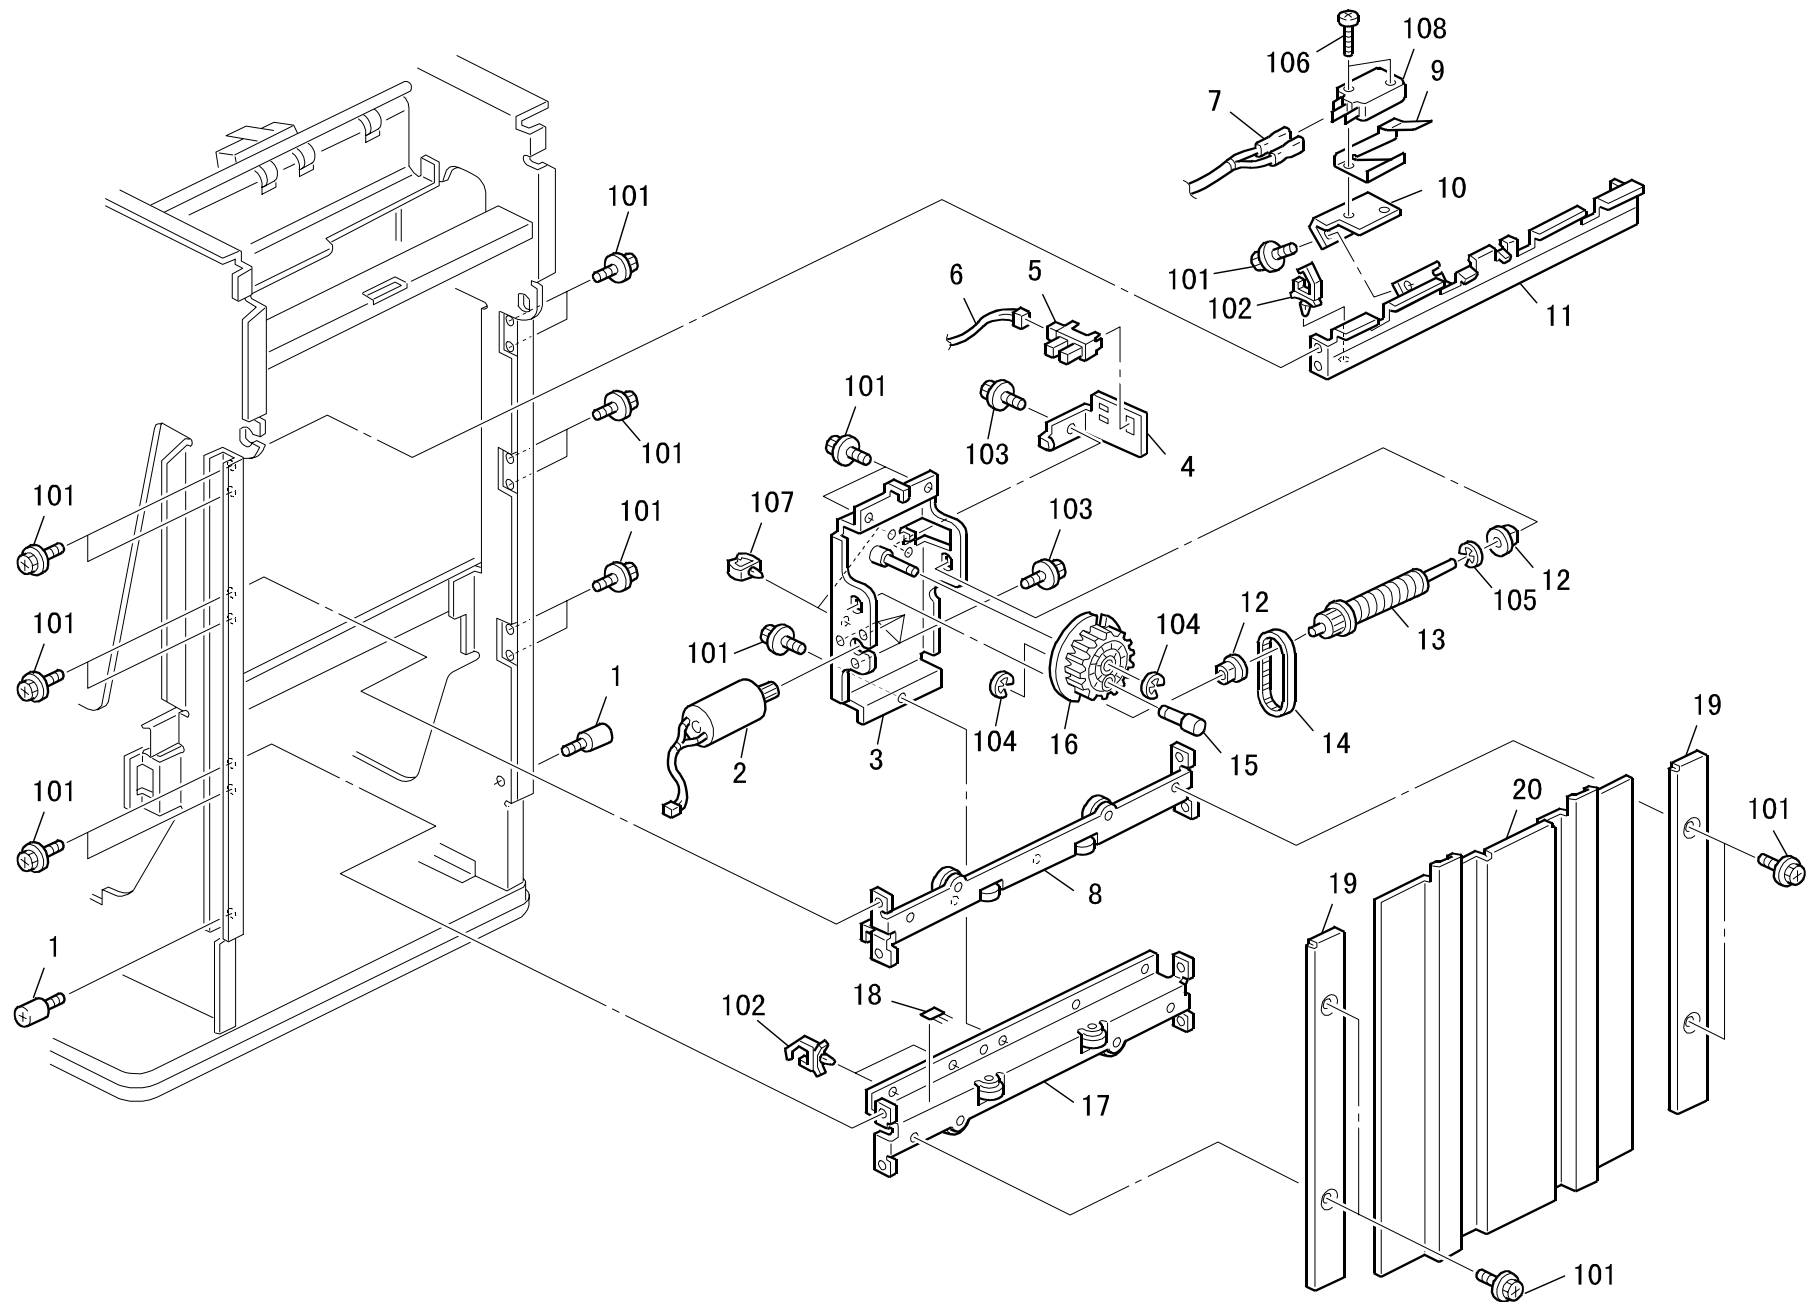


11.PAPER EXIT SECTION 2 (A697)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA14 3059	Pin - 6x16	1
2	AX05 0115	DC Motor - DC 7.2W	1
3	A697 3210	Shift Motor Bracket	1
4	A697 3205	Shift Sensor Bracket	1
5	AW02 0075	Photointerrupter	1
6	A697 5253	Relay Harness - Shift Tray	1
7	A697 5245	Shift Tray Harness	1
8	A697 3120	Shift Tray Base	1
9	A379 3133	Switch Lever	1
10	A379 3132	Switch Bracket	1
11	A697 3100	Exit Roller Cover	1
12	5053 0447	Bushing - 6mm	1
13	A697 3215	Pulley - 19T	1
14	A697 3220	Timing Belt - B40S2M112	1
15	A697 3200	Worm Wheel Shaft	1
16	A697 3195	Worm Wheel	1
17	A379 3121	Exit Stay	1
18	A697 2131	Antistatic Brush	1
19	A697 3109	End Fence Cover	1
20	A697 3105	End Fence	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4006B	Tapping Screw - 4x6	
102	1105 0310	Harness Clamp - LWS-1S	
103	0451 3006B	Tapping Screw - M3x6	
104	0720 0060B	Retaining Ring - M6	
105	0720 0040B	Retaining Ring - M4	
106	0313 0140B	Philips Pan Head Screw - M3x14	
107	1105 0199	Clamp	
108	1204 1081	Microswitch	

12.FRAME SECTION (A697)

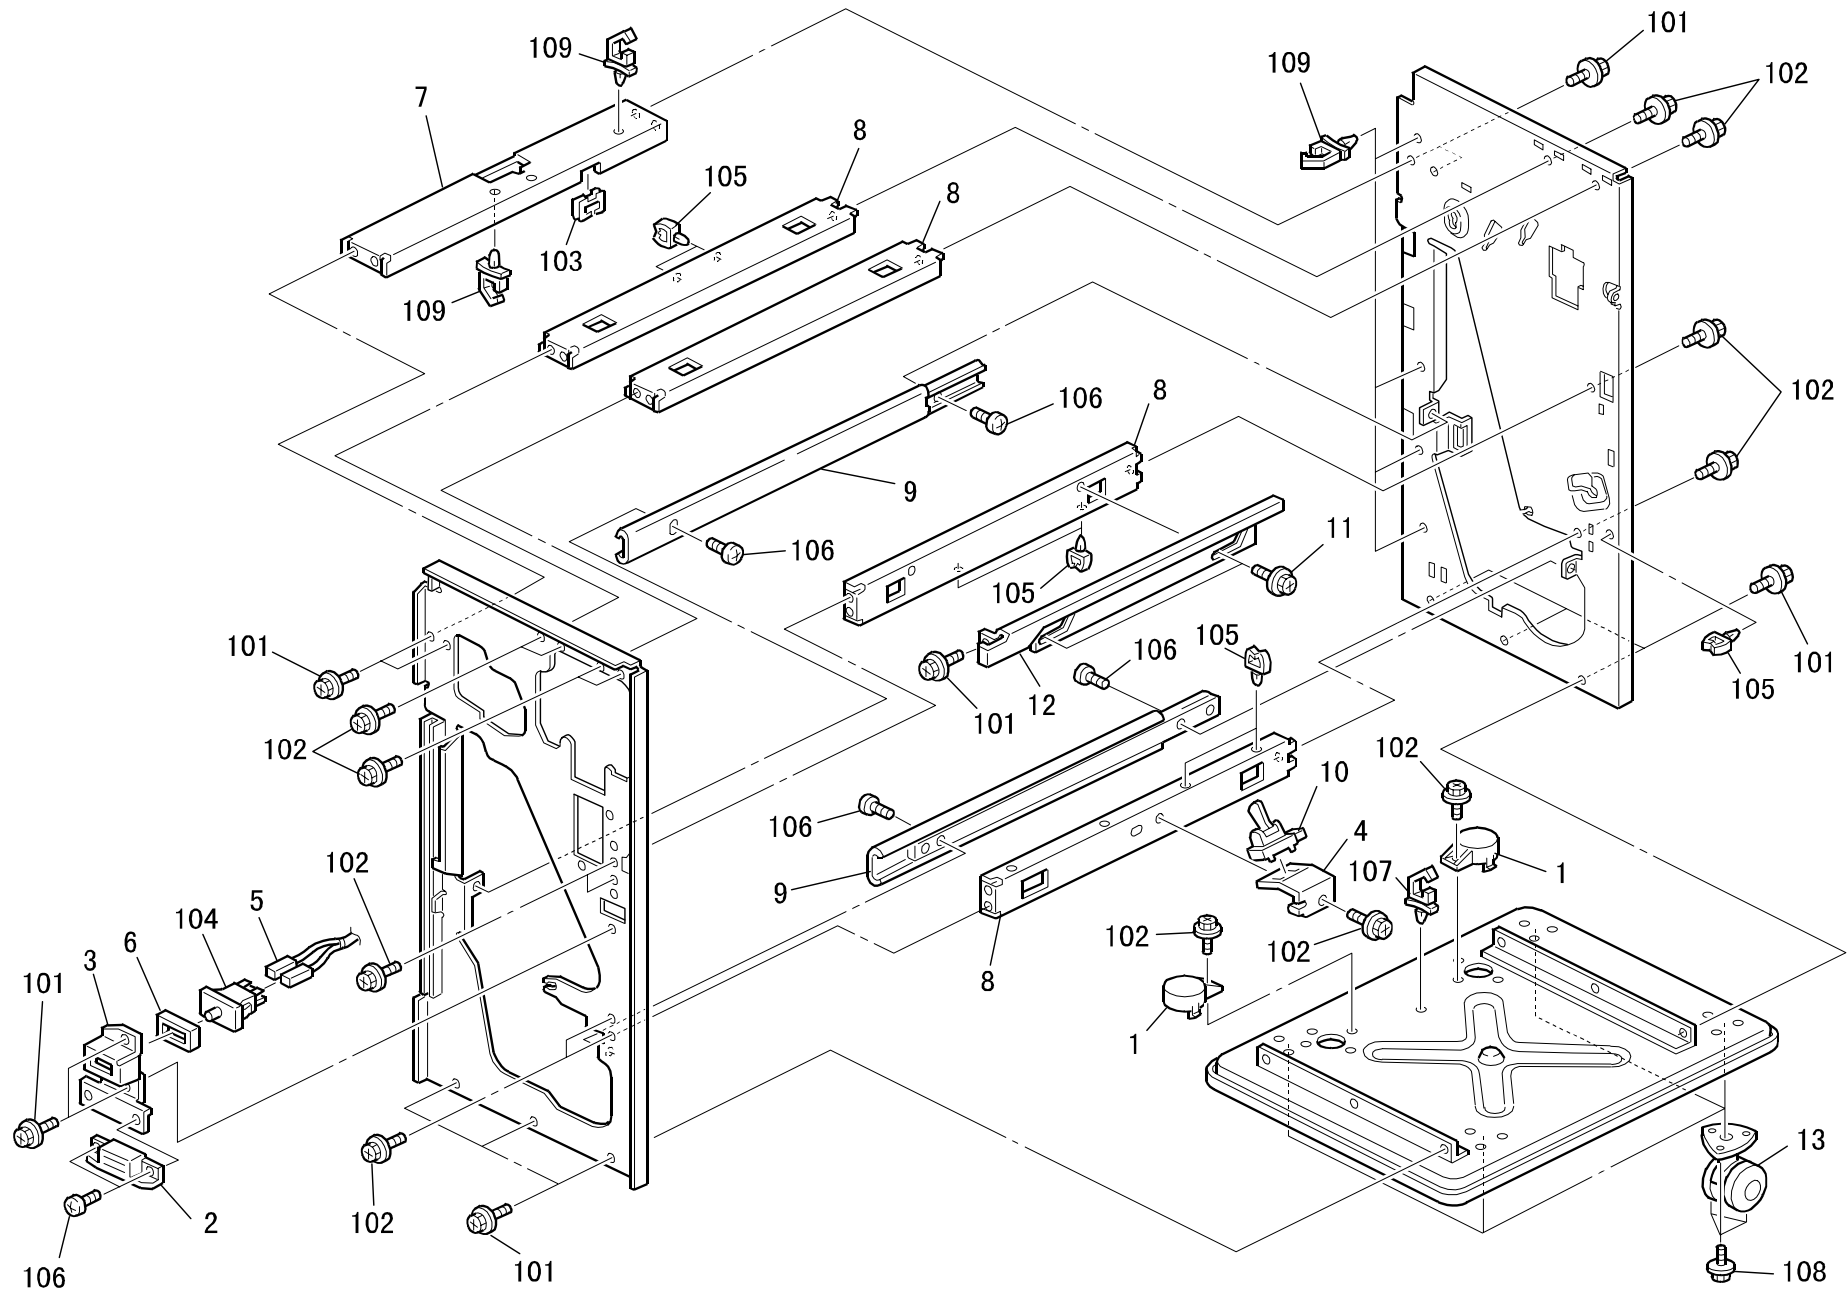


12.FRAME SECTION (A697)

Index No.	Part No.	Description	Q'ty Per Assembly
2	AG07 0004	Magnetic Catch	1
3	A377 1661	Door Switch Cover	1
4	A697 2125	Exit Sensor Bracket	1
5	A697 5240	Safety Switch Harness	1
6	A377 1662	Door Switch Actuator	1
7	A379 1211	Upper Exit Stay	1
8	A697 1100	Stay	1
9	A697 1120	Slide Rail	1
10	AW02 0049	Photointerruptor - OS - 580213-703	1
11	A697 1125	Stepped Screw - M3	1
12	A697 1127	Joint Lever	1
13	AH01 2019	Caster	1
15	A697 1117	Cap	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4006B	Tapping Screw - 4x6	
102	0451 3006B	Tapping Screw - M3x6	
103	1105 0328	Harness Clamp - ES-0505	
104	1204 2384	Interlock Switch	
105	1105 0199	Clamp	
106	0453 3006B	Tapping Screw - M3x6	
107	1105 0291	Harness Clamp - LWS-3S	
108	0451 4008B	Philips Tapping Screw - M4x8	
109	1105 0310	Harness Clamp - LWS-1S	

13.DRIVE SECTION (A697)

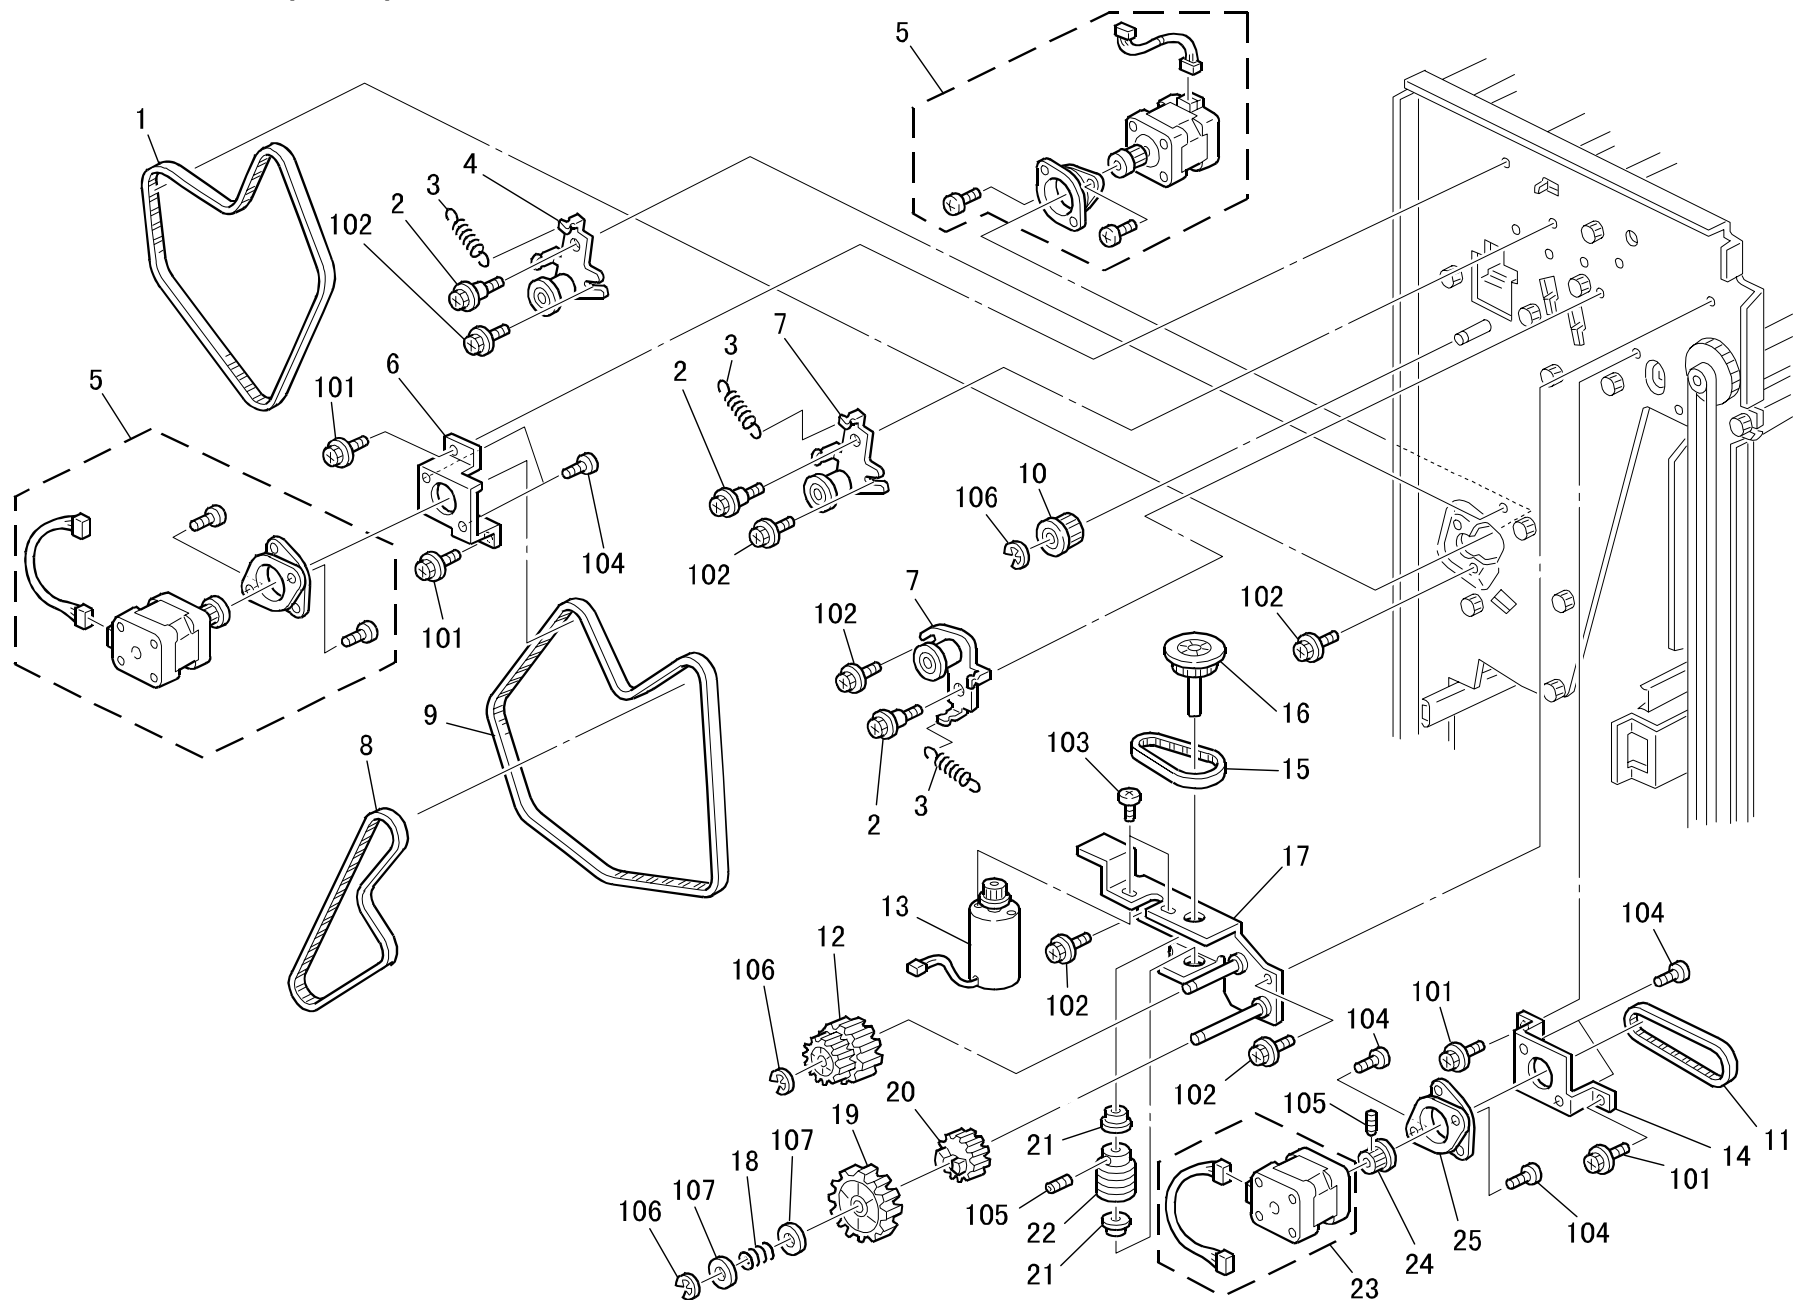


13.DRIVE SECTION (A697)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A697 1615	Timing Belt - B40S3M537	1
2	A697 1125	Stepped Screw - M3	1
3	5442 4121	Spring - Oil Blade	1
4	A697 1625	Tightener	1
5	A697 1620	Stepping Motor - DC 6.3W	1
6	A612 1612	Bracket - Motor	1
7	A697 1601	Tightener	1
8	A697 1604	Timing Belt - B40S3M423	1
9	A697 1610	Timing Belt - B40S3M765	1
10	AB03 0273	Timing Pulley - T20	1
11	AA04 3238	Timing Belt - B40S2M206	1
12	A697 3145	Gear - 36Z/18Z	1
13	AX05 0074	DC Motor - 24V - 9.9W	1
14	A379 1711	Motor Bracket	1
15	AA04 3054	Timing Belt - 142 P2M4	1
16	A697 3225	Worm Wheel Shaft	1
17	A697 3130	Lift Motor Bracket	1
18	A353 3113	Pressure Spring	1
19	A697 3140	Gear - 30Z	1
20	A697 3135	Gear - 18Z	1
21	A232 3562	Ball Bearing - 6x12x4mm	1
22	AB01 3709	Worm Gear	1
23	AX05 0120	Stepper Motor - DC 7.7W	1
24	AB03 0216	Pulley - 15Z	1
25	A663 2113	Cushion - Stepping Motor	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4006B	Tapping Screw - 4x6	
102	0451 3006B	Tapping Screw - M3x6	
103	0313 0050B	Philips Pan Head Screw - M3x5	
104	0313 0040B	Philips Pan Head Screw - M3x4	
105	0574 0040E	Hexagon Headless Set Screw - M4x4	
106	0720 0060E	Retaining Ring - M6	
107	0807 5056	Washer - 8.1mm	

14.ELECTRICAL SECTION (A697)






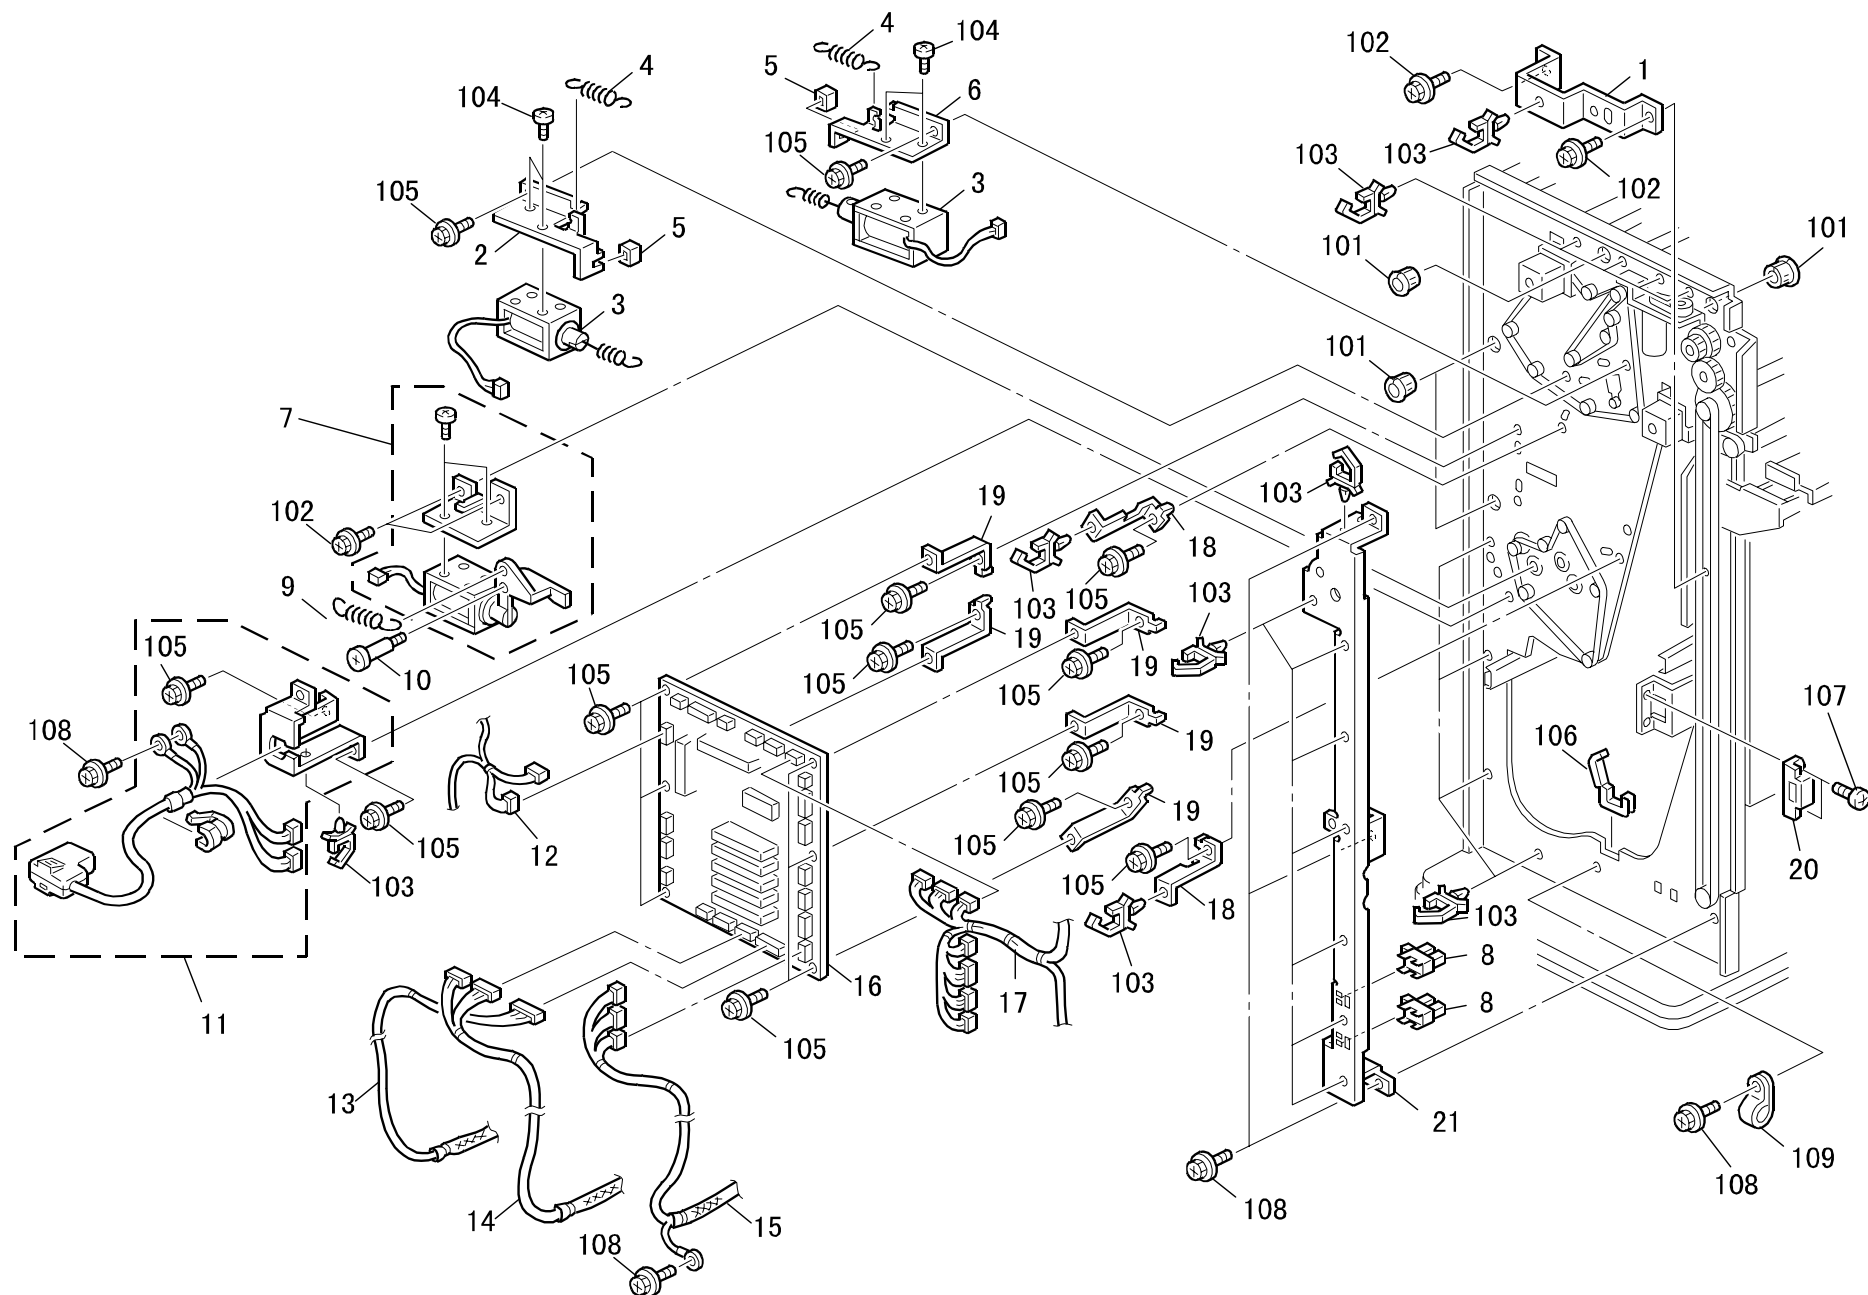


14.ELECTRICAL SECTION (A697)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A379 1172	Upper Joint Bracket	1
2	A697 2105	Bracket - Junction Gate Solenoid	1
3	A697 2100	Junction Gate Solenoid	1
4	AA06 0092	Release Spring	1
5	A697 2102	Dumper - Junction Gate Solenoid	1
6	A697 2235	Bracket - Junction Gate Solenoid	1
7	A697 2003	Positioning Roller Solenoid	1
8	AW02 0075	Photointerrupter	1
9	A300 3865	Release Spring	1
10	A300 3858	Stepped Screw - M4	1
11	A697 5201	Interface Harness	1
12	A697 5246	Entrance Sensor Harness	1
13	A697 5252	Stapler Motor Harness	1
14	A697 5251	Harness - Stapler Tray Sensor	1
15	A697 5248	Stapler Harness	1
16	A697 5110	Finisher Main Board	1
17	A697 5241	Main Harness	1
18	A300 3151	Support Bracket	1
19	A697 5105	Main Board Bracket	1
20	AG07 0004	Magnetic Catch	1
21	A697 3160	Sensor Bracket	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	1106 0411	Bushing - 11.5mm	
102	0451 4006B	Tapping Screw - 4x6	
103	1105 0310	Harness Clamp - LWS-1S	
104	0313 0040B	Philips Pan Head Screw - M3x4	
105	0451 3006B	Tapping Screw - M3x6	
106	1105 0334	Edge - 17	
107	0453 3006B	Tapping Screw - M3x6	
108	0451 3008B	Tapping Screw - M3x8	
109	1105 0372	Nylon Clamp	

15.DECAL AND DOCUMENT (A697)

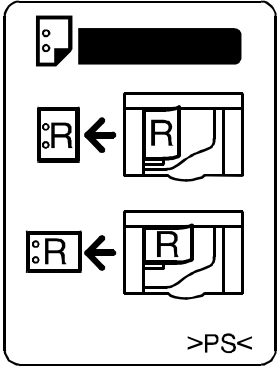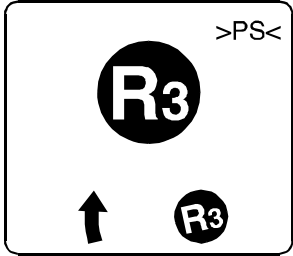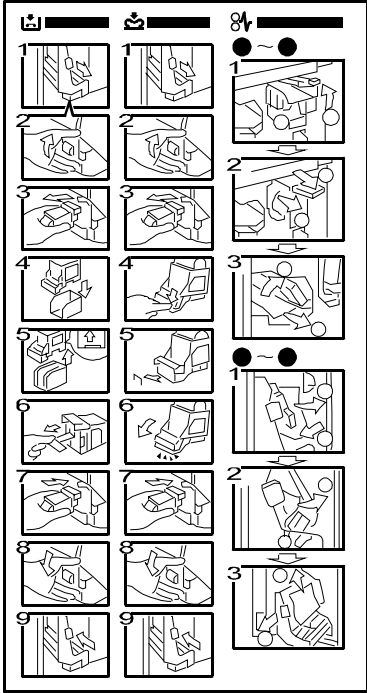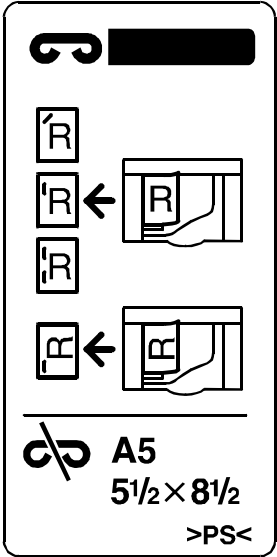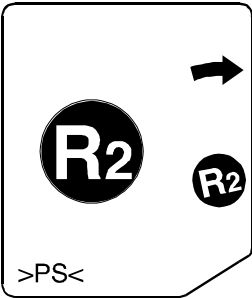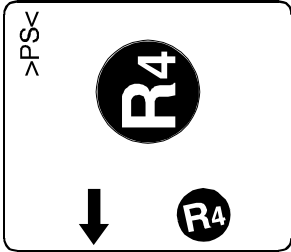1	2	3	4	9
				
5	6	7	8	
				

15.DECAL AND DOCUMENT (A697)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A606 1890	Decal - Punch Position (A4)	1
1	A606 8195	Decal - Punch Position (LT)	1
2	A697 5750	Decal - R6	1
3	A379 4751	Decal - R1	1
4	A697 5400	Decal - R3	1
5	A697 5900	Staple Position Decal	1
6	A697 5600	Decal - Replacement R5	1
7	A697 5300	Decal - R2	1
8	A697 5500	Decal - Replacement R4	1
9	A697 5700	Decal Misfeed Removal	1

Index No.	Part No.	Description	Q'ty Per Assembly

PARTS INDEX

Part No.	Description	Page and Index No.
A697 1100	Stay	29- 8
A697 1117	Cap	29- 15
A697 1120	Slide Rail	29- 9
A697 1125	Stepped Screw - M3	31- 2
A697 1125	Stepped Screw - M3	21- 24
A697 1125	Stepped Screw - M3	29- 11
A697 1125	Stepped Screw - M3	23- 23
A697 1127	Joint Lever	29- 12
A697 1130	Middle Stay	23- 16
A697 1130	Middle Stay	21- 32
A697 1135	Front Joint Bracket	7- 21
A697 1136	Rear Joint Bracket	7- 20
A697 1137	Grounding Plate	7- 22
A697 1150	Hopper Bracket	23- 20
A697 1160	Hopper Cover	23- 28
A697 1601	Tightener	31- 7
A697 1604	Timing Belt - B40S3M423	31- 8
A697 1605	Spacer - 6x10x15.2mm	19- 20
A697 1605	Spacer - 6x10x15.2mm	9- 12
A697 1606	Spacer - 6x12x2.7mm	21- 30
A697 1606	Spacer - 6x12x2.7mm	9- 24
A697 1606	Spacer - 6x12x2.7mm	11- 11
A697 1606	Spacer - 6x12x2.7mm	19- 22
A697 1610	Timing Belt - B40S3M765	31- 9
A697 1615	Timing Belt - B40S3M537	31- 1
A697 1620	Stepping Motor - DC 6.3W	31- 5
A697 1625	Tightener	31- 4
A697 2003	Positioning Roller Solenoid	33- 7
A697 2100	Junction Gate Solenoid	33- 3
A697 2102	Dumper - Junction Gate Solenoid	33- 5
A697 2105	Bracket - Junction Gate Solenoid	33- 2
A697 2110	Junction Gate	9- 7
A697 2115	Left Guide - Vertical Transport	11- 6
A697 2120	Right Guide - Vertical Transport	11- 8
A697 2125	Exit Sensor Bracket	29- 4

Part No.	Description	Page and Index No
A697 2130	Upper Entrance Guide - Staple Tray	11- 16
A697 2131	Antistatic Brush	27- 18
A697 2131	Antistatic Brush	11- 20
A697 2131	Antistatic Brush	21- 5
A697 2135	Exit Roller - Staple Tray	11- 14
A697 2140	Upper Entrance Guide	21- 19
A697 2144	Pressure Spring	21- 15
A697 2145	Entrance Sensor Bracket	21- 22
A697 2150	Lower Entrance Guide	21- 23
A697 2155	Lower Guide - Junction Gate	9- 10
A697 2160	Guide Plate - Punch Unit	21- 27
A697 2160	Guide Plate - Punch Unit	23- 27
A697 2165	Upper Guide - Shift Tray	21- 12
A697 2170	Lower Guide - Shift Tray	9- 6
A697 2175	Upper Exit Guide	21- 7
A697 2180	Lower Exit Guide	25- 17
A697 2185	Right Upper Guide - Proof Tray	19- 4
A697 2187	Pressure Spring - 14.1mm	19- 26
A697 2190	Right Lower Guide - Proof Tray	19- 25
A697 2195	Front Spring - Right Lower Guide	19- 16
A697 2200	Rear Spring - Right Lower Guide	19- 17
A697 2205	Overflow Sensor Bracket	19- 24
A697 2210	Lower Guide - Proof Tray	19- 9
A697 2215	Transport Roller	19- 12
A697 2220	Exit Roller - Proof Tray	19- 8
A697 2225	Left Guide - Proof Tray	19- 13
A697 2230	Exit Sensor Bracket	19- 2
A697 2235	Bracket - Junction Gate Solenoid	33- 6
A697 2245	Junction Gate - Proof Tray	9- 9
A697 2250	Lower Relay Guide	7- 18
A697 2251	Upper Relay Guide	7- 19
A697 2260	Pulley - 17T	13- 28
A697 2260	Pulley - 17T	9- 23
A697 2265	Positioning Roller	9- 15
A697 2270	Guide Mylar - Stapler Tray	11- 10

Part No.	Description	Page and Index No.
A697 3031	Shift Tray	7- 8
A697 3041	Sub Shift Tray	7- 12
A697 3100	Exit Roller Cover	27- 11
A697 3105	End Fence	27- 20
A697 3109	End Fence Cover	27- 19
A697 3110	Front Side Plate - Sift Tray	25- 24
A697 3115	Rear Side Plate - Shift Tray	25- 30
A697 3120	Shift Tray Base	27- 8
A697 3120	Shift Tray Base	25- 29
A697 3125	Shift Tray Holder	25- 22
A697 3130	Lift Motor Bracket	31- 17
A697 3135	Gear - 18Z	31- 20
A697 3140	Gear - 30Z	31- 19
A697 3145	Gear - 36Z/18Z	31- 12
A697 3150	Fixing Plate - Timing Belt	25- 23
A697 3155	Timing Belt - B60S5M1420	25- 1
A697 3160	Sensor Bracket	33- 21
A697 3165	Tray Drive Shaft	25- 31
A697 3170	Gear - 42Z	25- 3
A697 3175	Spacer - 10x14x13.5mm	25- 9
A697 3180	Pulley - 18T	25- 2
A697 3185	Pulley - 18T	25- 35
A697 3190	Tightener	25- 4
A697 3195	Worm Wheel	27- 16
A697 3200	Worm Wheel Shaft	27- 15
A697 3205	Shift Sensor Bracket	27- 4
A697 3210	Shift Motor Bracket	27- 3
A697 3215	Pulley - 19T	17- 26
A697 3215	Pulley - 19T	27- 13
A697 3220	Timing Belt - B40S2M112	27- 14
A697 3220	Timing Belt - B40S2M112	17- 27
A697 3225	Worm Wheel Shaft	31- 16
A697 4100	Guide Plate	17- 17
A697 4105	Mylar Guide	17- 15
A697 4110	Stapler Unit Base	17- 18

Part No.	Description	Page and Index No.
A697 4115	Stapler Unit Cover	17- 14
A697 4120	Slide Motor Bracket	17- 37
A697 4125	Stapler Unit Bracket	17- 7
A697 4130	Stapler Unit Slider	17- 19
A697 4135	Sensor Bracket	17- 3
A697 4140	Sector Gear - 144Z	17- 11
A697 4145	Staple Unit Holder	17- 8
A697 4150	Stepped Screw - M5	17- 20
A697 4155	Lift Up Spring	17- 9
A697 4160	Slider Guide Rod	17- 23
A697 4165	Timing Belt - B40S2M976	17- 30
A697 4170	Pulley - 32T	13- 7
A697 4170	Pulley - 32T	17- 33
A697 4171	Guide Plate - Front Jogger Fence	13- 35
A697 4172	Guide Plate - Front Jogger Rear	13- 34
A697 4175	Upper Stay - Staple Unit	13- 4
A697 4180	Middle Stay - Staple Unit	17- 24
A697 4185	Lower Stay - Staple Unit	17- 22
A697 4186	Stapler Guide Rail	17- 31
A697 4190	Front Side Plate - Staple Tray	15- 2
A697 4190	Front Side Plate - Staple Tray	17- 1
A697 4195	Rear Side Plate - Staple Tray	15- 19
A697 4200	Slide Holder	15- 11
A697 4205	Rear Positioning Fence	15- 14
A697 4206	Mylar Guide	15- 12
A697 4210	Front Positioning Fence	15- 13
A697 4215	Positioning Sensor Bracket	15- 4
A697 4220	Positioning Guide Plate	15- 5
A697 4225	Paper Feed Guide	13- 15
A697 4228	Cover - Paper Feed Guide	13- 32
A697 4230	Timing Belt - B140S2M910	13- 16
A697 4235	Paper Exit Pawl	13- 17
A697 5105	Main Board Bracket	33- 19
A697 5110	Finisher Main Board	33- 16
A697 5201	Interface Harness	33- 11

Part No.	Description	Page and Index No.
A697 5240	Safety Switch Harness	29- 5
A697 5241	Main Harness	33- 17
A697 5242	Harness - Paper Hight Sensor	25- 19
A697 5243	Relay Harness - Exit Sensor	21- 2
A697 5244	Relay Harness - Overflow Sensor	19- 10
A697 5245	Shift Tray Harness	27- 7
A697 5246	Entrance Sensor Harness	33- 12
A697 5248	Stapelr Harness	33- 15
A697 5248	Stapelr Harness	17- 35
A697 5249	Relay Harness	17- 2
A697 5251	Harness - Stapelr Tray Sensor	33- 14
A697 5252	Stapler Motor Harness	33- 13
A697 5253	Relay Harness - Shift Tray	27- 6
A697 5300	Decal - R2	19- 15
A697 5300	Decal - R2	37- 7
A697 5400	Decal - R3	37- 4
A697 5400	Decal - R3	21- 11
A697 5500	Decal - Replacement R4	37- 8
A697 5500	Decal - Replacement R4	11- 5
A697 5600	Decal - Replacement R5	11- 15
A697 5600	Decal - Replacement R5	37- 6
A697 5700	Decal Misfeed Removal	37- 9
A697 5700	Decal Misfeed Removal	7- 4
A697 5750	Decal - R6	13- 33
A697 5750	Decal - R6	37- 2
A697 5900	Staple Position Decal	7- 25
A697 5900	Staple Position Decal	37- 5
A697 6101	Front Cover - Shift Tray	7- 7
A697 6111	Rear Cover - Shift Tray	7- 11
A697 6121	Right Cover	7- 16
A697 6131	Front Cover	7- 5
A697 6140	Upper Hinge - Front Cover	7- 10
A697 6145	Lower Hinge - Front Cover	7- 1
A697 6151	Left Inner Cover	7- 2
A697 6161	Rear Cover	7- 15

Part No.	Description	Page and Index No
A697 6171	Upper Cover	7- 14
A697 6181	Left Upper Cover	7- 9
A697 6191	Left Lower Cover	7- 6

Part No.	Description	Page and Index No.
AA04 3054	Timing Belt - 142 P2M4	31- 15
AA04 3100	Timing Belt - 900 P2M4	13- 21
AA04 3104	Timing Belt - 219 P3M4	13- 29
AA04 3181	Timing Belt - B40S2M80	25- 14
AA04 3238	Timing Belt - B40S2M206	31- 11
AA06 0092	Release Spring	33- 4
AA06 0557	Positioning Roller Spring	9- 20
AA06 3529	Pressure Spring - 14.5mm	19- 5
AA06 3529	Pressure Spring - 14.5mm	21- 28
AA06 3529	Pressure Spring - 14.5mm	11- 2
AA08 0238	Bushing - M6	11- 21
AA08 0238	Bushing - M6	21- 25
AA08 0238	Bushing - M6	9- 18
AA08 0238	Bushing - M6	19- 19
AA08 0242	Bushing	19- 6
AA08 0242	Bushing - 4mm	11- 3
AA08 0242	Bushing - 4mm	21- 14
AA12 0027	Antistatic Brush	19- 1
AA12 0027	Antistatic Brush	21- 4
AA12 0027	Antistatic Brush	11- 18
AA13 2024	Spacer - M6	25- 26
AA13 2024	Spacer - M6	17- 12
AA14 3059	Pin - 6x16	27- 1
AA16 1099	Lever Cushion	9- 21
AB01 0055	Gear - 46Z/13Z	13- 31
AB01 1085	Gear - 14Z/31Z	17- 40
AB01 1141	Gear - 14Z	17- 36
AB01 3709	Worm Gear	31- 22
AB03 0216	Pulley - 15Z	31- 24
AB03 0273	Timing Pulley - T20	31- 10
AB03 0340	Brush Roller Pulley	25- 6
AB03 0374	Timing Pulley - 20Z	11- 13
AB03 0374	Timing Pulley - 20Z	21- 26
AB03 0374	Timing Pulley - 20Z	9- 11
AB03 0374	Timing Pulley - 20Z	19- 21

Part No.	Description	Page and Index No.
AB03 0377	Timing Pulley - 28Z	25- 13
AB03 0378	Timing Pulley - 20Z	25- 34
AB03 0382	Timing Pulley - 24Z	15- 17
AB03 3028	Pulley - 32Z/31Z	17- 38
AB03 3061	Pulley - 50/15Z	23- 2
AF02 0439	Transport Roller	21- 20
AF02 0439	Transport Roller	9- 5
AF02 0439	Transport Roller	11- 9
AF02 2106	Driven Roller	21- 16
AF02 2106	Driven Roller	11- 4
AF02 2106	Driven Roller	19- 7
AG07 0004	Magnetic Catch	33- 20
AG07 0004	Magnetic Catch	29- 2
AG07 1010	Magnet Catch	11- 7
AG07 1010	Magnet Catch	21- 13
AG07 1010	Magnet Catch	19- 14
AH01 2019	Caster	29- 13
AJ01 1010	Stapler - Eh-560	17- 16
AW01 0066	Photosensor - PS-R50D1-B	21- 21
AW01 0066	Photosensor - PS-R50D1-B	15- 6
AW01 0070	Photosebtor - PS-R11D1-B	23- 22
AW01 0070	Photosensor - PS-R11D1-B	21- 3
AW02 0006	Photointerruptor - EE-SX460-P2	25- 21
AW02 0049	Photointerruptor - Os - 580213-703	15- 3
AW02 0049	Photointerruptor - OS - 580213-703	19- 3
AW02 0049	Photointerruptor - OS - 580213-703	29- 10
AW02 0075	Photointerrupter	33- 8
AW02 0075	Photointerrupter	17- 4
AW02 0075	Photointerrupter	15- 15
AW02 0075	Photointerrupter	27- 5
AW02 0075	Photointerrupter	23- 4
AW02 0079	Photointerruptor	19- 11
AX04 0067	Stepping Motor - DC 9W	17- 13
AX05 0074	DC Motor - 24V - 9.9W	31- 13
AX05 0096	Motor - DC 9W	13- 20

Part No.	Description	Page and Index No.
AX05 0115	DC Motor - DC 7.2W	27- 2
AX05 0120	Stepper Motor - DC 7.7W	31- 23
AX05 0121	Stepper Motor - DC 8.9W	17- 34
AX05 0121	Stepper Motor - DC 8.9W	15- 16
C203 5135	Bushing - 10x14x5.9	25- 5

Part No.	Description	Page and Index No.
A232 3552	Ball Bearing - 8x22x7	17- 21
A232 3562	Ball Bearing - 6x12x4mm	31- 21
A300 2132	Guide Roller	17- 5
A300 3151	Support Bracket	33- 18
A300 3551	Grip Stapler Unit	15- 1
A300 3611	Front Jogger Fence	13- 9
A300 3618	Antistatic Guide Seal	13- 11
A300 3621	Rear Jogger Fence	13- 19
A300 3626	Lower Guide Seal	13- 12
A300 3634	Spring Plate - Timing Belt	13- 22
A300 3635	Belt Clamp	13- 23
A300 3641	Fixing Plate	13- 5
A300 3646	Jogger Idler Bracket	17- 32
A300 3646	Jogger Idler Bracket	13- 6
A300 3661	Slider Guide Rod	15- 9
A300 3661	Slider Guide Rod	13- 26
A300 3717	Slide Belt Holder - Stapler	17- 29
A300 3731	Slide Supporter	17- 28
A300 3759	Spring	15- 10
A300 3812	Spacer - 6x22x1.5	17- 39
A300 3813	Shaft - 6x21.5	15- 7
A300 3813	Shaft - 6x21.5	13- 14
A300 3815	Spring Plate	13- 13
A300 3822	Spacer - 11x15x1	13- 30
A300 3851	Positioning Roller Bracket	9- 22
A300 3858	Stepped Screw - M4	33- 10
A300 3865	Release Spring	33- 9
A353 2243	Lever Knob	21- 17
A353 2763	Washer - M5	13- 18
A353 3113	Pressure Spring	31- 18
A353 3172	Actuator Bracket	25- 8
A353 3173	Pressure Spring	25- 33
A353 3181	Exit Sensor Bracket	25- 20
A353 3192	Front Arm	25- 15
A353 3197	Rear Arm	25- 12

Part No.	Description	Page and Index No.
A353 3201	Exit Roller	25- 11
A353 3271	Tray Shift Shaft	25- 28
A353 3272	Guide Roller	25- 27
A353 3351	Exit Driven Roller	21- 9
A353 3354	Driven Roller Holder	21- 8
A376 1343	Original Pressure Roller	17- 10
A377 1651	Magnet Catch Plate	7- 3
A377 1661	Door Switch Cover	29- 3
A377 1662	Door Switch Actuator	29- 6
A377 7122	Guide Plate	23- 10
A377 7147	H.P Sensor Bracket	23- 3
A377 7161	Knob	23- 18
A379 1172	Upper Joint Bracket	33- 1
A379 1211	Upper Exit Stay	29- 7
A379 1225	Upper Sensor Actuator	25- 32
A379 1711	Motor Bracket	31- 14
A379 2111	Exit Roller Shaft	25- 10
A379 2112	Exit Roller Ring	25- 18
A379 2115	Reverse Roller	25- 16
A379 2212	Driven Roller Shaft	21- 10
A379 2213	Exit Guide Bracket	21- 6
A379 2215	Exit Mylar	21- 29
A379 2215	Exit Mylar	7- 27
A379 2519	Supporting Lower Guide	11- 19
A379 2521	Exit Guide Plate	9- 4
A379 2523	Exit Guide Mylar	9- 2
A379 2525	Exit Guide Mylar - 2	9- 3
A379 3121	Exit Stay	27- 17
A379 3132	Switch Bracket	27- 10
A379 3133	Switch Lever	27- 9
A379 3316	Shift Guide Roller	25- 25
A379 4127	Middle Guide Seal	13- 10
A379 4131	Jogger Fence Slider	13- 24
A379 4155	Jogger Motor Bracket	15- 18
A379 4401	Upper Exit Shaft	13- 3

Part No.	Description	Page and Index No.
A379 4751	Decal - R1	37- 3
A379 4751	Decal - R1	21- 31
A422 1078	Bushing - 6x12x4mm	13- 27
A458 2251	Cushion - Bin Solenoid Lever	9- 8
A471 1085	Stepped Screw	23- 17
A606 1890	Decal - Punch Position (A4)	37- 1
A606 1890	Decal - Punch Position (A4)	7- 24
A606 8195	Decal - Punch Position (LT)	37- 1
A606 8195	Decal - Punch Position (LT)	7- 24
A608 2813	Positioning Roller Arm	9- 19
A608 2816	Positioning Roller Shaft	9- 13
A612 1612	Bracket - Motor	31- 6
A612 5955	Grounding Plate - Bank	7- 23
A663 2113	Cushion - Stepping Motor	31- 25
A666 2421	Sub - Shift Tray	7- 13
A666 3180	Timing Pulley - Z32	15- 8
A666 3180	Timing Pulley - Z32	13- 2
A666 4170	Stepped Screw - M3x6	19- 23
A680 1181	Magnetic Catch	21- 18
A812 5110	Punch Drive Board	23- 11
A812 5250	Harness Punch Unit	23- 13
A812 5251	Harness - Punch Control	23- 12
A812 7110	Punch Unit - 2hole	23- 5
A812 7121	Drive Motor Bracket	23- 7
A812 7124	Positioning Screw	23- 26
A812 7126	Timing Belt - 166S2M	23- 1
A812 7141	Guide Mylar	23- 25
A812 7150	Stepped Motor - DC4.48V 12.5W	23- 8
A812 7200	Dust Hopper	23- 19
A812 7321	Dust Hopper Stopper	23- 21
A812 7331	Lock Spring	23- 24
A812 7411	Spacer - 2mm	23- 14
A812 7412	Spacer - 1mm	7- 26
A812 7412	Spacer - 1mm	23- 15

Part No.	Description	Page and Index No.
5053 0447	Bushing - 6mm	9- 1
5053 0447	Bushing - 6mm	27- 12
5053 0447	Bushing - 6mm	25- 7
5053 0447	Bushing - 6mm	21- 1
5053 0447	Bushing - 6mm	11- 1
5053 0447	Bushing - 6mm	19- 18
5053 0447	Bushing - 6mm	17- 25
5053 0447	Bushing - 6mm	13- 1
5201 1796	Stepped Screw - M4	17- 6
5201 2722	Bushing - M6x5	13- 8
5316 3062	Cushion - Cutter	7- 17
5419 5714	Stepped Screw - M4	23- 6
5442 4121	Spring - Oil Blade	31- 3
5447 2681	Snap Ring	11- 12
5447 2681	Snap Ring	9- 14
5875 2088	Shoulder Screw - M4	13- 25
5875 2088	Shoulder Screw - M4	23- 9
5919 2127	Positioning Roller Pulley	9- 17
5919 2132	Positioning Roller Belt	9- 16
5920 2144	Spring - Lock	11- 17

Part No.	Description	Page and Index No.
0242 0035B	Pan Head Screw - M2x3.5	13-104
0313 0040B	Philips Pan Head Screw - M3x4	21-109
0313 0040B	Philips Pan Head Screw - M3x4	23-102
0313 0040B	Philips Pan Head Screw - M3x4	33-104
0313 0040B	Philips Pan Head Screw - M3x4	31-104
0313 0040B	Philips Pan Head Screw - M3x4	17-111
0313 0050B	Philips Pan Head Screw - M3x5	31-103
0313 0100B	Philips Pan Head Screw - M3x10	15-105
0313 0100B	Philips Pan Head Screw - M3x10	23-105
0313 0100B	Philips Pan Head Screw - M3x10	21-105
0313 0140B	Philips Pan Head Screw - M3x14	27-106
0450 3008B	Tapping Screw - M3x8	15-103
0450 4008B	Tapping Screw - 4x8	11-104
0450 4008B	Tapping Screw - 4x8	7-102
0450 4008B	Tapping Screw - 4x8	21-106
0451 3006B	Tapping Screw - M3x6	21-101
0451 3006B	Tapping Screw - M3x6	19-103
0451 3006B	Tapping Screw - M3x6	17-107
0451 3006B	Tapping Screw - M3x6	23-106
0451 3006B	Tapping Screw - M3x6	25-102
0451 3006B	Tapping Screw - M3x6	27-103
0451 3006B	Tapping Screw - M3x6	29-102
0451 3006B	Tapping Screw - M3x6	31-102
0451 3006B	Tapping Screw - M3x6	33-105
0451 3006B	Tapping Screw - M3x6	7-101
0451 3006B	Tapping Screw - M3x6	9-102
0451 3006B	Tapping Screw - M3x6	13-101
0451 3006B	Tapping Screw - M3x6	15-101
0451 3006B	Tapping Screw - M3x6	11-103
0451 3008B	Tapping Screw - M3x8	33-108
0451 3008B	Tapping Screw - M3x8	17-108
0451 3008H	Tapping Screw - 3x8	7-103
0451 4006B	Tapping Screw - 4x6	13-102
0451 4006B	Tapping Screw - 4x6	29-101
0451 4006B	Tapping Screw - 4x6	21-104

Part No.	Description	Page and Index No.
0451 4006B	Tapping Screw - 4x6	27-101
0451 4006B	Tapping Screw - 4x6	19-105
0451 4006B	Tapping Screw - 4x6	31-101
0451 4006B	Tapping Screw - 4x6	11-105
0451 4006B	Tapping Screw - 4x6	9-103
0451 4006B	Tapping Screw - 4x6	23-101
0451 4006B	Tapping Screw - 4x6	15-102
0451 4006B	Tapping Screw - 4x6	33-102
0451 4006B	Tapping Screw - 4x6	25-105
0451 4006B	Tapping Screw - 4x6	17-101
0451 4008B	Philips Tapping Screw - M4x8	29-108
0451 4014B	Tapping Screw:4x14	7-104
0453 3006B	Tapping Screw - M3x6	33-107
0453 3006B	Tapping Screw - M3x6	17-102
0453 3006B	Tapping Screw - M3x6	13-103
0453 3006B	Tapping Screw - M3x6	29-106
0574 0040E	Hexagon Headless Set Screw - M4x4	31-105
0574 0040E	Hexagon Headless Set Screw - M4x4	17-109
0574 0040E	Hexagon Headless Set Screw - M4x4	15-107
0623 0120E	Spring Pin - M3x12	9-105
0633 0120G	Parallel Pin - 3x12	25-106
0634 0200G	Parallel Pin - 4x20	25-103
0710 0020W	Hexagonal Nut - M2	13-106
0720 0040B	Retaining Ring - M4	21-102
0720 0040B	Retaining Ring - M4	27-105
0720 0040B	Retaining Ring - M4	19-102
0720 0040B	Retaining Ring - M4	9-101
0720 0040B	Retaining Ring - M4	11-101
0720 0040B	Retaining Ring - M4	25-104
0720 0040B	Retaining Ring - M4	17-106
0720 0040E	Retaining Ring - M4	13-105
0720 0040E	Retaining Ring - M4	15-106
0720 0060B	Retaining Ring - M6	27-104
0720 0060B	Retaining Ring - M6	25-101
0720 0060B	Retaining Ring - M6	17-110

Part No.	Description	Page and Index No.
0720 0060E	Retaining Ring - M6	23-103
0720 0060E	Retaining Ring - M6	31-106
0805 0089	Retaining Ring - M4	19-101
0805 0089	Retaining Ring - M4	9-104
0805 0089	Retaining Ring - M4	21-103
0805 0089	Retaining Ring - M4	11-102
0807 5056	Washer - 8.1mm	31-107
0951 4006W	Philips Screw With Flate Washer - M4x6	23-104
1105 0005	Nylon Clamp - 3n	15-108
1105 0061	Nylon Clip - 5n	17-113
1105 0062	Nylon Clamp - 6n	17-104
1105 0159	PCB Stud	23-107
1105 0199	Clamp	17-103
1105 0199	Clamp	15-104
1105 0199	Clamp	19-104
1105 0199	Clamp	21-108
1105 0199	Clamp	27-107
1105 0199	Clamp	29-105
1105 0291	Harness Clamp - LWS-3S	29-107
1105 0310	Harness Clamp - LWS-1S	33-103
1105 0310	Harness Clamp - LWS-1S	27-102
1105 0310	Harness Clamp - LWS-1S	29-109
1105 0328	Harness Clamp - ES-0505	21-107
1105 0328	Harness Clamp - ES-0505	17-105
1105 0328	Harness Clamp - ES-0505	29-103
1105 0334	Edge - 17	33-106
1105 0372	Nylon Clamp	17-112
1105 0372	Nylon Clamp	33-109
1106 0411	Bushing - 11.5mm	33-101
1204 1081	Microswitch	27-108
1204 2384	Interlock Switch	29-104