

Finisher SR4080 (D610)

Finisher SR4080 (D610)


PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.Exterior (D610)	2	19.Electrical Section (D610).....	38
2.Paper Transfer:Entrance (D610)	4	20.Frame Section 1 (D610)	40
3.Paper Transfer:Proof Tray (D610)	6	21.Frame Section 2 (D610)	42
4.Proof Tray Exit Section (D610)	8	22.Jogger Unit (B513)	44
5.Paper Transfer:Staple 1 (D610)	10	Parts Index	47
6.Paper Transfer:Staple 2 (D610)	12		
7.Staple Tray Unit 1 (D610)	14		
8.Staple Tray Unit 2 (D610)	16		
9.Staple Tray Unit 3 (D610)	18		
10.Staple Tray Unit 4 (D610)	20		
11.Staple Tray Unit 5 (D610)	22		
12.Staple Tray Unit 6 (D610)	24		
13.Paper Tray Drive Section 1 (D610)	26		
14.Paper Tray Drive Section 2 (D610)	28		
15.Paper Tray Drive Section 3 (D610)	30		
16.Paper Tray Drive Section 4 (D610)	32		
17.Paper Tray Drive Section 5 (D610)	34		
18.Drive Section (D610)	36		

May 30, 2012

1.Exterior (D610)

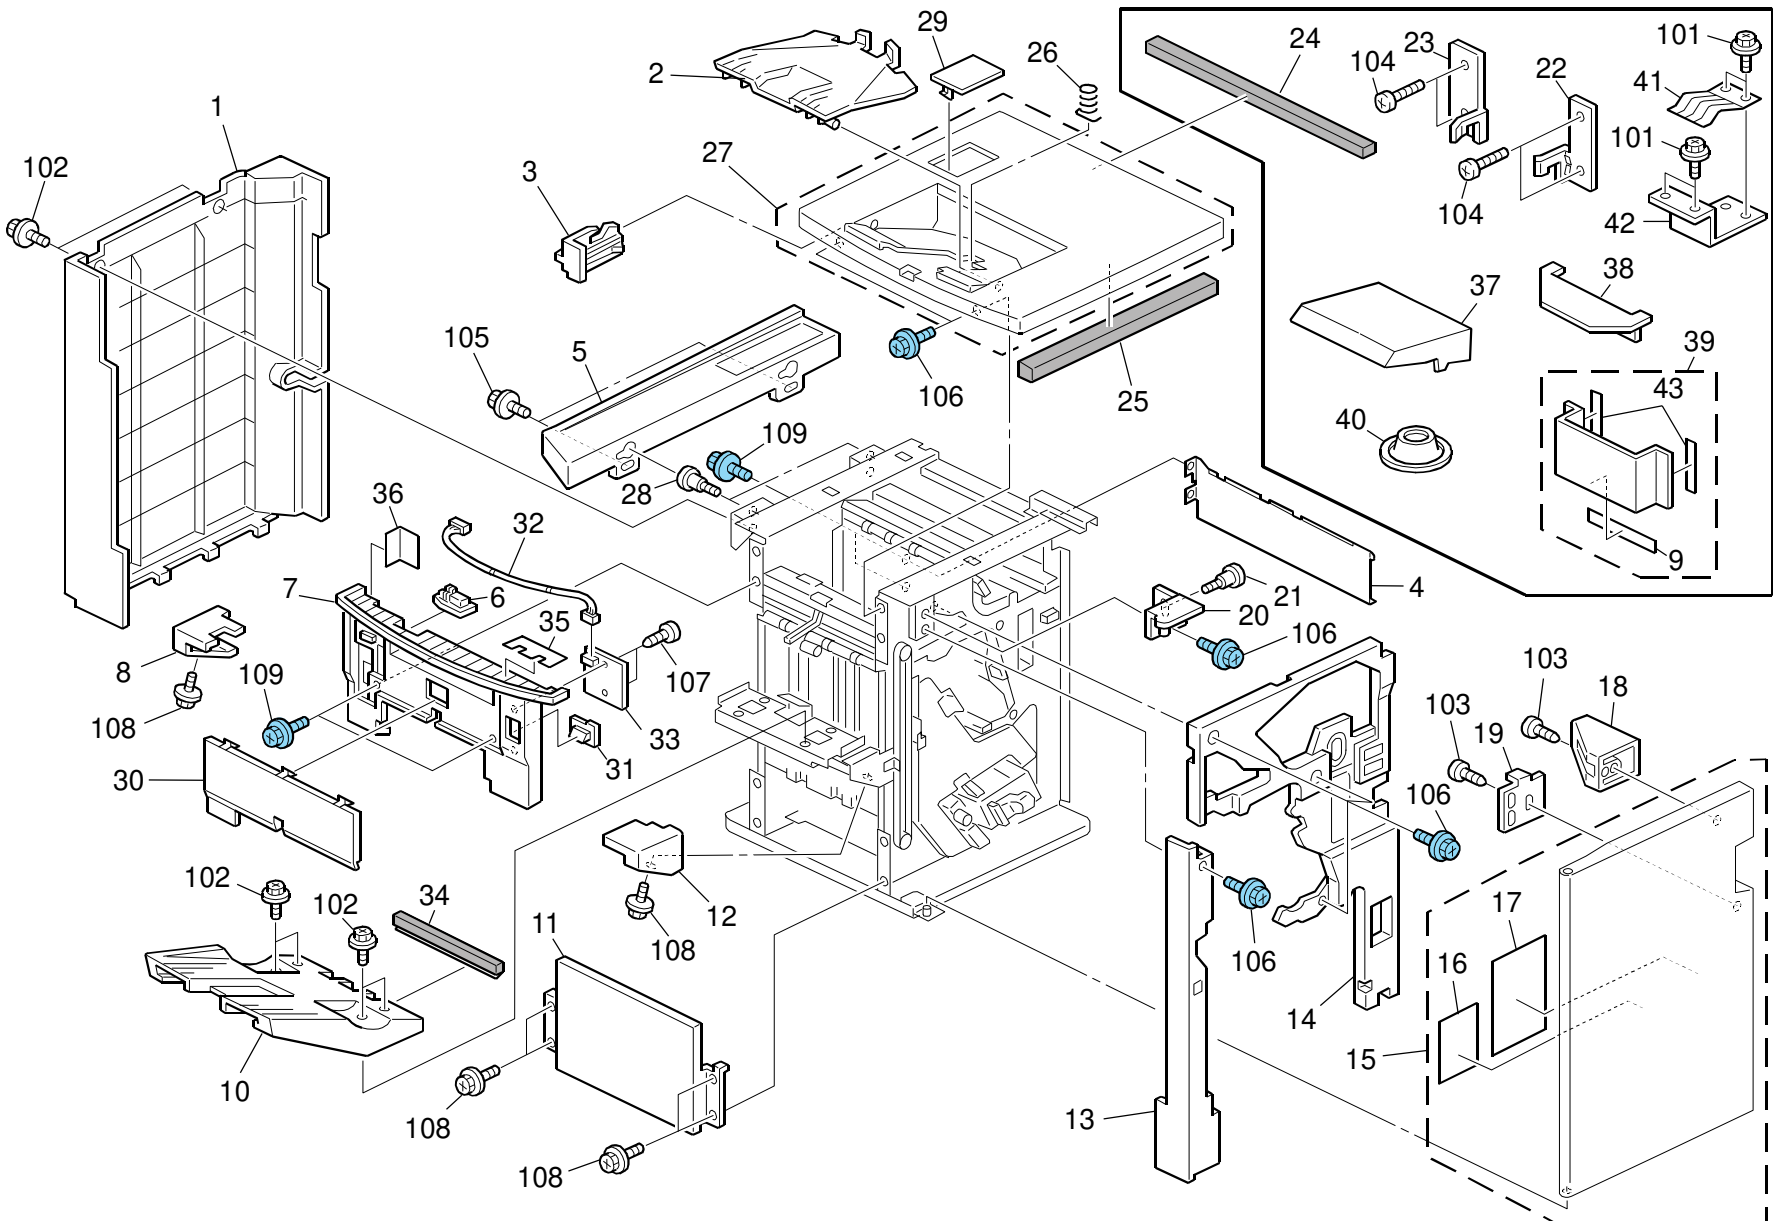


1.Exterior (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D610 6213	Cover:Rear	1
2	D610 6131	Tray:Cover:Upper	1
3	B302 6115	Tray Stopper	1
4	D460 1146	Cover:Harness:Door Switch	1
5	D610 6450	Table:Ass'y	1
6	D610 6251	Lever:Slide	1
7	D610 6261	Cover:Left Upper	1
8	D610 6721	Cover:Shift Tray:Inner Back:RIC	1
9	A229 8524	Operating Instructions Holder - A5	1
10	D610 3334	Shift Tray:RIC:Ass'y	1
11	D610 6312	Cover:Left Lower:Ass'y	1
12	D610 6711	Cover:Shift Tray:Front:RIC	1
13	D610 6351	Inner Cover:Left Sideways	1
14	D610 6612	Inner Cover:Front	1
15	D610 6171	Cover:Front	1
16	D610 7822	Decal:Misfeed Removal:Stapler	1
17	D610 7821	Decal:Misfeed Removal:Paper	1
18	D610 1595	Cover:Door:Small	1
19	B302 6161	Magnet Catch Plate	1
20	B302 6157	Upper Hinge - Front Door	1
21	AA14 3807	Screw:A	1
22	B478 1143	Bracket:Coupling:Ground Plate:Front	1
23	B478 1145	Bracket:Coupling:Ground Plate:Rear	1
24	B706 7531	Cushion:Spacer	1
25	B706 6116	Cushion:Cover:Upper	1
26	B302 6135	Spring - 23x44mm	1
27	D610 6120	Cover:Upper:Sub-ass'y	1
28	B706 1859	Screw:Slider:Lock	2
29	D611 1618	Cover:Upper:Connector:RIC	1
30	D610 6262	Cover:Cover:Left Upper	1
31	B478 6264	Keytop:Printing	1
32	B478 5485	Harness:Switch:Stop:Connecting	1
33	B706 5600	PCB:Switch:Stop	1
34	B706 3035	Guide:Micro Switch:Shift Tray	1
35	B478 6267	Guide:Harness:Cover:Left Upper	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	B478 6266	Guide:Harness:Cover:Left Upper	1
37	D610 7631	Tray:Auxiliary:Shift Tray	1
38	D610 7621	Tray:Auxiliary:Proof Tray	1
39	D610 1321	Holder:Operating Instructions: A5-NRC:Ass'y	1
40	B132 1226	Holder:Stand	1
41	B302 1163	Grounding Plate	1
42	B302 1164	Grounding Plate Bracket	1
43	A229 8523	Operating Instructions Holder - A5	2
101	0451 3006N	Tapping Screw - 3x6	
102	0451 3008N	Tapping Screw - M3x8	
103	0452 4008N	Tapping Screw:M4x8	
104	0951 4014N	Screw:Polished Round:M4x14	
105	0451 4008N	Tapping Screw:4x8	
106	0454 3008Q	Tapping Screw:3x8	
107	0452 3008N	Tapping Screw - M3x8	
108	0454 3008N	Tapping Screw:Round Point:3x8	
109	0454 3006Q	Tapping Screw - M3x6	

2.Paper Transfer:Entrance (D610)

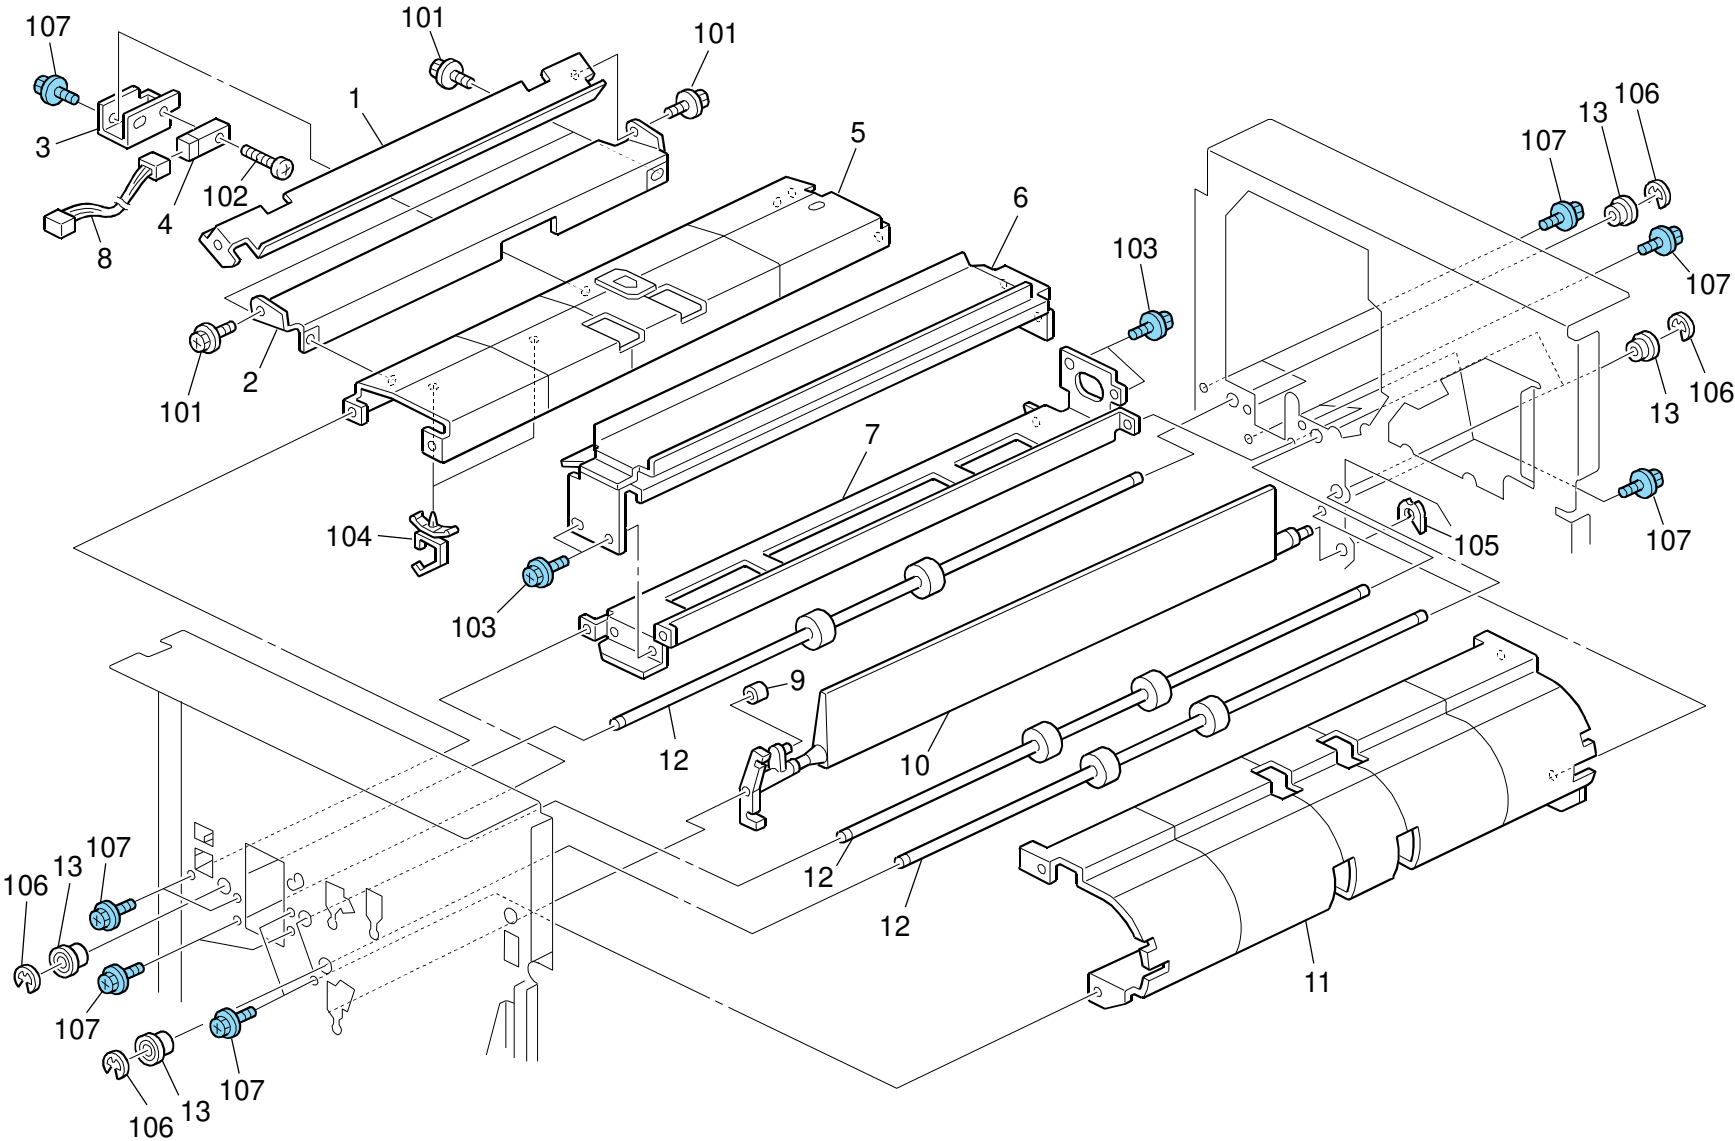


2.Paper Transfer:Entrance (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A697 2251	Upper Relay Guide	1
2	A697 2250	Lower Relay Guide	1
3	B478 2354	Entrance Sensor Bracket	1
4	AW01 0109	Photo Reflection Sensor:PS117ED1	1
5	B302 2363	Guide Plate:Entrance:Lower	1
6	D460 2160	Guide Plate:Auxiliary:Punch:Ass'y	1
7	B706 1131	Middle Stay	1
8	B706 5241	Harness:Sensor:Entrance Sensor: Connecting	1
9	A458 2251	Cushion - Bin Solenoid Lever	1
10	B302 2716	Gate Pawl:Lengthwise	1
11	B302 2347	Turn Guide	1
12	AF02 0501	Transport Roller	3
13	A859 2230	Ball Bearing - 6x13x5	6

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0313 0140N	Pan Head Screw:M3x14	
103	0451 4006N	Tapping Screw - 4x6	
104	1105 0623	Clamp - LBWS-0206S-V0	
105	0805 0089	Retaining Ring - M4	
106	0720 0040E	Retaining Ring - M4	
107	0454 3006Q	Tapping Screw - M3x6	

3.Paper Transfer:Proof Tray (D610)

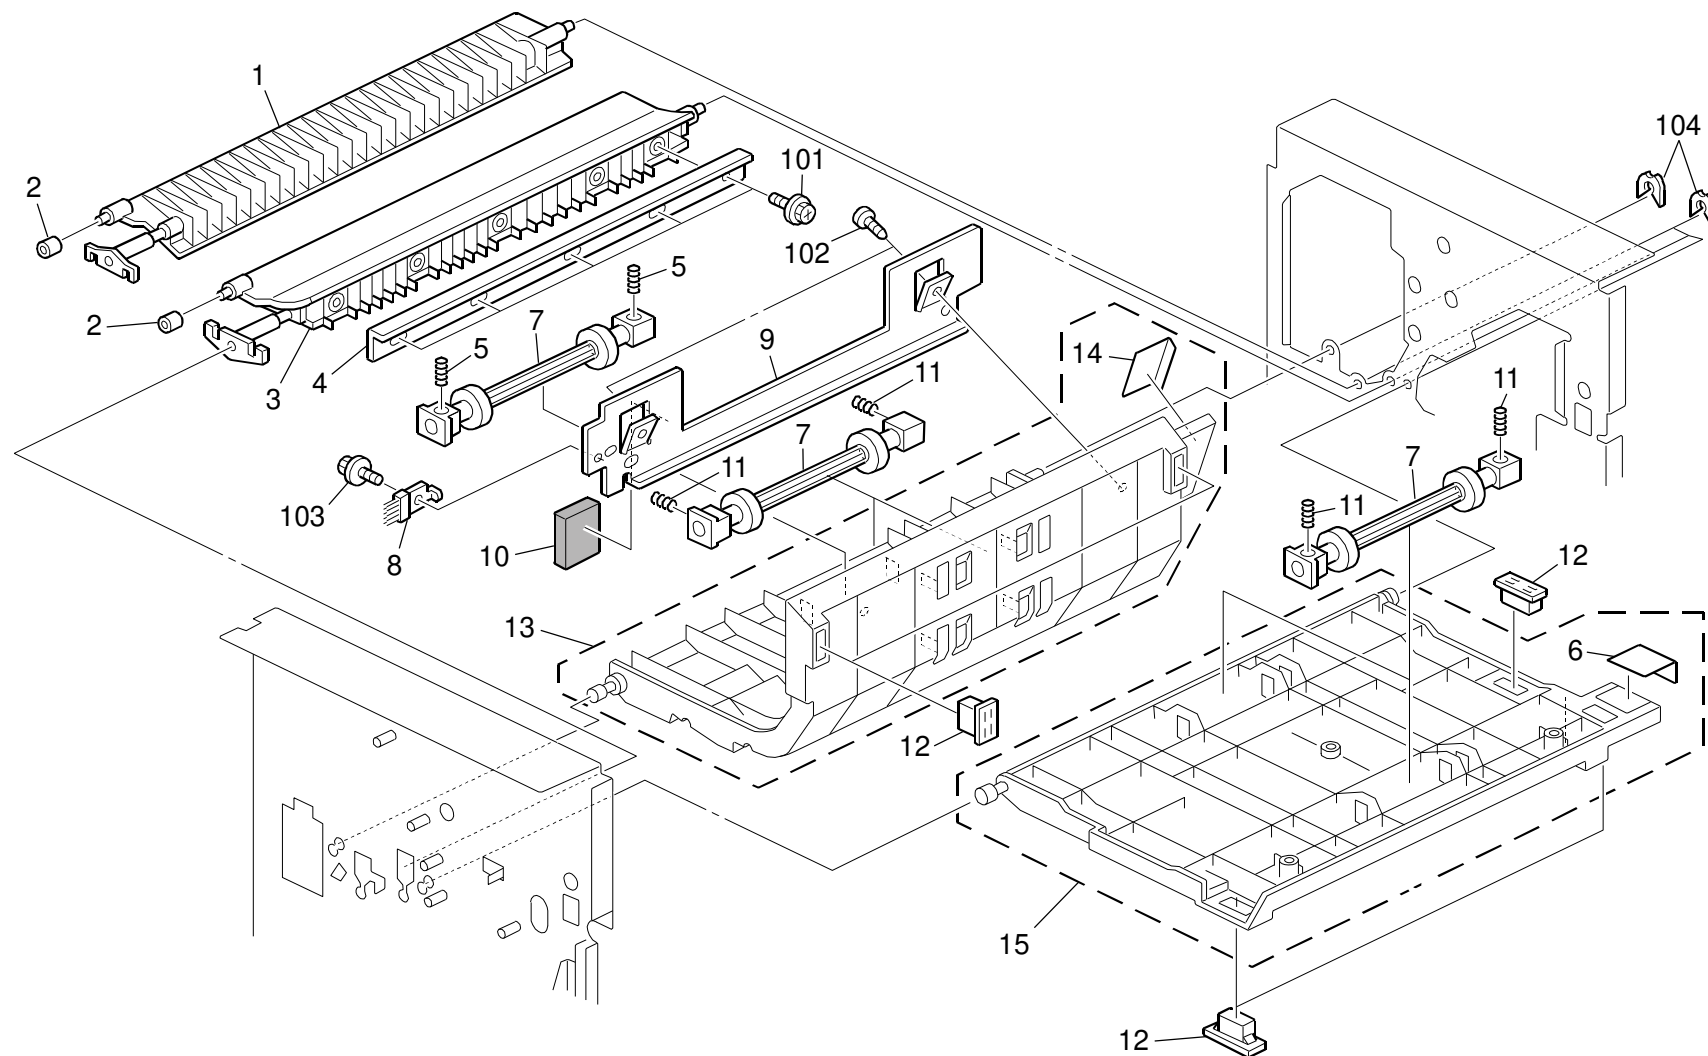


3.Paper Transfer:Proof Tray (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B302 2611	Stapler Junction Gate	1
2	A458 2251	Cushion - Bin Solenoid Lever	2
3	B302 2514	Exit Junction Gate	1
4	B302 2513	Support Plate - Exit Gate	1
5	B706 2224	Compression Spring:Transport:6.5N	2
6	D610 7803	Decal:Shift Tray:R3	1
7	AF02 2147	Driven Roller	5
8	AA12 0097	Antistatic Brush	1
9	B706 2352	Supporting Plate:Guide Plate: Open And Close	1
10	B706 2296	Cushion:Plate:Guide Plate:Proof Tray	1
11	AA06 3400	Pressure Spring - 5.5x19.5mm	8
12	AG07 0513	Magnet Catch	5
13	D610 7014	Guide Plate:Open And Close:Proof Tray: Ass'y	1
14	D610 7802	Decal:Proof Tray:R2	1
15	D610 7013	Guide Plate:Open And Close:Shift Tray: Ass'y	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 3008N	Tapping Screw - M3x8	
102	0452 4008N	Tapping Screw:M4x8	
103	0451 3006N	Tapping Screw - 3x6	
104	0805 0089	Retaining Ring - M4	

4.Proof Tray Exit Section (D610)

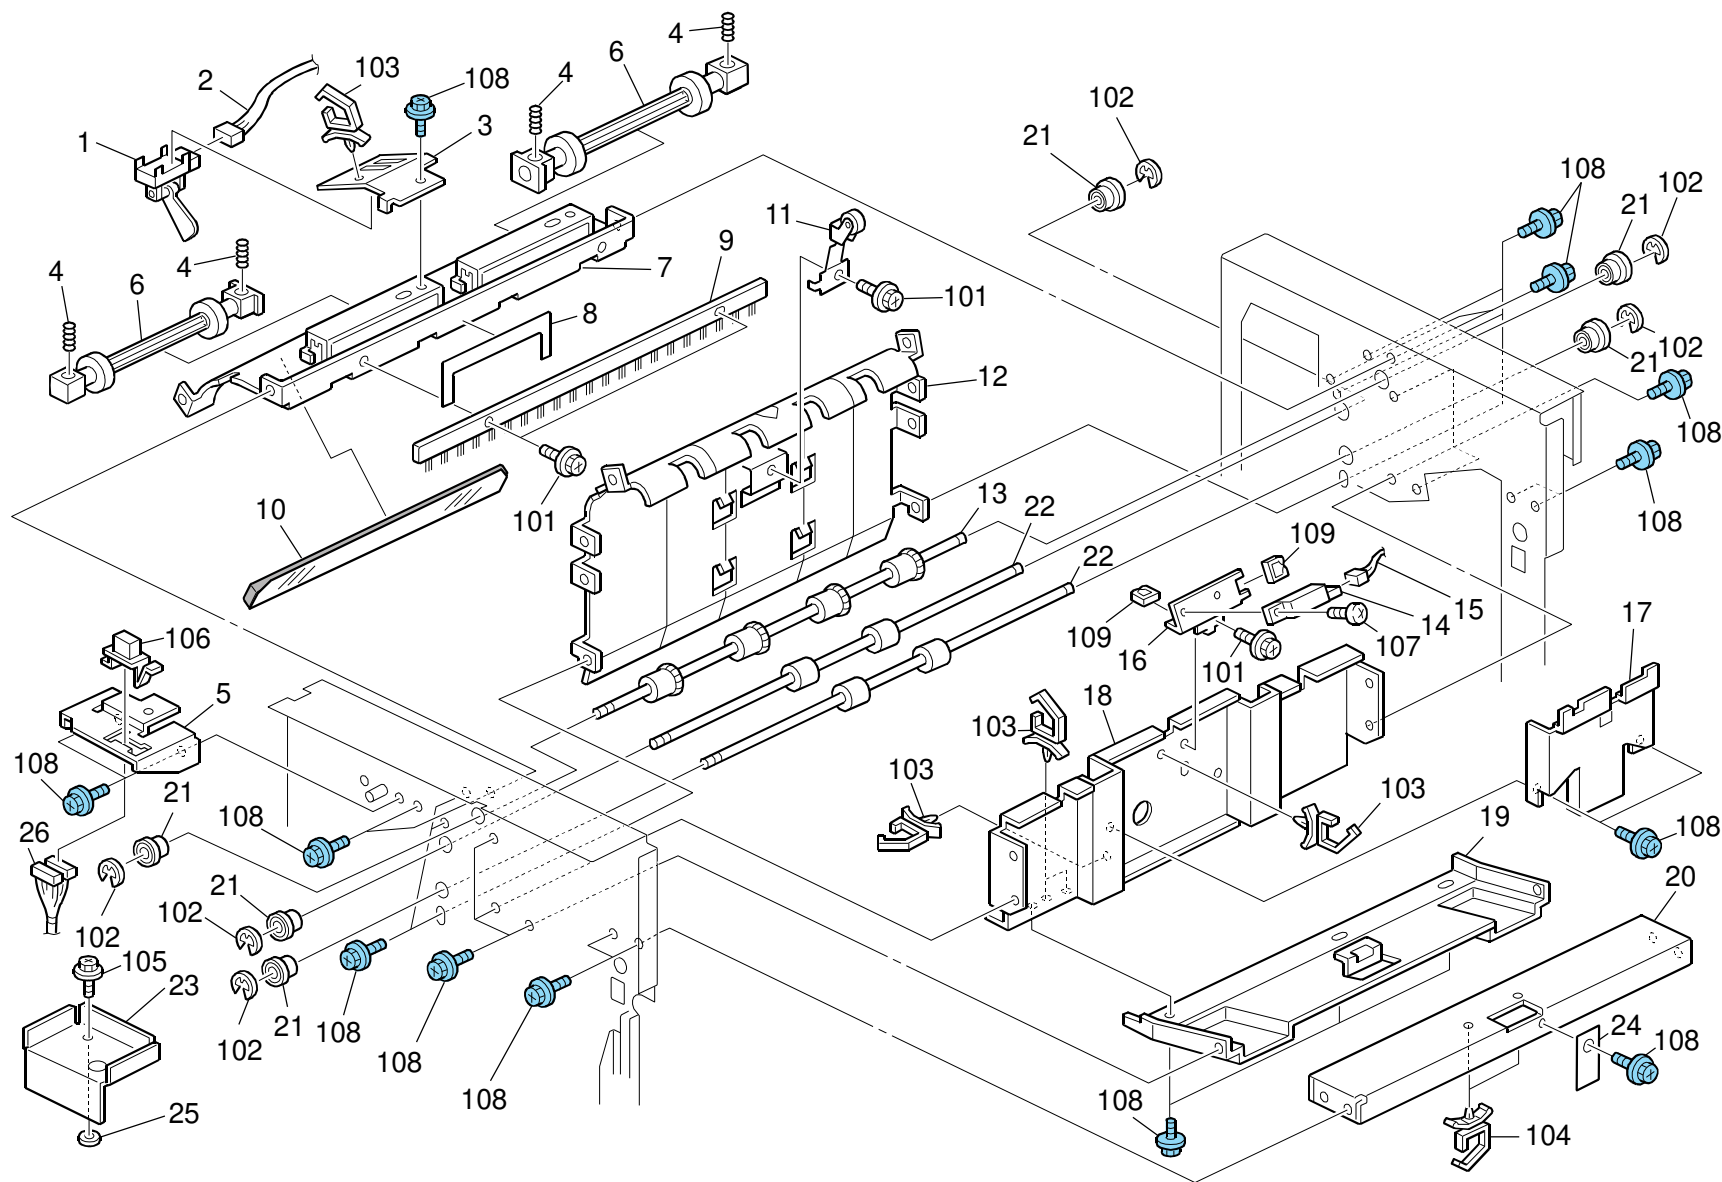


4.Proof Tray Exit Section (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AW02 0169	Photointerruptor - OS - 580213-703	1
2	B706 5250	Harness:Paper Feed Sensor: Proof Tray:Connecting	1
3	B302 2237	Exit Sensor Bracket - Upper Tray	1
4	AA06 3529	Pressure Spring - 14.5mm	4
5	B478 1123	Bracket:Connector	1
6	AF02 2148	Roller:Driven:L=125	2
7	B706 2211	Guide Plate:Upper:Fix:Proof Tray:Ass'y	1
8	B302 2216	Exit Guide - Upper Exit Guide	1
9	B706 2213	Discharge Brush - L=320 MM3	1
10	B706 2216	Silencer	1
11	B478 2231	Roller:Exit:Auxiliary:Ass'y	1
12	B302 2230	Left Guide - Upper Tray	1
13	B302 2202	Exit Roller - Upper Tray	1
14	AW01 0129	Photo Reflection Sensor	1
15	D460 5730	Harness:Sensor:Proof Tray:Connecting	1
16	D460 2245	Bracket:Photo Reflection Sensor:Overflow	1
17	B706 2248	Cover - Sensor	1
18	B830 2243	End Plate:Upper:Exit:Proof Tray	1
19	B302 2253	Lower End Fence - Upper Tray	1
20	B478 1133	Upper Exit Stay	1
21	A859 2230	Ball Bearing - 6x13x5	6
22	AF02 0501	Transport Roller	2
23	B478 1129	Cover:Connector	1
24	B302 1134	Lever Stay	1
25	AA10 0006	Nut - M3.6	1
26	B478 5450	Harness:Interface:Option	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0720 0040E	Retaining Ring - M4	
103	1105 0623	Clamp - LBWS-0206S-V0	
104	1105 0487	Harness Clamp	
105	0454 4006Q	Tapping Screw:4x6	
106	1102 8534	Connector - QR/P17-14S-B	
107	0313 0080N	Pan Head Screw:M3x8	
108	0454 3006Q	Tapping Screw - M3x6	
109	1105 0328	Harness Clamp - ES-0505	

5.Paper Transfer:Staple 1 (D610)

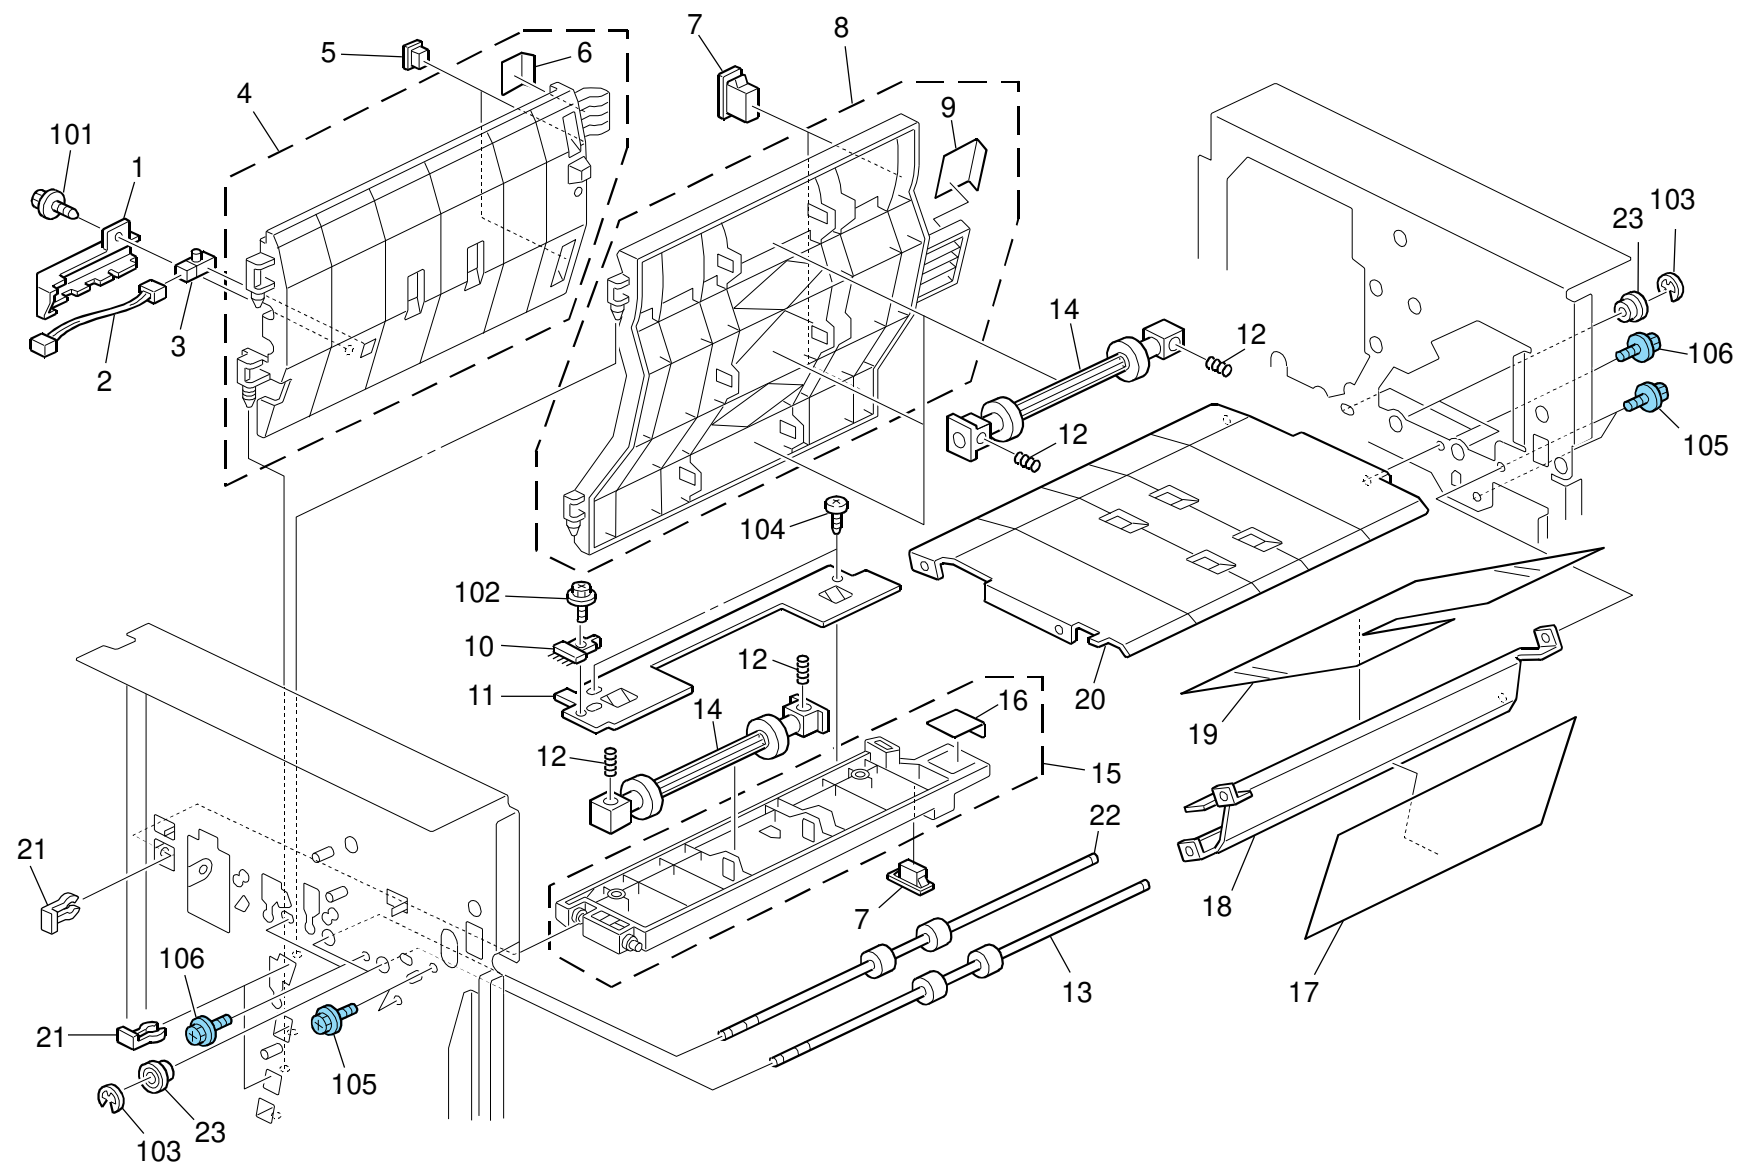


5.Paper Transfer:Staple 1 (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B302 2442	Cover - Stack Tray Paper Sensor	1
2	B830 5260	Harness:Sensor:Duplex Stack:Connecting	1
3	AW01 0109	Photo Reflection Sensor:PS117ED1	1
4	D610 7005	Guide Plate:Lengthwise:Middle:Sub-ass'y	1
5	B352 2650	Magnet Catch - 5N	2
6	D610 7805	Decal:Lengthwise:Middle:R5	1
7	AG07 0513	Magnet Catch	3
8	D610 7004	Guide Plate:Lengthwise:Open And Close: Sub-ass'y	1
9	D610 7804	Decal:Lengthwise:R4	1
10	AA12 0097	Antistatic Brush	1
11	B706 2352	Supporting Plate:Guide Plate: Open And Close	1
12	AA06 3400	Pressure Spring - 5.5x19.5mm	8
13	AF02 0502	Transport Roller	1
14	AF02 2147	Driven Roller	4
15	D610 7001	Guide Plate:Open And Close:Entrance:Ass'y	1
16	D610 7801	Decal:Entrance:R1	1
17	B706 2361	Guide:Discharge (Exit):Leading Edge	1
18	B706 2521	Guide Plate:Exit	1
19	A379 2523	Exit Guide Mylar	1
20	B302 2342	Lower Guide - Shift Tray	1
21	C101 2360	Snap Ring	3
22	AF02 0501	Transport Roller	1
23	A859 2230	Ball Bearing - 6x13x5	4

Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 3008N	Tapping Screw - M3x8	
102	0451 3006N	Tapping Screw - 3x6	
103	0720 0040E	Retaining Ring - M4	
104	0452 4008N	Tapping Screw:M4x8	
105	0454 4006Q	Tapping Screw:4x6	
106	0454 3006Q	Tapping Screw - M3x6	

6.Paper Transfer:Staple 2 (D610)

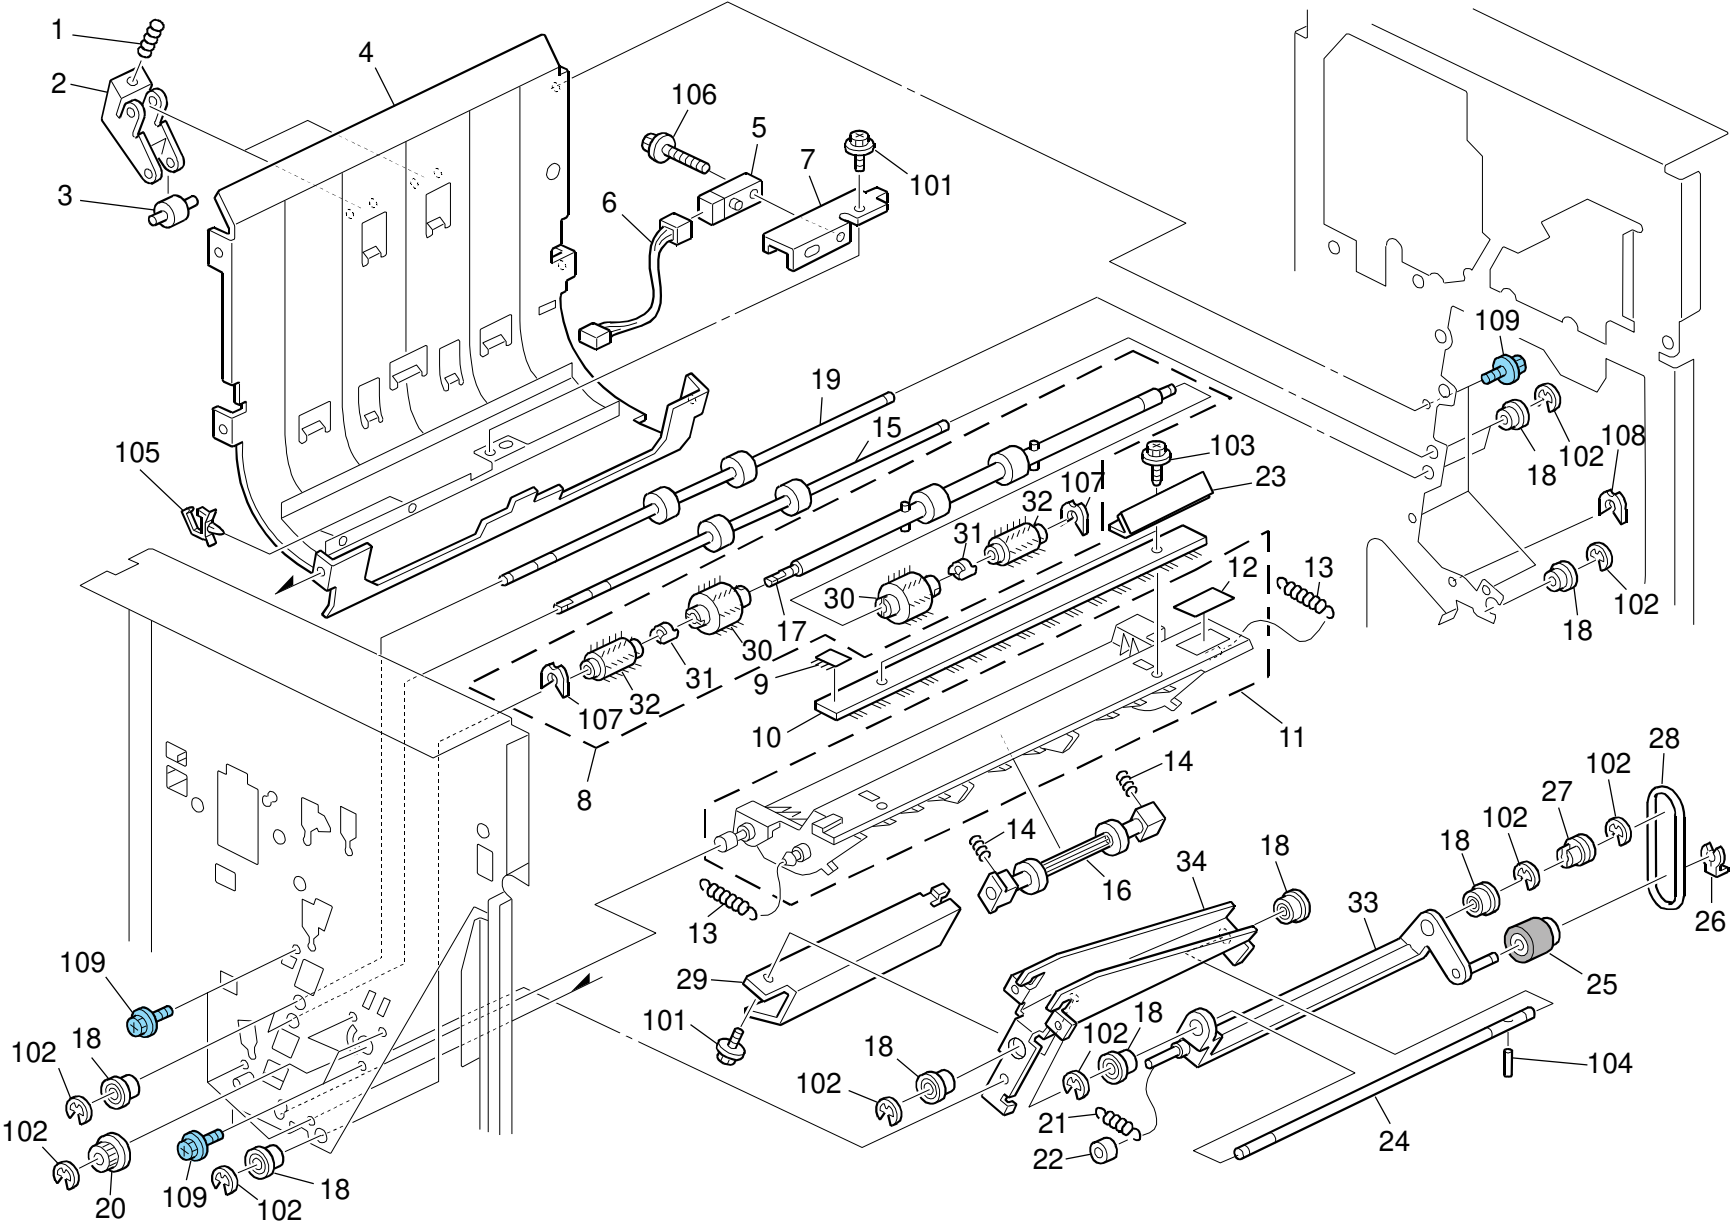


6.Paper Transfer:Staple 2 (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B302 2429	Pressure Spring - 6x18mm	2
2	B302 2428	Driven Roller Holder	2
3	A376 3153	Lower Driven Roller	2
4	B302 2437	Right Guide - Vertical Transport	1
5	AW01 0109	Photo Reflection Sensor:PS117ED1	1
6	B830 5261	Harness:Paper Feed Sensor: Stapler Tray:Connecting	1
7	B302 2416	Exit Sensor Bracket - Staple Tray	1
8	B302 2410	Exit Roller - Staple Tray	1
9	A697 2131	Antistatic Brush	1
10	AA12 0099	Antistatic Brush - 320mm	1
11	D610 7026	Guide Plate:Lower:Open And Close: Sub-ass'y	1
12	D610 7806	Decal:Stapler Tray:Exit:R6	1
13	B302 2459	Spring - 5x39mm	2
14	AA06 3529	Pressure Spring - 14.5mm	2
15	AF02 0502	Transport Roller	1
16	AF02 2147	Driven Roller	1
17	B302 2411	Exit Roller:Lower:Sub-ass'y	1
18	A859 2230	Ball Bearing - 6x13x5	10
19	B302 2461	Transport Roller	1
20	A697 2260	Pulley - 17T	1
21	B478 2127	Tension Spring:Gathering Roller	1
22	AA16 1099	Lever Cushion	1
23	B478 2452	Guide:Open And Close	1
24	B302 2115	Positioning Roller Drive Shaft	1
25	B478 2116	Reverse Roller - Stapler Tray	1
26	5447 2681	Snap Ring	1
27	5919 2127	Positioning Roller Pulley	1
28	5919 2132	Positioning Roller Belt	1
29	B478 2123	Guide:Bracket:Gathering Roller	1
30	A697 2138	Brush Roller	2
31	A697 2132	Joint - Brush Roller	2
32	B302 2413	Brush Roller	2
33	D460 2111	Arm:Gathering Roller:Ass'y	1

Index No.	Part No.	Description	Q'ty Per Assembly
34	D460 2124	Bracket:Gathering Roller	1
101	0451 3006N	Tapping Screw - 3x6	
102	0720 0040E	Retaining Ring - M4	
103	0450 3008N	Tapping Screw - M3x8	
104	0623 0120E	Spring Pin - M3x12	
105	1105 0623	Clamp - LBWS-0206S-V0	
106	0451 3014N	Tapping Screw:3x14	
107	0805 0088	Retaining Ring - M6	
108	0805 0089	Retaining Ring - M4	
109	0454 3006Q	Tapping Screw - M3x6	

7.Staple Tray Unit 1 (D610)

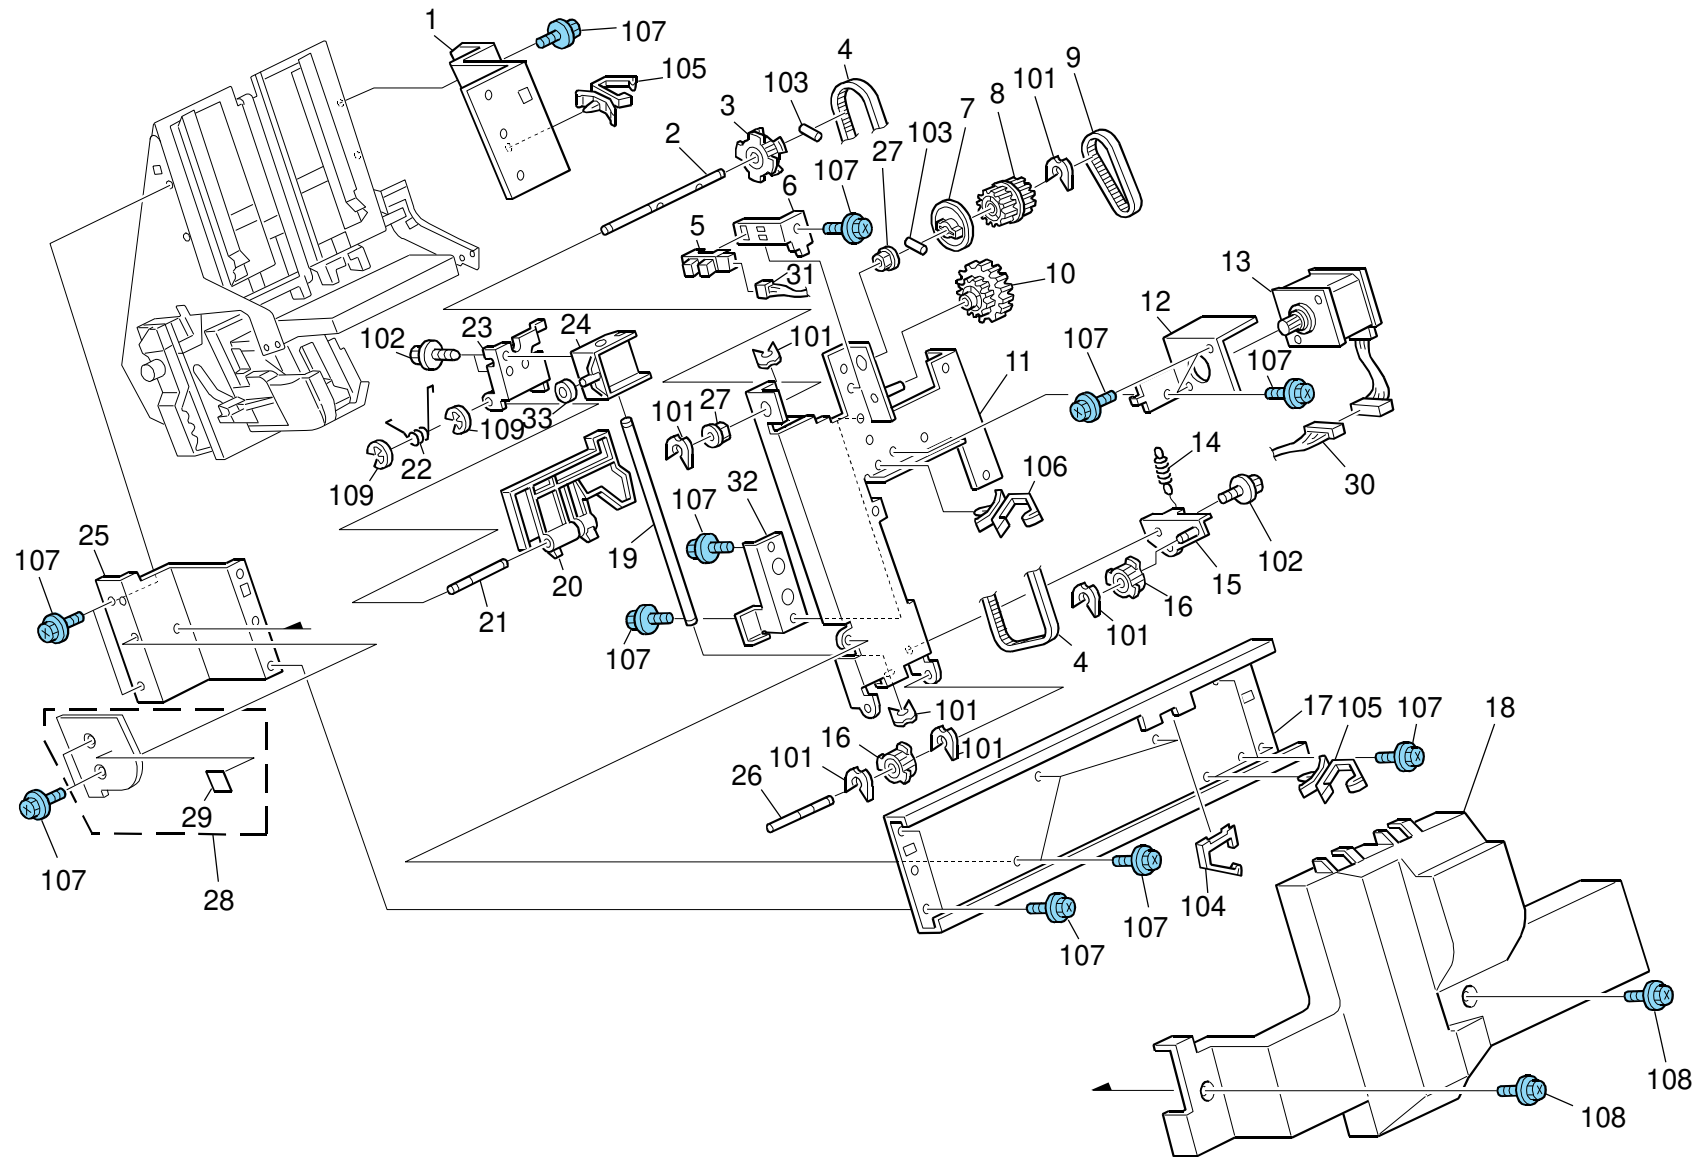


7.Staple Tray Unit 1 (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B706 4842	Bracket:Rear	1
2	B674 4523	Shaft - Upper Transport Pawl Pulley	1
3	B674 4527	Pulley - 48T	1
4	B830 4889	Timing Belt - 40S2M500	1
5	AW02 0156	Photointerruptor:EE-SX4235A-P2	1
6	B674 4525	Pawl Stopper Sensor Bracket	1
7	B674 4531	Gear - 30Z	1
8	B674 4529	Pulley - 20/36T	1
9	B652 1773	Timing Belt:B40S2M178	1
10	B674 4530	Gear - 20/30Z	1
11	B674 4511	Base:Pawl:Stopper:Ass'y	1
12	B706 4619	Bracket:Motor:Pawl:Stopper	1
13	B706 4140	Stepper Motor:Jogger Fence:DC 16W	1
14	B674 4536	Tension Spring	1
15	B674 4620	Pawl Stopper Belt Tensioner Ass'y	1
16	B674 4528	Pulley - 15T	2
17	B706 4841	Stay:Pawl:Stopper	1
18	D610 4851	Inner Cover:Pawl:Stopper	1
19	B674 4522	Pawl Stopper Guide Shaft	1
20	B706 4831	Pawl:Stopper	1
21	B674 4615	Shaft - Pawl Stopper	1
22	B674 4618	Pawl Stopper Torsion Spring	1
23	B674 4617	Pawl Stopper Bracket	1
24	B674 4613	Pawl Stopper Holder	1
25	B706 4843	Bracket:Front	1
26	B674 4540	Shaft:Pulley:Pawl:Transport:Low	1
27	5053 0447	Bushing - 6mm	1
28	D610 4845	Grip:Stapler Unit	1
29	D610 7815	Decal:Stapler Unit:R7	1
30	D460 5720	Harness:Motor:Connecting	1
31	D460 5710	Harness:Home Position Sensor:Connecting	1
32	B706 4526	Bracket:Pawl:Stopper	1
33	B674 4614	Pawl Stopper Guide Roller	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0805 0089	Retaining Ring - M4	
102	0450 3008N	Tapping Screw - M3x8	
103	0632 0100G	Pin - 2x10mm	
104	1105 0522	Edge Saddle - LES0510	
105	1105 0516	Clamp	
106	1105 0623	Clamp - LBWS-0206S-V0	
107	0454 3006Q	Tapping Screw - M3x6	
108	0454 3008Q	Tapping Screw:3x8	
109	0720 0040E	Retaining Ring - M4	

8.Staple Tray Unit 2 (D610)

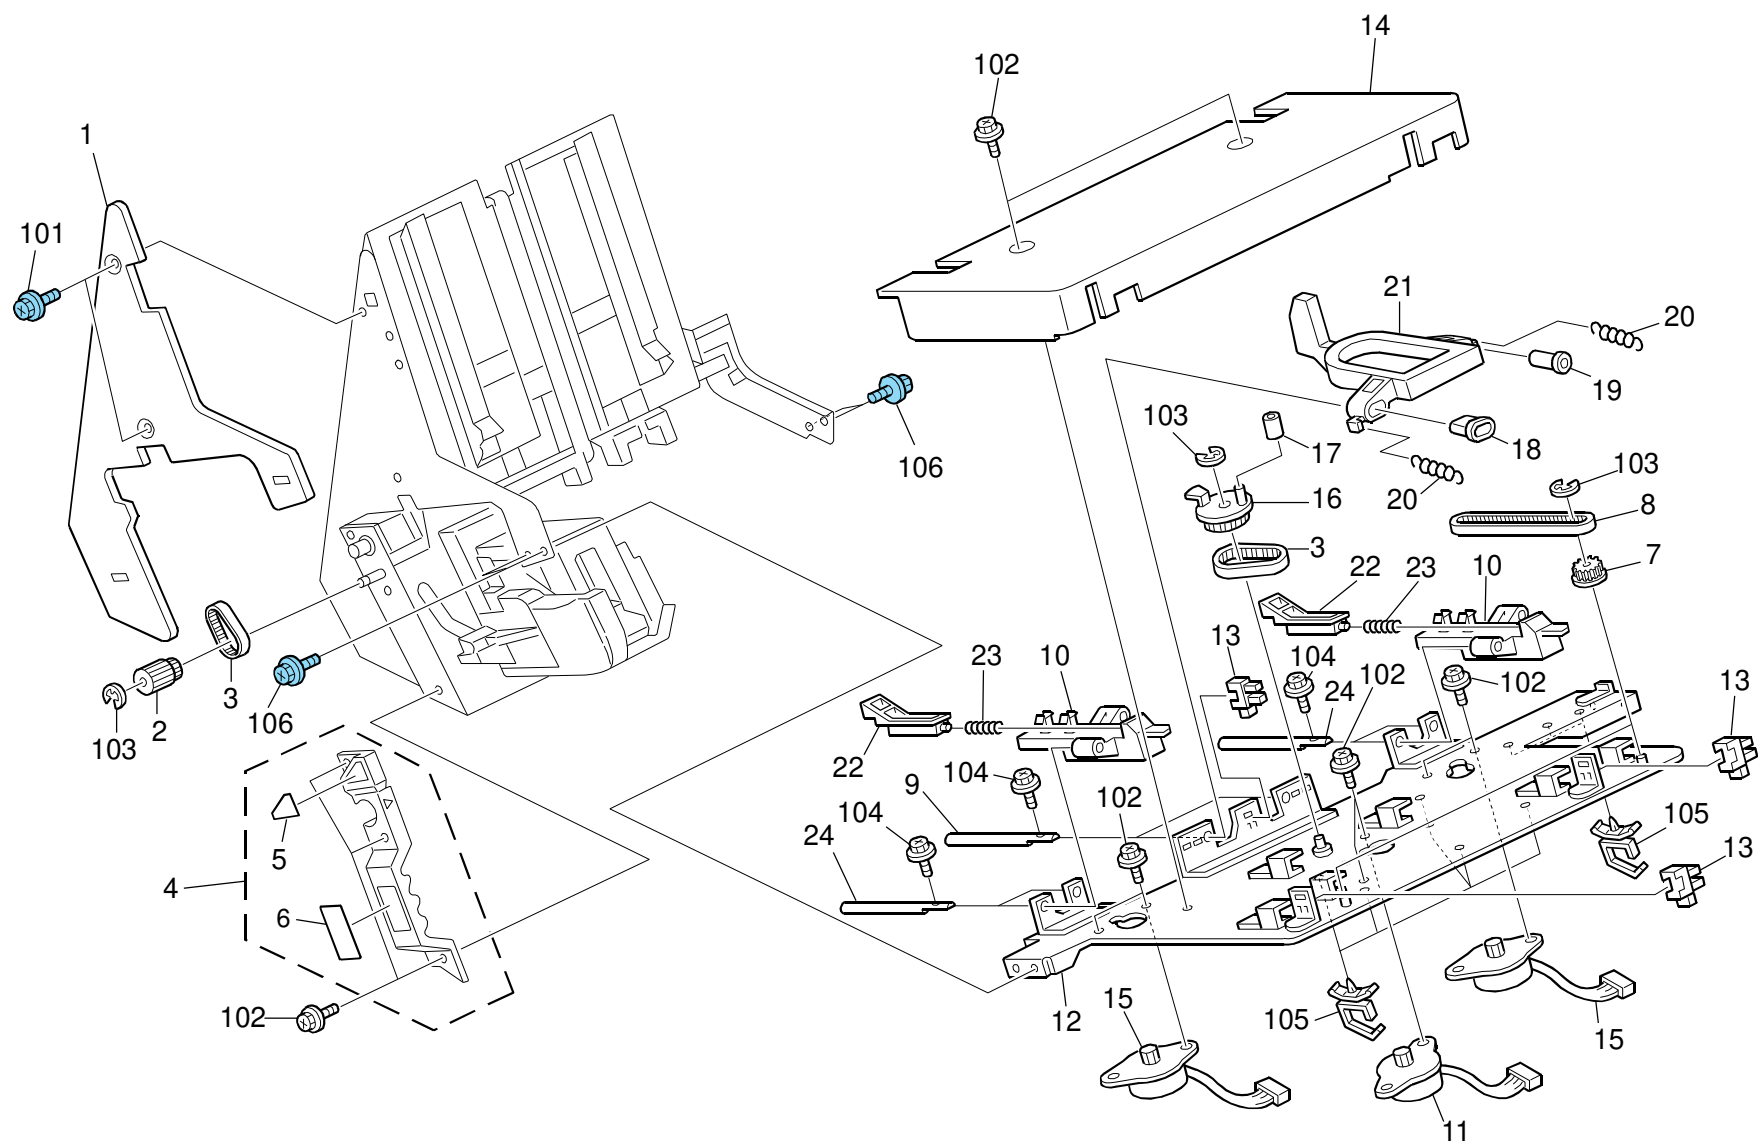


8.Staple Tray Unit 2 (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D610 6651	Inner Cover:Stapler Unit	1
2	D615 4273	Timing Pulley:24T:Knob	1
3	B302 4155	Timing Belt - 153P3M6	2
4	D610 4276	Cover:Stapler:Drive	1
5	D610 7809	Decal:Stapler Unit:R9	1
6	D610 7808	Decal:Stapler Unit:R8	1
7	B478 4135	Timing Pulley:18T	1
8	B478 4136	Timing Belt:B40S2M204	1
9	B302 4151	Stack Plate Shaft	2
10	B478 4132	Slider:Vibrating Plate	1
11	AX04 0161	Stepper Motor:MM42:0.95A:9.5V	1
12	B478 4111	Stay:Swing Unit:Ass'y	1
13	AW02 0156	Photointerruptor:EE-SX4235A-P2	2
14	D610 4142	Cover:Vibrating Plate	1
15	AX04 0139	Stepper Motor:MM42:0.95A:9.5V	2
16	B302 4141	Stack Plate Wheel	1
17	B302 4142	Stack Plate Guide	1
18	B302 4113	Bushing - 6x9mm	1
19	B302 4112	Bushing - 6mm	1
20	B706 4153	Spring:Vibrating Plate	2
21	D610 4115	Vibrating Plate:Paper	1
22	B478 4133	Vibrating Plate:Paper:Both Ends	2
23	B478 4134	Compression Spring:Plate:Moveable	2
24	B478 4137	Shaft:Vibrating Plate:Both Ends	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3008Q	Tapping Screw:3x8	
102	0451 3006N	Tapping Screw - 3x6	
103	0720 0040E	Retaining Ring - M4	
104	0451 3008N	Tapping Screw - M3x8	
105	1105 0487	Harness Clamp	
106	0454 3006Q	Tapping Screw - M3x6	

9.Staple Tray Unit 3 (D610)

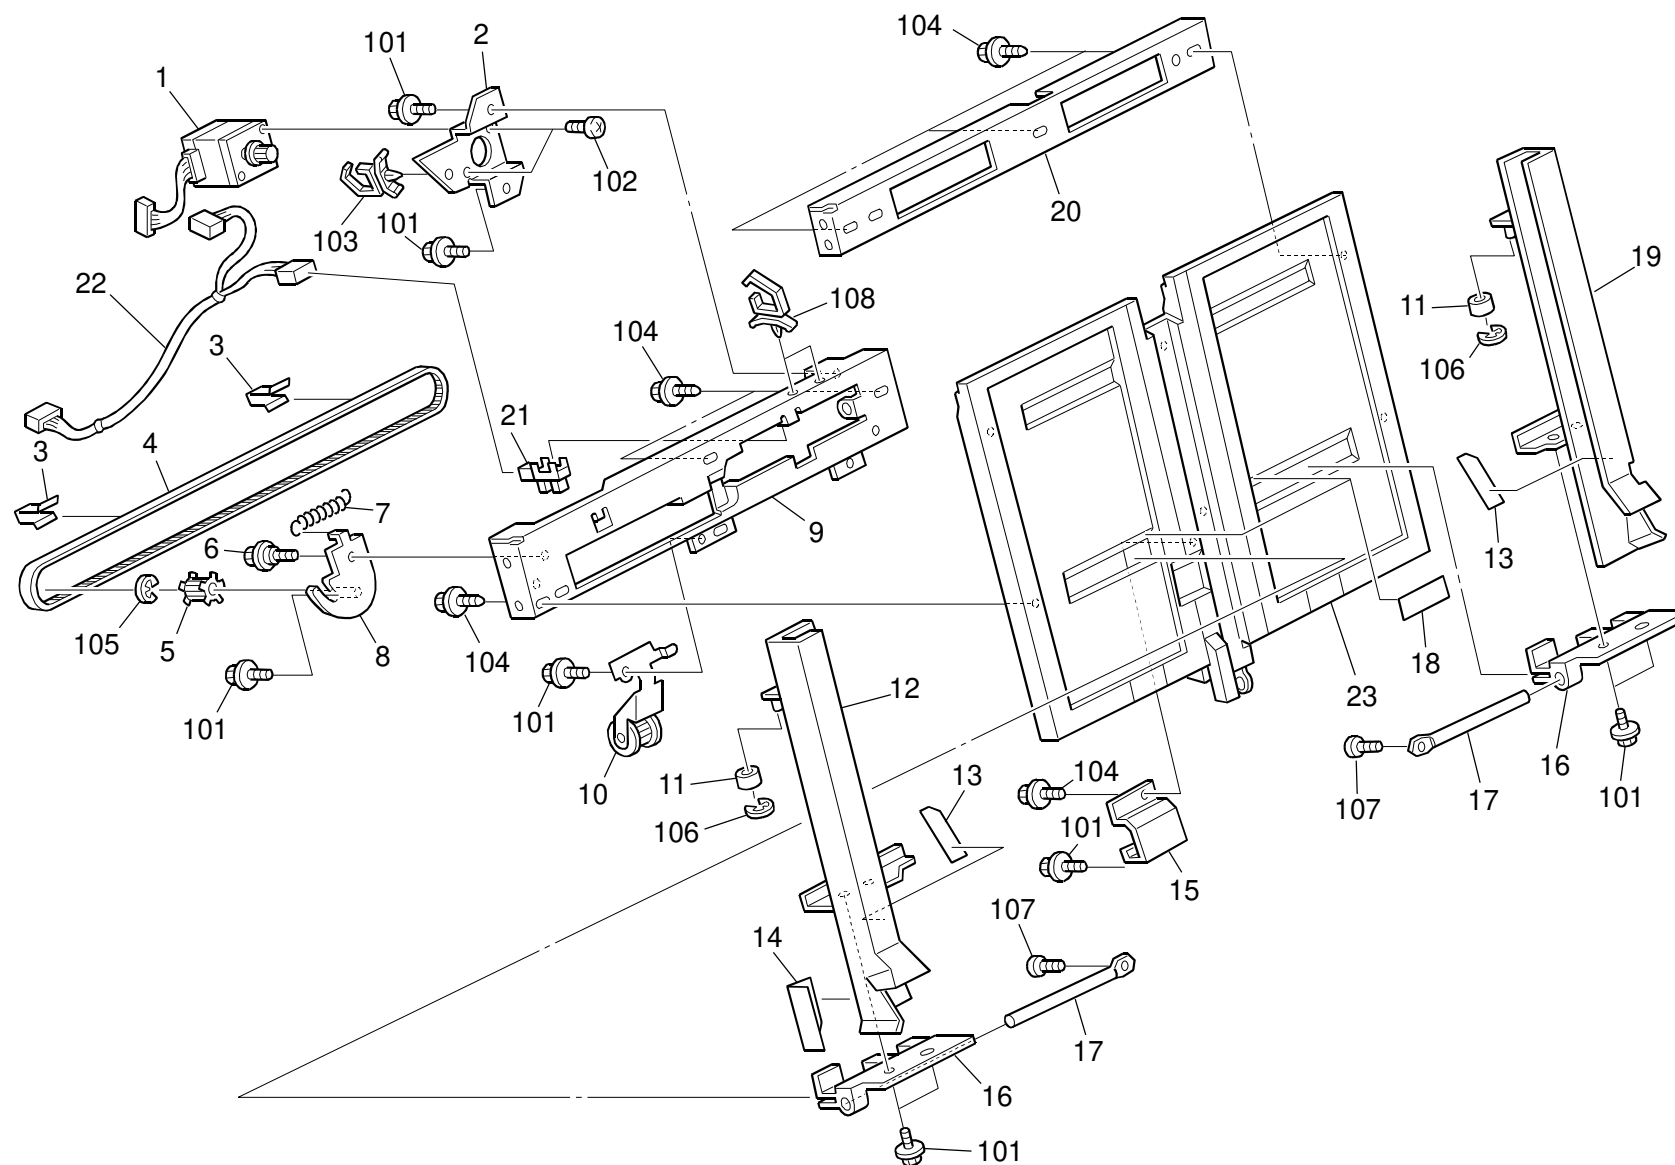


9.Staple Tray Unit 3 (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B830 5565	Stepper Motor DC6.7V 16W	1
2	B302 4752	Jogger Motor Bracket	1
3	A300 3634	Spring Plate - Timing Belt	2
4	B302 4756	Timing Belt - 753P3M6	1
5	AB03 0278	Idler - 20z	1
6	AA14 3790	Screw:Contact Point	1
7	AA06 2334	Tension Spring:4.9N	1
8	B468 4766	Tightener	1
9	B478 4749	Stay:Stapler:Middle	1
10	A666 3220	Tightener - Timing Belt	1
11	5201 2722	Bushing - M6x5	2
12	B706 4611	Jogger Fence:Front:Ass'y	1
13	B302 4629	Guide Mylar	2
14	B706 4631	Guide:Jogger Fence:Front	1
15	B706 4721	Guide Plate:Stapler Tray:Small	1
16	B302 4617	Jogger Fence Slider	2
17	B478 4619	Shaft:Jogger Fence:Slide	2
18	B302 4776	Guide Mylar - 17x60	2
19	B706 4625	Jogger Fence:Rear:Ass'y	1
20	B478 4738	Stay:Stapler:Upper	1
21	AW02 0156	Photointerruptor:EE-SX4235A-P2	1
22	D460 5361	Harness:Home Position Sensor:Stapler Tray	1
23	D610 4715	Guide Plate:Stapler Tray	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0313 0040N	Screw:M3x4	
103	1105 0516	Clamp	
104	0450 3008N	Tapping Screw - M3x8	
105	0720 0060E	Retaining Ring - M6	
106	0720 0040E	Retaining Ring - M4	
107	0951 3008N	Screw:Polished Round:M3x8	
108	1105 0623	Clamp - LBWS-0206S-V0	

10. Staple Tray Unit 4 (D610)

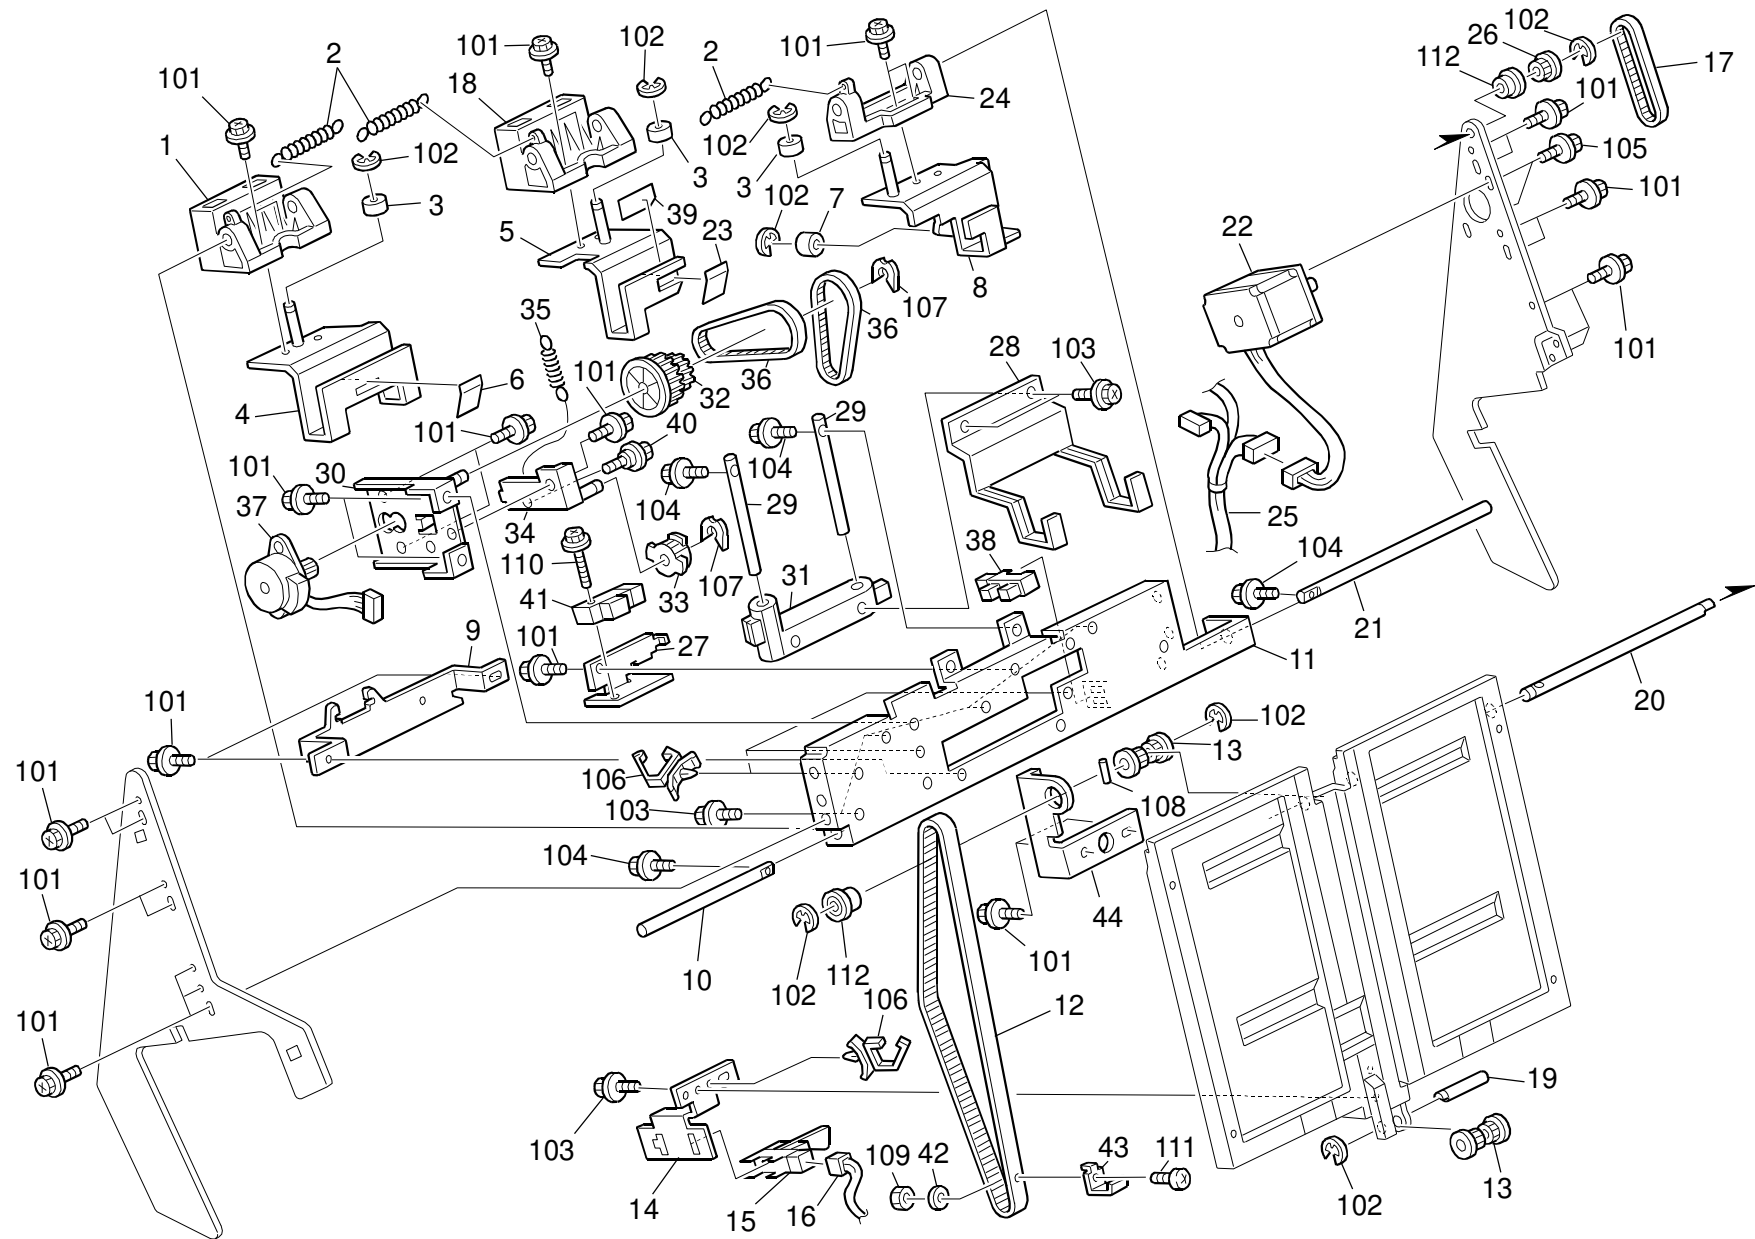

10.Staple Tray Unit 4 (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B478 4515	Slider:Standard Fence:Ass'y	1
2	B700 4107	Spring:Return:Standard Fence	3
3	B478 4538	Bushing:Standard Fence	3
4	B706 4511	Standard Fence:Front:Ass'y	1
5	B706 4521	Standard Fence:Rear:Ass'y	1
6	B302 4517	Mylar Guide	1
7	B302 4239	Guide Roller	1
8	B706 4531	Standard Fence:Rear:Auxiliary:Ass'y	1
9	B706 4981	Bracket:Shaft:Standard Fence	1
10	B302 4541	Front Shaft - Slide Holder	1
11	B706 4940	Base:Standard Fence:Moveable:Ass'y	1
12	B302 4772	Timing Belt - 898P2M14	1
13	A666 3180	Timing Pulley - Z32	2
14	B302 4727	Bracket - Feed - Out Belt Sensor	1
15	AW02 0169	Photointerruptor - OS - 580213-703	1
16	B706 5390	Harness:Sensor:Stapler Tray:Connecting	1
17	B302 4421	Timing Belt - 293P3M6	1
18	B478 4525	Slider:Standard Fence:Rear:Ass'y	1
19	B302 4731	Lower Exit Shaft	1
20	B706 4786	Shaft:Exit:Upper	1
21	B302 4542	Rear Shaft - Slide Holder	1
22	B830 5564	Stepper Motor DC1.35V 4W	1
23	D460 4538	Plate:Trailing Edge	1
24	B478 4535	Slider:Standard Fence:Auxiliary	1
25	D460 5380	Harness:Solenoid:Exchange Powl: Transport Section	1
26	A697 2260	Pulley - 17T	1
27	B706 4943	Bracket:Sensor:Stapler Tray	1
28	B706 4951	Standard Fence:Moveable	1
29	B706 4952	Shaft:Guide:Standard Fence:Moveable	2
30	B706 4970	Bracket:Motor:Standard Fence:Moveable: Ass'y	1
31	B674 4324	Standard Fence Moveable Holder	1
32	B674 4330	Pulley - 32/53T	1
33	B674 4334	Pulley - 20T	1

Index No.	Part No.	Description	Q'ty Per Assembly
34	B674 4335	Standard Fence Belt Tensioner	1
35	B674 4338	Standard Fence Tension Spring	1
36	B674 4339	Timing Belt - B40S2M192	2
37	B468 5780	Stepper Motor - DC 20.4W	1
38	AW02 0156	Photointerruptor:EE-SX4235A-P2	1
39	B478 4527	Guide:Paper:Inner Back	1
40	AA14 3790	Screw:Contact Point	1
41	AW01 0091	Photo Reflection Sensor	1
42	A353 2763	Washer - M5	1
43	B302 4773	Paper Exit Pawl	1
44	B830 4784	Bracket:Exit:Upper	1
101	0451 3006N	Tapping Screw - 3x6	
102	0720 0040E	Retaining Ring - M4	
103	0450 3008N	Tapping Screw - M3x8	
104	0451 3010N	Tapping Screw:3x10	
105	0451 4006N	Tapping Screw - 4x6	
106	1105 0623	Clamp - LBWS-0206S-V0	
107	0805 0089	Retaining Ring - M4	
108	0632 0100G	Pin - 2x10mm	
109	0710 0020P	Hexagonal Nut:M2	
110	0451 3014N	Tapping Screw:3x14	
111	0242 0035N	Pan Head Screw:M2x3.5	
112	0741 3506	Ball Bearing - 6x12x4 mm	

This exploded view diagram illustrates the assembly of a mechanical device, likely a door handle or latch. The components are numbered 1 through 121, with additional callouts 101 through 119 indicating specific fasteners and sub-components. The diagram shows the following parts and their assembly relationships:

- 1**: Main base plate.
- 2**: Long horizontal mounting rail.
- 3**: Internal frame or support structure.
- 4**: Vertical mounting plate.
- 5**: U-shaped bracket.
- 6**: Small circular component.
- 7**: Long thin rod or pin.
- 8**: Small rectangular component.
- 9**: Small rectangular component.
- 10**: L-shaped bracket.
- 11**: Circular component with a central hub.
- 12**: Small rectangular component.
- 13**: Small rectangular component.
- 14**: Spring.
- 15**: Small circular component.
- 16**: Small rectangular component.
- 17**: Spring.
- 18**: L-shaped bracket.
- 19**: Small rectangular component.
- 20**: Long thin rod or pin.
- 21**: Small rectangular component.
- 22**: Small rectangular component.
- 23**: Small rectangular component.
- 24**: Small rectangular component.
- 25**: Spring.
- 26**: Long thin rod or pin.
- 27**: Small circular component.
- 28**: Small rectangular component.
- 29**: Small rectangular component.
- 101**: Screws and bolts.
- 102**: Washers.
- 103**: Nut.
- 104**: Small circular component.
- 105**: Small rectangular component.
- 106**: Small rectangular component.
- 107**: Small rectangular component.
- 108**: Small rectangular component.
- 109**: Spring.
- 110**: Screws and bolts.
- 111**: Washers.
- 112**: Small rectangular component.
- 113**: Small rectangular component.
- 114**: Small rectangular component.
- 115**: Small rectangular component.
- 116**: Small rectangular component.
- 117**: Small rectangular component.
- 118**: Small rectangular component.
- 119**: Small rectangular component.


The diagram uses dashed lines to show the assembly path and arrows to indicate the direction of movement for certain components.

11.Staple Tray Unit 5 (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B478 4277	Guide:Harness:Stapler	1
2	B478 4255	Guide Rod:Stapler	1
3	B302 4258	Stay:Stapler:Ass'y	1
4	B478 4412	Side Plate:Rear:Stapler:Ass'y	1
5	B478 4259	Timing Belt:171P3M6	1
6	B478 4256	Timing Pulley:20T-30T	1
7	B302 4756	Timing Belt - 753P3M6	1
8	B478 4271	Ball Bearing:Slide:Ass'y	2
9	B302 4292	Belt Holder	1
10	B478 4911	Arm:Swing Unit	1
11	B302 4271	Drive Cam - Stapler Unit	1
12	AX05 0279	Stepper Motor:MM42:1.7A:4.08V	1
13	B830 5565	Stepper Motor DC6.7V 16W	1
14	B478 4257	Tension Spring:Tightener	1
15	AB03 0278	Idler - 20Z	1
16	B468 4766	Tightener	1
17	AA14 3790	Screw:Contact Point	1
18	B478 4311	Side Plate:Front:Stapler	1
19	B302 4243	DC Solenoid:24V:1/5Duty	1
20	B302 4274	Worm Gear Shaft	1
21	B478 4291	Bracket:Stay:Timing Belt	1
22	AW02 0156	Photointerruptor:EE-SX4235A-P2	3
23	D460 4261	Slider:Base:Stapler:Ass'y	1
24	B302 4272	Worm Gear - Z1	1
25	B706 4269	Tension Spring:Arm:Return	1
26	B302 4270	Return Arm - Stapler Unit	1
27	AA08 0072	Bushing - 6x10x3	1
28	B302 4297	Bracket:Sensor:Return	1
29	B302 4266	Guide Rail - Stapler Unit	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0720 0060E	Retaining Ring - M6	
103	0451 4010N	Tapping Screw:4x10	
104	0720 0040E	Retaining Ring - M4	
105	0313 0040N	Screw:M3x4	
106	1105 0328	Harness Clamp - ES-0505	
107	1105 0487	Harness Clamp	
108	1105 0310	Harness Clamp - LWS-1S	
109	0633 0100G	Parallel Pin - 3x10	
110	0454 3006Q	Tapping Screw - M3x6	
111	0740 3506	Ball Bearing - 6x12x4 mm	
112	1105 0323	Nylon Clamp:2N	
113	1105 0062	Nylon Clamp - 6N	
114	1105 0176	Nylon Clamp	
115	1105 0518	Edge Saddle - LES-1010	
116	1105 0508	Harness Clamp - LWS-0711	
117	0451 3008N	Tapping Screw - M3x8	
118	1105 0488	Harness Clamp	
119	1105 0291	Harness Clamp - LWS-3S	
120	1105 0413	Harness Clamp	
121	1105 0623	Clamp - LBWS-0206S-V0	

12.Staple Tray Unit 6 (D610)

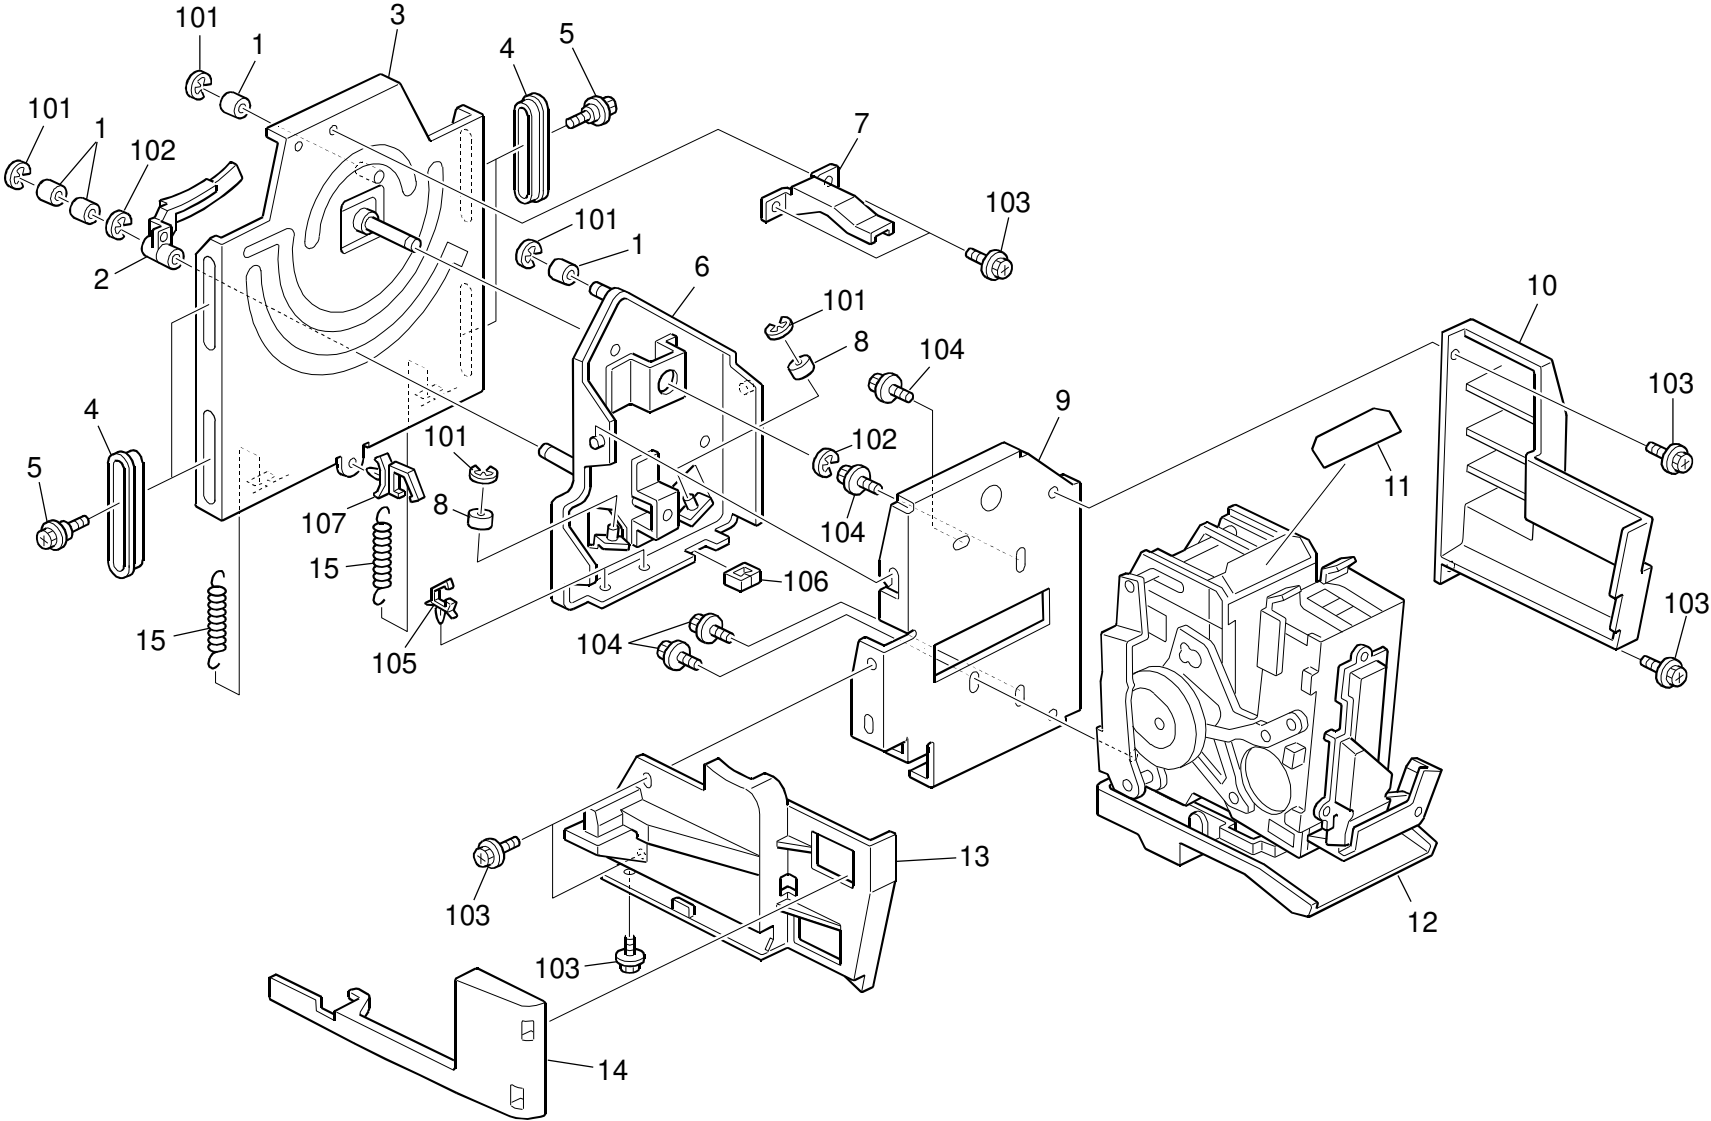


12.Staple Tray Unit 6 (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B302 4239	Guide Roller	4
2	B302 4229	Sensor Actuator	1
3	D460 4248	Holder:Middle:Stapler:Ass'y	1
4	B302 4238	Slide Guide	4
5	AA14 3702	Screw:Pin:Positioning	4
6	B302 4218	2nd Holder - Stapler Unit	1
7	B302 4247	Slider Hook	1
8	A377 4741	Roller - M14	2
9	B302 4214	Stapler Bracket	1
10	D610 4217	Cover:Stapler:Rear	1
11	B478 4219	Guide:Stapler:Entrance	1
12	AJ01 1017	Stapler:EH-1100R2	1
13	D610 4215	Cover:Stapler:Front	1
14	D610 4216	Cover:Harness:Stapler	1
15	B706 4267	Tension Spring:Stapler Unit:Upper Lower	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0720 0040E	Retaining Ring - M4	
102	0720 0060E	Retaining Ring - M6	
103	0451 3006N	Tapping Screw - 3x6	
104	0451 4008N	Tapping Screw:4x8	
105	1105 0534	Clamp	
106	1105 0243	Wire Saddle	
107	1105 0516	Clamp	

13.Paper Tray Drive Section 1 (D610)

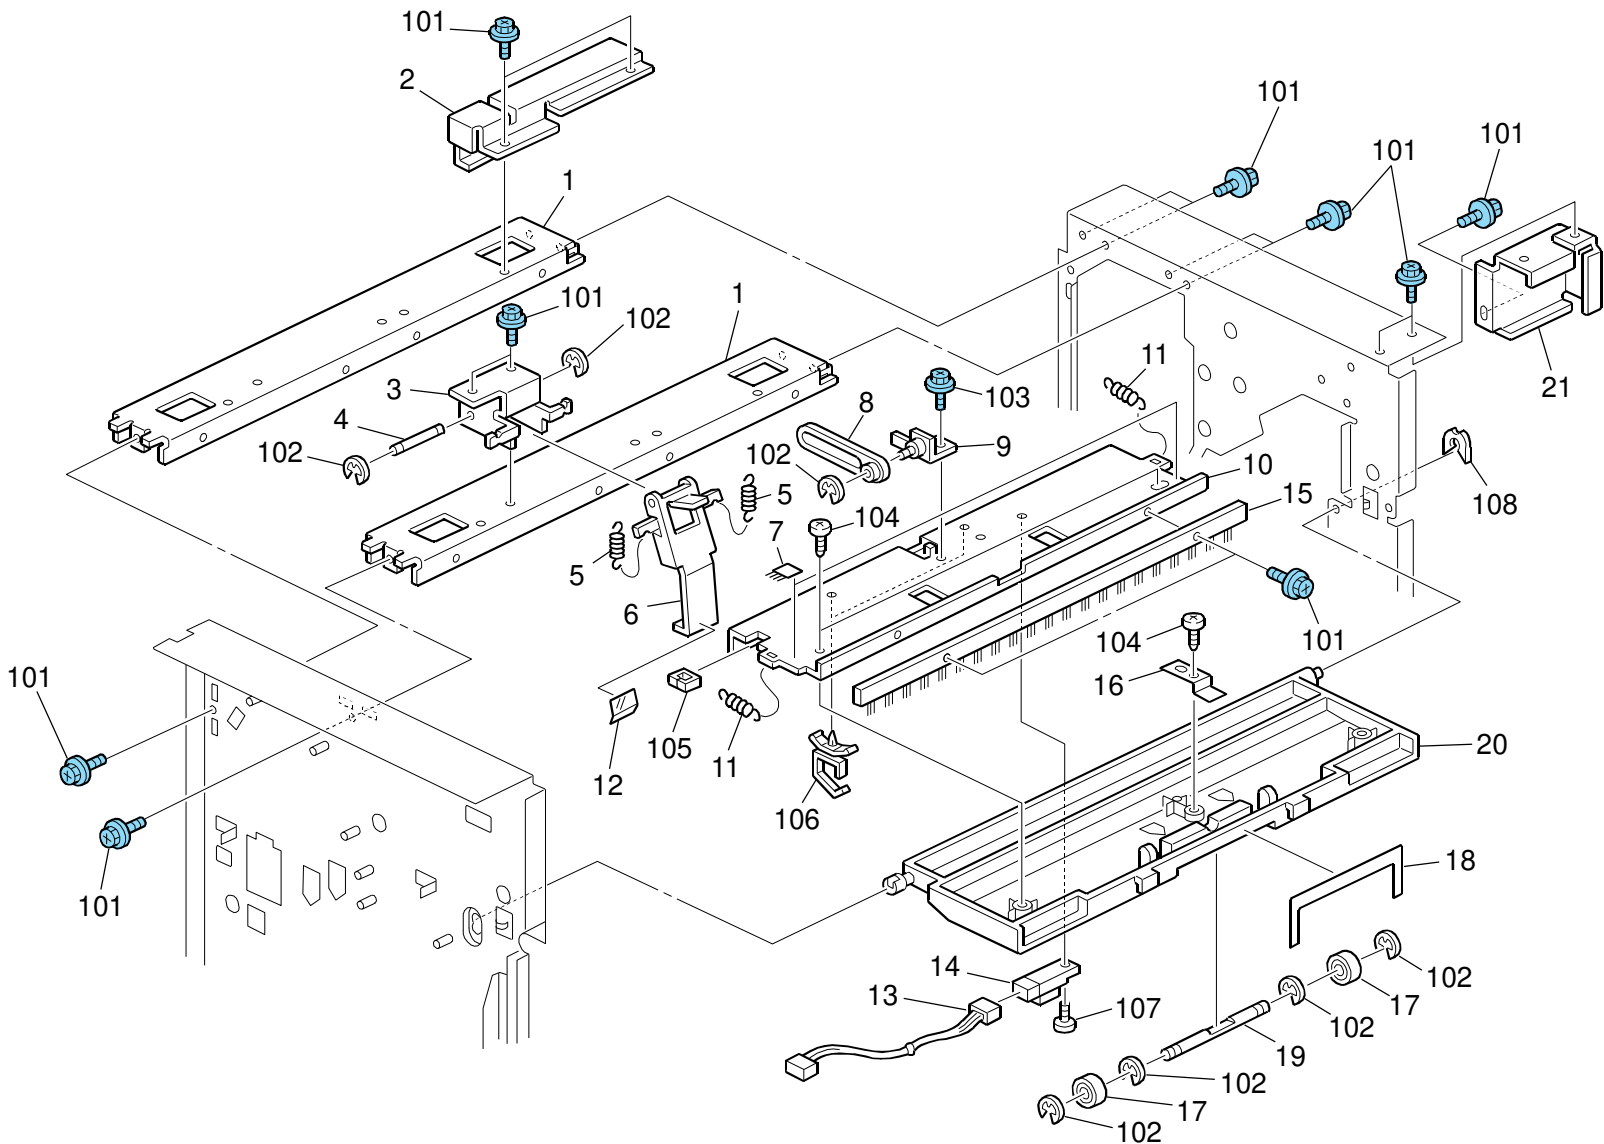


13.Paper Tray Drive Section 1 (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B408 1413	Coupling Stay	2
2	B302 6414	Upper Cover Stay	1
3	B302 2297	Guide Holder Bracket	1
4	B302 2293	Guide Holder Shaft	1
5	B302 2294	Guide Holder Tension Spring	2
6	B302 2298	Guide Holder Lever	1
7	A697 2131	Antistatic Brush	2
8	B302 2326	Link - Upper Exit Guide	1
9	B706 3361	Bracket:Guide:Exit	1
10	B302 2329	Exit Guide Bracket	1
11	B302 2328	Exit Guide Shift Spring	2
12	B302 2295	Guide Holder Film	1
13	D460 5271	Harness:Paper Feed Sensor:Shift Tray: Connecting	1
14	AW01 0124	Photo Refiection Sensor:GP2A200LCS0F	1
15	B706 2323	Discharge Brush:L=320:MM3	1
16	A353 3354	Driven Roller Holder	1
17	B478 2328	Exit Roller:Driven	2
18	A379 2215	Exit Mylar	1
19	C308 2324	Shaft:Exit Roller:Driven	1
20	A697 2175	Upper Exit Guide	1
21	B478 6413	Stay:Front Left	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0720 0040E	Retaining Ring - M4	
103	0454 4006Q	Tapping Screw:4x6	
104	0452 4008N	Tapping Screw:M4x8	
105	1105 0328	Harness Clamp - ES-0505	
106	1105 0623	Clamp - LBWS-0206S-V0	
107	0313 0060N	Screw - M3x6	
108	0805 0089	Retaining Ring - M4	

14. Paper Tray Drive Section 2 (D610)

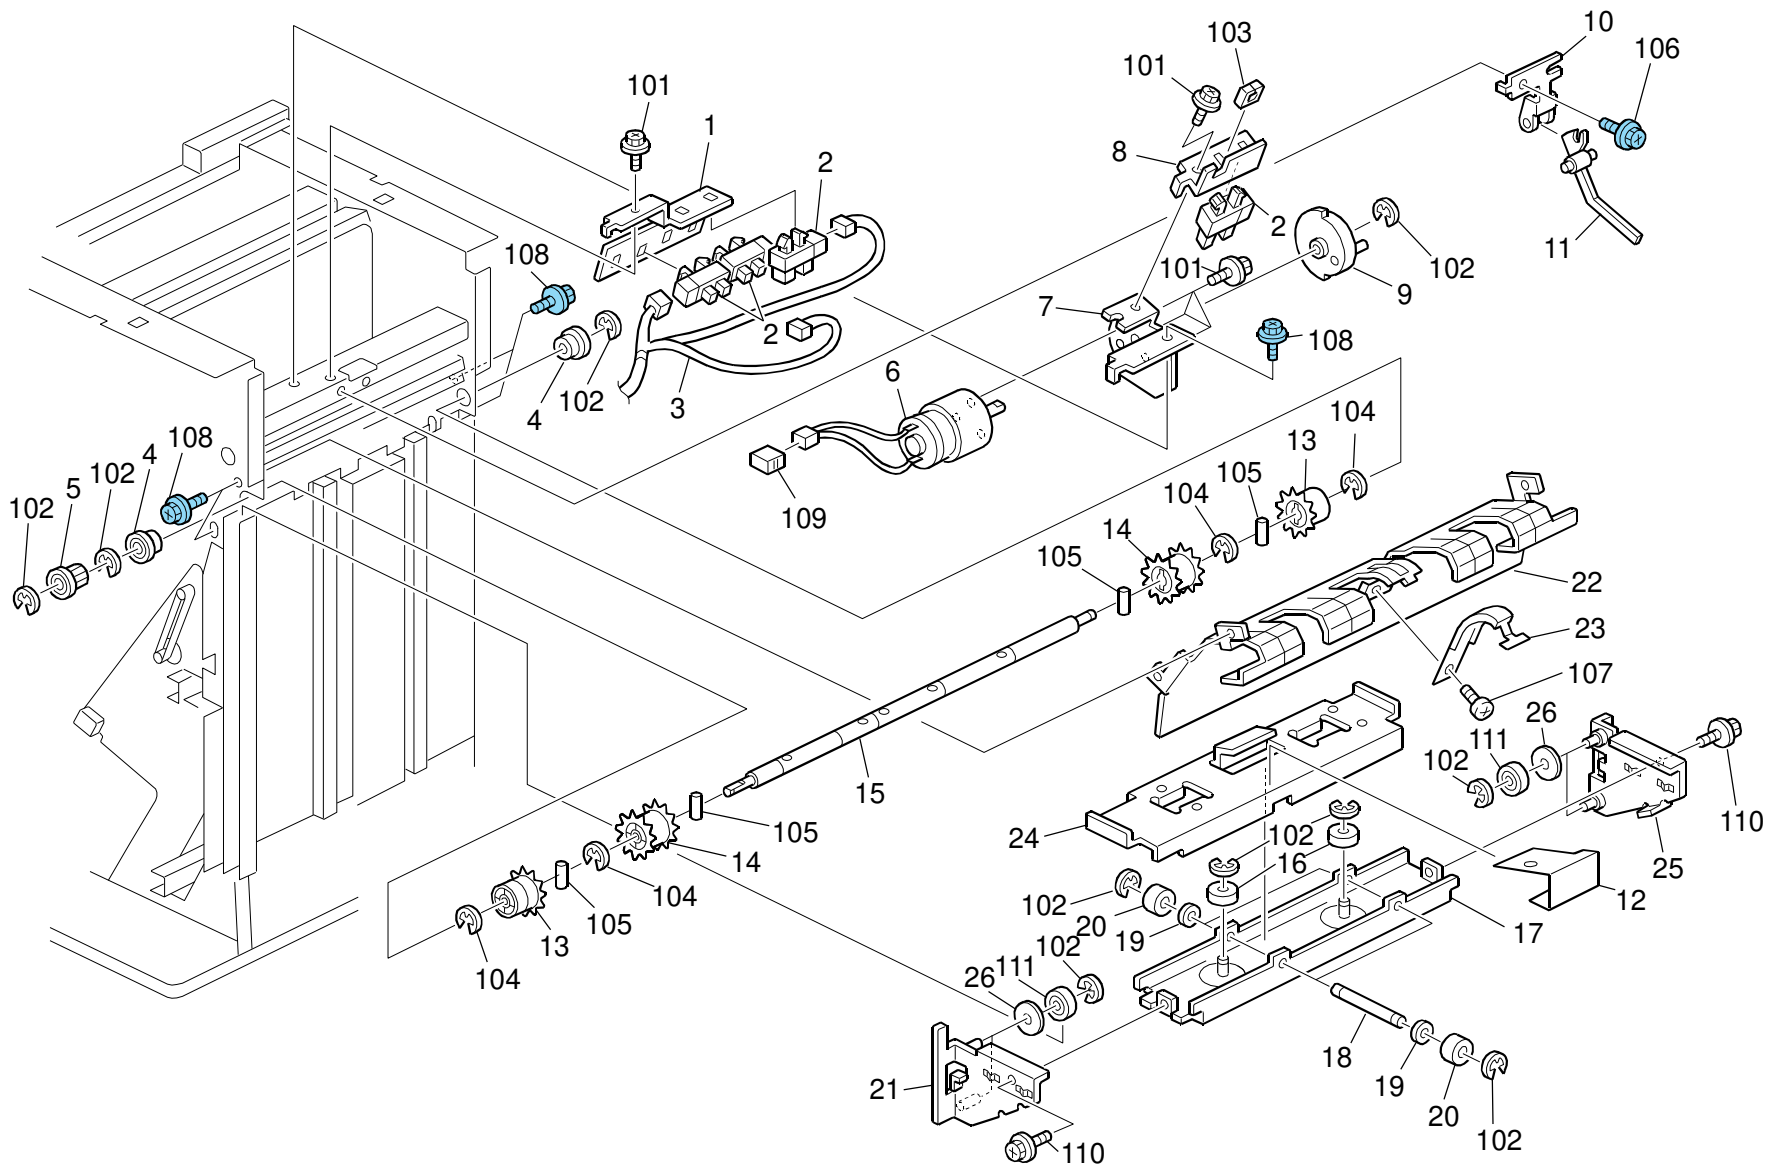


14.Paper Tray Drive Section 2 (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B706 1143	Bracket:Sensor:Paper	1
2	AW02 0156	Photointerruptor:EE-SX4235A-P2	4
3	D460 5281	Harness:Sensor:Paper Exit Sub-unit:	
		Shift Tray:Connecting	1
4	A859 2230	Ball Bearing - 6x13x5	2
5	A697 2260	Pulley - 17T	1
6	AX04 0160	DC Motor:DC24V 4.8W	1
7	B706 1146	Bracket:DC Motor:Drive:Guide Plate:Exit	1
8	B706 1148	Bracket:Hp Sensor:Guide Plate:Exit	1
9	B302 1147	Guide Pulley - Exit Guide Plate	1
10	B706 3172	Actuator Bracket	1
11	B706 1145	Lever:Sensor:Upper	1
12	B478 3113	Shift Tray Guide Holder	1
13	B302 2305	Middle Exit Roller	2
14	B830 2302	Roller:Exit Roller:Inner:Ass'y	2
15	B302 2311	Exit Roller Shaft	1
16	B830 3315	Roller	2
17	B830 3350	Base:Shift Tray:Ass'y	1
18	B706 3271	Tray Shift Shaft	2
19	AA13 2024	Spacer - M6	4
20	A353 3272	Guide Roller	4
21	B830 3345	Side Plate:Shift Tray:Rear:Ass'y	1
22	D460 2333	Guide Plate:Exit:Lower:Sub-ass'y	1
23	B478 2332	Spring Plate:Shift:Exit	1
24	B706 3126	Shift Tray Holder	1
25	B830 3340	Side Plate:Shift Tray:Front:Ass'y	1
26	B830 3322	Guide:Shift Tray:Upper Lower	4

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0720 0040E	Retaining Ring - M4	
103	1105 0328	Harness Clamp - ES-0505	
104	0720 0060E	Retaining Ring - M6	
105	0633 0120G	Parallel Pin - 3x12	
106	0454 4006Q	Tapping Screw:4x6	
107	0313 0040N	Screw:M3x4	
108	0454 3006Q	Tapping Screw - M3x6	
109	1102 4473	CT Connector - 2P	
110	0454 3008N	Tapping Screw:Round Point:3x8	
111	0740 3906	Ball Bearing - 6x15x5	

15.Paper Tray Drive Section 3 (D610)

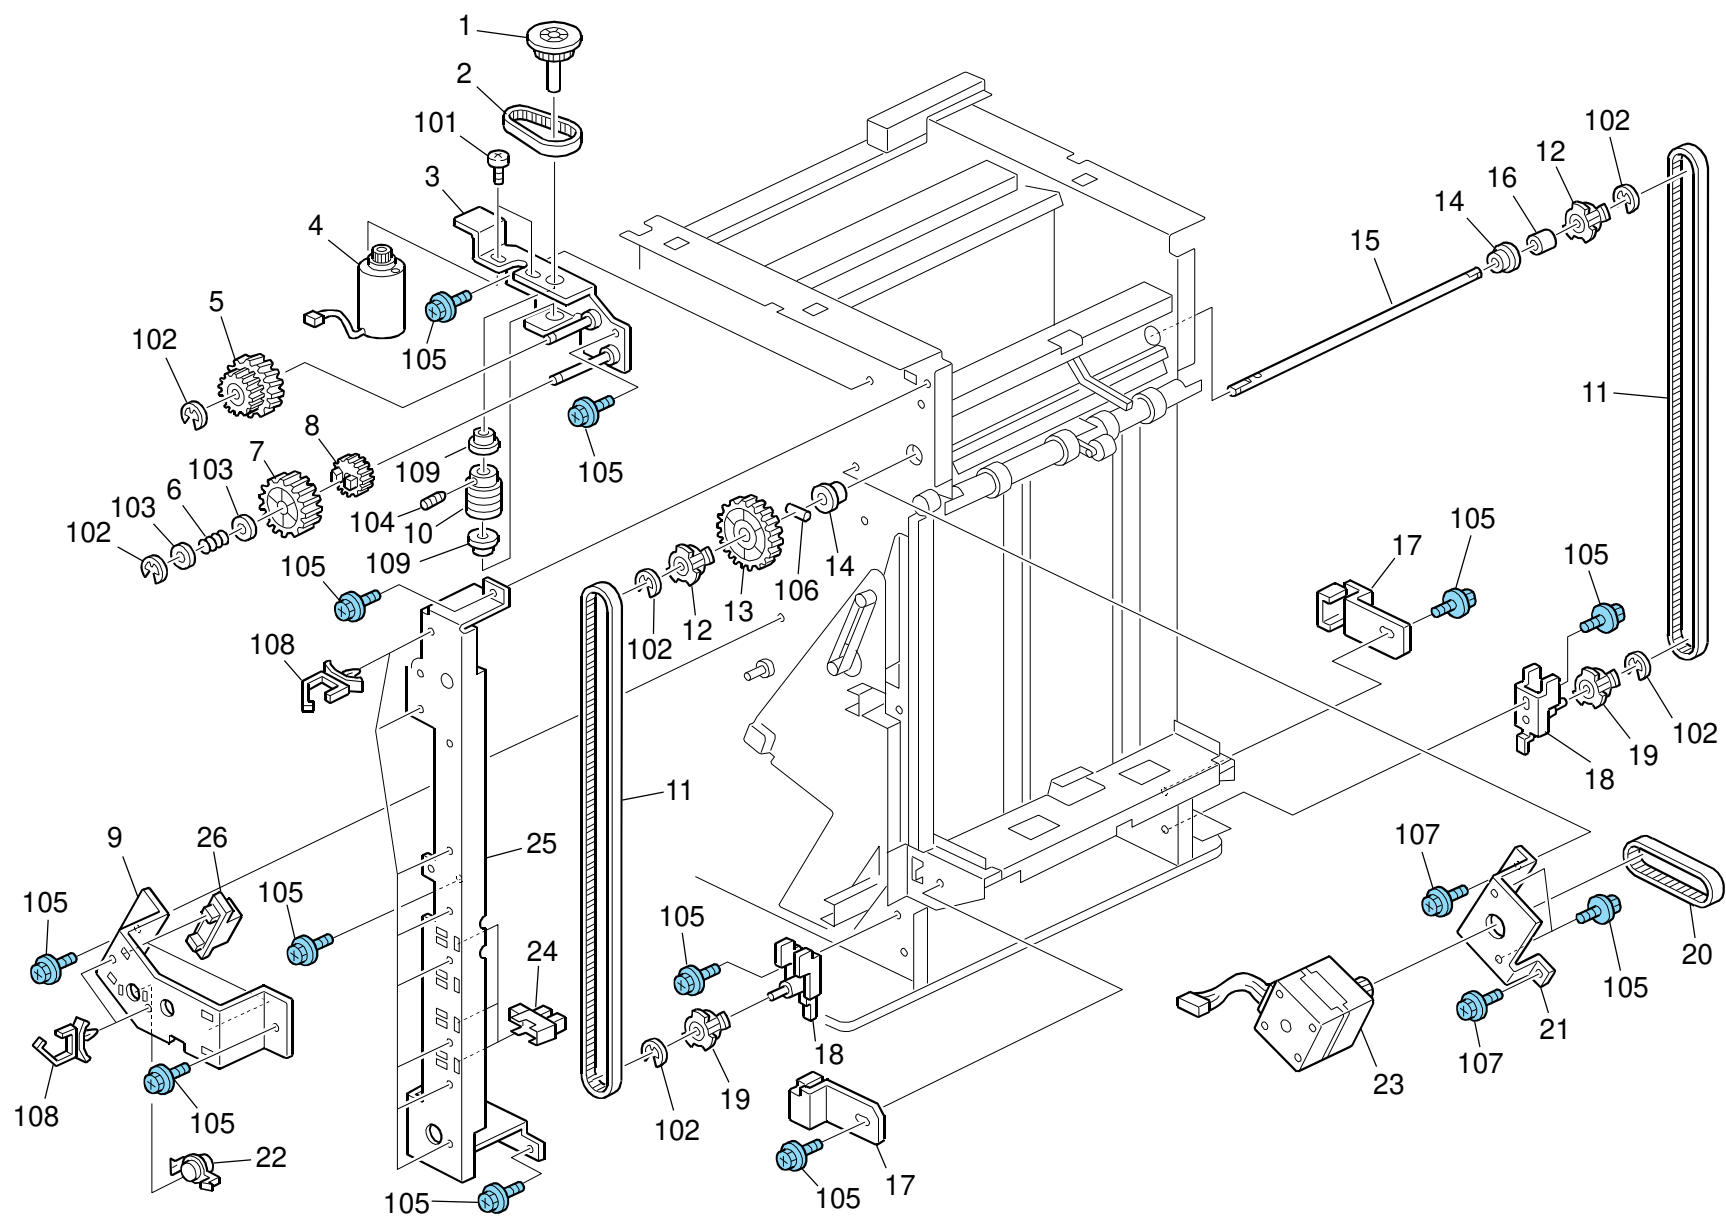


15.Paper Tray Drive Section 3 (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A697 3225	Worm Wheel Shaft	1
2	AA04 3054	Timing Belt - 142 P2M4	1
3	D460 3130	Bracket:Drive:Upper Lower:Ass'y	1
4	AX05 0323	DC Motor:24V:9W	1
5	A697 3145	Gear - 36Z/18Z	1
6	B700 3322	Compression Spring - 10N	1
7	A697 3140	Gear - 30Z	1
8	A697 3135	Gear - 18Z	1
9	B478 1192	Bracket:Coupling:Upper	1
10	A300 2736	Worm Gear	1
11	A697 3155	Timing Belt - B60S5M1420	2
12	A697 3180	Pulley - 18T	2
13	A697 3170	Gear - 42Z	1
14	C203 5135	Bushing - 10x14x5.9	2
15	A697 3165	Tray Drive Shaft	1
16	A697 3175	Spacer - 10x14x13.5mm	1
17	A697 3150	Fixing Plate - Timing Belt	2
18	B706 3190	Tighter Bracket	2
19	A697 3185	Pulley - 18T	2
20	AA04 3305	Timing Belt - 210P3M6	1
21	B706 1535	Bracket:Drive:Exit Roller	1
22	B478 1174	Holder:Coupling:Upper	1
23	D460 5561	DC Stepper Motor:Transport:MM42:Ass'y	1
24	AW02 0114	Photo Interruptor - Lower Limit	3
25	B706 3161	Bracket:Sensor:Paper Volume Sensor	1
26	AG07 1012	Magnet Catch:Ass'y	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0313 0050N	Philips Pan Head Screw - M3x5	
102	0720 0060E	Retaining Ring - M6	
103	0807 5056	Washer - 8.1mm	
104	0574 0040E	Hexagon Headless Set Screw - M4x4	
105	0454 3006Q	Tapping Screw - M3x6	
106	0634 0200G	Parallel Pin - 4x20	
107	0454 4006Q	Tapping Screw:4x6	
108	1105 0488	Harness Clamp	
109	0741 3506	Ball Bearing - 6x12x4 mm	

16.Paper Tray Drive Section 4 (D610)

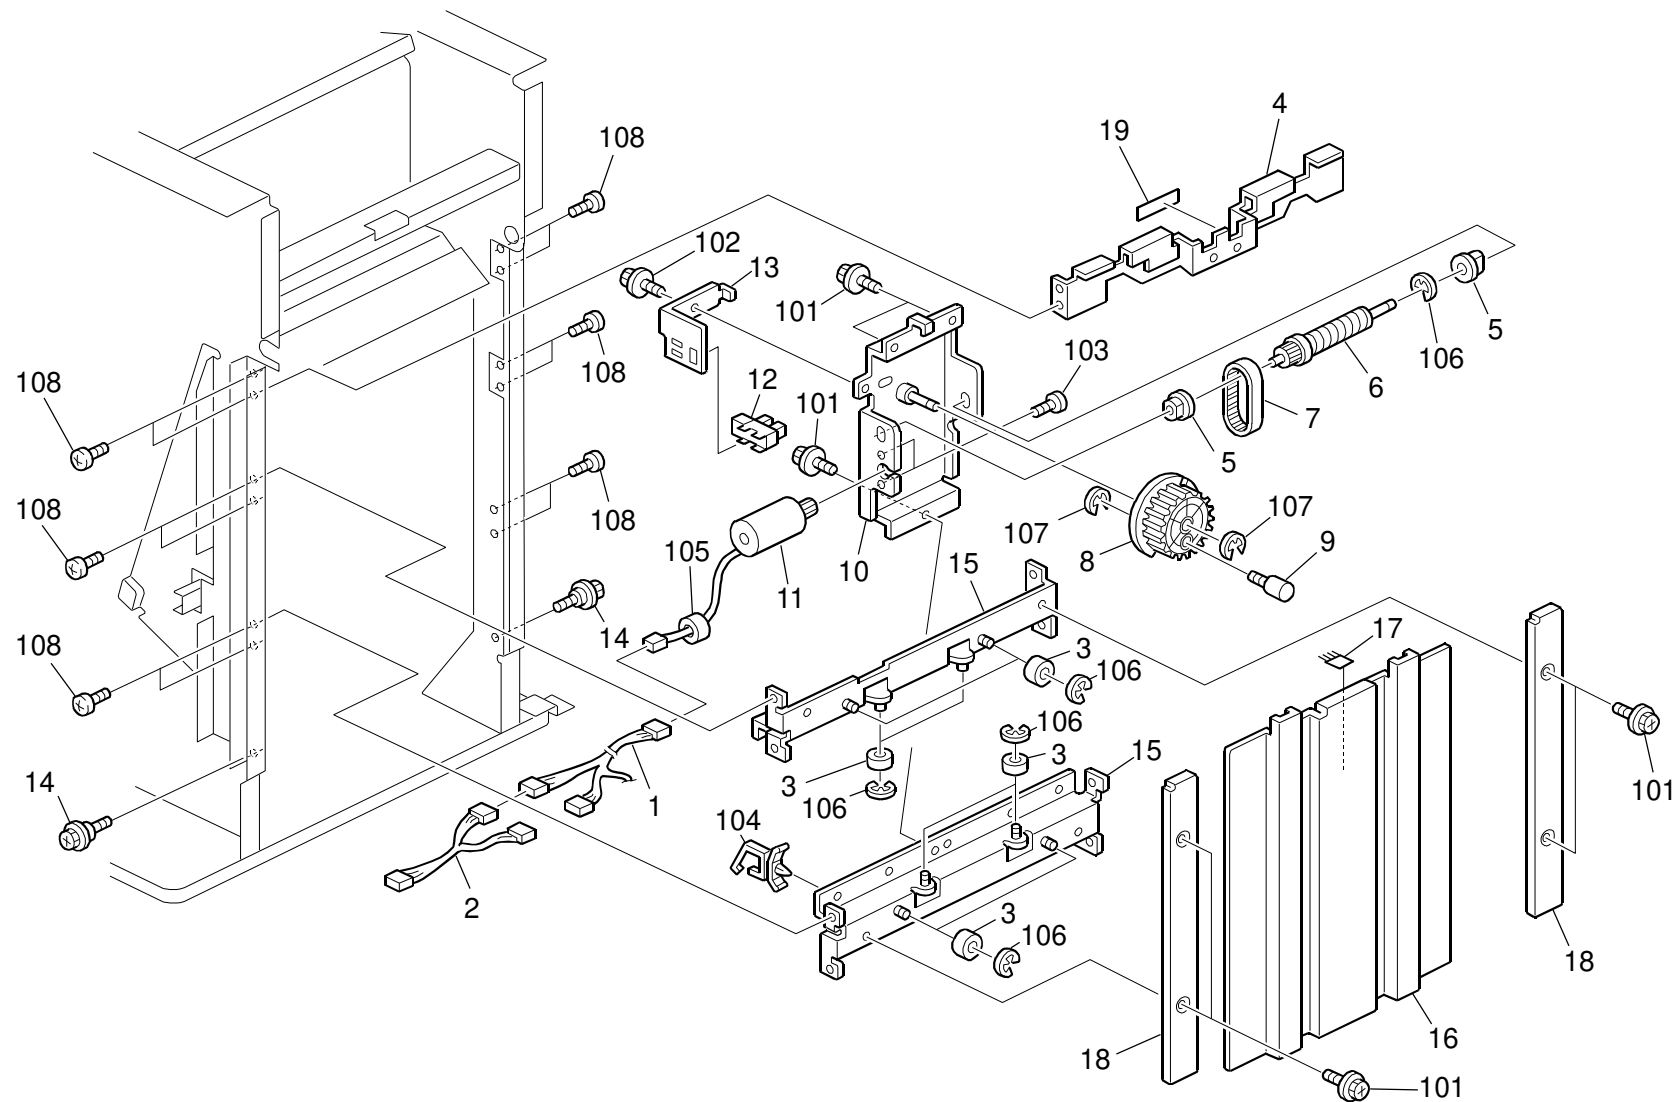


16.Paper Tray Drive Section 4 (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B706 5301	Harness:Shift Tray Section	1
2	B706 5295	Harness:Shift Tray Section:Connecting	1
3	AA13 2011	Slider Guide Roller	8
4	D460 3100	Cover:Exit Roller	1
5	5053 0447	Bushing - 6mm	2
6	B302 3215	Worm Pulley - 29Z	1
7	AA04 3637	Timing Belt - 40S2M124	1
8	A697 3195	Worm Wheel	1
9	B478 3200	Shaft:Shift:Slide	1
10	D460 3214	Bracket:Shift:Ass'y	1
11	AX05 0323	DC Motor:24V:9W	1
12	AW02 0156	Photointerruptor:EE-SX4235A-P2	1
13	D460 3205	Bracket:Photointerruptor:Shift	1
14	AA14 3702	Screw:Pin:Positioning	2
15	D460 3121	Exit Stay	2
16	D460 3107	End Fence	1
17	A697 2131	Antistatic Brush	1
18	A697 3109	End Fence Cover	2
19	B478 3101	Spacer:Gathering Roller:Shift Tray	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4006N	Tapping Screw - 4x6	
102	0451 3006N	Tapping Screw - 3x6	
103	0313 0050N	Philips Pan Head Screw - M3x5	
104	1105 0623	Clamp - LBWS-0206S-V0	
105	1607 0623	Ferrite Core - TFC-16-8-13	
106	0720 0040E	Retaining Ring - M4	
107	0720 0060E	Retaining Ring - M6	
108	0453 4006N	Binding Self Tapping Screw:4x6	

17.Paper Tray Drive Section 5 (D610)

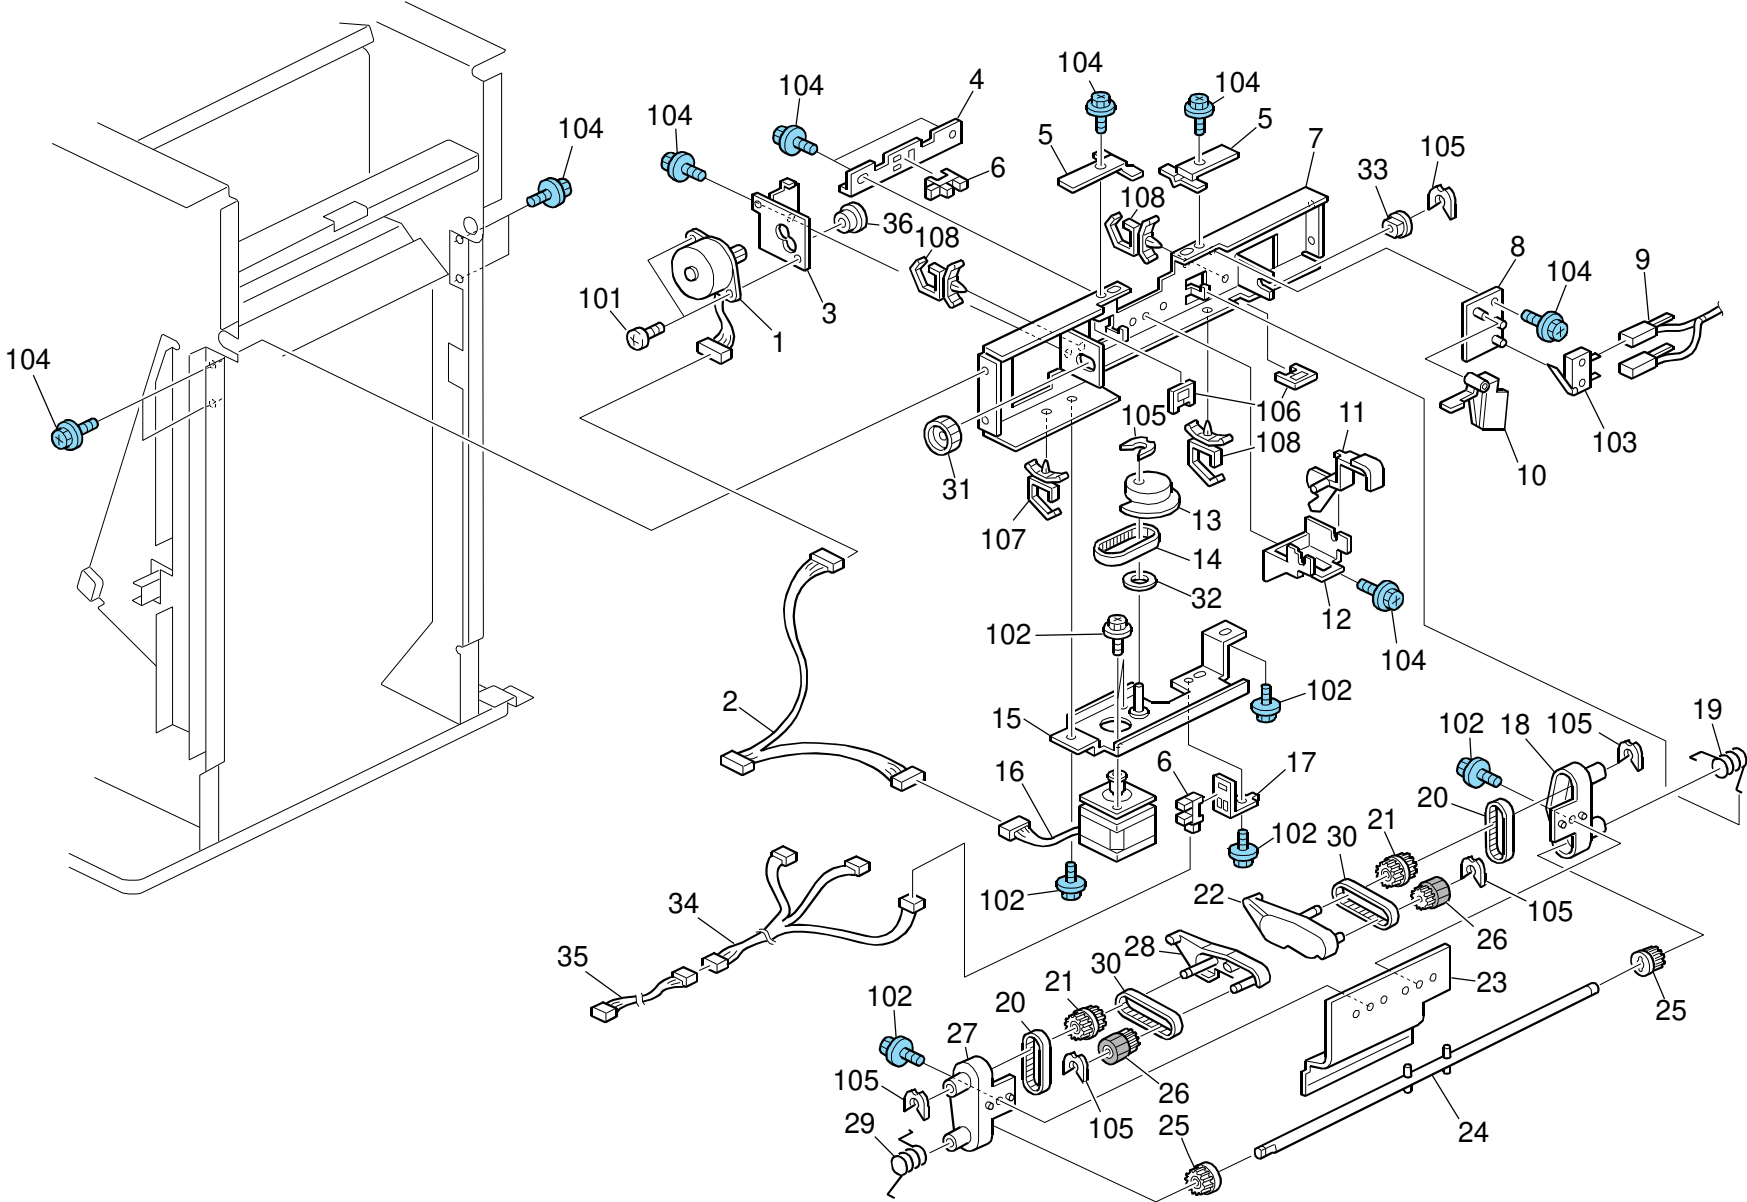


17.Paper Tray Drive Section 5 (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AX05 0244	Stepper Motor:DC 24V 21W	1
2	D460 5431	Harness:Motor:Return	1
3	B478 3586	Bracket:Stepper Motor:Transport	1
4	B478 3576	Bracket:Sensor:Paper Sensor	1
5	B478 3511	Cam:Gathering Roller:Drive	2
6	AW02 0156	Photointerruptor:EE-SX4235A-P2	2
7	B478 3572	Stay:Uniform	1
8	B478 3581	Bracket:Micro Switch	1
9	B706 5301	Harness:Shift Tray Section	1
10	B478 3582	Lever:Micro Switch	1
11	B478 3555	Feeler:Paper Senser	1
12	B478 3553	Bracket:Feeler:Paper Sensor	1
13	B478 3562	Cam:Lever:Drive	1
14	B478 3563	Timing Belt:B40S2M110	1
15	B478 3565	Bracket:Stepper Motor	1
16	B706 5755	Stepper Motor:Exit:DC 12.4W	1
17	B478 3568	Bracket:Home Position Sensor	1
18	B478 3506	Lever:Drive:Gathering Roller:Front	1
19	B478 3523	Torsion Spring:Plate:Lever:Front	1
20	B830 3504	Timing Belt - 40S2M100	2
21	B478 3502	Pulley:Driven:Roller:Sponge	2
22	B478 3508	Lever:Driven:Gathering Roller:Front	1
23	B478 3510	Bracket:Coupling:Lever:Drive	1
24	B478 3525	Shaft:Gathering Roller:Drive:Ass'y	1
25	B478 3501	Pulley:Drive:Roller:Sponge	2
26	B830 3503	Sponge Gathering Roller	2
27	B478 3507	Lever:Drive:Gathering Roller:Back	1
28	B478 3509	Lever:Driven:Gathering Roller:Back	1
29	B478 3524	Torsion Spring:Plate:Lever:Back	1
30	B830 3505	Timing Belt - 40S2M84	2
31	B478 3522	Gear:Z35	1
32	B478 3569	Spacer	1
33	5053 0447	Bushing - 6mm	1
34	D460 5440	Harness:Sensor:Return: Surface Of Paper Sensor	1

Index No.	Part No.	Description	Q'ty Per Assembly
35	B706 5345	Harness:Sensor:Return: Surface Of Paper Sensor:Connecting	1
36	AA08 0072	Bushing - 6x10x3	1
101	0313 0040N	Screw:M3x4	
102	0451 3006N	Tapping Screw - 3x6	
103	1204 2544	Switch - DE2L-BJ23	
104	0454 3006Q	Tapping Screw - M3x6	
105	0805 0089	Retaining Ring - M4	
106	1105 0328	Harness Clamp - ES-0505	
107	1105 0488	Harness Clamp	
108	1105 0623	Clamp - LBWS-0206S-V0	

18. Drive Section (D610)

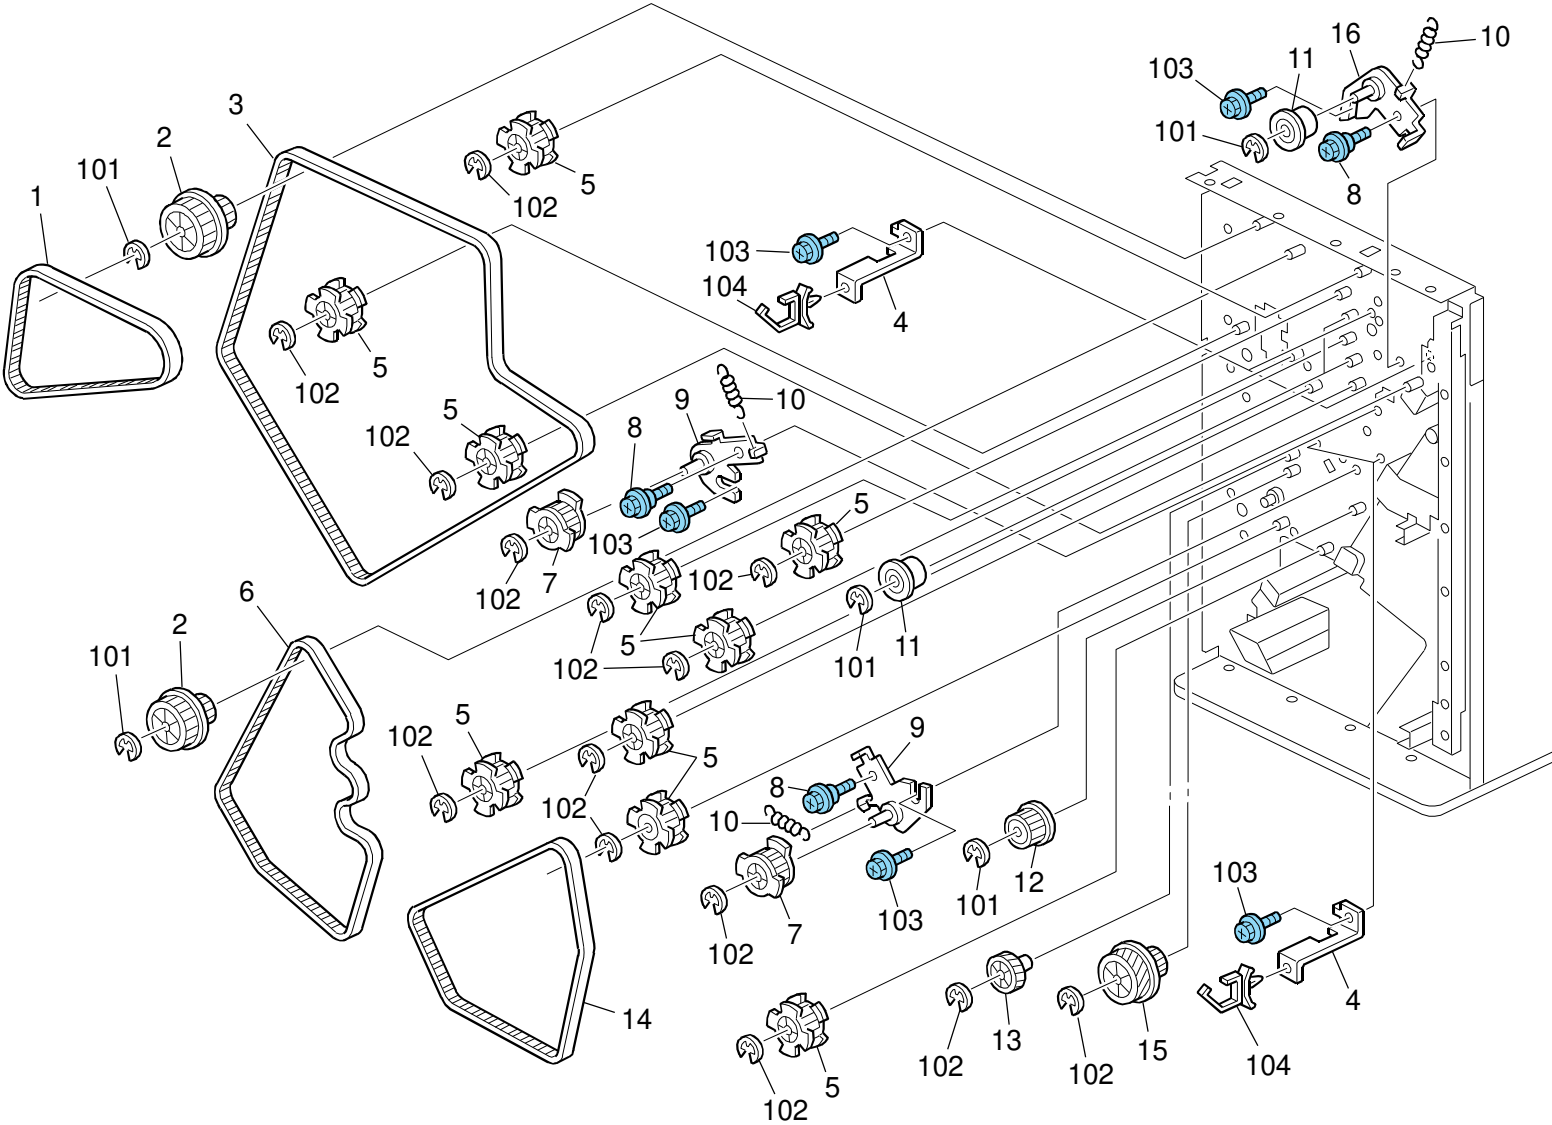


18. Drive Section (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA04 3301	Timing Belt - 402P3M6	1
2	B302 1516	Timing Pulley - 18Z/33Z	2
3	AA04 3302	Timing Belt - B60S3M1221	1
4	B706 5151	Angle:Printed Circuit Board:ST	4
5	AB03 0374	Timing Pulley - 20Z	10
6	AA04 3303	Timing Belt - 693P3M6	1
7	B302 1542	Timing Pulley - 20Z	2
8	B830 1135	Screw	3
9	B706 1545	Tightener Bracket	2
10	AA06 2334	Tension Spring:4.9N	3
11	A458 3281	Idler Roller	3
12	B302 1517	Timing Pulley - 20Z	1
13	B302 1523	Gear - 33Z	1
14	AA04 3304	Timing Belt - 633P3M6	1
15	D460 1522	Pulley:20T:Gear:Z30	1
16	B706 1555	Bracket:Tightener	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0720 0060E	Retaining Ring - M6	
102	0720 0040E	Retaining Ring - M4	
103	0454 3006Q	Tapping Screw - M3x6	
104	1105 0488	Harness Clamp	

19.Electrical Section (D610)

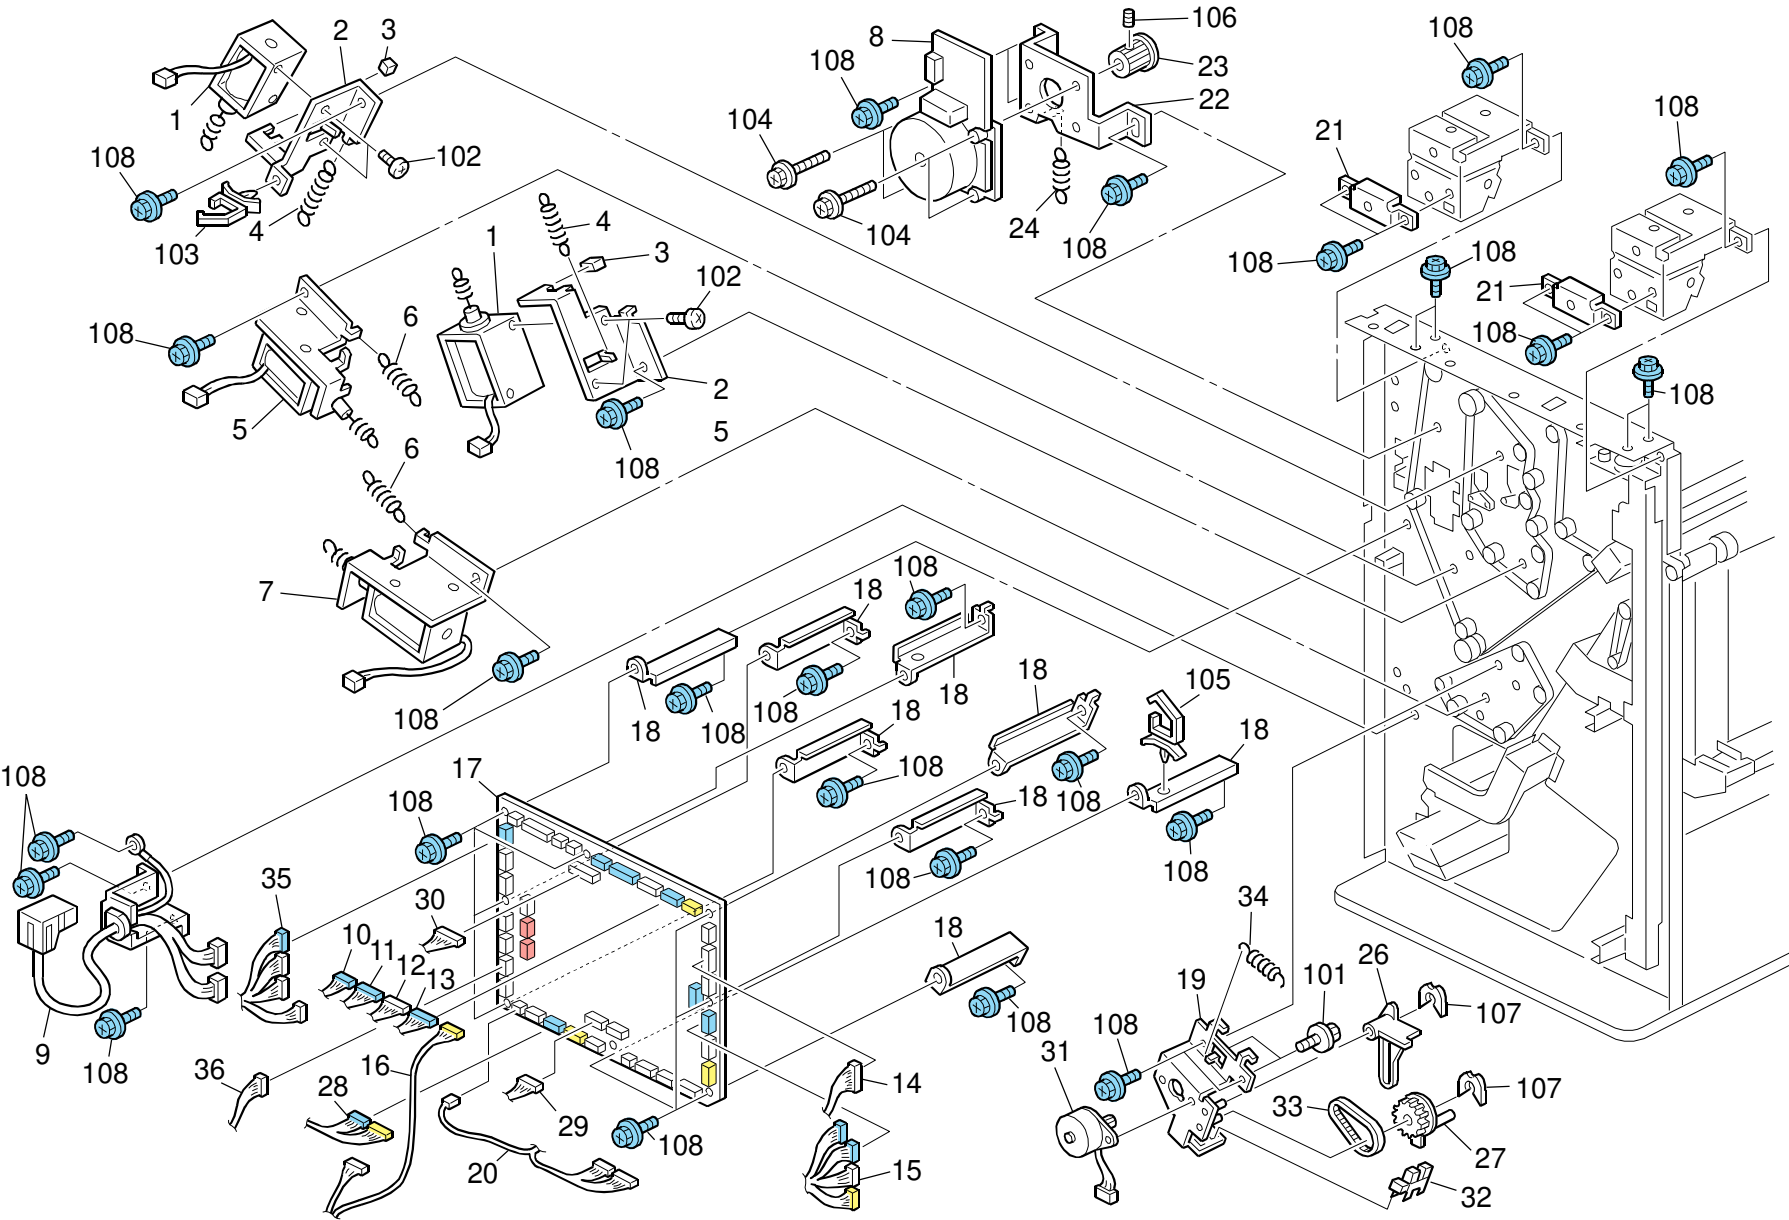


19.Electrical Section (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B302 2516	DC Solenoid:Polarization Powl: Proof Tray:Ass'y	2
2	B302 2617	Bracket - Stapler Gate Solenoid	1
3	A697 2102	Damper - Junction Gate Solenoid	2
4	B706 2522	Spring:Dc Solenoid	2
5	B302 W028	DC Solenoid:24V:5.76W	1
6	AA06 2333	Tension Spring:2.16N	2
7	B302 W029	DC Solenoid:24V:5.76W	1
8	AX05 0289	Brushless Motor:7W:DIA56	1
9	D610 5500	Harness:Interface:Ass'y	1
10	D460 5481	Harness:Switch:Stop	1
11	D460 5467	Harness:Motor Control:Shift:Jogger	1
12	D460 5290	Harness:Sensor:Shift Tray	1
13	B706 5345	Harness:Sensor:Return: Surface Of Paper Sensor:Connecting	1
14	B706 5335	Harness:Motor:Return:Connecting	1
15	D460 5372	Harness:Motor:Stapler Tray	1
16	D460 5700	Harness:Sensor:Motor:Ass'y	1
17	D610 5101	PCB:Main Control:Vic-i:Ass'y	1
18	B408 5540	Main Board Bracket	8
19	B478 2131	Bracket:Stepper Motor:Ass'y	1
20	D460 5402	Harness:Stapler	1
21	B302 6514	Bracket - Rear Upper Stay	2
22	B302 1518	Bracket - Upper Transport Motor	1
23	AB03 0522	Timing Pulley - T14P3M	1
24	AA06 2334	Tension Spring:4.9N	1
25	B302 2517	Bracket - Exit Gate Solenoid	1
26	B478 2136	Lever:Gathering Roller	1
27	B478 2137	Cam:Lever:Gathering Roller	1
28	D460 5361	Harness:Home Position Sensor:Stapler Tray	1
29	D460 5310	Harness:Sensor:Paper Exit Sub-unit: Stapler Tray	1
30	D460 5422	Harness:Motor:Shift Tray	1
31	AX04 0161	Stepper Motor:MM42:0.95A:9.5V	1
32	AW02 0156	Photointerruptor:EE-SX4235A-P2	1

Index No.	Part No.	Description	Q'ty Per Assembly
33	B302 4155	Timing Belt - 153P3M6	1
34	B478 2142	Tension Spring:Return:Lever	1
35	D460 5230	Harness:Sensor:Main:Entrance Sensor	1
36	D460 5210	Harness:Door Switch	1
101	0451 3006N	Tapping Screw - 3x6	
102	0313 0040N	Screw:M3x4	
103	1105 0623	Clamp - LBWS-0206S-V0	
104	0451 3014N	Tapping Screw:3x14	
105	1105 0488	Harness Clamp	
106	0573 0030E	Hexagon Headless Set Screw - M3x3	
107	0805 0089	Retaining Ring - M4	
108	0454 3006Q	Tapping Screw - M3x6	

20.Frame Section 1 (D610)

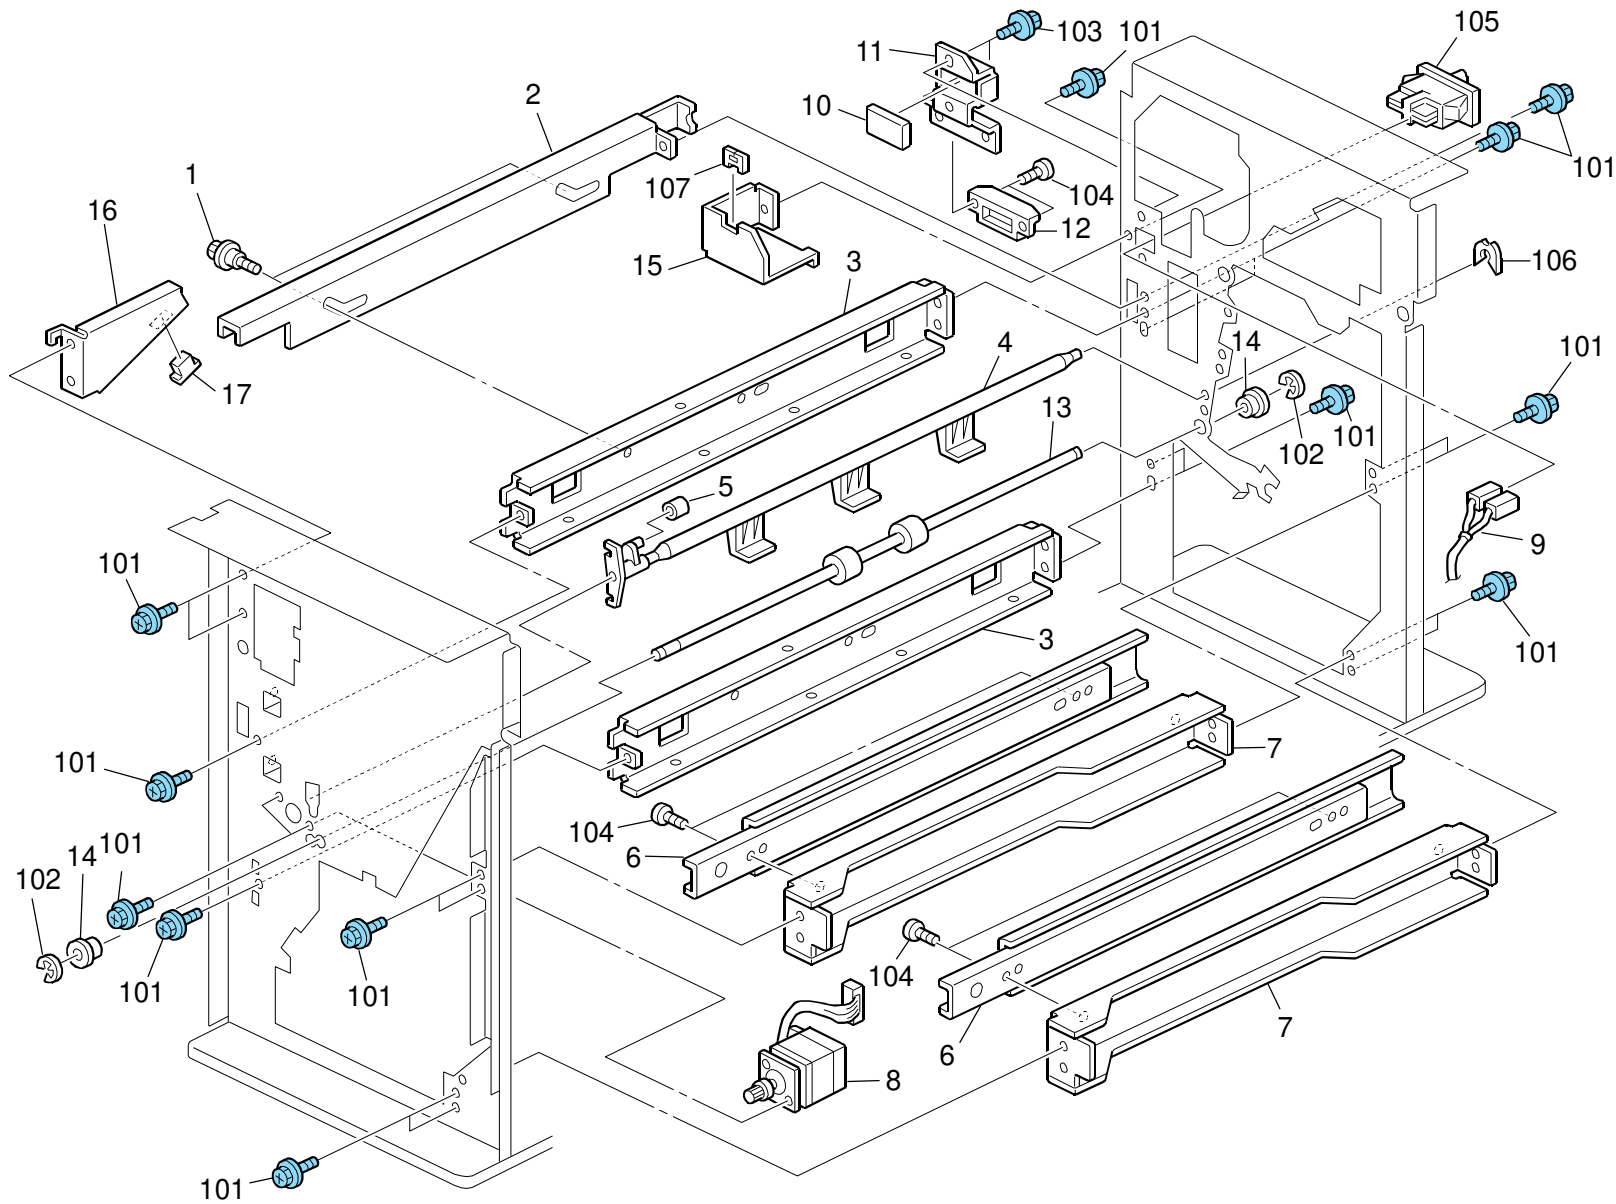


20.Frame Section 1 (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA14 3790	Screw:Contact Point	2
2	B804 1128	Lever:Coupling	1
3	B408 1413	Coupling Stay	2
4	B302 2816	Paper Stopper	1
5	A458 2251	Cushion - Bin Solenoid Lever	1
6	B701 1166	Slide Rail:432mm	2
7	B478 1154	Stay:Slide Rail:Fix	2
8	AX05 0279	Stepper Motor:MM42:1.7A:4.08V	1
9	D460 5210	Harness:Door Switch	1
10	A377 1662	Door Switch Actuator	1
11	B706 1661	Cover:Safety Switch	1
12	AG07 0504	Magnet Catch:44.1N	1
13	AF02 0501	Transport Roller	1
14	A859 2230	Ball Bearing - 6x13x5	2
15	D460 1137	Cover:Safety Switch	1
16	B478 1121	Bracket:Stay	1
17	AG07 0513	Magnet Catch	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0720 0040E	Retaining Ring - M4	
103	0454 4006Q	Tapping Screw:4x6	
104	0453 3006N	Tapping Screw - M3x6	
105	1204 2841	Switch:FA3L-AA23	
106	0805 0089	Retaining Ring - M4	
107	1105 0328	Harness Clamp - ES-0505	

21.Frame Section 2 (D610)

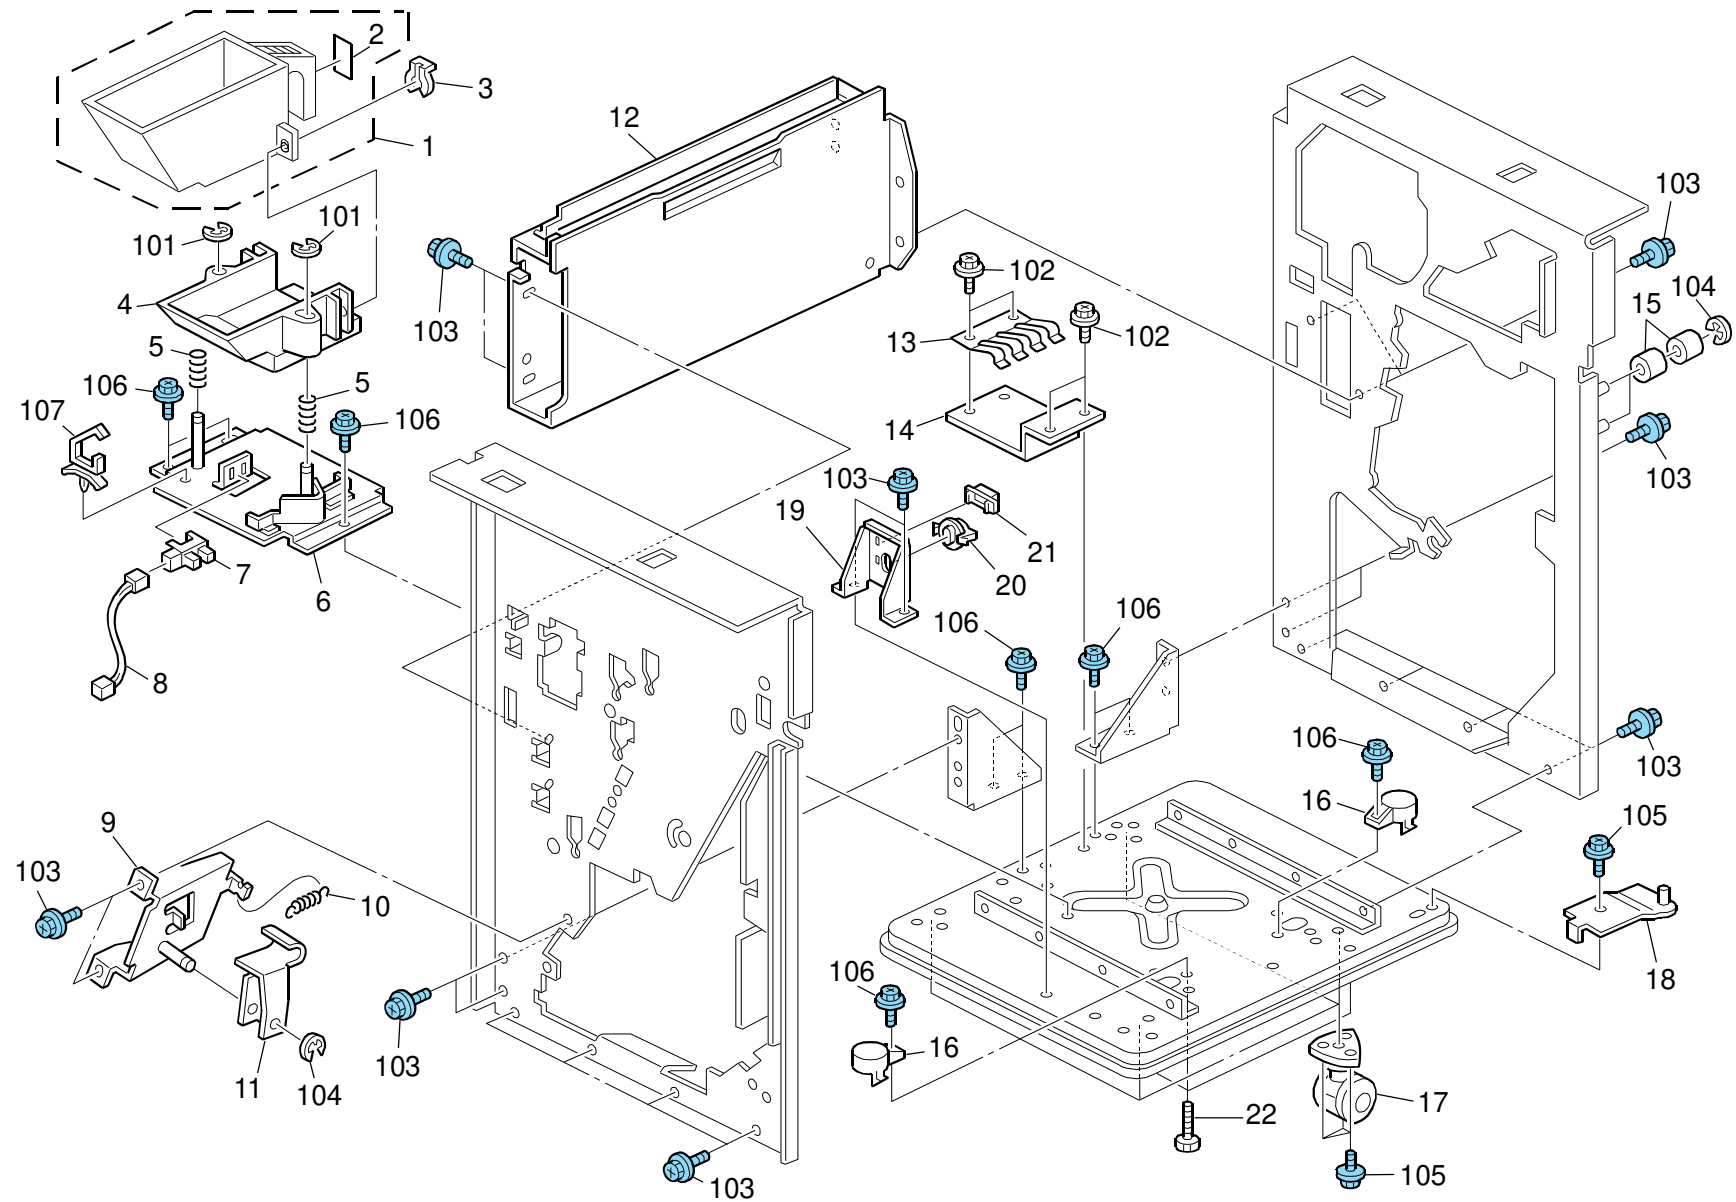


21.Frame Section 2 (D610)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D610 7010	Toner Hopper:Stapler:Ass'y	1
2	D610 7810	Decal:Toner Hopper:Staple	1
3	5215 2621	Snap Ring - M6	1
4	B302 1173	Staple Hopper Holder	1
5	B706 1179	Compression Spring:Holder:Toner Hopper	2
6	B302 1174	Base Plate - Staple Hopper Holder	1
7	AW02 0156	Photointerruptor:EE-SX4235A-P2	1
8	B830 5260	Harness:Sensor:Duplex Stack:Connecting	1
9	B302 1188	Bracket - Staple Waste Holder Lever	1
10	B706 1189	Tension Spring:Lever:Stapler	1
11	B302 1184	Lever - Staple Waste Holder	1
12	G838 1151	Bracket:Toner Hopper	1
13	B302 1163	Grounding Plate	1
14	B302 1164	Grounding Plate Bracket	1
15	B302 4239	Guide Roller	4
16	B804 1119	Cap:Base	2
17	B804 1035	Caster:DIA50:400N	4
18	B302 6154	Hinge:Door:Lower:Ass'y	1
19	B478 1172	Bracket:Coupling:Lower	1
20	B478 1175	Holder:Coupling:Lower	1
21	AG07 1012	Magnet Catch:Ass'y	1
22	B706 1156	Hexagonal Bolt - M12x30	4

Index No.	Part No.	Description	Q'ty Per Assembly
101	0720 0080E	Retaining Ring - M8	
102	0451 3006N	Tapping Screw - 3x6	
103	0454 3006Q	Tapping Screw - M3x6	
104	0720 0040E	Retaining Ring - M4	
105	0454 4008Q	Tapping Screw - M4x8	
106	0454 3008Q	Tapping Screw:3x8	
107	1105 0623	Clamp - LBWS-0206S-V0	

22.Jogger Unit (B513)

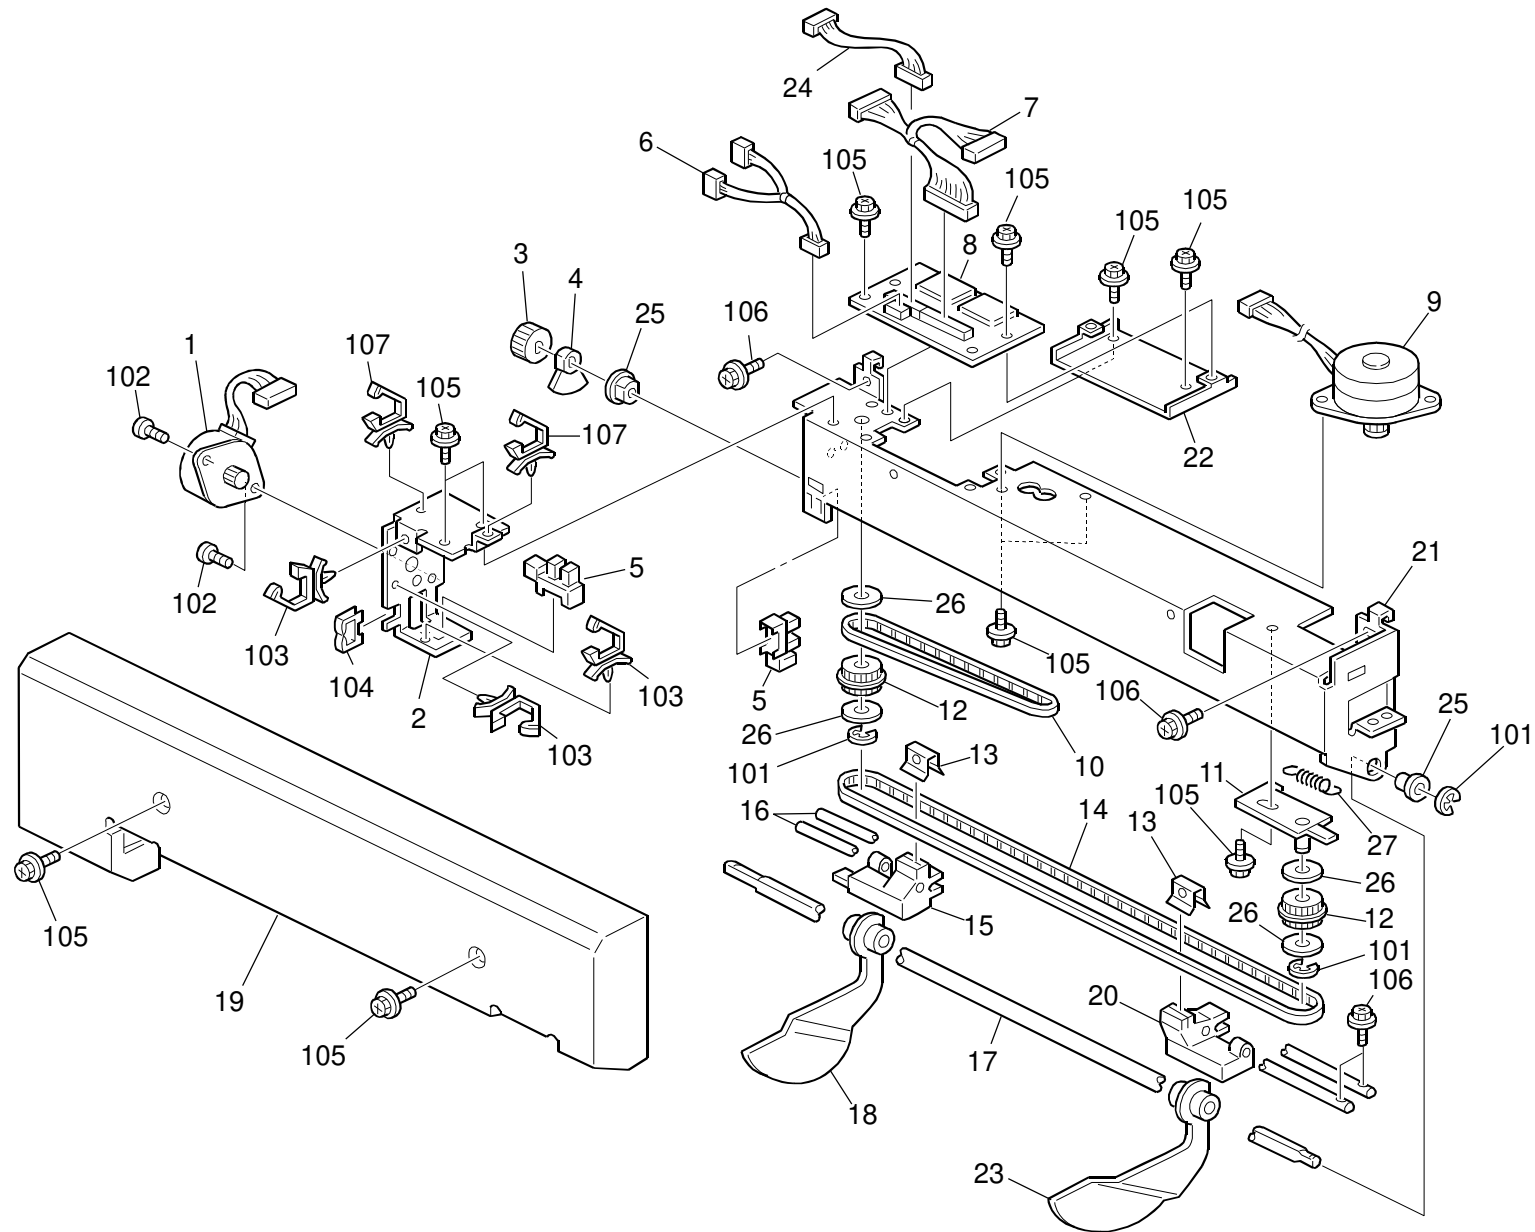

22.Jogger Unit (B513)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AX05 0244	Stepper Motor:DC 24V 21W	1
2	B513 1135	Bracket:Drive:Jogger:Take Shejter	1
3	B478 3522	Gear:Z35	1
4	B513 1122	Feeler:Take Shejter:Jogger	1
5	AW02 0156	Photointerruptor:EE-SX4235A-P2	2
6	B513 5200	Harness:Sensor:Shift:Jogger:Option	1
7	B830 5282	Harness - Motor	1
8	B513 5230	PCB:Shift:Jogger	1
9	AX04 0139	Stepper Motor:MM42:0.95A:9.5V	1
10	B513 1165	Timing Belt:B40S2M316	1
11	B513 1161	Bracket:Tightener:Drive:Jogger	1
12	B513 1154	Pulley:T30:S2M	2
13	A300 3634	Spring Plate - Timing Belt	2
14	B513 1166	Timing Belt:B40S2M740	1
15	B513 1112	Holder:Jogger Fence:Inner Back	1
16	B513 1115	Shaft:Slide	2
17	B513 1121	Shaft:Jogger Fence:Moveable	1
18	B513 2111	Jogger Fence:Front:Ass'y	1
19	B513 1176	Cover:Jogger	1
20	B513 1111	Holder:Jogger Fence:Front	1
21	B513 1151	Frame:Jogger:Uniform:Ass'y	1
22	B513 1155	Bracket:Guard:PCB	1
23	B513 2121	Jogger Fence:Inner Back:Ass'y	1
24	B513 5220	Harness:Shift:Jogger:Connecting	1
25	5053 0447	Bushing - 6mm	2
26	B478 3569	Spacer	4
27	AA06 2334	Tension Spring:4.9N	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0720 0040E	Retaining Ring - M4	
102	0313 0040N	Philips Pan Head Screw - M3x4	
103	1105 0511	Harness Clamp - LWS-0306ZC	
104	1105 0328	Harness Clamp - ES-0505	
105	0451 3006N	Tapping Screw - M3x6	
106	0451 3008N	Tapping Screw - M3x8	

Parts Index

Parts Index

Part No.	Description	Page and Index No.
D610 1321	Holder:Operating Instructions: A5-NRC:Ass'y	3 - 39
D610 1595	Cover:Door:Small	3 - 18
D610 3334	Shift Tray:RIC:Ass'y	3 - 10
D610 4115	Vibrating Plate:Paper	17 - 21
D610 4142	Cover:Vibrating Plate	17 - 14
D610 4215	Cover:Stapler:Front	25 - 13
D610 4216	Cover:Harness:Stapler	25 - 14
D610 4217	Cover:Stapler:Rear	25 - 10
D610 4276	Cover:Stapler:Drive	17 - 4
D610 4715	Guide Plate:Stapler Tray	19 - 23
D610 4845	Grip:Stapler Unit	15 - 28
D610 4851	Inner Cover:Pawl:Stopper	15 - 18
D610 5101	PCB:Main Control:Vic-i:Ass'y	39 - 17
D610 5500	Harness:Interface:Ass'y	39 - 9
D610 6120	Cover:Upper:Sub-ass'y	3 - 27
D610 6131	Tray:Cover:Upper	3 - 2
D610 6171	Cover:Front	3 - 15
D610 6213	Cover:Rear	3 - 1
D610 6251	Lever:Slide	3 - 6
D610 6261	Cover:Left Upper	3 - 7
D610 6262	Cover:Cover:Left Upper	3 - 30
D610 6312	Cover:Left Lower:Ass'y	3 - 11
D610 6351	Inner Cover:Left Sideways	3 - 13
D610 6450	Table:Ass'y	3 - 5
D610 6612	Inner Cover:Front	3 - 14
D610 6651	Inner Cover:Stapler Unit	17 - 1
D610 6711	Cover:Shift Tray:Front:RIC	3 - 12
D610 6721	Cover:Shift Tray:Inner Back:RIC	3 - 8
D610 7001	Guide Plate:Open And Close:Entrance:Ass'y	11 - 15
D610 7004	Guide Plate:Lengthwise:Open And Close: Sub-ass'y	11 - 8
D610 7005	Guide Plate:Lengthwise:Middle:Sub-ass'y	11 - 4
D610 7010	Toner Hopper:Stapler:Ass'y	43 - 1

Part No.	Description	Page and Index No.
D610 7013	Guide Plate:Open And Close:Shift Tray: Ass'y	7 - 15
D610 7014	Guide Plate:Open And Close:Proof Tray: Ass'y	7 - 13
D610 7026	Guide Plate:Lower:Open And Close: Sub-ass'y	13 - 11
D610 7621	Tray:Auxiliary:Proof Tray	3 - 38
D610 7631	Tray:Auxiliary:Shift Tray	3 - 37
D610 7801	Decal:Entrance:R1	11 - 16
D610 7802	Decal:Proof Tray:R2	7 - 14
D610 7803	Decal:Shift Tray:R3	7 - 6
D610 7804	Decal:Lengthwise:R4	11 - 9
D610 7805	Decal:Lengthwise:Middle:R5	11 - 6
D610 7806	Decal:Stapler Tray:Exit:R6	13 - 12
D610 7808	Decal:Stapler Unit:R8	17 - 6
D610 7809	Decal:Stapler Unit:R9	17 - 5
D610 7810	Decal:Toner Hopper:Staple	43 - 2
D610 7815	Decal:Stapler Unit:R7	15 - 29
D610 7821	Decal:Misfeed Removal:Paper	3 - 17
D610 7822	Decal:Misfeed Removal:Stapler	3 - 16

Part No.	Description	Page and Index No.
A229 8523	Operating Instructions Holder - A5	3 - 43
A229 8524	Operating Instructions Holder - A5	3 - 9
A300 2736	Worm Gear	31 - 10
A300 3634	Spring Plate - Timing Belt	19 - 3
A300 3634	Spring Plate - Timing Belt	46 - 13
A353 2763	Washer - M5	21 - 42
A353 3272	Guide Roller	29 - 20
A353 3354	Driven Roller Holder	27 - 16
A376 3153	Lower Driven Roller	13 - 3
A377 1662	Door Switch Actuator	41 - 10
A377 4741	Roller - M14	25 - 8
A379 2215	Exit Mylar	27 - 18
A379 2523	Exit Guide Mylar	11 - 19
A458 2251	Cushion - Bin Solenoid Lever	5 - 9
A458 2251	Cushion - Bin Solenoid Lever	41 - 5
A458 2251	Cushion - Bin Solenoid Lever	7 - 2
A458 3281	Idler Roller	37 - 11
A666 3180	Timing Pulley - Z32	21 - 13
A666 3220	Tightener - Timing Belt	19 - 10
A697 2102	Damper - Junction Gate Solenoid	39 - 3
A697 2131	Antistatic Brush	33 - 17
A697 2131	Antistatic Brush	13 - 9
A697 2131	Antistatic Brush	27 - 7
A697 2132	Joint - Brush Roller	13 - 31
A697 2138	Brush Roller	13 - 30
A697 2175	Upper Exit Guide	27 - 20
A697 2250	Lower Relay Guide	5 - 2
A697 2251	Upper Relay Guide	5 - 1
A697 2260	Pulley - 17T	13 - 20
A697 2260	Pulley - 17T	21 - 26
A697 2260	Pulley - 17T	29 - 5
A697 3109	End Fence Cover	33 - 18
A697 3135	Gear - 18Z	31 - 8
A697 3140	Gear - 30Z	31 - 7
A697 3145	Gear - 36Z/18Z	31 - 5

Part No.	Description	Page and Index No.
A697 3150	Fixing Plate - Timing Belt	31 - 17
A697 3155	Timing Belt - B60S5M1420	31 - 11
A697 3165	Tray Drive Shaft	31 - 15
A697 3170	Gear - 42Z	31 - 13
A697 3175	Spacer - 10x14x13.5mm	31 - 16
A697 3180	Pulley - 18T	31 - 12
A697 3185	Pulley - 18T	31 - 19
A697 3195	Worm Wheel	33 - 8
A697 3225	Worm Wheel Shaft	31 - 1
A859 2230	Ball Bearing - 6x13x5	13 - 18
A859 2230	Ball Bearing - 6x13x5	9 - 21
A859 2230	Ball Bearing - 6x13x5	11 - 23
A859 2230	Ball Bearing - 6x13x5	29 - 4
A859 2230	Ball Bearing - 6x13x5	41 - 14
A859 2230	Ball Bearing - 6x13x5	5 - 13
B132 1226	Holder:Stand	3 - 40
B302 1134	Lever Stay	9 - 24
B302 1147	Guide Pulley - Exit Guide Plate	29 - 9
B302 1163	Grounding Plate	3 - 41
B302 1163	Grounding Plate	43 - 13
B302 1164	Grounding Plate Bracket	43 - 14
B302 1164	Grounding Plate Bracket	3 - 42
B302 1173	Staple Hopper Holder	43 - 4
B302 1174	Base Plate - Staple Hopper Holder	43 - 6
B302 1184	Lever - Staple Waste Holder	43 - 11
B302 1188	Bracket - Staple Waste Holder Lever	43 - 9
B302 1516	Timing Pulley - 18Z/33Z	37 - 2
B302 1517	Timing Pulley - 20Z	37 - 12
B302 1518	Bracket - Upper Transport Motor	39 - 22
B302 1523	Gear - 33Z	37 - 13
B302 1542	Timing Pulley - 20Z	37 - 7
B302 2115	Positioning Roller Drive Shaft	13 - 24
B302 2202	Exit Roller - Upper Tray	9 - 13
B302 2216	Exit Guide - Upper Exit Guide	9 - 8
B302 2230	Left Guide - Upper Tray	9 - 12

Part No.	Description	Page and Index No.
B302 2237	Exit Sensor Bracket - Upper Tray	9 - 3
B302 2253	Lower End Fence - Upper Tray	9 - 19
B302 2293	Guide Holder Shaft	27 - 4
B302 2294	Guide Holder Tension Spring	27 - 5
B302 2295	Guide Holder Film	27 - 12
B302 2297	Guide Holder Bracket	27 - 3
B302 2298	Guide Holder Lever	27 - 6
B302 2305	Middle Exit Roller	29 - 13
B302 2311	Exit Roller Shaft	29 - 15
B302 2326	Link - Upper Exit Guide	27 - 8
B302 2328	Exit Guide Shift Spring	27 - 11
B302 2329	Exit Guide Bracket	27 - 10
B302 2342	Lower Guide - Shift Tray	11 - 20
B302 2347	Turn Guide	5 - 11
B302 2363	Guide Plate:Entrance:Lower	5 - 5
B302 2410	Exit Roller - Staple Tray	13 - 8
B302 2411	Exit Roller:Lower:Sub-ass'y	13 - 17
B302 2413	Brush Roller	13 - 32
B302 2416	Exit Sensor Bracket - Staple Tray	13 - 7
B302 2428	Driven Roller Holder	13 - 2
B302 2429	Pressure Spring - 6x18mm	13 - 1
B302 2437	Right Guide - Vertical Transport	13 - 4
B302 2442	Cover - Stack Tray Paper Sensor	11 - 1
B302 2459	Spring - 5x39mm	13 - 13
B302 2461	Transport Roller	13 - 19
B302 2513	Support Plate - Exit Gate	7 - 4
B302 2514	Exit Junction Gate	7 - 3
B302 2516	DC Solenoid:Polarization Powl: Proof Tray:Ass'y	39 - 1
B302 2517	Bracket - Exit Gate Solenoid	39 - 25
B302 2611	Stapler Junction Gate	7 - 1
B302 2617	Bracket - Stapler Gate Solenoid	39 - 2
B302 2716	Gate Pawl:Lengthwise	5 - 10
B302 2816	Paper Stopper	41 - 4
B302 3215	Worm Pulley - 29Z	33 - 6

Part No.	Description	Page and Index No.
B302 4112	Bushing - 6mm	17 - 19
B302 4113	Bushing - 6x9mm	17 - 18
B302 4141	Stack Plate Wheel	17 - 16
B302 4142	Stack Plate Guide	17 - 17
B302 4151	Stack Plate Shaft	17 - 9
B302 4155	Timing Belt - 153P3M6	17 - 3
B302 4155	Timing Belt - 153P3M6	39 - 33
B302 4214	Stapler Bracket	25 - 9
B302 4218	2nd Holder - Stapler Unit	25 - 6
B302 4229	Sensor Actuator	25 - 2
B302 4238	Slide Guide	25 - 4
B302 4239	Guide Roller	43 - 15
B302 4239	Guide Roller	25 - 1
B302 4239	Guide Roller	21 - 7
B302 4243	DC Solenoid:24V:1/5Duty	23 - 19
B302 4247	Slider Hook	25 - 7
B302 4258	Stay:Stapler:Ass'y	23 - 3
B302 4266	Guide Rail - Stapler Unit	23 - 29
B302 4270	Return Arm - Stapler Unit	23 - 26
B302 4271	Drive Cam - Stapler Unit	23 - 11
B302 4272	Worm Gear - Z1	23 - 24
B302 4274	Worm Gear Shaft	23 - 20
B302 4292	Belt Holder	23 - 9
B302 4297	Bracket:Sensor:Return	23 - 28
B302 4421	Timing Belt - 293P3M6	21 - 17
B302 4517	Mylar Guide	21 - 6
B302 4541	Front Shaft - Slide Holder	21 - 10
B302 4542	Rear Shaft - Slide Holder	21 - 21
B302 4617	Jogger Fence Slider	19 - 16
B302 4629	Guide Mylar	19 - 13
B302 4727	Bracket - Feed - Out Belt Sensor	21 - 14
B302 4731	Lower Exit Shaft	21 - 19
B302 4752	Jogger Motor Bracket	19 - 2
B302 4756	Timing Belt - 753P3M6	19 - 4
B302 4756	Timing Belt - 753P3M6	23 - 7

Part No.	Description	Page and Index No.
B302 4772	Timing Belt - 898P2M14	21 - 12
B302 4773	Paper Exit Pawl	21 - 43
B302 4776	Guide Mylar - 17x60	19 - 18
B302 6115	Tray Stopper	3 - 3
B302 6135	Spring - 23x44mm	3 - 26
B302 6154	Hinge:Door:Lower:Ass'y	43 - 18
B302 6157	Upper Hinge - Front Door	3 - 20
B302 6161	Magnet Catch Plate	3 - 19
B302 6414	Upper Cover Stay	27 - 2
B302 6514	Bracket - Rear Upper Stay	39 - 21
B302 W028	DC Solenoid:24V:5.76W	39 - 5
B302 W029	DC Solenoid:24V:5.76W	39 - 7
B352 2650	Magnet Catch - 5N	11 - 5
B408 1413	Coupling Stay	27 - 1
B408 1413	Coupling Stay	41 - 3
B408 5540	Main Board Bracket	39 - 18
B468 4766	Tightener	19 - 8
B468 4766	Tightener	23 - 16
B468 5780	Stepper Motor - DC 20.4W	21 - 37
B478 1121	Bracket:Stay	41 - 16
B478 1123	Bracket:Connector	9 - 5
B478 1129	Cover:Connector	9 - 23
B478 1133	Upper Exit Stay	9 - 20
B478 1143	Bracket:Coupling:Ground Plate:Front	3 - 22
B478 1145	Bracket:Coupling:Ground Plate:Rear	3 - 23
B478 1154	Stay:Slide Rail:Fix	41 - 7
B478 1172	Bracket:Coupling:Lower	43 - 19
B478 1174	Holder:Coupling:Upper	31 - 22
B478 1175	Holder:Coupling:Lower	43 - 20
B478 1192	Bracket:Coupling:Upper	31 - 9
B478 2116	Reverse Roller - Stapler Tray	13 - 25
B478 2123	Guide:Bracket:Gathering Roller	13 - 29
B478 2127	Tension Spring:Gathering Roller	13 - 21
B478 2131	Bracket:Stepper Motor:Ass'y	39 - 19
B478 2136	Lever:Gathering Roller	39 - 26

Part No.	Description	Page and Index No.
B478 2137	Cam:Lever:Gathering Roller	39 - 27
B478 2142	Tension Spring:Return:Lever	39 - 34
B478 2231	Roller:Exit:Auxiliary:Ass'y	9 - 11
B478 2328	Exit Roller:Driven	27 - 17
B478 2332	Spring Plate:Shift:Exit	29 - 23
B478 2354	Entrance Sensor Bracket	5 - 3
B478 2452	Guide:Open And Close	13 - 23
B478 3101	Spacer:Gathering Roller:Shift Tray	33 - 19
B478 3113	Shift Tray Guide Holder	29 - 12
B478 3200	Shaft:Shift:Slide	33 - 9
B478 3501	Pulley:Drive:Roller:Sponge	35 - 25
B478 3502	Pulley:Driven:Roller:Sponge	35 - 21
B478 3506	Lever:Drive:Gathering Roller:Front	35 - 18
B478 3507	Lever:Drive:Gathering Roller:Back	35 - 27
B478 3508	Lever:Driven:Gathering Roller:Front	35 - 22
B478 3509	Lever:Driven:Gathering Roller:Back	35 - 28
B478 3510	Bracket:Coupling:Lever:Drive	35 - 23
B478 3511	Cam:Gathering Roller:Drive	35 - 5
B478 3522	Gear:Z35	46 - 3
B478 3522	Gear:Z35	35 - 31
B478 3523	Torsion Spring:Plate:Lever:Front	35 - 19
B478 3524	Torsion Spring:Plate:Lever:Back	35 - 29
B478 3525	Shaft:Gathering Roller:Drive:Ass'y	35 - 24
B478 3553	Bracket:Feeler:Paper Sensor	35 - 12
B478 3555	Feeler:Paper Sensor	35 - 11
B478 3562	Cam:Lever:Drive	35 - 13
B478 3563	Timing Belt:B40S2M110	35 - 14
B478 3565	Bracket:Stepper Motor	35 - 15
B478 3568	Bracket:Home Position Sensor	35 - 17
B478 3569	Spacer	35 - 32
B478 3569	Spacer	46 - 26
B478 3572	Stay:Uniform	35 - 7
B478 3576	Bracket:Sensor:Paper Sensor	35 - 4
B478 3581	Bracket:Micro Switch	35 - 8
B478 3582	Lever:Micro Switch	35 - 10

Part No.	Description	Page and Index No.
B478 3586	Bracket:Stepper Motor:Transport	35 - 3
B478 4111	Stay:Swing Unit:Ass'y	17 - 12
B478 4132	Slider:Vibrating Plate	17 - 10
B478 4133	Vibrating Plate:Paper:Both Ends	17 - 22
B478 4134	Compression Spring:Plate:Moveable	17 - 23
B478 4135	Timing Pulley:18T	17 - 7
B478 4136	Timing Belt:B40S2M204	17 - 8
B478 4137	Shaft:Vibrating Plate:Both Ends	17 - 24
B478 4219	Guide:Stapler:Entrance	25 - 11
B478 4255	Guide Rod:Stapler	23 - 2
B478 4256	Timing Pulley:20T-30T	23 - 6
B478 4257	Tension Spring:Tightener	23 - 14
B478 4259	Timing Belt:171P3M6	23 - 5
B478 4271	Ball Bearing:Slide:Ass'y	23 - 8
B478 4277	Guide:Harness:Stapler	23 - 1
B478 4291	Bracket:Stay:Timing Belt	23 - 21
B478 4311	Side Plate:Front:Stapler	23 - 18
B478 4412	Side Plate:Rear:Stapler:Ass'y	23 - 4
B478 4515	Slider:Standard Fence:Ass'y	21 - 1
B478 4525	Slider:Standard Fence:Rear:Ass'y	21 - 18
B478 4527	Guide:Paper:Inner Back	21 - 39
B478 4535	Slider:Standard Fence:Auxiliary	21 - 24
B478 4538	Bushing:Standard Fence	21 - 3
B478 4619	Shaft:Jogger Fence:Slide	19 - 17
B478 4738	Stay:Stapler:Upper	19 - 20
B478 4749	Stay:Stapler:Middle	19 - 9
B478 4911	Arm:Swing Unit	23 - 10
B478 5450	Harness:Interface:Option	9 - 26
B478 5485	Harness:Switch:Stop:Connecting	3 - 32
B478 6264	Keytop:Printing	3 - 31
B478 6266	Guide:Harness:Cover:Left Upper	3 - 36
B478 6267	Guide:Harness:Cover:Left Upper	3 - 35
B478 6413	Stay:Front Left	27 - 21
B513 1111	Holder:Jogger Fence:Front	46 - 20
B513 1112	Holder:Jogger Fence:Inner Back	46 - 15

Part No.	Description	Page and Index No.
B513 1115	Shaft:Slide	46 - 16
B513 1121	Shaft:Jogger Fence:Moveable	46 - 17
B513 1122	Feeler:Take Shejter:Jogger	46 - 4
B513 1135	Bracket:Drive:Jogger:Take Shejter	46 - 2
B513 1151	Frame:Jogger:Uniform:Ass'y	46 - 21
B513 1154	Pulley:T30:S2M	46 - 12
B513 1155	Bracket:Guard:PCB	46 - 22
B513 1161	Bracket:Tightener:Drive:Jogger	46 - 11
B513 1165	Timing Belt:B40S2M316	46 - 10
B513 1166	Timing Belt:B40S2M740	46 - 14
B513 1176	Cover:Jogger	46 - 19
B513 2111	Jogger Fence:Front:Ass'y	46 - 18
B513 2121	Jogger Fence:Inner Back:Ass'y	46 - 23
B513 5200	Harness:Sensor:Shift:Jogger:Option	46 - 6
B513 5220	Harness:Shift:Jogger:Connecting	46 - 24
B513 5230	PCB:Shift:Jogger	46 - 8
B652 1773	Timing Belt:B40S2M178	15 - 9
B674 4324	Standard Fence Moveable Holder	21 - 31
B674 4330	Pulley - 32/53T	21 - 32
B674 4334	Pulley - 20T	21 - 33
B674 4335	Standard Fence Belt Tensioner	21 - 34
B674 4338	Standard Fence Tension Spring	21 - 35
B674 4339	Timing Belt - B40S2M192	21 - 36
B674 4511	Base:Pawl:Stopper:Ass'y	15 - 11
B674 4522	Pawl Stopper Guide Shaft	15 - 19
B674 4523	Shaft - Upper Transport Pawl Pulley	15 - 2
B674 4525	Pawl Stopper Sensor Bracket	15 - 6
B674 4527	Pulley - 48T	15 - 3
B674 4528	Pulley - 15T	15 - 16
B674 4529	Pulley - 20/36T	15 - 8
B674 4530	Gear - 20/30Z	15 - 10
B674 4531	Gear - 30Z	15 - 7
B674 4536	Tension Spring	15 - 14
B674 4540	Shaft:Pulley:Pawl:Transport:Low	15 - 26
B674 4613	Pawl Stopper Holder	15 - 24

Part No.	Description	Page and Index No.
B674 4614	Pawl Stopper Guide Roller	15 - 33
B674 4615	Shaft - Pawl Stopper	15 - 21
B674 4617	Pawl Stopper Bracket	15 - 23
B674 4618	Pawl Stopper Torsion Spring	15 - 22
B674 4620	Pawl Stopper Belt Tensioner Ass'y	15 - 15
B700 3322	Compression Spring - 10N	31 - 6
B700 4107	Spring:Return:Standard Fence	21 - 2
B701 1166	Slide Rail:432mm	41 - 6
B706 1131	Middle Stay	5 - 7
B706 1143	Bracket:Sensor:Paper	29 - 1
B706 1145	Lever:Sensor:Upper	29 - 11
B706 1146	Bracket:DC Motor:Drive:Guide Plate:Exit	29 - 7
B706 1148	Bracket:Hp Sensor:Guide Plate:Exit	29 - 8
B706 1156	Hexagonal Bolt - M12x30	43 - 22
B706 1179	Compression Spring:Holder:Toner Hopper	43 - 5
B706 1189	Tension Spring:Lever:Stapler	43 - 10
B706 1535	Bracket:Drive:Exit Roller	31 - 21
B706 1545	Tightener Bracket	37 - 9
B706 1555	Bracket:Tightener	37 - 16
B706 1661	Cover:Safety Switch	41 - 11
B706 1859	Screw:Slider:Lock	3 - 28
B706 2211	Guide Plate:Upper:Fix:Proof Tray:Ass'y	9 - 7
B706 2213	Discharge Brush - L=320 MM3	9 - 9
B706 2216	Silencer	9 - 10
B706 2224	Compression Spring:Transport:6.5N	7 - 5
B706 2248	Cover - Sensor	9 - 17
B706 2296	Cushion:Plate:Guide Plate:Proof Tray	7 - 10
B706 2323	Discharge Brush:L=320:MM3	27 - 15
B706 2352	Supporting Plate:Guide Plate: Open And Close	7 - 9
B706 2352	Supporting Plate:Guide Plate: Open And Close	11 - 11
B706 2361	Guide:Discharge (Exit):Leading Edge	11 - 17
B706 2521	Guide Plate:Exit	11 - 18
B706 2522	Spring:Dc Solenoid	39 - 4

Part No.	Description	Page and Index No.
B706 3035	Guide:Micro Switch:Shift Tray	3 - 34
B706 3126	Shift Tray Holder	29 - 24
B706 3161	Bracket:Sensor:Paper Volume Sensor	31 - 25
B706 3172	Actuator Bracket	29 - 10
B706 3190	Tighter Bracket	31 - 18
B706 3271	Tray Shift Shaft	29 - 18
B706 3361	Bracket:Guide:Exit	27 - 9
B706 4140	Stepper Motor:Jogger Fence:DC 16W	15 - 13
B706 4153	Spring:Vibrating Plate	17 - 20
B706 4267	Tension Spring:Stapler Unit:Upper Lower	25 - 15
B706 4269	Tension Spring:Arm:Return	23 - 25
B706 4511	Standard Fence:Front:Ass'y	21 - 4
B706 4521	Standard Fence:Rear:Ass'y	21 - 5
B706 4526	Bracket:Pawl:Stopper	15 - 32
B706 4531	Standard Fence:Rear:Auxiliary:Ass'y	21 - 8
B706 4611	Jogger Fence:Front:Ass'y	19 - 12
B706 4619	Bracket:Motor:Pawl:Stopper	15 - 12
B706 4625	Jogger Fence:Rear:Ass'y	19 - 19
B706 4631	Guide:Jogger Fence:Front	19 - 14
B706 4721	Guide Plate:Stapler Tray:Small	19 - 15
B706 4786	Shaft:Exit:Upper	21 - 20
B706 4831	Pawl:Stopper	15 - 20
B706 4841	Stay:Pawl:Stopper	15 - 17
B706 4842	Bracket:Rear	15 - 1
B706 4843	Bracket:Front	15 - 25
B706 4940	Base:Standard Fence:Moveable:Ass'y	21 - 11
B706 4943	Bracket:Sensor:Stapler Tray	21 - 27
B706 4951	Standard Fence:Moveable	21 - 28
B706 4952	Shaft:Guide:Standard Fence:Moveable	21 - 29
B706 4970	Bracket:Motor:Standard Fence:Moveable: Ass'y	21 - 30
B706 4981	Bracket:Shaft:Standard Fence	21 - 9
B706 5151	Angle:Printed Circuit Board:ST	37 - 4
B706 5241	Harness:Sensor:Entrance Sensor: Connecting	5 - 8

Part No.	Description	Page and Index No.
B706 5250	Harness:Paper Feed Sensor: Proof Tray:Connecting	9 - 2
B706 5295	Harness:Shift Tray Section:Connecting	33 - 2
B706 5301	Harness:Shift Tray Section	35 - 9
B706 5301	Harness:Shift Tray Section	33 - 1
B706 5335	Harness:Motor:Return:Connecting	39 - 14
B706 5345	Harness:Sensor:Return: Surface Of Paper Sensor:Connecting	35 - 35
B706 5345	Harness:Sensor:Return: Surface Of Paper Sensor:Connecting	39 - 13
B706 5390	Harness:Sensor:Stapler Tray:Connecting	21 - 16
B706 5600	PCB:Switch:Stop	3 - 33
B706 5755	Stepper Motor:Exit:DC 12.4W	35 - 16
B706 6116	Cushion:Cover:Upper	3 - 25
B706 7531	Cushion:Spacer	3 - 24
B804 1035	Caster:DIA50:400N	43 - 17
B804 1119	Cap:Base	43 - 16
B804 1128	Lever:Coupling	41 - 2
B830 1135	Screw	37 - 8
B830 2243	End Plate:Upper:Exit:Proof Tray	9 - 18
B830 2302	Roller:Exit Roller:Inner:Ass'y	29 - 14
B830 3315	Roller	29 - 16
B830 3322	Guide:Shift Tray:Upper Lower	29 - 26
B830 3340	Side Plate:Shift Tray:Front:Ass'y	29 - 25
B830 3345	Side Plate:Shift Tray:Rear:Ass'y	29 - 21
B830 3350	Base:Shift Tray:Ass'y	29 - 17
B830 3503	Sponge Gathering Roller	35 - 26
B830 3504	Timing Belt - 40S2M100	35 - 20
B830 3505	Timing Belt - 40S2M84	35 - 30
B830 4784	Bracket:Exit:Upper	21 - 44
B830 4889	Timing Belt - 40S2M500	15 - 4
B830 5260	Harness:Sensor:Duplex Stack:Connecting	43 - 8
B830 5260	Harness:Sensor:Duplex Stack:Connecting	11 - 2
B830 5261	Harness:Paper Feed Sensor: Stapler Tray:Connecting	13 - 6

Part No.	Description	Page and Index No.
B830 5282	Harness - Motor	46 - 7
B830 5564	Stepper Motor DC1.35V 4W	21 - 22
B830 5565	Stepper Motor DC6.7V 16W	19 - 1
B830 5565	Stepper Motor DC6.7V 16W	23 - 13
C101 2360	Snap Ring	11 - 21
C203 5135	Bushing - 10x14x5.9	31 - 14
C308 2324	Shaft:Exit Roller:Driven	27 - 19
D460 1137	Cover:Safety Switch	41 - 15
D460 1146	Cover:Harness:Door Switch	3 - 4
D460 1522	Pulley:20T:Gear:Z30	37 - 15
D460 2111	Arm:Gathering Roller:Ass'y	13 - 33
D460 2124	Bracket:Gathering Roller	13 - 34
D460 2160	Guide Plate:Auxiliary:Punch:Ass'y	5 - 6
D460 2245	Bracket:Photo Reflection Sensor:Overflow	9 - 16
D460 2333	Guide Plate:Exit:Lower:Sub-ass'y	29 - 22
D460 3100	Cover:Exit Roller	33 - 4
D460 3107	End Fence	33 - 16
D460 3121	Exit Stay	33 - 15
D460 3130	Bracket:Drive:Upper Lower:Ass'y	31 - 3
D460 3205	Bracket:Photointerruptor:Shift	33 - 13
D460 3214	Bracket:Shift:Ass'y	33 - 10
D460 4248	Holder:Middle:Stapler:Ass'y	25 - 3
D460 4261	Slider:Base:Stapler:Ass'y	23 - 23
D460 4538	Plate:Trailing Edge	21 - 23
D460 5210	Harness:Door Switch	41 - 9
D460 5210	Harness:Door Switch	39 - 36
D460 5230	Harness:Sensor:Main:Entrance Sensor	39 - 35
D460 5271	Harness:Paper Feed Sensor:Shift Tray: Connecting	27 - 13
D460 5281	Harness:Sensor:Paper Exit Sub-unit: Shift Tray:Connecting	29 - 3
D460 5290	Harness:Sensor:Shift Tray	39 - 12
D460 5310	Harness:Sensor:Paper Exit Sub-unit: Stapler Tray	39 - 29
D460 5361	Harness:Home Position Sensor:Stapler Tray	19 - 22

Part No.	Description	Page and Index No.
D460 5361	Harness:Home Position Sensor:Stapler Tray	39 - 28
D460 5372	Harness:Motor:Stapler Tray	39 - 15
D460 5380	Harness:Solenoid:Exchange Powl:	
	Transport Section	21 - 25
D460 5402	Harness:Stapler	39 - 20
D460 5422	Harness:Motor:Shift Tray	39 - 30
D460 5431	Harness:Motor:Return	35 - 2
D460 5440	Harness:Sensor:Return:	
	Surface Of Paper Sensor	35 - 34
D460 5467	Harness:Motor Control:Shift:Jogger	39 - 11
D460 5481	Harness:Switch:Stop	39 - 10
D460 5561	DC Stepper Motor:Transport:MM42:Ass'y	31 - 23
D460 5700	Harness:Sensor:Motor:Ass'y	39 - 16
D460 5710	Harness:Home Position Sensor:Connecting	15 - 31
D460 5720	Harness:Motor:Connecting	15 - 30
D460 5730	Harness:Sensor:Proof Tray:Connecting	9 - 15
D611 1618	Cover:Upper:Connector:RIC	3 - 29
D615 4273	Timing Pulley:24T:Knob	17 - 2
G838 1151	Bracket:Toner Hopper	43 - 12

Part No.	Description	Page and Index No.
AA04 3054	Timing Belt - 142 P2M4	31 - 2
AA04 3301	Timing Belt - 402P3M6	37 - 1
AA04 3302	Timing Belt - B60S3M1221	37 - 3
AA04 3303	Timing Belt - 693P3M6	37 - 6
AA04 3304	Timing Belt - 633P3M6	37 - 14
AA04 3305	Timing Belt - 210P3M6	31 - 20
AA04 3637	Timing Belt - 40S2M124	33 - 7
AA06 2333	Tension Spring:2.16N	39 - 6
AA06 2334	Tension Spring:4.9N	19 - 7
AA06 2334	Tension Spring:4.9N	39 - 24
AA06 2334	Tension Spring:4.9N	37 - 10
AA06 2334	Tension Spring:4.9N	46 - 27
AA06 3400	Pressure Spring - 5.5x19.5mm	7 - 11
AA06 3400	Pressure Spring - 5.5x19.5mm	11 - 12
AA06 3529	Pressure Spring - 14.5mm	13 - 14
AA06 3529	Pressure Spring - 14.5mm	9 - 4
AA08 0072	Bushing - 6x10x3	35 - 36
AA08 0072	Bushing - 6x10x3	23 - 27
AA10 0006	Nut - M3.6	9 - 25
AA12 0097	Antistatic Brush	7 - 8
AA12 0097	Antistatic Brush	11 - 10
AA12 0099	Antistatic Brush - 320mm	13 - 10
AA13 2011	Slider Guide Roller	33 - 3
AA13 2024	Spacer - M6	29 - 19
AA14 3702	Screw:Pin:Positioning	33 - 14
AA14 3702	Screw:Pin:Positioning	25 - 5
AA14 3790	Screw:Contact Point	19 - 6
AA14 3790	Screw:Contact Point	41 - 1
AA14 3790	Screw:Contact Point	23 - 17
AA14 3790	Screw:Contact Point	21 - 40
AA14 3807	Screw:A	3 - 21
AA16 1099	Lever Cushion	13 - 22
AB03 0278	Idler - 20Z	23 - 15
AB03 0278	Idler - 20z	19 - 5
AB03 0374	Timing Pulley - 20Z	37 - 5

Part No.	Description	Page and Index No.
AB03 0522	Timing Pulley - T14P3M	39 - 23
AF02 0501	Transport Roller	41 - 13
AF02 0501	Transport Roller	11 - 22
AF02 0501	Transport Roller	5 - 12
AF02 0501	Transport Roller	9 - 22
AF02 0502	Transport Roller	11 - 13
AF02 0502	Transport Roller	13 - 15
AF02 2147	Driven Roller	7 - 7
AF02 2147	Driven Roller	13 - 16
AF02 2147	Driven Roller	11 - 14
AF02 2148	Roller:Driven:L=125	9 - 6
AG07 0504	Magnet Catch:44.1N	41 - 12
AG07 0513	Magnet Catch	41 - 17
AG07 0513	Magnet Catch	11 - 7
AG07 0513	Magnet Catch	7 - 12
AG07 1012	Magnet Catch:Ass'y	43 - 21
AG07 1012	Magnet Catch:Ass'y	31 - 26
AJ01 1017	Stapler:EH-1100R2	25 - 12
AW01 0091	Photo Reflection Sensor	21 - 41
AW01 0109	Photo Reflection Sensor:PS117ED1	11 - 3
AW01 0109	Photo Reflection Sensor:PS117ED1	5 - 4
AW01 0109	Photo Reflection Sensor:PS117ED1	13 - 5
AW01 0124	Photo Refiection Sensor:GP2A200LCS0F	27 - 14
AW01 0129	Photo Reflection Sensor	9 - 14
AW02 0114	Photo Interruptor - Lower Limit	31 - 24
AW02 0156	Photointerruptor:EE-SX4235A-P2	21 - 38
AW02 0156	Photointerruptor:EE-SX4235A-P2	46 - 5
AW02 0156	Photointerruptor:EE-SX4235A-P2	29 - 2
AW02 0156	Photointerruptor:EE-SX4235A-P2	43 - 7
AW02 0156	Photointerruptor:EE-SX4235A-P2	19 - 21
AW02 0156	Photointerruptor:EE-SX4235A-P2	39 - 32
AW02 0156	Photointerruptor:EE-SX4235A-P2	15 - 5
AW02 0156	Photointerruptor:EE-SX4235A-P2	33 - 12
AW02 0156	Photointerruptor:EE-SX4235A-P2	35 - 6
AW02 0156	Photointerruptor:EE-SX4235A-P2	23 - 22

Part No.	Description	Page and Index No.
AW02 0156	Photointerruptor:EE-SX4235A-P2	17 - 13
AW02 0169	Photointerruptor - OS - 580213-703	21 - 15
AW02 0169	Photointerruptor - OS - 580213-703	9 - 1
AX04 0139	Stepper Motor:MM42:0.95A:9.5V	46 - 9
AX04 0139	Stepper Motor:MM42:0.95A:9.5V	17 - 15
AX04 0160	DC Motor:DC24V 4.8W	29 - 6
AX04 0161	Stepper Motor:MM42:0.95A:9.5V	39 - 31
AX04 0161	Stepper Motor:MM42:0.95A:9.5V	17 - 11
AX05 0244	Stepper Motor:DC 24V 21W	35 - 1
AX05 0244	Stepper Motor:DC 24V 21W	46 - 1
AX05 0279	Stepper Motor:MM42:1.7A:4.08V	23 - 12
AX05 0279	Stepper Motor:MM42:1.7A:4.08V	41 - 8
AX05 0289	Brushless Motor:7W:DIA56	39 - 8
AX05 0323	DC Motor:24V:9W	33 - 11
AX05 0323	DC Motor:24V:9W	31 - 4

Part No.	Description	Page and Index No.
0242 0035N	Pan Head Screw:M2x3.5	21 - 111
0313 0040N	Screw:M3x4	19 - 102
0313 0040N	Philips Pan Head Screw - M3x4	46 - 102
0313 0040N	Screw:M3x4	39 - 102
0313 0040N	Screw:M3x4	35 - 101
0313 0040N	Screw:M3x4	29 - 107
0313 0040N	Screw:M3x4	23 - 105
0313 0050N	Philips Pan Head Screw - M3x5	33 - 103
0313 0050N	Philips Pan Head Screw - M3x5	31 - 101
0313 0060N	Screw - M3x6	27 - 107
0313 0080N	Pan Head Screw:M3x8	9 - 107
0313 0140N	Pan Head Screw:M3x14	5 - 102
0450 3008N	Tapping Screw - M3x8	13 - 103
0450 3008N	Tapping Screw - M3x8	11 - 101
0450 3008N	Tapping Screw - M3x8	19 - 104
0450 3008N	Tapping Screw - M3x8	21 - 103
0450 3008N	Tapping Screw - M3x8	15 - 102
0450 3008N	Tapping Screw - M3x8	7 - 101
0451 3006N	Tapping Screw - 3x6	21 - 101
0451 3006N	Tapping Screw - 3x6	7 - 103
0451 3006N	Tapping Screw - 3x6	13 - 101
0451 3006N	Tapping Screw - 3x6	17 - 102
0451 3006N	Tapping Screw - 3x6	19 - 101
0451 3006N	Tapping Screw - M3x6	46 - 105
0451 3006N	Tapping Screw - 3x6	11 - 102
0451 3006N	Tapping Screw - 3x6	43 - 102
0451 3006N	Tapping Screw - 3x6	39 - 101
0451 3006N	Tapping Screw - 3x6	25 - 103
0451 3006N	Tapping Screw - 3x6	35 - 102
0451 3006N	Tapping Screw - 3x6	5 - 101
0451 3006N	Tapping Screw - 3x6	33 - 102
0451 3006N	Tapping Screw - 3x6	23 - 101
0451 3006N	Tapping Screw - 3x6	29 - 101
0451 3006N	Tapping Screw - 3x6	3 - 101
0451 3006N	Tapping Screw - 3x6	9 - 101

Part No.	Description	Page and Index No.
0451 3008N	Tapping Screw - M3x8	17 - 104
0451 3008N	Tapping Screw - M3x8	23 - 117
0451 3008N	Tapping Screw - M3x8	46 - 106
0451 3008N	Tapping Screw - M3x8	3 - 102
0451 3010N	Tapping Screw:3x10	21 - 104
0451 3014N	Tapping Screw:3x14	21 - 110
0451 3014N	Tapping Screw:3x14	13 - 106
0451 3014N	Tapping Screw:3x14	39 - 104
0451 4006N	Tapping Screw - 4x6	5 - 103
0451 4006N	Tapping Screw - 4x6	33 - 101
0451 4006N	Tapping Screw - 4x6	21 - 105
0451 4008N	Tapping Screw:4x8	3 - 105
0451 4008N	Tapping Screw:4x8	25 - 104
0451 4010N	Tapping Screw:4x10	23 - 103
0452 3008N	Tapping Screw - M3x8	3 - 107
0452 4008N	Tapping Screw:M4x8	27 - 104
0452 4008N	Tapping Screw:M4x8	3 - 103
0452 4008N	Tapping Screw:M4x8	11 - 104
0452 4008N	Tapping Screw:M4x8	7 - 102
0453 3006N	Tapping Screw - M3x6	41 - 104
0453 4006N	Binding Self Tapping Screw:4x6	33 - 108
0454 3006Q	Tapping Screw - M3x6	29 - 108
0454 3006Q	Tapping Screw - M3x6	31 - 105
0454 3006Q	Tapping Screw - M3x6	5 - 107
0454 3006Q	Tapping Screw - M3x6	27 - 101
0454 3006Q	Tapping Screw - M3x6	23 - 110
0454 3006Q	Tapping Screw - M3x6	9 - 108
0454 3006Q	Tapping Screw - M3x6	3 - 109
0454 3006Q	Tapping Screw - M3x6	35 - 104
0454 3006Q	Tapping Screw - M3x6	37 - 103
0454 3006Q	Tapping Screw - M3x6	13 - 109
0454 3006Q	Tapping Screw - M3x6	17 - 106
0454 3006Q	Tapping Screw - M3x6	43 - 103
0454 3006Q	Tapping Screw - M3x6	11 - 106
0454 3006Q	Tapping Screw - M3x6	41 - 101

Part No.	Description	Page and Index No.
0454 3006Q	Tapping Screw - M3x6	39 - 108
0454 3006Q	Tapping Screw - M3x6	15 - 107
0454 3008N	Tapping Screw:Round Point:3x8	29 - 110
0454 3008N	Tapping Screw:Round Point:3x8	3 - 108
0454 3008Q	Tapping Screw:3x8	15 - 108
0454 3008Q	Tapping Screw:3x8	17 - 101
0454 3008Q	Tapping Screw:3x8	3 - 106
0454 3008Q	Tapping Screw:3x8	43 - 106
0454 4006Q	Tapping Screw:4x6	31 - 107
0454 4006Q	Tapping Screw:4x6	9 - 105
0454 4006Q	Tapping Screw:4x6	29 - 106
0454 4006Q	Tapping Screw:4x6	41 - 103
0454 4006Q	Tapping Screw:4x6	11 - 105
0454 4006Q	Tapping Screw:4x6	27 - 103
0454 4008Q	Tapping Screw - M4x8	43 - 105
0573 0030E	Hexagon Headless Set Screw - M3x3	39 - 106
0574 0040E	Hexagon Headless Set Screw - M4x4	31 - 104
0623 0120E	Spring Pin - M3x12	13 - 104
0632 0100G	Pin - 2x10mm	21 - 108
0632 0100G	Pin - 2x10mm	15 - 103
0633 0100G	Parallel Pin - 3x10	23 - 109
0633 0120G	Parallel Pin - 3x12	29 - 105
0634 0200G	Parallel Pin - 4x20	31 - 106
0710 0020P	Hexagonal Nut:M2	21 - 109
0720 0040E	Retaining Ring - M4	15 - 109
0720 0040E	Retaining Ring - M4	19 - 106
0720 0040E	Retaining Ring - M4	29 - 102
0720 0040E	Retaining Ring - M4	5 - 106
0720 0040E	Retaining Ring - M4	33 - 106
0720 0040E	Retaining Ring - M4	37 - 102
0720 0040E	Retaining Ring - M4	23 - 104
0720 0040E	Retaining Ring - M4	11 - 103
0720 0040E	Retaining Ring - M4	27 - 102
0720 0040E	Retaining Ring - M4	17 - 103
0720 0040E	Retaining Ring - M4	21 - 102

Part No.	Description	Page and Index No.
0720 0040E	Retaining Ring - M4	43 - 104
0720 0040E	Retaining Ring - M4	41 - 102
0720 0040E	Retaining Ring - M4	9 - 102
0720 0040E	Retaining Ring - M4	25 - 101
0720 0040E	Retaining Ring - M4	46 - 101
0720 0040E	Retaining Ring - M4	13 - 102
0720 0060E	Retaining Ring - M6	33 - 107
0720 0060E	Retaining Ring - M6	31 - 102
0720 0060E	Retaining Ring - M6	19 - 105
0720 0060E	Retaining Ring - M6	29 - 104
0720 0060E	Retaining Ring - M6	37 - 101
0720 0060E	Retaining Ring - M6	23 - 102
0720 0060E	Retaining Ring - M6	25 - 102
0720 0080E	Retaining Ring - M8	43 - 101
0740 3506	Ball Bearing - 6x12x4 mm	23 - 111
0740 3906	Ball Bearing - 6x15x5	29 - 111
0741 3506	Ball Bearing - 6x12x4 mm	31 - 109
0741 3506	Ball Bearing - 6x12x4 mm	21 - 112
0805 0088	Retaining Ring - M6	13 - 107
0805 0089	Retaining Ring - M4	41 - 106
0805 0089	Retaining Ring - M4	21 - 107
0805 0089	Retaining Ring - M4	39 - 107
0805 0089	Retaining Ring - M4	7 - 104
0805 0089	Retaining Ring - M4	13 - 108
0805 0089	Retaining Ring - M4	5 - 105
0805 0089	Retaining Ring - M4	15 - 101
0805 0089	Retaining Ring - M4	27 - 108
0805 0089	Retaining Ring - M4	35 - 105
0807 5056	Washer - 8.1mm	31 - 103
0951 3008N	Screw:Polished Round:M3x8	19 - 107
0951 4014N	Screw:Polished Round:M4x14	3 - 104
1102 4473	CT Connector - 2P	29 - 109
1102 8534	Connector - QR/P17-14S-B	9 - 106
1105 0062	Nylon Clamp - 6N	23 - 113
1105 0176	Nylon Clamp	23 - 114

Part No.	Description	Page and Index No.
1105 0243	Wire Saddle	25 - 106
1105 0291	Harness Clamp - LWS-3S	23 - 119
1105 0310	Harness Clamp - LWS-1S	23 - 108
1105 0323	Nylon Clamp:2N	23 - 112
1105 0328	Harness Clamp - ES-0505	35 - 106
1105 0328	Harness Clamp - ES-0505	27 - 105
1105 0328	Harness Clamp - ES-0505	23 - 106
1105 0328	Harness Clamp - ES-0505	41 - 107
1105 0328	Harness Clamp - ES-0505	29 - 103
1105 0328	Harness Clamp - ES-0505	9 - 109
1105 0328	Harness Clamp - ES-0505	46 - 104
1105 0413	Harness Clamp	23 - 120
1105 0487	Harness Clamp	23 - 107
1105 0487	Harness Clamp	9 - 104
1105 0487	Harness Clamp	17 - 105
1105 0488	Harness Clamp	39 - 105
1105 0488	Harness Clamp	23 - 118
1105 0488	Harness Clamp	37 - 104
1105 0488	Harness Clamp	35 - 107
1105 0488	Harness Clamp	31 - 108
1105 0508	Harness Clamp - LWS-0711	23 - 116
1105 0511	Harness Clamp - LWS-0306ZC	46 - 103
1105 0516	Clamp	15 - 105
1105 0516	Clamp	25 - 107
1105 0516	Clamp	19 - 103
1105 0518	Edge Saddle - LES-1010	23 - 115
1105 0522	Edge Saddle - LES0510	15 - 104
1105 0534	Clamp	25 - 105
1105 0623	Clamp - LBWS-0206S-V0	33 - 104
1105 0623	Clamp - LBWS-0206S-V0	13 - 105
1105 0623	Clamp - LBWS-0206S-V0	19 - 108
1105 0623	Clamp - LBWS-0206S-V0	21 - 106
1105 0623	Clamp - LBWS-0206S-V0	5 - 104
1105 0623	Clamp - LBWS-0206S-V0	43 - 107
1105 0623	Clamp - LBWS-0206S-V0	35 - 108

Part No.	Description	Page and Index No.
1105 0623	Clamp - LBWS-0206S-V0	27 - 106
1105 0623	Clamp - LBWS-0206S-V0	23 - 121
1105 0623	Clamp - LBWS-0206S-V0	9 - 103
1105 0623	Clamp - LBWS-0206S-V0	39 - 103
1105 0623	Clamp - LBWS-0206S-V0	15 - 106
1204 2544	Switch - DE2L-BJ23	35 - 103
1204 2841	Switch:FA3L-AA23	41 - 105
1607 0623	Ferrite Core - TFC-16-8-13	33 - 105

Part No.	Description	Page and Index No.
5053 0447	Bushing - 6mm	15 - 27
5053 0447	Bushing - 6mm	33 - 5
5053 0447	Bushing - 6mm	35 - 33
5053 0447	Bushing - 6mm	46 - 25
5201 2722	Bushing - M6x5	19 - 11
5215 2621	Snap Ring - M6	43 - 3
5447 2681	Snap Ring	13 - 26
5919 2127	Positioning Roller Pulley	13 - 27
5919 2132	Positioning Roller Belt	13 - 28

Part No.	Description	Page and Index No.