

DF Unit Type4545 (C600)

DF Unit Type4545 (C600)


PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.Exterior (C600)	2
2.Original Table (C600)	4
3.Paper Feed (C600)	6
4.Transfer Section (C600)	8
5.Paper Exit (C600)	10
6.Electrical Section (C600)	12
7.Frame Section (C600)	14
Parts Index.....	18

December 25, 2008

1.Exterior (C600)

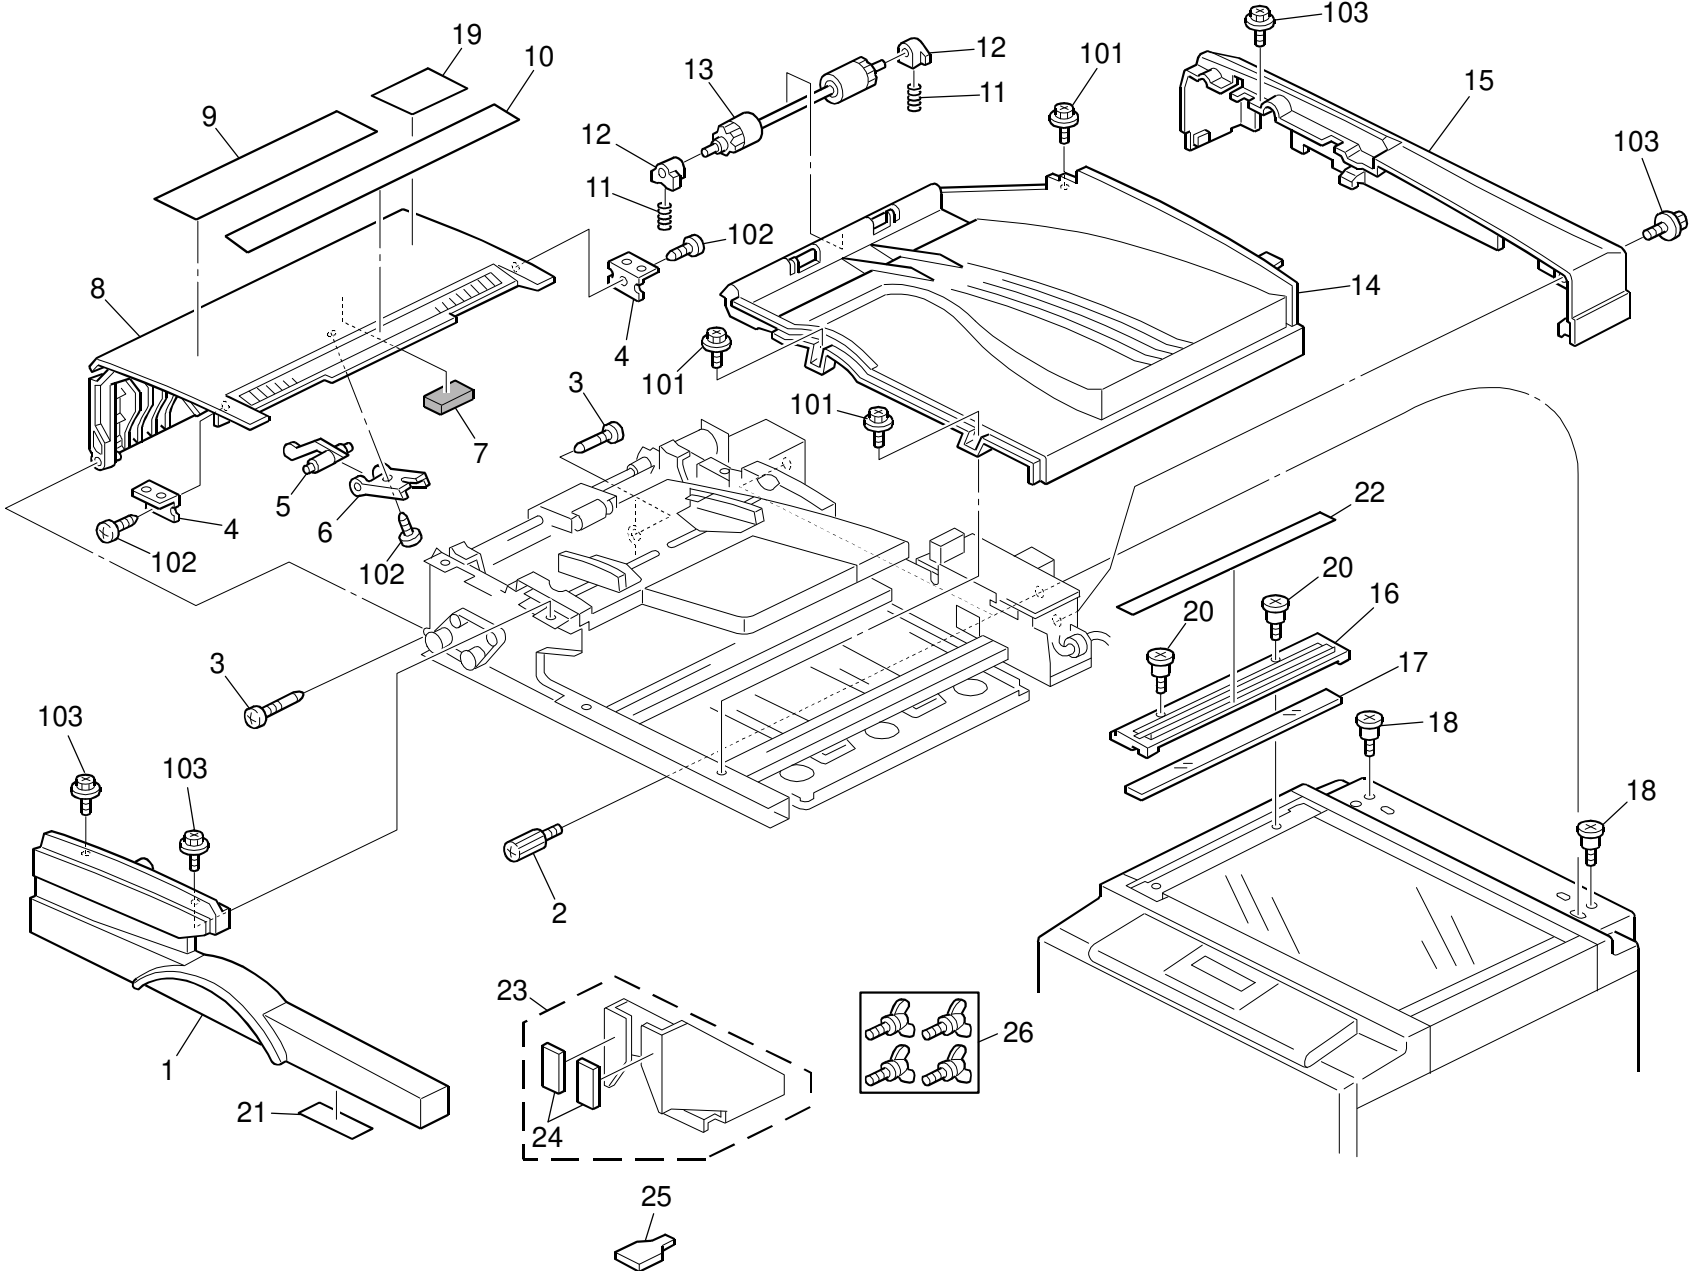


1.Exterior (C600)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B386 4811	Front Cover	1
2	B714 3115	Knob Screw:Document Feeder:Fix	2
3	AA14 3788	Pin:Guide Plate:Paper Feed	2
4	B386 4873	Positioning Plate	2
5	A859 4871	Original Sensor Feeler	1
6	A859 4872	Feeler Bracket	1
7	A859 4881	Cushion Paper Feed	1
8	B386 4842	Left Cover	1
9	C600 6011	Decal:Misfeed Removal	1
10	B813 6021	Decal - Size Indication Cover	1
11	AA06 3311	Transport Roller Spring	2
12	A859 4836	Bushing- Exit Driven Roller	2
13	A859 4837	Exit Driven Roller	1
14	B386 4871	Upper Cover	1
15	B386 4821	Rear Cover	1
16	B386 7102	Scale:Machine Or Copier:Adhesion	1
17	AC01 3004	Exposure Glass	1
18	A859 7211	Stepped Screw	2
19	C642 1373	Decal:Caution:Original:EXP	1
20	B390 1759	Shaft:Scale	2
21	B386 3617	Platen Sheet Mylar	1
22	B814 6053	Decal - Scale	1
22	B814 6054	Decal - Scale Inch	1
23	C600 6023	Bracket:Protect:Machine Or Copier:Ass'y	2
24	C218 2046	Cushion:Bracket:Protect	2
25	B386 3118	Standard Screw Driver:Document Feeder	1
26	C600 2050	Adjusting Screw:M4x10	4

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0452 3008N	Tapping Screw - M3x8	
103	0451 3008N	Tapping Screw - M3x8	

2.Original Table (C600)

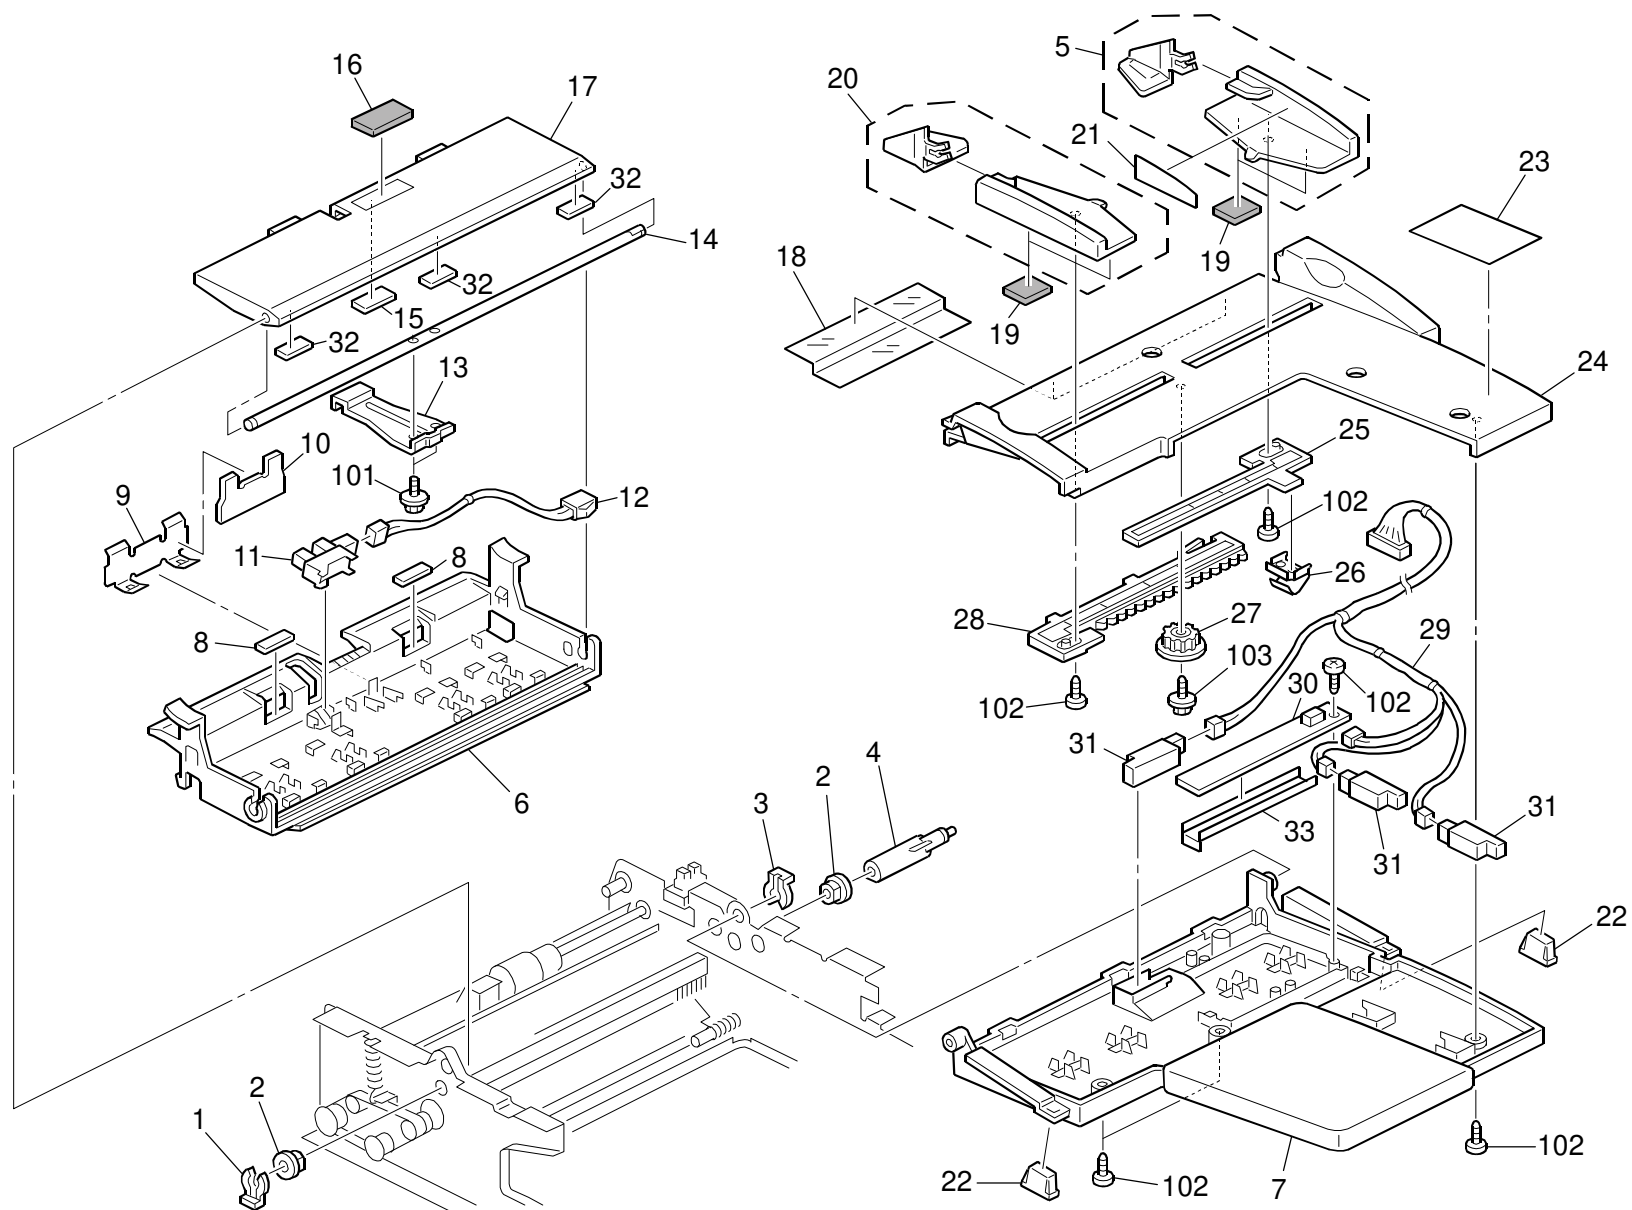


2.Original Table (C600)

Index No.	Part No.	Description	Q'ty Per Assembly
1	5447 2681	Snap Ring	1
2	H060 2126	Bushing - M6x7	2
3	5215 2621	Snap Ring - M6	1
4	A859 2355	Pressure Plate Lever	1
5	B386 4720	Rear Side Fence	1
6	A859 2311	Guide Plate - Paper Feed	1
7	B810 4630	Paper Tray:Behind:ALPS-F	1
8	A859 2319	Base Cushion	2
9	A859 2317	Guide - Separation Pad	1
10	A859 2315	Separation Pad	1
11	AW02 0141	Photointerruptor	1
12	A859 5705	Sensor Relay Harness	1
13	B386 2353	Pressure Plate - Base	1
14	A859 2354	Base Shaft	1
15	A859 4876	Left Cushion	1
16	A859 2352	Pressure Plate Pad	1
17	B386 2351	Original Feed Plate	1
18	A858 4681	Sheet - Paper Tray	2
19	A351 4951	Guide Pad - Side Fence	4
20	B386 4710	Front Side Fence	1
21	C600 6043	Decal:Side Fence	1
22	B352 2650	Magnet Catch - 5N	2
23	C642 1371	Decal:Original Table	1
24	B386 4621	Upper Original Table	1
25	A859 4662	Rack- Rear Side Fence	1
26	A859 4663	Electrode Plate- Side Fence	1
27	A859 4665	Gear - 16Z	1
28	A859 4661	Rack- Front Side Fence	1
29	A859 5702	Original Tray Harness	1
30	G412 5240	PCB:Paper Size Sensor	1
31	AW01 0112	Photo Refiection Sensor:Original Table	3
32	A859 2356	Base Bottom Cushion	3
33	A859 4664	Sheet - Paper Size Sensor Board	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0452 3008N	Tapping Screw - M3x8	
103	0450 3008N	Tapping Screw - M3x8	

3.Paper Feed (C600)

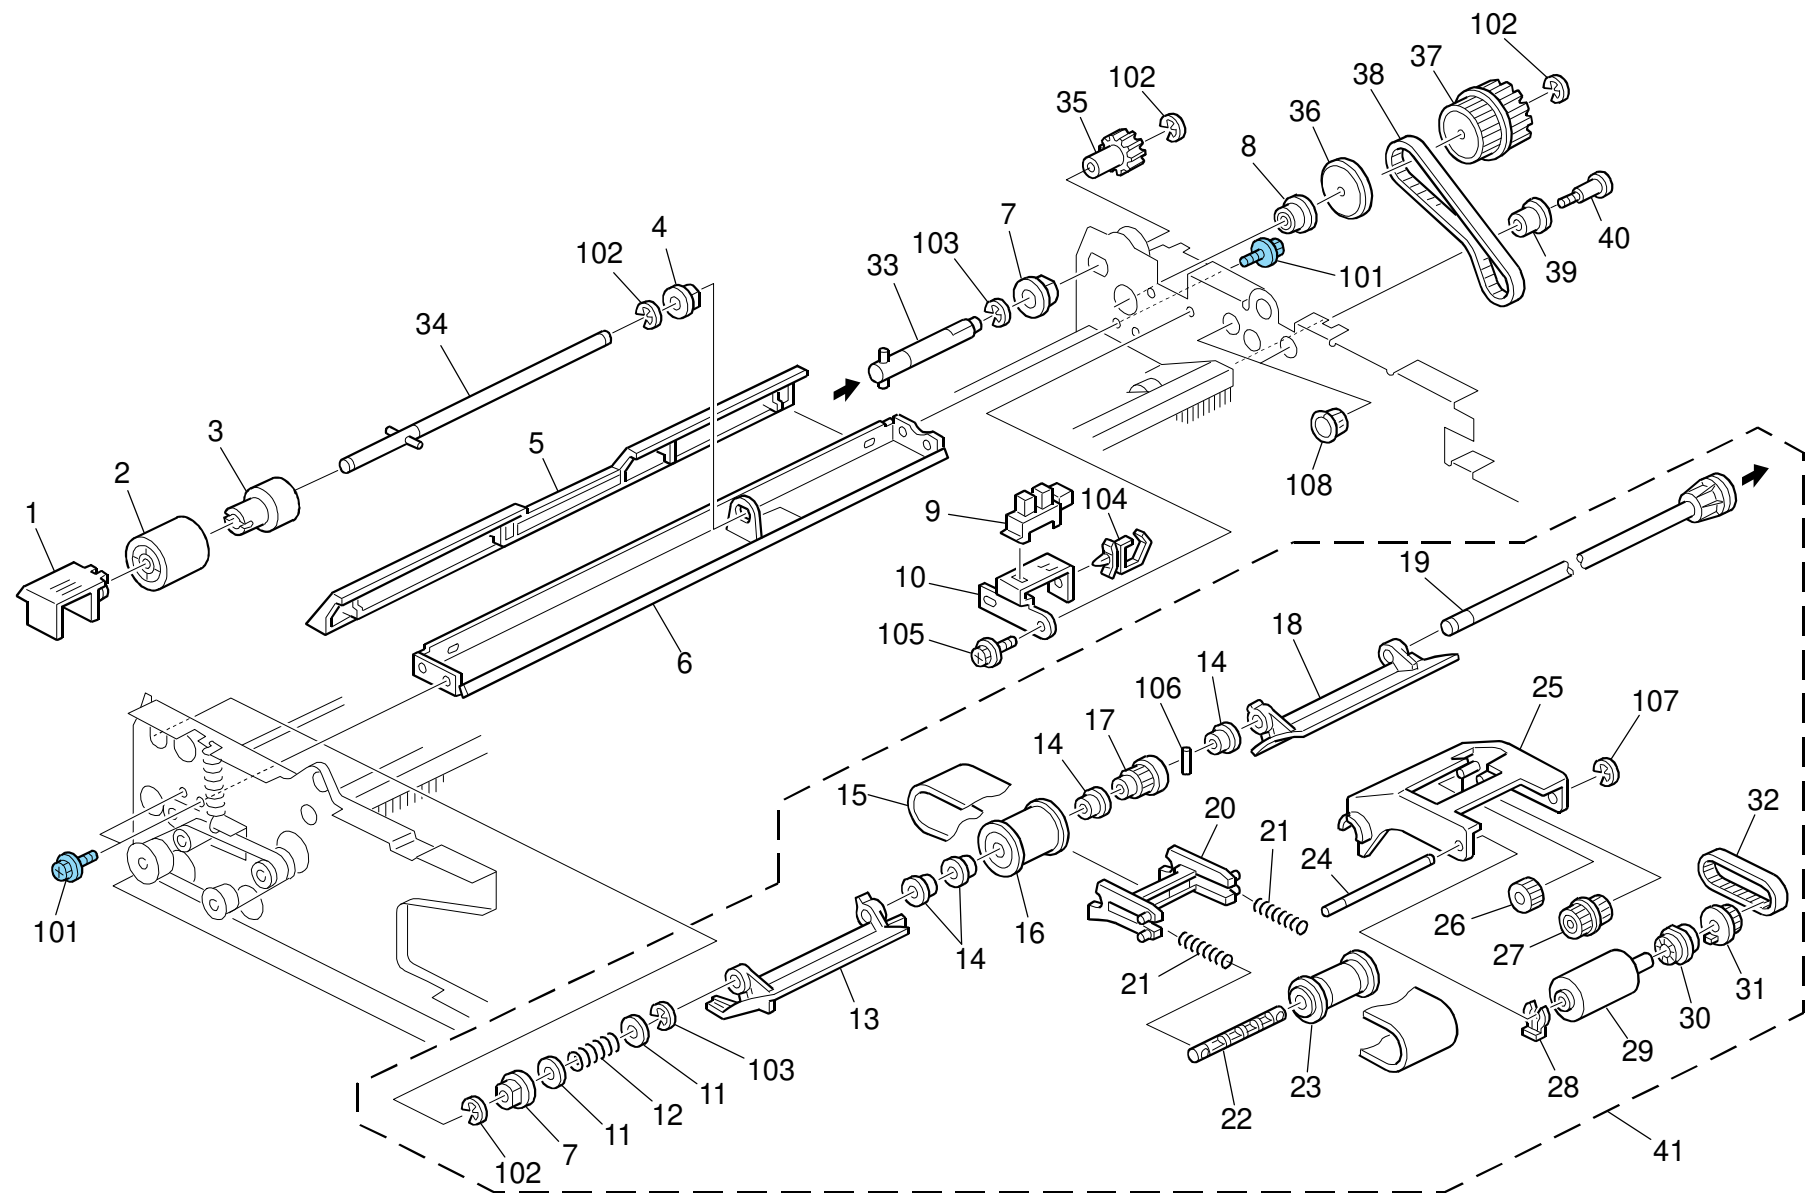


3.Paper Feed (C600)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A859 2220	Reverse Roller Cover	1
2	A859 2241	Reverse Roller	1
3	A294 6700	Torque Limiter - 53mNxm	1
4	5053 0447	Bushing - 6mm	1
5	A859 1621	Separation Guide	1
6	B386 1610	Separation Stay	1
7	5304 1639	Bushing - 8mm	2
8	A859 2230	Ball Bearing - 6x13x5	1
9	AW02 0141	Photointerruptor	1
10	B386 1123	Sensor Bracket	1
11	AA13 2013	Spacer	2
12	AA06 3435	Compression Spring:Paper Feed:Joint	1
13	A859 2132	Front Guide - Paper Feed	1
14	A628 1225	Bushing - 8mm	4
15	A859 2141	Belt Paper Feed	1
16	A859 2114	Drive Roller - Paper Feed Belt	1
17	A859 2121	Gear - 22Z	1
18	A859 2131	Rear Guide - Paper Feed	1
19	A859 2120	Drive Shaft - Paper Feed Belt	1
20	A859 2110	Belt Holder	1
21	B386 3320	Spring:Belt:Paper Feed:8N	2
22	A859 2112	Drive Shaft - Paper Feed Belt	1
23	B387 2113	Roller - Paper Feed Belt	1
24	A859 2162	Pick-up Roller Shaft	1
25	G412 3821	Holder - Pick Up	1
26	A859 2167	Gear - 22Z	1
27	G412 3831	Pulley - 22Z	1
28	5206 2686	Snap Ring	1
29	B386 2171	Pickup Roller	1
30	A859 2163	Pick-up Collar	1
31	A859 2164	Pulley - 2Z	1
32	B830 3504	Timing Belt - 40S2M100	1
33	A859 4216	Shaft Electromagnetic Clutch	1
34	A859 2210	Reverse Roller Shaft	1
35	A859 4221	Gear - 31Z	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	A859 4222	Pulley Flange	1
37	A859 4231	Gear - 20Z/36T	1
38	AA04 3468	Timing Belt - SM230	1
39	A859 4141	Pulley Idler	1
40	AA14 3444	Stepped Screw	1
41	B386 2105	Belt Unit:Paper Feed:Ass'y	1
101	0454 3006Q	Tapping Screw - M3x6	
102	0720 0040E	Retaining Ring - M4	
103	0720 0060E	Retaining Ring - M6	
104	1105 0487	Harness Clamp	
105	0451 3006N	Tapping Screw - 3x6	
106	0632 0100G	Pin - 2x10mm	
107	0720 0030E	Retaining Ring - M3	
108	1106 0193	Bushing - 7.9mm	

4.Transfer Saction (C600)

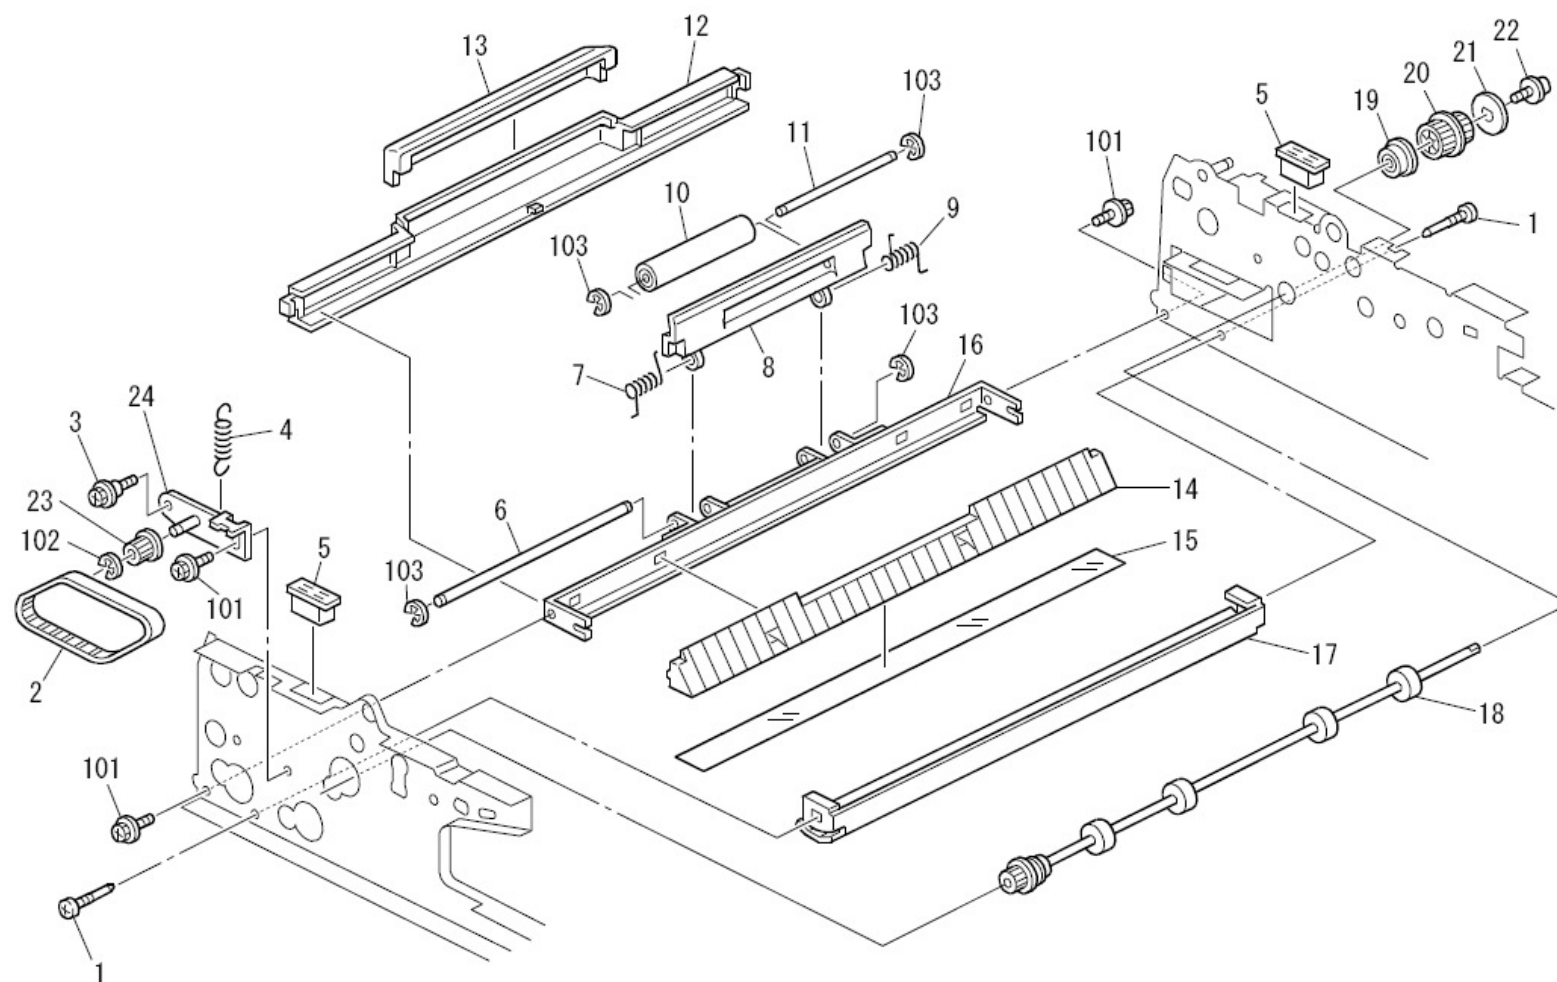


4.Transfer Saction (C600)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA14 3788	Pin:Guide Plate:Paper Feed	2
2	A859 4331	Timing Belt - 2XL	1
3	AA14 3790	Screw:Contact Point	1
4	A859 4341	Tension Spring	1
5	AG07 0513	Magnet Catch	2
6	A859 3317	Contact Point Shaft	1
7	A859 3318	Front Torsion Spring	1
8	A859 3316	Pullout Lever	1
9	A859 3319	Rear Torsion Spring	1
10	A859 3311	Transport Driven Roller	1
11	A859 3313	Pressure Driven Shaft	1
12	B386 4881	Left Lower Cover	1
13	B386 4856	Cover - Transport Driven Roller	1
14	A859 1723	Left Lower Guide	1
15	A859 1722	Entrance Guide	1
16	B386 1710	Left Lower Stay	1
17	B386 3513	Guide:Exposure Glass	1
18	B386 3130	Exit Roller - Drive	1
19	A859 2230	Ball Bearing - 6x13x5	1
20	A859 4271	Pulley - 31/32Z	1
21	A859 4272	Flange	1
22	B386 2214	Screw:M3x5	1
23	A859 4321	Pulley-20Z	1
24	B386 4311	Adjusting Pin - M6	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0720 0040E	Retaining Ring - M4	
103	0720 0030E	Retaining Ring - M3	

5. Paper Exit (C600)

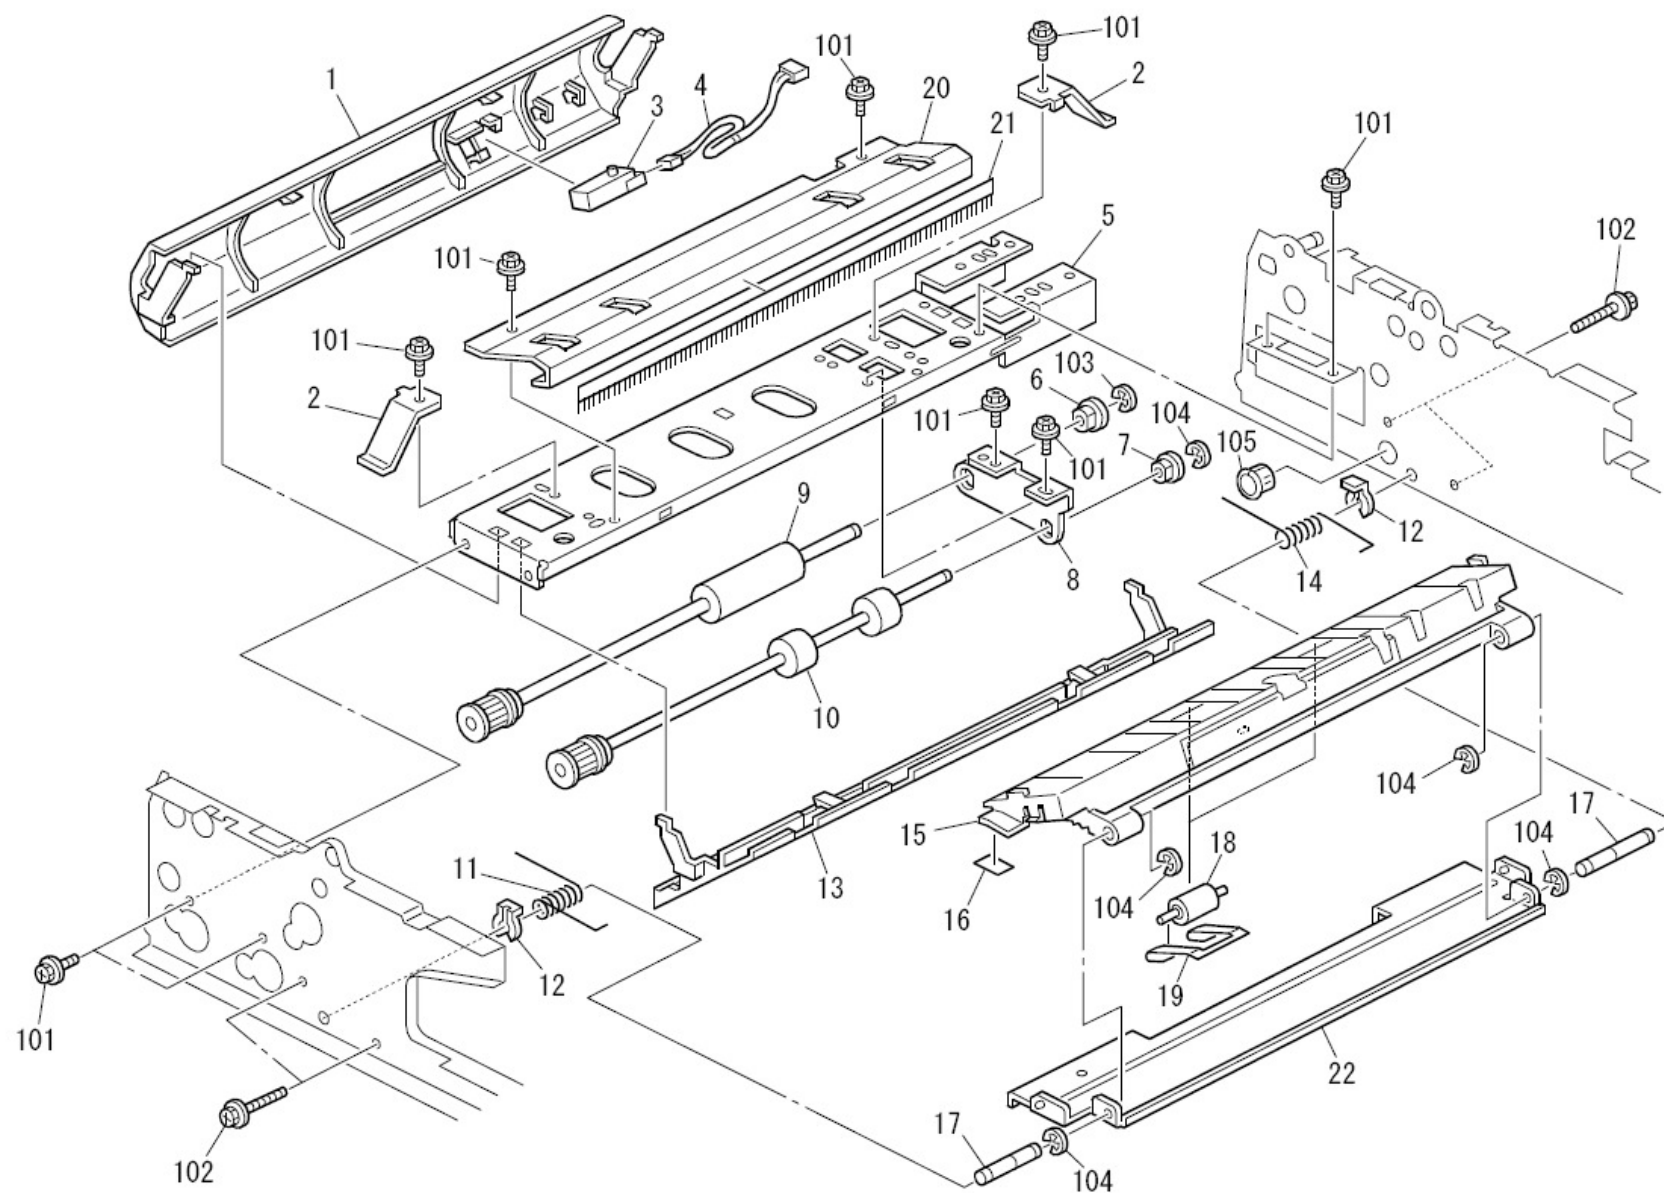


5.Paper Exit (C600)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A859 3210	Guide Plate - Transport Roller	1
2	A859 1322	Spring Plate	2
3	AW01 0109	Photo Refraction Sensor:PS117ED1	1
4	A859 5705	Sensor Relay Harness	1
5	B386 1311	Left Stay	1
6	5304 1639	Bushing - 8mm	1
7	5053 0447	Bushing - 6mm	1
8	B386 1320	Bracket - Transport Roller	1
9	A859 3110	Transport Roller	1
10	B386 3121	Transport Roller - Middle	1
11	A859 3431	Front Spring	1
12	5447 2681	Snap Ring	2
13	A859 3220	Guide Plate - Upper Exit	1
14	A859 3430	Rear Spring	1
15	A859 3411	Exit Guide Plate	1
16	A858 6022	Decal Blue	1
17	A859 3412	Shaft - Exit Guide Plate	2
18	A859 3420	Middle Driven Roller	2
19	A859 3425	Spring Plate	2
20	A859 3240	Shutter - Upper Exit	1
21	A859 3225	Discharge Brush	1
22	B386 3413	Cover - Exit Guide Plate	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0451 4014N	Tapping Screw:M4X14	
103	0720 0060E	Retaining Ring - M6	
104	0720 0040E	Retaining Ring - M4	
105	1106 0193	Bushing - 7.9mm	

6.Electrical Section (C600)

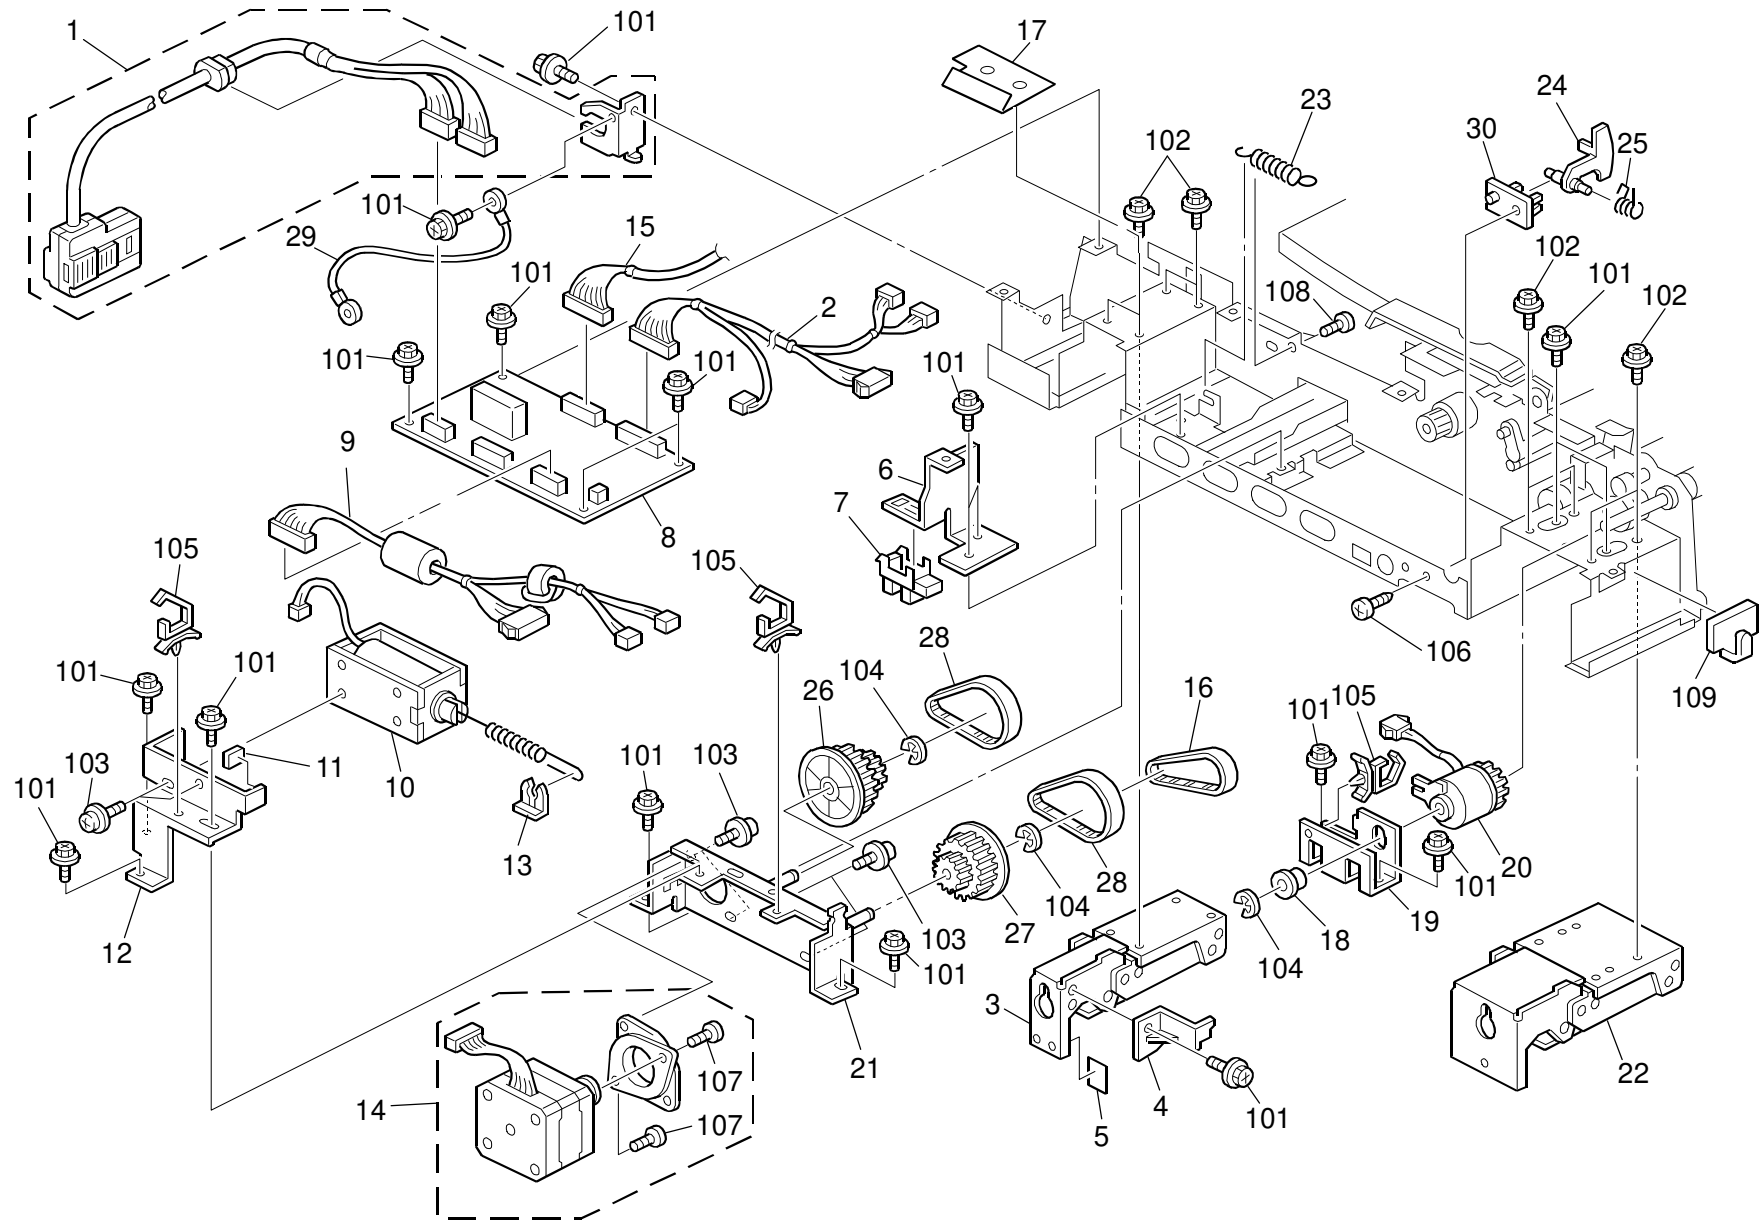


6.Electrical Section (C600)

Index No.	Part No.	Description	Q'ty Per Assembly
1	C600 5279	Stay:Interface:Ass'y	1
2	A859 5700	Main Harness	1
3	A859 1831	Right Hinge	1
4	A859 1841	Filter - Df Open Sensor	1
5	A334 4678	Rack Shield Mylar	1
6	B386 1127	Bracket:Right:Base:Support	1
7	AW02 0141	Photointerruptor	1
8	C600 5165	Printed Circuit Board:ADF:Ass'y	1
9	C600 5204	Harness:Stepper Motor:Transport	1
10	B386 4422	DC Solenoid - Bottom Plate	1
11	A028 3264	Stopper Cushion	1
12	B386 4411	Solenoid Bracket	1
13	5206 2686	Snap Ring	1
14	B387 4121	DC Transport Motor - 6.2W	1
15	A859 5702	Original Tray Harness	1
16	B652 4728	Timing Belt:B40S2M138	1
17	A859 1131	Insulating Sheet	1
18	5304 1639	Bushing - 8mm	1
19	B386 1315	Bracket - Electromagnetic Clutch	1
20	AX21 0092	Magnetic Clutch:Z30	1
21	C600 6112	Bracket:Motor:Ass'y	1
22	A859 1811	Left Hinge	1
23	A859 4197	Tension Spring - Motor	1
24	B386 1121	APS Feeler	1
25	B387 1951	Spring - Paper Size Sensor	1
26	C600 6115	Timing Pulley - 20Z/68Z	1
27	C600 6116	Timing Pulley - 20Z/60Z	1
28	C600 6117	Timing Belt - B40S2M180	2
29	C600 5276	Ground Wire Ass'y	1
30	B386 1125	APS Feeler Bracket	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0451 4006N	Tapping Screw - 4x6	
103	0951 3006N	Screw - M3x6	
104	0720 0040E	Retaining Ring - M4	
105	1105 0487	Harness Clamp	
106	0452 3008N	Tapping Screw - M3x8	
107	0313 0050N	Philips Pan Head Screw - M3x5	
108	0453 3006N	Tapping Screw - M3x6	

7.Frame Section (C600)

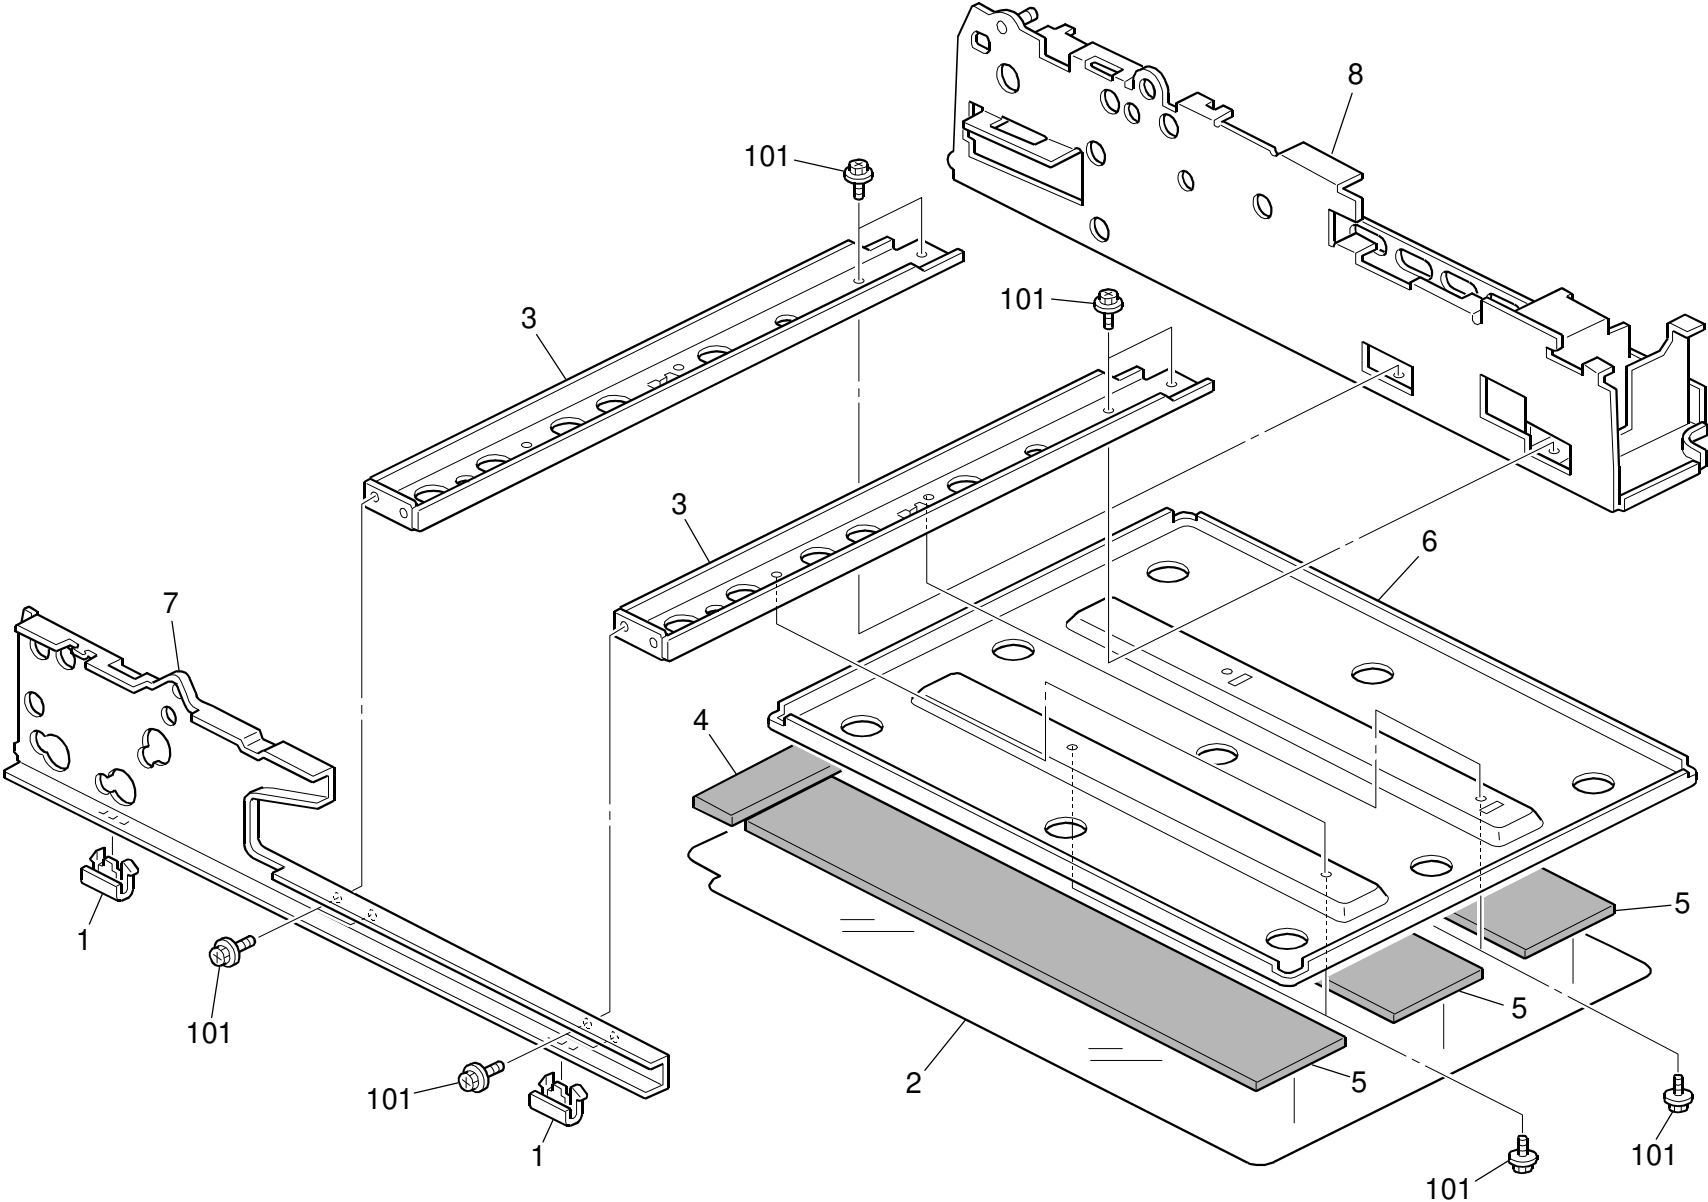

7.Frame Section (C600)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A859 1221	Spacer	2
2	G412 3721	Platen Cover Sheet	1
3	B386 1511	Middle Stay	2
4	A859 3614	Sponge - Left Platen Cover	1
5	A859 3613	Plate Cover Sponge	3
6	B386 3615	Base - Platen Cover	1
7	B386 1211	Front Side Plate	1
8	B386 1110	Rear Side Plate	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	

Parts Index

Parts Index

Part No.	Description	Page and Index No.
C600 2050	Adjusting Screw:M4x10	3 - 26
C600 5165	Printed Circuit Board:ADF:Ass'y	13 - 8
C600 5204	Harness:Stepper Motor:Transport	13 - 9
C600 5276	Ground Wire Ass'y	13 - 29
C600 5279	Stay:Interface:Ass'y	13 - 1
C600 6011	Decal:Misfeed Removal	3 - 9
C600 6023	Bracket:Protect:Machine Or Copier:Ass'y	3 - 23
C600 6043	Decal:Side Fence	5 - 21
C600 6112	Bracket:Motor:Ass'y	13 - 21
C600 6115	Timing Pulley - 20Z/68Z	13 - 26
C600 6116	Timing Pulley - 20Z/60Z	13 - 27
C600 6117	Timing Belt - B40S2M180	13 - 28

Part No.	Description	Page and Index No.
A028 3264	Stopper Cushion	13 - 11
A294 6700	Torque Limiter - 53mNxm	7 - 3
A334 4678	Rack Shield Mylar	13 - 5
A351 4951	Guide Pad - Side Fence	5 - 19
A628 1225	Bushing - 8mm	7 - 14
A858 4681	Sheet - Paper Tray	5 - 18
A858 6022	Decal Blue	11 - 16
A859 1131	Insulating Sheet	13 - 17
A859 1221	Spacer	15 - 1
A859 1322	Spring Plate	11 - 2
A859 1621	Separation Guide	7 - 5
A859 1722	Entrance Guide	9 - 15
A859 1723	Left Lower Guide	9 - 14
A859 1811	Left Hinge	13 - 22
A859 1831	Right Hinge	13 - 3
A859 1841	Filter - Df Open Sensor	13 - 4
A859 2110	Belt Holder	7 - 20
A859 2112	Drive Shaft - Paper Feed Belt	7 - 22
A859 2114	Drive Roller - Paper Feed Belt	7 - 16
A859 2120	Drive Shaft - Paper Feed Belt	7 - 19
A859 2121	Gear - 22Z	7 - 17
A859 2131	Rear Guide - Paper Feed	7 - 18
A859 2132	Front Guide - Paper Feed	7 - 13
A859 2141	Belt Paper Feed	7 - 15
A859 2162	Pick-up Roller Shaft	7 - 24
A859 2163	Pick-up Collar	7 - 30
A859 2164	Pulley - 2Z	7 - 31
A859 2167	Gear - 22Z	7 - 26
A859 2210	Reverse Roller Shaft	7 - 34
A859 2220	Reverse Roller Cover	7 - 1
A859 2230	Ball Bearing - 6x13x5	7 - 8
A859 2230	Ball Bearing - 6x13x5	9 - 19
A859 2241	Reverse Roller	7 - 2
A859 2311	Guide Plate - Paper Feed	5 - 6
A859 2315	Separation Pad	5 - 10

Part No.	Description	Page and Index No.
A859 2317	Guide - Separation Pad	5 - 9
A859 2319	Base Cushion	5 - 8
A859 2352	Pressure Plate Pad	5 - 16
A859 2354	Base Shaft	5 - 14
A859 2355	Pressure Plate Lever	5 - 4
A859 2356	Base Bottom Cushion	5 - 32
A859 3110	Transport Roller	11 - 9
A859 3210	Guide Plate - Transport Roller	11 - 1
A859 3220	Guide Plate - Upper Exit	11 - 13
A859 3225	Discharge Brush	11 - 21
A859 3240	Shutter - Upper Exit	11 - 20
A859 3311	Transport Driven Roller	9 - 10
A859 3313	Pressure Driven Shaft	9 - 11
A859 3316	Pullout Lever	9 - 8
A859 3317	Contact Point Shaft	9 - 6
A859 3318	Front Torsion Spring	9 - 7
A859 3319	Rear Torsion Spring	9 - 9
A859 3411	Exit Guide Plate	11 - 15
A859 3412	Shaft - Exit Guide Plate	11 - 17
A859 3420	Middle Driven Roller	11 - 18
A859 3425	Spring Plate	11 - 19
A859 3430	Rear Spring	11 - 14
A859 3431	Front Spring	11 - 11
A859 3613	Plate Cover Sponge	15 - 5
A859 3614	Sponge - Left Platen Cover	15 - 4
A859 4141	Pulley Idler	7 - 39
A859 4197	Tension Spring - Motor	13 - 23
A859 4216	Shaft Electromagnetic Clutch	7 - 33
A859 4221	Gear - 31Z	7 - 35
A859 4222	Pulley Flange	7 - 36
A859 4231	Gear - 20Z/36T	7 - 37
A859 4271	Pulley - 31/32Z	9 - 20
A859 4272	Flange	9 - 21
A859 4321	Pulley-20Z	9 - 23
A859 4331	Timing Belt - 2XL	9 - 2

Part No.	Description	Page and Index No.
A859 4341	Tension Spring	9 - 4
A859 4661	Rack- Front Side Fence	5 - 28
A859 4662	Rack- Rear Side Fence	5 - 25
A859 4663	Electrode Plate- Side Fence	5 - 26
A859 4664	Sheet - Paper Size Sensor Board	5 - 33
A859 4665	Gear - 16Z	5 - 27
A859 4836	Bushing- Exit Driven Roller	3 - 12
A859 4837	Exit Driven Roller	3 - 13
A859 4871	Original Sensor Feeler	3 - 5
A859 4872	Feeler Bracket	3 - 6
A859 4876	Left Cushion	5 - 15
A859 4881	Cushion Paper Feed	3 - 7
A859 5700	Main Harness	13 - 2
A859 5702	Original Tray Harness	13 - 15
A859 5702	Original Tray Harness	5 - 29
A859 5705	Sensor Relay Harness	11 - 4
A859 5705	Sensor Relay Harness	5 - 12
A859 7211	Stepped Screw	3 - 18
B352 2650	Magnet Catch - 5N	5 - 22
B386 1110	Rear Side Plate	15 - 8
B386 1121	APS Feeler	13 - 24
B386 1123	Sensor Bracket	7 - 10
B386 1125	APS Feeler Bracket	13 - 30
B386 1127	Bracket:Right:Base:Support	13 - 6
B386 1211	Front Side Plate	15 - 7
B386 1311	Left Stay	11 - 5
B386 1315	Bracket - Electromagnetic Clutch	13 - 19
B386 1320	Bracket - Transport Roller	11 - 8
B386 1511	Middle Stay	15 - 3
B386 1610	Separation Stay	7 - 6
B386 1710	Left Lower Stay	9 - 16
B386 2105	Belt Unit:Paper Feed:Ass'y	7 - 41
B386 2171	Pickup Roller	7 - 29
B386 2214	Screw:M3x5	9 - 22
B386 2351	Original Feed Plate	5 - 17

Part No.	Description	Page and Index No.
B386 2353	Pressure Plate - Base	5 - 13
B386 3118	Standard Screw Driver:Document Feeder	3 - 25
B386 3121	Transport Roller - Middle	11 - 10
B386 3130	Exit Roller - Drive	9 - 18
B386 3320	Spring:Belt:Paper Feed:8N	7 - 21
B386 3413	Cover - Exit Guide Plate	11 - 22
B386 3513	Guide:Exposure Glass	9 - 17
B386 3615	Base - Platen Cover	15 - 6
B386 3617	Platen Sheet Mylar	3 - 21
B386 4311	Adjusting Pin - M6	9 - 24
B386 4411	Solenoid Bracket	13 - 12
B386 4422	DC Solenoid - Bottom Plate	13 - 10
B386 4621	Upper Original Table	5 - 24
B386 4710	Front Side Fence	5 - 20
B386 4720	Rear Side Fence	5 - 5
B386 4811	Front Cover	3 - 1
B386 4821	Rear Cover	3 - 15
B386 4842	Left Cover	3 - 8
B386 4856	Cover - Transport Driven Roller	9 - 13
B386 4871	Upper Cover	3 - 14
B386 4873	Positioning Plate	3 - 4
B386 4881	Left Lower Cover	9 - 12
B386 7102	Scale:Machine Or Copier:Adhesion	3 - 16
B387 1951	Spring - Paper Size Sensor	13 - 25
B387 2113	Roller - Paper Feed Belt	7 - 23
B387 4121	DC Transport Motor - 6.2W	13 - 14
B390 1759	Shaft:Scale	3 - 20
B652 4728	Timing Belt:B40S2M138	13 - 16
B714 3115	Knob Screw:Document Feeder:Fix	3 - 2
B810 4630	Paper Tray:Behind:ALPS-F	5 - 7
B813 6021	Decal - Size Indication Cover	3 - 10
B814 6053	Decal - Scale	3 - 22
B814 6054	Decal - Scale Inch	3 - 22
B830 3504	Timing Belt - 40S2M100	7 - 32
C218 2046	Cushion:Bracket:Protect	3 - 24

Part No.	Description	Page and Index No.
C642 1371	Decal:Original Table	5 - 23
C642 1373	Decal:Caution:Original:EXP	3 - 19
G412 3721	Platen Cover Sheet	15 - 2
G412 3821	Holder - Pick Up	7 - 25
G412 3831	Pulley - 22Z	7 - 27
G412 5240	PCB:Paper Size Sensor	5 - 30
H060 2126	Bushing - M6x7	5 - 2

Part No.	Description	Page and Index No.
AA04 3468	Timing Belt - SM230	7 - 38
AA06 3311	Transport Roller Spring	3 - 11
AA06 3435	Compression Spring:Paper Feed:Joint	7 - 12
AA13 2013	Spacer	7 - 11
AA14 3444	Stepped Screw	7 - 40
AA14 3788	Pin:Guide Plate:Paper Feed	9 - 1
AA14 3788	Pin:Guide Plate:Paper Feed	3 - 3
AA14 3790	Screw:Contact Point	9 - 3
AC01 3004	Exposure Glass	3 - 17
AG07 0513	Magnet Catch	9 - 5
AW01 0109	Photo Refraction Sensor:PS117ED1	11 - 3
AW01 0112	Photo Refiection Sensor:Original Table	5 - 31
AW02 0141	Photointerruptor	7 - 9
AW02 0141	Photointerruptor	5 - 11
AW02 0141	Photointerruptor	13 - 7
AX21 0092	Magnetic Clutch:Z30	13 - 20

Part No.	Description	Page and Index No.
0313 0050N	Philips Pan Head Screw - M3x5	13 - 107
0450 3008N	Tapping Screw - M3x8	5 - 103
0451 3006N	Tapping Screw - 3x6	7 - 105
0451 3006N	Tapping Screw - 3x6	13 - 101
0451 3006N	Tapping Screw - 3x6	11 - 101
0451 3006N	Tapping Screw - 3x6	3 - 101
0451 3006N	Tapping Screw - 3x6	9 - 101
0451 3006N	Tapping Screw - 3x6	15 - 101
0451 3006N	Tapping Screw - 3x6	5 - 101
0451 3008N	Tapping Screw - M3x8	3 - 103
0451 4006N	Tapping Screw - 4x6	13 - 102
0451 4014N	Tapping Screw:M4X14	11 - 102
0452 3008N	Tapping Screw - M3x8	3 - 102
0452 3008N	Tapping Screw - M3x8	5 - 102
0452 3008N	Tapping Screw - M3x8	13 - 106
0453 3006N	Tapping Screw - M3x6	13 - 108
0454 3006Q	Tapping Screw - M3x6	7 - 101
0632 0100G	Pin - 2x10mm	7 - 106
0720 0030E	Retaining Ring - M3	9 - 103
0720 0030E	Retaining Ring - M3	7 - 107
0720 0040E	Retaining Ring - M4	9 - 102
0720 0040E	Retaining Ring - M4	11 - 104
0720 0040E	Retaining Ring - M4	7 - 102
0720 0040E	Retaining Ring - M4	13 - 104
0720 0060E	Retaining Ring - M6	7 - 103
0720 0060E	Retaining Ring - M6	11 - 103
0951 3006N	Screw - M3x6	13 - 103
1105 0487	Harness Clamp	13 - 105
1105 0487	Harness Clamp	7 - 104
1106 0193	Bushing - 7.9mm	11 - 105
1106 0193	Bushing - 7.9mm	7 - 108

Part No.	Description	Page and Index No.
5053 0447	Bushing - 6mm	7 - 4
5053 0447	Bushing - 6mm	11 - 7
5206 2686	Snap Ring	7 - 28
5206 2686	Snap Ring	13 - 13
5215 2621	Snap Ring - M6	5 - 3
5304 1639	Bushing - 8mm	7 - 7
5304 1639	Bushing - 8mm	11 - 6
5304 1639	Bushing - 8mm	13 - 18
5447 2681	Snap Ring	5 - 1
5447 2681	Snap Ring	11 - 12

Part No.	Description	Page and Index No.