

Upgrade Instruction for DDP70/DDP92 Controller Software

1. Purpose

This document is used for upgrade software of DDP70 and DDP92.

2. Necessary parts and working minutes

- (1) Software update CD x1
- (2) Upgrade Instruction (This material) x1

Working minutes : approx. 60 min.

3. Procedure Overview

Execute procedures according to the following order.

- (1) Confirming current revision of software before upgrading
- (2) Installing System Software
 - > Downloading System Software
 - > Upgrading Software
- (3) Confirming new revision of software after upgrading
- (4) Backup

= NOTICE =

Execute "Backup" exactly. Otherwise, the automatic backup processing can not work.

- (5) Paint the printer revision seal

4. Necessary tools

- Personal Computer for downloading software x 1

This PC is Installed MS-Windows OS (95/98/NT4.0/2000/XP) and CD drive. And it is capable of connecting network with Ethernet cable.

- Ethernet Cross cable x 1
- Black permanent marker (oil-based ink pen)

Procedure of Update for Controller Software

1. System Software

The Update CD includes Engine Micro, Controller and OCP Software. If you need to upgrade the Controller software components, you can update them by using this CD.

CAUTION

- (a) You must follow this procedure for upgrading each software, otherwise the system may get serious problem.
- (b) Separate the Printer from the network. And connect the Printer and PC in 1 to 1 by an Ethernet cross cable.

1. 1 System Software Installation Reminders

Keep in mind the following when installing system software:

HDD --- A corrupted or damaged HDD Maintenance Ass'y(xx) cannot be updated in the field. Update software, after exchanges it for normal HDD Maintenance Ass'y.

INSTALLATION --- Use PC installed Windows OS (95, 98, NT4.0, 2000 or XP) for installing System Software. Do not transmit job to the printer and do not turn off power switch while installing System Software.

1. 2 Confirming current revision of controller software

1. Turn on power switch of the printer.
2. Confirm current revision of controller with following OCP menu.

 **(Information)/Printer/Controller revision**

Or, confirm current revision of it with Status page printed with following menu.


 **(Reports)/Status**

1. 3 Installing System Software

1. Confirm network connection between PC and printer.
2. Install the Firmware Update CD into a network-capable PC.
3. Downloading System Software

Transmit PJJ data to the Virtual Printer port (the VP name: vp-pcl, the port number is 3101) of the printer with "LoadSoft.exe" according to the following procedures. The PJJ data and the "LoadSoft.exe" are in the Update CD.

- (1) Open Explorer on the PC.
- (2) Start "LoadSoft.exe", which is in the Update CD, with double click.
- (3) "LoadSoft-Send a File to a Printer" window is appeared.
- (4) Input IP address of the printer into "Printer IP Address" box.
- (5) Confirm that 3101 is set into "Virtual Printer Port" box. If 3101 is not set, input it into the box.
- (6) Click [Select File] button.

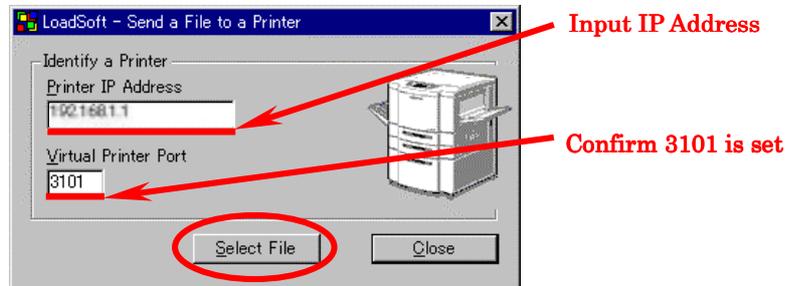


- (7) "Open" window is appeared.
- (8) Select CD drive, select "xxx.pjl" file in CD as follows and click [Open] button.



Note: Please use following pjl file for your Printer

Printer	File Name
DDP70	DDP70gpcl.pjl (For PCL model)
	DDP70gxpcl.pjl (For PS+PCL model)
DDP92	DDP92gpcl.pjl (For PCL model)
	DDP92gxpcl.pjl (For PS+PCL model)


- (9) If IP address is incorrect, a dialog box will open and report "Socket Connection Error". In this case, set IP address correctly.
- (10) Selected PJI data are transmitted to the printer and [Select File] button on "LoadSoft-Send a File to a Printer" is grayed out.

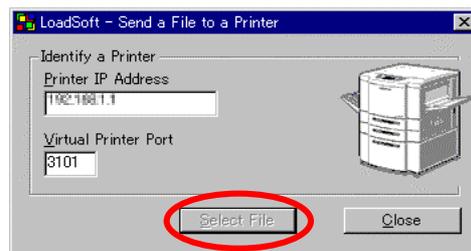

Wait until the button becomes active again. This is an indication that the load is complete. It takes a few minutes to load.

Warning: Do not quit this application and do not disconnect Ethernet cable until the load is completed.

- (11) After [Select File] button become Active, press  button on the operator control panel of the printer and confirm that any job are not displayed on the panel. While any job is displayed, the printer is processing. In this case, go back to "Online" screen and wait until any job is not display on the screen.
- (12) After completing process (11), Click [Close] button then "LoadSoft.exe" will close.

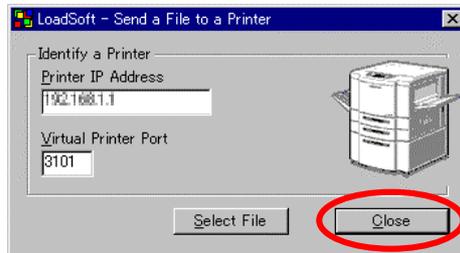

1. 4 Upgrading Software

When the load is complete, make the following selection from the OCP.


Setup / Service / "Password" / ■ / ►►/ System Software / ►*1/ Update System /(Key Code)*2/ ■

- *1 : Press ►► button in order to skip Disk Check function.
Note that Disk Check will take 30 min. if you execute.
- *2 : Key-code is set when shipped at factory.
You don't need to change key-code on this menu.


The software components are:

- Print Server (This menu appears if NIC (Option) is installed in the printer)
- Print Engine – Master
- Print Engine – Slave
- Controller Software
- OCP Logo
- OCP Software

- (1) Press "■" button if the Print Server software needs to be upgraded, otherwise press "►►" button to skip it. (The newest revision of Print Server software is 3.81A.
If the revision of Print Server Software on your printer is 3.77d or less, you need to install this software.)

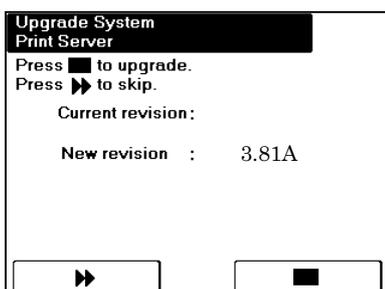


- (2) Press “■” button if the Print Engine - Master software needs to be upgraded, otherwise press “▶▶” button to skip it. (If the revision on your printer is not as same as current, you need to install this software.)

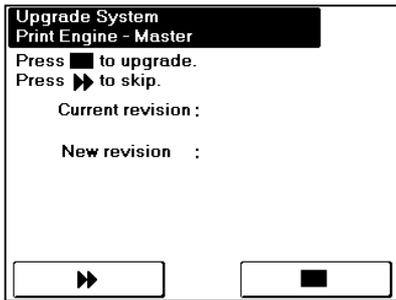



The upgrading time of Print Engine - Master software will take 10 minutes.

- (3) Press “■” button if the Print Engine - Slave software needs to be upgraded, otherwise press “▶▶” button to skip it. (If the revision on your printer is not as same as current, you need to install this software.)

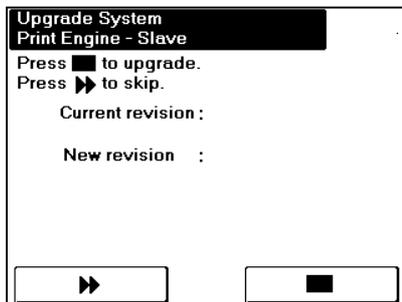

The upgrading time of Print Engine - Slave software will take 10 minutes.


- (4) Press “■” to install the new controller software on following menu.

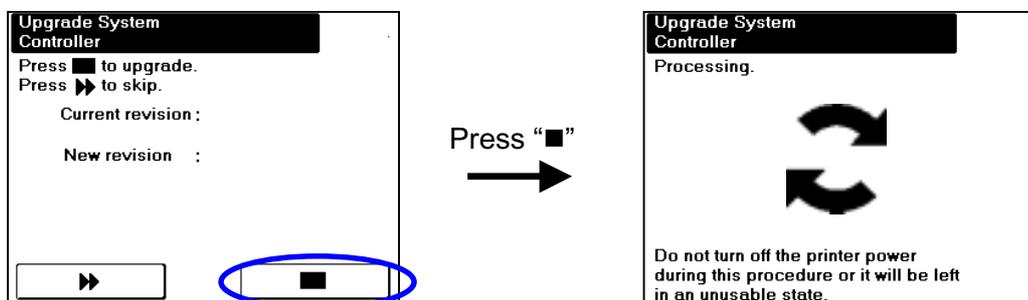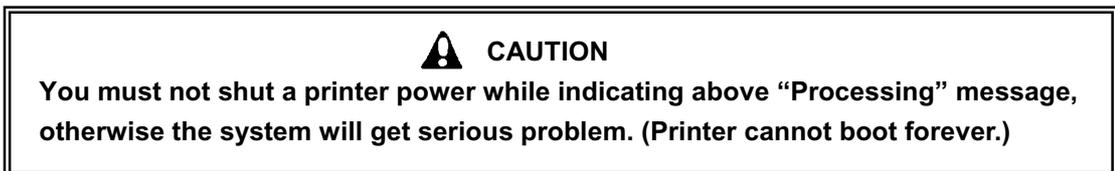

The upgrading time of controller will take approx. 15 minutes.


(5) Press "▶▶" to skip installation of OCP Logo.

⚠ CAUTION
You must not upgrading OCP Logo, otherwise the OCP Firmware will get serious problem.

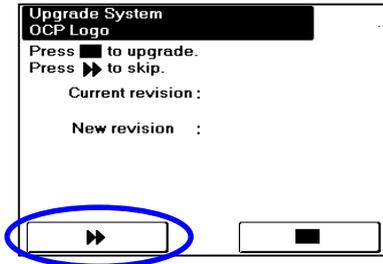


(6) Press "▶▶" to skip installation of OCP.

⚠ CAUTION
You must not upgrade OCP, otherwise the OCP Firmware will get serious problem.

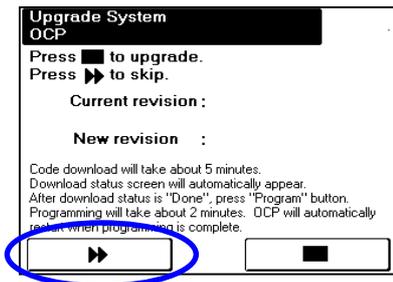

(7) After upgrade of System Software is complete, you need to restart printer in accordance with following OPC message.

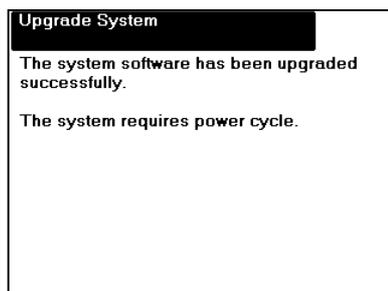

1. 5 Confirming the new controller revision

1. Confirm the new revision of controller with following OCP menu.



(Information)/Printer/Controller revision

Or, confirm new revision of it with Status page printed with following menu.



(Reports)/Status

1. 6 Backup

1. You have to take backup from the menu of the OCP by following menu.

Setup / Service / Password / ■ / ▶▶ / Backup/Restore / Backup

NOTICE

After pressing “Backup” key and the state of backup data (Ex. Date and Time etc.) is displayed on the right-hand side of an HDD data key, Engine data key, Controller key, then press “All” data key and “■” to execute Backup.

If you do not operate this operation, the automatic backup processing does not work.