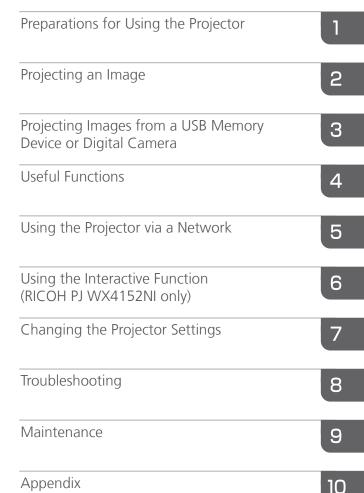


Operating Instructions



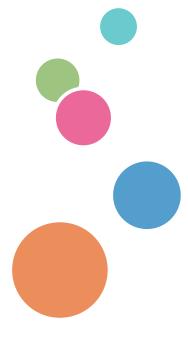


TABLE OF CONTENTS

Introduction	6
Copyrights to Images	6
Important	6
Notes to Users Viewing 3D Images	6
Manuals Provided with the Projector	8
How to Read This Manual	9
Symbols	9
Notes	9
Model-Specific Information	10
1. Preparations for Using the Projector	
Precautions for Using the Projector	11
Main Functions	13
Checking the Accessories.	15
Projector Parts and Their Functions	16
Control Panel (Top View)	16
Front and Left-Side View	17
Rear and Right-Side View	18
Bottom View	19
Remote Control Parts and Their Functions	20
How to Use the Remote Control	22
Effective Range of the Remote Control	22
Loading Batteries into the Remote Control	23
Inputting Text	24
Operating Multiple Projectors with the Remote Control	24
Positioning the Projector	27
Projection Mode	27
Relationship Between the Projection Distance and the Screen Size	29
Connecting Equipment to the Projector	30
Connecting a Computer	30
Connecting AV Equipment	32
Connecting an External Speaker	33
2. Projecting an Image	
Basic Operations for Using the Projector	35

Turning On the Projector	35
Projecting an Image	36
Turning Off the Projector	38
Adjusting the Projected Image	39
Adjusting the Angle of the Projection	39
Adjusting the Focus	39
Adjusting for Keystone Distortion	40
Reducing the Size of the Projected Image	41
Operations while Projecting Images	43
Adjusting the Volume of the Speaker	43
Switching the Sound Quality	43
Enlarging the Image	44
Temporarily Blanking the Image and Muting the Audio	45
Freezing the Image	45
Switching the Lamp Mode	45
Using the Presentation Timer	46
3. Projecting Images from a USB Memory Device or Digital Camera	
Requirements for Projecting Images from a USB Device	47
How to Project Images from USB Memory Device	49
Connecting the USB Device	49
Projecting Images from a USB Memory Device	49
Controlling the Projected Image	51
Disconnecting the USB Device	51
Converting Presentation Files to JPEG Files Using JPEG Conversion Tool	53
How to Use JPEG Conversion Tool	53
Converting Presentation Files to JPEG Files	54
4. Useful Functions	
Projecting Images in a Slide Show	55
Projecting a Slide Show at a Specified Time	55
Customizing a Slide Show	59
Specifying the Sound Quality	62
Setting the Sound Quality for Giving a Presentation	62
Setting the Sound Quality for Playing Music	62

5. Using the Projector via a Network

Before Connecting to a Network	63
Connecting an Ethernet Cable	63
Precautions for Using a Wireless LAN	64
Connecting the Projector to a Network	66
Opening Network Setting Wizard	67
Configuring the Wired LAN Settings	67
Configuring the Wireless LAN Settings for Infrastructure Mode	68
Configuring the Wireless LAN Settings for Ad Hoc Mode	71
Projecting a Computer's Screen via a Network	73
How to Use QuickProjection	73
Projecting Images Using QuickProjection	74
Projecting Images Using DLNA-Compatible Devices	76
Preparation	77
Projecting Images from DLNA-Compatible Devices	77
Projecting Images Stored on the DLNA Server	78
Projecting Images Using Smart Devices	81
6. Using the Interactive Function (RICOH PJ WX4152NI only)	
Preparations for Using the Interactive Function (RICOH PJ WX4152NI only)	83
Enabling Interactive Mode	84
Registering the Computer USB Adapter	85
Enabling the Projector to Recognize the Electronic Pen	88
Installing RICOH PJ Interactive Software	90
Using the Electronic Pen	93
Electronic Pen Parts and Their Functions	93
How to Use the Electronic Pen	94
Installing a Rechargeable Battery into the Electronic Pen	96
Recharging the Electronic Pen	98
When You Cannot Use the Interactive Function	99
When the Projected Screen Cannot Be Operated As Wanted	101
7. Changing the Projector Settings	
Viewing the Menu Screen	
Changing the Settings	105

Restoring All the Settings to Their Defaults	107
Image Adjustment Menu	108
Display/Sound Settings Menu	112
Energy Saving Settings Menu	116
Default Settings 1 Menu	118
Default Settings 2 Menu	120
USB Settings Menu	123
Settings	123
Display Status	124
Network Settings Menu	125
Wired LAN	125
Wireless LAN	126
LAN Common	131
Projector ID	132
Setup Wizard	133
Display Status	133
Network Application Settings Menu	134
Administration Tools	134
Security	136
Miracast	137
Server	138
Display Status	139
Administrator Authentication	140
Display Status	141
8. Troubleshooting	
Indicator Display List	143
Common Problems	
Accessing the Online Knowledge Base	152
9. Maintenance	
Operating Precautions	
Cleaning the Projector	
Cleaning the Air Filter	
Cleaning the Bottom Air Intake Vent	1.56

Cleaning the Projection Window	157
Cleaning the Projector	158
Replacing the Lamp	159
Managing the Projector Using Projector Management Utility	163
Installing Projector Management Utility	163
Settings Required to Use Projector Management Utility	164
Starting Projector Management Utility	164
Managing the Projector Using Web Image Monitor	166
Displaying Web Image Monitor	166
About Browse Mode and Edit Mode	167
Login to Edit Mode	168
Controlling and Monitoring the Projector Using Crestron RoomView	169
Displaying Crestron WebUI	169
Using Crestron WebUI	170
Consumables	173
10. Appendix	
Specifications for the Projector	175
List of Compatible Signals	177
Video Input	177
Y/Pb/Pr Input	177
Computer Input	178
HDMI Input	179
3D Format	180
Specifications for Ports	182
Computer In Port	182
Control Port	183
Information	185
Copyrights	185
Updating the Firmware	185
Where to Inquire	185
Trademarks	186
INDEX	189

Introduction

Copyrights to Images

When projecting images using the projector, be careful not to infringe the copyright of protected materials.

The following are examples that may infringe the copyright of protected materials.

- Broadcasting images or movies for commercial purposes
- Modifying images or movies using functions such as freeze, magnify, or zoom to broadcast images for commercial purposes or public viewing
- Varying the aspect ratio of images or movies using a function that changes the screen size to broadcast images for commercial purposes or public viewing

Important

In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

The manufacturer shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the manufacturer with your office products.

Notes to Users Viewing 3D Images

Pay attention to the following points when viewing images using 3D glasses with the projector:

- You need 3D glasses to view 3D images. The projector uses DLP Link technology to synchronize with 3D glasses. You need to use the 3D glasses that support DLP Link.
- How 3D images are viewed may vary according to the individual.
- Do not use 3D glasses for viewing any material other than 3D images.
- Before viewing 3D images, make sure to read the manuals provided with your 3D glasses and 3D compatible content.
- Avoid viewing 3D images for a long period of time. Take a break of 15 minutes or longer after every hour of viewing.
- If you feel sick while viewing 3D images, stop viewing them. If you continue to feel sick, consult a
 doctor.
- When viewing 3D images in a room where an LED lighting system or fluorescent lights are used, you may feel that the light in the room flickers. If this is the case, dim the lights until you do not notice any flickers, or turn off the lights.

- If you or any member of your family has a history of light-sensitive seizures, consult a doctor before viewing 3D images.
- To view 3D images, sit in front of the screen so that your eyes are parallel and level with the screen.
- Viewing 3D images from a place that is too close to the screen may result in eye strain. The distance between the screen and you should be at least three times the height of the screen.
- Adult supervision is required for children using 3D glasses.
- Viewing 3D images is not recommended for children under 6 years old. It may negatively affect development of their vision. Consult a doctor before using 3D glasses.

Manuals Provided with the Projector

Read this manual carefully before you use the projector.

Refer to the manuals that are relevant to what you want to do with the projector.



- The manuals are provided in various formats.
- Adobe® Acrobat® must be installed in order to view the manuals as PDF files.

Read This First

Provides information about safe usage of the projector.

To avoid injury and prevent damage to the projector, be sure to read the section of this manual entitled Safety Information.

Ultra Short Throw Projector Setting Guide

Provides basic information about how to install the projector.

Start Guide

Provides basic information about how to install the projector and how to project images. The contents of this manual are a summary of Operating Instructions.

Start Guide (Interactive Function) (RICOH PJ WX4152NI only)

Provides an overview of the interactive function and the setup procedure to use it. The contents of this manual are a summary of Operating Instructions.

Operating Instructions

Provides information about how to install the projector, how to project images using the projector, and how to configure the projector. It also provides information about troubleshooting and maintenance.

Operating Instructions (Interactive Function) (RICOH PJ WX4152NI only)

Provides information about how to use RICOH PJ Interactive Software.



- The CD-ROM includes only the English manual. For other languages, download the latest version from the website.
- The following software products are referred to using general names:

Product name	General name
RICOH JPEG Conversion Tool Type A	JPEG Conversion Tool

How to Read This Manual

Symbols

This manual uses the following symbols:



Indicates points to pay attention to when using the projector.



Indicates supplementary explanations of the projector's functions, and instructions on resolving user errors.

[]

Indicates the names of buttons on the control panel and remote control. It also indicates items displayed on the menu screens.

Region A (mainly Europe and Asia)

Region B (mainly North America)

Differences in the functions of Region A and Region B models are indicated by two symbols. Read the information indicated by the symbol that corresponds to the region of the model you are using. For details about which symbol corresponds to the model you are using, see page 10 "Model-Specific Information".

Notes

Contents of this manual are subject to change without prior notice.

Two kinds of size notation are employed in this manual.

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Depending on which country you are in, certain units may be optional. For details, please contact your local dealer.

Model-Specific Information

This section explains how you can identify the region your projector belongs to.

There is a label on the rear of the projector, located in the position shown below. The label contains details that identify the region your projector belongs to. Read the label.



CZE143

The following information is region-specific. Read the information under the symbol that corresponds to the region of your projector.

Region A (mainly Europe and Asia)

If the label contains the following, your projector is a region A model:

- CODE XXXX -27
- Region B (mainly North America)

If the label contains the following, your projector is a region B model:

• CODE XXXX -17



 Dimensions in this manual are given in two units of measure: metric and inch. If your projector is a Region A model, refer to the metric units. If your projector is a Region B model, refer to the inch units.

1. Preparations for Using the Projector

This chapter explains the names and functions of the different parts of the projector and remote control, and how to use them. It also explains how to position the projector and how to connect it to other equipment.

Precautions for Using the Projector

WARNING

- If metal objects, or water or other fluids fall inside this machine, you must turn off its power
 immediately. After turning off the power, be sure to disconnect the power cord plug from the wall
 outlet. Then contact your service representative and report the problem. Do not use the machine.
 Doing so could result in fire or electric shock.
- Do not use any power sources other than those that match the specifications shown in this manual. Doing so could result in fire or electric shock.
- The supplied power cord is for use with this machine only. Do not use it with other appliances. Doing so could result in fire or electric shock.
- It is dangerous to handle the power cord plug with wet hands. Doing so could result in electric shock.
- Do not place the power cord and connection cable in front of the lens or exhaust vents when the product is turned on. Doing so may result in fire.
- Be sure to locate the machine as close as possible to a wall outlet. This will allow easy
 disconnection of the power cord in the event of an emergency.
- Do not look into the projection window or vent when the machine is on. The bright light may
 damage your eyes. Be especially careful in an environment with children.
- Do not use flammable sprays or solvents in the vicinity of this machine. Also, avoid placing these items in the vicinity of this machine. Doing so could result in fire or electric shock.

ACAUTION

- Do not place low heat resistant material near the exhaust vents. Hot air may come from the
 exhaust vents, resulting in damage to the machine or an accident.
- Do not place the power cord and connection cable in a way that might cause someone to trip and fall. The machine might fall over and cause an injury.

CAUTION

- Push the power plug all the way into the power outlet. Do not use a power outlet with a loose
 connection. Doing so may result in heat buildup. Plug the power cord in the correct direction
 into the base. If they are not plugged in correctly, it could result in smoke, fire, or electric shock.
- When disconnecting the power cord from the wall outlet, always pull the plug, not the cord.
 Pulling the cord can damage the power cord. Use of damaged power cords could result in fire or electric shock.
- Do not block the projection light when it is on. If you do so, the part that is blocking the
 projection light may get quite hot and deform, deteriorate or cause a burn or fire. The reflected
 light may make the projection window hot and cause a machine failure. To temporarily
 suspend projection, select the AV mute function. To suspend longer, turn off the machine.
- Do not increase the volume unless you are listening while increasing the volume. Also, lower
 the volume before turning off the power, because a loud sound may be emitted when the
 power is turned on and cause hearing damage.
- Do not tilt the machine horizontally more than ±20 degrees. Doing so may cause the entrance of foreign objects in the housing of the machine which could result in fire or electric shock.
- Power Source
 - Region A (mainly Europe and Asia)
 220–240 V, 1.7 A or more, 50/60Hz
 - Region B (mainly North America)

120 V, 3.7 A or more, 60Hz

Please be sure to connect the power cord to a power source as above.

Main Functions

The projector features the following functions that you can use.

Tabletop projection

This projector can project images on a tabletop.

Image eco function

The projector switches the lamp power automatically by detecting the brightness of the image signals. This function is useful for energy saving.

Start on input detection

The projector starts projection automatically if the image signals are input even while in standby.

Auto keystone function

The projector automatically adjusts the shape of the projected image according to the angle at which the projector is positioned.

AV Mute/Freeze

Pressing the [AV Mute] button mutes the sound and blanks the screen. Pressing the [Freeze] button freezes the image temporarily.

Magnify/Zoom

Pressing the [Magnify] button enlarges the projected image. Pressing the [Zoom] button reduces the projected image.

Presentation timer function

Pressing the [Timer] button displays the countdown timer on the projection screen. You can check the elapsed time on the projection screen.

Wall color mode

You can adjust the hue of the image in accordance with the color of the wall on which it is projected.

Password setting/Key lock

You can specify a password for the projector to limit the people that can use it. The buttons on the control panel can be disabled with the key lock setting to prevent misoperation.

Administrator authentication

Enable administrator authentication so that only the administrator can change the security settings. This improves the security of the projector because general users cannot change the settings.

User logo function

The projector can project a registered logo or image when there is no signal or when it is starting up.

Presentations without a computer

The projector can project JPEG and MPEG files stored on a USB memory device or a digital camera.

It is possible to convert PowerPoint materials to JPEG format using JPEG Conversion Tool and then project them using the projector.

QuickProjection

QuickProjection is an application that is provided with the projector and is used for connecting the projector and a computer to project images.

Two modes of projection are available: "Presentation mode" that projects the screen of a single PC, and "Discussion mode" that projects the screens of four PCs at the same time. For details, see Help of QuickProjection.

Miracast

The projector is compatible with Miracast, which allows you to duplicate the screen of your smart device on the projection screen.

Checking the Accessories

The projector is provided with the following accessories. Make sure that everything is included in the package.

If anything is missing or damaged, contact your sales representative or service representative.


- Read This First
- Ultra Short Throw Projector Setting Guide
- Start Guide
- Start Guide (Interactive Function) (RICOH PJ WX4152NI only)
- Remote control
- AAA battery LRO3 × 2
- CD-ROM
- RGB cable
- Power cord
- Warranty card
- Carrying bag
- Computer USB adapter (RICOH PJ WX4152NI only)
- Electronic pen (RICOH PJ WX4152NI only)
- Electronic pen charge cable (RICOH PJ WX4152NI only)
- AAA Ni-MH rechargeable batteries × 1 (RICOH PJ WX4152NI only)



- The bundled accessories may vary depending on the location that this projector was purchased.
- Use only the RGB cable, power cord, electronic pen charge cable, and AAA Ni-MH rechargeable batteries provided with the projector.
- The various applications are on the provided CD-ROM. For instructions about using the applications, see page 53 "How to Use JPEG Conversion Tool", page 73 "How to Use QuickProjection", page 90 "Installing RICOH PJ Interactive Software", and page 163 "Managing the Projector Using Projector Management Utility".

Projector Parts and Their Functions

Control Panel (Top View)

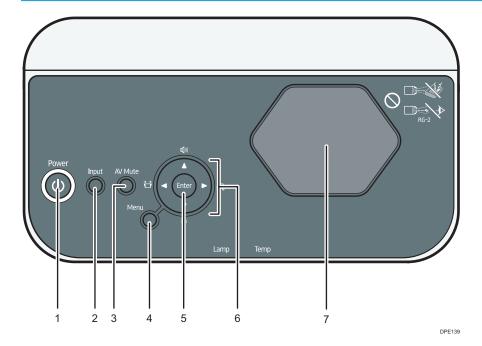

1. [Power] button

Turns the projector on and off. You can confirm the status of the projector with the indicator.

- On: Power is on.
- Off: Power is off.
- Flashing at long intervals: Standby.
- Flashing at short intervals: Starting up or cooling.

2. [Input] button

Switches the signal input. For details about how to switch the input signal, see page 36 "Projecting an Image".

3. [AV Mute] button

Temporarily blanks the screen and mutes the audio

4. [Menu] button

Displays the menu screen. Press it again to close the menu screen.

5. [Enter] button

Enters the selected item or mode.

1

6. Arrow buttons

The $[\P]$ and $[\P]$ buttons are used to adjust the keystone distortion. The $[\P]$ and $[\P]$ buttons are used to adjust the volume. These buttons are also used to operate the menu screen and the value bar.

7. Projection window

Enlarges and projects the image.




• The top of the projector is covered with a protective film when it is shipped. Remove the film before using the projector.

Front and Left-Side View

CAUTION

 Do not obstruct the machine's vents. Doing so risks fire caused by overheated internal components.

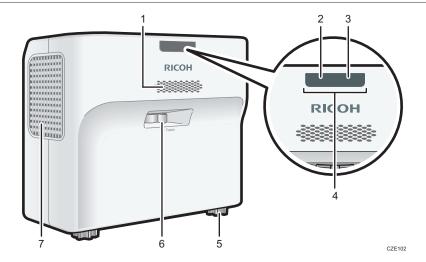

1. Speaker

Outputs the audio input from an external device.

2. Lamp indicator

Shows the status of the lamp. For details, see page 143 "Indicator Display List".

3. Temp indicator

Shows the status of the temperature inside the projector. For details, see page 143 "Indicator Display List".

4. Remote control receiver

Receives the signal from the remote control.

5. Adjustable feet

Adjusts the angle of the projection.

6. Focus lever

Adjusts the focus of the image.


7. Exhaust vents

Releases hot air from inside the projector.

Rear and Right-Side View



 Do not obstruct the machine's vents. Doing so risks fire caused by overheated internal components.

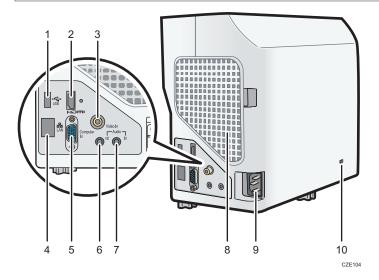

1. USB port

For connecting a USB memory device or USB device cable.

2. HDMI port

For inputting HDMI signals from a computer or video player.

3. Video In port

For inputting image signals from a video player.

4. LAN port

For connecting an Ethernet cable.

5. Computer In port (Y/Pb/Pr)

For inputting RGB signals from a computer or component image signals (Y/Pb/Pr) from a video player.

6. Audio Out port

For outputting audio signals to an external speaker.

7. Audio In port

For inputting audio signals from a computer or video player.

8. Intake vents

For circulating air from the outside to cool the projector.


9. AC In socket

For connecting the power cord set provided with the projector.

10. Security slot (Kensington slot)

For connecting an anti-theft cable.

Bottom View

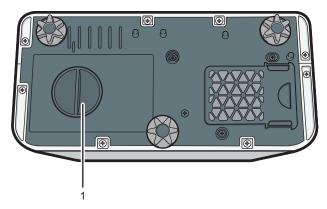



CZE105

1. Lamp cover

Remove to replace the lamp.

Remote Control Parts and Their Functions

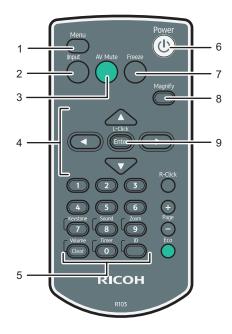

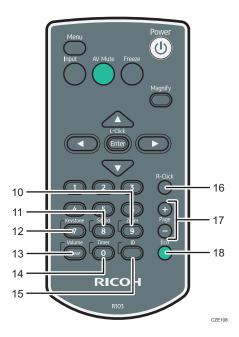

1. [Menu] button

Displays the menu screen. Press it again to close the menu screen.

2. [Input] button

Switches the signal input. For details about how to switch the input signal, see page 36 "Projecting an Image".

3. [AV Mute] button

Temporarily blanks the screen and mutes the audio. For details, see page 45 "Temporarily Blanking the Image and Muting the Audio".

4. Arrow buttons

Used to operate the menu screen and the value bar.

5. Number buttons

Used to enter numbers.

6. [Power] button

Turns the projector on and off.

7. [Freeze] button

Temporarily freezes the image. For details, see page 45 "Freezing the Image".

8. [Magnify] button

Displays the magnification ratio bar. Press it, and then specify the magnification ratio using the [◀] and [▶] buttons. For details, page 44 "Enlarging the Image".

9. [Enter] button

Enters the selected item or mode.

10. [Zoom] button

Displays the digital zoom bar. Press it, and then adjust the size of the projected image using the [◀] and [▶] buttons. For details, see page 41 "Reducing the Size of the Projected Image".

11. [Sound] button

Displays the sound quality selection screen. Press it, and then select the sound quality using the [◀] and [▶] buttons. For details, see page 43 "Switching the Sound Quality".

12. [Keystone] button

Displays the keystone adjustment bar. Press it, and then adjust the keystone distortion using the [\P] and [\P] buttons. For details, page 40 "Adjusting for Keystone Distortion".

13. [Volume] button

Displays the volume control bar. Press it, and then adjust the volume of the speaker using the [▲] and [▼] buttons. For details, see page 43 "Adjusting the Volume of the Speaker".

14. [Timer] button

Displays the presentation timer. For details, see page 46 "Using the Presentation Timer".

15. [ID] button

Registers the remote control ID. For details, see page 24 "Operating Multiple Projectors with the Remote Control".

16. [R-Click] button

This button is not used.

17. [Page] buttons

Changes the image while projecting images from a USB device or a server. Press [+] to go to the next page. Press [-] to go to the previous page.

18. [Eco] button

Switches the lamp power level. For details, see page 45 "Switching the Lamp Mode".

How to Use the Remote Control

You can use the remote control to turn the projector on and off, and to change the signal of the image being input and projected. You can also enlarge or reduce the image and mute the audio.



- Note the following precautions when using the remote control:
 - Do not drop or hit the remote control.
 - Do not place the remote control in a place that is very hot or very humid.
 - Do not get the remote control wet. Also, do not place it on anything that is wet.

Effective Range of the Remote Control

Point the remote control at the remote control receiver on the projector to use it.

The effective range of the remote control is about 4.5 meters (14.7 feet) from the receiver and at an angle of about 15 degrees to the remote control receiver on the projector.



- The remote control may not be effective in some areas and in some conditions. If this happens, point the remote control at the projector and try it again.
- The remote control may not work if the remote control receiver on the projector is exposed to sunlight, fluorescent light, or strong light.


П

Loading Batteries into the Remote Control

MARNING

- For safe operation, follow the warnings below regarding the batteries. If you use the batteries incorrectly, it may result in fire or injury due to batteries leaking or exploding.
 - Do not use batteries other than the ones specified.
 - Do not mix and use batteries that are different types or that are new and old.
 - Correctly insert batteries according to the polarity (+/-).
 - Do not charge non-rechargeable batteries.
 - Do not heat or throw the batteries into fire or water.
 - Do not connect the positive and negative terminals on a battery with a wire.
 - Remove the batteries that are past their suggested use period or that are depleted.
 - Remove the batteries when they will not be used for extended periods.
 - Keep the batteries out of the reach of children. Children may swallow or choke on the batteries. If this happens, contact a doctor immediately.

Loading batteries

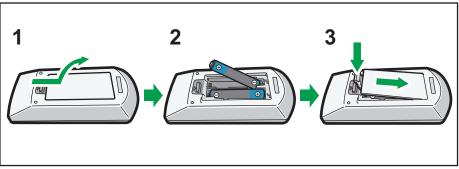

CUD092

- 1. Remove the battery cover from the remote control.
- 2. Insert the batteries.


Note the direction of the positive and negative terminals when inserting the batteries.

3. Close the battery cover.



 Replace the batteries if the remote control does not work or if the effective distance becomes too narrow.

Removing batteries

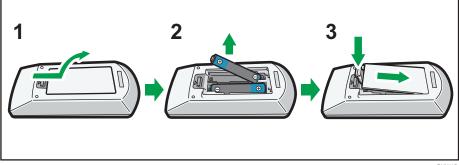

- 1. Remove the battery cover from the remote control.
- 2. Remove the batteries.
- 3. Close the battery cover.

Inputting Text

Use the keyboard that is displayed on screen to input text on the setting screen.

- 1. Select a character using the [▲], [▼], [◄], and [▶] buttons. The selected character is highlighted in orange.
- 2. Press the [Enter] button.

The selected character appears in the text area.

- 3. After inputting all the characters, select [OK].
- 4. Press the [Enter] button.



• You can also use the number buttons on the remote control to input numbers.

Operating Multiple Projectors with the Remote Control

You can operate multiple projectors with a single remote control. It is possible to operate a maximum of four projectors. To operate the projector with the remote control, you must assign the same ID number to the projector and remote control. Projectors that can be operated by the remote control supplied with this projector are RICOH PJ WX4152/WX4152N/WX4152NI.

Use the following procedure to assign the same ID number to the projector and the remote control.

Assigning an ID number to the projector

To operate multiple projectors with a single remote control, assign a different ID number to each projector. Use the buttons on the control panel to perform the following procedure.

- 1. Press the [Menu] button.
- 2. Select [Default Settings 2], and then press the [*] button.
- 3. Select [Remote Control ID], and then press the [Enter] button.
- 4. Select the ID number to assign to the projector, and then press the [Enter] button.



- 5. Select [OK] on the confirmation screen, and then press the [Enter] button.
- 6. Press the [Menu] button to close the menu screen.

Changing the remote control's ID number

You can switch the ID number of the remote control to match the ID number of a projector. You can check the ID numbers of projectors in [Remote Control ID] in [Default Settings 2].

1. Press and hold the [ID] button, and then press the number button that is the ID number of the projector you want to operate for at least three seconds.



After the ID number of the remote control is switched, you can operate the projector with the remote control.

Positioning the Projector

When positioning the projector, place it so that the projector's rear side faces the screen. Make sure the projector and the screen are parallel to each other.

Adjust the distance between the projector and the screen according to the size of the projected image. For details, see page 29 "Relationship Between the Projection Distance and the Screen Size".

Projection Mode




MARNING

• If a machine is incorrectly installed on a wall or ceiling, it may fall down and cause an injury. Contact your sales or service representative if you want to install a machine on a wall or ceiling.

You can position the projector in one of five ways.

Select the setting according to the position of the projector in [Projection Mode] under [Default Settings 2]. For details, see page 120 "Default Settings 2 Menu".

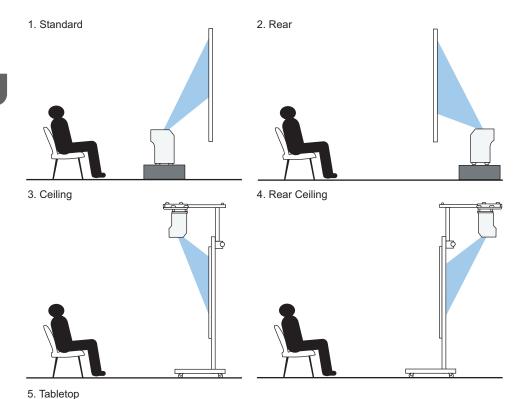



DPE014

1. Standard

The projector is placed in front of a screen onto which the images are projected.

2 Reg

The projector is placed behind a screen onto which the images are projected.

3. Ceiling

The projector is mounted on the ceiling in front of a screen onto which the images are projected.

4. Rear Ceiling

The projector is mounted on the ceiling behind a screen onto which the images are projected.

Tabletop

The projector is placed in such a way to use the top surface of a table as the screen, and project the image on the tabletop.




• Projection on the ceiling is not supported.

Relationship Between the Projection Distance and the Screen Size

The size of the projected image varies according to the distance from the projector to the screen.

Refer to the following table to position the projector in a suitable position. The projection screen sizes presented in the table are for a full size image without keystone adjustment.

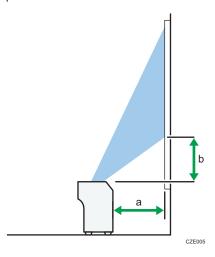

Projection screen size	Projection distance (a)	Projection height (b)
48 inches	12 cm (4.6 inches)	9 cm (3.6 inches)
60 inches	17 cm (6.5 inches)	12 cm (4.5 inches)
80 inches	25 cm (9.8 inches)	16 cm (6.1 inches)

Connecting Equipment to the Projector

ACAUTION

• Do not place the power cord and connection cable in a way that might cause someone to trip and fall. The machine might fall over and cause an injury.

Various equipments can be connected to the projector.

Turn off the power to any equipment before connecting it to the projector. Be sure to read the manual for the applicable equipment before connecting it to the projector.


Connecting a Computer



Some computers cannot be connected to the projector. Before connecting a computer to the
projector, check the output terminals and signal compatibility.

Connecting to the RGB out port

Connect an RGB cable to the Computer In port of the projector and to the RGB out port of a computer. To output audio from the speaker on the projector, connect an audio cable to the Audio In port of the projector and to the audio out port of a computer.

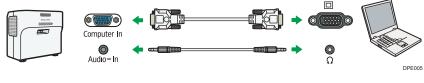



• Use the RGB cable provided with the projector.


Connecting to the HDMI port

Connect an HDMI cable to the HDMI ports of the projector and the computer.



Connecting to the DVI out port


To input a DVI signal to the projector, connect a DVI-to-HDMI cable to the HDMI port of the projector and to the DVI out port of a computer. To output audio from the speaker on the projector, connect an audio cable to the Audio In port of the projector and to the audio out port of a computer.

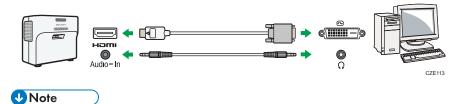

• You can use a DVI-to-HDMI conversion adapter instead of a DVI-to-HDMI cable.

Connecting via a network using a wired LAN

Connect an Ethernet cable to the LAN port of the projector and to a network device such as a hub. For details about how to connect an Ethernet cable, see page 63 "Connecting an Ethernet Cable". To use the projector via a network, you must specify settings such as the IP address. For details, see page 66 "Connecting the Projector to a Network".

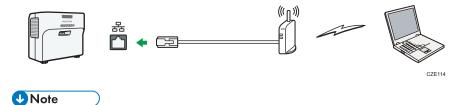

• Use an Ethernet cable that is shielded.

Connecting via a network using a wireless LAN

The projector is equipped with a wireless connectivity function. Before using a wireless LAN, see page 64 "Precautions for Using a Wireless LAN". To use the projector via a network, you must specify settings such as the IP address. For details, see page 66 "Connecting the Projector to a Network".



31

Connecting AV Equipment

Use a cable that supports the signal being input when connecting AV equipment.

Connecting to the HDMI port

Connect an HDMI cable to the HDMI ports of the projector and the AV equipment.



- Some devices may not operate properly when connected using HDMI.
- Use only an HDMI cable that has the HDMI logo. To input 1080p image signals, use a high-speed HDMI cable. A conventional HDMI cable may not work properly.

Connecting to the video out port

Connect a video cable to the Video In port of the projector and to the video out port of AV equipment. To output audio from the speaker on the projector, connect an audio cable to the Audio In port of the projector and to the audio out port of AV equipment.



Connecting to the Y/Pb/Pr out port

Connect a D-sub to component video cable to the Computer In port of the projector and to the Y/Pb/Pr out port of the AV equipment. To output audio from the speaker on the projector, connect an audio cable to the Audio In port of the projector and to the audio out port of AV equipment.



1

Connecting an External Speaker

You can output the audio signal to an external speaker. To connect an external speaker, connect an audio cable to the Audio Out port of the projector and the audio in port of an external speaker.



- There is no sound output from the projector's speaker when an external speaker is connected.
- You can adjust the sound output from the external speaker by using the [Volume] button.

2. Projecting an Image

This chapter explains the procedure for projecting an image.


Basic Operations for Using the Projector



- If [Key Lock] in [Default Settings 2] is specified as [On], you cannot operate the projector from its control panel. Use the remote control.
- If you press a button that is disabled, the projector beeps and the "Invalid operation." or "This function cannot be used on this product." message appears on the screen.
- If [Beep] in [Default Settings 1] is specified as [Off], the projector does not beep.

Turning On the Projector

1. Insert the connector of the power cord set into the AC In socket on the projector.

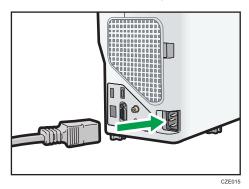

2. Insert the power plug into a power outlet.

When [Direct Power On] in [Default Settings 2] is specified as [On], the projector turns on in this step.

3. Press the [Power] button.

Power



The projector beeps and the indicator flashes blue.

The start-up screen is displayed.

To project an image from the connected equipment, see page 36 "Projecting an Image".

When the projector is turned on for the first time after it is purchased, the start menu appears. Specify the display language, lamp power level, and network settings. For details, see page 36 "When the start menu is displayed".



- The password input screen is displayed if a password for the projector is specified in [Startup Password] under [Default Settings 2]. Enter a password.
- The start-up screen closes shortly after appearing. You can specify that the start-up screen not appear in [Start-up Screen] under [Default Settings 1].

When the start menu is displayed

When the projector is turned on for the first time after it is purchased, specify the display language, lamp power level, and network settings.

- 1. Select the display language, and then press the [Enter] button.
- 2. Select the lamp power level, and then press the [Enter] button.
- 3. Specify the network settings on Network Setting Wizard.

To skip the network settings, select [Cancel]. For details about how to use Network Setting Wizard, see page 66 "Connecting the Projector to a Network".



- The display language can also be changed in the menu screen. For details, see page 120 "Default Settings 2 Menu".
- The lamp power level can also be changed using the remote control. For details, see page 45 "Switching the Lamp Mode".
- You can also open Network Setting Wizard in the menu screen. For details, see page 67
 "Opening Network Setting Wizard".
- The start menu is only displayed the first time the projector is used. However, the start menu is displayed after [Reset All] in [Default Settings 2] is executed.

Projecting an Image

1. Turn on the equipment that is connected to the projector.

To project the image of an AV equipment, press the play button on the AV equipment.

To project a laptop computer's screen, switch the computer's image output. For details, see page 37 "When projecting the screen of a laptop computer".

The input signal is detected automatically and the image is projected.

2. If an image is not projected automatically, press the [Input] button.

3. Select an input signal, and then press the [Enter] button.





- If [Auto Input Search] in [Default Settings 1] is specified as [On], pressing the [Input] button changes the input to one that is different from the image signal being input.
- The standby screen for the network input is displayed if the signal is lost or there is no signal being
 input from the connected equipment. Check that the equipment is turned on and that it is properly
 connected to the projector.
- If the projector does not support the input signal, a "Unsupported signal" message is displayed.
- The brightness of the image may vary temporarily because the lamp may automatically adjust to maintain its condition.

When projecting the screen of a laptop computer

When connecting a laptop computer to the projector, switch the computer's image output.

In Windows operating systems, the image output can be switched with a function key. While pressing and holding the [Fn] key, press the \checkmark key, the \bigcirc key, or the LCD/VGA function key.

Examples of various computers

Computer brand	Key combination
MSI	[Fn] + [F2]
Everex, MITSUBISHI, NEC, Panasonic, SOTEC	[Fn] + [F3]
Gateway, HP	[Fn] + [F4]
acer, SHARP, SOTEC, TOSHIBA	[Fn] + [F5]
HITACHI, IBM, lenovo, SONY	[Fn] + [F7]
ASUS, DELL, EPSON, HITACHI	[Fn] + [F8]
FUJITSU	[Fn] + [F10]



Depending on the computer, the image may not be projected properly if it is displayed on the
computer's LCD display while being projected onto the screen by the projector. If this happens, turn
off the computer's LCD display. For details about switching the display, see the manual provided
with the computer.

Turning Off the Projector



- Unplug the power cord if the projector will not be used for an extended period of time.
- After disconnecting the power cord, wait at least 1 second before connecting the power cord again. Not doing so may result in a malfunction.
- 1. Press the [Power] button.





The confirm screen appears.

2. Press the [Power] button.

The projector beeps and enters the standby mode.

3. Disconnect the power cord.



- After turning the lamp off, wait about five minutes for the lamp to cool before turning the lamp on again. The lamp may not light if it is very hot.
- The projector turns off as soon as the power cord is disconnected (direct power off).
- You can specify the settings for saving energy in standby mode in [Energy Saving Settings]. For details, see page 116 "Energy Saving Settings Menu".


Adjusting the Projected Image

Adjusting the Angle of the Projection

If the height of the projected image does not fit the screen, you can adjust the angle of the projection using the adjustable feet.

- 1. Lift the projector.
- 2. Adjust the length of the adjustable feet.

Adjust the height of the right and left adjustable feet so the projector is level. If the projector is inclined too much, an error occurs and operation cannot be performed.

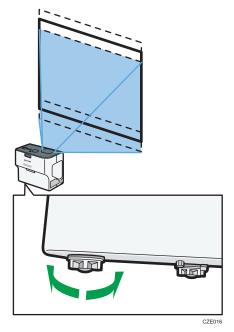


- UNote
 - You do not need to adjust the angle of projection using the adjustable feet if the projector is installed on a wall or ceiling.
 - The projector automatically adjusts the projected image for keystone distortion according to the projection angle. If [Auto Keystone] in [Display/Sound Settings] is specified as [Off], manually adjust for keystone distortion. For details, see page 40 "Adjusting for Keystone Distortion".

Adjusting the Focus

Adjust the focus of the projected image.

1. Move the focus lever to adjust the focus.

The shape of the projected image changes slightly when the focus ring is turned.

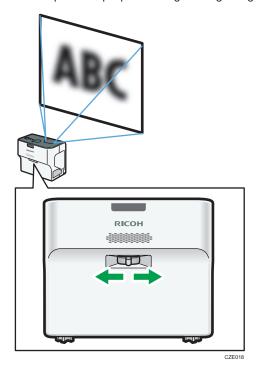

Adjusting for Keystone Distortion

If the projector is placed at an angle, the projected image will be distorted. This is called keystone distortion.

If [Auto Keystone] in [Display/Sound Settings] is specified as [On], the projector automatically adjusts the projected image for keystone distortion according to the projection angle. If this setting is specified as [Off], adjust for keystone distortion using the following procedure.

1. Press the [Keystone] button.



The value bar appears at the bottom of the screen.

2. Adjust the keystone distortion using the [⁴] and [▶] buttons.



Press the [◀] button to decrease the width of the bottom of the projected image. Press the [▶] button to decrease the width of the top of the projected image.



- Some data may be lost or the image quality may be degraded depending on the degree of the keystone adjustment and the type of the image.
- You can manually adjust for keystone distortion even if [Auto Keystone] is specified as [On]. However, if you change the angle of the projector, it is automatically adjusted again.
- The keystone adjustment level stays registered even if the projector is turned off. We recommend that you specify [Auto Keystone] to [Off] if the projector and screen are permanently installed.
- You can also adjust the keystone distortion using the [⁴] and [▶] buttons on the control panel.

Reducing the Size of the Projected Image


If the projected image is larger than the screen, reduce the size of the image using the [Zoom] button. The image can be reduced by 80 to 100% using the digital zoom function.

1. Press the [Zoom] button.



The value bar appears at the bottom of the screen.

2. Adjust the size of the projected image using the [⁴] and [▶] buttons.

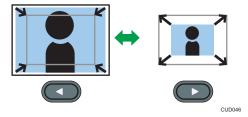

Press the [◀] button to reduce the size of the projected image. Press the [▶] button to enlarge the size of the projected image. The image is enlarged until it reaches the original size.



• The image may sometimes be disrupted while it is reduced.

Operations while Projecting Images

Adjusting the Volume of the Speaker

1. Press the [Volume] button.



The value bar appears at the bottom of the screen.

2. Adjust the volume using the [▲] and [▼] buttons.



Press the [▼] button to decrease the volume. Press the [▲] button to increase the volume.



• You can also adjust the volume of the speaker using the [▲] and [▼] buttons on the control panel.

Switching the Sound Quality

You can select the sound quality of the audio that is playing.

1. Press the [Sound] button.



The sound quality selection screen appears at the bottom of the screen.

- 2. Select the sound quality using the [◀] and [▶] buttons.
 - Standard ((1991): Dialog and music are carefully balanced
 - Narration (This mode is suitable for listening to dialog
 - Music (): This mode is suitable for listening to music



- This function applies to the built-in speaker on the projector only. If you use an external speaker, you cannot change the sound quality with this function.
- The sound quality selection screen also appears when you press the [▲] or [▼] buttons on the
 control panel or [Volume] button on the remote control.

Enlarging the Image


Enlarges and displays a part of the image. The image can be enlarged in a range of 100 to 200%. The enlarged image becomes grainy due to the digital processing.

1. Press the [Magnify] button.



The value bar appears at the bottom of the screen.

2. Adjust the magnification ratio using the [◀] and [▶] buttons.

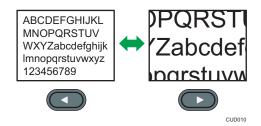

Press the [◀] button to decrease the magnification ratio. Press the [▶] button to increase the magnification ratio.

- 3. Press the [Enter] button.
- 4. Move the display position using the [♠], [♥], [♠], and [♠] buttons.



To change the magnification ratio, press the [Enter] button, and then repeat Step 2.

5. To cancel this function, press the [Magnify] button again.



• The Magnify function is canceled automatically if any operation is performed.

Temporarily Blanking the Image and Muting the Audio

Temporarily blanks the screen and mutes the audio.

This is useful when projecting images from another projector or an OHP.

1. Press the [AV Mute] button.



The image blanks and the audio mutes.

2. To cancel this function, press the [AV Mute] button again.



- An icon (appears on the screen when AV mute is used.
- The AV mute function is canceled automatically if any button on the control panel is pressed.
- You can also use the [AV Mute] button on the projector's control panel.

Freezing the Image

Freezes the video or moving image that is being projected.

1. Press the [Freeze] button.



The image freezes.

2. To unfreeze the image, press the [Freeze] button again.



- An icon () appears on the screen when freeze is used.
- The Freeze function is canceled automatically if any operation is performed.
- The Freeze function is for freezing the image projected on the screen. To pause the video of the connected equipment, use the pause function of the connected equipment.

Switching the Lamp Mode

You can switch the lamp mode. To save energy, select the eco mode. To make images brighter, select the standard mode.

1. Press the [Eco] button.



The mode changes each time the button is pressed.



- You can also change the lamp settings with [Energy Saving Settings]. For details, see page 116
 "Energy Saving Settings Menu".
- The image may flicker, depending on the characteristics of the lamp, when you select the eco
 mode. If this happens, select the standard mode.

Using the Presentation Timer

Displays the timer on the projection screen. This function is useful for time management when you are giving a presentation.

1. Press the [Timer] button.



2. Specify the time period from 1 to 99 minutes using the number buttons.

You can also use the $[^{\blacktriangle}]$ and $[^{\blacktriangledown}]$ buttons to specify the time period.

- Select [Display Size] using the [◄] and [►] buttons, and then select [Large] or [Small] using the [▲] and [▼] buttons.
- Select [Display Position] using the [⁴] and [▶] buttons, and then select from the four corners and the center using the [♣] and [▼] buttons.
- 5. Select [Start] using the [◄] and [►] buttons, and then press the [Enter] button.
 To stop the countdown, press the [Timer] button, and then select [OK] on the confirmation screen.
 After the time countdown is finished, a message appears and the projector beeps.



• The projector does not beep if [Beep] in [Default Settings 1] is specified as [Off].

3. Projecting Images from a USB Memory Device or Digital Camera

This chapter explains how to project images from a USB memory device or digital camera.

Requirements for Projecting Images from a USB Device



- It is recommended to back up the data saved to a USB device before using it. The manufacturer is not responsible for any damage due to the loss of data.
- Do not disconnect the power plug while the USB device is being accessed. Doing so may cause malfunction or data loss.
- The USB devices must support USB 2.0.
- The projector supports FAT16 or FAT32 format USB devices. Other forms of USB device are not compatible.

The projector can project still images and videos stored on a USB memory device or a digital camera. The following still images and videos are supported by the projector:

Still images

ltem	Requirements
File extensions	jpg, jpeg, JPG, JPEG
File size	Less than 10 MB
Number of pixels	2 × 2 to 5120 × 5120 pixels
JPEG format	Baseline format

Videos

ltem	Requirements
File extensions	mpg, mpeg, MPG, MPEG, m2ts, m2t, M2TS, M2T, m2p, M2P, mp4, MP4, mov, MOV
File size	Less than 2 GB (FAT16) or 4 GB (FAT32)
Number of pixels	320 × 240 to 1920 × 1080 pixels

ltem	Requirements
Video compression format	 MPEG2 when the container format is MPEG2-PS or MPEG2-TS H.264 when the container format is MP4 or QuickTime
Audio compression format	MPEG1/2-Audio Layer2 when the container format is MPEG2-PS or MPEG2-TS
	Linear PCM when the container format is MPEG2-PS or QuickTime
	AAC-LC when the container format is MP4 or QuickTime
Container format	MPEG2-PS, MPEG2-TS, MP4, QuickTime
Frame rate	Less than 30 fps
Bit rate	Less than 20 Mbps (recommended)



- The maximum number of files that can be displayed in the list is 512 per folder.
- Characters that can be used for file names and folder names are single-byte letters and numbers
 and characters used in the language specified in [Language] under [Default Settings 2]. If
 characters for languages other than the language specified are used, the file name or folder name
 will not be displayed properly.
- If the total number of characters in the file name and the path exceeds 255, the file cannot appear on the list.
- Data in a folder that is stored six levels or more into a hierarchy cannot be accessed.
- The projector may not be able to project a file whose compression ratio is low.
- For information about which digital cameras can be used with the projector, contact your sales representative or service representative.

How to Project Images from USB Memory Device

For basic operations, such as how to turn on the projector or adjust the focus, see page 35 "Projecting an Image".


Connecting the USB Device

Connect the USB memory device or digital camera to the projector.

The USB device can be connected even if the projector is already on.

1. Connect the USB device to the USB port on the projector.

Check the port orientation before connecting.

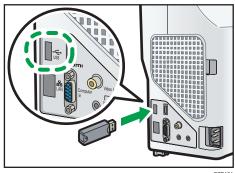

CZE12



- If the projector does not recognize the USB device when it is connected, disconnect and reconnect the USB device.
- USB hubs cannot be connected.
- If [Auto Start Slideshow] in [USB Settings] is specified as [On], the slide show starts automatically with the files in the root directory as soon as the USB device is connected.

Projecting Images from a USB Memory Device

Connect the USB memory device or digital camera to the projector. For details, see page 49 "Connecting the USB Device".

ರ

1. If [USB Memory] is not selected as the input signal, press the [Input] button.



2. Switch the input signal to [USB Memory].

For details about how to switch the input signal, see page 36 "Projecting an Image".

The files within the root directory are displayed.

3. Select the file, [Slideshow], or folder, and then press the [Enter] button.



When a file is selected

If you select a JPEG file, its image is projected. If you select an MPEG file or Quick time file, the video plays.

• When [Slideshow] is selected

A slide show starts with the files in the current folder.

When a folder is selected
 The file list within the folder is displayed. Repeat Step 3 until the file you want to project is displayed.



- You can also control the projected images using the control panel on the projector.
- Images are displayed in the numerical and alphabetical order of their file name headers.
- You can specify the slide show switching interval for still images in [Display Interval (sec.)] under [USB Settings].
- If a video file is in a folder that has been selected for a slide show, the entire video plays. When the video finishes, the next file is displayed.
- You can switch the display format of the file list. Select [To Thumbnail] to switch to thumbnail display, or select [To List Display] to switch to file name list display.

Controlling the Projected Image

Use the remote control to control a projected still image or video.

How to control a still image

- [Enter] button: Starts the slide show from the projected image. Stops the slide show that is in progress.
- [*] button: Displays the next image.
- [◀] button: Displays the previous image.
- [4] button: Rotates the image 90° to the right.
- [♥] button: Rotates the image 90° to the left.
- [Menu] button: Returns to the [USB File Projection] screen.

How to control a video

- [Enter] button: Pauses or restarts the video.
- [*] button: Fast forwards the video. If a video is paused, displays the next image.
- [4] button: Rewinds the video. If a video is paused, displays the previous image.
- [A] button: Increases the volume.
- [▼] button: Decreases the volume.
- [Menu] button: Returns to the [USB File Projection] screen.



- You can also control the projected videos from the control panel on the projector.
- The rewind and fast forward speed increases three levels each time the button is pressed. To reduce the speed to its original, press the [Enter] button.
- If any operation except for volume adjustment is performed during the slide show, the slide show stops.

Disconnecting the USB Device


1. Press the [Menu] button if an image is projected.

The [USB File Projection] screen is displayed.

2. Select [Remove USB Mem.] on the [USB File Projection] screen, and then press the [Enter] button.

The confirmation screen is displayed.

- 3. Select [OK], and then press the [Enter] button.
- 4. Disconnect the USB device.

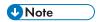

• A USB device can also be disconnected by selecting [Remove USB Mem.] in [USB Settings].

Converting Presentation Files to JPEG Files Using JPEG Conversion Tool

Microsoft PowerPoint presentation files can be converted to JPEG files, which are compatible with the projector.

You can do presentations without a computer if you save converted JPEG files to a USB memory device and then display the slides using the projector.

The converted files can also be transferred to a server.

How to Use JPEG Conversion Tool

JPEG Conversion Tool is included on the supplied CD-ROM.

JPEG Conversion Tool operating environment is described below.

- Supported operating system
 - Windows Vista Ultimate, Business, Home Premium, Home Basic, SP2 or later (32-bit and 64-bit versions)
 - Windows 7 Home Premium, Professional, Ultimate, Enterprise, SP1 (32-bit and 64-bit versions)
 - Windows 8, Pro, Enterprise (32-bit and 64-bit versions)
 - Windows 8.1, Pro, Enterprise (32-bit and 64-bit versions)
 - Windows 10 Home, Pro, Enterprise, Education (32-bit and 64-bit versions)
- 1. Insert the CD-ROM in the CD-ROM drive of your computer.

The launcher screen appears.

- 2. Specify a language and model name, and then click [Select].
- 3. Click [JPEG Conversion Tool Type A].
- 4. Specify a destination to save the application.

The "RICOH JPEG Conversion Tool Type A" folder is copied to the computer.

- 5. To create a shortcut icon on the desktop, click [OK].
- 6. Close the screen.

To start JPEG Conversion Tool, double-click the shortcut icon on the desktop or "RICOH JPEG Conversion Tool TypeA.exe" in the folder.



- You can also use JPEG Conversion Tool by dragging and dropping the "RICOH JPEG Conversion Tool Type A" folder that is on the provided CD-ROM to the computer. JPEG Conversion Tool is copied to the computer.
- To delete JPEG Conversion Tool, delete the JPEG Conversion Tool folder that was copied to the computer.

Converting Presentation Files to JPEG Files

1. Double-click the "JPEG Conversion Tool" icon.

JPEG Conversion Tool starts.

Drag and drop the PowerPoint file to be converted into the "JPEG Conversion Tool" dialog box.

To manually specify the file, enter the file name in [File Location:].

3. Select the resolution of the converted file in the [Resolution] drop-down list.

If the resolution of the file and that of the projector match, the image quality is better. We recommend selecting [WXGA (1280 x 800 pixels)].

- 4. To maintain the aspect ratio of the original file, select [Maintain Aspect Ratio of Conversion Source Image].
- 5. Specify the destination to which you want to save the converted file.

To save to a computer, select [Local PC], and then specify where to save the file.

To save to a server, select [Server], and then select the server to which you want to save the file.

- 6. Click [Convert&Save].
- 7. Click [OK].



- To convert PowerPoint files, Microsoft PowerPoint 2007, 2010, or 2013 must be installed on the computer to you are using.
- JPEG Conversion Tool is compatible with still images that have a ".ppt" or ".pptx" extension.
 Animations and audio are not compatible.
- The number of JPEG files created is equivalent to the number of slides. The file name after conversion is "slide + File Number + .jpg".
- For the settings method when saving converted files to the server, refer to the JPEG Conversion Tool Help.

4. Useful Functions

This chapter describes the useful functions of the projector.

Projecting Images in a Slide Show

Projecting a Slide Show at a Specified Time

You can project a slide show of files on a USB device at a specified time.

This function is useful if you want to use the projector to decorate a shop window with projected images according to the shop's business hours, for example.

Specify the following two settings to use this function:

- Power Timer
 - Use this setting to specify the day and time to project a slide show.
- Auto Start Slideshow
 - Enable this setting to automatically start the slide show with the files in the USB device.


This section explains how to set the projector to project the slide show with the files in the USB device automatically from 9:00 to 18:00 every Sunday as an example.



 To use Power Timer, you must set the current time. For details, see page 120 "Default Settings 2 Menu".

Specifying Power Timer


1. Press the [Menu] button.

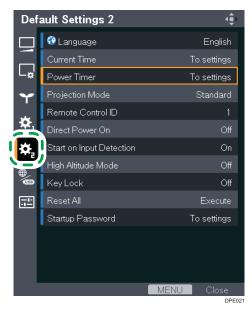

- 3. Select [Power Timer], and then press the [Enter] button.
- 4. Select [Timer Projection], and then press the [Enter] button.
- 5. Select [On], and then press the [Enter] button.



- 6. Select [Projection Day], and then press the [Enter] button.
- Select a day to project the slide show (Sunday in this example), and then press the [Enter] button.

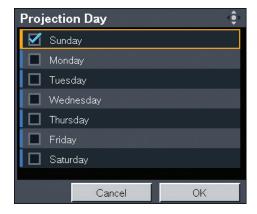

- 8. Select [OK], and then press the [Enter] button.
- 9. Select [Projection Time], and then press the [Enter] button.
- 10. Specify the startup time (for example: 9:00) using the number buttons.

You can also use the [▲] and [▼] buttons to specify the startup time.

11. Specify the end time (for example: 18:00) using the number buttons.


You can also use the [▲] and [▼] buttons to specify the end time.



- 12. Press the [Enter] button.
- 13. Press the [Menu] button twice to close the menu screen.

Enabling Auto Start Slideshow

- 1. Press the [Menu] button.
- 2. Select [Network/USB Settings], and then press the [▶] button.

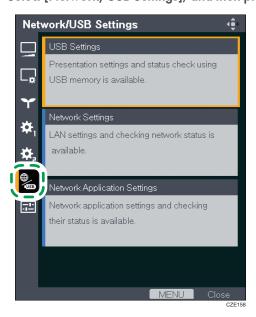

- 3. Select [USB Settings], and then press the [Enter] button.
- 4. Select [Settings], and then press the [▶] button.
- 5. Select [Auto Start Slideshow], and then press the [Enter] button.




- 7. Press the [Menu] button.
- 8. Select [Reflect], and then press the [Enter] button.
- 9. Press the [Menu] button to close the menu screen.

Connecting a USB device on which files to be projected are stored

- 1. Save the files to be projected in the root directory of the USB device.
- 2. Connect the USB device to the USB port on the projector.

Check the port orientation before connecting.

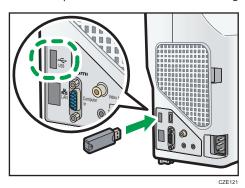

3. Press the [Power] button.

Power



The confirmation screen appears.

4. Press the [Power] button.

The projector beeps and enters the standby mode.

4





- For details about the USB devices and files supported by the projector, see page 47 "Requirements for Projecting Images from a USB Device".
- Do not disconnect the power cord when using the power timer function. The projector cannot start if the power cord is disconnected.

Customizing a Slide Show

You can customize the display effect and display interval for a slide show. These functions are useful for decorating shop windows more effectively.

Changing the display effect for a slide show

You can change the display effect for switching images. The available display effects are the following:

Push

The current image is pushed off by the next image.



Wipe

The current image is wiped off by the next image.




Fade

The current image fades out and the next image fades in.




1. Press the [Menu] button.



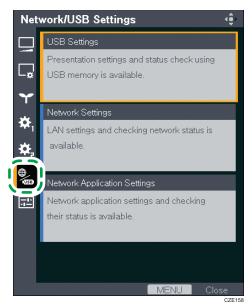

- 2. Select [USB Settings], and then press the [Enter] button.
- 3. Select [Settings], and then press the [▶] button.
- 4. Select [Display Effect], and then press the [Enter] button.
- 5. Select a display effect, and then press the [Enter] button.

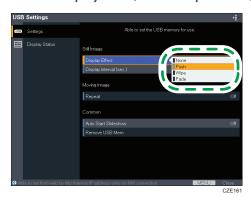


- 6. Press the [Menu] button.
- 7. Select [Reflect], and then press the [Enter] button.
- 8. Press the [Menu] button to close the menu screen.

Adjusting the slide show switching interval

You can adjust the slide show switching interval from 5 to 999 seconds.

- 1. Press the [Menu] button.
- 2. Select [Network/USB Settings], and then press the [▶] button.

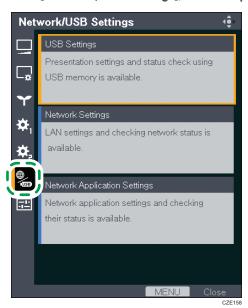

- 3. Select [USB Settings], and then press the [Enter] button.
- 4. Select [Settings], and then press the [▶] button.
- 5. Select [Display Interval (sec.)], and then press the [Enter] button.
- 6. Specify a slide show switching interval.
- 7. Press the [Menu] button.
- 8. Select [Reflect], and then press the [Enter] button.
- 9. Press the [Menu] button to close the menu screen.

Specifying the Sound Quality

You can select a sound quality setting for the built-in speaker that is applicable for the type of audio that you are playing. This makes it easier to hear the audio that is playing.

Setting the Sound Quality for Giving a Presentation

If [Narration] is specified for the sound quality, the projector plays dialog clearly. This mode is useful when you give a presentation using the microphone connected to the projector, for example.

1. Press the [Sound] button.



The sound quality selection screen appears at the bottom of the screen.

2. Select [Narration] (☑) using the [◀] and [▶] buttons.

Setting the Sound Quality for Playing Music

If [Music] is specified for the sound quality, the projector plays music dynamically. This mode is useful for music videos, for example. This mode is also useful if you want to decorate a shop window with video and music.

1. Press the [Sound] button.



The sound quality selection screen appears at the bottom of the screen.

2. Select [Music] (□) using the [◄] and [▶] buttons.

4

5. Using the Projector via a Network

This chapter explains the settings for using the projector via a network. This chapter also explains the operations that use QuickProjection.

Before Connecting to a Network

The projector does not support the Windows Vista and Windows 7 Network Projector function. Use QuickProjection, which is the application provided with the projector for projecting images via a network. For details about QuickProjection, see page 73 "Projecting a Computer's Screen via a Network".

Connecting an Ethernet Cable




⚠ CAUTION

• Do not place the power cord and connection cable in a way that might cause someone to trip and fall. The machine might fall over and cause an injury.


The projector is compatible with 10BASE-T, 100BASE-TX, and 1000BASE-T Ethernet interfaces.

Status of the network connection

You can confirm the status of the network connection by the patterns in which the LEDs on the Ethernet interface light up. If the projector is not connected to a network, no LEDs light up.

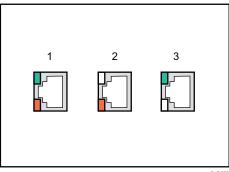

- 1. When 1000BASE-T is active (orange and green LEDs light up)
- 2. When 100BASE-TX is active (orange LED lights up)
- 3. When 10BASE-T is active (green LED lights up)

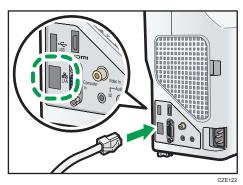

2. Connect the other end of the Ethernet cable to a network device such as a hub.



• The use of a shielded LAN cable is recommended.

Precautions for Using a Wireless LAN

MARNING

 Do not use a wireless LAN if there is electromagnetic interference from other equipment. Doing so may cause an accident due to the other equipment malfunctioning from the electromagnetic interference.

Wireless uses radio waves to exchange information instead of an Ethernet cable. The wireless LAN radio waves pass through barriers such as walls within a fixed area, so the following problems may occur:

Leak of Personal Information

• Information such as IDs, passwords, credit card numbers, and the contents of e-mails, etc., may be stolen by a third party.

Illegal Access to the Network

- Data and systems may be corrupted or manipulated by a virus.
- An imposter may access information illegally.
- Confidential information may be accessed illegally.

To minimize the possibility of these problems occurring, it is recommended to check the functions built into the wireless LAN devices, such as the projector and wireless LAN access points, and to specify security settings.



• Region A (mainly Europe and Asia)

5

The projector does not support the 5 GHz band.

• Region B (mainly North America)

The projector supports 40 MHz channels only in the 5 GHz band and in the infrastructure mode.

Connecting the Projector to a Network

To connect the projector to a network, you must specify network settings such as an IP address. The required settings differ depending on the network environment and how you use the projector.

You can configure the required settings easily by using Network Setting Wizard. For details about how to open Network Setting Wizard, see page 67 "Opening Network Setting Wizard".

To connect to a wired LAN

Connect an Ethernet cable to the projector, and then configure the network settings in [Wired LAN] on Network Setting Wizard. For details about how to configure the wired LAN network settings, see page 67 "Configuring the Wired LAN Settings".

To connect to a wireless LAN in infrastructure mode

In infrastructure mode, the projector can communicate with networks in which both wireless and wired LAN devices are connected via a wireless LAN access terminal. It is necessary to user greater security since all communication is via a network. Use infrastructure mode in environments in which a wireless LAN has already been configured.

Configure the network settings in [Wireless LAN (Infrastructure)] on Network Setting Wizard. The setting method differs depending on the network environment.

- Configuring the settings by Simple Wireless LAN Setup If the access point is compliant with the simple wireless LAN setup function, you can configure the network settings easily. This function acquires the wireless LAN settings registered in the access point, and configures those settings for the projector automatically. You can configure the settings without entering the SSID and the network key manually. For details, see page 68 "Configuring the settings by Simple Wireless LAN Setup".
- Configuring the settings manually

You can configure the network settings by selecting the network to connect to from the available network list. Up to 10 networks are displayed in the list in radio field intensity order.

If you want to connect to a network that is not displayed in the list or is not broadcasting its SSID, enter the SSID manually. For details, see page 70 "Configuring the settings manually".

To connect to a wireless LAN in ad hoc mode

In ad hoc mode, the projector can communicate with the computer directly, and not via an access point. No other equipment is required, so this mode is suited for locations that have no network environment. As the radio wave range is limited, use an office or conference room with a good line of sight.

Configure the network settings in [Wireless LAN (Adhoc)] on Network Setting Wizard. For details about how to configure the network settings for a wireless LAN in ad hoc mode, see page 71 "Configuring the Wireless LAN Settings for Ad Hoc Mode".

5






 If your wireless LAN access point uses WPA/WPA2-EAP as the authentication method, you must set the current date and time and the time zone of the location where the projector is installed. For details, see page 120 "Default Settings 2 Menu".

Opening Network Setting Wizard

You can open Network Setting Wizard on the menu screen.



- If you configure both wired and wireless LAN settings using the Network Setting Wizard and your
 wireless LAN access point uses WPA/WPA2-EAP as the authentication method, it is recommended
 that you configure the wired LAN settings first.
- 1. Press the [Menu] button.
- 2. Select [Network/USB Settings], and then press the [▶] button.
- 3. Select [Network Settings], and then press the [Enter] button.
- 4. Select [Setup Wizard], and then press the [▶] button.
- 5. Select [Network Setting Wizard], and then press the [Enter] button.
 If Administrator Authentication is enabled, enter the password, and then press the [Enter] button.
 The Network Setting Wizard appears.

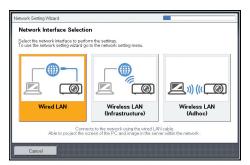

Configuring the Wired LAN Settings

Connect an Ethernet cable to the projector before configuring the settings.

Contact your network administrator for the information required for configuring network settings.

1. Select [Wired LAN] on Network Setting Wizard, and then press the [Enter] button.



2. Select [Disable DHCP (Manual Settings)] or [Enable DHCP (Auto Settings)], and then press the [Enter] button.

If you select [Enable DHCP (Auto Settings)], proceed to Step 6.

- 3. Specify the projector's IP address.
- 4. Specify the subnet mask.
- 5. Specify the default gateway.
- Select [Continue Wizard] or [End Wizard] on the confirmation screen, and then press the [Enter] button.

To proceed to the wireless LAN settings, select [Continue Wizard]. For details about how to configure the wireless LAN settings, see page 68 "Configuring the Wireless LAN Settings for Infrastructure Mode", or page 71 "Configuring the Wireless LAN Settings for Ad Hoc Mode".

To end the network settings, select [End Wizard].

The wired LAN setup is complete.

To project the image from a computer, see page 73 "Projecting a Computer's Screen via a Network".

Configuring the Wireless LAN Settings for Infrastructure Mode

Configuring the settings by Simple Wireless LAN Setup


The projector supports the following simple wireless LAN setup method. Contact your network administrator for the available simple wireless LAN setup method in your network environment and the information required for configuring network settings.

Setup Method

Using push buttons

Press the projector and access point keys or buttons to get them to connect to each other and register the settings.

- Entering the projector's PIN code in the access point
 - Enter the projector's PIN code in the access point so that the projector and the access point authenticate and register each other. The projector's PIN code can be changed. For details about entering the PIN code in the access point, see the manual provided with the access point.
- Select [Wireless LAN (Infrastructure)] on Network Setting Wizard, and then press the [Enter] button.

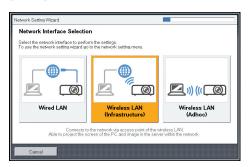

- 2. Select [Perform Simple Wireless LAN Setup], and then press the [Enter] button.
- 3. Select either [Connect by PIN] or [Connect by Push], and then press the [Enter] button.
- 4. If [Connect by PIN] is selected, enter the PIN code of the projector displayed on the screen into the access point, and then proceed to Step 6.

You must preconfigure the access point's simple wireless LAN setup function.

- 5. If [Connect by Push] is selected, press the access point push button.
- 6. When the message "Connected to the wireless LAN device." is displayed, press the [Enter] button.
- 7. Select [Disable DHCP (Manual Settings)] or [Enable DHCP (Auto Settings)], and then press the [Enter] button.

If you select [Enable DHCP (Auto Settings)], proceed to Step 11.

- 8. Specify the projector's IP address.
- 9. Specify the subnet mask.
- 10. Specify the default gateway.
- 11. If the message "To perform connection by WPA/WPA2-EAP, continuous setting on Network Setting Menu: Wireless LAN: Security is required." appears, press the [OK] button and continue configuring the wireless LAN settings in the Network Settings menu. Otherwise, proceed to Step 12.

For details about how to set up the wireless LAN connection by WPA/WPA2-EAP, see page 125 "Network Settings Menu".

To proceed to the wired LAN settings, select [Continue Wizard]. For details about how to configure the wired LAN settings, see page 67 "Configuring the Wired LAN Settings".

To end the network settings, select [End Wizard].


The wireless LAN setup is complete.

To project the image from a computer, see page 73 "Projecting a Computer's Screen via a Network".

Configuring the settings manually

Contact your network administrator for the information required for configuring network settings, such as the SSID and the network key.

 Select [Wireless LAN (Infrastructure)] on Network Setting Wizard, and then press the [Enter] button.

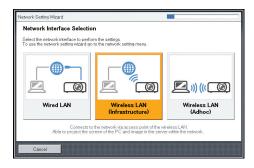

The list of wireless LAN networks that can be connected is displayed.

2. Select a wireless LAN network or [Manually Enter SSID], and then press the [Enter] button.



If you select [Manually Enter SSID] in Step 2, enter the SSID, and then press the [Enter] button.

5

4. Enter the network key.

When connecting to a network for which a network key is not set, the network key input screen is not displayed. Proceed to Step 5.

5. Select [Disable DHCP (Manual Settings)] or [Enable DHCP (Auto Settings)], and then press the [Enter] button.

If you select [Enable DHCP (Auto Settings)], proceed to Step 10.

- 6. Specify the projector's IP address.
- 7. Specify the subnet mask.
- 8. Specify the default gateway.
- 9. If the message "To perform connection by WPA/WPA2-EAP, continuous setting on Network Setting Menu: Wireless LAN: Security is required." appears, press the [OK] button and continue configuring the wireless LAN settings in the Network Settings menu. Otherwise, proceed to Step 10.

For details about how to set up the wireless LAN connection by WPA/WPA2-EAP, see page 125 "Network Settings Menu".

Select [Continue Wizard] or [End Wizard] on the confirmation screen, and then press the [Enter] button.

To proceed to the wired LAN settings, select [Continue Wizard]. For details about how to configure the wired LAN settings, see page 67 "Configuring the Wired LAN Settings".

To end the network settings, select [End Wizard].

The wireless LAN setup is complete.

To project the image from a computer, see page 73 "Projecting a Computer's Screen via a Network".

Configuring the Wireless LAN Settings for Ad Hoc Mode

1. Select [Wireless LAN (Adhoc)] on Network Setting Wizard, and then press the [Enter] button.



The network settings are configured automatically.

2. Select [Continue Wizard] or [End Wizard] on the confirmation screen, and then press the [Enter] button.

To proceed to the wired LAN settings, select [Continue Wizard]. For details about how to configure the wired LAN settings, see page 67 "Configuring the Wired LAN Settings".

To end the network settings, select [End Wizard].

The wireless LAN setup is complete.

To project the image from a computer, see page 73 "Projecting a Computer's Screen via a Network".

Projecting a Computer's Screen via a Network

The projector does not support the Network Projector function of Windows. Use QuickProjection, which is the application provided with the projector for projecting a computer's screen via a network.

This section explains how to use QuickProjection in Windows as an example. The basic operation flow is the same as when a Mac OS is used.

How to Use QuickProjection

QuickProjection is included on the supplied CD-ROM.

QuickProjection operating environment is described below.

- · Supported operating system
 - Windows Vista Ultimate, Business, Home Premium, Home Basic, SP2 or later (32-bit and 64-bit versions)
 - Windows 7 Home Premium, Professional, Ultimate, Enterprise, SP1 (32-bit and 64-bit versions)
 - Windows 8, Pro, Enterprise (32-bit and 64-bit versions)
 - Windows 8.1, Pro, Enterprise (32-bit and 64-bit versions)
 - Windows 10 Home, Pro, Enterprise, Education (32-bit and 64-bit versions)
 - Mac OS X 10.8-10.10
- 1. Insert the CD-ROM in the CD-ROM drive of your computer.

The launcher screen appears.

- 2. Specify a language and model name, and then click [Select].
- 3. Click [QuickProjection].
- 4. Follow the instruction of the installer (setup.exe) to install the software.
- 5. Close the screen.

To start QuickProjection, double-click the shortcut icon on the desktop or "QuickProjection" from the Start menu.



- Actual flow may vary according to the operating system used. Follow the on-screen instructions to use QuickProjection.
- You can download the latest version of QuickProjection from our website. Access the URL
 displayed on the standby screen for [Network PC] input.
 You can also use QuickProjection by dragging and dropping the "QuickProjection.exe" that is on

the provided CD-ROM into the computer or a USB memory device.

To delete QuickProjection, click [Uninstall a program] in [Control Panel] of Windows, and then select "RICOH QuickProjection" to uninstall the software.

Two versions of QuickProjection are available for Mac OS, one supports audio and the other does not.

Projecting Images Using QuickProjection

Before projecting images using QuickProjection, connect the projector to a network. For details about how to connect the projector to a network, see page 66 "Connecting the Projector to a Network".

For basic operations, such as how to turn on the projector or adjust the focus, see page 35 "Projecting an Image".


- 1. Turn the projector on.
- 2. If [Network PC] is not selected as the input signal, press the [Input] button.



3. Switch the input signal to [Network PC].

For details about how to switch the input signal, see page page 35 "Projecting an Image". The standby screen for [Network PC] input appears.

4. Check the 4-digit number (identification code) on the projection screen.

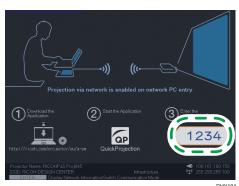

5. Double-click the "QuickProjection" icon on the computer.

6. Enter the identification code on the QuickProjection dialog.




The projector's name or IP address can also be entered instead of the identification code.

7. Click [Projection].

The computer's screen is projected.

While the computer's screen is being projected, a small QuickProjection is displayed in the lower right corner of the computer's screen.

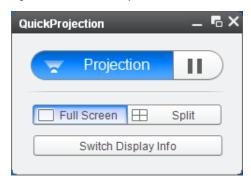

To pause the projection, click

To quit the projection, click [X], and then click [OK].



- Two projection modes are available: "Presentation mode" that projects the screen of a single PC, and "Discussion mode" that projects the screens of four PCs at the same time.
- For detailed QuickProjection operating methods, refer to the QuickProjection Help.
- If the display resolution of the computer screen and the projector matches, the image quality is better. We recommend setting the resolution of the computer screen to the following:
 - RICOH PJ WX4152N/WX4152NI: 1280 × 800

Projecting Images Using DLNA-Compatible Devices

The projector is compatible with DLNA. DLNA is the guideline for sharing content on a network.

Therefore, the projector can project still images and videos transmitted from DLNA-compatible devices. The projector can also access DLNA-compatible devices such as file servers, tablet computers, or smart devices and project JPEG files stored on them.

The supported file types for the DLNA-compatible devices are shown below:

Still images

ltem	Requirements	
File extensions	ipg, ipeg, JPG, JPEG	
File size	Less than 10 MB	
Number of pixels	2 × 2 to 5120 × 5120 pixels	
File format	Baseline format	

Videos

ltem	Requirements	
File extensions	mpg, mpeg, MPG, MPEG, m2ts, m2t, M2TS, M2T, m2p, M2P, mp4, MP4, mov, MOV	
Number of pixels	320 × 240 to 1920 × 1080 pixels	
Video compression format	 MPEG2 when the container format is MPEG2-PS or MPEG2-TS H.264 when the container format is MP4 or QuickTime 	
	 MPEG1/2-Audio Layer2 when the container format is MPEG2-PS or MPEG2-TS 	
Audio compression format	 Linear PCM when the container format is MPEG2-PS or QuickTime 	
	AAC-LC when the container format is MP4 or QuickTime	
Container format	MPEG2-PS, MPEG2-TS, MP4, QuickTime	
Frame rate	Less than 30 fps	
Bit rate	Less than 20 Mbps (recommended)	





- The supported video file types are compliant with the projector's own specifications. They are not compliant with the DLNA 1.5 guidelines.
- The maximum number of files that can be displayed in the list is 512 per folder.
- Characters that can be used for file names and folder names are single-byte letters and numbers
 and characters used in the language specified in [Language] under [Default Settings 2]. If
 characters for languages other than the language specified are used, the file name or folder name
 will not be displayed properly.
- If the total number of characters in the file name and the path exceeds 255, the file cannot appear
 on the list.
- Data in a folder that is stored six levels or more into a hierarchy cannot be accessed.

Preparation

To project files transmitted from DLNA-compatible devices or access DLNA-compatible devices from the projector, the projector and the DLNA-compatible devices must be connected to a network. For details about how to connect the projector to a network, see page 66 "Connecting the Projector to a Network". For details about how to use DLNA-compatible devices, see the manuals provided with the DLNA-compatible devices.

In addition, following settings are necessary:

- To project files transmitted from DLNA-compatible devices, select [Enable] in [Remote Projection Control] under [Network Application Settings]. For details, see page 134 "Network Application Settings Menu".
- To project files stored on the DLNA-compatible device, you must configure the file sharing settings on the device. For details about how to use DLNA-compatible devices, see the manuals provided with the DLNA-compatible devices.



- The projector is certified to DLNA 1.5 guidelines for still images. If [DLNA Certification Mode] in [Network Application Settings] is specified as [Enable], the projector works as a DLNA-certified device and video playback is restricted. If this setting is specified as [Disable], the projector can also project MPEG files.
- Depending on the device used for this function, you may need to install a DLNA application on the device.

Projecting Images from DLNA-Compatible Devices

For basic operations, such as how to turn on the projector or adjust the focus, see page 35 "Projecting an Image".

The procedure of the DLNA-compatible device described below is an outline of the basic flow. The detailed procedure varies depending on the device and application. For details, see the manuals provided with the device and application.


- 1. Turn the projector on.
- 2. If [Network PC] is not selected as the input signal, press the [Input] button.



3. Switch the input signal to [Network PC].

For details about how to switch the input signal, see page 35 "Projecting an Image". The standby screen for [Network PC] input appears.

4. Check the projector name on the projection screen.

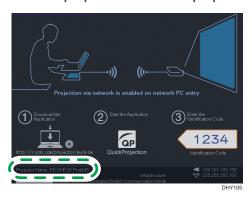

- On the DLNA-compatible device, select the projector name checked in Step 3 as a destination device.
- 6. On the DLNA-compatible device, select the file you want to project.
 The selected file is projected.



For details about how to control the projected image and stop the projection, see the manuals
provided with the DLNA-compatible devices and applications.

Projecting Images Stored on the DLNA Server

For basic operations, such as how to turn on the projector or adjust the focus, see page 35 "Projecting an Image".

Projecting files

- 1. Turn the projector on.
- 1. Press the [Input] button to switch the input signal to [Server].

Input



For details about how to switch the input signal, see page 35 "Projecting an Image".

The list of DLNA servers is displayed.

Select the server that has the files to be projected.


The list of files in the root directory is displayed.

If [DLNA Certification Mode] in [Network Application Settings] is specified as [Enable], some video files do not appear in the file list. For details, see page 134 "Network Application Settings Menu".

- 3. Select the file, [Slideshow], or folder, and then press the [Enter] button.
 - When a file is selected
 If you select a JPEG file, its image is projected. If you select an MPEG file, the video plays.
 - When [Slideshow] is selected

A slide show starts with the files in the current folder.

When a folder is selected
 The file list within the folder is displayed. Repeat this step until the file you want to project is displayed.

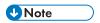

- Images are displayed in the numerical and alphabetical order of their file name headers.
- You can specify the slide show switching interval for still images in [Display Interval (sec.)] in [Server] under [Network Application Settings].
- If a video file is in a folder that has been selected for a slide show, the entire video plays. When the video finishes, the next file is displayed.

Controlling the projected image

How to control a still image

- [Enter] button: Starts the slide show from the projected image. Stops the slide show that is in progress.
- [*] button: Displays the next image.
- [◀] button: Displays the previous image.

- [A] button: Rotates the image 90° to the right.
- [♥] button: Rotates the image 90° to the left.
- [Menu] button: Returns to the file list screen.

How to control a video

- [Enter] button: Pauses or restarts the video.
- [*] button: Fast forwards the video. If a video is paused, displays the next image.
- [4] button: Rewinds the video. If a video is paused, displays the previous image.
- [*] button: Increases the volume.
- [▼] button: Decreases the volume.
- [Menu] button: Returns to the file list screen.



- The rewind and fast forward speed increases three levels each time the button is pressed. To reduce the speed to its original, press the [Enter] button.
- If any operation except for volume adjustment is performed during the slide show, the slide show stops.

Projecting Images Using Smart Devices

The projector is compatible with Miracast. Using Miracast, the projector can be connected to your smart device peer-to-peer, and you can project the screen of your smart device on the projection screen.



- For details about supported file types for this function, see page 76 "Projecting Images Using DLNA-Compatible Devices".
- 1. Turn the projector on.
- 2. Press the [Input] button to switch the input signal to Miracast.



For details about how to switch the input signal, see page 35 "Projecting an Image".

When the standby screen for [Network PC] input is displayed, you can also select [Miracast] at the upper left corner of the projection screen.


The standby screen for [Miracast] input appears.

3. When the input is switched to [Miracast] for the first time, the screen to specify whether or not to skip the device confirmation appears. Select either [Skip] or [Do not Skip].

If you select [Skip], you do not need to operate the controls on the projector when using the pushbutton method to connect.

This setting can be changed to [Do not Skip] in [Check Connection Terminal] under "Miracast" on the network application configuration menu.

4. Check the projector name on the projection screen.

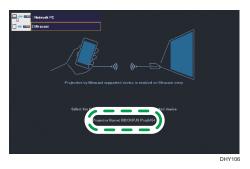

- 5. On your smart device, enable the wireless output (Miracast) function.
- 6. On your smart device, select the projector name checked in Step 3 as the destination device.
- 7. If the Push button method is selected as the authentication method on your smart device, select [Connect] on the projection screen, and then press the [Enter] button. If the PIN

code method is selected, enter the PIN code displayed on the projection screen into your smart device.

This procedure is not necessary required if [Skip] is selected in Step 3 when the push-button method is used.

8. On your smart device, select the file you want to project.

The selected file is projected.



• For details about how to control the projected image and stop the projection, see the manuals provided with your smart device.

6. Using the Interactive Function (RICOH PJ WX4152NI only)

This chapter explains how to use the interactive function.


Preparations for Using the Interactive Function (RICOH PJ WX4152NI only)



- To use the interactive function, you must use an RGB cable or an HDMI cable to connect the
 projector and computer. You cannot use the interactive function if another type of cable is used for
 the connection.
- The interactive function cannot be used when a screen is displayed on the Windows extended desktop.

The interactive function allows you to operate a computer connected to the projector directly on the projection screen. You can also write and draw on a projected screen using the included software "RICOH PJ Interactive Software".

To use the interactive function, the following settings are required.

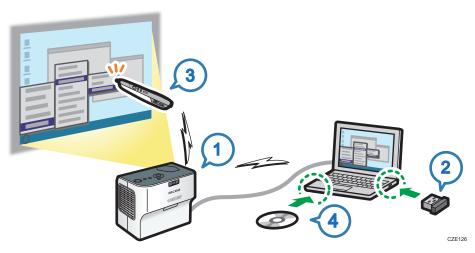

Step	Setting Contents	Reference
1	Set Interactive Mode to [On].	page 84 "Enabling Interactive Mode"
2	Register the computer USB adapter to the projector.	page 85 "Registering the Computer USB Adapter"




- You only need to perform Steps 1 to 3 to use the electronic pen to operate the computer from its projected image.
- You must perform Steps 1 to 4 to write and draw on the screen.

Enabling Interactive Mode


In Interactive Mode, the projector can recognize the electronic pen and the computer USB adapter.

We recommend disabling wireless LAN communication when you enable Interactive Mode. To disable wireless LAN communication, select [Wired LAN] or [Disable] in [Network Interface] under [Network Settings]. For details, see page 125 "Network Settings Menu".

- Turn on the projector to project the screen.
 For details about how to turn on the projector, see page 35 "Turning On the Projector".
- 2. Press the [Menu] button.
- 3. Select [Default Settings 1], and then press the [▶] button.

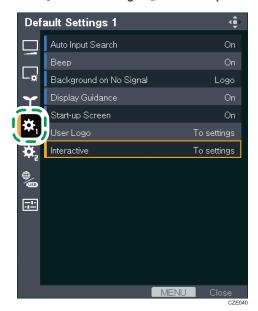

- 4. Select [Interactive], and then press the [Enter] button.
- 5. Select [Interactive Mode], and then press the [Enter] button.
- 6. Select [On], and then press the [Enter] button.

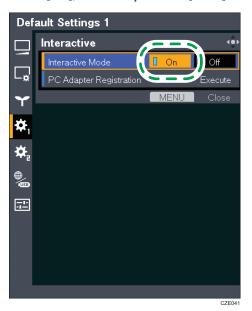

7. Press the [Menu] button twice to close the menu screen.

To go on to register a computer USB adapter, see page 85 "Registering the Computer USB Adapter".

Registering the Computer USB Adapter

ACAUTION

 Keep computer USB adapter out of reach of children. If a child accidentally swallows a computer USB adapter, consult a doctor immediately.

To use the computer USB adapter in Interactive Mode, the adapter must be registered to the projector. Once the computer USB adapter is registered to the projector, there is no need to register it again. You can use the computer USB adapter with any computer that is connected to the projector.

The following operating environment is required to use the computer USB adapter.

1. Have a computer USB adapter at hand.



CWD002

2. Turn on the projector.

For details about how to turn on the projector, see page 35 "Turning On the Projector".

3. Connect the computer to the projector using an RGB cable or an HDMI cable.


For details about how to connect the computer to the projector, see page 30 "Connecting to the RGB out port" and page 30 "Connecting to the HDMI port".

4. Project the computer screen on the projector screen.


For details about how to project the computer screen, see page 36 "Projecting an Image".

5. Press the [Menu] button.



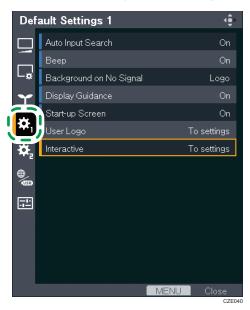


- 7. Select [Interactive], and then press the [Enter] button.
- 8. Check that [Interactive Mode] is set to [On].
 For the setting procedure, see page 84 "Enabling Interactive Mode".
- 9. Select [PC Adapter Registration] and press the [Enter] button.

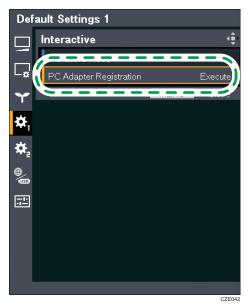

10. Install the computer USB adapter into the computer.

Upon being installed, the computer USB adapter flickers twice every 0.5 seconds.

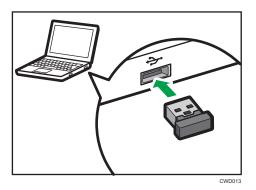

• If registration succeeds

The message "Registration has completed." appears. The computer USB adapter flickers every two seconds. Press the [Enter] button to close the message.

• If registration fails

If there are any obstacles between the projector and computer, the attempt to perform registration will fail.

Registration should complete in under 2 minutes. If it does not complete after 2 minutes, remove the USB adapter from the computer, and then insert it again.

11. Press the [Menu] button twice to close the menu screen.



 Do not register computer USB adapters for multiple projectors at the same time. The computer USB adapter might not be registered correctly.

Enabling the Projector to Recognize the Electronic Pen

Once the projector recognizes the electronic pen, you can directly operate the computer display on the screen.

1. Turn on the projector.

For details about how to turn on the projector, see page 35 "Turning On the Projector".

2. Connect the computer to the projector using an RGB cable or an HDMI cable.


For details about how to connect the computer to the projector, see page 30 "Connecting to the RGB out port" and page 30 "Connecting to the HDMI port".

3. Project the computer screen on the projector screen.

For details about how to project the computer screen, see page 36 "Projecting an Image".

o


4. Install the computer USB adapter into the computer.

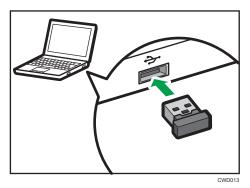

When the registered computer USB adapter is installed into the computer, the adapter flickers once every 0.5 seconds. Then, when the computer USB adapter is connected to the projector, the adapter flickers once every two seconds. If the adapter flickers twice every 0.5 seconds, you need to register it on the projector.

To make registration, see page 85 "Registering the Computer USB Adapter".


5. Turn the power switch of the electronic pen to "On".

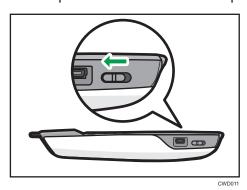

The communication indicator on the electronic pen will then flicker.

If the communication indicator fails to flicker, check that the rechargeable battery is installed in the electronic pen. If a battery is installed, recharge it. For about the electronic pen, see page 93 "Using the Electronic Pen".

6. Point the pen nib toward the projected screen.

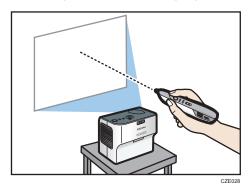

• If registration succeeds

The projected computer screen pointer moves according to the movements of the electronic pen. Also, the communication indicator on the electronic pen lights up or flickers green rapidly and the computer USB adapter lights up.

• If registration fails

- Check how you are holding the electronic pen. If you are holding the top or the bottom
 of the pen, the projector is unable to recognize the electronic pen correctly. To hold the
 electronic pen correctly, see page 94 "How to Use the Electronic Pen".
- Check that the pen nib is not pointing at a shadow. If the pen nib is pointing at a shadow
 or if it is not pointing at the screen, then the projector is unable to recognize the
 electronic pen correctly. To operate the electronic pen correctly, see page 94 "How to
 Use the Electronic Pen".
- If the electronic pen is not recognized correctly after the direction of the pen is corrected
 or even when you hold the electronic pen correctly, check the procedure from Step 1 by
 referring to page 99 "When You Cannot Use the Interactive Function".

Installing RICOH PJ Interactive Software

RICOH PJ Interactive Software allows you to write and draw on a projection screen. When you use RICOH PJ Interactive Software, install it on a computer. For details about how to use RICOH PJ Interactive Software, see Operating Instructions (Interactive Function).

The following operating environment is required to use RICOH PJ Interactive Software.

ltem	Specifications	
CPU	Intel [®] Core TM 2 Duo 2 GHz or more recommended	
	(Minimum: Intel Core Solo U1300)	

ltem	Specifications	
Memory	Windows 7 / 8 (32 bit): 3 GB or more recommended (Minimum: 1 GB)	
	Windows 7 / 8 (64 bit): 4 GB or more recommended (Minimum: 2 GB)	
	Windows 8.1 (32 bit): 3 GB or more recommended (Minimum: 1 GB)	
	Windows 8.1 (64 bit): 4 GB or more recommended (Minimum: 2 GB)	
	Windows 10 (32 bit): 3 GB or more recommended (Minimum: 1 GB)	
	Windows 10 (64 bit): 4 GB or more recommended (Minimum: 2 GB)	
HDD	9 GB or more free space recommended (Minimum: 2 GB)	
Operating System	Windows 7 Home Premium / Professional / Ultimate / Enterprise SP1 or later (32 bit / 64 bit)	
	Windows 8 / Pro / Enterprise (32 bit / 64 bit)	
	Windows 8.1 / Pro / Enterprise (32 bit / 64 bit)	
	Windows 10 Home / Pro / Enterprise / Education (32 bit / 64 bit)	

- To install RICOH PJ Interactive Software on a computer, log on as a user with administrator privileges.
- 1. Insert the CD-ROM in the CD-ROM drive of your computer.
- 2. Specify a language and model name, and then click [Select].
- 3. Click [PJ Interactive Software].
- 4. Select the language for the installation, and then click [OK].
- 5. If .NET Framework 4 is not installed on your computer, click [Install].
 If .NET Framework 4 has already been installed, the message [Install] does not appear. Proceed to the next step.
- 6. Click [Next].
- 7. Select "I accept the terms in the license agreement", and then click [Next].
- 8. Specify the installation folder, and then click [Next].
- 9. Click [Install].
- 10. Click [Finish].



• If the [User Account Control] dialog box appears during the installation procedure, click [Yes] or [Continue].

• To uninstall RICOH PJ Interactive Software, use the program delete function in [Control Panel] to delete "RICOH PJ Interactive Software".


Using the Electronic Pen

This section introduces the names of the parts of the electronic pen and explains how to charge it.

After you finish setting up the interactive function, insert the computer USB adapter into the computer. After the computer recognizes the electronic pen, you can use it to perform operations on the projected screen. For details about the electronic pen, see page 88 "Enabling the Projector to Recognize the Electronic Pen".

Communication between the electronic pen, the projector, and the computer USB adapter is conducted wirelessly. Do not block the area between the electronic pen, projector, and computer. In addition, do not use wireless devices near the electronic pen. Otherwise, the position of the electronic pen will not be recognized correctly.

Electronic Pen Parts and Their Functions

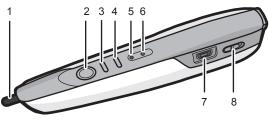

CWD008

1. Pen nib switch

Used to write, draw, and select operations on the projected screen. This switch is functionally equivalent to the left button of a computer mouse.

2. Left button

Similar to the left button of a computer mouse.

3. Right button

Similar to the right button of a computer mouse.

4. Point adjustment button

Used to adjust the point position of the pen nib when the pen is held in a different way. The standard position of the point is the center of the pen, and it moves each time this button is pressed. The order in which the point moves is as follows: up, down, and to the center.

5. Battery indicator

Indicates the battery status of the electronic pen.

The battery indicator keeps lighting while charging and goes off when the charge is completed.

6. Communication indicator

Indicates the communication status of the electronic pen.

This indicator flickers in red until the projector recognizes the electronic pen.

When the projector recognizes the electronic pen, the indicator lights up in green or flickers rapidly.

7. USB connecter

Used to connect the electronic pen charge cable. See page 98 "Recharging the Electronic Pen".

8. Power switch


Switches the power of the electronic pen between on and off.

How to Use the Electronic Pen

When the pen nib is pointed toward the screen projected by the projector in Interactive Mode, the electronic pen is recognized and the pointer on the projected computer screen can be operated with the electronic pen. See page 88 "Enabling the Projector to Recognize the Electronic Pen".


You can operate the computer projection screen by touching it with the pen nib—you can select an icon or menu, or write and draw. You may also touch the pen nib twice on the same position of the screen, much like the double-click of a mouse.

• Operate the electronic pen so that the pen nib does not point toward a shadowed area.

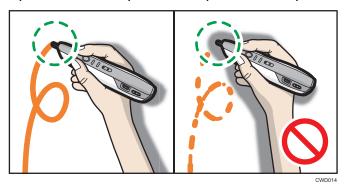


When the projector is installed on a table or the floor

Hold the electronic pen as shown below. If the nib or bottom of the electronic pen is held, the position of the electronic pen will not be recognized correctly.

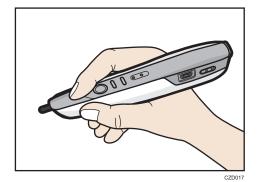


To align the point position of the electronic pen with the pen nib switch, and not the center of the pen, use the point adjustment button to move the point position up.

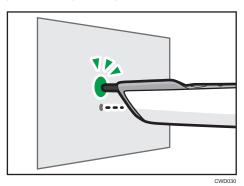


When the projector is installed on a wall or ceiling

When the projector is installed on a wall or ceiling, hold the electronic pen upside down to eliminate the shadow that appears on the screen.

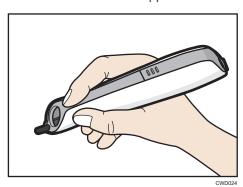


To align the point position with the pen nib switch while holding the electronic pen upside down, use the point adjustment button to move the point position down.

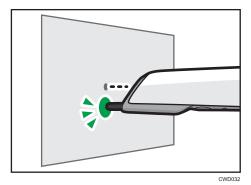

Operating the electronic pen remotely

You can also operate the screen remotely. When standing away from the screen, use the mouse button on the electronic pen.

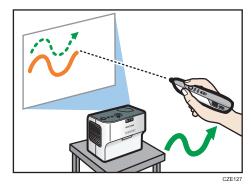




• The electronic pen can only be used while the projector is in Interactive Mode. For details about how to configure the projector, see page 84 "Enabling Interactive Mode".

Installing a Rechargeable Battery into the Electronic Pen


MWARNING

- For safe operation, follow the warnings below regarding the batteries. If you use the batteries incorrectly, it may result in fire or injury due to batteries leaking or exploding.
 - Do not use batteries other than the ones specified.
 - Do not mix and use batteries that are different types or that are new and old.
 - Correctly insert batteries according to the polarity (+ / -).
 - Do not charge non-rechargeable batteries.
 - Do not heat or throw the batteries into fire or water.
 - Do not connect the positive and negative terminals on a battery with a wire.
 - Remove the batteries that are past their suggested use period or that are depleted.
 - Remove the batteries when they will not be used for extended periods.
 - Keep the batteries out of the reach of children. Children may swallow or choke on the batteries. If this happens, contact a doctor immediately.

1. Check the electronic pen to make sure that the power is off.

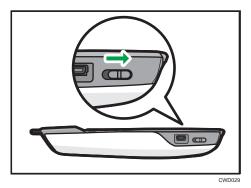


2. Push down A and slide the battery cover to remove it.

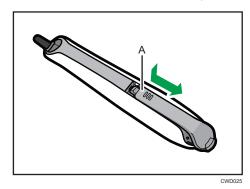


3. Install a battery.

Check that the battery has been installed in the right direction.

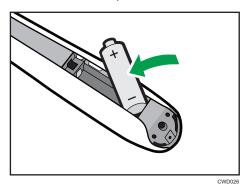

4. Re-install the battery cover.

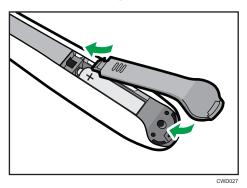


UNote

• For details about what to do if a battery has leaked, see page 153 "Operating Precautions".

Recharging the Electronic Pen

Insert an electronic pen charge cable into a USB port on the computer and connect the electronic pen.

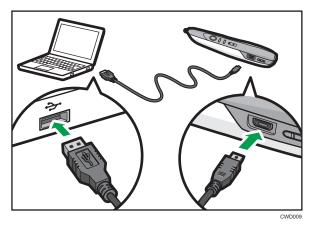

The battery indicator keeps lighting while charging and goes off when the charge is completed.

When You Cannot Use the Interactive Function

If you cannot use the interactive function, follow the steps below in the specified order to troubleshoot the problem.

Step	Check item	Solutions
1	Check the projector to make sure that power is supplied to it.	If the projector is not supplied with power, check the power cord for connection and turn on the power. To connect the cord and turn on the power correctly, see page 35 "Turning On the Projector".
2	Check to see whether the projector is in Interactive Mode.	If Interactive Mode is set to [Off], switch it to [On]. For details about how to check whether the projector is in Interactive Mode, as well as how to specify the mode, see page 84 "Enabling Interactive Mode".
3	Check to see whether the computer USB adapter is connected to in the computer.	If the computer USB connector is not connected, connect it to one of the USB ports on the computer.
4	Check to see whether the computer USB adapter inserted in the computer is registered to the projector.	When registered, the computer USB adapter flickers once every 0.5 seconds. Then, when the projector and the computer USB adapter are recognized, the adapter flickers once every two seconds. If the adapter flickers twice every 0.5 seconds, the projector needs registering. To register it correctly, see page 85 "Registering the Computer USB Adapter".
5	Check that the computer is connected to the projector using RGB cables or an HDMI cable.	The interactive function becomes inoperable if anything other than RGB cables or an HDMI cable is used. To connect these correctly, see the page 30 "Connecting to the RGB out port" or page 30 "Connecting to the HDMI port".
6	Check that the computer screen is projected on the projector screen.	The electronic pen is not recognized unless the computer screen is projected. To project the screen correctly, see page 36 "Projecting an Image".
7	Check to see whether the power switch of the electronic pen is set to "On".	If the power switch of the electronic pen is set to "Off", turn it to "On". For details about the location of the power switch of the electronic pen, see page 93 "Electronic Pen Parts and Their Functions".



- If you experience a problem with the actual projector, such as a problem starting the projector or projecting computer screens, see page 143 "Troubleshooting".
- If you cannot resolve problems, contact your service representative.

When the Projected Screen Cannot Be Operated As Wanted


This section explains what to do when the projected screen cannot be operated as wanted.

Problem	Solutions
The location the pen nib points at does not correspond with what is displayed on the screen.	Change the display settings using the computer's graphic driver, so that the screen projected is not scaled by the computer.
	(Example: Display > General Settings > Scaling > Maintain Display Scaling)
	 Change the computer output settings so that only the projector screen is displayed.
	For details about settings, see the computer manual.

7. Changing the Projector Settings

This chapter explains the settings on the menu screen and how to change the settings.

Viewing the Menu Screen

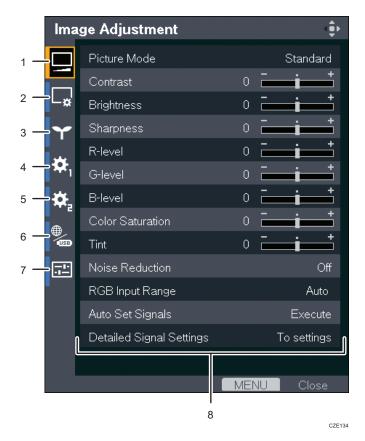

1. Image Adjustment menu tab

Adjusts the settings for the projected image, such as contrast and brightness.

For the Image Adjustment menu settings, see page 108 "Image Adjustment Menu".

2. Display/Sound Settings menu tab

Specifies the settings for image display and sound, such as auto keystone correction and sound quality. For the Display/Sound Settings menu settings, see page 112 "Display/Sound Settings Menu".

3. Energy Saving Settings menu tab

Specifies the settings for energy saving.

For the Energy Saving Settings menu settings, see page 116 "Energy Saving Settings Menu".

/

4. Default Settings 1 menu tab

Specifies the settings for the beep sound, user logo, etc.

For the Default Settings 1 menu settings, see page 118 "Default Settings 1 Menu".

5. Default Settings 2 menu tab

Specifies the settings for the display language, startup password, etc.

For the Default Settings 2 menu settings, see page 120 "Default Settings 2 Menu".

6. Network/USB Settings menu tab

The Network/USB Settings menu tab includes the USB Settings menu, Network Settings menu, and Network Application Settings menu.

· USB Settings menu

Specify the settings for USB file projection.

For the USB Settings menu settings, see page 123 "USB Settings Menu".

• Network Settings menu

Specify the network settings, such as an IP address.

For the Network Settings menu settings, see page 125 "Network Settings Menu".

• Network Application Settings menu

Specify the settings for PJLink, Web Image Monitor, etc.

For the Network Application Settings menu settings, see page 134 "Network Application Settings Menu".

7. Display Status tab

Enables information such as input signals and lamp usage time, etc., to be displayed.

For item that can be displayed, see page 141 "Display Status".

8. Settings

The settings and information for each menu can be displayed.

Changing the Settings

1. Press the [Menu] button.



2. Select the menu tab using the [▲] and [▼] buttons.



If you select the Display Status tab, you can confirm the information in this step.

- 3. Press the [▶] button.
- Select the item to be changed using the [▲] and [▼] buttons.
- 5. Press the [Enter] button.

If [To settings] is displayed on the right, the item has a submenu. Select an item on the submenu, and then press the [Enter] button.


If [Execute] is displayed to the right of the item you select, the function is executed in this step.

- 6. Change the settings.
 - Adjusting values using the values bar
 Change the value using the [◄] and [▶] buttons, and then press the [Enter] button.



· Selecting the value from a list

Change the value using the $[^{\blacktriangle}]$, $[^{\blacktriangledown}]$, and $[^{\blacktriangleright}]$ buttons, and then press the [Enter] button.

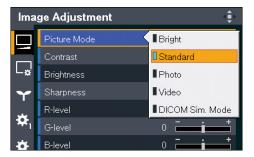

Inputting numbers

Use the number buttons on the remote control to input numbers.



Inputting text

Use the keyboard that is displayed on screen to input text. You can also use the number buttons on the remote control to input numbers.

- 7. If a confirmation screen appears, select [OK], and then press the [Enter] button.
- 8. Press the [Menu] button.
- 9. If a confirmation screen appears, select [Reflect], and then press the [Enter] button.



- The Network/USB Settings menu tab includes the USB Settings menu, Network Settings menu, and Network Application Settings menu. Open the menu according to the settings you want to change, and then go to Step 2 to change the settings.
- The menu screen closes automatically thirty seconds after the last operation. Changes to the settings are automatically applied when you close the menu screen. You do not need to press the [Enter] button.
- Settings in the Network/USB Settings menu are not applied until you select [Reflect] on the confirmation screen.
- The menu screen is not accessible if you are projecting images from a USB memory device or server. Stop projecting the images to open the menu screen.


7

Restoring All the Settings to Their Defaults

1. Press the [Menu] button.



- 2. Select [Default Settings 2], and then press the [▶] button.
- 3. Select [Reset All], and then press the [Enter] button.

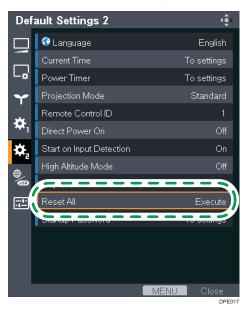

4. Select [OK] in the confirm screen, and then press the [Enter] button.



- The start menu is displayed after [Reset All] is executed. For details about the start menu, see page 36 "When the start menu is displayed".
- The following settings cannot be reset with this function:
 - [User Logo] in [Default Settings 1]
 To reset the registered user logo, select [Reset Logo] in [Default Settings 1].
 - [Current Time] and [Startup Password] in [Default Settings 2]
 - [Administrator Authentication] and [Administrator Password] in [Network Application Settings]
 To reset the registered passwords, contact your service representative.

Image Adjustment Menu

ltem	Default
Picture Mode	Standard
Select the picture mode.	
This function is not available when you select [On] in [3D Projection] under [Display/Sound Settings] or [On] in [Interactive Mode] under [Default Settings 1].	
Bright	
This image mode makes it easier to see the projection in bright locations.	
Standard	
This is the standard image mode.	
• Photo	
Photos appear more natural in this mode.	
• Video	
Video is smoother in this mode.	
DICOM Sim. Mode	
In this image mode, the images are adjusted to simulate the DICOM format. DICOM is a global standard for storing and transmitting medical images. DICOM is used for computer tomography (CT), magnetic resonance imaging (MRI), and endoscope images. However, this mode only simulates these formats, so the image may be projected differently from the original DICOM format. Use this mode only for education. It should not be used for actual diagnoses.	
Contrast	0
Adjust the image contrast. The greater the value, the stronger the image contrast.	
Brightness	0
Adjust the image brightness. The greater the value, the brighter the image.	
Sharpness	0
Adjust the sharpness of the image. The greater the value, the sharper the image.	

ltem	Default
R-level Adjust the level of red in the image. The greater the value, the stronger the color red is in the image.	0
G-level Adjust the level of green in the image. The greater the value, the stronger the color green is in the image.	0
B-level Adjust the level of blue in the image. The greater the value, the stronger the color blue is in the image.	0
Color Saturation Adjust the color saturation of the image. The greater the value, the richer the image. This function is available when you select [Y/Pb/Pr] or [Video] as an input signal.	0
Tint Adjust the tint of the image. This function is available when you select [Y/Pb/Pr], [HDMI] (Y/Pb/Pr signals), or [Video] as an input signal.	0
Noise Reduction Specify whether or not to use the function to reduce the Y/Pb/Pr (480i/576i) or video signal noise. This function is available when you select [Y/Pb/Pr] (480i/576i) or [Video] as an input signal.	Off

ltem	Default
RGB Input Range	Auto
Select the RGB input range.	
This function is available when you select [HDMI] (RGB signals) as an input signal.	
Auto	
The projector switches RGB input range according to the settings of the connected equipment.	
Standard	
Select this mode when the color black in the image is light. • Full	
Select this mode when dark parts in the image are too dark.	
Auto Set Signals	-
Automatically adjust the items in [Detailed Signal Settings].	
This function is available when you select [Computer] as an input signal.	
Detailed Signal Settings > Phase	0 to 31 [*] 1
Adjust to eliminate image flicker.	
This function is available when you select [Computer] as an input signal.	
Detailed Signal Settings > Frequency	0
Adjust to eliminate moiré patterns and flicker when you project images with thin vertical-stripes.	
This function is available when you select [Computer] as an input signal.	
Detailed Signal Settings > H-position	0
Adjust the horizontal position of the image.	
This function is available when you select [Computer] as an input signal.	
Detailed Signal Settings > V-position	0
Adjust the vertical position of the image.	
This function is available when you select [Computer] as an input signal.	
Detailed Signal Settings > Clamp Pulse 1	0 to 255 [*] 1
Adjust the clamp pulse position.	
This function is available when you select [Computer] as an input signal.	

ltem	Default
Detailed Signal Settings > Clamp Pulse 2	0 to 255 [*] l
Adjust the clamp pulse width.	
This function is available when you select [Computer] as an input signal.	

*1 The default of [Phase], [Clamp Pulse 1], and [Clamp Pulse 2] is variable because the projector automatically adjusts these settings according to the input signal.

Display/Sound Settings Menu

ltem	Default
Auto Keystone	On
Specify whether or not to implement keystone correction automatically depending on the angle of the projector's position.	
Keystone	О
Adjust for keystone distortion.	
To decrease the width of the bottom of the projected image, decrease the value. To decrease the width of the top of the projected image, increase the value.	
Zoom	100%
Reduce the size of the image if the projected image is larger than the screen. The image can be reduced in a range of 80 to 100% using the digital zoom function.	

ltem	Default
Aspect	Normal
Select the aspect ratio of the image.	
This function is not available when you select [USB Memory] or [Server] as an input signal. When you select [Network PC] as an input signal, this function is available only while you are projecting a computer's screen using QuickProjection.	
• Normal	
Display in full screen without changing the input signal aspect ratio.	
• 16:9	
Display using 16:9 aspect ratio (1280 × 720 resolution).	
• Full	
Display using 1280 × 800 resolution.	
Native	
Display the image without changing the resolution of the input signal.	
This setting is available when you select [Computer], [HDMI] (RGB signals), or [Network PC] as an input signal.	
• Zoom	
Display the image width as the projection screen width while maintaining the input signal aspect ratio.	
Display Position	-
Move the image if the projected image is smaller or larger than the projection screen size. You can move the image using the $[^{\blacktriangle}]$, $[^{\blacktriangledown}]$, and $[^{\blacktriangleright}]$ buttons.	
This function is not available when you select [Network PC], [USB Memory], or [Server] as an input signal.	

Item	Default
Wall Color Mode	Off
Select the image hue according to the projection surface when the image is being projected on something other than a screen. • Off	
Whiteboard	
Beige	
Gray	
Blackboard (Green)	
3D Projection > 3D Projection	Off
Specify whether or not to use 3D projection.	
The image will be slightly darker if this is set to [On].	
3D projection and interactive mode cannot be enabled simultaneously. If you change this setting to [On], [Interactive Mode] in [Default Settings 1] is switched to [Off].	
3D Projection > L/R Reverse	Normal
Specify whether or not to reverse left and right in a 3D image.	
Normal	
Reverse	
3D Projection > 3D Format	Auto
Select a 3D format.	
Select [Auto] when the 3D signals are input through HDMI. If the image does not project in 3D even if [Auto] is selected, change the setting to match the 3D format of the signal being input.	
Auto	
Frame Sequential	
Side by Side	
Top and Bottom	
Frame Packing	

Item	Default
Closed Caption	Off
The projector supports closed captioning, which allows subtitles to be displayed at the bottom of the picture. This is pursuant to the regulations set forth by the US Federal Communications Commission (FCC).	
Select [CC-1] to [CC-4] to display the dialogue and narration of TV programs and videos that are closed captioned.	
This function is available when you select [Video] as an input signal.	
• Off	
• CC-1	
• CC-2	
• CC-3	
• CC-4	
Sound Quality	Standard
Select the sound quality of the audio that is playing. This function applies to the built-in speaker on the projector only. If you use an external speaker, you cannot change the sound quality with this function.	
• Standard	
Dialog and music are carefully balanced.	
Narration	
This mode is suitable for listening to dialog.	
Music	
This mode is suitable for listening to music.	

Stnd.

Eco

On

20 min.

Default

Lamp Power

Select the lamp power level.

To save energy, select the eco mode. To make images brighter, select the standard mode.

Item

The lamp power is switched to the standard mode regardless of this setting when [DICOM Sim. Mode], [3D Projection], or [Interactive Mode] is enabled.

- Fco
- Stnd.

Lamp Pwr on No Signal

Specify whether or not to lower the lamp power when there is no input signal. If you select [Eco], the projector lowers the lamp power thirty seconds after the input signal disappears.

- Eco
- Stnd.

Image Eco

Specify whether or not to switch the lamp power automatically depending on the brightness of the image.

This function does not work when [DICOM Sim. Mode], [3D Projection], or [Interactive Mode] is enabled.

Power Off on No Signal

Select the amount of time from the last input signal or operation until the projector enters standby mode.

- Off
- 5 min.
- 10 min.
- 20 min.
- 30 min.

ltem	Default
Power on Standby	Eco
Specify whether or not to save energy while in standby.	
• Eco	
You can save energy while in standby, but start-up time is slower.	
• Q'ck On	
You can turn on the projector quickly, but the standby energy level is higher.	
NW Settings on Standby	Wired LAN
Select a network function to be enabled while in standby. You can save energy by disabling the network function.	
This function is available when you select [Eco] in [Power on Standby].	
Do not Use	
Disable the wired LAN and the wireless LAN while in standby to save energy. To use the wired LAN or the wireless LAN, press the [Power] button to turn on the projector.	
Wired LAN	
You can turn on the projector from standby mode via a wired LAN.	
Wired/Wireless LAN	
You can turn on the projector from standby mode via a wired LAN or wireless LAN.	



- The image may flicker, depending on the characteristics of the lamp, when the lamp power is cut by the lamp settings. If this happens, specify the lamp settings as follows:
 - Lamp Power: Stnd.
 - Lamp Pwr on No Signal: Stnd.
 - Image Eco: Off

Default Settings 1 Menu

ltem	Default
Auto Input Search	On
Specify whether or not to switch to another input signal that the projector detects when you press the [Input] button.	
Веер	On
Specify whether or not to beep during use.	
Background on No Signal	Logo
Select the image display when there is no input signal.	
• Logo	
Blue	
• None	
Display Guidance	On
Specify whether or not to display the guidance for operating the projector.	
Start-up Screen	On
Specify whether or not to display the start-up screen when the projector is turned on.	
User Logo > Register Logo	-
Register a user logo. Project the image to be registered as a user logo, and then execute this function. User logos can be displayed in the start-up screen or as the background when there are no input signals.	
You can register an image with a resolution of up to 1280 × 800 pixels.	
This function is available when you select [Computer], or [HDMI] (RGB signals) as the input signal. When you select [Network PC] or [Miracast] as the input signal, this function is available for the computer or smart device screen you project.	
User Logo > Confirm Logo	-
Display the registered user logo.	
User Logo > Reset Logo	-
Delete the registered user logo.	

/

ltem	Default
Interactive > Interactive Mode (RICOH PJ WX4152NI only)	Off
Specify whether or not to enable the interactive mode. For details about the interactive mode, see page 83 "Using the Interactive Function (RICOH PJ WX4152NI only)".	
The interactive mode and 3D projection cannot be enabled simultaneously. If you change this setting to [On], [3D Projection] in [Display/Sound Settings] is switched to [Off].	
Interactive > PC Adapter Registration (RICOH PJ WX4152NI only)	-
Register the computer USB adapter to the projector to use the interactive mode. For details about how to register the computer USB adapter, see page 85 "Registering the Computer USB Adapter".	
This function is not available when you select [Video] as an input signal.	

Default Settings 2 Menu

ltem	Default
Language	English
Select the display language.	
Available languages are as follows:	
English, Japanese, Spanish, Russian, French, Portuguese, German, Italian, Dutch, Polish, Swedish, Norwegian, Danish, Romanian, Turkish, Arabic, Thai, Indonesian, Traditional Chinese.	
Current Time > Date/Time	(Not programmed)
Specify the current date and time.	
Current Time > Time Zone	+0:00
Specify the time zone of the location where the projector is used by selecting the time difference to UTC (Coordinated Universal Time).	
Power Timer > Timer Projection	Off
Specify whether or not to enable the power timer function.	
When you enable this function, the projector automatically starts projection and turns off at the specified time. If you select [On], specify [Projection Day] and [Projection Time] to enable this function.	
Power Timer > Projection Day	(Not programmed)
Select a day of the week to start projecting using the power time function.	
Power Timer > Projection Time	(Not programmed)
Specify the time to start and end projecting using the power timer function. An interval of at least ten minutes is required between the startup time and the end time.	

ltem	Default
Projection Mode	Standard
Select the projection method according to how the projector is positioned.	
Standard	
Select this mode when the projector is placed in front of a screen.	
• Rear	
Select this mode when the projector is placed behind a screen.	
Ceiling	
Select this mode when the projector is mounted on the ceiling in front of a screen.	
Rear Ceiling	
Select this mode when the projector is mounted on the ceiling behind a screen.	
Remote Control ID	1
Select the projector remote control ID. Specify the ID for each projector when operating multiple projectors using one remote control.	
• 1	
• 2	
• 3	
• 4	
Direct Power On	Off
Select the power on method of the projector.	
• Off	
Turn the projector on when the [Power] button is pressed.	
• On	
Automatically turn on the projector when the power cord is connected.	
Start on Input Detection	On
Specify whether or not to start projecting automatically if the signals are input while in standby.	

ltem	Default
High Altitude Mode	Off
The number of fan rotations is high when set to [On]. The air is thin at high elevations, so the cooling efficiency of the projector is reduced. Select [On] when using the projector at an altitude of more than 1,500 meters (4,921 feet). Do not select [On] when the altitude is less than 1,500 meters (4,921 feet).	
Key Lock	Off
Specify whether or not to lock the buttons on the control panel. You can change this setting to [Off] by pressing the [AV Mute] button on the projector's control panel for 10 seconds.	
Reset All	-
Reset all menus to their defaults.	
This function cannot restore the default settings of [User Logo] in [Default Settings 1], [Current Time] and [Startup Password] in [Default Settings 2], [Administrator Authentication] and [Administrator Password] in [Network Application Settings].	
Startup Password > Register Password	000000
Enter a 6-digit password. The current password is required to change the password.	
Startup Password > Password Protect	Off
Specify whether or not to enter a password when the projector is turned on. If this is selected, a password must be entered when the projector is turned on after the power cord has been unplugged. However, a password is not required when turning the projector on from the standby mode.	
A password is required to change this setting.	

USB Settings Menu

This section explains the items in USB Settings menu under the Network/USB Settings menu tab.

You can also specify and check the items in the USB Settings menu using Web Image Monitor. However, the following items are available only on the menu screen.

- [Remove USB Mem.] in [Settings]
- [USB Memory Free Space (KB)] and [USB Memory Access Status] in [Display Status]

On Web Image Monitor, you can check [Network/USB Func. Firmware Version] on the top page.

For details about Web Image Monitor, see page 166 "Managing the Projector Using Web Image Monitor".

Settings

Still Image

ltem	Default
Display Effect	None
Select the display effect for switching the image.	
• None	
• Push	
The current image is pushed off by the next image.	
• Wipe	
The current image is wiped off by the next image.	
• Fade	
The current image fades out and the next image fades in.	
Display Interval (sec.)	5 seconds
Enter the slide show switching interval from 5 to 999 seconds.	

Moving Image

Item	Default
Repeat	Off
Specify whether or not to repeat video playback.	

Common

Item	Default
Auto Start Slideshow	Off
Specify whether or not to start a slide show automatically when the projector is connected to the USB device.	
Remove USB Mem.	-
The USB device can be removed when this command is executed.	

Display Status

USB Memory

ltem	Default
USB Memory Free Space (KB)	-
Display the space available on the USB device (Displayed in KB).	
USB Memory Access Status	-
Display whether or not the USB device can be accessed.	

Firmware Version

ltem	Default
Network/USB Func. Firmware Version	-
Display the firmware version of the network and USB functions.	

/

Network Settings Menu

This section explains the items in Network Settings menu under the Network/USB Settings menu tab.

You can also specify and check the items in the Network Settings menu using Web Image Monitor. However, the following items are available only on the menu screen.

- [Simple Wireless LAN Setup], [EAP Type], [Import Client Certificate], [Client Certificate User Name], [Client Certificate List], [Import CA Certificate], [CA Certificate List], [Delete Client/CA Certificate], [MS-CHAP v2 User Name], [MS-CHAP v2 Password], [Windows Domain Name], [Server Certificate Authentication], [Intermediate CA Permission], [WPA/WPA2-EAP Connection Check], and [Reset Wireless LAN Settings] in [Wireless LAN]
- [Network Setting Wizard] in [Setup Wizard]

On Web Image Monitor, you can check [Network/USB Func. Firmware Version] on the top page.

For details about Web Image Monitor, see page 166 "Managing the Projector Using Web Image Monitor".

Wired LAN

Wired LAN Settings

Item	Default
Wired LAN	Enable
Specify whether to enable or disable wired LAN.	
Transmission Speed	Auto-Negotiation
Select a wired LAN speed that matches your network environment. It is recommended that [Auto-Negotiation] be selected.	
Auto-Negotiation	
10BASE-T Full Duplex	
10BASE-T Half Duplex	
100BASE-TX Full Duplex	
100BASE-TX Half Duplex	

TCP/IP Settings

ltem	Default
DHCP	Enable
Specify whether to enable or disable DHCP.	
The IP address is allocated automatically from the DHCP server when [Enable] is selected. When [Disable] is selected, enter the IP address, subnet mask, and default gateway manually.	
IP Address Enter the projector's IP address.	0.0.0.0
Subnet Mask Enter the subnet mask.	0.0.0.0
Default Gateway Enter the default gateway.	0.0.0.0

Wireless LAN

Simple Settings

ltem	Default
Simple Wireless LAN Setup	-
Acquire the wireless LAN settings registered in the access point, and specify infrastructure mode wireless LAN settings for the projector automatically.	
This function may not work depending on the access point.	

Wireless LAN Settings

ltem	Default
Wireless LAN	Enable
Specify whether to enable or disable wireless LAN.	

ltem	Default
Communication Mode	Adhoc
Select the wireless LAN communication mode.	
Infrastructure	
Select this mode when you want to connect the projector to a wireless LAN network. You need to specify [SSID] and items in [Security] and [TCP/IP Settings] in this mode.	
• Adhoc	
Select this mode when you want to connect the projector and the computer directly. The projector specifies [SSID] and items in [Security] and [TCP/IP Settings] automatically in this mode.	
SSID	(blank)
Enter the SSID to connect to a wireless LAN network when [Infrastructure] is selected. Enter up to 32 characters.	
Channel	11
Select the channel to use when [Adhoc] is selected.	
Select the channel that matches the type of wireless LAN being used.	
The channels available might differ depending on the country.	
• 2.4 GHz: 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11	

TCP/IP Settings

ltem	Default
DHCP	Enable
Specify whether to enable or disable DHCP.	
The IP address is allocated automatically from the DHCP server when [Enable] is selected. If you select [Disable], manually enter the IP address, subnet mask, and default gateway.	
IP Address	0.0.0.0
Enter the projector's IP address.	
Subnet Mask Enter the subnet mask.	0.0.0.0

ltem	Default
Default Gateway	0.0.0.0
Enter the default gateway.	

Security

ltem	Default
Authentication Method	Open System
Select the wireless LAN authentication method.	
Open System	
WEP Shared Key	
WPA/WPA2-PSK	
• WPA2-PSK	
WPA/WPA2-EAP	
WPA2-EAP	
Encryption Method	No Encryption
Select the wireless LAN encryption method.	
No Encryption	
Communication is not encrypted. You can select [No Encryption] if you select [Open System] in [Authentication Method].	
• WEP	
You can select [WEP] if you select [Open System] in [Authentication Method].	
[WEP] is selected automatically when you select [WEP Shared Key] in [Authentication Method].	
TKIP/CCMP	
[TKIP/CCMP] is selected automatically when you select [WPA/WPA2-PSK] or [WPA/WPA2-EAP] in [Authentication Method].	
• CCMP	
[CCMP] is selected automatically when you select [WPA2-PSK] or [WPA2-EAP] in [Authentication Method].	

ltem	Default
Transmission WEP Key Number Select the Key number used to authenticate and encrypt transmissions	1
when you select [WEP] in [Encryption Method]. • 1	
• 2	
• 3	
• 4	
Network Key Enter the WEP key when you select [Open System] or [WEP Shared Key] in [Authentication Method] and select [WEP] in [Encryption Method].	(blank)
When using 64 bit WEP, up to 10 characters can be used for hexadecimal and up to 5 characters for ASCII. When using 128 bit WEP, up to 26 characters can be used for hexadecimal and up to 13 characters for ASCII.	
Enter PSK when [WPA/WPA2-PSK] or [WPA2-PSK] is selected in [Authentication Method].	
When using a PSK, up to 64 characters can be used for hexadecimal and 8 to 63 characters for ASCII.	
EAP Type	EAP-TLS
Specify the WPA/WPA2-EAP type when [WPA/WPA2-EAP] or [WPA2-EAP] is selected in [Authentication Method]. You can select EAP-TLS or EAP-PEAP.	
• EAP-TLS	
A client certificate and a CA certificate must be imported to the projector.	
• EAP-PEAP	
A CA certificate must be imported to the projector.	
Import Client Certificate	-
Imports the client certificate used for WPA/WPA2-EAP or WPA2-EAP when [EAP-TLS] is selected in [EAP Type].	

Item	Default
Client Certificate User Name	(blank)
Enter the client certificate user name used for WPA/WPA2-EAP or WPA2-EAP when [EAP-TLS] is selected in [EAP Type].	
This setting is optional. If it is blank, the default value of the certificate will be used to decrypt the certificate.	
Client Certificate List	-
Displays a list of imported client certificates.	
Import CA Certificate	-
Imports a CA certificate when [WPA/WPA2-EAP] or [WPA2-EAP] is selected in [Authentication Method].	
CA Certificate List	-
Displays a list of imported CA certificates.	
Delete Client/CA Certificate	-
Deletes all imported client and CA certificates.	
MS-CHAP v2 User Name	(blank)
Enter the MS-CHAP v2 user name when [EAP-PEAP] is selected in [EAP Type]. You can enter up to 31 characters including spaces.	
MS-CHAP v2 Password	(blank)
Enter the MS-CHAP v2 password when [EAP-PEAP] is selected in [EAP Type]. You can enter up to 128 characters including spaces.	
Windows Domain Name	(blank)
Enter the Windows domain name when [EAP-PEAP] is selected in [EAP Type]. You can enter up to 64 characters including spaces. "@" and backslashes cannot be used.	
Server Certificate Authentication	Enable
Specify whether to enable or disable server certificate authentication.	
Intermediate CA Permission	Enable
Specify whether to enable or disable intermediate CA permission.	
WPA/WPA2-EAP Connection Check	-
Checks the WPA/WPA2-EAP connection.	

Reset Wireless LAN Settings

ltem	Default
Reset Wireless LAN Settings	-
The following wireless LAN settings are reset to their defaults: Communication Mode, SSID, Channel, Authentication Method, Encryption Method, Transmission WEP Key Number, Network Key, DHCP, IP Address, Subnet Mask, Default Gateway.	

LAN Common

Specify the wired LAN and wireless LAN settings.

Preferred Default Gateway

ltem	Default
Preferred Default Gateway	Wired LAN
Select the network interface for the projector that is connected to both wired and wireless LAN.	
Wired LAN	
Wireless LAN	

DNS Settings

ltem	Default
Host Name	-
Display the projector's host name.	
The [Projector Name] in [Projector ID] is used as the projector's host name.	
Domain Name	(blank)
Enter the projector's domain name. Enter up to 63 characters.	

Projector Search Settings

ltem	Default
Projector Search	Enable
Specify whether or not to search for the projector automatically when the projector and the device connected to the projector are on the same network.	

HTTP Server Settings

ltem	Default
HTTP Port	80
Enter an HTTP port that is between 1 and 65535.	

Projector ID

ltem	Default
Projector Name	RPJxxxxxx*1
Enter an ID to identify the projector on the network. Enter up to 16 characters. You can use alphanumeric characters, hyphens, and periods for projector names. Only a letter can be used for the first character of the projector's name. Hyphens and periods cannot be entered consecutively and cannot be used for the last character of the projector's name.	
Identification Code	0000 to 9999*2
Enter the 4-digit identification code for connecting the projector and the computer using QuickProjection.	

- *] xxxxxx is the last six digits of the wired LAN's MAC address.
- *2 Each projector has a unique identification code as the default setting.

Setup Wizard

ltem	Default
Network Setting Wizard	-
Open Network Setting Wizard. For details about Network Setting Wizard, see page 66 "Connecting the Projector to a Network".	

Display Status

Wired LAN

ltem	Default
Current wired LAN settings are displayed. You can confirm the following items:	-
Connection Status, MAC Address, Transmission Speed, IP Address, Subnet Mask, Default Gateway	

Wireless LAN

ltem	Default
Current wireless LAN settings are displayed. You can confirm the following items:	-
Connection Status, Radio Field Intensity, MAC Address, Access Point BSSID, Communication Mode, Transmission Speed, Channel, SSID, Authentication Method, Encryption Method, IP Address, Subnet Mask, Default Gateway	

Firmware Version

ltem	Default
Network/USB Func. Firmware Version	-
Display the firmware version of the network and USB functions.	

Network Application Settings Menu

This section explains the items in the Network Application Settings menu under the Network/USB Settings menu tab.

You can also specify and check the items in the Network Application Settings menu using Web Image Monitor. However, the following items are available only on the menu screen.

- [Crestron WebUI User Auth.], [Crestron WebUI User Password], [Crestron WebUI Admin. Auth.],
 [Crestron WebUI Admin. Password], [Control System IP Address], [Control System IP ID], and
 [Control System Port] in [Administration Tools]
- [DLNA Certification Mode] in [Server]
 On Web Image Monitor, you can check [Network/USB Func. Firmware Version] on the top page.
 For details about Web Image Monitor, see page 166 "Managing the Projector Using Web Image Monitor".

Administration Tools

Web Image Monitor

ltem	Default
Web Image Monitor	Enable
Specify whether or not to allow the projector settings to be changed and checked using a web browser. To enable this setting, you must restart Web Image Monitor after making the change. For details about Web Image Monitor, see page 166 "Managing the Projector Using Web Image Monitor".	

AMX Device Discovery

Item	Default
AMX Device Discovery	Disable
Specify whether or not to allow the projector to be controlled and monitored by AMX Device Discovery. To use this function, an AMX controller is required in your network environment. For details about AMX Device Discovery, see the AMX LLC website.	

Crestron RoomView

Item	Default
Crestron RoomView	Disable
Specify whether or not to allow the projector to be controlled and monitored by Crestron RoomView. For details about Crestron RoomView, see page 169 "Controlling and Monitoring the Projector Using Crestron RoomView".	
Crestron WebUI User Auth.	Off
Specify whether or not to restrict access to Crestron WebUI with a password.	
Crestron WebUI User Password	(blank)
Enter the password for Crestron WebUI user authentication up to 26 characters.	
Crestron WebUI Admin. Auth.	Off
Specify whether or not to restrict access to the tools screen on Crestron WebUI with a password.	
Crestron WebUI Admin. Password	(blank)
Enter the password for Crestron WebUI administrator authentication up to 26 characters.	
Control System IP Address	0.0.0.0
Enter the IP address of Crestron Control System.	
Control System IP ID	3
Enter the IP ID to connect to Crestron Control System.	
Control System Port	41794
Enter the port number for communicating to Crestron Control System.	

PJLink

ltem	Default
PJLink Authentication	Off
Specify whether or not to set PJLink authentication.	

ltem	Default
PJLink Password	(blank)
Enter a password used when setting the PJLink authentication. Up to 32 alphanumeric characters can be used.	

Security

ltem	Default
Administrator Authentication	Off
Specify whether or not to set administrator authentication. A administrator password is required to change this setting.	
If administrator authentication is set, a password is required for the following operations:	
 Changing [Transmission WEP Key Number], [Network Key], [EAP Type], [Client Certificate User Name], [MS-CHAP v2 User Name], [MS-CHAP v2 Password], [Windows Domain Name], [Server Certificate Authentication], [Intermediate CA Permission], [Crestron WebUI User Auth.], [Crestron WebUI User Password], [Crestron WebUI Admin. Auth.], [Crestron WebUI Admin. Password], [PJLink Authentication], and [PJLink Password] 	
 Using the simple wireless LAN setup function and Network Setting Wizard 	
 Importing, deleting, or displaying client or CA certificates 	
 Turning the projector on or off via a network 	
 Changing the settings using Web Image Monitor 	
Executing [Reset Security Settings]	
Administrator Password	(blank)
Enter the administrator password. Up to 32 alphanumeric characters can be used. The current password is required to change the administrator password.	
Application Authentication When projecting images using an application installed on a smart device, specify whether or not to enter the application password.	Off

Item	Default
Application Password	(blank)
Enter the password to be used for Application Authentication.	
Up to 32 alphanumeric characters can be used.	
Reset Security Settings	-
Reset the values of the following settings protected by Administrator Authentication:	
[Transmission WEP Key Number], [Network Key], [EAP Type], [Client Certificate User Name], [MS-CHAP v2 User Name], [MS-CHAP v2 Password], [Windows Domain Name], [Server Certificate Authentication], [Intermediate CA Permission], [Crestron WebUI User Auth.], [Crestron WebUI User Password], [Crestron WebUI Admin. Auth.], [Crestron WebUI Admin. Password], [PJLink Authentication], and [PJLink Password].	

Miracast

Miracast

ltem	Default
Check Connection Terminal	Do not Skip
Select whether or not to allow connecting to the projector by operating only on the smart device and not requiring any confirmation procedure on the projector.	

Server

Remote Projection Control

ltem	Default
Remote Projection Control	Enable
Specify whether or not to enable the Remote Projection Control function. The Remote Projection Control function allows you to project images from a tablet computer or a smart device via a network.	
For details about how to project images using this function, see page 76 "Projecting Images Using DLNA-Compatible Devices".	

Still Image

ltem	Default
Display Effect	None
Select the display effect for switching the image.	
• None	
Push	
The current image is pushed off by the next image.	
• Wipe	
The current image is wiped off by the next image.	
• Fade	
The current image fades out and the next image fades in.	
Display Interval (sec.)	5 seconds
Enter the slide show switching interval from 5 to 999 seconds.	

Moving Image

Item	Default
Repeat	Off
Specify whether or not to repeat video playback.	

ltem	Default
DLNA Certification Mode	Disable
Specify whether the projector works as a DLNA-certified device. The projector is certified to DLNA 1.5 guidelines for still images. For details about the supported file types, see page 76 "Projecting Images Using DLNA-Compatible Devices".	
Enable	
The projector works as a DLNA-certified device. Of the video files sent from the DLNA server, those files that are not DLNA compatible are shown on the file list of the Server Projection screen.	
Disable	
The projector works according to its own specifications. It does not work as a DLNA-certified device. All the video files delivered from the DLNA server appear in the file list of the Server Projection screen.	

Display Status

PJLink

ltem	Default
PJLink Class	-
Display the PJLink class.	

Firmware Version

ltem	Default
Network/USB Func. Firmware Version	-
Display the firmware version of the network and USB functions.	

Administrator Authentication

Item	Default
Reset Administrator Password	-
Reset the administrator password.	
Reset PJLink Password	-
Reset the PJLink password.	

Display Status

ltem

Input

Displays the selected input signals.

Resolution

Displays the resolution.

This item appears when you select [Computer] or [HDMI] (RGB signals) as the input signal.

Frequency

Displays the synchronous frequency.

This item appears when you select [Computer] or [HDMI] (RGB signals) as the input signal.

Sync

Displays the synchronous signal polarity.

This item appears when you select [Computer] as the input signal.

Signal Format

Displays the Y/Pb/Pr signal format.

This item appears when you select [Y/Pb/Pr] or [HDMI] (Y/Pb/Pr signals) as the input signal.

Video Mode

Displays the video signal color format.

This item appears when you select [Video] as the input signal.

Lamp Time

Displays the lamp usage time.

Lamp Reset Count

Displays the number of lamp replacements.

Total Time

Displays the projector usage time.

Total CO2 Reduction

Displays the total reduction in CO_2 caused by setting the lamp to the eco mode.

Eco Time Ratio

Displays the ratio of the time eco mode was used to the total use time.

7

Item

Current Time

Displays the current time specified in [Current Time] in [Default Settings 2].

Main FW Version

Displays the version of the firmware on the main board.

Interactive Version (RICOH PJ WX4152NI only)

When the interactive kit is connected to the projector, the version of the interactive function is displayed.


8. Troubleshooting

This chapter explains the basic problems and troubleshooting methods when an indicator light is lit.

Indicator Display List

The projector uses the [Power] button, indicators, and beeps to notify you if a malfunction occurs. Check the indicator's status, and implement the following measures. "Tale in the table means the indicator is flashing.

Indicator location

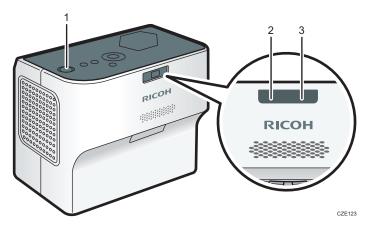

- 1. [Power] button
- 2. Lamp indicator
- 3. Temp indicator

Status	Causes	Solutions
The projector does not turn on. Lamp Temp	The projector has malfunctioned.	Disconnect the power cord, and contact your service representative.

Status	Causes	Solutions
"Hardware Error" was displayed, and the projector turned off during operation. Lamp Temp Flashing interval: 0.2 seconds	The projector has malfunctioned.	Disconnect the power cord, wait a while, and then turn on the projector again. You can also press and hold the [Power] button on the remote control or the control panel for two seconds. If the problem cannot be resolved, contact your service representative.
The lamp does not turn on. Lamp Temp	 The lamp has overheated and cannot turn on. The lamp's service life has expired. The projector has malfunctioned. 	Disconnect the power cord, wait a while, and then turn on the projector again. You can also press and hold the [Power] button on the remote control or the control panel for two seconds. If the lamp burns out, replace it with a new lamp. For details of how to replace the lamp, see page 159 "Replacing the Lamp".
The lamp turned off during operation. Lamp Temp Flashing interval: 1 second	 The lamp's service life has expired. The projector has malfunctioned. 	 Disconnect the power cord, wait a while, and then turn on the projector again. You can also press and hold the [Power] button on the remote control or the control panel for two seconds. If the lamp burns out, replace it with a new lamp. For details of how to replace the lamp, see page 159 "Replacing the Lamp".

Status	Causes	Solutions
The lamp does not turn on, turned off during operation, or it does not turn off.	The projector has malfunctioned.	Disconnect the power cord, wait a while, and then turn on the projector again.
Lamp Temp		You can also press and hold the [Power] button on the remote control or the control panel for two seconds.
Flashing interval: 0.2 seconds		If the problem cannot be resolved, contact your service representative.
The lamp turned off during operation, or it does not turn on. Lamp Temp	The lamp cover is not installed correctly.	Disconnect the power cord, and reinstall the lamp cover correctly. For details of how to install the lamp cover, see page 159 "Replacing the Lamp".
Flashing interval: 1 second		
"Temperature Error" was displayed, and the projector turned off during operation.	 The interior has overheated. The projector is being used in a high-temperature 	Place the projector so that the intake and exhaust vents are not blocked.
Lamp Temp	environment.	Disconnect the power cord, wait a while, and then turn on the projector again.
Flashing interval: 5 seconds		You can also press and hold the [Power] button on the remote control or the control panel for two seconds.
"Fan Error" was displayed, and the projector turned off during operation.	The cooling fan in the projector has malfunctioned.	Disconnect the power cord, and contact your service representative.
Lamp Temp		
Flashing interval: 1 to 4 times in 5 seconds		

Status	Causes	Solutions
The projector turned off during operation, or it does not turn on. Lamp Temp Flashing interval: 0.2 seconds	The projector has malfunctioned.	Disconnect the power cord, wait a while, and then turn on the projector again. You can also press and hold the [Power] button on the remote control or the control panel for two seconds. If the problem cannot be resolved, contact your service representative.
The lamp turned off during operation. Lamp Temp Flashing interval: 1 second	The interior has overheated. The projector is being used in a high-temperature environment.	Place the projector so that the intake and exhaust vents are not blocked. Disconnect the power cord, wait a while, and then turn on the projector again. You can also press and hold the [Power] button on the remote control or the control panel for two seconds. If the problem cannot be resolved, contact your service representative.
The lamp turned off during operation. Lamp Temp Flashing interval: 1 second	The lamp's service life has expired.	 Disconnect the power cord, wait a while, and then turn on the projector again. You can also press and hold the [Power] button on the remote control or the control panel for two seconds. If the lamp burns out, replace it with a new lamp. For details of how to replace the lamp, see page 127 "Replacing the Lamp".

Status	Causes	Solutions
The lamp does not turn on. Lamp Temp Flashing interval: 1 second	The projector has malfunctioned.	Disconnect the power cord, wait a while, and then turn on the projector again. You can also press and hold the [Power] button on the remote control or the control panel for two seconds. If the problem cannot be resolved, contact your service representative.
The lamp turned off during operation. Lamp Temp Flashing interval: 1 second	The projector has malfunctioned.	Disconnect the power cord, wait a while, and then turn on the projector again. You can also press and hold the [Power] button on the remote control or the control panel for two seconds. If the problem cannot be resolved, contact your service representative.

Common Problems

If you think a malfunction has occurred, check the following before contacting your service representative.

Problem	Solutions
Power does not turn on.	Make sure the power plug or connector is connected correctly.
	 Make sure the lamp cover is mounted correctly. For details, see page 159 "Replacing the Lamp".
	When projecting an image on the tabletop, be sure to press the [Power] button and wait until the projector cooling process completes before disconnecting the power cord. If we disconnecting the power cord.
	If you disconnect the power cord without pressing the [Power] button or the projector's power is turned off suddenly due to a power outage, you cannot turn the projector back on for up to approximately 25 minutes because it needs to release the internal heat. Wait until the projector cools down.
Power turns off during use.	 Make sure the environment in which the projector is being used is within the acceptable temperature range. Make sure the vents are not blocked.

Problem	Solutions
No image.	Make sure the input signal is switched correctly if [Auto Input Search] in [Default Settings 1] is set to [Off]. For details, see page 118 "Default Settings 1 Menu".
	 Make sure the AV mute function is not turned on. For details, see page 45 "Temporarily Blanking the Image and Muting the Audio".
	Check the settings of [Brightness] in [Image Adjustment]. For details, see page 108 "Image Adjustment Menu".
	Make sure the computer or AV equipment is connected to the projector correctly.
	For details, see page 30 "Connecting Equipment to the Projector".
	Make sure the computer's image output is switched correctly. For details, see page 37 "When projecting the screen of a laptop computer".
	Make sure the computer or AV equipment is working properly.
No sound.	Make sure the input signal is switched correctly if [Auto Input Search] in [Default Settings 1] is set to [Off]. For details about how to switch the input signal, see page 36 "Projecting an Image".
	Make sure the AV mute function is not turned on. For details, see page 45 "Temporarily Blanking the Image and Muting the Audio".
	Check the speaker's volume adjustment. For details, see page 43 "Adjusting the Volume of the Speaker".
	Make sure the computer or AV equipment is connected to the projector correctly. For details, see page 30 "Connecting Equipment to the Projector".
	Make sure the computer or AV equipment is working properly.

Problem	Solutions
Image is not projected normally.	Make sure the input signal is compatible with the projector. For details, see page 177 "List of Compatible Signals".
	Check the status of the video tape or other video source.
	 Execute [Auto Set Signals] in [Image Adjustment]. For details, see page 108 "Image Adjustment Menu".
	Check the settings of the computer's graphics driver. For details, see the manual provided with the computer.
Image is blurred. Image is partially out of focus.	Make sure the lens is clean. For details, see page 157 "Cleaning the Projection Window".
	Check the focus adjustment. For details, see page 39 "Adjusting the Focus".
	 Make sure the projection distance is within the projector's range. For details, see page 29 "Relationship Between the Projection Distance and the Screen Size".
	Check the installation angles of the projector and screen. For details, see page 39 "Adjusting the Angle of the Projection".
	 Check the settings of [Sharpness] and [Phase] in [Image Adjustment]. For details, see page 108 "Image Adjustment Menu".
Image is dark.	Check the settings of [Brightness] and [Contrast] in [Image Adjustment]. For details, see page 108 "Image Adjustment Menu".
	Make sure the lamp is not near the end of its service life. For details, see page 141 "Display Status".
	 Check the settings of [RGB Input Range] in [Image Adjustment]. For details, see page 108 "Image Adjustment Menu".
	 Make sure [3D Projection] in [Display Settings] is set to [Off]. For details, see page 112 "Display/Sound Settings Menu".

Problem	Solutions
Color is faded. Tint is poor.	Check the settings of [Color Saturation], [R-level], [G-level], and [B-level] in [Image Adjustment]. For details, see page 108 "Image Adjustment Menu".
	Make sure the screen is clean.
	 Check the settings of [Wall Color Mode] in [Display Settings]. For details, see page 112 "Display/Sound Settings Menu".
	Make sure the lamp is not near the end of its service life. For details, see page 141 "Display Status".
The projector's operation keys do not respond.	Make sure [Key Lock] in [Default Settings 2] is not set to [On]. For details, see page 120 "Default Settings 2 Menu".
The remote control does not respond.	 Make sure the ID assigned to the remote control and in the settings of [Remote Control ID] in [Default Settings 2] are the same. For details, see page 120 "Default Settings 2 Menu".
	 Make sure the batteries in the remote control are not dead.
	 Make sure the batteries are correctly loaded into the remote control. For details, see page 23 "Loading Batteries into the Remote Control".
	 Make sure the remote control is inside its effective range. For details, see page 22 "Effective Range of the Remote Control".
	Make sure there is nothing placed between the remote control and the projector.
	 Make sure the remote control receiver is not exposed to strong light.
Display language is unknown.	Press the [Menu] button, and then select the display language in [Language / XXX] (XXX indicates the current display language) on the [tab. For details, see page 120 "Default Settings 2 Menu".

Problem	Solutions
No images from USB devices.	Make sure the USB memory device is connected correctly.
	 Make sure the connected USB memory device is compatible with the projector.
	 Make sure there are JPEG or MPEG files saved on the USB memory device.
	 Make sure the compression format, file size, and other conditions are compatible with the projector. For details, see page 47 "Requirements for Projecting Images from a USB Device".
Wired LAN is disabled.	 Check the settings of [Wired LAN Settings] in [Network Settings] under [Network/USB Settings]. For details, see page 125 "Network Settings Menu".
Wireless LAN is disabled.	 Check the settings of [Wireless LAN Settings] in [Network Settings] under [Network/USB Settings]. For details, see page 125 "Network Settings Menu".
	 Make sure there is nothing placed between the computer and the projector.
	 Make sure the operating system of the computer is compatible with QuickProjection. For details, see page 73 "How to Use QuickProjection".
	Make sure that the projector is not in standby.
	Move the projector and access points closer to each other.
	 Make sure the access point and projector are close to each other, and move devices that emit radio signals such as microwave ovens further away.

Accessing the Online Knowledge Base

If you have any questions about the projector, refer to the knowledge base. Visit our global website listed below, and then access a knowledge base page in your language.

http://www.ricoh.com/support/

You can search the knowledge base by product name or keywo

9. Maintenance

This chapter explains the operating precautions and maintenance for the projector.

Operating Precautions

ACAUTION

- The machine's light uses a mercury vapor lamp that becomes high pressure when it is turned on. The lamp has the following characteristics, so be sure to handle it with care after understanding the contents. If the lamp explodes and either you are injured from broken pieces of glass, think you have gotten glass particles or mercury vapour in your eyes, or have inhaled glass particles or mercury vapour, contact a doctor immediately.
 - Deterioration or shock can cause the lamp's life span to end or the lamp to explode. If the lamp explodes, it may make a big noise.
 - The time that it takes for the lamp to reach its life span or explode depends on each individual lamp and its operating conditions. It is possible that it might explode the first time it is used.
 - If you use the lamp past its replacement period, the possibility of explosion increases.
 - If the lamp explodes, broken glass pieces may be scattered around the inside of the machine and ejected from the vent or other opening.
 - If the lamp explodes, a very small amount of mercury vapor in the lamp tube and broken glass pieces may be ejected from the vents or other opening.

Pay attention to the following points when using the projector:

- What to do if a lamp has exploded
 - If the lamp explodes, remove the power cord from the projector, leave the room while making sure it is thoroughly ventilated.
 - If the lamp explodes and you think that you have gotten glass particles or mercury vapor in your eyes or have inhaled either, contact a doctor immediately.
 - Clean up the area around the projector completely while being careful not to get injured from any broken glass pieces.
 - Throw away any food that was near the projector.
 - Ask your service representative to replace the lamp and inspect the projector.
- · What to do if a battery has leaked
 - If leakage from a battery adheres to your skin, rinse it with water immediately, and then contact a doctor.
 - Wipe off the leakage with tissue paper while being careful not to touch it.

- Soak the tissue paper that you used in water, and then throw it away as burnable trash.
- When you carry the projector by hand, hold it with both hands and keep it in a horizontal position. If you hold the projector with one hand, its covers may come off or you may drop it.
- If moving the projector under conditions including vibration and shock, use both the packing case and included carrying bag. Transporting the projector using the carrying bag only may damage it due to shock or vibration. Further, transporting the projector in a damaged packing case may damage the projector, so use a packing case that is strong enough to protect the projector from shock or vibration.
- Do not apply volatile substances such as insecticide to the projector. Also, do not bring the projector into long-term contact with rubber or vinyl products. Doing so may cause discoloration or the paint to peel.
- The projector is not intended for long-term continuous operation. Further, do not use the projector before removing it completely from the packing case. If a malfunction occurs when using the projector under these conditions, a fee is charged for repair even if the warranty is still in effect.
- Do not use locations that may be hot, such as near a heater. Doing so may cause the projector to malfunction or reduce the service life.
- Avoid locations that may become smoky. Particulates may adhere to the optical parts, reducing the service life and causing the image to darken.
- Using the projector close to a television or radio may adversely affect the images and sound.
- Do not expose the projector to salt air or corrosive gas. Also, do not place the projector in a laboratory or other location where a chemical reaction might occur. Doing so may cause the projector to malfunction.
- Moving the projector from a low-temperature location to a high-temperature location may cause
 water droplets to form on the projector lens and parts due to condensation. Continued use under
 such conditions may cause malfunction, so do not use the projector until the water droplets have
 evaporated.
- The air is thin at high elevations, so the cooling efficiency of the projector is reduced. Select [On] in [High Altitude Mode] before using.
- Do not use the projector in an extremely inclined position (±20° or greater). Doing so may cause malfunction or reduce the service life.
- Clean the air filter and the bottom air intake at a regular interval. If the filter becomes clogged, it
 may cause the inside of the projector to overheat and reduce the service life of the optical parts.
- If the air filter is damaged, replace it with a new one. Using a damaged air filter may allow dust or dirt to get inside the projector and cause the projector to stop working or malfunction.

Cleaning the Projector

MARNING

- Do not remove any covers or screws that are not mentioned in this manual. There are high
 voltage components inside the machine that may cause electric shock. Contact your service
 representative if any of the machine's internal components require maintenance, adjustment, or
 repair.
- Do not disassemble or modify the machine. Doing so may cause injury or malfunction.
- Do not attempt to clean or replace parts for a machine that is installed in a high location on a wall or ceiling. Doing so may cause it to fall down, resulting in an injury.
- Do not open the lamp cover of a machine that is installed on a wall or ceiling. Doing so may
 cause the lamp cover to fall down. If the lamp is broken, pieces of glass may fall and cause an
 injury.
- Contact your sales or service representative to clean or replace parts for a machine that is
 installed on a wall or ceiling.

ACAUTION

 When performing maintenance on the machine, always disconnect the power cord from the wall outlet.

Cleaning the Air Filter




- An error in which the lamp turns off by itself during operation may occur if the air filter and the
 bottom air intake vent get clogged and the interior of the projector overheats due to inadequate
 circulation of air. Clean the air filter and the bottom air intake vent also when "Temperature Error" is
 displayed.
- If an air filter is damaged, replace it with a new one. Using a damaged air filter may cause the
 projector to stop operating or malfunction. For details, contact your sales representative or service
 representative.

The air filter prevents dust and dirt from entering the interior of the projector. If you will use the projector, install the air filter.


If the message "Check the air filter for dirt." is displayed, check the air filter for dirt or dust, and use the following procedure to clean off any dirt or dust.

1. Disconnect the power plug.



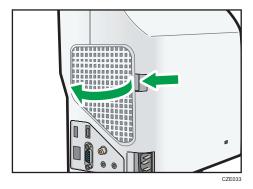

- 3. Remove the air filter.
- 4. Use a vacuum cleaner to clean any dirt or dust from the filter.
- 5. Install the air filter in the projector.

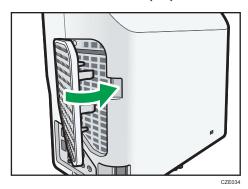


Insert the left side of the air filter in first, and then press the lever while pushing in the right side of the filter.

Make sure that the air filter is installed correctly. Otherwise, dirt and dust may enter the projector through any gaps and cause it to stop or malfunction.

Cleaning the Bottom Air Intake Vent

1. Place the projector on a stable and level surface with the bottom surface clearly visible.

Gently slide and pull out the bottom air intake vent cover to remove it, and then use a vacuum cleaner to clean any dirt or dust from the intake vent.

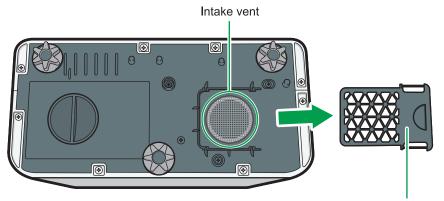

Bottom air intake vent cover

DHY852

Install the bottom air intake vent cover by sliding it gently back into place.Check that the bottom air intake vent cover is correctly installed.



- The message is displayed only once at the following occasions:
 - Every 500 hours
 - After the machine restarts when an error that the lamp turns off by itself during operation has occurred
- The message is displayed for 30 seconds after the machine has been turned on. The message disappears when you perform any operation.
- Depending on the environment in which the projector is located, the filter may get clogged earlier
 than expected. When any dust or dirt has visibly collected on the air filter, clean it regardless of
 whether the warning message is displayed or not. A buildup of dust on the air filter may cause poor
 ventilation, causing the interior of the projector overheat and operations to stop or malfunction.
- If vacuuming the air filter does not remove the dust and dirt, wash it with water.
 After washing the air filter with water, make sure to dry it completely before reinstalling it back in the projector.

Cleaning the Projection Window

When cleaning the projection window, make sure to do the following:

- Use a commercially available blower or cloth for cleaning glass, cleaning paper, lens cleaner, etc.
- The projection window surface scratches easily, so do not rub or tap it with a hard object.

Cleaning the Projector

When cleaning the projector, make sure to do the following:

- Gently wipe any dirt from the projector using a soft cloth. Using a damp cloth may cause water to seep inside the projector and cause electric shock or malfunction.
- Do not use benzene or paint thinners. Doing so may cause the projector to warp, discolor, or the paint to peel. Further, do not use cleaning cloths that contain chemicals.

Q

9

Replacing the Lamp

MARNING

- Before replacing the lamp, turn off the power and wait at least one hour to allow the machine
 to cool completely. If it is not completely cool, you may burn or injure yourself due to the inside
 of the machine and lamp unit being hot. If you replace the lamp without unplugging the power
 cord from the power outlet, electric shock or explosion may occur.
- Be careful when handling the used lamp so that it does not break. If it breaks, it may cause
 injury.
- Do not attempt to clean or replace parts for a machine that is installed in a high location on a
 wall or ceiling. Doing so may cause it to fall down, resulting in an injury.
- Do not open the lamp cover of a machine that is installed on a wall or ceiling. Doing so may cause the lamp cover to fall down. If the lamp is broken, pieces of glass may fall and cause an injury.
- Contact your sales or service representative to clean or replace parts for a machine that is
 installed on a wall or ceiling.

CAUTION

- Be sure to always use a dedicated replacement lamp that is new when replacing the lamp. If
 you use a lamp that is not dedicated, it may result in an explosion and injury.
- The machine's light uses a mercury vapor lamp that becomes high pressure when it is turned on.
 The lamp has the following characteristics, so be sure to handle it with care after understanding
 the contents. If the lamp explodes and you are either injured from broken pieces of glass, think
 you have gotten glass particles or mercury vapour in your eyes, or have inhaled glass particles
 or mercury vapour, contact a doctor immediately.
 - Deterioration or shock can cause the lamp's life span to end or the lamp to explode. If the lamp explodes, it may make a big noise.
 - The time that it takes for the lamp to reach its life span or explode depends on each individual lamp and its operating conditions. It is possible that it might explode the first time it is used.
 - If you use the lamp past its replacement period, the possibility of explosion increases.
 - If the lamp explodes, broken glass pieces may be scattered around the inside of the machine and ejected from the vent or other opening.
 - If the lamp explodes, a very small amount of mercury vapor in the lamp tube and broken glass pieces may be ejected from the vents or other opening.



- The lamp is a glass product. Do not touch the glass surface with bare hands, hit it forcefully, or damage it. For details about what to do if a lamp has exploded, see page 153 "Operating Precautions".
- This projector's lamp contains trace amounts of environmentally harmful inorganic mercury. Be careful not to break used lamps, and dispose of them in accordance with local regulations.


When the lamp is due for replacement, the message "The lamp is reaching the end of its life. Please change it." is displayed. Change the lamp as instructed.

When [Lamp Power] in [Energy Saving Settings] is specified as [Stnd.], replace the lamp after approximately 3,500 hours. When the setting is [Eco], replace it after approximately 5,000 hours. However, depending on the characteristics of the lamp and how the lamp is used, the image may become dim or the lamp may go out before the message is displayed. We recommend preparing a spare lamp, just in case.

Do not repeatedly turn off the projector immediately after the lamp is lit, or turn on the projector immediately after turning it off. Doing so may damage the lamp or shorten its life.

Furthermore, if the lamp is used for an extended period of time, the image may darken or the lamp may burn out. If this happens, replace the lamp with a new one.


- Turn over the projector and place it on a flat surface so that you can see the bottom of the projector.
- 2. Turn the knob counterclockwise, and then open the lamp cover.

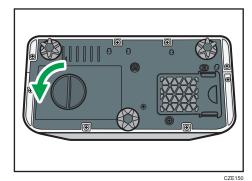


a

9


3. Raise the metal handle.

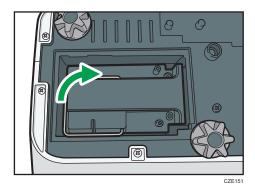

4. Hold the handle, and then pull the lamp unit out of the projector.

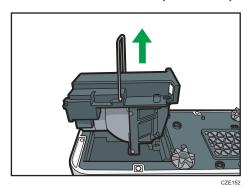

5. Insert a new lamp unit.

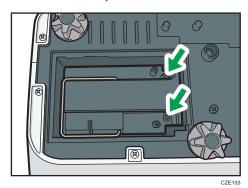

Make sure that the small projections inside the projector are inserted into the holes of the lamp unit properly.

6. Close the lamp cover.

Correctly install the outer lamp cover. Incorrect installation may prevent the lamp or projector from turning on.

7. Reset the lamp time.

For the reset method, see the manual provided with the lamp.



• The lamp usage time can be verified using [Lamp Time] in [Display Status].

Managing the Projector Using Projector Management Utility

Projector Management Utility conforms to the PJLink class 1 standards, and is compatible with all class 1 commands.

A maximum of 100 projectors connected to the network can be managed using one computer.

Projector Management Utility operating environment is described below.

- Supported operating system
 - Windows Vista Ultimate, Business, Home Premium, Home Basic, SP2 or later (32-bit and 64-bit versions)
 - Windows 7 Home Premium, Professional, Ultimate, Enterprise, SP1 (32-bit and 64-bit versions)
 - Windows 8, Pro, Enterprise (32-bit and 64-bit versions)
 - Windows 8.1, Pro, Enterprise (32-bit and 64-bit versions)
 - Windows 10 Home, Pro, Enterprise, Education (32-bit and 64-bit versions)
 - Windows Server 2008 Standard SP2 or later (32-bit and 64-bit versions)
 - Windows Server 2008 R2 Standard SP1 or later (64-bit version)



- This software is to control and monitor projectors manufactured by our company.
- See the Projector Management Utility Help for how to use Projector Management Utility.

Installing Projector Management Utility



• Log in to the computer with administrator privileges to install or uninstall utilities.

Projector Management Utility is included on the supplied CD-ROM.

- 1. Close all applications.
- 2. Insert the CD-ROM in the CD-ROM drive of your computer.

The launcher screen appears.

- 3. Specify a language and model name, and then click [Select].
- 4. Click [Projector Management Utility].
- 5. Install the application by following the on-screen instruction.

6. When the installation is complete, exit the installer.

A shortcut icon is created on the desktop.



 To uninstall Projector Management Utility, use the program delete function in [Control Panel] to delete "RICOH Projector Management Utility".

Settings Required to Use Projector Management Utility

Specify the following settings to control the projector using Projector Management Utility:

- Connect the projector to a network using [Network Settings]
- [Projector Name] in [Network Settings]
- [PJLink] items in [Network Application Settings]

For details, see page 125 "Network Settings Menu" and page 134 "Network Application Settings Menu".



• [PJLink Password] is not specified by factory defaults. It is recommended to register a password as soon as possible. If you forget the password, register a new password. The new password is valid.

Starting Projector Management Utility

The projector must be registered in advance. For details, see the Projector Management Utility Help.

Projector Management Utility acquires the projector registration information from the configuration file, when it is launched.



- To use Projector Management Utility, log on using administrator privileges.
- 1. Double-click the "Projector Management Utility" icon on the desktop.

The information for the projectors detected by the application is displayed.

The following information can be obtained:

- Projector status (power on and off, input signal, Av mute on and off, lamp status, error status)
- Projector information (projector name, manufacturer, IP address)

The functions that can be operated from Projector Management Utility are power on and off, input signal switching, and mute.



- Depending on the setting in [NW Settings on Standby], the projector does not respond even if the
 projector is in standby mode. Press the [Power] button, or change the setting in [NW Settings on
 Standby] to [Wired LAN] or [Wired/Wireless LAN] so that the projector can be turned on from
 standby mode via a wired LAN or wireless LAN.
- If a communications error prevents the projector from being detected, "?" is displayed. If the connection failed due to an incorrect password or other reason, "x" is displayed.
- Mute function is not applied if it is not supported by the projector. The projector supports "Video & Audio" mute. "Video" mute and "Audio" mute are not supported.
- An input signal cannot be switched if you select the input signal that is not supported by the
 projector. The following table describes the supported input signal by the projector and the
 corresponding input name displayed in Projector Management Utility:

Projector input signal	PJLink input name
Computer	RGB1
Y/Pb/Pr	RGB2
HDMI	DIGITAL1
Video	VIDEO1
Network PC	NETWORK1
Server	NETWORK2
Miracast	NETWORK3
USB Memory	STORAGE1

Managing the Projector Using Web Image Monitor

Using Web Image Monitor, you can check the projector status and change settings.

To use this function, specify the following settings:

- Connect the projector to a network using [Network Settings]
- Select [Enable] in [Web Image Monitor] under [Network Application Settings]
 To enable this setting after you change it, you must restart Web Image Monitor.

For details, see page 125 "Network Settings Menu" and page 134 "Network Application Settings Menu".

The following web browsers are recommended for Web Image Monitor:

• Windows:

Internet Explorer 8.0 or higher

Microsoft Edge

Mac OS

Safari 8.0 or higher




- Display and operation problems can occur if you are using a non-recommended web browser.
- You must enable JavaScript and cookies on your web browser to use Web Image Monitor.
- If you use Internet Explorer, you must enable native XMLHTTP support to use Web Image Monitor.
- You can access Web Image Monitor more quickly by registering the projector's URL as a bookmark.
- Depending on the setting in [NW Settings on Standby], the projector does not respond even if the
 projector is in standby mode. Press the Power button, or change the setting in [NW Settings on
 Standby] to [Wired LAN] or [Wired/Wireless LAN] so that the projector can be turned on from
 standby mode via a wired LAN or wireless LAN.

Displaying Web Image Monitor

- 1. Start your web browser.
- 2. Enter "http://(projector's IP address)/" in your web browser's URL bar.

Top Page of Web Image Monitor appears.

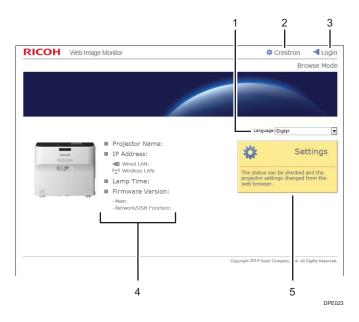

1. Language

Select the display language for Web Image Monitor.

Available languages are as follows:

English, French, German, Spanish, Italian, Dutch, Japanese, Simplified Chinese.

2. Crestron

Displays Crestron WebUI. For details about Crestron WebUI, see page 169 "Controlling and Monitoring the Projector Using Crestron RoomView".

This item appears when [Crestron RoomView] in [Network Application Settings] is set to [Enable].

3. Login/Logout

To enter edit mode, click [Login], and then enter the administrator password. To leave edit mode, click [Logout].

This item appears when [Administrator Authentication] in [Network Application Settings] is set to [On].

4. Status area

You can check the projector name, IP address, lamp time, and firmware version.

5. Settings

Displays the settings screen. On the settings screen, you can specify and check the items in the USB Settings menu, Network Settings menu, and Network Application Settings menu. For details about each setting, see page 123 "USB Settings Menu", page 125 "Network Settings Menu", or page 134 "Network Application Settings Menu".

About Browse Mode and Edit Mode

When [Administrator Authentication] in [Network Application Settings] is set to [On], there are two modes available with Web Image Monitor: browse mode and edit mode.

Browse Mode

This mode requires no user login.

In browse mode, you can check the projector status and settings, but you cannot change the projector settings.

Edit Mode

The administrator password is required for the user to log in to the edit mode.

In edit mode, you can check the projector status and settings, and also change the projector settings.



When [Administrator Authentication] in [Network Application Settings] is set to [Off], you can use
 Web Image Monitor in edit mode without entering a password.

Login to Edit Mode

- 1. On Top Page, click [Login].
- 2. Enter the administrator password, and then click [Login].

Enter the password that is specified in [Administrator Password] under [Network Application Settings].



• Depending on the configuration of your web browser, the password might be saved. If you do not want to save the password, configure your web browser's settings so that this information is not saved.

Controlling and Monitoring the Projector Using Crestron RoomView

The projector supports Crestron RoomView. Crestron RoomView is a system developed by Crestron Electronics for controlling and monitoring multiple devices on a network. For more information, see the Crestron Electronics website.

What you can do with Crestron RoomView

- Controlling and monitoring the projector using a web browser
 Using Crestron WebUI, you can control and monitor the projector from your computer. For details, see page 169 "Displaying Crestron WebUI" and page 170 "Using Crestron WebUI".
- Controlling and monitoring the projector using Crestron software
 Using the Crestron RoomView Express/Crestron RoomView Server Edition, software supplied by Crestron Electronics, you can monitor the projector, communicate with the help desk, and send emergency messages. For details, see the Crestron Electronics website.

To use this function, specify the following settings:

- Connect the projector to a network using [Network Settings]
- Select [Enable] in [Crestron RoomView] under [Network Application Settings]
- Specify other items in [Crestron RoomView] as required

For details, see page 125 "Network Settings Menu" and page 134 "Network Application Settings Menu".



Depending on the setting in [NW Settings on Standby], the projector does not respond even if the
projector is in standby mode. Press the Power button, or change the setting in [NW Settings on
Standby] to [Wired LAN] or [Wired/Wireless LAN] so that the projector can be turned on from
standby mode via a wired LAN or wireless LAN.

Displaying Crestron WebUI



- To use Crestron WebUI, Adobe Flash® Player must be installed on your computer.
- 1. Start your Web browser.
- Enter "http://(projector's IP address)/" in your Web browser's URL bar.
 The top screen of Web Image Monitor appears.

3. Click [Crestron] at the top right on Web Image Monitor.

The top screen of Crestron WebUI appears.





• If [Crestron WebUI User Auth.] under [Network Application Settings] is enabled, a password is required to access Crestron WebUI.

Using Crestron WebUI

Top screen

9


This screen is displayed when you access Crestron WebUI, or click [Exit] on the tools screen or information screen. You can switch the input signal, adjust the image and the volume of the speaker, and turn off the projector on this screen.





Tools screen

You can display the tools screen by clicking the [Tools] tab. You can specify the projector's network settings and Crestron RoomView settings on this screen.

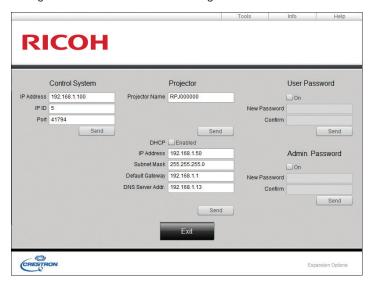

Information screen

You can display the information screen by clicking the [Info] tab. You can check the projector's information, such as the firmware version and lamp status on this screen.

Help desk window

You can display the help desk window by clicking the [Help] tab. You can send and receive a message to administrators who are using Crestron RoomView Express in this window.



UNote

 If [Crestron WebUI Admin. Auth.] under [Network Application Settings] is enabled, a password is required to access the tools screen.

J

Consumables

- Lamp unit
 RICOH PJ Replacement Lamp Type 1 1
- Air filter
 RICOH PJ Replacement Air Filter Type4



• Contact your sales or service representative for information about consumables.

10. Appendix

This chapter explains the projector's specifications and compatible signals. This chapter also explains where to inquire about the projector and related services.

Specifications for the Projector

Component	Specifications
Power consumption	Standard mode: 313 W
	Eco mode: 208 W
Power consumption (Standby mode)	Regular standby mode: 0.22 W
	Network standby mode (Wired LAN): 1.1 W
	Network standby mode (Wired/Wireless LAN): 1.5 W
Weight	Approx. 3.0 kg (6.7 lb.)
External dimensions (not including protruding parts)	257 × 144 × 221 mm (10.1 × 5.7 × 8.7 inches)
Operating environment	Temperature: 5 to 35°C (73 to 95°F), Humidity: 30 to 70%
Power requirements	• ® Region A (mainly Europe and Asia)
	220–240 V, 1.7 A, 50/60Hz
	120 V, 3.7 A, 60Hz
Display element	Display method
	Single-chip DLP [®]
	Panel size
	0.65 inches
	Pixels
	1,024,000 pixels (1,280 H × 800 V)
Projection method	Ultra short-focus lens/mirror projection method
Lamp	High-pressure mercury lamp (Standard mode: 250 W, Eco mode: 150 W)
Projection screen size	48 to 80 inches

Component	Specifications			
Projection distance	12 to 25 cm (4.6 to 9.8 inches)			
Speaker	2 W (Mono)			
Connection ports	 Computer In port Mini D-SUB15 × 1 HDMI port (HDCP compliant)* HDMI × 1 Video In port RCA_1pin × 1 Audio In port Mini Jack × 1 Audio Out port Mini Jack × 1 Control port USB-TYPE-minB × 1 USB port TYPE-A × 1 USB 2.0 High-speed Output voltage: DC 5 V Supply current: 500 mA LAN port RJ-45 10BASE-T/100BASE-TX/1000BASE-T 			
Wireless LAN	Based on IEEE 802.11a/b/g/n			

* HDCP (High-bandwidth Digital Content Protection) is a copyright protection method to encrypt digital signals across the DVI/HDMI interface and prevent unauthorized copying. The HDCP specification was developed and is licensed by Digital Content Protection, LLC. The HDMI port on this projector is HDCP compliant and can project digital video content protected by HDCP. Updates to the HDCP specification may void this compliance and prevent access to protected data.

List of Compatible Signals

Set the computer and AV equipment output signals so that they match the input signals compatible with the projector.

If the image flickers, blurs, or is not displayed, check that the resolution and frequency of the input signals is supported by the projector.



 Images with a resolution greater than 1280 × 800 are compressed when displayed, so some of the information may be lost or the image may deteriorate.

Video Input

Compatible mode

NTSC, PAL, SECAM, PAL-M, PAL-N, PAL60, NTSC4.43

Y/Pb/Pr Input

Compatible mode

480i, 480p, 576i, 576p, 720/50p, 720/60p, 1080/50i, 1080/60i, 1080/50p, 1080/60p

Computer Input

Mode	Resolution		Frequency		
	Horizontal (pixel)	Vertical (pixel)	Vertical (Hz)	Horizontal (kHz)	Clock (MHz)
640 × 480			59.93	31.46	25.17
	0.40	400	72.81	37.86	31.50
	640	480	75.00	37.50	31.50
			85.01	43.27	36.00
720 × 400	720	400	85.04	37.93	35.50
800 × 600	800	600	56.25	35.16	36.00
			60.32	37.88	40.00
			72.19	48.08	50.00
			75.00	46.88	49.50
			85.06	53.67	56.25
848 × 480	848	480	60.00	31.02	33.75
1024 × 768	1024	768	60.00	48.36	65.00
			70.07	56.48	75.00
	1024		75.03	60.02	78.75
			85.00	68.68	94.50
1152 × 864	1152	864	75.00	67.50	108.00
1280 × 720	1280	720	60.00	45.00	74.25
1280 × 768	1280	768	59.99	47.40	68.25
			59.87	47.78	79.50
			74.89	60.29	102.25
			84.84	68.63	117.50
1280 × 800	1280	800	59.91	49.31	71.00
			59.81	49.70	83.50
			74.93	62.79	106.50
			84.88	71.55	122.50
1280 × 960	1280	960	60.00	60.00	108.00
			85.00	85.94	148.50
1280 × 1024	1280	1024	60.02	63.98	108.00
			75.02	79.98	135.00
			85.02	91.15	157.50
1360 × 768	1360	768	60.02	47.71	85.50
1366 × 768	1366	768	60.00	48.00	72.00
		-	59.79	47.71	85.50
1400 × 1050	1400	1050	59.95	64.74	101.00
			59.98	65.32	121.75
			74.87	82.28	156.00
1440 × 900		900	59.90	55.47	88.75
	1440		59.89	55.93	106.50
			74.98	70.64	136.75
1600 × 000	1600	000	84.84	80.43	157.00
1600 × 900	1600	900	60.00	60.00	108.00
1600 × 1200	1600	1200	60.00	75.00	162.00
1680 × 1050	1680	1050	59.88	64.67	119.00

HDMI Input

Mode	Resol	ution		Frequency	
Mode	Horizontal (pixel)	Vertical (pixel)	Vertical (Hz)	Horizontal (kHz)	Clock (MHz)
480i	720	242.5	59.940	15.734	13.500
576i	720	288	50.000	15.625	13.500
480p	720	483	59.940	31.469	27.000
576p	720	576	50.000	31.250	27.000
720 / 50p	1280	720	50.000	37.500	74.250
720 / 60p	1280	720	60.000	45.000	74.250
1080 / 50i	1920	540	50.000	28.125	74.250
1080 / 60i	1920	540	60.000	33.750	74.250
	1920	1080	24.000	27.000	74.250
1080 / 24p				+	74.250
1080 / 30p	1920	1080	30.000	33.750	
1080 / 50p	1920	1080	50.000	56.250	148.500
1080 / 60p	1920	1080	60.000	67.500	148.500
			59.93	31.46	25.17
640 × 480	640	480	72.81	37.86	31.50
			75.00	37.50	31.50
			85.01	43.27	36.00
			56.25	35.16	36.00
000 000	000	200	60.32	37.88	40.00
800 × 600	800	600	72.19	48.08	50.00
			75.00	46.88	49.50
0.40 400	0.40	400	85.06	53.67	56.25
848 × 480	848	480	60.00	31.02	33.75
			60.00	48.36	65.00
1024 × 768	1024	768	70.07	56.48	75.00
			75.03	60.02	78.75
1150 001	4450	221	85.00	68.68	94.50
1152 × 864	1152	864	75.00	67.50	108.00
1280 × 720	1280	720	60.00	45.00	74.25
			59.99	47.40	68.25
1280 × 768	1280	768	59.87	47.78	79.50
			74.89	60.29	102.25
			84.84	68.63	117.50
			59.91	49.31	71.00
1280 × 800	1280	800	59.81	49.70	83.50
			74.93	62.79	106.50
			84.88 60.00	71.55 60.00	122.50
1280 × 960	1280	960	85.00	85.94	108.00 148.50
			60.02	63.98	108.00
1280 × 1024	1280	1024	75.02	79.98	135.00
1200 ^ 1024	1200	1024	85.02	91.15	157.50
1360 × 768	1360	768	60.02	47.71	85.50
1300 ^ 700	1300	700	60.02	48.00	
1366 × 768	1366	768	59.79	48.00	72.00 85.50
			59.79	64.74	101.00
1400 × 1050	1400	1050	59.98	65.32	121.75
1-00 ^ 1000	1+00	1000	74.87	82.28	156.00
			59.90	55.47	88.75
			59.89	55.93	106.50
1440 × 900	1440	900	74.98	70.64	136.75
			84.84	80.43	157.00
1600 × 900	1600	900	60.00	60.00	108.00
			59.88	64.67	119.00
1680 × 1050	1680	1050	J3.00	U+.U1	119.00

3D Format

O: Supported

X: Not Supported

Computer input

Mode	Frequ	uency		3D format	
Wode	Vertical (Hz)	Clock (MHz)	Frame Sequential	Side by Side	Top and Bottom
640 × 480	59.93	25.17	0	0	0
800 × 600	60.32	40.00	0	0	0
1024 × 768	60.00	65.00	0	0	0
1280 × 960	60.00	108.00	0	0	0
1280 × 1024	60.02	108.00	0	0	0
1360 × 768	60.02	85.50	0	0	0
1366 × 768	60.00	72.00	0	0	0
1300 ^ 700	59.79	85.50	0	0	0
1440 × 900	59.90	88.75	0	0	0
1440 × 900	59.89	106.50	0	0	0
1600 × 900	60.00	108.00	0	0	0
1600 × 1200	60.00	162.00	0	0	0
1680 × 1050	59.88	119.00	0	0	0
1000 × 1050	59.95	146.25	0	0	0

Y/Pb/Pr input

Mode		3D format		
Wode	Frame Sequential	Side by Side	Top and Bottom	
480i	0	0	0	
576i	0	0	0	
480p	×	0	0	
576p	×	0	0	
720 / 60p	×	0	0	
1080 / 60i	×	0	0	
1080 / 60p	×	0	0	

Video input

Mode		3D format		
Wode	Frame Sequential	Side by Side	Top and Bottom	
NTSC	0	×	×	
PAL	0	×	×	


HDMI input

	Freq	uency		3D fo	rmat	
Mode	Vertical (Hz)	Clock (MHz)	Frame Sequential	Side by Side	Top and Bottom	Frame Packing
640 × 480	59.93	25.17	0	0	0	×
800 × 600	60.32	40.00	0	0	0	×
1024 × 768	60.00	65.00	0	0	0	×
1280 × 960	60.00	108.00	0	0	0	×
1280 × 1024	60.02	108.00	0	0	0	×
1360 × 768	60.02	85.50	0	0	0	×
	60.00	72.00	0	0	0	×
1366 × 768	59.79	85.50	0	0	0	×
	59.90	88.75	0	0	0	×
1440 × 900	59.89	106.50	0	0	0	×
1600 × 900	60.00	108.00	0	0	0	×
1600 × 1200	60.00	162.00	0	0	0	×
1000 1200	59.88	119.00	0	0	0	×
1680 × 1050	59.95	146.25	0	0	0	×
480i	59.940	13.500	0	0	0	×
576i	50.000	13.500	0	0	0	×
480p	59.940	27.000	×	0	0	×
576p	50.000	27.000	×	-		×
	60.000	74.250	×	0	0	×
720 / 60p				0	0	
1080 / 60i	60.000	74.250	×	0	0	×
1080 / 60p 720 / 50p	60.000	148.500	×	0	0	×
(Frame Packing)	50.000	148.500	×	×	×	0
720 / 60p (Frame Packing)	59.940/60.000	148.350/148.500	×	×	×	0
1080 / 24p (Frame Packing)	23.976/24.000	148.350/148.500	×	×	×	0
1080 / 50i (Side by Side)	50.000	74.250	×	0	×	×
1080 / 60i (Side by Side)	59.940/60.000	74.176/74.250	×	0	×	×
720 / 50p (Top and Bottom)	50.000	74.250	×	×	0	×
720 / 60p (Top and Bottom)	59.940/60.000	74.176/74.250	×	×	0	×
1080 / 24p (Top and Bottom)	23.976/24.000	74.176/74.250	×	×	0	×

Specifications for Ports

Computer In Port

Pin assignment

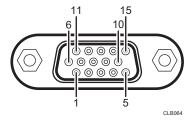

Pin No.	Pin des	cription
rin ino.	During RGB input	During Y/Pb/Pr input
1	Video signal (R)	Color difference signal (Pr)
2	Video signal (G)	Luminance signal (Y)
3	Video signal (B)	Color difference signal (Pb)
4	N.C	-
5	GND	-
6	GND (R)	GND (Pr)
7	GND (G)	GND (Y)
8	GND (B)	GND (Pb)
9	N.C	-
10	GND	-
11	N.C	-
12	I ² C Data	-
13	Horizontal sync signal	-
14	Vertical sync signal	-
15	I ² C CLOCK	-

10

Input Signal

• RGB input

RGB signals: 0.7V (p-p), 75 Ω

Horizontal sync signal: TTL level (Pos/neg polarity)
Vertical sync signal: TTL level (Pos/neg polarity)

• Y/Pb/Pr input

Y signal: 1.0V (p-p), 75 Ω Pb/Pr signals: 0.7V (p-p), 75 Ω

Control Port

Interface format

Communication method	RS-232C, 115,200bps, No Parity, Data Length: 8 bits; Stop Bit Length: 1bit
Communication format	#(23h)' + Command + CR (0Dh) Only 1 command valid per communication. For the available commands, see "Main commands".
Data format	For input commands, only ASCII-compliant all-uppercase alphanumeric characters supported.
Replies	 Acknowledge (Aborted) '=(3Dh)' + Command(3byte) + ':(3Ah)' + 'E(45h)' + 'R(52h)' + 'O(30h)' + CR(0Dh) No acknowledge '=(3Dh)' + 'E(45h)' + 'R(52h)' + 'O(30h)' + CR(0Dh) For details of Acknowledge (Normally ended), see "Main commands".

Main commands

ltem	Command	Acknowledge (Normally ended) *
Power on	PON	=PON:SC0
Power off	POF	=POF:SC0

^{*} CR is added to the end of "Acknowledge (Normally ended)".



- The control port is for service representatives or administrators of the projector.
- A USB driver must be installed to control the projector using the control port. For details, contact your service representative.

Information

Copyrights


This projector uses open source and/or third party software. To check the information about software copyrights, see the documents in the "OSS" folder on the supplied CD-ROM.

You can also view and download the source code from:

http://www.support-download.com/bb/html/dr_ut_e/oss/index.htm

Updating the Firmware

You can download the latest firmware from our website. For details about how to update the firmware, see the manual downloaded with the firmware.

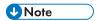

- You can check the current firmware version on the menu screens of the projector.
 - Main FW Version: Display Status menu
 - Network/USB Func. Firmware Version: Network/USB Settings menu ⇒ Network Settings, USB Settings or Network Application Settings Menu⇒ Display Status

Where to Inquire

Contact your sales or service representative for further information about topics covered in this manual or to inquire about topics not covered in this manual.

Trademarks

Adobe, Acrobat, and Flash Player are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

AMX and the AMX logo are registered trademarks of AMX LLC of the United States.



Crestron, the Crestron logo, and RoomView are trademarks or registered trademarks of Crestron Electronics. Inc. in the United States and other countries.



DLNA, the DLNA logo, and DLNA CERTIFIED are trademarks of Digital Living Network Alliance.



DLP is a registered trademark of Texas Instruments. DLP Link is a trademark of Texas Instruments.

HDMI and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.

Macintosh, Mac OS, and Safari are registered trademarks of Apple Inc., registered in the U.S. and other countries.

Microsoft, PowerPoint, Windows, Windows Server, Windows Vista, and Internet Explorer are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Miracast is a registered trademark of the Wi-Fi Alliance.

PJLink trademark and the PJLink logo are trademarks applied for registration or are already registered in Japan, the United States of America and other countries and areas.



VGA is a trademark of International Business Machines Corporation in the United States, other countries, or both.

The Wi-Fi CERTIFIED Logo is a registered mark of the Wi-Fi Alliance.



The proper name of Internet Explorer 8 is Windows® Internet Explorer® 8.

The proper names of the Windows operating systems are as follows:

• The product names of Windows Vista are as follows:

Microsoft® Windows Vista® Ultimate

Microsoft® Windows Vista® Business

Microsoft® Windows Vista® Home Premium

Microsoft® Windows Vista® Home Basic

• The product names of Windows 7 are as follows:

Microsoft® Windows® 7 Home Premium

Microsoft® Windows® 7 Professional

Microsoft® Windows® 7 Ultimate

Microsoft® Windows® 7 Enterprise

• The product names of Windows 8 are as follows:

Microsoft® Windows® 8

Microsoft® Windows® 8 Pro

Microsoft® Windows® 8 Enterprise

• The product names of Windows 8.1 are as follows:

Microsoft® Windows® 8.1

Microsoft® Windows® 8.1 Pro

Microsoft® Windows® 8.1 Enterprise

• The product names of Windows 10 are as follows:

Microsoft® Windows® 10 Home

Microsoft® Windows® 10 Pro

Microsoft® Windows® 10 Enterprise

• The product names of Windows Server 2003 R2 are as follows:

Microsoft® Windows Server® 2003 R2 Standard Edition

• The product names of Windows Server 2008 are as follows:

Microsoft® Windows Server® 2008 Standard

• The product names of Windows Server 2008 R2 are as follows:

Microsoft® Windows Server® 2008 R2 Standard

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

INDEX

		Closed Caption	115
00.1	100	Color Saturation	109
3D format		Common problems	148
3D Projection	114	Communication indicator	93
A		Compatible signals	177
AC In socket	19	Compatible signals (Computer input)	178
Accessories		Compatible signals (HDMI input)	179
Ad hoc mode		Compatible signals (Video input)	177
Adjustable feet		Compatible signals (Y/Pb/Pr input)	177
Adjusting for keystone distortion		Computer In port	
Adjusting the focus		Computer USB adapter	85
Adjusting the projected image		Computer-free presentations	49
Adjusting the projection angle		Connecting a computer	30, 31
Adjusting the volume		Connecting an external speaker	33
Administration Tools		Connecting AV equipment	32
Administrator Authentication		Connecting equipment	30
Air filter		Connecting the USB device	49
Angle of the projection		Connecting to a network	66
Arrow buttons		Consumables	173
Aspect		Contrast	108
Audio In port		Control panel	16
Audio Out port		Control port	183
Auto Input Search		Copyrights	185
Auto Keystone		Copyrights to Images	
Auto Set Signals		Crestron RoomView	
Auto Start Slideshow		Crestron WebUI	
AV Mute button		Current Time	120, 142
В		D	
B-level	109	D-sub to component video cable	32
Background on No Signal		Default Settings 1 menu	118
Basic operations		Default Settings 2 menu	120
Battery indicator		Detailed Signal Settings	110, 111
, Beep		Digital camera	47, 49
Blanking the image		Digital zoom function	41
Bottom Air Intake Vent		Direct Power On	121
Bottom view		Disconnecting the USB device	51
Brightness		Display Effect	
Browse mode		Display Guidance	118
		Display Interval (sec.)	60
С		Display Position	113
Changing the settings	105	Display Status124, 13	33, 139, 141
Cleaning	6, 1 <i>57</i> , 1 <i>5</i> 8	Display/Sound Settings menu	112

DLNA	77 Input	141
DLNA server	79 Input button	16, 20
DVI-to-HDMI cable	Inputting text	24
E	Inquiry	185
	Installation Error	143
Eco button21, 4	iniake venis	19
Eco Mode	interactive	119
Eco Time Ratio	interactive function	83
Edit mode	interactive wode	82
Effective range	IIIIeiuciive veisioii	142
Electronic pen	⁹⁸ Introduction	ć
Energy Saving Settings menu11		
Enlarging the image		
Enter button16, 2	21 JPEG Conversion Tool	53, 54
Error12	¹³ K	
Exhaust vents	18	
External speaker	Kensington slot	
F	Key Lock	
	Keystone	
Fan Error12	,	
Firmware18	. 0	152
Focus	L Comments of the Comments of	
Focus lever		1.50
Freeze button20, 4		
Freezing the image	Lamp cover	
Frequency12	Lamp indicator	
Front view		
G	Lamp Pwr on No Signal	
	Lamp Reset Count	
G-level	'	
H	LAN Common	
Hardware Error12	LAN port	
HDMI cable	Language	
	Labiob comboler	
HDMI port	Len bollon	
High Altitude Mode12	Len-side view	17
How to read this manual	.9 Loading batteries	23
<u> </u>	M	
ID button	Magnify Dollon	20, 44
Image Adjustment menu 10	Tridiii Toticiiotio	13
Image Eco11		
Important		
Indicator display list	⁴³ Manuals	
Infrastructure mode		

Menu button	16, 20	Projection Mode	27, 12
Menu screen	103, 105, 107	Projection screen size	29
Miracast	81, 137	Projection window	17, 157
Model-specific information	10	Projector ID	132
Music	62	Projector Management Utility	163, 164
Muting the audio	45	Projector parts	1
N		Q	
Narration	62	QuickProjection	73, 74
Network	•	R	
Network Application Settings mer	าบ134	D. Cl. I. I	
Network Setting Wizard6	6, 67, 68, 70, 71	R-Click button	
Network settings	66	R-level	
Network Settings menu	125	Read This First	
Network/USB Settings menu	123, 125, 134	Rear view	
Noise Reduction	109	Rechargeable battery	
Notes	9	Recharging the electronic pen	
Number buttons	20	Reducing the size of the projected in	-
NW Settings on Standby	117	Remote control	
0		Remote Control ID	
		Remote control receiver	
Operating Instructions		Replacing the lamp	
Operating Instructions (Interactive		Reset All	
Operating precautions		Resolution	
Operations while projecting imag	es43	Restoring the settings	
P		RGB cable	
Para huttana	2.1	RGB Input Range	
Page buttonsPen nib switch		RICOH PJ Interactive Software	
Picture Mode		Right button	
PJLink		Right-side view	18
		S	
Point adjustment button Positioning the projector		Security	12
Power button		Security slot	
Power Off on No Signal		Server	
Power on Standby		Settings	
Power switch		Setup Wizard	
Power Timer		Sharpness	
Precautions		Signal Format	
Presentation timer	,	Simple Wireless LAN Setup	
Projecting an image		Slide show	
Projecting the computer's screen		Sound button	
Projection distance		Sound Quality	
	29	Speaker	

Specifications for ports	182
Specifications for the projector	175
Start Guide	8
Start Guide (Interactive Function)	8
Start menu	36
Start on Input Detection	121
Start-up Screen	118
Startup Password	122
Symbols	9
Sync	141
<u>T</u>	
Temp indicator	17
Temperature Error	143
Timer button	21, 46
Tint	109
Top view	16
Total CO2 Reduction	141
Total Time	141
Trademarks	186
Troubleshooting99, 101, 14	3, 148
Turning off the projector	38
Turning on the projector	35
Turning on the projector	35
- , ,	
U	8
U Ultra Short Throw Projector Setting Guide	8 185
U Ultra Short Throw Projector Setting Guide Updating the firmware	8 185
U Ultra Short Throw Projector Setting Guide Updating the firmware USB connecter	8 185 94 47, 49
Ultra Short Throw Projector Setting Guide Updating the firmware USB connecter USB file projection	8 185 94 47, 49 47, 49
U Ultra Short Throw Projector Setting Guide Updating the firmware USB connecter USB file projection USB memory device	8 185 94 47, 49 47, 49 18
U Ultra Short Throw Projector Setting Guide Updating the firmware USB connecter USB file projection USB memory device USB port	
U Ultra Short Throw Projector Setting Guide Updating the firmware USB connecter USB file projection USB memory device USB port USB Settings menu	
UUltra Short Throw Projector Setting Guide Updating the firmware USB connecter USB file projection USB memory device USB port USB Settings menu User Logo	
U Ultra Short Throw Projector Setting Guide Updating the firmware USB connecter USB file projection USB memory device USB port USB Settings menu User Logo V	
U Ultra Short Throw Projector Setting Guide Updating the firmware USB connecter USB file projection USB memory device USB port USB Settings menu User Logo V Video cable	
U Ultra Short Throw Projector Setting Guide Updating the firmware USB connecter USB file projection USB memory device USB port USB Settings menu User Logo V Video cable Video In port	
U Ultra Short Throw Projector Setting Guide Updating the firmware USB connecter USB file projection USB memory device USB port USB Settings menu User Logo V Video cable Video Mode	
U Ultra Short Throw Projector Setting Guide Updating the firmware USB connecter USB file projection USB memory device USB port USB Settings menu User Logo V Video cable Video Mode Volume button	
U Ultra Short Throw Projector Setting Guide Updating the firmware USB connecter USB file projection USB memory device USB port USB Settings menu User Logo V Video cable Video Mode Volume button	

Wired LAN	31, 63, 125
Wired LAN Settings	67
Wireless LAN	31, 64, 126
Wireless LAN Settings	68, 70, 71
Z	
Zoom	112
Zoom button	21, 41