


## **Notes for Users**

This supplement provides notes for the manuals provided with this machine.

- When using the ADF to scan originals with a paper weight that is less than 42 g/m<sup>2</sup> (11.2 lb.), move the slide tray on the original output tray to the left side. Not doing so may cause paper jams due to the originals becoming curled.

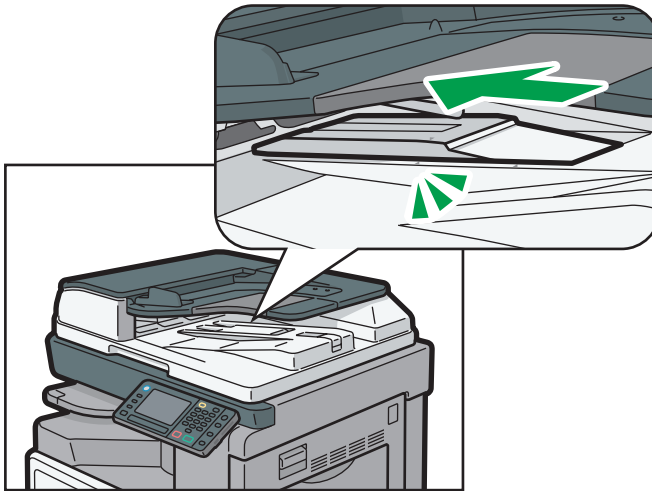

CXQ001

When the slide tray is placed on the left side, the tray capacity is decreased. After scanning the originals, return the slide tray to the original position.

© 2012  
Printed in China  
EN (GB) EN (US) EN (AU) D159-7515



D1597515