

# Operating Instructions Troubleshooting



1	When the Machine Does Not Operate As Wanted
2	Troubleshooting When Using the Copy Function
3	Troubleshooting When Using the Facsimile Function
4	Troubleshooting When Using the Printer Function
5	Troubleshooting When Using the Scanner Function
6	Troubleshooting When Using the DDST Unit
7	Adding Paper, Toner and Staples
8	Clearing Misfeeds
9	Remarks

Read this manual carefully before you use this machine and keep it handy for future reference. For safe and correct use, be sure to read the Safety Information in "About This Machine" before using the machine.

#### Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

#### Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

#### Notes:

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer. Depending on which country you are in, certain units may be optional. For details, please contact your local dealer.

#### Caution:

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

For good copy quality, the supplier recommends that you use genuine toner from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

#### **Power Source**

220 - 240V, 50/60Hz, 7A or more.

Please be sure to connect the power cord to a power source as shown above. For details about power source, see p.111 "Power Connection".

# **Manuals for This Machine**

Refer to the manuals that are relevant to what you want to do with the machine. Manuals for machines with copier function only or with the DDST Unit are different. See "Manuals for Machines with Copier Function Only or with the DDST Unit".

#### ∰Important

- □ Media differ according to manual.
- **D** The printed and electronic versions of a manual have the same contents.
- Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.
- Depending on which country you are in, there may also be html manuals. To view these manuals, a Web browser must be installed.

#### About This Machine

Be sure to read the Safety Information in this manual before using the machine. This manual provides an introduction to the functions of the machine. It also explains the control panel, preparation procedures for using the machine, how to enter text, and how to install the CD-ROMs provided.

#### ✤ General Settings Guide

Explains User Tools settings, and Address Book procedures such as registering fax numbers, e-mail addresses, and user codes. Also refer to this manual for explanations on how to connect the machine.

#### Troubleshooting

Provides a guide to solving common problems, and explains how to replace paper, toner, and other consumables.

#### Security Reference

This manual is for administrators of the machine. It explains security functions that you can use to prevent unauthorized use of the machine, data tampering, or information leakage.

For enhanced security, we recommend the following settings.

- Install the Server Certificate.
- Enable SSL(Secure Sockets Layer) Encryption.
- Change the user name and password of the administrator using Web Image Monitor.

For details, see "Setting Up the Machine", Security Reference.

Be sure to read this manual when setting the enhanced security functions, or user and administrator authentication.

#### Copy Reference

Explains Copier functions and operations. Also refer to this manual for explanations on how to place originals.

#### Facsimile Reference

Explains Facsimile functions and operations.

#### Printer Reference

Explains Printer functions and operations.

#### Scanner Reference

Explains Scanner functions and operations.

#### Network Guide

Explains how to configure and operate the machine in a network environment, and use the software provided.

This manual covers all models, and includes descriptions of functions and settings that might not be available on this machine. Images, illustrations, and information about operating systems that are supported might also differ slightly from those of this machine.

#### Other manuals

- Manuals for This Machine
- Safety Information
- Quick Reference Copy Guide
- Quick Reference Fax Guide
- Quick Reference Printer Guide
- Quick Reference Scanner Guide
- PostScript 3 Supplement
- UNIX Supplement
- Manuals for DeskTopBinder Lite
  - DeskTopBinder Lite Setup Guide
  - DeskTopBinder Introduction Guide
  - Auto Document Link Guide

#### 🖉 Note

- □ Manuals provided are specific to machine types.
- □ For "UNIX Supplement", please visit our Web site or consult an authorized dealer.
- "PostScript 3 Supplement" and "UNIX Supplement" include descriptions of functions and settings that might not be available on this machine.

#### 

p.iii "Manuals for Machines with Copier Function Only or with the DDST Unit"

# Manuals for Machines with Copier Function Only or with the DDST Unit

This section describes the manuals for machines with copier function only or with the DDST Unit.

#### About This Machine

Be sure to read the Safety Information in this manual before using the machine. This manual provides an introduction to the functions of the machine. It also explains the control panel, preparation procedures for using the machine, and how to install the CD-ROMs provided.

#### ✤ General Settings Guide

Explains User Tools settings, and how to register user codes. Also refer to this manual for explanations on how to connect the machine.

#### Troubleshooting

Provides a guide to solving common problems, and explains how to replace paper, toner, and other consumables.

#### Copy Reference

Explains Copier functions and operations. Also refer to this manual for explanations on how to place originals.

#### Printer/Scanner Reference

Explains system settings, functions and operations for the machine's printer/scanner unit.

#### Network Guide

Explains how to configure and operate the machine in a network environment, and use the software provided.

#### Other manuals

- Manuals for This Machine
- Safety Information
- Quick Reference Copy Guide
- Quick Reference Printer/Scanner Guide

#### 🖉 Note

□ Some manuals include descriptions of functions and settings that are not available on machines with copier function only or with the DDST Unit.

# TABLE OF CONTENTS

Manuals for This Machinei
Manuals for Machines with Copier Function Only or with the DDST Unit iii
How to Read This Manual1
Symbols1
Names of Major Options1

#### 1. When the Machine Does Not Operate As Wanted

ndicators	3
Panel Tone	4
When the Function Status Indicator Lights Up in Red	5
When You Have Problems Operating the Machine	
When a Job Is Not Performed	

#### 2. Troubleshooting When Using the Copy Function

When a Message Is Displayed	11
When You Cannot Make Clear Copies	14
When You Cannot Make Copies As Wanted	17
When Memory Is Full	

#### 3. Troubleshooting When Using the Facsimile Function

Adjusting the Volume	21
When a Message Is Displayed	24
When You Cannot Send or Receive Fax Messages As Wanted	31
When Memory Is Full	35
When an Error Report Is Printed	36
Turning Off the Main Power / In the Event of Power Failure	37
When an Error Occurs Using Internet Fax	38
Error Mail Notification	
Error Report (E-Mail)	38
Server-Generated Error E-mail	

#### 4. Troubleshooting When Using the Printer Function

When a Message Is Displayed during Installation of the Printer Driver	39
Windows 95/98/Me/2000	
Windows XP Professional or Windows Server 2003	40
Windows XP Home Edition	40
Windows Vista	41
When a Message Is Displayed	42
Status Messages	
Alert Messages	43
Printing the Error Log	45
When You Cannot Print	46
Other Printing Problems	49

#### 5. Troubleshooting When Using the Scanner Function

When Scanning Is Not Done As Expected	.57
When You Cannot Send Scanned Files	.58
When You Cannot Browse the Network to Send a Scanned File	.58
When the TWAIN Driver Cannot Be Started	.58
The Network Delivery Function Cannot Be Used	.58
Operations Are Not Possible When Messages Appear	.59
When a Message Is Displayed	.60
When a Message Is Displayed on the Display Panel	.60
When a Message Is Displayed on the Client Computer	.65

#### 6. Troubleshooting When Using the DDST Unit

<b>59</b>
59
71
75
77
32
32
33
7 7 3

#### 7. Adding Paper, Toner and Staples

Loading Paper	87
Loading Paper into the Paper Trays	
Orientation-Fixed Paper or Two-Sided Paper	
Changing the Paper Size	92
Changing the Paper Size in the Paper Tray	
Adding Toner	97
Replacing Toner	
Sending Fax Messages When Toner Has Run Out	
Waste Toner	99
Adding Staples	
Finisher	
Replacing the Transmission Stamp Cartridge	

#### 8. Clearing Misfeeds

Removing Jammed Paper	103
When A Is Displayed	
When B Is Displayed	104
When C Is Displayed	104
When P Is Displayed	105
When Y Is Displayed	105
When Z Is Displayed	106
When R Is Displayed (When Finisher Is Installed)	106
When D Is Displayed (When Bridge Unit Is Installed)	107
Removing Jammed Staples	108
Finisher	108

#### 9. Remarks

Where to Put Your Machine	
Machine Environment	
Moving	
Power Connection	
Access to the Machine	
When Not Used for a Long Time	112
Maintaining Your Machine	
Cleaning the Exposure Glass	
Cleaning the Exposure Glass Cover	
Cleaning the ARDF	
INDEX	115

# How to Read This Manual

## Symbols

This manual uses the following symbols:

#### A WARNING:

Indicates important safety notes.

Ignoring these notes could result in serious injury or death. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

#### **A CAUTION:**

Indicates important safety notes.

Ignoring these notes could result in moderate or minor injury, or damage to the machine or to property. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

#### Important

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

#### 🔗 Note

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

#### ₽ Reference

This symbol is located at the end of sections. It indicates where you can find further relevant information.

#### []

Indicates the names of keys that appear on the machine's display panel.

#### []

Indicates the names of keys on the machine's control panel.

### Names of Major Options

Major options of this machine are referred to as follows in this manual:

- Auto Document Feeder capable of scanning both sides of a sheet  $\rightarrow$  ARDF
- Finisher SR3010  $\rightarrow$  Finisher
- Bridge Unit BU3010  $\rightarrow$  Bridge unit

# 1. When the Machine Does Not Operate As Wanted

This section describes basic troubleshooting procedures that are applicable to all functions of this machine.

# Indicators

This section explains the indicators that light up when the machine requires the user to remove misfed paper, to add paper, or to perform other procedures.

<b>h</b> : Error indicator	Appears when there is a misfeed, a cover is left open, or another problem occurs. See p.103 "Clearing Misfeeds".
Load Paper indicator	Appears when paper-out condition occurs. See p.87 "Loading Paper".
L: Add Toner indicator	Appears when toner runs out. See p.97 "Adding Toner".

# **Panel Tone**

The following table explains the various beep patterns that the machine produces to alert users about machine conditions.

Beep pattern	Meaning	Cause
Two long beeps.	Machine has warmed up.	After cooling or being switched on, the machine has fully warmed up and is ready for use.
Single short beep.	A valid operation is accepted.	A control panel key was pressed, the machine was switched on, or a docu- ment was placed on the ARDF.
Five short beeps repeated five times.	Strong alert.	Machine requires user attention. Paper might have jammed or toner might need replenishing.

#### 🖉 Note

- □ Users cannot mute the machine's beep alerts. When the machine beeps to alert users of a paper jam or toner request, if the machine's covers are opened and closed repeatedly within a short period of time, the beep alert might continue, even after normal status has resumed.
- □ For details about enabling or disabling beep alerts, see "General Features", General Settings Guide.

#### ₽ Reference

"General Features", General Settings Guide

## When the Function Status Indicator Lights Up in Red

If a function key is lit in red, press the key to switch to the screen for the corresponding function, and then follow the message that appears.

Problem	Cause	Solution
Documents and reports are not printed out.	There is no copy paper left.	Add paper. See p.87 "Loading Pa- per".
An error has occurred.	The function whose indicator is lit is defective.	Record the code number shown on the display and contact your service representative. See "When a Message Is Displayed" of each chapter. You can use other functions normally.
The machine is unable to connect to the network.	A network error has occurred.	<ul> <li>Check the displayed message and take an appropriate ac- tion. See "When a Message Is Displayed" of each chapter.</li> <li>Check that the machine is cor- rectly connected to the net- work, and that the machine is correctly set. See "Network Settings", General Settings Guide.</li> <li>Contact the administrator.</li> <li>When the function key is still lit in red, even if you take the measures above, contact your service representative.</li> </ul>

#### 🖉 Note

□ If an error occurs in the function you are using, check the message that appears on the display panel, and then refer to "When a Message Is Displayed" for the relevant function.

5

# When You Have Problems Operating the Machine

The following chart gives explanations of common problems and messages. If other messages appear, follow the instructions displayed.

Problem	Cause	Solution
"Please wait" appears.	This message appears when you turn on the operation switch or change the toner bottle.	If the machine does not get start- ed within 2 minutes, contact your service representative.
"Please wait" appears.	If the machine has not been in use for a long time, it may take longer than normal to print or start up when switched on.	Wait for the machine to get ready.
Although the copier screen appears when the machine is turned on using the main power switch, it cannot be switched to another screen by pressing the [Facsimile] or [Scan- ner] key.	Functions other than the copier function are not yet ready.	Wait a little longer.
The machine has just been turned on and the User Tools screen is displayed, but the User Tools menu has items missing.	Functions other than the copier function are not yet ready. Time required varies by function. Functions appear in the User Tools menu when they become ready for use.	Wait a little longer.
The display is difficult to see.	Display contrast is not adjusted.	Adjust the display's contrast so that you can see the display panel properly. See "General Features", General Settings Guide.
The display is off.	The machine is in Energy Saver mode.	Turn on the operation switch.
The display is off.	The operation switch is turned off.	Turn on the operation switch.
Nothing happens when the operation switch is turned on.	The main power switch is turned off.	Turn on the main power switch.
The operation switch indicator continues blinking and does not turn off when pressed.	The machine is communicating with external equipment.	Check if the machine is communi- cating with external equipment.

Problem	Cause	Solution
Original images are printed on the reverse side of the paper.	You may have loaded the paper incorrectly.	Load paper correctly. Load paper into Tray 1-4 with the print side up, and into the bypass tray with the print side down. See p.89 "Orientation-Fixed Paper or Two-Sided Paper".
Misfeeds occur frequently.	The tray's side fences may not be locked.	Check the side fences are locked. See p.92 "Changing the Paper Size".
Misfeeds occur frequently.	The tray's end fence may not be set properly.	Check the end fence is set proper- ly. See p.92 "Changing the Paper Size".
Misfeeds occur frequently.	You may have loaded paper of a size not shown in Paper Size Settings with User Tools.	Use Tray Paper Settings to set the paper size. See p.95 "Selecting the paper size with user tools".
An error message re- mains, even if misfed paper is removed.	When a misfeed message ap- pears, it remains until you open and close the cover as required. Paper is still jammed in the tray.	Clear misfed paper, and then open and close the cover. See p.103 "Removing Jammed Pa- per".
Cannot print in duplex mode.	You cannot use paper in the by- pass tray for duplex printing.	For duplex printing, select Tray 1- 4 in the copier mode or with the printer driver.
Cannot print in duplex mode.	You have selected a tray that is set to [Off] for duplex printing in [Tray Paper Settings] under [System Set- tings].	Select a paper tray in <b>[Tray Paper</b> Settings] under <b>[System Settings]</b> , and then press <b>[OK]</b> . Then, select <b>[No Display (Plain Paper)]</b> or <b>[Recy- cled Paper]</b> for Paper Type, press <b>[Duplex]</b> , and then select <b>[On]</b> . See "Tray Paper Settings", General Settings Guide.
The user code entry screen is displayed.	Users are restricted by user man- agement.	Enter the user code (up to eight digits), and then press the <b>[OK]</b> or <b>[#]</b> key.
The Authentication screen appears.	Basic Authentication, Windows Authentication, LDAP Authenti- cation or Integration Server Au- thentication is set.	Enter your login user name and user password. See "When the Authentication Screen is Dis- played", About This Machine.
"Temperature Alert. Turn main power off, adjust room temp. and wait a while before restarting." ap- pears, and printing is disabled.	The temperature inside the ma- chine is too high or too low.	Locate the machine in an environ- ment where the temperature re- mains between 10 and 32°C. See p.109 "Where to Put Your Ma- chine".

Problem	Cause	Solution
"Privileges are required to use this function." appears.	The use of the function is restrict- ed to authenticated users only.	Contact the administrator.
"Authentica- tion failed." ap- pears.	The entered login user name or password is not correct.	Ask the administrator for the correct login user name and password.
"Authentica- tion failed." ap- pears.	Cannot access the authentication server when using Windows Au- thentication , LDAP Authentica- tion, or Integration Server Authentication.	Contact the administrator.

#### Note 🖉

□ If you cannot make copies as you want because of paper type, paper size, or paper capacity problems, use recommended paper. See "Copy Paper", About This Machine.

#### ₽ Reference

"Copy Paper", About This Machine

# When a Job Is Not Performed

If you cannot execute a function, it may be that the machine is being held up by another function.

If you cannot execute a function, terminate any other functions currently active, and then try executing the function again. In some cases, you can carry out another job (copier, facsimile, printer, or scanner) without canceling the current job being performed. Performing multiple functions simultaneously like this is called "Multi-accessing".

#### Combination Chart

The chart shows function compatibility when print priority is set to "Interleave". See "General Features", General Settings Guide.

	Μ	ode after you select	Сору	/		Facsi	imile					Print	er		Scanner		Z
							Tran	smiss	sion	Rece	ption		Print	ŧ			TWAIN
Mod		fore you	Using the control panel	Copying	Stapling	Transmission Operation	Scanning an Original for Memory Transmission	Memory Transmission	Immediate Transmission	Memory Reception	Printing Received Data	Receive Data	Printing	Stapling	Using the control panel	Scanning	Scanning
50100		ng the control panel	۲ ×	×	×			Õ		Õ	Ō	Ō	Ō	Ő		•	×
	Сор	ying	×	×	×	•	• *1	0	• *1	0	0	0	0	0	•	• *1	×
Copy	Stap	ling	×	×	×	•	• *1	0	• *1	0	0	0	0	Δ	•	• *1	0
	Trar	nsmission Operation				×	×	Ο	×	Ο	Ο	Ο	Ο	Ο			
	u	Scanning an Original for Memory Transmission	×	×	×	×	×	0	×	0	0	0	0	0	×	×	×
	missic	Memory Transmission	0	0	0	0	0	×	×	×	0	0	0	0	0	0	0
	Transmission	Immediate Transmission	×	×	×	×	×	×	×	×	0	0	0	0	×	×	×
ile		Memory Reception	Ο	Ο	Ο	Ο	Ο	×	×	×	Ο	Ο	Ο	Ο	Ο	Ο	Ο
Facsimile	Reception	Printing Received Data	0	0	0	0	0	O *2	O *2	O *2	×	0	0	0	0	0	0

1

	Mode after you select Copy Facsimile							Print	ter		Scan	ner	Z				
								smiss	sion	Rece	ption		Print	t			TWAIN
Mod	ct	fore you	Using the control panel	Copying	Stapling	Transmission Operation	Scanning an Original for Memory Transmission	Memory Transmission	Immediate Transmission	Memory Reception	Printing Received Data	Receive Data	Printing	Stapling	Using the control panel	Scanning	Scanning
	Rece	eive Data	Ο	Ο	Ο	Ο	Ο	Ο	Ο	0	Ο	$\Delta$	$\Delta$	$\Delta$	Ο	Ο	Ο
Printer	Ŧ	Printing	Ο	Ο	Ο	Ο	Ο	Ο	Ο	Ο	Ο	Ο	$\Delta$	$\Delta$	Ο	Ο	Ο
Prir	Print	Stapling	Ο	$\Delta$	Ο	Ο	Ο	Ο	Ο	Ο	Ο	Ο	$\Delta$	$\Delta$	Ο	Ο	Ο
		Using the control panel						0		0	0	0	0	0	×	×	×
Scanner		Scanning		• *1	• *1		• *1	0	• *1	0	0	0	0	0	×	×	×
TWAIN Scanner		Scanning	×	×	×	×	×	×	×	×	×	Δ		×	×	×	×

O... means that these functions can be used together.

•... means that you can interrupt the current job with the function keys to proceed to a subsequent job.

 $\Delta$ ... means that another job will automatically start after the current job is finished. ×... means that you must manually start another job after the current job is finished (i.e., these functions cannot be used together).

- <sup>\*1</sup> You can scan a document once the preceding job documents are all scanned.
- <sup>\*2</sup> During parallel reception, any subsequent job is suspended until reception is completed.

#### 🖉 Note

- □ Stapling cannot be used at the same time for multiple functions.
- □ You can specify the output tray where documents are delivered. For details about how to specify the output tray for each function, see "General Features", General Settings Guide.
- □ If the machine is capable of executing multiple functions simultaneously, specify which function should have priority in "Print Priority". This setting is factory-preset to "Display mode". For setting of Printing Priority function, see "General Features", General Settings Guide.
- While printing is in progress, scanning a document using another function may take longer than usual.

#### ✓ Reference

"General Features", General Settings Guide

# 2. Troubleshooting When Using the Copy Function

This chapter describes likely causes of and possible solutions for copier function problems.

# When a Message Is Displayed

The following chart contains explanations for common messages. If other messages appear, follow the instructions as they are displayed.

#### ∰Important

□ For messages not listed here, see "When You Have Problems Operating the Machine".

Message	Causes	Solutions
Cannot detect origi- nal size	Improper original is placed.	Select paper manually, not with the Auto Paper Select function, and do not use the Auto Re- duce/Enlarge function. See "Auto Reduce/Enlarge" Copy Reference.
Cannot detect origi- nal size	Improper original is placed.	Input the both horizontal and vertical sizes of the non-stand- ard original.
Cannot detect origi- nal size	Improper original is placed.	Place the original on the expo- sure glass. See "Placing Origi- nals", Copy Reference.
Cannot sort this size.	The specified paper size is not available with the Sort function.	Use copy paper that is not longer than 432 mm.
Cannot select Bypass Tray in current set- ting.	The specified function is not available with the bypass tray.	Select a paper tray other than the bypass tray.
Original with this length cannot be du- plex scanned.	The specified custom length is not available for duplex print- ing from the ARDF (e.g., 2 Sid- ed $\rightarrow$ 2 Sided, 2 Sided $\rightarrow$ 1 Sided, 2 Sided $\rightarrow$ Combine).	Do not place originals that are longer than 432 mm.
Check original ori- entation.	Original is not placed in the proper orientation.	Change the orientation of the original.
Check paper size.	Improper paper size is set.	If you press the <b>[Start]</b> key, copy will start onto the selected paper.
Blank part will ap- pear.	Blank areas appear. Original orientation and paper mis- matches occur when image ro- tation is unavailable.	Change the orientation of the original.

Message	Causes	Solutions
Image not fully cop- ied.	The entire image cannot be fully copied using the current <b>[Auto R/E]</b> setting.	Make an alternative <b>[Auto R/E]</b> setting.
Rotate Sort is una- vailable with this paper size.	A paper size for which Rotate Sort is not available is selected.	Select the proper paper size for the Rotate Sort function. See "Supplementary Informa- tion", Copy Reference.
Cannot dup. copy this size.	Duplex mode does not sup- port the selected paper size.	Select the proper paper size for the Duplex function. See "Supplementary Informa- tion", Copy Reference.
Cannot dup. with this tray.	A paper type not available with the Duplex function has been selected.	The thick paper is not availa- ble for the Duplex function. Specify another paper type.
Max. number of sets is nn. (A figure is placed at n.)	The number of copies exceeds maximum copy quantity.	You can change the maximum copy quantity. See "User Tools Menu (Copier Fea- tures)", Copy Reference.
Cannot Staple Thick Paper.	A paper type not available with the staple function has been selected.	The thick paper is not availa- ble for the staple function. Specify another paper type.
Staple range exceed- ed.	The number of copies exceeds the capacity of the stapler.	Check the stapler capacity. See "Supplementary Informa- tion", Copy Reference.
This position cannot be stapled.	The selected position cannot be stapled. Original orientation and paper mismatches occur when image rotation is unavailable.	Select the proper position or original orientation. See "Sta- ple" and "Supplementary In- formation", Copy Reference.
Cannot copy. Origi- nal is being scanned by another function.	The scanner function is in use.	Cancel the current scan job. To do this, press the <b>[Clear/Stop]</b> key on the scanner screen to display the message "Clear/Stop key was pressed. Stop scan- ning?", and then press <b>[Stop]</b> .
Privileges are re- quired to use this function.	The use of this function is re- stricted to authentified users only.	Contact the administrator.
Authentication failed.	The entered login user name or password is not correct.	Ask the administrator for the cor- rect login user name and password.
Authentication failed.	Cannot access the authentica- tion server when using Win- dows Authentication, LDAP Authentication, or Integration Server Authentication.	Contact the administrator.

#### 

p.6 "When You Have Problems Operating the Machine"

2

# When You Cannot Make Clear Copies

This section describes likely causes of and possible solutions for unclear copies.

Problem	Causes	Solutions
Copies appear dirty.	Image density is too dark.	Adjust the image density set- tings. See "Adjusting Image Density", Copy Reference.
Copies contain blots or are patchy.	The machine is not on a level surface.	Place the machine on a stable and level surface. Make sure the machine's envi- ronment meets requirements. See p.109 "Where to Put Your Machine".
Copies contain blots or are patchy.	The paper is creased, curled, or has blemishes.	Smooth out the wrinkles from the paper, or replace it. See "Copy Paper", About This Machine. If paper comes out curled, ad- just the output Tray. See "Originals", Copy Reference.
Copies contain blots or are patchy.	Image density is too light.	Adjust the image density set- tings. See "Adjusting Image Density", Copy Reference.
Copies contain blots or are patchy.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Copy Paper", About This Machine.
Copies are too dark or too light.	The correct paper type set- tings are not made.	Check the paper loaded on the paper tray or bypass tray matches the paper type set on the display panel. See "Copy Paper", About This Machine.
Copies are too dark or too light.	The image was not printed on a suitable surface.	Before printing on special pa- per, check its surface careful- ly. Printing on non-print surfaces reduces print quality and can damage the machine's internal components. See "Copy Paper", About This Machine.
Copies are dirty.	Use of non-recommended toner can result in loss of print quality and other problems.	Use manufacturer-genuine toner. Contact your service representative.
The reverse side of an original image is copied.	Image density is too dark.	Adjust the image density set- tings. See "Adjusting Image Density", Copy Reference.

Problem	Causes	Solutions
A shadow appears on copies if you use pasted originals.	Image density is too dark.	Adjust the image density set- tings. See "Adjusting Image Density", Copy Reference.
		Change the orientation of the original.
		Put mending tape over the pasted areas.
The same copy area is dirty whenever making copies.	The exposure glass or ARDF is dirty.	Clean them. See p.113 "Main- taining Your Machine".
Copies are too light.	Image density is too light.	Adjust the image density set- tings. See "Adjusting Image Density", Copy Reference.
Copies are too light.	The paper is damp or rough.	Use the recommended paper. Also, use paper that has been stored in the recommended temperature and humidity conditions. See "Copy Paper", About This Machine.
Copies are too light.	The toner bottle is almost empty.	Add toner. See p.97 "Adding Toner".
Parts of the paper are not copied.	The original is not placed correctly.	Place originals correctly. See "Plac- ing Originals", Copy Reference.
Parts of the paper are not copied.	The correct paper size is not selected.	Select the proper paper size.
White lines appear.	The exposure glass or scan- ning glass is dirty.	Clean them. See p.113 "Main- taining Your Machine".
Copies are blank.	The original is not placed correctly.	When using the exposure glass, place originals face down. When using the ARDF, place them face up. See "Placing Originals", Copy Reference.
A moiré pattern is produced on copies.	Your original has a dot pat- tern image or many lines.	Place the original on the expo- sure glass at a slight angle.

Problem	Causes	Solutions
Black spots appear on the copy of a photographic print.	Because of high humidity, the photographic print has stuck to the exposure glass.	Place the print on the expo- sure glass in either of the fol- lowing ways:
		• Place an OHP transparency on the exposure glass, and then place the print on top of the OHP transparency.
		• Place the print on the exposure glass, and then place two or three sheets of white paper on top of it. Leave the exposure glass cover or ARDF open when copying.

# When You Cannot Make Copies As Wanted

This section describes causes and remedies when copy results are not as expected.

#### ✤ Basic

Problem	Causes	Solutions
Misfeeds occur frequently.	The number of sheets loaded exceeds the capacity of the machine.	Load paper only as high as the upper limit markings on the side fences of the paper tray or bypass tray. See p.87 "Load- ing Paper".
Misfeeds occur frequently.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Copy Paper", About This Machine.
Misfeeds occur frequently.	The paper is too thick or too thin.	Use recommended paper. See "Copy Paper", About This Machine.
Misfeeds occur frequently.	The copy paper is wrinkled or has been folded/creased.	Use recommended paper. Use paper that has been stored in the recommended tempera- ture and humidity condition. See "Copy Paper", About This Machine.
Misfeeds occur frequently.	Printed paper is used.	Use recommended paper. Do not reuse copy paper that has been already copied or print- ed onto. See "Copy Paper", About This Machine.
Copy paper becomes creased.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Copy Paper", About This Machine.
Copy paper becomes creased.	The paper is too thin.	Use recommended paper. See "Copy Paper", About This Machine.
You cannot combine several functions.	Selected functions cannot be used together.	Check the combination of functions and make the set- tings again. See "Combination Chart", Copy Reference.
Copies are not stapled.	There are jammed staples in the stapler.	Remove jammed staples. See p.108 "Removing Jammed Staples".

Problem	Causes	Solutions
Copies are not stapled.	The number of copies exceeds the capacity of the stapler.	Check the stapler capacity. See "Supplementary Informa- tions", Copy Reference.
Copies are not stapled.	Copy paper is curled.	Turn the copy paper over in the tray.
Staples are wrongly positioned.	Originals are not set correctly.	Check the correct position to place the originals. See "Sta- ple", Copy Reference.
Print is slanted.	The paper is feeding in at a slant.	Load the paper correctly. See p.87 "Loading Paper".
Print is slanted.	The machine's cover is open.	Make sure the right and lower right covers are properly closed.
Print is slanted.	The side fences in the paper tray is not locked.	Make sure the side fence is locked. See p.92 "Changing the Paper Size".

#### ✤ Edit

Problem	Causes	Solutions
When using the Duplex Mar- gin function, parts of the orig- inal image are not copied.	You set a wide erased margin.	Set a narrower margin with User Tools. You can set the width be- tween 0-50 mm (0"-2"). See "Copier Features", General Settings Guide.
When using the Duplex Mar- gin function, parts of the orig- inal image are not copied.	There is a lack of margin space on the opposite side of the binding position.	Set a narrower margin with User Tools. You can set the width be- tween 0-50 mm (0"-2"). See "Copier Features", General Settings Guide.

#### ✤ Combine

Problem	Causes	Solutions
When using Combine, parts of the image are not copied.	You specified a reproduction ratio that does not match the sizes of your originals and copy paper.	When you specify a reproduc- tion ratio using the Manual Paper Select function, make sure the ratio matches your originals and the copy paper. Select the correct reproduction ratio
		before using the Combine function.
When using Combine, parts of the image are not copied.	Your originals are not identi- cal in size and direction.	Use originals that are identical in size and direction.
Copies are not in correct order.	You placed the originals in the incorrect order.	When placing a stack of origi- nals in the ARDF, the last page should be on the bottom.
		If you place an original on the exposure glass, start with the first page to be copied.

#### ✤ Duplex

Problem	Causes	Solutions
Cannot print in duplex mode.	You may have loaded paper on the bypass tray.	Remove paper loaded on the bypass Tray. Load paper in Tray 1 - 4.
Cannot print in duplex mode.	You have loaded paper exceeding 90 g/m <sup>2</sup> .	Change the paper.
Cannot print in duplex mode.	You have selected a Tray 2 that is set to <b>[Thick Paper]</b> for duplex printing in <b>[Tray Paper Settings]</b> under <b>[System Settings]</b> .	Select another paper type, or another paper tray. See "Tray Paper Settings", General Set- tings Guide.
Copies are not in duplex order.	You placed the originals in the incorrect order.	When setting a stack of origi- nals in the ARDF, the last page should be on the bottom.
		If you set an original on the ex- posure glass, start with the first page to be copied.
When using Duplex, copy is made Top to Bottom even though <b>[Top to Top]</b> is selected.	You placed the originals in the wrong orientation.	Place the originals in the cor- rect orientation. See "Original Orientation", Copy Reference.
When using Duplex, copy is made Top to Top even though <b>[Top to Bottom]</b> is selected.	You placed the originals in the wrong orientation.	Place the originals in the cor- rect orientation. See "Original Orientation", Copy Reference.
Parts of the original image are not copied.	The margin is too wide.	Set a narrower margin with User Tools. You can adjust it between 0-50 mm (0"-2"). See "User Tools Menu (Copier Features)", Copy Reference.
Parts of the original image are not copied.	There is a lack of margin space on the opposite side of the binding position.	Set a narrower margin with User Tools. You can adjust it between 0-50 mm (0"-2"). See "User Tools Menu (Copier Features)", Copy Reference.

## When Memory Is Full

Messages	Causes	Solutions
Reset nn orig., then press [Resume] to scan and copy the re- maining originals. [Stop] [Resume] (A figure is placed at n.)	The machine checks if the re- maining originals should be copied, after the scanned orig- inal has been printed.	To continue copying, remove all copies, and then press <b>[Resume]</b> . To stop copying, press <b>[Stop]</b> .

# 3. Troubleshooting When Using the Facsimile Function

This chapter describes likely causes of and possible solutions for facsimile function problems.

# Adjusting the Volume

The following describes how to adjust the volume.

You can change the volume of the following sounds that the machine makes.

#### On Hook Mode

Heard when the **[On Hook Dial]** key is pressed.

#### At Transmission

Heard when immediate transmission is performed.

#### At Reception

Heard when the machine receives a document.


#### At Dialing

Heard after pressing the **[Start]** key, until the line connects to the destination.

#### At Printing

Heard when a received document is printed.


Press the [User Tools/Counter] key.

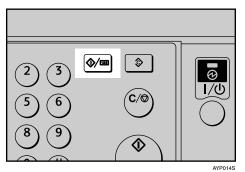

**2** Select [Fax Features] using [▲] or [▼], and then press the [OK] key.



Select [General Settings/Adjust] using [▲] or [▼], and then press the [OK] key.




Select [Adjust Sound Volume] using [▲] or [▼], and then press the [OK] key.

```
■Gen.Set./Adjust 1/2 ‡OK)
Adjust Sound Volume
Program Fax Information
On Hook Release Time
```

Select the item you want to adjust using [▲] or [▼], and then press the [OK] key.


⊟Adj. Sound Yol. 1/3	2 \$ОК)
On Hook Mode	
At Transmission	
At Reception	

**ⓑ** Select the volume using **[ ◄]** or **[ ►]**, and then press the **[OK]** key.



Press the **[Escape]** key to cancel the setting. The display returns to that of step **5**.

Press the [User Tools/Counter] key.

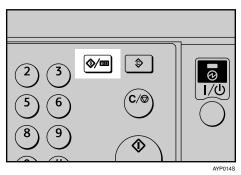

The standby display appears.

#### 🖉 Note

- □ You can also adjust the On Hook volume when you press the **[On Hook Di-al]** key. See "On Hook Dial", Facsimile Reference.
- □ If the Extended Security function prevents you from changing this setting, contact the administrator.
- $\Box$  You can set the volume level to between 0 and 7.

#### $\mathcal{P}$ Reference

"On Hook Dial", Facsimile Reference

# When a Message Is Displayed

This section describes the machine's main messages. If other messages appear, follow their instructions.

Message	Cause	Solution
Error occurred, and trans. was cancelled.	A document jam occurred during Immediate Transmission. There may be a problem with the ma- chine or the telephone line (for ex- ample, noise or cross talk).	Press <b>[Exit]</b> , and then resend the pages that have not been sent. If the error reoccurs frequently, contact your service representative.
Put original back, check it and press Start key.	Original jammed during Memory Transmission.	Place originals that have not been scanned on the exposure glass or ARDF again.
Cannot detect original size. Place original again, then press Start key.	The machine failed to detect the size of the original.	Place original again, and then press the <b>[Start]</b> key.
<b>F</b> unc. Problems Data will be in- itialized.	There is a problem with the fax.	Record the code number shown on the display and contact your service representative. Other functions can be used.
Cannot send fax as scanner is in use by another function.	The machine is scanning an original under another function.	Before sending the fax, cancel the current scan job under another function. To do this, press the <b>[Clear/Stop]</b> key on the control panel to display the message "Clear/Stop key was pressed. Stop scan- ning?", and then press <b>[Stop]</b> .
Updating the settings Re- select dest./func- tions after up- date finishes.	The destination list is being up- dated from the network using SmartDeviceMonitor for Admin or Web Image Monitor.	Wait until the message disappears. Do not switch off the power while this message is displayed.
Updating desti- nation list. Re- select destination(s) or sender's name later.	The destination list is being up- dated from the network using SmartDeviceMonitor for Admin or Web Image Monitor.	Wait until the message disap- pears. Do not switch off the pow- er while this message is displayed. Depending on the number of destinations to be up- dated, there may be some delay before you can resume operation. Operations are not possible while this message is displayed.

Message	Cause	Solution
You do not have privileges to use this func- tion.	The use of this function is restrict- ed to authentified users only.	Contact the administrator.
Authentication failed.	The entered login user name or password is incorrect.	Confirm correct login user name or password.
Authentication failed.	Authentication is not possible from this machine.	Contact the administrator.
Connection with LDAP server has failed. Check the server sta- tus.	A network error has occurred and connection has failed.	Try the operation once more. If the message is still shown, the network may be crowded. Check the information of <b>[System Set-</b> <b>tings]</b> . See "Administrator Tools", General Settings Guide.
LDAP server auth. has failed. Check the settings.	The entered user name or pass- word does not match that speci- fied for LDAP server authentication.	Make settings correctly for the user name and the password for LDAP server authentication.
Exceeded max. number of search results which can be dis- played. Max.: nnn (A figure is placed at n.)	The number of search results has exceeded the maximum number of items that can be displayed.	Search again after changing the search conditions.
LDAP server search timed out. Check the server status.	A network error has occurred and connection has failed.	Try the operation once more. If the message is still shown, the network may be crowded. Check the information of <b>[System Set- tings]</b> . See "Administrator Tools", General Settings Guide.
Specified group contains some invalid dest. Do you want to se- lect only valid dest.?	The specified group contains some destinations for sending by e-mail and some destinations for sending by Scan to Folder.	To select destinations for sending by e-mail, press <b>[Select]</b> for the message displayed on the e-mail screen. To select destination for sending by Scan to Folder, press <b>[Select]</b> for the message displayed on the Scan to Folder screen.
Sender has not been specified.	The sender has not been specified.	A sender's name should be speci- fied before sending e-mail. Send e-mail after specifying the send- er's name.

Message	Cause	Solution
Check whether there are any network prob- lems. [13-10]	The alias telephone number you entered is already registered on the gatekeeper by another device.	<ul> <li>Check the alias telephone number is correctly pro- grammed using the Web Im- age Monitor. See the Web Image Monitor's Help.</li> <li>Contact your network admin- istrator.</li> </ul>
Check whether there are any network prob- lems. [13-11]	Cannot access gatekeeper.	<ul> <li>Use your Web Image Monitor to check the gatekeeper ad- dress is correctly pro- grammed. See the Web Image Monitor's Help.</li> <li>Contact your network admin- istrator.</li> </ul>
Check whether there are any network prob- lems. [13-17]	Registering of user name is reject- ed by the SIP server.	<ul> <li>Use your Web Image Monitor to check the SIP server ad- dress and user name are cor- rectly programmed. See the Web Image Monitor's Help.</li> <li>Contact your network admin- istrator.</li> </ul>
Check whether there are any network prob- lems. [13-18]	Cannot access the SIP server.	<ul> <li>Use your Web Image Monitor to check the SIP server ad- dress is correctly pro- grammed. See the Web Image Monitor's Help.</li> <li>Contact your network admin- istrator.</li> </ul>

Message	Cause	Solution
Check whether there are any network prob- lems.	Cannot find the DNS server, SMTP server or folder for forwarding.	Check that the DNS server IPv4 address is correctly pro- grammed using Web Image Monitor. See the Web Image Monitor's Help.
[14-01]		• Check that the host name or IPv4 address of the SMTP server is correctly pro- grammed using Web Image Monitor. See the Web Image Monitor's Help.
		• Check that the SMTP server is correctly programmed using Web Image Monitor. See the Web Image Monitor's Help.
		• Check that the folder for transfer is correctly specified.
		<ul> <li>Check that the computer in which the folder for transfer is specified is operating correctly.</li> </ul>
		• Check that the LAN cable is correctly connected to the machine.
		• Check the network connection and radio wave status.
		• Contact your network admin- istrator.

Message	Cause	Solution
Check whether there are any network prob- lems. [14-09]	E-mail transmission was refused by SMTP authentication, POP be- fore SMTP authentication or login authentication of the computer in which the folder for forwarding is specified.	<ul> <li>Check that the user name and password for SMTP authentication or POP before SMTP authentication are correctly programmed from [File Transfer] under [System Settings]. See "File Transfer", General Settings Guide. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li> <li>Check that the user name and</li> </ul>
		<ul> <li>Check that the user name and password of the E-mail Ac- count are correctly pro- grammed from [File Transfer] under [System Settings.] See "File Transfer", General Set- tings Guide. You can also use the Web Image Monitor for confirmation. See the Web Im- age Monitor's Help.</li> </ul>
		• Check that the user ID and password for the computer in which the folder for forward-ing is specified are correctly programmed.
		• Check that the folder for for- warding is correctly specified.
		• Check that the computer in which the folder for forwarding is specified is correctly operated.
		• Contact the administrator.
Check whether there are any network prob- lems. [14-33]	No machine e-mail address is programmed.	<ul> <li>Check that the machine's e- mail address is correctly pro- grammed from [File Transfer] under [System Settings]. See "File Transfer", General Set- tings Guide. You can also use the Web Image Monitor for confirmation. See the Web Im- age Monitor's Help.</li> </ul>
		• Contact the administrator.
Check whether there are any network prob- lems. [15-01]	No POP3/IMAP4 server address is programmed.	<ul> <li>Check that the host name or IPv4 address of the POP3/IMAP4 server is cor- rectly programmed using the Web Image Monitor. See the Web Image Monitor's Help.</li> <li>Contact the administrator.</li> </ul>

Message	Cause	Solution
Check whether there are any network prob- lems. [15-02]	Cannot log on to the POP3/IMAP4 server.	<ul> <li>Check that the user name and password of the E-mail Account are correctly programmed from [File Transfer] under [System Settings]. See "File Transfer", General Settings Guide. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li> <li>Contact your network administrator.</li> </ul>
Check whether there are any network prob- lems. [15-03]	No machine e-mail address is programmed.	<ul> <li>Check that the machine's e-mail address is correctly programmed from [File Transfer] under [System Settings]. See "File Transfer", General Settings Guide. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li> <li>Contact your network administrator.</li> </ul>
Check whether there are any network prob- lems. [15-11]	Cannot find the DNS server or POP3/IMAP4 server.	<ul> <li>Check that the DNS server IPv4 address is correctly pro- grammed using Web Image Monitor. See the Web Image Monitor's Help.</li> <li>Check that the POP3/IMAP4 server is correctly pro- grammed using Web Image Monitor. See the Web Image Monitor's Help.</li> <li>Check the network connection and radio wave status.</li> <li>Check that the LAN cable is cor- rectly connected to the machine.</li> <li>Contact your network admin- istrator.</li> </ul>

Message	Cause	Solution
Check whether there are any network prob- lems. [15-12]	Cannot log on to the POP3/IMAP4 server.	<ul> <li>Check that the user name and password of the E-mail Account are correctly programmed from [File Transfer] under [System Settings]. See "File Transfer", General Settings Guide. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li> <li>Check that the user name and password for POP before SMTP authentication are correctly programmed from [File Transfer] under [System Settings]. See "File Transfer", General Settings Guide. You can also use the Web Image Monitor for confirmation. See the Help.</li> <li>Contact your network administrator.</li> </ul>

#### 🖉 Note

- □ If "Check whether there are any network problems." appears, the machine is not correctly connected to the network or the settings of the machine are not correct. If you do not need to connect the machine to the network, you can specify the setting so this message is not displayed, and then the **[Facsimile]** key no longer lights. See "Parameter Setting", General Settings Guide. If you reconnect the machine to the network, be sure to set "Display" with User Parameters. Otherwise, you cannot check the status of the network connection.
- □ If the paper tray runs out of paper, "Out of paper. Load following paper." appears on the display. Add paper. If there is paper left in the other trays, you can receive documents as usual, even if the message appears on the display. You can turn this function on or off with "Parameter Setting". See "Parameter Setting", General Settings Guide.

#### ✓ Reference

"Parameter Setting", General Settings Guide

# When You Cannot Send or Receive Fax Messages As Wanted

This section describes likely causes of and possible solutions for transmission and reception-related problems.

#### Transmission/Reception

Problem	Cause	Solution
Both transmission and reception are impossible.	The modular cable may be dis- connected.	Make sure that the modular cable is correctly connected. See "Con- necting the Machine to a Tele- phone Line and Telephone", General Settings Guide.
Both transmission and reception are impossible.	The terminal adaptor setting is in- correct.	Check the setting.

#### ✤ Transmission

Problem	Cause	Solution
Document appears blank at the other end.	The original was placed upside down.	Place it correctly. See "Placing Originals", Facsimile Reference.
Transmission failed due to a "maximum e- mail size" error.	The size of the Internet fax docu- ment exceeds the maximum e- mail size specified on the machine.	Set <b>[Maximum E-mail Size]</b> under <b>[E-mail Settings]</b> to <b>[Off]</b> , or set the maximum e-mail size to a larger value. Then, re-send the document. See "E-mail Settings", General Settings Guide.
When using On Hook Dial or Manual Dial, "Receiving" ap- pears and transmission is not allowed.	If the machine fails to detect the size of the original when the <b>[Start]</b> key is pressed, it performs a receiving operation.	If you use On Hook Dial or Man- ual Dial frequently, it is recom- mended that you set "Receive documents by pressing the <b>[Start]</b> key when originals are not set." to "Off" in User Parameters. If this is set to "Off", when using Manual Dial, you cannot receive by press- ing the <b>[Start]</b> key. See "Parame- ter Setting", General Settings Guide.
LAN-Fax Driver does not work.	The entered login user name, password, or driver encryption key is incorrect.	Check your login user name, password, or driver encryption key, and enter them correctly. Contact the administrator.
LAN-Fax Driver does not work.	A high security level is set by the extended security function.	Contact the administrator.
Cannot cancel a Memo- ry Transmission.	The document is being scanned.	Press the <b>[Clear/Stop]</b> key. See "Canceling a Transmission", Fac- simile Reference.

Problem	Cause	Solution
Cannot cancel a Memo- ry Transmission.	The document is being sent or it is in standby.	Press the <b>[Clear/Stop]</b> key. See "Canceling a Transmission", Fac- simile Reference.
Cannot cancel an Im- mediate Transmission.	-	Press the <b>[Clear/Stop]</b> key. See "Canceling a Transmission", Fac- simile Reference.
Cannot cancel Internet Fax transmission.	-	Press the <b>[Clear/Stop]</b> key. See "Canceling a Transmission", Fac- simile Reference.
		Canceling Internet Fax transmis- sion is possible only during scan- ning. It is impossible during communication.
Although a group spec- ification was set for the following, reception was not possible.	The number of specified destina- tions exceeds the maximum number that can be specified as a group.	A maximum of 100 parties can be specified for a group. Check if there are over the specified num- bers registered in the address
Forwarding, Forward- ing of Special Sender, E-mail TX Result, rout- ing e-mail received via SMTP.		book. If a group was registered in another group, transmission is canceled but an error message does not appear. See "Registering Names to a Group", General Set- tings Guide.

## Reception

Problem	Cause	Solution
The machine failed to print received fax documents.	If this happened when the Re- ceive File indicator was lit, the pa- per or toner might have run out, making printing impossible.	<ul> <li>Load paper into the paper tray.</li> <li>Add toner.</li> <li>See "Substitute Reception", Facsimile Reference.</li> </ul>
The machine failed to print received fax documents.	When the 🖆 Load Paper indica- tor is lit.	Load paper into the paper tray. See p.87 "Loading Paper".
Reception is impossi- ble, but transmission is possible.	The toner has run out.	Replace the toner bottle. See p.98 "Replacing Toner".
Reception is possible, but transmission is impossible.	The terminal adaptor setting is in- correct.	Check the setting.
Transmission is possible, but reception is impossible.	The terminal adaptor setting is in- correct.	Check the setting.

## Printing

Problem	Cause	Solution
Print is slanted.	The tray's side fences may not be locked.	Check the side fences are locked. See p.92 "Changing the Paper Size".
Print is slanted.	The paper is fed in at a slant.	Load the paper correctly. See p.87 "Loading Paper".
Print is slanted.	The machine's cover is open.	Make sure the right and lower right covers are properly closed.
Misfeeds occur frequently.	The number of sheets loaded exceeds the capacity of the machine.	Load paper only as high as the upper limit markings on the side fences of the paper tray or bypass tray. See "Copy Paper", About This Machine.
Misfeeds occur frequently.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Copy Pa- per", About This Machine.
Misfeeds occur frequently.	The paper is too thick or too thin.	Use recommended paper. See "Copy Paper", About This Machine.
Misfeeds occur frequently.	The copy paper is wrinkled or has been folded/creased.	Use recommended paper. Use pa- per that has been stored in the recommended temperature and humidity condition. See "Copy Paper", About This Machine.
Copy paper becomes creased.	Printed paper is used.	Use recommended paper. Do not reuse copy paper that has been al- ready printed onto. See "Copy Paper", About This Machine.
Copy paper becomes creased.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Copy Pa- per", About This Machine.
Copy paper becomes creased.	The paper is too thin.	Use recommended paper. See "Copy Paper", About This Machine.
Printed images contain blots or are patchy.	The machine is not on a level surface.	The machine must be placed on a stable and level surface. Check the environment of loca- tion to select an appropriate loca- tion. See p.109 "Where to Put Your Machine".
Printed images contain blots or are patchy.	The paper is creased, curled, or has blemishes.	Straighten the paper if curled. Re- place it if wrinkled or damaged. See "Copy Paper", About This Machine.

Problem	Cause	Solution
The image is too dark or too light.	The correct paper type settings are not made.	Check the paper loaded on the paper tray or bypass tray matches the paper type set on the display panel. See "Copy Paper", About This Machine.
The image is too dark or too light.	Using toner bottles not recom- mended by the supplier or refill- ing the toner bottle may degrade the print quality or cause a mal- function.	Use only toner bottles recom- mended by the supplier.
Background of received images appears dirty. Images from the back of the page appear.	Image density is too dark.	Adjust the scanning density. See "Image Density (Contrast)", Fac- simile Reference.
Printed or sent images are spotty.	The exposure glass or ARDF is dirty.	Clean them. See p.113 "Maintain- ing Your Machine".
Received image is too light.	When using moist, rough, or processed paper, areas of print may not be fully reproduced.	Only use recommended paper. See "Copy Paper", About This Machine.
Received image is too light.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Copy Pa- per", About This Machine.
Received image is too light.	<ul> <li>The image density has been set too low.</li> <li>The original of the transmitted fax was printed on paper that is too thin.</li> </ul>	<ul> <li>Increase the scanning density. See "Image Density (Contrast)", Facsimile Reference.</li> <li>Ask the sender to reprint the original on thicker paper and fax it again.</li> </ul>
Received image is too light.	When the Add Toner indicator is lit, toner is beginning to run out.	Replace the toner bottle soon. See p.98 "Replacing Toner".
Other fax machine's name is not correctly printed or displayed.	When a destination is pro- grammed in the Address Book using SmartDeviceMonitor for Admin or Web Image Monitor, in some languages, the pro- grammed destination may not be printed or displayed correctly.	Use ASCII characters (for example: a-z, 0- 9).

Problem	Cause	Solution
All fax documents stored in memory have been lost. Those docu- ments include ones stored through Memory Transmission/Recep- tion, Memory Lock, and Substitute Reception.	All fax documents are lost from memory if the machine remains unpowered for approximately 12 hours or longer.	If any documents have been lost for this reason, a Power Failure Report is automatically printed when the machine is turned on. If fax documents stored for Memo- ry Transmission have been lost, check the destinations and resend the documents. If fax documents received through Memory, Mem- ory Lock or Substitute Reception have been lost, ask the senders to resend the documents. See p.37 "Turning Off the Main Power / In the Event of Power Failure".
The following func- tions are not available: Forwarding, routing e- mail received via SMTP.	This function is made unavailable by the enhanced security function.	Contact the administrator.

#### ✤ Others

# When Memory Is Full

This section describes likely causes of and possible solutions for problems related to full memory.

Message	Cause	Solution
Memory is full. Scanning will be stopped and only scanned page(s) will be stored.	The memory is full.	If you press <b>[Exit]</b> , the machine re- turns to standby mode and starts transmitting the stored pages.

3

# When an Error Report Is Printed

An Error Report is printed if a document cannot be successfully sent or received.

Possible causes include a problem with the machine or noise on the telephone line. If an error occurs during transmission, resend the original.

If an error occurs during reception, ask the sender to resend the document.

## 🔗 Note

- □ If an error happens frequently, contact your service representative.
- The "Page" column gives the total number of pages. The "Page not sent" or "Page not received" column gives the number of pages not sent or received successfully.
- □ You can display a destination with the User Parameters. See "Parameter Setting", General Settings Guide.
- □ You can display a sender name with the User Parameters. See "Parameter Setting", General Settings Guide.

#### PReference

"Parameter Setting", General Settings Guide

# Turning Off the Main Power / In the Event of Power Failure

This section describes the machine status when the power is turned off or if the power fails.

#### A CAUTION:

• When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).

#### ∰Important

- Do not turn off the main power switch while the operation switch indicator is lit or blinking. If you do, the memory may be damaged and failure could result.
- Turn off the main power switch before pulling out the plug. If you pull out the plug with the switch on, the memory may be damaged and failure could result.
- □ Make sure that 100% is shown on the display before you unplug the machine. If a lower value is shown, some data is currently present in memory.
- Right after a power failure, the internal battery needs to be sufficiently recharged to guard against future data loss. Keep the machine plugged in and the main power switch on for about 5 days after the power loss.

Even if the main power switch is turned off, the contents of the machine memory (for example, programmed numbers) will not be lost. However, if power is lost for about 12 hours because the main power switch is turned off, there is a power cut, or the power cord is removed, contents of the Fax memory are lost. Lost items will include any fax documents stored in memory using Memory Transmission/Reception, Memory Lock, or Substitute Reception.

If a file was deleted from memory, a Power Failure Report is automatically printed as soon as the power is restored.

This report can be used to identify lost files. If a document stored for Memory Transmission was lost, resend it. If a document received by Memory Reception or Substitute Reception was lost, ask the sender to resend it.

# When an Error Occurs Using Internet Fax

This section describes reports that the machine sends if an Internet Fax error occurs.

# **Error Mail Notification**

The machine sends the Error Mail Notification to the sender when it is unable to successfully receive a particular e-mail message. A "cc" of this notification is also sent to the administrator's e-mail address when one is specified.

#### Note

- You can select to send Error Mail Notification with User Parameters. See "Parameter Setting", General Settings Guide.
- □ If Error Mail Notification cannot be sent, the Error Report (E-Mail) is printed by the machine.
- □ If an error occurs when e-mail is received via SMTP, the SMTP server sends error e-mail to the originator of the document.

#### Reference

"Parameter Setting", General Settings Guide

## Error Report (E-Mail)

The Error Report (E-Mail) is printed by the machine when it is unable to send an Error Mail Notification.

## Server-Generated Error E-mail

The transmitting server sends this error e-mail to the originator of e-mail that cannot be transmitted successfully (due to reasons such as specifying an incorrect e-mail address).

#### 🖉 Note

After server-generated error e-mail is printed, the first page of the sent document is printed.

# 4. Troubleshooting When Using the Printer Function

This chapter describes likely causes of and possible solutions for printer function problems. When using the DDST Unit, see "Troubleshooting When Using the DDST Unit".

# When a Message Is Displayed during Installation of the Printer Driver

This section describes what to do if a message appears when installing the printer driver.

The message number 58 or 34 indicates that the printer driver cannot be installed using Auto Run. Install the printer driver using **[Add Printer]** or **[Install Printer]**.

# Windows 95/98/Me/2000

This section describes the procedure under Windows 95/98/Me/2000.

U On the [Start] menu, point to [Settings], and then click [Printers].

**2** Double-click the Add Printer icon.

**E** Follow the instructions in Add Printer Wizard.

If the printer driver is on a CD-ROM, the location of the driver is either \DRIVERS\(RPCS, PCL6, or PCL5E)\WIN9X\_ME\(language)\DISC1, or \DRIVERS\(RPCS, PCL6, or PCL5E)\XP\_VISTA\(language)\DISC1. If the installer starts, click **[Cancel]** to quit.

## **4** Specify a port.

For the setting procedure, see a description for the port you are using.

# 🔗 Note

□ Available ports vary according to your Windows operating system or the type of interface. For details, see "Preparing the Machine", Printer Reference.

## 

"Preparing the Machine", Printer Reference

## Windows XP Professional or Windows Server 2003

This section describes the procedure under Windows XP Professional or Windows Server 2003.

#### On the [Start] menu, click [Printers and Faxes].

#### **2** Click [Add a printer].

#### **E** Follow the instructions in Add Printer Wizard.

If the printer driver is on a CD-ROM, the location of the driver is \DRIV-ERS\(RPCS, PCL6, or PCL5E)\XP\_VISTA\(language)\DISC1. If the installer starts, click [Cancel] to quit.

#### 4 Specify a port.

For the setting procedure, see a description for the port you are using.

#### Solution Note

□ Available ports vary according to your Windows operating system or the type of interface. For details, see "Preparing the Machine", Printer Reference.

#### ℅ Reference

"Preparing the Machine", Printer Reference

## Windows XP Home Edition

This section describes the procedure under Windows XP Home Edition.

On the [Start] menu, click [Control Panel].

**2** Click [Printer and Other Hardware].

**E** Click [Printers and Faxes].

#### 4 Click [Add a Printer].

## **5** Follow the instructions in Add Printer Wizard.

If the printer driver is on a CD-ROM, the location of the driver is \DRIV-ERS\(RPCS, PCL6, or PCL5E)\XP\_VISTA\(language)\DISC1. If the installer starts, click [Cancel] to quit.

#### Specify a port.

For the setting procedure, see a description for the port you are using.

#### Note 🖉

□ Available ports vary according to your Windows operating system or the type of interface. For details, see "Preparing the Machine", Printer Reference.

#### ✓ Reference

"Preparing the Machine", Printer Reference

# Windows Vista

This section describes the procedure under Windows Vista.

On the [Start] menu, click [Control Panel].

**2** Click [Hardware and Sound].

Click [Printers].

**4** Click [Add a printer].

**5** Follow the instructions in Add Printer Wizard.

If the printer driver is on a CD-ROM, the location of the driver is \DRIV-ERS\(RPCS, PCL6, or PCL5E)\XP\_VISTA\(language)\DISC1. If the installer starts, click **[Cancel]** to quit.

## **6** Specify a port.

For the setting procedure, see a description for the port you are using.

#### 🖉 Note

□ Available ports vary according to your Windows operating system or the type of interface. For details, see "Preparing the Machine", Printer Reference.

#### ₽ Reference

"Preparing the Machine", Printer Reference

# When a Message Is Displayed

This section describes the principal messages that appear on the display panel. If a message not described here appears, act according to the message.

## 🖉 Note

□ Before turning the main power off, see "Turning On the Power", About This Machine.

## 

"Turning On the Power", About This Machine

#### **Status Messages**

This section describes the machine status messages.

Message	Status
Ready	This is the default ready message. The machine is ready for use. No action is required.
Waiting	The machine is waiting for the next data to print. Wait a while.
Offline	The machine is offline. To start printing, switch the ma- chine online by pressing the <b>[Online]</b> Key.
Please wait	This message may appear for a second or two while the machine is preparing, performing initial adjustments, or adding toner. Wait a while.
Hex Dump Mode	In Hex Dump mode, the machine prints received data in hexadecimal format. Turn off the machine after printing, and then turn back on.
Resetting Job	The machine is resetting the print job. Wait until "Ready" appears on the display panel.
Setting change	The machine settings are being changed. Wait a while.

# Alert Messages

Message	Cause	Solution
Problem:Wire- less card	An error may have occurred in the IEEE 802.11b card.	Turn off the main power switch, and back on again. If the message appears again, contact your sales or service representative.
Problem:Wire- less board	An error may have occurred in the IEEE 802.11b board.	Turn off the main power switch, and back on again. If the message appears again, contact your sales or service representative.
Reset Paper Tray correctly.	The selected paper tray does not exist or is not set correctly.	Set the paper tray correctly.
Toner is al- most empty. Add toner.	Toner is running out.	Replace the toner cartridge soon to maintain print quality.
Paper Tray is in use.	The specified paper tray is in use by another function, such as the copier function.	Wait until the other function has finished using the specified paper tray.
Tray # Error	An error has occurred with the paper tray. # indicates the tray number.	Press <b>[JobReset]</b> to change the pa- per tray settings, or press <b>[Form- Feed]</b> to select another paper tray and print using that.
USB has a prob- lem.	An error has occurred in the USB interface.	Turn off the main power switch, and back on again. If the message appears again, contact your sales or service representative.
Duplex mode is in off position for Tray #	The selected paper tray has not been configured for duplex printing. # indicates the tray number.	Press <b>[JobReset]</b> to change the pa- per tray settings or do single- sid- ed printing. For details about the tray settings, see "Tray Paper Settings", Gener- al Settings Guide.
Ethernet Board Error	An error has occurred in the Eth- ernet board.	Turn off the main power switch, and back on again. If the message appears again, contact your sales or service representative.
NV-RAM Error	An error has occurred in the machine.	Turn off the main power switch, and back on again. If the message appears again, call your sales or service representative.
[Print] without below mode?	This is an alert message concern- ing a paper tray in auto tray select.	Press <b>[Print]</b> to cancel the mode and print the job.


This section describes the machine alert messages.

Message	Cause	Solution
Problem with unit. Finisher [JobReset]	There is a problem with the finisher.	Turn the power off, and then on. If the message appears again, contact your sales or service representative.
Authentication failed.	<ul> <li>The login user name or pass- word entered is incorrect.</li> <li>The machine currently cannot perform authentication.</li> </ul>	<ul><li>Check your login user name and password.</li><li>Contact the administrator.</li></ul>
Parallel I/F Er- ror	An error has occurred in the par- allel interface board.	Contact your service representative.
Printer Font Er- ror.	An error has occurred in the font settings.	Turn off the main power switch, and back on again. If the message appears again, contact your sales or service representative.
Memory Overflow	Maximum capacity of RPCS, PCL 5e/6 or PostScript 3 list display has been exceeded.	Reduce the value of <b>[Resolution]</b> in the printer driver. Alternatively, select <b>[Font Priority]</b> from <b>[Memory</b> <b>Usage]</b> in <b>[System]</b> . See "Printer Features", General Settings Guide. If this message continues to appear after taking these steps, decrease the number of files sent to the machine.


# **Printing the Error Log**

If files could not be printed due to printing errors, print the error log to identify the problem.

## Press the [User Tools/Counter] key.

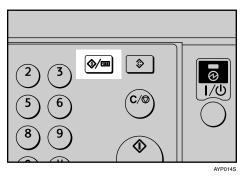

**2** Select [Printer Features] using [▲] or [▼], and then press the [OK] key.



Select [List/Test Print] using [▲] or [▼], and then press the [OK] key.

≡Print Features	1/3	\$ОК
List/Test Print		
Maintenance		
System		

Select [Error Log] using [▲] or [▼], and then press the [OK] key.

≡ListTest Prnt	1/3	\$OK)
Multiple Lists		
Config. Page		
Error Log		

An error log is printed.



- □ The most recent 30 errors are stored in the error log. If a new error is added when there are 30 errors already stored, the earliest error is deleted. You can check any of these print jobs for error log information.
- □ If the main power switch is turned off, the log is deleted.

# When You Cannot Print

Use the following procedures if printing does not start even after performing **[Print]**.

Problem	Cause	Solution
Printing does not start.	The power is off.	Check the cable is securely plugged into the power outlet and the machine. Turn on the main power switch.
Printing does not start.	The machine is set to "Offline".	Press the <b>[Online]</b> key.
Printing does not start.	The cause is displayed on the display panel.	Check the error message or warn- ing status on the display panel and take the required action. See p.42 "When a Message Is Dis- played".
Printing does not start.	The interface cable was connected after the machine was turned on.	Connect the interface cable before turning on the machine.
Printing does not start.	The interface cable is not connect- ed correctly.	Connect the interface cable se- curely. If it has a fastener, fasten that securely as well. See "Con- necting to the Interfaces", Gener- al Settings Guide.
Printing does not start.	The appropriate interface cable is not used.	The type of interface cable you should use depends on the com- puter. Be sure to use the correct one. If the cable is damaged or worn, replace it. See "Connecting to the Interfaces", General Set- tings Guide.
Printing does not start.	If an extended wireless LAN is used, failure to print might result from a weak wireless signal.	To check signal status, press the <b>[User Tools/Counter]</b> key, and then select <b>[System Settings]</b> using <b>[▲]</b> or <b>[▼]</b> . On <b>[Interface Settings]</b> , se- lect <b>[IEEE 802.11b]</b> , and then press <b>[Wireless LAN Signal]</b> using <b>[▲]</b> or <b>[▼]</b> . If signal quality is poor, move the machine to a location where radio waves can pass or re- move objects that might cause in- terference. (You can check signal status only when using wireless LAN in infrastructure mode.)
Printing does not start.	If the machine is operating in an extended wireless LAN, the SSID settings are incorrect.	Check using the machine's dis- play panel that the SSID is cor- rectly set. See "Network Settings", General Settings Guide.

Problem	Cause	Solution
Printing does not start.	If the machine is operating in an extended wireless LAN, the re- ceiver's MAC address may be preventing communication with the access point.	Check access point settings when in infrastructure mode. Depend- ing on the access point, client ac- cess may be limited by MAC address. Also, check there are no problems in transmission between access point and wired clients, and be- tween access point and wireless clients.
Printing does not start.	The extended wireless LAN has not started.	Confirm the orange LED is lit, and the green LED is lit or blinks during transmission.
Printing does not start.	Advanced encryption has been set using the Extended Security function.	Check the settings of the Extended Se- curity function with the administrator.
Printing does not start.	The login user name, password, or driver encryption key is invalid.	Check the login user name, pass- word, or driver encryption key is correct.
The Data In indicator does not blink or light up.	If the Data In indicator is unlit or not flashing even after perform- ing <b>[Print]</b> , the machine has not re- ceived the data.	<ul> <li>When the machine is connected to a computer via a cable, check the computer print port settings are correct.</li> <li>When it is networked with a computer, contact the administrator.</li> </ul>
The status indicator of the machine is red.	The cause is displayed on the display of the control panel.	Check the error message on the display panel and take required action. See p.42 "When a Message Is Displayed".
[List/Test Print] is disa- bled.	A mechanical error might have occurred.	Contact your service representa- tive. See "List/Test Print", Gener- al Settings Guide.
Printing does not start when using extended wireless LAN in Ad- hoc mode.	Correct communication mode is not set.	Turn the main power off and back on. See "Turning On the Power", About This Machine. Or, change the settings in <b>[Net- work]</b> under <b>[Interface Settings]</b> of <b>[System Settings]</b> . See "Network Settings", General Settings Guide.

If the printing does not start, contact your service representative.

When the machine is connected to the computer using the interface cable

The following shows how to check the print port when the Data In indicator does not light up or blink.

Check if the print port setting is correct. When it is connected using a parallel interface, connect it to LPT1 or LPT2.

For Windows 95/98/Me

- ① Click the [Start] button, point to [Settings], and then click [Printers].
- ② Click the icon of the machine. On the [File] menu, click [Properties].
- ③ Click the **[Details]** tab.

④ In the **[Print to the following port:]** list, confirm the correct port is selected. For Windows 2000

- ① Click the [Start] button, point to [Settings], and then click [Printers].
- ② Click the icon of the machine. On the [File] menu, click [Properties].
- ③ Click the [Ports] tab.

④ In the **[Print to the following port(s)]** list, confirm the correct port is selected. For Windows XP Professional or Windows Server 2003

- ① Click the [Start] button, and then click [Printers and Faxes].
- ② Click the icon of the machine. On the [File] menu, click [Properties].
- ③ Click the **[Ports]** tab.

④ In the **[Print to the following port(s)]** list, confirm the correct port is selected. For Windows XP Home Edition

- ① Click the [Start] button, and then click [Control Panel].
- ② Click [Printers and Other Hardware].
- **③** Click [Printers and Faxes].
- ④ Click the icon of the machine. On the [File] menu, click [Properties].
- (5) Click the **[Ports]** tab.

⑥ In the [Print to the following port(s)] list, confirm the correct port is selected. For Windows Vista

- ① Click the [Start] button, and then click [Control Panel].
- 2 Click [Printers].
- ③ Click the icon of the machine. On the [Organize] menu, click [Properties].
- ④ Click the **[Ports]** tab.
- ⑤ In the **[Print to the following port(s)]** list, confirm the correct port is selected.

# **Other Printing Problems**

This section describes likely causes of and possible solutions for problems that can occur when printing from a computer.

#### When you cannot print clearly

Problem	Cause	Solution
The print on the entire page is faded.	The paper is damp.	Use paper that has been stored in the recommended tem- perature and humidity condition. See "Copy Paper", About This Machine.
The print on the entire page is faded.	The paper is un- suitable.	Use recommended paper. (Printing on coarse or treated paper might result in faint print image.) See "Copy Pa- per", About This Machine.
The print on the entire page is faded.	In the printer driver, on the [Print Quality] tab, [Toner sav- ing] is selected.	See the printer driver Help.
Printed images contain blots or are patchy.	Settings for thick paper have not been made when printing on thick paper.	<ul> <li>PCL 6/5e Select [Thick] in the [Type:] list on the [Paper] tab.</li> <li>RPCS Select [Thick] in the [Paper type:] list on the [Setup] tab.</li> </ul>
Printed images contain blots or are patchy.	Printing on coarse paper or treated paper can result in faint print image.	Use supplier-recommended paper. See "Copy Paper", About This Machine.
Printed images contain blots or are patchy.	The paper is damp.	Use paper that has been stored in the recommended tem- perature and humidity condition. See "Copy Paper", About This Machine.
Printed images contain blots or are patchy.	Check the ma- chine is set on a level surface. The machine must be placed on a stable and level surface.	Check the environment of location to select an appropri- ate location. See p.109 "Where to Put Your Machine".
Printed images contain blots or are patchy.	The paper is creased, curled, or has blemishes.	Smooth out the wrinkles from the paper, or replace it. See "Copy Paper", About This Machine.
The image is too dark or too light.	The correct pa- per type settings are not made.	Check the paper loaded on the paper tray or bypass tray matches the paper type set on the display panel. See "Copy Paper", About This Machine.

Problem	Cause	Solution
The image is too dark or too light.	The paper is loaded reverse side up.	Before printing on special paper, check its surface careful- ly. Printing on non-print surfaces reduces print quality and can damage the machine's internal components. See "Copy Paper", About This Machine.
Image is dirty.	Use of non-rec- ommended ton- er can result in loss of print quality and oth- er problems.	Use manufacturer-genuine toner. Contact your service representative.
Print ends mid-job.	An error might have occurred.	Check the machine's display panel to see if an error has occurred.

## ✤ When certain settings are required on the printer driver

Problem	Cause	Solution
Print result dif- fers from the display.	A non-Win- dows OS is be- ing used.	Check the application supports the printer driver.
Print result dif- fers from the display.	The machine is not selected for printing.	Use the machine's printer driver and check the machine is the designated printer. See "Setting Up the Printer Driv- er", Printer Reference.
Print result dif- fers from the display.	Data transmis- sion failed or was cancelled during printing.	Check whether there is failed or cancelled data remaining. See "Checking the Error Log", Printer Reference.
Characters differ from the display.	The print densi- ty is too dark.	Adjust the image density settings. See the printer driver Help.
Characters differ from the display.	The loaded pa- per is unsuitable.	Printing on recommended paper produces better resolu- tion. See "Copy Paper", About This Machine.
It takes too much time to resume printing.	The data is so large or com- plex that it takes time to process.	If the Data In indicator is blinking, data is being proc- essed. Simply wait until printing resumes.
It takes too much time to resume printing.	The machine was in Energy Saver mode.	To resume from Energy Saver mode, it has to warm up, and this takes time. See "Timer Settings", General Settings Guide and "ENERGY STAR Program", About This Machine.
Optional com- ponents con- nected to the machine are not recognized when using Windows 95/ 98/ Me/ 2000/ XP/ Vista or Windows Serv- er 2003.	The option set- up in printer properties is not configured when bidirec- tional transmis- sion is not enabled.	Set up optional devices on the Properties of the machine. See the printer driver Help.

Problem	Cause	Solution
Some types of data, such as graphics data or data from cer- tain applica- tions, do not print.	The correct printer driver settings are not made.	<ul> <li>PCL 6/5e         <ul> <li>On the [Print Quality] tab, click [Off] in the [Toner saving] area, and then print.</li> <li>RPCS</li> <li>On the [Misc.] tab, select [Spool data in EMF format].</li> <li>In the [Change User Settings] dialog box, on the [Image Adjustments] tab, select [High quality] in the [Image processing priority:] list.</li> <li>In the [Change User Settings] dialog box, on the [Image processing priority:] list.</li> <li>In the [Change User Settings] dialog box, on the [Misc.] tab, select [Print as bitmap].</li> </ul> </li> </ul>
Some characters are not printed or appear strange.	The correct printer driver settings are not made.	<ul> <li>On the [Misc.] tab, select [Spool data in EMF format].</li> <li>In the [Change User Settings] dialog box, on the [Misc.] tab, select [Change methods to extract TrueType fonts].</li> <li>In the [Change User Settings] dialog box, on the [Misc.] tab, select [Print as bitmap].</li> <li>See the RPCS printer driver Help.</li> </ul>
Some characters are not printed or appear faint.	The correct printer driver settings are not made.	<ul> <li>PCL 6/5e         <ul> <li>On the [Print Quality] tab, click [Off] in the [Toner saving] area, and then print.</li> </ul> </li> <li>RPCS         <ul> <li>In the [Change User Settings] dialog box, on the [Image Adjustments] tab, select [High quality] in the [Image processing priority:] list.</li> </ul> </li> <li>See the printer driver Help.</li> </ul>
Print speed or application re- linquishing speed is slow.	The correct printer driver settings are not made.	<ul> <li>In the [Change User Settings] dialog box, on the [Image Adjustments] tab, select [Fast] in the [Image processing priority:] list.</li> <li>On the [Misc.] tab, select [Spool data in EMF format]. See the RPCS printer driver Help. Quit any other applications.</li> </ul>
Image position differs from the display.	The correct page layout settings are not made.	Check the page layout settings made using the applica- tion. See the application's Help.
Image position differs from the display.	The correct page layout settings are not made.	<ul> <li>PCL 6/5e         Check the size of the loaded paper matches that specified in the printer driver's [Print On] list on the [Paper] tab.     </li> <li>RPCS         Check that the size of the loaded paper matches that specified in the printer driver's [Printout paper size:] list on the [Setup] tab.     </li> <li>See the printer driver Help.</li> </ul>

Problem	Cause	Solution
The printed im- age is different from the image on the computer display.	With certain functions, such as enlargement and reduction, image layout might be differ- ent to that on the computer display.	In the application, change the layout, character size, and character settings.
The printed im- age is different from the image on the computer display.	You might have selected to re- place TrueType fonts with ma- chine fonts in the printing process.	To print an image similar to that of the computer display, make settings to print TrueType fonts as an image. See the printer driver Help.
Garbled charac- ters are printed.	The correct printer lan- guage might have not been selected.	Set the correct printer language.
Images are print- ed in the wrong orientation.	The feed orien- tation you se- lected and the feed orientation selected in the printer driver's option setup might not be the same.	Set the machine's feed orientation and the printer driver's feed orientation accordingly. See the printer driver Help.
Graphics print out differently to how they ap- pear on screen.	If the printer driver is config- ured to use the graphics com- mand, the graphics com- mand from the machine is used to print.	If you want to print accurately, set the printer driver to print without using the graphics command. See the printer driver Help.
Page layout is not as expected.	Print areas differ depending on the machine used. Informa- tion that fits on a single page on one machine may not fit on a single page of an- other machine.	On the <b>[Printer Configuration]</b> tab, adjust the <b>[Printable area:]</b> setting. See the RPCS printer driver Help.

Problem	Cause	Solution
Photo images are coarse.	Some applica- tions print at lower resolution.	Use the application's settings to specify a higher resolution.
Solid lines are printed as bro- ken lines.	Dither patterns do not match.	<ul> <li>Make the following settings with the printer driver:</li> <li>In the [Change User Settings] dialog box, on the [Image Adjustments] tab, change the [Dithering:] setting.</li> <li>See the RPCS printer driver Help.</li> </ul>
When using Windows 95/ 98/ Me/ 2000/ XP/ Vista or Windows Serv- er 2003, Auto Reduce/En- large print does not come out as expected.	-	Make sure the application's paper size and orientation set- tings match those of the printer driver. If a different paper size and orientation are set, select the same size and orientation.
When using Windows 95/ 98/ Me/ 2000/ XP/ Vista or Windows Server 2003, combined printing or booklet printing does not come out as expected.	The correct ap- plication or printer driver settings are not made.	Make sure the application's paper size and orientation set- tings match those of the printer driver. If a different paper size and orientation are set, select the same size and orientation.
A print instruc- tion was issued from the com- puter, but print- ing did not start.	User Authenti- cation may have been set.	User code management may have been set. Ask the ad- ministrator about valid user codes. To print, the user code must be entered from the printer driver.

# ✤ When paper is not fed properly

Problem	Cause	Solution
Paper is not fed from the select- ed tray.	When you are us- ing a Windows operating sys- tem, printer driv- er settings override those settings using the display panel.	Set the desired input tray using the printer driver. See the printer driver Help.
Print is slanted.	The tray's side fences might not be locked.	Check the side fences are locked. See p.92 "Changing the Paper Size".
Print is slanted.	The paper is feeding in at a slant.	Load the paper correctly. See p.87 "Loading Paper".
Print is slanted.	The machine's cover is open.	Make sure the right and lower right covers are properly closed.
Misfeeds occur frequently.	The number of sheets loaded exceeds the ca- pacity of the machine.	Load paper only as high as the upper limit markings on the side fences of the paper tray or bypass tray. See "Copy Paper", About This Machine.
Misfeeds occur frequently.	The paper is damp.	Use paper that has been stored in the recommended tem- perature and humidity condition. See "Copy Paper", About This Machine.
Misfeeds occur frequently.	The paper is too thick or too thin.	Use recommended paper. See "Copy Paper", About This Machine.
Misfeeds occur frequently.	The copy paper is wrinkled or has been fold- ed/creased.	Use recommended paper. Use paper that has been stored in the recommended temperature and humidity condi- tion. See "Copy Paper", About This Machine.
Misfeeds occur frequently.	Printed paper is being used.	Use recommended paper. See "Copy Paper", About This Machine.
Copy paper be- comes creased.	The paper is damp.	Use paper that has been stored in the recommended tem- perature and humidity condition. See "Copy Paper", About This Machine.
Copy paper be- comes creased.	The paper is too thin.	Use recommended paper. See "Copy Paper", About This Machine.
There is considera- ble delay between the print start in- struction and actu- al printing.	"Sleep mode" might be set.	The machine requires time to warm up if it has been in "Sleep mode". See "Timer Settings", General Settings Guide and "ENERGY STAR Program", About This Machine.

Problem	Cause	Solution
There is considera- ble delay between	Processing time depends on data	If the Data In indicator is blinking, data has been received by the machine. Wait for a while.
the print start in- struction and actu-	volume. High volume data,	Making the following setting on the printer driver may re- duce the computer's workload.
al printing.	such as graphics- heavy docu- ments, takes	For how to open the printing preferences dialog box, see "Setting Up the Printer Driver", Printer Reference.
	longer to process.	✤ PCL 6/5e
		Select the lower value in the <b>[Resolution]</b> list on the <b>[Print Quality]</b> tab in the printing preferences dialog box.
		* RPCS
		<ul> <li>In the [Change User Settings] dialog box, on the [Im- age Adjustments] tab, select the lower value in the [Resolution:] list.</li> </ul>
		<ul> <li>In the [Change User Settings] dialog box, on the [Im- age Adjustments] tab, Select [Fast] in the [Load docu- ment types:] list.</li> </ul>
		To enable [Change User Settings], select the [User set- tings] check box.
		See the printer driver Help.

## Other printing problems

Problem	Cause	Solution
The print job is not canceled even when the machine is switched to of- fline status.	-	Even when the machine is offline, printing is performed when [Job Acceptance Priority] is selected for [Signal Control] in [Parallel Interface] in [Interface Settings] under [System Set- tings]. Select [Printer Priority] for [Signal Control]. See "Interface Settings", General Settings Guide.
Images are in- complete, or ex- cess pages are printed.	You may be us- ing paper small- er than the size selected in the application.	Use the same size paper as that selected in the application. If you cannot load paper of the correct size, use the reduc- tion function to reduce the image, and then print. See the printer driver Help.
Duplex printing is malfunctioning.	Duplex print- ing cannot be done with paper set in the bypass tray.	When using duplex printing, make settings to use paper from a tray other than the bypass tray.
Duplex printing is malfunctioning.	You have load- ed thick paper , OHP transpar- encies, or labels specified as the paper type.	Specify another paper type.

Problem	Cause	Solution
Duplex printing is malfunctioning.	Duplex print- ing cannot be done with a tray for which <b>[Off]</b> has been speci- fied as Paper Type on the Sys- tem Settings menu.	Change the Paper Type setting for the tray to <b>[On]</b> on the System Settings menu. See "System Settings", General Settings Guide.
Printing by Bluetooth is slow.	<ul> <li>The number of jobs ex- ceeds the ca- pacity of the machine.</li> <li>A communi- cation error might have occurred.</li> <li>Interference from IEEE802.11b (wireless LAN) devic- es affects communica- tion speed.</li> <li>Bluetooth transmis- sion speeds are not high.</li> </ul>	<ul> <li>Reduce the number of jobs.</li> <li>Remove the machine from close proximity with IEEE802.11b wireless LAN devices.</li> <li>If there are active IEEE802.11b wireless LAN devices or other Bluetooth devices nearby, relocate the machine or deactivate those devices.</li> </ul>

If the problem cannot be solved, contact your sales or service representative.

# 5. Troubleshooting When Using the Scanner Function

This chapter describes likely causes of and possible solutions for scanner function problems. When using the DDST Unit, see "Troubleshooting When Using the DDST Unit".

# When Scanning Is Not Done As Expected

Problem	Cause	Solution
The scanned image is dirty.	The exposure glass, scanning glass, exposure glass cover or ARDF is dirty.	Clean these parts. See p.113 "Maintaining Your Machine".
The image is distorted or out of position.	The original was moved during scanning.	Do not move the original during scanning.
The image is distorted or out of position.	The original was not pressed flat against the exposure glass.	Make sure that the original is pressed flat against the exposure glass.
The scanned image is upside down.	The original was placed upside down.	Place the original in the correct orientation. See "Original Orien- tation", Scanner Reference.
No image results from scanning.	The original was placed with the front and back reversed.	When the original is placed direct- ly on the exposure glass, the side to be scanned must face down. When the original is fed via the ARDF, the side to be scanned must face up. See "Original Orien- tation", Scanner Reference.
The scanned image contains white spaces.	If you scan originals using func- tions other than the network TWAIN scanner function, certain paper size and resolution settings may produce scanned images that are larger than the specified size because of margins being added to the sides.	Scanning at a higher resolution may reduce the margins.

This section describes causes and remedies when scan results are not as expected.

# When You Cannot Send Scanned Files

The following sections describe likely causes of and solutions for network delivery and e-mail sending-related problems.

## When You Cannot Browse the Network to Send a Scanned File

This section describes likely causes of and possible solutions for the browser network failing to operate when files are sent.

Problem	Cause	Solution
The network cannot be browsed when specify- ing the destination folder.	<ul><li>The following machine settings may not be correct:</li><li>IPv4 address</li><li>Subnet Mask</li></ul>	Check the settings. See "Network Settings", General Settings Guide.

# When the TWAIN Driver Cannot Be Started

This section describes likely causes of and possible solutions for the TWAIN driver failing to operate.

Problem	Cause	Solution
The Scanner Properties dialog box cannot be displayed.	Advanced encryption has been specified in the extended security setting.	For details about the extended securi- ty setting, contact the administrator.

# The Network Delivery Function Cannot Be Used

This section describes likely causes of and possible solutions for the Network Delivery function failing to operate.

Problem	Cause	Solution
The network delivery function cannot be used.	The delivery software may be an old version or a security setting may be specified.	Contact the administrator.
The network delivery function cannot be used.	The network delivery function setting is not correct.	Specify it correctly. See "Settings Required to Use the Network De- livery Scanner", General Settings Guide.

# **Operations Are Not Possible When Messages Appear**

This section describes likely causes of and possible solutions for messages that appear when the machine fails to operate.

Message	Cause	Solution
Updating desti- nation list. Re- select destination(s) or sender's name later.	The destination list is being up- dated from the network using SmartDeviceMonitor for Admin or Web Image Monitor.	Wait until the message disap- pears. Do not switch off the pow- er while this message is displayed. Depending on the number of destinations to be up- dated, there may be some delay before you can resume operation. Operations are not possible while this message is displayed.

# When a Message Is Displayed

This section describes likely causes of and possible solutions for error messages that may appear on the machine's display panel and the Client Computer.

## When a Message Is Displayed on the Display Panel

This section describes causes and remedies if an error message appears on the display of the control panel.

#### ∰Important

□ For messages that are not listed here, see "When You Have Problems Operating the Machine".

Message	Cause	Solution
Connection with LDAP server has failed. Check the server sta- tus.	A network error has occurred and connection has failed.	Try the operation once more. If the message is still shown, the network may be crowded. Check the information of System Set- tings. See "Administrator Tools", General Settings Guide.
LDAP server auth. has failed. Check the settings.	The user name and password dif- fer from those settings for LDAP server authentication.	Make settings correctly for the user name and the password for LDAP server authentication.
Destination list has been updated. Se- lected destina- tions/sender will be cleared.	A specified destination or send- er's name was cleared when the destination list in the delivery server was updated.	Specify the destination or send- er's name again.
Updating desti- nation list has failed. Try again?	A network error has occurred.	Check whether the server is connected.
Updating desti- nation list. Re- select destination(s) or sender's name later.	The destination list is being updated.	If a destination or sender's name was already selected, re-select it after this message disappears.

Message	Cause	Solution
Cannot detect original size Select scan size.	You have loaded paper of a size not shown in Paper Size Settings with User Tools.	<ul> <li>Place the original correctly.</li> <li>Specify the scan size.</li> <li>When placing an original directly on the exposure glass, the lifting / lowering action of the ARDF triggers the automatic original size detection process. Lift the ARDF by more than 30 degrees. See "Placing Originals", Copy Reference.</li> </ul>
Exceeded max. number of search results which can be dis- played. Max.: nnn (A figure is placed at n.)	Search results have exceeded the maximum displayable number.	Search again after changing the search conditions.
You do not have privileges to use this func- tion.	The use of this function is restrict- ed to authentified users only.	Contact the administrator.
LDAP server search timed out. Check the server status.	A network error has occurred and connection has failed.	Try the operation once more. If the message is still shown, the network may be crowded. Check the information of System Set- tings. See "Administrator Tools", General Settings Guide.
Specified group contains some invalid dest. Do you want to se- lect only valid dest.?	The specified group contains some destinations for sending by e-mail and some destinations for sending by Scan to Folder.	To select destinations for sending by e-mail, press <b>[Select]</b> for the message displayed on the e-mail screen. To select destination for sending by Scan to Folder, press <b>[Select]</b> for the message displayed on the Scan to Folder screen.
Connection has failed. Check settings and check Scanned File Status.	The correct network settings are not made.	<ul> <li>Check the network settings of the client computer.</li> <li>Check that components such as the LAN cable are connected properly.</li> <li>Check that the server settings are correct and the server is working properly.</li> </ul>

Message	Cause	Solution
Dest. authenti- cation failed. Check settings and check Scanned File Status.	The entered user name or pass- word was invalid.	<ul> <li>Check that the user name and password are correct.</li> <li>Check that the ID and password for the destination folder are correct.</li> <li>A password of 128 or more characters may not be recognized.</li> </ul>
Sender's name is not selected. Specify send- er's name.	The sender's name was not specified.	A sender's name should be speci- fied before sending e-mail. Send e-mail after specifying the send- er's name.
Cannot enter manually more than nnn desti- nations. (A figure is placed at n.)	The e-mail has too many (nnn or more) destinations.	Split the destinations into two or more groups.
Cannot specify more than nnn destinations. (A figure is placed at n.)	The e-mail has too many (nnn or more) destinations.	Split the destinations into two or more groups.
The number of destination folders se- lectable in one time is limited to nn. (A figure is placed at n.)	The maximum number of desti- nation folders that can be selected at one time has been exceeded.	Select nn or fewer destination folders.
Exceeded max. E- mail size. Send- ing E-mail has been cancelled.	The maximum e-mail size has been exceeded.	<ul> <li>Increase the size of [Max. E-mail Size].</li> <li>Set [Divide &amp; Send E-mail] to [On (per page)] or [On (per max. size)].</li> <li>See "Send Settings", General Settings Guide.</li> </ul>
Sending failed. Check settings and check Scanned File Status.	While a file was being sent, a net- work error occurred and the file could not be sent correctly.	Try the operation once more. If the message is still shown, the network may be crowded. Con- tact the administrator. Press the <b>[Job Information]</b> key to display the transmission results, and then check which job has not been sent. See "Confirmation Dis- plays", Scanner Reference.

Message	Cause	Solution
Entered protec- tion code for dest. is incor- rect. Please re- enter.	The correct protection code was not entered.	Make sure the protection code is correct, and then enter it again. See "Registering a Protection Code", General Settings Guide.
Exceeded max. number of alpha- numeric charac- ters.	The maximum enterable number of alphanumeric characters has been exceeded.	Make sure the maximum number of characters which can be en- tered, and then enter it again. See "Values of Various Set Items for Transmission/Delivery Func- tion", Scanner Reference.
Authentication failed.	The entered login user name or password is incorrect.	Check the login user name and pass- word. The machine is unable to au- thenticate. Contact the administrator.
Exceeded max. data size per file.Cannot scan. The scanned data will be deleted.	The data size exceeded the capac- ity per file.	Reduce the data size and send them again.
Original is be- ing scanned by another func- tion.	The machine is using another function such as copying.	Retry scanning after the operation with another function is completed.
Exceeded max.memory ca- pa. Scanning will be can- celled. Scanned data will be cleared.	The memory is full.	<ul> <li>Try one of the following measures:</li> <li>Wait for a while, and then retry the scan operation.</li> <li>Reduce the scan area or scanning resolution.</li> <li>Delete unneeded stored files.</li> </ul>
Exceeded max. memory capaci- ty. Do you want to send the scanned data?	The memory is full.	Specify whether to use the data or not.
No valid dest. lists.Check the settings or the server status.	The authentic settings for the de- livery server are incorrect.	Check that the delivery server is on and the authentic settings for the delivery server are correct.

Message	Cause	Solution
Sending has failed. Press Job Information key to check the status.	Sending has failed. Press the <b>Job Information</b> key to check the status.	Try the operation once more. If the message is still shown, the network may be crowded. Con- tact your network administrator. Use the Job Information screen to check for the file where the prob- lem occurred. See "Confirmation Displays", Scanner Reference.
Out of paper. Set paper on the tray.	No paper is loaded in the speci- fied paper tray.	Load paper of a size that is listed in the message.
Exceeded max. page capacity. Do you want to send the scanned data?	The number of scanned pages ex- ceeded maximum page capacity.	Select whether to send the data so far.

# 

p.6 "When You Have Problems Operating the Machine"

### When a Message Is Displayed on the Client Computer

This section describes likely causes of and possible solutions for the main error messages displayed on the client computer when using the TWAIN driver.

#### ∰Important

If an error message that is not included in this section appears, turn off the main power switch of the machine, and then turn it on again. For details about how to turn off the main power switch, see "Turning On the Main Power", About This Machine.

Message	Cause	Solution
Clear Mis- feed(s) in ADF.	A paper misfeed has occurred inside the ARDF.	Remove jammed originals, and place them again. After removing the misfed paper, proceed with scanning. Check whether the originals are suit- able to be scanned by the machine.
Invalid Winsock version. Please use version 1.1 or higher.	You are using an invalid version of Winsock.	Install the operating system of the computer or copy Winsock from the operating system CD-ROM.
The name is al- ready in use. Check the regis- tered names.	You tried to register a name that is already in use.	Use another name.
Cannot detect the paper size of the original. Specify the scanning size.	The set original was misaligned.	<ul> <li>Place the original correctly.</li> <li>Specify the scan size.</li> <li>When placing an original directly on the exposure glass, the lift- ing/lowering action of the ARDF triggers the automatic original size detection process. Lift the ARDF by more than 30 degrees.</li> </ul>
Cannot add any more scanning mode.	The maximum number of regis- terable scanning modes has been exceeded.	The maximum number of scanning modes that can be stored is 99. De- lete unneeded scanning modes.
Cannot specify any more scan- ning area.	The maximum number of regis- terable scanning areas has been exceeded.	The maximum number of scanning areas that can be stored is 99. De- lete unneeded scanning areas.
Please call your service repre- sentative.	An unrecoverable error has oc- curred in the machine.	Contact your service representative.
Scanner is not available on the specified de- vice.	The TWAIN scanner function cannot be used on this machine.	Contact your service representative.

Message	Cause	Solution	
Scanner is not available. Check the scan- ner connection status.	<ul> <li>The machine's main power switch is off.</li> <li>The machine is not connected to the network correctly.</li> </ul>	<ul> <li>Set the main power switch to "On".</li> <li>Check whether the machine is connected to the network correctly.</li> <li>Deselect the personal firewall function of the client computer.</li> <li>Use an application such as telnet to make sure SNMPv1 or SNMPv2 is set as the machine's protocol. See "Network Settings", General Settings Guide and "Remote Maintenance by telnet", Network Guide.</li> </ul>	
No response from the scanner.	The machine is not connected to the network correctly.	Check whether the machine is con- nected to the network correctly.	
No response from the scanner.	The network is crowded.	Wait for a while, and then try to reconnect.	
Error has oc- curred in the scanner.	The application-specified scan conditions have exceeded the set- ting range of the machine.	Check whether the scanning set- tings made with the application exceed the setting range of the machine.	
Fatal error has occurred in the scanner.	An unrecoverable error has oc- curred on the machine.	Contact your service representative.	
Cannot connect to the scanner. Check the net- work Access Mask settings in User Tools.	An access mask is set.	Contact the administrator.	
Scanner is not ready. Check the scanner and the options.	The ARDF cover is open.	Check whether the ARDF cover is closed.	
Insufficient memory. Reduce the scanning ar- ea.	Scanner memory is insufficient.	<ul> <li>Reset the scan size.</li> <li>Lower the resolution.</li> <li>Set with no compression. See TWAIN Driver help.</li> </ul>	

Message	Cause	Solution
Cannot find "xxx" scanner used for the previous scan. "YYY" will be used instead. (XXX and YYY indicate a scanner name.)	<ul> <li>The main power switch of the previously used scanner is not set to "On".</li> <li>The machine is not connected to the network correctly.</li> </ul>	<ul> <li>Check whether the main power switch of the scanner used for the previous scan is turned on.</li> <li>Check the previously used scanner is connected to the network correctly.</li> <li>Deactivate the personal firewall of the client computer.</li> <li>Use an application such as telnet to make sure SNMPv1 or SNMPv2 is set as the machine's protocol. See "Network Settings", General Settings Guide and "Remote Maintenance by telnet", Network Guide.</li> <li>Select the scanner used for the</li> </ul>
Error has oc- curred in the scanner driver.	An error has occurred in the driver.	<ul> <li>previous scan.</li> <li>Check whether the network cable is connected correctly to the client computer.</li> <li>Check whether the Ethernet board of the client computer is recognized correctly by Windows.</li> <li>Check whether the client computer can use the TCP/IP protocol.</li> </ul>
Communication error has oc- curred on the network.	A communication error has oc- curred on the network.	Check whether the client compu- ter can use the TCP/IP protocol.
Insufficient memory. Close all other appli- cations, then restart scan- ning.	Memory is insufficient.	<ul> <li>Close all the unnecessary applications running on the client computer.</li> <li>Uninstall the TWAIN Driver, restart the computer, and then reinstall the TWAIN Driver.</li> </ul>
The login user name, login password, or driver encryp- tion key entered is invalid.	The entered login user name, password, or driver encryption key was invalid.	<ul> <li>Check the login user name, password, and driver encryp- tion key.</li> <li>Permission to use this func- tion has not been granted. Contact the administrator.</li> </ul>

## PReference

"Turning On the Power", About This Machine

# 6. Troubleshooting When Using the DDST Unit

This chapter describes likely causes of and possible solutions for printer and scanner function problems when using machines with the DDST Unit.

# **The Printer Function**

# When a Message Is Displayed during Installation of the Printer Driver

This section describes what to do if a message appears when installing the printer driver.

The message number 58 or 34 indicates that the printer driver cannot be installed using Auto Run. Install the printer driver using **[Add Printer]** or **[Install Printer]**.

#### Windows 98/Me/2000

This section describes the procedure for Windows 98/Me/2000.

On the [Start] menu, point to [Settings], and then click [Printers].

**2** Double-click the Add Printer icon.

### **B** Follow the instructions in Add Printer Wizard.

If the printer driver is on a CD-ROM, the location of the driver is either \DRIVERS\DDST\WIN9X\_ME\(language)\DISK1, or \DRIVERS\DDST\ WIN2K\_XP\(language)\DISK1. If the installer starts, click **[Cancel]** to quit.

### 4 Specify a port.

For the setting procedure, see a description for the port you are using.

### 🖉 Note

Available ports vary according to your Windows operating system or the type of interface. For details, see "Using the Printer Function", Printer/Scanner Reference.

### ✓ Reference

"Using the Printer Function", Printer/Scanner Reference

#### Windows XP Professional or Windows Server 2003

This section describes the procedure for Windows XP Professional and Windows Server 2003.

### On the [Start] menu, click [Printers and Faxes].

### **2** Click [Add a printer].

### **B** Follow the instructions in Add Printer Wizard.

If the printer driver is on a CD-ROM, the location of the driver is \DRIV-ERS\DDST\WIN2K\_XP\(language)\DISK1. If the installer starts, click **[Cancel]** to quit.

### **4** Specify a port.

For the setting procedure, see a description for the port you are using.

#### 🖉 Note

□ Available ports vary according to your Windows operating system or the type of interface. For details, see "Using the Printer Function", Printer/Scanner Reference.

#### ✓ Reference

"Using the Printer Function", Printer/Scanner Reference

#### Windows XP Home Edition

This section describes the procedure for Windows XP Home Edition.

On the [Start] menu, click [Control Panel].

Click [Printer and Other Hardware].

Click [Printers and Faxes].

### 4 Click [Add a Printer].

### **5** Follow the instructions in Add Printer Wizard.

If the printer driver is on a CD-ROM, the location of the driver is \DRIV-ERS\DDST\WIN2K\_XP\(language)\DISC1. If the installer starts, click **[Cancel]** to quit.

### **G** Specify a port.

For the setting procedure, see a description for the port you are using.

#### 🖉 Note

□ Available ports vary according to your Windows operating system or the type of interface. For details, see "Using the Printer Function", Printer/Scanner Reference.

#### Reference

"Using the Printer Function", Printer/Scanner Reference

### When a Message Is Displayed

This section describes the principal messages that appear on the display panel. If a message not described here appears, act according to the message.

### 🖉 Note

Before turning the main power off, see "Turning On the Power", About This Machine.

### ₽ Reference

"Turning On the Power", About This Machine

#### Status messages

This section describes the machine status messages.

Message	Status
Ready	This is the default ready message. The machine is ready for use. No action is required.
Waiting	The machine is waiting for the next data to print. Wait a while.
Offline	The machine is offline. To start printing, switch the machine on- line by pressing the <b>[Online]</b> key on the control panel.
Please wait	This message may appear for a second or two while the ma- chine is preparing, performing initial adjustments, or adding toner. Wait a while.
Hex Dump Mode	In Hex Dump mode, the machine prints received data in hexa- decimal format. Turn off the machine after printing, and then turn back on.
Resetting Job	The machine is resetting the print job. Wait until "Ready" appears on the display.
Setting change	The machine is setting changing. You cannot use the control panel while this message is displayed. Wait a while.

#### Alert messages

Messages/Second messages	Causes	Solutions
Duplex mode is in off position for Tray #	The selected paper tray has not been configured for du- plex printing. # indicates the tray number.	Press <b>[JobReset]</b> to change the paper tray settings or do sin- gle-sided printing. For details about tray settings, see "Canceling a Print Job", Printer/Scanner Reference.
Ethernet Board Error	An error has occurred in the Ethernet interface.	Turn the main power switch off, wait a few seconds, and then turn it back on. If the message appears again, contact your sales or service representative.
NV-RAM Error	An error has occurred in the printer.	Turn the main power switch off, wait a few seconds, and then turn it back on. If the message appears again, contact your sales or service representative.
[Print] without be- low mode?	This is an alert message con- cerning a paper tray in auto tray select.	Press <b>[Print]</b> to cancel the mode and print the job.
Printer Font Error.	An error has occurred in the font file.	Turn the main power switch off, wait a few seconds, and then turn it back on. If the message appears again, contact your sales or service representative.
Problem with unit. Finisher [JobReset]	There is a problem with the finisher.	Turn the power off, and then on. If the message appears again, contact your sales or service representative.
Memory Overflow	Maximum capacity of RPCS, PCL 5e/6 or PostScript 3 list display has been exceeded.	Reduce the value of <b>[Resolu- tion]</b> in the printer driver. Al- ternatively, select <b>[Font</b> <b>Priority]</b> from <b>[Memory Usage]</b> in <b>[System]</b> . See "Printer Fea- tures", General Settings Guide. If this message contin- ues to appear after taking these steps, decrease the number of files sent to the ma- chine.
Paper Tray is in use.	The specified paper tray is in use by another function, such as the copier function.	Wait until the other function has finished using the speci- fied paper tray.


This section describes the machine alert messages.

Messages/Second messages	Causes	Solutions
Reset Paper Tray correctly.	The selected paper tray does not exist or is not set correctly.	Set the paper tray correctly.
Latoner is almost empty. Add toner.	Toner is running out.	Replace the toner cartridge soon to maintain print quality.
Tray # Error	A paper tray error has occurred. # indicates the tray number.	Press <b>[JobReset]</b> to change the paper tray settings, or press <b>[FormFeed]</b> to select another paper tray and print.
USB has a problem.	An error has occurred in the USB interface.	Turn the main power switch off, wait a few seconds, and then turn it back on. If the message appears again, contact your sales or service representative.

#### Printing the error log

If files could not be printed due to printing errors, print the error log to identify the problem.


Press the [User Tools/Counter] key.

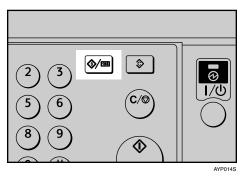

**2** Select [Printer Features] using [▲] or [▼], and then press the [OK] key.

≡User Tools	3/4	\$ОК)
Printer Features		
Scanner Features		

Select [List/Test Print] using [▲] or [▼], and then press the [OK] key.



Select [Error Log] using [▲] or [▼], and then press the [OK] key.

⊟ListTest Prnt	1/3	\$ОК)
Multiple Lists		
Config. Page		
Error Log		

An error log is printed.

#### 🖉 Note

- □ The most recent 30 errors are stored in the error log. If a new error is added when there are 30 errors already stored, the earliest error is deleted. You can check any of these print jobs for error log information.
- □ If the main power switch is turned off, the log is deleted.

### When You Cannot Print

Use the following procedures if printing does not start even after performing **[Print]**.

Problem	Cause	Solution
Printing does not start.	The power is off.	Check the cable is securely plugged into the power outlet and the machine. Turn on the main power switch.
Printing does not start.	The machine is set to "Of- fline".	Press the <b>[Online]</b> key.
Printing does not start.	The cause is displayed on the display panel.	Check the error message or warning status on the display panel and take the required action. See p.83 "When a Mes- sage Is Displayed".
Printing does not start.	The interface cable was con- nected after the machine was turned on.	Connect the interface cable be- fore turning on the machine.
Printing does not start.	The interface cable is not con- nected correctly.	Connect the interface cable se- curely. If it has a fastener, fas- ten that securely as well. See "Connecting the Machine", General Settings Guide.
Printing does not start.	The appropriate interface cable is not used.	The type of interface cable you should use depends on the computer. Be sure to use the correct one. If the cable is damaged or worn, replace it. See "Connecting the Ma- chine", General Settings Guide.
[List/Test Print] is disabled.	A mechanical error might have occurred.	Contact your service repre- sentative. See "List/Test Print", General Settings Guide.

If the printing does not start, contact your service representative.

When the machine is connected to the computer using the interface cable

The following shows how to check the print port when the Data In indicator does not light up or blink.

Check if the print port setting is correct. For USB port connection, the USB port must be set.

For Windows 98/Me

- ① Click the [Start] button, point to [Settings], and then click [Printers].
- ② Click the icon of the machine. On the [File] menu, click [Properties].
- ③ Click the **[Details]** tab.

④ In the **[Print to the following port:]** list, confirm the correct port is selected. For Windows 2000

- ① Click the [Start] button, point to [Settings], and then click [Printers].
- ② Click the icon of the machine. On the [File] menu, click [Properties].
- ③ Click the [Ports] tab.

④ In the **[Print to the following port(s)]** list, confirm the correct port is selected. For Windows XP Professional or Windows Server 2003

- ① Click the [Start] button, and then click [Printers and Faxes].
- ② Click the icon of the machine. On the [File] menu, click [Properties].
- ③ Click the **[Ports]** tab.

④ In the **[Print to the following port(s)]** list, confirm the correct port is selected. For Windows XP Home Edition

- ① Click the [Start] button, and then click [Control Panel].
- ② Click [Printers and Other Hardware].
- **③** Click [Printers and Faxes].
- ④ Click the icon of the machine. On the [File] menu, click [Properties].
- (5) Click the **[Ports]** tab.
- (6) In the **[Print to the following port(s)]** list, confirm the correct port is selected.

### **Other Printing Problems**

This section describes likely causes of and possible solutions for problems that can occur when printing from a computer.

#### When you cannot print clearly

Problem	Cause	Solution
The print on the entire page is faded.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Copy Paper", About This Machine.
The print on the entire page is faded.	The paper is unsuitable.	Use recommended paper. (Printing on coarse or treated paper might result in faint print image.) See "Copy Pa- per", About This Machine.
Printed images contain blots or are patchy.	Settings for thick paper have not been made when printing on thick paper.	Select <b>[Thick]</b> in the <b>[Type:]</b> list on the <b>[Paper]</b> tab.
Printed images contain blots or are patchy.	Printing on coarse paper or treated paper can result in faint print image.	Use supplier-recommended paper. See "Copy Paper", About This Machine.
Printed images contain blots or are patchy.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Copy Paper", About This Machine.
Printed images contain blots or are patchy.	Check the machine is set on a level surface. The machine must be placed on a stable and level surface.	Check the environment of lo- cation to select an appropriate location. See p.109 "Where to Put Your Machine".
Printed images contain blots or are patchy.	The paper is creased, curled, or has blemishes.	Smooth out the wrinkles from the paper, or replace it. See "Copy Paper", About This Machine.
The image is too dark or too light.	The correct paper type set- tings are not made.	Check the paper loaded on the paper tray or bypass tray matches the paper type set on the display panel. See "Copy Paper", About This Machine.

Problem	Cause	Solution
The image is too dark or too light.	The paper is loaded reverse side up.	Before printing on special pa- per, check its surface careful- ly. Printing on non-print surfaces reduces print quality and can damage the machine's internal components. See "Copy Paper", About This Machine.
Image is dirty.	Use of non-recommended toner can result in loss of print quality and other problems.	Use manufacturer-genuine toner. Contact your service representative.
Print ends mid-job.	An error might have occurred.	Check the machine's display pan- el to see if an error has occurred.

### ✤ When certain settings are required on the printer driver

Problem	Cause	Solution
Print result differs from the display.	A non-Windows OS is being used.	Check the application sup- ports the printer driver.
Print result differs from the display.	The machine is not selected for printing.	Use the machine's printer driv- er and check the machine is the designated printer. See "Set- ting Up the Printer Driver", Printer/Scanner Reference.
Print result differs from the display.	Data transmission failed or was cancelled during printing.	Check whether there is failed or cancelled data remaining. See "Checking the Error Log", Printer/Scanner Reference.
Characters differ from the display.	The print density is too dark.	Adjust the image density set- tings. See the printer driver Help.
Characters differ from the display.	The loaded paper is unsuitable.	Printing on recommended pa- per produces better resolu- tion. See "Copy Paper", About This Machine.
It takes too much time to resume printing.	The data is so large or complex that it takes time to process.	If the Data In indicator is blinking, data is being proc- essed. Simply wait until print- ing resumes.
It takes too much time to resume printing.	The machine was in Energy Saver mode.	To resume from Energy Saver mode, it has to warm up, and this takes time. See "Timer Set- tings", General Settings Guide and "ENERGY STAR Pro- gram", About This Machine.

Problem	Cause	Solution
Optional components con- nected to the machine are not recognized when using Win- dows 98/ Me/ 2000/ XP or Windows Server 2003.	The option setup in printer properties is not configured when bidirectional transmis- sion is not enabled.	See the printer driver Help.
Some types of data, such as graphics data or data from certain applications, do not print.	The correct printer driver set- tings are not made.	On the <b>[Print Quality]</b> tab, click <b>[Toner Save Off]</b> in the <b>[Toner Save]</b> area, and then print. See the printer driver Help.
Some characters are not print- ed or appear faint.	The correct printer driver set- tings are not made.	On the <b>[Print Quality]</b> tab, click <b>[Toner Save Off]</b> in the <b>[Toner Save]</b> area, and then print. See the printer driver Help.
Print speed or application re- linquishing speed is slow.	The correct printer driver set- tings are not made.	See the printer driver Help. Quit any other applications.
Image position differs from the display.	The correct page layout set- tings are not made.	Check the page layout settings made using the application. See the application's Help.
The printed image is different from the image on the compu- ter display.	With certain functions, such as enlargement and reduction, image layout might be differ- ent to that on the computer display.	In the application, change the layout, character size, and character settings.
The printed image is different from the image on the compu- ter display.	You might have selected to re- place TrueType fonts with machine fonts in the printing process.	To print an image similar to that of the computer display, make settings to print Tru- eType fonts as an image. See the printer driver Help.
Garbled characters are printed.	The correct printer language might have not been selected.	Set the correct printer language.
Images are printed in the wrong orientation.	The feed orientation you se- lected and the feed orientation selected in the printer driver's option setup might not be the same.	Set the machine's feed orienta- tion and the printer driver's feed orientation accordingly. See the printer driver Help.
Images are incomplete, or ex- cess pages are printed.	You may be using paper smaller than the size selected in the application.	Use the same size paper as that selected in the applica- tion. If you cannot load paper of the correct size, use the re- duction function to reduce the image, and then print. See the printer driver Help.
Graphics print out differently to how they appear on screen.	If the printer driver is config- ured to use the graphics com- mand, the graphics command from the machine is used to print.	If you want to print accurate- ly, set the printer driver to print without using the graph- ics command. See the printer driver Help.

Problem	Cause	Solution
Photo images are coarse.	Some applications print at lower resolution.	Use the application's settings to specify a higher resolution.
When using Windows 98/ Me/ 2000/ XP or Windows Server 2003, Auto Re- duce/Enlarge print does not come out as expected.	-	Make sure the application's paper size and orientation set- tings match those of the print- er driver. If a different paper size and orientation are set, select the same size and orientation.
When using Windows 98/ Me/ 2000/ XP or Windows Server 2003, combined print- ing or booklet printing does not come out as expected.	The correct application or printer driver settings are not made.	Make sure the application's pa- per size and orientation set- tings match those of the printer driver. If a different paper size and orientation are set, select the same size and orientation.

### ✤ When paper is not fed properly

Problem	Cause	Solution
Paper is not fed from the se- lected tray.	When you are using a Win- dows operating system, print- er driver settings override those settings using the dis- play panel.	Set the desired input tray us- ing the printer driver. See the printer driver Help.
Print is slanted.	The tray's side fences might not be locked.	Check the side fences are locked. See p.92 "Changing the Paper Size".
Print is slanted.	The paper is feeding in at a slant.	Load the paper correctly. See p.87 "Loading Paper".
Print is slanted.	The machine's cover is open.	Make sure the right and lower right covers are properly closed.
Misfeeds occur frequently.	The number of sheets loaded exceeds the capacity of the machine.	Load paper only as high as the upper limit markings on the side fences of the paper tray or bypass tray. See "Copy Pa- per", About This Machine.
Misfeeds occur frequently.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Copy Paper", About This Machine.
Misfeeds occur frequently.	The paper is too thick or too thin.	Use recommended paper. See "Copy Paper", About This Machine.

Problem	Cause	Solution
Misfeeds occur frequently.	The copy paper is wrinkled or has been folded/creased.	Use recommended paper. Use paper that has been stored in the recommended tempera- ture and humidity condition. See "Copy Paper", About This Machine.
Misfeeds occur frequently.	Printed paper is being used.	Use recommended paper. See "Copy Paper", About This Machine.
Copy paper becomes creased.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Copy Paper", About This Machine.
Copy paper becomes creased.	The paper is too thin.	Use recommended paper. See "Copy Paper", About This Machine.
There is considerable delay between the print start in- struction and actual printing.	"Off mode" might be set.	The machine requires time to warm up if it has been in "Off mode". Specify "Off mode" in [System Settings], [Auto Off Tim- er].
There is considerable delay between the print start in- struction and actual printing.	Processing time depends on data volume. High volume data, such as graphics-heavy documents, takes longer to process.	If the Data In indicator is blinking, data has been re- ceived by the machine. Wait for a while.

### Other printing problems

Problem	Cause	Solution
Duplex printing is malfunc- tioning.	Duplex printing cannot be done with paper set in the by- pass tray.	When using duplex printing, make settings to use paper from a tray other than the by- pass tray.
Duplex printing is malfunc- tioning.	You have loaded thick paper specified as the paper type.	Specify another paper type.
Duplex printing is malfunc- tioning.	Duplex printing cannot be done with a tray for which <b>[Thick]</b> has been specified as Paper Type on the System Set- tings menu.	Change the Paper Type set- ting for the tray to <b>[No Display</b> <b>(Plain Paper)]</b> on the System Settings menu. See "System Settings", General Settings Guide.

If the problem cannot be solved, contact your sales or service representative.

## **The Scanner Function**

### When Scanning Is Not Done As Expected

This section describes causes and remedies when scan results are not as expected.

Problem	Cause	Solution	
The scanned image is dirty.	The exposure glass, scanning glass, exposure glass cover, or ARDF is dirty.	Clean these parts. See p.113 "Maintaining Your Machine".	
The image is distorted or out of position.	The original was moved dur- ing scanning.	Do not move the original dur- ing scanning.	
The image is distorted or out of position.	The original was not pressed flat against the exposure glass.	Make sure that the original is pressed flat against the expo- sure glass.	
The scanned image is upside down.	The original was placed up- side down.	Place the original in the cor- rect orientation. See "Placing Originals", Printer/Scanner Reference.	
No image results from scanning.	The original was placed with the front and back reversed.	When the original is placed directly on the exposure glass, the side to be scanned must face down. When the original is fed via the ARDF, the side to be scanned must face up. See "Placing Originals", Print- er/Scanner Reference.	
The scanned image contains white spaces.	If you scan originals using functions other than the net- work TWAIN scanner func- tion, certain paper size and resolution settings may pro- duce scanned images that are larger than the specified size because of margins being add- ed to the sides.	Scanning at a higher resolu- tion may reduce the margins.	

### When a Message Is Displayed

This section describes likely causes of and possible solutions for error messages that may appear on the machine's display panel and the Client Computer.

#### When a message is displayed on the client computer

This section describes likely causes of and possible solutions for the main error messages displayed on the client computer when using the TWAIN driver.

#### ∰Important

If an error message that is not included in this section appears, turn off the main power switch of the machine, and then turn it on again. For details about how to turn off the main power switch, see "Turning On the Main Power", About This Machine.

Message	Cause	Solution
Clear Misfeed(s) in ADF.	A paper misfeed has occurred inside the ARDF.	Remove jammed originals, and place them again. After removing the misfed pa- per, proceed with scanning. Check whether the originals are suitable to be scanned by the machine.
The name is already in use. Check the registered names.	You tried to register a name that is already in use.	Use another name.
Cannot detect the paper size of the original. Specify the scanning size.	The set original was misaligned.	<ul> <li>Place the original correctly.</li> <li>Specify the scan size.</li> <li>When placing an original directly on the exposure glass, the lifting/lowering action of the ARDF triggers the automatic original size detection process. Lift the ARDF by more than 30 degrees.</li> </ul>
Cannot add any more scanning mode.	The maximum number of reg- isterable scanning modes has been exceeded.	The maximum number of scanning modes that can be stored is 99. Delete unneeded scanning modes.
Cannot specify any more scanning area.	The maximum number of reg- isterable scanning areas has been exceeded.	The maximum number of scanning areas that can be stored is 99. Delete unneeded scanning areas.
Please call your service representa- tive.	An unrecoverable error has occurred in the machine.	Contact your service repre- sentative.

Message	Cause	Solution	
Scanner is not available on the specified device.	The TWAIN scanner function cannot be used on this machine.	Contact your service repre- sentative.	
Scanner is not available. Check the scanner connection status.	<ul><li>The machine's main power switch is off.</li><li>The machine is not connect- ed to the network correctly.</li></ul>	<ul> <li>Set the main power switch to "On".</li> <li>Check whether the machine is connected to the network correctly.</li> </ul>	
No response from the scanner.	The machine is not connected to the network correctly.	Check whether the machine is connected to the network correctly.	
No response from the scanner.	The network is crowded.	Wait for a while, and then try to reconnect.	
Error has occurred in the scanner.	The application-specified scan conditions have exceeded the setting range of the machine.	Check whether the scanning settings made with the appli- cation exceed the setting range of the machine.	
Fatal error has oc- curred in the scan- ner.	An unrecoverable error has occurred on the machine.	Contact your service repre- sentative.	
Scanner is not ready. Check the scanner and the op- tions.	The ARDF cover is open.	Check whether the ARDF cov- er is closed.	
Insufficient memory. Reduce the scanning area.	Scanner memory is insufficient.	<ul> <li>Reset the scan size.</li> <li>Lower the resolution.</li> <li>Set with no compression. See TWAIN Driver help.</li> <li>The problem may be due to the following cause:</li> <li>"The Relationship between the Resolution and the Scan- ning Area" chart in Help for halftone scanning might not always apply. Scanning can- not be performed if large values are set for brightness when using halftone or high resolution.</li> </ul>	
Cannot find "xxx" scanner used for the previous scan. "YYY" will be used in- stead. (XXX and YYY indicate a scan- ner name.)	<ul> <li>The main power switch of the previously used scan- ner is not set to "On".</li> <li>The machine is not connect- ed to the network correctly.</li> </ul>	<ul> <li>Check whether the main power switch of the scan- ner used for the previous scan is turned on.</li> <li>Check the previously used scanner is connected to the network correctly.</li> </ul>	

Message	Cause	Solution
Error has occurred in the scanner driv- er.	An error has occurred in the driver.	• Check whether the network cable is connected correctly to the client computer.
		• Check whether the Ether- net board of the client computer is recognized correctly by Windows.
		• Check whether the client computer can use the TCP/IP protocol.
Communication error has occurred on the network.	A communication error has occurred on the network.	Check whether the client compu- ter can use the TCP/IP protocol.
Insufficient memory. Close all other ap- plications, then re-	Memory is insufficient.	• Close all the unnecessary applications running on the client computer.
start scanning.		• Uninstall the TWAIN Driver, restart the compu- ter, and then reinstall the TWAIN Driver.

## PReference

"Turning On the Power", About This Machine

# 7. Adding Paper, Toner and Staples

This chapter describes troubleshooting procedures that are applicable to all the machine's functions.

# Loading Paper

This section describes what to do when paper runs out and needs reloading.

### A CAUTION:

• When loading paper, take care not to trap or injure your fingers.

### ∰Important

- □ Check the top of the stack is not higher than the limit mark inside the tray.
- □ Fan paper to get air between the sheets and prevent multi-sheet feeds.

### 🖉 Note

- Be sure to select the paper size with User Tools. If you do not, misfeeds might occur.
- □ Straighten curled or warped paper before loading.
- □ For paper types and sizes, see "Recommended Paper Sizes and Types", About This Machine.
- □ To load paper in the bypass tray, see "Copying from the Bypass Tray", Copy Reference.

### 

"Recommended Paper Sizes and Types", About This Machine

"Copying from the Bypass Tray", Copy Reference


### Loading Paper into the Paper Trays

This procedure explains how to load paper into the paper trays.

**1** Make sure the paper tray is not in use.


**2** Pull the paper tray out slowly until it stops.

**3** While pinching the release lever, slide the end fence outward.

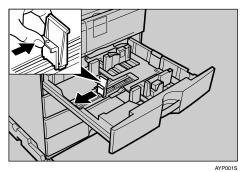

### **4** Square the paper and place it in the tray.

Do not stack paper over the limit mark.

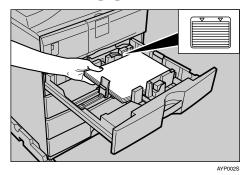

**5** Position the end fence flush against the paper.

**6** Push the paper tray in until it stops.

#### 🖉 Note

- □ Fan the paper before loading.
- □ For details about loading paper of a size not selectable with User Tools in Paper Trays, see "Changing the Paper Size".

#### Reference

p.92 "Changing the Paper Size"


### **Orientation-Fixed Paper or Two-Sided Paper**

The following describes paper with its orientation and printing surface specified (letterhead paper).

Orientation-fixed (top to bottom) or two-sided paper (for example, letterhead paper, prepunched paper, or copied paper) might not print correctly, depending on how the originals and paper are placed. Select **[On]** in **[Letterhead Setting]** under Copier Features, and then place the original and paper as shown below. See "Copier Features", General Settings Guide.

When printing with the printer function, placing orientation is the same.

#### Original Orientation




- \*1 When copying in this orientation using the duplex function, select **[Always Specify]** in **[Orientation]** under **[Copier Features]** (User Tools). Place originals, and then select **E** as the original orientation.
- <sup>\*2</sup> When copying in this orientation using the duplex function, and loaded paper orientation is  $\square$ , place originals as shown below:

VBC	

#### Loaded paper orientation

• For machine with copier function only

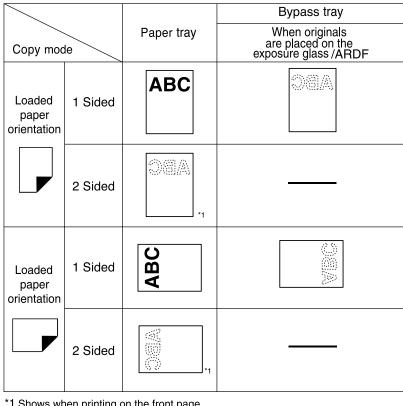

ABC

\*1 Shows when printing on the front page.

ABC : Shows the paper frontside facing up. : Shows the paper backside facing up.

AYP013S

• For MFP

Pap Copy mode	er loading	Paper tray	Bypass tray
Loaded paper orientation	1 Sided	ABC	ABC
	2 Sided	JAA .2	
Loaded paper orientation	1 Sided	ABC	
	2 Sided <sub>1</sub>		

\*1 Type 2 only

- \*2 Shows when printing on the front page.
- \*3 When making copies using the ARDF in the bypass tray, specify template size or [Custom Size] in Tray Paper Settings. Making copies without changing the [Auto Detect] setting produces upside-down copies. (However, if you load paper in the bypass tray upside down, copies are in the correct orientation.)

A BC



**ABC** : Shows the paper frontside facing up. : Shows the paper backside facing up. BAK001S

### Note Note

□ In **[System Settings]**, specify **[Letterhead]** for "Paper Type" of the paper tray you want to use. This setting is only available when the printer/scanner and fax units are installed. See "Tray Paper Settings", General Settings Guide.

# **Changing the Paper Size**

This section describes how to change paper sizes.

### 🖉 Note

- Be sure to select the paper size in Paper Size Settings with User Tools. If you do not, misfeeds might occur. See "Tray Paper Settings", General Settings Guide.
- □ Fan the paper before loading.
- □ Straighten curled or warped paper before loading.
- □ For details about paper sizes and types, see "Copy Paper", About This Machine.

### ₽ Reference

- "Copy Paper", About This Machine
- "Tray Paper Settings", General Settings Guide

### Changing the Paper Size in the Paper Tray


Use the following procedure when changing a paper size in the paper tray.

**1** Make sure the paper tray is not in use.


**2** Pull the paper tray out slowly until it stops.

B Remove any remaining copy paper.


• While pinching the release lever, slide the end fence outward.

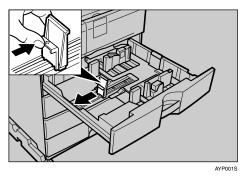

**5** Press down the release button.

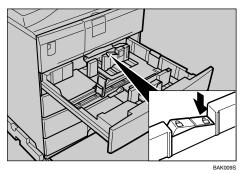


**6** While pressing the release lever, slide the side fences outward.

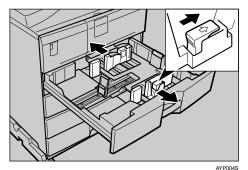


### **2** Square the paper and place it in the tray.

Do not stack paper over the limit mark.

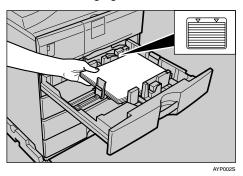


**1** While pressing the release lever, push in the side and end fences until they are flush against the paper's edges.

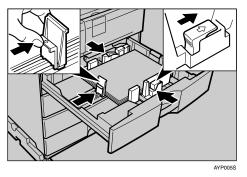

7

**9** Press down the lock button.

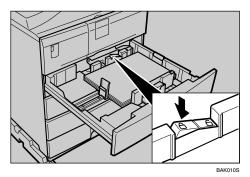

D Push the paper tray in until it stops.


### 🖉 Note

- □ When setting small quantities of copy paper, be careful not to squeeze in the side fence too much. Paper might not feed in properly if the side fences are too tight against the paper's edges.
- □ Be sure to set the correct size, otherwise a paper jam might occur.

#### Selecting the paper size with user tools

This procedure explains how to change to a paper size selected with User Tools.


Press the [User Tools/Counter] key.

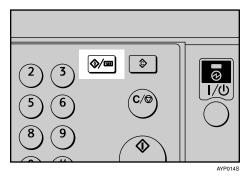

**2** Select [System Settings] using [ $\blacktriangle$ ] or [ $\checkmark$ ], and then press the [OK] key.

≡User Tools	1/4	\$OK
Counter		
System Settings		

Select [Tray Paper Settings] using [▲] or [▼], and then press the [OK] key.




Select "Paper Size" for the paper tray of which paper size will be changed using [▲] or [▼], and then press the [OK] key.

⊟Tray/Paper	1/5	\$ОК)
Paper Size:Tray	1	
Paper Size:Tray	2	
Paper Size:Tray	3	

**5** Select the paper size using the scroll keys, and then press the [OK] key.

P.Size:Tray1	4/5 <b>�</b> ⊡K
8 × 13⊡7	7%×10% 🕞
7%a×10%cc⊋	5½×8½⊡∂
8K 🕞	16K 🖵

**6** Press the **[User Tools/Counter]** key.

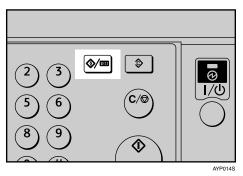

**Z** Load the paper, and then gently push the paper tray in until it stops.

Check the paper size on the display panel.

#### Solution Note

□ For details about the types of paper that can be loaded in the paper tray, see "Tray Paper Settings", General Settings Guide.

### 

"Tray Paper Settings", General Settings Guide

7

# **Adding Toner**

This section describes adding and storing toner.

#### A WARNING:

 Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations.

#### A CAUTION:

• Keep toner (used or unused) and toner containers out of reach of children.

#### A CAUTION:

• If toner or used toner is inhaled, gargle with plenty of water and move into a fresh air environment. Consult a doctor if necessary.

#### A CAUTION:

• If toner or used toner gets into your eyes, flush immediately with large amounts of water. Consult a doctor if necessary.

#### A CAUTION:

• If toner or used toner is swallowed, dilute by drinking a large amount of water. Consult a doctor if necessary.

#### A CAUTION:

• Do not store toner, used toner, or toner containers in a place with an open flame. The toner might ignite and cause burns or a fire.

#### A CAUTION:

- Avoid getting toner on your clothes or skin when removing a paper jam or replacing toner. If your skin comes into contact with toner, wash the affected area thoroughly with soap and water.
- If toner gets on your clothing, wash with cold water. Hot water will set the toner into the fabric and may make removing the stain impossible.

#### ∰Important

- □ Fault may occur if you use toner other than the recommended type.
- When adding toner, do not turn off the operation switch. If you do, settings will be lost.
- □ Add toner only when the machine instructs you to do so.
- □ When a message "Add toner." is shown on the display panel, replace the toner.
- □ Store the toner bottles in a cool, dry place free from direct sunlight.
- □ Store on a flat surface.
- Do not repeatedly install and remove toner bottles. This will result in toner leakage.
- Do not shake the removed toner bottle. Remaining toner might scatter.

### 🖉 Note

□ You can make about 50 copies even after the 🚵 Add Toner indicator begins flashing, but replace toner soon to prevent poor copy quality.

### **Replacing Toner**

This section describes how to replace the toner bottle.


#### **Removing toner**

#### ∰Important


□ Do not shake the removed toner bottle. The remaining toner might scatter.



- Open the front cover of the machine.
- Raise the toner holder lever.



 Push the green lever, and then gently pull out the holder.




 Push the toner bottle back to raise its top, and then gently pull out the bottle.

#### Inserting toner




 Take out the new bottle from the box.




 Hold the new bottle horizontally and shake it from side to side five or six times.




Remove the black cap.



 Put the toner bottle on the holder, and then pull its top forward.



• Push in the toner holder lever until the green lever clicks.



- Lower the toner holder lever back into its original position.
- Close the machine's front cover.
  BAK0065

### 🖉 Note

- Do not remove the black cap before shaking.
- **D** Do not remove the inner cap.

### Sending Fax Messages When Toner Has Run Out

When the machine has run out of toner, the indicator on the display lights. Note that even if there is no toner left, you can still send fax documents.

### ∰Important

Communication is not possible if the number of communications executed after the toner has run out plus the number of communications not listed in the journal exceeds 200.

### **U** Make sure that the machine is in facsimile mode.

If the fax screen does not appear, press the **[Facsimile]** key.

### **2** Press [Exit], and then perform transmission operation.

The error message disappears.

🖉 Note

**D** The communication results report cannot be printed.

### Waste Toner

Waste toner cannot be re-used.

Take the bottle of waste toner to your sales representative or service representative for recycling. If you dispose of it on your own, treat it as general plastic waste.

# **Adding Staples**

This section explains what to do when staples need replacing.

#### A CAUTION:


• Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit. You can trap your fingers if you do not.

#### ∰Important


□ Stapling failures or jams may occur if you use a staple cartridge other than the recommended type.

### Finisher


The following procedure explains how to add staples to the finisher.




- Open the finisher front cover.
- Hold the lever, and then gently pull out the cartridge.




Holding both side of the cartridge, raise the upper unit.




 Remove the empty refill in the direction of the arrow.



Push the new refill into the cartridge.



• Push the upper unit gently into the cartridge until it clicks.



Pull out the ribbon.



- Hold the lever while pushing in the cartridge until it clicks.
  Close the finisher front
- cover.

BAK004S

### 🔗 Note

□ If you cannot pull out the upper unit, there are staples remaining inside the cartridge. Use all the staples, do not add more.


# Replacing the Transmission Stamp Cartridge

If the transmission stamp becomes faint, replace the cartridge.


### ∰Important

- □ This stamp cartridge is used for facsimile and scanner functions.
- □ Use the cartridge specified for this machine.
- Do not add ink to the cartridge by yourself. Neglecting this can cause ink leakage.
- □ Be sure not to dirty your fingers with ink from the cartridge.


## Open the ARDF.

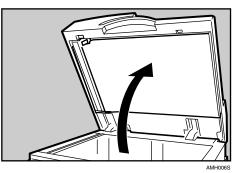

**2** Open the stamp cover.

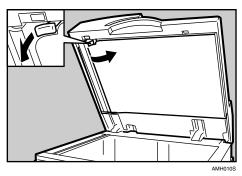


**3** Pull out the old stamp cartridge.

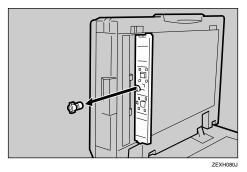

101


# Insert the new stamp cartridge.

Insert the cartridge until the metal parts are no longer visible.

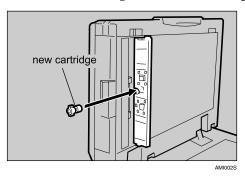

# **5** Close the stamp cover.

Hold down the centre part of the cover to make sure that it is closed completely.

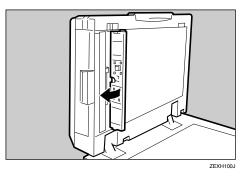

**6** Lower the ARDF.

# 8. Clearing Misfeeds

This chapter describes what to do when paper or originals misfeed (become jammed inside the machine).

# **Removing Jammed Paper**

#### A CAUTION:

• The inside of the machine could be very hot. Do not touch any parts other than specified in this document when removing misfed paper. Otherwise, it may cause burn injury.

#### A CAUTION:

• The fusing section of this machine might be very hot. Caution should be taken when removing misfed paper.

#### ∰Important

- When clearing misfeeds, do not turn off the operation switch. If you do, your copy settings are cleared.
- **T** To prevent misfeeds, do not leave any torn scraps of paper inside the machine.
- □ If paper misfeeds occur frequently, contact your service representative.

### 🖉 Note

- □ More than one misfeed area may be indicated. If this is the case, check every indicated area. Refer to the following charts: A, B, C, D, P, R, Y, and Z.
- □ You can find stickers explaining how to remove misfed paper inside the right cover and on the top of the ARDF cover.
- □ When the machine instructs you to reset originals, reset them in the feeding position. The display will show you the number of originals to return.

# When A Is Displayed



Open the lower right cover and remove the misfed paper.

Close the cover

BAK008S

# When B Is Displayed



Open the right cover and remove the misfed paper.



- Remove the misfed paper.
  - Close the right cover.
     ASB006S

# When C Is Displayed







- Remove the misfed paper
- Close the cover.

BAK007S

# When P Is Displayed



Open the ARDF cover , and then remove the misfed original.



If you cannot remove the misfed original, open the ARDF extemal cover, and then remove the misfed original.



Lift the lever.



Open the ARDF



Open the cover, and then remove the misfed original.



• Pull the green lever in the upper left corner,and then remove the misfed original.

ASB008S

# When Y Is Displayed



• Open the lower right cover of the optional paper tray unit and remove the misfed paper.

Close the cover.
 ASB010S

# When Z Is Displayed






- Open the right cover and remove the misfed paper.
- Open the Z cover and remove the misfed paper.

· Close the right cover.

AYP015S

# When R Is Displayed (When Finisher Is Installed)



- Open the finisher's upper cover.
- Remove any misfed paper.Close the finisher's upper cover.


BAK002S

# When D Is Displayed (When Bridge Unit Is Installed)

# **1** Open the bridge unit covers.



**2** Remove the misfed paper.

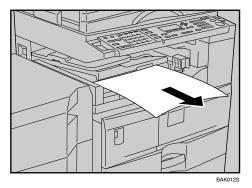

8

# **Removing Jammed Staples**

This section explains how to remove jammed staples.

#### ₿Important


- □ Curled paper may cause staples to jam. To avoid this, turn copy paper over in the tray.
- □ When the finisher is installed, after removing jammed staples, staples will not be ejected the first few times you try to use the stapler.

#### Reference


"Specifications for Options", About This Machine

# Finisher


The following procedure explains how to remove jammed staples from the finisher.




- Open the finisher front cover.
- Hold the lever, and then gently pull out the cartridge.




• Open the cartridge's face plate.



 Remove any jammed staples.



 Pull down the cartridge's face plate until it clicks.



- Hold the lever while pushing in the cartridge until it clicks.
- Close the finisher front cover.

BAK005S



This chapter describes how to maintain and operate the machine.

# Where to Put Your Machine

This section provides precautions for installation, movement and disposal.

### **Machine Environment**

Choose your machine's location carefully.

Environmental conditions greatly affect its performance.

#### **Optimum environmental conditions**

The following describes precautions when locating the machine.

#### A CAUTION:

- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.

#### A CAUTION:

• After you move the machine, use the caster fixture to fix it in place. Otherwise the machine might move or come down to cause an injury.

#### A CAUTION:

- Make sure the room where you are using the machine is well ventilated and spacious. Good ventilation is especially important when the machine is used heavily.
- Temperature: 10-32 °C (50-89.6 °F) (humidity to be 54% at 32 °C, 89.6 °F)
- Humidity: 15-80% (temperature to be 27 °C, 80.6 °F at 80%)
- Ventilation: 3 times/hr/person or more
- A strong and level base.
- The machine must be level within 5 mm, 0.2 inches: both front to rear and left to right.

#### Environments to avoid

- Locations exposed to direct sunlight or other sources of strong light (more than 1,500 lux).
- Locations directly exposed to cool air from an air conditioner or heated air from a heater. (Sudden temperature changes can cause condensation to form inside the machine.)
- Locations close to machines generating ammonia, such as a diazo copy machine.
- Places where the machine will be subject to frequent strong vibration.
- Dusty areas.
- Areas with corrosive gases.

### Moving

The following describes precautions when moving the machine.

#### A CAUTION:

• Before moving the machine, be sure to pull all four handles fully out. If not, an injury might occur. After moving the machine, return the four handles to their original positions.

#### A CAUTION:

• Before moving the machine, be sure to disconnect all external connections, especially the power cord from the wall outlet. Damaged power cords are a fire and electric shock hazard.

#### A CAUTION:

 If you have to move the machine when the optional paper tray unit is attached, do not push on the main unit's top section. Doing so can cause the optional paper tray unit to detach, possibly resulting in injury.

#### A CAUTION:

Unplug the power cord from the wall outlet before you move the machine.
 While moving the machine, you should take care that the power cord will not be damaged under the machine.

#### ∰Important

**D** Be careful when moving the machine. Take the following precautions:

- Turn off the main power. See "Turning Off the Main Power / In the Event of Power Failure" or "Turning Off the Main Power", About This Machine.
- Unplug the power cord from the wall outlet. When you pull out the plug from the socket, grip the plug to avoid damaging the cord, thereby reducing the risk of fire or electric shock.
- Close all covers and trays, including the front cover and bypass tray.
- □ Do not take off the holding stand.
- □ Protect the machine from strong shocks. Impact can damage the memory.

### ✓ Reference

p.37 "Turning Off the Main Power / In the Event of Power Failure" "Turning Off the Main Power", About This Machine

### **Power Connection**

The following describes power supply.

#### A WARNING:

- Connect the machine only to the power source described on the inside front cover of this manual. Connect the power cord directly into a wall outlet and do not use an extension cord.
- Do not damage, break or make any modifications to the power cord. Do not place heavy objects on it. Do not pull it hard nor bend it more than necessary. These actions could cause an electric shock or fire.

#### A CAUTION:

• Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.

#### A CAUTION:

• If the power cord is damaged (exposure of the core, disconnection, etc.), contact your service representative to change a new one. Operating the machine with a damaged power cord may cause an electric shock or fire.

#### A CAUTION:


• When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).

#### A CAUTION:

- To disconnect the power cord, pull it out by plug. Do not drag the cord itself. Doing so may result in damage to the cord, leading to fire or electric shock.
- When the main power switch is in the stand-by position, the optional anticondensation heaters are on. In case of emergency, unplug the machine's power cord.
- When you unplug the power cord, the optional anti-condensation heaters turn off.
- Make sure the plug is inserted firmly in the wall outlet.
- Voltage must not fluctuate by more than 10%.
- The wall outlet shall be installed near the machine and shall be easily accessible.

### Access to the Machine

Place the machine near the power source, providing the clearance areas shown.

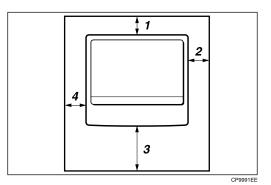

1. Rear: 5 cm (2") or more

3. Front: 75 cm (29.6") or more

4. Left: 15 cm (6") or more

2. Right: 25 cm (10") or more

#### Note

□ For the required space when options are installed, contact your service representative.

### When Not Used for a Long Time

#### A CAUTION:

• For safety reason, unplug the power cord from the wall outlet if the machine will not be used for an extended period of time such as holidays.

Note the following:

• If the machine has not been used recently, it requires time to initialize so cannot start printing immediately. Leave the machine switched on and wait about ten minutes.

# **Maintaining Your Machine**

If the exposure glass, exposure glass cover, or ARDF belt is dirty, copy clarity may be reduced. Clean these parts if they are dirty.

#### A CAUTION:

• Fire and breakdown can result from heavy accumulation of dust inside this machine. Consult your service representative for details about and charges for cleaning the machine's interior.

#### ∰Important

- Do not use chemical cleaners or organic solvents, such as thinner or benzene. If such substances get inside the machine or melt plastic parts, a failure might occur.
- Do not clean parts other than those explicitly specified in this manual. Other parts should only be cleaned by your service representative.

#### Cleaning the machine

Wipe the machine with a soft, damp cloth, and then wipe it with a dry cloth to remove the water.

# **Cleaning the Exposure Glass**


This section describes how to clean the exposure glass and scanning glass.



Clean 1 and 2.

# **Cleaning the Exposure Glass Cover**


This section describes how to clean the exposure glass cover.

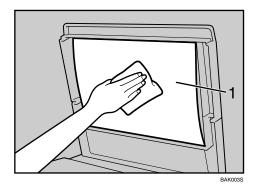

Clean 1.

# **Cleaning the ARDF**

This section describes how to clean the ARDF.

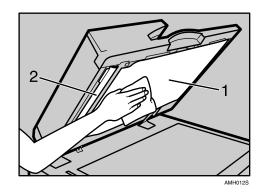

Clean 1 and 2.

# INDEX

#### A

Adding staples, 100 Adding toner, 97 Add Toner indicator, 3 Adjusting the display's contrast, 6 Alert messages, 43, 72 ARDF, 1 ARDF belt is dirty, 113 Authentication failure, 6

#### В

Basic, 17 Bridge Unit, 1

#### С

Changing the paper size, 92 Changing the paper size in the paper tray, 93 Cleaning the machine, 113 Combination chart, 9 Combine, 17 Copies appear dirty, 14 Copies are too light, 14

#### D

DDST unit, 69 Display is off, 6 Duplex, 17

#### Ε

Edit, 17 End fence, 93 Environments to avoid, 110 Error indicator, 3 Error log, 45, 74 Error Mail Notification, 38 Error Report (E-Mail), 38 Exposure glass cover is dirty, 113 Exposure glass is dirty, 113

#### F

Fax error report, 36 Finisher, 1, 100, 108 Function status indicator, 5

#### I

Image is dirty, 49, 77 Indicators, 3 Inserting toner, 98

#### L

Letterhead paper, 89 Limit mark, 93 Loaded paper orientation, 89 Loading paper, 87 Loading paper into the paper trays, 88 Load Paper indicator, 3 Lock button, 93

#### Μ

Main power switch, 37 Meaning of beep patterns, 4 Memory is full, 19, 35 Multi-accessing, 9

#### Ν

Network cannot be browsed, 58 Network Delivery, 58 Network Delivery function cannot be used, 58 No scan image, 57, 82

#### 0

Operation switch indicator, 6, 37 Optimum environmental conditions, 109 Orientation-fixed paper, 89 Original orientation, 89 Panel tone, 4 Paper is not fed from selected tray, 49,77 Parts of image not copied, 14 Password not correct, 6 Power connection, 111 Power Failure Report, 37 Power supply, 111 Precautions when locating the machine, 109 Precautions when moving the machine, 110 Printed image is different from computer display, 49,77 Printed image is faded, 49, 77 Printed image is in wrong orientation, 49, 77 Printer driver installation, 39, 69 Printing, 31 Printing does not start, 46,75 Print port settings, 46, 75

#### R

Reception, 31 Release button, 93 Removing jammed paper, 103 Removing jammed staples, 108 Removing toner, 98 Replacing toner, 98 Reverse side of original is copied, 6, 14

#### S

Scanned image contains white spaces, 57, 82 Scanned image is dirty, 57, 82 Scanned image is distorted, 57, 82 Scanned image is out of position, 57, 82 Scanner Properties dialog box not displayed, 58 Selecting the paper size with user tools, 95 Server-Generated Error E-mail, 38 Shadow appears on copies, 14 Side fences, 93 Stamp cartridge replacement, 101 Status messages, 42, 71

#### т

Toner, 98,99 Transmission, 31 Transmission/Reception, 31 TWAIN, 65,83 Two-sided paper, 89

#### U

User code entry, 6

#### V

Volume adjustment, 21

#### W

Waste toner, 99 When A is displayed, 104 When a message is displayed on the client computer, 83 When B is displayed, 104 When certain settings are required on the printer driver, 49,77 When C is displayed, 104 When D is displayed (when bridge unit is installed), 107 When paper is not fed properly, 49, 77 When P is displayed, 105 When R is lit (when finisher is installed), 106 When Y is displayed, 105 When you cannot print clearly, 49,77 When Z is displayed, 106

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

- means POWER ON.
- O means POWER OFF.
- () means STAND BY.

#### Trademarks

Microsoft<sup>®</sup>, Windows<sup>®</sup>, Windows Server<sup>®</sup>, and Windows Vista<sup>™</sup> are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

TrueType is registered trademarks of Apple Computer, Inc.

Adobe®, PostScript® and Acrobat® are registered trademarks of Adobe Systems, Incorporated.

PCL is a registered trademark of Hewlett-Packard Company.

Bluetooth is a Trademark of the Bluetooth SIG, Inc. (Special Interest Group) and licensed to Ricoh Company Limited.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

- The product name of Windows 95 is Microsoft<sup>®</sup> Windows<sup>®</sup> 95
- The product name of Windows 98 is Microsoft<sup>®</sup> Windows<sup>®</sup> 98
- The product name of Windows Me is Microsoft<sup>®</sup> Windows<sup>®</sup> Millennium Edition (Windows Me)
- The product names of Windows 2000 are as follows:
- Microsoft<sup>®</sup> Windows<sup>®</sup> 2000 Professional Microsoft<sup>®</sup> Windows<sup>®</sup> 2000 Server Microsoft<sup>®</sup> Windows<sup>®</sup> 2000 Advanced Server
- The product names of Windows XP are as follows: Microsoft<sup>®</sup> Windows<sup>®</sup> XP Professional Microsoft<sup>®</sup> Windows<sup>®</sup> XP Home Edition Microsoft<sup>®</sup> Windows<sup>®</sup> XP Media Center Edition Microsoft<sup>®</sup> Windows<sup>®</sup> XP Tablet PC Edition
- The product names of Windows Vista are as follows: Microsoft<sup>®</sup> Windows Vista<sup>TM</sup> Ultimate Microsoft<sup>®</sup> Windows Vista<sup>TM</sup> Enterprise Microsoft<sup>®</sup> Windows Vista<sup>TM</sup> Business Microsoft<sup>®</sup> Windows Vista<sup>TM</sup> Home Premium Microsoft<sup>®</sup> Windows Vista<sup>TM</sup> Home Basic
- The product names of Windows Server 2003 are as follows: Microsoft<sup>®</sup> Windows Server<sup>®</sup> 2003 Standard Edition Microsoft<sup>®</sup> Windows Server<sup>®</sup> 2003 Enterprise Edition Microsoft<sup>®</sup> Windows Server<sup>®</sup> 2003 Web Edition Microsoft<sup>®</sup> Windows Server<sup>®</sup> 2003 Datacenter Edition

