

MODEL MT-C1
Machine Code: B064/B065

MODEL MT-C2
Machine Code:
B140/B141/B163/B142/B143/B228

MODEL MT-C3/C3.5
Machine Code:
B246/B248/B249/B250/B252/B253/
D052/D053/D054

SERVICE MANUAL

IMPORTANT SAFETY NOTICES

PREVENTION OF PHYSICAL INJURY

1. Before disassembling or assembling parts of the copier and peripherals, make sure that the copier power cord is unplugged.
2. The wall outlet should be near the copier and easily accessible.
3. Note that some components of the copier and the paper tray unit are supplied with electrical voltage even if the main power switch is turned off.
4. If any adjustment or operation check has to be made with exterior covers off or open while the main switch is turned on, keep hands away from electrified or mechanically driven components.
5. If the Start key is pressed before the copier completes the warm-up period (the Start key starts blinking red and green alternatively), keep hands away from the mechanical and the electrical components as the copier starts making copies as soon as the warm-up period is completed.
6. The inside and the metal parts of the fusing unit become extremely hot while the copier is operating. Be careful to avoid touching those components with your bare hands.

HEALTH SAFETY CONDITIONS

1. Never operate the copier without the ozone filters installed.
2. Always replace the ozone filters with the specified ones at the specified intervals.
3. Toner and developer are non-toxic, but if you get either of them in your eyes by accident, it may cause temporary eye discomfort. Try to remove with eye drops or flush with water as first aid. If unsuccessful, get medical attention.

OBSERVANCE OF ELECTRICAL SAFETY STANDARDS

1. The copier and its peripherals must be installed and maintained by a customer service representative who has completed the training course on those models.
2. The NVRAM on the system control board has a lithium battery which can explode if replaced incorrectly. Replace the NVRAM only with an identical one. The manufacturer recommends replacing the entire NVRAM. Do not recharge or burn this battery. Used NVRAM must be handled in accordance with local regulations.

SAFETY AND ECOLOGICAL NOTES FOR DISPOSAL

1. Do not incinerate toner bottles or used toner. Toner dust may ignite suddenly when exposed to an open flame.
2. Dispose of used toner, developer, and organic photoconductors in accordance with local regulations. (These are non-toxic supplies.)
3. Dispose of replaced parts in accordance with local regulations.
4. When keeping used lithium batteries in order to dispose of them later, do not put more than 100 batteries per sealed box. Storing larger numbers or not sealing them apart may lead to chemical reactions and heat build-up.

LASER SAFETY

The Center for Devices and Radiological Health (CDRH) prohibits the repair of laser-based optical units in the field. The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser subsystems to the factory or service depot when replacement of the optical subsystem is required.

WARNING

Use of controls, or adjustment, or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

WARNING

WARNING: Turn off the main switch before attempting any of the procedures in the Laser Unit section. Laser beams can seriously damage your eyes.

CAUTION MARKING:



**CAUTION
VORSICHT**



>PS<

INVISIBLE LASER RADIATION WHEN OPEN.
AVOID EXPOSURE TO BEAM.
UNSICHTBARE LASERSTRAHLUNG
WENN ABDECKUNG GEÖFFNET.
NICHT DEM STRAHL AUSSETZEN.

What This Manual Contains

This preliminary manual describes the installation procedures for the B064/B140/B246 Series Copiers and their peripheral devices:








Conventions in this Manual


This manual describes more than one machine.

The following short notations are used in text to refer to the following machines.


<u>Short Notations</u>	<u>What They Mean</u>
B064 Series	B064/B065
B140 Series	B140/B141/B142/B143/B163/B228
B246 Series	B246/B248/B249/B250/B252/B253

This manual uses several symbols.

Symbol	What it means
	Refer to section number
	See Core Tech Manual for details
	Screw
	Connector
	E-ring
	Clip ring
	Clamp

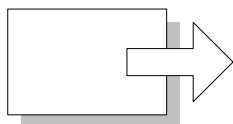

Short Edge Feed (SEF)

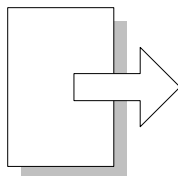

Long Edge Feed (LEF)

TABLE OF CONTENTS

1. INSTALLATION	1-1
1.1 INSTALLATION REQUIREMENTS	1-1
1.1.1 OPERATING ENVIRONMENT	1-1
1.1.2 MACHINE LEVEL	1-2
1.1.3 MINIMUM SPACE REQUIREMENTS	1-3
1.1.4 DIMENSIONS	1-4
B064 Series.....	1-4
B140 Series.....	1-5
B246 Series.....	1-6
1.1.5 PERIPHERAL/OPTION SUMMARY TABLE	1-7
1.1.6 POWER REQUIREMENTS	1-9
1.2 MAIN MACHINE (B064 SERIES/B140 SERIES/B246 SERIES)	1-10
1.2.1 ACCESSORY CHECK.....	1-10
1.2.2 INSTALLATION PROCEDURE	1-11
Removing Tapes and Retainers	1-11
Connecting the ADF.....	1-14
Removing and Filling the Development Unit.....	1-14
Re-installing the Development Unit	1-17
Initializing the Drum Settings (B064 Series)	1-18
Initializing the Drum Settings (B140/B246 Series).....	1-19
Tandem Tray.....	1-20
Machine Level.....	1-22
Date/Time Setting	1-22
SP Codes.....	1-22
1.3 A3/DLT FEEDER KIT (B475).....	1-23
1.3.1 ACCESSORY CHECK.....	1-23
1.3.2 INSTALLATION PROCEDURE	1-24
1.4 LCT (B473).....	1-26
1.4.1 ACCESSORY CHECK.....	1-26
1.4.2 INSTALLATION PROCEDURE	1-27
Removing Tape.....	1-27
Preparing the Main Machine	1-28
Installing the LCT	1-28
1.5 LG/B4 FEEDER KIT (B474)	1-31
1.5.1 ACCESSORY CHECK.....	1-31
1.5.2 INSTALLATION PROCEDURE	1-32
1.6 3000-SHEET FINISHERS (B468/B469/B674).....	1-35
1.6.1 ACCESSORY CHECK.....	1-35
1.6.2 INSTALLATION PROCEDURE	1-36
Removing Tapes and Retainers	1-36
Installation	1-38
Selecting the Staple Supply Name	1-41
Enabling Booklet Binding	1-41
1.7 PUNCH UNIT (B377)	1-42
1.7.1 ACCESSORY CHECK.....	1-42
1.7.2 INSTALLATION PROCEDURE	1-43

1.8 COVER INTERPOSER TRAY (B470)	1-45
1.8.1 ACCESSORY CHECK	1-45
1.8.2 INSTALLATION PROCEDURE	1-46
Removing Tapes and Retainers	1-46
Attaching the Extensions	1-48
Attaching the Interposer Tray	1-49
Attaching the Corner Plates for the B478/B706	1-50
Right Rear Corner Plate (B478/B706 only)	1-50
Right Front Corner Plate (B478/B706 only)	1-51
Attaching the Finisher to the Machine	1-52
1.9 9-BIN MAILBOX (B471)	1-54
1.9.1 ACCESSORY CHECK	1-54
1.9.2 INSTALLATION PROCEDURE	1-55
Removing Tapes and Retainers	1-55
Installation	1-56
1.10 3000 SHEET FINISHER (B478/B706)	1-58
1.10.1 ACCESSORY CHECK	1-58
1.10.2 INSTALLATION	1-59
1.11 PUNCH UNIT (B531/B812)	1-63
1.11.1 ACCESSORY CHECK	1-63
1.11.2 INSTALLATION	1-64
1.12 JOGGER UNIT (B513)	1-68
1.12.1 ACCESSORY CHECK	1-68
1.12.2 INSTALLATION PROCEDURE	1-69
1.13 Z-FOLDING UNIT (B660)	1-70
1.13.1 ACCESSORY CHECK	1-70
1.13.2 INSTALLATION PROCEDURE	1-71
Before You Begin	1-71
Unpacking	1-72
Docking to the Finisher	1-73
Docking to the Main Frame	1-76
1.14 2000/3000 SHEET FINISHERS (B700/B701)	1-78
1.14.1 ACCESSORIES	1-78
1.14.2 INSTALLATION PROCEDURE	1-79
Removing Tapes and Retainers	1-79
Docking the Finisher	1-82
Attaching the Trays	1-85
Leveling the Finisher	1-86
Selecting the Staple Supply Name	1-87
Enabling Booklet Binding (B700 Only)	1-87
Auxiliary Trays	1-88
1.15 PUNCH UNIT (B702)	1-90
1.15.1 ACCESSORIES	1-90
1.15.2 INSTALLATION PROCEDURE	1-91
1.16 COVER INTERPOSER TRAY (B704)	1-94
1.16.1 ACCESSORIES	1-94
1.16.2 INSTALLATION PROCEDURE	1-95
Removing Tapes and Retainers	1-95
Preparing the Finisher (B700/B701/B706)	1-96
Attaching the Extensions for the B706	1-97
Prepare the Cover Interposer for the B706	1-98
Attach the Extensions to the B706	1-99
Attaching the Extensions for the B700/B701	1-100
Attaching the Interposer Tray (B700/B701/ B706)	1-101
Attaching the Corner Plates for the B706	1-102
Docking the Finisher and Interposer to the Machine (B700/B701/B706)	1-104

1.17	OUTPUT JOGGER UNIT (B703).....	1-106
1.17.1	ACCESSORIES.....	1-106
1.17.2	INSTALLATION PROCEDURE	1-107
1.18	MAIL BOX (B762)	1-109
1.18.1	ACCESSORY CHECK.....	1-109
1.18.2	INSTALLATION PROCEDURE	1-110
1.19	COPY TRAY (B756).....	1-113
1.19.1	ACCESSORIES.....	1-113
1.19.2	INSTALLATION	1-114
1.20	KEY CARD BRACKET (B498), KEY COUNTER BRACKET (B452).....	1-117
1.20.1	KEY CARD BRACKET B498 ACCESSORIES.....	1-117
1.20.2	KEY COUNTER BRACKET B452 ACCESSORIES	1-118
1.20.3	INSTALLATION	1-119
	Assemble the Key Counter Bracket.....	1-119
	Install the Key Card Bracket and Assembled Key Counter	1-120
1.21	COPY CONNECTOR KITS.....	1-122
1.21.1	COPY CONNECTOR KIT (B525-10, -12) FOR B064 SERIES	1-122
	ACCESSORY CHECK.....	1-123
	Installation	1-124
	Installing the Hardware	1-125
1.21.2	COPY CONNECTOR KIT (B328-03) FOR B140 SERIES	1-129
	ACCESSORY CHECK.....	1-129
	Preparation.....	1-130
	Installation	1-131
1.21.3	COPY CONNECTOR (B842) FOR B246 SERIES	1-134
	Accessories.....	1-134
	Preparation.....	1-135
	Installation	1-136
1.22	MFP OPTIONS: B064 SERIES.....	1-139
1.22.1	PRINTER/SCANNER KIT (G338), PRINTER KIT (G339).....	1-139
	ACCESSORY CHECK.....	1-139
1.22.2	INSTALLATION PROCEDURE	1-140
	Inserting DIMMs.....	1-140
	Installation Procedure	1-141
1.22.3	PS3 (B525-08).....	1-143
1.22.4	USB 2.0 (B525-01).....	1-144
	ACCESSORY CHECK.....	1-144
	Installation Procedure	1-144
	USB SP Settings.....	1-145
1.22.5	IEEE1394 (G561) FIREWIRE INTERFACE	1-146
	ACCESSORY CHECK.....	1-146
	Installation Procedure	1-147
	UP Mode Settings for IEEE 1394	1-148
	SP Mode Settings for IEEE 1394.....	1-149
1.22.6	IEEE802.11B WIRELESS LAN (G628)	1-150
	ACCESSORY CHECK.....	1-150
	Installation Procedure	1-151
	UP Mode Settings for Wireless LAN.....	1-152
SP MODE SETTINGS FOR 802.11B WIRELESS LAN.....		1-154
1.22.7	FILE FORMAT CONVERTER (MLB) (B519).....	1-155
	Accessory Check	1-156
	Installation Procedure	1-156
	Installing the Firmware.....	1-156
	Installing the Hardware	1-157

1.23	MFP OPTIONS: B140 SERIES.....	1-158
1.23.1	MERGING APPLICATIONS ON ONE SD CARD	1-158
	Overview	1-158
	Merging Applications.....	1-159
	Undo Exec.....	1-160
1.23.2	OVERVIEW.....	1-161
1.23.3	PRINTER/SCANNER KIT (B659)	1-162
	ACCESSORY CHECK.....	1-162
	Installation	1-163
1.23.4	PS3 (B525-15).....	1-166
	ACCESSORY CHECK.....	1-166
	Installation	1-166
1.23.5	USB 2.0 INTERFACE BOARD (B596-01)	1-167
	ACCESSORY CHECK.....	1-167
	Installation	1-167
1.23.6	IEEE 1394 INTERFACE BOARD (B581-01)	1-168
	ACCESSORY CHECK.....	1-168
	Installation	1-168
1.23.7	IEEE 802.11B INTERFACE BOARD (B582-01, -02).....	1-169
	ACCESSORY CHECK.....	1-169
	Installation	1-169
1.23.8	BLUETOOTH INTERFACE UNIT (G377).....	1-171
	ACCESSORY CHECK.....	1-171
	Installation	1-171
1.23.9	FILE FORMAT CONVERTER (B609).....	1-172
	ACCESSORY CHECK.....	1-172
	Installation	1-172
1.23.10	DATA OVERWRITE SECURITY UNIT (B735).....	1-173
	ACCESSORY CHECK.....	1-173
	Before You Begin... ..	1-173
	Seal Check And Removal	1-174
	Installation Procedure	1-175
1.24	MFP OPTIONS: B246 SERIES.....	1-178
1.24.1	OVERVIEW.....	1-178
1.24.2	COMMON PROCEDURES.....	1-179
	Inserting SD Cards.....	1-179
	Storing Copied SD Cards.....	1-179
1.24.3	PRINTER SCANNER KIT (B841)	1-180
	ACCESSORY CHECK.....	1-180
	Installation	1-181
1.24.4	POSTSCRIPT3 (B525)	1-184
	Accessories.....	1-184
	Installation	1-184
1.24.5	IEEE1394 INTERFACE BOARD (B581).....	1-185
	Accessories.....	1-185
	Installation	1-185
1.24.6	WIRELESS LAN G813 (802.11B).....	1-186
	Accessories.....	1-186
	Installation	1-186
1.24.7	BLUETOOTH INTERFACE UNIT TYPE C B826	1-187
	Accessories.....	1-187
	Installation	1-187
1.24.8	FILE FORMAT CONVERTER TYPE C B609.....	1-188
	ACCESSORY CHECK.....	1-188
	Installation	1-188

1.24.9 DATA OVERWRITE SECURITY UNIT TYPE C B735	1-189
ACCESSORY CHECK.....	1-189
Before You Begin.....	1-189
Seal Check And Removal	1-190
Installation Procedure	1-191
1.24.10 REMOTE COMMUNICATION GATE TYPE CM1 (B818)	1-194
Accessories.....	1-194
Installation	1-194
1.24.11 USB HOST INTERFACE UNIT TYPE A (B825).....	1-197
Accessory Check	1-197
Installation	1-197
1.24.12 BROWSER UNIT TYPE B (B828)	1-198
Accessories.....	1-198
Installation	1-198
1.24.13 COPY DATA SECURITY UNIT TYPE C (B829)	1-199
Accessories.....	1-199
Installation	1-199
B246 Series: IPU	1-199
1.24.14 VM CARD (B861).....	1-201
Accessories.....	1-201
Installation	1-201
1.24.15 IEEE1284 B679	1-202
Accessories.....	1-202
Installation	1-202
1.24.16 GIGABIT ETHERNET G381	1-203
Accessories.....	1-203
Installation	1-203
2. PREVENTIVE MAINTENANCE	2-1
2.1 PM TABLES	2-1
2.1.1 MAIN MACHINE	2-1
2.1.2 ADF	2-5
2.1.3 OPTIONAL PERIPHERAL DEVICES	2-5
LCT (Large Capacity Tray) B473.....	2-5
Cover Interposer Tray B470.....	2-5
3000-Sheet Finisher with 50-sheet stapler and Saddle-Stitching B468/B469/B674	2-6
3000-Sheet Finisher B478/B706.....	2-6
Z-Folding Unit Type 2105 (B660)	2-6
2000/3000-Sheet Booklet Finisher B700/B701.....	2-7
Punch B702.....	2-7
2.2 RELATED SP CODES.....	2-7

3. REPLACEMENT AND ADJUSTMENT.....	3-1
3.1 GENERAL CAUTIONS	3-1
3.1.1 DRUM	3-1
3.1.2 DRUM UNIT	3-1
3.1.3 TRANSFER BELT UNIT	3-2
3.1.4 SCANNER UNIT	3-2
3.1.5 LASER UNIT	3-2
3.1.6 CHARGE CORONA.....	3-3
3.1.7 DEVELOPMENT	3-3
3.1.8 CLEANING.....	3-4
3.1.9 FUSING UNIT	3-4
3.1.10 PAPER FEED	3-4
3.1.11 USED TONER	3-4
3.2 SPECIAL TOOLS AND LUBRICANTS	3-5
3.2.1 SPECIAL TOOLS.....	3-5
3.2.2 LUBRICANTS	3-5
3.3 OPERATION PANEL AND EXTERNAL COVERS	3-6
3.3.1 OPERATION PANEL	3-6
3.3.2 FRONT DOOR.....	3-6
3.3.3 RIGHT COVERS.....	3-7
3.3.4 LEFT COVERS	3-8
3.3.5 REAR COVERS.....	3-9
3.4 SCANNER.....	3-10
3.4.1 ADF AND TOP COVERS	3-10
ADF	3-10
Top Covers.....	3-11
3.4.2 EXPOSURE GLASS	3-12
3.4.3 SCANNER ORIGINAL SIZE SENSORS	3-13
3.4.4 LENS BLOCK	3-14
3.4.5 EXPOSURE LAMP	3-15
3.4.6 LAMP REGULATOR.....	3-16
3.4.7 SCANNER MOTOR DRIVE BOARD (SDRB).....	3-17
3.4.8 SCANNER MOTOR.....	3-18
3.4.9 SCANNER HP SENSOR	3-19
3.4.10 SCANNER WIRE REPLACEMENT	3-20
Preparation for Removal	3-20
Wire Removal: Back	3-21
Wire Removal: Front.....	3-22
Attaching the New Wire	3-23
3.4.11 SCANNER HEATER.....	3-25
3.5 LASER UNIT	3-26
3.5.1 CAUTION DECALS	3-26
3.5.2 LD UNIT AND POLYGON MOTOR	3-27
3.5.3 LASER SYNCHRONIZATION DETECTOR REPLACEMENT	3-29
3.5.4 LASER UNIT ALIGNMENT.....	3-30
3.6 DRUM UNIT	3-32
3.6.1 DEVELOPMENT UNIT REMOVAL.....	3-32
Removal	3-32
Re-installation	3-33
Replacement with a used Development Unit.....	3-33
3.6.2 CHARGE CORONA UNIT	3-34
3.6.3 CHARGE CORONA WIRE AND GRID.....	3-35
3.6.4 CHARGE CORONA WIRE CLEANING PADS.....	3-36
3.6.5 OPC DRUM REMOVAL	3-37
Dusting the Drum Surface.....	3-38
3.6.6 PTL (B140 AND B246 SERIES ONLY)	3-39
3.6.7 QUENCHING LAMP	3-40

3.6.8	DRUM POTENTIAL SENSOR.....	3-40
3.6.9	CLEANING FILTER.....	3-41
3.6.10	CLEANING BLADE.....	3-41
3.6.11	CLEANING BRUSH.....	3-42
3.6.12	PICK-OFF PAWLS.....	3-43
3.6.13	ID SENSOR.....	3-43
3.6.14	DRUM MOTOR.....	3-44
3.6.15	TONER COLLECTION BOTTLE.....	3-45
3.6.16	TONER SEPARATION UNIT.....	3-45
3.6.17	OZONE FILTERS.....	3-46
3.6.18	OPTICS DUST FILTER.....	3-46
3.6.19	INTERNAL DUST FILTER.....	3-46
3.7	DEVELOPMENT UNIT.....	3-47
3.7.1	DEVELOPER REPLACEMENT.....	3-47
3.7.2	DEVELOPMENT FILTER.....	3-49
3.7.3	ENTRANCE SEAL AND SIDE SEALS.....	3-50
3.7.4	TD SENSOR.....	3-51
3.7.5	TONER END SENSOR.....	3-51
3.7.6	TONER SUPPLY MOTOR.....	3-52
3.7.7	DEVELOPMENT MOTOR.....	3-53
3.8	TRANSFER BELT UNIT.....	3-54
3.8.1	TRANSFER BELT UNIT.....	3-54
3.8.2	TRANSFER BELT.....	3-55
3.8.3	TRANSFER ROLLER CLEANING BLADE.....	3-57
3.8.4	DISCHARGE PLATE.....	3-58
3.8.5	TRANSFER POWER PACK.....	3-59
3.9	FUSING UNIT.....	3-60
3.9.1	FUSING UNIT.....	3-60
3.9.2	FUSING PRESSURE RELEASE MOTOR (B140/B246 SERIES).....	3-62
3.9.3	FUSING PRESSURE RELEASE HP SENSOR (B140/B246 SERIES).....	3-63
3.9.4	FUSING UNIT THERMISTORS AND THERMOSTATS.....	3-64
	B064 Series.....	3-65
	B140 Series.....	3-65
	B246 Series.....	3-65
3.9.5	WEB CLEANING ROLLER.....	3-67
	Web Unit Disassembly.....	3-67
	Web Unit Assembly.....	3-68
3.9.6	WEB MOTOR AND WEB END SENSOR.....	3-69
3.9.7	PRESSURE ROLLER CLEANING UNIT.....	3-70
	B064 Series.....	3-70
	B140/B246 Series.....	3-71
3.9.8	FUSING LAMPS, HOT ROLLER, AND PRESSURE ROLLER.....	3-72
	B064 Series: Fusing Lamps.....	3-72
	B140/B246 Series: Fusing Lamps.....	3-73
	Important Notes about Fusing Unit Assembly (B064 Series).....	3-78
3.9.9	PRESSURE ROLLER.....	3-79
3.9.10	STRIPPER PAWLS.....	3-80
	B064 Series.....	3-80
	B140/B246 Series.....	3-81
3.9.11	NIP BAND WIDTH ADJUSTMENT.....	3-82
3.9.12	FUSING UNIT EXIT SENSOR.....	3-83
3.9.13	FUSING/EXIT MOTOR.....	3-84
3.9.14	FUSING EXIT AND EXIT UNIT ENTRANCE SENSORS.....	3-85

3.10	DUPLEX UNIT	3-86
3.10.1	DUPLEX UNIT REMOVAL	3-86
3.10.2	DUPLEX UNIT SIDE-TO-SIDE ADJUSTMENT	3-87
3.10.3	JOGGER FENCE ADJUSTMENT	3-87
3.10.4	DUPLEX MOTORS.....	3-88
	Duplex Inverter Motor	3-88
	Duplex Jogger and Transport Motors	3-89
3.10.5	DUPLEX TRANSPORT CLUTCH/JOGGER HP SENSOR.....	3-90
3.10.6	DUPLEX ENTRANCE SENSOR	3-91
3.10.7	DUPLEX TRANSPORT SENSOR 3.....	3-92
3.10.8	INVERTER EXIT SENSOR, TRANSPORT SENSORS 1 & 2	3-93
3.10.9	DUPLEX JOGGER BELT ADJUSTMENT	3-94
3.11	PAPER FEED	3-95
3.11.1	PAPER TRAY REMOVAL	3-95
3.11.2	REAR FENCE RETURN SENSOR REPLACEMENT	3-97
3.11.3	REAR FENCE HP SENSOR REPLACEMENT	3-98
3.11.4	TANDEM RIGHT TRAY PAPER SENSOR REPLACEMENT	3-99
3.11.5	BOTTOM PLATE LIFT WIRE REPLACEMENT	3-100
3.11.6	TANDEM TRAY PAPER SIZE CHANGE	3-102
3.11.7	PICK-UP, FEED, SEPARATION ROLLER REPLACEMENT	3-105
3.11.8	FEED UNIT	3-106
3.11.9	SEPARATION ROLLER PRESSURE ADJUSTMENT	3-108
3.11.10	RELAY SENSOR.....	3-109
3.11.11	BY-PASS PAPER SIZE DETECTION BOARD	3-110
3.11.12	BY-PASS TRAY ROLLERS.....	3-111
3.11.13	BY-PASS SEPARATION ROLLER PRESSURE ADJUSTMENT	3-112
3.11.14	REGISTRATION SENSOR.....	3-113
3.11.15	REGISTRATION AND BY-PASS UNIT REMOVAL	3-114
3.12	PCBS AND HDD	3-116
3.12.1	BCU BOARD (BASE ENGINE CONTROL UNIT)	3-116
	BCU: B064, B140 Series	3-116
	BCU, IOB: B246 Series.....	3-117
3.12.2	CONTROLLER BOARD.....	3-118
	B064 Series: Controller Board	3-118
	B140 Series: Controller Board	3-119
	B246 Series: Controller Board	3-120
3.12.3	IPU BOARD	3-121
	B064 Series: IPU Board	3-121
	B140 Series: IPU, Mother Board.....	3-122
	B246 Series: IPU	3-125
	B246 Series Motherboard	3-126
3.12.4	DEVELOPMENT POWER PACK	3-128
3.12.5	PSU, PFC BOARDS	3-129
	B064 Series.....	3-129
	B140 Series PSU	3-129
	B246 Series PSU	3-130
3.12.6	HDD	3-131
	B064 Series HDD.....	3-131
	B140 Series HDD.....	3-132
	B246 Series HDD.....	3-133
	Disposal of HDD Units	3-134
	Reinstallation.....	3-134
3.12.7	NVRAM	3-135
	NVRAM: B064 Series, B140 Series.....	3-135
	NVRAM: B246 Series	3-137
3.12.8	DIMMS	3-139

3.13	ADF	3-140
3.13.1	ADF COVERS.....	3-140
3.13.2	FEED UNIT	3-141
3.13.3	FEED BELT AND PICK-UP ROLLER.....	3-142
3.13.4	SEPARATION ROLLER	3-143
3.13.5	REGISTRATION SENSOR.....	3-144
3.13.6	ADF CONTROL BOARD	3-145
3.13.7	ORIGINAL WIDTH, INTERVAL, AND SKEW CORRECTION SENSORS.....	3-146
3.13.8	ORIGINAL LENGTH SENSORS	3-147
3.13.9	DF POSITION AND APS SENSOR.....	3-148
3.13.10	OTHER ADF SENSORS	3-149
3.13.11	BOTTOM PLATE LIFT MOTOR	3-150
3.13.12	FEED MOTOR.....	3-150
3.13.13	EXIT MOTOR AND TRANSPORT MOTOR	3-151
3.13.14	PICK-UP ROLLER MOTOR AND HP SENSOR	3-152
3.13.15	CIS POWER SUPPLY BOARD AND CIS UNIT	3-153
3.13.16	ADF EXIT SENSOR.....	3-154
3.14	COPY IMAGE ADJUSTMENTS: PRINTING/SCANNING	3-155
3.14.1	PRINTING.....	3-155
	Registration - Leading Edge/Side-to-Side	3-155
	Blank Margin	3-156
	Registration Buckle Adjustment.....	3-156
3.14.2	SCANNING	3-157
	Registration: Platen Mode.....	3-157
	Magnification.....	3-157
3.14.3	ADF SCANNING ADJUSTMENTS	3-158
	Vertical Black Lines.....	3-158
	DIP Switch Settings (ADF Main Board)	3-158
	ADF Skew Correction	3-158
3.15	TOUCH SCREEN CALIBRATION	3-160
4.	TROUBLESHOOTING.....	4-1
4.1	OVERVIEW.....	4-1
4.1.1	RECOVERY METHODS.....	4-2
4.1.2	IMPORTANT SP CODES	4-2
4.1.3	DOWNLOAD ERROR CODES	4-3
4.1.4	JAM DETECTION.....	4-6
	SENSOR LOCATIONS	4-6
4.1.5	TIMING CHARTS.....	4-7
	Feed, Transport, Feed Out: Face-up	4-7
	Transport, Inverter, Feed Out: Face-down	4-8
	Duplex Transport	4-9
4.1.6	PROGRAM DOWNLOAD	4-10
4.2	B064 SERIES SERVICE MODE.....	4-11
4.2.1	B064 SERIES SERVICE CALL CONDITIONS.....	4-11
4.2.2	B064 SERIES SC CODE DESCRIPTIONS.....	4-12
	SC100: Scanning System	4-12
	SC300: Image Development System (1)	4-15
	SC400: Image Development System (2)	4-20
	SC500: Feed, Transport, Duplexing, and Fusing Systems	4-21
	SC600: Data Communication	4-24
	SC700: Peripherals.....	4-26
	SC800: Overall System.....	4-29
	SC900: Miscellaneous	4-32
4.2.3	ADDITIONAL SC CODES PRINTED IN SMC REPORT	4-34

4.3	B140/B246 SERIES SERVICE MODE	4-37
4.3.1	SERVICE MODE LOCK/UNLOCK	4-37
4.3.2	B140/B246 SERIES SERVICE CALL CONDITIONS	4-38
4.3.3	B140/B246 SERIES SC CODE DESCRIPTIONS	4-39
	SC100: Scanning System	4-40
	SC200: Exposure	4-43
	SC300: Image Development System (1)	4-44
	SC400: Image Development System (2)	4-49
	SC500: Feed, Transport, Duplexing, and Fusing Systems	4-50
	SC600: Data Communication	4-55
	SC700: Peripherals	4-57
	SC800: Overall System	4-66
	SC900: Miscellaneous	4-72
4.3.4	JAM CODES	4-76
	Main Unit: Paper Jam Errors	4-76
	Finisher B469 Jam Codes	4-77
	Finisher B468/B674 Jam Codes	4-77
	Finisher B478/B706 Jam Codes	4-78
	Mailbox B471 Jam Codes	4-78
	Cover Interposer Tray B470 Jam Codes	4-78
	Z-Folding Unit B660 Jam Codes	4-79
4.3.5	ADDITIONAL SC CODES PRINTED IN SMC REPORT	4-80
4.4	OTHER PROBLEMS (B064/B140/B246 SERIES)	4-83
4.4.1	BLOWN FUSE CONDITIONS	4-83
4.4.2	COMMON PROBLEMS	4-83
4.4.3	FREQUENT PAPER JAMS	4-84
5.	SERVICE TABLES	5-1
5.1	SERVICE PROGRAM MODE	5-1
5.1.1	SERVICE PROGRAM MODE OPERATION	5-1
	Service Mode Lock/Unlock	5-1
	To Enter and Exit the Service Mode	5-2
	To Enter and Exit the Super SP Mode	5-2
	To Switch to the Copy Window for Test Printing	5-2
	Using the SP Mode	5-3
	SP Mode Button Summary	5-4
	SP Mode Print (SMC Print)	5-5
5.2	RESETS	5-6
5.2.1	MEMORY ALL CLEAR: SP5801	5-6
5.2.2	SOFTWARE AND SETTING RESET	5-10
	Software Reset	5-10
	Resetting the System	5-10
	Resetting Copy/Document Server Features Only	5-10
	Resetting Scanner Features Only	5-10
5.3	TEST PATTERN PRINTING	5-11
5.3.1	PRINTING TEST PATTERN: SP2902-003	5-11
	Test Pattern Table	5-12
5.3.2	IPU FRONT/BACK TEST PATTERNS: SP2902-001,002	5-13
	Test Pattern Table	5-14
5.3.3	IPU PRINTING TEST PATTERN: SP2902-004	5-15

5.4	SOFTWARE UPDATE	5-16
5.4.1	SOFTWARE UPDATE PROCEDURE: B140/B246 SERIES.....	5-16
	Updating the LCD for the Operation Panel	5-21
	Downloading Stamp Data	5-21
	NVRAM Data Upload/Download	5-22
5.4.2	SOFTWARE UPDATE PROCEDURE: B064 SERIES	5-23
	GW Controller/BCU Update	5-24
	Forced Update	5-25
	Stamp Data Update	5-25
	Operation Panel Software Update	5-26
	Scanner Update	5-27
	NIB Update.....	5-27
	NetFile Firmware Update	5-27
	NVRAM Update	5-28
	Firmware Update Notes	5-28
5.5	SERVICE PROGRAM MODE TABLES	5-29
5.5.1	SERVICE TABLE KEY.....	5-29
5.5.2	COPIER SERVICE TABLE	5-30
	SP1xxx Feed.....	5-30
	SP2xxx Drum	5-36
	SP3xxx Processing	5-55
	SP4xxx Scanner	5-58
	SP5xxx Mode.....	5-68
	SP6xxx Peripherals.....	5-120
	SP7xxx Data Logs	5-131
	SP8xxx: Data Log2	5-148
5.5.3	PRINTER SERVICE TABLE	5-177
5.5.4	SCANNER SERVICE TABLE	5-178
5.6	INPUT/OUTPUT CHECK.....	5-190
5.6.1	COPIER INPUT CHECK: SP5803.....	5-190
5.6.2	COPIER OUTPUT CHECK: SP5804.....	5-196
5.6.3	ADF INPUT CHECK: SP6007	5-198
5.6.4	ADF OUTPUT CHECK: SP6008	5-199
5.6.5	FINISHER INPUT CHECK: SP6117 (B478/B704)	5-200
5.6.6	FINISHER OUTPUT CHECK: SP6118.....	5-202
5.6.7	FINISHER 1 INPUT CHECK: 6121.....	5-203
5.6.8	FINISHER 1 OUTPUT CHECK: 6124.....	5-204
5.6.9	FINISHER 2 INPUT CHECK: 6122.....	5-205
5.6.10	FINISHER 2 OUTPUT CHECK: 6125.....	5-206
5.7	USING THE DEBUG LOG (B140/B246).....	5-207
5.7.1	SWITCHING ON AND SETTING UP SAVE DEBUG LOG	5-207
5.7.2	RETRIEVING THE DEBUG LOG FROM THE HDD	5-210
5.7.3	RECORDING ERRORS MANUALLY	5-211
5.7.4	NEW DEBUG LOG CODES	5-212
	SP5857-015 Copy SD Card-to-SD Card: Any Desired Key	5-212
	SP5857-016 Create a File on HDD to Store a Log.....	5-212
	SP5857-017 Create a File on SD Card to Store a Log.....	5-212
5.8	USER TOOLS.....	5-213
5.8.1	OVERVIEW.....	5-213
5.8.2	SYSTEM SETTINGS	5-214
	B064 Series System Settings	5-214
	B140 Series System Settings	5-216
5.8.3	COPIER/DOCUMENT SERVER FEATURES	5-219
5.8.4	INQUIRY	5-223
5.8.5	COUNTER	5-223
5.9	DIP SWITCH TABLES	5-224
5.9.1	BCU (BASE ENGINE CONTROL UNIT)	5-224
5.9.2	CONTROLLER BOARD.....	5-224

6. DETAILED DESCRIPTIONS	6-1
6.1 OVERVIEW	6-1
6.1.1 PAPER PATH (WITH COVER INTERPOSER TRAY)	6-3
6.1.2 PAPER PATH (WITH 9-BIN MAILBOX)	6-4
6.1.3 DRIVE LAYOUT	6-5
6.2 BOARD STRUCTURE	6-6
6.2.1 BLOCK DIAGRAM	6-6
6.2.2 COMPONENT DESCRIPTIONS	6-7
BCU (Base Engine Control Unit)	6-7
Controller Board	6-7
MB (Mother Board)	6-7
IPU (Image Processing Unit)	6-7
SBU (Sensor Board Unit)	6-8
PFC (Paper Feed Control)	6-8
SDRB (Scanner Driver Board)	6-8
VIB (Video Interface Board)	6-8
DRB (Drive Board)	6-8
CNB (Connection Board)	6-8
HDD (Hard Disk Drive)	6-9
6.3 COPY PROCESS OVERVIEW	6-10
6.4 ADF	6-12
6.4.1 OVERVIEW	6-12
6.4.2 ADF DRIVE LAYOUT	6-13
6.4.3 PICK-UP ROLLER LIFT	6-14
6.4.4 BOTTOM PLATE LIFT	6-15
6.4.5 ORIGINAL SEPARATION	6-16
6.4.6 ORIGINAL TRANSPORT	6-17
6.4.7 ORIGINAL SKEW CORRECTION	6-18
6.4.8 ORIGINAL SIZE DETECTION	6-20
6.4.9 ADF SCANNING	6-23
6.4.10 JAM DETECTION	6-24
6.5 SCANNING	6-25
6.5.1 OVERVIEW	6-25
6.5.2 SCANNER DRIVE	6-26
6.5.3 ORIGINAL SIZE DETECTION	6-27
Sensors	6-27
Detection Timing	6-28
6.5.4 SCANNING MAGNIFICATION	6-29
Book Mode	6-29
6.5.5 AUTO IMAGE DENSITY (ADS)	6-30
Xenon Lamp → CCD ADS	6-30
CIS ADS	6-30
6.6 IMAGE PROCESSING	6-31
6.6.1 OVERVIEW	6-31
6.6.2 IMAGE PROCESSING FLOW	6-32
6.6.3 IMAGE PROCESSING MODES	6-33
6.6.4 IMAGE QUALITY SP ADJUSTMENTS	6-34
Custom Settings for Each Mode: Image Quality	6-34
Custom Settings for Each Mode: Line Width Correction	6-36
Custom Setting: Duplex Scanning Mode Original Image Quality Settings	6-38
Settings Adjustable for Each Original Mode	6-39
6.6.5 RELATION BETWEEN THE SP AND UP SETTINGS	6-40
6.6.6 IMAGE PROCESSING TROUBLESHOOTING	6-42
Removing Background from Coarse Paper	6-42
Improving the Appearance of a Copy of a Color Document	6-42
Removing Vertical White Lines During Duplex Scanning	6-43
Equalizing Duplex Scanned Image Quality of Front/Back Sides	6-44
Equalizing Image Quality of Front Sides for Duplex and Simplex Modes	6-44

6.7	LASER EXPOSURE	6-45
6.7.1	OVERVIEW.....	6-45
6.7.2	OPTICAL PATH.....	6-46
6.7.3	FOUR-BEAM EXPOSURE	6-47
6.7.4	COOLING FAN	6-48
6.7.5	LD SAFETY SWITCHES	6-49
	B064 Series, B140 Series Safety Switches	6-49
	B246 Series Safety Switches.....	6-50
6.8	DRUM UNIT	6-51
6.8.1	OVERVIEW.....	6-51
6.8.2	OPC DRUM	6-52
6.8.3	DRUM DRIVE	6-52
6.8.4	DRUM CHARGE.....	6-53
6.8.5	CHARGE CORONA WIRE CLEANING.....	6-54
6.8.6	DRUM PICK-OFF MECHANISM	6-55
6.8.7	DRUM CLEANING.....	6-56
6.8.8	DRUM VENTILATION AND OZONE FILTER.....	6-57
6.8.9	TONER RECYCLING	6-58
6.8.10	WASTE TONER COLLECTION	6-59
	Mechanism.....	6-59
	Error Detection	6-59
6.8.11	PROCESS CONTROL.....	6-60
	What Happens at Power On	6-60
	Drum Potential Sensor Calibration.....	6-61
	Development Bias, Bias Grid, and LD Adjustment	6-62
	ID Sensor Calibration (Vsg).....	6-64
	TD Sensor Calibration (Vref).....	6-64
6.9	DEVELOPMENT AND TONER SUPPLY	6-65
6.9.1	OVERVIEW.....	6-65
	Development Unit	6-65
	Toner Supply.....	6-66
6.9.2	DEVELOPMENT UNIT	6-67
6.9.3	DEVELOPER/TONER MIXING (AGITATION)	6-68
6.9.4	DEVELOPMENT BIAS.....	6-69
6.9.5	TONER SUPPLY	6-70
6.9.6	DEVELOPMENT UNIT DRIVE AND VENTILATION.....	6-71
6.9.7	TONER END SENSOR.....	6-72
6.9.8	SHUTTER MECHANISM.....	6-72
6.9.9	TONER BOTTLE SUPPLY AND VENTILATION.....	6-73
6.9.10	TONER SUPPLY CONTROL	6-74
	Sensor Control Mode	6-74
	Pixel Count Toner Supply Mode	6-75
	TD Sensor Initialization	6-76
	Determining Vref	6-76
	Toner Supply without ID Sensor and TD Sensors.....	6-77
	Abnormal TD Sensor Output.....	6-77
	Abnormal ID Sensor Output.....	6-77
	Toner End Detection	6-78
	Toner End Recovery	6-78

6.10	IMAGE TRANSFER AND PAPER SEPARATION	6-79
6.10.1	OVERVIEW.....	6-79
6.10.2	TRANSFER BELT LIFT	6-80
	Mechanism.....	6-80
	Timing	6-81
6.10.3	TRANSFER BELT CHARGE	6-82
6.10.4	TRANSFER CURRENT SETTINGS.....	6-83
6.10.5	TRANSFER CURRENT CIRCUIT	6-84
6.10.6	TRANSFER BELT DRIVE AND PAPER TRANSPORT	6-85
6.10.7	TRANSFER BELT CLEANING	6-86
6.10.8	ANTI-CONDENSATION HEATER.....	6-87
6.11	PAPER FEED	6-88
6.11.1	OVERVIEW.....	6-88
	Tray Capacities	6-89
	Built-in Feed Stations	6-89
	By-pass Feed	6-89
	Paper Registration	6-89
	Jam Removal	6-89
6.11.2	DRIVE	6-90
6.11.3	TRAY AND PAPER LIFT MECHANISM – TRAY 2,3	6-91
	Bottom Plate Lift.....	6-91
	Lift Sensor	6-92
6.11.4	PAPER FEED AND SEPARATION MECHANISM	6-93
	Paper Feed and Separation: No Paper Present.....	6-93
	Paper Feed and Separation.....	6-94
	Separation Roller Release Mechanism	6-95
6.11.5	PAPER NEAR-END AND PAPER END – TRAYS 2 AND 3.....	6-96
6.11.6	PAPER SIZE DETECTION.....	6-97
	Tandem Tray (Tray 1).....	6-97
	Universal Cassettes (Tray 2, 3)	6-97
6.11.7	ANTI-CONDENSATION HEATERS	6-98
6.11.8	TANDEM TRAY – TRAY 1	6-99
	Overview	6-99
	Connecting the Left and Right Sides of the Tray.....	6-100
	Paper Lift/Remaining Paper Detection	6-101
	Fence Drive.....	6-103
	Rear Fence Drive	6-104
	Tray Side-to-side Positioning.....	6-105
6.11.9	TRAY POSITIONING MECHANISM – TRAYS 1 TO 3	6-106
6.11.10	BY-PASS TRAY	6-107
	By-pass Feed and Separation	6-107
	By-pass Tray Paper End Detection	6-108
	By-pass Paper Size Detection	6-109
6.11.11	PAPER REGISTRATION.....	6-110
	Overview	6-110
	Paper Registration Drive.....	6-111
	Jam Removal at Paper Registration	6-112

6.12	IMAGE FUSING AND PAPER EXIT	6-113
6.12.1	OVERVIEW.....	6-113
	B064 Series.....	6-113
	B140/B246 Series	6-114
	All Series	6-114
6.12.2	FUSING MECHANISM	6-115
	B064 Series.....	6-115
	B140/B246 Series	6-116
6.12.3	PRESSURE ROLLER.....	6-117
	B064 Series.....	6-117
	B140/B246 Series	6-118
6.12.4	HOT ROLLER CLEANING	6-119
	Overview	6-119
	Web Drive	6-120
	Web Near-end.....	6-120
	Web End	6-120
6.12.5	FUSING UNIT ENTRANCE GUIDE.....	6-121
6.12.6	FUSING UNIT DRIVE	6-122
6.12.7	CPM DOWN MODE.....	6-123
	B140/B246 Series	6-123
6.12.8	FUSING TEMPERATURE CONTROL	6-124
6.12.9	EXIT	6-126
6.12.10	EXIT JUNCTION GATE	6-127
6.13	DUPLEX UNIT	6-128
6.13.1	OVERVIEW.....	6-128
6.13.2	DUPLEX DRIVE.....	6-129
6.13.3	INVERTER OPERATION	6-130
	Inverter Feed-in and Jogging.....	6-130
	Inverter Feed-out	6-131
6.13.4	DUPLEX TRAY FEED	6-132
6.13.5	DUPLEX INTERLEAVE FEED	6-133
6.14	ENERGY SAVER MODES	6-135
6.14.1	OVERVIEW.....	6-135
6.14.2	ENERGY SAVER MODE.....	6-136
	Entering the energy saver mode.....	6-136
	What happens in energy saver mode	6-136
	Return to stand-by mode	6-136
6.14.3	LOW POWER MODE	6-137
	Entering the low power mode	6-137
	What happens in low power mode.....	6-137
	Return to stand-by mode	6-137
6.14.4	AUTO OFF MODE.....	6-138
	Entering auto off mode.....	6-138
	What happens in auto off mode.....	6-138
	Returning to stand-by mode.....	6-138
	Disabling auto off mode	6-138
6.14.5	NIGHT MODE	6-139
	Entering night stand-by and night modes	6-139
	What happens in night stand-by and night modes.....	6-139
	Returning to stand-by mode.....	6-139
6.14.6	CHANGES FOR B140 AND B246.....	6-140


7. SPECIFICATIONS	7-1
7.1 GENERAL SPECIFICATIONS	7-1
7.1.1 COPIER	7-1
7.1.2 ADF	7-2
7.1.3 POWER CONSUMPTION	7-3
7.2 MACHINE CONFIGURATION	7-6
7.3 OPTIONAL EQUIPMENT	7-7
7.3.1 A3/DLT KIT (B475)	7-7
7.3.2 LCT (LARGE CAPACITY TRAY) (B473)	7-7
7.3.3 3000-SHEET FINISHER WITH SADDLE-STITCH AND 50-SHEET STAPLER (B468)	7-8
7.3.4 3000-SHEET FINISHER WITH 50-SHEET STAPLER (B469)	7-10
7.3.5 3000-SHEET FINISHER WITH SADDLE-STITCH AND 50-SHEET STAPLER (B674)	7-11
7.3.6 PUNCH UNIT (B377)	7-14
7.3.7 COVER INTERPOSER TRAY (B470)	7-15
7.3.8 3000 SHEET FINISHER (B478/B706)	7-16
7.3.9 PUNCH UNIT (B531)	7-17
7.3.10 PUNCH UNIT (A812)	7-18
7.3.11 JOGGER UNIT (B513)	7-19
7.3.12 9-BIN MAILBOX (B471)	7-19
7.3.13 LG/B4 KIT (B474)	7-19
7.3.14 Z-FOLDING UNIT (B660)	7-19
7.3.15 3000-SHEET FINISHER B701	7-20
7.3.16 2000-SHEET FINISHER B700	7-22
7.3.17 PUNCH UNIT B702	7-24
7.3.18 9-BIN MAILBOX B762	7-24

1. INSTALLATION

1.1 INSTALLATION REQUIREMENTS

1.1.1 OPERATING ENVIRONMENT

1. Temperature Range: Recommended: 15°C to 25°C (59°F to 77°F)
Possible: 10°C to 32°C (50°F to 90°F)
2. Humidity Range: 15% to 80% RH (27°C 80%, 32°C 54%)
3. Ambient Illumination: Less than 1,500 lux (do not expose to direct sunlight or strong light.)
4. Ventilation: Room air should turn over at least 3 times per hour
5. Ambient Dust: Less than 0.10 mg/m³

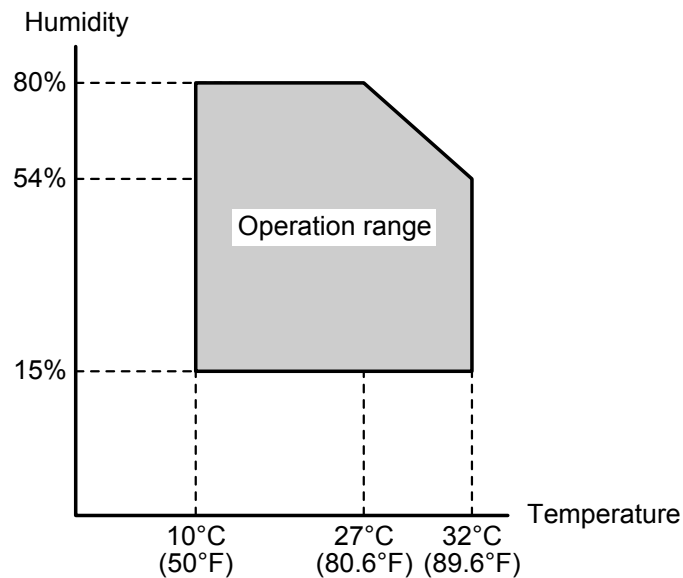

B064I502.WMF

6. If the place of installation is air-conditioned or heated, do not place the machine where it will be:
 - 1) Subjected to sudden temperature changes
 - 2) Directly exposed to cool air from an air-conditioner
 - 3) Directly exposed to heat from a heater

7. Do not place the machine where it will be exposed to corrosive gases.
8. Do not install the machine at any location over 2,000 m (6,500 feet) above sea level.
9. Place the copier on a strong and level base with the front and back of the machine within ± 5 mm (0.2") of level.
10. Do not place the machine where it may be subjected to strong vibrations.
11. Do not connect the machine to a power source shared with another electrical appliance.
12. The machine can generate an electromagnetic field which could interfere with radio or television reception.


1.1.2 MACHINE LEVEL

1. Front to back: Within ± 5 mm (0.2") of level
2. Right to left: Within ± 5 mm (0.2") of level

The machine legs may be screwed up or down in order to level the machine. Set a carpenter's level on the exposure glass.


1.1.3 MINIMUM SPACE REQUIREMENTS

Place the copier near the power source, providing minimum clearance as shown below. The same amount of clearance is necessary when optional peripheral devices are installed.

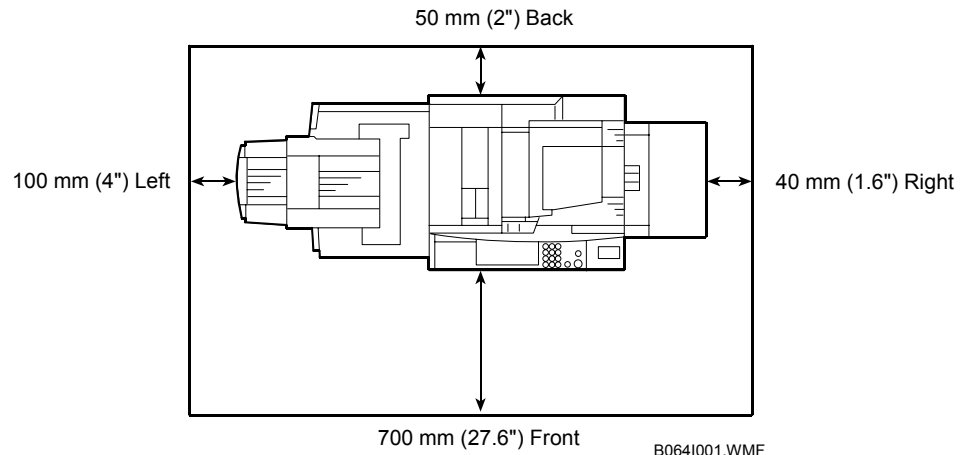


1.1.4 DIMENSIONS

B064 Series

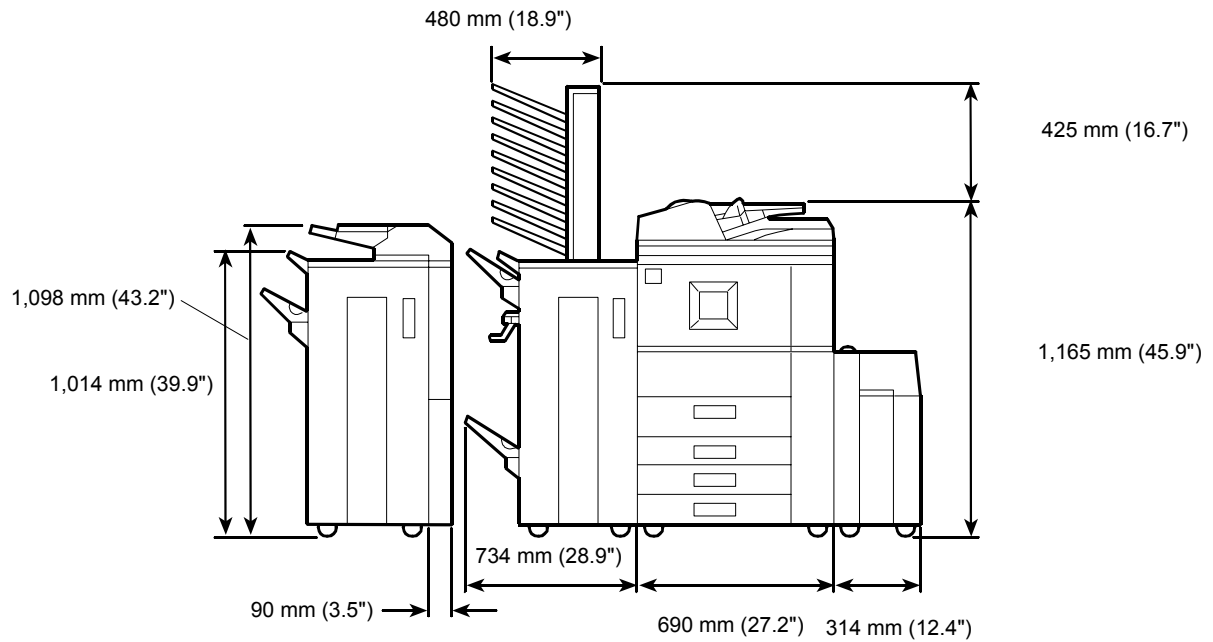



B064I003.WMF

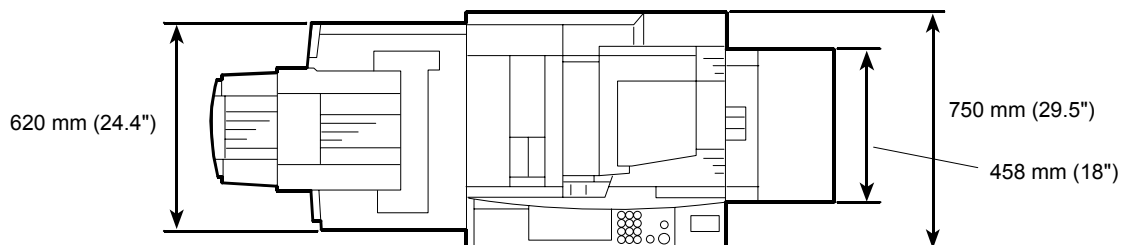


B064I002.WMF

B140 Series

Installation

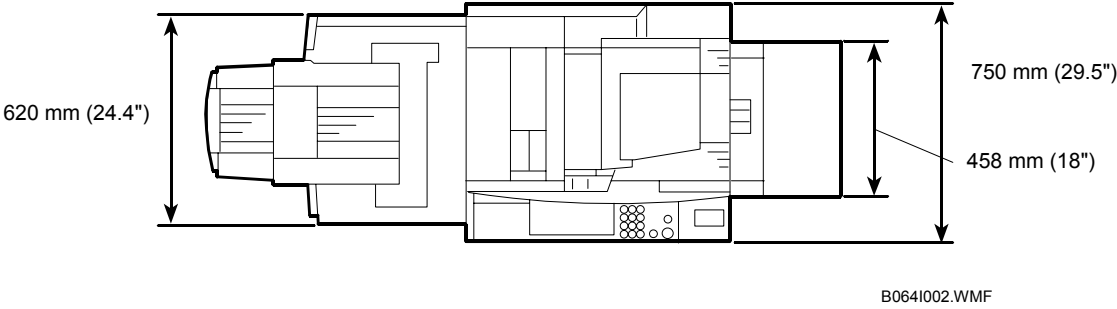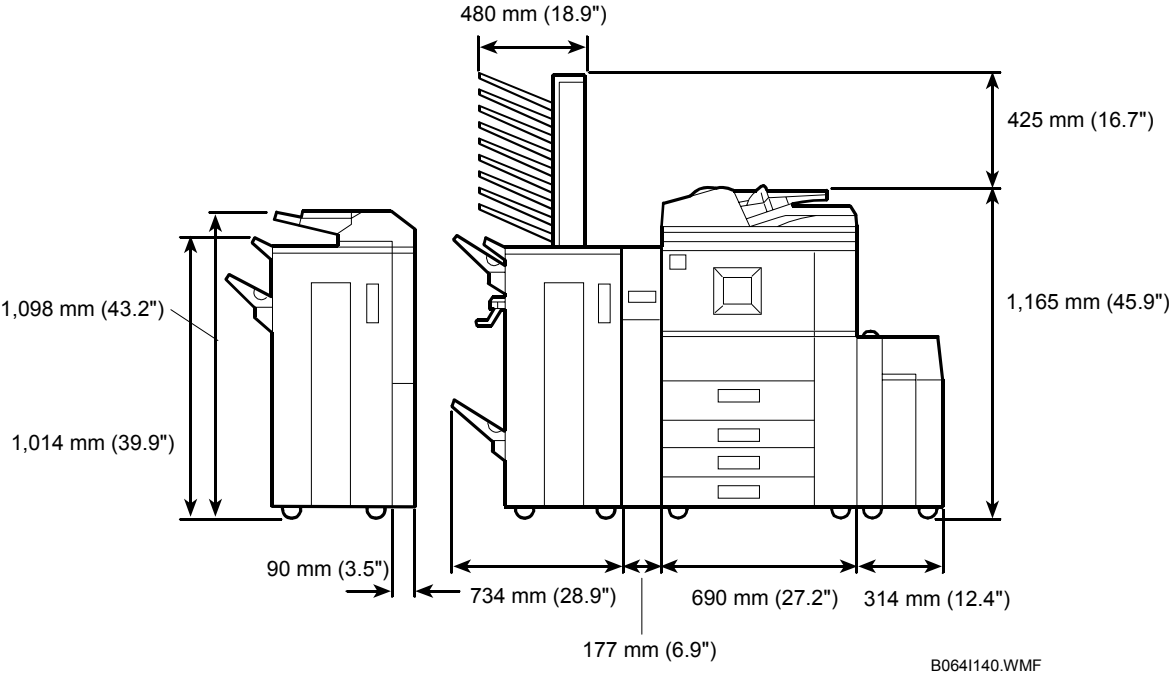

B246 Series

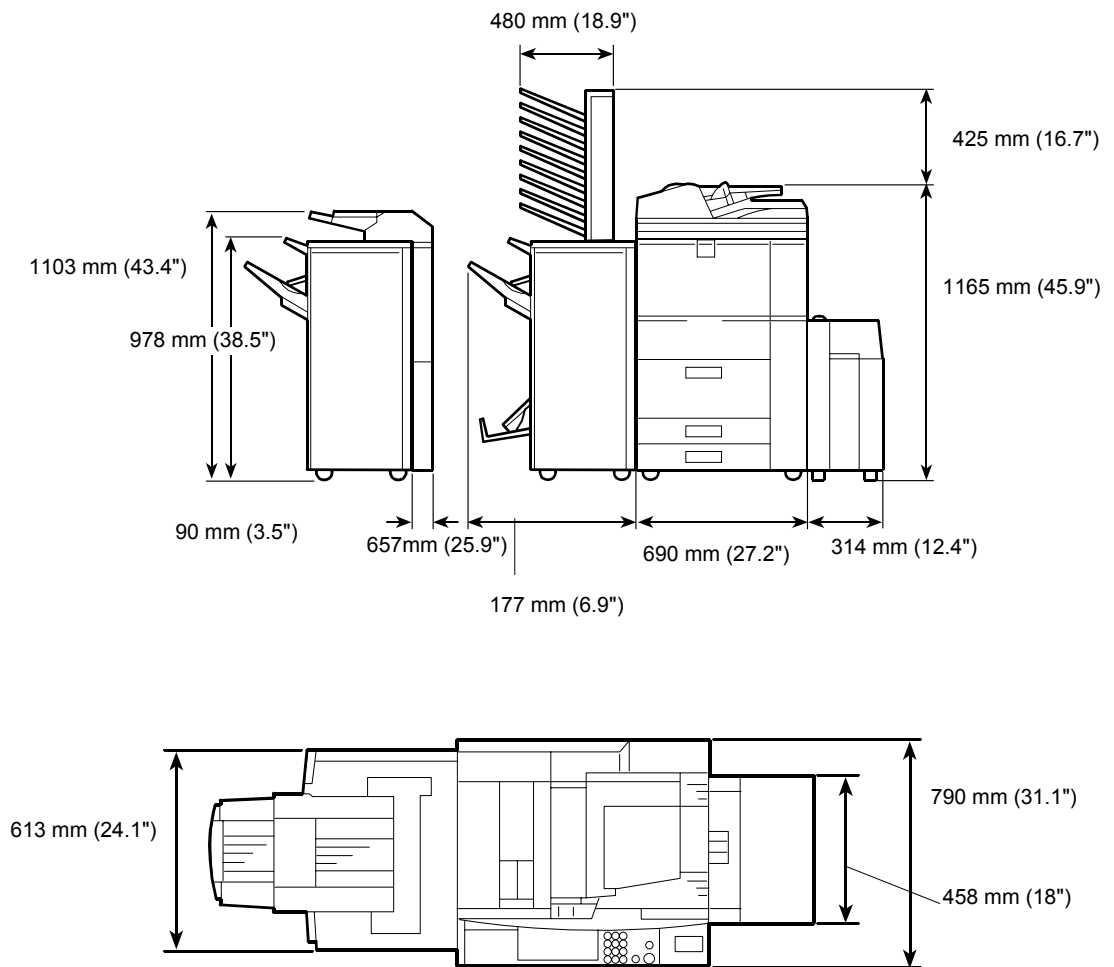

B064I002.WMF



1.1.5 PERIPHERAL/OPTION SUMMARY TABLE



The table below summarizes all the peripheral devices and controller options that can be installed with the B064, B140, and B246 Series machines. O: YES, X: NO

Bnnn	Name	Series			Class*1	Comment
		B064	B140	B246		
B328	Copy Connector Kit Type 2105	X	O	X	1	Links two mainframes.
B377	Punch Unit Type 1045	O	O	X	2	Installed in B468, B469, B674
B452	Key Counter Bracket Type 1027	O	O	O	1	Common option.
B468	Booklet Finisher	O	X	X	1	Punching, sorting, shifting, corner/booklet stapling.
B469	Booklet Finisher SR850	O	O	X	1	Punching, sorting, shifting, corner stapling only.
B470	Cover Interposer Tray	O	O	X	2	Installed on B468, B469, B674, or B478, B706
B471	9-Bin Mailbox	O	O	X	2	Installed on the B468, B469, or B674.
B473	LCT RT43	O	O	O	1	Paper bank for LT/A4 paper
B474	8 1/2"x 14" Paper Size Tray Type 1075	O	O	O	1	Paper bank for LG paper
B475	A3/11"x17" Tray Unit Type 1075	O	O	O	1	Installed in Tray 1 (Tandem Tray)
B476	Copy Tray Type 1075	O	X	X	2	Small output tray for mainframe
B478	3000 Sheet Finisher	O	X	X	1	Punching, sorting, shifting, corner stapling only.
B498	Card Reader Bracket	O	O	O	1	Connected directly to the mainframe.
B499	Tab Sheet Holder Type 3260	O	O	O	2	Installed in Tray 1 (Tandem Tray)
B513	Output Jogger Unit Type 1075	X	O	O	2	Installed in B478 or B706
B515	IEEE 801.11b	O	X	X	3	Board
B519	File Format Converter	O	X	X	3	Board
B525-08	Postscript 3 Type 1075	O	X	X	3	DIMM
B525-15	Postscript 3 Type 2075	X	O	X	3	SD card
B525-44	Postscript 3 Type 7500	X	X	O	3	SD card
B525-01	USB 2.0	O	O	O	3	Board
B531-27	Punch Unit Type 1075 EU 2/4	O	O	O	2	Installed in B478 or B706.
B531-17	Punch Unit Type 1075 NA 3/2	O	O	O	2	Installed in B478 or B706.
B581	IEEE 1394 Interface Board Type B	X	X	O	3	Board
B585	Memory Unit Type D 2075 256MB	X	O	X	3	Memory
B594	Network Interface Board Type 2105	X	O	X	3	Board
B596-01	USB 2.0 Interface Board Type B	X	O	X	3	Board
B609-04	File Format Converter Type C	X	X	O	3	Board
B609-01	File Format Converter Type B	X	O	X	3	Board
B659	Printer/Scanner Kit Type 2075	X	O	X	3	SD card

Bnnn	Name	Series			Class* ¹	Comment
		B064	B140	B246		
B660	Z-folding Unit ZF 4000	X	O	O	1	Installed with B674, B700, or B701.
B674	Booklet Finisher	X	O	X	1	Punching, sorting, shifting, corner/booklet stapling.
B679	IEEE1284 Interface Board Type A	X	X	O	3	Board
B700	SR 4000	X	X	O	1	Punching, sorting, shifting, corner/booklet stapling.
B701	SR970	X	X	O	1	Punching, sorting, shifting, corner stapling only.
B702-27	Punch Unit Type 3260 EU 2/4	X	X	O	2	Installed in B700 or B701
B702-17	Punch Unit Type 3260 NA 2/3	X	X	O	2	Installed in B700 or B701
B702-28	Punch Unit Type 3260 SC	X	X	O	2	Installed in B700 or B701
B703	Output Jogger Unit Type 3260	X	X	O	2	Installed on B700 or B701
B704	Cover Interposer Type 3260	X	X	O	2	Installed on the B700, B701 , B706.
B706	SR841	X	O	O	1	Punching, sorting, shifting, corner stapling only.
B735	Data Overwrite Security Unit C	X	O	O	3	SD card
B736	Bluetooth Interface Unit Type 3245	X	O	X	3	Board
B756	Copy Tray Type 2075	X	O	O	1	Small output tray for mainframe
B762	Mail Box CS391	X	X	O	2	Installed on B700 or B701
B782	VM Card Type B	X	O	X	3	SD card
B812	Punch Unit Type 850 SC	O	O	O	2	Installed in B478/B706.
B818	Remote Communication Gate Type CM1	X	X	O	3	Board
B825	USB Host Interface Unit Type A	X	X	O	3	Board
B826	Bluetooth Unit Type 3245	X	X	O	3	Board
B828	Browser Unit Type B	X	X	O	3	SD card
B829	Copy Data Security Unit Type C	X	X	O	3	IPU Board
B841	Printer/Scanner Unit Type 7500	X	X	O	3	SD Card
B842	Copy Connector Type MP 7500	X	O	O	1	Links two mainframes
B861	VM Card Type C	X	X	O	3	SD card
G336	IEEE 1394	O	X	X	3	Board
G338	Printer/Scanner Kit	O	X	X	3	DIMM
G377	Bluetooth Interface Unit	X	O	X	3	Board
G381	Gigabit Ethernet Type 7300	X	X	O	3	Board
G813	IEEE 802.11b Interface Board	X	O	O	3	Board

- *¹ Class 1: Peripheral units connected directly to the mainframe
Class 2: Components installed on or in peripheral units (punches, etc.)
Class 3: MFP controller options (SD cards, boards)

1.1.6 POWER REQUIREMENTS


CAUTION

1. Make sure that the wall outlet is near the main machine and easily accessible. Make sure the plug is firmly inserted in the outlet.
2. Avoid multi-wiring.
3. Be sure to ground the machine.
4. Never set anything on the power cord.

Input voltage level	North America 120 V, 60 Hz: 20 A or more
	Europe/Asia 220 V ~ 240 V, 50 Hz/60 Hz: 10 A or more
	Taiwan 110V, 60 Hz, 20A or more
Permissible voltage fluctuation	±10%

CAUTION

Never turn off the main power switch when the power LED is lit or flashing. To avoid damaging the hard disk or memory, press the operation power switch to switch the power off, wait for the power LED to go off, and then switch the main power switch off.

The Main Power LED () lights or flashes at the following times:

- While the platen cover or ADF is open
- While the main machine is communicating with the network server
- While the machine is accessing the hard disk or memory when reading or writing data.

There are two power switches on the machine:

- **Main Power Switch.**
Located on the front left corner of the machine and covered by a plastic cover. This switch should always remain on unless the machine is being serviced.
- **Operation Power Switch.**
Located on the right side of the operation panel. This is the switch normally used by the customer to power the machine on and off.

1.2 MAIN MACHINE (B064 SERIES/B140 SERIES/B246 SERIES)

1.2.1 ACCESSORY CHECK

Check the accessories and their quantities against this list:


Description	Q'ty
1. Model Name Decal (-29 Only)	1
2. Operation Instructions (-17, -19, -29, -69 Only)	2
3. NECR with Envelope (-17 Only)	1
4. Decal – Paper Size	1
5. Decal: Caution Chart: Paper Set: Direction	1
6. Stand Holder.....	1
7. Operating Instructions Holder	2
8. Decal – Original Table (Face Up)	1
9. Decal – Cleaning - Multiple	1
10. Cloth – DF Exposure Glass	1
11. Cloth Holder.....	1
12. Decal – Toner Supply - Multiple	1
13. Decal: Power Source: Off	1
14. Decal Exposure Glass: Multiple	1
15. Decal – D1/E1 Multiple	1

1.2.2 INSTALLATION PROCEDURE


Removing Tapes and Retainers

⚠ CAUTION

To avoid serious injury, do not connect the power plug to the machine until you are instructed to do so.

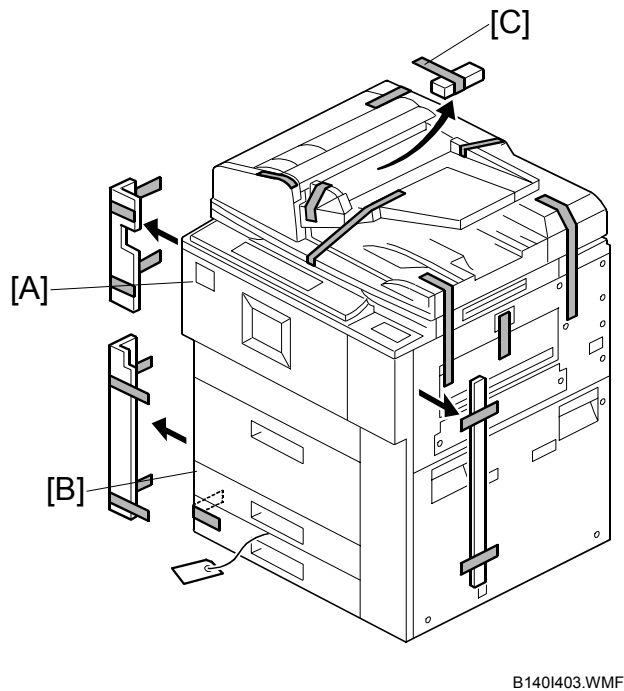


B140I403.WMF

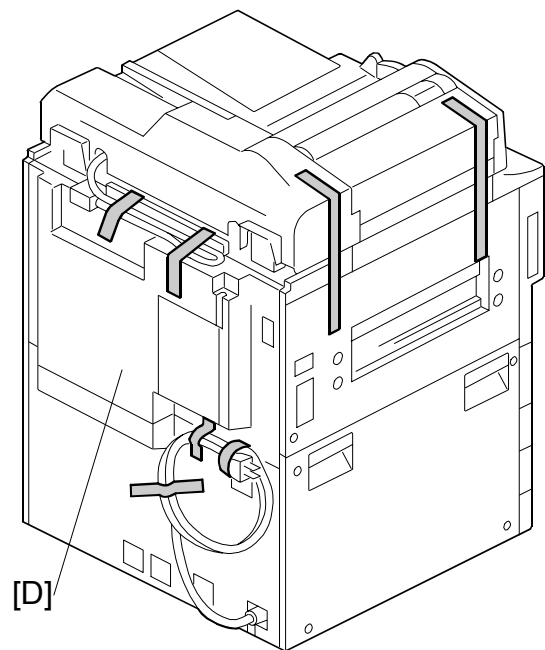


B064I404.WMF

1. Unpack the machine and remove all the wrapping.
2. Remove all filament tape from the front [A] of the machine.
3. Open the lower tray [B] and remove the operating instructions holder and foot risers.
4. Open the ADF feed cover and remove the tape and retainer [C].
5. Remove the tape from the back [D] of the machine.
NOTE: Save the filament tape and shipping retainers to prepare the machine for shipping in the future.


6. Raise the ADF and remove all the tape and shipping retainers around the exposure glass [A] and operation panel.
7. Remove the shipping retaining sheet [B] under the white pad.

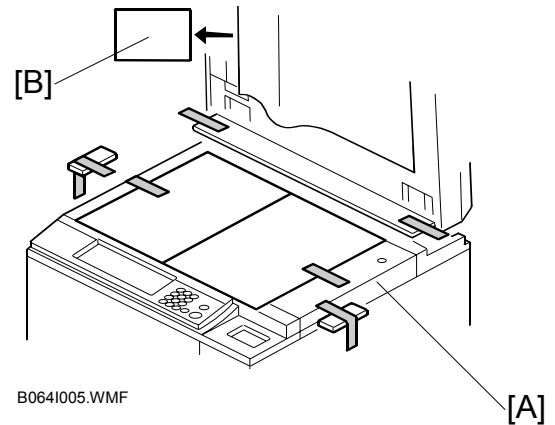


8. Open the front door, open the toner bottle holder [C], then remove all tape and shipping retainers.

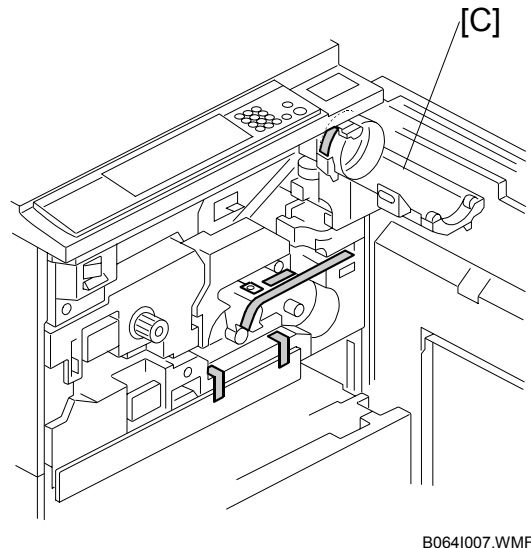

9. Open the right door and remove the tapes from the vertical transport plate.

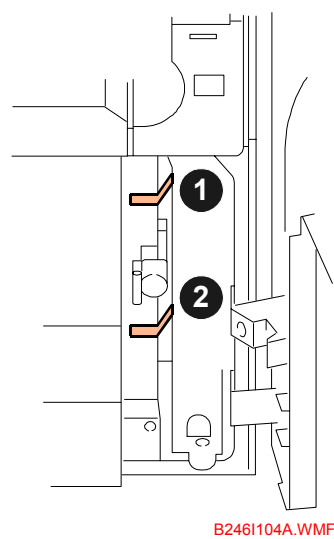


10. Remove the PCU inner cover [D] (⚙ x 2) and disconnect the fan motor [E] (🔌 x 1).

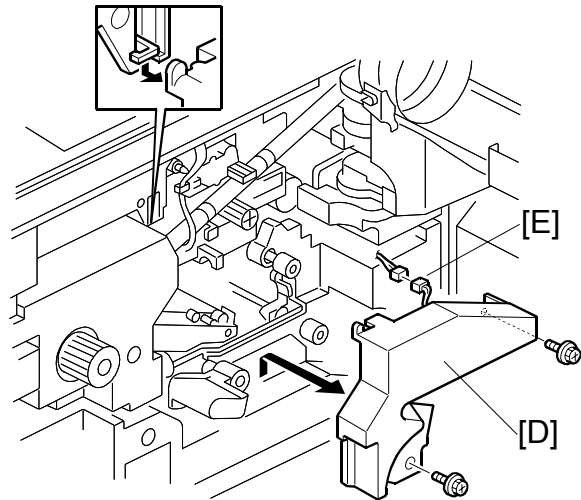


B064I008.WMF

11. Lower the transfer unit by turning its knob [A].
12. Remove the bracket [B], and the red tag from the transfer belt (⚙ x 1).
13. Remove the pin [C], and the red tag from the cleaning plate.

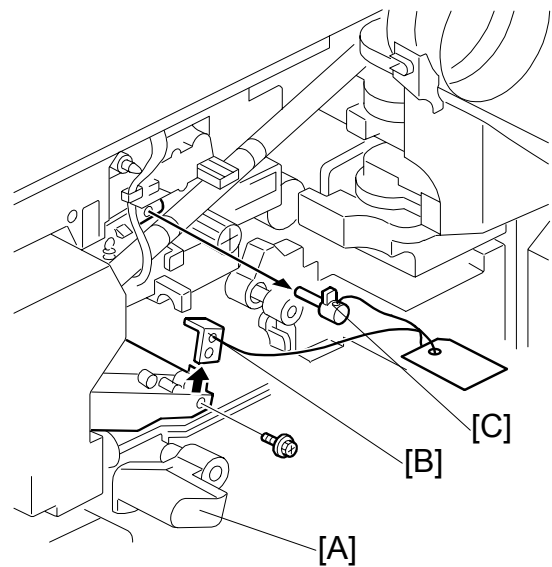

B140I009.WMF


14. Open the tandem tray (top paper tray) and remove the metal retainer bracket [D] (⚙ x 1) **and wire, then the red tags (x2) and all tape.**

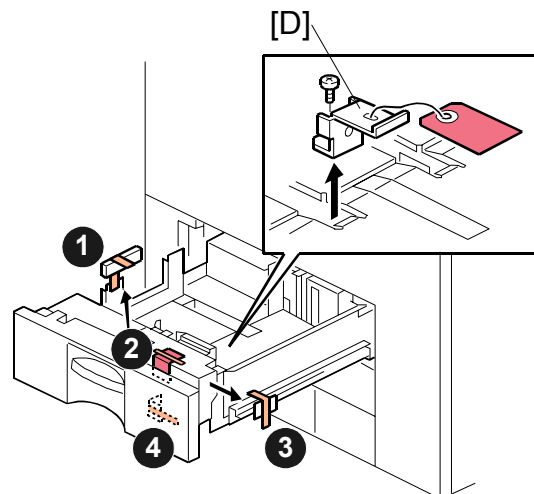

B246I104B.WMF

Connecting the ADF

Connect the ADF plug [A] to the connector on the back of the machine.

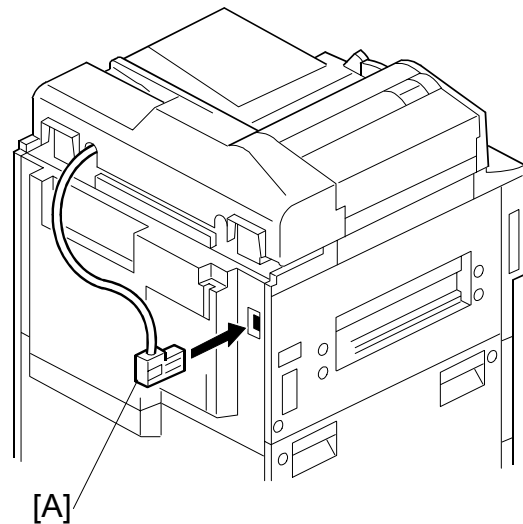


B064I405.WMF


Removing and Filling the Development Unit**Important!**


- Before you begin, remove the toner bottle if it is installed.
- The toner bottle holder can be damaged if it is in the machine when you do the procedure below.

1. **Open the front door.**
2. Remove the shutter cover [A] (⌀ x 1).
3. Remove the lock screw [B].
4. Remove any remaining shipping tape [C].
5. Pull the toner bottle holder [D] and swing it to the right.

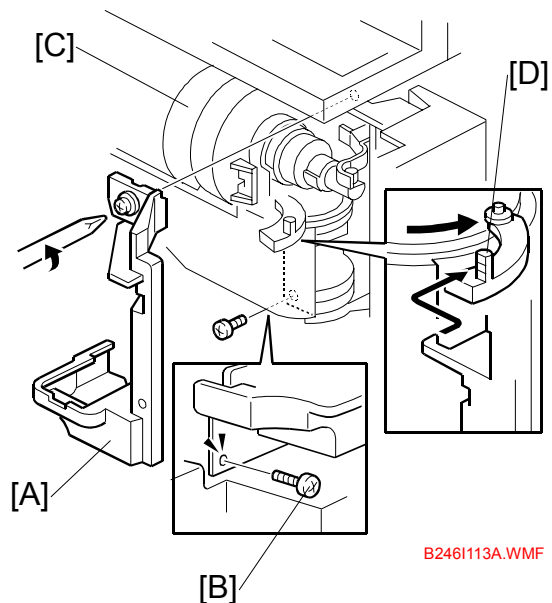


B246I113A.WMF

6. Remove the face plate [E] of the development unit (knob x 1,  x 2).

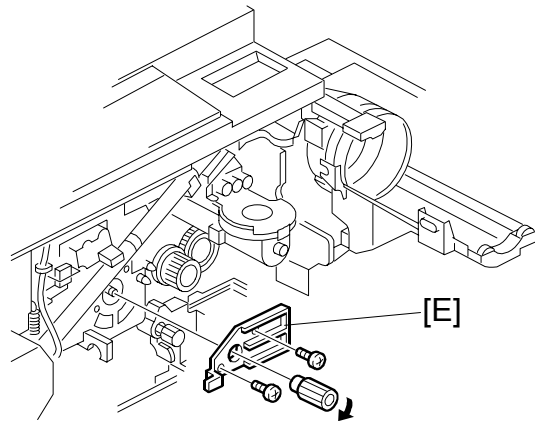


B064I302.WMF

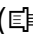
7. Disconnect the development unit [F] ( x 2).

NOTE: If the LCT is installed, disconnect it. This lets the front door open far enough for development unit removal.


8. Close the supply pipe shutter [G].
9. While allowing the development unit [H] to slip to the right, slowly pull it out of the machine.

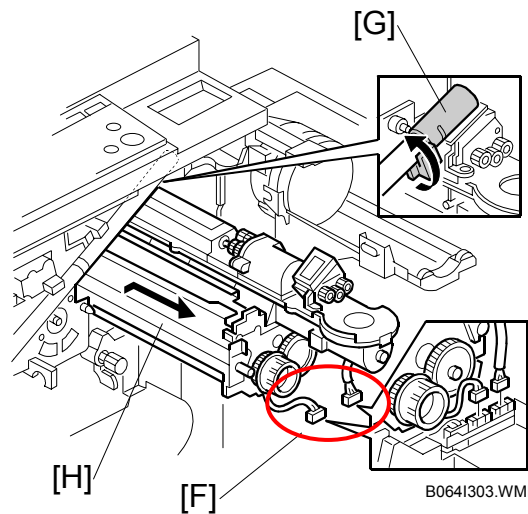

B064I303.WMF


10. Remove the toner hopper [A] ( x 2).

11. Rotate the toner hopper [B] slightly 10° to 20° as you slide it up to remove it.

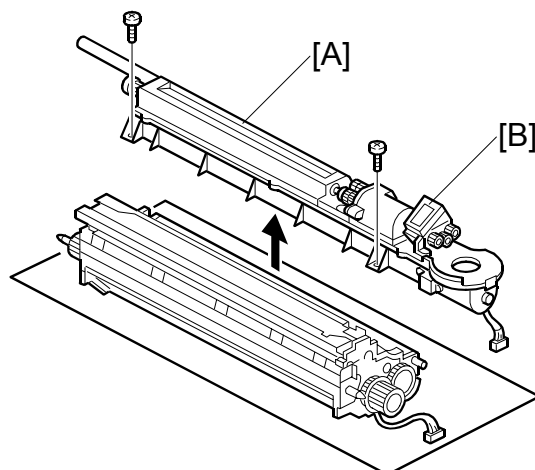

B064I304.WMF


12. While turning the knob [C] slowly, pour in one pack of developer [D] from one end of the development unit to the other.
13. Make sure that the developer is evenly distributed. Note the developer lot number printed on the top edge of the bag. You will need the lot number when you execute SP2963 (Installation Mode).
14. Assembly the developer unit then re-install it in the machine.

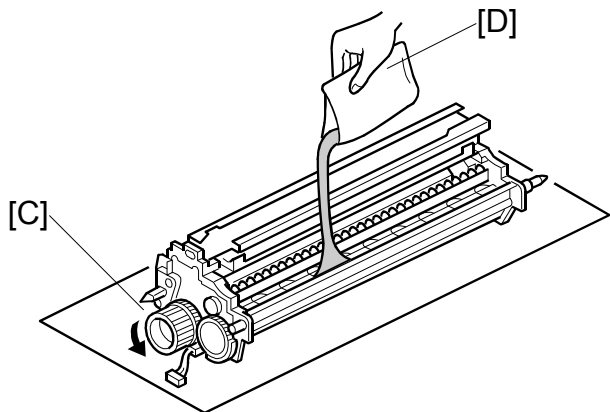

B064I305.WMF

15. Follow the instructions printed on the inside of the front door to install the toner bottle.

NOTE: If the door does not close, make sure that the pipe line shutter is rotated down. (See Step 7 above.)

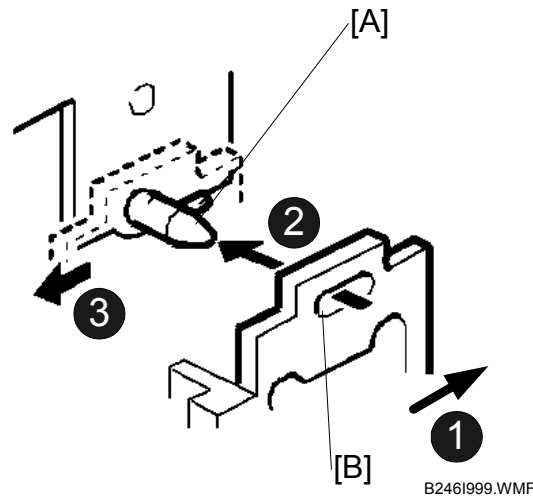Re-installing the Development Unit

1. Push the development unit to the right ❶.
2. While continuing to hold the unit to the right, push it into the machine.
3. Confirm that the pin [A] goes into the left side of the oval hole [B] in the development unit plate.
4. Push the development unit in completely ❷ until it stops, then push it to the left ❸.
5. Make sure you can see the horizontal pin in front of the plate as shown below.

Correct!



Incorrect!



B246I999A.WMF

NOTE: If you cannot move the development unit plate behind the horizontal pin, turn the front gear of the unit to the left and try again.




6. Make sure the pipeline shutter is rotated down to the open position.
7. Reattach all removed parts.

Initializing the Drum Settings (B064 Series)

After switching on the machine, you must execute SP2963 (Installation Mode) within 60 seconds to 1) Initialize the developer and force toner supply to the development unit, and 2) Initialize the auto process control settings.

- SP2963 must be executed before sample copying or test printing.
- If you do not press “Execute” in Step 2 in the following procedure within 60 seconds after the machine is switched on, the auto process control features (potential sensor calibration, Vsg, Vref, etc.) will not initialize correctly.
- If the machine starts the auto process control routine before you have a chance to press Execute, switch the machine off and try again.

1. Connect the power cord.
2. Within one minute, before the auto process control settings initialize, execute SP2963.

- Press Clear Modes .
- On the operation panel keypad, press ①⑦⑦.
- Hold down Clear/Stop  for more than 3 seconds.
- Press “Copy SP” on the touch-panel.
- Press ②⑨⑥③.
- Press Enter .
- Enter the Developer Lot No. with the key display, then press “Execute”.

About four minutes is required to initialize toner supply and the auto process control settings.

3. Press “Exit” to leave the SP mode.
4. Attach the appropriate decals (provided) to the paper trays.
5. Check copy quality and machine operation.

NOTE: At installation, use SP2963 to enter the lot number, initialize the developer, and to force toner supply to the toner hopper. After replacing developer in a machine that has already been installed, do not use SP2963; execute SP2801 (TD Sensor Initial Setting) instead to enter the lot number and initialize the TD sensor. (➡ 3.7.1)

Initializing the Drum Settings (B140/B246 Series)

You must do SP2963 (Installation Mode) to 1) Initialize the developer and do a forced toner supply to the development unit, and 2) Initialize the auto process control settings.

- You must open the front door before you switch the machine on. If you do this, the machine does not do the short automatic process control procedure, which is usually done after the machine power is turned on.
- SP2963 must be done before you do sample copying or test printing.
- If you do not press “Execute” in Step 6, the auto process control items (potential sensor calibration, Vsg, Vref, etc.) will not initialize correctly.

1. Open the front door.
2. Connect the power cord.
3. Turn the main power switch on.
4. Go into the SP mode. (Push [Clear Modes], then enter "107", then press and hold down [Clear/Stop] for at least 3 sec.)
5. Close the front door.
6. Do SP2963, enter the developer lot number with the key pad display, then push [Execute].
Approximately four minutes is necessary to initialize toner supply and the auto process control settings.
7. Press “Exit” to go out of the SP mode.
8. Attach the applicable decals (supplied with the machine) to the paper trays.
9. Check the copy quality and machine operation.

Important


- At installation, use SP2963 to enter the lot number, initialize the developer, and to force toner supply to the toner hopper.
- After you replace developer in a machine that has been already installed, do not use SP2963; use SP2801 (TD Sensor Initial Setting) instead to enter the lot number and initialize the TD sensor. (➡ 3.7.1)

Tandem Tray

Before shipping the machine, the tandem tray is set for A4 or LT LEF and must be adjusted if the customer wants to use the tandem tray for another paper size.


Feed Station	Allowed Size
Tandem Tray (Tray 1)	A4 LEF, LT LEF

1. Open the front cover.
2. Completely pull out the tandem feed tray [A] so that the right tandem tray [B] separates from the left tandem tray.

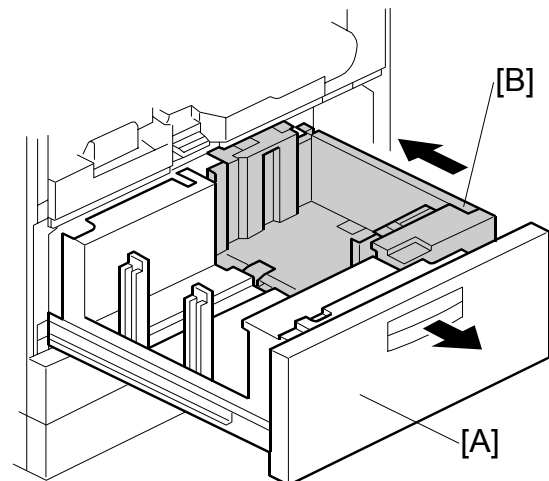


B064I564.WMF

3. Remove the right tandem inner cover [C].
4. Re-position the side fences [D] (2 x 2). The outer slot position is used when loading A4 size paper.
5. Re-install the right tandem inner cover [C].

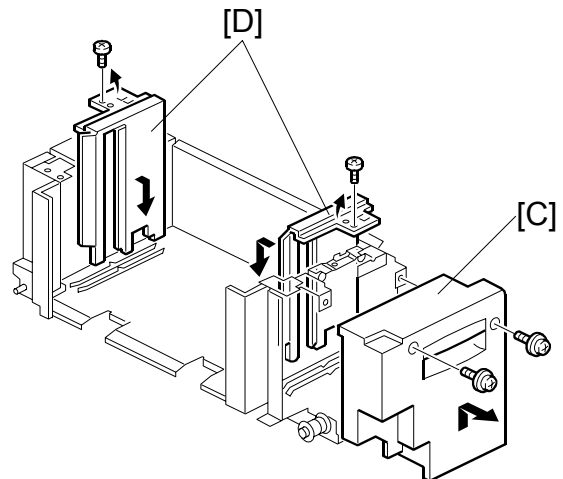


B064I565.WMF

6. Remove the tray cover [A] (⚙ x 2).
7. Remove the motor cover [B] (⚙ x 4).

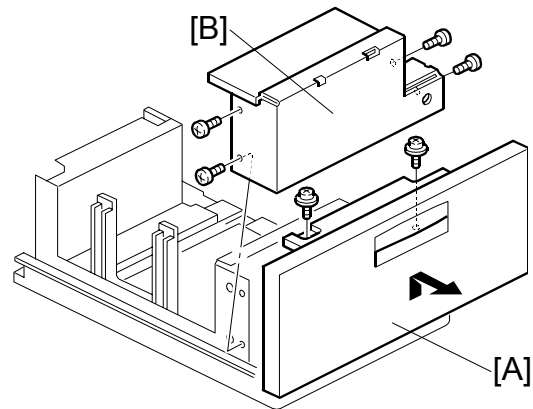


B064I566.WMF

8. Re-position the side fences [C] (⚙ x 8). The outer slot position is used when loading A4 size paper.
9. Re-install the motor cover and the tray cover.

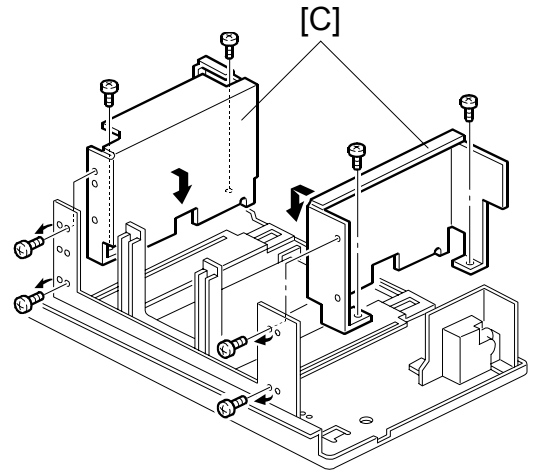

B064I523.WMF


10. Remove the rear bottom plate [D] (⚙ x 1).
11. Re-position the return position sensor bracket [E] (⚙ x 1). To use the paper tray for A4 size, put the screw in the left hole as shown. (For LT size, the screw should be placed on the right.)
12. Re-install the rear bottom plate.
13. Change the paper size using SP5959-001 (Paper Size – Tray 1). For details, see SP5959 in section “5. Service Tables”.

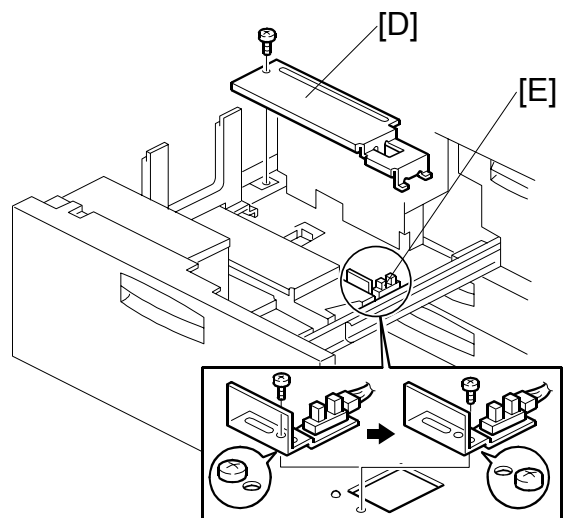

B064I024.WMF

Machine Level

1. Set a stand [A] at each corner of the machine.
2. Place a level on the exposure glass and use a wrench to turn each nut [B] and level the machine to ± 5 mm of the horizontal.
3. Check the machine operation. With the customer, determine the best place to attach the cleaning reminder decal.

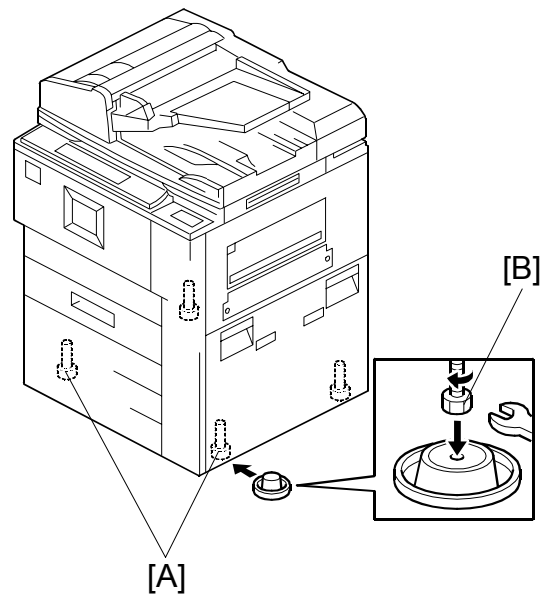

B064I010.WMF

Date/Time Setting

Use the User Tools menu to set the current date and time.

- On the operation panel, press the User Tools key.
- On the touch-panel, press "System Settings".
- Press the "Timer Setting" tab.
- Press "Set Date" to enter the date.
- Press "Set Time" to enter the time.

SP Codes

SP5812-001	Service Telephone Number Settings	Enter the contact number of the customer engineer. This is the number displayed when a service call is issued.
SP5841-001	Supply Name Setting – Toner Name Setting: Black	This name appears when the user presses the Inquiry on the User Tools screen.
SP5853	Stamp Data Download	Do SP 5853 to copy stamp data to the hard disk, then turn the power off/on.
SP7825 (B064 Series Only)	Total Counter Reset	Execute after installation and after making all test copies to reset the electronic counter total.




1.3 A3/DLT FEEDER KIT (B475)

1.3.1 ACCESSORY CHECK

Check the accessories and their quantities against this list:

Description	Q'ty
1. A3/DLT Tray	1
2. Short connector	1
3. Page size decals.....	1

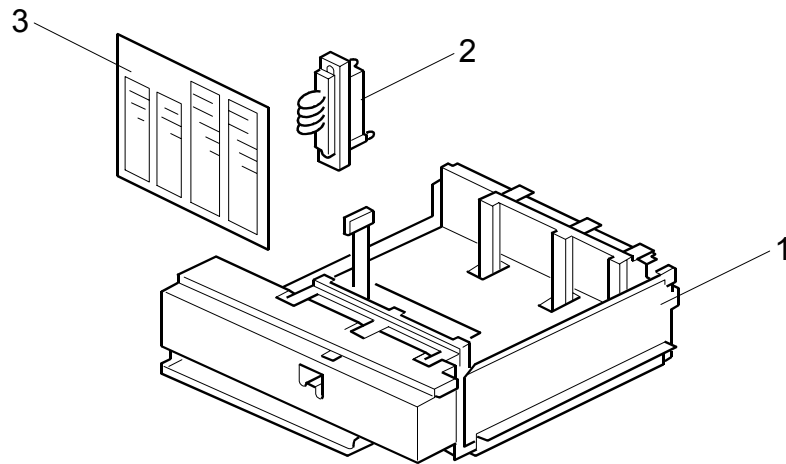


B475I001.WMF

1.3.2 INSTALLATION PROCEDURE

⚠ CAUTION


Switch the machine off and unplug the machine before starting the following procedure.

1. Draw out the tandem tray completely to separate the left and right sides of the tray, then remove the front cover [A] (⌀ x 2).
2. Push in the right tandem tray [B].

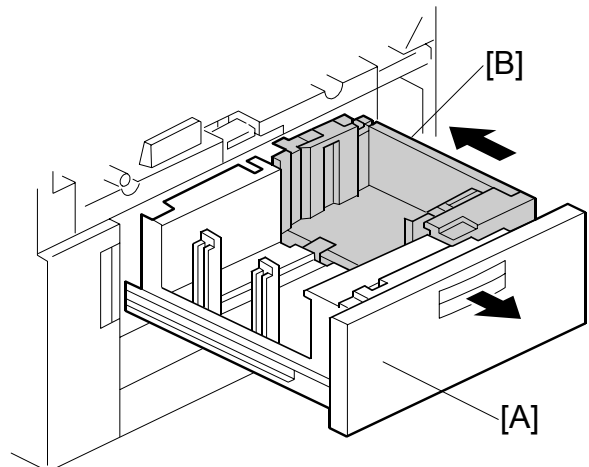


B475I707.WMF

3. Remove the left tandem tray [C] (⌀ x 5). Save these screws.

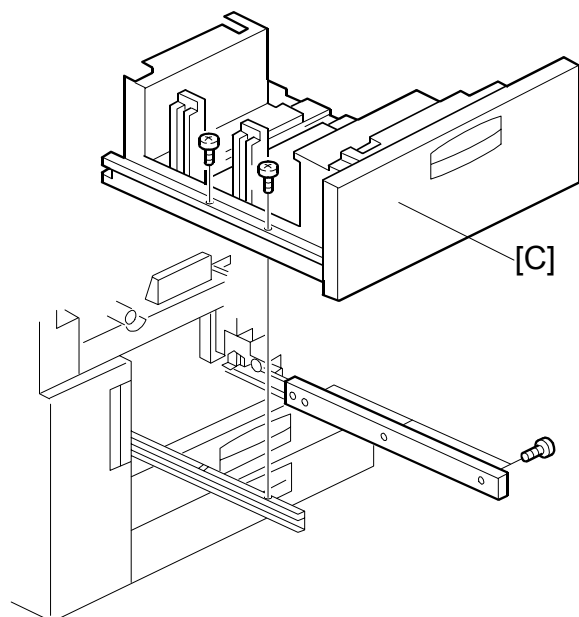


B475I708.WMF

4. Remove the right tandem tray [A] (⌀ x 2). Save these screws.

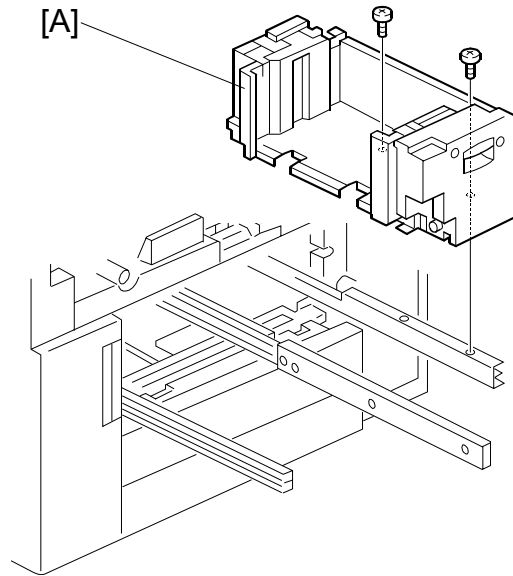


B475I709.WMF

5. Connect the short connector [B] to the left tandem tray terminal [C].

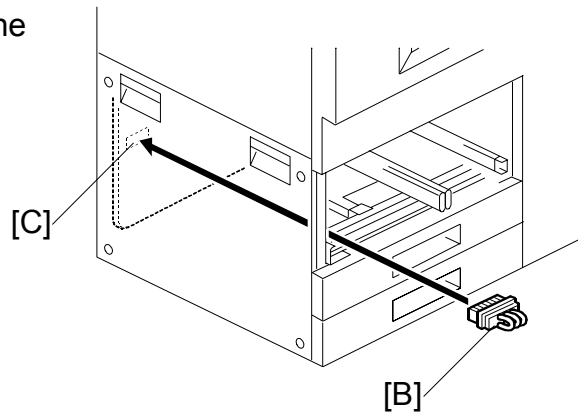

B475I201.WMF

6. Remove the stay [D] (⌀ x 2) and re-install it.
7. Attach the A3/DLT tray [E], using the screws removed earlier.
8. Re-install the front cover.
9. Switch the machine on, enter the SP mode and select the paper size for Tray 1 with SP5959-001 (Paper Size – Tray 1) For details, see SP5959 in section “5. Service Tables”.
10. Attach the appropriate decal for the selected paper size.

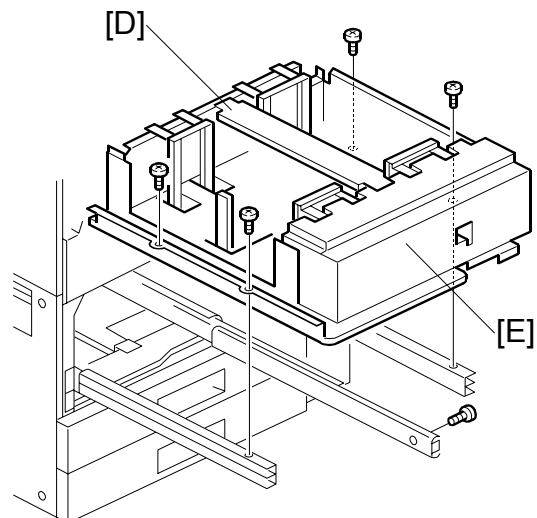

B475I202.WMF



1.4 LCT (B473)


1.4.1 ACCESSORY CHECK

Check the accessories and their quantities against this list:


Description	Q'ty
1. Flat-head shoulder screw - M4 x 6.....	1
2. Upper docking pins (grooved).....	2
3. Lower docking pin (not grooved).....	1
4. Installation Instructions	1
5. Paper Set Decal.....	1

1.4.2 INSTALLATION PROCEDURE

Removing Tape

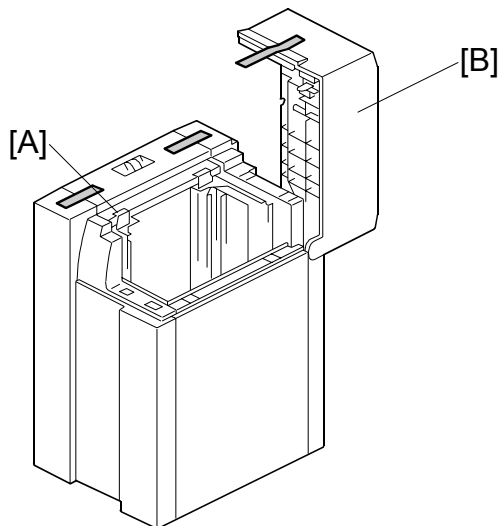

B473I001.WMF

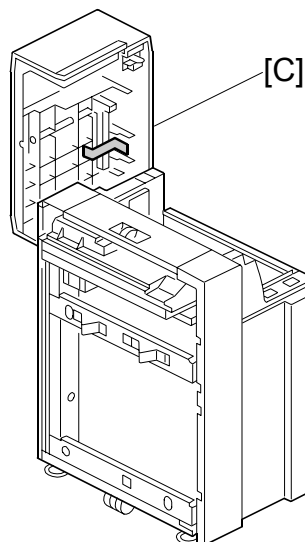

B473I002.WMF


1. Remove the filament tape from the body [A] and top cover [B] of the LCT.
2. Remove the tape under the lid [C] of the LCT.

Preparing the Main Machine

⚠ CAUTION

Switch the machine off and unplug the machine before starting the following procedure.


1. Remove the LCT installation cover [A] from the right side of the machine. (⚙ x 2).
2. Save the screw on the left [B]. You will need it to install the LCT.
3. Remove the LCT connector cover [C] (x 1) and the covers over the holes for the docking pins [D]. (x 3)

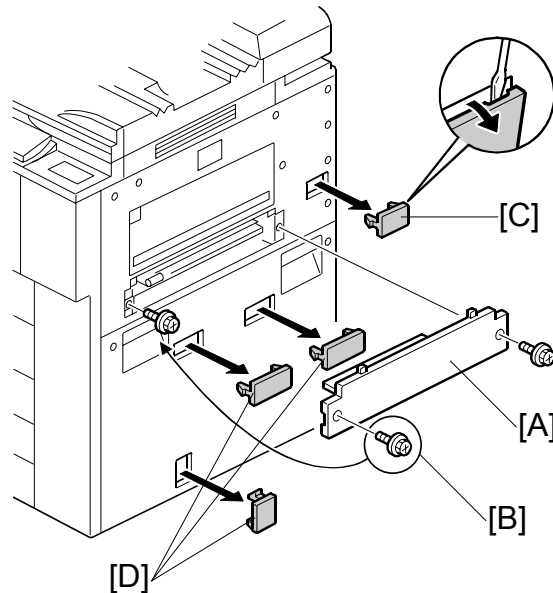


B473I003.WMF

Installing the LCT

1. Insert the two upper docking pins (grooved) [A] into the upper slots and the lower docking pin [B] into the lower slot.

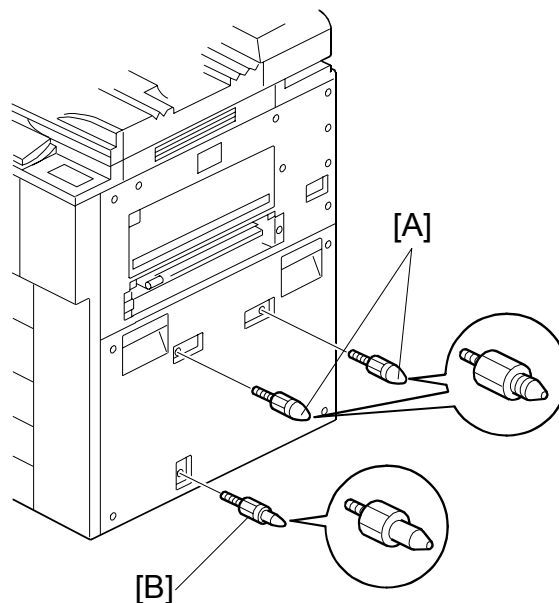


B473I004.WMF

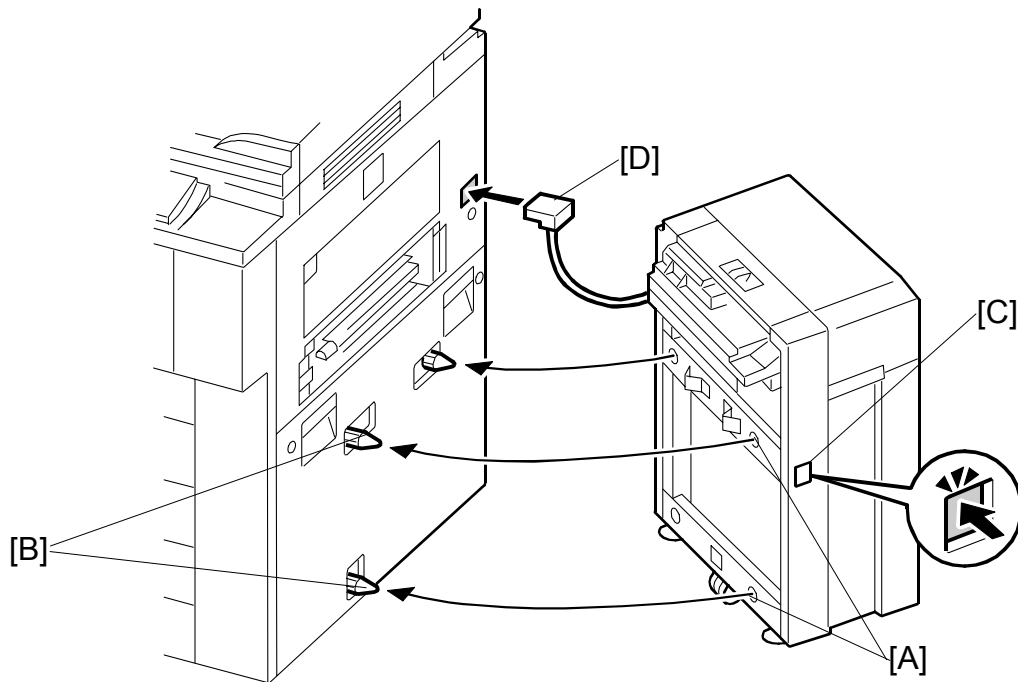

B473I005.WMF

2. Align the holes on the side of the LCT [A] with the docking pins on the side of the machine [B], then slowly push the LCT onto the pins.
NOTE: The release button [C] is used to unlock the LCT so it can be disconnected from the machine.
3. Connect the plug [D] of the LCT power cord to the side of the machine.

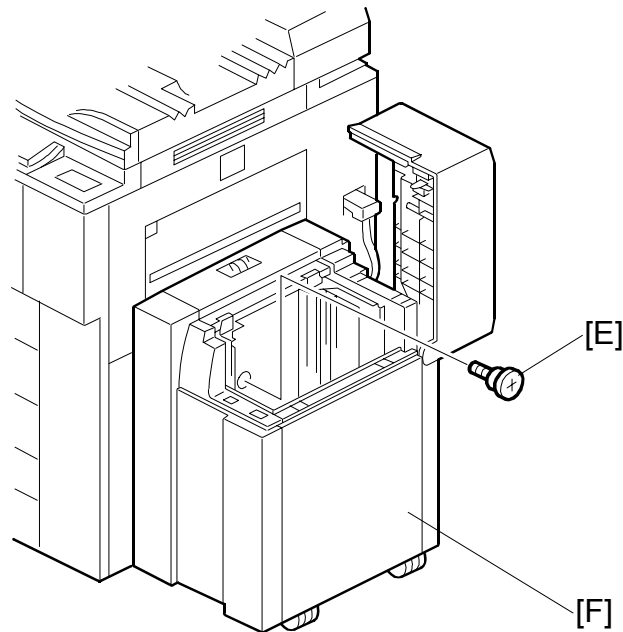

B473I006.WMF


4. Insert the flat-head shoulder screw [E] into the hole and fasten it to lock the release lever in place.
For easier access to the hole for the screw [E], you can remove the right panel [F] (⚙ x 2).
5. Switch the machine on and execute SP5959 005 (Paper Size – Tray 4 (LCT)) to select the paper size. For details, see SP5959 in section “5. Service Tables.”

1.5 LG/B4 FEEDER KIT (B474)

1.5.1 ACCESSORY CHECK

Check the accessories and their quantities against this list:

Description	Q'ty
1. Cover	1
2. B4/LG frame.....	1
3. Bottom plate extension	1
4. Rear bracket	1
5. Front bracket.....	1
6. Harness clamp	1
7. Tapping hex screws - M4 x 8	6
8. Tapping screws - M4 x 8	4

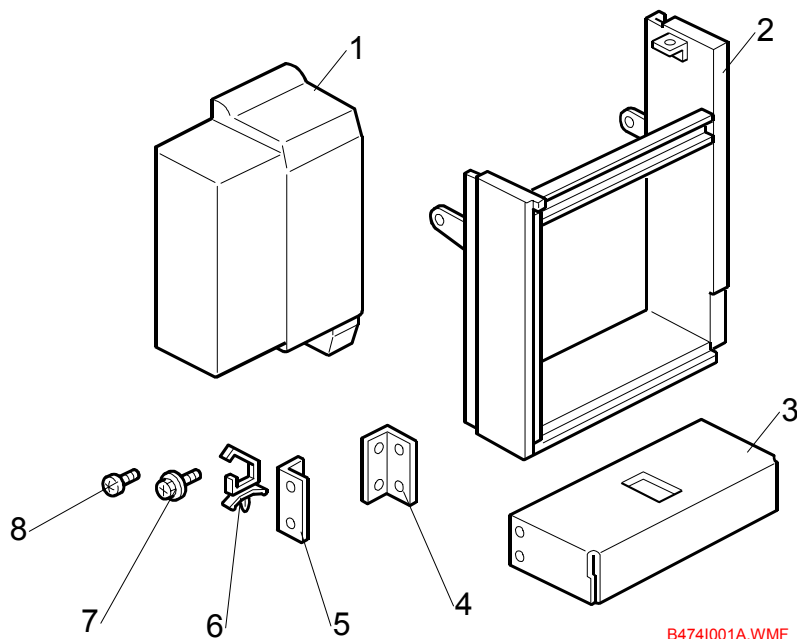


B474I001A.WMF

1.5.2 INSTALLATION PROCEDURE

If the LCT is connected to the machine

1. Open the cover and remove the paper.
2. Lower the LCT tray. Cover the near end sensor [A], then press the tray down button [B] to lower the tray bottom plate.

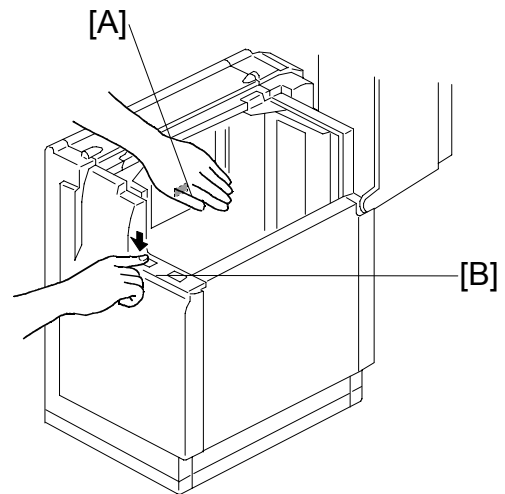


B474I507.WMF

⚠ CAUTION


Switch the machine off and unplug the machine before starting the following procedure.

3. Disconnect the LCT from the machine.
4. Remove the LCT upper cover [C].

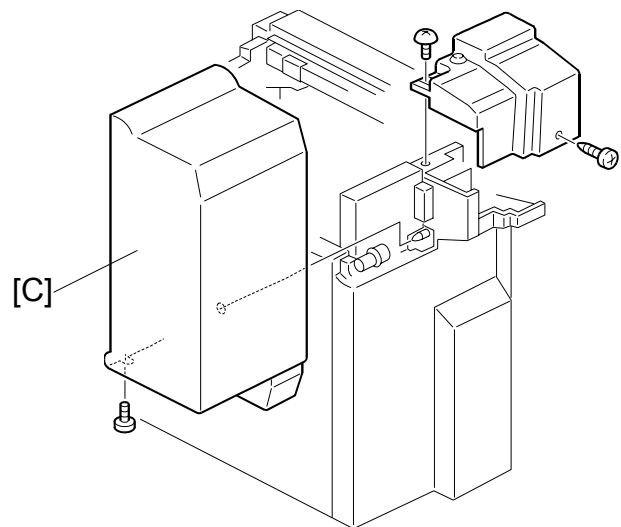


B474I504.WMF


5. Remove the LCT cover [A] (⚙ x 1).
6. Remove the right stay [B] at ❶ and re-attach it below at ❷ (⚙ x 2).
7. Remove the right cover [C] (⚙ x 2).

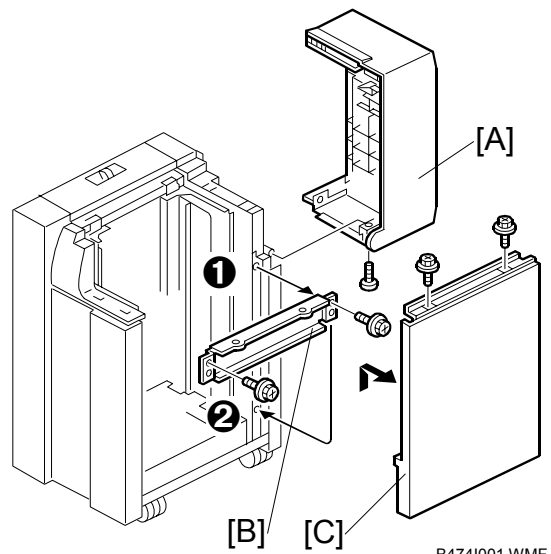

8. Attach the front bracket [D] with the beveled corner down (⚙ x 2).
NOTE: If the brackets are difficult to install, raise the bottom plate with your hand.
9. Attach the rear bracket [E] with the beveled corner down (⚙ x 2).
10. Attach the bottom plate extension [F] with the hex nuts (⚙ x 4).

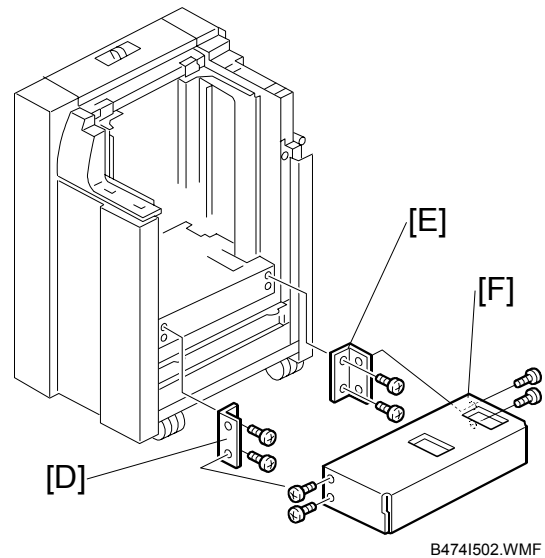


11. Align the positioning pin [G].
12. Attach the B4/LG frame [H] with the hex nuts (⚙ x 2).

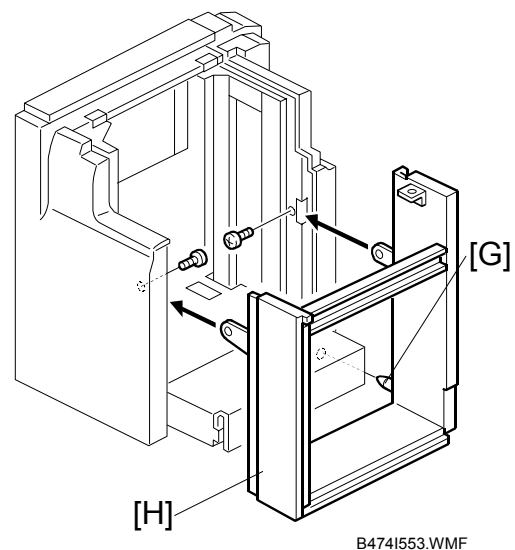


The kit is set for B4. If you need to change the paper size to LG, do the following steps.

13. Move the front side fence [A] to the LG position and fasten (⚙ x 1).
14. Move the rear side fence [B] to the LG position and fasten (⚙ x 1).

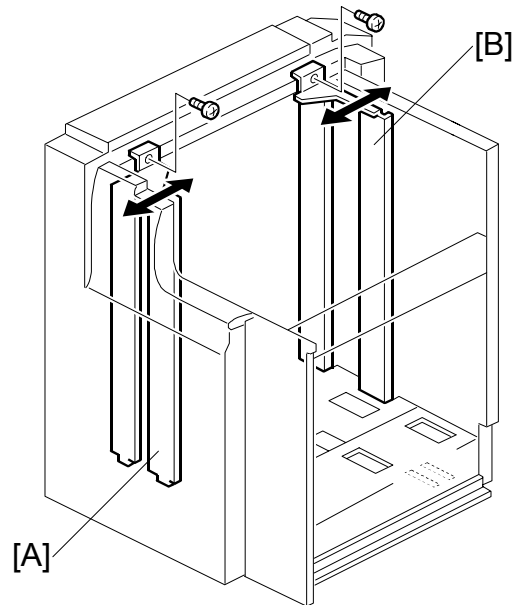


B474I555.WMF

15. Change the position of the lower limit sensor [C] (⚙ x 1).
16. Attach the harness (not shown) to the back of the plate and secure the sensor connector wire.

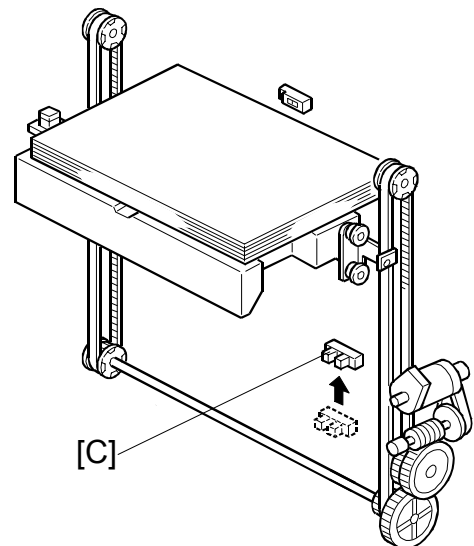

B474I508.WMF

17. Attach the LCT cover [D] provided with the kit (⚙ x 1).
18. Re-attach the right cover [E] (⚙ x 2).
19. Connect the LCT to the machine (☛ 1.4.2).
20. Switch the machine on, enter the SP mode, then use SP5959 005 (Paper Size – Tray 4 (LCT) to select the new paper size. For details, see SP5959 in section “5. Service Tables”.

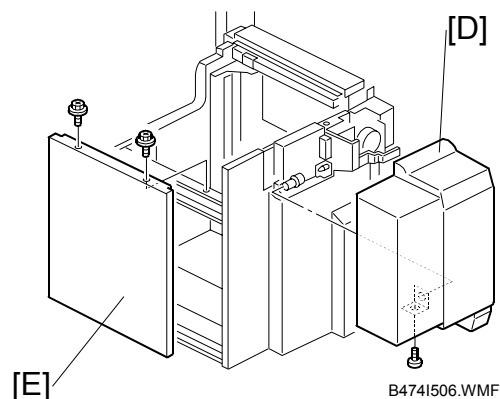

B474I506.WMF




1.6 3000-SHEET FINISHERS (B468/B469/B674)

1.6.1 ACCESSORY CHECK

Check the accessories and their quantities against this list:

Description	Q'ty
1. Tapping screws - M3 x 6	2
2. Tapping screws - M4 x 8	4
3. Tapping screws - M4 x 14	4
4. Ground (earth) plate	1
5. Rear joint bracket	1
6. Front joint bracket	1
7. Upper output tray	1
8. Installation Instructions	1
9. Lower output tray	1
10. Cushion (with double-sided tape)	1

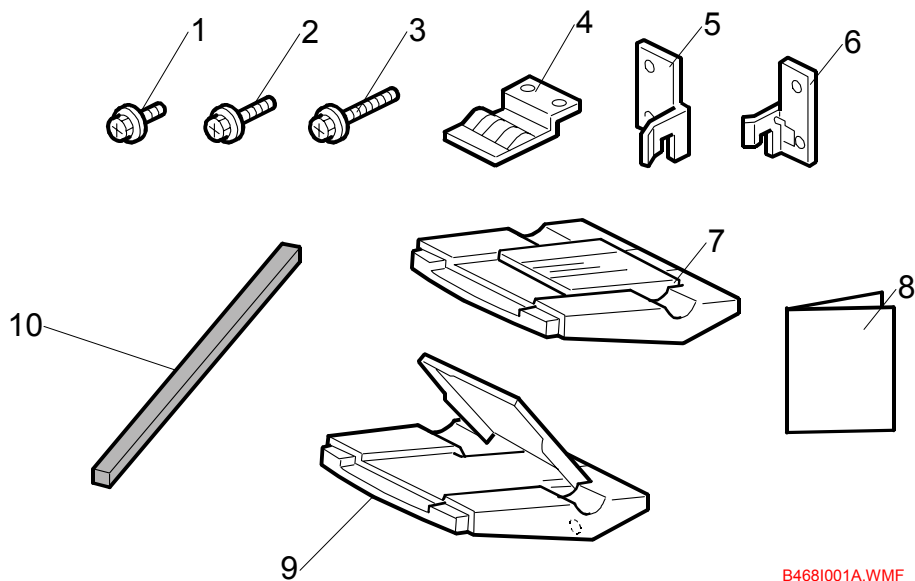

B468I001A.WMF

1.6.2 INSTALLATION PROCEDURE

This section describes the common installation instructions for these finishers:


- **B468 Booklet Finisher.** Does punching, shifting, corner stapling, and booklet (saddle-stitch) stapling. *This booklet finisher can be installed and used only with the B064 Series. This finisher cannot be used with a B140 Series or B246 Series machine.*
- **B469 Finisher.** Does punching, shifting, and corner stapling. Does not do booklet (saddle-stitch) stapling. *This finisher can be installed and used only with the B064 Series or B140 Series. This finisher cannot be used with a B246 Series machine.*
- **B674 Booklet Finisher.** Does punching, shifting, stapling, and booklet (saddle-stitch) stapling. *The booklet finisher can be installed and used only with the B140 Series. This finisher cannot be used with a B064 Series or B246 Series machine.*

Important! Differences in installation procedures are denoted “**B468**”, “**B469**” or “**B674**”.

Removing Tapes and Retainers


B468 (B064 Series)

B674 (B140 Series)

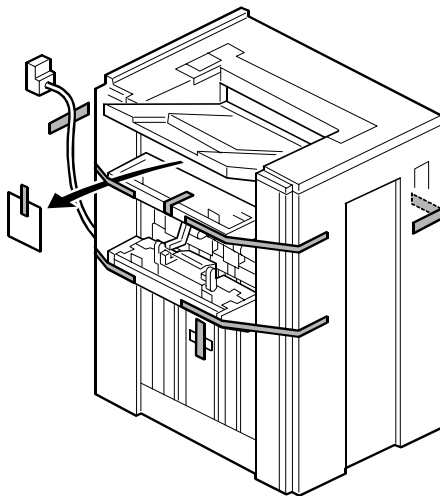


B468I001.WMF

B469 (B064 Series/B140 Series)

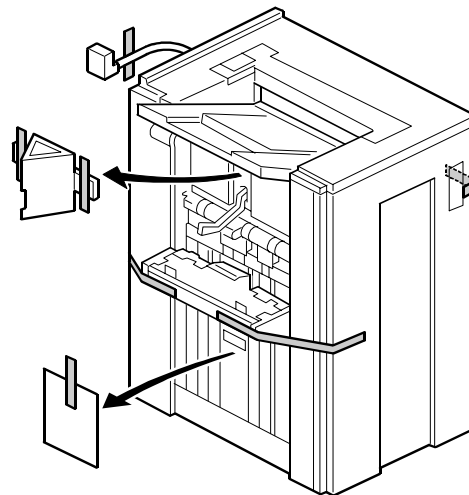

B469I001.WMF

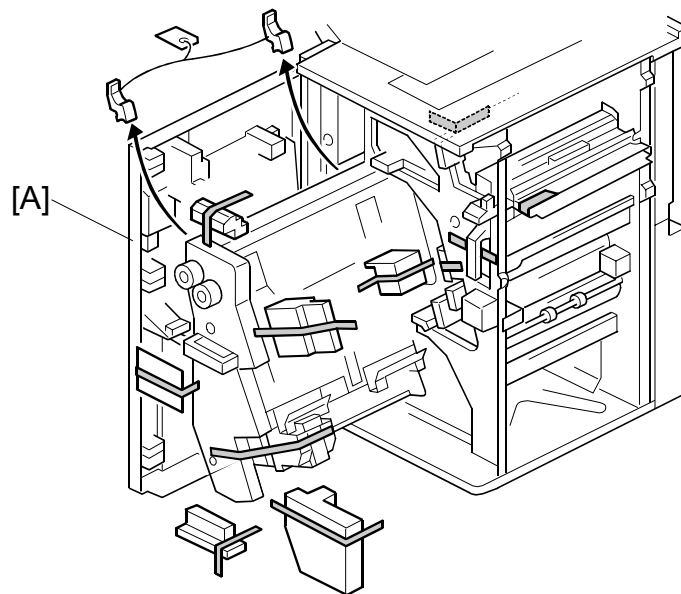


B468I002.WMF


1. Unpack the machine and remove all the wrapping.
2. Remove all filament tape and shipping retainers from the front of the finisher.
3. Open the front door [A] and remove all the tape and shipping retainers from inside the finisher.

Installation**⚠ CAUTION**

Switch the machine off and unplug the machine before starting the following procedure.

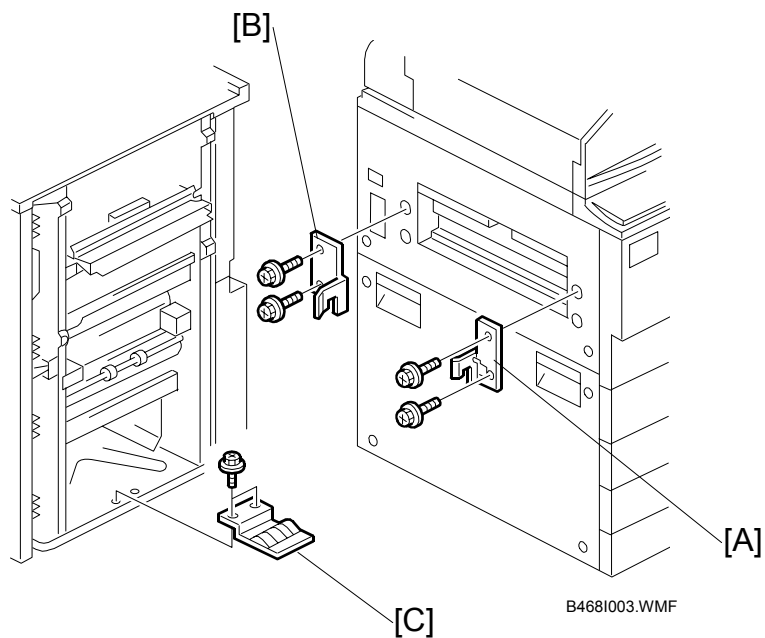

1. Install the front [A] and rear [B] joint brackets (⚙ x 2 each, M4x 14).
2. Install the ground plate [C] (⚙ x 2, M3 x 6).

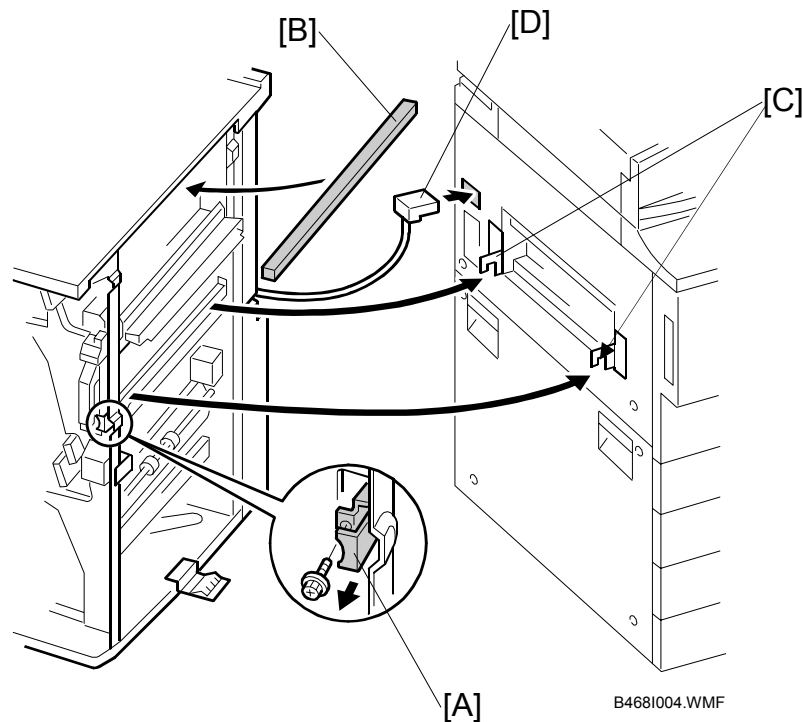


B468I004.WMF

3. Remove the screw of the lock lever [A] and pull the lever out. Keep the screw.
4. Peel the cover tape from the sponge cushion [B], then install it in the upper slot.
NOTE: If you will also install the cover interposer tray, do not attach the cushion here. Attach it to the cover interposer tray. The cover interposer tray must be installed on the finisher before you attach the finisher and tray to the main machine.
5. Align the brackets [C] with the slots in the finisher.
6. To avoid bending the entrance guide plates of the finisher, slowly push the finisher against the side of the machine until the brackets enter the slots.
7. Fasten the lock lever [A] (⌀ x 1) with the screw removed in Step 3. This locks the finisher against the side of the mainframe.
8. Connect the plug [D] of the finisher power cord to the connector on the machine.

⚠ CAUTION

Always move the finisher slowly to avoid bending the entrance guide plates. Bent guide plates could interfere with paper transport from the machine to the finisher.

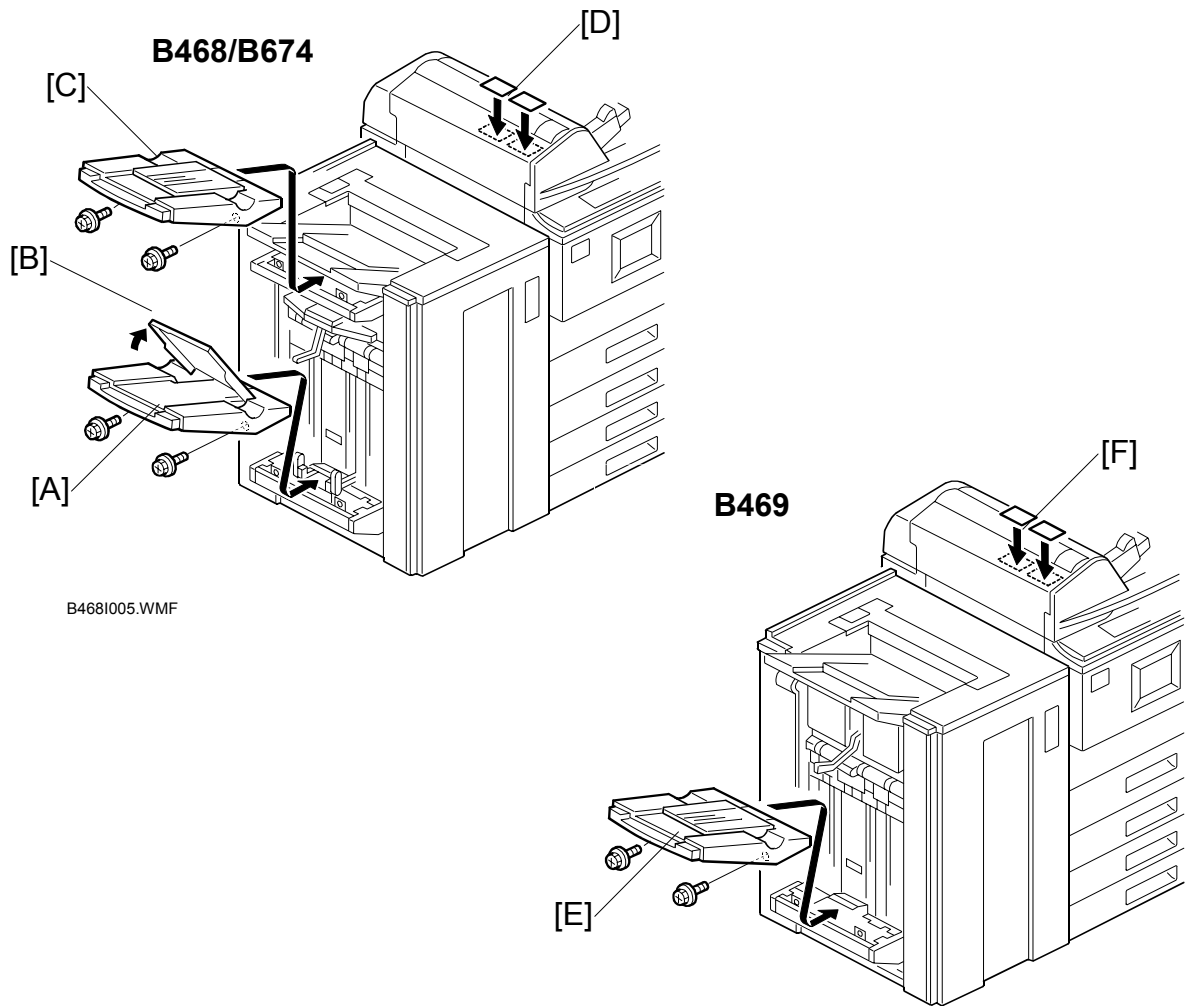

B468I005.WMF

B469I005.WMF

B468 (B064 Series)**B674 (B140 Series)**

1. Install the lower output tray [A] (⌀ x 2).
NOTE: Only the lower output tray has a movable support tray [B].
2. Install the upper output tray [C] (⌀ x 2).
3. Attach the staple position decal [D] to the ADF.

B469 (B064 Series/B140 Series)

1. Install the output tray [E] (⌀ x 2).
2. Attach the staple position decal [F].

Selecting the Staple Supply Name

Enter the SP mode and execute the following information.

5841*	Supply Name Setting		These names appear when the user presses the Inquiry button on the initial User Tools screen.
	011	Staple Std	Enter the name of the staples in use for normal stapling (not booklet stapling). This setting should be done for the B468, B469, and B674.
	021	Staple Bind	Enter the name of the staples in use for booklet stapling (saddle-stitching). This setting is required only for the B468 and B674

Enabling Booklet Binding

To enable booklet binding, you must select the 'center stapling' position.

1. Press the User Tools key.
2. Touch "Copier/Document Server Features".
3. Touch the "Input/Output" tab, then access "Select Stapling Position".
4. Touch any "Stapling Position" button and touch the center stapling symbol.
5. Exit the User Tools mode. Specify the number of copies, touch the center stapling symbol on the operation panel, then start the print job.

These SP adjustments are available but not required at installation.

SP6902	Fold Position Adjustment	Use this SP to fine adjust the fold and staple positions if they are not aligned correctly. See "5. Service Tables".
SP6120	Staple Jogger Adjustment	Allows fine adjustment of the staple unit jogger fences for different paper sizes, if required. See "5. Service Tables".


1.7 PUNCH UNIT (B377)

The Punch Unit B377 can be installed only in the 3000-Sheet Finishers B468/B469/B674.

1.7.1 ACCESSORY CHECK

Check the accessories and their quantities against this list:

Description	Q'ty
1. Punch unit.....	1
2. Sensor arm	1
3. Step screw	1
4. Spring	1
5. Tapping screw - M3x 10.....	2
6. Tapping screw - M3 x 8.....	1
7. Spacer (2 mm)	1
8. Spacer (1 mm)	1
9. Hopper	1

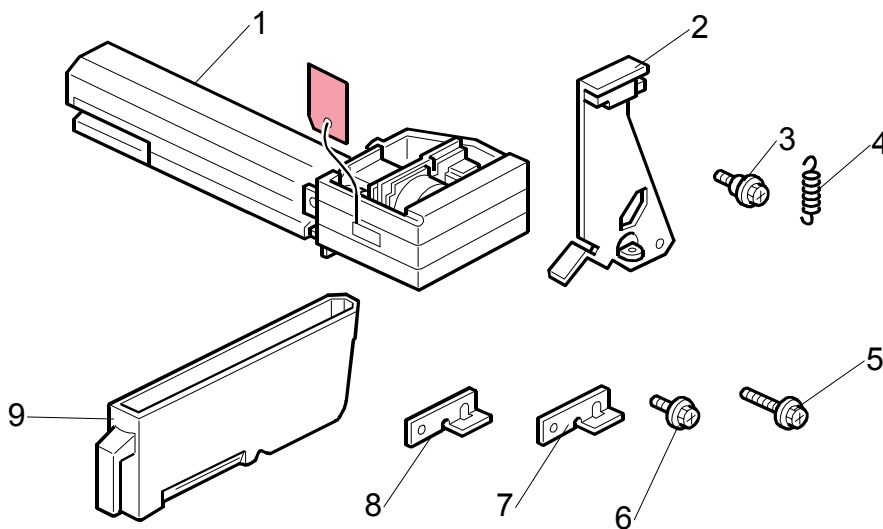

B377I001A.WMF


1.7.2 INSTALLATION PROCEDURE

⚠ CAUTION

Switch off the main machine and unplug its power cord.


Installation

1. If the finisher is connected to the machine, disconnect it.
2. Unpack the punch unit and remove all tapes and shipping retainers.
3. Open the front door and remove the rear cover [A] (⚙ x 4).

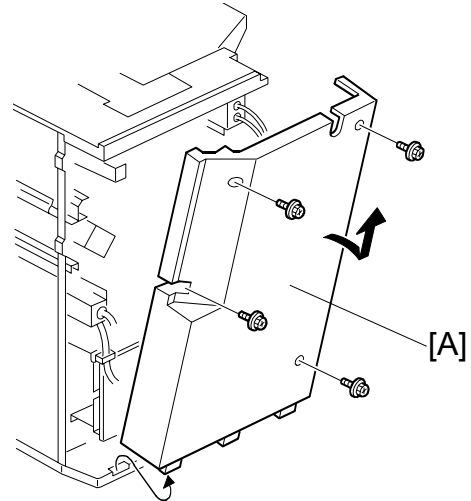


B377I201.WMF

4. Remove the bracket [B] (⚙ x 2) and paper guide [C] (⚙ x 1).

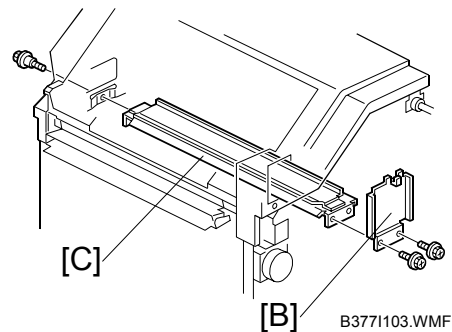


B377I103.WMF

5. Remove the plastic knockout [D].
6. Install the sensor arm [E] (⚙ x 1).
7. Install the spring [F].

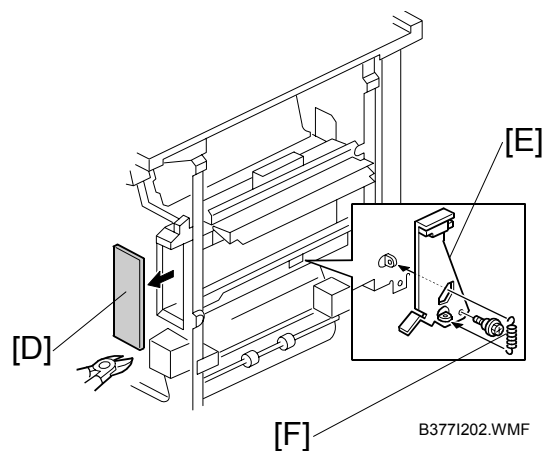


B377I202.WMF

1. Remove the shipping bracket [A] (⌀ x 2).
2. Position the 2 mm spacer [B] and secure the punch unit (⌀ x 2).
3. Secure the punch unit at the front with the shoulder screw [C] (⌀ x 1).

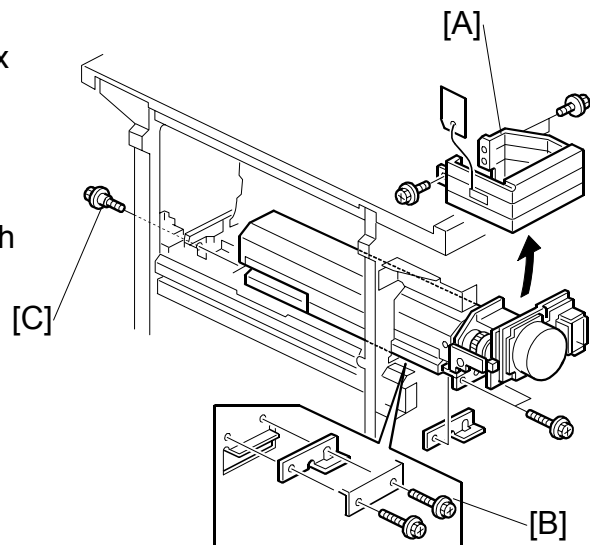


B377I203.WMF

4. Connect the harnesses [D] and clamp them as shown.
- NOTE:** No special DIP switch settings are required for this punch unit. The punch unit sends an identification signal to the machine, so it knows what type of punch unit has been installed.

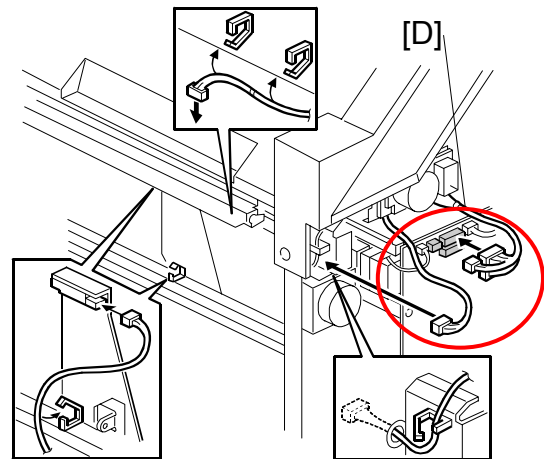

B377I105.WMF

5. Slide the hopper [E] into the machine.
 6. Fasten the two 1 mm spacers [F] to the rear frame. These may be used during future adjustments.
- NOTE:** The spacers are used to adjust the horizontal positioning of the holes.
7. Reassemble the finisher and check the punch operation.

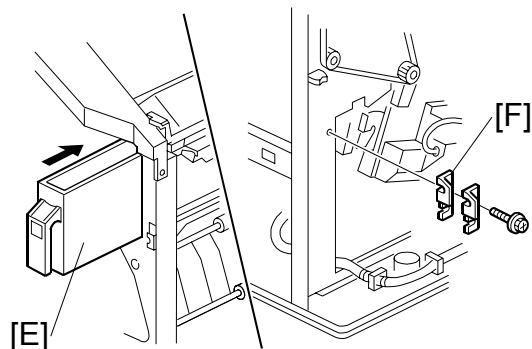


B377I106.WMF

1.8 COVER INTERPOSER TRAY (B470)

1.8.1 ACCESSORY CHECK

Check the accessories and their quantities against this list:

Description	Q'ty
1. Front door extension (Top)	1
2. Rear cover extension (bottom).....	1
3. Shoulder screws	3
4. Tapping screws – M4 x 8	7
5. Tapping screws – M3 x 6	2
6. Tapping screws – M3 x 6	5
7. Ground Plate.....	1
8. Plate extension (bottom).....	1
9. Right rear cover plate (for B478/B706 only).....	2
10. Right front corner plate (for B478/B706 only).....	2
11. Spacer (B468/B469/B674 only)	1
12. Front door extension (bottom).....	1

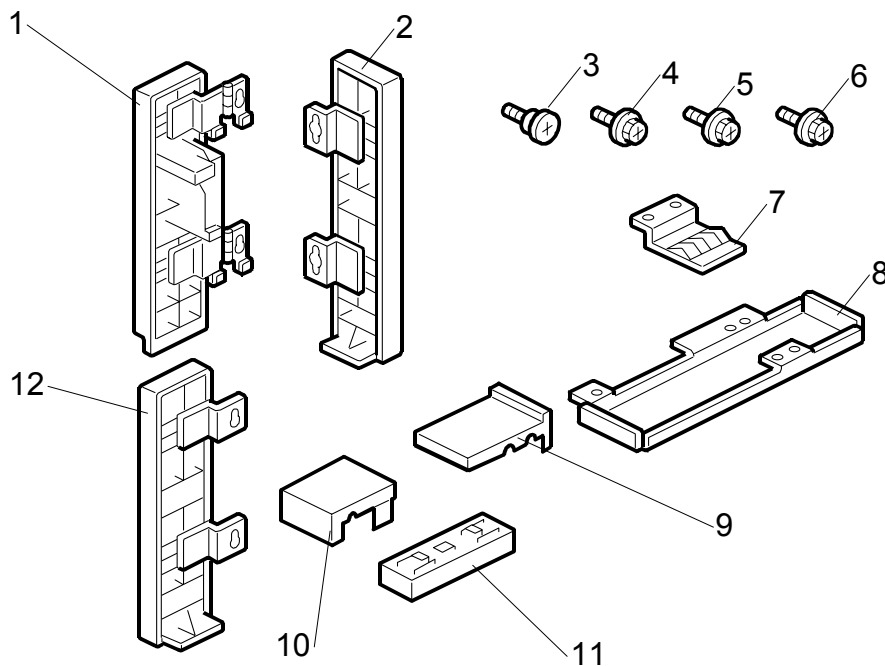

B470I006.WMF

1.8.2 INSTALLATION PROCEDURE

This procedure shows you how to install the Cover Interposer Tray B470 on the:


- 3000-sheet Finisher (Booklet Finisher) B468/B674
- 3000-sheet Finisher B469
- 3000-sheet Finisher B478/B706.

Important! The Cover Interposer Tray B470 can be installed and used only on the B064 Series or B140 Series machines.

NOTE


- The B468/B469/B674 require installation of only the front spacer.
- The B478/B706 require installation of corner plates.

Removing Tapes and Retainers

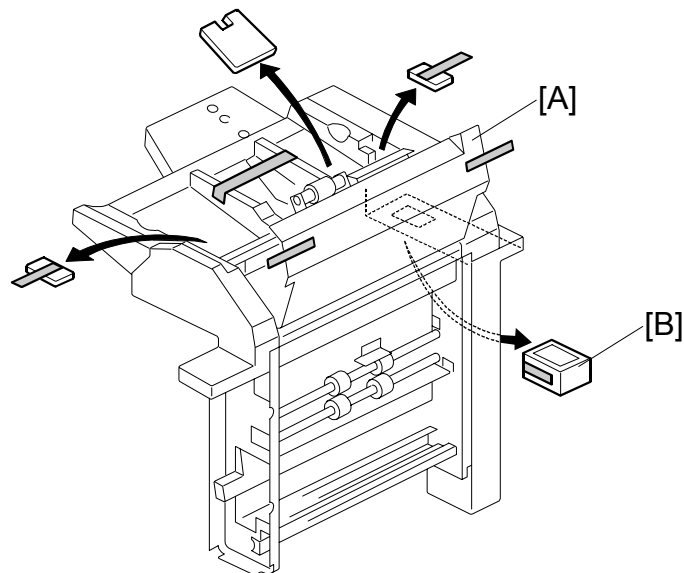


B470I001.WMF

1. If the finisher is connected to the machine, disconnect it.
2. Remove all tape and retainers from the cover interposer tray [A].

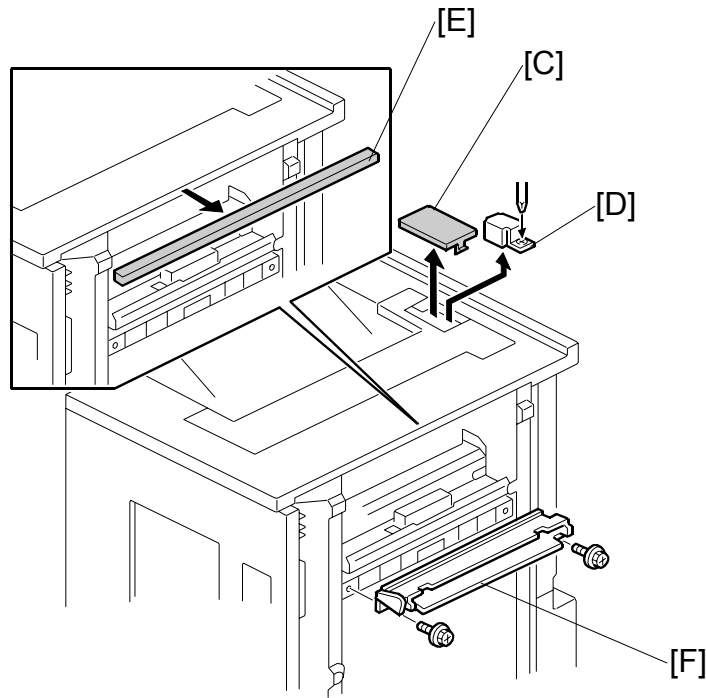

B470I007.WMF

3. Remove the tape and cardboard [B] from the ground connector.
4. Remove the cover [C] of the relay connector.
5. Loosen the screw of the bracket [D] (⌀ x 1) then remove the bracket.
NOTE: If you will install the cover interposer tray with a finisher that was installed on the machine before this time (B468/ B469/ B478/ B674/ B706), remove the sponge strip [E] from the finisher. Keep it until you attach it again to the interposer tray.
6. Remove the guide plate [F].

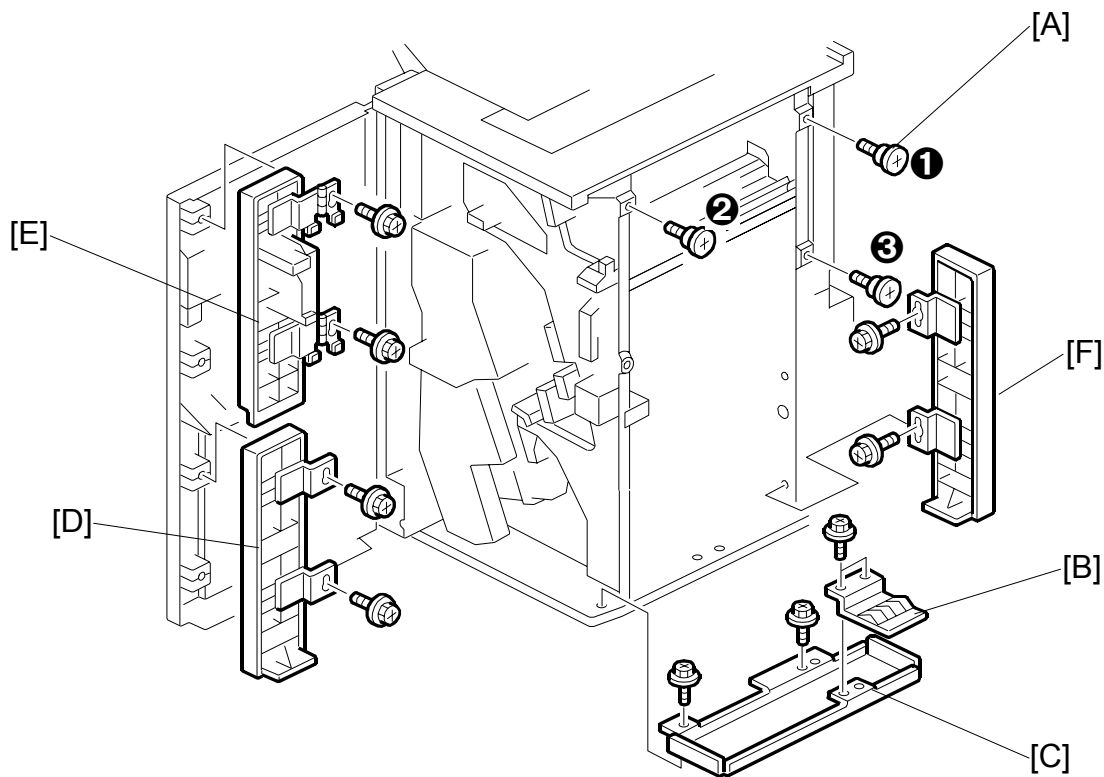
Attaching the Extensions

B470I003.WMF

⚠ CAUTION

Make sure that the finisher is disconnected from the main machine and that the copier is turned off and disconnected from the power outlet before you start the following procedure.

1. Attach the three shoulder screws [A] ①, ②, ③ (⌀ x 3).
2. Remove the ground plate [B] from the finisher, and keep the screws
3. Attach the bottom plate [C] (⌀ x 2, M3 x 6). Then attach the ground plate [B] to the bottom plate (⌀ x 2) with the screws that you removed in step 2.
4. Attach the bottom front door extension [D] (⌀ x 2, M4 x 8).
5. Attach the top front cover extension [E] (⌀ x 2, M4 x 8).
6. Attach the rear cover extension [F] (⌀ x 2, M3 x 6).

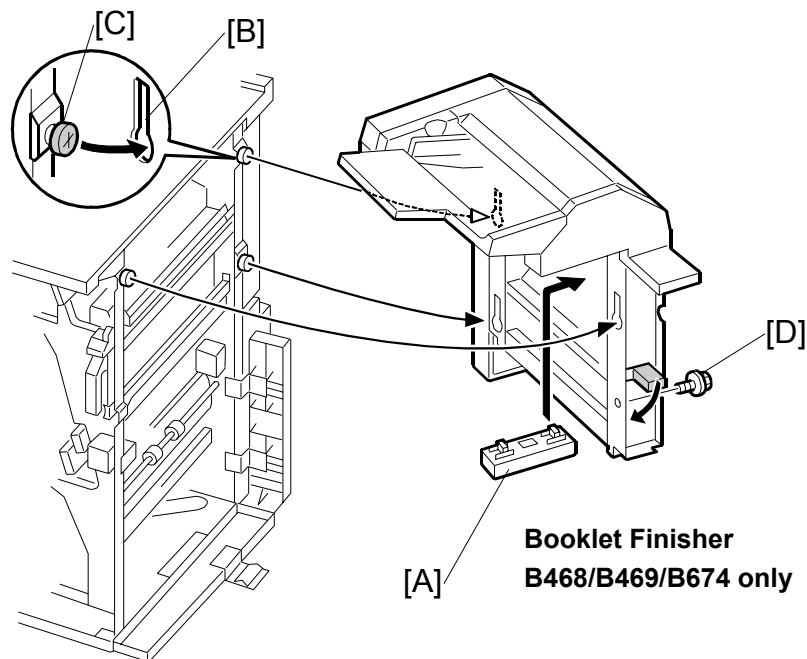Attaching the Interposer Tray

B470I004.WMF


1. If you install the cover interposer tray on the B468/B469/B674 finisher, install the spacer [A]. You will hear a click when it is installed correctly.
NOTE: If you install the cover interposer tray on the B478/B706, do not install this spacer. This spacer is for the B468/B469/B674 installation only.
2. Lift the cover interposer tray, and align the keyholes [B] with the shoulder screws [C]. Then move the cover interposer down onto the screws.
3. Attach the cover interposer with the screw [D] (⌀ x 1, M3 x 6).

Important

- If you are installing the cover interposer tray on the B468/B469/B674, skip the next section and go directly to “Attaching the Finisher to the Machine” on page 1-52.
- If you are installing the cover interposer tray on the B478/B706, go to the next section, install the corner plates on the B478/B706, then go to “Attaching the Finisher to the Machine” on page 1-52.


Attaching the Corner Plates for the B478/B706

The corner plates are installed on the B478/B706 only. Attach the cover interposer tray to the finisher before you attach the corner plates.

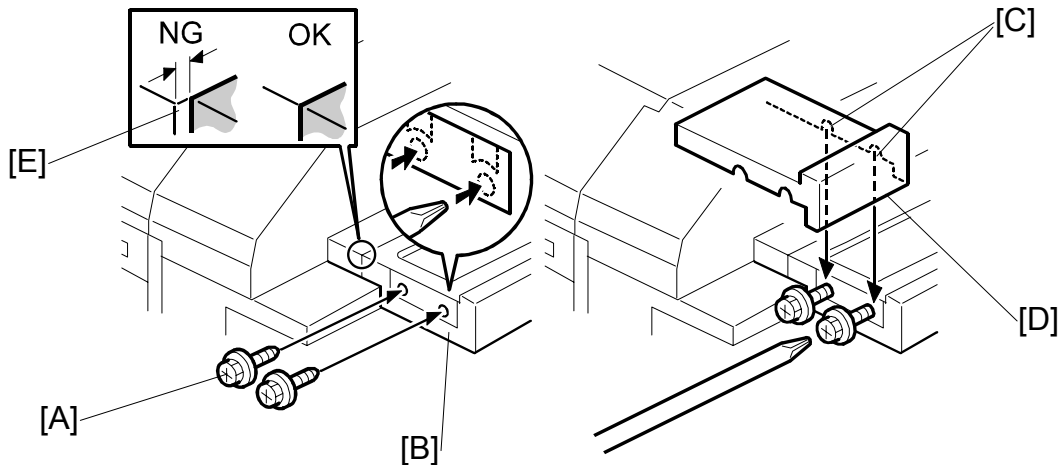
Right Rear Corner Plate (B478/B706 only)

B470I009.WMF

1. Temporarily set the screws [A] (with approximately two turns) at the right end of the finisher extension table [B] (⌀ x 2, tapping M4 x 8)
NOTE: You cannot see the holes, because there is tape on them. Punch the screws through the holes.
2. Align the notches [C] in the right rear corner plate [D] with the screws, and attach the plate.
3. If there is a gap [E] between the plate and the tray extension attached to the side of the finisher:
 - Loosen the two screws below the table extension (not shown)
 - Align the table extension with the corner of the finisher and the plate
 - Tighten the tray extension screws.
4. With a long screw driver inserted through the notches in the right rear corner plate [D], tighten the screws. This attaches the right rear corner plate to the table extension [B].

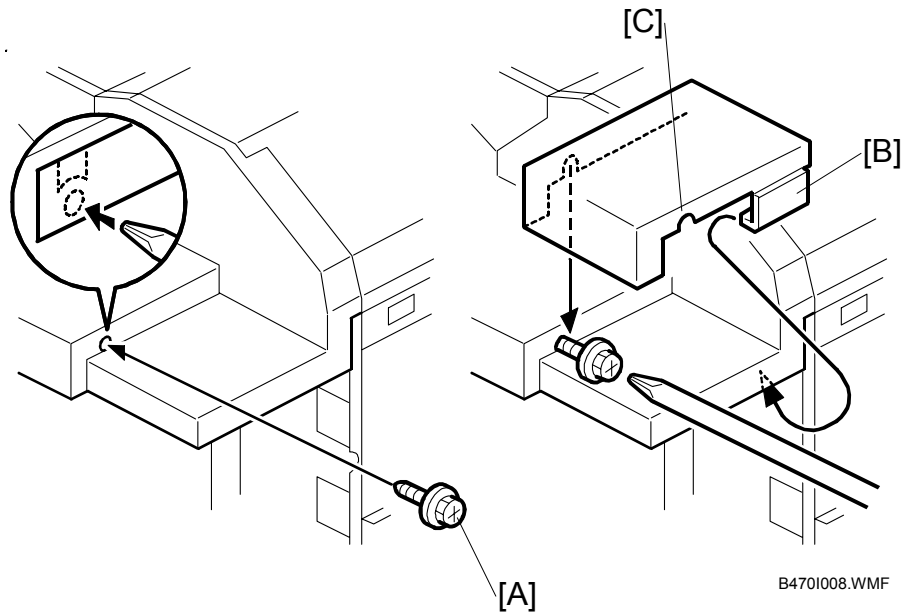Right Front Corner Plate (B478/B706 only)

1. Temporarily set the screw [A] (M4 x 8) (with approximately two turns) to attach the panel at the right front corner.
NOTE: You cannot see the hole, because there is tape on it. Punch the screw through the hole.
2. Align the notch in the right front corner plate [B] with the screw and install it. You hear a click when it is put into its correct position.
3. Put a long screwdriver into the plate cutout [C]. Then, tighten the screw to attach the right front corner plate.

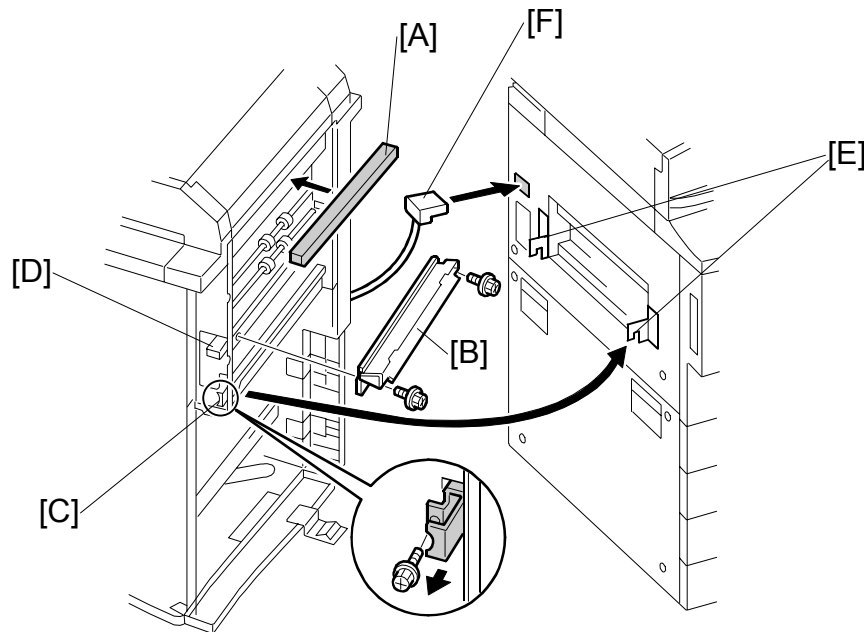Attaching the Finisher to the Machine

B470I005.WMF

1. Attach the sponge strip [A] (this is supplied with the finisher).
NOTE: If you will install the cover interposer tray with a finisher that was installed on the machine before this time, remove the strip from the finisher and attach it to the cover interposer tray.
2. Attach the guide plate [B] (removed from the finisher) to the cover interposer (⌘ x 2).
NOTE: Make sure to use the two small tapping screws supplied with the machine, and not the machine screws that you removed from the finisher with the guide plate.
3. Release the lock lever [C] (⌘ x 1).
4. Lower the transport guide plate [D].
5. Slowly push the finisher against the side of the machine until the brackets [E] go into the slots.
Important: Do the above step carefully. Do not bend the entrance guide plates. Bent guide plates could cause a blockage for paper transport between the finisher and copier.
6. Attach the lock lever [C] (⌘ x 1).
7. Lift the transport guide plate [D] to close it.
8. Connect the connector [F] into the copier.



9. Switch on the machine, and select the default paper size for the cover interposer.

Important: Be sure to execute the correct SP code for the machine. Please refer to the table below.


Machine	Correct SP Code
B064 series	SP5959-006
B140 series	SP5158-001 to 008

1.9 9-BIN MAILBOX (B471)

1.9.1 ACCESSORY CHECK

Check the accessories and their quantities against this list:


Description	Q'ty
1. Trays	9
2. Guide plate.....	1
3. Installation Instructions	1
4. Tapping screws - M3 x 8.....	6
5. Decals (bin display).....	1

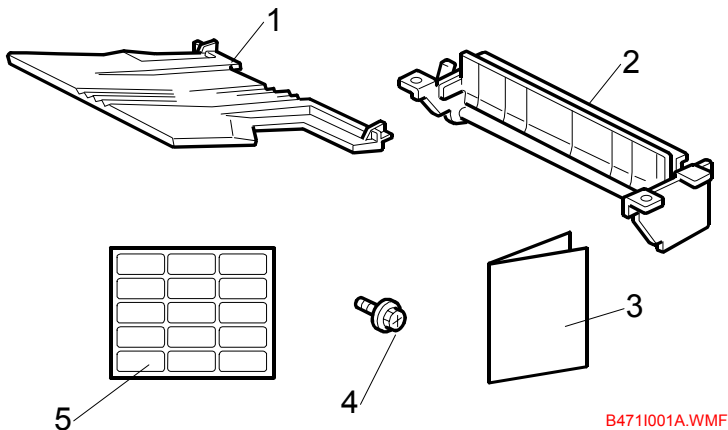

1.9.2 INSTALLATION PROCEDURE

Important! The 9-Bin Mailbox B471 can be installed and used only with a B064 Series or B140 Series machine. The B471 cannot be installed on a B246 series machine.

Removing Tapes and Retainers

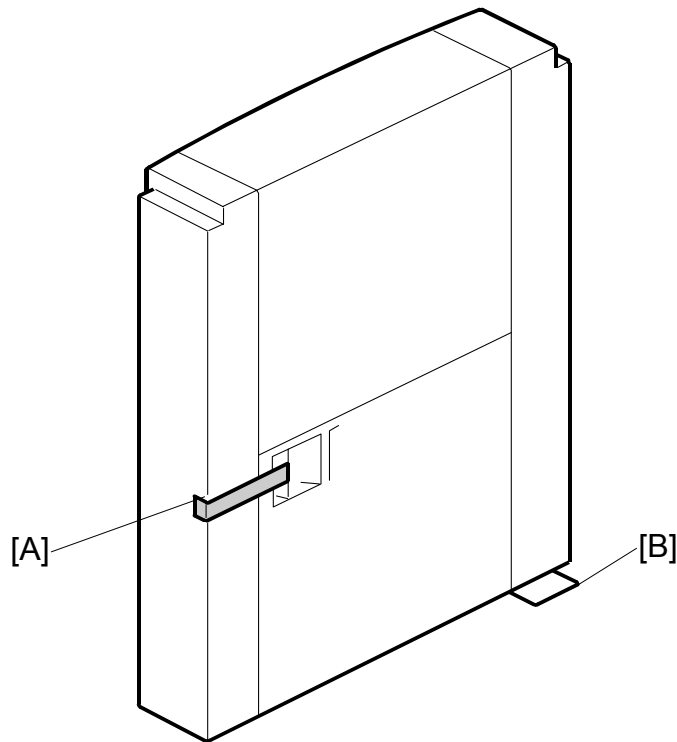

B471I001.WMF



1. Remove the filament tape [A].
NOTE: Handle the mailbox carefully. The corner leaf [B] can be damaged easily.


Installation

CAUTION


Switch the machine off and unplug the machine before starting the following procedure.


If the Cover Interposer Tray B470 is installed on the Finisher B468/B469/B674, remove it. The cover interposer tray and mailbox cannot be installed on the finisher at the same time.

1. Remove the top cover [A] of the finisher ( x 1).
2. Remove the bracket [B] ( x 1).
NOTE: Loosen the screw. Do not remove it.

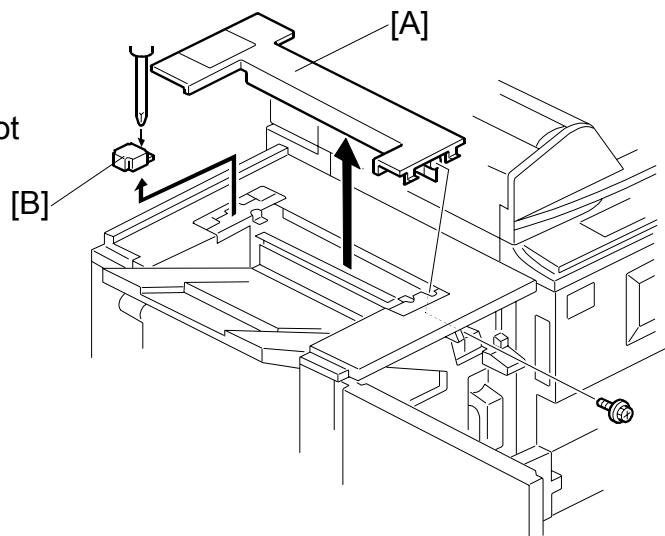


B4711002.WMF

3. Attach the guide plate [A] to the top of the finisher ( x 2, M3 x 8).

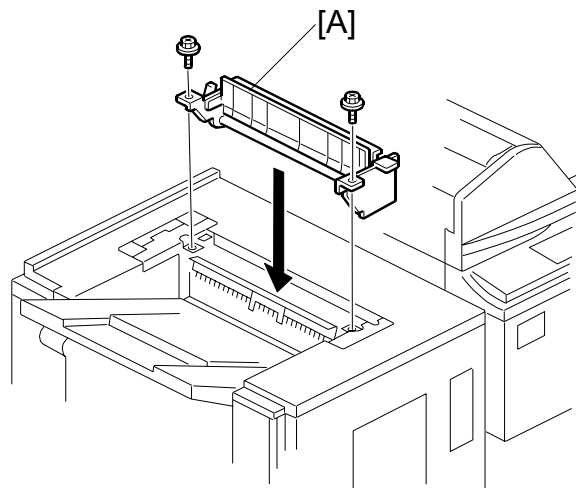

B4711003.WMF

4. Attach the mailbox [B] to the top of the finisher (⌀ x 4, M3 x 8).
5. Attach the 9 trays [C] to the mailbox.
6. Give the decals [D] to the customer for notation and pasting at the correct location.

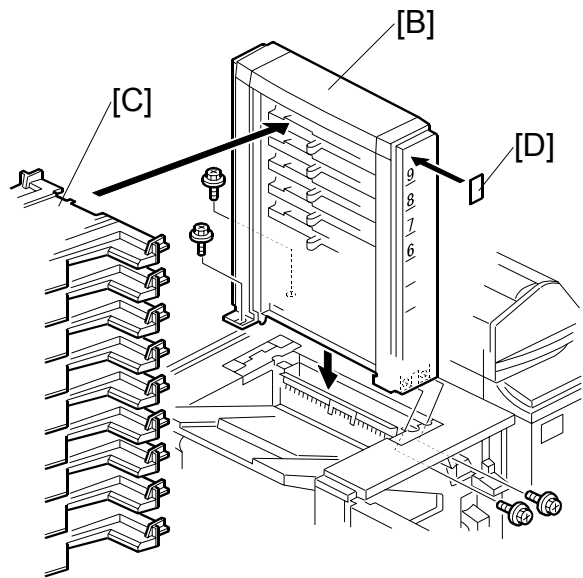

Installation

B4711004.WMF




1.10 3000 SHEET FINISHER (B478/B706)

1.10.1 ACCESSORY CHECK

Check the accessories and their quantities against this list:

Description	Q'ty
1. Cushion.....	1
2. Table Extension	1
3. Leveling Shoes	1
4. Rear Joint Bracket	1
5. Front Joint Bracket.....	1
6. Entrance Guide Plate.....	1
7. Grounding Plate	1
8. Auxiliary Tray Holder.....	2
9. Auxiliary Tray - Proof	2
10. Auxiliary Tray - Shift.....	2
11. Tapping Screws - M4 x 8	2
12. Tapping Screws - M3 x 6	4
13. Tapping Screws - M3 x 8	4
14. Phillips Screws w/washer - M4 x 14.....	4
15. Shift Tray.....	4

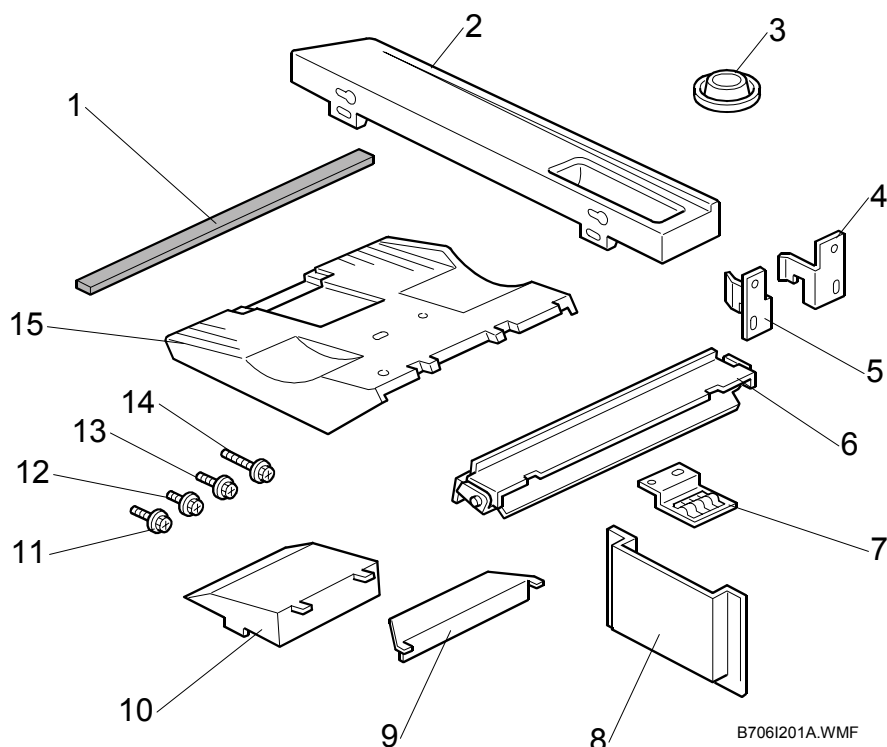


1.10.2 INSTALLATION

Important!

- The 3000-Sheet Finisher B478 can be installed and used only on a B064 Series machine..
- The 3000-Sheet Finisher B706 can be installed and used only on a B140 or B246 Series machine.


⚠ CAUTION

Unplug the machine power cord before starting the following procedure.

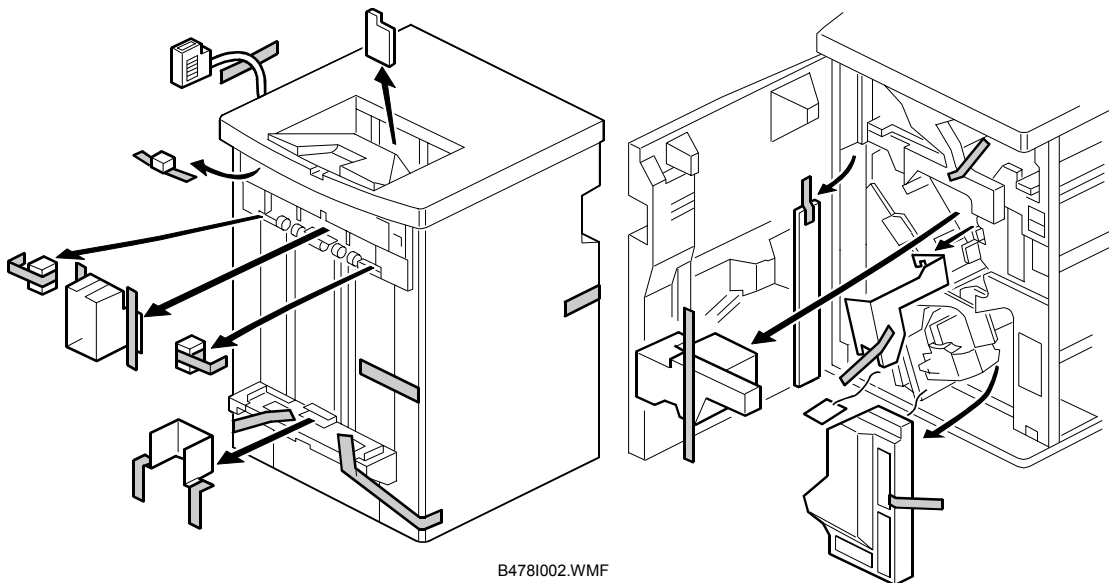


1. Unpack the finisher and remove all tapes and shipping retainers.

2. Open the front door and remove the shipping retainers. Remove brackets [A], [B], and [C] (⌀ x 2 each).

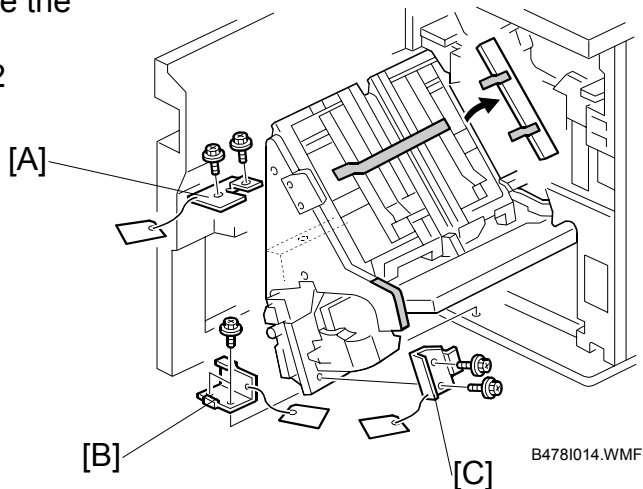


3. Install the front **rear** bracket [D] and **front** joint bracket [E] (⌀ x 2 each) (M4 x 14) on the left side of the copier.
4. Remove the connector cover [F].

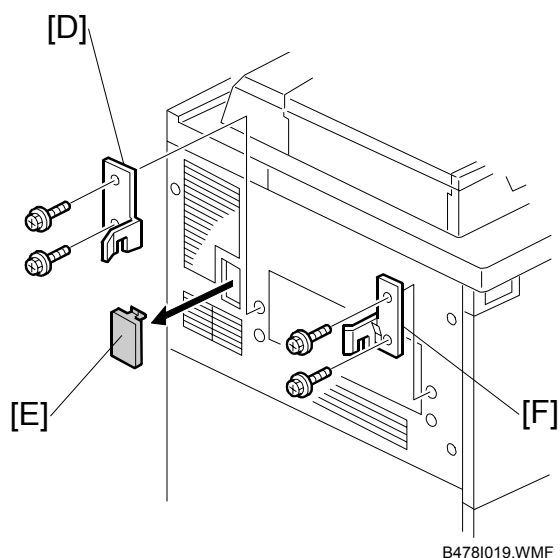

5. Install the grounding plate [A] (⌀ x 2) (M3 x 6).


NOTE: Set the grounding plate so that there is no gap between the grounding plate and the bottom frame of the finisher (as shown).

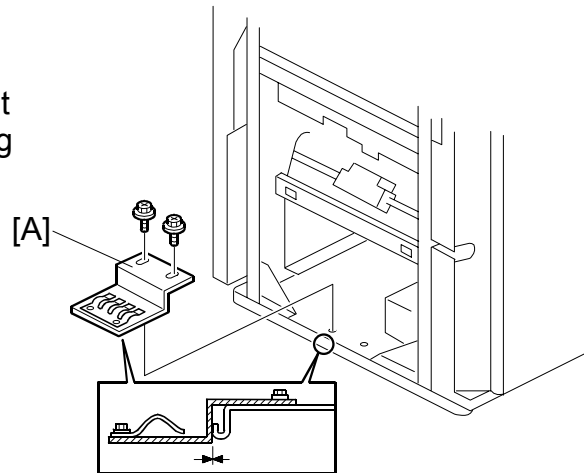

B478I004.WMF

6. Install the table extension [B] as shown (⌀ x 2) (M4 x 8).


NOTE: The edge of the table extension should be aligned with the edge of the finisher (as shown).

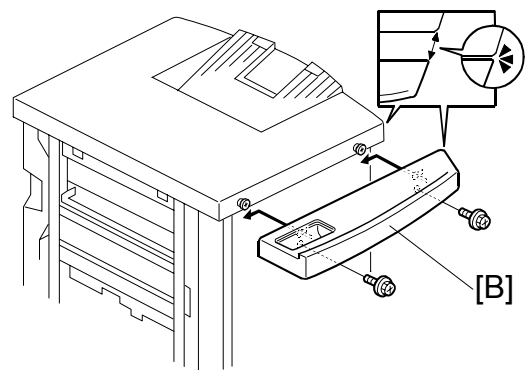

B478I005.WMF


7. Attach the cushion [C] to the right side of the upper cover.

NOTE: If you are installing the cover interposer tray, do not attach the cushion here. Attach it to the cover interposer tray. The cover interposer tray must be installed before you dock the finisher and tray with the main machine. For details, see the Cover Interposer Tray B470 installation instructions.

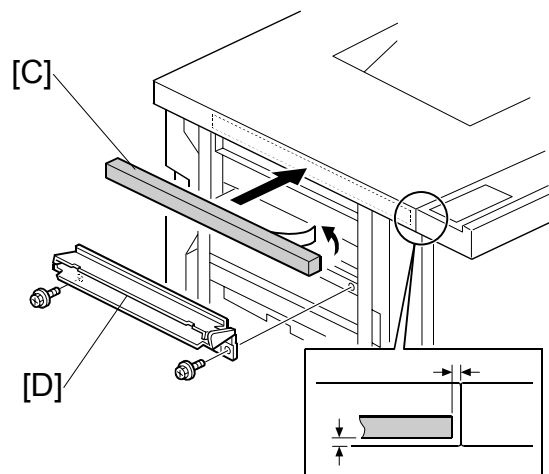

B478I107.WMF

8. Install the entrance guide plate [D] (⌀ x 2) (M3 x 6).

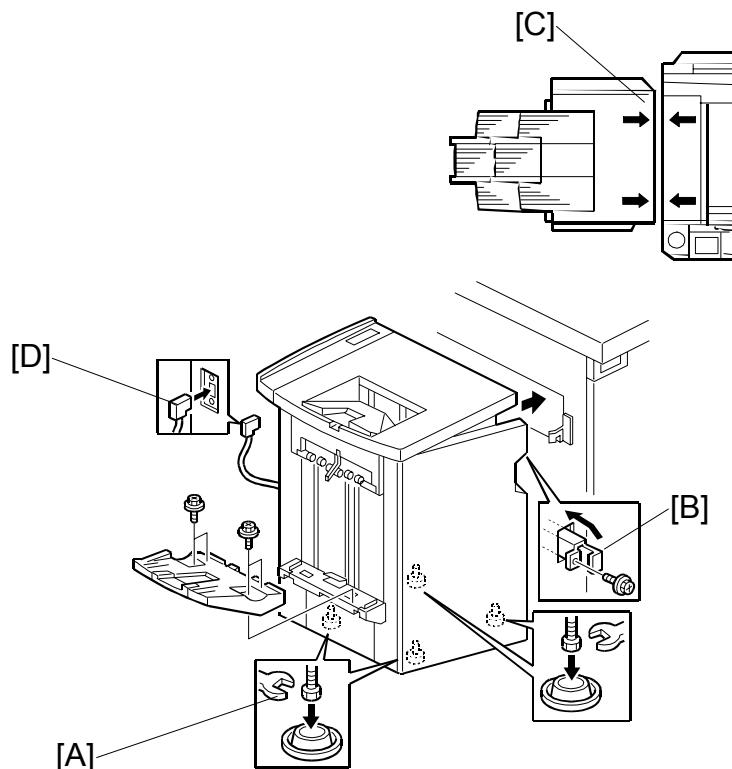

B478I006A.WMF

9. Attach the shift tray [A] (4) (M3 x 8).
10. Open the front door of the finisher, and remove the screw from the locking lever, then pull out the locking lever [B].
11. Align the finisher on the joint brackets, and lock it in place by pushing in the locking lever [B].
NOTE: Before securing the locking lever, make sure that the top edges of the finisher and the copier are parallel from front to rear as shown [C].
12. Secure the locking lever [B] (1) and close the front door.
13. Connect the finisher cable [D] to the copier.
14. Set the leveling shoes (x 4) under the feet and level the machine.


1.11 PUNCH UNIT (B531/B812)

The Punch Unit B531/A812 can be installed only in the 3000-Sheet Finisher B478/B706.


1.11.1 ACCESSORY CHECK

Check the accessories and their quantities against this list:

Description	Q'ty
1. Punch unit.....	1
2. Harness Connector Cable - PCB.....	1
3. Harness Connector Cable - HP Sensor 2.....	1
4. Harness Connector Cable - HP Sensor 1, Hopper Full.....	1
5. Sensor Arm and Sensor	1
6. Spacer (2 mm).....	1
7. Spacer (1 mm).....	2
8. Spring	1
9. Step Screw (large) (M4 x 11).....	1
10. Tapping Screw (M4 x 10).....	2
11. Step Screw (small) (M3 x 4).....	1
12. Machine Screw, Washer (M4 x 6).....	1
13. Knob	1
14. Punch Waste Hopper.....	1

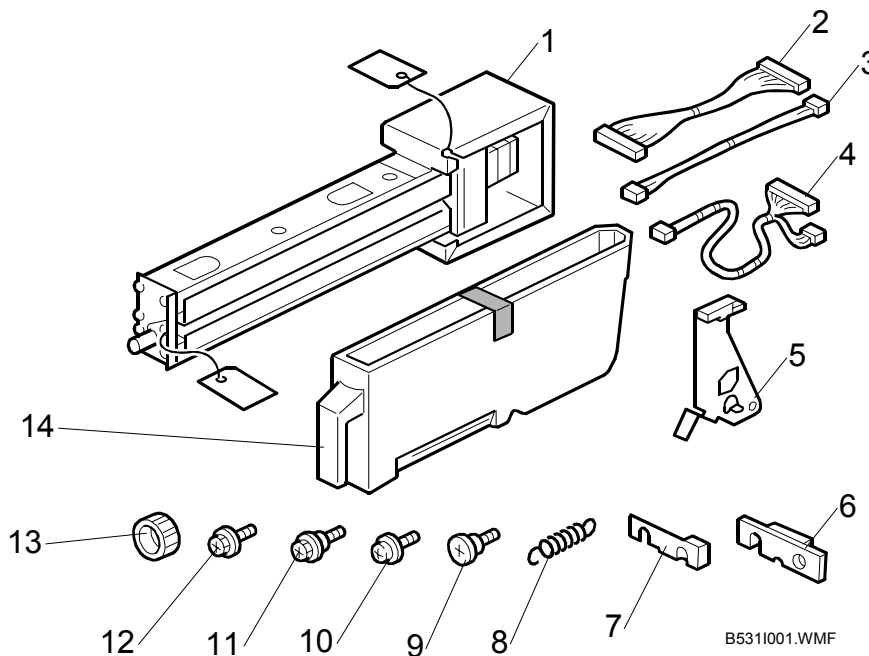



1.11.2 INSTALLATION

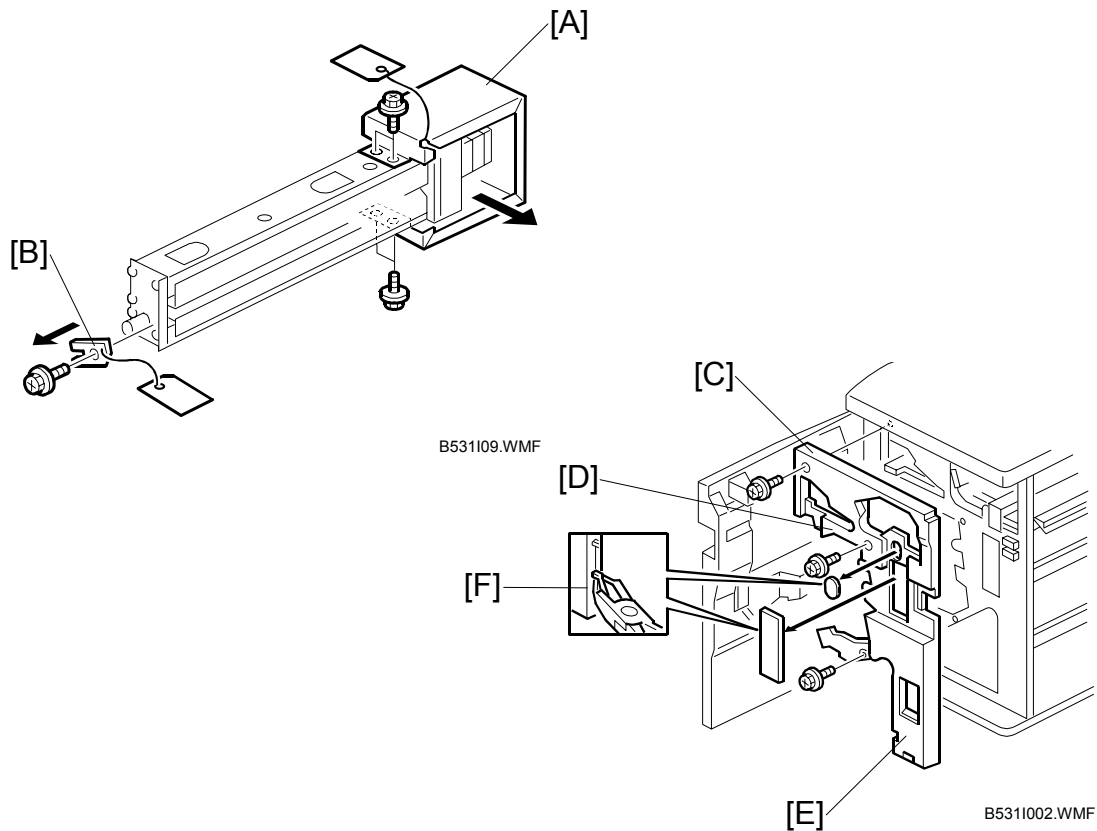


⚠ CAUTION

Switch the machine off and unplug the machine before starting the following procedure.

1. If the finisher is connected to the machine, disconnect it.
2. Open the front door and remove the rear cover (⚙ x 2).
3. Unpack the punch unit and remove the motor protector plate [A] (⚙ x 4) and the cam lock plate [B] (⚙ x 1).
4. Remove the inner cover [C] (⚙ x 3).
5. Behind the inner cover at [D] and [E], press the lock tab to the right to release the inner cover from the frame.
6. Remove the plastic knockouts [F].

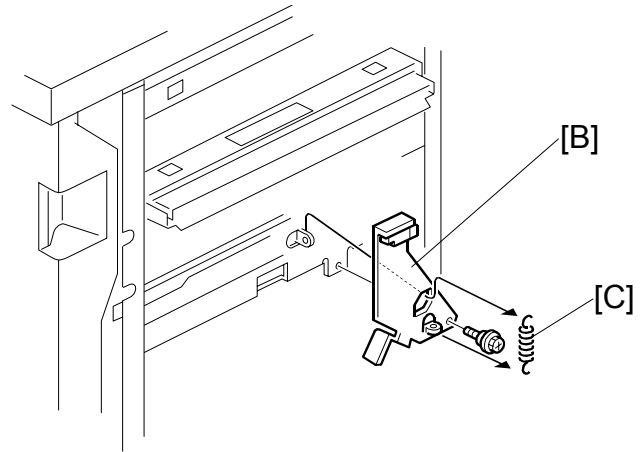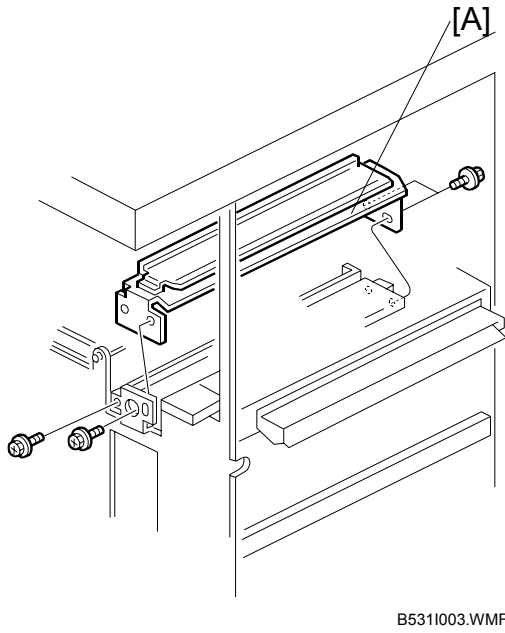

7. Remove the paper guide [A] (⚙ x 4).
8. Install the sensor arm [B] (⚙ x 1, small step screw (M3 x 4).
NOTE: Make sure that the sensor arm swings freely on the step screw.
9. Attach the spring [C].

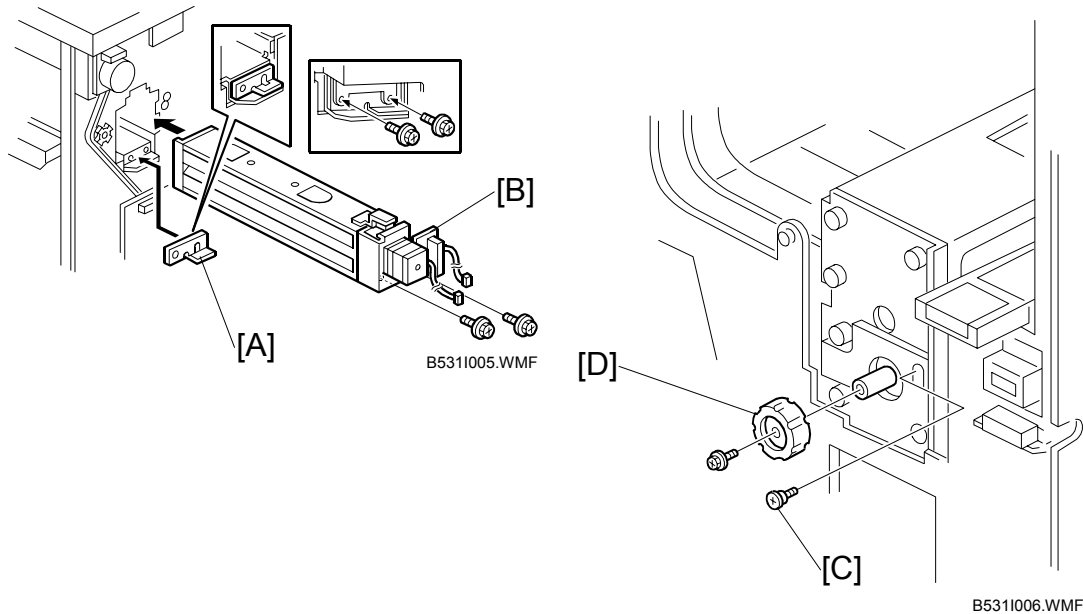


10. At the rear, position the 2 mm spacer [A] and attach the punch unit [B] (⌀ x 2, M4 x 10).

Important

- At the hole just above the lock lever, use one of the screws from the paper guide removed above to fasten the remaining two spacers to the frame.
- These extra spacers are used to adjust the horizontal position of the punch holes.

11. At the front, secure the punch unit [C] with the large step screw (⌀ x 1, M4 x 10).

12. Attach the punch unit knob [D] (⌀ x 1).

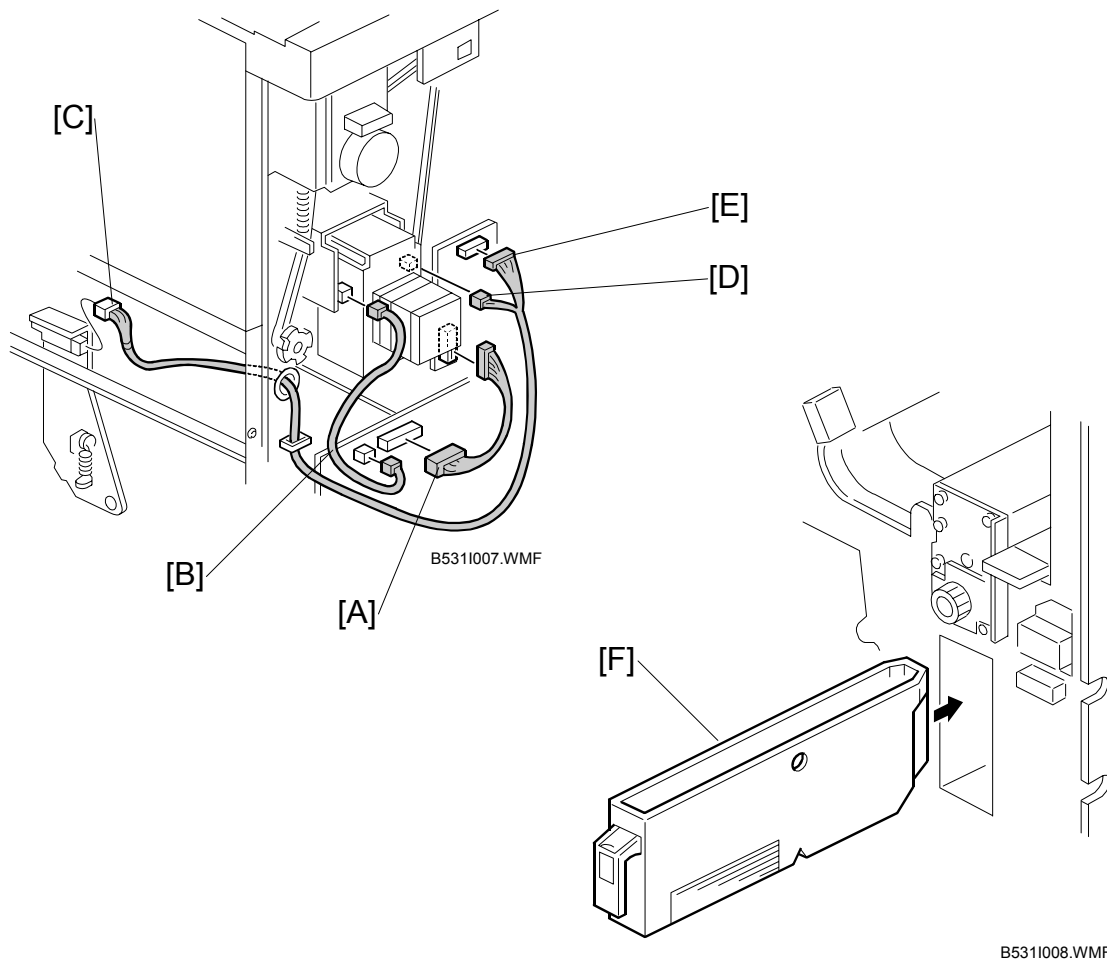

13. Connect the PCB harness connector [A] to **CN129** of the finisher PCB and to **CN600** of the punch unit PCB.
14. Connect the HP Sensor 2 harness connector [B] to **CN130** of the finisher PCB and to HP Sensor 2.
15. Connect the single end of the hopper full sensor connector cable [C] to the hopper full sensor on the arm (⌘ x 1, clamp x 1), then connect the other two connectors to HP Sensor 1 [D] and **CN620** [E] of the punch PCB.
NOTE: No special DIP switch settings are required for this punch unit. The punch unit sends an identification signal to the machine, so it knows what type of punch unit has been installed.
16. Slide the hopper [F] into the finisher.
17. Re-attach the inner cover and rear cover.
18. Close the front door and re-connect the finisher to the machine.

1.12 JOGGER UNIT (B513)


The Jogger Unit B531 can be installed only on the 3000-Sheet Finisher B478/B706.

1.12.1 ACCESSORY CHECK

Check the accessories and their quantities against this list:

Description	Q'ty
1. Jogger Unit B513	1
2. Tapping Screws - M3 x 6	2
3. Installation Procedure	1

1.12.2 INSTALLATION PROCEDURE

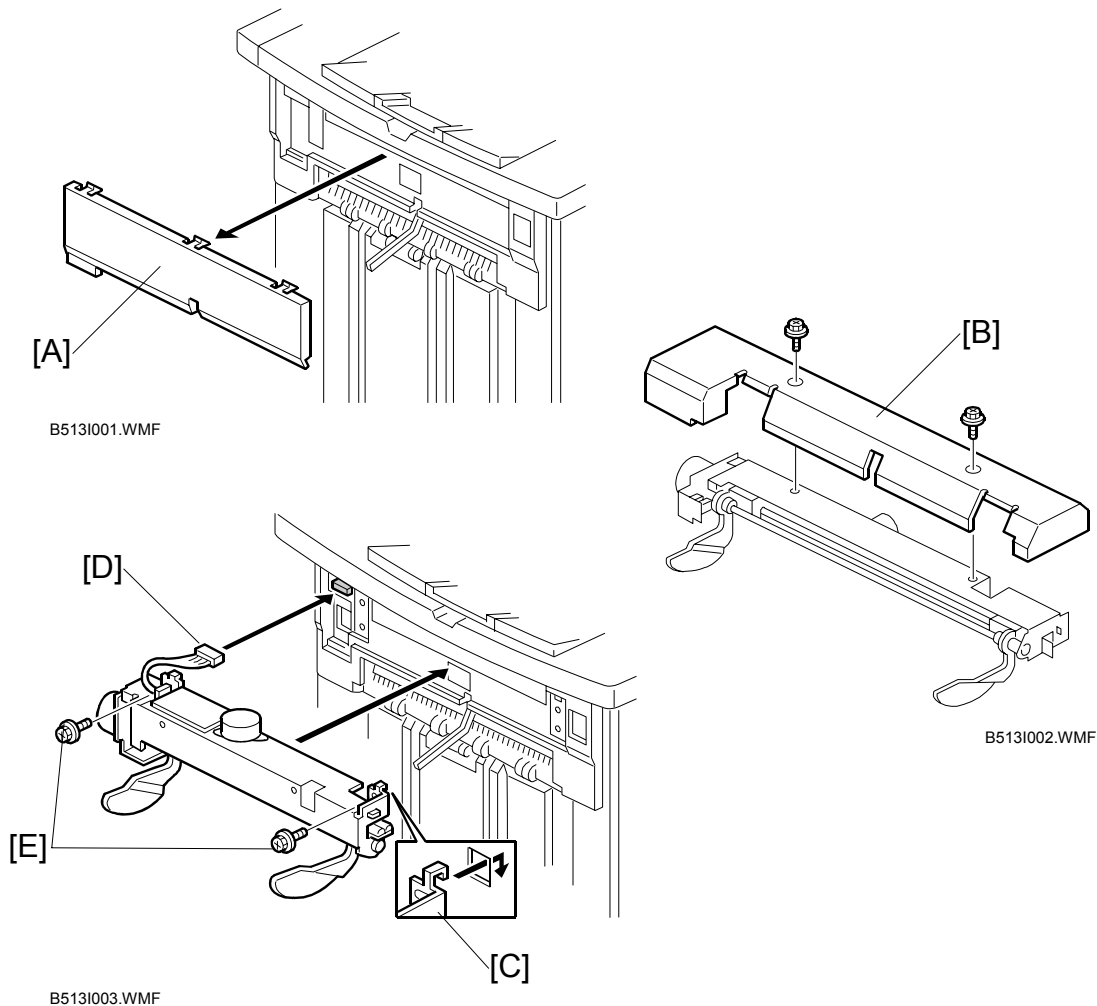

1. Turn the main machine switch off and disconnect the finisher from the main frame.
2. Use the flat head of a screwdriver to remove the left upper cover [A] from the finisher and discard it.
3. Remove the cover plate [B] from the jogger unit (⌀ x 2). Save the screws.
4. With the jogger unit connector on the left side, hook the frame of the jogger unit [C] into the holes on the left and right side of the finisher frame.
5. On the left side, fasten the connector [D] to the socket (⌀ x 1).
6. On the left and right side, attach the jogger unit frame to the side of the finisher with the screws [E] provided (⌀ x 2).
7. Re-attach the jogger unit cover to its frame with the screws removed in step 2 (⌀ x 2).

1.13 Z-FOLDING UNIT (B660)


1.13.1 ACCESSORY CHECK

Check the accessories and their quantities against this list:

Description	Q'ty
1. Lock Bracket – Rear (Cover Interposer Tray)	1
2. Lock Bracket – Rear	1
3. Lock Bracket – Front (Cover Interposer Tray)*1	1
4. Lock Bracket – Front*1	1
5. Ground Plate (Cover Interposer Tray)	1
6. Ground Plate (Z-folding unit)	1
7. Ground Plate (Finisher or Cover Interposer Tray)	1
8. Right Docking Bracket	1
9. Left Docking Bracket	1
10. Front Spacer *2	1
11. Rear Spacer *2	1
12. Power Cord.....	1
13. Sponge Strip.....	1
14. Screws M3 x 6	8
15. Screws M4 x 6	8

*1 Items 3, 4, are not required for the B706 (SR841) with B070/B071.

*2 Items 10, 11 are not required for the B674 (SR861)

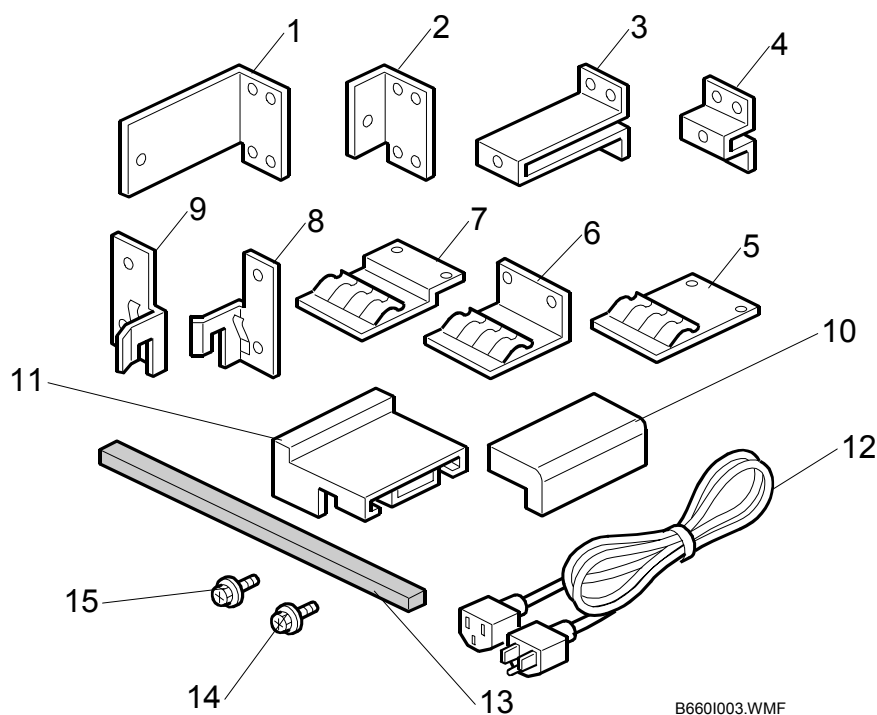

B660I003.WMF


1.13.2 INSTALLATION PROCEDURE

Important!

- The Z-Folding Unit B660-17, -26, -27 can be installed and used only on the B674 Finisher (B140 series).
- The Z-Folding Unit B660-57, -66, -67 can be installed and used only on the B700 or B701 Finisher (B246 series).


Before You Begin

- Do the installation procedure for the finisher but do not dock it to the machine.
The Z-folding unit must be installed between the finisher and the main machine.
- Do the installation for the cover interposer tray (if necessary).
- If the finisher is already installed, disconnect the finisher from the main machine.
(If the cover interposer tray is installed on the finisher, it is not necessary to remove the cover interposer tray.)

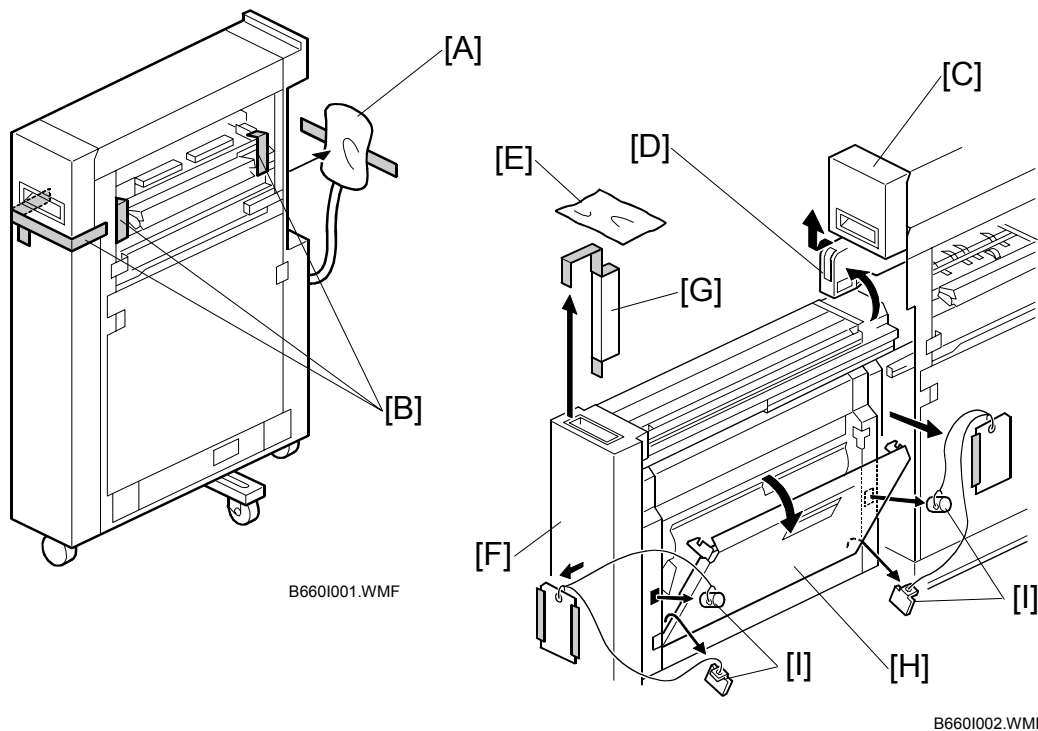Unpacking**⚠ CAUTION**

Always switch the machine off and unplug the machine before doing any of the following procedures.

1. Detach the head of the I/F connector [A].
2. Remove all tape [B] from unit.
3. Open the front door [C].
4. Raise the horizontal transport plate [D] and remove the cushion [E].
5. Pull out the Z-folding mechanism [F] and remove the cushion [G].
6. Open the right vertical transport cover [H].
7. Remove four spacers [I] by pulling on the string.

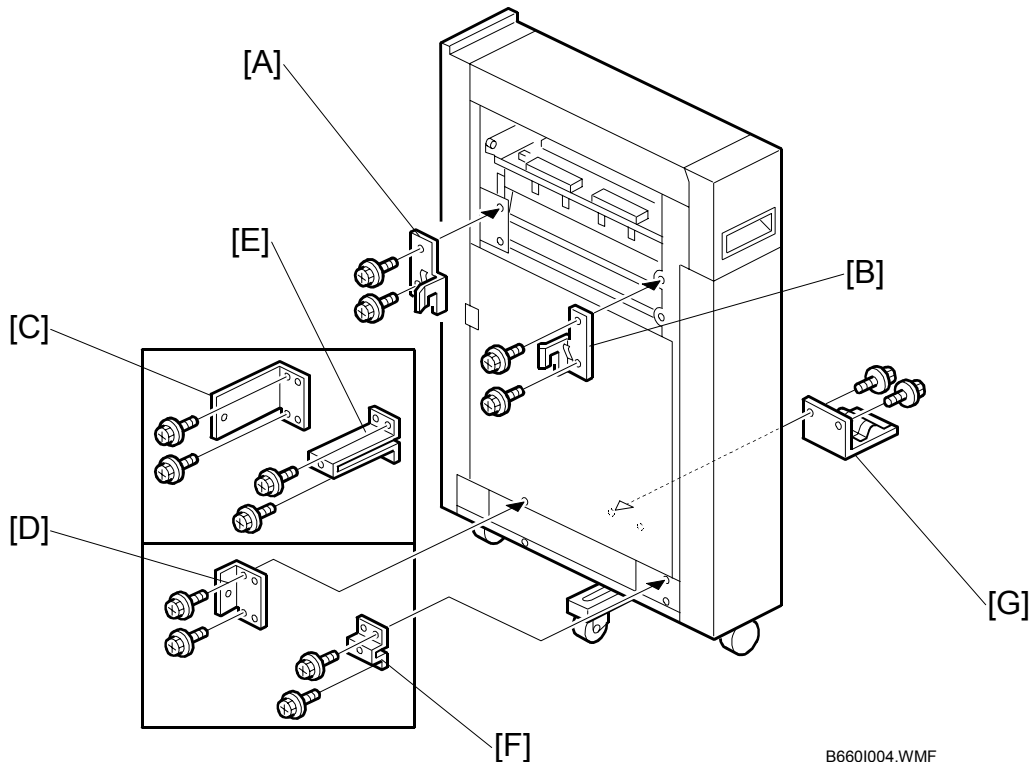Docking to the Finisher


B660I004.WMF

1. Remove the back cover of the finisher (⚙ x 2).
2. Attach the left docking bracket [A] to the Z-folding unit (⚙ x 2) (Bracket provided with the finisher).
3. Attach the right docking bracket [B] to the Z-folding unit (⚙ x 2). (Bracket provided with the finisher).
4. Attach the rear locking bracket (⚙ x 2).
 - Attach rear bracket [C] if the cover interposer tray is installed.
 - Attach rear bracket [D] if cover interposer tray is not installed.
5. Attach the front locking bracket (⚙ x 2).

NOTE: This step is required only when the Z-folding unit is installed with the B674 (SR861).


 - Attach front bracket [E] if the cover sheet interposer is installed.
 - Attach front bracket [F] if the cover sheet interposer is not installed.
6. Attach the ground plate [G] to the Z-folding unit (⚙ x 2).

1. Remove the tape from the sponge [A] and attach it to the Z-folding unit.

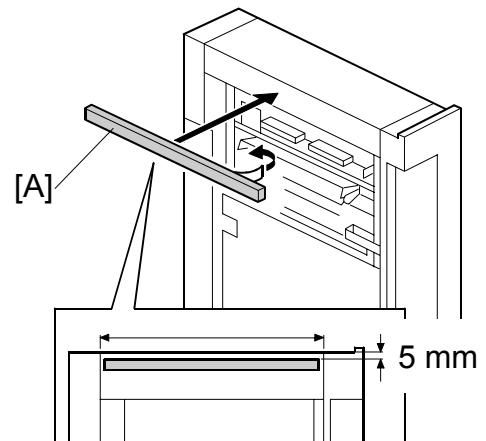


B660I005.WMF

2. At the left bottom edge of the Z-folding unit, remove the bracket [B] (⚙ x 1).
3. Push in the support [C].
4. Reattach the bracket [B] (⚙ x 1).

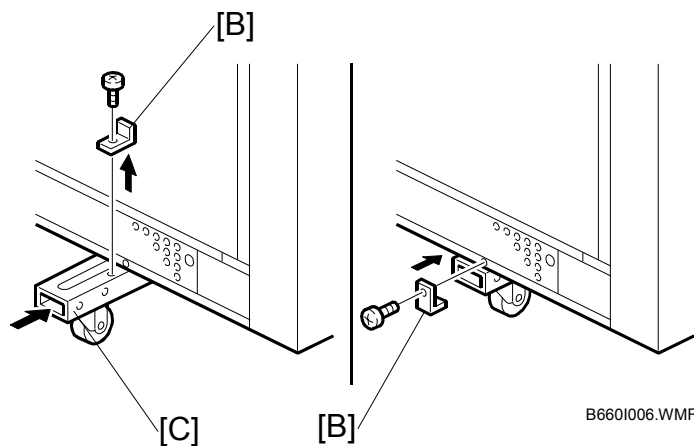

B660I006.WMF


5. If the cover interposer tray is attached to the finisher, attach the ground plate [D] to the Z-folding unit (⚙ x 2)

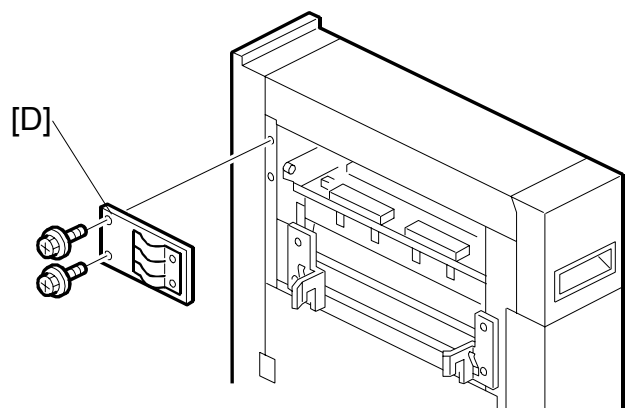

B660I102.WMF

⚠ CAUTION

**With the support retracted,
the Z-folding unit tips easily!**

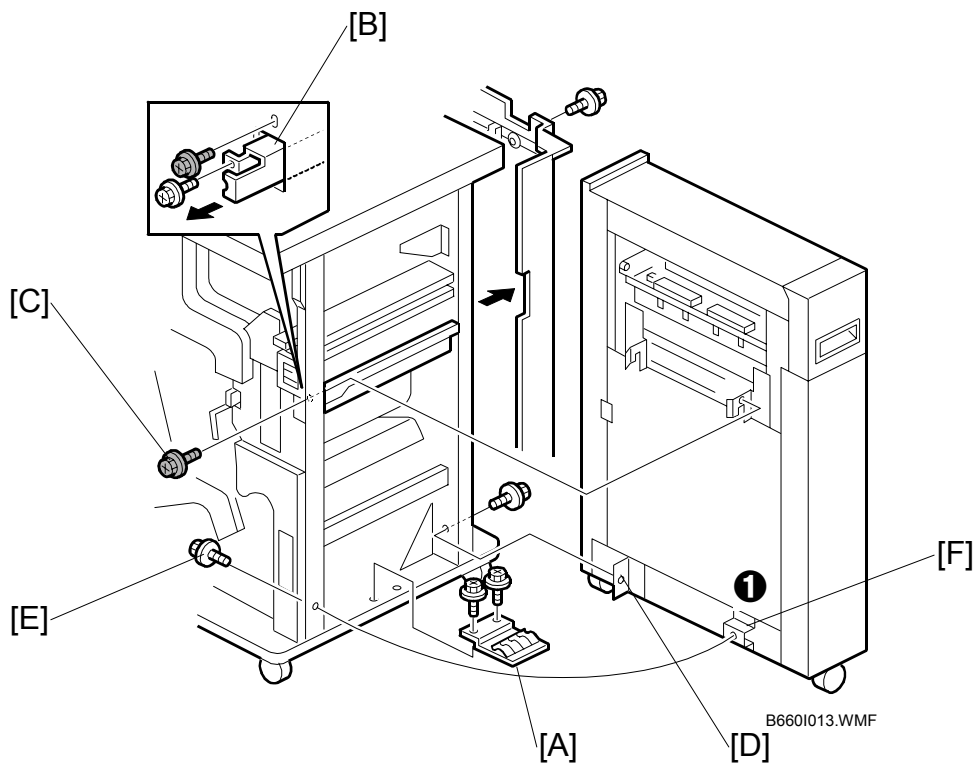

6. Attach the ground plate [A] (⌀ x 2) to the finisher (or the cover interposer tray).

NOTE: This is the ground with the flat plate attached with 2 vertical screws.

7. Open the front door of the finisher.

8. Pull out the lock lever [B] of the finisher (⌀ x 1).

-or-

If the cover interposer tray is installed, pull out the lock lever of the cover interposer tray.

9. Dock the Z-folding unit to the finisher.


10. Fasten the screw [B] (⌀ x 1).

11. Fasten screw [E] to front lock bracket [F].

NOTE:


- Screw [E] is not needed if the Z-folder will be installed with a B246 Series machine and the SR4000 B700 or SR970 B701.
- However, both brackets are required. Do not remove bracket ❶.

12. Fasten the rear lock bracket [D] (⌀ x 1).

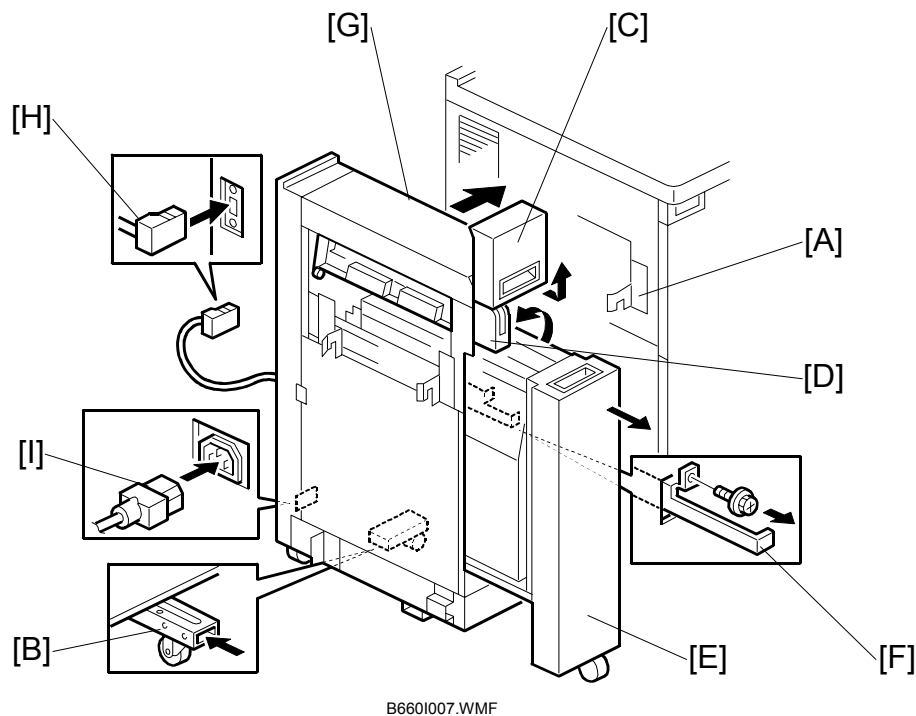Docking to the Main Frame

B660I007.WMF

1. Fasten the two docking brackets [A] (provided with the Z-folding unit) to the main machine (⚙ x 2 each).
2. At the right bottom edge of the Z-folding unit, remove the screw and bracket, push in the support [B], then reattach the screw and bracket.
3. Pull the top cover [C] toward you then raise it.
4. Raise the horizontal transport plate [D] to the left.
5. Pull out the Z-folding mechanism [E].
6. Pull out the Z-folding unit lock lever [F] (⚙ x 1).
7. At the right bottom edge of the Z-folding unit, confirm that the breaker switch is ON.
NOTE: This switch should display “—”. If you see “O”, set the switch to “—”.
 The machine will not recognize the Z-folding unit if this switch is off.
8. Dock the Z-folding unit [G] to the main machine.
9. Push in the lock lever [F] and fasten it (⚙ x 1).
10. Push in the Z-folding mechanism [E], lower the horizontal transport plate [D], then close the front door [C].
11. Attach the I/F cable [H] of the Z-folding unit to the main machine.
12. Connect the power cord [I] to the Z-folding unit.

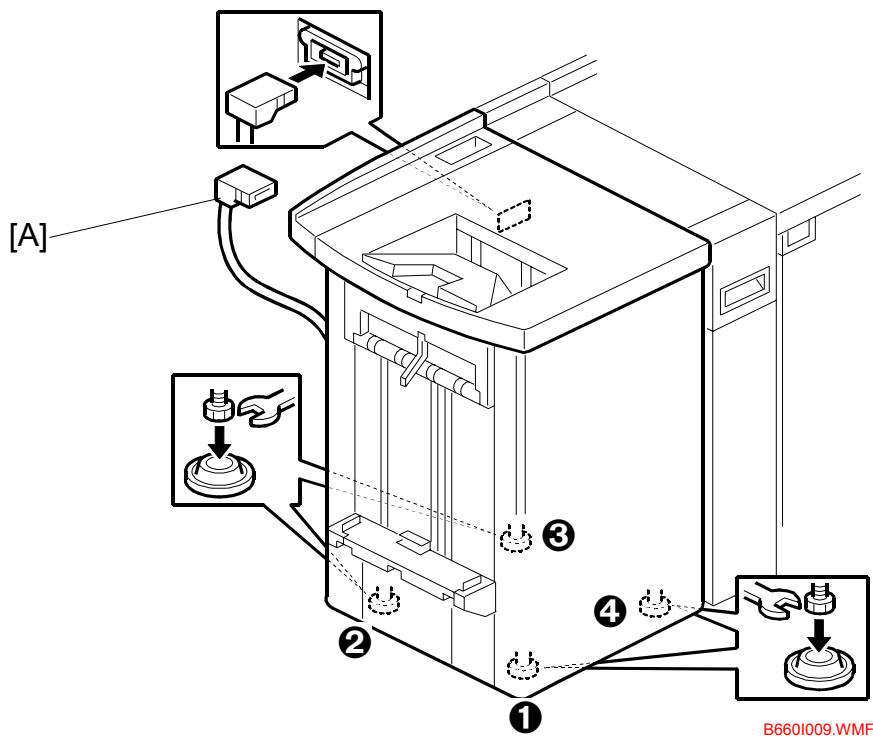

13. Reattach the finisher rear cover (⚙ x 2).

14. Connect the I/F cable [A] of the finisher to the Z-folding unit.

15. Raise or lower the nuts ①, ②, ③, ④ to level the machine.


1.14 2000/3000 SHEET FINISHERS (B700/B701)

1.14.1 ACCESSORIES

Check the accessories from the box against the following list.

Description	Q'ty
1. Cushion (with double-sided tape)	1
2. Ground (earth) plate	1
3. Tapping screws - M4 x14	4
4. Tapping screws - M3 x 8	1
5. Leveling Shoes	3
6. Upper output tray	1
7. Lower output tray (B700 Only)	1
8. Auxiliary Tray	1
9. Gasket	1
10. Front joint bracket	1
11. Rear joint bracket	1
Auxiliary Tray for Shift Tray (B700 Only – Not Shown)	1
Auxiliary Tray for Proof Tray (B700 Only – Not Shown)	1
Auxiliary Tray Storage Pocket (B700 Only – Not Shown) ..	1

*1 3 screws M3x6 are provided for the B700.

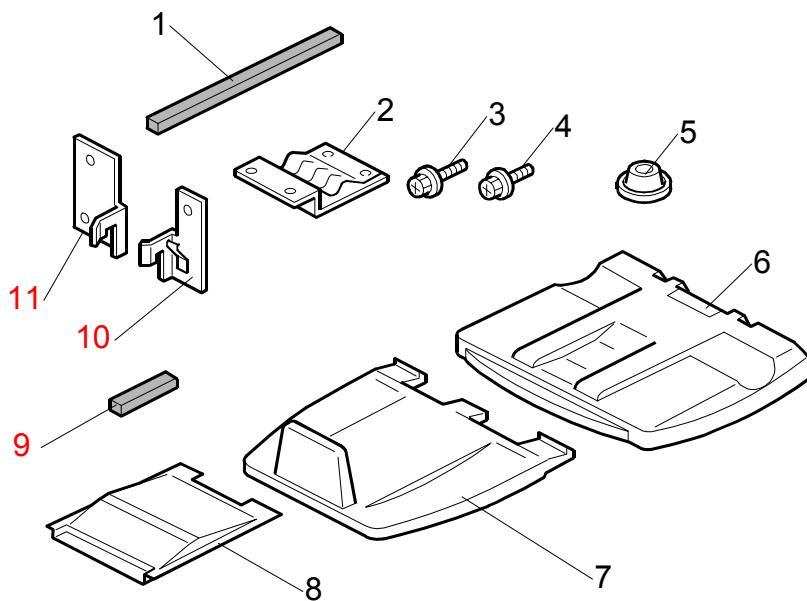

B700I201.WMF

1.14.2 INSTALLATION PROCEDURE

This section describes the common installation instructions for two peripheral devices:


- **B700 Booklet Finisher.** Does punching, shifting, corner stapling, and booklet (saddle-stitch) stapling.
- **B701 Finisher.** Does punching, shifting, and corner stapling but no booklet (saddle-stitch) stapling unit.

Important!


- The 2000-Sheet Finisher B700 can be installed only on a B246 Series machine.
- The 2000-Sheet Finisher B701 can be installed only on a B246 Series machine.

NOTE: Differences in the installation procedures are noted as “**B700**” or “**B701**”.

Removing Tapes and Retainers

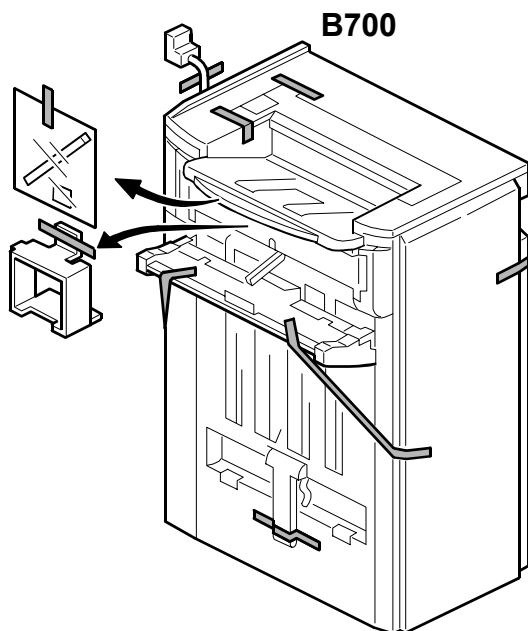

B700I102.WMF


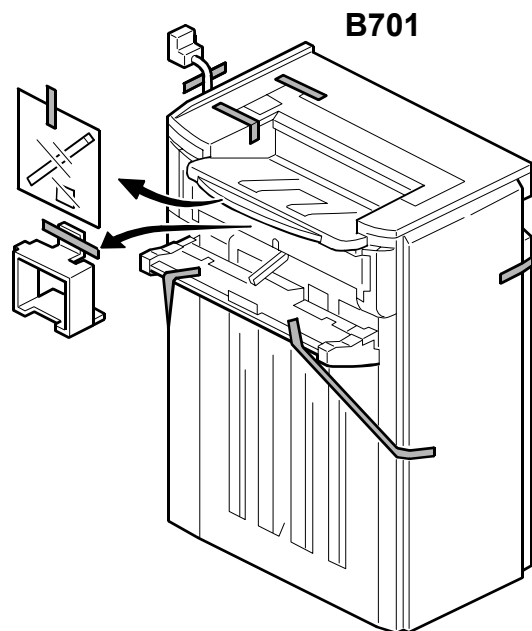


B701I102.WMF



⚠ WARNING!

Always turn the machine off and unplug the machine before doing any of the following procedures.


1. Unpack the machine and remove all the wrapping.
2. Remove all filament tape and shipping retainers from the finisher.

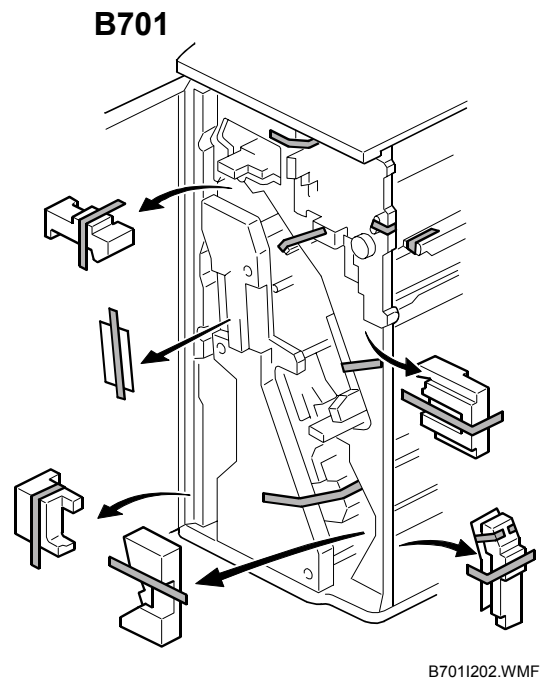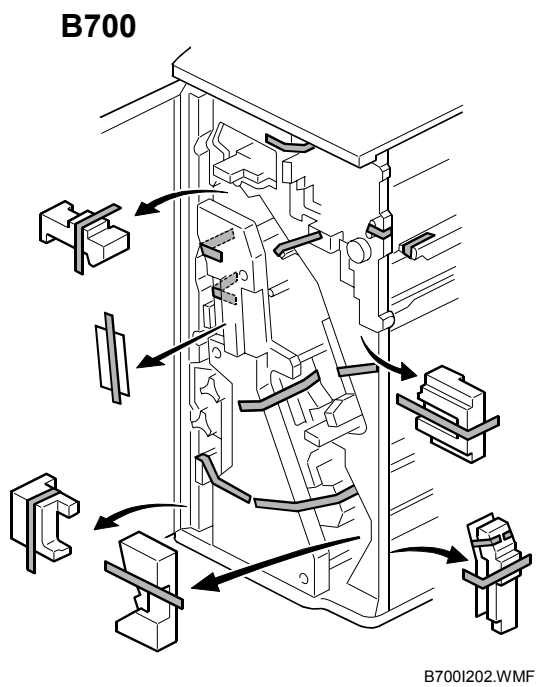

3. Open the front door.
4. Remove all tapes and shipping retainers inside the finisher.

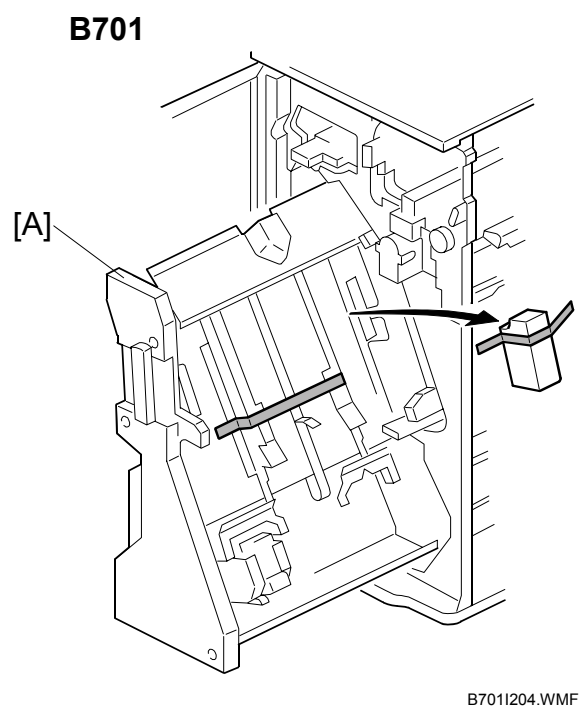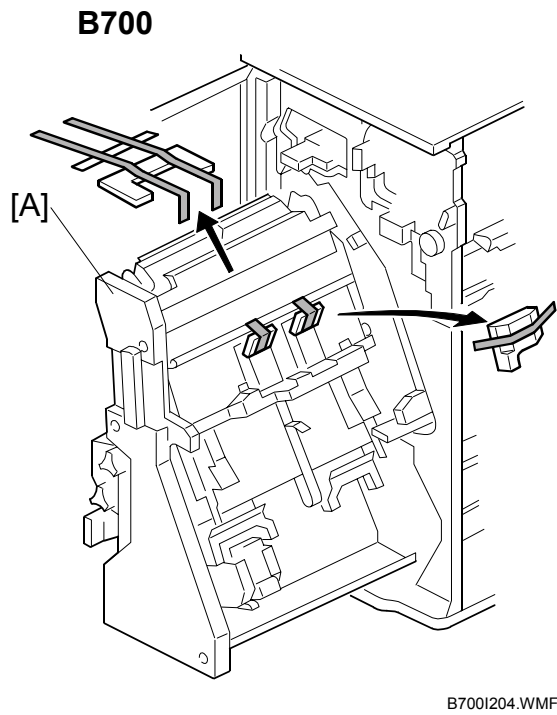


5. Pull out the jogger unit [A].
6. Remove the tapes and retainers.

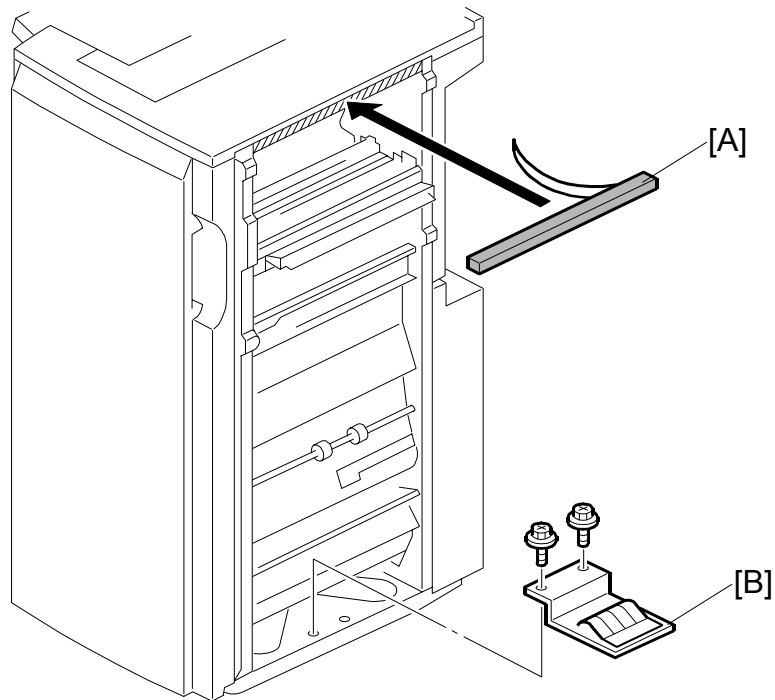Docking the Finisher


B700I106.WMF

7. If you are not installing the Cover Interposer B704, peel the strip from the sponge cushion [A] and attach it to the finisher then go to the next step.
If you are installing the Cover Interposer B704:
- Do not attach the sponge cushion to the finisher. It must be attached to the cover interposer.
 - Do not attach the grounding plate [B] to the finisher. It must be attached to the cover interposer.
 - Install the interposer now. The cover interposer must be installed before you dock the finisher to the copier.
1. Use a short screwdriver to attach the grounding plate [B] (⚙ x 2, M3 x 6).


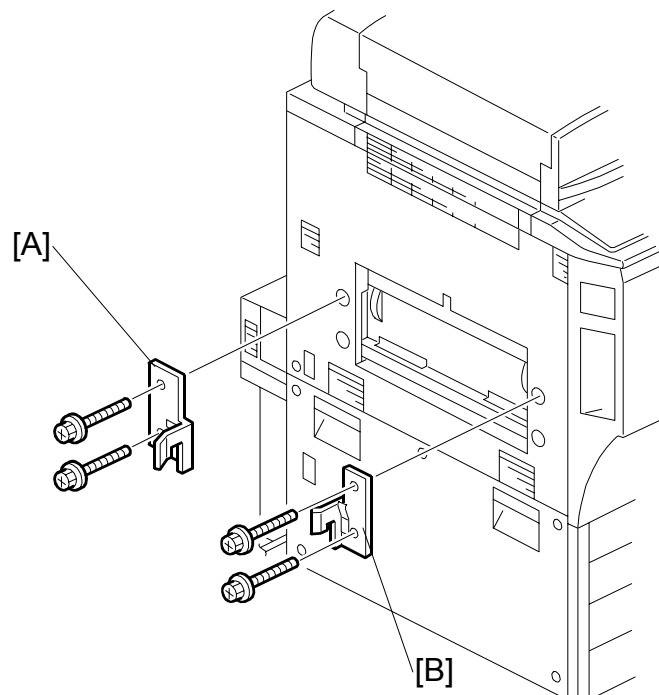


B700I105.WMF


2. Attach the rear bracket [A] (⌀ x 2, M4 x 14).
3. Attach the front bracket [B] (⌀ x 2, M4 x 14).

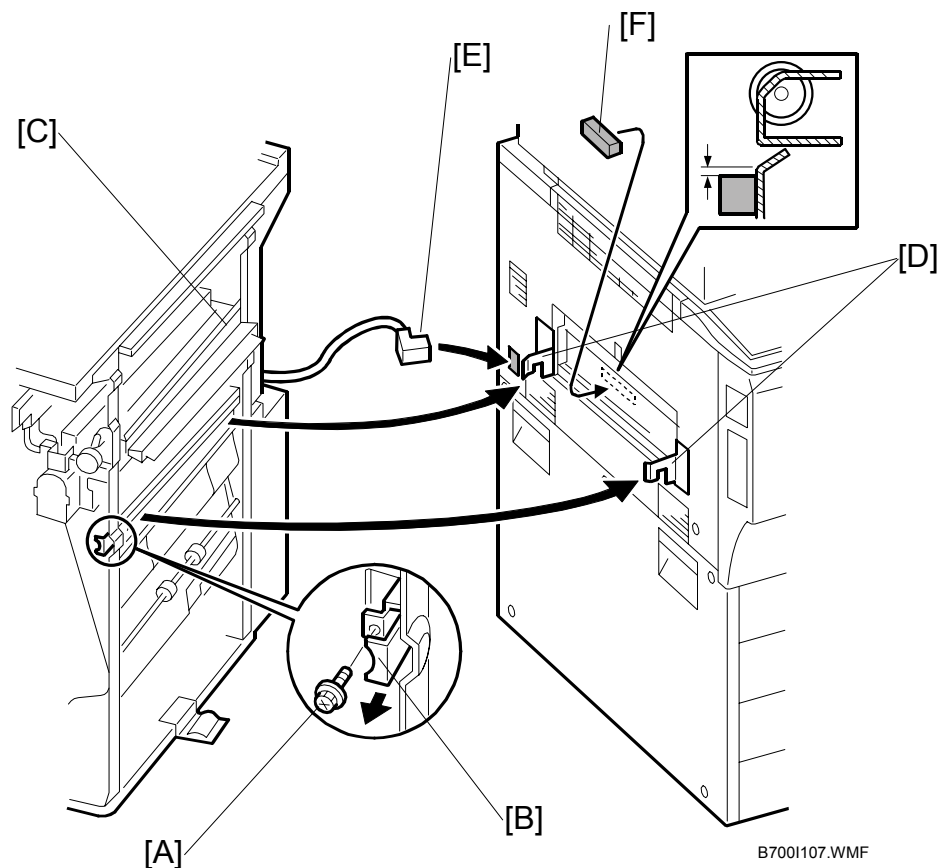


4. Remove the screw [A] to release the lock lever [B] (⌀ x 1).
5. To avoid bending and damaging the paper entrance guide plates [C], slowly push the finisher against the side of the machine until the brackets [D] enter their slots.
6. Attach and tighten the screw removed in Step 11.
7. Connect connector [E] to the main frame.
8. Attach the gasket seal [F] as shown.
9. Push the finisher against the machine.
10. Push in lock lever [B] then reattach the screw [A].

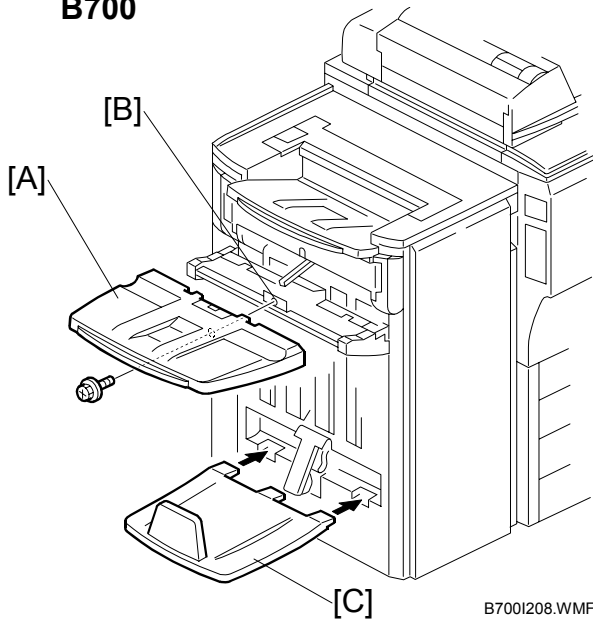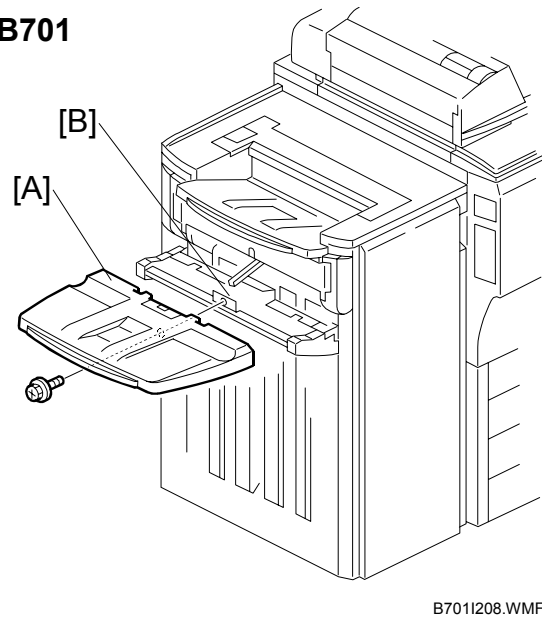Attaching the Trays**B700****B701****B700**

1. Attach the upper output tray [A] (1 x 1, M3 x 8).
NOTE: Make sure the metal plate [B] overlaps the tray.
2. Attach the lower output tray [C].
3. Use the round-head rivet (provided accessory) to fasten the auxiliary tray storage pocket to rear cover of the finisher.
4. Place the auxiliary trays for the shift tray and proof tray in the pocket.

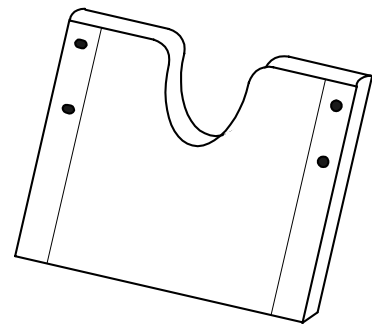**B701**

1. Attach the output tray [A].
NOTE: Make sure the metal plate [B] overlaps the tray.

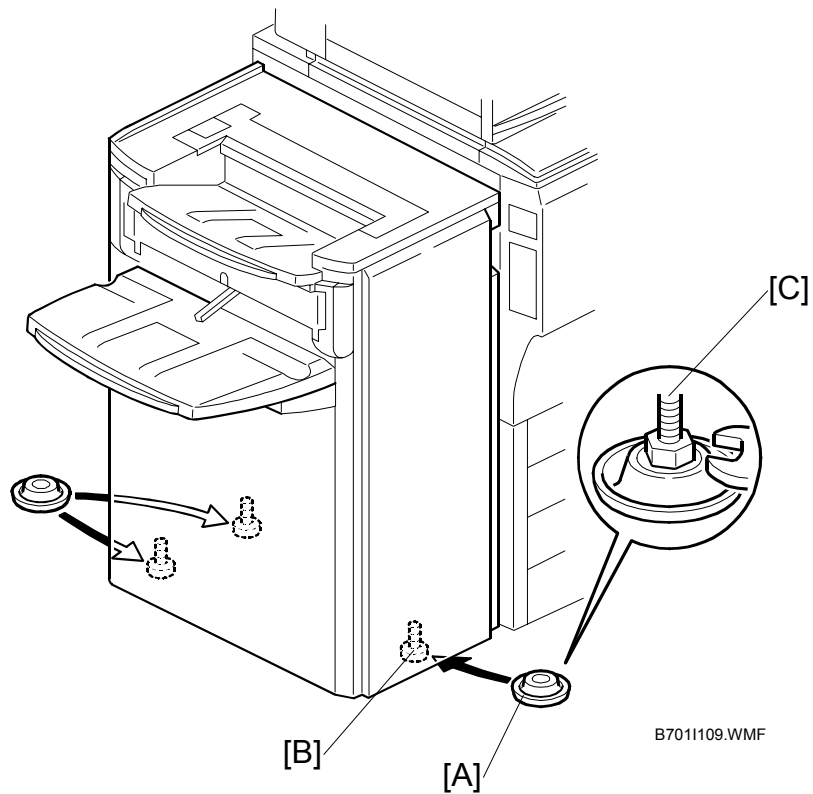Leveling the Finisher

1. Set the leveling shoes [A] (x 3) under the feet [B].
2. Use a wrench to adjust the height of the screws [C] to level the machine.

Selecting the Staple Supply Name

Enter the SP mode and execute the following information.

5841*	Supply Name Setting	These names appear when the user prints the Inquiry List Press the Counter key, then press 'Print Inquiry List'. Press the Inquiry button on the initial User Tools screen.
013*	Staple Std	Enter the name of the staples in use for normal stapling (not booklet stapling). This setting should be done for both the B700 and B701.
022	Staple Bind	Enter the name of the staples in use for booklet stapling (saddle-stitching). This setting is required only for the B700.

Enabling Booklet Binding (B700 Only)

To enable booklet binding (saddle-stitching) for the B700, **you must make sure that the center-position stapling option is displayed.**

1. Press the User Tools key.
2. Touch "Copier/Document Server Features".
3. Touch the "Input/Output" tab, **then touch "Stapling Position".**
4. Touch any "Stapling Position" button and touch the center (saddle-stitch) stapling symbol.
5. Exit the User Tools mode. Specify the number of copies, touch the center stapling symbol on the operation panel, then start the print job.

Auxiliary Trays

The auxiliary trays are stored in the auxiliary tray storage pocket mounted on the back cover of the finisher.


Make sure that the customer understands the following points about these auxiliary trays:

- The trailing edges of excessively curled or Z-folded paper can activate the tray full sensors before the tray is actually full.
- Once the "Exit Tray Full" message displays, the job cannot continue until some sheets are removed from the tray which is only partially full. The trays are designed to prevent this problem.
- The auxiliary tray for the shift tray should be installed for Z-folding jobs.
- The auxiliary tray for the proof tray should be installed only when excessively curled paper is triggering early "Exit Tray Full" alerts.
- Normally, both auxiliary trays should be placed in the pocket mounted on the back of the finisher.

Proof Exit Auxiliary Tray

Follow the procedures below to install the auxiliary tray for the proof tray.


1. First, remove the paper from the paper feed tray, turn it upside down, and continue printing. This may solve the problem.
2. If the "Exit Tray Full" alerts continue, set the proof auxiliary tray [A] on the proof tray on the top of the finisher.
3. Make sure that the arms ❶ of the auxiliary tray fit tightly over the ridges ❷ of the proof tray below.

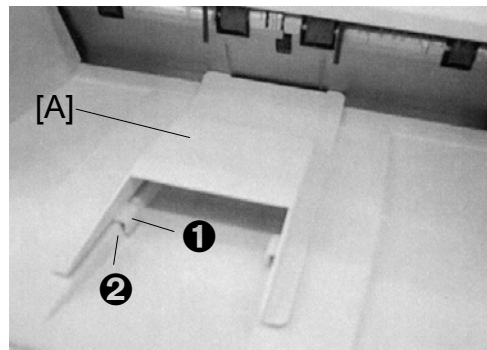

B246I903.WMF

Shift Auxiliary Tray

1. Open and close the front door of the finisher.
This initializes the finisher and moves the shift tray to the standby position.
2. Open the front door again and leave it open.
3. Set the shift auxiliary tray [A] on the shift tray as shown.
4. Close the front door.
This initializes the finisher again and moves the shift tray to the new standby position with the auxiliary tray installed.
5. After the Z-folding job is finished, remove the tray and store it in the auxiliary tray storage pocket on the back of the finisher.
6. Open and close the front door to re-initialize the finisher and reset the standby position of the shift tray.

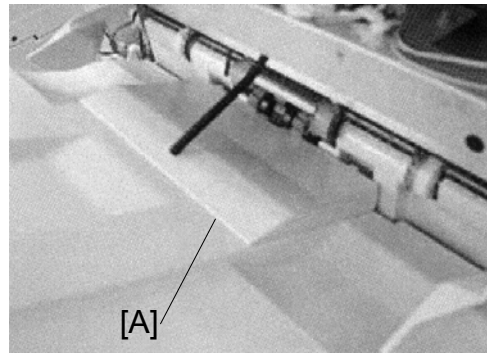

B246I902.WMF


1.15 PUNCH UNIT (B702)

The Punch Unit B702 can be installed only in the 2000/3000-Sheet Finisher B700/B701.

1.15.1 ACCESSORIES

Check the accessories and their quantities against the following list.

Description	Q'ty
1. Punchout Waste Unit	1
2. Slide Drive Unit	1
3. Punch Waste Hopper	1
4. Screws (M3 x 6)	5
5. Side-to-Side Detection Unit	1
6. Punching Unit	1

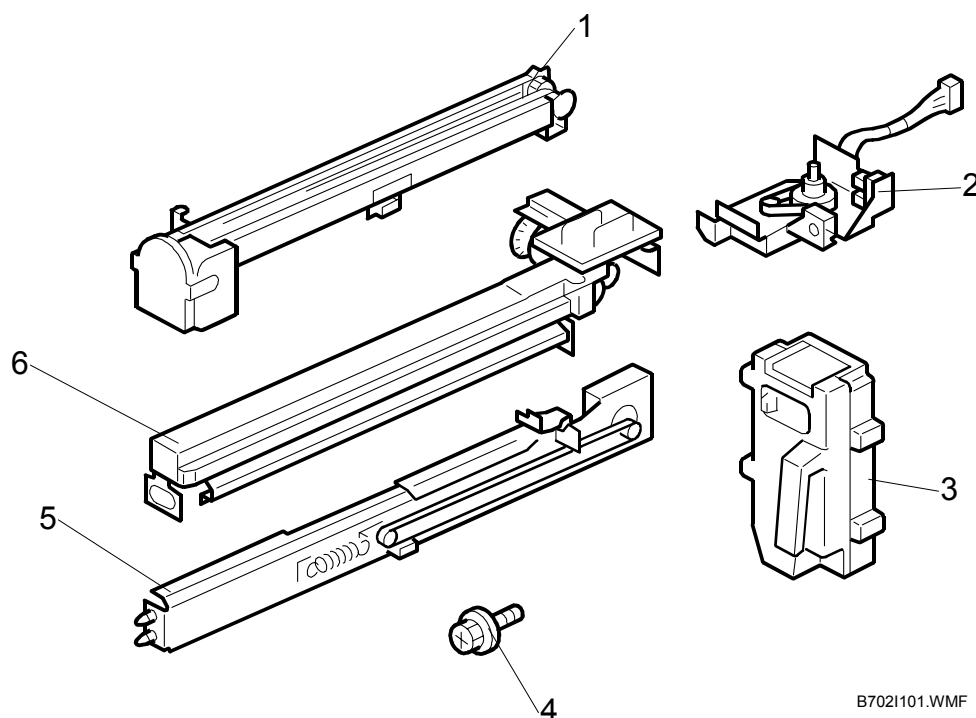


B7021101.WMF


⚠ WARNING!

Always turn the machine off and unplug the machine before doing any of the following procedures.

1.15.2 INSTALLATION PROCEDURE

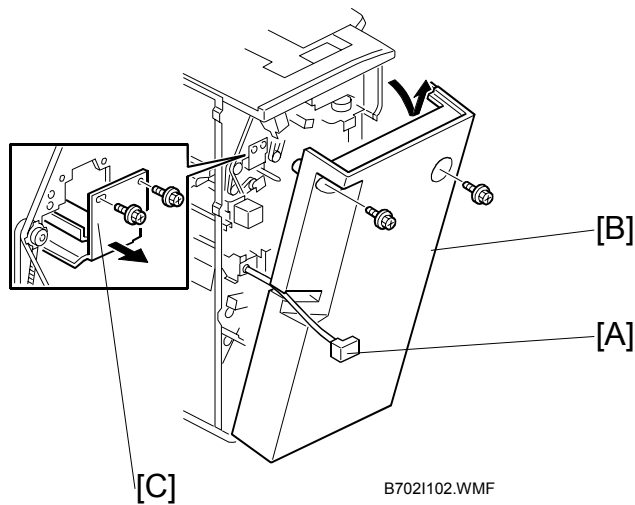


B7021102.WMF

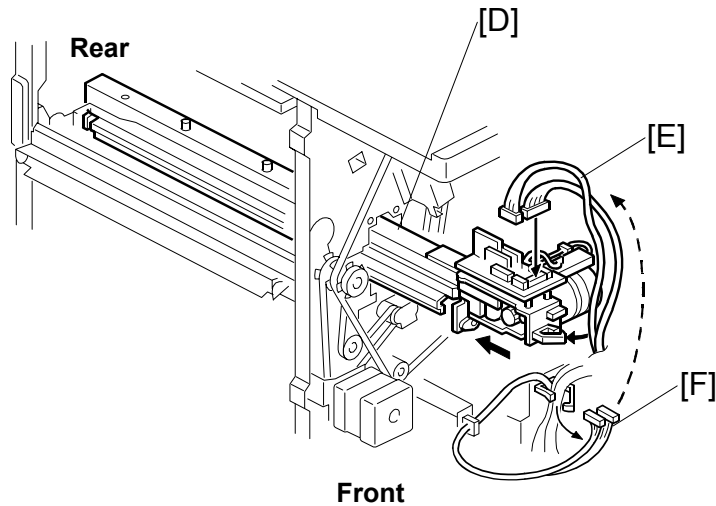


B7021103.WMF

1. If the finisher is connected to the copier, disconnect the power connector [A] and separate the finisher from the copier.
2. Remove the rear cover [B] (⚙ x 2) and open the front door.
NOTE: At the base of the back cover, be sure to disconnect the tabs that fasten the cover to the frame.
3. Remove the guide plate [C] (⚙ x 2).
4. Slide the punch unit [D] along its rails into the finisher. Make sure that pin engages correctly at the front and rear.
5. Connect and fasten the punch unit [E] (⚙ x 2, ⚙ x 1).
NOTE: The connectors are coiled and tied above the PCB on the right.

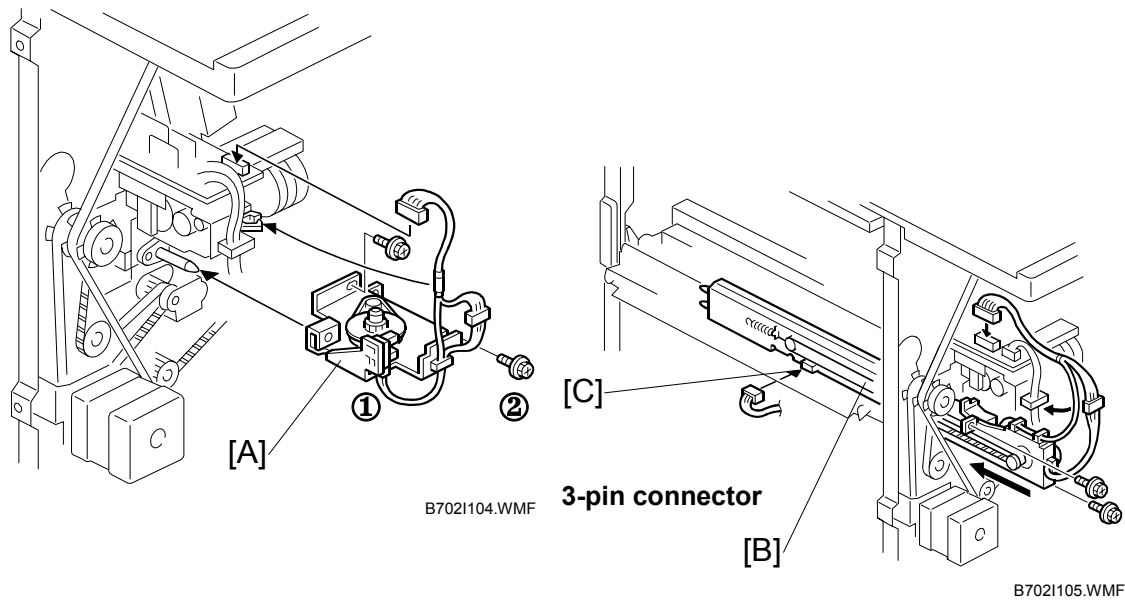

6. Fasten the slide drive unit [A] to finisher and connect it to the punch unit (⚙ x 2, 📌 x 1). Press in on the slide drive unit at ① when you attach screw ②.
7. Make sure that the punch unit moves freely and is not blocked by the screws.
8. Insert the side-to-side detection unit [B]. Make sure that the two pins are engaged correctly at the front.
9. Confirm that the side-to-side detection slides smoothly on its rails. If it does not, make sure that the rails are aligned with their grooves.
10. Fasten the side-to-side detection unit and connect it at the rear (⚙ x 2, 📌 x 1, 📌 x 1).
11. Pull the short connector out of the connector [C] then connector it (📌 x 1).
NOTE: This is the 3-pin connector.

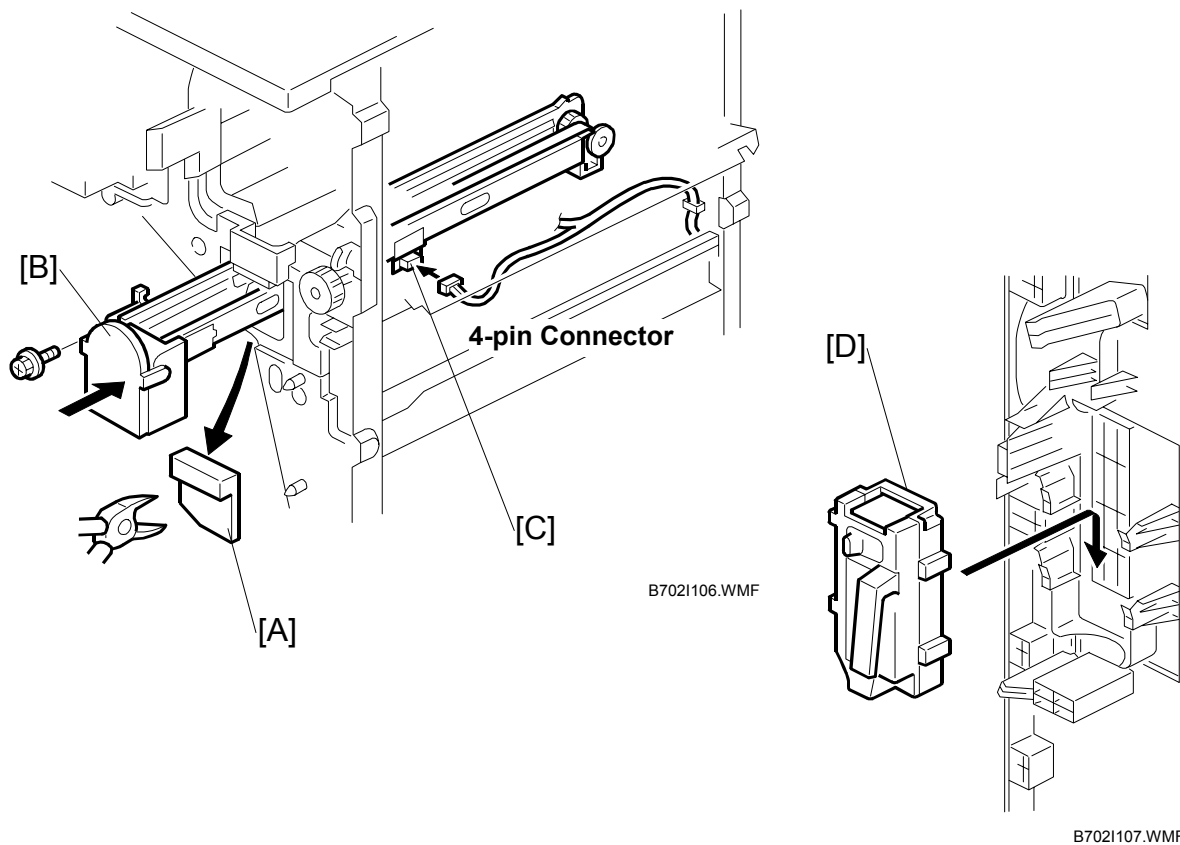


12. At the front, use a pair of nippers to remove the knockout [A]
13. Insert the punch waste transport unit [B] into the finisher.
NOTE: Make sure that the punch waste transport unit slides smoothly on its rails. If it does not, make sure that the rails are aligned with the grooves.
14. Remove the short connector from the connector [C].
NOTE: This is the 4-pin connector.
15. Connect connector and fasten the punch waste transport unit
 (⌘ x 1, ⌘ x 1, ⌘ x 1).
16. Set the hopper [D] in its holder.

1.16 COVER INTERPOSER TRAY (B704)

1.16.1 ACCESSORIES

Check the accessories and their quantities against the following list.

Description	Q'ty
1. Front door extension (top)	1
2. Rear cover extension (bottom)	1
3. Shoulder screws	3
4. Tapping screws – M4 x 8.....	9
5. Tapping screws – M3 x 8.....	2
6. Tapping screws – M3 x 6.....	5
7. Adjuster plates.....	2
8. Hinge Bracket.....	1
9. Plate Extension (bottom)	1
10. Gasket Seals	2
11. Right Rear Cover Plate (B706 only)	1
12. Spacer	1
13. Anti-Static Brush.....	1
14. Spacer (B706 only).....	1
15. Spacer (Not used)	1
16. Right front corner plate (for B706 only).....	2
17. Front door extension (bottom)	1

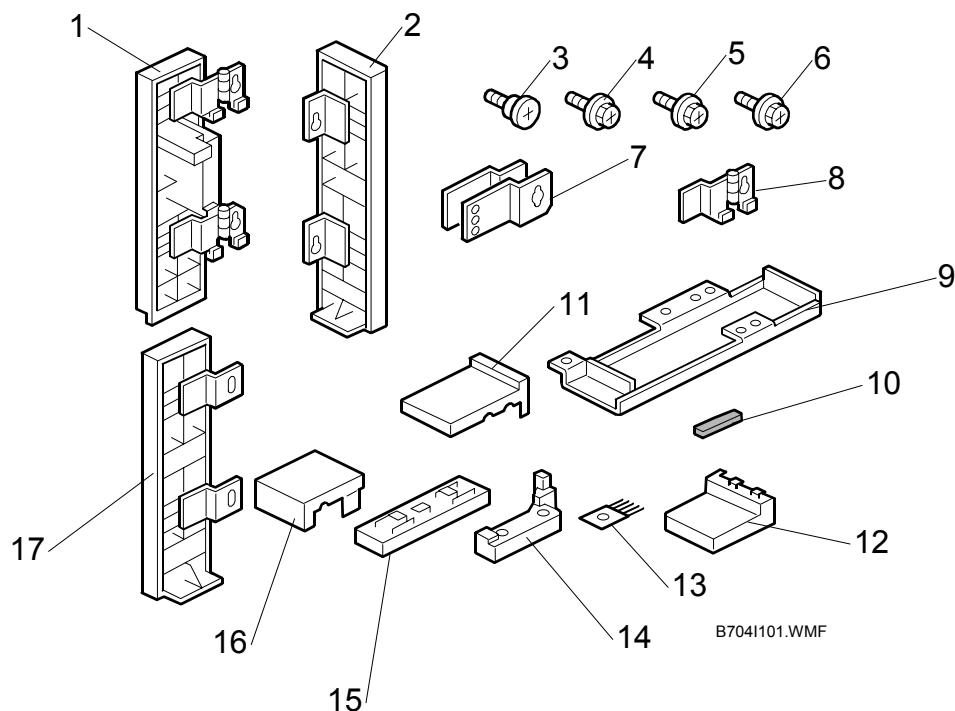


1.16.2 INSTALLATION PROCEDURE

The Cover Interposer Tray B704 can be installed on only of the following finishers:

- 2000-Sheet Booklet Finisher B700
- 3000-Sheet Finisher B701
- 3000-Sheet Finisher B706

Removing Tapes and Retainers

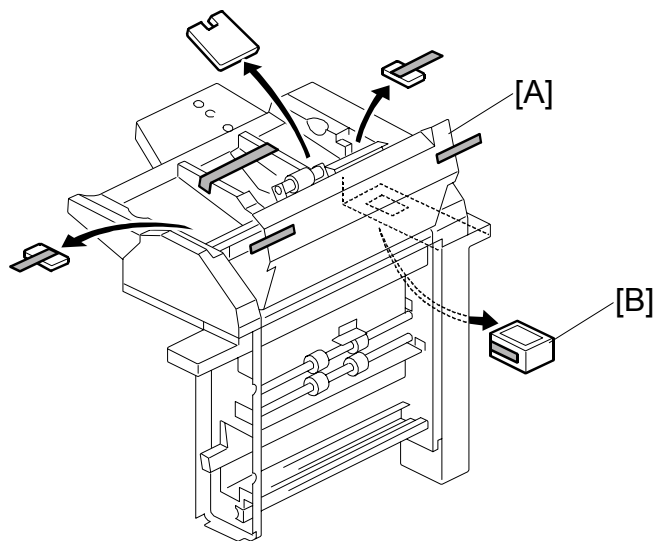


B704I102.WMF

⚠ WARNING!

Make sure that the finisher is disconnected from the main machine and that the copier is switched off and unplugged before starting the following procedure.

1. If the finisher is connected to the machine, disconnect it.
2. Remove all tape and retainers from the cover interposer tray [A].
3. Remove the tape and cardboard [B] from the ground connector.

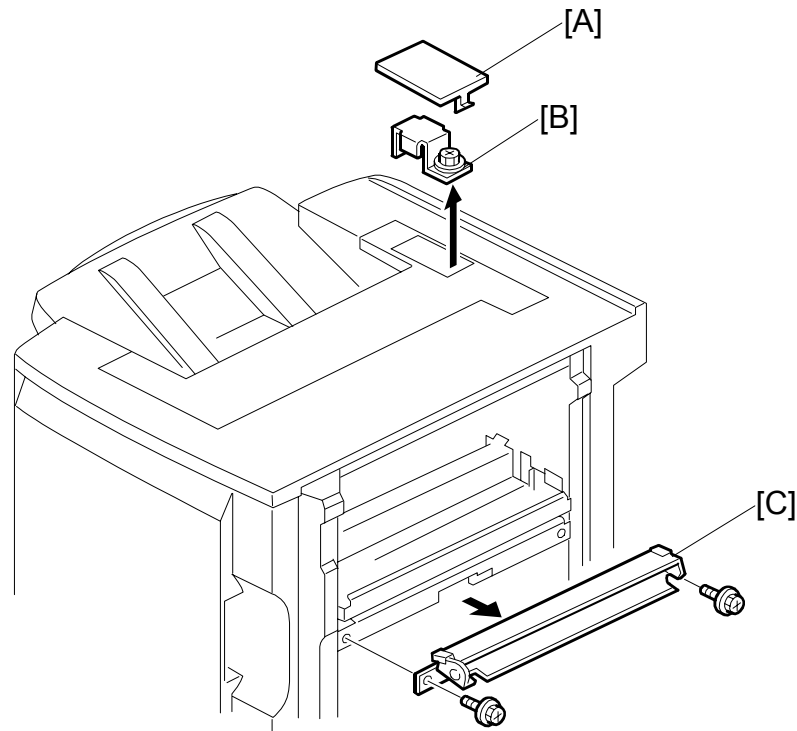Preparing the Finisher (B700/B701/B706)


B704i103.WMF

1. Remove the cover [A] of the relay connector.
2. Loosen the screw of the bracket [B] (⌀ x 1) then remove the bracket.
3. Remove the guide plate [C]. (This guide plate will be attached to the cover interposer; do not discard it.)
Important: If you are installing the cover interposer tray with a previously installed finisher B700/B701/B706, remove the sponge strip from the finisher and save it for re-attachment to the interposer tray.
4. If you are installing the B700/B701, attach the extensions to the finisher without modification. Go to "
5. "Attaching the Extensions for the B700/B701" on page 1-100.
-or-

If you are installing the B706, modify the extensions and attach them to the finisher. Go to "Attaching the Extensions for the B706" on page 1-97.

Attaching the Extensions for the B706**Important!**

- The procedures in this section are for installation of the cover interposer with the B706 only.
- If you are installing the cover interposer with the B700/B701, go to the next section.

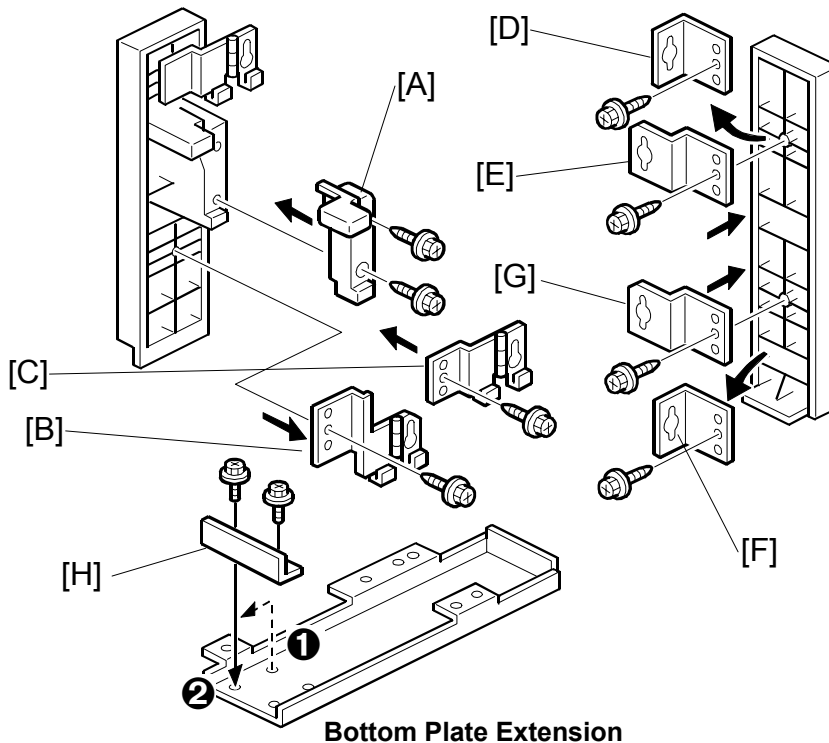Modify the Attachments for the B706**Front Door Extension (Top)****Rear Cover Extension (Bottom)**

B474I108.WMF

Front Door Extension:


1. Attach spacer [A] to the front door extension (top) (⚙ x 2).
2. Remove the lower hinge [B] and replace it with [C] (⚙ x 2).

Rear Cover Extension (Bottom):


3. Remove [D] and replace it with [E] (⚙ x 1).
4. Remove [F] and replace it with [G] (⚙ x 1).

Plate Extension (Bottom):


5. Remove bracket [H] from ❶ and attach it to ❷ at the end of the bottom plate extension (⚙ x 2).

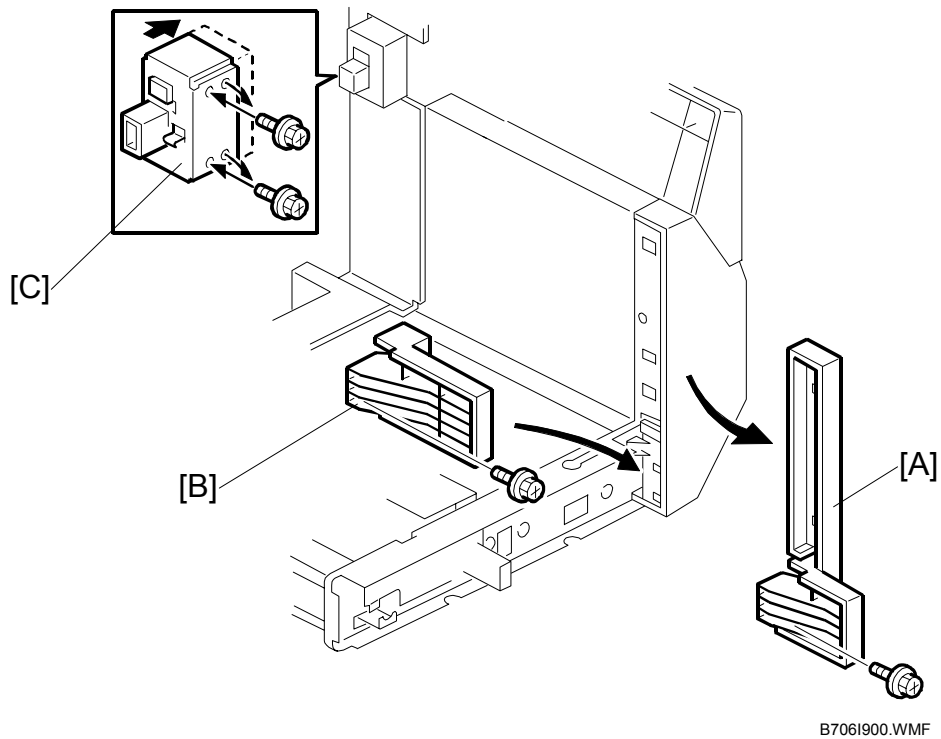Prepare the Cover Interposer for the B706


1. Remove spacer [A] (⌀ x1).
2. Attach spacer [B] (⌀ x1).
3. Remove the screws from the connector case [C] (⌀ x2).
4. Push the connector case in the direction of the arrow until the second set of holes are aligned with the holes below, then attach the screws.

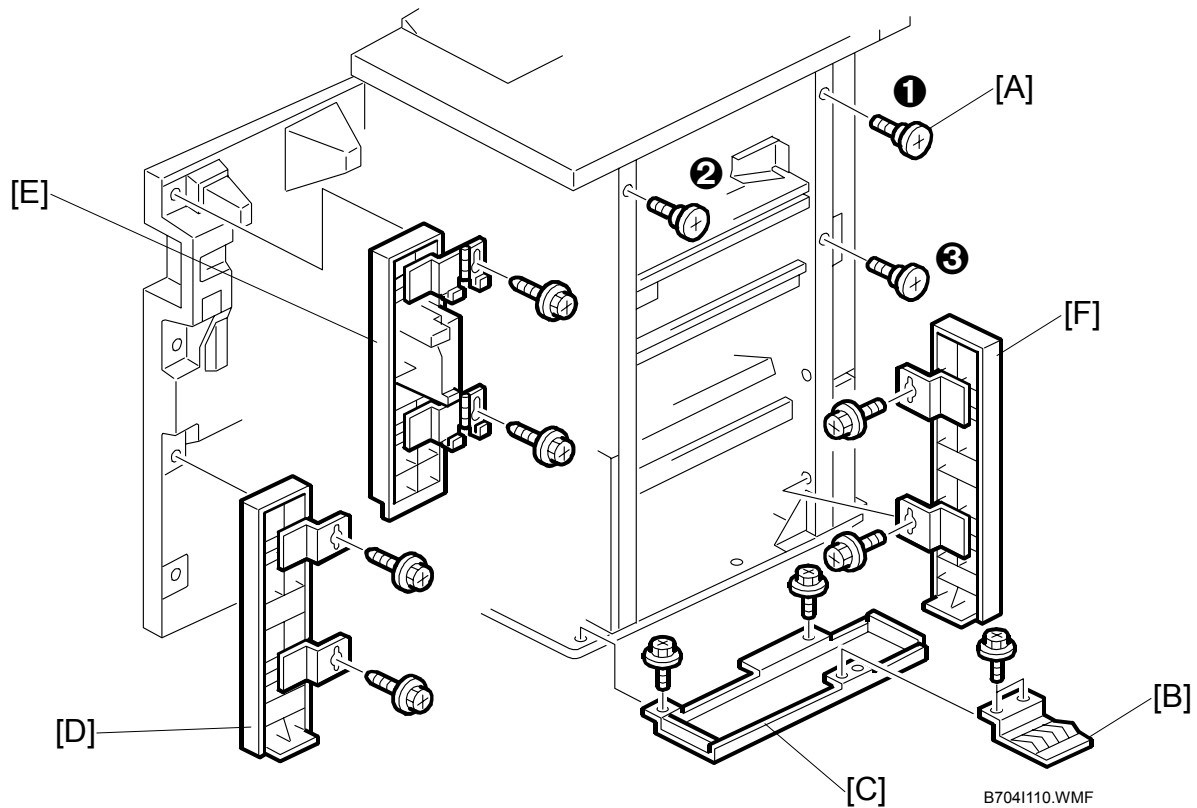Attach the Extensions to the B706

1. Attach the three shoulder screws [A] ①②③ (⌀ x 3).
2. If the finisher has been previously installed, remove the ground plate [B] from the finisher and keep the screws.
3. Attach the bottom plate [C] (⌀ x 2, M3 x 6).
4. Attach the ground plate to the bottom plate (⌀ x 2).
5. Attach the bottom front cover extension [D] (⌀ x 2, M4 x 8).
NOTE: Attach this cover first.
6. Attach the top front cover extension [E] (⌀ x 2, M4 x 8).
7. Set two screws into the holes provided for the rear cover extension [F] (⌀ x 2, M3 x 6).
8. Set the keyholes of the rear cover extension over of the heads of the screws.
9. Press up on the bottom of the rear cover extension to close the gap at the top of the cover, then tighten the screws.

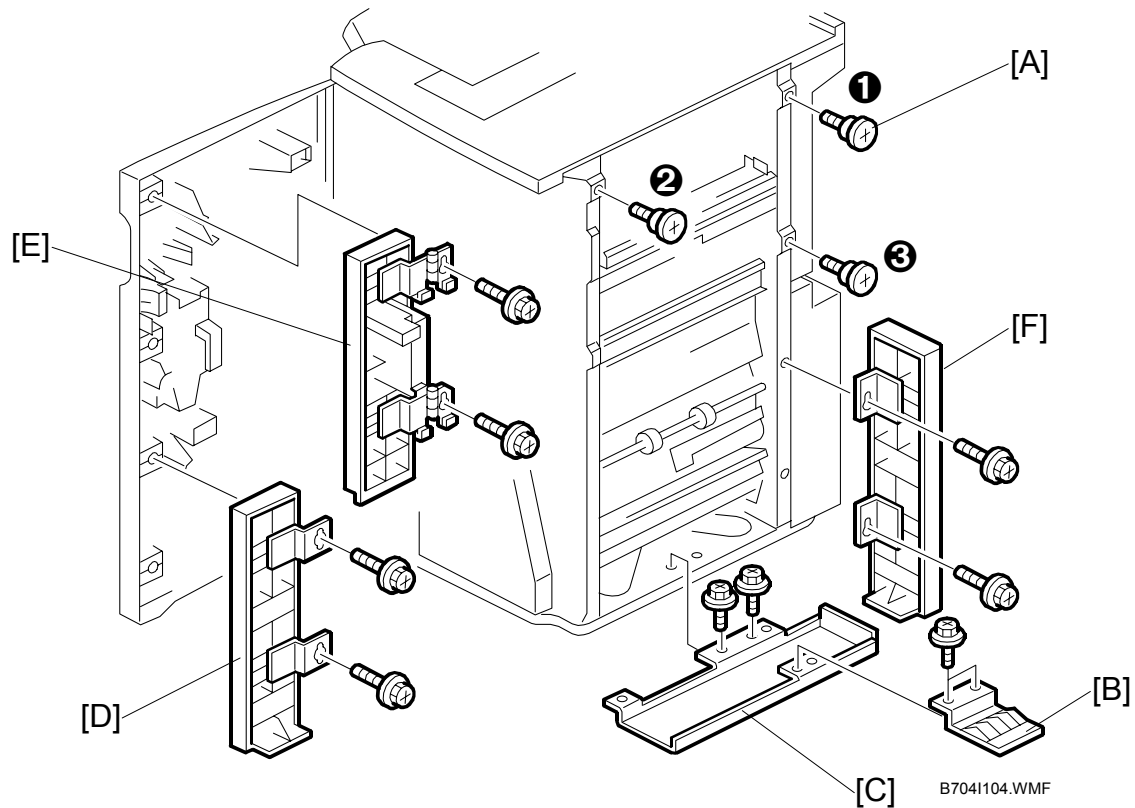Attaching the Extensions for the B700/B701

1. Attach the three shoulder screws [A] ①②③ (⌀ x 3).
2. If the finisher has been previously installed, remove the ground plate [B] from the finisher and save the screws
3. Attach the bottom plate [C] (⌀ x 2, M3 x 6) then attach the ground plate to the bottom plate (⌀ x 2).
4. Attach the bottom front cover extension [D] (⌀ x 2, M4 x 8).
5. Attach the top front cover extension [E] (⌀ x 2, M4 x 8).
6. Attach the rear cover extension [F] (⌀ x 2, M3 x 6).

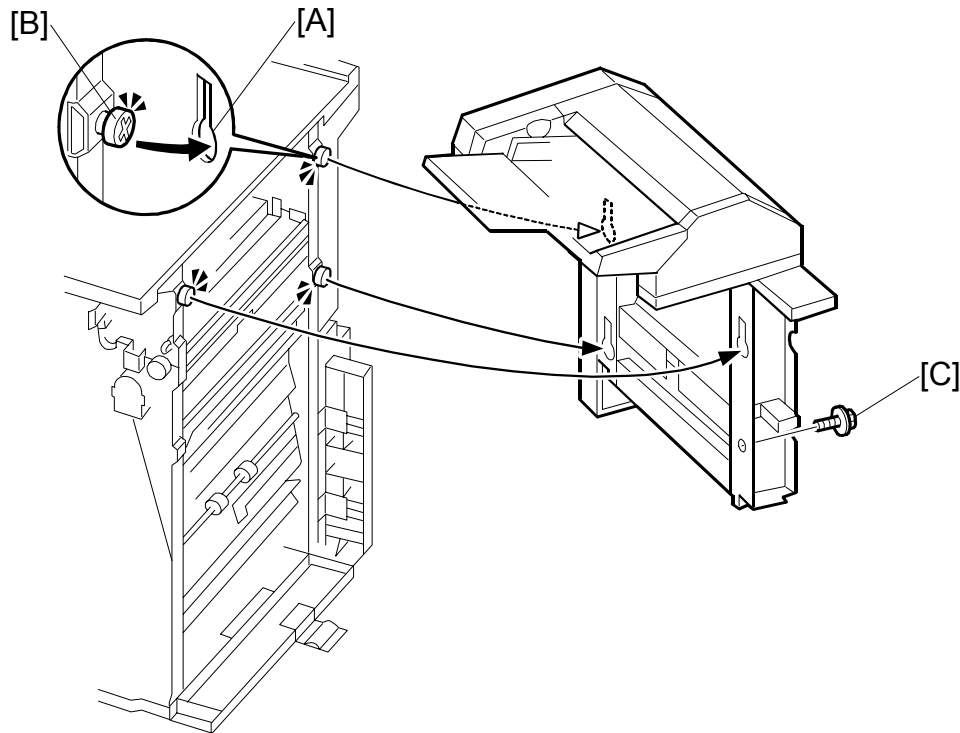Attaching the Interposer Tray (B700/B701/ B706)

B704I105.WMF


1. Pick up the cover interposer tray, align the keyholes [A] with the shoulder screws [B], then slide the cover interposer down onto the screws.
2. Secure the cover interposer with the screw [C] (⌀ x 1, M3 x 6).
3. If you are installing the cover interposer tray on the B700/B701, skip the next section and go directly to “Docking the Finisher and Interposer to the Machine” on page 1-104.

-or-

If you are installing the cover interposer tray on the B706, go to the next section, install the corner plates on the B706, then go to “Docking the Finisher and Interposer to the Machine” on page 1-104.


Attaching the Corner Plates for the B706

Important!: The corner plates are installed on the B706 only.

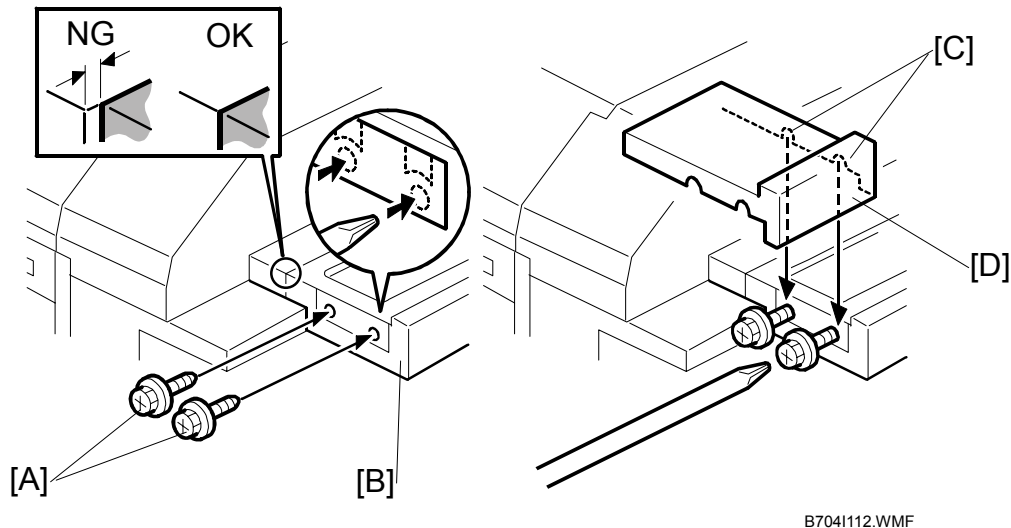
Right Rear Corner Plate (B706 only)

B704I112.WMF


1. Temporarily attach the screws [A] (with about two turns) to the right end of the finisher extension table [B] (2 x 2, tapping M4 x 8)
NOTE: The holes are not visible because they are covered with tape. Just punch the screws through the holes.
2. Align the cutouts [C] of the right rear corner plate [D] with the screws and attach the plate.
3. With a long screw driver inserted through the cutouts in the right rear corner plate [D], tighten the screws to fasten the right rear corner plate to the table extension [B].

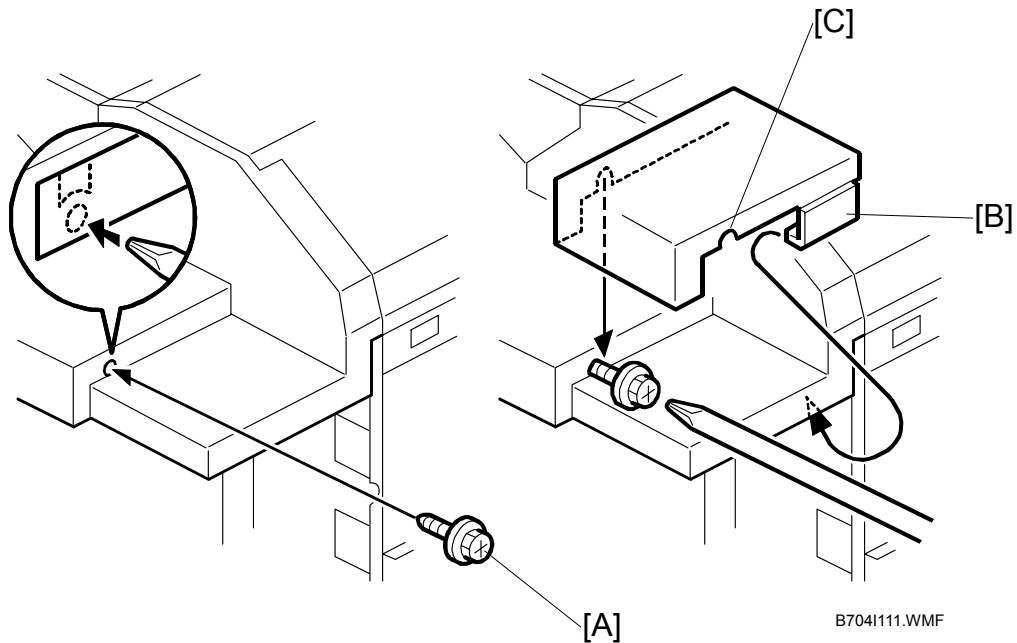

4. Temporarily attach the screw [A] (M4 x 8) with about two turns to fasten to the panel at the right front corner.
NOTE: The hole is not visible because it is covered with tape. Just punch the screw through the hole.
5. With the clamp [B] under the edge of the corner, align the cutout [C] in the right front corner plate with the screw, then snap it into position.
6. With a long screwdriver inserted into the plate cutout [C], tighten the screw to fasten the right front corner plate.

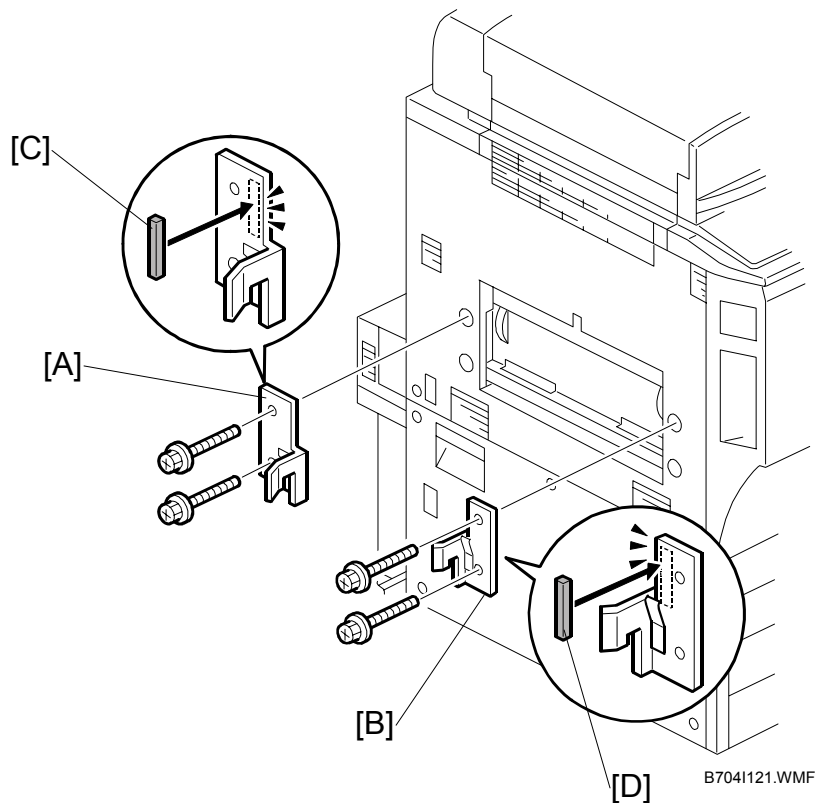Docking the Finisher and Interposer to the Machine (B700/B701/B706)

1. Attach the rear bracket [A] (⌀ x 2, M4 x14).
2. Attach the front bracket [B] (⌀ x 2, M4 x14).
3. Attach the gasket seals [C] and [D].

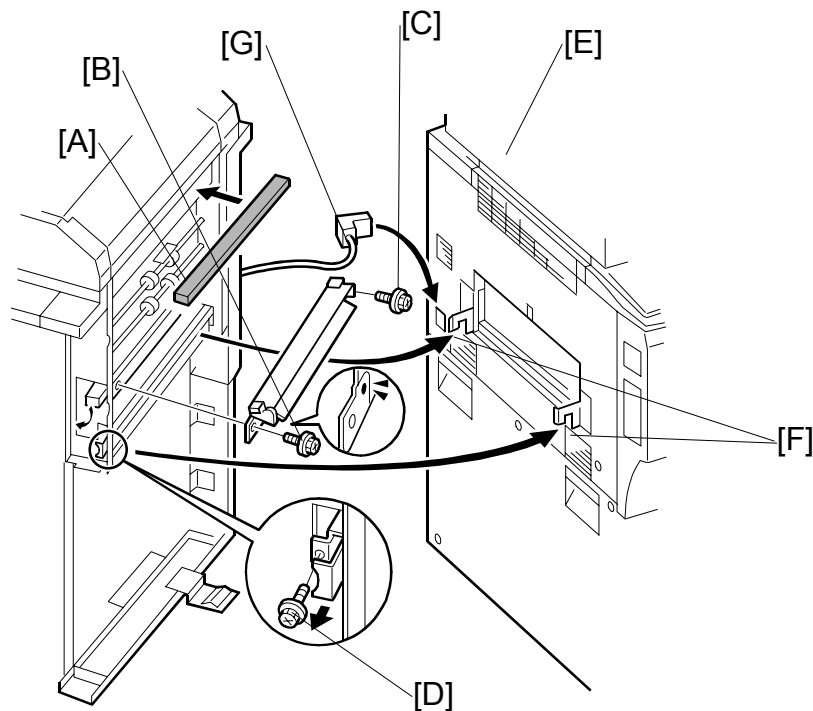

B7041106.WMF

4. Attach the sponge strip [A] that is supplied with the finisher.
5. Attach the guide plate (removed from the finisher) to the cover interposer.
 - Attach the front end [B] of the plate (⌀ x 1).
 - Attach the rear end of the plate with the anti-static brush [C] (⌀ x 1).

Important: Use the two small tapping screws that are supplied, and not the machine screws removed from the finisher guide plate.
6. Release the lock lever [D] (⌀ x 1).
7. Attach the pad [E]. (This pad is provided with the finisher.)
8. Slowly push the finisher against the side of the machine until the brackets [F] go into the slots.


⚠ WARNING!

Move the finisher carefully, or you will bend the entrance guide plates.

9. Attach the lock lever [D] (⌀ x 1).
10. Connect the connector [G] to the copier.

Important!

- Check the duct ❶ on the left side of the machine.
- Make sure that the sponge does not prevent air flow through this duct.

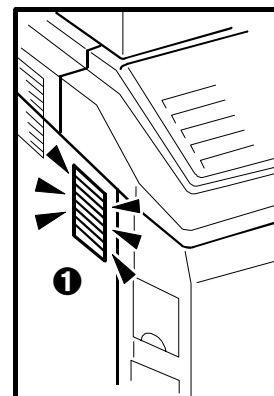


B1321734.WMF

1.17 OUTPUT JOGGER UNIT (B703)

1.17.1 ACCESSORIES



Check the accessories and their quantities against the following list.

Description	Q'ty
1. Jogger Unit	1
2. Tapping Screws - M3 x 6	2

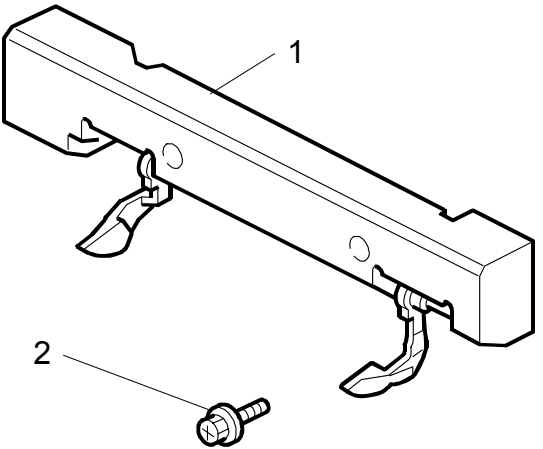

B703i101.WMF

1.17.2 INSTALLATION PROCEDURE

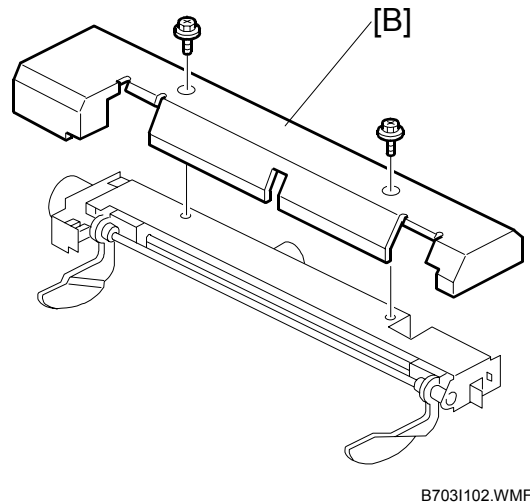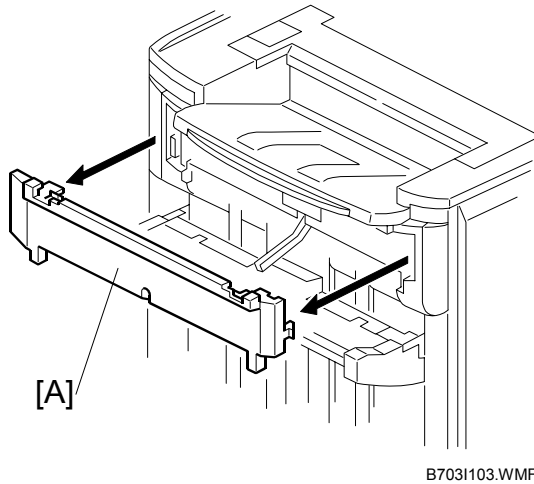


Important! The Output Jogger Unit B703 can be installed only on the 2000/3000-Sheet Finisher B700/B701.

⚠ WARNING!

Always switch the machine off and unplug the machine before doing any of the following procedures.

1. Turn the main machine switch off.
2. Disconnect the finisher from the main frame.
3. Use the flat head of a screwdriver to remove the left upper cover [A].
4. Remove the cover plate [B] (⚙ x 2). Save the screws.

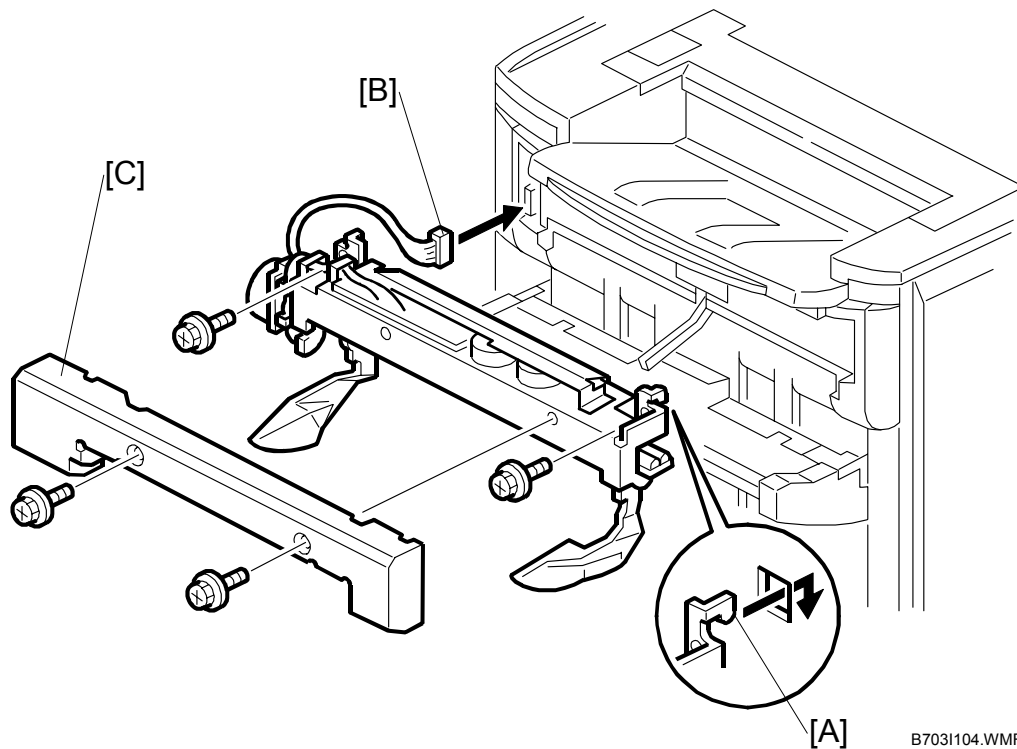


5. While you hold the jogger unit with the connector on the left, put the hooks of the frame of the jogger unit [A] into the holes in the left and right side of the finisher frame.
6. Fasten connector [B] to the socket (🔌 x 1).
7. Attach the jogger unit to the finisher (🔧 x 2).
8. Reattach the jogger unit cover [C] to the jogger unit (🔧 x 2).
9. **Set SP 6118 to 1 after you install the B703 jogger unit.**

1.18 MAIL BOX (B762)

1.18.1 ACCESSORY CHECK


Check the accessories and their quantities against the following list.

Description	Q'ty
1. Trays.....	9
2. Guide plate	1
3. Tapping screws - M3x8.....	6
4. Decals (bin display)	1

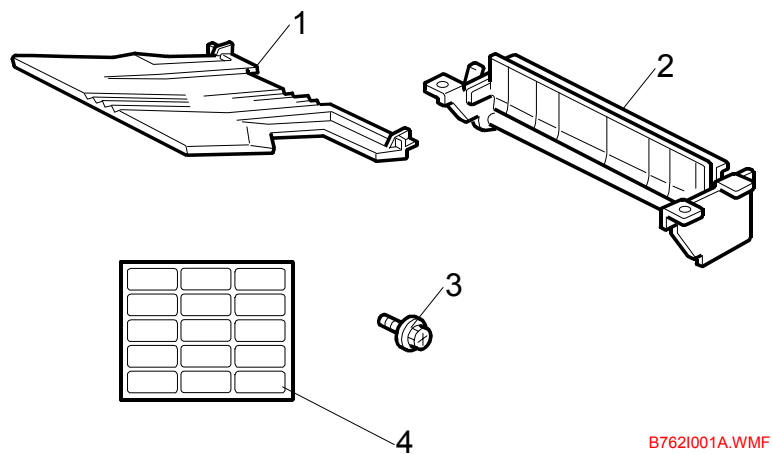

B762I001A.WMF

1.18.2 INSTALLATION PROCEDURE

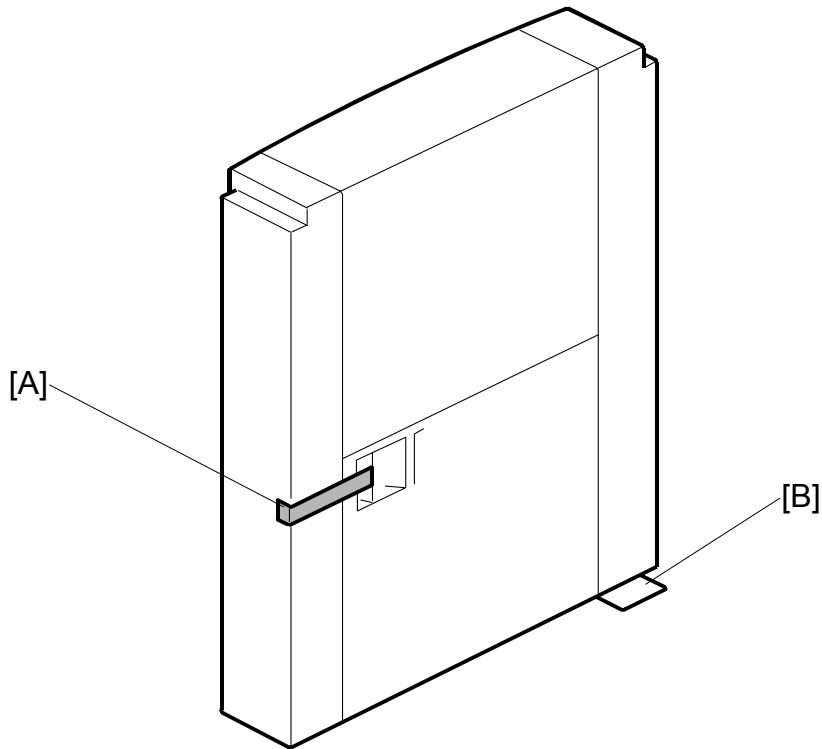


B762I101.WMF

Important! The Mail Box B762 can be installed only in the 2000/3000-Sheet Finisher B700/B701.

⚠ CAUTION


Switch the machine off and unplug the machine before starting the following procedure.

1. Remove the filament tape [A].
Important: Handle the mailbox carefully. The corner leaf [B] can be damaged easily.

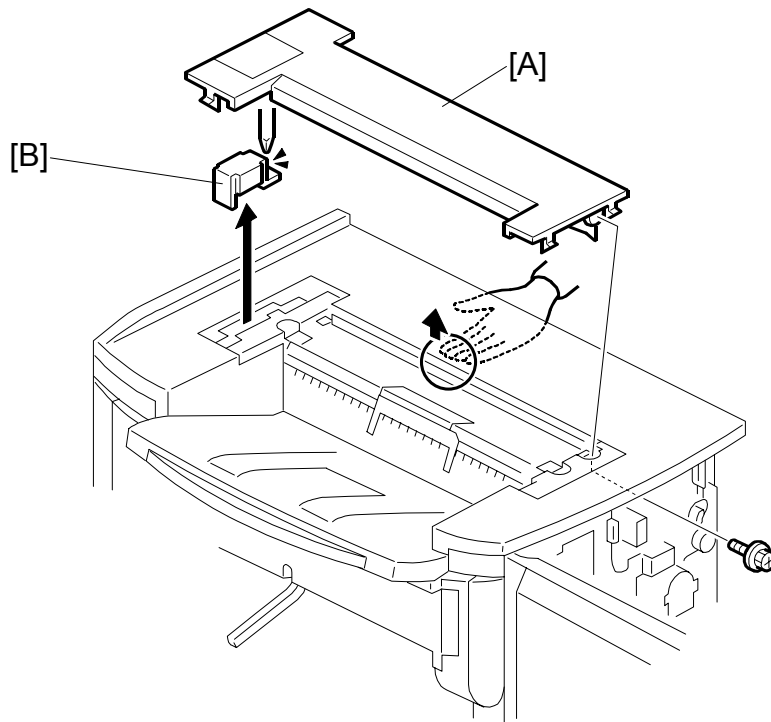


B7621102.WMF

2. If the Cover Interposer Tray B704 is installed on the B700/B701, remove it.
NOTE: The cover interposer tray and mailbox cannot be installed on the finisher at the same time.
3. Remove the top cover [A] of the finisher (⚙ x 1).
4. Remove the bracket [B] (⚙ x 1).

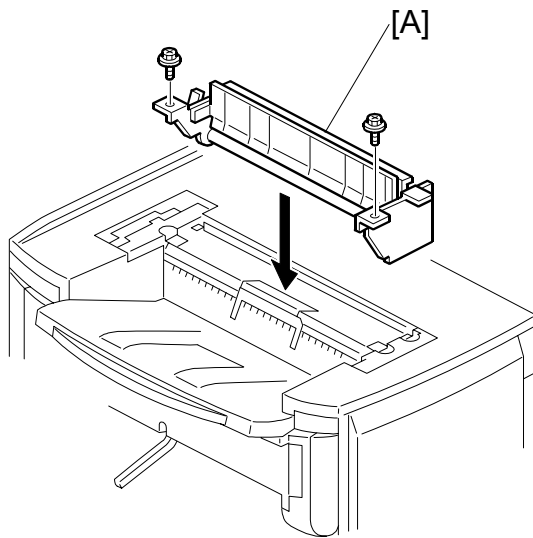

B762I103.WMF

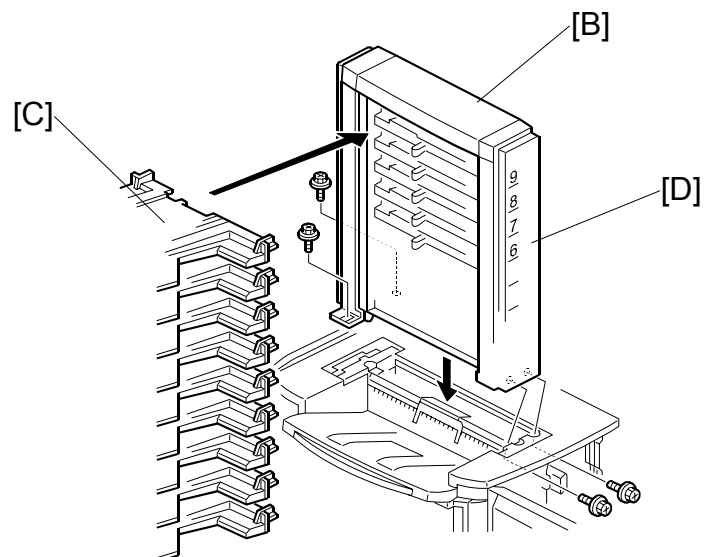

B762I104.WMF


5. Attach the guide plate [A] to the top of the finisher ($\frac{1}{8}$ x 2, M3x8).
6. Attach the mailbox [B] to the top of the finisher ($\frac{1}{8}$ x 4, M3x8).
7. Attach the 9 trays [C] to the mailbox.
8. Give the decals [D] to the customer for notation and attaching at the correct location.

1.19 COPY TRAY (B756)


1.19.1 ACCESSORIES

Check the accessories and their quantities against the following list.

Description	Q'ty
1. Copy Tray	1
2. Actuator Arm and Bracket (not used).....	1
3. Tapping Screw (not used).....	2
4. Large Cap	1
5. Small Cap	4
6. Tapping Screw (M4 x 8).....	1
7. Harness Clamp	1
8. Paper Height Sensor	1
9. Actuator Arm Bracket.....	1
10. Sensor Bracket	1
11. Actuator Arm.....	1

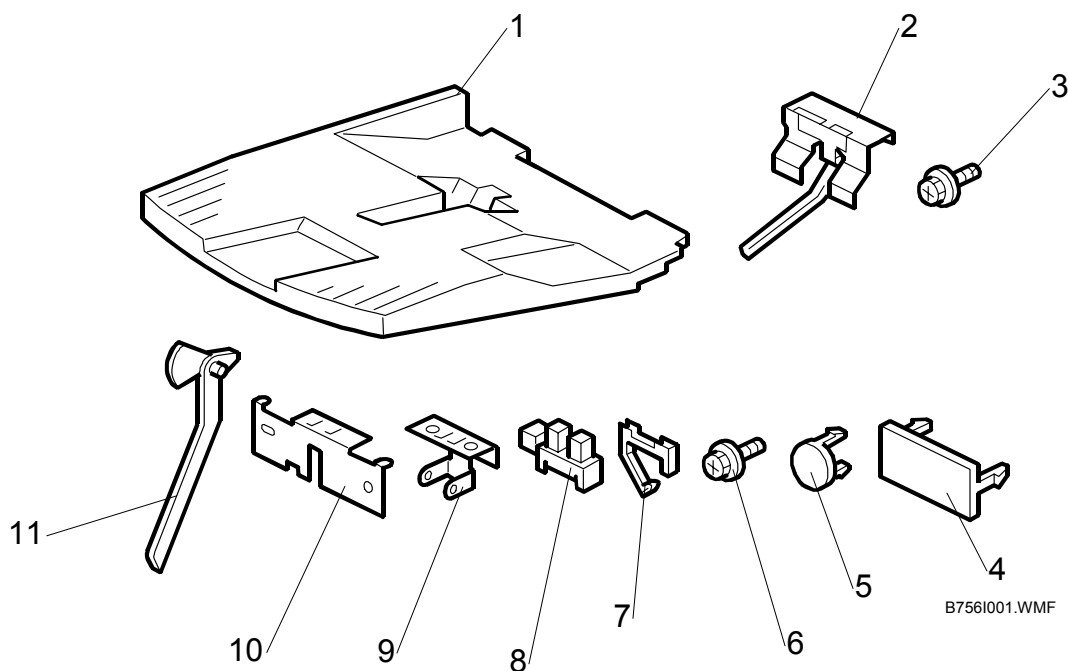


1.19.2 INSTALLATION

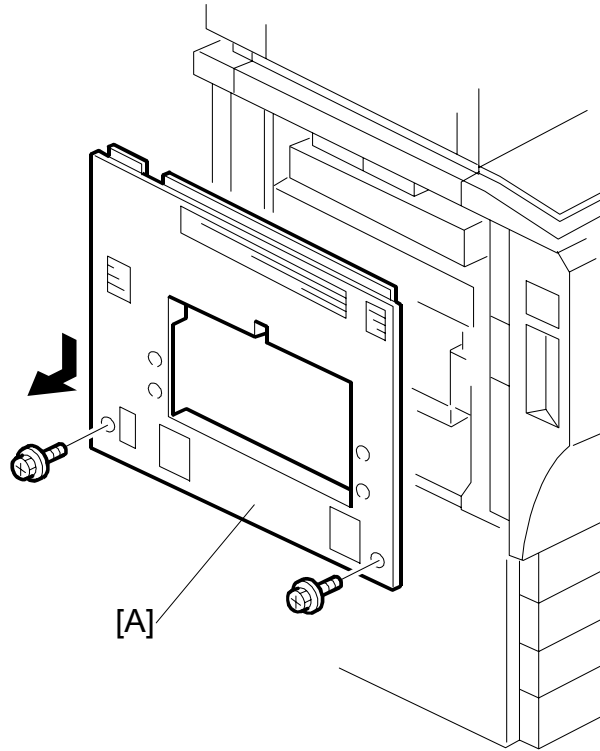

B756I101.WMF


Important! The Copy Tray B756 can be installed only on a B140 Series machine or a B246 Series machine.

1. Remove the left upper cover [A] (⚙ x 2).

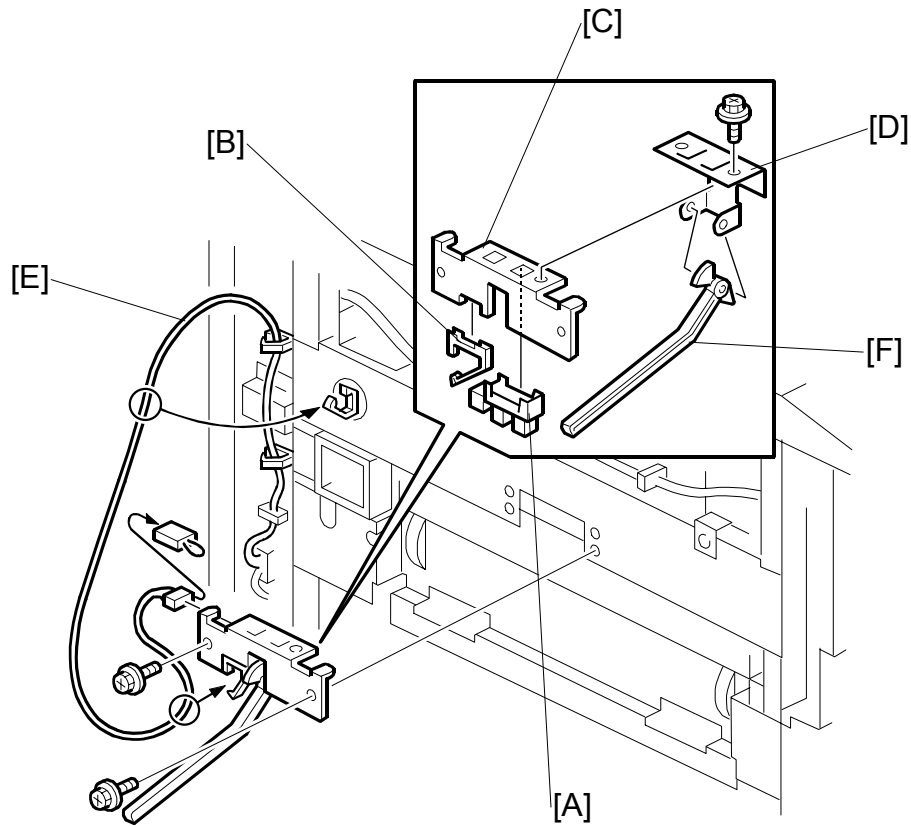

B756I003.WMF

2. Attach the paper height sensor [A] and harness clamp [B] to the sensor bracket [C].
3. Attach the sensor bracket and actuator arm bracket [D] to the copier (⚙ x 3).
4. Attach the sensor harness [E] (🔌 x 1, 📡 x 4).
5. Attach the actuator [F] to the arms of the actuator arm bracket.

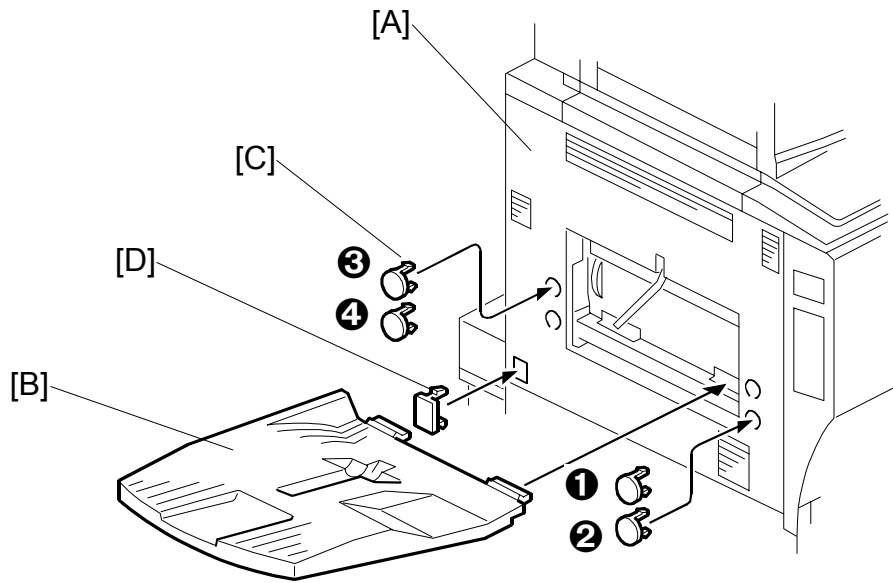

B756I002.WMF


6. Reattach the left upper cover [A] (⚙ x 2).
7. Attach the tray [B].
8. Attach the small caps [C] to the holes ①, ②, ③, ④.
9. Attach the large cap [D] to cover the finisher power connection point.

1.20 KEY CARD BRACKET (B498), KEY COUNTER BRACKET (B452)

1.20.1 KEY CARD BRACKET B498 ACCESSORIES

Check the accessories and their quantities against this list.

Description	Qty
1. Key Card Table.....	1
2. Harness Clamp.....	1
3. Tapping Screws (M3 x 8).....	4
4. Tapping Screws (M4 x 14).....	2
5. Stud	1
6. Decal	1
7. Key Card Table Support	1

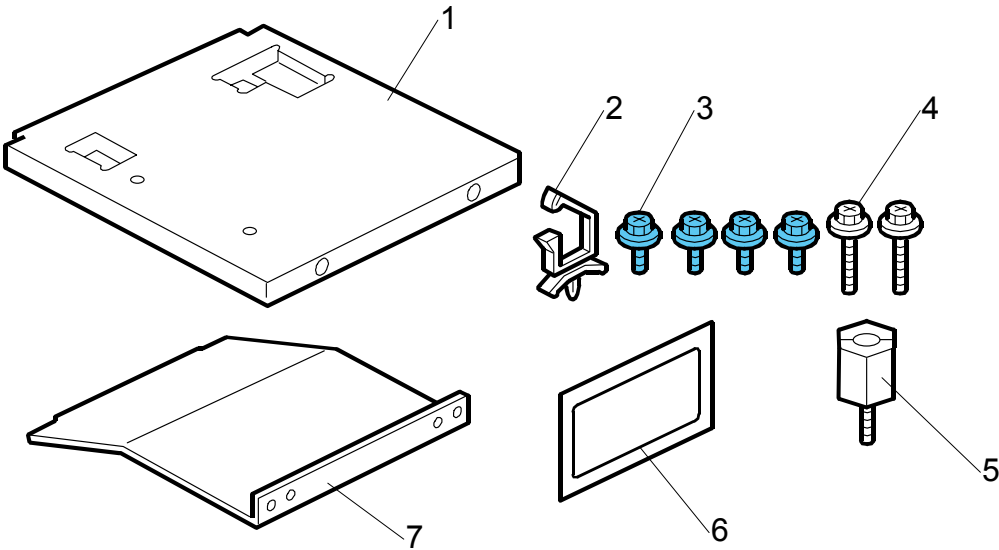


B498I001.WMF

1.20.2 KEY COUNTER BRACKET B452 ACCESSORIES

Check the accessories and their quantities against this list.


Description	Qty
1. Plate nuts.....	2
2. Rear Bracket.....	1
3. Front Bracket.....	1
4. Tapping Screws (M3 x 6).....	2
5. Tapping Screws (M4 x 8).....	3
6. Tapping Screws (M4 x 16).....	2
7. Harness	1
8. Shoulder Screw	1
9. Key Counter Bracket Cover	1
10. Key Counter Bracket.....	1

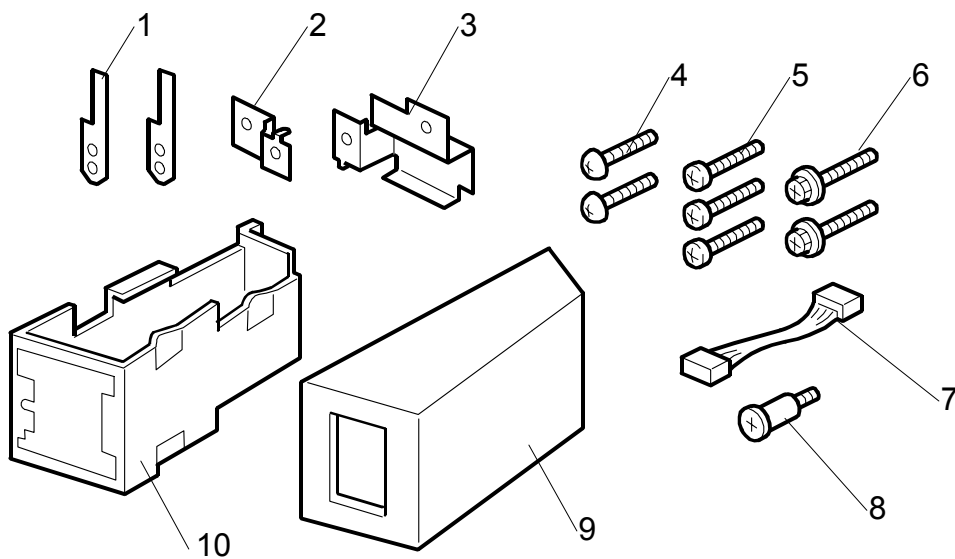

B452I001.WMF



1.20.3 INSTALLATION

Assemble the Key Counter Bracket

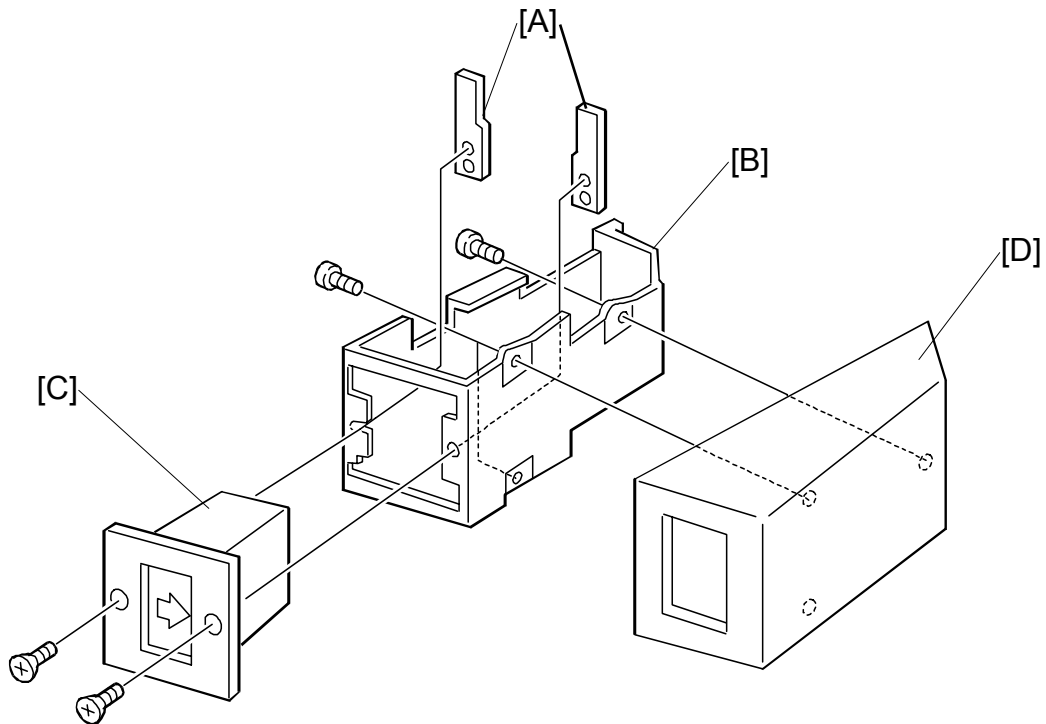


B452I002.WMF

1. Hold the key counter plate nuts [A] on the inner surface of the key counter bracket [B].
2. Attach the key counter holder [C] to the key counter bracket (⚙ x2).
3. Attach the key counter bracket cover [D] (⚙ x2).

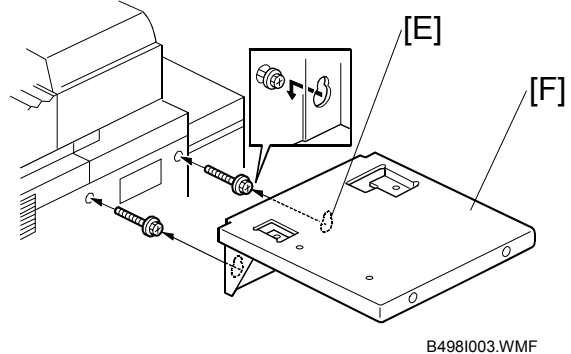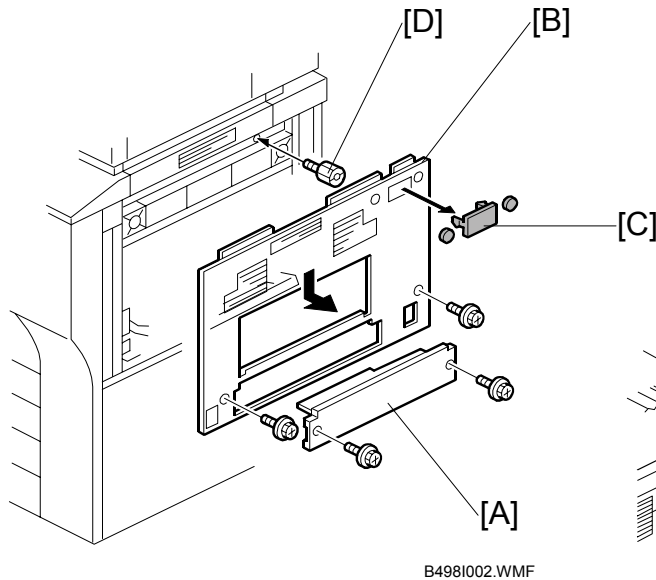Install the Key Card Bracket and Assembled Key Counter**⚠ WARNING!**

Always turn the machine off and disconnect the machine power cord before you do this procedure.

1. Remove the cover [A] (⚙ x2).
2. Remove the right upper cover [B] (⚙ x2).
3. Remove the three caps [C].
4. Attach the stud [D].
5. Put the keyholes [E] of the key card table [F] over the heads of the shoulder screws, as shown above. Then tighten the screws to attach the table (M4 x 14, ⚙ x2).

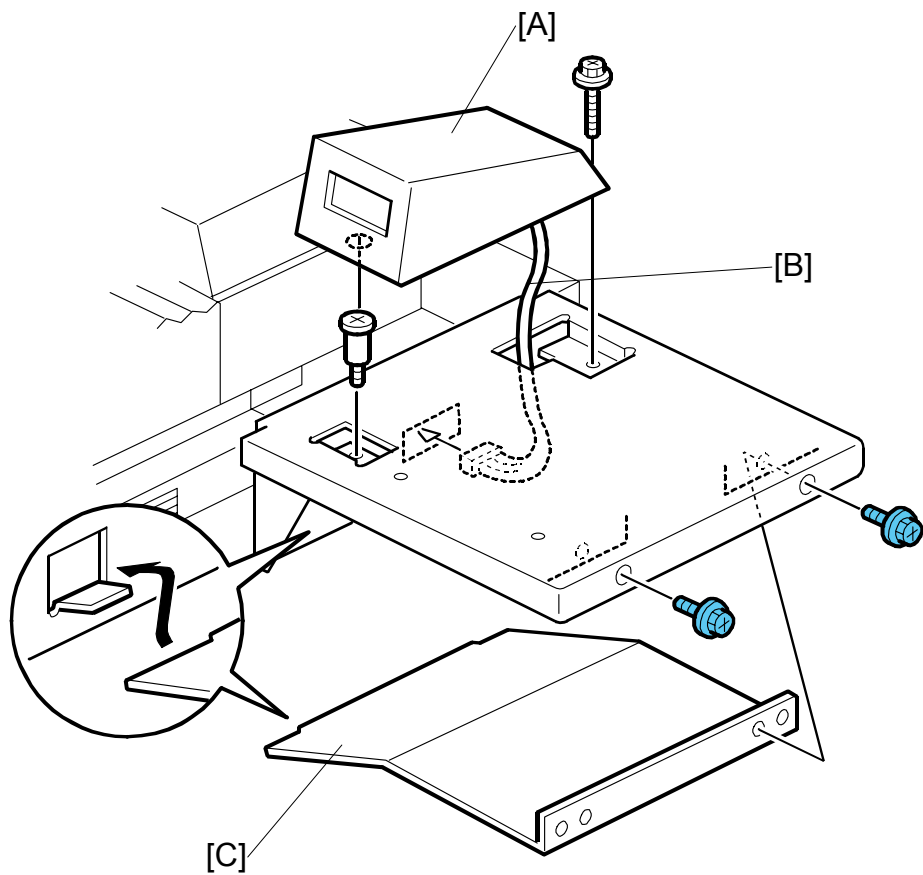

B498I004.WMF

6. Attach the key counter bracket [A] (⚙ x 2).
7. Attach the harness [B] to the key counter bracket and the machine (🔌 x 1).
8. Attach the bracket support [C] to the side of the copier (⚙ x 2).

1.21 COPY CONNECTOR KITS

1.21.1 COPY CONNECTOR KIT (B525-10, -12) FOR B064 SERIES

Important Notes

1. The following are the specialized firmware versions for use with the Copy Connector Kit or MLB option. When installing either of these options, it is necessary to install the following firmware together as a set.

Software	Part Number	Version (1st released)
GW Controller: System	B5254108	5.07
GW Controller: Copy	B5254109	5.07
BCU	B5254123	5.03d
Printer/Scanner	B5255204	4.15/5.00
NIB/Netfile	B5254114	3.00/1.79
LCDC	B5254176 (NA)	2.04
	B5254177 (EU)	

2. With the Copy Connector/MLB modifications, the machine firmware has been divided up into 2 main groups:
 - 1) The Copy Connector/MLB group (beginning with the versions listed above)
 - 2) The usual firmware used up to the present, i.e. for machines without the Copy Connector or MLB options.


Important: Firmware from these two groups **cannot** be used interchangeably. Always update **within** the same group, otherwise the machine will not operate correctly.

3. The Copy Connector Kit and MLB options cannot be installed in the same machine. It is necessary to install one or the other.
4. As shown above, the GW controller firmware for the Copy Connector/MLB group has been divided into GW System and GW Copy, as the increased size has exceeded the card's storage capacity.

ACCESSORY CHECK

Check the accessories and their quantities against this list:

Description	Q'ty
1. Copy Connector Board	2
2. MLB Interface Board	2
3. Interface Cable	3
4. Interface Harness – Power Line	2
5. Hub	2
6. Key Top – Application	6
7. Key Top – Printer	2
8. Anti-static Cap	2
9. Knob Screw	4
10. Decal – Copy Connector	4
11. Tapping Screw – M3 x 8	4

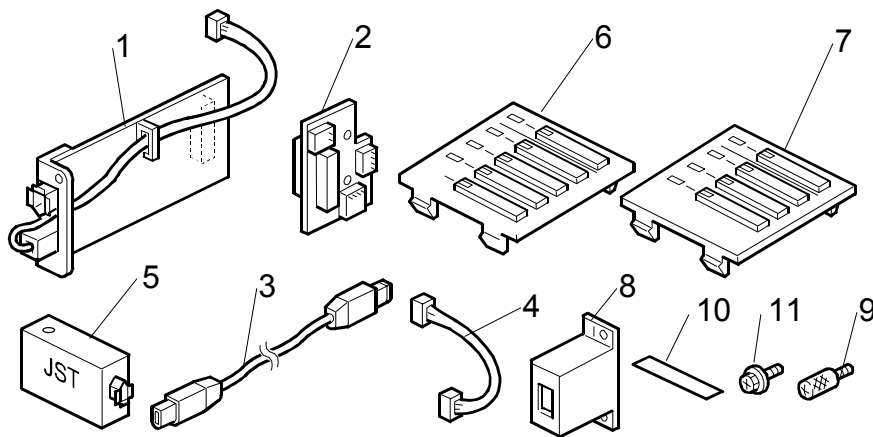


B246MTC1CCK.WMF

Installation**⚠ CAUTION**


Unplug the machine main power cord before starting the following procedure.

Perform the following procedures for both the main and sub copiers.

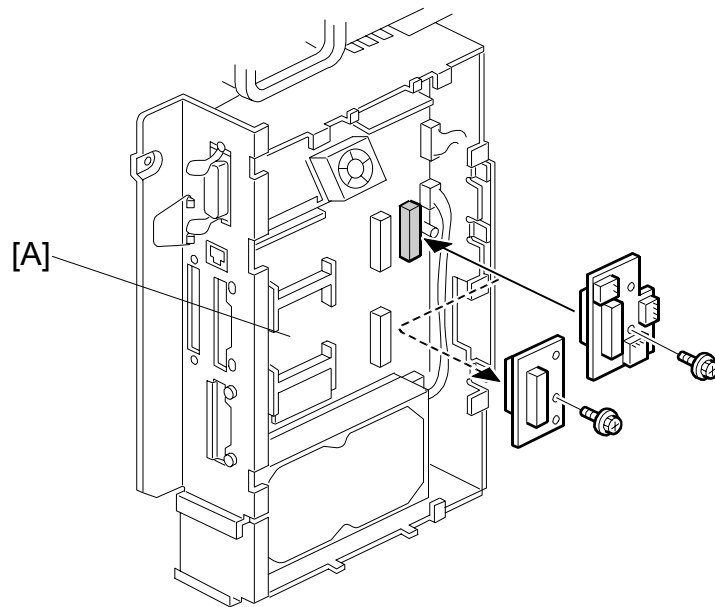Installing the Firmware: B064 Series

B110I201.WMF

1. Remove the rear cover (⚙ x 2).
2. Remove the controller cover (⚙ x 10).
3. Turn on DIP SW2-1 on the controller board [A].
4. Install the following firmware.
 - GW Controller (System and Copy)
 - Printer/Scanner
 - NIB Netfile
5. Turn off DIP SW2-1 on the controller board.
6. Install the following firmware.
 - BCU
 - LCDC

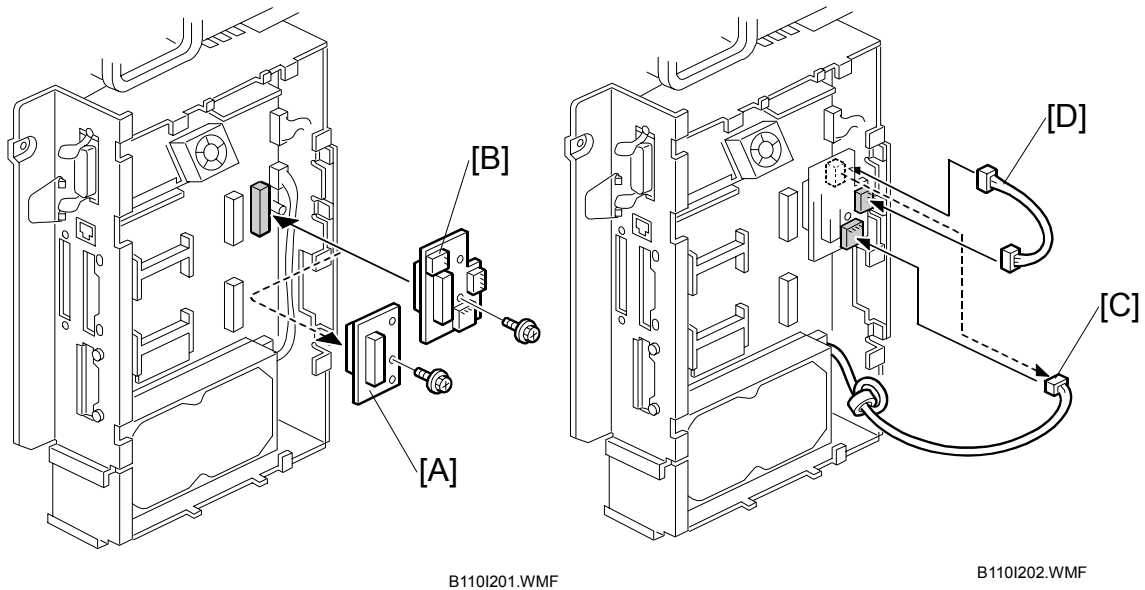
Installing the Hardware

1. Replace the interface board [A] with the MLB Interface Board [B].



NOTE: This step is not necessary from the following Serial Numbers:

Part Number	Serial Number	Part Number	Serial Number
B06417	J4235300054	B06517	J4335300191
B06419	J42304XXXXX	B06519	J43304XXXXX
B06422	J42304XXXXX	B06522	J43304XXXXX
B06424	L1283040001	B06524	L1293040001
B06426	7P10430001	B06526	7P20430001
B06427	J4230300409	B06527	J43304XXXXX
B06428	J42304XXXXX	B06528	J43304XXXXX
B06429	J42304XXXXX	B06529	J43304XXXXX
B06469	J42304XXXXX	B06569	J43304XXXXX

2. Remove the 4P connector [C] for the HDD and connect it to CN319 on the MLB Board.
3. Connect one end of the power interface harness [D] to the HDD connector, and the other end to CN318 on the MLB Board.

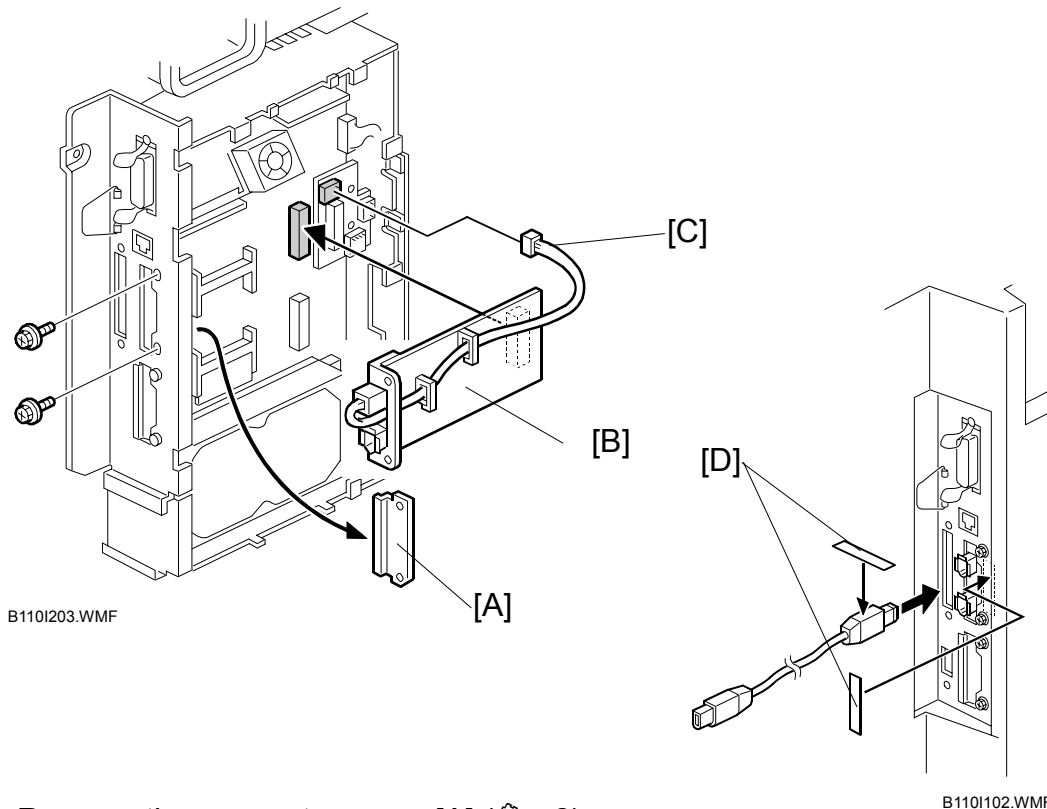


4. Remove the connector cover [A] ($\times 2$).
5. Install the CCK interface board [B] as shown.
6. Connect the harness [C] to CN315 on the MLB Board.
7. Attach the decals [D] as shown.

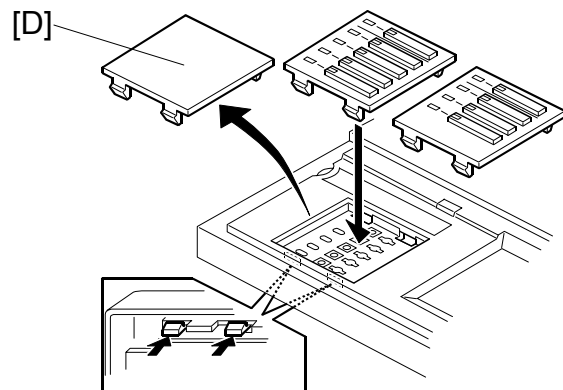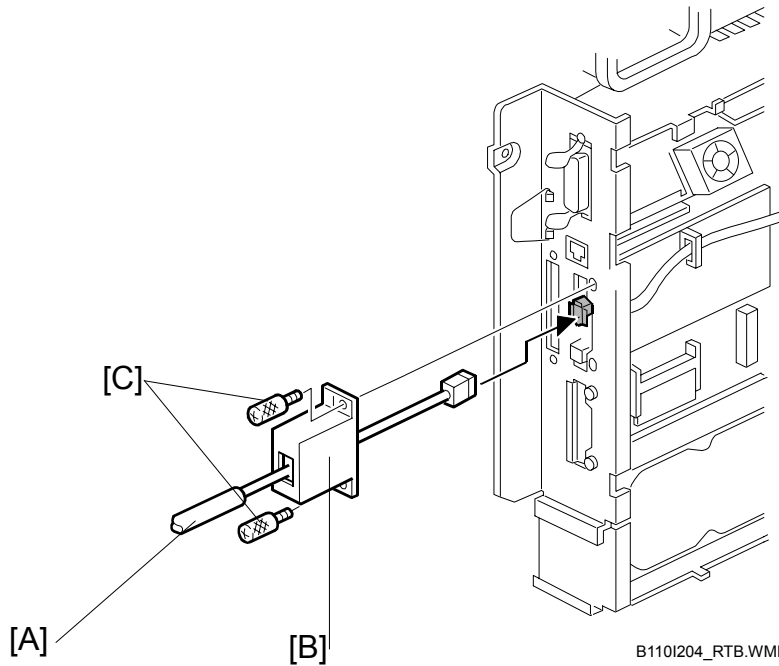

8. Lead the interface cable [A] through the anti-static cap [B], and then connect it to the interface board.
9. Attach the anti-static cap (2 knob screws [C]).
10. Replace the key top [D].
11. Repeat both the firmware and hardware procedures above for the other copier.

12. Perform Steps 12 and 13 below if the distance between the two machines is more than 4.5m.

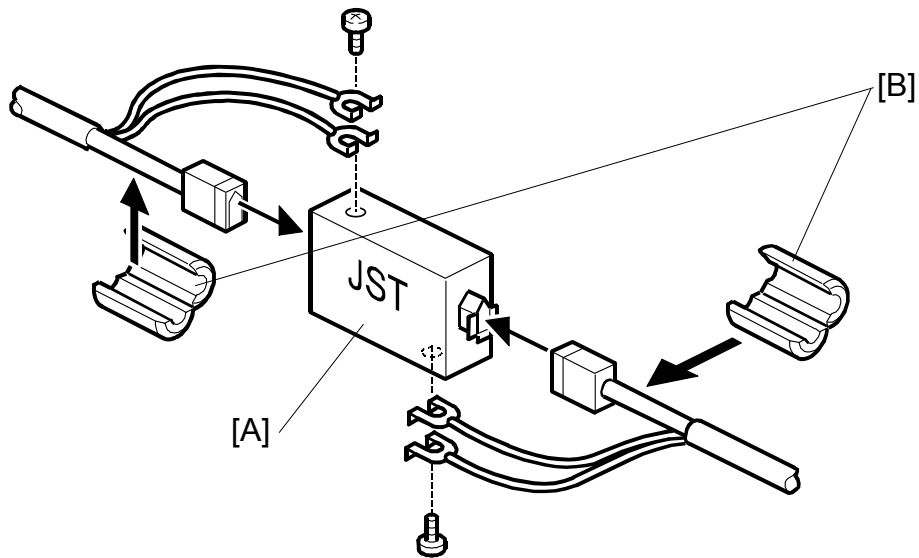

B110I205.WMF

13. Use the Hubs [A] to connect the interface cables.

NOTE: When connected in this way, the maximum length possible is 13.5m (3 interface cables).


14. Attach the ferrite cores [B] as shown.

1.21.2 COPY CONNECTOR KIT (B328-03) FOR B140 SERIES

ACCESSORY CHECK

Check the accessories and their quantities against this list:

Description	Q'ty
1. Interface Cable 1394	3
2. Repeater Hub 1394	2
3. Connection PCB	2
4. Power Repeater Cable	2
5. Keytops for B070/B071 (NA, EU 1 each)	
"Other Function"	2
"Printer/Other Function"	2
6. Keytops for B140 series (NA, EU 1 each)	
"Other Function"	2
"Printer/Other Function"	2
"Printer/Other Function" + Scanner	2
7. SDRAM DIMM 64 MB	2
8. Operating Instructions (NA)	1
9. CD-ROM (Operating Instructions for EU)	1

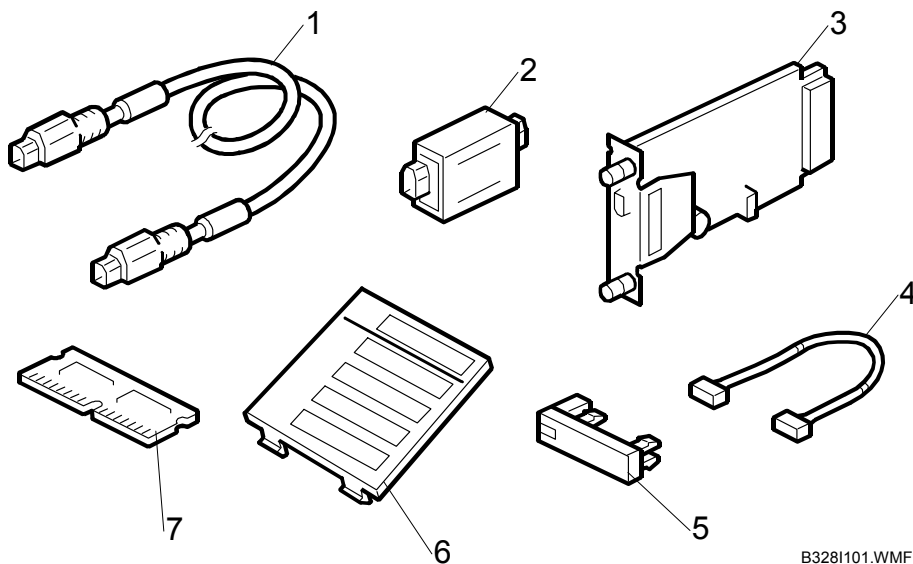

B328I101.WMF

Preparation

Before you begin the installation procedure:


- Check the distance between the machines to be connected.
- Check if the printer/scanner option is installed on the machines.

Measure the distance between the machines. Then check the number of cables and repeater hubs that are necessary.


DISTANCE	POWER REPEATER HUBS	INTERFACE CABLES
Up to 4.5 m (14.8 ft.)	None	1
4.5 ~ 9.0 m (14.8 ~ 29.5 ft)	1	2
9.0 ~ 13.5 m (29.5 ~ 112.5 ft.)	2	3

Three sets of key-tops (2 per set, 1 for NA, 1 for EU) are included for each machine, but you must install only one key-top on each machine.

- Install the key labeled “Printer/Other Function + Scanner” (or its equivalent symbol key-top for EU) on a machine with the printer/scanner option installed
- Install the key labeled “Other Function” (or its equivalent symbol key-top for EU) on a machine without the printer/scanner option.

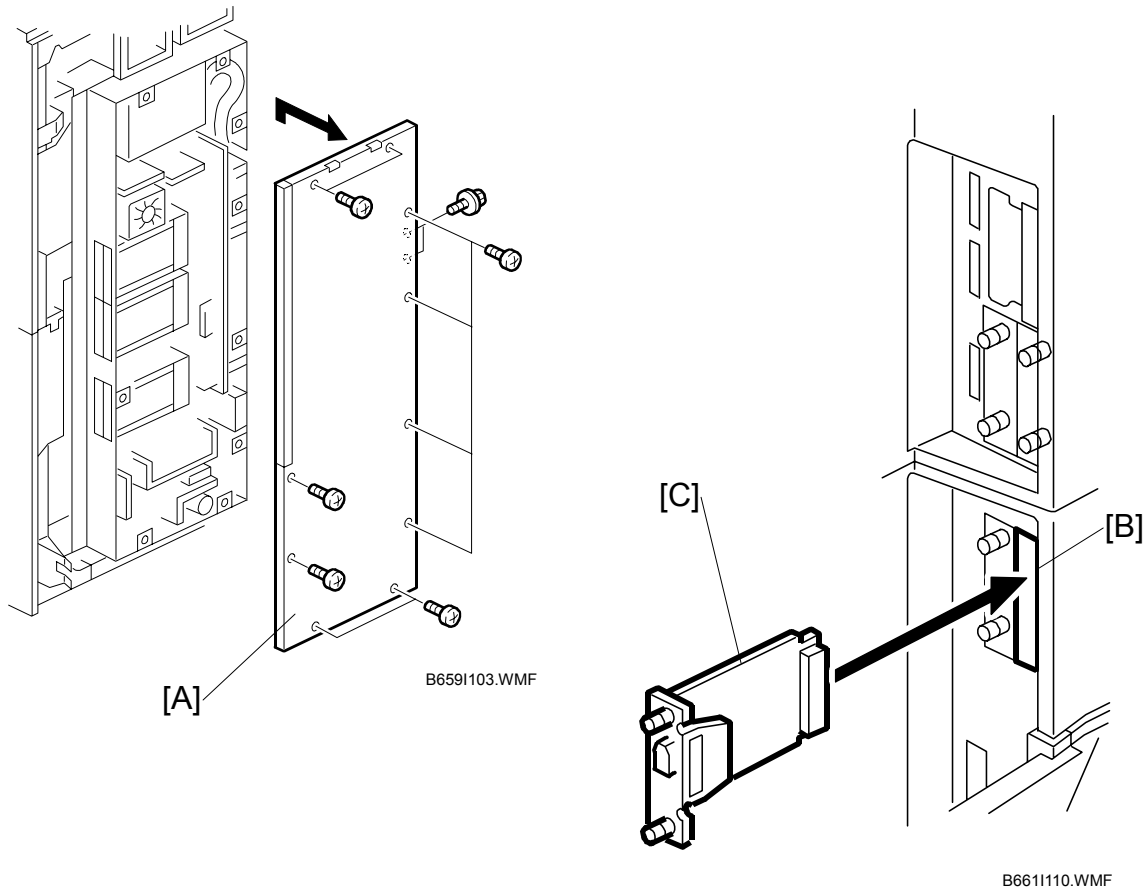Installation


1. Remove the rear cover.
2. Remove the controller box cover [A] (x 12).
3. Remove the cover from Slot A2 [B] (x 2).
4. Put the Copy Connector Kit board [C] in Slot A2 and tighten the knob screws (x 2).

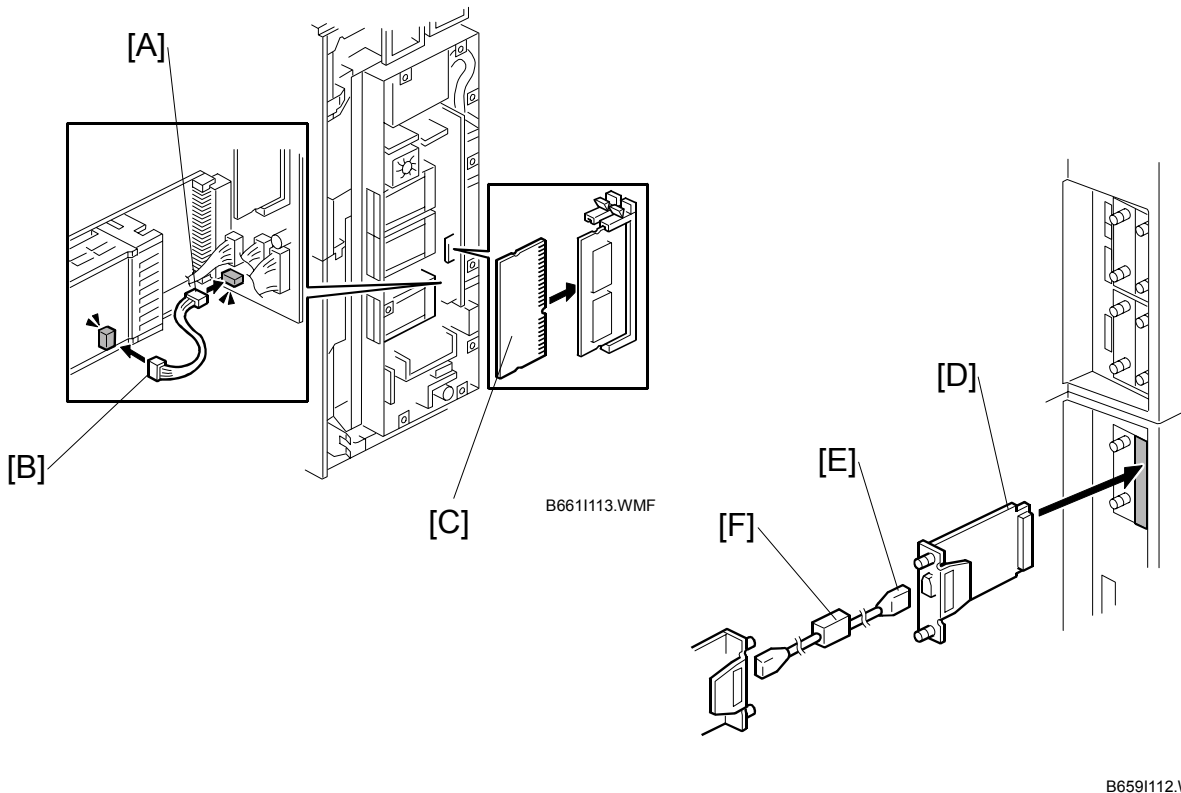

5. Connect one end [A] of the power supply harness to the mother board (Ⓜ x 1).
6. Connect the other end [B] of the power supply harness to the connector board (Ⓜ x 1).
7. Connect the 64 MB DIMM [C] to the mother board.
NOTE: This memory chip is a data transfer buffer.
8. Connect the connector board [D] to Slot A2.
9. Connect one end of the connector cable [E] to the copy connector board.
10. Connect the other end of the cable to the other machine.

-or-

If the distance between the machines is more than 4.5 m (14.8 ft.), connect the cables to a connector hub [F].

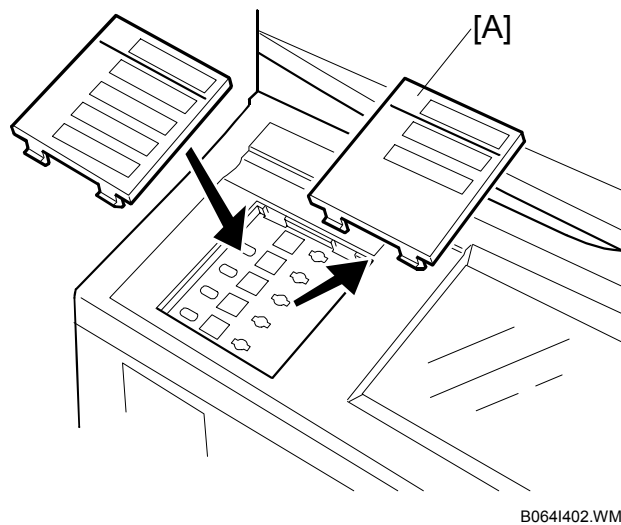


15. Replace the key tops [A].
16. Repeat the firmware and hardware procedures above for the other copier.

1.21.3 COPY CONNECTOR (B842) FOR B246 SERIES

Accessories

Description	Q'ty
1. Tandem/FCU Mount	2
2. Copy Connector Board B842.....	2
3. Power Repeater Cable	2
4. Coupling Interface Cable 1394	3
5. Screws.....	3
6. Repeater Hub 1394	2
7. Keytops.....	2

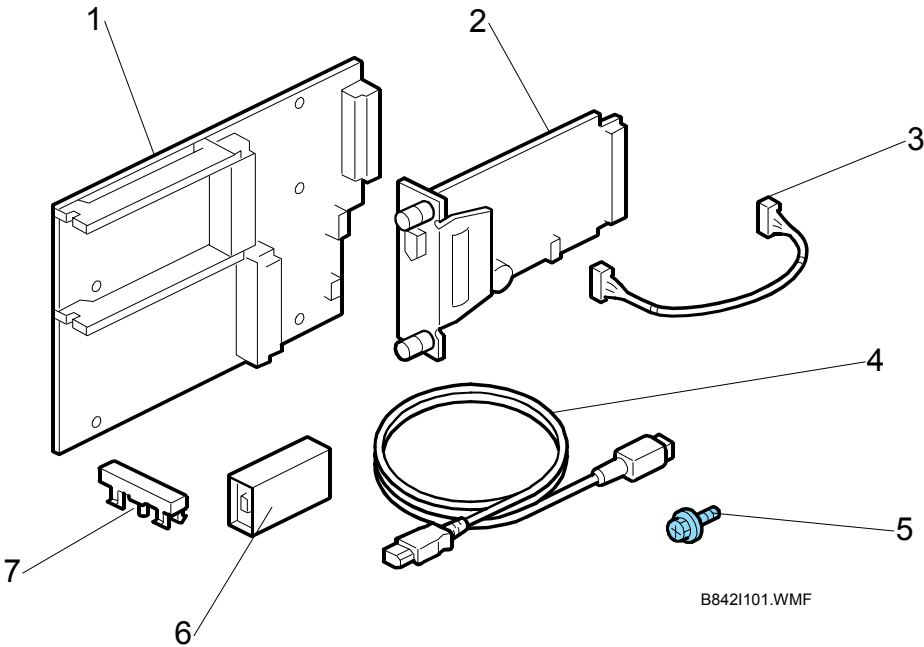

Preparation


Before you begin the installation procedure:

- Measure the distance between the machines to be connected.
- Confirm that the printer/scanner option is installed on the machines.

Determine the number of cables and repeater hubs that are necessary based on the distance measured between the machine.

DISTANCE	POWER REPEATER HUBS REQUIRED	INTERFACE CABLES REQUIRED
Up to 4.5 m (14.8 ft.)	None	1
4.5 ~ 9.0 m (14.8 ~ 29.5 ft)	1	2
9.0 ~ 13.5 m (29.5 ~ 112.5 ft.)	2	3

- Install the key labeled “Printer/Other Function + Scanner” (or its equivalent symbol key-top for EU) on a machine with the printer/scanner option installed
- Install the key labeled “Other Function” (or its equivalent symbol key-top for EU) on a machine without the printer/scanner option.


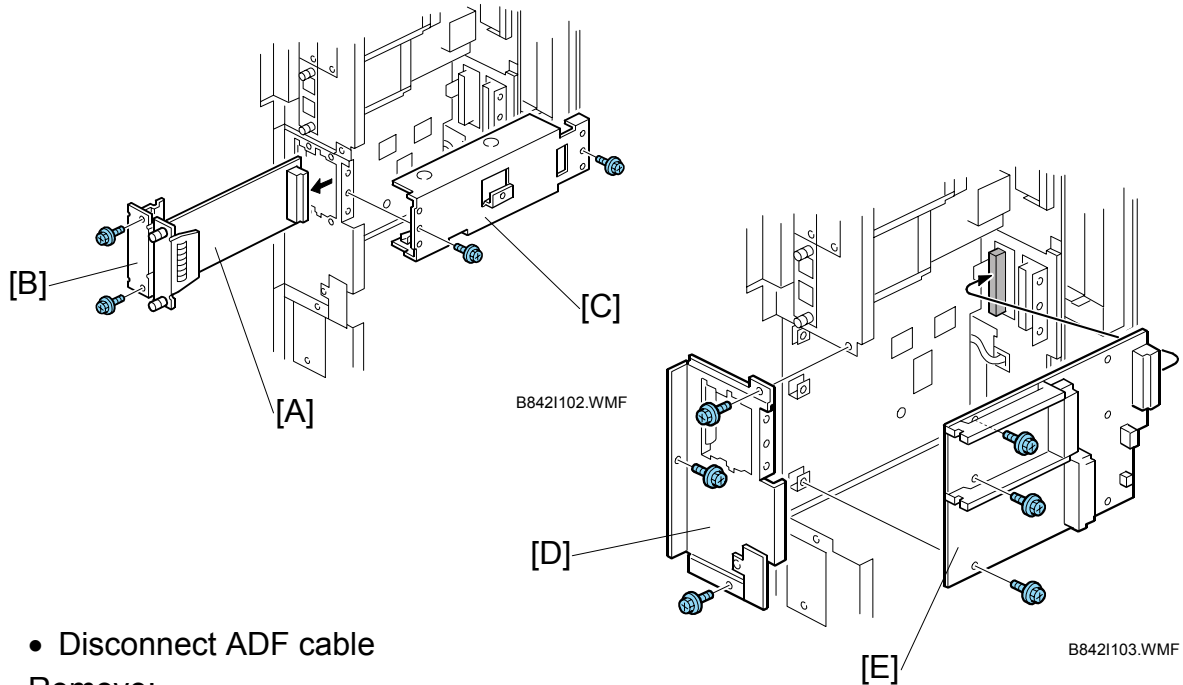
Installation

- Disconnect ADF cable



Remove:

- Rear upper cover (⌘ x2) (⚙ 3.3.5)
- Rear lower cover (⌘ x2) (⚙ 3.3.5)
- Controller box cover (⌘ x13)

1. If a file format converter board [A] is installed in slot **A2**, remove it (Knob ⌘ x2).
2. Remove the slot cover [B] of slot **A1** (⌘ x2).
3. Remove the file format converter mount [C] (⌘ x2).
4. Remove the lower board slot face plate [D] (⌘ x3).
5. Insert the Tandem/FCU mount [E] and fasten it (⌘ x3).
 - Confirm that the edge connector fastened to the mother board before you fasten the screws.

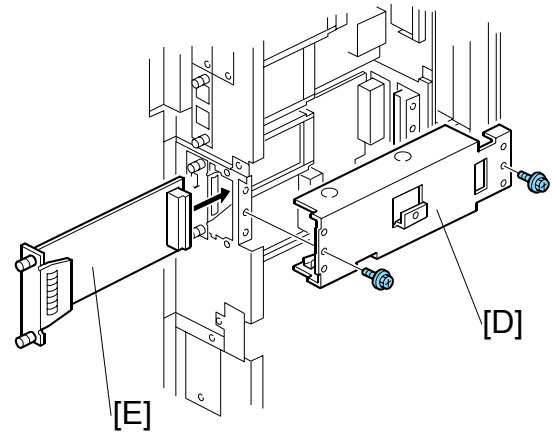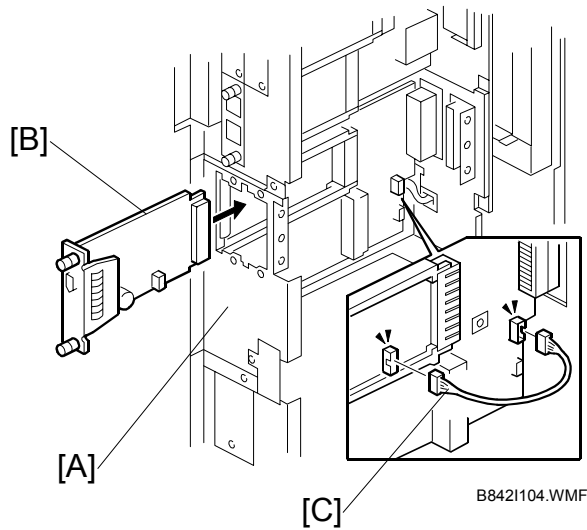

6. Reattach the slot face plate [A] (⌘ x3).
7. Insert the copy connector board [B] and fasten it (Knob ⌘ x2)
8. Connect the power repeater cable [C] to the copy connector board and the Tandem/FCU mount (⌘ x2).
9. Reattach the file format converter mount [D] (⌘ x2)
10. If the file format converter [E] was removed from slot **A2**, reinstall it (Knob ⌘ x2)

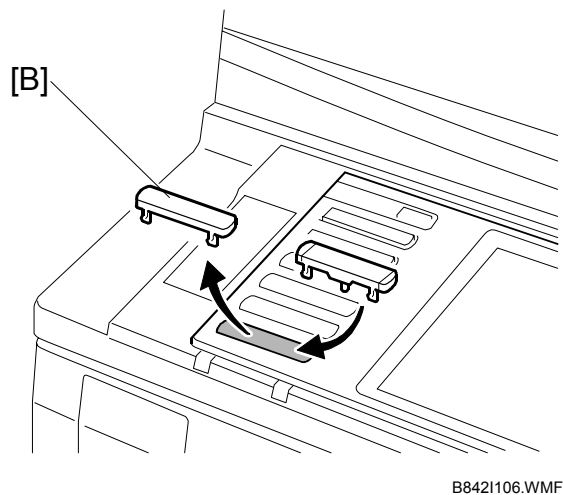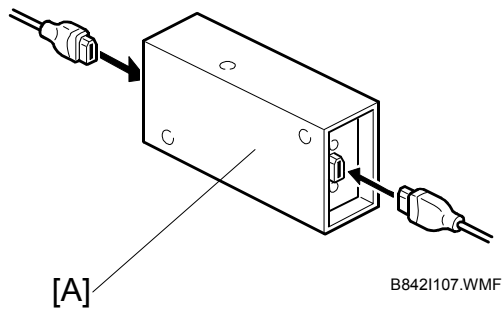

11. Do Steps 1-10 to install the PCBs in the other machine.

12. Connect the machines with the coupling interface cable.

-or-

If the distance between the machines is more than 4.5 m (14.8 ft.), use two cables by connecting them with a connector hub [A].

13. Replace the keytops [B] on both machines.


1.22 MFP OPTIONS: B064 SERIES

1.22.1 PRINTER/SCANNER KIT (G338), PRINTER KIT (G339)

ACCESSORY CHECK

Check the accessories and their quantities against this list:

Description	Q'ty
1. Scanner/Printer DIMM (G338) or Printer DIMM (G339)	1
2. Centronics Interface.....	1
3. NIB	1
4. Screws - M3 x 8.....	2
5. Ferrite Core	1
6. Key Top Assembly	1
7. Keytop Plate Sheet.....	1
8. Shading Plate	1
9. CD-ROM.....	2

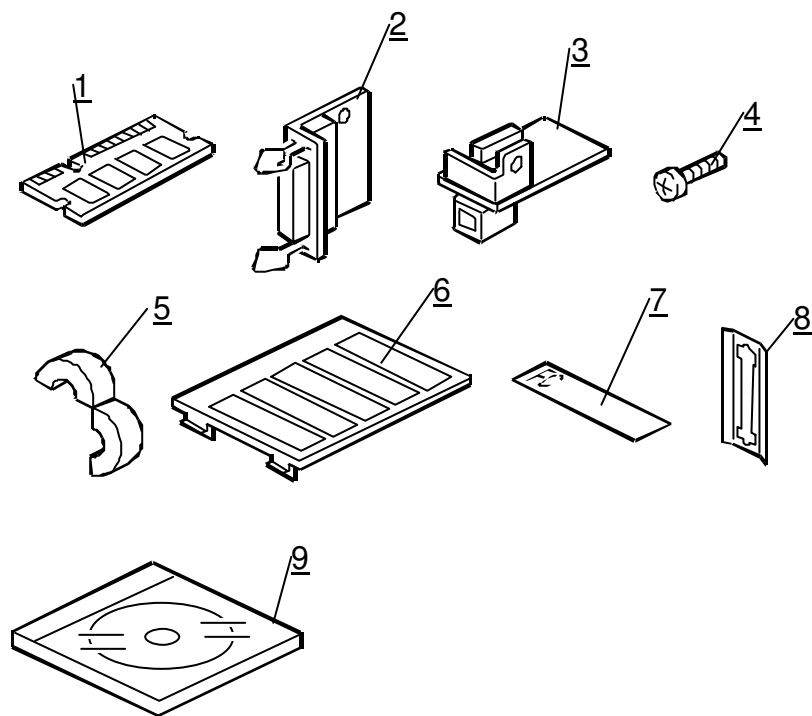

B246MTC1PS.WMF


1.22.2 INSTALLATION PROCEDURE

Inserting DIMMs

Read this section carefully before installation so you know how to insert the DIMMs correctly.


CAUTION

Follow the procedure below to connect the DIMMs to the controller board. Incorrect insertion can damage the controller board or cause a bad connection between the DIMM and controller contacts. If the upper contact is pressed in and bent, the resulting poor connection could cause the entire system to not operate.

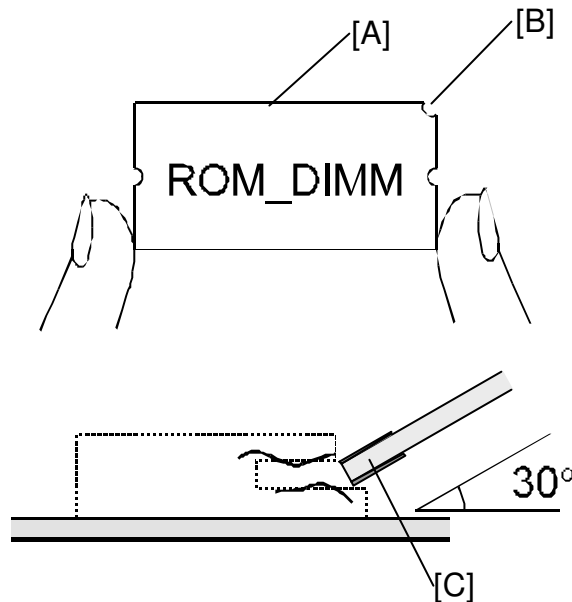

G338I901.WMF

1. Hold the ROM DIMM with the edge connector [A] pointing toward the slot and the notch [B] on the DIMM in the upper right corner.
2. Insert the edge connector [C] into the slot at a 30-degree angle from the surface of the board.
NOTE: If the angle is too low, the upper contact could bend.
3. Move the outside edge of the ROM DIMM up and down slightly until it works into the connector, then gently press it down level with the controller board.

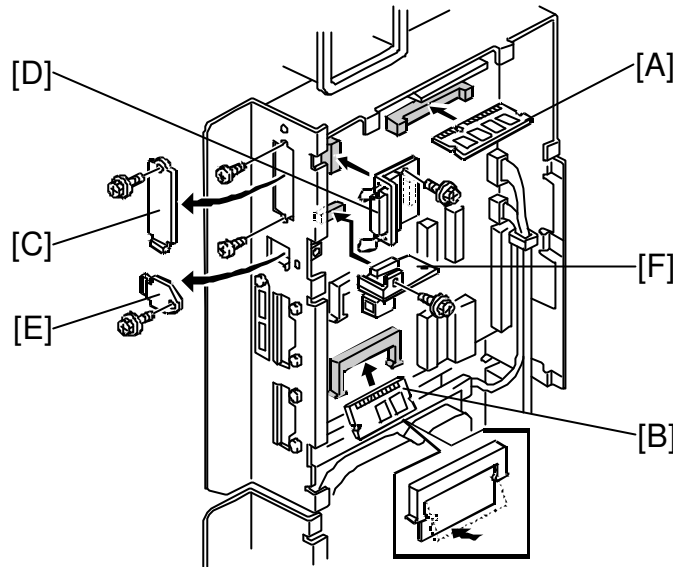Installation Procedure

G338I201.WMF

CAUTION

Switch the machine off and unplug the machine before starting the following procedure.

NOTE: The printer/scanner unit requires at least 128 MB of memory (more is recommended). Memory chips are not packaged with this unit.

1. Disconnect the ADF cable.
2. Remove the rear upper cover ($\sigma \times 2$).
3. Remove the controller cover ($\sigma \times 10$).

CAUTION


Make sure that the DIMMs are inserted correctly.

4. Insert the SDRAM DIMM (expansion memory 128 MB or 256 MB) [A] into PC133 on the controller.
5. Insert the ROM DIMM [B] (printer/scanner) board into Slot 1.
6. Remove the Centronics connector cover [C] and insert the Centronics connector [D] into CN310 and fasten with the provided screws ($\sigma \times 2$).

Rating voltage of interface connectors: Max. DC 5V

7. Remove the slot covers [E] ($\sigma \times 2$).
8. Install the NIB [F] into CN311 ($\sigma \times 1$).


Rating voltage of interface connectors: Max. DC 5V

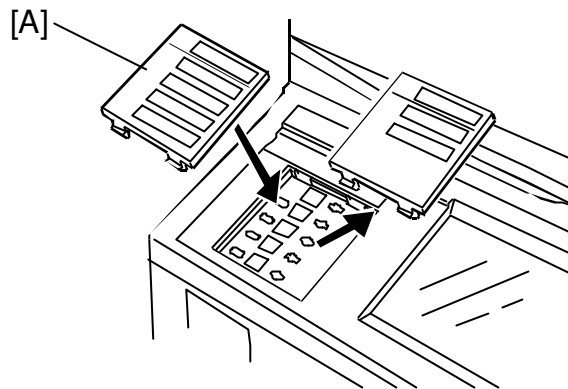

G338I402.WMF

9. Attach the provided decal near the machine name on the copier.
10. Wrap the Ethernet cable three times inside the ferrite core, close the ferrite core, then connect the modular jack to the NIB.
11. Follow the procedures in the instruction manuals to perform the user settings.
12. Replace the key top assembly [A].

1.22.3 PS3 (B525-08)

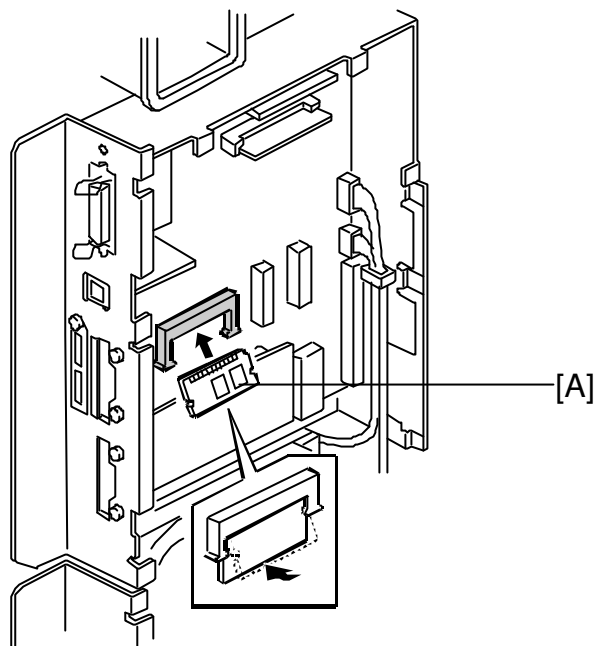

B064I204.WMF

1. Remove the rear upper cover (σ x 2).
2. Remove the controller cover (σ x 10).
3. Insert the PS3 module [A] into Slot 2.

CAUTION**Make sure that the DIMM is inserted correctly. (* 1.22.2)**


1.22.4 USB 2.0 (B525-01)

ACCESSORY CHECK

Check the accessories and their quantities against this list:

Description	Q'ty
1. USB 2.0 PCB	1

Installation Procedure

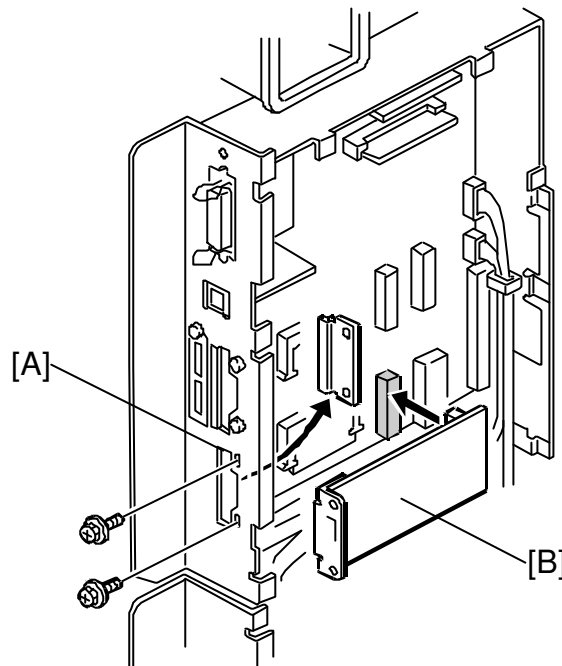

B0641202.WMF

CAUTION

Switch the machine off and unplug the machine before starting the following procedure.

1. Remove the rear upper cover ($\sigma \times 2$).
2. Remove the controller cover ($\sigma \times 10$).
3. Remove the slot cover [A] ($\sigma \times 2$).
4. Insert the USB board [B] into the PCI slot.
5. Fasten the slot cover to the USB board ($\sigma \times 2$).
6. Use SP5990-005 to print a Self-Diagnostic Report with the system settings and confirm that the machine correctly recognizes the interface.

USB SP Settings

The following SP commands are available. However, only one setting may require adjustment and this setting should be performed only if the customer is experiencing USB data transmission errors.

NOTE: Do not change the settings marked “DFU”. These settings are for design and factory use only.

To enter the SP mode:

1. Press Clear Modes \varnothing
2. On the operation panel keypad, press $\alpha\phi\gamma$.
3. Hold down Clear/Stop \circ for more than 3 seconds.
4. Press “Copy SP” on the touch-panel to open the SP command selection screen.

B0641999.WMF

5. Enter "5844".


SP No.	Name	Function
5844-001	Transfer Rate	Adjusts the USB transfer rate. Do not change the setting unless there is a data transfer error using the USB high speed mode.
		HS/FS: High speed/Full speed auto adjust (480Mbps/12Mbps)
		FS: Full speed (12Mbps fixed)
5844-002	Vendor ID	Displays the vendor ID. DFU
5844-003	Product ID	Displays the product ID. DFU
5844-004	Dev. Release Num	Displays the development release version number. DFU

1.22.5 IEEE1394 (G561) FIREWIRE INTERFACE

ACCESSORY CHECK

Check the accessories and their quantities against this list:

Description	Q'ty
1. IEEE-1394 Cable 2M 4Pl.....	1
2. IEEE-1394 Cable 2M 6Pl.....	1
3. PCB GW1394	1

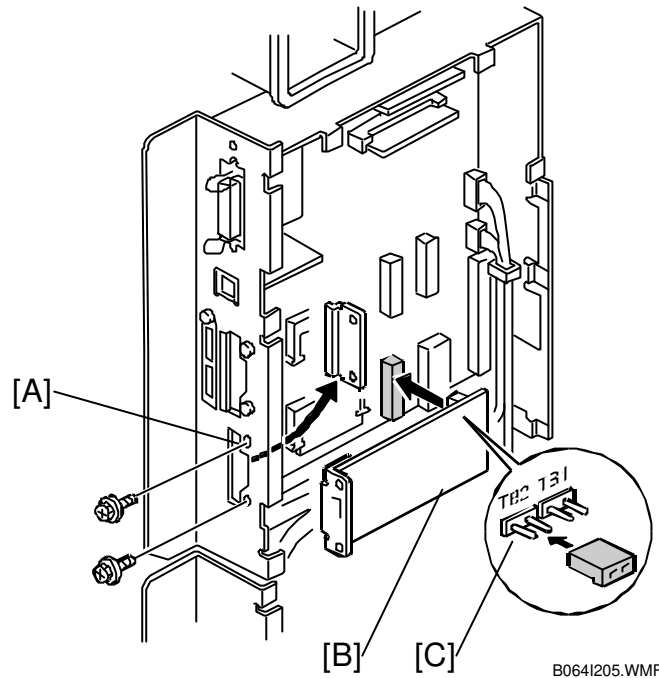Installation Procedure**CAUTION**

Switch the machine off and unplug the machine before starting the following procedure.

1. Remove the rear upper cover ($\sigma \times 2$).
2. Remove the controller cover ($\sigma \times 9$).
3. Remove the slot cover [A] ($\sigma \times 2$).
4. Attach the IEEE1394 board [B].
5. **Use** the provided cable to connect the machine and the computer.
6. Make sure that the jumper is on TB2 [C].
7. Print a system settings list and confirm that the machine correctly recognizes the interface.

UP Mode Settings for IEEE 1394

Enter the UP mode and follow the procedure below to perform the initial interface settings for IEEE 1394. These settings take effect every time the machine is powered on.

1. Press User Tools/Counter.
2. On the touch panel, press System Settings.
3. Press Interface Settings.

The screenshot shows a touch panel interface for 'System Initialization Settings'. At the top, there is a title bar with a home icon, the text 'System Initialization Settings', and an 'End' button. Below the title bar is a prompt 'Select the desired settings.' followed by six empty rectangular boxes. The main area contains a table of settings:

Network		Parallel Interface		IEEE 1394		IEEE 802.1b	
IP Address	0000.0000.0000.0000		SCSI Print Bi-directional		On		
Subnet Mask	0000.0000.0000.0000						
IP Over 1394	Enabled						
SCSI Print	Enabled						

B064I998.WMF

4. Press the key and enter the following settings:
 - IP Address
 - Subnet Mask
 - IP Over 1394. Enable or disable this setting as required. This setting enables IP Over 1394 as the default setting for the printing method.
 - SCSI Print. Enable or disable this setting as required. This setting enables SCSI Print as the default setting for the printing method.
 - SCSI Print Bi-directional. Switch bi-directional printing on or off for SCSI print.

SP Mode Settings for IEEE 1394

The following SP commands can be set for IEEE 1394.

To enter the SP mode:

1. Press Clear Modes \varnothing
2. On the operation panel keypad, press $\alpha\phi\gamma$.
3. Hold down Clear/Stop \circ for more than 3 seconds.
4. Press "Copy SP" on the touch-panel to open the SP command selection screen.

The screenshot shows the 'SP Mode (Service)' screen. At the top right, the date and time are '14APR 2002 03:25'. Below this, there are buttons for 'Open All', 'Close All', 'Copy Window', 'SP Direct', 'X-XXX-XXX', and 'Exit'. The main area is divided into two columns. The left column lists SP commands: SP1XXX (Feed), SP2XXX (Drum), SP3XXX (Process), SP4XXX (Scanner), SP5XXX (Mode), SP6XXX (Periphs), SP7XXX (Data Log), and SP8XXX (Data Log2). The right column shows the selected command 'COPY: SP1-001-001' and a '21' in a box. Below the box, it says 'Initial 0'. At the bottom right, there are buttons for 'Prev Page' and 'Next Page'. A vertical navigation bar is located between the two main columns, with labels for 'Group', 'Page', 'Line', and 'Group'.

B064I999.WMF

5. Enter "5839".

SP No.	Name	Function
5839-007	Cycle Master	Enables or disables the cycle master function of the IEEE 1394 standard bus.
5839-008	BCR Mode	Sets the BCR (Broadcast Channel Register) setting for the Auto Node operation for the standard IEEE1394 bus for when IRM is not in use. Three settings are available: 00, 01, 11.
5839-009	IRM 1394a Check	Determines whether an IRM check for IEEE 1394 is conducted for the Auto Node when IRM is not used.
5839-010	Unique ID	Enables the "Node_Unique_Id" setting for enumeration on the standard IEEE 1394 bus.
5839-011	Logout	Determines how successive initiator login requests are handled during login for SBP-2.
5839-012	Login	Enables or disables exclusive login for SBP-2.
5839-013	Login MAX	Sets the limit for the number of logins for SBP-2. Range: 1 ~ 62.

1.22.6 IEEE802.11B WIRELESS LAN (G628)

ACCESSORY CHECK


Check the accessories and their quantities against this list:

Description	Q'ty
1. Wireless LAN PCB (GW-WLAN)	1
2. Antenna (GW-WLAN) (options)	2
3. Card (GW-WLAN)	1
4. Wireless LAN Instructions	1



Installation Procedure

Installation

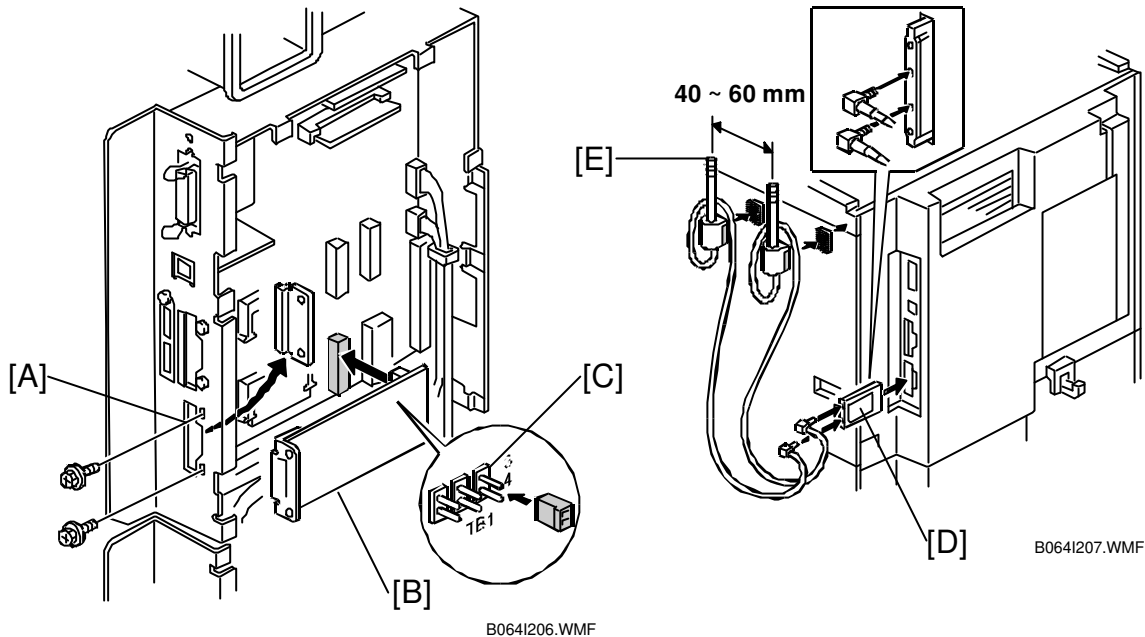

CAUTION

Switch the machine off and unplug the machine before starting the following procedure.

1. Remove the rear upper cover ($\sigma \times 2$).
2. Remove the controller cover ($\sigma \times 9$).
3. Remove the slot cover [A] ($\sigma \times 2$).
4. Insert the wireless LAN board [B] into the PCI Slot 1.
5. Fasten the slot cover to the wireless LAN board ($\sigma \times 2$).
6. Set the jumper [C] between pins 3 and 4 on the wireless LAN board.
7. Insert the LAN PC card [D] into the wireless LAN board.
8. Connect the antennas. Use the provided double-sided tape to attach the antennas [E] to the side of the machine.

NOTE:

- 1) Set the antennas 40~60 mm apart (1.5~2.5").
- 2) Attach the antennas where they will not be moved or damaged by opening and closing the door of the machine.
- 3) Set up the antenna in an area that is free of interference from electrical equipment that generates a strong electromagnetic field.
- 4) Always remove the antenna before moving the machine.
- 5) If reception is poor, move the machine and antenna closer to the access point.

9. Print a system settings list and confirm that the machine correctly recognizes the interface.

UP Mode Settings for Wireless LAN

Enter the UP mode and follow the procedure below to perform the initial interface settings for IEEE 802.11. These settings take effect every time the machine is powered on.

NOTE: The wireless LAN cannot be used if Ethernet is being used.

1. Press the User Tools/Counter key.
2. On the touch panel, press System Settings.
NOTE: The Network I/F (default: Ethernet) must be set for either Ethernet or wireless LAN.
3. Select Interface Settings ? Network (tab) ? Network I/F Setting
4. Select either "Ethernet" or "IEEE 802.11b".
5. Press IEEE 802.11b. Only the wireless LAN options are displayed.

The screenshot shows a touch panel interface for 'System Initialization Settings'. At the top, there's a title bar with 'System Initialization Settings' and an 'End' button. Below the title bar, it says 'Select the desired settings.' followed by five empty input boxes. The main area contains several settings: 'Network' (selected), 'Parallel Interface', 'IEEE 1394', and 'IEEE 802.1b' (selected). Below these are 'Transmission Speed', '802.11 Ad Hoc Mode', 'SSID Setting', 'ASSID', 'Channel' (set to 11), 'Bandwidth Status', and 'WEP (Privacy) Setting' (set to Disabled). At the bottom right, it shows '1/2' and 'Previous' and 'Next' buttons.

B064I997.WMF

6. **Transmission Mode.** Select either "Ad Hoc Mode" or "Infrastructure Mode".
7. **SSID Setting.** Enter the SSID setting. (The setting is case sensitive.)
8. **Channel.** This setting is required when Ad Hoc Mode is selected.
 Range: 1 ~ 14 (default: 11)
NOTE: The allowed range for the channel settings may vary for different countries.

9. **WEP (Privacy) Setting.** The WEP (Wired Equivalent Privacy) setting is designed to protect wireless data transmission. In order to unlock encoded data, the same WEP key is required on the receiving side. There are 64 bit and 128 bit WEP keys.

Range of Allowed Settings:

64 bit	10 characters
128 bit	26 characters

10. **Bandwidth Status.** This setting is enabled only for the Infrastructure Mode. Press here to display the current status of the bandwidth. One of the following is displayed to reflect the reception status of the wireless LAN:

Good	76 ~ 100%
Fair	41 ~ 75%
Poor	21 ~ 40%
Unavailable	0 ~ 20%

11. **Transmission Speed.** Press the Next button to display more settings, then select the transmission speed for the mode: Auto, 11 Mbps, 5.5 Mbps, 2 Mbps, 1 Mbps (default: Auto). This setting should match the distance between the closest machine or access point, depending on which mode is selected.

NOTE: For the Ad Hoc Mode, this is the distance between the machine and the closest PC in the network. For the Infrastructure Mode, this is the distance between the machine and the closest access point.

11 Mbps	140 m (153 yd.)
5.5 Mbps	200 m (219 yd.)
2 Mbps	270 m (295 yd.)
1 Mbps	400 m (437 yd.)

12. To initialize the wireless LAN settings, use page 2/2. Press Execute to initialize the following settings:

- Transmission mode
- Channel
- Transmission Speed
- WEP
- SSID
- WEP Key

SP Mode Settings for 802.11b Wireless LAN

The following SP commands can be set for 802.11b

1. Press Clear Modes \varnothing
2. On the operation panel keypad, press $\alpha\phi\gamma$.
3. Hold down Clear/Stop ϕ for more than 3 seconds.
4. Press "Copy SP" on the touch-panel to open the SP command selection screen.

The screenshot shows the 'SP Mode (Service)' screen. At the top right, the date and time are '14APR 2002 03:25'. Below this is a header bar with buttons: 'Open All', 'Close All', 'Copy Window', 'SP Direct', 'X-XXX-XXX', and 'Exit'. The main area is divided into two columns. The left column lists SP commands: SP1XXX (Feed), SP2XXX (Drum), SP3XXX (Process), SP4XXX (Scanner), SP5XXX (Mode), SP6XXX (Periphs), SP7XXX (Data Log), and SP8XXX (Data Log2). The right column shows the selected command 'COPY: SP1-001-001' and a page number '21' in a box. Below the page number is the text 'Initial 0' and two buttons: 'Prev Page' and 'Next Page'. A vertical navigation bar is located between the two columns, with labels: Group, Page, Line, Line, Page, Group.

B064I999.WMF

5. Enter "5840".

SP No.	Name	Function
5840-006	Channel MAX	Sets the maximum range of the channel settings for the country.
5840-007	Channel MIN	Sets the minimum range of the channels settings allowed for your country.
5840-011	WEP Key Select	Used to select the WEP key (Default: 00).

1.22.7 FILE FORMAT CONVERTER (MLB) (B519)

NOTE:

1. This table shows the special firmware versions to use with the Copy Connector Kit or File Format Converter (MLB option). When you install one of these options, it is necessary to install these firmware modules together as a set.

Software	Part Number	Version (1st released)
GW Controller: System	B5254108	5.07
GW Controller: Copy	B5254109	5.07
BCU	B5254123	5.03d
Printer/Scanner	B5255204	4.15/5.00
NIB/Netfile	B5254114	3.00/1.79
LCDC	B5254176 (NA)	2.04
	B5254177 (EU)	

2. With the Copy Connector/MLB modifications, the machine firmware is divided into 2 main groups:
 - 1) The Copy Connector/MLB group (this starts with the versions in the table above)
 - 2) The usual firmware that was used until this time, that is, for machines without the Copy Connector or MLB options.

Important: Do not mix firmware from these two. Always use firmware from **the same group**, or the machine will not operate correctly.

3. The MLB option cannot operate with any of these items installed. You must remove these before you start the procedure below:
 - Wireless LAN board
 - IEEE1394 I/F board
 - USB2.0 I/F board
 - Copy Connector Kit components
4. As shown above, the GW controller firmware for the Copy Connector/MLB group is divided into GW System and GW Copy. This is because the firmware is too large to go on one card.

Accessory Check

Check the accessories and their quantities against this list:

Description	Q'ty
1. File Format Converter Board	1
2. MLB bracket	1
3. MLB panel.....	1
4. Screw M3 x 6.....	2


Installation Procedure


CAUTION

Unplug the main machine power cord before you start this procedure.

Installing the Firmware

1. Remove the rear cover (σ x 2).
2. Remove the controller cover (σ x 10).
3. Push DIP SW2-1 ON on the controller board to the UP position (ON).
4. Install these firmware modules.
 - GW Controller (System and Copy)
 - Printer/Scanner
 - NIB Netfile
5. Turn off DIP SW2-1 on the controller board.
6. Install these firmware modules.
 - BCU
 - LCDC

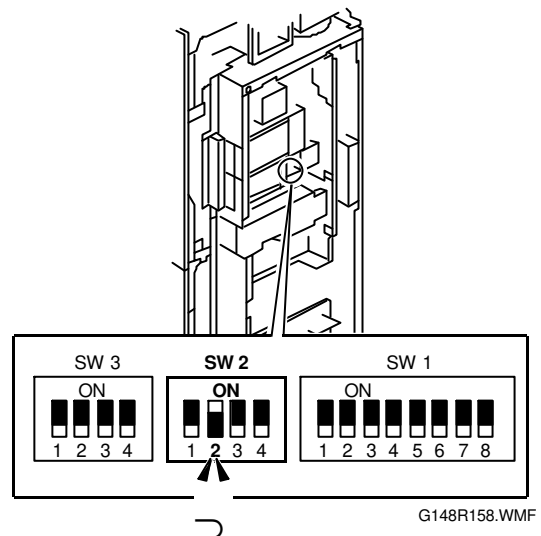

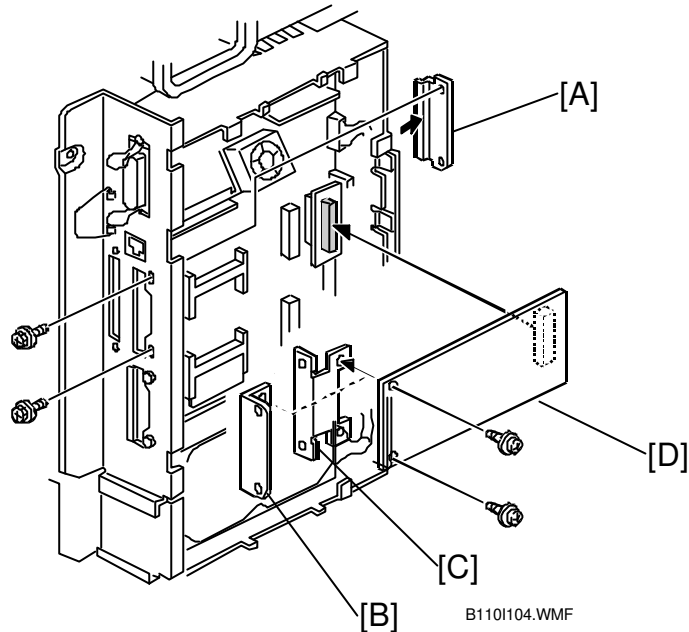Installing the Hardware

1. Remove the slot cover [A] ($\sigma \times 2$).
2. Remove the bracket [B] and attach the MLB panel [C].
3. Attach the File Format Converter board [D] to the controller board ($\sigma \times 2$).
4. Replace the controller board cover and rear cover.
5. Turn the main switch ON.
6. Do a network function Memory Clear (SP5801-010).
7. Do an NCS function Memory Clear (SP5801-011). This resets the network password to "password".
NOTE: This step is necessary to make sure that the password is reset correctly.
8. Input these default values manually (SP5836).

SP Number	Value	SP Number	Value
5836-001	0	5836-082	1
5836-002	0	5836-083	1
5836-072	0	5836-085	1
5836-073	0	5836-086	2
5836-075	0	5836-091	50
5836-076	1		

1.23 MFP OPTIONS: **B140/B246 SERIES**

1.23.1 MERGING APPLICATIONS ON ONE SD CARD

Important:

- These instructions and procedures apply to both the B140 Series and B246 Series.

Overview

The machine has three SD card slots:

B140 Series

- SD card Slots 1 and 2 are available for application SD cards. (The B140 machine does not have a system card in Slot 1.)
- SD card Slot 3 is used for firmware updates.

B246 Series

- SD card Slot 1 is used for the system card. Never remove the system SD card from Slot 1.
- SD card Slot 2 is used for application programs.
- SD card Slot 3 is used for firmware updates.

NOTE: If the customer wants to use more than two applications on SD cards with the B140 (or more than one on the B246), applications must be merged on the same SD card.

Important

- The data necessary for authentication is transferred with the application program to the target SD card.
- Do not use an SD card if it was used with a computer before this time. Correct operation is not guaranteed if this type of SD card is used.
- The SD card is the only evidence that the customer is licensed to use the application program. Also, the service technician may occasionally need to check the SD card and its data to solve problems. For these reasons SD cards must be stored with the machine.
- A licensing agreement prohibits copying of the PostScript SD card. However, you can copy any application from another SD card to the PS3 SD card.
- Once an SD card has been used to combine applications on that card, that SD card cannot be used for a different function.
- Never remove the System SD Card from Slot 1 of a B246 Series machine. (B140 Series machines do not have the system card in Slot 1.)
- Before uploading to an SD card, always make sure that the write-protect switch is OFF. (It is very easy to accidentally turn on the write-protect switch when inserting or removing an SD card.)

Merging Applications

Do this procedure to put more than one application on one SD card.

1. Turn off the copier.
2. Remove the SD card slot cover (σ x2).
3. Insert the Source SD card **into the source SD card slot**. This card contains the application that you want to copy.

Series	Source SD Card Slot
B140 Series	C3
B246 Series	C3

NOTE: The PS SD card cannot be copied, but other applications can be copied onto the PS SD card.

4. Check the target SD card and confirm that its write-protect switch is OFF.
5. Insert the Target SD card into the target SD card slot.

Series	Target SD Card Slot
B140 Series	C2
B246 Series	C2

6. Turn the copier on.
 7. Do **SP5873 001**.
 8. Touch "Execute".
 9. Obey the instructions on the display and touch "Execute" to start copying.
 10. When the display tells you copying is completed, touch "Exit".
 11. Turn the copier off.
 12. Remove the Source SD card from **C3**. Leave the target SD card in **C2**.
 13. Turn the copier on.
 14. Go into the User Tools mode and check that all the applications on the SD card in Slot 2 are enabled:
User Tools> System Settings> Administrator Tools> Firmware Version
 15. Turn the copier off again.
 16. Reattach the SD card slot cover.
 17. Return copied SD cards to the customer for safekeeping, or tape the copied SD cards to the inside of the front door.
- Important:** Do not remove copied SD cards from the machine site.

Important!

- After an SD card has been copied, it can no longer be used. However, it must be stored in the machine to serve as proof of purchase by the customer.
- The original card can also be used to perform an undo procedure (SP 5873 002). Before you store an SD card, label it carefully so it can be identified easily if you need to do the undo procedure (see below).

Undo Exec

Do this procedure if you moved an option from the original SD card to another card by mistake and you need to restore the original SD card.

1. Turn the main switch OFF.
2. Put the SD cards into the SD card slots as follows:

SD Card	B140 Series	B246 Series
Source (with copied appli.)	C2	C2
Target (now blank)	C3	C3


3. Turn the main switch ON.
4. Do **SP5873-002** (Undo Exec).
5. Follow the instructions of the operation panel messages.
6. Turn the main switch OFF.
7. Remove the SD card from C2.
8. Remove the restored SD card from C3.
9. Insert the restored SD card into C1 or C2 (B140 Series) or C2 (B246 Series).
10. Turn the main switch ON.
11. Do **SP5990-005** (Loading Program) and make sure the program runs correctly.
12. Turn the main switch OFF.
13. Remove the SD cards.

1.24 MFP OPTIONS B140 SERIES

1.24.1 OVERVIEW

To make it easy to install MFP options, there are 6 slots (A1, A2, B1 to B4) for boards and 3 slots (C1 to C3) for SD cards on the controller box. Each board or SD card must be put in its assigned slot. The correct slots for each option are shown on the decal attached to the controller box cover (shown in the diagram).

MFP Option Slot Assignment

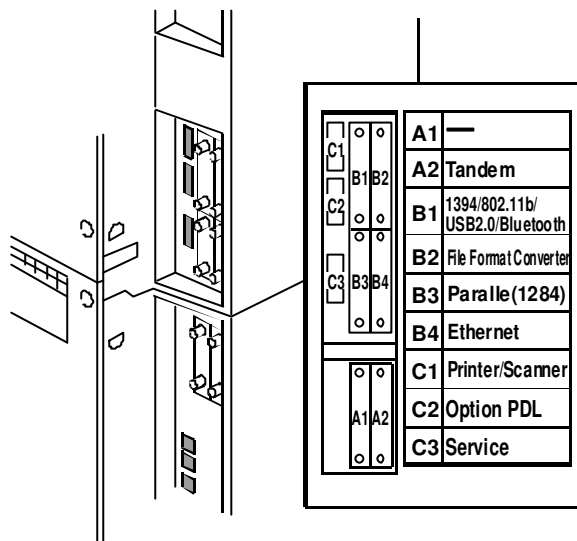

B6591101.WMF


1.24.2 PRINTER/SCANNER KIT (B659)

ACCESSORY CHECK


Check the accessories and their quantities against this list:

Description	Q'ty
1. 256 MB Memory DIMM	1
2. NIB Board	1
3. Centronics Board (IEEE 1284)	1
4. Printer/Scanner SD Card.....	1
5. Keytop	1
6. Ferrite Core.....	1
7. CD-ROM	2

NOTE: The optional 256 MB Memory Kit B585 is necessary for this installation.
This memory kit is not supplied with the Printer/Scanner Kit B580.

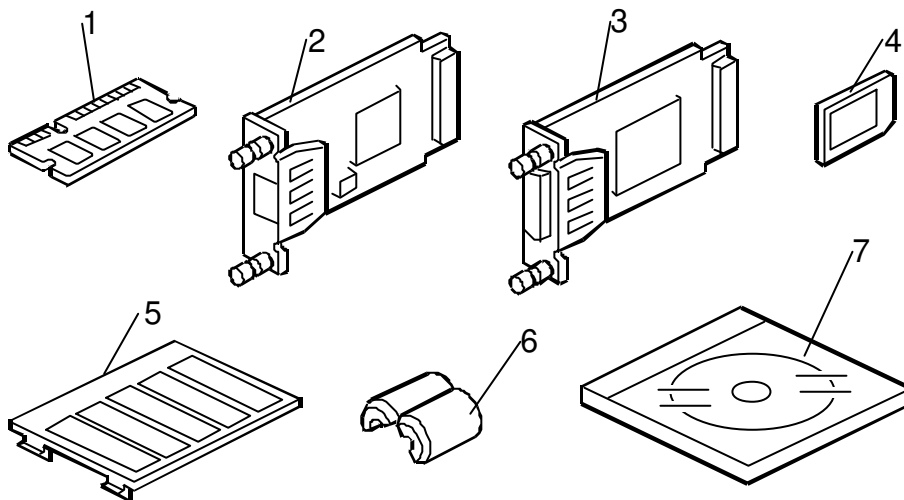


B246MTC2PS.WMF

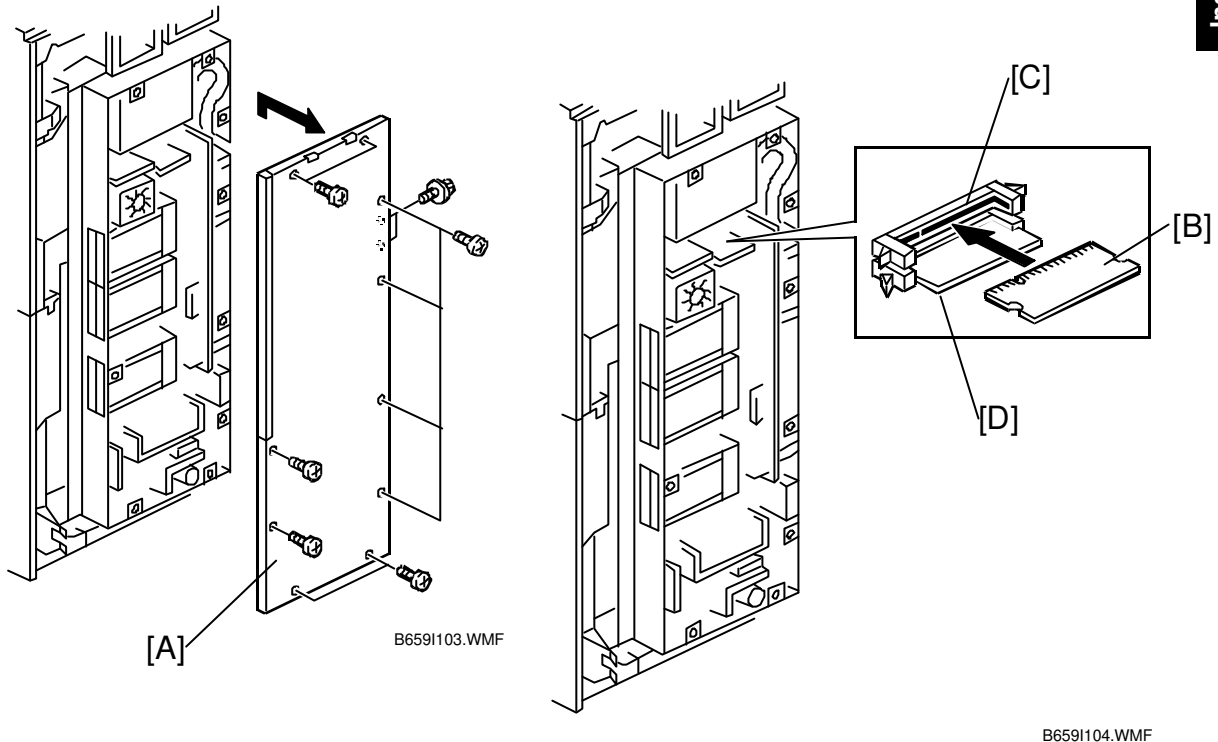
Installation**CAUTION**

Before you start this procedure, turn the machine off and disconnect the power plug from the power source.

1. Remove the rear covers.
2. Remove the controller box cover [A] ($\sigma \times 12$).
3. Hold the 256 MB memory DIMM [B] as shown.
4. Install the DIMM in slot [C] above the other memory DIMM [D].
NOTE: To remove the memory DIMM, pull out the spring-loaded clips on one of the two ends of the DIMM.
5. Attach the controller box cover.

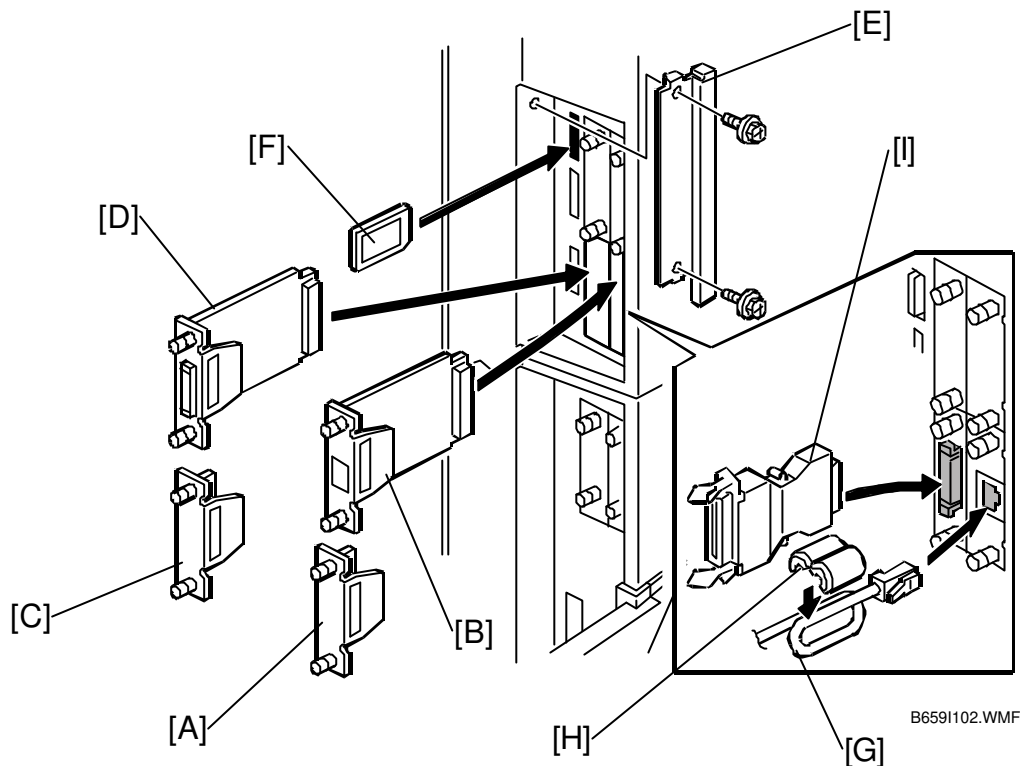

6. Remove the cover [A] of Slot B4 ($\sigma \times 2$).
 7. Install the NIB board [B] in Slot B4 and secure it with the screws.
 8. Remove the cover [C] of Slot B3 ($\sigma \times 2$).
 9. Install the Centronics board [D] in Slot B3 and secure it with the screws.
 10. Remove the slot cover [E] ($\sigma \times 2$).
 11. Hold the SD card [F] as shown, then install it in the proper SD card slot in SD card Slot C1..
- NOTE:** If you push in the SD Card, this releases it for removal. Make sure the SD Card is installed and locked in position. If it is not fully in the slot, push it in carefully until it locks in position.
12. Wind the cable [G] one full turn around the ferrite core [H], then close the core to lock it.
 13. Connect the adapter [I] to the NIB board.

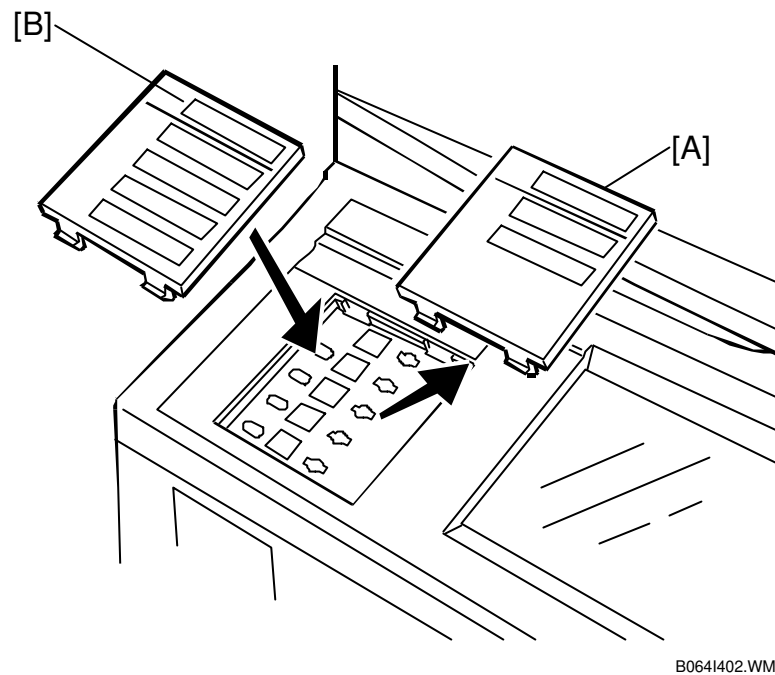

B064I402.WMF

14. Attach the decal near the machine name on the copier.
15. Obey the procedures in the operating instructions to make the user settings.
16. Replace the old key top assembly [A] with the new one [B].

1.24.3 PS3 (B525-15)

ACCESSORY CHECK

Check the accessories and their quantities against this list:


Description	Q'ty
1. PostScript3 Emulation SD Card	1

B140 Series

- The PS3 SD card can be used only with the P/S kit SD card in the machine.
- Insert the printer/scanner kit SD card in Slot C2 and the PS3 SD card in Slot C1.

Installation

1. Turn the machine off.
2. Remove the slot cover [A] ($\sigma \times 2$).
3. Install the PS3 SD Card [B] in Slot C2.
 - If you push in the SD Card, this releases it for removal.
 - Make sure the SD Card is installed and locked in position.
 - If it is not fully in the slot, push it in carefully until it locks in position.
4. Turn the machine on.

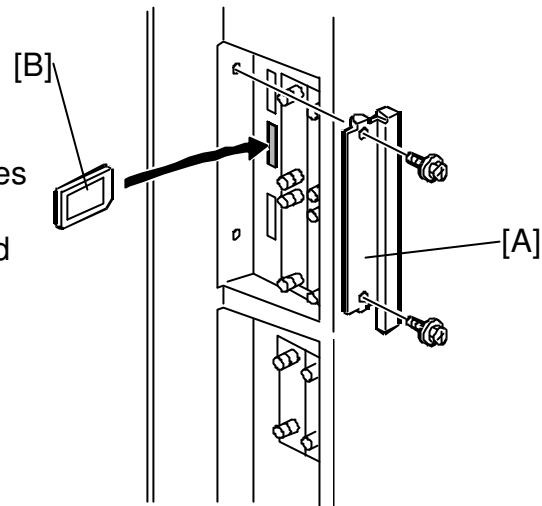

B659I111.WMF

1.24.4 USB 2.0 INTERFACE BOARD (B596-01)

ACCESSORY CHECK

Check the accessories and their quantities against this list:


Description	Q'ty
1. USB 2.0 Interface Board	1

Installation

You can only install one of these cards, because only one PCI slot (B1) is available for these options:

- USB 2.0
- IEEE 802.11b (Wireless LAN)
- IEEE 1394 (FireWire)
- Bluetooth Interface Unit G377

If a different card is installed in B1, you must remove it before you install USB 2.0 Interface Board.

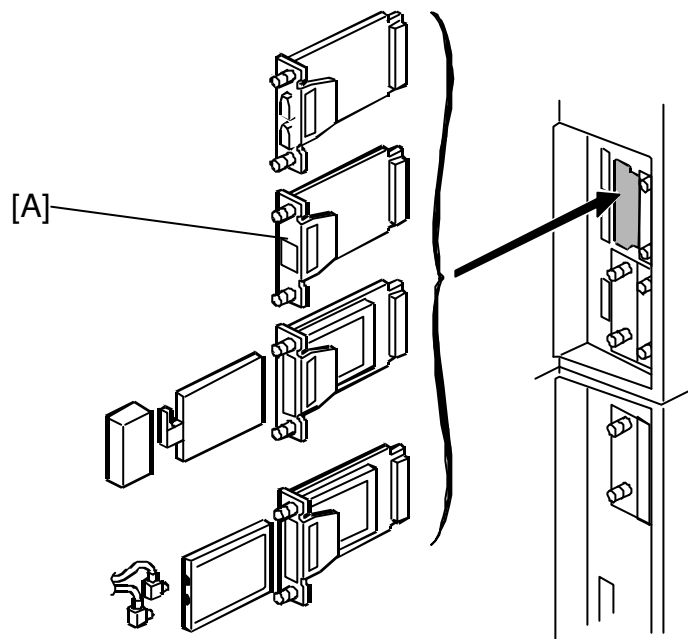

B6591108.WMF

1. Turn the machine off.
2. Remove the cover of Slot B1 (σ x 2).
3. Install the USB 2.0 interface board [A] in Slot B1 and attach it with the screws.
4. Print a configuration page to make sure that the machine can see the USB interface board.

User Tools > Printer Features > List Test Print > Configuration Page

1.24.5 IEEE 1394 INTERFACE BOARD (B581-01)

ACCESSORY CHECK

Check the accessories and their quantities against this list:


Description	Q'ty
1. IEEE 1394 Interface Board	1
2. 4-Pin Cable	1
3. 6-Pin Cable	1

Installation

You can only install one of these cards, because only one PCI slot (B1) is available for these options:

- USB 2.0
- IEEE 802.11b (Wireless LAN)
- IEEE 1394 (FireWire)
- Bluetooth Interface Unit G377

If a different card is installed in B1, you must remove it before you install IEEE 1394 Interface Board.

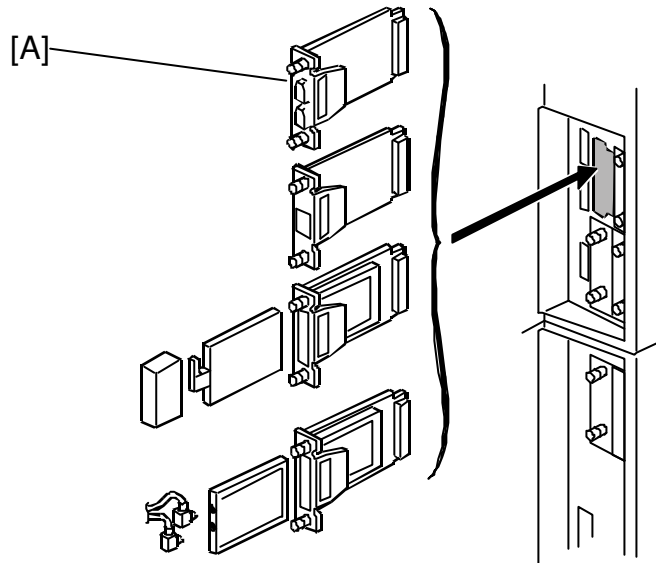

B659I108.WMF

1. Turn the machine off.
2. Remove the cover of Slot B1 (σ x 2)
3. Install the IEEE 1394 board [A] in Slot B1 and attach it with the screws.
4. Turn the machine on and print a configuration page to make sure that the machine can see the IEEE 1394 (FireWire) board:
User Tools> Printer Features> List Test Print> Configuration Page

1.24.6 IEEE 802.11B INTERFACE BOARD (B582-01, -02)

ACCESSORY CHECK

Check the accessories and their quantities against this list:


Description	Q'ty
1. IEEE 802.11b Interface Board	1
2. WLAN PIC Card	1
3. Antennas	2
4. Velcro pads	2
5. Antenna Cap	1

Installation


You can only install one of these cards, because only one PCI slot (B1) is available for these options:

- USB 2.0
- IEEE 802.11b (Wireless LAN)
- IEEE 1394 (FireWire)
- Bluetooth Interface Unit G377

If a different card is installed in B1, you must remove it before you install IEEE 802.11b Interface Board.

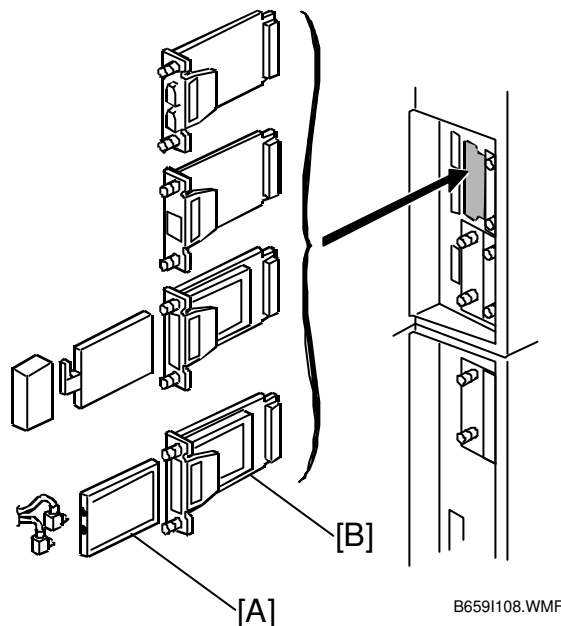

1. Turn the machine off.
2. Remove the cover of Slot B1 (σ x 2).
3. Remove the plastic cap from the PCI card.
4. Insert the PCI card [A] into the wireless LAN board.
5. Install the wireless LAN board [B] in Slot B1 and attach it with the screws.

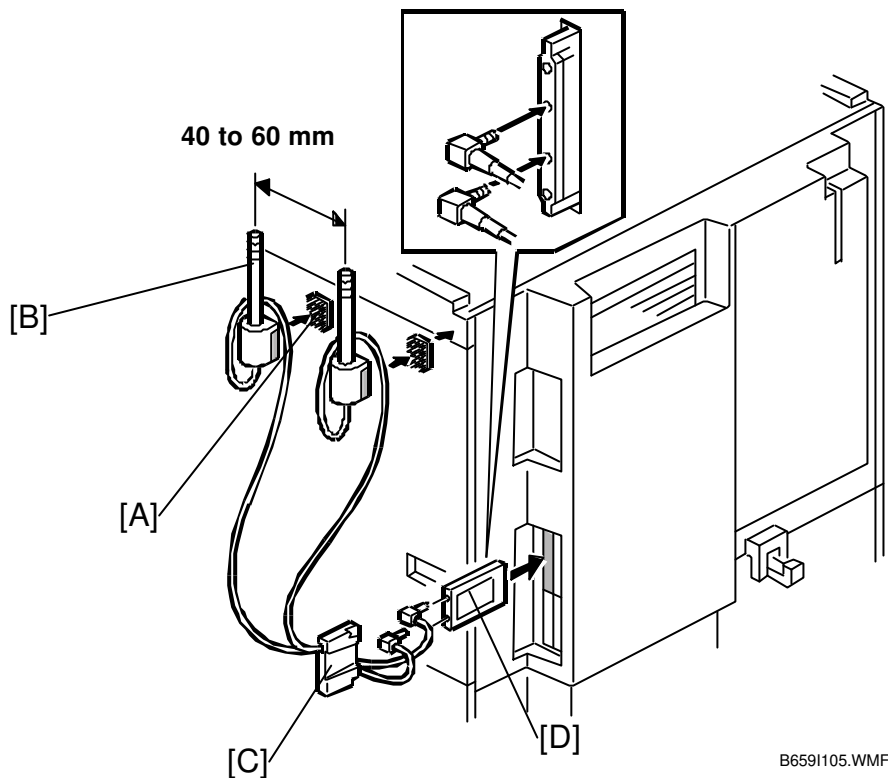

6. Remove the tape from the back of the Velcro patches [A]. Then, attach the patches to the right rear corner of the main frame. Then attach the antennas [B] to the patches.
7. Put the connectors through the antenna cap [C].
8. Connect each antenna to a terminal [D] and attach the antenna cap.

NOTE:

- 1) Attach the antennas as specified above. But, if you change the location of an antenna, make sure that the antennas are separated by a minimum of 40~60 mm (1.5~2.5").
- 2) Install the antennas in an area that is free of interference from electrical equipment that causes a strong electromagnetic field.
- 3) Always remove the antennas from the corners of the machine and disconnect them before you move the machine.
- 4) If reception is not good, move the machine and antennas more near to the access point.

9. Turn the machine on and print a configuration page to make sure that the machine can see the installed IEEE 802.11b interface board:

User Tools> Printer Features> List Test Print> Configuration Page

1.24.7 BLUETOOTH INTERFACE UNIT (G377)

ACCESSORY CHECK

Check the accessories and their quantities against this list:


Description	Q'ty
1. Bluetooth Board.....	1
2. Bluetooth Card.....	1
3. Antenna Cap	2
4. Velcro pads	2

Installation

You can only install one of these cards, because only one PCI slot (B1) is available for these options:

- USB 2.0
- IEEE 802.11b (Wireless LAN)
- IEEE 1394 (FireWire)
- Bluetooth Interface Unit G377

If a different card is installed in B1, you must remove it before you install the Bluetooth interface unit.

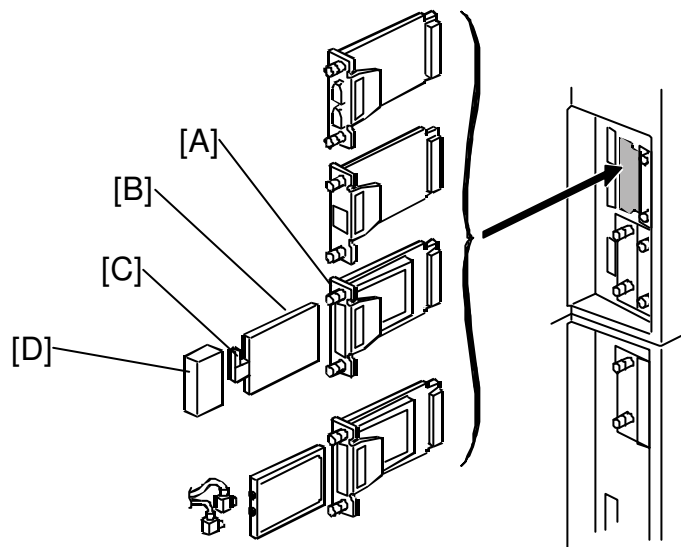

B6591108.WMF

1. Remove the slot cover from Slot B1 [A] ($\sigma \times 2$).
2. Install the Bluetooth board [A] (Knob-screw $\times 2$).
3. Insert the Bluetooth card [B] in the slot.
4. Push the antenna [C] to extend it.
5. Attach the antenna cap [D].


1.24.8 FILE FORMAT CONVERTER (B609)

ACCESSORY CHECK

Check the accessories and their quantities against this list:

Description	Q'ty
1. File Format Converter (MLB: Media Link Board)	1

Installation

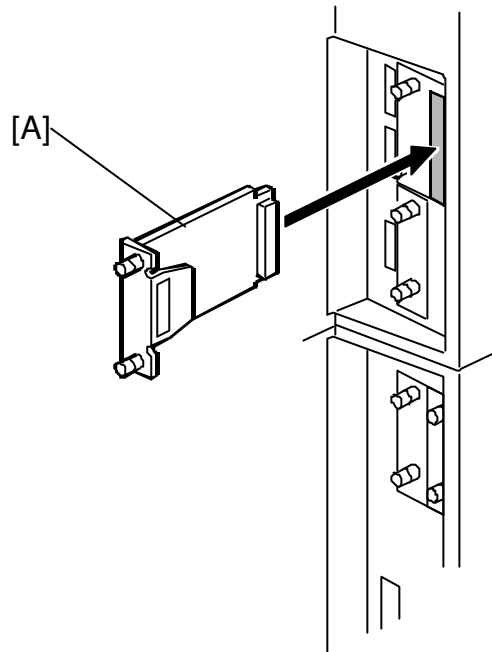

B659I109.WMF

1. Turn the machine off.
2. Remove the cover of Slot B2 ($\sigma \times 2$).
3. Install the file format converter board [A] in Slot B2 and attach it with the screws.

1.24.9 DATA OVERWRITE SECURITY UNIT (B735)

ACCESSORY CHECK

Check the accessories and their quantities against this list:

Description	Q'ty
1. SD Card.....	1

Before You Begin...

1. Confirm that the Data Overwrite Security unit SD card is the correct type for the machine.

- The correct type for the B140 Series is "Type C".

Important: IF THE NVRAM IS REPLACED THEN THE DATA OVERWRITE SECURITY FEATURE MUST BE REPLACED WITH THE NEW DATA OVERWRITE SECURITY OPTION.

2. Make sure that the following settings are not at the factory default settings:
 - Supervisor login password
 - Administrator login name
 - Administrator login password

Important: These settings must be set up by the customer before the Data Overwrite Security unit can be installed.

3. Confirm that "Admin. Authentication" is on:

[User Tools]> "System Settings"> "Administrator Tools"> "Administrator Authentication Management"> "Admin. Authentication"> "On"


If this setting is "Off" tell the customer that this setting must be "On" before you can do the installation procedure.

4. Confirm that "Administrator Tools" is selected and enabled:

[User Tools]> "System Settings"> "Administrator Tools"> "Administrator Authentication Management"> "Available Settings"

NOTE: "Available Settings" is not displayed until Step 2 is done.

If this setting is not selected tell the customer that this setting must be selected before you can do the installation procedure.

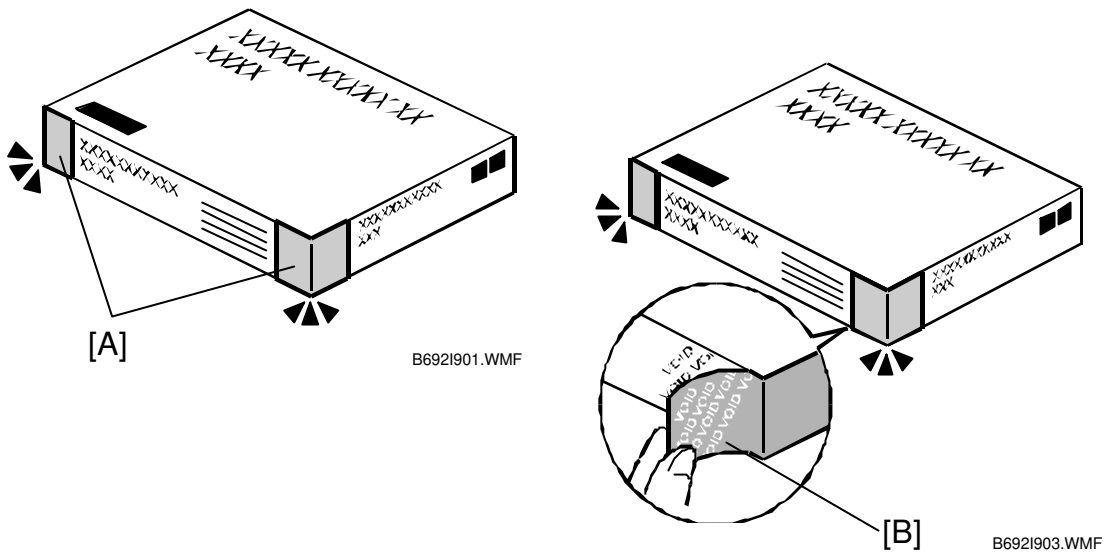Seal Check And Removal**CAUTION**

Before you start the installation, you must check the box seals to make sure that they were not removed after the items were sealed in the box at the factory.


1. Check the box seals [A] on each corner of the box.
 - Make sure that a tape is attached to each corner.
 - The surfaces of the tapes should be blank.

Important: If you see "VOID" on the tapes, do not install the components in the box. Stop the procedure and contact your Sales Division.
2. If the surfaces of the tapes do not show "VOID", remove them from the corners of the box.
3. After you remove each seal, the "VOID" marks [B] appear. This is normal.

Installation Procedure**CAUTION**

The machine should always be turned off and its power cord disconnected before you do any of these procedures.

1. If the machine is on, turn off the main power switch.
2. Disconnect the network cable if the NIB is installed,.

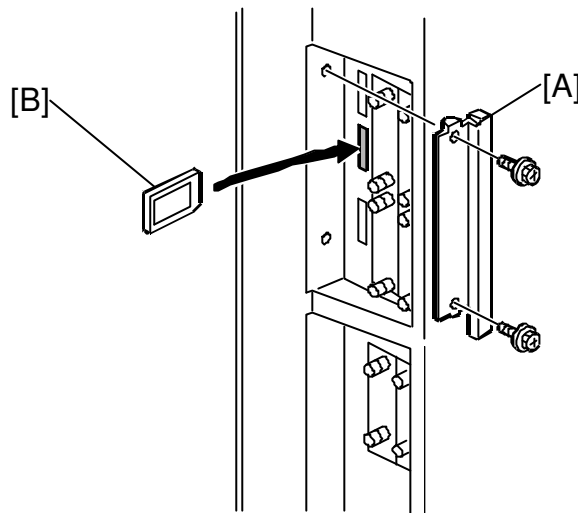

3. Remove the slot cover [A] ($\sigma \times 2$).
4. Insert the SD Card [B].
NOTE: The card goes in slot C2. If the PS3 card is installed in slot C2, then you must copy the contents of the DOS card to the PS3 card, then put the combined card in slot C2.
5. Connect the network cable if the NIB is installed.
6. Turn the main power switch on.
7. Do SP5878 (Option Setup). Press 'Execute'.
8. Exit SP mode.
9. Turn the operation switch off, then turn the main power switch off.
10. Turn the main power switch on again.
11. Do SP5990-005 (SP print mode Diagnostic Report).

RICOH Aficio 3045 *Aficio 3045*

Serial No.: 7M275840019 Firmware P/N : B2135931E
Firmware Version: 1.24

Self-Diagnosis Report

[System Construction]

Kernel Version : NetBSD 1.5.3 (LPXUMIPS05S_NU) #3: Wed Mar 23 11:22:07 JST 2005
CPU System Bus Clock : 133.0 MHz CPU Pipeline Clock : 465,500,000 MHz
Board Type : 39 ASIC Version : 1414672944
RTC Existence : existence RAM Capacity : 384 MB
HDD Existence : existence HDD Model :

[Total Counter]

0000198

[ROM No / Firmware Version]

System/Copy	: B2135931E	/ 1.24	RPGL	:	/
Engine	: B2135100F	/ 1.24.07	R55	:	/
Lede	: B1885212A	/ 1.02	RTIFF	:	/
PI	:	/	PCL	:	/ 1.01
ADF	: B7145160A	/	PCLXL	:	/ 1.01
SIB	: B2135342	/	MSIS	:	/
Finisher	:	/	MSIS(OPTION)	:	/
Finisher (Saddle)	:	/	PDF	:	/
Bank	: A6825150	/	BMLinkS	:	/
LCT	:	/	PictBridge	:	/
Mail Box	:	/	FONT	: Z7675383	/ 0.04
FCU	:	/	FONT1	:	/
NIB	: B7835934D	/ 5.10	FONT2	:	/
[A] HDD Format Option	: B7355060	/ 0.03	FONT3	:	/
Language1	: B1885220	/ 3.92	Net File	: B7835938C	/ 1.02
Language2	: B1885220	/ 96	Fax	:	/
Bluetooth	:	/ 3.2.15	Printer	: B7835931A	/ 1.02
RPCS	:	/ 3.2.15	Scanner	: B7835932D	/ a4_1.05
PS	:	/	RFax	:	/
RPDL	:	/	MIB	:	/ 041130000
R88	:	/	WebSystem	: B7835936D	/ 1.08
R16	:	/	WebDocBox	: B7835937A	/ 1.01

[Loading Program]

ADC4a_fax	: B2135932C	/ 01.05.00	(96d0000)
ADC4a_system	: B2135931E	/ 1.24	(96015000)
GW3e_DESS	: B7835940B	/ 2.01.1	(mnt/sd0/module/teas.mod)
[B] GW2a_zoffv	: B7355060	/ 0.03	(mnt/sd1/module/zoffv.mod)
GW1e_prt_fntM	: Z7675383	/ 0.04	(mnt/sd0/module/fonts_e.mod)
ADC4e_printer	: B7835931A	/ 1.02	(mnt/sd0/module/prt_exp.mod)
ADC4a_scn	: B7835932D	/ a4_1.05	(mnt/sd0/module/scan.mod)
ADC4a_net	: B7835934D	/ 5.10	(mnt/sd0/module/nets.mod)
ADC4a_fax2	: B7835935B	/ 02.01.00	(mnt/sd0/module/fax.mod)
ADC4a_web	: B7835936D	/ 1.08	(mnt/sd0/module/websys.mod)
ADC4a_webdocbox	: B7835937A	/ 1.01	(mnt/sd0/module/webdb.mod)
ADC4a_netfile	: B7835938C	/ 1.02	(mnt/sd0/module/nf.mod)

[Error List]


No Error

12. Make sure the ROM number and firmware version [A] in the diagnostic report are the as the ROM and version number of [B].

13. Turn "Auto Erase Memory Setting" on:

[User Tools]> System Settings> Administrator Tools> Auto Erase Memory Setting> ON

14. Exit User Tools

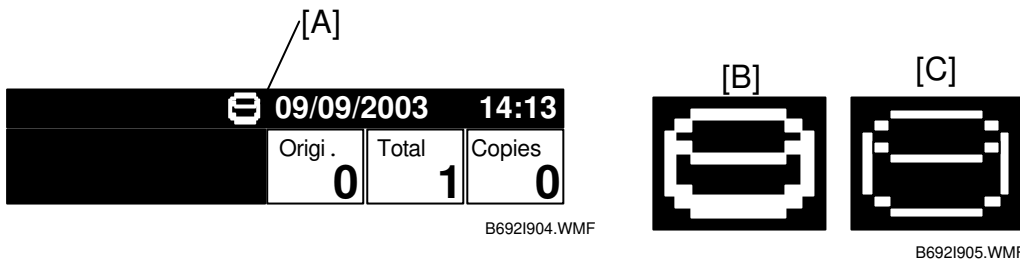

15. Check the display and make sure that the overwrite erase icon [A] is displayed.

NOTE: If it is not displayed, repeat the procedure from Step p7 again.

16. Make a Sample Copy.


17. Check the overwrite erase icon.

- The bottom of the icon becomes thicker [B].
- "Next Copy" is shown for a short time under the icon.
- The icon goes back to its usual shape [C].

1.25 MFP OPTIONS: B246 SERIES

1.25.1 OVERVIEW

To make it easy to install MFP options, there are 5 slots for boards (B1, B2, B3, A1, A2) and 3 slots (C1, C2, C3) for SD cards on the controller box. Each board or SD card must be inserted in its assigned slot. The correct slots for each option are shown on the decal attached to the controller box cover (shown in the diagram).

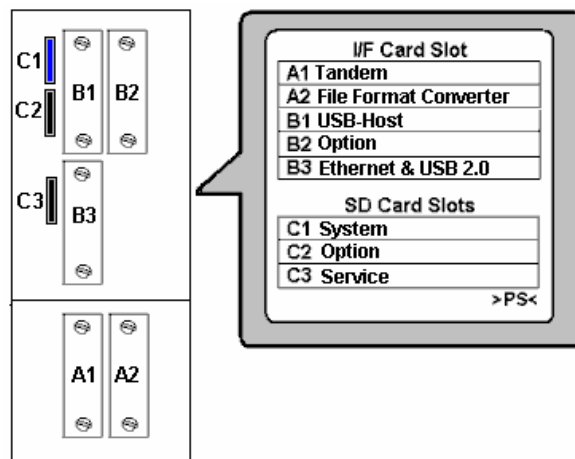

B246I999.BMP

Here is a list of the controller options that can be installed on a B246 Series machine.

Slot	No.	Name	Section
---	B829-03	Copy Data Security Unit Type C (IPU Option)	*1.25.13
A2	B609-04	File Format Converter Type C	*1.25.8
B1	B825	USB Host Interface Unit Type A	*1.25.11
B2* ¹	826	Bluetooth Interface Unit	*1.25.7
B2	B581-01	IEEE 1394 Interface Board	*1.25.5
B2	B582-01, 02	IEEE 802.11b	*1.25.6
B2	B679	IEEE1284 B679	*1.25.15
B2	B818	Remote Communication Gate Type CM1	*1.25.10
B3	G381	Gigabit Ethernet G381	*1.25.16
C1	System	System Slot (Holds the system software. Never remove this SD card!)	---
C2* ²	B735	Data Overwrite Security Unit Type C	*1.25.9
C2	B861	Java VM Card	*1.25.14
C2	B659	Printer/Scanner Kit	*1.25.3
C2	B525-15	PS3	*1.25.4
C3	B828	Browser Unit Type B	*1.25.12
C3	Service	SD card for machine firmware update by the customer engineer. Also for Browser Unit B828	

*¹ Only one of these boards can be inserted at a time.

*² This is the only SD card slot available for applications. If more than one application is to be used, the applications must be merged onto one SD card. (*1.23.1)

1.25.2 COMMON PROCEDURES

Inserting SD Cards

Insert SD cards with the notched corner down.

The insertion point for the SD cards are offset slightly to the left. Make sure the SD card is inserted correctly before you push it into the slot.

Pushing in the SD Card also releases it for removal. Make sure the SD Card is inserted and locked in place. If it is partially out of the slot, push it in gently until it locks in place.

Storing Copied SD Cards

Copied SD cards cannot be used. However, they must be stored at the site to server as proof of purchase by the customer.

Return copied SD cards to the customer for safekeeping, or tape the copied SD cards to the inside of the front door.


Do not remove copied SD cards from the machine site.

1.25.3 PRINTER SCANNER KIT (B841)


ACCESSORY CHECK

Check the accessories and their quantities against this list:

Description	Q'ty
1. Printer/Scanner SD Card	1
2. 256 MB Memory DIMM	1
3. Keytop Printer	1
4. Keytop Scanner	1
5. CD-ROM	2

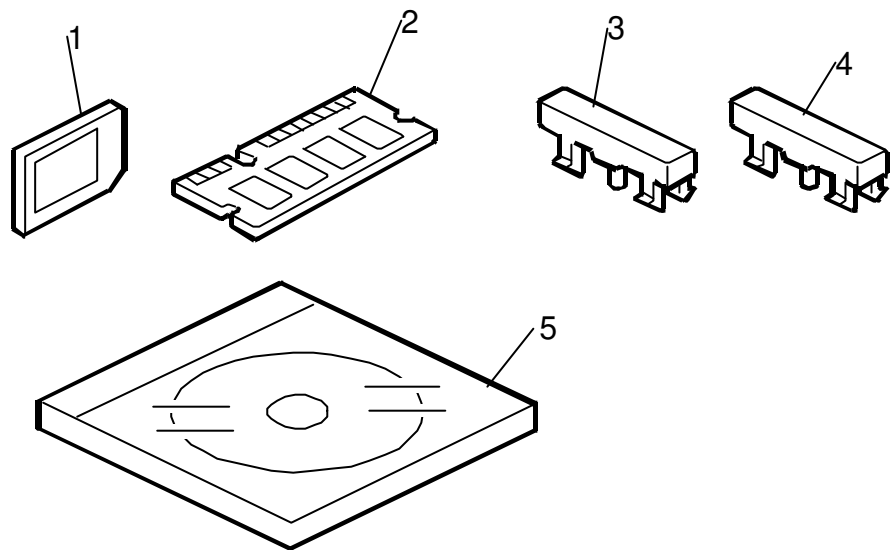


B246MTC3PS.WMF

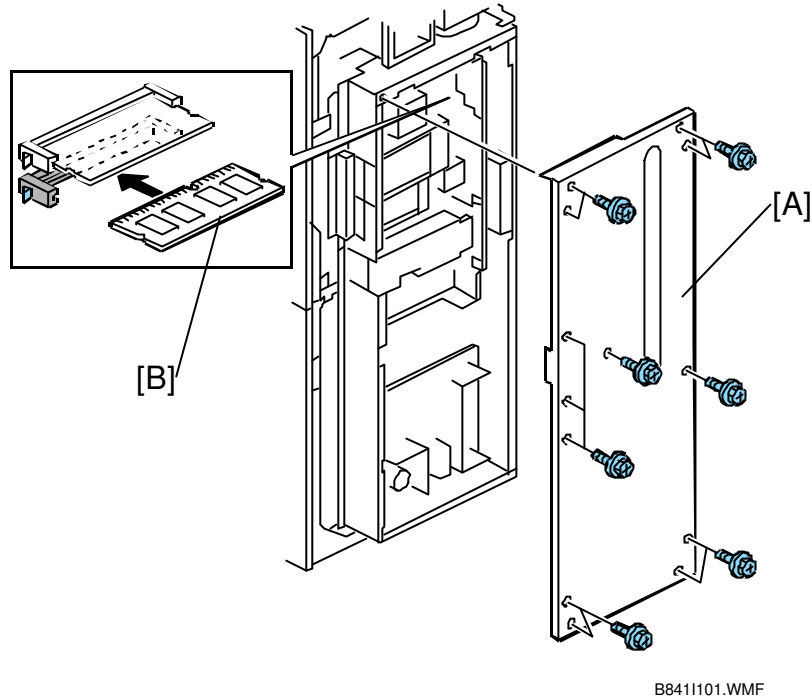Installation**CAUTION**


Before you start this procedure, turn the machine off and disconnect the power plug from the power source.


- Remove the rear upper and lower covers (σ x 2 each) (*3.3.2)
 1. Remove the controller box cover [A] (σ x 13).
 2. Insert the 256 MB memory DIMM [B] into the empty slot.
 3. Reattach the controller box cover.

4. Remove the SD card slot cover [A]
(σ x1)
5. Hold the SD Card [B] with its label
turned as shown above, then install it in
Slot **C2**.

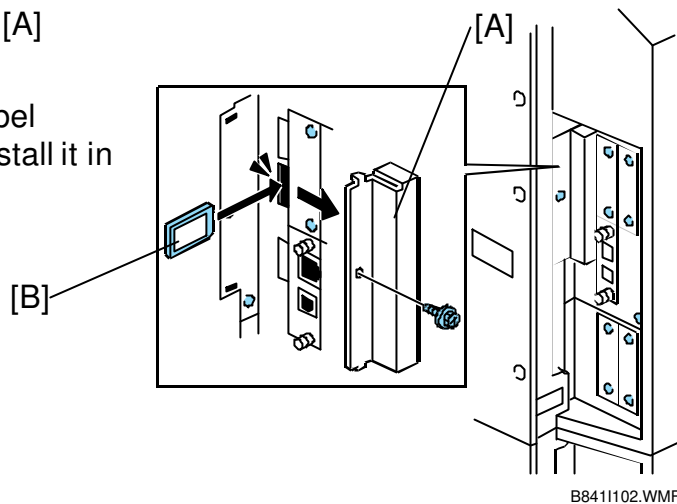

6. Wind the cable [C] one full turn around the
ferrite core [D], then close the core to lock it.
 7. Connect the adapter to the network board in
Slot **B3**.
- NOTE:** The USB/Ethernet Board is pre-installed
in Slot **B3**.

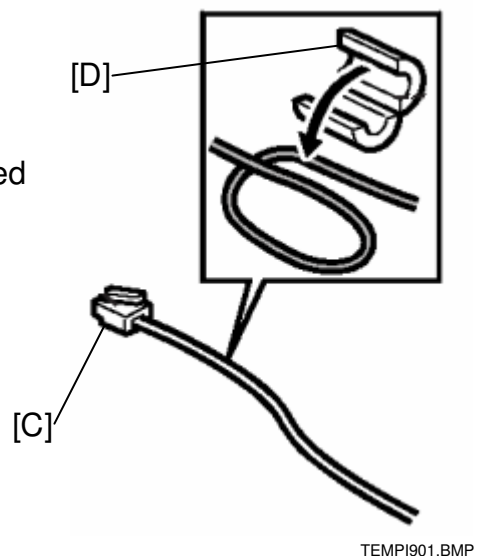

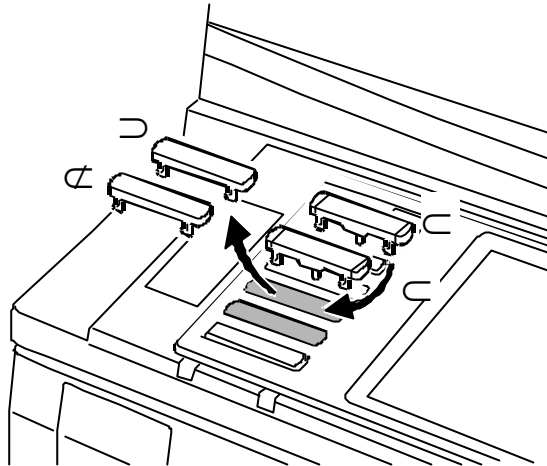

B8411103.WMF

8. Attach the decal near the machine name on the copier.
 9. Obey the procedures in the operating instructions to do the user settings.
 10. Remove the dummy keytops **D**, **C** and discard them.
 11. Attach the new keytops **P** Printer, **S** Scanner.
 12. Make sure that these SP commands are set correctly:
 - **SP5985 001**: Device Setting - On Board NIC (Set to "1" Enable)
 - **SP5985 002**: Device Setting – On Board USB (Set to "1" Enable)
 - **SP5811** – Machine No. Setting
 - **SP5907** – Plug & Play
- NOTE:** After you change SP 5985 001 and 002, you must then turn the main power switch off and on.

1.25.4 POSTSCRIPT3 (B525-44)

Accessories

Description	Q'ty
1. PostScript3 Emulation SD Card.....	1
2. Decal	1


Important

B246

- The system card must be in Slot C1 at all times.
- Only one SD card slot (C2) is available for applications. Therefore, the contents of the printer/scanner SD card must be copied to the PS3 SD card.

Installation

1. Switch the machine off.
2. Remove the SD card slot cover [A]
(σ x 1).
3. Insert the PS3 SD Card [B] into Slot C2.
4. Switch the machine on.

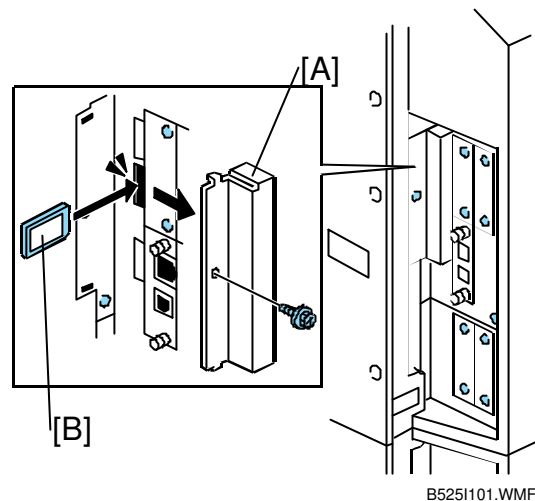

1.25.5 IEEE1394 INTERFACE BOARD (B581)

Accessories

Description	Q'ty
1. IEEE 1394 Board.....	1
2. 4-Pin Cable	1
3. 6-Pin Cable	1

Installation


Only one PCI slot (**B2**) is available for one of these options:

- Centronics 1284
- IEEE 1394 (FireWire)
- IEEE 801.11b (Wireless LAN)
- Bluetooth Interface Unit B826
- Cumin-M B818

Important

- If another card is installed in **B2**, you must remove it before installing this card.

1. Switch the machine off.
2. Remove the cover [A] of Slot **B2** (σ x 2)
3. Insert the IEEE 1394 board [B] into Slot **B2** and fasten it with the screws.

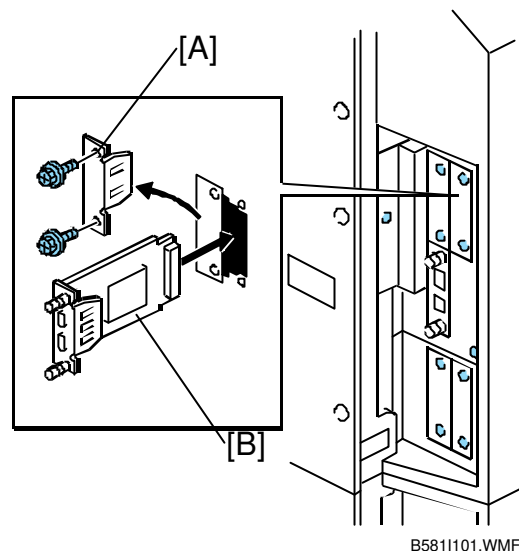

4. Switch the machine on and print a configuration page to confirm that the machine recognizes the installed board:
User Tools> Printer Features> List/Test Print> Configuration Page

1.25.6 WIRELESS LAN G813 (802.11B)

Accessories

Description	Q'ty
1. IEEE 801.11b Board	1
2. PCI Card	1
3. Cover Cap.....	1

Installation


Only one PCI slot (**B2**) is available for one of these options:

- Centronics 1284
- IEEE 1394 (FireWire)
- IEEE 801.11b (Wireless LAN)
- Bluetooth Interface Unit B826
- Cumin-M B818

Important

- If another card is installed in **B2**, you must remove it before installing this card.

1. Switch the machine off.
2. Remove the cover [A] of Slot **B2** ($\sigma \times 2$).
3. Insert the PCI card [B] into the wireless LAN board [C].
4. Insert the wireless LAN board [C] into Slot **B2** and fasten it with the screws.

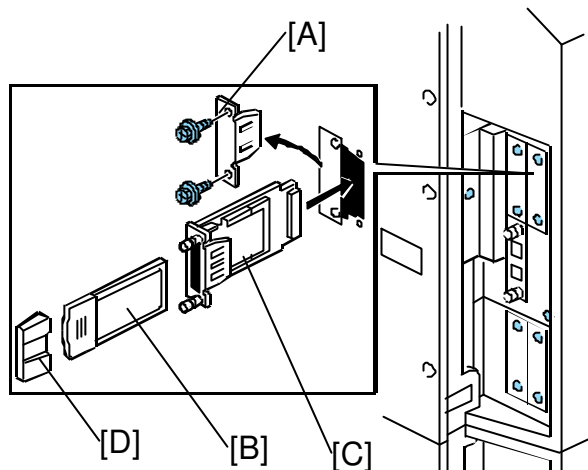

5. Attach the cap [D].
6. Switch the machine on and print a configuration page to confirm that the machine recognizes the installed board:
User Tools> Printer Features> List/Test Print> Configuration Page

1.25.7 BLUETOOTH INTERFACE UNIT TYPE C B826

Accessories

Check the quantity and condition of the accessories.

No.	Description	Q'ty
1	Bluetooth card	1
2	Bluetooth card cover	1
3	Bluetooth board	1
4	Bluetooth card adapter	1

Installation


Only one PCI slot (**B2**) is available for one of these options:

- Centronics 1284
- IEEE 1394 (FireWire)
- IEEE 801.11b (Wireless LAN)
- Bluetooth Interface Unit B826
- Cumin-M B818

Important

- If another board is installed in **B2**, you must remove it before installing this card.

1. Switch the machine off.
2. Remove the I/F cover slot [A] of Slot **B2** (σ x2).
3. Touch a metal surface to remove static charge from your hands before you touch the interface card.
4. With both labels facing up, insert the Bluetooth card [B] into the adapter [C].
5. With the labels facing down, insert the adapter [C] into the Bluetooth board [D].
6. Insert the interface board (with card and adapter inserted) into Slot **B2**.
7. Attach the card cover [E] (used to prevent static electricity).
8. Confirm that Bluetooth is installed correctly:

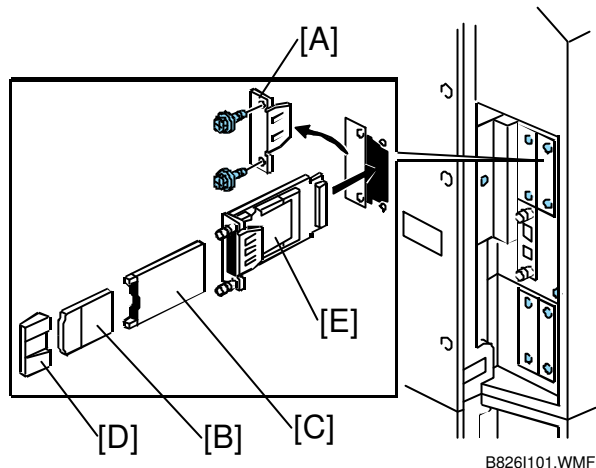

User Tools> Printer Features> List/Test Print> Configuration Page

1.25.8 FILE FORMAT CONVERTER TYPE C B609


ACCESSORY CHECK

Check the accessories and their quantities against this list:

Description	Q'ty
1. File Format Converter (MLB: Media Link Board)	1

Installation

1. Turn the machine off.
2. Remove the cover of Slot **A2** [A]
(σ x 2).
3. Install the file format converter board [B] in
Slot **A2** and attach it with the screws.

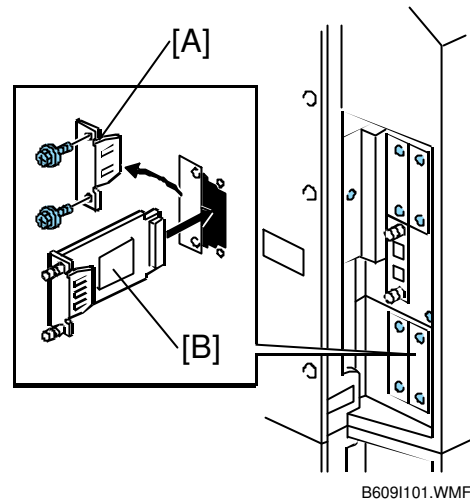

1.25.9 DATA OVERWRITE SECURITY UNIT TYPE C B735

ACCESSORY CHECK

Check the accessories and their quantities against this list:

Description	Q'ty
1. SD Card.....	1
2. Keytops	1

Before You Begin...

1. Confirm that the Data Overwrite Security unit SD card is the correct type for the machine. The correct type for this machine is **Type "C"**.

Important: Do THIS NOW . IF YOU INSTALL ANY VERSION OTHER THAN TYPE "C", YOU WILL HAVE TO REPLACE THE NVRAM AND DO THIS INSTALLATION PROCEDURE AGAIN.

2. Make sure that the following settings are not at the factory default settings:
 - Supervisor login password
 - Administrator login name
 - Administrator login password

Important: These settings must be set up by the customer before the Data Overwrite Security unit can be installed.

3. Confirm that "Admin. Authentication" is on:

[User Tools]> "System Settings"> "Administrator Tools"> "Administrator Authentication Management"> "Admin. Authentication"> "On"


If this setting is "Off" tell the customer that this setting must be "On" before you can do the installation procedure.

4. Confirm that "Administrator Tools" is selected and enabled:

[User Tools]> "System Settings"> "Administrator Tools"> "Administrator Authentication Management"> "Available Settings"

NOTE: "Available Settings" is not displayed until Step 2 is done.

If this setting is not selected tell the customer that this setting must be selected before you can do the installation procedure.

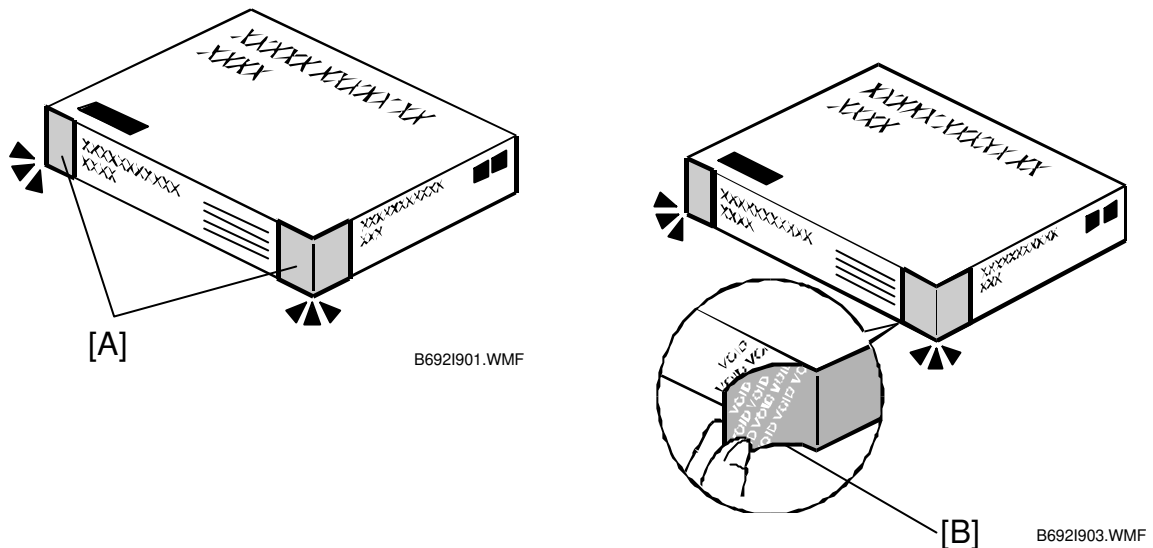Seal Check And Removal**CAUTION**

Before you start the installation, you must check the box seals to make sure that they were not removed after the items were sealed in the box at the factory.


1. Check the box seals [A] on each corner of the box.
 - Make sure that a tape is attached to each corner.
 - The surfaces of the tapes should be blank.

Important: If you see "VOID" on the tapes, do not install the components in the box. Stop the procedure and contact your Sales Division.
2. If the surfaces of the tapes do not show "VOID", remove them from the corners of the box.
3. After you remove each seal, the "VOID" marks [B] appear. This is normal.

Installation Procedure**CAUTION**

The machine should always be turned off and its power cord disconnected before you do any of these procedures.

1. If the machine is on, turn off the main power switch.
2. Disconnect the network cable if the NIB is installed,.

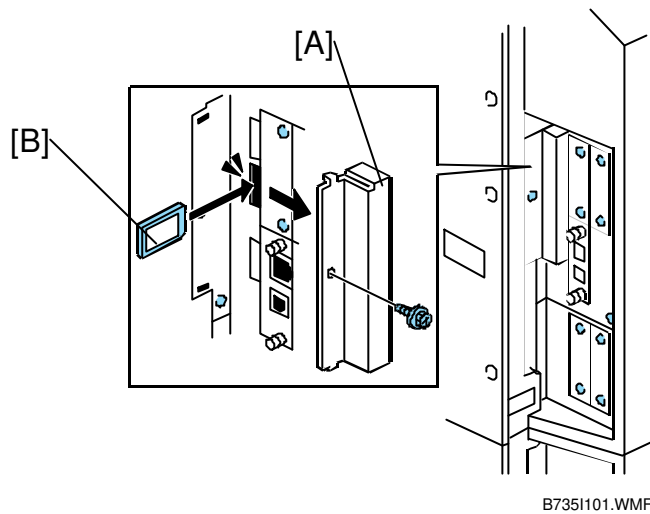

3. Remove the slot cover [A] ($\sigma \times 2$).
4. **Insert the SD Card [B] into Slot C2.**
5. Connect the network cable if the NIB is installed.
6. Turn the main power switch on.
7. Do SP5878 (Option Setup).
8. Exit SP mode.
9. Turn the operation switch off, then turn the main power switch off.
10. Turn the main power switch on again.
11. Do SP5990-005 (SP print mode Diagnostic Report).

Adams-Cp

RICOH Aficio 3045

Serial No.: 7M275840019 Firmware P# : B2135931E
Firmware Version: 1.24

Self-Diagnosis Report

14

[System Construction]

Kernel Version : NetBSD 1.5.3 (LPUMIPS05S_NU) #3: Wed Mar 23 11:22:07 JST 2005
CPU System Bus Clock : 133.0 MHz CPU Pipeline Clock : 465,500,000 MHz
Board Type : 39 ASIC Version : 1414672844
RTC Existence : existence RAM Capacity : 384 MB
HDD Existence : existence HDD Model :

[Total Counter]

0000198

[ROM No / Firmware Version]

System/Copy	: B2135931E	/ 1.24	RPGL	:	/
Engine	: B2135160F	/ 1.24.07	R55	:	/
Lcdc	: B1985212A	/ 1.02	RTIFF	:	/
PI	:	/	PCL	:	/ 1.01
ADF	: B7145160A	/	PCLXL	:	/ 1.01
SIB	: B2135342	/	MSIS	:	/
Finisher	:	/	MSIS(OPTION)	:	/
Finisher (Saddle)	:	/	PDF	:	/
Bank	: A6825150	/	BMLinkS	:	/
LCT	:	/	PictBridge	:	/
Mail Box	:	/	FONT	: Z7675383	/ 0.04
FCU	:	/	FONT1	:	/
MIB	: B7835934D	/ 5.10	FONT2	:	/
[A] HDD Format Option	: B7355060	/ 0.03	FONT3	:	/
Language1	: B1985220	/ 3.92	Net File	: B7835938C	/ 1.02
Language2	: B1985220	/ 96	Fax	:	/
Bluetooth	:	/ 3.2.15	Printer	: B7835931A	/ 1.02
RPCS	:	/ 3.2.15	Scanner	: B7835932D	/ a4_1.05
PS	:	/	RFax	:	/
RPDL	:	/	MIB	:	/ 041130000
R98	:	/	WebSystem	: B7835936D	/ 1.08
R16	:	/	WebDocBox	: B7835937A	/ 1.01

[Loading Program]

ADC4a_fax	: B2135932C	/ 01.05.00	{9d0f0000}
ADC4a_system	: B2135931E	/ 1.24	{9d015000}
GW3e_DESS	: B7835940B	/ 2.01.1	{mnt/sd0/module/deess.mod}
[B] GW2a_zofflv	: B7355060	/ 0.03	{mnt/sd1/module/zofflv.mod}
GW1e_prt_fntM	: Z7675383	/ 0.04	{mnt/sd0/module/fonts_e.mod}
ADC4e_printer	: B7835931A	/ 1.02	{mnt/sd0/module/prt_exp.mod}
ADC4a_scn	: B7835932D	/ a4_1.05	{mnt/sd0/module/scan.mod}
ADC4a_net	: B7835934D	/ 5.10	{mnt/sd0/module/nets.mod}
ADC4a_fax2	: B7835935B	/ 02.01.00	{mnt/sd0/module/fax.mod}
ADC4a_web	: B7835936D	/ 1.08	{mnt/sd0/module/websys.mod}
ADC4a_webdocbox	: B7835937A	/ 1.01	{mnt/sd0/module/webdb.mod}
ADC4a_netfile	: B7835938C	/ 1.02	{mnt/sd0/module/nfa.mod}

[Error List]


No Error

12. Make sure the ROM number and firmware version [A] in the diagnostic report are the as the ROM and version number of [B].

13. Turn "Auto Erase Memory Setting" on:

[User Tools]> System Settings> Administrator Tools> Auto Erase Memory Setting> ON

14. Exit User Tools

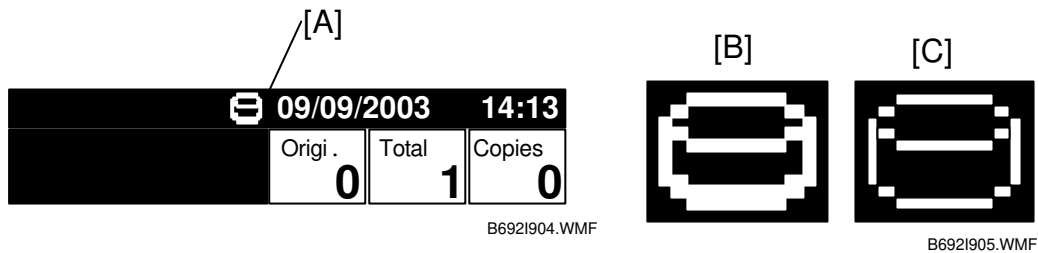

15. Check the display and make sure that the overwrite erase icon [A] is displayed.

NOTE: If it is not displayed, repeat the procedure from Step p7 again.

16. Make a Sample Copy.

17. Check the overwrite erase icon.

- The bottom of the icon becomes thicker [B].
- "Next Copy" is shown for a short time under the icon.
- The icon goes back to its usual shape [C].

18. Remove the Document Server and Scanner key-tops, and replace them with the blank key-tops that are supplied with the kit.

1.25.10 REMOTE COMMUNICATION GATE TYPE CM1 (B818)

Accessories

Description	Q'ty
1. Cumin-M B818	1

Installation


Only one PCI slot (**B2**) is available for one of these options:

- Centronics 1284
- IEEE 1394 (FireWire)
- IEEE 801.11b (Wireless LAN)
- Bluetooth Interface Unit B826
- Cumin-M B818

Important

- If another board is installed in **B2**, you must remove it before installing this card.

1. Switch the machine off.
2. Remove the cover [A] of Slot **B2**
(σ x 2)
3. Attach the connector plate [B] (σ x 1).
4. Insert the Cumin-M board [C] into Slot **B2** and fasten it with the screws (σ x 1).

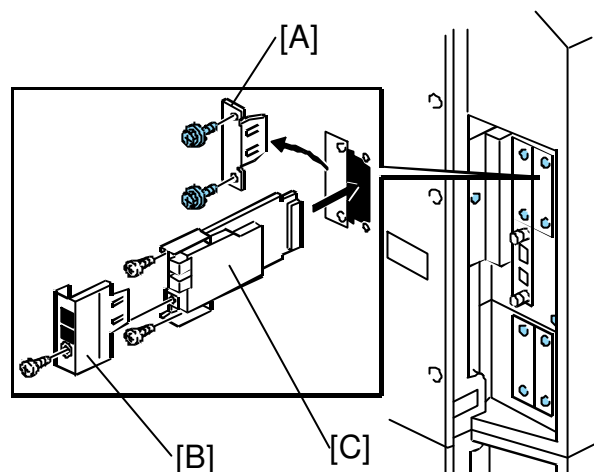


B818I101.WMF

5. Enter the SP mode and note the settings of the following SP codes:

SP5816	Remote Service	Note Setting
150	Selection Country	
153	Selection: Dial/Push	
154	Outside Line/Outgoing Number	
161	Telephone Number	

6. Follow the flow chart below to do the SP settings for Cumin-M.

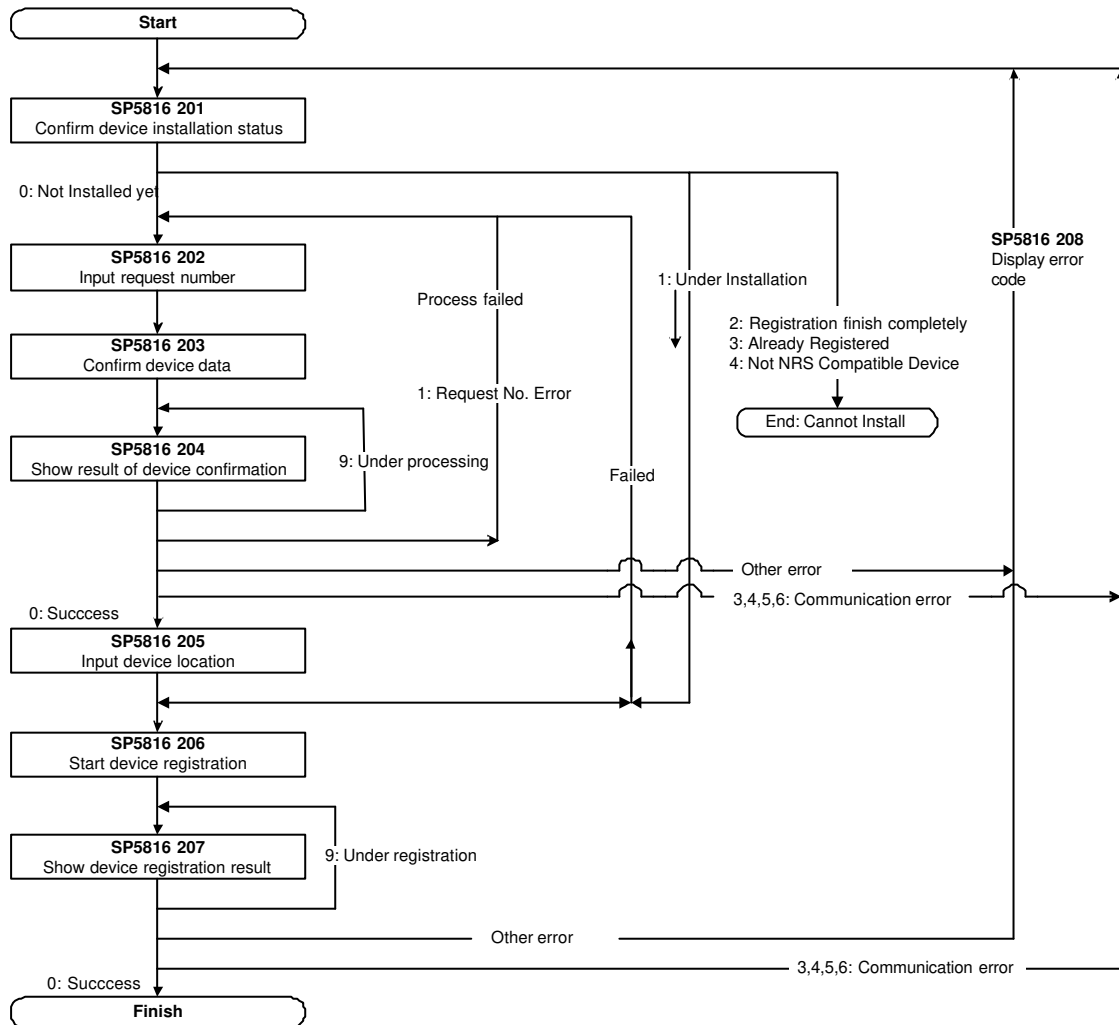

B246I905.WMF

7. Confirm that the Cumin-M modem is installed correctly:

User Tools> Printer Features> List/Test Print> Configuration Page

Here is a list of error codes that may appear during Cumin installation.

Error Code	Cause
Illegal Modem Parameter Error	
-11001	Chat parameter error
-11002	Chat execution error
-11003	Unexpected error
Procedure or Setting Errors	
-12002	Cumin device attempted to register itself at Remote Center without reference to Cumin registration at Remote Center
-12003	Registration attempted without certification.
-12004	Installation attempted by inputting machine number with illegal certification or illegal ID2 illegal (05A).
-12005	Notification or registration done when transmission with the Remote Center is disabled or with Cumin set in illegal status.
-12006	Reference execution with Box registration completed.
-12007	Final registration executed with a number different from the request number.
-12008	Certification update failed because a job was in progress or for some other reason.
Errors Caused by GW Controller Response	
-2385	When installation was attempted outside Japan, the Box Tel No included a domestic (Japan) dial up reference not applicable overseas.
-2387	Not supported at Remote Center.
-2389	Database corrupted
-2390	Program corrupted
-2391	Device registration duplicated
-2392	Parameter error
-2393	Basil unit not registered
-2394	Device not registered
-2395	Basil Box ID illegal
-2396	Basil Device ID illegal
-2397	ID2 format incompatible
-2398	Format of request number incompatible.

1.25.11 USB HOST INTERFACE UNIT TYPE A (B825)


Accessory Check

Check the accessories and their quantities against this list:

Description	Q'ty
1. USB Host Interface Type A	1

Installation

1. Remove the cover [A] of board Slot **B1** (σ x2).
2. Install the USB host interface board [B] in Slot **B1** (σ x2).

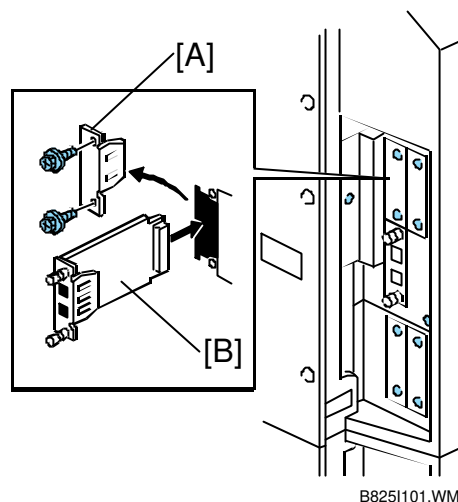



1.25.12 BROWSER UNIT TYPE B (B828)

Accessories


Description

Q'ty

- | | |
|------------------------------------|---|
| 1. Browser Unit B828 SD Card | 1 |
|------------------------------------|---|

Installation

1. Switch the machine off.
2. Remove the SD card slot cover [A] (σ x1).
3. Push the SD card [B] into Slot **C3**.
4. Turn the machine on.
5. Push [User Tools].
6. Push [Login/Logout] on the operation panel
7. Login with the administrator user name and password.
8. Touch "Extended Feature Settings".
9. Touch "Extended Feature Settings" again.
10. Touch "SD Card".
11. Touch the "Browser" line.
12. Under "Install to:" touch "Machine HDD" and touch "Next"
13. When you see "Ready to Install" check the information on the screen to confirm you previous selection.
14. Touch "OK". You will see "Installing..." then "Completed".
15. Touch "Exit" twice to return to the copy screen.
16. Remove the SD card.

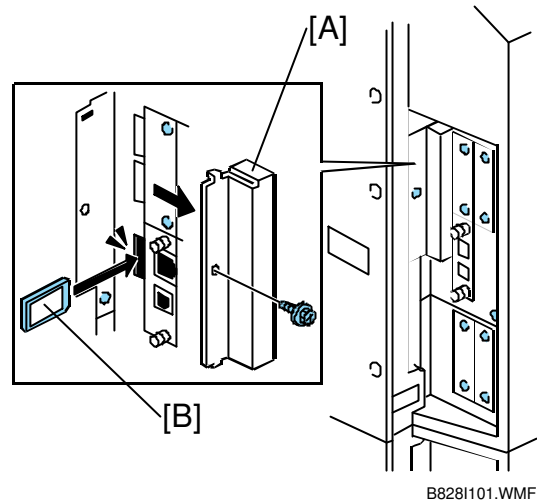

B828H101.WMF

1.25.13 COPY DATA SECURITY UNIT TYPE C (B829)

Accessories

Description

Q'ty

1. PCB IPU Option..... 1

Installation

In a new machine, the IPU does not have this application. You must always install a new IPU board when you install the Copy Data Security Unit option.

B246 Series: IPU

- Disconnect ADF cable

Remove:


- Rear upper cover (σ x2) (*3.3.5)
- Rear lower cover (σ x2) (*3.3.5)

Remove:

[A] Screws and swing open the controller box (σ x4).

[B] Left connector shield (σ x2)

[C] Right connector shield (σ x4)

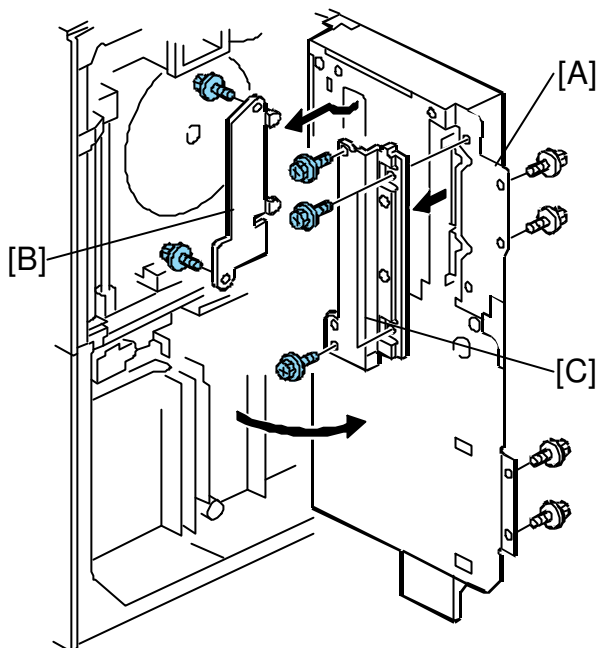


B829I101.WMF

[D] IPU board unit (η x7, σ x2)

- Slowly slide the IPU board and bracket out of the controller box.

[E] IPU (σ x8)

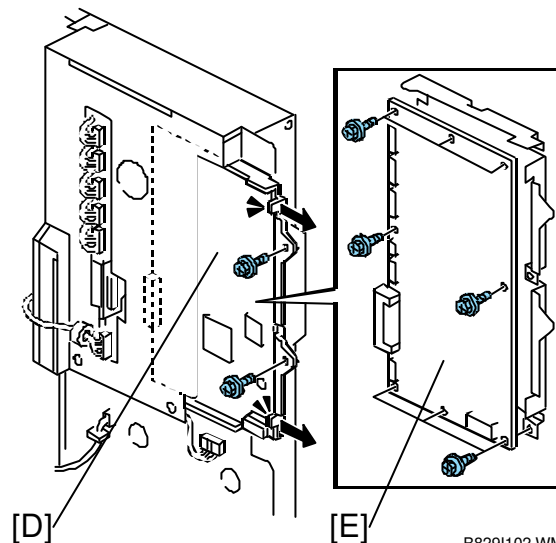

B829I102.WMF

After Replacing the IPU Board

1. Switch the machine on.
2. Login in as the System Administrator.
3. Push [User Tools].
4. Touch "System Settings".
5. Touch "Administrator Tools".
6. Touch next 2 or 3 times until you see "Data Security for Copying".
7. Touch "ON".
8. Touch "OK" to enable the setting.

1.25.14 VM CARD (B861)

Accessories


Description	Q'ty
1. VM Card B861 SD Card.....	1
2. Decal.....	1

Important

- Only one slot (**C2**) is available for applications on SD cards. If more than one application is will be used, the applications must be merged onto one SD card with **SP5873 001**. (*1.23.1)

Installation

- Switch the machine off.
- Remove the SD card slot cover [A] (σ x1).
- Insert the SD card [B] into Slot **C2**.
- Switch the machine on.

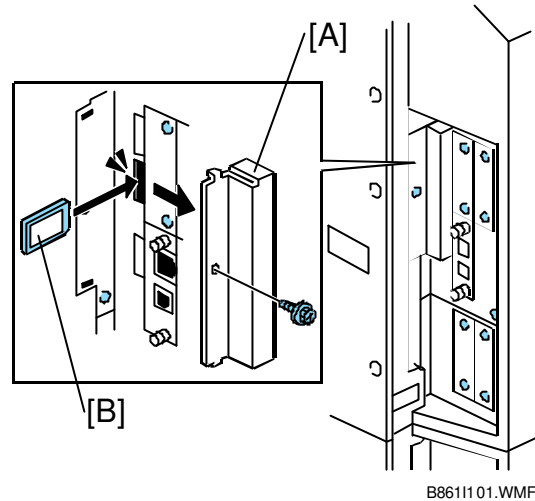

1.25.15 IEEE1284 B679

Accessories

Description	Q'ty
1. IEEE 1284 Centronics Board.....	1

Only one PCI slot (**B2**) is available for one of these options:


- Centronics 1284
- IEEE 1394 (FireWire)
- IEEE 801.11b (Wireless LAN)
- Bluetooth Interface Unit B826
- Cumin-M B818

Important

- If another card is installed in **B2**, you must remove it before installing this card.

Installation

1. Switch the machine off.
2. Remove the cover [A] of Slot **B2** (σ x 2).
3. Insert the 1284 Centronics board [B] into Slot **B2** and fasten it with the screws.

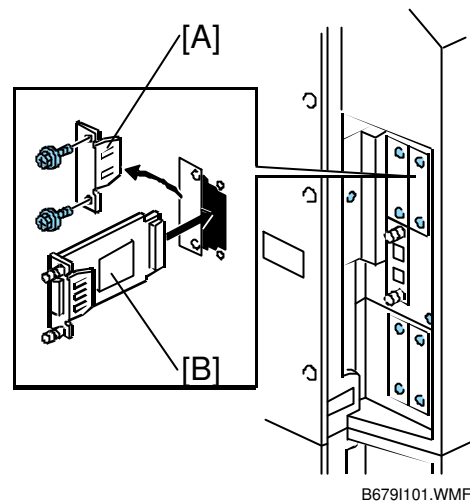


1.25.16 GIGABIT ETHERNET G381

Accessories

Description	Q'ty
1. Gigabit Ethernet B381.....	1
2. Ferrite Core	1

Installation

1. Switch the machine off.
2. If the Ethernet & USB 2.0 card [A] is installed in **B3**, remove it (σ x 2).
3. Insert the Gigabit Ethernet Board [B] into Slot **B3** and fasten it with the screws.

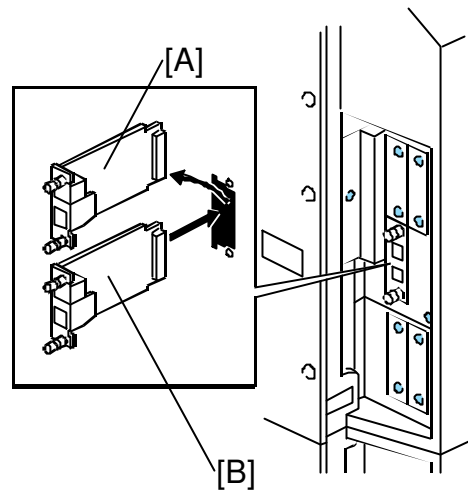

4. Print a configuration page to confirm that the machine recognizes the board:
User Tools > Printer Features > List/Test Print > Configuration Page

2. PREVENTIVE MAINTENANCE

2.1 PM TABLES

The amounts mentioned (K=1,000) as the PM interval indicate the number of prints or copies unless stated otherwise. These numbers are based on the PM counter.

Symbol key: **C**: Clean, **R**: Replace, **L**: Lubricate, **I**: Inspect,
EM: Emergency Maintenance

WARNING

Turn off the main power switch and unplug the machine before performing any procedure in this section. Laser beams can seriously damage the eyes.

Preventive
Maintenance

2.1.1 MAIN MACHINE

SCANNER OPTICS						
	EM	300K	450K	600K	Expected K	Note
1st, 2nd, 3rd Mirror		C	C	C		Optics cloth
Exposure Glass	C	C	C	C		Dry cloth or alcohol
Scanner Guide Rails		L	L	L		After cleaning with alcohol, lubricate scanner guide rails with Launa Oil.
Toner Shield Glass	C	C	C	C		Optics cloth
Reflector		C	C	C		Optics cloth

AROUND THE DRUM						
	EM	300K	450K	600K	Expected K	Note
Charge Corona Grid		R		R	450	Blower brush.
Charge Corona Wire		R	C	R	450	Alcohol, or clean damp cloth.
Charge Wire Cleaning Pad		R		R	450	
Cleaning Blade		R		R	500	
Cleaning Brush		R		R	500	
Charge Corona Casing		C		C		Alcohol, or clean damp cloth.
Internal Dust Filter		C	C	C		Blower brush.
ID Sensor		C	C	C		Blower brush. Do SP 3001 002 after cleaning.
Pick-off Pawls		I		I		Replace if necessary.
Potential Sensor		C	C	C		Blower brush.
Quenching Lamp		C	C	C		Dry cloth.
Transfer Entrance Stay		C	C	C		Dry cloth.
Ozone Filter (Top)		R		R		
Cleaning Filter		R		R		
Cleaning Side Seal		C	C	C		Dry cloth.
Cleaning Entrance Seal		C	C	C		Dry cloth.

DEVELOPMENT UNIT						
	EM	300K	450K	600K	Expected K	Note
Developer		R		R		(☛ 3.7.1) PM cycle is 350K.
Development Roller Shaft		C		C		Clean with blower brush and dry cloth every time the developer is replaced.
Development Roller		C		C		
Development Filter		R	I	R		Blower brush.
Development Sleeve Surface		C	C	C		Dry cloth.
Drive Gears		C	C	C		Blower brush.
Entrance Seal		C	C	C		Blower brush, dry cloth.
Side Seals		C	C	C		Blower brush, dry cloth.
Toner Bottle Holder		C	C	C		Dry cloth.
Paddle Roller Shaft		C	C	C		Blower brush, dry cloth.
Used Toner Separation Unit		I		R		

PAPER FEED							
	EM	300K	450K	600K	1000K	Expected K	Note
Registration Rollers		C		C			Alcohol
Relay Rollers		C		C			Alcohol
Paper Dust Mylar		C	C	C			Dry cloth
Registration Sensor		C		C			Blower brush
Relay Sensor		C		C			Blower brush
By-pass Paper End Sensor		C		C			Dry cloth, blower brush
Grip Rollers		C		C			Dry cloth, blower brush
Paper Feed Guide Plate		C		C			Dry cloth
Vertical Transport Rollers		C	C	C			Alcohol
Paper Feed Sensors		C	C	C			Blower brush
Paper End Sensors		C	C	C			Blower brush

PAPER FEED B064 Series							
	EM	300K	450K	600K	1000K	Expected K	Note
Feed Rollers		R		R		450K	For the K reading, check the logging data for the paper cassette's counter. See NOTE below this table. See NOTE below this table.
Pick-up Rollers		R		R		450K	
Separation Rollers		R		R		450K	
By-pass Feed Rollers		R		R		450K	
By-pass Pick-up Rollers		R		R		450K	
By-pass Separation Rollers		R		R		450K	

PAPER FEED B140/B246 Series							
	EM	300K	450K	600K	900K	Expected K	Note
Feed Rollers					R	1000K	See NOTE below this table.
Pick-up Rollers					R	1000K	
Separation Rollers					R	1000K	
By-pass Feed Rollers					R	1000K	See NOTE below this table.
By-pass Pick-up Rollers					R	1000K	
By-pass Separation Rollers					R	1000K	

NOTES

- Always replace pick-up, feed and separation rollers as a set.
- If the copier is a B064 Series machine, check the counter value for each paper tray station with SP7204 (Copy Counter – Paper Trays). If the value has reached 300K, replace the rollers. The quality of the paper can have an effect on the service life of the rollers. Paper with a rough surface, for example, can increase abrasion on the rollers and decrease their service life. After replacing the rollers, reset the counter with SP7816 (Copy Counter Reset).
- If the feeding from the by-pass tray causes frequent jams, and the by-pass tray is not used regularly, check the by-pass tray rollers. If pick-up, feed, and separation rollers for the by-pass tray are of lighter color than those of more frequently used trays, replace them.

TRANSFER BELT UNIT						
	EM	300K	450K	600K	Expected K	Note
Transfer Belt		C	R	C	750	Use dry cloth to clean transfer belt. Always replace transfer belt and transfer roller cleaning blade together. Note: The expected service life of the transfer belt is 750K. However, replacement is recommended where more paper dust is present due to low quality paper.
Transfer Roller Cleaning Blade			R		750	
Transfer Entrance Guide Plate		C		C		Dry cloth
Transfer Drive Roller		C		C		Dry cloth
Transfer Drum Roller		C		C		Dry cloth
Transfer Bias Roller		C		C		Dry cloth
Transfer Exit Guide Plate		C		C		Dry cloth
Discharge Plate		R		R		

FUSING UNIT AND PAPER EXIT						
	EM	300K	500K	600K	Expected K	Note
Cleaning Web		R		R		
Cleaning Web Pressure Roller				R		Replace roller and bushings together.
Cleaning Web Pressure Roller Bearings				R		
De-Curler Rollers		C		C		Alcohol
Exit Rollers		C		C		Alcohol
Exit Static Discharge Brush		I		I		
Fusing Entrance Guide Plate		C		C		Dry cloth.
Fusing Exit Guide Plate		C		C		Dry cloth.
Hot Roller		R	R		600	B140/B246 Series: "R" at 300K B064 Series: "R" at 500K
Hot Roller Bearings		R	R		1000	
Hot Roller Strippers		R		R	600	
Pressure Cleaning Roller		R		R		Replace as a set.
Pressure Cleaning Roller Bearings		R	I	R		
Pressure Cleaning Roller Spring Plate		I		I		
Pressure Roller		R	R		600	B140/B246 Series: "R" at 300K B064 Series: "R" at 500K Always replace pressure roller and bearings together.
Pressure Roller Bearings		R	R		600	
Thermistors x2		R	I			B140/B246 Series: "R" at 300K B064 Series: "I" at 500K
Transport Rollers		C		C		Alcohol
Fusing Lamp		I	I	I		

DUPLEX						
	EM	300K	450K	600K	Expected K	Note
Entrance Sensor		C	C	C		Blower brush
Inverter Exit Rollers		C		C		Alcohol
Transport Rollers		C		C		Dry cloth
Reverse Trigger Rollers		C		C		Dry cloth
Inverter Entrance Roller		C		C		Dry cloth
Entrance Anti-Static Brush		C		C		Blower brush
Reverse Junction Gate		C	C	C		Dry cloth

2.1.2 ADF

The PM interval is for the number of originals that have been fed.						
	EM	80K	160K	240K	Expected K	Note
Pick-up Roller	C	R	R	R		Water or alcohol, belt cleaner to clean paper feed belt. Replace these items together.
Separation Roller	C	R	R	R		
Paper Feed Belt	C	R	R	R		
CIS Glass		C	C	C		Dry cloth
White Guide Plate		C	C	C		Dry cloth
Sensors	C	C	C	C		Blower brush.
Platen Cover Sheet	C	C	C	C		Water or alcohol
Drive Gears		L	L	L		Grease G501.
Transport Rollers		C	C	C		Water or alcohol
Entrance Roller		C	C	C		
White Platen Roller		C	C	C		
Pre-Scanning Roller		C	C	C		
Scanning Roller		C	C	C		
Exit Roller		C	C	C		

Preventive
Maintenance

2.1.3 OPTIONAL PERIPHERAL DEVICES

LCT (Large Capacity Tray) B473

ROLLRES						
	EM	300K	450K	1000K	Expected K	Note
Pick-up Roller				R		See NOTE below this table.
Feed Roller				R		
Separation Roller				R		

NOTE: Replace pick-up, feed and separation rollers as a set. If the copier is a machine of the B064 Series, check the counter value for each paper tray station with SP7204 (Copy Counter – Paper Trays). If the value has reached 300K, replace the rollers. After replacing the rollers, reset the counter with SP7816 (Copy Counter Reset).

Cover Interposer Tray B470

The PM interval is for the number of sheets that have been fed.					
	EM	60K	120K	180K	Note
Feed Belt		R	R	R	Replace as a set.
Pick-up Roller		R	R	R	
Separation Roller		R	R	R	
Driver Rollers		C	C	C	Damp clean cloth.
Idle Rollers		C	C	C	
Discharge Brush		C	C	C	
Bushings	L				Lubricate with silicone oil if noisy.
Sensors		C	C	C	Blower brush.
Feed Drive Gear	L				Lubricate with silicone oil if noisy.

**3000-Sheet Finisher with 50-sheet stapler and Saddle-Stitching
B468/B469/B674**

	EM	300K	450K	600K	Note
Driver Rollers		C	C	C	Dry cloth
Idle Rollers		C	C	C	
Discharge Brush		C	C	C	
Bushings	L				Lubricate with silicone oil if noisy.
Sensors		C	C	C	Blower brush.
Jogger Fences		I	I	I	Make sure screws are tight.

3000-Sheet Finisher B478/B706

	EM	350K	700K	1050K	Note
Driver rollers		I	I	I	Alcohol
Idle rollers		I	I	I	
Discharge brush		I	I	I	
Bushings		I	I	I	Lubricate with silicone oil if noisy.
Sensors		I	I	I	Blow brush.
Jogger fences		I	I	I	Make sure screws are tight.
Staple waste hopper		C	C	C	Empty staple waste.

Z-Folding Unit Type 2105 (B660)

	As Needed	Note
Drive Rollers	C	Dry cloth.
Idle Rollers	C	Dry cloth.
Anti-Static Brush	C	Dry cloth. Replace every 1000 K.
Bushings	L	Silicone Oil
Sensors	C	Dry cloth.

2000/3000-Sheet Booklet Finisher B700/B701

	300K	2400K	3000K	4000K	EM	Note
FINISHER						
Covers					I,C	Alcohol or water, dry cloth
Drive Rollers					C	Damp cloth, dry cloth
Idle Rollers					C	Damp cloth, dry cloth
Anti-Static Brush					C	Dry cloth
Sensors					C	Blower brush
Corner Stapler				R		Print an SMC report with SP5990 . Replace the unit if the staple count is 500K.
Booklet Stapler				R		Print an SMC report with SP5990 . Replace the unit if the staple count is 200K.

Preventive
Maintenance**Punch B702**

PUNCH	300K	2400K	3000K	4000K	EM	
Punch Waste Hopper	I	I	I	I	I	Remove and empty
Punch Unit						Replace after 1000k punches.

2.2 RELATED SP CODES

This is a list of the PM related SP codes. For details, refer to Section “5 Service Tables”.

7803*	PM Counter Display	Displays the PM count since the last PM.
7804*	PM Counter Reset	Resets the PM count.

3. REPLACEMENT AND ADJUSTMENT

3.1 GENERAL CAUTIONS

Do not turn off either of the power switches while any of the electrical components are active. Doing so might cause damage to units such as the transfer belt, drum, and development unit when they are pulled out of or put back into the copier.

3.1.1 DRUM

An organic photoconductor (OPC) drum is more sensitive to light and ammonia gas than a selenium drum. Follow the cautions below when handling an OPC drum.

1. Never expose the drum to direct sunlight.
2. Never expose the drum to direct light of more than 1,000 Lux for more than a minute.
3. Never touch the drum surface with bare hands. When the drum surface is touched with a finger or becomes dirty, wipe it with a dry cloth or clean it with wet cotton. Wipe with a dry cloth after cleaning with wet cotton.
4. Never use alcohol to clean the drum; alcohol dissolves the drum surface.
5. Store the drum in a cool, dry place away from heat.
6. Take care not to scratch the drum as the drum layer is thin and is easily damaged.
7. Never expose the drum to corrosive gases such as ammonia gas.
8. Always keep the drum in the protective sheet when keeping the drum unit, or the drum itself, out of the copier. Doing so avoids exposing it to bright light or direct sunlight, and will protect it from light fatigue.
9. Dispose of used drums in accordance with local regulations.
10. When installing a new drum, execute SP2962 (Adjustment of Drum Conditions).

Replacement
Adjustment

3.1.2 DRUM UNIT

1. Before pulling out the drum unit, place a sheet of paper under the drum unit to catch any spilt toner.
2. Make sure that the drum unit is set in position and the drum stay is secured with a screw before the main switch is turned on. If the drum unit is loose, poor contact of the drum connectors may cause electrical noise, resulting in unexpected malfunctions (RAM data change is the worst case).
3. To prevent drum scratches, remove the development unit before removing the drum unit.

3.1.3 TRANSFER BELT UNIT

1. Never touch the transfer belt surface with bare hands.
2. Take care not to scratch the transfer belt, as the surface is easily damaged.
3. Before installing the new transfer belt, clean all the rollers and the inner part of the transfer belt with a dry cloth to prevent the belt from slipping.

3.1.4 SCANNER UNIT

1. When installing the exposure glass, make sure that the white paint is at the rear left corner.
2. Clean the exposure glass with alcohol or glass cleaner to reduce the amount of static electricity on the glass surface.
3. Use a cotton pad with water or a blower brush to clean the mirrors and lens.
4. Do not bend or crease the exposure lamp flat cable.
5. Do not disassemble the lens unit. Doing so will throw the lens and the copy image out of focus.
6. Do not turn any of the CCD positioning screws. Doing so will throw the CCD out of position.

3.1.5 LASER UNIT

1. Do not loosen the screws that secure the LD drive board to the laser diode casing. Doing so would throw the LD unit out of adjustment.
2. Do not adjust the variable resistors on the LD unit, as they are adjusted in the factory.
3. The polygon mirror and F-theta lenses are very sensitive to dust. Do not open the optical housing unit.
4. Do not touch the glass surface of the polygon mirror motor unit with bare hands.
5. After replacing the LD unit, do the laser beam pitch adjustment. Otherwise, an SC condition will be generated.

3.1.6 CHARGE CORONA

1. Clean the corona wires with a dry cloth. Do not use sandpaper or solvent.
2. Clean the charge corona casing with water first to remove NOx based compounds. Then clean it with alcohol if any toner still remains on the casing.
3. Clean the end block with a blower brush first to remove toner and paper dust. Then clean with alcohol if any toner still remains.
4. Do not touch the corona wires with bare hands. Oil stains from fingers may cause uneven image density on copies.
5. Make sure that the wires are correctly between the cleaner pads and that there is no foreign material (iron filings, etc.) on the casing.
6. When installing new corona wires, do not bend or scratch the wire surface. Doing so may cause uneven charge. Also be sure that the corona wires are correctly positioned in the end blocks.
7. Clean the grid plate with a blower brush (not with a dry cloth).
8. Do not touch the charge grid plate with bare hands. Also, do not bend the charge grid plate or make any dent in it. Doing so may cause uneven charge.

Replacement
Adjustment

3.1.7 DEVELOPMENT

1. Be careful not to nick or scratch the development roller.
2. Place the development unit on a sheet of paper after removing it from the copier.
3. Never disassemble the development roller assembly. The position of the doctor plate is set with special tools and instruments at the factory to ensure the proper gap between the doctor blade and the development roller.
4. Clean the drive gears after removing used developer.
5. Dispose of used developer in accordance with local regulations.
6. Never load types of developer and toner into the development unit other than specified for this model. Doing so will cause poor copy quality and toner scattering.
7. Immediately after installing new developer, the TD sensor initial setting procedure should be performed with SP2801 (TD Sensor Initialization) to avoid damage to the copier. Do not perform the TD sensor initial setting with used developer. Do not make any copies before doing the TD sensor initial setting.
8. When using a vacuum cleaner to clean the development unit casing, always ground the casing with your fingers to avoid damaging the toner density sensor with static electricity.
9. When replacing the TD sensor, replace the developer, then execute SP2801 (TD Sensor Initialization) and SP2962 (Adjustment of Drum Conditions).

3.1.8 CLEANING

1. When servicing the cleaning section, be careful not to damage the edge of the cleaning blade.
2. Do not touch the cleaning blade with bare hands.
3. Before disassembling the cleaning section, place a sheet of paper under it to catch any toner falling from it.

3.1.9 FUSING UNIT

1. After installing the fusing thermistor, make sure that it is in contact with the hot roller and that it is movable.
2. Be careful not to damage the edges of the hot roller strippers or their tension springs.
3. Do not touch the fusing lamp and rollers with bare hands.
4. Make sure that the fusing lamp is positioned correctly and that it does not touch the inner surface of the hot roller.

3.1.10 PAPER FEED

1. Do not touch the surface of the pick-up, feed, and separation rollers.
2. To avoid paper misfeeds, the side fences and end fence of the paper tray must be positioned correctly to align with the actual paper size.

3.1.11 USED TONER

1. We recommend checking the amount of used toner at every EM.
2. Dispose of used toner in accordance with local regulations. Never throw toner into an open flame, for toner dust may ignite.

3.2 SPECIAL TOOLS AND LUBRICANTS

3.2.1 SPECIAL TOOLS


Part No.	Description
A0069104	Scanner Positioning Pin (4 pcs./set)
A2929500	Test Chart – S5S (10 pcs./set)
A0299387	Digital Multimeter – FLUKE 87
VSST9500	Test Chart – S5S – DF (10 Sheets/Set)
N8036701	Flash Memory Card – 4 MB (B064)
N8036701	Case – Flash Memory Card (B064)
G0219350	Loop Back Connector
B6455010	SD (Secure Digital) Card – 64 MB (B140/B246)

3.2.2 LUBRICANTS

Part No.	Description
A2579300	Grease Barrierta – JFE 5 5/2
52039502	Silicon Grease G-501
54429101	Setting Powder

3.3 OPERATION PANEL AND EXTERNAL COVERS


3.3.1 OPERATION PANEL

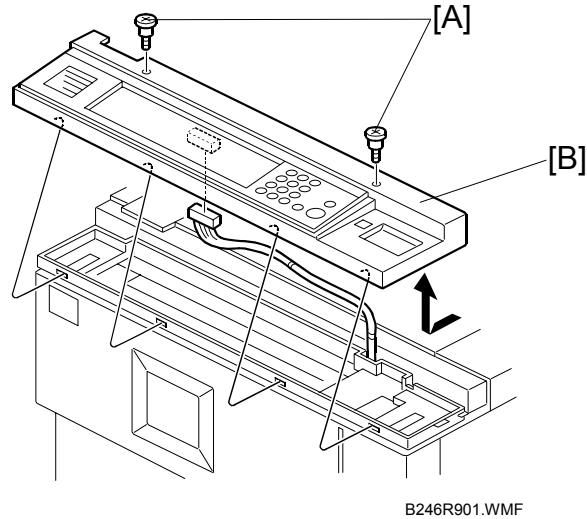

[A]: Shoulder screws (🔩 x 2)


[B]: Operation panel (📄 x 1)

3.3.2 FRONT DOOR

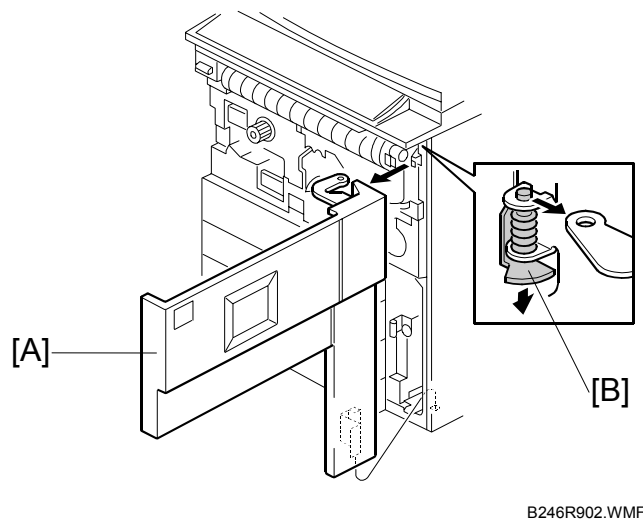

While supporting the front door [A] with one hand, press down on the hinge bracket [B] then raise the door slightly to remove it.


3.3.3 RIGHT COVERS

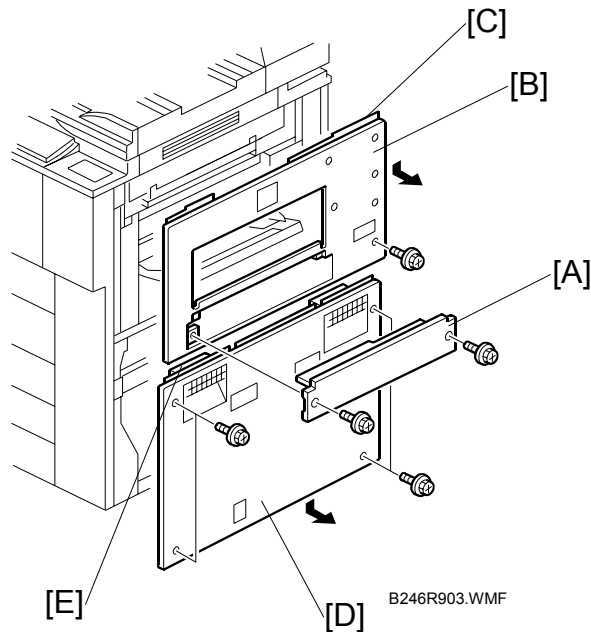

Replacement
Adjustment

1. LCT entrance guide cover [A] (⚙ x 2)
2. Right upper cover [B] (⚙ x 2)
 - To remove the right cover, remove the LCT entrance guide plate, open the by-pass tray, then slide the right upper cover down to remove it.
 - When re-attaching, before tightening the screws make sure that 1) the tabs [C] on the cover are engaged with the grooves on the machine, and 2) the catches on the cover are engaged with the shoulder screws.
3. Lower right cover [D] (⚙ x 2)
 - After removing the screws, slide the cover down to remove it.
 - When re-attaching, before tightening the screws make sure that the tabs [E] on the cover are engaged with the grooves on the machine.

3.3.4 LEFT COVERS

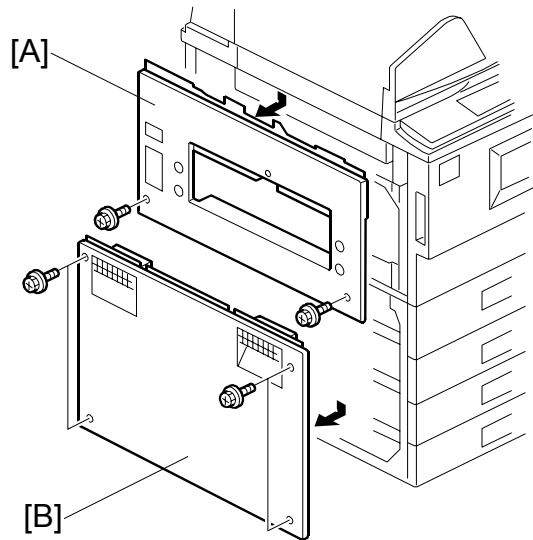

B246R904.WMF


[A]: Left upper cover (⚙ x 2)

- Slide down to remove.
- When re-attaching, before tightening the screws make sure that 1) the tabs on the cover are engaged with the grooves on the machine, and 2) the catches on the cover are engaged with the shoulder screws.

[B]: Left lower cover (⚙ x 2)

- Slide down to remove.
- When re-attaching, before tightening the screws make sure that the tabs on the cover are engaged with the grooves on the machine.

3.3.5 REAR COVERS

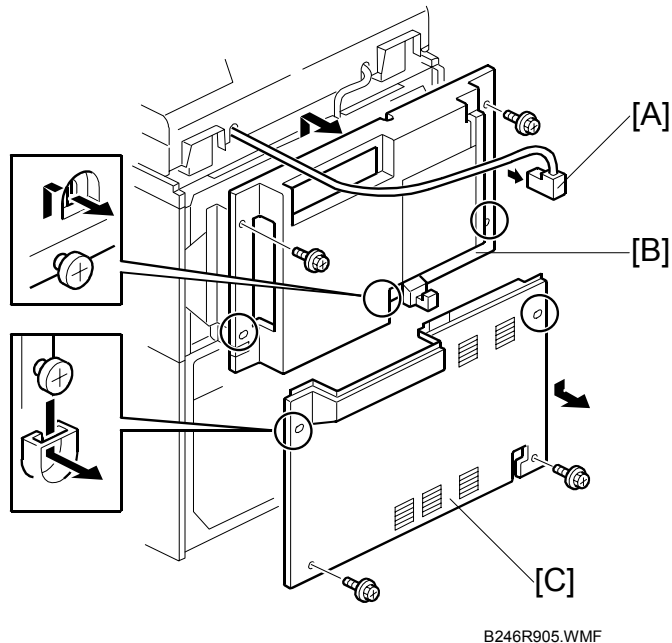

Replacement
Adjustment

[A]: Disconnect the ADF plug.

[B]: Rear upper cover (⌘ x 2)

- Slide down to remove.
- When re-attaching, before tightening the screws make sure that the tabs on the cover are engaged with the shoulder screws.


[C]: Rear lower cover (⌘ x 2)

- When re-attaching, before tightening the screws make sure that the tabs on the cover are engaged with the shoulder screws.

3.4 SCANNER

3.4.1 ADF AND TOP COVERS

ADF

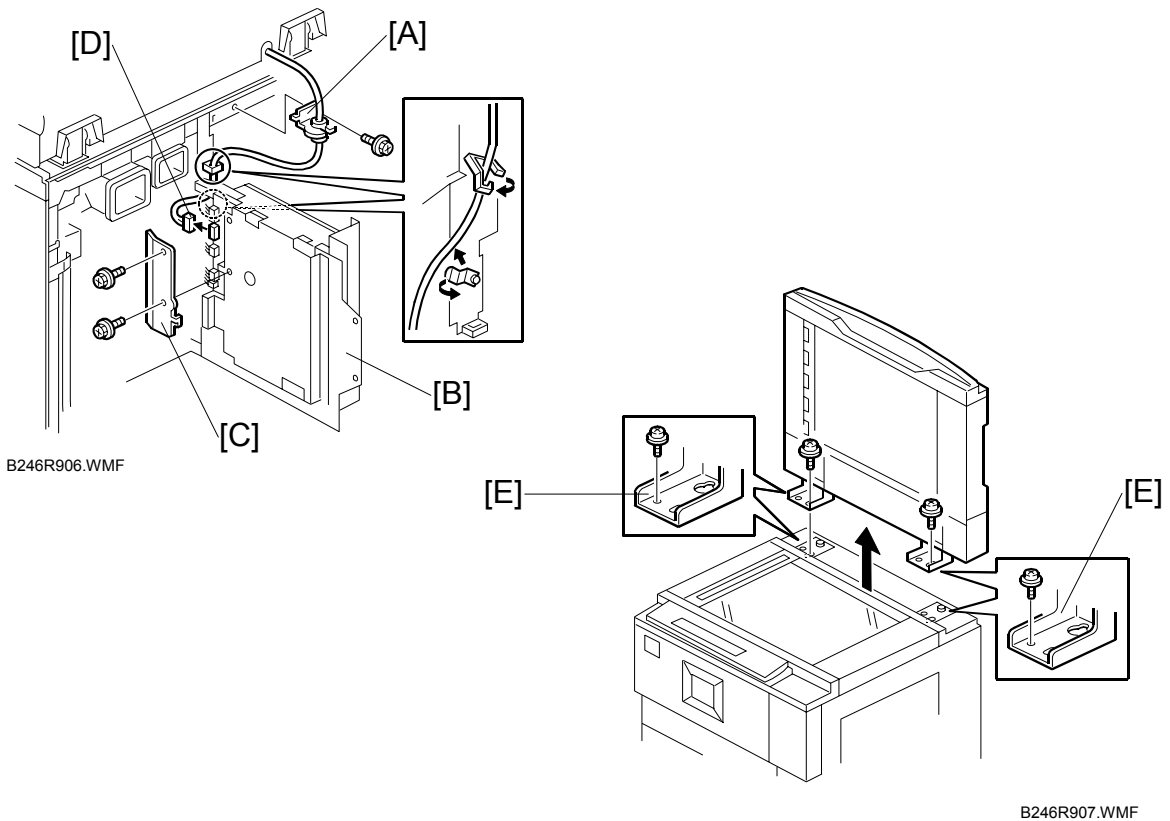

Rear upper cover. (➡ 3.3.5)

[A]: Cable bracket (🔩 x 1)

[B]: Controller/IPU panel (🔩 x 2)

- Swing open the panel so you can see the back.


[C]: Connector cover (🔩 x 2)

[D]: Connector (2nd from the top) (🔩 x 1)

[E]: ADF base left and right plates (🔩 x 2)

- While holding the ADF firmly, slide the ADF back and lift the large end of the keyholes over the shoulder screws.

Top Covers

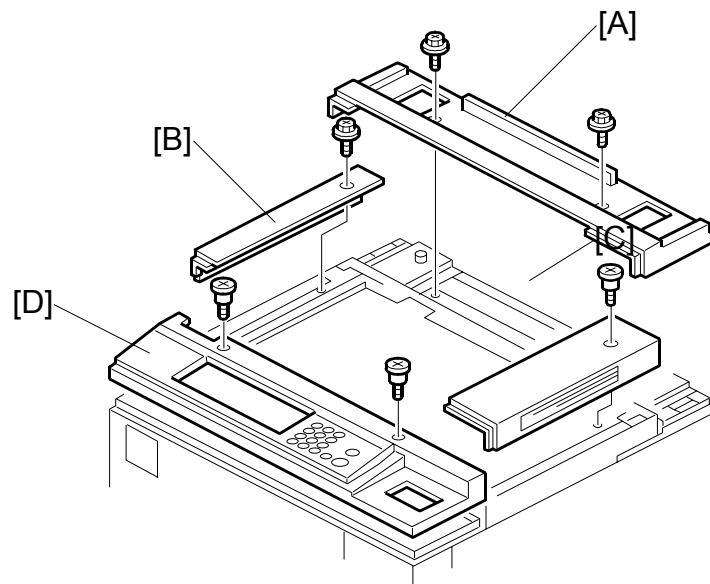

B246R908.WMF

ADF (☛ 3.4.1)

[A]: Top inside cover (🔩 x 2)


[B]: Top left cover (🔩 x 1)

[C]: Top right cover (🔩 x 1)

[D]: Operation panel (🔩 x 1) (☛ 3.3.1)

Replacement
Adjustment

3.4.2 EXPOSURE GLASS

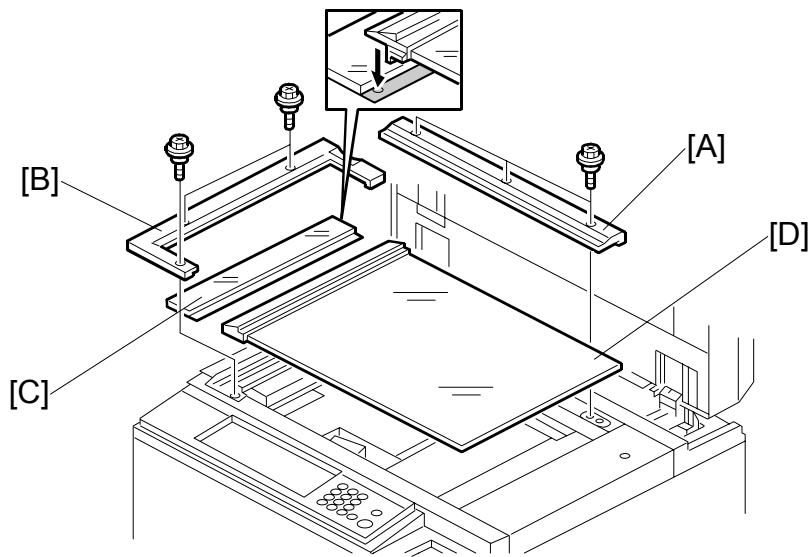

B246R909.WMF


- [A]: Rear scale (⚙ x 3)
[B]: Left cover (⚙ x 3)
[C]: ADF exposure glass
[D]: Exposure glass

NOTE: Lift out the exposure glass and left scale together. The left scale is permanently attached to the exposure glass with double-sided tape. Do not remove the left scale from the exposure glass.

When re-installing the exposure glass:

- Position the exposure glass first. Make sure that the arrow mark is in the upper left corner.
- When re-installing the left cover, make sure it is seated correctly.

3.4.3 SCANNER ORIGINAL SIZE SENSORS

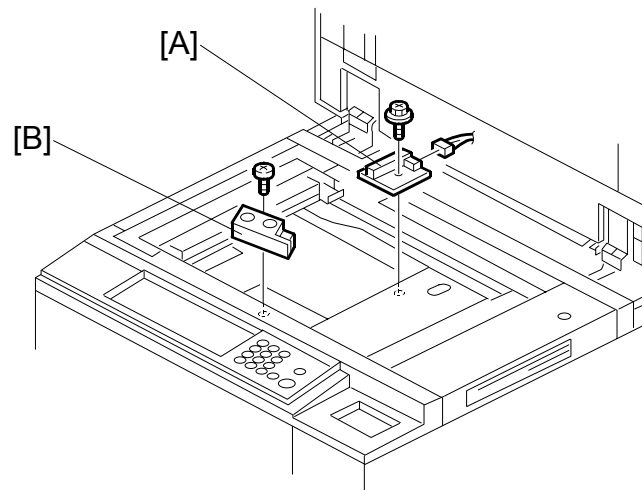

B246R910.WMF

**Replacement
Adjustment**


Exposure glass (☛ 3.4.2)

[A]: Original length sensor (🔧 x 1, 📏 x 1)


NOTE: In North America, two length sensors are provided.

[B]: Original width sensor (🔧 x 1, 📏 x 1)

3.4.4 LENS BLOCK

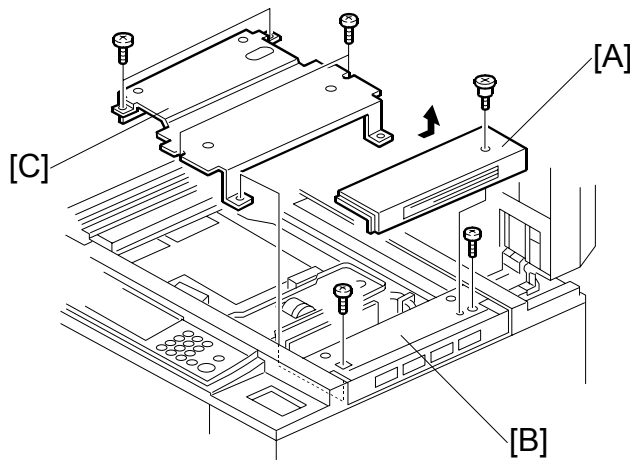

B246R911.WMF

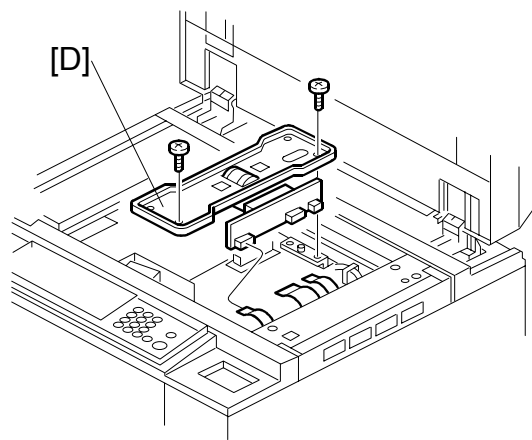

B246R912.WMF

Exposure glass (☛ 3.4.2)

Operation panel (🔧 x 1) (☛ 3.3.1)

[A]: Top right cover (🔧 x 1)

[B]: Right upper stay (🔧 x 2)


[C]: Lens cover (🔧 x 2)

[D]: Lens block (🔧 x 2, 📏 x 3)

NOTE: To avoid damaging the lens block, never set it down on the side with the PCB; turn it over with the PCB up.

Re-assemble the machine, then perform the scanner and printer adjustments.
(☛ 3.14)

3.4.5 EXPOSURE LAMP

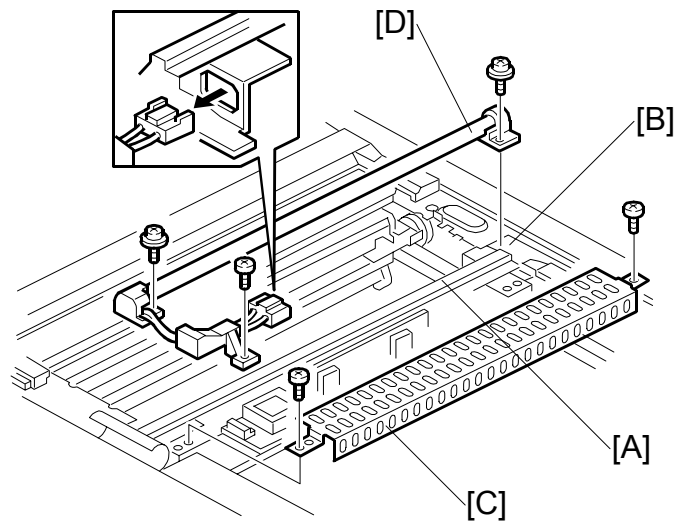

B246R913.WMF

Replacement
Adjustment

Exposure glass (☛ 3.4.2)

Operation panel (☛ 3.3.1)


Push the 1st scanner [A] to the cutout [B] in the scanner frame.

[C]: Exposure lamp cover (☛ x 2)

[D]: Exposure lamp (☛ x 3, ☛ x 1)

NOTE: Never touch the surface of the exposure lamp with bare fingers.

3.4.6 LAMP REGULATOR

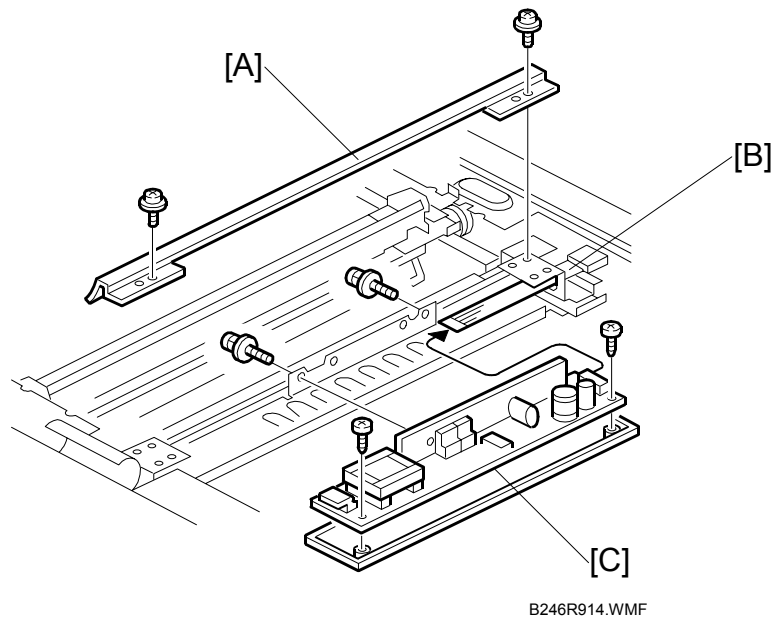

Operation panel (☛ 3.3.1)

Exposure glass (☛ 3.4.2)

Exposure lamp cover and exposure lamp (☛ 3.4.5)


[A]: Metal strip reflector

NOTE: Avoid touching the surface of the reflector and do not bend it.

[B]: Lamp regulator ribbon connector

[C]: Lamp regulator (⚙ x 4, 📏 x 1)

3.4.7 SCANNER MOTOR DRIVE BOARD (SDRB)

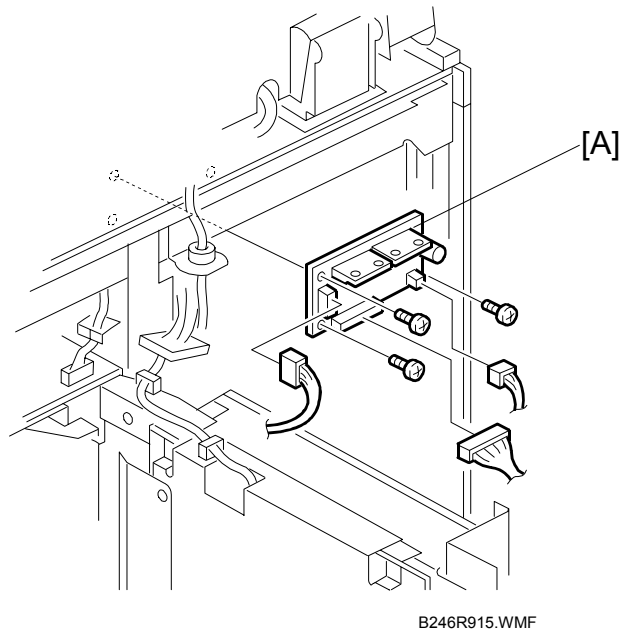


Replacement
Adjustment


Rear upper cover (☛ 3.3.5)

[A]: Scanner motor drive board (⚙ x 3, 📡 x 3)


3.4.8 SCANNER MOTOR

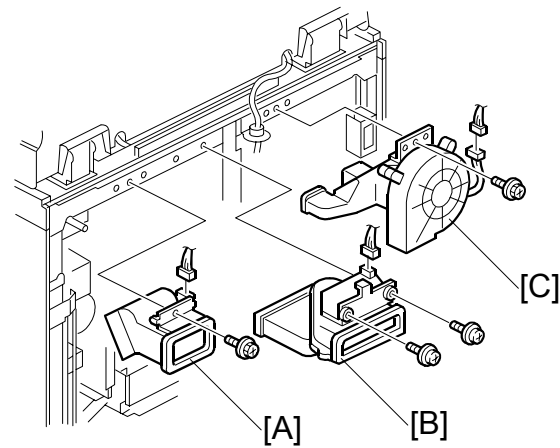

B246R916.WMF

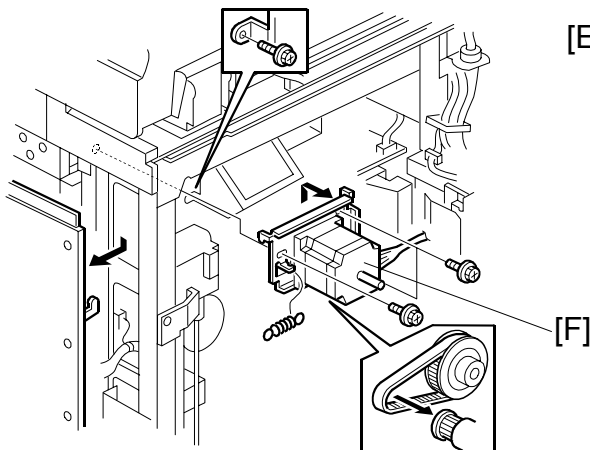

B246R918.WMF

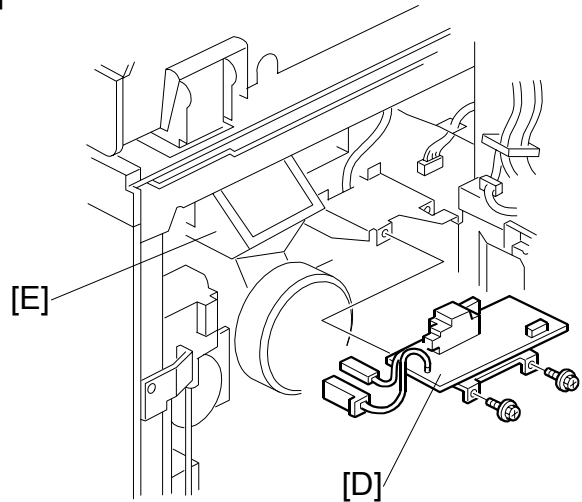

B246R917.WMF

Right upper cover (➡ 3.3.3)

Controller/IPU panel door

Flywheel (⚙ x 3)

[A]: Drum cooling fan (⚙ x 1, 🛠 x 1)

[B]: Charge power pack cooling fan (⚙ x 2, 🛠 x 1)

[C]: Exhaust fan (⚙ x 1, 🛠 x 1)


[D]: Development power pack (⚙ x 2, 🛠 x 3)

[E]: Vent (⚙ x 2)

[F]: Scanner motor (🛠 x 1, harnesses x 2, ⚙ x 3, timing belt x 1)

Re-assemble the scanner, then do the scanner and printer adjustments. (➡ 3.14)

3.4.9 SCANNER HP SENSOR

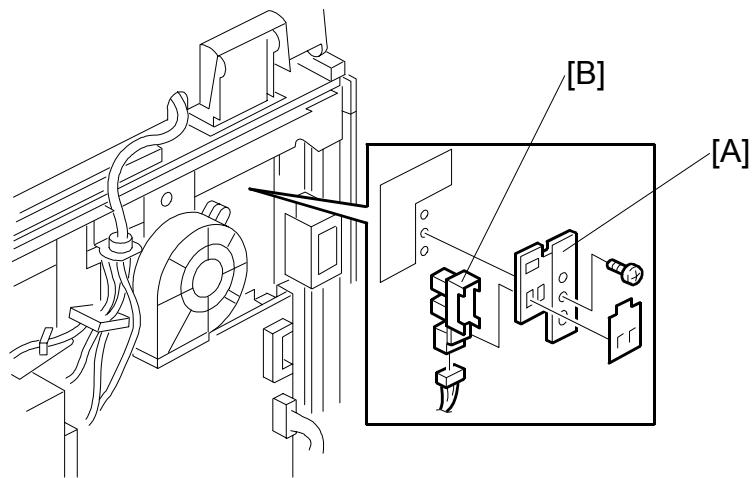

B246R919.WMF

Rear upper cover (☛ 3.3.5)


[A]: Sensor bracket and leaf (🔩 x 1)

[B]: Scanner HP sensor (🔌 x 1)


Replacement
Adjustment

3.4.10 SCANNER WIRE REPLACEMENT

Preparation for Removal

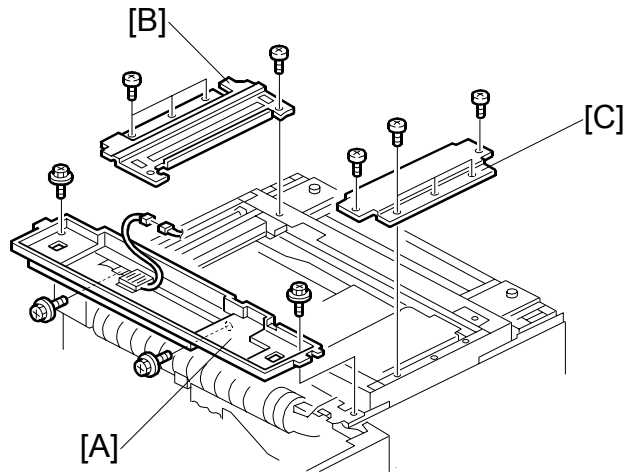

B246R920.WMF

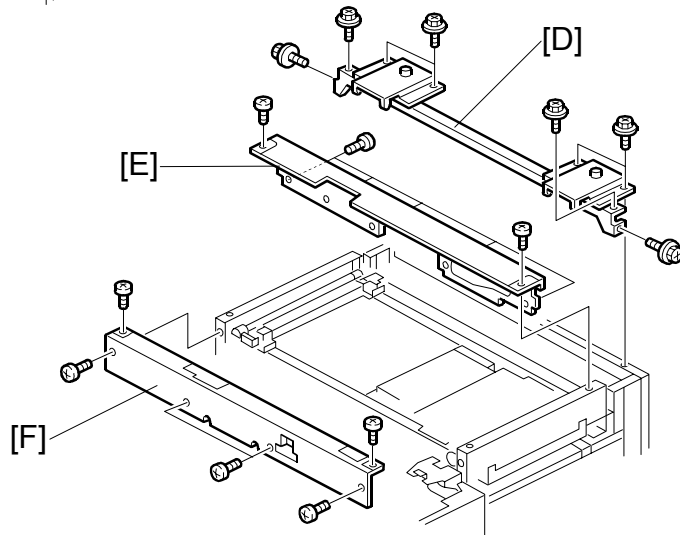

B246R921.WMF

ADF and top covers (➡ 3.4.1)

Operation panel (🔧 x 1) (➡ 3.3.1)

[A]: Scanner unit external cover (🔧 x 4, 📏 x 1)


[B]: Left stay (🔧 x 5)

[C]: Right stay (🔧 x 5)

[D]: ADF upper support frame (🔧 x 8)

[E]: Lower support frame (🔧 x 6)


[F]: Scanner unit front panel (🔧 x 6)

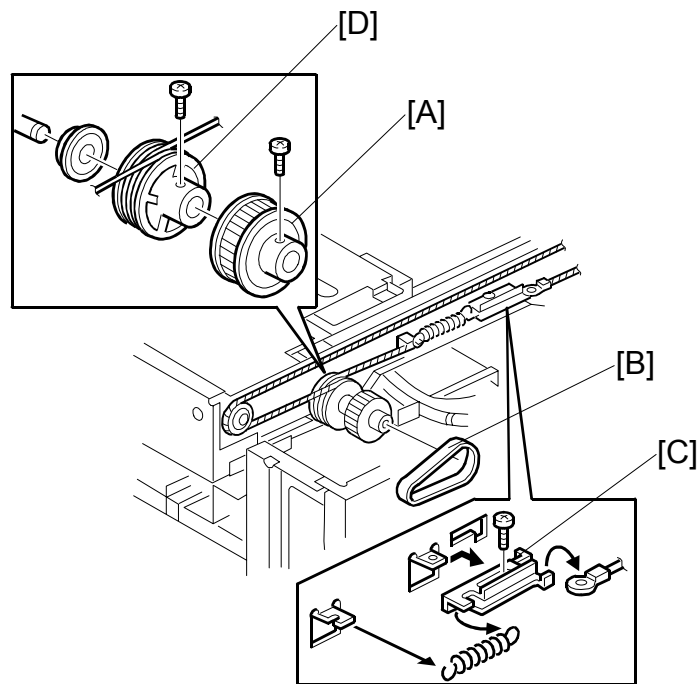Wire Removal: Back

B246R922.WMF

- [A]: Drive pulley (1 x 1)
[B]: Timing belt
[C]: Tension bracket (1 x 1, spring x 1)
[D]: Rear wire pulley (1 x 1) and rear scanner wire

**Replacement
Adjustment**

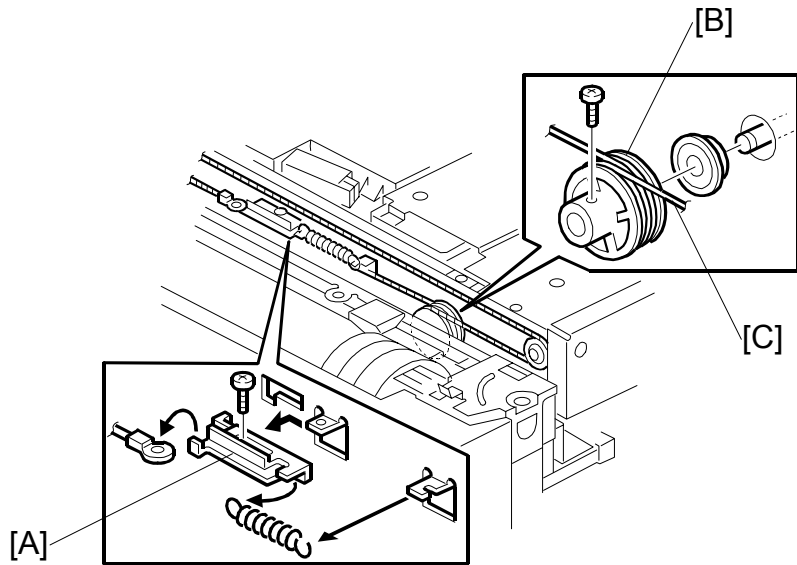Wire Removal: Front


B246R923.WMF

[A]: Tension bracket (1 x 1, spring x 1)

[B]: Front wire pulley (1 x 1)

- Remove the screw. While pulling back on the drive shaft, remove the pulley shaft.

[C]: Scanner wire

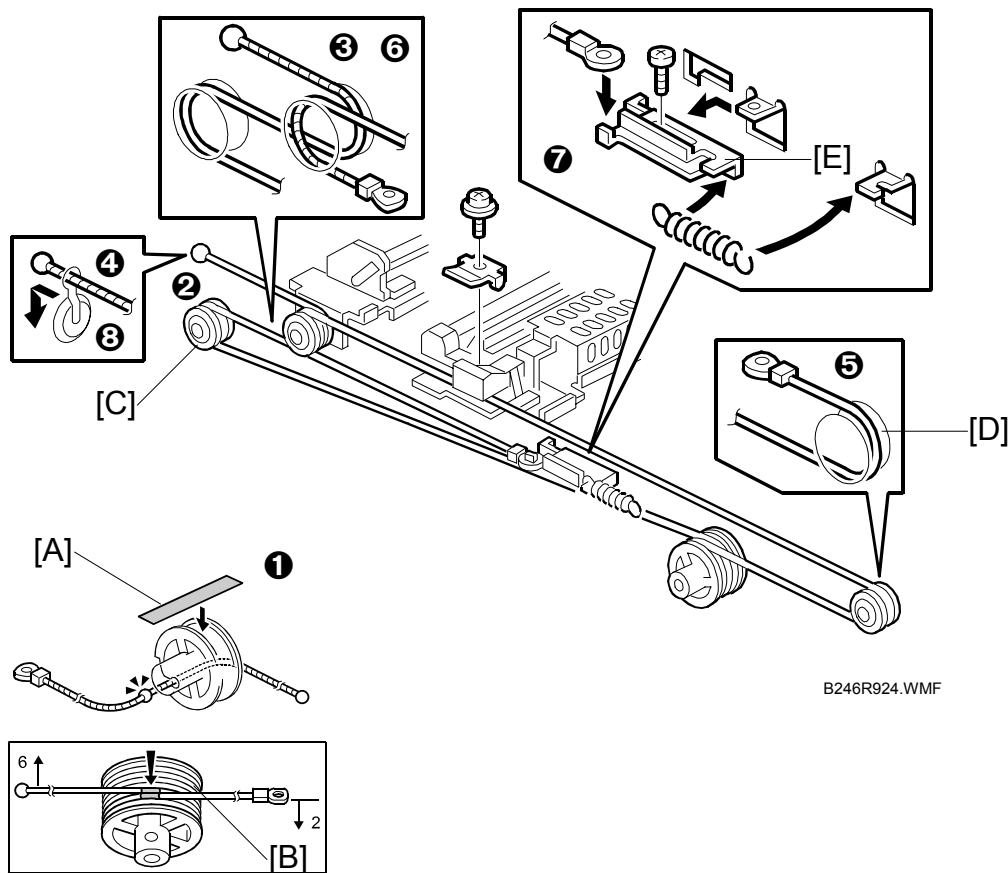
Attaching the New Wire

B246R924.WMF

B246R925.WMF

 Replacement
Adjustment



1. While paying attention to the direction of the wire (the leading bead), thread the wire [A] through the pulley, wrap the wire on the pulley, then apply tape to hold it in place.
 - Wind the wire on the bead side [B] clockwise 6 times, and the ring side 2 times as shown (1).
2. Set the pulley with the taped wire on the scanner drive shaft.
3. Position the 1st scanner with the positioning pins, part number A0069104 ([A] on the next page).
4. Wind the end of the wire with the bead [C] as shown (234).
5. Wind the ring-end of the wire around the pulley [D], install the tension bracket [E], then tighten the screw slightly to temporarily lock the wire to the bracket (567).

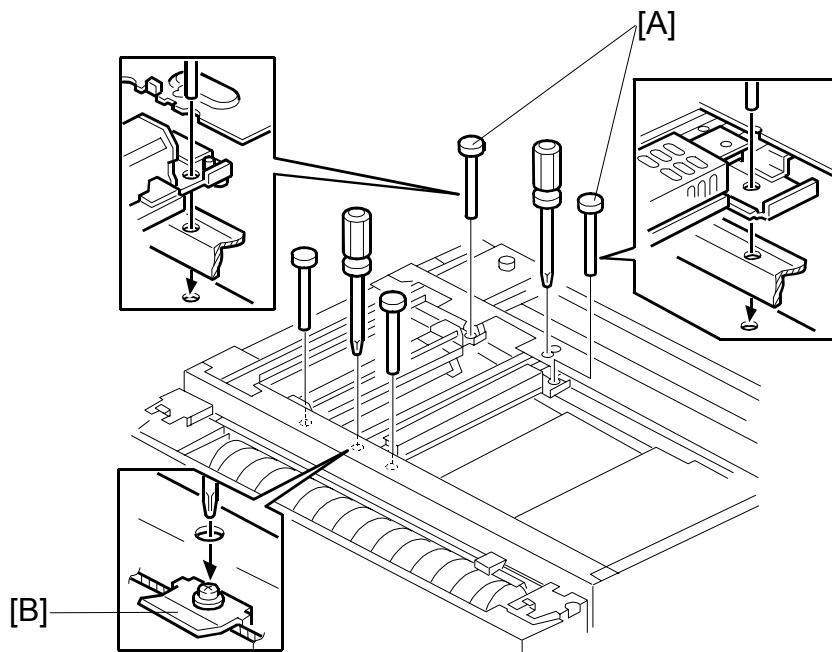

B246R926.WMF

6. Attach the 1st scanner bracket [B].
7. Tighten the screw on the tension bracket ([E] previous page).
8. Remove the positioning pins. Hold the center of the 1st scanner then move it gently left and right to make sure that the wire is seated and positioned correctly.
9. Insert the positioning pins again, then loosen the following screws: 2nd scanner inner screws, 1st scanner bracket screws, tension bracket screw.
10. With the pulley facing directly up, tighten the screws again to fix the pulley in place.
11. Re-assemble the scanner, then perform the scanner and printer adjustments.
(➡ 3.14)

3.4.11 SCANNER HEATER

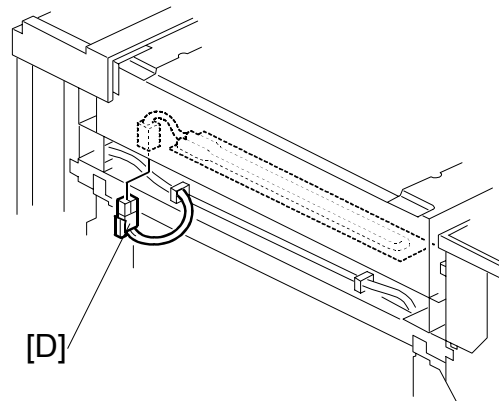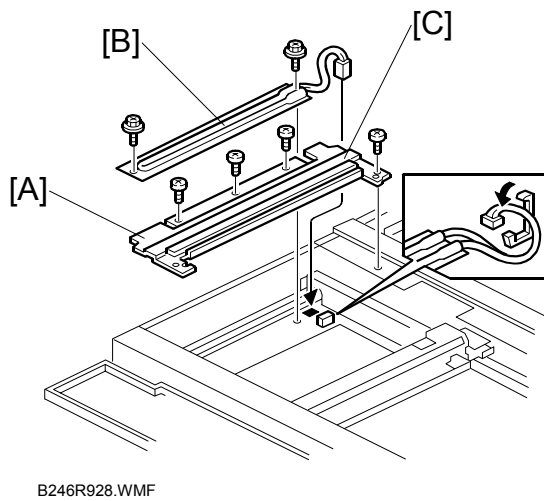

Replacement
Adjustment

Exposure glass (➡ 3.4.2)

Operation panel (➡ 3.3.1)

[A]: Scanning glass plate (🔩 x 4).

[B]: Scanner heater (🔩 x 2).

[C]: Fasten the cable with the harness clamp.

[D]: Fasten the connector on the left side of the machine (🔌 x 1).

3.5 LASER UNIT

⚠ WARNING


Turn off the main power switch and unplug the machine before performing any procedure in this section. Laser beams can seriously damage the eyes.

⚠ WARNING

- This laser unit uses four laser beams produced by a Class III LDA with a wavelength of 788 nm and intensity of 10 mW (13.2 mW for the B246 Series). Direct exposure to the eyes could cause permanent blindness.
- Before performing any replacement or adjustment of the laser unit, press the main power switch to power the machine off. Then unplug the machine from the power source. Allow the machine to cool for a few minutes. The polygon motor continues to rotate for about one to three minutes.
- Never power on the machine with any of these components removed: 1) LD unit, 2) polygon motor cover, 3) synchronization detector.


3.5.1 CAUTION DECALS

Two caution decals are provided for the laser section.

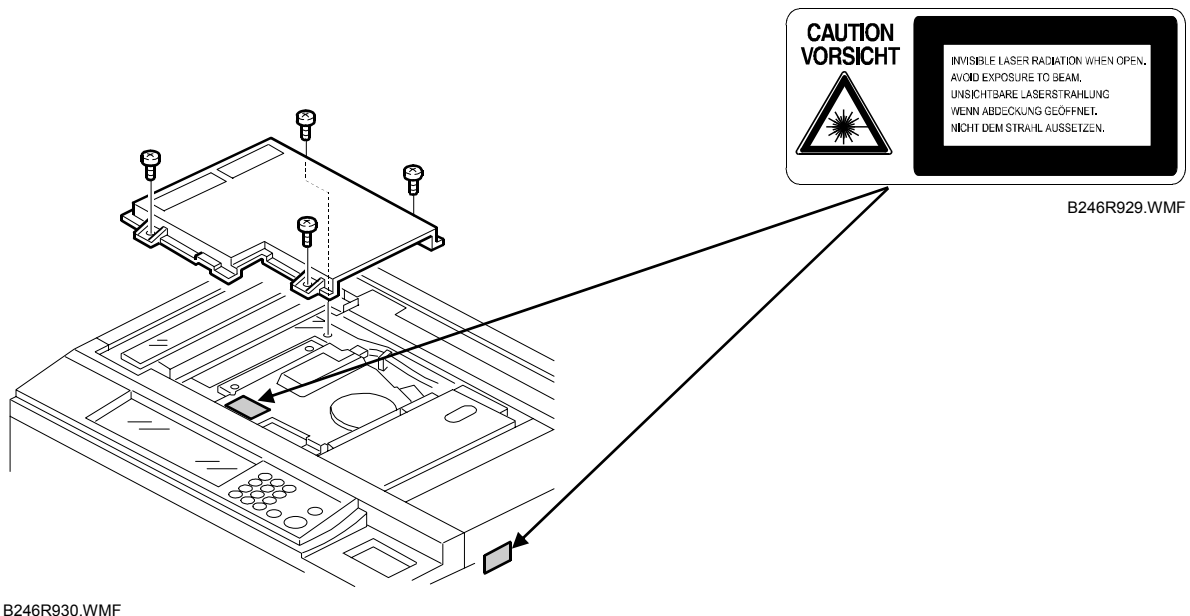

3.5.2 LD UNIT AND POLYGON MOTOR

- [A]: LD unit cover (⚙ x 4)
 [B]: Harness connector
 [C]: Polygon motor cover (⚙ x 4)

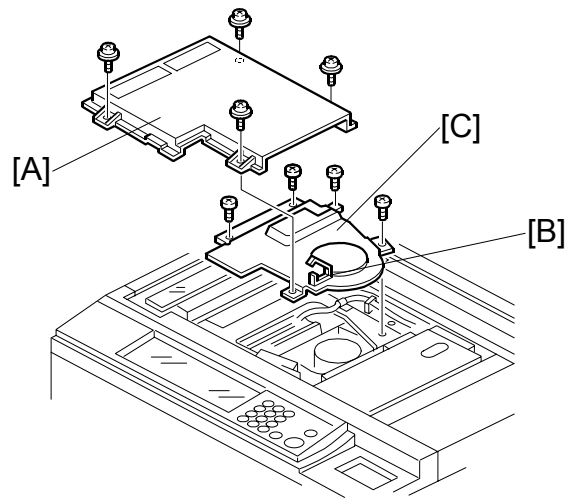

B246R931.WMF


 Replacement
Adjustment

⚠ CAUTION

- An accidental static discharge could damage the LDB (Laser Diode Board). Touch a metal surface to discharge any static electricity from your hands.
- The polygon motor rotates at extremely high speed and continues to rotate after switching the machine off. To avoid damaging the motor, never remove the polygon motor within three minutes of switching off the main power and disconnecting the power plug.

- [D]: LDB connectors (⚙ x 6)
 [E]: LD unit (⚙ x 2)
 [F]: Polygon motor (⚙ x 3, ⚙ x 2)

- Follow this procedure in reverse order to install the new LD unit or polygon motor.

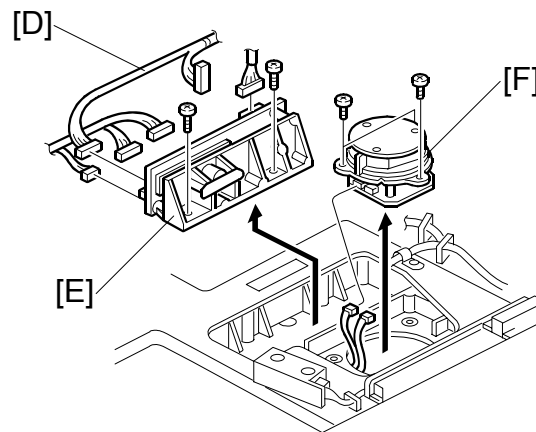


B246R932.WMF

⚠ CAUTION

Before fastening the polygon motor in place (⚙ x 3, ⚙ x 2), make sure that the glass panel of the laser port is facing to the right (toward the mirrors in the optical path).


SP Adjustments

1. Execute SP2962 (Automatic Adjustment of Drum Conditions) after replacing the LD unit, but only if SP3901 – Auto Process Control – is on.
2. Read the label [A] attached to the LD unit [B]. Execute SP2115 (Main Scan Beam Pitch Adjustment) and enter the numbers printed on the label.

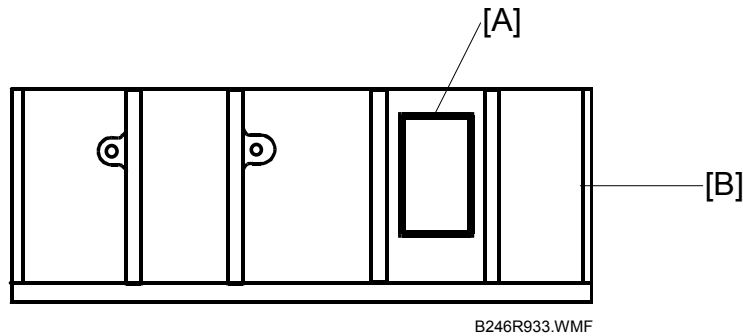

- The first line on the label is the machine number.
 - The second line on the label includes three numbers separated by slashes. Reading from left to right, these are the correct settings for SP2115 (Main Scan Beam Pitch Adjustment) 001, 002, and 003.
 - Do not remove this label and make sure it is flat against the side of the LD unit.
3. Perform the scanner and printer adjustments. (➡ 3.14)

3.5.3 LASER SYNCHRONIZATION DETECTOR REPLACEMENT

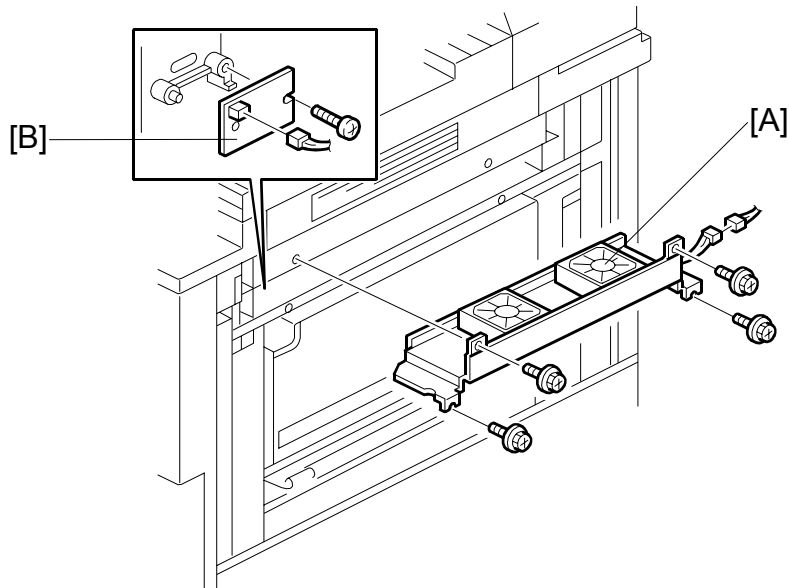

B246R934.WMF

Remove the right side cover (⚙️ x 2)

NOTE: If the optional LCT is installed, disconnect it (⚙️ x 1).

[A]: Development unit fans (⚙️ x 4, 📡 x 1)

[B]: Synchronization detector (⚙️ x 1, 📡 x 1)

After replacement, set SP1002-001~007 (Side-to-Side Registration) to the defaults.

Replacement
Adjustment


3.5.4 LASER UNIT ALIGNMENT

⚠ WARNING

If you have just disassembled the LD unit, to avoid serious damage to the eyes from accidental exposure to laser beams you must confirm that the machine has been re-assembled completely before operation.


This adjustment corrects the parallelogram pattern to the desired rectangular pattern for printing; it does not correct the skew of scanned images.

1. Execute SP2902-003 (Test Pattern – Printing Test Pattern) 018 to print the A4 LEF pattern. Check the printed patterns and estimate the angle of adjustment required.
2. Remove the exposure glass (☞ 3.4.2).
3. Remove the LD unit cover and polygon motor cover (☞ 3.5.2).
4. Remove the right cover (☞ 3.3.3).
5. Loosen the screws of the laser exposure unit **①②③** (🔧 x 3).

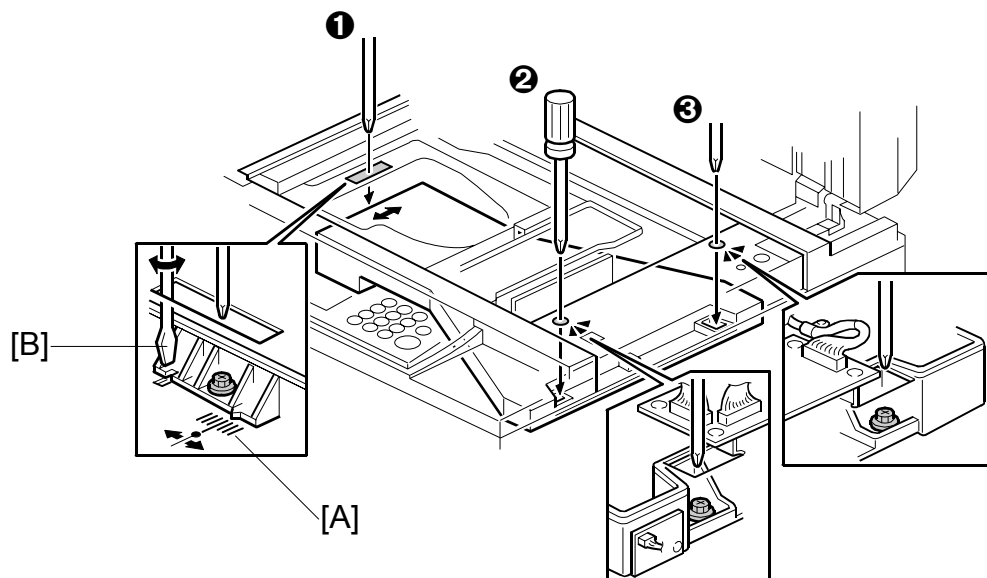

B246R935.WMF

6. While watching the scale [A], use a flathead screwdriver [B] to move the laser exposure unit left or right to adjust the position of the unit.

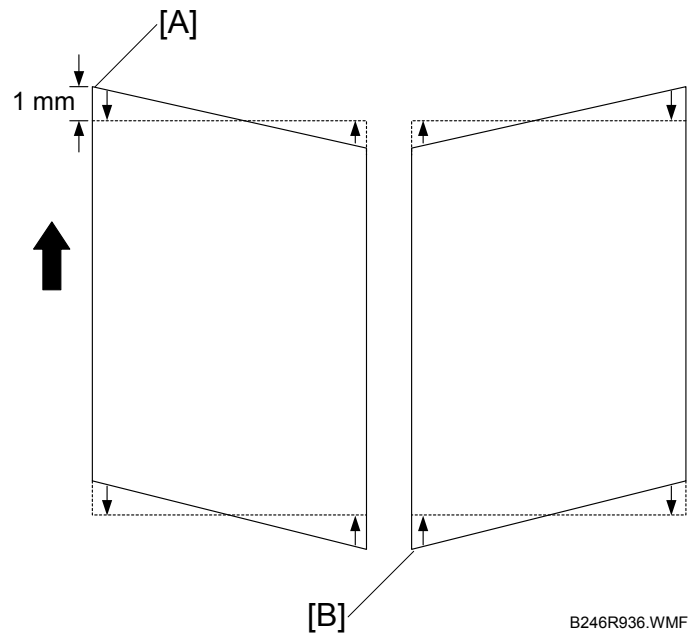

Replacement
Adjustment

7. Adjust the position of the laser exposure unit.
 - If the pattern is skewed at the corner of the leading edge [A], move the unit so it moves the pointer on the scale toward the back.
 - If the pattern is skewed at the lower left corner of the trailing edge [B], move the unit so it moves the pointer on the scale toward the front.


NOTE: The scale is set for increments of 1 mm.

8. After adjustment, tighten the screws on the laser exposure unit, re-assemble the machine and print the pattern again with SP2902-003 No.18.
9. Check the pattern. Repeat the procedure if more adjustment is required.

3.6 DRUM UNIT

3.6.1 DEVELOPMENT UNIT REMOVAL

Removal

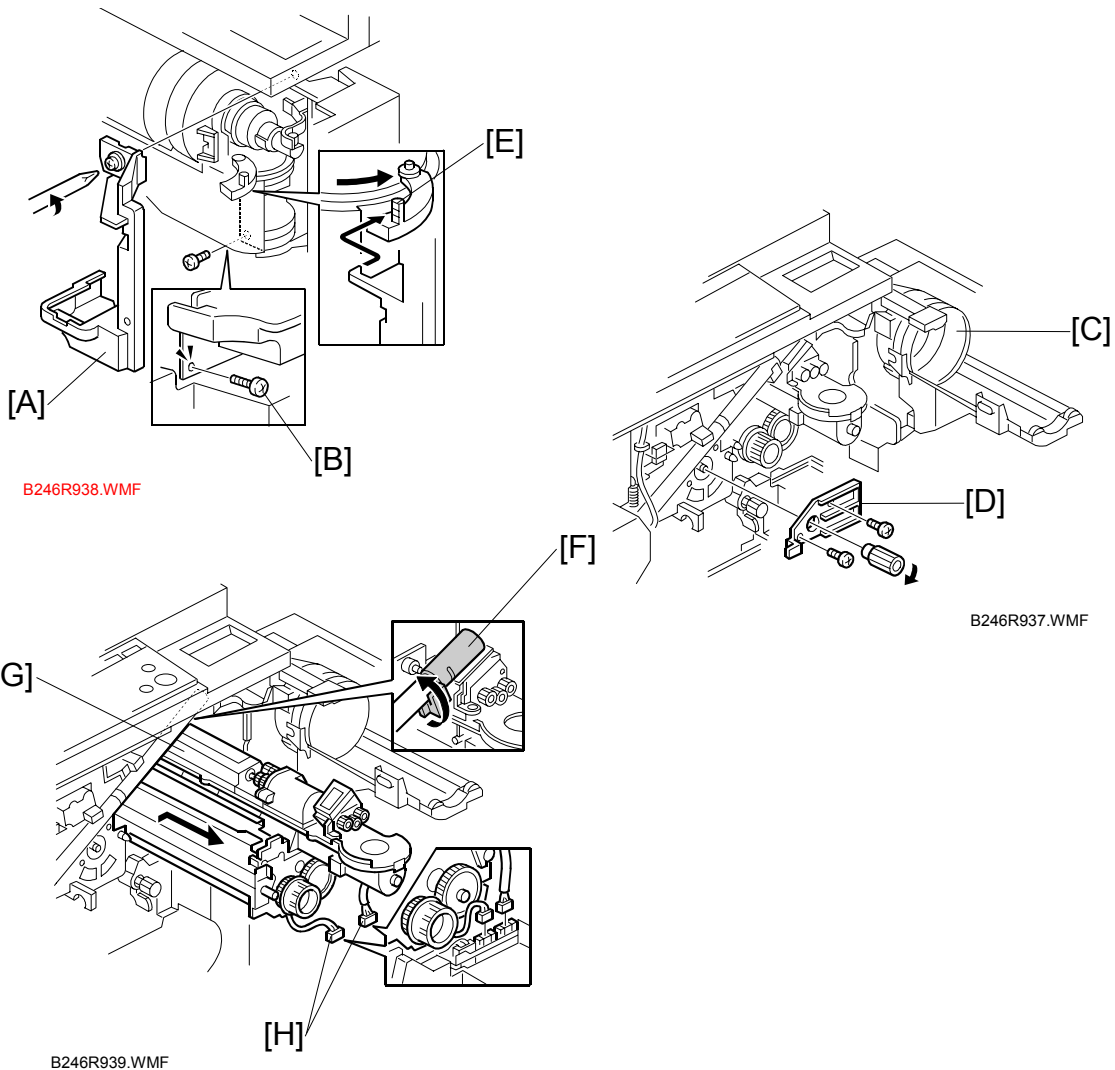

Open the front door.

[A]: Shutter cover (🔩 x 1).

[B]: Lock screw

[C]: Toner bottle.

- Pull the toner bottle holder out and swing the toner bottle holder to the right.

[D]: Face plate (knob x 1, 🔩 x 2)

NOTE: After re-installation, the tab [E] should be behind the stay and its pin below should be in the open track below.

[F]: Close the supply pipe shutter

[G]: Development unit (🔩 x 2 [H])

- Allow the unit to slip to the right, then slowly pull it out of the machine.

NOTE: If the LCT is installed, you may need to disconnect it so the front door can open far enough to allow removal of the development unit.




Re-installation

When re-inserting the development unit, engage the plate ① on the front of the development unit with the silver pin [A] inside the machine, then slide it to the left ② toward the drum.

If the unit is installed correctly, you should see the pin above the plate, and the plate should be flat against the front of the development unit.

If the development unit will not move past the pin, the couplings are not aligned correctly at the back of the machine. Turn the gear on the front of the developer unit until the couplings engage at the rear of the machine.

Before closing the front door, make sure that the pipe line shutter is rotated down to the open position.

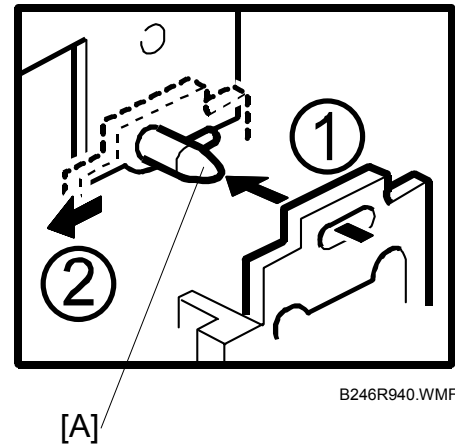


Replacement
Adjustment

Replacement with a used Development Unit

When using a development unit from another machine for test purposes, execute the following procedure.

1. Check the value of SP2220 (Vref Manual Setting) in both the machine containing the test unit and the machine that you are going to move it to.
2. Install the test development unit, then input the V_{REF} for this unit into SP2220.
3. After the test, reinstall the old development unit, and change SP2220 back to the original value.

3.6.2 CHARGE CORONA UNIT

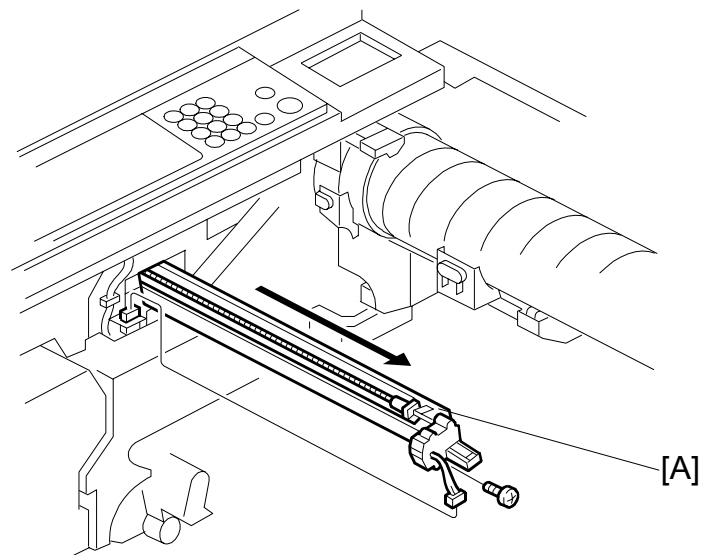


B246R941.WMF

Development unit (➡ 3.6.1)

[A]: Charge corona unit (🔧 x 1, 📋 x 1)

3.6.3 CHARGE CORONA WIRE AND GRID

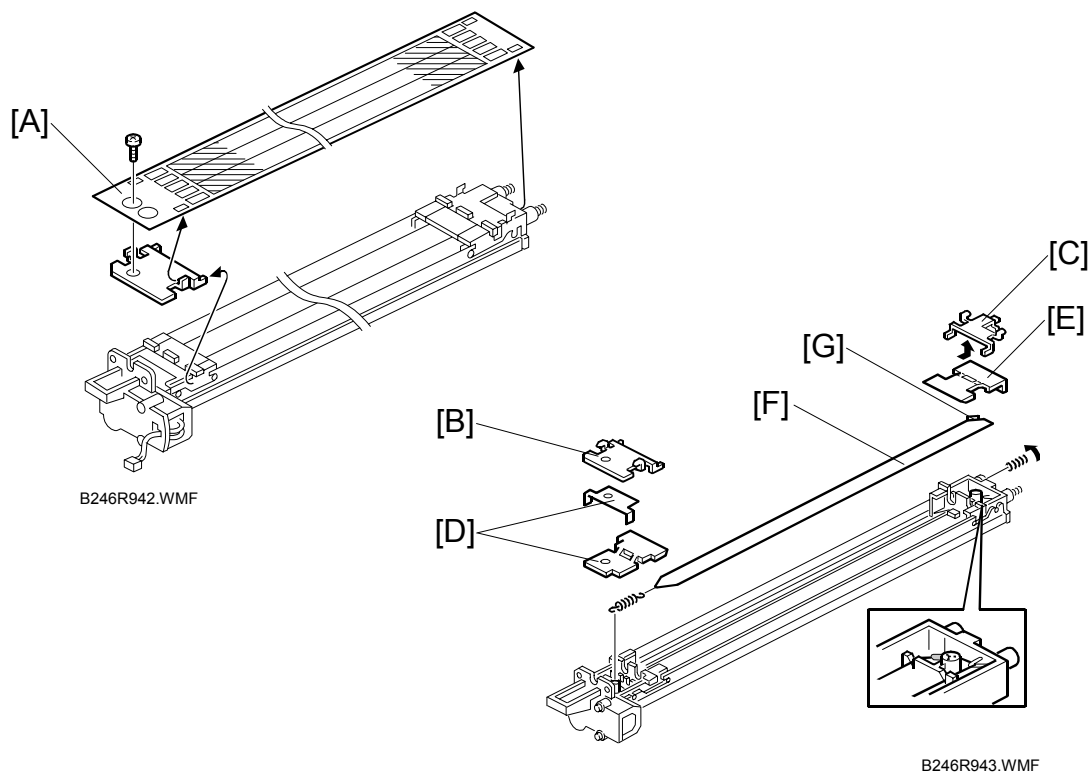

Replacement
Adjustment


Charge corona unit (☛ 3.6.1)

- [A]: Grid (☛ x 1)
- [B]: Front bracket
- [C]: Rear bracket
- [D]: Front block cover
- [E]: Rear block cover
- [F]: Corona wire

- Disconnect the wire behind the grid bracket.

- NOTE:**
- 1) Never touch the charge corona wire with bare hands. Always protect it from dust, oil, etc.
 - 2) Never bend or knot the wire. Charge will not distribute evenly on a bent wire.
 - 3) Make sure that the wire seam [G] is as close as possible to the wire hook at the rear.
 - 4) At the front and back, make sure that the wire is threaded correctly into the grooves in the end blocks.
 - 5) After replacing the charge corona wire, make sure that the wire cleaner pads are engaged correctly with the wires.
 - 6) After replacing the wire, set SP2001-001 (Charge Roller Bias Adjustment – Applied Voltage for Image Processing) to the default.

3.6.4 CHARGE CORONA WIRE CLEANING PADS

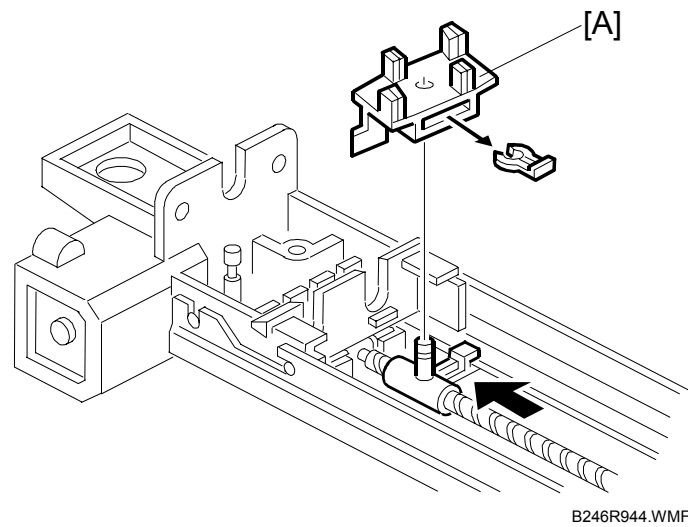


Charge corona unit (☛ 3.6.2)


Charge corona wire and grid (☛ 3.6.3)

[A]: Cleaning pad (☞ x 1)

3.6.5 OPC DRUM REMOVAL

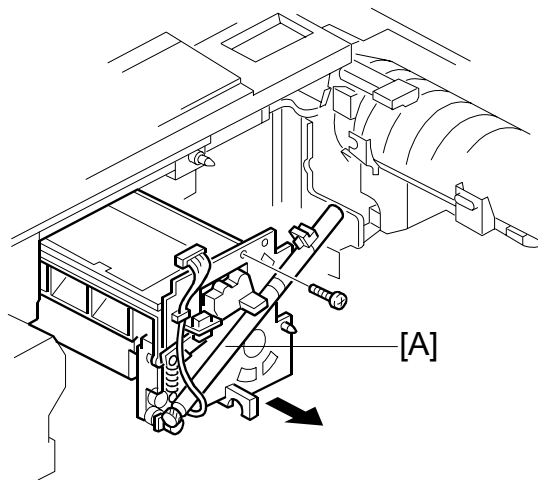

B246R945.WMF

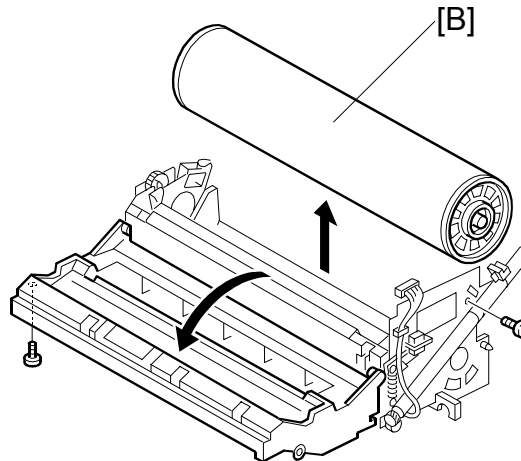

B246R946.WMF

Replacement
Adjustment

Development unit (☛ 3.6.1)

Charge corona unit (☛ 3.6.2)

[A]: Drum unit (🔧 x 1, 📁 x 1)

- Grasp the drum unit by the knob to remove it from the machine.

[B]: OPC drum

After replacing the drum, do the following SPs:


- Set SP2001-001 (Charge Roller Bias Adjustment – Applied Voltage for Image Processing) to the default setting.
- SP2962 (Adjustment of Drum Conditions), only if SP3901 (Auto Process Control) is on.

NOTE: 1) To avoid fingerprints on the surface of the OPC drum, never touch the surface of the drum with bare fingers.
 2) Never use alcohol to clean the surface of the OPC drum. Blow dry the OPC drum, then wipe clean with a clean, slightly damp cloth.
 3) Before installing a new drum, dust the surface of the OPC drum carefully with setting powder. (See next procedure.)

Dusting the Drum Surface


The surface of the drum is less smooth, so you must apply Drum Setting Powder (P/N: 54429101) to the drum surface before installation.

Important!: Failure to apply the drum powder before installation could damage the drum cleaning blade or scour the drum surface.

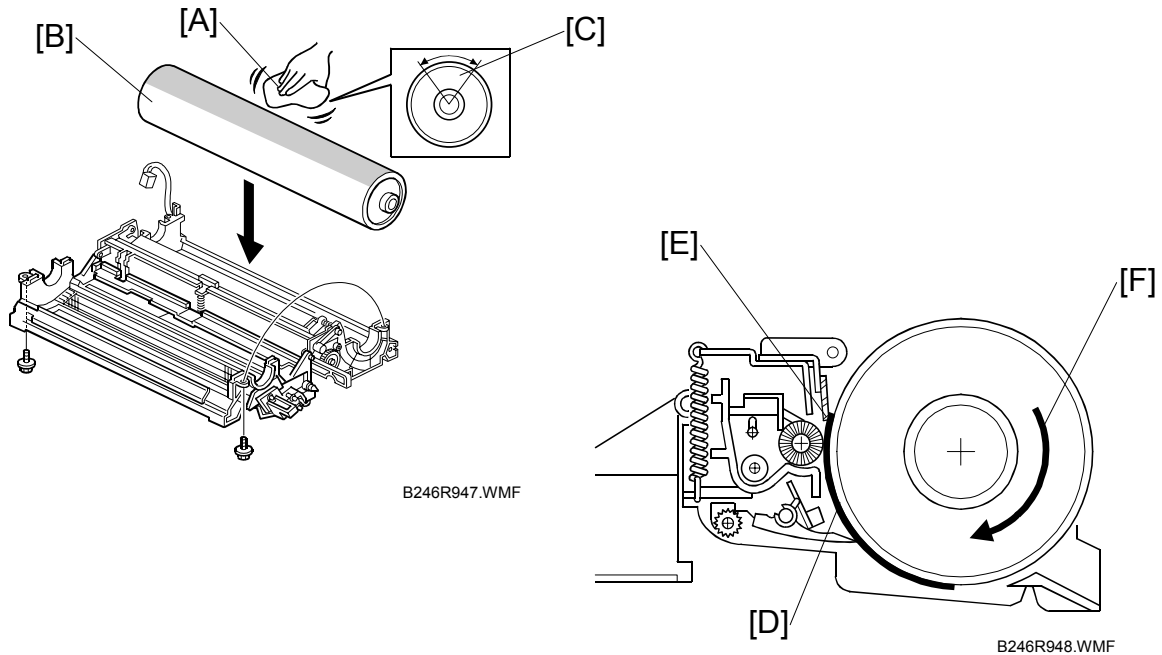

1. Apply the setting powder by tapping the powder bag [A] across the surface of the drum [B].
2. Cover the entire length of the drum over a 45-90 degree portion [C] (about 1/4 of the total drum surface). Apply enough powder so the area turns white.
NOTE: If setting powder is not available, use waste toner instead of drum setting powder. However, this could cause dirty backgrounds on the first copies.
3. Install the new drum in the OPC unit so that the powdered surface [D] faces the cleaning blade [E].
4. Rotate the drum once clockwise [F] until it stops again at the same position.
Important: Never rotate the drum anti-clockwise.

3.6.6 PTL (B140 AND B246 SERIES ONLY)

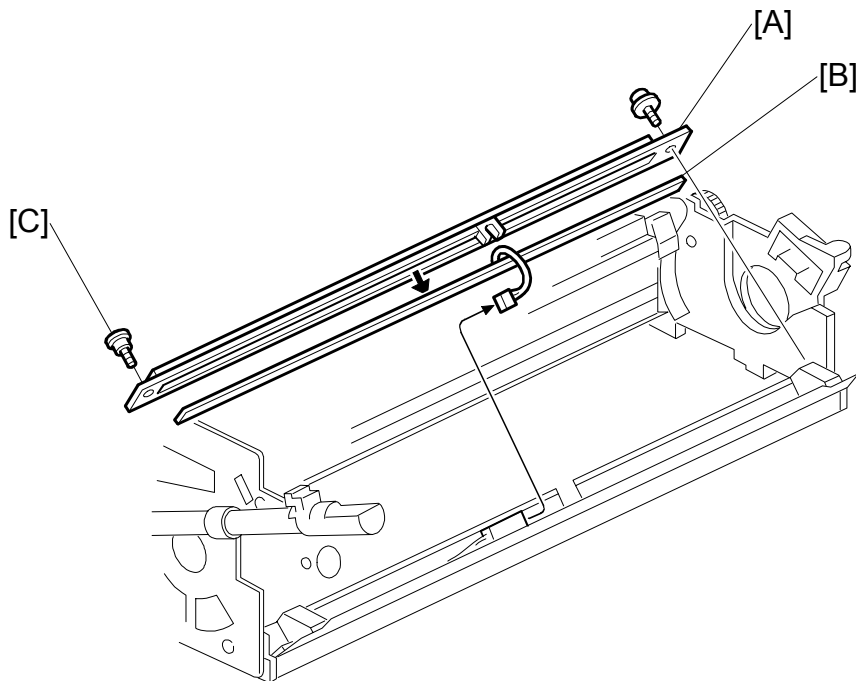

B246R949.WMF

OPC drum (☛ 3.6.5)

[A]: PTL bracket (🔩 x 2)


[B]: PTL (🔧 x 1)

Reinstallation

- The shoulder screw [C] must be attached again at its initial location.

Replacement
Adjustment

3.6.7 QUENCHING LAMP

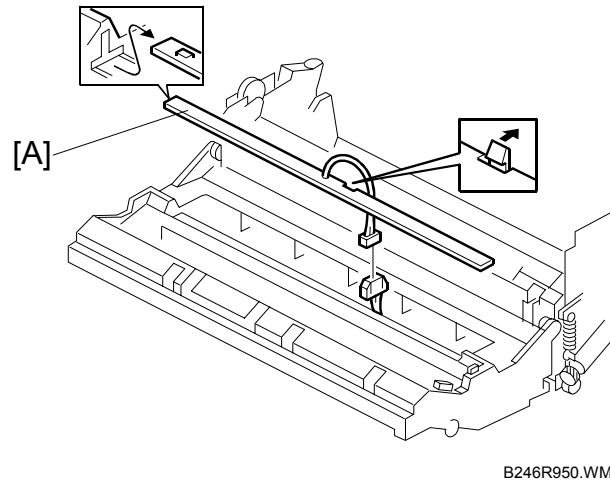


OPC drum (☛ 3.6.5)

[A]: Quenching lamp (☛ x 1)

- At the center, push back the hook to release the quenching lamp.

NOTE: Use only a blower brush to clean the quenching lamp.

3.6.8 DRUM POTENTIAL SENSOR

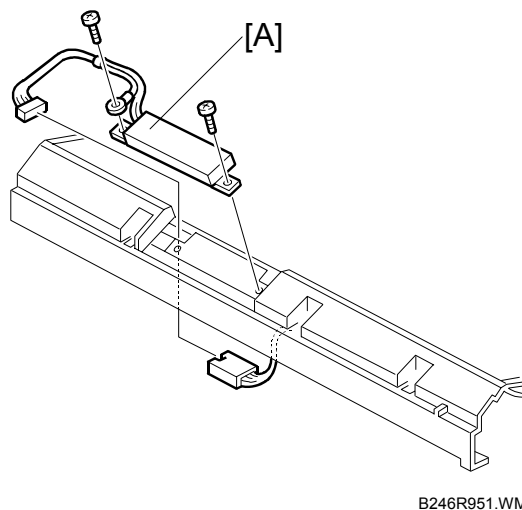


OPC drum (☛ 3.6.5)

[A]: Drum potential sensor (☛ x 2, ☛ x 1)

NOTE: After replacing the drum potential sensor, do SP2962 (Adjustment of Drum Conditions), only if SP3901 (Auto Process Control) is on).

3.6.9 CLEANING FILTER

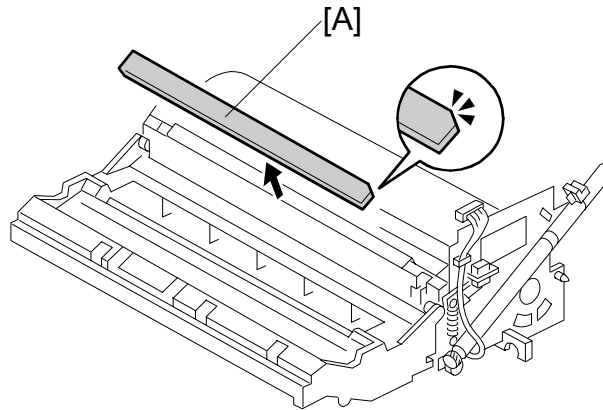


B246R952.WMF

OPC drum (➡ 3.6.5)

[A]: Cleaning filter

Replacement
Adjustment

3.6.10 CLEANING BLADE

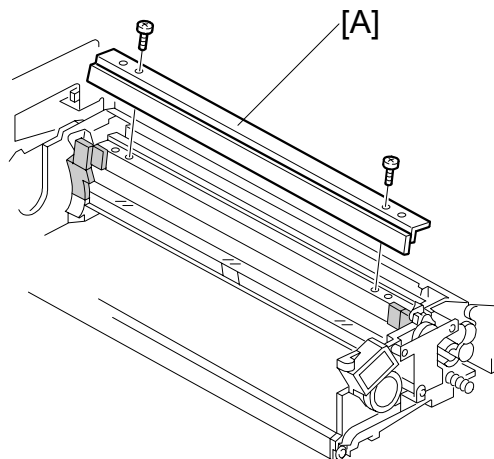


B246R953.WMF

OPC drum (➡ 3.6.5)

[A]: Drum cleaning blade (🔑 x 2)

- NOTE:**
- 1) Clean the blade edge carefully with only a soft, clean cloth.
 - 2) Handle the blade carefully to avoid nicking its edge.
 - 3) New blades are treated with special setting powder, so avoid touching the edge of a new cleaning blade. If the edge of a new blade is accidentally wiped clean, dust it lightly with some toner before installing it.
 - 4) Before installing a new blade, make sure that the blade side seals are not pinched by the blade.

3.6.11 CLEANING BRUSH

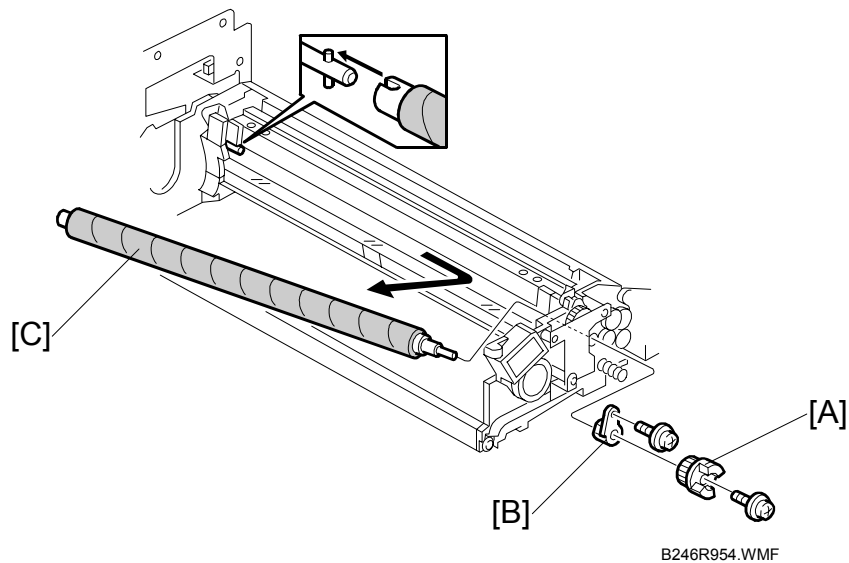

OPC drum (☛ 3.6.5)

Drum cleaning blade (☛ 3.6.10)

[A]: Coupling (☛ x 1)

[B]: Inner bushing

[C]: Cleaning brush


- Pull the shaft toward the rear to disengage the front of the shaft, then pull out.

NOTE: 1) After replacing the cleaning brush, clean the ID sensor to make sure that it is clean and free of toner.

2) Avoid touching the cleaning brush with bare hands.

3) Check the entrance seals and confirm that they are not bent.

3.6.12 PICK-OFF PAWLS

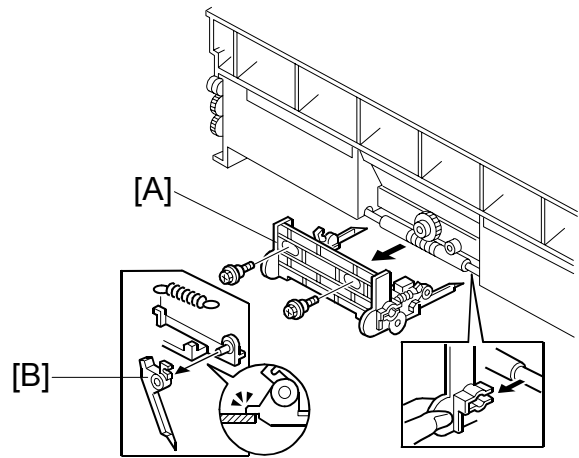

B246R955.WMF


 Replacement
Adjustment

OPC drum (☛ 3.6.5)

[A]: Pick-off pawl bracket (☛ x 2)

[B]: Pick-off pawl (spring x 1)

3.6.13 ID SENSOR

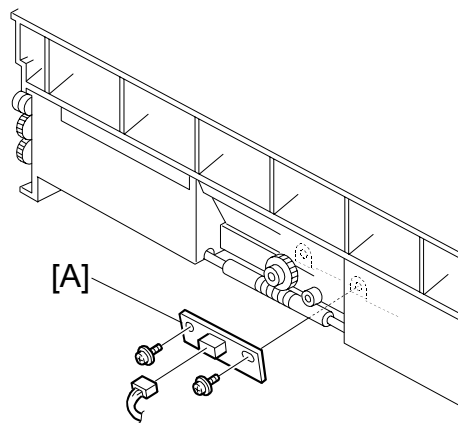

B246R956.WMF

OPC drum (☛ 3.6.5)


Pick-off pawls (☛ 3.6.12)

[A]: ID sensor (☛ x 2, ☛ x 1)

After replacing the sensor, do the following SPs:

- SP2962 (Adjustment of Drum Conditions), only if SP3901 (Auto Process Control) is on).
- SP3001-002 (ID Sensor Initialization Setting).

3.6.14 DRUM MOTOR

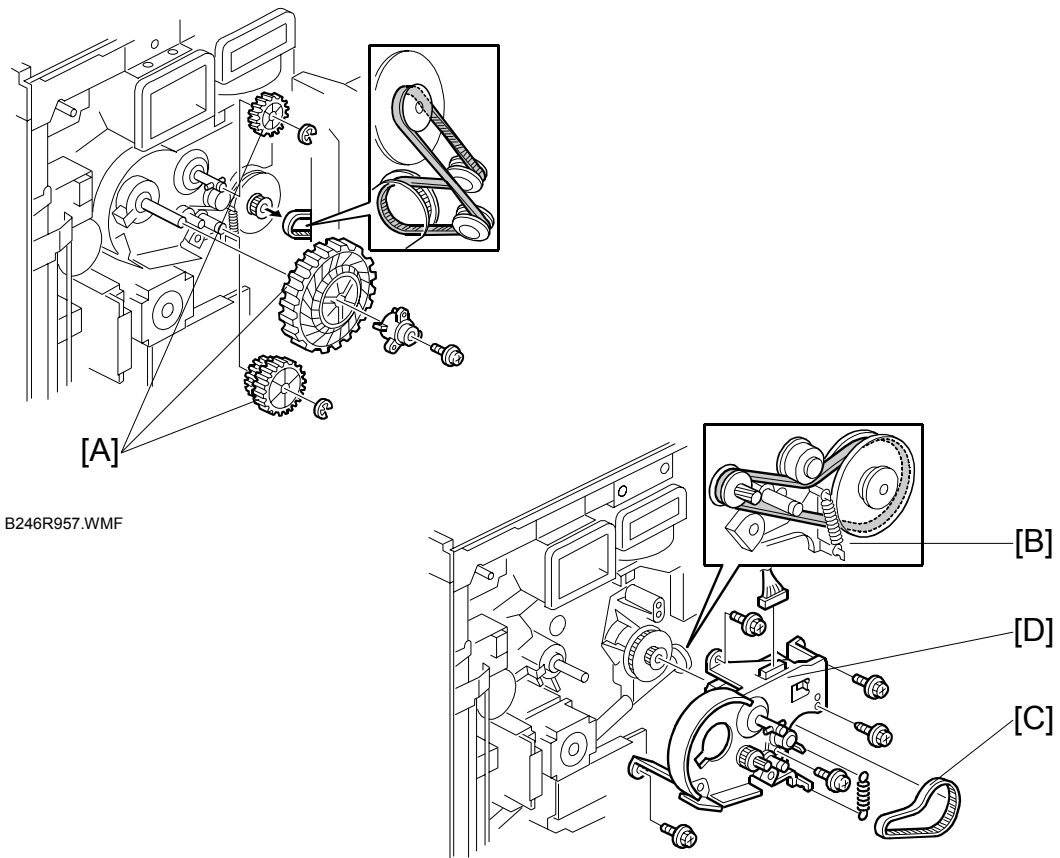

B246R957.WMF

B246R958.WMF

Rear covers (☛ 3.3.5)

Controller/IPU panel (☛ x 2) (not shown)

- The panel swings open like a door. You do not need to remove it.

Flywheel (☛ x 3) (not shown)


[A]: Three gears (☛ x 1, ☛ x 2, Timing belt x 1)

[B]: Spring

[C]: Timing belt

[D]: Drum motor (☛ x 1, ☛ x 5)


3.6.15 TONER COLLECTION BOTTLE

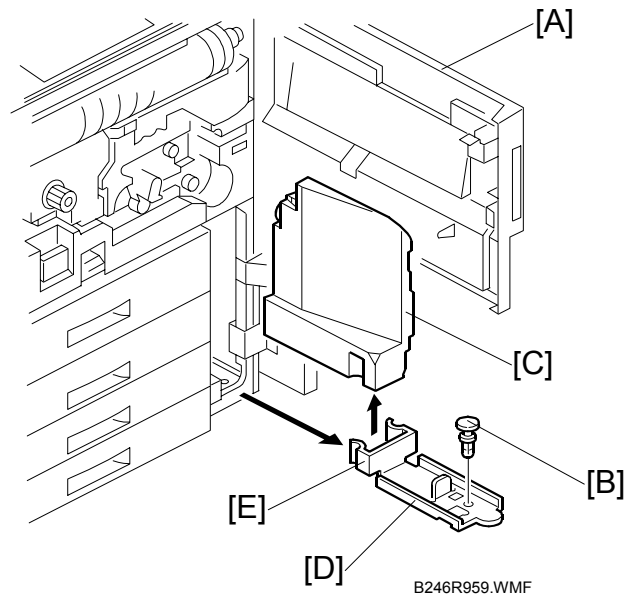

Replacement
Adjustment

1. Open the front door [A].
2. Remove the lock pin [B], then pull out the toner collection bottle [C] and its base [D].
3. Detach the bottle from the base clamp [E] and replace it.

3.6.16 TONER SEPARATION UNIT

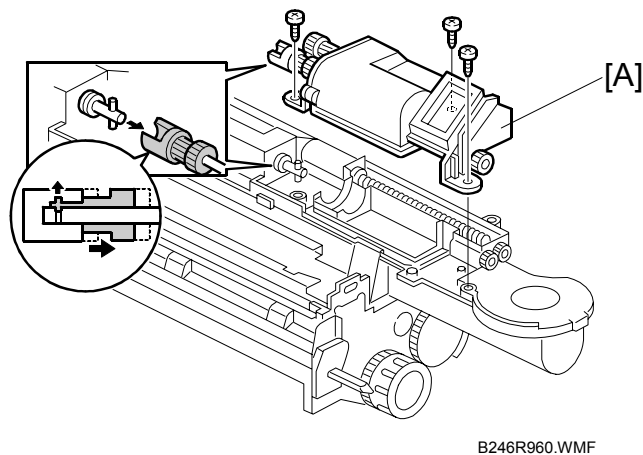


Development unit (☛ 3.6.1)

[A]: Toner separation unit (🔩 x 3)


3.6.17 OZONE FILTERS

- [A]: Filter cover (⌀ x 1)
 • The filter cover is on the back of the machine.
 [B]: Ozone filter (top)
 [C]: Ozone filter (bottom)

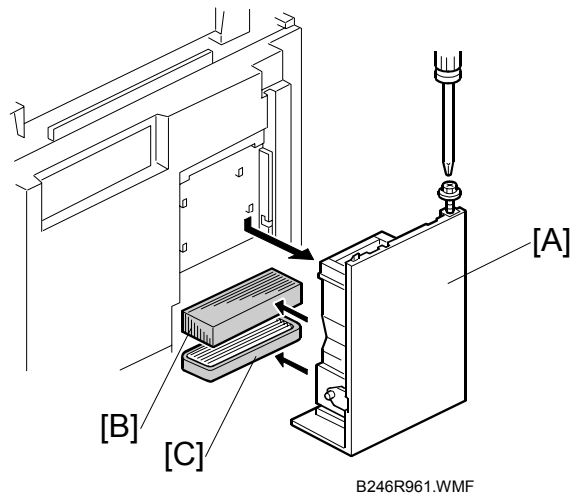


3.6.18 OPTICS DUST FILTER

- [A]: Filter cover
 [B]: Optics dust filter

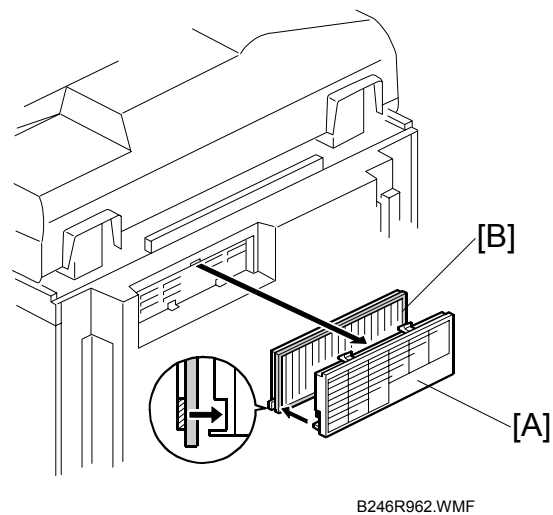

3.6.19 INTERNAL DUST FILTER

1. Open the front door.
2. Pull out the internal dust filter [A].

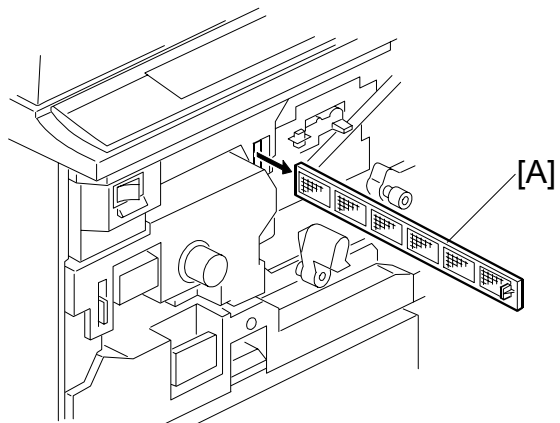


3.7 DEVELOPMENT UNIT

3.7.1 DEVELOPER REPLACEMENT

1. Remove the development unit (☛ 3.6.1)
2. Remove the toner hopper [A] (⚙ x 2)
 - Rotate the toner hopper very slightly (10° ~ 20°) as you slide it up to remove it.


NOTE: To avoid toner spill, hold the hopper level as you remove it

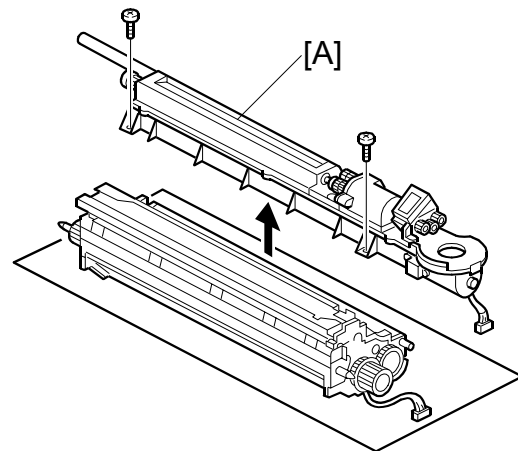

B246R964.WMF


Replacement
Adjustment

3. Hold the development [B] unit over a large sheet of paper, then slowly turn it upside down to empty the developer.
4. Turn the knob [C] through several complete rotations to empty all the developer in the development unit.
5. Clean the development sleeve and its side seals.

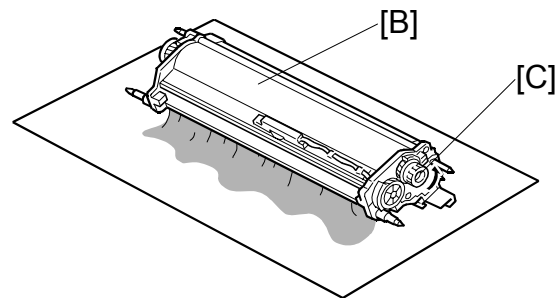

B246R965.WMF

6. Turn the unit over and set it on another sheet of clean paper.
7. Note the developer lot number printed on the top edge of the bag. You will need the lot number when you input SP2801.
8. Clean the development roller shaft with a clean cloth and blower brush.

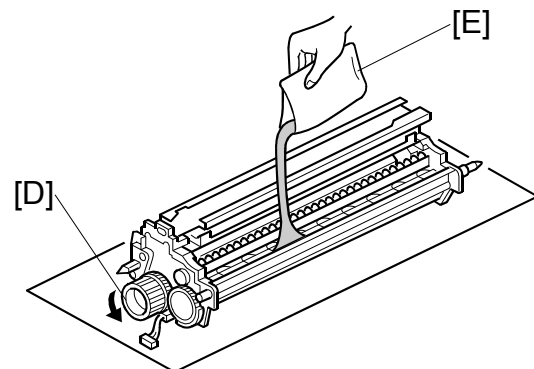

B246R966.WMF

9. While turning the knob [D] slowly, pour in one pack of developer [E] from one end of the development unit to the other.

- Make sure that the developer is evenly distributed.

NOTE: Continue to turn the knob several times to prevent clumping in the developer.




10. Re-assemble the machine.

- Hold the hopper perfectly level when re-attaching it, to prevent toner from entering the rails of the development filter.




NOTE: Automatic process control starts automatically after the machine is switched on, so after replacing the developer, you should enter the SP mode and initialize the developer with SP2801 as soon as possible after switching the machine on.

11. Do SP2801 (TD Sensor Initial Setting).


B064 Series

- Switch the machine on.
- Press Clear Modes .
- On the operation panel keypad, press ①⑦⑦.
- Hold down Clear/Stop  for more than 3 seconds.
- Press "Copy SP" on the touch-panel.
- Press ②⑧⑦①.
- Read the lot number from the package, enter the number, then press .
- Press Execute.

B140 Series/B246 Series

- Open the front door.
Important: If you open the front door, auto process control will not start. SP2801 must be done before auto process control starts.
- Turn the machine on.
- Push Clear Modes .
- On the operation panel keypad, push ①⑦⑦.
- Hold down Clear/Stop  for more than 3 seconds.
- **Close the front door.**
- Push "Copy SP" on the touch-panel.
- Push ②⑧⑦①.
- Read the lot number from the pack of developer, input the number, then push .
- Push Execute.

3.7.2 DEVELOPMENT FILTER

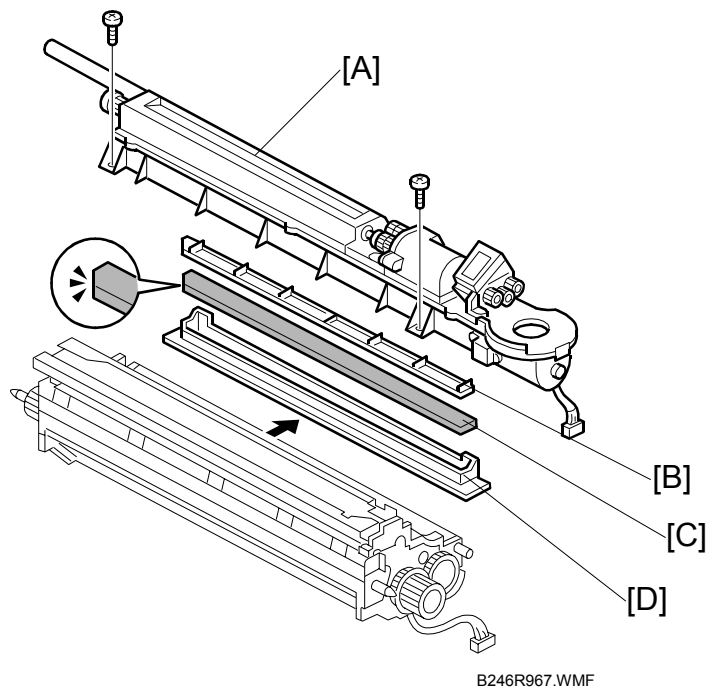

Replacement
Adjustment

Development unit (➡ 3.6.1)

[A]: Toner hopper



[B]: Filter bracket top

[C]: Filter bracket

[D]: Development filter

- Make sure that the rails where the development filter bracket [C] connects to the development unit are clean and free of toner. If there is any toner in the rails, wipe them clean.
- When installing a new filter, set the filter inside the filter case then place the case on top of the filter bracket [C]. The filter case closes any gaps at the edges of the filter to prevent toner scatter.

3.7.3 ENTRANCE SEAL AND SIDE SEALS

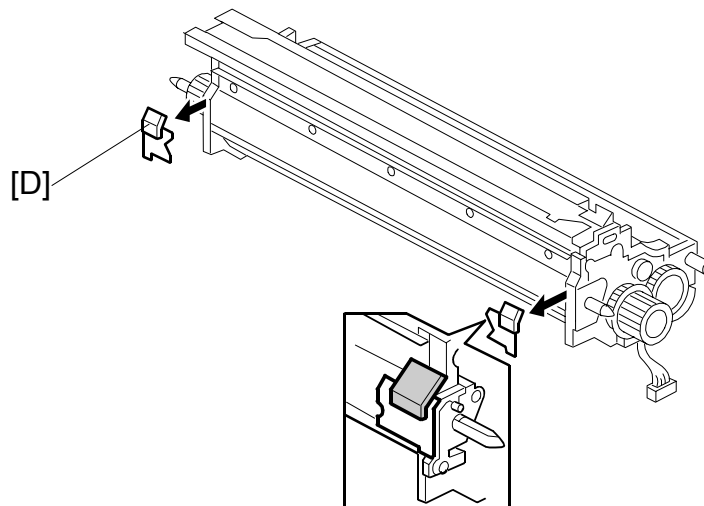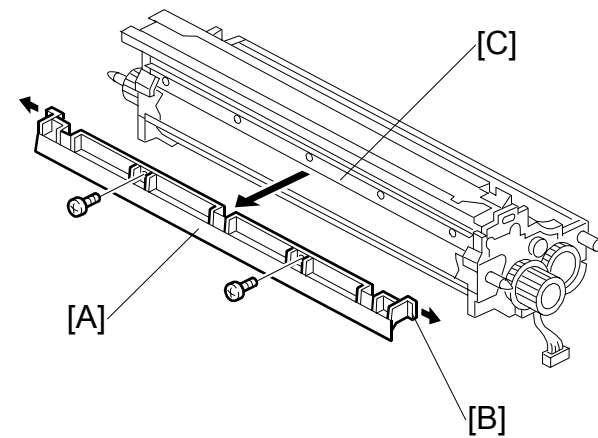

Development unit (➔ 3.6.1)


[A]: Entrance seal bracket (🔩 x 2)

- After removing the screws, press in the catches on either end [B] to release the entrance seal bracket, then remove it.
- Clean the entrance seal bracket before re-installing it.
- When re-installing, make sure the tabs [C] and notches are engaged at four locations.

[D]: Side seals

- Remove the side seals from both ends, clean the area, and replace with new seals.

3.7.4 TD SENSOR

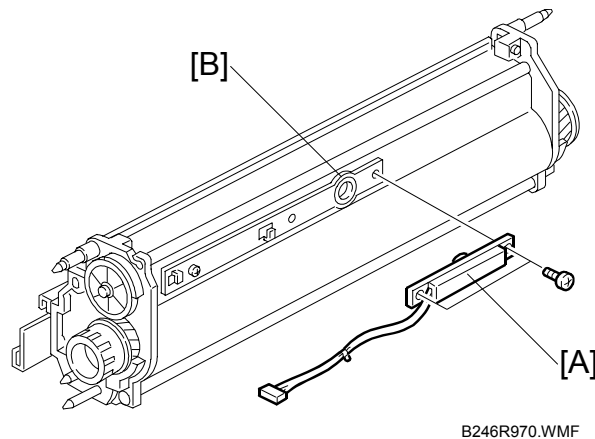


Development unit (☛ 3.6.1)

[A]: TD sensor (🔧 x 1)

- Before installing a new TD sensor, clean the TD sensor port [B].
- After replacing the TD sensor, do the following SPs
 SP2801 TD Sensor Initial Setting
 SP2962 Auto Process Control (only if SP3901 – Auto Process Control – is on).

Replacement
Adjustment

3.7.5 TONER END SENSOR

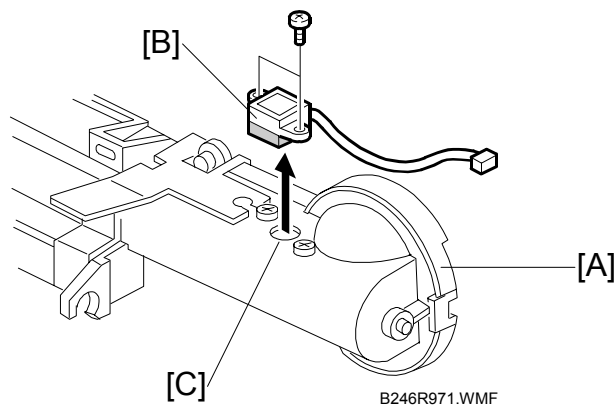


Development unit (☛ 3.6.1)

[A]: Toner hopper (🔧 x 2)

[B]: Toner end sensor (🔧 x 2)

- Remove the screws carefully to avoid stripping the holes.
- Before installing a new toner end sensor, clean the toner end sensor port [C].

3.7.6 TONER SUPPLY MOTOR

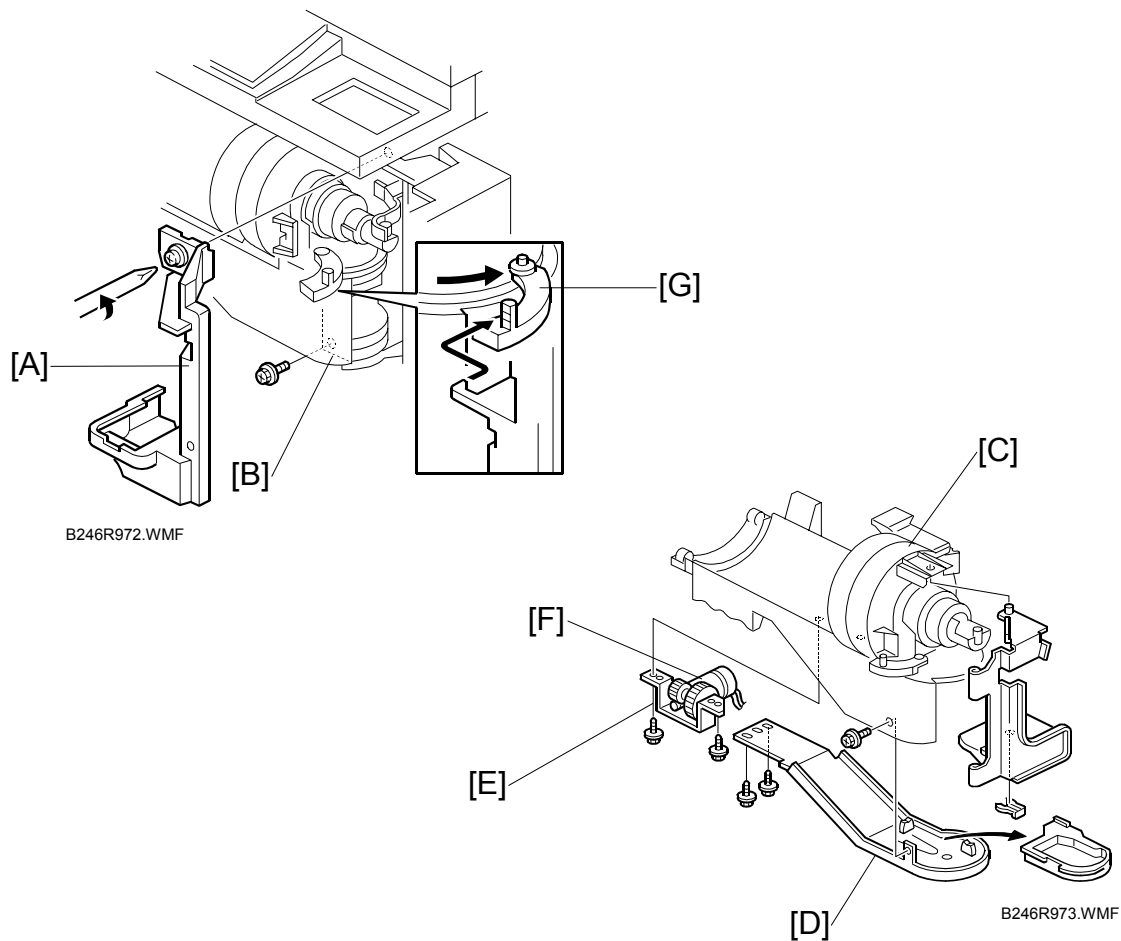

Open the front door.

Swing the toner unit out of the machine and remove the toner bottle.

[A]: Bracket (🔩 x 1)

[B]: Lock plate (🔩 x 1)

[C]: Toner bottle unit (🔩 x 1, harness x 1, 🌀 x 1)

- The c-clamp is under the toner unit.
- Lift the toner bottle unit off the pegs and lay it on a piece of newspaper to avoid toner spill.

[D]: Bottom plate (🔩 x 3, harnesses x 2)



- 2 screws on the bottom, 1 screw on the side.

[E]: Toner supply motor bracket (🔩 x 2)

[F]: Toner supply motor (🔩 x 2)

NOTE: After re-installation the tab [G] should be behind the stay and its pin below should be in the open track below.

3.7.7 DEVELOPMENT MOTOR

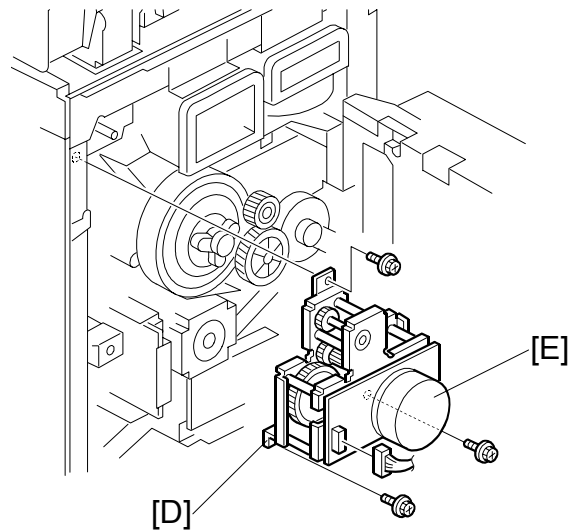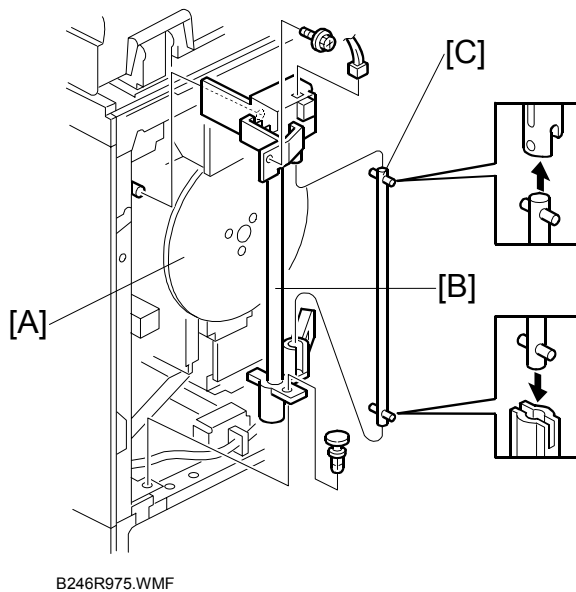

Replacement
Adjustment

[A]: Flywheel (⌘ x 3)

[B]: Waste toner pump tube (⌘ x 1, ⌘ x 1)

[C]: Drive rod


- Lift the toner pump tube to disengage the drive rod, pull out the rod, and push the rubber tube aside.

[D]: Development motor bracket (⌘ x 3, ⌘ x 1)

[E]: Development motor (⌘ x 4)

3.8 TRANSFER BELT UNIT


3.8.1 TRANSFER BELT UNIT

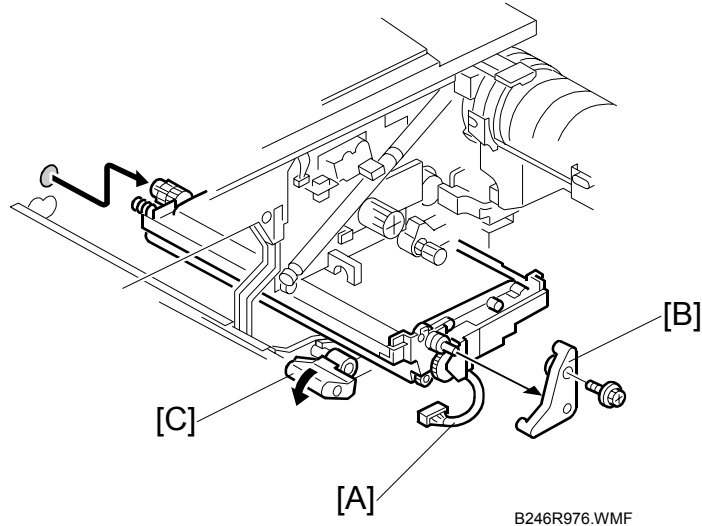



NOTE: Before you begin, spread a mat or some clean paper on the floor where you intend to set the transfer belt unit.

1. Remove the OPC drum unit (➡ 3.6.5).
2. Disconnect the transfer belt unit [A] (🔌 x 1).
3. Remove the transfer belt unit stay [B] (🔧 x 1).
4. While supporting the transfer belt unit with your hand, turn the release lever [C] counter-clockwise to release it, then pull the transfer belt unit out of the machine.

NOTE: The transfer belt unit can be removed without removing the OPC drum unit. However, the transfer belt unit must be removed carefully to avoid scratching the surface of the transfer belt on the OPC drum unit [D] above. Avoid touching the belt with bare hands.

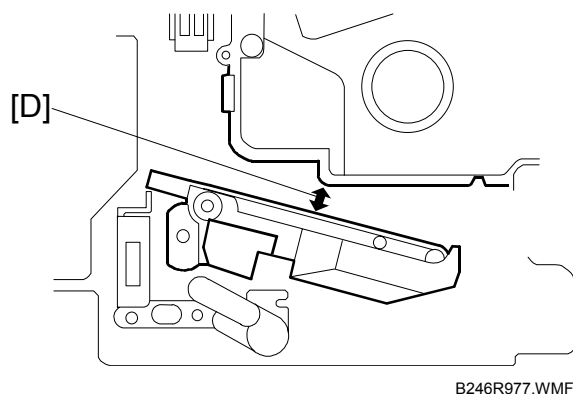


3.8.2 TRANSFER BELT

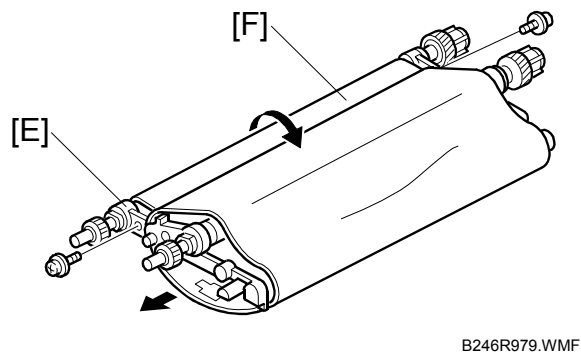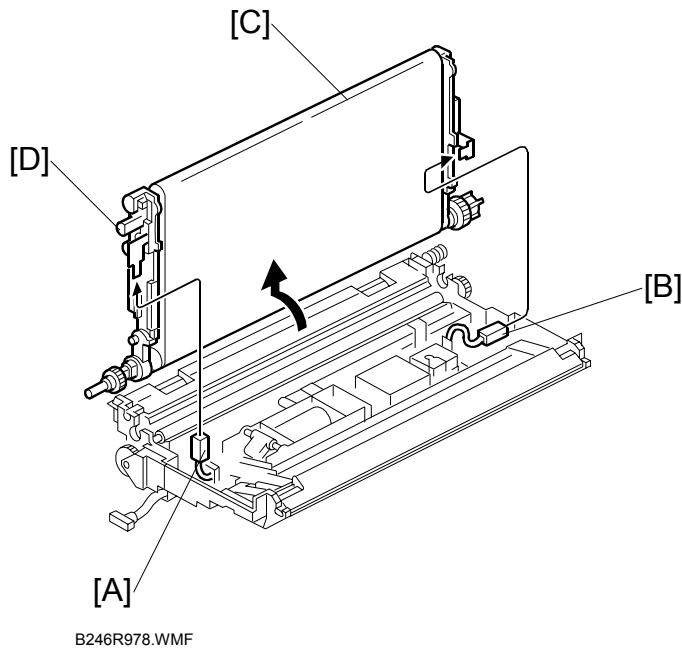

Replacement
Adjustment

1. Remove the transfer belt unit. (➡ 3.8.1)
2. Disconnect the earth terminal [A] and transfer current terminal [B] (⚙ x 2). While doing this, hold the transfer belt unit [C] by its knobs [D].
3. Raise and stand the belt perpendicular to the unit and remove it.
NOTE: To avoid scratching the belt on the guide, never rotate the belt unit farther than 90 degrees.
4. Release the drive roller [E] (⚙ x 2).
5. Press in on the drive roller to collapse the unit into a "U" shape [F].
6. Remove the belt and replace it.

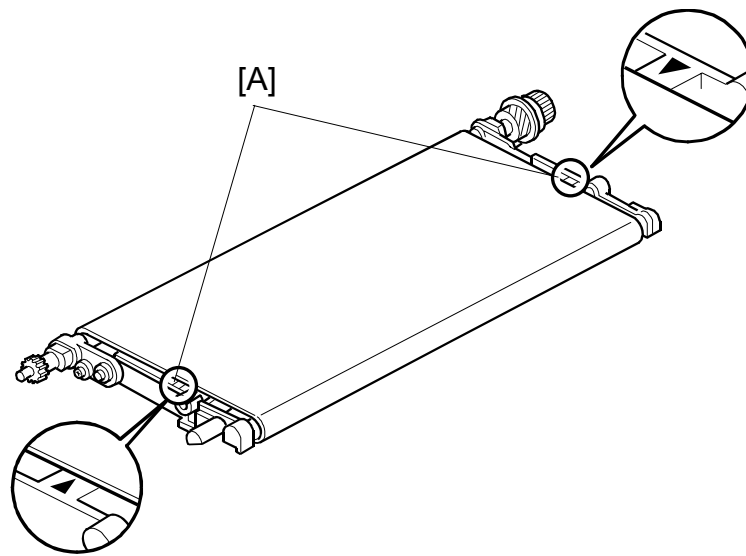


B246R980.WMF

Check the following points:

- Before re-assembling the transfer belt unit, use a clean cloth and alcohol to clean the contact points of the drive roller, idle roller, and transfer roller. Make sure these areas are clean and free from toner, paper dust, etc.
- Never touch the surface of the belt with bare hands and never apply alcohol to the surface of the belt. Clean it with a blower brush. Check the underside of the transfer belt and clean with the blower brush.
- When re-assembling the transfer belt unit, make sure that the transfer belt is centered between the triangular marks [A] on either side of the unit.
- After re-assembly, make sure that the transfer belt is inside the transfer current terminal. The belt could be cut if it is not positioned correctly.
- Confirm that both the ground and transfer current terminal are connected and that the harnesses are not touching the release lever.
- After re-installing the transfer belt unit, turn the belt and confirm that the toner collection coil turns.
- The transfer belt and transfer roller cleaning blade must always be replaced together (➡ 3.8.2).

3.8.3 TRANSFER ROLLER CLEANING BLADE

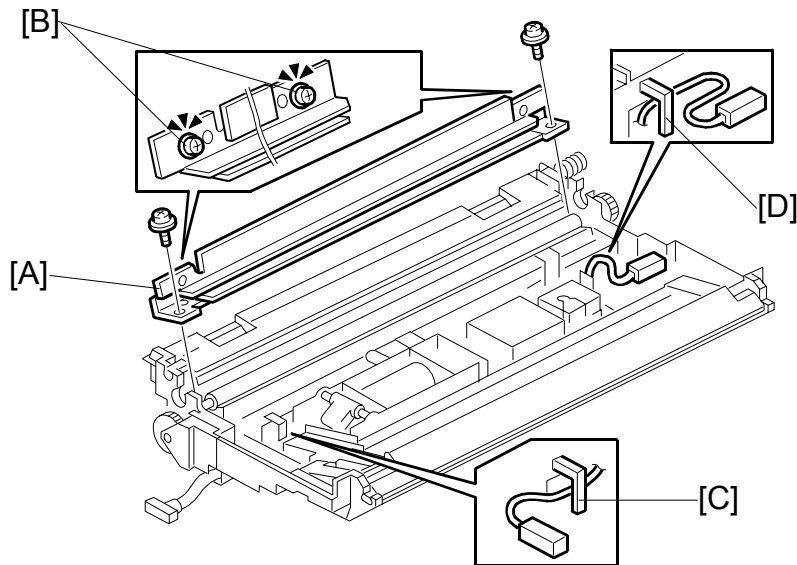

B246R981.WMF

 Replacement
Adjustment


Transfer belt unit (☛ 3.8.1)

Disassemble the transfer belt unit (☛ 3.8.1)

[A]: Transfer roller cleaning blade (🔧 x 2, 🛠️ x 2)

- NOTE:**
- 1) Never remove the inner lock screws [B] of the transfer roller cleaning blade. When re-assembling, make sure that the clamps [C] and [D] are arranged as shown above to avoid contact with the release lever.
 - 2) The transfer roller cleaning blade should always be replaced when the transfer belt is replaced.
 - 3) Never touch the edge of a new transfer roller cleaning blade. The edge of the blade is dusted with setting powder. If the setting powder is removed accidentally, dust the edge of the blade with toner. This is especially important when only the transfer roller cleaning blade must be replaced without replacing the transfer roller.
 - 4) Work carefully around the transfer power pack located inside the transfer belt unit, especially when cleaning with a vacuum cleaner, to avoid damaging the power pack with static electricity.


3.8.4 DISCHARGE PLATE

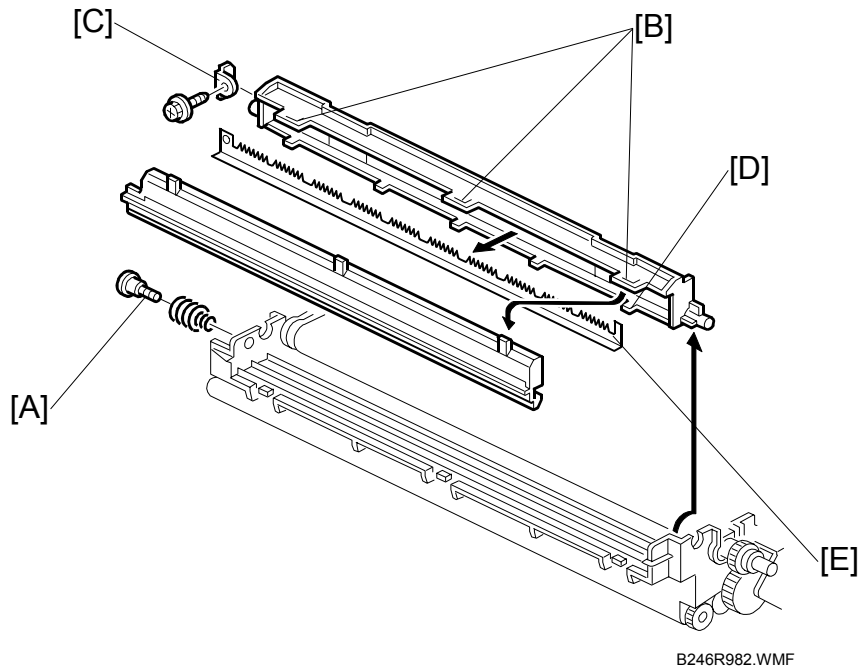

1. Remove the transfer belt unit (☛ 3.8.1)
2. Remove the shoulder screw and spring [A].
3. Rotate the discharge unit up, then lift it straight up to remove it.
4. Disconnect the three large tabs [B].
5. Remove the bracket [C] (☛ x 1).
6. Disconnect the 6 small seal case tabs [D].
7. Remove the discharge plate [E].

NOTE: When you re-assemble the discharge unit, set the discharge plate and make sure that it is perfectly flat before re-connecting the tabs. Before re-attaching the bracket [C], make sure that all the tabs are connected.

3.8.5 TRANSFER POWER PACK

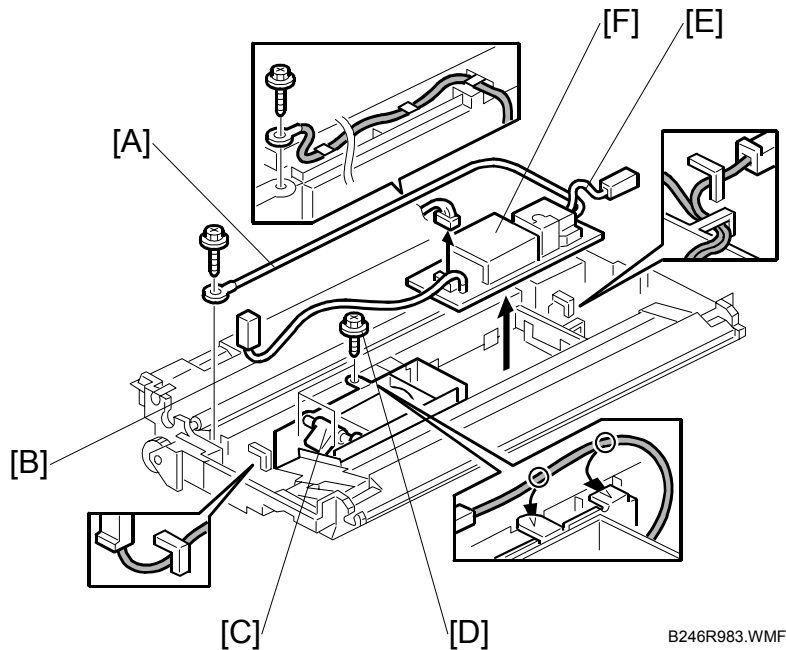

B246R983.WMF

 Replacement
Adjustment

Transfer belt unit (☛ 3.8.1)

[A]: Wire (☛ x 1) (all wire guides)

[B]: Ground terminal wire (wire guide x 1)

- This terminal wire does not disconnect from the power pack.
- Loosen the two left screws of the transfer belt lift solenoid [C], and remove the top screw [D] to free the ground terminal wire.

[E]: Transfer current terminal wire (wire guides x 2)

[F]: Transfer power pack (☛ x 1)

- Disconnect the two standoffs on the right edge of the power pack and remove.

Re-installation

- Confirm that the left edge of the power pack is below the tabs on the left.
- Confirm that the transfer current terminal wire is below the wire guides on the right.
- Pass the ground terminal wire under the top connector of the solenoid bracket and tighten all the screws of the solenoid bracket.
- Make sure the wire is below all the wire guides at the top.


3.9 FUSING UNIT

⚠ CAUTION

Switch off the machine, remove the plug from the power source, then allow sufficient time for the fusing unit to cool before you remove it from the machine.

3.9.1 FUSING UNIT

NOTE: Before you begin, spread a mat or some clean paper on the floor where you intend to set the fusing unit.

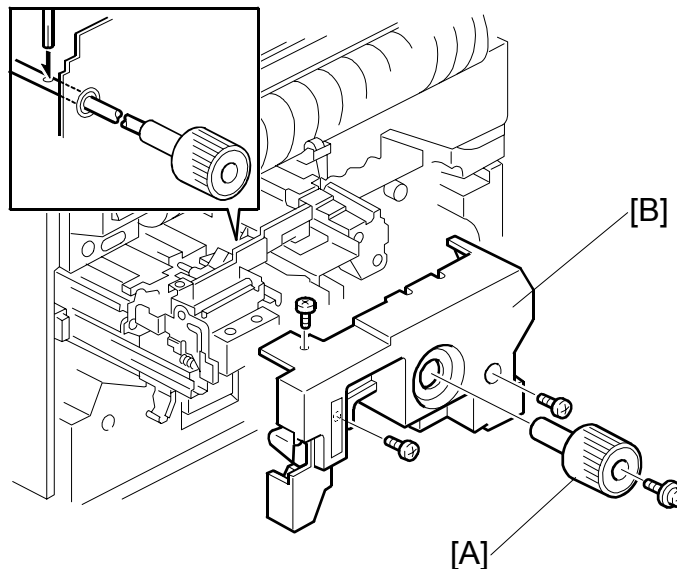

B246R9984.WMF

Open the front door.



Pull out the transfer unit.

[A]: Knob (🔩 x 1)

- Open D3 and D4 until you can see the hole in the shaft.
- Insert the tip of a screwdriver into the hole of the shaft to hold it in position as the knob is turned to remove or install it.

[B]: Inner cover (🔩 x 3)

- Pull the fusing unit release lever, then pull the unit out on the rail supports.
- At reassembly, make sure that the harness of the web drive motor is not pinched by the inner cover.

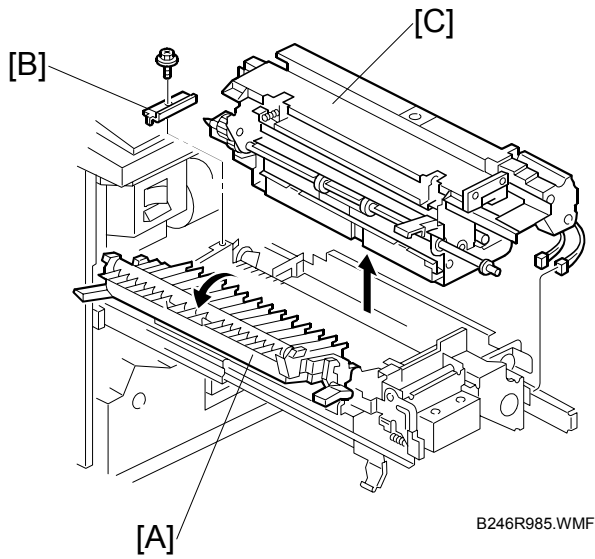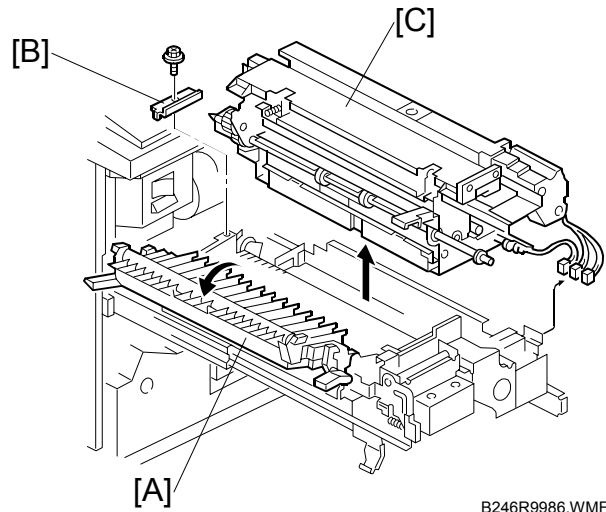B064 Series**B140 Series**
**Replacement
Adjustment**

[A]: Open the exit separation pawl assembly.


[B]: Stopper bracket (🔩 x 1)

[C]: Fusing unit (B064 Series: 📐 x 2, B140/B246 Series: 📐 x 3)

Important:

- Give support to the bottom of the fusing unit with your hand when you remove it.

3.9.2 FUSING PRESSURE RELEASE MOTOR (B140/B246 SERIES)

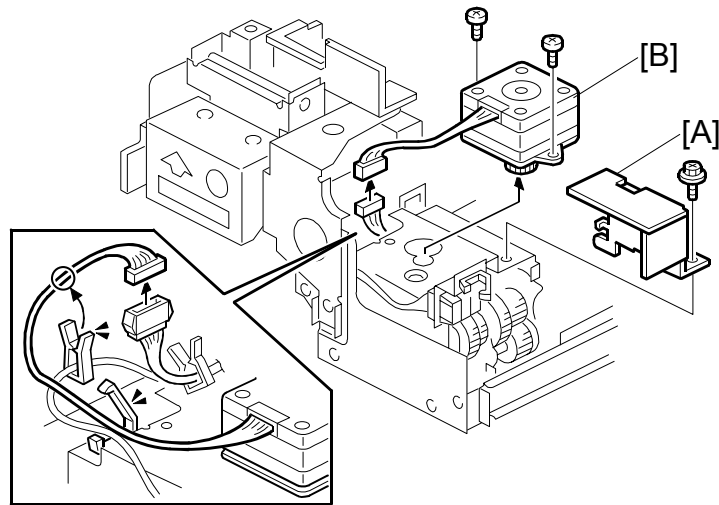


B246R987.WMF

Fusing unit (☛ 3.9.1)

[A]: Bracket (🔩 x 1)

[B]: Motor (🔩 x 2, 🛡️ x 1, 🔩 x 2)

3.9.3 FUSING PRESSURE RELEASE HP SENSOR (B140/B246 SERIES)

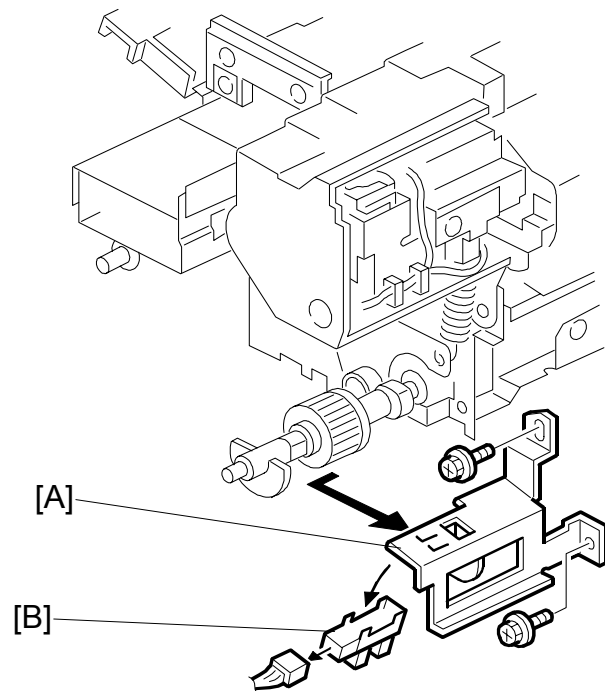

B246R988.WMF


Fusing unit (☛ 3.9.1)

[A]: Bracket (🔩 x 2)

[B]: HP sensor (pawls x 4)

Replacement
Adjustment

3.9.4 FUSING UNIT THERMISTORS AND THERMOSTATS

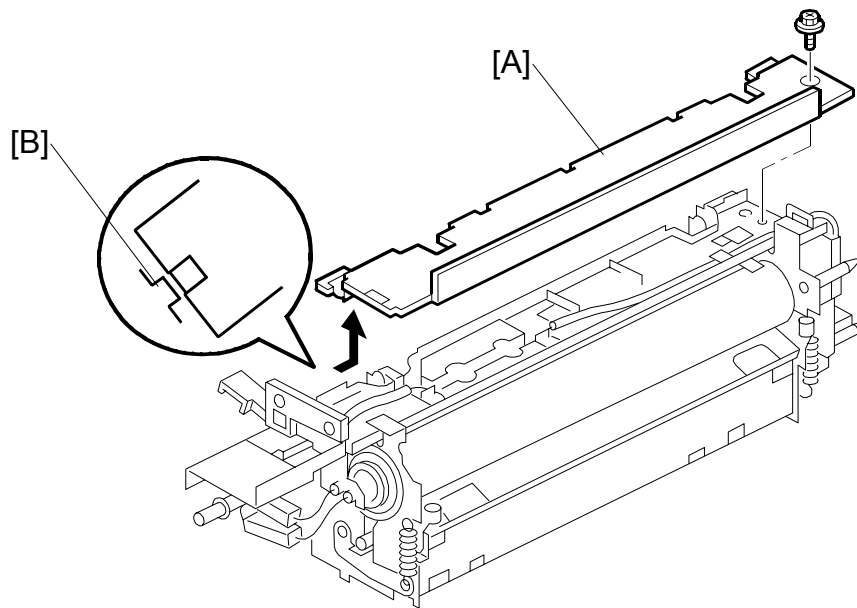


B246R989.WMF

Fusing unit (☛ 3.9.1)


[A]: Upper cover (🔩 x 1)

[B]: Press in to release the pawls inside, then remove.

Important: Make sure that the pawls [B] engage correctly when you install the unit again.

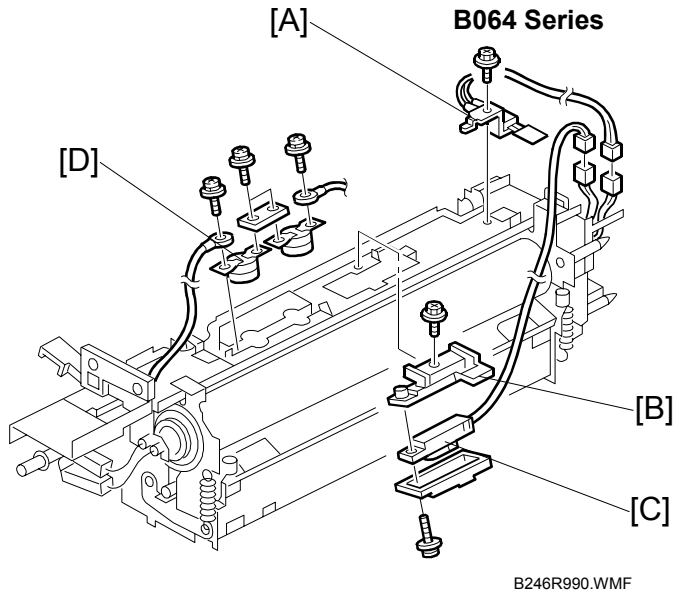**B064 Series**

- [A]: End thermistor (⌘ x 1, ⌘ x 1)
 [B]: Bracket (⌘ x 2)
 [C]: Center thermistor (⌘ x 1)
 [D]: Two thermostats (⌘ x 3)

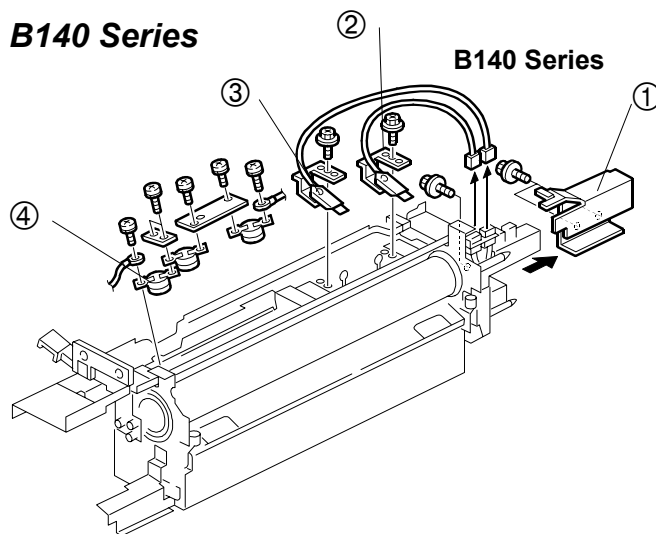B140 Series

- ①: Rear end cover (⌘ x 2)
 ②: End thermistor bracket and thermistor (⌘ x 1, ⌘ x 1, metal clamps)
 ③: Center thermistor bracket and thermistor (⌘ x 1, ⌘ x 1, metal clamps)
 ④: Three thermostats (⌘ x 5)

B246 Series


The thermistor-thermostats are replaced as one unit. This disassembly procedure is not required.

Reinstallation

- To prevent damage to a thermostat, never touch its detection surface.
- Place the end of the thermostat harness that has the round lead [A] of the screw between the two bracket ribs 1 and 2.
- Turn the screw as tightly as possible without damaging the screw or screw hole.


Important

- If the harness is not positioned between the bracket ribs (as shown under "Incorrect" below), this could cause a errors (SC542 or SC545).

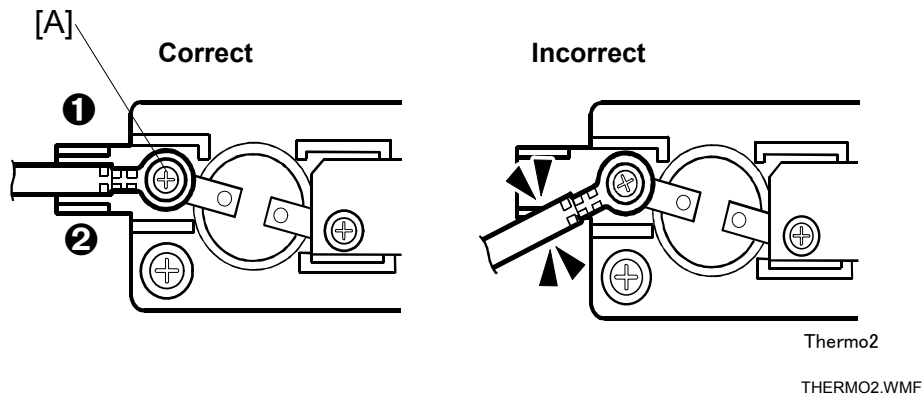


3.9.5 WEB CLEANING ROLLER

Web Unit Disassembly

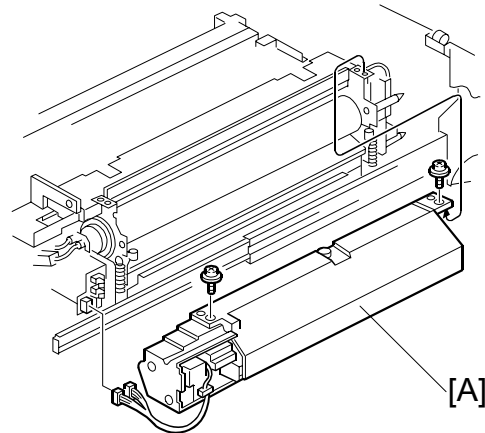


B246R993.WMF

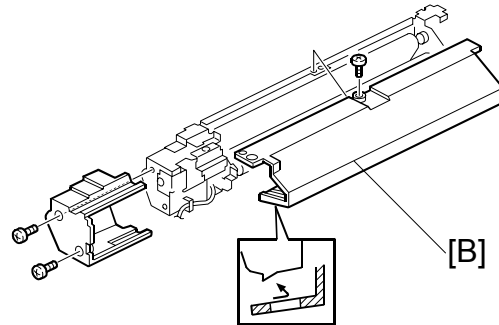

B246R992.WMF

Replacement
Adjustment

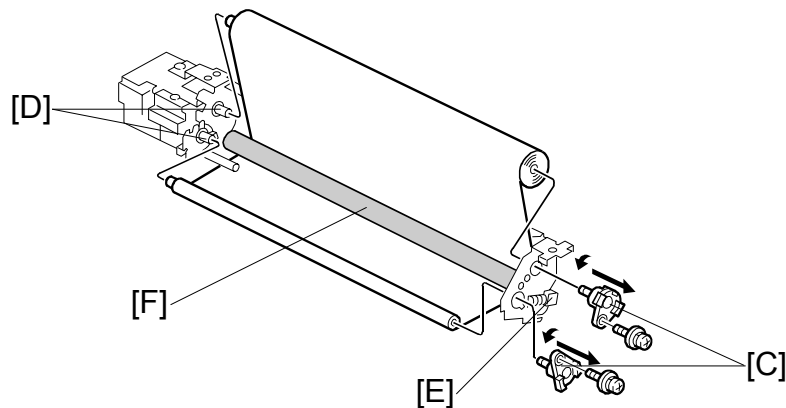

B246R994.WMF

Open the front door and pull out the fusing unit on its support rails.

[A]: Web unit (⚙ x 2, 📄 x 2)

- The web unit can be removed without removing the fusing unit from the machine.

[B]: Upper cover (⚙ x 1)

- Rotate the cover down slightly to remove.

[C]: Web shafts (⚙ x 2)


[D]: Remove the web cleaning rollers from the shaft driver pins.

[E]: Web bushing (spring x 1)

[F]: Cleaning roller

- NOTE:** 1) After replacing the web with a new one, you must execute **SP1902-001** (Fusing Web Used Area Display/Setting) to reset the web consumption count to zero. This SP code must be executed to release SC550.
- 2) Be sure to print an SMC report before executing Memory All Clear (SP5801). After executing SP5801, be sure to re-enter the value recorded for SP1902-001 in the SMC report.

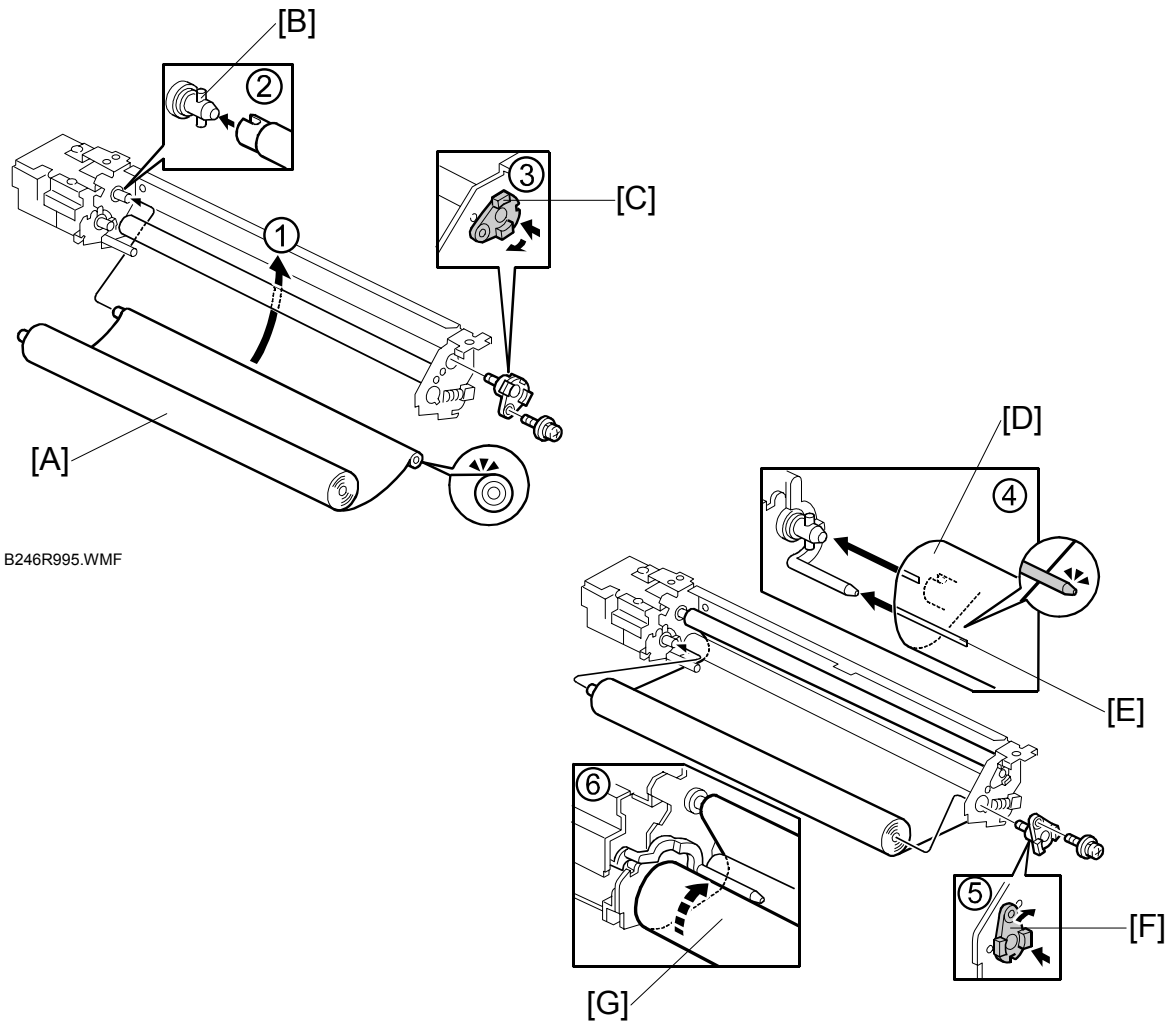


Web Unit Assembly

1. Attach the cleaning roller [A]
 - Insert the end of the web into the slot ①.
2. Insert the drive pins [B] into the web shaft (②).
3. After installing bushing 1 [C], rotate the shaft right to lock it, then attach the lock screw (③).
4. Set the web [D] under the feeler [E] of the web end sensor (④).
5. Attach bushing 2 [F] (⑤).
6. Attach the new web roll [G] and wind it tight so no slack remains (⑥).

NOTE: Before reassembling the machine, confirm that 1) there is no slack in the web roll, 2) the web is below the feeler of the web end sensor.
7. Attach the upper cover.
8. After installing a new web roll, reset SP1902-001 to zero.

3.9.6 WEB MOTOR AND WEB END SENSOR

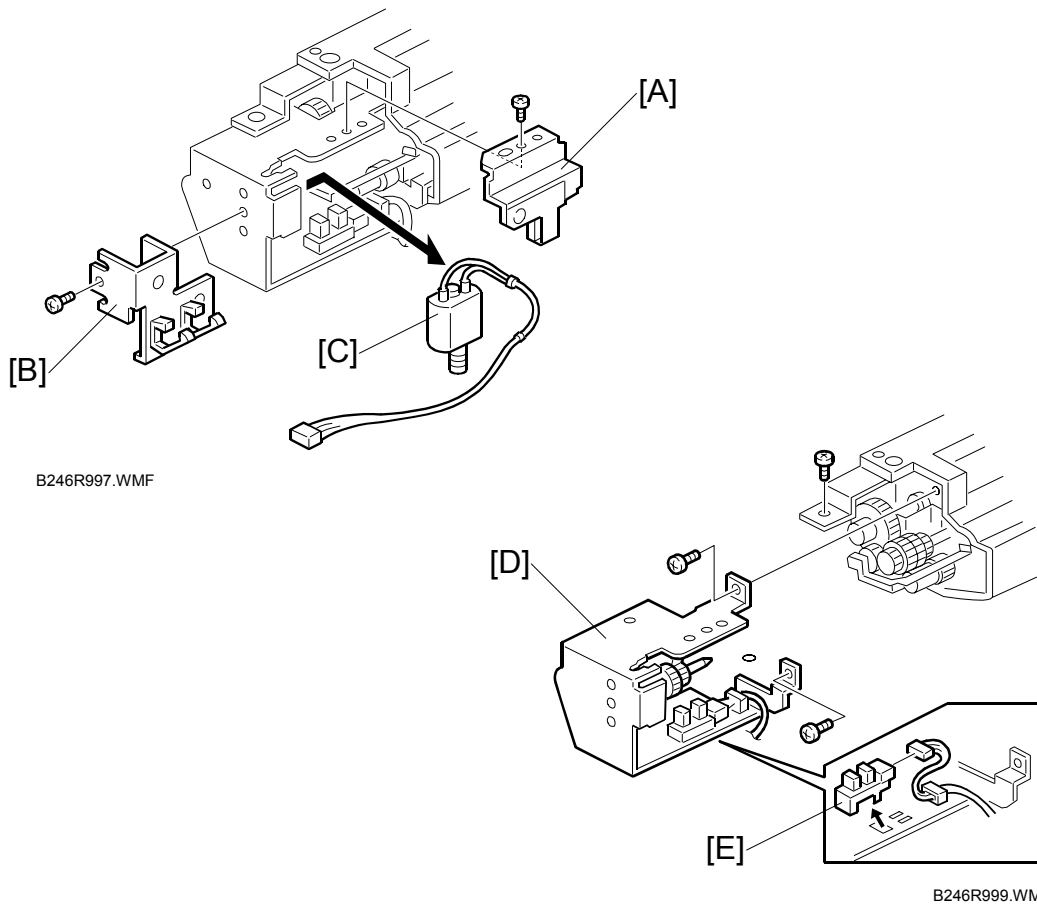

Replacement
Adjustment


Web unit and end cover (☛ 3.9.5)

- [A]: Bracket (🔩 x 1)
- [B]: Web motor positioning bracket (🔩 x 1)
- [C]: Web motor
- [D]: Web motor/sensor mount (🔩 x 3)
- [E]: Web end sensor (🔩 x 1, harness x 1)

NOTE: At reassembly, make sure that the harness of the web driver motor is not pinched by the fusing inner cover

3.9.7 PRESSURE ROLLER CLEANING UNIT

B064 Series

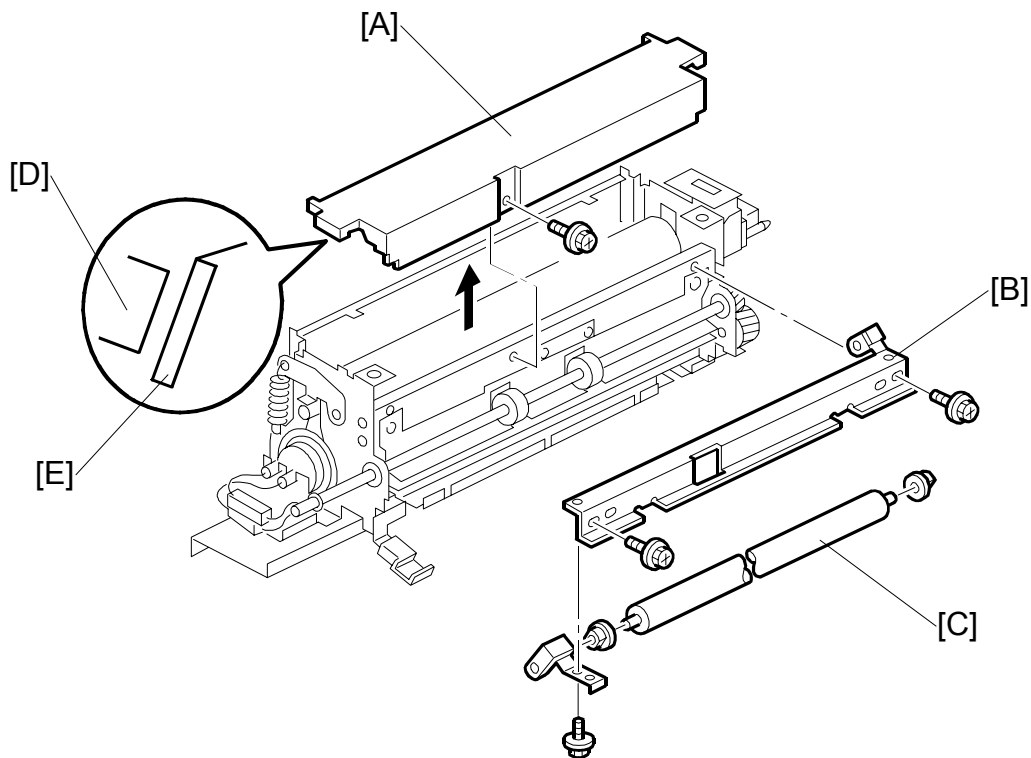

B246R1000.WMF

Fusing unit (☛ 3.9.1)


[A]: Lower cover (☛ x 1)

[B]: Cleaning roller bracket (☛ x 2)

[C]: Cleaning roller (☛ x 1)

NOTE: 1) When attaching the lower cover of the pressure roller cleaning roller, make sure that the tab [D] engages with the groove [E].
2) If the bushings are noisy after replacement, lubricate them on both ends and the holes where the bushings are attached with Barietta Grease L553R.

B140/B246 Series

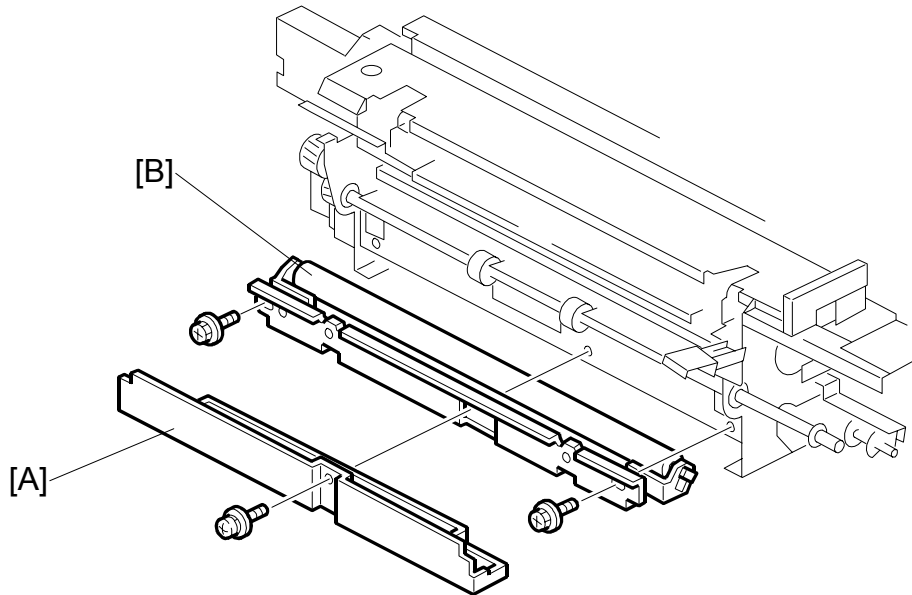

B246R1001.WMF

Fusing unit (☛ 3.9.1)

[A]: Cover (☛ x 1)


[B]: Pressure cleaning roller (☛ x 2)

Replacement
Adjustment

3.9.8 FUSING LAMPS, HOT ROLLER, AND PRESSURE ROLLER

If you wish to remove the pressure roller only, without removing the hot roller and fusing lamps, please do not use this procedure. Use the procedure in the next section.


B064 Series: Fusing Lamps

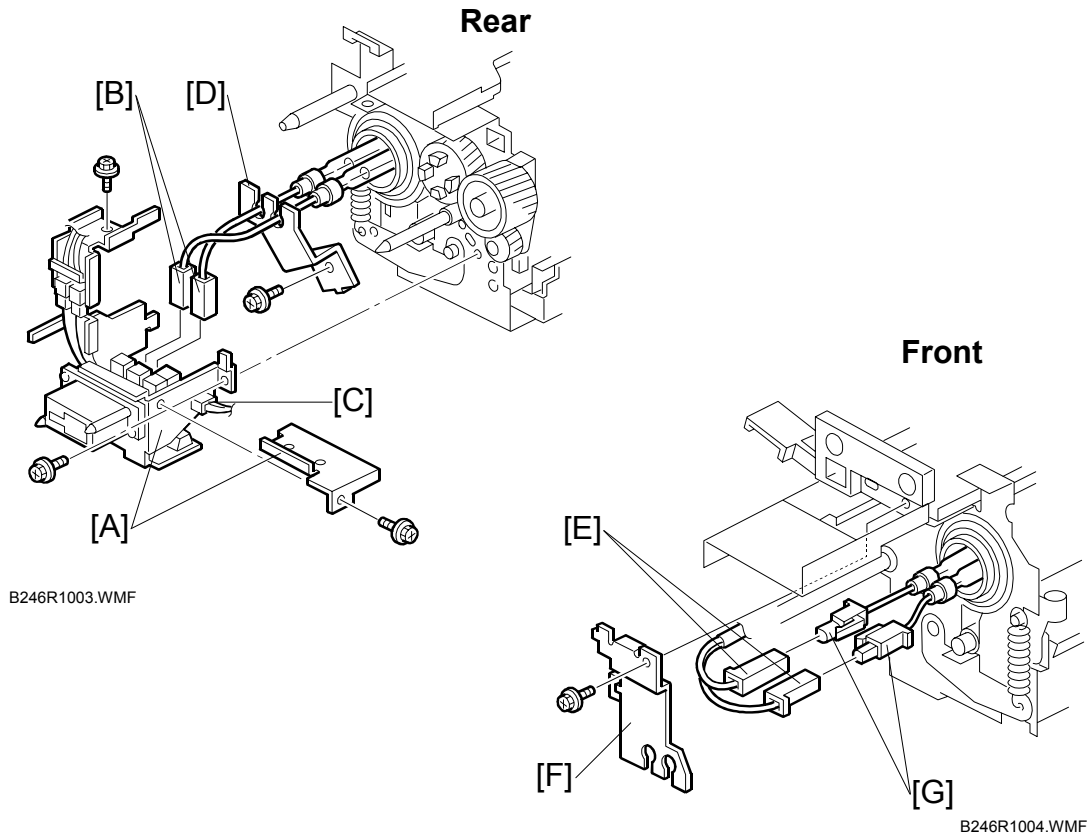

Fusing unit (☛ 3.9.1)

- [A]: Rear terminal brackets (☛ x 3)
- [B]: Upper connectors (☛ x 2)
- [C]: Lower connector (☛ x 1)
- [D]: Rear fusing lamp holder (☛ x 1)
- [E]: Fusing lamp connectors (☛ x 2)
- [F]: Front fusing lamp holder (☛ x 3)
- [G]: Fusing lamps

NOTE: Handle the fusing lamps carefully to prevent breaking them; avoid touching them with bare hands.

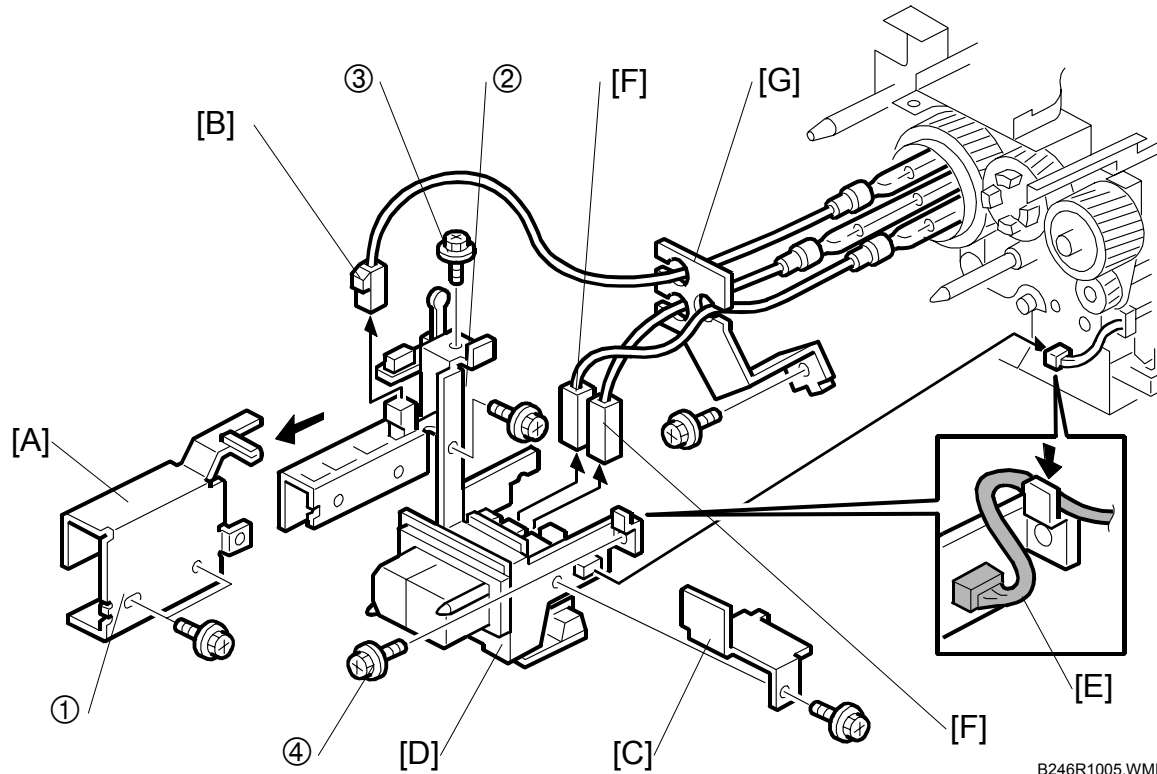B140/B246 Series: Fusing Lamps**B140/B246 Series Rear**

Fusing unit (☛ 3.9.1)

[A]: Rear bracket (⚙ x 2 at ①, ⚙ x 1 at ②)

[B]: White connector (☛ x 1)


[C]: Lock bracket (⚙ x 1)

[D]: Rear terminal connector bracket (⚙ x 1 at ③ under metal clamp, ⚙ x 1 at ④)

[E]: Connector (⚙ x 1, ☛ x 1)

[F]: Blue, green connectors

[G]: Rear fusing lamp holder (⚙ x 1)

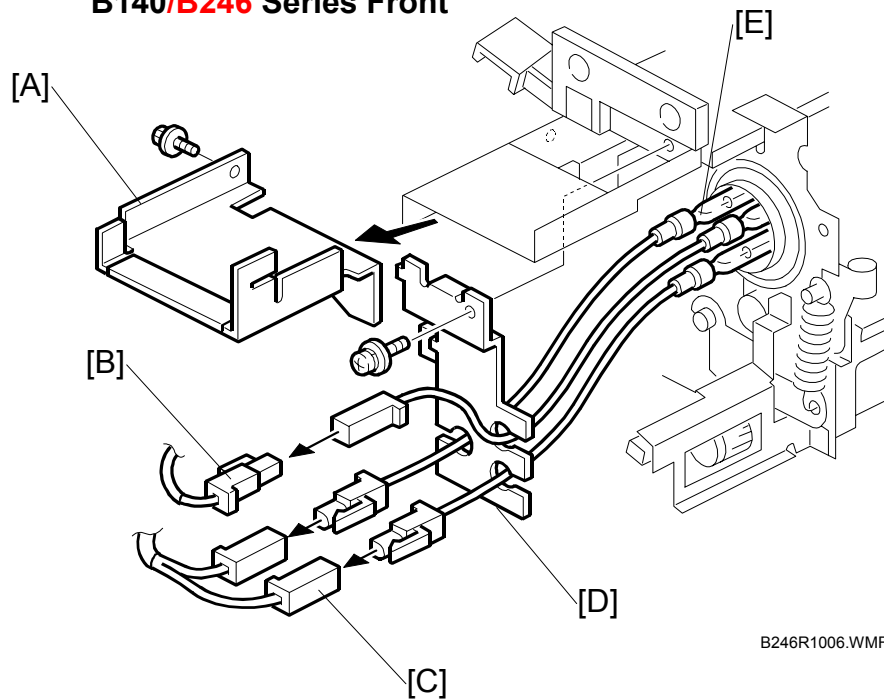B140/B246 Series Front

[A]: Plate (🔩 x 1)


[B]: White connector (🔌 x 1)

[C]: Red connectors (🔌 x 2)

[D]: Front fusing lamp holder (🔩 x 1)

[E]: Fusing lamps (x 3)


NOTE: Be careful when you move the fusing lamps. Do not break them. Do not touch them with bare hands.

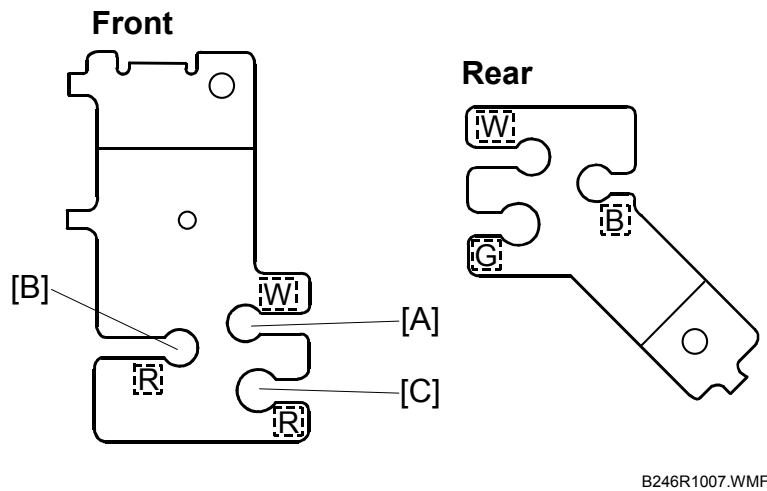Reinstallation: B140/B246 Series Fusing Lamps


Replacement
Adjustment

1. Attach the rear fusing holder first.
2. Put in the lamps from the front.
3. Use the color coding of the connectors to set the lamps in the correct opening in the rear fusing lamp holder.
NOTE: The openings in the rear holder have marks W (White), B (Blue), and G (Green). These colors must agree with the letters on the holder: W, B, G.
4. At the front, see the colors of the connectors at the rear, and set the ends of the lamps:

White → [A]
Blue → [B]
Green → [C]

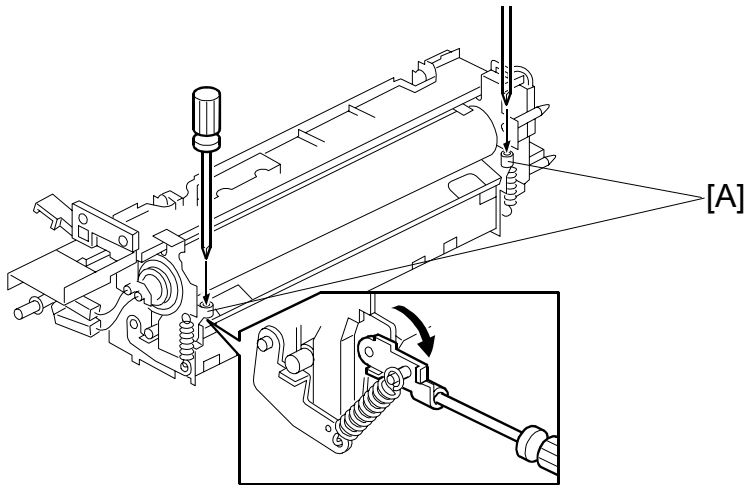

B246R1008.WMF

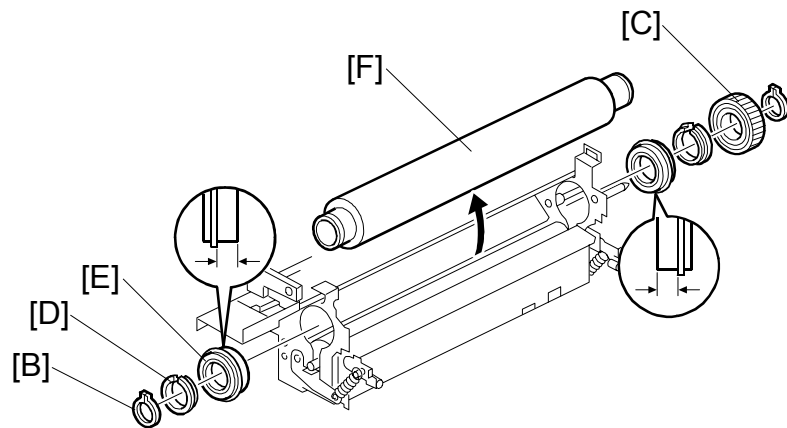

B246R1009.WMF

Web unit (☛ 3.9.5)

[A]: Pressure arm

- Insert the tips of two screwdrivers and press down to release.


[B]: C-clamps (both ends)

[C]: Drive gear


[D]: Bushings (both ends)

[E]: Bearings

[F]: Hot roller

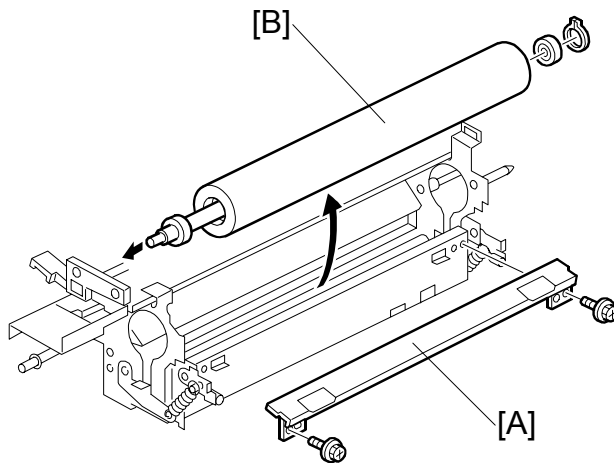

B246R1010.WMF

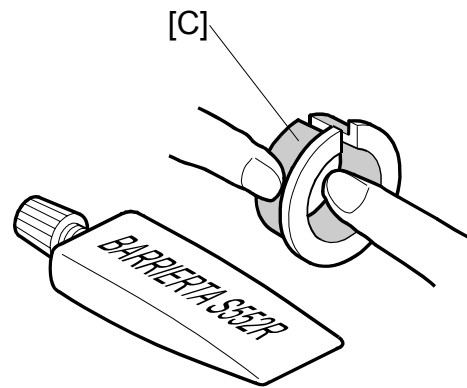

B246R1011.WMF

 Replacement
Adjustment


[A]: Entrance guide plate (1 x 2)

[B]: Pressure roller (2 x 2)

NOTE: The pressure roller and pressure roller bearing should always be replaced together.

[C]: Lubricate the inner and outer surfaces of the bushings with Barrierta S552R grease.

NOTE: If the bushings are warm, allow them to cool before applying the Barrierta grease. Applying the grease while the bushings are hot could generate gas.

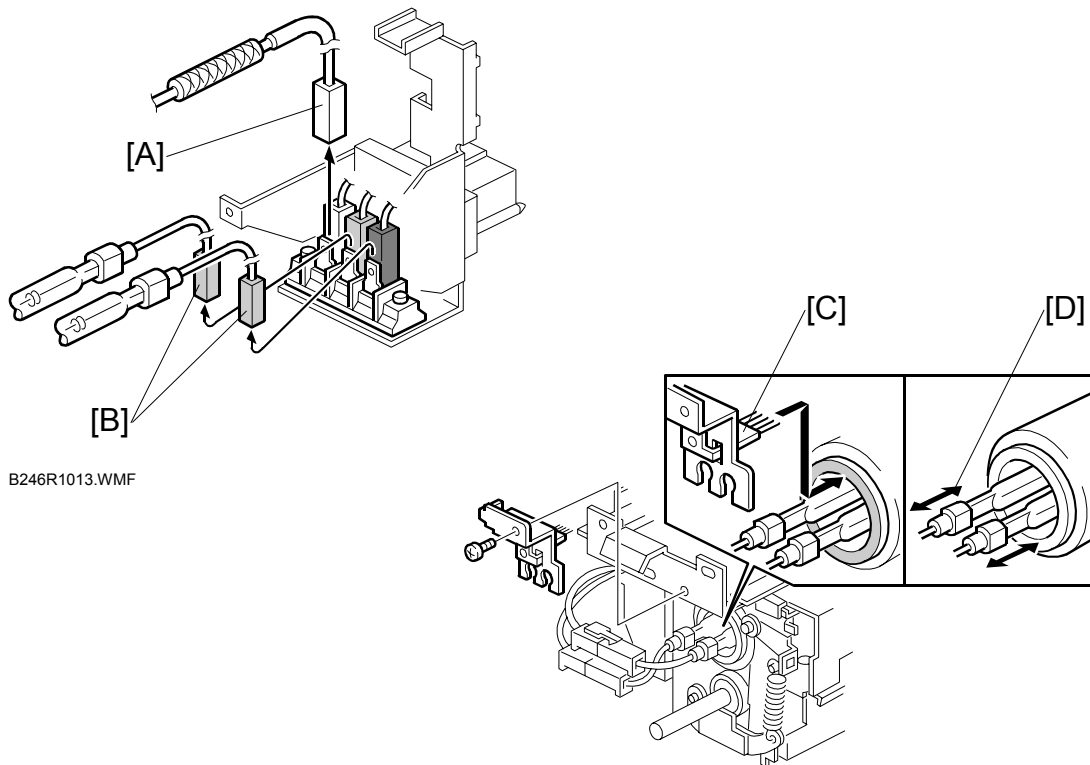
Important Notes about Fusing Unit Assembly (B064 Series)

Follow these important guidelines when re-assembling the fusing unit:

- Use the external holes to fasten the screws when you fasten the lower guide plate. The inner screws are adjusted to correct wrinkling.
- Handle the fusing lamps carefully to prevent breaking them; avoid touching them with bare hands.
- Match colors of the bayonet connectors with the colors of the terminals when reconnecting them to the bracket at [A] and [B]. If either connection is incorrect, the machine cannot control the temperature of the hot roller and an SC is logged as soon as the machine is powered on.
- The discharge brush [C] on the fusing terminal bracket should contact the inner surface of the hot roller.
- Check that there is some play [D] (in the direction indicated by the arrows) in the positioning of the fusing lamps.

3.9.9 PRESSURE ROLLER

Use this procedure when you wish to remove only the pressure roller.

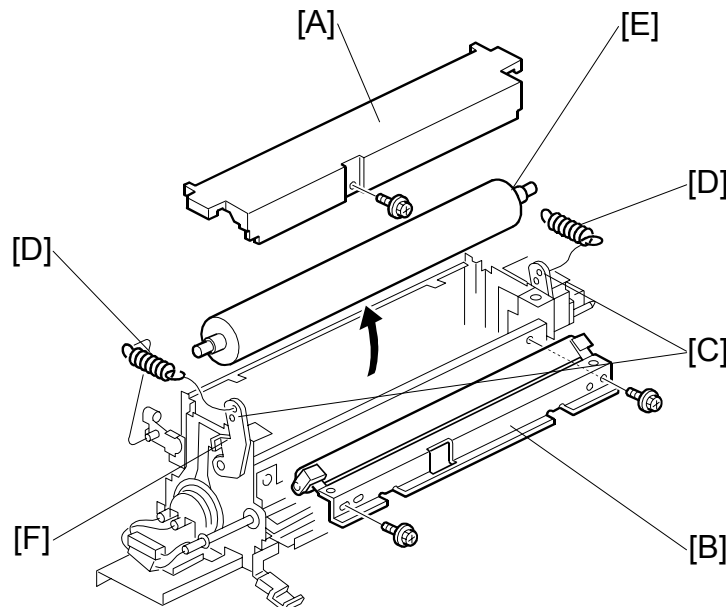

B246R1014.WMF

Replacement
Adjustment

Fusing unit (☛ 3.9.1)

Turn the fusing unit upside down.

[A]: Lower cover (☛ x 1)

[B]: Pressure roller cleaning unit (☛ x 2)

[C]: Release the pressure arms

- Use screw driver to lower the pressure arms on both ends of the pressure roller (☛ 3.9.8) and remove the springs [D] (x 2) on both sides.

[E]: Pressure roller

- NOTE:**
- 1) The fusing lamps are fragile. Work carefully to avoid breaking them.
 - 2) During assembly, handle the roller carefully to avoid scratching it on the bracket.
 - 3) Make sure the tabs and grooves of the lower cover are engaged correctly before tightening the screw.


Spring Adjustment

Two holes [F] are provided on each pressure arm for the springs.

Normally the springs should be attached to the lower holes. Attaching the springs to the upper holes exerts less pressure on the hot roller. Attach the springs to the upper holes only for especially thin paper.

3.9.10 STRIPPER PAWLS

B064 Series

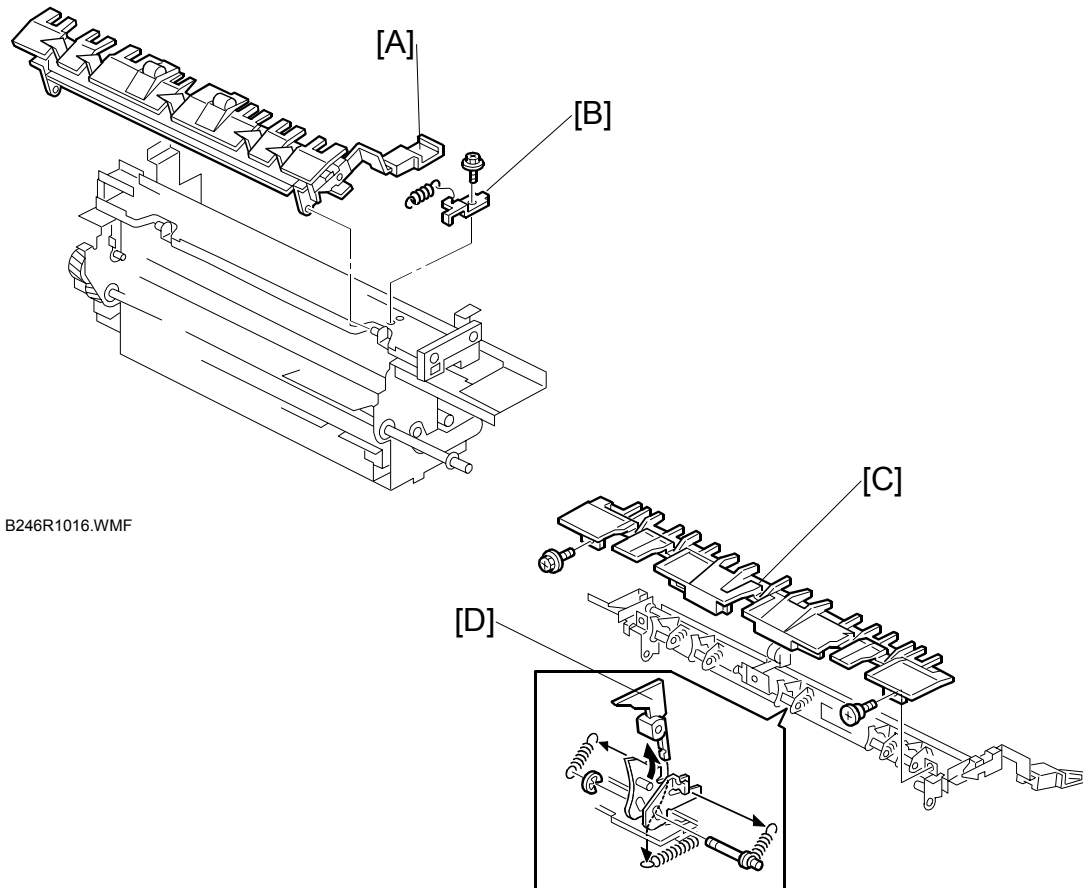


Remove the fusing unit (➡ 3.9.1)

[A]: Top cover (🔩 x 1)


[B]: Bracket (🔩 x 1, spring x 1)

[C]: Inner cover (🔩 x 2)

[D]: Stripper pawl (🔩 x 1, spring x 3)

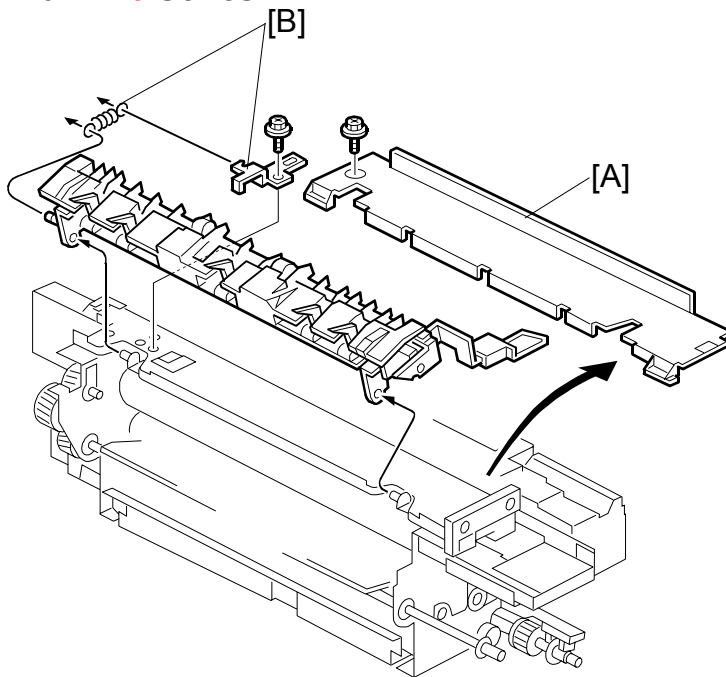B140/B246 Series

B246R1017.WMF

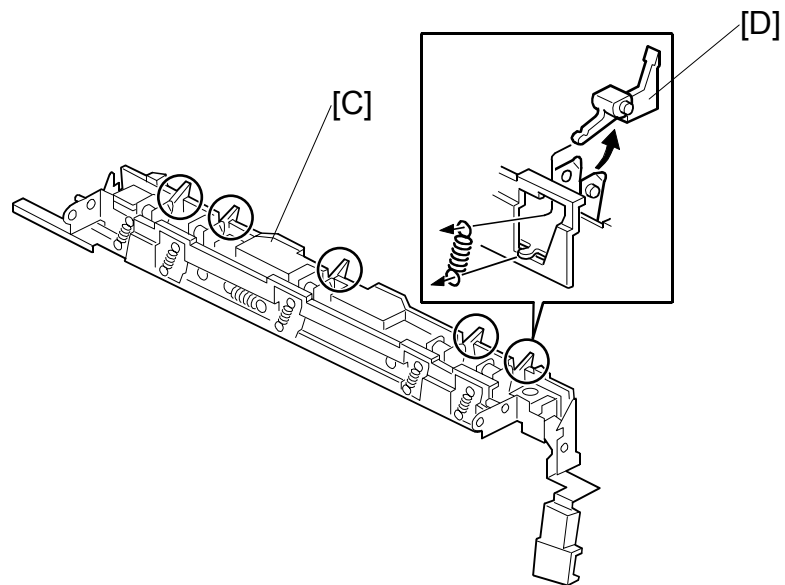

B246R1019.WMF

Remove the fusing unit (➡ 3.9.1)

[A]: Top cover (⚙ x 1)


[B]: Bracket (⚙ x 1, spring x 1)

[C]: Inner cover

[D]: Stripper pawl (spring x 1). Open the arms to release the stripper pawl, and remove it.

Replacement
Adjustment


3.9.11 NIP BAND WIDTH ADJUSTMENT

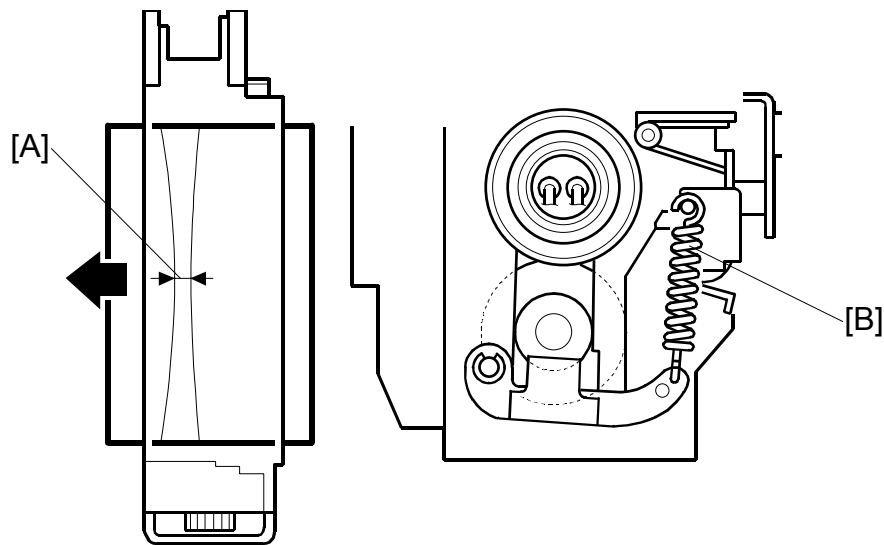

B246R1030.WMF

1. After the machine is powered on with the main switch, make an A4/LT LEF copy, then stop the machine while the paper is still in the fusing unit by switching it off.
NOTE: This is easier with an OHP sheet. Use an OHP sheet if you have one available.
2. Open the front door, then turn the fusing knob to feed out the copy.
3. Measure the width of the band on the part of the image where it is particularly black. The band, called the nip band [A], should be 9.0 ± 0.7 mm at the center.
NOTE: When the fusing is incorrect (wrinkles, offset, curl), measure the nip band width. The nip band width can be adjusted by changing the position of the springs [B] on either end of the pressure roller. The fusing temperature can also be adjusted with SP1105 (Fusing Temperature Adjustment) for Normal, OHP, and Thick Paper.

3.9.12 FUSING UNIT EXIT SENSOR

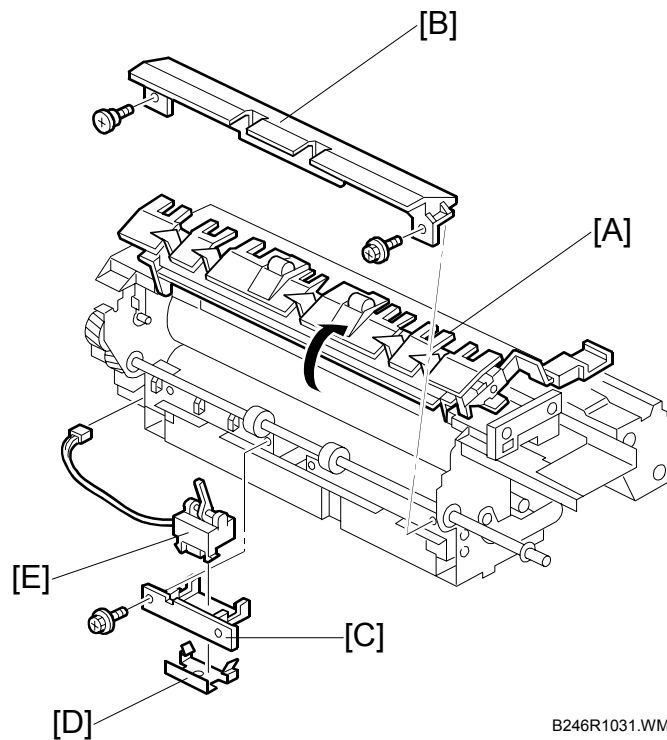

B246R1031.WMF

Replacement
Adjustment

Fusing unit (☛ 3.9.1)

[A]: Open the hot roller stripper pawl unit


[B]: Exit guide plate (🔩 x 2)

[C]: Fusing exit sensor holder (🔩 x 2)

[D]: Plate spring

[E]: Fusing exit sensor (🔌 x 1)

3.9.13 FUSING/EXIT MOTOR

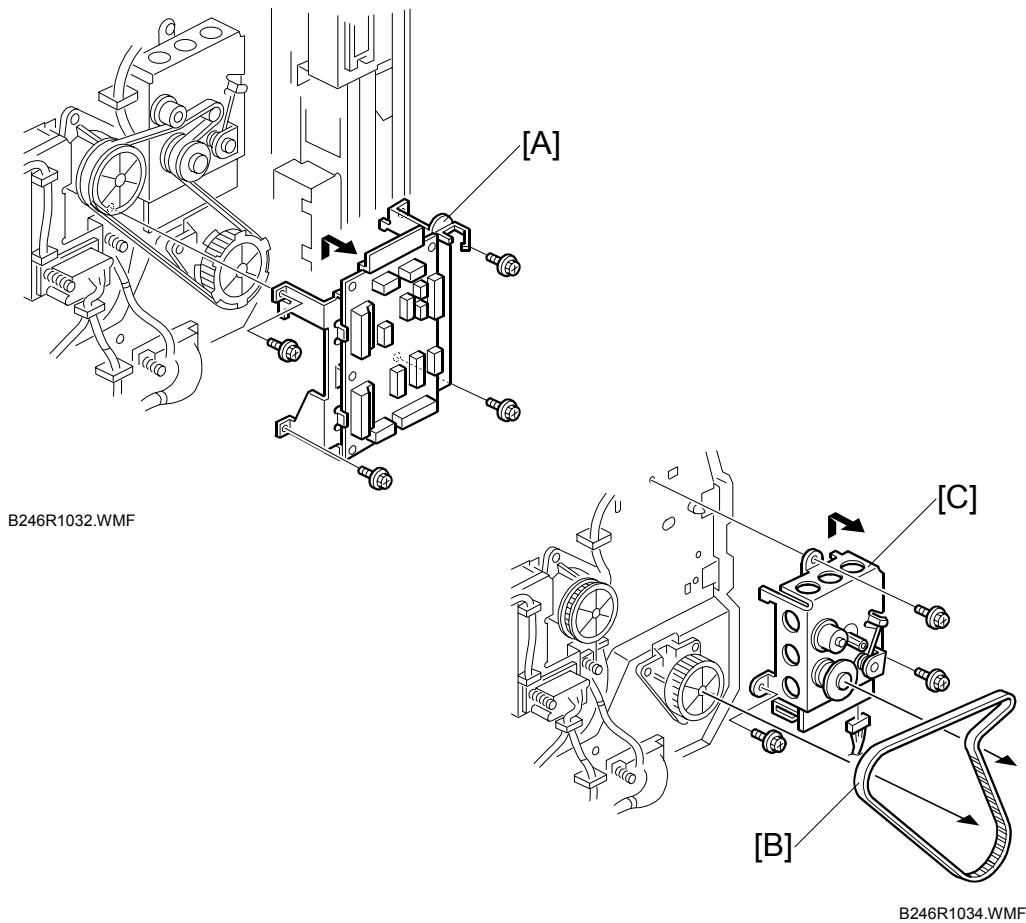

Rear upper cover (☛ 3.3.5)

Open the I/O board (⚙ x 2)

[A]: CNB bracket (⚙ x 4, 📏 x all)


[B]: Timing belt

[C]: Fusing/exit motor bracket (⚙ x 1)

Fusing/exit motor (⚙ x 2)

- The fusing/exit motor (not shown) is inside the bracket.

3.9.14 FUSING EXIT AND EXIT UNIT ENTRANCE SENSORS

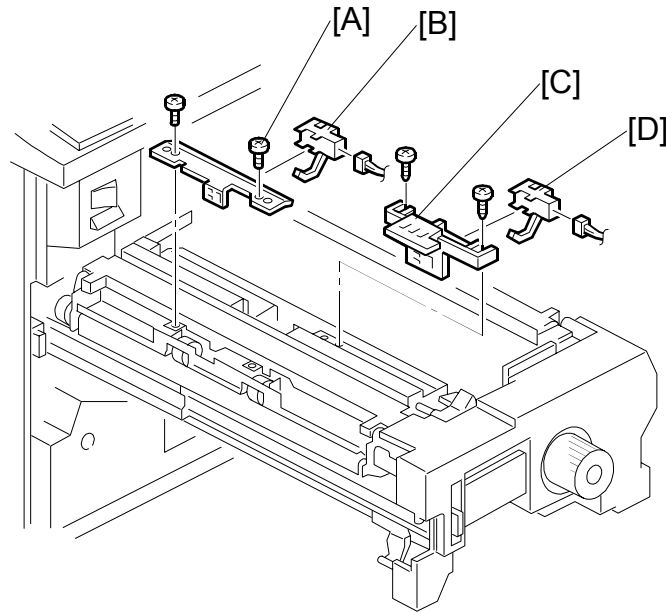

B246R1035.WMF

**Replacement
Adjustment**

Open the front door and pull out the exit/inverter unit.

[A]: Fusing exit sensor bracket (🔩 x 2)


[B]: Fusing exit sensor (🔌 x 1)

[C]: Exit unit entrance sensor bracket (🔩 x 2)

[D]: Exit unit entrance sensor (🔌 x 1)

3.10 DUPLEX UNIT

3.10.1 DUPLEX UNIT REMOVAL

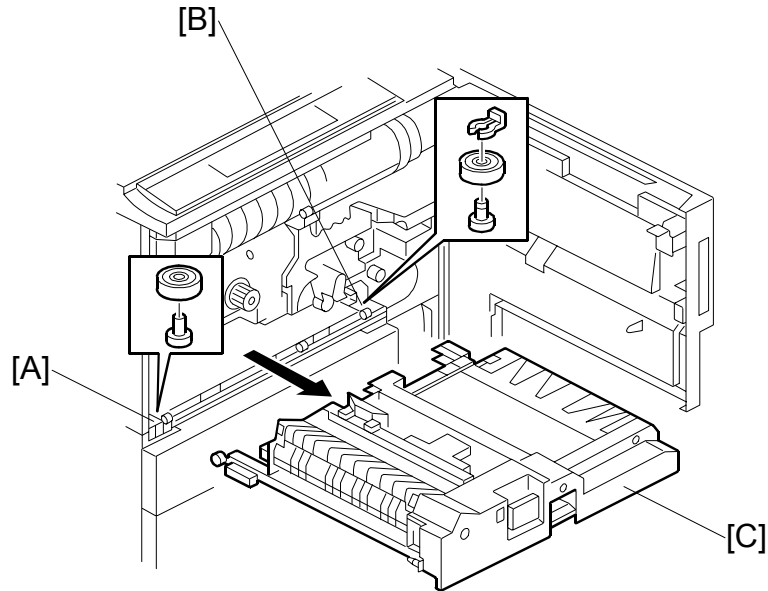


B246R1036.WMF

1. Open the front door and pull out the duplex unit.
2. Remove the slide rail roller on the left [A] and on the right [B] (⌘ x 1).
3. Lift out the duplex unit [C].

NOTE: To re-install the duplex unit, insert the duplex unit partially, only until it enters the black guide rail, then re-attach each slide rail roller. After that, push the duplex unit into the machine completely. This method prevents interference from the guide plate during installation.

3.10.2 DUPLEX UNIT SIDE-TO-SIDE ADJUSTMENT

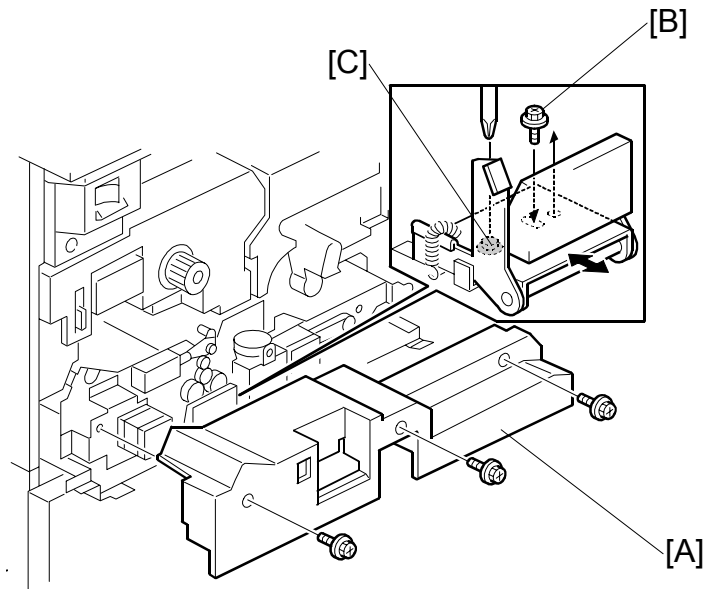

B246R1037.WMF

 Replacement
Adjustment


1. Remove the inner cover [A] (⌀ x 3)
2. Move the handle lock screw [B] from the right to the center.
3. Loosen the left lock screw [C], then adjust the position of the duplex unit.

3.10.3 JOGGER FENCE ADJUSTMENT


SP1008	Duplex Fence Adjustment	Execute this SP to adjust the distance between the jogger fences, if required. A smaller value shortens the distance. If the fences are too far apart, skewing may occur in the duplex tray. If the fences are too close, the paper may be creased in the duplex unit. For details, see "5. Service Tables".
--------	-------------------------	--

3.10.4 DUPLEX MOTORS

Duplex Inverter Motor

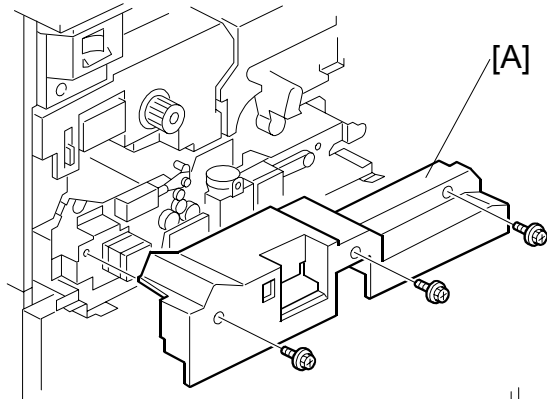


B246R1038.WMF

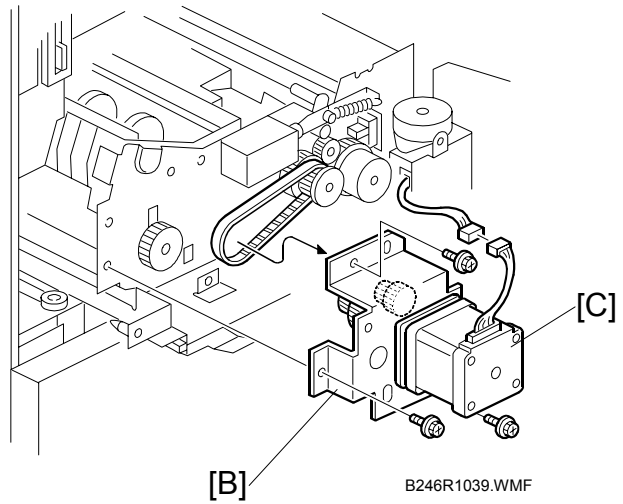


B246R1039.WMF

- [A]: Remove the cover (🔩 x 3)
- [B]: Inverter motor bracket (🔩 x 3)
- [C]: Inverter motor (harness x 1, 📡 x 1, 🔩 x 2, timing belt x 1)

Duplex Jogger and Transport Motors

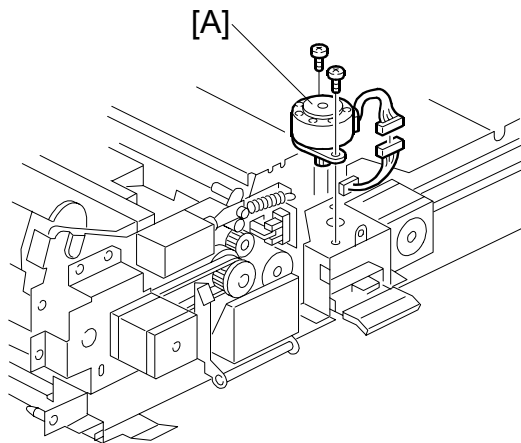

B246R1040.WMF

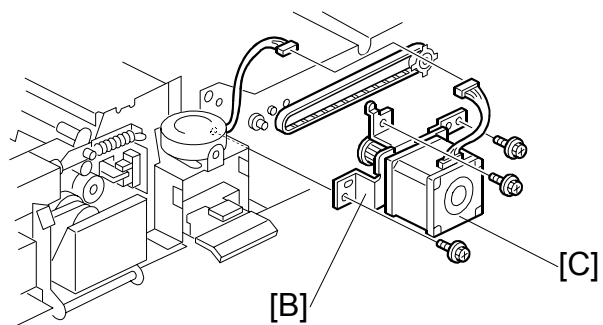

B246R1041.WMF


[A]: Jogger motor (⚙️ x 1, ⚙️ x 2)

[B]: Transport motor bracket (harness x 1, ⚙️ x 1, ⚙️ x 3, timing belt x 1)

[C]: Transport motor (⚙️ x 2)

Replacement
Adjustment

3.10.5 DUPLEX TRANSPORT CLUTCH/JOGGER HP SENSOR

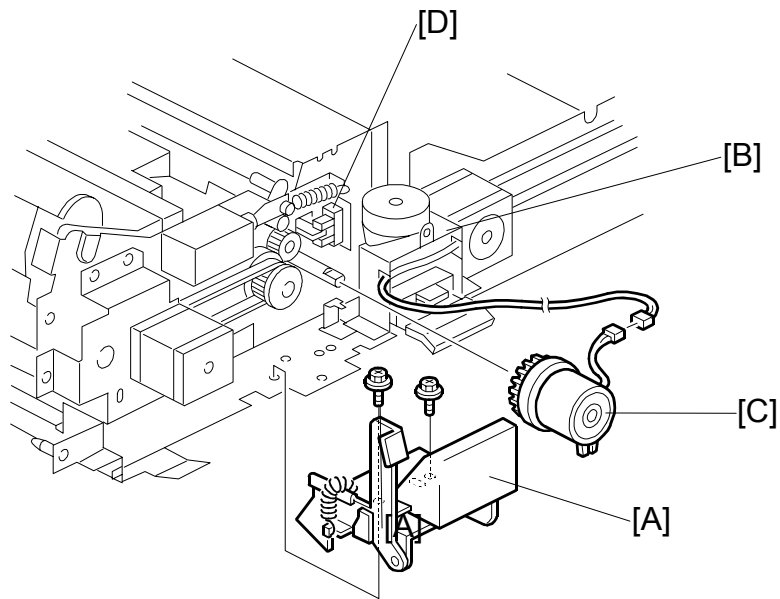

[A]: Duplex unit release lever (⚙ x 2)


[B]: Jogger motor bracket (harnesses x 4, ⚙ x 3)

[C]: Transport clutch (harness x 1, ⚙ x 1)

- To release the clutch, push in the catch pawl on the side of the shaft.

[D]: Jogger HP sensor (spring x 1, ⚙ x 2, ⚙ x 1)

3.10.6 DUPLEX ENTRANCE SENSOR

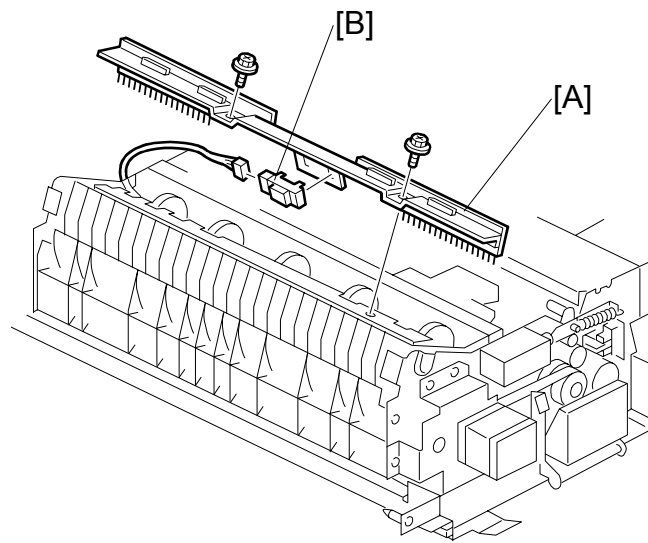


B246R1043.WMF

[A]: Bracket (🔩 x 2)

[B]: Duplex entrance sensor (📏 x 1)

Replacement
Adjustment

3.10.7 DUPLEX TRANSPORT SENSOR 3

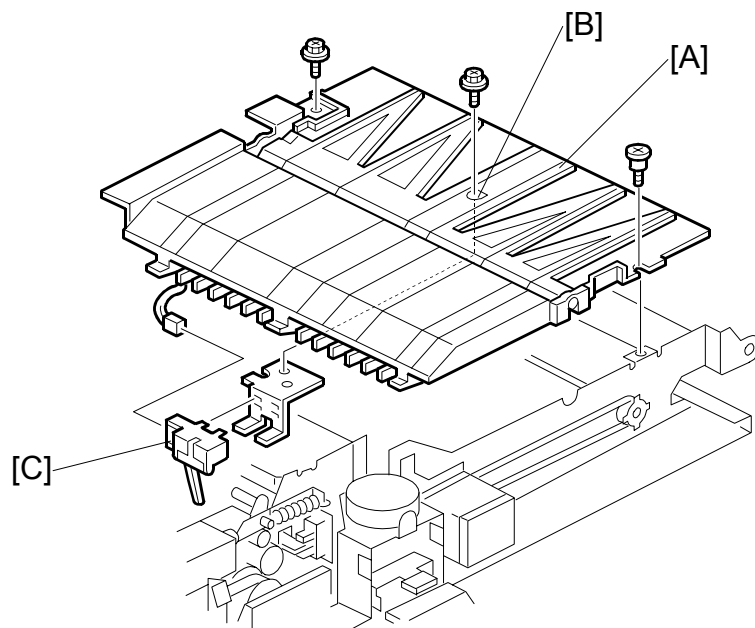

B246R1045.WMF


[A]: Right half of table (⚙ x 2, 📐 x 1)

- The front screw is a shoulder screw. Insert the screws in the correct holes when re-attaching.

[B]: Remove the screw in the center of the table to release the sensor bracket below.

[C]: Transport sensor 3 (📐 x 1)

3.10.8 INVERTER EXIT SENSOR, TRANSPORT SENSORS 1 & 2

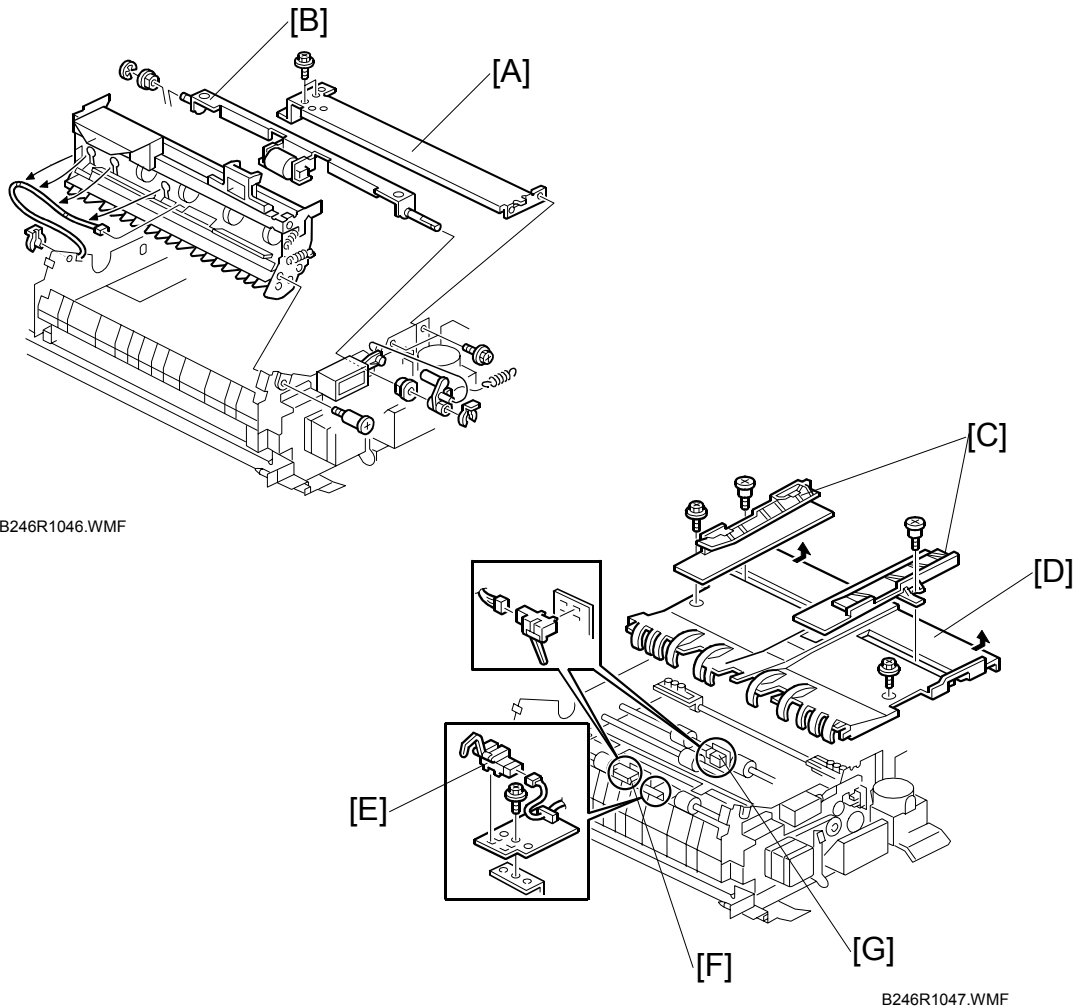

Replacement
Adjustment

[A]: Cross-stay (⌘ x 4)

[B]: Reverse trigger roller shaft

[C]: Jogger fences (⌘ x 1 each)

[D]: Left half of table (⌘ x 2)


- The front screw is a shoulder screw. Insert the screws in the correct holes when re-attaching.
- To avoid breaking the tabs under the left edge of the table, pull the table to the right to disengage the tabs and then remove.

[E]: Inverter exit sensor (⌘ x 1, harness x 1, ⌘ x 1)

[F]: Transport sensor 1 (harness x 1, ⌘ x 1)

[G]: Transport sensor 2 (harness x 1, ⌘ x 1)

3.10.9 DUPLEX JOGGER BELT ADJUSTMENT

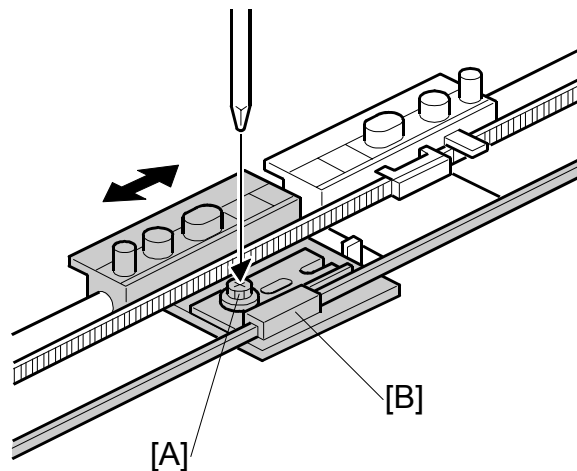


B246R1049.WMF

1. Cross stay (☛ 3.10.8)
2. Reverse trigger roller shaft (☛ 3.10.8)
3. Left half of the table (☛ 3.10.8)
4. Jogger motor bracket (☛ 3.10.5)
 - Slip the one end of the belt around the gear below the jogger motor.
 - Slip the other end of the belt around the gear at the other side of the duplex unit.
5. If you are replacing the belt, set both jogger fence brackets at the center of the belt and tighten the screw [A].


If you are adjusting the belt, loosen the screw and slide the plastic piece [B] on the belt to the left or right to adjust the position of the front fence, then tighten the screw.

3.11 PAPER FEED

3.11.1 PAPER TRAY REMOVAL

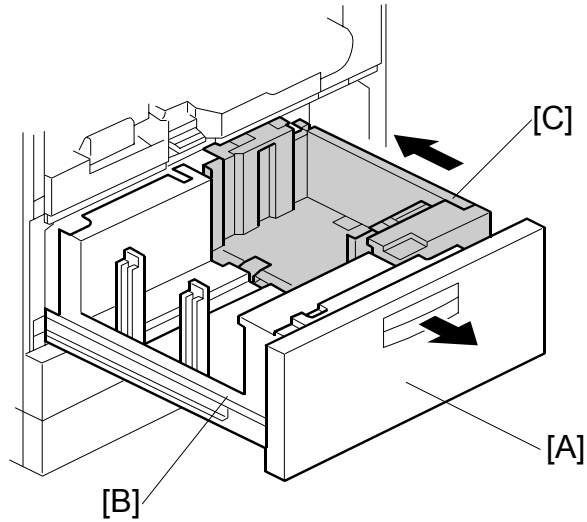


B246R1050.WMF

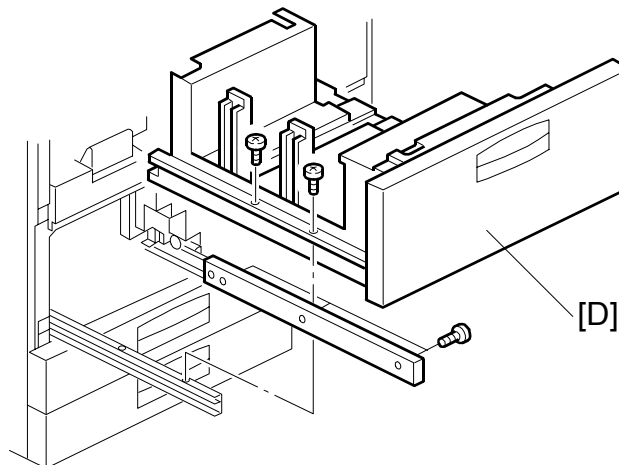

B246R1051.WMF

1. Open the front door.
2. Pull out the tandem tray drawer [A] completely to separate the left [B] and right [C] sides of the tandem tray.
3. Remove the left tandem tray [D] (⚙ x 5).


Replacement
Adjustment

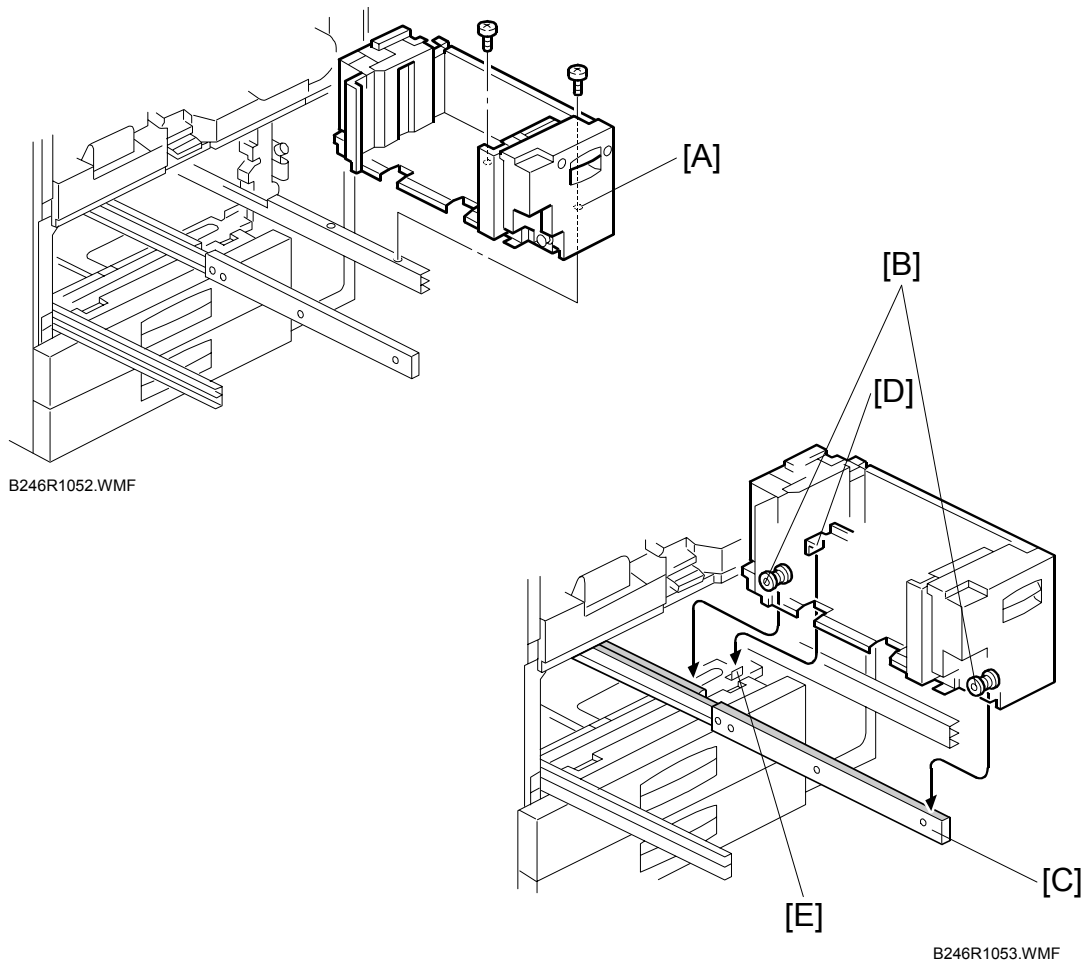

[A]: Right tandem tray (2 x 2).

- NOTE:** 1) When re-installing the right tandem tray, make sure that the wheels [B] ride on the slide rail [C].
- 2) When re-installing the right tandem tray, make sure that the tandem tray stopper [D] is set behind the stopper [E] on the frame.

3.11.2 REAR FENCE RETURN SENSOR REPLACEMENT

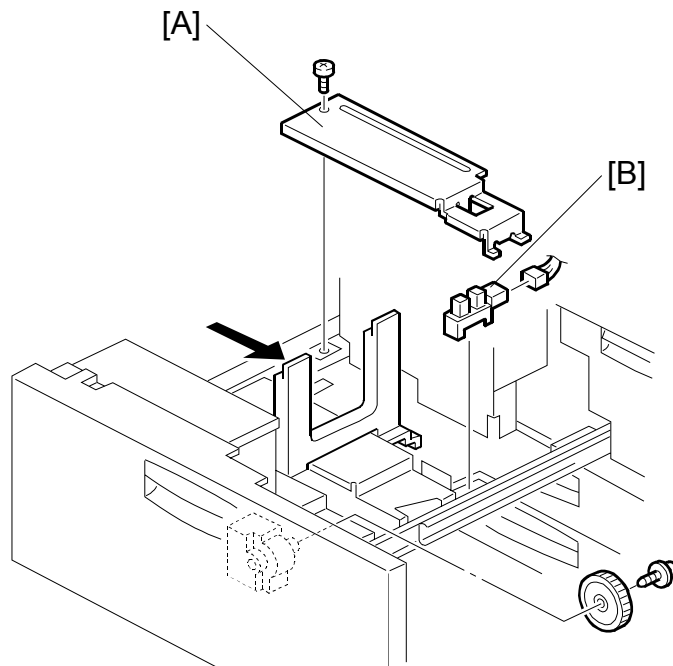

B246R1054.WMF

Turn off the main switch.


Pull out the tandem feed tray.

[A]: Rear bottom plate (🔩 x 1)

[B]: Return sensor (🔌 x 1).

Replacement
Adjustment

3.11.3 REAR FENCE HP SENSOR REPLACEMENT

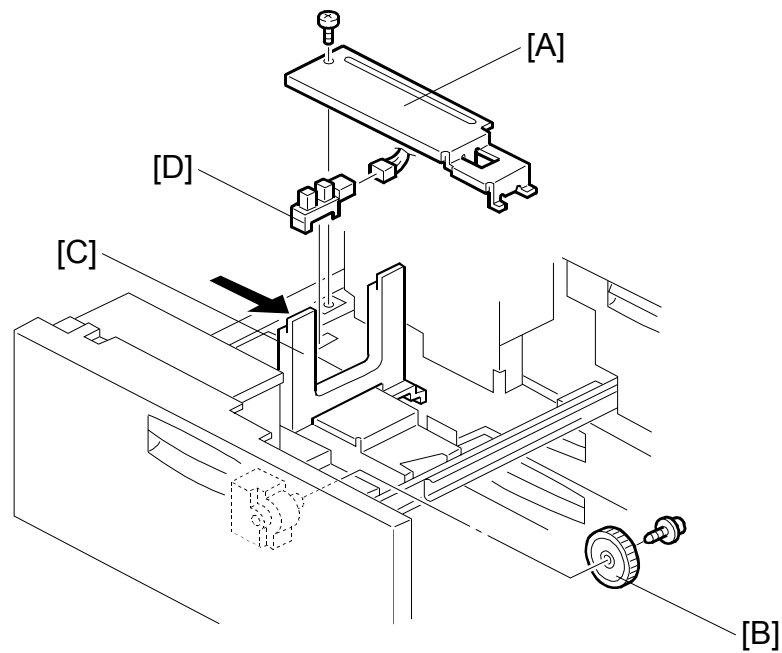

B246R1055.WMF

Turn off the main switch.

Pull out the tandem feed tray.


[A]: Rear bottom plate (1 x 1).

[B]: Back fence transport gear (1 x 1)

[C]: Move the back fence to the right.

[D]: Rear HP sensor (1 x 1)

3.11.4 TANDEM RIGHT TRAY PAPER SENSOR REPLACEMENT

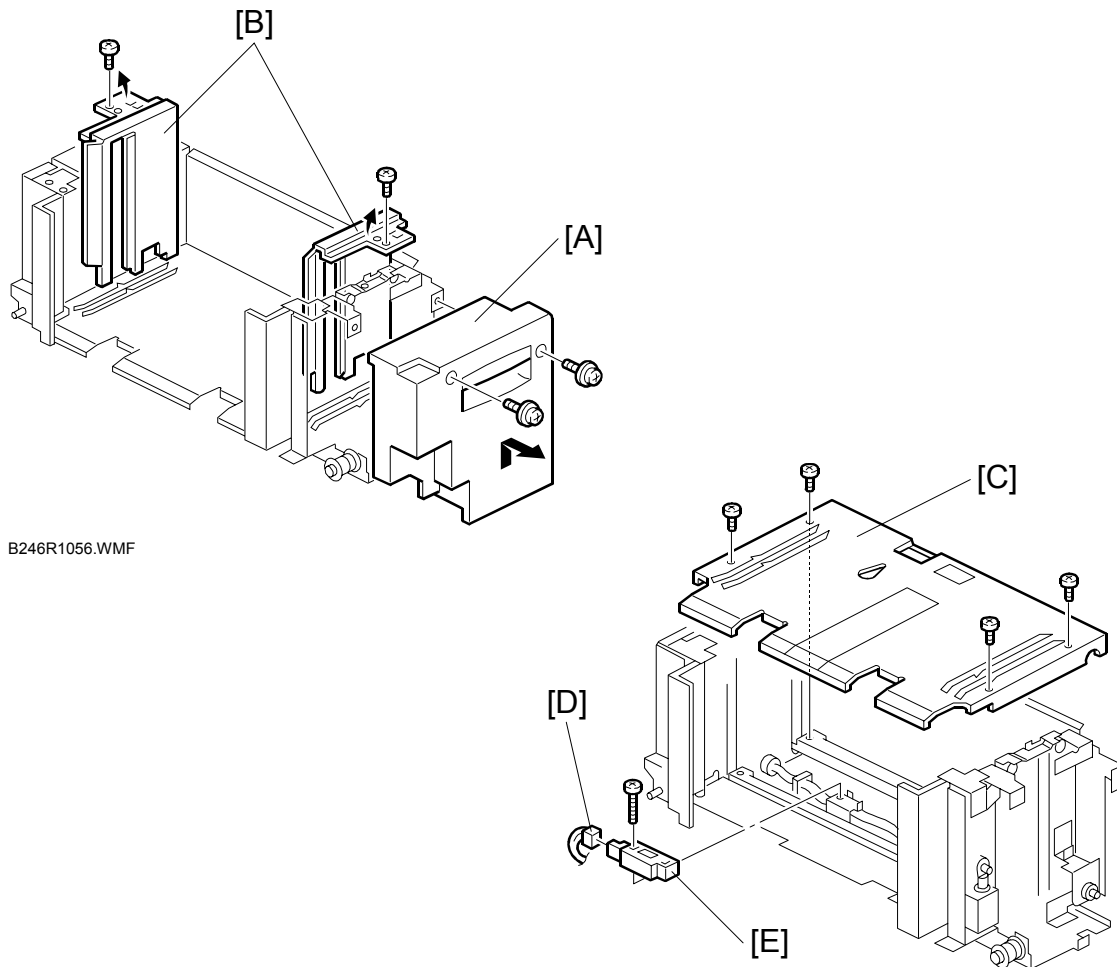

B246R1056.WMF

B246R1057.WMF

Replacement
Adjustment


Turn off the main switch.

Remove the right tandem tray (➡ 3.11.1)

- [A]: Inner cover (⌘ x 2)
- [B]: Side fences (⌘ x 1 each)
- [C]: Bottom plate (⌘ x 4)
- [D]: Connector (⌘ x 1)
- [E]: Sensor (⌘ x 1)

3.11.5 BOTTOM PLATE LIFT WIRE REPLACEMENT

NOTE: Before replacing the rear bottom plate lift wire, remove the front bottom plate lift wire. It is necessary to remove the shaft for replacing the rear bottom plate lift wire.

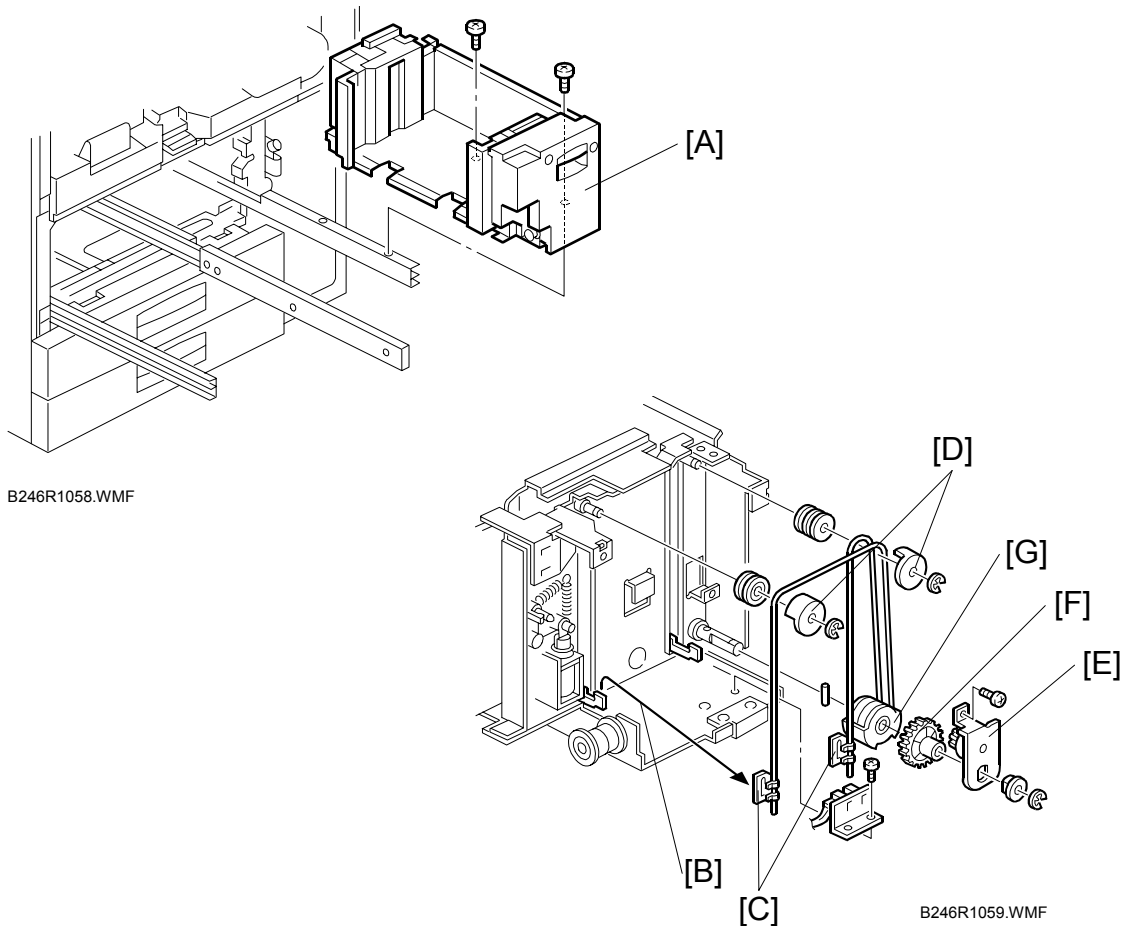

Remove the right tandem tray. (Refer to Paper Tray Removal.)

[A]: Remove the inner cover (⌘ x 2)

[B]: Remove the left stay.

[C]: Wire stoppers


- Slightly lift the front bottom plate and unhook.

[D]: Wire covers (⌘ x 1 each)

[E]: Bracket (⌘ x 1, ⌘ x 1, bushing x 1)

[F]: Gear

[G]: Bottom plate lift wire

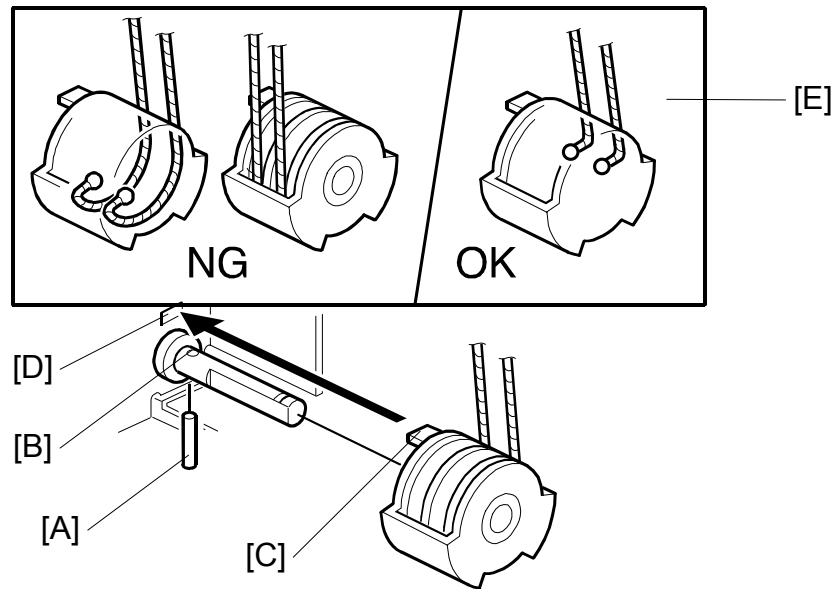

B246R1060.WMF


NOTE: When re-installing the bottom plate lift wire:

- 1) Set the positioning pin [A] in the hole [B], and set the projection [C] in the hole [D].
- 2) Position the wire as shown [E].
- 3) Do not cross the wires.


Replacement
Adjustment

3.11.6 TANDEM TRAY PAPER SIZE CHANGE

NOTE: At the factory, this tray is set up for A4 or LT LEF. Only A4 or LT LEF paper can be used for tandem feed.

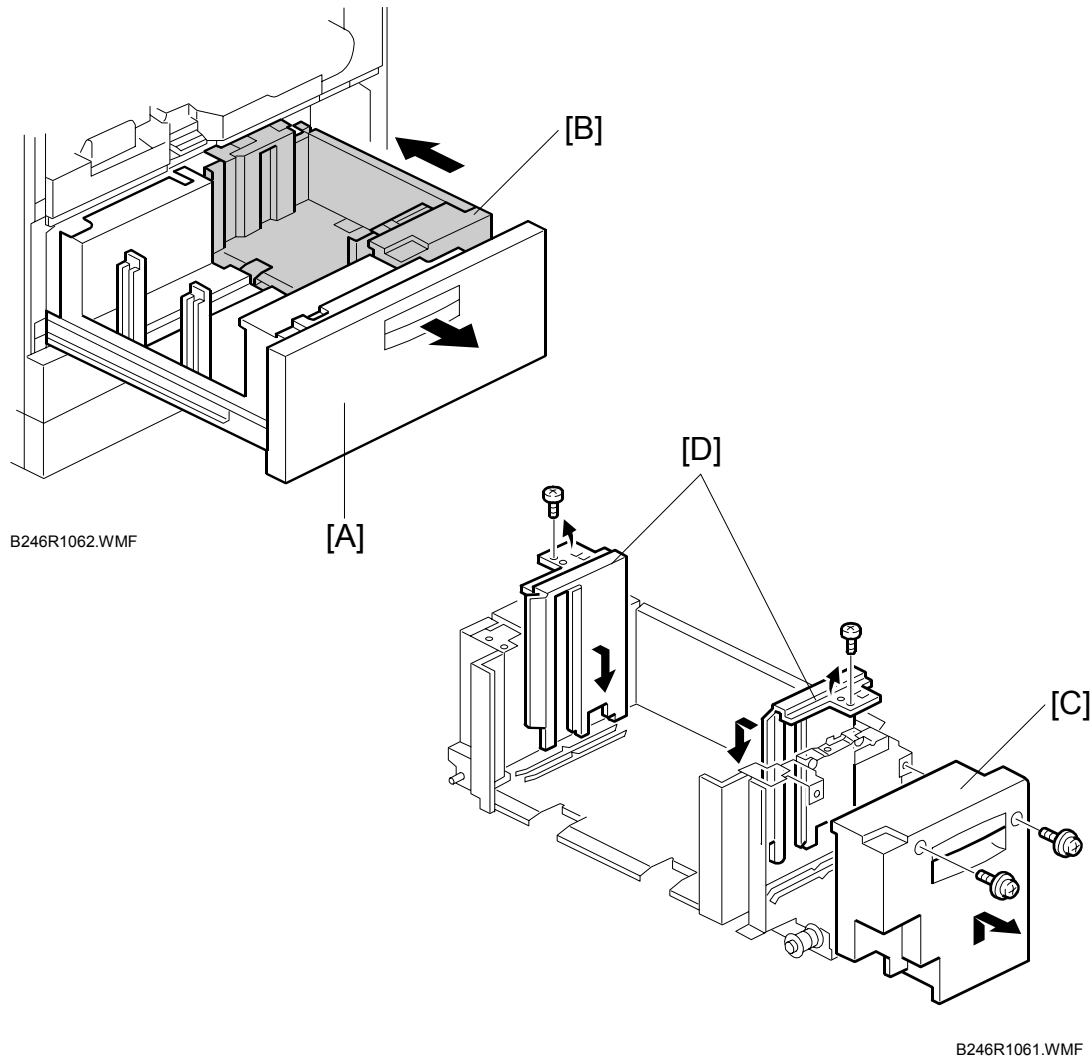


1. Open the front cover.
2. Completely pull out the tandem feed tray [A] to separate the right tandem tray [B] from the left tandem tray.
3. Remove the right tandem inner cover [C] (⌘ x 2).
4. Re-position the side fences [D] (⌘ x 1 each).
 A4: Outer slot position
 LT: Inner slot position
5. Re-install the right tandem inner cover.

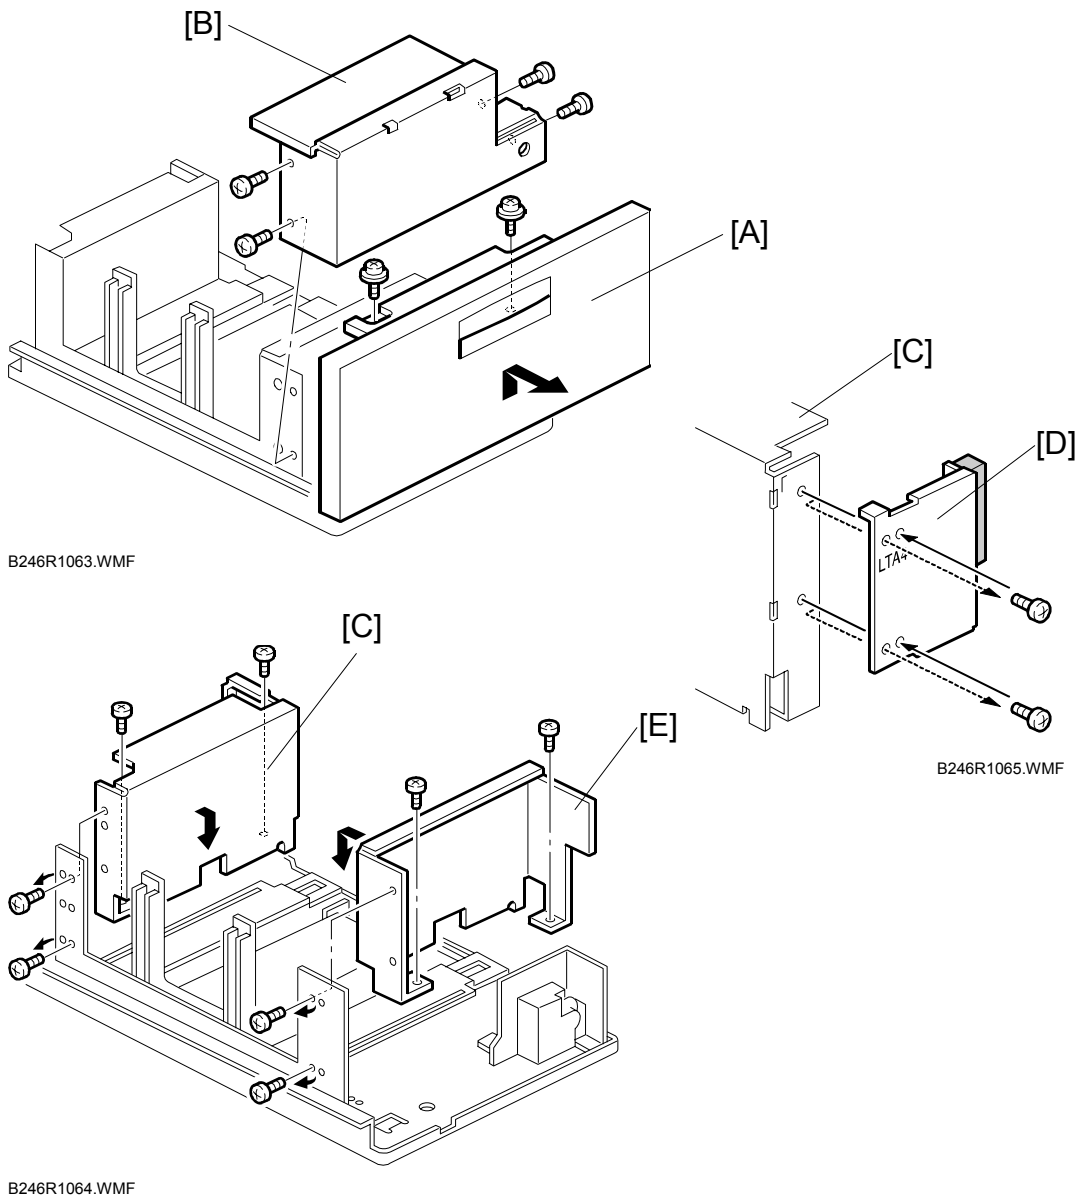

Replacement
Adjustment


6. Remove the tray cover [A] (⚙ x 2).
7. Remove the DC motor cover [B] (⚙ x 4).
8. Remove the rear side fence [C] (⚙ x 4) and re-position the rear cover [D] (⚙ x 2).
9. Re-position the side fences [C] [E] (⚙ x 4).
A4: Outer slot position
LT: Inner slot position
10. Re-install the DC motor cover and the tray cover.

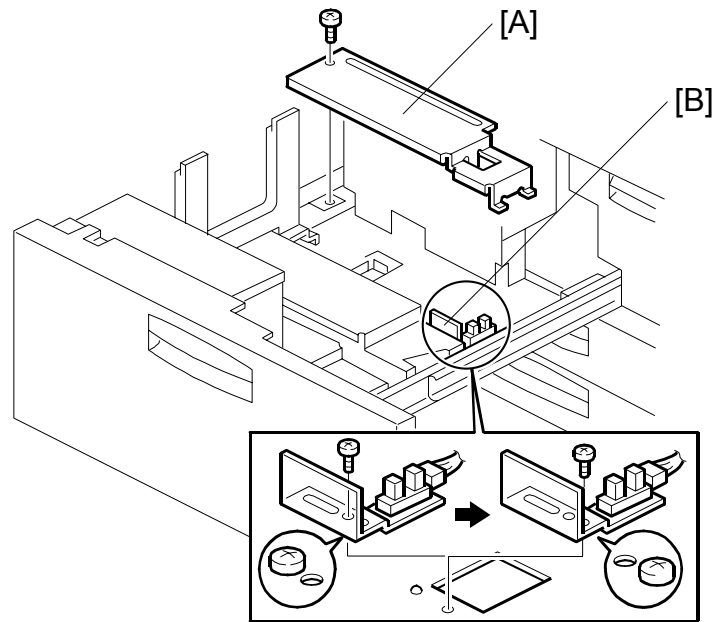

B246R1066.WMF

11. Remove the rear bottom plate [A] (⚙ x 1).
12. Re-position the return position sensor bracket [B] (⚙ x 1).
To use the paper tray for A4 size, set the screw in the left hole as shown. (For LT size, the screw should be placed on the right.)
13. Reinstall the rear bottom plate.
14. Input the new paper size into SP5959-001 (Paper Size – Tray 1). For details, see SP5959 in section “4. Service Tables”.
15. Do the scanner and printer adjustments. (🔧 3.14)

3.11.7 PICK-UP, FEED, SEPARATION ROLLER REPLACEMENT

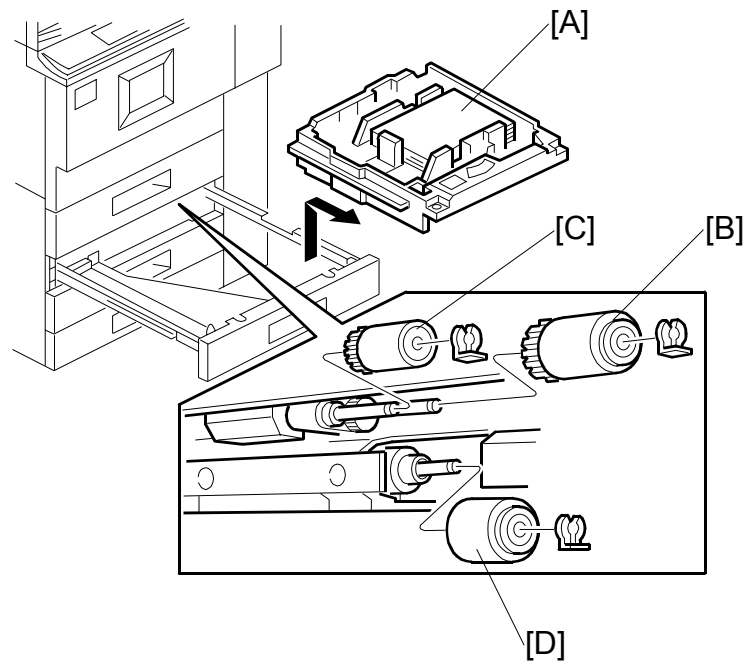


B246R1067.WMF

- [A]: Remove the tray.
 [B]: Feed roller (⌀ x 1)
 [C]: Pick-up roller (⌀ x 1)
 [D]: Separation roller (⌀ x 1)

NOTE: 1) The operation of the FRR mechanisms for the tandem tray (Tray 1), universal trays (Tray 2, Tray 3), by-pass tray, and ADF are similar. However, the only rollers that are interchangeable are the tandem and universal tray rollers (Trays 1, 2, 3).
 2) Do not touch the surface of new rollers during replacement.

Replacement
Adjustment

3.11.8 FEED UNIT

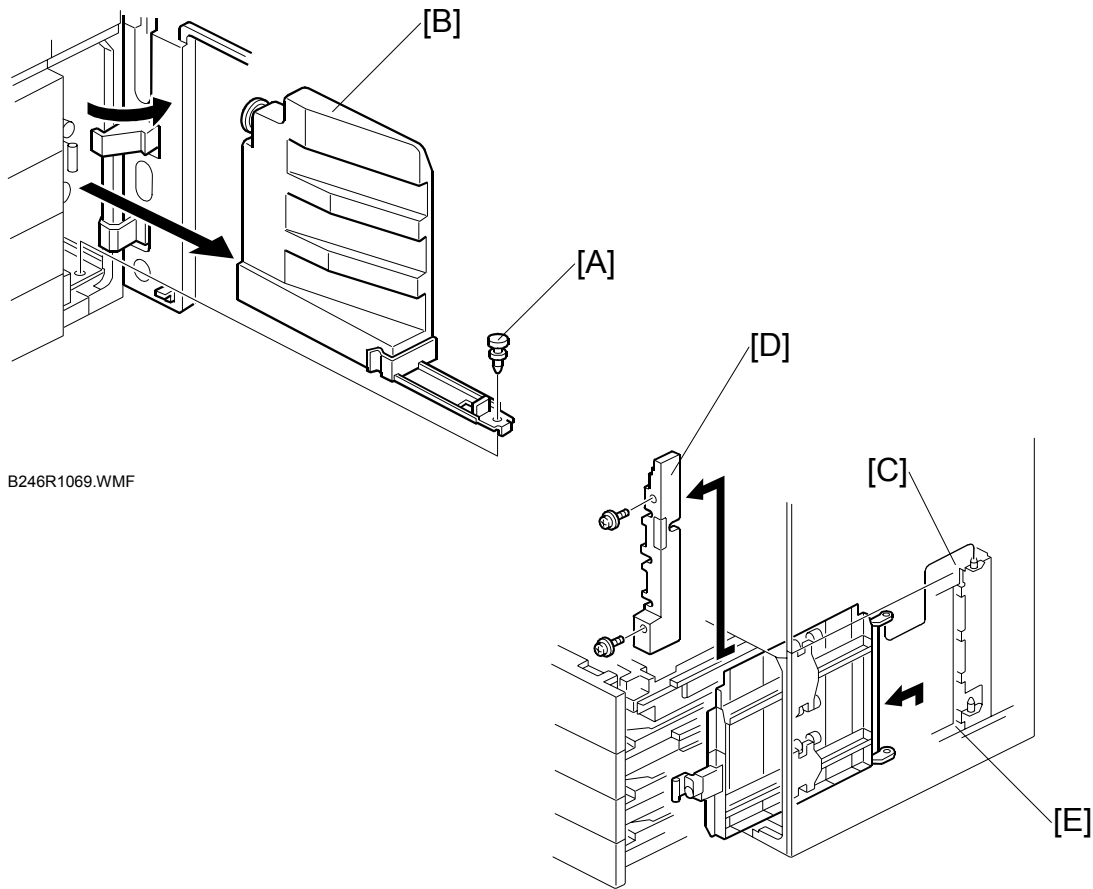

B246R1069.WMF

B246R1068.WMF

Front door (➡ 3.3.2)

LCT entrance guide cover and right lower cover (➡ 3.3.3)

- If the LCT is connected, disconnect it and pull it away from the machine.

Pull out all three trays (do not remove).


[A]: Nylon peg

[B]: Toner collection bottle


[C]: Vertical transport guide

[D]: Inner cover (⚙ x 2)

NOTE: When re-installing the vertical transport guide, remove the lower right cover then insert from [E]. (➡ 3.3.3)

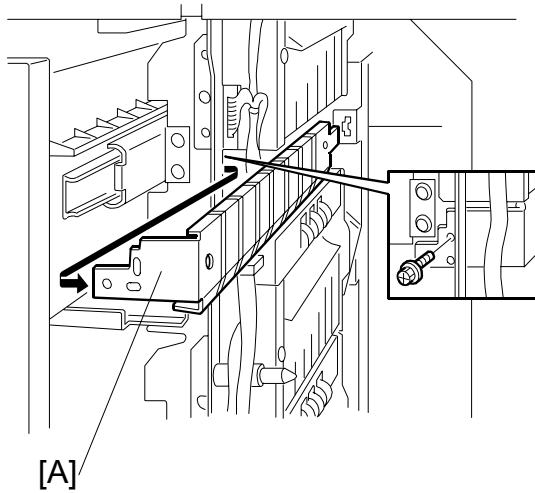

B246R1070.WMF

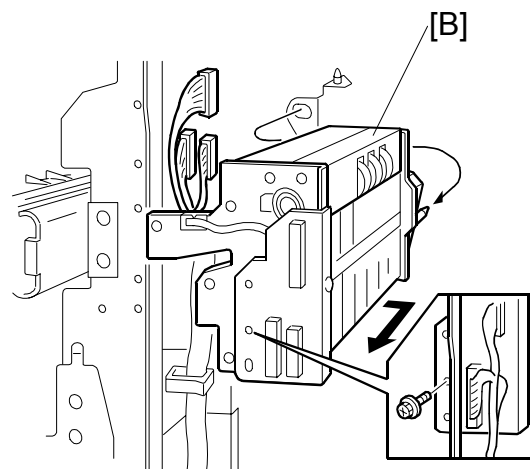

B246R1078.WMF

[A]: Guide plate (🔧 x 1)

- 1st feed unit only.

[B]: Feed unit (🔧 x 1, 📄 x 3)

- Insert your hand from the right and pull the feed unit forward.


NOTE: To avoid hitting the unit on the sides of the machine, remove it carefully and slowly.

Replacement
Adjustment

3.11.9 SEPARATION ROLLER PRESSURE ADJUSTMENT

The position of the drive gear for the separation roller can be changed in order to change the amount of pressure exerted by the separation roller. This adjustment can be done:


- When feeding special paper, especially thick paper
- When the customer is experiencing feed problems

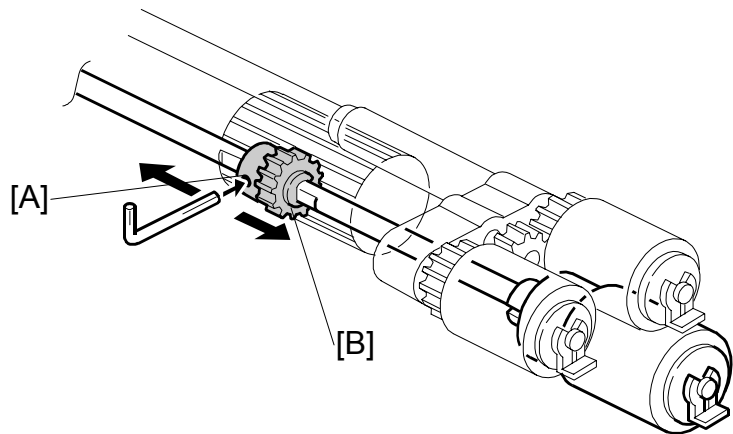

B246R1079.WMF

1. Remove the feed unit (☛ 3.11.8)
2. Loosen the hex screw [A].
NOTE: The separation roller gear [B] is positioned at the groove before shipping.
3. To adjust for thick paper, move the separation roller gear [B] to the left to decrease the pressure.
—or—
To correct misfeeds, move the separation roller gear to the right to increase the pressure.

3.11.10 RELAY SENSOR

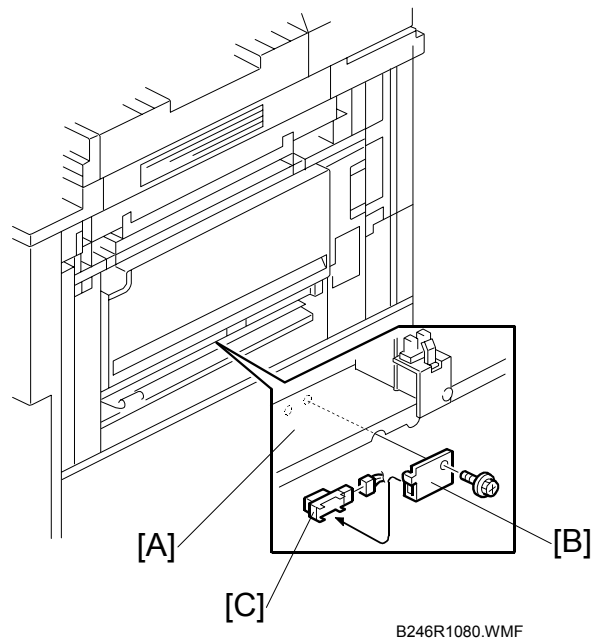


[A]: Remove the LCT entrance guide cover.

[B]: Relay sensor bracket (🔩 x 1)

[C]: Relay sensor (🔌 x 1)

Replacement
Adjustment

3.11.11 BY-PASS PAPER SIZE DETECTION BOARD

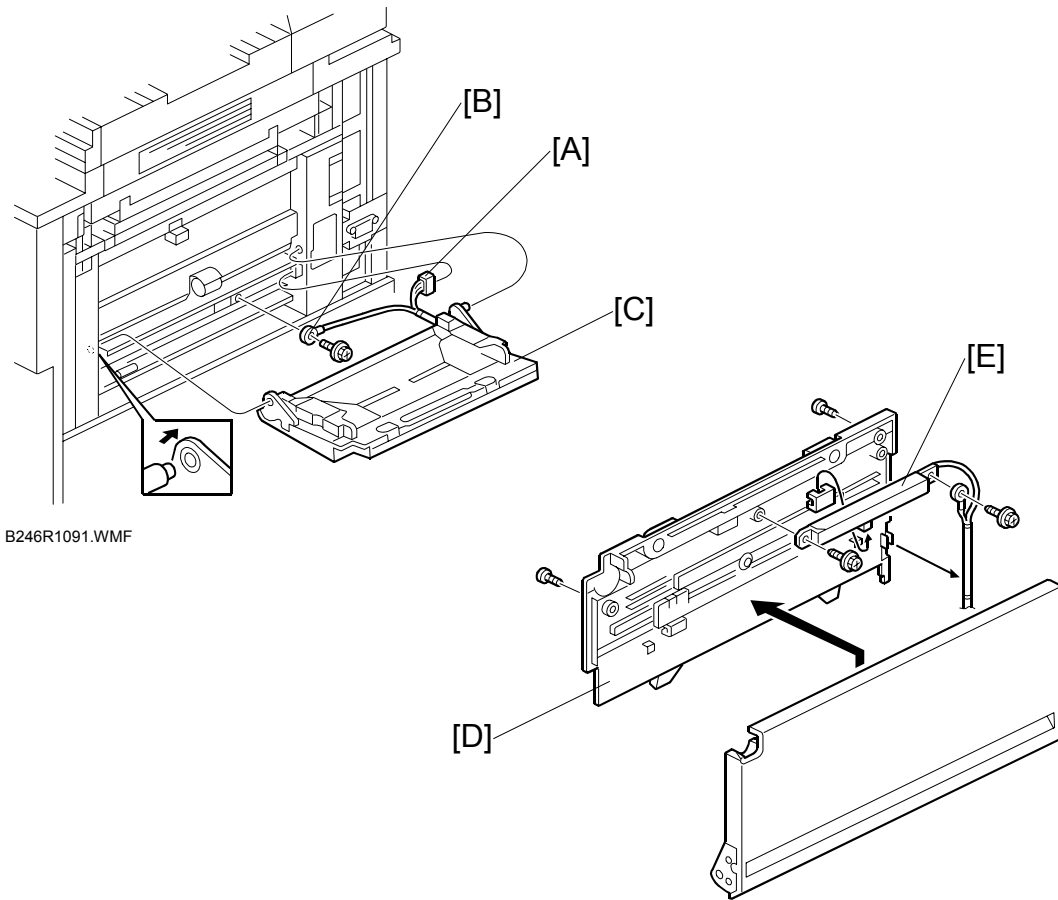

B246R1091.WMF

B246R1090.WMF

Registration inner cover (⌘ x 2)

- Not shown. This cover is directly below the by-pass tray.

[A]: Connector (⌘ x 1)

[B]: Ground wire (⌘ x 1)

[C]: By-pass tray

- Disconnect the by-pass tray from the pins on both sides.


[D]: By-pass table (⌘ x 2)

[E]: By-pass paper size detection board (⌘ x 2)

After installation, execute SP1904 to calibrate the maximum and minimum paper sizes for the side fences:

- SP1904-001 By-pass Tray Paper Size Detection – Minimum Size
Move the side fences to the minimum size, then execute this SP.
- SP1904-002 By-pass Tray Paper Size Detection – Maximum Size
Move the side fences to the maximum size, then execute this SP.

3.11.12 BY-PASS TRAY ROLLERS

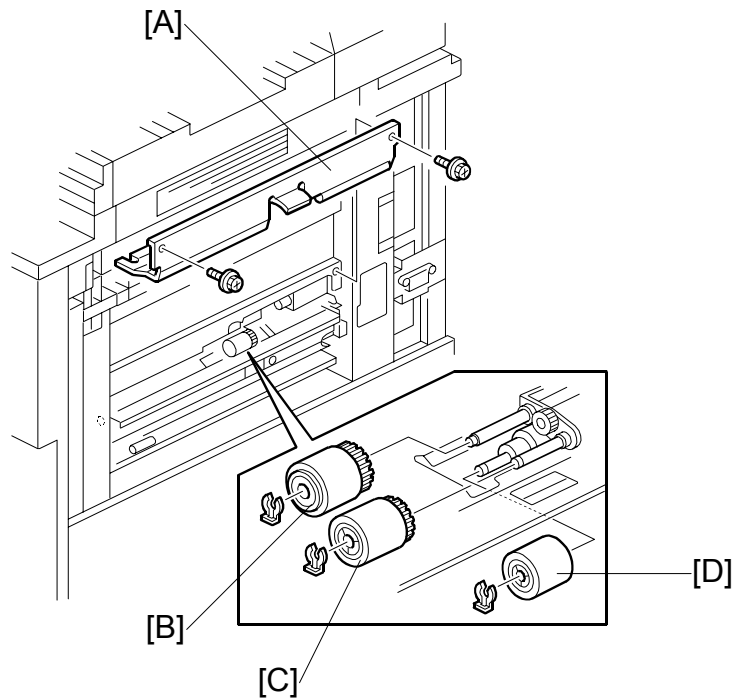

Replacement
Adjustment

Right covers (☛ 3.3.3)

By-pass tray (☛ 3.11.11)

[A]: By-pass cover (☛ x 2)

[B]: Feed roller (☛ x 1)


[C]: Pick-up roller (☛ x 1)

[D]: Separation roller (☛ x 1)

NOTE: 1) Even though the FRR mechanisms for the tandem tray (Tray 1), universal trays (Tray 2, Tray 3) by-pass tray and ADF are similar, the only rollers that are interchangeable are the tandem and universal trays (Trays 1, 2, 3).

2) Do not touch the surface of new rollers during replacement.

3.11.13 BY-PASS SEPARATION ROLLER PRESSURE ADJUSTMENT

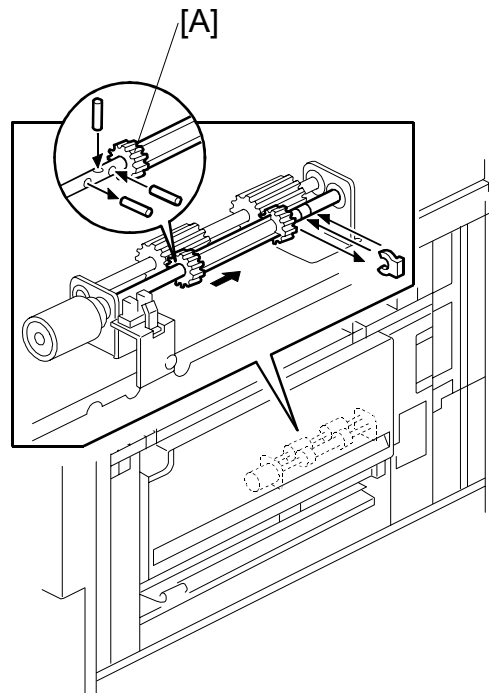

B246R1093.WMF

1. Loosen the separation roller gear [A].


The position of the drive gear for the separation roller can be changed in order to change the amount of pressure exerted by the separation roller. This adjustment can be done:

- When feeding special paper, especially thick paper
- When the customer experiences feed problems

NOTE: The separation roller gear is positioned at the groove before shipping.

2. Move the separation roller gear right to increase the pressure to correct misfeeds.

3.11.14 REGISTRATION SENSOR

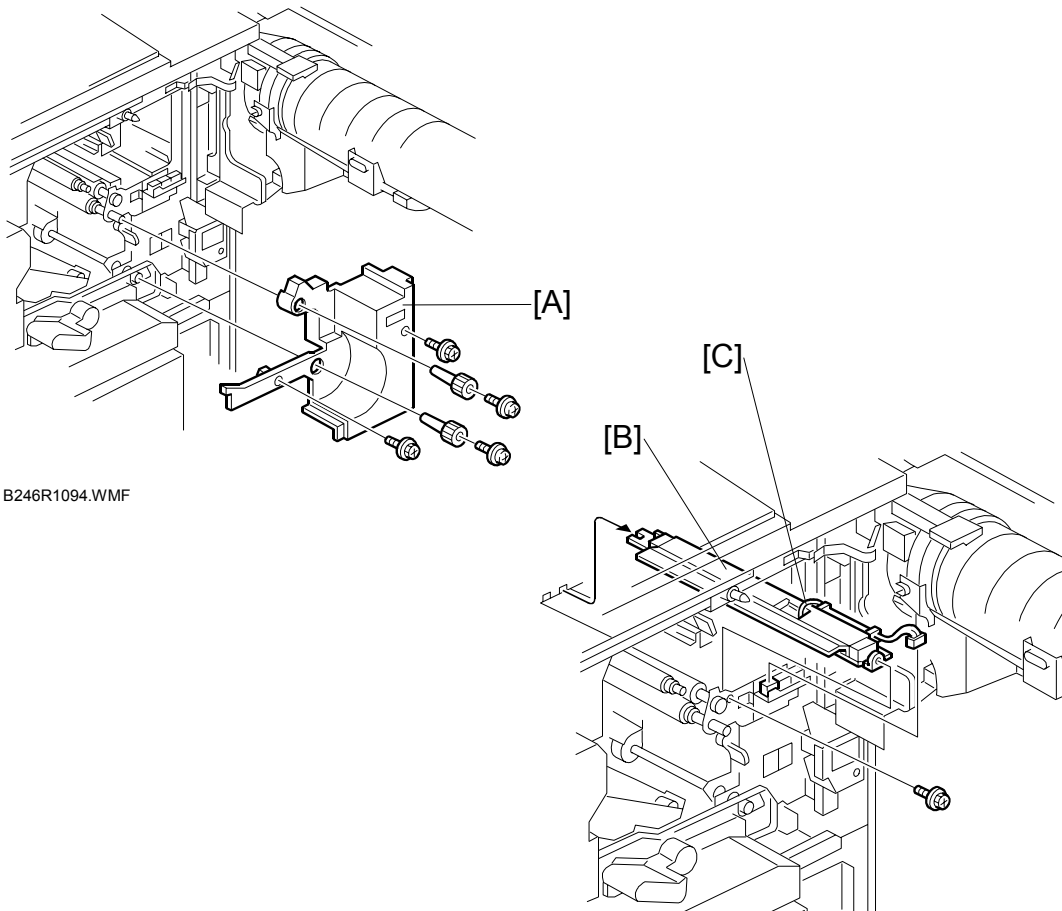

B246R1094.WMF

B246R1095.WMF

[A]: Inner cover (🔩 x 4)

Development unit (👉 3.6.1)


Charge corona unit (👉 3.6.2)

OPC drum unit (👉 3.6.5)

[B]: Paper dust removal unit (🔩 x 1, 📏 x 1)


[C]: Registration sensor

Replacement
Adjustment

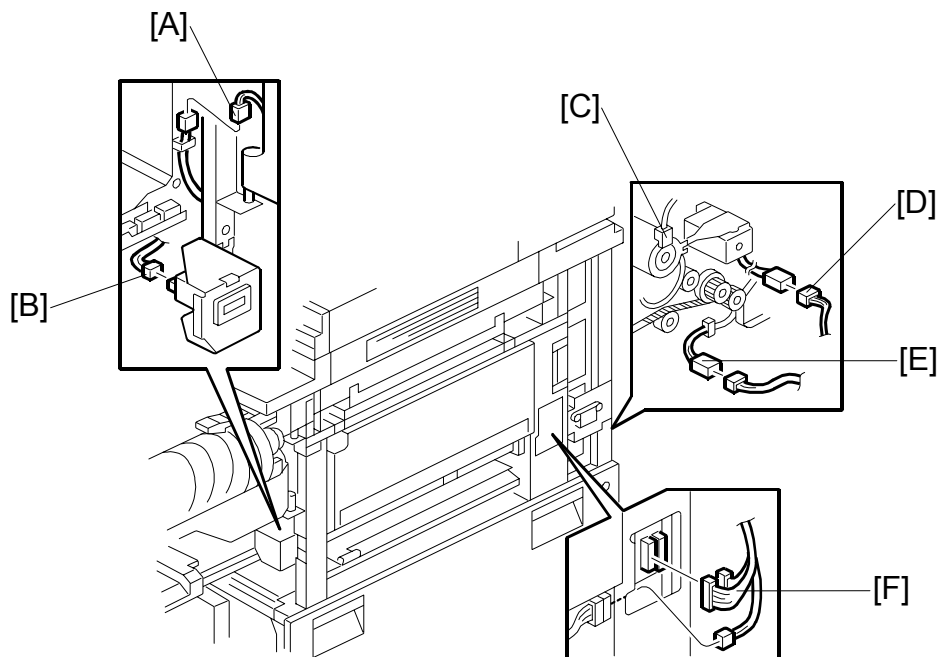3.11.15 REGISTRATION AND BY-PASS UNIT REMOVAL

B246R1096.WMF

1. Remove the development unit. (☛ 3.6.1)
2. Remove the inner cover. (🔧 x 4)
3. Disconnect the toner bottle holder connector [A] and counter connector [B].
4. Pull out the duplex unit about 10 cm.
 - Confirm that the registration roller is separated from the positioning pin.
5. Remove the right upper cover. (☛ 3.3.3)
6. Rear upper cover (☛ 3.3.5)
7. Disconnect the following connectors:
 - Relay clutch connector [C]
 - Guide plate solenoid connector [D]
 - Guide plate sensor connector [E]
 - By-pass tray unit connectors [F]

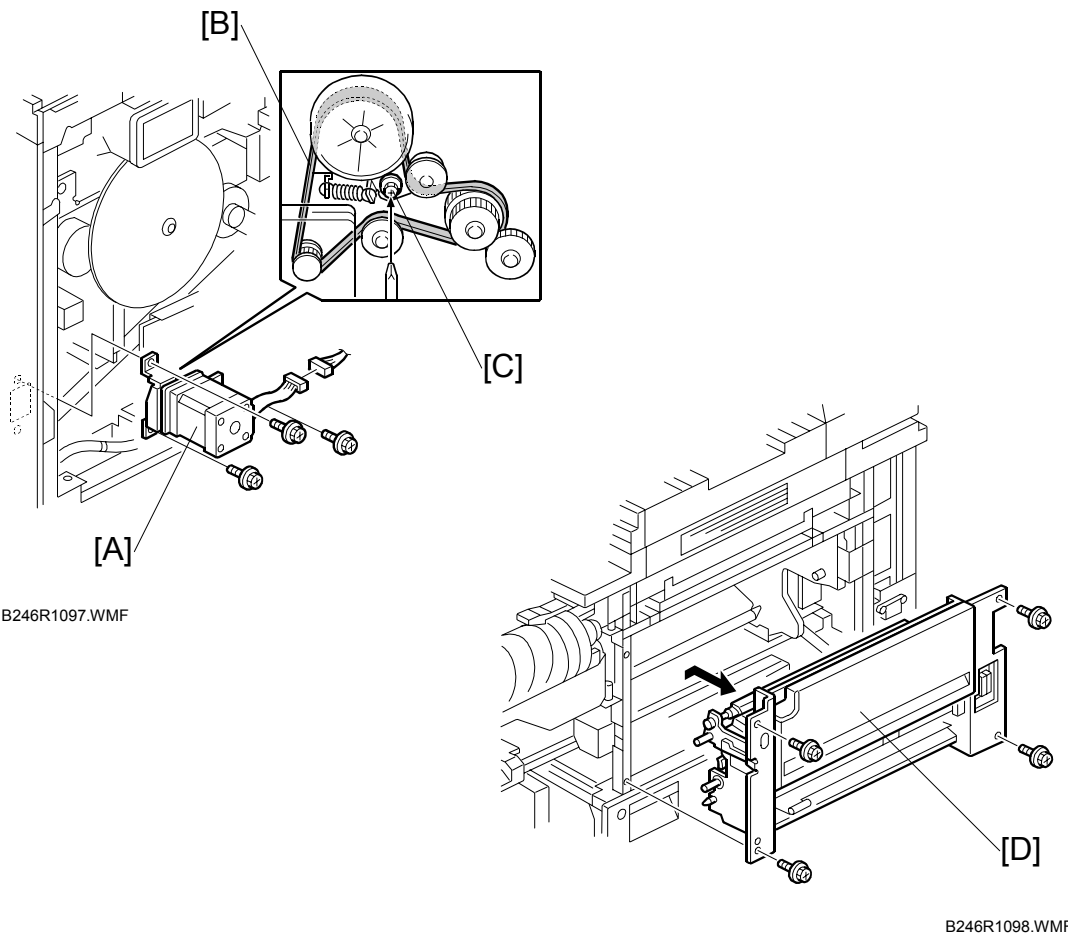

Replacement
Adjustment

8. Remove the by-pass feed motor [A] (⚙ x 3, ⚙ x 1).
 - At re-installation, if the tension of the belt [B] is slack, loosen the screw on the tension bracket [C], move the screw to put more tension on the belt, then tighten the screw at the new position.
9. Remove the by-pass unit [D] (⚙ x 4).

When removing and installing the by-pass unit:

 - Make sure that the unit does not catch on any harnesses.
 - On re-installation, make sure that no harnesses are pinched between the unit and the machine frame.
 - You must re-install the by-pass unit with the duplex unit open.


3.12 PCBS AND HDD

3.12.1 BCU BOARD (BASE ENGINE CONTROL UNIT)

BCU: B064, B140 Series

Rear upper cover (☛ 3.3.5)


[A]: BCU board bracket (🔩 x 4)

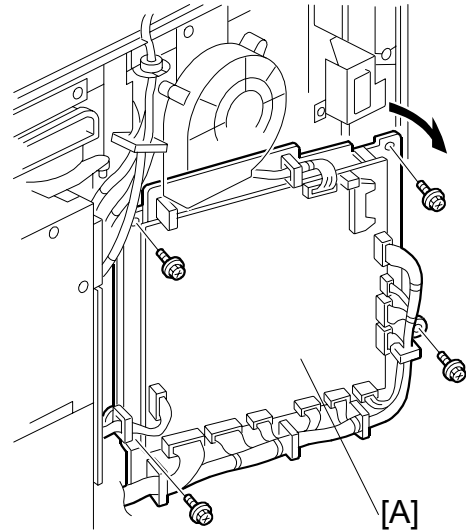


B246R1099.WMF

[B]: BCU board (🔩 x 4, 📏 x 17)

1. Remove IC31 (EEPROM) from the old BCU board.
2. Attach the EEPROM to the new board.
3. Make sure that the DIP switch settings on the new board and identical to the DIP switch settings of the old board.
4. After replacing this board, execute SP3001-002 (ID Sensor Initialization)

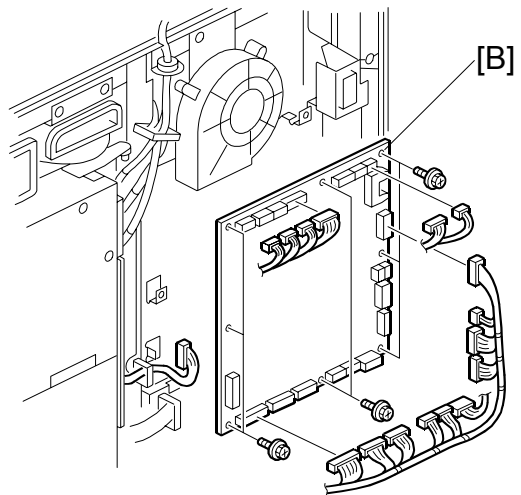

B246R1023.WMF

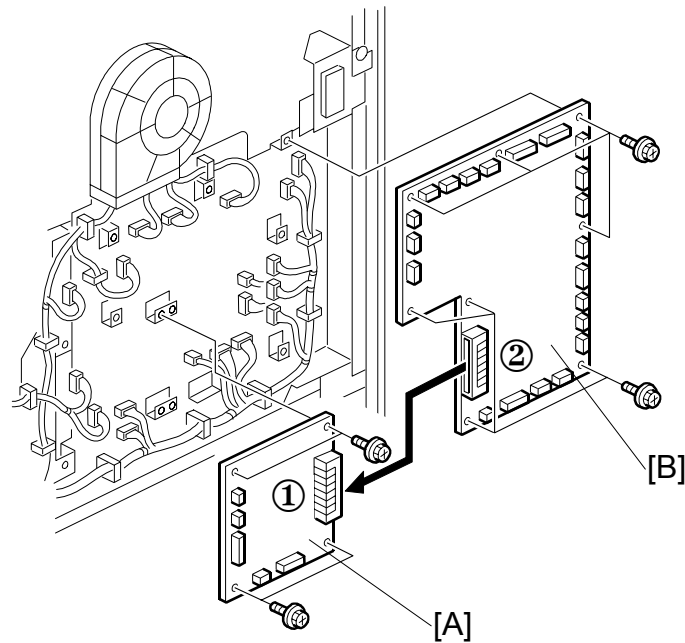BCU, IOB: B246 Series

B246R109A.WMF

 Replacement
Adjustment

- Disconnect ADF cable

Remove:

- Rear upper cover (⚙ x2) (➡ 3.3.5)

- Rear lower cover (⚙ x2) (➡ 3.3.5)

[A] BCU screws, connectors (⚙ x1, 🔌 x4, ⚙ x4)

[B] IOB screws, connectors (⚙ x6, 🔌 x16, ⚙ x8)


- Separate the BCU ①, IOB ② at the edge connector

3.12.2 CONTROLLER BOARD

B064 Series: Controller Board

Rear upper cover (➡ 3.3.5)

[A]: Swing-out the PCB unit (⚙ x 2)

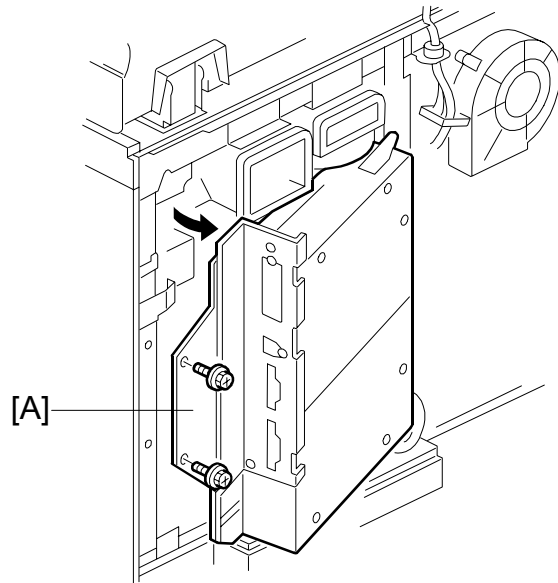

B246R1022.WMF


[B]: Controller cover (⚙ x 9)

[C]: Controller board (⚙ x 2, ⚙ x 2)


- Pull the controller board out in the direction of the arrow.

Important:

Remove the NVRAM from the old controller board and install it on the new board.

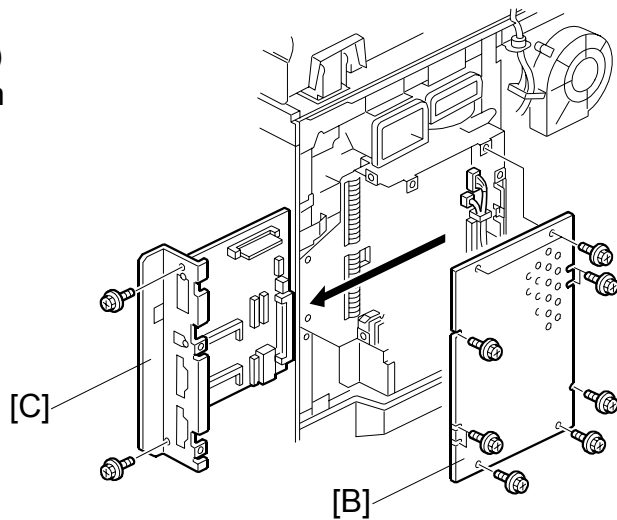

B246R1021.WMF

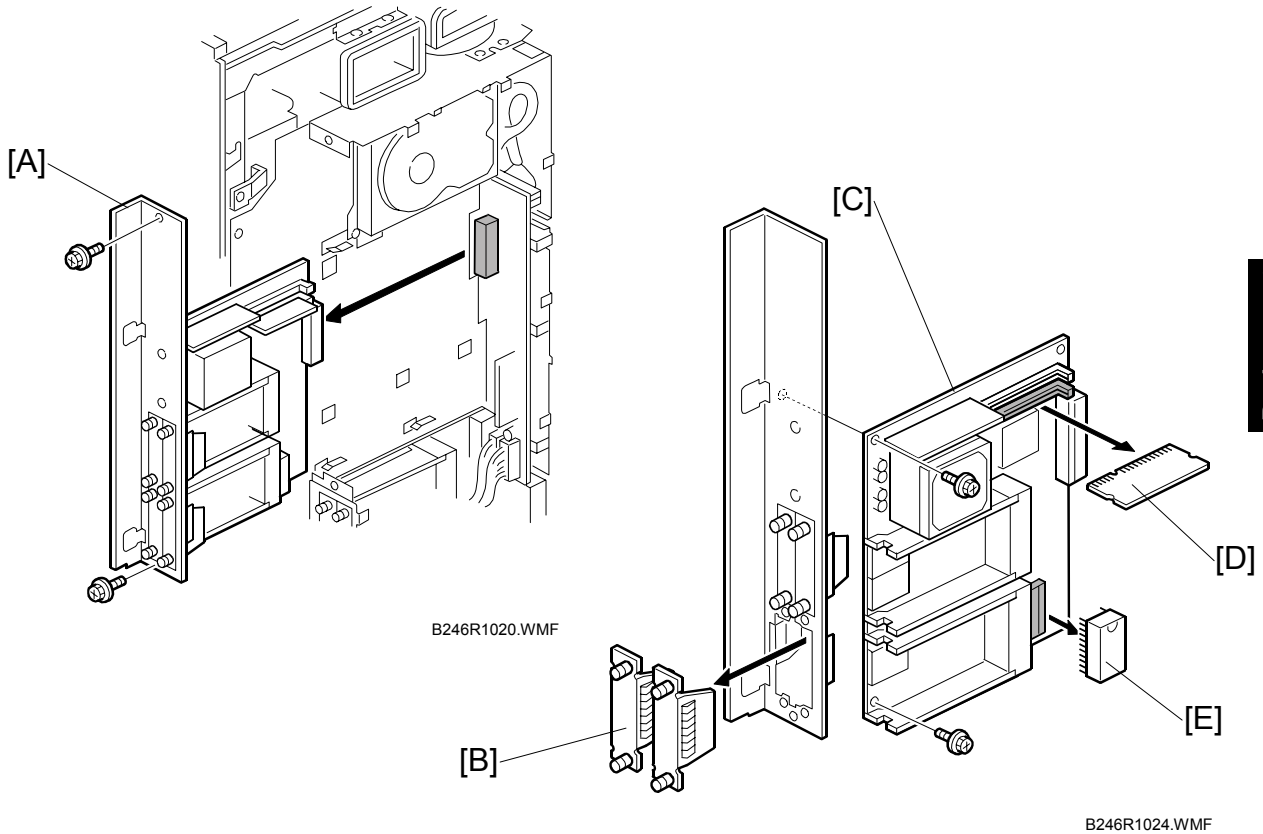B140 Series: Controller Board

Rear covers (➡ 3.3.5)

Controller box cover (⚙ x 12)

[A]: Controller board plate (⚙ x 2)

[B]: Lower covers

[C]: Controller board (⚙ x 2)

[D]: Remove the DIMM from the old controller board, and connect it to the new board.

[E]: Remove the NVRAM from the old controller board, and connect it to the new board.

B246 Series: Controller Board

- Disconnect ADF cable


Remove:

- Rear upper cover (⚙ x2) (➡3.3.5)
- Rear lower cover (⚙ x2) (➡3.3.5)
- Controller box cover (⚙ x13)
- All SD cards and SD card slot cover (⚙ x1)

Remove:

[A] Network interface board and all other installed boards (Knob ⚙ x2 ea.)

[B] Controller box faceplate (⚙ x5)

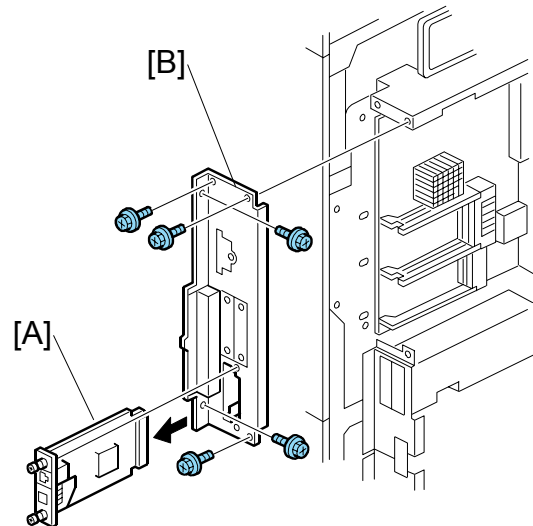

B246R103A.WMF

[C] Memory DIMM

[D] NVRAM


[E] Controller board (⚙ x4)

Reinstallation

- Make sure the system SD card is reinstalled in SD card slot **C1** (top slot)
- The machine will not operate if the system SD card is missing from SD card slot **C1**.
- Reinstall all the option boards in their proper slots if any were removed.

Important:


- Remove the NVRAM from the old controller board and install it on the new board.

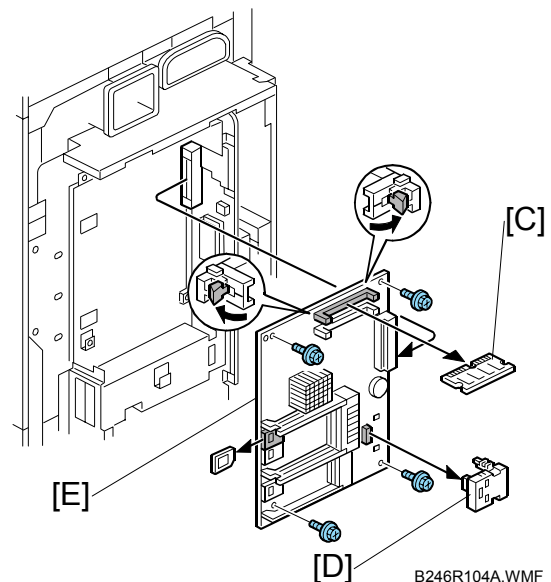

B246R104A.WMF

3.12.3 IPU BOARD

B064 Series: IPU Board

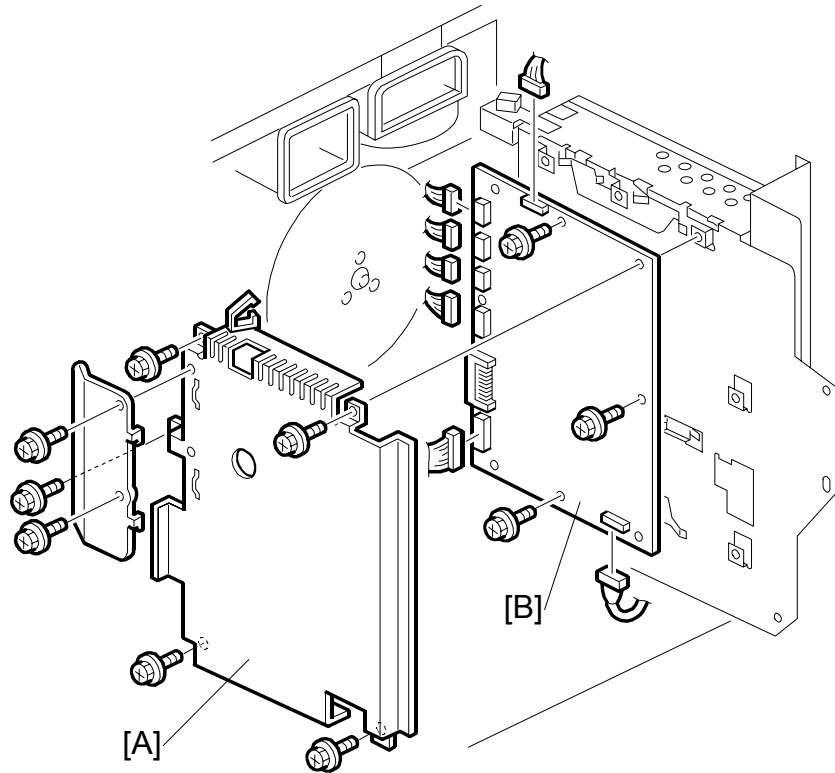

B246R1025.WMF



Replacement
Adjustment

Rear upper cover (☛ 3.3.5)

Swing-out the PCB unit (☛ 3.12.2)

[A]: PCB unit cover (🔩 x 7)


[B]: IPU board (🔩 x 3, 📏 x 7)

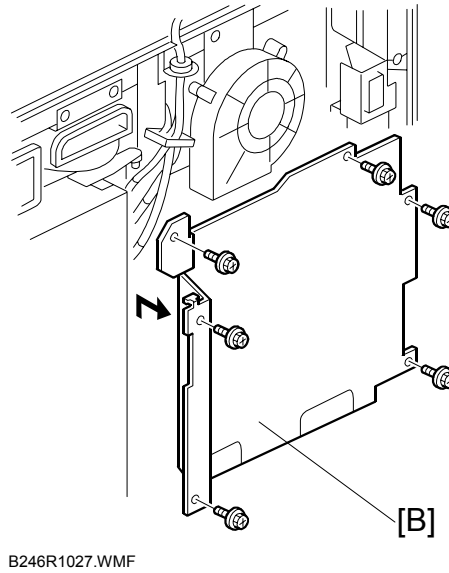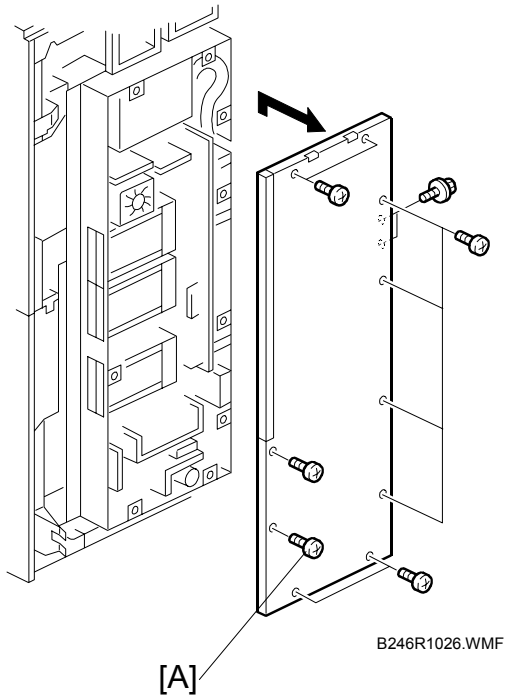
B140 Series: IPU, Mother Board**Rear covers (➡ 3.3.5)**

[A]: Controller box cover (⚙ x 12)

[B]: BCU cover plate (⚙ x 6)

[C]: Controller box door (⚙ x 5)

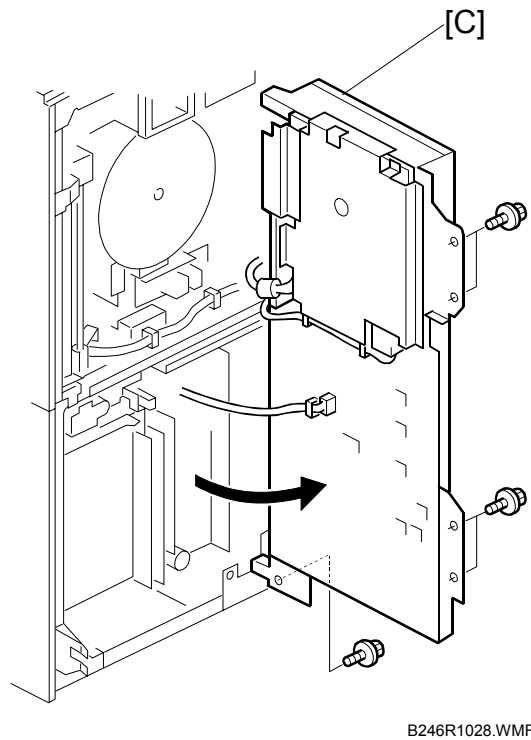

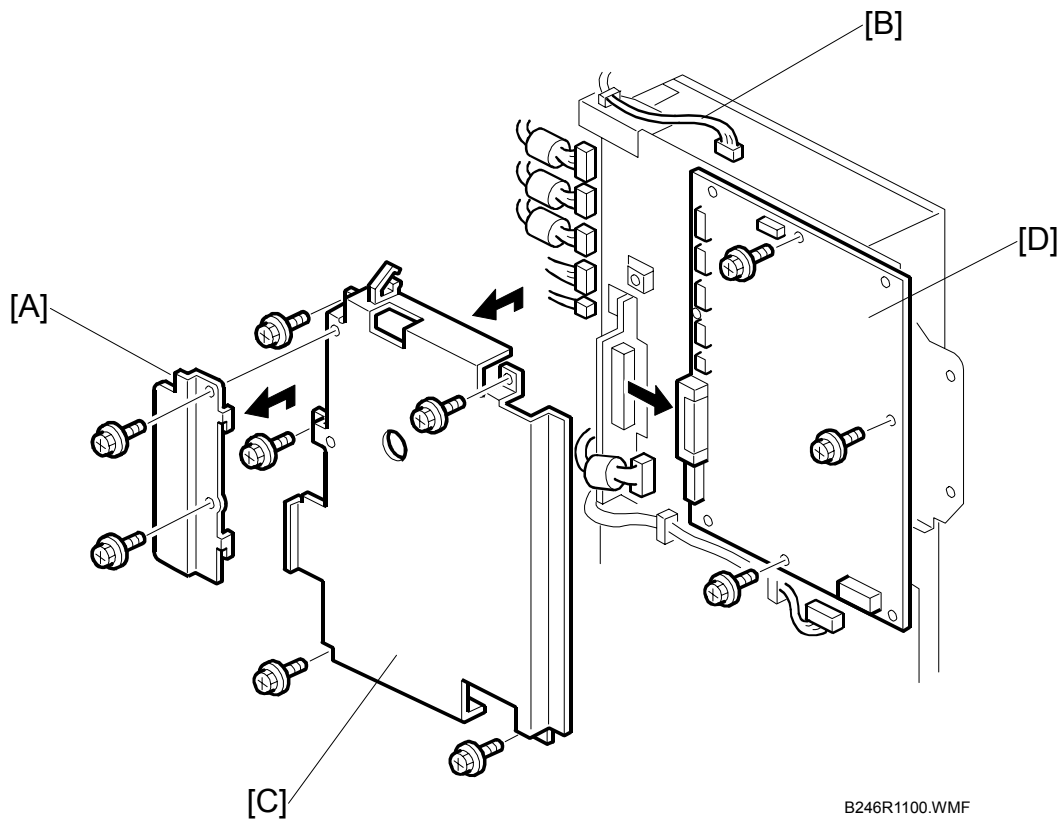


B246R1100.WMF

- [A]: Connector cover (🔩 x 2)
 [B]: Harness (🔌 x 1, 📡 x 1)
 [C]: IPU cover (🔩 x 5)
 [D]: IPU board (🔩 x 3, 📡 x 8)

NOTE: Record the positions of the IPU board screws. Attach them at the same positions when you install the board again.

Replacement
Adjustment

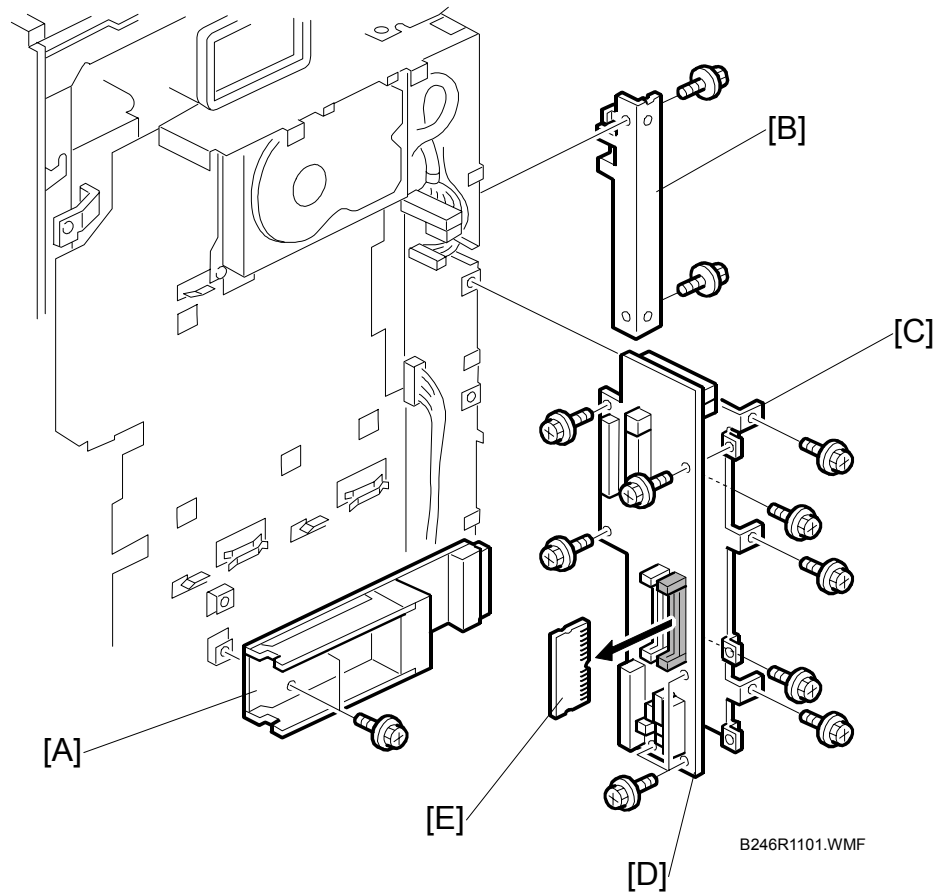

- [A]: A1, A2 connector slots assembly (1 x 1)
[B]: Connector cover (2 x 2)
[C]: Mother board support plate (5 x 5)
[D]: Mother board (1 x 1)
[E]: Mother board DIMM

B246 Series: IPU

- Disconnect ADF cable

Remove:


- Rear upper cover (⚙ x2) (➡3.3.5)
- Rear lower cover (⚙ x2) (➡3.3.5)

Remove:

[A] Screws and swing open the controller box (⚙ x4).

[B] Left connector shield (⚙ x2)

[C] Right connector shield (⚙ x4)

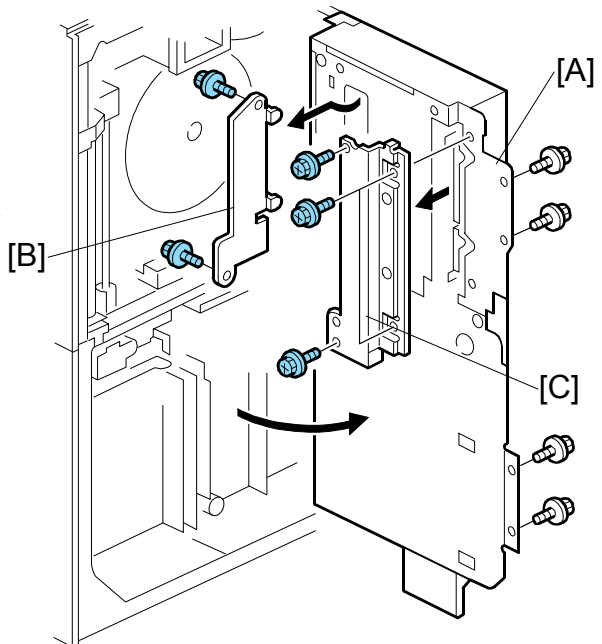


Replacement
Adjustment

B246R1102.WMF


[D] IPU board unit (⚙ x7, ⚙ x2)

- Slowly slide the IPU board and bracket out of the controller box.


[E] IPU (⚙ x8)

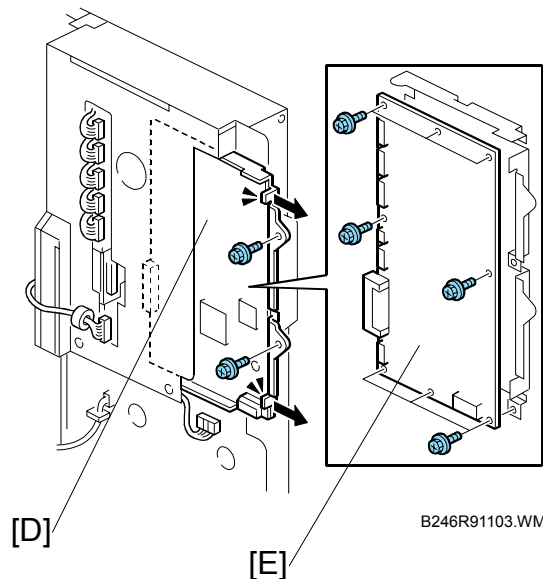

B246R91103.WMF

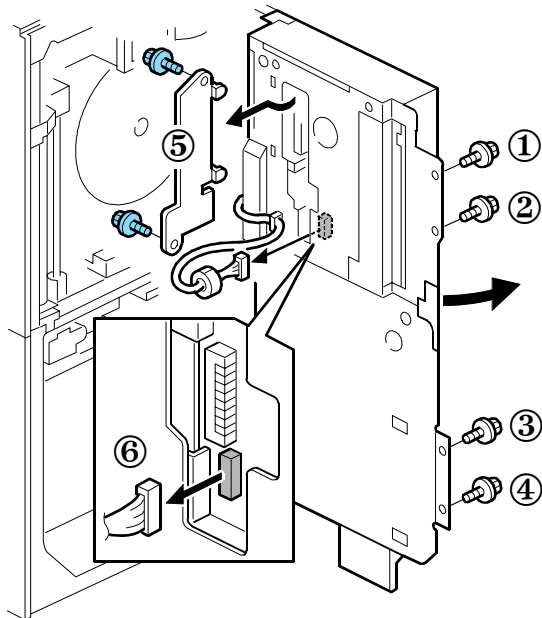B246 Series Motherboard

B246R105A.WMF

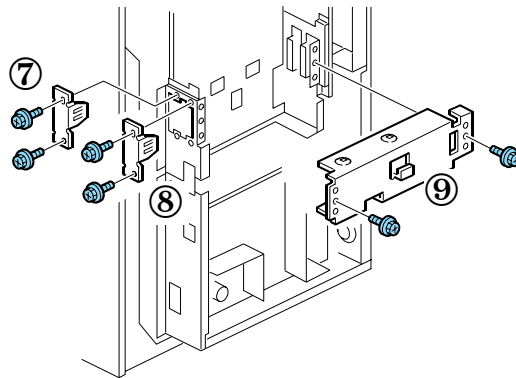

B246R106A.WMF

- Disconnect ADF cable

1. Remove:


- Rear upper cover (⚙ x2) (➡3.3.5)
- Rear lower cover (⚙ x2) (➡3.3.5)
- Controller box cover (⚙ x13)
- Controller board (➡See page 3-120)

2. Remove screws ① to ④ and swing open the controller box (⚙ x4).

3. Remove the left IPU connector shield ⑤ (⚙ x2).

4. Disconnect connectors ⑥ and ⑦ (🔌 x2).


5. Remove brackets ⑦, ⑧, ⑨ (🔌 x2 ea.).

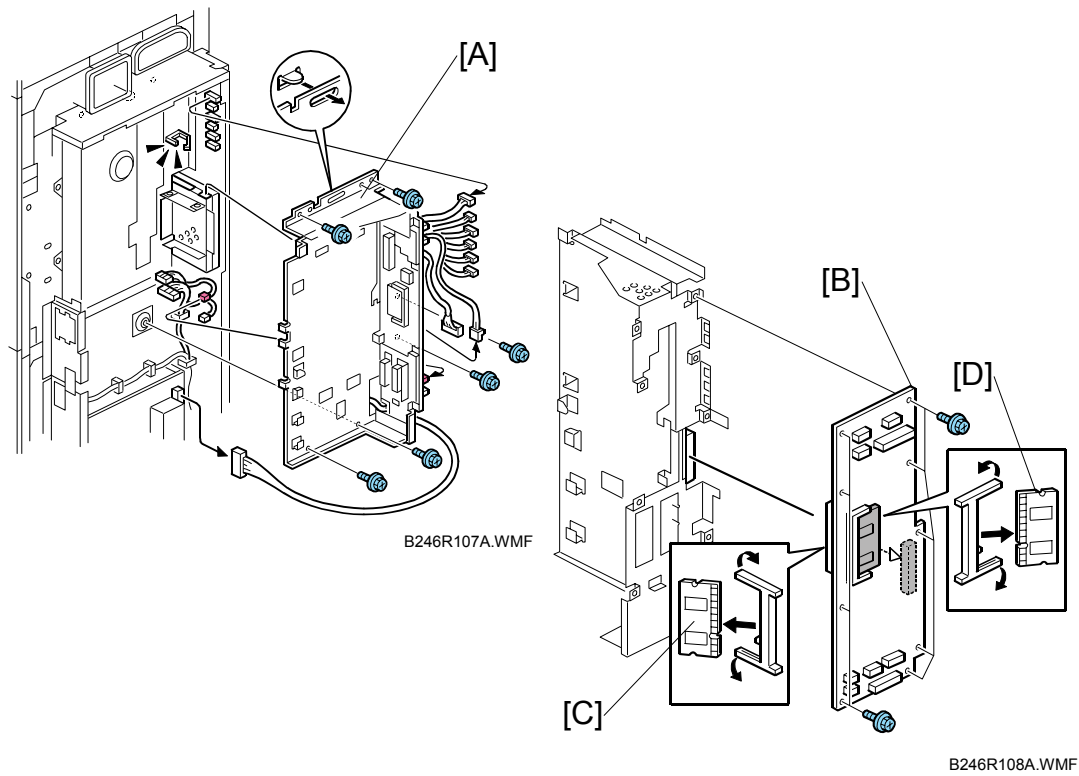

Replacement
Adjustment

6. Remove the controller board mounting bracket [A] (⌘ x13, ⌘ x6)
7. Remove the controller board [B] from the side of the mounting bracket (⌘ x9)
8. Remove DIMMs [C] and [D].

3.12.4 DEVELOPMENT POWER PACK

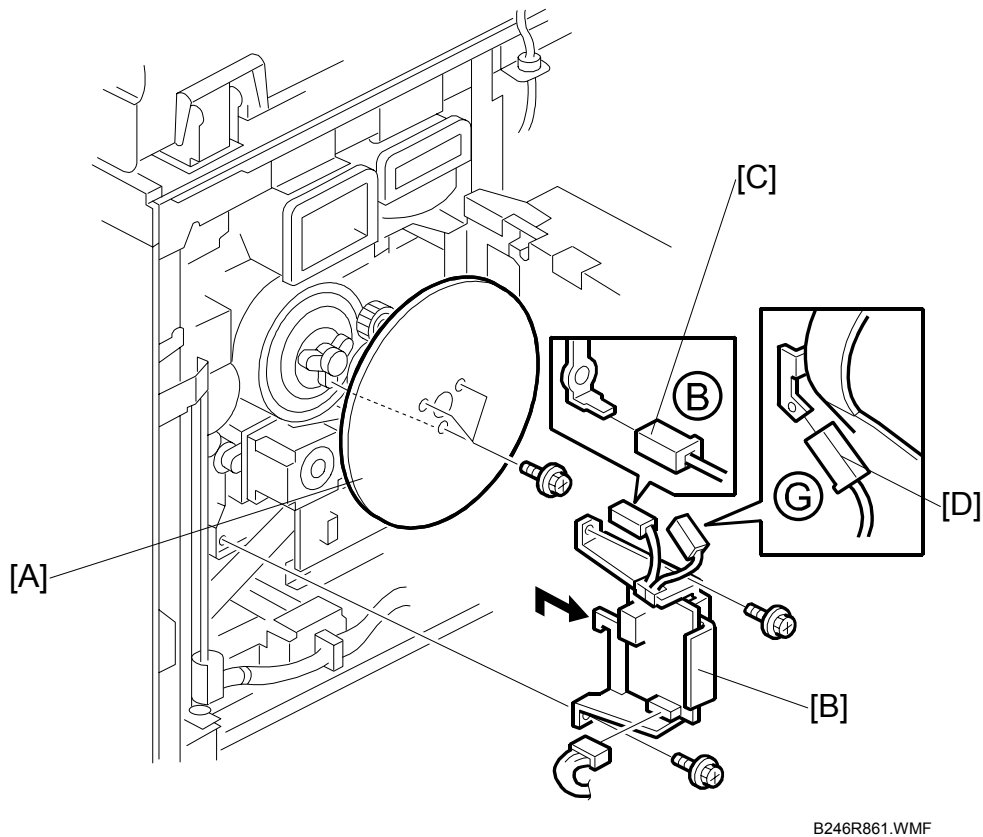

B246R861.WMF

- Remove rear upper cover (➡ 3.3.5)

[A]: Flywheel (⚙ x 3)

[B]: Development power pack (⚙ x 2, 📏 x 3)

NOTE: Mark the bayonet connectors [C], [D] with a felt pen to ensure that they are not connected incorrectly when the power pack is re-connected.

3.12.5 PSU, PFC BOARDS

B064 Series


Rear lower cover (☛ 3.3.5)

[A]: Harness clamps (🔩 x 3)

[B]: PSU (🔩 x 6, 📏 x 13)

- The PSU consists of two PCB's.

[C]: PFC (🔩 x 4, 📏 x 14)

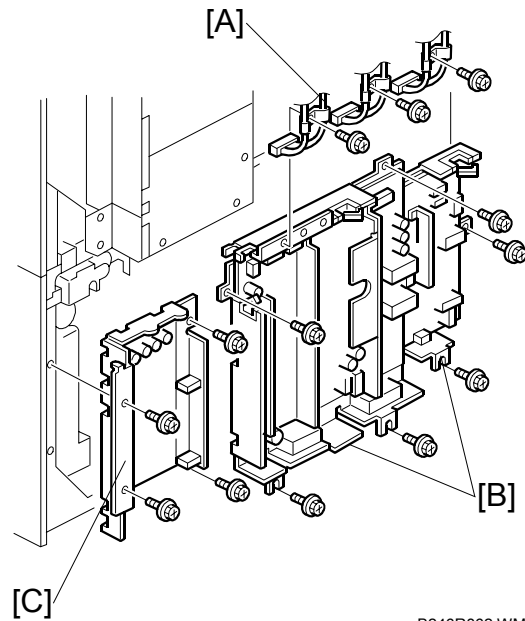


B246R862.WMF

B140 Series PSU

Rear covers (☛ 3.3.5)

Controller box cover (🔩 x 12)

[A]: PSU (📏 x 5, 🔩 x 7)

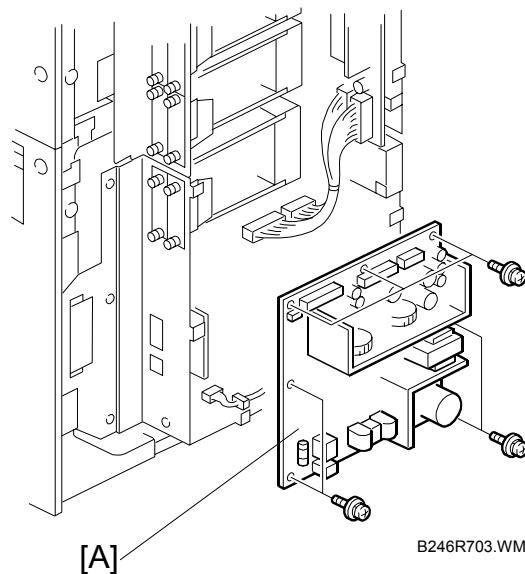


B246R703.WMF

B246 Series PSU

- Rear upper cover (⚙️ x2) (➡️ 3.3.5)
- Rear lower cover (⚙️ x2) (➡️ 3.3.5)
- Controller box cover (⚙️ x13)

Remove:


[A] PSU (🔌 x4, ⚙️ x7)

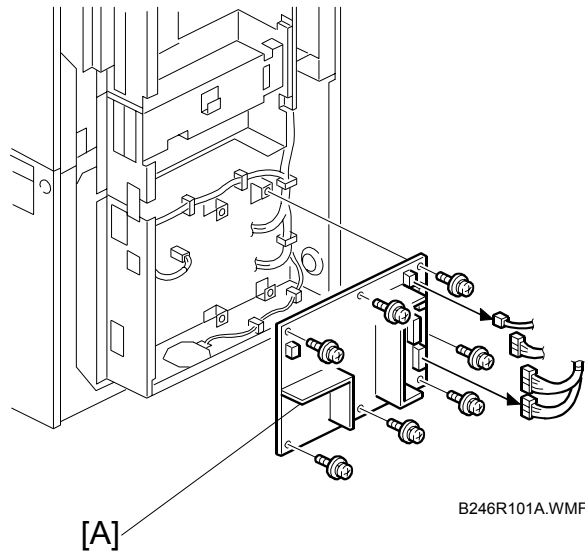

3.12.6 HDD

Replacing the NVRAM or the HDD erases documents stored in the document server. Before replacing either of these items, consult with the customer to determine the best time to perform the replacement.

B064 Series HDD

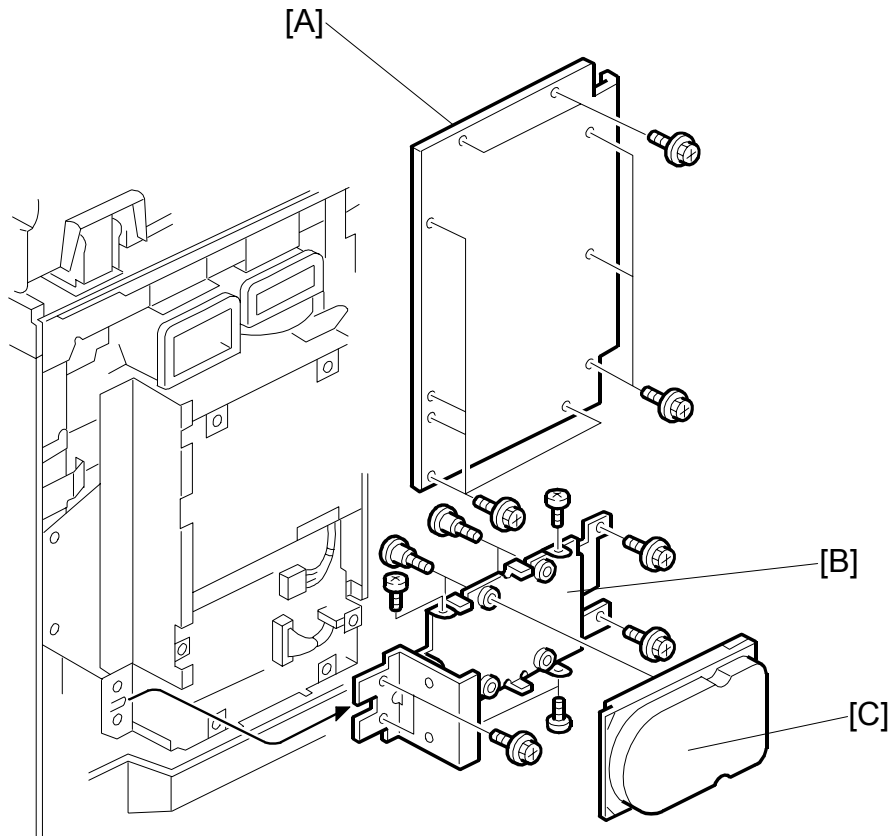

B246R863.WMF

Rear upper cover (☛ 3.3.5)


[A]: Controller cover (☛ x 10)

[B]: HDD bracket (☛ x 8, ☛ x 4)


[C]: HDD (☛ x 8)

- Format the HDD with SP5832 001. Formatting is not necessary but is strongly recommended.
- Download the stamp data with SP5853.

Replacement
Adjustment

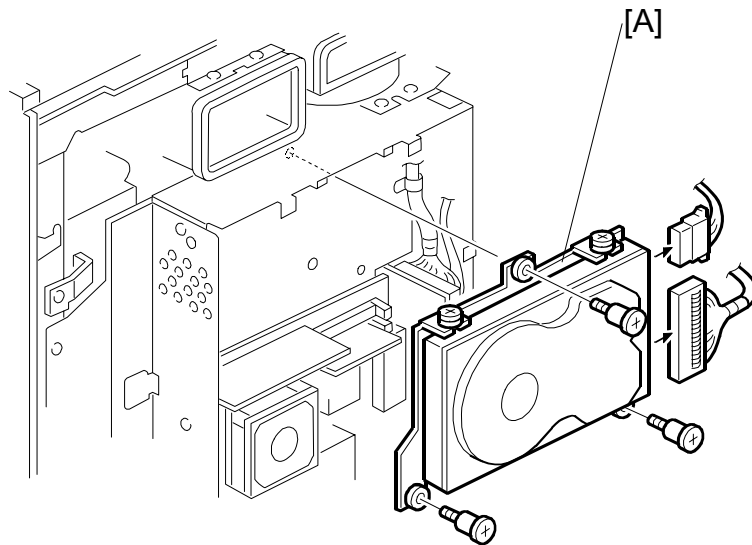B140 Series HDD

B140R701.WMF

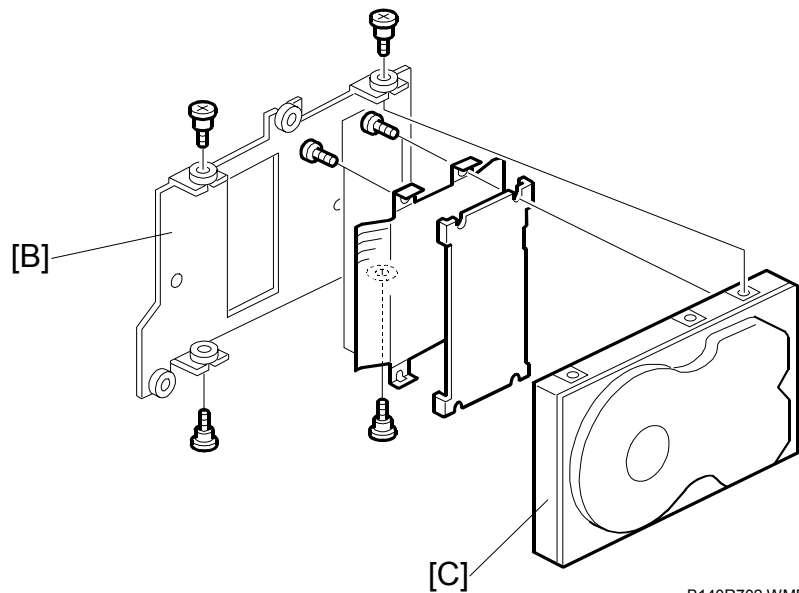

B140R702.WMF

Rear covers (☛ 3.3.5)

Controller box cover (☛ x 12)

[A]: HDD assembly (☛ x 3, ☛ x 2)

[B]: HDD bracket (☛ x 4)

[C]: HDD (☛ x 4)

- Format the HDD with SP5832 001. Formatting is not necessary but is strongly recommended.
- Download the stamp data with SP5853.

B246 Series HDD

- Disconnect ADF cable


Remove:

- Rear upper cover (⚙ x2) (🔩3.3.5)
- Rear lower cover (⚙ x2) (🔩3.3.5)
- Controller box cover (⚙ x13)

[A] HDD unit (⚙ x2, 📁 x2)

[B] HDD (⚙ x4)

- Format the HDD with SP5832 001.
Formatting is not necessary but is strongly recommended.
- Download the stamp data with SP5853.
Switch off/on after uploading stamp data.
- **The browser unit must be installed again after you install a new hard disk.**

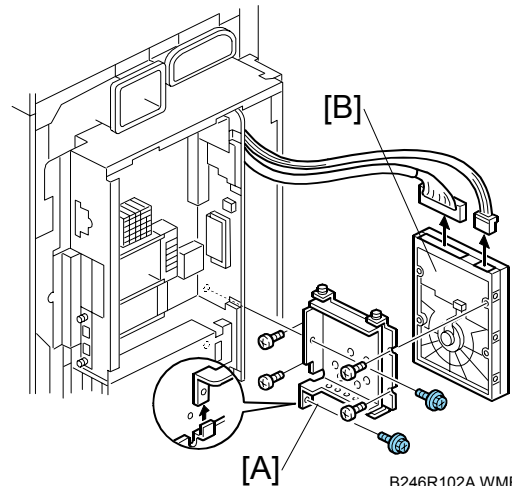

Replacement
Adjustment

Disposal of HDD Units

Never remove an HDD unit from the work site without the consent of the client.

If the customer has any concerns about the security of any information on the HDD, the HDD must remain with the customer for disposal or safe keeping.

The HDD may contain proprietary or classified (Confidential, Secret) information.

Specifically, the HDD contains document server documents and data stored in temporary files created automatically during copy job sorting and jam recovery.

Such data is stored on the HDD in a special format so it cannot normally be read but can be recovered with illegal methods.

Reinstallation

Explain to the customer that the following information stored on the HDD is lost when the HDD is replaced:

- Document server documents
- Custom-made stamps
- Document server address book

The address book and document server documents (if needed) must be input again.

If the customer is using the Data Overwrite Security feature, the DOS function must be set up again. For more, see Section "1. Installation".


The browser unit must also be installed again.

3.12.7 NVRAM

This machine has an electronic counting device that uses software to monitor the number of copies. In addition to the electronic counter of the NVRAM on the controller board, the machine is also equipped with a mechanical counter.


NVRAM: B064 Series, B140 Series

B064 Series

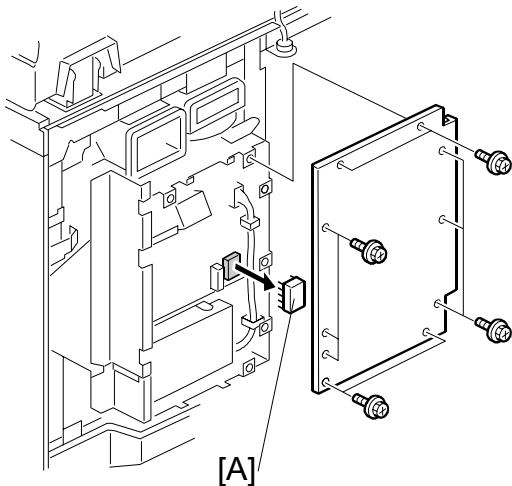



B140R864.WMF

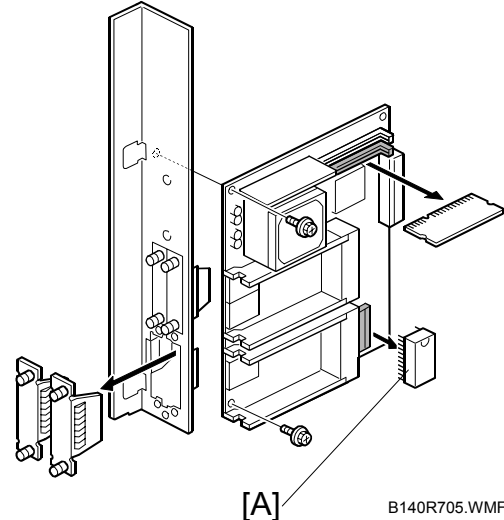B140 Series



B140R705.WMF

1. Enter the SP mode and print the SMC report.
 - Press Clear Modes 
 - On the operation panel keypad, press ①⑦⑦.
 - Hold down Clear/Stop  for more than 3 seconds.
 - Press "Copy SP" on the touch-panel.
2. Execute SP5990-001 (All SP Groups) to print an SMC report.
3. Insert the IC card or SD card.

If the machine is a B064 Series machine, remove the slot cover and connect the flash memory card to the controller board.

-or-



If the machine is a B140 Series machine, put the SD card in Slot C3.
4. Execute SP5824 (NVRAM Data Upload) to upload the data to the flash memory card or SD card.
5. Switch the machine off and disconnect the power cord.
6. Remove the NVRAM [A].
 - Touch a metal surface to discharge any static build up on your hands or tools before you touch the controller board.
 - Work carefully when removing the NVRAM to avoid damaging other components on the controller board or short circuiting the pins of other chips.

7. Install the new NVRAM. Make sure that the NVRAM is installed the correct way around.
8. Connect the power cord and switch the machine on.
9. Enter the SP mode and execute SP5801 (Memory All Clear)
10. Execute SP5825 (NVRAM Download) to download the data uploaded from the old NVRAM.
11. Switch the machine off then on.
12. Execute SP5990 to print another SMC report. Confirm that all the SP settings have been initialized.
13. Execute SP3001-002 (ID Sensor Initialization) to initialize the ID sensor.
14. Execute SP5907 (Plug & Play) and enter the brand and model name of the machine for Windows Plug & Play capability.
15. Also set SP 1902 001 (amount of fusing unit web used so far) to the most recent setting.
16. For details about SP initial settings, see "Section 5 Service Tables".

Important

- When you change the NVRAM, you lose all machine settings, and all data on the hard disk.
- If you have a back-up of the NVRAM settings on an SD card from a previous time, then you lose a) the files that were stored on the hard disk after you made the backup, and b) changes to settings that were made after you made the backup.
- In this condition, customers who are very worried about security must use the Data Overwrite Security unit to clean the hard disk (use the Erase All Memory function). This is because the files on the hard disk that you lost are still there.

NVRAM: B246 Series**Before Removing the NVRAM**

1. Enter the SP mode and print the SMC report.
 - Press Clear Modes 
 - On the operation panel keypad, press ①⑦⑦.
 - Hold down Clear/Stop  for more than 3 seconds.
 - Press “Copy SP” on the touch-panel.
2. Execute SP5990-001 (All SP Groups) to print an SMC report.
3. Insert the SD card in Slot **C3**.
4. Execute SP5824 (NVRAM Data Upload) to upload the data to the SD card.
5. Switch the machine off and disconnect the power cord.

Removing the NVRAM**Important**

- Touch a metal surface to discharge any static build up on your hands or tools before you touch the controller board.
- Work carefully when removing the NVRAM to avoid damaging other components on the controller board or short circuiting the pins of other chips.
- Disconnect ADF cable

Remove:


- Rear upper cover (⚙ x2) (➡3.3.5)
- Rear lower cover (⚙ x2) (➡3.3.5)
- Controller box cover

Remove:

[A] Controller box cover (⚙ x13)

[B] NVRAM

- Push in the sides of the NVRAM unit to release the tabs and pull straight out.
- Install the new NVRAM

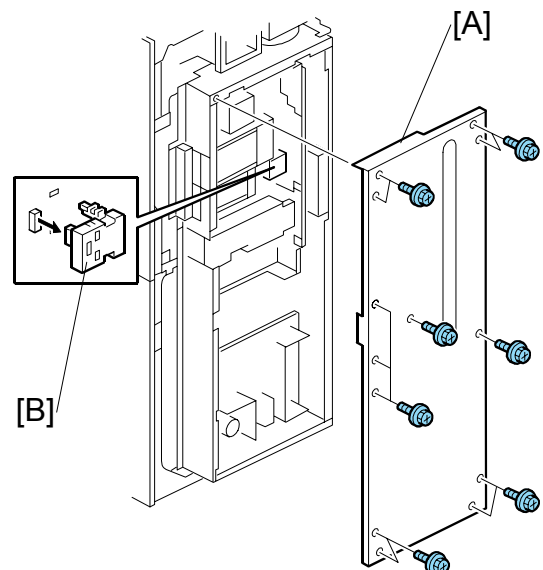

B246R110A.WMF

After Installing the New NVRAM


1. Connect the power cord and switch the machine on.
2. Enter the SP mode and execute SP5801 (Memory All Clear)
3. Execute SP5825 (NVRAM Download) to download the data uploaded onto the SD card in SD card slot **C3**.
4. Switch the machine off and on.
5. Execute SP5990 to print another SMC report. Confirm that all the SP settings have been initialized.
6. Execute SP3001-002 (ID Sensor Initialization) to initialize the ID sensor.
7. Execute SP5907 (Plug & Play) and enter the brand and model name of the machine for Windows Plug & Play capability.
8. Also set SP 1902 001 (amount of fusing unit web used so far) to the most recent setting (see the SMC list).
9. For details about SP initial settings, see "Section 5 Service Tables".

3.12.8 DIMMS

Read this section carefully before installation so you know how to insert the DIMMs correctly.

⚠ CAUTION

Follow the procedure below to connect the DIMMs to the controller board. Incorrect insertion can damage the controller board or cause a bad connection between the DIMM and controller contacts. If the upper contact is pressed in and bent, the resulting poor connection could cause the entire system to not operate.

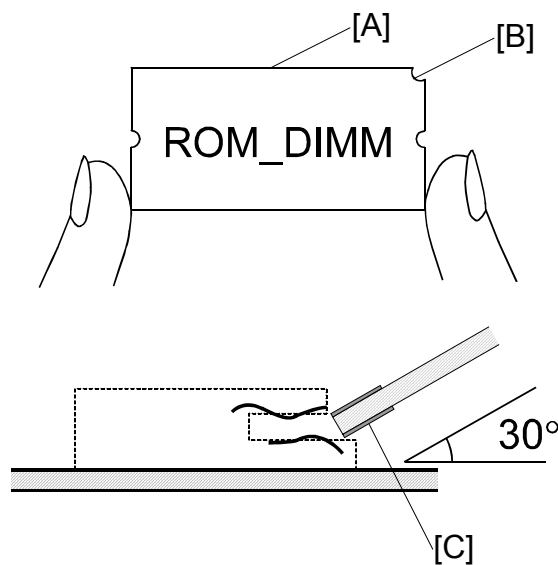


B140R865.WMF

1. Hold the ROM DIMM with the edge connector [A] pointing toward the slot and the notch [B] on the DIMM in the upper right corner.
2. Insert the edge connector [C] into the slot at a 30-degree angle from the surface of the board.
NOTE: If the angle is too low, the upper contact could bend.
3. Move the outside edge of the ROM DIMM up and down slightly until it works into the connector, then gently press it down level with the controller board.

Replacement
Adjustment

3.13 ADF

3.13.1 ADF COVERS

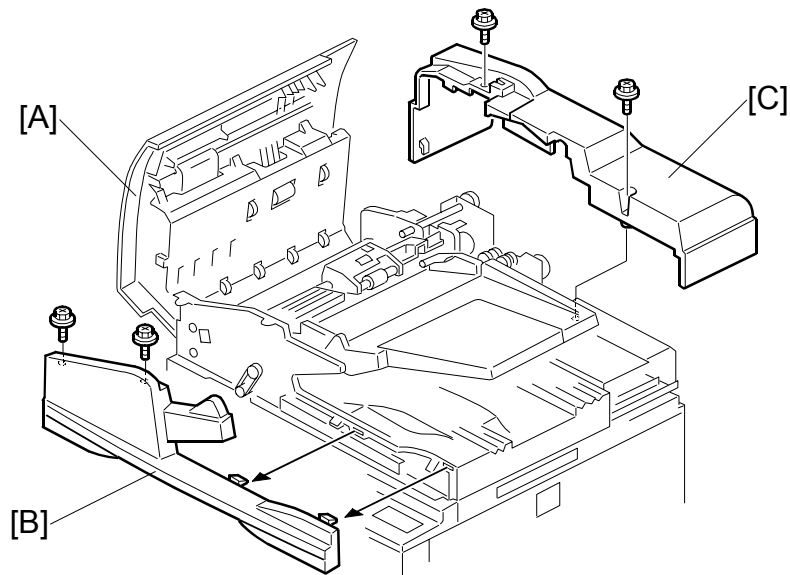

B140R866.WMF

Open the feed cover [A] (⚙ x 1, ⚙ x 2, ground wire x 1).


[B]: Front cover (⚙ x 2)

- Press down on the tabs to remove.

[C]: Rear cover (⚙ x 2)

- Press down on the tabs to remove.

3.13.2 FEED UNIT

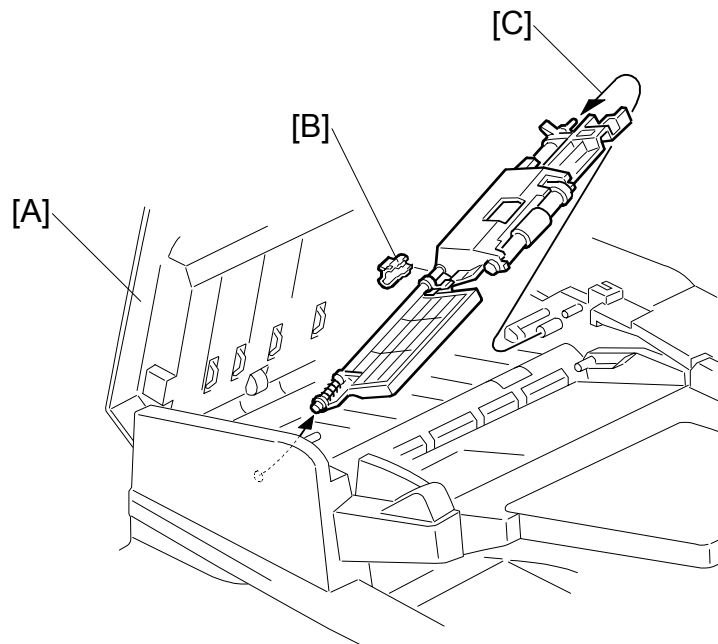


B140R867.WMF

1. Open the feed cover [A].
2. Remove the snap fitting [B].
3. Push the feed unit slowly to the left to disengage the shaft [C] on the right, then lift it out.

Replacement
Adjustment

3.13.3 FEED BELT AND PICK-UP ROLLER

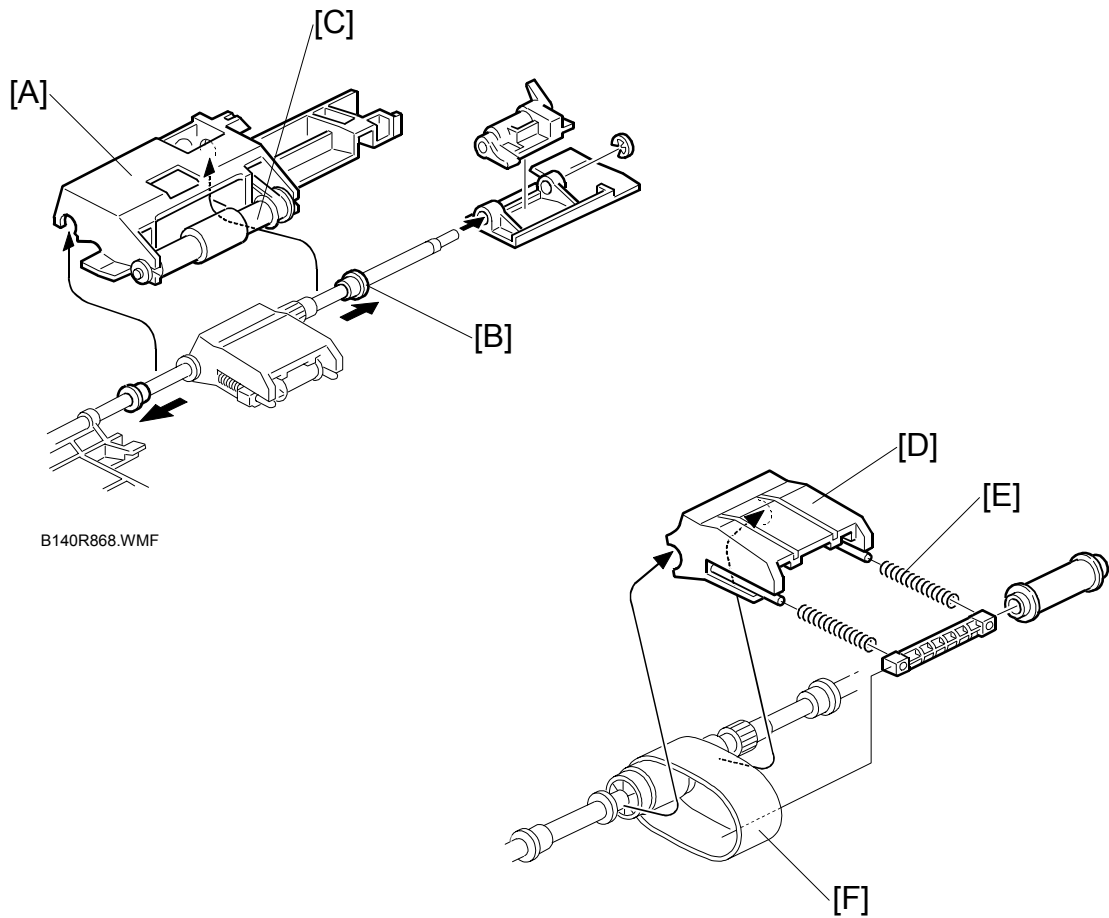


1. Remove the feed unit (☞ 3.13.2).
2. Remove the pick-up roller unit [A].
3. Remove the bushings [B].
4. Remove the pick-up roller [C].

NOTE: At re-assembly, make sure that the tab on the front guide plate is above the pick-up roller.

5. Hold the feed belt holder [D] by the left and right sides, then carefully pull it off the bushing. Do not let the springs [E] fall.
6. Remove the feed belt [F].

NOTE: When re-assembling, set the pick-up roller springs first, then follow this procedure in reverse.

3.13.4 SEPARATION ROLLER

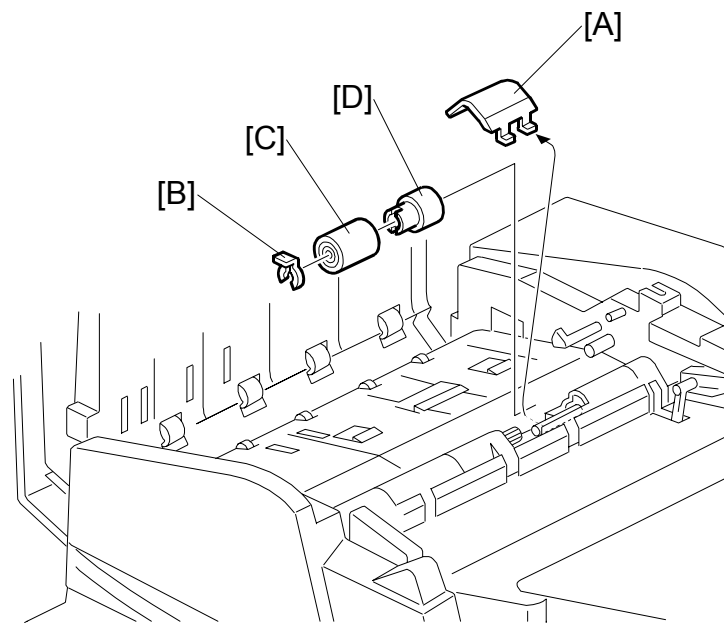

B140R870.WMF

**Replacement
Adjustment**

Open the feed cover.

Feed unit (➡ 3.13.2)

[A]: Separation roller cover


- Use the tip of a screwdriver to push up the cover.

[B]: C-Clamp (🔧 x 1)


[C]: Separation roller

[D]: Torque limiter clutch

3.13.5 REGISTRATION SENSOR

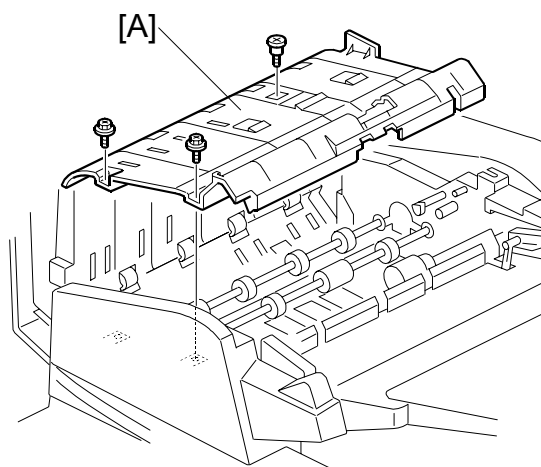

B140R872.WMF

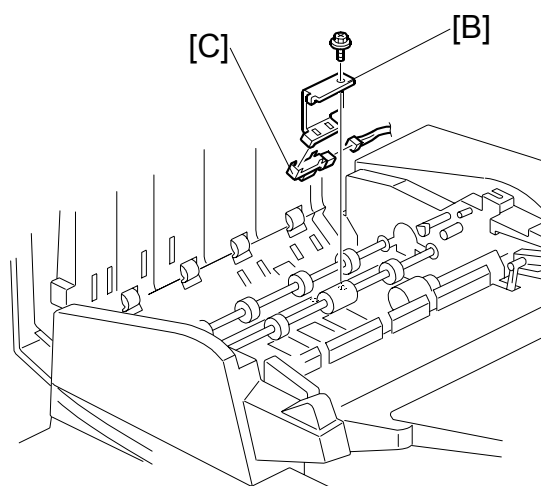

B140R871.WMF

Open the feed cover.


Feed unit (🔴 3.13.2)

[A]: Guide plate (🔩 x 3)

[B]: Registration sensor bracket (🔩 x 1)

[C]: Registration sensor (🔩 x 1)

3.13.6 ADF CONTROL BOARD

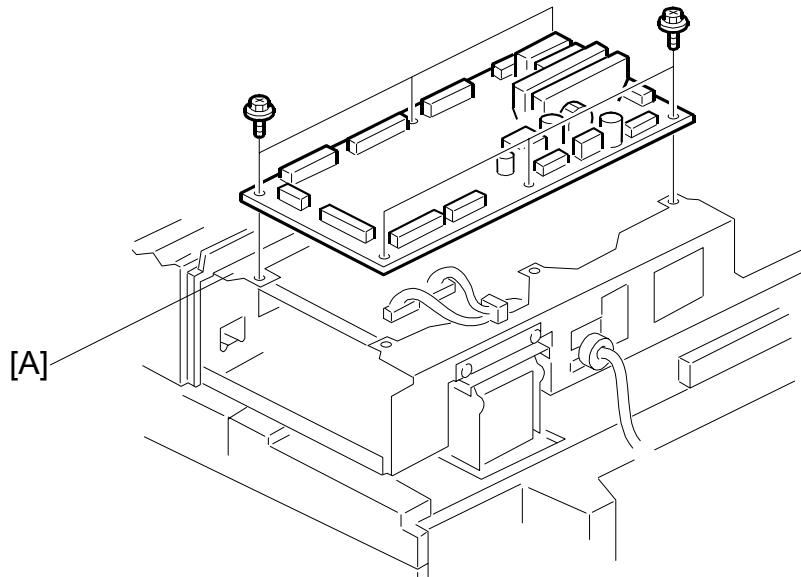


B140R873.WMF

ADF rear cover (➡ 3.13.1)

[A]: ADF board (⚙️ x 2, 📡 x 14)

Replacement
Adjustment

3.13.7 ORIGINAL WIDTH, INTERVAL, AND SKEW CORRECTION SENSORS

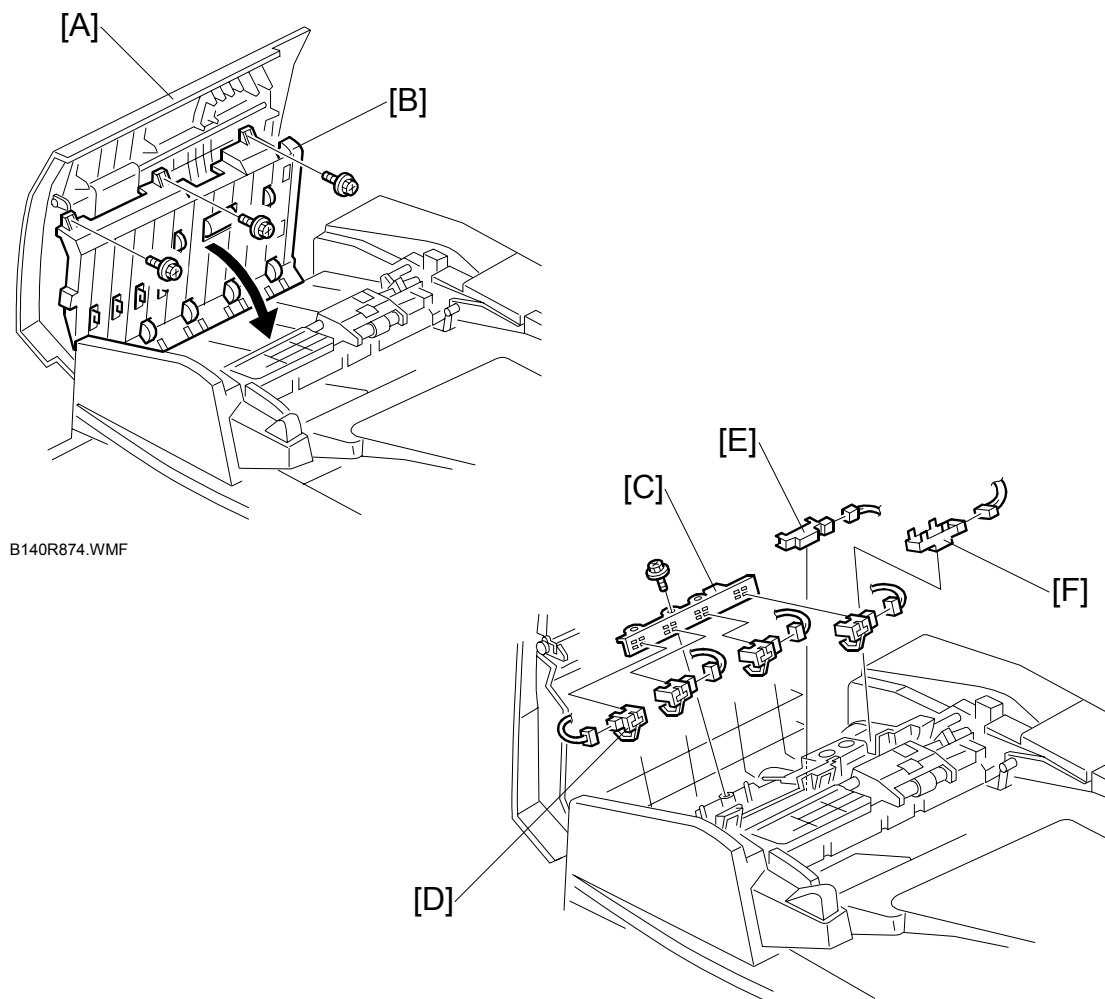


B140R874.WMF

B140R875.WMF

- [A]: Open the feed cover.
- [B]: Guide plate (🔩 x 3)
- [C]: Width sensor guide plate (🔩 x 1)
- [D]: Original width sensors (x 4)
- [E]: Interval sensor (🔩 x 1)
- [F]: Skew correction sensor (🔩 x 1)

3.13.8 ORIGINAL LENGTH SENSORS

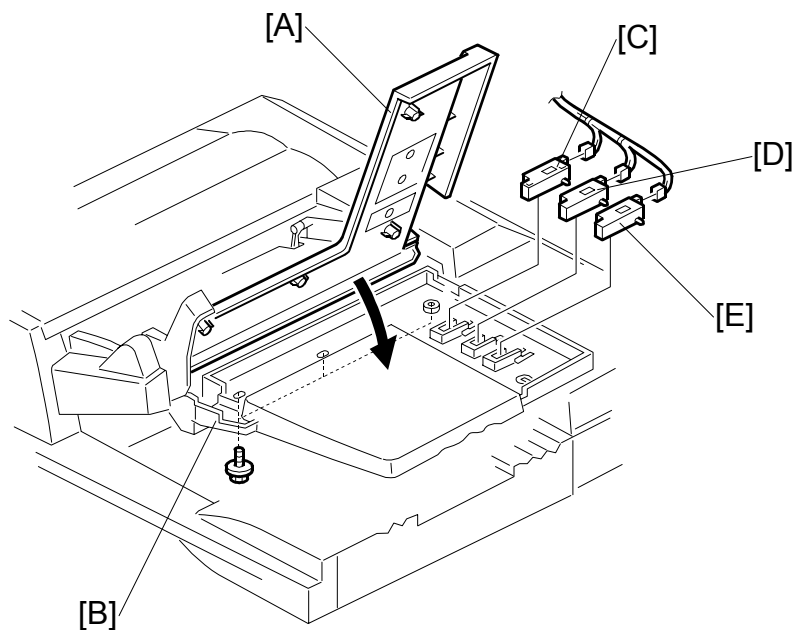


B140R876.VMF

- [A]: Open the original tray.
- [B]: Lower cover (⌀ x 4)
- [C]: Original length sensor 1 – B5 (⌀ x 1)
- [D]: Original length sensor 2 – A4 (⌀ x 1)
- [E]: Original length sensor 3 – LG (⌀ x 1)

Replacement
Adjustment

3.13.9 DF POSITION AND APS SENSOR

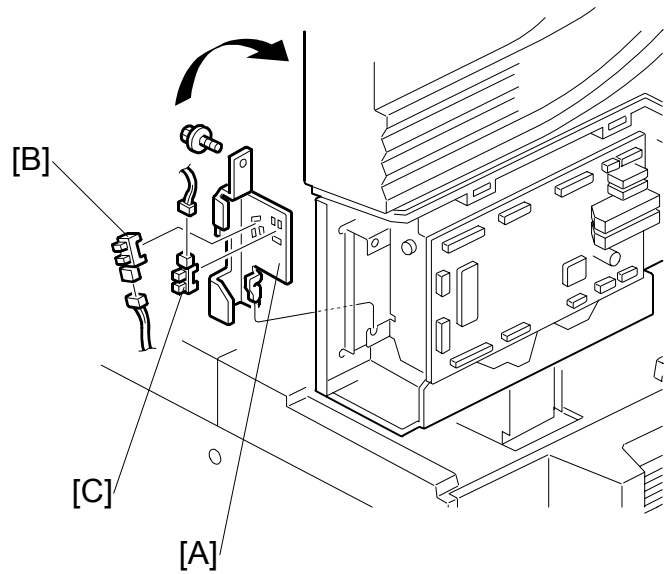

B140R877.WMF

Open the ADF.


ADF rear cover. (☛ 3.13.1)

[A]: Bracket (🔩 x 1)

[B]: ADF position sensor (🔌 x 1)

[C]: APS sensor (🔌 x 1)

3.13.10 OTHER ADF SENSORS

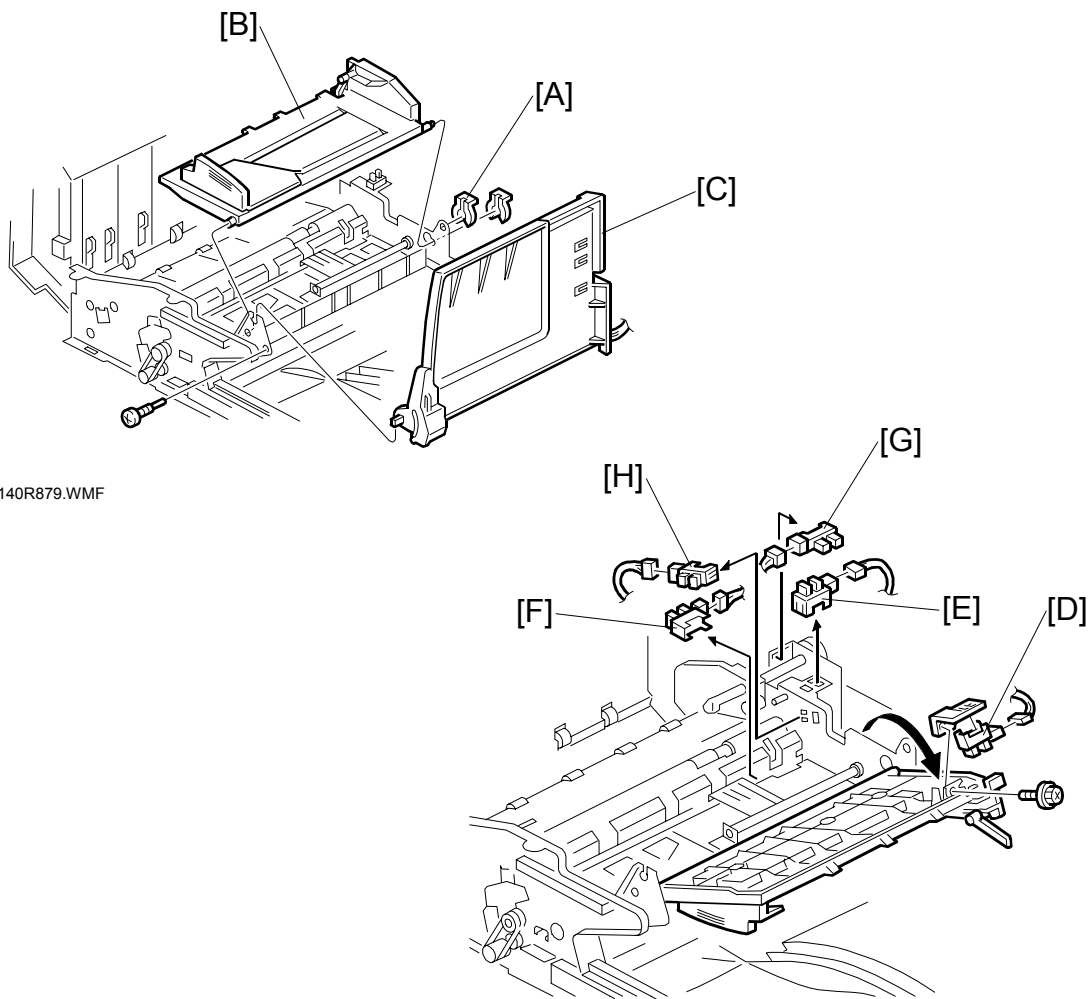

B140R879.WMF

B140R878.WMF

Replacement
Adjustment

Open the feed cover.

Front/rear covers (🔩 x 4) (🔧 3.13.1)

[A]: C-Clamps (🔧 x 2)

[B]: Original tray (🔧 x 1)

[C]: Bottom plate (🔧 x 1)

[D]: Original set sensor (🔧 x 1)


[E]: Feed cover sensor (🔧 x 1)

[F]: Bottom plate HP sensor (🔧 x 1)

[G]: Pick-up roller HP sensor (🔧 x 1)

[H]: Bottom plate position sensor (🔧 x 1)

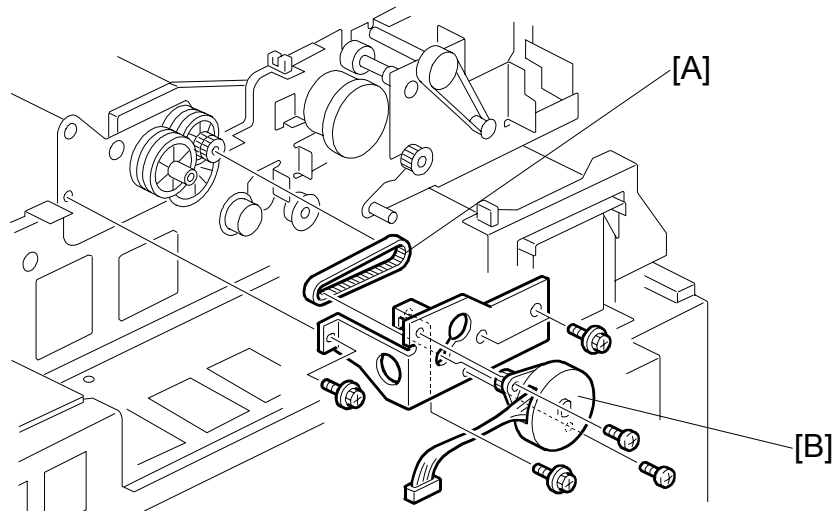

3.13.11 BOTTOM PLATE LIFT MOTOR



B140R880.WMF


Open the feed cover.

Rear cover (☛ 3.13.1)

[A]: Bottom plate lift motor bracket (harness x 1,  x 1,  x 2, timing belt x 1)


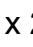
[B]: Bottom plate lift motor ( x 2)


3.13.12 FEED MOTOR

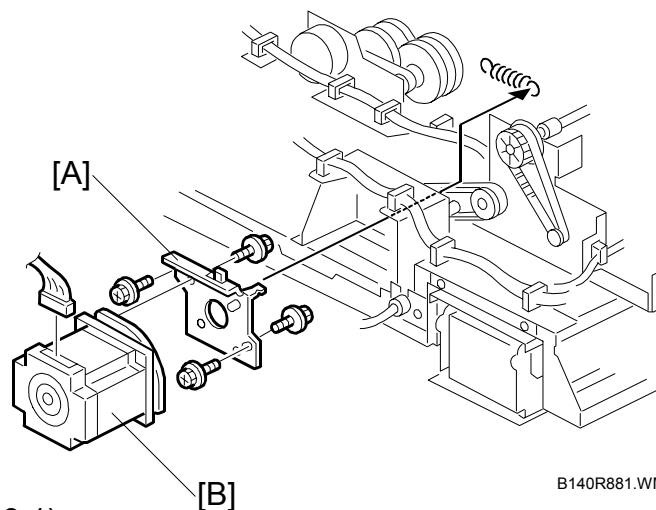


B140R881.WMF

Rear cover (☛ 3.13.1)

[A]: Feed motor bracket ( x 2,  x 1, spring x 1, belt x 1)

[B]: Feed motor ( x 2)

3.13.13 EXIT MOTOR AND TRANSPORT MOTOR

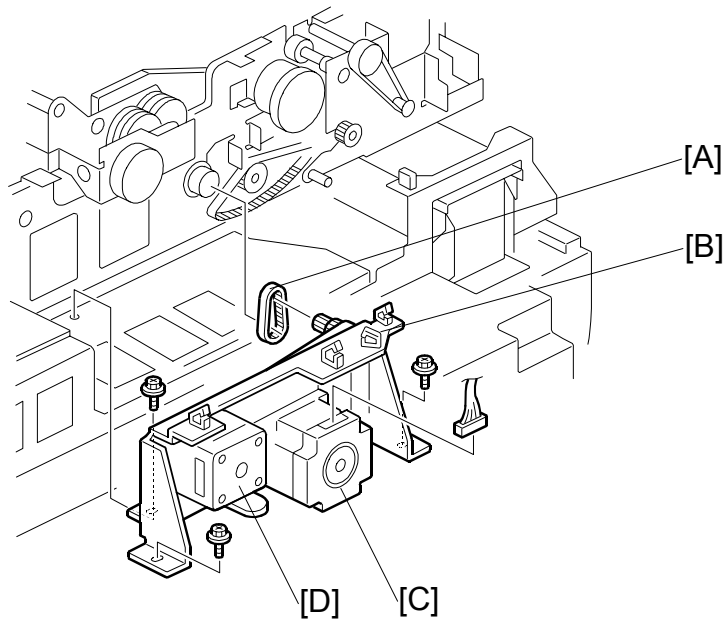

B140R882.WMF

Open the feed cover.

ADF rear cover (☛ 3.13.1)

Bottom plate lift motor (☛ 3.13.11)

[A]: Timing belt


[B]: Exit/transport motor unit (⚙ x 3, ⚙ x 2)

[C]: Transport motor (⚙ x 2)

[D]: Exit motor (⚙ x 2)

Replacement
Adjustment

3.13.14 PICK-UP ROLLER MOTOR AND HP SENSOR

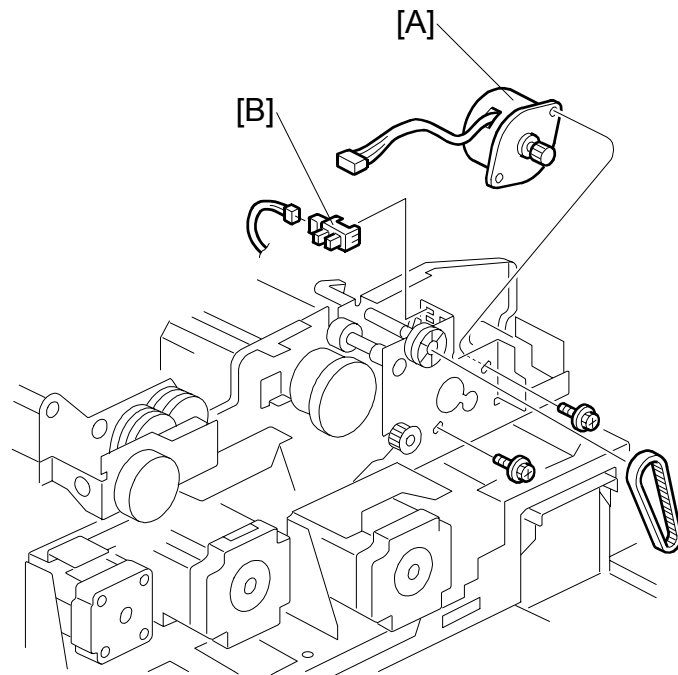

B140R883.WMF


Open the feed cover.

ADF rear cover (➡ 3.13.1)

[A]: Pick-up roller lift motor (🔧 x 2, 📡 x 1)

[B]: Pick-up roller HP sensor (📡 x 1)

3.13.15 CIS POWER SUPPLY BOARD AND CIS UNIT

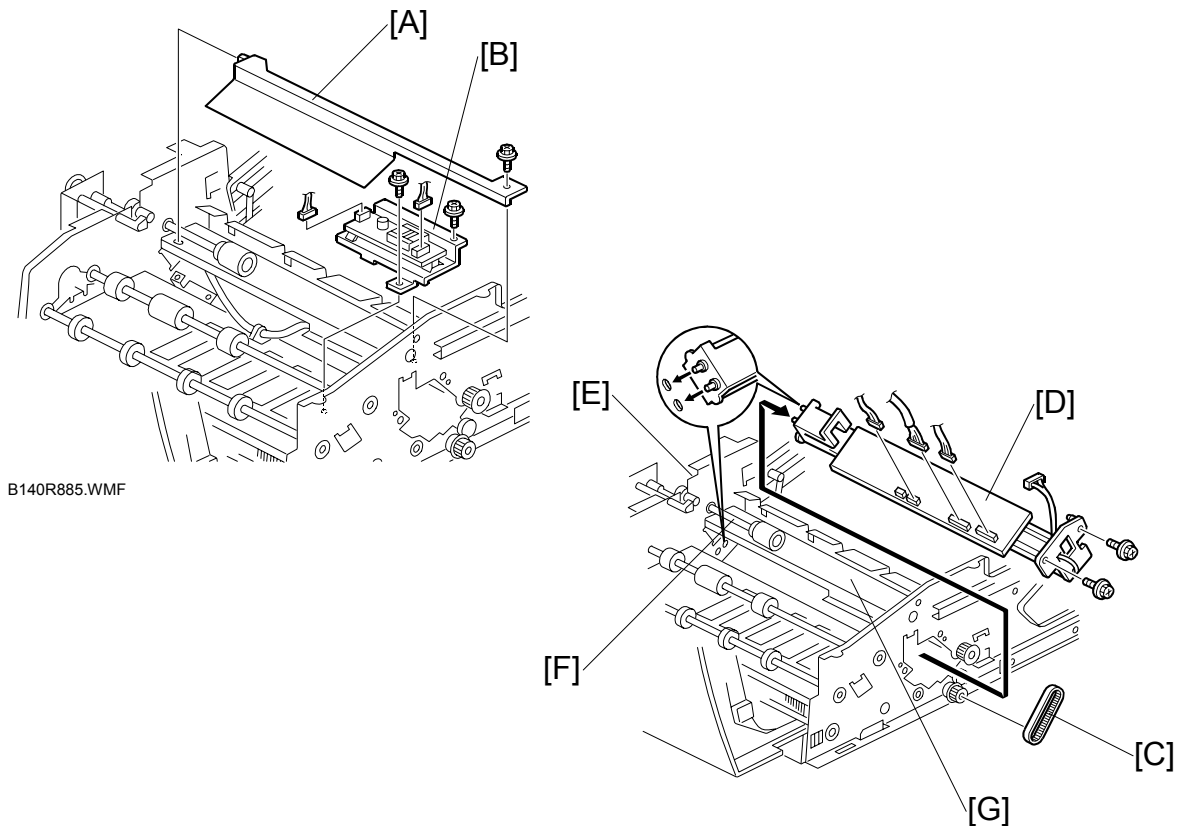

Replacement
Adjustment

⚠ WARNING

Turn off the main power switch and unplug the machine before performing this procedure.

Open the feed cover.

Feed unit (➡ 3.13.2)

Guide plate (➡ 3.13.5)

NOTE: To avoid an accidental static discharge which could damage the circuits of the CIS power supply board, touch a metal surface before touching the board.

[A]: Guide plate mylar (🔩 x 1)

[B]: CIS power supply board (🔩 x 2, 📏 x 2)


[C]: Timing belt

[D]: CIS unit (🔩 x 2, 📏 x 3)

- Remove the CIS unit carefully to avoid scratching the glass.

NOTE: If you experience difficulty re-installing the CIS unit, you can remove the two drive gears [E] (⚙ x 1), the separation roller shaft [F] (⚙ x 2), and cross-stay [G] (🔩 x 4).

3.13.16 ADF EXIT SENSOR

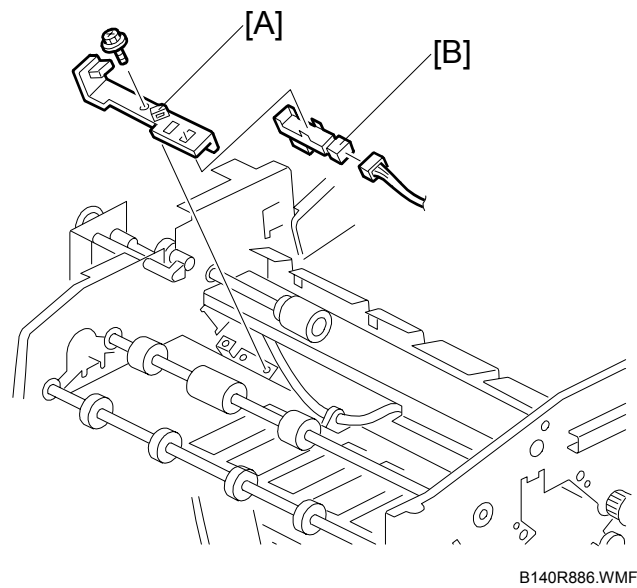

CIS Power Supply Board (➡3.13.15)

[A]: Exit sensor bracket (🔩 x 1)

[B]: Exit sensor (🔌 x 1)

3.14 COPY IMAGE ADJUSTMENTS: PRINTING/SCANNING

These adjustments must be performed after replacing any of the following parts:

- Scanner wires
- Lens block
- Scanner motor
- Polygon motor
- Tandem tray side fences
- Memory All Clear

3.14.1 PRINTING


1. Make sure paper is installed correctly in each paper tray before you start these adjustments.
2. Use the Trimming Area Pattern (SP2-902-3, No. 18 to print the test pattern for the following procedures.
3. After completing these printing adjustments, be sure to set SP 2-902-3 to 0 again.

Replacement
Adjustment

Registration - Leading Edge/Side-to-Side

1. Check the leading edge registration, and adjust it using SP1-001.
Specification: $3 \pm 2\text{mm}$.
2. Check side-to-side registration for each paper feed station, and adjust with the following SP modes.

	SP mode	Specification
Tray 1 (Tandem Tray)	SP1002-001	0 ± 1.5
Tray 2 (Universal Tray)	SP1002-002	
Tray 3 (Universal Tray)	SP1002-003	
Tray 4	SP1002-004	Japan Only
By-pass Tray	SP1002-005	0 ± 1.5
LCT	SP1002-006	0 ± 1.5
Duplex Tray	SP1002-007	0 ± 1.5

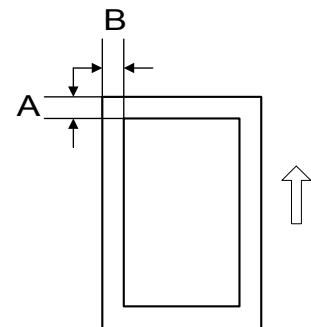

B140R887.WMF

Blank Margin


NOTE: If the leading edge/side-to-side registration cannot be adjusted within specifications, adjust the leading/left side edge blank margin.

1. Check the trailing edge and right edge blank margins, and adjust them with the following SP modes.

SP2101 Print Erase Margin

	SP mode	Specification
Leading Edge	SP2101-001	2.5±2 mm
Trailing Edge	SP2101-002	
Left edge	SP2101-003	2±1.5 mm
Right edge	SP2101-004	

A: Trailing edge blank margin
 B: Right edge blank margin
 C: Leading edge blank margin
 D: Left edge blank margin

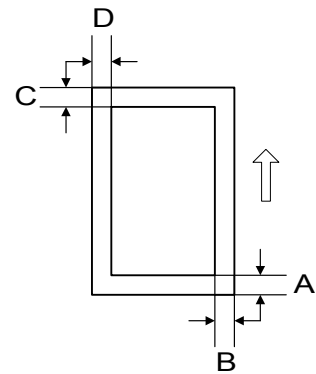

B140R888.WMF

Registration Buckle Adjustment

When the customer is using special paper, buckle adjustment may be required if paper feed problems arise.

- If the buckle is too *large*, this can cause wrinkling, creasing, or Z-fold jams caused by sheets overtaking the sheets ahead of them in the paper path.
- If the buckle is too *small*, this can cause jams at the registration roller or skew during paper feed.

1. Enter the SP mode.
2. Open SP1003.
 - To prevent wrinkling, creasing, or Z-fold jams, set a *smaller* value.
 - To prevent jams at the registration roller or to eliminate skew, set a *larger* value.

SP1003-001	Registration Buckle Adjustment – Tray, LCT
SP1003-002	Registration Buckle Adjustment – Duplex Tray
SP1003-003	Registration Buckle Adjustment – By-pass Tray

Adjustment range	-9 mm ~ +9 mm (small ~ large buckle)
Initial value	0 mm (Buckle = 10 mm)

3.14.2 SCANNING


Before doing the following scanner adjustments, perform or check the printing registration/side-to-side adjustment and the blank margin adjustment.

NOTE: Use an S-5-S test chart to perform the following adjustments.

Registration: Platen Mode

1. Place the test chart on the exposure glass and make a copy from one of the feed stations.
2. Check the leading edge and side-to-side registration, and adjust them with the following SP modes if necessary.

A: Leading Edge Registration
B: Side-to-side Registration

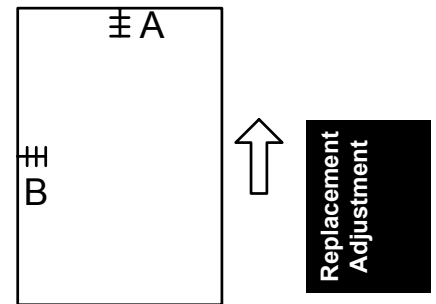

B140R889.WMF


SP No.	Name	Initial	Comment
SP4010	Scanner Leading Edge Registration	0	A positive value shifts the image away from the leading edge, a negative value shifts it toward the leading edge.
SP4011	Scanner Side-to-Side Registration	0	A positive value shifts the image toward the right edge, a negative value shifts it toward the left edge.

Magnification

Use an S-5-S test chart to perform the following adjustment.

Main Scan Magnification

1. Place the test chart on the exposure glass and make a copy from one of the feed stations.
2. Check magnification, and then SP2909-001 (Main Scan Magnification - Copy) to adjust magnification if required. Specification: $\pm 2\%$.

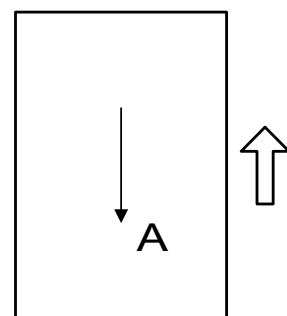

B140R890.WMF

Sub Scan Magnification

1. Place the test chart on the exposure glass and make a copy from one of the feed stations.
2. Check the magnification ratio. Use SP4008 (Scanner Sub Scan Magnification) to adjust if necessary. Specification: $\pm 0.9\%$.

A: Main scan magnification

3.14.3 ADF SCANNING ADJUSTMENTS

Vertical Black Lines

Vertical black lines in scanned images may be caused by dust or scratches on the ADF exposure glass. If the problem cannot be solved by cleaning the ADF exposure glass, execute SP4018 (Scanner Optical Axis Adjustment).


1. Adjust the scanner stopping position with SP4018-003 (just input a new value).
2. Store this value in the machine with SP4018-004.
3. Adjust the ADF registration for the front side scan with SP6006-003.
4. Make a test copy to check that the problem has been solved.

DIP Switch Settings (ADF Main Board)

SW 101				Operation Mode
1	2	3	4	
OFF	OFF	OFF	OFF	I/F Operation
ON	OFF	OFF	OFF	Free run (Simplex: each sheet stopped for registration)
OFF	ON	OFF	OFF	Free run (Simplex: continuous scanning)
ON	ON	OFF	OFF	Free run (Duplex: no registration) SP6009 (ADF Free Run)
ON	OFF	ON	OFF	Not used.
OFF	ON	ON	OFF	
ON	ON	ON	OFF	
OFF	OFF	OFF	ON	Free run (Entrance mode ^{*1} , simplex, no registration)
ON	OFF	OFF	ON	
OFF	ON	OFF	ON	
OFF	ON	ON	ON	Free run (Entrance mode, simplex, continuous scanning)
OFF	ON	ON	ON	Motor test (feed, transport, exit motors)

^{*1}: The entrance mode disregards paper size. Skew correction is performed at the scanning roller.

ADF Skew Correction

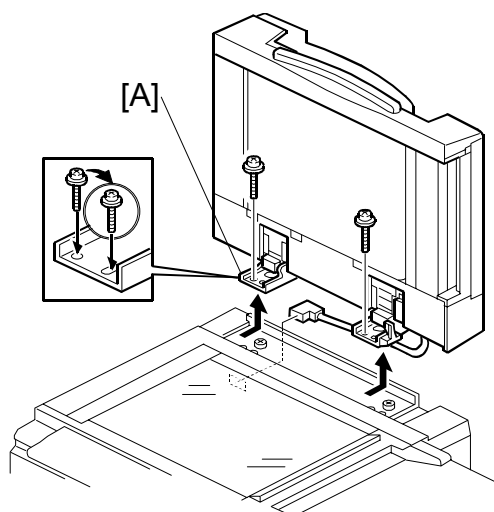

B140R891.WMF

If the skew with A4 SEF paper is more than 0.5/200 mm in the main scan direction, you can adjust the position of the ADF hinge [A] or adjust the appropriate SP codes below.

6006*	ADF Registration Adjustment
001	ADF Horizontal Registration (Front)
	Adjusts the side-to-side registration for the front in ADF mode. [-3~+3/0.1 mm]
002	ADF Horizontal Registration (Back)
	Adjusts the side-to-side registration for the back in ADF mode. [-3~+3/0.1 mm]
003	ADF Vertical Registration (Front)
	Adjusts the vertical registration for the front in ADF mode. [-30 ~+24/1 mm] -30 = -5.1 mm +24 = +4.1 mm
004	ADF Vertical Registration (Back)
	Adjusts the vertical registration for the back in ADF mode. [-30 ~+30/1 mm] -30 = -5.1 mm +30 = +5.1 mm
005	ADF Buckle Adjustment 1
	Adjusts the roller timing at the skew correction sensor/entrance roller. A larger setting causes more buckling. [-12.0~+12/1 mm] -12 = -3.0 mm +12 = +3.0 mm
006	ADF Buckle Adjustment 2
	Adjusts the roller timing at the interval sensor/scanning roller. A larger setting causes more buckling. [-8.0~+8/1 mm] -8 = -2 mm +8 = +2 mm
007	ADF Trailing Edge Erase Margin (Front)
	These settings adjust the erase margin for the trailing edges for the front. [-20~+20/1 mm] -20 = -10 mm +20 = +10 mm
008	ADF Trailing Edge Erase Margin (Back)
	These settings adjust the erase margin for the trailing edges for the back. [-20~+20/1 mm] -20 = -10 mm +20 = +10 mm



Replacement
Adjustment


NOTE: Normally, the interval sensor detects the leading edge of small originals (B6, A5, HLT), or originals for duplex copying, and delays the start of the scanning roller for the prescribed number of pulses to buckle the paper and correct skew. This feature can be switched on for all paper sizes with SP6020 (ADF Contact Mode In/Out). However, switching this feature on for all sizes reduces scanning speed slightly.

3.15 TOUCH SCREEN CALIBRATION

After clearing the memory, or if the touch screen detection function is not working correctly, follow this procedure to calibrate the touch screen.


NOTE: Do not attempt to use items [2] to [9] on the Self-Diagnostic Menu. These items are for design use only. To avoid causing an error, do not touch the Reset key while doing this procedure.

1. Press , press ①⑨⑨③, and then press  5 times to open the Self-Diagnostics menu.

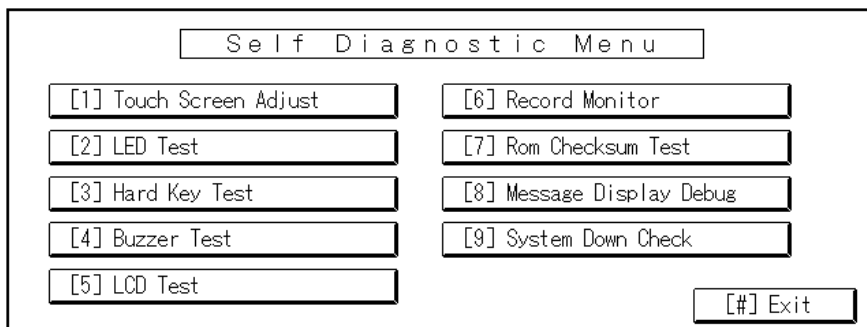




B140R892.WMF

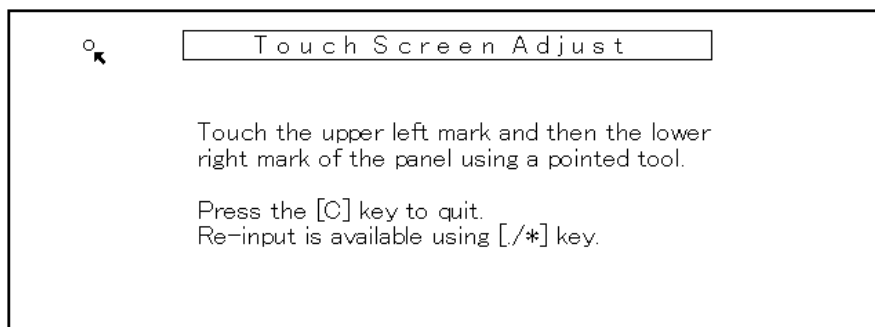2. On the touch screen press "Touch Screen Adjust" (or press ①).



B140R893.WMF

3. Use a pointed (not sharp!) tool to press the upper left mark .
4. Press the lower right mark  after it appears.
5. Touch a few spots on the touch screen to confirm that the marker (+) appears exactly where the screen is touched.
If the + mark does not appear where the screen is touched, press Cancel and repeat from Step 2.
6. When you are finished, press [#] OK on the screen (or press .
7. Touch [#] Exit on the screen to close the Self-Diagnostic menu and save the calibration settings.

4. TROUBLESHOOTING

4.1 OVERVIEW

This section contains the troubleshooting procedures for the B064 Series, B140 Series, and B246 Series machines.

A full list of SC codes is given for each series. When you do troubleshooting on a machine, refer to the correct table:

- B064 Series SC Code Table: **Section 4.2**
- B140/B246 Series SC Code Table: **Section 4.3**

Important:

- The general information in this “Overview” section applies to the B064 Series, B140 Series, and B246 Series machines.
- Other Problems (B064/B140/B246 Series)” also applies to all the machines of these three Series.

4.1.1 RECOVERY METHODS

When an error occurs during downloading, an error code is displayed on the operation panel.

- If the download procedure can be re-started, re-start the download procedure.
- If the download procedure cannot be downloaded for other than the GW controller, replace the board where the downloaded program is stored.
- If the download procedure cannot be downloaded for the GW controller, set DIP SW 1 to ON. Power the machine off and on to start the downloading program. After downloading has completed, set the DIP SW to OFF then power the machine off and on again.

4.1.2 IMPORTANT SP CODES

SP5802	Free Run Mode	Execute this SP to force base engine to run in the free run mode for testing.
SP5803	Input Check	Displays the signals received from sensors and switches. Refer to the detailed tables in Section "5. Service Tables".
SP5804	Output Check	Switches electrical components one by one for testing. Refer to the detailed tables in Section "5. Service Tables".
SP5990	SMC Printout	Prints the SMC Report. Some SC codes (logged SPs) are shown only in the SMC Report and do not show on the operation panel display.
SP7801 (B140/B246)	ROM Version Display.	Displays the version number of the main machine and connected peripherals.
SP7832	Self-Diagnostic Result Display	Execute this SP to display a list of error codes. No errors have occurred if nothing is displayed.
SP7990 (B064)	Firmware Version	Displays the current numbers of all versions of the firmware in the system.
SP7403	SC History	Displays information about the 10 most recent service calls (Code, Total, Date, and Details).

NOTE: For more information about these and other SP codes, see "4. Service Tables".

4.1.3 DOWNLOAD ERROR CODES

	Display	Details	Recovery
01	Reboot after card insert E01 ↑ Module ID Card No. xx/xx	Controller ROM update error 1 When the update break data is stored in NVRAM, the break module information and the decompression module capable of writing do not match.	<ul style="list-style-type: none"> • Use the correct card
02	Download Error E02 Power off/on	Controller ROM update error 2. Error occurs during ROM update program initialization.	<ul style="list-style-type: none"> • Cycle the machine off/on to rewrite
03	Download Error E03 Power off/on	Controller ROM update error 3 The ROM for the write operation does not exist.	<ul style="list-style-type: none"> • Cycle the machine off/on • Install the missing ROM DIMM
04	Download Error E04 Power off/on	Controller ROM update error 4 GZIP data confirmation fails. (CRC value check)	<ul style="list-style-type: none"> • Cycle the machine off/on • Set DIP SW 1 to ON and retry • Replace RAM DIMM • Replace controller board
05	Download Error E05 Power off/on	Controller ROM update error 5 Error occurs when writing to the device.	<ul style="list-style-type: none"> • Cycle the machine off/on • Set DIP SW 1 to ON and retry • Replace RAM DIMM • Replace controller board
06	Download Error E06 Power off/on	Controller ROM update error 6 CPU clock error.	<ul style="list-style-type: none"> • Turn the machine power off/on. • Set controller DIPSW- 1 to ON to force the machine to write to ROM. • If you cannot force the machine to write, replace the controller board.
19	Download Error E19 Power off/on	Controller ROM update error 7 Schedule data is unclear.	<ul style="list-style-type: none"> • Software defective
20	Down Error E20 Power Off/On	System error 1 (+SC991) The physical address cannot be mapped. Software/hardware is defective	<ul style="list-style-type: none"> • Cycle the machine off/on and re-try • Replace controller board
21	Download Error E21 Power Off/On	System error 2 (+SC991) There is not sufficient memory to download.	<ul style="list-style-type: none"> • Cycle the machine off/on and re-try. • Replace RAM • Replace the controller board

Trouble-
shooting

	Display	Details	Recovery
22	Download Error E22 Module ID Card No. xx/xx	System error 3 (+SC991)	<ul style="list-style-type: none"> • Cycle the machine off/on and re-try. • Replace card • Replace controller board
		Data fails to decompress. Card defective.	
	SC991	System error 4	<ul style="list-style-type: none"> • Cycle the machine off/on and re-try • Set DIP SW 1 to ON and re-try • Replace the controller board
		“Selfupdate” does not execute. Software defective.	
23	Download Error E24 Power Off/On	System error 5	<ul style="list-style-type: none"> • Cycle the machine off/on and re-try • Replace the card • Replace the controller board
		Card read/write error. Software or card defective.	
30	No Valid Data E30	Download dysfunction 1	<ul style="list-style-type: none"> • HDD defective • HDD harness disconnected, defective
		Print download is not possible. Cannot download to HDD because HDD not installed or defective.	
31	Reboot After Card Insert E31 Module ID Card No. xx/xx	Download dysfunction 2	<ul style="list-style-type: none"> • Set the correct cards in the correct order
		Download continuity error with more than one card. The second or later card is not compatible.	
32	Reboot After Card Insert E32 Module ID Card No. xx/xx	Download dysfunction 3	<ul style="list-style-type: none"> • Use the correct card • If power failure caused the failure, remove the card and insert another.
		Download interrupted because card is not correct, or power failure interrupted download.	
33	No Valid Data E33	Download dysfunction 4	<ul style="list-style-type: none"> • Use the correct card
		Card version error. Attempted to download program using a card with the wrong version number.	
34	No Valid Data E34	Download dysfunction 5	<ul style="list-style-type: none"> • Use the correct card
		Specification error. DOM card set in EXP machine, or vice versa.	
35	No Valid Data E35	Download dysfunction 6	<ul style="list-style-type: none"> • Use the correct card
		Wrong model. The inserted card is for another model.	
36	No Valid Data E36	Download dysfunction 7	<ul style="list-style-type: none"> • Use the correct card, inserted correctly • Install a ROM DIMM if none is installed
		Module error. The program that you are attempting to download does not exist on the machine, or the contact points at the card and the machine slot are not connected.	
37	No Valid Data E37	Download dysfunction 8	<ul style="list-style-type: none"> • Use an unused card
		Edit option card error. You attempted to employ a used card.	
40	Download Error E40 Module ID Card No. xx/xx	Download result failure 1	<ul style="list-style-type: none"> • Cycle the machine off/on and re-try
		Engine download failure.	
41	Download Error E41 Module ID Card No. xx/xx	Download result failure 2	<ul style="list-style-type: none"> • Cycle the machine off/on and re-try
		Fax download failure.	


	Display	Details	Recovery
42	Download Error E42 Module ID Card No. xx/xx	Download result failure 3 Operation panel or language download failed. For this error, sometimes the message may not be displayed.	• Cycle the machine off/on and re-try
43	Download Error E43 Module ID Card No. xx/xx	Download result failure 4 Print download failed.	• Cycle the machine off/on and re-try
44	Download Error E44 Module ID Card No.	Download result failure 5 The data targeted for the write operation could not be accessed.	• Turn the machine power off/on. • Set controller DIPSW-1 to ON to force the machine to write • If you cannot force the machine to write, replace the controller board.
50	No Valid Data E50	Download invalid The source data for the update could not be authenticated.	• Use the correct SD card.
51	(no display)	Remote ROM update failure 1 The source data for the ROM update is corrupted because the machine is operating and an SC code has been issued.	• Turn the machine power off/on and try again.
52	(no display)	Remote ROM update failure 2 The source data received for the ROM update is corrupted; it failed a SUM check due to its abnormal length.	• Try again with the correct data.
53	(no display)	Download result failure 6 The previous download in progress was cancelled.	• Do the download procedure again.

4.1.4 JAM DETECTION

SENSOR LOCATIONS

The flashing portion of the jam position display on the operation panel indicates the location of the paper jam, then lights if any paper remains after jam removal. However, paper may remain in the paper path at locations other than where the jam was removed.


The illustration below shows the locations of the jam sensors.

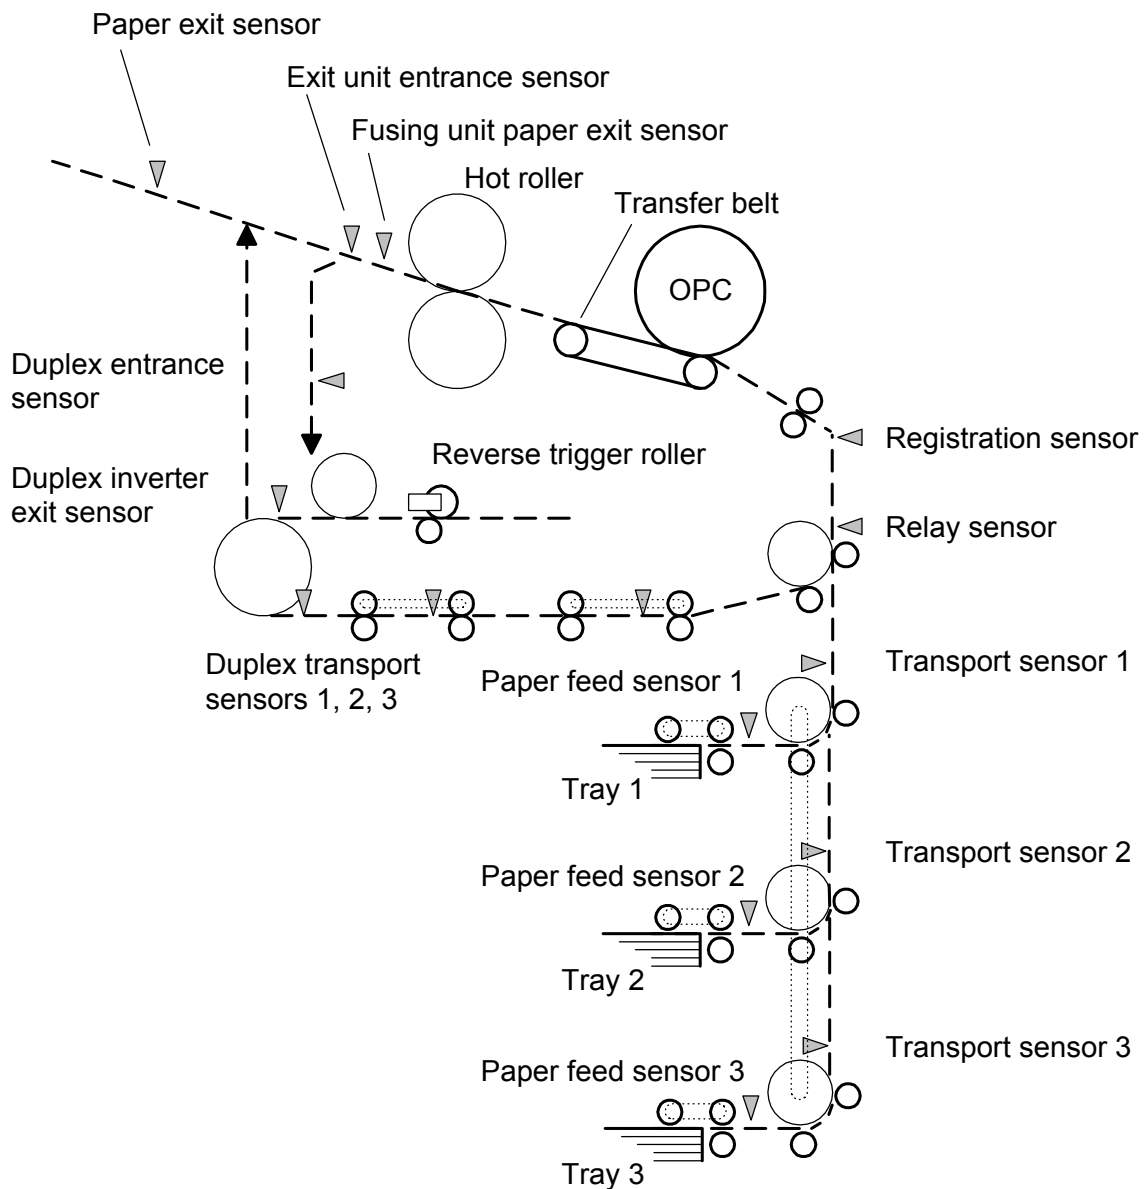

B246T901.WMF

4.1.5 TIMING CHARTS


Feed, Transport, Feed Out: Face-up

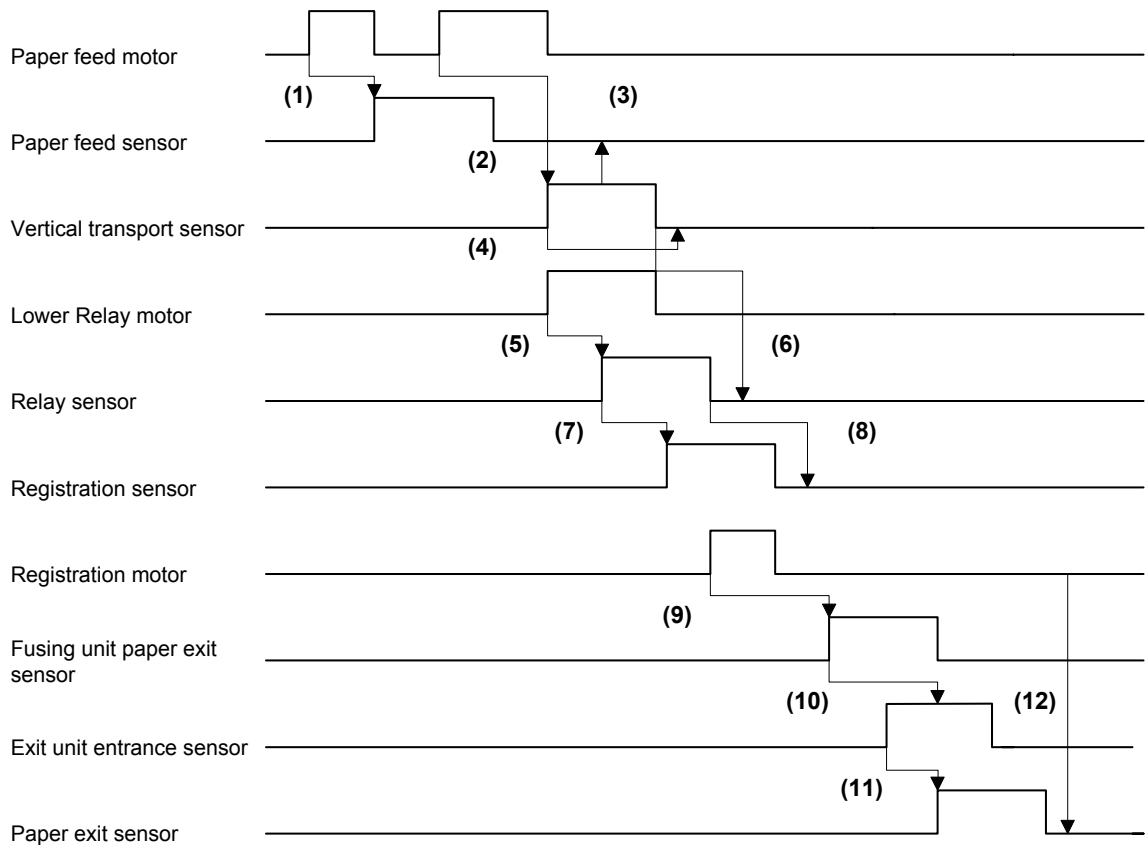

B246T902.WMF


Troubleshooting

- (1): Paper feed motor ON → Paper feed sensor does not switch ON at the correct time.
- (2): Paper feed motor ON → Vertical transport sensor does not switch ON at the correct time.
- (3): Vertical transport sensor ON → Paper feed sensor does not switch OFF at the correct time.
- (4): Vertical transport sensor ON → Vertical transport sensor does not switch OFF at the correct time.
- (5): Lower relay motor ON → Relay sensor does not switch ON at the correct time.
- (6): Vertical transport sensor OFF → Relay sensor does not switch OFF at the correct time.
- (7): Relay sensor ON → Registration sensor does not switch ON at the correct time.
- (8): Relay sensor OFF → Registration sensor does not switch OFF at the correct time.
- (9): Registration motor ON → Fusing unit paper exit sensor does not switch ON at the correct time.
- (10): Fusing unit paper exit sensor ON → Exit unit entrance sensor does not switch ON at the correct time.
- (11): Exit unit entrance sensor ON → Paper exit sensor does not switch ON at the correct time.
- (12): Registration motor OFF → Paper exit sensor does not switch OFF at the correct time.

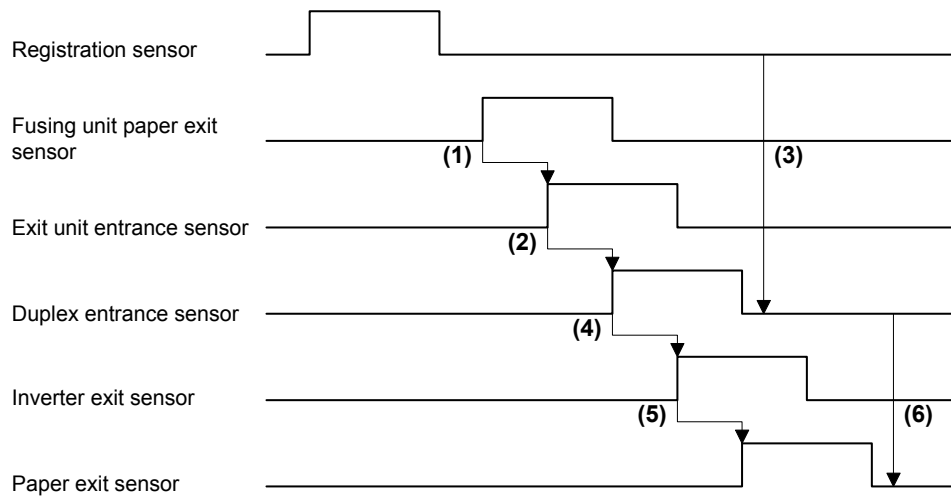Transport, Inverter, Feed Out: Face-down

B246T903.WMF

- (1): From the registration sensor to the fusing unit exit, jam detection is the same as face-up feed out.
- (2): Exit unit entrance sensor ON → Duplex entrance sensor does not switch OFF at the correct time.
- (3): Registration sensor OFF → Duplex entrance sensor does not switch OFF at the correct time.
- (4): Duplex entrance sensor ON → Inverter exit sensor does not switch OFF at the correct time.
- (5): Inverter exit sensor ON → Paper exit sensor does not switch ON at the correct time.
- (6): Duplex entrance sensor OFF → Paper exit sensor does not switch OFF at the correct time. (Paper remains at the duplex unit exit.)

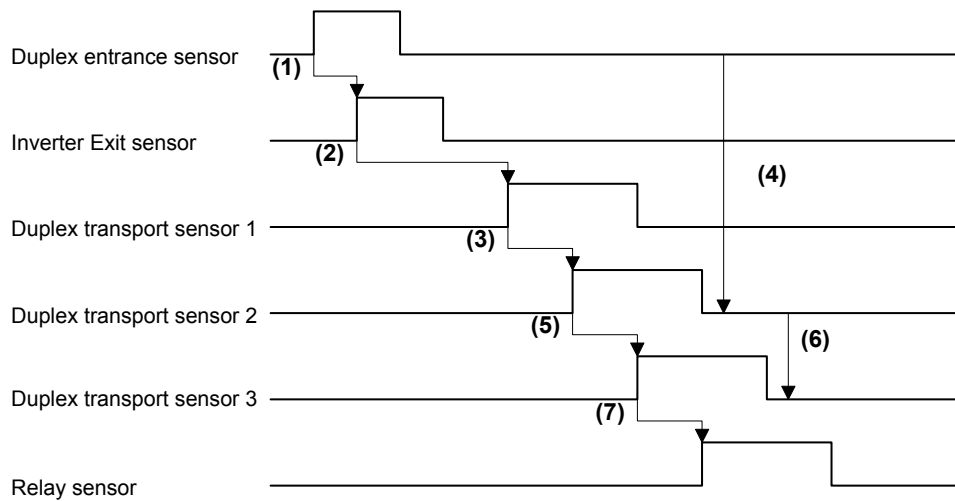Duplex Transport

B246T904.WMF

- (1): Duplex entrance sensor ON → Inverter exit sensor does not switch ON at the correct time.
- (2): Inverter exit sensor ON → Duplex transport sensor 1 does not switch on at the correct time.
- (3): Duplex transport sensor 1 ON → Duplex transport sensor 2 does not switch on at the correct time.
- (4): Duplex entrance sensor ON → Duplex transport sensor 2 does not switch OFF at the correct time.
- (5): Duplex transport sensor 2 ON → Duplex transport sensor 3 does not switch ON at the correct time.
- (6): Duplex transport sensor 2 OFF → Duplex transport sensor 3 does not switch OFF at the correct time.
- (7): Duplex transport sensor 3 ON → Relay sensor does not switch on at the correct time.

Troubleshooting

4.1.6 PROGRAM DOWNLOAD

Here are some important points to keep in mind when downloading software:

- If an error interrupts download processing, the machine cannot operate normally with the program software only partially downloaded.
- When download processing execution starts, “Downloading...” is displayed and when downloading has completed successfully, the message is cleared.
- If the download is interrupted when the “Downloading ...” message is displayed, the machine does not attempt a re-try.
- The program that downloads firmware from an IC card is part of the GW controller software. If downloading this software is interrupted, the program stored in the machine may be corrupted. Because of this, it may not be possible to restart the downloading program. (In addition, if the GW controller software cannot be downloaded, other software on other IC cards cannot be downloaded.) However, it may be possible to restart the program without replacing the board by setting DIP SW 1 on the controller to ON, and re-starting.

4.2 B064 SERIES SERVICE MODE

4.2.1 B064 SERIES SERVICE CALL CONDITIONS

There are 4 levels of service call conditions.

Level	Definition	Reset Procedure
A	Fusing unit SCs displayed on the operation panel. The machine is disabled. The user cannot reset the SC.	Enter SP mode, then turn the main power switch off and on.
B	SCs that disable only the features that use the defective item. Although these SCs are not shown to the user under normal conditions, they are displayed on the operation panel only when the defective feature is selected.	Turn the main power switch off and on.
C	SCs that are not shown on the operation panel. They are internally logged.	Logging only
D	Turning the operation switch or main power switch off then on resets SCs Displayed on the operation panel. These are re-displayed if the error occurs again.	Turn the operation switch or main power switch off and on.





- NOTE:**
- 1) If the problem concerns electrical circuit boards, first disconnect then reconnect the connectors before replacing the PCBs.
 - 2) If the problem concerns a motor lock, first check the mechanical load before replacing motors or sensors.
 - 3) When a Level A or B SC occurs while in an SP mode, the display does not indicate the SC number. If this occurs, check the SC number after leaving the SP mode. This does not apply to Level B' codes.

4.2.2 B064 SERIES SC CODE DESCRIPTIONS

SC100: Scanning System

SC No.		Symptom	Possible Cause
101	D	Exposure Lamp Error	
		At trigger on, the lamp was not detected on.	<ul style="list-style-type: none"> • Exposure lamp defective • Lamp regulator defective • Exposure lamp connector defective • Dirty standard white plate • Dirty scanner mirror or scanner mirror out of position • SBU board defective • SBU connector defective • IPU defective
120	D	Scanner home position error 1	
		The scanner HP sensor does not detect the on condition during initialization or copying.	<ul style="list-style-type: none"> • BCU, SDRB (Scanner Driver Board) defective. • Scanner motor defective • Harness between BCU, SDRB, scanner motor disconnected. • Scanner HP sensor defective. • Harness between scanner HP sensor and BCU disconnected. • Scanner wire, timing belt, pulley, carriage installation incorrect.
121	D	Scanner home position error 2	
		The scanner HP sensor does not detect the off condition during initialization or copying.	<ul style="list-style-type: none"> • BCU, SDRB (Scanner Driver Board) defective. • Scanner motor defective. • Harness between BCU, SDRB, scanner motor disconnected. • Scanner HP sensor defective. • Harness between scanner HP sensor and BCU disconnected. • Scanner wire, timing belt, pulley, carriage installation incorrect.
122	D	Scanner home position error 3	
		The scanner home position sensor does not detect the on condition during original scanning.	<ul style="list-style-type: none"> • BCU, SDRB (Scanner Driver Board) defective. • Scanner motor defective. • Harness between BCU, SDRB, scanner motor disconnected. • Scanner HP sensor defective. • Harness between scanner HP sensor and BCU disconnected. • Scanner wire, timing belt, pulley, carriage installation incorrect.

SC No.		Symptom	Possible Cause
123	D	Scanner home position error 4	
		The scanner home position sensor does not detect the off condition during original scanning.	<ul style="list-style-type: none"> • BCU, SDRB (Scanner Driver Board) defective. • Scanner motor defective. • Harness between BCU, SDRB, scanner motor disconnected. • Scanner HP sensor defective. • Harness between scanner HP sensor and BCU disconnected. • Scanner wire, timing belt, pulley, carriage installation incorrect.
143	D	SBU auto adjust error	
		Automatic adjustment of the SBU fails when the machine is switched on.	<ul style="list-style-type: none"> • Exposure lamp defective. • Exposure lamp regulator defective. • Harness between exposure lamp and lamp regulator is disconnected. • White plate installed incorrectly or is dirty. • Scanning mirrors of the exposure unit are dirty or out of position. • SBU board defective. • VIB board defective. • Harness between SBU, VIB disconnected. • Harness between VIB, BCU disconnected. • IPU defective • BCU defective
144	D	SBU transmission error	
		<p>After the SBU switches on, the BCU detects one of the following conditions on the SBU:</p> <ul style="list-style-type: none"> • 1 s after power on, the SYDI signal does not go high, even after 1 retry. • 1 s after power on, the SYDI signal goes high, but the SBU ID could not be read after 3 attempts. 	<ul style="list-style-type: none"> • SBU defective. • VIB defective • Harness (40-pin shielded) between the SBU, VIB is disconnected. • Harness (shielded cable) between the VIB, BCU is disconnected. • IPU defective

SC No.		Symptom	Possible Cause
181	D	CIS lamp abnormal	
		After the CIS lamp trigger goes on, the CIS lamp is not detected on. Detecting the lamp on or off determines the peak white level value for shading correction. (If the peak level is determined to be below a certain level, the CIS lamp is judged to be off.)	<ul style="list-style-type: none"> • CIS lamp defective. • CIS power supply board defective. • Harness between lamp and power supply board is disconnected. • Harness between CIS, ADF is disconnected. • CIS exposure glass dirty. • White roller dirty or installed incorrectly. • CIS unit defective. • PSU defective
183	D	CIS auto adjust error	
		Automatic adjustment of the CIS unit failed.	<ul style="list-style-type: none"> • CIS unit defective. • CIS exposure glass dirty. • White roller dirty or installed incorrectly. • PSU power supply (+5V, -12V) is abnormal. • IPU defective
184	D	CIS transmission error	
		When the CIS is powered on, the ADF detects one of the following abnormal conditions on the CIS unit: <ul style="list-style-type: none"> • The SOUT signal does not go high within 1 s after power on. • The SOUT signal goes high within 1 s after power on, but the SBU ID cannot be read after 3 attempts. 	<ul style="list-style-type: none"> • CIS unit defective. • Harness between the CIS, ADF is disconnected. • PSU power (5V) is abnormal. • BCU, IPU defective

SC300: Image Development System (1)

SC No.		Symptom	Possible Cause
300	D	Charge corona output error	
		The feedback voltage from the charge corona unit is detected too high 9 times.	<ul style="list-style-type: none"> • Charge corona power pack defective • Charge corona harness disconnected • Poor charge corona unit connection
303	D	Charge corona grid leak	
		When the high voltage is output to the corona grid, feedback voltage exceeds the prescribed value 9 times.	<ul style="list-style-type: none"> • Charge corona power pack defective • Charge corona harness disconnected • Poor charge corona unit connection
305	D	Charge corona wire cleaner error 1	
		The charge corona wire cleaner motor is detected: <ul style="list-style-type: none"> • Motor locks within 4 s after switching on, or does not lock within 30 s. • Motor locks within 10 s after reversing, or does not lock within 30 s. 	<ul style="list-style-type: none"> • Charge corona wire cleaner motor defective • BCU board defective
306	D	Charge corona wire cleaner error 2	
		The current at the charge corona motor is detected less than 83 mA.	<ul style="list-style-type: none"> • Charge corona wire cleaner motor connector is defective or not connected.

Trouble-shooting

When SC310~SC317 are logged, the machine halts without displaying the SC number. These SC codes log an abnormal condition at the potential sensor only when SP3901 (Auto Process Control) is set to on.

SC No.		Symptom	Possible Cause
310	C	Potential sensor calibration error 1	
		During drum potential sensor calibration, the drum potential sensor output voltage does not meet specification when test voltages (−100V, −800V) are applied to the drum.	<ul style="list-style-type: none"> • Potential sensor defective • Potential sensor harness disconnected • Potential sensor connector defective or disconnected • BCU defective • OPC connector defective • Development power pack defective
311	C	Potential sensor calibration error 2	
		During drum potential sensor calibration, the drum potential sensor output voltage does not meet specification when test voltages (−100V, −800V) are applied to the drum.	<ul style="list-style-type: none"> • Potential sensor defective • Potential sensor harness disconnected • Potential sensor connector defective or disconnected • BCU defective • OPC connector defective • Development power pack defective

SC No.		Symptom	Possible Cause
312	C	Potential sensor calibration error 3	
		<p>During drum potential sensor calibration when adjusting the drum potential (VD), the drum potential sensor detects VD higher than VG (grid voltage).</p> <p>-or-</p> <p>When adjusting VD (drum surface potential of black areas after exposure), even after 5 adjustments of VG (charge corona grid potential), VD could not be set in the target range ($-800 \pm 10 + VL + 130V$)</p>	<ul style="list-style-type: none"> • Potential sensor defective • Potential sensor harness disconnected • Potential sensor connector defective or disconnected • BCU defective • OPC connector defective • Development power pack defective • Charge corona unit worn out, dirty
314	C	Potential sensor calibration error 4	
		<p>During drum potential sensor calibration when adjusting the drum potential (VH) for LD power adjustment, the first time the VH pattern is made, the drum potential sensor detects that VH is more than 500V:</p> <p>$VH > -500 + VL + 130 V$</p>	<ul style="list-style-type: none"> • Potential sensor defective • Potential sensor harness disconnected • Potential sensor connector defective or disconnected • BCU defective • OPC connector defective • LD defective
315	C	Potential sensor calibration error 5	
		<p>During drum potential sensor calibration, when $-100V$ is applied to the drum, the output value is out of the prescribed range.</p>	<ul style="list-style-type: none"> • Potential sensor defective • Potential sensor harness disconnected • Potential sensor connector defective or disconnected • BCU defective • OPC connector defective • Development power pack defective
316	C	Potential sensor calibration error 6	
		<p>During drum potential sensor calibration, when $-800V$ is applied to the drum, the output value is out of the prescribed range.</p>	<ul style="list-style-type: none"> • Potential sensor defective • Potential sensor harness disconnected • Potential sensor connector defective or disconnected • BCU defective • OPC connector defective • Development power pack defective
317	C	Potential sensor calibration error 7	
		<p>During drum potential sensor calibration, when VL is adjusted, the pattern surface potential VL pattern is not within range $0V \sim -400V$. (VL is the potential after exposing a white pattern.)</p>	<ul style="list-style-type: none"> • Potential sensor defective • Potential sensor harness disconnected • Potential sensor connector defective or disconnected • BCU defective • OPC connector defective • Charge corona power pack defective • Development power pack defective
321	D	No laser writing signal (F-GATE) error 1	
		<p>The laser writing signal (F-GATE) for the IPU does not go LOW within 60 s.</p>	<ul style="list-style-type: none"> • IPU board defective • PCI bus between controller board, IPU board defective

SC No.		Symptom	Possible Cause
322	D	Laser synchronization detector error	
		After the polygon motor reaches standard rotation speed and the LD unit fires for 500 ms, the laser synchronization detector does not generate a signal.	<ul style="list-style-type: none"> • Harness between detector and I/F disconnected or damaged • Detector is installed incorrectly. • Detector board is defective • Controller board defective • IPU board defective • LDB defective
335	D	Polygonal mirror motor error 1	
		The ready signal does not go low within 20 s after the polygonal mirror motor turns on or changes speed of rotation.	<ul style="list-style-type: none"> • Harness between I/F and polygon motor disconnected or defective • Polygon motor or polygon motor driver defective • IPU board defective
336	D	Polygonal mirror motor error 2	
		The ready signal does not go high within 20 s after the polygonal mirror motor turns off.	<ul style="list-style-type: none"> • Harness between I/F and polygon motor disconnected or defective • Polygon motor or polygon motor driver defective • IPU board defective
337	D	Polygonal mirror motor error 3	
		The XSCRDY signal goes high while the polygonal mirror motor turns on, even though there was no demand for either turning off the motor or changing the motor speed.	<ul style="list-style-type: none"> • Harness between the polygon motor and I/F disconnected or defective. • Polygon motor or polygon motor driver defective • IPU board defective
338	D	Polygonal mirror motor error 1	
		During exposure, while the polygon motor is rotating, the XSCRDY signal goes high.	<ul style="list-style-type: none"> • Harness between the polygon motor and I/F disconnected or defective. • Polygon motor or polygon motor driver defective • IPU board defective
340	D	TD sensor output error	
		TD sensor output voltage (Vt), measured during each copy cycle, is detected 10 times at one of the following levels: Vt = 0.5 volts or lower Vt = 4.0 volts or higher	<ul style="list-style-type: none"> • TD sensor defective • TD sensor harness disconnected • TD sensor connector disconnected or defective • BCU defective • Toner bottle motor defective <p>Note: When the TD sensor is defective, the toner supply is controlled using pixel count and the ID sensor.</p>

SC No.		Symptom	Possible Cause
341	C	TD sensor adjustment error 1	
		<p>During the TD sensor auto adjustment, the TD sensor output voltage (Vt) is 2.5 volts or higher even though the control voltage is set to the minimum value (PWM = 0)</p> <p>When this error occurs, SP2-906-1 reads 0.00V.</p> <p>Note: This SC is released only after correct adjustment of the TD sensor has been achieved. Switching the machine off and on will cancel the SC display, but does not release ID sensor toner supply.</p>	<ul style="list-style-type: none"> • TD sensor defective • TD sensor harness disconnected • TD sensor connector disconnected or defective • BCU defective • Toner bottle motor defective <p>Note: When the TD sensor is defective, the toner supply is controlled using pixel count and the ID sensor.</p>
342	C	TD sensor adjustment error 2	
		<p>During the TD sensor auto adjustment, the TD sensor output voltage (Vt) does not enter the target range ($3.0 \pm 0.1V$) within 20 s.</p> <p>When this error occurs, the indication of SP2-906-1 reads 0.00V.</p> <p>Note: This SC is released only after correct adjustment of the TD sensor has been achieved. Switching the machine off and on will cancel the SC display, but does not release ID sensor toner supply.</p>	<ul style="list-style-type: none"> • TD sensor defective • TD sensor harness disconnected • TD sensor connector disconnected or defective • BCU defective
345	D	Development output abnormal	
		<p>The high voltage applied to the development unit is detected 10 times higher than the upper limit (45%) of PWM.</p>	<ul style="list-style-type: none"> • Development power pack defective • Development bias connection defective • Development bias connector disconnected or defective
350	C	ID sensor error 1	
		<p>One of the following ID sensor output voltages was detected twice consecutively when checking the ID sensor pattern.</p> <p>Vsp \geq 2.5V Vsg < 2.5 Vsp = 0V Vsg = 0</p>	<ul style="list-style-type: none"> • ID sensor defective • ID sensor harness disconnected • ID sensor connector defective • BCU defective • Defect at ID sensor pattern writing • Charge power pack defective • ID sensor dirty
351	C	ID sensor error 2	
		<p>The ID sensor output voltage is 5.0V and the PWM signal input to the ID sensor is 0 when checking the ID sensor pattern.</p>	<ul style="list-style-type: none"> • ID sensor defective • ID sensor harness disconnected • ID sensor connector defective • BCU defective • Defect during ID sensor pattern writing • Charge power pack defective • ID sensor dirty

SC No.		Symptom	Possible Cause
352	C	ID sensor error 3	
		For 2 s during the ID sensor pattern check, the ID sensor pattern edge voltage is not 2.5V or the pattern edge is not detected within 800 ms.	<ul style="list-style-type: none"> • ID sensor defective • ID sensor harness disconnected • ID sensor connector defective • BCU defective • Defect during ID sensor pattern writing • Charge power pack defective • ID sensor dirty
353	C	ID sensor error 4	
		One of the following ID sensor output voltages is detected at ID sensor initialization. <ul style="list-style-type: none"> • $V_{sg} < 4.0V$ when the maximum PWM input (255) is applied to the ID sensor. • $V_{sg} \geq 4.0V$ when the minimum PWM input (0) is applied to the ID sensor. 	<ul style="list-style-type: none"> • ID sensor defective • ID sensor harness disconnected • ID sensor connector defective • BCU defective • Defect during ID sensor pattern writing • Charge power pack defective • ID sensor dirty
354	C	ID sensor error 5	
		20 s after the start of automatic adjustment, V_{sg} cannot be adjusted to target ($4.0 \pm 0.2V$).	<ul style="list-style-type: none"> • ID sensor defective • ID sensor harness disconnected • ID sensor connector defective • BCU defective • Defect during ID sensor pattern writing • Charge power pack defective • ID sensor dirty
355	C	ID sensor pattern voltage error	
		Drum potential sensor output is out of the target range (-100 - -400V) when reading the drum voltage for the ID sensor pattern.	<ul style="list-style-type: none"> • Drum potential sensor defective • Drum potential sensor harness disconnected • Drum potential sensor connector defective • IOB defective • Defect during ID sensor pattern writing • Charge power pack defective • Charge corona wire dirty

SC400: Image Development System (2)

SC No.		Symptom	Possible Cause
401	D	Transfer output abnormal	
		When the transfer is output, the feedback voltage remains higher than 4V for 60 ms.	<ul style="list-style-type: none"> • Transfer power pack defective • Poor connection between the transfer current terminal and the transfer power pack
402	D	Transfer output abnormal release detection	
		When the transfer is output, there is hardly any feedback voltage within 60 ms even with application of 24% PWM.	<ul style="list-style-type: none"> • Transfer power pack defective • Transfer unit harness disconnected • Transfer connector disconnected, defective
430	D	Quenching lamp error	
		At the completion of auto process control initialization, the potential of the drum surface detected by the potential sensor is more than – 400V, the prescribed value.	<ul style="list-style-type: none"> • Quenching lamp defective • Quenching lamp harness disconnected • Quenching lamp connector disconnected or defective
440	D	Main motor lock	
		The main motor lock signal remains low for 2 seconds while the main motor is on.	<ul style="list-style-type: none"> • Too much load on the drive mechanism • Main motor defective
441	D	Development motor lock	
		The development motor lock signal remains high for 2 seconds while the development motor is on.	<ul style="list-style-type: none"> • Too much load on the drive mechanism • Development motor defective
490	D	Main fan abnormal	
		The main fan motor lock signal goes high for 5 s while the fan is on.	<ul style="list-style-type: none"> • Too much load on the motor, motor is blocked by something • Fan connector disconnected
495	D	Toner recycling unit error	
		Encoder pulse does not change for 3 s after the main motor switches on.	<ul style="list-style-type: none"> • Too much load on the drive mechanism • Toner end sensor detective, disconnected
496	D	Toner collection bottle error	
		The toner collection bottle set switch remains off when the front door is closed.	<ul style="list-style-type: none"> • No toner collection bottle set • Poor connection on the switch connector
497	D	Toner collection motor error	
		The toner collection motor connector set signal remains off for 1 s.	<ul style="list-style-type: none"> • Toner collection motor defective • Motor connector disconnected

SC500: Feed, Transport, Duplexing, and Fusing Systems

SC No.		Symptom	Possible Cause
501	B	Tray 1 lift malfunction	
		<ul style="list-style-type: none"> The lift sensor is not activated within 10 seconds after the tray lift motor starts lifting the bottom plate. Paper height sensor actuator does not move away from the sensor for 4 counts. 	<ul style="list-style-type: none"> Tray lift motor defective or disconnected Paper or other obstacle trapped between tray and motor Pick-up solenoid disconnected or blocked by an obstacle
502	B	Tray 2 lift malfunction	
		<ul style="list-style-type: none"> The lift sensor is not activated within 10 seconds after the tray lift motor starts lifting the bottom plate. Paper height sensor actuator does not move away from the sensor for 4 counts. 	<ul style="list-style-type: none"> Tray lift motor defective or disconnected Paper or other obstacle trapped between tray and motor Pick-up solenoid disconnected or blocked by an obstacle
503	B	Tray 3 lift malfunction	
		<ul style="list-style-type: none"> The lift sensor is not activated within 13 s after the tray lift motor starts lifting the bottom plate. At power on, or when the tray set sensor goes on after tray inserted, the tray continues to lower for 5 s. The motor stops but restarts when the tray is re-inserted. 	<ul style="list-style-type: none"> Tray lift motor defective or poor connection Lift sensor defective or poor connection
504	B	Tray 4 lift malfunction	
		Japan only.	
507	B	LCT feed motor malfunction	
		One of the following conditions is detected: <ul style="list-style-type: none"> The LD signal from the feed motor is detected abnormal for 50 ms after the motor switches on. At power on, the motor is detected loose or disconnected. 	<ul style="list-style-type: none"> Feed motor defective Feed motor connector disconnected Obstacle interfering with operation of motor
510	B	LCT tray malfunction	
		One of the following conditions is detected: <ul style="list-style-type: none"> When the bottom plate is lifted, the upper limit sensor does not come on for 18 s. When the bottom plate is lowered, the lower limit sensor does not come on for 18 s. After lift begins, the upper limit sensor does not switch on before the pick-up solenoid switches on. The paper end sensor switches on during lift and the upper limit sensor does not switch on for 2.5 s, and a message prompts user to reset paper. 	<ul style="list-style-type: none"> Tray lift motor defective or connector disconnected Lift sensor defective or disconnected Pick-up solenoid defective or disconnected Paper end sensor defective

Trouble-shooting

SC No.		Symptom	Possible Cause
515	B	Tandem rear fence motor error	
		One of the conditions is detected: <ul style="list-style-type: none"> The rear fence does not reach the return position within 10 s after the rear fence motor switches on, or does not return to the HP. The HP sensor and return sensor switch on at the same time. 	<ul style="list-style-type: none"> Rear fence motor defective or poor connection Paper or other obstacle trapped between tray and motor Motor mechanical overload Return sensor or HP sensor defective or dirty
516	B	Tandem side fence motor error	
		The side fences do not reach the fully open or closed position within 2 seconds after the side fence motor switches on.	<ul style="list-style-type: none"> Side fence motor defective or poor connection Motor mechanical overload Side fence positioning sensor defective or dirty
520	D	Duplex jogger motor error 1	
		When the jogger fence moves to the home position, the jogger HP sensor does not turn on even if the jogger fence motor has moved the jogger fence 153.5 mm.	<ul style="list-style-type: none"> Paper or other obstacle has jammed mechanism Sensor connector disconnected or defective Sensor defective
521	D	Duplex jogger motor error 2	
		When the jogger fence moves from the home position, the jogger fence HP sensor does not turn off even if the jogger motor has moved the jogger fence 153.5 mm.	<ul style="list-style-type: none"> Paper or other obstacle has jammed mechanism Sensor connector disconnected or defective Sensor defective
541	A	Fusing thermistor open	
		<ul style="list-style-type: none"> The fusing temperature detected by the thermistor is below 7°C for 35 seconds. The center thermistor (non-contact) abnormal. 	<ul style="list-style-type: none"> Thermistor open Thermistor connector defective Thermistor damaged or warped Fusing temperature –15% less than the standard input voltage
542	A	Fusing temperature warm-up error	
		<ul style="list-style-type: none"> After power on, or after closing the front door, the hot roller does not reach the 80°C control temperature within 360 s. After the fusing lamp temperature exceeds 80°C, temperature does not change 2 degrees within 20 s. 	<ul style="list-style-type: none"> Fusing lamp disconnected Thermistor warped or installed incorrectly Thermostat operating
543	A	Fusing lamp overhear error 1 (software)	
		<ul style="list-style-type: none"> Central thermistor detected a temperature of 230°C at the center of the hot roller. End thermistor detected 220°C x 100 ms 5 times at the end of the hot roller. 	<ul style="list-style-type: none"> PSU defective BCU defective
544	A	Fusing lamp overhear error 1 (hardware)	
		The BCU detects an overhear error even if the protection in the software does not work.	<ul style="list-style-type: none"> PSU defective BCU defective

SC No.		Symptom	Possible Cause
545	A	Fusing lamp overheat error 2	
		After hot roller reaches the warm-up temperature, the fusing lamps continued full capacity output for 55 s without the hot roller rotating (for a total of 45s).	<ul style="list-style-type: none"> Fusing thermistor out of position
547	D	Zero cross signal malfunction	
		One of the following conditions is detected 10 times: <ul style="list-style-type: none"> When the main switch is on, the frequency measured by the number of zero cross signals for 500 ms is larger than 66Hz or smaller than 45 Hz. The interval between one zero cross signal and the next is 7.5 ms or shorter 3 times consecutively for 500 ms. 	<ul style="list-style-type: none"> Noise on the ac power line
550	A	Fusing Web End	
		Web end detected 5 times within 500 ms and web motor continues to rotate 40 s. If web end is detected for another 400 ms, then the SC is logged.	<ul style="list-style-type: none"> Web end (requires replacement) Web end sensor defective Note: After replacing the web with a new one, reset SP1902 001 to 0 to release SC550.
590	D	Toner collection motor error	
		The toner collection motor sensor output does not change for 3 seconds while the toner collection motor is on.	<ul style="list-style-type: none"> Toner collection motor defective Motor drive defective Toner collection motor sensor connector defective Motor overload
599	D	1-bin Exit Motor Error (should only occur in Japanese models)	
		The transport lock sensor output does not change within 300 ms after the motor switches on.	<ul style="list-style-type: none"> Motor overload Motor drive defective



Trouble-shooting

SC600: Data Communication

SC No.		Symptom	Possible Cause
601	D	Communication error between BCU and scanner unit	
		<ul style="list-style-type: none"> BCU does not communicate with scanner unit within 0.8 s after power on. BCU does not detect a break signal after connecting to scanner unit. Communication error detected 3 times. 	<ul style="list-style-type: none"> Serial line connection unstable External noise on the line
610	D	BCU ↔ ADF communication/timeout abnormal	
		After 1 data frame is sent to the ADF, an ACK signal is not received within 100 ms, and is not received after 3 retries.	<ul style="list-style-type: none"> Serial line connection unstable External noise on the line
611	D	BCU ↔ ADF communication/break reception abnormal	
		During communication a break (Low) signal was received from the ADF.	<ul style="list-style-type: none"> Serial line connection unstable Harness disconnected or defective
612	D	BCU ↔ ADF communication/command abnormal	
		An command that cannot be executed was sent from the main machine to the ADF.	<ul style="list-style-type: none"> A software error, result of an abnormal procedure.
620	D	BCU ↔ ADF communication/timeout error	
		After 1 data frame is sent to the finisher MBX, an ACK signal is not received within 100 ms, and is not received after 3 retries.	<ul style="list-style-type: none"> Serial line connection unstable External noise on the line
621	D	BCU ↔ Finisher communication/break error	
		During communication with the finisher MBX, the BCU received a break (Low) signal from the finisher.	<ul style="list-style-type: none"> Serial line connection unstable External noise on the line
623	D	BCU ↔ Tray 1~3 communication/timeout error	
		After 1 data frame is sent to the trays, an ACK signal is not received within 100 ms, and is not received after 3 retries.	<ul style="list-style-type: none"> Serial line connection unstable External noise on the line
624	D	BCU ↔ Tray 1~3 communication/break reception error	
		During communication with the finisher trays, the BCU received a break (Low) signal.	<ul style="list-style-type: none"> Serial line connection unstable External noise on the line
626	D	BCU ↔ LCT communication/timeout error	
		After 1 data frame is sent to the LCT, an ACK signal is not received within 100 ms, and is not received after 3 retries.	<ul style="list-style-type: none"> Serial line connection unstable External noise on the line
627	D	BCU ↔ LCT communication/break reception error	
		During communication with the LCT, the BCU received a break (Low) signal.	<ul style="list-style-type: none"> Serial line connection unstable External noise on the line
630	D	CSS (RSS) communication error between line adapter and CSS center	
		Japan only	

SC No.		Symptom	Possible Cause
632	B	Key/card counter device error 1	
		After 1 data frame is sent to the device, an ACK signal is not received within 100 ms, and is not received after 3 retries.	<ul style="list-style-type: none"> The serial line from the device to the copier is unstable, disconnected, or defective.
633	B	Key/card counter device error 2	
		During communication with the device, the BCU received a break (Low) signal.	<ul style="list-style-type: none"> The serial line from the device to the copier is unstable, disconnected, or defective.
634	B	Key/card counter device error 3	
		After installation of the device, a message alerts user to a backup RAM error.	<ul style="list-style-type: none"> Device control board defective Device control board backup battery defective
635	B	Key/card counter device error 4	
		After installation of the device a message alerts user to a battery voltage abnormal error.	<ul style="list-style-type: none"> Device control board defective Device control board backup battery defective
640	C	BCU ↔ Controller data transfer error 1	
		Data is sent from the BCU to the controller, but the transmission causes a checksum error.	<ul style="list-style-type: none"> The error is logged but the machine can continue to operate.
641	C	BCU ↔ Controller data transfer error 2	
		Data is sent from the BCU to the controller, but the transmission causes a frame error.	<ul style="list-style-type: none"> The error is logged but the machine can continue to operate.
670	D	Engine startup error	
		<ul style="list-style-type: none"> Engine does not respond within 30 s after power on. Engine down detected suddenly during power on and warmup. 	<ul style="list-style-type: none"> BCU installation incorrect BCU defective Sudden communication reset occurred between the BCU and the controller.
672	D	Controller startup error	
		<ul style="list-style-type: none"> After power on the line between the controller and the operation panel does not open for normal operation. After normal startup, communication with the controller ceases. 	<ul style="list-style-type: none"> Controller stalled Controller installed incorrectly Controller board defective Operation panel harness disconnected or defective The optional fax unit was installed with the jumper on the MBU at the OFF position. The jumper must be removed and set at the ON position.
690	D	GAVD Block 12 bus error	
		The register for this block is set for an error.	<ul style="list-style-type: none"> IPU defective
691	D	GAVD FCI Block 12 bus error	
		The register for this block is set for an error.	<ul style="list-style-type: none"> IPU defective
692	D	CDIC GAVD Block 12 bus error	
		The register for this block is set for an error.	<ul style="list-style-type: none"> IPU defective

SC700: Peripherals

SC No.		Symptom	Possible Cause
700	D	ADF original pick-up error 1	
		Pick-up roller HP sensor signal does not change after the pick-up motor has turned on.	<ul style="list-style-type: none"> • Pick-up roller HP sensor defective • Pick-up motor defective • Timing belt slipping, out of position • ADF main board defective
701	D	ADF bottom plate motor error	
		<ul style="list-style-type: none"> • Bottom plate position sensor does not detect the plate after the bottom plate lift motor switches on to lift the plate. • Bottom plate HP sensor does not detect the plate after the bottom plate motor reverses to lower the plate. 	<ul style="list-style-type: none"> • Bottom plate position sensor defective • Bottom plate HP sensor defective • Bottom plate motor defective • ADF main board defective
720	D	Finisher transport motor error	
		The encoder pulse of the transport motor does not change state (high/low) within 600 ms and does not change after 2 retries.	<ul style="list-style-type: none"> • Finisher transport motor defective • Transport motor harness disconnected, or defective • Finisher main board defective
722	B	Finisher jogger motor error	
		<ul style="list-style-type: none"> • The finisher jogger HP sensor remains de-activated for more 1,000 pulses when returning to home position. • The finisher jogger HP sensor remains activated for more than 1,000 pulses when moving away from home position. 	<ul style="list-style-type: none"> • Jogger HP sensor defective • Jogger mechanism overload • Jogger motor defective (not rotating) • Finisher main board defective • Harness disconnected or defective
724	B	Finisher staple hammer motor error	
		Stapling does not finish within 450 ms after the staple hammer motor switches on and the stapler jams. Stapler is released from the reverse lock status. If the stapler does not operate within 450 ms, even in the reverse lock position, then the SC is logged.	<ul style="list-style-type: none"> • Staple jam • Stapler operation overload • Staple hammer motor defective • Motor connector disconnected, or defective
725	B	Finisher stack feed-out motor error	
		The stack feed-out belt HP sensor does not activate within the prescribed number of pulses after the stack feed-out motor turns on and does not activate after 2 retries.	<ul style="list-style-type: none"> • Stack feed-out HP sensor defective • Harness disconnected or defective • Stack feed-out motor defective • Finisher main board defective • Motor overload
726	B	Finisher upper tray lift motor error	
		The paper height sensor does not activate within the prescribed time after the upper tray lift motor turns on, or the sensor remains on after the motor reverses to lower the tray.	<ul style="list-style-type: none"> • Upper tray paper height sensor defective • Sensor harness disconnected, defective • Tray lift motor defective • Finisher main board defective • Tray lift motor overload

SC No.		Symptom	Possible Cause
727	B	Finisher stapler rotation motor error	
		The stapler motor switches on but the motor does not return to the home position within the prescribed number of pulses. After 2 counts, the SC is logged as a jam.	<ul style="list-style-type: none"> • Stapler rotation motor defective • Poor stapler rotation motor connection • Stapler rotation sensor defective • Finisher main board defective • Rotation motor overload
729	D	Finisher punch motor error	
		The punch HP sensor does not activate within the prescribed time the punch motor turns on.	<ul style="list-style-type: none"> • Punch HP sensor defective • Sensor harness disconnected, defective • Punch motor defective • Finisher main board defective • Poor punch motor overload
730	B	Finisher stapler movement motor error	
		The stapler HP sensor does activate within the prescribed time after the stapler motor turns on and moves the stapler away from home position. After 2 counts, the SC is logged as a jam.	<ul style="list-style-type: none"> • Stapler HP sensor defective • Sensor harness disconnected, defective • Stapler movement motor defective • Finisher main board defective • Stapler movement motor overload
732	B	Finisher shift roller motor error	
		The shift roller HP sensor does not activate within the prescribed time after the shift roller motor turns on. After 2 counts, the SC is logged as a jam.	<ul style="list-style-type: none"> • Shift roller HP sensor defective • Sensor harness disconnected, defective • Shift roller motor defective • Finisher main board defective • Shift roller motor overload
733	D	Finisher lower tray lift motor error	
		After the lift motor switches on to lift the tray, paper height sensor 2 does not detect the top of the paper stack, or after the motor reverses to lower the stack the top of the stack remains detected (the status of paper height sensor 1 does not change). After 2 counts, the SC is logged as a jam.	<ul style="list-style-type: none"> • Paper height sensor 1 or 2 defective • Sensor harness disconnected, defective • Tray lift motor defective • Finisher main board defective • Tray lift motor overload
735	B	Finisher pre-stack motor error	
		<ul style="list-style-type: none"> • The pre-stack motor starts but does not return to the home position within 400 pulses. After 2 counts, the SC is logged as a jam. • Motor does not return to the home position within 280 pulses immediately before or after pre-stacking. After 2 counts, the SC is logged as a jam. 	<ul style="list-style-type: none"> • Jogger HP sensor defective • Sensor harnesses disconnected, defective • Pre-stack motor defective • Finisher main board defective • Pre-stack motor overload
736	B	Finisher paper exit guide plate motor error	
		The paper exit guide plate motor starts but the paper exit guide plate HP sensor does not activate within 750 ms. After 2 counts, the SC is logged as a jam.	<ul style="list-style-type: none"> • Guide plate HP sensor defective • Sensor harness disconnected, defective • Paper exit guide plate motor defective • Finisher main board defective • Guide plate motor overload.

SC No.		Symptom	Possible Cause
737	B	Trimmed staple waste hopper full	
		The hopper that holds the waste from staple trimming is full.	<ul style="list-style-type: none"> • Staple waste hopper full • Staple waste sensor defective
738	B	Finisher pressure plate motor error	
		The pressure plate motor switches on but does not return to the home position within the prescribed time after 2 counts.	<ul style="list-style-type: none"> • HP sensor defective • Harness disconnected, defective • Motor defective • Finisher main board defective • Motor overload
739	B	Finisher folder plate motor error	
		The folder plate motor turns on but the plate does not return to the home position within the prescribed time for 2 counts.	<ul style="list-style-type: none"> • Plate HP sensor defective • Harness disconnected, defective • Folder plate motor defective • Finisher main board defective • Folder plate motor overload
740	B	Finisher front saddle-stitch stapler motor error	
		Saddle-stitch stapler motor fails to operate within 450 ms within 2 counts..	<ul style="list-style-type: none"> • HP sensor defective • Harness disconnected, defective • Stapler motor defective • Finisher main board defective • Stapler motor overload
741	B	Finisher rear saddle-stitch stapler motor error	
		Saddle-stitch stapler motor fails to operate within 450 ms within 2 counts..	<ul style="list-style-type: none"> • HP sensor defective • Harness disconnected, defective • Stapler motor defective • Finisher main board defective • Stapler motor overload
742	B	Finisher jogger side fence motor error	
		The jogger motor turns on but the side fences to not return to the home position within 340 pulses for 2 counts.	<ul style="list-style-type: none"> • HP sensors defective • Harness disconnected, defective • Motor defective • Finisher main board defective • Motor overload
743	B	Finisher Jogger Motor Error	
		The jogger fences did not return to their horizontal home positions on both ends of the unit, or to their down home positions within the prescribed number of pulses. Only staple mode is disabled. Shift output, or output to the proof tray can still be used.	<ul style="list-style-type: none"> • Jogger lift sensor or jogger fence sensor connectors disconnected, loose, or damaged. • Jogger lift sensor or jogger fence sensor is defective. • Main harness connection loose or broken. • Shift jogger motor or shift jogger lift motor defective. Finisher main board defective.
750	B	Cover interposer bottom plate motor error	
		<ul style="list-style-type: none"> • The bottom plate motor turns on to raise the bottom plate but the plate position sensor does not detect the plate within 3 s. • The bottom plate motor reverses to lower the bottom plate but the bottom plate HP sensor does not detect the plate within 3 s. 	<ul style="list-style-type: none"> • Bottom plate position sensor defective • Bottom plate HP sensor defective • Bottom plate motor defective • Cover sheet feeder main board defective • Harnesses disconnected, defective

SC800: Overall System

SC No.		Symptom	Possible Cause
800	D	Video output transfer does not end (K)	
		Video signal is sent to the engine but no command is received within the prescribed time from the engine to signal the end of transfer – output all black.	<ul style="list-style-type: none"> Controller board defective
804	D	Video input transfer does not end (K)	
		Video transfer is requested from the scanner, but no command is received within the prescribed time from the scanner to signal a response – output all black.	<ul style="list-style-type: none"> Controller board defective
818	C	Watchdog error	
		Control error	<ul style="list-style-type: none"> System program defective Controller board defective Optional board defective
819	C	Fatal kernel error	
		Software defective	<ul style="list-style-type: none"> Software defective
820	C	Self-diagnostic error: CPU	
		Unexpected external error or interrupt occurred.	<ul style="list-style-type: none"> Controller board defective Software defective
821	C	Self-diagnostic error: ASIC	
		ASIC timer interrupt and CPU timer interrupt are compared and found to be out of range.	<ul style="list-style-type: none"> Controller board defective
822	C	Self-diagnostic error: HDD	
		Check performed when HDD is installed: <ul style="list-style-type: none"> HDD device busy for over 31 s. After a diagnostic command is set for the HDD, but the device remains busy for over 6 s. A diagnostic command is issued to the HDD device but the result is an error. 	<ul style="list-style-type: none"> HDD defective HDD harness disconnected, defective Controller board defective
823	C	Self-diagnostic error: NIB	
		<ul style="list-style-type: none"> The SUM of the MAC address written in the SEEP ROM for the MAC address is calculated and compared with the stored SUM and judged NG. There is a format error in the MAC address stored in the SEEP ROM for the MAC address. A loopback error occurs on the PHY chip of the NIB. 	<ul style="list-style-type: none"> NIB board defective Controller board defective
824	C	Self-diagnostic error: NVRAM	
		NVRAM device does not exist, or NVRAM device is damaged.	<ul style="list-style-type: none"> NVRAM defective Controller board defective
825	C	Self-diagnostic error: NVRAM (option)	
		Optional NVRAM is installed, but a write/verify error occurred.	<ul style="list-style-type: none"> Incorrect NVRAM installed.



Trouble-
shooting

SC No.		Symptom	Possible Cause
826	C	Self-diagnostic error: NVRAM (option NVRAM)	
		The difference between the 1 s measured for RTC in the NVRAM and the 1 s timeout of the CPU is out of range, or the NVRAM is not detected.	<ul style="list-style-type: none"> • NVRAM defective • NVRAM installed incorrectly
827	C	Self-diagnostic error: RAM	
		The write/verify check for the RAM mounted on the board resulted in an error.	<ul style="list-style-type: none"> • Controller board defective • RAM defective
828	C	Self-diagnostic error: ROM	
		<ul style="list-style-type: none"> • Measuring the CRC for the boot monitor and operating system program results in an error. • A check of the CRC value for ROMFS of the entire ROM area results in an error. 	<ul style="list-style-type: none"> • Software defective • Controller board defective • ROM defective
829	C	Self-diagnostic error: RAM (option)	
		<ul style="list-style-type: none"> • A write/verify check of the RAM mounted on the board results in a error. • The SPD value of the entire RAM DIM is incorrect, or cannot be read. <p>Note: RAM is not in use so the result is not displayed on the operation panel.</p>	<ul style="list-style-type: none"> • Controller board defective • RAM defective
835	C	Self-diagnostic error: Centronic device	
		<ul style="list-style-type: none"> • Loopback connector is connected but check results in an error. • Loopback connector is connected but DMA data error detected. • Centronic loopback connector is not connected for detailed self-diagnostic test. 	<ul style="list-style-type: none"> • Controller board defective • Centronic loopback connector not connected correctly • Centronic loopback connector defective
836	C	Self-diagnostic error: Font ROM	
		A device exists in the font area but it contains corrupted data.	<ul style="list-style-type: none"> • Font device defective
837	C	Self-diagnostic error: Font ROM (option)	
		A device exists in the font area but it contains corrupted data.	<ul style="list-style-type: none"> • Font device defective
838	C	Self-diagnostic error: Clock Generator	
		Setup data is read from the clock generator via the I2C bus but differs from the prescribed value.	<ul style="list-style-type: none"> • Controller board defective
850	B	Net I/F error	
		<ul style="list-style-type: none"> • Duplicate IP addresses. • Illegal IP address. • Driver unstable and cannot be used on the network. 	<ul style="list-style-type: none"> • IP address setting incorrect • NIB (PHY) board defective • Controller board defective

SC No.		Symptom	Possible Cause
851	B	IEEE 1394 I/F error	
		Driver setting incorrect and cannot be used by the 1394 I/F.	<ul style="list-style-type: none"> • 1394 I/F connection incorrect • 1394 I/F board defective • Controller board defective
		USB driver is corrupted or has become unstable and cannot be used by the USB I/F.	<ul style="list-style-type: none"> • USB connection incorrect • Controller board defective
860	B	HDD startup error at main power on	
		<ul style="list-style-type: none"> • HDD is connected but a driver error is detected. • The driver does not respond with the status of the HDD within 30 s. 	<ul style="list-style-type: none"> • HDD is not initialized • Level data is corrupted • HDD is defective
861	B	HDD re-try failure	
		At power on with the HDD detected, power supply to the HDD is interrupted, after the HDD is awakened from the sleep mode, the HDD is not ready within 30 s.	<ul style="list-style-type: none"> • Harness between HDD and board disconnected, defective • HDD power connector disconnected • HDD defective • Controller board defective
862	A	Number of bad sectors exceeds allowed maximum	
		The number of bad sectors on the HDD in the area for storing images exceeds 101.	<ul style="list-style-type: none"> • Execute 5832 001 to format the HDD and replace the bad sectors. HDD replacement is recommended because an HDD unit that generates bad sectors is probably of poor quality and performs poorly.
863	D	HDD data read failure	
		The data written to the HDD cannot be read normally, due to bad sectors generated during operation.	<ul style="list-style-type: none"> • HDD defective • Note: If the bad sectors are generated at the image partition, the bad sector information is written to NVRAM, and the next time the HDD is accessed, these bad sectors will not be accessed for read/write operation.
864	D	HDD data CRC error	
		During HDD operation, the HDD cannot respond to an CRC error query.	<ul style="list-style-type: none"> • Data transfer did not execute normally while data was being written to the HDD.
865	D	HDD access error	
		HDD responded to an error during operation for a condition other than those for SC863, 864.	<ul style="list-style-type: none"> • HDD defective.

Trouble-
shooting

SC900: Miscellaneous

SC No.		Symptom	Possible Cause
900	D	Electrical total counter error	
		The total counter contains something that is not a number.	<ul style="list-style-type: none"> • NVRAM defective
901	D	Mechanical total counter error	
		The mechanical counter is not connected.	<ul style="list-style-type: none"> • Mechanical total counter defective • Mechanical total counter connector not connected
951	C	F-GATE signal error	
		When the IPU has already received the F-GATE signal (laser writing start trigger signal), the IPU receives another F-GATE signal.	<ul style="list-style-type: none"> • Software defective • BCU defective
953	D	Scanner image setting error	
		The settings required for image processing using the scanner are not sent from the IPU.	<ul style="list-style-type: none"> • Software defective
954	D	Printer image setting error	
		The settings required for image processing using the printer controller are not sent from the IPU.	<ul style="list-style-type: none"> • Software defective
955	D	Memory setting error	
		The settings that are required for image processing using the memory are not sent from the IPU.	<ul style="list-style-type: none"> • Software defective
964	D	Printer ready error	
		The print ready signal is not generated for more than 17 seconds after the IPU received the print start signal.	<ul style="list-style-type: none"> • Software defective
984	D	Print image data transfer error	
		After a data transfer begins from the controller to the engine via the PCI bus, the transfer does not end within 15 s.	<ul style="list-style-type: none"> • Controller board defective • BICU defective • BICU, controller disconnected
985	D	Scanned image data transmission error	
		After a data transfer begins from the engine to the controller via the PCI bus, the transfer does not end within 3 s.	<ul style="list-style-type: none"> • Controller board defective • BICU defective • BICU, controller disconnected
986	D	Value of setting for software write parameter incorrect	
		The write parameter received by the write module at the beginning of the setting table is NULL.	<ul style="list-style-type: none"> • Controller board defective • BICU defective • BICU, controller disconnected
990	D	Software performance error	
		The software performs an unexpected function and the program cannot continue.	<ul style="list-style-type: none"> • Software defective, re-boot^{*1}

SC No.		Symptom	Possible Cause
991	C	Software capable of looping cannot continue	
		The software performs an unexpected function and the program cannot continue. However, unlike SC990, recovery processing allows the program to continue.	<ul style="list-style-type: none"> Software defective, re-boot^{*1}

^{*1}: In order to get more details about SC990 and SC991:

- 1) Execute SP7403 or print an SMC Report (SP5990) to read the history of the 10 most recent logged errors.
- 2) If you press the zero key on the operation panel with the SP selection menu displayed, you will see detailed information about the recently logged SC990 or SC991, including the software file name, line number, and so on. 1) is the recommended method, because another SC could write over the information for the previous SC.

SC No.		Symptom	Possible Cause
992	C	Undefined software error	
		Software encountered an unexpected operation. This error is issued if the error cannot be covered by SC990.	<ul style="list-style-type: none"> Software defective An error undetectable by any other SC code occurred
997	D	Cannot select application function	
		Application does not start after pressing the appropriate key on the operation panel.	<ul style="list-style-type: none"> Software bug A RAM or DIMM option required by the application is not installed or not installed correctly.
998	D	Application cannot start	
		Register processing does not execute for any application within 60 s after the machine is powered on. All applications do not start correctly, and all end abnormally.	<ul style="list-style-type: none"> Software bug A RAM or DIMM option required by the application is not installed or not installed correctly.
999	D	Program download error	
		The program download from the IC card does not execute normally. This SC is not logged.	<ul style="list-style-type: none"> Card installed incorrectly BICU defective IC card defective NVRAM defective Power down during program downloading

Trouble-
shooting

4.2.3 ADDITIONAL SC CODES PRINTED IN SMC REPORT

Here is a list of SC codes that are printed in the SMC report but may not appear in the operation panel display. Note that the codes that have the same number are identified by an additional 4-digit hexadecimal number.

SC No.		Symptom	Possible Cause
820	0001	TLB conversion (store) exception error	Unexpected error in CPU device: <ul style="list-style-type: none"> Controller board defective Boot monitor or self-diagnostic program corrupted
820	0002	TLB miss (load) exception error	
820	0003	TLB miss (store) exception error	
820	0004	Read address exception error	
820	0005	Write address exception error	
820	0006	Command bus exception error	
820	0007	Data bus exception error	
820	0008	System call exception error	
820	0009	Break exception error	
820	000A	Illegal command exception error	
820	000B	Potential sensor exception error	
820	000C	Overflow exception error	
820	000D	UTLB miss exception error	
820	0010	Allocation 0 error	
820	0011	Allocation 1 error	
820	0012	Allocation 2 error	
820	0013	Allocation 3 error	
820	0014	Allocation 4 error	
820	0015	Allocation 5 error	
820	00FF	Non-initialization allocation error	<ul style="list-style-type: none"> CPU defective Local bus defective Controller board defective
820	0601	Read address exception error	<ul style="list-style-type: none"> CPU device error Controller board defective
820	0602	Write address exception error	
820	0605	System call exception error	
820	0606	Break point exception error	
820	0607	Illegal command exception error	
820	060A	Allocation 0 mask exception error	<ul style="list-style-type: none"> CPU device error ASIC device error Controller board defective
820	060B	Allocation 1 mask exception error	
820	060C	Allocation 2 mask exception error	
820	060D	Allocation 3 mask exception error	
820	060E	Allocation 4 mask exception error	
820	0610	CPU timer 2 allocation set error	<ul style="list-style-type: none"> CPU device error Controller board defective
820	0612	ASIC allocation error	<ul style="list-style-type: none"> ASIC device error Controller board defective Peripheral device defective
820	06FF	CPU master clock error	<ul style="list-style-type: none"> CPU device error Error in CPU initialization data (ASIC error) Controller board defective

SC No.		Symptom	Possible Cause
820	0702	Command cache error	<ul style="list-style-type: none"> • CPU cache defective • Controller board defective • Memory error (insufficient speed)
820	0709	Data cache error	<ul style="list-style-type: none"> • CPU device error • Boot mode setting for CPU error • Controller defective • Insufficient memory
820	070A	Data cache clear error	
820	0801	TLB virtual address error	<ul style="list-style-type: none"> • CPU device defective (controller board defective)
820	0804	TLB global error	
820	0807	UTLB miss error	
820	0808	TLB read miss error	
820	0809	TLB write miss error	
820	080A	TLB mode file error	
820	4002	Single-precision calculation error	<ul style="list-style-type: none"> • CPU error (controller board defective)
820	4003	Double-precision calculation error	
820	4004	Exception error	
820	4005	Exception mask error	
822	3003	HDD timeout	<ul style="list-style-type: none"> • HDD defective • HDD connector disconnected, defective • ASIC device error (controller board defective)
822	3004	Self-diagnostic command error	<ul style="list-style-type: none"> • HDD defective
823	6101	MAC address SUM error	<ul style="list-style-type: none"> • NIB (PHY) board defective • Controller board defective
823	6104	PHY chip ID illegal	
823	6105	PHY loopback error	
824	1401	NVRAM verify error	<ul style="list-style-type: none"> • NVRAM defective
826	1501	Clock error	<ul style="list-style-type: none"> • Optional NVRAM defective
826	15FF	RTC non-detection error	<ul style="list-style-type: none"> • Incompatible NVRAM installed • NVRAM battery defective
826	0201	Resident memory verify error	<ul style="list-style-type: none"> • Memory on controller board defective • RAM DIMM defective
828	0101	Boost trap code (CODE) error	<ul style="list-style-type: none"> • Software storage error (re-install software) • Controller board defective
828	0104	ROM FS error	<ul style="list-style-type: none"> • ROM device error
828	0105	Forgery prevention error	<ul style="list-style-type: none"> • Forgery prevention chip defective • Forgery prevention chip error • Replace the controller, ROM, or RAM DIMM
829	0301	Option memory 0 verify error	<ul style="list-style-type: none"> • Controller board internal memory error • RAM DIMM defective
829	0302	Option memory 0 configuration information error	
835	1102	Verify error	<ul style="list-style-type: none"> • Loopback connector error (controller board defective)
835	110C	DMA verify error	<ul style="list-style-type: none"> • Loopback connector error • Controller board defective
835	1120	Loopback connector non-detection	<ul style="list-style-type: none"> • Loopback connector not set • Loopback connector error • Controller board defective
836	1601	Font ROM 0 error	
837	1602	Font ROM 1 error	
838	2701	Verify error	

SC No.		Symptom	Possible Cause
853	D	IEEE802 11b card startup error	
		Not used.	
854	D	IEEE802 11b card access error	
		Not used.	
855	D	IEEE802 11b card error	
		Not used.	
856	D	IEEE802 11b card connection board error	
		Not used.	
870	B	Address book data error	
		<p>The address book in the hard disk is accessed. → An error is detected in the address book data; address book data is not read; or data is not written into the address book.</p> <p>NOTE: To recover from the error, do any of the following countermeasures:</p> <p>Format the address book by using SP5-832-008 (all data in the address book—including the user codes and counters—is initialized)</p> <p>Initialize the user data by using SP5-832-006 and -007 (the user codes and counters are recovered when the main switch is turned on).</p> <p>Replace the hard disk (the user codes and counters are recovered when the main switch is turned on).</p>	<ul style="list-style-type: none"> • Data corruption • Defective hard disk • Defective software
920	D	Printer error	
		The printer program cannot be continued.	<ul style="list-style-type: none"> • Defective hardware • Data corruption • Defective software
925	D	Net file error	
		<p>The management file for net files is corrupted; net files are not normally read.</p> <p>Netfiles: Jobs to be printed from the document server using a PC and the DeskTopBinder software</p>	<ul style="list-style-type: none"> • Defective hardware • Data corruption • Defective software
992	C	Other system SCs	
		The controller received an unknown SC code from the engine.	<ul style="list-style-type: none"> • Contact your product specialist.
993	D	Network error	
		The ASIC program of GW controller cannot be continued.	<ul style="list-style-type: none"> • Defective ASIC • Defective GW controller

4.3 B140/B246 SERIES SERVICE MODE

4.3.1 SERVICE MODE LOCK/UNLOCK

At locations where the machine contains sensitive data, the customer engineer cannot operate the machine until the Administrator turns the service mode lock off. This function makes sure that work on the machine is always done with the permission of the Administrator.

NOTE: This function is not used on B064 series machines.

1. If you cannot go into the SP mode, ask the Administrator to log in with the User Tool and then set "Service Mode Lock" to OFF. After he or she logs in:
User Tools > System Settings > Administrator Tools > Service Mode Lock > OFF
 - This unlocks the machine and lets you get access to all the SP codes.
 - The CE can do servicing on the machine and turn the machine off and on. It is not necessary to ask the Administrator to log in again each time the machine is turned on.
2. If you must use the printer bit switches, go into the SP mode and set SP 5169 to "1".
3. After machine servicing is completed:
 - Change SP 5169 from "1" to "0".
 - Turn the machine off and on. Tell the administrator that you completed servicing the machine.
 - The Administrator will then set the "Service Mode Lock" to ON.

4.3.2 B140/B246 SERIES SERVICE CALL CONDITIONS

There are 4 levels of service call conditions.

Level	Definition	Reset Procedure
A	Fusing unit SCs displayed on the operation panel. The machine is disabled. The user cannot reset the SC.	Enter SP mode, then turn the main power switch off and on.
B	SCs that disable only the features that use the defective item. Although these SCs are not shown to the user under normal conditions, they are displayed on the operation panel only when the defective feature is selected.	Turn the main power switch off and on.
C	SCs that are not shown on the operation panel. They are internally logged.	Logging only
D	Turning the operation switch or main power switch off then on resets SCs Displayed on the operation panel. These are re-displayed if the error occurs again.	Turn the operation switch or main power switch off and on.

4.3.3 B140/B246 SERIES SC CODE DESCRIPTIONS

Important

- If a problem concerns electrical circuit boards, always disconnect then reconnect the connectors before replacing the PCBs.
- If a motor lock error occurs, first check the mechanical load before replacing motors or sensors.
- When a Level "A" or "B" SC occurs while in an SP mode, the display does not display the SC number. If this occurs, check the SC number after leaving the SP mode.

How to Read These Tables

Most of the SC codes in these tables apply to both the B140 Series and B246 Series machines. However, there are some differences. These differences are annotated:

- If an SC code applies to the B140 Series machine only, this SC will be marked "B140" to the right of the number.
- If an SC code applies to the B246 Series machine only, this SC will be marked "B246".
- If there is neither a "**B140**" nor "**B246**" notation, the SC code applies to both machines.
- Pay special attention to the "**B140/B246** Duplicated Number" notation. The same number SC codes exists in both machines but the meaning is different.

SC100: Scanning System

SC No.		Symptom	Possible Cause
101	D	Exposure Lamp Error	
		At trigger on, the lamp was not detected on.	<ul style="list-style-type: none"> • Exposure lamp defective • Lamp regulator defective • Lamp regulator harness damaged, disconnected • Dirty standard white plate • Scanner mirror dirty or out of position • Lens dirty, out of position • SBU board defective
120	D	Scanner home position error 1	
		The scanner HP sensor does not detect the on condition during initialization or copying.	<ul style="list-style-type: none"> • BCU, SDRB (Scanner Driver Board) defective • Scanner motor defective • Harness between BCU, SDRB, scanner motor disconnected. • Scanner HP sensor defective. • Harness between scanner HP sensor and BCU disconnected. • Scanner wire, timing belt, pulley, carriage installed incorrectly.
121	D	Scanner home position error 2	
		The scanner HP sensor does not detect the off condition during initialization or copying.	<ul style="list-style-type: none"> • BCU, SDRB (Scanner Driver Board) defective • Scanner motor defective • Harness between BCU, SDRB, scanner motor disconnected • Scanner HP sensor defective • Harness between scanner HP sensor and BCU disconnected • Scanner wire, timing belt, pulley, carriage installed incorrectly.
122	D	Scanner home position error 3	
		The scanner home position sensor does not detect the on condition during original scanning.	<ul style="list-style-type: none"> • BCU, SDRB (Scanner Driver Board) defective • Scanner motor defective • Harness between BCU, SDRB, scanner motor disconnected • Scanner HP sensor defective • Harness between scanner HP sensor and BCU disconnected • Scanner wire, timing belt, pulley, carriage installed incorrectly

123	D	Scanner home position error 4	
		The scanner home position sensor does not detect the off condition during original scanning.	<ul style="list-style-type: none"> • BCU, SDRB (Scanner Driver Board) defective • Scanner motor defective • Harness between BCU, SDRB, scanner motor disconnected • Scanner HP sensor defective • Harness between scanner HP sensor and BCU disconnected • Scanner wire, timing belt, pulley, carriage installed incorrectly.
143	C	SBU auto adjust error	
		Automatic adjustment of the SBU fails when the machine is switched on.	<ul style="list-style-type: none"> • Exposure lamp defective • Exposure lamp regulator defective • Harness between exposure lamp and lamp regulator is disconnected • White plate installed incorrectly or is dirty • Scanning mirrors of the exposure unit are dirty or out of position • SBU board defective • VIB board defective. • Harness between SBU, VIB disconnected • Harness between VIB, BCU disconnected
144	D	SBU transmission error	
		After the SBU switches on, the BCU detects one of the following conditions on the SBU: <ul style="list-style-type: none"> • 1 s after power on, the SYDI signal does not go high, even after 1 retry. • 1 s after power on, the SYDI signal goes high, but the SBU ID could not be read after 3 attempts. 	<ul style="list-style-type: none"> • SBU defective • VIB defective • Harness (40-pin shielded) between the SBU, VIB is disconnected • Harness (shielded cable) between the VIB, BCU is disconnected
165		Copy data security unit error B828	B246
		The copy data security option is installed by not operating correctly.	<ul style="list-style-type: none"> • Copy data security card corrupted • The board is not installed or the board is defective • IPU board defective

181	D	CIS lamp abnormal	
		<p>After the CIS lamp trigger goes on, the CIS lamp is not detected on. Detecting the lamp on or off determines the peak white level value for shading correction. (If the peak level is determined to be below a certain level, the CIS lamp is judged to be off.)</p>	<ul style="list-style-type: none"> • CIS lamp defective • CIS power supply board defective • CIS lamp regulator defective • Harness between lamp and lamp regulator is disconnected. • Harness between CIS, ADF is disconnected • CIS exposure glass dirty. • White roller dirty or installed incorrectly • CIS unit defective
183	C	CIS auto adjust error	
		Automatic adjustment of the CIS unit failed.	<ul style="list-style-type: none"> • CIS unit defective • CIS exposure glass dirty • White roller dirty or installed incorrectly
184	D	CIS transmission error	
		<p>When the CIS is powered on, the ADF detects one of the following abnormal conditions on the CIS unit:</p> <ul style="list-style-type: none"> • The SOUT signal does not go high within 1 s after power on. • The SOUT signal goes high within 1 s after power on, but the SBU ID cannot be read after 3 attempts. 	<ul style="list-style-type: none"> • CIS unit defective • Harness between the CIS, ADF is disconnected

SC200: Exposure

202		Polygon mirror motor error 1: Timeout at ON	B246
		The polygon mirror motor unit did not enter "Ready" status within 20 sec. after the motor was turned on, or within 20 sec. after the speed of rotation was changed.	<ul style="list-style-type: none"> • The polygon mirror motor PCB connector is loose, broken, or defective • Polygon mirror motor PCB defective • Polygon mirror motor defective • IPU defective
203		Polygon mirror motor error 2: Timeout at OFF	B246
		The polygon mirror motor did not leave "Ready" within 3 sec. after the motor was switched off. (The XSCRDY signal did not go HIGH (inactive) within 3 sec.)	<ul style="list-style-type: none"> • The polygon mirror motor PCB connector is loose, broken, or defective • Polygon mirror motor PCB defective • Polygon mirror motor defective • IPU defective
204		Polygon mirror motor error 3: XSCRDY signal error	B246
		The polygon mirror motor "Ready" signal went inactive (HIGH) while the motor was operating at normal speed, even though the motor was neither switched off nor was there a request for a change in speed.	<ul style="list-style-type: none"> • Electrical oise interference on the line with the motor signals • Polygon mirror motor PCB connector loose, broken, defective • Polygon mirror motor PCB defective • Polygon mirror motor defective
205		Polygon mirror motor error 4: Unstable timeout	B246
		The "Ready" signal (XSCRDY) was detected as unstable for more than 20 sec. while the polygon mirror motor was operating at normal speed.	<ul style="list-style-type: none"> • Electrical noise on the line with the motor signals • Polygon mirror motor PCB connector loose, broken, defective • Polygon mirror motor PCB defective • IPU defective
220		Laser synchronization detection error	B246
		<p>The 1st laser synchronization detection unit could not detect the line synchronization signal (DETP0) within 500 ms while the polygon mirror motor was operating at normal speed.</p> <p>Note: The unit polls for the signal every 50 ms. This SC is issued after the 10th attempt fails to detect the signal.</p>	<ul style="list-style-type: none"> • Laser synchronization board connector loose, broken, defective • Laser synchronization detection board is not installed correctly (out of alignment) • Laser synchronization board defective • IPU defective

Troubleshooting

SC300: Image Development System (1)

SC No.		Symptom	Possible Cause
300	D	Charge corona output error	
		The feedback voltage from the charge corona unit is detected too high 9 times.	<ul style="list-style-type: none"> • Charge corona power pack defective • Charge corona harness disconnected • Poor charge corona unit connection
303	C	Charge corona grid leak	
		When the high voltage is output to the corona grid, feedback voltage exceeds the prescribed value 9 times.	<ul style="list-style-type: none"> • Charge corona power pack defective • Charge corona harness disconnected • Poor charge corona unit connection
304	D	Charge grid circuit open	
		When high voltage goes to the corona grid, feedback voltage is more than the set value 9 times. This feedback voltage is used to update PWM for output control.	<ul style="list-style-type: none"> • Charge corona unit defective or disconnected • Charge corona harness defective • Charge corona power pack is defective.
305	D	Charge corona wire cleaner error 1	
		The charge cleaner pad does not arrive at the home position: <ul style="list-style-type: none"> • Motor locked within 4 s after switching on, or does not lock within 30 s. • Motor locked within 10 s after reversing, or does not lock within 30 s. 	<ul style="list-style-type: none"> • Charge corona wire cleaner motor defective • Motor driver defective
306	C	Charge corona wire cleaner error 2	
		Charge coronal motor is disconnected. (The current at the charge corona motor is detected less than 83 mA.)	<ul style="list-style-type: none"> • Charge corona wire cleaner motor connector is defective, connected.

NOTE: When SC310~SC317 are logged, the machine halts without displaying the SC number. These SC codes log an abnormal condition at the potential sensor only when SP3901 (Auto Process Control) is set to on.

SC No.		Symptom	Possible Cause
310	D	Potential sensor calibration error 1	
		During drum potential sensor calibration, the drum potential sensor output voltage does not meet specification when test voltages (–100V, –800V) are applied to the drum.	<ul style="list-style-type: none"> • Potential sensor defective • Potential sensor harness disconnected • Potential sensor connector defective or disconnected • IOB defective • OPC connector defective • Development power pack defective

311	C	Potential sensor calibration error 2	
		During drum potential sensor calibration, the drum potential sensor output voltage does not meet specification when test voltages (–100V, –800V) are applied to the drum.	<ul style="list-style-type: none"> • Potential sensor defective • Potential sensor harness disconnected • Potential sensor connector defective or disconnected • IOB defective • OPC connector defective • Development power pack defective
312	C	Potential sensor calibration error 3	
		<p>During drum potential sensor calibration when adjusting the drum potential (VD), the drum potential sensor detects VD higher than VG (grid voltage).</p> <p>-or-</p> <p>When adjusting VD (drum surface potential of black areas after exposure), even after 5 adjustments of VG (charge corona grid potential), VD could not be set in the target range (–800±10 + VL + 130V)</p>	<ul style="list-style-type: none"> • Potential sensor defective • Potential sensor harness disconnected • Potential sensor connector defective or disconnected • IOB defective • OPC connector defective • Development power pack defective • Charge corona unit worn out, dirty
314	C	Potential sensor calibration error 4	
		<p>During drum potential sensor calibration when adjusting the drum potential (VH) for LD power adjustment, the first time the VH pattern is made, the drum potential sensor detects that VH is more than 500V:</p> <p>$VH > -500 + VL + 130 V$</p>	<ul style="list-style-type: none"> • Potential sensor defective • Potential sensor harness disconnected • Potential sensor connector defective or disconnected • IOB defective • OPC connector defective • LD defective
315	C	Potential sensor calibration error 5	
		During drum potential sensor calibration, when –100V is applied to the drum, the output value is out of the prescribed range.	<ul style="list-style-type: none"> • Potential sensor defective • Potential sensor harness disconnected • Potential sensor connector defective or disconnected • IOB defective • OPC connector defective • Development power pack defective
316	C	Potential sensor calibration error 6	
		During drum potential sensor calibration, when –800V is applied to the drum, the output value is out of the prescribed range.	<ul style="list-style-type: none"> • Potential sensor defective • Potential sensor harness disconnected • Potential sensor connector defective or disconnected • IOB defective • OPC connector defective • Development power pack defective

317	C	Potential sensor calibration error 7	
		During drum potential sensor calibration, when VL is adjusted, the pattern surface potential VL pattern is not within range 0V ~ -400V. (VL is the potential after exposing a white pattern.)	<ul style="list-style-type: none"> • Potential sensor defective • Potential sensor harness disconnected • Potential sensor connector defective or disconnected • IOB defective • OPC connector defective • Charge corona power pack defective • Development power pack defective
321	D	F-GATE error	B140 Only
		The laser writing signal (F-GATE) for the IPU does not go LOW within 60 s.	<ul style="list-style-type: none"> • BICU board defective • PCI bus between controller board, BICU board defective
322	D	Laser synchronization detector error	B140 Only
		After the polygon motor reaches standard rotation speed and the LD unit fires for 500 ms, the laser synchronization detector does not generate a signal.	<ul style="list-style-type: none"> • Harness between detector and I/F disconnected or damaged • Detector is installed incorrectly • Detector board is defective • IPU board defective
335	D	Polygon mirror motor error 1	B140 Only
		The ready signal does not go low within 20 s after the polygon mirror motor turns on or changes speed.	<ul style="list-style-type: none"> • Harness between I/F and polygon motor disconnected or defective • Polygon motor or polygon motor driver defective • IPU board defective
336	D	Polygon mirror motor error 2	B140 Only
		The ready signal does not go high within 20 s after the polygonal mirror motor turns off.	<ul style="list-style-type: none"> • Harness between I/F and polygon motor disconnected or defective • Polygon motor or polygon motor driver defective • IPU board defective
337	D	Polygonal mirror motor error 3	B140 Only
		The XSCRDY signal goes high while the polygon mirror motor turns on, even though there was no request to either turn off the motor or change the motor speed.	<ul style="list-style-type: none"> • Noise on the line where the polygon ready signal (XSCRDY) is transmitted. • Harness between the polygon motor and I/F disconnected or defective. • Polygon motor or polygon motor driver defective
338	D	Polygonal mirror motor error 4	B140 Only
		While the polygon motor is rotating, the XSCRDY signal goes high during exposure.	<ul style="list-style-type: none"> • Noise on the line where the polygon ready signal (XSCRDY) is transmitted. • Harness between the polygon motor and I/F disconnected or defective. • Polygon motor or polygon motor driver defective • IPU board defective

340	C	TD sensor output error	
		TD sensor output voltage (Vt), measured during each copy cycle, is detected 10 times at one of the following levels: Vt = 0.5 volts or lower Vt = 4.0 volts or higher	<ul style="list-style-type: none"> • TD sensor defective • TD sensor harness disconnected • TD sensor connector disconnected or defective • IOB defective • Toner bottle motor defective Note: When the TD sensor is defective, the toner supply is controlled using pixel count and the ID sensor.
341	D	TD sensor adjustment error 1	
		During the TD sensor auto adjustment, the TD sensor output voltage (Vt) is 2.5 volts or higher even though the control voltage is set to the minimum value (PWM = 0). When this error occurs, SP2-906-1 reads 0.00V. Note: This SC is released only after correct adjustment of the TD sensor has been achieved. Switching the machine off and on will cancel the SC display, but does not release ID sensor toner supply.	<ul style="list-style-type: none"> • TD sensor defective • TD sensor harness disconnected • TD sensor connector disconnected or defective • IOB defective • Toner bottle motor defective Note: When the TD sensor is defective, the toner supply is controlled using pixel count and the ID sensor.
342	D	TD sensor adjustment error 2	
		During the TD sensor auto adjustment, the TD sensor output voltage (Vt) does not enter the target range ($3.0 \pm 0.1V$) within 20 s. When this error occurs, the display of SP2-906-1 reads 0.00V. Note: This SC is released only after correct adjustment of the TD sensor has been achieved. Switching the machine off and on will cancel the SC display, but does not release ID sensor toner supply.	<ul style="list-style-type: none"> • TD sensor defective • TD sensor harness disconnected • TD sensor connector disconnected or defective • IOB defective
345	D	Development output abnormal	
		The high voltage applied to the development unit is detected 10 times higher than the upper limit (45%) of PWM.	<ul style="list-style-type: none"> • Development power pack defective • Development bias leak due to poor connection, defective connector
350	C	ID sensor error 1	
		One of the following ID sensor output voltages was detected twice consecutively when checking the ID sensor pattern. Vsp \geq 2.5V Vsg < 2.5 Vsp = 0V Vsg = 0	<ul style="list-style-type: none"> • ID sensor defective • ID sensor harness disconnected • ID sensor connector defective • IOB defective • ID sensor pattern not written correctly • Incorrect image density • Charge power pack defective • ID sensor dirty

351	C	ID sensor error 2	
		The ID sensor output voltage is 5.0V and the PWM signal input to the ID sensor is 0 when checking the ID sensor pattern.	<ul style="list-style-type: none"> • ID sensor defective • ID sensor harness disconnected • ID sensor connector defective • IOB defective • ID sensor pattern not written correctly • Incorrect image density • Charge power pack defective • ID sensor dirty
352	C	ID sensor error 3	
		For 2 s during the ID sensor pattern check, the ID sensor pattern edge voltage is not 2.5V or the pattern edge is not detected within 800 ms.	<ul style="list-style-type: none"> • ID sensor defective • ID sensor harness disconnected • ID sensor connector defective • IOB defective • ID sensor pattern not written correctly • Incorrect image density • Charge power pack defective • ID sensor dirty
353	C	ID sensor error 4	
		<p>One of the following ID sensor output voltages is detected at ID sensor initialization.</p> <ul style="list-style-type: none"> • $V_{sg} < 4.0V$ when the maximum PWM input (255) is applied to the ID sensor. • $V_{sg} \geq 4.0V$ when the minimum PWM input (0) is applied to the ID sensor. 	<ul style="list-style-type: none"> • ID sensor defective • ID sensor harness disconnected • ID sensor connector defective • IOB defective • ID sensor pattern not written correctly • Incorrect image density • Charge power pack defective • ID sensor dirty
354	C	ID sensor error 5	
		V_{sg} falls out of the adjustment target ($4.0 \pm 0.2V$) during V_{sg} checking.	<ul style="list-style-type: none"> • ID sensor defective • ID sensor harness disconnected • ID sensor connector defective • IOB defective • ID sensor pattern not written correctly • Incorrect image density • Charge power pack defective • ID sensor dirty
355	C	ID sensor error 6	
		The V_p value, which measures the reflectivity of the ID sensor pattern, was not in the range of $-70V$ to $-400V$.	<ul style="list-style-type: none"> • Potential sensor defective • Potential sensor harness defective • Potential sensor disconnected • IOB defective • OPC unit connector defective • Charge corona power pack defective • Charge corona wire dirty, broken

SC400: Image Development System (2)

SC No.		Symptom	Possible Cause
401	D	Transfer output abnormal	
		When the transfer is output, the feedback voltage remains higher than 4V for 60 ms.	<ul style="list-style-type: none"> Transfer power pack defective Transfer current terminal, transfer power pack disconnected, damaged connector
402	D	Transfer output abnormal release detection	
		When the transfer is output, there is hardly any feedback voltage within 60 ms even with application of 24% PWM.	<ul style="list-style-type: none"> Transfer power pack defective Transfer unit harness disconnected Transfer connector loose, defective
430	C	Quenching lamp error	
		At the completion of auto process control initialization, the potential of the drum surface detected by the potential sensor is more than -400V, the prescribed value.	<ul style="list-style-type: none"> Quenching lamp defective Quenching lamp harness disconnected Quenching lamp connector loose, defective
440	D	Main motor lock	
		The main motor lock signal remains low for 2 seconds while the main motor is on.	<ul style="list-style-type: none"> Drive mechanism overloaded Motor driver board defective
441	D	Development motor lock	
		The development motor lock signal remains high for 2 seconds while the development motor is on.	<ul style="list-style-type: none"> Drive mechanism overloaded due to toner clumping in the wasted toner path Motor driver board defective
		If this SC is returned on a machine in the field, inspect the toner supply unit coil. If the gear is not damaged replace the coil. If the gear is damaged, the gear shaft is probably deformed, so replace the entire unit.	
490	D	Main fan error	
		The main fan motor lock signal goes high for 5 s while the fan is on.	<ul style="list-style-type: none"> Fan motor overloaded due to obstruction Fan connector disconnected
495	D	Toner recycling unit error	
		Encoder pulse does not change for 3 s after the main motor switches on.	<ul style="list-style-type: none"> Waste toner transport has stopped due to motor overload Toner end sensor detective, disconnected
496	D	Toner collection bottle error	
		The toner collection bottle set switch remains off when the front door is closed.	<ul style="list-style-type: none"> No toner collection bottle set Poor connection of the switch connector
497	D	Toner collection motor error	
		The toner collection motor connector set signal remains off for 1 s.	<ul style="list-style-type: none"> Toner pump motor defective Motor connector loose, disconnected

Trouble-shooting

SC500: Feed, Transport, Duplexing, and Fusing Systems

SC No.		Symptom	Possible Cause
501	B	Tray 1 lift malfunction	
		<ul style="list-style-type: none"> The lift sensor is not activated within 10 seconds after the tray lift motor starts lifting the bottom plate. When the tray lowers, the tray lift sensor does not go off within 1.5 sec. Tray overload detected when the tray is set. The lower limit sensor of the LCT does not detect the lower limit within 10 sec. 	<ul style="list-style-type: none"> Tray lift motor defective, disconnected Paper or other obstacle trapped between tray and motor Pick-up solenoid disconnected, blocked by an obstacle Too much paper loaded in tray <p>Note (B246)</p> <ul style="list-style-type: none"> At first, the machine displays a message asking the operator to reset the tray. This SC will not display until the operator has pulled the tray out and pushed it in 3 times. If the operator cycles the machine off/on before the 3rd opening and closing of the tray, the 3-count is reset.
502	B	Tray 2 lift malfunction	
		<ul style="list-style-type: none"> The lift sensor is not activated within 10 seconds after the tray lift motor starts lifting the bottom plate. When the tray lowers, the tray lift sensor does not go off within 1.5 sec. Tray overload detected when the tray is set. 	<ul style="list-style-type: none"> Tray lift motor defective or disconnected Paper or other obstacle trapped between tray and motor Pick-up solenoid disconnected or blocked by an obstacle Too much paper loaded in tray <p>Note (B246)</p> <ul style="list-style-type: none"> At first, the machine displays a message asking the operator to reset the tray. This SC will not display until the operator has pulled the tray out and pushed it in 3 times. If the operator cycles the machine off/on before the 3rd opening and closing of the tray, the 3-count is reset.
503	B	Tray 3 lift malfunction	
		<ul style="list-style-type: none"> The lift sensor is not activated within 10 seconds after the tray lift motor starts lifting the bottom plate. When the tray lowers, the tray lift sensor does not go off within 1.5 sec. Tray overload detected when the tray is set. 	<ul style="list-style-type: none"> Tray lift motor defective or disconnected Paper or other obstacle trapped between tray and motor Pick-up solenoid disconnected or blocked by an obstacle Too much paper loaded in tray <p>Note (B246)</p> <ul style="list-style-type: none"> At first, the machine displays a message asking the operator to reset the tray. This SC will not display until the operator has pulled the tray out and pushed it in 3 times. If the operator cycles the machine off/on before the 3rd opening and closing of the tray, the 3-count is reset.

504	B	Tray 4 lift malfunction	
		<ul style="list-style-type: none"> • The lift sensor is not activated within 10 seconds after the tray lift motor starts lifting the bottom plate. • When the tray lowers, the tray lift sensor does not go off within 1.5 sec. • Tray overload detected when the tray is set. 	<ul style="list-style-type: none"> • Tray lift motor defective or disconnected • Paper or other obstacle trapped between tray and motor • Pick-up solenoid disconnected or blocked by an obstacle • Too much paper loaded in tray <p>Note (B246)</p> <ul style="list-style-type: none"> • At first, the machine displays a message asking the operator to reset the tray. • This SC will not display until the operator has pulled the tray out and pushed it in 3 times. • If the operator cycles the machine off/on before the 3rd opening and closing of the tray, the 3-count is reset.
507	B	LCT feed motor malfunction	
		<p>One of the following conditions is detected:</p> <ul style="list-style-type: none"> • The LD signal from the feed motor is detected abnormal for 50 ms after the motor switches on. • At power on, the motor is detected loose or disconnected. 	<ul style="list-style-type: none"> • Feed motor defective • Feed motor connector disconnected • Obstacle interfering with mechanical movement of motor.
510	B	LCT tray malfunction	
		<p>One of the following conditions is detected:</p> <ul style="list-style-type: none"> • When the bottom plate is lifted, the upper limit sensor does not come on for 18 s. • When the bottom plate is lowered, the lower limit sensor does not come on for 18 s. • After lift begins, the upper limit sensor does not switch on before the pick-up solenoid switches on. • The paper end sensor switches on during lift and the upper limit sensor does not switch on for 2.5 s, and a message prompts user to reset paper. 	<ul style="list-style-type: none"> • Tray lift motor defective or connector disconnected • Lift sensor defective or disconnected • Pick-up solenoid defective or disconnected • Paper end sensor defective

515	B	Tandem rear fence motor error	
		One of the conditions is detected: <ul style="list-style-type: none"> • The return sensor does not switch on within 10 sec. after the rear fence motor switches on. • The HP sensor does not switch on 10 sec. after the rear fence motor switches on. • The HP sensor and return sensor switch on at the same time. 	<ul style="list-style-type: none"> • Rear fence motor defective or poor connection • Paper or other obstacle interfering with operation of the sensors • Paper or other obstacle trapped between tray and motor • Motor mechanical overload due to obstruction • Return sensor or HP sensor defective or dirty Note (B246) <ul style="list-style-type: none"> • This problem will not issue the SC code on the operation panel. • The machine will prompt the operator to reset tray by opening and closing it. • If the problem persists, the machine will display again and the tray cannot be used.
520	C	Duplex jogger motor error 1	
		When the jogger fence moves to the home position, the jogger HP sensor does not turn on even if the jogger fence motor has moved the jogger fence 153.5 mm.	<ul style="list-style-type: none"> • Paper or other obstacle has jammed mechanism • Sensor connector disconnected or defective • Sensor defective
521	C	Duplex jogger motor error 2	
		When the jogger fence moves from the home position, the jogger fence HP sensor does not turn off even if the jogger motor has moved the jogger fence 153.5 mm.	<ul style="list-style-type: none"> • Paper or other obstacle has jammed mechanism • Sensor connector disconnected or defective • Sensor defective
531	D	Fusing exit motor error	
		The PLL lock signal was low for 2 seconds during motor operation.	<ul style="list-style-type: none"> • Motor lock caused by physical overload • Motor drive PCB defective
541	A	Fusing thermistor open	
		The fusing temperature detected by the center thermistor was below 0°C for 7 sec.	<ul style="list-style-type: none"> • Thermistor open • Thermistor connector defective • Thermistor damaged, or out of position • Fusing temperature –15% less than the standard input voltage
542	A	Fusing temperature warm-up error	
		One of the following occurred: <ul style="list-style-type: none"> • After power on, or after closing the front door, the hot roller does not reach the 100°C control temperature within 25 s. • 5 sec. after temperature rise started, temperature remained below 21°C after 5 samplings. • Fusing unit did not attain reload temperature within 48 sec. of the start of fusing temperature control. 	<ul style="list-style-type: none"> • Fusing lamp disconnected • Thermistor warped, out of position • Thermostat not operating





543	A	Fusing lamp overhear error 1 (software)	
		Central thermistor detected a temperature of 240°C at the center of the hot roller. Fusing temperature control software error	<ul style="list-style-type: none"> • PSU defective • IOB defective • BICU defective
544	A	Fusing lamp overhear error 1 (hardware)	
		The central thermistor or an end thermistor detected a temperature of 250°C on the hot roller.	<ul style="list-style-type: none"> • PSU defective • IOB defective • BICU defective
545	A	Fusing lamp overhear error 2	
		After hot roller reaches warmup temperature, the fusing lamps remained on at full capacity for 11 samplings (1.8 sec. duration) while the hot roller was not rotating.	<ul style="list-style-type: none"> • Thermistor damaged, or out of position • Fusing lamp disconnected
547	D	Zero cross signal malfunction	
		One of the following conditions is detected 10 times: <ul style="list-style-type: none"> • When the main switch is on, the frequency measured by the number of zero cross signals for 500 ms is larger than 66Hz or smaller than 45 Hz. • The interval between one zero cross signal and the next is 7.5 ms or shorter 3 times consecutively for 500 ms. 	<ul style="list-style-type: none"> • Noise on the ac power line
550	A	Fusing Web End	
		Web end detected 5 times within 500 ms and web motor continues to rotate 40 s. If web end is detected for another 500 ms, then the SC is logged.	<ul style="list-style-type: none"> • Web end (requires replacement) • Web end sensor defective Note: After replacing the web with a new one, reset SP1902 001 to "0" to release SC550.
551	A	Fusing thermistor error 1	
		The end thermistor (contact type) was less than 0C (32F) for more than 7 seconds.	<ul style="list-style-type: none"> • Thermistor disconnected • Thermistor connector defective
552	A	Fusing thermistor error 2	
		The end thermistor (contact type) could not detect: <ul style="list-style-type: none"> • 100°C 25 seconds after the start of the warmup cycle. • A change in temperature more than 16 degrees for 5 seconds. • The reload temperature with 56 seconds after the start of the fusing temperature control cycle. 	<ul style="list-style-type: none"> • Fusing lamp disconnected • Thermistor bent, damaged • Thermistor position incorrect

553	A	Fusing thermistor error 3	
		The end thermistor (contact type) was at 240°C (464°F) for more than 1 second. The temperature is read 10 times every sec. (at 0.1 sec. intervals).	<ul style="list-style-type: none"> • PSU defective • IOB control board defective • BICU control board defective
555	A	Fusing lamp error	
		After the start of the warmup cycle, a fusing lamp was at full power for 1.8 seconds but the hot roller did not turn.	<ul style="list-style-type: none"> • Thermistor bent, out of position • Fusing lamp disconnected • Circuit breaker opened
557		Zero cross signal error	B246
		High frequency noise was detected on the power line.	<ul style="list-style-type: none"> • No action required. The SC code is logged and the operation of the machine is not affected.
559	A	Fusing jam: 3 counts	B246
		At the fusing exit sensor the paper was detected late for three pulse counts (lag error), and SP1159 was on.	<p>This SC only occurs if SP1159 is on, and a jam occurred in the fusing unit for three consecutive sheets of paper.</p> <p>Remove the paper that is jammed in the fusing unit. Then make sure that the fusing unit is clean and has no obstacles in the paper feed path.</p>
569	D	Fusing pressure release motor error	
		During copying, the HP sensor could not detect the actuator, tried again 3 times and could not detect.	<ul style="list-style-type: none"> • Motor lock because of too much load • Motor driver defective • HP sensor defective, disconnected, connector defective, harness damaged
590	D	Toner collection motor error	
		The toner collection motor sensor output does not change for 3 seconds while the toner collection motor is on.	<ul style="list-style-type: none"> • Motor lock due to obstruction • Motor driver board defective • Motor connection loose, defective • Toner collection motor sensor disconnected, sensor defective • Rotational transmission shaft (φ6 x 30) missing
599	D	1-bin Exit Motor Error (Japan Only)	
		The transport lock sensor output does not change within 300 ms after the motor switches on.	<ul style="list-style-type: none"> • Motor overload • Motor driver defective

SC600: Data Communication

SC No.		Symptom	Possible Cause
610	D	BICU ⇔ ADF communication/timeout abnormal	
		After 1 data frame is sent to the ADF, an ACK signal is not received within 100 ms, and is not received after 3 retries.	<ul style="list-style-type: none"> Serial line connection unstable External noise on the line
611	D	BICU ⇔ ADF communication/break reception abnormal	
		During communication a break (Low) signal was received from the ADF.	<ul style="list-style-type: none"> Serial line connection unstable Harness disconnected or defective
612	D	BICU ⇔ ADF communication/command abnormal	
		A command that cannot be executed was sent from the main machine to the ADF.	<ul style="list-style-type: none"> A software error, result of an abnormal procedure.
620	D	BICU ⇔ ADF communication/timeout error	
		After 1 data frame is sent to the finisher MBX, an ACK signal is not received within 100 ms, and is not received after 3 retries.	<ul style="list-style-type: none"> Serial line connection unstable External noise on the line
621	D	BICU ⇔ Finisher communication/break error	
		During communication with the finisher MBX, the BICU received a break (Low) signal from the finisher.	<ul style="list-style-type: none"> Serial line connection unstable External noise on the line
623	D	BICU ⇔ Tray 1~4 communication/timeout error	
		After 1 data frame is sent to the trays, an ACK signal is not received within 100 ms, and is not received after 3 retries.	<ul style="list-style-type: none"> Serial line connection unstable External noise on the line
624	D	BICU ⇔ Tray 1~4 communication/break reception error	
		During communication with the finisher trays, the BICU received a break (Low) signal.	<ul style="list-style-type: none"> Serial line connection unstable External noise on the line
626	D	BICU ⇔ LCT communication/timeout error	
		After 1 data frame is sent to the LCT, an ACK signal is not received within 100 ms, and is not received after 3 retries.	<ul style="list-style-type: none"> Serial line connection unstable External noise on the line
627	D	BICU ⇔ LCT communication/break reception error	
		During communication with the LCT, the BICU received a break (Low) signal.	<ul style="list-style-type: none"> Serial line connection unstable External noise on the line

Trouble-
shooting



SC650		NRS Modem Communication Error	
		One of the following factors could be the cause of this error: <ul style="list-style-type: none"> • In the User Tools, check the settings for the dial-up user name and dial up password. • Modem has been disconnected. • Modem board disconnected. 	Check the following for a machine that is using Cumin (NRS modem): <ul style="list-style-type: none"> • An error was returned during the dialup connection • A network was detected at startup • At startup the machine detected that the NIB was disabled, or did not detect a modem board

NOTE: For more details about this SC code error, execute **SP5990** to print an SMC report so you can read the error code. The error code is not displayed on the operation panel. Here is a list of error codes:

Error	Problem	Solution
1	Failure to certify dial-up	In the User Tools, check the dial-up user and dial-up password settings
4	Illegal modem setting	Check the setting of SP5816 160 to determine whether the setting for the AT command is correct. If this SP setting is correct, then the problem is a bug in the software.
5	Poor connection due to low power supply on the line.	The problem is on the external power supply line, so there is no corrective action on the machine.
11	Data in the NVRAM became corrupted when the network enable switch and Cumin-M were enabled at the same time.	Use SP5985 1 and set the NIC to "0" (Disable) to disable the network board.
12	The modem board could not enable the NIB.	Replace the modem board.

SC No.		Symptom	Possible Cause
651		Illegal Remote Service Dial-up	
		An expected error occurred when Cumin-M dialed up the NRS Center.	<ul style="list-style-type: none"> • Software bug • No action is required because only the count is logged
670	D	Engine startup error	
		The machine engine, controlled by the BICU (Base Image Control Unit), was operating incorrectly when the machine was switched on or returned to normal operation from the energy save mode.	<ul style="list-style-type: none"> • Check the connections between BICU and controller • BICU defective • Controller board defective • PSU defective
672	B	Controller startup error	
		<ul style="list-style-type: none"> • After power on, the line between the controller and the operation panel did not open for normal operation. • After normal startup, communication with the controller stopped. 	<ul style="list-style-type: none"> • Controller stalled • Controller installed incorrectly • Controller board defective • Operation panel harness disconnected or defective

SC700: Peripherals

SC No.		Symptom	Possible Cause
700	D	ADF original pick-up error 1	
		Pick-up roller HP sensor signal does not change after the pick-up motor has turned on.	<ul style="list-style-type: none"> Pick-up roller HP sensor defective Pick-up motor defective Timing belt slipping, out of position ADF main board defective
701	D	ADF bottom plate motor error	
		<ul style="list-style-type: none"> Bottom plate position sensor does not detect the plate after the bottom plate lift motor switches on to lift the plate. Bottom plate HP sensor does not detect the plate after the bottom plate motor reverses to lower the plate. 	<ul style="list-style-type: none"> Bottom plate position sensor defective Bottom plate HP sensor defective Bottom plate motor defective ADF main board defective
720	D	Finisher transport motor error	
		The encoder pulse of the finisher transport motor does not change state (high/low) within 600 ms and does not change after 2 retries.	<ul style="list-style-type: none"> Finisher transport motor defective Transport motor harness disconnected, or defective Finisher main board defective
721	B	Finisher jogger motor error	
		<ul style="list-style-type: none"> The finisher jogger HP sensor remains de-activated for more 1,000 pulses when returning to home position. The finisher jogger HP sensor remains activated for more than 1,000 pulses when moving away from home position. 	<ul style="list-style-type: none"> Jogger HP sensor defective Jogger mechanism overload Jogger motor defective (not rotating) Finisher main board defective Harness disconnected or defective
723		Feed-Out Belt Motor (B478)	B246
		The pawl of the feed-out belt did not return to the home position during the prescribed time after 2 attempts to detect.	<ul style="list-style-type: none"> Stack feed-out belt HP sensor loose, broken, defective Feed-out belt motor defective Finisher control board defective
724	B	Finisher staple hammer motor error (B478)	
		The staple hammer motor did not return to the home position within the prescribed time (340 ms).	<ul style="list-style-type: none"> Staple hammer HP sensor loose, broken, defective Electrical overload on the stapler drive PCB elect Staple hammer motor defective Finisher main board defective

Trouble-
shooting

B140/B246 Duplicated Number

725	B	Finisher stack feed-out motor error	B140
		The stack feed-out belt HP sensor does not activate within the prescribed number of pulses after the stack feed-out motor turns on and does not activate after 2 retries.	<ul style="list-style-type: none"> Stack feed-out HP sensor defective Harness disconnected or defective Stack feed-out motor defective Finisher main board defective Motor overload
725		Exit guide motor	B246
		The status of the exit guide sensor did not change at the prescribed time during operation of the exit guide.	<ul style="list-style-type: none"> Exit guide open sensor loose, broken, defective. Exit guide motor defective Finisher main board defective

B140/B246 Duplicated Number

726	B	Finisher upper tray lift motor error	B140
		The paper height sensor does not activate within the prescribed time after the upper tray lift motor turns on, or the sensor remains on after the motor reverses to lower the tray.	<ul style="list-style-type: none"> Upper tray paper height sensor defective Sensor harness disconnected, defective Tray lift motor defective Finisher main board defective Tray lift motor overload
726		Front shift jogger motor error (B703)	B246
		The sides fences do not retract within the prescribed time after the shift jogger motor switches on. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.	<ul style="list-style-type: none"> Shift jogger motor disconnected, defective Shift jogger motor overloaded due to obstruction Shift jogger HP sensor disconnected, defective

B140/B246 Duplicated Number

727	B	Finisher stapler rotation motor error	B140
		The stapler motor switches on but the motor does not return to the home position within the prescribed number of pulses. After 2 counts, the SC is logged as a jam.	<ul style="list-style-type: none"> Stapler rotation motor defective Poor stapler rotation motor connection Stapler rotation sensor defective Finisher main board defective Rotation motor overload
727	B	Rear shift jogger motor (B703)	B246
		The side fences do not retract within the prescribed time after the shift jogger motor switches on. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.	<ul style="list-style-type: none"> Motor harness disconnected, loose, defective Motor defective Motor overload HP defective

728	B	Shift jogger retraction motor error (B703)	B246
		The side fences do not retract within the prescribed time after the retraction motor switches on. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.	<ul style="list-style-type: none"> • Motor harness disconnected, loose, defective • Motor defective • Motor overload • HP defective
729	D	Finisher punch motor error	B140
		The punch HP sensor does not activate within the prescribed time after the punch motor turns on.	<ul style="list-style-type: none"> • Punch HP sensor defective • Sensor harness disconnected, defective • Punch motor defective • Finisher main board defective • Poor punch motor overload

B140/B246 Duplicated Number

730	B	Finisher stapler movement motor error	B140
		The stapler HP sensor does activate within the prescribed time after the stapler motor turns on and moves the stapler away from home position. After 2 counts, the SC is logged as a jam.	<ul style="list-style-type: none"> • Stapler HP sensor defective • Sensor harness disconnected, defective • Stapler movement motor defective • Finisher main board defective • Stapler movement motor overload
730	B	Finisher Tray 1 shift motor error	B246
		The shift roller HP sensor of the upper tray does not activate within the prescribed time after the shift tray starts to move toward or away from the home position. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.	<ul style="list-style-type: none"> • Shift tray HP sensor of the upper tray disconnected, defective • Shift tray motor of the upper tray is disconnected, defective • Shift tray motor of the upper tray overloaded due to obstruction

Trouble-shooting

732	B	Finisher shift roller motor error	
		The shift roller HP sensor does not activate within the prescribed time after the shift roller motor turns on. After 2 counts, the SC is logged as a jam.	<ul style="list-style-type: none"> • Shift roller HP sensor defective • Sensor harness disconnected, defective • Shift roller motor defective • Finisher main board defective • Shift roller motor overload
733	D	Finisher lower tray lift motor error	
		After the lift motor switches on to lift the tray, paper height sensor 2 does not detect the top of the paper stack, or after the motor reverses to lower the stack the top of the stack remains detected (the status of paper height sensor 1 does not change). After 2 counts, the SC is logged as a jam.	<ul style="list-style-type: none"> • Paper height sensor 1 or 2 defective • Sensor harness disconnected, defective • Tray lift motor defective • Finisher main board defective • Tray lift motor overload

735	B	Finisher pre-stack motor error	
		<ul style="list-style-type: none"> The pre-stack motor starts but does not return to the home position within 400 pulses. After 2 counts, the SC is logged as a jam. Motor does not return to the home position within 280 pulses immediately before or after pre-stacking. After 2 counts, the SC is logged as a jam. 	<ul style="list-style-type: none"> Jogger HP sensor defective Sensor harnesses disconnected, defective Pre-stack motor defective Finisher main board defective Pre-stack motor overload
736	B	Finisher paper exit guide plate motor error	
		The paper exit guide plate motor starts but the paper exit guide plate HP sensor does not activate within 750 ms. After 2 counts, the SC is logged as a jam.	<ul style="list-style-type: none"> Guide plate HP sensor defective Sensor harness disconnected, defective Paper exit guide plate motor defective Finisher main board defective Guide plate motor overload.
737	B	Trimmed staple waste hopper full	
		The hopper that holds the waste from staple trimming is full.	<ul style="list-style-type: none"> Staple waste hopper full Staple waste sensor defective
738	B	Finisher pressure plate motor error	
		The pressure plate motor switches on but does not return to the home position within the prescribed time after 2 counts.	<ul style="list-style-type: none"> HP sensor defective Harness disconnected, defective Motor defective Finisher main board defective Motor overload
739	B	Finisher folder plate motor error	
		The folder plate motor turns on but the plate does not return to the home position within the prescribed time for 2 counts.	<ul style="list-style-type: none"> Plate HP sensor defective Harness disconnected, defective Folder plate motor defective Finisher main board defective Folder plate motor overload

B140/B246 Duplicated Number

740	B	Finisher front saddle-stitch stapler motor error	B140
		Saddle-stitch stapler motor fails to operate within 450 ms within 2 counts..	<ul style="list-style-type: none"> HP sensor defective Harness disconnected, defective Stapler motor defective Finisher main board defective Stapler motor overload
740	B	Finisher corner stapler motor error	B246
		The stapler motor does not switch off within the prescribed time after operating. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.	<ul style="list-style-type: none"> Staple jam Number of sheets in the stack exceeds the limit for stapling Stapler motor disconnected, defective

B140/B246 Duplicated Number

741	B	Finisher rear saddle-stitch stapler motor error	B140
		Saddle-stitch stapler motor fails to operate within 450 ms within 2 counts..	<ul style="list-style-type: none"> • HP sensor defective • Harness disconnected, defective • Stapler motor defective • Finisher main board defective • Stapler motor overload
741	B	Finisher corner stapler rotation motor error	B246
		The stapler does not return to its home position within the specified time after stapling. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.	<ul style="list-style-type: none"> • Stapler rotation motor disconnected, defective • Stapler rotation motor overloaded due to obstruction • Stapler rotation HP sensor disconnected, defective

B140/B246 Duplicated Number

742	B	Finisher jogger side fence motor error	B140
		The jogger motor turns on but the side fences do not return to the home position within 340 pulses for 2 counts.	<ul style="list-style-type: none"> • HP sensors defective • Harness disconnected, defective • Motor defective • Finisher main board defective • Motor overload
742	B	Finisher stapler movement motor error	B246
		The stapler HP sensor is not activated within the specified time after the stapler motor turned on. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.	<ul style="list-style-type: none"> • Stapler movement motor disconnected, defective • Stapler movement motor overloaded due to obstruction • Stapler HP sensor disconnected, defective

Trouble-
shooting

B140/B246 Duplicated Number

743	B	Finisher shift motor errors	B140
		For the optional jogger unit for the B706 finisher: During the return operation, the shift jogger motor or shift jogger fence lift motor did not return to the home position within the set number of pulses.	<ul style="list-style-type: none"> • HP sensor of shift jogger motor, harness, connector defective, or motor disconnected • HP sensor, harness, connector of retraction motor defective, or motor disconnected • Shift jogger motor defective • Shift jogger fence lift motor defective • Finisher main control board defective
743	B	Booklet stapler motor error 1	B246
		The front stapler unit saddle-stitch motor does not start operation within the specified time. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.	<ul style="list-style-type: none"> • Front motor disconnected, defective • Front motor overloaded due to obstruction

744	B	Booklet stapler motor error 2	B246
		The rear stapler unit saddle-stitch motor does not start operation within the specified time. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.	<ul style="list-style-type: none"> • Rear motor disconnected, defective • Rear motor overloaded due to obstruction

B140/B246 Duplicated Number

750	B	Cover interposer bottom plate motor error	B140
		<ul style="list-style-type: none"> • The bottom plate motor turns on to raise the bottom plate but the plate position sensor does not detect the plate within 3 s. • The bottom plate motor reverses to lower the bottom plate but the bottom plate HP sensor does not detect the plate within 3 s. 	<ul style="list-style-type: none"> • Bottom plate position sensor defective • Bottom plate HP sensor defective • Bottom plate motor defective • Cover sheet feeder main board defective • Harnesses disconnected, defective
750	B	Finisher tray 1 (upper tray lift) motor error	B246
		The upper tray paper height sensor does not change its status with the specified time after the tray raises or lowers. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.	<ul style="list-style-type: none"> • Tray lift motor disconnected, defective • Upper tray paper height sensor disconnected, defective • Finisher main board connection to motor loose • Finisher main board defective

B140/B246 Duplicated Number

753	B	Z-Folding unit error 3	B140
		The HP sensor of the upper stopper motor does not go off after the stopper moved 128.7 mm.	<ul style="list-style-type: none"> • Upper stopper motor defective • Upper stopper motor disconnected, connector defective • Upper stopper motor HP sensor disconnected, defective • Z-Fold main control board defective
753	B	Return roller motor error	B246
		Occurs during the operation of the lower tray pressure motor.	<ul style="list-style-type: none"> • Motor harness disconnected, loose, defective • Motor overloaded • Home position sensor harness disconnected, loose, defective • Home position defective

B140/B246 Duplicated Number

754	D	Z-Folding unit error 4	B140
		2000 ms after the fan motor switched on, the lock signal did not release.	<ul style="list-style-type: none"> • Fan motor defective • Fan motor disconnected • Fan motor locked because of too much load • Z-Fold main control board defective
754		Z-Fold Unit Fan Motor Error	B246
		The motor lock signal failed to release within 2 sec. after the Z-fold unit fan motor turned on.	<ul style="list-style-type: none"> • Fan motor connected loose, broken, defective • Fan motor defective • Fan blocked by an obstruction

755	B	Z-Folding unit error 5	B140
		The fold timing sensor does not operate correctly.	<ul style="list-style-type: none"> • Paper dust on the sensor • Sensor disconnected, defective • Reflector plate dirty, or out of position • Z-Fold main control board defective
756	B	Z-Folding unit error 6	B140
		The leading edge sensor does not operate correctly.	<ul style="list-style-type: none"> • Paper dust on the sensor • Sensor disconnected, defective • Reflector plate dirty, or out of position • Z-Fold main control board defective
757	B	Z-Folding unit error 7	B140
		The machine could not write to the EEPROM two times (one after the other).	<ul style="list-style-type: none"> • EEPROM defective, replace Z-Fold main control board
760	D	Finisher punch motor error	B246
		The punch HP sensor is not activated within the specified time after the punch motor turned on. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.	<ul style="list-style-type: none"> • Punch HP sensor disconnected, defective • Punch motor disconnected, defective • Punch motor overload due to obstruction
761	B	Finisher folder plate motor error	B246
		The folder plate moves but is not detected at the home position within the specified time. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.	<ul style="list-style-type: none"> • Folder plate HP sensor disconnected, defective • Folder plate motor disconnected, defective • Folder plate motor overloaded due to obstruction.
762	B	Finisher pressure plate motor error	B246
		Pressure plate motor operating but the plate is not detected at the home position within the specified time. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.	<ul style="list-style-type: none"> • Pressure plate HP sensor disconnected, defective • Pressure plate motor disconnected, defective • Pressure plate motor overloaded due to obstruction

**Trouble-
shooting**

763	D	Punch movement motor error	B246
		Occurs during operation of the punch unit. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.	<ul style="list-style-type: none"> • Motor harness disconnected, loose, defective • Motor defective
764	D	Paper position sensor slide motor error	B246
		Occurs during operation of the punch unit. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.	<ul style="list-style-type: none"> • Motor harness disconnected, loose, defective • Motor defective
765	B	Folding unit bottom fence lift motor	B246
		The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.	<ul style="list-style-type: none"> • Motor harness disconnected, loose, defective • Motor defective
766	B	Clamp roller retraction motor error	B246
		The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.	<ul style="list-style-type: none"> • Motor harness disconnected, loose, defective • Motor defective
767	B	Stack junction gate motor error	B246
		Occurs during operation of the punch unit. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.	<ul style="list-style-type: none"> • Motor harness disconnected, loose, defective • Motor overload • Motor defective
770	B	Cover interposer tray bottom plate motor error	B246
		<ul style="list-style-type: none"> • After the motor starts to raise the bottom plate, the bottom plate position sensor does not detect the plate at the specified time (3 s). • After the motor starts to lower the bottom plate, the bottom plate HP sensor does not detect the bottom plate. 	<ul style="list-style-type: none"> • Bottom plate position sensor, disconnected, defective • Bottom plate HP sensor disconnected, defective
780	B	Z-Fold feed motor error	B246
		The feed motor does not attain the prescribed speed within the specified time.	<ul style="list-style-type: none"> • Feed motor disconnected, defective • Feed motor overloaded due to obstruction • Feed motor lock
781	B	Z-Fold lower stopper motor	B246
		The lower stopper motor does not attain the prescribed speed within the specified time.	<ul style="list-style-type: none"> • Lower stopper motor disconnected, defective • Lower stopper motor overloaded due to obstruction • Lower stopper HP sensor disconnected, defective
782	B	Z-Fold upper stopper motor	B246
		The upper stopper was not detected at the home position after the motor remained on long enough to move it 128.7 mm.	<ul style="list-style-type: none"> • Upper stopper motor disconnected, defective • Upper stopper motor overloaded due to obstruction • Upper stopper HP sensor disconnected, defective

784		Z-fold timing unit fold timing sensor adjustment error	B246
		The A/D (Digital/Analog) input value did not change even after the D/A (Digital/Analog) output value changed.	<ul style="list-style-type: none"> • Fold timing sensor connector loose, broken, defective • Fold timing sensor defective • Fold timing sensor, mylar covered with paper dust • Mylar disconnected.
785		Z-fold leading edge sensor adjustment error	B246
		The A/D input value did not change even after the D/A output value changed.	<ul style="list-style-type: none"> • Leading edge sensor connector loose, broken, defective • Leading edge sensor defective • Leading edge sensor, mylar covered with paper dust • Mylar disconnected.
786		Z-fold EEPROM error	B246
		The write operation to the Z-folding EEPROM failed after 2 attempts	<ul style="list-style-type: none"> • EEPROM defective
790	B	Finisher staple trimming hopper full	B246
		The staple waste hopper is full of cut staples.	<ul style="list-style-type: none"> • If the hopper is full, empty the hopper • If the hopper is not full, the hopper full sensor is disconnected, defective

SC800: Overall System

SC No.		Symptom	Possible Cause
817	B	Monitor Error	
		This is a file detection and electronic file signature check error when the boot loader attempts to read the self-diagnostic module, system kernel, or root system files from the OS Flash ROM, or the items on the SD card in the controller slot are false or corrupted.	<ul style="list-style-type: none"> OS Flash ROM data defective; change the controller firmware SD card data defective; use another SD card

Error Codes

Code	Meaning
0x0000 0000	BIOS boot error
0x0000 0001	Primary boot start load error
0x0000 0002	Secondary boot load error (Boot3.Elf)
0x0000 0003	Self-diagnostic module error (Diag.Elf)
0x0000 0004	Kernel start error (Netbsd)
0x0000 0005	Root file system file read error (Rootfs)
0xffff ffff	Other error

Example: Data in the self-diagnostic module, system kernel, or root system files are corrupted or do not exist in OS flash ROM or on the SD card
Files in the self-diagnostic module, kernel, or root file system on the SD card have been falsified or altered

- Before discarding the SD card, try to update the data on the card. If the error occurs again, the card may be defective.
- Be sure to use an SD card that contains the correct electronic signature.

SC No.		Symptom	Possible Cause
818	D	Watchdog error	
		While the system program is running, a bus hold or interrupt program goes into an endless loop, preventing any other programs from executing.	<ul style="list-style-type: none"> System program defective; switch off/on, or change the controller firmware if the problem cannot be solved Controller board defective Controller option malfunction
819	D	Fatal kernel error	
		Due to a control error, a RAM overflow occurred during system processing. One of the following messages was displayed on the operation panel.	<ul style="list-style-type: none"> System program defective Controller board defective Optional board defective Replace controller firmware
		0x696e init died	
		0x766d vm_pageout: VM is full	
		4361 Cache Error	
		Other	

NOTE: For more details about this SC code error, execute SP5990 to print an SMC report so you can read the error code. The error code is not displayed on the operation panel.

SC No.		Symptom	Possible Cause
821	D	Self-diagnostic error 2: ASIC	
		The ASIC provides the central point for the control of bus arbitration for CPU access, for option bus and SDRAM access, for SDRAM refresh, and for management of the internal bus gate.	
		0B0 0	Error code 0xffff ffff is returned when the register Write & Verify check is executed on the ASIC mounted on the controller board. The ASIC controls the ROM and buses for other devices. <ul style="list-style-type: none"> • ASIC (controller board defective)
		0B0 6	ASIC not detected <ul style="list-style-type: none"> • ASIC defective • Poor connection between North Bridge and PCI I/F • Replace controller board
		0B1 0	Failed to initialize or could not read connection bus. Data in SHM register incorrect. <ul style="list-style-type: none"> • Connection bus defective • SHM defective • Replace controller board

NOTE: For more details about this SC code error, execute SP5990 to print an SMC report so you can read the error code. The error code is not displayed on the operation panel.

Trouble-
shooting

SC No.		Symptom	Possible Cause
822	B	Self-diagnostic error 3: HDD	
		3003	Check performed when HDD is installed: <ul style="list-style-type: none"> • HDD device busy for over 31 s. • After a diagnostic command is set for Sthe HDD, but the device remains busy for over 6 s. A diagnostic command is issued to the HDD device but the result is an erro <ul style="list-style-type: none"> • HDD defective • HDD harness disconnected, defective • Controller board defective
		3004	No response to the self-diagnostic command from the ASIC to the HDDs <ul style="list-style-type: none"> • HDD defective
		3013	Mandolin does not respond, the HDD device remains BUSY for more than 31 s, or the BUSY signal does not drop within 6 s after the diagnostic command is issued to the HDDs. <ul style="list-style-type: none"> • HDD defective • HDD connector loose or defective • Controller defective

SC No.		Symptom	Possible Cause
		3014 Error returned from HDD in response to the self-diagnostic command, Mandolin could not be located due to a read/write error at the HDD register.	<ul style="list-style-type: none"> HDD defective
824	D	Self-diagnostic error 4: NVRAM	
		NVRAM device does not exist, NVRAM device is damaged, NVRAM socket damaged	<ul style="list-style-type: none"> NVRAM defective Controller board defective NVRAM backup battery exhausted NVRAM socket damaged
826	D	Self-diagnostic error 6: NVRAM (option NVRAM)	
		1501 The difference between the 1 s measured for RTC in the NVRAM and the 1 s timeout of the CPU is out of range, or the NVRAM is not detected.	<ul style="list-style-type: none"> NVRAM defective NVRAM installed incorrectly
		15FE Backup battery error. Battery is exhausted or not within rated specification.	<ul style="list-style-type: none"> The battery is attached permanently to the controller board. Replace the controller board.
828	D	Self-diagnostic error 7: ROM	
		<ul style="list-style-type: none"> Measuring the CRC for the boot monitor and operating system program results in an error. A check of the CRC value for ROMFS of the entire ROM area results in an error. 	<ul style="list-style-type: none"> Software defective Controller board defective ROM defective

NOTE: For more details about this SC 833, SC834 error, execute SP5990 to print an SMC report so you can read the error code. The error code is not displayed on the operation panel. The additional error codes (0F30, 0F31, etc. are listed in the SMC report.

SC No.		Symptom	Possible Cause
833	D	Self-diagnostic error 8: Engine I/F ASIC	
0F30 0F31		ASIC (Mandolin) for system control could not be detected. After the PCI configuration, the device ID for the ASIC could not be checked.	<ul style="list-style-type: none"> ASCI (Mandolin) for system control is defective Interface between North Bridge and AGPI is defective Replace the mother board
0F41		The read/write check done for resident RAM on the mother board could not be done correctly.	<ul style="list-style-type: none"> Memory device defective Replace the mother board
50B1		Could not initialize or read the bus connection.	<ul style="list-style-type: none"> Bus connection defective, loose SSCG defective Replace the mother board
50B2		Value of the SSCG register is incorrect.	<ul style="list-style-type: none"> Bus connection loose, defective SSCG defective Replace the mother board
834	D	Self-diagnostic error 9: Optional Memory RAM DIMM	
5101		The write/verify check for the optional RAM chip on the engine mother board gave an error.	<ul style="list-style-type: none"> Controller defective Mother board defective
850	B	Net I/F error	

SC No.		Symptom	Possible Cause
		<ul style="list-style-type: none"> • Duplicate IP addresses. • Illegal IP address. • Driver unstable and cannot be used on the network. 	<ul style="list-style-type: none"> • IP address setting incorrect • NIB (PHY) board defective • Controller board defective
851	B	IEEE 1394 I/F error	
		Driver setting incorrect and cannot be used by the 1394 I/F.	<ul style="list-style-type: none"> • NIB (PHY), LINK module defective; change the Interface Board • Controller board defective
853	B	Wireless LAN Error 1	
		During machine start-up, the machine can get access to the board that holds the wireless LAN, but not to the wireless LAN card (802.11b or Bluetooth).	<ul style="list-style-type: none"> • Wireless LAN card missing (was removed)
854	B	Wireless LAN Error 2	
		During machine operation, the machine can get access to the board that holds the wireless LAN, but not to the wireless LAN card (802.11b or Bluetooth).	<ul style="list-style-type: none"> • Wireless LAN card missing (was removed)
855	B	Wireless LAN error 3	
		An error was detected on the wireless LAN card (802.11b or Bluetooth).	<ul style="list-style-type: none"> • Wireless LAN card defective • Wireless LAN card connection incorrect
856	B	Wireless LAN error 4	
		An error was detected on the wireless LAN card (802.11b or Bluetooth).	<ul style="list-style-type: none"> • Wireless LAN card defective • PCI connector (to the mother board) loose
857	B	USB I/F Error	
		The USB driver is not stable and caused an error.	<ul style="list-style-type: none"> • Bad USB card connection • Replace the controller board
860	B	HDD startup error at main power on	
		<ul style="list-style-type: none"> • HDD is connected but a driver error is detected. • The driver does not respond with the status of the HDD within 30 s. 	<ul style="list-style-type: none"> • HDD is not initialized • Level data is corrupted • HDD is defective
861	D	HDD re-try failure	
		At power on with the HDD detected, power supply to the HDD is interrupted, after the HDD is awakened from the sleep mode, the HDD is not ready within 30 s.	<ul style="list-style-type: none"> • Harness between HDD and board disconnected, defective • HDD power connector disconnected • HDD defective • Controller board defective

SC No.		Symptom	Possible Cause
863	D	HDD data read failure	
		The data written to the HDD cannot be read normally, due to bad sectors generated during operation.	<ul style="list-style-type: none"> HDD defective Note: If the bad sectors are generated at the image partition, the bad sector information is written to NVRAM, and the next time the HDD is accessed, these bad sectors will not be accessed for read/write operation.
864	D	HDD data CRC error	
		During HDD operation, the HDD cannot respond to an CRC error query. Data transfer did not execute normally while data was being written to the HDD.	<ul style="list-style-type: none"> HDD defective
865	D	HDD access error	
		HDD responded to an error during operation for a condition other than those for SC863, 864.	<ul style="list-style-type: none"> HDD defective.
866	B	SC card error 1: Confirmation	
		<p>The machine detects an electronic license error in the application on the SD card in the controller slot immediately after the machine is turned on.</p> <p>The program on the SD card contains electronic confirmation license data. If the program does not contain this license data, or if the result of the check shows that the license data in the program on the SD card is incorrect, then the checked program cannot execute and this SC code is displayed.</p>	<ul style="list-style-type: none"> Program missing from the SD card Download the correct program for the machine to the SD card
867	D	SD card error 2: SD card removed	
		The SD card in the boot slot when the machine was turned on was removed while the machine was on.	<ul style="list-style-type: none"> Insert the SD card, then turn the machine off and on.
868	D	SD card error 3: SC card access	
		An error occurred while an SD card was used.	<ul style="list-style-type: none"> SD card not inserted correctly SD card defective Controller board defective Note: If you want to try to reformat the SC card, use SD Formatter Ver 1.1.



870	B	Address book data error	
		Address book data on the hard disk was detected as abnormal when it was accessed from either the operation panel or the network. The address book data cannot be read from the HDD or SD card where it is stored, or the data read from the media is defective.	<ul style="list-style-type: none">• Software defective. Turn the machine off/on. If this is not the solution for the problem, then replace the controller firmware.• HDD defective.
		More Details <ul style="list-style-type: none">• Do SP5846 050 (UCS Settings – Initialize all Directory Info.) to reset all address book data.• Reset the user information with SP5832 006 (HDD Formatting– User Information).• Replace the HDDs.• Boot the machine from the SD card.	
873	B	HDD mail send data error	
		An error was detected on the HDD immediately after the machine was turned on, or power was turned off while the machine used the HDD.	<ul style="list-style-type: none">• Do SP5832-007 (Format HDD – Mail TX Data) to initialize the HDD.• Replace the HDD
874	D	Delete All error 1: HDD	
		A data error was detected for the HDD/NVRAM after the Delete All option was used. Note: The source of this error is the Data Overwrite Security Unit B660 running from an SD card.	<ul style="list-style-type: none">• Turn the main switch off/on and try the operation again.• Install the Data Overwrite Security Unit again. For more, see section “1. Installation”.• HDD defective
875	D	Delete All error 2: Data area	
		An error occurred while the machine deleted data from the HDD. Note: The source of this error is the Data Overwrite Security Unit B660 running from an SD card.	<ul style="list-style-type: none">• Turn the main switch off/on and try the operation again.
880	D	File Format Converter (MLB) error	
		A request to get access to the MLB was not answered within the specified time.	<ul style="list-style-type: none">• MLB defective, replace the MLB

Trouble-
shooting



SC900: Miscellaneous

SC No.		Symptom	Possible Cause
900	D	Electrical total counter error	B140
		The total counter contains something that is not a number.	<ul style="list-style-type: none"> • NVRAM incorrect type • NVRAM defective • NVRAM data scrambled • Unexpected error from external source
901	D	Mechanical total counter error	
		The mechanical counter is not connected.	<ul style="list-style-type: none"> • Mechanical total counter defective • Mechanical total counter connector not connected
910	D	External Controller Error 1	B140/B246
911	D	External Controller Error 2	
912	D	External Controller Error 3	
913	D	External Controller Error 4	
914	D	External Controller Error 5	
		The external controller alerted the machine about an error.	<ul style="list-style-type: none"> • Please refer to the instructions for the external controller.
919	B	External Controller Error 6 B140/B246	
		While EAC (External Application Converter), the conversion module, was operating normally, the receipt of a power line interrupt signal from the FLUTE serial driver was detected, or BREAK signal from the other station was detected.	<ul style="list-style-type: none"> • Power outage at the EFI controller • EFI controller was rebooted • Connection to EFI controller loose
920	B	Printer error 1	B140
		An internal application error was detected and operation cannot continue.	<ul style="list-style-type: none"> • Software defective; turn the machine off/on, or change the controller firmware • Insufficient memory
921	B	Printer error 2	B140
		When the application started, the necessary font was not on the SD card.	<ul style="list-style-type: none"> • Font not on the SC card

SC No.		Symptom	Possible Cause
925	B	NetFile Function Error	
		<ul style="list-style-type: none"> The NetFile file management on the HDD cannot be used, or a NetFile management file is corrupted and operation cannot continue. The HDDs are defective and they cannot be debugged or partitioned, so the Scan Router functions (delivery of received faxes, document capture, etc.), Fabric services, and other network functions cannot be used. (HDD status codes displayed on the debug console are described below.) 	<ul style="list-style-type: none"> HDD defective Power supply to machine cut occurred while writing data to HDD Software error Please refer to the detailed descriptions below for recovery procedures.

HDD Status Codes Displayed on Debug Console

Display	Meaning
(-1)	HDD not connected
(-2)	HDD not ready
(-3)	No level
(-4)	Partition type incorrect
(-5)	Error returned during level read or check
(-6)	Error returned during level read or check
(-7)	"filesystem" repair failed
(-8)	"filesystem" mount failed
(-9)	Drive does not answer command
(-10)	Internal kernel error
(-11)	Size of drive is too small
(-12)	Specified partition does not exist
(-13)	Device file does not exist

Trouble-shooting

Recovery Procedure 1

If the machine returns SC codes for HDD errors (SC860 ~ SC865), please follow the recovery procedures described for these SC codes.

Recovery Procedure 2

If the machine does not return one of the five HDD errors (SC860 ~ SC865), cycle the machine off and on. If this does not solve the problem, then initialize the NetFile partition on the HDD with **SP5832 011** (HDD Formatting – Ridoc I/F).

NetFiles: Jobs printed from the document server using a PC and DeskTopBinder

Before initializing the NetFile partition on the HDD please inform the client that:

1. Received faxes on the delivery server will be lost
2. All captured documents will be lost
3. DeskTopBinder/Print Job Manager/Desk Top Editor job history will be cleared
4. Documents stored on the document server, included scanned documents, will not be lost.
5. The first time the network accesses the machine, the management information must be reconfigured (this will require a significant amount of time).

Before initializing the Netfile partition with **SP5823 011**, do the following:

6. Enter the User Tools mode and execute "Delivery Settings" to print all received fax documents scheduled for delivery and delete them.
7. In the User Tools mode, execute Document Management> Batch Delete Transfer Documents.
8. Execute **SP5832 011** then cycle the machine off and on.

Recovery Procedure 3

If "Procedure 2" does not solve the problem, execute **SP5832 001** (HDD Formatting – All), then cycle the machine off and on.


Executing **SP5832 001** erases all document and address book data stored on the hard disks. Be sure to consult with the customer before executing this SP code.

Recovery Procedure 4

If "Recovery Procedures 1 to 3" fail to correct the problem, replace the HDD.

SC No.		Symptom	Possible Cause
953	D	Scanner image setting error	
		The settings required for image processing using the scanner are not sent from the IPU.	<ul style="list-style-type: none"> • Software defective
954	D	Printer image setting error	
		The settings required for image processing using the printer controller are not sent from the IPU.	<ul style="list-style-type: none"> • Software defective
955	D	Memory setting error	
		The settings that are required for image processing using the memory are not sent from the IPU.	<ul style="list-style-type: none"> • Software defective
964	D	Printer ready error	
		The print ready signal is not generated for more than 17 seconds after the IPU received the print start signal.	<ul style="list-style-type: none"> • Software defective
984	D	Print image data transfer error	
		After a data transfer begins from the controller to the engine via the PCI bus, the transfer does not end within 15 s.	<ul style="list-style-type: none"> • Controller (SIMAC) board defective • BICU defective • BICU ⇔ controller disconnected
985	D	Scanned image data transmission error	
		After a data transfer begins from the engine to the controller via the PCI bus, the transfer does not end within 3 s.	<ul style="list-style-type: none"> • Controller (SIMAC) board defective • BICU defective • BICU ⇔ controller disconnected
986	D	Software error 1	
		The write parameter received by the write module at the beginning of the setting table is NULL.	<ul style="list-style-type: none"> • Controller (SIMAC) board defective • BICU defective • BICU ⇔ controller disconnected
990	D	Software error 2	B140






SC No.		Symptom	Possible Cause
		The software performs an unexpected function and the program cannot continue.	• Software defective, re-boot ^{*1}
991	C	Software error 3	B140
		The software performs an unexpected function and the program cannot continue. However, unlike SC990, recovery processing allows the program to continue.	• Software defective, re-boot ^{*1}

^{*1}: In order to get more details about SC990 and SC991:

- 3) Execute SP7403 or print an SMC Report (SP5990) to read the history of the 10 most recent logged errors.
- 4) If you press the zero key on the operation panel with the SP selection menu displayed, you will see detailed information about the recently logged SC990 or SC991, including the software file name, line number, and so on. 1) is the recommended method, because another SC could write over the information for the previous SC.



SC No.		Symptom	Possible Cause
992	D	Software error 4: Undefined	B140
		An error not controlled by the system occurred (the error does not come under any other SC code).	<ul style="list-style-type: none"> • Software defective • Turn the machine power off and on. The machine cannot be used until this error is cleared.
SC994	C	Operation Panel Management Records Exceeded	B246
		An error occurred because the number of records exceeded the limit for images managed in the service layer of the firmware. This can occur if there are too many application screens open on the operation panel.	<ul style="list-style-type: none"> • No action required because this SC does not interfere with operation of the machine.
997	B	Cannot select application function	B140
		An application does not start after the user pushed the correct key on the operation panel.	<ul style="list-style-type: none"> • Software bug • A RAM or DIMM option necessary for the application is not installed or not installed correctly.
998	D	Application cannot start	B140
		Register processing does not operate for an application within 60 s after the machine power is turned on. No applications not start correctly, and all end abnormally.	<ul style="list-style-type: none"> • Software bug • A RAM or DIMM option necessary for the application is not installed or not installed correctly.

Trouble-shooting

4.3.4 JAM CODES

Here are lists of SC codes that are printed in the SMC report; they do not appear on the operation panel display.

Main Unit: Paper Jam Errors

No.	Check-In Failure (Paper Does Not Arrive)	No.	Check-Out Failure (Paper Remains)
1	Initial Jam (Power On)		
3	Tray 1 feed sensor	53	Tray 1 feed sensor
4	Tray 2 feed sensor	54	Tray 2 feed sensor
5	Tray 3 feed sensor	55	Tray 3 feed sensor
6	Tray 4 feed sensor (Japan Only)	56	Tray 4 feed sensor (Japan Only)
7	LCT feed sensor	57	LCT feed sensor
8	Transport sensor 1	58	Transport sensor 1
9	Transport sensor 2	59	Transport sensor 2
10	Transport sensor 3	60	Transport sensor 3
11	Transport sensor 4 (Japan Only)	61	Transport sensor 4 (Japan Only)
12	Relay sensor	62	Relay sensor
13	Registration sensor	63	Registration sensor
14	Fusing exit sensor		
15	Exit unit entrance sensor		
16	Exit unit	66	Exit unit
19	Exit unit entrance sensor	69	Exit unit entrance sensor
20	Duplex transport sensor 1		
21	Duplex transport sensor 2	71	Duplex transport sensor 2
22	Duplex transport sensor 3	72	Duplex transport sensor 3
23	Duplex inverter sensor	73	Duplex inverter sensor
24	1-Bin tray (Japan Only)	74	1-Bin tray (Japan Only)
34	Bypass paper end sensor		



Finisher B469 Jam Codes

No.	Location	Related SC Code
101	Entrance Sensor	
102	Proof Tray Exit Sensor	
103	Exit Sensor	
104	Staple Entrance Sensor	
105	Exit Sensor after jogging	
106	Stapler Unit 1	
109	Shift Motor	SC733
110	Jogger Fence Motor	SC722
111	Shift Roller or Guide Plate Motor	SC732, SC736
112	Stapler Movement or Stapler Rotation Motor	SC727, SC730
113	Stapler Unit 2	SC724
115	Feed Out Belt Motor	SC725
116	Punch Hole Motor	SC729

Finisher B468/B674 Jam Codes

No.	Location	Related SC Code
121	Entrance Sensor	
122	Proof Tray Exit Sensor	
123	Exit Sensor	
124	Staple Entrance Sensor	
125	Exit Sensor after jogging	
126	Stapler Unit 1	
127	Saddle Stitch Stapler Unit	
128	Saddle Stitch Stapler Unit	
129	Shift Motor	SC733, SC726
130	Jogger Fence Motor	SC722
131	Shift Roller or Guide Plate Motor	SC732, SC736
132	Stapler Movement or Stapler Rotation Motor	SC727, SC730
133	Stapler Unit 2	SC724, SC728, SC740, SC741
134	Folder Plate Motor	SC739
135	Feed Out Belt Motor	SC725
136	Punch Hole Motor	SC729

Trouble-
shooting

Finisher B478/B706 Jam Codes

No.	Location	Related SC Code
141	Entrance Sensor	
142	Proof Tray Exit Sensor	
143	Exit Sensor	
144	Staple Entrance Sensor	
145	Exit Sensor after jogging	
148	Upper Transport Motor	
149	Shift Motor	SC733, SC726
150	Jogger Fence Motor	SC722
151	Shift Roller or Guide Plate Motor	SC732, SC736
153	Stapler Unit	SC724, SC738, SC740, SC741
155	Feed Out Belt Motor	SC725
156	Punch Hole Motor	SC729
158	Z-Fold Jogger Motor (B706 Only)	

Mailbox B471 Jam Codes

No.	Location	Related SC Code
161	Vertical Transport Sensor 1 (CN201)	---
162	Vertical Transport Sensor 2 (CN204)	---
163	Vertical Transport Sensor 3 (CN209)	---
164	Vertical Transport Sensor 4 (CN2014)	---
165	Vertical Transport Sensor 5 (CN2019)	---

Cover Interposer Tray B470 Jam Codes

No.	Location	Related SC Code
166	Feed or Pull-out Sensor	---
167	Exit Sensor	---
168	Bottom Plate Position Sensor	SC750

Z-Folding Unit B660 Jam Codes

No.	Location	Related SC Code
169	Paper Feed Sensor: Paper Late	---
170	Paper Feed Sensor: Paper Remains	---
171	Fold Timing Sensor: Paper Late	---
172	Fold Timing Sensor: Paper Remains	---
173	Leading Edge Exit Sensor: Paper Late	---
174	Leading Edge Exit Sensor: Paper Remains	---
175	Upper Stopper Path Sensor: Paper Late	---
176	Upper Stopper Path Sensor: Paper Remains	---
177	Lower Exit Sensor: Paper Late	---
178	Lower Exit Sensor: Paper Remains	---
181	Upper Exit Sensor: Paper Late	---
182	Upper Exit Sensor: Paper Remains	---
183	Paper Fold Motor Lock	---
184	Lower Stopper Motor Lock	---
185	Upper Stopper Motor Lock	---

4.3.5 ADDITIONAL SC CODES PRINTED IN SMC REPORT

These codes are also used in the SMC report.

Codes that have the same number in this series are identified by an additional 4-digit hexadecimal number.

SC No.		Symptom	Possible Cause
820	0001	TLB conversion (store) exception error	Unexpected error in CPU device: <ul style="list-style-type: none"> • Controller board defective • Boot monitor or self-diagnostic program corrupted
820	0002	TLB miss (load) exception error	
820	0003	TLB miss (store) exception error	
820	0004	Read address exception error	
820	0005	Write address exception error	
820	0006	Command bus exception error	
820	0007	Data bus exception error	
820	0008	System call exception error	
820	0009	Break exception error	
820	000A	Illegal command exception error	
820	000B	Potential sensor exception error	
820	000C	Overflow exception error	
820	000D	UTLB miss exception error	
820	0010	Allocation 0 error	
820	0011	Allocation 1 error	
820	0012	Allocation 2 error	
820	0013	Allocation 3 error	
820	0014	Allocation 4 error	
820	0015	Allocation 5 error	
820	00FF	Non-initialization allocation error	<ul style="list-style-type: none"> • CPU defective • Local bus defective • Controller board defective
820	0601	Read address exception error	<ul style="list-style-type: none"> • CPU device error • Controller board defective
820	0602	Write address exception error	
820	0605	System call exception error	
820	0606	Break point exception error	<ul style="list-style-type: none"> • CPU device error • ASIC device error • Controller board defective
820	0607	Illegal command exception error	
820	060A	Allocation 0 mask exception error	
820	060B	Allocation 1 mask exception error	
820	060C	Allocation 2 mask exception error	
820	060D	Allocation 3 mask exception error	<ul style="list-style-type: none"> • CPU device error • Controller board defective
820	060E	Allocation 4 mask exception error	
820	0610	CPU timer 2 allocation set error	<ul style="list-style-type: none"> • CPU device error • Controller board defective
820	0612	ASIC allocation error	<ul style="list-style-type: none"> • ASIC device error • Controller board defective • Peripheral device defective
820	06FF	CPU master clock error	<ul style="list-style-type: none"> • CPU device error • Error in CPU initialization data (ASIC error) • Controller board defective

SC No.		Symptom	Possible Cause
820	0702	Command cache error	<ul style="list-style-type: none"> • CPU cache defective • Controller board defective • Memory error (insufficient speed)
820	0709	Data cache error	<ul style="list-style-type: none"> • CPU device error • Boot mode setting for CPU error • Controller defective • Insufficient memory
820	070A	Data cache clear error	
820	0801	TLB virtual address error	<ul style="list-style-type: none"> • CPU device defective (controller board defective)
820	0804	TLB global error	
820	0807	UTLB miss error	
820	0808	TLB read miss error	
820	0809	TLB write miss error	
820	080A	TLB mode file error	
820	4002	Single-precision calculation error	<ul style="list-style-type: none"> • CPU error (controller board defective)
820	4003	Double-precision calculation error	
820	4004	Exception error	
820	4005	Exception mask error	
822	3003	HDD timeout	<ul style="list-style-type: none"> • HDD defective • HDD connector disconnected, defective • ASIC device error (controller board defective)
822	3004	Self-diagnostic command error	<ul style="list-style-type: none"> • HDD defective
823	6101	MAC address SUM error	<ul style="list-style-type: none"> • NIB (PHY) board defective • Controller board defective
823	6104	PHY chip ID illegal	
823	6105	PHY loopback error	
824	1401	NVRAM verify error	<ul style="list-style-type: none"> • NVRAM defective
826	1501	Clock error	<ul style="list-style-type: none"> • Optional NVRAM defective
826	15FF	RTC non-detection error	<ul style="list-style-type: none"> • Incompatible NVRAM installed • NVRAM battery defective
826	0201	Resident memory verify error	<ul style="list-style-type: none"> • Memory on controller board defective • RAM DIMM defective
828	0101	Boost trap code (CODE) error	<ul style="list-style-type: none"> • Software storage error (re-install software) • Controller board defective
828	0104	ROM FS error	<ul style="list-style-type: none"> • ROM device error
828	0105	Forgery prevention error	<ul style="list-style-type: none"> • Forgery prevention chip defective • Forgery prevention chip error • Replace the controller, ROM, or RAM DIMM
829	0301	Option memory 0 verify error	<ul style="list-style-type: none"> • Controller board internal memory error • RAM DIMM defective
829	0302	Option memory 0 configuration information error	
835	1102	Verify error	<ul style="list-style-type: none"> • Loopback connector error (controller board defective)
835	110C	DMA verify error	<ul style="list-style-type: none"> • Loopback connector error • Controller board defective
835	1120	Loopback connector non-detection	<ul style="list-style-type: none"> • Loopback connector not set • Loopback connector error • Controller board defective
836	1601	Font ROM 0 error	
837	1602	Font ROM 1 error	
838	2701	Verify error	

SC No.		Symptom	Possible Cause
853	D	IEEE802 11b card startup error	
		Not used.	
854	D	IEEE802 11b card access error	
		Not used.	
855	D	IEEE802 11b card error	
		Not used.	
856	D	IEEE802 11b card connection board error	
		Not used.	
870	B	Address book data error	
		<p>The address book in the hard disk is accessed. → An error is detected in the address book data; address book data is not read; or data is not written into the address book.</p> <p>NOTE: To recover from the error, do any of the following countermeasures:</p> <p>Format the address book by using SP5-832-008 (all data in the address book—including the user codes and counters—is initialized)</p> <p>Initialize the user data by using SP5-832-006 and -007 (the user codes and counters are recovered when the main switch is turned on).</p> <p>Replace the hard disk (the user codes and counters are recovered when the main switch is turned on).</p>	<ul style="list-style-type: none"> • Data corruption • Defective hard disk • Defective software
920	D	Printer error	
		The printer program cannot be continued.	<ul style="list-style-type: none"> • Defective hardware • Data corruption • Defective software
925	D	Net file error	
		<p>The management file for net files is corrupted; net files are not normally read.</p> <p>Netfiles: Jobs to be printed from the document server using a PC and the DeskTopBinder software</p>	<ul style="list-style-type: none"> • Defective hardware • Data corruption • Defective software
992	C	Other system SCs	
		The controller received an unknown SC code from the engine.	<ul style="list-style-type: none"> • Contact your product specialist.
993	D	Network error	
		The ASIC program of GW controller cannot be continued.	<ul style="list-style-type: none"> • Defective ASIC • Defective GW controller

4.4 OTHER PROBLEMS (B064/B140/B246 SERIES)

4.4.1 BLOWN FUSE CONDITIONS

Fuse	Rating		Symptom at Power On
	115 V	210~230V	
FU1	2A/125V	6.3A/250V	Anti-condensation heater does not operate.
FU101	12A/125V	6.3A/250V	No response.
FU103	6.3A/125V	6.3A/250V	SC510 is displayed.
FU104	6.3A/125V	6.3A/250V	Nothing displayed on LCD.
FU105	6.3A/125V	6.3A/250V	"Door Open" is displayed.
FU106	6.3A/125V	6.3A/250V	ADF does not operate.
FU107	6.3A/125V	6.3A/250V	SC121 is displayed.
FU108	6.3A/125V	6.3A/250V	Finisher does not work.
FU109	6.3A/125V	6.3A/250V	"Door Open" is displayed.
FU110	6.3A/125V	6.3A/250V	SC510 is displayed.
FU111	6.3A/125V	6.3A/250V	Nothing is displayed on LCD.

4.4.2 COMMON PROBLEMS

Problem	Check	Inspect, Clean, Replace
Dirty Copies	Fusing Unit	Pressure roller
Jam – Fusing Unit	Fusing Unit	Hot roller
Jam – Fusing Unit	Fusing Unit	Hot roller strippers
Jam – Original	ADF	Pick-up, paper feed, separation rollers
Lines (black or white)	Around the Drum	Cleaning blade, cleaning brush
Misfeed – Fusing Unit	Fusing Unit	Hot roller
Offset	Fusing Unit	Hot roller
Poor separation	Transfer Belt Unit	Transfer belt, transfer belt cleaning blade
SC300 ~ SC306	Around the Drum	Charge corona wire, charge corona grid, charge corona wire cleaner.
Skew – Original	ADF	Pick-up, paper feed, separation rollers
Toner on transfer belt	Transfer Belt Unit	Transfer belt, transfer belt cleaning blade
Wrinkling	Fusing Unit	Pressure roller

4.4.3 FREQUENT PAPER JAMS

If there are frequent paper jams, check SP7504 in section “5. Service Tables”. If these locations have frequent jams, do the procedures described below.


Symptom 1: Jams when paper is fed from a by-pass tray that is not used frequently

If the customer does not use the by-pass tray frequently, the rollers can become worn.

1. Visually check the by-pass tray pick-up, feed, and separation rollers.
2. If these rollers are paler than the rollers in paper trays that are more frequently used, replace the rollers in the by-pass tray.

NOTE: For more details, see 3. Replacement and Adjustment, “3.11.12 By-Pass Tray Rollers.”

Symptom 2: Jams with noise from the paper feed unit

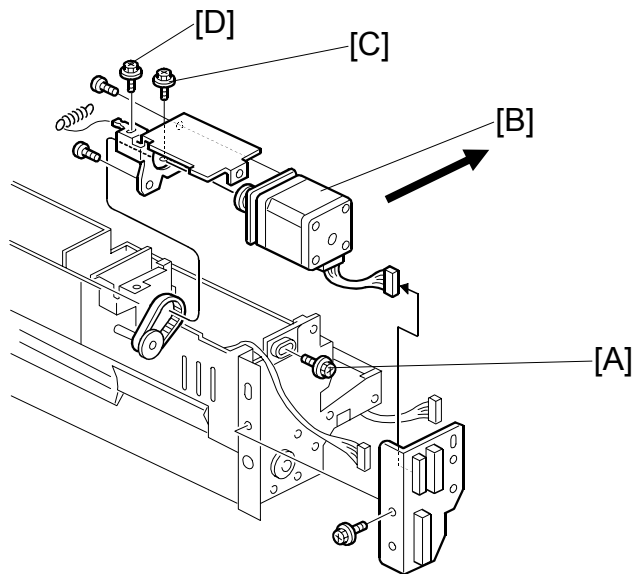

B246T905.WMF


1. Remove the paper feed unit. For details, see 3. Replace and Adjustment, “3.11.8 Paper Feed Unit.”
2. Loosen screw [A].
3. Push the motor [B] toward the tray side, then tighten the screw [A].
4. Loosen screws [C] and [D], let the spring move the unit to the correct position, then tighten the screws.

Symptom 3: Other

1. If none of the two symptoms 1 or 2 applies, do this procedure.
2. Use SP7504 to check the jam counts and find which SPs have high counts.
3. From the table and illustration below, find which gears must be replaced.
Example: For tray 1, if SP7504-012 is high, replace gear A, or if SP7504-008 is high, replace gear B.

Tray	SP7504 12	SP7504 8	SP7504 9	SP7504 10	SP7504 11
Tray 1	Gear [A]	Gear [B]			
Tray 2		Gear [A]	Gear [B]		
Tray 3			Gear [A]	Gear [B]	
Tray 4				Gear [A]	Gear [B]

4. Clean the shafts and replace the necessary gears.
5. Replace a gear if its cutout and arrow are not in the same position.

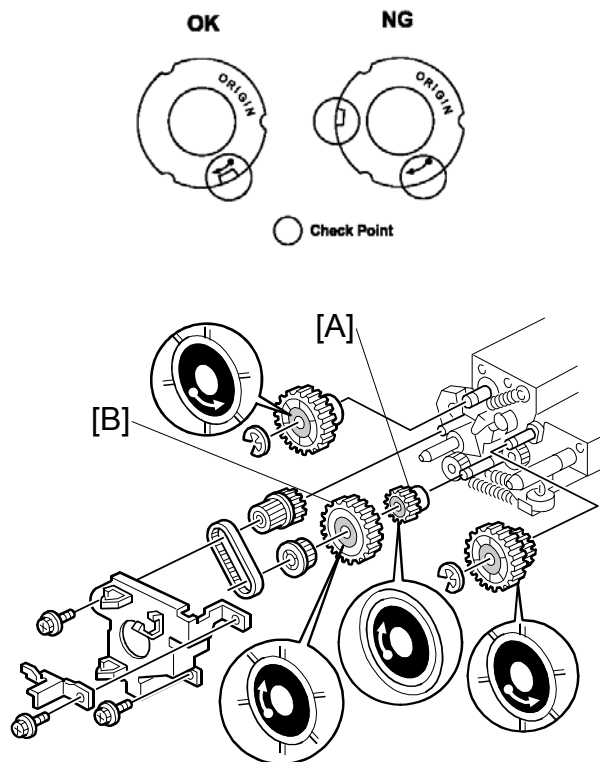

B246T906.WMF

6. When you replace Gear [A] or Gear [B], be sure to put the metal face on the outer side, and the arrow must be in view.
7. If a replacement gear is not available, do this as a temporary procedure:
 - 1) Remove the paper feed unit.
 - 2) Remove the gear.
 - 3) Clean the gear shaft and inside the gear.
 - 4) Attach the gear.
 - 5) Install the paper feed unit.

5. SERVICE TABLES

5.1 SERVICE PROGRAM MODE

5.1.1 SERVICE PROGRAM MODE OPERATION

The service program (SP) mode is used to check electrical data, change modes, and adjust values.

CAUTION

Never turn off the main power switch when the power LED is lit or flashing. To avoid damaging the hard disk or memory, press the operation power switch to switch the power off, wait for the power LED to go off, and then switch the main power switch off.



Service Mode Lock/Unlock

At locations where the machine contains sensitive data, the customer engineer cannot operate the machine until the Administrator turns the service mode lock off. This function makes sure that work on the machine is always done with the permission of the Administrator.



NOTE: This function is not used on B064 series machines.

1. If you cannot go into the SP mode, ask the Administrator to log in with the User Tool and then set "Service Mode Lock" to OFF. After he or she logs in:
User Tools > System Settings > Administrator Tools > Service Mode Lock > OFF
 - This unlocks the machine and lets you get access to all the SP codes.
 - The CE can do servicing on the machine and turn the machine off and on. It is not necessary to ask the Administrator to log in again each time the machine is turned on.
2. If you must use the printer bit switches, go into the SP mode and set SP 5169 to "1".
3. After machine servicing is completed:
 - Change SP 5169 from "1" to "0".
 - Turn the machine off and on. Tell the administrator that you completed servicing the machine.
 - The Administrator will then set the "Service Mode Lock" to ON.


To Enter and Exit the Service Mode

1. Press Clear Modes .
2. On the operation panel keypad, press ①⑦⑦.
3. Hold down Clear/Stop  for more than 3 seconds.
The Copy SP or PM Counter items are displayed. If the printer or scanner/printer option is installed, the Printer SP and Scanner SP items are also available.
To enter normal Copy SP mode, touch "Copy SP".
4. When you are finished, press "Exit" to exit the SP mode, then press again to return to the Copier Window.

To Enter and Exit the Super SP Mode

5. Press Clear Modes .
6. On the operation panel keypad, press ①⑦⑦.
7. Hold down Clear/Stop  for more than 3 seconds.
The Copy SP or PM Counter items are displayed. If the printer or scanner/printer option is installed, the Printer SP and Scanner SP items are also available.
8. Press "Copy SP" and the [#] on the operation panel together.
9. When you are finished, press "Exit" to exit the Super SP mode, then press "Exit" again to return to the Copier Window.

To Switch to the Copy Window for Test Printing

1. In the SP mode display, press Copy Window to switch to the copy operation screen when you need to select paper for a test print.
2. Use the copy window (copier mode) to select the appropriate settings (paper size, etc.) for the test print.
3. Press Start  to execute the test print.
4. Press SP Mode (highlighted) to return to the SP mode screen and repeat from step 1.

Using the SP Mode

SP command numbers can be entered directly (if you know the entire number) or the command can be selected from the menus.

Direct Entry

SP5831 (Initial Setting Clear) an executable SP that initializes the User Tools settings, can be executed immediately by just entering the numbers.

1. Press ⑤⑧③①.
2. Press Enter ②.
3. Press “Execute” on the touch panel.

If you know all seven digits of the SP code, enter the seven numbers and press Execute.


However, if you do not know all the numbers, enter only the first four numbers of the seven-digit SP and press Enter ②. The display goes immediately to the first SP of that group. Then you can use the buttons to browse to the desired selection.

Button Selection Entry

1. Refer to the SP Mode Tables at the end of this section to find the SP that you want to adjust.
2. Press the Group number on the left side SP Mode window that contains the SP that you want to adjust.
3. Use the scrolling buttons in the center of the SP mode window to display the SP number that you want to open, then press that number to expand the list.
4. Use the center touch-panel buttons to scroll to the number and title of the item that you want to set, and press ②. The small entry box on the right is activated and displays the default or the current setting below.
5. To enter a setting
 - Press ④ to enter a minus sign. Then use the keypad to enter the appropriate number. The number you enter will write over the previous setting.
 - Press ② to enter the setting. (If you enter a number that is out of range, the key press is ignored.)
 - When you are prompted to complete the selection, press Yes.
6. If you need to perform a test print, press Copy Window to open the copy window and select the settings for the test print. Press Start ⑤ twice, then press SP Mode (highlighted) in the copy window to return to the SP mode display.
7. When you are finished, press Exit twice to return to the copy window.

SP Mode Button Summary

Here is a short summary of the touch-panel buttons.

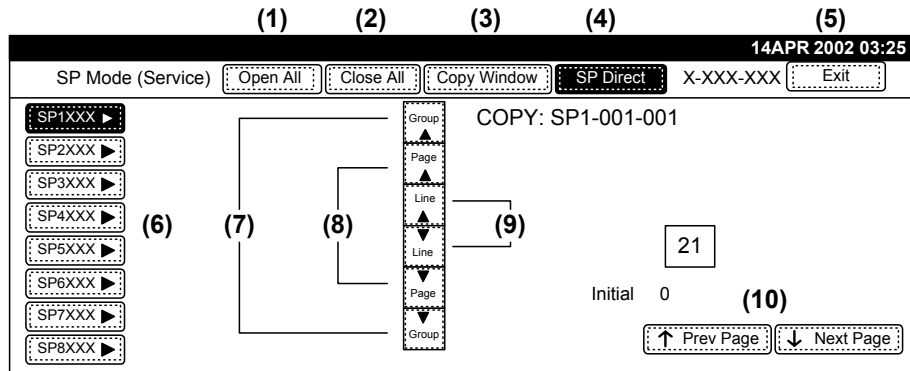

B246S901.WMF

- (1): **Open All.**
Opens all SP groups and sublevels.
- (2): **Close All.**
Closes all open groups and sublevels and restores the initial SP mode display.
- (3): **Copy Window.**
Opens the copy window (copy mode) so you can make test copies. To return to the SP mode screen, press SP Mode (highlighted) in the copy window.
- (4): **SP Direct.**
Enter the SP code directly with the number keys if you know the SP number, then press **#**. (SP Direct must be highlighted before you can enter the number. Just press SP Direct if it is not highlighted.)
- (5): **Exit.**
Press twice to leave the SP mode and return to the copy window to resume normal operation.
- (6): **SPnxxx.**
Press any group number to open a list of SP codes and titles for that group. For example, to open the SP code list for SP1-nnn, press SP1XXX. If an SP has sublevels, it is marked with a right pointing triangle.
- (7): **Group.**
Press to scroll the display to the previous or next group.
- (8): **Page.**
Press to scroll to the previous or next display in segments the size of the screen display (page).
- (9): **Line.**
Press to scroll the display to the previous or next line, line by line.
- (10): **Prev Page or Next Page.**
Press to move the highlight on the left to the previous or next selection in the list.

SP Mode Print (SMC Print)

You can print an SMC Report to check the machine's condition. The SMC Report gives a list of the SP commands and their settings.

5990	SP Print Mode (SMC Print)
	In the SP mode, push 'Copy Window' to move to the copy screen, select the paper size, then push Start. Select A4/LT (Sideways) or larger to make sure that all the information is printed. Push 'SP Window' to go back to the SP mode, select the necessary SP Print Mode, and push Execute.
001	All (Data List)
002	SP (Mode Data List)
003	User Program Data
004	Logging Data
005	Self-Diagnostic Report
006	Non-Default (Prints only SPs that are set to values other than defaults.)
007	NIB Summary (Configuration, Systemlog, Nvramlog)
008	Capture Log
021	Copier User Program (Copy Management Report)
022	Scanner SP
023	Scanner User Program (Scanner Management Report)

5.2 RESETS

5.2.1 MEMORY ALL CLEAR: SP5801

Before shipping, the SP mode data settings are printed in an SMC Report and attached to the exposure glass of the machine for your reference. Store this report in a safe place (next to the toner collection bottle, for example). It is a list of all the SP initial settings. Refer to this list if you need to initialize one or more SPs. The initial SP settings are also written in the SP mode tables at the end of this section.

As a rule, you should always print an SMC Report before initializing or adjusting the SP settings. The SMC Report provides a concise list of all the SP commands and their current settings. The report can be used for reference if the service manual is not available.

Executing Memory All Clear resets all the settings stored in the NVRAM to their default settings except the following:



SP7003-001 (B064)	Electrical total counter value
SP8381 (B140)	
SP5811-001:	Machine serial number
SP5907:	Plug & Play Brand Name and Production Name Setting

1. Execute SP5990 to print out all SMC Data Lists.
2. Open SP mode 5801.
3. Press the number for the item that you want to initialize. The number you select determines which application is initialized. For example, press 1 if you want to initialize all modules.

B064 Series

No.	What It Initializes	Comments
1	All modules	Initializes items 2 ~ 15 below.
2	Engine	Initializes all registration settings for the engine and copy process settings.
3	SCS (System Control Service) /SRM	Initializes default system settings, SCS settings, operation display coordinates, and ROM update information.
4	IMH	Initializes the image file system.
5	MCS (Memory Control Service)	Initializes the automatic delete time setting for stored documents.
6	Copier application	Initializes all copier application settings.
7	Fax application	Not used.
8	Printer application	Initializes the printer defaults, programs registered, the printer SP bit switches, and the printer CSS counter.
9	Scanner application	Initializes the defaults for the scanner and all the scanner SP modes.
10	Network application	Deletes the Netfile (NFA) management files and thumbnails, and initializes the Job login ID. Netfiles: Jobs to be printed from the document server using a PC and the DeskTopBinder software
11	NCS (Network Control Service)	Initializes the system defaults and interface settings (IP addresses also), the SmartNetMonitor for Admin settings, WebStatusMonitor settings, and the TELNET settings.
14	DCS	Initializes the DCS (Delivery & Receive Control Service) settings.
15	UCS	Initializes the UCS (User Directory Control Service) settings.

B140 Series

No.	What It Initializes	Comments
1	All Clear	Initializes items 2 ~ 15 below.
2	Engine Clear	Initializes all registration settings for the engine and copy process settings.
3	SCS	Initializes default system settings, SCS (System Control Service) settings, operation display coordinates, and ROM update information.
4	IMH Memory Clear	Initializes the image file system. (IMH: Image Memory Handler)
5	MCS	Initializes the automatic delete time setting for stored documents. (MCS: Memory Control Service)
6	Copier application	Initializes all copier application settings.
7	Fax application	Not used.
8	Printer application	Initializes the printer defaults, programs registered, the printer SP bit switches, and the printer CSS counter.
9	Scanner application	Initializes the defaults for the scanner and all the scanner SP modes.
10	Web Service/ Network application	Deletes the Netfile (NFA) management files and thumbnails, and initializes the Job login ID. Netfiles: Jobs to be printed from the document server using a PC and the DeskTopBinder software
11	NCS	Initializes the system defaults and interface settings (IP addresses also), the SmartNetMonitor for Admin settings, WebStatusMonitor settings, and the TELNET settings. (NCS: Network Control Service)
14	Clear DCS Setting	Initializes the DCS (Delivery Control Service) settings.
15	Clear UCS Setting	Initializes the UCS (User Information Control Service) settings.
16	MIRS Setting	Initializes the MIRS (Machine Information Report Service) settings.
17	CCS	Initializes the CCS (Certification and Charge-control Service) settings.

B246 Series

5801	Memory Clear (B246)	
	Resets NVRAM data to the default settings. Before executing any of these SP codes, print an SMC Report.	
001	All Clear	Initializes items 2 ~ 15 below.
002	Engine Clear	Initializes all registration settings for the engine and copy process settings.
003	SCS	Initializes default system settings, SCS (System Control Service) settings, operation display coordinates, and ROM update information.
004	IMH Memory Clear	Initializes the image file system. (IMH: Image Memory Handler)
005	MCS	Initializes the automatic delete time setting for stored documents. (MCS: Memory Control Service)
006	Copier application	Initializes all copier application settings.
007	Fax application	Initializes the fax reset time, job login ID, all TX/RX settings, local storage file numbers, and off-hook timer.
008	Printer application	Initializes the printer defaults, programs registered, the printer SP bit switches, and the printer CSS counter.
009	Scanner application	Initializes the defaults for the scanner and all the scanner SP modes.
010	Web Service/Network application	Deletes the Netfile (NFA) management files and thumbnails, and initializes the Job login ID. Netfiles: Jobs to be printed from the document server using a PC and the DeskTopBinder software
011	NCS	Initializes the system defaults and interface settings (IP addresses also), the SmartNetMonitor for Admin settings, WebStatusMonitor settings, and the TELNET settings. (NCS: Network Control Service)
012	R-FAX	Initializes the job login ID, SmartNetMonitor for Admin, job history, and local storage file numbers.
014	Clear DCS Setting	Initializes the DCS (Delivery Control Service) settings.
015	Clear UCS Setting	Initializes the UCS (User Information Control Service) settings.
016	MIRS Setting	Initializes the MIRS (Machine Information Report Service) settings.
017	CCS	Initializes the CCS (Certification and Charge-control Service) settings.
018	SRM Clear	Initializes the SRM (System Resource Manager) settings.
019	LCS Clear	Initializes the LCS (Log Count Service) settings.

4. Press Execute, then follow the prompts on the display to complete the procedure.
5. Make sure that you perform the following settings:
 - Execute SP2115 – Laser Beam Pitch Adjustment
 - Do the printer and scanner registration and magnification adjustments (☛ 3.14).
 - Do the touch screen calibration (☛ 3.15).
 - Referring to the SMC data lists, re-enter any values, which had been changed from their factory settings.
 - Execute SP3001-002 – ID Sensor Initial Setting
 - Make sure that SP 5112 is set to 'enabled', or the user will not be able to use non-standard paper sizes.
 - Set SP 1902 001 (amount of fusing unit web used so far) to the most recent setting (see the SMC list).
6. Check the copy quality and the paper path, and do any necessary adjustments.



5.2.2 SOFTWARE AND SETTING RESET

Software Reset

The software can be rebooted when the machine hangs up. Do one of these two steps.

Turn the main power switch off and on.

-or-

Push and hold down   together for over 10 seconds. When the machine beeps once, release both buttons. After "Now loading. Please wait" is displayed for a few seconds, the copy window will open. The machine is ready for operation.

Resetting the System

The system settings in the UP mode can be reset to their defaults with this procedure.

1. Make sure that the machine is in the copier standby mode.
2. Press the User Tools key.
3. Hold down the "#" key and touch the "System Setting" key.
4. A confirmation message will be displayed, then press "Yes".

Resetting Copy/Document Server Features Only

The copy/document server settings in the UP mode can be reset to their defaults with this procedure.

1. Make sure that the machine is in the copier standby mode.
2. Push the User Tools key.
3. Hold down the "#" key and touch the "Copy/Document Server Features" key.
4. A message will be displayed, then press "Yes".

Resetting Scanner Features Only

The scanner settings in the UP mode can be reset to their defaults with this procedure

1. Make sure that the machine is in the copier standby mode.
2. Push the User Tools key.
3. Hold down the "#" key and touch "Scanner Features" key.
4. A message will be displayed, then press "Yes"

5.3 TEST PATTERN PRINTING

5.3.1 PRINTING TEST PATTERN: SP2902-003

Some of these test patterns are used for copy image adjustments (☛ 3.14) but most are used primarily for design testing. These test patterns do not use the IPU.

NOTE: Do not operate the machine until the test pattern is printed out completely. Otherwise, an SC may occur.

1. Enter the SP mode and select SP2902-003.
2. Enter the number for the test pattern that you want to print and press Ⓢ . (See the table below.)
3. When you are prompted to confirm your selection, press Yes to select the test pattern for printing.
4. Press Copy Window to open the copy window, then select the settings for the test print (paper size, etc.)
5. Press Start Ⓢ twice (ignore the “Place Original” messages) to start the test print.
6. After checking the test pattern, press SP Mode (highlighted) to return to the SP mode display.
7. Exit the SP mode.

Test Pattern Table

These patterns can be selected for SP2902-003

No.	Test Pattern
0	None
1	Alternating Dot Pattern (1-dot)
2	Alternating Dot Pattern (2-dot)
3	Alternating Dot Pattern (4-dot)
4	Alternating Dot Pattern (1024-dot)
5	Grid Pattern (1-dot): 0ch
6	Grid Pattern (1-dot): 1ch
7	Grid Pattern (1-dot): 2ch
8	Grid Pattern (1-dot): 3ch
9	Grid Pattern (1-dot pair)
10	Checkered Flag Pattern
11	Horizontal Line (2-dot)
12	Vertical Line (2-dot)
13	Horizontal Line (1-dot)
14	Vertical Line (1-dot)
15	Cross Stitch (Horizontal)
16	Cross Stitch (Vertical)
17	Argyle Pattern
18	Trimming Area
19	Full Dot Pattern
20	Black Band (Vertical)
21	Black Band (Horizontal)
22	Stair
23	Blank Image
24	Grid Pattern (1-dot): 0ch (with external data)
25	Trimming Area (with external data)
26	Argyle Pattern (with external data)
27	Outside Data

5.3.2 IPU FRONT/BACK TEST PATTERNS: SP2902-001,002

- **Front side pattern** (SP2902-001). Generated by the IPU in place of data scanned from the front side of an original (CCD→SBU). Generated in the scanner image correction circuit.
- **Back side pattern**. (SP2902-002. Generated by the IPU in place of data scanner from the back side of an original (CIS→SBU). Generated in the scanner image correction circuit.

The IPU test patterns are primarily used for design purposes. However, they can be used as follows:

- To confirm that the IPU is processing images correctly.
- To fine tune the image processing parameters
- To help trace the causes of poor images. For example, if the IPU test patterns are normal when the machine is producing poor quality images, then the problem must be after the IPU.

1. Enter the SP mode, select SP2902.
2. Select 001 to print a test pattern for the front side, or select 002 to print a test pattern for the back side.
3. Scroll then select the number of the test pattern that you want to print (see the table below).
4. Press $\text{\textcircled{\#}}$.
5. Press Copy Window to open the copy window, then select the settings for the test print (paper size, etc.)
6. Press Start $\text{\textcircled{\text{S}}}$ to start the test print.
7. Press SP Mode (highlighted) to return to the SP mode display.

NOTE: Patterns 6, 8, 9, and 11 are the best choices for testing and confirming the operation of the IPU.

Test Pattern Table

These patterns can be selected for both SP2902-001 and 002.

No.	Test Pattern
0	None
1	Vertical Line (1-dot)
2	Vertical Line (2-dot)
3	Horizontal Line (1-dot)
4	Horizontal Line (2-dot)
5	Independent Dot (1-dot)
6	Grid Pattern (1-dot)
7	Vertical Stripes
8	Grayscale Horizontal (16-level)
9	Grayscale Vertical (16-level)
10	Grayscale Vertical-Horizontal (16-level)
11	Cross Pattern
12	Argyle Pattern
13	Density Patch (256-level)
14	Density Patch (64-level)
15	Trimming Area
16	Bandwidth (Vertical)
17	Bandwidth (Horizontal)
18	Auto Create Vertical 1-dot Line (Main Scan)
19	Auto Create Horizontal 1-dot Line (Sub Scan)
20	Auto Create Vertical 2-dot Line (Main Scan)
21	Auto Create Horizontal 2-dot Line (Sub Scan)
22	Auto Create 1-dot Independent Dots
23	Auto Create Grid 1-dot Line
24	Auto Create Vertical Stripes
25	Auto Create Horizontal Stripes
26	Auto Create Grayscale Horizontal (20 mm)
27	Auto Create Grayscale Horizontal (40 mm)
28	Auto Create Grayscale Vertical (20 mm)
29	Auto Create Grayscale Vertical (40 mm)
30	Auto Create Argyle

5.3.3 IPU PRINTING TEST PATTERN: SP2902-004

This test pattern is generated in the application input processing circuit in the IPU. The operation path is as follows:

Application input → Memory → Printer

This test pattern is primarily used for design purposes, but it can also be used to trace the source of problems beyond the IPU (in the application input or BICU) which are causing poor print quality.

1. Enter the SP mode and select SP2902-004.
2. Enter the number for the test pattern that you want to print and press \odot . (See the table below.)

No.	Pattern
0	Off
1	Vertical Grayscale 20
2	Horizontal Grayscale 40
3	Horizontal Grayscale 20
4	Horizontal Grayscale 25
5	Caterpillar

3. When you are prompted to confirm your selection, press Yes to select the test pattern for printing.
4. Press Copy Window to open the copy window, then select the settings for the test print (paper size, etc.)
5. Press Start \odot twice (ignore the "Place Original" messages) to start the test print.
6. Press SP Mode (highlighted) to return to the SP mode display.
7. Switch the machine off and on.

5.4 SOFTWARE UPDATE

The cards that are necessary for the software update, and the update procedures, are different for each machine:

Machine	Card	Procedure
B140 Series/B246 Series	SD Card	(☛ 5.4.1)
B064 Series	IC Memory Card	(☛ 5.4.2)

For more, refer to the applicable section below.

5.4.1 SOFTWARE UPDATE PROCEDURE: B140/B246 SERIES

SD cards are used with the B140/B246 Series to update the software and to back up important data. Here is a list of the firmware modules that can be updated or restored from an SD card:

- GW controller software
- BCU software
- LCDC (operation panel) software
- Network Sys (network) software
- Web Sys (Web Image Monitor)
- Document Server software
- NFA (Net File) software
- Printer application software
- Scanner application software
- DESS (encryption module) software

Important:

Here are some important points to remember when you use IC cards or SD cards.


- Never connect or remove an IC card or SD card with the machine power turned on.
- Never turn the power off while the machine is downloading data from an IC card or SD card.
- The IC cards and SD card are precision items. Use them carefully.
- Never store IC cards or SD cards in a location where they are exposed to high temperature, high humidity, or direct sunlight.
- Never bend an IC card or SD card, scratch it, or expose it to strong vibration.
- Before uploading data to an SD card, always confirm that its write-protect switch is off.



Doing the Software Update Procedure


An SD card with the software downloaded to it is necessary for this procedure.

1. Turn the main switch off.
2. Remove the SD card slot cover [A].
3. Hold the SD card [B] (the surface with printing must be away from the front of the machine), and install the SD card in Slot **C3** [C].
4. Turn the main power switch on.

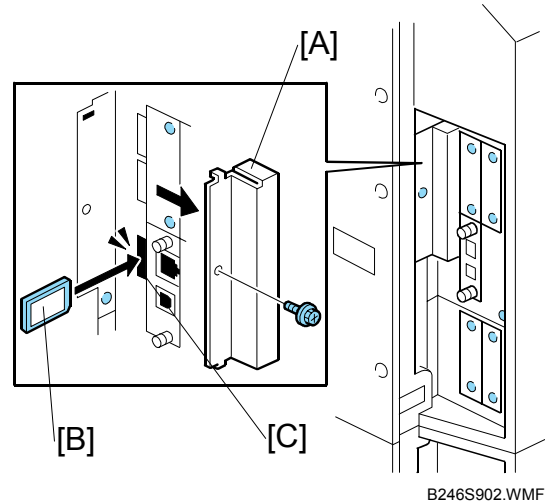


B246S902.WMF

5. Stop until the version update screen is displayed. If the SD card contains more than one software application, the screen will be almost the same as the one below. The screen below shows that the SC card contains two applications: "Engine" and "Printer".

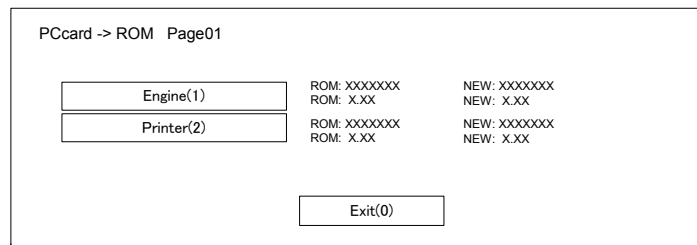

B246S903.WMF


6. To select the item for upgrade, touch the selection on the touch panel, or push the corresponding key on the 10-key pad (1 to 5) of the operation panel. The number in parentheses tells you which key to push. When you make a selection, the [Verify(./*)] and [Update(#)] buttons come on the screen.

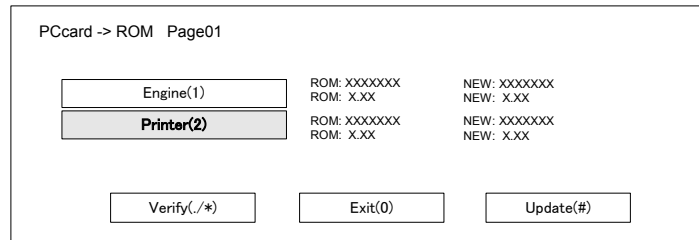

B246S904.WMF

- If you push [Exit] (or the [0] key), you go back to the usual operation screen.
 - Push the [Start] key on the operation panel to select and download all the options shown on the screen.
 - Push the [Clear] key on the operation panel if you want to cancel your selections and make new ones.
 - “ROM”: This is the number and other version information of the ROM firmware installed in the machine at this time.
 - “NEW”: This is the number and other version information of the firmware on the SD card.
7. With the selected items shown in reverse color, push the [Update] button or the [#] key on the operation panel to start the update.

After you push [Update]:

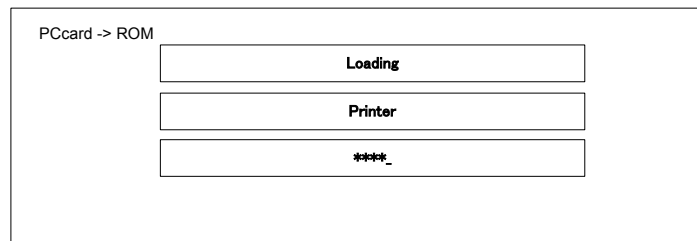


B246S905.WMF

The middle bar shows the name of the module that the machine updates at this time. (The example above shows that the machine updates the “Printer” module at this time.)

The bottom bar is a progress bar. The ‘_’ marks in the progress bar are replaced by ‘*’ marks. This progress bar cannot be displayed during the firmware update for the operation panel. But, the LED of the [Start] key on the operation panel changes from red to green to show that the update of the operation panel firmware continues.

When the update is completed, you will see this screen.

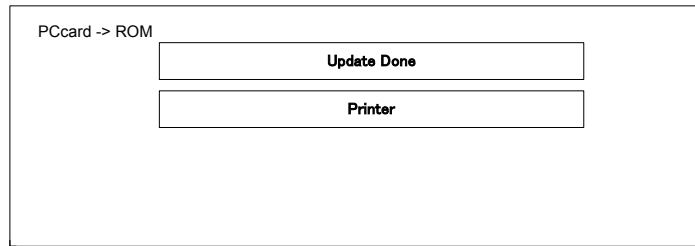


B246S906.WMF

After the firmware update, you will see “Update Done” in the first bar. The name of the module in the bottom bar is the name of the last module that was updated (only the name of the last module is shown, if several modules were been updated).

8. Turn the power off and on. Then, select the items that you updated, and then push the [Verify] button. This is to check that the modules were updated correctly.

If you see “Verify Error” in the first bar on the screen, then you must do the procedure again for the module shown in the bottom bar.

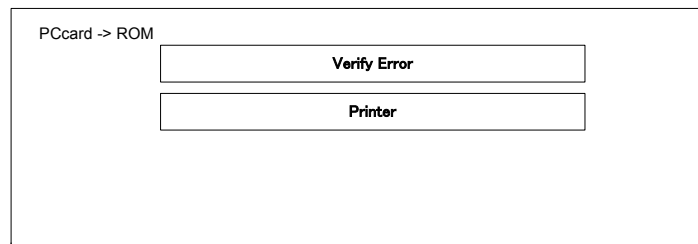


B246S907.WMF

NOTE: The “Verify” procedure is not necessary but it is strongly recommended.

9. After the firmware is correctly updated, turn the main power switch off.
10. Push the SD card in a small distance to release it, then pull it out of the slot.
11. Turn the main power switch on, and check that the machine operates correctly.

Errors During Firmware Update

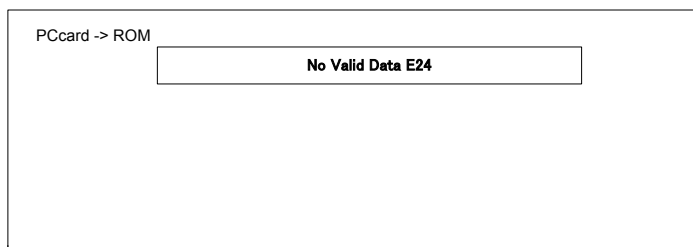

B246S908.WMF

If an error occurs during a download, an error message will be shown in the first line. The error code consists of the letter “E” and a number (“E20”, for example).

Error Message Table

NO.	MEANING	SOLUTION
20	Cannot map logical address	Make sure the SD card is installed correctly, or use a different SD card.
21	Cannot access memory	HDD connection not correct, or replace hard disk.
22	Cannot decompress compressed data	The ROM data on the SD card is not correct, or data is damaged.
23	Error occurred when ROM update program started	Controller program defective. If the second attempt fails, replace the controller board.
24	SD card access error	Make sure the SD card is installed correctly, or use a different SD card.
30	No HDD available for stamp data download	HDD connection not correct or replace hard disks.
31	Data incorrect for continuous download	Install the SD card with the remaining data necessary for the download, then re-start the procedure.
32	Data incorrect after download interrupted	Do the recovery procedure for the module, then repeat the installation procedure.
33	Incorrect SD card version	The ROM data on the SD card is not correct, or data is damaged.
34	Module mismatch - Correct module is not on the SD card	The data on the SD is not correct. Get the correct data (Japan, Overseas, OEM, etc.) then install again.
35	Module mismatch – Module on SD card is not for this machine	SD update data is not correct. The data on the SD card is for a different machine. Get the correct data then install again.
36	Cannot write module – Cause other than E34, E35	SD update data is not correct. The data on the SD card is for a different machine. Get the correct data then install again.
40	Engine module download failed	Replace the data for the module on the SD card and try again, or replace the BCU board.
42	Operation panel module download failed	Replace the data for the module on the SD card and try again, or replace the LCDC.
43	Stamp data module download failed	Replace the data for the module on the SD card and try again, or replace the hard disk.
44	Controller module download failed	Replace the data for the module on the SD card and try again, or replace the controller board.
50	Electronic confirmation check failed	SD update data is not correct. The data on the SD card is for a different machine. Get the correct data then install again.



Updating the LCDC for the Operation Panel

Use this procedure to update the LCDC (LCD Control Board).

1. Turn the copier main switch off.
2. Put the SD card into service slot C3.
3. Turn the copier main switch on.
4. Stop until the card utility screen is displayed.
5. After approximately 10 seconds, the initial screen opens in English.
6. Touch [Opepanel.DOM].
7. Touch [UpDate(#)] to start the update.

While the data downloads, the operation panel goes off.

The LED on the [Start] key flashes red at 1/2 second intervals for approximately 6 minutes.

When the update is completed, the [Start] key starts to flash at 1-second intervals.

8. Turn the copier main power switch off, remove the SD card, then turn the copier on again.

Downloading Stamp Data

After you replace or format the HDD, download the stamp data from the controller firmware to the hard disk.

1. Go into the SP mode.
2. Select SP5853 then press "Execute".
3. Obey the instructions on the screen to complete the procedure.



NVRAM Data Upload/Download

Uploading Content of NVRAM to an SD card

Do this procedure to upload SP code settings from NVRAM to an SD card.

NOTE: Always upload this data to an SD card before you replace the NVRAM.

1. Before you turn the machine off, do SP5990 001 (SMC Print). This gives you a record of the NVRAM settings if the upload fails.
2. Turn the copier main power switch off.
3. Put the SD card into service slot C3, then turn the copier on.
4. Do SP5824 001 (NVRAM Data Upload) then push the “Execute” key
When uploading is completed, a file is copied to the NVRAM folder on the SD card. The file is saved to this path and filename:

NVRAM\<serial number>.NV

Here is an example for Serial Number “B0700017”:

NVRAM\B0700017.NV

5. To prevent an error during the download, write the serial number of the machine on the SD card.
NOTE: This is necessary because NVRAM data from more than one machine can be uploaded to the same SD card.

Downloading an SD Card to NVRAM

Do this procedure to download SP data from an SD card to the NVRAM in the machine.

- If the SD card with the NVRAM data is damaged, or if the connection between the controller and BCU is defective, the NVRAM data download will not complete correctly.
- If the download does not complete correctly, do the download procedure again.
- If this does not complete correctly, input the NVRAM data manually from the SMC print that you made before you uploaded the NVRAM data.

1. Turn the copier main power switch off.
2. Put the SD card with the NVRAM data into service slot C3.
3. Turn the copier main power switch on.
4. Do SP5825-001 (NVRAM Data Download) and push the “Execute” key.

NOTE:

- This procedure also downloads the C/O, P/O Count data to the NVRAM:
- The serial number of the file on the SD card must match the serial number of the machine. If the serial numbers do not match, the download will not complete correctly.

5.4.2 SOFTWARE UPDATE PROCEDURE: B064 SERIES

IC cards are used to update the software and to back up important data. Here is a list of the items that can be updated or restored from an IC card:

- BCU software
- GW controller software
- LCDC (operation panel) software
- Language software
- Scanner (DIMM) software
- PHY: NCS (NIB) software
- PHY: NFA (NetFile) software
- Stamp data
- NVRAM software

First, install the BCU software, then the GW controller software, then the others can be upgraded in any order.

Important:

Here are some important points to keep in mind when handling and using IC cards.


- Never insert or remove a IC card with the machine power switched on.
- Never switch the power off while the machine is downloading data from an IC card.
- The IC card is a precision item so handle it carefully. Never store the card in a location subject to high temperature, high humidity, or direct sunlight.
- Never bend the card, scratch it, or subject it to strong shock or vibration.

If an error occurs during downloading, an error code appears. For full details on these error codes and how to recover the machine, see 'Troubleshooting – Program Download' (Section 4.1).



GW Controller/BCU Update


1. Switch the main power switch off.
2. Disconnect the ADF plug, remove the rear upper cover (⚙ x 2), then remove the IC card slot cover (⚙ x 1).
3. With it's a side facing up, insert the IC card into the slot.
4. Switch the machine on.
5. Wait for the update screen to open.

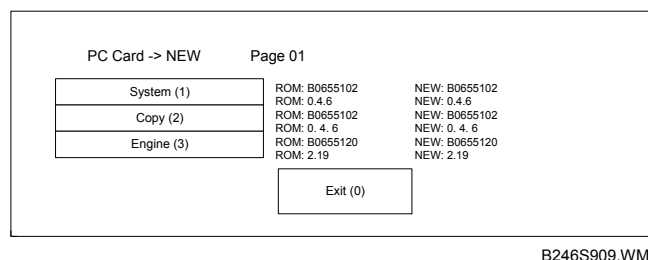

NOTE: 1) In the ROM number displays, the first line is the software number and the second line is the version number.

2) The left column displays the current software and version numbers of the software in the machine, and the column on the right displays the same information for the data on the IC card.

6. Press the appropriate item on the touch-panel.
 - For the GW controller, press System (1) and Copy (2) on the touch-panel, or you can press ① or ② on the operation panel.
 - For the BCU, press Engine (3) on the touch-panel, or you can press ③ on the operation panel.
 - To update all, press two buttons simultaneously.

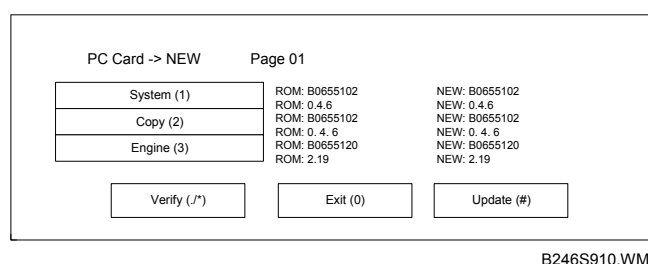

7. To start the installation, press Update (#) on the touch panel, or press ④ on the operation panel.
8. The installation screen opens. As the installation progresses, the dashes on the display are replaced by asterisks (****----)
9. When "Power Off/On" is displayed, switch the machine off and remove the IC card.

Forced Update

If the download does not complete normally and you cannot restart the installation procedure, execute a forced installation.

1. Switch off the machine.
2. Remove the controller cover and set DIP SW1 to ON.
3. Make sure that the IC card is inserted correctly and switch the machine on.
4. Repeat from Step 5 of the previous section.

NOTE: If the IC card of a different machine is used by mistake to start the installation, the operation panel will return a message: "Download Error" or "No Matching Data". Then the machine will log SC999.

Stamp Data Update

After the hard disk has been initialized, the preset stamp data must be downloaded to the hard disk.

1. Switch the main power switch off.
2. Disconnect the ADF plug, remove the rear upper cover (🔧 x 2), then remove the IC card slot cover (🔧 x 1).
3. With the A side facing up, insert the printer IC card into the slot.
4. Switch the machine on.
5. Wait for the update screen to open.
In the lower right corner of the Download Watermark screen, press OK on the touch panel.

Operation Panel Software Update

1. Switch the main power switch off.
2. Disconnect the ADF plug, remove the rear upper cover (🔧 x 2), then remove the IC card slot cover (🔧 x 1).
3. With it's A side facing up, put the operation panel IC card into the slot.
4. Switch the machine on.

5. Wait for the update screen to open.
Press "OpePanel.EXP" then press Update (#).
The installation download starts in about 9 seconds.

The operation panel goes off and the Start ⬡ LED flashes red during downloading.

When the download is completed, the Start ⬡ LED flashes green.

6. Switch the machine off, remove the IC card, then switch the machine on.

NOTE: 1) During the download, the operation panel switches off and only the Start key flashes red.

2) You must wait until the Start key stops flashing red and starts flashing green.

3) If a power failure occurs during downloading, E32 (Reboot After Card Insert) is logged. Remove the IC card, switch off the machine. Insert the card again and switch on the machine to restart downloading.

**Scanner Update**

1. Switch the main power switch off.
2. Disconnect the ADF plug, remove the rear upper cover (⌘ x 2), then remove the IC card slot cover (⌘ x 1).
3. With it's a side facing up, insert the scanner IC card into the slot.
4. Switch the machine on.
5. Wait for the update screen to open.
Press "Opt DIMM Scn (1)" then press Update (#).
When "Power Off/On" is displayed, the download is completed.
6. Switch the machine off, remove the IC card, then switch the machine on.

NIB Update

1. Switch the main power switch off.
2. Disconnect the ADF plug, remove the rear upper cover (⌘ x 2), then remove the IC card slot cover (⌘ x 1).
3. With it's a side facing up, insert the NIB data IC card into the slot.
4. Switch the machine on.
5. Wait for the update screen to open.
Press "Network Support (1)" then press Update (#).
When "Power Off/On" is displayed, the download is completed.
6. Switch the machine off, remove the IC card, then switch the machine on.

NetFile Firmware Update

Netfile firmware controls jobs to be printed from the document server using a PC and the DeskTopBinder software.

1. Switch the main power switch off.
2. Disconnect the ADF plug, remove the rear upper cover (⌘ x 2), then remove the IC card slot cover (⌘ x 1).
3. With it's a side facing up, insert the NetFile IC card into the slot.
4. Switch the machine on.
5. Wait for the update screen to open.
Press "Network DocBox (1)" then press Update (#).
When "Power Off/On" is displayed, the installation is completed.
6. Switch the machine off, remove the IC card, then switch the machine on.

NVRAM Update

This procedure describes updating the NVRAM firmware (☛ 3.12.7).

NOTE: Before updating NVRAM, the contents of NVRAM should be uploaded to a PC memory card and then downloaded after updating the NVRAM firmware (☛ 3.12.7).

1. Switch the main power switch off.
2. Disconnect the ADF plug, remove the rear upper cover (☛ x 2), then remove the IC card slot cover (☛ x 1).
3. With it's a side facing up, insert the NVRAM IC card into the slot.
4. Open the front door.
5. Switch the machine on.
6. After the download is completed, a message on the operation panel will prompt you to switch the machine off and on.
7. Switch the machine off, remove the IC card, then switch the machine on.

NOTE: The success of the download cannot be guaranteed if the front door is closed during the download execution.

The NVRAM download execution updates everything except the following SP functions:

SP7003 ***	Total Count
SP7006 ***	C/O, P/O
SP7007 ***	Other Device Counters

Firmware Update Notes

- GW Controller Ver. 3.51 (or later), Scanner 2.08 Ver. 2.08 (or later) support SMTP authentication.
- When installing Ver. 4.01 or later, make sure that you install the GW Controller firmware and other firmware as a set if the Copy Connector Kit or MLB option are not installed.
- If the Copy Connector Kit or MLB is installed, make sure that you have the correct firmware for installation. You will need the set of firmware that supports the Copy Connector Kit and MLB options.
- When updating BCU firmware Ver. 4.x or later, use GW controller firmware Ver. 3x or later.
- When updating GW controller firmware Ver. 3x or later, use BCU firmware Ver. 4.x or later.

5.5 SERVICE PROGRAM MODE TABLES

5.5.1 SERVICE TABLE KEY

Notation	What it means
(B064)	An SP for the B064/B065 only. ^{*1}
(B140)	An SP for the B140 Series only. ^{*1}
(B140/B246)	An SP for both the B140 Series and the B246 Series.
(B246)	An SP for the B246 Series only.
[range/step]	Example: [-9~+9/0.1 mm] The default setting can be adjusted in 0.1mm steps in the range ± 9 . Note: The default setting for each SP mode is shown on the screen in the "Initial" box immediately below the entry box. Some of the default settings for the B064, B140, and B246 Series are different, so be sure to check the "Initial" box on the SP mode screen.
Italics	Comments added for reference.
*	An asterisk marks the SP's that are reset to their factory default settings after an NVRAM reset.
DFU	Denotes "Design or Factory Use". Do not change this value.
Japan only	The feature or item is for Japan only. Do not change this value.
SEF	Short Edge Feed
LEF	Long Edge Feed

^{*1}: SP titles without these notations apply to machines of every series (B064, B140, B246).

5.5.2 COPIER SERVICE TABLE***SP1xxx Feed***

1001*	Leading Edge Registration
	Adjusts the printing leading edge registration using the trimming area pattern (SP2902-003, No.18). [−9~+9/0.1mm] Specification: 3±2mm

1002*	Side-to-Side Registration		
	Adjusts printing side-to-side registration for each feed station, using test pattern (SP2902-003, No.18). These SP's should be adjusted after replacing the laser synchronization detector or the laser optical unit.		
001	Tray-1	[−9~+9/0.1 mm]	
002	Tray-2		
003	Tray-3		
004	Tray-4 (Japan Only)		
005	By-pass Tray		
006	LCT		
007	Duplex Tray		

1003	Registration Buckle Adjustment
	Adjusts the registration motor timing. This timing determines the amount of paper buckle at registration. (A higher setting causes more buckling.) [−9~+9/1 mm]
001*	Tray LCT
002	Duplex Tray
003*	By-pass Tray

1008*	Duplex Fence Adjustment
	Adjusts the distance between front and rear fences. A smaller value shortens the distance. If the fences are too far apart, skewing may occur in the duplex tray. If the fences are too close, the paper may be creased in the duplex unit. [−5~+5/0.1 mm]

1102	Fusing Temperature Adjustment DFU	
001	Duplex Actual Temperature	
002	Duplex Balance Temp (Center Thermistor)	
003	Duplex Balance Temp (End Thermistor)	

1103	Fusing Idling (B064)	Fusing Idling Time
	This SP sets the length of time that the hot roller turns freely with no paper going through the fusing unit. This idling with no paper in the fusing unit while the hot roller is turning raises the fusing temperature rapidly.	
001	Idling Time (Normal)	Adjust the default value for normal operation. [0~900/ 70 /1 sec.]
002	Idling Time (Low)	Adjust the default value for a machine in a low temperature environment by selecting a longer time for the hot roller to idle. [0~900/ 240 /1 sec.]
003	Idling Time (Low Power)	Adjust the default value for idling time while the machine returns to normal operation from the low power mode. [0~300/ 0 /1 sec.]



1104*	Fusing Temperature Control (B064)
	<p>Selects the fusing temperature control mode. [0~1/1] 0: On/Off control 1: Phase control</p> <p>If power supply to the machine is unstable, select Phase Control. The machine must be switched off and on after this setting is changed for the new setting to take effect.</p> <p><i>Phase control could interfere with radio or TV reception.</i></p>

1105*	Fusing Temperature Adjustment	
	Adjusts the fusing temperature of the hot roller for plain paper, OHP or thick paper.	
001	Normal Time (Center Thermistor)	Fusing temperature during the ready condition (and during printing for B064) B064: [150~230/1 degree C] B140: [180~205/1 degree C]
002	Normal Time (End Thermistors) (B140)	Fusing temperature during the ready condition B140: [180~205/1 degree C]
003	OHP (Center Thermistor)	Fusing temperature during printing: B064: [150~230/1 degree C] B140: [180~205/1 degree C]
004	OHP (End Thermistor) (B140)	Fusing temperature during printing: B140: [180~205/1 degree C]
005	Thick Paper (Center Thermistor)	Fusing temperature during printing: B064: [180~205/1 degree C] B140: [180~205/1 degree C]
006	Thick Paper (End Thermistors) (B140)	Fusing temperature during printing: B140: [180~205/1 degree C]
007	Normal Paper (Center Thermistor) (B140)	Fusing temperature during printing: B140: [150~230/1 degree C]
008	Normal Paper (End Thermistor) (B140)	Fusing temperature during printing: B140: [180~205/1 degree C]
009	Small Size – Normal Paper (Center)	Fusing temperature at center of hot roller when printing on normal paper: B246: [180~205/1 degree C]
010	Small Size – Thick Paper (Center)	Fusing temperature at center of hot roller when printing on thick paper: B246: [180~205/1 degree C]

1106	Fusing Temperature Display	
001	Center Temperature	Shows the temperature of the hot roller detected by the thermistor at the center of the hot roller.
002	End Temperature	Shows the temperature of the hot roller detected by the thermistors at the ends of the hot roller.

1107	Start Fusing Temperature Adjustment (B246)	
	This SP allows you to set when to start the fusing temperature adjustment for the center and end heating lamps.	
001	Center Lamp Temperature	[180~205/ 205 /1 deg C]
002	End Lamp Temperature	
003	Center Lamp Actual Time	[0~120/ 60 /1 sec.]
004	End Lamp Actual Time	
005	Center Lamp Temp (Small Size Paper)	[190~205/ 205 /1 deg C]
006	End Lamp Actual Time (Small Size Paper)	[0~120/ 60 /1 sec.]
007	Center Lamp Temp (Thick Paper)	[190~205/ 205 /1 deg C]
008	End Lamp Actual Time (Thick Paper)	[0~120/ 60 /1 sec.]

1112	Auto Process Control	
	Sets the temperature of the hot roller for auto process control to start. [70°~150°/1°C] DFU	

1159	Fusing Jam: SC Setting
	This SP determines what the machine does if paper jams occur in the fusing unit for three consecutive sheets of paper. 0: (default): A jam alert is shown on the screen. The customer can remove the jam and the machine works normally after that. 1: SC559 occurs. The technician must remove the jam.

1901*	CPM Down for Special Paper	
	Selects the speed (copies per minute) for copying on thick paper or tab sheets. A slower speed makes fusing better. This setting has no effect on fusing temperature.	
001	Thick Paper	[0~4/1 step] 0: 25 cpm 1: 35 cpm 2: 40 cpm 3: 45 cpm
002	Tab Sheet	[0~4/1 step] 0: 25 cpm 1: 35 cpm 2: 40 cpm 3: 45 cpm

1902*	Fusing Web Motor Control
001	Fusing Web Used Area Display/Setting Displays the percentage of the web consumption in 1% steps (0% ~ 100%). This setting must be reset to zero after the web is replaced. [0~120/1 %]
002	Fusing Web Motor Operation Interval Adjusts the interval of copy operation time (seconds) after which the web motor is driven. [5~50/1 s]
003	Fusing Web Motor Operation Time Adjusts the length of time that the web motor is driven. [1~40/0.1 s]
004	Web Near End Value Adjusts the timing of the web near end alert by changing the amount of web that has been used before the alert is triggered. [0~100/1 %]
005	Web Roll Coefficient Determines the coefficient of the web take-up time from cleaning toner from the roller while taking into consideration the take-up time for web buckle. DFU [10~20/1]

1903*	Web Job End
001	Yes/No This determines whether the web motor is driven at the end of a job. [0~1/1] 0: Off 1: On Enable when too much paper dust is causing copies to blacken.
002	Job End Condition (Continuous PPC Time) At the end of a job, the web motor is driven if the job lasted longer than the value of this SP mode. Only valid if SP1903-001 is set to 'On'. [1~99/1s]
003	Job End Frequency If the web motor is driven at the end of a job, this SP determines how many times the web motor operation is executed. [1~5/1]

1904	By-pass Tray Paper Size Correction
001	Minimum Size Calibrates the minimum paper width position of the sensor (100 mm). Move the side fences to the 100 mm position then press Execute.
002	Maximum Size Calibrates the maximum paper width position of the sensor (A3). Move the side fences to the A3 position then press Execute.

1905*	Thick Paper – By-pass Tray
	Adjusts the by-pass feed clutch operation for thick paper. [0~1/1] 1: On: 30 ms 0: Off: This setting switches the by-pass feed clutch on for 30 ms when the registration motor turns on. It only happens when thick paper is selected, to help this paper pass through the registration rollers.

1906	Temperature/Humidity Sensor DFU
001	Temperature Sensor
002	Humidity Sensor

1907	Pre-Fusing Idling On/Off (B140/B246)	
	Pre-fusing idling: The hot roller turns freely to increase its temperature before thick paper or OHP goes through the fusing unit. [0~1/1/1] 0: Pre-fusing idling is not done. 1: The fusing motor turns the hot roller with no paper in the fusing unit. This ensures that the hot roller reaches the correct temperature. It is only done for thick paper or OHP. In this mode, the paper stops at the registration roller, then roller resumes its rotation after the hot roller reaches the correct temperature.	
001	Thick Mode (1:ON/0:OFF)	Thick Paper Normal Size
002	Thick Mode: Small Paper Size	Thick Paper Small Size
003	Normal Mode (1:ON/0:OFF)	Normal Paper Normal Size
004	Normal Mode: Small Paper Size	Normal Paper Small Size

1910	Not Used
1911	Not Used
1912	Not Used
1920	Not Used

SP2xxx Drum

2001*	Charge Roller Bias Adjustment	
001	Applied Voltage for Image Processing	Adjusts the voltage applied to the grid plate during copying when auto process control is off. [–600~–1300/ 10 V] After replacing the charge corona wire or the drum, reset to the factory default setting.
002	ID Sensor Pattern: Adjustment of Applied Voltage	Adjusts the voltage applied to the grid plate when the ID sensor pattern is created. [–600~–1300/10 V]
003	Setting for Total Bias Current	Adjusts the total current applied to the charge corona wire. DFU [–900~–1500/10 μ A]
004	Setting for Total Bias Current of Grid	Adjusts the voltage applied to the grid plate during copying when auto process control is on. [–600~–1300/10 μ A] This voltage changes every time auto process control starts up (every time the machine is switched on).
005	Total Bias Grid Current: OHP Total	Adjusts the voltage applied to the grid plate when OHP mode is selected. [–600~–1300/10 V] Use this if there is a copy quality problem when making OHP's.
006	Total Bias Current: Photo Mode Total	Adjusts the voltage applied to the grid plate when Photo mode is selected. DFU [–1400~ –2800/10 μ A]

2101*	Printing Erase Margin	
	These settings adjust the erase margin for the leading, trailing, left, and right edges.	
001	Leading Edge	[0.0~9.0/0.1 mm], Specification: 3 \pm 2 mm
002	Trailing Edge	[0.0~9.0/0.1 mm], Specification: 3 \pm 2 mm
003	Left Edge	[0.0~9.0/0.1 mm], Specification: 2 \pm 1.5 mm
004	Right Edge	

2103	LD Power Adjustment DFU	
	Note: This is an SSP mode. To enter SSP mode, push [Reset], enter "107", then hold down [Clear] for at least 3 sec. When you see "Copy SP" on the touch panel, press and hold down [#] then touch "Copy SP".	
001	LD-0 Adjustment	These SP codes allow adjustment of the laser intensity for each of the four channels. [-55 to +64/-24/1]
002	LD-1 Adjustment	
003	LD-2 Adjustment	
004	LD-3 Adjustment	
005	LD-0 Start/End	These SP codes allow adjustment of the start/end timing of the adjustments performed for SP2103 001-004. [0~1/0/1]
006	LD-1 Start/End	
007	LD-2 Start/End	
008	LD-3 Start/End	

2104*	Small Pitch Banding Reduction DFU	
001	Reduction Mode On/Off Setting: 1200 dpi	
	Switches on/off the setting that corrects uneven images generated during 1200 dpi printing. [0~1/1] 1: On 0: Off <i>Unevenness may appear in dot patterns or narrowly spaced horizontal lines, i.e. some areas may appear lighter or darker than others.</i>	
002	Reduction Mode On: 1200 dpi Printing	
	Adjusts the amount of correction for uneven images generated during 1200 dpi printing. [-20~+10/1]	
003	Reduction Mode On/Off: 1200 dpi Copying	
	Switches on/off the setting that corrects uneven images generated during 1200 dpi copying. [0~1/1] 1: On 0: Off	
004	Reduction Mode On: 1200 dpi Copying	
	Adjusts the amount of correction of uneven image generated during 1200 dpi copying. [-20~+10/1]	

2110	Test Mode dpi	
	Adjusts the pixel density. Required for design check, beam pitch adjustment for the test pattern, etc. DFU . [0~10/1]	

2111	FCI Shade Detection	
	Allows shading detection if FCI (Fine Character Adjustment) smoothing is on. With this SP switched on, photos and painted areas are detected, and FCI is not applied in these areas. FCI is used for outputs in printer mode.	
001	Matrix Size (>600 dpi)	[0~128/1]
002	Threshold Value (>600 dpi)	[0~128/1]
003	Matrix Size (<400 dpi)	[0~128/1]
004	Threshold Value (<400 dpi)	[0~128/1]

2114*	Binary Edge Processing Parameter	
	Allows setting a parameter for binary edge processing for the printer application with FCI switched off. The value for this SP is enabled only when the printer is initialized. In all other cases, the data registered in the software are enabled. This SP allows adjustment of image quality if the desired effect cannot be achieved with the default settings for edge processing. However, some settings could cause defective images on white paper.	
001	Leading Edge Pixel Level (1200 dpi)	[0~15/1]
002	Trailing Edge Pixel Level (1200 dpi)	[0~15/1]
003	Continuous Pixel Level (1200 dpi)	[0~15/1]
004	Independent Dot Pixel Level (1200 dpi)	[0~15/1]
005	Leading Edge Pixel Level (600 dpi)	[0~15/1]
006	Trailing Edge Pixel Level (600 dpi)	[0~15/1]
007	Continuous Pixel Level (600 dpi)	
008	Independent Dot Pixel Level (600 dpi)	

2115	Main Scan Beam Pitch Adjustment	
	A label attached to the LD unit service part lists the correct settings. Refer to these settings when adjusting the beam pitch for LD0 to LD3.	
001	Pitch Adjustment Between LD0 and LD1	[0~999/1]
002	Pitch Adjustment Between LD0 and LD2	[0~999/1]
003	Pitch Adjustment Between LD0 and LD3	[0~999/1]

2201*	Development Bias Adjustment
001	Dev. Bias (Image)
	Adjusts the development bias for copying when process control is off [-900 to -100/10 V] <i>Adjust as a temporary measure to compensate for an aging drum until the old drum can be replaced.</i>
002	ID Sensor Pattern
	Adjusts the development bias used to create the ID sensor pattern. DFU [[-900 to -100/10 V] <i>This SP and SP2201-004 must be changed together by the same amount.</i>
003	OHP
	Adjusts the development bias for copying with OHP sheets. [-900 to -100/10 V]
004	ID Sensor Pattern Dev. Potential
	Adjusts the development potential to create the ID sensor pattern. DFU [-380 to -140/10 V] <i>This SP and SP2201-002 must be changed together by the same amount.</i>
005	Vb Scale Voltage Setting
	Sets the Vb target development bias voltage (Vb). DFU [-900 to -100/10 V]

2207*	Forced Toner Supply
	Rotates the toner bottle to supply toner to the toner supply unit. Press Execute to force toner supply. <i>Use to determine if toner supply is operating correctly. If forcing toner supply with this SP does not darken the image, then toner supply is not operating correctly.</i>

2208*	Toner Supply Mode
	Selects the toner supply mode: Sensor Control or Image Pixel Count. [0~1/1] 0: Sensor Control 1: Pixel Count Select Image Pixel Count only if the TD sensor has failed and cannot be replaced immediately, so that the customer can use the machine. Return the setting to Sensor Control after replacing the sensor.

2209*	Toner Supply Rate
	Adjusts the toner supply rate. [50~995/5 mg per sec] Increasing this value reduces the time the toner supply clutch remains on. Use a lower value if the user tends to make many copies that have large areas of black.

2210*	ID Sensor Pattern Interval
	Adjusts the time interval between making ID sensor patterns onto the drum for Vsp/Vsg detection. [~200/1] Reduce the interval for copies that contain a high proportion of black.

2220*	Vref Manual Setting
	<p>Adjusts the TD sensor reference voltage (Vref) manually. [1.00~4.00/0.11 V]</p> <p>Change this value after replacing the development unit with another one that already contains toner. For example, when using a development unit from another machine for test purposes, do the following:</p> <ol style="list-style-type: none"> 1) Check the value of SP2220 in both the machine containing the test unit and the machine that you are going to move it to. 2) Install the test development unit, then input the VREF for this unit into SP2220. 3) After the test, put back the old development unit, and change SP2220 back to the original value.

2223*	Vt Display
	<p>Displays the current TD sensor output voltage. [0~5.0 V]</p>

2301*	Transfer Curr. Adj.	
	Adjusts the current applied to the transfer belt during copying. Note: If this SP is too high, toner on the paper can go back to the drum.	
001	Front	[10~200/1 μA]
002	Back	[10~200/1 μA]
003	By-pass Image Development: Front Side	[10~200/1 μA]
004	Postcard (Japan Only)	[10~200/1 μA]
005	Paper Interval	[10~200/1 μA]
006	Tab Paper	[10~200/1 μA]
007	Thick Paper: Front Side	[10~200/1 μA]
008	OHP: Front Side	[10~200/1 μA]
009	Tracing Paper: Front Side	[10~200/1 μA]
010	Image Leading Edge DFU	[10~200/1 μA]
011	Image Trailing Edge DFU	[10~200/1 μA]

2310*	LCT Trans. Curr. Adj. DFU	
	Adjusts the current applied to the transfer belt during copying and paper feed from the LCT.	
001	Main Unit Image Development: Front	[10~200/1 μA]
002	Main Unit Image Development: Back	
003	Image Leading Edge: Back	
004	Image Trailing Edge: Back	
005	Image Leading Edge: Thick Paper	[10~200/1 μA]
006	Image Trailing Edge: Thick Paper	

2311*	Tray 1 Trans. Curr. Adj. DFU	
	Adjusts the current applied to the transfer belt during copying and paper feed from Tray 1.	
001	Image Leading Edge: Front	[10~200/1 μ A]
002	Image Trailing Edge: Front	
003	Image Leading Edge: Back	
004	Image Trailing Edge: Back	
005	Image Leading Edge: Thick Paper	[10~200/1 μ A]
006	Image Trailing Edge: Thick Paper	

2312*	Tray 2 Trans. Curr. Adj. DFU	
	Adjusts the current applied to the transfer belt during copying and paper feed from Tray 2.	
001	Image Leading Edge: Front	[10~200/1 μ A]
002	Image Trailing Edge: Front	
003	Image Leading Edge: Back	
004	Image Trailing Edge: Back	
005	Image Leading Edge: Thick Paper	[10~200/1 μ A]
006	Image Trailing Edge: Thick Paper	

2313	Tray 3 Trans. Curr. Adj. DFU	
	Adjusts the current applied to the transfer belt during copying and paper feed from Tray 3.	
001	Image Leading Edge - Front	[10~200/1 μ A]
002	Image Trailing Edge - Front	
003	Image Leading Edge - Back	
004	Image Trailing Edge - Back	
005	Image Leading Edge - Thick Paper	[10~200/1 μ A]
006	Image Trailing Edge - Thick Paper	

2314	Tray 4 Trans. Curr. Adj. (Japan Only)	
	Adjusts the current applied to the transfer belt during copying and paper feed from Tray 4.	
001	Image Leading Edge: Front	[10~200/1 μ A]
002	Image Trailing Edge: Front	
003	Image Leading Edge: Back	
004	Image Trailing Edge: Back	
005	Image Leading Edge: Thick Paper	[10~200/1 μ A]
006	Image Trailing Edge: Thick Paper	

2315	Bypass Trans. Curr. Adj. DFU	
	Adjusts the current applied to the transfer belt during copying and paper feed from the bypass tray.	
001	Image Leading Edge: Front	[10~200/1 μ A]
002	Image Trailing Edge: Front	
003	Image Leading Edge: Back	
004	Image Trailing Edge: Back	
005	Image Leading Edge: Thick Paper	[10~200/1 μ A]
006	Image Trailing Edge: Thick Paper	
007	Image Leading Edge: OHP	[10~200/1 μ A]
008	Image Leading Edge: OHP	

2506*	Cont. Op. Time Cleaning Setting	
001	Operation Setting	
	Determines whether multiple copy jobs are stopped at regular intervals for: 0) Stopping and reversing the drum motor to clean the cleaning blade edge, and 1) creating an ID sensor pattern to correct toner density control. [0~1/1] 0: No 1: Yes The interval is set with SP2506-002. Use if the drum gets dirty or images get too pale or too dark during a long job.	
002	Time Setting	
	Selects the interval at which multi-copy jobs are stopped. [1~100/1 min.]	

2507*	ID Sen. Patt. During Job	
001	Operation Setting	
	Determines whether an ID sensor pattern is created during copy jobs. [0~1/1] 0: Off 1: On	
002	No. of Copies	
	Selects the interval (number of copies) between ID sensor patterns when 1 is selected for SP2507-001 [0~10,000/1]	

2602	PTL Setting (1st /2nd Copy Side) (B140, B246 series) Turns the PTL off and on. The PTL (Pre-Transfer Lamp) decreases the charge on the drum to make better separation of the paper from the drum, and prevents stripper pawl marks on the leading edges of copies. Note: <ul style="list-style-type: none"> • The PTL operates only when copying with plain paper or translucent paper. It does not operate when copying with OHP, index sheets, or thick paper. • If blurring occurs in images at the leading edges of copies, switch SP2602-001 off (set to "0"). 	
001	ON/OFF Setting (1st Copy Side)	Turns the PTL lamp on/off during transfer to the front side of the paper at normal speed. This setting is always off when thick paper or OHPs are fed. [0~1/1] 0: Off 1: On The timing can be adjusted with SP2602-002.
002	OFF Timing (1st Copy Side)	Adjusts the length of the space from the leading edge where PTL quenching is applied to the front side at normal speed. For example, if you select +3, then quenching will be done 3 mm from the leading edge on the front side. [-5~10/0.1]
003	ON/OFF Setting (2nd Copy Side)	Turns the PTL lamp on/off during transfer to the front side of the paper at normal speed. [0~1/1] 0: Off 1: On
004	OFF Timing (2nd Copy Side)	Adjusts the length of the space from the leading edge where PTL quenching is applied to the back side at normal speed. For example, if you select +3, then quenching will be done 3 mm from the leading edge on the back side. [-5~10/0.1]

2801*	TD Sensor Initial Setting
	Press the Execute button to do the TD sensor initial setting. This SP mode controls the voltage applied to the TD sensor to make the TD sensor output about 3.0 V. When SP2967 is on, the TD sensor output is set to about 2.5 V. Note: Execute this SP only after replacing the TD sensor or developer.

2803	Charge Cleaner Start Time
	Press Start to clean the charge corona wire manually. When copy density across the paper is uneven, clean the wire with this mode.

2804	Charge Cleaner
001	Operation Mode
	Determines whether the charge corona wire is cleaned at regular intervals. [0~1/1] 0: No 1: Yes The time interval between cleaning is set with SP2804-002.
002	Number of Sheets
	Sets the interval (number of sheets printed) between charge corona wire cleanings. [100~10,000/100]

2813	Exposure Gamma Table DFU
	Is the gamma table is used when the printing test pattern is done with SP2902 003. [0~1/1] 0: Gamma table used in the printing test pattern. 1: Forces test pattern output with SP2902 003 (Printing Test Pattern). The write exposure gamma table is not applied. Current image mode selection or other settings are ignored.

2902	Test Pattern
001	IPU Test Pattern: Front Side
	Produces a scan test pattern in place of data scanned from the front side [0~30/1] (CCD→SBU) of an original. (☛ 5.3.2)
002	IPU Test Pattern: Back Side
	Produces a scan test pattern in place of data scanned from the back side [0~30/1] (CIS→SBU) of an original. (☛ 5.3.2)
003	Printing Test Pattern
	Produces the printer test patterns. (☛ 5.3.1) [0~27/1]
004	IPU Printing Test Pattern
	Produces test patterns in place of scan image data. (☛ 5.3.3) [0~5/1]

2906*	TD Sensor Control Voltage and Check	
001	TD Sensor Control Voltage Setting	Adjustment mode for production. DFU [4.0~12.0/0.1]
002	Automatic Adjustment Setting	Displays the TD sensor data stored when SP2801 (TD Sensor Initial Settings) is executed.

2909*	Main Scan Magnification	
001	Copy	Adjusts magnification in the main scan direction for copying. [-2.0~+2.0/0.1%]
002	Printer	Adjusts magnification in the main scan direction for printing from a computer. [-2.0~+2.0/0.1%]

2910*	Sub Scan Magnification	
		Adjusts magnification in the main scan direction for copying. [-1.0~+1.0/0.1%]

2912*	Drum Reverse Rotation	
001	Rotation Amount	Sets the length of time the drum is reversed to clean the drum cleaning blade. [1~3/1] <i>To calculate the actual time of reverse rotation, multiply the selected value by the 15 ms.</i>
002	Rotation Interval	Determines the frequency of drum reverse rotation for blade cleaning. [0~6/1 min.]

2913*	Temperature & Humidity Display	
001	Machine Temperature	Shows the internal temperature of the machine.
002	Machine Humidity	Shows the internal humidity of the machine.

2920*	LD Off Check	
		Checks if the LD turns off or on when the front door is opened. DFU [0~1/1] 0: On 1: Off

2930*	Transfer Idle Cleaning
	When resolution changes from 400 to 600 dpi, the LD writes a pattern on the drum. Toner is applied, and this must be cleaned off the belt. This SP mode determines whether bias is applied to the transfer belt cleaning bias roller at this time. DFU [0~1/1] 0: Off 1: On Switching this function on adds 3 s to the job time.

2931*	Transfer Current On/Off Timing (LCT)	
001	La1	Adjusts on transfer current ON timing for front side copying. [−30~+30/1 mm]
002	La1f	DFU
003	Lc1r	
004	Lc1	
005	La2	
006	La2f	
007	Lc2r	
008	Lc2	
009	La3	
010	La3f	
011	Lc3r	
012	Lc3	
		Adjusts the area where the transfer is applied for the leading edge during front side copying. [0~+20/1 mm]
		Adjusts the area where the transfer current is applied for the trailing edge during front side copying. [0~+20/1 mm]
		Adjusts the transfer current OFF timing for front side copying. [−30~+30/1 mm]
		Adjusts on transfer current ON timing for back side copying. [−30~+30/1 mm]
		Adjusts the area where the transfer current is applied for the leading edge during back side copying. [0~+20/1 mm]
		Adjusts the area where the transfer current is applied for the trailing edge during back side copying. [0~+20/1 mm]
		Adjusts the transfer current OFF timing for back side copying. [−30~+30/1 mm]
		Adjusts the transfer current ON timing for copying thick paper from the LCT. [−30~+30/1 mm]
		Adjusts the transfer current OFF timing for copying thick paper from the LCT. [−30~+30/1 mm]
		Adjusts the transfer current ON timing for copying with thick paper from the LCT [−30~+20/1 mm]
		Adjusts the transfer current OFF timing for copying with thick paper from the LCT. [−30~+30/1 mm]

2932*	Transfer Current On/Off Timing (Tray 1)		
001	La1		Adjusts on transfer current ON timing for front side copying. [−30~+30/1 mm]
002	La1f	DFU	Adjusts the area where transfer current is applied for the leading edge during front side copying. [0~+20/1 mm]
003	Lc1r		Adjusts the area where transfer current is applied for the trailing edge during front side copying. [0~+20/1 mm]
004	Lc1		Adjusts the transfer current OFF timing for front side copying. [−30~+30/1 mm]
005	La2		Adjusts on transfer current ON timing for back side copying. [−30~+30/1 mm]
006	La2f		Adjusts the transfer current for the leading edge during rear side copying. [0~+20/1 mm]
007	Lc2r		Adjusts the transfer current for the trailing edge during back side copying. [0~+20/1 mm]
008	Lc2		Adjusts the transfer current OFF timing for back side copying. [−30~+30/1 mm]
009	La3		Adjusts the transfer current ON timing for copying thick paper from Tray 1. [−30~+30/1 mm]
010	La3f		Adjusts the transfer current OFF timing for the leading edge length when with copying thick paper from the bypass tray. [−30~+20/1 mm]
011	Lc3r		Adjusts the transfer current ON timing for the trailing edge length when copying with thick paper from Tray 1. [0~+20/1 mm]
012	Lc3		Adjusts the transfer current OFF timing for copying with thick paper from Tray 1. [−30~+30/1 mm]

2933*			Transfer Current On/Off Timing (Tray 2)
001	La1		Adjusts on transfer current ON timing for front side copying. [−30~+30/1 mm]
002	La1f	DFU	Adjusts the area where transfer current is applied for the leading edge during front side copying. [0~+20/1 mm]
003	Lc1r		Adjusts the area where transfer current is applied for the trailing edge during front side copying. [0~+20/1 mm]
004	Lc1		Adjusts the transfer current OFF timing for front side copying. [−30~+30/1 mm]
005	La2		Adjusts on transfer current ON timing for back side copying. [−30~+30/1 mm]
006	La2f		Adjusts the area where transfer current is applied for the leading edge during rear side copying. [0~+20/1 mm]
007	Lc2r		Adjusts the area where the transfer current is applied for the trailing edge during back side copying. [0~+20/1 mm]
008	Lc2		Adjusts the transfer current OFF timing for back side copying. [−30~+30/1 mm]
009	La3		Adjusts the transfer current ON timing for copying thick paper from Tray 2. [−30~+30/1 mm]
010	La3f		Adjusts the transfer current OFF timing for the leading edge length when copying thick paper from Tray 2. [0~20/1 mm]
011	Lc3r		Adjusts the transfer current ON timing for the trailing edge length when copying with thick paper from Tray 2. [0~20/1 mm]
012	Lc3		Adjusts the transfer current OFF timing for copying with thick paper from Tray 2. [−30~+30/1 mm]

2934*	Transfer Current On/Off Timing (Tray 3)		
001	La1		Adjusts on transfer current ON timing for front side copying. [−30~+30/1 mm]
002	La1f	DFU	Adjusts the area where transfer current is applied for the leading edge during front side copying. [0~+20/1 mm]
003	Lc1r		Adjusts the area where transfer current is applied for the trailing edge during front side copying. [0~+20/1 mm]
004	Lc1		Adjusts the transfer current OFF timing for front side copying. [−30~+30/1 mm]
005	La2		Adjusts on transfer current ON timing for back side copying. [−30~+30/1 mm]
006	La2f		Adjusts the area where transfer current is applied for the leading edge during rear side copying. [0~+20/1 mm]
007	Lc2r		Adjusts the area where transfer current is applied for the trailing edge during back side copying. [0~+20/1 mm]
008	Lc2		Adjusts the transfer current OFF timing for back side copying. [−30~+30/1 mm]
009	La3		Adjusts the transfer current ON timing for copying thick paper from Tray 3. [−30~+30/1 mm]
010	La3f		Adjusts the transfer current OFF timing for the leading edge length when copying thick paper from Tray 3. [0~20/1 mm]
011	Lc3r		Adjusts the transfer current ON timing for the trailing edge length when copying with thick paper from Tray 3. [0~20/1 mm]
012	Lc3		Adjusts the transfer current OFF timing for copying with thick paper from Tray 3. [−30~+30/1 mm]

2935*			Transfer Current On/Off Timing (Tray 4) (Japan Only)	
001	La1		DFU	Adjusts on transfer current ON timing for front side copying. [−30~+30/1 mm]
002	La1f	Adjusts the area where transfer current is applied for the leading edge during front side copying. [0~+20/1 mm]		
003	Lc1r	Adjusts the area where transfer current is applied for the trailing edge during front side copying. [0~+20/1 mm]		
004	Lc1	Adjusts the transfer current OFF timing for front side copying. [−30~+30/1 mm]		
005	La2	Adjusts on transfer current ON timing for back side copying. [−30~+30/1 mm]		
006	La2f	Adjusts the area where transfer current is applied for the leading edge during rear side copying. [0~+20/1 mm]		
007	Lc2r	Adjusts the area where transfer current is applied for the trailing edge during back side copying. [0~+20/1 mm]		
008	Lc2	Adjusts the transfer current OFF timing for back side copying. [−30~+30/1 mm]		
009	La3	Adjusts the transfer current ON timing for copying thick paper from Tray 4. [−30~+30/1 mm]		
010	La3f	Adjusts the transfer current OFF timing for the leading edge length when copying thick paper from Tray 4. [0~20/1 mm]		
011	Lc3r	Adjusts the transfer current ON timing for the trailing edge length when copying with thick paper from Tray 4. [0~20/1 mm]		
012	Lc3	Adjusts the transfer current OFF timing for copying with thick paper from Tray 4. [−30~+30/1 mm]		

2936	Transfer Current On/Off Timing (By-pass)	
001	La1	Adjusts on transfer current ON timing for front side copying. [−30~+30/1 mm]
002	La1f	Adjusts the area where transfer current is applied for the leading edge during front side copying. [0~+20/1 mm]
003	Lc1r	Adjusts the area where transfer current is applied for the trailing edge during front side copying. [0~+20/1 mm]
004	Lc1	Adjusts the transfer current OFF timing for front side copying. [−30~+30/1 mm]
009	La3	Adjusts the transfer current ON timing for copying on thick paper. [−30~+30/1 mm]
010	La3f	Adjusts the transfer current OFF timing for the leading edge length when copying on thick paper. [0~20/1 mm]
011	Lc3r	Adjusts the transfer current ON timing for the trailing edge length when copying with thick paper. [0~20/1 mm]
012	Lc3	Adjusts the transfer current OFF timing for the leading edge when copying with thick paper. [−30~+30/1 mm]
013	La4	Adjusts the transfer current OFF timing for copying with OHP. [−30~+30/1 mm]
014	La4f	Adjusts the transfer current OFF timing for the leading edge when copying with OHP. [0~20/1 mm]
015	Lc4r	Adjusts the transfer current OFF timing for the trailing edge when copying with OHP. [0~20/1 mm]
016	Lc4	Adjusts the transfer current OFF timing for copying with OHP. [0~20/1 mm]

2940*	Reface Mode
	Controls if a blade bend prevention pattern is made when the ID sensor pattern is made. This setting controls the pattern count. DFU [0~100/1] <i>Increase the setting if the rotation of the drum is not smooth, that is, when drum rotation is making noise.</i>

2950	Vh Pattern Creation Setting (B140) DFU	
001	Exposure Level	[0~15/1]
002	Offset Light Amount	[-45 ~100/1]

2961	Developer Adjust Mode DFU
-------------	----------------------------------

2962	Automatic Adjustment of Drum Conditions
	Touch [Execute] to execute the process control cycle manually. Note: This SP executes only if SP3901 is enabled.

2963	Installation Mode
	Use the keyboard display to enter the lot number of the developer. (The lot number is embossed on the top edge of the developer pack.) Press "Execute" to initialize the developer and force toner supply to the toner hopper at machine installation.

2964*	Transfer Cleaning Blade Forming
001	Pattern Interval Setting
	Selects the interval for application of a strip of toner across drum and transfer belt to prevent the drum cleaning blade and belt cleaning blade from sticking and bending against the drum or belt. [0~200/1 copy] DFU <i>If set to zero, then no pattern is created.</i>
002	Pattern Light Amount Setting
	Adjusts the intensity of light that is used to create the blade protection pattern. [0~4/1] DFU
003	Transfer Current On/Off Setting
	Determines whether transfer current is switched on or off while the blade protection pattern is created. DFU Sets Off, toner is applied to the entire cleaning area and drum cleaning blade. [0~1/1] 0: Off 1: On

2965*	Toner Pump System Adjustment DFU (B064)	
	The transportability of toner improves if there is more than the prescribed amount of toner in the toner unit. In order to achieve this the prescribed amount of toner must be in the unit. The amount of toner pumped is determined by the amount of toner consumed, so by adjusting the amount of consumption, the machine can determine the amount of tone to pump to keep the toner supply unit topped off: Toner Consumed (g) = Pixel Count x Target Toner Amount	
001	Toner Consumption for First Rotation	[1~100/1 g] DFU
002	Toner Consumption After First Rotation	[1~100/1 g] DFU
003	Pump Clutch On Time	[1~5/1 s] DFU
004	Pump Motor On Time	[1~20/1 s] DFU
005	Toner Consumed: Rev. Returning to First	[1~50/1 g] DFU
006	Amount of Toner Consumed Display	DFU

2966*	Drum Conditions: Periodic Adjustment (B064 Series)	
001	On/Off	
	Controls if auto process control is done and corona wire cleaning is done at a set interval. [0~1/1] 0: On 1: Off When this setting is on, auto process control and wire cleaning are done automatically at the end of the job if process control was not done for 24 hours or more.	
002	Time Setting	
	Sets the time interval between automatic adjustments after SP2966 001 is turned on. [1~24/1 hour]	

2966*	Drum Conditions: Periodic Adjustment (B140/B246 Series)	
	Sets the time interval between automatic adjustments. [1~24/1 hour]	

2967*	Developer Density Adjustment Mode	
	Determines whether the amount of toner is checked during auto process control with only the TD sensor. With this feature on, the machine uses the TD sensor only. [0~1/1] 0: Off 1: On <i>During auto process control execution after the main switch is turned on, the toner amount in the development unit is normally checked and adjusted using the ID sensor. However, in some environments, such as where there could be traces ammonia in the air, copies could appear dirty or too dark because the ID sensor reading is not reliable.</i>	

2968	Toner Exit Mode	
	Press Execute to force used toner into the toner collection bottle. The moving components of the cleaning and toner collection areas will rotate for about 60 sec. with the transfer belt released.	

2969*	Toner Bottle Revolution Count	
001	Copy Count Setting	Sets the standard number of copies by using the number of toner bottle rotations. DFU [50~500/1]
002	Count Reset	Press "Execute" to reset the toner bottle rotation count. DFU
003	Copy Count Display 1	Used to check the number of toner bottle rotations.

2970*	Transfer Belt Resistance: Disp. Current Value (B140)	
	Displays the resistance of the bare transfer belt at the interval between the leading edge of a sheet and the trailing edge of the sheet ahead of it in the paper path. The displayed value is (MΩ). DFU	

2971*	Trans. Interval Output	
001	Voltage	Displays the measurement condition of the value in SP2970.
002	Current	

2972*	Toner Bottle Cool. Fan Drive Control	
	Switches fan control On/ Off . [0~1/1] 0: Off. The toner bottle fan switches off when the machine's operation switch is turned off and when the machine enters the night mode. 1: On: Toner bottle fan remains on. <i>Switch on in an extremely hot environment to prevent the toner from overheating and clumping.</i>	

SP3xxx Processing

3001*	ID Sensor Initial Setting
001	ID Sensor PWM Setting
	Recovers the machine when an SC is logged because the ID Sensor Initial Setting is not done after doing an NVRAM Clear or replacing the NVRAM. Reset this SP to the factory setting in this case. [0~255/1]
002	ID Sensor Initialization
	Performs the ID sensor initial setting. The ID sensor output for the bare drum (VSG) is adjusted to $4.0 \pm 0.2V$. Press "Execute". This SP mode should be performed after: (1) Replacing or cleaning the ID sensor, (2) Replacing the NVRAM, (3) Clearing NVRAM, (4) Replacing the BICU board.

3103*	ID Sensor Output Display
001	Vsg
	Displays the current value of the ID sensor output after checking the bare drum surface.
002	Vsp
	Displays the current value of the ID sensor output after checking the ID sensor pattern image
003	Vsdp
	Displays the current value of the ID sensor output immediately after Vsp is output when the charge potential drops. This reading is used to test and determine characteristics for design. Note: If the ID sensor output is abnormal, an SC is logged and the displays change: 1) SC350-01 logged: Vsp/Vsg/Vsdp = 0.00/0.00/0.00 2) SC350-02 logged: Vsp/Vsg/Vsdp = 5.00/5.00/5.00 3) SC350-03 logged: Vsp/Vsg/Vsdp = 0.01/0.01/0.01

3901*	Auto Process Control On/Off Setting
	Determines whether the machine checks and corrects the drum potential (Vd) and LD power when the fusing temperature is lower than 100°C at power-on. [0~1/1] 0: Off 1: On This setting attempts to change the Vd setting consistent with the OPC, the charge corona unit, and environment to improve the reliability of the system.

3902*	Drum Condition Display
001	Auto Process Control On/Off
	Displays whether auto process control is switched on or off (0:Off, 1: On) When auto processing control is set on, displays only when the potential sensor is calibrated correctly. Auto process control is not executed when this SP is switched off. [0~1/1] 0: Off 1: On
002	Vd
	Displays drum dark potential, the standard potential, electrical potential of the black areas after exposure.
003	Vh
	Displays standard halftone drum potential, used for laser power adjustment.
004	Vg
	Displays the charge grid voltage resulting from the latest Vd adjustment.
005	LD Level
	Displays the LD power correction value as a result of the latest Vh adjustment.
006	ID Sensor Pattern Potential
	Displays Vid, the latest drum surface voltage measured on the ID sensor pattern.
007	Vql
	Displays the drum potential after quenching.
008	VI
	Shows the standard electrical potential of white areas on the drum after exposure.

3903*	Drum Rotation Time Extension On/Off (B064Series)
	Turn this setting on to decrease out-of-focus copy images when the machine is used immediately after power-on. [0~1/1] 0: Off 1: On <i>If On is selected, after auto process control, the drum continues to rotate until the fusing unit gets to its operation temperature.</i>

3903*	Drum Rotation Time Extension Mode (B140/B246 Series)
001	<p>(0:OFF/1:ON)</p> <p>Turns on the drum rotation mode. This increases the time that the drum turns freely after the machine is turned on. After this function is turned on with this SP, it will be enabled only when SP3904 001 is set to "2". If SP3904 001 is set to "0" or "1", the extra drum rotation mode will not be enabled.</p> <p>[0~1/1]</p> <p>0: Extra drum rotation mode is off.</p> <p>1: After auto process control, the drum continues to turn until the fusing unit gets to its operation temperature. Use this setting to decrease out-of-focus copy images when the machine is used immediately after power-on.</p>
002	<p>Drum Rotation Time</p> <p>Sets the amount of time the drum turns in the drum rotation mode before the first copy after the machine is turned on. SP3903-001 must be on or this setting has no effect.</p> <p>[120~600/1]</p>

3904	Warm Up Short Mode (B140/B246 Series)
	<p>Controls when corona wire cleaning is done to adjust the length of time that is necessary for startup.</p> <p>[0~2/1]</p> <p>0: Charge corona wire not cleaned when the machine is turned on. Warmup Time: 30 sec. (Short Process Control is done)</p> <p>1: Charge corona wire cleaned only when the machine is turned on. Warmup Time: 30 sec. + 40 sec. (for cleaning) = 70 sec. (Short Process Control is done)</p> <p>2: Normal startup procedure at power on: Warmup Time: 240 sec. (Full Process Control is done; same as B064)</p> <ul style="list-style-type: none"> • Potential sensor calibrated • Drum starts to turn when fusing unit gets to the warmup temperature (not done during Short Process Control) • Potential sensor readings are used to adjust development bias, grid voltage, laser diode. • ID sensor calibrated (not done during Short Process Control) • TD sensor calibrated (not done during Short Process Control)



SP4xxx Scanner

4008*	Scanner Sub Scan Magnification
	<p>Fine adjusts the magnification in the sub scan direction for scanning by changing the speed of the scanner motor.</p> <p>[−0.9~+0.9/0.1 %]</p> <p><i>Setting a lower value reduces the speed of the motor and lengthens the image in the sub scan direction (direction of paper feed).</i></p> <p><i>Setting a higher value increases the speed of the motor speed and shortens the image in the sub scan direction.</i></p>

4010*	Scanner Leading Edge Registration
	<p>Adjust the registration of the leading edge for scanning in the sub scan direction.</p> <p>[−0.9~+0.9/0.1 %]</p> <p><i>This setting ensures that the point where the original strikes the registration roller matches the point where the F-GATE signal will trigger the start of scanning in the main scan direction.</i></p> <p><i>Setting a larger value shifts the image away from the leading edge, and a smaller value shifts the image toward the leading edge.</i></p>

4011*	Scanner Side-to-Side Registration
	<p>Adjusts the side-to-side registration for scanning in the main scan direction across the page.</p> <p>[−0.3~+0.3/0.1 %]</p> <p><i>Setting a negative value shifts the image toward the left edge, and setting a positive value shifts the image toward the right edge.</i></p>

4012*	Scanner Erase Margin	
	These settings adjust the margins (erase margins) of the scanned area on the sheet. The leading, trailing, right, and left margins can be set independently.	
001	Leading Edge	[0~0.9/0.1 mm]
002	Trailing Edge	
003	Right	
004	Left	

4013	Scanner Free Run		
	Switches on/off a scanner free run. The scanning area is A3. Press "On" or "Off".		
001	Scanner Free Run: Lamp On	Performs a scanner free run with the exposure lamp on.	
002	Scanner Free Run: Lamp Off	Performs a scanner free run with the exposure lamp off.	

4016*	White Board Read Adjust	
001	Read Start Position	Adjusts the start position for reading the standard white board. [-9~+9/1]
002	Read Width	Adjusts the width of the area read on the standard white board. [-9~+9/1]

4018*	Scanner Optical Axis Adjust	
002	Adjust Display DFU	
	Displays the result after adjusting SP4018 001 [-2~+2/0.1]	
003*	Read Position Set	
	Lets you adjust the scanning position for free runs. It changes the scanning stop position if the exposure glass causes black lines because it is dirty. The default is set with SP4018 001. If you adjust this SP, the leading edge registration changes and the setting of SP6006 003 for the ADF also changes. [-4~+4/0.1]	
004	Read Position Set Start	
	If 003 is adjusted, push Execute to force the change to take effect on the main machine.	

4019*	Scanner HP View Position Display	
	Use to display the status of each error after SC120, SC121, SC122, or SC123 is logged. (These are scanner HP sensor errors.) [0~1/1] 0: Normal 1: Abnormal Bit 0: Sensor OFF at start of high-speed return operation. Bit 1: Remains ON after return. Bit 2: Remains ON during return. Bit 3: Does not switch OFF during forward motion Bit 4: Switches ON at return Bit 5: Scanner HP detection is out of position.	

4020	ADF Scan Glass Dust Check
	This feature checks the ADF exposure glass for dust that can cause black lines in copies. If dust is detected, a message is displayed, but the process does not stop.
001	Check On/Off Change (0:OFF/1:ON) Issues a warning if there is dust on the narrow scanning glass of the ADF when the original size is detected before a job starts. This function can detect dust on the white plate above the scanning glass, as well as dust on the glass. Sensitivity of the level of detection is adjusted with SP4020-002. [0~1/1] 0: Off. No dust warning. 1: On. Dust warning. This warning does not stop the job. Note: Before switching this setting on, clean the ADF scanning glass and the white plate above the scanning glass.
002	Detect Level Adjusts the sensitivity for dust detection on the ADF scanning glass. This SP is available only after SP4020-001 is switched on. [0~8/1] <ul style="list-style-type: none"> • If you see black streaks in copies when no warning has been issued, raise the setting to increase the level of sensitivity. • If warnings are issued when you see no black streaks in copies, lower the setting. • Dust that triggers a warning could move be removed from the glass by the originals in the feed path. If the dust is removed by passing originals, this is not detected and the warning remains on.
003	Rejection Level Sets the level for vertical line correction (the black vertical lines caused by dust on the ADF exposure glass). [0~7/1] 0: No vertical line correction. 1-7: Enables and sets the level for vertical line correction. If you select a higher number, this can decrease the unwanted lines caused by dust. But, it can also erase thin vertical lines of the original.

4301	APS Sensor Output Display
	Displays the APS sensor output signals when an original is placed on the exposure glass. If a non-standard size is placed on the glass, asterisks (*) are displayed.

4303*	APS A5 Size Detection
	Selects whether or not the copier determines that the original is A5/HLT size when the APS sensor does not detect the size. [0~1/1] 0: Not detected 1: A5 SEF (5 1/2" x 8 1/2") If "1" is selected, paper sizes that cannot be detected by the APS sensors are detected as A5 SEF. If "0" is selected, "Cannot detect original size" will be shown.

The following SP codes are for the B246 Series.

4550	Scanner:Text/**	
4551	Scanner: Text	
4553	Scanner: Text/Photo	
4554	Scanner: Photo	
4565	Scanner: Grayscale	
4580	Fax: Text/**	
4581	Fax: Text	
4582	Fax: Text/Photo	
4583	Fax: Photo	
4584	Fax: Original 1	
4585	Fax: Original 2	
001	MTF Filter Level: Main Scan: 0-15	Sets the MTF level (Modulation Transfer Function) coefficient designed to improve image contrast. Set higher for stronger effect, lower for weaker effect. [0~15/1]
003	MTF Filter Strength: Main Scan: 0-7	Sets the strength of the coefficient selected for 001. [0~7/1] Note: Set 001 before adjusting the strength with 002.
006	Smoothing Filter:0-7	Use to remove "jaggies" if they appear. Set higher for smoother. [0~7/1]
007	Brightness:1-255	Set higher for darker, set lower for lighter. [1~255/1]
008	Contrast:1-255	Set higher for more contrast, set lower for less contrast. [1~255/1]
009	Isolated Dot Removal:0-7	This SP sets the level for removing dots when a color original is scanned with a scanner software application. The higher the setting, the greater the effect applied for removing background dots. [0~7/0/1]

Service
Tables

4600*	Read SBU ASIC ID
	Displays the SBU ID code confirmed by reading the SBU after the SBU adjusts automatically at power on. [0~FFFFh/1]

4601*	SBU PLL Adjustment
	Adjusts the PLL bandwidth. DFU [0~FFFFh/1]

4605	Scanner Adjustment
001*	Flag Display
	Displays a flag to indicate whether density control adjustment was executed with the standard white board for the CCD. [0~1/1] 0: Not executed. 1: Executed
002	Start
	Starts the density adjustment for the CCD using the standard white board. Place 5 sheets of A3 plain paper on the exposure glass, then press Execute. A message is displayed to indicate the success or failure of the adjustment. DFU

4610*	White Level Adj: Next	DFU
4613*	White Level Adj.: Previous Normal	
4616*	White Level Adj.: Factory	
4624*	Read Offset Data	
4632*	Gain Adjustment	
4641*	White Adjust Loop	
4646*	SBU Adjustment Error Flag	
4647*	SBU Hard Error Flag	
4662*	Gain Adjustment Normally	
4681*	Gain Adjustment at Factory	
4691*	Read Shading Data	
4694*	Black Level	

4700*	Read CIS ASIC ID
	Reads and displays the ID of the CIS board at power.

4701*	Frequency Adjust	DFU
4702*	Periodic Adjustment Setting	

4705	CIS Adjustment
001*	Flag Display
	Displays whether density adjustment was executed for the CIS, using the white roller. [0~1/1] 0: Not executed 1: Executed
002	Start
	Starts the standard white density adjustment for the CIS. Place 5 sheets of A3 on the exposure glass, then press Execute. A message is displayed to indicate the success or failure of the adjustment. DFU

4713*	CIS White Level Adjustment	DFU
4716*	CIS White Level Adjustment	
4732*	CIS Gain Adjustment	
4735*	CIS Read White Level	
4741*	CIS White Adjust Loop	
4742*	CIS White Roller Adjust Loop	
4745*	CIS Adjustment Overflow Flag	
4747*	CIS Adjustment Time Out Flag	
4762*	CIS Gain Adjustment Normal	
4765*	CIS Adjustment Overflow Flag	
4781*	CIS Gain Adjustment at Factory	

4901	Front Side Scan Correction	
001*	Front Shading Correction: AEREF Setting	
	Changes the AEREF (Automatic Exposure Reference) value that is used in shading correction for the image scanned from the front side (SBU). DFU [0~63/1]	
002	Front Shading Correction: Shading Data Output	
	Outputs the AEREF value that is used in shading correction for the image scanned from the front side (SBU). DFU [0~1/1] 0: Normal 1: Output After you set 001, go back to the Copy Window and push Start. (The machine automatically goes out of SP mode.)	
003*	Front Digital AE: AEREF Setting	
	Changes the AEREF (Automatic Exposure Reference) value that is used in digital A/E processing for the image data scanned from the front side. DFU [-63/63]	
004*	Front Digital AE: Low Limit	
	Sets the low limit at 120 for the value used in digital A/E processing for the image data scanned from the front side. DFU [0~1/1] 0: No low limit 1: Low limit set	
010*	Front Scan Image Adj. Mode: Text	Changes the density of front side (SBU) scanned image data and the MTF. [0~3/1] 0: Normal 1: Low Level 2: Medium Level 3: High Level
011*	Front Scan Image Adj. Mode: Photo	
012*	Front Scan Image Adj. Mode: Text/Photo	
013*	Front Scan Image Adj. Mode: Pale	
014*	Front Scan Image Adj. Mode: Generation	
019*	Front Scan Image Adj. Mode: Setting	0: The adjustment will be applied only for duplex mode front side copies. 1: The adjustment will be applied for simplex mode, and for front side copies in duplex mode.

4902	Back Side Scan Correction	
001*	Back Shading Correction: AEREF Setting	DFU
002	Back Shading Correction: Shading Output Data	DFU
003*	Back Digital AE: AEREF Setting	DFU
004*	Back Digital AE: Low Limit	DFU
010*	Back Scan Image Adj. Mode: Text	Changes the density of rear side (SBU) scanned image data and the MTF. [0~3/1] 0: Normal 1: Low Level 2: Medium Level 3: High Level
011*	Back Scan Image Adj. Mode: Photo	
012*	Back Scan Image Adj. Mode: Text/Photo	
013*	Back Scan Image Adj. Mode: Pale	
014*	Back Scan Image Adj. Mode: Generation	Selects mode for scan selection. 0: Mode for the default scanner 1: Mode for the upgraded scanner.
019*	Back Scan Image Adj. Scan Select Mode DFU	

4903*	Image Quality Adj.	
	Text Mode	
	Adjusts the sharpness and texture of images processed in Text mode.	
001	Text Mode (25.0~55%)	[0~10/1] 0: Softest 5: Normal 10: Sharpest
002	Text Mode (55.5~75.0%)	
003	Text Mode (75.5%~160%)	
004	Text Mode (160.5~400.0%)	
	Photo Mode Dithering	
	Adjusts the sharpness and texture of images processed in Photo mode with dithering	
005	Photo Mode Dithering (25.0~55%)	[0~6/1] 0: Softest 3: Print Original Mode 6: Sharpest
006	Photo Mode Dithering (55.5~75.0%)	
007	Photo Mode Dithering (75.5%~160%)	
008	Photo Mode Dithering (160.5~400.0%)	
	Photo Mode Error Diffusion	
	Adjusts the sharpness and texture of images processed in Photo mode with error diffusion.	
009	Photo Mode Error Diffusion (25.0~55%)	[0~6/1] 0: Softest 1: Normal (Default) 6: Sharpest
010	Photo Mode Error Diffusion (55.5~75.0%)	
011	Photo Mode Error Diffusion (75.5%~160%)	
012	Photo Mode Error Diffusion (160.5~400.0%)	
	Text/Photo Mode	
	Adjusts the sharpness and texture of images processed in Text/Photo mode.	
013	Text/Photo Mode (25.0~55%)	[0~10/1] 0: Softest 1: Photo Priority
014	Text/Photo Mode (55.5~75.0%)	
015	Text/Photo Mode (75.5%~160%)	

016	Text/Photo Mode (160.5~400.0%)	5: Normal (Default) 9: Text Priority 10: Sharpest
	Pale Mode	
	Adjusts the sharpness and texture of images processed in Pale mode.	
017	Pale Mode (25.0~55%)	[0~10/1] 0: Softest 1: Soft 5: Normal (Default) 9: Sharp 10: Sharpest
018	Pale Mode (55.5~75.0%)	
019	Pale Mode (75.5%~160%)	
020	Pale Mode (160.5~400.0%)	
	Generation Mode	
	Adjusts the sharpness and texture of images processed in Generation mode.	
021	Generation Mode (25.0~55%)	[0~10/1] 0: Softest 1: Soft 5: Normal (Default) 9: Sharp 10: Sharpest
022	Generation Mode (55.5~75.0%)	
023	Generation Mode (75.5%~160%)	
024	Generation Mode (160.5~400.0%)	

	Independent Dot Erase	
	Sets the level for independent dot erasure. The higher the setting, the stronger the effect.	
060	Independent Dot Erase: Text Mode	[0~14/1]
061	Independent Dot Erase: Photo Mode	[0~14/1]
062	Independent Dot Erase: Text/Photo Mode	
063	Independent Dot Erase: Pale Mode	
064	Independent Dot: Generation Mode	[0~14/1]
	Background Erase	
	Sets the level for background erase. The higher the setting, the stronger the effect.	
070	Background Erase: Text Mode	[0~255/1]
071	Background Erase: Photo Mode	
072	Background Erase: Text/Photo Mode	
073	Background Erase: Pale Mode	
074	Background Erase: Generation Mode	
	Line Width Correction	
	Selects the level of line width correction for the copy mode and direction of scanning. Where a range of settings is possible, [0~8] for example, the higher the setting, the thicker the lines.	
080	Line Width Correction: Text Mode Select	[0~8/1]
081	Line Width Correction: Text Mode (Main Scan)	[0~1/1] 0: Off, 1: On
082	Line Width Correction: Text Mode (Sub Scan)	[0~1/1] 0: Off, 1: On
083	Line Width Correction: Photo Mode Select	[0~8/1]
084	Line Width Correction: Photo Mode (Main Scan)	[0~1/1] 0: Off, 1: On
085	Line Width Correction: Photo Mode (Sub Scan)	[0~1/1] 0: Off, 1: On
086	Line Width Correction: Text/Photo Mode Select	[0~8/1]
087	Line Width Correction: Text/Photo Mode (Main Scan)	[0~1/1] 0: Off, 1: On
088	Line Width Correction: Text/Photo Mode (Sub Scan)	[0~1/1] 0: Off, 1: On
089	Line Width Correction: Pale Mode Select	[0~8/1]
090	Line Width Correction: Pale Mode (Main Scan)	[0~1/1] 0: Off, 1: On
091	Line Width Correction: Pale Mode (Sub Scan)	[0~1/1] 0: Off, 1: On
092	Line Width Correction: Generation Mode Select	[0~8/1]
093	Line Width Correction: Generation Mode (Main Scan)	[0~1/1] 0: Off, 1: On
094	Line Width Correction: Generation Mode (Sub Scan)	[0~1/1] 0: Off, 1: On

4904*	Line Width Correct	
002	Processing Select: Photo	<p>Selects the image processing mode for Photo Mode.</p> <p>[0~3/1]</p> <p>0: 106 line dither processing 1: 141 line dither processing 2: 212 line dither processing 3: Error diffusion processing</p>
020	Text Mode	<p>Turns line correction on/off for each mode.</p> <p>[0~1/1]</p> <p>0: No processing 1: Makes thin lines more thick.</p>
021	Photo Mode	
022	Text/Photo Mode	
023	Pale Mode	
024	Generation Mode	

4909	Image Processing Through DFU	
001	IPU Front Side Image Module	<p>Selects the image processing module for scanning related to the SBU. The SBU (Sensor Board Unit) converts the scanned image to digital before sending it to the IPU.</p> <p>[0~127/1]</p>
002	IPU Back Side Image Module	<p>Selects the image processing module for scanning related to the CIS (Contact Image Sensors).</p> <p>[0~63/1]</p>
003	IPU Plotter Image Module	<p>Selects the image processing module for scanning related to the SBU.</p> <p>[0~255/1]</p>

**SP5xxx Mode**

5024*	mm/inch Display Selection
	Selects the unit of measurement. After selection, turn the main power switch off and on. [0~1/1] 0: mm 1: inch

5037	Status Lamp Detection
	Enables or disables the function of the status lamp installed above the operation panel. [0~1/1] 0: Off: Disabled 1: On: Enabled <i>This status lamp requires special ordering and installation for this machine.</i>

5045	Accounting Counter
	Selects the counting method if the meter charge mode is enabled with SP5-930-001. Note: You can change the setting only one time. [0 to 1/ 1] 0: Development counter. Shows the total counts for color (Y,M,C) and black (K). 1: Paper counter. Shows the total page counts for: Color Total, Black Total, Color Copies, Black Copies, Color Prints, Black Prints.

5047	Reverse Display	
001	Reverse Paper Display	Determines whether the tray loaded with paper printed on one side is displayed on the operation panel. [0~1/0/1] 0: Not displayed 1: Displayed
002	Punched Paper	Determines whether the tray loaded with punched paper is displayed on the operation panel. [0~1/1/1] 0: Disable 1: Enable

5051	Toner Refill Detection Display Japan Only
-------------	--

5055	Display IP Address (B246)
	Switches the banner display of MFP device display on and off. [OFF] ON

5057	Assign Eye-Catch Icons
	Determines whether the eye-catch icons are displayed in the color mode for copying and scanning. [0~1/0/1] 0: Display off 1: Display on

5104	A3/DLT Double Count
	Specifies whether the counter is doubled for A3/DLT. "Yes" counts except from the bypass tray. When "Yes" is selected, A3 and DLT paper are counted twice, that is A4 x2 and LT x2 respectively.

5106*	Auto Density Level
	Selects the image density levels that are used in ADS mode by assigning a value to the center notch. [1~7/1 step/notch]

5112*	Non-Std. Paper Sel.
	Determines whether a non-standard paper size can be input for the universal cassette trays (Tray 2, Tray 3) [0~1/1] 0: No 1: Yes. If "1" is selected, the customer will be able to input a non-standard paper size using the UP mode.

5113*	Optional Counter Type
001	Default Optional Counter Type
	Selects the type of counter: 0: None 1: Key card (RK3, 4) Japan only 2: Key card down (countdown type) 3: Pre-paid card 4: Coin Lock 5: MF key card 11: Exp Key Card (Add) 12: Exp Key Card (Deduct)
002	External Optional Counter Type
	Enables the SDK (Software Development Kit) application. This lets you select a number for the external device for user access control. [0~3/1] 0: No external devices. 1: External device 1 – key card 2: External device 2 – key card (countdown type) 3: External device 3 – pre-paid card

5118*	Disable Copying
	Temporarily denies access to the machine. Japan Only [0~1/1] 0: Release for normal operation 1: Prohibit access to machine

5120*	Mode Clear Opt. Counter Removal
	Do not change. Japan Only [0~2/1] 0: Yes. Normal reset 1: Standby. Resets before job start/after completion 2: No. Normally no reset

5121*	Counter Up Timing
	Determines whether the optional key counter counts up at paper feed-in or at paper exit. Japan Only [0~1/1] 0: Feed count 1: No feed count

5126	F Original Size Selection
	Sets the original size that the machine detects for F sizes. [0~2/1] 0: 8hf x 13 1: 8hf x 13qr 2: 8 x 13 Note: hf = 1/2, qr = 1/4

5127	APS OFF Mode
	This SP can be used to switch APS (Auto Paper Select) off when a coin lock or pre-paid key card device is connected to the machine. [0~1/1] 0: On 1: Off

5129	F Paper Size Selection
	Sets the paper size that the machine detects when the 8 x 13 dial setting on a paper cassette is used (LT/DLT version). [0~2/1] 0: 8 x 13 1: 8hf x 13 2: 8qr x 13 Note: hf = 1/2, qr = 1/4

5131*	Paper Size Type Selection
	Selects the paper size type (for originals and copy paper). (Only needs to be adjusted if the optional printer controller is installed) [0~2/1] 0: JP (Japan Only) 1: NA (North America) 2: EU (Europe) After changing the value, turn the main power switch off and on.

5141*	Tray for Tab Sheets (B064 only)
Sets the height of the tabs for each paper source for tab sheets. The height of a tab is measured from the edge of the paper to the edge of the tab.	
011	Tab Height: By-pass
012	Tab Height: Tray 1
013	Tab Height: Tray 2
014	Tab Height: Tray 3
015	Tab Height: Tray 4
016	Tab Height: Tray 5
<p>[0~152/0.1 mm]</p> <p>The height of the tab is the value set for this SP multiplied by 0.1. The default tab height then is: 130 x 0.1 = 13 mm</p> <p>To change this setting, measure the height of the tab in millimeters, multiply by 10, then input the result. For example, if the measured height of the tab is 10 millimeters, enter "100".</p>	

5150	Bypass Length Setting
	Sets up the by-pass tray for long paper. [0~1/1] 0: Off 1: On. Sets the tray for feeding paper up to 600 mm long. <i>With this SP selected on, paper jams are not detected in the paper path.</i>

5154	Exit Tray Set
001	Limitless
	Allows 'limitless' paper output. [0~1/1] 0: Off 1: On. Once the initial paper exit is full, another will be selected automatically. Switch this SP on only in the job queuing mode, i.e. when printing jobs in the order of selection with the print priority function. Print priority is set in the User Tools mode (System Settings> General Features> Print Priority> Job Order.)
002	Override
	Allows overriding of the setting for SP5154-001. [0~1/1] 0: Off 1: On This SP can be set only when on is selected for SP5154-001. Changing this setting has no effect on the machine when SP5154-001 is off.

5158	Cover Feeder Size Change (B140)
	Controls the paper size for the cover interposer tray. Select a paper size and push [Execute]. Note: hf = 1/2, qr = 1/4
001	For all versions [0~1/1] 0: A3 1: 12 x 18
002	For Europe and China [0~2/1] 0: 8hf x 13 1: 8 x 13 2: 8qr x 13
003	For USA [0~1/1] 0: 8hf x 14 1: 8hf x 13
004	For USA [0~1/1] 0: 11 x 8hf 1: 10hf x 7qr
005	For USA [0~1/1] 0: 8hf x 11 1: 8 x 10
006	For Europe and China [0~1/1] 0: 8K 1: 11 x 17
007	For Europe and China [0~1/1] 0: 16K (267 x 195) 1: 8hf x 11
008	For Europe and China [0~1/1] 0: 16K (195 x 267) 1: 11 x 8hf

5162	App. Switch Method (B140/B246) Controls if the application screen is changed with a hardware switch or a software switch. [0~1/1] 0: Soft Key Set 1: Hard Key Set
-------------	--

5167	Fax Printing Mode at Optional Counter Off (B246) DFU
-------------	---

5169	CE Login (B140/B246) If you will change the printer bit switches, you must 'log in' to service mode with this SP before you go into the printer SP mode. [0~1/1] 0: Off. Printer bit switches cannot be adjusted. 1: On. Printer bit switches can be adjusted.
-------------	---

5187	PM Counter Print Out in UP (B246) This setting determines whether parts without standard counts print in addition to the normal counter list [0~1/0/1] 0: No 1: Yes
-------------	--

5227	Page Numbering (B246)
200	Change Page No. Display
	This SP code determines whether the page number adjustment display is on or off. [0~1/0/1] 0: Display off 1: Display on
201	Allow Page No. Entry
	This SP specifies the number of digits to display for the entry of the starting page number. [2~9/9/1]
202	Zero Surplus Setting
	This setting determines whether page numbers are prefixed with excess zeros when the number is smaller than the number of assigned digits. For example, with this setting on and 3 digits have been specified, the number "3" appears as "003". With this setting off, the number "3" will appear as a "3" without the zeros. [0~1/0/1] 0: No excess zeros 1: Excess zeros displayed

5212*	Page Numbering
003	Duplex Printout Left/Right Position
	Horizontally positions the page numbers printed on both sides during duplexing. [−10~+10/1 mm] 0 is center, minus is left, + is right.
004	Duplex Printout High/Low Position
	Vertically positions the page numbers printed on both sides during duplexing. [−10~+10/1 mm] 0 is center, minus is down, + is up.

5302	Set Time DFU
	Sets the time clock for the local time. This setting is done at the factory before delivery. The setting is GMT expressed in minutes. [−1440~1440/1 min.] JA: +540 (Tokyo) NA: -300 (NY) EU: +6- (Paris) CH: +480 (Peking) TW: +480 (Taipei) AS: +480 (Hong Kong)

5305	Auto Off Function Release Setting
	This SP prevents the user from easily disabling the auto off timer. This is done to conform with international Energy Star standards that specifically state that the user shall not be able to easily switch off the auto off feature. 0: On (Auto Off cannot be released) 1: Off (Auto Off can be released)

5307*	Summer Time	
	<p>Lets you set the machine to adjust its date and time automatically with the change to Daylight Savings time in the spring and back to normal time in the fall. This SP lets you set these items:</p> <ul style="list-style-type: none"> - Day and time to go forward automatically in April. - Day and time to go back automatically in October. - Set the length of time to go forward and back automatically. <p>The settings for 002 and 003 are done with 8-digit numbers:</p>	
	Digits	Meaning
	1st, 2nd	Month. 4: April, 10: October (for months 1 to 9, the first digit of 0 cannot be input, so the eight-digit setting for 002 or 003 becomes a seven-digit setting)
	3rd	Day of the week. 0: Sunday, 1: Monday
	4th	The number of the week for the day selected at the 3rd digit. If "0" is selected for "Sunday", for example, and the selected Sunday is the start of the 2nd week, then input a "2" for this digit.
	5th, 6th	The time when the change occurs (24-hour as hex code). Example: 00:00 (Midnight) = 00, 01:00 (1 a.m.) = 01, and so on.
	7th	The number of hours to change the time. 1 hour: 1
	8th	If the time change is not a whole number (1.5 hours for example), digit 8 should be 3 (30 minutes).
001	Setting	<p>Enables/disables the settings for 002 and 003.</p> <p>[0~1/1]</p> <p>0: Disable</p> <p>1: Enable</p>
002	Rule Set (Start)	The start of summer time.
003	Rule Set (End)	The end of summer time.

5401	Access Control DFU	
	This SP stores the settings that limit uses access to SDK application data.	
006	User Recognition – Copier	<p>This SP codes are provided for future customization of the access control feature. This is to be done at the factory, not in the field.</p> <p>DFU</p>
016	User Recognition – Document Server	
026	User Recognition – Fax	
036	User Recognition – Scanner	
046	User Recognition – Printer	
076	User Recognition – Expanded Function 1	
086	User Recognition – Expanded Function 2	
096	User Recognition – Expanded Function 2	<p>"SDK" is the "Software Development Kit". This data can be converted from SAS (VAS) when installed or uninstalled.</p> <p>DFU</p>
200	SDK1 Unique ID	
201	SDK1 Certification Method	
210	SDK2 Unique ID	
211	SDK2 Certification Method	
220	SDK3 Unique ID	
221	SDK3 Certification Method	



5404	User Code Count Clear (B140/B246)
	Clears the counts for the user codes assigned by the key operator to restrict the use of the machine. Press [Execute] to clear.

5501	PM Alarm
001	PM Alarm Interval
	Sets the PM interval. <i>The value stored in this SP is used when the value of SP55012 is "1".</i> [0 ~ 255 / 0 / 1 k copies/step]
002	Original Count Alarm DFU
	Selects whether the PM alarm for the number of scans is enabled or not. <i>If this is "1", the PM alarm function is enabled.</i> [0 = No / 1 = Yes]

5404	User Code Count Clear (B246)
	Clears the counts for the user codes assigned by the key operator to restrict the use of the machine. Press [Execute] to clear.

5501	PM Alarm (B246)
001	PM Alarm Interval
	Sets the PM interval. <i>The value stored in this SP is used when the value of SP55012 is "1".</i> [0 ~ 255 / 0 / 1 k copies/step]
002	Original Count Alarm DFU
	Selects whether the PM alarm for the number of scans is enabled or not. <i>If this is "1", the PM alarm function is enabled.</i> [0 = No / 1 = Yes]

5504	Jam Alarm (B246) Japan Only
	Sets the alarm to sound for the specified jam level (document misfeeds are not included). RSS use only [0~3 / 3 / 1 step] 0:Zero (Off) 1:Low (2.5K jams) 2:Medium (3K jams) 3:High (6K jams)

5505	Error Alarm (B246)
	Sets the error alarm level. Japan only DFU [0~255 / 50 / 100 copies per step]

5507	Supply Alarm	
001	Paper Supply Alarm (0:Off 1:On)	Switches the control call on/off for the paper supply. DFU 0: Off , 1: On 0: No alarm. 1: Sets the alarm to sound for the specified number transfer sheets for each paper size (A3, A4, B4, B5, DLT, LG, LT, HLT)
002	Staple Supply Alarm (0:Off 1:On)	Switches the control call on/off for the stapler installed in the finisher. DFU 0: Off , 1: On 0: No alarm 1: Alarm goes off for every 1K of staples used.
003	Toner Supply Alarm (0:Off 1:On)	Switches the control call on/off for the toner end. DFU 0: Off , 1: On If you select "1" the alarm will sound when the copier detects toner end.
128*	Interval: Others	The "Paper Supply Call Level: nn" SPs specify the paper control call interval for the referenced paper sizes. DFU [00250 ~ 10000 / 1000 / 1 Step]
132*	Interval: A3	
133*	Interval: A4	
134*	Interval: A5	
141*	Interval: B4	
142*	Interval: B5	
160*	Interval: DLT	
164*	Interval: LG	
166*	Interval: LT	
172*	Interval: HLT	

5508	CC Call Japan Only	
001	Jam Remains	Enables/disables initiating a call.
002	Continuous Jams	[0~1/1]
003	Continuous Door Open	0: Disable 1: Enable
004	Low Call Mode	Enables/disables the new call specifications designed to reduce the number of calls. [0~1/1] 0: Normal mode 1: Reduced mode
011	Jam Detection: Time Length	Sets the length of time to determine the length of an unattended paper jam. [03~30/1] This setting is enabled only when SP5508-004 is enabled (set to 1).
012	Jam Detection Continuous Count	Sets the number of continuous paper jams required to initiate a call. [02~10/1] This setting is enabled only when SP5508-004 is enabled (set to 1).
013	Door Open: Time Length	Sets the length of time the remains opens to determine when to initiate a call. [03~30/1] This setting is enabled only when SP5508-004 is enabled (set to 1).
021	Jam Operation: Time Length	Determines what happens when a paper jam is left unattended. [0~1/1] 0: Automatic Call 1: Audible Warning at Machine
022	Jam Operation: Continuous Count	Determines what happens when continuous paper jams occur. [0~1/1] 0: Automatic Call 1: Audible Warning at Machine
023	Door Operation: Time Length	Determines what happens when the front door remains open. [0~1/1] 0: Automatic Call 1: Audible Warning at Machine

5513	Parts Alarm Level Count Japan Only
001	Normal
	Sets the parts replacement alarm counter to sound for the number of copies. [1~9999 / 350 / 1]
002	DF
	Sets the parts replacement alarm counter to sound for the number of scanned originals. [1~9999 / 350 / 1]

5514	Parts Alarm Level Japan Only	
001	Normal	[0~1 / 1 / 1]
002	DF	[0~1 / 0 / 1]

5515	SC/Alarm Setting	
	With NRS (New Remote Service) in use, these SP codes can be set to issue an SC call when an SC error occurs. If this SP is switched off, the SC call is not issued when an SC error occurs.	
001	SC Call	[0~1/1/1]
002	Near End Call	0: Off
003	End Call	1: On
004	User Call	
005	Not Used	[0~1/1/1]
006	TX Test	
007	Device Information	
008	Alarm	
009	Illegal Toner	
010	Auto Order Supplies	[0~1/0/1]
011	Supply Management Report	
012	Jam/Door Open	[0~1/1/1]

5801	Memory Clear (B064/B140 Series)	
	Clears all data from NVRAM. Before executing this SP, print an SMC Report. (● 5.2.1)	
001	All Clear	Initializes items 2 ~ 15 below.
002	Engine Clear	Initializes all registration settings for the engine and copy process settings.
003	SCS	Initializes default system settings, SCS (System Control Service) settings, operation display coordinates, and ROM update information.
004	IMH Memory Clear	Initializes the image file system. (IMH: Image Memory Handler)
005	MCS	Initializes the automatic delete time setting for stored documents. (MCS: Memory Control Service)
006	Copier application	Initializes all copier application settings.
007	Fax application	Not used.
008	Printer application	Initializes the printer defaults, programs registered, the printer SP bit switches, and the printer CSS counter.
009	Scanner application	Initializes the defaults for the scanner and all the scanner SP modes.
010	Web Service/ Network application	Deletes the Netfile (NFA) management files and thumbnails, and initializes the Job login ID. Netfiles: Jobs to be printed from the document server using a PC and the DeskTopBinder software
011	NCS	Initializes the system defaults and interface settings (IP addresses also), the SmartNetMonitor for Admin settings, WebStatusMonitor settings, and the TELNET settings. (NCS: Network Control Service)
014	Clear DCS Setting	Initializes the DCS (Delivery Control Service) settings.
015	Clear UCS Setting	Initializes the UCS (User Information Control Service) settings.
016	MIRS Setting	Initializes the MIRS (Machine Information Report Service) settings. (B140)
017	CCS	Initializes the CCS (Certification and Charge-control Service) settings. (B140)

5801	Memory Clear (B246)	
	Resets NVRAM data to the default settings. Before executing any of these SP codes, print an SMC Report.	
001	All Clear	Initializes items 2 ~ 15 below.
002	Engine Clear	Initializes all registration settings for the engine and copy process settings.
003	SCS	Initializes default system settings, SCS (System Control Service) settings, operation display coordinates, and ROM update information.
004	IMH Memory Clear	Initializes the image file system. (IMH: Image Memory Handler)
005	MCS	Initializes the automatic delete time setting for stored documents. (MCS: Memory Control Service)
006	Copier application	Initializes all copier application settings.
007	Fax application	Initializes the fax reset time, job login ID, all TX/RX settings, local storage file numbers, and off-hook timer.
008	Printer application	Initializes the printer defaults, programs registered, the printer SP bit switches, and the printer CSS counter.
009	Scanner application	Initializes the defaults for the scanner and all the scanner SP modes.
010	Web Service/Network application	Deletes the Netfile (NFA) management files and thumbnails, and initializes the Job login ID. Netfiles: Jobs to be printed from the document server using a PC and the DeskTopBinder software
011	NCS	Initializes the system defaults and interface settings (IP addresses also), the SmartNetMonitor for Admin settings, WebStatusMonitor settings, and the TELNET settings. (NCS: Network Control Service)
012	R-FAX	Initializes the job login ID, SmartNetMonitor for Admin, job history, and local storage file numbers.
014	Clear DCS Setting	Initializes the DCS (Delivery Control Service) settings.
015	Clear UCS Setting	Initializes the UCS (User Information Control Service) settings.
016	MIRS Setting	Initializes the MIRS (Machine Information Report Service) settings.
017	CCS	Initializes the CCS (Certification and Charge-control Service) settings.
018	SRM Clear	Initializes the SRM (System Resource Manager) settings.
019	LCS Clear	Initializes the LCS (Log Count Service) settings.

5802*	Printer Free Run
	Makes a base engine free run [0~1/1] 0: Disable: Release free run mode 1: Enable: Enable free run mode Return this setting to off (0) after testing is completed.

5803	Input Check
	Displays signals received from sensors and switches. (☛ 5.6.1)

5804	Output Check
	Turns on the electrical components individually for testing. (☛ 5.6.2)

5807	Option Connection Check	
001	ADF (1:Connect)	Displays a 1 or 0 to indicate the status of the device. (002: Bank – Japan only) [0~1/1] 1: Connected 0: Not connected
002	Bank (1:Connect)	
003	LCT (1:Connect)	
004	Finisher (1:Connect)	

5811	Machine No. Setting	
	This SP presents the screen used to enter the 11-digit number of the machine. The allowed entries are "A" to "Z" and "0" to "9". The setting is done at the factory, and should not be changed in the field. DFU	
001	Code Set	This SP code is used to enter the machine serial number at the factory before shipping (11 digits numbers 0-9 and letters A-Z). DFU
003	ID Code Display	Not used

5812*	Service Tel. No. Setting	
001	Service	Inputs the telephone number of the CE (displayed when a service call condition occurs.)
002	Facsimile	Use this to input the fax number of the CE printed on the Counter Report (UP mode). Not Used
003	Supply	Displayed on the initial SP screen.
004	Operation	Allows the service center contact telephone number to be displayed on the initial screen.

5816	Remote Service
001	I/F Setting Turns the remote diagnostics off and on. [0~2/1] 0: Remote diagnostics off. 1: Serial (CSS or NRS) remote diagnostics on. 2: Network remote diagnostics.
002	CE Call Lets the customer engineer start or end the remote machine check with CSS or NRS; to do this, push the center report key
003	Function Flag Enables and disables remote diagnosis over the NRS network. [0~1/1] 0: Disables remote diagnosis over the network. 1: Enables remote diagnosis over the network.
007	SSL Disable Controls if RCG (Remote Communication Gate) confirmation is done by SSL during an RCG send for the NRS over a network interface. [0~1/1] 0: Yes. SSL not used. 1: No. SSL used.
008	RCG Connect Timeout Sets the length of time (seconds) for the time-out when the RCG (Remote Communication Gate) connects during a call via the NRS network. [1~90/1 sec.]
009	RCG Write to Timeout Sets the length of time (seconds) for the time-out when sent data is written to the RCG during a call over the NRS network. [0~100/1 sec.]
010	RCG Read Timeout Sets the length of time (seconds) for the timeout when sent data is written from the RCG during a call over the NRS network. [0~100/1 sec.]
011	Port 80 Enable Controls if permission is given to get access to the SOAP method over Port 80 on the NRS network. [0~1/1] 0: No. Access denied 1: Yes. Access granted.
021	RCG – C Registered This SP displays the Cumin installation end flag. 1: Installation completed 2: Installation not completed
022	RCG – C Registered Detail This SP displays the Cumin installation status. 0: Basil not registered 1: Basil registered 2: Device registered

023	Connect Type (N/M)
	This SP displays and selects the Cumin connection method. 0: Internet connection 1: Dial-up connection
061	Cert. Expire Timing DFU
	Proximity of the expiration of the certification.
062	Use Proxy
	This SP setting determines if the proxy server is used when the machine communicates with the service center.
063	HTTP Proxy Host
	This SP sets the address of the proxy server used for communication between Cumin-N and the gateway. Use this SP to set up or display the customer proxy server address. The address is necessary to set up Cumin-N. Note: <ul style="list-style-type: none">• The address display is limited to 127 characters. Characters beyond the 127th character are ignored.• This address is customer information and is not printed in the SMC report.
064	HTTP Proxy Port Number
	This SP sets the port number of the proxy server used for communication between Cumin-N and the gateway. This setting is necessary to set up Cumin-N. Note: This port number is customer information and is not printed in the SMC report.
065	HTTP Proxy Certification User Name
	This SP sets the HTTP proxy certification user name. Note: <ul style="list-style-type: none">• The length of the name is limited to 31 characters. Any character beyond the 31st character is ignored.• This name is customer information and is not printed in the SMC report.
066	HTTP Proxy Certification Password
	This SP sets the HTTP proxy certification password. Note: <ul style="list-style-type: none">• The length of the password is limited to 31 characters. Any character beyond the 31st character is ignored.• This name is customer information and is not printed in the SMC report.

067	CERT: Up State	
	Displays the status of the certification update.	
	0	The certification used by Cumin is set correctly.
	1	The certification request (setAuthKey) for update has been received from the GW URL and certification is presently being updated.
	2	The certification update is completed and the GW URL is being notified of the successful update.
	3	The certification update failed, and the GW URL is being notified of the failed update.
	4	The period of the certification has expired and new request for an update is being sent to the GW URL.
	11	A rescue update for certification has been issued and a rescue certification setting is in progress for the rescue GW connection.
	12	The rescue certification setting is completed and the GW URL is being notified of the certification update request.
	13	The notification of the request for certification update has completed successfully, and the system is waiting for the certification update request from the rescue GW URL.
	14	The notification of the certification request has been received from the rescue GW controller, and the certification is being stored.
	15	The certification has been stored, and the GW URL is being notified of the successful completion of this event.
	16	The storing of the certification has failed, and the GW URL is being notified of the failure of this event.
	17	The certification update request has been received from the GW URL, the GW URL was notified of the results of the update after it was completed, but an certification error has been received, and the rescue certification is being recorded.
	18	The rescue certification of No. 17 has been recorded, and the GW URL is being notified of the failure of the certification update.
068	CERT: Error	
	Displays a number code that describes the reason for the request for update of the certification.	
	0	Normal. There is no request for certification update in progress.
	1	Request for certification update in progress. The current certification has expired.
	2	An SSL error notification has been issued. Issued after the certification has expired.
	3	Notification of shift from a common authentication to an individual certification.
	4	Notification of a common certification without ID2.
	5	Notification that no certification was issued.
	6	Notification that GW URL does not exist.
069	CERT: Up ID	
	The ID of the request for certification.	
083	Firmware Up Status	
	Displays the status of the firmware update.	
084	Non-HDD Firm Up	
	This setting determines if the firmware can be updated, even without the HDD installed.	

085	Firm Up User Check	This SP setting determines if the operator can confirm the previous version of the firmware before the firmware update execution. If the option to confirm the previous version is selected, a notification is sent to the system manager and the firmware update is done with the firmware files from the URL.	
086	Firmware Size	Allows the service technician to confirm the size of the firmware data files during the firmware update execution.	
087	CERT: Macro Version	Displays the macro version of the NRS certification	
088	CERT: PAC Version	Displays the PAC version of the NRS certification.	
089	CERT: ID2 Code	Displays ID2 for the NRS certification. Spaces are displayed as underscores (_). Asterisks (*) indicate that no NRS certification exists.	
090	CERT: Subject	Displays the common name of the NRS certification subject. CN = the following 17 bytes. Spaces are displayed as underscores (_). Asterisks (*) indicate that no DESS exists.	
091	CERT: Serial Number	Displays serial number for the NRS certification. Asterisks (*) indicate that no DESS exists.	
092	CERT: Issuer	Displays the common name of the issuer of the NRS certification. CN = the following 30 bytes. Asterisks (*) indicate that no DESS exists.	
093	CERT: Valid Start	Displays the start time of the period for which the current NRS certification is enabled.	
094	CERT: Valid End	Displays the end time of the period for which the current NRS certification is enabled.	
200	Manual Polling	No information is available at this time.	
150	Selection Country	Select from the list the name of the country where Cumin-M is installed in the machine. After selecting the country, you must also set the following SP codes for Cumin-M: <ul style="list-style-type: none"> • SP5816-153 • SP5816-154 • SP5816-161 	
	0: Japan	6: Italy	
	1: USA	7: Netherlands	
	2: Canada	8: Belgium	
	3: UK	9: Luxembourg	
	4: Germany	10: Spain	
	5: France		

151	Line Type Authentication Judgment
	<p>Touch [Execute].</p> <p>Setting this SP classifies the telephone line where Cumin-M is connected as either dial-up or push type, so Cumin-M can automatically distinguish the number that connects to the outside line.</p> <ul style="list-style-type: none"> The current progress, success, or failure of this execution can be displayed with SP5816 152. If the execution succeeded, SP5816 153 will display the result for confirmation and SP5816 154 will display the telephone number for the connection to the outside line.
152	Line Type Judgment Result
	Displays a number to show the result of the execution of SP5816 151. Here is a list of what the numbers mean.
	0: Success
	1: In progress (no result yet). Please wait.
	2: Line abnormal
	3: Cannot detect dial tone automatically
	4: Line is disconnected
	5: Insufficient electrical power supply
	6: Line classification not supported
	7: Error because fax transmission in progress – ioctl() occurred.
	8: Other error occurred
	9: Line classification still in progress. Please wait.
153	Selection Dial/Push
	<p>This SP displays the classification (tone or pulse) of the telephone line to the access point for Cumin-M. The numbered displayed (0 or 1) is the result of the execution of SP5816 151. However, this setting can also be changed manually. [0~1/0/1]</p> <p>0: Tone Dialing Phone 1: Pulse Dialing Phone</p> <p>Inside Japan "2" may also be displayed: 0: Tone Dialing Phone 1: Pulse Dialing Phone 10PPS 2: Pulse Dialing Phone 20PPS</p>
154	Outside Line/Outgoing Number
	<p>The SP sets the number that switches to PSTN for the outside connection for Cumin-M in a system that employs a PBX (internal line).</p> <ul style="list-style-type: none"> If the execution of SP5816 151 has succeeded and Cumin-M has connected to the <u>external</u> line, this SP display is completely blank. If Cumin-M has connected to an <u>internal</u> line, then the number of the connection to the external line is displayed. If Cumin-M has connected to an external line, a comma is displayed with the number. The comma is inserted for a 2 sec. pause. The number setting for the external line can be entered manually (including commas).
155	Remove Service: PPP Recognition Timeout
	<p>Sets the length of the timeout for the Cumin-M connection to its access point. The timeout is the time from when the modem sends the ATD to when it receives the result code.</p> <p>[1~65536/60/1]</p>

156	Dial Up User Name
	Use this SP to set a user name for access to remote dial up. Follow these rules when setting a user name: <ul style="list-style-type: none"> • Name length: Up to 32 characters • Spaces and # allowed but the entire entry must be enclosed by double quotation marks ("").
157	Dial Up Password
	Use this SP to set a password for access to remote dial up. Follow these rules when setting a user name: <ul style="list-style-type: none"> • Name length: Up to 32 characters • Spaces and # allowed but the entire entry must be enclosed by double quotation marks ("").
159	Remote Service: Carrier Send Level
	This SP sets the level of the carrier signal for Cumin-M data transmissions. [0~15/3/1]
160	Remote Service: AT command
	This SP allows you to add an AT command to the initialization of the Cumin-M modem. This SP sets the AT command for both initialization and wait time of and outgoing call. It also includes the NULL instruction. Default: 0, up to 8 characters allowed.
161	Local Phone Number
	Use this SP to set the telephone number of the line where Cumin-M is connected. This number is transmitted to and used by the Call Center to return calls. Limit: 24 numbers (numbers)
162	Connection Timing Adjustment: Incoming
	When the Call Center calls out to a Cumin-M modem, it sends a repeating ID tone (*#1#). This SP sets the line remains open to send these ID tones after the number of the Cumin-M modem is dialed up and connected. [0~24/1/1] The actual amount of time is this setting x 2 sec. For example, if you set "2" the line will remain open for 4 sec.
163	Access Point
	This is the number of the dial-up access point for Cumin-M. If no setting is done for this SP code, then a preset value (determined by the country selected) is used. Default: 0 Allowed: Up to 16 alphanumeric characters
164	Line Connecting
	This SP sets the connection conditions for the customer. This setting dedicates the line to Cumin-M only, or sets the line for sharing between Cumin-M and a fax unit. [0~1/0/1] 0: Line shared by Cumin-M/Fax 1: Line dedicated to Cumin-M only Note: <ul style="list-style-type: none"> • If this setting is changed, the copier must be cycled off and on. • SP5816 187 determines whether the off-hook button can be used to interrupt a Cumin-M transmission in progress to open the line for fax transaction.

173	Modem Serial Number
	This SP displays the serial number registered for the Cumin-M.
174	Retransmission Limit
	Normally, it is best to allow unlimited time for certification and ID2 update requests, and for the notification that the certification has been completed. However, Cumin-M generates charges based on transmission time for the customer, so a limit is placed upon the time allowed for these transactions. If these transactions cannot be completed within the allowed time, do this SP to cancel the time restriction.
187	FAX/TX Priority
	This SP determines whether pushing the off-hook button will interrupt a Cumin-M transmission in progress to open the line for fax transaction. This SP can be used only if SP5816 164 is set to "0". [0~1/0/1] 0:Disable. Setting the fax unit off-hook does not interrupt a fax transaction in progress. If the off-hook button is pushed during a Cumin-M transmission, the button must be pushed again to set the fax unit on-hook after the Cumin-M transmission has completed. 1:Enable. When Cumin-M shares a line with a fax unit, setting the fax unit off-hook will interrupt a Cumin-M transmission in progress and open the line for a fax transaction.
201	Regist: Status
	Displays a number that indicates the status of the NRS service device.
	0 Neither the NRS device nor Cumin device are set.
	1 The Cumin device is being set. Only Box registration is completed. In this status the Basil unit cannot answer a polling request.
	2 The Cumin device is set. In this status the Basil unit cannot answer a polling request.
	3 The NRS device is being set. In this status the Cumin device cannot be set.
	4 The NRS module has not started.
202	Letter Number
	Allows entry of the number of the request needed for the Cumin device.
203	Confirm Execute
	Executes the inquiry request to the NRS GW URL.
204	Confirm Result
	Displays a number that indicates the result of the inquiry executed with SP5816 203.
	0 Succeeded
	1 Inquiry number error
	2 Registration in progress
	3 Proxy error (proxy enabled)
	4 Proxy error (proxy disabled)
	5 Proxy error (Illegal user name or password)
	6 Communication error
	7 Certification update error
	8 Other error
	9 Inquiry executing

205	Confirm Place
	Displays the result of the notification sent to the device from the GW URL in answer to the inquiry request. Displayed only when the result is registered at the GW URL.
206	Register Execute
	Executes Cumin Registration.
207	Register Result
	Displays a number that indicates the registration result.
	0 Succeeded
	2 Registration in progress
	3 Proxy error (proxy enabled)
	4 Proxy error (proxy disabled)
	5 Proxy error (Illegal user name or password)
	6 Communication error
	7 Certification update error
	8 Other error
	9 Registration executing
208	Error Code
	Displays a number that describes the error code that was issued when either SP5816 204 or SP5816 207 was executed.
	Cause
	Code
	Meaning
	Illegal Modem Parameter
	-11001 Chat parameter error
	-11002 Chat execution error
	-11003 Unexpected error
	Operation Error, Incorrect Setting
	-12002 Inquiry, registration attempted without acquiring device status.
	-12003 Attempted registration without execution of an inquiry and no previous registration.
	-12004 Attempted setting with illegal entries for certification and ID2.
	Error Caused by Response from GW URL
	-2385 Attempted dial up overseas without the correct international prefix for the telephone number.
	-2387 Not supported at the Service Center
	-2389 Database out of service
	-2390 Program out of service
	-2391 Two registrations for same device
	-2392 Parameter error
	-2393 Basil not managed
	-2394 Device not managed
	-2395 Box ID for Basil is illegal
	-2396 Device ID for Basil is illegal
	-2397 Incorrect ID2 format
	-2398 Incorrect request number format
209	Remote Setting Clear
	Releases a machine from its Cumin setup.
250	CommLog Print
	Prints the communication log.



5821	Remote Service Address Japan Only	
001	CSS PI Device Code	Sets the PI device code. After you change this setting, you must turn the machine off and on.
002	RCG IP Address	Sets the IP address of the RCG (Remote Communication Gate) destination for call processing at the remote service center. [00000000h~FFFFFFFFh/1]

5824	NVRAM Data UploadNVRAM Data Upload	
	Uploads the UP and SP mode data (except for counters and the serial number) from NVRAM on the control board to an SD card. Note: While using this SP mode, always keep the front cover open. This prevents a software module accessing the NVRAM during the upload.	

5825	NVRAM Data Download	
	Downloads data from an SD card to the NVRAM in the machine. After downloading is completed, remove the SD card and turn the machine power off and on.	



5828	Network Setting (B064)	
012	Device Name	
	Use these SPs to perform the network settings.	
075	DNS Server From DHCP	(B064)
076	DNS Server 1	
077	DNS Server 2	
078	DNS Server 3	
079	Domain Name (Ethernet)	
050	1284 Compatibility (Centro)	Enables and disables bi-directional communication on the parallel connection between the machine and a computer. [0~1/1] 0: Off 1: On
051	Data Transfer (Centro)	Determines the speed of data transmission on the parallel line connection between the machine and a computer. [0~1/1] 0: Slow 1: Fast With the "Slow" setting, there is a 120-microsecond interval from the time an STB signal is sent until the data is moved.
052	ECP (Centro)	Disables and enables the ECP feature (1284 Mode) for data transfer. [0~1/1] 0: Disabled 1: Enabled
084	Print Settings List	Prints a list of the NCS parameter settings.
090	TELNET (0:OFF 1:ON)	Disables or enables Telnet operation. If this SP is disabled, the Telnet port is closed. [0~1/1] 0: Disable 1: Enable
091	Web (0:OFF 1:ON)	Disables or enables the Web operation. [0~1/1] 0: Disable 1: Enable

5828	Network Setting (B140/B246)				
050	1284 Compatibility (Centro)	Enables and disables bi-directional communication on the parallel connection between the machine and a computer. [0~1/1] 0:Off 1: On			
052	ECP (Centro)	Disables and enables the ECP feature (1284 Mode) for data transfer. [0~1/1] 0: Disabled 1: Enabled			
065	Job Spool Setting	Switches job spooling spooling on and off. 0: No spooling 1: Spooling enabled			
066	Job Spool Clear	This SP determines whether the job interrupted at power off is resumed at the next power on. This SP operates only when SP5828 065 is set to 1. 1: Resumes printing spooled jog. 0: Clears spooled job.			
069	Job Spool Protocol	This SP determines whether job spooling is enabled or disabled for each protocol. This is a 8-bit setting.			
		0	LPR	4	BMLinks (Japan Only)
		1	FTP (Not Used)	5	DIPRINT
		2	IPP	6	Reserved (Not Used)
		3	SMB	7	Reserved (Not Used)
077	IPv4 DNS Server 2	Sets the IPv4 address for a DNS server. This address can be used among devices that have IPv4 devices (Ethernet, IPv4 Over 1394, IEEE 802.11b, etc.)			
078	IPv4 DNS Server 3				
079	Domain Name (Ethernet)				
084	Setting List PrintPrint Settings List	Prints a list of the NCS parameter settings.			
090	TELNET Operation SettingsTELNET (0:OFF 1:ON)	Disables or enables Telnet operation. If this SP is disabled, the Telnet port is closed. [0~1/1] 0: Disable 1: Enable			
091	Web Operation Web (0:OFF 1:ON)	Disables or enables the Web operation. [0~1/1] 0: Disable 1: Enable			
092	Primary WINS Server IPv4 Address	This SP is used to set and later refer to the WINS IPv4 primary address used by the Ethernet or the wireless LAN (802.11b). The current address is displayed and printed in the SMC report as aaa.bbb.ccc.ddd and is entered as 8-bit data. For example, if the number "192.168.000.001" is entered, it is recorded as "0C0A80001h".			

096	Rendezvous Operation	This SP disables/enables Rendezvous operation. This is a set of protocols that allows a device on an IP network to automatically recognize and connect with other devices (such as a printer) on a network. Once a new device is connected to the network, it can be used immediately by every computer on the network. No special setup procedures or configuration settings are required 1: Enable 0: Disable
145	Operation IPv6 Link Local Address	This is the IPv6 local address link referenced on the Ethernet or wireless LAN (802.11b) in the format: "Link Local Address" + "Prefix Length" The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.
147	Operation IPv6 Status Address 1	These SPs are the IPv6 status addresses (1 to 5) referenced on the Ethernet or wireless LAN (802.11b) in the format: "Status Address" + "Prefix Length" The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.
149	Operation IPv6 Status Address 2	
151	Operation IPv6 Status Address 3	
153	Operation IPv6 Status Address 4	
155	Operation IPv6 Status Address 5	
156	IPv6 Manual Setting Address	This SP is the IPv6 manually set address referenced on the Ethernet or wireless LAN (802.11b) in the format: "Manual Set Address" + "Prefix Length" The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.
157	Operation IPv6 Manual Setting Address	This SP is the operation IPv6 manually set address referenced on the Ethernet or wireless LAN (802.11b) in the format: "Operation Set Address" + "Prefix Length" The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.
158	IPv6 Gateway Address	This SP is the IPv6 gateway address referenced on the Ethernet or wireless LAN (802.11b). The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.
159	Operation IPv6 Gateway Address	This SP is the IPv6 operation gateway address referenced on the Ethernet or wireless LAN (802.11b). The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.
162	IPv6 Access Control Display	This SP enables the display for access control of the IPv6 addresses.

5831	Initial Setting Clear
	Press Execute to initialize all User Tool settings and restore them to their factory settings.

5832	HDD Formatting
	Enter the SP number for the partition to initialize, then press #. When the execution ends, cycle the machine off and on.
001	HDD Formatting (All)
002	HDD Formatting (IMH)
003	HDD Formatting (Thumbnail)
004	HDD Formatting (Job Log)
005	HDD Formatting (Printer Fonts)
006	HDD Formatting (User Info.)
007	Mail RX Data
008	HDD Formatting (Data for a Design)
009	HDD Formatting (Log)
011	HDD Formatting (Ridoc DiskTopBinder)

5833	e-Cabinet Enable
	Enables the e-Cabinet function. Then, the user names in the cabinet are enabled for use with the POP server. [0~1/1] 0: Disabled 1: Enabled

5836*	Capture (B064)
001	Capture Function (0:Off 1:On)
	With this function disabled, the settings related to the capture feature cannot be initialized, displayed, or selected. [0~1/1] 0: Disable 1: Enable
002	Panel Setting
	Determines whether each capture related setting can be selected or updated from the initial system screen. [0~1/1] 0: Disable 1: Enable The setting for SP5836-001 has priority.
003	Print Backup Function (0:Off 1:On)
	Turns the print backup feature on and off. Default: 0 (Off) When this feature is on, the print backup features are shown in the initial system settings. <i>Enabled only when optional File Format Converter (MLB:Media Link Board) is installed.</i> [0~1/1] 0: Disable 1: Enable

061	Captured File Resend (B064)	
	To decrease the load on the network, only the captured document is sent (0), or the network accurately keeps the captured document and it can be sent again (1).	
071	Reduction for Copy Color	[0~3/1] 0:1 1:1/2 2:1/3 3:1/4 DFU
072	Reduction for Copy B&W Text	[0~6/1] 0:1 1:1/2 2:1/3 3:1/4 6:2/3
073	Reduction for Copy B&W Other	[0~6/1] 0:1 1:1/2 2:1/3 3:1/4 6:2/3
074	Reduction for Printer Color	[0~3/1] 0:1 1:1/2 2:1/3 3:1/4 DFU
075	Reduction for Printer B&W	[0~6/1] 0 1 1:1/2 2:1/3 3:1/4 6:2/3
076	Reduction for Printer B&W HQ	[1~5/1] 1:1/2 3:1/4 4:1/6 5:1/8
081	Format for Copy Color	[0~3/1] 0: JFIF/JPEG, 1: TIFF/MMR, 2: TIFF/MH, 3: TIFF/MR DFU
082	Format for Copy B&W Text	[0~3/1] 0: JFIF/JPEG, 1: TIFF/MMR, 2: TIFF/MH, 3: TIFF/MR
083	Format Copy B&W Other	[0~3/1] 0: JFIF/JPEG, 1: TIFF/MMR, 2: TIFF/MH, 3: TIFF/MR
084	Format for Printer Color	[0~3/1] 0: JFIF/JPEG, 1: TIFF/MMR, 2: TIFF/MH, 3: TIFF/MR DFU
085	Format for Printer B&W	[0~3/1] 0: JFIF/JPEG, 1: TIFF/MMR, 2: TIFF/MH, 3: TIFF/MR
086	Format for Printer B&W HQ	[0~3/1] 0: JFIF/JPEG, 1: TIFF/MMR, 2: TIFF/MH, 3: TIFF/MR
091	Default for JPEG	[5~95/1]
	Sets the JPEG format default for documents sent to the document management server with the MLB, with JPEG selected as the format. <i>Enabled only when optional File Format Converter (MLB: Media Link Board) is installed.</i>	
092	High Quality for JPEG	Sets the quality level of JPEG images for high quality sent to the Document Server with the MLB (Media Link Board). [5~95/1]
093	Low Quality for JPEG	Sets the quality level of JPEG images for low quality sent to the Document Server with the MLB (Media Link Board). [5~95/1]

094	Default Format for Backup Files (B140)	Sets the format of the backup files. [0~2/1] 0: TIFF 1: JPEG 2: For printing This feature can be selected only if SP5836-3 is set to "1".
095	Default Resolution for Backup Files	Sets the resolution conversion ratio for the backup files. [0~3/1] 0: 1x 1: 1/2x 2: 1/3 x 3: 1/4x
097	Default Compression for Backup Files	Sets the rate of compression for the backup files. [0~2/1] 0: Standard 1: Low 2: High
098	Back Projection Removal (B140)	Removes the ghost images that are copied from the back sides of two-sided originals. [0~1/1] 0: Disable 1: Enable

5836	Capture Setting (B140/B246 Series)	
001	Capture Function (0:Off 1:On)	
	With this function disabled, the settings related to the capture feature cannot be initialized, displayed, or selected. [0~1/1] 0: Disable 1: Enable	
002	Panel Setting	
	Determines whether each capture related setting can be selected or updated from the initial system screen. [0~1/1] 0: Disable 1: Enable The setting for SP5836-001 has priority.	
003	Print Back-up Function	
	Determines whether the print back-up function setting can be changed. [0~1/0/1] 0: Disable 1: Enable	
071	Reduction for Copy Color	[0~3/1] 0:1 1:1/2 2:1/3 3:1/4 DFU
072	Reduction for Copy B&W Text	[0~6/1] 0:1 1:1/2 2:1/3 3:1/4 6:2/3
073	Reduction for Copy B&W Other	[0~6/1] 0:1 1:1/2 2:1/3 3:1/4 6:2/3

074	Reduction for Printer Color	[0~3/1] 0:1 1:1/2 2:1/3 3:1/4 DFU
075	Reduction for Printer B&W	[0~6/1] 0 1 1:1/2 2:1/3 3:1/4 6:2/3
076	Reduction for Printer B&W HQ	[1~5/1] 1:1/2 3:1/4 4:1/6 5:1/8
081	Format for Copy Color DFU	[0~3/1] 0: JFIF/JPEG, 1: TIFF/MMR, 2: TIFF/MH, 3: TIFF/MR
082	Format for Copy B&W Text	[0~3/1] 0: JFIF/JPEG, 1: TIFF/MMR, 2: TIFF/MH, 3: TIFF/MR
083	Format Copy B&W Other	[0~3/1] 0: JFIF/JPEG, 1: TIFF/MMR, 2: TIFF/MH, 3: TIFF/MR
084	Format for Printer Color DFU	[0~3/1] 0: JFIF/JPEG, 1: TIFF/MMR, 2: TIFF/MH, 3: TIFF/MR
085	Format for Printer B&W	[0~3/1] 0: JFIF/JPEG, 1: TIFF/MMR, 2: TIFF/MH, 3: TIFF/MR
086	Format for Printer B&W HQ	[0~3/1] 0: JFIF/JPEG, 1: TIFF/MMR, 2: TIFF/MH, 3: TIFF/MR
091	Default for JPEG	[5~95/1] Sets the JPEG format default for documents sent to the document management server with the MLB, with JPEG selected as the format. <i>Enabled only when optional File Format Converter (MLB: Media Link Board) is installed.</i>
092	Capture Setting: Page Quality for JPEG (High Quality)	Determines the quality level of JPEG images for high quality sent to the Document Server via the MLB (Media Link Board). [5~95/ 60 /1]
093	Capture Setting: Page Quality for JPEG (Low Quality)	Determines the quality level of JPEG images for low quality sent to the Document Server via the MLB (Media Link Board). [5~95/ 40 /1]
094	Default Format for Backup Files	Sets the format for backup files created when the print backup function is used. [0~4/ 0 /1] 0: TIFF 1: JPEG 2: J2K 3: PDF Single 4: PDF Multi
095	Default Resolution for Backup Files	Sets the resolution for backup files (JPEG, TIFF) when the print backup function is used. This SP can be used only after JPEG or TIFF is selected for SP583f6 094. [0~6/ 2 /1] 0: 1/1 1: 1/2 3: 1/4 6: 2/3 (Unavailable for some models)

096	Default User Name for Backup Files
	Sets the user name when the print backup function is used. Limit: 8 alphanumeric characters.
097	Default Compression for Backup Files
	This SP sets the compression rate for JPEG backup files when the print backup function is used. This SP operates only after SP5826 0094 has been set for "1" (JPEG). [0~2/0/1]
098	Capture Setting: Gamma SW for Backup File
	Removes the ghost images transferred from the back sides of double-sided originals. 1: Enable 0: Disable

5839	IEEE 1394
	This SP is displayed only when an IEEE 1394 (firewire) card is installed.
007	Cycle Master
	Enables or disables the cycle master function for the 1394 bus standard. [0~1/1] 0: Disable (Off) 1: Enable (On)
008	BCR Mode
	Determines how BCR (Broadcast Channel Register) operates on the 1394 standard bus when the independent node is in any mode other than IRM. (NVRAM: 2-bits) [Always Effective]
009	IRM 1394a Check
	Conducts a 1394a check of IRM when the independent node is in any mode other than IRM. [0~1/1] 0: Checks whether IRM conforms to 1394a 1: After IRM is checked, if IRM does not conform then independent node switches to IRM.
010	Unique ID
	Lists the ID (Node_Unique_ID) assigned to the device by the system administrator. Bit0: Off Bit1: On OFM: Does not list the Node_Unique_ID assigned by the system administrator. Instead, the Source_ID of the GASP header in the ARP is used. ON: The Node_Unique_ID assigned by the system administrator is used, and the Source_ID of the GASP header in the ARP is ignored. Also, when the serial bus is reset, extra bus transactions are opened for the enumeration.

011	Logout
	Handles the login request of the login initiator for SBP-2. (1-bit) Bit0: Off Bit1: On OFM: Disable (refuse login). Initiator retry during login. Login refusal on arrival of login request (standard operation) ON: Enable (force logout). Initiator retry during login. Login refusal on arrival of login request, and the initiator forces the login.
012	Login
	Enables or disables the exclusive login feature (SBP-2 related). Bit0: Off Bit1: On OFM: Disables. The exclusive login (LOGIN ORB exclusive it) is ignored. ON: Enables. Exclusive login is in effect.
013	Login MAX
	Sets the maximum number of logins from the initiator (6-bits) [0~63/1] 0: Reserved 63: Reserved

5840	IEEE 802.11b
006	Channel MAX
	Sets the maximum range of the bandwidth for the wireless LAN. This bandwidth setting varies for different countries. [1~14/1]
007	Channel MIN
	Sets the minimum range of the bandwidth for operation of the wireless LAN. This bandwidth setting varies for different countries. [1~14/1]
011	WEP Key Select
	Determines how the initiator (SBP-2) handles subsequent login requests. [0~1/1] 0: If the initiator receives another login request while logging in, the request is refused. 1: If the initiator receives another login request while logging in, the request is refused and the initiator logs out. Note: Displayed only when the wireless LAN card is installed.

5841*	Supply Name Setting	
	Press the User Tools key. These names appear when the user presses the Inquiry button on the User Tools screen.	
001	Toner Name Setting: Black	Enter the name of the toner in use.
011	StapleStd1	Standard Staples
012	StapleStd2	
013	StapleStd3	
014	StapleStd4	
021	StapleBind1	Saddle-Stitch Staples
022	StapleBind2	
023	StapleBind3	

5842*	001	Net File Analysis Mode Setting	Bit SW 0011 1111
--------------	-----	--------------------------------	------------------

5842	GWWS Analysis Mode Setting (B246) DFU		
	This settings select the output mode for debugging information as each network file is processed.		
001	Setting 1		
002	Setting 2		

5844*	USB		
001	Transfer Rate		
	Sets the speed for USB data transmission. [Full Speed] [Auto Change]		
002	Vendor ID		
	Sets the vendor ID: Initial Setting: 0x05A Ricoh Company [0x0000~0xFFFF/1] DFU		
003	Product ID		
	Sets the product ID. [0x0000~0xFFFF/1] DFU		
004	Device Release No.		
	Sets the device release number of the BCD (binary coded decimal) display. [0000~9999/1] DFU Enter as a decimal number. NCS converts the number to hexadecimal number recognized as the BCD.		

5845*	Delivery Server (B064)
	These are delivery server settings.
001	FTP Port No. [0~65535/1]
002	IP Address Use this SP to set the Scan Router Server address. The IP address under the transfer tab can be used with the initial system setting. [0~FFFFFFFF/1]
003	Retry Interval Sets the time interval before the machine tries again when it goes back to standby after an error occurs during an image transfer with the delivery scanner or SMTP server. [60~900/1]
004	Number of Retries Sets the number of times the machine tries again before it returns to standby after an error occurs during an image transfer with the delivery or SMTP server. [0~99/1]
005	Capture Server IP Address Sets the capture server IP address for the capture feature. [0~0xFFFFFFFF]
006	Delivery Error Display Time Use this setting to set the length of time that the message is shown when a test error occurs during document transfer with the NetFile application and an external device. [0~999/1]
007	Delivery Options Connects to the Scan Router server for delivery of scanned documents. [0~1/1] 0: No connection to Scan Router delivery server 1: Connected to Scan Router server for delivery of scanned documents.
008	IP Address (Secondary) Sets the IP address that is given to the computer that is the secondary delivery server for Scan Router. This SP lets you set only the IP address, and does not refer to the DNS setting.

5845	Delivery Server (B140/B246)
	These are delivery server settings.
001	FTP Port No.
	[0~65535/1]
002	IP Address
	Use this SP to set the Scan Router Server address. The IP address under the transfer tab can be used with the initial system setting. [0~FFFFFFFF/1]
005	Capture Server IP Address
	Sets the IP address that is assigned to the PC that the capture server (eCabinet or ScanRouter) operates. This IP address is set remotely when the delivery server (Scan Router) IO device is registered. This SP only enables the IP address permit access to the DNS browser names.
006	Delivery Error Display Time
	Use this setting to set the length of time that the message is shown when a test error occurs during document transfer with the NetFile application and an external device. [0~999/1]
008	IP Address (Secondary)
	Sets the IP address that is given to the computer that is the secondary delivery server for Scan Router. This SP lets you set only the IP address, and does not refer to the DNS setting.
009	Delivery Server Model
	Lets you change the model of the delivery server that is registered by the I/O device. [0~4/1] 0: Unknown 1: SG1 Provided 2: SG1 Package 3: SG2 Provided 4: SG2 Package
010	Delivery Svr. Capability
	Changes the functions that the registered I/O device can do. [0~255/1] Bit7 = 1 Comment information exists Bit6 = 1 Direct specification of mail address possible Bit5 = 1 Mail RX confirmation setting possible Bit4 = 1 Address book automatic update function exists Bit3 = 1 Fax RX delivery function exists Bit2 = 1 Sender password function exists Bit1 = 1 Function to link MK-1 user and Sender exists Bit0 = 1 Sender specification required (if set to 1, Bit6 is set to "0")
011	Delivery Svr.Capability (Ext)
	These settings are for future use. They will let you increase the number of registered devices (in addition to those registered for SP5845 010). There are eight bits (Bit 0 to Bit 7). All are unused at this time.
013	Delivery Server Scheme (Primary)

014	Delivery Server Port Number (Primary)
015	Delivery Server URL Path (Primary)
016	Delivery Server Scheme (Secondary)
017	Delivery Server Port Number (Secondary)
018	Delivery Server URL Path (Secondary)
019	Capture Server Scheme
020	Capture Server Port Number
021	Capture Server URL Path

5846	UCS Setting
001	Machine ID (for Delivery Server) Displays the unique device ID in use by the delivery server directory. The value is only displayed and cannot be changed. This ID is created from the NIC MAC or IEEE 1394 EUI. The ID is displayed as either 6-byte or 8-byte binary. 6-byte %02X.%02X.%02X.%02X.%02X.%02X 8-byte %02X.%02X.%02X.%02X.%02X.%02X.%02X.%02X
002	Machine ID Clear (Delivery Server) Clears the unique ID of the device used as the name in the file transfer directory. Execute this SP if the connection of the device to the delivery server is unstable. After clearing the ID, the ID will be established again automatically by cycling the machine off and on.
003	Maximum Entries Changes the maximum number of entries that UCS can handle. [2000~50000/1] If a value smaller than the present value is set, the UCS managed data is cleared, and the data (excluding user code information) is displayed.
006	Delivery Server Retry Timer Sets the interval for retry attempts when the delivery server fails to acquire the delivery server address book. [0~255/1 s] 0: No retries
007	Delivery Server Retry Times Sets the number of retry attempts when the delivery server fails to acquire the delivery server address book. [0~255/1]
008	Delivery Server Maximum Entries Lets you set the maximum number of account entries and information about the users of the delivery server controlled by UCS. [20000~50000/1]
010	LDAP Search Timeout Sets the length of the time-out for the search of the LDAP server. [1~255/1]
040	Addr Book Migration (SD -> HDD)

	<p>This SP moves the address book data from an SD card to the HDD. You must cycle the machine off and on after executing this SP.</p> <ol style="list-style-type: none"> 1. Turn the machine off. 2. Install the HDD. 3. Insert the SD card with the address book data in SD card Slot ???. 4. Turn the machine on. 5. Do SP5846 040. 6. Turn the machine off. 7. Remove the SD card from SD card Slot ???. 8. Turn the machine on. <p>Notes:</p> <ul style="list-style-type: none"> • Executing this SP overwrites any address book data already on the HDD with the data from the SD card. • We recommend that you back up all directory information to an SD card with SP5846 051 before you execute this SP. • After the address book data is copied to HDD, all the address book data is deleted from the source SD card. If the operation fails, the data is not erased from the SD card.
041	<p>Fill Addr Acl Info.</p> <p>This SP must be executed immediately after installation of an HDD unit in a basic machine that previously had no HDD. The first time the machine is powered on with the new HDD installed, the system automatically takes the address book from the NVRAM and writes it onto the new HDD. However, the new address book on the HDD can be accessed only by the system administrator at this stage. Executing this SP by the service technician immediately after power on grants full address book access to all users.</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Turn the machine off. 2. Install the new HDD. 3. Turn the machine on. 4. The address book and its initial data are created on the HDD automatically. However, at this point the address book can be accessed by only the system administrator or key operator. 5. Enter the SP mode and do SP5846 041. After this SP executes successfully, any user can access the address book.

046	Initialize All Settings & Address Book	
	<p>The SP clears all the setting information managed in UCS and address book information (local, delivery, LDAP) and restores these settings to their default values. Use this SP to initial the account information (user codes and passwords) for system managers and users as well.</p> <p>Note:</p> <ul style="list-style-type: none">• Be sure to cycle the machine off and on after you execute this SP code.• Once this SP has been executed, a message on the screens of applications that use the address book will prompt users that the address book is being updated. This prevents the machine from issuing SC870.• The machine initializes to determine if the address book is stored on the HDD or on an SD card. In order for the machine to determine whether to recognize an address book on the HDD or the SD card, the machine must be cycled off and on once more to determine whether the machine should recognize the address book on the HDD or the SD card.	
047	Initialize Local Address Book	
	Clears all of the address information from the local address book of a machine managed with UCS.	
048	Initialize Delivery Addr Book	
	Push [Execute] to delete all items (this does not include user codes) in the delivery address book that is controlled by UCS.	
049	Initialize LDAP Addr Book	
	Push [Execute] to delete all items (this does not include user codes) in the LDAP address book that is controlled by UCS.	
050	Initialize All Addr Book	
	Clears everything (including users codes) in the directory information managed by UCS. However, the accounts and passwords of the system administrators are not deleted.	
051	Backup All Addr Book	
	Uploads all directory information to the SD card.	
052	Restore All Addr Book	
	Downloads all directory information from the SD card.	
053	Clear Backup Info.	
	<p>Deletes the address book uploaded from the SD card in the slot. Deletes only the files uploaded for that machine. This feature does not work if the card is write-protected.</p> <p>Note: After you do this SP, go out of the SP mode, turn the power off. Do not remove the SD card until the Power LED stops flashing.</p>	
060	Search Option	
	This SP uses bit switches to set up the fuzzy search options for the UCS local address book.	
	Bit	Meaning
	0	Checks both upper/lower case characters
	1	Japan Only
	2	
	3	
	4	--- Not Used ---
	5	--- Not Used ---
	6	--- Not Used ---
	7	--- Not Used ---

062	Complexity Option 1
	<p>Use this SP to set the conditions for password entry to access the local address book. Specifically, this SP limits the password entry to <u>upper case</u> and sets the length of the password.</p> <p>[0~32/1]</p> <p>Note:</p> <ul style="list-style-type: none"> • This SP does not normally require adjustment. • This SP is enabled only after the system administrator has set up a group password policy to control access to the address book.
063	Complexity Option 2
	<p>Use this SP to set the conditions for password entry to access the local address book. Specifically, this SP limits the password entry to <u>lower case</u> and defines the length of the password.</p> <p>[0~32/1]</p> <p>Note:</p> <ul style="list-style-type: none"> • This SP does not normally require adjustment. • This SP is enabled only after the system administrator has set up a group password policy to control access to the address book.
064	Complexity Option 3
	<p>Use this SP to set the conditions for password entry to access the local address book. Specifically, this SP limits the password entry to <u>numbers</u> and defines the length of the password.</p> <p>[0~32/1]</p> <p>Note:</p> <ul style="list-style-type: none"> • This SP does not normally require adjustment. • This SP is enabled only after the system administrator has set up a group password policy to control access to the address book.
065	Complexity Option 4
	<p>Use this SP to set the conditions for password entry to access the local address book. Specifically, this SP limits the password entry to <u>symbols</u> and defines the length of the password.</p> <p>[0~32/1]</p> <p>Note:</p> <ul style="list-style-type: none"> • This SP does not normally require adjustment. • This SP is enabled only after the system administrator has set up a group password policy to control access to the address book.
090	Plain Data Forbidden
	<p>Lets you to prevent the address from transmission as plain data. This is a security function that prevents unauthorized access to address book data.</p> <p>[0~1/1]</p> <p>0: No check. Address book data not protected.</p> <p>1: Check. Enables operation of UCS without data from HDD or SC card and without creating address book information with plain data.</p>
091	FTP Auth. Port Settings
	<p>Sets the FTP port to get the delivery server address book that is used in the individual authorization mode.</p> <p>[0~65535/1]</p>
094	Encryption Start
	<p>Shows the status of the encryption function of the address book on the LDAP server.</p> <p>[0~255/1] No default</p>

5847*	Net File Resolution Reduction (B064)	
	5847 1 through 5847 6 changes the default settings of image data sent externally by the Net File page reference function. [0~2/1] 5847 21 sets the default for JPEG image quality of image files controlled by NetFile. “NetFile” refers to jobs to be printed from the document server with a PC and the DeskTopBinder software.	
002	Rate for Copy B&W Text	[0~4 /1]
003	Rate for Copy B&W Other	0: 1x
005	Rate for Printer B&W	1: 1/2x
006	Rate for Printer B&W HQ	2: 1/3x 3: 1/4x
021	Network Quality Default for JPEG	
	Sets the default value for the quality of JPEG images sent as NetFile pages. This function is available only with the MLB (Media Link Board) option installed. [5~95/1]	

5847	Repository Resolution Reduction (B140/B246 Series)		
	5847 1 through 5847 6 changes the default settings of image data sent externally by the Net File page reference function. [0~2/1] 5847 21 sets the default for JPEG image quality of image files controlled by NetFile. “Repository” refers to jobs to be printed from the document server with a PC and the DeskTopBinder software.		
			0: 1x
002	Rate for Copy B&W Text	[0~6/1]	1: 1/2x
003	Rate for Copy B&W Other	[0~6/1]	2: 1/3x
			3: 1/4x
005	Rate for Printer B&W	[0~6/1]	4: 1/6x
006	Rate for Printer B&W HQ	[0~6/1]	5: 1/8x
			6: 2/3x ¹
			¹ : “6: 2/3x” applies to 003, 005, 006 only.
021	Network Quality Default for JPEG		
	Sets the default value for the quality of JPEG images sent as NetFile pages. This function is available only with the MLB (Media Link Board) option installed. [5~95/1]		

5848	Web Service	
	5847 2 sets the 4-bit switch assignment for the access control setting. Setting of 0001 has no effect on access and delivery from Scan Router. 5847 100 sets the maximum size of images that can be downloaded. The default is equal to 1 gigabyte.	
001	Access Control. : NetFile (Lower 4 Bits)	
	Bit switch settings. 0000: No access control 0001: Denies access to Desk Top Binder. Access and deliveries from Scan Router have no effect on capture.	
002	Acc. Ctrl.: Repository (only Lower 4 Bits)	0000: No access control 0001: Denies access to DeskTop Binder.
003	Acc. Ctrl.: Doc. Svr. Print (Lower 4 Bits)	Switches access control on and off. 0000: OFF, 0001: ON
004	Acc. Ctrl.: User Directory (Lower 4 Bits)	
005	Acc. Ctrl.: Delivery Input (Lower 4 Bits)	
007	Acc. Ctrl Comm. Log Fax (Lower 4 Bits)	
009	Acc. Ctrl.: Job Control (Lower 4 Bits)	
011	Acc. Ctrl: Device Management (Lower 4 Bits)	
013	Acc. Ctrl: Fax (Lower 4 Bits)	
021	Acc. Ctrl: Delivery (Lower 4 Bits)	
022	Acc. Ctrl: User Administration (Lower 4 Bits)	
041	Acc. Ctrl: Security Setting (Lower 4 Bits)	
100	Repository: Download Image Max. Size	[1~1024/1 K]
201	Access Ctrl: Regular Trans	
	No information is available at this time. 0: Not allowed 1: Allowed	
210	Setting: Log Type: Job 1	
	No information is available at this time.	
211	Setting: Log Type: Job 2	
	No information is available at this time.	
212	Setting: Log Type: Access	
	No information is available at this time.	
213	Setting: Primary Srv	
	No information is available at this time.	
214	Setting: Secondary Srv	
	No information is available at this time.	
215	Setting: Start Time	
	No information is available at this time.	
216	Setting: Interval Time	
	No information is available at this time.	
217	Setting: Timing	
	No information is available at this time.	

5849*	Installation Date	
	Displays or prints the installation date of the machine.	
001	Display	The "Counter Clear Day" has been changed to "Installation Date" or "Inst. Date".
002	Switch to Print	Determines whether the installation date is printed on the printout for the total counter. [0~1/1] 0: No Print 1: Print

5850*	Address Book Function (B064)	
001	Switch Module	Selects the module for managing user information. [0~1/1] 0: SCS 1: UCS
002	Select Title	Selects the default heading of the address book. [2~4/1] 2: Heading 1 3: Heading 2 4: Heading 3

5851	Bluetooth Mode	
	Sets the operation mode for the Bluetooth Unit. Press either key. [0:Public] [1: Private]	

5852	SMTP (B064)	
	Simple Mail Transfer Protocol. The protocol for communication between Internet main MTAs (Message Transfer Agents).	
001	Server Name	Sets the server name.
002	Port Number	Sets the port number

5853	Stamp Data Download	
	Push [Execute] to download the fixed stamp data from the machine ROM onto the hard disk. Then these stamps can be used by the system. If this is not done, the user will not have access to the fixed stamps ("Confidential", "Secret", etc.). You must always execute this SP after replacing the HDD or after formatting the HDD. Always switch the machine off and on after executing this SP.	

5856	Remote ROM Update
	When set to "1" allows reception of firmware data via the local port (IEEE 1284) during a remote ROM update. This setting is reset to zero after the machine is cycled off and on. Allows the technician to upgrade the firmware using a parallel cable [0~1/1] 0: Not allowed 1: Allowed

5857	Save Debug Log (B140)
001	On/Off (1:ON 0:OFF)
	Switches on the debug log feature. The debug log cannot be captured until this feature is switched on. [0~1/1] 0: OFF 1: ON
002	Target (2: HDD 3: SD Card)
	Selects the destination where the debugging information generated by the event selected by SP5858 will be stored if an error is generated [2~3 /1] 2: HDD 3: SD Card
005	Save to HDD
	Specifies the decimal key number of the log to be written to the hard disk. (➡5.8.1)
006	Save to SD Card
	Specifies the decimal key number of the log to be written to the SD Card. (➡5.8.1)
009	Copy HDD to SD Card (Latest 4 MB)
	Takes the most recent 4 MB of the log written to the hard disk and copies them to the SD Card. (➡5.8.2) <i>A unique file name is generated to avoid overwriting existing file names on the SD Card. Up to 4MB can be copied to an SD Card. 4 MB segments can be copied one by one to each SD Card.</i>
010	Copy HDD to SD Card Latest 4 MB Any Key)
	Takes the log of the specified key from the log on the hard disk and copies it to the SD Card. (➡5.8.2) <i>A unique file name is generated to avoid overwriting existing file names on the SD Card. Up to 4 MB can be copied to an SD Card. 4 MB segments can be copied one by one to each SD Card. This SP does not execute if there is no log on the HDD with no key specified.</i>
011	Erase HDD Debug Data
	Erases all debug logs on the HDD
012	Erase SD Card Debug Data
	Erases all debug logs on the SD Card. If the card contains only debugging files generated by an event specified by SP5858, the files are erased when SP5857 010 or 011 is executed. <i>To enable this SP, the machine must be cycled off and on.</i>
013	Free Space on SD Card
	Displays the amount of space available on the SD card.

014	Copy SD to SD (Latest 4MB)
	Copies the last 4MB of the log (written directly to the card from shared memory) onto an SD card.
015	Copy SD to SD (Latest 4MB Any Key)
	This SP copies the log on an SD card (the file that contains the information written directly from shared memory) to a log specified by key number. (☛ 5.7.4)
016	Make HDD Debug
	This SP creates a 32 MB file to store a log on the HDD. (☛ 5.7.4)
017	Make SD Debug
	This SP creates a 4 MB file to store a log on an SD card. (☛ 5.7.4)

5858*	Debug Save When (B140/B246)	
	These SPs select the content of the debugging information to be saved to the destination selected by SP5857 002. SP5858 3 stores one SC specified by number. <i>Refer to Section 4 for a list of SC error codes.</i>	
001	Engine SC Error (0:OFF 1:ON)	Stores SC codes generated by copier engine errors. [0~1/1] 0: OFF 1: ON
002	Controller SC Error (0:OFF 1:ON)	Stores SC codes generated by GW controller errors. [0~1/1] 0: OFF 1: ON
003	Any SC Error	[0~65535/1]
004	Jam (0:OFF 1:ON)	Stores jam errors. [0~1/1] 0: OFF 1: ON

5859*	Debug Log Save Function (B140/B246)	
001	Key 1	These SPs allow you to set up to 10 keys for log files for functions that use common memory on the controller board. (☛5.8.1) [-9999999~9999999/1]
002	Key 2	
003	Key 3	
004	Key 4	
005	Key 5	
006	Key 6	
007	Key 7	
008	Key 8	
009	Key 9	
010	Key 10	

5860*	SMTP/POP3/IMAP4 (B140/B246)
020	Partial Mail Receive Timeout
	[1~168/1] Sets the amount of time to wait before saving a mail that breaks up during reception. The received mail is discarded if the remaining portion of the mail is not received during this prescribed time.
021	MDN Response RFC2298 Compliance
	Determines whether RFC2298 compliance is switched on for MDN reply mail. [0~1/1] 0: No 1: Yes
022	SMTP Auth. From Field Replacement
	Determines whether the FROM item of the mail header is switched to the validated account after the SMTP server is validated. [0~1/1] 0: No. "From" item not switched. 1: Yes. "From" item switched.
025	SMTP Auth Direct Sending
	Occasionally, all SMTP certifications may fail with SP5860 006 set to "2" to enable encryption during SMTP certification for the SMTP server. This can occur if the SMTP server does not meet RFC standards. In such cases you can use this SP to set the SMTP certification method directly. However, this SP can be used only after SP5860 003 has been set to "1" (On). Bit0: LOGIN Bit1: PLAIN Bit2: CRAM_MD5 Bit3: DIGEST_MD5 Bit4 to Bit 7: Not Used

5863	SMP/FTP/NCP Settings (B246)
001	SMB Default User Name
	This SP sets the default user name used for SMB sending.
002	SMB Default Password
	This SP sets the default password used for SMB sending.
003	FTP Default User Name
	This SP sets the default user name used for FTP sending.
004	FTP Default Password
	This SP sets the default password for FTP sending.
006	NCP Default User Name
	This SP sets the default user name used for NCP sending.
007	NCP Default Password
	This SP sets the default password for NCP sending.

5864	Mail Text Clear (B246)
	This SP clears mail text information. When this SP is called at the request to write the SP mode data, the mail text information stored on the DCS server is reset to its default value. This is used as a trigger to clear mail text information when the system is initialized with the User Tools.

5865	Clear Mail Account Information (B246)
	Clears the mail account parameters.

5866	Enable E-Mail Notification
	This SP enables the e-mail notification function. (B246 [0~1/0/1] 0: Disable 1: Enable

5870	Common Key Info Writing (B140/B246)	
	Writes to flash ROM the common proof for validating the device for NRS specifications.	
001	Writing	Note: These SPs are for future use and currently are not used.
003	Initialize	

5871	HDD Function Disable (B140)
	Disables the HDD functions by suppressing all functions that write data to the HDD. After this SP is executed, the machine must be switched off and on to enable the setting. [0~1/1] 0: OFF 1: ON Note: This SP is intended for use during installation of the Data Overwrite Security Unit B735 (a new option). For more, see section "1. Installation".

5873	SD Card Apli. (B140/B246)	
	Allows you to “integrate” (copy) applications from SD cards onto other SD cards. (☛ 5.5)	
001	Move Exec	Executes the move from one SD card to another.
002	Undo Exec	This is an undo function. It cancels the previous execution.

5875	SC Auto Reboot (B140/B246)	
	This SP determines whether the machine reboots automatically when an SC error occurs. Note: The reboot does not occur for Type A SC codes.	
001	Reboot Setting	[0~1/*1] 0: On, 1: Off *DOM: (Japan Only) default: 0 (Reboots automatically) The machine reboots automatically when the machine issues an SC error and logs the SC error code. If the same SC occurs again, the machine does not reboot. *EXP (Outside Japan) default: 1 (Does not reboot automatically). Changing this setting to "0" sets the machine to reboot automatically after an SC occurs.
002	Reboot Type	This setting determines how the machine reboots after an SC code is issued. [0~1/*1] 0: Allows manual reboot, 1: Automatic reboot *DOM (Japan Only) default: 1 Automatic reboot *EXP (Outside Japan) default: 0 Manual reboot

5878	Option Setup
	This SP enables the DOS application (Data Overwrite Security). Do this SP after installing Data Overwrite Security Unit C B735.

5885	Document Svr Access Control DFU	
020	This SP is a bit switch setting.	
	Bit	Meaning
	0	Forbid all document server access (1)
	1	Forbid user mode access (1)
	2	Forbid print function (1)
	3	Forbid fax TX (1)
	4	Forbid scan sending (1)
	5	Forbid downloading (1)
	6	Forbid delete (1)
	7	Reserved

5886	Permit ROM Update DFU
	This SP determines whether the ROM can be updated. [0-1/0/1] 0: On 1: Off

5907*	Plug & Play Maker/Model Name
	<p>Selects the brand name and the production name for Windows Plug & Play. This information is stored in the NVRAM. If the NVRAM is defective, these names should be registered again.</p> <p>After selecting, press the "Original Type" key and "#" key at the same time. When the setting is completed, the beeper sounds five times.</p>

5913	Switchover Permission Time
002	Print Application Timer Sets the length of time to elapse before allowing another application to take control of the display when the application currently controlling the display is not operating because a key has not been pressed. [3~30/1 s]
102	Print Application Set This SP prescribes the time interval to expire before the machine shifts to another application when another application currently holds access control for the standby mode while there is no key input. [0~1/1/1]

5914*	Application Counter Display (B064)	
	Selects the total counts that will be displayed in the UP mode.	
001	Print Counter	[0~1/1]
003	Copier Counter	0: Not displayed 1: Displayed

5915*	Mechanical Counter Detection
	Displays whether the mechanical counter is installed in the machine. [0~2/1] 0: Not detected. 1: Detected 2: Unknown

5918*	A3/DLT Counter Display
	Determines whether pressing the counter key displays count confirmation: system initial settings → system manager settings → counter [0~1/1] 0: No display 1: Display This SP affects the display only, and has no effect on SP5104 (A3/DLT Double Count).

5921	Key Card Setting Japan Only (B064)
	Enables operation with a key card device. [0~1/1] 0: No key card operation 1: Key card operation

5952	Fact Adjust Mode DFU
-------------	-----------------------------

5959*	Paper Size (B064)			
001	Tray 1			
	Tray 1 (Tandem Tray) can accept two paper sizes: A4 LEF and LT LEF. Enter the correct number to select the size of the paper loaded in Tray 1: A4 LEF: 5 LT LEF: 38 If the A3/DLT Tray Kit B475 is installed, enter the correct number to select the size of the paper loaded in the kit:			
	Size	No.	Size	No.
	A3 SEF	132	11" x 17"	160
	B4 SEF	141	8 1/2" x 14" SEF	167
	A4 LEF	5	8 1/2" x 11" LEF	38
005	Tray 4 (LCT)			
	Tray 4 (LCT) accepts three paper sizes. Enter the correct number of the size of the paper loaded in the LCT: A4 LEF: 5 B5 LEF: 14 LT LEF: 38 If the LG/B4 Feeder Kit B474 is installed, enter the correct number to select the size of the paper loaded in the kit: A4 SEF: 133 B4 SEF: 141 LG SEF: 164			
006	Cover Sheet			
	The Cover Interposer Tray B470 is provided with two arrays of paper size sensors to detect the paper size. However, some of the paper sizes may not be indicated correctly on the display panel. For more details, refer to the Cover Interposer Tray manual Section "2.1.3 Paper Size Detection".			

5959*	Paper Size (B140/B246 Series)	
001	Tray 1	
	The following paper sizes can be set. If the A3 DLT kit is not installed, you can only use settings 0 and 1.	
	0: A4 1: 8 ¹ / ₂ x 11 (LT) 2: A3 3: B4 4: A4R (A4 SEF) 5: 11 x 17	6: 8 ¹ / ₂ x 14 R (LG SEF) 7: 8 ¹ / ₂ x 11 R (LT SEF) 8: B5 9: B5 R (B5 SEF) 10: Custom Size
005	Tray 4 (LCT)	
	Tray 4 (LCT) accepts three paper sizes. Enter the correct number of the size of the paper loaded in the LCT:	
	0: A4 1: 8 ¹ / ₂ x 11 2: B5 3: A4 R (A4 SEF)	4: 8 ¹ / ₂ x 14 R (LG SEF) 5: B4 R (B4 SEF) 6: 8 ¹ / ₂ x 14 R (LG SEF) 7: Custom Size
006	Cover Sheet DFU	
	The Cover Interposer Tray B470 is provided with two arrays of paper size sensors to detect the paper size. However, some of the paper sizes may not be indicated correctly on the display panel. For more details, refer to the Cover Interposer Tray manual section "Paper Size Detection".	

5967	Copy Server: Set Function
	Enables and disables the document server. This is a security measure that prevents image data from being left in the temporary area of the HDD. After changing this setting, you must switch the main switch off and on to enable the new setting.[0~1/1] 0: ON 1: OFF

5974	Cherry Server
	Selects which version of the Scan Router application program, "Light" or "Full (Professional)", is installed. [0 ~ 1 / 0 / 1 /step] 0: Light version (supplied with this machine) 1: Full version (optional)

5985	Device Setting (B140/B246)	
	The NIC and USB support features are built into the GW controller. Use this SP to enable and disable these features. In order to use the NIC and USB functions built into the controller board, these SP codes must be set to "1".	
001	On Board NIC	0: Disable 1: Enable
002	On Board USB	

5990	SP Print Mode (SMC Print)
	In the SP mode, press Copy Window to move to the copy screen, select the paper size, then press Start. Select A4/LT (Sideways) or larger to ensure that all the information prints. Press SP Window to return to the SP mode, select the desired print, and press Execute.
001	All (Data List)
002	SP (Mode Data List)
003	User Program Data
004	Logging Data
005	Self-Diagnostic Report
006	Non-Default (Prints only SPs set to values other than defaults.)
007	NIB Summary
008	Capture Log
021	Copier User Program
022	Scanner SP
023	Scanner User Program

SP6xxx Peripherals

6006*	ADF Registration Adjustment
001	ADF Horizontal Registration (Front)
	Adjusts the side-to-side registration for the front in ADF mode. [-3~+3/0.1 mm]
002	ADF Horizontal Registration (Back)
	Adjusts the side-to-side registration for the back in ADF mode. [-3~+3/0.1 mm]
003	ADF Vertical Registration (Front)
	Adjusts the vertical registration for the front in ADF mode. [-30 ~+30/1 mm] -30 = -5.1 mm +30 = +5.1 mm
004	ADF Vertical Registration (Back)
	Adjusts the vertical registration for the back in ADF mode. [-30 ~+30/1 mm] -30 = -5.1 mm +30 = +5.1 mm
005	ADF Buckle Adjustment 1
	Adjusts the roller timing at the skew correction sensor/entrance roller. A higher setting causes more buckling. [-12.0~+12/0.25 mm] -12 = -3.0 mm +12 = +3.0 mm
006	ADF Buckle Adjustment 2
	Adjusts the roller timing at the interval sensor/scanning roller. A higher setting causes more buckling. [-8.0~+8/0.25 mm] -8 = -2 mm +8 = +2 mm
007	ADF Trailing Edge Erase Margin (Front)
	These settings adjust the erase margin for the trailing edges for the front. [-20~+20/0.5 mm] -20 = -10 mm +20 = +10 mm
008	ADF Trailing Edge Erase Margin (Back)
	These settings adjust the erase margin for the trailing edges for the back. [-20~+20/0.5 mm] -20 = -10 mm +20 = +10 mm

6007	ADF Input Check
Displays signals received from sensors and switches in the ADF. (☛ 5.6.3)	
001	Group 1
002	Group 2
003	Group 3


6008	ADF Output Check
Turns on the ADF electrical components individually for testing. (☛ 5.6.4)	
001	Feed Motor: Forward
002	Feed Motor: Reverse
003	Transport Motor: Forward
004	Exit Motor: Forward
005	Pick-up Motor: Reverse
006	Bottom Plate Motor: Forward
007	Bottom Plate Motor: Reverse


6009	DF Free Run	Performs an ADF free run in duplex original mode.
-------------	-------------	---

6016	Original Size Determination Priority
Allows selection of alternate settings for automatic original size detection. (☛ 6.4.8)	

6017*	Sheet Through Magnification
This changes the magnification by adjusting the speed of scanning. [-50~+50/1 %]	

6020*	ADF Contact Mode In/Out
If the original is small (B6, A5, HLT), the delay sensor detects the leading edge of the sheet and delays the original at the entrance roller for the prescribed number of pulses to buckle the leading edge and correct skew. [0~1/1] 0: Delay skew correction only for small originals 1: Delay skew correction for all originals, regardless of size. (May reduce the scanning speed of the ADF)	

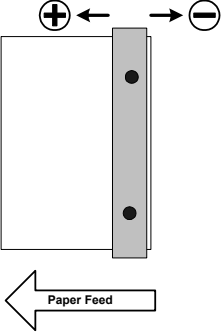6101	Punch Position Adjustment	
	Adjusts the punch hole positions in the direction of paper feed. NA: North America DOM: Japan EU: Europe SCAN: Scandinavia	
001	2-Hole:DOM	<div>[-75~+75/0.5 mm]</div> <div>+ Value: Shifts punch unit in the direction of feed.</div> <div>- Value: Shift punch unit against direction of feed.</div> <div>  </div> <div>B132S921.WMF</div>
002	3-Hole:NA	
003	4-Hole:EU	
004	4-Hole:SCAN	
005	2-Hole:NA	

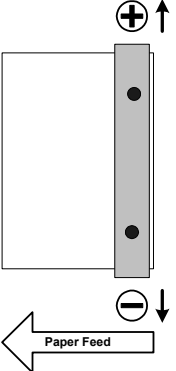6102	Punch Position Adjustment	
	Adjusts the punch position perpendicular to the direction of feed. [-20~+20/0.4 mm] + Value: Shifts punch unit toward back of the finisher. - Value: Shift punch unit toward front of the finisher.	
001	2-Hole:DOM	<div>  </div> <div>B132S922.WMF</div>
002	3-Hole:NA	
003	4-Hole:EU	
004	4-Hole:SCAN	
005	2-Hole:NA	

6105*	Staple Position Adjustment (B064/B140)	
	Adjusts the stapling position in the main scan direction. [-3.5~+3.5/0.5 mm] <i>A larger value shifts the stapling position outward.</i>	


6105	Jogger Fence Fine Adjust (B246)	
	This SP adjusts the distance between the jogger fences and the sides of the stack on the finisher stapling tray. The adjustment is done perpendicular to the direction of paper feed.	
001	A3 SEF	[-1.5 to +1.5/0/0.5 mm] + Value: Increases distance between jogger fences and the sides of the stack. - Value: Decreases the distance between the jogger fences and the sides of the stack.
002	B4 SEF	
003	A4 SEF	
004	A4 LEF	
005	B5 SEF	
006	B5 LEF	
007	DLT SEF	
008	LG SEF	
009	LT SEF	
010	LT LEF	
011	Custom Size	

6106	Adjust Output Jog Position (B246)	
	Use this SP code to adjust the positions of the jogger fences when the pages are aligned (jogged) horizontally in the optional output jogger unit . The jogger fences close in on the sides of the stack on the paper tray. These side fences move in and out perpendicular to the direction of paper feed. [-3 to +3 / 0 / 0.1 mm]	
	<ul style="list-style-type: none"> The higher the setting, the narrower the jogger span and the smaller the gaps between the fences and the edges of the paper. Stacking is tighter. The lower the setting, the wider the jogger span and the wider the gaps between the fences and the edges of the paper. Stacking is not as tight. 	
001	A3 SEF	The settings are done for each paper size. SEF denotes "Short Edge Feed". LEF denotes "Long Edge Feed".
002	B4 SEF	
003	A4 SEF	
004	A4 LEF	
005	B5 LEF	
006	A5 LEF	
007	DLT SEF	
008	LG SEF	
009	LT SEF	
010	LT LEF	
011	HLT LEF	
012	Other	

6107	Cover Feeder Size Change (B246)	
	This SP sets the priority paper size setting for the cover interposer tray (B704).	
001	Priority (All)	0: A3 1: 12"x18"
002	EU/CH	0: 8½" x 13" 1: 8½" x 13" 2: 8¼" x 13"
003	NA	0: 8½" x 14" 1: 8½" x 13"
004	NA	0: LT LEF 1: 10½" x 7¼"
005	NA	0: LT SEF 1: 8" x 10"
006	EU/CH	0: Taiwan 8-Kai 1: DLT
007	EU/CH	0: Taiwan 16-Kai 1: LT SEF
008	EU/CH	0: Taiwan 16-Kai 1: LT LEF

6109	Staple Position Adjustment
	<p>Use this SP to shift the position of the stapling done by the corner stapler of the finisher. This SP shifts the staple position forward and back across the direction of paper feed.</p> <ul style="list-style-type: none"> • Use the "•" key to toggle between + and –. • A larger value shifts the stapling position to shift forward. • A smaller value shifts the stapling position backward. <p>The settings are done for each paper size. [-2 to +2 / 0 / 0.5 mm]</p>

6113*	Punch Hole Adjustment (B064/B140)
001	2-Holes
	Adjusts the punch hole position in the sub-scan direction for the punch unit with two punch holes. [-7.5~+7.5/0.5 mm] A larger value shifts the punch holes towards the edge of the paper.
002	3-Holes
	Adjusts the punch hole position in the sub-scan direction for the punch unit with three punch holes. [-7.5~+7.5/0.5 mm] A larger value shifts the punch holes towards the edge of the paper.

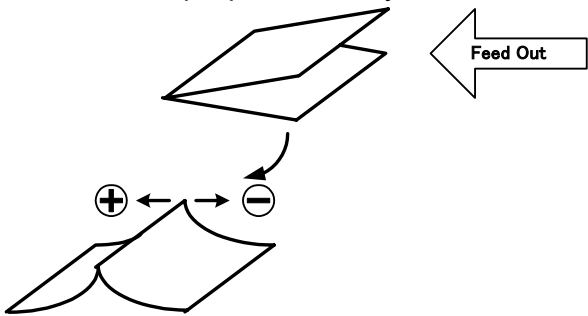6113	Folder Position Adjustment (B246)
	This SP corrects the folding position when paper is stapled and folded in the Booklet Finisher.
001	A3 SEF
002	B4 SEF
003	A4 SEF
004	B5 SEF
005	DLT SEF
006	LG SEF
007	LT SEF
008	Custom Size
	<div> <div>[-3~+3/0/0.2 mm]</div> <div>+ Value: Shifts staple position toward the crease.</div> <div>- Value: Shifts staple position away from the crease.</div> </div>  <div>B132S924.WMF</div>

6114	Folding Number
	<p>This SP sets the number of times the folding rollers are driven forward and reverse to sharpen the crease of a folded booklet before it exits the folding unit of the Booklet Finisher. When set at the default (0):</p> <ul style="list-style-type: none"> • The folding blade pushes the center of the stack into the nip of the folding roller. • The folding rollers rotate ccw to crease the booklet, reverse cw, then rotate ccw again to crease the booklet fold twice before feeding to the folding unit exit rollers. <p>[1~6/0/1] 0:2, 1:5, 2:10, 3:15, 4:20, 5:25, 6:30 passes</p>

6116*	Staple Limit Counter for Thick Paper		
	Multiply the normal limit by this number to determine the staple limit number for thick paper. [1~3/1 sheet]		

6117	Finisher Input Check	Displays the signals received from sensors and switches of the finisher. (☛ 5.6.5)	
001	INPUT1		
002	INPUT2		
003	INPUT3		
004	INPUT4		
005	INPUT5		
006	INPUT6		

6118	Finisher Output Check (B064 and B140 series)	Turn on the electrical components of the finisher individually for test purposes. (☛ 5.6.6)
-------------	---	---

6118	Jogger Off/On (B246 series)
	<p>This SP switches the jogging operation of the output jogger attached to the side of the finisher off and on.</p> <p>[0~1/1] 0: Off, 1: On</p> <p>Note: After installation of the Output Jogger Unit B703, this SP must be set to "1" for the jogging motor to operate the jogging fences.</p>

6119*	Punch Function Enabled (Thick Paper)		
	Allows punching heavier paper, including tab sheets. [0~1/1] 0: Punching thick paper prohibited 1: Punching thick paper allowed		




6120*	Finisher Free Run (B478/B706) (B064/B140/B246)		
	Selects the free run mode during testing.		
001	Free Run 1	Stapling Mode	Stapling only
002	Free Run 2	All Mode	All finisher operation is tested
003	Free Run 3	Packing Mode	Before you move the finisher to a new location, do this SP. When you switch on the machine after you moved it, the finisher automatically goes to the ready condition.
004	Free Run 4	Shift Mode	Tests the shift mode

6121	Finisher Input Check: Finisher 1	Displays the signals received from sensors and switches of the finisher. (☛ 5.6.7)
-------------	-------------------------------------	--

6122	Finisher Input Check: Finisher 2	Displays the signals received from sensors and switches of the finisher. (●5.6.9)
-------------	-------------------------------------	---


6122	Z-Fold Position Adjust (B140)	
	These settings adjust the positions of the first and second folds of paper fed through the Z-folding unit. The first 8 settings (001-008) adjust the position of the first fold for the paper sizes listed. The second 8 settings (009-016) adjust the position of the second fold. The illustration shows the position of the sheet while it goes through the lower exit rollers after it has been folded.	
	1st Fold	
001	A3	[-4~+4/0.2 mm] Adjusts the position of the first fold [A] to decrease or increase the distance (A) between the leading edge [B] and the crease of the 2nd fold [C].
002	B4	
003	A4 SEF	
004	DLT	
005	LG	
006	LT SEF	
007	12 x 18	
008	1st Fold: Other	
	2nd Fold	
009	A3	[-4~+4/0.2 mm] Adjusts the position of the 2nd fold [C] to decrease or increase the length (L1) of the sheet between the trailing edge [D] and the 2nd fold.
010	B4	
011	A4 SEF	
012	DLT	
013	LG	
014	LT SEF	
015	12 x 18	
016	Other	

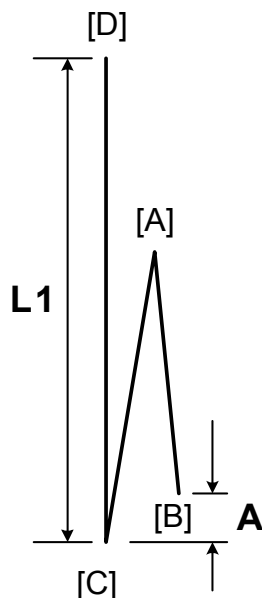


B246S911.WMF

6124	Finisher Output Check: Finisher 1	Turn on the electrical components of the finisher individually for test purposes. (☛ 5.6.8)
-------------	--------------------------------------	---

6125	Finisher Output Check: Finisher 2	Turn on the electrical components of the finisher individually for test purposes. (☛ 5.6.10)
-------------	--------------------------------------	--

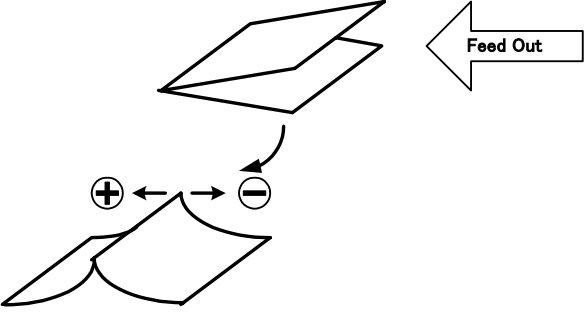6126	Fold Position Setting (B140)	
	This SP corrects the folding position when paper is stapled and folded in the B674 Booklet Finisher.	
001	A3 SEF	<div> <div>[-3~+3/0/0.2 mm]</div> <div>+ Value: Shifts staple position toward the crease.</div> <div>- Value: Shifts staple position away from the crease.</div>  </div>
002	B4 SEF	
003	A4 SEF	
004	B5 SEF	
005	12"x18" SEF	
006	DLT SEF	
007	LG SEF	
008	LT SEF	
009	Custom Size	

B132S924.WMF

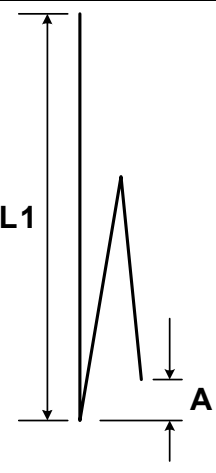6128	Fine Adj Z-Fold 1 (B234 series)	
	Use this SP code to adjust the position of the first fold [A]. This adjustment decreases or increases the distance (A) between the leading edge [B] and the crease of the 2nd fold [C]. [-2 to +4/0/ 0.2 mm]	
001	1st Fold: A3 SEF	
002	1st Fold: B4 SEF	
003	1st Fold: A4 SEF	
004	1st Fold: DLT SEF	
005	1st Fold: LG SEF	
006	1st Fold: LT SEF	
007	1st Fold: Other	
008	2nd Fold: A3 SEF	
009	2nd Fold: B4 SEF	
010	2nd Fold: A4 SEF	
011	2nd Fold: DLT SEF	
012	2nd Fold: LG SEF	
013	2nd Fold: LT SEF	
014	2nd Fold: Other	
016	2nd Fold: A3 SEF	

B234S904.WMF

6900*	ADF Bottom Plate Setting
	Sets the timing for raising and lowering the bottom plate of the ADF. [0~1/1] 0: Original set 1: Copy start

6902*	Fold Position Adjustment (B140)	
	Adjusts the fold position of the copies for saddle-stitching in the B674 booklet finisher according to paper size for multiple sheets. The amount of folding skew for single and multiple sheets is different. This SP adjusts for multiple sheets. SP6903 adjusts for single sheets. Note (B140): <ul style="list-style-type: none"> Always set SP6902 first and then set SP6903. If the order is reversed, the value of SP6902 is added to SP6903. This causes the folding position to shift for single-sheets and causes the booklet to skew. SP6126 can be used to fine-tune the adjustment, because each step is 0.2 mm. 	
001	A3	[-3.5~+3.5/0.5 mm]
002	B4	
003	A4T (SEF)	
004	B5T (SEF)	
005	DLT	
006	LG	
007	LTT (SEF)	
008	Others	



6903*	Fold Position Adjustment (1 Sheet) (B140)	
	Adjusts the fold position for single sheet booklet copies to minimize vertical folding skew. The amount of folding skew for single and multiple sheets is different. This SP adjusts for single sheets. SP6902 adjusts for multiple sheets. Note: Always set SP6902 first and then set SP6903. If the order is reversed, the value of SP6902 is added to SP6903. This causes the folding position to shift for single-sheets and causes the booklet to skew.	
001	A3	[-7.5~+7.5/0.5 mm] A higher value brings the fold closer to the trailing edge; a lower value moves it away from the trailing edge.
002	B4	
003	A4T (SEF)	
004	B5T (SEF)	
005	DLT	
006	LG	
007	LTT (SEF)	
008	Others	

6904	Punch Function Enabled (Z-Fold) (B140) Switches on the hole punch for use when the machine operates with the Z-fold unit. [0~1/1] 0: No punching with Z-fold unit operation 1: Punching allowed with Z-fold unit operation
-------------	---

SP7xxx Data Logs

7001*	Main Motor Operation Time	Displays the total drum rotation time.
--------------	---------------------------	--

7002*	Original Counter (B064)	
001	Total	Displays the total number of fed originals.
002	Copy	Displays the total number of fed originals in copy mode.
003	Fax	Not used.
004	Document Box	Displays the total number of fed originals in document server mode.
005	Scanner	Displays the total number of fed originals in scanner mode.
006	Others	Displays the total number of fed originals in other modes.

7003*	Print Counter (B064)	
	Displays the total number of prints in all modes.	
001	Total Count	Displays the total number of prints in all modes.
002	Copy	Displays the total number of prints in copy mode.
004	Printer	Displays the total number of prints in printer mode.
005	Others	Displays the total number of prints in other modes.

7006*	C/O, P/O Counter (B064)	
001	C/O	Displays the number of sets of copies per original when making 10 or more sets of copies. When making 15 sets of copies of an original, this counter value will increase by "6".
002	P/O	Displays the number of sets of prints per original data when making 10 or more sets. When making 15 sets of prints of an original data, this counter value will increase by "6".

7007*	Other Device Counters (B064)	
001	Duplex Counter	Displays the count total for the selected item.
002	A3/DLT Counter	
003	Staple Counter	
004	Scan Counter	

7101*	Print Count – Paper Size (B064)	
	Displays the total number of prints by paper size.	
005	A4 LEF	Displays the number of copies by paper size. Display range: 0~99999999
006	A5 LEF	
014	B5 LEF	
038	LT LEF	
044	HLT LEF	
132	A3 LEF	
133	A4 SEF	
134	A5 SEF	
141	B4 SEF	
142	B5 SEF	
160	DLT SEF	
164	LG SEF	
166	LT SEF	
172	HLT SEF	
255	Other	

7105*	P Type Counter (B064)	
001	Normal	Displays the total number of prints by paper type. A single-sided print counts as 1 and a two-sided print counts as 2. Display range: 0~99999999
002	Recycled	
003	Special	
004	Color 1	
005	Color 2	
006	Letterhead	
007	Label	
008	Thick	
009	OHP	
010	Used	
011	Index (Tab Sheets)	
012	Tracing	
255	Others	

7201*	Total Scan Counter (B064)
	Displays the total number of scanned originals.

7204*	Print Counter – Paper Trays (B064)	
	Displays the total number of sheets fed from each paper tray.	
001	By-pass	
002	Tray 1	
003	Tray 2	
004	Tray 3	
005	Tray 4	
006	LCT	
007	Cover Interposer	

7205*	ADF Counter (B064)	
	Displays the total number of originals fed by the ADF.	

7206*	Staple Counter (B064)	Displays the total number of staples used.
001	Normal	
002	Booklet	

7209*	Punch Counter (B064)	
	Displays the total number of times the punch has been used.	

7301*	Number of Copies by Reproduction Ratio (B064)	
001	Reduce 25% <-> 49%	Displays the total number of prints for each reproduction ratio range. Display range: 0~9999999 SP7848 clears these counters.
002	Reduce 50% <-> 99%	
003	Full Size	
004	Enlarge 101% <-> 200%	
005	Enlarge 201% <-> 400%	
006	Free Mag. %	
007	Free Size Mag. %	
008	Auto Reduce/Enlarge	

7304*	Copy: Number of Copies by Mode (B064)
	Displays the total number of copies by original type. SP7837 or SP7848 clears this counter.
001	Text
002	Text/Photo
003	Photo
004	Generation Copy
005	Pale
006	Punching
007	Repeat
008	Sort
009	Staple
010	Series
011	Erase
012	Duplex
013	ADF
014	Double Copy
015	Duplex Original
016	Divide Copy
017	Combine 1 Side
018	Combine 2 Side
019	Booklet Gathering
020	Pamphlet Saddle-Stitch
021	Batch
022	SADF
023	Mixed Sizes
024	Stamp
025	Cover/Chapter Sheet
026	Chapter Page

7305	Copy: Display Jobs by Continuous (B064)
	Displays the total number of multiple print jobs by the size of the sets. SP7838 or SP7848 clears this counter.
001	1 to 1
002	1 to 2 <-> 5
003	1 to 6 <-> 10
004	1 to 11 <-> 20
005	1 to 21 <-> 50
006	1 to 51 <-> 100
007	1 to 101 <-> 300
008	1 to 310 <-> Over

7306	Copy: Display Jobs by Mode (B064)
	Displays the total number of copy jobs by operation mode (stapling, punching, etc.). SP7839 or SP7848 clears this counter.
7320	Doc. Svr. – Scan Count
	Displays the total number of pages stored in the document server. SP7840 or SP7848 clears this counter.
7321	Doc. Svr. – Original Size Display
	Displays by paper size the total number of originals stored in the document server. SP7841 or SP7848 clears this counter.
7323	Doc. Svr. – Print Size Display
	Displays by paper size the total number of prints stored in the document server. SP7842 or SP7848 clears this counter.
7324	Doc. Svr. – Print Job Counter
	Displays the total number of jobs executed from the document server. SP7843 or SP7848 clears this counter.
7325	Doc. Svr. – Job Count (Page No)
	Displays the number of pages in jobs executed from the document server. SP7844 or SP7848 clears this counter.
7326	Doc. Svr. – Job Count (File No.)
	Displays the number of files in jobs executed from the document server. SP7845 or SP7848 clears this counter.
7327	Doc. Svr. – Job Count (Set No.)
	Displays the number of sets of multiple page print jobs executed from the document server. SP7846 or SP7848 clears this counter.
7328	Doc. Svr. – Job Count (Print Mode)
	Displays the total number of prints in print mode executed from the document server. SP7847 or SP7848 clears this counter.

7401*	Total SC Counter
	Displays the total number of SCs logged.

7403*	SC History
	Displays information about the 10 most recent service calls (Code, Total, Date, and Details).

7502*	Total Paper Jam Counter
	Displays the total number of copy jams.

7503*	Total Original Jam Counter
	Displays the total number of original jams.

7504	Paper Jam Location
	Displays the list of possible locations where a jam could have occurred. Press the appropriate key to display the jam count for that location. These jams are caused by the failure of a sensor to activate.

Paper Late (Remains ON)	Paper Lag (Remains OFF)	On Screen	What It Means
1		At power on	
3	53	Tray 1	1st Paper Feed SN
4	54	Tray 2	2nd Paper Feed SN
5	55	Tray 3	3rd Paper Feed SN
6	56	Tray 4	4th Paper Feed SN (Japan Only)
7	57	External Tray	LCT Paper Feed SN
8	58	Registration 1	1st Vertical Transport SN
9	59	Registration 2	2nd Vertical Transport SN
10	60	Registration 3	3rd Vertical Transport SN
11	61	Registration 4	4th Vertical Transport SN (Japan Only)
12	62	Middle Sensor	Relay SN
13	63	Registration	Registration SN
14		Fusing	Fusing Exit SN
15		Duplex Exit	Exit Unit Entrance SN
16	66	Duplex Exit	Paper Exit SN
19	69	Ent Duplex	Duplex Entrance SN
20		Ent Duplex 1	Duplex Transport SN 1
21	71	Ent Duplex 2	Duplex Transport SN 2
22	72	Ent Duplex 3	Duplex Transport SN 3
23	73	Exit Duplex	Duplex Inverter SN
24	74	1-Bin Tray	1-Bin Tray SN Japan Only
34		Bypass: Non-Feed	By-pass Paper End SN

7504	Finisher (B469: No Saddle Stitch)
101	Finisher 101. Entrance Sensor
	When the paper fails to activate the entrance sensor at the precise time or remains at the entrance sensor for longer than the prescribed time.
102	Finisher 102. Proof Tray Exit Sensor
	When the paper fails to activate the proof tray exit sensor at the precise time after activating the entrance sensor or remains at the proof tray exit sensor for longer than the prescribed time.
103	Finisher 103. Exit Sensor
	When the paper fails to activate the exit sensor at the precise time after activating the entrance sensor or remains at the exit sensor for longer than the prescribed time.
104	Finisher 104. Staple Entrance Sensor
	When the paper fails to activate the staple entrance sensor at the precise time after activating the entrance sensor or remains at the staple entrance sensor for longer than the prescribed time.
105	Finisher 105. Exit Sensor after jogging
	When the paper from the jogger unit fails to activate the exit sensor at the precise time or remains at the exit sensor for longer than the prescribed time.
106	Finisher 106. Stapler Unit 1
	When the stapler unit fails to send any signals while stapling.
109	Finisher 109. Shift Motor
	When the signal status of the lower tray encoder sensor does not change at the precise time during motor rotation. Returns SC733
110	Finisher 110. Jogger Fence Motor
	When the status of the jogger fence HP sensor does not change at the precise time during jogger fence motor rotation. Returns SC722.
111	Finisher 111. Shift Roller or Guide Plate Motor
	When the status of the shift roller HP sensor does not change at the precise time during shift roller motor rotation, or the status of the guide plate position sensor does not change at the precise time during guide plate motor rotation. Returns SC732, SC736
112	Finisher 112. Stapler Movement or Stapler Rotation Motor
	When the status of the stapler HP sensor does not change at the precise time during stapler movement motor rotation, or the status of the stapler rotation sensor does not change at the precise time during stapler rotation motor. Returns SC730, SC727
113	Finisher 113. Stapler Unit 2
	Not logged. Returns SC724.
115	Finisher 115. Feed Out Belt Motor
	When the status of the feed out belt HP sensor does not change at the precise time during feed out belt motor rotation. Returns SC725.
116	Finisher 116. Punch Hole Motor
	When the status of the punch HP sensor does not change at the precise time during punch hole motor rotation. Returns SC729

7504	Finisher 1: SR4000 (Corner Stapling Only – No Booklet Stapling) (B246)
101	Finisher 101. Finisher Entrance Sensor
	When the paper fails to activate the entrance sensor at the precise time or remains at the entrance sensor for longer than the prescribed time.
102	Finisher 102. Proof Tray Exit
	When the paper fails to activate the proof tray exit sensor at the precise time after activating the entrance sensor or remains at the proof tray exit sensor for longer than the prescribed time.
103	Finisher 103. Finisher Exit
	When the paper fails to activate the exit sensor at the precise time after activating the entrance sensor or remains at the exit sensor for longer than the prescribed time.
104	Finisher 104. Staple Tray
	The paper failed to arrive at or leave the stapling tray,.
105	Finisher 105. Jogging Tray
	When the paper from the jogger unit fails to activate the exit sensor at the precise time or remains at the exit sensor for longer than the prescribed time.
106	Finisher 106. Corner Stapler
	One or both staplers failed to send any signals while stapling.
109	Finisher 109. Tray Motor Jam
	A jam has occurred and locked one or more of these motors that operate the staple tray and pre-stack tray: lower transport motor, positioning roller motor, jogger fence motor, stack junction gate motor
110	Finisher 110. Jogger Fences
	When the status of the jogger fence HP sensor does not change at the precise time during jogger fence motor rotation. Returns SC722.
111	Finisher 111. Shift Roller or Guide Plate Motor
	When the status of the shift roller HP sensor does not change at the precise time during shift roller motor rotation, or the status of the guide plate position sensor does not change at the precise time during guide plate motor rotation. Returns SC732, SC736
112	Finisher 112. Stapler Movement or Stapler Rotation Motor
	When the status of the stapler HP sensor does not change at the precise time during stapler movement motor rotation, or the status of the stapler rotation sensor does not change at the precise time during stapler rotation motor. Returns SC730, SC727
113	Finisher 113. Stapler Unit
	Not logged. Returns SC724.
115	Finisher 115. Feed Out Belt Motor
	When the status of the feed out belt HP sensor does not change at the precise time during feed out belt motor rotation. Returns SC725.
116	Finisher 116. Punch Hole Motor
	When the status of the punch HP sensor does not change at the precise time during punch hole motor rotation. Returns SC729

7504	Finisher (B468/B674)
121	Finisher 121. Entrance Sensor
	When the paper fails to activate the entrance sensor at the precise time or remains at the entrance sensor for longer than the prescribed time.
122	Finisher 122. Proof Tray Exit Sensor
	When the paper fails to activate the proof tray exit sensor at the precise time after activating the entrance sensor or remains at the proof tray exit sensor for longer than the prescribed time.
123	Finisher 123. Exit Sensor
	When the paper fails to activate the exit sensor at the precise time after activating the entrance sensor or remains at the exit sensor for longer than the prescribed time.
124	Finisher 124. Staple Entrance Sensor
	When the paper fails to activate the staple entrance sensor at the precise time after activating the entrance sensor or remains at the staple entrance sensor for longer than the prescribed time.
125	Finisher 125. Exit Sensor after jogging
	When the paper from jogger unit fails to activate the exit sensor at the precise time or remains at the exit sensor for longer than the prescribed time.
126	Finisher 126. Stapler Unit 1
	When the stapler unit fails to send any signals while stapling.
127	Finisher 127. Saddle Stitch Stapler Unit
	Finisher : When the saddle stitch stapler fails to send any signals while stapling. Saddle Stitch,
128	Finisher 128. Saddle Stitch Stapler Unit
	When the status of the exit sensor does not change at the precise time during saddle stitching.
129	Finisher 129. Shift Motor
	When the status of the upper tray limit sensor does not change at the precise time while lifting the upper exit tray, the status of the upper tray full sensor does not change at the precise time while lowering the upper exit tray, or the status of the lower tray encoder sensor does not change at the precise time while moving the lower tray. Returns SC733, SC726
130	Finisher 130. Jogger Fence Motor
	When the status of the jogger fence HP sensor does not change at the precise time during jogger fence motor rotation. Returns SC722
131	Finisher 131. Shift Roller or Guide Plate Motor
	When the status of the shift roller HP sensor does not change at the precise time during shift roller motor rotation, or the status of the guide plate position sensor does not change at the precise time during guide plate motor rotation. Returns SC732, SC736
132	Finisher 132. Stapler Movement or Stapler Rotation Motor
	When the status of the stapler HP sensor does not change at the precise time during stapler movement motor rotation, or the status of the stapler rotation sensor does not change at the precise time during stapler rotation motor. Returns SC730, SC727
133	Finisher 133. Stapler Unit 2
	Not logged. Returns SC724, SC740, SC741
134	Finisher 134. Folder Plate Motor
	When the status of the folder plate HP sensor does not change at the precise time during folder plate motor rotation. Returns SC739

135	Finisher 135. Feed Out Belt Motor
	When the status of the feed out belt HP sensor does not change at the precise time during feed out belt motor rotation. Returns SC725
136	Finisher 136. Punch Hole Motor
	When the status of the punch HP sensor does not change at the precise time during punch hole motor rotation. Returns SC729

7504	SR4000 (Corner Stapling, Booklet Stapling) (B246)
121	Finisher 121. Finisher Entrance Sensor
	When the paper fails to activate the entrance sensor at the precise time or remains at the entrance sensor for longer than the prescribed time.
122	Finisher 122. Proof Tray Exit
	When the paper fails to activate the proof tray exit sensor at the precise time after activating the entrance sensor or remains at the proof tray exit sensor for longer than the prescribed time.
123	Finisher 123. Finisher Exit
	When the paper fails to activate the exit sensor at the precise time after activating the entrance sensor or remains at the exit sensor for longer than the prescribed time.
124	Finisher 124. Staple Tray
	When the paper fails to activate the staple entrance sensor at the precise time after activating the entrance sensor or remains at the staple entrance sensor for longer than the prescribed time.
125	Finisher 125. Jogging Tray
	When the paper from jogger unit fails to activate the exit sensor at the precise time or remains at the exit sensor for longer than the prescribed time.
126	Finisher 126. Corner Stapler
	When the stapler unit fails to send any signals while stapling.
127	Finisher 127. Booklet Stapler
	Finisher : When the booklet stapler fails to send any signals during stapling.
128	Finisher 128. Fold Unit
	When the status of the paper position does not change at the precise time during paper folding.
129	Finisher 129. Shift Tray
	When the status of the upper tray limit sensor does not change at the precise time while lifting the upper exit tray, the status of the upper tray full sensor does not change at the precise time while lowering the upper exit tray, or the status of the lower tray encoder sensor does not change at the precise time while moving the lower tray. Returns SC733, SC726
130	Finisher 130. Jogger Fences
	When the status of the jogger fence HP sensor does not change at the precise time during jogger fence motor rotation. Returns SC722
131	Finisher 131. Shift Roller or Guide Plate Motor
	When the status of the shift roller HP sensor does not change at the precise time during shift roller motor rotation, or the status of the guide plate position sensor does not change at the precise time during guide plate motor rotation. Returns SC732, SC736
132	Finisher 132. Stapler Movement or Stapler Rotation Motor
	When the status of the stapler HP sensor does not change at the precise time during stapler movement motor rotation, or the status of the stapler rotation sensor does not change at the precise time during stapler rotation motor. Returns SC730, SC727
133	Finisher 133. Stapler Unit

	Not logged. Returns SC724, SC740, SC741
134	Finisher 134. Folder Plate Jam
	When the status of the folder plate HP sensor does not change at the precise time during folder plate motor rotation. Returns SC739
135	Finisher 135. Feed Out Belt Motor
	When the status of the feed out belt HP sensor does not change at the precise time during feed out belt motor rotation. Returns SC725
136	Finisher 136. Punch Hole Motor
	When the status of the punch HP sensor does not change at the precise time during punch hole motor rotation. Returns SC729

7504	Finisher (B478/B706)
141	Finisher 141. Entrance Sensor
	When the paper fails to activate the entrance sensor at the precise time or remains at the entrance sensor for longer than the prescribed time.
142	Finisher 142. Proof Tray Exit Sensor
	When the paper fails to activate the proof tray exit sensor at the precise time after activating the entrance sensor or remains at the proof tray exit sensor for longer than the prescribed time.
143	Finisher 143. Exit Sensor
	When the paper fails to activate the exit sensor at the precise time after activating the entrance sensor or remains at the exit sensor for longer than the prescribed time.
144	Finisher 144. Staple Entrance Sensor
	When the paper fails to activate the staple entrance sensor at the precise time after activating the entrance sensor or remains at the staple entrance sensor for longer than the prescribed time.
145	Finisher 145. Exit Sensor after jogging
	When the paper from jogger unit fails to activate the exit sensor at the precise time or remains at the exit sensor for longer than the prescribed time.
148	Finisher 148. Upper Transport Motor
	When the upper transport motor fails to send any signals while rotating.
149	Finisher 149. Shift Motor
	When the status of the lower tray encoder sensor does not change at the precise time during shift motor rotation. Returns SC733
150	Finisher 150. Jogger Fence Motor
	When the status of the jogger fence HP sensor does not change at the precise time during jogger fence motor rotation. Returns SC722
151	Finisher 151. Shift Roller or Guide Plate Motor
	When the status of the shift roller HP sensor does not change at the precise time during shift roller motor rotation, or the status of the guide plate position sensor does not change at the precise time during guide plate motor rotation. Returns SC732, SC736
153	Finisher 153. Stapler Unit
	When the stapler unit fails to send any signals while stapling. Returns SC724

155	Finisher: Feed Out Belt Motor
	When the status of the feed out belt HP sensor does not change at the precise time during feed out belt motor rotation. Returns SC725
156	Finisher : Punch Hole Motor
	When the status of the punch HP sensor does not change at the precise time during punch hole motor rotation. Returns SC729

7504	Mail Box (B471)
161	Mail Box 161. Vertical Transport Sensor 1
162	Mail Box 162. Vertical Transport Sensor 2
163	Mail Box 163. Vertical Transport Sensor 3
164	Mail Box 164. Vertical Transport Sensor 4
165	Mail Box 165. Vertical Transport Sensor 5
	An error is returned when the status of one or more of these sensors does not change with the prescribed time.

7504	Cover Interposer Tray (B470)
166	Insertor 1. Feed or Pull-out Sensor
	When the paper fails to activate the feed or pull-out sensor at the precise time.
167	Insertor 2. Exit Sensor
	When the paper fails to activate the exit sensor at the precise time or remains at the exit sensor for longer than the prescribed time.
168	Insertor 3. Bottom Plate Position Sensor
	When the status of the bottom plate position sensor does not change at the precise time during bottom plate motor rotation. Returns SC750,

7504	Z-Folding Unit (B660)
169	Z-Fold 169. Paper Feed Sensor: Paper Late
170	Z-Fold 170. Paper Feed Sensor: Paper Remains
171	Z-Fold 171. Fold Timing Sensor: Paper Late
172	Z-Fold 172. Fold Timing Sensor: Paper Remains
173	Z-Fold 173. Leading Edge Exit Sensor: Paper Late
174	Z-Fold 174. Leading Edge Exit Sensor: Paper Remains
175	Z-Fold 175. Upper Stopper Path Sensor: Paper Late
176	Z-Fold 176. Upper Stopper Path Sensor: Paper Remains
177	Z-Fold 177. Lower Exit Sensor: Paper Late
178	Z-Fold 178. Lower Exit Sensor: Paper Remains
181	Z-Fold 181. Upper Exit Sensor: Paper Late
182	Z-Fold 182. Upper Exit Sensor: Paper Remains
183	Z-Fold 183. Paper Fold Motor Lock
184	Z-Fold 184. Lower Stopper Motor Lock
185	Z-Fold 185. Upper Stopper Motor Lock
	Note: "Paper Late" means the copy did not arrive (check-in) at the sensor site within the prescribed time. "Paper Remains" means the copy did not leave (check-out) from the sensor site within the prescribed time.

7505*	Original Jam Detection	
001	At power on	Displays the total number of original jams by paper size. Nip-in sensor: Interval sensor
003	Registration sensor check in failure	
004	Nip-in sensor check in failure	
005	Registration sensor (On check)	
006	Relay Sensor (On check)	
053	Registration sensor check out failure	
054	Nip-in sensor check out failure	
055	Registration sensor (Off check)	
056	Relay sensor (Off check)	

7506*	Jam Count by Paper Size	
	Displays the total number of jams by paper size.	
005	A4 LEF	Displays the total number of jams by paper size.
006	A5 LEF	
014	B5 LEF	
038	LT LEF	
044	HLT LEF	
128	Other LEF	
132	A3	
133	A4 SEF	
134	A5 SEF	
141	B4 SEF	
142	B5 SEF	
160	DLT SEF	
164	LG SEF	
166	LT SEF	
172	HLT SEF	
255	Other SEF	

7507*	Plotter Jam History	
001	Copy Latest	Displays the copy jam history (the most recent 10 jams) Sample Display: CODE:007 SIZE:05h TOTAL:0000334 DATE:Mon Mar 15 11:44:50 2000 where: CODE is the SP7504-* number (see above). SIZE is the ASAP paper size code in hex. TOTAL is the total jam error count (SP7003) DATE is the date the jams occurred.
002	Latest 1	
003	Latest 2	
004	Latest 3	
005	Latest 4	
006	Latest 5	
007	Latest 6	
008	Latest 7	
009	Latest 8	
010	Latest 9	

Size	Code	Size	Code	Size	Code
A4 (S)	05	A3 (L)	84	DLT (L)	A0
A5 (S)	06	A4 (L)	85	LG (L)	A4
B5 (S)	0E	A5 (L)	86	LT (L)	A6
LT (S)	26	B4 (L)	8D	HLT (L)	AC
HLT (S)	2C	B5 (L)	8E	Others	FF

7508	Original Jam HistoryOriginal Jam History	
	Displays the original jam history of the transfer unit in groups of 10, starting with the most recent 10 jams. Display contents are as follows: CODE is the SP7-505-*** number. SIZE is the paper size code in hex. (See "Paper Size Hex Codes" below.) TOTAL is the total jam error count (SP7-003) DATE is the date the previous jam occurred	
001	Latest	Sample Display: CODE: 007 SIZE: 05h TOTAL: 0000334 DATE: Mon Mar 15 11:44:50 2000
002	Latest 1	
003	Latest 2	
004	Latest 3	
005	Latest 4	
006	Latest 5	
007	Latest 6	
008	Latest 7	
009	Latest 8	
010	Latest 9	

Paper Size Hex Codes

These codes are displayed by SP7507 and SP7508.

Paper Size	Code (hex)	Paper Size	Code (hex)
A4 LEF	05	B4 SEF	8D
A5 LEF	06	B5 SEF	8E
B5 LEF	0E	DLT SEF	A0
LT LEF	26	LG SEF	A4
HLT LEF	2C	LT SEF	A6
A3 SEF	84	HLT SEF	AC
A4 SEF	85	Others	FF
A5 SEF	86		

7617	Parts PM Counter Display	
001	Normal	Japan Only
002	DF	Japan Only

7618	PM Parts Counter Reset Japan Only	
001	Normal	Press Execute to clear the parts replacement alarm counter for the main machine.
002	DF	Press Execute to clear the parts replacement alarm counter for the ADF.

7618	Parts PM Counter Reset (B140/B246)	
001	Copy Paper Standard	Clears the counter of SP7617- 001. Japan Only
002	Copy Paper Standard	Clears the counter of SP7617- 002 Japan Only

7801*	ROM No./Firmware Version (B140/B246)	Displays the ROM version numbers of the main machine and connected peripheral devices.
7803*	PM Counter Display	Displays the PM count since the last PM.
7804*	PM Counter Reset	Resets the PM count.
7807*	SC/Jam Counter Reset	Press Start to reset the SC and jam counters.
7808*	Counters Reset (B064)	Pressing the # key will reset all counters, except for the following: <ul style="list-style-type: none"> • Optional card/key counters • Total electronic counts • Copy count • Print count • Duplex count • Staple count • A3/DLT count • P/O count • C/O count
7810*	Key Operator Code Clear (B064)	Press # to clear the key operator code if the customer key operator forgets the password and the machine cannot be used.

7811*	Original Feed Count Clear (B064)	
	Clears the original total display, displayed with SP7002-***. To clear, press ①.	

7816*	Copy Counter Reset (B064)	
001	Tray 1 (Tandem Tray)	Resets the total feed count for each feed station.
002	Tray 2	
003	Tray 3	
004	Tray 4 Japan Only	
005	LCT	
006	By-pass	

7817*	ADF Counter Reset (B064)	Resets the counters of SP7205
7822	Copy Counter Rest – Magnification (B064)	Resets all counters of SP7301.



7825	Total Counter Reset (B064)	
	Resets the electronic counter total. Normally, this SP is executed at installation.	

7826*	MF Error Counter	
	Displays the number of counts requested of the card/key counter. Japan Only	
001*	Error Total	A request for the count total failed at power on. This error will occur if the device is installed but disconnected.
002*	Error Staple	The request for a staple count failed at power on. This error will occur if the device is installed but disconnected.

7827	MF Error Counter Clear	
	Press Execute to reset to 0 the values of SP7826. Japan Only	

7832	Self-Diagnostic Report Details	
	Press # to display a list of error codes. Nothing is displayed if no errors have occurred.	

7834	Clear Pixel Coverage Data DFU	
001	Last & Average pages	
002	Toner Bottle in Use	
003	Page Counts (2 Prev. Toner Bottles)	

7836	Total Memory Size	
	Displays the contents of the memory on the controller board.	
7837	Copy Clear: Pages by Mode (B064)	
	Press Execute to clear counter SP7304 (Copy Num – Copies by Mode)	
7838	Copy Clear: Jobs by Count Continuous (B064)	
	Press Execute to clear counter SP7305 (Copy: Display Jobs by Mode)	
7839	Copy Clear: Jobs by Mode (B064)	
	Press Execute to clear counter SP7306 (Copy: Display Jobs by Mode).	
7840	LS Clear: Stored Image Logins (B064)	
	Press Execute to clear counter SP7320 (Doc. Svr. – Scan Count.	
7841	LS Clear: Originals by Size (B064)	
	Press Execute to clear counter SP7321 (Doc. Svr. – Original Size Display)	

7842	LS Clear: Prints by Size (B064)
	Press Execute to clear counter SP7323 (Doc. Svr – Print Size Display).
7843	LS Clear: Print Job Logins (B064)
	Press Execute to clear counter SP7324 (Doc. Svr. – Print Job Counter).
7844	LS Clear: Print to Page Distr. (B064)
	Press Execute to clear SP7325 (Doc. Svr. – Job Count (Page No.)).
7845	LS Clear: Print Job File Distr. (B064)
	Press Execute to clear SP7326 (Doc. Svr – Job Count (File No.)).
7846	LS Clear: Print Job Copies Distr. (B064)
	Press Execute to clear SP7327 (Doc. Svr. – Job Count (Set No.)).
7847	LS Clear: Number of Pages by Mode (B064)
	Press Execute to clear SP7328 (Doc. Svr – Job Count (Print Mode)).
7848	Copy: All Clear (B064)
	Press Execute to clear the following SP codes: SP7301, SP7304, SP7305, SP7306, SP7320, SP7321, SP7323, SP7324, SP7325, SP7326, SP7327, SP7328.



7852	ADF Scan Glass (B140)	
	Displays the count for the number of times the machine detected dust on the ADF exposure glass strip at the beginning of copy jobs. Count range: 00000 to 65535 The count is done only when SP4020 001 has been switched on (Default: Off). For more, see SP4020.	
001	Dust Counter	Total count for the number of times the dust warning message was issued on the operation panel. This warning is issued before the original is copied if there is dust on the ADF exposure glass. [0~1/1] 0: Off 1: On This counter does not operate if SP4020-001 is switched off.
0002	Clear Counter	This counts how many times the machine moves the scanner to a different leading edge position to correct the above problem.

7901	Assert Info.	
001	Filename	Used for debugging. DFU
002	Line No.	
003	Value	

7911	Firmware Version (B064)	Displays the version numbers of all firmware in the system.
7990	Status of Issued SC (B064)	Displays the following information about the most recently issued SC: 1) Source file name, 2) SC number, 3) Result

SP8xxx: Data Log2

Many of these counters are provided for features that are currently not available, such as sending color faxes, and so on. However, here are some Group 8 codes that when used in combination with others, can provide useful information.

SP Numbers	What They Do
SP8211~SP8216	The number of pages scanned to the document server.
SP8401~SP8406	The number of pages printed from the document server
SP8691~SP8696	The number of pages sent from the document server

Specifically, the following questions can be answered:

- How is the document server actually being used?
- What application is using the document server most frequently?
- What data in the document server is being reused?

Most of the SPs in this group are prefixed with a letter that indicates the mode of operation (the mode of operation is referred to as an 'application'). Before reading the Group 8 Service Table, make sure that you understand what these prefixes mean.

PREFIXES	WHAT IT MEANS	
T:	Total: (Grand Total).	Grand total of the items counted for all applications (C, F, P, etc.)..
C:	Copy application.	Totals (pages, jobs, etc.) executed for each application when the job was <i>not</i> stored on the document server.
P:	Print application.	
S:	Scan application.	
L:	Local storage (document server)	Totals (jobs, pages, etc.) for the document server. The L: counters work differently case by case. Sometimes, they count jobs/pages stored on the document server; this can be in document server mode (from the document server window), or from another mode, such as from a printer driver or by pressing the Store File button in the Copy mode window. Sometimes, they include occasions when the user uses a file that is already on the document server. Each counter will be discussed case by case.
O:	Other applications (external network applications, for example)	Refers to network applications such as Web Image Monitor. Utilities developed with the SDK (Software Development Kit) will also be counted with this group in the future.

The Group 8xxx SP codes are limited to 17 characters, forced by the necessity of displaying them on the small LCDs of other machines that use these SP codes. Read over the list of abbreviations below and refer to it again if you see the name of an SP that you do not understand.

Key for Abbreviations

ABBREVIATION	WHAT IT MEANS
/	"By", e.g. "T:Jobs/Apl" = Total Jobs "by" Application
>	More (2> "2 or more", 4> "4 or more")
AddBook	Address Book
Apl	Application
B/W	Black & White
Bk	Black
C	Cyan
ColCr	Color Create
ColMode	Color Mode
Comb	Combine
Comp	Compression
Deliv	Delivery
DesApl	Designated Application. The application (Copy, Fax, Scan, Print) used to store the job on the document server, for example.
Dev Counter	Development Count, no. of pages developed.
Dup, Duplex	Duplex, printing on both sides
Emul	Emulation
FC	Full Color
FIN	Post-print processing, i.e. finishing (punching, stapling, etc.)
Full Bleed	No Margins
GenCopy	Generation Copy Mode
GPC	Get Print Counter. For jobs 10 pages or less, this counter does not count up. For jobs larger than 10 pages, this counter counts up by the number that is in excess of 10 (e.g., for an 11-page job, the counter counts up 11-10 =1)
IFax	Internet Fax
ImgEdt	Image Edit performed on the original with the copier GUI, e.g. border removal, adding stamps, page numbers, etc.
K	Black (YMCK)
LS	Local Storage. Refers to the document server.
LSize	Large (paper) Size
Mag	Magnification
MC	One color (monochrome)
NRS	New Remote Service, which allows a service center to monitor machines remotely. "NRS" is used overseas, "CSS" is used in Japan.
Org	Original for scanning
OrgJam	Original Jam
Palm 2	Print Job Manager/Desk Top Editor: A pair of utilities that allows print jobs to be distributed evenly among the printers on the network, and allows files to moved around, combined, and converted to different formats.

ABBREVIATION	WHAT IT MEANS
PC	Personal Computer
PGS	Pages. A page is the total scanned surface of the original. Duplex pages count as two pages, and A3 simplex count as two pages if the A3/DLT counter SP is switched ON.
PJob	Print Jobs
Ppr	Paper
PrtJam	Printer (plotter) Jam
PrtPGS	Print Pages
R	Red (Toner Remaining). Applies to the wide format model A2 only. This machine is under development and currently not available.
Rez	Resolution
SC	Service Code (Error SC code displayed)
Scn	Scan
Sim, Simplex	Simplex, printing on 1 side.
S-to-Email	Scan-to-E-mail
SMC	SMC report printed with SP5990. All of the Group 8 counters are recorded in the SMC report.
Svr	Server
TonEnd	Toner End
TonSave	Toner Save
TXJob	Send, Transmission
YMC	Yellow, Magenta, Cyan
YMCK	Yellow, Magenta, Cyan, Black

NOTE: All of the Group 8xxx SPs are reset with SP5801-001 Memory All Clear, or the Counter Reset SP7808.

8001	T:Total Jobs	These SPs count the number of times each application is used to do a job. [0~9999999/1] Note: The L: counter is the total number of times the other applications are used to send a job to the document server, plus the number of times a file already on the document server is used.
8002	C:Total Jobs	
8004	P:Total Jobs	
8005	S:Total Jobs	
8006	L:Total Jobs	

- These SPs reveal the number of times an application is used, not the number of pages processed.
- When an application is opened for image input or output, this counts as one job.
- Interrupted jobs (paper jams, etc.) are counted, even though they do not finish.
- Only jobs executed by the customer are counted. Jobs executed by the customer engineer using the SP modes are not counted.
- When using secure printing (when a password is required to start the print job), the job is counted at the time when either "Delete Data" or "Specify Output" is specified.
- When a copy job on the document server is printed, SP8022 also increments, and when a print job stored on the document server is printed, SP8024 also increments.
- When an original is both copied and stored on the document server, the C: and L: counters both increment.
- When a print job is stored on the document server, only the L: counter increments.
- When the user presses the Document Server button to store the job on the document server, only the L: counter increments.
- When the user enters document server mode and prints data stored on the document server, only the L: counter increments.
- When an image received from Palm 2 is received and stored, the L: counter increments.
- When the customer prints a report (user code list, for example), the O: counter increments

8011	T:Jobs/LS	These SPs count the number of jobs stored to the document server by each application, to reveal how local storage is being used for input. [0~9999999/1] The L: counter counts the number of jobs stored from within the document server mode screen at the operation panel.
8012	C:Jobs/LS	
8014	P:Jobs/LS	
8015	S:Jobs/LS	
8016	L:Jobs/LS	
8017	O:Jobs/LS	

- When a scan job is sent to the document server, the S: counter increments.
When you enter document server mode and then scan an original, the L: counter increments.
- When a print job is sent to the document server, the P: counter increments.
- When a network application sends data to the document server, the O: counter increments.
- When an image from Palm 2 is stored on the document server, the O: counter increments.

8021	T:Pjob/LS	These SPs reveal how files printed from the document server were stored on the document server originally. [0~9999999/1] The L: counter counts the number of jobs stored from within the document server mode screen at the operation panel.
8022	C:Pjob/LS	
8024	P:Pjob/LS	
8025	S:Pjob/LS	
8026	L:Pjob/LS	
8027	O:Pjob/LS	

- When a copy job stored on the document server is printed with another application, the C: counter increments.
- When an application like DeskTopBinder merges a copy job that was stored on the document server with a print job that was stored on the document server, the C: and P: counters both increment.
- When a job already on the document server is printed with another application, the L: counter increments.
- When a scanner job stored on the document server is printed with another application, the S: counter increments. If the original was scanned from within document server mode, then the L: counter increments.
- When images stored on the document server by a network application (including Palm 2), are printed with another application, the O: counter increments.
- When a copy job stored on the document server is printed with a network application (Web Image Monitor, for example), the C: counter increments.

8031	T:Pjob/DesApl	These SPs reveal what applications were used to output documents from the document server. [0~9999999/1] The L: counter counts the number of jobs printed from within the document server mode screen at the operation panel.
8032	C:Pjob/DesApl	
8034	P:Pjob/DesApl	
8035	S:Pjob/DesApl	
8036	L:Pjob/DesApl	
8037	O:Pjob/DesApl	

- When documents already stored on the document server are printed, the count for the application that started the print job is incremented.
- When the print job is started from a network application (Desk Top Binder, Web Image Monitor, etc.) the L: counter increments.

8041	T:TX Jobs/LS	These SPs count the applications that stored files on the document server that were later accessed for transmission over the telephone line or over a network (attached to an e-mail). [0~9999999/1] Note: Jobs merged for sending are counted separately. The L: counter counts the number of jobs scanned from within the document server mode screen at the operation panel.
8042	C:TX Jobs/LS	
8044	P:TX Jobs/LS	
8045	S:TX Jobs/LS	
8046	L:TX Jobs/LS	
8047	O:TX Jobs/LS	

- When a stored copy job is sent from the document server, the C: counter increments.
- When images stored on the document server by a network application or Palm2 are sent as an e-mail, the O: counter increments.

8051	T:TX Jobs/DesApl	These SPs count the applications used to send files from the document server over the telephone line or over a network (attached to an e-mail). Jobs merged for sending are counted separately. [0~9999999/1] The L: counter counts the number of jobs sent from within the document server mode screen at the operation panel.
8052	C:TX Jobs/DesApl	
8054	P:TX Jobs/DesApl	
8055	S:TX Jobs/DesApl	
8056	L:TX Jobs/DesApl	
8057	O:TX Jobs/DesApl	

- If the send is started from Desk Top Binder or Web Image Monitor, for example, then the O: counter increments.

8061	T:FIN Jobs [0~9999999/1]	
	These SPs total the finishing methods. The finishing method is specified by the application.	
8062	C:FIN Jobs [0~9999999/1]	
	These SPs total finishing methods for copy jobs only. The finishing method is specified by the application.	
8064	P:FIN Jobs [0~9999999/1]	
	These SPs total finishing methods for print jobs only. The finishing method is specified by the application.	
8065	S:FIN Jobs [0~9999999/1]	
	These SPs total finishing methods for scan jobs only. The finishing method is specified by the application. Note: Finishing features for scan jobs are not available at this time.	
8066	L:FIN Jobs [0~9999999/1]	
	These SPs total finishing methods for jobs output from within the document server mode screen at the operation panel. The finishing method is specified from the print window within document server mode.	
8067	O:FIN Jobs [0~9999999/1]	
	These SPs total finishing methods for jobs executed by an external application, over the network. The finishing method is specified by the application.	
001	Sort	Number of jobs started in Sort mode. When a stored copy job is set for Sort and then stored on the document server, the L: counter increments. (See SP8066)
002	Stack	Number of jobs started out of Sort mode.
003	Staple	Number of jobs started in Staple mode.
004	Booklet	Number of jobs started in Booklet mode. If the machine is in staple mode, the Staple counter also increments.
005	Z-Fold	Number of jobs started In any mode other than the Booklet mode and set for folding (Z-fold).
006	Punch	Number of jobs started in Punch mode. When Punch is set for a print job, the P: counter increments. (See SP8064)
007	Other	Reserved. Not used.

8071	T:Jobs/PGS	[0~99999999/1]
	These SPs count the number of jobs broken down by the number of pages in the job, regardless of which application was used.	
8072	C:Jobs/PGS	[0~99999999/1]
	These SPs count and calculate the number of copy jobs by size based on the number of pages in the job.	
8074	P:Jobs/PGS	[0~99999999/1]
	These SPs count and calculate the number of print jobs by size based on the number of pages in the job.	
8075	S:Jobs/PGS	[0~99999999/1]
	These SPs count and calculate the number of scan jobs by size based on the number of pages in the job.	
8076	L:Jobs/PGS	[0~99999999/1]
	These SPs count and calculate the number of jobs printed from within the document server mode window at the operation panel, by the number of pages in the job.	
8077	O:Jobs/PGS	[0~99999999/1]
	These SPs count and calculate the number of "Other" application jobs (Web Image Monitor, Palm 2, etc.) by size based on the number of pages in the job.	
001	1 Page	
002	2 Pages	
003	3 Pages	
004	4 Pages	
005	5 Pages	
006	6~10 Pages	
007	11~20 Pages	
008	21~50 Pages	
009	51~100 Pages	
010	101~300 Pages	
011	301~500 Pages	
012	501~700 Pages	
013	701~1000 Pages	
014	1001~ Pages	

- For example: When a copy job stored on the document server is printed in document server mode, the appropriate L: counter (SP8076-0xx) increments.
- Interrupted jobs (paper jam, etc.) are counted, even though they do not finish.
- If a job is paused and re-started, it counts as one job.
- If the finisher runs out of staples during a print and staple job, then the job is counted at the time the error occurs.
- For copy jobs (SP8072) and scan jobs (SP8075), the total is calculated by multiplying the number of sets of copies by the number of pages scanned. (One duplex page counts as 2.)
- The first test print and subsequent test prints to adjust settings are added to the number of pages of the copy job (SP8072).
- When printing the first page of a job from within the document server screen, the page is counted.

8131	T:S-to-Email Jobs	[0~9999999/1]
	These SPs count the total number of jobs scanned and attached to an e-mail, regardless of whether the document server was used or not.	
8135	S:S-to-Email Jobs	
	These SPs count the number of jobs scanned and attached to an e-mail, without storing the original on the document server.	

- These counters count jobs, not pages.
- If the job is stored on the document server, after the job is stored it is determined to be color or black-and-white then counted.
- If the job is cancelled during scanning, or if the job is cancelled while the document is waiting to be sent, the job is not counted.
- If the job is cancelled during sending, it may or may not be counted, depending on what stage of the process had been reached when the job was cancelled.
- If several jobs are combined for sending to the Scan Router, Scan-to-Email, or Scan-to-PC, or if one job is sent to more than one destination. each send is counted separately. For example, if the same document is sent by Scan-to-Email as well as Scan-to-PC, then it is counted twice (once for Scan-to-Email and once for Scan-to-PC).

8141	T:Deliv Jobs/Svr	[0~9999999/1]
	These SPs count the total number of jobs scanned and sent to a Scan Router server.	

8145	S:Deliv Jobs/Svr	
	These SPs count the number of jobs scanned in scanner mode and sent to a Scan Router server.	

- These counters count jobs, not pages.
- The jobs are counted even though the arrival and reception of the jobs at the Scan Router server cannot be confirmed.
- If even one color image is mixed with black-and-white images, then the job is counted as a "Color" job.
- If the job is cancelled during scanning, or if the job is cancelled while the document is waiting to be delivered, the job is not counted.
- If the job is cancelled during sending, it may or may not be counted, depending on what stage of the process had been reached when the job was cancelled.
- Even if several files are combined for sending, the transmission counts as one job.

8151	T:Deliv Jobs/PC	[0~9999999/1]
	These SPs count the total number of jobs scanned and sent to a folder on a PC (Scan-to-PC). Note: At the present time, SP8151 and SP8155 perform identical counts.	

8155	S:Deliv Jobs/PC	
	These SPs count the total number of jobs scanned and sent with Scan-to-PC.	

- These counters count jobs, not pages.
- If the job is cancelled during scanning, it is not counted.
- If the job is cancelled while it is waiting to be sent, the job is not counted.
- If the job is cancelled during sending, it may or may not be counted, depending on what stage of the process had been reached when the job was cancelled.
- Even if several files are combined for sending, the transmission counts as one job.

8191	T:Total Scan PGS	These SPs count the pages scanned by each application that uses the scanner to scan images. [0~9999999/1]
8192	C:Total Scan PGS	
8195	S:Total Scan PGS	
8196	L:Total Scan PGS	

- SP8191 to 8196 count the number of scanned sides of pages, not the number of physical pages.
- These counters do not count reading user stamp data, or reading color charts to adjust color.
- Previews done with a scanner driver are not counted.
- A count is done only after all images of a job have been scanned.
- Scans made in SP mode are not counted.

Examples

- If 3 B5 pages and 1 A3 page are scanned with the scanner application but not stored, the S: count is 4.
- If both sides of 3 A4 sheets are copied and stored to the document server using the Store File button in the Copy mode window, the C: count is 6 and the L: count is 6.
- If both sides of 3 A4 sheets are copied but not stored, the C: count is 6.
- If you enter document server mode then scan 6 pages, the L: count is 6.

8205	S:LSize Scan PGS	[0~9999999/1]
	These SPs count the total number of large pages input with the scanner for scan jobs only. Note: These counters are displayed in the SMC Report, and in the User Tools display..	

8211	T:Scan PGS/LS	These SPs count the number of pages scanned into the document server . [0~9999999/1] The L: counter counts the number of pages stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen
8212	C:Scan PGS/LS	
8215	S:Scan PGS/LS	
8216	L:Scan PGS/LS	

- Reading user stamp data is not counted.
- If a job is cancelled, the pages output as far as the cancellation are counted.
- If the scanner application scans and stores 3 B5 sheets and 1 A4 sheet, the S: count is 4.
- If pages are copied but not stored on the document server, these counters do not change.
- If both sides of 3 A4 sheets are copied and stored to the document server, the C: count is 6 and the L: count is 6.
- If you enter document server mode then scan 6 pages, the L: count is 6.

8221	ADF Org Feeds [0~9999999/1]	
	These SPs count the number of pages fed through the ADF for front and back side scanning.	
001	Front	Number of front sides fed for scanning: With an ADF that can scan both sides simultaneously, the Front side count is the same as the number of pages fed for either simplex or duplex scanning. With an ADF that cannot scan both sides simultaneously, the Front side count is the same as the number of pages fed for duplex front side scanning. (The front side is determined by which side the user loads face up.)
002	Back	Number of rear sides fed for scanning: With an ADF that can scan both sides simultaneously, the Back count is the same as the number of pages fed for duplex scanning. With an ADF that cannot scan both sides simultaneously, the Back count is the same as the number of pages fed for duplex rear-side scanning.

- When 1 sheet is fed for duplex scanning the Front count is 1 and the Back count is 1.
- If a jam occurs during the job, recovery processing is not counted to avoid double counting. Also, the pages are not counted if the jam occurs before the first sheet is output.

8231	Scan PGS/Mode [0~9999999/1]	
	These SPs count the number of pages scanned by each ADF mode to determine the work load on the ADF.	
001	Large Volume	Selectable. Large copy jobs that cannot be loaded in the ADF at one time.
002	SADF	Selectable. Feeding pages one by one through the ADF.
003	Mixed Size	Selectable. Select "Mixed Sizes" on the operation panel.
004	Custom Size	Selectable. Originals of non-standard size.
005	Platen	Book mode. Raising the ADF and placing the original directly on the platen.

- If the scan mode is changed during the job, for example, if the user switches from ADF to Platen mode, the count is done for the last selected mode.
- If the user selects "Mixed Sizes" for copying in the platen mode, the Mixed Size count is enabled.
- In the SADF mode if the user copies 1 page in platen mode and then copies 2 pages with SADF, the Platen count is 1 and the SADF count is 3.

8241	T:Scan PGS/Org		[0~9999999/1]				
	These SPs count the total number of scanned pages by original type for all jobs, regardless of which application was used.						
8242	C:Scan PGS/Org		[0~9999999/1]				
	These SPs count the number of pages scanned by original type for Copy jobs.						
8245	S:Scan PGS/Org		[0~9999999/1]				
	These SPs count the number of pages scanned by original type for Scan jobs.						
8246	L:Scan PGS/Org		[0~9999999/1]				
	These SPs count the number of pages scanned and stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen						
		8241	8242	8243	8245	8246	8247
001: Text		Yes	Yes	Yes	Yes	Yes	Yes
002: Text/Photo		Yes	Yes	Yes	Yes	Yes	Yes
003: Photo		Yes	Yes	Yes	Yes	Yes	Yes
004: GenCopy, Pale		Yes	Yes	No	Yes	Yes	Yes
005: Map		Yes	Yes	No	Yes	Yes	Yes
006: Normal/Detail		Yes	No	Yes	No	No	No
007: Fine/Super Fine		Yes	No	Yes	No	No	No
008: Binary		Yes	No	No	Yes	No	No
009: Grayscale		Yes	No	No	Yes	No	No
011 Other		Yes	No	Yes	No	Yes	Yes

- If the scan mode is changed during the job, for example, if the user switches from ADF to Platen mode, the count is done for the last selected mode.

8251	T:Scan PGS/ImgEdt	<p>These SPs show how many times Image Edit features have been selected at the operation panel for each application. Some examples of these editing features are:</p> <ul style="list-style-type: none"> • Erase> Border • Erase> Center • Image Repeat • Centering • Positive/Negative <p>[0~9999999/1]</p> <p>Note: The count totals the number of times the edit features have been used. A detailed breakdown of exactly which features have been used is not given.</p>
8252	C:Scan PGS/ImgEdt	
8254	P:Scan PGS/ImgEdt	
8256	L:Scan PGS/ImgEdt	
8257	O:Scan PGS/ImgEdt	

The L: counter counts the number of pages stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen.

8281	T:Scan PGS/TWAIN	<p>These SPs count the number of pages scanned using a TWAIN driver. These counters reveal how the TWAIN driver is used for delivery functions.</p> <p>[0~9999999/1]</p> <p>Note: At the present time, these counters perform identical counts.</p>
8285	S:Scan PGS/TWAIN	

8291	T:Scan PGS/Stamp	<p>These SPs count the number of pages stamped with the stamp in the ADF unit.</p> <p>[0~9999999/1]</p> <p>The L: counter counts the number of pages stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen</p>
8295	S:Scan PGS/Stamp	
8296	L:Scan PGS/Stamp	

8301	T:Scan PGS/Size	[0~9999999/1]	
	These SPs count by size the total number of pages scanned by all applications. Use these totals to compare original page size (scanning) and output (printing) page size [SP8441].		
8302	C:Scan PGS/Size	[0~9999999/1]	
	These SPs count by size the total number of pages scanned by the Copy application. Use these totals to compare original page size (scanning) and output (printing) page size [SP8442].		
8305	S:Scan PGS/Size	[0~9999999/1]	
	These SPs count by size the total number of pages scanned by the Scan application. Use these totals to compare original page size (scanning) and output page size [SP8445].		
8306	L:Scan PGS/Size	[0~9999999/1]	
	These SPs count by size the total number of pages scanned and stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen. Use these totals to compare original page size (scanning) and output page size [SP8446].		
001	A3	Yes	
002	A4	Yes	
003	A5	Yes	
004	B4	Yes	
005	B5	Yes	
006	DLT	Yes	
007	LG	Yes	
008	LT	Yes	
009	HLT	Yes	
010	Full Bleed	Yes	
254	Other (Standard)	Yes	
255	Other (Custom)	Yes	

8311	T:Scan PGS/Rez	[0~9999999/1]
	These SPs count by resolution setting the total number of pages scanned by applications that can specify resolution settings.	
8315	S:Scan PGS/Rez	[0~9999999/1]
	These SPs count by resolution setting the total number of pages scanned by applications that can specify resolution settings. Note: At the present time, SP8311 and SP8315 perform identical counts.	
001	1200dpi ~	
002	600dpi~1199dpi	
003	400dpi~599dpi	
004	200dpi~399dpi	
005	~199dpi	

- Copy resolution settings are fixed so they are not counted.

8381	T:Total PrtPGS	<p>These SPs count the number of pages printed by the customer. The counter for the application used for storing the pages increments. [0~9999999/1]</p> <p>The L: counter counts the number of pages stored from within the document server mode screen at the operation panel. Pages stored with the Store File button from within the Copy mode screen go to the C: counter.</p>
8382	C:Total PrtPGS	
8384	P:Total PrtPGS	
8385	S:Total PrtPGS	
8386	L:Total PrtPGS	
8387	O:Total PrtPGS	

- When the A3/DLT double count function is switched on with SP5104, 1 A3/DLT page is counted as 2.
- When several documents are merged for a print job, the number of pages stored are counted for the application that stored them.
- These counters are used primarily to calculate charges on use of the machine, so the following pages are not counted as printed pages:
 - Blank pages in a duplex printing job.
 - Blank pages inserted as document covers, chapter title sheets, and slip sheets.
 - Reports printed to confirm counts.
 - All reports done in the service mode (service summaries, engine maintenance reports, etc.)
 - Test prints for machine image adjustment.
 - Error notification reports.
 - Partially printed pages as the result of a copier jam.

8391	LSize PrtPGS	[0~9999999/1]
	<p>These SPs count pages printed on paper sizes A3/DLT and larger.</p> <p>Note: In addition to being displayed in the SMC Report, these counters are also displayed in the User Tools display on the copy machine.</p>	

8401	T:PrtPGS/LS	<p>These SPs count the number of pages printed from the document server. The counter for the application used to print the pages is incremented.</p> <p>The L: counter counts the number of jobs stored from within the document server mode screen at the operation panel. [0~9999999/1]</p>
8402	C:PrtPGS/LS	
8404	P:PrtPGS/LS	
8405	S:PrtPGS/LS	
8406	L:PrtPGS/LS	

- Print jobs done with Web Image Monitor and Desk Top Binder are added to the L: count.

8411	Prints/Duplex	This SP counts the amount of paper (front/back counted as 1 page) used for duplex printing. Last pages printed only on one side are not counted. [0~9999999/1]
-------------	---------------	---

8421	T:PrtPGS/Dup Comb	[0~9999999/1]						
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing. This is the total for all applications.							
8422	C:PrtPGS/Dup Comb	[0~9999999/1]						
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the copier application.							
8424	P:PrtPGS/Dup Comb	[0~9999999/1]						
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the printer application.							
8425	S:PrtPGS/Dup Comb	[0~9999999/1]						
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the scanner application.							
8426	L:PrtPGS/Dup Comb	[0~9999999/1]						
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing from within the document server mode window at the operation panel.							
8427	O:PrtPGS/Dup Comb	[0~9999999/1]						
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by Other applications							
		8421	8422	8423	8424	8425	8426	8427
001	Simplex> Duplex	Yes	Yes	Yes	Yes	Yes	Yes	Yes
002	Duplex> Duplex	Yes	Yes	No	No	No	No	Yes
003	Book> Duplex	Yes	Yes	No	No	No	No	Yes
004	Simplex Combine	Yes	Yes	Yes	Yes	Yes	Yes	Yes
005	Duplex Combine	Yes	Yes	Yes	Yes	Yes	Yes	Yes
006	2> (2 up, 1 side	Yes	Yes	Yes	Yes	Yes	Yes	Yes
007	4> (4 up, 1 side)	Yes	Yes	Yes	Yes	Yes	Yes	Yes
008	6> (6 up, 1 side)	Yes	No	No	Yes	No	No	Yes
009	8> (8 up, 1 side)	Yes	Yes	Yes	Yes	Yes	Yes	Yes
012	Booklet	Yes	Yes	Yes	Yes	Yes	Yes	Yes
013	Magazine	Yes	Yes	Yes	Yes	Yes	Yes	Yes

- These counts (SP8421 to SP8427) are especially useful for customers who need to improve their compliance with ISO standards for the reduction of paper consumption.
- Pages that are only partially printed with the n-Up functions are counted as 1 page.

Here is a summary of how the counters work for Booklet and Magazine modes:

Booklet	
Original Pages	Count
1	1
2	2
3	2
4	2
5	3
6	4
7	4
8	4

Magazine	
Original Pages	Count
1	1
2	2
3	2
4	2
5	4
6	4
7	4
8	4

8431	T:PrtPGS/ImgEdt	[0~9999999/1]
	These SPs count the total number of pages output with the three features below, regardless of which application was used.	
8432	C:PrtPGS/ImgEdt	[0~9999999/1]
	These SPs count the total number of pages output with the three features below with the copy application.	
8434	P:PrtPGS/ImgEdt	[0~9999999/1]
	These SPs count the total number of pages output with the three features below with the print application.	
8436	L:PrtPGS/ImgEdt	[0~9999999/1]
	These SPs count the total number of pages output from within the document server mode window at the operation panel with the three features below.	
8437	O:PrtPGS/ImgEdt	[0~9999999/1]
	These SPs count the total number of pages output with the three features below with Other applications.	
001	Cover/Slip Sheet	Total number of covers or slip sheets inserted. The count for a cover printed on both sides counts 2.
002	Series/Book	The number of pages printed in series (one side) or printed as a book with booklet right/left pagination.
003	User Stamp	The number of pages printed where stamps were applied, including page numbering and date stamping.

8441	T:PrtPGS/Ppr Size		[0~9999999/1]					
	These SPs count by print paper size the number of pages printed by all applications.							
8442	C:PrtPGS/Ppr Size		[0~9999999/1]					
	These SPs count by print paper size the number of pages printed by the copy application.							
8444	P:PrtPGS/Ppr Size		[0~9999999/1]					
	These SPs count by print paper size the number of pages printed by the printer application.							
8445	S:PrtPGS/Ppr Size		[0~9999999/1]					
	These SPs count by print paper size the number of pages printed by the scanner application.							
8446	L:PrtPGS/Ppr Size		[0~9999999/1]					
	These SPs count by print paper size the number of pages printed from within the document server mode window at the operation panel.							
8447	O:PrtPGS/Ppr Size		[0~9999999/1]					
	These SPs count by print paper size the number of pages printed by Other applications.							
		8441	8442	8443	8444	8445	8446	8447
001	A3	Yes	Yes	Yes	Yes	Yes	Yes	Yes
002	A4	Yes	Yes	Yes	Yes	Yes	Yes	Yes
003	A5	Yes	Yes	Yes	Yes	Yes	Yes	Yes
004	B4	Yes	Yes	Yes	Yes	Yes	Yes	Yes
005	B5	Yes	Yes	Yes	Yes	Yes	Yes	Yes
006	DLT	Yes	Yes	Yes	Yes	Yes	Yes	Yes
007	LG	Yes	Yes	Yes	Yes	Yes	Yes	Yes
008	LT	Yes	Yes	Yes	Yes	Yes	Yes	Yes
009	HLT	Yes	Yes	Yes	Yes	Yes	Yes	Yes
010	Full Bleed	Yes	Yes	Yes	Yes	Yes	Yes	Yes
254	Other (Standard)	Yes	Yes	Yes	Yes	Yes	Yes	Yes
255	Other (Custom)	Yes	Yes	Yes	Yes	Yes	Yes	Yes

- These counters do not distinguish between LEF and SEF.

8451	PrtPGS/Ppr Tray	[0~99999999/1]
	These SPs count the number of sheets fed from each paper feed station.	
001	Bypass	Bypass Tray
002	Tray 1	Copier
003	Tray 2	Copier
004	Tray 3	Paper Tray Unit (Option)
005	Tray 4	Paper Tray Unit (Option)
006	Tray 5	LCT (Option)
007	Tray 6	Currently not used.
008	Tray 7	Currently not used.
009	Tray 8	Currently not used.
010	Tray 9	Currently not used.

8461	T:PrtPGS/Ppr Type	[0~99999999/1]
	These SPs count by paper type the number pages printed by all applications.	
	<ul style="list-style-type: none"> • These counters are not the same as the PM counter. The PM counter is based on feed timing to accurately measure the service life of the feed rollers. However, these counts are based on output timing. • Blank sheets (covers, chapter covers, slip sheets) are also counted. • During duplex printing, pages printed on both sides count as 1, and a page printed on one side counts as 1. 	
8462	C:PrtPGS/Ppr Type	[0~99999999/1]
	These SPs count by paper type the number pages printed by the copy application.	
8464	P:PrtPGS/Ppr Type	[0~99999999/1]
	These SPs count by paper type the number pages printed by the printer application.	
8466	L:PrtPGS/Ppr Type	[0~99999999/1]
	These SPs count by paper type the number pages printed from within the document server mode window at the operation panel.	
001	Normal	
002	Recycled	
003	Special	
004	Thick	
005	Normal (Back)	
006	Thick (Back)	
007	OHP	
008	Other	

8471	PrtPGS/Mag	[0~9999999/1]
	These SPs count by magnification rate the number of pages printed.	
001	~49%	
002	50%~99%	
003	100%	
004	101%~200%	
005	201% ~	

- Counts are done for magnification adjusted for pages, not only on the operation panel but performed remotely with an external network application capable of performing magnification adjustment as well.
- Magnification adjustments done with printer drivers with PC applications such as Excel are also counted.
- Magnification adjustments done for adjustments after they have been stored on the document server are not counted.
- Magnification adjustments performed automatically during Auto Reduce/Enlarge copying are counted.
- The magnification rates of blank cover sheets, slip sheets, etc. are automatically assigned a rate of 100%.

8481	T:PrtPGS/TonSave
8484	P:PrtPGS/TonSave
	These SPs count the number of pages printed with the Toner Save feature switched on. [0~9999999/1] Note: These SPs return the same results as this SP is limited to the Print application.

8511	T:PrtPGS/Emul [0~99999999/1]	
	These SPs count by printer emulation mode the total number of pages printed.	
8514	P:PrtPGS/Emul [0~99999999/1]	
	These SPs count by printer emulation mode the total number of pages printed.	
001	RPCS	
002	RPDL	
003	PS3	
004	R98	
005	R16	
006	GL/GL2	
007	R55	
008	RTIFF	
009	PDF	
010	PCL5e/5c	
011	PCL XL	
012	IPDL-C	
013	BM-Links	Japan Only
014	Other	

- SP8511 and SP8514 return the same results as they are both limited to the Print application.
- Print jobs output to the document server are not counted.

8521	T:PrtPGS/FIN	[0~9999999/1]
	These SPs count by finishing mode the total number of pages printed by all applications.	
8522	C:PrtPGS/FIN	[0~9999999/1]
	These SPs count by finishing mode the total number of pages printed by the Copy application.	
8524	P:PrtPGS/FIN	[0~9999999/1]
	These SPs count by finishing mode the total number of pages printed by the Print application.	
8525	S:PrtPGS/FIN	[0~9999999/1]
	These SPs count by finishing mode the total number of pages printed by the Scanner application.	
8526	L:PrtPGS/FIN	[0~9999999/1]
	These SPs count by finishing mode the total number of pages printed from within the document server mode window at the operation panel.	
001	Sort	
002	Stack	
003	Staple	
004	Booklet	
005	Z-Fold	
006	Punch	
007	Other	

NOTE: 1) If stapling is selected for finishing and the stack is too large for stapling, the unstapled pages are still counted.
 2) The counts for staple finishing are based on output to the staple tray, so jam recoveries are counted.

8531	Staples	This SP counts the amount of staples used by the machine. [0~9999999/1]
-------------	---------	--

8541	T:GPC Counter [0~99999999/1]	
	These SPs count and display the total C/O (Copies/Original) and P/O (Prints/Original) for documents read and output from the document server when making 11 or more copies and prints.	
001	GPC Counter	
002	Lease GPC Counter	
8542	C:GPC Counter [0~99999999/1]	
	These SPs count and display the total C/O (Copies/Original) for documents read and output from the document server when making 11 or more copies.	
001	GPC Counter	
002	Lease GPC Counter	
8544	P:GPC Counter [0~99999999/1]	
	These SPs count and display the total P/O (Prints/Original) for documents read and output from the document server when making 11 or more prints.	
001	GPC Counter	
002	Lease GPC Counter	

- For example, if you make 15 prints of a 3 page original, for a total of 45 sheets, then the P counter would be 15 (5 copies counted from 11 to 15 x 3 pages). No count is returned for 1~10 prints of an original.
- Either the GPC counter or the Lease GPC counter will be used, depending on the contract set up for the machine.
- **Note:** In addition to being displayed in the SMC Report, these counters are also displayed in the User Tools display on the copy machine.

8581	T:Counter [0~99999999/1]	
	These SPs count the total output broken down by color output, regardless of the application used. In addition to being displayed in the SMC Report, these counters are also displayed in the User Tools display on the copy machine. Note: This SP is expanded for color MFP and color LP machines. For this machine, the count is done for black only.	

8591	O:Counter [0~99999999/1]	
	These SPs count the totals for A3/DLT paper use, number of duplex pages printed, and the number of staples used. These totals are for Other (O☺) applications only.	
001	A3/DLT	
002	Duplex	
003	Staple	

8651	T:S-to-Email PGS	[0~9999999/1]
	These SPs count by color mode the total number of pages attached to an e-mail for both the Scan and document server applications. Note: This SP is expanded for color MFP and color LP machines. For this machine, the count is done for black only.	
8655	S:S-to-Email PGS	[0~9999999/1]
	These SPs count by color mode the total number of pages attached to an e-mail for the Scan application only. Note: This SP is expanded for color MFP and color LP machines. For this machine, the count is done for black only.	

- NOTE:** 1) The count for B/W and Color pages is done after the document is stored on the HDD. If the job is cancelled before it is stored, the pages are not counted.
- 2) If Scan-to-Email is used to send a 10-page document to 5 addresses, the count is 10 (the pages are sent to the same SMTP server together).
- 3) If Scan-to-PC is used to send a 10-page document to 5 folders, the count is 50 (the document is sent to each destination of the SMB/FTP server).
- 4) Due to restrictions on some devices, if Scan-to-Email is used to send a 10-page document to a large number of destinations, the count may be divided and counted separately. For example, if a 10-page document is sent to 200 addresses, the count is 10 for the first 100 destinations and the count is also 10 for the second 100 destinations, for a total of 20.).

8661	T:Deliv PGS/Svr	[0~9999999/1]
	These SPs count by color mode the total number of pages sent to a Scan Router server by both Scan and LS applications. Note: This SP is expanded for color MFP and color LP machines. For this machine, the count is done for black only.	
8665	S:Deliv PGS/Svr	[0~9999999/1]
	These SPs count by color mode the total number of pages sent to a Scan Router server by the Scan application. Note: This SP is expanded for color MFP and color LP machines. For this machine, the count is done for black only.	

- NOTE:** 1) The B/W and Color counts are done after the document is stored on the HDD of the Scan Router server.
- 2) If the job is canceled before storage on the Scan Router server finishes, the counts are not done.
- 3) The count is executed even if regardless of confirmation of the arrival at the Scan Router server.

8671	T:Deliv PGS/PC	[0~99999999/1]
	These SPs count by color mode the total number of pages sent to a folder on a PC (Scan-to-PC) with the Scan and LS applications. Note: This SP is expanded for color MFP and color LP machines. For this machine, the count is done for black only.	
8675	S:Deliv PGS/PC	[0~99999999/1]
	These SPs count by color mode the total number of pages sent with Scan-to-PC with the Scan application. Note: This SP is expanded for color MFP and color LP machines. For this machine, the count is done for black only.	

8691	T:TX PGS/LS	These SPs count the number of pages sent from the document server. The counter for the application that was used to store the pages is incremented. [0~99999999/1] The L: counter counts the number of pages stored from within the document server mode screen at the operation panel. Pages stored with the Store File button from within the Copy mode screen go to the C: counter.
8692	C:TX PGS/LS	
8694	P:TX PGS/LS	
8695	S:TX PGS/LS	
8696	L:TX PGS/LS	

- NOTE:** 1) Print jobs done with Web Image Monitor and Desk Top Binder are added to the count.
- 2) If several documents are merged for sending, the number of pages stored are counted for the application that stored them.

8701	TX PGS/Port	
	These SPs count the number of pages sent by the physical port used to send them. For example, if a 3-page original is sent to 4 destinations via ISDN G4, the count for ISDN (G3, G4) is 12.	
001	PSTN-1	
002	PSTN-2	
003	PSTN-3	
004	ISDN (G3,G4)	
005	Network	

8741	RX PGS/Port	
	These SPs count the number of pages received by the physical port used to receive them.	
001	PSTN-1	
002	PSTN-2	
003	PSTN-3	
004	ISDN (G3,G4)	
005	Network	

8771	Dev Counter	[0~9999999/1]
	<p>These SPs count the frequency of use (number of rotations of the development rollers) for black and other color toners.</p> <p>Note: For machines that do not support color, the Black toner count is the same as the Total count.</p>	

8791	LS Memory Remain	<p>This SP displays the percent of space available on the document server for storing documents.</p> <p>[0~100/1]</p>
-------------	------------------	---

8801	Toner Remain	[0~100/1]
	<p>This SP displays the percent of toner remaining for each color. This SP allows the user to check the toner supply at any time.</p> <p>Note:</p> <ul style="list-style-type: none"> • This precise method of measuring remaining toner supply (1% steps) is better than other machines in the market that can only measure in increments of 10 (10% steps). • This SP is expanded for color MFP and color LP machines. For this machine, the count is done for black only. 	

8941	Machine Status	[0~9999999/1]
	<p>These SPs count the amount of time the machine spends in each operation mode. These SPs are useful for customers who need to investigate machine operation for improvement in their compliance with ISO Standards.</p>	
001	Operation Time	Engine operation time. Does not include time while controller is saving data to HDD (while engine is not operating).
002	Standby Time	Engine not operating. Includes time while controller saves data to HDD. Does not include time spent in Energy Save, Low Power, or Off modes.
003	Energy Save Time	Includes time while the machine is performing background printing.
004	Low Power Time	Includes time in Energy Save mode with Engine on. Includes time while machine is performing background printing.
005	Off Mode Time	Includes time while machine is performing background printing. Does not include time machine remains powered off with the power switches.
006	Down Time/SC	Total down time due to SC errors.
007	Down Time/PrtJam	Total down time due to paper jams during printing.
008	Down Time/OrgJam	Total down time due to original jams during scanning.
009	Down Time/TonEnd	Total down time due to toner end.

8951	AddBook Register		
	These SPs count the number of events when the machine manages data registration.		
001	User Code	User code registrations.	[0~9999999/1]
002	Mail Address	Mail address registrations.	
004	Group	Group destination registrations.	
005	Transfer Request	Fax relay destination registrations for relay TX.	
007	Copy Program	Copy application registrations with the Program (job settings) feature.	[0~255/1]
009	Printer Program	Printer application registrations with the Program (job settings) feature.	
010	Scanner Program	Scanner application registrations with the Program (job settings) feature.	

5.5.3 PRINTER SERVICE TABLE



1001	Bit Switch Settings	
001	Bit SW 1	Note: These bit switches are not used at this time.
002	Bit SW 2	
003	Bit SW 3	
004	Bit SW 4	
005	Bit SW 5	
006	Bit SW 6	
007	Bit SW 7	
008	Bit SW 8	



1003	Clear Setting	
001	Initialization Printer System	Initializes the settings in the printer features of UP mode.
002	CSS Counter Reset	Japan only
003	Delete Program	Japan only

1004	Print Summary	
002		Prints the printer summary sheet.

1005	Display Version	Displays the version of the printer firmware.
-------------	-----------------	---

1006	Sample/Proof Print	
	This SP disables/enables use of the document server. [0~1/0/1] 0: Enabled. Document server can be used. 1: Disabled. Document server cannot be used.	



7910	PDL Number Information	
	Returns the character string for the PDL version.	

7911	PDL Version Information	
	Returns the character string for the PDL version.	

5.5.4 SCANNER SERVICE TABLE

SP	Number/Name		Function/[Setting]
1001	001	Model Name	Displays the model name.
	002	Scanner Firmware Version	Displays the scanner firmware version.
	003	Scanner Firmware Number	Displays the firmware's part number.
	004	Detail Model Name	Displays the detail model name.
1002	Error Log Display		Displays the error log data.
1003*	FTP Port Number		Changes the FTP port number. <i>After changing this value, do the following:</i> 4. Run the Registry Editor 5. Access /HKEY_LOCAL_MACHINE/SOFTWARE/ Ricoh/NetworkScanner 6. Change the value of 'PortNo' to this SP mode's value [0~65535/1]
1004*	Compression Type		Selects the compression type for binary picture processing. [1~3/1] 1: MH 2: MR 3: MMR
1005*	Erase Margin		Creates an erase margin for all edges of the scanned image. <i>If the machine has scanned the edge of the original, create a margin.</i> [0~5/1 mm]
1006*	Auto Reset Timer		Adjusts the auto reset timer for the scanner function. <i>If this is "0", the auto reset function is disabled.</i> [0,10~99/1 s]
1009*	Remote Scan Disable		Enables/Disables the TWAIN scanner driver. [0~1/1] 0: Disabled 1: Enabled (B140)

2002	Text Mode		
	001*	MTF Filter Coefficient (Text/Binary/Main scan)	Selects the MTF filter coefficient in the main scan direction for Text mode. <i>Select a higher number for a stronger filter.</i> <i>If this is "0", the MTF filter is not applied.</i> [0~15/1]
	002*	MTF Filter Coefficient (Text/Binary/Sub scan)	As above, for sub scan [0~13/1]
	003*	MTF Filter Strength (Text/Binary/Main scan)	Selects the MTF filter strength in the main scan direction for Text mode. <i>Select a higher number for a stronger filter.</i> [0~7/1]
	004*	MTF Filter Strength (Text/Binary/Sub scan)	As above, for sub scan [0~7/1]
	005*	Smoothing Filter (Text/Binary)	Selects the smoothing pattern for Text mode when using binary picture processing mode. <i>A larger value could cause moiré to appear in the image.</i> [0~7/1]
	006*	Scanner Gamma (Text/Binary)	Selects the scanner gamma type for Text mode when using binary picture processing mode. [0~6/1]
	007*	Brightness – Notch 7 (Text/Binary)	The following SPs adjust the image density (brightness, contrast, and thresholds) for each image density level (from 7 to 1) for Text mode when using binary picture processing mode. The settings are reflected in the gamma table. [0~255/1]
	008*	Contrast – Notch 7 (Text/Binary)	[0~255/1]
	009*	Threshold Level – Notch 7 (Text/Binary)	[0~255/1]
	010*	Brightness – Notch 6 (Text/Binary)	[0~255/1]
	011*	Contrast – Notch 6 (Text/Binary)	[0~255/1]
	012*	Threshold Level – Notch 6 (Text/Binary)	[0~255/1]
	013*	Brightness – Notch 5 (Text/Binary)	[0~255/1]
	014	Density Level 5: Contrast	[1~255/1]
	015	Density Level 5: Threshold	[1~255/1]
	016	Density Level 4: Intermediate Brightness	[1~255/1]
	017	Density Level 4: Intermediate Contrast	[1~255/1]

018	Density Level 4: Intermediate Threshold	[1~255/1]
019	Density Level 3: Brightness	[1~255/1]
020	Density Level 3: Contrast	[1~255/1]
021	Density Level 3: Threshold	[1~255/1]
022	Density Level 2: Brightness	[1~255/1]
023	Density Level 2: Contrast	[1~255/1]
024	Density Level 2: Threshold	[1~255/1]
025	Density Level 1 Dark Brightness	[1~255/1]
026	Density Level 1 Dark: Contrast	[1~255/1]
027	Density Level 1 Dark: Threshold	[1~255/1]
028	Independent Dot Erase	[0x00~0x07/1]
029	Unevenness Correction	[0x00~0x07/1]
030	Notch No. 1 (Darker): Contrast: 1-255	[1~255/1] (B140)
031	Notch No. 1 (Darker): Contrast: 1-255	[1~255/1] (B140)

2003	Text/Photo Mode		
	001	Main Scan MTF Level	Sets the MTF coefficient for the main scan direction. [0x00~0xFF/0x01]
	002	Sub Scan MTF Level	Sets the MTF coefficient for the sub scan direction. [0x00~0xFF/0x01]
	003	Main Scan MTF Strength	Sets the MTF strength for the main scan direction. [0~0x07/0x01]
	004	Sub Scan MTF Strength	Sets the MTF strength for the sub scan direction. [0~0x07/0x01]
	005	Smoothing Level	Sets the smoothing coefficient. [0~0xFF/0x01]
	006	Gamma Selection	Selects the gamma setting. [0x00~0x06/0x01] 0:Normal, 1:Smooth 2:Distinct 3:Sharp 4:Text 5:Photo.
	007	Density Level 7 Light : Brightness	The following SPs adjust the image density (brightness, contrast, and thresholds) for each image density level (from 7 to 1) for Text/Photo mode when using the delivery scanner mode. The settings are reflected in the gamma table. [1~255/1]
	008	Density Level 7 Light: Contrast	[1~255/1]
	009	Density Level 7 Light: Threshold	[1~255/1]
	010	Density Level 6: Brightness	[1~255/1]
	011	Density Level 6: Contrast	[1~255/1]
	012	Density Level 6: Threshold	[1~255/1]
	013	Density Level 5: Brightness	[1~255/1]
	014	Density Level 5: Contrast	[1~255/1]
	015	Density Level 5: Threshold	[1~255/1]
	016	Density Level 4 Intermediate: Brightness	[1~255/1]
	017	Density Level 4 Intermediate: Contrast	[1~255/1]

018	Density Level 4 Intermediate: Threshold	[1~255/1]
019	Density Level 3: Brightness	[1~255/1]
020	Density Level 3: Contrast	[1~255/1]
021	Density Level 3: Threshold	[1~255/1]
022	Density Level 2: Brightness	[1~255/1]
023	Density Level 2: Contrast	[1~255/1]
024	Density Level 2: Threshold	[1~255/1]
024	Density Level 1 Dark: Brightness	[1~255/1]
026	Density Level 1 Dark: Contrast	[1~255/1]
027	Density Level 1 Dark: Threshold	[1~255/1]
028	Notch No. 2: Threshold: 1-255	[1~255/1] (B140)
029	Notch No. 1: Brightness: 1-255	[1~255/1] (B140)
030	Notch No. 1: Threshold: 1-255	[1~255/1] (B140)
031	Notch No. 1: Contrast: 1-255	[1~255/1] (B140)

2004	Photo Mode		
	001	Main Scan MTF Level	Sets the MTF coefficient for the main scan direction. [0x00~0xFF/0x01]
	002	Sub Scan MTF Level	Sets the MTF coefficient for the sub scan direction. [0x00~0xFF/0x01]
	003	Main Scan MTF Strength	Sets the MTF strength for the main scan direction. [0~0x07/0x01]
	004	Sub Scan MTF Strength	Sets the MTF strength for the sub scan direction. [0~0x07/0x01]
	005	Smoothing Level	Sets the smoothing coefficient. [0~0x07/0x01]
	006	Gamma Selection	Selects the gamma setting. [0x00~0x06/0x01] 0:Normal 1:Smooth 2:Distinct 3:Sharp 4:Text 5:Photo.
	007	Dither Pattern	[0x01/0x0x]
	008	Density Level 7 Light: Brightness	The following SPs adjust the image density (brightness, contrast, and thresholds) for each image density level (from 7 to 1) for Photo mode when using the delivery scanner mode. The settings are reflected in the gamma table. [1~255/1]
	009	Density Level 7 Light: Contrast	[1~255/1]
	010	Density Level 7 Light: Threshold	[1~255/1]
	011	Density Level 6: Brightness	[1~255/1]
	012	Density Level 6: Contrast	[1~255/1]
	013	Density Level 6: Threshold	[1~255/1]
	014	Density Level 5: Brightness	[1~255/1]
	015	Density Level 5: Contrast	[1~255/1]
	016	Density Level 5: Threshold	[1~255/1]
	017	Density Level 4 Intermediate: Brightness	[1~255/1]
	018	Density Level 4 Intermediate: Contrast	[1~255/1]

019	Density Level 4 Intermediate: Threshold	[1~255/1]
020	Density Level 3: Brightness	[1~255/1]
021	Density Level 3: Contrast	[1~255/1]
022	Density Level 3: Threshold	[1~255/1]
023	Density Level 2: Brightness	[1~255/1]
024	Density Level 2: Contrast	[1~255/1]
025	Density Level 2: Threshold	[1~255/1]
026	Density Level 1 Dark: Brightness	[1~255/1]
027	Density Level 1 Dark: Contrast	[1~255/1]
028	Density Level 1 Dark: Threshold	[1~255/1]
029	Notch No. 1 (Darker): Brightness: 1-255	[1~255/1] (B140)
030	Notch No. 1 (Darker): Contrast: 1-255	[1~255/1] (B140)
031	Notch No. 1 (Darker): Threshold: 1-255	[1~255/1] (B140)

2005	Grayscale Mode		
	001	Main Scan MTF Level	Sets the MTF coefficient for the main scan direction. [0x00~0xFF/0x01]
	002	Sub Scan MTF Level	Sets the MTF coefficient for the sub scan direction. [0x00~0xFF/0x01]
	003	Main Scan MTF Strength	Sets the MTF strength for the main scan direction. [0~0x07/0x01]
	004	Sub Scan MTF Strength	Sets the MTF strength for the sub scan direction. [0~0x07/0x01]
	005	Smoothing Level	Sets the smoothing coefficient. [0~0xFF/0x01]
	006	Gamma Selection	Selects the gamma setting. [0x00~0x06/0x01] 0:Normal 1:Smooth 2:Distinct 3:Sharp 4:Text 5:Photo
	007	Density Level 7 Light : Brightness	The following SPs adjust the image density (brightness, contrast, and thresholds) for each image density level (from 7 to 1) for grayscale mode when using the delivery scanner mode. The settings are reflected in the gamma table. [1~255/1]
	008	Density Level 7 Light: Contrast	[1~255/1]
	009	Density Level 7 Light: Threshold	[1~255/1]
	010	Density Level 6: Brightness	[1~255/1]
	011	Density Level 6: Contrast	[1~255/1]
	012	Density Level 6: Threshold	[1~255/1]
	013	Density Level 5: Brightness	[1~255/1]
	014	Density Level 5: Contrast	[1~255/1]
	015	Density Level 5: Threshold	[1~255/1]
	016	Density Level 4 Intermediate: Brightness	[1~255/1]
	017	Density Level 4 Intermediate: Contrast	[1~255/1]

	018	Density Level 4 Intermediate: Threshold	[1~255/1]
	019	Density Level 3: Brightness	[1~255/1]
	020	Density Level 3: Contrast	[1~255/1]
	021	Density Level 3: Threshold	[1~255/1]
	022	Density Level 2: Brightness	[1~255/1]
	023	Density Level 2: Contrast	[1~255/1]
	024	Density Level 2: Threshold	[1~255/1]
	025	Density Level 1 Dark: Brightness	[1~255/1]
	026	Density Level 1 Dark: Contrast	[1~255/1]
	027	Density Level 1 Dark: Threshold	[1~255/1]

2006	Grayscale Compression		
	001	Standard	Sets the rate of compression when Standard is selected for handling JPEG files. [5~95/1] 5: High compression (smaller file) 95: Low compression (larger file)
	002	High Quality	Sets the rate of compression when High is selected for handling JPEG files. [5~95/1] 5: High compression (smaller file) 95: Low compression (larger file)
	003	Low Quality	Sets the rate of compression when JPEG files.Low is selected for handling [5~95/1] 5: High compression (smaller file) 95: Low compression (larger file)
	004	MTF Filter Strength (Sub Scan)	[1~7/1] (B140)
	007	Smoothing Filter	[1~7/1] (B140)
	008	Scanner Gamma	[0~3/1] (B140)
	011	Notch No. 7 (Lighter) Brightness: 1-255	[1~255/1] (B140)
	012	Notch No. 7 (Lighter) Brightness: 1-255	[1~255/1] (B140)
	013	Notch No. 7 (Lighter) Threshold: 1-255	[1~255/1] (B140)
	014	Notch No. 6: Brightness: 1-255	[1~255/1] (B140)
	015	Notch No. 6: Contrast: 1-255	[1~255/1] (B140)
	016	Notch No. 6: Threshold: 1-255	[1~255/1] (B140)
	017	Notch No. 5: Brightness: 1-255	[1~255/1] (B140)
	018	Notch No. 5: Contrast: 1-255	[1~255/1] (B140)
	019	Notch No. 5: Threshold: 1-255	[1~255/1] (B140)
	020	Notch No. 4 (Middle): Brightness: 1-255	[1~255/1] (B140)
	021	Notch No. 4 (Middle): Contrast: 1-255	[1~255/1] (B140)
	022	Notch No. 4 (Middle): Threshold: 1-255	[1~255/1] (B140)
	023	Notch No. 3: Brightness: 1-255	[1~255/1] (B140)

024	Notch No. 3: Contrast: 1-255	[1~255/1] (B140)
025	Notch No. 3: Threshold: 1- 255	[1~255/1] (B140)
026	Notch No. 2: Brightness: 1-255	[1~255/1] (B140)
027	Notch No. 2: Contrast: 1-255	[1~255/1] (B140)
028	Notch No. 2: Threshold: 1- 255	[1~255/1] (B140)
029	Notch No. 1 (Darker): Brightness 1-255	[1~255/1] (B140)
030	Notch No. 1 (Darker): Contrast 1-255	[1~255/1] (B140)
031	Notch No. 1 (Darker): Threshold 1-255	[1~255/1] (B140)

2021	Compression Ratio of Grayscale (B140)		
	001	Compression Ratio (Normal Image)	[5-95/1]
	002	Compression Ratio (High Quality Image)	
	003	Compression Ratio (Low Quality Image)	
	004	Compression Ratio (HighLv2 Quality Image)	
	005	Compression Ratio (LowLv2 Quality Image)	

8002	File Server		
	001	IP Address	Sets the IP Address for the Scan Router server. The settings below will be displayed on the System Settings tab.
	002	Retry Interval	Sets the time to wait between retries when connection fails. [60~90/1 s]
8003	Delivery Server Retries		
	001	Number of Retries	Determines the number of retries when connection fails. [0~99/1]
	002	Capture Server IP Address	Sets the IP Address for the NOA Capture Server (address for E-Cabinet). Make sure this address is not the same as the IP address.
8004	Transmission Error Display Time		A one-line error message when a transmission error occurs on the file server. This setting determines how long this one-line message is displayed. [0~999/1 s]

5.6 INPUT/OUTPUT CHECK

5.6.1 COPIER INPUT CHECK: SP5803

This procedure allows you to test sensors and other components of the machine. After you select one of the categories below by number, you will see a small 8-bit table with the number of the bit and its current setting (0 or 1). The bits are numbered 0 to 7, reading right to left.

1. Enter the SP mode and select SP5803.
2. Enter the number (1 to 13) for the item that you want to check. A small box will be displayed on the SP mode screen with a series of 0's and 1's. The meaning of the display is as follows.

Bit	7 6 5 4 3 2 1 0
Setting	1 1 0 0 1 0 1 0

3. Check the status of each item against the corresponding bit numbers listed in the table below.

1. Paper Feed 1			
Bit	Description	Reading	
		0	1
7	Rear Side Fence Close Sensor	Activated	Deactivated
6	Rear Side Fence Open Sensor	Activated	Deactivated
5	Front Side Fence Close Sensor	Activated	Deactivated
4	Front Side Fence Open Sensor	Activated	Deactivated
3	Near End Sensor	(see tables below)	
2	Paper Height 1 Sensor		
1	Paper Height 2 Sensor		
0	Paper Height 3 Sensor		

2. Paper Feed 2		
Bit	Description	Reading
		0 0
7	2nd Paper Size Switch	See Paper Size Tables Below
6	2nd Paper Size Switch	
5	2nd Paper Size Switch	
4	2nd Paper Size Switch	
3	2nd Paper Size Switch	
2	Not used	
1	Not used	
0	Not used	

	1500 sheets	1000 sheets			400 sheets			70 sheets
bit-3	0	0	0	0	0	0	1	1
bit-2	0	0	0	1	1	1	1	0
bit-1	0	0	1	1	1	0	0	0
bit-0	0	1	1	0	0	0	0	0

3. Paper Feed 3			
Bit	Description	Reading	
		0	0
7	3rd Paper Size Switch	See Paper Size Tables Below.	
6	3rd Paper Size Switch		
5	3rd Paper Size Switch		
4	3rd Paper Size Switch		
3	3rd Paper Size Switch		
2	Not used		
1	Not used		
0	Not used		

Universal Tray Size Detection – N.A. models only

Paper Size	Switch Setting (LOW = pressed)					Panel Display
11" x 17"	LOW	HIGH	HIGH	HIGH	HIGH	11" x 17" SEF
8 1/2" x 14"	LOW	LOW	HIGH	HIGH	HIGH	8 1/2" x 14" SEF
8 1/2" x 11"	HIGH	LOW	LOW	HIGH	HIGH	8 1/2" x 11" SEF
11" x 8 1/2"	LOW	HIGH	LOW	LOW	HIGH	8 1/2" x 11" LEF
5 1/2" x 8 1/2"	LOW	LOW	HIGH	LOW	LOW	5 1/2" x 8 1/2" SEF
8 1/2" x 5 1/2"	LOW	LOW	LOW	HIGH	LOW	8 1/2" x 5 1/2" LEF
8" x 10 1/2"	LOW	LOW	LOW	LOW	HIGH	8" x 10 1/2" SEF
7 1/4" x 10 1/2"	HIGH	LOW	LOW	LOW	LOW	7 1/4" x 10 1/2" SEF
8" x 13"	HIGH	HIGH	LOW	LOW	LOW	8" x 13" SEF
*	HIGH	HIGH	HIGH	HIGH	LOW	(size set in User Tools)

Service
Tables

Universal Tray Size Detection – EU/ASIA models

Paper Size	Switch Setting (LOW = pressed)					Panel Display
A3 SEF	LOW	HIGH	HIGH	HIGH	HIGH	A3 SEF
8 1/4" x 13"	LOW	LOW	HIGH	HIGH	HIGH	8 1/4" x 13" SEF
A4 SEF	HIGH	LOW	LOW	HIGH	HIGH	A4 SEF
A4 LEF	LOW	HIGH	LOW	LOW	HIGH	A4 LEF
8 1/2" x 13"	LOW	LOW	HIGH	LOW	LOW	8 1/2" x 13" SEF
A5 SEF	LOW	LOW	LOW	HIGH	LOW	A5 SEF
A5 LEF	LOW	LOW	LOW	LOW	HIGH	A5 LEF
*	HIGH	HIGH	HIGH	HIGH	LOW	(Size set in User Tools)

4. Paper Feed 4			
Bit	Description	Reading	
		0	1
7	1st Paper Height	Less than 30%	30% or more
6	Japan only		
5	2nd Paper Height	Less than 30%	30% or more
4	3rd Paper Height	Less than 30%	30% or more
3	1st Paper Near End	Near End	Not Near End
2	Japan only		
1	2nd Paper Near End	Near End	Not Near End
0	3rd Paper Near End	Near End	Not Near End

5. Paper Feed 5			
Bit	Item	0	1
7	Japan Only		
6			
5			
4			
3			
2	Right Tray Paper Sensor	Present	Not Present
1	Tray Type	3 trays	4 trays
0	Not used		

6. Paper Feed 6			
Bit	Description	Reading	
		0	1
7	Left Tandem Tray Set	Set	Not set
6	Japan only		
5	Japan only		
4	Rear Fence HP Sensor	Deactivated	Activated
3	Japan only		
2	Rear Fence Return Sensor	Deactivated	Activated
1	Left Tray Paper Sensor	Paper present	Paper not present
0	Right Tandem Tray Set	Set	Not set

7. Paper Feed 7			
Bit	Item	0	1
7	1st Paper Feed Sensor	Present	Not present
6	Japan Only	---	---
5	2nd Paper Feed Sensor	Present	Not present
4	3rd Paper Feed Sensor	Present	Not present
3	1st Vertical Transport Sensor	Present	Not present
2	Japan Only	---	---
1	2nd Vertical Transport Sensor	Present	Not present
0	3rd Vertical Transport Sensor	Present	Not present

8. Paper Feed 8			
Bit	Item	0	1
7	1st Tray Lift Sensor	Off	On
6	Japan Only	Off	On
5	2nd Tray Lift Sensor	Off	On
4	3rd Tray Lift Sensor	Off	On
3	1st Paper End Sensor	Paper	No Paper
2	Japan Only	Paper	No Paper
1	2nd Paper End Sensor	Paper	No Paper
0	3rd Paper End Sensor	Paper	No Paper

9. Paper Feed 9			
Bit	Description	Reading	
		0	1
7	Not used		
6	Not used		
5	Toner Overflow SW	Switch not pressed	Switch pressed
4	Toner Collection Bottle Set SW	Switch pressed	Switch not pressed
3	Not used		
2	Not used		
1	Not used		
0	Not used		

10. Paper Feed 10 DFU

11. Paper Feed 11 DFU

12. DIP Switches DFU

13. Exit			
Bit	Description	Reading	
		0	1
7	Toner Collection Motor Sensor	Deactivated	Activated
6	Toner End Sensor	Toner end	Not toner end
5	Toner Collection Coil Sensor	Deactivated	Activated
4	Not used		
3	Exit Unit Set	Set	Not set
2	Paper Exit Sensor	Paper present	Paper not present
1	Exit Unit Entrance Sensor	Paper present	Paper not present
0	Web End Sensor	Not web end	Web end

14. Duplex			
Bit	Description	Reading	
		0	1
7	Not used		
6	Duplex Unit Set	Set	Not set
5	Duplex Transport 3 Sensor	Paper present	Paper not present
4	Duplex Transport 2 Sensor	Paper present	Paper not present
3	Duplex Transport 1 Sensor	Paper present	Paper not present
2	Duplex Jogger HP Sensor	Deactivated	Activated
1	Duplex Inverter Sensor	Paper not present	Paper present
0	Duplex Entrance Sensor	Paper not present	Paper present

15. Lock Detection 1			
Bit	Description	Reading	
		0	1
7	Key Card Set	Set	Not set
6	Development Motor Lock	Not locked	Locked
5	Fusing/Exit Motor Lock	Locked	Not locked
4	Drum Motor Lock	Not locked	Locked
3	CPM	60 CPM	75 CPM
2	Not used		
1	Not used		
0	Not used		

16. Lock Detection 2			
Bit	Description	Reading	
		0	1
7	Charge Corona Leak	Leaked	Not leaked
6	Not used		
5	Toner Collection Motor Lock	Locked	Not locked
4	Exhaust Fan Lock	Locked	Not locked
3	Not used		
2	Not used		
1	Not used		
0	Not used		

17. Registration Sensor			
Bit	Description	Reading	
		0	1
7	Not used		
6	Not used		
5	Front Door Open	Open	Closed
4	Copy Tray Full Sensor	Not full	Full
3	Guide Plate Position Sensor	Closed	Open
2	Relay Sensor	Paper present	Paper not present
1	By-pass Paper End Sensor	Paper present	Paper not present
0	Registration Sensor	Paper present	Paper not present

18. Original Size Set Sensor			
Bit	Description	Reading	
		0	1
7	Fusing Unit Set	Set	Not set
6	Not used		
5	Key Counter Set	Set	Not set
4	Original Length 2 Sensor	Paper present	Paper not present
3	Original Length 1 Sensor	Paper present	Paper not present
2	Original Width 3 Sensor	Paper present	Paper not present
1	Original Width 2 Sensor	Paper present	Paper not present
0	Original Width 1 Sensor	Paper present	Paper not present

5.6.2 COPIER OUTPUT CHECK: SP5804

1. Open SP mode 5804.
2. Select the SP number that corresponds to the component you wish to check.
(Refer to the table on the next page.)
3. Press On then press Off to test the selected item.

NOTE: You cannot exit and close this display until you press off to switch off the output check currently executing. Do not keep an electrical component switched on for a long time.

No.	Description
1	Feed Motor 1
2	Feed Motor 2
3	Feed Motor 3
4	Feed Motor 4
5	By-pass Feed Clutch
6	LCT Paper Feed Motor
9	Pick-up SOL 1
10	Pick-up SOL 2
11	Pick-up SOL 3
12	Pick-up SOL 4
13	By-pass Pick-up SOL
14	LCT Pick-up SOL
17	Reverse Release SOL 1
18	Reverse Release SOL 2
19	Reverse Release SOL 3
20	Reverse Release SOL 4
22	Tandem Connection Release SOL
23	Left Tandem Lock SOL
24	Tandem Transport Motor
27	Relay Motor
28	Main Motor
31	Fusing Exit Motor
39	Registration Motor
40	Guide Plate Release SOL
41	Exit Junction SOL
43	Inverter Duplex Motor
44	Duplex Transport Motor

No.	Description
45	Duplex Entrance Junction Gate SOL
46	Inverter Jogger SOL
47	Duplex Transport CL (B064 only)
52	Development Roller Clutch
53	Development Motor
54	Used Toner Motor
55	Web Motor
56	Toner Bottle Motor
57	Trigger/Separation CL
62	Quenching Lamp
63	Charge Corona
64	Grid Wire
67	Development Bias
69	Transfer Bias
70	ID Sensor LD
72	Xenon Lamp
75	Duplex Unit Fan
76	Main Ventilation Fan
77	Main Suction Fan
78	Main Vacuum Fan
79	OPC Fan
80	FIN Junction SOL
81	FIN Junction SOL (Stapler)
82	FIN End Roller SOL
84	Total Counter
85	FIN Main Motor 1
86	FIN Main Motor 2
87	FIN Exit Motor
88	Booklet Stapler Motors
89	FIN Punch Motor
90	LD DC Lamp DFU
92	FIN Tray Lift Motor
93	FIN Jogger Motor
94	FIN Staple Transport Motor
95	FIN Exhaust Motor
96	FIN Shift Motor
97	FIN Staple Slant Motor
98	Status Lamp (Green)
99	Status Lamp (Red)
100	PTL

5.6.3 ADF INPUT CHECK: SP6007

1. Open SP mode SP6007.
2. Select the SP number that corresponds to the component you wish to check.
(Refer to the table below.)
3. Press On then press Off to test the selected item. You cannot exit and close this display until you click Off to switch off the output check currently executing.

Bit	7 6 5 4 3 2 1 0
Data	1 1 0 0 1 0 1 0

Group 1	
No.	Description
0	Original Length Sensor 3 (LG)
1	Original Length Sensor 2 (A4)
2	Original Length Sensor 3 (B5)
3	Original Set Sensor
4	Original Width Sensor 1
5	Original Width Sensor 2
6	Original Width Sensor 3
7	Original Width Sensor 4

Group 2	
No.	Description
0	Skew Correction Sensor
1	Interval Sensor
2	Registration Sensor
3	Exit Sensor
4	DF Position Sensor
5	APS Start Sensor
6	Feed Cover Sensor
7	Pick-up Roller HP Sensor

Group 3	
No.	Description
0	Bottom Plate HP Sensor
1	Bottom Plate Position Sensor
2	Not Used
3	Not Used
4	Not Used
5	Not Used
6	Not Used
7	Not Used

5.6.4 ADF OUTPUT CHECK: SP6008

1. Open SP mode SP6008.
2. Select the SP number that corresponds to the component you wish to check. (Refer to the table below.)
3. Press On then press Off to test the selected item. You cannot exit and close this display until you click Off to switch off the output check currently executing.

Bit	7 6 5 4 3 2 1 0
Data	1 1 0 0 1 0 1 0

No.	Description	0	1
1	Feed Motor: Forward	OFF	ON
2	Feed Motor: Reverse	OFF	ON
3	Transport Motor: Forward	OFF	ON
4	Exit Motor: Forward	OFF	ON
5	Pick-up Motor: Reverse	OFF	ON
6	Bottom Plate Motor: Forward	OFF	ON
7	Bottom Plate Motor: Reverse	OFF	ON

5.6.5 FINISHER INPUT CHECK: SP6117 (B478/B704)

Class 3 No.	Bit No.	Description	Reading	
			0	1
1	7	Stack Feed-out Belt HP Sensor	Home position	Not home position
	6	Not Used		
	5	Shift Tray Lower Limit 2 Sensor	Not detected	Detected
	4	Shift Tray Lower Limit 3 Sensor	Not detected	Detected
	3	Stapler Tray Exit Sensor	Paper not detected	Paper detected
	2	Shift Tray Exit Sensor	Paper detected	Paper not detected
	1	Upper Tray Exit Sensor	Paper detected	Paper not detected
	0	Entrance Sensor	Paper not detected	Paper detected
2	7	Not used		
	6	Front Door Safety Switch	Door closed	Door open
	5	Stapler Tray Paper Sensor	Paper not detected	Paper detected
	4	Staple End Sensor	Not end	End
	3	Staple Hammer HP Sensor	Home position	Not home position
	2	Stapler HP Sensor	Not home position	Home position
	1	Shift Tray Half-turn Sensor	Home position	Not home position
	0	Jogger HP Sensor	Not home position	Home position
3	7	Not Used		
	6	Staple Cartridge Set Sensor	Set	Not set
	5	Staple Mode HP Sensor 2	Not detected	Detected
	4	Staple Mode HP Sensor 1	Not detected	Detected
	3	Not Used		
	2	Punch Waste Hopper Sensor	Not full	Full
	1	Punch HP1 Sensor	Home position	Not home position
	0	Punch Unit Connection	Connected	Not connected
4	7	Stapler Ready	Ready	Not ready
	6	Stapler Return Sensor	Not detected	Detected
	5	Exit Guide Open Sensor	Home position	Not home position
	4	Stack Plate –Center HP Sensor	Not home position	Home position
	3	Pre-stack Tray Paper Sensor	Paper not detected	Paper detected
	2	Staple Waste Hopper Sensor	Not full	Full
	1	Stapler Rotation HP Sensor	Not home position	Home position
	0	Upper Tray Limit Sensor	Not full	Full
5	7	Punch HP 2 Sensor	Home position	Not home position
	6	Not Used		
	5	Shift Lower Limit - Large Paper Sensor	Not detected	Detected
	4	Shift Mode HP Sensor	Not detected	Detected
	3	Stacking Roller HP Sensor	Home position	Not home position
	2	Positioning Roller HP Sensor	Not home position	Home position
	1	Stack Plate – Rear HP Sensor	Not home position	Home position
	0	Stack Plate – Front HP Sensor	Not home position	Home position

Class 3 No.	Bit No.	Description	Reading	
			0	1
6	7	Not Used		
	6	Shift Tray Full Sensor – Z-folding	Not full	Full
	5	Bottom Fence HP Sensor	Not home position	Home position
	4	Top Fence HP Sensor	Not home position	Home position
	3	Emergency Stop Switch	Not press	Press
	2	Shift Jogger Lift HP Sensor (Optional Jogger Unit)	Home position	Not home position
	1	Shift Jogger HP Sensor (Optional Jogger Unit)	Not home position	Home position
	0	Optional Jogger Unit Connection	Connection	Not connection

5.6.6 FINISHER OUTPUT CHECK: SP6118

No.	Description
1	Upper Transport Motor
2	Shift Tray Exit Motor
3	Upper Tray Junction Gate Solenoid
4	Shift Tray Lift Motor
5	Jogger Motor
6	Stapler Motor
7	Staple Hammer Motor (Stapler Unit)
8	Punch Motor
9	Stapler Junction Gate Solenoid
10	Positioning Roller Solenoid
11	Stack Feed-out Motor
12	Shift Motor
13	Stapler Rotation Motor
14	Lower Transport Motor
15	Exit Guide Motor
16	Stack Plate-Center Motor
17	Pre-stack Junction Gate Solenoid
18	Pre-stack Paper Stopper Solenoid
19	Stapler Return Solenoid
20	Stack Plate- Front Motor
21	Stack Plate – Rear Motor
22	Stacking Roller Drag Motor
23	Stacking Roller Motor
24	Shift Jogger Motor (Optional Jogger Unit)
25	Shift Jogger Lift Motor (Optional Jogger Unit)

5.6.7 FINISHER 1 INPUT CHECK: 6121

6121	Finisher Input Check: Finisher 1		
	These are the input checks for the 2000-Sheet/3000-Sheet Finishers B700/B701.		
001	Entrance Sensor	026	Punch Chad Full Sensor
002	Proof Exit Sensor	027	Punch HP Sensor
003	Proof Full Detection Sensor	028	Punch Selection DIP SW1
004	Trailing Edge Detection: Shift	029	Punch Selection DIP SW2
005	Shift Exit Sensor	030	Stack Junction Open/Close Sensor
006	Shift HP Sensor	031	Leading Edge Detection Sensor
007	Shift Exit Sensor	032	Drum Roller HP Sensor
008	Exit Guide Plate HP Sensor	033	Arrival Sensor
009	Paper Detection Sensor: Staple	034	Rear Edge HP Sensor
010	Paper Detection Sensor: Shift	035	Folder Cam HP Sensor
011	Paper Full Sensor: 2000-Sheet	036	Folder Plate HP Sensor
012	Oscillating Back Roller HP Sensor	037	Folder Pass Sensor
013	Jogger HP Sensor	038	Saddle-Stitch Full Sensor: Front
014	Exit Junction Gate HP Sensor	039	Saddle-Stitch Full Sensor: Rear
015	Staple Tray Paper Sensor	040	Saddle-Stitch Stapler 1 Rotation: Front
016	Stapler Main HP Sensor	041	Saddle-Stitch Detection: Front
017	Skew HP Sensor	042	Saddle-Stitch Leading Edge Detection
018	Limit Switch	043	Saddle-Stitch Stapler 1 Rotation: Rear
019	Door Switch	044	Saddle-Stitch Detection: Rear
020	Stapler 1 Rotation	045	Saddle-Stitch Leading Edge Detection
021	Staple Detection	046	Full Sensor: 3000-Sheet
022	Staple Leading Edge Detection	047	Exit Jogger HP Sensor: Front
023	Punch Moving HP Sensor	048	Exit Jogger HP Sensor: Rear
024	Punch Registration Sensor	049	Exit Jogger HP Sensor: Upper
025	Punch Registration Detection		

5.6.8 FINISHER 1 OUTPUT CHECK: 6124

6124	Finisher Output Check: Finisher 1		
	These are the output checks for the 2000-Sheet/3000-Sheet Finishers B700/B701.		
001	Entrance Motor	017	Knock (Positioning Roller) Solenoid
002	Upper Feed Motor	018	Trailing Edge Hold Sensor
003	Lower Feed Motor	019	Saddle-Stitch Hold Sensor
004	Exit Motor	020	Stack Junction Gate Motor
005	Knock (Positioning) Roller Motor	021	Trailing Edge Fence Main Motor
006	Shift Motor	022	Saddle-Stitch Stapler Motor: Front
007	Exit Guide Plate Motor	023	Saddle-Stitch Stapler Motor: Rear
008	Tray Lift Motor	024	Folder Plate Motor
009	Oscillating Back Roller Motor	025	Folder Roller Motor
010	Jogger Motor	026	Drive Roller Oscillating (Clamp) Motor
011	Stack Feed Out Motor	027	Punch Motor
012	Stapler Moving Motor	028	Punch Moving Motor
013	Staple Skew (Rotation) Motor	029	Punch Registration Detection Motor
014	End Stapler Motor	030	Exit Jogger Motor: Front
015	Upper Junction Gate Solenoid	031	Exit Jogger Motor: Rear
016	Lower Junction Gate Solenoid	032	Exit Jogger Release Motor

5.6.9 FINISHER 2 INPUT CHECK: 6122

6122	Finisher Input Check Finisher 2		
	These are the input checks for the 3000-Sheet Finisher B706.		
001	Entrance Sensor	021	Proof Full Sensor
002	Proof Exit Sensor	022	Stapler Moving HP Sensor
003	Shift Exit Sensor	023	Staple Waste Hopper Sensor
004	Staple Exit Sensor	024	Pre-Stack Tray HP Sensor
005	Tray Lower Sensor	025	Hold HP Sensor
006	Tray Near Lower Sensor	026	Exit Guide HP Sensor
007	Stack Feed Out HP Sensor	027	Stapler Reverse Sensor
008	Jogger HP Sensor	028	Stapler Sensor
009	Shift HP Sensor	029	Front Hold HP Sensor
010	Stapler Moving HP Sensor	030	Rear Hold HP Sensor
011	Staple HP Sensor	031	Knock Hold HP Sensor
012	Staple Cartridge Sensor	032	Reverse Drive HP Sensor
013	Staple Tray Paper Sensor	033	Paper Sensor
014	Door Sensor	034	Tray Lower Sensor
015	Punch Unit Sensor	035	Punch HP2 Sensor
016	Punch HP Sensor	036	Shift Jogger Sensor
017	Punch Chad Full Sensor	037	Shift Jogger HP Sensor
018	Paper Detection Sensor: Staple	038	Shift Jogger Release HP Sensor
019	Paper Detection Sensor: Shift	039	Front Door Safety Switch
020	Staple Cartridge Set Sensor		

5.6.10 FINISHER 2 OUTPUT CHECK: 6125

6125	Finisher Output Check: Finisher 2		
	These are the input checks for the 3000-Sheet Finisher B706.		
001	Job Cancel	014	Staple Lift Motor
002	Main Motor	015	Staple Exit Motor
003	Shift Tray Exit Motor	016	Exit Motor
004	Proof Junction Gate Solenoid	017	Hold (Fold Plate) Motor
005	Shift Relay Motor	018	Pre-Stack Solenoid
006	Jogger Motor	019	Guide (Junction Gate) Solenoid
007	Stapler Main Motor	020	Staple Release Solenoid
008	Stapler Motor	021	Front Hold (Fold) Motor
009	Punch Motor	022	Rear Hold Motor
010	Stapler Solenoid	023	Reverse Drive Motor
011	Knock (Staple Hammer) Motor	024	Reverse Feed Motor
012	Stack Feed Out Motor	025	Exit Jogger Motor
013	Shift Motor	026	Exit Jogger Release Motor

5.7 USING THE DEBUG LOG (B140/B246)

This machine provides a Save Debug Log feature that allows the Customer Engineer to save and retrieve error information for analysis.

Every time an error occurs, debug information is recorded in volatile memory but this information is lost when the machine is switched off and on.



To capture this debug information, the Save Debug Log feature provides two main features:

- Switching on the debug feature so error information is saved directly to the HDD for later retrieval.
- Copying the error information from the HDD to an SD card.

When a user is experiencing problems with the machine, follow the procedure below to set up the machine so the error information is saved automatically to the HDD. Then ask the user to reproduce the problem.


5.7.1 SWITCHING ON AND SETTING UP SAVE DEBUG LOG

The debug information cannot be saved until the “Save Debug Log” function has been switched on and a target has been selected.

1. Enter the SP mode and switch the Save Debug Log feature on.
 - Press  then use the 10-key pad to enter 107.
 - Press and hold down  for more than 3 seconds.
 - Touch “Copy SP”.
 - On the LCD panel, open SP5857.
2. Under “5857 Save Debug Log”, touch “1 On/Off”.

```

COPY : SP-5-857-001
Save Debug Log
On/Off (1:ON 0:OFF)
      1
Initial 0
  
```

3. On the control panel keypad, press “1” then press . This switches the Save Debug Log feature on.

NOTE: The default setting is “0” (OFF). This feature must be switched on in order for the debug information to be saved.

4. Next, select the target destination where the debug information will be saved. Under “5857 Save Debug Log”, touch “2 Target”, enter “2” with the operation panel key to select the hard disk as the target destination, then press $\text{\textcircled{\#}}$.

COPY : SP-5-857-002

Save Debug Log

Target (2:HDD 3:SD Card)

2

Initial 2

NOTE: Select “3 SD Card” to save the debug information directly to the SD card if it is inserted in the service slot.

5. Now touch “5858” and specify the events that you want to record in the debug log. SP5858 (Debug Save When) provides the following items for selection.

1	Engine SC Error	Saves data when an engine-related SC code is generated.
2	Controller SC Error	Saves debug data when a controller-related SC Code is generated.
3	Any SC Error	Saves data only for the SC code that you specify by entering code number.
4	Jam	Saves data for jams.

NOTE: More than one event can be selected.

Example 1: To Select Items 1, 2, 4

Touch the appropriate item(s). Press “ON” for each selection. This example shows “Engine SC Error” selected.

COPY : SP-5-858-001

Debug Save When

Engine SC Error

OFF
ON

Example 2: To Specify an SC Code

Touch “3 Any SC Error”, enter the 3-digit SC code number with the control panel number keys, then press $\text{\textcircled{\#}}$. This example shows an entry for SC670.

COPY : SP-5-858-001

Debug Save When

Any SC Error

670

NOTE: For details about SC code numbers, please refer to the SC tables in Section “4. Troubleshooting”.

6. Next, select the one or more memory modules for reading and recording debug information. Touch “5859”.

Under “5859” press the appropriate key item for the module that you want to record.

Enter the appropriate 4-digit number, then press (#).

NOTE: Refer to the two tables below for the 4-digit numbers to enter for each key.

The example below shows “Key 1” with “2222” entered.

COPY : SP-5-859-001 Debug Save Key No. Key 1	2222
--	------

The following keys can be set with the corresponding numbers. (The initials in parentheses indicate the names of the modules.)

4-Digit Entries for Keys 1 to 10

KEY NO.	COPY	PRINTER	SCANNER	WEB
1	2222 (SCS)			
2	2223 (SRM)			
3	256 (IMH)			
4	1000 (ECS)			
5	1025 (MCS)			
6	4848 (COPY)	4400 (GPS)	5375 (Scan)	5682 (NFA)
7	2224 (BCU)	4500 (PDL)	5682 (NFA)	6600 (WebDB)
8		4600 (GPS-PM)	3000 (NCS)	3300 (PTS)
9		2000 (NCS)	2000 (NCS)	6666 (WebSys)
10		2224 (BCU)		2000 (NCS)

Service
Tables

NOTE: The default settings for Keys 1 to 10 are all zero (“0”).

Key to Acronyms

Acronym	Meaning	Acronym	Meaning
ECS	Engine Control Service	NFA	Net File Application
GPS	GW Print Service	PDL	Printer Design Language
GSP-PM	GW Print Service – Print Module	PTS	Print Server
IMH	Image Memory Handler	SCS	System Control Service
MCS	Memory Control Service	SRM	System Resource Management
NCS	Network Control Service	WebDB	Web Document Box (Document Server)

The machine is now set to record the debugging information automatically on the HDD (the target selected with SP5857-002) for the events that you selected SP5858 and the memory modules selected with SP5859.

Please keep the following important points in mind when you are doing this setting:

- Note that the number entries for Keys 1 to 5 are the same for the Copy, Printer, Scanner, and Web memory modules.
- The initial settings are all zero.
- These settings remain in effect until you change them. Be sure to check all the settings, especially the settings for Keys 6 to 10. To switch off a key setting, enter a zero for that key.
- You can select any number of keys from 1 to 10 (or all) by entering the corresponding 4-digit numbers from the table.
- You cannot mix settings for the groups (COPY, PRINTER, etc.) for 006~010. For example, if you want to create a PRINTER debug log you must select the settings from the 9 available selections for the "PRINTER" column only.
- One area of the disk is reserved to store the debug log. The size of this area is limited to 4 MB.

5.7.2 RETRIEVING THE DEBUG LOG FROM THE HDD



Retrieve the debug log by copying it from the hard disk to an SD card.

1. Insert the SD card into the service slot of the copier.
2. Enter the SP mode and execute SP5857-009 (Copy HDD to SD Card (Latest 4 MB)) to write the debugging data to the SD card.
3. ~~After you return to the service center,~~ Use a card reader to copy the file and send it for analysis to your local Ricoh representative by email, or just send the SD card by mail.

5.7.3 RECORDING ERRORS MANUALLY

Since only SC errors and jams are recorded to the debug log automatically, for any other errors that occur while the customer engineer is not on site, please instruct customers to perform the following immediately after occurrence to save the debug data. Such problems would include a controller or panel freeze.

NOTE: In order to use this feature, the customer engineer must have previously switched on the Save Debug Feature (SP5857-001) and selected the hard disk as the save destination (SP5857-002).

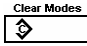1. When the error occurs, on the operation panel, press  (Clear Modes).
2. On the control panel, enter “01” then hold down  for at least 3 sec. until the machine beeps then release. This saves the debug log to the hard disk for later retrieval with an SD card by the service representatives.
3. Switch the machine off and on to resume operation.

The debug information for the error is saved on the hard disk so the service representatives can retrieve it on their next visit by copying it from the HDD to an SD card.

5.7.4 NEW DEBUG LOG CODES

SP5857-015 Copy SD Card-to-SD Card: Any Desired Key

This SP copies the log on an SD card (the file that contains the information written directly from shared memory) to a log specified by key number. The copy operation is executed in the log directory of the SD card inserted in the same slot. (This function does not copy from one slot to another.) Each SD card can hold up to 4 MB of file data. Unique file names are created for the data during the copy operation to prevent overwriting files of the same name. This means that log data from more than one machine can be copied onto the same SC card. This command does not execute if there is no log on the HDD for the name of the specified key.

SP5857-016 Create a File on HDD to Store a Log

This SP creates a 32 MB file to store a log on the HDD. However, this is not a completely empty file. The created file will hold the number "2225" as the SCS key number and other non-volatile information. Even if this SP is not executed, a file is created on the HDD when the first log is stored on the HDD, but this operation takes time. This creates the possibility that the machine may be switched off and on before the log can be created completely. If you execute this SP to create the log file beforehand, this will greatly reduce the amount of time required to acquire the log information and save onto the HDD. With the file already created on the HDD for the log file, the data only needs to be recorded; a new log file does not require creation. To create a new log file, execute SP5857-011 to delete the debug log data from the HDD and then execute this SP (SP5857-016).

SP5857-017 Create a File on SD Card to Store a Log

This SP creates a 4 MB file to store a log on an SD card. However, this is not a completely empty file. The created file will hold the number "2225" as the SCS key number and other non-volatile information. Even if this SP is not executed, a file is created on the SD card when the first log is stored on the SD card, but this operation takes time. This creates the possibility that the machine may be switched off and on before the log can be created completely. If you execute this SP to create the log file beforehand, this will greatly reduce the amount of time required to acquire the log information and save onto the SD card. With the file already created on the SD card for the log file, the data only needs to be recorded; a new log file does not require creation. To create a new log file, execute SP5857-012 to delete the debug log data from the SD card and then execute this SP (SP5857-017).

5.8 USER TOOLS

5.8.1 OVERVIEW

This section is a summary of the user tools. Refer to the operator's manual for more details.

1. On the operation panel, press the User Tools button.
2. Press the appropriate key, then access the following items:
 - Initial System
 - Copier/Document Box
 - Initial Printer Settings
 - Initial Scanner Settings
 - Display Language
 - Contact Information
 - Counters

You can use these tools while the machine is operating, during a jam, or even when a warning is displayed. However, you cannot move to the user screen while in the SP mode, but you can easily switch between the SP mode screen and the operation screen by pressing Copy Window.

During machine operation, in the jam mode, or while a warning message is displayed, the display language can be changed and the counters can be displayed. However, the counters cannot be printed.

5.8.2 SYSTEM SETTINGS

B064 Series System Settings

General Features
Panel Tone
Warm Up Notice
Copy Count Display
Function Priority
Print Priority
Function Reset Timer
Interleave Print
Output Tray Setting
Output Copier
Output: Document Server
Output: Printer
ADF Original Table Elevation
Job List Display Time
Tray Paper Settings
Paper Tray Priority: Copier
Paper Tray Priority: Printer
Tray Paper Size: Tray 2
Tray Paper Size: Tray 3
Tray Paper Size: Tray 4
Paper Type: Bypass Tray
Paper Type: Tray 1
Paper Type: Tray 2
Paper Type: Tray 3
Paper Type: Tray 4
Paper Type: LCT
Slip Sheet Tray
Cover Sheet Tray
Slip Sheet Tray 1
Slip Sheet Tray 2
Timer Setting
Auto Off Timer
Energy Saver Timer
Panel Off Timer
System Reset Timer
Copier/Document Server Auto Reset Timer
Scanner Auto Reset Timer
Set Date
Set Time
Weekly Timer Code
Weekly Timer: Monday
Weekly Timer: Tuesday
Weekly Timer: Wednesday
Weekly Timer: Thursday
Weekly Timer: Friday
Weekly Timer: Saturday
Weekly Timer: Sunday

Interface Settings
Network
IP Address
Subnet Mask
Gateway Address
Network Boot
Effective Protocol
NW Frame Type
Ethernet Speed
Parallel Interface
Parallel Timing
Parallel Communication Speed
Selection Signal Status
Input Prime
Bidirectional Communication
File Transfer
Delivery Option
Scanner Recall Interval Time
Number of Scanner Recalls
Key Operator Tools
User Code Management
Key Counter Management
Key Operator Code
Display/Print Counter
Display/Clear/Print Counter per User Code
Address Book Management
Address Book: Program/Change/Delete Group
Address Book: Change Order
Address Book: Edit Title
Address Book: Select Title
Auto Delete File
Delete All Files
Display Password with Stored File
Key Operator's E-Mail Address
AOF (Always On)

B140 Series System Settings

General Features
Panel Tone
Warm Up Notice
Copy Count Display
Function Priority
Print Priority
Function Reset Timer
Interleave Print
Output Copier
Output: Document Server
Output: Printer
ADF Original Table Elevation
Job List Display Time
<F/F4> Size Setting
Z-fold Position
Tray Paper Settings
Paper Tray Priority: Copier
Paper Tray Priority: Printer
Tray Paper Size: Tray 2
Tray Paper Size: Tray 3
Paper Type: Bypass Tray
Paper Type: Tray 1
Paper Type: Tray 2
Paper Type: Tray 3
Paper Type: LCT
Cover Sheet Tray
Slip Sheet Tray
Designation Sheet Tray 1
Designation Sheet Tray 2
Printer Bypass Paper Size
Timer Settings
Auto Off Timer
Energy Saver Timer
Panel Off Timer
System Reset Timer
Copier/Document Server Auto Reset Timer
Scanner Auto Reset Timer
Set Date
Set Time
Weekly Timer Code
Auto Logout Timer
Weekly Timer: Monday
Weekly Timer: Tuesday
Weekly Timer: Wednesday
Weekly Timer: Thursday
Weekly Timer: Friday
Weekly Timer: Saturday
Weekly Timer: Sunday

Interface Settings
Network
IP Address
Gateway Address
DNS Configuration
DDNS Configuration
Domain Name
WINS Configuration
Effective Protocol
NW Frame Type
SMB Computer Name
SMB Work Group
Ethernet Speed
Ping Command
Permit SNMP V3 Communication
Permit SSL/TLS Communication
Host Name
Machine Name
Parallel Interface
Parallel Timing
Parallel Communication Speed
Selection Signal Status
Input Prime
Bidirectional Communication
Signal Control
File Transfer
Delivery Option
SMTP Server
SMTP Authentication
POP Before SMTP
POP3 Setting
Administrator's E-mail Address
E-mail Communication Report
Default User Name/Password (Send)
Program/Change/Delete E-mail Message
Program/Change/Delete Subject
Scanner Recall Interval Time
Number of Scanner Recalls
Auto Specify Sender Name

Administrator Tools
User Authentication Management
Administrator Authentication Management
Program/Change Administrator
Extended Security
Extend Change Unit Management
Enhanced Extend Change Unit Management
Display Print Counter
Display/Clear/Print Counter Per User
Address Book Management
Address Book: Program/Change/Delete/Delete Group
Address Book: Edit Title
Address Book: Change Order
Print Address Book: Destination List
Address Book: Select Title
Auto Delete File
Delete All Files
Program/Change/Delete LDAP Server
Use LDAP Server
AOF (Always ON)
Firmware Version
Auto Erase Memory Setting
Erase All Memory

5.8.3 COPIER/DOCUMENT SERVER FEATURES

General Features
Auto Paper Select Priority
Auto Tray Switching
Paper Display
Original Type Priority
Original Type Display
Auto Image Density Priority
Copy Quality
Image Density
Duplex Mode Priority
Copy Orientation in Duplex Mode
Original Orientation in Duplex Mode
Change Initial Mode
Tone: Original Remains
Job End Call
Copy Function Key: F1
Copy Function Key: F2
Copy Function Key: F3
Copy Function Key: F4
Copy Function Key: F5
Document Server Storage Key: F1
Document Server Storage Key: F2
Document Server Storage Key: F3
Document Server Storage Key: F4
Document Server Storage Key: F5
Document Server Print Key 1: F1
Document Server Print Key 1: F2
Document Server Print Key 1: F3
Document Server Print Key 1: F4
Document Server Print Key 1: F5
Reproduction Ratio
Shortcut R/E 1
Shortcut R/E 2
Shortcut R/E 3
Enlarge 1
Enlarge 2
Enlarge 3
Enlarge 4
Enlarge 5
Priority Setting: Enlarge
Reduce 1
Reduce 2
Reduce 3
Reduce 4
Reduce 5
Reduce 6
Priority Setting: Reduce
Ratio for Create Margin
R/E Priority

Edit
Front Margin: Left/Right
Back Margin: Left/Right
Front Margin: Top/Bottom
Back Margin: Top/Bottom
1-Sided → 2-Sided Auto Margin: T to T
1-Sided → 2-Sided Auto Margin: T to B
Erase Border Width
Erase Original Shadow in Combine
Erase Center Width
Image Repeat Separation Line
Double Copies Separation Line
Separation Line in Combine
Copy Back Cover
Front Cover Copy in Combine
Copy on Designating Page in Combine
Orientation: Booklet, Magazine
Copy Order in Combine

Stamp
Background Numbering
Size
Density
Preset Stamp
Stamp Priority
Stamp Language
Stamp Position: COPY
Stamp Position: URGENT
Stamp Position: PRIORITY
Stamp Position: For Your Info.
Stamp Position: PRELIMINARY
Stamp Position: For Internal Use Only
Stamp Position: CONFIDENTIAL
Stamp Position: DRAFT
Stamp Format: COPY
Stamp Format: URGENT
Stamp Format: PRIORITY
Stamp Format: For Your Info.
Stamp Format: PRELIMINARY
Stamp Format: For Internal Use Only
Stamp Format: CONFIDENTIAL
Stamp Format: DRAFT
User Stamp
Program/Delete Stamp
Stamp Position: 1
Stamp Position: 2
Stamp Position: 3
Stamp Position: 4
Stamp Format: 1
Stamp Format: 2
Stamp Format: 3
Stamp Format: 4
Date Stamp
Format
Font
Stamp Position
Stamp Setting
Size
Superimpose

Page Numbering
Stamp Format
Font
Size
Duplex Back Page Stamping Position
Page Numbering in Combine
Stamp on Designating Slip Sheet
Stamp Position P1, P2
Stamp Position: 1/5, 2/5 ...
Stamp Position: -1-, -2- ...
Stamp Position: P.1, P.2 ...
Stamp Position: 1, 2, ...
Stamp Position: 1-1, 1-2 ...
Superimpose

Input/Output
Switch to Batch
SADF Auto Reset
Rotate Sort: Auto Paper Continue
Auto Sort
Memory Full Auto Scan Restart
Select Stapling Position (Top Left)
Select Stapling Position (Bottom Left)
Select Stapling Position (Top Right)
Select Stapling Position (Bottom Right)
Select Stack Position
Select Punch Type
Letterhead Setting
Eject Copy Face Up/Down in Glass Mode
Eject Copy Face Up/Down in Bypass Mode

5.8.4 INQUIRY

B064 Series INQUIRY

Machine Repair
Telephone No.
Machine Serial No.
Sales Representative
Telephone Number
Consumables
Toner
Staple

B140 Series INQUIRY

Machine Repair
Telephone No.
Machine Serial No.
Sales Representative
Telephone Number

5.8.5 COUNTER

Total Counter
Print Counter List

5.9 DIP SWITCH TABLES

5.9.1 BCU (BASE ENGINE CONTROL UNIT)

BCU Base Board DIP SW101

No.	Function	Default	Comments
1	CPM	OFF	MT-C2a: OFF: 51cpm, ON: 50cpm MT-C3: OFF: 55 cpm, ON: 50 cpm Note: This switch is for the France model only.
2	DFU	OFF	
3	DFU	OFF	
4	Not used	OFF	
5	Not used	OFF	
6	Region Selection	-	Japan: 6, 7, 8/ OFF, OFF, OFF
7	Region Selection	-	NA (115V): 6, 7, 8/ ON, OFF, OFF
8	Region Selection	-	EU (220/240V): 6, 7, 8/ OFF, ON, OFF

DFU: Design, Factory Use only. Do not change these settings.

5.9.2 CONTROLLER BOARD

Controller Board DIP SW 4

No.	Function	Default	Comments
1	Not used	OFF	
2	Boot mode	ON	ON: Quick Boot, OFF: Normal Boot Note: The boot time is longer when this switch is OFF because the machine performs a full system check.
3	Not Used	OFF	
4	Not Used	OFF	
5	Boot Selection	OFF	Flash ROM Boot: 5, 6, 7/ OFF, OFF, OFF SD Card 1 Boot: 5, 6, 7/ OFF, ON, OFF SD Card 2 Boot: 5, 6, 7/ ON, ON, OFF SD Card 3 Boot: 5, 6, 7/ OFF, OFF, ON
6	Boot Selection	OFF	
7	Boot Selection	OFF	
8	Not Used	OFF	

Controller Board DIP SW 5

No.	Function	Default	Comments
1	DFU	OFF	
2	Not Used	OFF	


DFU: Design, Factory Use only. Do not change these settings.

Controller Board DIP SW 6

No.	Function	Default	Comments
1	Not Used	OFF	
2	Not Used	OFF	
3	Not Used	OFF	
4	Not Used	OFF	

6. DETAILED DESCRIPTIONS

6.1 OVERVIEW

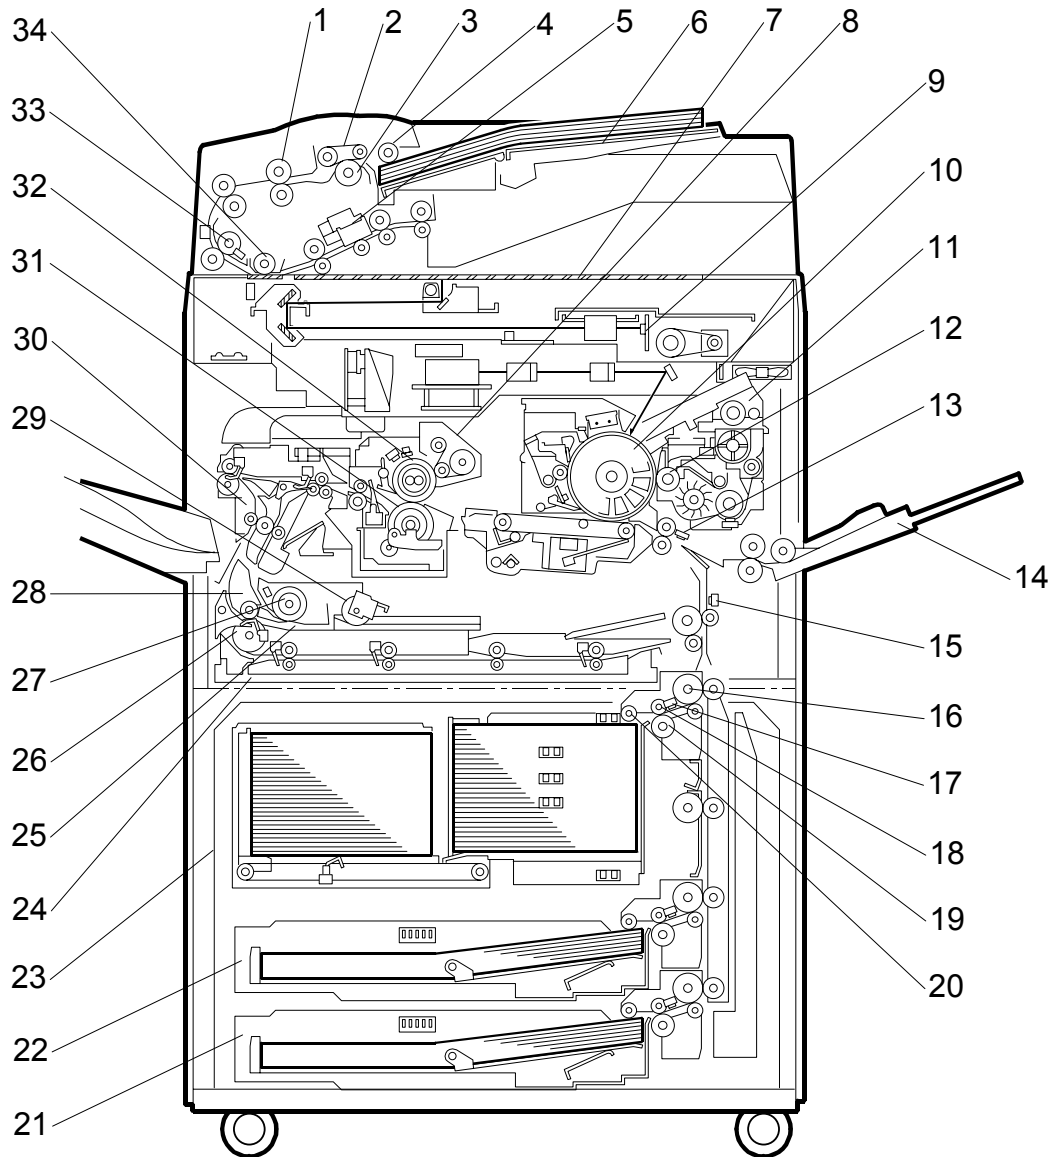


Detailed
Descriptions

B246D850.WMFF

- | | |
|-------------------------------|------------------------------------|
| 1. Entrance Roller (ADF) | 18. Feed Roller (Paper Tray) |
| 2. Feed Belt (ADF) | 19. Separation Roller (Paper Tray) |
| 3. Separation Roller (ADF) | 20. Pick-up Roller (Paper Tray) |
| 4. Pick-up Roller (ADF) | 21. Universal Tray (Tray 3) |
| 5. CIS (Contact Image Sensor) | 22. Universal Tray (Tray 2) |
| 6. Original Feed-in Tray | 23. Tandem Tray (Tray 1) |
| 7. Exposure Glass | 24. Duplex Unit |
| 8. Fusing Unit | 25. Inverter |
| 9. CCD | 26. Inverter Exit Roller |
| 10. OPC Drum | 27. Inverter Entrance Roller |
| 11. Development Unit | 28. Duplex Junction Gate |
| 12. Development Roller | 29. Reverse Trigger Roller |
| 13. Registration Sensor | 30. Exit Unit |
| 14. By-pass Tray | 31. Pressure Roller |
| 15. Relay Sensor | 32. Hot Roller |
| 16. Grip Roller | 33. Scanning (ADF) |
| 17. Feed Sensor (Paper Tray) | 34. Exposure (ADF) |

6.1.1 PAPER PATH (WITH COVER INTERPOSER TRAY)

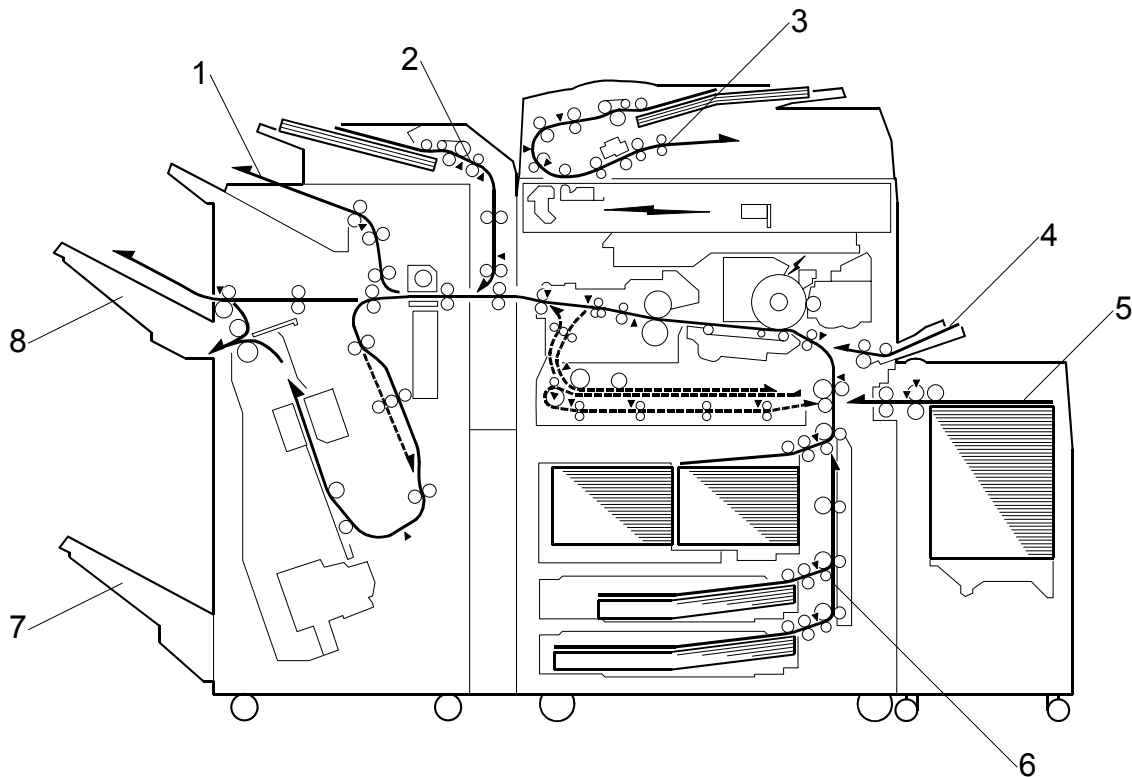


B246D851.WMFF

1. Proof Exit Tray
2. Cover Sheet Path
3. Original Path
4. By-pass Tray
5. LCT Feed
6. Vertical Transport Path
7. Finisher Exit Tray 2
8. Finisher Exit Tray 1

Detailed
Descriptions


6.1.2 PAPER PATH (WITH 9-BIN MAILBOX)

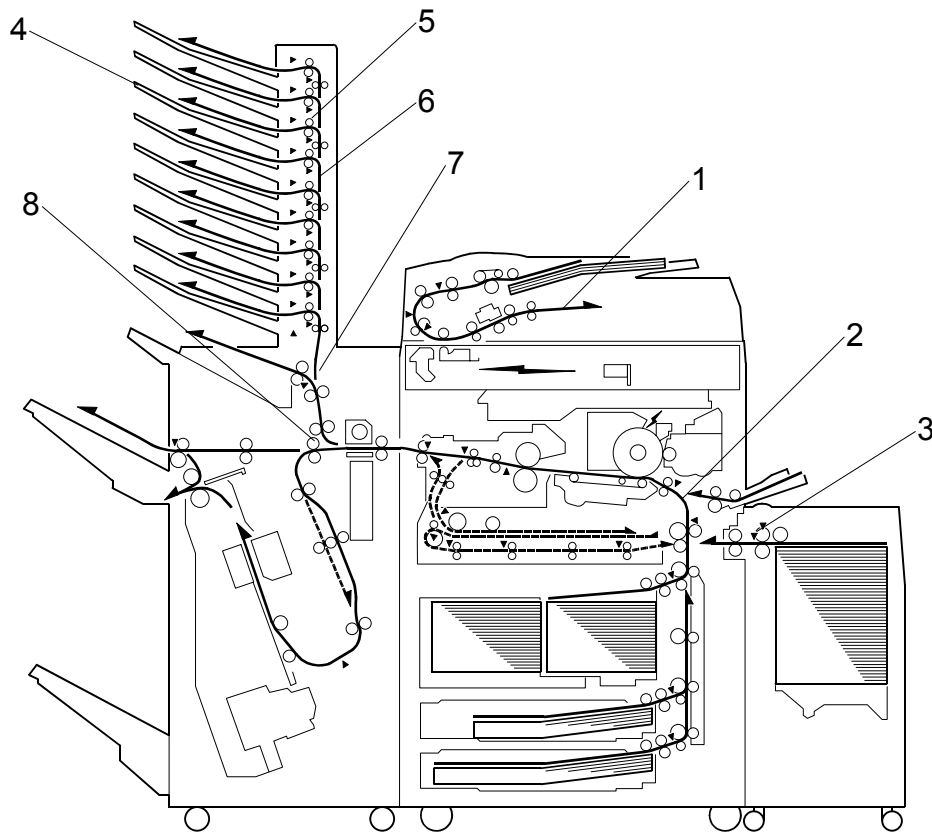

B246D852.WMFF

1. Original Paper Path
2. Vertical Transport Path
3. LCT Feed
4. Selected Trays
5. Turn Gates
6. Mailbox Paper Path
7. Junction Gate (paper goes either up to the mailbox or out to the finisher's proof tray)
8. Junction Gates (two junction gates control the paper path inside the finisher)

6.1.3 DRIVE LAYOUT

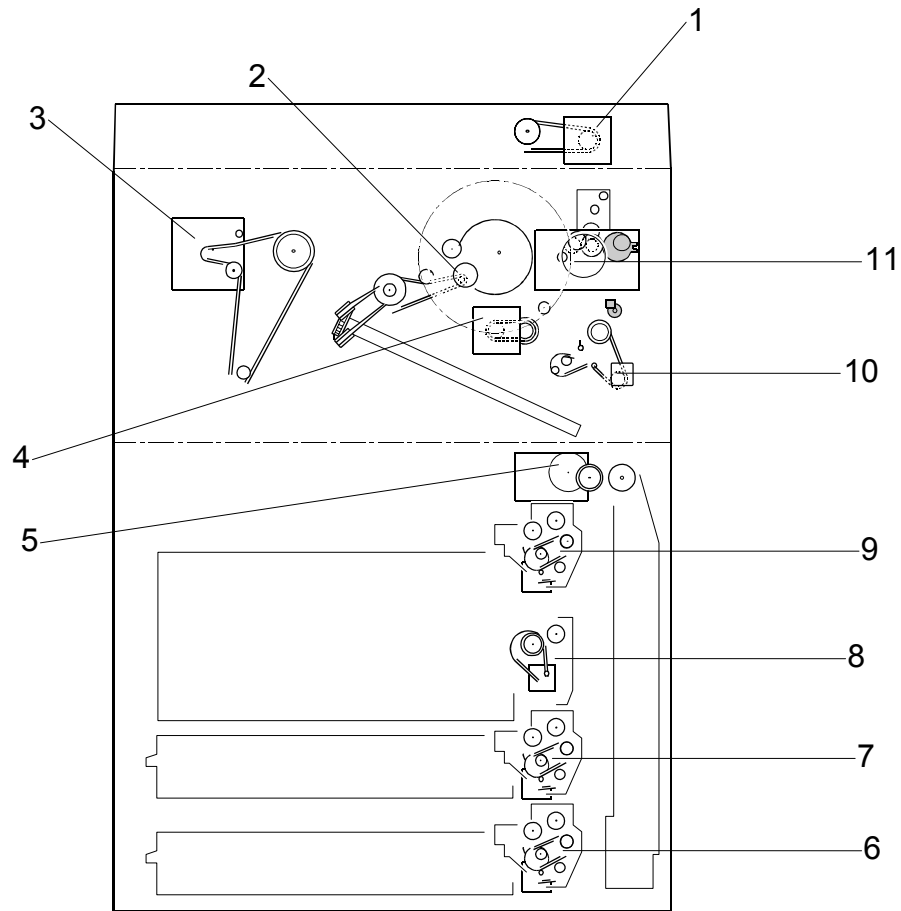


B246D801.WMFF

- | | |
|---------------------------|-----------------------|
| 1. Scanner Motor | 7. Paper Feed Motor 2 |
| 2. Drum Motor | 8. Lower Relay Motor |
| 3. Fusing/Exit Motor | 9. Paper Feed Motor 1 |
| 4. Registration Motor | 10. By-pass Motor |
| 5. Toner Collection Motor | 11. Development Motor |
| 6. Paper Feed Motor 3 | |

Detailed
Descriptions

6.2 BOARD STRUCTURE

6.2.1 BLOCK DIAGRAM

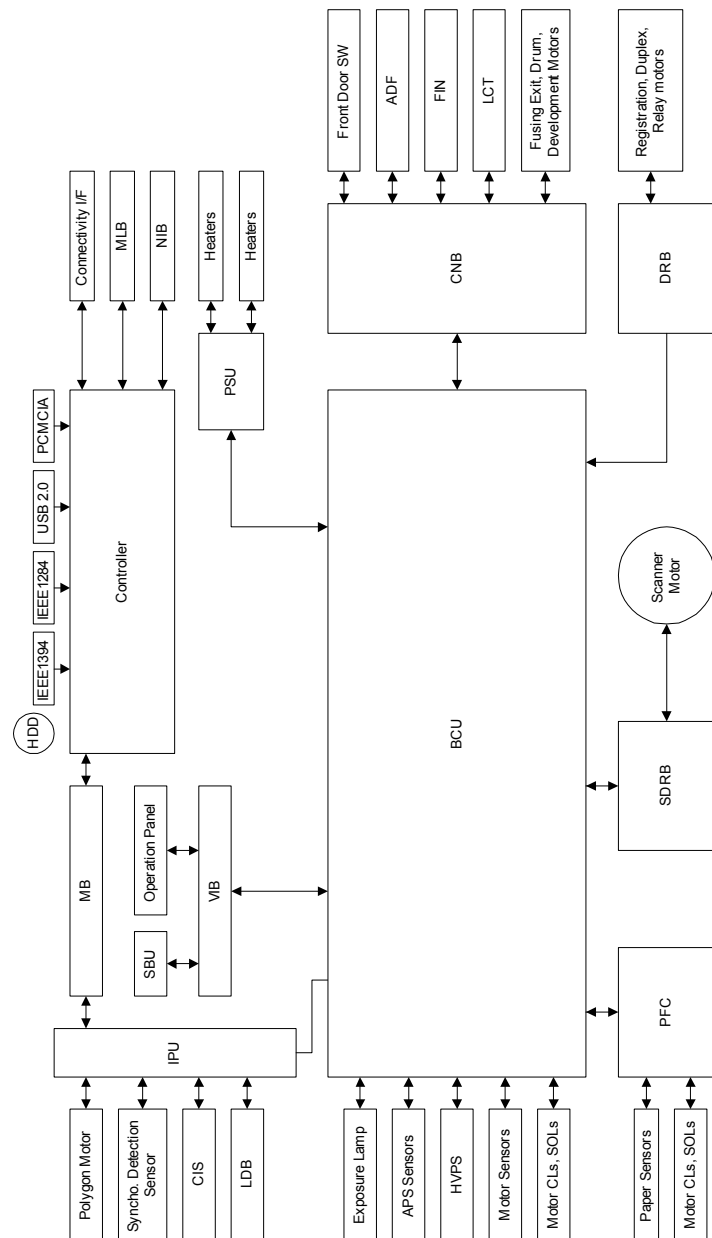

B246D853.WMF

6.2.2 COMPONENT DESCRIPTIONS

This machine uses Ricoh GW architecture. Here is a summary of the main boards.

BCU (Base Engine Control Unit)

This is the main control board that controls engine sequence, timing for peripherals, image processing, and the video data path.

BCU Base Board DIP SW101

No.	Function	On/Off	Comment
1	CPM Note: France model only.	OFF	MT-C2a: OFF: 51cpm, ON: 50cpm MT-C3: OFF: 55 cpm, ON: 50 cpm
2	Not used	OFF	
3	Design/Factory Use Only	OFF	
4	Not used	OFF	
5	Not used	OFF	
6	Local	OFF	Japan 6,7,8: OFF, OFF, OFF
7	Local	OFF	115 V 6,7,8: ON, OFF, OFF
8	Local	OFF	220/240V 6,7,8: OFF, ON, OFF

Controller Board

The controller controls all devices for memory DIMMs, HDD, copying, printing, scanning, etc. In order to add an option (printer, scanner, FireWire, wireless LAN, etc.), install the appropriate ROM DIMM on the controller board.

NOTE: 1) The Controller is on the front side of the swing out circuit board unit, with the IPU on the back side.

2) All Controller DIP SWs should be OFF during normal operation.

MB (Mother Board)

Interfaces the Controller, BICU, and optional devices such as key counters.

IPU (Image Processing Unit)

Processes images scanned by the CIS and SBU.

All IPU Board DIP switches should be set to OFF.

IPU Board DIP SW 102

No.	Function	On/OFF	Comment
1	DFU	OFF	
2	DFU	OFF	
3	DFU	OFF	
4	DFU	OFF	

DFU: Design, Factory Use only. Do not change these settings.

NOTE: The IPU is on the back side of the swing out circuit board unit.

SBU (Sensor Board Unit)

The SBU receives analog signals from the CCD and converts these into digital signals used for image processing.

PFC (Paper Feed Control)

Controls the paper feed trays built into the main machine. The PFC contains an independent CPU.

SDRB (Scanner Driver Board)

Located behind the BCU, drives the scanner and ADF motors and exposure lamp, monitors the scanner HP sensor and the ADF components.

VIB (Video Interface Board)

Located under the exposure glass, interfaces the BCU and IPU with the operation panel and SBU.

DRB (Drive Board)

Drives the duplex stepper motors (x2), the registration motor, and lower relay motor.

CNB (Connection Board)

Relays signals for the ADF, finishers, LCT, fusing exit, drum motor, development motor, and front cover switches.

HDD (Hard Disk Drive)

The HDD has a capacity of 40 GB for image storage. It can store up to approximately 1,735 copy images, based on the ITU-T No. 4 Chart.

NOTE: The HDD for the B146 Series has 80 GB capacity.


Area	Power Off	Capacity	Control		Comment
For image storage	Store	37124 MB	Copy conversion 1735		Copy server, local storage
For temporary images	Delete		Copy	500	Electronic sort, test printing, confidential printing
			Allocated copies	100	
			Printer	200	
			Scanner	500	
FileSystem1	Store	500 MB			Print font download, form registration
FileSystem2	Delete	500 MB	50 jobs		Job spooling area
FileSystem3	Store	2000 MB			Work data of SmartNet Monitor for ADMIN.
FileSystem4	Store	2 MB			Area for storing email addresses
Other	Store	174 MB			For debugging

An SC is logged if the HDD is abnormal or cannot be detected. After pressing a key to affirm that you have read the message, the machine shuts down partially but can still be used. However, some features may not be available.


Note the following important points regarding HDD replacement:

- Replacing the HDD loses all document server documents, and user stamps.
- When the HDD is replaced, the print data (user stamps) must be re-installed, so bring an IC card holding the print data so it can be downloaded.
- The “Scan to Email” addresses are also lost by HDD replacement. However, addresses can be backed up SmartNetMonitor.

6.3 COPY PROCESS OVERVIEW

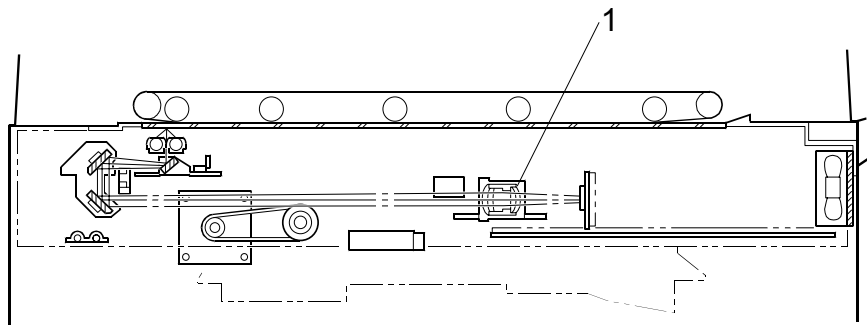

B246D854.WMFF

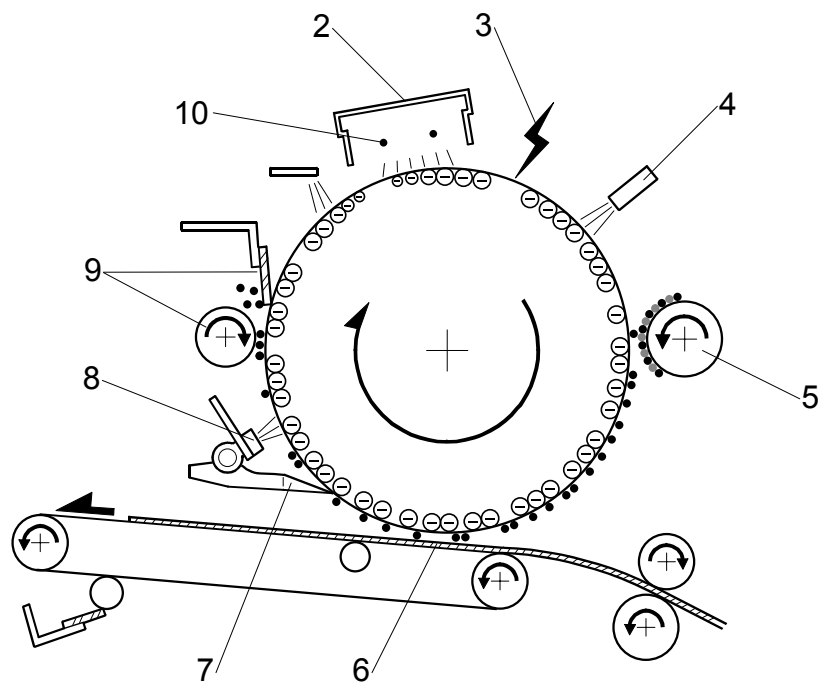

B246D856.WMFF

1. EXPOSURE

A xenon lamp exposes the original. Light reflected from the original passes to the CCD, where it is converted into an analog data signal. This data is converted to a digital signal, processed, and stored in the memory. At the time of printing, the data is retrieved and sent to the laser diode. For multi-copy runs, the original is scanned once and stored on the hard disk.

2. DRUM CHARGE

In the dark, the charge corona unit gives a negative charge to the OPC drum. The grid plate ensures that corona charge is applied uniformly. The charge remains on the surface of the drum because the OPC layer has a high electrical resistance in the dark.

3. LASER EXPOSURE

The processed image data from the scanned original is retrieved from the hard disk and transferred to the drum by four laser beams, which form an electrostatic latent image on the drum surface. The amount of charge remaining as a latent image on the drum depends on the laser beam pulse duration, which is controlled by the BICU.

4. DRUM POTENTIAL SENSOR

The drum potential sensor detects the change in drum potential, caused by variable conditions around the drum (heat, humidity, drum service) and adjusts the following voltages:

- Grid bias voltage (V_g or V_{grid})
- Laser diode power
- Development bias voltage (V_b)

5. DEVELOPMENT

The magnetic developer brush on the development roller contacts the latent image on the drum surface. Toner particles are electrostatically attracted to the areas of the drum surface where the laser reduced the negative charge on the drum.

6. IMAGE TRANSFER

Paper is fed to the area between the drum surface and the transfer belt at the proper time to align the copy paper and the developed image on the drum. The transfer roller applies a high positive charge to the reverse side of the paper through the transfer belt. This positive charge pulls the toner particles from the drum to the paper while the paper is electrostatically attracted to the transfer belt.

7. PAPER SEPARATION

Paper separates from the drum as a result of the attraction between the paper and the transfer belt. The pick-off pawls also help separate the paper from the drum.

8. ID SENSOR

The laser writes a sensor pattern on the drum surface. The ID sensor measures the reflectivity of the pattern and outputs this data (V_{sp}) to the CPU. The V_{sp} output signal is one of the factors used for toner supply control.

9. CLEANING


The cleaning brush removes toner remaining on the drum after image transfer and the cleaning blade scrapes off all remaining toner.

10. QUENCHING

The light from the quenching lamp electrically neutralizes the charge on the drum surface. After cleaning and quenching, the drum surface is ready for the next cycle.

6.4 ADF

6.4.1 OVERVIEW

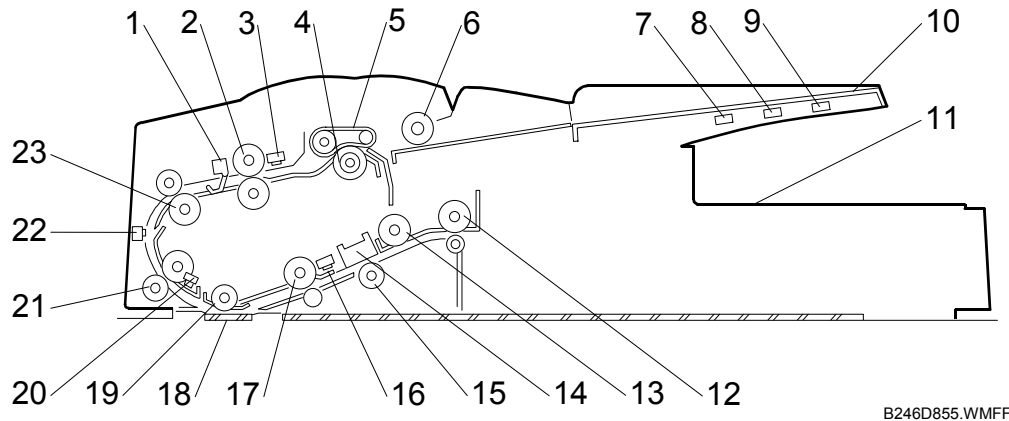

- | | |
|---------------------------------|--------------------------------|
| 1. Original Width Sensors (x 4) | 13. 3rd Transport Roller |
| 2. Entrance Roller | 14. CIS (Contact Image Sensor) |
| 3. Skew Correction Sensor | 15. White Platen Roller |
| 4. Separation Roller | 16. Exit Sensor |
| 5. Feed Belt | 17. 2nd Transport Roller |
| 6. Pick-up Roller | 18. ADF Exposure Glass |
| 7. Original Length Sensor 1 | 19. Scanning Roller |
| 8. Original Length Sensor 2 | 20. Registration Sensor |
| 9. Original Length Sensor 3 | 21. Pre-scanning Roller |
| 10. Original Tray | 22. Interval sensor |
| 11. Exit Tray | 23. 1st Transport Roller |
| 12. Exit Roller | |


Some sensors are not shown, but the callouts indicate their approximate locations.

Original Separation and Feed. The standard FRR system for paper separation and feed. (Handling Paper> Handling Originals> Document Feed> **FRR with Feed Belt**)

Original Size Detection. A combination of three original length sensors on the original tray and an array of four original width sensors in the paper feed path is used. (Handling Paper> Handling Originals> Original Size Detection> **Dynamic Original Size Detection**)

Duplex Scanning. The front side of the original is scanned as it passes over the ADF exposure glass below, and the back is scanned by a CIS mounted above the paper path. There is no inverter mechanism for duplex scanning in the ADF.

6.4.2 ADF DRIVE LAYOUT

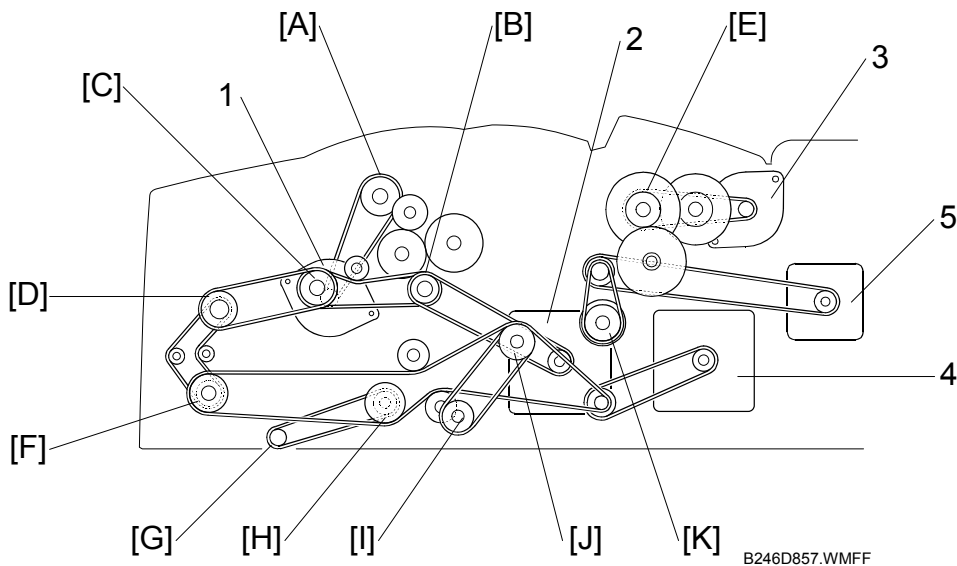

1. Pick-up Roller Lift Motor
2. Feed Motor
3. Bottom Plate Motor
4. Transport Motor
5. Exit Motor

Pick-up roller lift motor: Drives the pick-up roller lift mechanism through gear [A].

Feed motor: Drives the following:

- Pick-up roller and feed belt drive gear [B]
- Entrance roller [C] and 1st transport roller [D]


Bottom plate motor: Drives the bottom plate lift mechanism through gear [E].

Transport motor: Drives the following:

- Pre-scanning roller [F]
- Scanning roller [G]
- 2nd transport roller [H]
- White platen roller [I]
- 3rd transport roller [J]

Exit motor: Drives the exit roller [K].

6.4.3 PICK-UP ROLLER LIFT

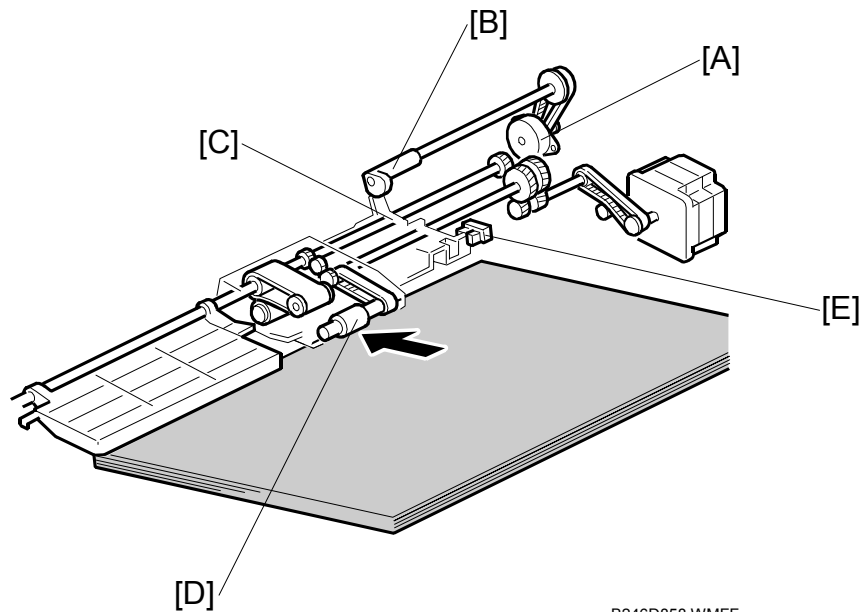


B246D858.WMFF

- [A]: Pick-up roller lift motor
- [B]: Cam
- [C]: Pick-up roller release lever
- [D]: Pick-up roller
- [E]: Pick-up roller HP sensor

When there are no originals: The pick-up roller [D] remains up (this is the home position).

When an original is placed on the tray: The original set sensor switches on, and this switches motor [A] on. The cam [B] releases lever [C]. The lever rises and the pick-up roller [D] drops onto the stack of paper. Then the pick-up roller feeds the paper to the feed belt and separation roller.

6.4.4 BOTTOM PLATE LIFT

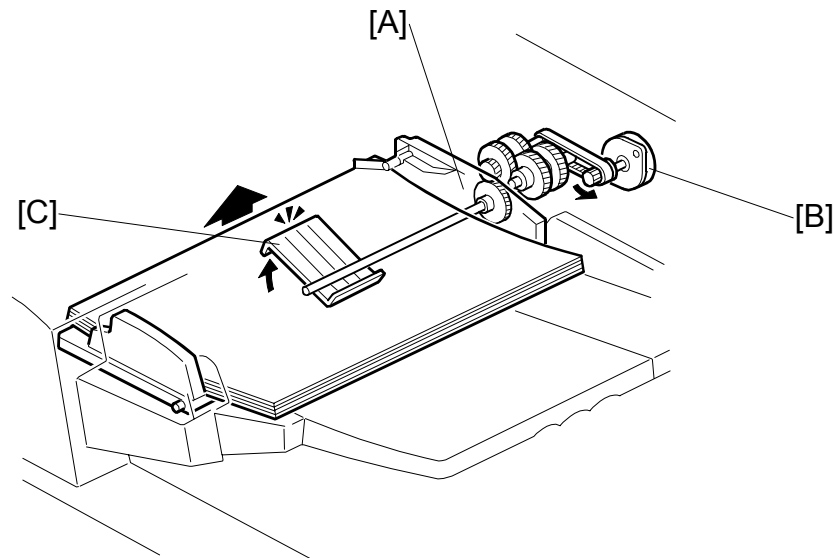

B246D859.WMFF

- [A]: Bottom plate sensor
[B]: Bottom plate motor
[C]: Lift lever


When an original is placed on the original tray: The original set sensor switches on, the pick-up roller drops, and sensor [around location A] (on the pick-up roller assembly) switches off. Then, motor [B] lifts lever [C], raising the bottom plate.

When the bottom plate reaches the correct feed position: Sensor [A] switches off and motor [B] stops.

During the job, when the top of the stack becomes too low: When the pick-up roller drops low enough to switch sensor [A] on again, motor [B] switches on again to raise the stack to the correct feed position.

Detailed
Descriptions


6.4.5 ORIGINAL SEPARATION

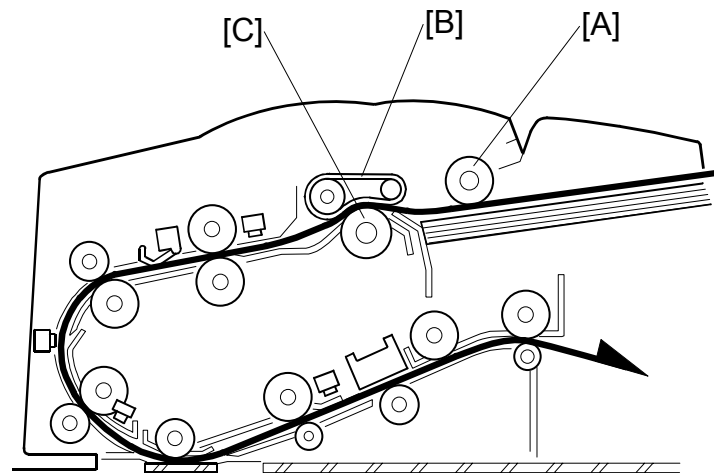


B246D860.WMFF

- [A]: Pick-up roller
- [B]: Feed belt
- [C]: Separation roller

This mechanism prevents feeding more than one sheet at a time.

( Handling Paper> Handling Originals> Document Feed> **FRR with Feed Belt**)

6.4.6 ORIGINAL TRANSPORT

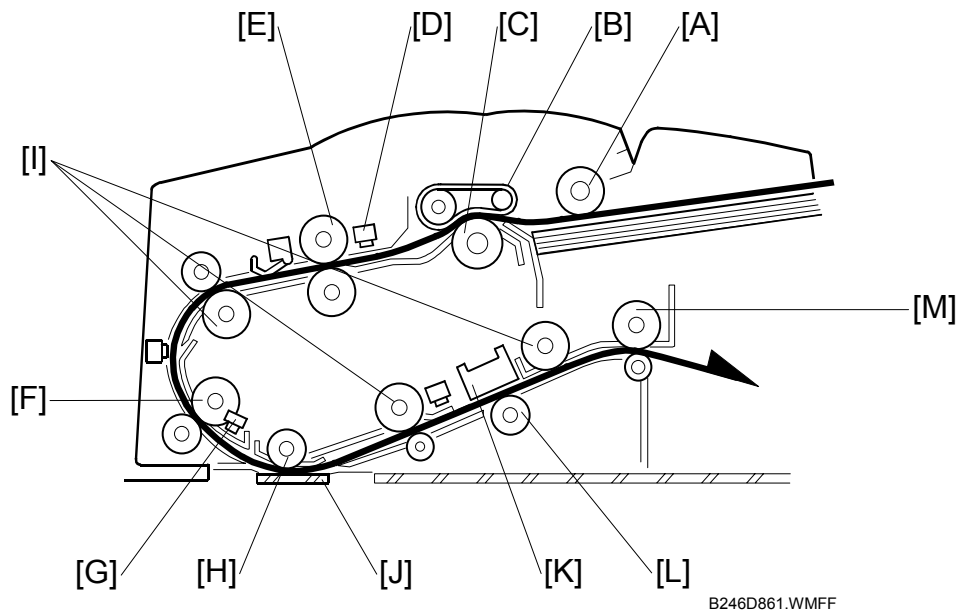


The pick-up roller [A] feeds the original to the feed belt [B] and separation roller [C]. Skew is corrected at the skew correction sensor [D] and entrance roller [E]. (➡ 6.4.7)

When the skew correction sensor detects the leading edge of the original, the pre-scanning roller [F] switches on. Skew is also corrected at the pre-scanning roller. (➡ 6.4.7)

Shading correction, which attempts to compensate for slight distortions caused by the differences in brightness of the light elements due to wear, temperature variation, or distortion by the lenses, is done for the first sheet:

- The original is fed for a few clock pulses after the registration sensor [G] detects the leading edge of the original.
- The original is then delayed slightly at the ADF exposure glass while the CPU uses the white plate to determine the white peak level for the job.
- The pre-scanning roller [F], scanning roller [H] and transport rollers [I] feed the original over the ADF exposure glass [J] and under the CIS [K], until it reaches the exit roller [M].
- If the reverse side of the original is to be scanned, the CPU uses the surface of the white platen roller [L] to determine the white peak level for the job.

6.4.7 ORIGINAL SKEW CORRECTION

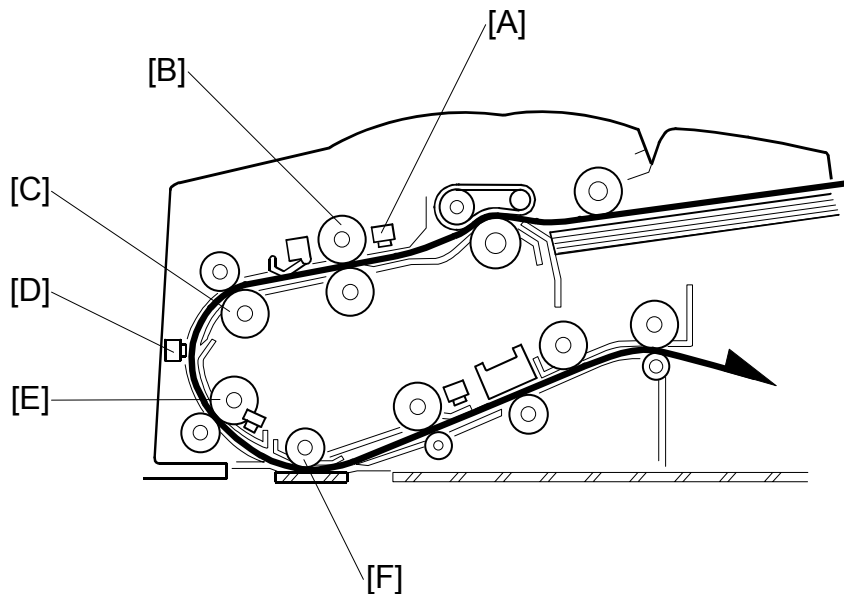

B246D862.WMFF

- [A]: Skew correction sensor
- [B]: Entrance roller
- [C]: Feed roller (Transport Roller 1)
- [D]: Interval sensor
- [E]: Pre-scanning roller
- [F]: Scanning roller

After pick-up and separation, the skew correction sensor [A] detects the leading edge of the original and the entrance roller [B] is delayed for the prescribed number of pulses to buckle the original and correct skew.

If the original is B6, A5, or HLT, or during any duplex scanning regardless of original size, when the interval sensor [D] detects the leading edge of the original, the pre-scanning motor [E] is delayed for the prescribed number of pulses to buckle the original and correct skew.

When scanning only the front side of originals larger than A5, after the entrance roller [B] starts rotating, the feed motor increases the speed of roller [C] to reduce the interval between the original just fed and the original ahead being scanned. When the interval sensor [D] detects the leading edge of the original approaching the pre-scanning roller, the pre-scanning roller slows down slightly. Roller [C] is still feeding the paper faster than the pre-scanning roller [E], and this slows the original at the leading edge and corrects skew.

Here is a summary of the skew correction methods.

① Skew correction sensor/entrance roller

	B6, A5, HLT	Larger Than A5
Duplex Scanning	Yes	Yes
Simplex Scanning	Yes	Yes

NOTE: Skew is always corrected with method ① for every job, regardless of the paper size and mode.

② Interval sensor/pre-scanning roller stop correction


	B6, A5, HLT	Larger Than A5
Duplex Scanning	Yes	Yes
Simplex Scanning	Yes	No

NOTE: Use SP6020 (ADF Contact Mode In/Out) to enable skew correction method ② for all jobs to ensure accurate original feeding. However, switching this feature on slows original feed slightly.

③ Interval sensor/pre-scanning roller slow-down correction

	B6, A5, HLT	Larger Than A5
Duplex Scanning	No	No
Simplex Scanning	No	Yes

6.4.8 ORIGINAL SIZE DETECTION

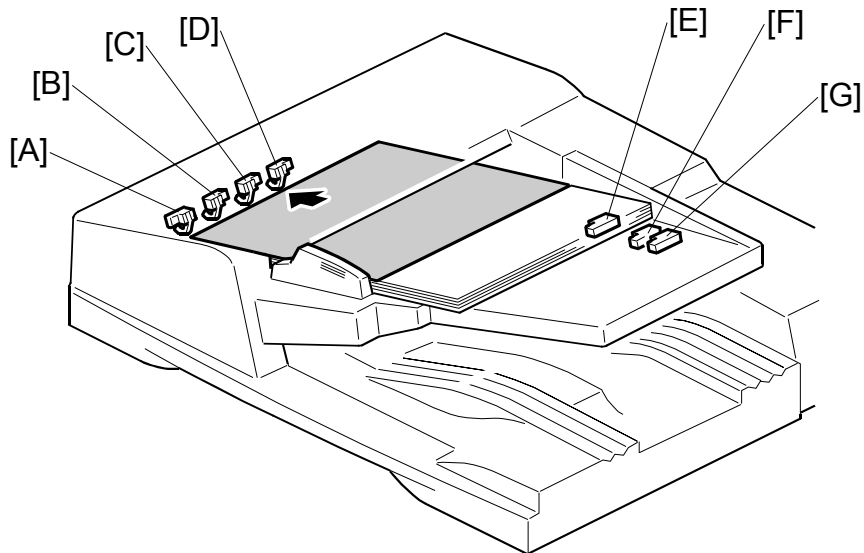

B246D863.WMFF

- [A]: Original width sensor 1
- [B]: Original width sensor 2
- [C]: Original width sensor 3
- [D]: Original width sensor 4
- [E]: B5 length sensor
- [F]: A4 length sensor
- [G]: LG length sensor

When the leading edge of the paper passes the skew correction sensor, the CPU reads the outputs from the original width and length sensors.

Please refer to the table on the next page.

Original Size Detection Table

Size (W x L)	Original Width Sensors				Original Length Sensors				
	1	2	3	4	B5	A4	LG	NA	EU
A3 SEF (297 x 420 mm)	1	1	1	1	1	1	1	Y	Y
B4 SEF (257 x 364 mm)	1	1	0	0	1	1	1	N	Y
A4 SEF (210 x 297 mm)	1	0	0	0	1	1	0	Y	Y
A4 LEF (297 x 210 mm)	1	1	1	1	0	0	0	Y	Y
B5 SEF (182 x 257 mm)	0	0	0	0	1	0	0	N	Y
B5 LEF (257 x 182 mm)	1	1	0	0	0	0	0	N	Y
A5 SEF (148 x 210 mm) ^{*1}	0	0	0	0	0	0	0	N	Y
A5 LEF (210 x 148 mm)	1	0	0	0	0	0	0	N	Y
B6 SEF (128 x 182 mm) ^{*1}	0	0	0	0	0	0	0	N	Y
B6 LEF (182 x 128 mm) ^{*1}	0	0	0	0	0	0	0	N	Y
11" x 17" SEF (DLT)	1	1	1	0	1	1	1	Y	S
11" x 15" SEF	1	1	1	0	1	1	1	S	N
10" x 14" SEF	1	1	0	0	1	1	1	Y	N
8 1/2" x 14" SEF (LG)	1	0	0	0	1	1	1	Y	N
8 1/2" x 13" SEF (F4)	1	0	0	0	1	1	1	S	Y
8 1/4" x 13" SEF	1	0	0	0	1	1	1	N	N
8" x 13" SEF (F)	1	0	0	0	1	1	1	S	S
8 1/2" x 13 1/4" SEF (F)	1	0	0	0	1	1	1	S	S
8 1/2" x 11" SEF (LT)	1	0	0	0	1	0	0	Y	S
11" x 8 1/2" LEF (LT)	1	1	1	0	0	0	0	Y	S
7 1/4" x 10 1/2" SEF	1	0	0	0	1	0	0	Y	N
10 1/2" x 7 1/4" LEF	1	1	1	0	0	0	0	S	N
8" x 10" SEF (F)	1	0	0	0	1	0	0	S	N
5 1/2" x 8 1/2" SEF (HLT)	0	0	0	0	0	0	0	Y	N
8 1/2" x 5 1/2" LEF (HLT)	1	0	0	0	0	0	0	Y	N
8 K SEF (267 x 390 mm)	1	1	1	0	1	1	1	N	Y
16 K SEF (195 x 267 mm)	1	0	0	0	1	0	0	N	Y
16 K LEF (267 x 195 mm)	1	1	1	0	0	0	0	N	Y

Detailed Descriptions

1: Actuated

0: Not actuated

Y: Yes. Size detected.

N: No. Size not detected.

S: Selectable. Size not detected with default but default can be changed with SP6016 (Original Size Determination Priority) or SP5126 (F Original Size Selection). Refer to the description in the next section.

^{*1}: For A5 SEF, B6 SEF, and B6 LEF, all sensors are off. The machine determines the paper size by measuring the distance between the leading and trailing edges using the skew correction sensor and clock pulses.

Changing the Default Selection with SP6016 and SP5126

Here is a list of paper sizes that can be set for the default to enable detection. The **bold sizes** are the default settings, and the *italic sizes* are the alternate settings.

North America			Europe/Asia		
64	DL SEF	<i>11" x 15"</i>	4	8 K	<i>DL SEF</i>
32	LT LEF	<i>Exec LEF</i>	2	16 K SEF	<i>LT SEF</i>
16	LT SEF	<i>8" x 10" SEF</i>	1	16 K LEF	<i>LT LEF</i>
8	LG SEF	<i>Set by SP 5126</i>			


To change the default settings:

1. Enter the SP mode.
2. Select SP6016.
3. Replace the default settings with the alternate settings.
 - In North America, enter 120 to replace the default settings with the alternate settings. The bold settings in the table above are replaced with the italicized settings.
 - In Europe (or Asia), enter 7 to replace the default settings with the alternate settings. The bold settings in the table above are replaced with the italicized settings.
4. To restore all the default settings in either North America or Europe/Asia, enter "0".

SP 5126

This SP controls the alternative paper sizes that are detected for LG SEF (USA) or 8 ½ x 13" (Europe/Asia).

6.4.9 ADF SCANNING

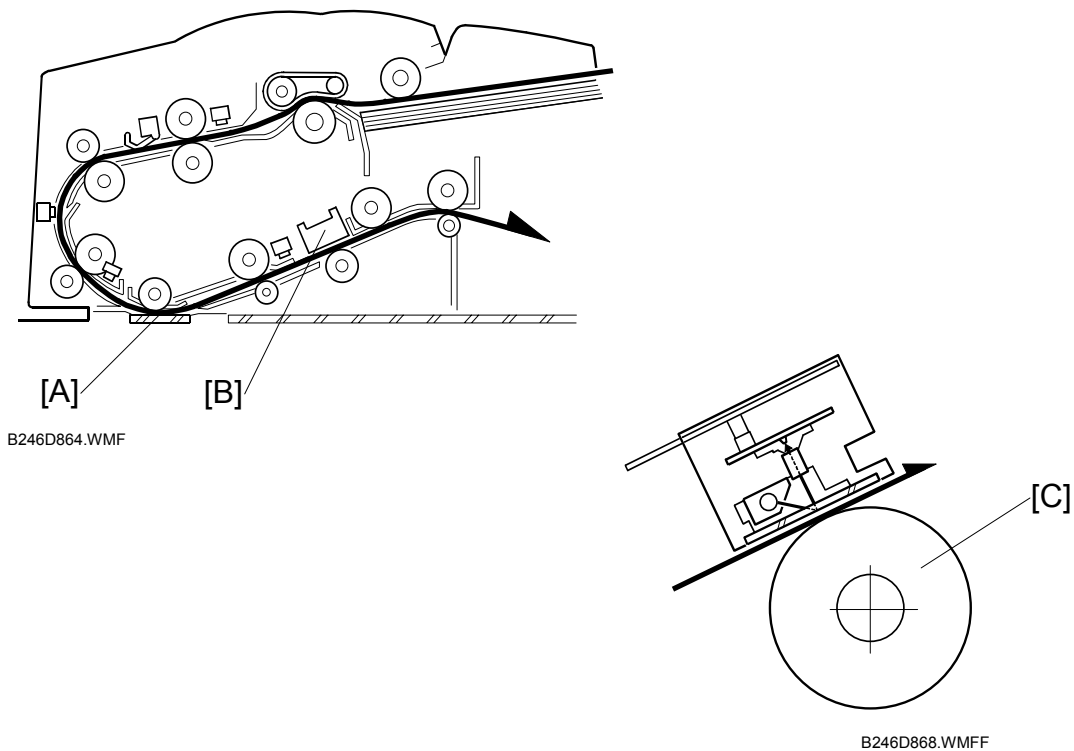

The ADF scans both sides of an original without inverting the original:

- Front side: Scanned at the ADF exposure glass [A] by a xenon exposure lamp and CCD below the original
- Back side: Scanned by a CIS [B] above the paper path


The CIS can scan a line 306 mm (12") wide at 600 dpi. To increase the scanning speed, the sensors are divided into 13 parallel blocks.

NOTE: Both sides are scanned at 600 dpi. The 600 dpi output is boosted to 1200 dpi by image processing at the IPU.

The CIS reads the surface of the white roller [C] and uses this reading (white point =0) as a reference point for density correction.

CT Digital Processes> Image Processing> Black and White CCD Systems, Black and White CIS Systems

6.4.10 JAM DETECTION

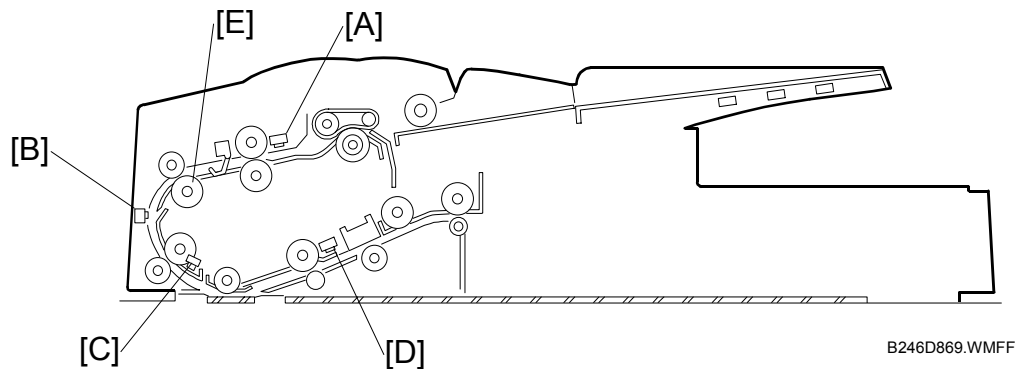


Four sensors, the skew correction sensor [A], interval sensor [B], registration sensor [C], and exit sensor [D] detect jams in the paper path. The conditions that trigger a jam detection are listed below.

Jam Type		Cause
Skew correction sensor	Check in failure	Remains off after enough time for the original to feed twice the distance from the original setting position to the skew correction sensor.
Interval sensor	Check in failure	Remains off after enough time for the original to feed twice the distance from roller [E] to the interval sensor.
Registration sensor	Check in failure	Remains off after enough time for the original to feed twice the distance from the skew correction sensor to the registration sensor.
Exit sensor	Check in failure	Remains off after enough time for the original to feed twice the distance from the registration sensor to the exit sensor.
Skew correction sensor	Check out failure	Remains on after enough time for a 610 mm (24") original to feed (except when the user is feeding custom-sized originals, which can be up to 1260 mm).
Interval sensor	Check out failure	Remains on after enough time for the original to feed twice the distance from the interval sensor to the skew correction sensor.
Registration sensor	Check out failure	Remains on after enough time for the original to feed twice the distance from the skew correction sensor to the registration sensor.
Exit sensor	Check out failure	Remains on after enough time for the original to feed twice the distance from the registration sensor to the exit sensor.

NOTE: If a problem occurs in the ADF, either SC700 or SC701 will be issued. For details, please refer to Section 4 of this manual.

6.5 SCANNING

6.5.1 OVERVIEW

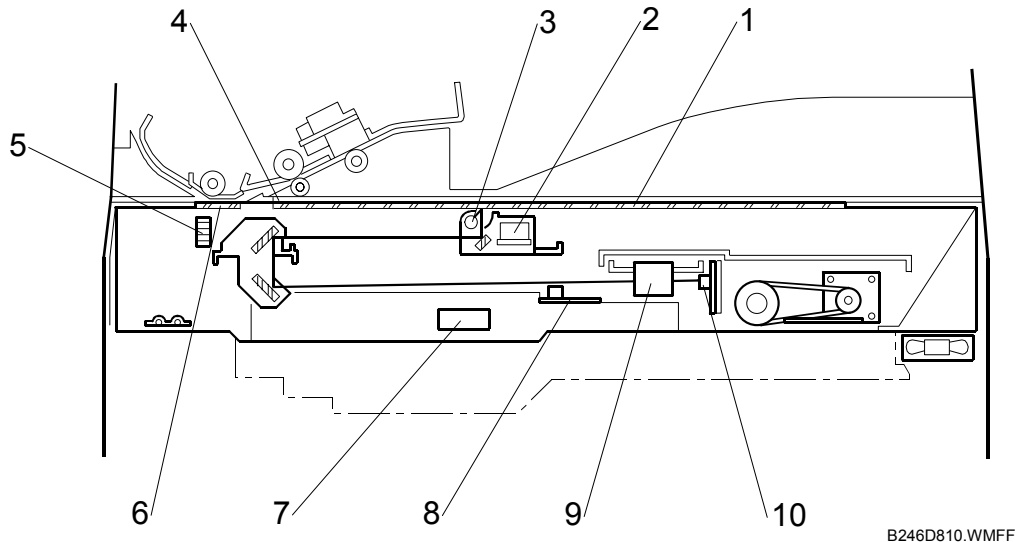

- | | |
|--------------------------|---------------------------------|
| 1. Exposure Glass | 6. Exposure Glass (ADF) |
| 2. Lamp Regulator | 7. Original Width Sensor |
| 3. Exposure Lamp (Xenon) | 8. Original Length Sensors 1, 2 |
| 4. White Plate | 9. Scanner Lens Block |
| 5. Scanner HP Sensor | 10. CCD (Charge Coupled Device) |


A xenon lamp (23W) illuminates the original. Light is reflected from the original to the CCD: 1st Mirror → 2nd Mirror → 3rd Mirror → Scanner Lens → CCD

The lens block (which consists of the scanner lens, CCD, and SBU) adjusts for refraction, MTF, and focusing. The lens block is replaced as a unit and requires no adjustment in the field.

The resolution of the CCD is 600 dpi.

Detailed
Descriptions

6.5.2 SCANNER DRIVE

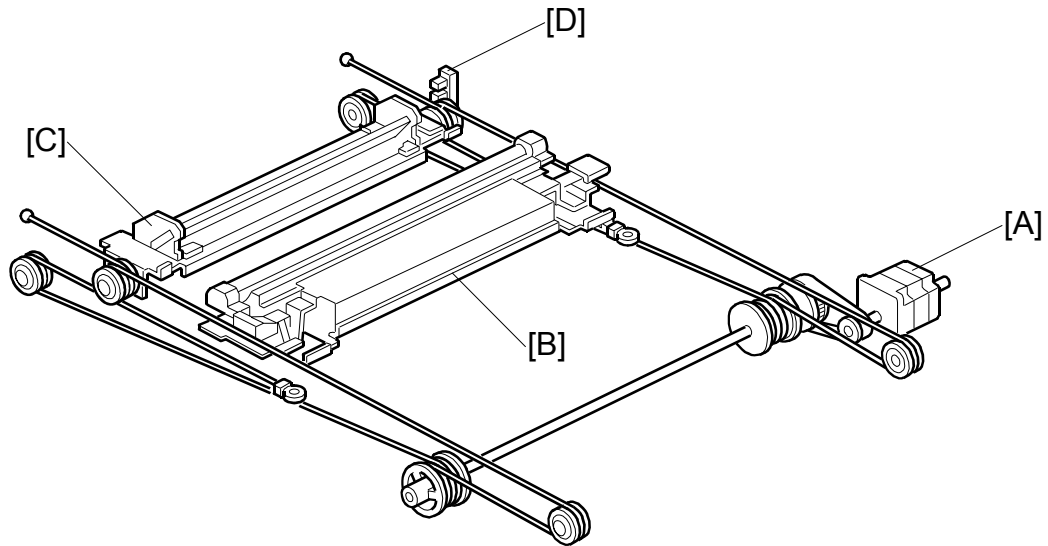

B246D811.WMFF


The scanner motor [A] (a dc stepper motor) drives the first scanner [B] and second scanner [C] through drive wires and pulleys.

The scanner HP sensor [D] detects when the scanner is at home position. The machine measures distance from home position by counting scanner motor pulses.

Scanning Mode	Speed
100% Reproduction Ratio	420 mm/s
Returning to HP	840 mm/s

6.5.3 ORIGINAL SIZE DETECTION

Sensors

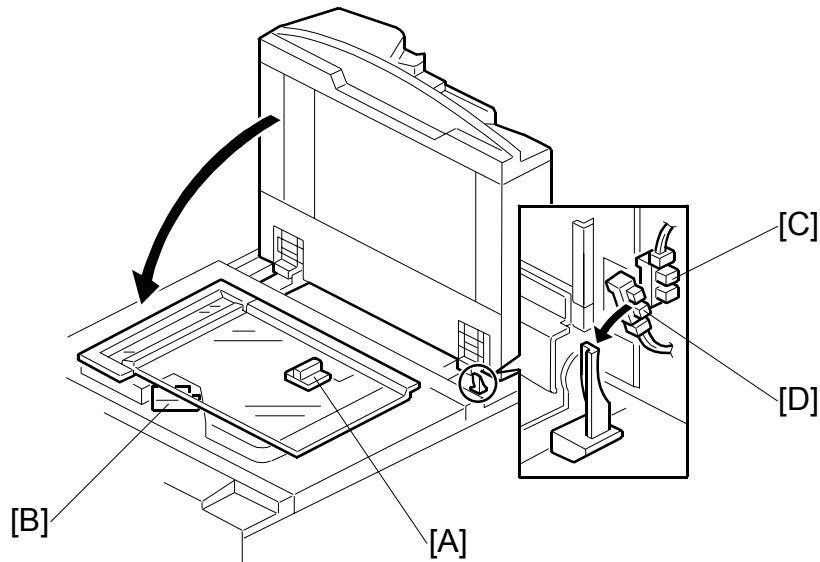


B246D812.WMFF

Original length sensor [A] and Original width sensor [B] (reflective sensors) detect the width and length of the original on the exposure glass.

The ADF functions as the platen. The DF position sensor [C] (attached to the ADF) detects whether the ADF is open or closed.

The APS start sensor [D] triggers auto paper size detection.

The following diagram shows the locations of the sensors.

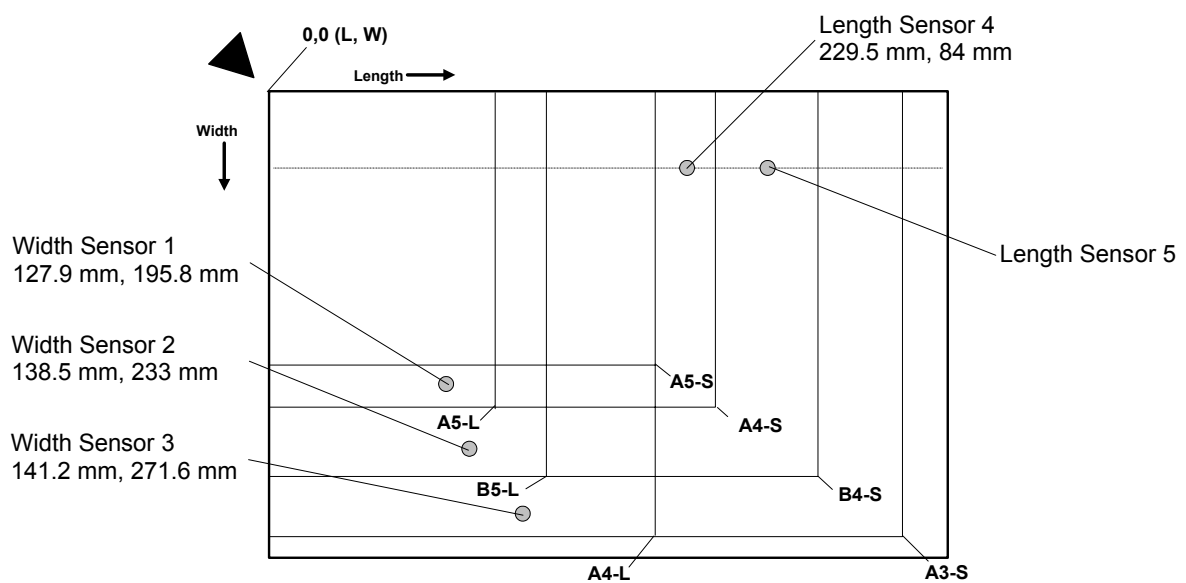

B246D813.WMFF

The table below lists the sensor output for each paper size.

If an original is on the exposure glass, you can check the sensor output by using SP4301 (APS Sensor Output Display).

Original Size		APS Length		APS Width			SP4301 Display
A4/A3	LT/DLT	5	4	1	2	3	
A3	11" x 17"	1	1	1	1	1	000 11111
B4	—	0	1	1	1	0	000 01110
A4 SEF	8 1/2" x 11"	0	0	1	1	1	000 00111
A4 LEF	11" x 8 1/2"	0	1	1	0	0	000 01100
B5 SEF	—	0	0	1	1	0	000 00110
B5 LEF	—	0	1	0	0	0	000 01000
A5 SEF	5 1/2" x 8 1/2"	0	0	1	0	0	000 00100
A5 LEF	8 1/2" x 5 1/2"	0	0	0	0	0	000 00000


1: High (Paper Present), 0: Low (No Paper)

If the original is small (such as A5-LEF), all sensors remain off and the machine indicates that the original size cannot be detected. However, you can force the machine to detect A5/HLT in this situation by adjusting SP4303 (APS A5 Size Detection).

Detection Timing

When the power is on, the APS sensors are always active, but the CPU checks their signals only after the platen is lowered.

Book Mode

In the Book mode (when the ADF is open), the CPU checks the APS sensors and determines the original size after Start  is pressed.


ADF Mode

The CPU checks the APS sensors after the platen is lowered.

By-pass Mode

The APS sensors are ignored when copy paper is fed from the by-pass tray, but the by-pass tray can handle a variety of sizes and orientations. To accomplish this:

- The machine always assumes short-edge feed for paper on the by-pass tray.
- Width is measured by a sensor inside the by-pass tray.
- The bypass tray cannot measure length, so the registration sensor determines the length of the paper using clock pulses.

The copy time for the first sheet is slower, because the entire exposure glass area (or width for the CIS) is scanned. However, when the size of the first sheet has been detected, scanning is at normal speed for the remaining sheets. ()

Handling Paper> Paper Feed> Paper Size Detection> **By-pass Size Detection**)

6.5.4 SCANNING MAGNIFICATION

Book Mode

Reduction and enlargement is done differently for main scan and sub scan:

- Main scan: Handled by image processing in the IPU.
- Sub scan: Handled by varying the speed of the scanner motor.

Reproduction ratios of 50% or higher: The scanner speed is lower for higher magnification ratios. For example, for 200% enlargement, the scanner motor speed is reduced to 50%.

Reproduction ratios of less than 50%: The scanner motor cannot run fast enough. So, the scanner slows to half the speed required for that reduction ratio. For a 49% magnification ratio, the scanner speed is the same as for 98% magnification. This causes twice as many scan lines as needed, so alternate lines are removed.

6.5.5 AUTO IMAGE DENSITY (ADS)


Auto Image Density (ADS), also called *original background correction*, corrects for variation in background density down the page to prevent the background of an original from appearing in copies. This machine uses rear scale peak sampling (the area sampled, which must contain no data, is near the rear scale).

Xenon Lamp → CCD ADS

When an original with a gray background is scanned, for example, the gray area becomes the peak white level density; therefore, the gray background will not appear on copies.

The area that the CCD uses as a reference for ADS is shown in the following diagram.

( Digital Processes> Image Processing> Black and White CCD Systems> Analog Signal Processing> **Automatic Image Density**)

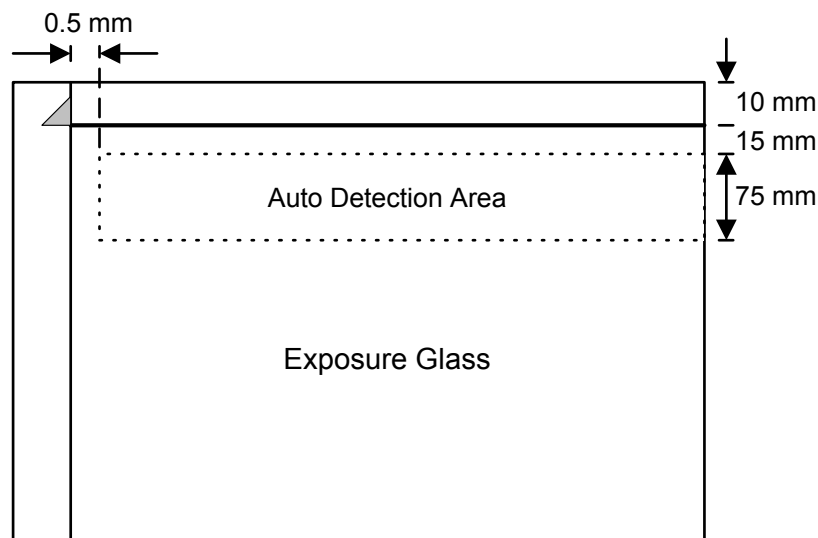

B246D814.WMFF


CIS ADS

The CIS reads the surface of the white platen roller and uses this reading (white point =0) as a reference point for density correction. When an original is scanned, the CIS starts 20 mm from the edge away from the operation panel and reads 65 mm in towards the center of the white platen roller and then performs image density correction line by line.

6.6 IMAGE PROCESSING

6.6.1 OVERVIEW

This diagram shows the machine components that do the image processing.

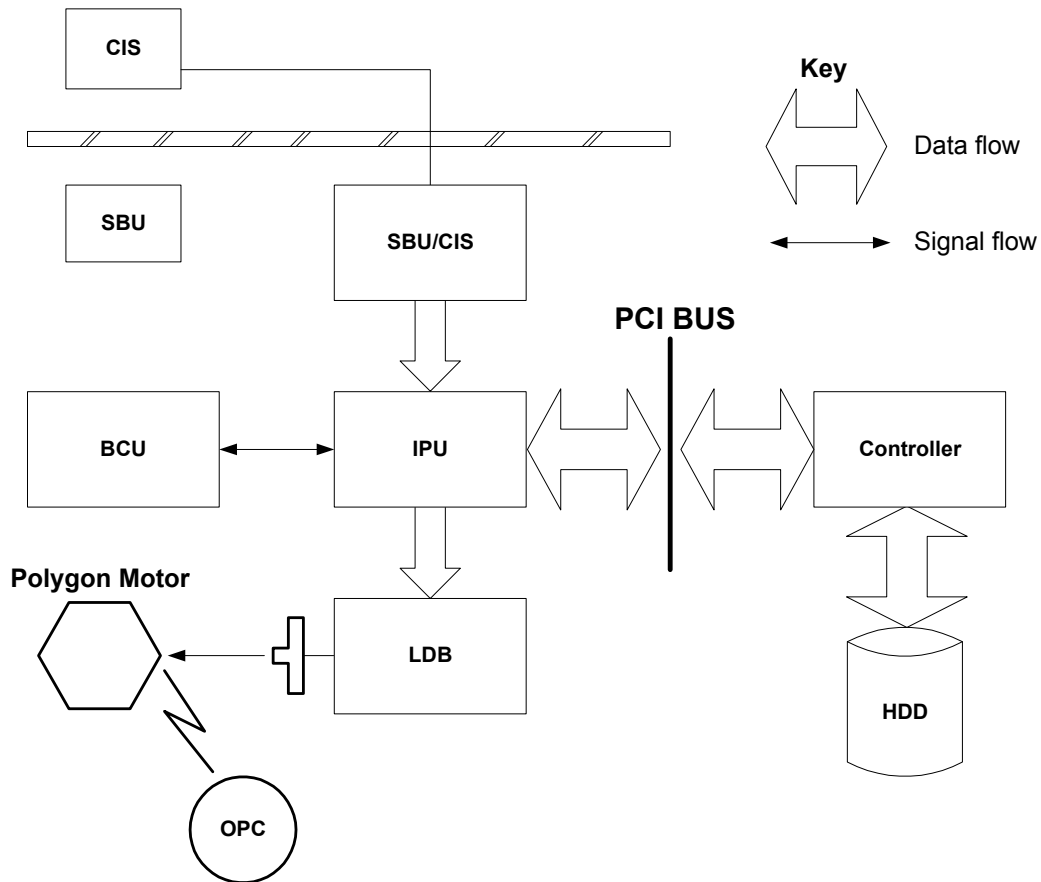

B246D815.WMFF


- SBU/CIS:** Photoelectric conversion (600 dpi, 2-channel CCD odd/even allocation), Amplification, A/D Conversion (analog to digital), Light intensity detection (scanning)
- BCU:** Engine control, Scanner control, SBU settings, LDB settings
- IPU:** Shading correction, Image Processing, Main/Sub scan magnification, Video patch switching, Compression/ decompression, GAVD
- Controller:** System control, software application control, image storage control, compression/decompression
- LDB:** 4-beam laser exposure, digital-to-grayscale conversion, synchronization detection

6.6.2 IMAGE PROCESSING FLOW

Image processing is done by the IPU (Image Processing Unit), following the steps shown below.

Overall image processing for this machine is designed to:

- Target edges with filters to improve the angles of text characters and reduce the occurrence of moiré filled areas.
- Improve the evenness of granular areas in images

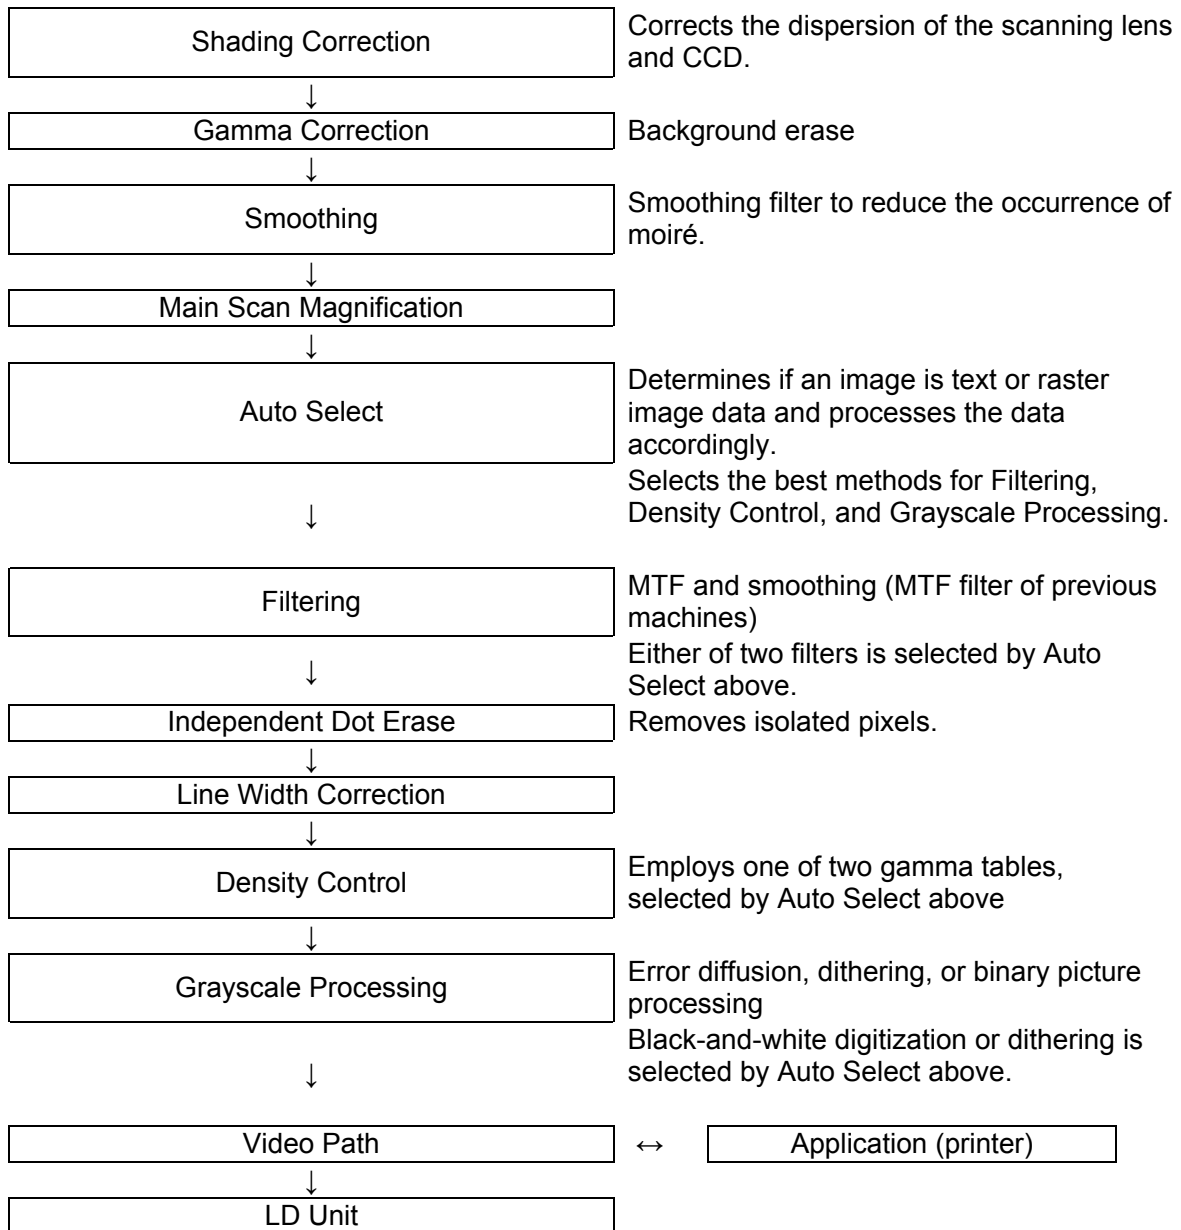

6.6.3 IMAGE PROCESSING MODES

The user can select one of the following five modes with the User Tools screen: Text, Text/Photo, Photo, Pale, Generation.

Each mode has four different settings (described below). Each mode has a Custom Setting that can be customized with SP modes to meet special requirements that cannot be covered by the standard settings.

NOTE: To see these settings in the User Tools mode, press the User Tools key, press “Copier/Document Server Functions”, then press “Copy Quality”.

Mode	Setting	Function
Text	Soft	Used for black-and-white printed material and documents that contain mainly text. Easily reads lines as well as text
	Normal	
	Sharp	Used for newspapers, time schedules, or any type of printed material with fine print.
	Custom Setting	Stores SP command settings.
Tex/Photo	Photo Priority	Used for documents that contain text and color or black-and-white photos, such as catalogs, magazines, maps, etc. Provides more faithful reproduction than the Text mode.
	Normal	
	Text Priority	
	Custom Setting	Stores SP command settings.
Photo	Print Photo	Used for magazines, graphics, for smooth reproduction. Employs dithering.
	Normal	Used for copying photographs, graphics, for sharp reproduction. Employs error diffusion.
	Glossy Photo	Used for best results in copying glossy photographs for sharp reproduction. Employs error diffusion.
	Custom Settings	Stores SP command settings. Employs either error diffusion or dithering, depending on an SP setting.
Pale	Soft	Used for low density documents with text handwritten in black or color pencil (or carbon copies) such as receipts, invoices, etc.
	Normal	
	Sharp	
	Custom Setting	Stores SP command settings.
Generation Copy	Soft	Used to achieve an image smoother than Normal.
	Normal	Used to achieved best reproduction of “copies of copies” by smoothing the image.
	Sharp	Used to emphasize lines and text stronger than Normal for better image quality.
	Custom Setting	Stores SP command settings.

6.6.4 IMAGE QUALITY SP ADJUSTMENTS

Adjustments are easier with this machine, because the parameters have been grouped and no longer have to be adjusted one by one.

In this section, we will cover the custom settings for each of the 5 original modes: These custom settings are:

- Image Quality
- Line Width Correction
- Duplex Scanning Mode

Settings adjustable for each original mode will also be covered (these do not just affect the custom settings; they also affect all sub original modes, such as sharp text).

- Independent Dot Erase
- Background Erase

Note concerning Photo Mode: There are two sets of custom settings for photo mode. One is for dithering, and one is for error diffusion. The set of custom settings that will be used depends on the setting of SP 4904 002.

Custom Settings for Each Mode: Image Quality

Custom Setting: Text Mode Image Quality

Item		Range	Default	SP No.
Text	25~55%	0~10	5 Normal	SP4903-001
	55.5~75%			SP4903-002
	75.5~160%			SP4903-003
	160.5~400%			SP4903-004

If the value is increased, the outlines of lines become sharper but this could cause moiré to appear in dot patterns. If the value is decreased, image patterns become smoother, the occurrence of moiré decreases, but the corners of characters and intersections of lines at acute angles may not be as sharp.

Custom Setting: Photo Mode (Dithering) Image Quality

Item		Range	Default	SP No.
Photo	25~55%	0~6	3 Print Photo	SP4903-005
	55.5~75%			SP4903-006
	75.5~160%			SP4903-007
	160.5~400%			SP4903-008

Used for coarse, dithered tone photographs such as newsprint.

If the value is increased, the photo becomes sharper, but blurring could occur in the sub scan direction. If the value is decreased, blurring in the sub scan direction is less obvious but outlines become fuzzy.

Custom Setting: Photo Mode (Error Diffusion) Image Quality

Item		Range	Default	SP No.
Photo	25~55%	0~6	1 Normal	SP4903-009
	55.5~75%			SP4903-010
	75.5~160%			SP4903-011
	160.5~400%			SP4903-012

Used for printed materials (magazines, etc.) with photographs to sharp patterns in copies.

If the photos have dithered tones, the image becomes sharper if the value is increased, but blurring could occur in the sub scan direction. If the value is decreased, blurring in the sub scan direction is less obvious but outlines become fuzzy.

Custom Setting: Text/Photo Mode Image Quality

Item		Range	Default	SP No.
Text/Photo	25~55%	0~10	5 Normal	SP4903-013
	55.5~75%			SP4903-014
	75.5~160%			SP4903-015
	160.5~400%			SP4903-016

See the remarks for 'Custom Setting: Text Mode Image Quality' above.

Custom Setting: Pale Mode Image Quality

Item		Range	Default	SP No.
Pale	25~55%	0~10	5 Normal	SP4903-017
	55.5~75%			SP4903-018
	75.5~160%			SP4903-019
	160.5~400%			SP4903-020

If the value is increased, low density areas become sharper, but the background could become dirtier. If the value is decreased, the background disappears but the density of low density areas becomes low.

Custom Setting: Generation Mode Image Quality

Item		Range	Default	SP No.
Generation	25~55%	0~10	5 Normal	SP4903-021
	55.5~75%			SP4903-022
	75.5~160%			SP4903-023
	160.5~400%			SP4903-024

See the remarks for 'Custom Setting: Pale Mode Image Quality' above.

Custom Settings for Each Mode: Line Width Correction**Custom Setting: Text Mode Line Width Correction**

Selection		Range	Default	Content	SP No.
Item	Line Width Correction	0~8	1	0 (Thin) - 4 (Off) - 8 (Thick)	SP4903-080
	Main Scan	0~1	1	0:OFF 1:ON	SP4903-081
	Sub Scan	0~1	1	0:OFF 1:ON	SP4903-082

If the value is made smaller, the line width correction becomes thinner, and if the value is made larger, the line width correction becomes thicker. To switch this feature off, select "4".

If the above settings do not make the lines thin enough, use SP4904 020 (Image Quality Exposure: Thin Line - Text Mode). Normally, SP4904 020 is set to 0 (OFF). As the setting is increased (1~3), the line width correction effect becomes stronger, and lines become thinner. All settings of SP4903 080 will be affected by the same amount.

Custom Setting: Photo Mode Line Width Correction

Selection		Range	Default	Content	SP No.
Item	Line Width Correction	0~8	4	0 (Thin) - 4 (Off) - 8 (Thick)	SP4903-083
	Main Scan	0~1	1	0:OFF 1:ON	SP4903-084
	Sub Scan	0~1	1	0:OFF 1:ON	SP4903-085

See the remarks for 'Custom Setting: Text Mode Line Width Correction' above.

If the above settings do not make the lines thin enough, use SP4904 021 (Image Quality Exposure: Thin Line – Photo Mode). Normally, SP4904 021 is set to 0 (OFF). As the setting is increased (1~3) the line width correction effect becomes stronger, and lines become thinner. All settings of SP4903 083 will be affected by the same amount.

Custom Setting: Text/Photo Mode Line Width Correction

Selection		Range	Default	Content	SP No.
Item	Line Width Correction	0~8	4	0 (Thin) - 4 (Off) - 8 (Thick)	SP4903-086
	Main Scan	0~1	1	0:OFF 1:ON	SP4903-087
	Sub Scan	0~1	1	0:OFF 1:ON	SP4903-088

See the remarks for 'Custom Setting: Text Mode Line Width Correction' above.

If the above settings do not make the lines thin enough, use SP4904-022 (Image Quality Exposure: Thin Line – Text/Photo Mode). Normally, SP4904-022 is set to 0 (OFF). As the setting is increased (1~3) the line width correction effect becomes stronger, and lines become thinner. All settings of SP4903-086 will be affected by the same amount.

Custom Setting: Pale Mode Line Correction

Selection		Range	Default	Content	SP No.
Item	Line Width Correction	0~8	4	0 (Thin) - 4 (Off) - 8 (Thick)	SP4903-089
	Main Scan	0~1	1	0:OFF 1:ON	SP4903-090
	Sub Scan	0~1	1	0:OFF 1:ON	SP4903-091

See the remarks for 'Custom Setting: Text Mode Line Width Correction' above.

If the above settings do not make the lines thin enough, use SP4904 023 (Image Quality Exposure: Thin Line – Pale Mode). Normally, SP4904 023 is set to 0 (OFF). As the setting is increased (1~3) the line width correction effect becomes stronger, and lines become thinner. All settings of SP4903 089 will be affected by the same amount.

Custom Setting: Generation Copy Line Width Correction

Selection		Range	Default	Content	SP No.
Item	Line Width Correction	0~8	0	0 (Thin) - 4 (Off) - 8 (Thick)	SP4903-092
	Main Scan	0~1	1	0:OFF 1:ON	SP4903-093
	Sub Scan	0~1	1	0:OFF 1:ON	SP4903-094

See the remarks for 'Custom Setting: Text Mode Line Width Correction' above.

If the above settings do not make the lines thin enough, use SP4904-024 (Image Quality Exposure: Thin Line – Generation Mode). Normally, SP4904-024 is set to 0 (OFF). As the setting is increased (1~3) the line width correction effect becomes stronger, and lines become thinner. All settings of SP4903-092 will be affected by the same amount.

Custom Setting: Duplex Scanning Mode Original Image Quality Settings**Front Side Quality Adjustment**

Item		Range	Default	Content	SP No.
Front Side Scan	Text	0~3	0	0: Normal 1: Weak 2: Medium 3: Strong	SP4901-010
	Photo				SP4901-011
	Text/Photo				SP4901-012
	Pale				SP4901-013
	Generation Copy				SP4901-014

Rear Side Quality Adjustment

Item		Range	Default	Content	SP No.
Back Side Scan	Text	0~3	0	0: Normal 1: Weak 2: Medium 3: Strong	SP4902-010
	Photo				SP4902-011
	Text/Photo				SP4902-012
	Pale				SP4902-013
	Generation Copy				SP4902-014

Simplex/Duplex Front Side Quality Adjustment

Item	Range	Default	SP No.
Determines if SP4901-010 ~ 014 applies to scanning single-side or single and double-side originals.	0~1	0	SP4901-019

- 0: The adjustment will be applied only for duplex mode front side copies.
 1: The adjustment will be applied for simplex mode, and for front side copies in duplex mode.

Settings Adjustable for Each Original Mode**Independent Dot Erase**

Item	Range	Default	SP No.
Text	0~14	0 (Off)	SP4903-060
Photo			SP4903-061
Text/Photo			SP4903-062
Pale			SP4903-063
Generation Copy			SP4903-064

Independent dot erase removes isolated black pixels. As this setting is increased, the greater the number of eliminated isolated pixels. Setting to zero switches this function off.

Background Erase

Item	Range	Default	SP No.
Text	0~255	0 (Off)	SP4903-070
Photo			SP4903-071
Text/Photo			SP4903-072
Pale			SP4903-073
Generation Copy			SP4903-074

Background erase attempts to eliminate the heavy background texture from copies of newspaper print or documents printed on coarse paper. Pixels of density below the selected threshold level are eliminated. Setting this feature to zero switches it off. Increasing this setting increases the effect of background erase.

6.6.5 RELATION BETWEEN THE SP AND UP SETTINGS

The tables below illustrate the relationship between the UP and SP settings for each of the 5 original modes. The scale across the top of the table is the range of settings for the SP modes.

NOTE: The settings in the gray areas indicate the UP settings overlaid on the SP scale of the table. Words that are not shaded within the tables, such as 'softer', indicate how the image changes if you change the SP setting in a certain direction.

The related UP mode is User Tools – Copier Features – General Features – Copy Quality.

Text Mode

Setting	0	1	2	3	4	5	6	7	8	9	10	SP No.
25% ~55%		Soft				Normal				Sharp		SP4903-001
55.5 ~ 75%												SP4903-002
75.5 ~ 160%												SP4903-003
160.5 ~ 400%												SP4903-004

Photo Mode (Dithering)

Setting	0	1	2	3	4	5	6	SP No.
25% ~55%	Softer			Print Photo			Sharper	SP4903-005
55.5 ~ 75%								SP4903-006
75.5 ~ 160%								SP4903-007
160.5 ~ 400%								SP4903-008

Photo Mode (Error Diffusion)

Setting	0	1	2	3	4	5	6	SP No.
25% ~55%	Softer	Normal				Glossy Photo	Sharper	SP4903-009
55.5 ~ 75%								SP4903-010
75.5 ~ 160%								SP4903-011
160.5 ~ 400%								SP4903-012

Text/Photo Mode

Setting	0	1	2	3	4	5	6	7	8	9	10	SP No.
25% ~55%		Photo Priority				Normal				Text Priority		SP4903-013
55.5 ~ 75%												SP4903-014
75.5 ~ 160%												SP4903-015
160.5 ~ 400%												SP4903-016

Pale Mode

Setting	0	1	2	3	4	5	6	7	8	9	10	SP No.
25% ~55%		Soft				Normal				Sharp		SP4903-017
55.5 ~ 75%												SP4903-018
75.5 ~ 160%												SP4903-019
160.5 ~ 400%												SP4903-020

Generation Copy


Setting	0	1	2	3	4	5	6	7	8	9	10	SP No.
25% ~55%		Soft				Normal				Sharp		SP4903-021
55.5 ~ 75%									SP4903-022			
75.5 ~ 160%									SP4903-023			
160.5 ~ 400%									SP4903-024			

Detailed
Descriptions

6.6.6 IMAGE PROCESSING TROUBLESHOOTING

Removing Background from Coarse Paper


NOTE: If text fades and thin lines appear broken, then adjust SP4903 080~082 (Text Mode – Select Thick Lines for Line Width Correction).

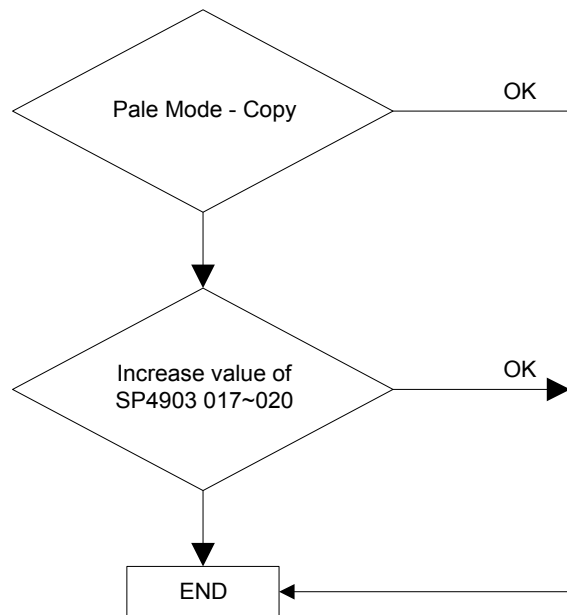

B246D816.WMFF

Improving the Appearance of a Copy of a Color Document

NOTE: If text fades, adjust SP4903 089~091 (Pale Mode – Select Thick Lines for Line Width Correction).

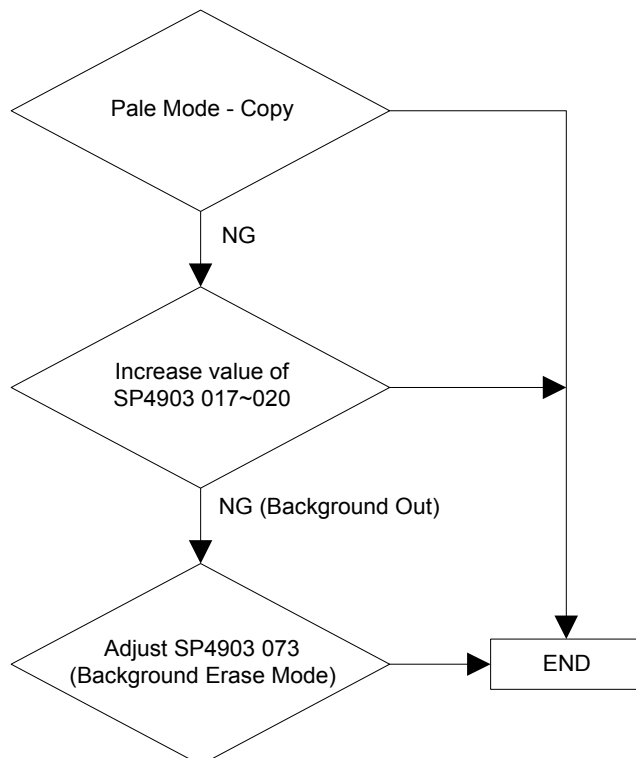


B246D817.WMFF

Removing Vertical White Lines During Duplex Scanning

During duplex scanning, the CCD scans the front side and the CIS scans the rear side. In Text, Pale, or Generation Copy mode, when there are halftones (such as photos) on the rear side, vertical white lines may appear in these areas. This is because of gaps at the junctions between blocks of elements in the CIS (there is a junction every 25 mm). If this occurs, adjust SP4902 010~014 (Image Adjust Mode – Back Side Scan). Increasing the value reduces the white stripes, but could reduce resolution slightly. Otherwise, try using Text/Photo mode.

NOTE: Each original mode has a separate adjustment.

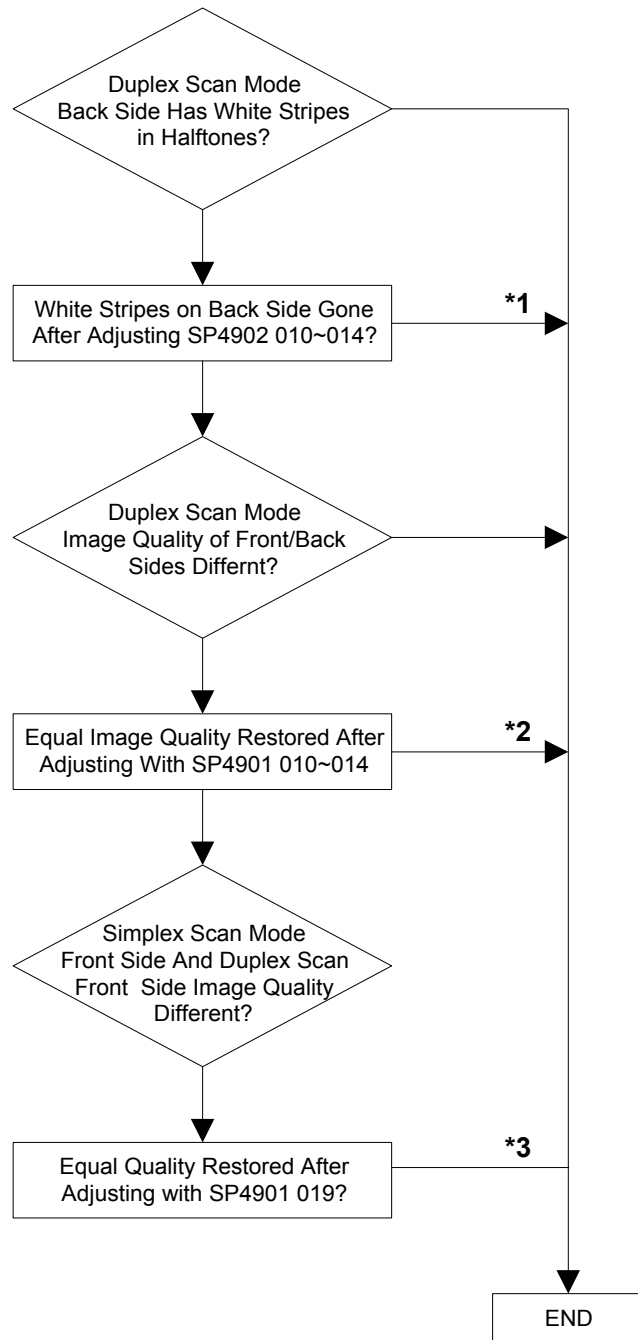

*1: Front Side Quality Adjustment

*2: Rear Side Quality Adjustment

*3: Simplex/Duplex Front Side Quality Adjustment

Detailed
Descriptions

B246D818.WMFF

Equalizing Duplex Scanned Image Quality of Front/Back Sides

During duplex scanning, when SP4902-010~014 is adjusted, only the back side is affected, so you may see a slight difference in the quality of the images scanned from the front and back sides of the same page. You can adjust the quality of the front side image by changing SP4901-010~014 (Image Quality Adjustment For Front Side Scan). This mode is enabled for the Custom Setting original mode only.

NOTE: Each original mode has a separate adjustment.

Equalizing Image Quality of Front Sides for Duplex and Simplex Modes

Normally, the front side adjustment (SP4901-010~014) is only applied for duplex jobs. So, you may see a slight difference in the quality of images scanned in simplex mode and for the front sides of duplex mode jobs.

If you change SP4901-019 to 1, the front side image quality adjustment (SP4901 010~014) will be applied to both duplex and simplex jobs. This mode is enabled for the Custom Setting only.

SP4901-019

0: Enabled for Duplex Only (default setting)

1: Enabled for Simplex and Duplex Scanning

6.7 LASER EXPOSURE


6.7.1 OVERVIEW

There are four laser diodes. Four parallel beams write four lines at once, 24 lines with one complete rotation of the polygon mirror, with the polygon motor rotating at 42,756 rpm.

Multiple beam scanning achieves:

- Longer life of the polygon motor (four-beam scanning requires fewer motor rotations)
- Quieter operation because fewer polygon motor revolutions are required.

Up to 5 image density levels (0 ~ 4) are used for each pixel. To achieve this, this machine controls the duration of the laser exposure using PWM (Pulse Width Modulation).

( Digital Processes> Printing> Laser Printing> Image Processing)


The strength of each beam is 10 mW/channel at a wavelength of 788 nm.

Specifications

LD Unit	Semi-conductor laser encased in an aluminum die-cast bracket.
	Wavelength: 788 nm
	Output: 10 mW/channel (13.3 mW/channel for B246 Series)
	4-beam exposure
	APC (Auto Power Control) provided
	Gradation control with PWM
Line Scanning	Light weight, aluminum die-cast housing
	Main line scanning by polygon mirror
	F θ lens controls the beam position and focus in the main scan direction.
	Beam focus correction by WTL.
Polygon Motor	42,756 rpm

NOTE: 1) A new ceramic shaft increases the durability of the polygon motor.
 2) This machine uses APC (Auto Power Control), so no adjustments are required when the LD unit is replaced.

6.7.2 OPTICAL PATH

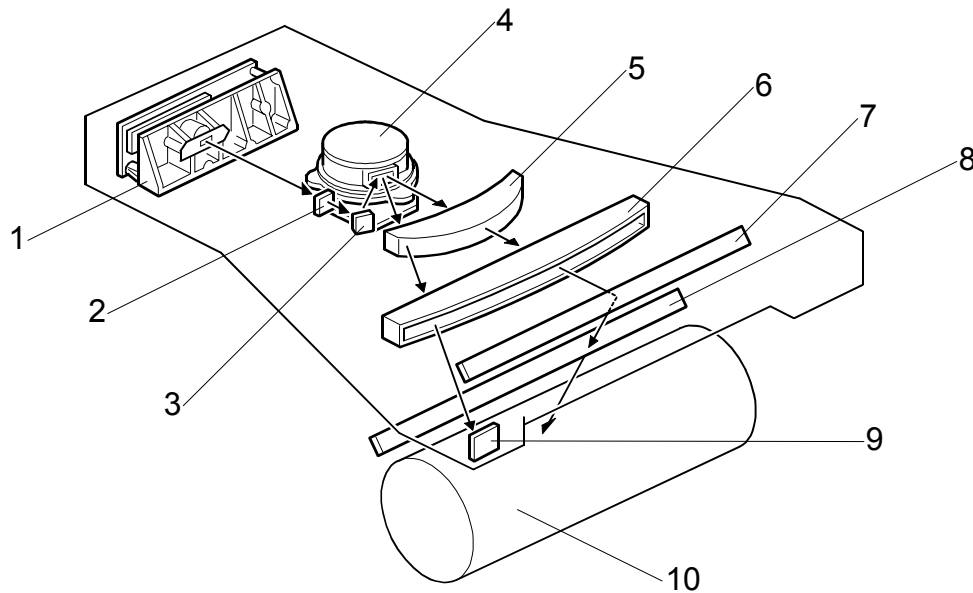


B246D901.WMF

- | | |
|---------------------------|---------------------------------|
| 1. LD Unit | 6. WTL |
| 2. Cylindrical Lens | 7. 2nd Mirror |
| 3. 1st Mirror | 8. Toner Shield Glass |
| 4. Polygonal Mirror Motor | 9. Laser Synchronizing Detector |
| 5. Fθ Lens | 10. OPC Drum |

The optical path is a standard arrangement, starting at the LD unit and ending with the creation of the latent image on the OPC drum. (Digital Processes> Printing> Laser Printing> Image Processing> Optical Components)

6.7.3 FOUR-BEAM EXPOSURE

The LD unit uses four laser diodes to scan four lines simultaneously. The diodes are fixed at 1200 dpi, so beam pitch adjustments are not required.

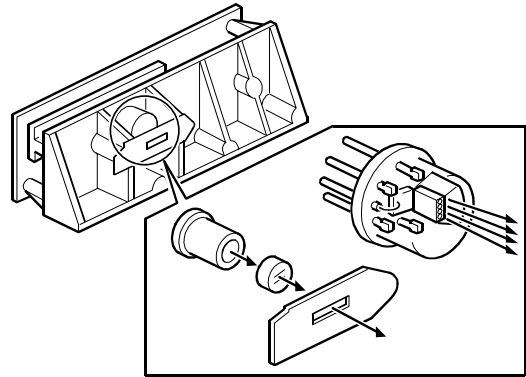


B246D902.WMF

The diagonal arrangement of the four beams achieves 1200 dpi.

600 dpi 8-bit scanner data is converted to 1200 dpi 1-bit digital data during image processing.


When edge processing or smoothing (FCI fine character adjustment) is used, one-bit data is converted to grayscale data in the LD driver circuit board.

Greyscale control: The greater the exposure time of the laser beam, the darker the pixel. The duration (width) of the pulse is adjusted with PWM (pulse width modulation) in 5 steps.

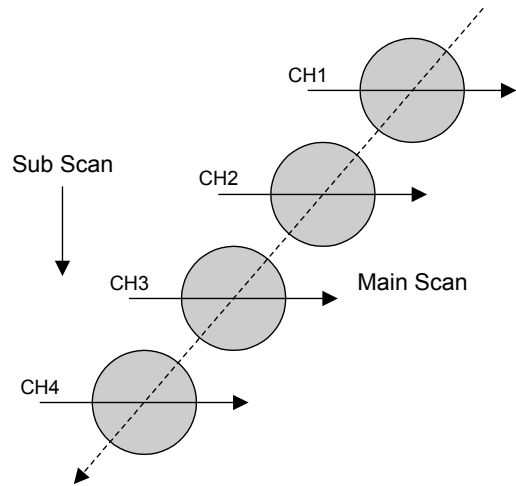

B246D903.WMF

6.7.4 COOLING FAN

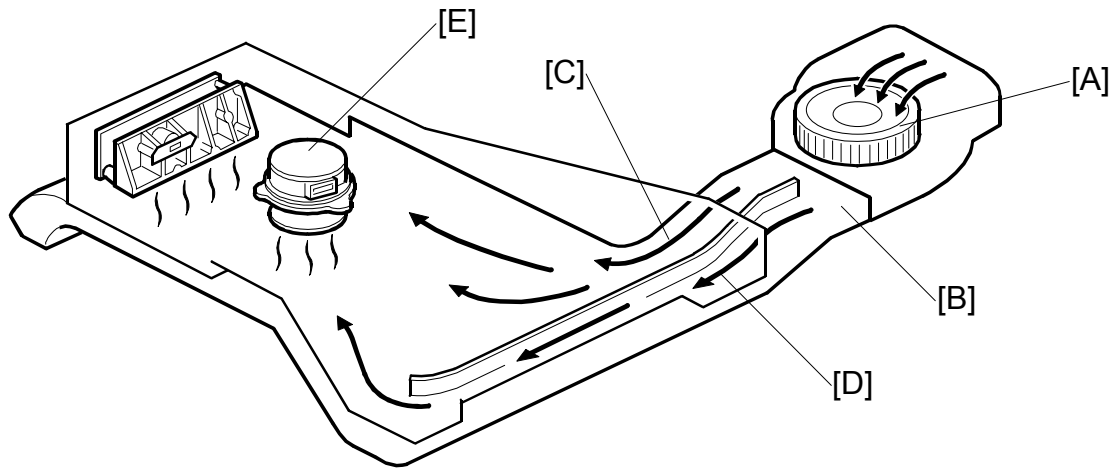

B246D904.WMF


The cooling fan [A] at the back of the machine blows air through the duct [B] and sends it above and below the laser exposure unit. The fan switches on and off with the polygon motor.

The air [C] above passes through a dust filter before it reaches the optical path. The air passing below [D] flows over the top of the fusing unit and is expelled by the fusing cooling fan.

The polygonal mirror motor [E] normally remains on. It shuts down when the machine is powered off or enters the auto off mode or night mode.

6.7.5 LD SAFETY SWITCHES


B064 Series, B140 Series Safety Switches

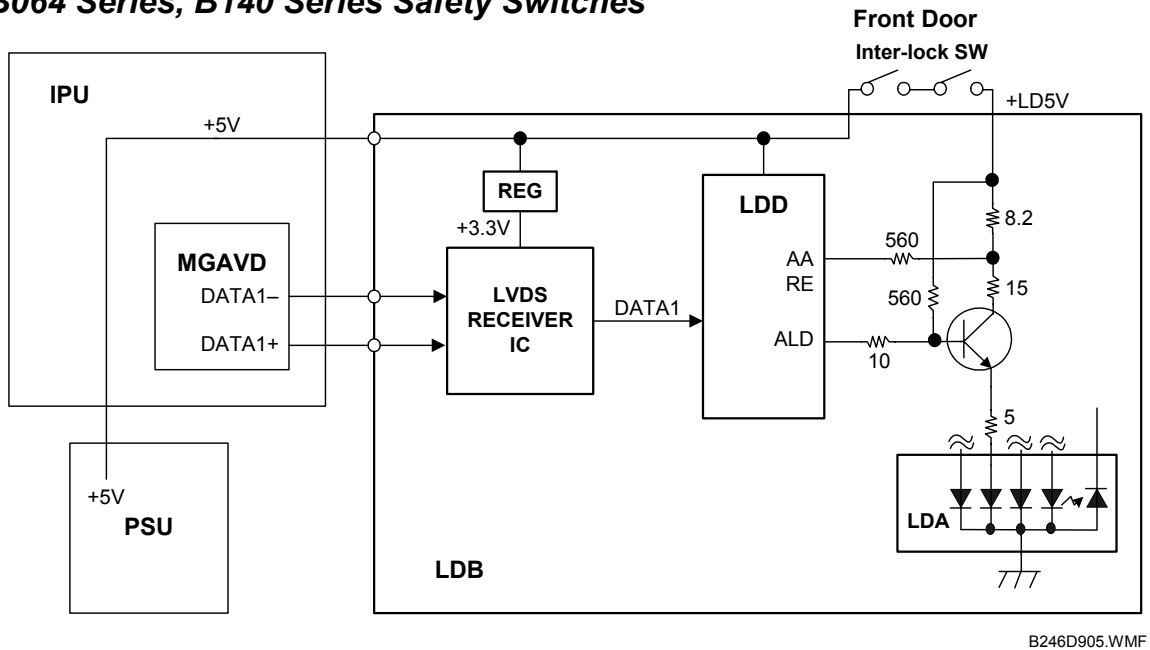

To ensure the safety of customers and customer engineers, two switches inside the cover prevent the laser beams from switching on accidentally.

When the front cover is open, the 5V line connecting each LD driver on the LD control board is disconnected.

B246 Series Safety Switches




To ensure the safety of customers and customer engineers, two switches inside the cover prevent the laser beams from switching on accidentally.

When the front cover is open, the line connecting each LD driver on the LD control board is disconnected.

6.8 DRUM UNIT

6.8.1 OVERVIEW

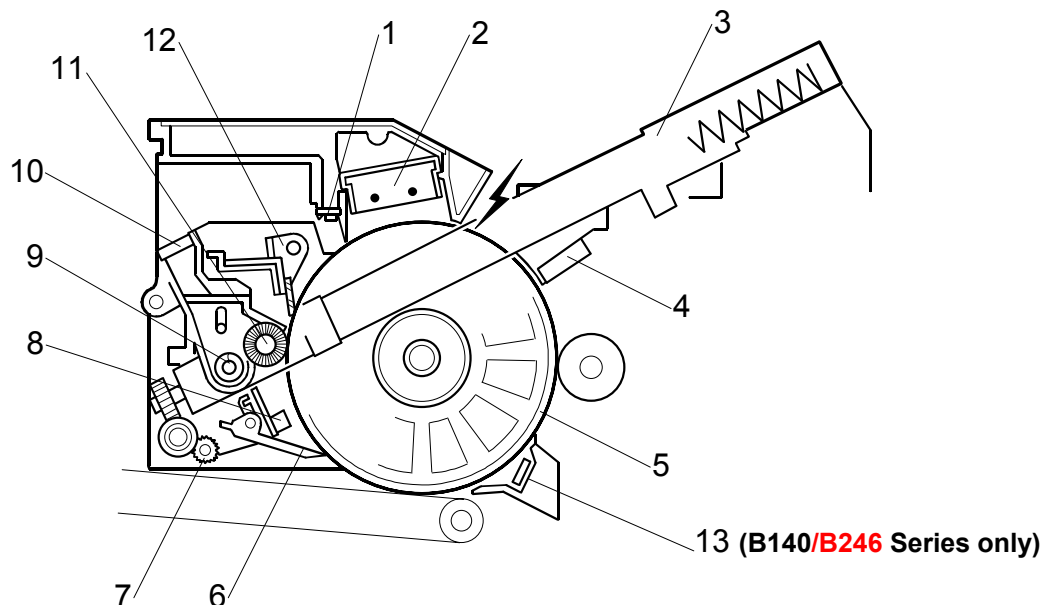

- | | |
|--------------------------|-----------------------------|
| 1. Quenching Lamp | 8. ID Sensor |
| 2. Charge Corona Unit | 9. Toner Collection Coil |
| 3. Toner Recycling Pipe | 10. Pressure Release Filter |
| 4. Drum Potential Sensor | 11. Cleaning Brush |
| 5. OPC Drum | 12. Cleaning Blade |
| 6. Pick-off Pawls | 13. PTL (Pre-Transfer Lamp) |
| 7. Pick-off Pawl Spurs | |

The OPC drum (diameter 100 mm) is charged by the charge corona unit, a standard Scorotron grid wire charging and cleaning system.

The drum motor drives the drum and the drum cleaning unit. A counter blade system, with both cleaning blade and brush, clean the drum.

Two sensors mounted near the drum, an ID sensor and potential sensor, are used for process control.

Toner is collected at the cleaning area and transported back to the development unit via the toner collection coil and toner recycling pipe.


B140/B246 series

The PTL removes the charge on the drum. This makes better paper separation. Also, with the PTL, pawl marks do not occur on the leading edges of copies. The PTL only operates when the machine prints on plain or translucent paper. (➡6.8.4)

6.8.2 OPC DRUM

The OPC drum [A] contains ventilation holes [B] to prevent overheating.

A ground (earth) brush [C] at the back grounds the drum unit.

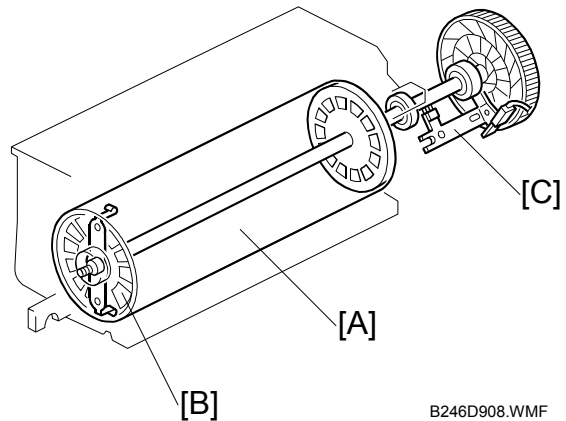


B246D908.WMF

6.8.3 DRUM DRIVE

The drum motor [A] drives both the OPC drum and the cleaning unit.


A flywheel [B] on the drum drive shaft [C] reduces drum vibration. The other drive shaft [D] drives the cleaning unit.

The drum drive shaft [C] drives the drum at 362 mm/s.

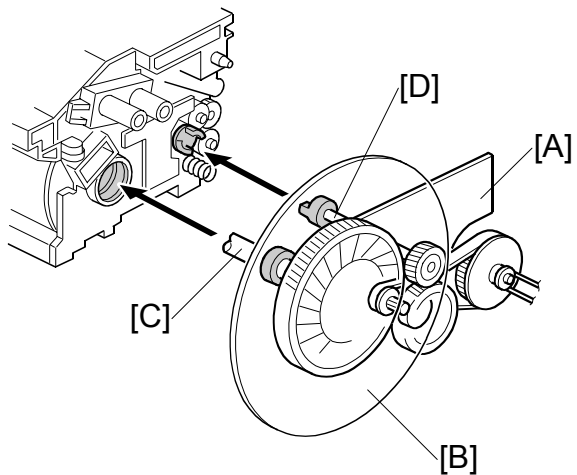

B246D909.WMF

6.8.4 DRUM CHARGE

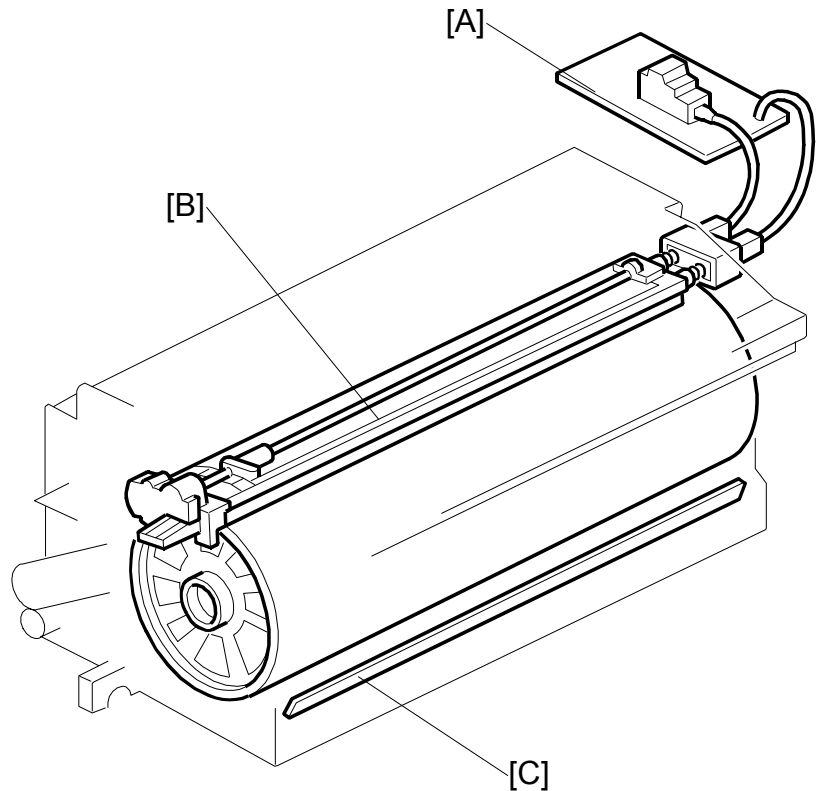

B246D910.WMF

The charge power pack [A] provides an even negative charge to the two charge corona wires in the charge corona unit [B].

(**CT** Photocopying Process> Charge> Corona Charge> **Scorotron Method**)

B140/B246 Series


The PTL [C] makes better paper separation from the drum, and stops pick-off pawl marks on the leading edges of copies. The PTL removes the charge at the leading edge when copying on plain paper or translucent paper.

(**CT** Photocopying Processes - Image Transfer And Paper Separation - Pre-Transfer Potential Reduction)

NOTE: The PTL lamp does not operate when copying with OHP, index sheets, or thick paper.

With SP2602 (PTL Setting), you can adjust the distance from the leading edge where the PTL turns on to remove charge. There is an adjustment for the front side and one for the back side. For more, see section "5. Service Tables".

6.8.5 CHARGE CORONA WIRE CLEANING

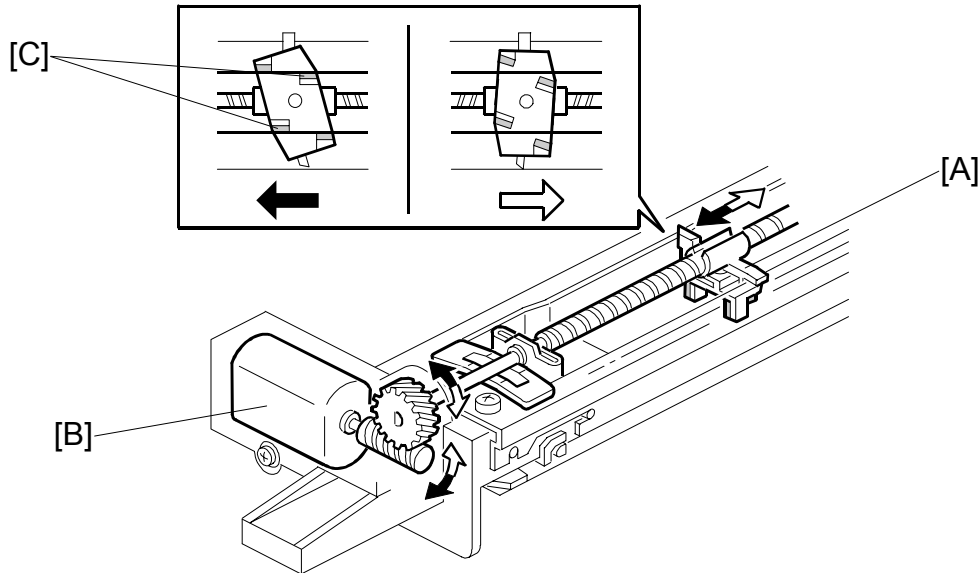

Air flowing around the charge corona unit deposits toner particles on the wires. These particles interfere with charging and cause pale bands on copies.


The wire cleaner [A] normally remains at the home position at the front end.

To clean the wires, the charge corona wire cleaner motor [B] switches on and drives the cleaner [A] to the rear, then back to the home position.

The wire cleaner rotates slightly on the forward pass to bring the cleaning pads [C] into contact with the wires. Cleaning is done only on the forward pass. The pads do not contact the wires on their return to home position.

The motor [B] switches on after the machine is switched on, but only after 5,000 or more copies have been made since the last wire cleaning.

6.8.6 DRUM PICK-OFF MECHANISM

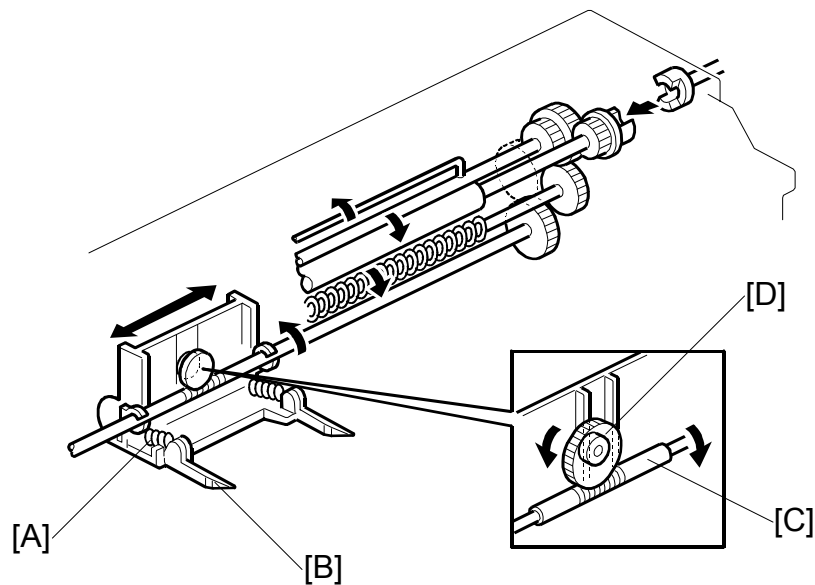


B246D912.WMF

Pick-off pawls ride along the surface of the drum to peel off paper that has not separated from the drum.


Weak spring pressure [A] keeps the pick-off pawls [B] against the surface of the drum.

During copying, a shaft [C] turns a cam [D]. The cam moves the pick-off pawls from side to side to prevent drum wear at any fixed location.

6.8.7 DRUM CLEANING

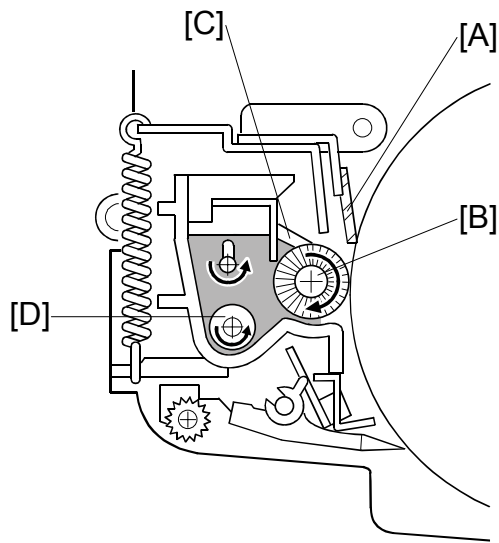

B246D914.WMF

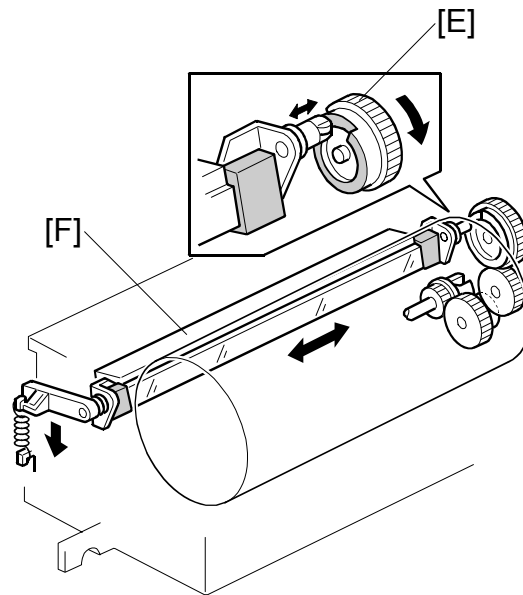

B246D913.WMF

This machine uses a counter blade and brush system.

The drum cleaning blade [A] contacts the drum, and is angled against the direction of rotation to improve cleaning.

- A cam [E] moves the cleaning blade [F] slightly from side to side to prevent it from scouring the drum.

The cleaning brush [B] rotates and removes some toner from the drum, and collects the toner removed by the cleaning blade.


The mylar [C] scrapes toner from the cleaning brush.

The toner collection coil [D] receives the toner that falls from the mylar and transports it to the toner collection bottle.

At the end of every job, the drum reverses about 10 mm to remove toner that has collected at the edge of the counter blade.

The drum motor drives the cleaning unit, as described in an earlier section.

6.8.8 DRUM VENTILATION AND OZONE FILTER

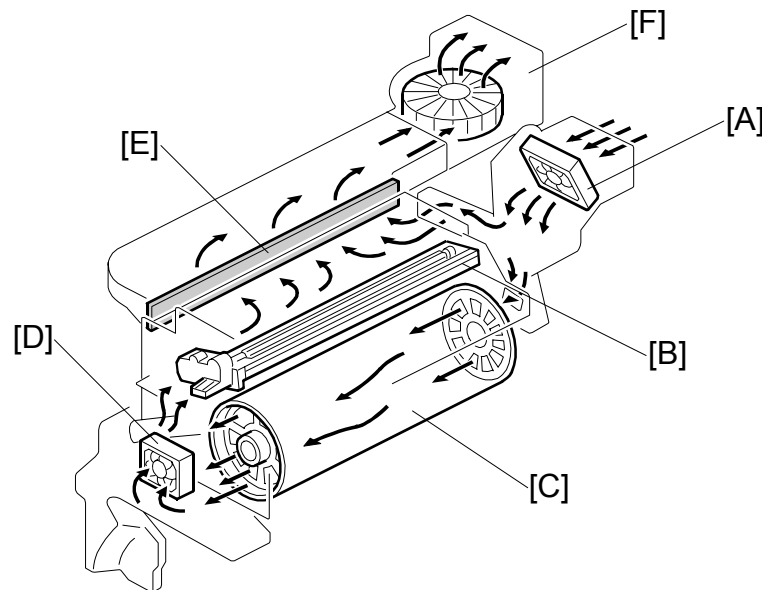

B246D915.WMF

Cooling prevents uneven buildup of negative ions which can lead to uneven charge on the drum surface.

The drum cooling fan [A] draws cool air into the machine and sends it over the charge corona unit [B] and down through the vents in the ends of the drum [C].

The PCU cooling fan [D] cools the drum and charge corona unit from the other end.


The dust filter [E] above the charge corona unit absorbs ozone in the air coming from around the drum.

The exhaust fan [F] vents the hot filtered air from inside the machine.

Fan	Operation Timing
Drum cooling fan	Turns on and off at the same time the polygon motor
PCU cooling fan	Stays on when the fusing lamp temperature is being controlled (at all times except in auto off or night mode).
Exhaust fan	Switches on after the main power switch is turned on, and remains on. However, to reduce noise and conserve energy, this fan turns slower when the drum motor is off.

Detailed Descriptions

6.8.9 TONER RECYCLING

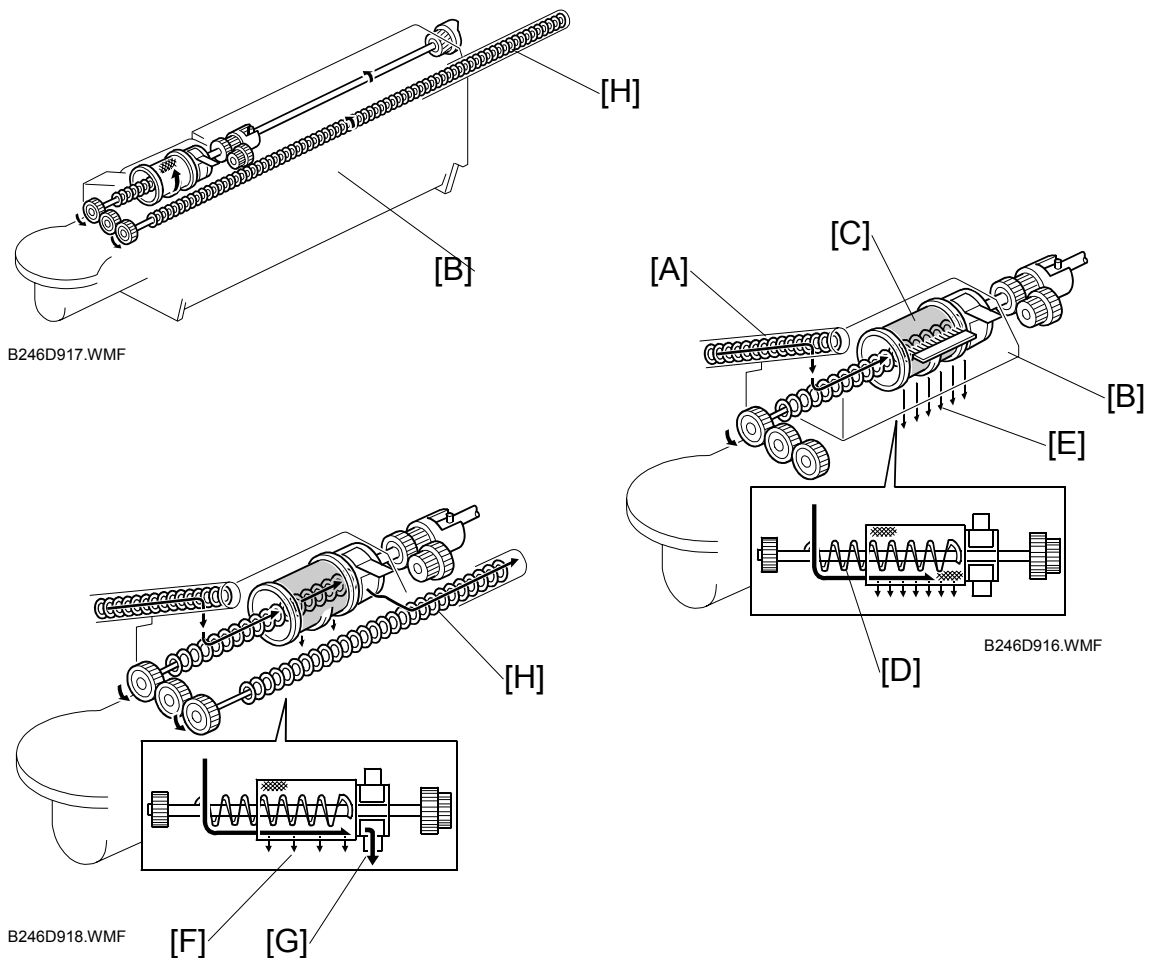


The toner collection coil inside the toner recycling pipe [A] carries toner collected from the drum cleaning unit into the toner separation unit [B] (above the toner hopper).

Re-usable toner is separated here from waste toner. Sieve [C] sifts the toner, and brush [D] inside the sieve moves the toner forward.


- Reusable toner [E] falls through the sieve into the toner hopper. A fine brush outside the sieve prevents toner from plugging the mesh of the sieve.
- Waste toner [F] does not fall through the sieve. It is pushed through opening [G] to the waste toner transport coil [H]. The coil moves the toner towards the back of the machine, where it is deposited in the waste toner bottle.

The toner separation unit and waste toner transport coil [H] are connected to the same drive shaft (driven by the development motor).

6.8.10 WASTE TONER COLLECTION

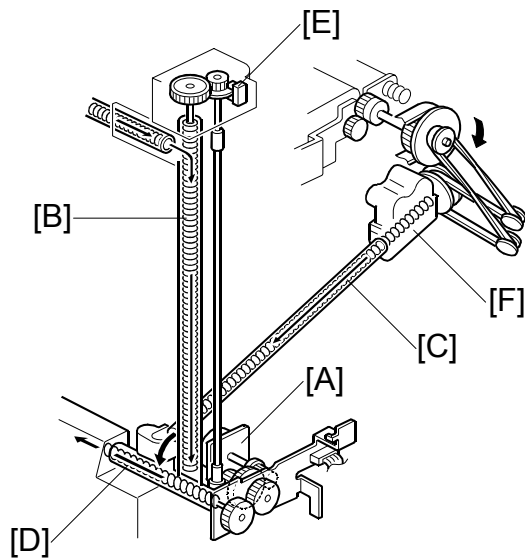

B246D919.WMF

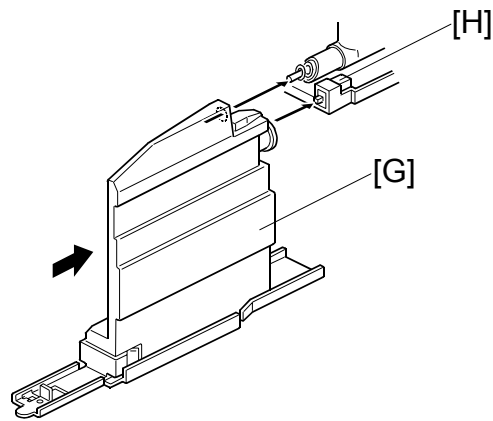

B246D920.WMF

Mechanism

The toner collection motor [A] drives the coils [B, C, and D].

- Coil [B] brings waste toner from the toner hopper (which originally came from the drum cleaning unit)
- Coil [C] brings waste toner from the transfer unit.
- Coil [D] transports waste toner from both sources to the toner collection bottle.

The toner collection bottle can hold 5000 cc of waste toner, equivalent to about 1,000K copies.

Motor [A] switches on and off at the same time as the drum motor.

Error Detection

The toner collection motor sensor [E] monitors the gear driven by motor [A]. If the sensor output does not change for 3 seconds while motor [A] is on, then SC590 (Toner Collection Motor Error) is logged.

If the toner collection coil sensor [F] (not shown) does not change within 3 seconds after the drum motor turns on, the transport coil is clogged and cannot rotate, then SC495 (Toner Recycling Unit Error) is logged.

When the toner overflow switch (not shown) detects that the toner collection bottle [G] is full, operation halts after an additional 100 copies and the machine prompts the user to replace the toner collection bottle.

The toner collection bottle set switch [H] detects when a new toner collection bottle is installed. If installing a new bottle does not reset the machine, SC496 (Toner Collection Bottle Error) is logged.

6.8.11 PROCESS CONTROL

Drum potential gradually changes for the following reasons:

- Dirty scanning optics (lenses, mirrors), dirty exposure glass
- Dirty charge corona casing, grid plate
- Deterioration of drum sensitivity

What Happens at Power On

Here is a description of what happens while the fusing temperature is below 100°C immediately after the main power switch is switched on **or when recovering from auto off mode** (process control must also be enabled with SP3901, or this will not happen).

At any time, this process can also be executed manually by using SP2962. However, process control must be enabled with SP3901 and the fusing temperature must be below 100°C, or this will not work.

1. Potential sensor is calibrated.
2. Drum starts first rotation after fusing temperature reaches 140°C.
3. Readout from the potential sensor is used to adjust:
 - Development bias (Vb)
 - Grid voltage (Vg)
 - Laser diode (LD) power.

NOTE: This step occurs only if process control is enabled with SP3901 (Auto Process Control On/Off Setting). If this SP is disabled, then:

- Development bias is set to the value stored in SP 2201 001
- Grid voltage is set to the value stored in SP 2001 001
- Laser power is set to a fixed value

4. ID sensor is calibrated (Vsg).
5. TD sensor is calibrated (Vref).

NOTE: These calibrations are used to determine toner supply, so it is very important that the developer be initialized with SP2963 (Installation Mode) at installation and with SP2801 (TD Sensor Initialization) when the developer is replaced.

Any SC codes that are generated during auto process control are logged in the memory and do not appear. The machine will continue to operate.


B140/B246 series: Steps 2, 4, and 5 are not done if SP3904 is set to 0 (default) or 1.



Drum Potential Sensor Calibration

The potential sensor output is affected by the distance of the sensor from the OPC, paper dust or other matter on the surface of the sensor, and environmental conditions. For these reasons, the potential sensor is calibrated often, as described below.

1. 100 samples are taken at -100V and at -800V , and the readings are averaged.

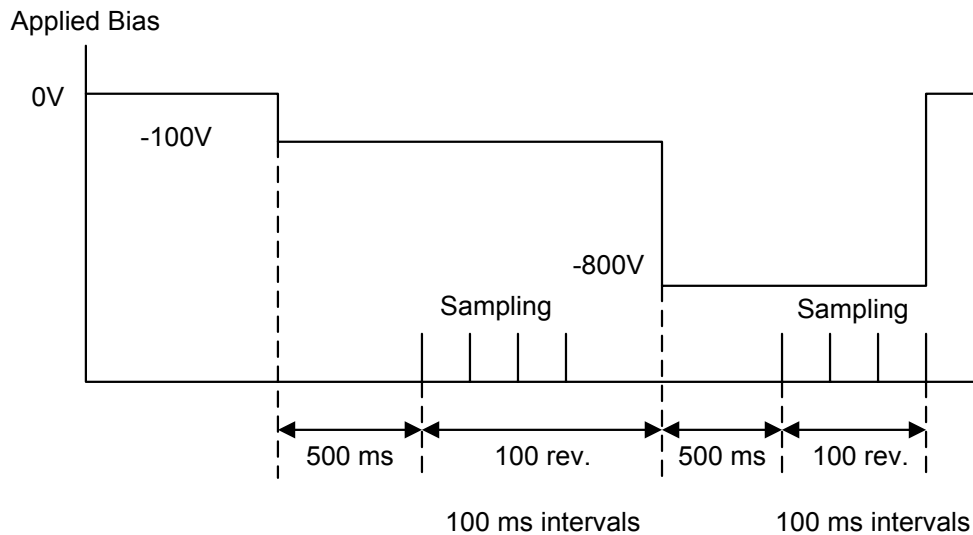

B246D921.WMF

2. If the readings are within the normal range, then these readings are used to calibrate the potential sensor.

If the variations in the readings exceed the specified range, then an SC is logged (Sensor Calibration Error, SC310 to SC317) and automatic process control halts. The charge grid voltage V_g , development bias, and LD power are set as follows.

- Development bias is set to the value stored in SP2201-001
- Grid voltage is set to the value stored in SP2001-001
- Laser power is set to a fixed value

Development Bias, Bias Grid, and LD Adjustment***Development Bias (Vb)***

First, the development bias that will be used for copying (Vb) is determined by measuring the potential of a pattern made on the drum using a fixed grid voltage, development bias, and laser power.

1. The drum motor starts.
2. The grid voltage, development bias, and laser power are set to the default values that would be used if process control was disabled. These are as follows:
 - Development bias is set to the value stored in SP2201-001
 - Grid voltage is set to the value stored in SP2001-001
 - Laser power is set to a fixed value
3. A VL pattern is made on the drum, and VL is measured. The target value of VL is -130V .
VL: Potential measured after exposing a white pattern
4. Vb is adjusted to a value that is calculated to bring the value of VL to -130V . There are no limitations on the amount of change that can be made to Vb.

Grid Voltage (Vg)

Then, the machine determines the corona grid voltage (Vg) that will be used during copying. This is done as follows:

1. A Vd pattern is exposed on the drum (if developed with toner, this will be black).
Vd: Drum potential in black areas after exposure.
2. The potential sensor reads the potential, Vd, from this pattern.
3. Vd should be $-800 \pm 10\text{V}$. If it is within this range, the current value of Vg will be used for copying.
 - If it is not, $-(Vd + 800)\text{V}$ is added to Vg, and the process starts again from step 1.
4. If Vd cannot be adjusted to this standard within 5 attempts, Vg is fixed to $-1,000\text{V}$ and SC312 (Potential Sensor Calibration Error 3) is logged.

LD Power

Finally, the machine determines the laser diode power that will be used during copying. This is done as follows.

1. The laser power is changed to the value needed to write a halftone pattern to the drum.
2. The potential sensor reads the potential, V_h , from this pattern.
 V_h : Standard halftone drum potential
3. V_h should be -300 ± 20 V. If it is within this range, the current value of the laser power will be used for copying.
 - If it is not, the laser power changes by 3 units, and the process starts again from step 1.
 - The laser power cannot be changed by more than ± 60 units.
4. If V_h cannot be adjusted to this standard within 25 attempts, LD power is set to the most recent value and SC314 (Potential Sensor Calibration Error 4) is logged.

ID Sensor Calibration (Vsg)

After power-on, Vsg (the ID sensor output from reading the bare drum) is set to 4.00 ± 0.2 V by changing the intensity of the light from the sensor shining on the drum. This can also be done at any time with SP3001-002 (ID Initial Setting – Vsg).

The calibrated ID sensor output will be used for calibrating the TD sensor (described below).

NOTE: If the ID sensor output cannot be adjusted to the standard, then after 20 seconds SC353 or SC354 is issued. Toner supply during copying will then be controlled using the TD sensor only, until the machine is repaired.

TD Sensor Calibration (Vref)

Next, Vref (TD sensor reference voltage) is updated using the latest calibration values from the ID sensor.

Vref is updated to stabilize the concentration of toner in the development unit. By shifting the value of Vref, the density of the ID sensor pattern image is controlled. Toner supply control is covered in the Development and Toner Supply section.

Vref is determined from a table in the machine software, using the following values:


- Vsp/Vsg
Vsp: ID sensor output when checking the ID sensor pattern.
Vsg: ID sensor output when checking the bare drum.
- Vref-Vt:
Vref is the TD sensor reference voltage
Vt is the current output voltage of the TD sensor.

NOTE: If the ID sensor could not be calibrated during the latest process control (when measuring Vsg), then the previous ID sensor value is used.
If the ID sensor output is abnormal when measuring Vsp, SC350, 351, or 352 is issued, and Vref is not updated (the machine uses the previous value).

6.9 DEVELOPMENT AND TONER SUPPLY

6.9.1 OVERVIEW

Development Unit

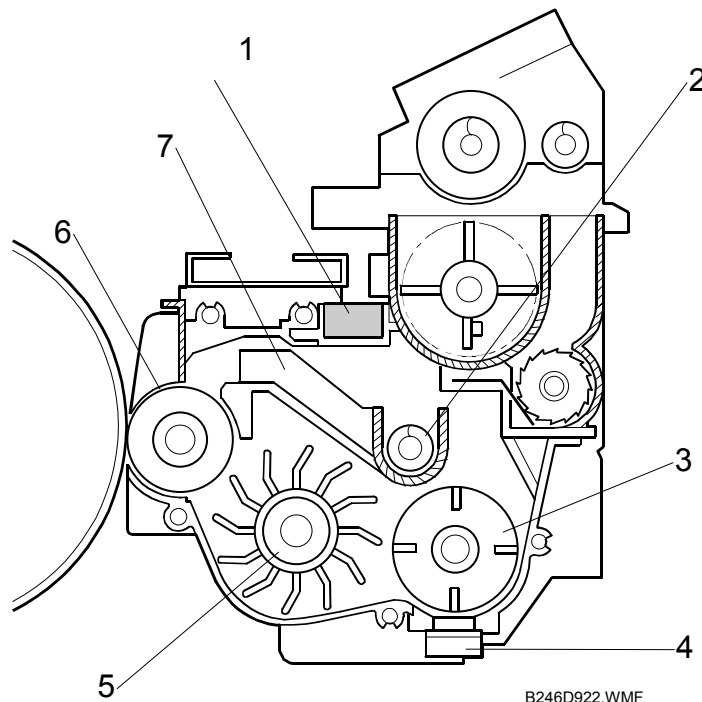

- | | |
|-----------------------|------------------------------|
| 1. Development Filter | 5. Paddle Roller |
| 2. Toner Auger | 6. Development Roller Sleeve |
| 3. Developer Agitator | 7. Separator |
| 4. TD Sensor | |


Detailed
Descriptions

This machine uses dual-component development.

The development unit has its own motor.

The toner concentration is monitored with the ID sensor and TD sensors.

The toner auger, separator, developer agitator, and paddle roller mix and transport the developer and toner. The development power pack applies development bias to the development roller.

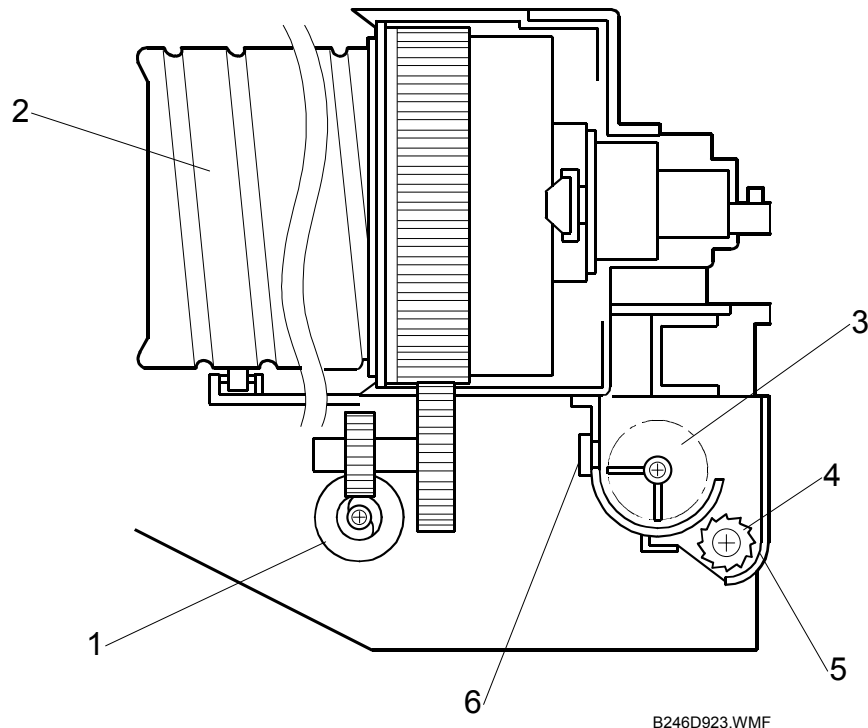Toner Supply


1. Toner Supply Motor
2. Toner Bottle
3. Toner Agitator
4. Toner Supply Roller
5. Toner Hopper
6. Toner End Sensor

The toner supply roller carries toner from front to back in the hopper and into the development unit.

The toner supply motor rotates the toner bottle to supply toner. The cap of the bottle seals itself immediately when the toner bottle is removed from its holder.

A toner recycling system separates waste toner from toner that can be re-used. Reusable toner is carried to the development unit, and waste toner is sent to the waste toner bottle.

6.9.2 DEVELOPMENT UNIT

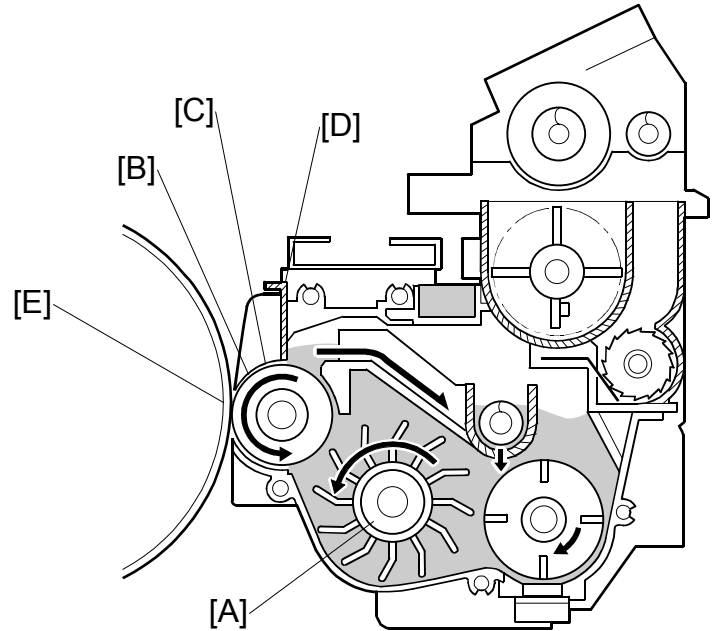


B246D924.WMF

- [A]: Paddle roller
- [B]: Development roller
- [C]: Development roller sleeve
- [D]: Doctor blade
- [E]: OPC drum

( Photocopying Process> Development> Dual-component Development)


Detailed
Descriptions

6.9.3 DEVELOPER/TONER MIXING (AGITATION)

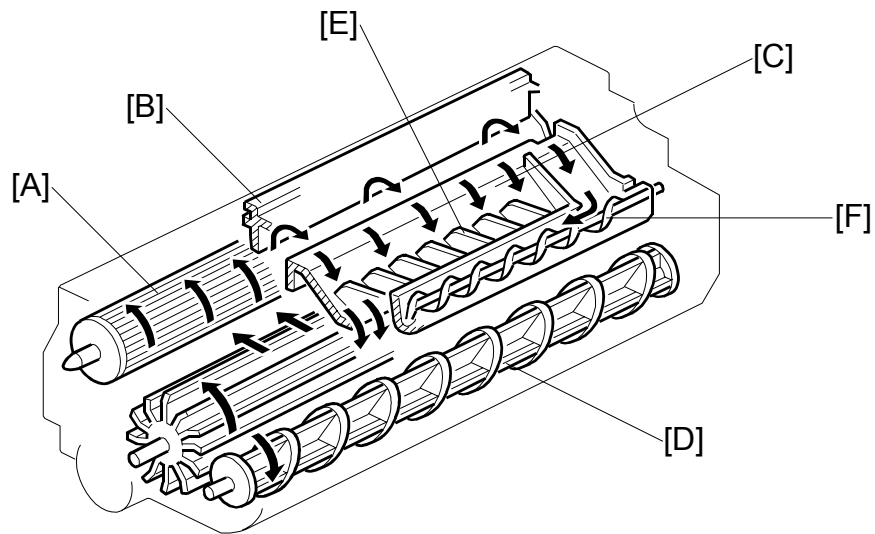


B246D925.WMF

- [A]: Development roller
- [B]: Doctor blade
- [C]: Backspill plate
- [D]: Agitator
- [E]: Mixing vanes
- [F]: Auger

( Photocopying Process> Development> Crossmixing)


6.9.4 DEVELOPMENT BIAS

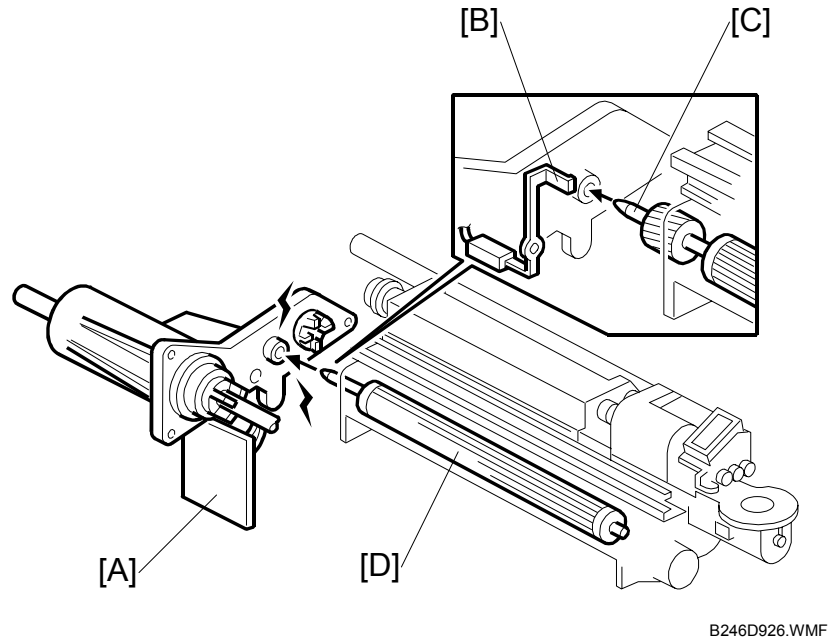

Development power pack [A] applies -550V through terminal [B] to the shaft [C] of the development roller [D]

Bias is also applied to the lower casing to prevent toner from being attracted back from the drum.

6.9.5 TONER SUPPLY

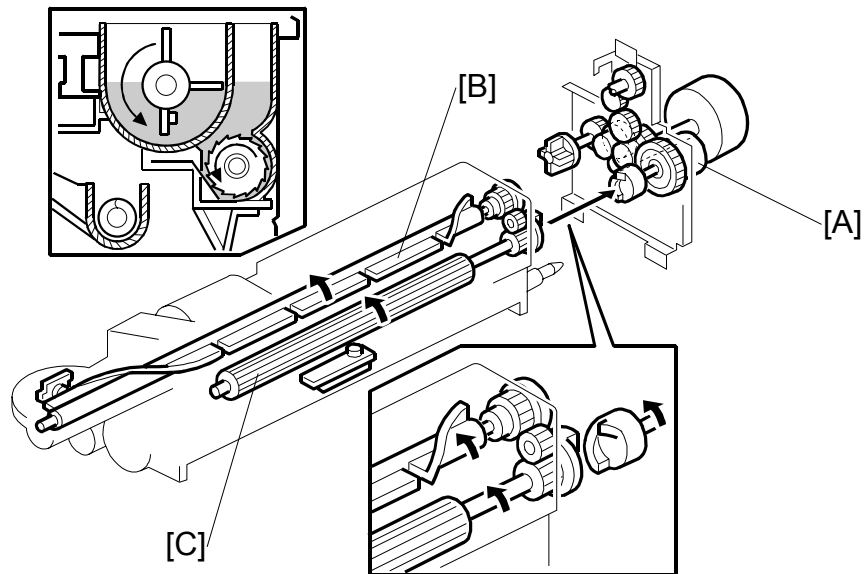



B246D927.WMF

The ID sensor and TD sensor control toner density. The output of these two sensors determines when to switch the toner supply clutch [A] on. The clutch transfers drive from the development motor to the toner supply mechanism.

When the toner supply clutch turns on, the agitator [B] mixes the toner in the hopper and sends it to the toner supply roller [C].

Toner is caught in the grooves in the toner supply roller. Then, as the grooves turn past the opening, the toner falls into the development unit.

6.9.6 DEVELOPMENT UNIT DRIVE AND VENTILATION

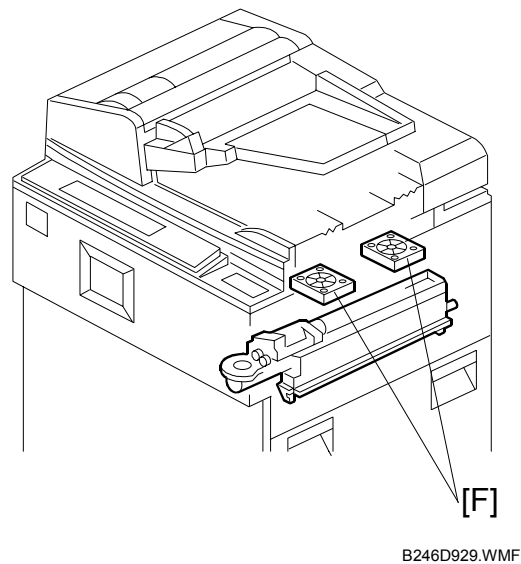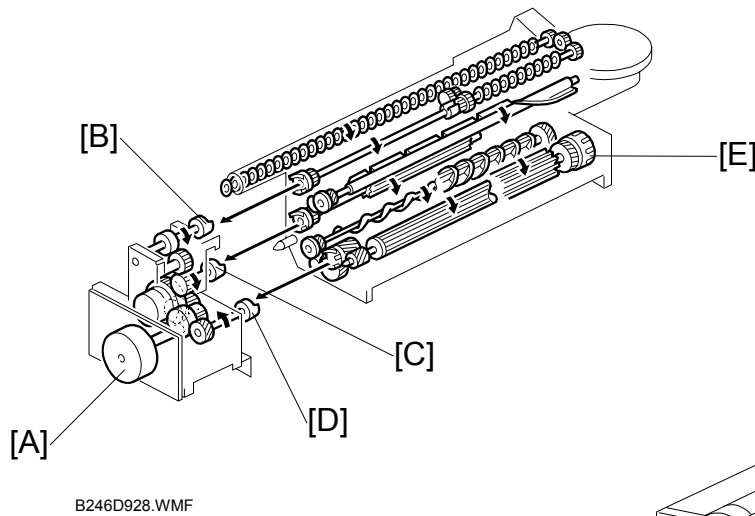


The development motor [A] (a dc motor) drives the following units through three drive shafts: toner separation unit [B], toner supply unit [C], and development unit [D].

The knob [E] attached to the paddle roller can be rotated in one direction only. Use this knob just after adding new developer, to apply an even coating of developer to the development roller sleeve.

Two cooling fans [F] above the bypass tray draw in air to cool the development unit. Both fans switch on when the drum motor switches on, then both switch off 110 seconds after the drum motor switches off.


6.9.7 TONER END SENSOR

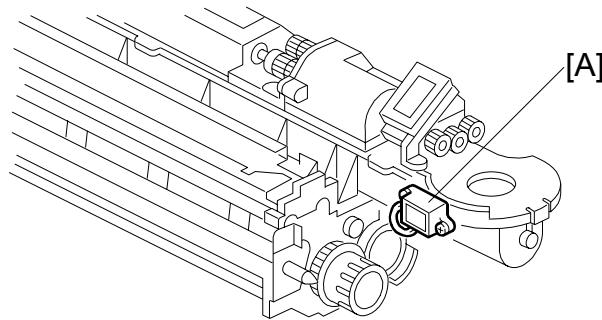

B246D930.WMF

The toner end sensor [A], a piezoelectric sensor (a sensor sensitive to pressure) is attached to the toner hopper.

6.9.8 SHUTTER MECHANISM

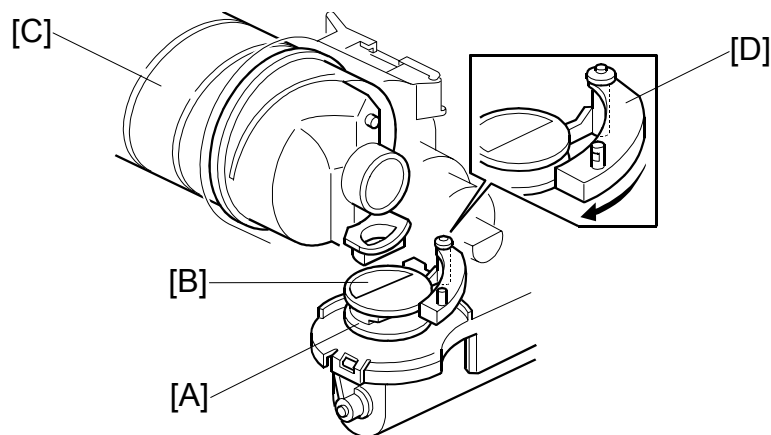


B246D931.WMF

When the toner bottle holder is opened, a self-sealing shutter prevents toner spill.

The top of the shutter [A] has a semi-circular opening [B]. Normally, toner from the toner bottle [C] flows through this opening into the hopper below.

However, pulling out the shutter cover [D] closes the cover automatically to prevent toner spill from the hopper.

6.9.9 TONER BOTTLE SUPPLY AND VENTILATION

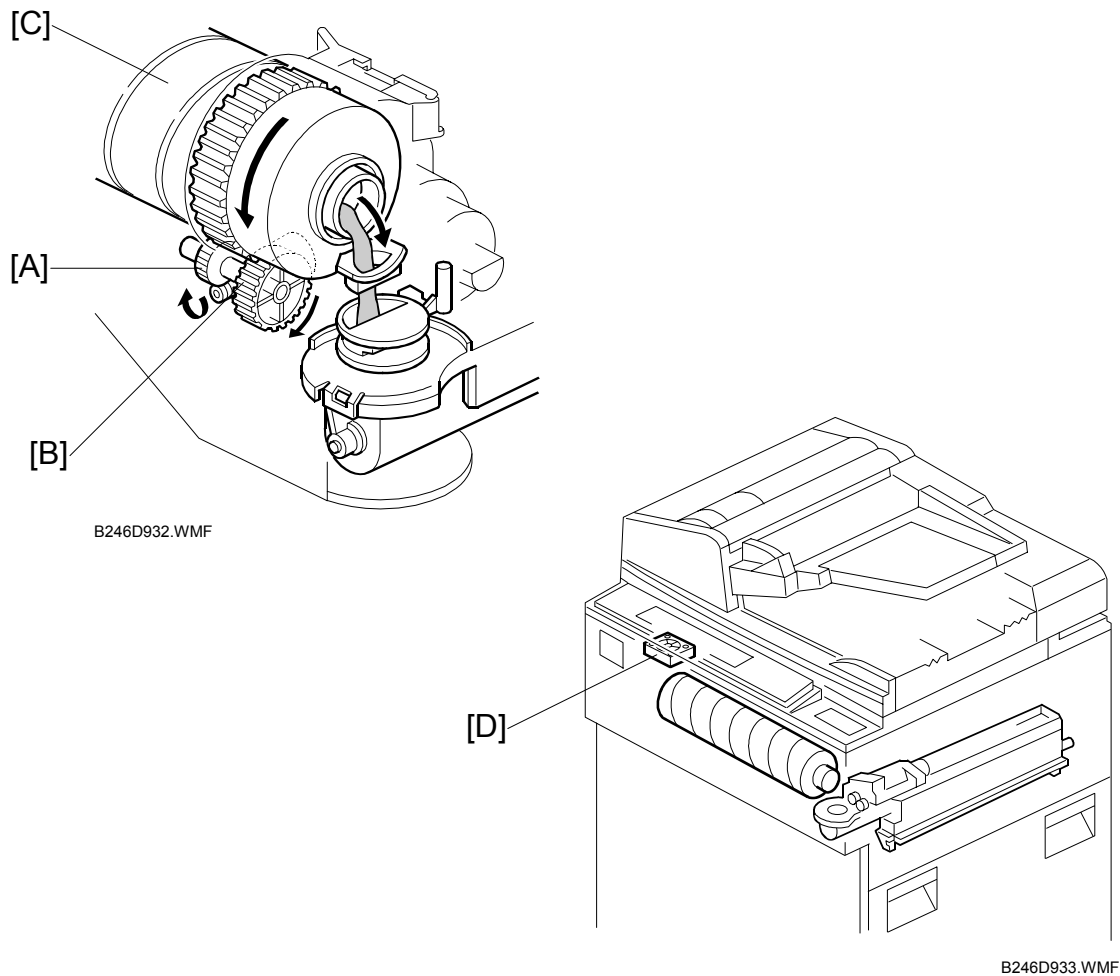

The toner supply motor [A] (a dc motor) and gears [B] rotate the toner bottle [C].

The toner cooling fan [D] (below the operation panel) ventilates the area around the bottle. This fan always switches off and on with the polygonal mirror motor.

6.9.10 TONER SUPPLY CONTROL

There are two toner supply modes: Sensor Control and Image Pixel Count. The mode can be changed with SP2208-001 (Toner Supply Mode). The factory setting is sensor control mode. This setting automatically changes if the TD sensor or ID sensor is defective.

Sensor Control Mode

In sensor control mode, the machine uses the outputs of the TD sensor and the ID sensor.

Every copy, the following occurs.

1. The TD sensor reads the density of the toner in the developer once every copy cycle, after the trailing edge of the image passes the development roller, and outputs this reading as V_t . The current V_t value can be displayed with SP2223-001 (V_t display).
2. For every copy, V_t (TD sensor output) is subtracted from V_{ref} (the targeted control reference voltage for the TD sensor) to set the value of 'GAIN' (0, 1, 2, 3, or 4).
3. The following equation is used to calculate how long the toner supply clutch switches on.

$$\frac{\text{GAIN} \times \text{Image Pixel Count} \times \text{Target Density}}{\text{Toner Supply Rate}} + \text{Clutch Startup Time}$$

B246D934.WMF

Factor	Description	
GAIN	With GAIN = 0, "Clutch On Time" is 0 ms	
Image Pixel Count	The density for every dot in the output data for the page is calculated. Example: 255 for A3 all black, for comparison.	
Target Density	0.7 mg/cm ²	
Toner Supply Rate	850 mg/s	This default setting can be adjusted with SP2209 – Toner Supply Rate
Clutch Startup Time	16 ms	The actual time required for the toner to arrive at the hopper after the clutch switches on.

If we substitute the default settings, then:

$$\frac{\text{GAIN} \times \text{Image Pixel Count} \times 0.7 \text{ mg/cm}^2}{850 \text{ mg/s}} + 16 \text{ ms}$$

B246D935.WMF

But if GAIN is 0, the '+16 ms' part of the equation is not used, and the time interval that the clutch is turned on becomes zero.

At the end of the job, if Vref has not been updated for 10 copies or more, the following occurs:

1. Vref is updated, as follows (also done just after the machine is switched on):
 - The charge corona and laser diode write the ID sensor pattern on the drum.
 - The ID sensor reads the reflectivity of the ID sensor pattern and outputs this reading as Vsp.
 - The ID sensor also reads the reflectivity of the bare surface of the drum and outputs this reading as Vsg.

NOTE: 1) The 10 copy interval can be extended with SP2210-001 (ID Sensor Pattern Interval).
2) SP2507-002 (ID Sensor Interval – Page Setting) is available for customers who are concerned about changes in toner density during long copy jobs and may want to specify an interval to force creating and reading the ID sensor pattern. However, enabling this SP will pause copying for 2 or 3 seconds every time the ID sensor pattern is created and read.

2. The CPU uses the Vsp/Vsg readings to calculate a new value for Vref (TD sensor reference voltage).
3. Finally, Vt and Vref are compared. If Vt is higher than Vref, the CPU switches on the toner supply clutch to supply more toner to the development unit.

Pixel Count Toner Supply Mode

This mode should only be used as a temporary countermeasure while waiting for replacement parts, such as a TD sensor.

For each copy, the CPU adds up the image data value of each pixel and converts the sum to a value between 0 and 255 (0 = blank page, 255= black page).

The toner supply clutch on time is calculated using the same formula, but the GAIN value is fixed at 0.7.

TD Sensor Initialization

The TD sensor must be initialized with SP2801 (TD Sensor Initial Setting) at the following times:

- The first time the development unit is filled with developer
- Every time the developer is replaced.

The sensor control voltage is adjusted until the output is $3.0 \pm 0.1V$. Then, after setting the control voltage, V_t is sampled 100 times, these samplings are averaged, then the average is used to set the standard value for V_t .

NOTE: 1) After developer is replaced, you must execute SP2801.
2) After the TD sensor is replaced, you must execute SP2801.
3) After a partially used development unit from another machine is installed, you must use SP2220 (Vref Manual Setting) to enter the Vref value for that unit, and use SP2906-001 (TD Sensor Control Voltage Setting) to enter the TD sensor control voltage.
4) These initial values are stored in NVRAM. Before replacing the NVRAM, print an SMC report so you can re-enter these settings manually after the NVRAM is replaced.

Determining Vref

At certain intervals (see 'Sensor Control Mode, step 4), the ID sensor reads the bare drum and the ID sensor pattern on the drum.

Vref is calculated from Vsp and Vsg as explained in the Process Control section of the manual.

ID sensor pattern creation parameters depend on whether automatic process control is switched on or off with SP3901-001 (Auto Process Control).

If automatic process control is switched on:

- Charge corona grid voltage: Set automatically for the existing conditions around the drum.
- LD power: The value V_h is used to adjust the laser power. The laser diode writes the V_h halftone pattern on the drum. The reading from this pattern is V_h .
- Development bias: The potential sensor checks the bias voltage when the ID sensor pattern is created (target voltage: -230V) and boosts the voltage by -280, the voltage set for SP2201-004 (ID Sensor Pattern Development Potential), to bring the bias to the target voltage of -510.

If automatic process control is switched off:

- Charge corona grid voltage: Set to -800V, the default setting for SP2001-002 (ID Sensor Pattern: Adj. to Applied Voltage).
- LD power: 185 μW (target drum potential -130V)
- Development bias: -360V, default for SP2201 002 (ID Sensor Pattern: Adj. to Applied Voltage).

Toner Supply without ID Sensor and TD Sensors

Toner supply can continue even if either or both sensors fails:

Failed Sensor	Toner Supply Method
TD sensor	ID sensor + Image Pixel Count
ID sensor	TD sensor (but Vref is not updated)
TD and ID sensors	Image Pixel Count

Abnormal TD Sensor Output

If this occurs, toner supply is controlled using pixel count and Vsp/Vsg.

Abnormal output detected during initialization of the developer: An SC is logged and SP2906 (TD Sensor Control Voltage & Check) will display 0.00V.

- During the TD sensor auto adjustment, the TD sensor output voltage (Vt) is 2.5 volts or higher even though the control voltage is set to the minimum value (PWM = 0). The machine logs SC341 TD Sensor Adjustment Error 1.
- During the TD sensor auto adjustment, the TD sensor output voltage (Vt) does not come in the target range ($3.0 \pm 0.1V$) within 20 seconds. The machine logs SC342.

Abnormal output detected during copying: If one of the following conditions is detected more than 10 times consecutively:

- Vt = 0.5 volts or lower
- Vt = 4.0 volts or higher

Then SC340 (TD Sensor Output Error) is logged.

Abnormal ID Sensor Output

Abnormal output detected during process control at power-on: SC353 or SC354 is issued. Toner supply during copying will then be controlled using the TD sensor only, until the machine is repaired.

Abnormal output detected when updating Vref: SC350, 351, or 352 is issued, and Vref is not updated (the machine uses the current value).

Toner End Detection

The toner end sensor is checked every copy.

- **Toner near end.** When the toner end sensor remains on for two consecutive pages, the toner supply motor turns on for 1.1 s. If the toner supply motor has turned on more than 30 times during the last 100 prints, the "Toner Near End" warning is issued. The warning is cleared if the toner end sensor turns off.
- **Toner end.** If the toner end sensor remains on for about 1,000 copies (A4 size with 6% coverage), the "Toner End" warning is issued. If the toner end sensor switches off twice consecutively, the toner end sensor copy counter is reset to zero.


Toner End Recovery

If the front door is opened and closed while a toner near end or toner end condition exists, the machine attempts to recover using measurements from the toner end sensor and TD sensor, based on the possibility that the toner bottle has been replaced.

1. The drum development motor, charge grid, and development bias switch on.
2. The toner supply motor switches on for 1.1 s, the toner supply clutch switches on for 1 s, and the CPU checks the toner end sensor output.
3. If the toner end sensor is OFF, i.e. there is toner in the hopper, the CPU compares V_t and V_{ref} .
 - If V_t is less than or equal to V_{ref} , there is sufficient toner in the development unit. The CPU waits 20 s for the toner in the developer to mix evenly, the above components switch off, and the machine is released from the toner end or toner near end status.
 - If V_t is more than V_{ref} , the CPU turns on the toner supply clutch for 1 s again until V_t becomes less than or equal to V_{ref} .
 - If the toner end sensor output remains on even after seven attempts of the above procedure, the components switch off and the machine remains in the "Toner End" status.

6.10 IMAGE TRANSFER AND PAPER SEPARATION

6.10.1 OVERVIEW

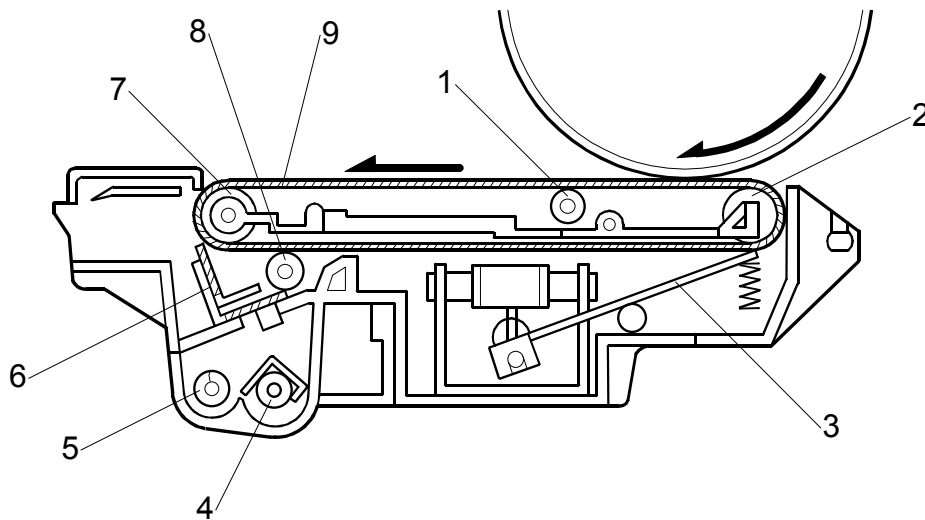

B246D936.WMF

- | | |
|--------------------------------|--------------------|
| 1. Transfer Roller | 6. Cleaning Blade |
| 2. Transfer Belt Drive Roller | 7. Drive Roller |
| 3. Belt Lift Lever | 8. Cleaning Roller |
| 4. Waste Toner Agitator | 9. Transfer Belt |
| 5. Waste Toner Collection Coil | |

A transfer belt system transfers the image from the OPC drum to paper.

A solenoid lifts the belt against the OPC drum at the correct time.

The transfer belt system is driven by the drum motor, through a shaft and a gear.

A cleaning blade and a cleaning roller clean the surface of the transfer belt.


Easy access to the transfer belt from behind the front door allows quick removal of paper jams.

A heater near the transfer belt unit ensures that the area around the belt is always dry.

Detailed
Descriptions

6.10.2 TRANSFER BELT LIFT

Mechanism

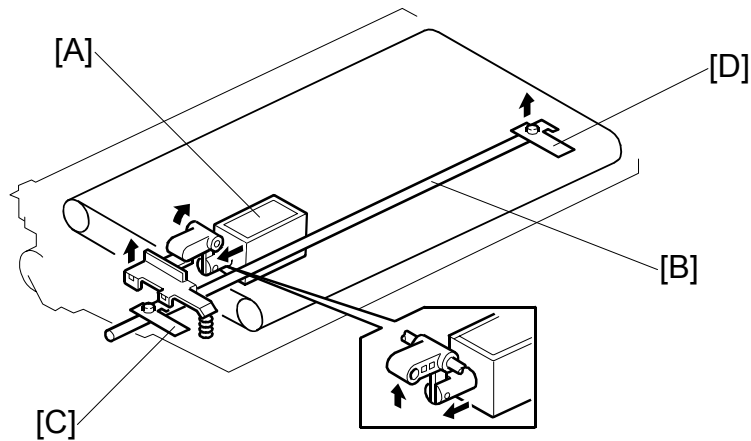


B246D937.WMF

The transfer belt lift solenoid [A] lifts the belt into contact with the drum using the link [B], which is connected to the front [C] and rear [D] belt lift levers.


Springs attached to the front of the solenoid reduce the load on the solenoid as it lifts the drum.

This mechanism raises the transfer belt unit against the OPC drum only when needed, and keeps it separated at all other times because:

- The transfer belt is between the drum unit and the ID sensor, so it would rub off the ID sensor pattern if it remained in contact with the drum.
- Allowing toner to transfer to the belt when making sensor patterns would increase the load on the transfer roller cleaning blade.
- The transfer belt would cause the drum to wear, if it were allowed to remain in contact with the drum.

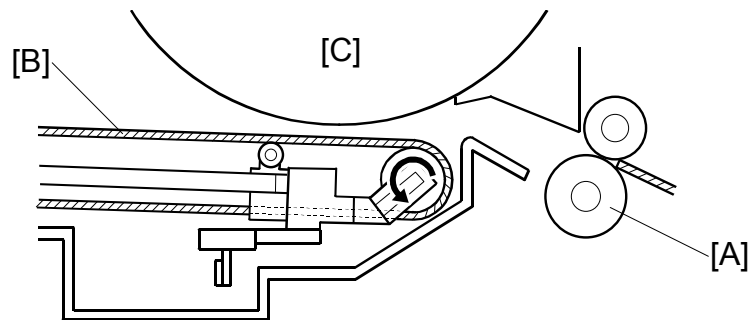Timing

B246D938.WMF

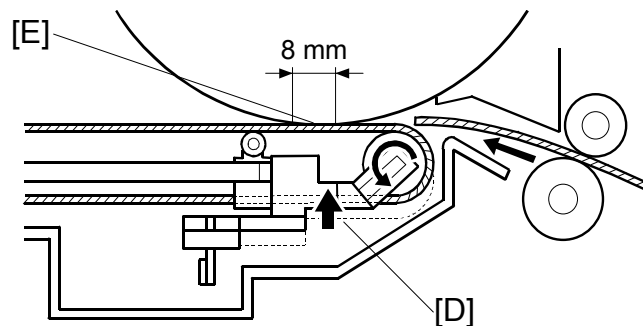


B246D939.WMF

- [A]: Registration roller
- [B]: Transfer belt
- [C]: OPC drum
- [D]: Front and back levers
- [E]: Nip width (about 8 mm)

The transfer belt stays away from the OPC drum until 500 ms after the drum motor starts. Then the transfer belt lift solenoid switches on to lift the belt.

At the end of the job, the solenoid switches off, and the transfer belt unit lowers away from the drum.

6.10.3 TRANSFER BELT CHARGE

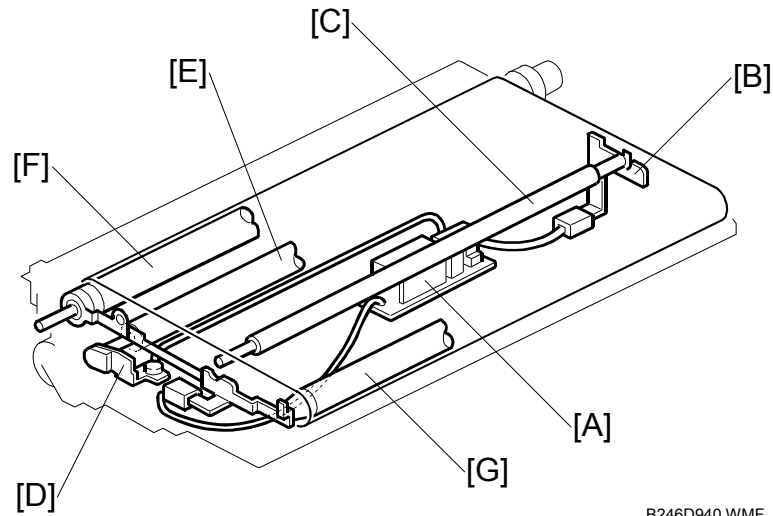

B246D940.WMF

The transfer power pack [A], inside the transfer belt unit, applies the following charges:

- Transfer Roller: Max. +7.0 kV through terminal [B] to the transfer roller [C].
- Cleaning Roller: About +1.0 kV max. through terminal [D] to the cleaning roller [E].


Drive rollers [F, G] are grounded so that the cleaning unit can clean the belt easily.

6.10.4 TRANSFER CURRENT SETTINGS

Here is a list of the default current settings for each paper feed station.

SP No.	Station/Mode	Transfer Current (Initial Value)
SP2301-001	Trays 1, 2, 3: Front Side	80 μ A
SP2301-002	Trays 1, 2, 3: Back Side	80 μ A
SP2301-003	Bypass: Front Side	75 μ A
SP2301-004	Postcard: Front Side	165 μ A
SP2301-005	Paper Interval	15 μ A
SP2301-006	Tab Paper	75 μ A
SP2301-007	Thick Paper: Front Side	120 μ A
SP2301-008	OHP: Front Side	75 μ A
SP2301-009	Tracing Paper: Front Side	120 μ A
SP2301-010	Image Leading Edge	65 μ A
SP2301-011	Image Trailing Edge	65 μ A

- NOTE:**
- 1) For postcards, use the by-pass tray and set the side fences for A6 width.
 - 2) The charge for cleaning is applied even during the interval between sheets of copy paper.
 - 3) At the following times, the transfer roller output changes to 2.6 kV, and the cleaning roller output is fixed at 1.0 kV:
 - When the job ends
 - Whenever the drum motor is turning, except during copying and during process control

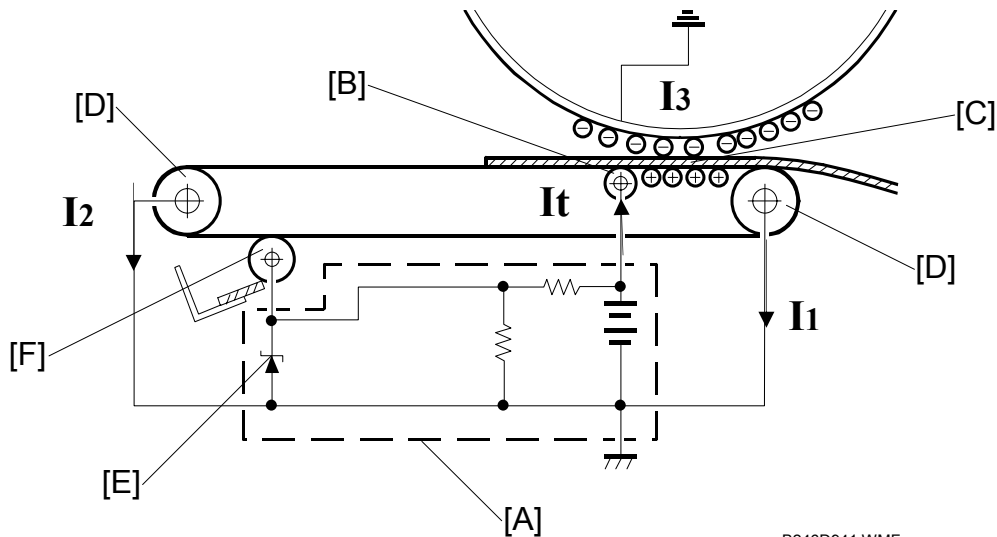6.10.5 TRANSFER CURRENT CIRCUIT

[A]: Transfer power pack

[B]: Transfer roller

[C]: Nip between drum and transfer belt


[D]: Drive rollers

The transfer power pack does the following:

- Monitors the currents I_1 and I_2
- Adjusts its output (I_t) to keep the current I_3 constant, regardless of changes in temperature or humidity which can affect the surface resistance of the paper.

A varistor [E] keeps the voltage at the cleaning roller constant [F].

6.10.6 TRANSFER BELT DRIVE AND PAPER TRANSPORT

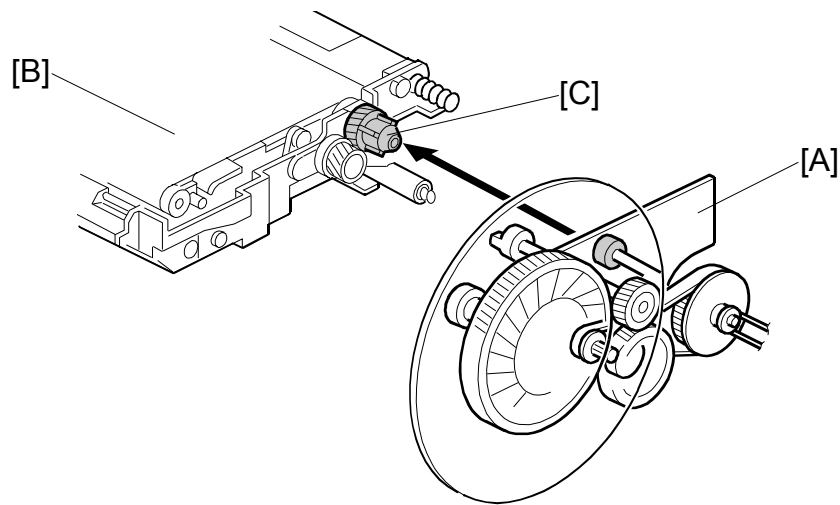


B246D945.WMF

The drum motor [A] drives the transfer belt [B] through belts and gears.

The transfer belt by its electrostatic charge attracts the paper [B], so a transport fan is not required.

At the turn in the transfer belt, the transfer belt drive roller [C] discharges the belt to reduce paper attraction, and the paper separates from the belt as a result of its own stiffness.


The tapered parts [D] at both ends of the roller [E] help keep the transfer belt [F] in the center, so that it does not run off the rollers.

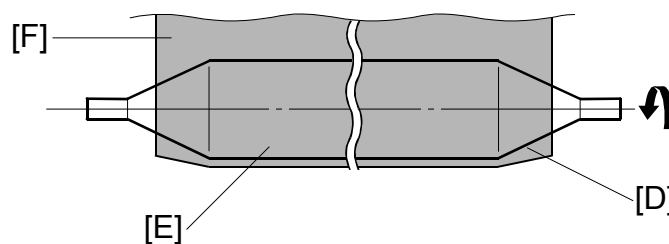


B246D946.WMF

 Detailed
Descriptions

6.10.7 TRANSFER BELT CLEANING

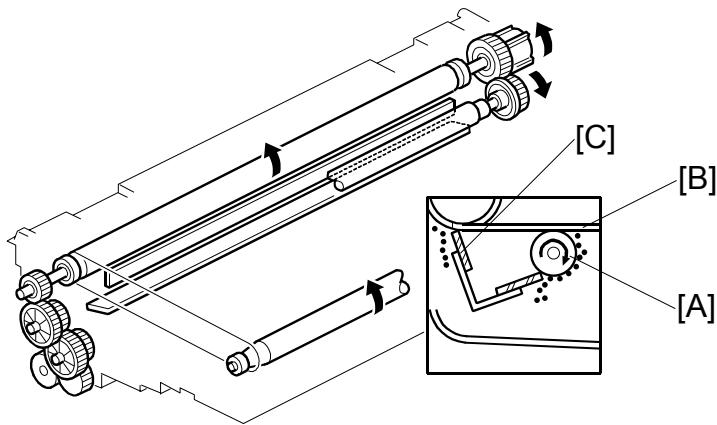

B246D942.WMF

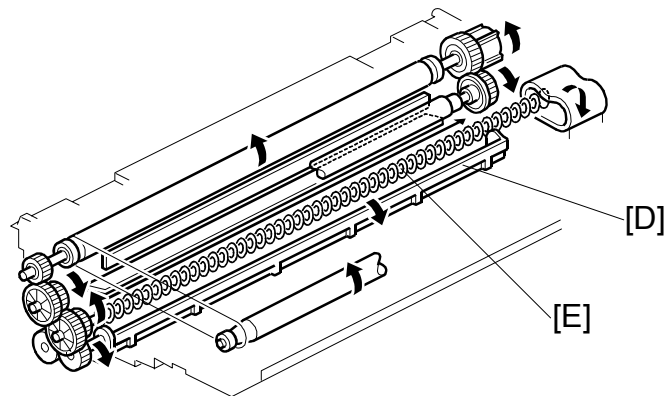

B246D943.WMF


Toner collects on the transfer belt in the following cases. This toner causes streaking on the reverse sides of copies.

- As a result of a paper jam
- If the by-pass feed tray side fences are set in the wrong position

The cleaning roller [A] has a positive charge, so it can collect negatively charged toner and paper dust from the transfer belt [B]. The cleaning roller always contacts the transfer belt.

The cleaning blade [C] scrapes toner off the cleaning roller and drops it onto the agitator plate [D]. The plate [D] moves the toner into the collection coil [E]. The coil takes the toner to the toner collection bottle.

6.10.8 ANTI-CONDENSATION HEATER

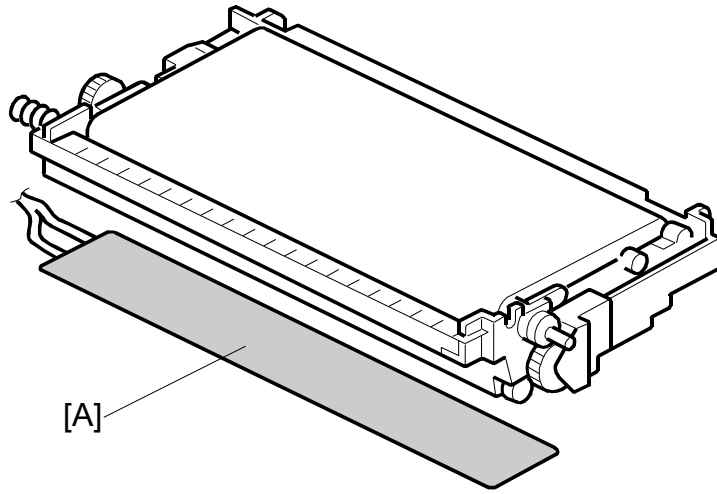

B246D944.WMF


The anti-condensation heater [A] is directly below the transfer belt drive roller.

This anti-condensation heater turns on automatically at the following times:

- When the main power switch is turned off
- When the machine enters auto off mode

6.11 PAPER FEED

6.11.1 OVERVIEW

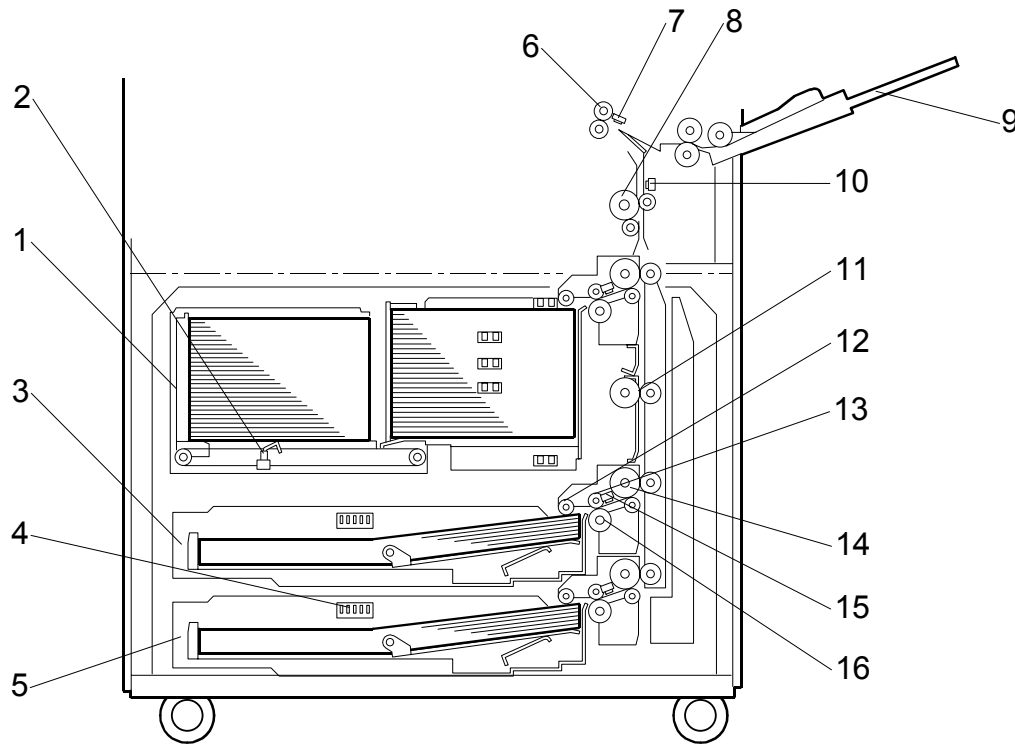

B246D906.WMFF

- | | |
|----------------------------|------------------------|
| 1. Tandem Tray (Tray 1) | 9. By-pass Tray |
| 2. Left Tray Paper Sensor | 10. Relay Sensor |
| 3. Universal Tray (Tray 2) | 11. Lower Relay Roller |
| 4. 3rd Paper Size Switch | 12. Pick Up Roller |
| 5. Universal Tray (Tray 3) | 13. Feed Roller |
| 6. Registration Roller | 14. Grip Roller |
| 7. Registration Sensor | 15. Paper Feed Sensor |
| 8. Upper Relay Roller | 16. Separation Roller |

NOTE: Items (12)~(16) comprise the standard FRR feed system, which is used for Trays 1, 2, and 3. This machine uses motor on/off time (not clutches) to control paper feed.

Tray Capacities


The machine has three built-in paper trays:

- Tandem LCT (Tray 1). 1550 + 1550 sheets
- Universal Tray (Tray 2) 550 sheets
- Universal Tray (Tray 3) 550 sheets

The machine also has a by-pass feed tray which can hold 100 sheets (T-6200).

Built-in Feed Stations

- **Paper feed and separation.** Standard FRR system with a torque limiter for paper separation and feed. Each tray has an independent stepper motor to drive its paper feed mechanisms.

 Handling Paper> Paper Feed Methods> **Forward and Reverse Roller (FRR)**

- **Tray Lift motors.** Provided for each tray, easily disengage when a tray is removed and engage once again when the tray is re-installed. In trays 2 and 3, the lift of the motors on the bottom plates is also used for paper near-end detection.
- **Tandem tray paper end.** A sensor mounted near the top of the right rail signals paper near end and another sensor under the bottom tray signals paper end after the last sheet is fed. Three paper height sensors, mounted on the left rail, are actuated as the actuator rises with the bottom plate. The combinations of actuating and de-actuating these sensors as the plate rises are used to signal the paper supply display on the operation panel.
- **Paper size detection.** For the tandem tray (Tray 1), an SP setting is required (SP 5959 001). For the universal trays (Tray 2, 3), there is a 5-step manual switch on each tray.
- **Vertical Transport.** A grip roller at each feed station feeds the paper into the vertical paper path.
- **Heaters.** Two anti-condensation heaters are provided for the built-in paper feed stations.

By-pass Feed

- **Capacity:** 100 sheets.
- **Paper feed and separation:** Standard FRR system with a torque limiter for paper separation and feed. By-pass tray motor and clutch.
- **Paper end detection:** Photointerrupter and feeler.
- **Size detection:** Side fence is used for width detection, registration sensor pulse count is used for length detection.
- **Thick paper feed:** By-pass feed clutch switches on twice.


Paper Registration

- Paper is guided to the registration roller from five sources: the 3 built-in paper trays, 1 by-pass tray, and 1 duplex tray.
- There is a mylar strip over the entire length of the registration roller.

Jam Removal

Pulling out a paper tray releases the pressure on the rollers, making it easy to remove paper jams.

6.11.2 DRIVE

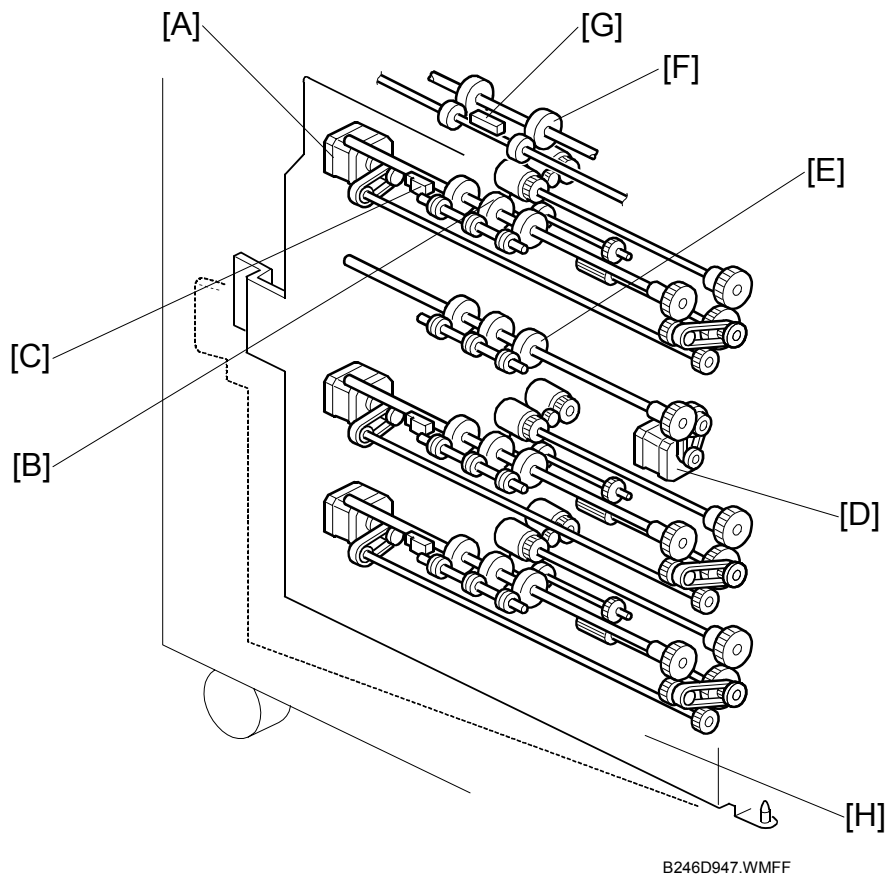

An independent paper feed motor [A] drives the rollers in each tray. It also drives grip rollers [B], which pull the paper out of the tray. The mechanism is identical for each tray.

A vertical transport sensor [C] at each feed station detects paper jams.

The paper feed motors on the trays drive the vertical transport rollers, which are opposite each feed station (not shown here).

The lower relay motor [D] drives the lower relay roller [E], halfway between trays 1 and 2. The relay motor is added here due to the length of the paper path.


The upper relay roller [F] feeds each sheet to the registration roller. The by-pass feed motor (not shown here) drives the upper relay roller [F].

The relay sensor [G], at the top of the vertical transport path, triggers the start of image exposure on the OPC drum, and detects jams in the paper path.

The transport guide plate [H] swings against the side of the machine and locks in place.


6.11.3 TRAY AND PAPER LIFT MECHANISM – TRAY 2,3

Bottom Plate Lift

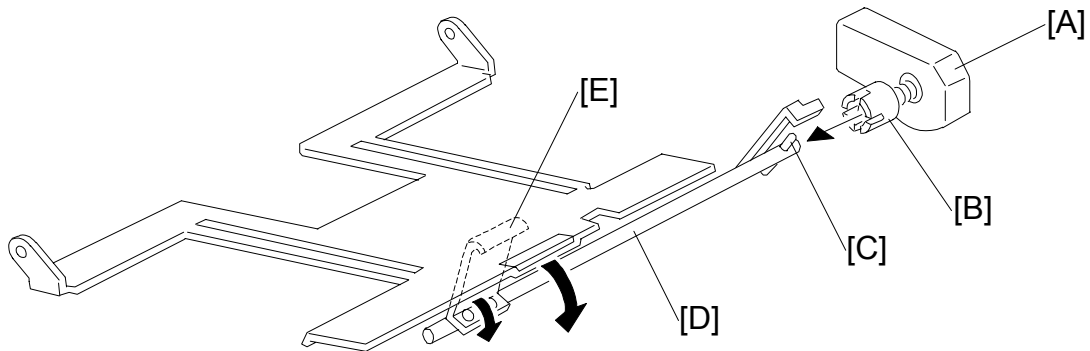


Tray lift motor [A] → Coupling [B] → Pin [C] → Shaft [D] → Lift arm [E] (under the bottom plate).

The universal trays (Tray 2, Tray 3) are not provided with near end sensors. The pulse count of the tray lift motor is used to signal near end.

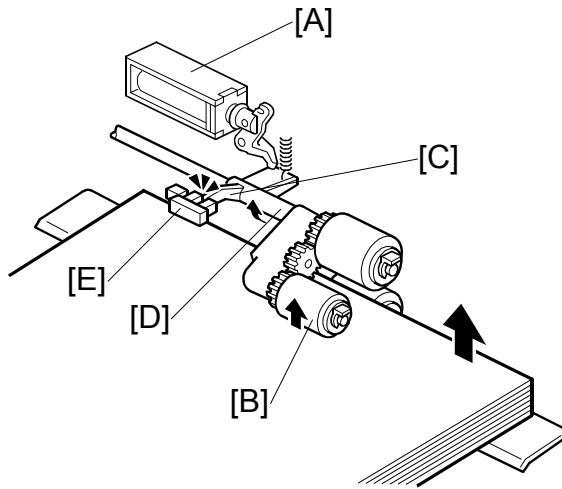Lift Sensor

B246D949.WMF

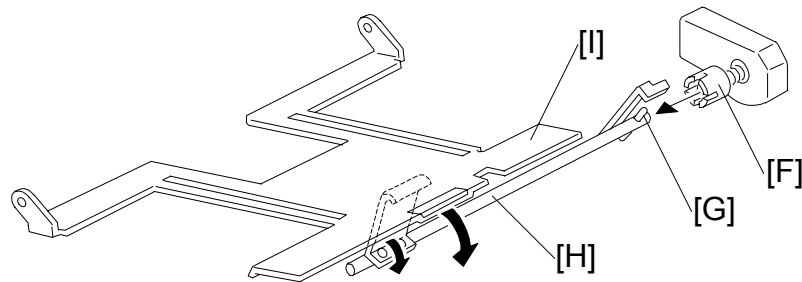

B246D950.WMFF

When the tray lift motor turns on, the pick-up solenoid [A] turns on, and pick-up roller [B] lowers.


When the top sheet of paper reaches the proper paper feed level, actuator [C] on the pick-up roller support [D] activates the tray lift sensor [E], and the lift motor stops.

After several paper feeds, the paper level gradually lowers and the lift sensor is deactivated. Then the lift motor turns on again until the lift sensor is activated again.

When the tray is drawn out of the feed unit: gear [F] disengages pin [G] on shaft [H], then the tray bottom plate [I] drops by its own weight.

6.11.4 PAPER FEED AND SEPARATION MECHANISM

Paper Feed and Separation: No Paper Present

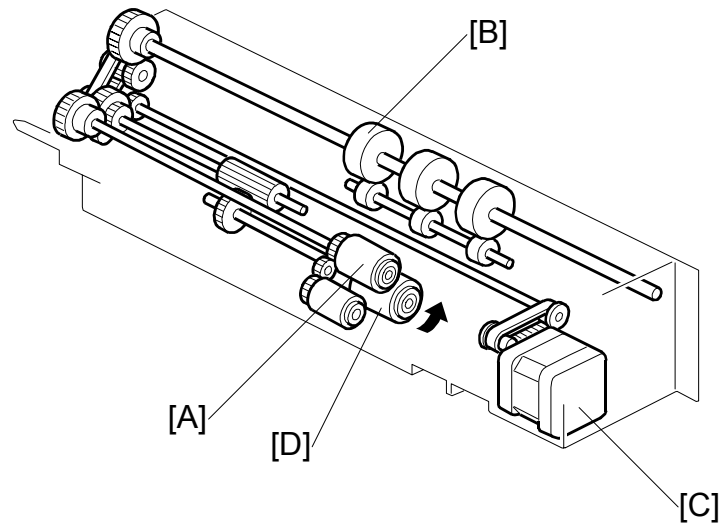


B246D951.WMFF

While waiting for the first sheet to feed and between sheets, the feed roller [A] must not rotate. However, the grip roller [B] must turn, so that any paper coming up the vertical transport path continues to feed. To do this, the paper feed motor [C] rotates in reverse. The separation roller [D] is free to rotate in the direction shown by the arrow, because the separation roller solenoid is off.

When the feed motor reverses:

Feed roller [A]	→	No rotation
Separation roller [D]	→	Free to rotate
Grip roller [B]	→	Rotates

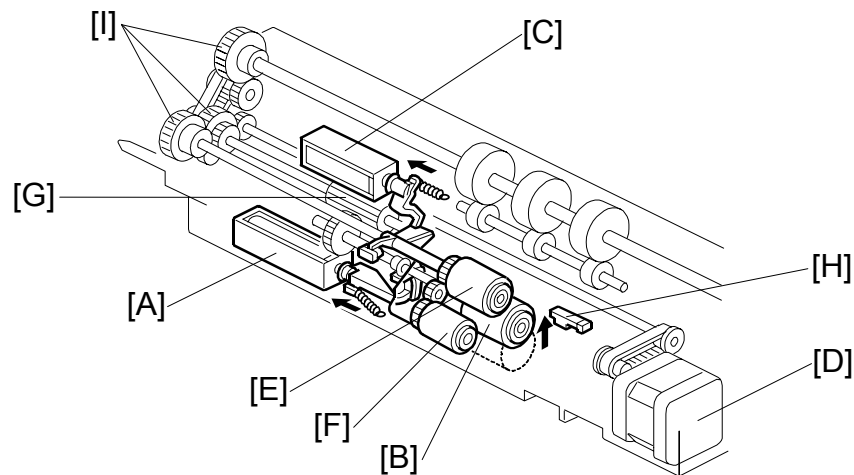Paper Feed and Separation

B246D952.WMFF

If a paper feed station is not selected, its separation roller solenoid [A] stays off and the separation roller [B] can turn freely in the opposite direction to feed paper.

When the paper feed station is selected and the start key is pressed, the following mechanisms activate:

- Separation roller solenoid [A] → separation roller [B] contacts feed roller [E]
- Pick-up solenoid [C] → pick-up roller [F] lowers to contact the paper
- Paper feed motor [D] → turns feed roller [E] → turns pick-up roller [F] via gear [G]

When the paper feed sensor [H] detects the leading edge of the paper:


- Pick-up solenoid [C] switches off, and pick-up roller [F] lifts.
- The feed roller [E] then feeds the sheet to the registration roller.

Note the three one-way clutches [I]: One for the grip roller, one for the feed roller, and one for the separation roller.

When the feed motor rotates forward:

Feed roller	→	Rotates
Separation roller	→	Rotates in accordance with the FRR principle CT Handling Paper> Paper Feed Methods> Forward and Reverse Roller (FRR)
Grip roller	→	Rotates

Separation Roller Release Mechanism

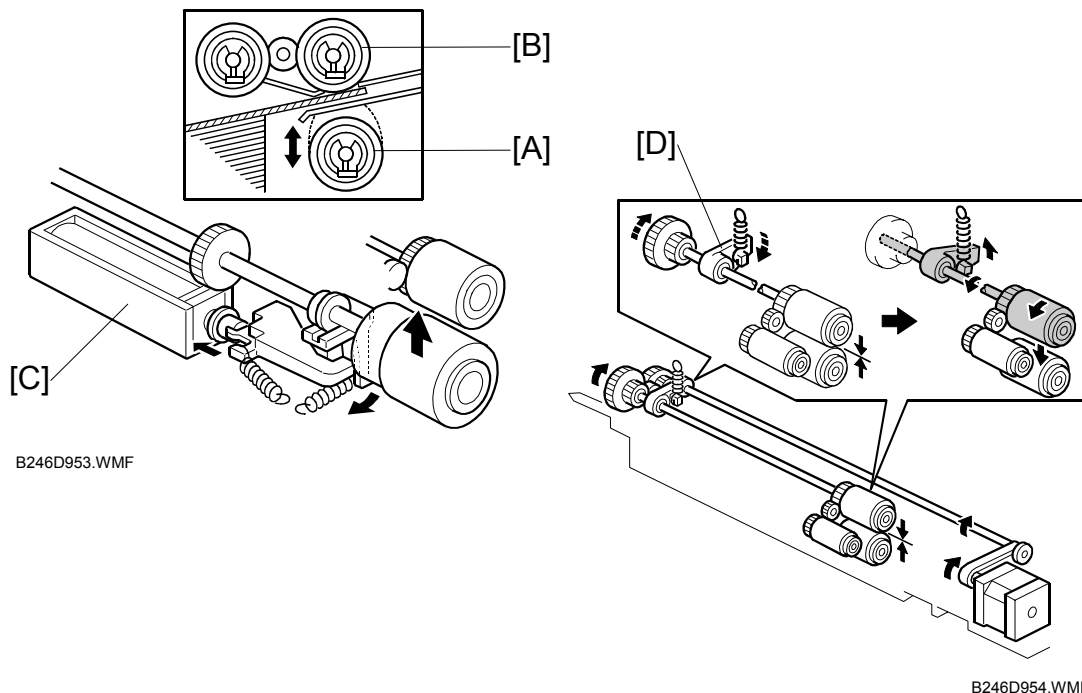

Normally, the separation roller [A] and feed roller [B] are not in contact. However, when the feed station is selected, the separation roller solenoid [C] pushes the separation roller against the feed roller.

This mechanism has these advantages:

- When the paper feed motor turns on, the separation roller rotates. If the separation roller is away from the feed roller, it reduces the load on the paper feed motor and drive mechanism, and it also reduces wear to the rubber surface of the separation roller caused by friction between the separation roller and the feed roller.
- After a job, paper sometimes remains between the feed and separation rollers. If the paper tray is pulled out of the machine, this paper might be torn if the two rollers do not separate.
- The user can easily pull out jammed paper between the feed and separation rollers if the separation roller is away from the feed roller.


Normally, the feed and separation roller separate when the separation roller solenoid switches off.

This mechanism ensures that the feed and separation rollers do not stick together at the start of a job just after the machine leaves standby mode.

When the feed roller reverses at the start of the job, a small arm [D] pushes the feed roller slightly forward so that it comes away from the separation roller.

If the rollers stay stuck together, the motor may not be able to turn the rollers. When reversing at the start of the job, only a small amount of power is applied from the motor, and this may not be enough to unstick the rollers.

6.11.5 PAPER NEAR-END AND PAPER END – TRAYS 2 AND 3

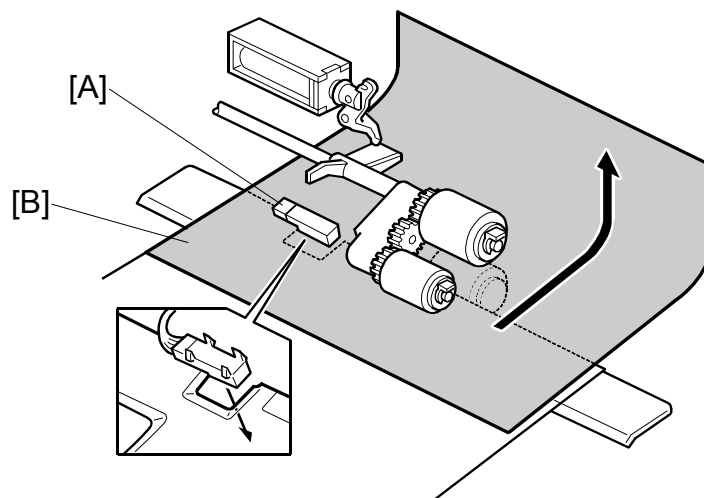

B246D955.WMFF

The machine detects paper near end by counting the number of pulses the motor makes when lifting the bottom plate.

The paper end sensor [A] receives light reflected from the paper below [B] until the last sheet has been fed. Then, paper end is detected.


6.11.6 PAPER SIZE DETECTION

Tandem Tray (Tray 1)

The tandem tray does not have paper size detection switches. Every time the paper size is changed by moving the front and back fences, you must enter the selected paper size using SP5959-001.

Universal Cassettes (Tray 2, 3)

The paper size switch [A] detects the paper size with 5 microswitches. The actuator plate [B], attached to the rear of the paper tray, actuates the paper size switch.

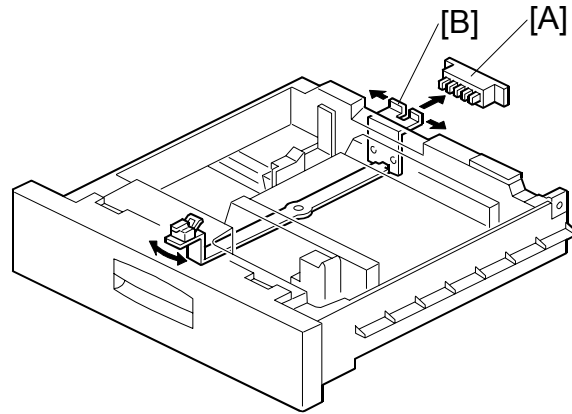

B246D956.WMFF

The output from the sensor depends on the position of the dial, as shown in the table.


Sensor Outputs	A4/A3 Version	LT/DLT Version
01111	A3 SEF	11" x 17" SEF
00111	8 1/4" x 13" SEF	8 1/2" x 14" SEF
10011	A4 SEF	8 1/2" x 11" SEF
01001	A4 LEF	8 1/2" x 11" LEF
00100	8 1/2" x 13" SEF	5 1/2" x 8 1/2" SEF
00010	A5 SEF	5 1/2" x 8 1/2" LEF
00001	A5 LEF	8" x 10 1/2" SEF
10000	—	7 1/4" x 10" SEF
11000	—	Set by SP 5129
11100	—	Not used
11110	*	*

0: Actuated 1: Deactuated

SP5129: The machine can detect 8" x 13" (default), 8 1/2" x 13", or 8 1/4" x 13".


If the switch is set to the asterisk (*), a range of paper sizes (illustrated below) can be selected, but the size must be entered with a UP mode.

Special Size Setting Range

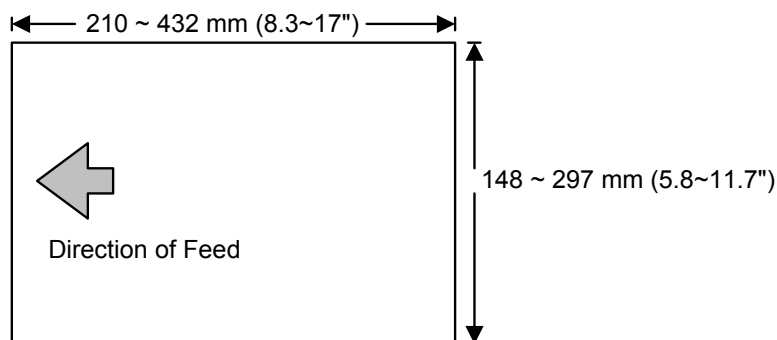

B246D957.WMFF

6.11.7 ANTI-CONDENSATION HEATERS

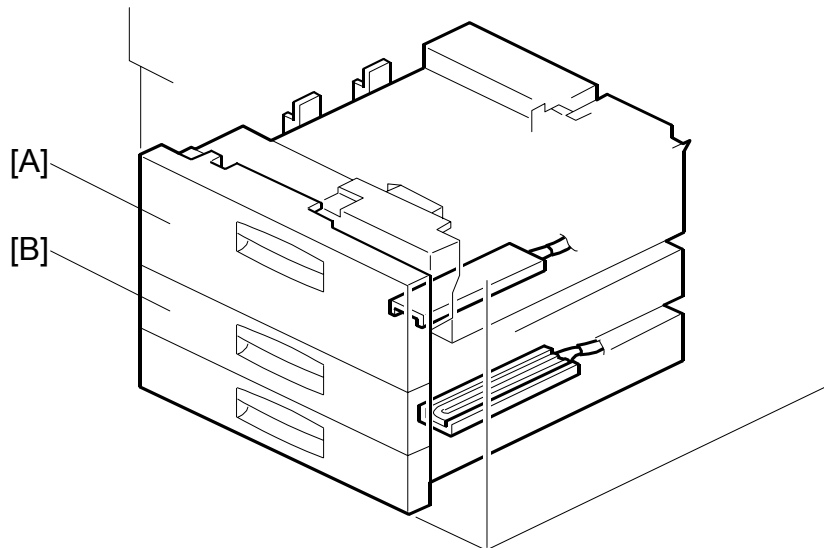

B246D958.WMFF


Two heaters, one below the tandem tray [A] and one below the bottom tray [B], prevent condensation around the feed rollers and keep paper dry.

This anti-condensation heater turns on automatically at the following times:

- When the main power switch is turned off
- When the machine enters auto off mode

6.11.8 TANDEM TRAY – TRAY 1


Overview

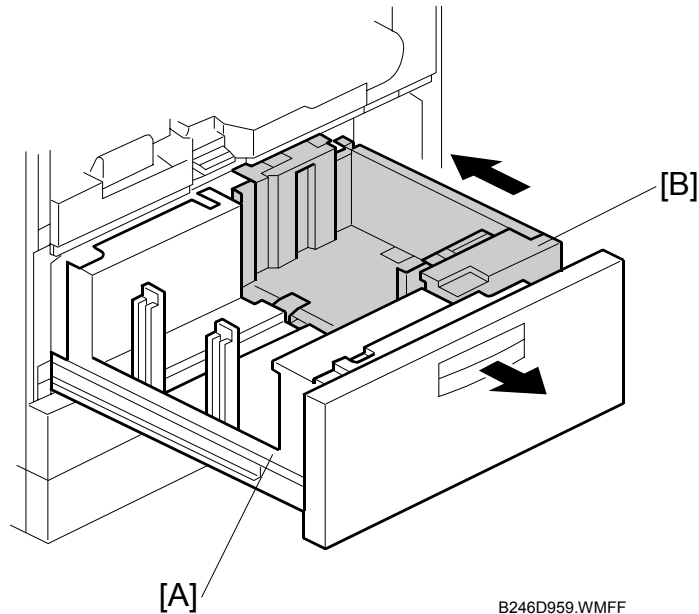


1,550 sheets of paper can be set in each of the left [A] and right trays [B]. Paper is fed from the right tray. When the paper in the right tray runs out, the paper in the left tray automatically transfers to the right tray. After the paper transfers to the right tray, paper feeding resumes.

Normally, both the right and the left trays are joined together. However, during copying, if there is no paper in the left tray, the left tray can be pulled out to load paper. During that time, the right tray stays in the machine and paper feed continues.


Detailed
Descriptions

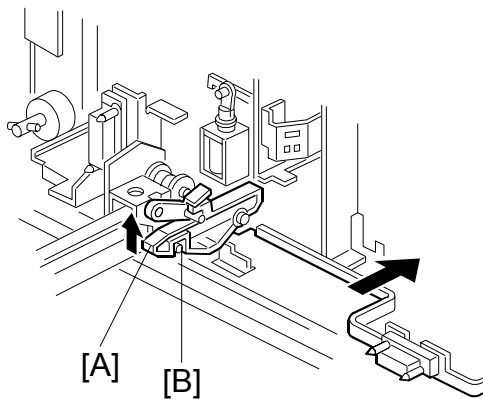Connecting the Left and Right Sides of the Tray

B246D960.WMF

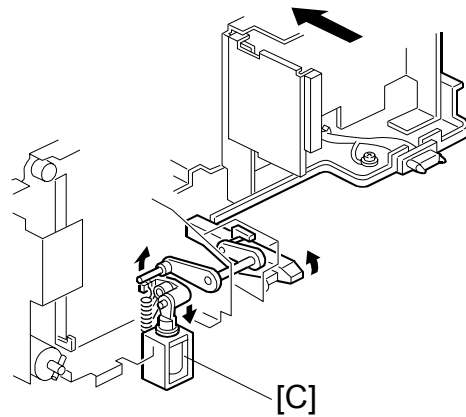

B246D961.WMFF

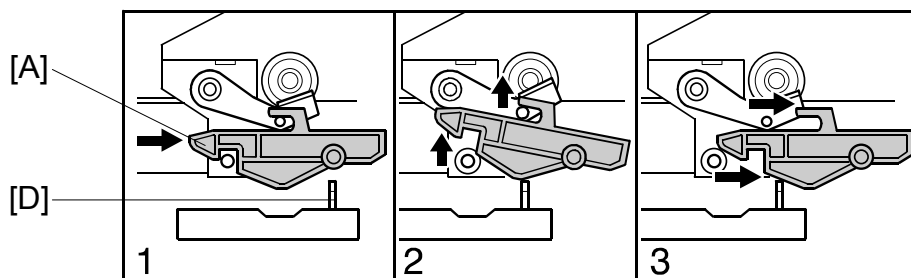

B246D962.WMFF

When there is paper in the left tray:

- Lock lever [A] in the left tray catches the pin [B] in the right tray.

During copying, if there is no paper in the left tray:


- Right tray lock solenoid [C] turns on, which releases lock lever [A].
- The left tray can now be pulled out to load paper, even while paper is being fed into the machine from the right tray.

When the tandem tray is drawn out fully:

- Projection [D] pushes up lock lever [A] so that both trays separate. This makes paper loading easier.

Paper Lift/Remaining Paper Detection

The machine detects when the 1st tray has been placed in the machine by monitoring the tray set signal through the connector.

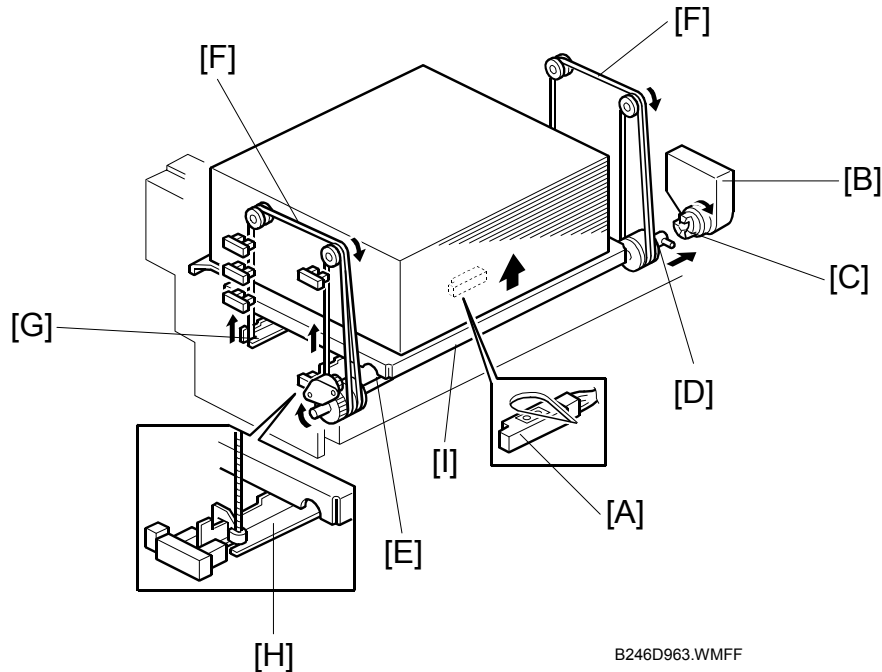

When the machine detects that the tray is in the machine, the right tray paper sensor [A] (under the tray) checks whether there is paper in the right tandem tray.


NOTE: If sensor [A] was not present and the tray was empty, the bottom plate would have to lift until the 1st tray lift paper end sensor (at the top of the tray) detected that there was no paper, and this would waste several seconds.

If paper is detected, the lift mechanism starts:

- 1st tray Lift motor [B] → Coupling gear [C] → Pin [D] on the lift shaft [E] → Wires [F] → Slots at the ends of the tray support rods [G, H] → Tray bottom plate [I].

The tray goes up until both of the following occur:

- The paper pushes up the pick-up roller and the lift sensor is activated
- The paper end sensor at the top of the tray is deactivated.

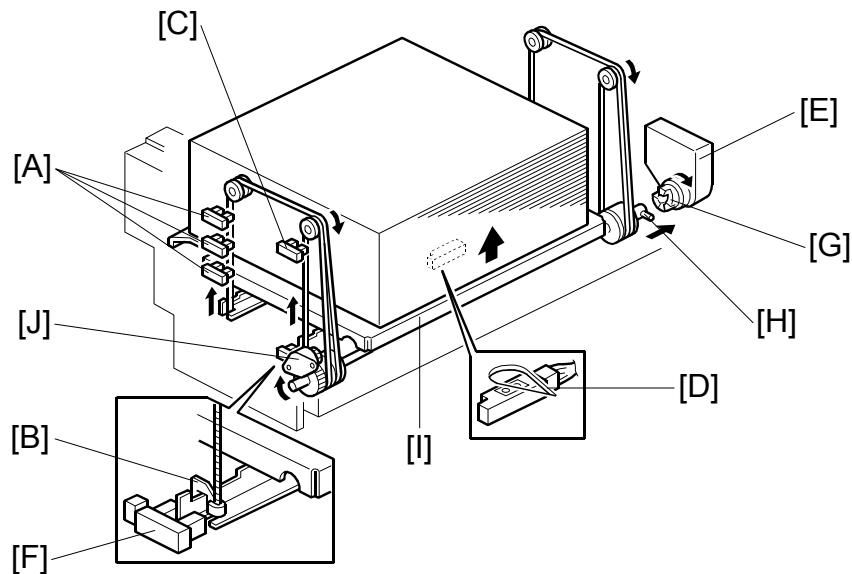

B246D964.WMFF

Paper remaining: The amount of paper remaining in the tray is detected by which combination of the three paper height sensors [A] are actuated by the actuator on the left rail as the bottom plate rises.

- With the actuator below paper height sensor 1 (the bottom sensor), no sensor is actuated and the display indicates the tray is full.
- When the actuator passes paper height sensor, the display indicates 50% of the paper supply remaining.
- When the actuator passes paper height sensor 2 (the middle sensor), the display indicates 30% of the paper supply remaining.
- When the actuator passes paper height sensor 3 (the top sensor), the display does not change. This prevents the signal from returning to the off state, which would indicate 100% of the paper remaining (the same state as when the sensor is below paper sensor 1).


Paper near-end: Detected when the actuator [B] on the right rail activates the paper near end sensor [C]. When the actuator passes this sensor, the display indicates 10% of the paper supply remaining.

Paper end: After the last sheet feeds, the paper end sensor at the top (by the feed roller) signals paper end.

When paper runs out in the right tray, the stack must be moved across from the left tray. To do that, the tray must first be lowered. The 1st tray lift motor [E] reverses until actuator [B] activates the right tray down sensor [F].

When removing the tray manually, if paper is still present, the tray lowers under its own weight as follows:

- Coupling [G] separates from pin [H] → Tray bottom plate [I] moves down.
- Damper [J] lets the tray bottom plate drop slowly.

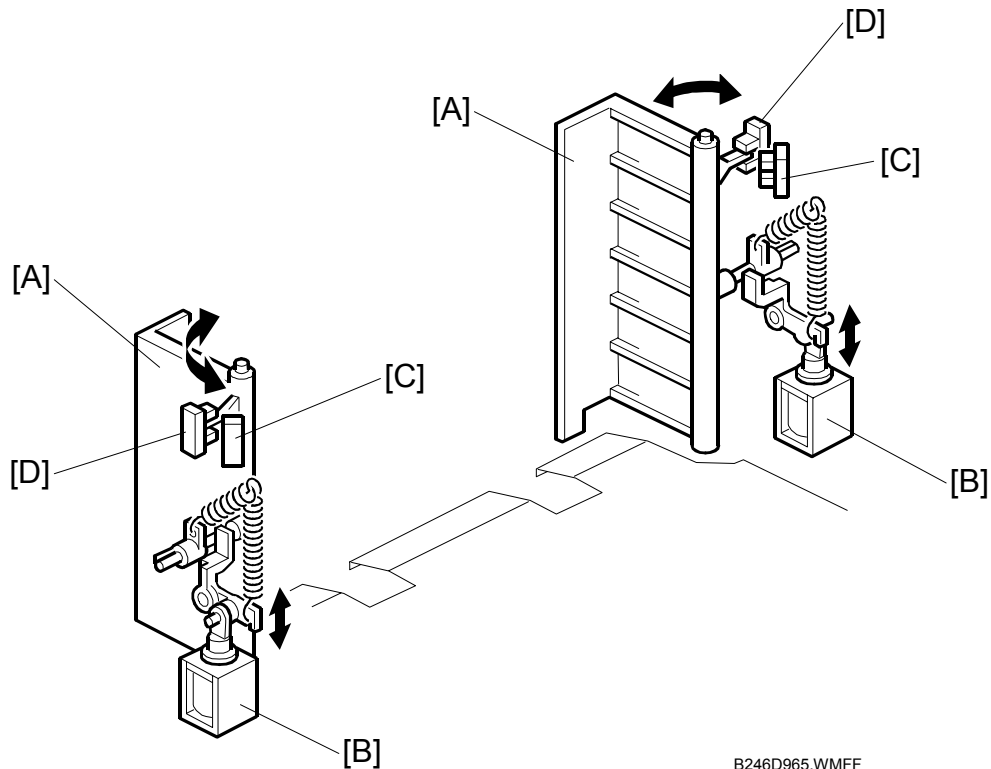
Fence Drive

The side fences [A] of the right tray open only when paper in the left tray goes to the right tray.


The side fence solenoids [B] turn on to open the side fences, until the side fence open sensors [C] activate.

After the stack has been moved into the right tray: The side fence solenoids turn off to close the side fences, until the side fence close sensors [D] activate. Then, the LCD prompts the user to set some paper in the left side of the tandem tray.

Detailed
Descriptions

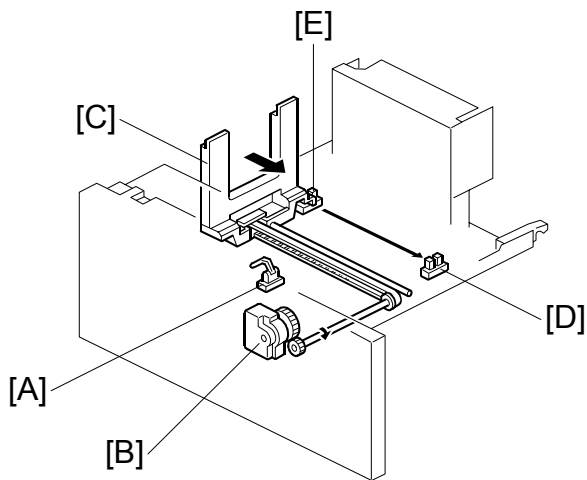Rear Fence Drive

B246D966.WMF

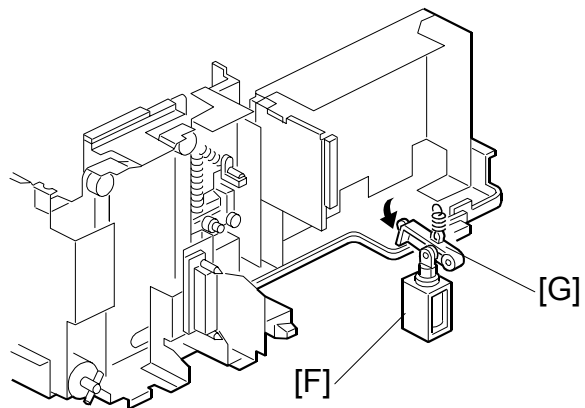


B246D967.WMFF

When the left tray paper sensor [A] detects paper but the right tray paper sensor does not, the following happens.


- Rear fence motor [B] (a DC motor, in the left tray) turns counter-clockwise → Rear fence [C] pushes the paper stack into the right tray.
- When rear fence return sensor [D] detects the actuator on the rear fence, motor [B] turns clockwise until rear fence HP sensor [E] detects the actuator.

While the rear fence is moving, the left tray lock solenoid [F] turns on and the lock lever [G] locks the left tray.

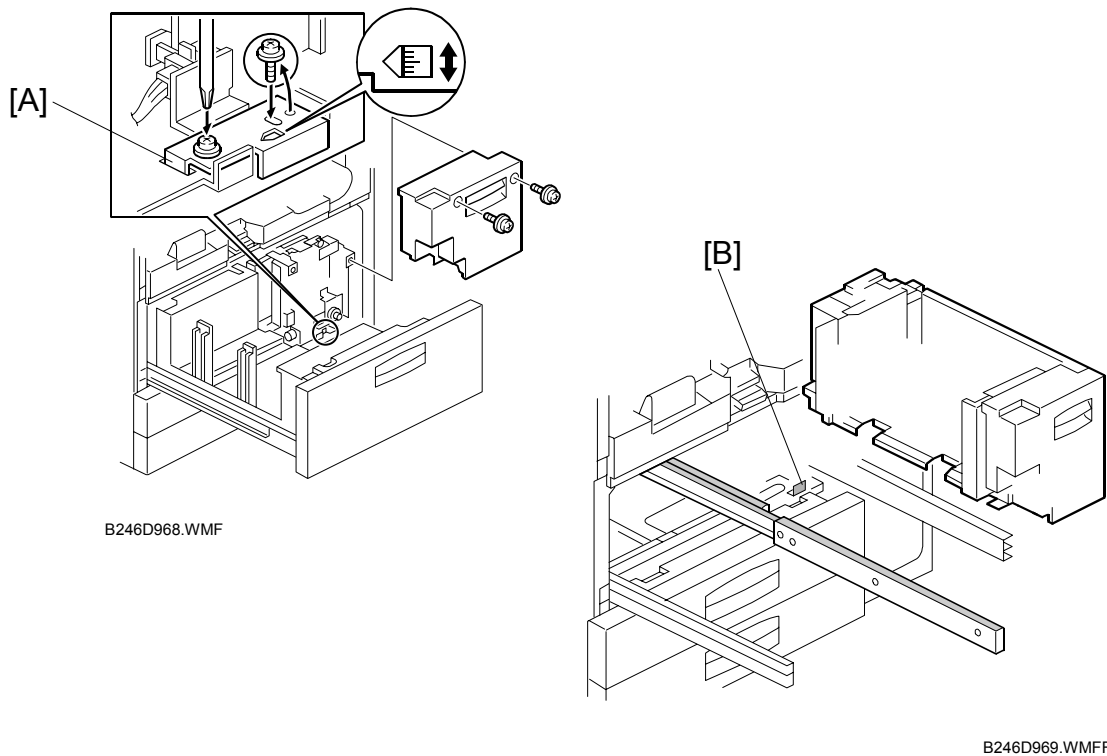Tray Side-to-side Positioning

When the feed tray is set in the paper feed unit, the side-to-side positioning plate [A] presses the feed tray against the stopper [B]. By moving the positioning plate, the tray position can be changed to adjust the side-to-side registration.

6.11.9 TRAY POSITIONING MECHANISM – TRAYS 1 TO 3

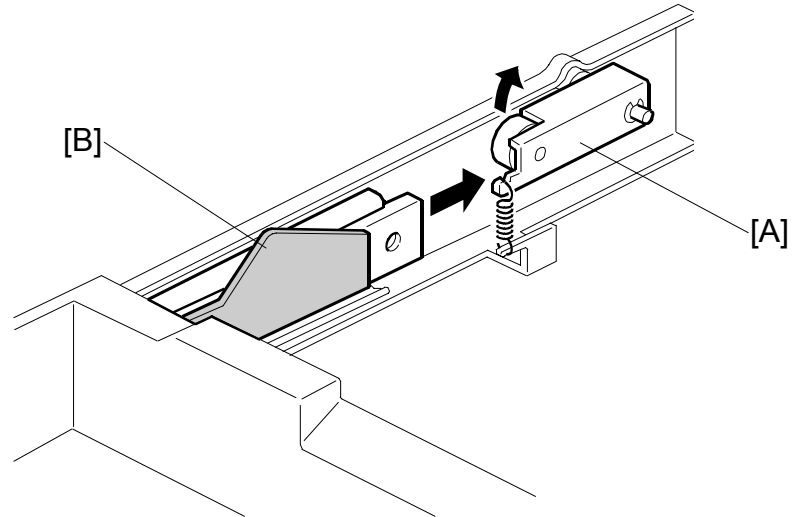


B246D970.WMFF

When the tray is placed in the paper feed unit, the lock lever [A] drops behind the lock plate [B] on the support bracket to lock the tray in the proper position.

6.11.10 BY-PASS TRAY

By-pass Feed and Separation

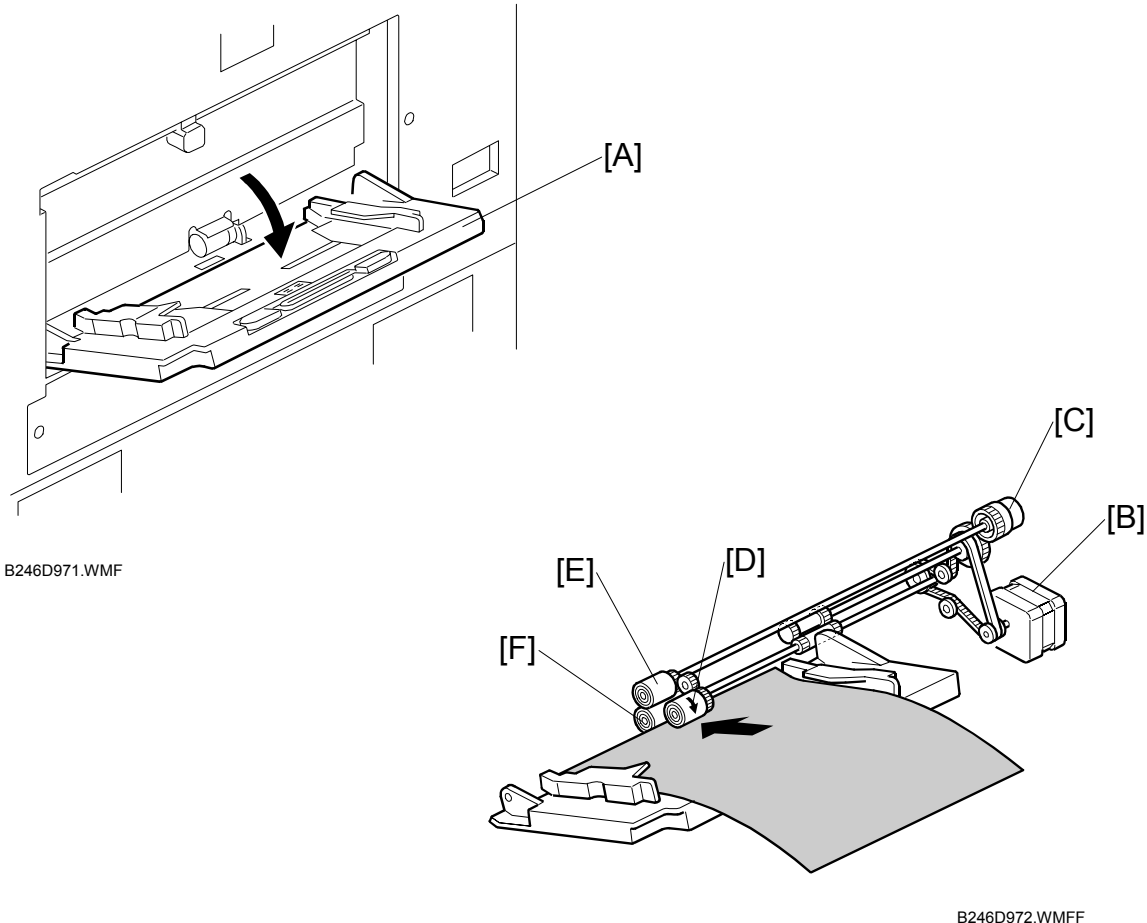


The by-pass tray [A] opens from the right side of the machine.

By-pass feed motor [B] → By-pass feed clutch [C] → Pick-up roller [D] (pick-up solenoid – see the next page) → Feed roller [E] and separation roller [F]

The by-pass tray uses a standard FRR feed system.


(**CT**) Handling Paper> Paper Feed Methods> **Forward and Reverse Roller (FRR)** or **By-pass Feed Tray**)

NOTE: The direction of feed in the by-pass tray is opposite from that of the other paper trays, so their parts (with the exception of the separation roller) are not interchangeable.

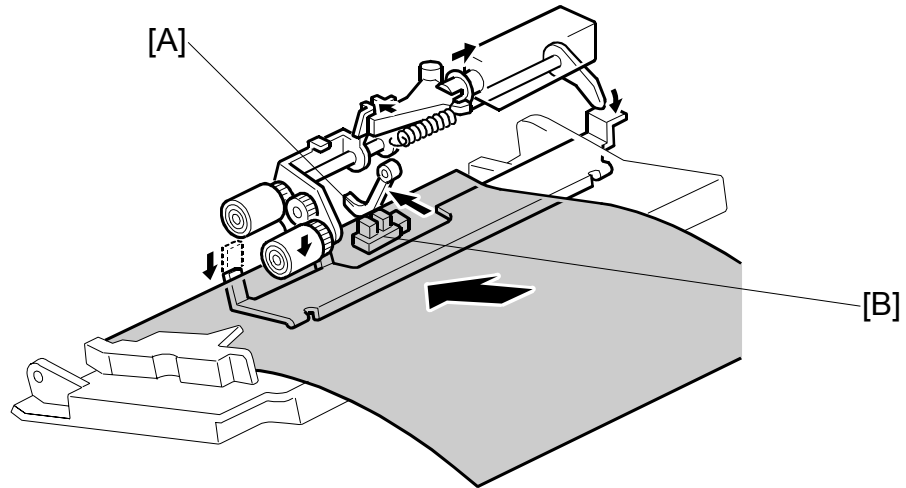By-pass Tray Paper End Detection

B246D973.VMFF


When the paper runs out, the paper end feeler [A] drops through the cutout in the by-pass paper end sensor [B].

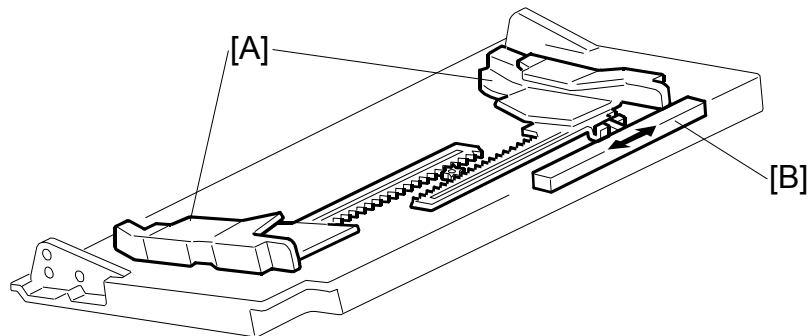By-pass Paper Size Detection

B246D974.WMFF


The positions of the side fences [A], connected to the by-pass paper size sensor [B] determine the paper width.

Paper length is determined with pulse counts read from the registration sensor.

( Handling Paper> Paper Feed> Paper Size Detection> **By-pass Size Detection**)

NOTE: Use SP1007 (By-pass Feed Paper Size Display) to confirm the size of the paper detected in the by-pass tray if paper is skewing during feeding.

The user can specify non-standard paper sizes for feeding from the by-pass tray. The size must be within the range shown in the illustration.

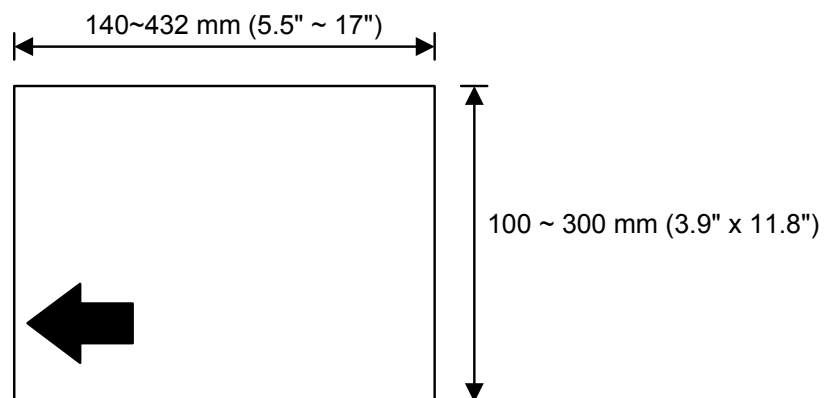

B246D975.WMFF


Detailed Descriptions

NOTE: SP1904-001~002 (By-pass Paper Size Selection): Use this to calibrate the minimum and maximum size positions of the by-pass tray side fences. Refer to Replacement and Adjustment> Paper Feed> By-pass Paper Size Detector.

SP1905 (Thick Paper – Bypass Tray): Use this to adjust the by-pass feed clutch operation if thick paper often jams at the registration roller. See “5. Service Tables” for details.

6.11.11 PAPER REGISTRATION

Overview

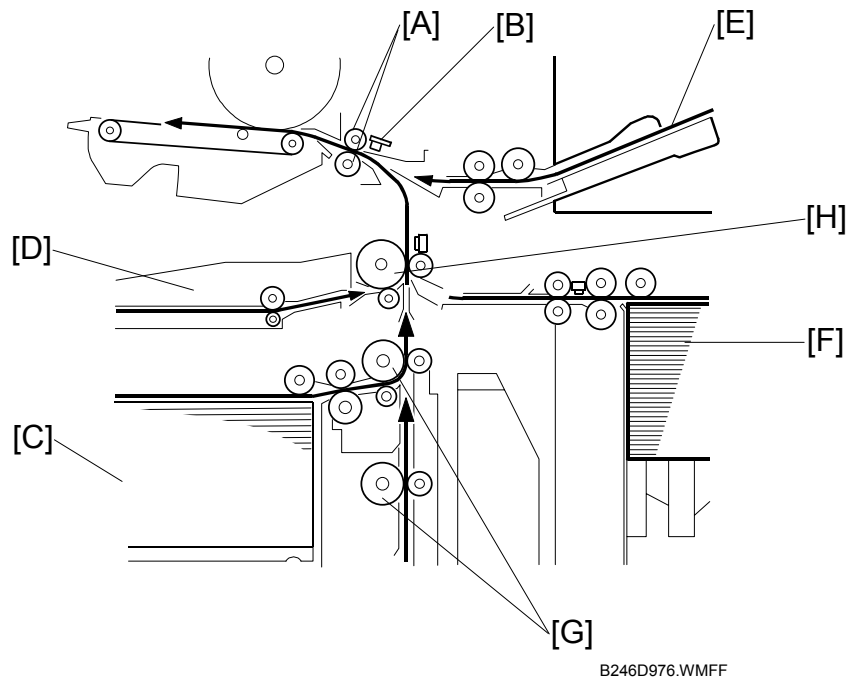


The registration rollers [A] and registration sensor [B] handle paper fed from four directions:

- Tandem tray and universal trays below [C]
- Duplex unit [D]
- By-pass tray [E]
- Optional LCT [F]

The grip rollers [G] feed paper from the trays into the vertical transport path to the registration rollers.

The upper relay roller [H] feeds all paper exiting the vertical transport path. It also feeds paper from the duplex unit and LCT.

The by-pass tray feeds paper directly to the registration rollers.

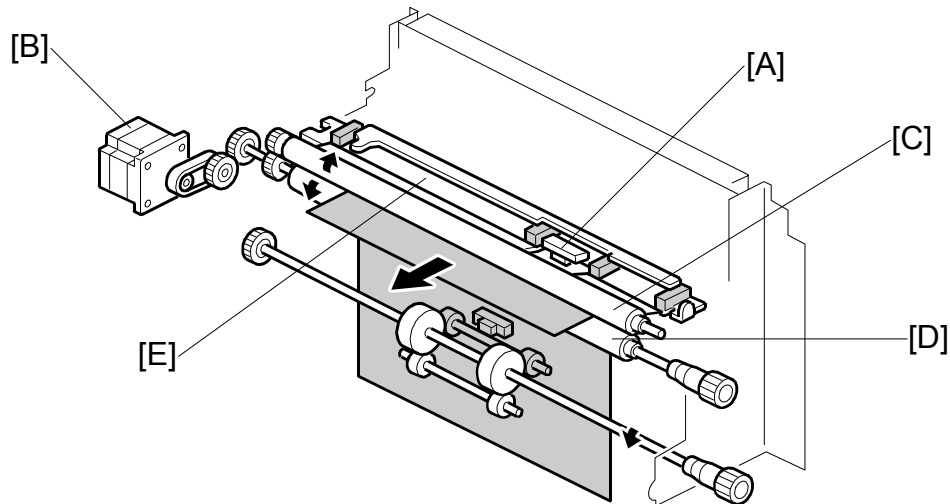Paper Registration Drive


B246D977.WMFF

When the registration sensor [A] detects the leading edge of the paper, the registration motor [B] stops the paper at the registration rollers [C, D] for a short while to correct the skew in the paper.

Mylar [E] touches the upper surface of roller [C]. This mylar removes dust from the paper while it passes the registration rollers.

NOTE: Use SP1003 (Registration Buckle Adjustment) to adjust the registration motor timing for each paper feed station or the duplex tray. For details see “5. Service Tables”.

Detailed
Descriptions

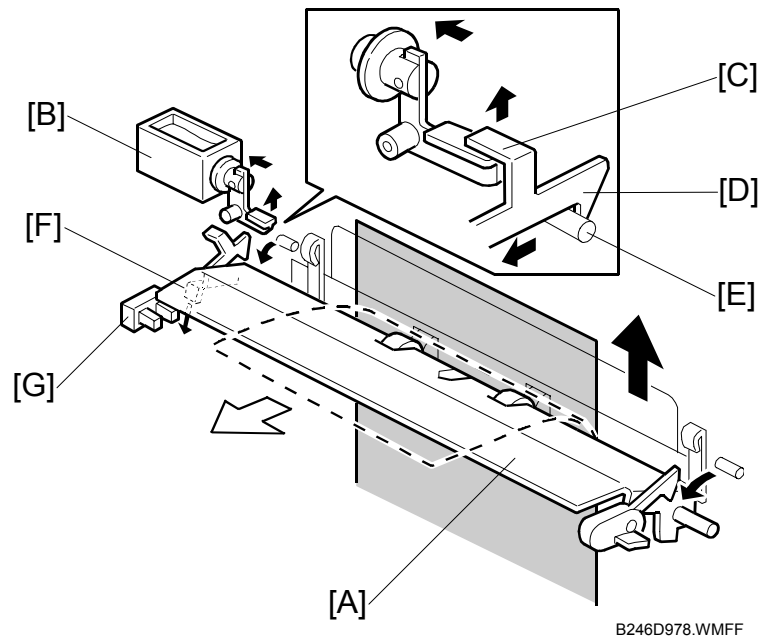Jam Removal at Paper Registration

If a paper misfeed occurs between the vertical transport rollers and the registration rollers, the next sheet is already on its way up from the paper tray, and must be stopped, or there will be a pile-up of jammed paper.

Guide plate solenoid [B] turns on → Lever [C] raises → Lock lever [D] (on the guide plate) releases from pin [E] (on the rear side frame) → Guide plate [A] falls open → Paper coming along the feed path is diverted into the duplex tray.


Actuator [F] on the guide plate activates the guide plate position sensor [G] when the guide plate opens.

The user must remove jammed paper in the feed path, the sheet in the duplex tray, and manually close the guide plate.

To prevent the guide plate from being left open, if the guide plate position sensor is activated, copying is disabled and a caution is displayed on the LCD panel.

6.12 IMAGE FUSING AND PAPER EXIT

6.12.1 OVERVIEW

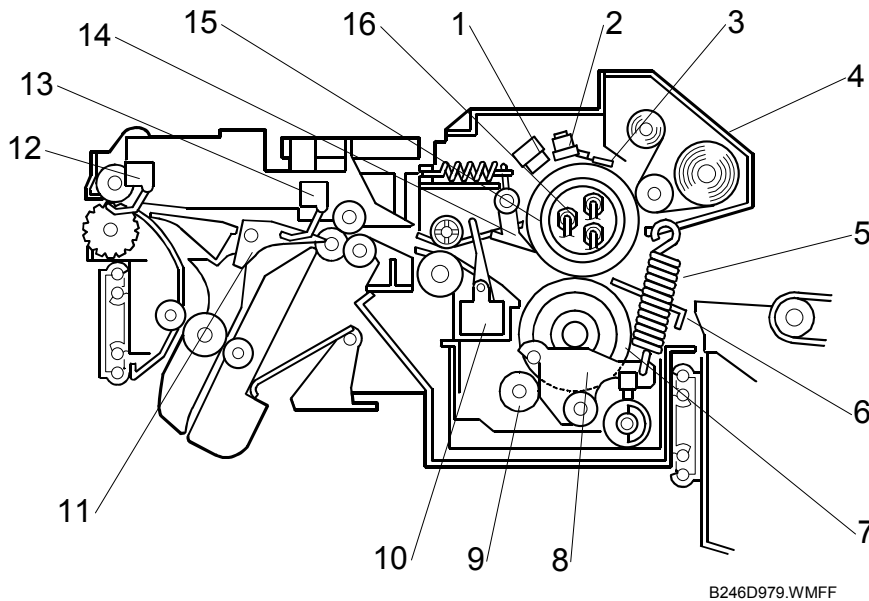

- | | |
|---------------------------------------|------------------------------------|
| 1. Thermistor (Center) * ¹ | 9. Pressure Roller Cleaning Roller |
| 2. Thermostats * ² | 10. Fusing Exit Sensor |
| 3. Thermistors * ³ | 11. Exit Junction Gate |
| 4. Web Cleaning Unit | 12. Paper Exit Sensor |
| 5. Pressure Spring | 13. Exit Unit Entrance Sensor |
| 6. Entrance Guide Plate | 14. Hot Roller Strippers |
| 7. Pressure Roller | 15. Hot Roller |
| 8. Pressure Arm | 16. Fusing Lamps * ⁴ |
- *¹ Non-contact thermistor (B064 Series only)
 *² Non-contact thermostats (B064 Series x2, B140/B246 Series x3).
 *³ Contact thermistors (B064 Series x1 end, B140/B246 Series x 2, end and center)
 *⁴ B064 Series x2, B140/B246 Series x3

 Detailed
Descriptions

The fusing unit is a hot roller/pressure roller system.

B064 Series

Two 550W fusing lamps switch on and off at the same time to keep the hot roller temperature steady at 185°C.

The center thermistor (1) (not in direct contact with the hot roller) controls the temperature at the center of the hot roller. The end thermistor (3) directly contacts the hot roller surface and prevents overheating. The two thermostats (2) also prevent overheating.

B140/B246 Series

Many changes were made to make sure that the fusing unit can get to the target operation temperature in 30 seconds or less.

There are three fusing lamps:

- 650 W Fusing Lamp: Applies heat to the center of the hot roller.
- 550 W Fusing Lamp: Applies heat to the ends of the hot roller.
- 280 W Fusing Lamp: Also applies heat to the ends of the hot roller, but only during the warmup (after the machine is turned on, or when it recovers from the energy save mode).

NOTE: Only the 650 W and 550 W fusing lamps turn on and off to keep the hot roller temperature steady at 185°C.

These changes were made to the hot roller and the pressure roller:

- To make the roller surface become hot more quickly, the thickness and diameter of the hot roller were decreased.
- The pressure roller surface was changed to a bubble-type material. This gives the correct nip width between the hot roller and the pressure roller.

The center and end thermistors touch the hot roller. They monitor the temperature of the hot roller and give feedback for fusing-temperature control.

The thermistor at the center of the hot roller makes temperature detection better. But its service life is shorter because it always touches the hot roller. For more, see section "2. Preventive Maintenance".

The three thermostats also monitor the temperature of the hot roller, to prevent overheating. These thermostats do not touch the hot roller.

All Series


The web cleaning unit (web roller, cleaning roller, and take up roller) applies a light coat of silicone oil to the hot roller to prevent toner and paper dust from sticking to the hot roller.

The fusing exit sensor detects concertina jams at the fusing unit exit. This sensor is required because the user may not see this type of jam in the machine when removing a jam at the exit.

The fusing unit and exit unit can be separated, making it easier to service.

6.12.2 FUSING MECHANISM

B064 Series

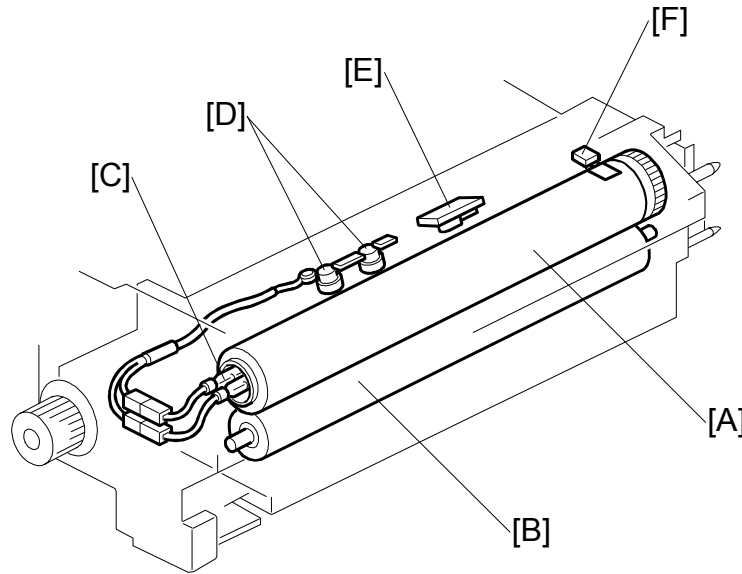

B246D980.WMFF

The hot roller [A] and pressure roller [B] fuse the toner to the paper.

Two fusing lamps [C] (550 W) are inside the hot roller.

Two thermostats [D] are positioned above the hot roller near the center.


One thermistor [E] is also positioned above the hot roller near the center.

Another thermistor [F] is in contact with the end of the hot roller.

Thermistors	
Center (non-contact) thermistor	Temperature control
End (contact) thermistor	Overheating protection
Thermostats ^{*1}	
Center (non-contact) thermostats	Overheating protection

^{*1} If the thermostats trigger an alert, the thermostat requires replacement.

A fusing exit sensor, located between the hot roller and paper exit roller, detects paper jams inside the fusing unit.

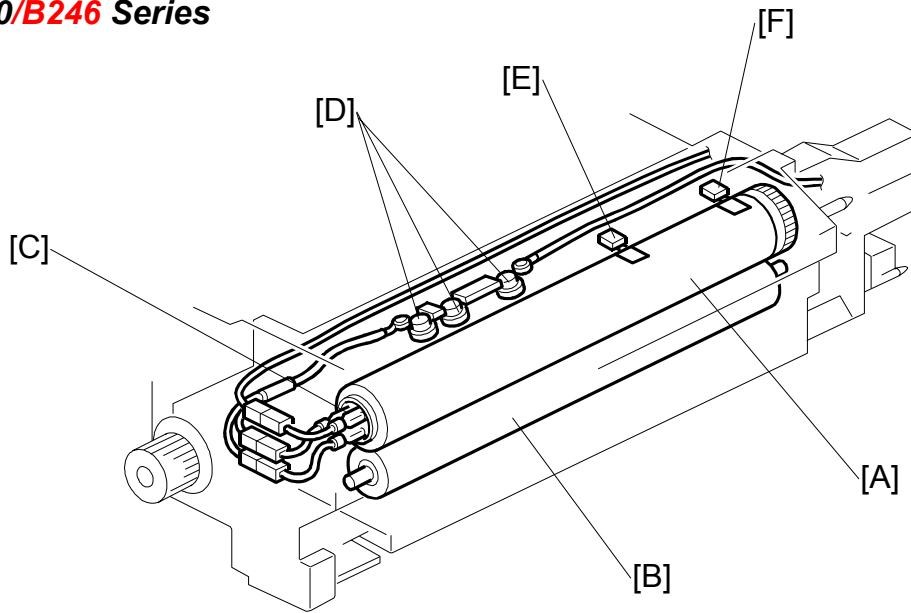B140/B246 Series

B246D981.WMFF

The hot roller [A] and pressure roller [B] fuse the toner to the paper.

The hot roller, made of soft silicone rubber, has a thin layer of Teflon on the surface.

There are three fusing lamps [C] in the hot roller.

There are three thermostats [D] above the hot roller, near the center.

One thermistor [E] touches the hot roller near the center.


Another thermistor [F] touches the end of the hot roller.

Thermistors	
Center (contact) thermistor	Temperature control
End (contact) thermistor	Temperature control
Thermostats^{*1}	
Center (non-contact) thermostats	Overheating protection

^{*1} If the thermostats trigger an alert, the thermostats must be replaced.

6.12.3 PRESSURE ROLLER

B064 Series

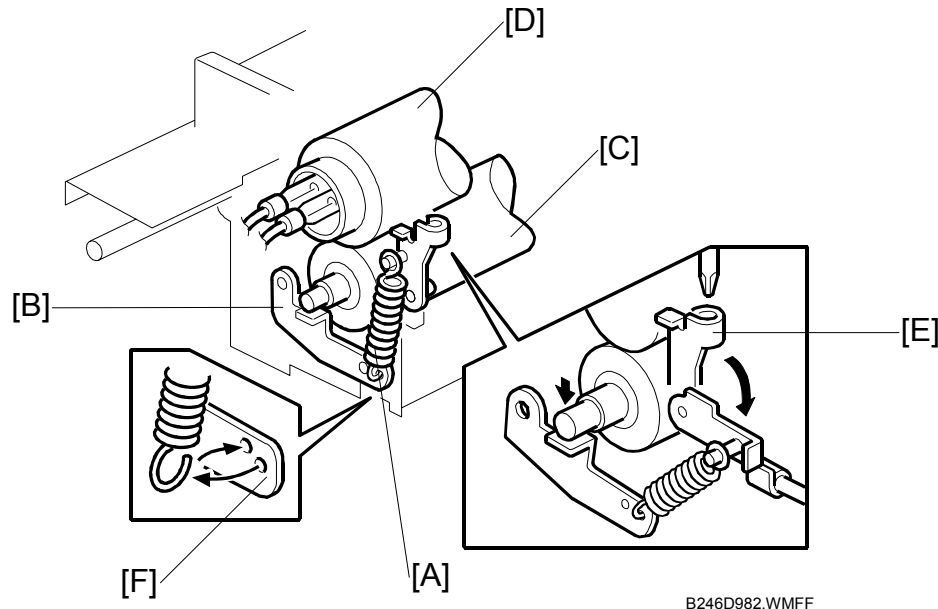


Heavy springs [A], attached to pressure arms [B] below both ends of the pressure roller [C], keep the roller pressed against the hot roller [D] above.

Release the springs [E] in order to release the pressure from the rollers for maintenance.

Two holes [F] are provided on each pressure arm for the springs.

NOTE: Normally, the springs should be attached to the lower holes. Attaching the springs to the upper holes exerts less pressure on the hot roller. Attach the springs to the upper holes only for especially thin paper.

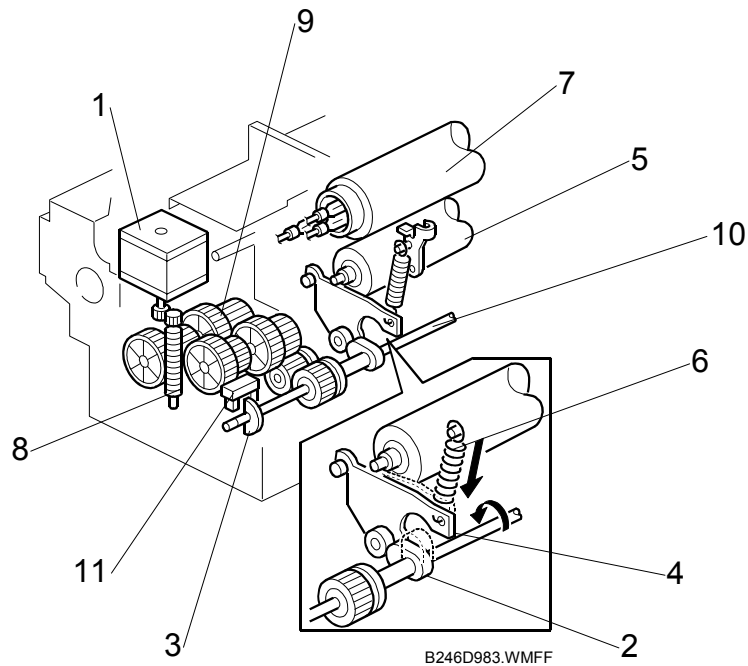B140/B246 Series

This mechanism makes sure that the hot roller and pressure roller touch only when the machine makes copies. This prevents distortion of the pressure roller.

While the machine is turned on:

- The fusing pressure release motor [1] comes on and turns the cams [2] until the cam position actuator [3] is at the home position. This turns the cams down and pushes the pressure arms [4] below the ends of the pressure roller [5].
- This expands the heavy springs [6] and pulls the pressure roller away from the hot roller [7].

When a job starts:

- The pressure release motor turns on.
- The vertical worm gear [8] turns the sequence of gears [9], and this turns the cam shaft [10].
- The cam shaft turns the actuator into the gap in the fusing pressure release HP sensor [11].
- The actuator goes out of the gap in the fusing pressure release HP sensor when the cam is in the 'up' position. This turns the motor off. This lets the heavy springs pull the pressure roller against the hot roller.

When the job ends and the machine goes back to the ready condition:


- The pressure release motor comes on again and turns the cams to the 'down' position. This pulls the pressure roller away from the hot roller.
- When the cams are in the 'down' position again, and the actuator goes out of the gap, the sensor turns the motor off.

At paper jam or SC error:

- The pressure roller is again pulled away from the hot roller.

6.12.4 HOT ROLLER CLEANING


Overview

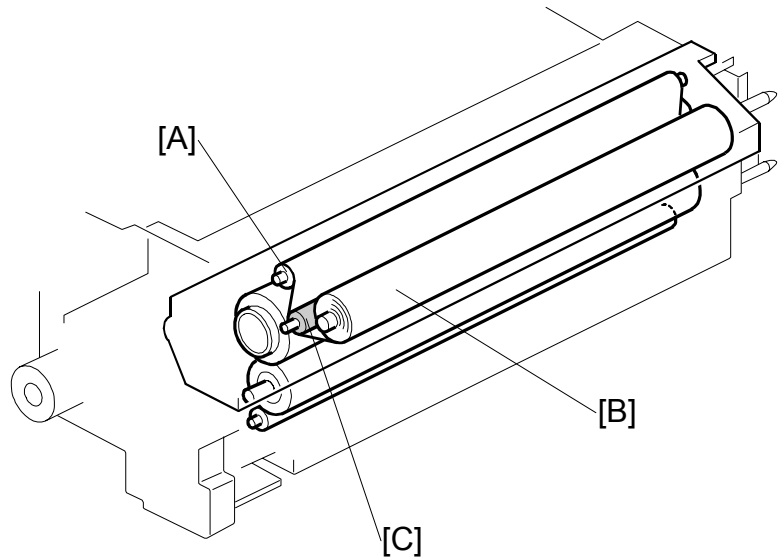

B246D984.WMFF

The cleaning web is saturated with silicone oil.

Inside the web cleaning unit, the web take-up roller [A] pulls the web from the web supply roller [B] past the cleaning roller [C]. The cleaning roller is pressed against the hot roller.

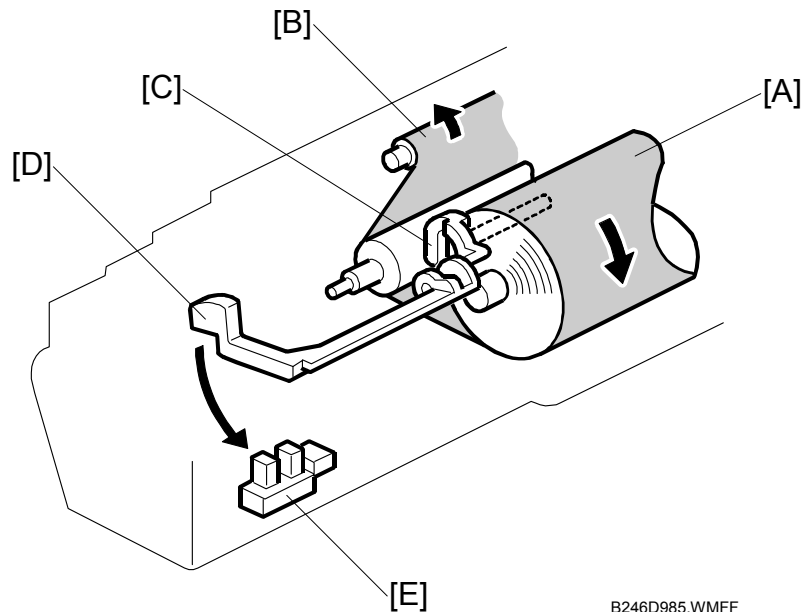

Web Drive

The web motor drives the web supply roller [A] and web take-up roller [B]. The web motor switches on for 0.8 to 2.8 s at 15 s intervals during copying.

Web Near-end


The machine monitors how much of the roll has been fed since it was installed. The setting of SP1902-004 (Fusing Web Motor Control) determines the amount of web remaining on the web roll when the near end alert is issued. (The default setting is after 80% of the web has been used, which is about 266K A4 LEF.)

Web End

A light-tension spring holds the feeler [C] against the top of the feed roll. When the roll runs out, the actuator on the end of the feeler [D] enters the web end sensor [E].

When all of the web has been used (after about another 30k copies), the actuator rotates, its feeler actuates the web end sensor, and SC550 (Fusing Unit Web End) is logged. After replacing the web with a new one, reset SP1902-001 to 0 to release SC550.

6.12.5 FUSING UNIT ENTRANCE GUIDE

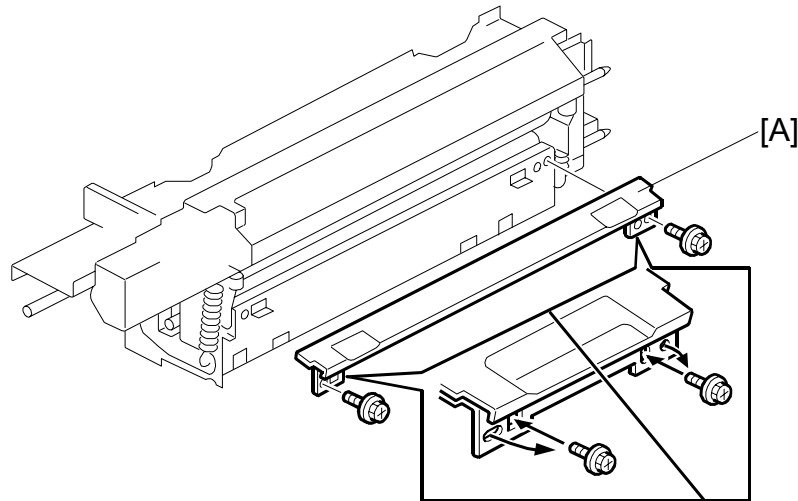


B246D986.WMFF

The height of the entrance guide [A] can be adjusted.

- **Normal or thick paper.** For normal or thick paper, the guide should be up with the screws in the outer holes (this is the standard or default position). Thick paper does not bend easily and is less likely to crease. The standard position also allows direct access to the gap between the hot roller and pressure roller. This prevents thick paper from buckling against the hot roller, which can lead to blurring at the leading edge of the copy.
- **Thin paper.** If wrinkling occurs with thin paper, adjust the guide down by removing both screws and moving them to the inner holes. This lengthens the paper path slightly to prevent the paper from wrinkling in the unit.

NOTE: 1) Before shipping, the screws are set in the outer holes.
2) If the customer is experiencing problems with paper sizes larger than A4, then use the inner holes.

6.12.6 FUSING UNIT DRIVE

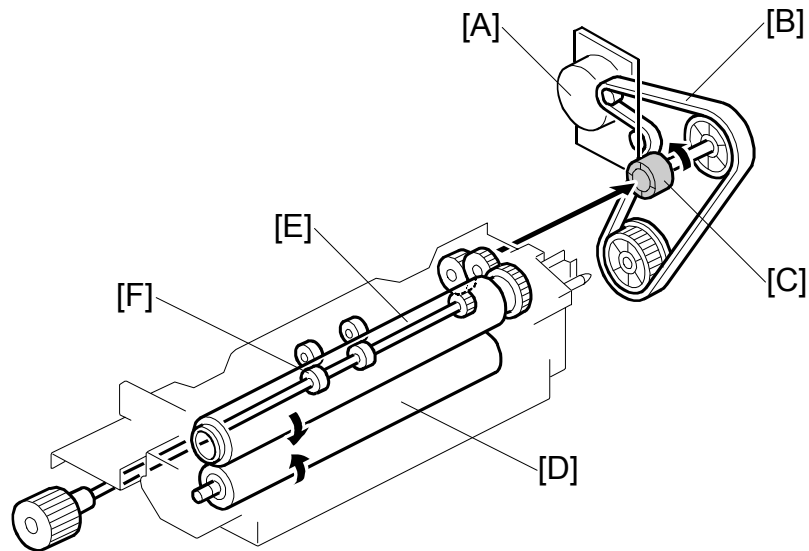

B246D987.WMFF

Fusing/exit motor [A] → timing belt [B] → gear coupling [C] → fusing unit

Inserting the fusing unit engages the coupling [C].

The pressure roller [D] is driven by friction between the pressure roller and the hot roller [E].

The fusing unit exit rollers [F] are driven through some gears.


6.12.7 CPM DOWN MODE

CPM (Copies Per Minute) Down Control adjusts the copy speed automatically when printing OHP (transparencies) or extremely thick paper from the bypass tray.

Slowing down the paper as it goes through the fusing unit makes the paper spend more time in the fusing unit. This compensates for the loss of temperature caused by the demand on the hot roller.

When feeding special paper such as tab paper or thick paper from a paper station other than the by-pass tray, the copy speed can be adjusted with SP1901 (CPM Down Setting for Special Paper). A slower speed selection ensures better fusing. Adjusting SP1901 does not affect fusing temperature control.

B140/B246 Series

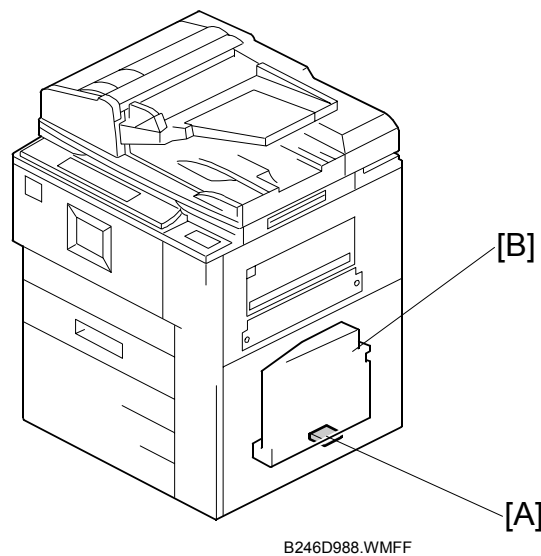

There is a temperature and humidity sensor [A] below the toner collection bottle [B].

If this sensor detects that the ambient temperature is less than 15°C (59°F) and the center thermistor detects that the hot roller temperature is less than 153°C, CPM down automatically decreases speed to 80% (60 to 48 cpm). The speed goes back to 100% when the fusing temperature gets to 156°C (153°C+3°C).

At normal room temperature, if the center thermistor detects that the hot roller temperature is less than 148°C, CPM down automatically decreases speed to 80% (60 to 48 cpm). The speed goes back to 100% when the fusing temperature gets to 151°C (148°C +3°C).

6.12.8 FUSING TEMPERATURE CONTROL

This machine uses either on/off control or phase control to control the temperature of the hot roller. Before shipping, the machine is set for on/off control.

Generally, phase control is used only if the customer has a problem with electrical noise or interference on the power line. Phase control can be selected with SP1104-001 (Fusing Temperature Control).



The thermistor contacting the center of the hot roller surface monitors the temperature of the hot roller. The CPU turns the fusing lamps on and off to keep the hot roller surface at the target temperature. The target temperature depends on the paper type.

Paper	B064 Series	B140/B246 Series	Adjust With
Normal	185°C±5 (365°F±9)	195°C±5 (383°F±9)	SP1105-001, 002, 007, 008
OHP	165°C (329°F)	165°C (329°F)	SP1105-003, 004
Thick Paper	190°C (374°F)	200°C (392°F)	SP1105-005, 006

SP1105: See the SP table for details.

B064 only: As shown in the illustration, at power on when the temperature is less than 100°C, there is an interval of 70 s during which the hot roller rotates before printing starts (this is called 'fusing idling'). This interval allows the hot roller to reach the control temperature. At power on when the temperature is over 100°C, printing can start as soon as the hot roller reaches the warm-up temperature of 182°C.

- NOTE:**
- 1) SP1103 (Fusing Idling) adjusts the fusing idling time if fusing on the first and second copies is incomplete due to low room temperature. This function is available for the B064 Series only.
 - 2) SP1106 (Fusing Temperature Display) displays the current center and end temperatures for the hot roller.
 - 3) B140/B246 series: SP1907 (Pre Fusing Idling On/Off). If fusing is not completed on the first few copies with thick paper or OHP, turn idling on for these paper types with this SP.

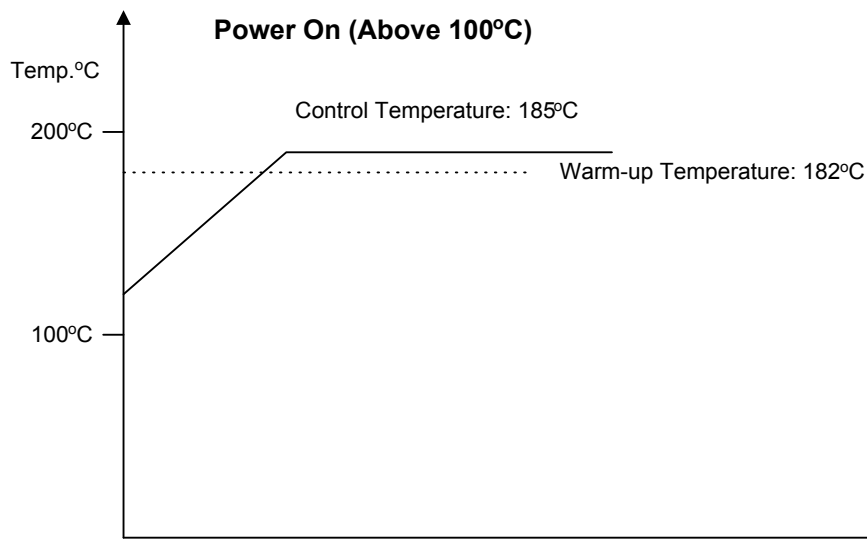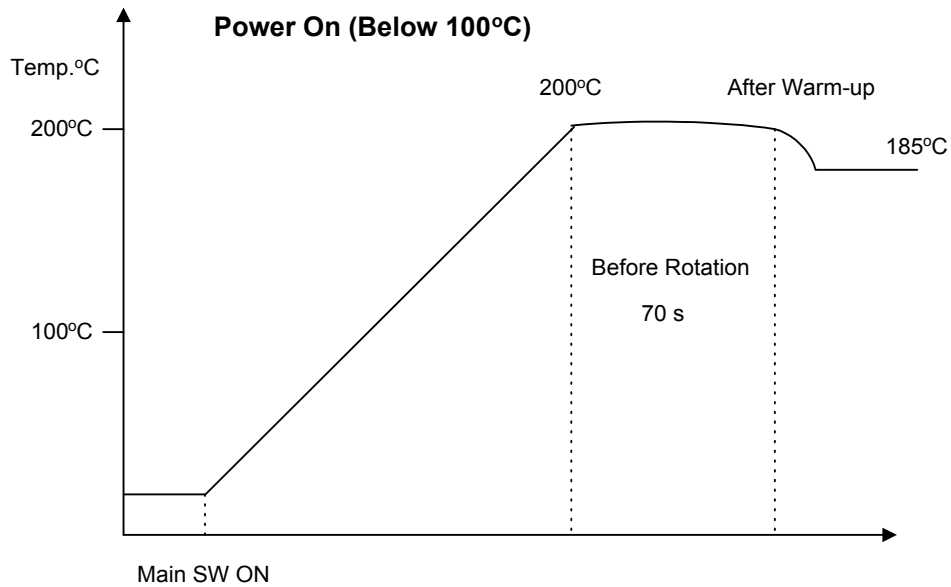


B246D989.WMFF

Detailed Descriptions


Here is a list of SC codes issued if a fusing unit error occurs. For details, see “Troubleshooting”.

SC541	Fusing thermistor open
SC542	Fusing temperature warm-up error
SC543	Fusing lamp overheat error 1 (software)
SC544	Fusing lamp overheat error 1 (hardware)
SC545	Fusing lamp overheat error 2

NOTE: To release the machine after one of these SC codes is issued, just enter the SP mode.

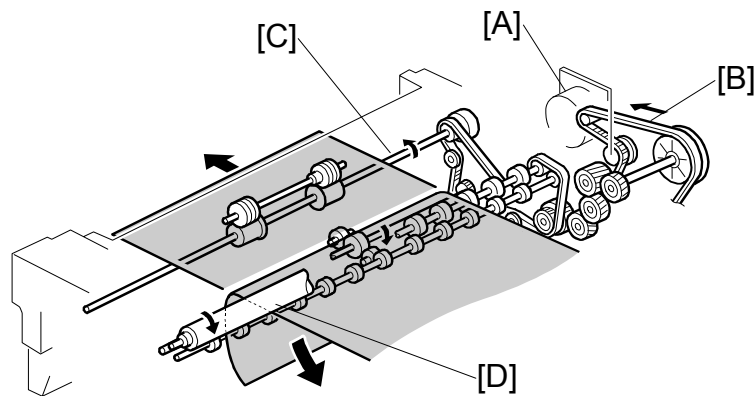6.12.9 EXIT


B246D990.WMF

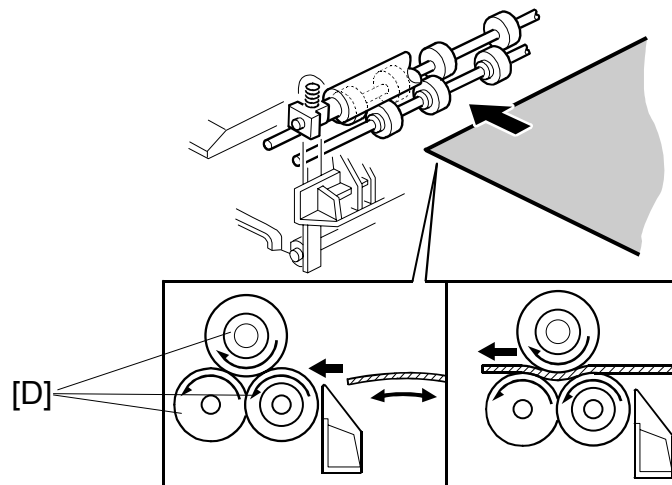

B246D991.WMFF

Fusing/exit motor [A] → timing belt [B] → exit roller [C] via gears and timing belts.
The de-curler rollers [D] remove curl from the paper before it exits. This improves feed through the duplex unit and finishers.

6.12.10 EXIT JUNCTION GATE

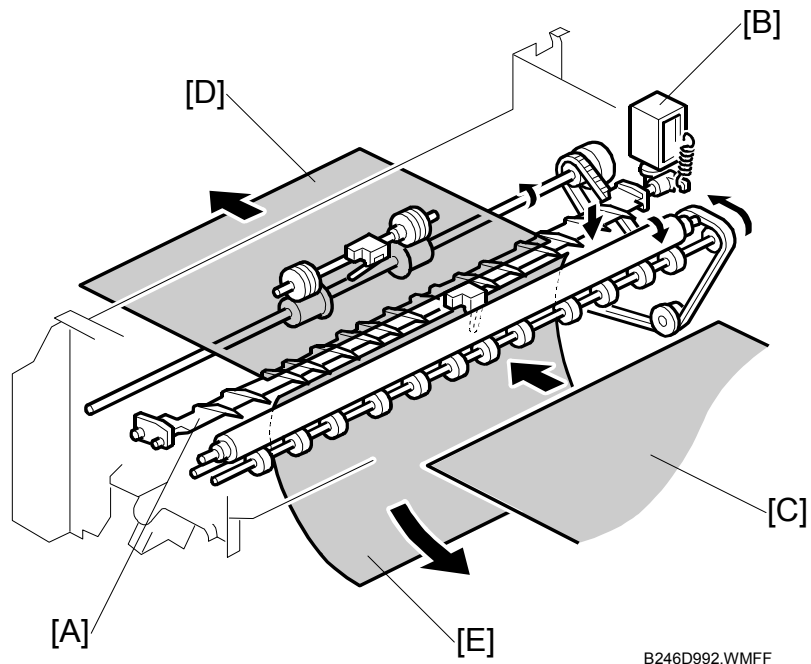


The exit junction gate [A] is controlled by the exit junction gate solenoid [B].

- If the solenoid is on: The gate opens, and paper [C] goes straight through [D] to the output tray (for face-up delivery) or the finisher.
- If the solenoid is off: The gate remains closed and forces the paper down [E] to the duplex unit.

6.13 DUPLEX UNIT

6.13.1 OVERVIEW

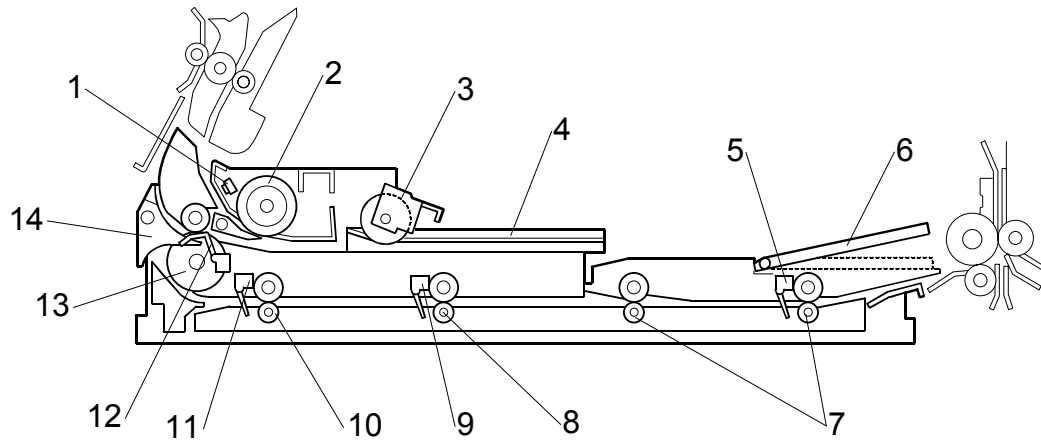

B246D993.WMFF



- | | |
|----------------------------------|-------------------------------|
| 1. Duplex Entrance Sensor | 8. Transport Roller 2 |
| 2. Inverter Entrance Roller | 9. Duplex Transport Sensor 2 |
| 3. Reverse Trigger Roller | 10. Transport Roller 1 |
| 4. Jogger Fences | 11. Duplex Transport Sensor 1 |
| 5. Duplex Transport Sensor 3 | 12. Duplex Inverter Sensor |
| 6. Trailing Edge Guide Plate | 13. Inverter Exit Roller |
| 7. Duplex Transport Rollers 3, 4 | 14. Duplex Junction Gate |

Normally the page is fed out directly face-up to the output tray. If the user selected face-down output, the exit junction gate sends the page to the inverter. The inverter inverts the page for face-down output.

If the user selected duplex mode, after the inverter inverts the page, the duplex junction gate directs the page into the duplex unit, then the duplex unit feeds the page back to the machine for printing the second side.

NOTE: When the duplex unit is removed, the trailing edge guide plate (6) drops to the horizontal position to make it easier to remove.

6.13.2 DUPLEX DRIVE

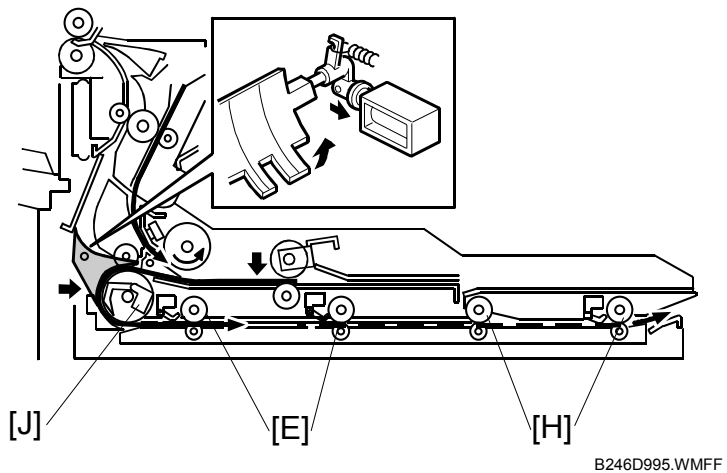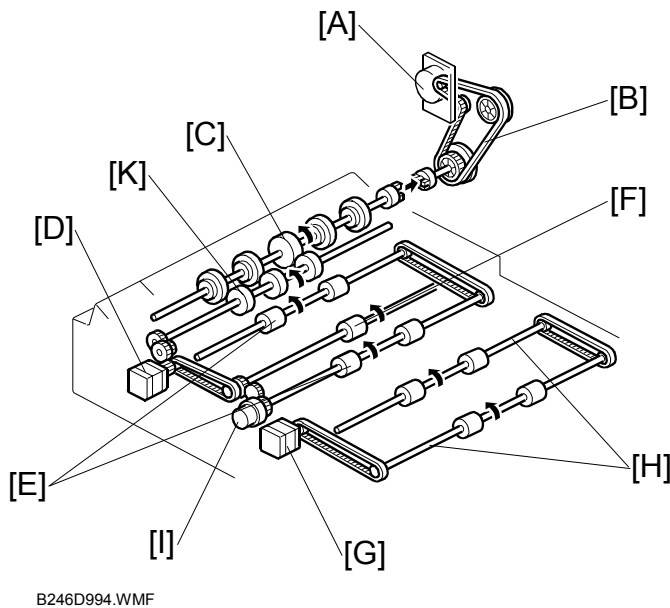

Detailed
Descriptions

Fusing/exit motor [A] → Timing belt [B] → Inverter entrance roller [C]

Duplex inverter motor [D] → Timing belt → Transport rollers 1, 2 [E] and reverse roller [F]

Duplex Inverter motor [D] → Inverter exit roller [K]


Duplex transport motor [G] → Timing belt → transport rollers 3, 4 [H]

Duplex transport clutch (B064)/ gear (B140, B246) [I]:

- **B064: The clutch** stops transport rollers 1, 2 [E] when there are two sheets in the duplex paper path (when interleaving is used) → Allows the sheet in front to be fed out of the duplex unit by motor [G] and rollers [H].
- **B064: The clutch** is controlled by the duplex inverter sensor [J]

6.13.3 INVERTER OPERATION

Inverter Feed-in and Jogging

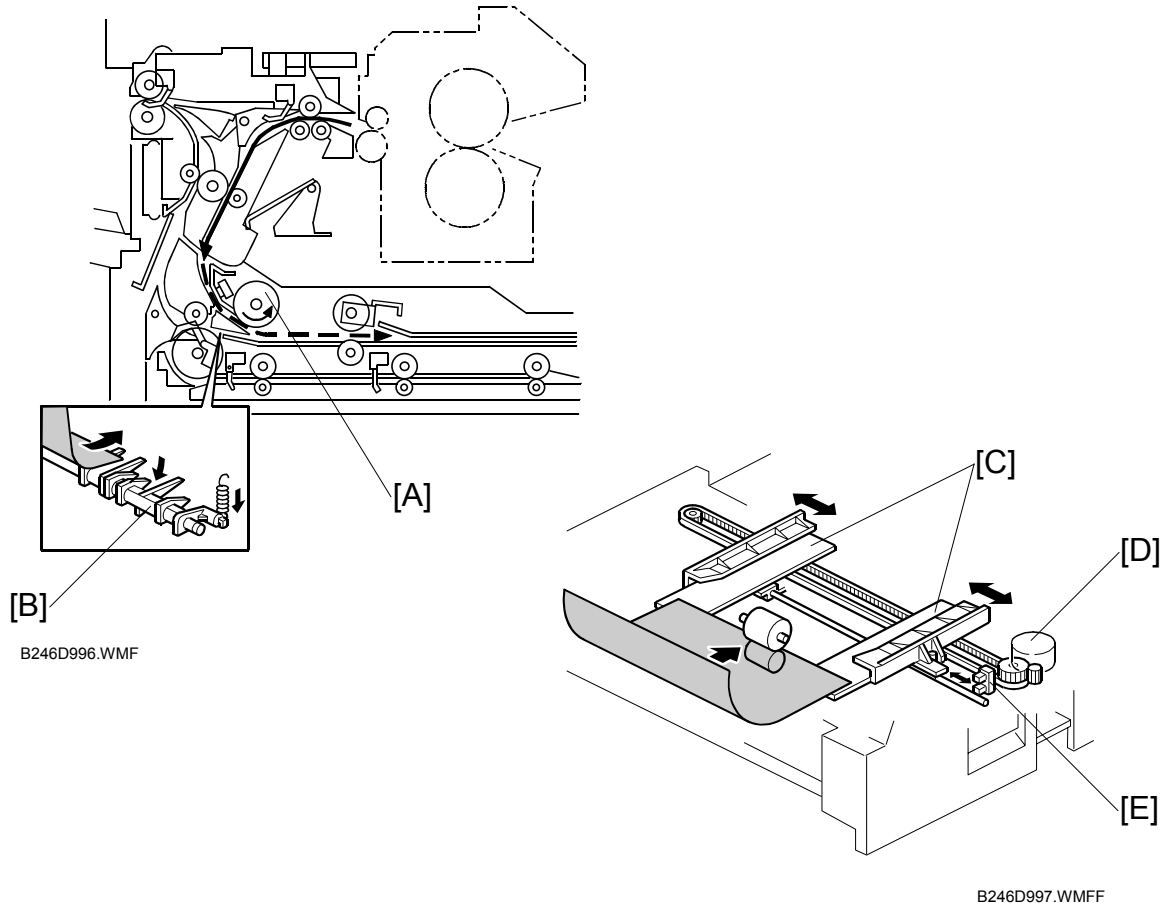

Just after the main switch is turned on:


- Jogger motor [D] (a stepper motor) moves the jogger fences [C] to home position (determined by the duplex jogger HP sensor [E]).

When the Start key is pressed:

- Motor [D] positions fences [C] 20 mm away from the selected paper size to wait for the paper.
- Inverter entrance roller [A] feeds paper to the jogger section → The paper pushes down the gate [B].

After the paper passes through the gate:

- Motor [D] (a stepper motor) moves the jogger fences [C] in to square the paper. This happens every page.
- After this, the jogger fences move back to the previous position (12 mm away from the paper)
- A spring pushes the gate back up again after the paper has gone (there is no solenoid).

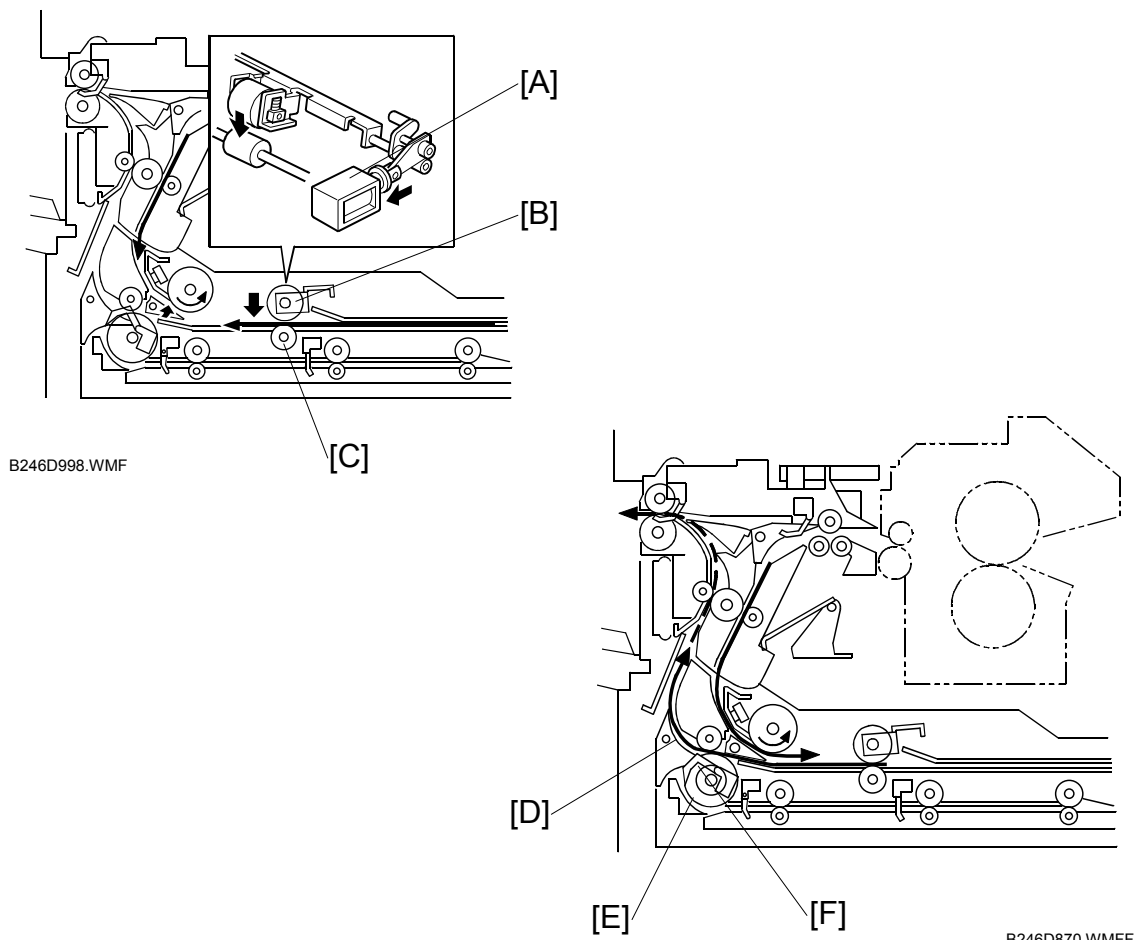Inverter Feed-out


- [A]: Reverse trigger roller solenoid
 [B]: Reverse trigger roller
 [C]: Reverse roller
 [D]: Paper
 [E]: Inverter exit roller
 [F]: Duplex inverter sensor

After jogging, each page is fed back as follows:

- Solenoid [A] pushes down roller [B].
- Roller [B] contacts roller [C], catching the paper between the two rollers.
- Roller [C] always turns counter-clockwise, and feeds the paper [D] backwards to roller [E].

When the leading edge of the paper, now caught by roller [E], passes sensor [F], solenoid [A] switches off and roller [B] returns to its home position.

6.13.4 DUPLEX TRAY FEED

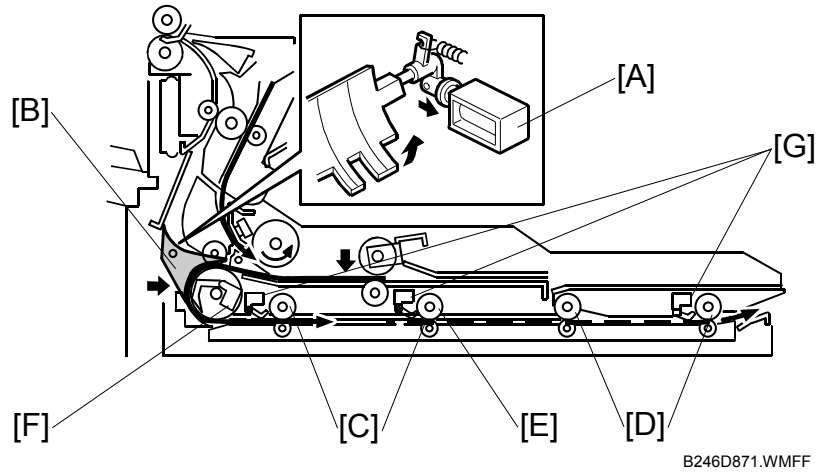

After inversion:

- If duplex mode is not selected, the duplex junction gate solenoid [A] does not switch on to open the duplex junction gate [B]. The paper goes to the output tray or finisher face down.
- If duplex mode is selected, after the paper leaves the inverter, the solenoid [A] switches on and opens the junction gate [B]. The paper goes down to the duplex tray.

For details of how the transport rollers [C, D], duplex transport clutch [E (not shown here)], and duplex inverter sensor [F] control duplex feed, see 6.13.2.

Duplex transport sensors 1, 2, 3 [G] detect jams in the paper path.

6.13.5 DUPLEX INTERLEAVE FEED

The number of sheets that can be processed at a time depends on the size of the paper.

The table below shows the order of page processing for a 14-page job. Odd numbers are the front sides of the pages, even numbers are the back sides.

	Order of Page Processing →													
Scanning Order	1	2	3	4	5	6	7	8	9	10	11	12	13	14
A4/LT LEF or smaller ^{*1}	1	3	5	2	7	4	9	6	11	8	13	10	12	14
Longer than A4/LT(LEF) ^{*2}	1	3	2	5	4	7	6	9	8	11	10	13	12	14

^{*1}: 3 pages can be interleave processed at once.

^{*2}: Only 2 pages can be interleave processed at once.


The following diagrams show where the 7 sheets are located at every step during a 14-page duplex print job with A4/LT LEF paper (three pages can be in the feed path at once).

1. First 3 sheets ①②③ fed.

1) 1st sheet, front page printed (pg. 1)


2) 2nd sheet, front page printed (pg. 3)

3) 3rd sheet, front page printed (pg. 5)

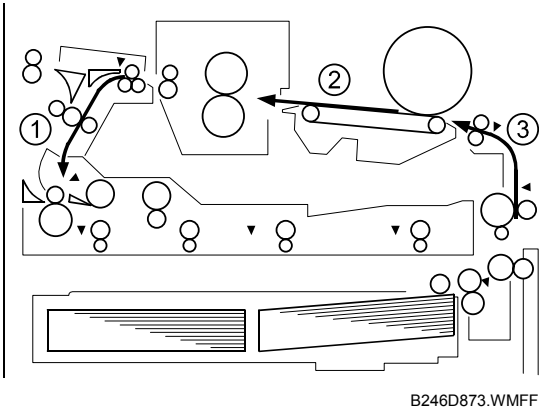


Detailed
Descriptions

2. 1st, 2nd, 3rd sheet fed to duplex tray and inverter table.
3. 4th sheet feeds.

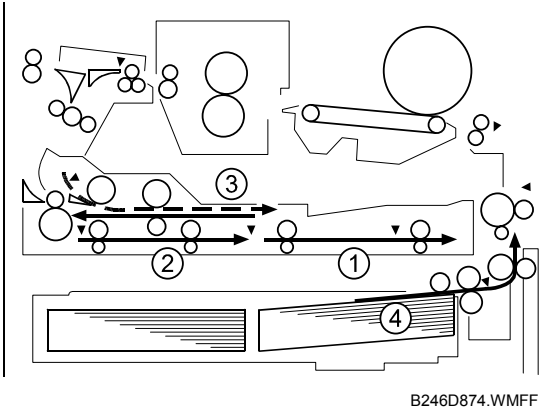


4. 1st sheet, back page printed (pg. 2)

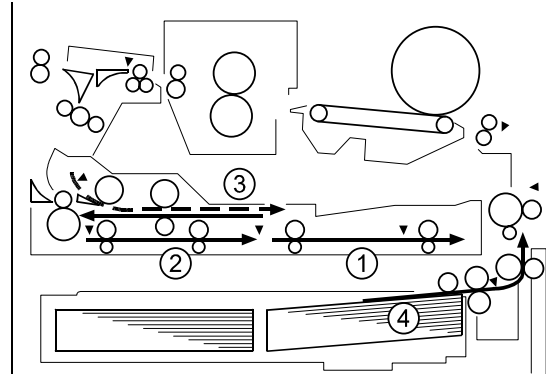


B246D875.WMFF

5. 4th sheet feeds, front page printed (pg.7)
6. 1st sheet exits (pp. 1, 2)
7. 4th sheet feeds to duplex tray.
8. 2nd sheet, back page printed (pg. 4)
9. 5th sheet feeds.

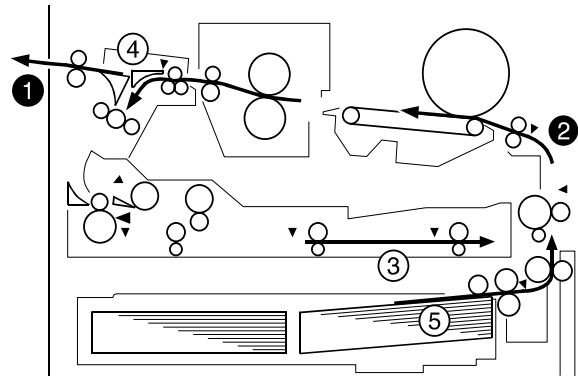

B246D876.WMFF


10. 2nd sheet exits.
11. 5th sheet, back page printed (pg. 9), feeds to duplex tray.
12. 3rd sheet, back page printed (pg. 6)
13. 6th sheet, front page printed (pg. 11)
14. 4th sheet, back page, (pg. 8), 7th sheet front page (pg. 13) copied in order, the process above repeats.

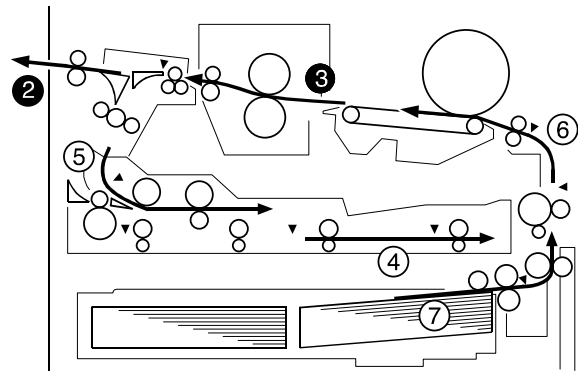

B246D879.WMFF

6.14 ENERGY SAVER MODES

6.14.1 OVERVIEW

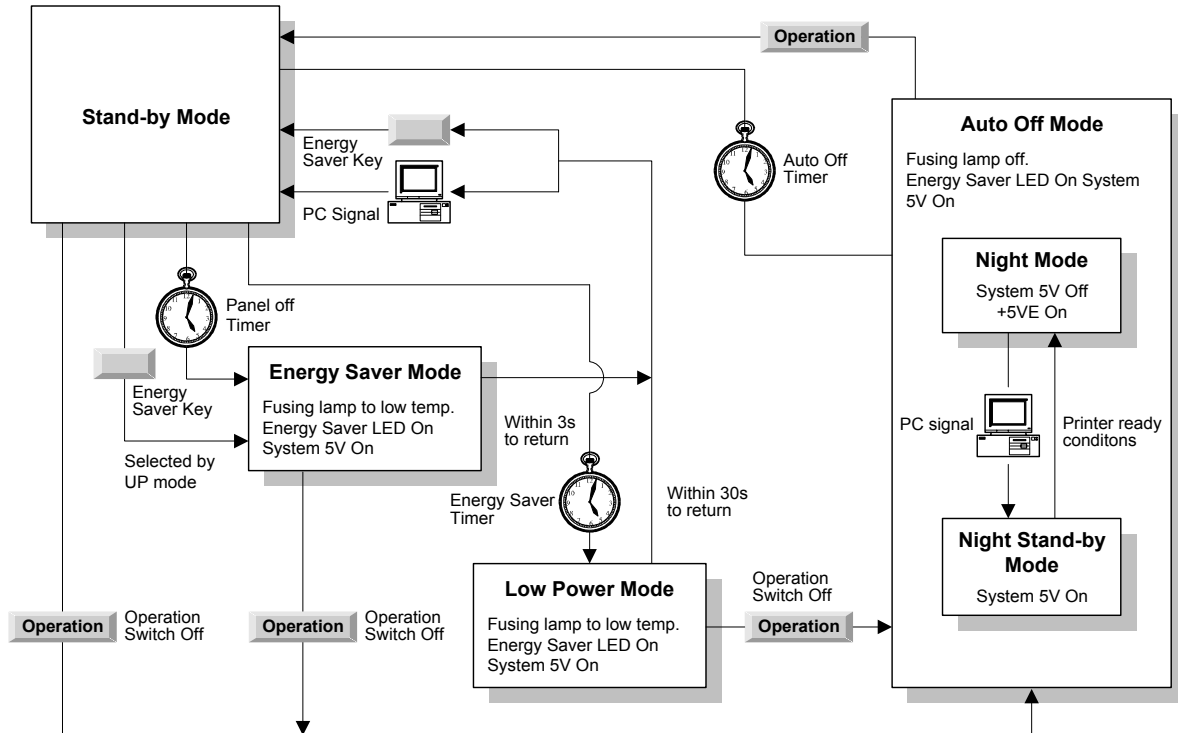

B246D880.WMFF

When the machine is not used, the energy saver function reduces power consumption by lowering the fusing temperature.

This machine has four types of energy saver mode as follows.

- 1) Energy saver mode (called 'panel off mode' in the operation manual)
- 2) Low power mode (called 'energy saver mode' in the operation manual)
- 3) Auto off mode (copier configuration only)
- 4) Night mode (copier/printer/scanner configuration only)

These modes are controlled by the following User Tools:

- Panel off timer
- Energy saver timer
- Auto off timer
- Auto off disabling

The way that the machine operates depends on the combination of installed equipment (copier only, or whether a printer/scanner is installed).

6.14.2 ENERGY SAVER MODE

Entering the energy saver mode

The machine enters energy saver mode when one of the following is done.

- The Energy Saver Key is held down for a second.
- The panel off timer runs out after the last job (User Tools - System Settings - Timer Setting - Panel Off Timer: default setting is 60 s).

What happens in energy saver mode

When the machine enters energy saver mode, the fusing lamps drops to a certain temperature and the operation panel indicators are turned off except for the Energy Saver LED and the Power LED.

If the CPU receives the image print out command from an application (e. g. to print data from a PC), the fusing temperature rises to print the data. However, the operation indicators stay off.

Return to stand-by mode

If one of the following is done, the machine returns to stand-by mode:

- The Energy Saver Mode key is pressed
- An original is placed in the ADF
- The ADF is lifted
- A sheet of paper is placed in the by-pass feed table

Operation Switch	Energy Saver LED	Fusing Temp.	Approx. Recovery Time	System +5V
On	On	182 °C	3 s	On

6.14.3 LOW POWER MODE

Entering the low power mode

The machine enters low power mode when:

The energy saver timer runs out after the last job.

(User Tools - System Settings - Timer Setting - Energy Saver Timer: default setting is 15 min)

What happens in low power mode

The fusing lamp drops to the prescribed temperature, as shown in the table below (the temperature drops more than that in energy saver mode). The other conditions are the same as for the energy saver mode.

Return to stand-by mode

The machine returns to standby mode in the same way as from the energy saver mode.

Operation Switch	Energy Saver LED	Fusing Temp.	Approx. Recovery Time	System +5V
On	On	165 °C	30 s	On

6.14.4 AUTO OFF MODE

Auto off mode is used only if no optional printer/scanner unit is installed.

Entering auto off mode

The machine enters auto off mode when one of the following is done.

- The auto off timer runs out after the last job (User Tools – System Settings – Timer Setting – Auto Off Timer: default setting is 90 min)
- The operation switch is pressed to turn the power off

What happens in auto off mode

When the machine enters auto off mode, the main power switch turns off automatically. The fusing lamp and all dc supplies except +5VE (+5V for energy saver mode) turn off.

Returning to stand-by mode

The machine returns to stand-by mode when the main power switch is turned on.

Operation Switch	Energy Saver LED	Fusing Temp.	Approx. Recovery Time	System +5V	Note
Off	Off	Room Temp. (Fusing lamp off)	300 s	Off	Only +5VE is supplied to the BICU.

Disabling auto off mode

If the user wishes to disable auto off mode, use the following user tool: User Tools – System Settings – AOF (change the setting to “OFF”).

6.14.5 NIGHT MODE

This is used instead of auto off mode when an optional scanner/printer unit is installed.

There are two types of night mode: Night Stand-by Mode and Night Mode. The difference between night stand-by mode and night mode is the machine's condition when the machine enters auto off mode.

Entering night stand-by and night modes

The machine enters the night stand-by mode and night modes when one of the following is done.

- The operation switch is pressed to turn the power off
- The auto off timer runs out (the operation switch is then turned off, but the main power switch stays on)

If the machine is in one or more of the following conditions, the machine enters night stand-by mode. If not, the machine enters night mode.

- Error or SC condition
- Image data is stored in the memory
- An original is in the ADF
- The ADF is open
- Paper is left in the duplex unit or staple tray

What happens in night stand-by and night modes

When the machine enters either of these modes, the fusing lamp and operation switch turn off, and only the main power LED is lit.

Night stand-by mode

The system +5V and +24 V are supplied to all components.

Night mode

The system +5V supply is also turned off. However, +5VE (+5V for energy saver mode) is still activated. When the machine detects a signal from the PC, the machine goes back to night stand-by mode and the system +5V and +24V supplies are activated. Then the machine receives the incoming message and prints it.

Returning to stand-by mode

The machine returns to stand-by mode when the operation switch is pressed. The recovery time is about 45 s.

Mode	Operation Switch	Energy Saver LED	Fusing Temp.	System +5V	Note
Night stand-by mode	Off	Off	Room Temp. (Fusing lamp off)	On	
Night mode	Off	Off	Room Temp. (Fusing lamp off)	Off	Only +5VE is supplied to the printer controller.

6.14.6 CHANGES FOR B140 AND B246

- The three timers all have default settings of 1 minute. Because of this, 1 minute after the end of a job, the machine will go to Auto Off Mode. The other 2 modes will not be used.
- The recovery times are different from B064 (they are, for the three timers, < 3 seconds, about 10 seconds, and about 30 seconds).

7. SPECIFICATIONS



7.1 GENERAL SPECIFICATIONS

7.1.1 COPIER

Configuration	Console		
Original	Sheet/Book/Objects		
Original Size	Max. A3/11" x 17"		
	Min. B5 SEF/5.5" x 8.5" (using ADF)		
Original Alignment	Rear left corner		
Copy Paper Size	Paper tray, Duplex	A3/11" x 17" – A5 SEF/5.5" x 8.5"	
	By-pass tray	A3/11" x 17" – A6 SEF/5.5" x 8.5"	
	Non-standard sizes	Width: 100 – 305 mm (4" x 12") Length: 148 - 600 mm (5.5" x 23.4")	
Copy Paper Weight	Paper Tray	52.3 ~ 127.9 g/m ² (14 ~ 34 lb.)	
	Duplex	64 ~ 127.9 g/m ² (17 ~ 34 lb.)	
	By-pass: Standard Thick Paper mode	52.3 ~ 157 g/m ² (14 ~ 43 lb.) 52.3 ~ 216 g/m ² (14 ~ 58 lb.)	
Reproduction Ratios	6 reduction ratios, 5 enlargement ratios	Metric (%)	400, 200, 141, 122, 115, 93, 82, 75, 71, 65, 50
		Inch (%)	400, 200, 155, 129, 121, 93, 85, 78, 73, 65, 50
		Zoom	25 ~ 400% in 1% steps
Copying Speed	B163/B228		51 cpm (A4/11" x 8.5" LEF)
	B246/250		55 cpm (A4/11" x 8.5" LEF)
	B064/B140/B142		60 cpm (A4/11" x 8.5" LEF)
	B248/B252		65 cpm (A4/11" x 8.5" LEF)
	B065/B141/B143/B249/B253		75 cpm (A4/11" x 8.5" LEF)
First Copy Time	B064/B065 B141/B143 B248/B249 B252/B253	3.5 s (1st Tray, A4/11" x 8.5" LEF Face-up mode)	
	B140/B142 B163/B228 B246/B250	4.2 s (1st Tray, A4/11" x 8.5" LEF Face-up mode)	
	B064/B065 B141/B143 B248/B249 B252/B253	5.3 s (1st Tray, A4/11" x 8.5" LEF Face-down mode)	
	B140/B142 B163/B228 B246/B250	6.3 s (1st Tray, A4/11" x 8.5" LEF Face-down mode)	
Warm-up Time (under 20°C room temp.)	B064/B065	Less than 300 s from Off mode	
		Less than 25 s from low power mode	
	B140/B141/B163/B142/B143/B228 B246/B248/B249/B250/B252/B253		Less than 30 s
Continuous Copy	1 ~ 999 (Operation panel entry)		
Paper Capacity	Tray 1 (tandem tray)		3100 sheets
	Tray 2		550 sheets
	Tray 3		550 sheets
	By-pass Tray		100 sheets (80 g/m ² , 20 lb.)

Spec.

Paper Output	A4/8 1/2" x 11" and smaller	500 sheets
	B4 and larger	250 sheets
Power Source	North America	120 V / 60 Hz 20 A or more
	Europe/Asia	220 ~ 240 V / 50/60 Hz 8 A or more
	Taiwan	110 V / 60 Hz 20 A or more
Allowed voltage fluctuation	10%	
Dimensions (W x D x H)	B064/B065	690 x 750 x 1165 mm (27.2" x 29.6" x 45.9")
	B140/B141/B142/ B143/B163/B228	690 x 760 x 1165 mm (27.2" x 29.9" x 45.9")
	B246/B248/B249/ B250/B252/B253	690 x 790 x 1165 mm (27.2" x 31.1" x 45.9")
Weight	B064/B065	Approx. 200 kg (440.9 lb.)
	B140/B141/B142 B143/B163/B228	Approx. 203 kg (447.6 lb.)
	B246/B248/B249/ B250/B252/B253	Approx. 206 kg (453.w lb.)
Resolution	1200 dpi (printing) 600 dpi (scanning)	
Gradation	256 levels (scanning and printing)	
Original Archive	10,000 A4/8 1/2" x 11" pages for document server	
Toner Replenishment	Cartridge exchange (1100 g)	
Total Counter	Electric Counter	

7.1.2 ADF

Original Size	A3/11" x 17" – B6/5.5" x 8.5"	
Original Weight	1-sided original	40 ~ 128 g/m ² (11 ~ 34 lb.)
	2-sided original	52 ~ 128 g/m ² (14 ~ 34 lb.)
Table Capacity	100 sheets (80 g/m ² , 20 lb.) or less than 12 mm (0.4") original stack height	
Original Standard Position	Rear left corner	
Separation	Feed belt and separation roller	
Original Transport	Roller transport	
Original Feed Order	From top original	
Reproduction Range	100%	
Power Source	DC 24 V from the main machine	
Power Consumption	Less than 110 W	
Rated Voltage of Output Connector	Max. DC 24 V	
Permissible voltage fluctuation	±10%	
Dimensions (W x D x H)	680 x 560 x 180 mm (26.8" x 22.0" x 7.1")	
Weight	18 kg (39.6 lb.)	

7.1.3 POWER CONSUMPTION

B064/B065 Copier (120V Model)

	Mainframe Only	Full System
Warm-up	Approx. 1.20 kW	Approx. 1.25 kW
Stand-by	Approx. 0.30 kW	Approx. 0.32 kW
Copying	Approx. 1.55 kW	Approx. 1.65 kW
Maximum	Less than 1.60 kW	Less than 1.70 kW

B064/B065 Copier (220V to 240V Model)

	Mainframe Only	Full System
Warm-up	Approx. 1.25 kW	Approx. 1.26 kW
Stand-by	Approx. 0.27 kW	Approx. 0.27 kW
Copying	Approx. 1.60 kW	Approx. 1.60 kW
Maximum	Less than 1.75 kW	Less than 1.75 kW

B140/B141/B163 Copier (120V Model)

	Mainframe Only	Full System
Warm-up	Approx. 1.761 kW	Approx. 1.761 kW
Stand-by	Approx. 0.329 kW	-
Copying	Approx. 1.274 kW	Approx. 1.842 kW
Maximum	Less than 1.386 kW	Less than 1.850 kW

B140/B141/B163 Copier (220V to 240V Model)

	Mainframe Only	Full System
Warm-up	Approx. 1.750 kW	Approx. 1.750 kW
Stand-by	Approx. 0.333 kW	-
Copying	Approx. 1.281 kW	Approx. 1.782 kW
Maximum	Less than 1.401 kW	Less than 1.850 kW



B246/B248/B249 Copier (120V Model)

Item	B246		B248		B249	
	Basic	MFP	Basic	MFP	Basic	MFP
Copying	1.66/1.75K	1.66/1.75K	1.66/1.75K	1.66/1.75K	1.66/1.78K	1.68/1.78K
Warm-up	1.66/1.70K	1.66/1.72K	1.66/170K	1.66/172K	1.67/173K	1.68/174K
Standby	304/341K	317/346KW	304/341K	317/346K	304/341K	317/346K
10 sec. Recovery	202/214KW	217/227KW	202/214KW	217/227KW	202/214KW	217/227KW
Off/Sleep Recovery	3.3/3.3KW	28.1/28.1KW	3.3/3.3KW	28.1/28.1KW	3.3/3.3KW	28.1/28.1KW
Energy Save Mode	3.3/3.3KW	28.1/28.1K	3.3/3.3KW	28.1/28.1KW	3.3/3.3KW	28.1/28.1KW

B246/B248/B249 Copier (220V to 240V Model)

Item	B246 (Basic)	B248 (Basic)	B249 (Basic)
Copying	1.43/1.53 K	1.44/1.56 K	1.44/1.56 K
Warm-up	1.77/1.81 K	1.78/1.82	1.78/183 K
Standby	299/346 K	299/346 K	299/346 K
10 sec. Recovery	196/223 KW	196/223 KW	196/223 KW
Off/Sleep Recovery	4.9/4.9 KW	4.9/4.9 KW	4.9/4.9 KW
Energy Save Mode	4.9/4.9 KW	4.9/4.9 KW	4.9/4.9 KW

Spec.

Noise Emission: Sound Power Level

	B064 (60 CPM)	B065 (75 CMP)
Mainframe Only		
Standby	Less than 48 dB (A)	Less than 48 dB (A)
Copying	Less than 71 dB (A)	Less than 71 dB (A)
Complete System		
Standby	Less than 49 dB (A)	Less than 49 dB (A)
Copying	Less than 74 dB (A)	Less than 74 dB (A)

	B163/B228 (51 CPM)	B140/B142 (60 CPM)	B141/B143 (75 CMP)
Mainframe Only			
Standby	Less than 49 dB (A)	Less than 49 dB (A)	Less than 49 dB (A)
Copying	Less than 70 dB (A)	Less than 70 dB (A)	Less than 71 dB (A)
Complete System			
Standby	Less than 49 dB (A)	Less than 49 dB (A)	Less than 49 dB (A)
Copying	Less than 74 dB (A)	Less than 74 dB (A)	Less than 74 dB (A)

	B246 (55 CPM)	B248 (60/65 CPM)	B249 (75 CMP)
Mainframe Only			
Standby	Less than 35/50 dB (A)	Less than 35/50 dB (A)	Less than 35/50 dB (A)
Copying	Less than 68 dB (A)	Less than 69 dB (A)	Less than 70 dB (A)
Complete System			
Standby	Less than 35/50 dB (A)	Less than 35/50 dB (A)	Less than 35/50 dB (A)
Copying	Less than 74 dB (A)	Less than 75 dB (A)	Less than 75 dB (A)

Noise Emission: Sound Pressure Level

	B064 (60 CPM)	B065 (75 CPM)
Mainframe Only		
Standby	Less than 38 dB (A)	Less than 38 dB (A)
Copying	Less than 57 dB (A)	Less than 57 dB (A)
Complete System		
Standby	Less than 39 dB (A)	Less than 39 dB (A)
Copying	Less than 64 dB (A)	Less than 64 dB (A)


	B163(51 CPM)	B064 (60 CPM)	B065 (75 CPM)
Mainframe Only			
Standby	Less than 44 dB (A)	Less than 44 dB (A)	Less than 44 dB (A)
Copying	Less than 65 dB (A)	Less than 65 dB (A)	Less than 67 dB (A)
Complete System			
Standby	Less than 44 dB (A)	Less than 44 dB (A)	Less than 44 dB (A)
Copying	Less than 69 dB (A)	Less than 69 dB (A)	Less than 69 dB (A)

	B246 (55 CPM)	B248 (60/65 CPM)	B249 (75 CPM)
Mainframe Only			
Standby	Less than 21/32 dB (A)	Less than 21/32 dB (A)	Less than 21/32 dB (A)
Copying	Less than 53 dB (A)	Less than 57 dB (A)	Less than 57 dB (A)
Complete System			
Standby	Less than 21/32 dB (A)	Less than 21/32 dB (A)	Less than 21/32 dB (A)
Copying	Less than 63 dB (A)	Less than 63 dB (A)	Less than 63 dB (A)

NOTE: The above measurements were made in accordance with ISO 7779. Full system measurements include the Finisher, LCT, and Mailbox. In the above stand-by condition, the polygon mirror motor is not rotating.



7.2 MACHINE CONFIGURATION

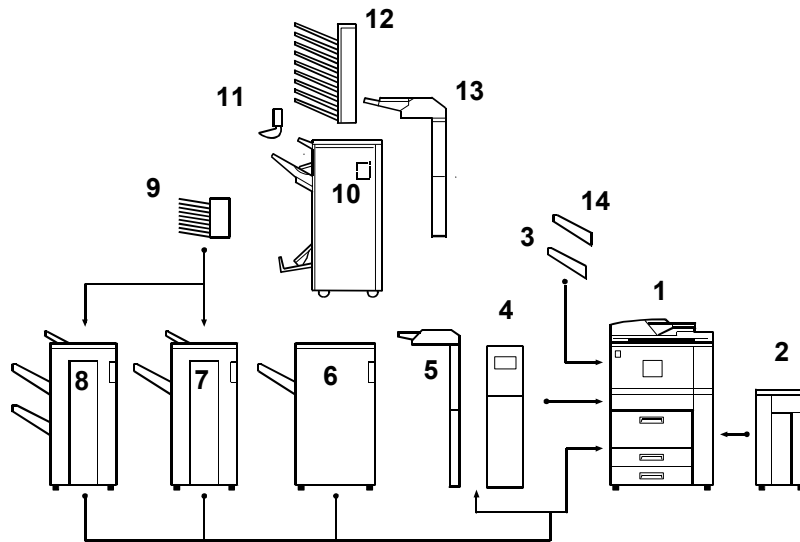

B246V500.WMF

Item	Machine code				Number
Mainframe		B065 B064	B140 B141 B163	B246 B248 B249	1
A3/DLT Kit	B475	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	Inside mainframe
Tab Sheet Kit	B499	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
LCT (Large Capacity Tray)	B473	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
LG/B4 Kit	B474	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	Inside LCT
Copy Tray	B476	<input type="radio"/>	<input type="radio"/>		3
Z-Folding Unit	B660		<input type="radio"/>	<input type="radio"/>	4
Cover Interposer Tray	B470	<input type="radio"/>	<input type="radio"/>		5
Finisher with 100-sheet stapler	B478	<input type="radio"/>	<input type="radio"/>		6
	B706		<input type="radio"/>	<input type="radio"/>	6
Finisher with 50-sheet Stapler	B469	<input type="radio"/>	<input type="radio"/>		7
Finisher with saddle-stitching and 50-sheet Stapler	B468	<input type="radio"/>			8
Finisher with 50-sheet Stapler for Z-folding	B674		<input type="radio"/>		8
9-Bin Mailbox	B471	<input type="radio"/>	<input type="radio"/>		9
Punch Unit for 50-staple Finisher	B377	<input type="radio"/>	<input type="radio"/>		Inside Finisher No. 7 or 8
Punch Unit for 100-staple Finisher (NA 3/2, EU 2/4)	B531	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	Inside Finisher No. 6
Punch Unit for 100-staple Finisher (SC)	B812	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	Inside Finisher No. 6
Jogger Unit	B513	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	Inside Finisher No. 6
Copy Connector Kit	B525	<input type="radio"/>		<input type="radio"/>	Inside mainframe
	B328		<input type="radio"/>		Inside mainframe
File Format Converter	B519	<input type="radio"/>			Inside mainframe
	B609		<input type="radio"/>	<input type="radio"/>	Inside mainframe
SR4000/SR970	B700/ B701			<input type="radio"/>	10
Output Jogger Unit	B703			<input type="radio"/>	11 or 12 (not both)
Mailbox CS391	B762			<input type="radio"/>	12 or 11 (not both)
Cover Interposer	B704			<input type="radio"/>	13
Copy Tray	B756			<input type="radio"/>	14

7.3 OPTIONAL EQUIPMENT

7.3.1 A3/DLT KIT (B475)

Paper Size	A3, B4, 11" x 17", 8 1/2" x 14", A4 SEF, A4 LEF, 8 1/2" x 11" SEF, 11" x 8 1/2" LEF
Paper Weight	52 ~ 163 g/m ² 16 ~ 40 lb. Bond 50 ~ 60 lb. Cover 90 lb. Index (no Tab)
Tray Capacity	1,000 sheets (80 g/m ² , 20lb)

7.3.2 LCT (LARGE CAPACITY TRAY) (B473)

Paper capacity	4,000 sheets ³
Paper Sizes	A4 LEF, B5 LEF, 8 1/2" x 11" LEF ^{*1}
Paper Weight	52 ~ 128 g/m ² (14 ~ 34 lb)
Pick-up and Feed	FRR (Feed and Reverse Roller)
Power Consumption	Less than 50 W (Max.)
Power Supply	DC24 V, 5V (powered by the main unit)
Rated Voltage of Output Connector	Max. DC 24 V
Dimensions (W x D x H)	314 x 458 x 659 mm (12.4" x 18.1" x 25.9")
Weight	20.0 kg (44 lb.)

^{*1}: In platen mode, APS (Auto Paper Select) with the original length and original width sensors are not used.

7.3.3 3000-SHEET FINISHER WITH SADDLE-STITCH AND 50-SHEET STAPLER (B468)

General

Rated Voltage of Output Connector	Max. DC 24 V
Dimensions (W x D x H)	700 x 620 x 960 mm (27.6" x 24.4" x 37.8")
Weight	Approx. 63 kg (139 lb.)
Power Consumption	72 W (3 A/24 V)
Power Supply	DC 24 V

Upper Tray

Tray Capacity (80 g/m ²)	Unstapled	500 sheets (A4, A5 LEF, B5, 8 1/2" x 11") 250 sheets (A3, B4, 12" x 18", 11" x 17") 100 sheets (A5 SEF, A6 SEF, B6 SEF, 5 1/2" x 8 1/2")		
	Stapled	Max docs.	Total sheets	Size
		50 docs.	500 sheets	A4 LEF, 8 1/2" x 11" LEF
		25 docs.	250 sheets	A3, A4 SEF, B4, B5, 12" x 18", 11" x 17", 8 1/2" x 11"
Paper Size	A3 ~ A5, A6 SEF, B6 SEF, 12" x 18", 11" x 17" ~ 5 1/2" x 8 1/2"			
Paper Weight	52 g/m ² ~ 216 g/m ² (14 ~ 58 lb)			
Mixed Sizes	A3 and A4 LEF, B4 and B5 LEF, 11" x 17" and 8 1/2" x 11" LEF (Max: 16 docs, Max sheets: 30 sheets or less)			

Lower Tray

Tray Capacity (80 g/m ²)	Unstapled	2,500 sheets (A4 LEF, 8 1/2" x 11" LEF) 500 sheets (A5 LEF) 100 sheets (A5 SEF, A6 SEF, B6 SEF, 5 1/2" x 8 1/2")		
		Stapled	Max docs.	Total sheets
	50 docs.		2,500 sheets	A4 LEF, 8 1/2" x 11" LEF
	50 docs.		1,250 sheets	A4 SEF, B5, 8 1/2" x 11" SEF
	30 docs.		1,250 sheets	A3, B4, 12" x 18", 11" x 17"
Paper Size		A3 ~ A5, A6 SEF, B6 SEF, 12" x 18", 11" x 17" ~ 5 1/2" x 8 1/2"		
Paper Weight		52 g/m ² ~ 216 g/m ² (14 ~ 58 lb)		
Mixed Sizes		A3 and A4 LEF, B4 and B5 LEF, 11" x 17" and 8 1/2" x 11" LEF (Max: 50 docs, Max sheets: 30 sheets or less)		

Proof Tray

Tray Capacity	250 sheets (A4, 8 1/2" x 11" or smaller) 50 sheets (B4, 8 1/2" x 14" or larger)
Paper Weight	52 g/m ² ~ 216 g/m ² (14 ~ 58 lb)

Staple Specifications

Binding Capacity (80 g/m ²)	Same Size	50 sheets (A4, 8 1/2" x 11" or smaller) 30 sheets (B4, 8 1/2" x 14" or larger)
	Mixed Size	30 sheets (A3 and A4 LEF, B4 and B5 LEF, 11" x 17" and 8 1/2" x 11" LEF)
Paper Size		A3-B5, 11" x 17" ~ 8 1/2" x 11"
Paper Weight		64 g/m ² ~ 90 g/m ² (17 ~ 24 lb)
Stapling Position		Front (1), Back (1), Back (1: diagonal), Duplex Binding
Stapling Capacity		5,000 staples/Cartridge

Saddle-Stitch Staple Specifications

Binding Capacity (80 g/m ²)	15 sheets		
Paper Size	A3, B4, A4 SEF, 11" x 17", 8 1/2" x 11" SEF		
Paper Weight	64 g/m ² ~ 90 g/m ² (17 ~ 24 lb)		
Stapling Position	Center, 2 locations		
Staple Capacity	2,000 staples/Cartridge		
Fold Position	Center, half-folding		
Saddle-Stitch Capacity	Max docs.	Total sheets	Size
	25 docs.	2 ~ 5 sheets	A4 SEF, 8 1/2" x 11" SEF
	15 docs.	6 ~ 10 sheets	
	10 docs.	11 ~ 15 sheets	
	30 docs.	2 ~ 5 sheets	A3, B4, 11" x 17"
	20 docs.	6 ~ 10 sheets	
	10 docs.	11 ~ 15 sheets	

7.3.4 3000-SHEET FINISHER WITH 50-SHEET STAPLER (B469)

General

Rated Voltage of Output Connector	Max. DC 24 V
Dimensions (W x D x H)	700 x 620 x 960 mm (27.6" x 24.4" x 37.8")
Weight	Approx. 65 kg (143 lb.)
Power Consumption	72 W (3 A/24 V)
Power Supply	DC 24 V

Lower Tray

Tray Capacity (80 g/m ²)	Unstapled	3,000 sheets (A4 LEF, 8 1/2" x 11" LEF) 1,500 sheets (A3, A4 SEF, B4, B5, 12" x 18", 11" x 17", 8 1/2" x 14", 8 1/2" x 11" SEF) 500 sheets (A5 LEF) 100 sheets (A5 SEF, A6 SEF, B6 SEF, 5 1/2" x 8 1/2")		
		Max docs.	Total sheets	Size
		50 docs.	3,000 sheets	A4 LEF, 8 1/2" x 11" LEF
		50 docs.	1,500 sheets	A4 SEF, B5, 8 1/2" x 11" SEF
		30 docs.	1,500 sheets	A3, B4, 12" x 18", 11" x 17"
Paper Size	A3 ~ A5, A6 SEF, B6 SEF, 12" x 18", 11" x 17" ~ 5 1/2" x 8 1/2"			
Paper Weight	52 g/m ² ~ 216 g/m ² (14 ~ 58 lb)			
Mixed Sizes	A3 and A4 LEF, B4 and B5 LEF, 11" x 17" and 8 1/2" x 11" LEF (Max: 50 docs, Max sheets: 30 sheets or less)			

Proof Tray

Tray Capacity	250 sheets (A4, 8 1/2" x 11" or smaller) 50 sheets (B4, 8 1/2" x 14" or larger)
Paper Weight	52 g/m ² ~ 216 g/m ² (14 ~ 58 lb)

Staple Specifications

Binding Capacity (80 g/m ²)	Same Size	50 sheets (A4, 8 1/2" x 11" or smaller) 30 sheets (B4, 8 1/2" x 14" or larger)
	Mixed Size	30 sheets (A3 and A4 LEF, B4 and B5 LEF, 11" x 17" and 8 1/2" x 11" LEF)
Paper Size	A3 ~ B5, 11" x 17" ~ 8 1/2" x 11"	
Paper Weight	64 g/m ² ~ 90 g/m ² (17 ~ 24 lb)	
Stapling Position	Front (1), Back (1), Back (1: diagonal), Duplex Binding	
Stapling Capacity	5,000 staples/Cartridge	

7.3.5 3000-SHEET FINISHER WITH SADDLE-STITCH AND 50-SHEET STAPLER (B674)

General

Rated Voltage of Output Connector	Max. DC 24 V
Dimensions (W x D x H)	700 x 620 x 960 mm (27.6" x 24.4" x 37.8")
Weight	Approx. 65 kg (143 lb.) (with punch unit)
Power Consumption	72 W (3 A/24 V)
Power Supply	DC 24 V

Upper Tray

Tray Capacity (80 g/m ²)	Unstapled	500 sheets (A4, A5 LEF, B5, 8 1/2" x 11") 250 sheets (A3 SEF, B4 SEF, 12" x 18", 11" x 17" SEF) 100 sheets (A5 SEF, B6 SEF, 5 1/2" x 8 1/2")			
		Stapled	Max docs.	Total sheets	Size
			50 docs.	500 sheets	A4 LEF, 8 1/2" x 11" LEF
		25 docs.	250 sheets	A3, A4 SEF, B4, B5, 12" x 18", 11" x 17", 8 1/2" x 11"	
Paper Size		A3 ~ A5, A6 SEF, B6 SEF, 12" x 18", 11" x 17" ~ 5 1/2" x 8 1/2"			
Paper Weight		52 g/m ² ~ 216 g/m ² (14 ~ 58 lb)			
Mixed Sizes		A3 and A4 LEF, B4 and B5 LEF, 11" x 17" and 8 1/2" x 11" LEF (Max: 16 docs, Max sheets: 30 sheets or less)			
Note: Z-folded paper cannot be output to the upper tray.					

Lower Tray

Tray Capacity (80 g/m ² 20 lb)	Unstapled	No Z-folded paper 2,500 sheets (A4 LEF, 8 1/2" x 11" LEF) 1,250 sheets (A3 SEF, A4 SEF, B4 SEF, B5, 11" x 17" SEF, 8 1/2" x 14" SEF, 8 1/2" x 11" SEF) 100 sheets (A5 SEF, B6 SEF, B6 SEF, 5 1/2" x 8 1/2") Z-folded sheets only 30 sheets 20 sheets		
	Stapled	Max docs	Total sheets	Size
		50 docs.	2,500 sheets	A4 LEF, 8 1/2" x 11" LEF
		50 docs.	1,250 sheets	A4 SEF, B5, 8 1/2" x 11" SEF
		30 docs.	1,250 sheets	A3, B4, 12" x 18", 11" x 17"
	Stapled and Z-folded	5 docs	30 sheets	A3 (Z) and A4 LEF B4 (Z) and B5 LEF, 11" x 17" (Z) and 8 1/2" x 11" LEF
Paper Size	No Z-folded	A3 ~ A5, A6 SEF, B6 SEF, 12" x 18" 11" x 17" ~ 5 1/2" x 8 1/2"		
	Z-folded	A3 SEF ~ A4 SEF 11" x 17" SEF ~ 5 1/2" x 8 1/2" SEF		
Paper Weight	No Z-folded	52 g/m ² ~ 216 g/m ² (14 ~ 58 lb)		
	Z-folded	64 g/m ² ~ 80 g/m ² (17 ~ 20 lb)		
Mixed Sizes	No Z-folded	A3 and A4 LEF, B4 and B5 LEF 11" x 17" and 8 1/2" x 11" LEF (Max: 50 docs, Max sheets: 30 sheets or less)		
	Z-folded	A3 (Z) and A4 LEF, B4 (Z) and B5 LEF 11" x 17" (Z) and 8 1/2" x 11" LEF (Max: 6 docs, Max sheets: 30 sheets or less)		

Proof Tray

Tray Capacity	No Z- folded	250 sheets (A4, 8 1/2" x 11" or smaller) 50 sheets (B4, 8 1/2" x 14" or larger)
	Z-folded	20 sheets (A4, 8 1/2" x 11" or smaller) 30 sheets (B4, 8 1/2" x 14" or larger)
	Mixed	250 sheets (A4, 8 1/2" x 11" or smaller) 50 sheets (B4, 8 1/2" x 14" or larger) (One Z-folded sheet is counted as 10 unfolded sheets.)
Paper Weight	No Z- folded	52 g/m ² ~ 163 g/m ² (14 ~ 43 lb)
	Z-folded	64 g/m ² ~ 80 g/m ² (17 ~ 20 lb)

Staple Specifications

Binding Capacity (80 g/m ² , 20 lb)	Same Size	50 sheets (A4, 8 1/2" x 11" or smaller) 30 sheets (B4, 8 1/2" x 14" or larger)													
	Mixed size	30 sheets (A3 and A4 LEF, B4 and B5 LEF, 11" x 17" and 8 1/2" x 11" LEF)													
	Z-folded	<table><tr><th>Z-folded Sheets</th><th>No Z-folded sheets</th></tr><tr><td>5</td><td>0</td></tr><tr><td>4</td><td>0 ~ 10</td></tr><tr><td>3</td><td>0 ~ 20</td></tr><tr><td>2</td><td>0 ~ 30</td></tr><tr><td>1</td><td>0 ~ 40</td></tr></table>		Z-folded Sheets	No Z-folded sheets	5	0	4	0 ~ 10	3	0 ~ 20	2	0 ~ 30	1	0 ~ 40
		Z-folded Sheets	No Z-folded sheets												
5		0													
4		0 ~ 10													
3		0 ~ 20													
2		0 ~ 30													
1	0 ~ 40														
One Z-folded sheet is counted as 10 unfolded sheets.															
Paper Size	No Z- folded	A3-B5, 11" x 17" ~ 8 1/2" x 11"													
	Z-folded	A3SEF, B4SEF, 11" x 17" SEF													
Paper Weight	No Z- folded	64 g/m ² ~ 90 g/m ² (17 ~ 24 lb)													
	Z-folded	64 g/m ² ~ 80 g/m ² (17 ~ 20 lb)													
Stapling Position	Front (1), Back (1), Back (1: diagonal), Duplex Binding														
Stapling Capacity	5,000 staples/Cartridge														

Saddle-Stitch Staple Specifications

Binding Capacity (80 g/m ²)	15 sheets		
Paper Size	A3, B4, A4 SEF, 11" x 17", 8 1/2" x 11" SEF		
Paper Weight	64 g/m ² ~ 90 g/m ² (17 ~ 24 lb)		
Stapling Position	Center, 2 locations		
Staple Capacity	2,000 staples/Cartridge		
Fold Position	Center, half-folding		
Saddle-Stitch Capacity	Max docs.	Total sheets	Size
	25 docs.	2 ~ 5 sheets	A4 SEF, 8 1/2" x 11" SEF
	15 docs.	6 ~ 10 sheets	
	10 docs.	11 ~ 15 sheets	
	30 docs.	2 ~ 5 sheets	A3, B4, 11" x 17"
	20 docs.	6 ~ 10 sheets	
	10 docs.	11 ~ 15 sheets	

7.3.6 PUNCH UNIT (B377)

The Punch Unit B377 is installed in the 3000 Sheet Finisher B468/B469/B674.

Punch Specifications			
Punch Position	North America (NA)	2/3 holes	B377-17
	Europe (E)	2/4 holes	B377-27
	Northern Europe (NE)	4 holes	B377-31
Punching Allowed	All modes		
Allowed Paper Sizes	Holes	Feed	Paper Size
	2 holes (E)	SEF	A3 ~ A5, 11" x 17" ~ 5 1/2" x 8 1/2"
		LEF	A4 ~ A5, 8 1/2" x 11", 5 1/2" x 8 1/2"
	2 holes (NA)	SEF	A3 ~ A5, 11" x 17" ~ 5 1/2" x 8 1/2"
		LEF	A4 ~ A5, 8 1/2" x 11", 5 1/2" x 8 1/2"
	3 holes (NA)	SEF	A3, B4, 11" x 17"
		LEF	A4, B5, 8 1/2" x 11"
	4 holes (E)	SEF	A3, B4, 8 1/2" x 11"
		LEF	A4, B5, 8 1/2" x 11"
	4 holes (NE)	SEF	A3 ~ A5, 11" x 17" ~ 5 1/2" x 8 1/2"
		LEF	A3 ~ A5, 8 1/2" x 11", 5 1/2" x 8 1/2"
Allowed Paper Weight	Holes	Weight	
	2 holes	52 ~ 163 g/m ² (14 ~ 43 lb.)	
	3 holes		
	4 holes (E)		
	4 holes (NE)		
	2 holes (NA)		
Hopper Capacity	North America (2/3 hole)	More than 60 K prints	
	Europe, Europe (4 holes)	More than 80 K prints	
Rated Voltage of Output Connector	Max. DC 24 V		
Dimensions (W x D x H)	700 x 620 x 960 mm (27.6" x 24.4" x 37.8")		
Weight	Approx. 65 kg (143 lb.) (with punch unit)		
Power Consumption	72 W (3 A/24 V)		
Power Supply	DC 24 V		

7.3.7 COVER INTERPOSER TRAY (B470)

Configuration	Attached to 3000-sheet finisher B468, B469, B478, B674 and B706.
Paper Separation	FRR system with feed belt.
Paper Transport	Feed from top tray via vertical roller transport to finisher.
Paper Sizes	A3 ~ A5, 11" x 17" ~ 5 1/2" x 8 1/2"
Paper Weight	64 ~ 216 g/m ² (17 ~ 58 lb)
Capacity	200 sheets (80 g/m ²)
Paper Set Detection	Provided
Power Supply (from main machine)	24 V \pm 10%, 5 V \pm 5%
Power Consumption	Less than 48 W
Dimensions (W x D x H)	500 x 620 x 200 mm (19.7" x 24.4" x 7.9")
Weight	12 kg (26.4 lb.)

7.3.8 3000 SHEET FINISHER (B478/B706)

UPPER TRAY			
Paper Capacity (80 g/m ²)	500 sheets (A4, 8 1/2" x 11" and smaller)		
	250 sheets (B4, 8 1/2" x 14" and larger)		
Paper Size	A3 to A6 SEF, 11" x 17" to 5 1/2" x 8 1/2", 12" x 18"		
Paper Weight	52 to 216 g/m ² (14 ~ 58 lb)		
Upper Tray Full Detection	Provided		
SHIFT TRAY			
Paper Capacity (80 g/m ²)	3000 sheets (A4 LEF, B5 LEF, 8 1/2" x 11" LEF)		
	1500 sheets (A3, A4 SEF, B4 and B5 SEF, 11" x 17", 8 1/2" x 14", 8 1/2" x 11" SEF, 12" x 18")		
	500 sheets (A5 LEF, 5 1/2" x 8 1/2" LEF)		
	100 sheets (A5 SEF, 5 1/2" x 8 1/2" SEF)		
Paper Size	A3 to A5, 11" x 17" to 5 1/2" x 8 1/2", 12" x 18" (including tab paper)		
Paper Weight	52 to 216 g/m ² (14 ~ 58 lb)		
Shift Tray Full Detection	Provided		
STAPLER			
Stapling Stack Size	A4, B5, 8 1/2" x 11" (Max. 100 Sheets)		
	A3, B4, 11" x 17", 8 1/2" x 14" (Max. 50 sheets)		
Stapling Paper Size	A3 to B5 11" x 17" to 8 1/2" x 11"		
Stapling Paper Weight	64 to 80 g/m ² (17 ~ 20 lb)		
Staple Position	4 Modes		
	1 Staple: Front, Rear, Rear-Oblique		
	2 Staples: 2 locations		
Staple Capacity	5000 staples/cartridge		
Staple Supply	Cartridge or Staple Replacement		
Stapled Stack Size	Sheets	Sets	Sizes
	10 ~ 100	200 ~ 30	A4 SEF, B5 SEF, 8 1/2" x 11" SEF
	2 ~ 9	150	A4 LEF, B5 LEF, 8 1/2" x 11" LEF
	10 ~ 50	150 ~ 30	A3, B4, 11" x 17", 8 1/2" x 14"
	2 ~ 9	150	
Trim Waste Staple Capacity	30,000 or more		
Waste Staple Hopper Full Detection	Provided		
Power Consumption	Less than 100 W		
Power Source	DC 24 V (From Mainframe)		
Size (W x D x H)	800 x 730 x 980 mm (31.5" x 28.7" x 38.6")		
Weight	Less than 65 kg (143 lb.)		
Compatible Machines	B478: B064/B065, B070 (90 cpm), B071 (105 cpm) B706: B070 (90 cpm), B071 (105 cpm)		



7.3.9 PUNCH UNIT (B531)

The Punch Unit B531 is installed in the 3000 Sheet Finisher B478/B706.

Punch Hole Positions	2/3-hole (North America)
	2/4-hole (Europe)
Punch Paper Size	
2-Hole (NA)	A5 ~ A3 SEF, 11" x 17"~5 1/2" x 8 1/2" SEF A5 ~ A4 LEF, 8 1/2" x 11" LEF, 5 1/2" x 8 1/2" LEF
3-Hole (NA)	A3 SEF, B4 SEF, 11" x 17" SEF A4 LEF, B5 LEF, 8 1/2" x 11" LEF
4-Hole (EUR/A)	A3 SEF, 11" x 17" SEF A4 LEF, 8 1/2" x 11" LEF
Paper Weight	
2-Hole (NA)	52 g/m ² ~ 163 g/m ² (14 ~ 43 lb)
3-Hole (NA)	52 g/m ² ~ 163 g/m ² (14 ~ 43 lb)
4-Hole (EUR/A)	52 g/m ² ~ 128 g/m ² (14 ~ 34 lb)
Punch Waste Hopper Capacity	
2-Hole (NA)	10K
3-Hole (NA)	15K
4-Hole (EUR/A)	15K
Operation Modes	All (Shift, Proof, Staple)

DIP SW Settings

The correct DIP SW settings of the Punch Unit 531 are provided in the table below for your reference only. The DIP switches of these punch units do not need to be changed at installation, or adjusted for operation.

Punch Unit	Unit No.	DIP SW Settings			
		1	2	3	4
2/3-Hole (NA)	B531-17	1	0	1	0
2/4-Hole (EUR/A)	B531-27	1	0	0	1

0: OFF

1: ON

7.3.10 PUNCH UNIT (A812)

The Punch Unit A812 is installed in the 3000 Sheet Finisher B478/B706.

Punch Hole Positions	2-hole, 3-hole (NA) 4-hole (EUR/A) 4-hole (North Europe)
Punch Paper Size	
2-Hole	A5 ~ A3 SEF, 11" x 17" ~ 8 1/2" x 11" SEF A5 ~ A4 LEF, 8 1/2" x 11" LEF
3-Hole (NA)	A3 SEF, B4 SEF, 11" x 17" SEF A4 LEF, B5 LEF, 8 1/2" x 11" LEF
4-Hole (EUR/A)	A3 SEF, 11" x 17" SEF A4 LEF, 11" x 17" LEF
4-Hole (North Europe)	B5 ~ A3 SEF, 8 1/2" x 11" ~ 11" x 17" SEF A5 ~ A4 LEF, 8 1/2" x 11" LEF, 5 1/2" x 8 1/2" LEF
Paper Weight	
2-Hole, 3-Hole (NA)	52 g/m ² ~ 163 g/m ² (14 ~ 43 lb)
4-Hole (Europe/North Europe)	52 g/m ² ~ 128 g/m ² (14 ~ 34 lb)
Punch Waste Hopper Capacity	
2-Hole	40K
3-Hole (NA)	15K
4-Hole (EUR/A)	15K
4-Hole (North Europe)	15K
Power Supply	DC 24 V (From Finisher)
Power Consumption	60 W
Weight	Less than 2.4 K (5.3 lb.)
Operation Modes	All (Shift, Proof, Staple)

DIP SW Settings

The correct DIP SW settings of the Punch Unit A812 are provided in the table below for your reference only. The DIP switches of these punch units do not need to be changed at installation, or adjusted for operation.

Punch Unit	Unit No.	DIP SW Settings			
		1	2	3	4
2-Hole (EUR/A)	A812-40/A812-67	0	0	0	0
3-Hole (NA)	A812-57	1	0	0	0
4-Hole (EUR/A)	A812-30	0	1	0	0
4-Hole (North Europe)	A812-31	0	0	1	0
2-Hole (NA)	A812-32	0	0	0	1

0: OFF

1: ON

7.3.11 JOGGER UNIT (B513)

The Jogger Unit B513 is installed above the shift tray of the 3000 Sheet Finisher B478/B706.

Paper Size	A3 SEF, B4 SEF, 11" x 17" SEF A4 LEF, B5 LEF, 8 1/2" x 11" LEF
Paper Weight	52 g/m ² ~ 216 g/m ² (14 ~ 58 lb)
Weight	Less than 1.7 kg (3.7 lb.)
Dimensions (W x D x H)	125 mm x 450 mm x 100 mm (5" x 17.7" x 4")
Power Supply	DC 24 V, DC 5V (From Finisher)
Power Consumption	24 W

7.3.12 9-BIN MAILBOX (B471)

Bin Capacity	100 sheets per bin (80 g/m ²)
Allowed Paper Sizes	A3 ~ A5 11" x 17" ~ 5 1/2" x 8 1/2"
Allowed Paper Thickness	52 ~ 128 g/m ² (14 ~ 34 lb)
Power Consumption	Less than 48W (average)
Power Supply	DC 24 V, 5 V
Dimensions (W x D x H)	480 x 600 x 660 mm (18.9" x 23.6" x 26")
Weight	15 kg (33 lb.)

7.3.13 LG/B4 KIT (B474)

Paper Size	B4, 8 1/2" x 14", A4 SEF, 8 1/2" x 11" SEF
Paper Weight	52 ~ 128 g/m ² (14 ~ 34 lb)
Tray Capacity	1,000 sheets (80 g/m ² , 20lb)

7.3.14 Z-FOLDING UNIT (B660)

Paper Size	No Folding (52 - 216 g/m ²) (17 ~ 58 lb)	A3, A4, A5, A6 SEF, B4, B5, B6 SEF 11" x 17", 8 1/2" x 14", 8 1/2" x 11" 8 1/2" x 5 1/2", 12" x 18"
	Folding (64-80 g/m ²) (17 ~ 20 lb)	A3, B4, A4 SEF 11" x 17", 8 1/2" x 14", 8 1/2" x 11" SEF 12" x 18"
Dimensions (W x D x H)	177 x 620 x 960 mm (7" x 24.5" x 37.8")	
Weight	50 kg (110 lb.)	
Power Consumption	100 W max.	
Power Supply	North America	120 V, 60 Hz
	Europe/Asia	220-240 V, 50/60 Hz
Compatible Finishers	B674	

Spec.

7.3.15 3000-SHEET FINISHER B701

This finisher provides corner stapling only.

Finisher			
Dimension (w x d x h)		657 x 613 x 960 mm	
Weight		Less than 54 kg Less than 56 kg with Punch Unit	
Power Consumption		Less than 96 W	
Noise		Less than 75 db	
Configuration		Console type attached base-unit	
Power Source		From base-unit	
Proof Tray	Stack Capacity*	250 sheets A4, 8 1/2"x11" or smaller 50 sheets B4, 8 1/2"x14 or larger	
	Paper Size	A5-A3 SEF, A6 SEF, A6 SEF 5 1/2"x8 1/2"-11"x17"SEF, 12"x18" SEF	
	Paper Weight	52 g/m ² -163 g/m ² 14 lb Bond- 43 lb Bond / 90 lb Index / 60 lb Cover	
Shift Tray	Stack Capacity*	3,000 sheets	A4 LEF, 1/2" x11" LEF "
		1,500 sheets	A3 SEF, A4 SEF, B4 SEF, B5, 11"x17" SEF, 8 1/2" x14" SEF, 8 1/2" x 11" SEF, 12"x18" SEF
		500 sheets	A5 LEF**
		100 sheets	A5 SEF, B6 SEF, A6 SEF, 5 1/2" x 8 1/2",SEF
	Paper Size	A5 - A3 SEF, A6 SEF, B6 SEF, 5 1/2" x 8 1/2"- 11"x17" SEF, 12" x 18" SEF	
	Paper Weight	52 g/m ² -256 g/m ² 14 lb Bond- 68 lb Bond / 140 lb Index / 90 lb Cover	
Staples			
Paper Size		B5-A3 8 1/2"x11"-11"x17", 12"x18"	
Paper Weight		64 g/m ² -90 g/m ² 17 lb Bond-28 lb Bond	
Staple Position		Top, Bottom, 2 Staple, Top-slant	
Stapling Capacity	Same Paper Size	50 sheets	A4, 1/2" x11" or smaller
		30 sheets	B4, 1/2" x14" or larger
	Mixed Paper Size	30 sheets	A4 LEF + A3 SEF, B5 LEF + B4 SEF, 8 1/2" x11" LEF + 11" x17" SEF

Staple Replenishment	Cartridge exchange / 5000 pins per cartridge		
Stapled Stack Capacity (same size)	Paper Size	Pages/Set	Sets
	A4 LEF, 8 1/2"x11" LEF	20-50 pages	150-60 sets
		2-19 pages	150 sets
	A4 SEF, B5, 8 1/2"x11" SEF	15-50 pages	100-30 sets
		2-14 pages	100 sets
	Others	15-30 pages	100-33 sets
		2-14 pages	100 sets
Stapled Stack Capacity (mixed sizes)	A4 LEF & A3 SEF, B5 LEF & B4 SEF, 8 1/2"x11" LEF & 11" x17" SEF	2-30 pages	50 set

7.3.16 2000-SHEET FINISHER B700

This finisher provides booklet as well as corner stapling. Equipped with two trays, the upper tray holds stapled and shifted copies, and the lower tray holds booklet stapled and folded copies.

Finisher			
Dimension W x D x H		657 x 613 x 960 mm (25.9 x 24.1 x 37.8")	
Weight		Less than 63 kg (138.6 lb.) (no punch unit) Less than 65 kg (143 lb.) (with punch unit)	
Power Consumption		Less than 96 W	
Noise		Less than 75 db	
Configuration		Console type attached base-unit	
Power Source		From base-unit	
Proof Tray	Stack Capacity*	250 sheets A4, 8 1/2"x11" or smaller 50 sheets B4, 8 1/2"x14 or larger	
	Paper Size	A5-A3 SEF, A6 SEF, A6 LEF 5½" x8½" to11" x 17" SEF, 12"x18" SEF	
	Paper Weight	52 g/m²-163 g/m² 14 lb Bond- 43 lb Bond / 90 lb Index / 60 lb Cover	
Shift Tray	Stack Capacity*	2,000 sheets	A4 LEF, 8 1/2"x11" LEF
		1,000 sheets	A3 SEF, A4 SEF, B4 SEF, B5 11"x17" SEF, 8½" x14" SEF, 8½" x 11" SEF, 12"x18" SEF
		500 sheets	A5 LEF
		100 sheets	A5 SEF, B6 SEF, A6 SEF, 5½" x8½" SEF
	Paper Size	A5 - A3 SEF, A6 SEF, B6 SEF 5½" x8½" to 11" x 17" SEF, 12" x 18" SEF	
	Paper Weight	52 g/m²-256 g/m² 14 lb Bond- 68 lb Bond / 140 lb Index / 90 lb Cover	
Staple			
Paper Size		B5-A3, 8 1/2"x11"-11"x17", 12"x18"	
Paper Weight		64 g/m²-90 g/m², 17 lb Bond-28 lb Bond	
Staple Position		Top, Bottom, 2 Staple, Top-slant	
Staples Capacity*	Same Paper Size	50 sheets	A4, 8½" x 11" or smaller
		30 sheets	B4, 8½" x 14" or larger
	Mixed Paper Size	30 sheets	A4 LEF & A3 SEF, B5 LEF & B4 SEF, 8½"x11" LEF & 11" x17" SEF
	Booklet Stapling	15 sheets	A4 SEF, A3 SEF, B5 SEF, B4 SEF, 8 1/2"x11" SEF, 8 1/2"x14" SEF, 11"x17" SEF, 12"x18" SEF

Staple Replenishment		Corner staple	5,000 staples per cartridge
		Booklet staple	2,000 staples per cartridge
Corner Staple Capacity	Same Size	A4 LEF, 8 1/2"x11" LEF	13-50 pages
			2-12 pages
		A4 SEF, B5, 8 1/2"x11" SEF	10-50 pages
			2-9 pages
	Mixed Size	Others	10-30 pages
			2-9 pages
Booklet Staple Capacity	A4 SEF, A3 SEF, B5 SEF, B4 SEF 8 1/2"x11" SEF, 8 1/2"x14" SEF, 11"x17" SEF 12"x18" SEF		2-5 pages
			6-10 pages
			11-15 pages

B700/B701 Paper Specifications

Paper Size	Plain Paper			Paper Type	
	Copier PPC	Used Paper	Recycled Paper	Colored Paper	Translucent Blueprint
A3 SEF	●	—	●	●	▲
B4 SEF	●	▲	●	●	▲
A4 SEF	●	▲	●	●	▲
A4 LEF	⊗	▲	⊗	⊗	▲
B5 SEF	●	▲	●	●	▲
B5 LEF	⊗	▲	⊗	⊗	▲
A5 SEF	○	—	—	—	—
A5 LEF	○	—	—	—	—
B6 SEF	▲	—	—	—	—
B6 LEF	▲	—	—	—	—
12" x 18" SEF	●	—	●	●	—
11" x 17" SEF	●	—	●	●	▲
8½" x 14"	●	—	●	●	▲
8½" x 11" SEF	●	—	●	●	▲
8½" x 11" LEF	⊗	—	⊗	⊗	▲
5½" x 8½"	○	—	—	○	—
5½" x 8½"	○	—	—	○	—

- ⊗ Corner stapling, Shift, YES
- Booklet stapling/folding, Shift, YES
- Shift ONLY
- ▲ Shift NO
- Not available

7.3.17 PUNCH UNIT B702

This punch unit is designed for use with the 2000-Sheet Stapler B700 (both corner and booklet stapling) and 3000-Sheet Stapler B701 (corner stapling only).

Available Punch Units		NA	2/3 hole switchable
		EU	2/4 holes switchable
		Scandinavia	4 holes
Punch Waste Replenishment		NA 2-hole	Up to 5,000 sheets
		NA 3-hole	Up to 5,000 sheets
		EU 2-hole	Up to 14,000 sheets
		EU 4-hole	Up to 7,000 sheets
		Scandinavia 4-hole	Up to 7,000 sheets
Paper Weight		52 g/m ² -163 g/m ² , 14 lb Bond –43 lb Bond / 90 lb Index / 60 lb Cover	
Paper Sizes	NA 2-hole	SEF	A5 to A3, 5½" x 8½" to 11"x17"
		LEF	A5 - A4, 5½" x 8½" , 8½" x 11"
	NA 3-hole	SEF	A3, B4, 11"x17"
		LEF	A4, B5, 8½" x 11"
	EU 2-hole	SEF	A5 - A3, 5½" x 8½" to 11" x 17"
		LEF	A5 to A4, 5½" x 8½" , 8½" x 11"
	EU 4-hole	SEF	A3, B4, 11"x17"
		LEF	A4, B5, 8½" x 11"
	Scandinavia 4-hole	SEF	A5 to A3, 5½" x 8½" to 11" x 17"
		LEF	A5 - A4, 5½" x 8½" , 8½" x 11"

7.3.18 9-BIN MAILBOX B762


The mailbox can be installed on top of the 2000-Sheet Finisher B700, the 3000-Sheet Finisher B701, or the 3000-Sheet Finisher B706.

Dimension (w x d x h)	540 x 600 x 660 mm (21.3 x 23.6 x 26 in.)
Weight	Less than 15 kg (33 lb.)
Power Consumption	Less than 48 W
Noise	Less than 74 dB
Number of Bins	9 bins
Stack Capacity of each Bin	100 sheets*
Paper Size	A5, A4, A3 5½" x 8½", 8½" x 11", 8½" x 14", 11"x17"
Paper Weight	52 - 128g/m ² 14 lb – 34 lb Bond

APPENDIX 1 (FOR MODEL MT)

1. RSS (REMOTE SERVICE SYSTEM)

1.1 RSS SET UP

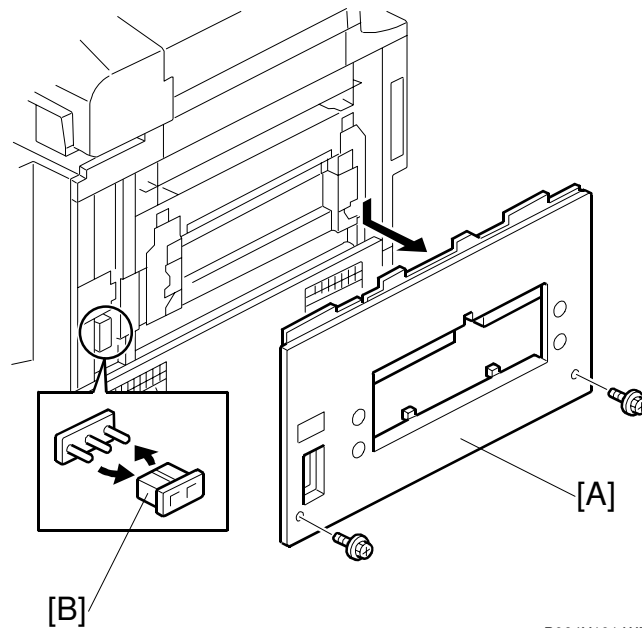

B064X101.WMF


⚠ CAUTION

Unplug the machine power cord before starting the following procedure.


1. Remove the left upper cover [A] (2 screws).

When connecting only one machine to the line adapter, skips step 2.

2. Set the jumper switch [B] on the RSS board as shown (default setting is 1-2).

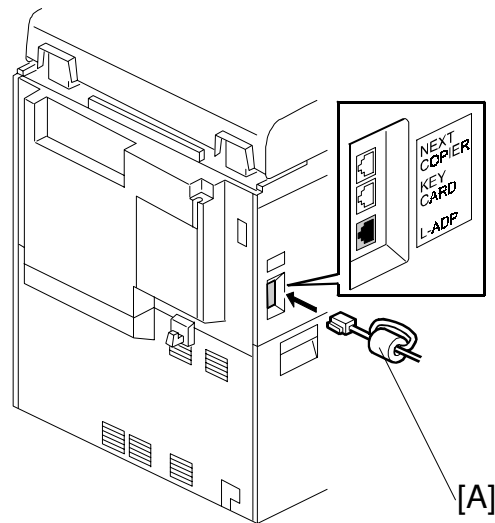

B064X109.WMF

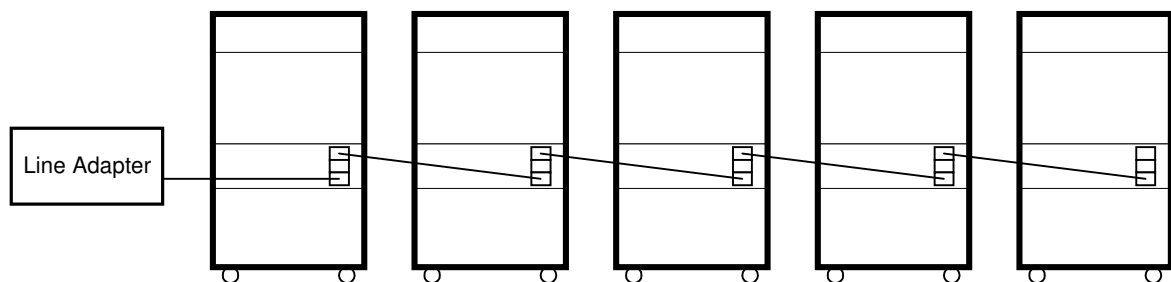

B064X554.WMF

Machine No.	1	2	3	4	5
Jumper Set	2-3	2-3	2-3	2-3	1-2
PI device code	0	1	2	3	4

3. Re-install the upper left cover.
4. Install the core [A] and connect the modular cord to the line adapter as shown.
5. Install the line adapter (refer to chapter 2-1 L-ADP Installation Procedure in the CSS Service Manual).
6. Turn on the machine.

When connecting only one machine to the line adapter, skips step 7.

7. Enter the Copier SP mode and set the PI device code with SP5-821 (default 0).

NOTE: After changing the value, turn the main power switch off and on to enable the PI device code.

1.2 SP MODE SETTING

After installing the machine and line adapter, perform SP5-816-1 (CSS Function On/Off).

Check the value of the following SP modes. Ensure they are set correctly.

NOTE: SP5-507 is only for the Japanese version. Do not change.

- SP5-504-1 (Jam Alarm Level): 3
- SP5-504-2 (Jam Auto Call): 1 (on)
- SP5-505 (Error Alarm): 100
- SP5-811 (Machine No. Setting)
- SP5-812 (Service Tel. No. Setting)

1.3 CHECKING ITEMS USING RSS

1.3.1 READ ONLY ITEMS

Item
Paper end
Paper jam information
Toner end
Toner near end
Web near end
Staple end
Door open
Unit connection condition (Fusing and PCU)
Paper size information
System configuration
Vsg, Vsp, Vsdp, Vt data
Copy counter for user codes
SP7-001, -003, -101, -204 ~ -206, -301, -304, -305, -320 ~ -328, -401, -502 ~ -508, -801, -803
Printer controller firmware version
Printer bit SW information

1.3.2 AUTO CALL AND READ ITEMS

SC Calls

The SC calls are generated according to the SC level as follows. Please note that the SC level of this copier is defined differently from the other copiers.

SC Level	Definition	SC Auto Call Condition
A	Fuser unit SCs which cannot be reset by customer.	SC call is generated immediately
B	SCs caused by incorrect sensor detection which can be reset by turning main power switch off and on.	SC call is generated when SC occurs two times within 10 copies.
C	SCs that are not shown on the operation panel.	SC call is not generated.
D	SCs that disable only the features which use the defective item.	SC call is generated when SC occurs two times within 10 copies.

CC Calls

There are three types of CC calls as follows.

CC Code	Definition
CC 101	When paper jam is detected five times consecutively without completing any copy job, a CC101 is automatically generated.
CC 201	When a paper jam condition is not reset for 15 minutes, CC201 is automatically generated.
CC 202	When a cover open condition is not reset for 15 minutes, CC202 is automatically generated.

Alarm Calls

There are four types of Alarm Calls as follows:

Type	Definition
PM	When the PM counter reaches 80000, a PM Alarm Call is automatically reported to the Concorde system.
Original Count	Alarm call is generated after the specified total number of originals goes through the ARDF.
SC	When 3 SCs (Any level) occur during 1500 sheets copying, an SC Alarm Call is automatically reported to the Concorde system.
Jam	When paper jamming occurs 10 times during 1000 sheets copying, a Jam Alarm Call is automatically reported to the Concorde system.

1.3.3 READ AND WRITE ITEMS

All data for SP modes and UP modes except few modes.

1.3.4 EXECUTE ITEMS

Item	Item
Memory Clear	Copy counter reset
SC reset	Reset counter by each paper tray
PM counter reset	Total operation time reset
SC/jam counters rest	Key operator code reset
Counters reset (except total counter)	Access Code Clear
Original Counter Clear	Print Counter Clear

1.4 JAM HISTORY

The jam history is read in this way.



B064X555.WMF

1.4.1 JAM CONDITION TABLE

Copier

Code	Meaning
01	Jams at power on.
03	Paper does not reach the 1st Paper Feed Sensor
04	Paper does not reach the 2nd Paper Feed Sensor
05	Paper does not reach the 3rd Paper Feed Sensor
07	Paper does not reach the LCT Paper Feed Sensor
08	Paper does not reach the 1st Vertical Transport Sensor
09	Paper does not reach the 2nd Vertical Transport Sensor
0A	Paper does not reach the 3rd Vertical Transport Sensor
0C	Paper does not reach the Relay Sensor

Code	Meaning
0D	Paper does not reach the Registration Sensor
0E	Paper does not reach the Fusing Exit Sensor
0F	Paper does not reach the Exit Unit Entrance Sensor
10	Paper does not reach the Exit Sensor
13	Paper does not reach the Duplex Entrance Sensor
14	Paper does not reach the Duplex Transport Sensor 1
15	Paper does not reach the Duplex Transport Sensor 2
16	Paper does not reach the Duplex Transport Sensor 3
17	Paper does not reach the Duplex Exit Sensor
18	Paper does not reach the Exit Tray Sensor
22	Paper caught at the By-pass Paper End Sensor
35	Paper caught at the 1st Paper Feed Sensor
36	Paper caught at the 2nd Paper Feed Sensor
37	Paper caught at the 3rd Paper Feed Sensor
39	Paper caught at the LCT Paper Feed Sensor
3A	Paper Jam at Finisher Exit
3B	Paper Jam at Mailbox Entrance
3C	Paper caught at the 1st Vertical Transport Sensor
3D	Paper caught at the 2nd Vertical Transport Sensor
3E	Paper caught at the 3rd Vertical Transport Sensor
42	Paper caught at the Exit Sensor
45	Paper caught at the Duplex Entrance Sensor
47	Paper caught at the Duplex Transport Sensor 2
48	Paper caught at the Duplex Transport Sensor 3
4A	Paper caught at the Exit Tray Sensor
65 (79*)	Paper caught or does not reach the Finisher Entrance Sensor
66 (7A*)	Paper caught or does not reach the Finisher Proof Tray Exit Sensor
67 (7B*)	Paper caught or does not reach the Exit Sensor
68 (7C*)	Paper caught or does not reach the Booklet Exit Sensor
69 (7D*)	Paper caught or does not reach the Paper Height Sensor
6A (7E*)	Staple Jam
6E (82*)	Paper Jam for the Jogger Motor
F (83*)	Paper Jam for the Shift Motor
70 (84*)	Paper Jam for the Stapler Movement Motor
71 (85*)	Paper Jam for the Stapler Rotation Motor
73 (87*)	Paper Jam for the Exit Motor
74 (88*)	Paper Jam for the Punch Motor
(7F*)	Staple Jam (Booklet)
(80*)	Paper Jam at the Saddle Stitch
(86*)	Paper Jam for the Booklet Stapler Motor
A1	Paper caught or does not reach the Mailbox Transport Sensor 1
A2	Paper caught or does not reach the Mailbox Transport Sensor 2
A3	Paper caught or does not reach the Mailbox Transport Sensor 3
A4	Paper caught or does not reach the Mailbox Transport Sensor 4
A5	Paper caught or does not reach the Mailbox Transport Sensor 5

*: B468 Finisher

1.4.2 PAPER SIZE

Code	Paper Size	Code	Paper Size
05	A4 sideways	86	A5 lengthwise
06	A5 sideways	87	A6 lengthwise
07	A6 sideways	8D	B4
0E	B5 sideways	8E	B5 lengthwise
0F	B6 sideways	8F	B6 lengthwise
11	Return post card sideways	91	Return post card lengthwise
12	Post card sideways	92	Post card lengthwise
24	8.5" x 14" sideways	A0	11" x 17"
26	8.5" x 11" sideways	A4	8.5" x 14" lengthwise
2C	8.5" x 5.5" sideways	A6	8.5" x 11" lengthwise
84	A3	AC	8.5" x 5.5" lengthwise
85	A4 lengthwise		

1.5 OTHERS

1.5.1 SC630 [RDS COMMUNICATION ERROR]

Frequent occurrence of SC630 indicates a problem in the customer's communication line or line adapter. To maintain the communications environment in good working order, it is necessary to contact planned inspections periodically.

1.5.2 PM PROCEDURE OR OTHER MAINTENANCE

Before beginning PM or other maintenance procedures, SP5-816-2 should be set to "0". This will disable the RDS function. When maintenance is completed, SP5-816-2 should be set to "1". This will re-enable the RDS function.

NOTE: The RDS function will remain disabled for four hours. Therefore, if maintenance for longer than four hours is required, SP5-816-2 should be set to "0" again to disable RDS.