# Model Cor-C1 Machine Code: D197/D198/D199/D200/D201/D202 Field Service Manual

# **Important Safety Notices**

## Safety

## Prevention of Physical Injury

- 1. Before disassembling or assembling parts of the machine and peripherals, make sure that the machine and peripheral power cords are unplugged.
- 2. The plug should be near the machine and easily accessible.
- 3. Note that some components of the machine and the paper tray unit are supplied with electrical voltage even if the main power switch is turned off.
- 4. If any adjustment or operation check has to be made with exterior covers off or open while the main switch is turned on, keep hands away from electrified or mechanically driven components.
- 5. If the [Start] key is pressed before the machine completes the warm-up period (the [Start] key starts blinking red and green), keep hands away from the mechanical and the electrical components as the machine starts making copies as soon as the warm-up period is completed.
- 6. The inside and the metal parts of the fusing unit become extremely hot while the machine is operating. Be careful to avoid touching those components with your bare hands.
- 7. To prevent a fire or explosion, keep the machine away from flammable liquids, gases, and gerosols.

#### **Health Safety Conditions**

- 1. Never operate the machine without the ozone filters installed.
- 2. Always replace the ozone filters with the specified types at the proper intervals.
- Toner and developer are non-toxic, but if you get either of them in your eyes by accident, it may cause temporary eye discomfort. Try to remove with eye drops or flush with water as first aid. If unsuccessful, get medical attention.

#### Observance of Electrical Safety Standards

1. The machine and its peripherals must be installed and maintained by a customer service representative who has completed the training course on those models.

#### Safety and Ecological Notes for Disposal

1. Do not incinerate toner bottles or used toner. Toner dust may ignite suddenly when exposed to an open flame.

- 2. Dispose of used toner, developer, and organic photoconductors in accordance with local regulations. (These are non-toxic supplies.)
- 3. Dispose of replaced parts in accordance with local regulations.
- 4. When keeping used lithium batteries in order to dispose of them later, do not put more than 100 batteries per sealed box. Storing larger numbers or not sealing them apart may lead to chemical reactions and heat build-up.

## **ACAUTION**

 The danger of explosion exists if a battery of this type is incorrectly replaced. Replace only with the same or an equivalent type recommended by the manufacturer. Discard used batteries in accordance with the manufacturer's instructions.

### **Handling Toner**

- Work carefully when removing paper jams or replacing toner bottles or cartridges to avoid spilling toner on clothing or the hands.
- If toner is inhaled, immediately gargle with large amounts of cold water and move to a well ventilated location. If there are signs of irritation or other problems, seek medical attention.
- If toner gets on the skin, wash immediately with soap and cold running water.
- If toner gets into the eyes, flush the eyes with cold running water or eye wash. If there are signs of irritation or other problems, seek medical attention.
- If toner is swallowed, drink a large amount of cold water to dilute the ingested toner. If there are signs of any problem, seek medical attention.
- If toner spills on clothing, wash the affected area immediately with soap and cold water. Never use hot water! Hot water can cause toner to set and permanently stain fabric.
- Always store toner and developer supplies such as toner and developer packages, cartridges, and bottles (including used toner and empty bottles and cartridges) out of the reach of children.
- Always store fresh toner supplies or empty bottles or cartridges in a cool, dry location that is not
  exposed to direct sunlight.

# **Laser Safety**

The Center for Devices and Radiological Health (CDRH) prohibits the repair of laser-based optical units in the field. The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser subsystems to the factory or service depot when replacement of the optical subsystem is required.

# **MARNING**

• Use of controls, or adjustment, or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

#### WARNING FOR LASER UNIT

#### WARNING:

Turn off the main switch before attempting any of the procedures in the Laser Unit section. Laser beams can seriously damage your eyes.

#### **CAUTION MARKING:**



laser\_decal

# Safety Precautions for This Machine


Before moving the mainframe:

- Disconnect all peripheral units (finisher, LCT, etc.) from the mainframe.
- Pull the slide handles out of the mainframe and use them to lift the mainframe.

# Symbols, Abbreviations and Trademarks

This manual uses several symbols and abbreviations. The meaning of those symbols and abbreviations are as follows:

<b>O</b> PP	Screw
Ø.	Shoulder screw
Ø₽°	Black screw (TCRU)
<b>F</b>	Connector
<b>₹</b>	FFC (Flat Film Connector)
	Harness clamp
W	Clip
<b>3</b>	E-ring
٥	C-ring
	Timing belt
	Spring
SEF	Short Edge Feed
LEF	Long Edge Feed

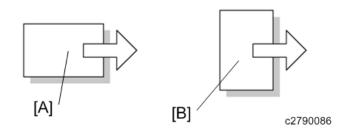

- [A] Short Edge Feed (SEF)
- [B] Long Edge Feed (LEF)

# Trademarks

 $Microsoft^{\otimes}$ ,  $Windows^{\otimes}$ , and  $MS\text{-}DOS^{\otimes}$  are registered trademarks of Microsoft Corporation in the United States and /or other countries.

 ${\sf PostScript}^{\circledR} \text{ is a registered trademark of Adobe Systems, Incorporated}.$ 

PCL® is a registered trademark of Hewlett-Packard Company.

Ethernet<sup>®</sup> is a registered trademark of Xerox Corporation.

PowerPC® is a registered trademark of International Business Machines Corporation.

Other product names used herein are for identification purposes only and may be trademarks of their respective companies. We disclaim any and all rights involved with those marks.

# **TABLE OF CONTENTS**

Important Safety Notices	1
Safety	1
Prevention of Physical Injury	1
Health Safety Conditions	1
Observance of Electrical Safety Standards	1
Safety and Ecological Notes for Disposal	1
Handling Toner	2
Laser Safety	2
Safety Precautions for This Machine	3
Symbols, Abbreviations and Trademarks	4
Trademarks	5
1. Product Information	
Product Overview	27
Component Layout	27
Paper Path	28
Drive Layout	31
Parts Layout	33
Scanner Unit	33
Paper Feed Unit	34
Laser Unit/ PCDU	35
Fusing Unit	36
Waste Toner Bottle	37
Duplex/Bypass Unit	38
Paper Exit/ Reverse Unit	39
Air Flow	40
Drive Unit	41
Electrical Component	42
Machine Codes and Peripherals Configuration	43
System Configuration and Options	43
D197/D198/D199 (EU)	43
D197/D198/D199 (Asia)	44
D197/D198/D199 (NA)	46
D200/D201 (EU)	47

D200/D201 (Asia)	49
D200/D201 (NA)	50
D202 (EU)	52
D202 (Asia)	53
D202 (NA)	54
Guidance for Those Who are Familiar with The Predecessor Product	56
Differences between Similar Models	56
D182/D183 vs. D197/D199	56
D129/D130 vs. D200/D201/D202	57
Differences between D146 Series	58
Specifications	59
2. Installation	
Installation Requirements	61
Environment	61
Machine Level	61
Minimum Space Requirements	61
Machine Dimensions	63
Power Requirements	63
Main Machine Installation	65
Important Notice on Security Issues	65
Overview	65
Password Setting Procedure	66
Installation Flow Chart	71
D197/D198/D199	71
D200/D201/D202	72
Accessory Check	72
Installation Procedure	73
Unloading	73
Tapes and Retainers	74
Toner Bottle	77
Paper Exit Tray Stopper	84
Emblem, Decals	85
Completion	86

Security Settings	87
Check Image Quality / Settings	87
Loading Paper	87
Checking the copy image with the test chart	88
SP Settings	88
Moving the Machine	89
Transporting the Machine	89
Paper Feed Unit PB3210/ PB3220	90
Accessory Check	90
Installation Procedure	90
Paper Feed Unit PB3150	96
Accessory Check	96
Installation procedure	96
LCIT PB3170/ PB3230	102
Accessory Check	102
Installation procedure	102
Changing the paper size	107
LCIT RT3030	110
Accessory Check	110
Installation procedure	110
Changing the Paper Size	117
Caster Table Type M3	119
Accessory Check	119
Installation Procedure	119
For Installing Directly under the Main Machine	120
For Installing under PB3150	121
Platen Cover PN2000 (D700)	125
Accessory Check	125
Installation Procedure	125
ARDF DF3090	129
Accessory Check	129
Installation Procedure	129
When feeding thin paper	134

SPDF DF3080	135
Accessory Check	135
Installation Procedure	136
Attaching the SPDF	136
Attaching the Sub IPU	139
Adjust SP Settings	144
Bridge Unit BU3070	146
Accessory Check	146
Installation procedure	146
1 Bin Tray BN3110	151
Accessory Check	151
Installation Procedure	151
Internal Shift Tray SH3070	160
Accessory Check	160
Installation Procedure	160
Side Tray Type M3	165
Accessory Check	165
Installation procedure	165
Booklet Finisher SR3 170 / Finisher SR3 160	169
Accessory Check	169
Installation Procedure	170
Adjustment after Installing the Finisher	178
How to Check and Adjust the Side-to-Side Registration	178
Auxiliary Tray	179
Punch Unit PU3060	181
Accessory Check	181
Installation Procedure	182
Booklet Finisher SR3150 / Finisher SR3140	195
Accessory Check	195
Installation Procedure	196
Adjustment after Installing Finisher	203
How to Check and Adjust the Side-to-Side Registration	203
Punch Unit PU3050	205

Component Check	205
Installation Procedure	206
Internal Finisher SR3180	222
Accessory Check	222
Installation Procedure	223
Staple Setting as an Initial Setting	235
Internal Finisher SR3130	237
Accessory Check	237
Installation Procedure	237
Punch Unit PU3040	248
Accessory Check	248
Installation Procedure	248
Smart Operation Panel Type M3	255
Accessory Check	255
Installation Procedure	255
Anti-Condensation Heater Type M12	260
Accessory Check	260
Installation Procedure	261
Anti-Condensation Heater (Scanner)	261
Anti-Condensation Heater (PCU)	273
Anti-Condensation Heater for Trays	278
Accessory Check	278
Installation Procedure	278
Anti-Condensation Heater for Paper Feed Tray (Main Unit)	278
Anti-Condensation Heater for Paper Feed Unit PB3210 / PB3220	286
Anti-Condensation Heater for Paper Feed Unit PB3150	289
Anti-Condensation Heater for LCIT PB3170/ PB3230	291
Card Reader Bracket Type 3352	295
Accessory Check	295
Installation Procedure	296
Key Counter Bracket Type M3	300
Accessory Check	300
Installation Procedure	300

Optional Counter Interface Unit Type M12	305
Accessory Check	305
Installation Procedure	305
Smart Card Reader Built-in Unit Type M12	308
Accessory Check	308
Installation Procedure	308
Internal Options	319
List of Slots	319
Printer/Scanner Unit Type M12	320
Component Check	320
Installation Procedure	321
IEEE 1284 Interface Board Type A	325
Component Check	325
Installation	325
IEEE 802.11a/g/n Interface Unit Type M2	327
Accessory Check	327
Installation	327
User Tool Settings for IEEE 802.11a/g/n	330
SP Mode Settings for IEEE 802.11 Wireless LAN	331
Bluetooth Interface Unit Type D	333
Component Check	333
Installation Procedure	333
File Format Converter Type E	335
Component Check	335
Installation	335
USB Device Server Option Type M12	337
Component Check	337
Interface Board Surface	337
Installation Procedure	338
What Do the LED Indications Mean?	341
Notes for Energy Save Mode Setting	342
IP Address Setting	342
Copy Data Security Unit Type G	3.45

Component Check	345
Installation	345
User Tool Setting	348
Hard Disk Drive Option Type M12	349
Accessory Check	349
Installation	350
SD Card Option	352
SD Card Slots	352
List of Slots Used	352
SD Card Appli Move	354
Overview	354
Move Exec	354
Undo Exec	355
OCR Unit Type M2	357
Accessory Check	357
Installation Procedure	357
Recovery Procedure	359
Browser Unit Type M12	361
Component Check	361
Installation Procedure	361
To update EXJS	363
When checking the version of EXJS	365
Browser unit uninstallation procedure	365
Settings	366
Browser default setting	366
SD card for NetWare printing Type M12	367
Component Check	367
Installation Procedure	367
PostScript3 Unit Type M12	369
Component Check	369
Installation procedure	369
XPS Direct Print Option Type M12	371
Component Check	371

Installation Procedure	371
IPDS Unit Type M12	373
Accessories	373
Installation	373
External Keyboard Bracket Type M3 (D739-10)	376
Component Check	376
Installation Procedure	376
Data Overwrite Security Unit Type I (D362)	381
Overview	381
Component List	381
Before You Begin the Procedure	381
Seal Check and Removal	382
Installation Procedure	383
Security Setting	385
Security Function Installation	385
Data Overwrite Security	386
Before You Begin the Procedure	386
Using Auto Erase Memory	386
HDD Encryption	388
Before You Begin the Procedure:	388
Enable Encryption Setting	388
Backing Up the Encryption Key	390
Encryption Key Restoration	391
@Remote Settings	394
Operation Guidance for Users	398
3. Preventive Maintenance	
Preventive Maintenance Tables	399
Image Quality Standards	400
Resolution	
Magnification ratio error margin	400
Magnification ratio error margin deviation	
Pitch error margin	
Perpendicularity	401

Linearity	402
Parallelism	402
Missing Image Area	403
Margin position	403
Paper Transfer Quality Standards	404
Registration	404
Skew	404
Exposure glass	404
ADF	404
PM Parts Settings	406
PM Parts Replacement Procedure	406
After Installing the New PM parts	407
Operation Check	407
4. Replacement and Adjustment	
Notes on the Main Power Switch	
Push Switch	409
Characteristics of the Push Switch (DC Switch)	409
Shutdown Method	410
Forced Shutdown	411
Beforehand	412
Special Tools and Lubricants	413
Special Tools	413
Lubricants	413
Cover Removal Order	414
Cover Layouts	414
Cover Removal Order	415
Exterior Covers	417
Front Cover	418
Controller Cover	419
Left Upper Cover	419
Left Rear Cover	420
Left Cover	421
Controller Rear Cover	422

Rear Left Cover	423
Rear Right Cover	423
Rear Lower Gap Cover	424
Rear Lower Cover	424
Scanner Rear Cover	425
Right Rear Cover	425
Right Upper Cover	426
Right Cover	427
Main Power Switch Cover	429
Inverter Tray	430
Paper Exit Tray	430
Paper Exit Cover	430
Paper Exit Lower Cover	431
Upper Inner Cover	432
Paper Exit Front Cover	433
Inner Cover	434
Toner Supply Housing	434
Operation Panel	437
Operation Panel	437
Key Control Board	438
Interface Board	440
LCD Panel	441
LCD	442
Notes when replacing the LCD	442
Replacement procedure	444
Scanner Unit	446
Scanner Exterior	446
Scanner Upper Cover	446
Scanner Right Cover	446
Scanner Front Cover	447
Scanner Left Cover	448
Exposure Glass	448
Scanner lamp	450

Scanner Motor	451
Lens Block	453
Original Size Sensors (APS)	454
SIO	455
Scanner HP Sensor	456
DF Position Sensor	457
Adjusting the Scanner Wire	457
Scanner Wire (Front)	458
Scanner Wire Assembly (Front)	461
Scanner Position Adjustment	467
Scanner Wire (Rear)	468
Scanner Wire Assembly (Rear)	472
Modifying the Scanner (contact/contactless) when using ARDF	475
Procedure for the ADF	475
Procedure for the Scanner	478
Modifying the Scanner (contact/contactless) when using SPDF	478
Procedure for the SPDF	478
Procedure for the Scanner	480
Laser Unit	482
Caution Decal Location	482
Laser Unit	482
Removing the Laser Unit	482
Installing a New Laser Unit	484
After Installing the New Laser Unit	486
Quenching Lamp	487
PCL (Pre Cleaning Light)	487
PCDU	489
Before Replacing a PCU or Development Unit	489
PCDU	489
PCU/Development Unit	491
Notes When Installing the Face Plates	492
Installing a PCU	493
Installing a Development Unit	493

OPC Drum	494
Charge Roller, Cleaning Roller	495
Pick-off Pawls	496
Cleaning Blade	497
Developer	498
Development Filter	505
TD Sensor	505
Development Mixing Auger Bearings	506
Development Mixing Auger (L / R)	508
Waste Toner	511
Waste Toner Bottle	511
Toner Collection Full Sensor	511
Recycling Shutter Solenoid	512
Recycling Shutter	514
Transfer Unit	51 <i>7</i>
Transfer Unit	51 <i>7</i>
Transfer Roller Unit	519
ID Sensor	520
Before Replacing the ID Sensor	520
Replacement Procedure	521
Transfer Unit Open/Close LED	521
Temperature/Humidity Sensor	522
Fusing Entrance Sensor	524
Transfer Unit Open/Close Sensor	524
Drive Unit	526
Drum/Waste Toner Motor	526
Development Motor	526
Fusing/Paper Exit Motor (D197/D199 Only)	526
Fusing Motor (D200/D201/D202 Only)	527
Paper Exit Motor (D200/D201/D202 Only)	527
Registration Motor	528
Paper Feed Motor	528
Vertical Transport Motor	529

Transfer Roller Contact Motor	529
Toner Hopper	530
Toner Supply Motor	532
Fusing Unit	535
Fusing Unit	535
Replacement	535
Fusing Entrance Guide Plate	538
Cleaning the Fusing Entrance Guide Plate	538
Fusing Exit Guide Plate	539
Fusing Upper Cover	539
Fusing Lower Cover	541
Heating Sleeve Belt Unit	542
Replacement	543
To Clear SC544-02 or SC554-02	544
Pressure Roller and Pressure Roller Bearings	545
Adjustment before Replacing the Pressure Roller and Pressure Roller Bearings	545
Replacement	546
Thermostat Unit	547
Fusing Roller Temperature Sensor	548
Pressure Roller Temperature Sensor	548
Fusing Thermopile	548
Notes When Reassembling the Fusing Unit	549
Paper Exit	551
Paper Exit Unit	551
Paper Exit Switching Solenoid	551
Paper Exit Sensor	552
Reverse Sensor	553
Paper Exit Full Sensor	554
Reverse Motor	555
Fusing Exit Sensor	557
Paper Feed	558
Paper Feed Unit	558
1 st Paper Feed Unit	558

2nd Paper Feed Unit	559
Paper Dust Collection Unit	562
Pick-up Roller, Paper Feed Roller, Separation Roller, Torque Limiter	564
1st / 2nd Paper Feed Tray Lift Motor	566
1st / 2nd Paper Feed Sensor	567
Vertical Transport Sensor	568
Limit Sensor	569
1st Paper End Sensor / 2nd Paper End Sensor	570
Registration Sensor	571
Duplex Unit	573
Duplex/By-pass Motor	573
Duplex Entrance Motor	574
Duplex Entrance Sensor.	575
Duplex Exit Sensor	577
Bypass Tray Unit	579
Bypass Tray	579
Bypass Paper End Sensor	581
Bypass Pick-up Roller	583
Bypass Paper Feed Roller	583
Bypass Separation Roller	583
Torque Limiter	584
Bypass Width Sensor	584
Bypass Length Sensor	588
PCBs and Other Items	589
Overview	589
Around the Controller Box	589
Around the Power Supply Box	590
IPU	590
IPU Sub (If SPDF is installed)	591
BCU	592
When installing the new BCU	592
Replacing the NVRAM (EEPROM) on the BCU	593
Controller Board	594

NVRAM on the controller board	597
HDD	601
Adjustment after replacement	601
HVPS	602
PSU	602
PSU Fuse Location	604
Heater Board	604
Controller Box	604
Temperature Sensor	608
Fans/Filters	609
Odor Filter	609
Dust filter	609
Development Exhaust Fan	610
Paper Exit Cooling Fan	613
Fusing Fan	613
Development Bearing Cooling Fan (D200/D201/D202 Only)	615
PSU Cooling Fan (D200/D201/D202 Only)	617
Adjustment after Replacement	618
Printing	618
Registration - Leading Edge/Side-to-Side	618
Blank Margin	622
Main Scan Magnification	624
Parallelogram Image Adjustment	624
Scanning	625
Registration: Platen Mode	626
Magnification	626
Scanner Wire	627
ADF Image Adjustment	627
Registration	627
Sub Scan Magnification	628
Touch Screen Calibration	629
5. System Maintenance	
Samilaa Pragram Mada	422

Enabling and Disabling Service Program Mode	633
Entering SP Mode	633
Exiting SP Mode	633
Types of SP Modes	633
SP Mode Button Summary	634
Switching Between SP Mode and Copy Mode for Test Printing	635
Selecting the Program Number	635
Exiting Service Mode	636
Service Mode Lock/Unlock	636
PM Counter/ Firmware Update	637
Remarks	639
Others	640
SP Mode Tables - SP1000	642
SP1-XXX (Feed)	642
SP Mode Tables - SP2000	662
SP2-XXX (Drum)	662
SP Mode Tables - SP3000	669
SP3-XXX (Process)	669
SP Mode Tables - SP4000	688
SP4-XXX (Scanner)	688
SP Mode Tables - SP5000-1	706
SP5-XXX (Mode)	706
SP Mode Tables - SP5000-2	744
SP5-XXX (Mode)	744
SP Mode Tables - SP5000-3	779
SP5-XXX (Mode)	779
SP Mode Tables - SP6000-1	813
SP6-XXX (Peripherals)	813
SP Mode Tables - SP6000-2	830
SP6-XXX (Peripherals)	830
SP Mode Tables - SP7000-1	846
SP7-XXX (Data Log)	846
SP Mode Tables - SP7000-2	864

SP7-XXX (Data Log)	864
SP Mode Tables - SP8000-1	880
SP8-XXX (Data Log 2)	880
Keys and abbreviations in Data Log 2	881
SP Mode Tables - SP8000-2	910
SP8-XXX (Data Log 2)	910
Printer SP Mode	932
SP1-XXX (Service Mode)	932
Scanner SP Mode	944
SP1-XXX (System and Others)	944
SP2-XXX (Scanning-image quality)	947
Input Check Table	949
Main Machine – Input check	949
ADF D779 – Input check	961
1-Pass ADF D683 – Input check	961
2000/3000 Sheets Finisher D688 / D689 – Input check	963
Internal Finisher D690 – Input check	969
1000 Sheets Finisher D687 – Input check	971
Bridge Unit D685 – Input check	973
Internal Finisher D766 – Input check	974
Internal Shift Tray D691 – Input check	975
1 Bin Tray D692 – Input check	975
Output Check Table	976
Main Machine – Output check	976
ADF D779 – Output check	985
1-Pass ADF D683 – Output check	985
2000/3000 Sheets Finisher D688 / D689 – Output check	987
Internal Finisher D690 – Output check	990
1000 Sheets Finisher D687 – Output check	991
Bridge Unit D685 – Output check	992
Internal Shift Tray D691 – Output check	993
Internal Finisher D766 – Output check	993
Test Pattern Printing	994

Firmware Update	996
Overview	996
Firmware type	996
Procedure	997
Update procedure	997
Error Screens During Updating	1001
Updating JavaVM	1008
Creating an SD Card for Updating	1008
Updating Procedure	1008
List of Error Messages	1009
Updating the EXIS	1012
To Update EXJS	1012
When checking the version of EXJS	1014
NVRAM Data Upload/Download	1015
Uploading Content of NVRAM to an SD card	1015
Downloading an SD Card to NVRAM	1016
UP/SP Data Import/Export	1017
Overview	1017
Import/export conditions	1017
UP Data Import/Export	1017
Data that can be imported and exported	1017
Data that cannot be imported or exported	1017
Exporting Device Information	1018
Importing Device Information	1020
SP Data Import/Export	1021
Data that can be imported and exported	1021
Exporting Device Information	1021
Importing Device Information	1022
Possible solutions for import/export problems	1023
Address Book Export/Import	1026
Export	1026
Import	1027
Specification	1027

RFU Updating the Firmware	1029
RFU Performable Condition	1029
Package Firmware Update	1030
Overview	1030
Immediate Update	1031
Update at the Next Visit (Reserve)	1034
How to Set the Machine to Download Firmware Later (RESERVE)	1034
How to Check if the Firmware Downloaded with RESERVE	1036
How to Install Firmware Downloaded with RESERVE	1038
Update via SD card	1041
Capturing the Debug Logs	1044
Overview	1044
Security of the Operation Log	1045
Retrieving the Debug Logs	1046
Procedure for Retrieving the Debug Log	1046
SP Text Mode (Saving SMC List to SD Card)	1048
Overview	1048
SP Text Mode	1048
Procedure	1048
File Names of the Saved SMC Lists	1050
Error Messages	1051
6. Troubleshooting	
Self-Diagnostic Mode	
Service Call Codes	1053
Service Call Conditions	1053
SC Logging	1054
SC Automatic Reboot	1054
SC Tables: SC1xx (Scanning)	1057
SC101-01 to SC195-00	1057
SC Tables: SC2xx (Exposure)	1067
SC202-00 to SC270-10	1067
SC Tables: SC3xx (Image Processing 1 (Charge, Development))	1073
SC302-00 to SC392-01	1073


SC Tables: SC4xx (Image Processing2 (Around the Drum))	1079
SC440-00 to SC498-00	1079
SC Tables: SC5xx (Paper Feed and Fusing)	1083
SC501-01 to SC589-02	1083
SC Tables: SC6xx (Communication and Others)	1125
SC620-01 to SC687-00	1125
SC Tables: SC7xx (Peripherals)	1144
SC700-01 to SC792-00	1144
SC Tables: SC8xx	1182
SC816 to SC899	1182
SC Tables: SC9xx (Others)	1217
SC900-00 to SC995-04	1217
When SC549 Is Displayed	1222
Troubleshooting Flowchart	1222
Fusing Shield Check	1223
Solution	1226
Jam Detection	1228
Paper Jam Display	1228
Jam Codes and Display Codes	1229
Main Machine	1229
ARDF DF3090	1231
ARDF DF3080	1232
Booklet Finisher SR3170/ Finisher SR3160	1232
Booklet Finisher SR3150/ Finisher SR3140	1234
Internal Finisher SR3130	1236
Internal Finisher SR3180	1236
Sensor Locations	1238
Paper Size Codes	1238
Other Problems	1240
When SC670 Is Displayed	1240
Marks (Vertical Streaks) on Prints and Copies due to Scanning Problems	1240
Finisher Registration Adjustment	
For SR3170/SR3160	1241

For SR3150/SR3140	1243
Stacking Problem at the 1000-sheet Finisher	1246
Installation procedure for attaching the sheet	1246
Installation procedure for attaching the auxiliary tray to the 1000-sheet finisher	1248
Early Paper Full Detection at the 1000-sheet Finisher	1249
Installation procedure	1249
Finisher Jogger Problem	1250
Jogger Width Adjustment Procedure	1250
Early Paper Full Detection Mylar for Internal Finisher SR3130 (D690)	1251
Pasting Mylar Procedure	1252
How to Re-Install the OCR Unit Type M2	1255
Paper Curl Problem for SR3 180	1256
Blown Fuse Condition	1260
7. Energy Saving	
Energy Saving	1263
Energy Save	1263
If the Energy Saver Button Is Pressed During Machine Operation	1263
Energy Saver Timer	1265
Paper Save	1266
Effectiveness of Duplex/Combine Function	1266
Paper Savings and Counter	1267

# 1. Product Information


# **Product Overview**

# Component Layout

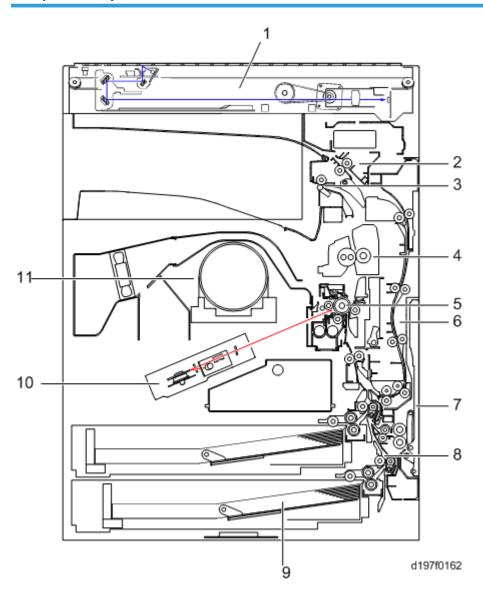


No.	Description	No.	Description
1	Scanner Unit	7	Bypass Tray Unit
2	Reverse Unit	8	Vertical Transport
3	Paper Exit Unit	9	Paper Feed Unit
4	Fusing Unit	10	Laser Unit
5	OPC Drum	11	Toner Supply Unit
6	Duplex Unit		

# Paper Path

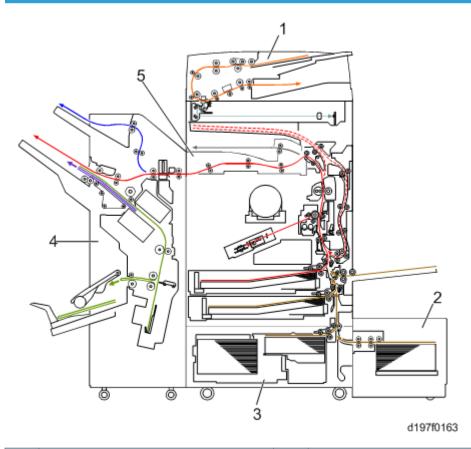


No.	Description	No.	Description
1	ARDF	4	Booklet Finisher

No.	Description	No.	Description
2	LCIT	5	Bridge Unit
3	LCIT (Tandem Tray)		

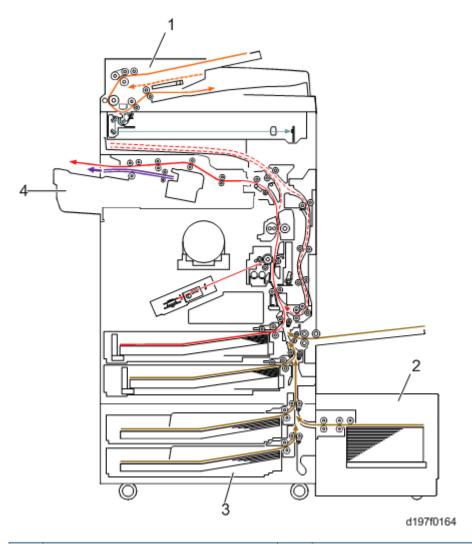


No.	Description	No.	Description
1	ARDF	3	Paper Feed Unit
2	LCIT	4	Internal Finisher

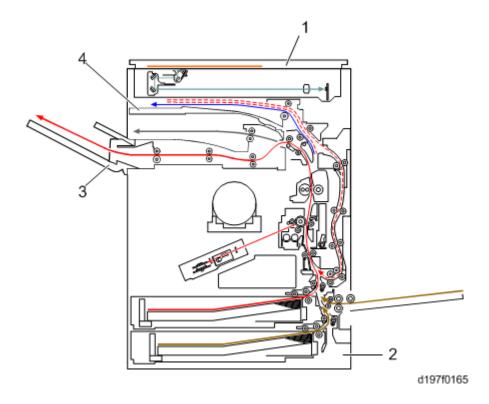

No	Description	No.	Description
1	Platen Cover	3	Side Tray Unit
2	Paper Feed Unit	4	1 Bin Tray Unit

# Drive Layout

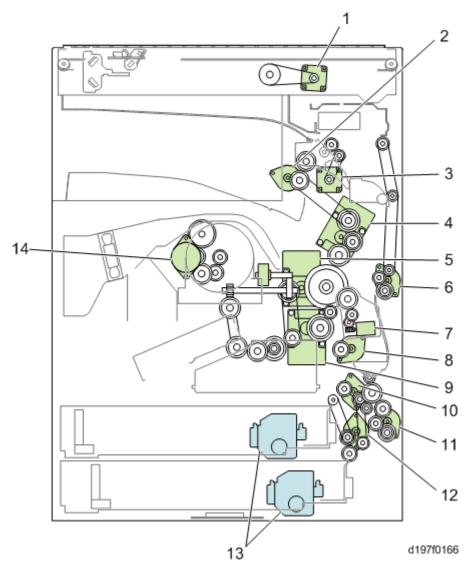


No.	Description	No.	Description
1	Scanner motor	8	Registration motor
2	Paper exit motor (D200/D201/D202 only)	9	Development motor
3	Reverse motor	10	Vertical transport motor

No.	Description	No.	Description
4	Fusing motor (D200/D201/D202 only) Fusing/paper exit motor (D197/D198/D199 only)	11	Duplex/bypass motor
5	Drum/waste toner motor	12	Paper feed motor
6	Duplex entrance motor	13	Paper feed tray lift motor
7	Transfer roller contact motor	14	Toner supply motor

# Parts Layout


# **Scanner Unit**

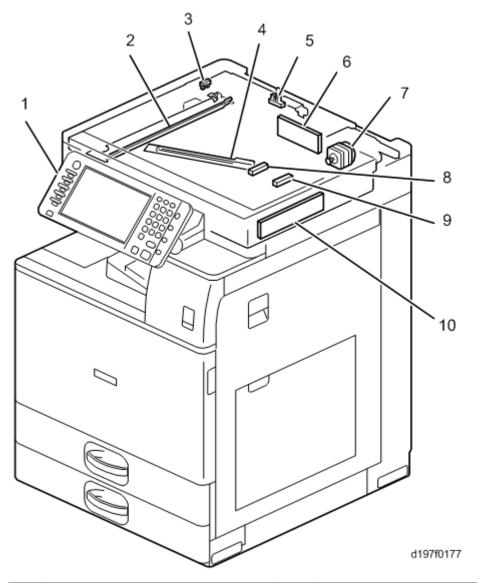

No.	Description	No.	Description
1	Operation panel	6	SIO
2	Scanner lamp unit (LED)	7	Scanner motor

No.	Description	No.	Description
3	Scanner HP sensor	8	APS sensor
4	Anti-condensation heater (Scanner) *Option	9	APS sensor
5	DF-position sensor	10	SBU


# **Paper Feed Unit**

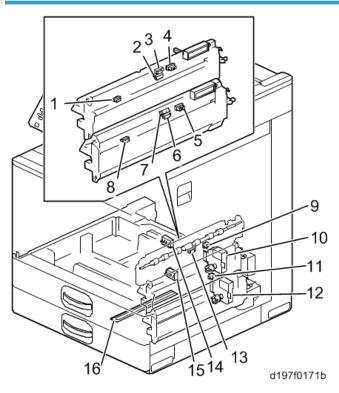


No.	Description	No.	Description
1	1 st paper feed sensor	9	1 st paper feed tray set switch
2	1 st vertical transport sensor	10	1 st paper feed tray lift motor
3	1st paper end sensor	11	2nd paper feed tray set switch
4	1 st paper feed tray limit sensor	12	2nd paper feed tray lift motor
5	2nd paper feed tray limit sensor	13	Registration sensor

No.	Description	No.	Description
6	2nd vertical transport sensor	14	1 st paper feed tray size switch
7	2nd paper end sensor	15	2nd paper feed tray size switch
8	2nd paper feed sensor	16	Anti-condensation heater *Option

## Laser Unit/ PCDU

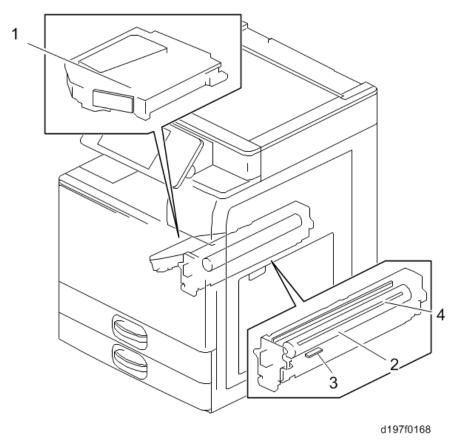


No.	Description	No.	Description
1	Laser Unit	3	TD sensor
2	Quenching lamp	4	PCL (Pre Cleaning Light)

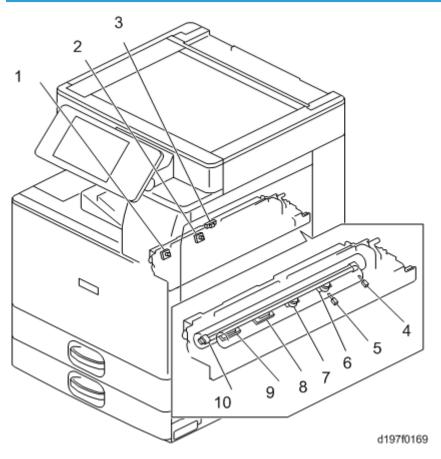


No.	Description	No.	Description
1	Fusing thermopile (End)	6	Thermostat (End)
2	Fusing thermopile (Center)	7	Thermostat (Center)
3	Fusing exit sensor	8	Fusing roller temperature sensor (Center)
4	Pressure roller temperature sensor (End)	9	Fusing roller temperature sensor (End)
5	Pressure roller temperature sensor (Center)	10	Fusing lamp

## **Waste Toner Bottle**

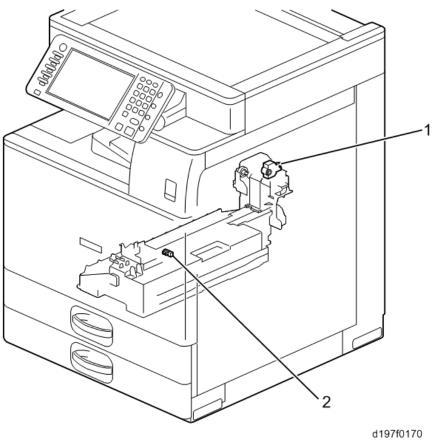


No.	Description	No.	Description
1	Drum/waste toner motor	2	Toner collection full sensor

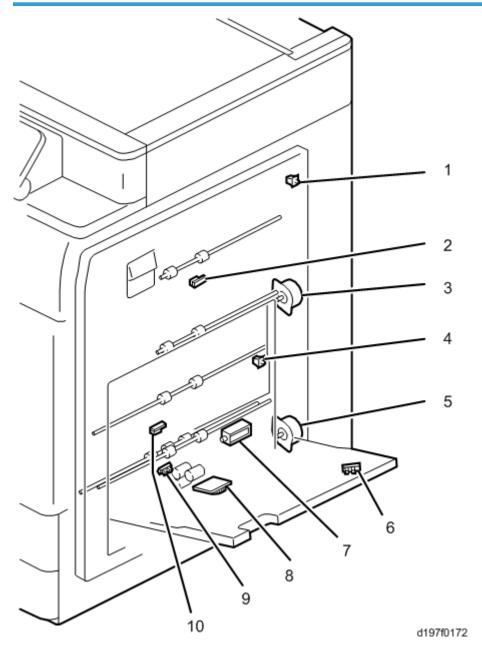

No.	Description	No.	Description
1	Right cover open/close switch	6	Bypass length sensor
2	Duplex entrance sensor	7	Bypass pickup solenoid

No.	Description	No.	Description
3	Duplex entrance motor	8	Bypass width switch
4	Duplex guide switch	9	Bypass paper end sensor
5	Duplex/bypass motor	10	Duplex exit sensor


## Paper Exit/ Reverse Unit

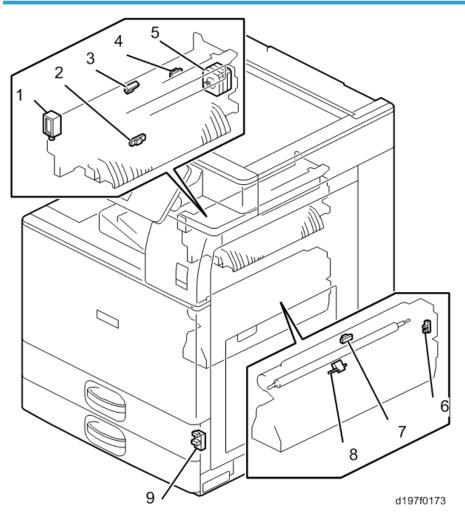

No.	Description	No.	Description
1	Paper exit switching solenoid	6	Transfer unit open/close sensor
2	Paper exit sensor	7	Fusing entrance sensor


No.	Description	No.	Description
3	Reverse sensor	8	Transfer Contact Sensor
4	Paper exit full sensor	9	Temperature/Humidity Sensor
5	Reverse motor		

## Air Flow

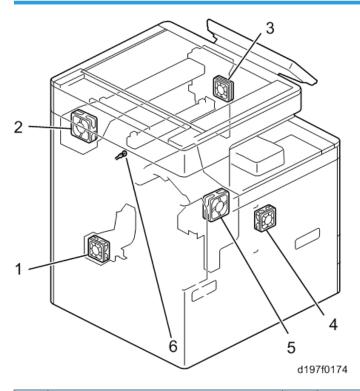


No.	Description	No.	Description
1	Development bearing cooling fan (D200/D201/D202 only)	4	PSU cooling fan(D200/D201/D202 only)
2	Fusing fan	5	Development exhaust fan
3	Paper exit cooling fan	6	Temperature sensor

## **Drive Unit**

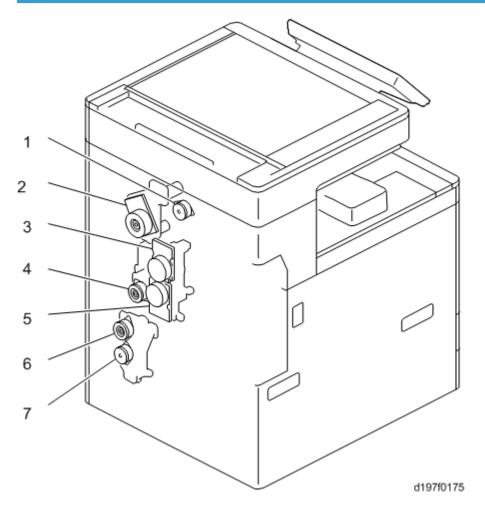

No.	Description	No.	Description
1	Paper exit motor (D200/D201/D202 only)	5	Development motor
2	Fusing motor (D200/D201/D202 only) Fusing/paper exit motor (D197/D198/D199 only)	6	Vertical transport motor
3	Drum/Waste toner motor	7	Paper feed motor
4	Registration motor		

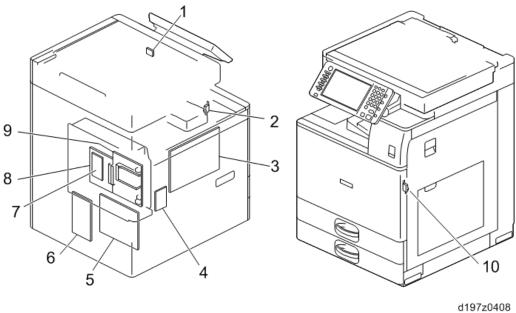


No.	Description	No.	Description
1	Main power switch	6	HVP
2	Interlock switch (Front Cover)	7	IPU-sub (only for machines with an SPDF installed)
3	PSU	8	IPU
4	DHB (Option)	9	Controller Board
5	BCU	10	Interlock Switch (Right Cover)

# Machine Codes and Peripherals Configuration

## System Configuration and Options

## D197/D198/D199 (EU)

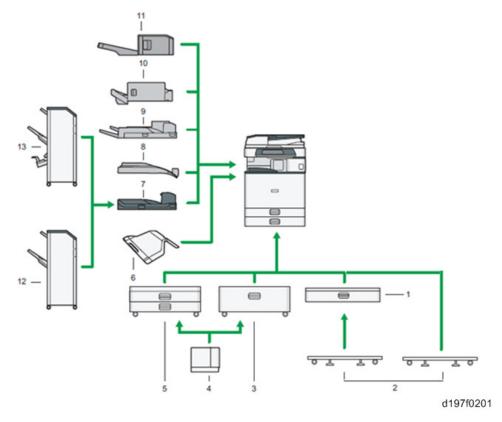


No.	ltem	Machine Code
1	Paper Feed Unit PB3150	D694
2	Caster Table Type M3	D178
3	LCIT PB3170	D695
4	LCIT RT3030	D696
5	Paper Feed Unit PB3210	D787
6	1 Bin Tray BN3110	D692

No.	ltem	Machine Code
7	Bridge Unit BU3070	D685
8	Internal Shift Tray SH3070	D691
9	Side Tray Type M3	D725
10	Internal Finisher SR3130	D690
11	Internal Finisher SR3180	D766
12	Finisher SR3140	D687
13	Booklet Finisher SR3150	D686


<sup>\*</sup> Smart Operation Panel Type M3 (D148) is not provided as an option for Europe; however, Smart Operation Panel embedded models are provided.

## D197/D198/D199 (Asia)

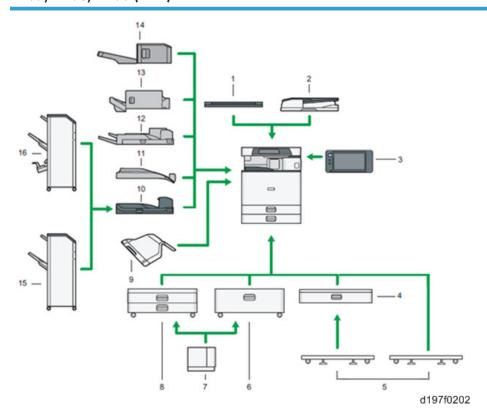

No.	ltem	Machine Code
1	Platen Cover PN2000	D700
2	ARDF DF3090	D779
3	Smart Operation Panel Type M3	D148
4	Paper Feed Unit PB3150	D694
5	Caster Table Type M3	D178
6	LCIT PB3170	D695
7	LCIT RT3030	D696
8	Paper Feed Unit PB3210	D787
9	1 Bin Tray BN3110	D692
10	Bridge Unit BU3070	D685
11	Internal Shift Tray SH3070	D691
12	Side Tray Type M3	D725
13	Internal Finisher SR3130	D690
14	Internal Finisher SR3180	D766
15	Finisher SR3140	D687
16	Booklet Finisher SR3150	D686

## D197/D198/D199 (NA)

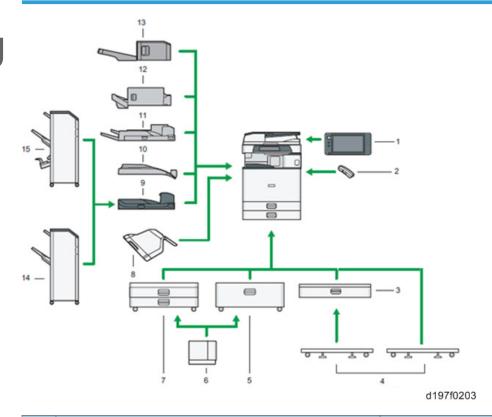


No.	ltem	Machine Code
1	Smart Operation Panel Type M3	D148
2	Handset HS3020	D739
3	Paper Feed Unit PB3150	D694
4	Caster Table Type M3	D178
5	LCIT PB3170	D695
6	LCIT RT3030	D696
7	Paper Feed Unit PB3210	D787
8	1 Bin Tray BN3110	D692
9	Bridge Unit BU3070	D685
10	Internal Shift Tray SH3070	D691

٦

No.	ltem	Machine Code
11	Side Tray Type M3	D725
12	Internal Finisher SR3130	D690
13	Internal Finisher SR3180	D766
14	Finisher SR3140	D687
15	Booklet Finisher SR3150	D686

## D200/D201 (EU)

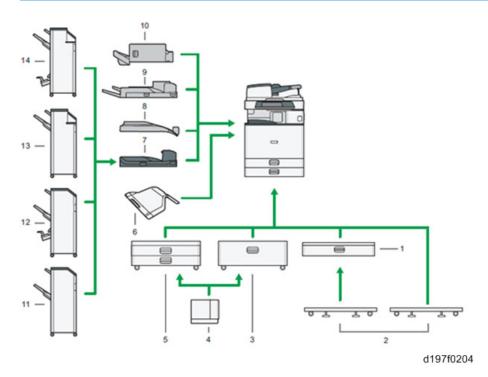

 No.
 Item
 Machine Code

 1
 Paper Feed Unit PB3150
 D694

 2
 Caster Table Type M3
 D178


 3
 LCIT PB3170
 D695

 4
 LCIT RT3030
 D696

No.	ltem	Machine Code
5	Paper Feed Unit PB3210	D787
6	1 Bin Tray BN3110	D692
7	Bridge Unit BU3070	D685
8	Internal Shift Tray SH3070	D691
9	Side Tray Type M3	D725
10	Internal Finisher SR3130	D690
11	Finisher SR3140	D766
12	Booklet Finisher SR3150	D686
13	Finisher SR3160	D689
14	Booklet Finisher SR3170	D688

<sup>\*</sup> Smart Operation Panel Type M3 (D148) is not provided as an option for Europe; however, Smart Operation Panel embedded models are provided.


## D200/D201 (Asia)

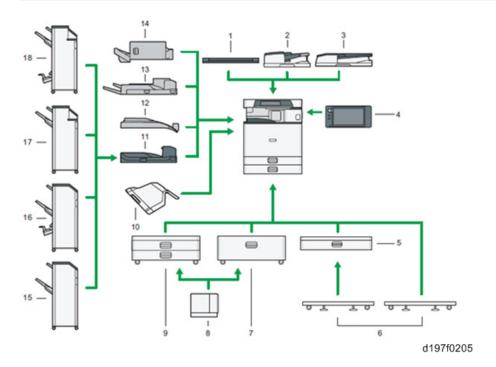

No.	ltem	Machine Code
1	Platen Cover PN2000	D700
2	SPDF DF3080	D683
3	ARDF DF3090	D779
4	Smart Operation Panel Type M3	D148
5	Paper Feed Unit PB3150	D694
6	Caster Table Type M3	D178
7	LCIT PB3170	D695
8	LCIT RT3030	D696
9	Paper Feed Unit PB3210	D787
10	1 Bin Tray BN3110	D692
11	Bridge Unit BU3070	D685

No.	ltem	Machine Code
12	Internal Shift Tray SH3070	D691
13	Side Tray Type M3	D725
14	Internal Finisher SR3130	D690
15	Finisher SR3140	D687
16	Booklet Finisher SR3150	D686
17	Finisher SR3160	D689
18	Booklet Finisher SR3170	D688


## D200/D201 (NA)

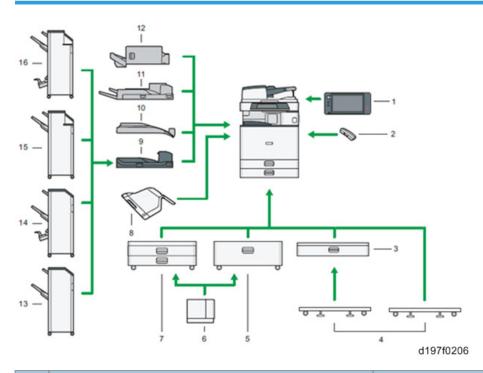

No.	ltem	Machine Code
1	Smart Operation Panel Type M3	D148
2	Handset HS3020	D739
3	Paper Feed Unit PB3150	D694

No.	ltem	Machine Code
4	Caster Table Type M3	D178
5	LCIT PB3170	D695
6	LCIT RT3030	D696
7	Paper Feed Unit PB3210	D787
8	1 Bin Tray BN3110	D692
9	Bridge Unit BU3070	D685
10	Internal Shift Tray SH3070	D691
11	Side Tray Type M3	D725
12	Internal Finisher SR3130	D690
13	Finisher SR3140	D687
14	Booklet Finisher SR3150	D686
15	Finisher SR3160	D689
16	Booklet Finisher SR3170	D688

## D202 (EU)

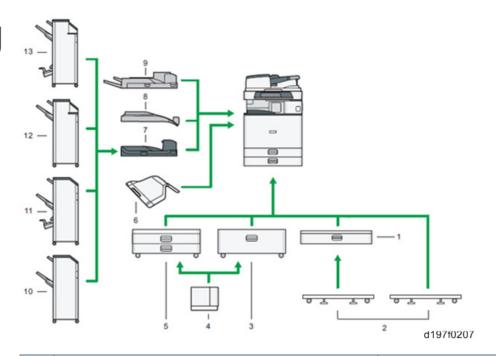


No.	ltem	Machine Code
1	Paper Feed Unit PB3150	D694
2	Caster Table Type M3	D178
3	LCIT PB3170	D695
4	LCIT RT3030	D696
5	Paper Feed Unit PB3210	D787
6	1 Bin Tray BN3110	D692
7	Bridge Unit BU3070	D685
8	Internal Shift Tray SH3070	D691
9	Side Tray Type M3	D725
10	Finisher SR3140	D687
11	Booklet Finisher SR3150	D686
12	Finisher SR3160	D689

1

No.	ltem	Machine Code
13	Booklet Finisher SR3170	D688

<sup>\*</sup> Smart Operation Panel Type M3 (D148) is not provided as an option for Europe; however, Smart Operation Panel embedded models are provided.


## D202 (Asia)

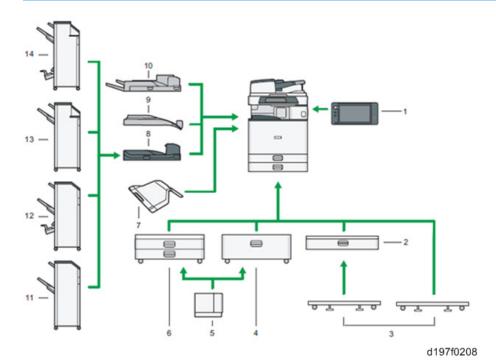

No.	ltem	Machine Code
1	Smart Operation Panel Type M3	D148
2	Paper Feed Unit PB3150	D694
3	Caster Table Type M3	D178
4	LCIT PB3170	D695
5	LCIT RT3030	D696
6	Paper Feed Unit PB3210	D787
7	1 Bin Tray BN3110	D692

No.	ltem	Machine Code
8	Bridge Unit BU3070	D685
9	Internal Shift Tray SH3070	D691
10	Side Tray Type M3	D725
11	Finisher SR3140	D687
12	Booklet Finisher SR3150	D686
13	Finisher SR3160	D689
14	Booklet Finisher SR3170	D688

## D202 (NA)

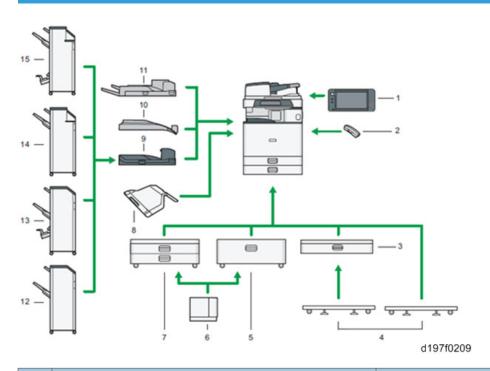

No.	ltem	Machine Code
1	Smart Operation Panel Type M3	D148
2	Handset HS3020	D739
3	Paper Feed Unit PB3150	D694

No.	ltem	Machine Code
4	Caster Table Type M3	D178
5	LCIT PB3170	D695
6	LCIT RT3030	D696
7	Paper Feed Unit PB3210	D787
8	1 Bin Tray BN3110	D692
9	Bridge Unit BU3070	D685
10	Internal Shift Tray SH3070	D691
11	Side Tray Type M3	D725
12	Finisher SR3140	D687
13	Booklet Finisher SR3150	D686
14	Finisher SR3160	D689
15	Booklet Finisher SR3170	D688

# Guidance for Those Who are Familiar with The Predecessor Product

## Differences between Similar Models

## D182/D183 vs. D197/D199

ltem		D182/D183	D197/D199
Paper Feed	Mainframe	FRR (Friction Reverse Roller)	RF (Roller Friction)
ADF	Scan Method	Non-Contact	Non-Contact
PCDU	Service Unit	PCDU	PCU + Development unit (preset developer)
Fusing	Method	Fusing roller	QSU-DH
	Fusing Web	No	No
Image Transfer	Method	Transfer roller	Transfer roller with Contact and Release mechanism
	Service Unit	Main-unit	Main-unit
Toner Recycle	Method	All recycle	No recycle or All discard
	Waste Toner Bottle	No	Yes
Laser	LD	1 ch-LD	1 ch-LD
	Parts Unit	Sub parts	Main-unit
Electrical Component	CTL board	Common	Not common between Basic and SP models
VM		Standard	Standard
Stapleless Stapler Option		Not Available	Available

ltem		D182/D183	D197/D199
PM	Method	Logging Counter	Remaining Counter
			(New PM)

## D129/D130 vs. D200/D201/D202

ltem		D129/D130	D200/D201/D202
Paper Feed	Mainframe	FRR (Friction Reverse Roller)	RF (Roller Friction)
ADF	Scan Method	Contact	Non-Contact
PCDU	Service Unit	PCU + Developer	PCU + Development unit (preset developer)
Fusing	Method	Fusing roller	QSU-DH
	Fusing Web	Yes	No
Image Transfer	Method	Transfer roller	Transfer roller with Contact and Release mechanism
	Service Unit	Sub part	Main-unit
Toner Recycle	Method	All recycle	No recycle
	Waste Toner Bottle	No	Yes
Laser	LD	2ch-LD	2ch-LD
	Parts Unit	Sub parts	Main-unit
Electrical Component	CTL board	Common	Not common between Basic and SP models
VM		Option	Standard
Stapleless Stapler Option		Not Available	Available
PM	Method	Logging Counter	Remaining Counter (New PM)

## Differences between D146 Series

ltem		D146	D197/D199/D200/D201/ D202
D	1 st Tray	A4 fixed	A3 universal
Paper Feed	2nd Tray	Up to A3 full-bleed	Up to A3
Tray pull-in mechanism		Tray pull-in mechanism	No Tray pull-in mechanism
Toner Recycle	Method	No recycle	No recycle
	Waste Toner Bottle	PM Parts	EM Parts

П

# **Specifications**

See "Appendices" for the following information:

- General Specifications
- Supported Paper Sizes
- Software Accessories
- Optional Equipment
- Other Specifications

# 2. Installation

## **Installation Requirements**

#### **Environment**


- 1. Temperature Range: 10 °C to 32 °C (50 °F to 89.6 °F)
- 2. Humidity Range: 15% to 80% RH
- 3. Ambient Illumination: Less than 1,500 lux (do not expose to direct sunlight.)
- 4. Ventilation: Room air should turn over at least 3 times/hr/person
- 5. Ambient Dust: Less than 0.10 mg/m<sup>3</sup>
- 6. Avoid an area which is exposed to sudden temperature changes. This includes:
  - Areas directly exposed to cool air from an air conditioner.
  - Areas directly exposed to heat from a heater.
- 7. Do not place the machine in an area where it will be exposed to corrosive gases.
- 8. Do not install the machine at any location over 2,000 m (6,500 ft.) above sea level. (NA can be installed only up to 2,500m (8,202 ft.))
- 9. Place the copier on a strong and level base. (Inclination on any side should be no more than 5 mm.)
- 10. Do not place the machine where it may be subjected to strong vibrations.

#### Machine Level

Front to back: Within 5 mm (0.2") of level Right to left: Within 5 mm (0.2") of level

## Minimum Space Requirements

Place the copier near the power source, and provide clearance as shown:

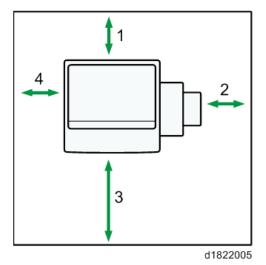


- 1. Rear: Over 101 mm (4")
- 2. Right: Over 432 mm (17")
- 3. Front: Over 750 mm (15.8")
- 4. Left: Over 100 mm (4")



• The 400 mm recommended for the space at the front is only for pulling out the paper tray. If an operator stands at the front of the copier, more space is required.

## **Machine Dimensions**

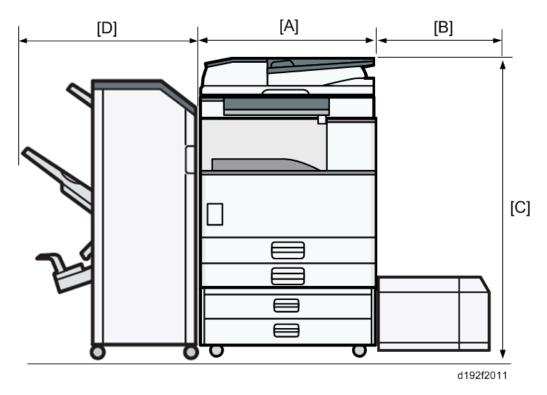

[A]: 587 mm (23.1")

[B]: 340mm (with D696)

[C]: 1210 mm (with D683), 1160 mm (with D779)

[D]: 657 mm (with D688 or D689)

## **Power Requirements**

## **ACAUTION**

- Make sure that the wall outlet is near the copier and easily accessible.
- Make sure the plug is firmly inserted in the outlet.
- Avoid multi-wiring.
- Be sure to ground the machine.

#### Input voltage level

- 120 V to 127 V, 60 Hz: More than 12 A: NA
- 220 V to 240 V, 50 Hz/60 Hz: More than 8A: EU/AP

- 110V, 60 Hz: More than 13.6 A: Taiwan
- 220V,60Hz More than 8A:KO

## Voltage tolerance

- Voltage must not fluctuate by more than +8.66% or less than -10%.: NA
- Voltage must not fluctuate by more than 10%.: EU/AP


## Main Machine Installation

#### Important Notice on Security Issues

In order to increase the security of the MFP, and to ensure that the customer sets the administrator password, an administrator set/change prompt display is shown up at the first power-up.

#### Overview

• The following Program/Change Administrator screen is displayed at the first power-up.

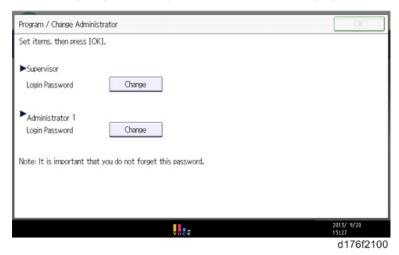

- When the customers set the administrator/supervisor login password, the display disappears and the home display will appear. The customers, however, can erase this screen with the following procedure if they think there is no need to set the password.
- On the Program/Change Administrator screen, press [Change] next to Supervisor and then touch [OK] without inputting any password.
- 2. Touch [OK] again when the Confirm password display shows up.
- 3. For Administrator 1, do the same procedure as steps 1 and 2.
- 4. Press the [OK] button, then the home display appears.
- SP5-755-002 allows you to skip this screen temporarily and continue the installation procedure
  without setting an administrator password. However, the Program/Change Administrator screen
  appears every time you turn the power OFF/ON, if the password is not set.

#### **Password Setting Procedure**




• For more details about this security issue, see "Notes on Using Multi-Function Printers Safely" supplied with the MFP.

## **CAUTION**

- When Supervisor / Administrator 1-4 passwords are configured via network, the "Change Supervisor login password" window will not display.
- The passwords for Supervisor or Administrator 1 to 4 can be set via "System Settings". But the
  Program/Change Administrator screen appears every time the power switch is turned ON if the
  passwords are input this way. So we recommend the customers to set the passwords via network or
  the Program/Change Administrator screen.
- 1. Install the MFP.
- 2. Turn the main power switch ON.
- 3. Change the Supervisor login password.




## 4. Input the password.

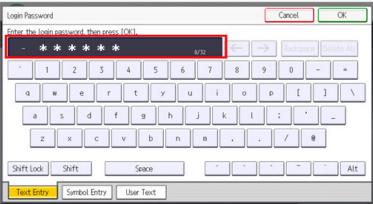


d176f2102

## 5. Press [OK].

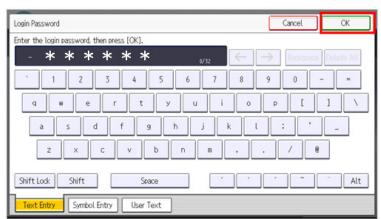


#### 6. Confirm the Password.

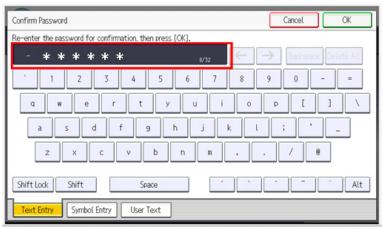


d176f2104

#### 7. Press [OK].

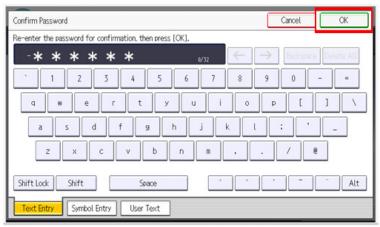


#### 8. Change the Administrator 1 login password.

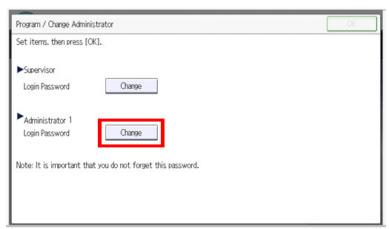


d176f2106

#### 9. Input the password.

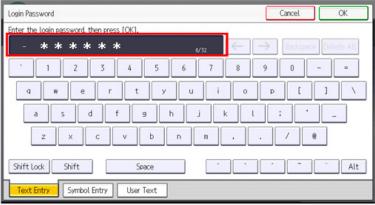

d176f2102

#### 10. Press [OK].

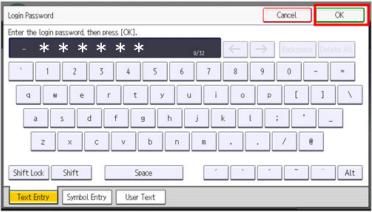

#### 11. Confirm the password.



d176f2104

#### 12. Press [OK].




d176f2105


#### 13. Cycle the power OFF/ON.

#### Installation Flow Chart

#### D197/D198/D199

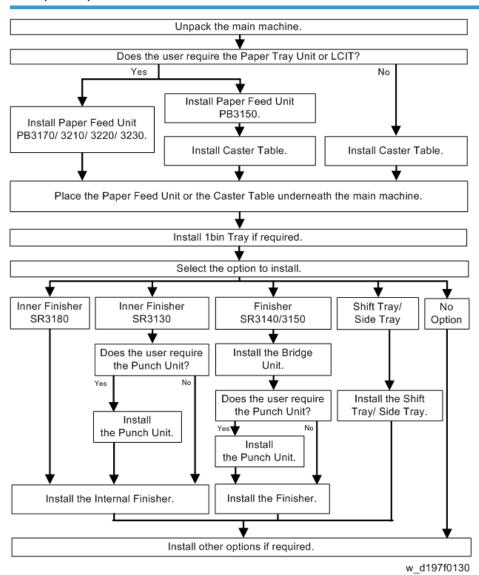

#### D200/D201/D202

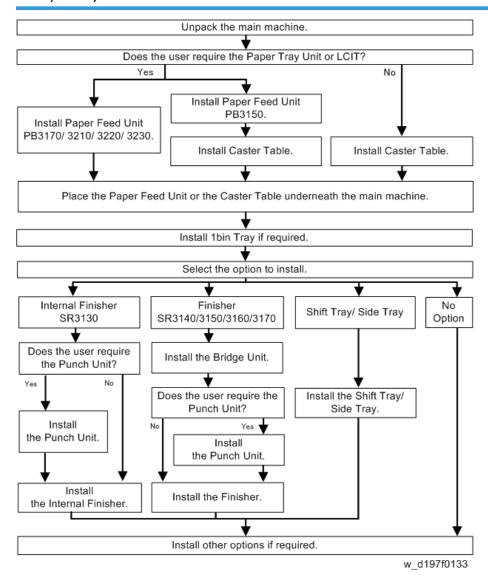

### **Accessory Check**

Check the quantity and condition of the accessories in the box against the following list:

No.	Description	Q'ty	Remarks
1	Rear Lower Gap Cover	1	
2	Original Caution Decal: English	1	


No.	Description	Q'ty	Remarks
3	Original Caution Decal: Multi-Language	1	
4	Main Switch On-Standby Decal	1	
5	Model Name Plate	1	
6	Original Table Decal	1	
7	Glass Cleaner Holder	1	
8	Logo Plate: Type GES	1	
9	Logo Plate: Type LAN	1	
10	:Logo Plate: Type RIC	1	
11	Power Supply Cord (120V:15A:NA)	1	NA only
12	Power Supply Cord (250V:10A:EU)	1	EU and Asia only
13	Exposure Glass Sheet:	1	
14	Stopper: Paper Exit Tray	1	

### Installation Procedure

### Unloading



- When unloading the main machine from a pallet, hold the specified locations. Holding the scanner unit may deform the main machine. Note that the grip at the front right is hidden by the cushioning material [A]. Remove the material to grip it.
- Lift the main machine slowly, using two people.

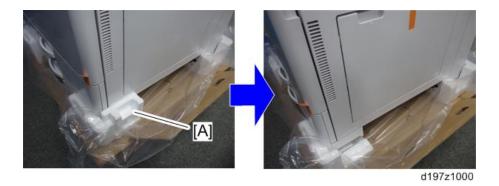

### **Tapes and Retainers**

### **ACAUTION**

• Unplug the machine power cord before you start the following procedure.

If the optional paper feed unit, the optional LCT or the caster table is going to be installed now, put the copier on these options, and then install the copier and options.



• Keep the shipping retainers after installing the machine. They will be reused if the machine is moved to another location in the future.

1. Remove the tapes on the exterior of the copier.






• If the ADF is installed, remove the tapes and retainers on the ADF as well.



d197z1008

2. Remove the cushioning material [A] on the exposure glass.

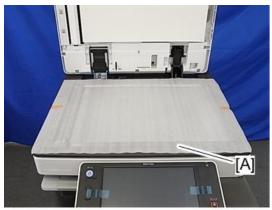

d197z1002

3. Pull out the 1st and 2nd paper feed trays and remove the tapes and accessories.



d197z1007

4. Remove the scanner support [A]




d197z1003

5. Open the front cover and store the scanner support [A] in the storage location.



• The factory setting sheet is kept in the storage location.

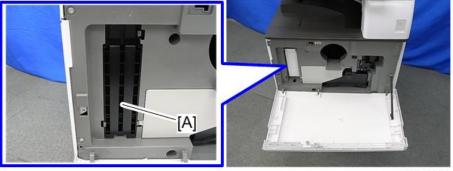

d197z1004

6. Close the front cover.

#### **Toner Bottle**




- This machine has toner bottle set detection and does not operate without the toner bottle.
- D197, D198, and D199 toner bottles are compatible with D200, D201, and D202. However, D200, D201, and D202 toner bottles are incompatible with D197, D198, and D199.
- 1. Open the front cover.
- Make sure that the black cap of the toner bottle is firmly tightened, then shake the toner bottle up and down seven or eight times while the cap faces upward.




• Shaking the bottle while the cap faces downward causes a possible toner blockage.

3. Remove the toner bottle protection cap [A].

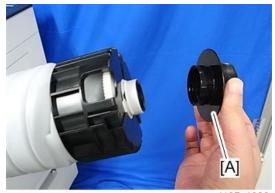

d197z1023

4. Push the toner bottle [A] into the machine slowly.

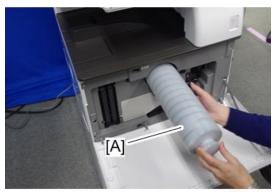

d197z1005

5. Turn on the main power switch while the front cover is open to execute the initial toner supply.



• If the front cover is closed when executing the initial toner supply, the machine starts a normal toner supply.



6. Enter SP mode from the copy application window, and then press [System Sp].



d197f3001



- Initializing messages do not show up if you enter SP mode from the home screen, so please
  make sure that you enter SP mode from the copy window.
- 7. Set the setting of SP3-510-031(ImgQltyAdj:ExeFlag: Init Toner Replenish: K) to "1", and then press "#" on the operation panel.



d197f3004

8. Press [EXIT] to end the SP mode.



d197f3005



d197f3006

- 9. Close the front cover.
- 10. The machine automatically starts the initial toner supply.



d197f3009

### **ACAUTION**



- It takes about one to two minutes to finish the initial toner supply. If the toner has not been shaken well, it may take up to about 10 minutes.
- If a toner bottle has not been set, the machine does not work because there is a toner bottle set detection mechanism.
- If you turn on the machine without closing the front cover, the initial toner supply is not
  performed at installation, and the machine goes to the toner end condition even if the machine
  has plenty of toner in the toner bottle.
- 11. Enter SP mode again, and then press [System Sp].



d197f3001

12. Enter SP7-622-250 (PM Counter Reset: SCS), and then press [Execute].




- This procedure updates the replacement year/date.
- The SP has an initial value that was set in the factory. Update this value so that the estimated remaining days counters will work correctly.



d197f3002

### 13. Press [Exit] when completed.

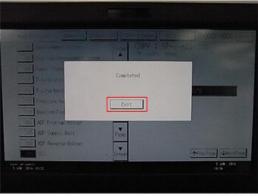


d197f3003

14. Enter SP3-011-001 (Manual ProCon :Exe), and then press [Execute].



• Be sure to do this procedure in the main machine installation. Otherwise, abnormal images may be developed until the next process control.

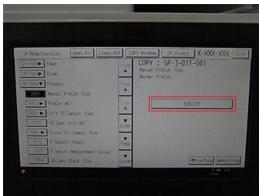

d197f3007

#### 2

### 15. Press [Exit] when completed.



d197f3003

### 16. Press [EXIT] to end the SP mode.



d197f3008



d197f3006

#### Note if the initial toner supply has not been performed

If you start printing without executing the initial toner supply at installation, the machine goes to the toner end condition even if the machine has plenty of toner in the toner bottle. Do the following procedure to perform the toner end recovery if the machine has entered the toner end condition.

- 1. Open the front cover for five seconds or more.
- 2. Make sure that the toner bottle is set properly.
- 3. Close the front cover.
- 4. The toner end recovery automatically starts

#### Paper Exit Tray Stopper


1. Attach the stopper [A] to the paper exit tray.



 Before installing the stopper, move the bar inside the stopper in order to avoid damaging the bar.




### 2. Hook the bar [A] onto the paper exit tray.

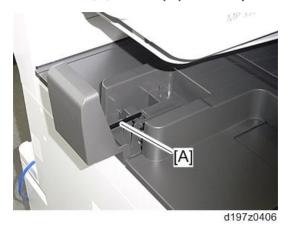

### Emblem, Decals

1. Paste the decals on the specified locations.



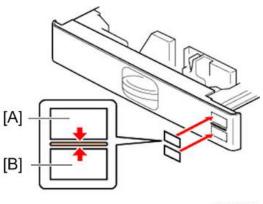


d1462230

[A]: Tray number decal

[B]: Paper size decal

### Completion

1. If the optional bridge unit is not to be installed, swing the sensor feeler [A] out.

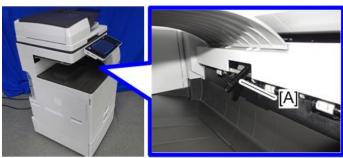

d197f0200

- 2. Install the optional ARDF or the optional platen cover (page 129, page 125).
- 3. Pull out trays, and then adjust the side fences and end fence to match the paper size.



To move the side fences, first pull out the tray fully, then push down the green lock at the rear
of the tray.

4. Connect the power cord to the inlet of the main machine.



d197f0603

#### **Security Settings**

The machine contains the Security functions (Data Overwrite Security and HDD Encryption unit) in the controller board.

When installing a new machine, it is recommended to activate the Data Overwrite Security and HDD Encryption by selecting "Format All Data" from "System Settings" on the operation panel. For details, refer to the "Security Settings page 385".

## Check Image Quality / Settings

#### **Loading Paper**

When there are other options to be installed, install according to the procedure for each.

- 1. Connect the power plug to the wall socket.
- 2. Turn the main power ON.
- 3. Check that the operation panel shows the following display.
  - "Please supply the tray with paper."
- 4. Square the paper and load it print side up.
- 5. The paper size is basically detected automatically.
  - 1. Pull out the paper feed tray slowly until it stops.
  - 2. While pressing the release lever, adjust the side fence to the paper size to be set.
  - 3. Set the end fence.

# 2

### Checking the copy image with the test chart

Check the copy image with the test chart.

#### **SP Settings**

- 1. Go into the SP mode.
- Do SP5-181 and SP1-007-001 to change automatic paper size selection for the upper tray, lower tray, and by-pass tray if necessary.

#### Upper Tray (Size Adjust Tray 1)

5-181-001	Tray 1: 1	0: A4LEF or 1: LT LEF
5-181-002	Tray 1: 2	0: A3 or 1: DLT
5-181-003	Tray 1: 3	0: B4 or 1: LG
5-181-004	Tray 1: 4	O: B5 LEF or 1: Exe LEF

#### Lower Tray (Size Adjust Tray 2)

5-181-005	Tray 2: 1	0: A4LEF or 1: LT LEF
5-181-006	Tray 2: 2	0: A3 or 1: DLT
5-181-007	Tray 2: 3	0: B4 or 1: LG
5-181-008	Tray 2: 4	O: B5 LEF or 1: Exe LEF

### By-Pass Tray (By-Pass Size Detection)

1-007-001* By-pass Tray 0: LT SEF or 1: LG SEF
--

<sup>\*</sup> This setting is necessary only for NA models (SP5-131-001: "1").

3. For basic models, enable the NIB and/or USB function if you install the Printer/Scanner option or @Remote.



- This step is for Basic models only. Enable these functions if you install the Printer/Scanner
  option and/or @remote option; keep these functions disabled if neither of these options are
  installed.
- To enable the NIB function if you install a printer/scanner option, with or without @Remote, enter the SP mode and set SP5-985-001 (On Board NIC) to "1"(Enable). However, if @Remote is to be used for a basic model without printer/scanner option, this SP must be set to "2".

- To enable the USB function, enter the SP mode and set SP5-985-002 (On Board USB) to "1"(Enable).
- You must turn the machine off/on after changing these settings, because these settings only take effect after the machine is restarted.
- 4. Exit SP mode.
- 5. Do some test copies to make sure that the machine operates correctly.

### Moving the Machine

This section shows you how to manually move the machine from one floor to another floor. See the section "Transporting the Machine" if you have to pack the machine and move it a longer distance.

- Turn the main power OFF and pull out the plug.
- Close all the covers and trays.
- Remove peripherals physically attached to the main machine: Paper feed unit, LCT and finisher.
- Keep the machine horizontal and move it slowly. Tipping and excess vibrations may damage the machine.

D688 RTB 15: Moving the SR3160 or SR3170 finisher

D686 RTB 7: Moving the SR3140 or SR3150 finisher


### Transporting the Machine

- 1. Do SP4-806-001 to move the scanner carriage from the home position. This prevents dust from falling into the machine during transportation.
- Remove the toner cartridges. This prevents toner leak, which is caused by vibration during transport.
- Make sure there is no paper left in the paper trays. Then fix down the bottom plates with a sheet of paper and tape.
- 4. Take out the scanner stay from inside the front cover and install the scanner stay.
- 5. Do one of the following steps:
  - Attach shipping tape to the covers and doors.
  - Shrink-wrap the machine tightly.

# Paper Feed Unit PB3210/ PB3220

### **Accessory Check**

No.	Description	Q'ty
1	Screws (M4 × 10)	2
2	Screw with Spring Washer (M4 × 10)	1
3	Securing Bracket	2

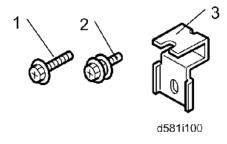


#### Installation Procedure

### **ACAUTION**

- The machine should be held at the correct locations and lifted gently.
- If it is lifted without care, handled carelessly or dropped, it may result in an injury.
- When installing this option, turn the machine power OFF, and unplug the power supply cord from the wall socket.
- If this option is installed with the power on, it may result in an electric shock or a malfunction.
- Be sure to join the machine to the paper feed unit so as to prevent equipment from falling over.
- If they are not connected, they may move and fall over, resulting in injury.


1. Remove the orange tape and retainers.

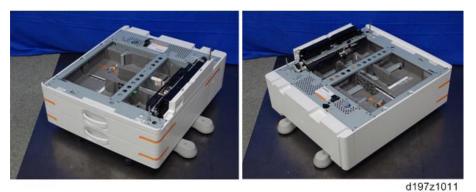

2. Remove the items provided (fixing screws, etc.) from the package.



3. Holding the grips on the machine, align it with the locating pin [A], and place the machine on the paper feed unit.

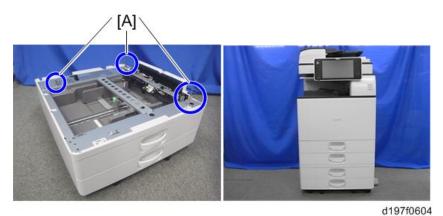

UNote

• When you lift the machine, hold the correct locations.

91


- In particular, do not lift the machine by holding the scanner unit, etc, because this may cause the machine to deform.
- Do not put the machine down on the paper feed unit as a temporary resting place. This may
  cause the paper feed unit to deform. Always connect the machine and paper feed unit
  properly.
- 4. Pull out the 2nd paper feed tray.
- 5. Using securing bracket as a screwdriver, fix the machine to the feed unit (spring washer: screw: M4×10: 1).




6. Attach the securing brackets [A] to two positions on the left and right at the rear of the machine (screws: 1 each).



- If the anti-condensation heater for this optional tray is to be installed, connect its heater harness prior to this step (step 6) (page 286).
- If "LCIT RT3030" is to be installed, connect its harness prior to this step (step 6) (page 110).

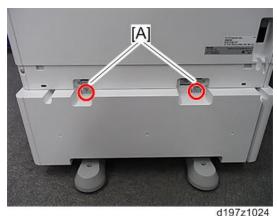


## 7. Attach the rear lower gap cover [A] ( x 2)

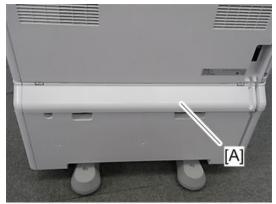

d197f2002

- 8. Return the paper feed tray to the machine
- 9. Attach the decals as shown below.

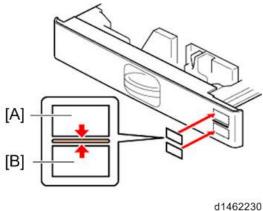

[A]: Tray number decal

[B]: Paper size decal



• The tray number decal and paper size decal are packaged together with the machine.

#### 10. Lock the casters of the paper feed unit.



d1462439

11. Connect the power cord to the machine.



• Stabilizers are attached to the machine when it is shipped. Do not remove it.



d197f2003

- 12. Turn the main power ON.
- 13. Set the paper, and check that the paper size set in the paper feed tray is displayed on the operation panel.
  - Paper size for the paper feed unit can be changed with following SPs.

SP5-181-009 (0: A4 LEF or 1: LT LEF) for Tray 3

SP5-181-010 (0: A3 or 1: DLT) for Tray 3

SP5-181-011 (0: B4 or 1: LG) for Tray 3

SP5-181-012 (0: B5 LEF or 1: Exe LEF) for Tray 3

SP5-181-014 (0: A4 LEF or 1: LT LEF) for Tray 4

SP5-181-015 (0: A3 or 1: DLT) for Tray 4

SP5-181-016 (0: B4 or 1: LG) for Tray 4 SP5-181-017 (0: B5 LEF or 1: Exe LEF) for Tray 4

#### 14. Adjust the registration for the paper feed unit.

For Tray 3
 SP1-001-0xx (Leading Edge Registration Tray 3)

-055	Tray3: Thin	-062	Tray3: Thin: 1 200
-056	Tray3: Plain	-063	Tray3: Plain:1200
-057	Tray3: Mid-thick	-064	Tray3: Mid-thick:1200
-058	Tray3: Thick 1	-065	Tray3: Thick 1:1200
-059	Tray3: Thick 2	-066	Tray3: Thick 2:1200
-060	Tray3: Thick 3	-067	Tray3: Thick 3:1200
-061	Tray3: Thick 4	-068	Tray3: Thick 4:1200

SP1-002-004 (Side-to-Side Registration Paper Tray 3)

• For Tray 4


SP1-001-0xx (Leading Edge Registration Tray 4)

-069	Tray4: Thin	-076	Tray4: Thin:1200
-070	Tray4: Plain	-077	Tray4: Plain:1200
-071	Tray4: Mid-thick	-078	Tray4: Mid-thick:1200
-072	Tray4: Thick 1	-079	Tray4: Thick 1:1200
-073	Tray4: Thick 2	-080	Tray4: Thick 2:1200
-074	Tray4: Thick 3	-081	Tray4: Thick 3:1200
-075	Tray4: Thick 4	-082	Tray4: Thick 4:1200

SP1-002-005 (Side-to-Side Registration Paper Tray 4)

### **Accessory Check**

No.	Description	Q'ty
1	Screws - M4 × 10	2
2	Screw with Spring Washer - M4 × 10	1
3	Securing Bracket	2

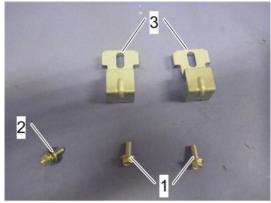

Paper Feed Unit PB3150

d1462445

## Installation procedure

### **ACAUTION**


- The machine should be held at the correct locations and lifted gently by two people.
- If it is lifted without care, handled carelessly or dropped, it may result in injury.
- When installing this option, turn the machine power OFF, and unplug the power supply cord from the wall socket.
- If this option is installed with the power on, it may result in an electric shock or a malfunction.
- Be sure to join the machine to the paper feed unit so as to prevent equipment from falling over.
- If they are not connected, they may move and fall over, resulting in injury.



• "Caster Table Type M3" is necessary to use this option.

2

1. Remove the orange tape and retainers.

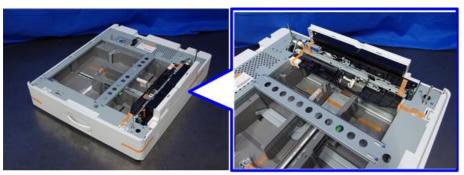

d197z1013


2. Remove the items provided (fixing screws, etc.) from the package.



d197z1014

3. Install this option on the Caster Table (page 119).

4. Holding the grips on the machine, align it with the locating pin [A], and place the machine on the paper feed unit.

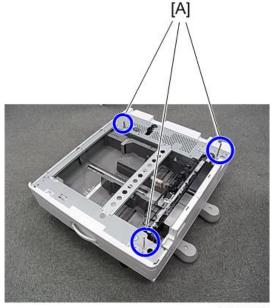

d197f0114




- When you lift the machine, hold the correct locations.
- In particular, do not lift the machine by holding the scanner unit, etc., because this may cause the machine to deform.
- Do not put the machine down on the paper feed unit as a temporary resting place. This may
  cause the paper feed unit to deform. Always connect the machine and paper feed unit
  properly.
- 5. Pull out the 2nd paper feed tray of the main machine.
- 6. Using a securing bracket as a screwdriver, fix the machine to the feed unit (spring washer: screw: M4×10: 1).




d197f0113

7. Attach the securing brackets [A] to two positions on the left and right at the rear of the machine (screws: 1 each).

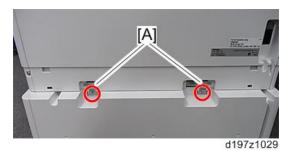


8. Attach the rear lower gap cover [A] (\(\neg x 2\))

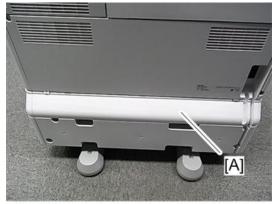

d197f2004

- 9. Return the paper feed tray to the machine.
- 10. Attach the decals as shown below.

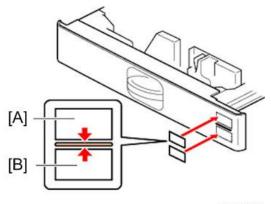

d1462230

[A]: Tray number decal

[B]: Paper size decal



- The tray number decal and paper size decal are packaged together with the machine.
- 11. Lock the casters of the paper feed unit.



d1462439

12. Connect the power cord to the machine.



• Stabilizers are attached to the paper feed unit when it is shipped. Do not remove them.



d197f2003

- 13. Turn the main power switch ON.
- 14. Set the paper, and check that the paper size set in the paper feed tray is displayed on the operation panel.
  - Paper size for the paper feed unit can be changed with following SP.

SP5-181-009 (0: A4 LEF or 1: LT LEF)

SP5-181-010 (0: A3 or 1: DLT)

SP5-181-011 (0: B4 or 1: LG)

SP5-181-012 (0: B5 LEF or 1: Exe LEF)

### 15. Adjust the registration for the paper feed unit.


SP1-001-0xx (Leading Edge Registration Tray 3)

-055	Tray3: Thin	-062	Tray3: Thin: 1200
-056	Tray3: Plain	-063	Tray3: Plain:1200
-057	Tray3: Mid-thick	-064	Tray3: Mid-thick:1200
-058	Tray3: Thick 1	-065	Tray3: Thick 1:1200
-059	Tray3: Thick 2	-066	Tray3: Thick 2:1200
-060	Tray3: Thick 3	-067	Tray3: Thick 3:1200
-061	Tray3: Thick 4	-068	Tray3: Thick 4:1200

SP1-002-004 (Side-to-Side Registration Paper Tray 3)

### **Accessory Check**

No.	Description	Q'ty
1	Securing Bracket	2
2	Screw(M4×10)	2
3	Hexagonal Bolt	1

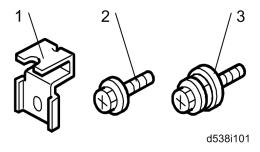

LCIT PB3170/ PB3230

### Installation procedure

### **ACAUTION**


- The machine should be held at the correct locations and lifted gently.
- If it is lifted without care, handled carelessly or dropped, it may result in an injury.
- When installing this option, turn the machine power OFF, and unplug the power supply cord from the wall socket.
- If this option is installed with the power on, it may result in an electric shock or a malfunction.
- Be sure to join the machine to the paper feed unit so as to prevent equipment from falling over.
- If they are not connected, they may move and fall over, resulting in injury.

2


1. Remove the orange tape and retainers.



2. Remove the items provided (fixing screws, etc.) from the package.

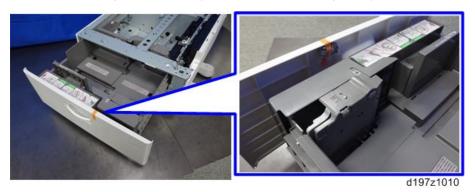

3. Holding the grips on the machine, align it with the locating pin [A], and place the machine on the paper feed unit.

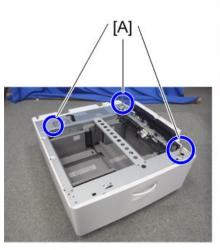



d146z2452




- When you lift the machine, be sure to hold the grips on the machine.
- In particular, do not lift the machine by holding the scanner unit, etc., because this may cause the machine to deform.
- Do not put the machine down on the paper feed unit as a temporary resting place. This may
  cause the paper feed unit to deform. Always connect the machine and paper feed unit
  properly.
- 4. Pull out the 2nd paper feed tray of the machine.
- 5. Using a securing bracket as a screwdriver, secure the machine to the LCT unit (spring washer: screw: M4×10: 1).



6. Attach the securing brackets [A] to two positions on the left and right at the rear of the machine (screws: 1 each).




- If the anti-condensation heater for this optional tray is to be installed, connect its heater harness prior to this step (step 6) (page 291).
- If "LCIT RT3030" is to be installed, connect its harness prior to this step (step 6) (page 110).

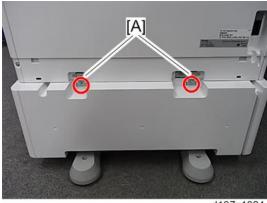

d197z1024


7. Attach the rear lower gap cover [A] (\(\nabla\) x2)

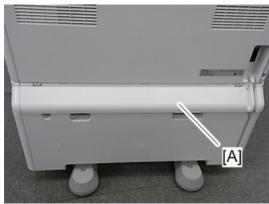

d197f2002


8. Return the paper feed tray to the machine.

#### 9. Attach the decals as shown below.

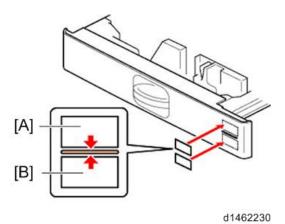

[A]: Tray number decal

[B]: Paper size decal



- The tray number decal and paper size decal are packaged together with the machine.
- 10. Lock the casters of the paper feed unit.



d1462439

11. Connect the power cord to the machine.



• Stabilizers are attached to the LCIT when it is shipped. Do not remove any of them.



d197f2003

- 12. Turn the power switch ON.
- 13. Set the paper, and check that the paper size set in the paper feed tray is displayed on the operation panel.
- 14. Adjust the registration for the paper feed unit.

SP1-001-0xx (Leading Edge Registration Tray 3)

-055	Tray3: Thin	-062	Tray3: Thin: 1200	
-056	Tray3: Plain	-063	Tray3: Plain:1200	
-057	Tray3: Mid-thick	-064	Tray3: Mid-thick:1200	
-058	Tray3: Thick 1	-065	Tray3: Thick 1:1200	
-059	Tray3: Thick 2	-066	Tray3: Thick 2:1200	
-060	Tray3: Thick 3	-067	Tray3: Thick 3:1200	
-061	Tray3: Thick 4	-068	Tray3: Thick 4:1200	

SP1-002-004 (Side-to-Side Registration Paper Tray 3)

#### Changing the paper size

Paper size is set as shown below when the machine is shipped from the factory.


NA: LT LEF

EU.AA.CHN: A4 LEF

The paper size can be changed to A4 LEF or LT LEF.

1. Pull out the left tray and right tray.

2. Remove the right tray side fence (front) [A], right tray side fence (rear) [B] and right tray end fence [C] (3°×3).

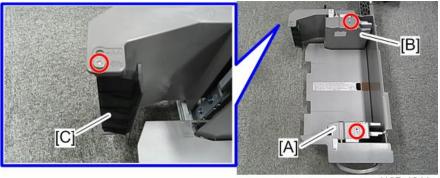

d197z1044a

3. Attach the fences to the required position (A4 or LT) ( \*3).




• Make sure that the spring [B] of end fence [A] is attached



d197z1045

4. Remove the left tray side fence (front) [A] and left tray side fence (rear) [B] (\$\mathbb{O}^{\mathbb{P}} \times 2)\$.

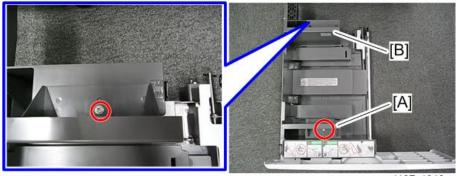

d197z1046a

5. Attach the fences to the required position (A4 or LT) (\$\mathbb{O}^2 \times 2).


- 6. Set the paper size setting.
  - SP5-181-009 (0: A4 LEF or 1: LT LEF)

#### 2

# **LCIT RT3030**

## **Accessory Check**

No.	Description	Q'ty
1	Rear Bracket	1
2	Front Bracket	1
3	Connecter Cover	1
4	Harness	1
5	Screws – M3 × 6	1
5	Tapping Screw – M3 × 6	1
5	Joint Pins	2
5	Stud screw	4
5	Joint Bracket	1

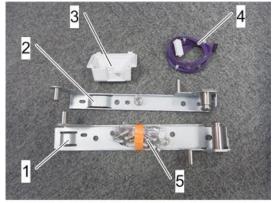

d1462455

## Installation procedure


### **ACAUTION**

• When installing this option, turn the power of the machine off, and unplug the power plug from the wall socket.

• If this option is installed when the power is on, it will result in an electric shock or a malfunction.




- Before installing this option, first attach the "Paper Feed Unit PB3210/ PB3220" or "LCIT PB3170/ PB3230".
- 1. Remove the orange tape and retainers.
- 2. Remove the enclosed items (stud screws, etc.).
- 3. Remove the eight covers on the right of the paper feed unit.

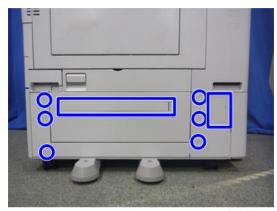


d1462457

4. Attach the joint pins [A] to the front and rear on the right of the paper feed unit.

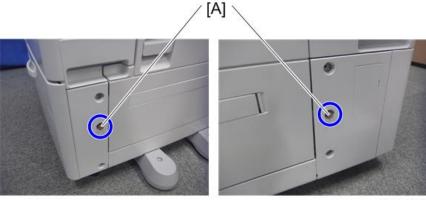


d1462458

5. Attach the brackets [A], [B] at the positions of the joint pins ( $\mathfrak{P} \times 4$ ).

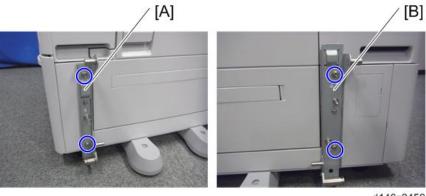


d146z2459

6. Remove the rear lower gap cover [A] (▼x2)

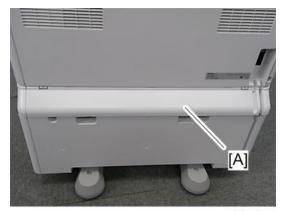


d197f2002

7. Take off the securing brackets [A] from the two positions on the left and right at the rear of the machine (3): 1 each).

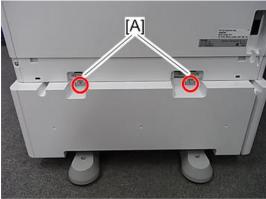

d197z1024


## 8. Remove the paper feed unit rear cover [A] (\$\mathbb{O}^\* \times 2).

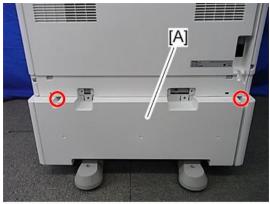


d197z1048

9. Connect the harness [A] (\$\sqrt{x}2\$).


For the machine with Paper Feed Unit PB3170/ PB3230

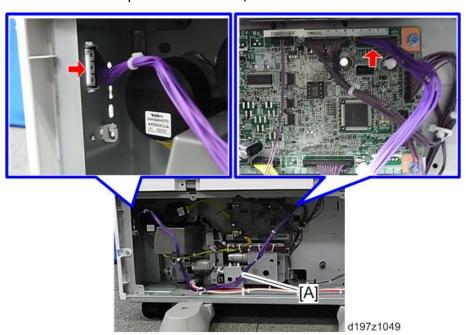


For the machine with Paper Feed Unit PB3210/ PB3220

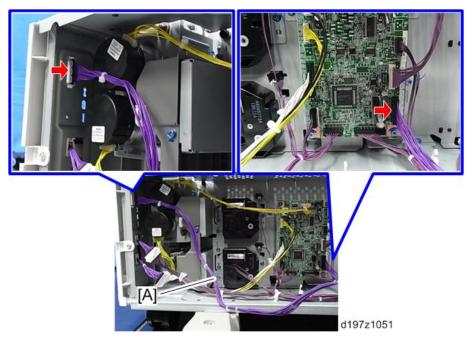

Clamp the harness (PB3170/ PB3230: <sup>®</sup>×9, PB3210/ PB3220: <sup>®</sup>×5).
 For the machine with Paper Feed Unit PB3170/ PB3230

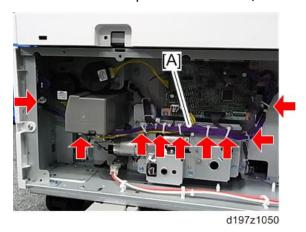


For the machine with Paper Feed Unit PB3210/ PB3220

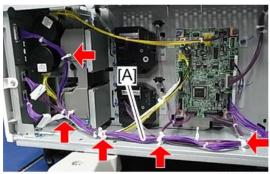

d197z1052

- 11. Attach the paper feed unit rear cover.
- 12. Attach the rear lower gap cover [A] (▼x2).

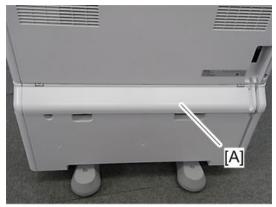

d197f2002

13. Attach the hook of the side LCT to the bracket.



d1462462

## 14. Connect the cable [A] of the side LCT to the machine (🖤×1).



d1462463

## 15. Attach the cable cover [A] (🌮×1).



d1462464

#### 16. Push the side LCT towards the machine.



d1462465

- 17. Turn the power switch ON.
- 18. Set the paper, and check that the paper size set in the paper feed tray is displayed on the control unit.
- 19. Do the registration adjustment for the large capacity tray.

SP1-001-0xx (Leading Edge Registration Tray 5(LCT))

-083	Tray5(LCT): Thin	-090	Tray5(LCT): Thin:1200	
-084	Tray5(LCT): Plain	-091	Tray5(LCT): Plain:1200	
-085	Tray5(LCT): Mid-thick	-092	Tray5(LCT): Mid-thick:1200	
-086	Tray5(LCT): Thick 1	-093	Tray5(LCT): Thick 1:1200	
-087	Tray5(LCT): Thick 2	-094	Tray5(LCT): Thick 2:1200	
-088	Tray5(LCT): Thick 3	-095	5 Tray5(LCT): Thick 3:1200	
-089	Tray5(LCT): Thick 4	-096	Tray5(LCT): Thick 4:1200	

SP1-002-007 (Side-to-Side Registration Large Capacity Tray)

#### Changing the Paper Size

Paper size is set as shown below when the machine is shipped from the factory.


NA: LT LEF

EU.AA.CHN: A4 LEF

The paper size can be changed to A4 LEF, LT LEF, or B5 LEF.


1. Open the tray cover.

2. Remove the upper screw at the front side fence, and after setting the side fence to the position of the paper (outer: A4 LEF, center: LT LEF, inner: B5 LEF), tighten the screw that was removed.

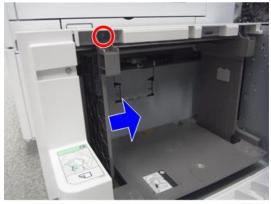

d1462466

3. Also change the rear side fence to the same size position.

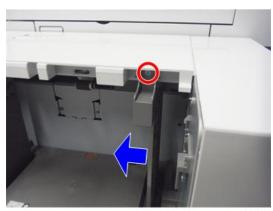

d1462467

4. Change the paper size according to the new side fence position.

SP5-181-024 (Size Adjust LCT)


0: A4 LEF, 1: LT LEF, 2: B5 LEF

# Caster Table Type M3

#### **Accessory Check**

No.	Description	Q'ty
1	Right Lower Cover*	1
2	Screw with Spring Washer (M4 × 10)	1
3	Screws (M4 × 10)	2
4	Securing Bracket	2
5	Locating pin	3

<sup>\*</sup> Used only when the main machine is installed on this option directly.

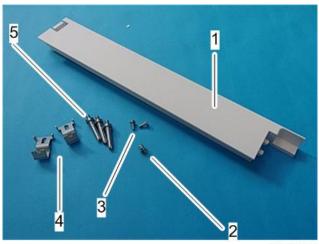

d197f0129

#### Installation Procedure


## **ACAUTION**

- The machine must be held at the correct locations, and must be lifted slowly.
- If it is lifted with force, handled carelessly or dropped, it will result in an injury.
- If installing this option, turn the power to the machine off, and unplug the power plug from the wall socket.
- If this option is installed when the power is on, it will result in an electric shock or malfunction.

- Be sure to join the machine and caster table to prevent equipment from falling over.
- If it is not joined, the machine will move or fall over, which will result in an injury.

#### For Installing Directly under the Main Machine

1. Attach the 3 locating pins.

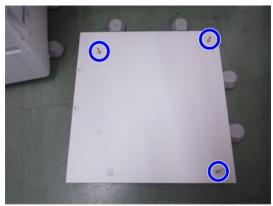

d1463030

2. Holding the grips on the machine, align with the locating pin, and place the machine on the caster table.




- When you lift the machine, hold the lifting handles.
- In particular, do not lift it by holding the scanner unit, etc., (as it may deform).
- Do not put the machine down on the caster table as a temporary resting place. This may cause the machine to deform. Always connect the machine and caster unit properly.
- 3. Attach the right lower cover between the right side of the main machine and the caster table.
- 4. Pull out the 2nd paper feed tray of the machine.

5. Using a securing bracket, fix the machine or paper feed unit to the caster table (spring washer: screw: M4×10: 1).



d197z1027

6. Attach the securing brackets [A] at 2 positions to left and right at the rear of the machine or paper feed unit (screws: 1 each).

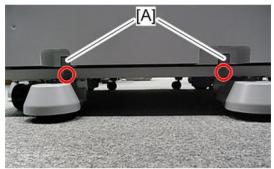

d197z1026

- 7. Attach the right lower cover provided with this option to the right lower side of the main machine.
- 8. Return the paper feed tray to the machine or paper feed unit on the caster table.


#### For Installing under PB3150

- 1. Attach the three locating pins.
- 2. Mount the PB3150 on the caster table while fitting with the locating pins
- 3. Pull out the paper feed tray of the PB3150.

# 4. Secure the caster table and PB3150 (M4×10: 🏵×1)




5. Install the securing bracket [A] at the rear of the PB3150 ( $\mathfrak{S}^{*}$ ×2)

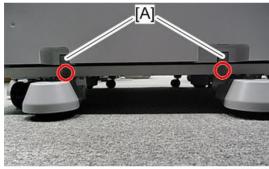

d197z1026

6. Put back the tray of the PB3150 in place.


7. By holding the grips on the main machine, mount the main machine on the PB3150 while fitting the locating pins.

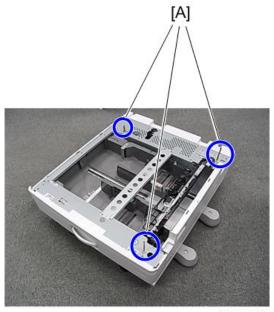

d197f0114



- Be sure to use the specified grips on the main machine. Using any other positions may damage the machine.
- Do not put the machine down on the PB3150 as a temporary resting place. This may cause the PB3150 to deform.
- 8. Pull out the 2nd paper feed tray of the main machine.
- 9. Secure the main machine and PB3150 (M4×10: 🖤×1).
- 10. Attach the securing bracket [A] to the rear of the main machine (0°×2).

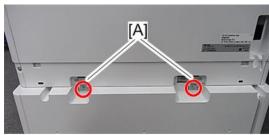

d197z1029

## 11. Attach the rear lower gap cover [A] (▼×2).




12. Return the 2nd paper feed tray to the main machine.

#### 2

# Platen Cover PN2000 (D700)

## **Accessory Check**

No.	Description	Q'ty
1	Feeler Guide	1
2	Stepped Screw	2

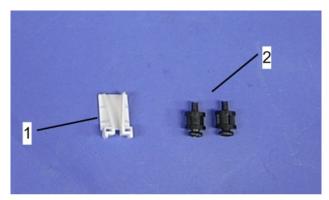


d1588041

### Installation Procedure


## **ACAUTION**

- Unplug the machine power cord before starting the following procedure.
- 1. Install the stepped screws ( × 2).

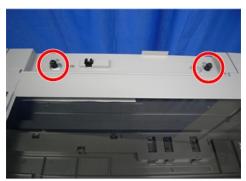


d1582019

## 2. Install the feeler guide [A].

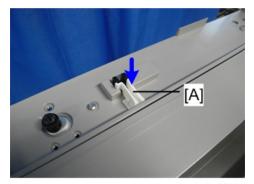

d1582020

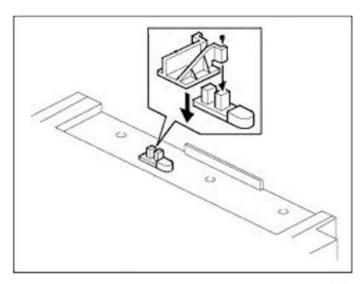


d197f2001

#### 3. Install the platen cover [A].



- 4. Place the platen sheet [A] on the exposure glass.
- 5. Line up the rear left corner of the platen sheet flush against corner [B] on the exposure glass.

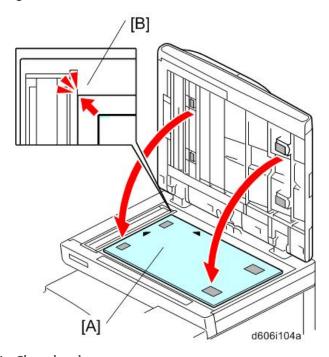


6. Close the platen cover.

- 7. Open the platen cover.
- 8. Press the surface of the platen sheet gently to fix it on the platen cover securely.
- 9. Connect the power cord and turn on the main power.
- 10. Place an original on the platen and make a copy to check the installation.

# ARDF DF3090

## **Accessory Check**

No.	Description	Q'ty
1	ARDF	1
2	Screw	2
3	Knob Screw	2
4	Stud Screw (Small)	1
5	Stud Screw (Large)	1
6	Attention Decal - Top Cover	1

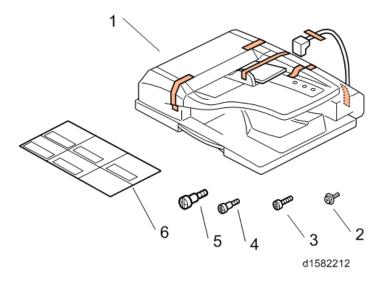


RTB 63 A new mylar is added. Attach it to the exposure glass when installing the ARDF.

#### Installation Procedure

## **ACAUTION**


- Unplug the copier power cord before starting the following procedure.
- 1. Remove all tapes and shipping retainers.

2. Insert the two stud screws ([A] is the larger stud, [B] is the smaller stud).

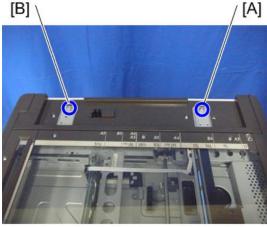

d1463130


- 3. Mount the ARDF [A] by aligning the screw keyholes [B] of the ARDF support plate over the stud screws.
- 4. Slide the ARDF toward the front of the machine.
- 5. Secure the ARDF with the two knob screws [C].

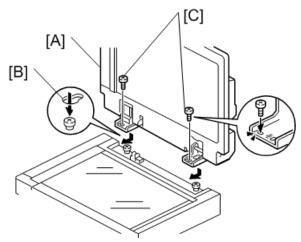


b789i103a

6. Align the rear left corner of the platen sheet [A] with the corner [B] on the exposure glass.

#### 7. Close the ARDF.

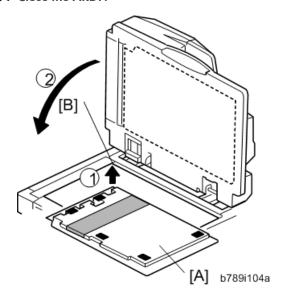


- 8. Open the ARDF and check that the platen sheet is correctly attached.
- 9. Lift the ARDF original tray.
- 10. Slide the stamp holder [A] out and install the stamp cartridge in it, if necessary.

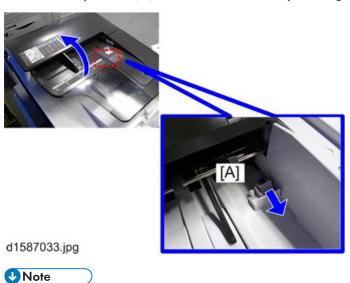


• After the stamp installation, be sure to slide the holder in correctly. If not, jam detection (J001) will occur.

11. Attach the decals [A] [B] to the top cover as shown. Choose the language that you want.

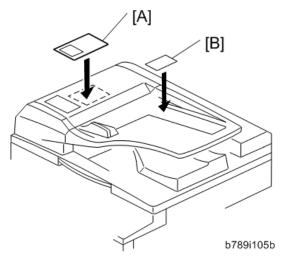

12. Remove the scanner rear cover [A] (\$\mathbb{O}^\* \times 3).

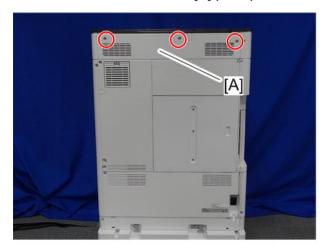

d197f0051

#### 13. Connect the harness to the SIO (CN315) [A].



d1463132

## 14. Attach the bracket [A] (@×1).



15. Fasten the grounding wire [A] (\$\mathbb{O}^\* \times 1).



16. Attach the scanner rear cover.

- 17. Plug in and turn on the main power switch of the machine, and then check the ARDF operation.
- 18. Make a full size copy. Check that the registrations (side-to-side and leading edge) and image skew are correct. If they are not, adjust the registrations and image skew.

#### When feeding thin paper

When feeding thin paper, adjust the sliding tray to the point shown below [A].

When feeding normal paper, adjust the sliding tray to the point shown below [B].

If not, it may cause problems as follows:


- Original jam
- Original curl
- Originals cannot be stacked neatly



# **SPDF DF3080**

## Accessory Check

No.	Description	Q'ty	Remarks
1	Original Caution Decal: Multiple Languages	1	
2	Original Set Decal Sheet	1	
3	Coin Screw	2	
3	Stepped Screw	2	
4	1 Pass ADF Bracket:	1	Not used for this model
5	Sub IPU Bracket	1	Not used for this model
6	Ferrite Core: K3 NF-75(N)BK0	1	
7	Ferrite Core: K3 NF-70-A(N)BK0	1	
8	Clamp: LWS-0711A	2	
9	Tapping Screw: M3×6	10	Use eight screws for this model
10	BCU Board RTB 48	1	Not used for this model
11	IPU-sub Board	1	
12	Spacer	1	
-	Serial Number Decal	1	

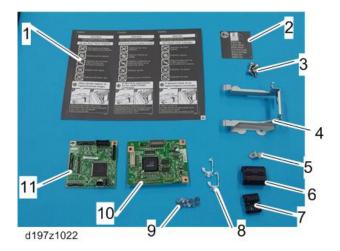



d197z1152

#### Installation Procedure

### **ACAUTION**

- When you install this option, turn off the power supply to the machine, and unplug the power plug from the wall socket.
- If this option is installed when the power is ON, it will result in an electric shock or a malfunction.

## **ACAUTION**

• Do not turn the power on until you perform "adjustment after installation". Otherwise, it may not start normally.


#### Attaching the SPDF

1. Place the unit on the machine temporarily, and remove the orange tapes and shipping retainers.

- 2. Remove the items in the package (boards, fixing screws, etc.).
- 3. Attach the two stepped screws to the machine.




• The larger-stepped screw [A] is for the right side and the smaller-stepped screw [B] is for the left side of the main machine.

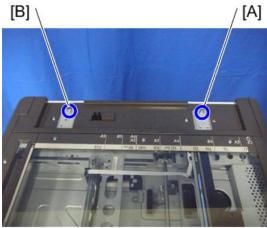

d1463130


- 4. Align the hinges of the SPDF [A] with the hole [B] for stepped screws, and attach them by sliding them in.
- 5. Fix the SPDF to the machine (coin screws  $[C] \times 2$ ).

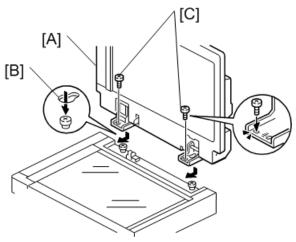

b789i103a

6. Place the platen sheet [A] on the exposure glass.


Align the platen sheet with the left-rear scale [B] of the machine.

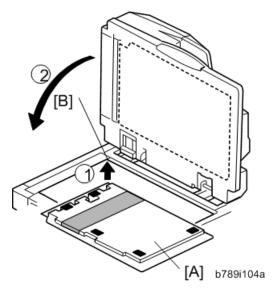

- 7. Lower the SPDF slowly to attach the platen sheet to the SPDF.
- 8. Open the DF again and make sure that the platen sheet is firmly attached to the exposure glass.
- 9. Paste the decal (CAUTION:ORIGINAL) to the point [A].
- 10. Paste the decal (SET:ORIGINAL TABLE) to the point [B] as shown in the following picture.



• This decal must be pasted without projecting over the gap in the original table.

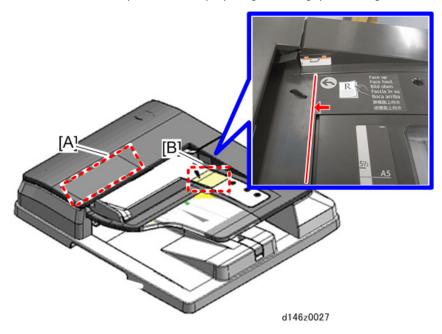

## Attaching the Sub IPU

1. Remove the scanner rear cover [A] (\$\mathbb{O}^\* \times 3).




d197f0051

2. Remove the controller cover [A] (\$\mathscr{O}^\* \times 4\$).



139

3. Remove the controller rear cover [A] (\$\mathbb{O}^\* \times 5).

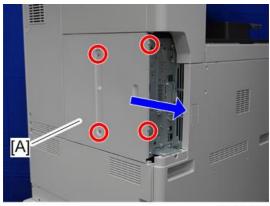


d197f0048

4. Remove the rear left cover [A] (\$\mathbb{O}^{\mathbb{N}} \times 3).




d197f0050\_1

5. Disconnect the scanner cable [A] and SIO harness [B] from the IPU board.

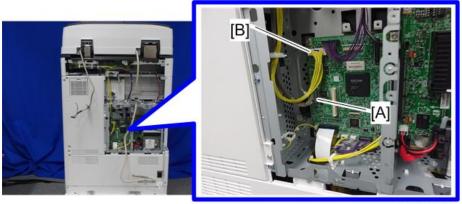

d197z1015

6. Attach the spacer [A] to the IPU board.

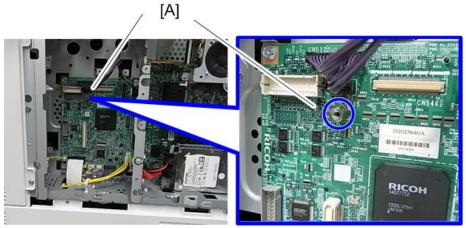


d197z1152

7. Connect CN593 [A] on the IPU-sub board [C] with CN529 [B] on the IPU board to attach the IPU-sub board (\$\mathbb{O}^2 x 3\$).




- d197z1016
- 8. Attach the DF cable bracket [A] on the scanner rear frame ( $\Im x1$ ).
- 9. Attach the ground wire [B] (@x1).

10. Attach the DF harness [C] to CN312 on the SIO.

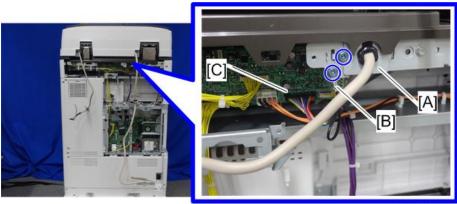


d197z1017

11. Attach the CIS cable [A] to the bracket (\$\mathbb{O}^\*x1\$).

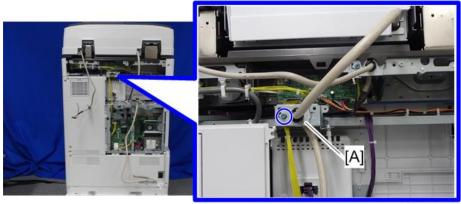


d197z1018

12. Clamp the CIS cable [A] under the bracket and the upper side of the controller box [B].

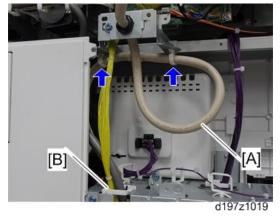


13. Attach the CIS cable clamp [A] to the bracket in the controller box (\$\mathbb{O}^{\text{x}} \text{1}).

14. Attach the scanner cable [B] to CN590 on the IPU-sub board (
\$\tilde{\mathbb{C}}\times 1), CIS cable [C] to CN592 on the IPU-sub board (
\$\tilde{\mathbb{C}}\times 1), and the SIO harness [D] to CN531 on the IPU board (
\$\tilde{\mathbb{C}}\times 1).

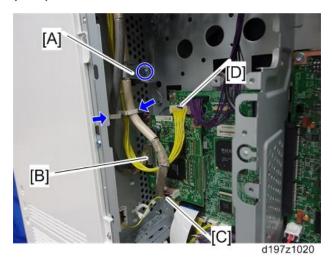


- 15. Attach the ferrite cores to the DF cable and the CIS cable.
  - Ferrite core: K3 NF-70-A (N) BK0 is for the DF cable
  - Ferrite core: K3 NF-75 (N) BK0 is for the CIS cable.
- 16. Remove the scanner cable gap cover from the scanner rear cover.
  - DF cable gap [A], CIS cable gap [B]

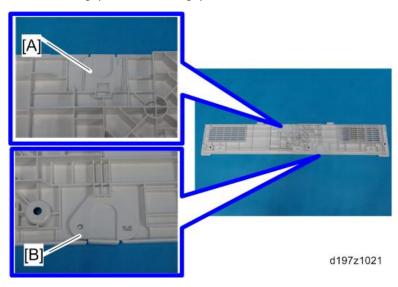

17. Reassemble the machine.

#### 18. Attach the decals: "Original" [A] and "Original table set" [B].

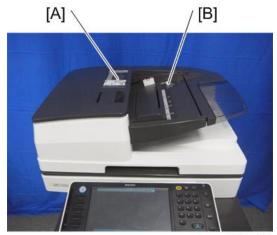

d1462499

#### **Adjust SP Settings**

- 1. Turn the power ON.
- 2. Enter the SP values marked on the paper provided, in the following SP.
  - 1. SP4-712-001: CIS GB Adj. Value: R
  - 2. SP4-713-001: CIS GB Adj. Value: G
  - 3. SP4-714-001: CIS GB Adj. Value: B
- 3. Adjust the registration for the SPDF.
  - SP6-006-010: ADF Adjustment L-Edge Regist (1-Pass): Front
  - SP6-006-011: ADF Adjustment L-Edge Regist (1-Pass): Rear
  - SP6-006-001: ADF Adjustment Side-to-Side Regist: Front
  - SP6-006-002: ADF Adjustment Side-to-Side Regist: Rear

4. If there is skew, loosen the fixing screw [A] and swivel the SPDF slightly to the left or right. Then tighten coin screw [A] and make a test copy to check that there is no skew.




d1462518

# \_\_\_\_

#### **Accessory Check**

Bridge Unit BU3070

No.	Description	Q'ty
1	Tapping screw- M3 × 8	1
2	Screw - M4	1
3	Knob Screw - M4	1
4	Right Front Bracket	1
5	Left Lower Cover	1
6	Left Front Bracket	1

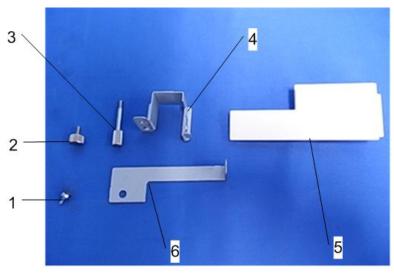

d1465001

## Installation procedure

# **ACAUTION**

- When installing this option, turn the power of the machine off, and unplug the power plug from the wall socket.
- If this option is installed when the power is on, it will result in an electric shock or a malfunction.

2



- The bridge unit cannot be used together with "Internal Shift Tray SH3070", "Side Tray Type M3", "Internal Finisher SR3180" or "Internal Finisher SR3130".
- To use together with the "1 Bin Tray BN3110", attach the "1 Bin Tray BN3110" first before installing the bridge unit.
- 1. Remove the orange tape and shipping retainers.
- 2. Remove the enclosed items (fixing screws, etc.).



d1465002

3. Remove the paper exit tray [A].



d197z0407


#### 4. Remove the connector cover [A].



- 5. Open the front cover.
- 6. Remove the left upper cover [A] (@x1).




• This removed screw is used again in step 13.

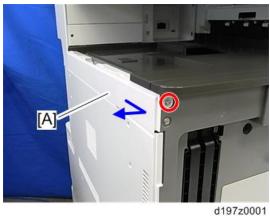

- 0197200
- 7. Open the right cover.
- 8. Remove the main power switch cover [A] (\$\mathbb{O}^\* \times 1).




• The main power switch cover has three tabs: two on the left side (paper exit) and one on the right side (right cover).

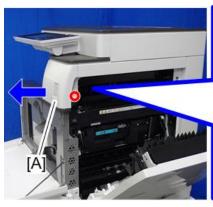



d197f0052

9. Attach the bracket [A] (ቖ×1).

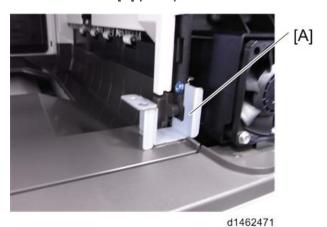


- 10. Attach the main power switch cover, and close the right cover.
- 11. Open the bridge unit right cover, and then attach the bridge unit to the machine (\$\mathbb{O}^\* \times 2\$, knob screw [A]).



12. Close the bridge unit right cover.

13. Attach the upper left cover provided with the bridge unit.

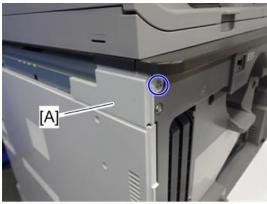

d197f0094

14. Referring to the finisher's installation procedure, attach the L type connecting bracket [A], but do not tighten the screws yet.




d197f0095

- 15. After the finisher is installed, turn the main power switch ON.
- 16. Check that the finisher can be selected at the operation panel.

# 1 Bin Tray BN3110

#### **Accessory Check**

No.	Description	Q'ty
1	Tray support bar	1
2	Harness cover	1
3	Tray	1
4	Screw: M3 x 8	2
5	Gear	1

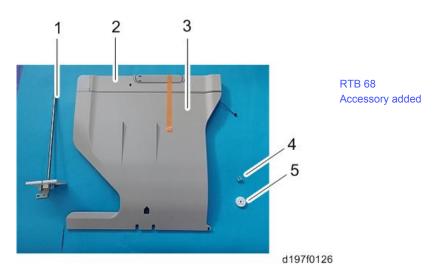


#### Installation Procedure

## **ACAUTION**

- When installing this option, turn the machine power off, and unplug the power plug from the wall socket.
- If this option is installed with the power on, it will result in an electric shock or a malfunction.



 If you install this option together with "Bridge Unit BU3070", "Internal Shift Tray SH3070" or "Side Tray Type M3", install this option first. 1. Remove the orange tapes and shipping retainers.

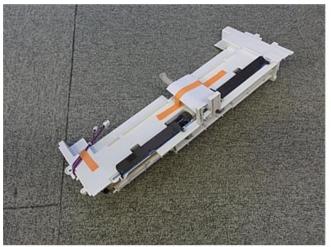

d197f0127

- 2. Remove the enclosed items (fixing screws, etc.).
- 3. Open the right cover.
- 4. Remove the main power switch cover [A] (\$\mathbb{O}^\* \times 1\$).



• The main power switch cover has three tabs: two on the left side (paper exit) and one on the right side (right cover).




d197f0052

## 5. Remove the Paper exit tray [A].



d197z0407


- 6. Open the front cover.
- 7. Remove the left upper cover [A] (🎞×1).

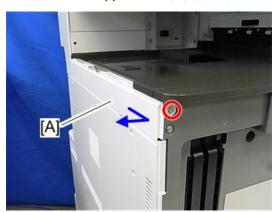

d197z0001

2


# 8. Remove the controller cover [A] (🏵×4).

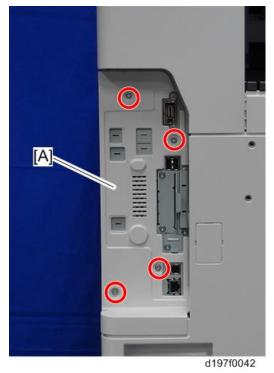

9. Remove the left rear cover [A] (©\*×2).



10. Remove the inverter tray [A] and tray support rod cover [B] (0°×1).

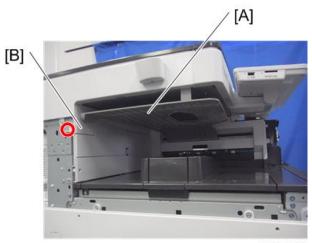


d1462478

11. Remove the paper output cover [A] (\$\mathbb{O}^\* \times 1\$).



d197f0104

12. Attach the gear [A] provided with this option.

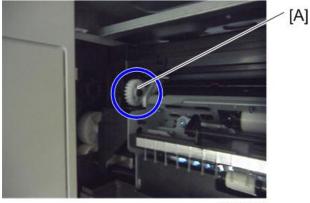


d1462476


13. Attach the 1 bin tray unit [A] (@x1, &x2).

#### **ACAUTION**

• Take care that the harness is not trapped between the 1 bin tray unit and the machine frame.

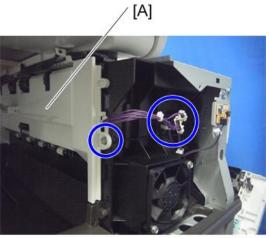

14. Open the harness cover [A], then remove the harness [B].

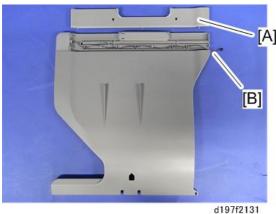

**U** Note

• Slowly and carefully lift up the harness cover to remove. Removing the harness cover while moving it round can break the harness because the inner hook catches the harness.

15. Attach the harness removed in the previous step.




d1462479

16. Attach the tray support bar [A] (\$\mathbb{O}^\* \times 1).




• Pass the harness attached in the previous step through the position in the blue circle.

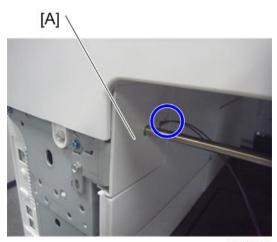

d1462480

17. Hook the 1 bin tray [A] onto the 1 bin tray unit, aligning the positions in the blue circles.

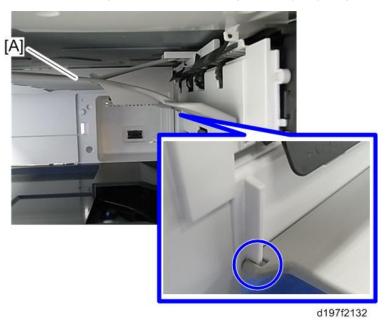

18. Connect the harness to the 1 bin tray, and bring it around (F×1).



19. Insert the tray support bar firmly in the 1 bin tray, and attach the harness cover [A].




- 20. Attach the left rear cover, left upper cover and main power switch cover, and then close the right cover.
- 21. Turn the main power switch ON.
- 22. Check that output to this tray can be selected on the operation panel, and check operation.

# Internal Shift Tray SH3070

# **Accessory Check**

No.	Description	Q'ty
1	Tray Cover	1
2	Sheet	2
3	Feeler	1

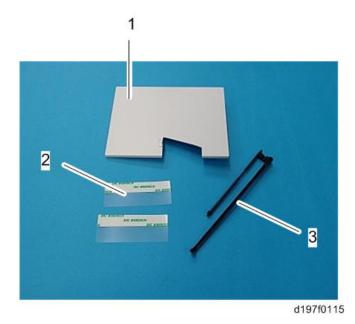

#### Installation Procedure

#### **ACAUTION**


- When installing this option, turn the power to the machine off, and unplug the power plug from the wall socket.
- If this option is installed when the power is on, it will result in an electric shock or a malfunction.




 Cannot be used together with "Bridge Unit BU3070", "Side Tray Type M3", "Internal Finisher SR3130", or "Internal Finisher SR3180".

2

- For using this option together with "1 Bin Tray BN3110", attach the bottom plate of this option at the beginning, then install the "1 Bin Tray BN3110", followed by installing this option.
- 1. Remove the filament tape and packing material.
- 2. Remove the enclosed items.
- 3. Attach the tray cover [B] to the shift tray [A].

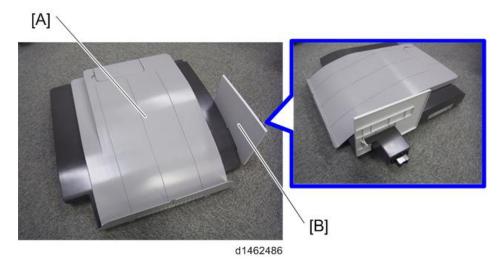

4. Remove the paper exit tray [A].

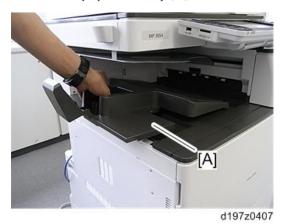


#### 5. Remove the connector cover [A].



d1462470

#### 6. Attach the shift tray [A].

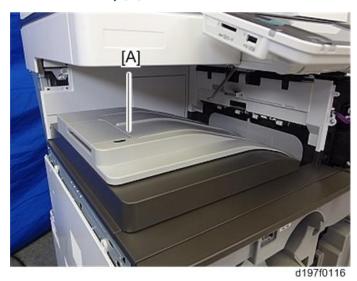



7. Open the right cover.

8. Remove the main power switch cover [A] ( $\Im$ x1).



• The main power switch cover has three tabs: two on the left side (paper exit) and one on the right side (right cover).

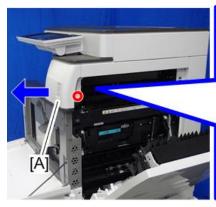

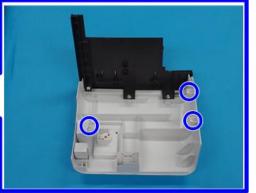


d197f0052

# 9. Remove the paper exit cover [A] ( $\mathfrak{P}\times 1$ ).




d197f0117

## 10. Remove the feeler [A].

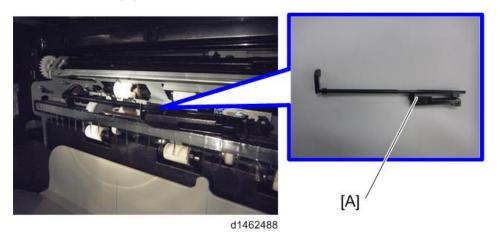


163

#### 11. Attach the shift tray feeler [A].

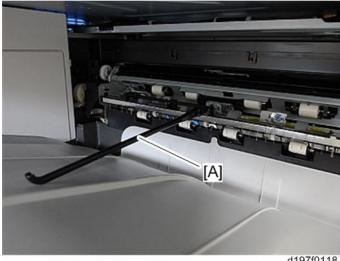

d197f0118

#### 12. Attach the sheets [A] at the edge of the paper exit cover.

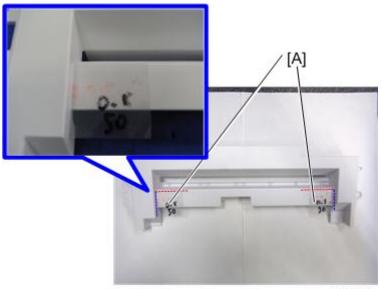


d1462490

- 13. Attach the paper exit cover and main power switch cover, and then close the right cover.
- 14. Turn the main power switch ON.
- 15. Check that paper output to the shift tray can be selected at the operation panel, and check the operation.

# Side Tray Type M3

# **Accessory Check**

No.	Description	Q'ty
1	Left Extension Tray	1
2	Upper Extension Tray	1
3	Fixing Plate	1
4	Knob Screw	1
5	Tapping screw - M4 x 14	1
6	Tapping screw - M3 x 8	1
7	Bracket	1

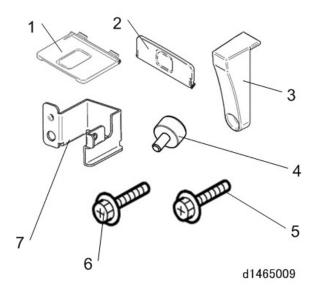

# Installation procedure

## **ACAUTION**

• When installing this option, turn the power to the machine off, and unplug the power plug from the wall socket.

• If this option is installed when the power is on, it will result in an electric shock or a malfunction.



- The side tray cannot be used together with "Bridge Unit BU3070", "Internal Shift Tray SH3070", "Internal Finisher SR3180" or "Internal Finisher SR3130".
- To use together with the "1 Bin Tray BN3110", attach the "1 Bin Tray BN3110" first before installing the side tray.
- 1. Remove the orange tape and shipping retainers.
- 2. Remove the enclosed items (fixing screws, etc.).
- 3. Remove the paper exit tray [A].



d197z0407

- 4. Open the right cover.
- 5. Remove the main power switch cover [A] (\$\mathbb{O}^\* \times 1\$).



• The main power switch cover has three tabs: two on the left side (paper exit) and one on the right side (right cover).




#### 6. Remove the connector cover [A].




d1462470

## 7. Attach the bracket [A] (@×1).

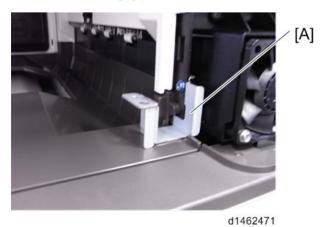

- 8. Attach the main power switch cover, and then close the right cover.
- 9. Attach the side tray unit [A] to the machine, and fix with a knob screw ( $\mathfrak{S}^* \times 1$ ).

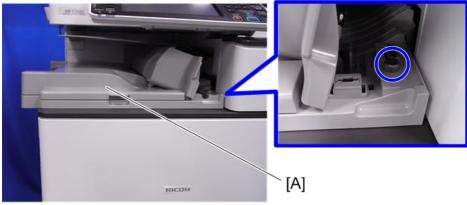

d1462492

# 10. Attach the fixing plate [A] (@x1).



11. Attach the upper extension tray [A] and the left extension tray [B].



- 12. Turn the main power switch ON.
- 13. Check that paper output of the side tray can be selected at the operation panel, and check the operation.


#### 2

# Booklet Finisher SR3170 / Finisher SR3160

# Accessory Check

#### Booklet Finisher SR3170 (D688) / Finisher SR3160 (D689)

No.	Description	Q'ty	Note
1	Guide Plate	1	
2	Shift Tray	1	
3	Ground Plate	1	
4	Screws: M4x12	4	
4	Rivets	2	
5	Cushion	1	
6	Booklet Tray	1	D688 only
7	Joint Bracket	1	
8	Tapping Screw: M3x8	D688: 2 D689: 1	
9	Tapping Screw: M3x6	4	
10	Tray Holder	1	
11	Hopper Cover	1	D688 only
12	Proof Support Tray	1	
-	EMC Address	1	

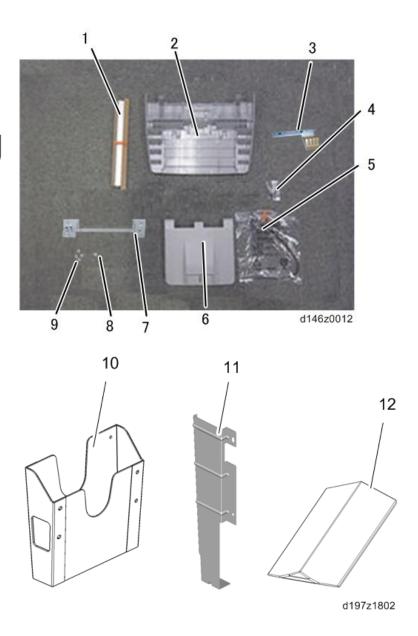

# Installation Procedure

# **ACAUTION**

- When you install this option, turn off the power to the machine, and unplug the power plug from the wall socket.
- If this option is installed when the power is on, it will result in an electric shock or a malfunction.



- Before installing this option, attach the "Bridge Unit BU3070" first.
- Attach the "LCIT PB3170/ PB3230" or "Paper Feed Unit PB3210/ PB3220" first before installing this option.
- 1. Remove the external orange tape and shipping retainers.











d1462541

2. Open the front cover [A], and remove the orange tapes, shipping retainers and fixing bracket [B] (3°x2)

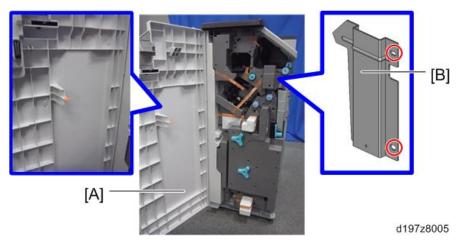

**U** Note

• Additional Step only for D688: Pull out the saddle stitch unit [A] to remove the orange tapes, shipping retainer and fixing bracket [B] attached on the bottom frame (\$\mathbb{O}^{\text{x}} \text{1}\$).

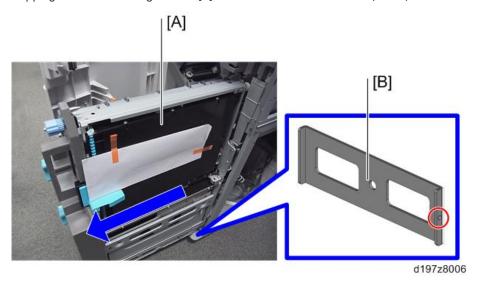

3. For D688 only, install the hopper cover.



- If optional punch unit PU3050 is to be installed, attach the hopper packed with the punch unit. See the Installation Procedure for PU3050 (page 205).
- 4. Remove the items in the package (fixing screws, etc.).

- 5. Clean the right side of the upper cover with an alcohol cloth, and then attach the cushion to the finisher.
  - Make sure that the cushion is aligned with the rear-lower edge [A] of the upper cover.




d146z9001

6. Attach the shift tray [A] ( \*1).




d1462544

#### 7. Only for D688, attach the booklet tray [A].

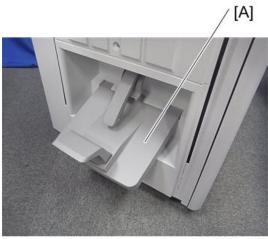

d146z0024

# 8. Attach the relay guide plate [A] (\$\mathbb{O}^\* \times 2).

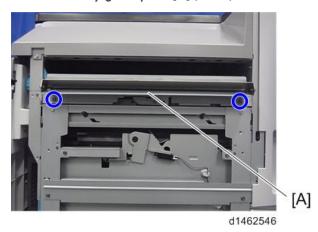

#### 9. Attach the ground plate [A] (\$\mathbb{O}^\* \times 2).




10. Attach the joint bracket [A] to the machine (\$\mathbb{O}^\* \times 4\$).


At this time, tighten the bracket [A] and the bridge unit bracket [B] together.



- As the default setting, the screw head is placed at the center of the scale of the rear side.
- The joint bracket [A] must be placed under the bridge unit bracket [B].

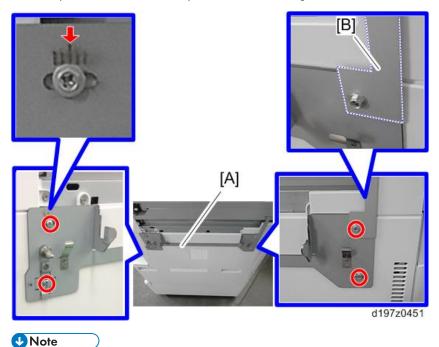

• When adjusting registration, change the screw hole of the adjusting bracket [A] from the upper position [B] to the rear (left) position [C] so that the adjusting bracket can be adjusted horizontally.

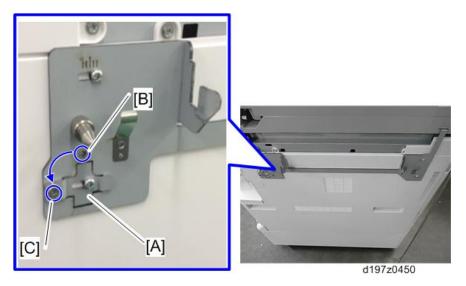

- 11. Open the front cover.
- 12. Connect the finisher to the machine with the lock lever [A] ( $\mathfrak{V} \times 1$ ).




d1462549

#### 13. Connect the interface cable to the machine.



d1462550

#### 14. Set the stapler [A].

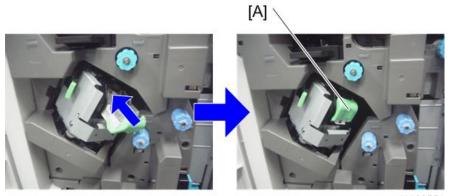

d1462551

#### 15. Close the front cover.

#### 16. Attach the tray holder (\$\mathfrak{G}^{\pi}x2).



d1462552


- 17. Turn the main power switch on.
- 18. Check that the finisher can be selected on the operation panel, and check the finisher's operation.

## Adjustment after Installing the Finisher

After installing a finisher, make sure that the Side-to-Side registration of the finisher matches that of the main machine.

#### How to Check and Adjust the Side-to-Side Registration

Check the side-to-side registration by exiting to the proof tray. Print out an A3 sheet to the proof tray. Using the markings on the front-most exit roller, check to see where the paper edge is located when the paper is exited. For purposes of accuracy, print out about 5 sets. If side-to-side registration shift occurs, see the Troubleshooting section and make adjustments (page 1240).

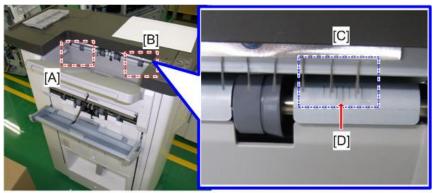

d135a3121

[A]: Scale marks for DLT

[B]: Scale marks for A3

[C]: 7 scale marks at 2mm intervals

[D]: Center mark



- Each marking represents 2mm.
  - If the paper edge is lined up with the center marking, this means the paper is aligned correctly.
  - If the paper edge is lined up with any marking to the right of center, this means the paper is shifted toward the front.
  - If the paper edge is lined up with any marking to the left of center, this means the paper is shifted toward the rear.

## **Auxiliary Tray**

Make sure that the customer understands the following points about these auxiliary trays:

- The trailing edges of excessively curled paper can activate the tray full sensors before the tray is actually full.
- Once the "Exit Tray Full" message displays, the job cannot continue until some sheets are removed
  from the tray which is only partially full. The trays are designed to prevent this problem.

#### **Proof Support Tray**

Install the proof support tray [A] on the proof tray when the trailing edges of paper are excessively curled.




d1351199

#### 2

# Punch Unit PU3060

# Accessory Check

No.	Description	Q'ty
1	Hopper	1
2	Punch Unit	1
3	Registration Guide Plate	1
4	Registration Mobile Unit	1
5	Paper Chip Guide	1
6	Punch Unit Stay	1
7	Punch Stepping Motor Unit	1
8	Clip Ring	1
9	Tapping Screw- M3×6	14
10	Hopper Bracket	1

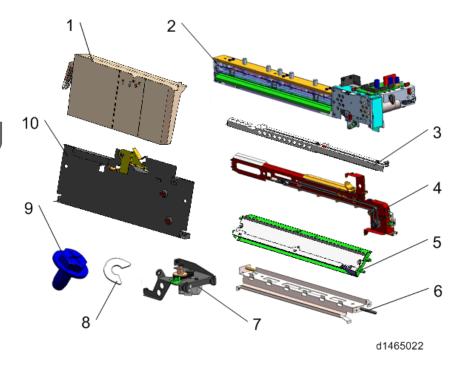


### Installation Procedure

## **ACAUTION**

- When installing this option, turn the power source of the machine off, and unplug the power plug from the wall socket.
- If this option is installed when the power is on, it will result in an electric shock or a malfunction.



- This option is only for Booklet Finisher SR3170 / Finisher SR3160.
- 1. Remove the rear upper cover [A] (\$\mathbb{O}^{\text{x}} \times 2).

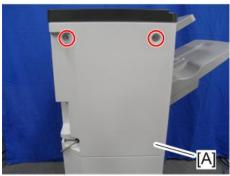

d7060011

2. Remove the rear lower cover [A] (@×2).



d7060012


3. Remove the inner cover [A] (\$\infty\$x3, \$\infty\$x1).




• There is a connector on the back of the inner cover.



## 4. Remove the punch guide plate [A] (\$\mathbb{O}^{\mathbb{N}} \times 1).

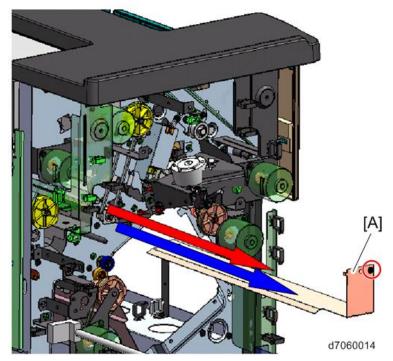

# 5. Attach the punch unit stay [A] (\$\mathbb{O}^{\times} \times 4).

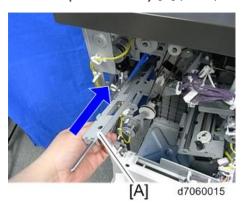

 ${\sf Rear-----Front}$ 




d7060016

6. Attach the paper chip guide [A] (18×1).




• First insert the front tab of the paper chip guide into the frame [B] of the finisher, and then insert the rear tab into the frame [C].

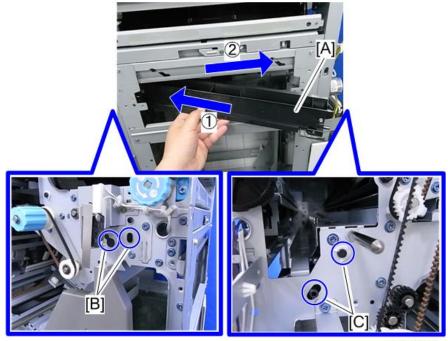

d7060017


7. Attach the hopper bracket [A], inserting from the outside frame of the finisher (@x2, 2 hooks).

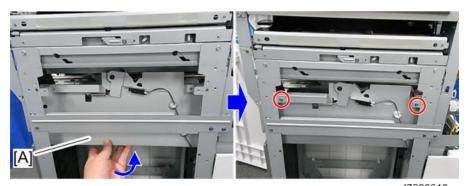

d7060018



• Hook the hooks of the hopper bracket onto the back side of the frame.

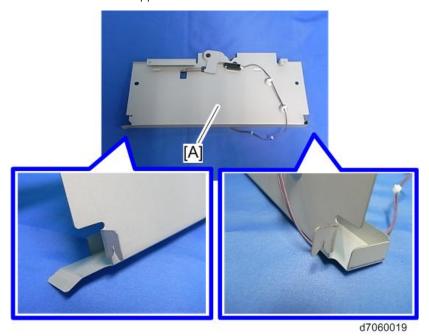




• Hook the upper frame of the hopper bracket onto the outside frame of the finisher.




8. Connect the harness of the hopper sensor (\$\sim\$x1).

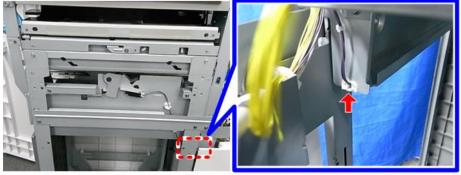

d7060022

## 9. Attach the registration guide plate [A] (\$\mathbb{O}^\* \times 2).

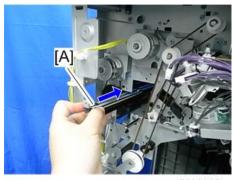


d7060023




d7060024

## 10. Attach the registration mobile unit [A] (\$\mathbb{O}^\* \times 2).

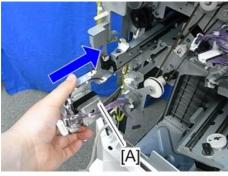

d7060025

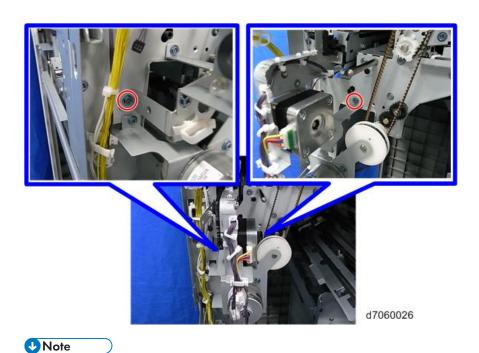

• Insert the front pins of the registration mobile unit into the holes of the frame.




d7060027

11. Attach the punch unit [A] (\$\mathbb{O}^\* \times 2).




• After inserting the pins [B] of the punch unit stay [A] into the front and rear holes of the punch unit, fix the punch unit with two screws.

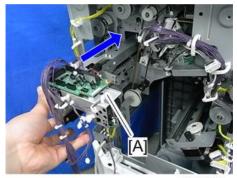

d7060028

• Rear

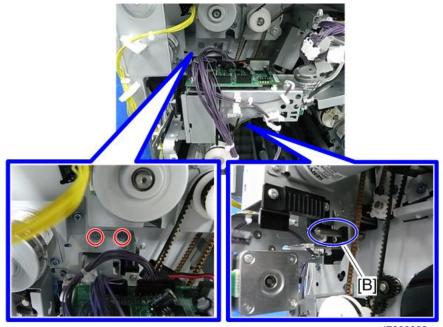


d7060029

• Front




d7060030

# 

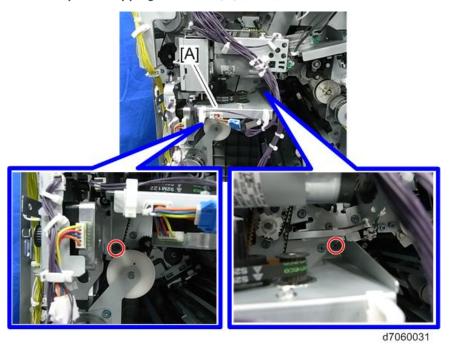


UNote

• Engage the gear [B] of the punch stepping motor unit with the rack [C] of the punch unit.

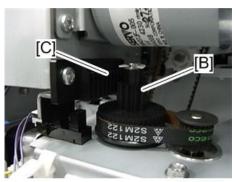


d7060032

13. Connect the harness of the hopper sensor to the connector of the finisher.

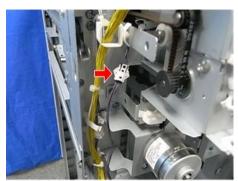


d7060033

14. Connect the harness of the punch unit to the connector of the registration drive unit.

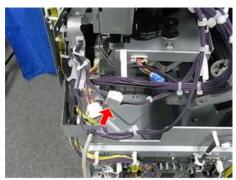


d7060034

15. Connect the harness of the punch unit to the connector of the main board, and then fix it (\*\*x2, \*\*x2).

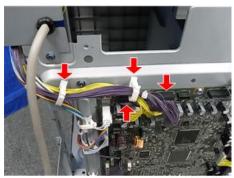

d7060035

16. Connect the harness [B] of the punch stepping motor unit and the harness [C] of the registration mobile unit to the connector of the punch unit board [A].

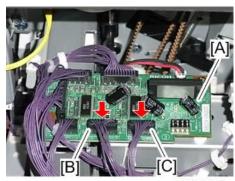

d7060036

17. Clamp all the harnesses of the punch unit PU3060 (\$\sime\$ \times 8).



d7060037

## 18. Attach the hopper [A].



d7060038

19. Attach the rear upper cover, the rear lower cover, the inner cover, and the punch guide plate.


#### 2

# Booklet Finisher SR3150 / Finisher SR3140

## **Accessory Check**

#### Booklet Finisher SR3150 / Finisher SR3140

No.	Description	Q'ty	Remarks
1	Booklet Tray	1	SR3150 only
2	Relay Guide Plate	1	Not used
3	Ground Plate Bracket	1	
4	Screws: M4×12	4	Not used
	Tapping screws: M3×6	2	
	Tapping screw : M4×8	1	
5	Shift Tray	1	
6	Connecting Bracket	1	
7	Stabilizer	1	SR3140 only
8	Cushion	1	Not used
-	EMC Address	1	

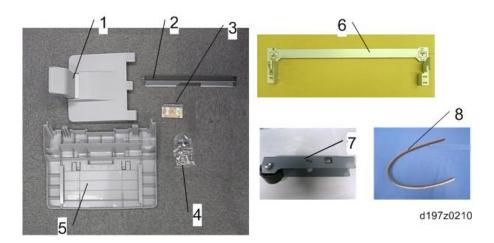

#### Installation Procedure

#### Mportant (

- Only for SR3140, two stabilizers are included as accessories.
- They must be attached to the finisher just after it is taken out of the shipping box.

### **CAUTION**

- When you install this option, turn off the power to the machine, and unplug the power plug from the wall socket.
- If this option is installed when the power is on, it will result in an electric shock or a malfunction.



- Before installing this option, attach the "Bridge Unit BU3050" first.
- Attach the "LCIT PB3170/ PB3230" or "Paper Feed Unit PB3210/ PB3220" first before installing this option.
- 1. For SR3140 only, install the stabilizer [A] (\$\mathbb{O}^\* \text{1}\$).




d1465019

2. Remove the external orange tape and shipping retainers.




- d197f0121
- 3. Open the front cover [A], and remove the filament tape and packing materials.
- 4. For SR3150 only, remove the bracket [B] (@\*x1).

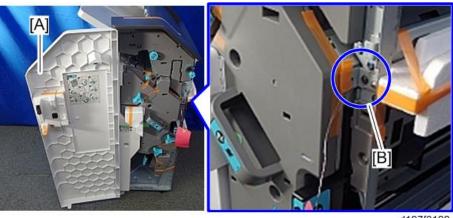


d197f0122

5. Pull out the booklet stitching unit [A] or stapling unit, and remove the filament tape and packing materials.

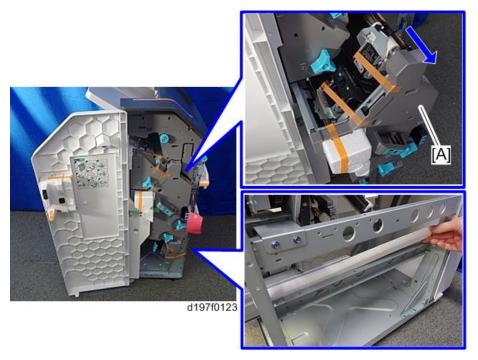

6. Wipe the surface of the top cover with alcohol, and then attach the cushion [A] (supplied with the finisher adapter) to the top cover.

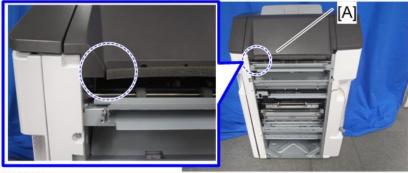

d1822108a

7. Attach the shift tray [A] (@x1; M4 x 8).



d1462529

8. For SR3150 only, attach the booklet tray [A].



9. Attach the relay guide plate [A] supplied with the finisher adapter to the finisher (5 x 2 (M3 x 6)).



• There are two screw holes at each edge of the frame. Use the screw holes which are the front side on each edge when attaching the relay guide plate [A].




d1462531

10. Attach the ground plate bracket [A] (@x2; M3 x 6).

#### SR3150



#### SR3140

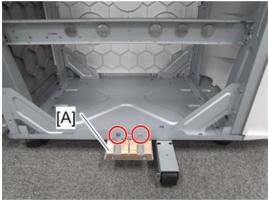


d182a0005

11. Attach the connecting bracket [A] that comes with the finisher adapter to the finisher (5° x4).




- Secure the connecting bracket [A] together with the bridge unit bracket [B]. Also note that the connecting bracket [A] must be placed under the bridge unit bracket [B].
- Make sure that the screw head is placed at the center of the scale as shown by the blue arrow below.

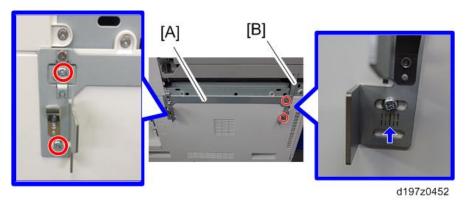


**U** Note

• When adjusting registration, reattach the adjusting bracket [A], so that the inscribed line turns upside down. The screw is to be secured with the elongated screw slot.

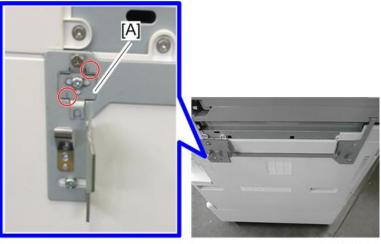

d197z0453

12. Connect the finisher to the machine with the lock lever [A] ( $\Im x1$ ).

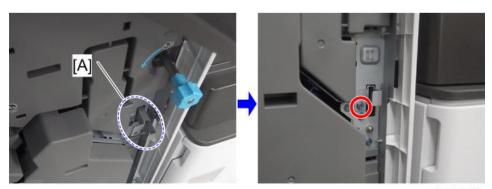

d1822037





d197f0125


- 14. Turn the main power switch on.
- 15. Check that the finisher can be selected on the operation panel, and check the finisher's operation.

### Adjustment after Installing Finisher

After installing a finisher, make sure that the Side-to-Side registration of the finisher matches with that of the main machine.

### How to Check and Adjust the Side-to-Side Registration

Check the side-to-side registration by exiting to the proof tray. Print out an A3 sheet to the proof tray. Using the markings on the front-most exit roller, check to see where the paper edge is located when the paper is exited. For purposes of accuracy, print out about 5 sets. If side-to-side registration shift occurs, see the Troubleshooting section and make adjustments (page 1240).

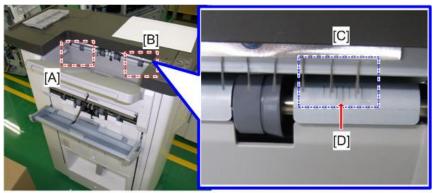

d135a3121

[A]: Scale marks for DLT

[B]: Scale marks for A3

[C]: 7 scale marks in 2mm intervals

[D]: Center mark



- Each marking represents 2mm.
  - If the paper edge is lined up with the center marking, this means the paper is aligned correctly.
  - If the paper edge is lined up with any marking to the right of center, this means the paper is shifted toward the front.
  - If the paper edge is lined up with any marking to the left of center, this means the paper is shifted toward the rear.

#### 2

# Punch Unit PU3050

# Component Check

No.	Description	Q'ty
1	Punch unit	1
2	Registration Sensor unit	1
3	Registration Guide Plate	1
4	Hopper Guide Plate	1
5	Punch Unit Stay	1
6	Hopper	1
7	Punch Drive Motor	1
8	Harness: punch: main	1
9	Tapping screws: M3x6	15




#### Installation Procedure

## **ACAUTION**

- When installing this option, turn the power source of the machine off, and unplug the power plug from the wall socket.
- If this option is installed when the power is on, it will result in an electric shock or a malfunction.



- This option is only for Booklet Finisher SR3150 / Finisher SR3140.
- 1. Unpack the box, and remove the filament tape and packing material.
- 2. Pull out the finisher interface cable, and move it away from the machine.
- 3. Remove the finisher rear cover [A] (\$\mathbb{O}^{\pi} x2)\$.

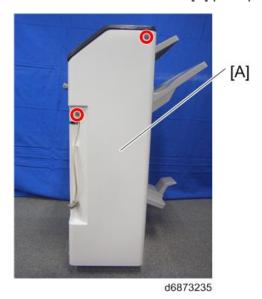

### 4. Open the finisher front cover [A].




d6873230a

5. Remove the three knobs [A] (@x1).



• Remove the knobs with the lock mechanism using a knob screwdriver or similar tool while releasing the lock.

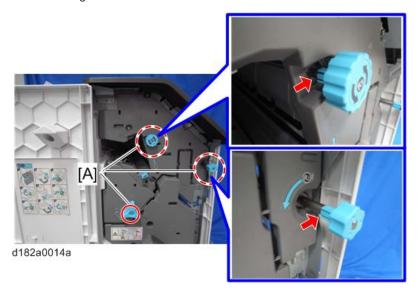

## 6. Remove three screws of the finisher inner cover [A] ( $\Im x3$ ).




d182a0042


## 7. Pull out the booklet stitching unit [A] a little.




8. Remove the inner cover [A] ( x1).

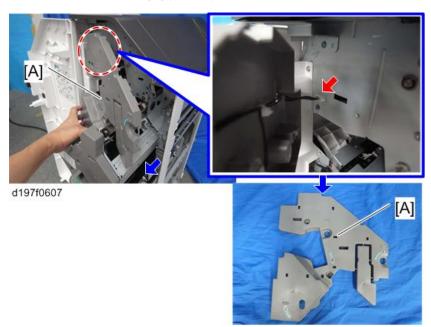


9. Open the upper cover [A] and remove the arm of the guide plate [B] from the finisher upper cover (\$\tilde{\mathbb{R}} x 1\$).

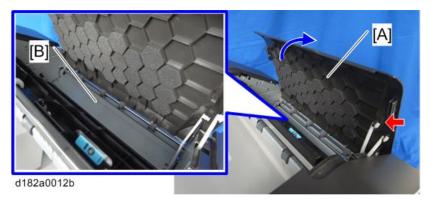


## 10. Remove the guide plate [A] (\$\mathbb{O}^{\pi} x4).

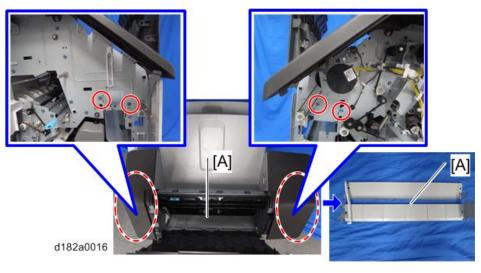


- **U** Note
  - The removed guide plate is not used. Please check with the customer when you discard it.
- 11. Insert the hopper guide plate [A] from the front.

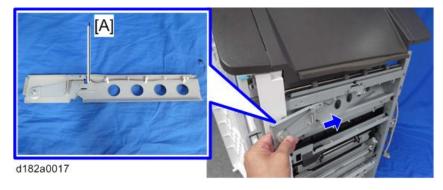

## 12. Secure the hopper guide plate [A] ( $\Im x4$ , $\Re x1$ ).

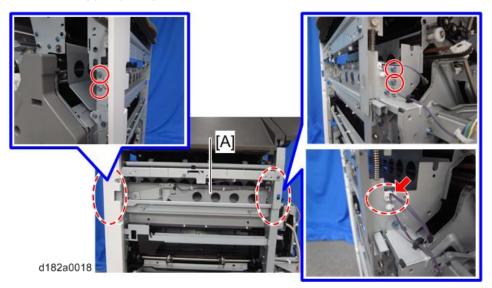


13. Insert the punch unit stay [A] from the front.

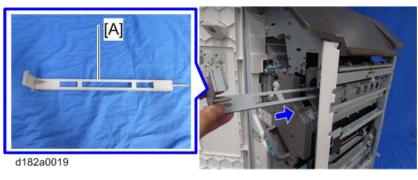


**U**Note

• Set the shaft [B] of the punch unit stay in the U-shaped gutter [A].

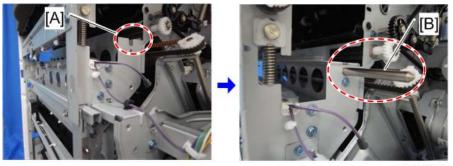


d182a0021


# 14. Secure the punch unit stay [A] (©x3).

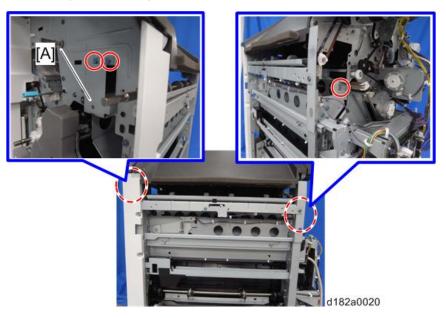


15. Insert the registration guide plate [A] from the rear.

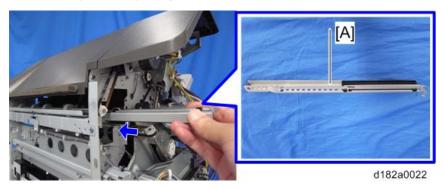


## 16. Secure the registration guide plate [A] (\$\mathbb{O}^{\pi} x2).

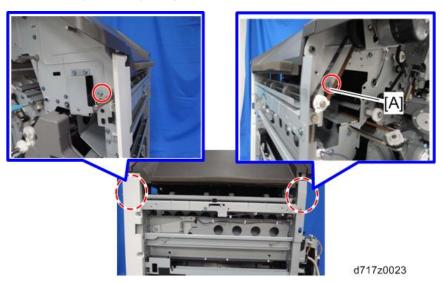


17. Insert the registration sensor unit [A] from the rear.

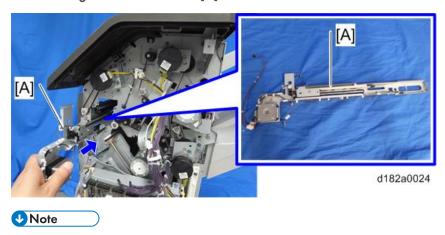

• Insert the shafts [C] of the registration sensor unit [B] into the bearings [A].

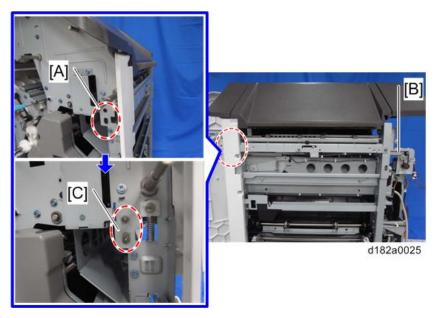


18. Secure the registration sensor unit [A] (\$\mathbb{O}^{\mathcal{C}} x2).

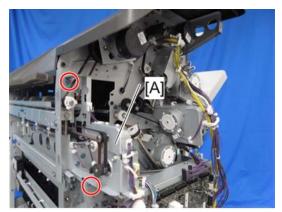


d182a0026

19. Connect the hopper guide plate harness [A] to the registration sensor unit relay connector [B] (\$\infty\$x1).

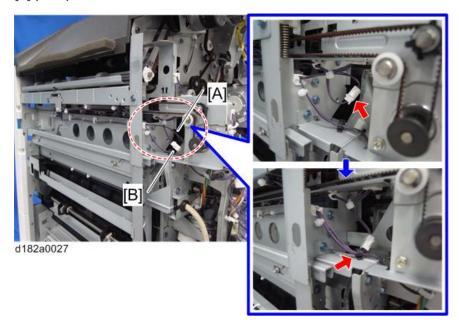


20. Insert the punch unit [A] from the rear.

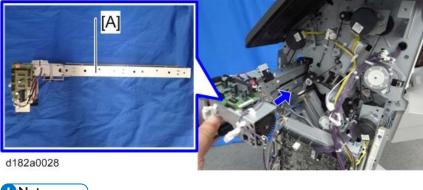


**U** Note

• The bracket [A] must be in the right position as shown when inserting.

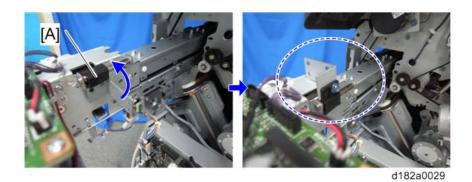

21. Secure the punch unit [A] (\$\mathscr{O}^{\mathscr{O}}\$ x2).

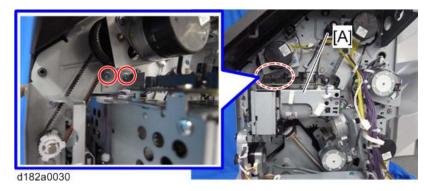


22. Insert the punch drive motor from the rear of the finisher.




**U** Note


• Put the shaft of the stay [A] through the hole of the motor bracket [B].

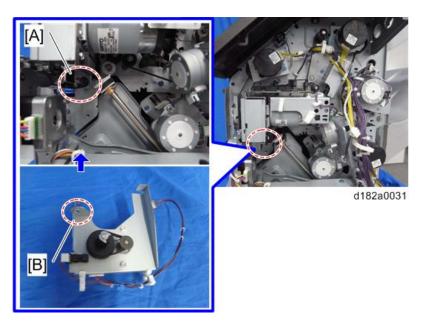

• Make sure that the rack of the punch unit [A] and the pinion of the bracket [B] are correctly engaged with each other.

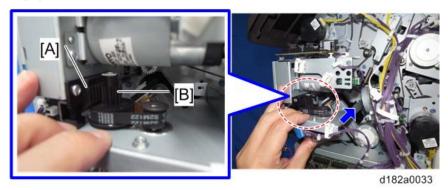


23. Secure the punch drive motor [A] ( x2).

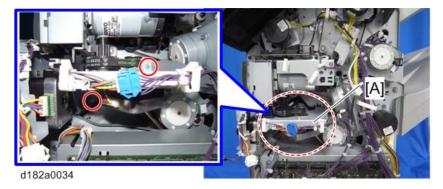


217


24. Connect the harness [B], provided as an accessory, to the main board of the punch unit [A] (\*x3).

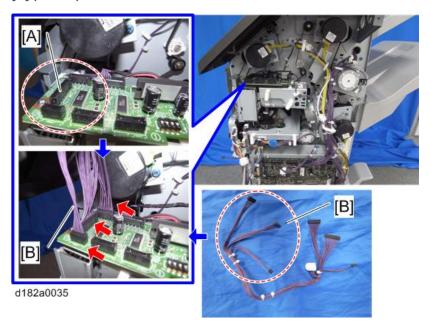


25. Connect the harness [B] provided as an accessory, to the main board [A] of the finisher (Fx3).

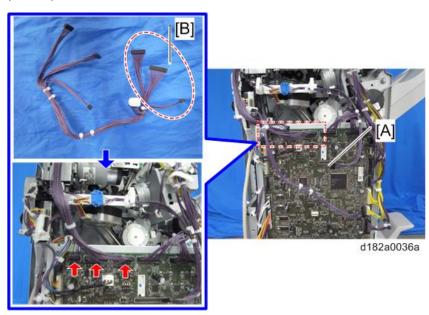

26. Connect the harness [B], provided as an accessory, to the harness of the registration sensor unit [A] ( x1).

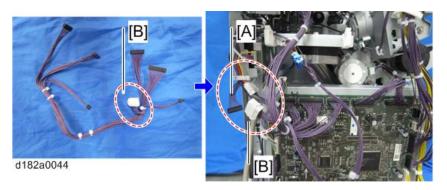


27. Remove the harness [A] from the clamp [B], and connect it to the main board of the punch unit [C] (Fx1).

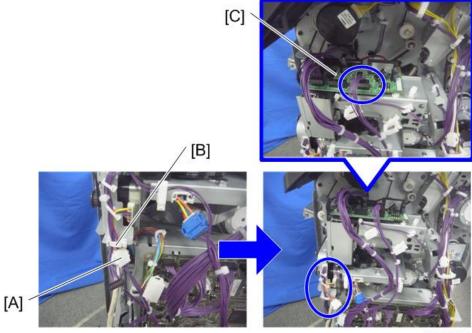


d1462596


### 28. Connect the harness of the punch drive motor [A] to the main board [B] of the punch unit.

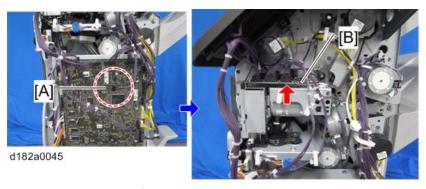


29. Clamp the harnesses (\$\sim x4).

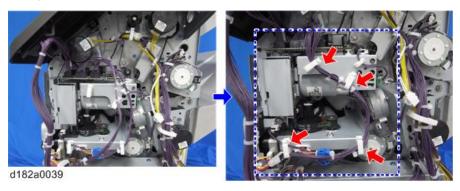

30. Insert the hopper [A].

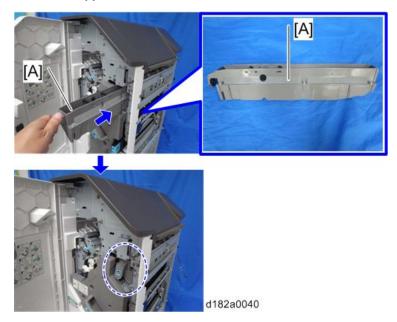

31. Cut off the part [A] of the finisher inner cover, then attach the inner cover [B] ( x1).

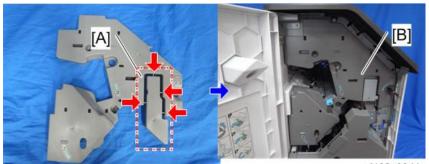

d182a0041

- 32. Attach the inner cover (© x3).
- 33. Attach three knobs(@x1).
- 34. Attach the finisher rear cover ( x2).
- 35. Close the front cover.
- 36. Close the top cover.
- 37. Attach the finisher to the machine, and connect the interface cable.
- 38. Connect the power cord of the machine, and turn the main power on.
- 39. Check that the punch can be selected at the operation panel, and check the operation.

# Internal Finisher SR3180

### **Accessory Check**

Q'ty No. Description Bottom Plate 1 1 2 Left Lower Cover 1 3 Paper Output Tray 1 4 2 Tapping Screw: M3X8 5 Tapping Screw: M3X8 2 Tapping Screw: M3X8 6 2 7 Screw: M3X6 3 8 1 Tapping Screw: M3X6 9 1 Tapping Screw: M4X8 10 Slide Rail 1 11 Nylon Clamp 1

2







d766z0001

### Installation Procedure

### **ACAUTION**

- When you install this option, turn off the power to the machine, and unplug the power plug from the wall socket.
- If this option is installed with the power on, it will result in an electric shock or a malfunction.




- Cannot be used together with "Bridge Unit BU3070", "Internal Shift Tray SH3070", "Side Tray Type M3" or "Internal Finisher SR3130".
- For using this option together with "1 Bin Tray BN3110", attach the bottom plate of this option at the beginning, then install the "1 Bin Tray BN3110", followed by installing this option.

1. Remove the orange tape and shipping retainers.




d766z0002

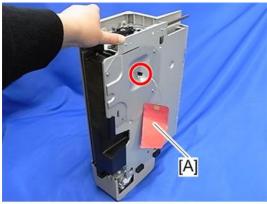

d7662074

3. Remove the shaft [B] from the slide rail [A] ( x 1).

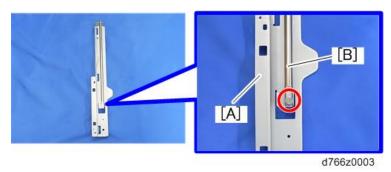


4. Remove the paper output cover [A] ( x 2).



d766z0004

5. Place the slide rail [A] under the internal finisher [B].

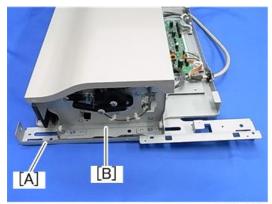


d766z0005

6. Insert the shaft [A] into the holes located in the slide rail and internal finisher, and then fasten with the screw (© x 1).



d766z0006

# 7. Attach the paper output cover (removed in step 4) [A] ( \$\mathbb{O}^{\mathcal{P}} \times 2)\$.

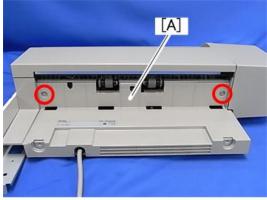


d177z4578

### 8. Remove the Paper exit tray [A].



d197z0407

- 9. Open the front cover.
- 10. Remove the left upper cover [A] ( x 1).

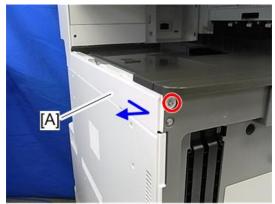


d197z0001

# 11. Remove the left rear cover [A] ( $^{\circ}$ x 2).



d197f0043


### 12. Remove the inverter tray [A].

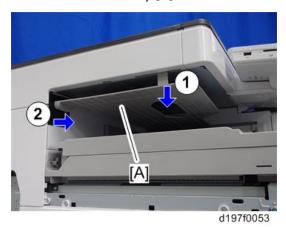


- 13. Open the right cover.
- 14. Remove the main power switch cover [A] (© x 1).



• The main power switch cover has three tabs: two on the left side (paper exit) and one on the right side (right cover).

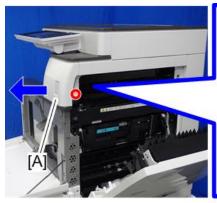

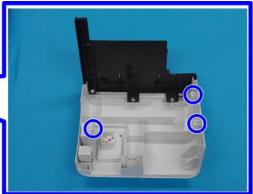


d197f0052

# 15. Remove the paper exit cover [A] ( x 1).



d197f0104


### 16. Remove the connector cover [A].

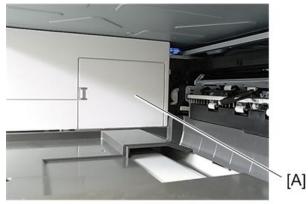


17. Remove the paper exit lower cover [A] (\$\mathscr{O}^{\pi} \times 2).




• The lower inside cover can be removed together with the paper exit lower cover, since the inside cover is secured on the paper exit lower cover with two screws.

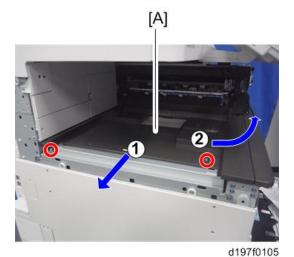

18. Remove the lower inside cover [B] from the paper exit lower cover [A] ( $\Im x$  2).

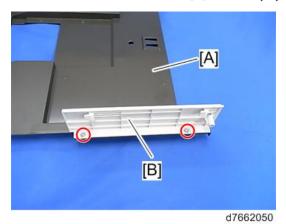


19. While pressing the bottom plate [A] into the area [B] shown by the red-dashed line, insert the tabs of the bottom plate into the slots [C] [D] shown by the blue circles.

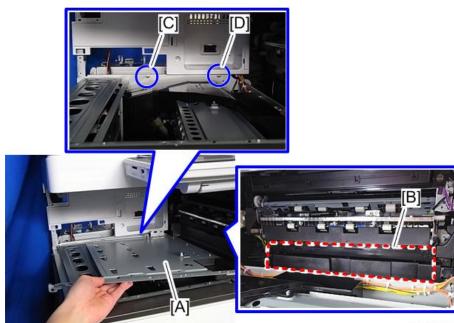


d197z1042

20. Secure the bottom plate [A] (© x 3, Accessory No. 7).

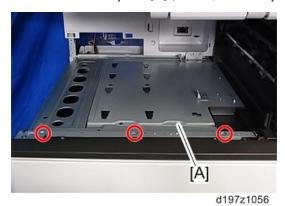


21. Install the lower inside cover (removed in step 18) [A] in the finisher ( x 2, Accessory No.5).

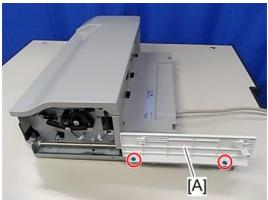

d7662051

22. Attach the paper exit cover [A] and the connector cover [B] (removed in step 15 and step 16).

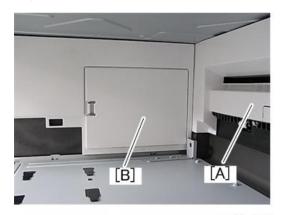

d766z0007

23. Attach the main power switch cover [A], and then close right cover.

### 24. Attach the finisher [B].




d7662055

25. Secure the finisher ( x 1, Accessory No.8).



d7662056

26. Attach the left upper cover [A] and the left rear cover [B] (removed in step 10 and step 11).

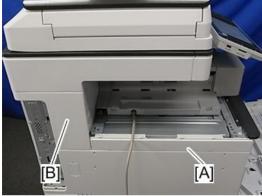


d7662071

# 27. Attach the left lower cover [A] ( $^{\odot}$ x 2, Accessory No.6).




28. Attach the paper output tray [A] ( \$\mathbb{O}^{\mathbb{O}} \times 2, Accessory No.4).

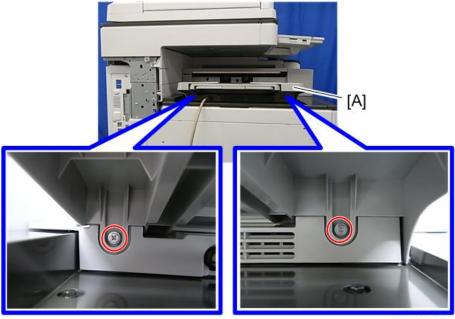

d766z2059

### 29. Reattach the Inverter tray [A] removed in step 12.

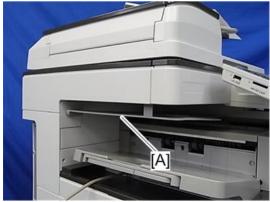


d7662075

## 30. Remove the connector cover [A] ( $\mathbf{T}$ ).




d766z0009

### 31. Connect the interface cable [A].

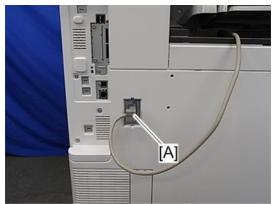

d7662077

#### 32. Attach the nylon clamp [A] as shown below (tapping screw 4x8: x1).

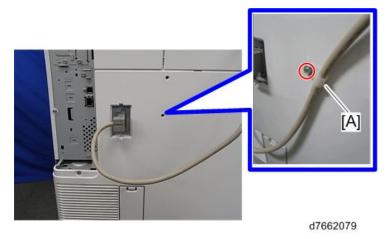

- 33. Turn the main power ON.
- 34. Ensure that the operation panel displays finisher jobs properly and that it works properly.

#### Staple Setting as an Initial Setting




- To adjust the strength of crimp between sheets of paper stapled, there is a setting which makes single/double staple changeable into each other.
- The power of crimp is weakened when there is an image (toner) on the point where is to be stapled. There also is a setting to mask the image on the point for staple, in order to avoid the strength of crimp to be weakened.
- Depending on users demands, explain the settings/ methods of the settings by checking the following instruction.

#### <How to change the setting of Staple Method (Single/Double) for Stapleless Stapler>


- 1. [User Mode/ counter]
- 2. [System Setting]
- 3. [General Setting] and [next]

4. [Stapling Method for Stapleless Stapler]

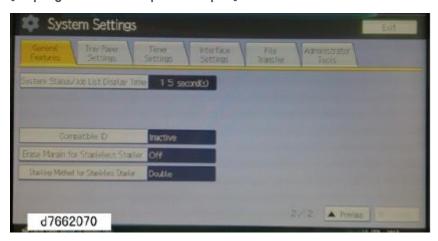

### <How to set Margin Erase for Stapleless Stapler>

- 1. [User Mode/ counter]
- 2. [System Setting]
- 3. [General Setting] and [next]
- 4. [Erase Margin for Stapleless Stapler]

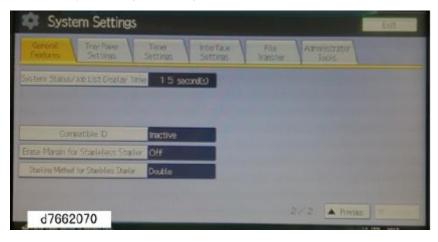


#### 2

# Internal Finisher SR3130

### **Accessory Check**

No.	Description	Q'ty
1	Staple Cartridge	1
2	Front Right Cover	1
3	Caster Stand	2
4	Bottom Plate	1
5	Left Upper Cover	1
6	Entrance Guide Plate	1
-	Screw: M3 × 6	6
-	Tapping Screw: M4 x 6	1
-	Decal - EMC Address	1

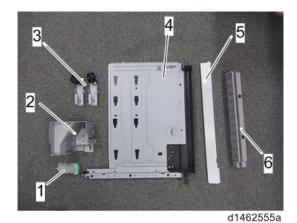

### Installation Procedure

### **ACAUTION**

• When you install this option, turn off the power to the machine, and unplug the power plug from the wall socket.

• If this option is installed with the power on, it will result in an electric shock or a malfunction.



- Cannot be used together with "Internal Shift Tray SH3070", "Side Tray Type M3", "Bridge Unit BU3070", "Finisher SR3140", "Booklet Finisher SR3150", "Finisher SR3160", or "Booklet Finisher SR3170".
- To use together with the "1 Bin Tray BN3110", after attaching the bottom plate of this option, attach the "1 Bin Tray BN3110", and then install this option.
- To use together with the "Punch Unit PU3040", first attach the "Punch Unit PU3040" before installing this option.
- 1. Remove the orange tape and shipping retainers.






d1462556

- 2. Remove the package items (fixing screws, etc.).
- 3. Open the front cover.
- 4. Remove the paper exit tray [A].



d197z0407

## 5. Remove the left upper cover [A] (\$\mathbb{O}^\* \times 1).

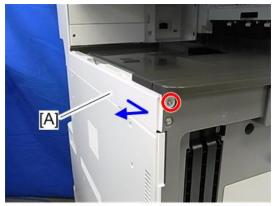


d197z0001

6. Remove the left rear cover [A] ( $\mathfrak{S}^*$ ×2).



d197f0043

### 7. Remove the inverter tray [A].

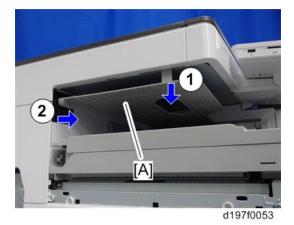

8. Open the right cover.


9. Remove the main power switch cover [A] ( \*1).



• The main power switch cover has three tabs: two on the left side (paper exit) and one on the right side (right cover).



10. Remove the paper exit cover [A] ( $\Im$ ×1).

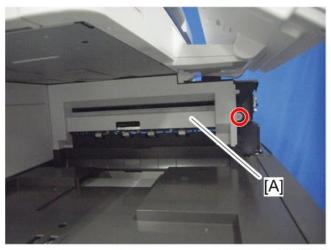

d197f2006


### 11. Remove the connector cover [A].



12. Remove the paper exit lower cover [A] (🕮×2).




• After removing the screws, slide the paper exit lower cover toward the left side, then pull the cover up.

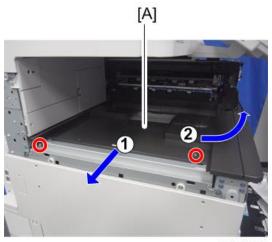


d197f0105




• Install a screw [A] removed in step 12.

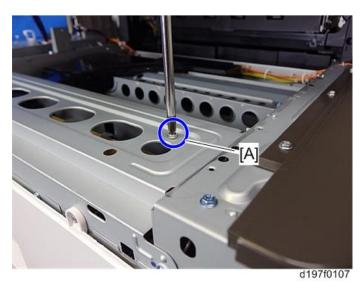

13. While pressing the bottom plate [A] into the area [B] shown by the red-dashed line, insert the tabs of the bottom plate into the slots [C][D] shown by the blue circles.

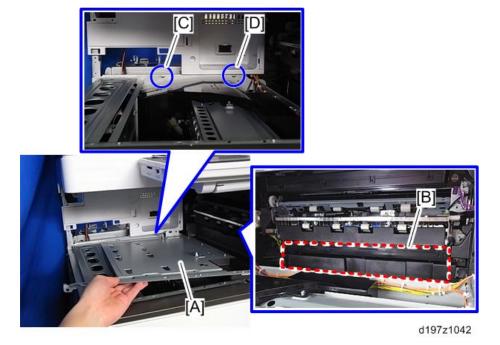

- **U**Note
  - The following procedure is the easiest way to set this component.
    - 1) Slip the bottom plate [A] into the position [B].
    - 2) Insert the bottom plate [A] into the hole in the blue circle [C].
    - 3) When the bottom plate [A] is picked up (see below), it can be inserted into the hole in the blue circle [D].

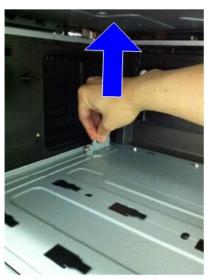


d1462566

14. Secure the bottom plate [A] (\$\mathbb{O}^{\mathbb{N}} \times 3).



d197z1056

15. Attach the paper exit cover [A] and the connector cover [B].

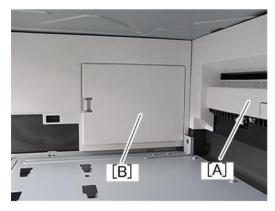

d766z0007




- Up to this point, the procedure is the same as punch unit installation. If the Punch Unit PU3040 is to be installed, refer to the Step 3 and later of the installation procedure (page 248).
- 16. Attach the main power switch cover and close the right cover (\$\mathbb{O}^{\times}1\$).
- 17. Slide the finisher front right cover [A] from left to right, and then attach it (\$\mathbb{O}^\* \times 1).



d1462558

- 18. Attach the inverter tray to the machine.
- 19. Attach the entrance guide plate [B] to the finisher [A] ( \$\mathbb{O}^{\mathbb{C}} \times 2 ).

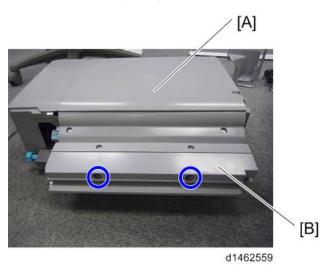

- **U** Note
  - The entrance guide plate has one or more tabs underneath. Fit the tabs when fastening the entrance guide plate.
- 20. Keep the paper exit feeler [A] in the cover.
  - If this step is not done, the feeler may be damaged when closing the finisher from left to right.




21. Slide the finisher [A] along the rail of the bottom plate from the left side of the machine, and then attach it ( \*1).



Note

• Hold the front side [A] of the inner finisher as shown below to check if the inner finisher is correctly set in the rail of the bottom plate.

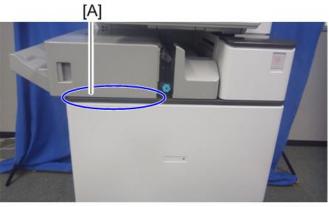

d197f0110


- 22. Attach the left rear cover to the machine (\$\mathbb{O}^\* \times 2).
- 23. Insert the left upper cover [A] provided with this option from the front, and then attach it (@x1).



24. Attach caster stands [A] (\$\mathfrak{O}^{\mathfrak{O}} x2).




• This step is required only for machines that have "Paper Feed Tray PB3210/ PB3220" or "LCIT PB3170/ PB3230".

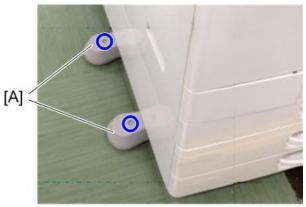

d1462945

25. Connect the interface cable to the machine.

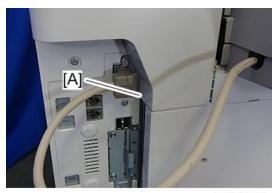

d197f0111

26. Open the stapler unit [A], and then set the staple cartridge [B].




d146z2564

- 27. Turn the power switch on.
- 28. Check that the finisher can be selected at the operation panel, and check the finisher operation. Also when punch unit is installed, check the punching operation.

**Punch Unit PU3040** 

### **Accessory Check**

No.	Description	Q'ty
1	Hopper	1
2	Punch Unit Cover	1
3	Lower Front Cover	1
4	Lower Rear Cover	1
5	Holder	1
-	Knob Screw - M4	1
-	Tapping screws: M3x6	3
-	Decal - EMC Address	1

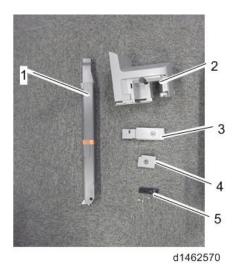

### **Installation Procedure**

### **ACAUTION**


• When installing this option, turn the power to the machine off, and unplug the power plug from the wall socket.

2


• If this option is installed when the power is on, it will result in an electric shock or a malfunction.




- When installing this option together with the "Internal Finisher SR3130", attach this option first before installing the "Internal Finisher SR3130"
- 1. Take out from the box, and remove the filament tape and packing material.
- 2. Perform steps 1 to 15 of the installation procedure for the "Internal finisher SR3130".
- 3. Change the position of the bracket [A] on the bottom plate ( $\mathfrak{D}^* \times 1$ ).

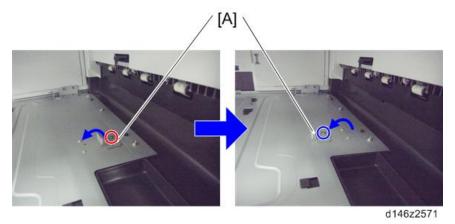


4. Replace the lock holder of the bottom plate with the lock holder [A] provided (\$\mathbb{O}^\* \times 1).

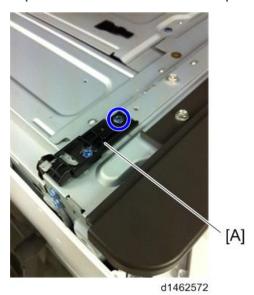

5. Fasten the bottom plate with screws (\$\mathbb{O}^2 \times 3).

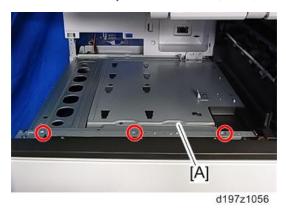


- 6. Attach the main power switch cover.
- 7. Pass the shafts [B] of the punch unit [A] through the bearings [C] of the bottom plate, and attach the punch unit to the machine ( \*\*1, knob screw).

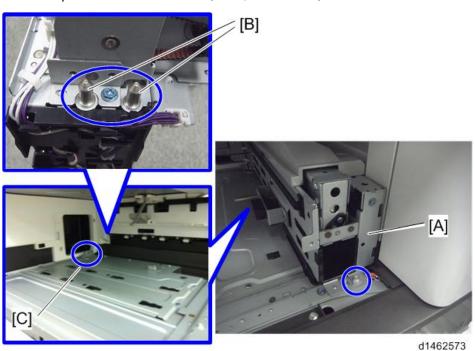




d1462579

8. Attach the front right cover [A] provided, inserting the claws (\$\mathbb{O}^\* \times 2).

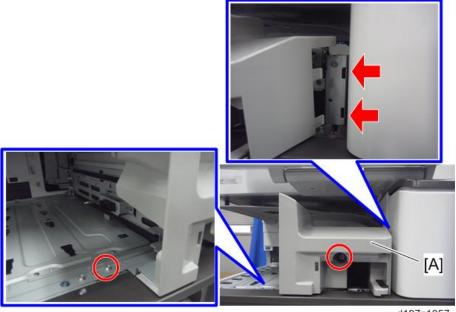

d197z1057

### 9. Insert the hopper [A].

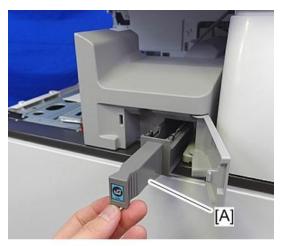

d197f0112

10. Slide the finisher [A] along the rail of the bottom plate from the left of the machine, and then attach it (50°×1).



**U**Note

• Before fastening the screw, make sure that the finisher is correctly set in the rail of the bottom plate.



d197z1150



• When installing the punch unit in the finisher which is already installed, remove the entrance guide plate [A] (@x2).



d1462574

- Note that this step is unnecessary when installing the finisher and punch unit at the same time.
- 11. Attach the lower rear cover [A] and lower front cover [B] to the finisher (\$\mathbb{O}^2 \times 2).




253

- 12. Attach the left rear cover to the machine.
- 13. Insert the upper left cover [A] from the front, and then attach it ( $\mathfrak{F}x1$ ).



14. Connect the interface cable to the machine.

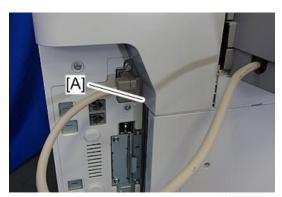

d197f0111

- 15. Turn the main power switch on.
- 16. Check that the finisher can be selected at the operation panel, and check the finisher and punch operation.

# **Smart Operation Panel Type M3**

### **Accessory Check**

No.	Description	Q'ty
1	Brand Logo	1


#### Installation Procedure



**RTB 37** 

Modified

- When changing the screen in the field (standard panel → smart operation panel), perform the following steps.
- Smart Operation Panel Type M3 is not the option for EU region. (Standard model)
- 1. Change the SP modes below before changing the operation panel.
  - Change the setting of bit 0 in SP5-748-101 to "1".
  - Change the setting of SP5-748-201 to "1".
- 2. Turn the main power OFF.
- 3. Open the ARDF or platen cover.
- 4. Scanner front cover [A] (©×2)

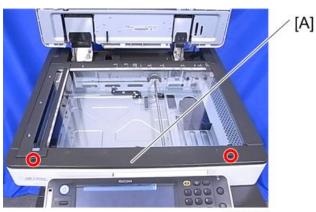


d1462302


**U**Note

• There are two tabs [A] inside this cover: the left side and the right upper side. Release these tabs after removing the two screws of the scanner front cover. First, carefully and slightly pull


the left side of the cover towards the outside and release the left side tab, then pull up the right upper side tab and release it.

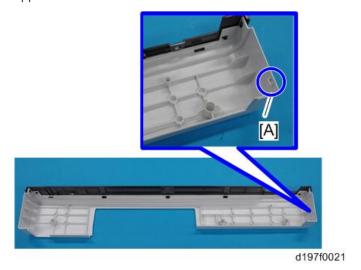


5. Remove the operation panel upper cover [A] (hooks).

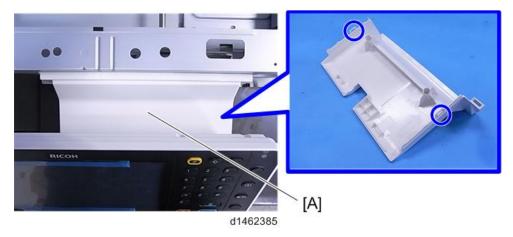


6. Remove the standard operation panel [A] (\$\mathfrak{O}^{\times} \times 5, \$\mathfrak{S}^{\times} \times 2\$).

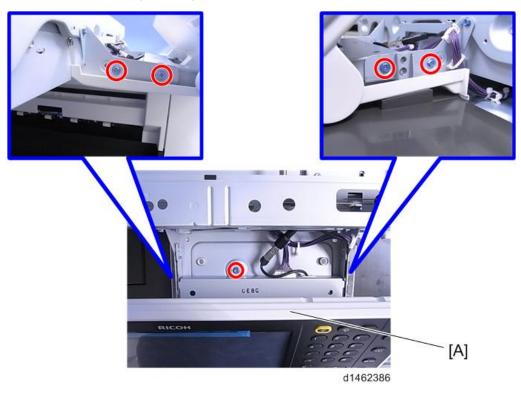


7. Attach the brand logo to the place [A] on the smart operation panel if necessary.

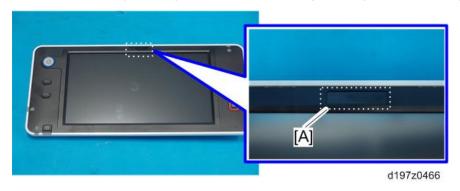

# 8. Attach the Smart Operation Panel Type M3 [A] (@x5, \$x3, \$x2).

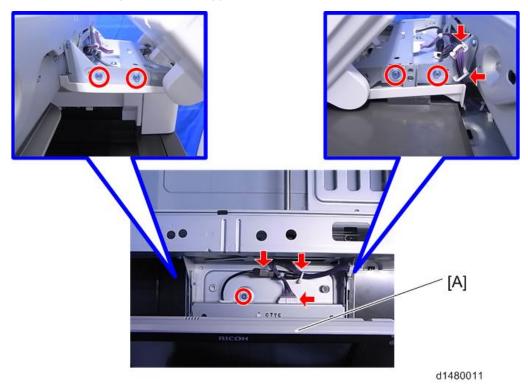

9. Attach the operation panel upper cover [A] (hook×2).

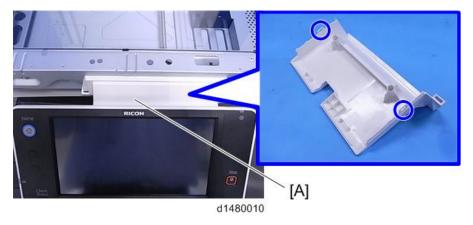

- 10. Attach the scanner front cover.
- 11. Turn the main power ON.
- 12. Change the SP modes below.
  - Change the setting of bit 0 in System SP5-752-001 to "1".
  - $\bullet$  Change the setting of bit 0 in Scanner SP1-041-001 to "1".

2

If fax option is installed,

- Change the setting of bit 0 in Fax SP3-301-001 to "1".
- 13. Turn the main power OFF/ON. If it is connected normally, the default setting icons are displayed.

#### **RTB 37**

More steps added to this procedure

# **Anti-Condensation Heater Type M12**

## **ACAUTION**

• Turn off the main power and disconnect the power supply cord when installing this option.

# **Accessory Check**

Description	Q'ty
Tapping Screw: M3x6	3
Clamp: LWSM-0306A	7
Clamp: LWSM-0511A	8
Clamp: LWS-1211A	1
Heater Board	1
BCU Harness	1
PSU Harness	1
Scanner/ PCU Harness	1
Thermostat unit	1

2

#### 2

### Installation Procedure

### **Anti-Condensation Heater (Scanner)**

1. Open the front cover [A].



2. Remove the paper exit tray [A].




d197z0407


3. Remove the left upper cover [A] (\$\mathbb{O}^\* \times 1\$).



• Slide the cover in the direction of the blue arrow.

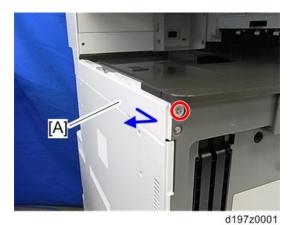


4. Remove the controller cover [A] (\$\mathscr{O}^\* \times 4\$).

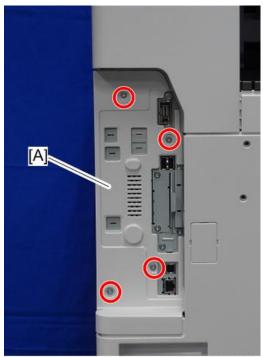

d197f0042


- 5. Open the 1st and 2nd paper feed trays slightly.
- 6. Remove the left cover [A] (\$\mathbb{O}^\* \times 5).

Remove it while pressing down.

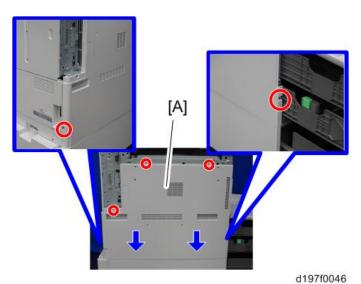


. . .

# 7. Remove the scanner rear cover [A] (\$\mathbb{O}^{\tilde{\tiilde{\tiii}}}}}}}}}} \tilde{\tilde{\tilde{\til

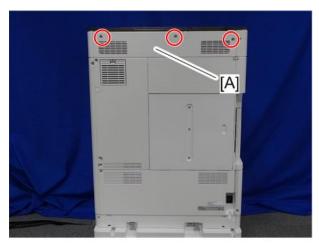


d197f0051

# 8. Remove the controller rear cover [A] (\$\mathbb{O}^\* \times 4).

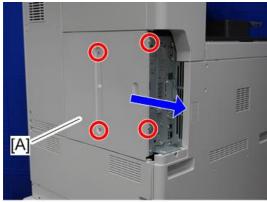


d197f0048

### 9. Remove the rear lower gap cover [A] (hook×2).

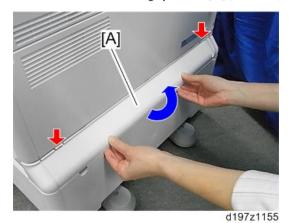

# 10. Remove the rear lower cover [A] (\$\text{\$\text{\$\psi}\$} \times 5).

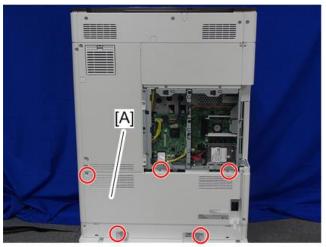

d197f0050

# 11. Remove the rear left cover (3°×3).




d197f0050\_1

### 12. Remove the rear right cover [A] (3°×5).




d197f0049

# 13. Attach the heater board [A] (\$\mathbb{O}^2 x3).

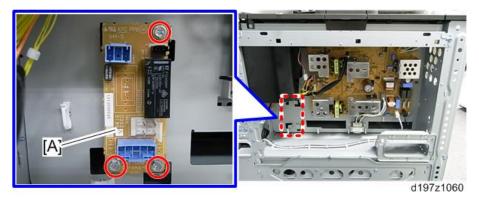


14. Connect the harness [A] to CN904 of the PSU and CN920 of the heater board.

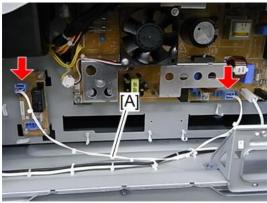

d197z106


15. Clamp the harness which is connected in step 14 (%×6).

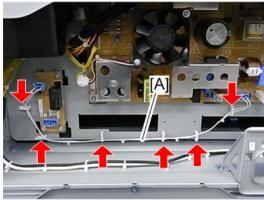


d197z1062

#### 2

### 16. Connect the harness [A] to CN121 of the BCU and CN930 of the heater board.

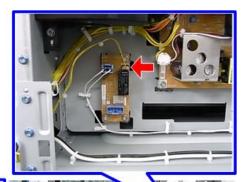




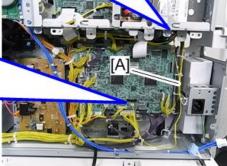

d197z1063


# 17. Clamp the harness [A] which is connected in step 16 (\$\sim\$x7).

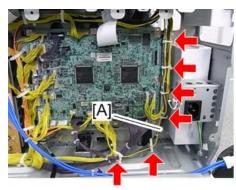




d197z1064

18. Connect the heater cable [A] to CN922 of the heater board [B].

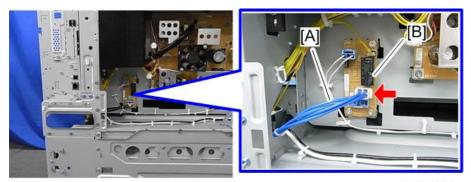


d197z0435

19. Route the heater cable to the rear of the main unit (\$\simex6\$).

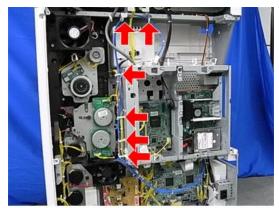

d197z1066


- 20. Open the platen cover or ADF.
- 21. Remove the guide scale [A] (5 ×3).

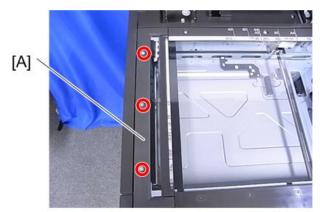

d1462304


#### 2

### 22. Remove the ADF exposure glass [A].

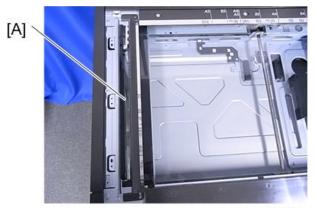

d1462305

23. Remove the rear scale [A] (\$\mathbb{O}^\* \times 3).

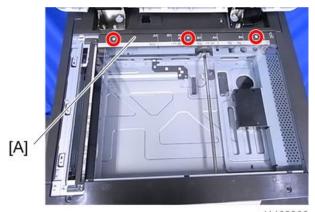


d1462306

24. Remove the left scale and exposure glass [A].



• The exposure glass and the left scale are attached with double-sided tape.

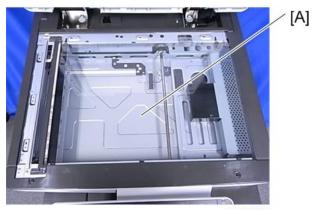


- d1462307
- 25. Move the carriage to the center.
- 26. Attach the bracket [A] to the left side of the scanner.



d197z1067

27. Attach the scanner heater [A] (©×2).

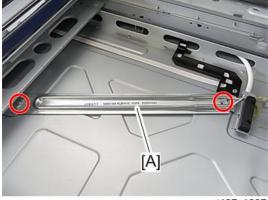

d197z1087

28. Route the harness on the hook which is indicated with the blue circle in the picture below.



d1463041

29. Pass the harness out through the hole of the frame.



d1463042

30. Remove the screw of the cable guide [A].




d197z1088

31. Attach the heater cover [A] (\$\mathbb{O}^2 x 1).




• Secure the screw in the same position as step 30.

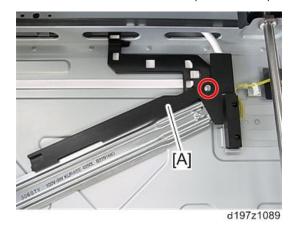


32. Remove the DF harness with the bracket [A] if the DF is installed ( $\Im x1$ ).



33. Remove the SIO board [A] if the DF is installed (@x4, @x6, flat cable x1).

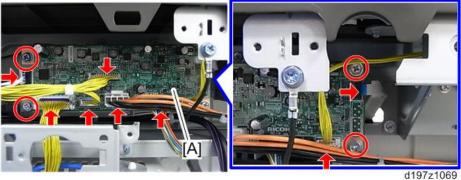


34. Connect the heater cable [B] which is shown in step 29 to another harness [A] which is shown in step 19.

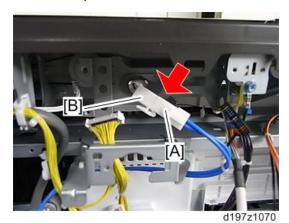

35. Attach all covers which have been removed.


### **Anti-Condensation Heater (PCU)**

- 1. Open the front cover.
- 2. Open the right cover.
- 3. Open the transfer unit [A].

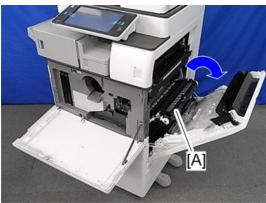


d197z0072

### 4. PCDU [A] (@x1, @x1)

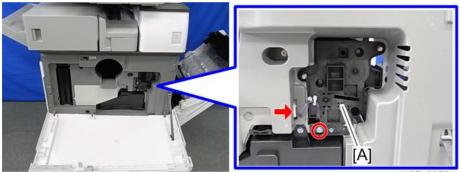


d197z0073

5. Pull out the waste toner bottle [A] (\$\mathbb{O}^2 x 1).

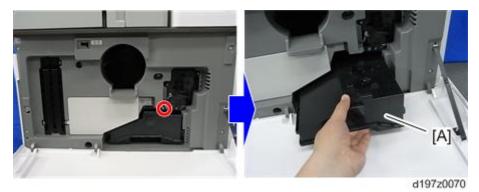

6. Take off the heater bracket [A].

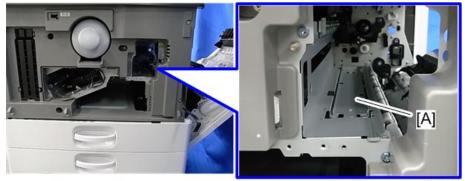


d197z1071


7. Attach the anti-condensation heater (PCU) [A] to the heater bracket [B].




• Fit the anti-condensation heater (PCU) [A] into the tab [C] on the heater bracket [B].

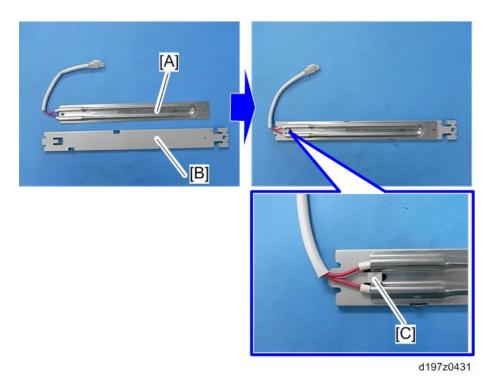


8. Attach the thermostat [A] to the Anti-condensation heater (PCU) [B] ( $\mathfrak{G}^*x1$ ).



• Fit the thermostat [A] into the tab [C] on the heater bracket [B].

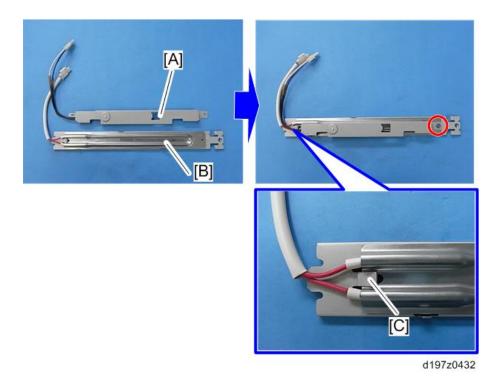


9. Put back the anti-condensation heater (PCU) [A], and then pass the heater harnesses out through the opening [B] at the inner rear side of the main unit.

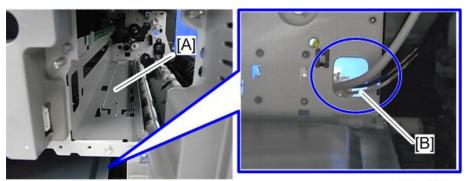

d197z0433

10. For D200/D201/D202 only, remove the development bearing cooling fan [A] (\$\mathbb{O}^2 x2\$, \$\mathbb{X}^2 x1\$).

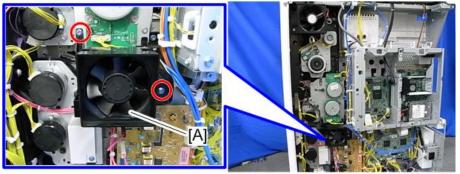


d197z1074

11. Connect the harnesses of the thermostat [A] and of the anti-condensation heater (PCU) [B] to the harnesses [C] which is routed in step 19 of the procedure for the Anti-Condensation Heater (Scanner).



• You can connect the harnesses [C] up to either the harness [A] or [B].

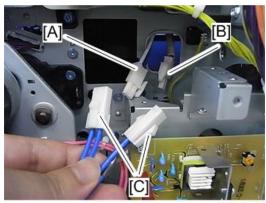

d197z043

12. Reattach the development bearing cooling fan, PCDU, waste toner bottle and covers which have been removed.

# **Anti-Condensation Heater for Trays**

### **ACAUTION**

• Turn off the main power switch and disconnect the power supply cord when installing this option.

### **Accessory Check**

Anti-Condensation Heater (Service Option) for Main Unit

Description	Q'ty
Tapping Screw: M3x6	3
Clamp: LWSM-0306A	7
Clamp: LWS-1211A	1
Heater Board	1
BCU Harness	1
PSU Harness	1
PFU Harness	1

Anti-Condensation Heater (Service Option) for Optional PFU and LCIT

Description	Q'ty
PFU Harness	1
Heater Board	1
Clamp: LWSM-0306A	4
Screw: M4x10	1

### Installation Procedure

### Anti-Condensation Heater for Paper Feed Tray (Main Unit)

1. Turn off the main power and disconnect the power supply cord.

- 2. Open the front cover.
- 3. Remove the paper exit tray [A].




d197z0407

4. Remove the left upper cover [A] (\$\mathbb{O}^{\mathbb{O}} \times 1).




• Slide the cover in the direction of the blue arrow.

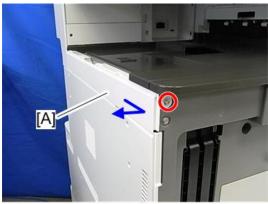


d197z0001

# 5. Remove the controller cover [A] (@×4).

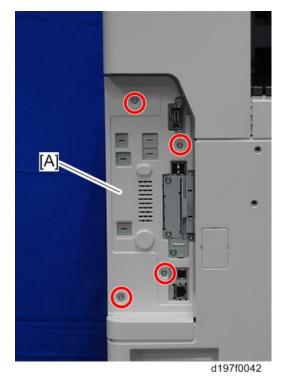


- 6. Open the 1st and 2nd paper feed trays slightly.
- 7. Remove the left cover [A] (\$\mathbb{O}^{\mathbb{N}} \times 5).

Remove it while pressing down.

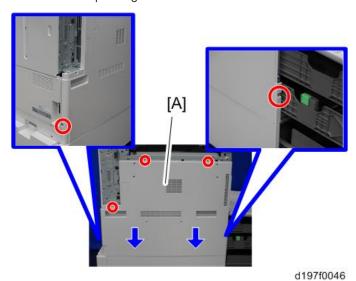


# 8. Remove the controller rear cover [A] (\$\mathbb{O}^\* \times 4).

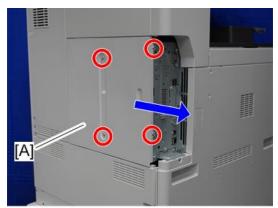


d197f0048

9. Remove the rear lower gap cover [A] (hook×2).

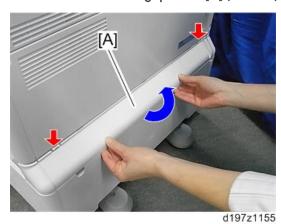


10. Remove the rear lower cover [A] ( $\mathscr{Y} \times 5$ ).

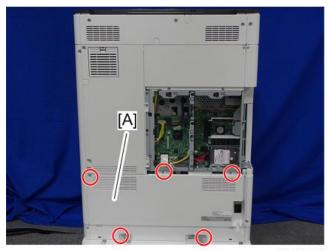


d197f0050

11. Attach the heater board [A] (@x3).

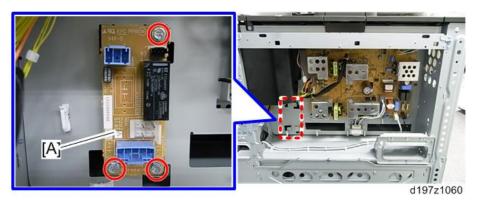


12. Connect the harness [A] to CN904 of the PSU and CN920 of the heater board.

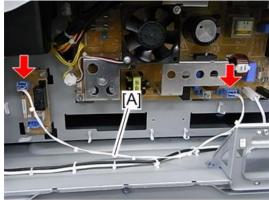



d197z1061


### 13. Clamp the harness which is connected in step 5 (\$x6).

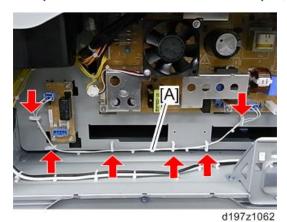

14. Connect the harness [A] to CN121 of the BCU and CN930 of the heater board.

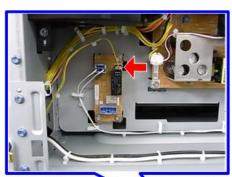


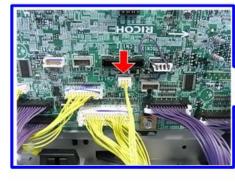

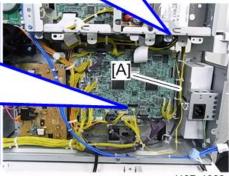


d197z1063

15. Clamp the harness [A] which is connected in step 7 (\$\infty\$x7).

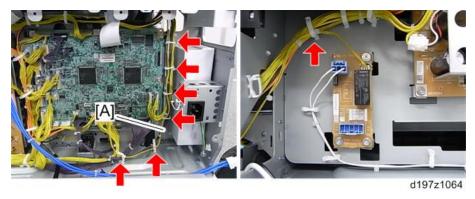

16. Connect the heater harness [A] to CN921 of the heater board, and then attach the plug-in of the heater harness to the rear frame of the main unit.

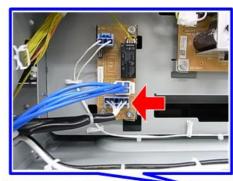






d197z1077

17. Clamp the heater harness which is routed in step 9 (\$x3).



- d197z1078
- 18. Pull out the first and second paper feed trays.
- 19. Connect the harness of the tray heater [A] for the main unit to the plug-in at the inner rear frame of the main unit.

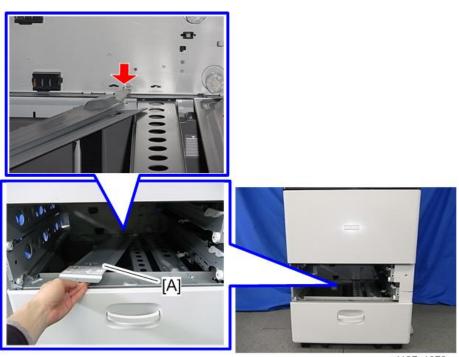

d197z1079

20. Insert the tabs of the tray heater for the main unit in the cutouts in the inner rear frame of the main unit, and then attach it ( \*\*x1).



d197z1080


- 21. Reattach all the paper feed trays, covers, etc. which have been taken off.
- Do the following two steps to set the Anti-Condensation Heater to be constantly ON.
  - 1. Set the setting of SP5-805-001 (Anti-Condensation Heater ON/OFF setting) to [1].
  - 2. Manually disconnect the PCU and scanner heaters.



 The PCU and scanner heaters must be disabled because the temperature in the machine could become too high, causing problems with toner clogging, or damage to the scanner lamp stabilizer.


#### Anti-Condensation Heater for Paper Feed Unit PB3210 / PB3220

- Implement steps 1 to 17 of the procedure for the Anti-Condensation Heater for Tray (page 278).
- 2. Pull out the 1st and 2nd paper feed trays of the paper feed unit.
- 3. Pass the harness of the heater [A] for the optional paper feed unit through the hole in the inner rear frame of the optional paper feed unit, and then attach it ( x1).

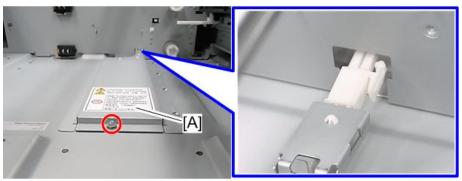


d197z1082

4. Remove the securing brackets [A] of the optional paper feed unit ( $\Im x2$ ).

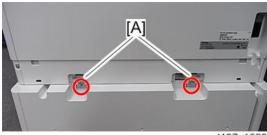


d197z1029

5. Remove the rear cover [A] of the optional paper feed unit ( $\Im x2$ ).

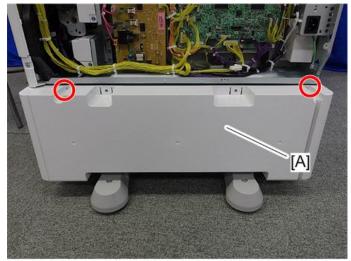

d197f0160

6. Remove the bracket [A] on the bottom of the main unit (  $\ensuremath{\mathbb{G}} x 1$  ).

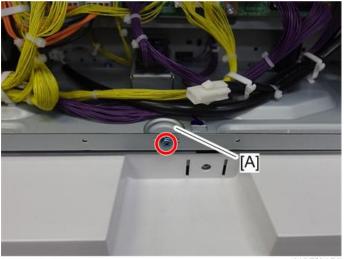


d197f0159

7. Connect the PFU harness [A] of the optional paper feed unit to the relay harness [B] of the main unit and the heater harness [C] (\$\mathbb{R}\_{\times}4\$).



• Put the PFU harness through the hole which is revealed when the bracket is removed in step 7.

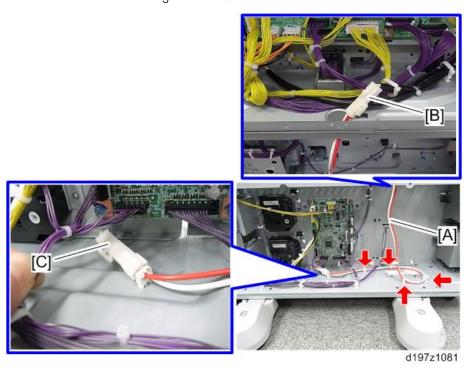

- 8. Reattach the rear cover of the optional paper feed unit, securing brackets, and rear lower cover of the main unit.
- 9. Connect the power supply cord and turn ON the main power.

Do the following two steps to set the anti-condensation heater to be constantly ON.

- 1. Set the setting of SP5-805-001 (Anti-Condensation Heater ON/OFF setting) to [1].
- 2. Manually disconnect the PCU and scanner heaters.



 The PCU and scanner heaters must be disabled because the temperature in the machine could become too high, causing problems with toner clogging, or damage to the scanner lamp stabilizer.


#### Anti-Condensation Heater for Paper Feed Unit PB3150

- Implement the step1 to 17 of the procedure for the Anti-Condensation Heater for Tray (page 278).
- 2. Pull out the paper feed tray of PB3150.
- 3. Put the harness of the heater [A] for the optional paper feed unit through the hole at the inner rear frame, and then attach it ( x1).




d197z1084

4. Remove the securing brackets [A] of Paper Feed Unit PB3150 (\$\mathbb{O}^{\mathbb{C}} x2).

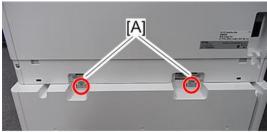


d197z1029

5. Remove the rear cover [A] of Paper Feed Unit PB3150 (5 x4).

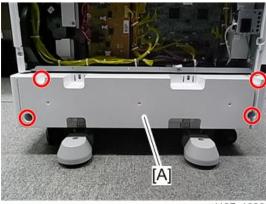

d197z1030

6. Remove the bracket [A] on the bottom of the main unit (@x1)

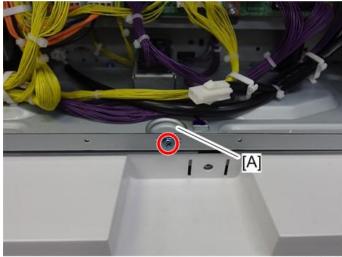


d197f0159


7. Connect the PFU harness [A] of the optional paper feed unit to the relay harness [B] of the main unit and the heater harness [C] (\$\sqrt{x}4\$).



• Put the PFU harness through the hole which is revealed when the bracket is removed in step 7.



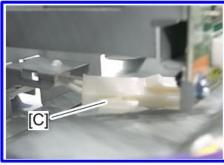

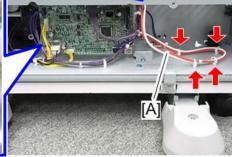

d197z1083

- 8. Reattach the rear cover of the paper feed unit PB3150, securing brackets, and rear lower cover of the main unit.
- 9. Connect the power supply code and turn ON the main power.

Do the following two steps to set the anti-condensation heater to be constantly ON.

- 1. Set the setting of SP5-805-001 (Anti-Condensation Heater ON/OFF setting) to [1].
- 2. Manually disconnect the PCU and scanner heaters.

### 

• The PCU and scanner heaters must be disabled because the temperature in the machine could become too high, causing problems with toner clogging, or damage to the scanner lamp stabilizer.

#### Anti-Condensation Heater for LCIT PB3170/ PB3230


- Implement steps 1 to 17 of the procedure for the Anti-Condensation Heater for Tray (page 278).
- 2. Pull out the paper feed tray of the optional LCT unit.

3. Pass the harness of the heater [A] for the optional tray out through the hole in the inner rear frame of the optional LCT unit, and then attach it (@x1).




d197z1086

4. Remove the securing brackets [A] of the optional LCT unit ( $\Im x2$ ).

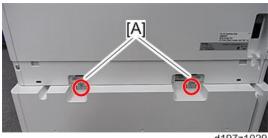


d197z1029

5. Remove the rear cover [A] of the optional LCT unit (@x2).

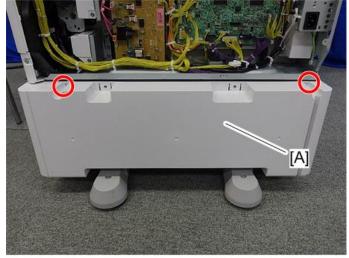

d197f0160

6. Remove the bracket [A] on the bottom of the main unit ( $\Im x1$ ).

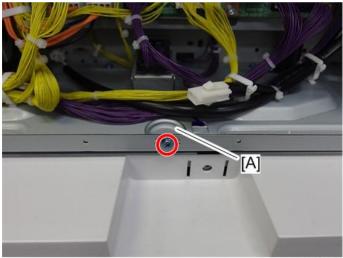


d197f0159

7. Connect the PFU harness [A] of the optional LCT unit to the relay harness [B] of the main unit and the heater harness [C] (\$\sigma x3\$).



• Put the PFU harness through the hole which is revealed when the bracket is removed in step 6.

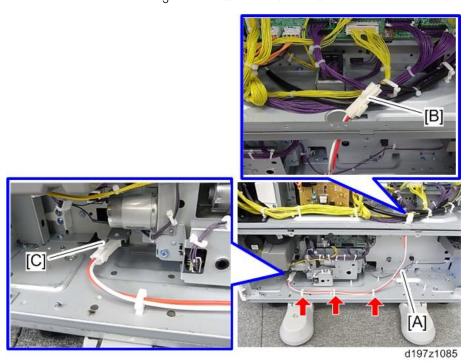

293

- 8. Reattach the rear cover of the optional LCT unit, securing brackets, and rear lower cover of the main unit.
- 9. Connect the power supply cord and turn ON the main power.

Do the following two steps to set the anti-condensation heater to be constantly ON.

- 1. Set the setting of SP5-805-001 (Anti-Condensation Heater ON/OFF setting) to [1].
- 2. Manually disconnect the PCU and scanner heaters.


#### **Important**

 The PCU and scanner heaters must be disabled because the temperature in the machine could become too high, causing problems with toner clogging, or damage to the scanner lamp stabilizer.

# Card Reader Bracket Type 3352

## Accessory Check

No.	Description	Q'ty	For This Model
1	Screw: M3 x 8	2	Yes
2	Screw: M3 x 14	1	Not used
3	Screw: M4 x 25	1	Yes
4	Tapping Screw: M3 x 10	3	Yes
5	Upper Tray	1	Yes
6	Lower Tray	1	Yes
7	Tray Bracket	1	Yes
8	Clamp	5	Yes

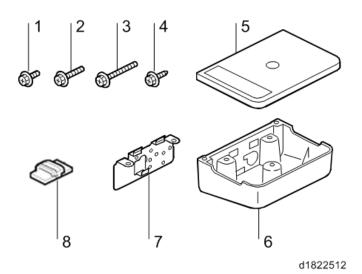

295

### Installation Procedure

1. Remove the scanner rear cover [A] (\$\mathbb{O}^{\mathbb{P}} \times 3).



d197f0051

2. Remove the scanner right cover [A] ( $\mathfrak{O}^* \times 1$ )




d197f0020

3. Make two screw holes in the removed scanner right cover with a screwdriver or drill.




• Make the screw hole to be smaller than the screw size.

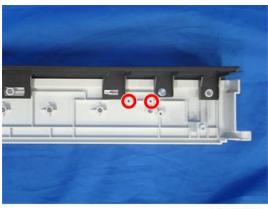


d197z1054

- 4. Reattach the scanner right cover (©x2).
- 5. Attach the tray bracket [A] to the scanner right cover (@x2: M3x10 tapping screw).
  - For this model, use the screw holes marked "3" on the table bracket.

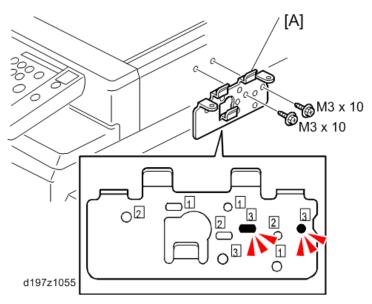

6. Attach the lower tray [A] to the tray bracket ( $@x2: M3 \times 8$ ).

7. Attach the upper tray [B] to the tray bracket ( $\Im x1: M3 \times 10$ ).

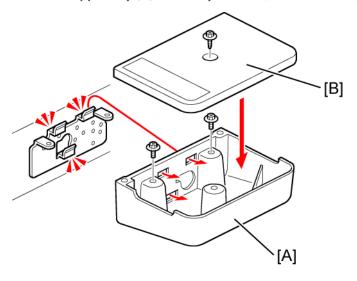

d120i577

8. Attach the clamps ([1] to [5]) and route the harness around the machine as shown.


#### Scanner Right Cover



d197z1125

#### כ

### **Upper Rear Cover**

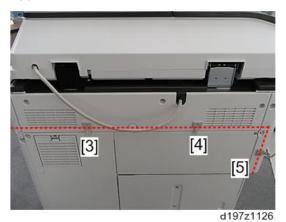


 ${\bf 9.}\;$  Clamp the USB cable and connect it to the USB connector.

#### **Accessory Check**

Description Q'ty Screw: M3X8 1 Binding Self-Tapping Screw: M4X8 3 Clamp:LWS-1211Z 2 Clamp:NK-3N 1 Double Sided Tape 2 Key Counter Plate Nut 2 Key Counter Harness 1


#### **Installation Procedure**

- 1. Hold the key counter plate nuts [A] on the inside of the key counter bracket [B] and insert the key counter holder [C].
- 2. Secure the key counter holder to the bracket (\$\mathbb{O}^{\text{x}} x 2).
- 3. Install the key counter cover [D] (@x2).

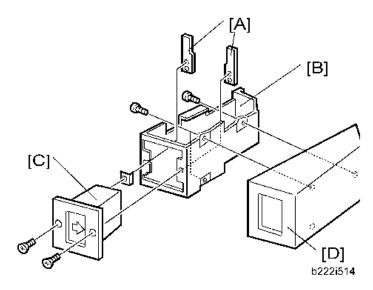


2

- 4. Attach the harness that comes from the key counter to the right side of the main machine with the two clamps provided (CLAMP:LWS-1211Z).
- 5. Remove the controller cover [A] (@×4).

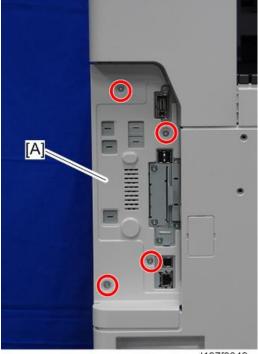

d197f0042

**6.** Remove the controller rear cover [A] (@×5).

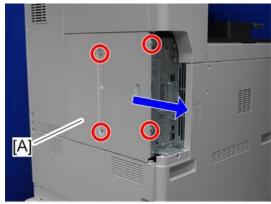

d197f0048

## 7. Remove the rear left cover (\$\mathscr{O}^\* \times 3).




d197f0050\_1

8. Remove the rear right cover [A] (  $^{\circ}$  ×5).




d197f0049

9. Remove the rear lower cover [A] (\$\mathbb{O}^{\times} \times 5).

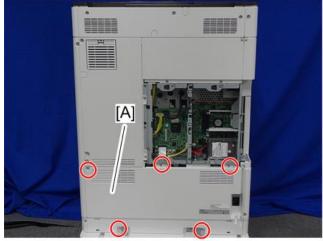

d197f0050

 Remove the connector on CN133 [A] of the BCU, and then connect the key counter harness to CN133.

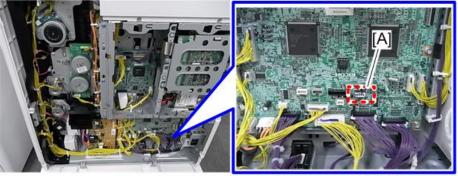


d197z1140

- 11. Secure the harness to the inside of the main frame with a clamp.
- 12. Remove the cut off part [A] of the rear right cover.



13. Pass the harness from the key counter through the cut off part [A] of the right rear cover.

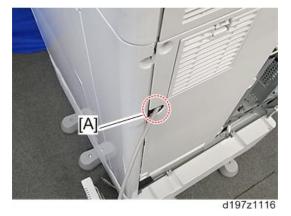

14. Reinstall all the covers on the main machine.

- 15. Peel off double sided tape on the key counter bracket and attach the key counter to the scanner right cover.
- 16. Reassemble the machine.

#### 2


# Optional Counter Interface Unit Type M12

### **Accessory Check**


Description	Q'ty
MKB Board	1
Tapping Screw: M3x6	4
Harness Band	1
Stud	4
Harness Clamp: LWS-0711	1
EMC Address Decal	1
Harness	1

#### Installation Procedure


- 1. Exterior Covers (page 417)
  - Controller Cover
  - Controller Rear Cover
  - Rear Lower Cover
- 2. Install the four stud stays in the location [A] as shown below.

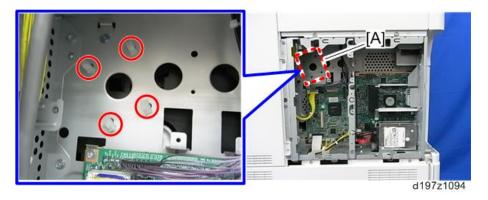

3. Install the optional counter interface board [A] on the four stud stays.

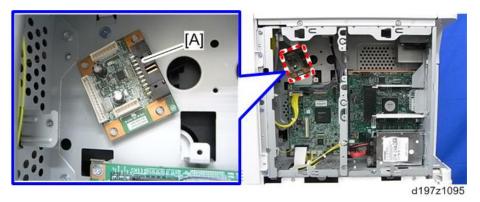

4. Connect the supplied harness (13 pins) to CN3 [A] on the optional counter interface board and CN132 [A] on the BCU.

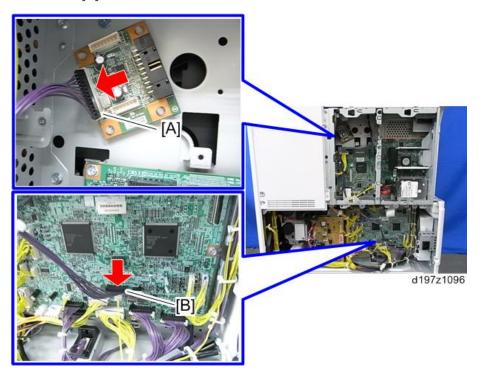

5. Route the harness [A] and clamp it as shown below (%x1).




d197z1097

6. Remove the cable cover [A] and pass the harness from the optional counter device.



d197z1106

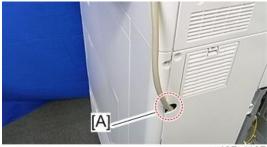

d197z1107

7. Reassemble the machine.


## Smart Card Reader Built-in Unit Type M12

### **Accessory Check**

No.	Description	Q'ty	Remark
1	IC Card Cover	1	
2	Clamp:LWSM-0605A	4	
3	Decal	1	
4	Sponge:20X20	2	
5	Upper Cover	1	
-	Operating Instructions	1	
-	MY Bank & QA Registration Card	1	
-	Operation Manual	1	



• IC card reader and USB cable are not provided with this option.

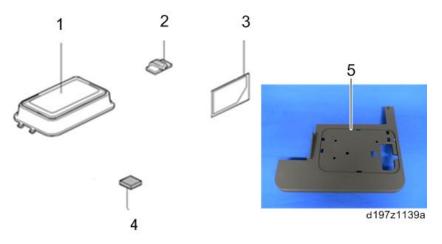

#### Installation Procedure

1. Open the right cover.

2

2. Remove the main power switch cover (\$\mathbb{O}^\* \times 1).




• The main power switch cover has three tabs: two on the left side (paper exit) and one on the right side (right cover).



d197f0052

3. Remove the scanner rear cover [A] ( $^{\circ\circ}$ ×3).

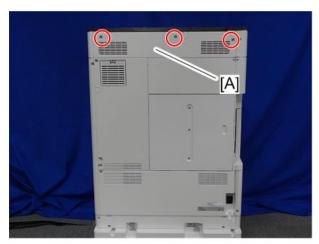


d197f0051

## 4. Remove the scanner right cover [A] ( \*1).




d1462300

## 5. Remove the controller cover [A] (\$\mathbb{O}^\* \times 4\$).

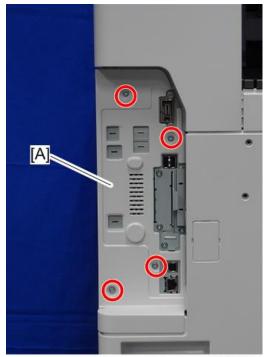

d197f0042

6. Slide the controller rear cover [A] to remove it (\$\mathscr{O}^\* \times 4).

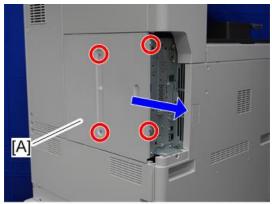

d197f0048

7. Remove the rear left cover [A] ( $^{\circ}$ ×3).



d197f0050\_1

8. Pass a USB cable through the opening on the upper cover.




d197z1200

9. Put an IC card reader [A] on the upper cover, and connect the USB cable.



- An IC card reader is not provided with this option.
- Pull the cable down through the opening on the upper cover to adjust the excess length of the cable. This prevents the cable from getting sandwiched when you attach the IC card cover.

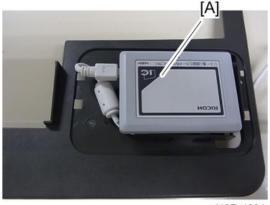

d197z1201

10. Attach the IC card cover [A] provided, to cover the IC card reader (Tab × 4).



- Do not sandwich the USB cable with this cover.
- Make sure that the reading area on the IC card reader is in contact with the IC card cover. If
  they are not contacted with each other, put the sponge(s) provided underneath the IC card
  reader to fill the gap. Otherwise, the IC card reader will not work properly.



d197z1202

#### 11. Turn the upper cover upside down.




d197z1203

#### 12. Route the cable as shown below (Tab × 2).




d197z1204



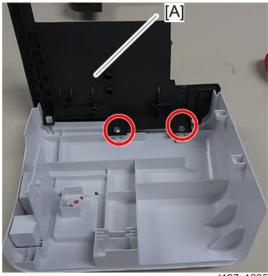

d197z1205

14. Attach the upper cover [A] assembled in step 8 through step 12 to the main power switch cover (3°×2).

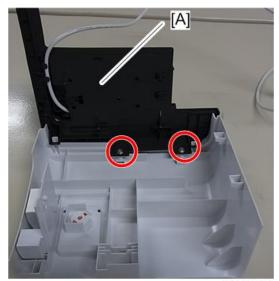

d197z1206

15. Attach the clamps provided along from the right side to the rear side of the main frame (\$\\\\\$\) ×3).



d197z1207

16. Attach the main power switch cover with IC card reader [A].



## 17. Tighten the screw to secure the main power switch cover ( ${\mathfrak S}^* \times 1$ ).



d197z1209

**U** Note

• Lead the USB cable into the right side of the main frame as shown below.




d197z1210

## 18. Clamp the USB cable at the four positions (\$\simex4\$).



19. Clamp the USB cable at the five positions (\$\simex 5\).

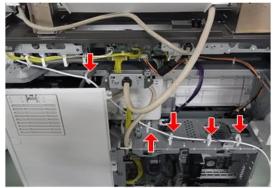

d197z1212



• If the USB cable is too long, loop and clamp the cable to adjust the length as shown below.




d197z1213

20. Cut out the hole cover [A] and insert the harness.



d197z1134a

- 21. Reinstall all the covers removed.
- 22. Connect the USB cable [A] to the USB port of the main machine.

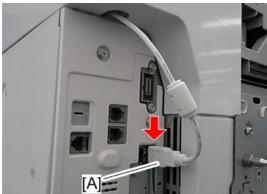


- d197z1133
- 23. Install the IC card cover provided with this option on the IC card reader ( ×4).
- 24. Turn the main power switch ON, and make sure that the value of SP5-985-002 is set to "1".

#### 2

## **Internal Options**

#### List of Slots

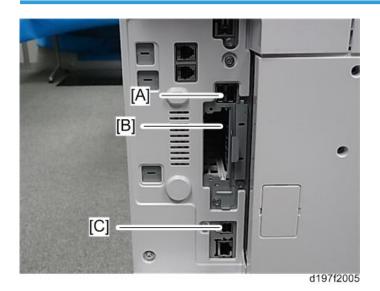

Slot
Option

[A] USB ports\*1
Bluetooth Interface Unit Type D
Smart Card Reader Built-in Unit Type M12

[B] I/F slot A
IEEE 1284 Interface Board Type A

IEEE 802.11a/g/n Interface Unit Type M2

[C] Mini USB port
File Format Converter Type E

USB Device Server Option Type M12

 $<sup>^{\</sup>star}$  1 There is no difference between the left and right USB ports.

# Printer/Scanner Unit Type M12




• This option is for basic models only.

## Component Check

No.	Description	Q'ty
1	HDD Unit	1
2	Cable	1
3	Cable	1
-	SD-Card	1
-	Screw - M3x6	3
-	Sheet: Application: Document Box	1
-	Sheet: Application: Scanner	1
-	Sheet: Application: Printer	1
-	PDF Decal	1
-	CD-ROM	1
-	Caution Decal Sheet	1
-	EMC Address Sheet	1
-	EULA Sheet	1

2

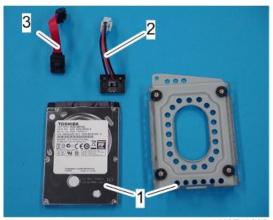


d197z1039

#### **Installation Procedure**


## **ACAUTION**

- Turn off the main power and disconnect the power supply cord.
- 1. Remove the controller rear cover (page 422).
- 2. Connect the cables [A] [B] to the HDD [C], and then attach the HDD to the bracket [D] of the HDD (@x4).

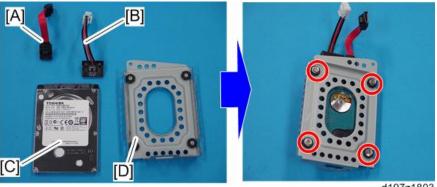

3. Connect the cables of the HDD to the controller board [A], and then hang the HDD [B] on the hook of the controller box (\$\sigma x2\$).

#### 4. Secure the HDD [B] (\$\mathbb{O}^{\mathbb{O}} x3).

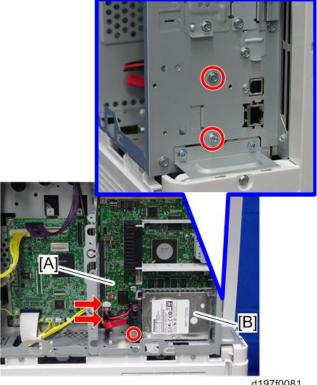


d197f0081

- 5. Reattach the removed covers.
- 6. Plug the power cord and turn on the main power of the machine.
- 7. Do SP5-832-001 to format the hard disk.
- 8. Do SP5-853-001 to copy the preset stamp data from the firmware to the hard disk.
- 9. Do SP5-846-040 to copy the address book to the hard disk from the controller board.
- 10. Do SP5-846-041 to let the user get access to the address book.
- 11. Turn the main power off and on.
- 12. Enable the on-board NIC and USB in the SP mode.
  - SP5-985-001 (On-board NIC): 1 (Enabled)
  - SP5-985-002 (On-board USB): 1 (Enabled)

You must turn the machine off/on because the setting only takes effect after the machine is restarted.

13. Turn off the main power after the power indicator turns off.


# 14. Remove the SD slot cover [A] ( \$\mathbb{O}^{\times} \times 1 \).

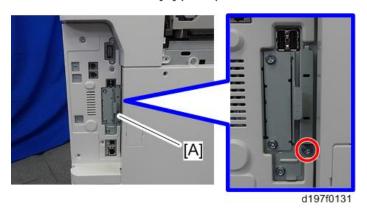


15. Insert the SD card in SD card Slot 1 [A] or Slot 2 [B].




 Be sure that you have set the On-board Device settings (SP5-985-001 and -002, as explained above) before inserting the SD card..

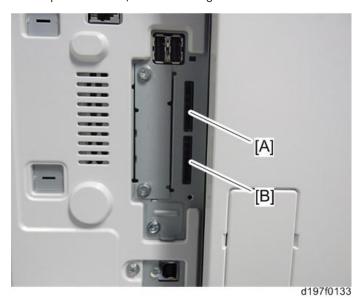

- 16. Do SP5-853-001 to copy the preset stamp data from the firmware to the hard disk.
- 17. Attach the PDF decal [A] to the bottom right of the front door.
  If there is another decal already attached, attach the PDF decal to the left of the decal.

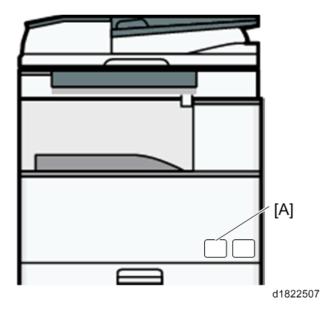

18. Connect the Ethernet cable to the Ethernet I/F [A].

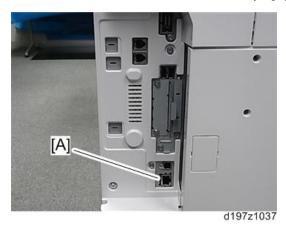


**U** Note

- When adding the Printer/Scanner Unit to a machine with the Fax Unit installed, additional procedures are required.
  - 1. Turn on the main power.
  - 2. Do SP5-846-040 to copy the address book to the hard disk from the controller board.
  - 3. Turn off the main power after the power indicator is unlit.

# IEEE 1284 Interface Board Type A

# **Component Check**

No.	Description	Q'ty
1	IEEE 1284 Interface Board	1
-	UL Sheet	1
-	EMC Address Sheet	1
-	FCC Sheet	1
-	ROHS Sheet	1
-	Caution Sheet	1




### Installation

# **ACAUTION**

• Turn off the main power and disconnect the power supply cord.

### 1. Remove the I/F slot cover [A] (@x2).

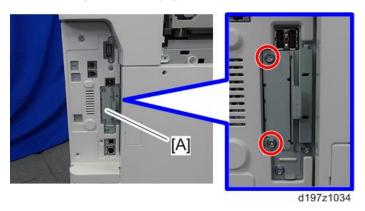

2. Install the IEEE 1284 Interface Board in the I/F slot [A] (@x2).



### 3. Plug in and turn ON the main machine.




- Use a screwdriver to tighten the knob-screws. Do not tighten manually, because this can disconnect the board.
- 4. Print out the "Configuration Page", and then check if this option is correctly recognized.
  - User Tools/Counter > Printer Features > List/Test Page > Configuration Page

### 2

# IEEE 802.11a/g/n Interface Unit Type M2

## **Accessory Check**

No.	Description	Q'ty
1	IEEE 802.11a/g/n Interface Board	1
2	Velcro Fasteners	2
3	Antenna Clamps	8
-	EMC Address Sheet	1
-	FCC Sheet	1
-	Caution Sheet: Each Area	4
-	Setup Sheet	1

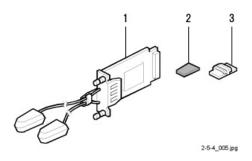


### Installation


# **ACAUTION**

• Turn off the main power and disconnect the power supply cord.

1. Remove the I/F slot cover [A] (@x2).

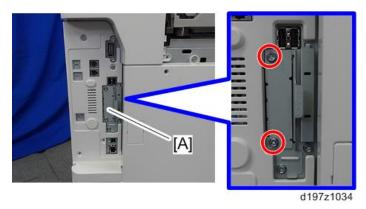

2. Install the IEEE 802.11 interface board in the I/F slot [A] (@x2).

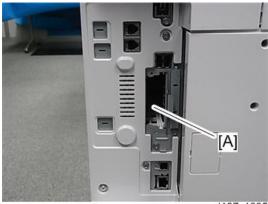


d197z1035



- Use a screwdriver to tighten the knob-screws. Do not tighten manually, because this can disconnect the board.
- 3. Look at the markings on the antenna bracket.

4. Look at the ferrite core of the antenna cable.

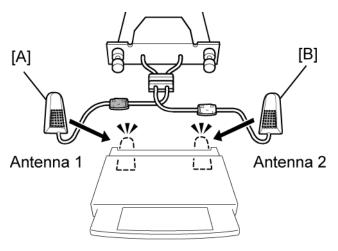


d596i509

- ANT1. Antenna 1 [A] transmits and receives. It must be installed on the left rear corner of the main machine. (The core on the Antenna 1 cable is black.)
- ANT2. Antenna 2 [B] only receives. It is installed on the right rear corner of the machine. (The core on the Antenna 2 cable is white.)
- 5. Peel off the double-sided tapes on the Velcro fasteners, and then attach them to the right rear [A] and left rear [A] of the machine.



- d197z1041
- 6. Attach Antenna 1 [B] to the left rear of the machine. (The core on the Antenna 1 cable is black.)
- 7. Attach Antenna 2 [A] to the right rear of the machine. (The core on the Antenna 2 cable is white.)



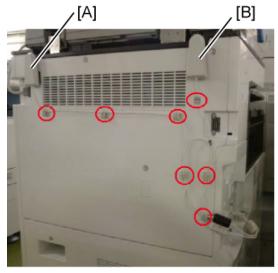

d596i511

- 9. Set the cables of Antenna 1 and Antenna 2 in the clamps and close them.
- 10. Print out the "Configuration Page", and then check if this option is correctly recognized.
  - User Tools/Counter > Printer Features > List/Test Page > Configuration Page

## User Tool Settings for IEEE 802.11a/g/n

Go into the User Tools mode and do the procedure below. These settings take effect every time the machine is powered on.



- You cannot use IEEE 802.11a/g/n if you use Ethernet.
- 1. Press the "User Tools" key.
- 2. On the touch panel, touch "System Settings".



- Select "Interface Settings"> "Network" > "LAN Type". The "LAN Type" (default: Ethernet)
  must be set for either Ethernet or wireless LAN.
- 3. Select "Interface Settings"> "Wireless LAN". Only the wireless LAN options show.
- 4. Set the "Communication Mode".
- 5. Enter the "SSID setting". (The setting is case sensitive.)
- 6. Set the "Ad-hoc Channel". You need this setting when Ad Hoc Mode is selected.

Range: 1-13, 36, 40, 44 and 48 channels (default: 11)

### 7. Set the "Security Method" to specify the encryption of the Wireless LAN.

 The "WEP" (Wired Equivalent Privacy) setting is designed to protect wireless data transmission. The same WEP key is required on the receiving side in order to unlock encoded data. There are 64 bit and 128 bit WEP keys.

Range of Allowed Settings:

64 bit: 10 characters

128 bit: 26 characters

- Specify "WPA2" when "Communication Mode" is set to "Infrastructure Mode". Set the "WPA2 Encryption Method" and "WPA2 Authent. Method".
  - WPA2 Encryption Method:

CCMP (AES) is fixed.

• WPA2 Authent. Method:

Select either "WPA2-PSK" or "WPA2".

If you select "WPA2-PSK", enter the pre-shared key (PSK) of 8 - 63 characters in ASCII code.

When "WPA2" are selected, authentication settings and certificate installation settings are required.

- 8. Press "Wireless LAN Signal" to check the machine's radio wave status using the operation panel.
- 9. Press "Restore Factory Defaults" to initialize the wireless LAN settings. Press "Yes" to initialize the following settings:
  - Transmission mode
  - Channel
  - Transmission Speed
  - WEP
  - SSID
  - WEP Key

### SP Mode Settings for IEEE 802.11 Wireless LAN

The following SP commands and UP modes can be set for IEEE 802.11

SP No.	Name	Function
SP5-840-011	WEP Key Select	Used to select the WEP key (Default: 00).

SP No.	Name	Function
	Name	Function
	SSID	Used to confirm the current SSID setting.
	WEP Key	Used to confirm the current WEP key setting.
UP mode	WEP Mode	Used to show the maximum length of the string that can be used for the WEP Key entry.
	WPA2 Encryption Method	Used to confirm the current WPA2 encryption setting.
	WPA2 Authent. Method	Used to confirm the current WPA2 authentication setting and pre-shared key.

# Bluetooth Interface Unit Type D

# Component Check

No.	Description	Q'ty
1	Bluetooth Interface Unit	1
-	EMC Address Sheet	1
-	CD-ROM	1
-	Caution Sheet	2
-	FCC Sheet	2




2-5-6\_002.jpg

### Installation Procedure

### **ACAUTION**

- Turn off the main power and disconnect the power supply cord.
- 1. Insert the Bluetooth unit [A] into one of the USB slots.

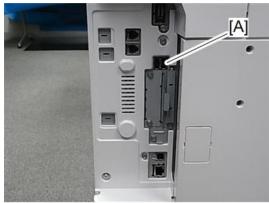


d197z1040

- 2. Plug in and turn ON the main power.
- 3. Print out the "Configuration Page", and then check if this option is correctly recognized.
  - User Tools/Counter > Printer Features > List/Test Page > Configuration Page

# File Format Converter Type E

# **Component Check**


No.	Description	Q'ty
1	File Format Converter (MLB: Media Link Board)	1
-	EMC Address Sheet	1
-	FCC Sheet	1
-	ROHS Decal Sheet	1

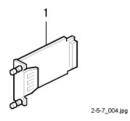

## Installation

## **ACAUTION**

- Turn off the main power and disconnect the power supply cord.
- 1. Remove the I/F slot cover [A] (@x2).

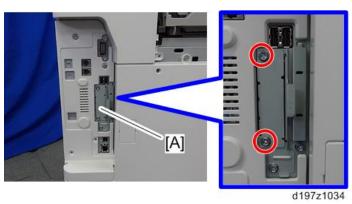

2. Install the board of the file format converter in the I/F slot [A] ( \$\mathbb{O}^{\mathbb{C}} x2 ).




- 3. Turn on the main power of the machine.
- 4. Print out the "Configuration Page", and then check if this option is correctly recognized.
  - User Tools/Counter > Printer Features > List/Test Page > Configuration Page

### 2

# **USB Device Server Option Type M12**

## **Component Check**

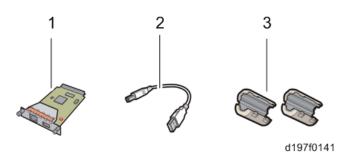


No	ltems	Q'ty
1	Interface Board	1
2	USB Cable	1
3	Ferrite Core	4

RTB 50 Item added



• An Ethernet cable is not packed with this option.

### **Interface Board Surface**

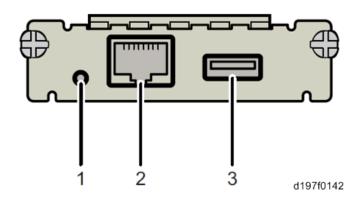

No.	ltem	Description
1	Switch	Used to reset to the factory settings.

No.	ltem	Description
2	Ethernet port	Used to connect the Ethernet cable.
3	USB port	Used to connect this option to the main machine.  Do not use this port with other options.


### Installation Procedure



• Turn off the main power and disconnect the power supply cord.

### 


- When you install this option on the main machine for the first time, the interface board must be connected directly to your PC to set up the IP address and other network settings.
- 1. Turn off the main power of the machine, and unplug the power cord from the wall socket.
- 2. Remove the interface slot cover [A] ( x 2).

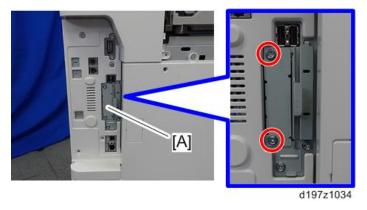


3. Install the interface board in the interface slot [A] ( $\mathfrak{S}^{r}x$  2).




4. Insert the USB cable into the USB port on this option.

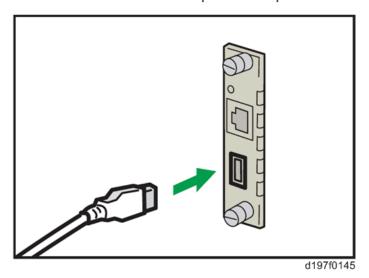

5. Insert the other side of the USB cable into the USB port B on the main machine.




• The machine shape and/or USB port location differs depending on the machine.

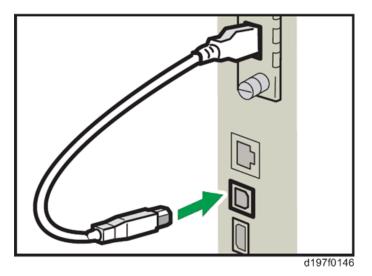


RTB 50
Step 6 has a new part added.

6. Attach the ferrite cores to the Ethernet cable, while looping the cable at 3 cm (approx. 1.2 inch) [A] from the each end of the cable.

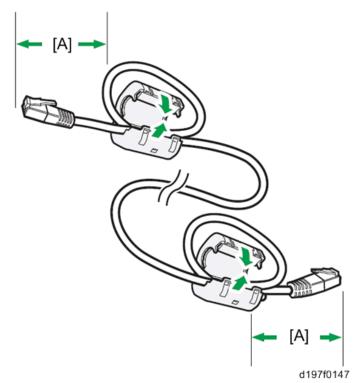



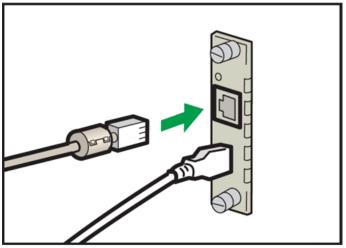

d197f0148

- 8. Insert the other end of the Ethernet cable to a PC for network setting.
- 9. Plug the power cord into the wall socket and turn on the main power of the machine.




- Do not unplug the USB cable while the machine is recognizing this option. It may take
  between 30 seconds to 1 minute to finish recognizing it (the LEDs on the Ethernet port of this
  option light up after recognizing this option; see below). If unplugged, connect the cable
  again.
- 10. Print out the "Configuration Page", and then check if this option is correctly recognized.
  - User Tools/Counter > Printer Features > List/Test Page > Configuration Page

### What Do the LED Indications Mean?

When this option is properly installed and recognized by the main machine, the LED indicators light up under the following conditions.

RTB 39 This step

was changed

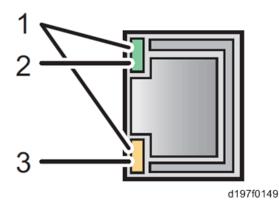

No.	Light Color	Lights Up When:
1	Green and Yellow	1000BASE-T operates
2	Green	10BASE-T operates
3	Yellow	100BASE-TX operates

### Notes for Energy Save Mode Setting

If the machine which has this option enters into the energy save mode, you cannot print because there will be a communication error. Follow the instructions below to disable the machine's entering into the energy save mode.

1. Press [Features Settings] on the operation panel.

**RTB 51** 

2. Press [Administrator Tools] in [System Settings].

This procedure is changed

- 3. Press [Energy Saver Mode to Disable Print Server].
- 4. Press [Disable Mode].
- 5. Press [OK].
- 6. Press [Features Settings].


### **IP Address Setting**

This section describes how to set an IP address on this option manually. Note that you can set an IP address which is not only on the same network segment but also on a different network segment to share a single printer with devices in multiple networks.




You cannot change the IP address for this option from the operation panel of the main machine.
 The setting must be done from a web browser on your PC.

- The network setting of this option is initially assigned as follows:
   IP address: 192.168.100.100 / Subnet mask: 255.255.255.0
- The network setting of your PC must be in the same network segment to change the network setting of this option.
- 1. Make a note of the current network settings of your PC.
- 2. Change the IP address on your PC to [192.168.100.xxx (\*0 255)].
- 3. Change the subnet mask on your PC to [255.255.255.0].
- 4. Open a web browser.
- 5. Type [http://192.168.100.100/] in the address bar.
- 6. Press the "Enter" key.




- The setting screen for this option appears.
- 7. Click [Network Setting].

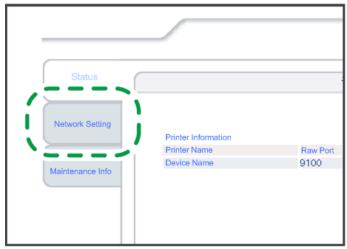

d197f0134

8. Type [root] in the user name textbox and click [OK].

9. Input [IP Address], [Subnet Mask] and [Default Gateway].

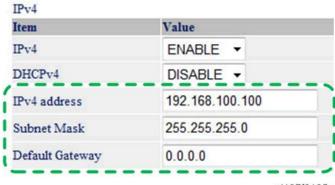


d197f0135a

- 10. Set other items if needed.
- 11. Press [Set]
- 12. Close the web browser.
- 13. Disconnect the Ethernet cable from the PC.
- 14. Connect the Ethernet cable to a network device (e.g. switching hub).
- 15. Set the IP address of this option in the printer driver which you use.

# Copy Data Security Unit Type G

# **Component Check**

No.	Description	Q'ty	For this model
1	ICIB-3	1	Yes
2	Bracket	1	Yes
3	Screws: M3x6	4	Yes
4	Small bracket	1	Not used
5	Screws: M3x4	2	Yes
6	Spacer:SQ-7	1	Not used
7	Screws: M3x8	2	Yes

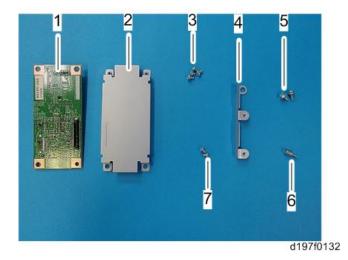


# Installation

## **ACAUTION**


• Turn off the main power and disconnect the power supply cord.

# 1. Attach the bracket [A] to the ICIB-3 [B] (\$\mathbb{G}^{\mathcal{P}}\$x2; M3 x 4).

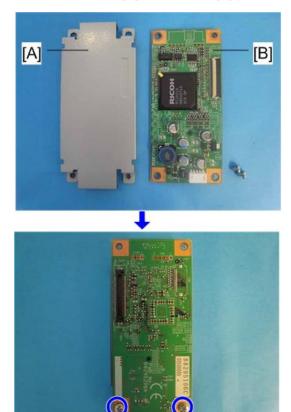


d129i303

# 1. Remove the controller cover [A] (\$\mathbb{O}^\* \times 4\$).

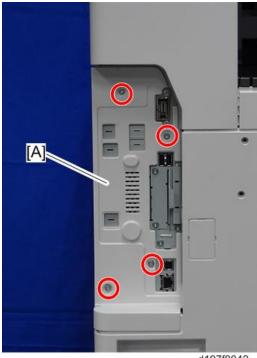

d197f0042

# 2. Remove the controller rear cover [A] ( $\mathfrak{S}^* \times 4$ ).

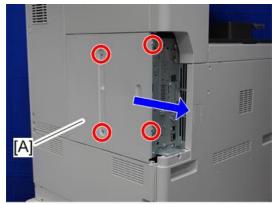

d197f0048

### 3. Attach the ICIB-3 bracket [A] to the IPU (@x2; M3 x 6).



d197z1804

4. Reassemble the machine.

### **User Tool Setting**

- 1. Plug in the machine and turn on the main power switch.
- 2. Go into the User Tools mode, and select System Settings > Administrator Tools > Copy Data Security Option > "On".
- 3. Exit User Tools.
- 4. Check the operation.



- The machine will issue an SC165 error if the machine is powered on with the ICIB-3 removed and the "Data Security for Copying" feature set to "ON".
- The machine will issue an uncertain SC165 error if ICIB-3 is defective when the machine is powered on and the "Data Security for Copying" feature is set to "OFF".
- When you remove this option from the machine, first set this feature to "OFF" with the user tool before removing this board. If you forget to do this, "Data Security for Copying" feature cannot appear in the user tool setting. Also, SC165 will appear every time the machine is switched on, and the machine cannot be used.
- 5. Make sure that the machine can recognize the option.

### 2

# Hard Disk Drive Option Type M12

# Accessory Check


No.	Description	Q'ty
1	HDD Unit	1
2	Cable	1
3	Cable	1
-	Screw	3
-	Sheet: Application: Document Server: NA	1
-	Sheet: Application: Document Server: EU	1
-	Sheet: Application: Document Server: CHN	1
-	Sheet: Application: Document Server: TWN	1
-	EMC Address Sheet	1
-	ROHS Decal Sheet	1
-	ROHS Label	1



### Installation


## **CAUTION**

- Turn off the main power and disconnect the power supply cord.
- 1. Remove the controller cover (page 419).
- 2. Remove the controller rear cover (page 422).
- 3. Connect the cables [A] [B] to the HDD [C], and then attach the HDD [C] to the bracket [D] (\$\mathscr{O}^2 x4\$).

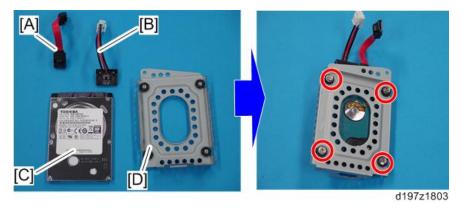

4. Connect the cables of the HDD to the controller board [A], and then hang the HDD [B] on the hook of the controller box (\$\sigma x2\$).


### 5. Secure the HDD [B] (@x3).

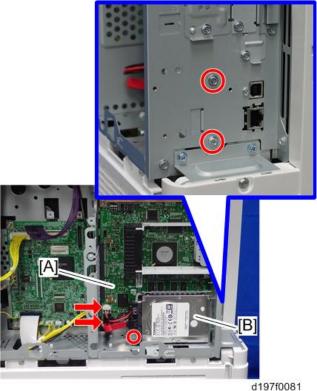

- 6. Reassemble the removed covers.
- 7. Plug the power cord and turn on the main power of the machine.
- 8. Do SP5-832-001 to format the hard disk.
- 9. Do SP5-853-001 to copy the preset stamp data from the firmware to the hard disk.
- 10. Do SP5-846-040 to copy the address book to the hard disk from the controller board.
- 11. Do SP5-846-041 to let the user get access to the address book.
- 12. Turn the main power off and on.

# **SD Card Option**

## **SD Card Slots**

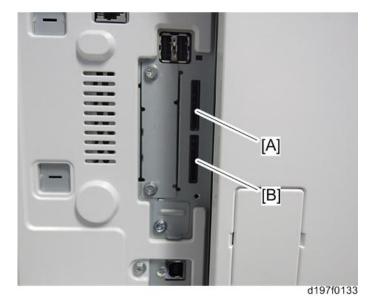

[A]: SD card slot 1 (option slot)[B]: SD card slot 2 (service slot)

### List of Slots Used

Optional SD cards can be set in either slot 1 or slot 2. However, slot 2 is the service slot, so we recommend that you use slot 1 to install the SD card options.



• In this machine, it is possible to transfer data from a "Postscript3 Unit" SD card, unlike in earlier models, due to a change in the software licensing (the part of the Postscript software that requires licensing is now built into the controller, so the portion on the SD card can be moved to another SD card).

	Option Name	Slot	Remarks
1	Printer/Scanner Options	Slot 1 (Basic model only)	When merging, the card in slot 1 acts as the destination

2

	Option Name	Slot	Remarks
2	OCR Unit Type M2		-
3	Browser Unit Type M12	Slot 1 or Slot 2	-
4	SD card for NetWare printing Type M12		-
5	PostScript3 Unit Type M12		-
6	XPS Direct Print Option Type M12		-
7	IPDS Unit Type M7		-
8	Fax Connection Unit Type M12		

# **SD Card Appli Move**

### Overview

The service program "SD Card Appli Move" (SP5-873) lets you move application programs from one SD card to another SD card.

If more than one application is required, the applications must be moved to one SD card with SP5873-1 (PostScript 3, IPDS unit, etc.).

### Be very careful when you do the SD Card Appli Move procedure:

- The data necessary for authentication is transferred with the application program from an SD card to another SD card. Authentication fails if you try to use the SD card after you move the application program from one card to another card.
- Do not use the SD card if it has been used before for other purposes. Normal operation is not guaranteed when such an SD card is used.
- Store the vacant SD card in the storage space inside the main power switch cover as shown below.



This is done for the following reasons:

- The SD card can be the only proof that the user is licensed to use the application program.
- You may need to check the SD card and its data to solve a problem in the future.

### **Move Exec**

The menu "Move Exec" (SP5-873-001) lets you move application programs from the original SD card to another SD card.

### **Important**

- Do not turn ON the write protect switch of the system SD card or application SD card on the
  machine. If the write protect switch is ON, a download error (e.g. Error Code 44) occurs during a
  firmware upgrade or application merge.
- If the printer/scanner unit or the printer unit has been installed, the destination card should be those SD cards.
- 1. Turn off the main power.
- 2. Make sure that a target SD card is in SD Card Slot 1. The application program is moved to this SD card.
- 3. Insert the source SD card with the application program in SD Card Slot 2. The application program is copied from this source SD card.
- 4. Turn on the main power.
- 5. Start the SP mode.
- 6. Select SP5-873-001 "Move Exec".
- 7. Follow the messages shown on the operation panel.
- 8. Turn off the main power.
- 9. Remove the source SD card from SD Card Slot 2.
- 10. Turn the main power on.
- 11. Check that the application programs run normally.

### **Undo Exec**

"Undo Exec" (SP5-873-002) lets you move back application programs from an SD card in SD Card Slot 1 to the original SD card in SD Card Slot 2. You can use this program when, for example, you have mistakenly copied some programs by using Move Exec (SP5-873-001).

### 

- Do not turn ON the write protect switch of the system SD card or application SD card on the
  machine. If the write protect switch is ON, a download error (e.g. Error Code 44) occurs during a
  firmware upgrade or application merge.
- 1. Turn off the main power.
- Insert the original SD card in SD Card Slot 2. The application program is copied back into this card.
- Insert the SD card with the application program in SD Card Slot 1. The application program is copied back from this SD card.
- 4. Turn on the main power.


- 5. Start the SP mode.
- 6. Select SP5-873-002 "Undo Exec."
- 7. Follow the messages shown on the operation panel.
- 8. Turn off the main power.
- 9. Remove the SD card from SD Card Slot 2.
- 10. Turn on the main power.
- 11. Check that the application programs run normally.

# OCR Unit Type M2

This option adds a searchable PDF function to the scanning function.

# Accessory Check


No.	Description	Q'ty
1	SD Card	1



d595i900b


### Installation Procedure

- 1. Turn OFF the main power.
- 2. Remove the SD card slot cover (🏵×1)

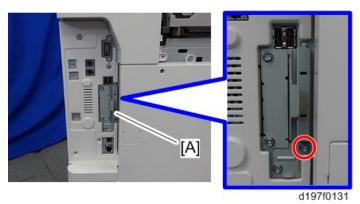

357



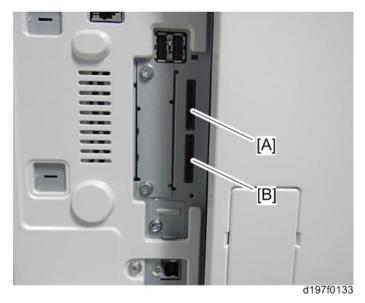

- 4. Turn on the main power.
- 5. Press "Enter" in SP5-878-004 (Option Setup: OCR Dictionary).

The SD card ID is saved in the NVRAM, and the ID of the MFP is saved on the SD card. The MFP and SD card are thereby linked.

6. When "operation complete" is displayed, press "Close".



- If installation fails, "Failed" is displayed.
- If installation fails, perform the following steps.
- 1. Check whether it is a used SD card.
- 2. Turn the main power OFF, and repeat steps 1-5.
- 7. Turn the main power OFF/ON.
- 8. Press "Enter" in SP5-878-004 (Option Setup: OCR Dictionary).

Dictionary data is copied to the HDD.



- On the first run, SP5-878-004 links the SD card, and on the second run, copies dictionary data.
- 9. Turn the main power OFF, and remove the SD card from the SD card slot.



Keep the SD card in the SD card storage location of the MFP. The original SD card is needed
in the event of a HDD malfunction.

- 10. Return the SD card slot cover to the original position.
- 11. Turn the main power ON.
- 12. Press [Send File Type / Name] on the [Scanner] screen.



w d1351739

13. Check if [OCR Settings] is displayed on the [Send File Type / Name] screen.



w\_d1351740



- After installation, the OCR setting can be changed on the "OCR setting" screen.
- When setting OCR, set [OCR setting] to [Yes]. (Default setting: [No])

# Recovery Procedure

When this option is installed, a function is saved on the HDD, and ID information on the SD card is saved in the NVRAM. Therefore, when replacing the HDD and/or NVRAM, this option must be reinstalled.

#### When storing the original SD card

When only the HDD is replaced
 Reinstall using the original SD card.

- When only the NVRAM is replaced
   When performing upload/download of NVRAM data, reinstall using the original SD card.
   When not performing upload/download of NVRAM data, order and reinstall a new SD card (service part).
- When the HDD and NVRAM are replaced simultaneously Reinstall using the original SD card.

# If the original SD card is lost

Order and reinstall a new SD card (service part).



• Perform reinstallation in the same way as installation.

# **Browser Unit Type M12**

# **Component Check**

No.	Description	Q'ty
1	SD Card	1



d595i900b


#### Installation Procedure

The browser unit uses a native application such as a full browser in order to improve web browsing.

Also, to provide a solution utilizing the web as in previous machines, Extended JavaScript is also provided as an SDK application.

Due to the above, the browser unit for this model has two firmware modules, native application firmware, and Type-C application EXJS firmware.

The browser for these models is not installed in the HDD, therefore it must be operated with the SD card inserted in order to start up using the data on the SD card.

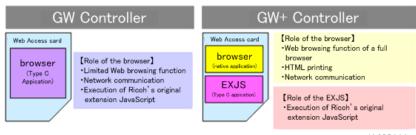


w\_d1463111




• In addition to link-up with the conventional Scan Router and MFP, the browser unit has the following functions.

- For scanning, arbitrary distribution types and preset values are selected/set and delivered.
- Mail is delivered (login transmission) to an address previously set in the profile of the user who
  logged in.
- 1. Turn the main power OFF.
- 2. Remove the SD card slot cover (5°×1).

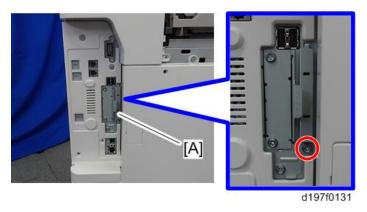

3. Insert the browser unit SD card in SD card slot 1 [A] or slot 2 [B].

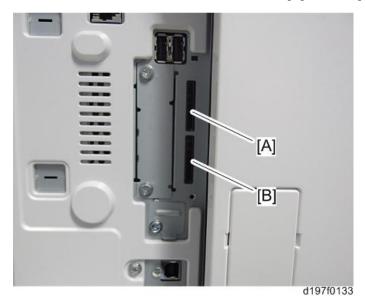


- 4. Turn the main power ON.
- 5. Press the [Default setting/Counter] key.
- 6. Press the [Extension function default setting] button.
- 7. Press the [Extension function default setting] button on the [Extension function default menu setting] screen.

- 8. On the [Startup setting] tab, check that "Extended JS" was installed automatically and has started.
- 9. Turn the main power OFF/ON.
- 10. Perform the merge operation if necessary (page 354).
  - 1. Turn the main power OFF after completing the merge operation.
  - 2. Remove the empty SD card from SD card slot 2.
- 11. Reattach the cover and turn on the main power.
- 12. Press the [Default setting/Counter] key.
- 13. Press the [Home editing] button.
- 14. Press the [Add icon] button.
- 15. Press the [Browser] button displayed on the "Application" tab.
- 16. Select the position at which [Blank] is displayed, and press the [OK] button.
- 17. Check that the [Browser] icon has been added to the Home screen.

#### To update EXJS

1. Put the SD card containing the firmware of the browser application to update with in SD card slot 2 [B], and then turn on the main power.

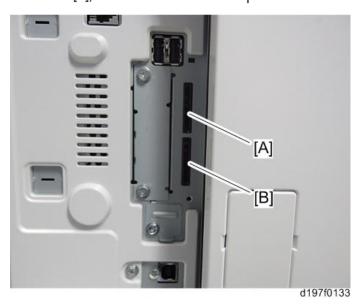

- 2. Wait until the update screen starts.
- When the update screen is displayed, select [Browser], and press the [Update (#)] button.

4. When "Update done." is displayed, turn the main power OFF, and remove the SD card from SD card slot 2.

When updating Extension JavaScript, add the following steps.

- 5. Turn the main power ON.
- 6. Press the [Default setting/counter] key.
- Press the [Extension function default setting] button.
- Press the [Extension function default setting] button on the [Extension function default menu setting] screen.
- 9. Stop "Extended JS" on the "Startup setting" condition with a tab.
- 10. Turn the main power OFF.
- 11. Insert the Extended JavaScript upgrade SD card in SD card slot 2.
- 12. Turn the main power ON.
- 13. Press the [Default setting/counter] key.
- 14. Press the [Extension function default setting] button.
- Press the [Extension function default setting] button on the [Extension function default menu setting] screen.
- 16. Press the [Install] tab.
- 17. Press [SD card], and select "Extended JS" from the list of extension functions.
- 18. Select [MFP hard disk] as the installation location, and press [Next].
- After checking extension function information on the "Installation preparation complete" screen, press the [Enter] button.
- 20. "The following extension functions are already installed. The message "Overwrite extension function?" is displayed. Press the [Continue] button.
- 21. When installation is complete, the message "Extension function has been installed" is displayed. Press the [OK] button.
- 22. On the "Startup settings" tab, set [Extended JS] to the startup standby state, and turn the main power OFF.
- 23. Remove the SD card from SD card slot 2, and return the SD slot cover.
- 24. Turn the main power ON.
- 25. Press the [Default setting/counter] key.
- 26. Press the [Extension function default setting] button.
- Press the [Extension function default setting] button on the [Extension function default menu setting] screen.
- 28. Check the version of [Extended JS] on the "Startup settings tab" is the latest version.



- If the power is ON before starting Step 1, turn the main power OFF after first performing Steps 5-9, and perform Step 1 and subsequent steps. In that case, skip Steps 5-10. (This saves time.)
- If you do not plan to update Extension JavaScript, return the SD slot cover to the original position after performing Step 5.

## When checking the version of EXJS

- 1. Turn the main power ON.
- 2. Press the [Default setting/counter] key.
- 3. Press the [Extension function default setting] button.
- Press the [Extension function default setting] button on the [Extension function default menu setting] screen.
- 5. Check the version of [Extended JS] on the "Startup settings tab" is the latest version.



• If checked apart from the above procedure (firmware version displayed in system default settings), a different version from the actual version may be displayed.

#### Browser unit uninstallation procedure

EXIS uninstallation procedure

- 1. Turn the main power ON.
- 2. Press the [Default settings/counter] key.
- Press the [Login/Logout] key, and log in with an administrator account (login user name, login password).
- 4. Press [Extension function default setting], and when the screen changes, press [Extension function default setting] again.
- 5. Press the [Uninstall] tab.
- 6. When "Browser" is pressed, a message screen is displayed, press [Continue].
- 7. When a message reconfirming uninstallation is displayed, press [Continue].
- 8. When the message "Extended functions have been uninstalled", press [Confirm] and the display returns to the setting screen.
- 9. Close [Default settings/counter] settings, and turn OFF the main power.



 Uninstall is not completed before removing the SD card. This is because the SD card has the browser application data.

# Browser default setting

Register the browser default settings. For details, refer to the following.

- 1. Turn ON the main power.
- 2. Press the [Default settings/counter] key.
- 3. Press the [Browser default settings] button.
- 4. Press the [Home screen] button on the "Browser Settings" tab.
- 5. Press the [URL input] button.
- 6. Input the URL, and press the [OK] button.
- 7. Press the [Settings] button.
- 8. Press the [End] button twice, and finish.

2

### 2

# SD card for NetWare printing Type M12

# **Component Check**


No.	Description	Q'ty
1	SD Card	1
-	EMC Address Sheet	1
-	ROHS Decal Sheet	1
-	ROHS Label	1



d595i900b


# Installation Procedure

- 1. Turn OFF the main power.
- 2. Remove the SD card slot cover ( \*x1)

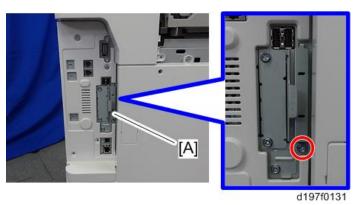

367



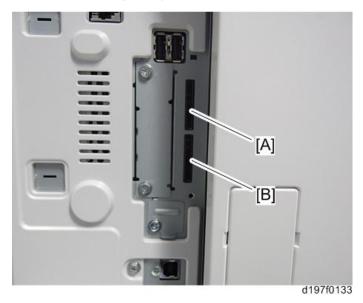

- 4. Perform the merge operation if necessary (page 354).
- 5. Attach the SD card slot cover (5°×1).
- 6. Turn ON the main power.
- 7. Print out the "Configuration Page", and then check if this option is correctly recognized.
  - User Tools/Counter > Printer Features > List/Test Page > Configuration Page

#### 2

# PostScript3 Unit Type M12

# Component Check


No.	Description	Q'ty
1	SD Card	1
-	PS3 Decal	1



d595i900b


# Installation procedure

- 1. Turn the main power OFF.
- 2. Remove the SD card slot cover [A] ( \*x1)

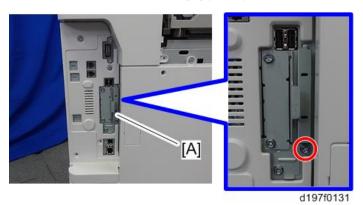

369



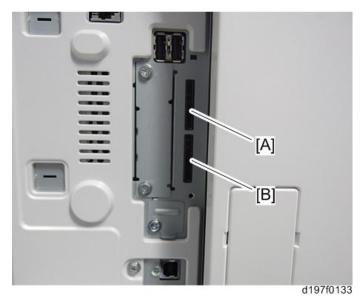

- 4. If necessary, perform the merge operation. (page 354)
- 5. Reattach the SD card slot cover ( \*1).
- 6. Stick the "Adobe PostScript3" decal on the front face of the MFP.
- 7. Turn ON the main power.
- 8. Print out the "Configuration Page", and then check if this option is correctly recognized.
  - User Tools/Counter > Printer Features > List/Test Page > Configuration Page




- The PDF firmware installed as standard contains a program required to print PS3 data as default.
   However, this PS3 program is normally disabled.
- The PS3 firmware is a dongle (key) which enables PS3 data printing functions. When the PS3 firmware is installed, the PS3 program in the PDF firmware is enabled. Due to this specification, the self-diagnosis result report shows the ROM part number/software version of the PDF firmware contained in the PS3 program.

# **XPS Direct Print Option Type M12**

# **Component Check**

Check the quantity and condition of the accessories in the box against the following list and diagram.


No.	Description	Qty
1	XPS Direct Print SD Card	1



d595i900b


# Installation Procedure

- 1. Turn off the main power.
- 2. Remove the SD card slot cover [A] (©x 1).

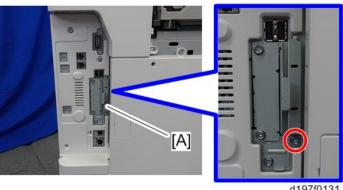

d197f0131

3. Slowly, insert the XPS SD card in Slot 1 with its label face towards the front of the machine.

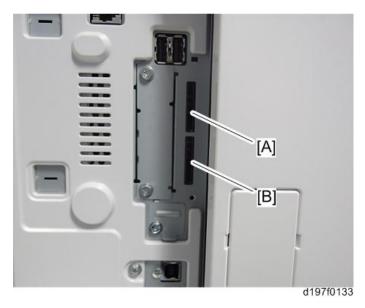


- 4. Perform the merge operation if necessary (page 354).
- 5. Attach the SD card slot cover (@x 1).
- 6. Turn on the machine.
- 7. Print out the "Configuration Page", and then check if this option is correctly recognized.
  - User Tools/Counter > Printer Features > List/Test Page > Configuration Page

# IPDS Unit Type M12

# Accessories

Check the accessories and their quantities against the table below.

No.	Description	Q'ty
1	IPDS Emulation SD Card	1
-	Decal	1
-	EULA Sheet	1
-	Caution Sheet	1
-	CD-ROM	1




d595i900b


# Installation

1. Turn the main power OFF.

# 2. Remove the SD card slot cover [A] ( \*x1)

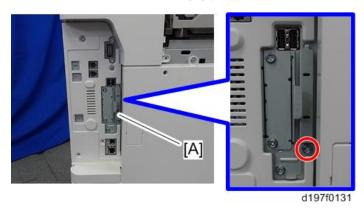

3. Insert the IPDS SD card in SD card slot 1 [A] or 2 [B].

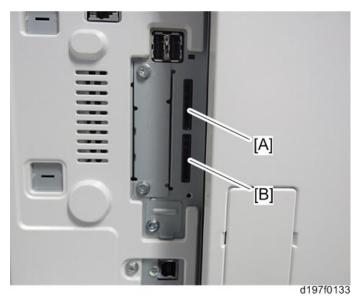

- 4. Turn the main power ON.
- 5. Perform the merge operation if necessary (page 354).
  - 1. Switch the power OFF after completing the merge operation.
  - 2. Remove the empty SD card from SD card slot 2.
- 6. Reattach the cover.
- 7. Do one of the following ("A" or "B") to enable the IPDS function.

## A. [Enable the IPDS function via telnet]


- 1. Connect the machine via telnet.
- 2. Execute the following commands:

msh> set ipds up

\* \* \* If you want to stop the function.

## msh> set ipds down

- B. [Enable the IPDS option via WebImageMonitor]
- 1. Log in to WeblmageMonitor.
- 2. Change the setting to enable IPDS.
- 8. Attach the decal [A] as shown below.
  - Line up the left side of the decal with the left edge of the main power switch. ([B]: 10 mm or more)

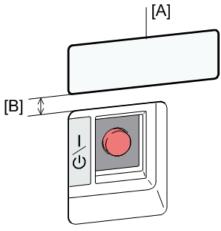

d1829012

- 9. Print out the "Configuration Page", and then check if this option is correctly recognized.
  - User Tools/Counter > Printer Features > List/Test Page > Configuration Page

# External Keyboard Bracket Type M3 (D739-10)

# Component Check

Description	Q'ty
Keyboard Stand Bracket	1
Keyboard Stand	1
Screw: M4 x 12	2
Screw: M3 x 8	4
Screw: M3 x 12	1
ROHS Decal Sheet	1
ROHS Label	1


# Installation Procedure

- 1. Open the right cover.
- 2. Remove the main power switch cover [A] ( \*\mathbb{O}" \times 1, hooks).




d1462021

3. Remove the screw [A] on the frame of the machine.

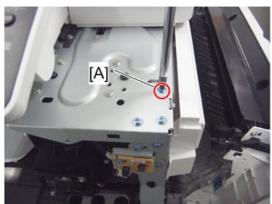


d739z0601

4. Make 3 screw holes [A] in the main power switch cover, and then reattach it to the machine (@x1, hooks).

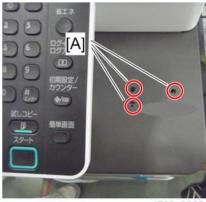


d739z0602

5. Attach the keyboard stand bracket [A] on the main power switch cover (  $\ensuremath{\mathfrak{D}}$  x3).

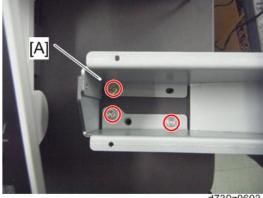


d739z0603



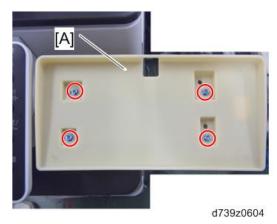

- 7. Place a keyboard [A] on the keyboard stand, and then pass the keyboard cable through the hole [B] in the keyboard stand.
- 8. Scanner rear cover [A] (@×3)

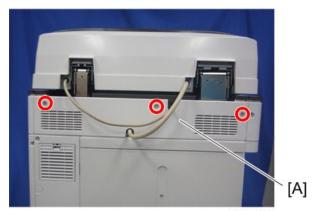

d1462016

# 9. Scanner right cover [A] ( \*x1)




d1462300

10. Route the keyboard cable along the right side of the scanner unit as shown below.




- 11. Route the keyboard cable along the rear side of the scanner unit (\$\varphi x 1).
- 12. Adjust the keyboard cable by making loops if the keyboard cable has too much slack.

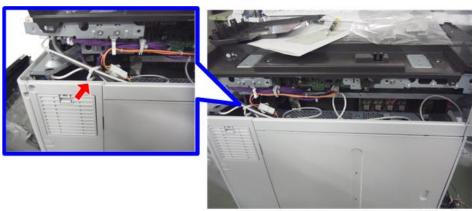

d1463021a

13. Remove the cutout [A] in the left rear cover to make a cable hole, and then pass the keyboard cable [B] through it.

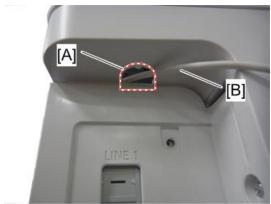

d1463019a

14. Connect the keyboard cable to the USB slot.



d1463020

- 15. Reattach the scanner right cover [A] (\$\mathbb{O}^{\mathbb{O}} \times 1).
- 16. Reattach the scanner rear cover [A] (\$\mathbb{O}^{\times} \times 3).
- 17. Close the right cover.

# Data Overwrite Security Unit Type I (D362)

#### Overview


This option should be installed only for the customer who requires the CC certified Data Overwrite Security function.

The function of this option is completely the same as the Data Overwrite Security in Security Functions, which is standard on this machine.

## **Component List**

Check the quantity and condition of the accessories in the box against the following list.

No.	Description	Q'ty
1.	SD Card	1



d1351921

# Before You Begin the Procedure

1. Confirm that the Data Overwrite Security unit SD card is the correct type for the machine. The correct type for this machine is "Type I".



- If you install any version other than "Type I", you have to replace the NVRAM and do this
  installation procedure again.
- 2. Make sure that the following settings are not at their factory default values:
  - Supervisor login password
  - · Administrator login name

• Administrator login password

If any of these settings is at a factory default value, tell the customer these settings must be changed before you do the installation procedure.

3. Make sure that "Admin. Authentication" is ON.

[System Settings] – [Administrator Tools] – [Administrator Authentication Management] - [Admin. Authentication]

If this setting is OFF, tell the customer this setting must be ON before you do the installation procedure.

4. Make sure that "Administrator Tools" is enabled (selected).

[System Settings] – [Administrator Tools] – [Administrator Authentication Management] - [Available Settings]


If this setting is disabled (not selected), tell the customer this setting must be enabled (selected) before you do the installation procedure.

#### Seal Check and Removal

# **ACAUTION**


- You must check the box seals to make sure that they are not removed after the items have been sealed in the box at the factory before you do the installation.
- 1. Check the box seals [A] on each corner of the box.
  - Make sure that a tape is attached to each corner.
  - The surfaces of the tapes must be blank. If you see "VOID" on the tapes, do not install the components in the box.
- 2. If the surfaces of the tapes do not show "VOID", remove them from the corners of the box.

3. You can see the "VOID" marks [B] when you remove each seal. In this condition, they cannot be attached to the box again.

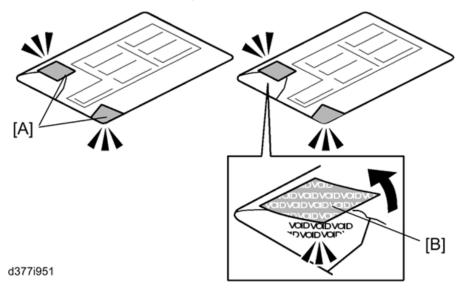


# **Installation Procedure**

- 1. Turn the main power OFF.
- 2. Remove the SD card slot cover (@x1)

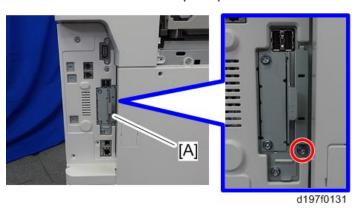

3. Insert the SD card (DataOverwriteSecurity Unit) in SD slot 1 (upper) [A] with its label face towards the front of the machine. Then push it slowly into SD slot 1 (upper) until you hear a click.

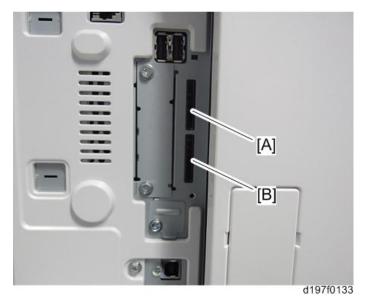

4. Install the application using SP5-878-001.

# **Security Setting**

# **Security Function Installation**

The machine contains the Security functions (Data Overwrite Security and HDD Encryption unit) in the controller board.

If you are installing a new machine, it is recommended to activate the Data Overwrite Security and HDD Encryption by selecting "Format All Data" from "System Settings" on the operation panel.



 This method is recommended because there is no user data on the hard drive yet (Address Book data, image data, etc.).

If the customer wishes to activate the Data Overwrite Security and HDD Encryption unit on a machine that is already running, it is recommended to activate the unit by selecting "All Data" from "System Settings" on the operation panel.



 Selecting "All Data" will preserve the data that has already been saved to the HDD. (If "Format All Data" is selected, all user data saved to the HDD up to that point will be erased).

Immediately after encryption is enabled, the encryption setting process will take several minutes to complete before you can begin using the machine.



• If encryption is enabled after data has been stored on the HDD, or of the encryption key is changed, this process can take up to three and a half hours or more.

The machine cannot be operated while data is being encrypted.

Once the encryption process begins, it cannot be stopped.

Make sure that the machine's main power is not turned off while the encryption process is in progress.

If the machine's main power is turned off while the encryption process is in progress, the HDD will be damaged and all data on it will be unusable.

Print the encryption key and keep the encryption key (which is printed as a paper sheet).

Keep the encryption key in a safe place. If the encryption key is lost and is needed, the controller board, HDD and NVRAM must all be replaced at the same time.



- "NVRAM" mentioned in here means the NVRAM on the Controller Board.
- "NVRAM" or EEPROM on the BCU has nothing to do with this.

Please use the following procedure when the Data Overwrite Security and HDD Encryption are reinstalled.

# **Data Overwrite Security**

## Before You Begin the Procedure

- 1. Make sure that the following settings (1) to (3) are not at their factory default values.
  - (1) Supervisor login password
  - (2) Administrator login name
  - (3) Administrator login password

If any of these settings is at a factory default value, tell the customer these settings must be changed before you do the installation procedure.

2. Make sure that "Admin. Authentication" is on.

[System Settings] -> [Administrator Tools] -> [Administrator Authentication Management] -> [Admin. Authentication]

If this setting is off, tell the customer this setting must be on before you do the installation procedure.

3. Make sure that "Administrator Tools" is enabled (selected).

[System Settings] -> [Administrator Tools] -> [Administrator Authentication Management] -> [Available Settings]


If this setting is disabled (not selected), tell the customer this setting must be enabled (selected) before you do the installation procedure.

# **Using Auto Erase Memory**

The Auto Erase Memory function can be enabled by the following procedure.

- 1. Log in as the machine administrator from the control panel.
- 2. Press [System Settings].
- 3. Press [Administrator Tools].
- 4. Press [Next] three times.

5. Press [Auto Erase Memory Setting].

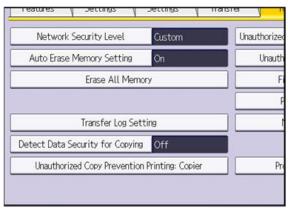

w d1822517

- 6. Press [On].
- 7. Select the method of overwriting.


If you select [NSA] or [DoD], proceed to step 10.

If you select [Random Numbers], proceed to step 8.


- 8. Press [Change].
- 9. Enter the number of times that you want to overwrite using the number keys, and then press [#].
- 10. Press [OK]. Auto Erase Memory is set.
- 11. Log out.
- 12. Check the display and make sure that the overwrite erase icon appears.
- 13. Check the overwrite erase icon.

The icon [1] is lit when there is temporary data to be overwritten, and blinks during overwriting.

The icon [2] is lit when there is no temporary data to be overwritten.

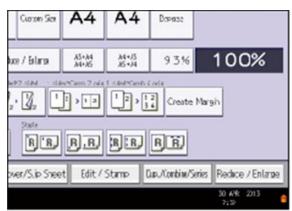

w d1822516

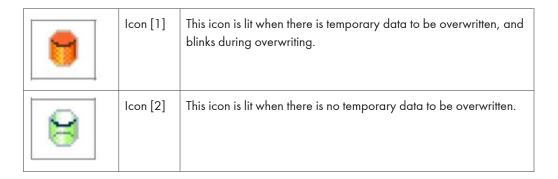

# **HDD Encryption**

#### Before You Begin the Procedure:

- 1. Make sure that the following settings (1) to (3) are not at the factory default settings.
  - (1) Supervisor login password
  - (2) Administrator login name
  - (3) Administrator login password

If any of these settings is at a factory default value, tell the customer these settings must be changed before you do the installation procedure.

Confirm that "Admin. Authentication" is on: [User tools/Counter] key - [System Settings] - [Administrator Tools] - [Administrator Authentication Management] - [Admin. Authentication] - [On]

If this setting is off, tell the customer that this setting must be on before you can do the installation procedure.

3. Confirm that "Administrator Tools" is selected and enabled.

[User tools/Counter] key - [System Settings] - [Administrator Tools] - [Administrator Authentication Management] - [Available Settings]

"Available Settings" is not displayed until step 2 is done.


If this setting is not selected, tell the customer that this setting must be selected before you can do the installation procedure.

## **Enable Encryption Setting**

Machine Data Encryption Settings can be enabled by the following procedure.




- When setting up encryption, specify whether to start encryption after deleting data (initialize) or encrypt and retain existing data. If data is retained, it may take some time to encrypt it.
- 1. Turn on the main power.
- 2. Log in as the machine administrator from the control panel.
- 3. Press [System Settings].
- 4. Press [Administrator Tools].
- 5. Press [Next] three times.
- 6. Press [Machine Data Encryption Settings].

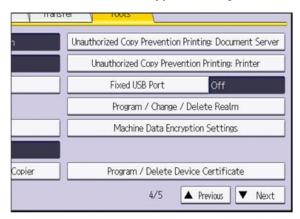

w\_d1822518

# 7. Press [Encrypt].

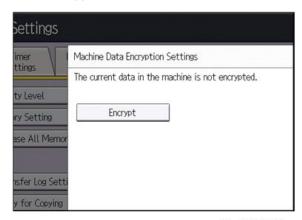

w\_d1822519

8. Select the data to be carried over to the HDD and not be reset.

To carry all of the data over to the HDD, select [All Data].

To carry over only the machine settings data, select [File System Data Only].

To reset all of the data, select [Format All Data].

#### 9. Select the backup method.

If you have selected [Save to SD Card], load an SD card into the media slot on the side of the control panel and press [OK] to back up the machine's data encryption key.


If you have selected [Print on Paper], press the [Start] key. Print out the machine's data encryption key.

- 10. Press [OK].
- 11. Press [Exit].
- 12. Press [Exit].
- 13. Log out.
- 14. Turn off the main power, and then turn the main power back on.

The machine will start to convert the data on the memory after you turn on the machine. Wait until the message "Memory conversion complete. Turn the main power switch off." appears, and then turn the main power off again.

#### Check the Encryption Settings

- 1. Press the [User tools/Counter] key.
- 2. Press [System Settings].
- 3. Press [Administrator Tools].
- 4. Press [Machine Data Encryption Settings].
- 5. Confirm whether the encryption has been completed or not on this display.

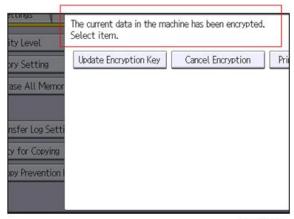

w\_d1822520

## **Backing Up the Encryption Key**

The encryption key can be backed up. Select whether to save it to an SD card or to print it.



- The encryption key is required for data recovery if the machine malfunctions. Be sure to store the
  encryption key safely for retrieving backup data.
- 1. Log in as the machine administrator from the control panel.
- 2. Press [System Settings].
- 3. Press [Administrator Tools].
- 4. Press [Next] three times.
- 5. Press [Machine Data Encryption Settings].
- 6. Press [Print Encryption Key].



w\_d1822515

#### 7. Select the backup method.

If you have selected [Save to SD Card], load an SD card into the media slot on the side of the control panel and press [OK]; once the machine's data encryption key is backed up, press [Exit]. If you have selected [Print on Paper], press the [Start] key. Print out the machine's data encryption key.

- 8. Press [Exit].
- 9. Log out.

#### **Encryption Key Restoration**

#### How to restore the old encryption key to the machine

The following message appears after the controller board is replaced. In such a case, it is necessary to restore the encryption key to the new controller board.

SD card for restoration is required.

Turn the main power switch off and set the SD card, then turn the main power switch on.

d1420101

To do this, follow the procedure below.

- 1. Prepare an SD card that has been initialized in FAT16 format.
- 2. Using a PC, create a folder in the SD card and name it "restore\_key".
- 3. Create a folder in the "restore\_key" folder and name it the same as machine's serial number, "xxxxxxxxxxx" (11 digits).
- Create a text file called "key\_xxxxxxxxxxxxxt" and save it in the "xxxxxxxxxx" folder. Write the encryption key in the text file.

/restore\_key/xxxxxxxxxxx/key\_xxxxxxxxxxxxtxt



- Ask an Administrator to enter the encryption key. The key has already been printed out by the
  user and may have been saved in the "key\_xxxxxxxxxxxxxxtt" file. (The function of back-up the
  encryption key to the SD card directly is provided 11A products or later.)
- 5. Turn on the machine's main power.
- Confirm that a message is displayed on the LCD telling to insert the SD card that contains the encryption key.
- 7. Turn off the main power.
- 8. Insert the SD card that contains the encryption key into SD card slot 2 (the lower slot).
- 9. Turn on the main power.



- The machine will automatically restore the encryption key to the flash memory on the controller board.
- 10. Turn off the main power when the machine has returned to normal status.
- 11. Remove the SD card from SD card slot 2.

How to do a forced start up with no encryption key

If the encryption key back-up has been lost, follow the procedure below to do a forced start-up.



- The HDD will be formatted after the forced start-up.
- Encrypted data will be deleted.
- User settings will be cleared.

- 1. Prepare an SD card.
- 2. Create a directory named "restore\_key" inside the root directory of the SD card. Then, save the "nvram\_key.txt" file using the following name:

/restore\_key/nvram\_key.txt

3. Create a text file and write "nyclear".



- Write this string at the head of the file.
- Use all lower-case letters.
- Do not use quotation marks or blank spaces.
- It is judged that a forced start has been selected when the content of "nvclear" is executed and
  the machine shifts to the alternate system (forced start).
- 4. Confirm that a message is displayed on the LCD telling to insert the SD card that contains the encryption key.
- 5. Turn off the main power.
- 6. Insert the SD card that contains the encryption key into SD card slot 2 (the lower slot).
- 7. Turn on the main power.
- 8. Turn on the main power switch, the machine automatically clear the HDD encryption.
- 9. Turn off the main power when the machine has returned to normal status.
- 10. Remove the SD card from SD card Slot 2.
- 11. Turn on the main power.
- 12. Memory clear SP5-801-xx (Exclude SP-5-801-001: All Clear and SP-5-801-002: Engine), and clear SP5-846-046: address book.
- 13. Set necessary user settings in User Tools key.

# **@Remote Settings**



 Prepare and check the following check points before you visit the customer site. For details, ask the @Remote key person.

#### Check points before making @Remote settings

- 1. The setting of SP5816-201 in the mainframe must be "0".
- Print the SMC with SP5990-002 and then check if a device ID2 (SP5811-003) must be correctly programmed.
  - 6 spaces must be put between the 3-digit prefix and the following 8-digit number (e.g. xxx xxxxxxxx).
  - ID2 (SP5811-003) and the serial number (SP5811-001) must be the same (e.g. ID2:
     A01\_\_\_\_\_23456789 = serial No. A0123456789)
- 3. The following settings must be correctly programmed.
  - Proxy server IP address (SP5816-063)
  - Proxy server Port number (SP5816-064)
  - Proxy User ID (SP5816-065)
  - Proxy Password (SP5816-066)
- 4. Get a Request Number

#### Execute the @Remote Settings

- 1. Enter the SP mode.
- 2. Input the Request number which you have obtained from @Remote Center GUI, and then enter [OK] with SP5816-202.
- 3. Confirm the Request number, and then click [EXECUTE] with SP5816-203.
- 4. Check the confirmation result with SP5816-204.

Value	Meaning	Solution/Workaround
0	Succeeded	-
3	Communication error (proxy enabled)	Check the network condition.
4	Communication error (proxy disabled)	Check the network condition.
5	Proxy error (authentication error)	Check Proxy user name and password.

Value	Meaning	Solution/Workaround
6	Communication error	Check the network condition.
8	Other error	See "SP5816-208 Error Codes" below this.
9	Request number confirmation executing	Processing Please wait.
11	Already registered	-
12	Parameter error	-
20	Dial-up authentication error	
21	Answer tone detection error	
22	Carrier detection error	
23	Invalid setting value (modem)	* These errors occur only in the modems that support @Remote.
24	Low power supply current	
25	unplugged modem	
26	Busy line	

- 5. Make sure that the screen displays the Location Information with SP5816-205 only when it has been input at the Center GUI.
- 6. Click [EXECUTE] to execute the registration with SP5816-206.
- 7. Check the registration result with SP5816-207.

Value	Meaning	Solution/Workaround
0	Succeeded	-
1	Request number error	Check the request number again.
2	Already registered	Check the registration status.
3	Communication error (proxy enabled)	Check the network condition.
4	Communication error (proxy disabled)	Check the network condition.
5	Proxy error (Authentication error)	Check Proxy user name and password.

Value	Meaning	Solution/Workaround
8	Other error	See "SP5816-208 Error Codes" below this.
9	Request number confirmation executing	Processing Please wait.
11	Already registered	-
12	Parameter error	-
20	Dial-up authentication error	
21	Answer tone detection error	
22	Carrier detection error	
23	Invalid setting value (modem)	* These errors occur only in the modems that support @Remote.
24	Low power supply current	
25	unplugged modem	
26	Busy line	

### 8. Exit the SP mode.

### SP5816-208 Error Codes

Caused by Operation Error, Incorrect Setting

Code	Meaning	Solution/Workaround
-12002	Inquiry, registration attempted without acquiring Request No.	Obtain a Request Number before attempting the Inquiry or Registration.
-12003	Attempted registration without execution of a confirmation and no previous registration.	Perform Confirmation before attempting the Registration.
-12004	Attempted setting with illegal entries for certification and ID2.	Check ID2 of the mainframe.
-12005	@Remote communication is prohibited. The device has an Embedded RC gate-related problem.	Make sure that "Remote Service" in User Tools is set to "Do not prohibit".
-12006	A confirmation request was made after the confirmation had been already completed.	Execute registration.

Code	Meaning	Solution/Workaround
-12007	The request number used at registration was different from the one used at confirmation.	Check Request No.
-12008	Update certification failed because mainframe was in use.	Check the mainframe condition. If the mainframe is in use, try again later.
-12009	The ID2 in the NVRAM does not match the ID2 in the individual certification.	Check ID2 of the mainframe.
-12010	The certification area is not initialized.	Initialize the certification area.

### Error Caused by Response from GW URL

Code	Meaning	Solution/Workaround
-2385	Other error	
-2387	Not supported at the Service Center	
-2389	Database out of service	
-2390	Program out of service	
-2391	Two registrations for the same mainframe	Check the registration condition of the mainframe
-2392	Parameter error	
-2393	External RCG not managed	
-2394	Mainframe not managed	
-2395	Box ID for external RCG is illegal.	
-2396	Mainframe ID for external RCG is illegal.	
-2397	Incorrect ID2 format	Check the ID2 of the mainframe.
-2398	Incorrect request number format	Check the Request No.

## **Operation Guidance for Users**

Function/Operation	Instruction to provide		
Basic machine functions, operations	<ul> <li>How to load the toner bottle</li> <li>How to load paper and other consumables/supplies</li> <li>How to turn the main power switch ON/OFF</li> <li>How to clear paper jams</li> <li>How to program, modify, and delete Address Book entries</li> <li>How to customize the UI and home screen</li> <li>Overview of machine options/peripherals</li> <li>How to take the proper action for SC errors (clearing the error, contacting service and support, etc.), how to interpret @Remote notifications</li> <li>Important notes to keep in mind whenever moving the machine</li> <li>Product limitations</li> </ul>		
Copier	<ul> <li>Basic Copier operations</li> <li>How to load an original in the ARDF or place it on the exposure glass for scanning</li> <li>How to use thick paper and other specialized paper/media</li> <li>How to configure the Copier main screen (duplex/simplex, auto color selection, User Codes, etc.)</li> <li>Basic Document Server operations</li> </ul>		
Fax (when installed)	How to send a fax (Memory Transmission, Direct Transmission)		
Printer (when installed)	<ul> <li>How to install printer drivers (using the recommended method)</li> <li>How to connect to a PC (performing the port settings)</li> <li>How to print out a test page</li> <li>Overview of various settings inside each tab in the printer driver (e.g. duplex printing)</li> </ul>		
Scanner (when installed)	How to install printer drivers (using the recommended method) How to connect to a PC and perform a test scan		

## 3. Preventive Maintenance

## **Preventive Maintenance Tables**

See "Appendices" for the following information:

• Preventive Maintenance Tables

### Resolution

Item	Specification	Chart	Measuring method
Copy (100%/ Enlargement), Black and White (1C)	Ave 5.0 lines/mm or more Min 4.5 lines/mm or more	Book: S-5 (revised)	Copy onto plain paper using Auto Image Density/5 notches and then determine resolution.
Copy (Reduction), Black and White (1C)	Min 4.5×M lines/mm or more	DF: S-5Y (revised)	d1354027

## Magnification ratio error margin

**Image Quality Standards** 

Item	Specification	Chart	Measuring method	
Engine, Main Scan, Black and White (1C)	±0.50% or less	Mono_CCD	Copy the scale and compare it with the scale at 100 mm to see if it is within specification.  Leave the sheet for 3 minutes or more after it has been	
Engine, Sub Scan, Black and White (1C)	±0.50% or less	Scale chart		
Copy (100%), Main Scan, Black and White (1C)	±0.80% or less		output before measuring.	
Copy (100%), Sub Scan, Black and White (1C)	±1.00% or less			
Copy (Reduction), Main Scan/Sub Scan, Black and White (1C)	±1.00% or less			d1354028
Copy (Enlargement), Main Scan/Sub Scan, Black and White (1C)	±1.00% or less		The swelling/shrinkage of paper caused by humidity are excluded.  First side of the sheet only.	

## Magnification ratio error margin deviation

ltem	Specification	Chart	Measuring method
Copy (100% / Enlargement / Reduction), Black and White (1C)	1.00% or less	Scale chart	Leave the sheet for 3 minutes or more after it has been output before measuring.

### Pitch error margin

ltem	Specification	Chart	Measuring method
Engine, Black and White(1C)	1.50% or less	Mono_CCD	For a line of about 1/2 inch in length.

## Perpendicularity

ltem	Specification	Chart	Measuring method
Engine, Black and White(1C)	±1.25mm/200mm or less (90° ± 0.35°)	Mono_CCD	Measure with the full length and width of the image.
Copy (100%), Black and White (1C)	±1.75mm/200mm or less (90° ± 0.5°)	Scale chart	

ltem	Specification	Chart	Measuring method
Engine, Black and White(1C)	±0.20mm/100mm or less	Mono_CCD	Measure with the full length and width of the image.
Copy, Black and White (1C)	±0.50mm/100mm or less	Scale chart	1. Inner line 2. 100mm 3. Base line 4. Copy 5. 100mm 6. 0.5mm

### Parallelism

ltem	Specification	Chart	Measuring method
Engine, Black and White(1C)	± 1.8mm or less	Mono_CCD	Measure with the full length and width of the image.

## Missing Image Area

ltem	Specification	Chart	Measuring method	
Engine/Copy (leading edge), Black and White(1C)	4.2±1.5%		Since there is a variability of	
Engine/Copy (left/ right), Black and White(1C)	0.5 to 4.0mm	Trim	Trim about 1 mm in sheets of pap size of the she	about 1 mm in the sizes of sheets of paper, correct the size of the sheet before
Engine/Copy (trailing edge), Black and White(1C)	0.5 to 6.0mm (Duplex: 3.0 to 6.0mm)		measuring.	

## Margin position

ltem	Specification	Chart	Measuring method
Engine (simplex), Main Scan/Sub Scan, Black and White (1C)	O±1.5mm	Mono_CCD	
Engine (duplex), Main Scan/Sub Scan, Black and White (1C)	0±3mm		

# Paper Transfer Quality Standards

### Registration

ltem	Specification	Note
Simplex (1st print side), 100% or reduction	0±2mm (Vertically and horizontally)	
Simplex (1 st print side), enlargement	0±2mm × M mm (Vertically and horizontally)	M: Magnification ratio
Duplex (2nd print side), 100% or reduction	0±4mm (Vertically and horizontally)	
Duplex (2nd print side), enlargement	0±2mm × (2×M+2) mm (Vertically and horizontally)	M: Magnification ratio

### Skew

### **Exposure glass**

ltem	Specification	Note
1st side, B5 SEF or less	0±1.3mm/100mm or less	
1st side, B5 SEF or more	0±0.9mm/100mm or more	
2nd side, B5 SEF or less	0±1.8mm/100mm or less	
2nd side, B5 SEF or more	±1.3mm/100mm or more	

### **ADF**

ltem	Specification	Note
1 st side, B5 SEF or less	0±2.3mm/100mm or less	
1 st side, B5 SEF or more	0±1.4mm/100mm or more	
2nd side, B5 SEF or less	0±2.8mm/100mm or less	

ltem	Specification	Note
2nd side, B5 SEF or more, DF3080	0±1.8mm/100mm or more	
2nd side, B5 SEF or more, DF3090	0±2.3mm/100mm or more	

## **PM Parts Settings**

### **PM Parts Replacement Procedure**



- Since the machine detects a new PCDU and fusing unit automatically, you do not need to set "Manual New Unit Set" with an SP.
- 1. Enter the SP mode.
- 2. Output the SMC logging data with SP5-990-004.
- 3. Set the following SPs to "1".

ltem	SP		
	PCU: SP3-701-002		
	Cleaning Blade: SP3-701-009		
	Charge Roller: SP3-701-018		
PCU	Cleaner: Charge Roller (Cleaning Roller): SP3-701-019		
	OPC: SP3-701-021		
	Separation Pawl (Pick-off Pawls): SP3-701-022		
	Development Unit: SP3-701-023		
	Development (Developer): SP3-701-024		
Development Unit	Development Filter: SP3-701-025		
	Bearings: Development Screw (Development Mixing Auger Bearings): SP3-701-028		
PTR (Paper Transfer) Unit	SP3-701-108		
	Fusing Unit: SP3-701-115		
Fusing Unit	Fusing Belt (Heating Sleeve Belt Unit): SP3-701-116		
	Pressure Roller: SP3-701-118		
	Pressure Roller Bearings: SP3-701-119		

ltem	SP	
	ADF: Pick-up Roller: SP3-701-206	
ADF	ADF: Feeding Belt: SP3-701-207	
	ADF: Reverse Roller: SP3-701-208	

- 4. Exit the SP mode.
- 5. Turn off the main power.
- 6. Replace the PM parts and turn the power on

The machine will reset the PM counters and the remaining day counters. The machine will also do the developer initialization.

### Mportant (

 After the PM counter for the Fusing Belt (heating sleeve belt unit) reaches its PM cycle, the machine stops the operation automatically. Replace the heating sleeve belt unit before the machine stops its operation (stop warning: 240K pages, stop: 260K pages for D197/D198/D199, stop warning: 320K pages, stop: 350K pages for D200/D201/D202).

### After Installing the New PM parts

- 1. Turn on the main power.
- 2. Output the SMC logging data with SP5-990-004 and check the counter values.
- 3. Make sure that the PM counters for the replaced units are "0" with SP7-621 and SP7-944. If the PM counter for a unit has not been reset, then reset that counter with SP 7-622.

### **Operation Check**

Check if the sample image has been copied normally.

## 4. Replacement and Adjustment

### Notes on the Main Power Switch

#### **Push Switch**

The main power button of this machine has been changed to a push-button switch (push button) from the conventional rocker switch. The push switch has characteristics and specifications different from the rocker switch. Care must be taken when replacing and adjusting parts.

### Characteristics of the Push Switch (DC Switch)

### Power is supplied to the machine even when the main power switch is turned OFF.

The push switch in this machine uses DC (direct current). Therefore, if the AC power cord is connected to an electrical outlet, power is supplied to the controller board, the operation unit and other modules even when the main power is turned OFF. When replacing the controller board and the operation unit in this state, not only these boards, it will damage other electrical components.

In 100V models, only one of the AC lines for the fusing unit is shut off when you turn off the main power; the other line carries current even when you turn off the main power switch.

So, when performing maintenance work such as replacing parts, in addition to turning off the main power with the push switch, always unplug the AC power cord.

## When you disconnect the power cord from the AC wall outlet, inside the machine there is still residual charge.

When you disconnect the power cord from the AC wall outlet, inside the machine for a while there is still residual charge. Therefore, if you remove boards in this state, it can cause a blown fuse or memory failure.

How to remove the residual charge inside the machine
 After you unplug the power cord from the AC wall outlet, in order to remove the residual charge from inside the machine, be sure to press the main power switch. Thus, the charge remaining in the machine is released, and it is possible to remove boards.

## When you reconnect the AC power cord into an AC wall outlet, the machine will start automatically.

In order to remove the residual charge, push the main power switch while you disconnect the AC power cord. At that time, the power ON flag inside the machine is set. Therefore, after you finish work on the machine and reconnect the power cord to the AC, even if you do not press the main power switch, the machine will start automatically and the moving parts will begin to move. When working on moving parts, be careful that fingers or clothes do not get caught.

 Automatic restart deals with cases when you accidentally unplugged the AC power cord or unexpected power outages. By keeping the power flag ON, after the resumption of power, the machine will start up automatically.

In rare cases, when you reconnect the AC power cord to a power outlet, the machine does not start automatically. In this case, the machine has not failed. The cause is due to the timing of releasing the residual charge. If you press the main power switch while the residual charge was already released, the power ON flag will not be set. At this time, start the machine manually by pressing the main power switch.

#### Shutdown Method

- 1. Press the main power switch [A] on the front of the machine.
- 2. Take out the power cord
- 3. Wait 3 minutes (this is the time required if you will remove the rear cover and access the interior of the machine, to take out the controller board for example).

Note: If some LEDs on any of the boards are blinking or lit, current is still flowing.

After the shutdown process, the main power is turned off automatically.



d197f4002

#### When the shutdown is complete

Main power LED: Off

Operation panel LED: Off



- How to start from shutdown
- To start the machine, press the main power switch. However, if you press the main power switch between the beginning and the end of a shutdown, the machine will not start.

### **Forced Shutdown**

In case normal shutdown does not complete for some reason, the machine has a forced shutdown function.

To make a forced shutdown, press and hold the main power switch for 6 seconds.

In general, do not use the forced shutdown.



• Forced shutdown may damage the hard disk and memory, and can cause damage to the machine. Use a forced shutdown only if it is unavoidable.

## **Beforehand**

### **MARNING**

- Turn off the main power switch and disconnect the power cord.
- After replacing, make sure that all removed harnesses are connected up again and secured in their clamps.

Δ

## **Special Tools and Lubricants**

The following special tools should be prepared for maintenance of this model in the field.

Unique or Common:

U: Unique for this model

C: Common with listed model

### **Special Tools**

No.	Part Number	Description	Q'ty	Unique or Common
1	A0069104	Scanner Positioning Pin (4pcs/set)	1	C (General)
2	D1979010	Adjustment Seal (4pcs/set) – Laser Unit	1	U
3	B6455020	SD Card (1GB)	1	C (General)
4	C4019503	20X Magnification Scope	1	C (General)
5	VSSG9002	FLUOTRIBO MG GREASE: 100G	1	C (General)
6	A2929500	Test Chart – S5S(10pcs/set)	1	C (General)




• A PC (Personal Computer) is required for creating the Encryption key file to an SD card when replacing the controller board for a model in which HDD encryption has been enabled.

### Lubricants

No.	Part No.	Description	Q'ty	Unique or Common
1	52039502	Silicone Grease G-501	1	C (General)
2	A2579300	Grease Barrierta – S552R	1	C (General)

## **Cover Removal Order**

### **Cover Layouts**

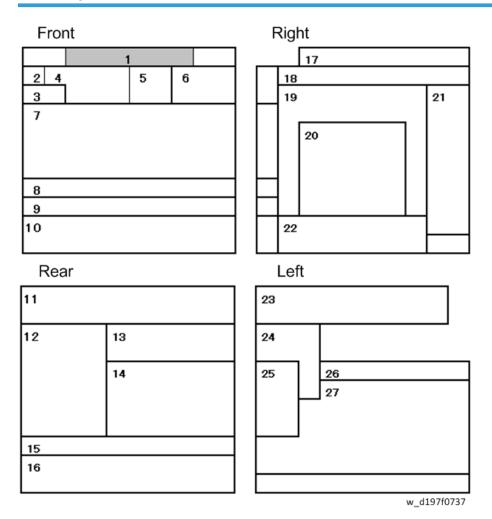


No.	Name	No.	Name
1	Operation Panel		Rear Lower Gap Cover
2	Tray Support Rod Cover		Rear Lower Cover
3	Paper Exit Tray	17	Scanner Right Cover
4	Upper Inner Cover		Right Upper Cover
5	Connector Cover	19	Right Cover

No.	Name	No.	Name
6	Main Power Switch Cover	20	Bypass Tray
7	Front Cover	21	Right Rear Cover
8	1 st Paper Feed Tray	22	Right Lower Cover
9	2nd Paper Feed Tray	23	Scanner Left Cover
10	Bank	24	Left Rear Cover
11	Scanner Rear Cover	25	Controller Cover
12	Rear Right Cover	26	Left Upper Cover
13	Rear Left Cover	27	Left Cover
14	Controller Rear Cover	-	

### Cover Removal Order

### How to use this chart:

Example—To remove the right cover, remove the rear lower cover, right rear cover, and 1st Paper Feed Tray Right Cover.

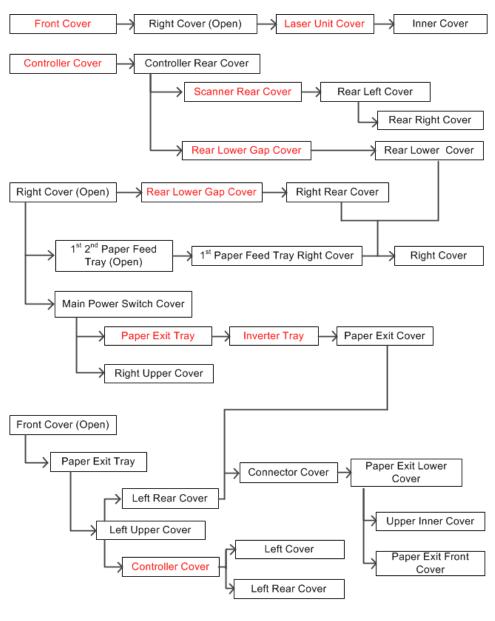


w\_197f0736

<sup>\*</sup> Red parts can be removed itself without removing other parts.

## **Exterior Covers**

### The Aim of Anti-tip Components and Precautions

The anti-tip components [A] are necessary for meeting the requirements of IEC60950-1, the international standard for safety.

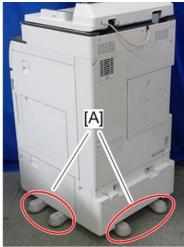


d197z1154

The aim of these components is to prevent the products, which are heavy, from toppling as a result of people running into or leaning onto the products, which can lead to serious accidents such as persons becoming trapped under the product. (U.S.: UL60950-1, Europe: EN60950-1)

### Front Cover


1. Open the front cover [A].

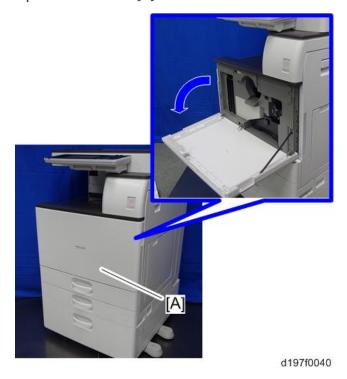

2. Belt [A] and front cover



• The front cover can be removed by sliding it in the direction of the blue arrow.

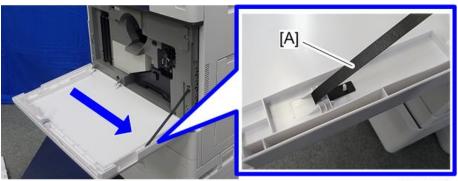

d197f0041

### Controller Cover

### 1. Controller cover [A] (©×4)



### Left Upper Cover

### **ACAUTION**

• Each part enclosed by a blue circle has a tab. Be careful not to damage it when attaching and detaching.




d1462009

- 1. Open the front cover (page 418).
- 2. Paper exit tray (page 430)
- 3. Left upper cover [A] (@×1)



• Slide the cover in the direction of the blue arrow.

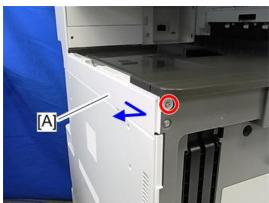

d197z0001

### Left Rear Cover

- 1. Left upper cover (page 419)
- 2. Rear lower gap cover (page 424)

3. Left Rear Cover [A] (ॐ×2,▼×1)




d197f0043

### Left Cover



• Each part enclosed by a blue circle has a tab. Be careful not to damage it when attaching and detaching.

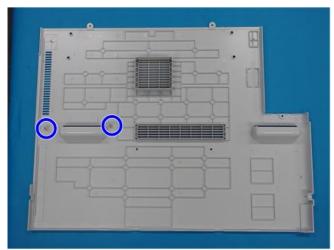


d197f0044

- 1. Left upper cover (page 419)
- 2. Controller cover (page 419)
- 3. Pull out the 1st and 2nd paper feed trays.
- 4. Open the front cover.
- 5. Left cover [A] (\$\mathbb{O}^{\times} \times 5)

Remove it while pressing down.




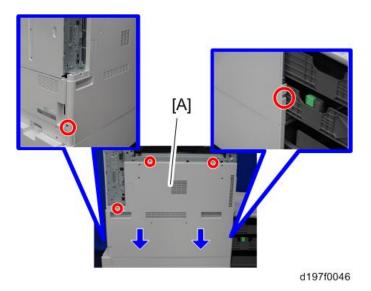

### Controller Rear Cover




• There are some claws on the back face of the controller rear cover. When fitting or removing the cover, take care not to damage them.

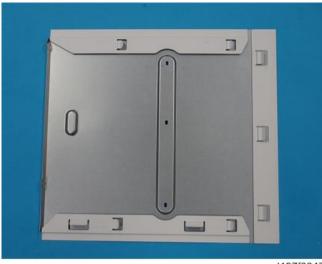

d197f0047

1. Controller cover (page 419)

2. Controller rear cover [A] ( \*\*4)

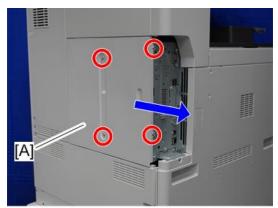

d197f0048

### Rear Left Cover

- 1. Controller rear cover (page 422)
- 2. Scanner rear cover (page 425)
- 3. Rear left cover ( ×3)



d197f0050\_1

## Rear Right Cover

1. Rear left cover (page 423)


### 2. Rear Right Cover [A] (9x5)



d197f0049

### Rear Lower Gap Cover

1. Rear lower gap cover [A] (hook×2)

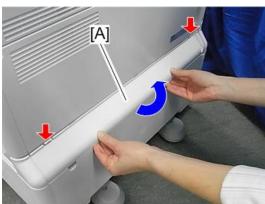


d197z1155

### Rear Lower Cover

- 1. Controller rear cover (page 422)
- 2. Rear lower gap cover (page 424)


### 3. Rear lower cover [A] ( \*\*5)

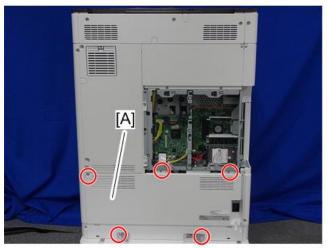

d197f0050

### **Scanner Rear Cover**

1. Scanner rear cover [A] (©x3)

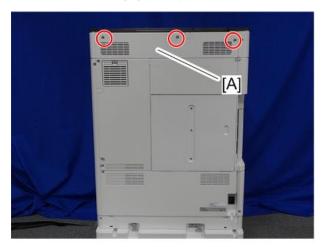

d197f0051

## Right Rear Cover

- 1. Open the right cover.
- 2. Rear lower gap cover (page 424)


### 3. Right rear cover [A] (©×4)



d197z0002



• When installing, insert the projections [A] in the holes [B], taking care not to trap the harness inside.

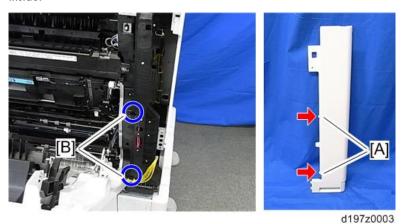


## Right Upper Cover

1. Main Power Switch Cover (page 429)

Δ


2. Right upper cover [A] (©×2)

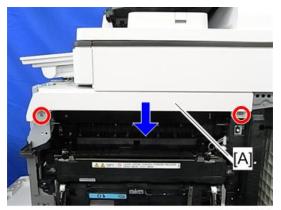

d197z0004

## Right Cover


- 1. Open the 1st paper feed tray [A], 2nd paper feed tray [B] and right cover [D]
- 2. 1st paper feed tray right cover [C] ( \*1).

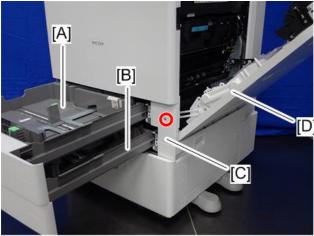


d197f0054

- 3. Right rear cover (page 425)
- 4. Rear lower cover (page 424)


## 5. Remove clamps and connectors. (∜x6, ∜x2)

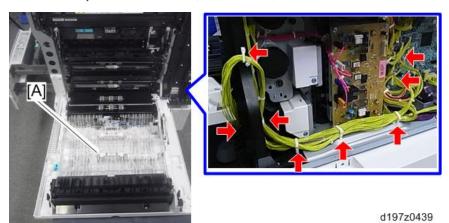

6. Right cover arms [A] [B] (®×2)

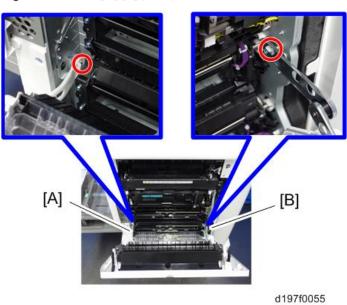


7. Slide to the left and remove right cover [A] (\$\mathbb{B} \times 1).

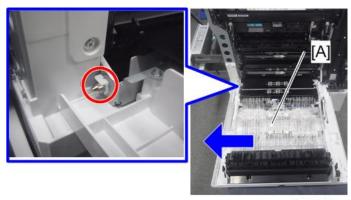


d197z0440

### Main Power Switch Cover

- 1. Open the right cover.
- 2. Main power switch cover [A] ( \*\*1)



• The main power switch cover has three tabs: two on the left side (paper exit) and one on the right side (right cover).

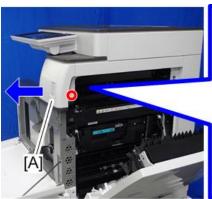




d197f0052

### **Inverter Tray**

### 1. Inverter Tray [A]

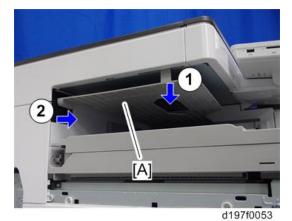

## Paper Exit Tray

### 1. Paper Exit Tray [A]



### Paper Exit Cover

- 1. Main power switch cover (page 429)
- 2. Paper exit tray (page 430)
- 3. Inverter Tray (page 430)

# 4. Paper exit cover [A] (🎞×1)



d197f0104


### Paper Exit Lower Cover

- 1. Left rear cover (page 420)
- 2. Paper exit cover (page 430)
- 3. Connector cover [A].



d1462090


# 4. Paper exit lower cover [A] (\$\mathbb{O}^\* \times 2)

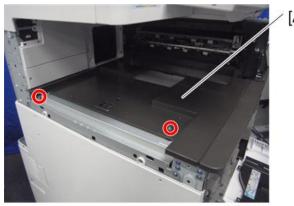


d1462093

# Upper Inner Cover

- 1. Left upper cover (page 419)
- 2. Paper exit cover (page 430)
- 3. Paper exit lower cover (page 431)
- 4. Tray support rod cover [A] (\$\mathbb{O}^{\times} \times 1)\$

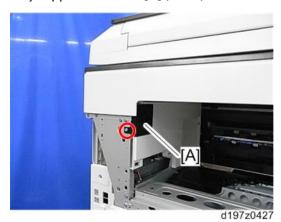

### 5. Two screws on the upper inner cover [A] ( \*\*2)

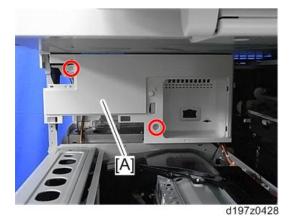


6. Upper inner cover [A] ( ×2)



d197z0429

# Paper Exit Front Cover

- 1. Paper exit lower cover (page 431)
- 2. Paper exit front cover [A] (5°×4)

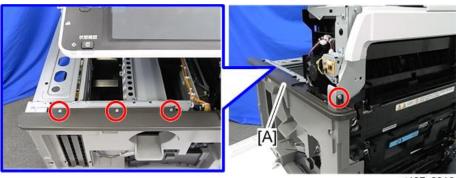

d197z0318

#### **Inner Cover**

- 1. Front cover (page 418)
- 2. Open the right cover.
- 3. Laser unit cover (@x1)



d197z0005

4. Inner cover [A] (@×7, @×1)




d197z0006

### **Toner Supply Housing**


- 1. Pull out the toner bottle
- 2. Paper exit lower cover (page 431)
- 3. Upper inner cover (page 432)
- 4. Development exhaust fan (page 610)

### 5. Fan [A] with duct (@x2)

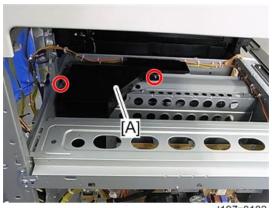


d197z0102


# 6. Bracket [A] [B] (🖤×6)

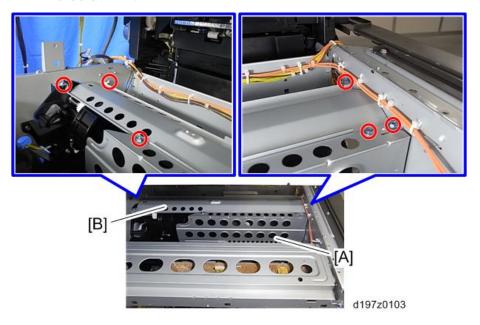

# 7. Four screws on the toner supply housing (9°×4)

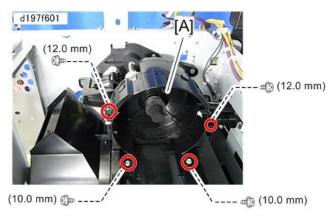


### 8. Toner supply housing [A]

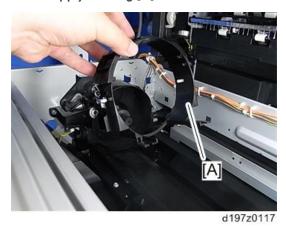


# **Operation Panel**

# **Operation Panel**

- 1. Scanner front cover (page 447)
- 2. Operation panel upper cover [A]

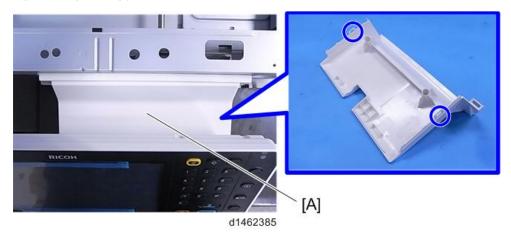


3. Operation panel [A] (@x5, \$\times^2\)

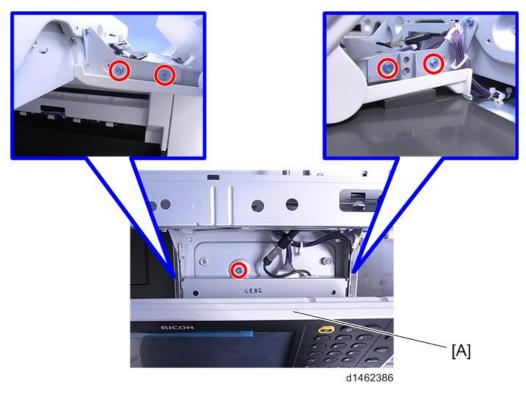

# **Key Control Board**


- 1. Operation panel (page 437)
- 2. Operation panel lower cover [A] ( %×6)

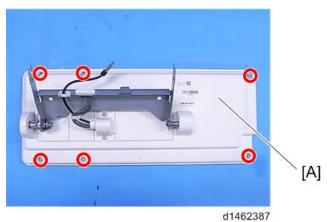


# 3. Harness guide [A] (🍑×2)



### 4. Bracket covers [A] [B]

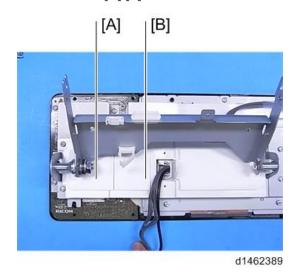


5. Operation panel arm bracket [A] ( \*\*x6)

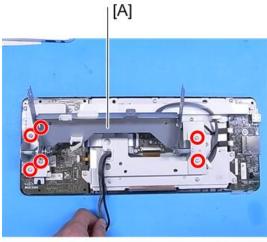

d1462390

6. Key control board [A] (@x8, Fx1, x2)

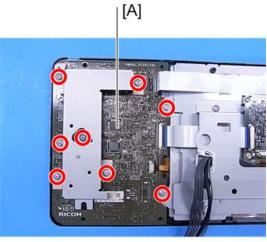


d1462391

### Interface Board

- 1. Operation panel (page 437)
- 2. Operation panel lower cover (page 438 "Key Control Board")
- 3. Harness guide (page 438 "Key Control Board")
- 4. Bracket covers (page 438 "Key Control Board")
- 5. Operation panel arm bracket (page 438 "Key Control Board")


### 6. Interface board [A] (@×4, F×1, USB×2)

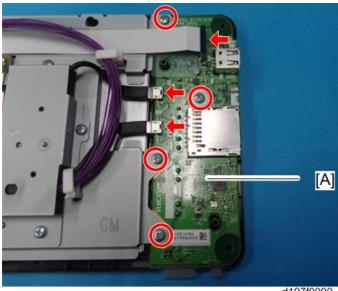

d197f0099

#### **LCD Panel**

- 1. Operation panel (page 437)
- 2. Operation panel lower cover (page 438 "Key Control Board")
- 3. Harness guide (page 438 "Key Control Board")
- 4. Bracket covers (page 438 "Key Control Board")
- 5. Operation panel arm bracket (page 438 "Key Control Board")
- 6. LCD panel unit [A] (@×6, &\*×5, USB×2)

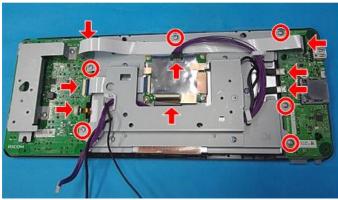

d197f0100


#### Notes when replacing the LCD

Since LCD panels from 2 vendors are used, the replacement parts are different. When replacing, check the vendor used, and ensure that you use the correct part.

#### Distinguishing method

Of the 3 labels on the rear of the operation panel, the center label shows the LCD model number.

#### Operation panel rear surface

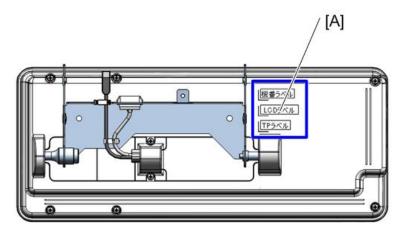

d1462396

#### [A]: Label attachment position

#### Label



[A]: S Co. LCD: Printed as Sxxxxx...

[B]: C Co. LCD: Printed as Cxxxxx...


#### Differences between operation panels from 2 vendors

Operation panel upper cover
 There is no difference in appearance, but there is a difference in internal layout.

LCD bracket

There is a difference in the shape of the bracket and the stamp inside the blue circle.


S Co.: S stamp C Co.: CM stamp

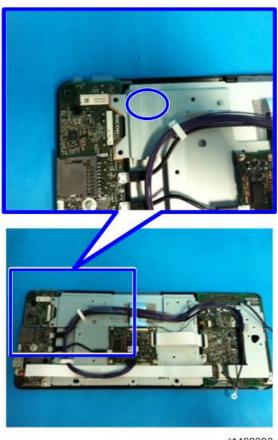

d1462398

Use of FFC (Flexible Flat Cable)
 For S Co., FFC is used, but for C Co., instead of an FFC, a cable integrated with the LCD (orange) is used.



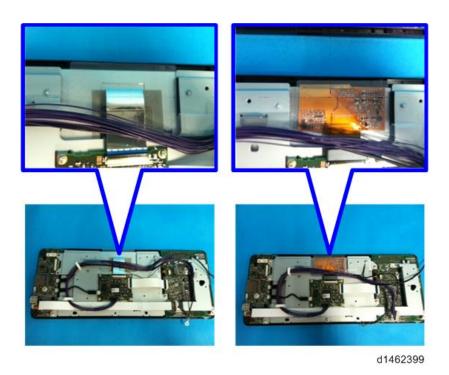

### Replacement procedure

- 1. Operation panel (page 437)
- 2. Operation panel lower cover (page 438 "Key Control Board")
- 3. Harness guide (page 438 "Key Control Board")
- 4. Bracket covers (page 438 "Key Control Board")
- 5. Operation panel arm bracket (page 438 "Key Control Board")
- 6. LCD Panel (page 441)

### 7. LCD [A]



d197f0101

# **Scanner Unit**



• When you replace the scanner wire, use the standard positioning pins.

#### **Scanner Exterior**

#### **Scanner Upper Cover**

- 1. Platen cover or ADF
  - Remove either unit, referring to the installation procedure for the platen cover or DF.
- 2. Scanner rear cover (page 425)
- 3. Scanner Upper Cover [A] (\$\mathscr{O}\times 2)



d197f0019

### **Scanner Right Cover**

1. Scanner rear cover (page 425)


### 2. Scanner right cover [A] (@x1)



d197f0020

#### **Scanner Front Cover**

- 1. Open the ARDF or platen cover.
- 2. Scanner front cover [A] (\$\mathbb{O}^\* \times 2)\$

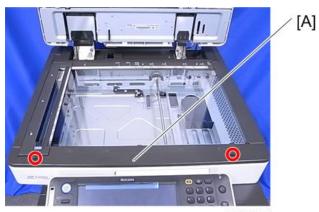

d1462302


**U** Note

There is a tab [A] inside this cover at the left side. Release the left tab after removing the two
screws of the scanner front cover. First, carefully and slightly pull the left side of the cover
towards the outside and release the left side tab, then pull up the right upper side tab and
release it.



#### Scanner Left Cover

- 1. Scanner front cover (page 447)
- 2. Scanner left cover [A] (@×3)

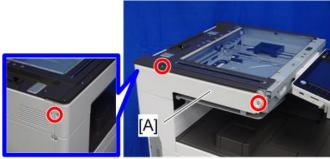


d197f0022

### **Exposure Glass**


1. Open the platen cover or ADF

# 2. Guide Scale [A] (🏵×3)

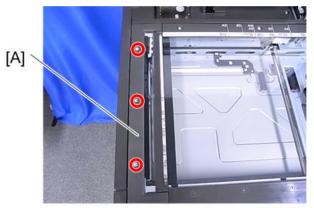


d1462304

### 3. ADF exposure glass [A]

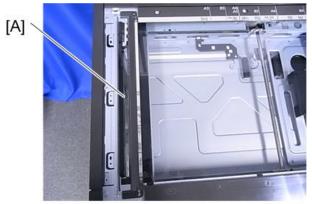

d1462305

# 4. Rear scale [A] (9 × 3)

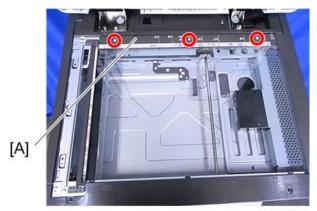


d1462306

#### 5. Left scale and exposure glass [A]

#### **ACAUTION**


• The exposure glass and the left scale are attached with double-sided tape.

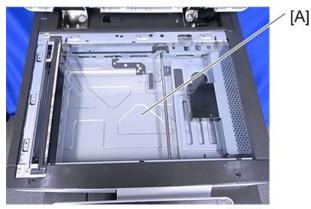

d1462307



- When installing, please follow the points below:
  - The red mark [A] of the ADF exposure glass is on the left at the rear of the operation panel.
  - The locating holes of the left scale fit over the locating bosses of the front/rear frame.

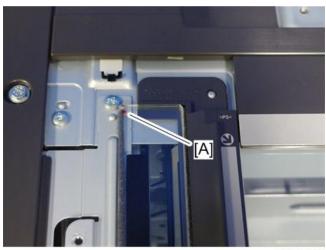


d197f0023


#### Scanner Lamp

1. Exposure glass (page 448)

2. Move the exposure lamp (1st scanner carriage) [A] to position [B].

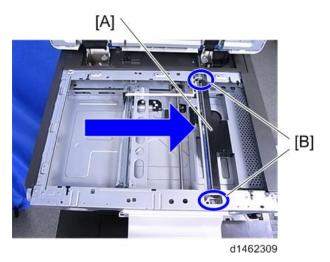

3. Scanner lamp [A] (\$\mathbb{O}^\* \times 2, \$\mathbb{O}^\* \times 1)\$

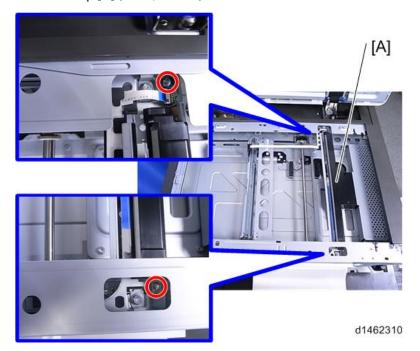


#### Scanner Motor


1. Scanner upper cover (page 446)



• To remove the inner two screws, insert your screwdriver as shown by the blue arrows below.

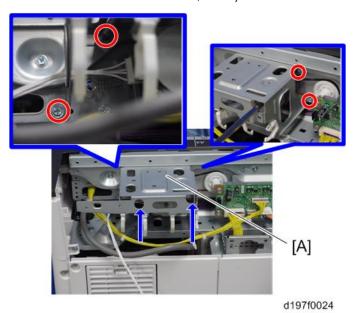


3. Spring [A]

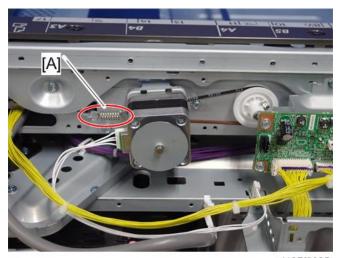

d197f0025

# 4. Scanner motor unit [A] (\$\mathbb{O}^\* \times 2, \$\mathbb{S}^\* \times 1)\$

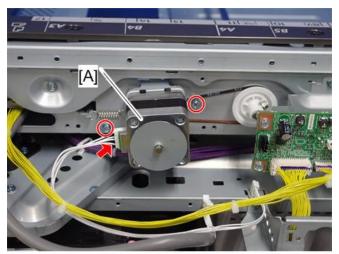

d197f0026


# 5. Scanner motor [A] (\$\mathbb{O}^x2)\$



Lens Block


### 1. Exposure Glass (page 448)

### 2. Lens block cover [A] (@×2)

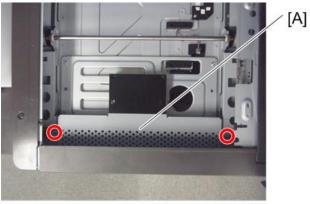

d1462316

# 3. Lens block [A] (@x5, @x2)

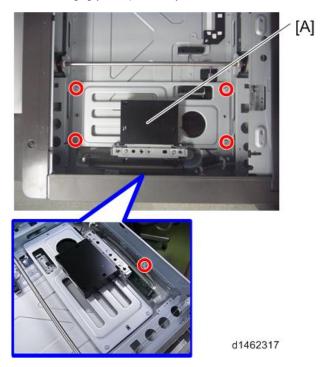


## Original Size Sensors (APS)

### 1. Exposure glass (page 448)

2. Original size sensors [A] (\*\*x2)




• When a screw driver is inserted, the tab can be removed smoothly.

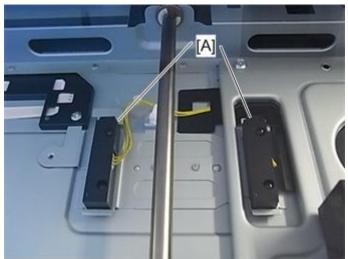

d197f4007

# SIO

- 1. Scanner rear cover (page 425)
- 2. Scanner upper cover (page 446)
- 3. SIO [A] (☞×4, ☞×6)

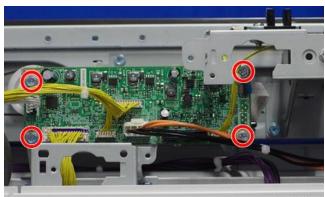


d197f0039

### Scanner HP Sensor

- 1. Scanner upper cover (page 446)
- 2. Exposure glass (page 448)
- 3. Slide the exposure lamp (1st scanner carriage) [A] in the direction of the arrow a little.

[A]

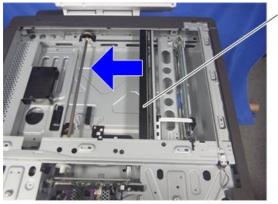


d1462320

4. Peel off the sensor stopper [A].




### 5. Scanner HP Sensor [A] (5 ×1)

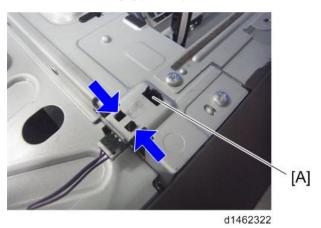

### **DF Position Sensor**

- 1. Scanner upper cover (page 446)
- 2. DF Position sensor [A] (@x1, @x1)

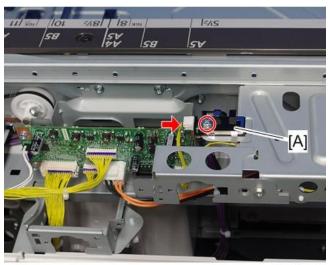

d197f0027


# Adjusting the Scanner Wire




• Be sure to use the special tool for scanner wire adjustment. (page 413)


#### Scanner Wire (Front)


- 1. Exposure glass (page 448)
- 2. Scanner right cover (page 446)
- 3. Operation panel (page 437)
- 4. Main power switch cover (page 429)
- 5. Lower bracket [A] of the operation panel (ੴ×6, ∜×3)

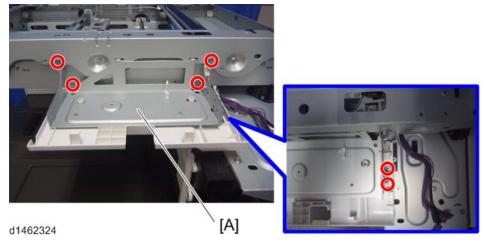


6. Scanner front frame [A] (9 ×6)

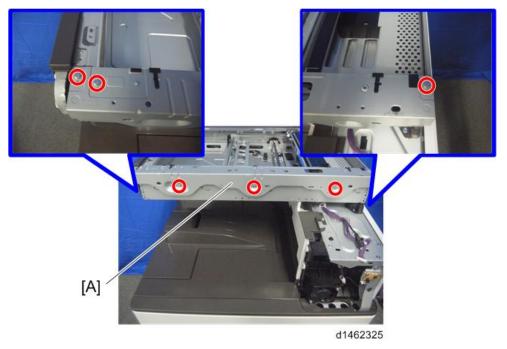



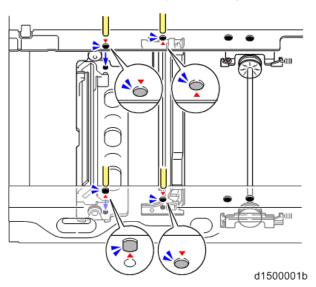


8. Wire clamp [A] (ቖ×1)

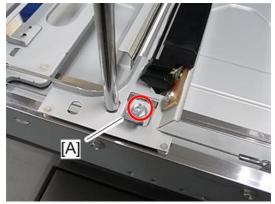


d197z0300

# 9. Wire fixing bracket [A], spring [B] (\$\mathbb{O}^{\mathbb{O}} \times 1)\$

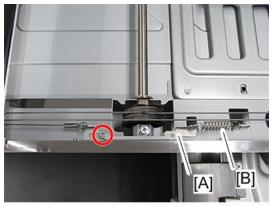

d197z0301

# 10. Wire pulley [A] ( $\mathfrak{G}^{\times} \times 1$ , $\mathfrak{F} \times 1$ , bearing $\times 1$ )

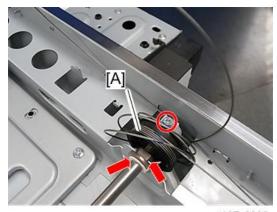


d197z0302



- Do not touch the mirror and the lamp.
- When you move the carriage, hold the central part and move it gently.

### Scanner Wire Assembly (Front)

1. Pass the ball-shaped end of the wire through the boss of the pulley [A].

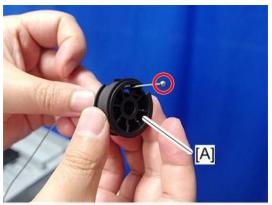

d197z0303

2. Fit the ball at the middle of the wire into the cutout in the pulley [A].



d197z0304



d197z0305

4. Coil up the ball-shaped end of the wire clockwise (when looking at the boss of the pulley) three and half times, next to the rim at the front side of the pulley.



d197z0306

5. Make sure that blue markings of the wire are aligned, and then fix the wire temporarily with tape.




d197z0307

6. Set the pulley [A] on the drive shaft [B] (@x1, \$x1, bearing x 1).



• Fasten the screw temporarily.

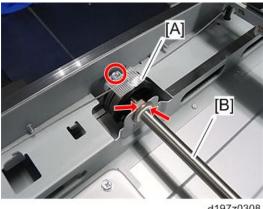

d197z0308


- 7. Set the ball-shaped end of the wire with the following procedure.
  - 1. Route the wire from under side of the pulley [A] of the left frame toward the upside and hook the wire on the outer edge of the pulley [A].



d197z0309

2. Route the wire over the 2nd carriage pulley [A] in the direction of the blue arrow.




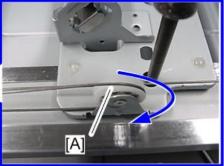

d197z0310


3. Hook the ball-shaped end of the wire in the slit [A] in the left frame.



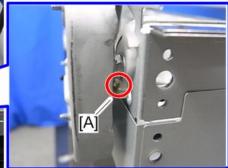


d197z0311

- 8. Set the ring-shaped end of the wire with the following procedure.
  - 1. Route the wire from the underside of the pulley [A] of the right frame toward upside and hook the wire on the outer edge of the pulley [A].

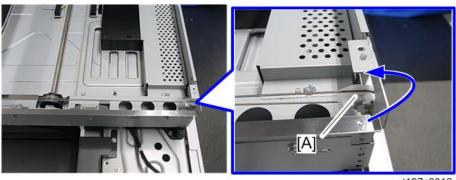


d197z0312

2. Route the wire over the 2nd carriage pulley [A] in the direction of the blue arrow.

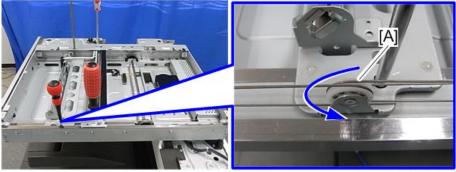


d197z0313

- 3. Attach the wire to the fixing bracket [A].
- 4. Attach the fixing bracket [A] ( 1: temporary securing, spring 1)

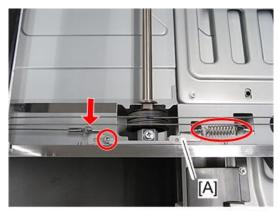

d197z0316

5. Hook the wire [B] on the notch of the carriage [A].

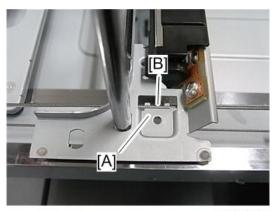


d197z0314

6. Attach the wire clamp [A] (@×1).




• Fasten the screw temporarily for the wire clamp.

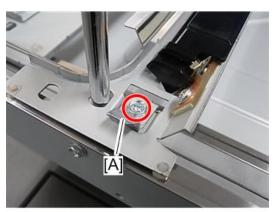

d197z0315

- 9. Peel off the tape secured in step 5.
- 10. Attach the spring.

### **Scanner Position Adjustment**

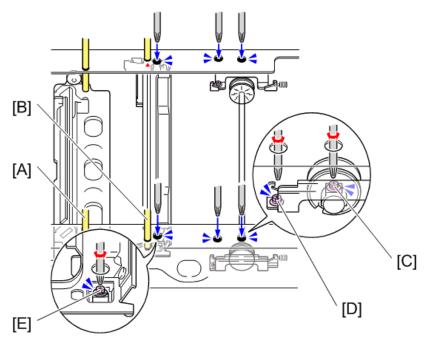

d1462336

- 1. Set the scanner positioning pins (x4).
  - 2nd scanner carriage and frame hole [A]
  - 1st scanner carriage and frame hole [B]
  - Same position as [A] on the rear side
  - Same position as [B] on the rear side
- 2. Tighten the screw [C] of the pulley which was temporarily tightened.
- 3. Tighten the screw [D] of the fixing bracket which was temporarily tightened.
- 4. Attach the scanner fixing bracket [E].
- 5. Pull out the scanner positioning pins.
- 6. Holding the center part of the 1st scanner carriage, move it to the left and right to ensure it moves smoothly.


If it does not move smoothly, loosen the scanner wire, and perform the scanner position adjustment procedure again.



 After replacing the wire, make a test copy, and check skew, magnification, and whether there is a registration gap. If there is a gap, adjust the scanner wire position again, or perform Scan Registration Adjustment (SP4010 - SP4011).

## Scanner Wire (Rear)


- 1. Scanner wire (front)
- 2. Bracket [A] (💝×4, 🖤×7)

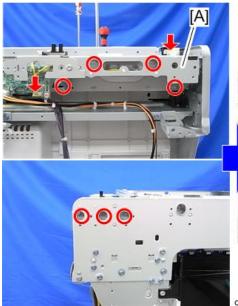




d197z0159

3. Release the harness (∜×5, √×1)

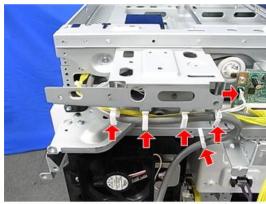


d197z0180


# 4. Bracket [A] (@×4)

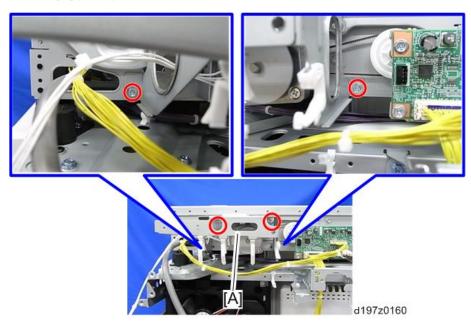


5. SIO with bracket (@x2, Fx5).

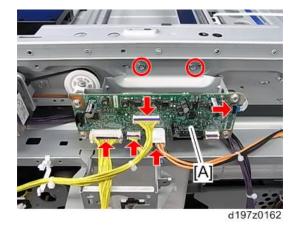


# 6. Scanner rear frame [A] (©°×6)

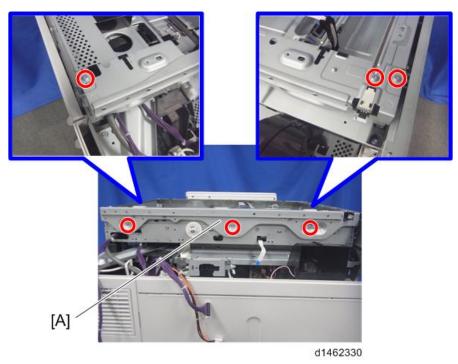

7. Move the 1st scanner carriage to the set position of the scanner fixing pin.

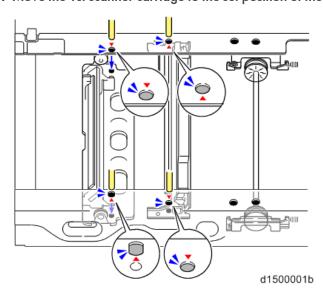


## 8. Wire clamp [A] ( \*\* 1)

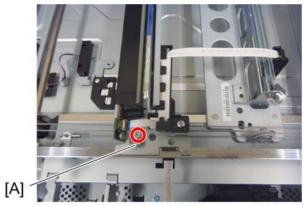

d1462331

9. Loosen the belt tension [A] (©×2, spring ×1) and remove the scanner drive gear [B] (©×1).

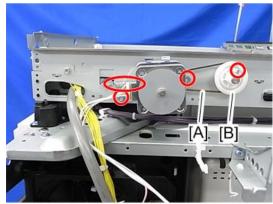


d197z0163

10. Spring, screws, bearing, clip and wire securing bracket



d197z0164

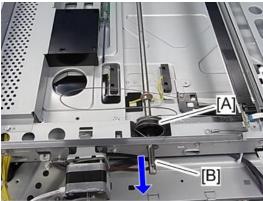


d197z0165

### Scanner Wire Assembly (Rear)

1. Pass the ball-shaped end of the wire end through the boss in the pulley [A].



2. Fit the ball of the middle of wire in the cutout of the pulley [A].

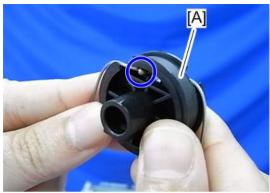

d197z0167

3. Coil up the ball-shaped end of the wire counter clockwise (when looking at the boss of the pulley) four and half times, next to the rim at the rear side of the pulley.



4. Coil up the ball-shaped end of the wire clockwise (when looking at the boss of the pulley)

three and half times, next to the rim at the front side of the pulley.




d197z0170




d197z0171


6. Fix the wire temporarily with tape.

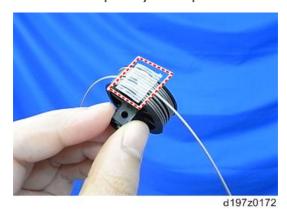

7. Set the pulley on the scanner drive shaft (\$\mathbb{G}^\* \times 1, bearing \times 1, \$\mathbb{W} \times 1).

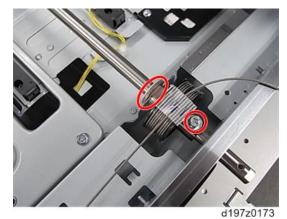

8. Attach the scanner drive gear [A], and then tighten the scanner motor bracket (5°×3, spring ×1, belt ×1).

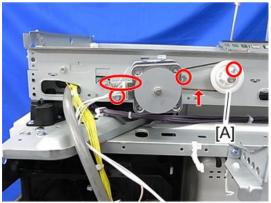

- d197z0174
- 9. Reassemble the rear scanner wire with the same procedure as the front.
- 10. Reassemble the scanner wire (front).
- 11. Do the scanner adjustment.

## Modifying the Scanner (contact/contactless) when using ARDF

#### Procedure for the ADF


1. ADF front cover [A] ( \*1)



• Remove with the document table [B] lifted up.




## 2. Document reader guide plate [A] (®×1)

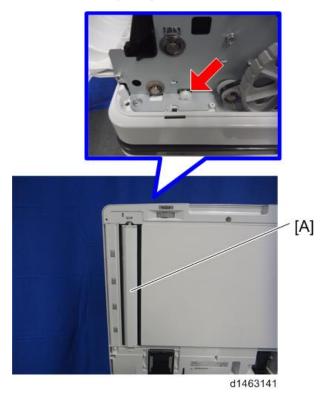


Replace the contactless guide plate (front) [A] with the contact guide plate (front) [B] ( \( \sigma \) \)
 ×1).

There is a hole in the contact guide plate (front).

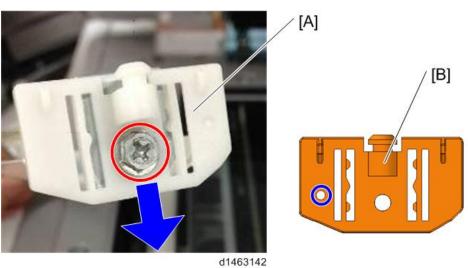

4. Replace the contactless guide plate (rear) [A] with the contact guide plate (rear) [B].


There is a hole in the contact guide plate (rear).

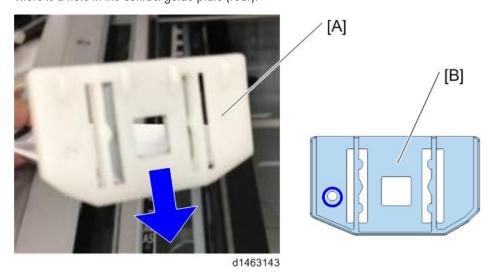

5. Attach the document reader guide plate. Be careful not to scratch the sheet [A].



- 6. Attach the ADF front cover, and return the ADF to its original position.
- 7. Enter SP mode, and then change the DF density setting (SP4-688-001) from [102%] to [97%].

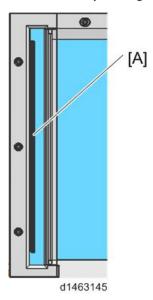

2. Wipe the exposure glass with alcohols so that no glue remains from the double-sided tape.



• Remember that if any glue remains, it will cause a paper jam in the ADF.


## Modifying the Scanner (contact/contactless) when using SPDF

When changing from contactless to contact original feed, some parts of the ADF and scanner must be replaced.

#### Procedure for the SPDF

1. Open the SPDF.


### 2. Lower entrance guide unit [A] (\$\mathbb{O}^\* \times 2\$)

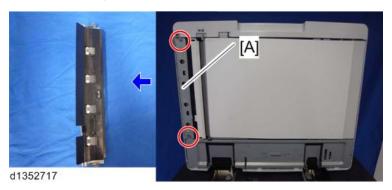



- The part below the contactless lower entrance guide unit is black [A].
- The part below the contact lower entrance guide unit is colorless and transparent [B].





d1352723


#### 3. Document reader guide plate [A]



d1352718




- The part below the contactless document reader guide plate is black [A].
- The part below the contact document reader guide plate is white [B].

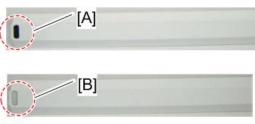

d1352721

- 4. Attach the contact document reader guide plate [A].
- 5. Attach the contact lower entrance guide unit [B] (@x2).

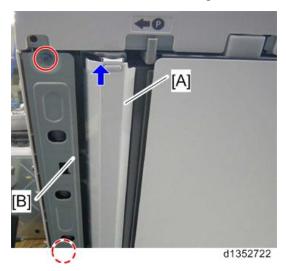


6. Enter SP mode, and then change the Scan Image Density Adjustment (SP4-688-002) from [103] to [98].

### **Procedure for the Scanner**

1. Exposure glass (page 448)

2. Peel off the gap sheet (black) [A] from the sheet-through glass [B].

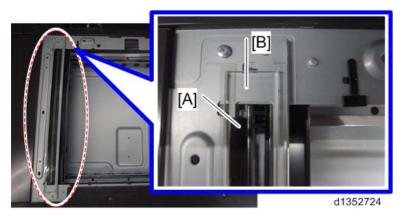

3. Wipe the exposure glass with alcohol, etc., so that no glue remains from the double-sided tape.



• Remember that if any glue remains, it will cause a paper jam in the ADF.

## Laser Unit

### **WARNING**

• Turn off the main power switch and unplug the machine before beginning any of the procedures in this section. Laser beams can cause serious eye injury.

#### Caution Decal Location

Caution decals are placed as shown below.



## **MARNING**


• Be sure to turn off the main power switch and disconnect the power plug from the power outlet before beginning any disassembly or adjustment of the laser unit. This copier uses a class IIIb laser beam with a wavelength of 660 nm and an output of 17 mW. The laser can cause serious eye injury.

#### Laser Unit

### Removing the Laser Unit

1. Open the front cover.


# 2. Laser unit cover [A] ( x 1)

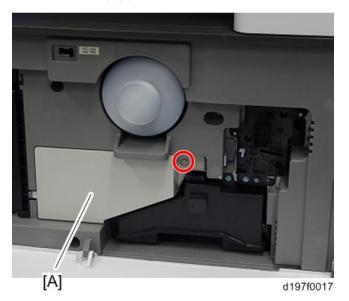

## 3. Release the stopper [A].



# 4. Pull out the laser unit [A] ( x 3).

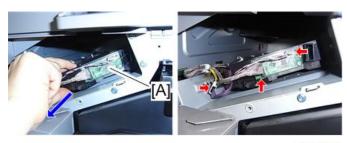

d197f0004

### Installing a New Laser Unit

- 1. Replace the laser unit with a new laser unit.
- 2. Insert the new laser unit [A] halfway.



d197f0005

3. Connect three harnesses to the new laser unit ( x 3).




d197f0006

4. Insert the new laser unit along the guide frame [A].



• Make sure that the new laser unit claws fit into two mainframe claws as shown below.

### Mainframe Claws

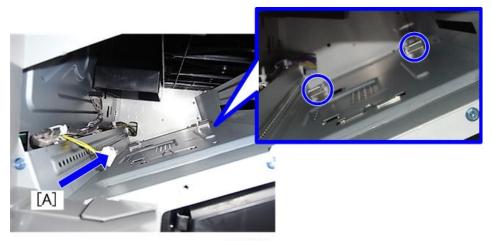


d197f0007

### **Laser Unit Claws**




d197f0327

- 5. Set the laser unit with the stopper [A].
  - Use a screw driver to pry in the stopper.

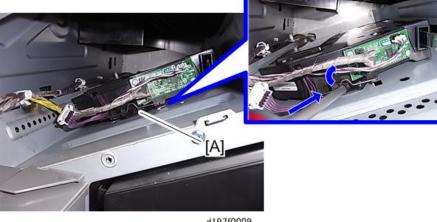

d197f0009

6. Attach the laser unit cover [A] ( x 1).

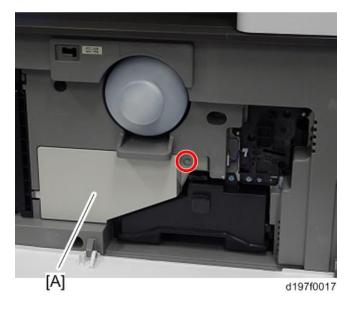

## After Installing the New Laser Unit

Download new data stored in a new laser unit to the mainframe.

- 1. Close the front cover.
- 2. Plug in and turn on the main power switch.
- 3. Enter the SP mode.


4. Download the new data stored in the new laser unit to the mainframe with SP2-110-005.



- If the result of SP2-110-005 is not successful, execute SP2-110-005 again.
- If this step is not correctly done, an image problem may occur on printouts.
- 5. Perform image adjustments if needed (page 627).

## **Quenching Lamp**

- 1. Right cover (page 427)
- 2. Fusing unit (page 535)
- 3. Tabs and connector for the quenching lamp [A] ( x 3, x 1)

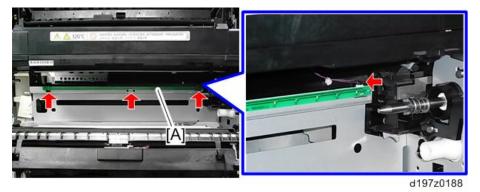

4. Quenching lamp [A]




d197z0189

## PCL (Pre Cleaning Light)

1. PCDU (page 489)

## 2. Fusing Unit (page 535)

3. PCL [A] (௴x3, ∜x3, ❤ x1).

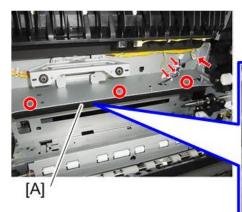



d197z0484

## **PCDU**

### Before Replacing a PCU or Development Unit




- To prevent damage from toner spillage during the PCDU removal, be sure to place a ground cloth on the floor.
- To prevent damage from excess light, wrap the OPC drum with protective paper and store the OPC drum in a cool dark place.
- Do not touch the OPC drum, cleaning blade, or any seals or tapes.
- Do not use any alcohols or solvents to clean the OPC drum; Be sure to wipe with a dry cloth. If excess dirt exists, first wipe with a damp cloth, and next wipe off completely with a dry cloth.
- Do not rotate the OPC drum clockwise after the PCDU has been installed.

#### **PCDU**




- If you replace the PCDU, you do not need to perform SP 3-701. This is because the machine detects a new unit automatically when you cycle the main power off/on, and performs the initial adjustment automatically.
- 1. Open the front cover
- 2. Open the right cover
- 3. Tilt the transfer unit [A].

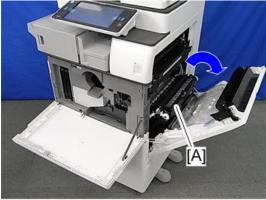

d197z0072

## 4. PCDU [A] (@x1, @x1)

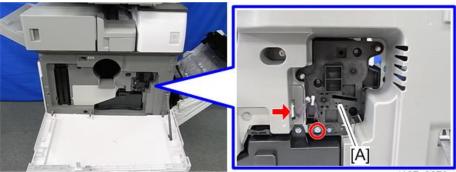

d197z0073

4

## **U**Note

• Carefully and slowly pull out the PCDU without tilting, to prevent toner spillage.



d197z0074

## 

 When installing the PCDU, push the PCDU into the machine while screwing it in, as shown below, and then secure the PCDU. If the PCDU is not installed straight, the transfer roller contact and release mechanism does not work properly and dirt may appear on the 2nd side of outputs.




d197f0609

# PCU/Development Unit

- 1. PCDU (page 489)
- 2. Face plates [A][B] (௴x4, ∜x1)



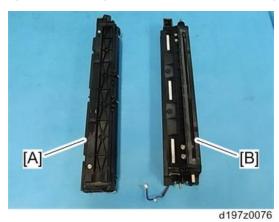


## Notes When Installing the Face Plates

When installing the face plates, check the fitting points as shown below.


[A]: The bearing of the face plate fits together with the OPC drum.

[B]: The bearing of the face plate fits together with the bearing of the development roller.

### Face plate for front side

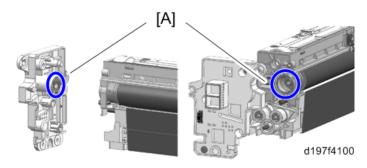

#### Face plate for rear side

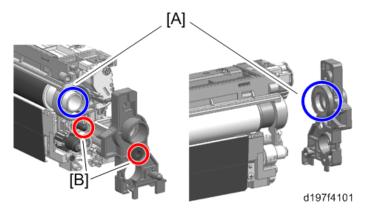

#### Installing a PCU

### **Important**


- Before replacing the PCU, set the setting of SP3-701-002 to "1" and turn off the main power switch.
- If you have to turn the power on again before replacing the part, execute the SP again before replacing the part.
- After replacing the PCU, turn on the main power on.
- 1. Disassemble the PCDU into PCU and development unit (page 491).
- 2. Replace the used PCU with a new one.
- 3. Reassemble the PCDU.

#### Installing a Development Unit



- Before replacing the development unit, set the setting of SP3-701-023 to "1" and turn off the main power switch.
- If you have to turn the power on again before replacing the part, execute the SP again before replacing the part.
- After replacing the development unit, turn on the main power on.
- 1. Disassemble the PCDU into PCU and development unit (page 491).
- 2. Replace the used development unit with a new one.
- 3. Reassemble the PCDU.

### 4. Pull out the heat seal [A].

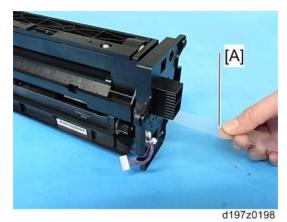

### 5. Remove the cap [A].



d197z0430




• Attach the removed cap to the used development unit.

### **OPC Drum**




- Before replacing the OPC drum, set the setting of SP3-701-021 to "1" and turn off the main power switch.
- If you have to turn the power on again before replacing the part, execute the SP again before replacing the part.
- After replacing the OPC drum, turn on the main power on.
- 1. PCU (page 491)

#### 2. Stopper [A] for the PCU

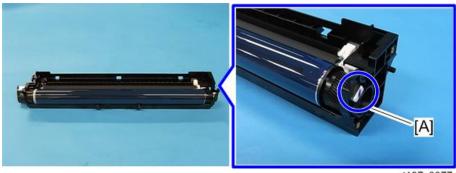

d197z0077

#### 3. Pull out the OPC drum [A].

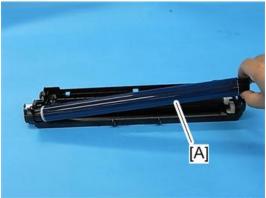

d197z0078

## Charge Roller, Cleaning Roller


- Before replacing these rollers, set the setting of SP3-701-018 for the charge roller and/or SP3-701-019 for the cleaning roller to "1" and turn the main power switch OFF.
- If you have to turn the power on again before replacing the part, execute the SP again before replacing the part.
- After replacing the rollers, turn the main power switch ON.
- 1. PCU (page 491)
- 2. OPC drum (page 494)

### 3. Charge roller and cleaning roller [A] with its bearing



d197z0079

4. Split the assembly into the charge roller [A] and cleaning roller [B].

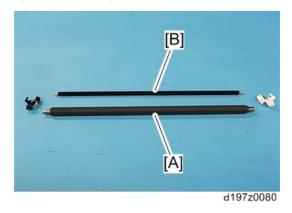


## Pick-off Pawls



- Before replacing the pick-off pawls, set the setting of SP3-701-022 to "1" and turn off the main power switch.
- If you have to turn the power on again before replacing the part, execute the SP again before replacing the part.
- After replacing the pick-off pawls, turn on the main power on.
- 1. PCU (page 491)

#### 2. Pick-off pawls [A]

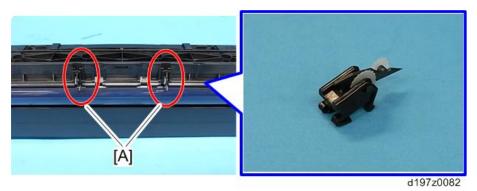

**U** Note

• Use a screw driver to pry away the tabs of the pick-off pawl. If the pick-off pawl has marked the drum with a line, the pick-off pawl position can be adjusted.



## **Cleaning Blade**



- Before replacing the cleaning blade, set the setting of SP3-701-009 to "1" and turn the main power switch OFF.
- If you have to turn the power on again before replacing the part, execute the SP again before replacing the part.
- After replacing the cleaning blade, turn the main power switch ON.
- 1. PCU (page 491)
- 2. OPC drum (page 494)
- 3. Charge roller and cleaning roller (page 495)


## 4. Cleaning blade [A] (©x2)



d197z0083



• The cleaning blade [A] has two different types of holes: a circle (O), and an oval (O). Remove the screw on the circle side first, and then, remove the oval side.

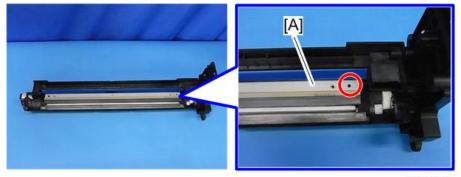

d197z0487

## Developer



• These sheets used in steps 6, 11, and 12 are not provided as accessories; please do not forget to order with the developer.



d197f0608

- Before replacing the developer, set the setting of SP3-701-024 to "1" and turn the main power switch OFF.
- If you have to turn the power on again before replacing the part, execute the SP again before replacing the part.
- After replacing the developer, turn the main power switch ON.




- If you replace developer together with the development filter, firstly replace the developer, next replace the filter.
- 1. Development unit (page 491)
- 2. Bearing (front) [A] (E-ring x1)




d197z0087

3. Pull the shaft toward the blue arrow shown below, then remove the pin [A] and gear [B].

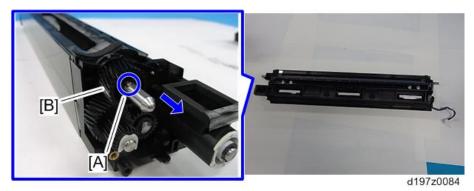

## 4. Gear [A] (\$\hat{\Psi} x1)

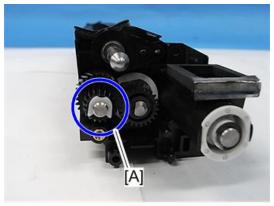

d197z0088

## 5. Bearing (rear) [A].



6. Development side seal and development case entrance seal [A] at each end.




7. Lift up the development sleeve unit [A].



d197z0089

## **ACAUTION**

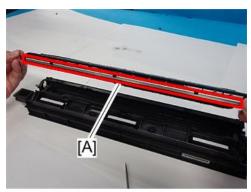

d197z0476

- Do not touch or hold the development sleeve edge [A] when holding the sleeve unit. Otherwise, it may cause an injury.
- 8. Remove the developer after turning the development unit upside down in the reverse direction of the development filter.



• Rotate the gear to remove as much toner as you can.



d197z0090

9. Stand the development unit up, and add new developer evenly across the width of the development unit while rotating the gear.




d197f4081

10. Reassemble the development sleeve unit, gear and bearing.




• The sheets for the development sleeve unit [A] must be under the sheets [B] for the development unit.

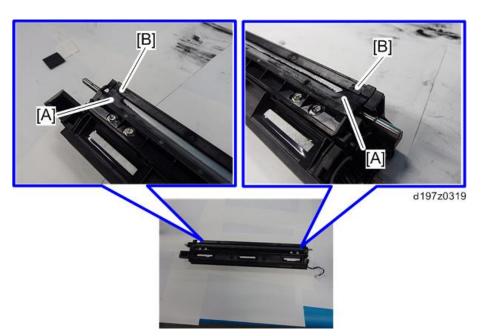




- 11. Wipe off the areas [A] indicated by the red-dashed line and paste new development case entrance seals to cover the blue-circled position.
  - These seals are part of the development seal set, which must be ordered together with the new developer.

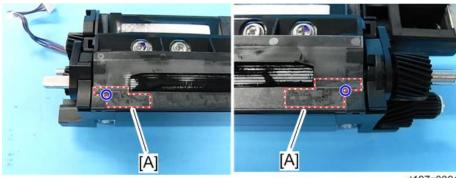


d197z0091

• The seal [A] for the front side is not the same shape as the one [B] for the rear side as shown below. Be careful when you paste them.

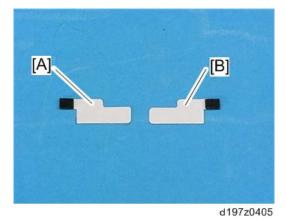

- 12. Paste the new development side seals [A] on the face of the development sleeve unit as shown below.
  - These seals are part of the development seal set, which must be ordered together with the new developer.

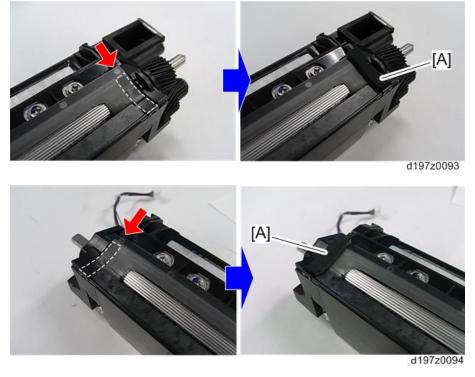

13. Reassemble the PCU and development unit.

14. Turn on the main power switch.

The machine detects the new developer and starts the initial adjustment.

### **Development Filter**



- Before replacing the development filter, set the setting of SP3-701-025 to "1" and turn the main power switch OFF.
- If you have to turn the power on again before replacing the part, execute the SP again before
  replacing the part.
- After replacing the development filter, turn the main power switch ON.



- If you replace the development filter together with developer, firstly replace the developer, next replace the filter.
- 1. Development unit (page 491)
- 2. Development filter [A]




d197z0095

#### TD Sensor

- 1. Development unit (page 491)
- 2. TD sensor cover [A].




• Use a screw driver to release the tab(s) of the cover.

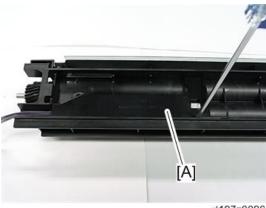

d197z0096

### 3. TD sensor [A] ( x1)

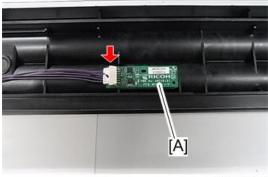


d197z0097

## **Development Mixing Auger Bearings**




- Before replacing the development mixing auger bearings, set the setting of SP3-701-028 to "1" and turn the main power switch OFF.
- If you have to turn the power on again before replacing the part, execute the SP again before replacing the part.
- After replacing the development mixing auger bearings, turn the main power switch ON.
- 1. Development unit (page 491)

#### 2. Pull the shaft toward you, and then pull out the pin [A] and remove the gear [B].

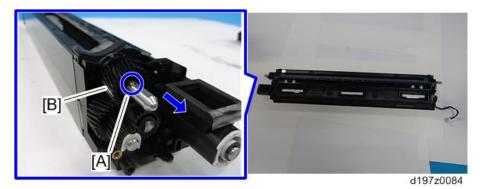

3. Gears [A] [B] (\$\text{\$\partial} \times 1, E-ring x1)

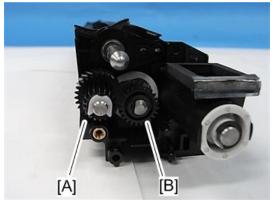


d197z0098

4. Two development mixing auger bearings [A] (E-ring x1).




d197z0099

#### 5. Gears [A] [B] [C] (E-ring x2)

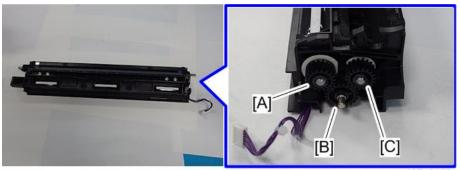

d197z0100

#### 6. Two development mixing auger bearings [A].

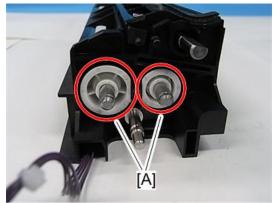

d197z0101


**U**Note

The development mixing auger bearings are D-shaped. Make sure that you install them in the
orientation exactly as shown above.


### Development Mixing Auger (L / R)




- [A]: Development Mixing Auger (L)
- [B]: Development Mixing Auger (R)

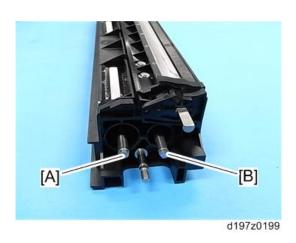

- 1. Development Unit (page 491)
- 2. Developer (page 498)
- 3. Development Mixing Auger Bearings (page 506)
- 4. Development Mixing Auger (L) [A]

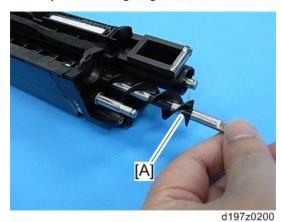

#### 5. Development Mixing Auger (R) [A]

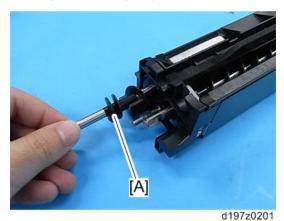

**U** Note

- Each auger is different; please make sure that the augers are attached correctly.
- [A]: Development Mixing Auger (L)
- [B]: Development Mixing Auger (R)




#### 4

## **Waste Toner**

#### **Waste Toner Bottle**

- 1. Open the front cover.
- 2. Pull out the waste toner bottle [A] (𝒯x1, ▼×1).

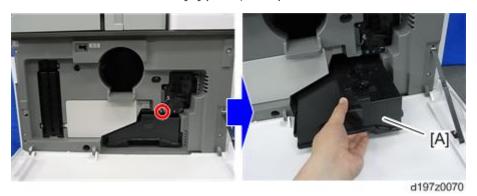


**U** Note

• There is no waste toner bottle set switch. If you remove the waste toner bottle, be sure to replace it before you finish work on the machine.

### **Toner Collection Full Sensor**


- 1. Waste toner bottle (page 511).
- 2. Tone collection full sensor [A] ( \*1).

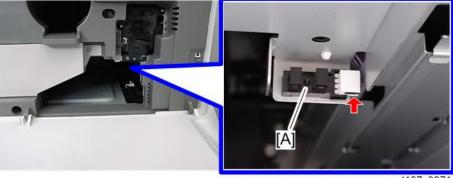

d197z0071


## **Recycling Shutter Solenoid**

- 1. Waste toner bottle (page 511).
- 2. PCDU (page 489).
- 3. Controller box (page 604).
- 4. Development Bearing Cooling Fan for D200/D201/D202 models only (page 615).
- 5. Duct [A] (@×2).

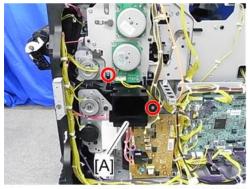

d197z0468


6. ⋘×3.

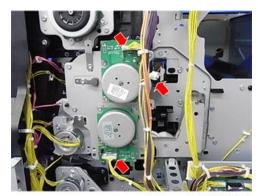


d197z0469

## 4


# 7. Motor unit [A] (\$\mathfrak{O}^{\mathfrak{O}} \times 8).

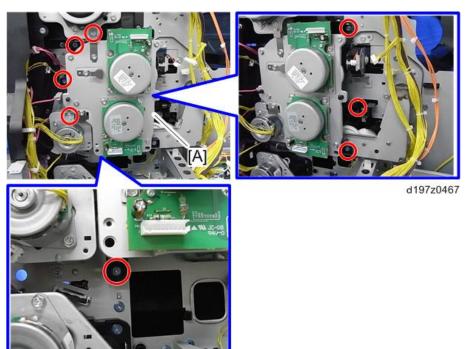

## 8. Bracket [A] (@\*\*4, washer \* 1).

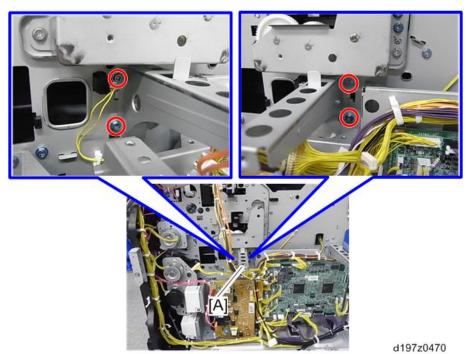


9. Recycling shutter bracket [A] (@×4).

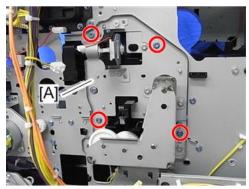

d197z0472



- Spread paper on the floor to catch possible toner spills.
- 10. Recycling shutter solenoid [A] (\$\mathbb{O}^\* \times 2, \$\mathbb{W}^\* \tau 1).

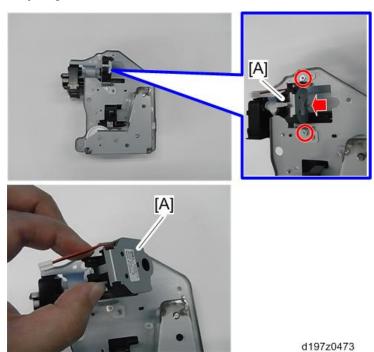


## **Recycling Shutter**

1. Recycling shutter solenoid (page 512).


Δ

## 2. Bracket [A] (🏵×4).

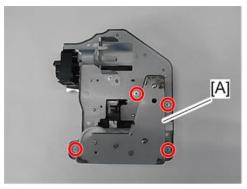


d197z0480

3. Two pulleys [A] [B] and belt [C] ( $\mathbb{Q} \times 1$ ).

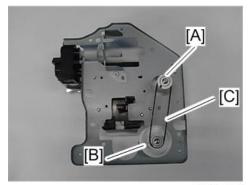

d197z0481

4. Bracket [A] (\$\mathfrak{O}^{\pi} \times 2, \$\mathfrak{O}^{\pi} \tau 1, bearing \times 1).

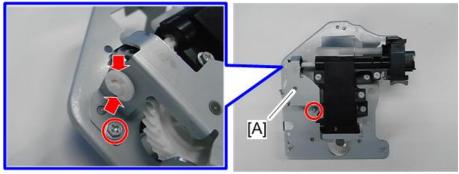


d197z0482



Place a sheet of paper underneath the bracket, and then put the bracket on the sheet.
 Otherwise, the grease applied to the gear in the bracket may adhere to the floor.

## 5. Recycling shutter unit [A] ( \$\mathbb{G}^\* \times 3, Gear \times 1 ).

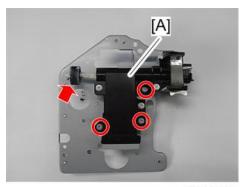

d197z0483




 Place a sheet of paper underneath the recycling shutter unit, and then put the recycling shutter unit on the sheet. Otherwise, the grease applied to the gear in the unit may adhere to the floor.

#### Δ

# **Transfer Unit**


## Transfer Unit

- 1. Open the right cover.
- 2. Close the transfer unit [A]

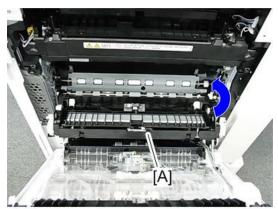

d197z0140

3. Remove the clip of the transfer unit [A] and disconnect the connector.

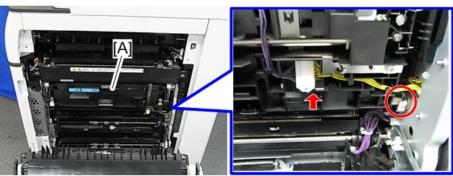

d197z0141

4. Slide the bearing in the blue arrow direction to release it from the frame of the main machine




d197z0142

5. Open the transfer unit [A].




6. Release the arm of the transfer unit [A] ( $\mathbb{R} \times 1$ ).

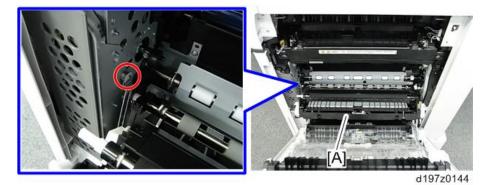

#### 4

#### 7. Transfer unit [A]

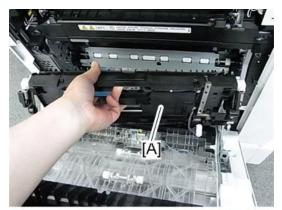

d197z0145

#### Transfer Roller Unit



- Before replacing the Transfer roller unit, set the setting of SP3-701-108 to "1" and turn off the main power switch.
- If you have to turn the power on again before replacing the part, execute the SP again before replacing the part.
- After replacing the Transfer roller unit, turn on the main power on.
- 1. Open the right cover.

2. Release the claws of the transfer roller unit [A].



#### 3. Transfer roller unit [A]



#### **ID Sensor**

#### Before Replacing the ID Sensor



• You must take note of the original value of SP3-331-061 to prepare for the possibility that the process control after replacement will not be done properly.

Л

A QR-code is pasted on the sensor head of an ID sensor, which includes the characteristic value for the sensor. This characteristic value must be input to SP3-331-061 before replacing the ID sensor.

 Take a note of the characteristic value in the following red-dashed part on the new ID sensor.




d197z0181

- 2. Turn the main power ON and enter SP mode.
- 3. Input the characteristic value to SP3-331-061.

#### Replacement Procedure

- 1. Open the right cover.
- 2. ID sensor [A] (@×1, @×1)

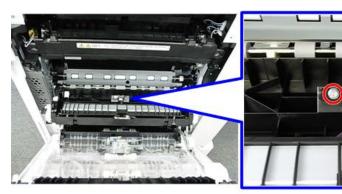

d197z0153

### Transfer Unit Open/Close LED

1. Open the right cover.


### 2. Guide plate [A] (▼×2)






d197z0150


### 3. LED cover [A] (@x1)

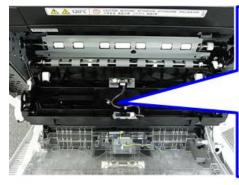

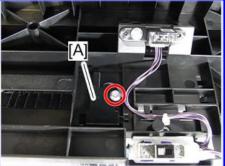

d197z0151

# 4. Transfer unit open/close LED [A] (💝×1)

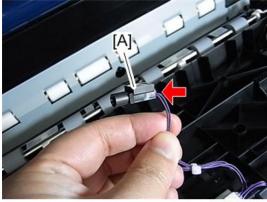

d197z0152

## Temperature/Humidity Sensor

1. Pull out the 1st and 2nd paper feed trays.

# 2. Right lower cover [A] (@x1)



d197z0154

3. Inserting a driver from the frame hole, remove the screw of the temperature/humidity sensor [A] (50 × 1)



d146z0036


4. Temperature/humidity sensor [A] (🌣 1, 🌾 1)




d197z0155

## Fusing Entrance Sensor

- 1. Open the right cover.
- 2. Fusing entrance sensor [A] with bracket (@x1)

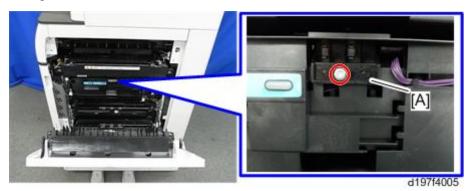


3. Fusing entrance sensor [A] ( ×1)

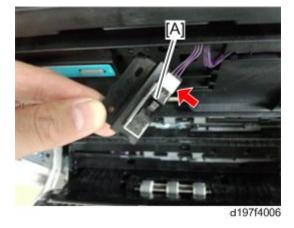

### Transfer Unit Open/Close Sensor

1. Open the right cover.


#### 4

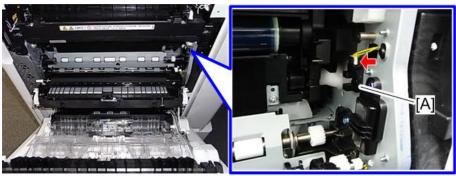

# **Drive Unit**


### **Drum/Waste Toner Motor**

- 1. Rear right cover (page 423)
- 2. Drum/Waste Toner Motor [A] (@×4, &×1)

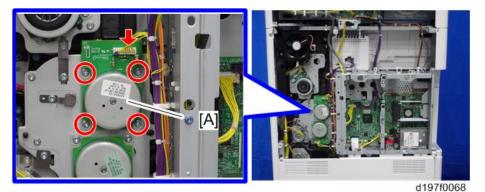

### **Development Motor**

- 1. Rear right cover (page 423)
- 2. Development Motor [A] ( \*\*\* 4, \*\*\*\* 1)

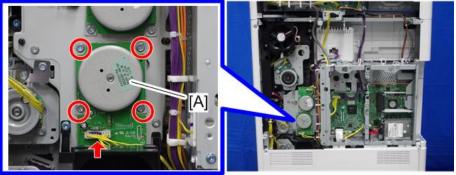


d197f0069

## Fusing/Paper Exit Motor (D197/D199 Only)


1. Rear right cover (page 423)

2. Fusing/paper exit motor [A] (\$\mathfrak{G}^{\times} \times 4, \$\mathfrak{G}^{\times} \times 1)\$

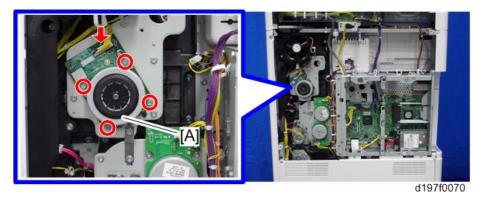

## Fusing Motor (D200/D201/D202 Only)

- 1. Rear right cover (page 423)
- 2. Fusing motor [A] (\$\text{\$\psi} \times 4, \$\times 1\$)

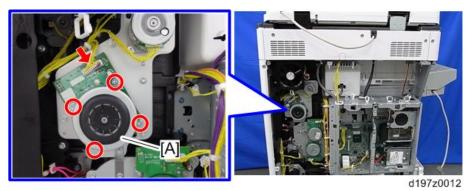

## Paper Exit Motor (D200/D201/D202 Only)

1. Rear right cover (page 423)

2. Paper exit motor [A] (\$\mathfrak{O}^{\times} \times 2, \$\mathfrak{O}^{\times} \times 1)\$



d197z0013

## Registration Motor

- 1. Rear right cover (page 423)
- 2. Registration motor [A] (©×2, ©×1)



d197f0071

## Paper Feed Motor

1. Rear lower cover (page 424)

## 2. Paper feed motor (@x2, @x1)



d197f0072

## Vertical Transport Motor

- 1. Rear lower cover (page 424)
- 2. Vertical transport motor (@x2, &x1)




d197f0073

### Transfer Roller Contact Motor

- 1. Front cover (page 418)
- 2. Inner cover (page 434)

3. Transfer roller contact motor [A] (\$\mathfrak{G}^\* \times 3, \$\mathfrak{G}^\* \times 2)\$

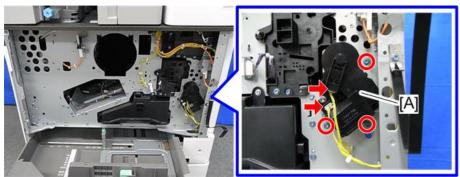

d197z0014


### **Toner Hopper**

- 1. Toner supply housing (page 434)
- 2. Controller box (page 604)
- 3. Screws on the toner hopper [A] ( \$\mathbb{O}^{\times} \times 3)




#### Λ

### 4. Gear [B] on the gearbox [A] (W×1)

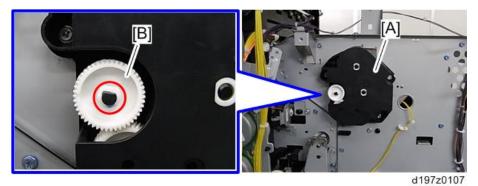

5. Screws and tab on the gearbox [A] (@x3, tabx1)

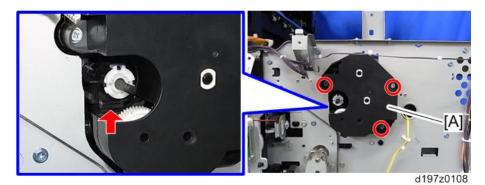


#### 6. Toner hopper [A]



d197z0109

**U**Note


• Toner remains in the toner hopper [A]. Be sure to place the toner hopper on a sheet of paper to protect against toner spillage.

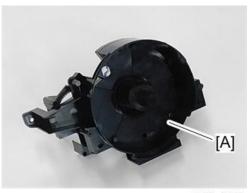

d197z0110

**Important** 

- Attach the toner supply pipe [A] before installing the gear box and toner hopper.
- Fit the hole of the supply pipe to the pin [B] and then stabilize the pipe (3°x1).

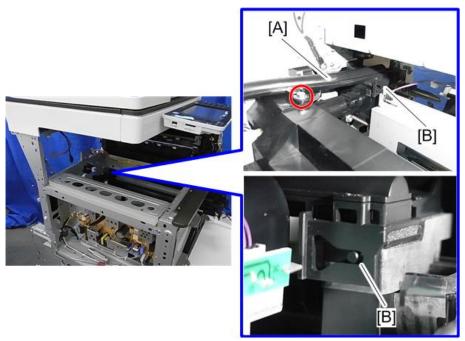


d197z0475

# Toner Supply Motor


1. Toner Hopper (page 530)

2. Screws and connector on the gearbox [A] (\$\text{\$\exitt{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\exitt{\$\text{\$\ext{\$\text{\$\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\exititt{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\}}\$}}}\$}\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{

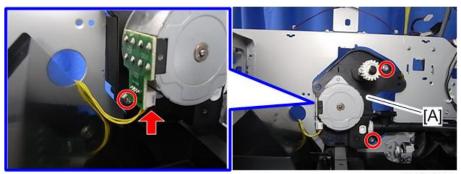

d197z0111


3. Remove the gear [A] and part [B] from the gear box cover [C].

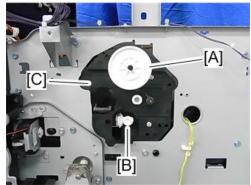

d197z0462




• Make sure that the angle of the part [B] is as shown below when attaching the part [B] to the gear box cover.

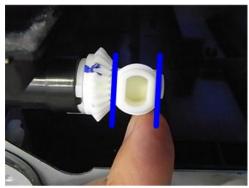


d197z0463

#### 4. Gear box cover [A].

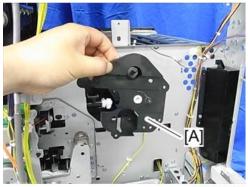


d197z0464

5. Remove the Toner supply motor [B] with its spacer from the gear box cover [A] ( $^{\circ\circ}$ ×2).

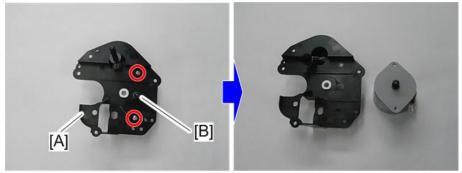

d197z0465

### 6. Spacer [B] from toner supply motor [A].

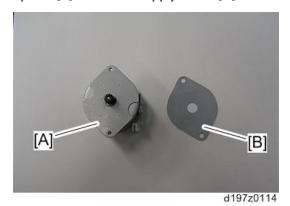

# **Fusing Unit**

#### **Fusing Unit**

#### Replacement



- In 100 V models, only one of the AC lines for the fusing unit is shut off when you turn off the main power; the other line carries current even when you turn off the main power switch. Thus, not only turn off the main power switch, but also always pull out the AC power cord from the wall socket before doing replacement.
- Because there is a danger of burns on contact with hot parts of the fusing unit, start work when the temperature drops to a low enough temperature.
- To clear SC544-02 or SC554-02, replacing the fusing unit or installing a fuse (provided in the heating sleeve belt unit) in the fusing unit must be required. Follow the procedure below to clear SC544-02 or SC554-02.
- 1. Installing a new fusing unit.
- 2. Clear SC544-02 or SC554-02 with SP5-810-002
- 3. Turn off and on the machine.



• D197/D198/D199


When the fusing unit is used past its PM cycle, the fusing unit may break, causing a service call. Therefore, the machine displays a warning on the operation panel at 240K pages and stops at 260K pages.

• D200/D201/D202

When the fusing unit is used past its PM cycle, the fusing unit may break, causing a service call. Therefore, the machine displays a warning on the operation panel at 320K pages and stops at 350K pages.



- If you replace a whole fusing unit, you do not need to perform SP 3-701. This is because the machine detects a new unit automatically. If you replace only a part of the fusing unit, however, such as the pressure roller, you must set the setting of SP3-701 for that part.
- 1. Open the right cover.
- 2. Remove the screws on the Fusing unit [A] and disconnect the connectors (\$\mathbb{G}^{\tilde{x}} x2, \$\mathbb{G}^{\tilde{x}} x2)\$.
  - Do not pull out the fusing unit now. The fusing unit is still connected to the machine.

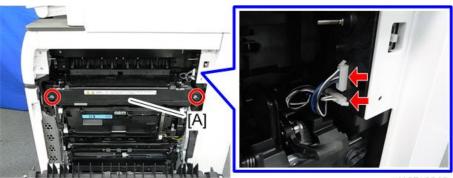

d197z0046


**U** Note

• When disconnecting the harness, hold the connector as shown below in order to avoid breaking the connector pins.




d197f0600

3. Fusing unit connector cover [A]

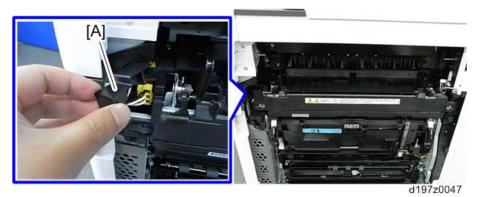

**Note** 

Attach the fusing unit connector cover by fitting the space on the connector cover [A]
 (surrounded by red dashes in the diagram) and the frame of the fusing unit [B] together when
 installing.

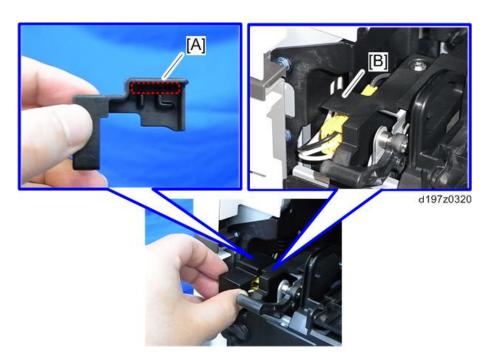


• The connector cover must be attached **before** screwing in the fusing unit.

# 4. Connector [A] ( x1)



d197z0048

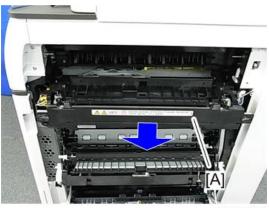


d197z0049



• When installing the fusing unit, attach the rear screw first, then attach the front screw.


### **Fusing Entrance Guide Plate**

- 1. Fusing unit (page 535)
- 2. Fusing entrance guide plate [A] (\$\mathbb{O}^2 x 3)

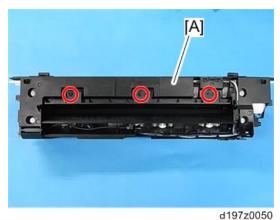


Cleaning the Fusing Entrance Guide Plate

Carefully remove toner adhering as shown in the diagram below with a dry cloth. Then, wipe with a cloth moistened with alcohol.

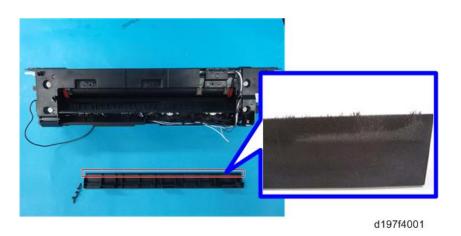

## **Fusing Exit Guide Plate**

- 1. Fusing unit (page 535)
- 2. Open the fusing exit guide plate [A].

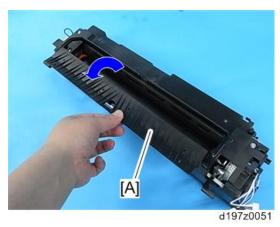


**U** Note

• Wipe clean with a dry cloth. Then wipe clean with a cloth dampened with alcohol.

## **Fusing Upper Cover**

1. Fusing unit (page 535)

## 2. Release the two harnesses [A].

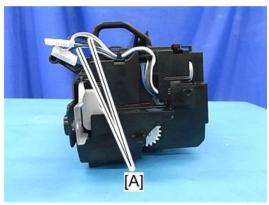


d197z0054

## 3. Connector [A] ( x1)



d197z0055

## 4. Fusing upper cover [A] ( \$\mathbb{O}^2 x 4)

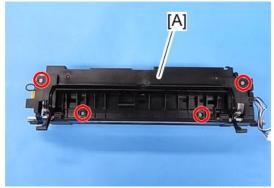


d197z0056



 You must route the harnesses for the pressure roller temperature sensor and the fusing roller temperature sensor correctly when reassembling the fusing unit. See the notes when reassembling the fusing unit. (Notes When Reassembling the Fusing Unit)


## **Fusing Lower Cover**

- 1. Fusing unit (page 535)
- 2. Earth [A] (@x1)

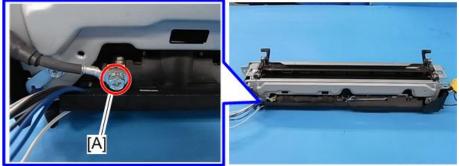

d197z0057


3. Fusing lower cover [A] (Fx1, Fx5)

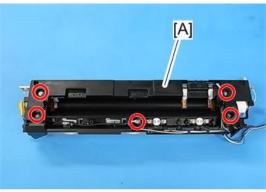

d197z0058

**U** Note

• The earth plate [A] is uncovered after the fusing lower cover removal. Be careful not to damage it.

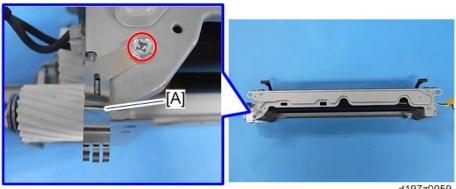

d197z0059



You must route the harnesses for the pressure roller temperature sensor and the fusing roller temperature sensor correctly when reassembling the fusing unit. See the notes when reassembling the fusing unit. (Notes When Reassembling the Fusing Unit)

### **Heating Sleeve Belt Unit**

## Preparation

- Set the setting of SP3-701-116 to "1" and turn the main power OFF before replacing.
- If you have to turn the power on again before replacing the part, execute the SP again before replacing the part.
- After replacing the unit, turn the main power ON.

## **⚠** CAUTION

- To clear SC544-02 or SC554-02, replacing the fusing unit or installing a fuse (provided in the heating sleeve belt unit) in the fusing unit must be required.
- When clearing SC544-02 or SC554-02 by installing a fuse (provided in the heating sleeve belt unit) in the fusing unit, follow the procedure below for replacing the heating sleeve belt unit.
  - 1. Installing a new fusing unit.
  - 2. Clear SC544-02 or SC554-02 with SP5-810-002
  - 3. Turn off and on the machine.
- When replacing the heating sleeve belt unit at EM replacement, installing a fuse is not necessary. Do not use the fuse for EM replacement.

## **CAUTION**

 The new unit detection fuse packed with the heating sleeve belt unit is used to cancel SC544-02/554-02. Discard the fuse if these SCs did not occur.

## Replacement


- 1. Fusing upper cover (page 539)
- 2. Fusing lower cover (page 541)
- 3. Two pressure springs ( x2)



4. Left and right frame (\$\mathscr{G}^{\pi}x2\$ for each frame)



#### 5. Heating sleeve belt unit [A]

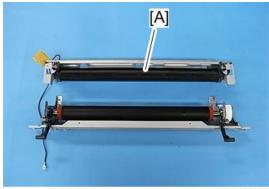

d197z0062

#### To Clear SC544-02 or SC554-02


## **ACAUTION**

- To clear SC544-02 or SC554-02, attach the new unit detection fuse provided with the heating sleeve belt unit or replace the fusing unit.
- 1. Prepare a new fuse provided with the heating sleeve belt unit.




d197z0334

#### 2. Connect the fuse pins into the fusing unit connector.

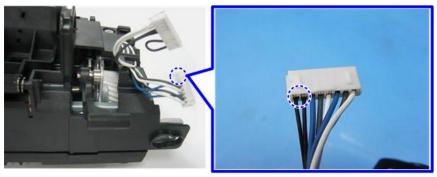

d197z0335

- Route the harness of the fuse through the slit (arrow-pointed).
- 4. Install the fuse in the notch (circled place).

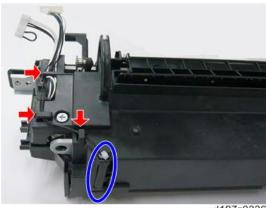

d197z0336

- 5. Reassemble the fusing unit.
- 6. Install the fusing unit in the machine.
- 7. Enter the SP mode, and then clear SC544-02 or SC554-02 with SP5-810-002.
- 8. Turn off and on the machine.

## **Pressure Roller and Pressure Roller Bearings**

### Adjustment before Replacing the Pressure Roller and Pressure Roller Bearings


Before replacing the pressure roller, set the setting of SP3-701-118 to "1" and switch the power OFF. Then replace the pressure roller and turn the main power ON.

Before replacing the pressure roller bearings, set the setting of SP3-701-119 to "1" and turn the main power OFF. Then replace the pressure roller bearings and turn the main power ON.

If you have to turn the power on again before replacing the part, execute the SP again before replacing the part.

### Replacement

- 1. Heating sleeve belt unit (page 542)
- 2. Pressure roller gear [A] (C-ring x1)

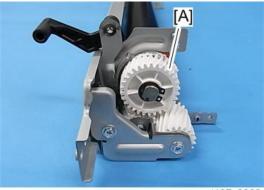

d197z0063


3. Pressure roller rear bearing [A]



d197z0064

#### 4

### 4. Pressure roller front bearing [A] (C-ring x1)

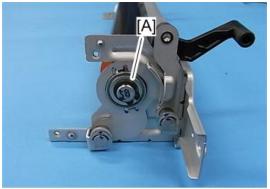

d197z0065

### 5. Pressure roller [A]



d197z0066

## Thermostat Unit


- 1. Fusing unit (page 535)
- 2. Thermostats [A] (@x2 for each thermostat)



d197z0067

## **Fusing Roller Temperature Sensor**

- 1. Fusing lower cover (page 541)
- 2. Fusing roller temperature sensors [A]

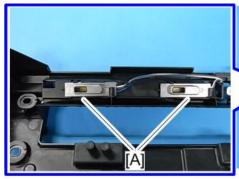




d197z0068

## Pressure Roller Temperature Sensor

- 1. Fusing lower cover (page 541)
- 2. Pressure roller temperature sensors (\$\mathfrak{O}^2 x 1\$, for each)



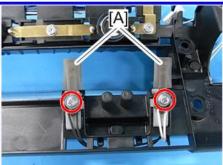

d197z0069

## **Fusing Thermopile**

1. Fusing unit (page 535)


#### 4

## 2. Fusing thermopile unit [A] (\$\mathbb{O}^{\pi}x2)\$



d197z0186

## 3. Fusing thermopiles [A] (\$\mathbb{O}^2 x2, \$\mathbb{O}^2 x2)\$

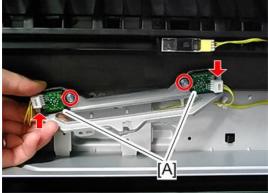

d197z0187


## Notes When Reassembling the Fusing Unit

Route the harnesses for the pressure roller temperature sensor [A] and the fusing roller temperature sensor [B] correctly when reassembling the fusing unit.


Harness [A] for the pressure roller temperature sensor has black and white wires. Routing starts from the bottom of the fusing unit, then the rear, and to the side.

Harness [B] for the fusing roller temperature sensor has black, white, and blue wires. Routing starts from the bottom of the fusing unit, then the rear, and to the top.

### Harness route: when looking at the bottom of the fusing unit

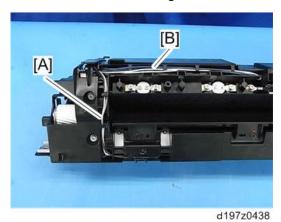

Harness route: when looking at the side of the fusing unit

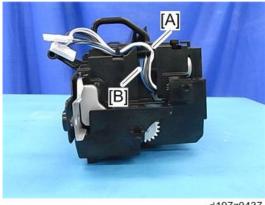

d197z0437

#### 4

# **Paper Exit**


## **Paper Exit Unit**

- 1. Open the right cover.
- 2. Fusing unit (page 535)
- 3. Paper exit cover (page 430)
- 4. Inner cover [A] (@×2)



d197z0031


5. Paper exit unit [A] (@x1, @x1)

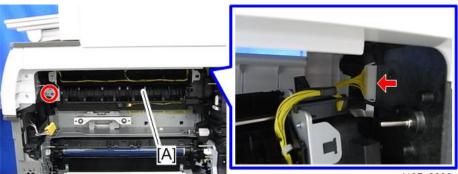

d197z0032


## Paper Exit Switching Solenoid

1. Paper exit unit (page 551)

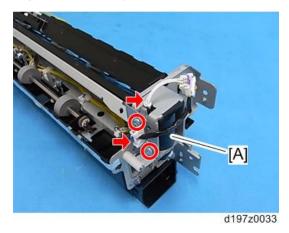


## Paper Exit Sensor


- 1. Paper exit unit (page 551)
- 2. Feeler [A]

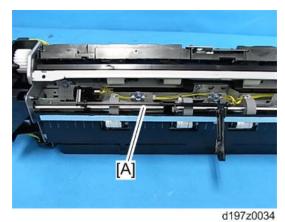

3. Paper exit sensor with bracket [A] (@\*x1, \$\simex2)

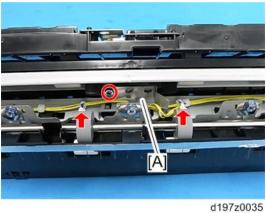

4. Paper exit sensor [A] (hooks, ∜×1, √×1)

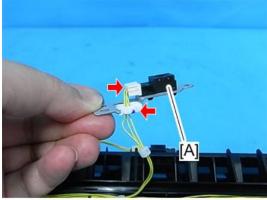


d197z0036

### Reverse Sensor


1. Paper exit unit (page 551)

## 2. Reverse sensor with bracket [A] (@x1)

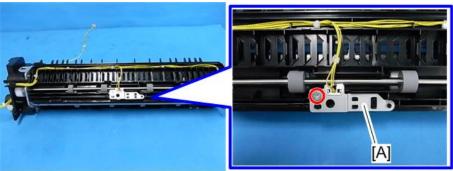

d197z0037

## 3. Reverse sensor [A] (hooks, \*x1)

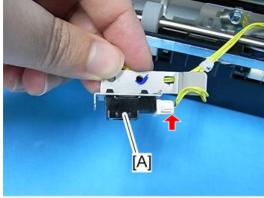


d197z0038

## Paper Exit Full Sensor


1. Paper exit unit (page 551)

2. Paper exit full sensor with bracket [A] (@x1, \$x1)

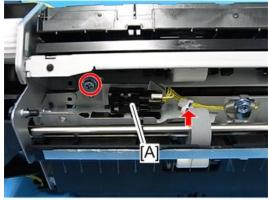

d197z0039

3. Paper exit full sensor [A] (hooks, \*\*1)

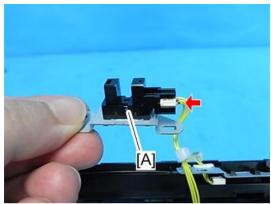


d197z0040

### Reverse Motor


1. Paper exit unit (page 551)

## 2. Gear [A]

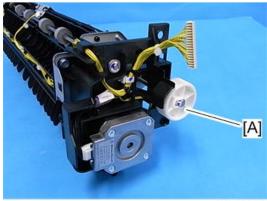


d197z0041

3. Release the harness (❤×1, ॐ×2,).

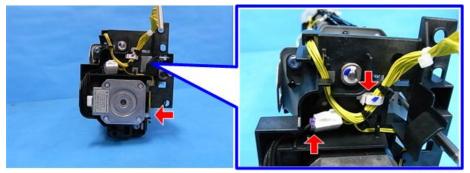


d197z0042

## 4. Bearings[A] (®×1)

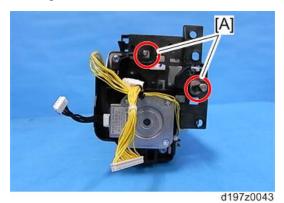


#### 4

## 5. Reverse motor with bracket [A] (@x3)

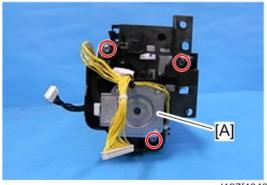

d197f4043


6. Reverse motor [A] (©×2, ©×1)

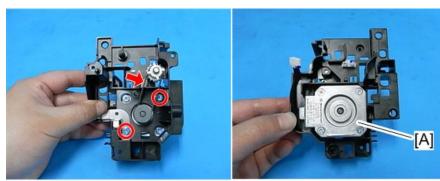

d197z0044

## **Fusing Exit Sensor**

- 1. Paper exit unit (page 551)
- 2. Fusing exit sensor [A] (hooks, \*\*1)

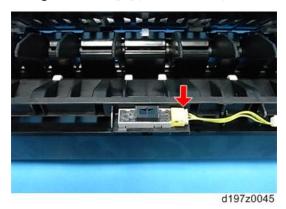

557

# Paper Feed



- The 1st paper feed unit can be removed without removing the duplex unit (just open the right cover), and you can remove the paper feed unit after pulling out the paper tray.
- Note that the 1st paper feed unit and 2nd paper feed unit are not interchangeable.

## **Paper Feed Unit**


### 1st Paper Feed Unit

- 1. Right cover (page 427).
- 2. Pull out the 1st paper feed tray.
- 3. Remove the screws attached to the 1st paper feed unit [A] (@x2).



d197z0328

- 4. Pull out the 1st paper feed unit [A] slightly toward the front, and then take off the paper feed guide plate [B].
  - Release the rear side of the shaft first to remove the paper feed guide plate.

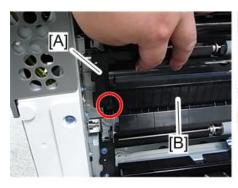



d197z0329




• The following picture shows the rear side shape of the shaft.



d197z0007

5. 1st paper feed unit [A] ( x1)

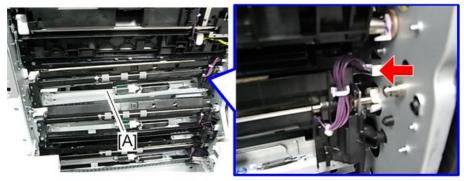


d197z0330

## 2nd Paper Feed Unit

1. Right cover (page 427).

## 2. Pull out the 2nd paper feed tray [A].

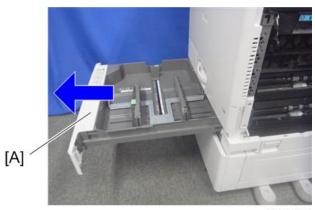


d1462184



• Depending on the model, remove the right lower cover or open the paper transport cover.

## 3. Bracket [A] (@×1)

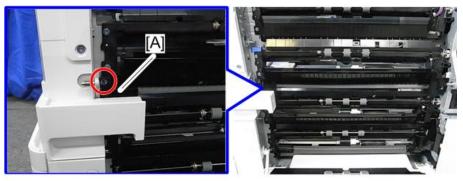

d197z0441

## 4. Lift the harness guide [A], and then remove it ( $\mathfrak{S}^* \times 1$ ).



d197z0442



• The harness guide has a claw, so make sure that you do not break it when removing.



d197z0443

- 5. Remove the paper feed guide plate [A].
  - Release the rear side of the shaft first to remove the paper feed guide plate.





d197z0444


## 6. 2nd paper feed unit [A] (@x2, Fx1)




d197z0333

## Paper Dust Collection Unit

- 1. Open the right cover.
- 2. Screw on the paper dust collection unit [A] (0°×1)

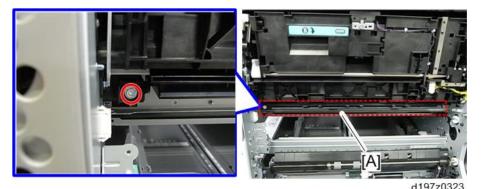


3. Release the tab on the paper dust collection unit [A] ( $\nabla \times 1$ ).

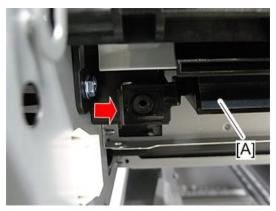


d197z0324

4. While slightly opening and holding the transfer unit [A] with your hand, remove the paper dust collection unit [B] in the order shown in the picture below (③\*x1).

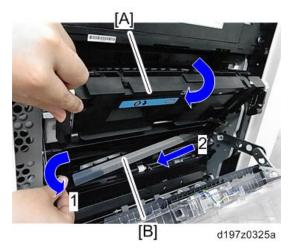



• The right side of the paper dust collection unit has a C-shaped cutout. Do not pull the unit by force during removal. When installing, open the transfer unit [A] to prevent the sheet [B] from breaking.

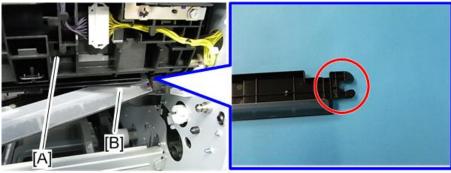

d197z0326


## Pick-up Roller, Paper Feed Roller, Separation Roller, Torque Limiter

## 1. Roller holder [A] (®×1)



d1462188


## 2. Pickup roller [A]

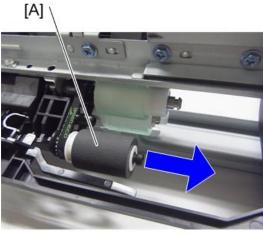

d1462189


#### Λ

## 3. Paper feed roller [A]

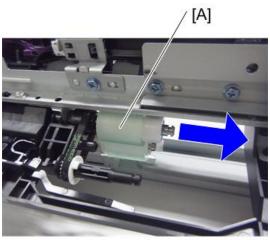


d1462190

## 4. Separation roller [A] (🗓×1)

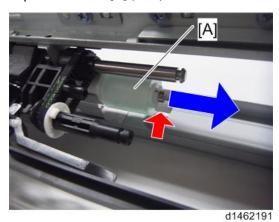


### 5. Torque limiter [A]

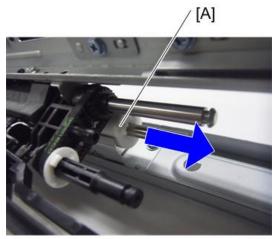

d1462192


## 1st / 2nd Paper Feed Tray Lift Motor

- 1. HVPS (page 602)
- 2. 1st paper feed tray lift motor [A] (\$\mathbb{O}^\* \times 2, \$\mathbb{O}^\* \times 1)\$

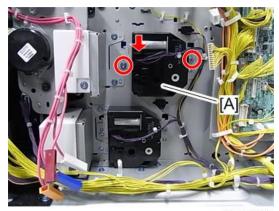

d197z0008

3. 2nd paper feed tray lift motor [A] (@x2, Fx1)

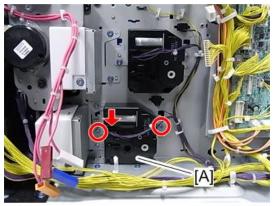


d197z0009


## 1st / 2nd Paper Feed Sensor



- There is no difference in removal procedure between 1st paper feed sensor and 2nd paper feed sensor
- 1. Paper feed unit (page 558)
- 2. Paper feed sensor bracket [A] (@\*x1, @\*x1)

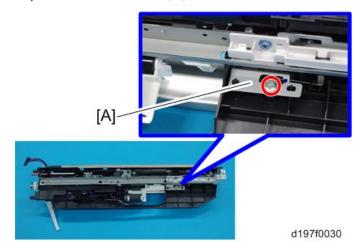


## 3. Paper feed sensor [A] (hooks)

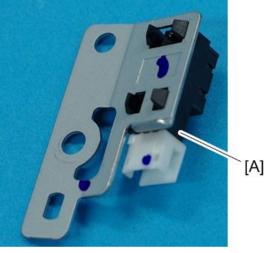

d197f0031



• Make sure that the end of the spring on the sensor unit is in the hole.

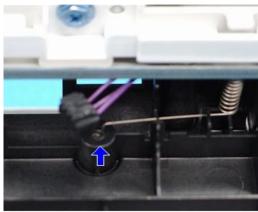


d197f0032

## Vertical Transport Sensor


1. Paper feed unit (page 558)

## 2. Vertical transport sensor unit [A] (@×1, @×1)

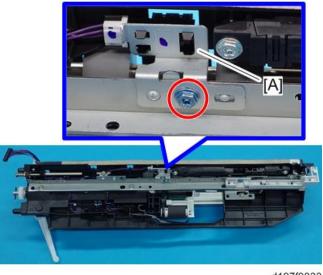

d197f0033

### 3. Vertical transport sensor [A] (hooks)

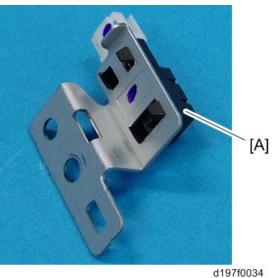


## **Limit Sensor**



- There are two limit sensors in this model but the removal procedure is the same.
- 1. Paper feed unit (page 558)

## 2. Limit sensor [A] ( x1)

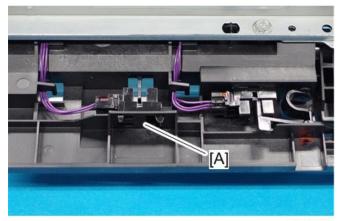


d197f0035

## 1st Paper End Sensor / 2nd Paper End Sensor




- There is no difference in removal procedure between 1st paper end sensor and 2nd paper end sensor.
- 1. Paper feed unit (page 558)
- 2. Feeler [A] (▼×1)

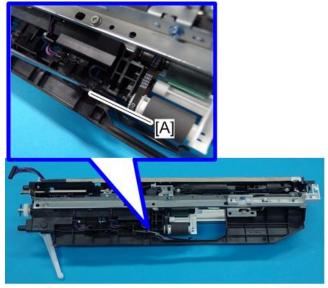

d197f0036


Λ

3. Paper end sensor [A] (F×1)

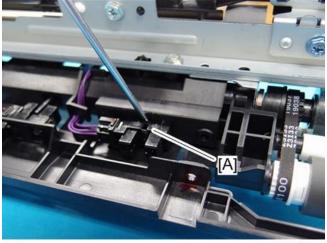

d197f003

4. After reinstalling the paper end sensor, check the operation of the actuator [A].

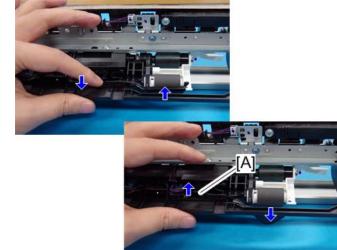

d197f0038

## **Registration Sensor**


- 1. Open the right cover (page 427).
- 2. Transfer unit (page 517)

## 3. Inner guide bracket [A] (5°×2)



d197z0126

## 4. Remove the registration sensor (hooks, $\mathscr{Y} \times 1$ , $\mathscr{T} \times 1$ ).

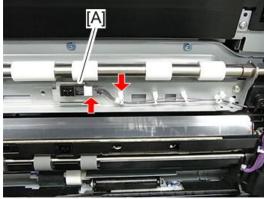


d197z0127

#### 4

# **Duplex Unit**

## Duplex/By-pass Motor

- 1. Right Cover (page 427)
- 2. Duplex inner cover [A] ( \*\*4)

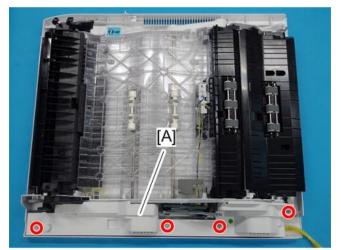


d197f0057

3. Duplex/by-pass motor unit [A] (@x3, Fx1)




d197f0058

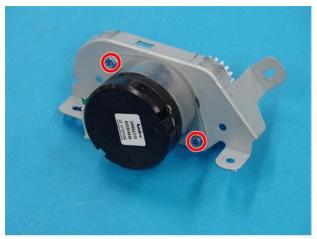

d197f0059

## **Duplex Entrance Motor**


- 1. Right Cover (page 427)
- 2. Duplex inner cover [A] (\$\mathbb{O}^\* \times 4)\$

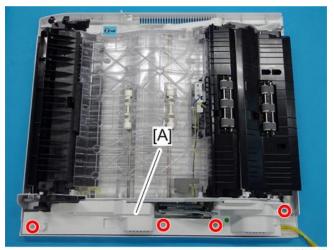

d197f0057


Λ

### 3. Duplex entrance motor bracket [A] (\$\mathbb{O}^\* \times 2, \$\mathbb{S}^\* \times 1)\$

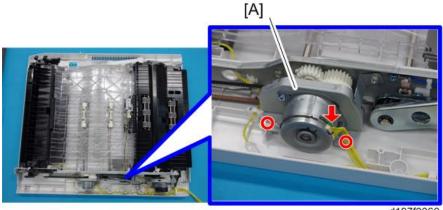

d197f0060

4. Duplex entrance motor [A] (\$\mathbb{O}^{\times} \times 2)\$

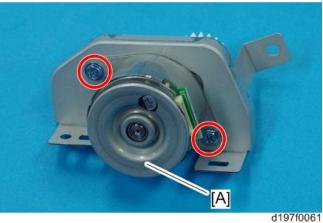


### **Duplex Entrance Sensor**

- 1. Right Cover (page 427)
- 2. Screws and stoppers for the paper transfer guide plate [A] (ॐ×2, ▼×1)




d197f0062


#### 3. Duplex inner entrance guide [A]

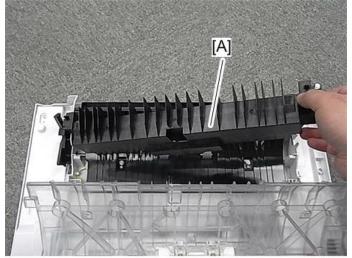

d197f4062


## 4. Duplex outer entrance guide [A] (@×8, F×1, \$×1)

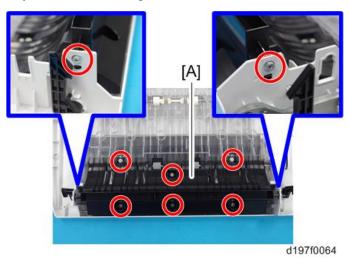

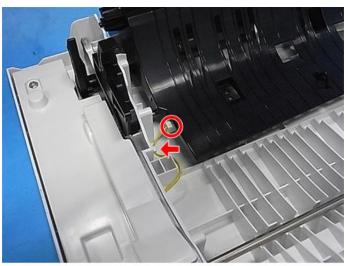

d197f0065

#### 5. Duplex entrance sensor [A] (hooks)

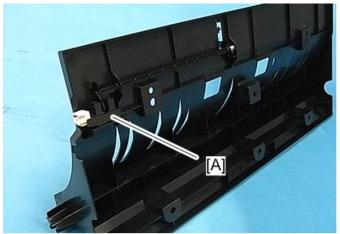


d197f4063

## Duplex Exit Sensor


1. Open the right cover.

## 2. Duplex exit sensor bracket [A] (@\*1, @\*\*1)

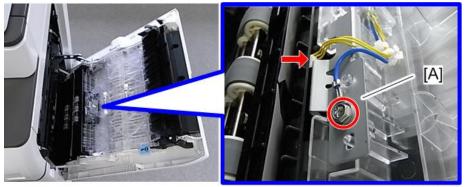

d197f0066

#### 3. Duplex exit sensor [A] (hooks)

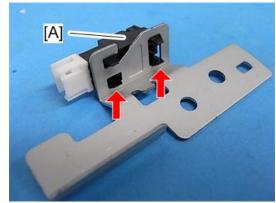


d197z0403

# **Bypass Tray Unit**

## Bypass Tray

- 1. Open the right cover.
- 2. Wire [A] (🏵×1)

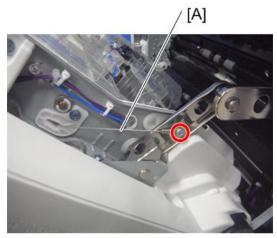

d1462410

3. Release two arms [A] [B] (\$\mathbb{B}\$ x2).



#### 4. Open the right cover wide.




d197z0448

#### 5. Paper transport guide [A] (\$\mathbb{O}^\* \times 2)




## 6. Harness (☞×1,⑤×1, ☞×1)

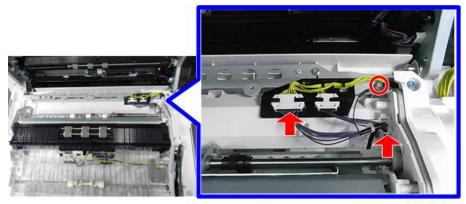


d197f0097

## 7. Bypass tray [A] (®×4)

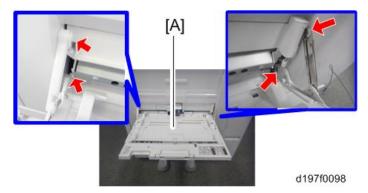


## Bypass Paper End Sensor

1. Open the bypass tray [A].

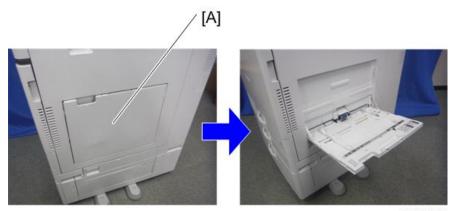


d1462416


#### 2. Bypass paper end sensor cover [A]

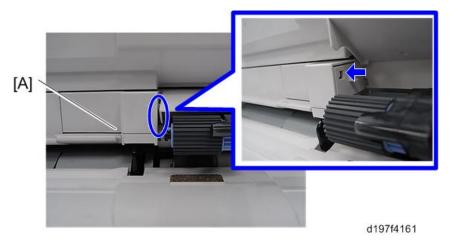

3. Bypass paper end sensor unit [A] (@x1, @x1)

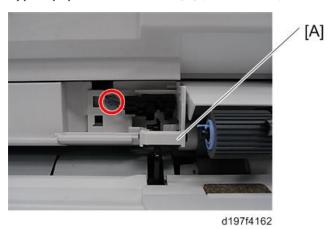

4. Bypass paper end sensor [A] (hooks)

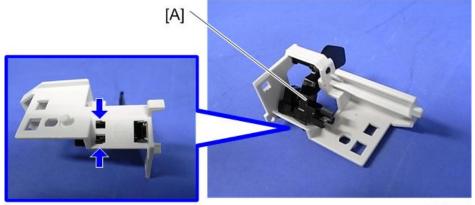

d197f4163

#### Bypass Pick-up Roller

- 1. Open the bypass tray (page 579).
- 2. Bypass pick-up roller [A] (®×1)



#### Bypass Paper Feed Roller

- 1. Bypass paper end sensor unit (page 581 "Bypass Paper End Sensor")
- 2. Bypass paper feed roller [A] (®×1)



## **Bypass Separation Roller**

1. Paper transport guide (page 579)

2. Bypass separation roller [A] (🕅×1)



## Torque Limiter


- 1. Bypass separation roller (page 583)
- 2. Torque limiter [A]




## Bypass Width Sensor

1. Bypass tray (page 579)

## 2. Six screws on the bypass tray [A] (\$\mathbb{O}^{\mathbb{O}} \times 6).

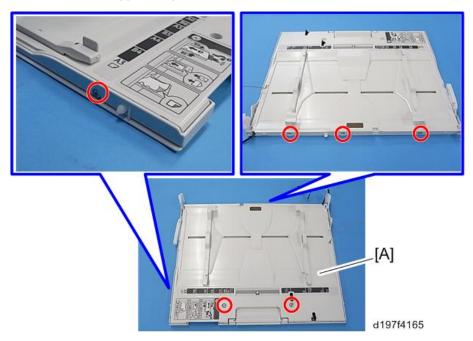


3. Release the hooks around the bypass tray [A]

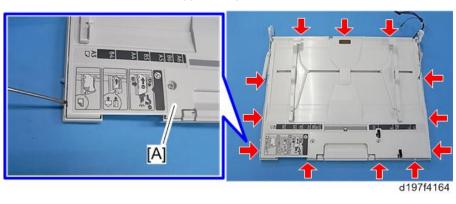


**U** Note


• There is a hook in the tray cover. Be careful not to damage it during removal or installation.

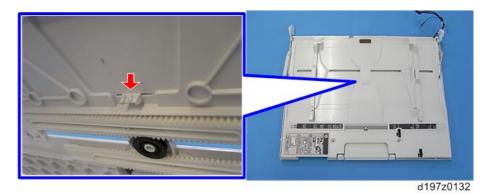


#### 4. Release the links.

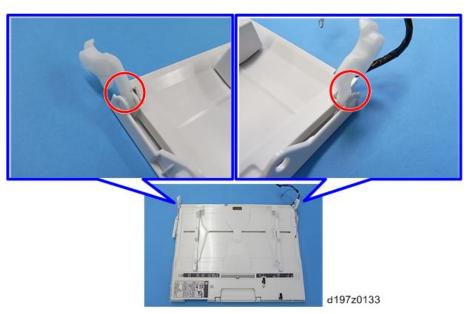

## 5. Bypass tray upper cover [A] (pin x 1, \*\*\square\*x1)

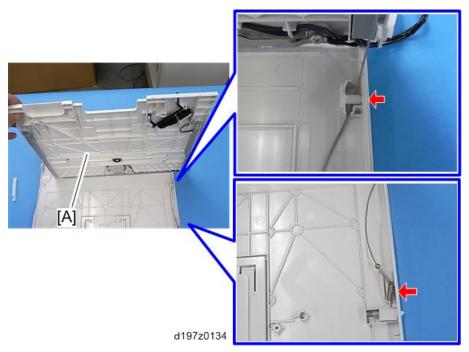

6. Bypass width sensor [A] (❤ ×1, ▼ x2)

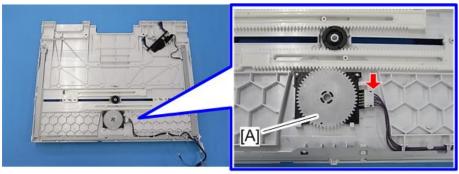


d197z0135



• When installing, the holes must align as shown below.



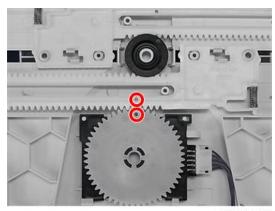

d197z0449

## Bypass Length Sensor

- 1. Bypass tray upper cover (page 584).
- 2. Bypass length sensor [A] (💝×1, hooks)




d197z0136

# **PCBs and Other Items**


#### Overview

#### **Around the Controller Box**

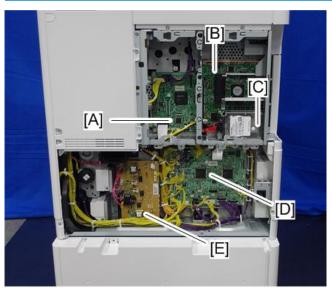

d197f0078

[A]	IPU
[B]	Controller Board
[C]	HDD
[D]	BCU
[E]	HVPS

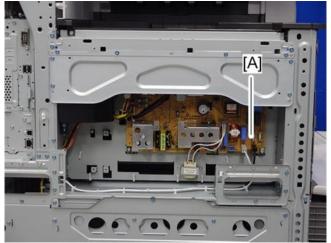

d197f0079

[A] PSU

#### IPU

## **ACAUTION**


- The FFC connector has a lock mechanism. Do not use force to pull it out.
- 1. Controller rear cover (page 422)
- 2. IPU Sub if SPDF is installed.

## 3. IPU [A] (௰\*4, ❤\*\*9, ❤️\*1, USB\*1)



#### IPU Sub (If SPDF is installed)


- 1. Controller rear cover (page 422)
- 2. IPU Sub [A] (\$\mathbb{O}^\* \times 3, \$\mathbb{O}^\* \times 2)\$

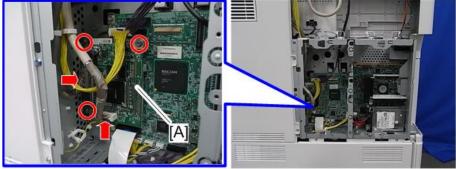

d197z0321

#### **ACAUTION**

- The FFC connector has a lock mechanism. Do not use force to pull it out.
- 1. Rear lower cover (page 424)
- 2. BCU [A] ( \*\*8, \*\*ALL, FFC\*1)

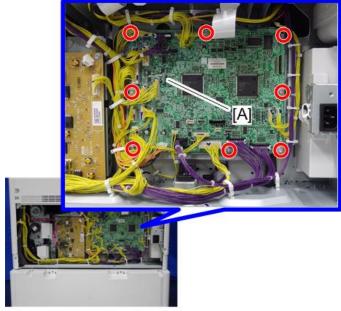

d197f0083

#### When installing the new BCU

Remove the NVRAM (EEPROM) from the old BCU. Then install it on the new BCU after you replace the BCU.

Replace the NVRAM (page 593) if the NVRAM on the old BCU is defective.




• Make sure you print out the SMC reports ("SP Mode Data" and "Logging Data") before you replace the NVRAM (EEPROM).

#### **ACAUTION**

- Keep NVRAMs (EEPROM) away from any objects that can cause static electricity. Static electricity can damage NVRAM data.
- Make sure the serial number is input in the machine for the NVRAM data with SP5-811-004, if not, SC995-001 occurs


#### Replacing the NVRAM (EEPROM) on the BCU

- Make sure that you have the SMC report (factory settings). This report comes with the
  machine.
- 2. Output the SMC data ("ALL") using SP5-990-001/SP5-992-001.
- 3. Turn off the main switch.
- 4. Insert a blank SD card in the SD slot #2, and then turn on the main switch.
- 5. Use SP5-824-001 to upload the NVRAM data from the BCU.
- 6. Turn off the main power switch and unplug the power cord.
- 7. Replace the NVRAM [A] on the BCU with a new one.

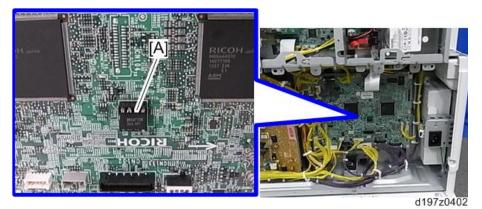

**U** Note

 Install a new NVRAM [C] so that the indentation [B] on the NVRAM corresponds with the mark [A] on the BCU. Incorrect installation of the NVRAM will damage both the BCU and NVRAM.

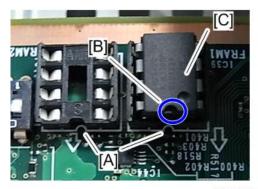

d197z0404

8. Plug in, and then turn on the main switch.



- When the power is turned ON, SC195-00 appears, but continue with the following steps.
- 9. Select the destination setting. (SP5-131-001) (JPN: 0, NA: 1, EU/AA/TWN/CHN: 2)
- Check the machine serial number with SP5-811-004, and then set the machine serial number of SP5-811-001.



- For information on how to configure SP5-811-001, contact the supervisor in your branch
  office.
- 11. Set the area selection with SP5-807-001.



- For information on how to configure SP5-807-001, contact the supervisor in your branch office.
- 12. Turn off the machine, and then turn it back on.
- 13. Use SP5-801-002 "Memory Clear Engine".



- After changing the EEPROM, Some SPs do not have appropriate initial values. Because of this, steps 10 to 12 must be done.
- 14. Turn off the machine, and then turn it back on.
- From the SD card where you saved the NV-RAM data in step 5, download the NV-RAM data with SP5-824-002.
- 16. Turn off the machine, and then remove the SD card from SD slot 2.
- 17. Turn on the main switch.
- 18. Check the factory setting sheet and the SMC data printout from step 2, and set the user tool and SP settings so they are the same as before.

#### **Controller Board**



 Keep NVRAM away from any objects that can cause static electricity. Static electricity can damage NVRAM data.




- · Special Procedure for Machines that have a Self Encrypting Drive (SED) Installed
- The machine holds data, linking the controller board and SED, created automatically during SED installation. The data, however, will not be deleted automatically at controller board replacement.

Therefore, before replacing a controller board, you must delete the link data manually so that the machine can create new link data.

- Do the following steps when doing the replacement.
  - Execute [Erase All Memory] on the operation panel
     [System Settings] [Administrator Tools] [Erase All Memory]
  - 2. Turn OFF the main power switch
  - 3. Replace the controller board
  - 4. Turn ON the main power switch
- Do not turn the main power ON after step 2, until after you replaced the board.
- 1. Controller rear cover (page 422)
- 2. HDD bracket (page 601)
- 3. Controller bracket [A] (@×5, @×2)



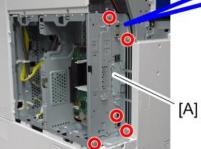


d197f0084

# 4. Controller board (🎾×4)




d197f0085

#### 5. Release the guide rail [A]

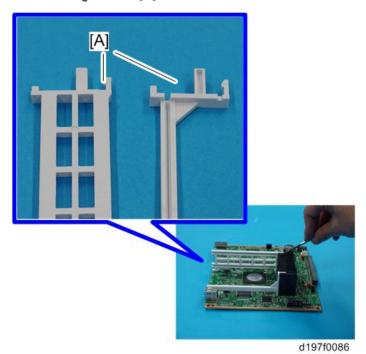


6. Remove the NVRAM on the controller board.

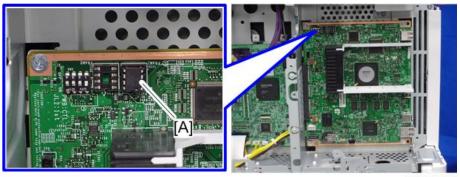

d197z0322



When installing a new controller board, Install a removed or a new NVRAM [C] so that the
indentation [B] on the NVRAM corresponds with the mark [A] on the controller board.
 Incorrect installation of the NVRAM will damage both the controller board and NVRAM.

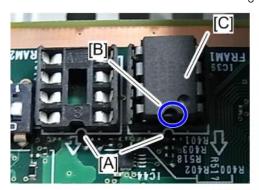

d197z0404

#### NVRAM on the controller board

#### **ACAUTION**

 Referring to the previous procedure, be sure that there are no mistakes in the mounting position and orientation of the NVRAM.

#### **ACAUTION**

- SC195 (Machine serial number error) will be displayed if you forget to attach the NVRAM.
- If you mounted the NVRAM in the wrong direction, each component needs to be replaced because a short circuit was caused in the controller board and the NVRAM.
- Make sure you have the SMC report (factory settings). This report comes with the machine.

- Output all the SMC data using SP5-990-001 (SP Print Mode: All (Data List)).
- 3. Turn off the main power switch.
- 4. Insert a blank SD card in the SD slot 2, and then turn on the main power switch.
- 5. Use SP5-824-001 to upload the NVRAM data from the controller board.
- Make sure the customer has a backup of their address book data. If not, obtain the backup by referring to the following procedure.
  - 1. Insert an SD card into SD slot 2, and then turn the main power ON.
  - 2. Save the address book data in the SD card using SP5-846-051.



- The address data stored in the machine will be discarded later during this procedure. So be sure to obtain a backup of the customer's address book data.
- Note that the counters for the user will be reset when doing the backup/restore of the address book data.
- If they have a backup of the address book data, use their own backup data for restoring. This
  is because there is a risk that the data cannot be backed up properly depending on the
  NVRAM condition.
- Do the following steps if the machine has the fax unit. If not, skip this step.
  - 1. Print the Box List by with the User Tools/Counter.
    - [User Tools/Counter] [Facsimile Features] [General Settings] [Box Setting: Print List]
  - 2. Print the Special Sender List by pressing these buttons in the following order.
    - [User Tools/Counter] [Facsimile Features] [Reception Settings] [Program Special Sender: Print List]
  - 3. Write down the following fax settings.
    - [Receiver] in [User Tools/Counter] [Facsimile Features] [Reception Settings] [Reception File Settings] [Forwarding].
    - [Notify Destination] in [User Tools/Counter] [Facsimile Features] [Reception Settings] [Reception File Settings] [Store].
    - [Specify User] in [User Tools/Counter] [Facsimile Features] [Reception Settings] [Stored Reception File User Setting].
    - [Notify Destination] in [User Tools/Counter] [Facsimile Features] [Reception Settings] [Folder Transfer Result Report].
    - Specified folder in [User Tools/Counter] [Facsimile Features] [Send Settings] [Backup File TX Setting].
    - [Receiver] in [User Tools/Counter] [Facsimile Features] [Reception Settings] [Reception File Settings] [Output Mode Switch Timer].

- [Store: Notify Destination] in [User Tools/Counter] [Facsimile Features] [Reception Settings] [Output Mode Switch Timer].
- All the destination information shown on the display.



- In the fax settings, address book data is stored with entry IDs, which the system internally
  assigns to each data. The entry IDs may be changed due to re-assigning in backup/
  restore operations.
- 4. Make sure that there is no transmission standby file. If any standby file exists, ask the customer to delete it or complete the transmission.
- 8. Turn the main power OFF and unplug the power supply cord.
- 9. Push the main power switch ON again to discharge the residual charge.
- 10. Replace the NV-RAM with a brand-new one.
- 11. Turn the power ON.



- After turning the power ON, SC995 will be displayed except for machines that have a smart operation panel.
- For machines that have a smart operation panel, SC673 will occur and SC995 might be internally issued after turning the power ON.
- After turning the power ON, SC870 will occur and the address book data will be cleared.

<Additional procedure only for machines that have the Smart Operation Panel installed>



- SC673 will be displayed at start-up, but this is normal behavior. This is because the controller
  and the smart operation panel cannot communicate with each other due to changing the SP
  settings for the operation panel.
- 1. Change the SP settings for the operation panel.
  - SP5-748-101: (OpePanel Setting: Op Type Action Setting): Change bit 0 from "0" to "1".
  - SP5-748-201: (OpePanel Setting: Cheetah Panel Connect Setting): Change the value from "0" to "1".
- 2. Change the Flair API SP values.
  - SP5-752-001 (Copy FlairAPI Setting) in System SP: Change bit 0 from "0" to "1".
  - SP1-041-001 (Scan:FlairAPI Setting) in Scanner SP: Change bit 0 from "0" to "1".
  - SP3-301-001 (FAX:FlairAPI Setting) in Fax SP: Change bit 0 from "0" to "1".
- 12. Turn the main power OFF/ON with the SD card where the NV-RAM data has been uploaded in SD slot 2.

 Download the NV-RAM data stored in the SD card to the brand-new NV-RAM using SP5-825-001 (NV-RAM Data Download).



- The download will take a couple of minutes.
- 14. Turn the main power OFF and remove the SD card from SD slot 2.
- 15. Turn the main power ON.
- 16. Restore the original settings of the following SPs, referring to the SMC data obtained in step 2.



- SP5-825-001 does not download the following SP data to the new NV-RAM. So you must set them manually.
- a. SP5-985-001 (Device Setting: On Board NIC)
- b. SP5-985-002 (Device Setting: On Board USB)
- If the security functions (HDD Encryption and HDD Data Overwrite Security) were applied, set the functions again.
- 18. Ask the customer to restore their address book. Or restore the address book data using SP5-846-052 (UCS Setting: Restore All Addr Book), and ask the customer to ensure the address book data has been restored properly.



- If you have obtained the backup of the customer's address book data, delete the backup immediately after the NV-RAM replacement to avoid accidentally taking out the customer's data.
- 19. Output all the SMC data with SP5-990-001 and make sure all the SP/UP settings except for counter information are properly restored, by checking the SMC data obtained.



- The counters will be reset.
- 20. Make sure that the list output in steps 4 to 6 matches the destination information in step 6. If not, set it to the setting before replacement.
- 21. Execute the process control (SP3-011-001).




If a message tells you need an SD card to restore displays after the NV-RAM replacement, create
 a "SD card for restoration" and restore with the SD card.


#### **HDD**



- Before replacing the HDD, copy the address book data to an SD card with SP5-846-051 if possible.
- If the customer is using the Data Overwrite Security, the Data Encryption feature or OCR Scanned PDF, these applications must be installed again.
- 1. Controller rear cover (page 422)
- 2. HDD with bracket [A] (@x3, @x2)

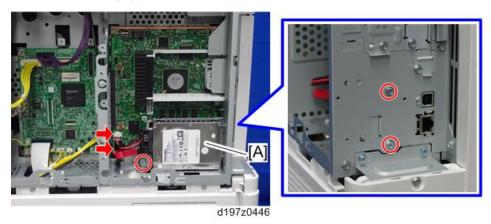

3. HDD [A] ( \*\*4, \*\*\*\*\* ×2)

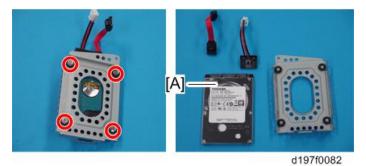


#### Adjustment after replacement

- Execute SP5-832-001 to initialize the hard disk.
   Even if you use an HDD that is already formatted, it is recommended that you re-initialize.
- 2. Execute SP5-853-001 to install the fixed stamps.
- 3. Execute SP5-846-052 to copy the address book from the SD card to the HDD.

#### **HVPS**


- 1. Rear lower cover (page 424)
- 2. HVPS [A] (\$\mathbb{O}^\* \times 4, \$\mathbb{O}^\* \times 5)\$

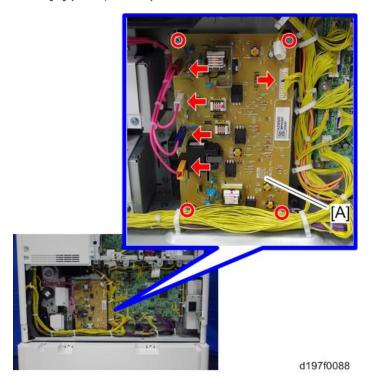

#### PSU

1. Left cover (page 421)

### 2. Bracket [A] (@\*×8)

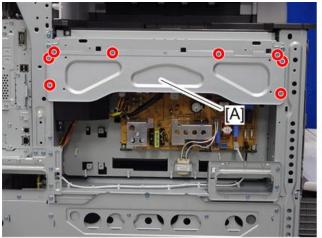

d197f0089


### 3. PSU [A] ( \*\* 5, \*\* 7 for EU/AA)



RTB 60


Caution: Some parts of the PSU retain charge for a long period after disconnecting the power. See the diagrams in this RTB for details.

#### **PSU Fuse Location**

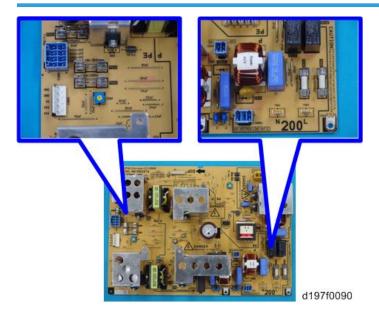

#### **Heater Board**

- 1. Left cover (page 421)
- 2. Heater board [A](@x3, @x3)

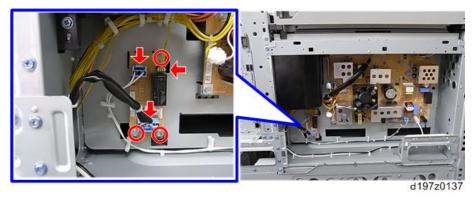


#### Controller Box

- 1. Upper inner cover (page 432)
- 2. Rear left cover (page 423)
- 3. Left cover (page 421)


Δ

- 4. Rear right cover (page 423)
- 5. Rear lower cover (page 424)
- 6. Release the clamps on the upper side of the controller box (🖘×8).

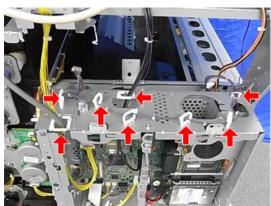


d197z0119

7. Release the clamps on the flank of the controller box (\$\%\times4\$).

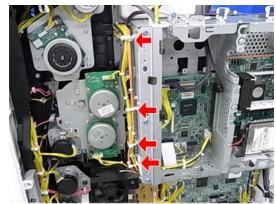


d197z0120

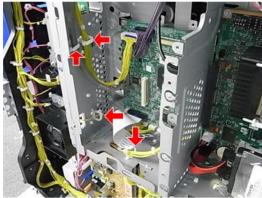

d197z0121

9. Remove the connectors on the IPU [A] (\*\*10, USB\*1).

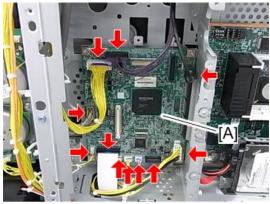

d197z0122

10. Remove the FFC on the BCU [A].




d197z0123

## 11. Relay connector [A] (©°×2, ©°×2)




d197z0124

#### 12. Controller box [A] (©×9)

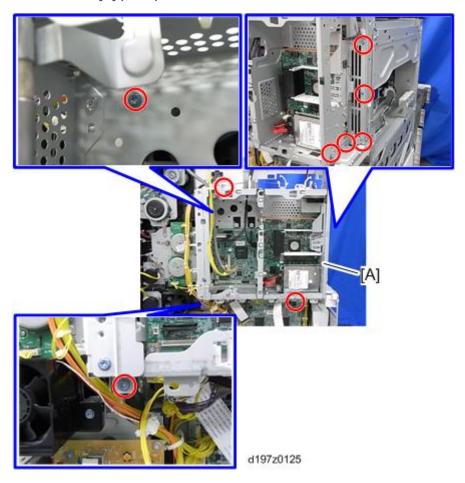

#### Temperature Sensor

- 1. Open the transfer unit (page 517).
- 2. Fusing unit (page 535).
- 3. Temperature sensor (௴×1, ∜×2, ௴×1).

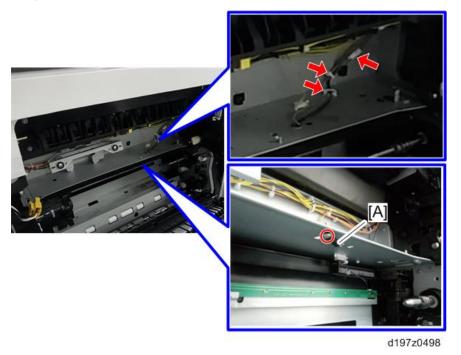

# Fans/Filters

#### Odor Filter

1. Odor filter box [A]



d197z0015

2. Odor filter [A]



d197z0016

#### Dust filter

1. PCDU (page 489)

#### 2. Mount the dust filter on the duct.[A]





d197z0203

**U** Note

• Attach the right side of the filter first when you mount it.




d197z0204

## Development Exhaust Fan

1. Left cover (page 421)

## 2. Bracket [A] (@×8)

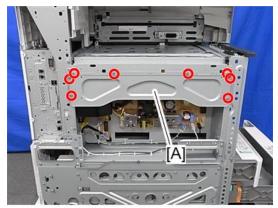

d197z0017

## 3. Development exhaust fan with duct [A] (\$\mathbb{O}^\* \times 2, \$\mathbb{O}^\* \times 1)\$



611

### 4. Dismantle the duct [A] ( ×4)



### 5. Development exhaust fan [A]



d197z0020

**U**Note

• Pay attention to the direction of the fan when installing. The decal pasted on the fan must face the outside.



d197z0021

### Paper Exit Cooling Fan

- 1. Main power switch cover (page 429)
- 2. Paper exit cooling fan [A] (\$\mathbb{O}^\* \times 2, \$\mathbb{O}^\* \times 1, \$\mathbb{N} \times 2\$)



d197z0022




Pay attention to the direction of the fan when installing. The decal pasted on the fan must face
the inside.


## Fusing Fan

1. Rear right cover (page 423)

2. Fusing exhaust heat fan [A] with duct (♂×2, ♂×1, ∜×1)

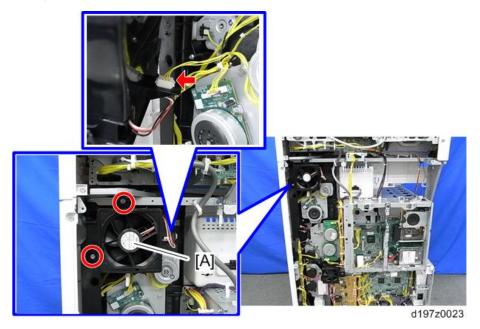

3. Fusing exhaust heat fan [A] ( ×4)

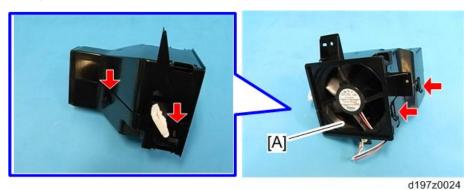

**U** Note


• Pay attention to the direction of the fan when installing. The decal pasted on the fan must face the outside.




d197z0025


## Development Bearing Cooling Fan (D200/D201/D202 Only)

- 1. Rear lower cover (page 424)
- 2. Development bearing cooling fan with duct [A] ( \*x2, \*x1)

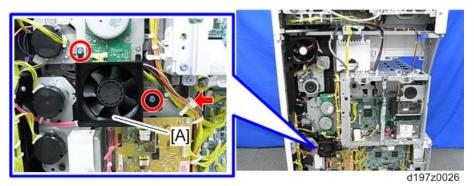

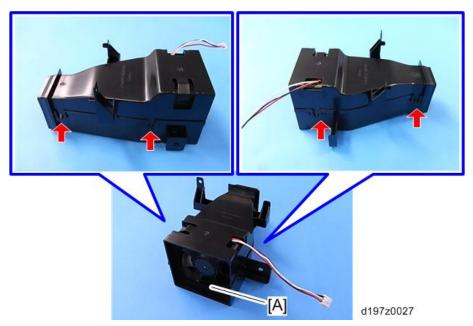

4. Development bearing cooling fan [A]

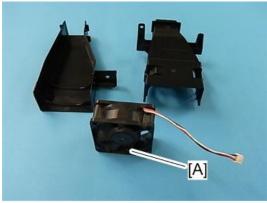

d197z0028

**U** Note

• Pay attention to the direction of the fan when installing. The decal pasted on the fan must face the outside.






d197z0029

## PSU Cooling Fan (D200/D201/D202 Only)

- 1. Left cover (page 421)
- 2. PSU cooling fan [A] (🖤×2, 🗣x1, 🍑 x1)

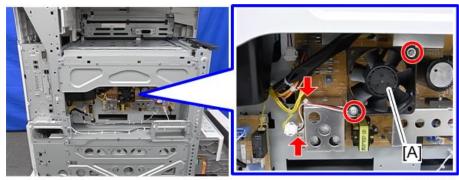

d197z0030



• Pay attention to the direction of the fan when installing. The decal pasted on the fan must face the inside.


## Adjustment after Replacement

### **Printing**



- Make sure the paper is installed correctly in each paper tray before you start these adjustments.
- Use the Trimming Area Pattern (SP2-109-003, No.14) to print the test pattern for the following procedures.
- Set the setting of SP 2-109-003 to "0" again after completing these printing adjustments.

### Registration - Leading Edge/Side-to-Side

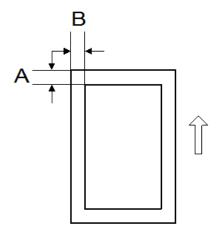

A: Leading Edge Registration  $(4.2 \pm 1.5 \text{ mm})$ 

B: Side-to-side Registration ( $2 \pm 1.5 \text{ mm}$ )

# 1. Check the leading edge registration [A] for each paper feed station, and adjust them using SP1-001.

Tray	SP No.	Threshold
Tray 1 : Thin	SP1-001-001	4.2 ± 1.5 mm
Tray 1 : Plain	SP1-001-002	
Tray1: MidThick	SP1-001-003	
Tray 1 : Thick 1	SP1-001-004	
Tray 1 : Thick2	SP1-001-005	
Tray 1 : Thick3	SP1-001-006	
Tray 1 : Thick4	SP1-001-007	
Tray2: Thin	SP1-001-008	4.2 ± 1.5 mm
Tray2: Plain	SP1-001-009	
Tray2: MidThick	SP1-001-010	
Tray2: Thick 1	SP1-001-011	
Tray2: Thick2	SP1-001-012	
Tray2: Thick3	SP1-001-013	
Tray2: Thick4	SP1-001-014	
Bypass: Thin	SP1-001-015	4.2 ± 1.5 mm
Bypass: Plain	SP1-001-016	
Bypass: MidThick	SP1-001-017	
Bypass: Thick1	SP1-001-018	
Bypass: Thick2	SP1-001-019	
Bypass: Thick3	SP1-001-020	
Bypass: Thick4	SP1-001-021	

Tray	SP No.	Threshold
Duplex: Thin	SP1-001-022	4.2 ± 1.5 mm
Duplex: Plain	SP1-001-023	
Duplex: MidThick	SP1-001-024	
Duplex: Thick 1	SP1-001-025	
Duplex: Thick2	SP1-001-026	
Duplex: Thick3	SP1-001-027	
Tray1: Thin: 1200	SP1-001-028	4.2 ± 1.5 mm
Tray 1 : Plain: 1200	SP1-001-029	
Tray 1 : MidThick: 1200	SP1-001-030	
Tray 1: Thick 1: 1200	SP1-001-031	
Tray 1: Thick 2: 1200	SP1-001-032	
Tray 1 : Thick 3 : 1200	SP1-001-033	
Tray 1 : Thick 4 : 1200	SP1-001-034	
Tray2: Thin: 1200	SP1-001-035	4.2 ± 1.5 mm
Tray2: Plain: 1200	SP1-001-036	
Tray2: MidThick: 1200	SP1-001-037	
Tray2: Thick1: 1200	SP1-001-038	
Tray2: Thick2: 1200	SP1-001-039	
Tray2: Thick3: 1200	SP1-001-040	
Tray2: Thick4: 1200	SP1-001-041	


Tray	SP No.	Threshold
Bypass: Thin: 1200	SP1-001-042	4.2 ± 1.5 mm
Bypass: Plain: 1200	SP1-001-043	
Bypass: MidThick: 1200	SP1-001-044	
Bypass: Thick1: 1200	SP1-001-045	
Bypass: Thick2: 1200	SP1-001-046	
Bypass: Thick3: 1200	SP1-001-047	
Bypass: Thick4: 1200	SP1-001-048	
Duplex: Thin: 1200	SP1-001-049	4.2 ± 1.5 mm
Duplex: Plain: 1200	SP1-001-050	
Duplex: MidThick: 1200	SP1-001-051	
Duplex: Thick1: 1200	SP1-001-052	
Duplex: Thick2: 1200	SP1-001-053	
Duplex: Thick3: 1200	SP1-001-054	

# 2. Check the side-to-side registration [B] for each paper feed station, and adjust them using SP1-002.

Tray	SP No.	Threshold
Tray 1	SP1-002-002	2 ±1.5 mm
Tray 2	SP1-002-003	
Tray 3 (Optional PFU tray 1 or LCT)	SP1-002-004	
Tray 4 (Optional PFU tray 2)	SP1-002-005	
Duplex (side 1)	SP1-002-006	
LCT	SP1-002-007	

**U** Note

• If the leading edge/side-to-side registration cannot be adjusted within the specifications, adjust the leading/left side edge blank margin.

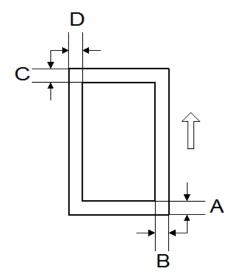

A: Trailing Edge Blank Margin

B: Right Edge Blank Margin

C: Leading Edge Blank Margin

D: Left Edge Blank Margin

1. Check the trailing edge [A], right edge [B], leading edge [C], left edge [D] blank margins, and adjust them using the following SP modes.

Edge	SP No.	Adjustment Range
Leading Edge	SP2-103-001	4.2 ± 1.5 mm (Plain, Thin)
Trailing Edge	SP2-103-002	More than 0.5 mm
Left Edge	SP2-103-003	2.0 ±1.5 mm
Right Edge	SP2-103-004	2.0 +2.5 /-1.5 mm

Edge	SP No.	Adjustment Range
Duplex: Trailing Edge: L Size: Plain	SP2-103-006	
Duplex: Trailing Edge: M Size: Plain	SP2-103-007	2.0 ±2.0 mm
Duplex: Trailing Edge: S Size: Plain	SP2-103-008	
Duplex: Left Edge Plain	SP2-103-009	-2.0 ±1.5 mm
Duplex: Right Edge: Plain	SP2-103-010	2.0 +2.5 /-1.5 mm
Duplex: Trailing Edge: L Size: Thick	SP2-103-011	2.0 ±2.0 mm
Duplex: Trailing Edge: M Size: Thick	SP2-103-012	
Duplex: Trailing Edge: S Size: Thick	SP2-103-013	
Duplex: Left Edge Thick	SP2-103-014	-2.0 ±1.5 mm
Duplex: Right Edge: Thick	SP2-103-01 <i>5</i>	2.0 +2.5 /-1.5 mm
Duplex Trail. L Size:Thin	SP2-103-016	
Duplex Trail. M Size:Thin	SP2-103-017	-4.0 ± 4.0 mm
Duplex Trail. S Size:Thin	SP2-103-018	
Lead Edge Width:Thin	SP2-103-019	0.0 ± 9.9 mm
Trail. Edge Width:Thin	SP2-103-020	

• L Size: Paper Length is 297.1 mm or more

• M Size: Paper Length is 216.1 to 297 mm

• S Size: Paper Length is 216 mm or less.

### Main Scan Magnification

- 1. Use SP2-109-003, no.5 (Grid Pattern) to print the single-dot grid pattern.
- 2. Check the magnification, and adjust the magnification using SP2-102-001 (Magnification Adjustment Main Scan) if necessary. The specification is ± 1%.

### Parallelogram Image Adjustment

Laser unit adjustment is to fix parallelogram images that developed as a result of the laser operation, by means of adjusting the physical angle of the laser unit itself. This adjustment must be done after the skew-correction for the paper feed unit.

If parallelogram images are caused by the scanner after doing the laser unit adjustment, scanner unit adjustment must also be performed to correct this.


- 1. Enter into the SP mode.
- 2. Using SP2-109-003, output a trimming pattern to measure the parallelogram.
  - It is not necessary to do this step if output image is developed properly.



- If the laser unit causes a parallelogram image, there is a slanted line in the main-scan direction, and there is a straight line in the sub-scan direction.
- 3. Remove the laser unit (page 482).
- 4. Paste the adjustment sheet(s) on the reference points located on the back side of the laser unit (two points on the inside and/or one point on the front side).



- A set of four sheets is provided as service parts. The number of sheets to be pasted depends on the condition of the image.
  - If lines slant down to the left [A], paste one or two sheets on the front side.
  - If lines slant down to the right [B], paste one or two sheets at each position on the rear side.
- Adjustable amount: 0.5mm 0.6mm/sheet

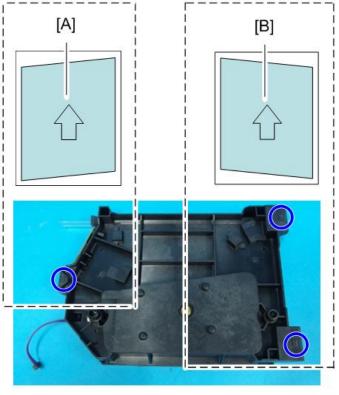


d197f0092

5. Do step 1 and 2 again to check that there is no parallelogram image.

### Scanning



- Before doing the following scanner adjustments, perform or check the printing registration /side-to-side adjustment and the blank margin adjustment.
- Use an S5S test chart to perform the following adjustments.

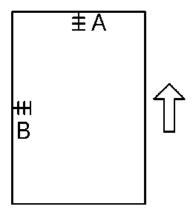

A: Leading Edge Registration (Sub Scan Registration Adj)

B: Side-to-side Registration (Main Scan Reg)

- 1. Place the test chart on the exposure glass and make a copy from one of the feed stations.
- 2. Check the leading edge and side-to-side registration, and adjust them using the following SP modes if necessary.


SP No.	SP Name	Adjustment Range
SP4-010-001	Sub Scan Registration Adj	±2.0 mm
SP4-011-001	Main Scan Reg	±2.5 mm

### Magnification



• Use an S5S test chart to do the following adjustment.



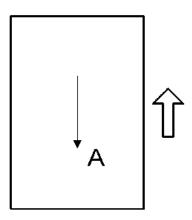

A: Sub-scan magnification

- 1. Place the test chart on the exposure glass and make a copy from one of the feed stations.
- 2. Check the magnification ratio and adjust using the following SP mode if necessary.


SP No.	SP Name	Adjustment Range
SP4-008-001	Sub Scan Magnification Adj	±1.0 %


### **Scanner Wire**

See the Adjusting the Scanner Wire. (page 457)

## ADF Image Adjustment

### Registration

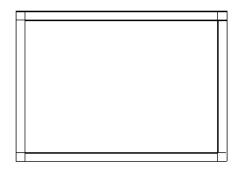

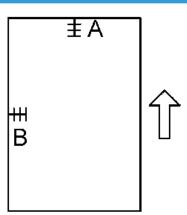

- A: Leading Edge Registration
- B: Side-to-side Registration



- Make a temporary test chart as shown above using A3/DLT paper.
- 1. Place the temporary test chart on the ADF and make a copy from one of the feed stations.
- 2. Check the registration, and adjust using the following SP modes if necessary.

SP No.	SP Name	Adjustment Range
SP6-006-001	ADF Adjustment Side-to-Side Regist: Front	±3.0 mm
SP6-006-002	ADF Adjustment Side-to-Side Regist: Rear	±3.0 mm
SP6-006-003	ADF Adjustment Leading Edge Registration: Front	±5.0 mm
SP6-006-004	ADF Adjustment Leading Edge Registration: Rear	±5.0 mm
SP6-006-005	ADF Adjustment Buckle: Duplex Front	±5.0 mm
SP6-006-006	ADF Adjustment Buckle: Duplex Rear	±5.0 mm
SP6-006-007	ADF Adjustment Rear Edge Erase Front	±10.0 mm
SP6-006-008	ADF Adjustment Rear Edge Erase Rear	±10.0 mm

### **Sub Scan Magnification**



- Make a temporary test chart as shown above using A3/DLT paper.
- 1. Place the temporary test chart on the ADF and make a copy from one of the feed stations.
- 2. Check the magnification, and adjust using the following SP modes if necessary.

SP No.	SP Name	Adjustment Range
SP6-017-001	DF Magnification Adj.	±5.0 %


### 4

### **Touch Screen Calibration**

After clearing the memory, or if the touch panel detection function is not working correctly, follow this procedure to calibrate the touch screen.



- Do not attempt to use items [2] to [5] and [7] to [9] on the Self-Diagnostic Menu. These items are for design use only.
- 1. Plug in the AC power cord, and then turn on the main power switch.
- 2. When Home or Copy screen appears, press the [Energy Saver] key.
- 3. Press [1], [9], [9], and [3] at the ten-key pad, and then press [C] (Clear) 5 times to open the "Self Diagnostics Menu."
- 4. Press [[1] Touch Screen Adjust] (or press [1] on the ten-key pad).

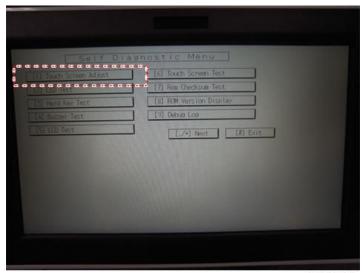


d1824064

5. Use a pointed (not sharp!) tool to press the mark (+) at the upper left of the screen.



d1824065

- 6. Press in order the lower right, lower left, middle, and upper right of the screen (+).
- 7. Press [[#] OK] on the screen (or press [#] on the ten-key pad) to save.
- 8. Press [[6] Touch Screen Test].

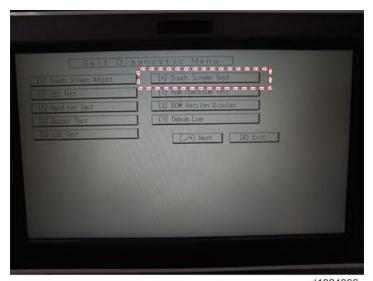

d1824066

9. Press the points (upper left, lower left, upper right and lower right) and confirm that each value is within ±5 dots.



d1824067a

 Press [[#] Exit] on the screen (or press [#] on the ten-key pad) to close the "Self Diagnostic Menu".

## 5. System Maintenance

## Service Program Mode

### **ACAUTION**

• Make sure that the data-in LED (�) is not on before you go into the SP mode. This LED indicates that some data is coming to the machine. When the LED is on, wait for the copier to process the data.

### **Enabling and Disabling Service Program Mode**



The Service Program Mode is for use by service representatives only. If this mode is used by
anyone other than service representatives for any reason, data might be deleted or settings might
be changed. In such case, product quality cannot be guaranteed any more.

### **Entering SP Mode**

For details, ask your supervisor.

### **Exiting SP Mode**

• Press "Exit" on the LCD twice to return to the copy window.

## Types of SP Modes

- System SP: SP modes related to the engine functions
- Printer SP: SP modes related to the controller functions
- Scanner SP: SP modes related to the scanner functions
- Fax SP: SP modes related to the fax functions


Select one of the Service Program modes (System, Printer, Scanner, or Fax) from the touch panel as shown in the diagram below after you access the SP mode. This section explains the functions of the System/Printer/Scanner SP modes. Refer to the Fax service manual for the Fax SP modes.



d197z3001

### **SP Mode Button Summary**

Here is a short summary of the touch-panel buttons.

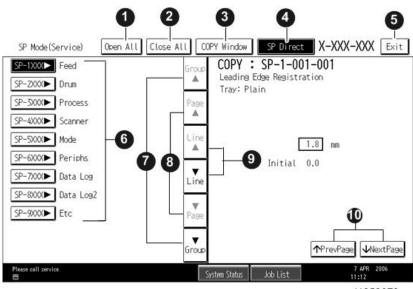

d1353073

- 1 Opens all SP groups and sublevels.
- 2 Closes all open groups and sublevels and restores the initial SP mode display.

3	Opens the copy window (copy mode) so you can make test copies. Press SP Mode (highlighted) in the copy window to return to the SP mode screen,
4	Enter the SP code directly with the number keys if you know the SP number. Then press [#]. The required SP Mode number will be highlighted when pressing [#]. If not, just press the required SP Mode number.)
5	Press two times to leave the SP mode and return to the copy window to resume normal operation.
6	Press any Class 1 number to open a list of Class 2 SP modes.
7	Press to scroll the show to the previous or next group.
8	Press to scroll to the previous or next display in segments the size of the screen display (page).
9	Press to scroll the show the previous or next line (line by line).
10	Press to move the highlight on the left to the previous or next selection in the list.


### Switching Between SP Mode and Copy Mode for Test Printing

- 1. In the SP mode, select the test print. Then press "Copy Window".
- 2. Use the copy window (copier mode), to select the appropriate settings (paper size, etc.) for the test print.
- 3. Press [Start] key to start the test print.
- 4. Press SP Mode (highlighted) to return to the SP mode screen and repeat from step 1.

### Selecting the Program Number

Program numbers have two or three levels.

- 1. Refer to the Service Tables to find the SP that you want to adjust before you begin.
- 2. Press the Group number on the left side SP Mode window that contains the SP that you want to adjust.
- 3. Use the scrolling buttons in the center of the SP mode window to show the SP number that you want to open. Then press that number to expand the list.
- 4. Use the center touch-panel buttons to scroll to the number and title of the item that you want to set and press it. The small entry box on the right activates and shows the below default or the current settings.

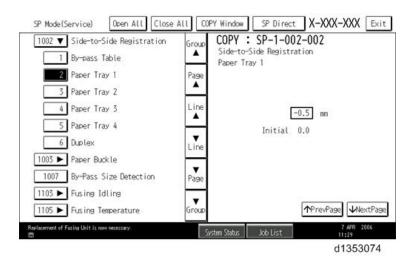



- Refer to the Service Tables for the range of allowed settings.
- 5. Do this procedure to enter a setting:
  - Press to toggle between plus and minus and use the keypad to enter the appropriate number. The number you enter writes over the previous setting.
  - Press [#] to enter the setting. (The value is not registered if you enter a number that is out of range.)
  - Press "Yes" when you are prompted to complete the selection.
- 6. If you need to perform a test print, press Copy Window to open the copy window and select the settings for the test print. Press [Start] key and then press SP Mode (highlighted) in the copy window to return to the SP mode display.
- 7. Press Exit two times to return to the copy window when you are finished.

### **Exiting Service Mode**

Press the Exit key on the touch-panel.

### Service Mode Lock/Unlock

At locations where the machine contains sensitive data, the customer engineer cannot operate the machine until the Administrator turns the service mode lock off. This function makes sure that work on the machine is always done with the permission of the Administrator.

1. If you cannot go into the SP mode, ask the Administrator to log in with the User Tool and then set "Service Mode Lock" to OFF after he or she logs in:

User Tools > System Settings > Administrator Tools > Service Mode Lock > OFF

- This unlocks the machine and lets you get access to all the SP codes.
- The CE can service the machine and turn the machine power switch off and on. It is not
  necessary to ask the Administrator to log in again each time the main power switch is turned
  on.
- 2. Go into the SP mode and set SP5-169 to "1" if you must use the printer bit switches.
- 3. After machine servicing is completed:
  - Change SP5-169 from "1" to "0".
  - Turn the machine power switch off and on. Tell the administrator that you have completed servicing the machine.
  - The Administrator will then set the "Service Mode Lock" to ON.

### PM Counter/ Firmware Update

PM Counter and Firmware Update can be entered in the SP mode main screen.

- PM Counter: PM counters for each PM part
- Firmware Update: Immediate remote update and remote update at next visit



d197z3001

<How to Check the PM Counter>




d197z3002

2. Press [Estimated Usage Rate/Estimated Remain Days].

SP Mode(PM Parts)	Prev. Menu Exit
Select item	
All PM Parts list	Counter clear for parts exceeding target yield
Parts list for PM yield indicator	Clear all PM settings
Parts exceeding target yield	Counterlist print out
Estimated Usage Rate / Estimated Remain Days	Commissioning Status Report Print
	25 JUL 2014 3:13

d197z3003

3. You can see the "Remaining Days for each part".

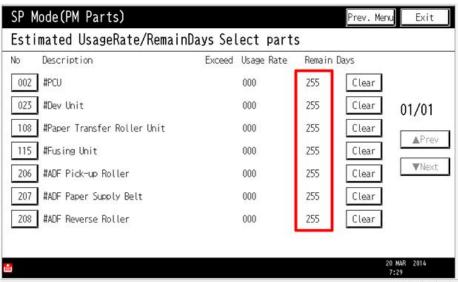

d197z3004

#### <How to Use the Firmware Update>

For details about how to use the Firmware Update, refer to page 1030 "Package Firmware Update".

### Remarks

The maximum number of characters which can show on the control panel screen is limited to 30 characters. For this reason, some of the SP modes shown on the screen need to be abbreviated. The following are abbreviations used for the SP modes for which the full description is over 20 characters.

ltem	Description		
Paper Weight	Thin paper: 52-59 g/m <sup>2</sup> , 13.9-15.7lb.  Plain Paper1: 60-74 g/m <sup>2</sup> , 16-19.7lb.  Plain Paper2: 75-81 g/m <sup>2</sup> , 20-21.6lb.		
Taper Weight	Middle Thick: 82-105 g/m <sup>2</sup> , 21.9-28lb.  Thick Paper1: 106-157 g/m <sup>2</sup> , 28.3-41.9lb.		
Paper Type	N: Normal paper  MTH: Middle thick paper  TH: Thick paper		

### **Others**

The settings of each SP mode are explained in the right-hand column of the SP table in the following way.

[Adjustable range / Default setting / Step] Alphanumeric



• If "Alphanumeric" is written to the right of the bracket as shown above, the setting of the SP mode shows on the screen using alphanumeric characters instead of only numbers. However, the settings in the bracket in the SP mode table are explained by using only the numbers.

### The following symbols are used in the SP mode tables.

Notation	What it means
ENG	Engine SP
CTL	Controller SP
FA	Factory setting: Data may be adjusted from the default setting at the factory. Refer to the factory setting sheets enclosed. You can find it in the front cover.
DFU	Design/Factory Use only: Do not touch these SP modes in the field.
*	An asterisk (*) to the left side of ENG/CTL column means that this mode is stored in the NVRAM. If you do a RAM clear, this SP mode will be reset to the default value. "ENG" and "CTL" show which NVRAM contains the data.  • *ENG: NVRAM on the BCU board • *CTL: NVRAM on the controller board

Notation	What it means
SSP	This denotes a "Special Service Program" mode setting.

SP Mode Tables - SP1000

## 5

#### [Leading Edge Registration] Adjusts the leading edge registration by changing the registration motor operation timing for each mode. 1001 • Increasing a value: an image is moved to the trailing edge of paper. (This makes the writing timing later.) Decreasing a value: an image is moved to the leading edge of paper. (This makes the writing timing earlier.) 1-001-001 Tray 1: Thin **ENG** [-9.0 to 9.0 / 0.0 / 0.1 mm/step]1-001-002 Tray 1: Plain **ENG** [-9.0 to 9.0 / 0.0 / 0.1 mm/step] 1-001-003 Tray 1: Mid-thick **ENG** [-9.0 to 9.0 / 0.0 / 0.1 mm/step]1-001-004 Tray 1: Thick 1 **ENG** [-9.0 to 9.0 / 0.0 / 0.1 mm/step]1-001-005 Tray 1: Thick 2 **ENG** [-9.0 to 9.0 / 0.0 / 0.1 mm/step]1-001-006 Tray 1: Thick 3 **ENG** [-9.0 to 9.0 / 0.0 / 0.1 mm/step]1-001-007 Tray 1: Thick 4 **ENG** [-9.0 to 9.0 / 0.0 / 0.1 mm/step]1-001-008 Tray2: Thin **ENG** [-9.0 to 9.0 / 0.0 / 0.1 mm/step]1-001-009 Tray2: Plain **ENG** [-9.0 to 9.0 / 0.0 / 0.1 mm/step]1-001-010 Tray2: Mid-thick **ENG** [-9.0 to 9.0 / 0.0 / 0.1 mm/step]1-001-011 [-9.0 to 9.0 / 0.0 / 0.1 mm/step]Tray2: Thick 1 **ENG** 1-001-012 **ENG** [-9.0 to 9.0 / 0.0 / 0.1 mm/step]Tray2: Thick 2 1-001-013 Tray2: Thick 3 **ENG** [-9.0 to 9.0 / 0.0 / 0.1 mm/step]1-001-014 Tray2: Thick 4 **ENG** [-9.0 to 9.0 / 0.0 / 0.1 mm/step]1-001-015 **ENG** [-9.0 to 9.0 / 0.0 / 0.1 mm/step]By-pass: Thin 1-001-016 By-pass: Plain **ENG** [-9.0 to 9.0 / 0.0 / 0.1 mm/step]1-001-017 By-pass: Mid-thick **ENG** [-9.0 to 9.0 / 0.0 / 0.1 mm/step]

1-001-018	By-pass: Thick 1	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-019	By-pass: Thick 2	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-020	By-pass: Thick 3	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-021	By-pass: Thick 4	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-022	Duplex: Thin	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-023	Duplex: Plain	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-024	Duplex: Mid-thick	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-025	Duplex: Thick 1	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-026	Duplex: Thick 2	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-027	Duplex: Thick 3	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-028	Tray 1 : Thin: 1 2 0 0	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-029	Tray 1: Plain: 1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-030	Tray 1: Mid-thick: 1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-031	Tray1: Thick 1:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-032	Tray 1: Thick 2:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-033	Tray1: Thick 3:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-034	Tray 1: Thick 4:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-035	Tray2: Thin: 1 200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-036	Tray2: Plain:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-037	Tray2: Mid-thick:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-038	Tray2: Thick 1:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-039	Tray2: Thick 2:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-040	Tray2: Thick 3:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-041	Tray2: Thick 4:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-042	By-pass: Thin: 1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-043	By-pass: Plain:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]

1-001-044	By-pass: Mid-thick:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-045	By-pass: Thick 1:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-046	By-pass: Thick 2:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-047	By-pass: Thick 3:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-048	By-pass: Thick 4:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-049	Duplex: Thin:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-050	Duplex: Plain: 1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-051	Duplex: Mid-thick:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-052	Duplex: Thick 1:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-053	Duplex: Thick 2:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-054	Duplex: Thick 3:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]

	[Leading Edge Registration]			
	Adjusts the leading edge registration by changing the registration motor operation timing for each mode.			
1001	Increasing a value: an image is moved to the trailing edge of paper. (This makes the writing timing later.)			
	Decreasing a value: an image is moved to the leading edge of paper. (This makes the writing timing later.)			
1-001-055	Tray3: Thin	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]	
1-001-056	Tray3: Plain	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]	
1-001-057	Tray3: Mid-thick	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]	
1-001-058	Tray3: Thick 1	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]	
1-001-059	Tray3: Thick 2	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]	
1-001-060	Tray3: Thick 3	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]	
1-001-061	Tray3: Thick 4	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]	
1-001-062	Tray3: Thin: 1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]	
1-001-063	Tray3: Plain:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]	

1-001-064	Tray3: Mid-thick:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-065	Tray3: Thick 1:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-066	Tray3: Thick 2:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-067	Tray3: Thick 3:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-068	Tray3: Thick 4:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-069	Tray4: Thin	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-070	Tray4: Plain	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-071	Tray4: Mid-thick	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-072	Tray4: Thick 1	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-073	Tray4: Thick 2	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-074	Tray4: Thick 3	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-075	Tray4: Thick 4	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-076	Tray4: Thin: 1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-077	Tray4: Plain:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-078	Tray4: Mid-thick:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-079	Tray4: Thick 1:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-080	Tray4: Thick 2:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-081	Tray4: Thick 3:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-082	Tray4: Thick 4:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-083	Tray5(LCT): Thin	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-084	Tray5(LCT): Plain	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-085	Tray5(LCT): Mid-thick	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-086	Tray5(LCT): Thick 1	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-087	Tray5(LCT): Thick 2	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-088	Tray5(LCT): Thick 3	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-089	Tray5(LCT): Thick 4	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]

1-001-090	Tray5(LCT): Thin:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-091	Tray5(LCT): Plain:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-092	Tray5(LCT): Mid-thick: 1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-093	Tray5(LCT): Thick 1:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-094	Tray5(LCT): Thick 2:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-095	Tray5(LCT): Thick 3:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]
1-001-096	Tray5(LCT): Thick 4:1200	ENG	[-9.0 to 9.0 / <b>0.0</b> / 0.1 mm/step]

	[Side-to-Side Registration]		
1002	Adjusts the side-to-side registration by changing the laser main scan start position for each mode and tray.		
	Increasing a value: an image is moved to the rear edge of paper.		
	Decreasing a value: an image is moved to the front edge of paper.		
1-002-001	By-pass Tray	*ENG	
1-002-002	Paper Tray 1	*ENG	
1-002-003	Paper Tray 2	*ENG	
1-002-004	Paper Tray 3	*ENG	[-4.0 to 4.0 / <b>0.0</b> / 0.1 mm/step]
1-002-005	Paper Tray 4	*ENG	
1-002-006	Duplex	*ENG	
1-002-007	Large Capacity Tray	*ENG	

	[Paper Buckle]		
Adjusts the amount of paper buckle at the registration roller by char feed timing.		registration roller by changing the paper	
	(A "+" setting causes more buckling.)		
1-003-001	Paper Tray 1: Thin	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-002	Paper Tray 1: Plain	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]

1-003-003	Paper Tray 1: Mid-thick	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-004	Paper Tray 1: Thick 1	ENG	[-4.0 to 5.0 / <b>-2.0</b> / 0.1 mm/step]
1-003-005	Tray2/3/4/5/LCT: Thin	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-006	Tray2/3/4/5/LCT: Plain	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-007	Tray 2/3/4/5/LCT: Mid- thick	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-008	Tray2/3/4/5/LCT: Thick	ENG	[-4.0 to 5.0 / <b>-2.0</b> / 0.1 mm/step]
1-003-009	By-pass: Thin	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-010	By-pass: Plain	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-011	By-pass: Mid-thick	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-012	By-pass:Thick 1	ENG	[-4.0 to 5.0 / <b>-1.0</b> / 0.1 mm/step]
1-003-013	Duplex:Thin	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-014	Duplex:Plain	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-015	Duplex: Mid-thick	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-016	Duplex:Thick1	ENG	[-4.0 to 5.0 / <b>-1.0</b> / 0.1 mm/step]
1-003-017	Paper Tray 1: Thin: 1200	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-018	Paper Tray 1: Plain: 1200	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-019	Paper Tray 1: Mid-thick: 1200	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-020	Paper Tray 1: Thick 1:1200	ENG	[-4.0 to 5.0 / <b>-2.0</b> / 0.1 mm/step]
1-003-021	Tray2/3/4/5/LCT: Thin: 1200	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-022	Tray2/3/4/5/LCT: Plain: 1200	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-023	Tray2/3/4/5/LCT: Mid: 1200	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]

1-003-024	Tray2/3/4/5/LCT: Thick 1:1200	ENG	[-4.0 to 5.0 / <b>-2.0</b> / 0.1 mm/step]
1-003-025	By-pass: Thin: 1200	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-026	By-pass: Plain:1200	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-027	By-pass: Mid-thick: 1200	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-028	By-pass:Thick1:1200	ENG	[-4.0 to 5.0 / <b>-1.0</b> / 0.1 mm/step]
1-003-029	Duplex:Thin:1200	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-030	Duplex:Plain:1200	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-031	Duplex: Mid-thick:1200	ENG	[-4.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]
1-003-032	Duplex:Thick1:1200	ENG	[-4.0 to 5.0 / <b>-1.0</b> / 0.1 mm/step]

1007	[By-Pass Size Detection]				
			[0 or 1 / <b>0</b> / 1/step]		
	Switch LT SEF/LG SEF	*ENG	0: 0.5x11SEF		
1-007-001			1: 8.5x14SEF		
	Selects either LT SEF or LG SEF to detect 8.5 inches paper size when using the bypass tray.				
			[0 or 1 / <b>0</b> / 1/step]		
	By-Pass Jam Detection Set *1	*ENG	0: Normal		
			1: Simple Detect		
1-007-002	Selects the paper jam detection when receiving long length FAX. Enter the maximum value for the custom paper size if "1: Simple Detection" is to be activated.				
	0: Normal: Paper jam is detected when paper size fed from the tray is different form selected paper size.				
	Simple Detect: Paper jam is detected only when paper size fed from the tray is longer than selected paper size.				

	[Initial Operation Setting]		
	Enables or disables the registaration gear backlash cut when recovering form the sleep mode.		
1009	If the registration roller is rotated with the machine's right door open, the leading edge registration may be slightly shifted (0.3 mm) because of the backlash betwee the drive motor gear and registration roller gear. Select "1: ON" to prevent the leading edge registration shifting. The side effect of turning on this SP is making som noise.		
1-009-001	Registration Gear Backlash Cut	*ENG	[0 or 1 / <b>0</b> / 1/step] 0:OFF 1:ON

	[Solenoid Initial movement]			
	Selects either On or Off to control the pick-up solenoid's Initial movement.			
1009	When the pick-up solenoid operates for the first time after loading the paper tray, its stroke and accompanied vibration is markedly greater than usual, and this may cause banding on the sheet that is fed first.			
	If you set this SP to "ON", the pick-up solenoid is energized after the paper tray is loaded and the bottom plate rises. By making this setting, you can prevent the banding caused by the vibration of the solenoid when feeding the first sheet.			
	As the default, it is set to "OF	F" to minimize	e the noise.	
	0		[0 or 1 / <b>0</b> / 1/step]	
1-009-002	Control ON/OFF 0:OFF/ 1:ON	*ENG	0:OFF	
			1:ON	

1101	[Flicker Control]		
1-101-030	Flicker Control	*ENG	[0 to 2 / <b>0</b> / 1/step]
	Extends the control cycle to make the flicker less noticeable.  O: Normal (default)  1: Flicker control mode (Use this SP if the flicker is occurred.)		

1105	[Print Target Temp.]
------	----------------------

	Plain1:BW:Center	*ENG	[100 to 180 / * / 1deg/step]  * The default is different with models. D197/D198: 123 D199/D200: 130	
1-105-003	Paper through target temperature	· Standard :	D201/D202: 147	
	Fusing malfunction might improve		•	
	Paper curl might improve by settin	,	· ·	
	Adjusting range is +/- 5°C again			
	Adjusting runge is 1/-3 C again	si ille deldo		
	Plain2:BW:Center		[100 to 180 / * / 1deg/step]	
			* The default is different with models.	
		*ENG	D197/D198: 128	
			D199/D200: 135	
1-105-007			D201/D202: 157	
	Paper through target temperature: Standard paper 2: BW: center Fusing malfunction might improve by setting value larger. Paper curl might improve by setting value smaller. Adjusting range is +/- 5 deg. celsius.			
			[100 to 180 / * / 1deg/step]	
			* The default is different with models.	
	Thin:BW:Center	*ENG	D197/D198: 119	
			D199/D200: 120	
1-105-011			D201/D202: 132	
	Paper through target temperature Fusing malfunction might improve Paper curl might improve by settin Adjusting range is +/- 5 deg. cels	by setting v	value larger.	

1-105-015	M-thick:BW:Center  Paper through target temperature Fusing malfunction might improve Paper curl might improve by settin	by setting v	value larger.	
	Adjusting range is +/- 5 deg. cels	sius.		
	Thick1:BW:Center	*ENG	[100 to 180 / <b>145</b> / 1deg/step]	
Paper through target temperature: thick paper 1: BW Fusing malfunction might improve by setting value la Paper curl might improve by setting value smaller.  Adjusting range is +/- 5 deg. celsius.			value larger.	
	Thick2:BW:Center	*ENG	[100 to 180 / <b>130</b> / 1deg/step]	
1-105-023	Paper through target temperature: thick paper 2: BW: center Fusing malfunction might improve by setting value larger. Paper curl might improve by setting value smaller. Adjusting range is +/- 5 deg. celsius.			
	Thick3:BW:Center	*ENG	[100 to 180 / <b>135</b> / 1deg/step]	
1-105-027	Paper through target temperature: thick paper 3: BW: center Fusing malfunction might improve by setting value larger. Paper curl might improve by setting value smaller. Adjusting range is +/- 5 deg. celsius.			
1-105-031	Special 1:BW:Center  Paper through target temperature	*ENG	[100 to 180 / * / 1deg/step]  * The default is different with models.  D197/D198: 123  D199/D200: 130  D201/D202: 152	
	Fusing malfunction might improve Paper curl might improve by settin Adjusting range is +/- 5 deg. cels	by setting v	value larger.	

	Special2:BW:Center	*ENG	[100 to 180 / <b>145</b> / 1deg/step]	
1-105-035	Paper through target temperature: special paper 2: BW: center Fusing malfunction might improve by setting value larger. Paper curl might improve by setting value smaller. Adjusting range is +/- 5 deg. celsius.			
	Special3:BW:Center	*ENG	[100 to 180 / <b>130</b> / 1deg/step]	
1-105-039	Paper through target temperature: special paper 3: BW: center Fusing malfunction might improve by setting value larger. Paper curl might improve by setting value smaller. Adjusting range is +/- 5 deg. celsius.			
	Envelop:Center	*ENG	[100 to 180 / <b>135</b> / 1deg/step]	
1-105-041	Paper through target temperature: envelope: center Fusing malfunction might improve by setting value larger. Paper curl might improve by setting value smaller. Adjusting range is +/- 5 deg. celsius.			
	Special 1:BW:Center:Middle Speed	*ENG	[100 to 180 / <b>140</b> / 1deg/step]	
1-105-053	Paper through target temperature: special paper 1: BW: center Fusing malfunction might improve by setting value larger.  Paper curl might improve by setting value smaller.  Adjusting range is +/- 5 deg. celsius.			
	Special2:BW:Center:Middle Speed	*ENG	[100 to 180 / <b>145</b> / 1deg/step]	
1-105-057	Paper through target temperature: special paper 2: BW: center Fusing malfunction might improve by setting value larger.  Paper curl might improve by setting value smaller.  Adjusting range is +/- 5 deg. celsius.			
	Special3:BW:Center:Middle Speed	*ENG	[100 to 180 / <b>150</b> / 1deg/step]	
1-105-061	Paper through target temperature Fusing malfunction might improve Paper curl might improve by settin Adjusting range is +/- 5 deg. cels	by setting v	ralue larger.	

	Plain 1:BW:Center:Low Speed	*ENG	[100 to 180 / <b>110</b> / 1deg/step]	
1-105-103	Paper through target temperature: Standard 1: BW: center: low speed Fusing malfunction might improve by setting value larger. Paper curl might improve by setting value smaller. Adjusting range is +/- 5 deg. celsius.			
	Plain2:BW:Center:Low Speed	*ENG	[100 to 180 / <b>110</b> / 1deg/step]	
Paper through target temperature: Standard 2: BW: center: low speed Fusing malfunction might improve by setting value larger.  Paper curl might improve by setting value smaller.  Adjusting range is +/- 5 deg. celsius.			ralue larger.	
	M-thick:BW:Center:Low Speed	*ENG	[100 to 180 / <b>115</b> / 1deg/step]	
1-105-111	Paper through target temperature: middle thick paper: BW: center: low speed Fusing malfunction might improve by setting value larger. Paper curl might improve by setting value smaller. Adjusting range is +/- 5 deg. celsius.			
	Thick 1:BW:Center:Low Speed	*ENG	[100 to 180 / <b>120</b> / 1deg/step]	
1-105-115	Paper through target temperature: Thick paper 1: BW: center: low speed Fusing malfunction might improve by setting value larger. Paper curl might improve by setting value smaller. Adjusting range is +/- 5 deg. celsius.			
	Special 1:BW:Center:Low Speed	*ENG	[100 to 180 / <b>110</b> / 1deg/step]	
Paper through target temperature: special paper 1: BW: center: low speed Fusing malfunction might improve by setting value larger.  Paper curl might improve by setting value smaller.  Adjusting range is +/- 5 deg. celsius.			ralue larger.	
	Special2:BW:Center:Low Speed	*ENG	[100 to 180 / <b>120</b> / 1deg/step]	
1-105-123	Paper through target temperature Fusing malfunction might improve Paper curl might improve by settin Adjusting range is +/- 5 deg. cels	by setting v	ralue larger.	

	Plain 1:Glossy:Center	*ENG	[100 to 180 / <b>110</b> / 1deg/step]
1-105-125	Paper through target temperature: Standard paper 1: coat: center Fusing malfunction might improve by setting value larger. Paper curl might improve by setting value smaller. Adjusting range is +/- 5 deg. celsius.		
	Plain2:Glossy:Center	*ENG	[100 to 180 / <b>110</b> / 1deg/step]
Paper through target temperature: Standard paper 2: coat: center Fusing malfunction might improve by setting value larger. Paper curl might improve by setting value smaller. Adjusting range is +/- 5 deg. celsius.			ralue larger.
	M-thick:Glossy:Center	*ENG	[100 to 180 / <b>115</b> / 1deg/step]
Paper through target temperature: Standard paper 2: coat: center Fusing malfunction might improve by setting value larger. Paper curl might improve by setting value smaller. Adjusting range is +/- 5 deg. celsius.			ralue larger.
	OHP:Center	*ENG	[100 to 180 / <b>160</b> / 1deg/step]
1-105-131	Paper through target temperature OHP: center Fusing malfunction might improve by setting value larger. Paper curl might improve by setting value smaller. Adjusting range is +/- 5 deg. celsius.		
	Envelop:Center:Low Speed	*ENG	[100 to 180 / <b>135</b> / 1deg/step]
1-105-133	Paper through target temperature: envelope: center: low speed Fusing malfunction might improve by setting value larger. Paper curl might improve by setting value smaller. Adjusting range is +/- 5 deg. celsius.		
	Thin:BW:Center:Low Speed	*ENG	[100 to 180 / <b>110</b> / 1deg/step]
1-105-137	Paper through target temperature Fusing malfunction might improve Paper curl might improve by settin Adjusting range is +/- 5 deg. cels	by setting v	ralue larger.

	Thick4:BW:Center	*ENG	[100 to 180 / <b>140</b> / 1deg/step]
1-105-141	Paper through target temperature: thick paper 4: BW: center Fusing malfunction might improve by setting value larger. Paper curl might improve by setting value smaller. Adjusting range is +/- 5 deg. celsius.		
	Postcard:Center	*ENG	[100 to 180 / <b>118</b> / 1deg/step]
1-105-143	Paper through target temperature post card: center Fusing malfunction might improve by setting value larger. Paper curl might improve by setting value smaller. Adjusting range is +/- 5 deg. celsius.		
	Special3:BW:Center:Middle Speed	*ENG	[100 to 180 / <b>130</b> / 1deg/step]
1-105-147	Paper through target temperature: special paper 1: BW: center: low speed Fusing malfunction might improve by setting value larger.  Paper curl might improve by setting value smaller.  Adjusting range is +/- 5 deg. celsius.		

1106	[Fusing Temp. Display]		
1-106-001	Heat Center	ENG	[-10 to 250 / <b>0</b> / 1 deg/step] Displays the temperature of the heating roller detected by the thermistor at the center of the heating roller.
1-106-002	Heat End	ENG	[-10 to 250 / <b>0</b> / 1 deg/step] Displays the temperature of the heating roller detected by the thermistors at the ends of the heating roller.
1-106-003	Press Center	ENG	[-10 to 250 / <b>0</b> / 1 deg/step] Displays the temperature of the hot roller detected by the thermistors at the center of the pressure roller.
1-106-004	Press End	ENG	[-10 to 250 / <b>0</b> / 1 deg/step] Displays the temperature of the hot roller detected by the thermistors at the ends of the pressure roller.

1112	[Image Processing Temp. Correct] DFU		
1-112-002	Temp.:Plain:Center:Energy Saving	*ENG	[-30 to 20 / * / 1 deg/step]
	For design use. Do not change.		

1113	[Curl Correction] DFU		
			[0 to 2 / <b>0</b> / 1/step]
	Execute Pattern	*ENIC	0: OFF
1 112 001	Execute ratiern	*ENG	1: ON(No Decurl)
1-113-001			2: ON
	If curling occurs in a humid er problem.	nvironment, switching this to ON may reduce the	

1116	[Heat Storage FB Control] DF	Ū	
1110	For design use. Do not chang	e.	
1-116-002	Correction Formula Judge Temp	*ENG	[0 to 200 / * / 1/step]  * The default is different with models.  D197: 102  D198/D199/D200/D201/D202: 97
1-116-003	Heat Gap Correction Temp	*ENG	[0 to 200 / <b>0</b> / 1/step]
1-116-012	Time Out:Energy Saving	*ENG	[0 to 500 / * / 1 sec/step]  * The default is different with models.  D197/D198/D199/D200 (NA/TWN)/D201/ D202: 3  D200 (EU/AS/ CHN/KOR): 15
1-116-024	Delay:Middle Speed:BW:1	*ENG	[0 to 20000 / <b>1320</b> / 1msec/step]
1-116-026	Delay:Low Speed:BW:1	*ENG	[0 to 20000 / <b>2640</b> / 1 msec/step]
1-116-034	Delay:Middle Speed:BW:2	*ENG	[0 to 20000 / <b>1320</b> / 1msec/step]
1-116-036	Delay:Low Speed:BW:2	*ENG	[0 to 20000 / <b>2640</b> / 1 msec/step]

1-116-044	Press Reference Temp.:Energy Saving	*ENG	[0 to 200 / <b>75</b> / 1 deg /step]
1-116-045	Temp. Correction Lower Limit:Energy Saving	*ENG	[-30 to 0 / <b>-1</b> / deg/step]
1-116-046	Temp. Correction Upper Limit:Energy Saving	*ENG	[-30 to 0 / <b>0</b> / deg/step]
1-116-053	Paper Thickness Coefficient:Thin	*ENG	[-100 to 100 / <b>-50</b> / 1/step]
1-116-054	Paper Thickness Coefficient:M-thick	*ENG	[-100 to 100 / <b>0</b> / 1/step]
1-116-073	Paper Thickness Coefficient:Low Speed	*ENG	[-100 to 100 / <b>0</b> / 1/step]
			[-100 to 100 / <b>10</b> / 1/step]
	D TI.		* The default is different with models.
1-116-074	Paper Thickness Coefficient:Energy Saving	*ENG	D197/D198/D199/D200 (NA/ TWN)/D201/ D202: 30
			D200 (EU/AS/CHN/KOR): 100

1133	[Voltage Detection]		
1-133-001	Voltage Detection	*ENG	[0.0 to 350.0 / * / 0.1V/step]  * The default is different with regions.  NA: 117  EU/AU, CHN, KOR: 227  TWN: 107
	Displays the voltage of the co	nnected pov	ver source applied to turn the heater on.

1135	[Inrush Control]
------	------------------

	Inrush Control	*ENG	[0 or 1 / <b>0</b> / 1/step]  0: Normal (Default)  1: Inrush Control mode
1-135-001	may be cut. Is you set this to " allowing continual use even i	1", the heate the current f	JPS or power circuit breaker, the power r's surge current on startup is controlled, lows into the UPS or power circuit breaker. e initialization time by approximately one

1141	[Fusing SC Error Time Info]		[Fusing SC Error Time Info]		
1 1 41 001	SC Number	*ENG	[0 to 99999 / <b>0</b> / 1/step]		
1-141-001	Display occurring SC.				
	Htg Roller:Ctr Det1	*ENG	[-5 to 300 / <b>0</b> / 1 deg/step]		
1-141-101	Display detailed conditions w occurred time.	hen an SC o	ccurs. Displayed content is temp.: center:		
	Htg Roller:End Det1	*ENG	[-5 to 300 / <b>0</b> / 1 deg/step]		
1-141-102	Display detailed conditions w occurred time.	hen an SC o	ccurs. Displayed content is temp.: center:		
	Press Roller:Ctr Det1	*ENG	[-5 to 300 / <b>0</b> / 1 deg/step]		
1-141-103	Display detailed conditions when an SC occurs. Displayed content is temp.: center: occurred time.				
	Press Roller:End Det1	*ENG	[-5 to 300 / <b>0</b> / 1 deg/step]		
1-141-104	Display detailed conditions w occurred time.	hen an SC o	ccurs. Displayed content is temp.: edge:		
	Htg Roller:Ctr Det2	*ENG	[-5 to 300 / <b>0</b> / 1 deg/step]		
1-141-151	Display detailed conditions when an SC occurs. Displayed content is temp.: conditions are considered to the conditions when an SC occurs. Displayed content is temp.: conditions when an SC occurs. Displayed content is temp.: conditions when an SC occurs.		ccurs. Displayed content is temp.: center:		
	Htg Roller:End Det2	*ENG	[-5 to 300 / <b>0</b> / 1 deg/step]		
1-141-152	Display detailed conditions w 1 cycle a head of occurred ti		ccurs. Displayed content is temp.: center:		

1-141-153	Press Roller:Ctr Det2	*ENG	[-5 to 300 / <b>0</b> / 1 deg/step]		
	Display detailed conditions when an SC occurs. Displayed content is temp.: center:  1 cycle a head of occurred time.				
	Press Roller:End Det2	*ENG	[-5 to 300 / <b>0</b> / 1 deg/step]		
1-141-154	· '	Display detailed conditions when an SC occurs. Displayed content is temp.: edge: 1 cycle a head of occurred time.			
	Htg Roller:Ctr Det3	*ENG	[-5 to 300 / <b>0</b> / 1 deg/step]		
1-141-201	Display detailed conditions when an SC occurs. Displayed content is temp.: center: 2 cycle a head of occurred time.				
	Htg Roller:End Det3	*ENG	[-5 to 300 / <b>0</b> / 1 deg/step]		
1-141-202	Display detailed conditions when an SC occurs. Displayed content is temp.: center: 2 cycle a head of occurred time.				
	Press Roller:Ctr Det3	*ENG	[-5 to 300 / <b>0</b> / 1 deg/step]		
1-141-203	Display detailed conditions when an SC occurs. Displayed content is temp.: center: 2 cycle a head of occurred time.				
	Press Roller:End Det3	*ENG	[-5 to 300 / <b>0</b> / 1 deg/step]		
1-141-204	Display detailed conditions when an SC occurs. Displayed content is temp.: edge: 2 cycle a head of occurred time.				

1142	[Fusing Jam Detection]		
1-142-001	SC Display	*ENG	[0 or 1 / <b>0</b> / 1/step] 0: OFF 1: ON
	Display SC or not when detec	cting a fusing jam 3 times in a roll.	

1152	[Fusing Nip Band Check]		
1-152-001	Execute	ENG	[0 or 1 / <b>0</b> / 1/step]
	Measure nip.  The standard specification of this machine is +/-0.8 mm. if the value is out of range,		
	the fusing unit needs to be replaced.		

1153	[Abnormal Noise Confirmation] DFU		
1-153-001	Unit: Execute	ENG	[0 or 1 / <b>0</b> / 1/step]
1-153-002	No Unit: Execute	ENG	[0 or 1 / <b>0</b> / 1/step]
	Operation Line Speed	ENG	[0 to 2 / <b>0</b> / 1/step]
1-153-003			0: Std Speed
1-133-003			1: Mid Speed
			2: Low Speed
1-153-004	Operation Time	ENG	[0 to 240 / <b>60</b> / 1 sec/step]
1-153-005	Heat Center Target Temp	ENG	[100 to 180 / <b>130</b> / 1deg/step]
1-153-006	Heat End Target Temp	ENG	[100 to 180 / <b>130</b> / 1deg/step]
1-153-007	Press Target Temp	ENG	[0 to 200 / <b>0</b> / 1 deg/step]

1154	[Switch:Rotation Start/Stop] DFU		
1154	For design use. Do not change.		
1-154-001	Judging Method Change	*ENG	[0 or 1 / <b>0</b> / 1/step] 0: ON 1: OFF
1-154-005	Heater ON Timing	*ENG	[0 to 250 / <b>0</b> / 10msec/step]
1-154-006	Overshoot Prevent Temp.:SC	*ENG	[0 to 250 / * / 1deg/step]  * The default is different with models. D197: 185 D198: 185 D199: 185 D200: 195 D201: 200 D202: 200

1155	[Small Size Paper Control] DFU
1155	For design use. Do not change.

1-155-001 Print Width	ENG	[0 to 300 / <b>0</b> / 1 mm/step]	
-----------------------	-----	-----------------------------------	--

1907	[Paper Feed Timing Adj.]		
	By-pass Size Decision Timing	*ENG	[1 to 3 / <b>3</b> / 1/step]
1-907-029	Adjusts waiting time till fix a size from size detector's output when paper is set with standard bypass or one action bypass function is OFF. Will have more time till start button to turn green when setting waiting time longer, but time for setting paper will also be loner. Side effect might occur such as paper feed starts before finish setting paper if waiting time is set shot.		

1955	[Fan ON/OFF Switch Set]		
1-955-021	Front Development	*ENG	[0 to 1/0/1/step] 0: Off (Stop) 1: On (Rotation)
Specifies the movement of PSU cooling fan. This SP is only for D200, D201, and D202.			

1955	[Fan ON/OFF Switch Set]		
1-955-022	Toner Bottle	*ENG	[0 to 1/0/1/step] 0: Off (Stop) 1: On (Rotation)
	Specifies the movement of development bearing Cooling Fan. This SP is only for D197, D198, and D199.		

# SP Mode Tables - SP2000

## SP2-XXX (Drum)

2101	[Registration Correction]		
2-101-001	Main Dot	*ENG	[-512 to 511 / <b>0</b> / 1dot/step]
	Adjusts the main scan registeration.		
	Value increase: image shifts to right facing the paper.		
	Value decrease: image shifts to left facing the paper.		

2102	[LSU Adjustment]		
	Adjusts the main scan magnifi	ication.	
2102	Value increase: image stretches.		
	Value decrease: image s	shrinks.	
2-102-001	Main Mag.	*ENG	[-1.0 to 1.0 / <b>0.0</b> / 0.1%/step]

2103	[Erase Margin Adjustment]		
	Lead Edge Width	ENG	[0.0 to 9.9 / <b>4.2</b> / 0.1 mm/step]
2-103-001  Adjusts trimming margine at the leading edge for the sub scan.  • Value increase: Trim becomes wider.  • Value decrease: Trim becomes narrower.			
Trail. Edge Width  ENG  [0.0 to 9.9 / 4.2 / 0.1 mm/step  Adjusts trimming margine at the trailing edge for the sub scan.  • Value increase: Trim becomes wider.  • Value decrease: Trim becomes narrower.  When using the printer mode, the margin setting of the printer mode is prior to setting.		ENG	[0.0 to 9.9 / <b>4.2</b> / 0.1 mm/step]
		wer.	

5

	Left	ENG	[0.0 to 9.9 / <b>2.0</b> / 0.1 mm/step]	
2-103-003	Adjusts trimming margine at the left edge for sub scan.  • Value increase: Trim becomes wider.  • Value decrease: Trim becomes narrower.  When using the printer mode, the margin setting of the printer mode is prior to this setting.			
	Right	ENG	[0.0 to 9.0 / <b>2.0</b> / 0.1 mm/step]	
2-103-004	Adjusts trimming margine at the right edge for sub scan.  Value increase: Trim becomes wider.  Value decrease: Trim becomes narrower.  When using the printer mode, the margin setting of the printer mode is prior to this setting.			

	[Erase Margin Adjustment]			
2103	Sets trimming margine for the second side of the paper.  • Value increase: Trim becomes wider.  • Value decrease: Trim becomes narrower.			
2-103-006	Duplex Trail. L Size	ENG	[-4.0 to 4.0 / 1.0 / 0.1 mm/step]	
	Adjusts trimming margine at the trailing edge on the 2nd side for sub scan when using large size paper.			
	Duplex Trail. M Size	ENG	[-4.0 to 4.0 / <b>0.8</b> / 0.1 mm/step]	
2-103-007	Adjusts trimming margine at the trailing edge on the 2nd side for sub scan when using middle size paper.			
	Duplex Trail. S Size	ENG	[-4.0 to 4.0 / <b>0.6</b> / 0.1 mm/step]	
2-103-008	Adjusts trimming margine at the trailing edge on the 2nd side for sub scan when using small size paper.			
0.100.000	Duplex Left Edge	ENG	[0.0 to 1.5 / <b>0.3</b> / 0.1 mm/step]	
2-103-009	Adjusts trimming margine at the left edge on the 2nd side for main scan.			
0.102.010	Duplex Right Edge	ENG	[0.0 to 1.5 / <b>0.3</b> / 0.1 mm/step]	
2-103-010	Adjusts trimming margine at the right edge on the 2nd side for main scan.			

	T .		1	
	Duplex Trail. L Size:Thick	ENG	[-4.0 to 4.0 / <b>1.0</b> / 0.1 mm/step]	
2-103-011	Adjusts trimming margine at the trailing edge on the 2nd side for sub scan when using large thick size paper.			
	Duplex Trail. M Size:Thick	ENG	[-4.0 to 4.0 / <b>0.8</b> / 0.1 mm/step]	
2-103-012	Adjusts trimming margine at the using middle thick size paper	_	ge on the 2nd side for sub scan when	
	Duplex Trail. S Size:Thick	ENG	[-4.0 to 4.0 / <b>0.6</b> / 0.1 mm/step]	
2-103-013	Adjusts trimming margine at the using small thick size paper.	he trailing ed	ge on the 2nd side for sub scan when	
	Duplex Left Edge:Thick	ENG	[0.0 to 1.5 / <b>0.3</b> / 0.1 mm/step]	
2-103-014	Adjusts trimming margine at thick paper.	he left edge c	on the 2nd side for main scan when using	
	Duplex Right Edge:Thick	ENG	[0.0 to 1.5 / <b>0.3</b> / 0.1 mm/step]	
2-103-015	Adjusts trimming margine at the right edge on the 2nd side for main scan when using thick paper.			
	Duplex Trail. L Size:Thin	ENG	[-4.0 to 4.0 / 1.0 / 0.1 mm/step]	
2-103-016	Adjusts trimming margine at the trailing edge on the 2nd side for sub scan when using large thin paper.			
	Duplex Trail. M Size:Thin	ENG	[-4.0 to 4.0 / <b>0.8</b> / 0.1 mm/step]	
2-103-017	Adjusts trimming margine at the trailing edge on the 2nd side for sub scan when using middle thin paper.			
	Duplex Trail. S Size:Thin	ENG	[-4.0 to 4.0 / <b>0.6</b> / 0.1 mm/step]	
2-103-018	Adjusts trimming margine at the trailing edge on the 2nd side for sub scan when using small thin paper.			
	Lead Edge Width:Thin	ENG	[0.0 to 9.9 / <b>4.2</b> / 0.1 mm/step]	
2-103-019	Adjusts trimming margin at the thin paper.	e left edge or	n the 2nd side for main scan when using	
	Trail. Edge Width:Thin	ENG	[0.0 to 9.9 / <b>4.2</b> / 0.1 mm/step]	
2-103-020	Adjusts trimming margin at the thin paper.	e right edge o	on the 2nd side for main scan when using	

2107	[Image Parameter] DFU		
2107	For design use. Do not change.		
2-107-001	Image Gamma Flag	*ENG	[0 or 1 / 1 / 1/step]
2-107-002	Shading Correction Flag	*ENG	[0 or 1 / <b>0</b> / 1/step]

2109	[Test Pattern]				
	Patte	rn Selection	E١	1G	[0 to 24 / <b>0</b> / 1/step]
	Selec	ct patterns.			
	0	None		13	4dot Ind. Pttrn.
	1	1 dot Vertical		14	Trimming Area
	2	2dot Vertical		15	HoundstoothH
	3	1 dot Horizontal Line		16	Houndstooth V
2-109-003	4	2dot Horizontal Line		17	Black Band H
	5	Grid Vert		18	Black Band V
	6	Grid Horizontal		19	Checker Flag Pattern
	7	Grid Pattern Small		20	Grayscale V
	8	Grid Pattern Large		21	Grayscale H
	9	Argyle Pattern Small		22	2 Beam Density Pttrn.
	10	Argyle P : L		23	Full Dot Pattern
	11	1 dot Ind. Pttrn.		24	All White Pattern
	12	2dot Ind. Pttrn.		-	-
	Dens	ity	EN	1G	[0 to 15 / <b>15</b> / 1/step]
2-109-006	Sets test patterns density.				
		Value increase: Density   Value decrease: Density			

2110 [LD Driver]	2110	[LD Driver]
------------------	------	-------------

2-110-001	Error	*ENG	[0x0000 to 0xFFFF / 0x0000 / 1/step]  DFU  For design use. Do not change.
	Memory Transfer		[Execute]
2-110-005 Execution flag to download the adjustment values of the Executes when replacing the laser unit or assembling ma			
2-110-006	Revision Number	*ENG	[0x00 to 0xFF / - / 1/step] <b>DFU</b> For design use. Do not change.

2115	[Gamma Correction]			
	Low CPP edge Correction *ENG [0 to 100 / 80 / 1%/step]		[0 to 100 / <b>80</b> / 1%/step]	
2-115-001	Sets gamma correction value of valid pixel for the edge process in the love 2-115-001 condition.			
	Value increase: Density becomes darker.			
	Value decrease: Density becomes lighter.			

2152	[Shad. Correct Setting] DFU		
For design use. Do not change.			
2-152-001	Standard Speed	*ENG	
2-152-005	Middle Speed	*ENG	[50.0 to 150.0 / <b>100.0</b> / 0.1%/step]
2-152-009	Low Speed	*ENG	

2160	[Vertical Line Width] DFU		
2100	For design use. Do not chang	e.	
2-160-001	1 dot Line	*ENG	[0 to 31 / <b>31</b> / 1/step]
2-160-002	2 or more dots Line	*ENG	[0 to 31 / <b>31</b> / 1/step]

2242	[TS Operation Env. Log]
------	-------------------------

2-242-100	Log Clear	ENG	[Execute]
2-242-10	2-242-100 Clears the environment log for	or the image p	processing temperature.

2400	[Paper Transfer Roller Settings]		
	Detach timing in waiting *ENG [0 to 600 / 240 / 1 min/step]  If the transfer roller remains in contact with the OPC drum for a long time, the deformation of the transfer roller occurs, causing black streaks. To prevent the deformation, the transfer roller is disengaged after the specified time set in this SP has elapsed.		
2-400-002			

	[Interrupt Transfer CL]		
Enables or disables the interruption cleaning for the transfer roller during outputs.		ng for the transfer roller during the multiple	
2-970-004	Low-temperature, low- humidity	ENG	[0 or 1 / <b>0</b> / 1 / -] 0: Disabled, 1: Enabled
2-970-005	Moderate temperature and humidity	ENG	[0 or 1 / <b>0</b> / 1 / -] 0: Disabled, 1: Enabled
2-970-006	High-temperature and high- humidity	ENG	[0 or 1 / <b>0</b> / 1 / -] 0: Disabled, 1: Enabled

2990	[Print Duty Control]		
	Forced CPM Down Thresh: No Duty Control: MM	*ENG	[0 to 5000 / <b>0</b> / 1 page/step]
2-990-004	Sets the threshold for the CPN restricted.	1 down in M	M condition when the imaging duty is not
2-990-007	Forced CPM Down Thresh: Duty Control	*ENG	[0 to 5000 / <b>16</b> / 1 page/step]
	Sets the threshold for the CPM down when the imaging duty is restricted		the imaging duty is restricted.
2-990-008	Down-time_BW: Duty Control	*ENG	[0 to 240000 / <b>25000</b> / 10msec/ step]
	Sets the down-time for the BV	V mode printi	ing when the imaging duty is restricted.

2-990-011	Execution Temp. Threshold	*ENG	[20 to 70 / <b>45.5</b> / 0.1 deg/step]
2-990-011	Sets the temperature threshold	old for the imag	ging duty restriction.
2-990-101	Forced CPM Down Thresh: No Duty Control: LL	*ENG	[0 to 5000 / <b>0</b> / 1 page/step]
2-990-101	Sets the threshold for the CPA restricted.	1 down in LL	condition when the imaging duty is not
2 000 102	Forced CPM Down Thresh: No Duty Control: ML	*ENG	[0 to 5000 / <b>0</b> / 1 page/step]
2-990-102  Sets the threshold for the CPM down in ML concrestricted.	L condition when the imaging duty is not		
2-990-103	Forced CPM Down Thresh: No Duty Control: HH	*ENG	[0 to 5000 / <b>0</b> / 1 page/step]
	Sets the threshold for the CPN restricted.	1 down in HF	d condition when imaging duty is not

#### 5

# SP Mode Tables - SP3000

### SP3-XXX (Process)

3011	[Manual ProCon :Exe]		
0.011.001	Normal ProCon	ENG	[Execute]
3-011-001 Executes the process control mode.			

3012	[ProCon OK?]			
3012	Displays the result of the process control for each SP number.			
	History:Last	*ENG	[0 to 99 / <b>0</b> / 1/step]	
3-012-001	Displays the latest result of the	e process cor	ntrol execution.	
3-012-002	History:Last 2	*ENG	[0 to 99 / <b>0</b> / 1/step]	
3-012-002	Displays the result before the	last result of	the process control execution.	
3-012-003	History:Last 3	*ENG	[0 to 99 / <b>0</b> / 1/step]	
3-012-003	Displays the result before the last 2 result of the process control execution.			
3-012-004	History:Last 4	*ENG	[0 to 99 / <b>0</b> / 1/step]	
3-012-004	Displays the result before the last 3 result of the process control execution.			
3-012-005	History:Last 5	*ENG	[0 to 99 / <b>0</b> / 1/step]	
3-012-003	Displays the result before the last 4 result of the process control execution.			
3-012-006	History:Last 6	*ENG	[0 to 99 / <b>0</b> / 1/step]	
3-012-000	Displays the result before the last 5 result of the process control execution.			
3-012-007	History:Last 7	*ENG	[0 to 99 / <b>0</b> / 1/step]	
3-012-007	Displays the result before the last 6 result of the process control execution.			
3-012-008	History:Last 8	*ENG	[0 to 99 / <b>0</b> / 1/step]	
3-012-006	Displays the result before the	last 7 result o	of the process control execution.	

3-012-009	History:Last 9	*ENG	[0 to 99 / <b>0</b> / 1/step]
3-012-009	Displays the result before the	last 8 result of the process control execution.	
2.010.010	History:Last 10	*ENG	[0 to 99 / <b>0</b> / 1/step]
3-012-010	Displays the result before the last 9 result of the process control execution.		

\*SP3-012 Display result detail

Category	Code	Result name	Description
00 or more	00	Not executed	Factory default setting (SP default)
10 or more Result (Normal)	11	Succeed	-
	21	ID Sensor Vsg adjust error	Out of range from Vsg_reg = 4.0 ± x.x[V/step]
	22	ID Sensor LED Adjust error	Ifsg > Max
20 or more:	23	ID Sensor Output error (regular reflect)	Vsg_reg < Min (Max)
ID Sensor	24	ID Sensor output error (diffusion reflect)	Vsg_dif < Min(Max)
	25	ID Sensor offset Voltage error (regular reflect)	Voffset_reg > Max
	26	ID Sensor offset Voltage error (diffusion reflect)	Voffset_dif > Max
40 or more:	41	TD Sensor Output error (Max)	Vt > Max
TD sensor	42	TD Sensor Output error (Min)	Vt < Min
	46	Vsp error (Max)	Vsp > Max
45 or more:	47	Vsp error (Min)	Vsp < Min
ID Pattern detect	48	Vsp error (Max)	Vsp > Max
	49	Vsp error (Min)	Vsp < Min

90 or more: Result (End)	99		Forced termination by door open, power off, external cause.
-----------------------------	----	--	---

3030	[Init TD Sensor :Exe]		
2 020 001	Execute	ENG	[Execute]
3-030-001	Executes TD sensor initial setting	ı (K).	
3-030-071	Init Temp: K	*ENG	[-100.0 to 100.0 / <b>23.0</b> / 0.1deg/ step]
	Displays the ambient temperatu	re at the TD s	ensor initialization.
			DFU
3-030-081	Init Rel Hum: K	*ENG	[0 to 100.0 / <b>50.0</b> / 0.1%RH/step]
			For design use. Do not change.
			DFU
3-030-091	Init Abs Hum: K	*ENG	[0 to 100.00 / <b>10.30</b> / 0.01g/m <sup>3</sup> / step]
			For design use. Do not change.
			DFU
3-030-101	Init Coverage: K <b>DFU</b>	*ENG	[0 to 2147483647 / <b>0</b> / 1%/ step]
			For design use. Do not change.
			DFU
3-030-111	Total DC: Dev: K	*ENG	[0 to 2147483647 / <b>0</b> / 1%/step]
			For design use. Do not change.

3031	[TD Sens Init OK?]
------	--------------------

3-031-001	K	ENG	[0 to 9 / 0 / 1/step] 0: No execution 1: Success 2: No developer error 3: Out of target range 9: Forced termination
	Displays execution result of TD sensor initial setting.		

3050	[Force Tnr Supply :Exe]		
2.050.001	Execute	ENG	[Execute]
3-050-001	Executes the forced toner sup	ply (K).	
	Supply Quantity	*ENG	[0 to 5/ <b>0.5</b> / 0.1/wt%]
3-050-021 Sets the supply quantity (K) for the forced toner supply by [wt%] step.  A larger value increases the toner supply amount.			

;	3072	[T Sensor: Check]		
	30/2	Executes testing mode to test	TD sensor's o	utput (Vt) without starting up the engine.
	3-072-001	Execute Check ENG [Execute]		

	[T Sensor Measurement Value:]		
3073	Displays TD sensor output voltage (mu count) when SP3-072-001 is executed.		
	Normal value is approximate	ly 6000 to 6	200.
3-073-001	mu count *ENG [0 to 65535 / <b>0</b> / 1/step]		[0 to 65535 / <b>0</b> / 1/step]

;	2074	[ID.Sens Check :Exe]		
	30/4	Executes ID sensor inspection check.		
	3-074-001	All Sensors ENG [Execute]		

3075	[ID.Sens Chk :Disp]		
30/3	Display the result (Vsg_reg/	Offset voltage	e) of SP3-074-001.
3-075-001	Vsg_reg *ENG [0.00 to 5.50 / <b>0.00</b> / 0.01V/step		[0.00 to 5.50 / <b>0.00</b> / 0.01 V/step]
3-075-011	Voffset	*ENG	[0.00 to 5.50 / <b>0.00</b> / 0.01V/step]

3100	[Toner End Detection: Set]			
3-100-001	ON/OFF	*ENG	[0 or 1 / <b>0</b> / 1/step] 0: Enable 1: Disable	
	Selects the toner near end and toner end detection.			
3-100-003	TE Detection	*ENG	[0 to 2 / 1 / 1/step] 0:Page & Vt 1:Vt Only 2:Page Counter Only	
	Selects the toner end detection method.			

[Toner Status :Disp]		
Displays remaining toner.		
К	*ENG	[0 to 2 / <b>2</b> / 1/step]
		2: Full 1: Near end
		0: Toner end
	Displays remaining toner.	Displays remaining toner.

3133	[TE Detect :Set]		
2 122 001	Set Sheets	*ENG	[0 to 5000 / <b>90</b> / 1 sheet/step]
3-133-001	Sets the number of sheets to d	lisplay toner	end after toner near end is detected.

3133	[TE Detect :Set]
3133	Displays the amount of sheets printed after toner near end is fixed.

3200	[TnrDensity]		
3200	Displays toner density (wt%).		
3-200-001	K *ENG [0 to 25.5 / <b>0</b> / 0.1 wt%/step]		[0 to 25.5 / <b>0</b> / 0.1 wt%/step]

2201	[TnrDensity] DFU		
3201	For design use. Do not chang	e.	
3-201-001	3-201-001 Upper TC *ENG [1.0 to 15.0		[1.0 to 15.0 / <b>5.5</b> / 0.1wt%/step]
3-201-002	Lower TC	*ENG	[1.0 to 15.0 / <b>2.7</b> / 0.1 wt%/step]

3205	[TDSensSensitivity] DFU		
3203	For design use. Do not change.		
3-205-061	BD Cnv Coef: K	*ENG	[-999.0 to 0 / <b>-280.0</b> / 0.1 count/g/m <sup>3</sup> /step]
3-205-071	AH Cnv Coef: K	*ENG	[0 to 0.9999 / <b>0</b> / 0.0001 /step]
3-205-101	Bulk Density: K	*ENG	[-5.00 to 5.00 / <b>0</b> / 0.01V/step]

3210	[TD.Sens:Vt :Disp]		
Displays latest T sensor output.			
3-210-001	Current	*ENG	[0.00 to 5.50 / <b>0.00</b> / 0.01V/step]

3212	[Vt Shift :set] DFU		
For design use. Do not change.			
			[0 or 1 / <b>0</b> / 1/step]
3-212-101	TC Cor.(ON/OFF)	*ENG	0:OFF
			1:ON

3214	[Vt Save :Set] DFU			
3214	For design use. Do not change.			
3-214-001	Coverage Thresh	*ENG	[0 to 100 / <b>20</b> / 1%/step]	

3230	[Vtref :Disp/Set]		
3-230-001	Current	*ENG	[0.00 to 5.00 / <b>2.50</b> / 0.01V/step]
3-230-001	Displays / Sets current target value of TD sensor's output voltage: Vtref (K).		

3250	[ImgArea :Disp]			
3230	Displays image area (K) for the latest page.			
3-250-001	ImgArea	*ENG	[0 to 9999 / <b>0</b> / 1 cm <sup>2</sup> /step]	

3251	[DotCoverage :Disp]		
0.051.001	DotCoverage	*ENG	[0.00 to 100.00 / <b>0.00</b> / 0.01%/step]
3-251-001	Displays image area rate (K) for the latest page.		

3252	[AccumImgArea :Disp]			
3232	Displays accumulated image area (K).			
3-252-001	ImgArea	*ENG	[0 to 65535 / <b>0</b> / 1 cm <sup>2</sup> / step]	

3260	[Temperature/Humidity: Display]				
0.040.001	Temperature	ENG	[-5.0 to 45.0 / <b>0.0</b> / 0.1 deg]		
3-260-001	Displays temperature of environment sensor output.				
2 240 002	Relative Humidity	ENG	[0.0 to 100.0 / <b>0.0</b> / 0.1%RH/step]		
3-260-002	Displays relative humidity of environment sensor output.				
3-260-003	Absolute Humidity	ENG	[0.00 to 100.00 / <b>0.00</b> / 0.01g/m <sup>3</sup> / step]		
	Displays absolute humidity of environment sensor output.				

	[ID.Sens :Voffset]		
3310	Displays the regular reflection output of ID sensor when the LED of the ID sen off.		
	Normal condition: Approxima	ately 0.1V or	less.
3-310-001	Voffset reg	*ENG	[0.00 to 5.50 / <b>0.00</b> / 0.01V/step]

3310	[ID.Sens :Voffset]		
	Voffset TM(Front)	*ENG	[0.00 to 5.50 / <b>0.00</b> / 0.01V/step]
3-310-021	Displays the regular reflection output of ID sensor when the LED of the ID sensor is off.		
	Normal condition: Approximately 0.1V or less.		

3320	[Vsg Adj: Execute]		
3-320-001	P Sensor	ENG	[Execute]
	Execute the Vsg adjustment for the ID sensor.		
3-320-011	Vsg Error Counter	*ENG	[0 to 99 / <b>0</b> / 1 times/step]
	Displays Vsg error counter.		

	[Adjusted Vsg]		
3321	Displays regular reflection output of the bare ITB area at the Vsg adjustment.		
	Normal condition: 3.5 to 4.5	V	
3-321-001	Vsg reg	*ENG	[0.00 to 5.50 / <b>0.00</b> / 0.01V/step]

	[Adjusted Ifsg]				
3322	Displays the LED current of the ID sensor. If it differs greatly from the value in SP3-322-011, the ID sensor may be stained, the OPC drum may have deteriorated, the ID sensor may be out of alignment, or there may be some other problem.				
3-322-001	Ifsg	*ENG	[0.0 to 50.0 / <b>10.0</b> / 0.001 mA/step]		

3322	[Adjusted Ifsg]				
3322	Displays the minimum LED current of the ID sensor for the Vsg adjustment.				
3-322-011	Ifsg Min	*ENG	[0.0 to 50.0 / <b>27.0</b> / 0.001 mA/step]		

	[Vsg Adj	OK?]			
	Displays Vsg adjustment result (SP assign for compatibility with unification model sires).				
	Code	Result		detail	
	0	Not executed		(SP default)	
	1	Succeed		-	
3323	2	ID sensor prod	ofread error	Out of range from Vsg= Vsg_reg(target value)±x.x[V/step]	
	3	Offset voltage	e error	Voffset_reg>Max. or Voffset_dif>Max.	
	4	LED Ampere A	Max. error.	lfsg>Max.	
	5	ID sensor outp	out error.	Vsg< Vsg_reg(error)	
	9	Forced termination		Forced termination by door open, power off, external cause.	
3-323-001	Latest		*ENG		
3-323-002	Latest 2		*ENG	_	
3-323-003	Latest 3		*ENG		
3-323-004	Latest 4		*ENG		
3-323-005	Latest 5		*ENG	[0+-0/0/1/+]	
3-323-006	Latest 6		*ENG	[0 to 9 / <b>0</b> / 1/step]	
3-323-007	Latest 7		*ENG		
3-323-008	Latest 8		*ENG		
3-323-009	Latest 9	Latest 9			
3-323-010	Latest 10		*ENG		

	[ID.Sens Coef :Set]			
3331	This is the coefficient used for adjusting Vsp/Vsg in accordance with the ID sensor test data. Input this coefficient, supplied with the sensor, to correct the variation of each sensor.			
3-331-061	Vsp Coef	*ENG	[0.500 to 1.500 / <b>1.000</b> / 0.001/step]	
3-331-071	Vsdp Coef	*ENG	[0.500 to 1.500 / <b>1.000</b> / 0.001/step]	

3400	[Toner Supply Type]				
3400	Selects toner supply method.				
			[0 to 2 / <b>2</b> / 1/step]		
3-400-001	K	*ENG	0: Fixed		
			2: PID		

3411	Displays latest value of supply amount calculated from toner supply amount computation formula.			
3-411-001	K	ENG	[0.0 to 40000.0 / <b>0.0</b> / 0.1 mg/step]	

3420	[DeveloperWeight] DFU			
3420	For design use. Do not change.			
3-420-001	Total_Weight	*ENG	[50 to 2000 / <b>315</b> / 1g/step]	

	3421	[TnrSplyAbility] DFU			
	3-421-001	К	*ENG	[0.001 to 2.000 / <b>0.670</b> / 0.001mg/ msec]	

3422	[Tnr Supply Limits :Set] DFU			
3422	For design use. Do not change.			
3-422-001	Max Supply Rate	*ENG	[0 to 255 / <b>100</b> / 1%/step]	

3-422-011 Min Supply Time	*ENG	[0 to 255 / <b>100</b> / 1msec/step]	
---------------------------	------	--------------------------------------	--

3428	[TnrSplyDelay : Setting] DFU				
3420	For design use. Do not change.				
3-428-001	Delay	*ENG	[0 to 255 / <b>0</b> / 1 msec/step]		

	[Fixed Supply Mode]				
3440	supplying mode.				
0440	Increasing value: Increases the toner supply rate.				
	Decreasing value: Decre	eases the tone	er supply rate.		
3-440-001	Fixed Rate	*ENG	[0 to 100 / <b>10</b> / 1%/step]		

3500	[ImgQltyAdj :ON/OFF]			
3-500-001	ALL <b>DFU</b>	*ENG	[0 or 1 / 1 / 1/step] 0: OFF 1: ON	
	For design use. Do not chang	e.		
3-500-002	ProCon	*ENG	[0 or 1 / 1 / 1 / step] 0: OFF 1: ON	
	Sets execution judge to OFF of	on judge to OFF of electric potential control.		
3-500-004	Init TD Sensor <b>DFU</b>	*ENG	[0 or 1 / 1 / 1/step] 0: OFF 1: ON	
	For design use. Do not change.			

3510	2510	[ImgQltyAdj :ExeFlag]
		Sets the execution flag for the initial toner supply.

3-510-031	Init Toner Replenish: K	*ENG	[0 or 1 / 0 / 1/step] 0: No execution, 1: Execution flag	
-----------	-------------------------	------	--	--

3520	[ImgQltyAdj:Interval]		
3-520-001	During Job	*ENG	[0 to 100 / <b>30</b> / 1 page/step]
	Sets image adjust judgment page interval for during print.		
3-520-002	During Stand-by	*ENG	[0 to 100 / <b>5</b> / 1 minute/step]
	Sets image adjust judgment time interval for during standby.		

2520	[ProCon Interval Control :Set] DFU			
3529	For design use. Do not change.			
3-529-001	Gamma Corr	*ENG	[0 or 1 / 1 / 1/step] 0: OFF 1: ON	
3-529-002	Environ Corr	*ENG	[0 or 1 / 1 / 1/step] 0: OFF 1: ON	
3-529-003	AbsHum Threshold	*ENG	[0.0 to 99.0 / <b>4.3</b> / 0.1 g/m <sup>3</sup> /step]	
3-529-004	Max Cnt Threshold	*ENG	[0 to 99 / <b>2</b> / 1 counts/step]	
3-529-005	Exe Cnt	ENG	[0 to 255 / <b>0</b> / 1 counts/step]	
3-529-006	Page Cnt:BW	*ENG	[0 to 5000 / <b>0</b> / 1 sheet/step]	

3530	[PowerON ProCon :Set] DFU		
	For design use. Do not change.		
3-530-001	Non-use Time Setting	*ENG	[0 to 1440 / <b>360</b> / 1 minute/step]
3-530-002	Temperature Range	*ENG	[0 to 99 / <b>10</b> / 1 deg/step]
3-530-003	Relative Humidity Range	*ENG	[0 to 99 / <b>50</b> / 1%RH/step]
3-530-004	Absolute Humidity Range	*ENG	[0 to 99 / <b>6</b> / 1 g/m <sup>3</sup> /step]

3-530-005	Interval:BW	*ENG	[0 to 5000 / 100 / 1 sheet/step]
3-530-007	Page Cnt:BW	*ENG	[0 to 5000 / <b>0</b> / 1 sheet/step]

0.501	[Non-useTime Procon :Set] D	FU	
3531	For design use. Do not change.		
3-531-001	Non-use Time Setting	*ENG	[0 to 1440 / <b>360</b> / 1 minute/step]
3-531-002	Temperature Range	*ENG	[0 to 99 / <b>10</b> / 1 deg/step]
3-531-003	Relative Humidity Range	*ENG	[0 to 99 / <b>50</b> / 1%RH/step]
3-531-004	Absolute Humidity Range	*ENG	[0 to 99 / <b>6</b> / 1g/m <sup>3</sup> /step]
3-531-005	Maximum Execution Number	*ENG	[0 to 99 / <b>10</b> / 1 times/step]

3533	[Interrupt ProCon :Set]			
	Interval:Set:BW	*ENG	[0 to 5000 / 100 / 1 sheet/step]	
	Sets number of sheets interval	for the interr	upt process control (BW).	
3-533-001	<ul> <li>Increasing value: Increases the number of sheets printed for the interval between executing each interrupt process control.</li> </ul>			
Decreasing value: Decreases the number of sheets printed for the between executing each interrupt process control.				
2 522 000	Interval:Disp:BW	*ENG	[0 to 5000 / 100 / 1 sheet/step]	
3-533-002	Displays number of sheets interval for the interrupt process control (BW).			
3-533-003	Corr(Short):BW <b>DFU</b>	*ENG	[0.00 to 1.00 / <b>0.50</b> / 0.01/step]	
3-333-003	Contanoni, BVV DFO	ENG	For design use. Do not change.	
3-533-004	Corr(Mid):BW <b>DFU</b>	*ENG	[0.00 to 1.00 / <b>1.00</b> / 0.01/step]	
3-333-004	Continual Byy DFO	ENG	For design use. Do not change.	

3534	[JobEnd ProCon :Set]
------	----------------------

	Interval:Set:BW	*ENG	[0 to 5000 / 100 / 1 sheet/step]			
	Sets number of sheets interval	Sets number of sheets interval for the job end process control (BW).				
3-534-001	<ul> <li>Increasing value: Increases the number of sheets printed for the interval between executing each job end process control.</li> </ul>					
	<ul> <li>Decreasing value: Decreases the number of sheets printed for the interval between executing each job end process control.</li> </ul>					
	Interval:Disp:BW	*ENG	[0 to 5000 / <b>100</b> / 1 sheet/step]			
3-534-002	Displays number of sheets interval for the job end process control (BW).					
3-534-003	Corr(Short):BW <b>DFU</b>	*ENG	[0.00 to 1.00 / <b>0.50</b> / 0.01/step]			
3-334-003	Confolion, by Di O	LINO	For design use. Do not change.			
3-534-004	Corr(Mid):BW <b>DFU</b>	*ENG	[0.00 to 1.00 / 1.00 / 0.01/step]			
	Continual Base	LING	For design use. Do not change.			

3539	[Dev Agitating Time :Set] DFU			
3539	For design use. Do not change.			
3-539-011	by RelHum: 1	*ENG	[0 to 3000 / <b>0</b> / 1 sec/step]	
3-539-012	by RelHum:2	*ENG		
3-539-013	by RelHum:3	*ENG		
3-539-014	by RelHum:4	*ENG	[0 to 3000 / <b>5</b> / 1 sec/step]	
3-539-015	by RelHum:5	*ENG		
3-539-016	by RelHum:6	*ENG		
3-539-021	RelHum Threshold:1	*ENG	[0 to 65.0 / <b>4.0</b> / 0.1 g/m <sup>3</sup> /step]	
3-539-022	RelHum Threshold:2	*ENG	[0 to 65.0/ <b>8.0</b> / 0.1g/m <sup>3</sup> /step]	
3-539-023	RelHum Threshold:3	*ENG	[0 to 65.0 / <b>12.0</b> / 0.1 g/m <sup>3</sup> /step]	
3-539-024	RelHum Threshold:4	*ENG	[0 to 65.0 / <b>16.0</b> / 0.1 g/m <sup>3</sup> /step]	
3-539-025	RelHum Threshold:5	*ENG	[0 to 65.0 / <b>24.0</b> / 0.1 g/m <sup>3</sup> /step]	

2550	[Refresh Mode] DFU		
3550	For design use. Do not change.		
3-550-001	Required Area	*ENG	[0 to 65535 / <b>0</b> / 1cm^2]
3-550-031	Refresh Threshold: BK:MM	*ENG	[0 to 255 / <b>51</b> / 1cm^2]
3-550-101	Refresh Threshold: BK:LL	*ENG	[0 to 255 / <b>51</b> / 1cm^2]
3-550-102	Refresh Threshold: BK:ML	*ENG	[0 to 255 / <b>51</b> / 1cm^2]
3-550-103	Refresh Threshold: BK:HH	*ENG	[0 to 255 / <b>51</b> / 1 cm^2]

3551	[Select Recycle/Waste]			
		*ENG	[0 to 3 / 2 / 1/step]	
	Select Control		1: Sw Auto	
3-551-009	Select Collifor		2: Dispose All	
			3: Recycle All	
	DFU			
3-551-010			[0 or 1 / <b>0</b> / 1/step]	
	Select Status *ENG	*ENG	0: Recycle	
			1: Waste	
	Displays the status of toner recycle mode.			

3600	[Select ProCon] DFU		
For design use. Do not change.			
			[0 or 1 / 1 / 1/step]
3-600-001	Potential Control	*ENG	0: OFF
			1: ON

3611	[Chrg DC Control]			
3011	Displays the DC bias decided by the process control for the chare unit.			
3-611-001	Std Speed	*ENG	[300 to 2000 / <b>790</b> / 1-V/step]	

3612	[Dev DC Control]		
3-612-001	Std Speed	*ENG	[200 to 800 / <b>590</b> / 1-V/step]
	Displays the development bias decided by the process control.		
3-612-201	Now:Std Speed: K	ENG	[200 to 800 / <b>690</b> / 1-V/step]
	Displays the actual developm	ent bias.	

3613	[LD Power Control] DFU For design use. Do not change.			
3013				
3-613-101	PrcsCntrlCorrect	ENG	[0 to 200 / <b>130</b> / 1%/step]	

3623	[LD Power :Set] DFU		
3023	For design use. Do not chang	e.	
3-623-001	Std Speed Slope	*ENG	[-1000 to 1000 / <b>105</b> / 1/step]
3-623-011	Std Speed intercept	*ENG	[-1000 to 1000 / <b>16</b> / 1/step]
3-623-021	Mid Speed Slope	*ENG	[-1000 to 1000 / <b>102</b> / 1/step]
3-623-031	Mid Speed intercept	*ENG	[-1000 to 1000 / <b>14</b> / 1/step]
3-623-041	Low Speed Slope	*ENG	[-1000 to 1000 / <b>90</b> / 1/step]
3-623-051	Low Speed intercept	*ENG	[-1000 to 1000 / <b>33</b> / 1/step]

3623	[LD Power :Set]		
	Sets LD power upper/lower limit.		
	UpperLimit	*ENG	[100 to 200 / <b>132</b> / 1%/step]
3-623-101	<ul> <li>Increasing value: Increases the value of upper limit for LD power.</li> <li>Decreasing value: Decreases the value of upper limit for LD power.</li> </ul>		
	LowerLimit	*ENG	[0 to 100 / <b>67</b> / 1%/step]
3-623-111	<ul> <li>Increasing value: Increases the value of lower limit for LD power.</li> <li>Decreasing value: Decreases the value of lower limit for LD power.</li> </ul>		

3628	[ID Pattern Timing :Set] DFU		
3026	For design use. Do not change.		
3-628-001	Scan	*ENG	[-500.0 to 500.0 / <b>0.0</b> / 0.1 mm/step]
3-628-002	Detection Delay Time	*ENG	[0 to 2500 / <b>0</b> / 1 msec/step]
3-628-003	Delay Time	*ENG	[0 to 2500 / <b>700</b> / 1 msec/step]
3-628-004	MUSIC Delay Time	*ENG	[0 to 2500 / <b>300</b> / 1 msec/step]

3630	[Vsp :Disp/Set]		
2 / 20 001	Current	*ENG	[0.00 to 5.50 / <b>0.00</b> / 0.01V/step]
3-630-001	Displays the latest Vsp (K).		

3630	[Dev gamma :Disp/Set]			
3-630-011	Target:K	*ENG	[0.50 to 2.55 / <b>0.95</b> / 0.01 mg/ cm2/-kV/step]	
	Displays the target value for the development gamma (K).			
0.400.041	TnrDensity	*ENG	[0.0 to 25.5 / <b>0.0</b> / 0.1 wt%/step]	
3-630-061	Displays the toner density (K) converted based on the TD Sensor output.			

3631	[Vsdp :Disp]	[Vsdp :Disp]			
3031	Displays latest Vsdp value.				
3-631-001	Current	*ENG	[0 to 5.50 / <b>0</b> / 0.01 V/step]		

3700	[New Unit Detection]			
	Enables or disables the new unit detection.			
			[0 or 1 / <b>1</b> / 1/step]	
3-700-001	ON/OFF Setting	*ENG	1: Enable	
			0: Disable	

5

RTB 1 3701-142 f/w ver 1.09:03

	[Manual New Unit Set]				
3701	Set the new unit detection for each unit manually.				
0,01	0: Disables the new unit dete	ction for spec	cified unit.		
	ified unit.				
3-701-002	#PCU	*ENG	[0 or 1 / <b>0</b> / 1/step]		
3-701-009	Cleaning Blade	*ENG	[0 or 1 / <b>0</b> / 1/step]		
3-701-018	Charge Roller	*ENG	[0 or 1 / <b>0</b> / 1/step]		
3-701-019	Cleaner:Charge Roller	*ENG	[0 or 1 / <b>0</b> / 1/step]		
3-701-021	OPC	*ENG	[0 or 1 / <b>0</b> / 1/step]		
3-701-022	Separation Pawl	*ENG	[0 or 1 / <b>0</b> / 1/step]		
3-701-023	#Development Unit	*ENG	[0 or 1 / <b>0</b> / 1/step]		
3-701-024	Development	*ENG	[0 or 1 / <b>0</b> / 1/step]		
3-701-025	Development Filter	*ENG	[0 or 1 / <b>0</b> / 1/step]		
3-701-028	Bearing:Development Screw	*ENG	[0 or 1 / <b>0</b> / 1/step]		
3-701-108	#PTR Unit	*ENG	[0 or 1 / <b>0</b> / 1/step]		
3-701-115	#Fusing Unit	*ENG	[0 or 1 / <b>0</b> / 1/step]		
3-701-116	Fusing Belt	*ENG	[0 or 1 / <b>0</b> / 1/step]		
3-701-118	Pressure Roller	*ENG	[0 or 1 / <b>0</b> / 1/step]		
3-701-119	Pressure Roller Bearings	*ENG	[0 or 1 / <b>0</b> / 1/step]		
3-701-206	ADF:Pick-up Roller	*ENG	[0 or 1 / <b>0</b> / 1/step]		
3-701-207	ADF:Feeding Belt	*ENG	[0 or 1 / <b>0</b> / 1/step]		
3-701-208	ADF:Reverse Roller	*ENG	[0 or 1 / <b>0</b> / 1/step]		

	3 <i>7</i> 10	[mu Concentration Control: Set] DFU		
		For design use. Do not change.		
	3-710-011	mu sensor resolution	*ENG	[0 to 3 / 1 / 1/step]

RTB 12a Ver 1.07: Default changed

3-710-012	Ini mu count offset	*ENG	[0 to 10000 / 6000 / 1/step]	
			- · · · · · · · · · · · · · · · · · ·	

3711	[mu Concent Ctrl:K] DFU		
3711	For design use. Do not chang	e.	
3-711-031	Init Temp.	*ENG	[-100.0 to 100.0 / <b>0.0</b> / 0.1deg/step]
3-711-032	Init RH	*ENG	[0.0 to 100.0 / <b>0.0</b> / 0.1%RH/step]
3-711-033	Init AH	*ENG	[0.00 to 100.00 / <b>0.0</b> / 0.01g/m <sup>3</sup> / step]
3-711-041	Total DC: Dev	*ENG	[0 to 2147483647 / <b>0</b> / 1%/step]

3800	[Waste Toner Full Detection]			
	Threshold : Remainder days	*ENG	[1 to 255 / <b>15</b> / 1 /step]	
3-800-014	Specifies the threshold value for determining when to display the operation panel message reporting that the waste toner bottle is nearly full once the machine detects it. If the number of remaining days (SP7-951-142) falls below this threshold value, the message appears.			
	<ul> <li>Increasing value: Decreases the number of days before displaying the message once the machine detects that the waste toner bottle is nearly full.</li> </ul>			
	Decreasing value: Increases the number of days before displaying the message once the machine detects that the waste toner bottle is nearly full.			

# SP4-XXX (Scanner)

SP Mode Tables - SP4000

	[Sub Scan Magnification Adj]		
4008	Adjusts Sub Scan Magnification  Picture streches as value in  Picture shrinks as value de	ncreases.	uch step.
4-008-001	-	ENG	[-1.0 to 1.0 / <b>0.0</b> / 0.1 %/step]

[Sub Scan Registration Adj]

Adjusts Sub Scan Registration position of book scanner by 0.1 mm each step.

Picture moves to trailing edge of sub scan as value increases.

Picture moves to leading edge of sub scan as value decreases.

4-010-001 - ENG [-2.0 to 2.0 / 0.0 / 0.1 mm/step]

[Main Scan Reg]

Adjust Main Scan Registration position by 0.1 mm each step.

• Picture moves to right as value increases.

• Picture moves to left as value decreases.

4-011-001 - ENG [-2.5 to 2.5 / 0.0 / 0.1 mm/step]

# Adjusts scanning margins for the leading and trailing edges (sub scan) and right and left edge (main scan). \*\*Note\*\* Do not adjust unless the customer desires a scanner margin greater than the printer margin. These settings are adjusted to erase shadows caused by the gap between the original and the scale of the scanner unit.

5

## SP4013 RTB 58

	Book:Sub LEdge	ENG	[0.0 to 3.0 / <b>1.0</b> / 0.1 mm/step]			
4-012-001		Sets mask area to erase scale shadow of sub scan leading edge (left side or original table) when scanning with book scanner.				
	Book:Sub TEdge	ENG	[0.0 to 3.0 / <b>0.0</b> / 0.1 mm/step]			
4-012-002	Sets mask area to erase scale original table) when scanning		sub scan trailing edge (right side or canner.			
	Book:Main:LEdge	ENG	[0.0 to 3.0 / <b>1.0</b> / 0.1 mm/step]			
4-012-003	Sets mask area to erase scale shadow of main scan leading edge (rear side or original table) when scanning with book scanner.					
	Book:Main:TEdge	ENG	[0.0 to 3.0 / <b>0.0</b> / 0.1 mm/step]			
4-012-004	Sets mask area to erase scale shadow of main scan trailing edge (front side or original table) when scanning with book scanner.					
	ADF: Leading Edge	*ENG	[0.0 to 3.0 / <b>0.0</b> / 0.1 mm/step]			
4-012-005	Sets mask area to erase scale shadow of sub scan leading edge when scanning with ADF.					
	ADF: Right	*ENG	[0.0 to 3.0 / <b>0.0</b> / 0.1 mm/step]			
4-012-007	Sets mask area to erase scale with ADF.	shadow of r	main scan leading edge when scanning			
	ADF: Left	*ENG	[0.0 to 3.0 / <b>0.0</b> / 0.1 mm/step]			
4-012-008	Sets mask area to erase scale shadow of main scan trailing edge when scanning with ADF.					

4020	[Dust Check]			
4-020-001	Dust Detect:On/Off	ENG	[0 or 1 / <b>0</b> / 1/step] 0: OFF, 1: ON	
	Sets DF Dust Detection ON/OFF.			
4-020-002	Dust Detect:Lvl ENG [0 to 8 / 4 / 1 / step]  O: lowest detection level 8: highest detection level		0: lowest detection level	
	Sets DF Dust Detect Level. It is easier to detect as the value increases.			

4020	[Dust Check Lvl]				
	Dust Reject:Lvl	ENG	[0 to 4 / 0 / 1/step]		
4-020-003	Sets ON/OFF and switches level of Vertical stripes correction. 0=OFF, sets level to 1 from 4. The correction for the vertical stripes is stronger as value increases.				
4020	[DF Dust Check]				
	Dust Detect Level:Rear	ENG	[0 or 1 / <b>0</b> / 1/step]		
4-020-011			0: OFF, 1: ON		
	Sets ON/OFF DF: Rear (2nd side) dust detection setting.				
			[0 to 8 / <b>4</b> / 1/step]		
	Correction Level:Rear	ENG	0:Lowest level		
4-020-012			8:Highest level		
	Sets DF: Rear (2nd side) dust detection level. As the value enlarges, it is easier to detect.				

4201	[LoCPP edge level:K]			
4-201-005	600dpi 1bit edge1	*ENG	[0 to 15 / 11 / 1/step]	
4-201-003	Sets the parameters for the upper threshold of the small edge.			
4 201 004	600dpi 1bit edge23	*ENG	[0 to 15 / 11 / 1/step]	
4-201-006	Sets the parameters for the upper threshold of the large edge.			

4201	[LoCPP edge off/on:K]				
4201	Off/on for Smaller/larger edge: 1200dpi 1bit				
4 201 011	1200dpi 1bit edge12	*ENG	[0 or 1 / 1 / 1/step] 0: Off, 1: On		
4-201-011	ON/OFF for smaller edge: 1200dpi 1bit Select ON/OFF for low CPP edge correction with 1200dpi 1bit.				

4 201 012	1200dpi 1bit edge345	*ENG	[0 or 1 / 1 / 1/step] 0: Off, 1: On
4-201-012	ON/OFF for larger edge: 1200dpi 1bit Select ON/OFF for low CPP edge correction with 1200dpi 1bit.		

4301	[Operation Check APS Sensor]		
4-301-001	Operation Check APS Sensor	ENG	[0 to 255 / <b>0</b> / 1/step] 0: Not detected 1: Detected
	SP for testing APS Sensor function.		


4303	[Min Size for APS]		
	-	*ENG	[0 or 1 / <b>0</b> / 1/step] 0 : No Original 1: A5-Lengthwise
4-303-001  Sets display when non-standard (small size) size original is detected.  ◆ Note  • Sets display when non-standard (small size) size original is detected.  • When "2:EU" is selected at SP5-131-001 and "3:8K 16K" is set SP4-305-001, "1" of SP4-303-001 will be "1:16K Vertical".		e) size original is detected.	
		d at SP5-131	-001 and "3:8K 16K" is selected at

4305	[8K/16K Detection]
------	--------------------

[0 to 3 / 0 / 1/step]
0: Normal Detect
1: LT-LEF LT-SEF
2: LT-LEF A4-SEF
3: 8K 16K

4-305-001 Sets assign of decision size when original size is detected.

If this setting is set to "0: Normal Detection", the machine determines the paper size according to the region of use when detecting A4/LT size paper, regardless of whether the paper is loaded in portrait or landscape orientation.



• When "0: JA" or "1: NA" is set at SP5-131-001, "3: 8K 16K series" can not be selected with SP4-305-001.

4308	[Scan Size Detection]			
	Detection ON/OFF *ENC		[0 to 2 / 1 / 1/step]	
		*ENG	0: OFF	
			1: ON	
4 000 001			2: APS	
4-308-001	Switch Original size detection ON/OFF.			
	0: Not detect original size			
	1: Detect original size by the CCD unit			
	2: APS is used for detecting original size.			

4309	[Scan Size Detect:Setting]		
	Original Density Thresh	*ENG	[0 to 255 / <b>12</b> / 1 digit/step]
4-309-001	the non originals decrea increases.)  • Decreasing value: Detection	s originals wi ses, but dete	for the scan size detection.  Ith higher brightness. (Detection error for ction error for the darker original vith lower brightness. (Detection error for etection error for the non originals

4-309-002	Detection Time	*ENG	[20 to 100 / <b>60</b> / 20 msecstep]		
	Sets the time to end detection after ADF/Platen cover closing.				
	Increasing value: Detects originals with longer time.				
	Decreasing value: Detection	ts originals w	rith shorter time.		
	Lamp ON:Delay Time	*ENG	[40 to 200 / <b>40</b> / 10 msec/step]		
4-309-003	Sets the time to start LED lamp on after ADF/Platen cover closing.  • Increasing value: LED lamp lights later.				
	Decreasing value: LED lamp lights earlier.				
	LED PWM Duty	*ENG	[0 to 100 / <b>45</b> / 1/step]		
4-309-004	Adjusts lamp light timing for scan size detection.				
	Increasing value: Increase	ses the light c	luantity.		
	Decreasing value: Decreases the light quantity.				

	[Scan Size Detect Value]			
Checks the density of scanning data for the scan size detection.  The machine detects the original if the value in this SP is greater than that specif SP4-309-00x.				
	S1:R ENG [0 to 255 / 0 / 1 digit/step]			
4-310-001	size detection.	Displays the Red density of the image (Rear side) previously scanned using original ize detection.  51: Original width is within 182 mm to 210 mm.		
	S1:G ENG [0 to 255 / 0 / 1 digit/step]			
4-310-002	Displays the Green density of the image (Rear side) previously scanned using original size detection.  S1: Original width is within 182 mm to 210 mm.		. , ,	
	S1:B	ENG	[0 to 255 / 0 / 1 digit/step]	
4-310-003	Displays the Blue density of the image (Rear side) previously scanned using original size detection.  S1: Original width is within 182 mm to 210 mm.			

	S2:R	ENG	[0 to 255 / 0 / 1 digit/step]	
4-310-004	Displays the Red density of the image (Center) previously scanned using original size detection.			
	S2: Original width is within 2	15.9 mm to 2	254mm.	
	\$2:G	ENG	[0 to 255 / 0 / 1 digit/step]	
4-310-005	Displays the Green density of size detection.	the image (C	Center) previously scanned using original	
	S2: Original width is within 2	15.9 mm to 2	254mm.	
	S2:B	ENG	[0 to 255 / 0 / 1 digit/step]	
4-310-006	Displays the Blue density of the image (Center) previously scanned using original size detection.			
	S2: Original width is within 215.9 mm to 254mm.			
	S3:R	ENG	[0 to 255 / 0 / 1 digit/step]	
4-310-007	Displays the Red density of the image (Front side) previously scanned using original size detection.			
	S3: Original width is within 257 mm to 279.4 mm.			
	\$3:G	ENG	[0 to 255 / 0 / 1 digit/step]	
4-310-008	Displays the Green density of the image (Front side) previously scanned using original size detection.			
	S3: Original width is within 257 mm to 279.4 mm.			
	S3:B	ENG	[0 to 255 / 0 / 1 digit/step]	
4-310-009	Displays the Blue density of the image (Front side) previously scanned using original size detection.			
	S3: Original width is within 257 mm to 279.4 mm.			

4350	[Intermittent Shading : BW]		
4-350-001	Switch On/Off	ENG	[0 or 1 / 1 / 1/step]  0: Every time shading  1: Interval shading
	Switches On/OFF for Intermittent Shading when scanning in BW mode (Simplex/Duplex).		

4351	[Intermittent Shading : FC]		
4-351-001	Switch On/Off	ENG	[0 or 1 / 1 / 1/step]  0: Every time shading  1: Interval shading
	Selects shading operation for color scanning.		

	[Org Edge Mask]			
4400	Compared with SP4-012 (Set Scale Mask), which is used to adjust the scanning margin regardless of the original paper size, this SP can be used to adjust the scanning margin according to the original paper size. (This SP can be used to adjust the trim margin from the original paper edge.)			
	Book:Sub:LEdge(Left)	ENG	[0.0 to 3.0 / <b>0.0</b> / 0.1 mm/step]	
4-400-001	Sets mask area to erase original shadow of sub scan leading edge (left sic original table) when scanning with book scanner.			
	Book:Sub:TEdge(Right)	ENG	[0.0 to 3.0 / <b>0.0</b> / 0.1 mm/step]	
4-400-002	Sets mask area to erase original shadow of sub scan trailing edge (right side or original table) when scanning with book scanner.			
	Book:Main:LEdge(Rear)	ENG	[0.0 to 3.0 / <b>0.0</b> / 0.1 mm/step]	
4-400-003	Sets mask area to erase original shadow of main scan leading edge (rear side or original table) when scanning with book scanner.			
	Book:Main:Tedge(Front)	ENG	[0.0 to 3.0 / <b>0.0</b> / 0.1 mm/step]	
4-400-004	Sets mask area to erase original shadow of main scan trailing edge (front side or original table) when scanning with book scanner.			

4400	[Scanner Erase Margin]				
	ADF:Sub:LEdge(Left)	*ENG	[0.0 to 3.0 / <b>0.0</b> / 0.1 mm/step]		
4-400-005	Sets mask area to erase origi with ADF.	Sets mask area to erase original shadow of sub scan leading edge when scanning with ADF.			
	ADF:Main:LEdge(Rear)	*ENG	[0.0 to 3.0 / <b>0.0</b> / 0.1 mm/step]		
4-400-007 Sets mask area to erase original shadow of main scan leading edge w with ADF.		of main scan leading edge when scanning			

	ADF:Main:TEdge(Front)	*ENG	[0.0 to 3.0 / <b>0.0</b> / 0.1 mm/step]	
4-400-008	Sets mask area to erase original shadow of main scan trailing edge when scanning with ADF.			

4417	[IPU Test Pattern]		
			[0 to 8 / <b>0</b> / 1/step]
			0: Scanned image
	Test Pattern	ENG	1: Gradation main A
4-417-001			2: Patch 16C
			3: Grid pattern A
			4: Slant grid pattern B
			5: Argyle P:C
			6: Argyle P:D
			7: Scanned+Argyle P:D
			8: Scanned+ArgyleP:D
	Selects test pattern packaged with IPU ASIC.		
Pattern is for design purpose, content of pattern will be omit,			pattern will be omit,

4429	[Select Copy Data Security]			
	Copying	*ENG	[0 to 3 / <b>3</b> / 1/step]	
4-429-001 Switches unjust copy output pattern density for copy. As deeper.		y for copy. As the value enlarges, gets		
Scanning *ENG [0 to 3 / 3 / 1/step]  4-429-002 Switches unjust copy output pattern density for scan. As the value end deeper.		*ENG	[0 to 3 / <b>3</b> / 1/step]	
		y for scan. As the value enlarges, gets		
	Fax Operation	*ENG	[0 to 3 / <b>3</b> / 1/step]	
4-429-003	Switches unjust copy output pattern density for fax. As the value enlarges, gets deeper.			

4600	[SBU Version Display] DFU
4600	For design use. Do not change.

4-600-001	SBU ID	ENG	[0x00 to 0xFF / <b>0</b> / 1/step]
4-600-002	SCAT ID	ENG	[0x00 to 0xFF / <b>0</b> / 1/step]

4609	[Gray Balance Set: R]				
	Book Scan	*ENG	[-384 to 255 / <b>-100</b> / 1 digit/step]		
4-609-001	Displays/Saves gray balance adjustment value (RED) of scanners face side (Book).  Adjusted value by the factory adjustment is saved.  • Value increase: Increases red.  • Value decrease: Increases red.				
	DF Scan	*ENG	[-384 to 255 / <b>-100</b> / 1 digit/step]		
Displays/Saves gray balance adjustment value (RED) of scanners face side Adjusted value by the factory adjustment is saved.  • Value increase: Increases red.  • Value decrease: Increases red.  • Value decrease: Increases red.  • Gray balance adjustment value of DF scan can be corrected with SP4-688-001/002: DF density adjust. (These SPs can adjust the den difference correction between Book scanning and DF face side scann			s saved.  F scan can be corrected with st. (These SPs can adjust the density		

4610	[Gray Balance Set: G]			
	Book Scan	*ENG	[-384 to 255 / <b>-100</b> / 1 digit/step]	
4-610-001	Displays/Saves gray balance adjustment value (GREEN) of scanners face side (Book).			
	Adjusted value by the factory adjustment is saved.			
	Value increase: Increases green.			
Value decrease: Increases green.				

DF Scan \*ENG [-384 to 255 / -100 / 1 digit/step]

Displays/Saves gray balance adjustment value (GREEN) of scanners face side (ADF).

Adjusted value by the factory adjustment is saved.

• Value increase: Increases green.

• Value decrease: Increases green.

Gray balance adjustment value of DF scan can be corrected with

SP4-688-001/002: DF density adjust. (These SPs can adjust the density difference correction between Book scanning and DF face side scanning.)

4611 [Gray Balance Set: B] Book Scan \*FNG [-384 to 255 / -100 / 1 digit/step] Displays/Saves gray balance adjustment value (BLUE) of scanners face side (Book). 4-611-001 Adjusted value by the factory adjustment is saved. • Value increase: Increases blue. • Value decrease: Increases blue. \*FNG [-384 to 255 / -100 / 1 digit/step] DF Scan Displays/Saves gray balance adjustment value (BLUE) of scanners face side (ADF). Adjusted value by the factory adjustment is saved. • Value increase: Increases blue. 4-611-002 • Value decrease: Increases blue. **U** Note · Gray balance adjustment value of DF scan can be corrected with SP4-688-001/002: DF density adjust. (These SPs can adjust the density difference correction between Book scanning and DF face side scanning.)

# 4635 [SSCG Correction Set]

[0 to 3 / 1 / 1/step] 0: Do not noise correct SSCG. Mode Selection \*ENG 1: Only adjust analog (initial value) 2: Only adjust digital 3: Adjust both analog/digital

Selects SSCG noise correction mode.

### 4-635-001

Use one of these modes as a temporal correspondence when SSCG does not work correctly due to an unexpected malfunction.

Temporarily changing settings may improve slant stripes, horizontal stripes caused by scanner when SSCG correction does not work correctly.



 SSCG correction is a control technology to correct the image quality deterioration as a side effect of SSCG (Safety Standard Control Technology) to reduce electromagnetic radiation noise.

# [Scan Adjust Error] 4646 Displays error value of scanning adjustment.

	White level	*ENG	[0 to 65535 / <b>0</b> / 1/step]		
	Shows cause of error when an error occurs during the white level adjustment when scanner turns on. When an error, SC142-00 (F side/white level adjustment error) will be given.				
	Bit15:Unused, Bit14: Unused				
	Bit 13:White level abnormal (I	F side/RED/	EVEN pixel)		
	Bit 12: White level abnormal (	F side /RED	/ODD pixel)		
	Bit11: White level abnormal (F side / GREEN/EVEN pixel)				
	Bit10: White level abnormal (F side / GREEN/ODD pixel)				
	Bit9: White level abnormal (F side /BLUE/EVEN pixel)				
4-646-001	Bit8:White level abnormal (F	side /BLUE/	ODD pixel)		
	Bit7: Unused, Bit6: Unused				
	Bit5:gain abnormal (F side /RED/EVEN pixel)				
	Bit4: gain abnormal (F side /RED/ODD pixel)				
	Bit3: gain abnormal (F side /GREEN/EVEN pixel)				
	Bit2: gain abnormal (F side /	GREEN/OD	D pixel)		
	Bit1: gain abnormal (F side /	BLUE/EVEN	pixel)		
	Bit0: gain abnormal (F side /	BLUE/ODD	pixel)		
	[format] binary				
	Scan adjust error (F side/Wh	ite level) flag	<del>j=</del>		
	(b15,b14,b13,b12,b11,b10	),b9,b8,b7,l	o6,b5,b4,b3,b2,b1,b0)		

	Black level	*ENG	[0 to 65535 / <b>0</b> / 1/step]		
	Shows cause of error when an error occurs With the Black level check when scanner turns on. When an error, SC141-00 (F side/Black level adjustment error) will be given.				
	Bit7: Unused, Bit6: Unused				
	Bit5: Black level abnormal (F	side/RED/E	VEN Pixel)		
4-646-002	Bit4: Black level abnormal (F	side /RED/0	ODD Pixel)		
	Bit3: Black level abnormal (F	side /GREE1	N/EVEN Pixel)		
	Bit2: Black level abnormal (F	side /GREE1	N/ODD Pixel)		
	Bit1: Black level abnormal (F	side /BLUE/	EVEN Pixel)		
	BitO: Black level abnormal (F side /BLUE/ODD Pixel)				
	[format] binary				
	Scan adjust error (F side/Bla	ck level) flag	=(b7,b6,b5,b4,b3,b2,b1,b0)		
	SSCG Correction	*ENG	[0 to 65535 / <b>0</b> / 1/step]		
	Shows cause of error when an error occurs With the SSCG Noise correction when scanner turns on. When an error, Correction turns off.				
	Bit7: Unused, Bit6: Unused				
	Bit5: SSCG correction error (Fside/RED/EVEN Pixel)				
4-646-003	Bit4: SSCG correction error (Fside/RED/ODD Pixel)				
4-040-003	Bit3: SSCG correction error (Fside/GREEN/EVEN Pixel)				
	Bit2: SSCG correction error (Fside/GREEN/ODD Pixel)				
	Bit1: SSCG correction error (Fside/BLUE/EVEN Pixel)				
	Bit0: SSCG correction error (	Fside/BLUE/	ODD Pixel)		
	[format] binary				
Scan adjust error (F side/SSCG correction) flag= (b7,b6,b5,b4,b3,b2,b1,			n) flag= (b7,b6,b5,b4,b3,b2,b1,b0)		

4647	[Scanner Hard Error]	
404/	Displays result of SBU connection check.	

	Power-ON	ENG	[0 to 65535 / <b>0</b> / 1/step]	
	Shows cause of error when an error occurs with the SBU connection detect when Scanner turns on. When an error, SC144-00 (SBU Communication error) will be given.			
	Bit 15: Unused			
	Bit14:SBU hardware error (Pa	ower ON/ur	n-reset error)	
	Bit13:SBU hardware error (Se	erial commur	ication error: F side)	
	Bit12:SBU hardware error (Reset error: F side)			
4-647-001	Bit11: Unused, Bit10: Unused			
	Bit9:SBU hardware error (Version error)			
	Bit8: Unused, Bit7: Unused, Bit6: Unused			
	Bit5:SBU hardware error (Serial communication error: L side)			
	Bit4:SBU hardware error (Reset error:Lside)			
	Bit3: Unused, Bit2: Unused, Bit1: Unused			
	[format] binary			
	Scan adjust error (SSCG correction) flag= (b15,b14,b13,b12,b11,b10,b9,b8,b7,b6,b5,b4,b3,b2,b1,b0)			

4688	[DF Density Adjustment]			
	ARDF	*ENG	[80 to 120 / <b>102</b> / 1 %/step]	
4-688-001	For the ARDF only. Adjusts density difference between Book and ADF.  • Value increase: ADF density deeper.  • Value decrease: ADF density thinner.			
4688	[Scan Image Density Adjustment]			
4 400 000	1-pass DF *ENG [80 to 120 / <b>103</b> / 1 %/step			
4-688-002	For the SPDF only. Adjusts density difference between Book and ADF.			

4699	[SBU Test Pattern Change] DFU			
4-699-001	-	ENG	[0 to 255 / <b>0</b> / 1/step]	

4700	[CIS ID Display]
------	------------------

	-	ENG	[0x00 to 0xFF / <b>0</b> / 1/step]	
4-700-001	When CIS's ID is not normal, an error flag is set to SP4-747-001 and the machine issues SC185-00.			

SP 4712 to 4714 RTB 12a

4745	[CIS Image Level Error Flag]	DFU		
4743	For design use. Do not change.			
4-745-001	-	ENG	[0 to 65535 / <b>0</b> / 1/step]	

4746		[CIS GB Adj Error Flag] DFU		
	4/40	For design use. Do not change		
	4-746-001	CIS GB Adj Error Flag	ENG	[0 to 7 / <b>0</b> / 1/step]

4747	[CIS Hard Error Flag] DFU		
For design use. Do not change.			
4-747-001	CIS Hard Error Flag ENG [0 to 7 / 0 / 1/step]		[0 to 7 / <b>0</b> / 1/step]

	4797	[Rear Side: Digital AE]		
		Background Erase Level	*ENG	[512 to 1535 / <b>932</b> / 1/step]
Sets background level to decide output value for background erase who the rear side (2nd side) of an original in DF scanning mode.				
		When scanning a darker original in DF scanning mode, the background of the original may appear on the copy. In such a case, increase this value to make the background disappear.		

4798	[CIS LED Duty] DFU			
4/98	For design use. Do not change.			
4-798-001	1 CIS LED Duty *ENG [0 to 65535 / 0 / 1/step]		[0 to 65535 / <b>0</b> / 1/step]	

4799	[CIS TEST Pattern] DFU
4/99	For design use. Do not change.

4-799-001	Select	ENG	[0 to 5 / 0 / 1/step] 0: Normal Scan 1: Fix Value Output 2: EO Fix Value Output 3: Main Scan Gradation 4: Sub Scan Gradation 5: Grid Pattern
4-799-002	Even Output Level Setting	ENG	[0 to 4095 / <b>0</b> / 1 digit/step]
4-799-003	Odd Output Level Setting	ENG	[0 to 4095 / <b>0</b> / 1 digit/step]

4860	[Scan Size Detect:Setting]			
	Shading Data	*ENG	[ 512 to 1023 / <b>800</b> / 1 digit/step]	
Displays shading date for original size detection with CCD at the first s main power switch "on".				
	Every scan job renews the value of shading data.			

4903	[Filter Setting]			
	Ind Dot Erase: Text	*ENG	[ 0 to 7 / <b>0</b> / 1/step]	
Sets the threshold value for independent dot erase using Copier "Text" mode.  4-903-001  The "0" setting disables independent dot erase.  A higher setting detects more spurious dots for erasing. However, this could cause dots to erase in images that contain areas filled by dithering.				
4-903-002	Ind Dot Erase: Generation Copy	*ENG	[ 0 to 7 / <b>0</b> / 1/step]	
	Sets the threshold value for independent dot erase using Copier "Generation Copy" mode.			
	The "O" setting disables independent dot erase.			
			s dots for erasing. However, this could ntain areas filled by dithering.	

4939	[ACS:Color Range]
------	-------------------

	-	*ENG	[-2 to 2 / <b>0</b> / 1/step]
4-939-001	Adjust the tone (color gamut) for determining whether the original is full color or black and white in 5 adjustment levels. (-2 to +2. As the default, it is set to 0.)		
		•	nine to determine the original more as prompts the machine to determine the

4994	[Adj Txt/Photo Recog Level]		
4-994-001	High Compression PDF	ENG	[0 to 2 / 1 / 1/step]
	Adjusts the guide for recognizing the text area or image area.		
	0: Prior to text recognition , 1	: Basic, 2: Pri	ior to image recognition

4996	[White Paper Detection Level]		
4-996-001	-	ENG	[0 to 6 / <b>3</b> / 1/step]
	Selects the threshold level of the original background density. Increasing this threshold level machine easily judge that an original is white.		
	For example, increasing this value allows the machine to determine the colored background of originals scanned as a white background.		

# SP Mode Tables - SP5000-1

# SP5-XXX (Mode)

	[Add Display Language]			
	Adds language available in user choice. (Only the languages registered in the machine)			
	Refer to the displayed langu	Refer to the displayed language list to set in the way showed below.		
	List Number Assigned Bit Sw	itch		
	No.1 to 8: BIT1 to 8 (SP500	9-201)		
5009	No.9 to 16: BIT1 to 8 (SP50	09-202)		
	No.17 to 24: BIT1 to 8 (SP5	009-203)		
	No.25 to 32: BIT1 to 8 (SP5009-204)			
	Example: To add American (No.3 in the list) or Czech (No.15)			
	Turn Bit 3 of "SP5009-201" 0 to 1 for American.			
	Turn Bit 7 of "SP5009-202" 0 to 1 for Czech.			
	After setting, turn the main po	ower switch	n off and on to make the setting valid.	
5-009-201	1-8	*CTL	[1 to 255 / <b>0</b> / 1/step]	
5-009-202	9-16	9-16 *CTL [1 to 255 / <b>0</b> / 1/step]		
5-009-203	17-24	*CTL	[1 to 255 / <b>0</b> / 1/step]	
5-009-204	25-32	*CTL	[1 to 255 / <b>0</b> / 1/step]	

5024	[mm/inch Display Selection]		
	Display units (mm or inch) for custom paper sizes.		
5-024-001	0:mm 1:inch	*CTL	[0 or 1 / 1 (USA), 0 (Europe/Asia) / 1/ step] 0: mm
			1: inch

	[Accounting counter]		
Selects the counting method.  Note  Do not change the counter method except contract reason.		except contract reason.	
5-045-001	Counter Method	*CTL	[0 or 1 / <b>0</b> / step] 0: 1 count 1: 2 counts

5047	[Paper Display]		
	Turns on or off the printed paper display on the LCD.		
5-047-001	Backing Paper	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: OFF
			1: ON

5055	[Display IP Address]		
3033	Display or does not display the IP address on the operation panel.		ess on the operation panel.
		4	[0 or 1 / 0 / 1/step]
5-055-001	-	*CTL	0: OFF
			1: ON

5041	[Toner Remaining Icon Display Change]		
Display or does not display the remaining toner display icon on the LCD.		ng toner display icon on the LCD.	
5-061-001	-	*CTL	[0 or 1 / 0 / 1/step] 0: No display 1: Display

5062	[Parts Replacement Alert Display]
5062	Display or does not display the PM part yield on the LCD.

5-062-002	#PCU	*CTL	[0 or 1 / <b>0</b> / 1/step]  0: No display  1: Display
5-062-009	Cleaning Blade	*CTL	[0 or 1 / <b>0</b> / 1/step]  0: No display  1: Display
5-062-018	Charge Roller	*CTL	[0 or 1 / <b>0</b> / 1/step]  0: No display  1: Display
5-062-019	Cleaner: Charge Roller	*CTL	[0 or 1 / <b>0</b> / 1/step]  0: No display  1: Display
5-062-021	OPC	*CTL	[0 or 1 / <b>0</b> / 1/step]  0: No display  1: Display
5-062-022	Stripper	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: No display 1: Display
5-062-023	#Dev Unit	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: No display 1: Display
5-062-024	Developer	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: No display 1: Display
5-062-025	Development Filter	*CTL	[0 or 1 / <b>0</b> / 1/step]  0: No display  1: Display
5-062-028	Bearing: Development Screw	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: No display 1: Display

5-062-108	Paper Transfer Roller Unit	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: No display 1: Display
5-062-115	Fusing Unit	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: No display 1: Display
5-062-116	Fusing Belt	*CTL	[0 or 1 / <b>0</b> / 1/step]  0: No display  1: Display
5-062-118	Pressure Roller	*CTL	[0 or 1 / <b>0</b> / 1/step]  0: No display  1: Display
5-062-119	Bearing: Pressure Roller	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: No display 1: Display
5-062-206	ADF Pick-up Roller	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: No display 1: Display
5-062-207	ADF Paper Supply Belt	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: No display 1: Display
5-062-208	ADF Reverse Roller	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: No display 1: Display

5066	[PM Parts Display]		
3000	Display or does not display	the "PM pc	ırts" button on the LCD.
5-066-001	-	*CTL	[0 or 1 / <b>0</b> / 1/step]  0: No display  1: Display

	[Part Replacement Operation	on Type]	
5067	Selects the service maintend service is selected, PM alert		r maintenance for each PM parts. If the user ed on the LCD
5-067-002	#PCU	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Service 1: User
5-067-009	Cleaning Blade	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Service 1: User
5-067-018	Charge Roller	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Service 1: User
5-067-019	Cleaner: Charge Roller	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Service 1: User
5-067-021	OPC	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Service 1: User
5-067-022	Stripper	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Service 1: User
5-067-023	#Dev Unit	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Service 1: User
5-067-024	Developer	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Service 1: User
5-067-025	Development Filter	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Service 1: User

5-067-028	Bearing: Development Screw	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Service 1: User
5-067-108	Paper Transfer Roller Unit	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Service 1: User
5-067-115	Fusing Unit	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Service 1: User
5-067-116	Fusing Belt	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Service 1: User
5-067-118	Pressure Roller	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Service 1: User
5-067-119	Bearing: Pressure Roller	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Service 1: User
5-067-206	ADF Pick-up Roller	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Service 1: User
5-067-207	ADF Paper Supply Belt	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Service 1: User
5-067-208	ADF Reverse Roller	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Service 1: User

	[Set Bypass Paper Size Display]		
5071	Turn on or off the paper size confirmation pop-up on the LED. This pop-up prevents mismatching between a paper size selected by the operation panel and an actual paper size on the by-pass tray.		
5-071-001	-	CTL	[0 or 1 / <b>0</b> / 1/step] 0: Off 1: On

5074	[Home Key Customization]		
30/4	Sets applications that appea	ır on the op	peration panel when "home key" is pressed.
5-074-002	Login Setting	*CTL	[0 to 0xFF / 00000000 / 1/step] Bit0: Sets login operation mode for panel display. 0: Displayed 1: Not display Bit1 to bit7: Not used
5-074-050	Show Home Edit Menu	CTL	[0 to 2 / 0 / 1/step] 0: Auto 1: Displayed 2: Not displayed
5-074-091	Function Setting	*CTL	[0 to 2 / 0 / 1/step] 0: Function disable 1: SDK application 2: Browser application
5-074-092	Product ID	*CTL	[0 to 0xFFFF FFFF/ 0 / 1/step] Sets the application product ID.
5-074-093	Application Screen ID	*CTL	[0 to 255 / <b>0</b> / 1/step] Sets the display category of the extended application.

5081	[ServiceSP Entry Code Settin	g] DFU	
3061	-		
5-081-001	ServiceSP Entry Code Setting	*CTL	-

5000	[LED Light Switch Setting]		
5083	Turns LED lighting ON and C	OFF at Toner Near End or Waste Toner Near End.	
5-083-001	Toner Near End	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: OFF 1: ON
5-083-002	Waste Toner Near End	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: OFF 1: ON

£101	[Timer Set]		
5101	Enables or disables the low p	power mode.	
			[0 or 1 / <b>0</b> / 1/step]
5-101-104	Low Power Set	*CTL	0: Disable
			1: Enable

5113	[Optional Counter Type]
5113	Sets the counter device number for the optional unit or external unit.

5-113-001	Default Optional Counter Type	*CTL	[0 to 12 / 0 / 1/step]  0: None,  1: Key Card(RK3,4)  2: Key Card(down),  3: PrepaidCard  4: Coin Rack  5: MFKeyCard  11: Exp.KeyCard(Add)  12: Exp.KeyCard(Deduct)  This program specifies the counter type.
5-113-002	External Optional Counter Type	*CTL	[0 to 3 / 0 / 1/step]  0: None  1: Expansion Device 1  1: Expansion Device 2  1: Expansion Device 3  This program specifies the external counter type.

5114	[Optional Counter I/F]		
Sets this SP for connecting to an optional counter which uses MF key ca		al counter which uses MF key card I/F.	
5-114-001	MF Key Card Extension	*CTL	[0 or 1 / 0 / 1/step] 0: Not installed 1: Installed (scanning accounting)

5118	[Disable Copying]		
3116	This program disables copying.		
			[0 or 1 / <b>0</b> / 1/step]
5-118-001	-	*CTL	0: Not disabled
			1: Disabled

	[Mode Clear Opt. Counter Removal]		
5120	This program updates the information on the optional counter. When you install or remove an optional counter, check the settings.		
5-120-001	-	*CTL	[0 to 2 / 0 / 1/step] 0: Yes (removed) 1: Standby (installed but not used) 2: No (not removed)

	[Counter Up Timing]		
5121	This program specifies when the counter goes up. The settings refer to "paper feed" and "paper exit" respectively.		r goes up. The settings refer to "paper feed"
5-121-001	0:Feed 1:Exit	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Feed
			1: Exit

5126	[Set F-size Document]		
3126	Selects the paper size for the F-size original.		
5-126-001	-	ENG	[0 to 2 / <b>0</b> / 1/step] 0: 8 1/2 x 13 1: 8 1/4 x 13 2: 8 x 13

5127	[APS OFF Mode]		
3127	This program disables the APS.		
5-127-001	-	*CTL	[0 or 1 / 0 / 1/step] 0: Not disabled 1: Disabled

5131	[Paper Size Type Selection]
5131	The region setting of SP5-181-xxx (Size Adjust) is all specified by using this SP.

5-131-001	-	*ENG	[0 to 2 / @ / 1/step] "@" depens on the destination area.  0: JP (Japan)  1: NA  2: EU
-----------	---	------	--

5150	[Bypass Length Setting]			
	Normally the paper length for sub scanning paper from the by-pass tray is limited to 600 mm, but this can be extended with this SP to 1260 mm.			
0.00	Image quality is not assured for the length over 600mm.			
	When printing/feeding over 600mm length paper, customization request is required for a customized printer driver.			
			[0 or 1 / <b>0</b> / 1/step]	
5-150-001	0: OFF 1: ON	CTL	0: OFF	
	1: ON			

	[App. Switch Method]		
5162	Determines whether the application screen is switched with a hardware switch software switch.		een is switched with a hardware switch or
			[0 or 1 / <b>0</b> / 1/step] 0: Soft Key Set
5-162-001	-	*CTL	0: Soft Key Set
			1: Hard Key Set

	[Fax Printing Mode at Optional Counter Off]		
5167	Enables or disables the automatic print out without an accounting device. This SF used when the receiving fax is accounted by an external accounting device.		9
5-167-001	-	*CTL	[0 or 1 / 0 / 1/step] 0: Automatic printing 1: No automatic printing

5169	[CE Login]
3109	Continues login status by service after SP mode end.

5-169-001	CE Login	*CTL	[0 or 1 / <b>0</b> / 1/step]  0: Disabled
			1: Enabled

5181	[Size Adjust]				
5-181-001	TRAY 1: 1	*ENG	[0 to 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step] 0: A4 LEF 1: 8 1/2x11 LEF		
	Sets tray 1 detection size (A4 LEF or LT LEF) when "Auto Detect" is seletected in the [Tray Paper Settings].				
5-181-002	TRAY 1: 2	*ENG	[0 or 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step] 0: A3 1: 11x17		
	Sets tray 1 detection size (A3 or DLT) when "Auto Detect" is seletected in the [Tray Paper Settings].				
5-181-003	TRAY 1: 3	*ENG	[0 or 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step] 0: B4 1: 8 1/2x14 SEF		
	Sets tray 1 detection size (B4 or GL SEF) when "Auto Detect" is seletected in the [Tray Paper Settings].				
5-181-004	TRAY 1: 4	*ENG	[0 or 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step] 0: B5 LEF 1: 7 1/4x10 1/2 LEF		
	Sets tray 1 detection size (B5 LEF or Exe LEF) when "Auto Detect" is seletected in the [Tray Paper Settings].				

5-181-005 5-181-006	TRAY 2: 1	*ENG	[0 or 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step] 0: A4 LEF 1: 8 1/2x11 LEF		
	Sets tray 2 detection size (A4 LEF or TL LEF) when "Auto Detect" is seletected in the [Tray Paper Settings].				
	TRAY 2: 2	*ENG	[0 or 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step] 0: A3 1: 11x17		
	Sets tray 2 detection size (A3 or DLT) when "Auto Detect" is seletected in the [Tray Paper Settings].				
	TRAY 2: 3	*ENG	[0 or 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step] 0: B4 1: 8 1/2x14 SEF		
	Sets tray 2 detection size (B4 or GL SEF) when "Auto Detect" is seletected in the [Tray Paper Settings].				
5-181-008	TRAY 2: 4	*ENG	[0 or 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step] 0: B5 LEF 1: 7 1/4x10 1/2 LEF		
	Sets tray 2 detection size (B5 LEF or Exe LEF) when "Auto Detect" is seletected in the [Tray Paper Settings].				
5-181-009	TRAY 3/T-LCT: 1	*ENG	[0 or 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step] 0: A4 LEF 1: LT LEF		
	Sets tray 3 (LCT) detection size (A4 LEF or LT LEF) when "Auto Detect" is seletected in the [Tray Paper Settings].				

5-181-010	TRAY 3: 2	*ENG	[0 or 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step] 0: A3 1: DLT when "Auto Detect" is seletected in the [Tray		
	Paper Settings].	3 OI DLIJ V	when Auto Delect is selelected in the [11dy		
	TRAY 3: 3	*ENG	[0 or 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step]		
5-181-011	110 (1 0. 0		O: B4		
3-101-011			1: LG		
	Sets tray 3 detection size (B. Paper Settings].	4 or LG) w	hen "Auto Detect" is seletected in the [Tray		
	TRAY 3: 4	*ENG	[0 or 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step]		
5-181-012			0: B5 LEF 1: Exe LEF		
			I: EXE LEF		
	Sets tray 3 detection size (B5 LEF or Exe LEF) when "Auto Detect" is seletected in the [Tray Paper Settings].				
	TRAY 3: 5	*ENG	[0 or 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step]		
			0: 12.6x17.7		
5-181-013			1: 12x18		
	Sets tray 3 detection size (12.6x17.7 or 12x18) when "Auto Detect" is seletected in the [Tray Paper Settings].				
5-181-014	TRAY 4: 1		[0 or 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step]		
		*ENG	O: A4 LEF		
			1: LT LEF		
	Sets tray 4 detection size (A4 LEF or LT LEF) when "Auto Detect" is seletected in the [Tray Paper Settings].				

5-181-015	TRAY 4: 2	*ENG	[0 or 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step] 0: A3 1: DLT		
	Sets tray 4 detection size (A Paper Settings].	3 or DLT) w	hen "Auto Detect" is seletected in the [Tray		
5-181-016	TRAY 4: 3	*ENG	[0 or 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step] 0: B4 1: LG		
	Sets tray 4 detection size (Barager Settings].	4 or LG) wh	nen "Auto Detect" is seletected in the [Tray		
5-181-017	TRAY 4: 4	*ENG	[0 to 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step] 0: B5 LEF 1: Exe LEF		
	Sets tray 4 detection size (B5 LEF or Exe LEF) when "Auto Detect" is seletected in the [Tray Paper Settings].				
5-181-018	TRAY 4: 5	*ENG	[0 to 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step] 0: 12.6x17.7 1: 12x18		
	Sets tray 4 detection size (12.6x17.7 or 12x18) when "Auto Detect" is seletected in the [Tray Paper Settings].				
5-181-019	TRAY 5: 1	*ENG	[0 to 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step] 0: A4 LEF 1: LT LEF		
	Sets tray 5 detection size (A4 LEF or LT LEF) when "Auto Detect" is seletected in the [Tray Paper Settings].				

5-181-020	TRAY 5: 2	*ENG	[0 to 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1 / step] 0: A3 1: DLT then "Auto Detect" is seletected in the [Tray		
	Paper Settings].	o or DEI) w	Tieti Auto Delect is selelected in the [Tray		
	TRAY 5: 3	*ENG	[0 to 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step] 0: B4		
5-181-021			1: LG		
	Sets tray 5 detection size (B4 Paper Settings].	l or LG) wh	nen "Auto Detect" is seletected in the [Tray		
	TRAY 5: 4		[0 to 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step]		
5-181-022		*ENG	O: B5 LEF		
0 101 022			1: Exe LEF		
	Sets tray 5 detection size (B5 LEF or Exe LEF) when "Auto Detect" is seletected in the [Tray Paper Settings].				
	TRAY 5: 5	*ENG	[0 to 1 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step]		
5-181-023			0: 12.6X17.7		
3-101-023			1: 12X18		
	Sets tray 5 detection size (12.6x17.7 or 12x18) when "Auto Detect" is seletected in the [Tray Paper Settings].				
			[0 to 2 / 1 (NA), 0 (EU, AA, CHN, TWN, KOR) / 1/step]		
	LCT	*ENG	O: A4 LEF		
5-181-024			1: LT LEF		
			2: B5 LEF		
	Sets LCT detection size when "Auto Detect" is seletected in the [Tray Paper Settings].				

	[RK4]		
5186	Enables or disables the prevention for RK4 (accounting device) disconnection. If the RK4 is disconnected for 10 seconds when this SP is set to "1 (Enable)", the machine automatically jams a sheet of paper and stops.		
5-186-001	-	*ENG	[0 or 1 / <b>0</b> / 1/step]

5188	[Copy Nv Version]			
3100	Displays the version number of the NVRAM on the controller board.			
5-188-001	-	*CTL	[-/-/-]	

5191	[Mode Set]			
3191	Shifts to the power save mode or not.			
			[0 or 1 / <b>1</b> / 1/step]	
5-191-001	Power Str Set	*CTL	0: OFF	
			1: ON	

	[Limitless SW]			
	Selects the paper feed mode.			
	Productivity priority:			
5195	This changes the feeding tray as soon as the machine detects the priority tray even the paper still remains in the feeding tray.			
	Tray priority:			
	This changes the feeding tray after the paper in the tray where the machine has been feeding paper has been run out of.			
This SP is activated only when a customer selects the "Auto Paper Sele			er selects the "Auto Paper Select".	
[0 or 1 / <b>0</b> / 1/step]			[0 or 1 / <b>0</b> / 1/step]	
5-195-001	-	*CTL	O: Productivity Precede	
			1: Use paper up	

5199	[Paper Exit After Staple End]			
	Enables or disables the paper feeding out from the finisher without stapling.			
	If this setting is "1: ON", paper is fed out without stapling at the maximum number of the finisher stapling when the machine gets a multiple printing job (over maximum number).			
	<ul> <li>If this setting is "0: OFF", paper is fed out with stapling at the maximum number of the finisher stapling when the machine gets a multiple printing job (over maximum number).</li> </ul>			
5-199-001	0: OFF 1: ON	CTL	[ 0 or 1 / <b>0</b> / 1/step] 0: OFF	
3-199-001	O. OFF 1. ON	CIL	1: ON	

5212	[Page Numbering]			
	This program adjusts the position of the second side page numbers in the duplex mode with two in one.			
	• "- value" moves the pag	ge number p	ositions to the right edge or leading edge.	
	"+ value" moves the page number positions to the left edge or trailing edge.			
5-212-003	Duplex Printout Right/Left Position	*CTL	[-10 to 10 / 0.00 / 1 mm/step]  Specifies relative positions between the face page numbering position against the back page numbering position.	
5-212-004	Duplex Printout High/Low Position	*CTL	[-10 to 10 / 0.00 / 1 mm/step]  Specifies relative positions between the face page numbering position against the back page numbering position.	

5227	[Page Numbering]		
5-227-201	Allow Page No. Entry	*CTL	[2 to 9 / 9 / 1/step]  Specifies input available figure length of "Job serial numbers page print out starts number" that specified by optional text print out.

5-227-202	Zero Surplus Setting	*CTL	[0 or 1 / 0 / 1/step] 0:OFF 1:ON Specifies zero suppression of "Job serial numbers page print out starts number" that specified by optional text print out.
-----------	----------------------	------	---

	[Set Time]				
	Adjusts the RTC (real time clock) time setting for the local time zone.				
	Examples: For Japan (+9 GMT), enter 540 (9 hours x 60 min.)				
	DOM: +540 (Tokyo)				
5302	NA: -300 (New York)				
3302	EU: + 60 (Paris)				
	CHN: +480 (Beijing)				
	TWN: +480 (Taipei)				
	AA: +480 (Hong Kong)				
	KO: +540 (Korea)				
			[-1440 to 1440 / @ / 1 min./step]		
5-302-002	Time Difference	*CTL	"@" depends on the destination area."n the duplex mode with two in one		

5305	[Auto Off Set]		
3303	Turns on or off the limitation for the auto power off function.		
5-305-101	Auto Off Limit Set	*CTL	[0 to 1 / 0 / 1/step] 0: Limitation off 1: Limitation on

5307	[Daylight Saving Time]
------	------------------------

			[0 to 1 / 1 / 1/step]		
			0: Disabled		
			1: Enabled		
			(Default)		
			1: NA and EUR		
5-307-001	Setting	*CTL	0: ASIA and others		
	3		Enables or disables the summer time mode.		
			₩Note		
			<ul> <li>Make sure that both SP5-307-3 and         <ul> <li>4 are correctly set. Otherwise, this SP is not activated even if this SP is set to</li> <li>"1".</li> </ul> </li> </ul>		
	Rule Set (Start)		[0 to 0xfffffff / <b>Default</b> / 1hex/step]		
		*CTL	(Default)		
			NA: 0x11100200		
			EUR: 0x10500100		
			ASIA: 0x03100000		
			Other: 0x00000000		
	Specifies the start setting for the summer time mode.				
5-307-003	There are 8 digits in this SP. For months 1 to 9, the "0" cannot be input in the first digit, so the eight-digit setting for -2 or -3 becomes a seven-digit setting.				
	1st and 2nd digits: The month. [1 to 12]				
	3rd digit: The week of the month. [1 to 5]				
	4th digit: The day of the week. [0 to 6 = Sunday to Saturday]				
	5th and 6th digits: The hour. [00 to 23]				
	7th digit: The length of the ac	lvanced tim	e. [0 to 9 / 1 hour /step]		
	8th digit: The length of the ac	lvanced tim	e. [0 to 5 / 10 minutes /step]		
	The digits are counted fi	rom the left.			
	Make sure that SP5-302	7-1 is set to	"1".		

	Rule Set (End)	*CTL	[- / - / -] * See the detail below		
	Specifies the end setting for the summer time mode.				
	There are 8 digits in this SP.				
	1st and 2nd digits: The month. [1 to 12]				
5-307-004	3rd digit: The week of the month. [0 to 5]				
	4th digit: The day of the week. [0 to 7 = Sunday to Saturday]				
	5th and 6th digits: The hour. [00 to 23]				
	The 7th and 8 digits must be set to "00".				
	The digits are counted from the left.				
	Make sure that SP5-307-1 is set to "1".				

5401	[Access Control]		
			[0 to 3 / <b>0</b> / 1/step]
			0: Read Only
			1: Edit
			2: Edit/Delete
5-401-103	Default Document ACL	*CTL	3: Full control
			Whenever a new login user is added to the address book in external certification mode (for Windows, LDAP, RDH), the default document ACL is updated according to this SP setting.
5-401-104	Authentication Time	*CTL	[0 to 255 / 0 / 1 sec/step]  Specifies the timeout of the authentication.
5-401-162	Extend Certification Detail	*CTL	[0 to 0xFF / 00000000 / 1/step] Selects the log out type for the extend authentication device.

	Bit 0: Log-out without an IC card			
	0: Not allowed (default), 1: Allowed			
	Bit1: Log out with IC card			
	0: Not allowed (default), 1: Allowed			
	Bit2: Return from energy save mode with IC card			
	0: Not allowed (default), 1: Allowed			
	Bit3, Bit4: Password manual entry			
	00: Mode 0 (default),	01: Mode 1		
	10: Mode 2, 11: Mod	e 3		
	Bit5: PIN entry with alp	hanumeric d	haracter	
	0: Not allowed (defaul	t), 1: Allowe	ed	
	<ul> <li>Bit6: Restrict card scanning</li> <li>O: Not allowed (default), 1: Allowed</li> <li>Bit7: Panel lock when log out failured</li> </ul>			
	0: Not allowed (defaul	t), 1: Allowe	ed	
5-401-200	SDK1 UniqueID	*CTL	[0 to 0xFFFFFFFF / 0 / 1/step] "SDK" is the "Software Development Kit". This data can be converted from SAS (VAS) when installed or uninstalled.	
			[0 to 0xFF / <b>0</b> / 1 /step]	
5-401-201	SDK1 Certification Method	*CTL	"SDK" is the "Software Development Kit". This data can be converted from SAS (VAS) when installed or uninstalled.	
			[0 to 0xFFFFFFFF / 0 / 1/step]	
5-401-210	SDK2 UniqueID	*CTL	"SDK" is the "Software Development Kit". This data can be converted from SAS (VAS) when installed or uninstalled.	
5-401-211	SDK2 Certification Method	*CTL	[O to OxFF / O / 1/step]  "SDK" is the "Software Development Kit".  This data can be converted from SAS (VAS) when installed or uninstalled.	

5-401-220	SDK3 UniqueID  SDK3 Certification Method	*CTL	[O to OxFFFFFFFF / O / 1/step] "SDK" is the "Software Development Kit". This data can be converted from SAS (VAS) when installed or uninstalled.  [O to OxFF / O / 1/step] "SDK" is the "Software Development Kit". This data can be converted from SAS (VAS)
5-401-230	SDK Certification Device	*CTL	when installed or uninstalled.  [- / 00000000 / 1 /-]
	<ul> <li>BitO: SDK authentication</li> <li>O: Disable, 1: Enable</li> <li>Bit1: SKB Display</li> <li>O: Disable, 1: Enable</li> <li>Bit2: Administrator login</li> <li>O: Disable, 1: Enable</li> <li>Bit3 to Bit7: Reserved (set "O" only)</li> </ul>		
5-401-240	Detail Option	*CTL	[0 to 0xFF / 00000000 / 1/step]
	<ul> <li>Bit0: Logout confirm option  0: OFF, 1: ON</li> <li>Bit1, Bit2: Auto-logout timer (retry timer)  00: 60sec, 01: 10sec, 10: 20sec, 11: 30sec,</li> <li>Bit3: Personal authority / Group authority and operation  0: OFF, 1: ON</li> <li>Bit4: Skip password entry  0: OFF, 1: ON</li> <li>Bit5: Set the display of the remaining Frequence  0: OFF, 1: ON,</li> <li>Bit6, Bit7: Set the display time  00: 3sec, 01: 6sec, 10: 9sec, 11: 12sec</li> </ul>		

5402	[Access Control]
------	------------------

5-402-101 to 5-402-130	SDKJ1 Limit Setting - SDKJ30 Limit Setting	*CTL	[0 to 0xFF / 00000000 / 1/step]
	<ul> <li>Bit0: SDKJ Authentication</li> <li>0: Panel Type, 1: Remone</li> <li>Bit1: Using user code sets</li> <li>0: OFF, 1: ON</li> <li>Bit2: Using key-counter</li> <li>0: OFF, 1: ON</li> <li>Bit3: Using external billing</li> <li>0: OFF, 1: ON</li> <li>Bit4: Using extended external or OFF, 1: ON</li> <li>Bit5, Bit6: Not used</li> <li>Bit7: Using extended function</li> <li>0: OFF, 1: ON</li> </ul>	te Type etup setup ing device se sternal billing	device setup
5-402-141 to 5-402-170	SDKJ1 ProductID - SDKJ30 ProductID	*CTL	[O to OxFFFFFFFF / O / 1/step]

5404	[User Code Count Clear] Clears all counters for users.		
5-404-004	-	*CTL	[Execute]

5411	[LDAP-Certification]			
	Sets description of LDAP certification.			
5-411-004	Simplified Authentication	*CTL	[0 or 1 / <b>1</b> / 1/step]	
			0: OFF	
			1: ON	

5-411-005	Password Null Not Permit	*CTL	[0 or 1 / 1 / 1/step]  0: Password NULL permitted.  1: Password NULL not permitted.  This SP is referenced only when SP5411-4 is set to "1" (On).
5-411-006	Detail Option	*CTL	[0 or 1 / 00000000 / 1/step] 0: Anonymous authentication OFF 1: Anonymous authentication ON

5412	[Krb-Certification]		
5-412-100	Encrypt Mode	*CTL	[-/11111111/1/step]  0x01:AES256-CTS-HMAC-SHA1-96  0x02:AES128-CTS-HMAC-SHA1-96  0x04:DES3-CBC-SHA1  0x08:RC4-HMAC  0x10:DES-CBC-MD5  0xFF(0x1F):ALL  Executes kerberos certification according to certified encryption strength.

5413	[Lockout Setting] Switches on/off the lock on the local address book account.		
5-413-001	Lockout On/Off	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: OFF 1: ON
5-413-002	Lockout Threshold	*CTL	[1 to 10 / 5 / 1 time/step]
5-413-003	Cancelation On/Off	*CTL	[0 or 1 / <b>0</b> / 1/step] 0:OFF, 1:ON
5-413-004	Cancelation Time	*CTL	[1 to 9999 / 60 / 1 minute/step] Sets release time of lockout release function.

5414	[Access Mitigation]		
5-414-001	Mitigation On/Off	*CTL	[0 or 1 / 0 / 1/step] 0: OFF, 1: ON Switches on/off masking of continuously used IDs and passwords that are identical.
5-414-002	Mitigation Time	*CTL	[0 to 60 / 15 / 1 minute/step]  Sets the length of time for excluding continuous access for identical user IDs and passwords.

5415	[Password Attack]		
5-415-001	Permissible Number	*CTL	[0 to 100 / 30 / 1 time/step]  Sets the number of attempts to attack the system with random passwords to gain illegal access to the system.
5-415-002	Detect Time	*CTL	[0 to 10 / 5 / 1 second/step]  Sets the time limit to stop a password attack once such an attack has been detected.

5416	[Access Information]		
5-416-001	Access User Max Num	*CTL	[50 to 200 / 200 / 1/step] Limits the number of users used by the access exclusion and password attack detection functions.
5-416-002	Access Password Max Num	*CTL	[50 to 200 / 200 / 1/step] Limits the number of passwords used by the access exclusion and password attack detection functions.

5-416-003 Mo	onitor Interval	*CTL	[1 to 10 / 3 / 1 second/step]  Sets the processing time interval for referencing user ID and password information.
--------------	-----------------	------	--

5417	[Access Attack]		
5-417-001	Access Permissible Number	*CTL	[0 to 500 / 100 / 1time/step] Sets a limit on access attempts when an excessive number of attempts are detected for MFP features.
5-417-002	Attack Detect Time	*CTL	[10 to 30 / 10 / 1 second/step] Sets the length of time for monitoring the frequency of access to MFP features.
5-417-003	Productivity Fall Waite	*CTL	[0 to 9 / 3 / 1 second/step]  Sets the wait time to slow down the speed of certification when an excessive number of access attempts have been detected.
5-417-004	Attack Max Num	*CTL	[50 to 200 / 200 / 1/step] Sets a limit on the number of requests received for certification in order to slow down the certification speed when an excessive number of access attempts have been detected.

5420	[User Authentication]  These functions are enabled only after the user access feature has been enable			
5-420-001	Copy  *CTL  [0 or 1 / 0 / 1/step] 0: Authentication ON 1: Authentication OFF			
5-420-011	DocumentServer	*CTL	[0 or 1 / 0 / 1/step] 0: Authentication ON 1: Authentication OFF	

5-420-021	Fax	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Authentication ON 1: Authentication OFF
5-420-031	Scanner	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Authentication ON 1: Authentication OFF
5-420-041	Printer	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Authentication ON 1: Authentication OFF
5-420-051	SDK1	*CTL	[0 or 1 / <b>0</b> / 1/step]
5-420-061	SDK2	*CTL	0: Authentication ON
5-420-071	SDK3	*CTL	1: Authentication OFF
5-420-081	Browser	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Authentication ON 1: Authentication OFF

5430	[Auth Dialog Message Change]		
5-430-001	Message Change On/Off	*CTL	[0 or 1 / 0 / 1/step] 0: Function OFF 1: Function ON Turns on or off the displayed message change for the authentication.
5-430-002	Message Text Download	CTL	[Execute] Executes the message download for the authentication.
5-430-003	Message Text ID	CTL	[Char:Up to 16 bytes / - / -] Inputs message text for the authentication.

5431	[External Auth User Preset]	
J43 I	Turns on or off the copy permission for the external authentication.	

5-431-010	Tag	*CTL	[0 or 1 / 1 / 1/step] 0: Not permit, 1: Permit
5-431-011	Entry	*CTL	[0 or 1 / 1 / 1/step] 0: Not permit, 1: Permit
5-431-012	Group	*CTL	[0 or 1 / 1 / 1/step] 0: Not permit, 1: Permit
5-431-020	Mail	*CTL	[0 or 1 / 1 / 1/step] 0: Not permit, 1: Permit
5-431-030	FAX	*CTL	[0 or 1 / 1 / 1/step] 0: Not permit, 1: Permit
5-431-031	FAXSub	*CTL	[0 or 1 / 1 / 1/step] 0: Not permit, 1: Permit
5-431-032	Folder	*CTL	[0 or 1 / 1 / 1/step] 0: Not permit, 1: Permit
5-431-033	ProtectCode	*CTL	[0 or 1 / 1 / 1/step] 0: Not permit, 1: Permit
5-431-034	SmtpAuth	*CTL	[0 or 1 / 1 / 1/step] 0: Not permit, 1: Permit
5-431-035	LdapAuth	*CTL	[0 or 1 / 1 / 1/step] 0: Not permit, 1: Permit
5-431-036	Smb Ftp Fldr Auth	*CTL	[0 or 1 / 1 / 1/step] 0: Not permit, 1: Permit
5-431-037	AcntAcl	*CTL	[0 or 1 / 1 / 1/step] 0: Not permit, 1: Permit
5-431-038	DocumentAcl	*CTL	[0 or 1 / 1 / 1/step] 0: Not permit, 1: Permit
5-431-040	CertCrypt	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Not permit, 1: Permit

5-431-050	UserLimitCount	*CTL	[0 or 1 / 1 / 1/step] 0: Not permit, 1: Permit
-----------	----------------	------	--

5481	[Authentication Error Code]  These SP codes determine how the authentication failures are displayed.		
5-481-001	System Log Disp	*CTL	[0 or 1 / <b>0</b> / 1/step]  0: Display OFF  1: Display ON
5-481-002	Panel Disp	*CTL	[0 or 1 / 1 / 1/step] 0: Display OFF 1: Display ON

5490	[MF KeyCard] Sets up operation of the machine with a keycard (Japan only).		
5-490-001	Job Permit Setting	*CTL	[0 or 1 / 0 / 1/step]  0: Disabled. Cancels operation without a user code.  1: Enabled. Allows operation without a user code.

5491	[Optional Counter]		
5-491-001	Detail Option	*CTL	[0 or 1 / 00000000 / 1/step] Bit0: 0: Forced Job Canceling OFF 1: Forced Job Canceling ON Bit1 to Bit7: Not used

5501	[PM Alarm]
3301	Sets PM count level that emits PM alarm call.

5-501-001	PM Alarm Level	*CTL	[0 to 9999 / <b>0</b> / 1/step]  0: Alarm off  1 to 9999: Alarm goes off when Value (1 to 9999) x 1000 > PM counter
-----------	----------------	------	---

[Jam Alarm]  Sets the alarm to sound for the specified jam level (document miss feeds included).			
		jam level (document miss feeds are not	
			[0 to 3 / <b>3</b> / 1/step]
		*CTL	O(Z): Jam alarm prohibited
			1(L): level H 1/4
5-504-001	-		2(M): level H 1/2
		3(H): Jam occurrence interval sheets of indicated paper that indicated product proposal.	

	[Error Alarm]				
	Sets the error alarm level.				
5505	The error alarm counter counts "1" when any SC is detected. However, the error alarm counter decreases by "1" when an SC is not detected during a set number of copied sheets.				
			[0 to 255 / <b>Default</b> / hundred/step]		
			0: Alarm Off		
			[Default]		
			D197: 20		
5-505-001	Error Alarm	*CTL	D198: 25		
			D199: 35		
			D200: 45		
			D201: 60		
			D202: 75		

5507	[Supply/CC Alarm]
3307	Enables or disables the notifying a supply call via the @Remote.

5-507-001	Paper Supply Alarm	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: OFF 1: ON
5-507-002	Staple Supply Alarm	*CTL	[0 or 1 / 1 / 1/step] 0: OFF 1: ON
5-507-003	Toner Supply Alarm	*CTL	[0 or 1 / 1 / 1 / step] 0: OFF 1: ON
5-507-080	Toner Call Timing	*CTL	[0 or 1 / <b>0</b> / 1/step]  0: At replacement  1: AtLessThanThresh
5-507-081	Toner Call Threshold	*CTL	[10 to 90 / <b>10</b> / 10%/step] This program enables only if SP5-507-080 is "1"
5-507-128	Interval :Others	*CTL	[250 to 10000 / 1000 / 1/step] Sets report level of paper supply administration call.
5-507-132	Interval :A3	*CTL	[250 to 10000 / 1000 / 1/step] Sets report level of paper supply administration call.
5-507-133	Interval :A4	*CTL	[250 to 10000 / 1000 / 1/step] Sets report level of paper supply administration call.
5-507-134	Interval :A5	*CTL	[250 to 10000 / 1000 / 1/step] Sets report level of paper supply administration call.
5-507-141	Interval :B4	*CTL	[250 to 10000 / 1000 / 1/step] Sets report level of paper supply administration call.

RTB 36 Modified

5-507-142	Interval :B5	*CTL	[250 to 10000 / 1000 / 1/step] Sets report level of paper supply administration call.
5-507-160	Interval :DLT	*CTL	[250 to 10000 / 1000 / 1/step] Sets report level of paper supply administration call.
5-507-164	Interval :LG	*CTL	[250 to 10000 / 1000 / 1/step] Sets report level of paper supply administration call.
5-507-166	Interval :LT	*CTL	[250 to 10000 / 1000 / 1/step] Sets report level of paper supply administration call.
5-507-172	Interval :HLT	*CTL	[250 to 10000 / 1000 / 1/step] Sets report level of paper supply administration call.

5508	[CC Call] Sets PM count level that emits PM alarm call.		
5-508-001	Jam Remains	*CTL	[0 or 1 / 1 / 1/step] 0: Disable 1: Enable
5-508-002	Continuous Jams	*CTL	[0 or 1 / 1 / 1/step] 0: Disable 1: Enable
5-508-003	Continuous Door Open	*CTL	[0 or 1 / 1 / 1/step] 0: Disable 1: Enable
5-508-011	Jam Detection: Time Length	*CTL	[3 to 30 / 10 / 1 min/step]
5-508-012	Jam Detection: Continuous Count	*CTL	[2 to 10 / 5 / 1 time/step]
5-508-013	Door Open: Time Length	*CTL	[3 to 30 / 10 / 1 min/step]

5513	[PartsAlermlevelCount]  Call in at the point that the counter of "PM Parts Counter Display: Normal (SP7-617-001)" reaches this level (K).		
5-513-001	Normal	*CTL	[0 to 9999 / <b>300</b> / 1K/step] 0: OFF 1: ON
5-513-002	Df	*CTL	[1 to 9999 / <b>300</b> / 1K/step]

	[PartsAlermlev]			
PM report alarm for each CSS parts: Sets DF paper feed criteria On/Off not).			ts DF paper feed criteria On/Off (report or	
			[0 or 1 / 1 / 1/step]	
5-514-001	Nomal	*CTL	0: OFF	
			1: ON	
	Df	*CTL	[0 or 1 / <b>0</b> / 1/step]	
5-514-002			0: OFF	
			1: ON	

5515	[SC/Alarm Setting] With @Remote in use, these SP codes can be set to issue an SC call when an SC error occurs. If this SP is switched off, the SC call is not issued when an SC error occurs.		
5-515-001	SC Call	*CTL	[0 or 1 / 1 / 1/step] 0: OFF 1: ON
5-515-002	Service Parts Near End Call	*CTL	[0 or 1 / 1 / 1/step] 0: OFF 1: ON
5-515-003	Service Parts End Call	*CTL	[0 or 1 / 1 / 1/step] 0: OFF 1: ON

5-515-004	User Call	*CTL	[0 or 1 / 1 / 1/step] 0: OFF 1: ON
5-515-006	Communication Test Call	*CTL	[0 or 1 / 1 / 1/step] 0: OFF 1: ON
5-515-007	Machine Information Notice	*CTL	[0 or 1 / 1 / 1/step] 0: OFF 1: ON
5-515-008	Alarm Notice	*CTL	[0 or 1 / 1 / 1/step] 0: OFF 1: ON
5-515-010	Supply Automatic Ordering Call	*CTL	[0 or 1 / 1 / 1/step] 0: OFF 1: ON
5-515-011	Supply Management Report Call	*CTL	[0 or 1 / 1 / 1/step] 0: OFF 1: ON
5-515-012	Jam/Door Open Call	*CTL	[0 or 1 / 1 / 1/step] 0: OFF 1: ON

<i>5517</i>	[Get Machine Information]		
5-517-031	Get SMC Info: Retry Interval	*CTL	[0 to 255 / 10 / 1 min/step] When SMC info collect is interrupt, retries during the time between receving Request for obtaining SMC info, to value set with this setting.

	[Network Setting]				
5728	Displays and sets the port numbers of the port forward for transfering to the Android operation panel.				
5-728-001	NAT Machine Port1	*CTL	[1 to 65535 / <b>49101</b> / 1/step]		
5-728-002	NAT UI Port1	*CTL	[1 to 65535 / <b>55101</b> / 1/step]		
5-728-003	NAT Machine Port2	*CTL	[1 to 65535 / <b>49102</b> / 1/step]		
5-728-004	NAT UI Port2	*CTL	[1 to 65535 / <b>55102</b> / 1/step]		
5-728-005	NAT Machine Port3	*CTL	[1 to 65535 / <b>49103</b> / 1/step]		
5-728-006	NAT UI Port3	*CTL	[1 to 65535 / <b>55103</b> / 1/step]		
5-728-007	NAT Machine Port4	*CTL	[1 to 65535 / <b>49104</b> / 1/step]		
5-728-008	NAT UI Port4	*CTL	[1 to 65535 / <b>55104</b> / 1/step]		
5-728-009	NAT Machine Port5	*CTL	[1 to 65535 / <b>49105</b> / 1/step]		
5-728-010	NAT UI Port5	*CTL	[1 to 65535 / <b>55105</b> / 1/step]		
5-728-011	NAT Machine Portó	*CTL	[1 to 65535 / <b>49106</b> / 1/step]		
5-728-012	NAT UI Portó	*CTL	[1 to 65535 / <b>55106</b> / 1/step]		
5-728-013	NAT Machine Port7	*CTL	[1 to 65535 / <b>49107</b> / 1/step]		
5-728-014	NAT UI Port7	*CTL	[1 to 65535 / <b>55107</b> / 1/step]		
5-728-015	NAT Machine Port8	*CTL	[1 to 65535 / <b>49108</b> / 1/step]		
5-728-016	NAT UI Port8	*CTL	[1 to 65535 / <b>55108</b> / 1/step]		
5-728-017	NAT Machine Port9	*CTL	[1 to 65535 / <b>49109</b> / 1/step]		
5-728-018	NAT UI Port9	*CTL	[1 to 65535 / <b>55109</b> / 1/step]		
5-728-019	NAT Machine Port10	*CTL	[1 to 65535 / <b>49110</b> / 1/step]		
5-728-020	NAT UI Port10	*CTL	[1 to 65535 / <b>55110</b> / 1/step]		

<i>57</i> 30	[Extended Function Setting]	
	-	

5-730-001	JavaTM Platform setting	*CTL	[0 or 1 / 1 / 1/step] 0: OFF 1: ON Turns on or off the Java TM platform.
5-730-010	Expiration Prior Alarm Set	*CTL	[0 to 999 / 20 / 1 day/step] Sets the remaining days until the SDK application expires.

<i>57</i> 31	[Counter Effect]			
3/31	This SP is uesd only for Japan machines.			
5-731-001	Change MK1 Cnt (Paper -> Combine)	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: OFF 1: ON	

5734	[PDF Setting] Limits PDF file type when operating Scan to, fax send, and web download.		
5-734-001	PDF/A Fixed	*CTL	[0 or 1 / 0 / 1/step] 0: non-fixed setting 1: fixed setting (PDF/A use only)

5741	[Node Authentication Timeout]		
	Specifies the timeout of the	node authen	ication.
5-741-001	-	*CTL	[1 to 255 / <b>60</b> / 1 / sec]

5745	[DeemedPowerConsumption]		
5-745-211	Controller Standby	*CTL	[0 to 9999 / <b>0</b> / 1/step]
5-745-212	STR	*CTL	[0 to 9999 / <b>0</b> / 1/step]
5-745-213	Main Power Off	*CTL	[0 to 9999 / <b>0</b> / 1/step]
5-745-214	Scanning and Printing	*CTL	[0 to 9999 / <b>0</b> / 1/step]
5-745-215	Printing	*CTL	[0 to 9999 / <b>0</b> / 1/step]

ĺ	D

5-745-216	Scanning	*CTL	[0 to 9999 / <b>0</b> / 1/step]
5-745-217	Engine Standby	*CTL	[0 to 9999 / <b>0</b> / 1/step]
5-745-218	Low Power Consumption	*CTL	[0 to 9999 / <b>0</b> / 1/step]
5-745-219	Silent Condition	*CTL	[0 to 9999 / <b>0</b> / 1/step]
5-745-220	Heater Off	*CTL	[0 to 9999 / <b>0</b> / 1/step]

## SP Mode Tables - SP5000-2

## SP5-XXX (Mode)

5747	[Browser Setting]			
5747	-			
5-747-201	JPEG Quality	*CTL	[0 to 100 / 100 / 1%/step]	
5-747-203	Extended Memory Limit	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Use extended memory 1: Not use extended memory	
5-747-204	Vertical Scroll Display Setting	*CTL	[0 or 1 / <b>0</b> / 1/step] 0: Fixed 1: Not fixed	
5-747-205	Warning Confirmation Setting	*CTL	[0 to 3 / 0 / 1/step]  0: Confirmation dialog for page moving: displayed/security warning: displayed  1: Confirmation dialog for page moving: not displayed/security warning: displayed  2: Confirmation dialog for page moving: not displayed/security warning: not displayed/security warning: not displayed  3: Confirmation dialog for page moving: displayed/security warning: not displayed	
5-747-206	Browser3	CTL	[0 to 255 / <b>0</b> / 1/step]	
5-747-207	Browser4	CTL	[0 to 255 / <b>0</b> / 1/step]	
5-747-208	Browser5	CTL	[0 to 255 / <b>0</b> / 1/step]	
5-747-209	Browseró	CTL	[0 to 255 / <b>0</b> / 1/step]	
5-747-210	Browser7	CTL	[0 to 255 / <b>0</b> / 1/step]	
5-747-211	Browser8	CTL	[0 to 255 / <b>0</b> / 1/step]	
5-747-212	Browser9	CTL	[0 to 255 / <b>0</b> / 1/step]	
5-747-213	Browser10	CTL	[0 to 255 / <b>0</b> / 1/step]	

5

5748	[OpePanel Setting] Sets operation of related operational panel.			
5-748-101	Op Type Action Setting	CTL	[0 to 0xFF / 00000000 / 1/step] Bit0: Not used Bit1: Job stop setting at operational panel communication error 0: Job duration 1: Job stop Bit2: Smart Operation Panel mode 0: Common boot 1: Secure boot Bit3 to Bit7: Not used	
5-748-201	Cheetah Panel Connect Setting	CTL	[0 or 1 / 0 / 1/step] 0: Not connected 1: Connected Select "1" when the optional smart operation panel is to be installed.	

57.40	[Import/Export]			
5749	Imports and exports preference information.			
5-749-001	Export	CTL	[- / - / -] Target: System, Printer, Fax, Scanner Option: Unique, Secret Copy config: Encryption, Encryption key (if selected) [Execute]	
5-749-101	Import	CTL	[- / - / -] Option: Unique Copy config: Encryption, Encryption key (if selected) [Execute]	

<i>575</i> 1	[Key Event Encryption Setting]				
	Sets encryption key to encrypt key information.				
5-751-001	Password	*CTL	[32characters / - / 1/step]		

5752	[Copy:FlairAPI Setting] Sets copy FlairAPI functions ON/OFF.			
5-752-001	0x00 - 0xff	*CTL	[0 to 0xFF / 00000000 / 1/step] Bit0: FlairAPI server start up 0:Off, 1: On Bit1: Access permission from FlairAPI external device 0: Disabled, 1: Enabled Bit2: Switching dedicated IPv6 0: IPv6 only, 1: IPv4 priority Bit3:Remote UI function 0: Disabled, 1: Enabled Bit4 to Bit7: Not used	

5754	[Cloud Fax: Set Function] DFU		
5-754-001	-	*CTL	[0 or 1 / <b>0</b> / 1/step]

5755	[Display Setting] Sets the display for the administrator password.		
5-755-001	Disp Administrator Password Change Scrn	CTL	[-/-/-] [Execute] Displays the password setting screen for the supervisor and administrator 1 at the startup after the execution of this SP is done.
5-755-002	Hide Administrator Password Change Scrn	CTL	[- / - / -] [Execute] Hides the input screen of the administrator password temporarily after the execution of this SP is done.

£750	[Remote UI Setting]				
5758	Enabels or disables the authentication function for the Remote UI.				
5-758-001			[0 or 1 / 0 / 1/step]		
	Authentication	*CTL	0: Disable		
			1: Enable		

5801	[Memory Clear] Resets NVRAM data to the default settings. Before executing any of these SP codes, print an SMC Report.		
5-801-001	All Clear	CTL	[- / <b>-</b> / -] [Execute]
5-801-002	Engine	ENG	[-/-/-] [Execute] Initializes all registration settings for the engine and copy process settings.
5-801-003	SCS	CTL	[-/-/-] [Execute] Initializes default system settings, SCS (System Control Service) settings, operation display coordinates, and ROM update information.
5-801-004	IMH Memory Clr	CTL	[- / - / -] [Execute] Clears Image Memory Handler which manages memory and HDD access.
5-801-005	MCS	CTL	[-/-/-] [Execute] Initializes the automatic delete time setting for stored documents. (MCS: Memory Control Service)
5-801-006	Copier application	CTL	[- / - / -] [Execute] Initializes all copier application settings.

5-801-007	Fax Application	CTL	[-/-/-] [Execute] Initializes all fax application settings.
5-801-008	Printer Application	CTL	<ul> <li>[-/-/-]</li> <li>[Execute]</li> <li>Initializes the printer defaults, programs registered, the printer SP bit switches, and the printer CSS counter.</li> <li>The following service setting: <ul> <li>Bit switches</li> <li>Gamma setting (User &amp; Service)</li> <li>Toner Limit</li> </ul> </li> <li>The following user setting: <ul> <li>Tray Priority</li> <li>Menu protect</li> <li>System Setting except for setting of Energy Saver</li> <li>I/F Setup (I/O Buffer and I/O Timeout)</li> <li>PCL Menu</li> </ul> </li> </ul>
5-801-009	Scanner Application	CTL	[- / - / -] [Execute] Initializes the scanner defaults for the scanner and all the scanner SP modes.
5-801-010	Web Service	CTL	[-/-/-] [Execute]  Deletes the Netfile (NFA) management files and thumbnails, and initializes the Job login ID. Netfiles are jobs to be printed from the document server using a PC and the DeskTopBinder software.

5-801-011	NCS	CTL	[-/-/-] [Execute] Initializes the system defaults and interface settings (IP addresses also), the SmartNetMonitor for Admin settings, WebStatusMonitor settings, and the TELNET settings.
5-801-012	R-FAX	CTL	[- / - / -] [Execute] Initializes the remote fax settings.
5-801-014	Clear DCS Setting	CTL	[-/-/-] [Execute] Initializes the DCS (Delivery Control Service) settings.
5-801-015	Clear UCS Setting	CTL	[- / - / -] [Execute] Initializes the UCS (User Information Control Service) settings.
5-801-016	MIRS Setting	CTL	[- / - / -] [Execute] Initializes the MIRS (Machine Information Report Service) settings.
5-801-017	ccs	CTL	[- / - / -] [Execute] Initializes the CCS (Certification and Charge-control Service) settings.
5-801-018	SRM Memory Clr	CTL	[- / - / -] [Execute] Initializes the SRM (System Resource Manager) settings.
5-801-019	LCS	CTL	[- / - / -] [Execute] Initializes the LCS settings.

5-801-020	Web Uapli	CTL	[-/-/-] [Execute] Initializes the web user application settings.
5-801-021	ECS	CTL	[- / - / -] [Execute] Initializes the ECS settings.
5-801-023	AICS	CTL	[- / <b>-</b> / -] [Execute]
5-801-024	BROWSER	CTL	[- / <b>-</b> / -] [Execute]
5-801-025	Websys	CTL	[- / <b>-</b> / -] [Execute]
5-801-026	PLN	CTL	[- / <b>-</b> / -] [Execute]
5-801-027	SAS	CTL	[- / <b>-</b> / -] [Execute]

5803	[INPUT Check]
5603	See page 949 "Input Check Table".

5804	[OUTPUT Check]	
	See page 976 "Output Check Table".	

	[Anti-Condensation Heater]
5805	Switches ON/OFF dehumidify heater / dew condensation preventing heater during standby.
3803	If set to "ON", the anti-condensation heater remains in operation even while the machine is in standby, energy saving mode, or trouble (SC, etc.). However, the heater is off while warming up, printing, and in the sleep state.

5-805-001	0:OFF / 1:ON	*ENG	[0 or 1 / 0 / 1/step]  0: OFF (Switches OFF when the machine is in standby mode.)  1: ON (Switches ON when the machine is in standby mode.)
-----------	--------------	------	---

## SP5810 RTB 12a

5811	[MachineSerial]		
5 011 000	Display	*ENG	[0 to 255 / <b>0</b> / 1/step]
5-811-002	Displays serial number.		

5811	[MachineSerial Set]		
	BCU	ENG	[0 to 255 / <b>0</b> / 1/step]
5-811-004	Displays/Enters serial number of BCU EEPROM same as SP5-811-001.		
	Sets this SP when replacing	the BCU v	vith a new BCU.

5812	[Service Tel. No. Setting]		
5-812-001	Service	*CTL	[up to 20 / - / 1/step]  Sets the telephone number for a service representative. This number is printed on the Counter List, which can be printed with the user's "Counter" menu.  This can be up to 20 characters (both numbers and alphabetic characters can be input).
5-812-002	Facsimile	*CTL	[up to 20 / - / 1/step]  Sets the fax or telephone number for a service representative. This number is printed on the Counter List.  This can be up to 20 characters (both numbers and alphabetic characters can be input).

5-812-003	Supply	*CTL	[up to 20 / - / 1/step]  Use this to input the telephone number of your supplier for consumables. Enter the number and press #.
5-812-004	Operation	*CTL	[up to 20 / - / 1/step]  Use this to input the telephone number of your sales agency. Enter the number and press #.

5816	[Remote Service]			
3610	Use it for Network remote diagnosis.			
5-816-001	I/F Setting	*CTL	[0 to 2 / 2 / 2/step]  0: Remote service off  1: CSS remote service on  2: NRS remote service on  Selects the remote service setting.	
5-816-002	CE Call	*CTL	[0 or 1 / 1 / 1/step]  0: Start of the service  1: End of the service  Performs the CE Call at the start or end of the service.  • Note  • This SP is activated only when SP 5816-001 is set to "2".	
5-816-003	Function Flag	*CTL	[O or 1 / 0 / 1/step] O: Disabled, 1: Enabled Enables or disables the remote service function.  • Note • This SP setting is changed to "1" after @Remote register has been completed.	

		1	
			[0 or 1 / <b>0</b> / 1/step]
			0: Uses the RCG certification
5-816-007	SSL Disable	*CTL	1: Does no use the RCG certification
			Uses or does not use the RCG certification by SSL when calling the RCG.
			[1 to 90 / <b>30</b> / 1 second/step]
5-816-008	RCG Connect Timeout	*CTL	Specifies the connect timeout interval when calling the RCG.
			[0 to 100 / <b>60</b> / 1 second/step]
5-816-009	RCG Write Timeout	*CTL	Specifies the write timeout interval when calling the RCG.
			[0 to 100 / <b>60</b> / 1 second/step]
5-816-010	RCG Read Timeout	*CTL	Specifies the read timeout interval when calling the RCG.
			[0 or 1 / <b>0</b> / 1/step]
		*CTL	0: No. Access denied
5-816-011	Port 80 Enable		1: Yes. Access granted.
			Enables/disables access via port 80 to the SOAP method.
			[0 or 1 / <b>1</b> / 1/step]
5.014.010	RFU Timing	*CTL	O: RFU is executed whenever update request is received.
5-816-013			1: RFU is executed only when the machine is in the sleep mode.
			Selects the RFU timing.
			[0 or 1 / <b>0</b> / 1/step]
			0:Normal condition 1:Error
5-816-014	RCG Error Cause		Displays the cause of an RCG error. When @Remote is used, normally displays "0".
		CTL	If "1" is displayed, this means that the authentication from client to server failed when the network re-booted. To restore normal operation, cycle the machine off/on to return a "0" (normal condition).

		1	
5-816-021	RCG-C Registed	CTL	[0 or 1 / 0 / 1/step]  0: Installation not completed  1: Installation completed  This SP displays the Embedded RC Gate installation end flag.
5-816-023	Connect Type (N/M)	*CTL	[0 or 1 / 0 / 1/step] 0: Internet connection 1: Dial-up connection This SP displays and selects the Embedded RC Gate connection method.
5-816-061	Cert Expire Timing DFU	*CTL	[0 to 0xFFFFFFF / 0 / 1 second/step]  Proximity of the expiration of the certification.
5-816-062	Use Proxy	*CTL	[0 or 1 / 0 / 1/step] 0: Not use 1: Use This SP setting determines if the proxy server is used when the machine communicates with the service center.
5-816-063	Proxy Host	*CTL	[-/-/-] This SP sets the address of the proxy server used for communication between the RCG Device and the gateway. Use this SP to set up or display the customer proxy server address The address is necessary to set up the embedded RCG-N.  • The address display is limited to 128 characters. Characters beyond the 128 characters are ignored. • This address is customer information and is not printed in the SMC report.

5-816-064	Proxy PortNumber		*CTL	[0 to 0xFFFF / 0 / 1/step] This SP sets the port number of the proxy server used for communication between the Embedded RCG-N and the gateway. This setting is necessary to set up the embedded RC Gate-N.	
				This port number is customer information and is not printed in the SMC report.	
5-816-065	Proxy	User Name	*CTL	[-/-/-] This SP sets the HTTP proxy certification user name.  • Note  • The length of the name is limited to 31 characters. Any character beyond the 31st character is ignored.  • This name is customer information and is not printed in the SMC report.	
5-816-066	Proxy Password		*CTL	[- / - / -] This SP sets the HTTP proxy certification password.  • Note  • The length of the password is limited to 31 characters. Any character beyond the 31st character is ignored.  • This name is customer information and is not printed in the SMC report.	
5-816-067	CERT:Up State		*CTL	[0 to 255 / <b>0</b> / 1/step] Displays the status of the certification update.	
	0	The certification use	ed by RCG-	N is set correctly.	
	1			othKey) for update has been received from the resently being updated.	
	2	The certification update is completed and the GW URL is being notified of the successful update.			

3	The certification update failed, and the GW URL is being notified of the failed update.
4	The period of the certification has expired and new request for an update is being sent to the GW URL.
11	A rescue update for certification has been issued and a rescue certification setting is in progress for the rescue GW connection.
12	The rescue certification setting is completed and the GW URL is being notified of the certification update request.
13	The notification of the request for certification update has completed successfully, and the system is waiting for the certification update request from the rescue GW URL.
14	The notification of the certification request has been received from the rescue GW controller, and the certification is being stored.
15	The certification has been stored, and the GW URL is being notified of the successful completion of this event.
16	The storing of the certification has failed, and the GW URL is being notified of the failure of this event.
17	The certification update request has been received from the GW URL, the GW URL was notified of the results of the update after it was completed, but a certification error has been received, and the rescue certification is being recorded.
18	The rescue certification of No. 17 has been recorded, and the GW URL is being notified of the failure of the certification update.

					[0 to 255 / 0 / 1 /star-1			
	CERT:Error			*CTL	[0 to 255 / 0 / 1/step] Displays a number code that describes the reason for the request for update of the certification.			
	0	Normal. There	Normal. There is no request for certification update in progress.					
	1	Request for cer expired.	tification	update in	progress. The current certification has			
5-816-068	2	An SSL error no expired.	otification	has been	issued. Issued after the certification has			
	3	Notification of certification.	shift from	a commo	n authentication to an individual			
	4	Notification of	a commo	on certifica	tion without ID2.			
	5	Notification the	Notification that no certification was issued.					
	6	Notification the	t exist.					
5-816-069	CERT:Up ID  Firm Up Status		*CTL	[- / <b>-</b> / -	] f the request for certification.			
5-816-083			5-816-083 Firm Up Status *C			Displays 0: Farm 1: Farm 2: User of 3: Device 4: Device	the status of the firmware update.  update reception standby  update start schedule standby.  confirmation standby.  e farm update preparation is executing.  e farm update end process is executing.	
5-816-085	Firm Up User Check		*CTL	the previ firmware the previ to the sys	etting determines if the operator can confirm tous version of the firmware before the expudate execution. If the option to confirm tous version is selected, a notification is sent stem manager and the firmware update is the the firmware files from the URL.			

5-816-086	Firmware Size	*CTL	Allows the service technician to confirm the size of the firmware data files during the firmware update execution.
5-816-087	CERT: Macro Ver.	CTL	[-/-/-] Displays the macro version of the @Remote certification. Max. 8digits.
5-816-088	CERT: PAC Ver.	CTL	[-/-/-] Displays the macro version of the @Remote certification. Max. 16 digits.
5-816-089	CERT: ID2 Code	CTL	[-/-/-] Displays ID2 for the @Remote certification. Spaces are displayed as underscores (_). Asterisks (*) indicate that no @Remote certification exists.  "000000" indicates "Common certification". Max. 16 digits.
5-816-090	CERT: Subject	CTL	[-/-/-] Displays the common name of the @Remote certification subject. CN = the following 17 bytes. Spaces are displayed as underscores (_). Asterisks (*) indicate that no @Remote certification exists. "000000" indicates "Common certification". Max. 16 digits.
5-816-091	CERT: Serial No	CTL	[- / - / -] Displays serial number for the @Remote certification. Asterisks (*) indicate that no @Remote certification exists. Max. 7 digits.
5-816-092	CERT: Issuer	CTL	[-/-/-] Displays the common name of the issuer of the @Remote certification. CN = the following 30 bytes. Asterisks () indicate that no @Remote certification exists. Max. 7 digits.
5-816-093	CERT: Valid Start	CTL	[-/-/-] Displays the start time of the period for which the current @Remote certification is enabled. Max. 10 digits.

5-816-094 CERT: Valid End CTL	O94 CERT: Valid End CTL Displ				[-/-/-] Displays the end time of the period for which the current @Remote certification is enabled. Max. 10			
		digits.						
		[1 to 2 /	<b>1</b> / 1/step]					
		1:512bit						
		2:2048bi	it					
5-816-102 CERT: Encrypt Level *CT	*CTL	Displays the strength of encryption used for NRS authentication. The displayed value is not the value acquired from the authentication domain, rather it is the value stored in NVRAM when authentication is written. When NRS starts up, if there is a mismatch between this SP setting and the authentication encryption, then the SP value is updated.						
		[0 to 3 /	<b>0</b> / 1/step]					
		Saves the communication type that the machine						
Client		succeeded in @Remote client communication						
5-816-103 Communication *CT	TL	0: Not communicated (initial settting)						
Method		1: IPv4						
		2: IPv6						
		3: Hostname						
		[1 to 7 / <b>7</b> / 1/step]						
		Determines the destinations of NRSGateway that the machine can use during @Remote communication. If						
5-816-104 Client Communication Limit *CT	*CTL	NRS device runs, the setting specified here will be invalid.						
		Enable: Uses as the destinations						
		Disable: [	Does not use as t	he destination	s			
		V/ 1		IPv6	IPv4			
		Value	Hostname	Address	Address			
		1	Disable	Disable	Enable			
		2	Disable	Enable	Disable			
		3	Disable	Enable	Enable			

		4	Enable	Disable	Disable		
			5	Enable	Disable	Enable	
			6	Enable	Enable	Disable	
			7	Enable	Enable	Enable	
5-816-115	6-115 Network Information *CTL			[5 to 255 / 5 / 1/sec] Saves the time until the latest network information is determined.  If SCS does not notify a boot of the network or IPv6 address event, NRS determines the network information and notrifies the setting change(s) to intermediary device(s).			
5-816-150	Selection Country	CTL	Intermediary device(s).  [0 to 10 / NA:1, EU:3, Other:0 / 1/step]  0: Japan  1: USA  2: Canada  3: UK  4: Germany  5: France  6: Italy  7: Netherlands  8: Belgium  9: Luxembourg  10: Spain			ep]	
5-816-151	Line Type Automatic Judgement	CTL	[- / - / -] [Execute]				
5-816-152	Line Type Judgement Result	CTL	[0 to 255	<b>0</b> /0/0]			
5-816-153	Selection Dial / Push	CTL	[0 or 1 / <b>0</b> / -] 0: Tone dialing phone 1: Pulse dialing phone				
5-816-154	Outside Line Outgoing Number	CTL	[char (4 c	digits) / <b>-</b> / -]			

5-816-156	Dial Up User Name	CTL	[char (32 digits) / * / -] * Initial user name is displayed.	
5-816-157	Dial Up Password	CTL	[char (32 digits) / * / -]  * Initial password is displayed.	
5-816-161	Local Phone Number	CTL	[numeric (24 digits) / - / -]	
5-816-162	Connection Timing Adjustment Incoming	CTL	[0 to 24 / 1 / 1/step]	
5-816-163	Access Point	CTL	[char (16 digits) / - / -]	
5-816-164	Line Connecting	CTL	[0 or 1 / <b>0</b> / 1/step] 0: Sharing FAX 1: No Sharing FAX	
5-816-173	Modem Serial No.	CTL	[- / - / -] Displays the modem serial number.	
5-816-174	Retransmission Limit	CTL	[- / <b>-</b> / -] [Execute]	
5-816-187	FAX TX Priority	CTL	[0 or 1 / <b>0</b> / 1/step] 0: OFF 1: ON	
5-816-200	Manual Polling	CTL	[- / - / -] [Execute] Executes the manual polling.	
	Regist Status	CTL	[0 to 4 / 0 / 1/step]	
5-816-201	Displays a number that indicates the status of the @Remote service device.  O: Neither the registered device by the external nor embedded RCG device is set.  1: The embedded RCG device is being set. Only Box registration is completed. In this status, this unit cannot answer a polling request from the external RCG.  2. The embedded RCG device is set. In this status, the external RCG unit cannot answer a polling request.  3. The registered device by the external RCG is being set. In this status the embedded RCG device cannot be set.  4 The registered module by the external RCG has not started.			

5-816-202	Letter Number	*CTL	[- / - / -] Allows entry of the number of the request needed for the RCG-N device.
5-816-203	Confirm Execute	CTL	[-/-/-] [Execute] Executes the inquiry request to the @Remote GW URL. If SP5-816-202 was not entered, an error occurs.
5-816-204	Confirm Result	CTL	[0 to 255 / 0 / 1/step] Displays a number that indicates the result of the inquiry executed with SP5-816-203.
5-816-205	Confirm Place	CTL	[-/-/-] Displays the result of the notification sent to the device from the GW URL in answer to the inquiry request. Displayed only when the result is registered at the GW URL.
5-816-206	Register Execute	CTL	[- / - / -] [Execute] Executes "Embedded RCG Registration".
5-816-207	Register Result	CTL	[0 to 255 / <b>0</b> / 1/step] Displays a number that indicates the registration result.

	Displays a number	r that indicates	the re	gistro	ition result.	
	0: Succeeded					
	2: Registration in p	progress				
	3: Proxy error (pro	oxy enabled)				
	4: Proxy error (pro	oxy disabled)				
	5: Proxy error (Ille	gal user name	or pas	swoi	rd)	
	6: Communication error					
	7: Certification update error					
	8: Other error					
	9: Registration executing					
	10: Request paper number registration error (Hit device is not registered when reques area of installation information was device transfer)					
	11: Request paper number registration error (Hit device have been registered already)					
	12: Request pape	r number regist	ration	erro	r (parameter error)	
	20: Dial-up confir	mation failure				
	21: Answer tone of	detection error				
	22: Carrier detect	tion failure				
	23: Modem setting	ng value injustice				
	24: Supply curren	t shortage				
	25: Modem circui	t failing out				
	26: Circuit is in use	Э				
					[-2147483647 to 2147483647 / <b>0</b> / 1/step]	
5-816-208	Error Code		CTL		Displays a number that describes the error code that was issued when either SP5816-204 or SP5816-207 was executed.	
Cause		Code		Me	aning	

	-11001	Chat parameter error
	-11002	Chat execution error
	-11003	Unexpected error
Illegal Modem Parameter	-11004	Cutting process occurs during modem connecting.
	-11005	NCS reboot occurs during modem connecting.
	-12002	Inquiry, registration attempted without acquiring device status.
Operation Error,	-12003	Attempted registration without execution of an inquiry and no previous registration.
Incorrect Setting	-12004	Attempted setting with illegal entries for certification and ID2.
	-12005	@Remote communication is prohibited. The device has an Embedded RC gate-related problem.
	-12006	A confirmation request was made after the confirmation had been already completed.
	-12007	The request number used at registration was different from the one used at confirmation.
Operation Error, Incorrect Setting	-12008	Update certification failed because mainframe was in use.
	-12009	D2 mismatch between an individual certification and NVRAM.
	-12010	Certification area is not initialized.

		-2385		Attempted dial up overseas without the correct international prefix for the telephone number.		
		-2387		Not supported at the Service Center		
		-2389		Do	atabase out of service	
		-2390		Pr	ogram out of service	
		-2391		Tv	vo registrations for same device	
Error Caused by GW URL	Response from	-2392		Pc	arameter error	
		-2393		Вс	asil not managed	
		-2394		De	evice not managed	
		-2395		Вс	Box ID for Basil is illegal	
		-2396		Device ID for Basil is illegal		
		-2397		In	Incorrect ID2 format	
		-2398		In	Incorrect request number format	
5-816-209	Instl Clear		CTL		[- / <b>-</b> / -] [Execute]	
5-816-240	CommErrorTime		CTL		[-/-/-]	
5-816-241	CommErrorCode	e 1	CTL		[-/-/-]	
5-816-242	CommErrorCode	e 2	CTL		[-/-/-]	
5-816-243	CommErrorCode	e 3	CTL		[-/-/-]	
5-816-244	CommErrorSate	1	CTL		[-/-/-]	
5-816-245	CommErrorSate	2	CTL		[-/-/-]	
5-816-246	CommErrorSate	3	CTL		[-/-/-]	
5-816-247	SSL Err Count		CTL		[0 to 255 / <b>0</b> / 1]	
5-816-248	Other Err Count		CTL		[0 to 255 / <b>0</b> / 1]	

			[-/-/-]	
5-816-250	CommLog Print	CTL	[Execute]	
			Prints the communication log.	

5821	[Remote Service RCG Setting]		
			[00000000h to FFFFFFFh / 00000000h / 1/step]
5-821-002	RCG IPv4 Address	*CTL	Sets the IP address of the RCG (Remote Communication Gate) destination for call processing at the remote service center.
			[0 to 65535 / <b>443</b> / 1/step]
5-821-003	RCG Port	*CTL	Sets destination port number of RCG (Remote Communication Gate) at call process against center.
			[0 to 15 / "/RCG/services/" /-]
5-821-004	RCG IPv4 URL Path	*CTL	Sets the IPv4 address of the RCG destination URL path for call processing at the remote service center.
			[-/-/-]
5-821-005	RCG IPv6 Address	*CTL	Sets the IPv6 address of the RCG destination for call processing at the remote service center.
			[0 to 15 / "/RCG/services/" /-]
5-821-006	RCG IPv6 URL Path	*CTL	Sets the IPv6 address of the RCG destination URL path for call processing at the remote service center.
5-821-007	RCG Host Name	*CTL	Sets the IPv6 address of the RCG destination host name for call processing at the remote service center.
			[0 to 15 / "/RCG/services/" /-]
5-821-008	RCG Host URL Path	*CTL	Sets the IPv6 address of the RCG host name destination URL path for call processing at the remote service center.

5824	[NV-RAM Data Upload].		
5-824-001	NV-RAM Upload	CTL	[- / <b>-</b> / -] [Execute]

5825	[NV-RAM Data Download]  Downloads data from an SD card to the NVRAM in the machine. After downloading			
0020	is completed, remove the SD card and turn the machine power off and on.			
5-825-001	NV-RAM Download	CTL	[- / <b>-</b> / -] [Execute]	

5828	[Network Setting] Sets interface of Ethernet and wireless LAN.		
5-828-050	1284 Compatiblity (Centro)	*CTL	[0 or 1 / 1 / 1/step] Enables or disables 1284 Compatibility.  0: Disabled, 1: Enabled
5-828-052	ECP (Centro)	*CTL	[0 or 1 / 1 / 1/step] Enables or disables ECP Compatibility.  0: Disabled, 1: Enabled  Note  • This SP is activated only when SP5-828-50 is set to "1".
5-828-065	Job Spooling	*CTL	[0 or 1 / <b>0</b> / 1/step] Enables/disables Job Spooling.  0: Disabled, 1: Enabled
5-828-066	Job Spooling Clear: Start Time	*CTL	[0 or 1 / 1 / 1/step]  Treatment of the job when a spooled job exists at power on.  0: ON (Data is cleared)  1: OFF (Automatically printed)

5-828-069	Job Spooling (Protocol)	*CTL	[- / 011111 / - ]  Validates or invalidates the job spooling function for each protocol.  O: Validates  1: Invalidates  bit0: LPR  bit1: FTP  bit2: IPP  bit3: SMB  bit4: BMLinkS  bit5: DIPRINT  bit6: sftp  bit7: (Reserved)
5-828-087	Protocol usage	*CTL	[each bit value / 0x0000000/ bit / - ]  1: It has been processed by hit protocol.  0: It has Never processed by hit protocol.  See [Bit assignment for SP5-828-087] below.
5-828-090	TELNET (0: OFF 1: ON)	*CTL	[O or 1 / 1 / 1/step] Enabled or disabled the Telnet protocol. O: Disable, 1: Enable
5-828-091	Web (0: OFF 1: ON)	*CTL	[0 or 1 / 1 / 1/step] Enables or disables the Web operation. 0: Disable, 1: Enable
5-828-145	Active IPvó Link Local Address	СТІ	This is the IPv6 local address link referenced on the Ethernet or wireless LAN in the format:  "Link Local Address" + "Prefix Length"  The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.

5-828-147	Active IPv6 Stateless Address	CTL	
5-828-149	Active IPv6 Stateless Address	CTL	SP codes 147 to 155 are the IPv6 status addresses (1 to 5) referenced on the
5-828-151	Active IPv6 Stateless Address	CTL	Ethernet or wireless LAN in the format: "Status Address" + "Prefix Length"
5-828-153	Active IPv6 Stateless Address	CTL	The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.
5-828-155	Active IPv6 Stateless Address	CTL	
5-828-156	IPvó Manual Address	*CTL	This SP is the IPv6 manually set address referenced on the Ethernet or wireless LAN in the format:  "Manual Set Address" + "Prefix Length"  The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.
5-828-158	IPv6 Gateway Address	*CTL	This SP is the IPv6 gateway address referenced on the Ethernet or wireless LAN. The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.
5-828-161	IPv6 Stateless Auto Setting	CTL	[0 or 1 / 1 / 1/step] 0: Disable, 1: Enable Enables or disables the automatic setting for IPv6 stateless.
5-828-219	IPsec Aggressive Mode Setting	CTL	[0 or 1 / <b>0</b> / 1/step] 0: Disable, 1: Enable

5-828-236	Web Item visible	*CTL	[0x0000 to 0xffff / FFFFh / -] Displays or does not display the Web system items.  0: Not displayed, 1:Displayed bit0: Net RICOH bit1: Consumable Supplier bit2-15: Reserved (all)
5-828-237	Web shopping link visible	*CTL	[0 or 1 / 1 / 1/step]  Displays or does not display the link to Net RICOH on the top page and link page of the web system.  O: Not display, 1:Display
5-828-238	Web supplies Link visible	*CTL	[0 or 1 / 1 / 1/step] Displays or does not display the link to Consumable Supplier on the top page and link page of the web system.  0: Not display, 1:Display
5-828-239	Web Link1 Name	*CTL	[character strings(maximum 31byte) / URL1 / -] This SP confirms or changes the URL1 name on the link page of the web system. The maximum characters for the URL name are 31 characters.
5-828-240	Web Link1 URL	*CTL	[character strings(maximum 127byte) / - / - ] This SP confirms or changes the link to URL1 on the link page of the web system. The maximum characters for the URL are 127 characters.
5-828-241	Web Link1 visible	*CTL	[0 or 1 / 1 / 1/step] Displays or does not display the link to URL1 on the top page of the web system.  0: Not display, 1:Display

5-828-242	Web Link2 Name	*CTL	[character strings(maximum 31byte) / URL2 / - ] Same as "-239"
5-828-243	Web Link2 URL	*CTL	[character strings(maximum 127byte) / - / -] Same as "-240"
5-828-244	Web Link2 visible	*CTL	[0 or 1 / 1 / 1/step] Same as "-241"
5-828-249	DHCPv6 DUID	*CTL	[O or 1 / 000000000000 / 1/step] This SP confirms or changes the value of DUID.

Bit assignment for SP5-828-087

bit	ltem	bit	ltem
0	IPsec	16	SMB printing
1	IPv6	17	WSD-Printer
2	IEEE 802.1X	18	WSD-Scanner
3	Wireless LAN	19	Scan to SMB
4	security mode level setting	20	Scan to NCP
5	Appletalk	21	Reserve
6	DHCP	22	Bluetooth
7	DHCPv6	23	IEEE 1284
8	telnet	24	USB printing
9	SSL	25	Dynamic DNS
10	HTTPS	26	Netware printing
11	BMLinkS printing	27	LLTD
12	diprint printing	28	IPP printing
13	LPRprinting	29	IPP printing (SSL)
14	ftp printing	30	Ssh

bit	ltem	bit	ltem
15	rsh printing	31	Sftp

	[HDD]				
5832	Enter the SP number for the partition to initialize, then press #. When the execution ends, cycle the machine power off and on.				
5-832-001	HDD Formatting (ALL)	CTL	[-/-/-]		
	31 7		[Execute]		
5-832-002	HDD Formatting (IMH)	CTL	[-/-/-]		
0 002 002	Tibb Tolliaming (IIVIII)	012	[Execute]		
5-832-003	HDD Formatting (Thumbnail/	CTL	[-/-/-]		
3-032-003	OCR)	CIL	[Execute]		
5-832-004	UDD Formatting (lob log)	CTL	[-/-/-]		
J-032-004	HDD Formatting (Job Log)	CIL	[Execute]		
5-832-005	HDD Formatting (Printer	CTL	[-/-/-]		
3-632-003	Fonts)	CIL	[Execute]		
5-832-006	UDD Formatting (Hoor Info)	CTL	[-/-/-]		
3-632-000	HDD Formatting (User Info)	CIL	[Execute]		
5-832-007	Mail RX Data	CTL	[-/-/-]		
3-832-007	Mail KX Daid	CIL	[Execute]		
5-832-008	Mail TX Data	CTL	[-/-/-]		
3-832-008	Maii 17 Daia	CIL	[Execute]		
5-832-009	HDD Formatting (Data for a	CTL	[-/-/-]		
J-03Z-009	Design)	CIL	[Execute]		
5-832-010	HDD Formatting (Log)	CTL	[-/-/-]		
3-032-010	Tornialling (Log)	CIL	[Execute]		
5-832-011	HDD Formatting (Ridoc I/F)	CTL	[-/-/-]		
J-002-011	Tibb Formalling (Made 1/1)		[Execute]		

5-832-012	HDD Formatting (Thumbnail)	CTL	[- / <b>-</b> / -] [Execute]	
-----------	----------------------------	-----	---------------------------------	--

5836	[Capture Setting]		
5-836-001	Capture Function (0:Off 1:On)	*CTL	[0 or 1 / 0 / 1/step] 0: Disable 1: Enable With this function disabled, the settings related to the capture feature cannot be initialized, displayed, or selected.
5-836-002	Panel Setting	*CTL	[0 or 1 / 0 / 1/step] 0: Displayed 1: Not displayed Determines whether each capture related setting can be changed in the system settings or not.
5-836-072	Reduction for Copy B&W Text	*CTL	[0 to 6 / <b>0</b> / 1/step] 0: 1, 1: 1/2 2: 1/3 3: 1/4 6: 2/3
5-836-073	Reduction for Copy B&W Other	*CTL	[0 to 6 / 0 / 1/step] 0: 1, 1: 1/2 2: 1/3 3: 1/4 6: 2/3

5-836-075	Reduction for Printer B&W	*CTL	[0 to 6 / 0 / 1/step] 0: 1, 1: 1/2 2: 1/3 3: 1/4 6: 2/3
5-836-082	Format for Copy B&W Text	*CTL	[O to 3 / 1 / 1/step] O: JFIF/JPEG 1: TIFF/MMR 2: TIFF/MH 3: TIFF/MR
5-836-083	Format for Copy B&W Other	*CTL	[O to 3 / 1 / 1/step] O: JFIF/JPEG 1: TIFF/MMR 2: TIFF/MH 3: TIFF/MR
5-836-085	Format for Printer B&W	*CTL	[O to 3 / 1 / 1/step] O: JFIF/JPEG 1: TIFF/MMR 2: TIFF/MH 3: TIFF/MR
5-836-091	Default for JPEG	*CTL	[5 to 95 / 50 / 1/step] Sets the JPEG format default for documents sent to the document management server with the MLB, with JPEG selected as the format. Enabled only when optional File Format Converter (MLB: Media Link Board) is installed.

5-836-101	Primary srv IP address	*CTL	[000.000.000.000 to 255.255.255.255 / 000.000.000.000 / 1/step] Sets the IP address of the PC designated to operate as the primary capture server (CS).
5-836-102	Primary srv scheme	*CTL	[Char: Max. 6 / - / -]
5-836-103	Primary srv port number	*CTL	[1 to 65535 / <b>80</b> / 1/step] Use to set the IO device for the primary CS remotely.
5-836-104	Primary srv URL path	*CTL	[0 to 16 / - / -] Use to set the IO device for the primary CS remotely.  Max. characters: 16
5-836-111	Secondary srv IP address	*CTL	[000.000.000.000 to 255.255.255.255 / 000.000.000.000 / 1/step] Sets the IP address of the PC designated to operate as the secondary capture server (CS).
5-836-112	Secondary srv scheme	*CTL	[Char: Max. 6 / - / -] Sets the IO device of the secondary CS remotely.  Max. characters: 6
5-836-113	Secondary srv port number	*CTL	[1 to 65535 / <b>80</b> / 1/step] Sets the IO device of the secondary CS remotely. Max. characters: 6
5-836-114	Secondary srv URL path	*CTL	[0 to 16 / - / -] Sets the IO device of the secondary CS remotely. Max. characters: 6
5-836-120	Default Reso Rate Switch	*CTL	[0 or 1 / 0 / 1/step] Sets the IO device of the CS remotely.

5-836-122	Reso: Copy(Mono)	*CTL	[0 to 255 / <b>3</b> / 1/step]  Sets the IO device of the CS remotely:  0: 600dpi, 1: 400dpi, 2: 300dpi, 3: 200dpi, 4: 150dpi, 5: 100dpi, 6: 75dpi
5-836-124	Reso: Print(Mono)	*CTL	[0 to 255 / <b>3</b> / 1/step]  Sets the IO device of the CS remotely:  0: 600dpi, 1: 400dpi, 2: 300dpi, 3: 200dpi, 4: 150dpi, 5: 100dpi, 6: 75dpi
5-836-126	Reso: FAX(Mono)	*CTL	[0 to 255 / <b>3</b> / 1/step] 0: 600dpi, 1: 400dpi, 2: 300dpi, 3: 200dpi, 4: 150dpi, 5: 100dpi, 6: 75dpi
5-836-127	Reso: Scan(Color)	*CTL	[0 to 255 / <b>4</b> / 1/step] 0: 600dpi, 1: 400dpi, 2: 300dpi, 3: 200dpi, 4: 150dpi, 5: 100dpi, 6: 75dpi
5-836-128	Reso: Scan(Mono)	*CTL	[0 to 255 / <b>3</b> / 1/step] 0: 600dpi, 1: 400dpi, 2: 300dpi, 3: 200dpi, 4: 150dpi, 5: 100dpi, 6: 75dpi
5-836-141	All addr Info Switch	*CTL	[0 or 1 / 1 / 1/step] Expands the scope of used resources and performance. Switch this off if this feature is not being used.  1: ON, 0: OFF
5-836-142	Stand-by Doc Max Number	*CTL	[10 to 10000 / 2000 / 1/step] Expands the scope of used resources and performance. Switch this off if this feature is not being used.

5840	[IEEE 802.11]

			[1 to 14 / 14 / 1/step] Sets the maximum number of channels			
5-840-006	Channel MAX	*CTL	available for data transmission via the wireless LAN. The number of channels available varies according to location. The default settings are set for the maximum end of the range for each area. Adjust the upper 4 bits to set the maximum number of channels. DFU			
			Do not change the setting.			
			NA/ Asia: 1 to 11			
			[1 to 11 / 1 / 1/step]			
5-840-007	Channel MIN	*CTL	Sets the minimum number of channels available for data transmission via the wireless LAN. The number of channels available varies according to location. The default settings are set for the minimum end of the range for each area. Adjust the lower 4 bits to set the minimum number of channels. DFU			
			available varies according to location. The default settings are set for the minimum end of the range for each area. Adjust the lower 4 bits to set the minimum number of			
			Do not change the setting.			
			Europe: 1 to 13			
			NA/ Asia: 1 to 11			
			[1 to 11 / 1 / 1/step]  Sets the minimum number of channels available for data transmission via the wireless LAN. The number of channels available varies according to location. The default settings are set for the minimum end of the range for each area. Adjust the lower 4 bits to set the minimum number of channels. DFU  Note  • Do not change the setting.  Europe: 1 to 13  NA/ Asia: 1 to 11  [00 to 11 / 00000000 / 1 binary/step]  Selects the WEP key.  00: Key #1  01: Key #2 (Reserved)  10: Key #3 (Reserved)			
			·			
5-840-011	WEP Key Select	*CTL	,			
			,			
			11: Key #4 (Reserved)			

5-840-045	WPA Debug Lvl	*CTL	[1 to 3 / <b>3</b> / 1/step] 1: info 2: warning 3: error
5-840-046	11w	*CTL	[0 to 2 / 0 / 1/step] 0: Not used 1: preferentially used 2: Required
5-840-047	PSK Set Type	*CTL	[0 or 1 / <b>0</b> / 1/step]  0: Passphrase  1: PSK

## SP Mode Tables - SP5000-3

## SP5-XXX (Mode)

5841	[Supply Name Setting]  Press the [User Tools] key. These names appear when the user presses the Inquiry button on the User Tools screen.		
5-841-001	Toner Name Setting: Black	*CTL	[-/-/-]
5-841-007	OrgStamp	*CTL	[-/-/-]
5-841-011	StapleStd1	*CTL	[-/-/-]
5-841-012	StapleStd2	*CTL	[-/-/-]
5-841-013	StapleStd3	*CTL	[-/-/-]
5-841-014	StapleStd4	*CTL	[-/-/-]
5-841-021	StapleBind 1	*CTL	[-/-/-]
5-841-022	StapleBind2	*CTL	[-/-/-]
5-841-023	StapleBind3	*CTL	[-/-/-]

5842	[GWWS Analysis] These settings select the output mode for debugging information as each network file is processed.		
5-842-001	Setting 1	*CTL	Default: 00000000  Do not change  Netfiles: Jobs to be printed from the document server using a PC and the DeskTopBinder software

5-842-002 Setting 2		Default: 00000000 Adjusts the debug program mode setting.	
	*CTL	Bit7: 5682 mmseg-log setting	
		Adjusts the debug program mode setting.  Bit7: 5682 mmseg-log setting  D: Date/Hour/Minute/Second  : Minute/Second/Msec.	
			1: Minute/Second/Msec.
			0 to 6: Not used

5844	[USB]		
5-844-001	Transfer Rate	*CTL	Sets the speed for USB data transmission. [0x01:Full Speed] [0x04Auto Change]
5-844-002	Vendor ID	*CTL	Sets the vendor ID: Initial Setting: 0x05A Ricoh Company [0x0000 to 0xFFFF/1] <b>DFU</b>
5-844-003	Product ID	*CTL	Sets the product ID.  [0x0000 to 0xFFFF/1] <b>DFU</b>
5-844-004	Device Release Number	*CTL	[0 to 9999 / 100 / 1/step] Sets the device release number of the BCD (binary coded decimal) display. Enter as a decimal number. NCS converts the number to hexadecimal number recognized as the BCD.
5-844-005	Fixed USB Port	*CTL	[0 to 2 / 0 / 1/step] Selects the PnP name standardization mode.  0: OFF  1: Level 1  2: Level 2
5-844-006	PnP Model Name	*CTL	Specifies PnP name for USB device.
5-844-007	PnP Serial Number	*CTL	[12 characters / <b>NULL</b> / -] Specifies PnP serial number for USB device.

5-844-008	Mac Supply Level	*CTL	[0 or 1 / 1 / 1/step] 0: OFF 1: ON
5-844-100	Notify Unsupport	*CTL	[0 to 1 / 1 / 1/step] Displays or does not display USB unsupported message.  0: Not display 1: Display

5845	[Delivery Server Setting]			
	Provides items for delivery server settings.			
5-845-001	FTP Port No.	*CTL	[1 to 65535 / <b>3670</b> / 1 /step] Sets the FTP port number used when image files to the Scan Router Server.	
5-845-002	IP Address (Primary)	*CTL	[000.000.000.000 to 255.255.255.255 / 000.000.000.000 / 1/-] Use this SP to set the Scan Router Server address. The IP address under the transfer tab can be referenced by the initial system	
			setting.	
5-845-006	Delivery Error Display Time	*CTL	[0 to 999 / 300 / 1 / second]  Use this setting to determine the length of time the prompt message is displayed when a test error occurs during document transfer with the NetFile application and an external device.	

5-845-008	IP Address (Secondary)	*CTL	[000.000.000.000 to 255.255.255.255 / 000.000.000.000 / 1/step]  Specifies the IP address assigned to the computer designated to function as the secondary delivery server of Scan Router. This SP allows only the setting of the IP address without reference to the DNS setting.
5-845-009	Delivery Server Model	*CTL	[0 to 4 / 0 / 1/step] 0: Unknown 1: SG1 Accessory version 2: SG1 package version 3: SG2 Accessory version 4: SG2 package version Allows changing the model of the delivery server registered by the I/O device.
5-845-010	Delivery Svr. Capability	*CTL	[0 to 255 / <b>00000000</b> / 1/step]
	Bit7 = 1 Comment information exits  Bit6 = 1 Direct specification of mail address possible  Bit5 = 1 Mail RX confirmation setting possible  Bit4 = 1 Address book automatic update function exists		Changes the capability of the registered that the I/O device registered.
	Bit3 = 1 Fax RX delivery function exists  Bit2 = 1 Sender password function exists  Bit1 = 1 Function to link MK-1 user and Sender exists  Bit0 = 1 Sender specification required (if set to 1, Bit6 is set to "0")		Changes the capability of the registered that the I/O device registered.

5-845-011	Delivery Svr. Capability(Ext)	*CTL	[0 to 255 / 00000000 / 1/step]  Changes the capability of servers that is registered as I/O devices.  Bit7 = 1 Address book usage limitation (Limitation for each authorized user)  Bit6 = 1 RDH authorization link  Bit5 to 0: Not used
5-845-013	Server Scheme (Primary) DFU	*CTL	[- / - / -] This is used for the scan router program. 6 Character strings.
5-845-014	Server Port Number (Primary) DFU	*CTL	[1 to 65535 / <b>80</b> / 1/step] This is used for the scan router program.
5-845-015	Server URL Path (Primary) DFU	*CTL	[- / - / -] Character strings 16byte. This is used for the scan router program.
5-845-016	Server Scheme (Secondary) DFU	*CTL	[- / - / -] This is used for the scan router program. 6 character strings.
5-845-017	Server Port Number (Secondary) DFU	*CTL	[1 to 65535 / <b>80</b> / 1/step] This is used for the scan router program.
5-845-018	Server URL Path (Secondary) DFU	*CTL	[- / - / -] Character strings 16byte. This is used for the scan router program.

5-845-022	Rapid Sending Control	*CTL	[0 or 1 / 1 / 1/step] Enables or disables the prevention function for the continuous data sending error.  0: Disable, 1: Enable  • If it is set wrong network setting, the machines will continue to sending data over a network. If you switch off this SP, machine stops communication to network when it found wrong setting in its self.  • This setting would reduce network
			<ul> <li>This setting would reduce network traffic by wrong setting.</li> </ul>

5846	[UCS Setting]		
5-846-001	Machine ID (For Delivery Server)	*CTL	[-/-/-] Displays the unique device ID in use by the delivery server directory. The value is only Displayed and cannot be changed. This ID is created from the NIC MAC or IEEE 1394 EUI. The ID is displayed as either 6-byle or 8-byte binary.
5-846-002	Machine ID Clear (for Delivery Server)	*CTL	[- / - / -] [Execute] Clears the unique ID of the device used as the name in the file transfer directory. Execute This SP if the connection of the device to the delivery server is unstable. After clearing the ID, the ID will be established again automatically by cycling the machine off and on.

5-846-003	Maximum Entries	*CTL	[2000 to 20000 / 2000 / 1/step] Changes the maximum number of entries that UCS can handle.  If a value smaller than the present value is set, the UCS managed data is cleared, and the data (excluding user code information) is displayed
5-846-006	Delivery Server Retry Timer	*CTL	[0 to 255 / 0 / 1 / second]  Sets the interval for retry attempts when the delivery server fails to acquire the delivery server address book.  0: retry OFF  Retry time x retry count has to be set in 180second (SC reboot compatible model).
5-846-007	Delivery Server Retry Times	*CTL	[0 to 255 / 0 / 1 time/step]  Sets the number of retry attempts when the delivery server fails to acquire the delivery server address book.  0: retry OFF  Retry time x retry count has to be set in a 180 seconds (SC reboot compatible model).
5-846-008	Delivery Server Maximum Entries	*CTL	[2000 to 20000 / 2000 / 1/step] Sets the maximum number account entries of the delivery server user information managed by UCS. This SP would be reflected after rebooting the machine.
5-846-010	LDAP Search Timeout	*CTL	[1 to 255 / 60 / 1/step] Sets the length of the timeout for the search of the LDAP server.

5-846-020	WSD Maximum Entries	*CTL	[50 to 250 / 250 / 1/step] Sets the maximum entries for the address book of the WSD (WS-scanner). This SP would be reflected after rebooting the machine.
5-846-021	Folder Auth Change	*CTL	[0 or 1 / 0 / 1/step]  0: Uses certification information of device login user.  1: Uses certification information of address.  This SP would be reflected after rebooting the machine.
5-846-040	Addr Book Migraion(USB->HDD)	CTL	[-/-/-] [Execute] Transfers address book from SD/USB FlashROM to HDD when the model has address book in SD/USB FlashROM. After the transfer, change its Model that has address book in HDD.
5-846-041	Fill Addr Acl Info.	CTL	[- / <b>-</b> / -] [Execute]

This SP must be executed immediately after installation of an HDD unit in a basic machine that previously had no HDD. The first time the machine is powered on with the new HDD installed; the system automatically takes the address book from the NVRAM and writes it onto the new HDD. However, the new address book on the HDD can be accessed only by the system administrator at this stage. Executing this SP by the service technician immediately after power on grants full address book access to all users.

## Procedure

- 1. Turn the machine off.
- 2. Install the new HDD.
- 3. Turn the machine on.
- 4. The address book and its initial data are created on the HDD automatically.
- 5. However, at this point the address book can be accessed by only the system administrator or key operator.
- 6. Enter the SP mode and do SP5846-041. After this SP executes successfully, any user can access the address book

5-846-043	Addr Book Media	*CTL	[0 to 30 / 0 / 1/step] Displays the slot number where an address book data is in. 0: Unconfirmed 1: SD Slot 1 2: SD Slot 2 4: USB Flash ROM 20: HDD 30: Nothing
5-846-047	Initialize Local Addr Book	CTL	[- / - / -] [Execute] Clears the local address book information, including the user code.
5-846-048	Initialize Delivery Addr Book	CTL	[- / - / -] [Execute] Clears the distribution address book information, except the user code.

5-846-049	Initialize LDAP Addr Book	CTL	[- / - / -] [Execute] Clears the LDAP address book information, except the user code.
5-846-050	Initialize All Addr Book	CTL	[-/-/-] [Execute] Clears the LDAP address book information, except the user code. However administrator account (login ID & password) is not deleted. Administrator account is set at initialization of security setting.
5-846-051	Backup All Addr Book	CTL	[- / - / -] [Execute] Uploads all directory information to the SD card.
5-846-052	Restore All Addr Book	CTL	[- / - / -] [Execute] Downloads all directory information from the SD card.
5-846-053	Clear Backup Info	CTL	[-/-/-] [Execute]  Deletes the address book data from the SD card in the service slot.  Deletes only the files that were uploaded from this machine.  This feature does not work if the card is write-protected.  Note  • After you do this SP, go out of the SP mode, and then turn the power off.  • Do not remove the SD card until the Power LED stops flashing.

		i	
			[0x00 to 0xff / 00001111 / 1/step]
			This SP uses bit switches to set up the fuzzy search options for the UCS local address book. [0: OFF, 1: ON]
			Bit: Meaning
5-846-060	Search option	*CTL	0: Checks both upper/lower case characters
			1: Japan Only
			2: Japan Only
			3: Japan Only
			4 to 7: Not Used
	Complexity option 1	*CTL	[0 to 32 / 0 / 1/step]
			Use this SP to set the conditions for password entry to access the local address book.
			Specifically, this SP limits the password entry to upper case and sets the length of the password.
5-846-062			₩Note
			This SP does not normally require adjustment.
			This SP is enabled only after the system administrator has set up a group password policy to control access to the address book.

			[0 to 32 / <b>0</b> / 1/step]
			Use this SP to set the conditions for password entry to access the local address book.
			Specifically, this SP limits the password entry to lower case and sets the length of the password.
5-846-063	Complexity Option 2 DFU	*CTL	●Note
			This SP does not normally require adjustment.
			<ul> <li>This SP is enabled only after the system administrator has set up a group password policy to control access to the address book.</li> </ul>
		*CTL	[0 to 32 / <b>0</b> / 1/step]
	Complexity Option 3 DFU		Use this SP to set the conditions for password entry to access the local address book.
			Specifically, this SP limits the password entry to numeric character and sets the length of the password.
5-846-064			<b>U</b> Note
			This SP does not normally require adjustment.
			This SP is enabled only after the system administrator has set up a group password policy to control access to the address book.

			[0 to 32 / <b>0</b> / 1/step]	
			Use this SP to set the conditions for	
			password entry to access the local address	
			book.	
			Specifically, this SP limits the password entry to symbolic number and sets the length of	
			the password.	
5-846-065	Complexity Option 4 DFU	*CTL	<b>↓</b> Note	
			This SP does not normally require adjustment.	
			This SP is enabled only after the system	
			administrator has set up a group	
			password policy to control access to the address book.	
	FTP Auth Port Setting		[0 to 65535 / <b>3671</b> / 1/step]	
5-846-091		*CTL	Specifies the FTP port for getting a distribution server address book that is used	
			in the identification mode.	
			[0 to 255 / - / 1/step]	
5-846-094	Encryption Stat	*CTL	Shows the status of the encryption function	
			for the address book data.	
	0: Plain text in-operation. (in-us	se)		
	1: Encryption in-operation. (in	use) Encry	ption process finished.	
	2: Encryption ->plain text in-co	nversion i	n-combined treatment.	
	3: Plain-text->encryption in-cor	nversion ir	n-encryption.	
	4: Encryption-> Plain-text doub	_	completed.	
	5: Plain-text-> Encryption is completed.			
	6: Security in-change Encryption key change in-process			
	7: Security change is completed Encryption key change is completed.			
	8: Previous security key change file default is completed.			
	9: C security key change is cor	npleted. E	ncryption key change is completed.	

	[Rep Resolution Reduction]			
50.47	5847-002 through 5847-006 changes the default settings of image data sent externally by the Net File page reference function.			
5847	5847 21 sets the default for JF	EG imag	e quality of image files controlled by NetFile.	
	"Repository" refers to jobs to b DeskTopBinder software.	e printed	from the document server with a PC and the	
			[ 0 to 6 / <b>0</b> / 1/step]	
			0: 1x	
			1: 1/2x	
5 0 47 000	D. C. DOVACT	* CTI	2: 1/3x	
5-847-002	Rate for Copy B&W Text	*CTL	3: 1/4x	
			4: 1/6x	
			5: 1/8x	
			6: 2/3x	
			[ 0 to 6 / <b>0</b> / 1/step]	
			0: 1x	
			1: 1/2x	
5-847-003	D-4- f C D 8 \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	*CTL	2: 1/3x	
3-047-003	Rate for Copy B&W Other	CIL	3: 1/4x	
			4: 1/6x	
			5: 1/8x	
			6: 2/3x	
			[ 0 to 6 / <b>0</b> / 1/step]	
			0: 1x	
			1: 1/2x	
E 0.47.00E	D. t. f. D t D. 9.\//	* CTI	2: 1/3x	
5-847-005	Rate for Printer B&W	*CTL	3: 1/4x	
			4: 1/6x	
			5: 1/8x	
			6: 2/3x	

5-847-007	Rate for Printer B&W 1200dpi	*CTL	[ 0 to 6 / 1 / 1/step]  0: 1x  1: 1/2x  2: 1/3x  3: 1/4x  4: 1/6x  5: 1/8x  6: 2/3x
5-847-021	Network Quality Default for JPEG	*CTL	[5 to 95 / 50 / 1 /step]  Sets the default value for the quality of JPEG images sent as NetFile pages. This function is available only with the MLB (Media Link Board) option installed.

5848	[Web Service] 5848-002 sets the 4-bit switch assignment for the access control setting. Setting of 0001 has no effect on access and delivery from Scan Router. 5848-100 sets the maximum size allowed for downloaded images. The default is equal to 1 gigabyte.		
5-848-002	Access Ctrl: Repository (only Lower 4bits)	*CTL	[0000 to 0010 / 0000010 / 4bit assign] 0000: access enabled 0001: access disabled 0010: read only
5-848-003	Access Control: Doc. Svr. Print (Lower 4bits)	*CTL	[0000 to 0010 / <b>00000000</b> / 4bit assign] 0000: access enabled 0001: access disabled 0010: read only
5-848-004	Access Control: udirectory (Lower 4bits)	*CTL	[0000 to 0010 / <b>00000000</b> / 4bit assign] 0000: access enabled 0001: access disabled 0010: read only

5-848-007	Access Control: Comm. Log Fax(Lower 4bits)	*CTL	[0000 to 0010 / <b>00000000</b> / 4bit assign] 0000: access enabled 0001: access disabled 0010: read only
5-848-009	Access Ctrl: Job Ctrl (Lower 4bits)	*CTL	[0000 to 0010 / <b>0000000</b> / 4bit assign] 0000: access enabled 0001: access disabled 0010: read only
5-848-011	Access Ctrl: Devicemanagement (Lower 4bits)	*CTL	[0000 to 0010 / <b>0000000</b> / 4bit assign] 0000: access enabled 0001: access disabled 0010: read only
5-848-021	Access Ctrl: Delivery (Lower 4bits)	*CTL	[0000 to 0010 / <b>0000000</b> / 4bit assign] 0000: access enabled 0001: access disabled 0010: read only
5-848-022	Access Ctrl: uadministration (Lower 4bits)	*CTL	[0000 to 0010 / <b>0000000</b> / 4bit assign] 0000: access enabled 0001: access disabled 0010: read only
5-848-024	Access Ctrl: Log Service (Lower 4bits)	*CTL	[0000 to 0010 / <b>0000000</b> / 4bit assign] 0000: access enabled 0001: access disabled 0010: read only
5-848-099	Repository: Download Image Setting	*CTL	[0000 to 0111 / 0000000 / 1/step] 0: setting 0, 1: setting 1 Bit0: Images download setting for MacOS. Bit1: Images download setting for windows. Bit2: For other OS setting (except Mac and windows)

5-848-100	Repository: Download Image Max. Size	*CTL	[1 to 2048 / 2048 / 1 MByte/step] Specifies the max size of the image data that the machine can download.
5-848-217	Setting: Timing	*CTL	[0 to 2 / 0 / 1/step]  0: Transfer OFF  1: Successively transfer  2: Regular transfer

5849	[Installation Date] Displays or prints the installation date of the machine.		
5-849-001	Display	*CTL	[- / - / -] The "Counter Clear Day" has been changed to "Installation Date" or "Inst. Date".
5-849-002	Switch to Print	*CTL	[0 or 1 / 1 / 1/step]  Determines whether the installation date is printed on the printout for the total counter.  0: OFF (No Print)  1: ON (Print)
5-849-003	Total Counter	*CTL	[0 to 99999999 / <b>0</b> / 1/step] Displays total count value from establishment data (SP5-849-001).

5850	[Address Book Function] Japanes Use Only		
5-850-003	Replacement of Circuit Classifications	CTL	[- / <b>-</b> / -/-] [Replacement]

5851	[Bluetooth]
3631	Sets the operation mode for the Bluetooth unit. Press either key.

5-851-001	Mode	CTL	[0 or 1 / <b>0</b> / 1/step] 0: Public
			1: Private

		*		
	[Stamp Data Download]			
	Push [Execute] to download the fixed stamp data from the machine ROM onto the hard disk. Then these stamps can be used by the system. If this is not done, the user will not have access to the fixed stamps ("Confidential", "Secret", etc.).			
5853	You must always execute this SP after replacing the HDD or after formatting the HDD.			
	Always switch the machine off and on after executing this SP.			
	<b>U</b> Note			
	This SP can be executed only with the hard disks installed.			
5-853-001	_	CTL	[- / <b>-</b> / -] [Execute]	
		CIL	[Execute]	

5856	[Remote ROM Update] Allows the technician to upgrade the firmware using a local port (IEEE1284) when updating the remote ROM.		
5-856-002	Local Port	CTL	[0 or 1 / 0 / 1/step]  0: Disable  1: Enable  When set to "1" allows reception of firmware data via the local port (IEEE 1284) during a remote ROM update. This setting is reset to zero after the machine is cycled off and on.  Allows the technician to upgrade the firmware using a parallel cable.

5857	[Save Debug Log]

5-857-001	On/Off	*CTL	[0 or 1 / 0 / 1/step] 0: OFF 1: ON Switches the debug log feature on and off. The debug log cannot be captured until this feature is switched on.
5-857-002	Target(2:HDD 3:SD)	*CTL	[1 to 3 / 2 / 1 / step] 1: IC card 2: HDD 3: SD card Selects the storage device to save debug logs information when the conditions set with SP5-858 are satisfied.
5-857-101	Debug Logging Start Date	*CTL	[- / 20120101 / 1/step] Sets start date of the debug log output.
5-857-102	Debug Logging End Date	*CTL	[- / 20371212 / 1/step] Sets end date of the debug log output.
5-857-103	Acquire All Debug Logs	*CTL	[- / - / -] [Execute] Obtains all debug logs.
5-857-104	Acquire Only Controller Debug Logs	*CTL	[- / - / -] [Execute] Obtains controller debug log only.
5-857-105	Acquire Only Engine Debug Logs	*CTL	[- / - / -] [Execute] Obtains engine debug log only.
5-857-107	Acquire Only Opepanel Debug Logs	*CTL	[- / - / -] [Execute] Outputs the controller debug log to the media inserted front I/F

5-857-120	Make LogTrace Dir	*CTL	[- / - / -] [Execute] Makes a folder for the log trace in the SD card.
5-857-151	Get All Debug Logs Time Dips	*CTL	[- / - / -] [Execute] Displays the total time to get the all debug logs.
5-857-152	Get Controller Debug Logs Time Dips	*CTL	[- / - / -] [Execute] Displays the total time to get the controller debug logs.
5-857-153	Get Engine Debug Logs Time Disp	*CTL	[- / - / -] [Execute] Displays the total time to get the engine debug logs.
5-857-154	Get Opepanel Debug Logs Time Dips	*CTL	[- / - / -] [Execute] Displays the total time to get the operation panel debug logs.
5-857-155	Get SMC Time Dips	*CTL	[- / - / -] [Execute] Displays the total time to get the SMC data.

5860	[SMTP/POP3/IMAP4]		
5-860-020	Partial Mail Receive Timeout	*CTL	[1 to 168 / 72 / 1hour/step]  Sets the amount of time to wait before saving a mail that breaks up during reception. The received mail is discarded if the remaining portion of the mail is not received during this prescribed time.

5-860-021	MDN Response RFC2298 Compliance	*CTL	[0 or 1 / 1 / 1/step]  Determines whether RFC2.5298 compliance is switched on for MDN reply mail.  0: No 1: Yes  Sends MAIL FROM SMTP Commands as empty (<>) when conforming to RFC2298.
5-860-022	SMTP Auth. From Field Replacement	*CTL	[0 or 1 / 0 / 1/step]  Determines whether the FROM item of the mail header is switched to the validated account after the SMTP server is validated.  0: No. "From" item not switched.  1: Yes. "From item switched.
5-860-025	SMTP Auth. Direct Setting	*CTL	[0 to 255 / 0000000 / Multiple of 2/step] Selects the authentication method for SMPT. Bit switch: Bit 0: LOGIN Bit 1: PLAIN Bit 2: CRAM MD5 Bit 3: DIGEST MD5 Bit 4 to 7: Not used  Note  Set 0 this SP usually.
5-860-026	S/MIME: MIME Header Setting	*CTL	[0 to 2 / 0 / 1/step] Selects the MIME header type of an E-mail sent by S/MIME.  0: Microsoft Outlook Express standard 1: Internet Draft standard 2: RFC standard

5-860-028	S/MIME: Authentication Check	*CTL	[0 or 1 / 0 / 1/step] 0: non-check, 1: check Specifies whether to check or non-check address certification at sending S/MIME mail.
-----------	---------------------------------	------	--

5866	[E-Mail Report] This SP controls operation of the email notification function.		
5-866-001	Report Validity	CTL	[0 or 1 / 0 / 1/step] 0: Enabled, 1: Disabled Enables or disables the e-mail notification to @Remote.
5-866-005	Add Date Field	CTL	[0 or 1 / 0 / 1/step] 0: Enabled, 1: Disabled Disables and re-enables the addition of a date field to the email notification.

5870	[Common Key Info Writing]  Writes to flash ROM the common proof for validating the device for NRS specifications.		
5-870-001	Writing	CTL	[- / <b>-</b> / -] [Execute]
5-870-003	Initialize	CTL	[-/-/-] [Execute] Initializes the set certification. When the GW controller board is replaced with a new one for repair, you must execute the "Initiralize (-003)" and "Writing (-001)" just after the new board replacement. NOTE: Turn off and on the main power switch after the "Initialize (-003)" and "Writing (-001)" have been done.

5-870-004	Writing: 2048bit	CTL	[- / - / -] [Execute] Writes the authentication data used for @Remote into the flash ROM.
-----------	------------------	-----	---

5873	[SDCardAppliMove] Allows you to move applications from one SD card to another.		
5-873-001	MoveExec	CTL	[-/-/-] [Execute] This SP copies the application programs from the original SD card in SD card slot 2 to an SD card in SD card slot 1.
5-873-002	UndoExec	CTL	[-/-/-] [Execute] This SP copies back the application programs from an SD card in SD Card Slot 2 to the original SD card in SD card slot 1. Use this menu when you have mistakenly copied some programs by using "Move Exec" (SP5873-1).

### [SC Auto Reboot]

5875

This SP determines whether the machine reboots automatically when an SC error occurs.



• The reboot does not occur for Type A and C SC codes.

5-875-001	Reboot Setting	*CTL	[0 or 1 / 0 / 1/step]  Enables or disables the automatic reboot function when an SC error occurs.  O: The machine reboots automatically when the machine issues an SC error and logs the SC error code. If the same SC occurs again, the machine does not reboot.  1: The machine does not reboot when an SC error occurs.  The reboot is not executed for Type A or C SC codes.
5-875-002	Reboot Type	*CTL	[0 or 1 / 0 / 1/step] This setting determines how the machine reboots after an SC code is issued.  0: Manual reboot 1: Automatic reboot.

5878	[Option Setup] This SP enables the DOS application (Data Overwrite Security). Do this SP after installing Data Overwrite Security Unit.)		
5-878-001	Data Overwrite Security	CTL	[- / - / -] [Execute] Enables the Data Overwrite Security unit. Press "EXECUTE" on the operation panel. Then reboot the machine.
5-878-002	HDD Encryption	CTL	[- / - / -] [Execute] Enables the Copy Data Security unit. Press "EXECUTE" on the operation panel. Then reboot the machine.

5-878-004	OCR Dictionary	CTL	[-/-/-] [Execute] Installation Process 1: Put the SD card in the SD slot (service slot), then start the device. 2: Execute SP5-878-004. 3: Reboot the machine. 4: Execute SP5-878-004. *This SP executes linking SD card and copying OCR dictionary. Step 2 executes linking SD card, and Step 4 executes copying dictionary. And be sure to turn Off the main power supply between step 2 (linking SD card) and step 4 (copying dictionary). * OCR dictionary is able to overwrite. Overwrite process is same as initial installation process.
			,

5879	[Editing Option] Japan Use Only		
5-879-001	-	*CTL	[- / <b>-</b> / -] [Execute]

5881	[Fixed Phrase Block Erasing]		
3001	Touch [EXECUTE] on the oper	operation panel. Then erase all the fixed phase block.	
5-881-001	-	*CTL	[- / - / -] [Execute]

5885	[CPM Set]	
3003	Sets access control for document box on Web Image Monitor.	

			[8bit / 00000000 / -] Sets access control for document box on
			Web Image Monitor. bit0: Forbid all document sever access (1)
			bit1: Forbid user mode access (1)
5-885-020	DocSvr Acc Ctrl	*CTL	bit2: Forbid print function (1)
			bit3: Forbid fax TX (1)
			bit4: Forbid scan sending (1)
			bit5: Forbid downloading (1)
			bitó: Forbid delete (1)
			bit7: Reserved
			[0 to 2 / <b>0</b> / 1 / step]
			0: Thumbnail
5-885-050	DocSvr Format	*CTL	1: Icon
			2: Detail
			Sets the default display format for document list in document box.
			[5 to 20 / <b>10</b> / 1/step]
5-885-051	DocSvr Trans	*CTL	Sets the default display number of items per page in the document list in document box.
			[0 to 2 / <b>0</b> / 1/step]
5-885-100	Set Signature	*CTL	Sets whether to put signature or not when transferring mails that is scanned and stored from WIM.
			[0 or 1 / <b>0</b> / 1/step]
5-885-101	Set Encrypsion	*CTL	Determines whether the scanned documents with the WIM are encrypted when they are transmitted by an e-mail.
			[8bit / 00000000 / -]
5-885-200	Detect Mem Leak	*CTL	Controls memory leak detection of Web Image Monitor.
3 303-200	DOIGH MIGHT LEUR	CIL	Changed value of this SP will be available when displaying document list in document box on a new HTTP session.

5886	[Farm Update Setting]		
			[0 or 1 / <b>0</b> / 1/step]
			0: Version check for package firmware
			1: No version check for package firmware
5-886-100	Skip Version Chech	-	When selecting "0", only new firmware against the firmware in the machine is updated at the package firmware updating.
			Do not change this setting to "1" normally. The setting "1" is only used for a special order.
			[0 or 1 / <b>0</b> / 1/step]
			0: Version check for indivisual firmware
			1: No version check for indivisual firmware
5-886-101	Skip LR Chech	-	When selecting "0", indivisual firmware in the machine is not updated at the package firmware updating.
			Do not change this setting to "1" normally. The setting "1" is only used for a special order.

	[SD GetCounter]			
	This SP determines whether the ROM can be updated.			
operation stores. The file is stored in a			serted in SD card Slot 2 (lower slot). The older created in the root directory of the SD aved as a text file (*.txt) prefixed with the	
	1. Insert the SD card in SD card Slot 2 (lower slot).			
	2. Select SP5887 then touch [EXECUTE].			
	3. Touch [Execute] in the message when you are prompted.			
5-887-001	-	*CTL	[- / - / -] [Execute]	

5888 [Per	[Personal Information Protect]
3000	Selects the protection level for logs.

5-888-001	-	*CTL	[0 or 1 / 0 / 1/step]  0: No authentication, No protection for logs  1: No authentication, Protected logs (only an administrator can see the logs)
-----------	---	------	--

5900	[Engine Log Upload] DFU		
3700	For design use. Do not change.		
5-900-001	Pattern	*ENG	[0 to 4 / 0 / 1/step]
5-900-002	Trigger	*ENG	[0 to 3 / <b>0</b> / 1/step]

5893	[SDK Application Counter] Displays the counter name of each SDK application.		Capplication.
5-893-001	SDK-1	CTL	[- / <b>-</b> / -] [text display type]
5-893-002	SDK-2	CTL	[- / <b>-</b> / -] [text display type]
5-893-003	SDK-3	CTL	[- / <b>-</b> / -] [text display type]
5-893-004	SDK-4	CTL	[- / <b>-</b> / -] [text display type]
5-893-005	SDK-5	CTL	[- / <b>-</b> / -] [text display type]
5-893-006	SDK-6	CTL	[- / <b>-</b> / -] [text display type]
5-893-007	SDK-7	CTL	[- / <b>-</b> / -] [text display type]
5-893-008	SDK-8	CTL	[- / <b>-</b> / -] [text display type]
5-893-009	SDK-9	CTL	[- / <b>-</b> / -] [text display type]
5-893-010	SDK-10	CTL	[- / <b>-</b> / -] [text display type]
5-893-011	SDK-11	CTL	[- / <b>-</b> / -] [text display type]
5-893-012	SDK-12	CTL	[- / <b>-</b> / -] [text display type]

	[External Mech Count Setting]				
	Selects the charge mode of the external mechanical counter.				
5894	0: The machine recognizes	0: The machine recognizes the B&W and color copier job.			
	1: The machine recognizes the B&W and color copier, B&W and color printer job. But printer job counts as the copier job.				
	2: The machine recognizes	the B&W o	and color copier, B&W and color printer job.		
5-894-001	Mech Counter Switch Setting	*ENG	[0 to 2 / <b>0</b> / 1/step]		

	[Plug & Play Maker/Model Name]				
5907	Selects the brand name and the production name for Windows Plug & Play. This information is stored in the NVRAM. If the NVRAM is defective, these names should be registered again.				
	After selecting, press the "Original Type" key and "#" key at the same time. When the setting is completed, the beeper sounds five times.				
			Brand name (domestic B/W type is less than 7byte, domestic color type and abroad type are less than 15byte).		
	-	*CTL	Selects and sets model name (less than 1 óbyte) by choosing from displayed on it.		
			Set data on every Ricoh, OEM by CSS at the factory shipment already.		
5-907-001			And We set this SP that can select it from list for occurrence of error at NV-RAM.		
			The setting can do at market too.		
			The act of showing brand name and model name as character strings during choosing.		
			The act of displaying selected maker name and model name as priority when access This SP item.		
			[Operation on data entry.]		
5-907-001	_	*CTL	Depress enter key (#) after choosing number.		
5-90/-001	-		The act of displayed maker name and model name is changed this time.		

			[data]
			Do not enter maker name and model name imperfectly at every word and every phrase. If it has wrong word, it cannot plug and play understandably.
			So we check the characters fully, the text is single byte character or double character? Is it space or under score?
			Is it capital letter or small letter?
5-907-001	-	*CTL	You have to check requirements specification fully.
			notice of entering following select parameter
			₩Note
			<ul> <li>The act of deleting a ruled line so that you will be required 2character at double character entry, or fill its back end with the grey.</li> </ul>
			<ul> <li>Consider the space that after character strings, enclose specified character strings by heavy ruled line.</li> </ul>

5913	[Switchover Permission Time]		
5-913-002	Print Application Timer	*CTL	[3 to 30 / 3 / 1/step]  Sets the amount of time to elapse while the machine is in standby mode (and the operation panel keys have not been used) before another application can gain control of the display.

5967	[Copy Server : Set Function]

5-967-001	(0:ON 1:OFF)	*CTL	[O or 1 / 0 / 1/step] Enables and disables the document server. This is a security measure that prevents image data from being left in the temporary area of the HDD. After changing this setting, you must switch the main switch off and on to enable the new setting.
-----------	--------------	------	--

5973	[User Stamp Registration]		
5-973-101	Frame deletion setting	*CTL	[0 to 3 / 0 / 0.1 mm/step] Sets the margin for the user stamp registration for each edge of paper.

5974	[Cherry Server]		
5-974-001	(O:Light 1:Full)	*CTL	[0 or 1 / 0 / 1/step]  0: Light version  1: Full version  Selects which version of the Scan Router application program, "Light" or "Full (Professional)", is installed.

	[Device Setting]			
5985	The NIC and USB support features are built into the GW controller. Use this SP to enable and disable these features. In order to use the NIC and USB functions built into the controller board, these SP codes must be set to "1".			
5-985-001	On Board NIC	CTL	[-/0/-]	
5-985-002	On Board USB	CTL	[-/0/-]	

	[SP print mode]
5990	Prints the SMC report. In the SP mode, press Copy Window to move to the copy screen, select the paper size, then press Start. Select A4/LT (Sideways) or larger to ensure that all the information prints. Press SP Window to return to the SP mode, select the desired print, and press Execute.

5-990-001	All (Data List)	CTL	[- / - / -] [Execute]
5-990-002	SP (Mode Data List)	CTL	[- / <b>-</b> / -] [Execute]
5-990-003	User Program	CTL	[- / <b>-</b> / -] [Execute]
5-990-004	Logging Data	CTL	[- / <b>-</b> / -] [Execute]
5-990-005	Diagnostic Report	CTL	[- / <b>-</b> / -] [Execute]
5-990-006	Non-Default	CTL	[- / <b>-</b> / -] [Execute]
5-990-007	NIB Summary	CTL	[- / <b>-</b> / -] [Execute]
5-990-008	Capture Log	CTL	[- / <b>-</b> / -] [Execute]
5-990-021	Copier User Program	CTL	[- / <b>-</b> / -] [Execute]
5-990-022	Scanner SP	CTL	[- / <b>-</b> / -] [Execute]
5-990-023	Scanner User Program	CTL	[- / <b>-</b> / -] [Execute]
5-990-024	SDK/J Summary	CTL	[- / <b>-</b> / -] [Execute]
5-990-025	SDK/J Application Info	CTL	[- / <b>-</b> / -] [Execute]
5-990-026	Printer SP	CTL	[- / <b>-</b> / -] [Execute]

	[SP Text mode]		
5992	Prints the SMC report to a file on an SD card inserted into the SD card slot on the right side of the machine operation panel.		
	1: front SD slot		
	2: back SD slot (service slot)		
5-992-001	All (Data List)	CTL	[- / <b>-</b> / -] [Execute]
5-992-002	SP (Mode Data List)	CTL	[- / - / -] [Execute]
5-992-003	User Program	CTL	[- / - / -] [Execute] This SP for only MFP model.
5-992-004	Logging Data	CTL	[- / <b>-</b> / -] [Execute]
5-992-005	Diagnostic Report	CTL	[- / <b>-</b> / -] [Execute]
5-992-006	Non-Default	CTL	[- / <b>-</b> / -] [Execute]
5-992-007	NIB Summary	CTL	[- / - / -] [Execute]
5-992-008	Capture Log	CTL	[- / - / -] [Execute] This SP for only MFP model.
5-992-021	Copier User Program	CTL	[- / - / -] [Execute] This SP for only MFP model.
5-992-022	Scanner SP	CTL	[- / - / -] [Execute] This SP for only MFP model.

5-992-023	Scanner User Program	CTL	[- / - / -] [Execute] This SP for only MFP model.
5-992-024	SDK/J Summary	CTL	[- / <b>-</b> / -] [Execute]
5-992-025	SDK/J Application Info	CTL	[- / <b>-</b> / -] [Execute]
5-992-026	Printer SP mode	CTL	[- / - / -] [Execute]

## SP Mode Tables - SP6000-1

## SP6-XXX (Peripherals)

6006	[ADF Adjustment]				
	Side-to-Side Regist: Front	*ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.1 mm/step]		
6-006-001	Adjusts the main scan registeration of the front original for ADF.  • Value increase: an image is moved to the right side of paper.  • Value decrease: an image is moved to the left side of paper.				
	Side-to-Side Regist: Rear	*ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.1 mm/step]		
6-006-002	Value increase: an imag	Adjusts the main scan registeration of the rear original for ADF.  • Value increase: an image is moved to the right side of paper.  • Value decrease: an image is moved to the left side of paper.			
6-006-003	Leading Edge Registration: Front	*ENG	[-5.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]		
	Adjusts the DFGATE assert timing of the front original for ADF.  If the leading edge margin of image is wide, increase value.  If the part of image is missing, decrease value.  • Value increase: an image is moved to the leading edge of paper.  • Value decrease: an image is moved to the trailing edge of paper.				
6-006-004	Leading Edge Registration: Rear	*ENG	[-5.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]		
	Adjusts the DFGATE assert timing of the rear original for ADF.  If the leading edge margin of image is wide, increase value.  If the leading edge of image is missing, decrease value.  • Value increase: an image is moved to the leading edge of paper.  • Value decrease: an image is moved to the trailing edge of paper.				

	Buckle: Duplex Front	*ENG	[-5.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]		
	·		·		
	Adjusts the buckle amount (skew correct amount) of the front original for ADF.				
6-006-005	If the original skew is unacce	ptable, incred	ase value.		
	If the Ireading edge of origin	al is damage	d, decrease value.		
	Value increase: increase	es front side b	ouckle amount.		
	<ul> <li>Value decrease: decrea</li> </ul>	ses front side	buckle amount.		
	Buckle: Duplex Rear	*ENG	[-5.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]		
	Adjusts the buckle amount (sk	ew correct a	mount) of the rear original for ADF.		
6-006-006	If the original skew is unacce	ptable, incred	ase value.		
	If the leading edge of origina	l is damaged	l, decrease value.		
	Value increase: increase	es rear side b	uckle amount.		
	<ul> <li>Value decrease: decrea</li> </ul>	ses rear side	buckle amount.		
	Rear Edge Erase Front	*ENG	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]		
	Adjusts the DFGATE negate timing of the front original for ADF.				
6-006-007	If the trailing edge of the front original has the shadow, use this SP to erase it.				
	Value increase: Dereases scanning range of the trailing edge of original.				
	Value decrease: Increases scanning range of the trailing edge of original.				
	Rear Edge Erase Rear	*ENG	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]		
	Adjusts the DFGATE negate timing of the rear original for ADF.				
6-006-008	If the trailing edge of the rear original has the shadow, use this SP to erase it.				
	Value increase: Dereases scanning range of the trailing edge of original.				
	<ul> <li>Value decrease: Increases scanning range of the trailing edge of original.</li> </ul>				
	L-Edge Regist (1-Pass): Front	*ENG	[-5.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]		
6-006-010	For SPDF models only. Adjusts the leading edge registration of the front original for SPDF.				
	Value Increase: Registration start timing is later.				
	Value decrease: Registration start timing is earlier.				
	1				

	L-Edge Regist (1-Pass):				
6-006-011	Rear	*ENG	[-5.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]		
	For SPDF models only. Adjusts the leading edge registration of the rear original for SPDF.				
	Value Increase: Registra	tion start timi	ng is later.		
	Value decrease: Registro	ation start tim	ing is earlier.		
	1st Buckle (1-Pass)	*ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.1 mm/step]		
6-006-012	For SPDF models only. Adjust original for SPDF.	s the buckle	amount (skew correct amount) of the front		
	Value Increase: Buckling	g amount dec	creases.		
	Value decrease: Bucklin	g amount inc	reases.		
	2nd Buckle (1-Pass)	*ENG	[-2.0 to 3.0 / <b>0.0</b> / 0.1 mm/step]		
6-006-013	For SPDF models only. Adjusts the buckle amount (skew correct amount) of the rear original for SPDF.				
	T-Edge Erase (1-Pass): Front	*ENG	[-5.0 to 5.0 / <b>-1.5</b> / 0.1 mm/step]		
6-006-014	For SPDF models only. Adjusts the erase margin of the front side at the original trailing edge for SPDF.				
	Value increase: Dereases scanning range of the trailing edge of original.				
	Value decrease: Increases scanning range of the trailing edge of original.				
	T-Edge Erase (1-Pass): Rear	*ENG	[-5.0 to 5.0 / <b>-1.5</b> / 0.1 mm/step]		
6-006-015	For SPDF models only. Adjusts the erase margin of the rear side at the original trailing edge for SPDF.				
	Value increase: add trailing edge to image.				
	Value decrease: erases trailing edge of image.				

6007	[ADF INPUT Check]
	See page 949 "Input Check Table".

6008	[ADF OUTPUT Check]
	See page 976 "Output Check Table".

	[Stamp Position Adj.]		
6010	Adjusts stamping position of [	ONE stamp	
	Value increase: Moves stamp position towards original trailing edge.		
	Value decrease: Moves	stamp positio	on towards original leading edge.
6-010-001	-	*ENG	[-5.0 to 5.0 / <b>0.0</b> / 0.1 mm/step]

6011	[1-Pass ADF INPUT Check]
	See page 949 "Input Check Table".

6012	[1-Pass ADF OUTPUT Check]	
	See page 976 "Output Check Table".	

	[Original Size Detect Setting]		
6016	Sets to judge as witch original size for two original sizes that can not be judged with ADF. Size of each bit is different depending on region. Set corresponding bit to "O" when to prior the default size. Set "1" to let the switching size judge.		
6-016-001	-	*ENG	[0 to 255 / 00000000 / 1/step]

	[DF Magnification Adj.]			
	Changes the line speed corresponding to the magnification setting value.			
6017	The scanning magnification is slightly affected by causes such as the tolerance of the transfer roller diameter. Use this to adjust the scanning magnification for customer's demand.			
	Adjust the scanning magnificated Adjusting the value to "+" sho		of 0.1% to the paper transfer speed. ge.	
6-017-001	-	*ENG	[-5.0 to 5.0 / <b>0.0</b> / 0.1 %/step]	

[Skew Corre	[Skew Correction Moving Setting]
0020	Selects the paper size for the original skew correction.

6-020-001	-	*ENG	[0 or 1 / 0 / 1/step] 0: Small sizes (B6, A5, HLT)
			1: All sizes

	[Sub-scanPunchPosAdj:2K/3	BK FIN]	
6100		the sub scan direction.  nch position moves toward trailing edge of paper.  nch position moves toward leading edge of paper.	
6-100-001	JPN/EU: 2-Hole	ENG	
6-100-002	NA: 3-Hole	ENG	
6-100-003	Europe: 4-Hole	ENG	[-7.5 to 7.5 / <b>0.0</b> / 0.5mm/step]
6-100-004	NEU: 4-Hole	ENG	
6-100-005	NA: 2-Hole	ENG	

	[Main-scanPunchPosAdj:2K/3K FIN]			
Adjusts the punch position in the main scan direction.  Adjusting value to -: Punch position moves toward front side of machine Adjusting value to +: Punch position moves toward rear side of machine				
6-101-001	JPN/EU: 2-Hole	ENG		
6-101-002	NA: 3-Hole	ENG		
6-101-003	Europe: 4-Hole	ENG	[-2.0 to 2.0 / <b>0.0</b> / 0.4mm/step]	
6-101-004	NEU: 4-Hole	ENG		
6-101-005	NA: 2-Hole	ENG		

## [SkewCorrectBuckleAdj:2K/3K FIN] Adjusts the skew correction amount in the punch mode for each paper size. • Adjusts value to -: Buckling amount decreases • Adjusts value to +: Buckling amount increases.

6-102-001	A3 SEF	ENG	
6-102-002	B4 SEF	ENG	
6-102-003	A4 SEF	ENG	[-5.0 to 5.0 / <b>0.0</b> / 0.2mm/step]
6-102-004	A4 LEF	ENG	
6-102-005	B5 SEF	ENG	
6-102-006	B5 LEF	ENG	
6-102-007	A5 LEF	ENG	
6-102-008	DLT SEF	ENG	[-5.0 to 5.0 / <b>0.0</b> / 0.2mm/step]
6-102-009	LG SEF	ENG	
6-102-010	LT SEF	ENG	
6-102-011	LT LEF	ENG	
6-102-012	HLT LEF	ENG	
6-102-013	12x18	ENG	[504-50/00/00/-
6-102-014	8K SEF	ENG	[-5.0 to 5.0 / <b>0.0</b> / 0.2mm/step]
6-102-015	16K SEF	ENG	
6-102-016	16K LEF	ENG	
	Other	ENG	[-5.0 to 5.0 / <b>0.0</b> / 0.2mm/step]
6-102-01 <i>7</i>	Adjusts the skew correction a  Adjusts value to -: Buckli  Adjusts value to +: Buckli	ing amount d	

6103	[SkewCorrectCtrlSW:2K/3K FIN]
0103	Enables or disables the skew correction in the punch mode for each paper size.

6-103-001	A3 SEF	ENG	
6-103-002	B4 SEF	ENG	0 or 1 / <b>0</b> / 1/step]
6-103-003	A4 SEF	ENG	0: BuckleAdj On
6-103-004	A4 LEF	ENG	1: BuckleAdj Off
6-103-005	B5 SEF	ENG	
6-103-006	B5 LEF	ENG	
6-103-007	A5 LEF	ENG	[0 or 1 / <b>0</b> / 1/step]
6-103-008	DLT SEF	ENG	0: BuckleAdj On
6-103-009	LG SEF	ENG	1: BuckleAdj Off
6-103-010	LT SEF	ENG	
6-103-011	LT LEF	ENG	
6-103-012	HLT LEF	ENG	
6-103-013	12x18	ENG	[0 or 1 / <b>0</b> / 1/step]
6-103-014	8K SEF	ENG	0: BuckleAdj On 1: BuckleAdj Off
6-103-015	16K SEF	ENG	'
6-103-016	16K LEF	ENG	
6-103-017	Other	ENG	[0 or 1 / <b>0</b> / 1/step] 0: BuckleAdj On 1: BuckleAdj Off
	Enables or disables the skew correction in the punch mode for non specified paper.		

6104	[ShiftTrayJogPosAdj:2K/3K FIN]	
0104	These SPs are not used for the finisher D688/D689.	

6-104-001 A3 SEF ENG 6-104-002 B4 SEF ENG 6-104-003 A4 SEF ENG 6-104-004 A4 LEF ENG 6-104-005 B5 LEF ENG 6-104-006 A5 LEF ENG 6-104-007 DLT SEF ENG 6-104-009 LT SEF ENG 6-104-010 LT LEF ENG 6-104-011 HLT LEF ENG 6-104-012 8K SEF ENG 6-104-013 16K LEF ENG 6-104-014 Other ENG [-1.5 to 1.5 / 0.0 / 0.5mm/step]				
6-104-003 A4 SEF ENG 6-104-004 A4 LEF ENG 6-104-005 B5 LEF ENG 6-104-006 A5 LEF ENG 6-104-007 DLT SEF ENG 6-104-008 LG SEF ENG 6-104-009 LT SEF ENG 6-104-010 LT LEF ENG 6-104-011 HLT LEF ENG 6-104-012 8K SEF ENG 6-104-013 16K LEF ENG	6-104-001	A3 SEF	ENG	
6-104-004 A4 LEF ENG 6-104-005 B5 LEF ENG 6-104-006 A5 LEF ENG 6-104-007 DLT SEF ENG 6-104-008 LG SEF ENG 6-104-009 LT SEF ENG 6-104-010 LT LEF ENG 6-104-011 HLT LEF ENG 6-104-012 8K SEF ENG [-1.5 to 1.5 / 0.0 / 0.5mm/step]	6-104-002	B4 SEF	ENG	
6-104-005 B5 LEF ENG 6-104-006 A5 LEF ENG 6-104-007 DLT SEF ENG 6-104-008 LG SEF ENG 6-104-009 LT SEF ENG 6-104-010 LT LEF ENG 6-104-011 HLT LEF ENG 6-104-012 8K SEF ENG 6-104-013 16K LEF ENG	6-104-003	A4 SEF	ENG	[-1.5 to 1.5 / <b>0.0</b> / 0.5mm/step]
6-104-006 A5 LEF ENG 6-104-007 DLT SEF ENG 6-104-008 LG SEF ENG [-1.5 to 1.5 / 0.0 / 0.5mm/step] 6-104-009 LT SEF ENG 6-104-010 LT LEF ENG 6-104-011 HLT LEF ENG 6-104-012 8K SEF ENG [-1.5 to 1.5 / 0.0 / 0.5mm/step] 6-104-013 16K LEF ENG	6-104-004	A4 LEF	ENG	
6-104-007 DLT SEF ENG 6-104-008 LG SEF ENG 6-104-009 LT SEF ENG 6-104-010 LT LEF ENG 6-104-011 HLT LEF ENG 6-104-012 8K SEF ENG 6-104-013 16K LEF ENG	6-104-005	B5 LEF	ENG	
6-104-008 LG SEF ENG [-1.5 to 1.5 / 0.0 / 0.5mm/step] 6-104-009 LT SEF ENG 6-104-010 LT LEF ENG 6-104-011 HLT LEF ENG 6-104-012 8K SEF ENG [-1.5 to 1.5 / 0.0 / 0.5mm/step] 6-104-013 16K LEF ENG	6-104-006	A5 LEF	ENG	
6-104-009 LT SEF ENG 6-104-010 LT LEF ENG 6-104-011 HLT LEF ENG 6-104-012 8K SEF ENG [-1.5 to 1.5 / 0.0 / 0.5mm/step] 6-104-013 16K LEF ENG	6-104-007	DLT SEF	ENG	
6-104-010 LT LEF ENG 6-104-011 HLT LEF ENG 6-104-012 8K SEF ENG [-1.5 to 1.5 / 0.0 / 0.5mm/step] 6-104-013 16K LEF ENG	6-104-008	LG SEF	ENG	[-1.5 to 1.5 / <b>0.0</b> / 0.5mm/step]
6-104-011 HLT LEF ENG 6-104-012 8K SEF ENG [-1.5 to 1.5 / <b>0.0</b> / 0.5mm/step] 6-104-013 16K LEF ENG	6-104-009	LT SEF	ENG	
6-104-012 8K SEF ENG [-1.5 to 1.5 / <b>0.0</b> / 0.5mm/step] 6-104-013 16K LEF ENG	6-104-010	LT LEF	ENG	
6-104-013 16K LEF ENG	6-104-011	HLT LEF	ENG	
	6-104-012	8K SEF	ENG	[-1.5 to 1.5 / <b>0.0</b> / 0.5mm/step]
6-104-014 Other ENG [-1.5 to 1.5 / <b>0.0</b> / 0.5mm/step]	6-104-013	16K LEF	ENG	
	6-104-014	Other	ENG	[-1.5 to 1.5 / <b>0.0</b> / 0.5mm/step]

6105	[ShftTJogRtrctAngAdj:2K/3K FIN]			
6103	These SPs are not used for the finisher D688/D689.			
6-105-001	A3 SEF	ENG		
6-105-002	B4 SEF	ENG		
6-105-003	A4 SEF	ENG		
6-105-004	DLT SEF	ENG	[-10 to 10 / <b>0</b> / 5deg/step]	
6-105-005	LG SEF	ENG		
6-105-006	LT SEF	ENG		
6-105-007	8K SEF	ENG		
6-105-008	Other	ENG	[-10 to 10 / <b>0</b> / 5deg/step]	

4104	[Use Paper Jogger: 2K/3K FIN]		
6106	These SPs are not used for the finisher D688/D689.		
6-106-001	A3 SEF	ENG	
6-106-002	B4 SEF	ENG	[0 or 1 / 0 / 1/step]
6-106-003	A4 SEF	ENG	0: Jogging On 1: Jogging Off
6-106-004	A4 LEF	ENG	
6-106-005	B5 LEF	ENG	
6-106-006	A5 LEF	ENG	[0 or 1 / <b>0</b> / 1/step]
6-106-007	DLT SEF	ENG	0: Jogging On
6-106-008	LG SEF	ENG	1: Jogging Off
6-106-009	LT SEF	ENG	
6-106-010	LT LEF	ENG	
6-106-011	HLT LEF	ENG	[0 or 1 / 0 / 1/step]
6-106-012	8K SEF	ENG	0: Jogging On 1: Jogging Off
6-106-013	16K LEF	ENG	
6-106-014	Other	ENG	[0 or 1 / <b>0</b> / 1/step] 0: Jogging On 1: Jogging Off

# [JogPosAdj(CrnrStplr):2K/3K FIN] Adjusts the width (main scan direction) of the jogger fences on the corner stapling unit for each paper size. • Adjusts value to -: Width between jogger fences becomes shorter than the default value. • Adjusts value to +: Width between jogger fences becomes wider than the default value.

6-107-001	A3 SEF	ENG	
6-107-002	B4 SEF	ENG	
6-107-003	A4 SEF	ENG	[-1.5 to 1.5 / <b>0.0</b> / 0.5mm/step]
6-107-004	A4 LEF	ENG	
6-107-005	B5 SEF	ENG	
6-107-006	B5 LEF	ENG	
6-107-007	DLT SEF	ENG	
6-107-008	LG SEF	ENG	[-1.5 to 1.5 / <b>0.0</b> / 0.5mm/step]
6-107-009	LT SEF	ENG	
6-107-010	LT LEF	ENG	
6-107-011	8K SEF	ENG	
6-107-012	16K SEF	ENG	[-1.5 to 1.5 / <b>0.0</b> / 0.5mm/step]
6-107-013	16K LEF	ENG	
	Other	ENG	[-1.5 to 1.5 / <b>0.0</b> / 0.5mm/step]
6-107-014	Adjusts the width (main scan direction) of the jogger fences on the corner stapling unit for non specified paper.  • Adjusts value to -: Width between jogger fences becomes shorter than the default value.  • Adjusts value to +: Width between jogger fences becomes wider than the default value.		

## [JogPosAdj(BookStplr):2K/3K FIN] Adjusts the width (main scan direction) of the jogger fences on the booklet stapling unit for each paper size. • Adjusts value to -: Width between jogger fences becomes shorter than the default value. • Adjusts value to +: Width between jogger fences becomes wider than the default value.

6-108-001	A3 SEF	ENG	
6-108-002	B4 SEF	ENG	
6-108-003	A4 SEF	ENG	
6-108-004	B5 SEF	ENG	
6-108-005	DLT SEF	ENG	[-1.5 to 1.5 / <b>0.0</b> / 0.5mm/step]
6-108-006	LG SEF	ENG	[-1.5 to 1.5 / <b>0.0</b> / 0.5mm/ step]
6-108-007	LT SEF	ENG	
6-108-008	12x18	ENG	
6-108-009	8K SEF	ENG	
6-108-010	Other	ENG	

	[CrnrStplrJogTimeAdj:2K/3K FIN]			
6109	Adjusts the jogging times of the jogger fences on the corner stapling unit for each paper size.			
6-109-001	A3 SEF	*ENG		
6-109-002	B4 SEF	*ENG		
6-109-003	A4 SEF	*ENG	[0 to 2 / <b>0</b> / 1 time/step]	
6-109-004	A4 LEF	*ENG		
6-109-005	B5 SEF	*ENG		
6-109-006	B5 LEF	*ENG		
6-109-007	DLT SEF	*ENG		
6-109-008	LG SEF	*ENG	[0 to 2 / <b>0</b> / 1 time/step]	
6-109-009	LT SEF	*ENG		
6-109-010	LT LEF	*ENG		

6-109-011	8K SEF	*ENG	
6-109-012	16K SEF	*ENG	[0 to 2 / <b>0</b> / 1 time/step]
6-109-013	16K LEF	*ENG	
6-109-014	Other	*ENG	[0 to 2 / <b>0</b> / 1 time/step]

	[BookStplrJogTimeAdj:2K/3K FIN]			
6110	Adjusts the jogging times of the jogger fences on the booklet stapling unit for each paper size.			
6-110-001	A3 SEF	ENG		
6-110-002	B4 SEF	ENG	[0.4- 2. / 0. / 14:	
6-110-003	A4 SEF	ENG	[0 to 2 / <b>0</b> / 1 time/step]	
6-110-004	B5 SEF	ENG		
6-110-005	DLT SEF	ENG		
6-110-006	LG SEF	ENG		
6-110-007	LT SEF	ENG	[0 to 2 / <b>0</b> / 1 time/step]	
6-110-008	12x18	ENG		
6-110-009	8K SEF	ENG		
6-110-010	Other	ENG	[0 to 2 / <b>0</b> / 1 time/step]	

		[Staple Position Adj: 2K/3K FIN]			
6	6111	Adjusts the staple position of the corner stapling unit in the main scan direction for each paper size.			
		Adjusting value to -: Staple position moves toward the front side of machine.			
		Adjusting value to +: Staple position moves toward the rear side of machine.			

6-111-001	A3 SEF	ENG	
6-111-002	B4 SEF	ENG	
6-111-003	A4 SEF	ENG	[-3.5 to 3.5 / <b>0.0</b> / 0.5mm/step]
6-111-004	A4 LEF	ENG	
6-111-005	B5 SEF	ENG	
6-111-006	B5 LEF	ENG	
6-111-007	DLT SEF	ENG	
6-111-008	LG SEF	ENG	[-3.5 to 3.5 / <b>0.0</b> / 0.5mm/step]
6-111-009	LT SEF	ENG	
6-111-010	LT LEF	ENG	
6-111-011	8K SEF	ENG	
6-111-012	16K SEF	ENG	[-3.5 to 3.5 / <b>0.0</b> / 0.5mm/step]
6-111-013	16K LEF	ENG	
6-111-014	Other	ENG	[-3.5 to 3.5 / <b>0.0</b> / 0.5mm/step]

	[BookletStaplerPosAdj:2K/3K FIN]		
6112	Adjusts the staple position of the booklet stapling unit in the sub scan direction for each paper size.		
	Adjusting value to -: Staple position moves toward the trailing edge of paper.		
	Adjusting value to +: Staple position moves toward the leading edge of paper.		
6-112-001	A3 SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-112-002	B4 SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-112-003	A4 SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-112-004	B5 SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-112-005	DLT SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-112-006	LG SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-112-007	LT SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]

6-112-008	12x18	ENG	[-1.8 to 1.8 / <b>0.0</b> / 0.2mm/step]
6-112-009	8K SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-112-010	Other	ENG	[-1.8 to 1.8 / <b>0.0</b> / 0.2mm/step]

	[BookletFolderPosAdj:2K/3K FIN]		
6113	Adjusts the folding position of the booklet stapling unit in the sub scan direction for each paper size.		
	Adjusting value to -: Folding position moves toward the trailing edge of paper.		
	Adjusting value to +: Folding position moves toward the leading edge of paper.		
6-113-001	A3 SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-113-002	B4 SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-113-003	A4 SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-113-004	B5 SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-113-005	DLT SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-113-006	LG SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-113-007	LT SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-113-008	12x18	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-113-009	8K SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-113-010	Other	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]

	[Fold Speed Adj.: 2K/3K FIN]		
6114	Adjusts the folding speed (extra folding time) of booklet stapling unit for each paper size.		
	Adjust value: 0 (Standard)		
	Adjust value: 1 (Middle speed: Standard +2.6 sec.)		
	Adjust value: 2 (Low speed: Standard +5.2 sec.)		
6-114-001	A3 SEF	ENG	[0 to 2 / <b>0</b> / 1/step]
6-114-002	B4 SEF	ENG	[0 to 2 / <b>0</b> / 1/step]

6-114-003	A4 SEF	ENG	[0 to 2 / <b>0</b> / 1/step]
6-114-004	B5 SEF	ENG	[0 to 2 / <b>0</b> / 1/step]
6-114-005	DLT SEF	ENG	[0 to 2 / <b>0</b> / 1/step]
6-114-006	LG SEF	ENG	[0 to 2 / <b>0</b> / 1/step]
6-114-007	LT SEF	ENG	[0 to 2 / <b>0</b> / 1/step]
6-114-008	12x18	ENG	[0 to 2 / <b>0</b> / 1/step]
6-114-009	8K SEF	ENG	[0 to 2 / <b>0</b> / 1/step]
6-114-010	Other	ENG	[0 to 2 / <b>0</b> / 1/step]

SP6116 RTB 12a	Adjusts the maximum number of the pre-stack sheets on the corner stapling unit for		
Defaults changed 6116			
	Adjust value: 0; 1 sheet pre-stack (standard)		
	Adjust value: -1; No pre-stack		
6-116-001	A3 SEF	ENG	
6-116-002	B4 SEF	ENG	
6-116-003	A4 SEF	ENG	[-1 to 0 / <b>0</b> / 1 sheet/step]
6-116-004	A4 LEF	ENG	
6-116-005	B5 SEF	ENG	
6-116-006	B5 LEF	ENG	
6-116-007	DLT SEF	ENG	
6-116-008	LG SEF	ENG	[-1 to 0 / <b>0</b> / 1 sheet/step]
6-116-009	LT SEF	ENG	
6-116-010	LT LEF	ENG	
6-116-011	8K SEF	ENG	
6-116-012	16K SEF	ENG	[-1 to 0 / <b>0</b> / 1 sheet/step]
6-116-013	16K LEF	ENG	

	[BookStplrMxPrstkShAdj:2K/3KFIN]			
	Adjusts the maximum number of the pre-stack sheets on the booklet stapling unit for each paper size.			
6117	• Adjust value: 0; 3 sheets pre-stack (standard)		(standard)	
Adjust value: -1; 2 sheets pre-stack			· ·	
<ul> <li>Adjust value: -2; 1 sheet pre-stack</li> </ul>				
	• Adjust value: -3 to -7; no pre-stack.			
6-117-001	A3 SEF	ENG		
6-117-002	B4 SEF	ENG	[-7 to 0 / <b>0</b> / 1 sheet/step]	
6-117-003	A4 SEF	ENG		
6-117-004	B5 SEF	ENG		
6-117-005	DLT SEF	ENG		
6-117-006	LG SEF	ENG		
6-117-007	LT SEF	ENG	[-7 to 0 / <b>0</b> / 1 sheet/step]	
6-117-008	12x18	ENG		
6-117-009	8K SEF	ENG		
6-117-010	Other	ENG	[-7 to 0 / <b>0</b> / 1 sheet/step]	

onit for each paper size.  Default offset: 20mm  Adjusting value to -: Offset amounts	[CrnrStplrPrstkOffsAdj:2K/3KFIN]				
	Adjusts the pre-stack offset amount between stacked paper on the corner stapling unit for each paper size.				
	Default offset: 20mm				
	Adjusting value to -: Offset amount decreases.				
	Adjusting value to +: Offset amount increases.				

6-118-001	A3 SEF	ENG	
6-118-002	B4 SEF	ENG	
6-118-003	A4 SEF	ENG	[-16 to 16 / <b>0</b> / 2mm/step]
6-118-004	A4 LEF	ENG	
6-118-005	B5 SEF	ENG	
6-118-006	B5 LEF	ENG	
6-118-007	DLT SEF	ENG	
6-118-008	LG SEF	ENG	[-16 to 16 / <b>0</b> / 2mm/step]
6-118-009	LT SEF	ENG	
6-118-010	LT LEF	ENG	
6-118-011	8K SEF	ENG	
6-118-012	16K SEF	ENG	[-16 to 16 / <b>0</b> / 2mm/step]
6-118-013	16K LEF	ENG	
6-118-014	Other	ENG	[-16 to 16 / <b>0</b> / 2mm/step]

## SP Mode Tables - SP6000-2

## SP6-XXX (Peripherals)

	[BookStplrPrstkOffsAdj:2K/3KFIN]		
6119	Adjusts pre-stack offset amount (sub scan direction shearing amount of 1st and 2nd, 2nd and 3rd sheet) when saddle stitching specified paper. Default is No offset, when adjusting value to +, offset amount enlarges, when adjusting value to -, reduces.		
6-119-001	A3 SEF	ENG	
6-119-002	B4 SEF	ENG	[ 20 to 20 / <b>0</b> / 2mm /stan]
6-119-003	A4 SEF	ENG	[-30 to 30 / <b>0</b> / 2mm/step]
6-119-004	B5 SEF	ENG	
6-119-005	DLT SEF	ENG	
6-119-006	LG SEF	ENG	
6-119-007	LT SEF	ENG	[-30 to 30 / <b>0</b> / 2mm/step]
6-119-008	12x18	ENG	
6-119-009	8K SEF	ENG	
	Other	ENG	[-30 to 30 / <b>0</b> / 2mm/step]
6-119-010	Adjusts pre-stack offset amount (sub scan direction shearing amount of 1st and 2nd, 2nd and 3rd sheet) when saddle stitching except the specified paper. Default is No offset, when adjusting value to +, offset amount enlarges, when adjusting value to -, reduces.		

	[CrnStpPosExFeedAmtAdj:2K/3KFIN]		
6120	Adjusts over sending amount (sub scan direction) of positioning roller when edge stitching specified paper.		

6-120-001	A3 SEF	ENG	
6-120-002	B4 SEF	ENG	
6-120-003	A4 SEF	ENG	[0 to 30 / <b>0</b> / 10mm/step]
6-120-004	A4 LEF	ENG	
6-120-005	B5 SEF	ENG	
6-120-006	B5 LEF	ENG	
6-120-007	DLT SEF	ENG	
6-120-008	LG SEF	ENG	[0 to 30 / <b>0</b> / 10mm/step]
6-120-009	LT SEF	ENG	
6-120-010	LT LEF	ENG	
6-120-011	8K SEF	ENG	
6-120-012	16K SEF	ENG	[0.4-20./0./10/]
6-120-013	16K LEF	ENG	[0 to 30 / <b>0</b> / 10mm/step]
	Other	ENG	
6-120-014	Adjusts over sending amou stitching except the specifie		direction) of positioning roller when edge

	[BkFoldJogSolMovAmtAdj:2K/3KFIN]				
6122	Adjusts move amount of saddle stitch conformity claw when saddle stitching specified paper.				
	Adjusts value to +: towards up				
Adjusts value to -: towards down					
6-122-001	A3 SEF	ENG			
6-122-002	B4 SEF	ENG	[54.5/0/]		
6-122-003	A4 SEF	ENG	[-5 to 5 / <b>0</b> / 1 mm/step]		
6-122-004	B5 SEF	ENG			

6-122-005	DLT SEF	ENG	
6-122-006	LG SEF	ENG	
6-122-007	LT SEF	ENG	[55, 5707]
6-122-008	12x18	ENG	[-5 to 5 / <b>0</b> / 1 mm/step]
6-122-009	8K SEF	ENG	
6-122-010	Other	ENG	
	Adjusts move amount of saddle stitch conformity claw when saddle stitching except the specified paper.		
	Adjusts value to +: towards up		
	Adjusts value to -: towards down		

6123	[INPUT Check: 2K/3K FIN]
	See page 949 "Input Check Table".

6124	[OUTPUT Check: 2K/3K FIN]
	See page 976 "Output Check Table".

	[Sub-scan PunchPosAdj:FrontFIN]				
	Adjusts position of carry direction (sub scan direction) for punch.				
6130	Adjusting value to -: hole position moves toward trailing edge of paper when intaking.				
	Adjusting value to +: h     intaking.	nole position mo	oves toward leading edge of paper when		
6-130-001	Domestic 2Hole(Europe 2Hole)	*ENG			
6-130-002	North America 3Hole	*ENG			
6-130-003	Europe 4Hole	*ENG	[-7.5 to 7.5 / <b>0.0</b> / 0.5mm/step]		
6-130-004	North Europe 4Hole	*ENG			
6-130-005	North America 2Hole	*ENG			

	[Main-scan PunchPosAdj:FrontFIN]		
Adjusts position of width direction (main scan direction) for punch.  • Adjusting value to -: hole position moves toward front side of machine.  • Adjusting value to +: hole position moves toward rear side of machine.			ves toward front side of machine.
6-131-001	Domestic 2Hole(Europe 2Hole)	*ENG	
6-131-002	North America 3Hole	*ENG	
6-131-003	Europe 4Hole	*ENG	[-2.0 to 2.0 / <b>0.0</b> / 0.4mm/step]
6-131-004	North Europe 4Hole	*ENG	
6-131-005	North America 2Hole	*ENG	

	[Jogger Fence Fine Adj:FrontFIN]		
6132	Adjusts width (main scan direction) of edge stitch jogger when running specified paper conformity.		
	Adjusts value to -: move towards jogger width is tighter than base value.		
	Adjusts value to +: mo	ve towards log	ger width is wider than base value.
6-132-001	АЗТ	ENG	[-1.5 to 1.5 / <b>0.0</b> / 0.5mm/step]
6-132-002	B4T	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.5mm/step]
6-132-003	A4T	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.5mm/step]
6-132-004	A4Y	ENG	[-1.5 to 1.5 / <b>0.0</b> / 0.5mm/step]
6-132-005	B5T	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.5mm/step]
6-132-006	B5Y	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.5mm/step]
6-132-007	DLT-T	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.5mm/step]
6-132-008	LG-T	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.5mm/step]
6-132-009	LT-T	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.5mm/step]
6-132-010	LT-Y	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.5mm/step]
6-132-011	8K-T	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.5mm/step]
6-132-012	16K-T	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.5mm/step]

6-1	32-013	16K-Y	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.5mm/step]
6-1	32-014	Other	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.5mm/step]

	[Staple Position Adj: FrontFIN]		
6133	Adjusts staple position (main scan direction) for the near side parallel stitch/ far side parallel stitch of specified paper.		
	Adjusting value to -: staple position moves toward front side of machine.		
	Adjusting value to +: staple position moves toward rear side of machine.		
6-133-001	Finisher 1	*ENG	[-2.0 to 2.0 / <b>0.0</b> / 0.5mm/step]

6135	[INPUT Check: FrontFIN]
0133	See page 949

6136	[OUTPUT Check: FrontFIN]
0130	See page 949

	[Staple Position Adj: 1K FIN	۷]	
6140	Adjusts staple position (main scan direction) for near side trailing edge parallel stitch / far side trailing edge parallel stitch.		
	Adjusting value to -: staple position moves toward front side of machine.		
	Adjusting value to +: staple position moves toward rear side of machine.		
6-140-001	-	ENG	[-3.5 to 3.5 / <b>0.0</b> / 0.5mm/step]

	[Booklet Stapler Pos Adj: 1 K FIN]		
6141	<ul> <li>Adjusts saddle stitch staple position (sub scan direction) of specified paper.</li> <li>Adjusting value to -: staple position moves toward trailing edge of paper when intaking.</li> <li>Adjusting value to +: folding position moves toward leading edge of paper when intaking.</li> </ul>		
6-141-001	A3 SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-141-002	B4 SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]

6-141-003	A4 SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-141-004	B5 SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-141-005	DLT SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-141-006	LG SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-141-007	LT SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-141-008	12x18	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]

	[Sub-scan Punch Pos Adj:1K FIN]			
	Adjusts position of carry direction (sub scan direction) for punch.			
6142	Adjusting value to -: hole position moves toward trailing edge of paper when intaking.			
	Adjusting value to +: hole position moves toward leading edge of paper when intaking.			
6-142-001	JPN/EU: 2-Hole	ENG		
6-142-002	NA: 3-Hole	ENG		
6-142-003	Europe: 4-Hole	ENG	[-7.5 to 7.5 / <b>0.0</b> / 0.5mm/step]	
6-142-004	NEU: 4-Hole	ENG		
6-142-005	NA: 2-Hole	ENG		

	[Jogger Pos Adj:1K FIN]		
6143	Adjusts width (main scan direction) of jogger when running specified paper conformity.		
	Adjusts value to -: mov	Adjusts value to -: move towards jogger width is tighter than base value.	
	Adjusts value to +: move towards jogger width is wider than base value.		
6-143-001	A3 SEF	ENG	
6-143-002	B4 SEF	ENG	[154-15/00/05/]
6-143-003	A4 SEF	ENG	[-1.5 to 1.5 / <b>0.0</b> / 0.5mm/step]
6-143-004	A4 LEF	ENG	

6-143-005	B5 SEF	ENG	
6-143-006	B5 LEF	ENG	
6-143-007	DLT SEF	ENG	
6-143-008	LG SEF	ENG	[-1.5 to 1.5 / <b>0.0</b> / 0.5mm/step]
6-143-009	LT SEF	ENG	
6-143-010	LT LEF	ENG	
6-143-011	12x18	ENG	
6-143-012	8K SEF	ENG	
6-143-013	16K SEF	ENG	[-1.5 to 1.5 / <b>0.0</b> / 0.5mm/step]
6-143-014	16K LEF	ENG	
	Other	ENG	[-1.5 to 1.5 / <b>0.0</b> / 0.5mm/step]
6-143-015	Adjusts width (main scan direction) of jogger when running conformity to except the specified paper.		
	Adjusts value to -: move towards jogger width is tighter than base value.		
	Adjusts value to +: mo	ve towards jog	ger width is wider than base value.

	[Main-scan Punch Pos Adj: 1 K FIN]		
6144	Adjusts position of width direction (main scan direction) for punch.		
	<ul> <li>Adjusting value to -: hole position moves toward front side of machine.</li> <li>Adjusting value to +: hole position moves toward rear side of machine.</li> </ul>		
	Adjusting value to 1. II	tole position inc	byes loward rear side of fliaciline.
6-144-001	JPN/EU: 2-Hole	ENG	
6-144-002	NA: 3-Hole	ENG	
6-144-003	Europe: 4-Hole	ENG	[-2.0 to 2.0 / <b>0.0</b> / 0.4mm/step]
6-144-004	NEU: 4-Hole	ENG	
6-144-005	NA: 2-Hole	ENG	

	[Skew Correct Buckle Adj:1K FIN]		
6145	Adjusts the skew correction bending amount when punching specified paper.  • Adjusts value to -: buckling amount decreases		
	Adjusts value to +:buckling amount increases.		
6-145-001	A3 SEF	ENG	
6-145-002	B4 SEF	ENG	
6-145-003	A4 SEF	ENG	[-5.0 to 5.0 / <b>0.0</b> / 0.2mm/step]
6-145-004	A4 LEF	ENG	
6-145-005	B5 SEF	ENG	
6-145-006	B5 LEF	ENG	
6-145-007	A5 LEF	ENG	
6-145-008	DLT SEF	ENG	[-5.0 to 5.0 / <b>0.0</b> / 0.2mm/step]
6-145-009	LG SEF	ENG	
6-145-010	LT SEF	ENG	
6-145-011	LT LEF	ENG	
6-145-012	HLT LEF	ENG	
6-145-013	12x18	ENG	[50,50,60,00,00,00,00]
6-145-014	8K SEF	ENG	[-5.0 to 5.0 / <b>0.0</b> / 0.2mm/step]
6-145-015	16K SEF	ENG	
6-145-016	16K LEF	ENG	
	Other	ENG	[-5.0 to 5.0 / <b>0.0</b> / 0.2mm/step]
6-145-017	Adjusts the skew correction bending amount when punching except the specified paper.  • Adjusts value to -: buckling amount decreases  • Adjusts value to +: buckling amount increases.		

	[Skew Correct Ctrl SW:1K	Skew Correct Ctrl SW:1K FIN]		
6146	Switches way to control (St punching specified paper.	witches way to control (Still buckling 0: enable / 1: disable) skew correction who unching specified paper.		
6-146-001	A3 SEF	ENG	[0 or 1 / 0 / 1/step] 0: enable 1: disable	
6-146-002	B4 SEF	ENG	[0 or 1 / <b>0</b> / 1/step] 0: enable 1: disable	
6-146-003	A4 SEF	ENG	[0 or 1 / <b>0</b> / 1/step] 0: enable 1: disable	
6-146-004	A4 LEF	ENG	[0 or 1 / 0 / 1/step] 0: enable 1: disable	
6-146-005	B5 SEF	ENG	[0 or 1 / <b>0</b> / 1/step] 0: enable 1: disable	
6-146-006	B5 LEF	ENG	[0 or 1 / <b>0</b> / 1/step] 0: enable 1: disable	
6-146-007	A5 LEF	ENG	[0 or 1 / <b>0</b> / 1/step] 0: enable 1: disable	
6-146-008	DLT SEF	ENG	[0 or 1 / <b>0</b> / 1/step] 0: enable 1: disable	
6-146-009	LG SEF	ENG	[0 or 1 / <b>0</b> / 1/step] 0: enable 1: disable	

6-146-010	LT SEF	ENG	[0 or 1 / <b>0</b> / 1/step] 0: enable 1: disable
6-146-011	LT LEF	ENG	[0 or 1 / <b>0</b> / 1/step] 0: enable 1: disable
6-146-012	HLT LEF	ENG	[0 or 1 / <b>0</b> / 1/step] 0: enable 1: disable
6-146-013	12x18	ENG	[0 or 1 / <b>0</b> / 1/step] 0: enable 1: disable
6-146-014	8K SEF	ENG	[0 or 1 / <b>0</b> / 1/step] 0: enable 1: disable
6-146-015	16K SEF	ENG	[0 or 1 / <b>0</b> / 1/step] 0: enable 1: disable
6-146-016	16K LEF	ENG	[0 or 1 / <b>0</b> / 1/step] 0: enable 1: disable
6-146-017	Other	ENG	[0 or 1 / <b>0</b> / 1/step] 0: enable 1: disable
	Switches way to control (St punching except the specifi	-	enable / 1: disable) skew correction when

	[Booklet Folder Pos Adj:1K FIN]		
	Adjusts saddle stitch folding position (sub scan direction) of specified paper.		
6147	<ul> <li>Adjusting value to -: folding position moves toward trailing edge of paper when intaking.</li> <li>Adjusting value to +: folding position moves toward leading edge of paper when intaking.</li> </ul>		
6-147-001	A3 SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-147-002	B4 SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-147-003	A4 SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-147-004	B5 SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-147-005	DLT SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-147-006	LG SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-147-007	LT SEF	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]
6-147-008	12x18	ENG	[-3.0 to 3.0 / <b>0.0</b> / 0.2mm/step]

6148	[Fold Times Adj: 1K FIN]		
0140	Adjusts extra folding times (time) for folding when saddle stitching.		
6-148-001	-	ENG	[0 to 29 / <b>0</b> / 1 sec/step]

6149	[Last Paper Pos Time Adj:1K I	FIN]	
0149	Adjust positioning times to last paper of set.		
6-149-001	-	ENG	[0 to 1 / <b>0</b> / 1 time/step]

	[PositioningStrtTimingAdj:1KFIN]
6150	Adjusts the positioning roller operation start timing when positioning specified paper.
	Adjusts value to -: forwards the start timing
	Adjusts value to +: delays the start timing

6-150-001	A3 SEF	ENG	
6-150-002	B4 SEF	ENG	
6-150-003	A4 SEF	ENG	
6-150-004	A4 LEF	ENG	
6-150-005	B5 SEF	ENG	
6-150-006	B5 LEF	ENG	
6-150-007	DLT SEF	ENG	
6-150-008	LG SEF	ENG	[-100 to 100 / <b>0</b> / 10msec/step]
6-150-009	LT SEF	ENG	
6-150-010	LT LEF	ENG	
6-150-011	12x18	ENG	
6-150-012	8K SEF	ENG	
6-150-013	16K SEF	ENG	
6-150-014	16K LEF	ENG	
	Other	ENG	
6-150-015	Adjusts the positioning roller operation start timing when positioning except the specified paper.		
	<ul> <li>Adjusts value to -: forwards the start timing</li> <li>Adjusts value to +: delays the start timing</li> </ul>		
	Aujusis value to T. delays the start litting		

	[PosTimeAdj(LstPr2ndTime): 1 KFIN]		
6151	Adjusts 2nd time to positioning the last sheet of the set.  • Adjusts the value to -: shortens the positioning time  • Adjusts the value to +: extends the positioning time		
	The positioning for the last sadjust value is set to 1.	sheet is done w	hen [Last Paper Pos Time Adj: 1 K FIN]
6-151-001	-	ENG	[-100 to 100 / <b>0</b> / 10msec/step]

#### [PosTiAdj(ExcLstPr3rdTi): 1 KFIN] Adjust positioning time for specified paper except the last sheet 2nd time. 6152 • Adjusts the value to -: shortens the positioning time Adjusts the value to +: extends the positioning time 6-152-001 A3 SEF **ENG** [-100 to 100 / **0** / 10msec/step] 6-152-002 **B4 SEF ENG** [-100 to 100 / **0** / 10msec/step] 6-152-003 A4 SEF **ENG** [-100 to 100 / **0** / 10msec/step] 6-152-004 A4 LEF **ENG** [-100 to 100 / **0** / 10msec/step] 6-152-005 B5 SEF **ENG** [-100 to 100 / **0** / 10msec/step] 6-152-006 B5 LEF **ENG** [-100 to 100 / 0 / 10msec/step] 6-152-007 **DLT SEF ENG** [-100 to 100 / **0** / 10msec/step] LG SEF [-100 to 100 / **0** / 10msec/step] 6-152-008 **ENG** 6-152-009 LT SEF **ENG** [-100 to 100 / **0** / 10msec/step] [-100 to 100 / **0** / 10msec/step] 6-152-010 LT LEF **ENG** 6-152-011 12x18 **FNG** [-100 to 100 / **0** / 10msec/step] 6-152-012 8K SEF **ENG** [-100 to 100 / **0** / 10msec/step] 6-152-013 16K SEF **ENG** [-100 to 100 / **0** / 10msec/step] 6-152-014 16K LEF [-100 to 100 / **0** / 10msec/step] **ENG** Other **ENG** [-100 to 100 / **0** / 10msec/step] Adjust positioning time for other than the specified paper except the last sheet 2nd 6-152-015 time. Adjusts the value to -: shortens the positioning time Adjusts the value to +: extends the positioning time

# [Pos Time Adj By Sheet: 1K FIN] Adjusts the positioning time when stocked specified amount. • Adjusts the value to -: shortens the positioning time • Adjusts the value to +: extends the positioning time

6-154-001	1 - 10 Sheets	ENG	
6-154-002	11 - 20 Sheets	ENG	
6-154-003	21 - 30 Sheets	ENG	[-100 to 100 / <b>0</b> / 10msec/step]
6-154-004	31 - 40 Sheets	ENG	
6-154-005	41 - 50 Sheets	ENG	

4141	[FIN (1K FIN) INPUT Check]
6161	See page 949

	6162	[FIN (1K FIN) OUTPUT Check]	
	0102	See page 949	

6180	[M-ScanBindPosAdj:NoStplBindFIN]		
	-	ENG	[-1.0 to 1.0 / <b>0.0</b> / 0.5mm/step]
6-180-001	Adjusts the position of width direction (main scan direction) for binding.		
0 100 001	Value increase: The bind position moves toward outside of sheets.		
	Value decrease: The b	oind position mo	oves toward inside of sheets.

6181	[BindSpeedSetting:NoStplBindFIN]		
	-	ENG	[1 to 3 / <b>3</b> / 2/step]
6-181-001	Improves the noise for bind finishing by adjusting the bind speed.		
0 101 001	1: Bind Spd1(L) (Low noise mode)		
	3: Bind Speed 3 (Productiv	ity mode)	

6182	[ExitSpeedSwitch:NoStplBindFIN]
------	---------------------------------

Adjusts the paper exit speed to align the stacked sheets properly. • Value increase: increases the paper exit speed. • Value decrease: decreases the paper exit speed. 1:Exit Spd1(L) 2:Exit Speed 2 3:Exit Speed 3 4:Exit Speed 4 5:Exit Speed 5(High) 6-182-0 PaperLength: ΕN [1 to 5 / 2 / 1/step]G 01 297.0-457.2mm, Thick (106-300g/m2) 6-182-0 PaperLength: ΕN [1 to 5 / 2 / 1/step]G 297.0-457.2mm, Plain(60-105g/m2) 02 6-182-0 ΕN PaperLength: [1 to 5 / 4 / 1/step] 03 297.0-457.2mm, Thin(52-59g/m2) G 6-182-0 PaperLength: ΕN [1 to 5 / 2 / 1/step] 210.0-296.9mm, Thick (106-300g/m2) G 04 6-182-0 ΕN PaperLength: [1 to 5 / 2 / 1/step]210.0-296.9mm, Plain(60-105g/m2) G 05 6-182-0 ΕN PaperLength: [1 to 5 / 4 / 1/step] G 06 210.0-296.9mm, Thin(52-59g/m2) 6-182-0 PaperLength: ΕN [1 to 5 / 2 / 1/step] G 07 148.0-209.9mm, Thick(106-300g/m2) 6-182-0 ΕN PaperLength: [1 to 5 / 2 / 1/step] G 148.0-209.9mm, Plain(60-105g/m2) 80 6-182-0 PaperLength: ΕN [1 to 5 / 4 / 1/step]G 09 148.0-209.9mm, Thin (52-59g/m2)

6184	[Input Check:NoStplBindFIN]	
	See page 949	

6185	[Output Check:NoStplBindFIN]	
See page 949		

6186	[BindTimes NoStplBindFIN]			
6-186-001	- *ENG [1 to 2 / <b>2</b> / 1/step]			
	Specifies the paper binding strength by changing the number of binds.			
	1: 1 time binding (high productivity)			
	2: 2 times binding (low productivity)			

6801	[1-pass Stamp Unit]		
6-801-001	-	*ENG	[0 or 1 / <b>0</b> / 1/step] 0: No 1: Yes
	For 1 path simultaneous duplex models only.  Sets installed/not installed of DONE stamp unit.		

	[Extra]			
	More than the standard number of sheets can be stapled. This SP sets the additional number of sheets (This Setting + Standard Number = maximum number of sheets).			
6830	If the number of the maximum for staples is increased, and the mechanical warranty of the unit can be guaranteed, then the setting can take effect without changing the controller software.			
	However, assurance that mechanical performance can be guaranteed is required before changing the setting to increase the staple load for more than the maximum in the feed/exit specifications. Raising this setting without quality assurance could damage the machine.			
6-830-001	30-001 Staples 0 to 50 (Initial: 0) *CTL [0 to 50 / <b>0</b> / 1/step]		[0 to 50 / <b>0</b> / 1/step]	
6-830-002	02 Saddles 0 to 50 (Initial: 0) *CTL [0 to 50 / 0 / 1/step]			
6-830-003	[0 to 50 / 0 / 1/step]			

## SP Mode Tables - SP7000-1

## SP7-XXX (Data Log)

7401 [Total SC] Displays the number of SC codes detected.		d.	
7-401-001	SC Counter	*CTL	[00000 to 65535 / <b>0</b> / 1/step]
7-401-002	002 Total SC Counter *CTL		[00000 to 65535 / <b>0</b> / 1/step]

	[SC History]		
7403	Logs the SC codes detected.		
, 100	The 10 most recently detected SC Codes are not displayed on the screen, but coseen on the SMC (logging) outputs.		are not displayed on the screen, but can be
7-403-001	Latest	*CTL	[00000 to 65535 / <b>0</b> / 1/step]
7-403-002	Latest 1	*CTL	[00000 to 65535 / <b>0</b> / 1/step]
7-403-003	Latest 2	*CTL	[00000 to 65535 / <b>0</b> / 1/step]
7-403-004	Latest 3	*CTL	[00000 to 65535 / <b>0</b> / 1/step]
7-403-005	Latest 4	*CTL	[00000 to 65535 / <b>0</b> / 1/step]
7-403-006	Latest 5	*CTL	[00000 to 65535 / <b>0</b> / 1/step]
7-403-007	Latest 6	*CTL	[00000 to 65535 / <b>0</b> / 1/step]
7-403-008	Latest 7	*CTL	[00000 to 65535 / <b>0</b> / 1/step]
7-403-009	Latest 8	*CTL	[00000 to 65535 / <b>0</b> / 1/step]
7-403-010	Latest 9	*CTL	[00000 to 65535 / <b>0</b> / 1/step]

15

#### [SC990 / SC991 History]

Logs the SC991 detected.

7404

The 10 most recently detected SC991 are not displayed on the screen, but can be seen on the SMC (logging) outputs.

#### **U** Note

• If the same SC codes are detected continuously and total counter is not increasing, it only logs once in case of deleting other SC code logs.

7-404-001	Latest	*CTL	[-/-/-]
7-404-002	Latest 1	*CTL	[-/-/-]
7-404-003	Latest 2	*CTL	[-/-/-]
7-404-004	Latest 3	*CTL	[-/-/-]
7-404-005	Latest 4	*CTL	[-/-/-]
7-404-006	Latest 5	*CTL	[-/-/-]
7-404-007	Latest 6	*CTL	[-/-/-]
7-404-008	Latest 7	*CTL	[-/-/-]
7-404-009	Latest 8	*CTL	[-/-/-]
7-404-010	Latest 9	*CTL	[-/-/-]

<i>7</i> 502	[Total Paper Jam]		
	Displays the total number of jams detected.		d.
7-502-001	Jam Counter	*CTL	[00000 to 65535 / <b>0</b> / 1/step]
7-502-002	Total Jam Counter	*CTL	[00000 to 65535 / <b>0</b> / 1/step]

<i>7</i> 503	[Total Original Jam Counter]		
7503	Displays the total number of original jams.		
7-503-001	-	*CTL	[00000 to 65535 / <b>0</b> / 1/step]
7-503-002	Total Original Counter	*CTL	[00000 to 65535 / <b>0</b> / 1/step]

7504	[Paper Jam Location]		
7504	Displays the number of jar	ns according	to the location where jams were detected.
7-504-001	At Power On	*CTL	[0000 to 9999 / - / 1/step]
7-504-003	Tray1: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-004	Tray2: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-005	Tray3: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-006	Tray4: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-007	LCT: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-008	Bypass: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-009	Duplex: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-010	Timing: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-011	Transport 1: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-012	Transport 2: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-013	Vertical Trans. 3: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-014	Vertical Trans. 4: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-015	LCT Transport: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-017	Registration: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-018	Fusing Entrance: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-019	Fusing Exit: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-020	Paper Exit: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-021	Bridge Tray Exit: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-022	Bridge Relay: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-024	Inverter: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-025	Duplex Exit: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-027	Duplex Entrance: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-051	Transport 1: Off	*CTL	[0000 to 9999 / - / 1/step]

7-504-052	Transport 2: Off	*CTL	[0000 to 9999 / - / 1/step]
7-504-053	Vertical Trans. 3: Off	*CTL	[0000 to 9999 / - / 1/step]
7-504-054	Vertical Trans. 4: Off	*CTL	[0000 to 9999 / - / 1/step]
7-504-055	LCT Feed Sensor: Off	*CTL	[0000 to 9999 / - / 1/step]
7-504-057	Registration Sensor: Off	*CTL	[0000 to 9999 / - / 1/step]
7-504-060	Paper Exit: Off	*CTL	[0000 to 9999 / - / 1/step]
7-504-061	Bridge: Exit: Off	*CTL	[0000 to 9999 / - / 1/step]
7-504-062	Bridge: Transport: Off	*CTL	[0000 to 9999 / - / 1/step]
7-504-064	Inverter: Off	*CTL	[0000 to 9999 / - / 1/step]
7-504-065	Duplex Exit: Off	*CTL	[0000 to 9999 / - / 1/step]
7-504-067	Duplex Entrance: Off	*CTL	[0000 to 9999 / - / 1/step]
7-504-099	Double-Feed Detection	*CTL	[0000 to 9999 / - / 1/step]
7-504-100	Entrance: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-101	Entrance: Off	*CTL	[0000 to 9999 / - / 1/step]
7-504-102	Transport : On	*CTL	[0000 to 9999 / - / 1/step]
7-504-103	Transport: Off	*CTL	[0000 to 9999 / - / 1/step]
7-504-104	Paper Exit	*CTL	[0000 to 9999 / - / 1/step]
7-504-105	Front Jogger Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-106	Rear Jogger Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-107	Shift Roller Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-108	Positioning Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-109	Exit Guide Plate Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-110	Stapler Shift Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-111	Tray Lift Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-112	Staple Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-113	Stack Height Motor	*CTL	[0000 to 9999 / - / 1/step]

7-504-114         Punch Motor         *CTL         [0000 to 9999 / - / 1/step]           7-504-115         Punch Move Motor         *CTL         [0000 to 9999 / - / 1/step]           7-504-116         S-to-S Registration Move Motor         *CTL         [0000 to 9999 / - / 1/step]           7-504-148         No Exit Response         *CTL         [0000 to 9999 / - / 1/step]           7-504-149         Main Machine Setting Incorrect         *CTL         [0000 to 9999 / - / 1/step]           7-504-150         Entrance Sensor: On         *CTL         [0000 to 9999 / - / 1/step]           7-504-151         Entrance Sensor: Off         *CTL         [0000 to 9999 / - / 1/step]	
7-504-116         S-to-S Registration Move Motor         *CTL         [0000 to 9999 / - / 1/step]           7-504-148         No Exit Response         *CTL         [0000 to 9999 / - / 1/step]           7-504-149         Main Machine Setting Incorrect         *CTL         [0000 to 9999 / - / 1/step]           7-504-150         Entrance Sensor: On         *CTL         [0000 to 9999 / - / 1/step]	
7-504-116 Motor **CTL [0000 to 9999 / - / 1/step]  7-504-148 No Exit Response *CTL [0000 to 9999 / - / 1/step]  7-504-149 Main Machine Setting Incorrect *CTL [0000 to 9999 / - / 1/step]  7-504-150 Entrance Sensor: On *CTL [0000 to 9999 / - / 1/step]	
7-504-149   Main Machine Setting   *CTL   [0000 to 9999 / - / 1/step]	
7-504-149 Incorrect "CTL [0000 to 9999 / - / 1/step]  7-504-150 Entrance Sensor: On *CTL [0000 to 9999 / - / 1/step]	
, , , , , , , , , , , , , , , , , , , ,	
7-504-151 Entrance Sensor: Off *CTL [0000 to 9999 / - / 1/step]	
7-504-152	
7-504-153	
7-504-154   Switchback Transport   *CTL   [0000 to 9999 / - / 1/step]	
7-504-155   Switchback Transport   *CTL   [0000 to 9999 / - / 1/step]	
7-504-156 Proof Tray Exit *CTL [0000 to 9999 / - / 1/step]	
7-504-157 Shift Tray Exit *CTL [0000 to 9999 / - / 1/step]	
7-504-158 Booklet Stapler Exit *CTL [0000 to 9999 / - / 1/step]	
7-504-159 Entrance Motor *CTL [0000 to 9999 / - / 1/step]	
7-504-160   Horizontal Transport   *CTL   [0000 to 9999 / - / 1/step]	
7-504-161 Pre-Stack Transport Motor *CTL [0000 to 9999 / - / 1/step]	
7-504-162 ITB Transport Motor *CTL [0000 to 9999 / - / 1/step]	
7-504-163 Exit Motor *CTL [0000 to 9999 / - / 1/step]	
7-504-164 TE Press Motor *CTL [0000 to 9999 / - / 1/step]	
7-504-165 Ext Plate Guide Motor *CTL [0000 to 9999 / - / 1/step]	

7-504-166	Punching Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-167	Punch Move Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-168	S-to-S Regist Move Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-169	Lower junction Solenoid Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-170	Jogger Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-171	Positioning Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-172	Feed Out Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-173	Corner Stapler Move Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-174	Corner Stapler Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-175	Saddle Stitch Stapler Jogger Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-176	Saddle Stitch Stapler Jog SOL Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-177	Saddle Stitch Stapler Standard Fence Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-178	Saddle Stitch Stapler Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-179	Dynamic Roller Transport Mt	*CTL	[0000 to 9999 / - / 1/step]
7-504-180	Folder Transport Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-181	Saddle Stitch Stplr Positioning Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-182	Press-Fold Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-183	Output Tray Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-184	Shift Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-185	Shift Tray Jogger Front Motor	*CTL	[0000 to 9999 / - / 1/step]

7-504-186	Shift Tray Jogger Rear Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-187	Shift Tray Jogger Retraction Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-188	Stack Roller Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-189	Leading Edge Guide Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-190	Job Data Error	*CTL	[0000 to 9999 / - / 1/step]
7-504-200	Entrance: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-201	Entrance: Off	*CTL	[0000 to 9999 / - / 1/step]
7-504-202	Proog Tray Exit: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-203	Proog Tray Exit: Off	*CTL	[0000 to 9999 / - / 1/step]
7-504-204	Right Relay: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-205	Left Relay: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-206	Left Relay: Off	*CTL	[0000 to 9999 / - / 1/step]
7-504-207	Shift Tray Exit: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-208	Shift Tray Exit: Off	*CTL	[0000 to 9999 / - / 1/step]
7-504-209	Stack: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-210	TE Stopper: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-211	TE Stopper: Off	*CTL	[0000 to 9999 / - / 1/step]
7-504-212	Booklet Folder Exit: On	*CTL	[0000 to 9999 / - / 1/step]
7-504-213	Booklet Folder Exit: Off	*CTL	[0000 to 9999 / - / 1/step]
7-504-220	Entrance Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-221	Proof Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-222	Exit Transport/Positioning Roller Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-223	Shift Motor	*CTL	[0000 to 9999 / - / 1/step]

7-504-224	Jogger Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-225	Exit Guide Plate Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-226	Feed Out Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-227	Output Tray Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-228	Positioning Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-229	Stapler Shift Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-230	Stapler Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-231	Punch Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-232	Stack Transport Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-233	LE Stopper Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-234	Folder Blade Motor	*CTL	[0000 to 9999 / - / 1/step]
7-504-248	No Exit Response	*CTL	[0000 to 9999 / - / 1/step]
7-504-249	Main Machine Setting Incorrect	*CTL	[0000 to 9999 / - / 1/step]

7505	[Original Jam Detection] Displays the total number of original jams according to the location where jams were detected.		
7-505-001	At Power On	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-505-013	Separation Sensor:On	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-505-014	Skew Correction Sn: On	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-505-015	Scanning Entrance Sn:On	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-505-016	Registration Sensor:On	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-505-017	Original Exit Sensor:On	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-505-063	Separation Sensor:Off	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-505-064	Skew Correction Sn:Off	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-505-065	Scanning Entrance Sn:Off	*CTL	[0000 to 9999 / <b>0</b> / 1/step]

7-505-066	Registration Sensor:Off	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-505-067	Original Exit Sensor:Off	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-505-239	Original Pull	*CTL	[0000 to 9999 / <b>0</b> / 1/step]

7506	[Jam Count by Paper Size] Displays the number of jams according to the paper size.			
7-506-005	A4 LEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]	
7-506-006	A5 LEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]	
7-506-014	B5 LEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]	
7-506-038	LT LEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]	
7-506-044	HLT LEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]	
7-506-132	A3 SEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]	
7-506-133	A4 SEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]	
7-506-134	A5 SEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]	
7-506-141	B4 SEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]	
7-506-142	B5 SEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]	
7-506-160	DLT SEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]	
7-506-164	LG SEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]	
7-506-166	LT SEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]	
7-506-172	HLT SEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]	
7-506-255	Others	*CTL	[0000 to 9999 / <b>0</b> / 1/step]	

	[Plotter Jam History]					
	Displays the copy jam history (the most recent 10 jams)					
	Sample Display:					
	CODE:007					
	SIZE:05h					
7507	TOTAL:0000334					
/ 30/	DATE:Mon Mar 15 11:44:5	0 2000				
	where:					
	CODE is the SP7504-* num	ber (see abo	ve).			
	SIZE is the ASAP paper size	code in hex.				
	TOTAL is the total jam error	count				
	DATE is the date the jams oc	curred.				
7-507-001	Latest	*CTL	[-/-/-]			
7-507-002	Latest 1	*CTL	[-/-/-]			
7-507-003	Latest 2	*CTL	[-/-/-]			
7-507-004	Latest 3	*CTL	[-/-/-]			
7-507-005	Latest 4	*CTL	[-/-/-]			
7-507-006	Latest 5	*CTL	[-/-/-]			
7-507-007	Latest 6	*CTL	[-/-/-]			
7-507-008	Latest 7	*CTL	[-/-/-]			
7-507-009	Latest 8	*CTL	[-/-/-]			
7-507-010	Latest 9	*CTL	[-/-/-]			

	[Original Jam History]				
	Displays the original jam history of the transfer unit in groups of 10, starting with the most recent 10 jams. Display contents are as follows:				
	CODE is the SP7-505-* num	nber.			
	SIZE is the paper size code i	n hex. (See "	Paper Size Hex Codes" below.)		
7500	TOTAL is the total jam error	count (SP700	93)		
<i>75</i> 08	DATE is the date the previou	s jam occurre	d		
	Sample Display:				
	CODE: 007				
	SIZE: 05h				
	TOTAL: 0000334				
	DATE: Mon Mar 15 11:44:	50 2000			
7-508-001	Latest	*CTL	[-/-/-]		
7-508-002	Latest 1	*CTL	[-/-/-]		
7-508-003	Latest 2	*CTL	[-/-/-]		
7-508-004	Latest 3	*CTL	[-/-/-]		
7-508-005	Latest 4	*CTL	[-/-/-]		
7-508-006	Latest 5	*CTL	[-/-/-]		
7-508-007	Latest 6	*CTL	[-/-/-]		
7-508-008	Latest 7	*CTL	[-/-/-]		
7-508-009	Latest 8	*CTL	[-/-/-]		
7-508-010	Latest 9	*CTL	[-/-/-]		

### Paper Size Hex Codes

These codes are displayed by SP7507 and SP7508.

Size	Code	Size	Code	Size	Code
A4 (S)	05	A3 (L)	84	DLT (L)	AO
A5 (S)	06	A4 (L)	85	LG (L)	A4
B5 (S)	OE	A5 (L)	86	LT (L)	A6

Size	Code	Size	Code	Size	Code
LT (S)	26	B4 (L)	8D	HLT (L)	AC
HLT (S)	2C	B5 (L)	8E	Others	FF

	[Paper Jam Count by Location2] Displays the total number of jams according to the location where jams were detected.				
7509					
7-509-045	Entrance: On	*CTL	[0000 to 9999 / <b>0</b> / 1/step]		
7-509-046	Entrance: Off	*CTL	[0000 to 9999 / <b>0</b> / 1/step]		
7-509-047	Original Exit Sensor: On	*CTL	[0000 to 9999 / <b>0</b> / 1/step]		
7-509-048	Original Exit Sensor: Off	*CTL	[0000 to 9999 / <b>0</b> / 1/step]		
7-509-049	Shift Motor	*CTL	[0000 to 9999 / <b>0</b> / 1/step]		
7-509-050	Junction Motor	*CTL	[0000 to 9999 / <b>0</b> / 1/step]		
7-509-051	Exit Pressure Release Motor	*CTL	[0000 to 9999 / <b>0</b> / 1/step]		
7-509-052	Staple Motor	*CTL	[0000 to 9999 / <b>0</b> / 1/step]		
7-509-053	Feed-Out: Off	*CTL	[0000 to 9999 / <b>0</b> / 1/step]		
7-509-093	No Exit Release	*CTL	[0000 to 9999 / <b>0</b> / 1/step]		
7-509-094	Main Machine Setting Incorrect	*CTL	[0000 to 9999 / <b>0</b> / 1/step]		

	[Paper Jam Count by Location]				
7514	Displays the total number of jams according to the location where jams were detected.				
7-514-001	At Power On	*CTL	[0000 to 9999 / - / 1/step]		
7-514-003	Tray 1 : On	*CTL	[0000 to 9999 / - / 1/step]		
7-514-004	Tray2: On	*CTL	[0000 to 9999 / - / 1/step]		
7-514-005	Tray3: On	*CTL	[0000 to 9999 / - / 1/step]		
7-514-006	Tray4: On	*CTL	[0000 to 9999 / - / 1/step]		

7-514-007	LCT: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-008	Bypass: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-009	Duplex: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-010	Timing: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-011	Transport 1: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-012	Transport 2: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-013	Vertical Trans. 3: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-014	Vertical Trans. 4: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-015	LCT Transport: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-017	Registration: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-018	Fusing Entrance: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-019	Fusing Exit: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-020	Paper Exit: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-021	Bridge Tray Exit: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-022	Bridge Relay: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-024	Inverter: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-025	Duplex Exit: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-027	Duplex Entrance: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-051	Transport 1: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-052	Transport 2: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-053	Vertical Trans. 3: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-054	Vertical Trans. 4: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-055	LCT Feed Sensor: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-057	Registration Sensor: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-060	Paper Exit: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-061	Bridge: Exit: Off	*CTL	[0000 to 9999 / - / 1/step]

7-514-062	Bridge: Transport: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-064	Inverter: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-065	Duplex Exit: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-067	Duplex Entrance: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-099	Double-Feed Detection	*CTL	[0000 to 9999 / - / 1/step]
7-514-100	Entrance: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-101	Entrance: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-102	Transport : On	*CTL	[0000 to 9999 / - / 1/step]
7-514-103	Transport: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-104	Paper Exit	*CTL	[0000 to 9999 / - / 1/step]
7-514-105	Front Jogger Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-106	Rear Jogger Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-107	Shift Roller Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-108	Positioning Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-109	Ext Guide Plate Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-110	Stapler Shift Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-111	Tray Lift Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-112	Staple Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-113	Stack Height Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-114	Punch Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-115	Punch Move Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-116	S-to-S Registration Move Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-148	No Exit Response	*CTL	[0000 to 9999 / - / 1/step]
7-514-149	Main Machine Setting Incorrect	*CTL	[0000 to 9999 / - / 1/step]

7-514-150	Entrance Sensor: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-151	Entrance Sensor: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-152	Horizontal Transport Sensor: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-153	HorizontalTransportSenor: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-154	Switchback Transport Sensor: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-155	Switchback Transport Sensor: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-156	Proof Tray Exit	*CTL	[0000 to 9999 / - / 1/step]
7-514-157	Shift Tray Exit	*CTL	[0000 to 9999 / - / 1/step]
7-514-158	Booklet Stapler Exit	*CTL	[0000 to 9999 / - / 1/step]
7-514-159	Entrance Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-160	Horizontal Transport Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-161	Pre-Stack Transport Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-162	ITB Transport Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-163	Exit Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-164	TE Press Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-165	Exit Plate Guide Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-166	Punching Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-167	Punch Move Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-168	S-to-S Regist Move Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-169	Lower junction Solenoid Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-170	Jogger Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-171	Positioning Motor	*CTL	[0000 to 9999 / - / 1/step]

7-514-172	Feed Out Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-173	Corner Stapler Move Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-174	Corner Stapler Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-175	Saddle Stitch Stapler Jogger Motor	*CTL	[0000 to 9999 / - / 1 / step]
7-514-176	Saddle Stitch Stapler Jog Solenoid Motor Mr	*CTL	[0000 to 9999 / - / 1 / step]
7-514-177	Saddle Stitch Stapler Standard Fence Motor	*CTL	[0000 to 9999 / - / 1 / step]
7-514-178	Saddle Stitch Stapler Motor	*CTL	[0000 to 9999 / - / 1 / step]
7-514-179	Dynamic Roller Transport Mt	*CTL	[0000 to 9999 / - / 1/step]
7-514-180	Folder Transport Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-181	Saddle Stitch Stplr Positioning Roller Motor	*CTL	[0000 to 9999 / - / 1 / step]
7-514-182	Press-Fold Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-183	Output Tray Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-184	Shift Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-185	Shift Tray Jogger Front Motor	*CTL	[0000 to 9999 / - / 1 / step]
7-514-186	Shift Tray Jogger Rear Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-187	Shift Tray Jogger Retraction Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-188	Stack Roller Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-189	Leading Edge Guide Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-190	Job Data Error	*CTL	[0000 to 9999 / - / 1/step]

7-514-200	Entrance: On	*CTL	[0000 to 9999 / - / 1/step]
			·
7-514-201	Entrance: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-202	Proog Tray Exit: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-203	Proof Tray Exit: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-204	Right Relay: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-205	Left Relay: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-206	Left Relay: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-207	Shift Tray Exit: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-208	Shift Tray Exit: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-209	Stack: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-210	TE Stopper: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-211	TE Stopper: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-212	Booklet Folder Exit: On	*CTL	[0000 to 9999 / - / 1/step]
7-514-213	Booklet Folder Exit: Off	*CTL	[0000 to 9999 / - / 1/step]
7-514-220	Entrance Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-221	Proof Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-222	Exit Transport/Positioning Roller Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-223	Shift Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-224	Jogger Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-225	Exit Guide Plate Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-226	Feed Out Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-227	Output Tray Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-228	Positioning Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-229	Stapler Shift Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-230	Stapler Motor	*CTL	[0000 to 9999 / - / 1/step]

7-514-231	Punch Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-232	Stack Transport Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-233	LE Stopper Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-234	Folder Blade Motor	*CTL	[0000 to 9999 / - / 1/step]
7-514-248	No Exit Response	*CTL	[0000 to 9999 / - / 1/step]
7-514-249	Main Machine Setting Incorrect	*CTL	[0000 to 9999 / - / 1/step]

7515	[Original Jam Count by Detection] Displays the number of original jams detected.		
7-515-001	At Power On	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-515-013	Separation Sensor:On	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-515-014	Skew Correction Sn: On	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-515-015	Scanning Entrance Sn:On	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-515-016	Registration Sensor:On	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-515-017	Original Exit Sensor:On	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-515-063	Separation Sensor:Off	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-515-064	Skew Correction Sn:Off	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-515-065	Scanning Entrance Sn:Off	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-515-066	Registration Sensor:Off	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-515-067	Original Exit Sensor:Off	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-515-239	Original Pull	*CTL	[0000 to 9999 / <b>0</b> / 1/step]

# SP Mode Tables - SP7000-2

# SP7-XXX (Data Log)

7516	[Jam Paper Size Cnt] Displays the number of jams according to the paper size.		
7-516-005	A4 LEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-516-006	A5 LEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-516-014	B5 LEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-516-038	LT LEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-516-044	HLT LEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-516-132	A3 SEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-516-133	A4 SEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-516-134	A5 SEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-516-141	B4 SEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-516-142	B5 SEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-516-160	DLT SEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-516-164	LG SEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-516-166	LT SEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-516-172	HLT SEF	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-516-255	Others	*CTL	[0000 to 9999 / <b>0</b> / 1/step]

7519	[Paper Jam Count by Location] Displays the total number of jams according to the location where jams were detected.		
7-519-045	Entrance: On	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-519-046	Entrance: Off	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-519-047	Original Exit Sensor: On	*CTL	[0000 to 9999 / <b>0</b> / 1/step]

5

7-519-048	Original Exit Sensor: Off	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-519-049	Shift Motor	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-519-050	Junction Motor	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-519-051	Exit Pressure Release Motor	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-519-052	Staple Motor	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-519-053	Feed-Out: Off	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-519-093	No Exit Response	*CTL	[0000 to 9999 / <b>0</b> / 1/step]
7-519-094	Main Machine Setting Incorrect	*CTL	[0000 to 9999 / <b>0</b> / 1/step]

7520	[Update Log] Displays error history of firmware update in the past 10 times. [-001] is the latest error history, and [-010] is the most old error history.		
7-520-001	ErrorRecord 1	*CTL	[1 to 255 / <b>0</b> / 1/step]
7-520-002	ErrorRecord2	*CTL	[1 to 255 / <b>0</b> / 1/step]
7-520-003	ErrorRecord3	*CTL	[1 to 255 / <b>0</b> / 1/step]
7-520-004	ErrorRecord4	*CTL	[1 to 255 / <b>0</b> / 1/step]
7-520-005	ErrorRecord5	*CTL	[1 to 255 / <b>0</b> / 1/step]
7-520-006	ErrorRecord6	*CTL	[1 to 255 / <b>0</b> / 1/step]
7-520-007	ErrorRecord7	*CTL	[1 to 255 / <b>0</b> / 1/step]
7-520-008	ErrorRecord8	*CTL	[1 to 255 / <b>0</b> / 1/step]
7-520-009	ErrorRecord9	*CTL	[1 to 255 / <b>0</b> / 1/step]
7-520-010	ErrorRecord 10	*CTL	[1 to 255 / <b>0</b> / 1/step]

7617	[PM Parts Counter Display]		
7-617-001	Normal	*CTL	[0000 to 9999999 / <b>0</b> / 1/step ]

7-617-002 Df	*CTL [0	000 to 9999999 / <b>0</b> / 1/step]
--------------	---------	-------------------------------------

7618	[PM Parts Counter Reset]		
7-618-001	Normal	*CTL	[-/-/-] [Execute] Clears the counter of SP7617-001. Push [Execute] to clear the parts replacement alarm counter for the main machine.
7-618-002	Df	*CTL	[-/-/-] [Execute] Clears the counter of SP7617-002. Push [Execute] to clear the parts replacement alarm counter for the ADF.

7621	[PM Counter Display: Pages]		
7021	Displays the PM counter for each unit.		
7-621-002	#PCU	ENG	[0 to 99999999 / <b>0</b> / 1 page/step]
7-621-009	Cleaning Blade	ENG	[0 to 99999999 / <b>0</b> / 1 page/step]
7-621-018	Charge Roller	ENG	[0 to 99999999 / <b>0</b> / 1 page/step]
7-621-019	Cleaner:Charge Roller	ENG	[0 to 99999999 / <b>0</b> / 1 page/step]
7-621-021	OPC	ENG	[0 to 99999999 / <b>0</b> / 1 page/step]
7-621-022	Stripper	ENG	[0 to 99999999 / <b>0</b> / 1 page/step]
7-621-023	#Dev Unit	ENG	[0 to 99999999 / <b>0</b> / 1 page/step]
7-621-024	Developer	ENG	[0 to 99999999 / <b>0</b> / 1 page/step]
7-621-025	Development Filter	ENG	[0 to 99999999 / <b>0</b> / 1 page/step]
7-621-028	Bearing:Development Screw	ENG	[0 to 99999999 / <b>0</b> / 1 page/step]
7-621-108	Paper Transfer Roller Unit	ENG	[0 to 99999999 / <b>0</b> / 1 page/step]

7-621-115	Fusing Unit	ENG	[0 to 99999999 / <b>0</b> / 1 page/step]
7-621-116	Fusing Belt	ENG	[0 to 99999999 / <b>0</b> / 1 page/step]
7-621-118	Pressure Roller	ENG	[0 to 99999999 / <b>0</b> / 1 page/step]
7-621-119	Bearing:Pressure Roller	ENG	[0 to 99999999 / <b>0</b> / 1 page/step]
7-621-142	Waste Toner bottle	ENG	[0 to 999999999 / <b>0</b> / 1 mg]
7-621-206	ADF Pick-up Roller	ENG	[0 to 99999999 / <b>0</b> / 1 page/step]
7-621-207	ADF Supply Belt	ENG	[0 to 99999999 / <b>0</b> / 1 page/step]
7-621-208	ADF Reverse Roller	ENG	[0 to 99999999 / <b>0</b> / 1 page/step]

7622	[PM Counter Reset]		
7622	Clears the PM counter for each unit.		
7-622-002	#PCU	ENG	[0 or 1 / <b>0</b> / 1/step]
7-622-009	Cleaning Blade	ENG	[0 or 1 / <b>0</b> / 1/step]
7-622-018	Charge Roller	ENG	[0 or 1 / <b>0</b> / 1/step]
7-622-019	Cleaner:Charge Roller	ENG	[0 or 1 / <b>0</b> / 1/step]
7-622-021	OPC	ENG	[0 or 1 / <b>0</b> / 1/step]
7-622-022	Stripper	ENG	[0 or 1 / <b>0</b> / 1/step]
7-622-023	#Dev Unit	ENG	[0 or 1 / <b>0</b> / 1/step]
7-622-024	Developer	ENG	[0 or 1 / <b>0</b> / 1/step]
7-622-025	Development Filter	ENG	[0 or 1 / <b>0</b> / 1/step]
7-622-028	Bearing:Development Screw	ENG	[0 or 1 / <b>0</b> / 1/step]
7-622-108	Paper Transfer Roller Unit	ENG	[0 or 1 / <b>0</b> / 1/step]
7-622-115	Fusing Unit	ENG	[0 or 1 / <b>0</b> / 1/step]
7-622-116	Fusing Belt	ENG	[0 or 1 / <b>0</b> / 1/step]
7-622-118	Pressure Roller	ENG	[0 or 1 / <b>0</b> / 1/step]

<i>7</i> -622-119	Bearing:Pressure Roller	ENG	[0 or 1 / <b>0</b> / 1/step]
7-622-206	ADF Pick-up Roller	ENG	[0 or 1 / <b>0</b> / 1/step]
7-622-207	ADF Supply Belt	ENG	[0 or 1 / <b>0</b> / 1/step]
7-622-208	ADF Reverse Roller	ENG	[0 or 1 / <b>0</b> / 1/step]
7-622-250	SCS	ENG	[0 or 1 / <b>0</b> / 1/step]

7624	[Part Replacement Operation ON/OFF]		
7-624-002	#PCU	ENG	
7-624-009	Cleaning Blade	ENG	
7-624-018	Charge Roller	ENG	
7-624-019	Cleaner:Charge Roller	ENG	
7-624-021	OPC	ENG	[0 or 1 / <b>0</b> / 1/step]
7-624-022	Stripper	ENG	
7-624-023	#Dev Unit	ENG	
7-624-024	Developer	ENG	
7-624-025	Development Filter	ENG	

5

7-624-028	Bearing:Development Screw	ENG
7-624-108	Paper Transfer Roller Unit	ENG
7-624-115	Fusing Unit	ENG
7-624-116	Fusing Belt	ENG
7-624-118	Pressure Roller	ENG
7-624-119	Bearing:Pressure Roller	ENG
7-624-206	ADF Pick-up Roller	ENG
7-624-207	ADF Supply Belt	ENG
7-624-208	ADF Reverse Roller	ENG

[0 or 1 / **0** / 1/step]

7624-142 f/w ver 1.09:03

RTB 1

7625	[Previous Unit Counter: Pages]		
7-625-028	Bearing:Development Screw	ENG	[0 to 99999999 / <b>0</b> / 1 page]
	Displays the page counte	er for the prev	rious development mixing auger bearings.

7626	[Previous Unit Counter2: Pages]		
7-626-028	Bearing:Development Screw	ENG [0 to 99999999 / <b>0</b> / 1 page]	
	Displays the page counter for the 2nd previous development mixing auger bearings.		

7628	[PM Counter Reset]			
7020	Resets all counts for PM Counter.			
7-628-002	SCS	ENG	Executes the counter clear for all PM counters.	

<i>7</i> 801	[ROM No./ Firmware Version]		
7601	Displays firmware informatio	n for main m	achine and all other connected devices.
7-801-255	-	CTL	-

	[PM Counter Display]			
	Displays the number of sheets printed for each current maintenance unit.			
PM counters click up based on the number of A4 (LT) LEF size sheets p Therefore, the A3 (DLT) Double Count is activated. The Double Count deactivated.		•		
	installed.		,	
7-803-001	Paper	*CTL	[0 to 9999999 / <b>0</b> / 1/step]	

	[PM Counter Reset]			
7804	Clears the PM counter.			
	Press [EXECUTE] to reset the PM count.			
7-804-001	Paper	CTL	[- / <b>-</b> / - ] [Execute]	

7807	[SC/Jam Counter Reset] Clears the counters related to SC codes and paper jams.		
7-807-001	-	CTL	[- / - / - ] [Execute]

7826	[MF Error Counter] Displays the number of counts requested of the card/key counter.		
7-826-001	Error Total	*CTL	[0 to 9999999 / 0 / 1/step] A request for the count total failed at power on. This error will occur if the device is installed but disconnected.
7-826-002	Error Staple	*CTL	[0 to 9999999 / 0 / 1/step] The request for a staple count failed at power on. This error will occur if the device is installed but disconnected.

	[MF Error Counter Clear]			
7827	Clears MF Error Counter.			
	Only valid when the MK-1 has been connected.			
7-827-001	.001 -	CTL	[-/-/-]	
7-027-001		CIL	[Execute]	

7832	[Self-Diagnose Result Display]  Displays the result of the diagnostics.		
7-832-001	-	CTL	[- / <b>-</b> / - ] [Execute]

7836	[Total Memory Size] Displays the memory capacity of the controller system.		roller system.
7-836-001	Total Memory Size	CTL	[-/-/-]

	[ServiceSP Entry Code Chg Hist]			
7840	Records dates and times of resetting" for the recent 2 times	nes of resetting / changing "Service SP mode switch code 2 times.		
	(Decides whether the record is for setting changes or resets by branch number.)			
7-840-001	Change Time :Latest	*CTL	[-/-/-]	
7-840-002	Change Time : Last 1	*CTL	[-/-/-]	
7-840-101	Initialize Time : Latest	*CTL	[-/-/-]	
7-840-102	Initialize Time : Last 1	*CTL	[-/-/-]	

7852	[DF Glass Dust Check]		
	Dust Detection Counter	*ENG	[0 to 65535 / <b>0</b> / 1/step]
is a dust even when before		e starting the	points of front side scan position. When there next job, consider as same dust and doesn't scan glass part dust detect front is ON.

	Dust Counter Clear Counter	*ENG	[0 to 65535 / <b>0</b> / 1/step]		
002	For checking front side scan position move effect. Counts the times that strips were avoided by detecting dust and move the sheet thrugh DF scan position. Counts when SP4-020-001: DF scan glass part dust detect front is ON.				
	Dust Detection Counter: Back	*ENG	[0 to 65535 / <b>0</b> / 1/step]		
003	For Single Path simultaneous duplex models only. Records the times detecting dust at all points of rear side scan position. When there is a same dust even when before starting the next job, consider as same dust and doesn't count. * Counts when SP4-020-011: DF				

	[Assert Info.]			
7901	Records the location where a problem is detected in the program. Used for debugging.			
7-901-001	File Name	*CTL	[-/-/-]	
7-901-002	Number of Lines	*CTL	[-/-/-]	
7-901-003	Location	*CTL	[-/-/-]	

7942	[PM Counter Display:Distance(%)]		
7942	Displays the PM counter (distance (%)) for each unit.		
7-942-002	#PCU	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-942-009	Cleaning Blade	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-942-018	Charge Roller	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-942-019	Cleaner:Charge Roller	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-942-021	OPC	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-942-022	Stripper	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-942-023	#Dev Unit	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-942-024	Developer	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-942-025	Development Filter	ENG	[0 to 255 / <b>0</b> / 1%/step]

7-942-028	Bearing:Development Screw	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-942-108	Paper Transfer Roller Unit	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-942-115	Fusing Unit	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-942-116	Fusing Belt	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-942-118	Pressure Roller	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-942-119	Bearing:Pressure Roller	ENG	[0 to 255 / <b>0</b> / 1%/step]

7944	[PM Counter Display: Distance]				
/944	Displays the PM counter (distance (mm)) for each unit.				
7-944-002	#PCU	*ENG	[0 to 4294967295 / <b>0</b> / 1 mm/step]		
7-944-009	Cleaning Blade	*ENG	[0 to 4294967295 / <b>0</b> / 1 mm/step]		
7-944-018	Charge Roller	*ENG	[0 to 4294967295 / <b>0</b> / 1 mm/step]		
7-944-019	Cleaner:Charge Roller	*ENG	[0 to 4294967295 / <b>0</b> / 1 mm/step]		
7-944-021	OPC	*ENG	[0 to 4294967295 / <b>0</b> / 1 mm/step]		
7-944-022	Stripper	*ENG	[0 to 4294967295 / <b>0</b> / 1 mm/step]		
7-944-023	#Dev Unit	*ENG	[0 to 4294967295 / <b>0</b> / 1 mm/step]		
7-944-024	Developer	*ENG	[0 to 4294967295 / <b>0</b> / 1 mm/step]		
7-944-025	Development Filter	*ENG	[0 to 4294967295 / <b>0</b> / 1 mm/step]		
7-944-028	Bearing:Development Screw	*ENG	[0 to 4294967295 / <b>0</b> / 1 mm/step]		
7-944-108	Paper Transfer Roller Unit	*ENG	[0 to 4294967295 / <b>0</b> / 1 mm/step]		
7-944-115	Fusing Unit	*ENG	[0 to 4294967295 / <b>0</b> / 1 mm/step]		
7-944-116	Fusing Belt	*ENG	[0 to 4294967295 / <b>0</b> / 1 mm/step]		
7-944-118	Pressure Roller	*ENG	[0 to 4294967295 / <b>0</b> / 1 mm/step]		
7-944-119	Bearing:Pressure Roller	*ENG	[0 to 4294967295 / <b>0</b> / 1 mm/step]		

7051	[Remain Day Counter: Pages]			
<i>7</i> 951	-			
7-951-002	#PCU	ENG	[0 to 255 / <b>255</b> / 1day/step]	
7-951-009	Cleaning Blade	ENG	[0 to 255 / <b>255</b> / 1 day/step]	
<i>7</i> -951-018	Charge Roller	ENG	[0 to 255 / <b>255</b> / 1 day/step]	
<i>7</i> -951-019	Cleaner:Charge Roller	ENG	[0 to 255 / <b>255</b> / 1day/step]	
<i>7</i> -951-021	OPC	ENG	[0 to 255 / <b>255</b> / 1 day/step]	
<i>7</i> -951-022	Stripper	ENG	[0 to 255 / <b>255</b> / 1 day/step]	
<i>7</i> -951-023	#Dev Unit	ENG	[0 to 255 / <b>255</b> / 1day/step]	
7-951-024	Developer	ENG	[0 to 255 / <b>255</b> / 1 day/step]	
7-951-025	Development Filter	ENG	[0 to 255 / <b>255</b> / 1 day/step]	
7-951-028	Bearing:Development Screw	ENG	[0 to 255 / <b>255</b> / 1day/step]	
7-951-108	Paper Transfer Roller Unit	ENG	[0 to 255 / <b>255</b> / 1day/step]	
7-951-115	Fusing Unit	ENG	[0 to 255 / <b>255</b> / 1day/step]	
<i>7</i> -951-116	Fusing Belt	ENG	[0 to 255 / <b>255</b> / 1day/step]	
7-951-118	Pressure Roller	ENG	[0 to 255 / <b>255</b> / 1day/step]	
7-951-119	Bearing:Pressure Roller	ENG	[0 to 255 / <b>255</b> / 1day/step]	
7-951-142	Waste Toner bottle	ENG	[0 to 255 / <b>255</b> / 1day/step]	
7-951-206	ADF Pick-up Roller	ENG	[0 to 255 / <b>255</b> / 1day/step]	
7-951-207	ADF Supply Belt	ENG	[0 to 255 / <b>255</b> / 1 day/step]	
7-951-208	ADF Reverse Roller	ENG	[0 to 255 / <b>255</b> / 1day/step]	

7952	[Remain Day Counter: Distance]		
7432	-		
7-952-002	#PCU	ENG	[0 to 255 / <b>255</b> / 1 day/step]

I I		
Cleaning Blade	ENG	[0 to 255 / <b>255</b> / 1 day/step]
Charge Roller	ENG	[0 to 255 / <b>255</b> / 1day/step]
Cleaner:Charge Roller	ENG	[0 to 255 / <b>255</b> / 1day/step]
OPC	ENG	[0 to 255 / <b>255</b> / 1day/step]
Stripper	ENG	[0 to 255 / <b>255</b> / 1day/step]
#Dev Unit	ENG	[0 to 255 / <b>255</b> / 1day/step]
Developer	ENG	[0 to 255 / <b>255</b> / 1day/step]
Development Filter	ENG	[0 to 255 / <b>255</b> / 1day/step]
Bearing:Development Screw	ENG	[0 to 255 / <b>255</b> / 1 day/step]
Paper Transfer Roller Unit	ENG	[0 to 255 / <b>255</b> / 1 day/step]
Fusing Unit	ENG	[0 to 255 / <b>255</b> / 1day/step]
Fusing Belt	ENG	[0 to 255 / <b>255</b> / 1day/step]
Pressure Roller	ENG	[0 to 255 / <b>255</b> / 1day/step]
Bearing:Pressure Roller	ENG	[0 to 255 / <b>255</b> / 1day/step]
	Charge Roller Cleaner:Charge Roller OPC Stripper #Dev Unit Developer Development Filter Bearing:Development Screw Paper Transfer Roller Unit Fusing Unit Fusing Belt Pressure Roller	Charge Roller ENG Cleaner:Charge Roller ENG Cleaner:Charge Roller ENG CPC ENG Stripper ENG #Dev Unit ENG Developer ENG Development Filter ENG Bearing:Development ENG Paper Transfer Roller Unit ENG Fusing Unit ENG Pressure Roller ENG Pressure Roller ENG

7054	[PM Counter Display: Pages (%)]		
7954	-		
7-954-002	#PCU	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-954-009	Cleaning Blade	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-954-018	Charge Roller	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-954-019	Cleaner:Charge Roller	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-954-021	OPC	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-954-022	Stripper	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-954-023	#Dev Unit	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-954-024	Developer	ENG	[0 to 255 / <b>0</b> / 1%/step]

7-954-025	Development Filter	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-954-028	Bearing:Development Screw	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-954-108	Paper Transfer Roller Unit	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-954-115	Fusing Unit	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-954-116	Fusing Belt	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-954-118	Pressure Roller	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-954-119	Bearing:Pressure Roller	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-954-142	Waste Toner bottle	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-954-206	ADF Pick-up Roller	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-954-207	ADF Supply Belt	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-954-208	ADF Reverse Roller	ENG	[0 to 255 / <b>0</b> / 1%/step]

7955	[Estimated Remain Pages]		
7933	-		
7-955-002	#PCU	ENG	[0 to 9999999 / <b>0</b> / 1 page/step]
7-955-009	Cleaning Blade	ENG	[0 to 9999999 / <b>0</b> / 1 page/step]
7-955-018	Charge Roller	ENG	[0 to 9999999 / <b>0</b> / 1 page/step]
7-955-019	Cleaner:Charge Roller	ENG	[0 to 9999999 / <b>0</b> / 1 page/step]
7-955-021	OPC	ENG	[0 to 9999999 / <b>0</b> / 1 page/step]
7-955-022	Stripper	ENG	[0 to 9999999 / <b>0</b> / 1 page/step]
7-955-023	#Dev Unit	ENG	[0 to 9999999 / <b>0</b> / 1 page/step]
7-955-024	Developer	ENG	[0 to 9999999 / <b>0</b> / 1 page/step]
7-955-025	Development Filter	ENG	[0 to 9999999 / <b>0</b> / 1 page/step]
7-955-028	Bearing:Development Screw	ENG	[0 to 9999999 / <b>0</b> / 1 page/step]

7-955-108	Paper Transfer Roller Unit	ENG	[0 to 9999999 / <b>0</b> / 1 page/step]
7-955-115	Fusing Unit	ENG	[0 to 9999999 / <b>0</b> / 1 page/step]
7-955-116	Fusing Belt	ENG	[0 to 9999999 / <b>0</b> / 1 page/step]
7-955-118	Pressure Roller	ENG	[0 to 9999999 / <b>0</b> / 1 page/step]
7-955-119	Bearing:Pressure Roller	ENG	[0 to 9999999 / <b>0</b> / 1 page/step]

7956	[Estimated Remain Days]		
7930	-		
7-956-002	#PCU	ENG	[0 to 255 / <b>255</b> / 1 day/step]
7-956-009	Cleaning Blade	ENG	[0 to 255 / <b>255</b> / 1 day/step]
7-956-018	Charge Roller	ENG	[0 to 255 / <b>255</b> / 1 day/step]
7-956-019	Cleaner:Charge Roller	ENG	[0 to 255 / <b>255</b> / 1 day/step]
7-956-021	OPC	ENG	[0 to 255 / <b>255</b> / 1 day/step]
7-956-022	Stripper	ENG	[0 to 255 / <b>255</b> / 1 day/step]
7-956-023	#Dev Unit	ENG	[0 to 255 / <b>255</b> / 1 day/step]
7-956-024	Developer	ENG	[0 to 255 / <b>255</b> / 1 day/step]
7-956-025	Development Filter	ENG	[0 to 255 / <b>255</b> / 1 day/step]
7-956-028	Bearing:Development Screw	ENG	[0 to 255 / <b>255</b> / 1 day/step]
7-956-108	Paper Transfer Roller Unit	ENG	[0 to 255 / <b>255</b> / 1 day/step]
7-956-115	Fusing Unit	ENG	[0 to 255 / <b>255</b> / 1 day/step]
7-956-116	Fusing Belt	ENG	[0 to 255 / <b>255</b> / 1 day/step]
7-956-118	Pressure Roller	ENG	[0 to 255 / <b>255</b> / 1 day/step]
7-956-119	Bearing:Pressure Roller	ENG	[0 to 255 / <b>255</b> / 1 day/step]
7-956-142	Waste Toner bottle	ENG	[0 to 255 / <b>255</b> / 1 day/step]

7-956-206	ADF Pick-up Roller	ENG	[0 to 255 / <b>255</b> / 1day/step]
7-956-207	ADF Supply Belt	ENG	[0 to 255 / <b>255</b> / 1 day/step]
7-956-208	ADF Reverse Roller	ENG	[0 to 255 / <b>255</b> / 1 day/step]

7040	[Estimated Usage Rate]		
7960	-		
7-960-002	#PCU	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-960-009	Cleaning Blade	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-960-018	Charge Roller	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-960-019	Cleaner:Charge Roller	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-960-021	OPC	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-960-022	Stripper	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-960-023	#Dev Unit	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-960-024	Developer	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-960-025	Development Filter	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-960-028	Bearing:Development Screw	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-960-108	Paper Transfer Roller Unit	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-960-115	Fusing Unit	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-960-116	Fusing Belt	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-960-118	Pressure Roller	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-960-119	Bearing:Pressure Roller	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-960-142	Waste Toner bottle	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-960-206	ADF Pick-up Roller	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-960-207	ADF Supply Belt	ENG	[0 to 255 / <b>0</b> / 1%/step]
7-960-208	ADF Reverse Roller	ENG	[0 to 255 / <b>0</b> / 1%/step]

7970	[Cumulative Counter]			
7-970-001	Rotation:Opc Drive Unit	*ENG	[0 to 9999999 / <b>0</b> / 1 m/step]	
	Displays running distance	e count since	first use.	
7-970-008	Rotation:Fusing Drive Unit	*ENG	[0 to 9999999 / <b>0</b> / 1 m/step]	
	Displays running distance count since first use.			
7-970-010	Count:Paper Transfer On-Off Drive Unit	*ENG	[0 to 9999999 / <b>0</b> / 1/step]	
	Displays operating time count since first use.			
7.070.011	Page:Feed Drive Unit	*ENG	[0 to 9999999 / <b>0</b> / 1 page/step]	
7-970-011	Displays sheets count since first use.			
7-970-012	Page:Registration Drive Unit	*ENG	[0 to 9999999 / <b>0</b> / 1 page/step]	
	Displays sheets count since first use.			
7-970-014	Page:Exit Drive Unit	*ENG	[0 to 9999999 / <b>0</b> / 1 page/step]	

## CDQ V

# SP Mode Tables - SP8000-1

### SP8-XXX (Data Log 2)

Many of these counters are provided for features that are currently not available, such as sending color faxes, and so on. However, here are some Group 8 codes that when used in combination with others, can provide useful information.

SP Numbers	What They Do
SP8211 to SP8216	The number of pages scanned to the document server.
SP8401 to SP8406	The number of pages printed from the document server
SP8691 to SP8696	The number of pages sent from the document server

Specifically, the following questions can be answered:

- How is the document server actually being used?
- What application is using the document server most frequently?
- What data in the document server is being reused?

Most of the SPs in this group are prefixed with a letter that indicates the mode of operation (the mode of operation is referred to as an "application"). Before reading the Group 8 Service Table, make sure that you understand what these prefixes mean.

Prefixes	What it means		
T:	Total: (Grand Total).	Grand total of the items counted for all applications (C, F, P, etc.).	
C:	Copy application.		
F:	Fax application.	Totals (pages, jobs, etc.) executed for each application	
P:	Print application.	when the job was not stored on the document server.	
S:	Scan application.		

5

L:	Local storage (document server)	Totals (jobs, pages, etc.) for the document server. The L: counters work differently case by case. Sometimes, they count jobs/pages stored on the document server; this can be in document server mode (from the document server window), or from another mode, such as from a printer driver or by pressing the Store File button in the Copy mode window. Sometimes, they include occasions when the user uses a file that is already on the document server. Each counter will be discussed case by case.
O:	Other applications (external network applications, for example)	Refers to network applications such as Web Image Monitor. Utilities developed with the SDK (Software Development Kit) will also be counted with this group in the future.

The Group 8 SP codes are limited to 17 characters, forced by the necessity of displaying them on the small LCDs of printers and faxes that also use these SPs. Read over the list of abbreviations below and refer to it again if you see the name of an SP that you do not understand.

### Keys and abbreviations in Data Log 2

Abbreviation	What it means
/	"By", e.g. "T:Jobs/Apl" = Total Jobs "by" Application
>	More (2> "2 or more", 4> "4 or more"
AddBook	Address Book
Apl	Application
B/W	Black & White
Bk	Black
С	Cyan
ColCr	Color Create
ColMode	Color Mode
Comb	Combine
Comp	Compression

Abbreviation	What it means
Deliv	Delivery
DesApl	Designated Application. The application (Copy, Fax, Scan, Print) used to store the job on the document server, for example.
Dev Counter	Development Count, no. of pages developed.
Dup, Duplex	Duplex, printing on both sides
Emul	Emulation
FC	Full Color
FIN	Post-print processing, i.e. finishing (punching, stapling, etc.)
Full Bleed	No Margins
GenCopy	Generation Copy Mode
GPC	Get Print Counter. For jobs 10 pages or less, this counter does not count up. For jobs larger than 10 pages, this counter counts up by the number that is in excess of 10 (e.g., for an 11-page job, the counter counts up 11-10 = 1)
IFax	Internet Fax
ImgEdt	Image Edit performed on the original with the copier GUI, e.g. border removal, adding stamps, page numbers, etc.
K	Black (YMCK)
LS	Local Storage. Refers to the document server.
LSize	Large (paper) Size
Mag	Magnification
МС	One color (monochrome)
NRS	New Remote Service, which allows a service center to monitor machines remotely. "NRS" is used overseas, "CSS" is used in Japan.
Org	Original for scanning
OrgJam	Original Jam

Abbreviation	What it means	
Palm 2	Print Job Manager/Desk Top Editor: A pair of utilities that allows print jobs to be distributed evenly among the printers on the network, and allows files to moved around, combined, and converted to different formats.	
PC	Personal Computer	
PGS	Pages. A page is the total scanned surface of the original. Duplex pages count as two pages, and A3 simplex count as two pages if the A3/DLT counter SP is switched ON.	
PJob	Print Jobs	
Ppr	Paper	
PrtJam	Printer (plotter) Jam	
PrtPGS	Print Pages	
R	Red (Toner Remaining). Applies to the wide format model A2 only. This machine is under development and currently not available.	
Rez	Resolution	
SC	Service Code (Error SC code displayed)	
Scn	Scan	
Sim, Simplex	Simplex, printing on 1 side.	
S-to-Email	Scan-to-E-mail	
SMC	SMC report printed with SP5990. All of the Group 8 counters are recorded in the SMC report.	
Svr	Server	
TonEnd	Toner End	
TonSave	Toner Save	
TXJob	Send, Transmission	
YMC	Yellow, Magenta, Cyan	
YMCK	Yellow, Magenta, Cyan, Black	



• All of the Group 8 SPs are able to reset by "SP5 801 1 Memory All Clear".

8001	[T:Total Jobs]	*CTL	These SPs count the number of times each
8002	[C:Total Jobs]	*CTL	application is used to do a job. [0 to 99999999 / - / 1]
8003	[F:Total Jobs]	*CTL	Note: The L: counter is the total number of
8004	[P:Total Jobs]	*CTL	times the other applications are used to send a job to the document server, plus the
8005	[S:Total Jobs]	*CTL	number of times a file already on the
8006	[L:Total Jobs]	*CTL	document server is used.

- These SPs reveal the number of times an application is used, not the number of pages processed.
- When an application is opened for image input or output, this counts as one job.
- Interrupted jobs (paper jams, etc.) are counted, even though they do not finish.
- Only jobs executed by the customer are counted. Jobs executed by the customer engineer using the SP modes are not counted.
- When using secure printing (when a password is required to start the print job), the job is counted at the time when either "Delete Data" or "Specify Output" is specified.
- A job is counted as a fax job when the job is stored for sending.
- When a fax is received to fax memory, the F: counter increments but the L: counter does not (the document server is not used).
- A fax broadcast counts as one job for the F: counter (the fax destinations in the broadcast are not counted separately).
- A fax broadcast is counted only after all the faxes have been sent to their destinations. If one
  transmission generates an error, then the broadcast will not be counted until the transmission has
  been completed.
- A printed fax report counts as one job for the F: counter.
- The F: counter does not distinguish between fax sending or receiving.
- When a copy job on the document server is printed, SP8022 also increments, and when a print job stored on the document server is printed, SP8024 also increments.
- When an original is both copied and stored on the document server, the C: and L: counters both increments.
- When a print job is stored on the document server, only the L: counter increments.
- When the user presses the Document Server button to store the job on the document server, only
  the L: counter increments.

- When the user enters document server mode and prints data stored on the document server, only the L: counter increments.
- When an image received from Palm 2 is received and stored, the L: counter increments.
- When the customer prints a report (user code list, for example), the O: counter increments. However, for fax reports and reports executed from the fax application, the F: counter increments.

8011	[T:Jobs/LS]	*CTL	These SPs count the number of jobs stored to
8012	[C:Jobs/LS]	*CTL	the document server by each application, to
8013	[F:Jobs/LS]	*CTL	reveal how local storage is being used for input.
8014	[P:Jobs/LS]	*CTL	[0 to 9999999 / <b>0</b> / 1]
8015	[S:Jobs/LS]	*CTL	The L: counter counts the number of jobs stored from within the document server mode
8016	[L:Jobs/LS]	*CTL	screen at the operation panel.
801 <i>7</i>	[O:Jobs/LS]	*CTL	

- When a scan job is sent to the document server, the S: counter increments. When you enter document server mode and then scan an original, the L: counter increments.
- When a print job is sent to the document server, the P: counter increments.
- When a network application sends data to the document server, the O: counter increments.
- When an image from Palm 2 is stored on the document server, the O: counter increments.
- When a fax is sent to the document server, the F: counter increments.

8021	[T:Pjob/LS]	*CTL	
8022	[C:Pjob/LS]	*CTL	These SPs reveal how files printed from the
8023	[F:Pjob/LS]	*CTL	document server were stored on the document server originally.
8024	[P:Pjob/LS]	*CTL	[0 to 9999999 / <b>0</b> / 1]
8025	[S:Pjob/LS]	*CTL	The L: counter counts the number of jobs stored from within the document server mode
8026	[L:Pjob/LS]	*CTL	screen at the operation panel.
8027	[O:Pjob/LS]	*CTL	

 When a copy job stored on the document server is printed with another application, the C: counter increments.

5

- When an application like DeskTopBinder merges a copy job that was stored on the document server with a print job that was stored on the document server, the C: and P: counters both increment.
- When a job already on the document server is printed with another application, the L: counter increments.
- When a scanner job stored on the document server is printed with another application, the S: counter increments. If the original was scanned from within document server mode, then the L: counter increments.
- When images stored on the document server by a network application (including Palm 2), are printed with another application, the O: counter increments.
- When a copy job stored on the document server is printed with a network application (Web Image Monitor, for example), the C: counter increments.
- When a fax on the document server is printed, the F: counter increments.

8031	[T:Pjob/DesApl]	*CTL	
8032	[C:Pjob/DesApl]	*CTL	These SPs reveal what applications were
8033	[F:Pjob/DesApl]	*CTL	used to output documents from the document server.
8034	[P:Pjob/DesApl]	*CTL	[0 to 9999999 / <b>0</b> / 1]
8035	[S:Pjob/DesApl]	*CTL	The L: counter counts the number of jobs printed from within the document server
8036	[L:Pjob/DesApl]	*CTL	mode screen at the operation panel.
803 <i>7</i>	[O:Pjob/DesApl]	*CTL	

- When documents already stored on the document server are printed, the count for the application that started the print job is incremented.
- When the print job is started from a network application (Desk Top Binder, Web Image Monitor, etc.) the L: counter increments.

8041	[T:TX Jobs/LS]	*CTL	These SPs count the applications that stored
8042	[C:TX Jobs/LS]	*CTL	files on the document server that were later accessed for transmission over the telephone
8043	[F:TX Jobs/LS]	*CTL	line or over a network (attached to an e-mail, or as a fax image by I-Fax).
8044	[P:TX Jobs/LS]	*CTL	[0 to 9999999 / <b>0</b> / 1]
8045	[S:TX Jobs/LS]	*CTL	Note: Jobs merged for sending are counted
8046	[L:TX Jobs/LS]	*CTL	separately.  The L: counter counts the number of jobs
8047	[O:TX Jobs/LS]	*CTL	scanned from within the document server mode screen at the operation panel.

- When a stored copy job is sent from the document server, the C: counter increments.
- When images stored on the document server by a network application or Palm2 are sent as an email, the O: counter increments.

8051	[T:TX Jobs/DesApl]	*CTL	There CDs accomplished and the conditions of the
8052	[C:TX Jobs/DesApl]	*CTL	These SPs count the applications used to send files from the document server over the
8053	[F:TX Jobs/DesApl]	*CTL	telephone line or over a network (attached to an e-mail, or as a fax image by I-Fax). Jobs
8054	[P:TX Jobs/DesApl]	*CTL	merged for sending are counted separately.
8055	[S:TX Jobs/DesApl]	*CTL	[0 to 9999999 / 0 / 1] The L: counter counts the number of jobs sent
8056	[L:TX Jobs/DesApl]	*CTL	from within the document server mode screen at the operation panel.
8057	[O:TX Jobs/DesApl]	*CTL	a the operation panet.

• If the send is started from Desk Top Binder or Web Image Monitor, for example, then the O: counter increments.

8061	[T:FIN Jobs]
8001	These SPs total the finishing methods. The finishing method is specified by the application.
8062	[C:FIN Jobs]
	These SPs total finishing methods for print jobs only. The finishing method is specified by the application.

	[F:FIN Jobs]			
8063	These SPs total finishing methods for fax jobs only. The finishing method is specified by the application.			
	Note: Finishing features for fax	jobs are no	ot available at this time.	
	[P:FIN Jobs]			
8064	These SPs total finishing method the application.	s for print j	obs only. The finishing method is specified by	
	[S:FIN Jobs]			
8065	the application.		iobs only. The finishing method is specified by	
	Note: Finishing features for scar	n jobs are r	not available at this time.	
	[L:FIN Jobs]			
8066	These SPs total finishing methods for jobs output from within the document server mode screen at the operation panel. The finishing method is specified from the print window within document server mode.			
	[O:FIN Jobs]			
8067	These SPs total finishing methods for jobs executed by an external application, over the network. The finishing method is specified by the application.			
001	Sort	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	
001	Number of jobs started in Sort mode.			
002	Stack	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	
002	Number of jobs started out of Sort mode.			
000	Staple	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	
003	Number of jobs started in Staple mode.			
	Booklet	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	
004	Number of jobs started in Bookl counter also increments.	let mode. I	f the machine is in staple mode, the Staple	

	Z-Fold	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	
005	Number of jobs started In any mode other than the Booklet mode and set for folding (Z-fold).			
	Punch	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	
006	Number of jobs started in Punch mode. When Punch is set for a print job, the P: counter increments. (See SP8-064-6.)			
007	Other	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	
007	(Reserved)			
008	Inside-Fold	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	
009	Three-IN-Fold	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	
010	Three-OUT-Fold	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	
011	Four-Fold	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	
012	KANNON-Fold	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	
013	Perfect-Bind	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	
014	Ring-Bind	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	

8071	[T:Jobs/PGS]
	These SPs count the number of jobs broken down by the number of pages in the job, regardless of which application was used.
	[C:Jobs/PGS]
8072	These SPs count and calculate the number of copy jobs by size based on the number of pages in the job.
	[F:Jobs/PGS]
8073	These SPs count and calculate the number of fax jobs by size based on the number of pages in the job.
8074	[P:Jobs/PGS]
	These SPs count and calculate the number of print jobs by size based on the number of pages in the job.

	[S:Jobs/PGS]				
8075	These SPs count and calculate to pages in the job.	the number	of scan jobs by size based on the number of		
	[L:Jobs/PGS]				
8076	These SPs count and calculate the number of jobs printed from within the document server mode window at the operation panel, by the number of pages in the job.				
	[O:Jobs/PGS]				
8077	These SPs count and calculate to Monitor, Palm 2, etc.) by size by		of "Other" application jobs (Web Image e number of pages in the job.		
001	1 Page	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
002	2 Pages	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
003	3 Pages	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
004	4 Pages	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
005	5 Pages	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
006	6 to 10 Pages	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
007	11 to 20 Pages	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
008	21 to 50 Pages	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
009	51 to 100 Pages	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
010	101 to 300 Pages	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
011	301 to 500 Pages	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
012	501 to 700 Pages	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
013	701 to 1000 Pages	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
014	1001 to Pages	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		

- For example: When a copy job stored on the document server is printed in document server mode, the appropriate L: counter (SP8076 0xx) increments.
- Printing a fax report counts as a job and increments the F: counter (SP 8073).
- Interrupted jobs (paper jam, etc.) are counted, even though they do not finish.
- If a job is paused and re-started, it counts as one job.

- If the finisher runs out of staples during a print and staple job, then the job is counted at the time the error occurs.
- For copy jobs (SP 8072) and scan jobs (SP 8075), the total is calculated by multiplying the number of sets of copies by the number of pages scanned. (One duplex page counts as 2.)
- The first test print and subsequent test prints to adjust settings are added to the number of pages of the copy job (SP 8072).
- When printing the first page of a job from within the document server screen, the page is counted.

	[T:FAX TX Jobs]		
These SPs count the total number of jobs (color or black-and-white) sent by fax, edirectly or using a file stored on the document server, on a telephone line.  Note: Color fax sending is not available at this time.		•	
		t this time.	
001	B/W	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]

	[F: FAX TX Jobs]		
These SPs count the total number of jobs (color or black-and-white) sent by fax on a telephone line.		color or black-and-white) sent by fax directly	
	Note: Color fax sending is not o	available a	t this time.
001	B/W	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]

- These counters count jobs, not pages.
- This SP counts fax jobs sent over a telephone line with a fax application, including documents stored on the document server.
- If the mode is changed during the job, the job will count with the mode set when the job started.
- If the same document is faxed to both a public fax line and an I-Fax at a destination where both are available, then this counter increments, and the I-Fax counter (8 12x) also increments.
- The fax job is counted when the job is scanned for sending, not when the job is sent.

	[T:IFAX TX Jobs]
8121	These SPs count the total number of jobs (color or black-and-white) sent, either directly or using a file stored on the document server, as fax images using I-Fax.
	Note: Color fax sending is not available at this time.

	[F: IFAX TX Jobs]		
8123	These SPs count the number of jobs (color or black-and-white) sent (not stored on t document server), as fax images using I-Fax.		
	Note: Color fax sending is not o	available at this time.	
001	B/W	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]

- These counters count jobs, not pages.
- The counters for color are provided for future use; the color fax feature is not available at this time.
- The fax job is counted when the job is scanned for sending, not when the job is sent.

	[T:S-to-Email Jobs]				
8131	These SPs count the total number of jobs (color or black-and-white) scanned and attached to an e-mail, regardless of whether the document server was used or not.				
	[S: S-to-Email Jobs]				
8135	These SPs count the number of jobs (color or black-and-white) scanned and attache e-mail, without storing the original on the document server.				
001	B/W	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]		
002	Color	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]		
003	ACS	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]		

- These counters count jobs, not pages.
- If the job is stored on the document server, after the job is stored it is determined to be color or black-and-white then counted.
- If the job is cancelled during scanning, or if the job is cancelled while the document is waiting to be sent, the job is not counted.
- If the job is cancelled during sending, it may or may not be counted, depending on what stage of the process had been reached when the job was cancelled.
- If several jobs are combined for sending to the Scan Router, Scan-to-Email, or Scan-to-PC, or if
  one job is sent to more than one destination. each send is counted separately. For example, if the
  same document is sent by Scan-to-Email as well as Scan-to-PC, then it is counted twice (once for
  Scan-to-Email and once for Scan-to-PC).

	[T:Deliv Jobs/Svr]				
These SPs count the total number of jobs (color or black-and-white) scanned are a Scan Router server.		color or black-and-white) scanned and sent to			
	[S: Deliv Jobs/Svr]				
8145	These SPs count the number of jobs (color or black-and-white) scanned in scar and sent to a Scan Router server.		or black-and-white) scanned in scanner mode		
001	B/W	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]		
002	Color	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]		
003	ACS	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]		

- These counters count jobs, not pages.
- The jobs are counted even though the arrival and reception of the jobs at the Scan Router server cannot be confirmed.
- If even one color image is mixed with black-and-white images, then the job is counted as a "Color" job.
- If the job is cancelled during scanning, or if the job is cancelled while the document is waiting to be delivered, the job is not counted.
- If the job is cancelled during sending, it may or may not be counted, depending on what stage of the process had been reached when the job was cancelled.
- Even if several files are combined for sending, the transmission counts as one job.

	[T:Deliv Jobs/PC]			
8151	These SPs count the total number of jobs (color or black-and-white) scanned and sent to a folder on a PC (Scan-to-PC).  Note: At the present time, 8 151 and 8 155 perform identical counts.			
	[S:Deliv Jobs/PC]			
8155	These SPs count the total number of jobs (color or black-and-white) scanned of with Scan-to-PC.		color or black-and-white) scanned and sent	
001	B/W	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	
002	Color	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	
003	ACS	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	

• These counters count jobs, not pages.

- If the job is cancelled during scanning, it is not counted.
- If the job is cancelled while it is waiting to be sent, the job is not counted.
- If the job is cancelled during sending, it may or may not be counted, depending on what stage of the process had been reached when the job was cancelled.
- Even if several files are combined for sending, the transmission counts as one job.

8161	[T:PCFAX TX Jobs]	*CTL	These SPs count the number of PC Fax
8163	[F:PCFAX TX Jobs]	*CTL	transmission jobs. A job is counted from when it is registered for sending, not when it is sent.  [0 to 9999999 / 0 / 1 / step]  Note: At the present time, these counters
		perform identical counts.	

• This counts fax jobs started from a PC using a PC fax application, and sending the data out to the destination from the PC through the copier.

0171	[T:Deliv Jobs/WSD/DSM]		
These SPs count the pages scanned by WS.		S.	
0175	[S:Deliv Jobs/WSD/DSM]		
8175	These SPs count the pages scan	ned by WS	S.
001	B/W	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]
002	Color	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]
003	ACS	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]

0101	[T:Scan to Media Jobs]			
These SPs count the scanned pages in a media by the scanner application.		edia by the scanner application.		
0105	[S:Scan to Media Jobs]			
8185	These SPs count the scanned po	iges in a m	edia by the scanner application.	
001	B/W	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	
002	Color	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	
003	ACS	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	

8191	[T:Total Scan PGS]	*CTL	
8192	[C:Total Scan PGS]	*CTL	These SPs count the pages scanned by each
8193	[F:Total Scan PGS]	*CTL	application that uses the scanner to scan images.
8195	[S:Total Scan PGS]	*CTL	[0 to 9999999 / <b>0</b> / 1]
8196	[L:Total Scan PGS]	*CTL	

- SP 8 191 to 8 196 count the number of scanned sides of pages, not the number of physical pages.
- These counters do not count reading user stamp data, or reading color charts to adjust color.
- Previews done with a scanner driver are not counted.
- A count is done only after all images of a job have been scanned.
- Scans made in SP mode are not counted.

#### **Examples**

- If 3 B5 pages and 1 A3 page are scanned with the scanner application but not stored, the S: count is 4.
- If both sides of 3 A4 sheets are copied and stored to the document server using the Store File button in the Copy mode window, the C: count is 6 and the L: count is 6.
- If both sides of 3 A4 sheets are copied but not stored, the C: count is 6.
- If you enter document server mode then scan 6 pages, the L: count is 6.

	[T:LSize Scan PGS]	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]				
8201	These SPs count the total number of large pages input with the scanner for scan and copy jobs. Large size paper (A3/DLT) scanned for fax transmission are not counted.						
	<b>Note:</b> These counters are displayed in the SMC Report, and in the User Tools display.						
	[F: LSize Scan PGS]	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]				
8203	These SPs count the total number of large pages input with the scanner for fax transmission.						
	Note: These counters are displayed in the SMC Report, and in the User Tools display.						
	[S:LSize Scan PGS]	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]				
8205	These SPs count the total number of large pages input with the scanner for scan jobs only. Large size paper (A3/DLT) scanned for fax transmission are not counted.						
	Note: These counters are displayed in the SMC Report, and in the User Tools display.						

8211	[T:Scan PGS/LS]	*CTL	These SPs count the number of pages		
8212	[C:Scan PGS/LS]	*CTL	scanned into the document server. [0 to 9999999 / <b>0</b> / 1]		
8213	[F:Scan PGS/LS]	*CTL	The L: counter counts the number of pages		
8215	[S:Scan PGS/LS]	*CTL	stored from within the document server mode screen at the operation panel, and with the		
8216	16 [L:Scan PGS/LS]		Store File button from within the Copy mode screen		

- Reading user stamp data is not counted.
- If a job is cancelled, the pages output as far as the cancellation are counted.
- If the scanner application scans and stores 3 B5 sheets and 1 A4 sheet, the S: count is 4.
- If pages are copied but not stored on the document server, these counters do not change.
- If both sides of 3 A4 sheets are copied and stored to the document server, the C: count is 6 and the L: count is 6.
- If you enter document server mode then scan 6 pages, the L: count is 6.

	[ADF Org Feeds]						
8221	These SPs count the number of pages fed through the ADF for front and back side scanning.						
	Front	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]				
001	Number of front sides fed for scanning:  With an ADF that can scan both sides simultaneously, the Front side count is the same as the number of pages fed for either simplex or duplex scanning.  With an ADF that cannot scan both sides simultaneously, the Front side count is the same as the number of pages fed for duplex front side scanning. (The front side is determined by which side the user loads face up.)						
	Back	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]				
002	Number of rear sides fed for scanning:  With an ADF that can scan both sides simultaneously, the Back count is the same as the number of pages fed for duplex scanning.  With an ADF that cannot scan both sides simultaneously, the Back count is the same as the number of pages fed for duplex rear-side scanning.						

• When 1 sheet is fed for duplex scanning the Front count is 1 and the Back count is 1.

5

• If a jam occurs during the job, recovery processing is not counted to avoid double counting. Also, the pages are not counted if the jam occurs before the first sheet is output.

	[Scan PGS/Mode]						
8231	These SPs count the number of pages scanned by each ADF mode to determine the work load on the ADF.						
001	Large Volume	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]				
001	Selectable. Large copy jobs that cannot be loaded in the ADF at one time.						
002	SADF	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]				
002	Selectable. Feeding pages one by one through the ADF.						
003	Mixed Size	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]				
003	Selectable. Select "Mixed Sizes" on the operation panel.						
004	Custom Size	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]				
004	Selectable. Originals of non-standard size.						
005	Platen	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]				
003	Book mode. Raising the ADF and placing the original directly on the platen.						
006	Mixed 1 side/2 side	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]				
000	Simplex and Duplex mode.						

- If the scan mode is changed during the job, for example, if the user switches from ADF to Platen mode, the count is done for the last selected mode.
- The user cannot select mixed sizes or non-standard sizes with the fax application so if the original's page sizes are mixed or non-standard, these are not counted.
- If the user selects "Mixed Sizes" for copying in the platen mode, the Mixed Size count is enabled.
- In the SADF mode if the user copies 1 page in platen mode and then copies 2 pages with SADF, the Platen count is 1 and the SADF count is 3.

	8241	[T:Scan PGS/Org]	*CTL	[0 to 9999999 / <b>0</b> / 1 / step	
		These SPs count the total number of scanned pages by original type for all jobs, regardless of which application was used.			

8242	[C:Scan PGS/Org]	*(	CTL	[0 to 9999999 / <b>0</b> / 1 / step					
0242	These SPs count the number of pages scanned by original type for Copy jobs.								
8243	[F:Scan PGS/Org]	*(	CTL	[0 to 9999999 / <b>0</b> / 1 / step					
6243	These SPs count the number of pages scanned by original type for Fax jobs.								
8245	[S:Scan PGS/Org]	*(	*CTL [0 to 9999999 / <b>0</b> / 1 / s				/ step		
6243	These SPs count the number of pages scanned by original type for Scan jobs.								
	[L:Scan PGS/Org]	*(	CTL	[0 to 9999999 / <b>0</b> / 1 / step					
8246	These SPs count the number of pages scanned and stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen								
			8241		8242	8243	8245	8246	
001	Text		Yes Yes		Yes	Yes	Yes	Yes	
002	Text/Photo				Yes	Yes	Yes	Yes	
003	Photo	Ye		S	Yes	Yes	Yes	Yes	
004	GenCopy, Pale		Yes Yes Yes		Yes	No	Yes	Yes	
005	Мар				Yes	No	No	Yes	
006	Normal/Detail				No	Yes	No	No	
007	Fine/Super Fine				No	Yes	No	No	
800	Binary	Yes		5	No	No	Yes	No	
009	Grayscale			S	No	No	Yes	No	
010	Color		Yes		No	No	Yes	No	
011	Other	Yes		5	Yes	Yes	Yes	Yes	

• If the scan mode is changed during the job, for example, if the user switches from ADF to Platen mode, the count is done for the last selected mode.

8251	[T:Scan PGS/ImgEdt]	*CTL	These SPs show how many times Image Edit
8252	[C:Scan PGS/ImgEdt]	*CTL	features have been selected at the operation panel for each application. Some examples
8255	[S:Scan PGS/ImgEdr]	*CTL	of these editing features are:
8256	[L:Scan PGS/ImgEdt]	*CTL	Erase> Border Erase> Center
8257	[O:Scan PGS/ImgEdt]	*CTL	Image Repeat
			Centering
			Positive/Negative
			[0 to 9999999 / <b>0</b> / 1 / step]
			Note: The count totals the number of times the edit features have been used. A detailed breakdown of exactly which features have been used is not given.

The L: counter counts the number of pages stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen.

8281	[T:Scan PGS/TWAIN]	*CTL	These SPs count the number of pages
8285 [S:Scan PGS/TWAIN]		*CTL	scanned using a TWAIN driver. These counters reveal how the TWAIN driver is used for delivery functions.  [O to 9999999 / O / 1 / step]
			Note: At the present time, these counters perform identical counts.
8291	[T:Scan PGS/Stamp]	*CTL	These SPs count the number of pages
8293	[F:Scan PGS/Stamp]	*CTL	stamped with the stamp in the ADF unit. [0 to 9999999 / <b>0</b> / 1 / step]
8295	[S:Scan PGS/Stamp]	*CTL	The L: counter counts the number of pages stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen

	[T:Scan PGS/Size]				
8301	These SPs count by size the total number of pages scanned by all applications. Use the totals to compare original page size (scanning) and output (printing) page size [SP 8-441].				
	[C:Scan PGS/Size]				
8302	-		of pages scanned by the Copy application. Use (scanning) and output (printing) page size [SP		
	[F:Scan PGS/Size]				
8303	,		of pages scanned by the Fax application. Use (scanning) and output page size [SP 8-443].		
	[S:Scan PGS/Size]				
8305	-		of pages scanned by the Scan application. Use (scanning) and output page size [SP 8-445].		
	[L:Scan PGS/Size]				
8306	document server mode screen o	at the oper Use these to	of pages scanned and stored from within the ation panel, and with the Store File button from otals to compare original page size (scanning)		
001	A3	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]		
002	A4	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]		
003	A5	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]		
004	B4	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]		
005	B5	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]		
006	DLT	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]		
007	LG	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]		
008	LT	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]		
009	НІТ	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]		
010	Full Bleed	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]		

254	Other (Standard)	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]
255	Other (Custom)	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]

	T:Scan PGS/Rez	*CTL [0 to 9999999/ 0 / 1]				
8311	These SPs count by resolution setting the total number of pages scanned by applications that can specify resolution settings.					
	S: Scan PGS/Rez	*CTL	[0 to 9999999/ 0 / 1]			
8315	These SPs count by resolution setting the total number of pages scanned by application that can specify resolution settings.					
	Note: At the present time, SP8	-311 and S	P8-315 perform identical counts.			
001	1200dpi <	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]			
002	600dpi to 1199dpi	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]			
003	400dpi to 599dpi	*CTL [0 to 9999999 / <b>0</b> / 1 / step]				
004	200dpi to 399dpi	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]			
005	< 199dpi	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]			

- Copy resolution settings are fixed so they are not counted.
- The Fax application does not allow finely-adjusted resolution settings so no count is done for the Fax application.

8381	[T:Total PrtPGS]	*CTL	
8382	[C:Total PrtPGS]	*CTL	
8383	[F:Total PrtPGS]	*CTL	These SPs count the number of pages printed by the customer. The counter for the
8384	[P:Total PrtPGS]	*CTL	application used for storing the pages
8385	[S:Total PrtPGS]	*CTL	increments. [0 to 99999999 / <b>0</b> / 1 / step]
8386	[L:Total PrtPGS]	*CTL	, , , ,
8387	[O:Total PrtPGS]	*CTL	

• When the A3/DLT double count function is switched on with SP5104, 1 A3/DLT page is counted as 2.

- When several documents are merged for a print job, the number of pages stored are counted for the application that stored them.
- These counters are used primarily to calculate charges on use of the machine, so the following pages are not counted as printed pages:
  - Blank pages in a duplex printing job.
  - Blank pages inserted as document covers, chapter title sheets, and slip sheets.
  - Reports printed to confirm counts.
  - All reports done in the service mode (service summaries, engine maintenance reports, etc.)
  - Test prints for machine image adjustment.
  - Error notification reports.
  - Partially printed pages as the result of a copier jam.

8391	LSize PrtPGS *CTL [0 to 99999999 / 0 / 1 / step]					
	These SPs count pages printed on paper sizes A3/DLT and larger.					
	<b>Note:</b> In addition to being displayed in the SMC Report, these counters are also displayed in the User Tools display on the copy machine.					

8401	[T:PrtPGS/LS]	*CTL	These SPs count the number of pages printed
8402	[C:PrtPGS/LS]	*CTL	from the document server. The counter for the
8403	[F:PrtPGS/LS]	*CTL	application used to print the pages is incremented.
8404	[P:PrtPGS/LS]	*CTL	The L: counter counts the number of jobs stored from within the document server mode
8405	[S:PrtPGS/LS]	*CTL	screen at the operation panel.
8406	[L:PrtPGS/LS]	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]

- Print jobs done with Web Image Monitor and Desk Top Binder are added to the L: count.
- Fax jobs done with Web Image Monitor and Desk Top Binder are added to the F: count.

8411	Prints/Duplex	*CTL	This SP counts the amount of paper (front/back counted as 1 page) used for duplex printing. Last pages printed only on one side are not counted.  [0 to 99999999 / 0 / 1]
------	---------------	------	---

	[T:PrtPGS/Dup Comb]				
8421	These SPs count by binding and processed for printing. This is the		and n-Up settings the number of pages all applications.		
	[C:PrtPGS/Dup Comb]				
8422	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the copier application.				
	[F:PrtPGS/Dup Comb]				
8423	These SPs count by binding and processed for printing by the fa		and n-Up settings the number of pages on.		
	[P:PrtPGS/Dup Comb]				
8424	These SPs count by binding and processed for printing by the pr		and n-Up settings the number of pages cation.		
	[S:PrtPGS/Dup Comb]				
8425	These SPs count by binding and processed for printing by the sc		and n-Up settings the number of pages lication.		
	[L:PrtPGS/Dup Comb]				
8426			and n-Up settings the number of pages ument server mode window at the operation		
	[O:PrtPGS/Dup Comb]				
8427	These SPs count by binding and processed for printing by Other		and n-Up settings the number of pages ons		
001	Simplex> Duplex	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
002	Duplex> Duplex	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
003	Book> Duplex	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
004	Simplex Combine	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
005	Duplex Combine	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
006	2in1	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
006	2 pages on 1 side (2-Up)				

007	4 in 1	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
007	4 pages on 1 side (4-Up)		
008	6 in 1	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
008	6 pages on 1 side (6-Up)		
009	8 in 1	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
009	8 pages on 1 side (8-Up)		
010	9 in 1	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
010	9 pages on 1 side (9-Up)		
011	16 in 1	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
011	16 pages on 1 side (16-Up)		
012	Booklet	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
013	Magazine	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
014	2in1 + Booklet	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
015	4in1 + Booklet	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
016	6in1 + Booklet	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
017	8in1 + Booklet	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
018	9in1 + Booklet	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
019	2in1 + Magazine	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
020	4in1 + Magazine	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
021	6in1 + Magazine	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
022	8in1 + Magazine	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
023	9in1 + Magazine	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
024	16in1 + Magazine	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]

- These counts (SP8 421 to SP8 427) are especially useful for customers who need to improve their compliance with ISO standards for the reduction of paper consumption.
- Pages that are only partially printed with the n-Up functions are counted as 1 page.

• Here is a summary of how the counters work for Booklet and Magazine modes:

	8421	8422	8423	8424	8425	8426	8427
001	Yes						
002	Yes	Yes	No	No	No	No	Yes
003	Yes	Yes	No	No	No	No	Yes
004	Yes						
005	Yes						
006	Yes						
007	Yes						
008	Yes	No	No	Yes	No	No	Yes
009	Yes						
010	Yes	No	No	Yes	Yes	No	Yes
011	Yes	No	Yes	Yes	Yes	Yes	Yes
012	Yes						
013	Yes						
014	Yes						
015	Yes						
016	Yes	No	No	Yes	No	No	Yes
01 <i>7</i>	Yes						
018	Yes	No	No	Yes	Yes	No	Yes
019	Yes						
020	Yes						
021	Yes	No	No	Yes	No	No	Yes
022	Yes						
023	Yes	No	No	Yes	Yes	No	Yes
024	Yes	No	Yes	Yes	Yes	Yes	Yes

Booklet		Magazine	
Original Pages	Count	Original Pages	Count
1	1	1	1
2	2	2	2
3	2	3	2
4	2	4	2
5	3	5	4
6	4	6	4
7	4	7	4
8	4	8	4

	[T:PrtPGS/ImgEdt]
8431	These SPs count the total number of pages output with the three features below, regardless of which application was used.
	[C:PrtPGS/ImgEdt]
8432	These SPs count the total number of pages output with the three features below with the copy application.
	[P:PrtPGS/ImgEdt]
8434	These SPs count the total number of pages output with the three features below with the print application.
	[L:PrtPGS/ImgEdt]
8436	These SPs count the total number of pages output from within the document server mode window at the operation panel with the three features below.
	[O:PrtPGS/ImgEdt]
8437	These SPs count the total number of pages output with the three features below with Other applications.

	Cover/Slip Sheet	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]	
001	Total number of covers or slip sheets inserted. The count for a cover printed on both sides counts 2.			
	Series/Book	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]	
002	The number of pages printed in series (one side) or printed as a book with booklet right/left pagination.			
	User Stamp	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]	
003	The number of pages printed where stamps were applied, including page numbering and date stamping.			

2112	[T:PrtPGS/Ppr Size]			
8441	These SPs count by print paper size the number of pages printed by all applications.			
2442	[C:PrtPGS/Ppr Size]			
8442	These SPs count by print paper	mber of pages printed by the copy application.		
8443	[F:PrtPGS/Ppr Size]			
8443	These SPs count by print paper	size the nu	mber of pages printed by the fax application.	
	[P:PrtPGS/Ppr Size]			
8444	These SPs count by print paper size the number of pages printed by the printer application.			
	[S:PrtPGS/Ppr Size]			
8445	These SPs count by print paper size the number of pages printed by the scanner application.			
	[L:PrtPGS/Ppr Size]			
8446	These SPs count by print paper size the number of pages printed from within the document server mode window at the operation panel.			
0.4.47	[O:PrtPGS/Ppr Size]			
8447	These SPs count by print paper size the number of pages printed by Other applications.			
001	A3	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]	

002	A4	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
003	A5	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
004	B4	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
005	B5	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
006	DLT	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
007	LG	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
008	LT	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
009	НІТ	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
010	Full Bleed	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
254	Other (Standard)	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
255	Other (Custom)	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]

• These counters do not distinguish between LEF and SEF.

8451	[PrtPGS/Ppr Tray]		
6431	These SPs count the number of s	sheets fed f	rom each paper feed station.
001	Bypass Tray	*CTL	Bypass Tray [0 to 99999999 / <b>0</b> / 1 / step]
002	Tray 1	*CTL	Copier
003	Tray 2	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
004	Tray 3	*CTL	Paper Tray Unit (Option)
005	Tray 4	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
006	Tray 5	*CTL	LCT (Option) [0 to 99999999 / 0 / 1 / step]
007	Tray 6	*CTL	Currently not used.
008	Tray 7	*CTL	Currently not used.
009	Tray 8	*CTL	Currently not used.
010	Tray 9	*CTL	Currently not used.

ĺ	D

011	Tray 10	*CTL	Currently not used.
012	Tray 11	*CTL	Currently not used.
013	Tray 12	*CTL	Currently not used.
014	Tray 13	*CTL	Currently not used.
015	Tray 14	*CTL	Currently not used.
016	Tray 15	*CTL	Currently not used.

## SP Mode Tables - SP8000-2

### SP8-XXX (Data Log 2)

	<ul> <li>[T:PrtPGS/Ppr Type]</li> <li>These SPs count by paper type the number pages printed by all applications.</li> <li>These counters are not the same as the PM counter. The PM counter is based on feed timing to accurately measure the service life of the feed rollers. However, these counts are based on output timing.</li> <li>Blank sheets (covers, chapter covers, slip sheets) are also counted.</li> <li>During duplex printing, pages printed on both sides count as 1, and a page printed</li> </ul>			
8461				
	During duplex printing, pa on one side counts as 1.	ges printe	d on both sides count as 1, and a page printed	
8462	[C:PrtPGS/Ppr Type]			
8402	These SPs count by paper type	the numbe	r pages printed by the copy application.	
8463	[F:PrtPGS/Ppr Type]			
6403	These SPs count by paper type the number pages printed by the fax application.			
8464	[P:PrtPGS/Ppr Type]			
0404	These SPs count by paper type the number pages printed by the printer application.			
	[L:PrtPGS/Ppr Type]			
8466	These SPs count by paper type server mode window at the ope		r pages printed from within the document nel.	
001	Normal	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]	
002	Recycled	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]	
003	Special	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]	
004	Thick	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]	
005	Normal (Back)	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]	
006	Thick (Back)	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]	
007	ОНР	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]	

008 Other *CTL [0 to 99999999 / 0 / 1 / step]		008	Other	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
---	--	-----	-------	------	---------------------------------------

8471	[PrtPGS/Mag]		
04/1	These SPs count by magnification rate the number of pages printed.		
001	< 49%	*CTL	
002	50% to 99%	*CTL	
003	100%	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
004	101% to 200%	*CTL	
005	201% <	*CTL	

Counts are done for magnification adjusted for pages, not only on the operation panel but performed remotely with an external network application capable of performing magnification adjustment as well.

Magnification adjustments done with printer drivers with PC applications such as Excel are also counted.

Magnification adjustments done for adjustments after they have been stored on the document server are not counted.

Magnification adjustments performed automatically during Auto Reduce/Enlarge copying are counted. The magnification rates of blank cover sheets, slip sheets, etc. are automatically assigned a rate of

100%.

8481	[T:PrtPGS/TonSave]	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
8484	[P:PrtPGS/TonSave]	*CTL	[0 10 4444444 / <b>0</b> / 1 / 21eb]
	These SPs count the number of pages printed with the Toner Save feature switched on.		
	Note: These SPs return the same results as this SP is limited to the Print application.		

8511	[T:PrtPGS/Emul]				
6511	These SPs count by printer emulation mode the total number of pages printed.				
0.51.4	[P:PrtPGS/Emul]				
8514	These SPs count by printer emulation mode the total number of pages printed.				
001	RPCS	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
002	RPDL	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		

003       PS3       *CTL       [0 to 99999999 / 0 / 1 / step]         004       R98       *CTL       [0 to 99999999 / 0 / 1 / step]         005       R16       *CTL       [0 to 99999999 / 0 / 1 / step]         006       GL/GL2       *CTL       [0 to 99999999 / 0 / 1 / step]         007       R55       *CTL       [0 to 99999999 / 0 / 1 / step]         008       RTIFF       *CTL       [0 to 99999999 / 0 / 1 / step]         009       PDF       *CTL       [0 to 99999999 / 0 / 1 / step]         010       PCL5e/5c       *CTL       [0 to 99999999 / 0 / 1 / step]         011       PCL XL       *CTL       [0 to 99999999 / 0 / 1 / step]         012       IPDL-C       *CTL       [0 to 99999999 / 0 / 1 / step]         013       BM-Links       *CTL       [0 to 99999999 / 0 / 1 / step]         014       Other       *CTL       [0 to 99999999 / 0 / 1 / step]         015       IPDS       *CTL       [0 to 99999999 / 0 / 1 / step]         016       XPS       -       -				
005       R16       *CTL       [0 to 99999999 / 0 / 1 / step]         006       GL/GL2       *CTL       [0 to 99999999 / 0 / 1 / step]         007       R55       *CTL       [0 to 99999999 / 0 / 1 / step]         008       RTIFF       *CTL       [0 to 99999999 / 0 / 1 / step]         009       PDF       *CTL       [0 to 99999999 / 0 / 1 / step]         010       PCL5e/5c       *CTL       [0 to 99999999 / 0 / 1 / step]         011       PCL XL       *CTL       [0 to 99999999 / 0 / 1 / step]         012       IPDL-C       *CTL       [0 to 99999999 / 0 / 1 / step]         013       BM-Links       *CTL       Japan Only         014       Other       *CTL       [0 to 99999999 / 0 / 1 / step]         015       IPDS       *CTL       [0 to 99999999 / 0 / 1 / step]	003	PS3	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
006       GL/GL2       *CTL       [0 to 99999999 / 0 / 1 / step]         007       R55       *CTL       [0 to 99999999 / 0 / 1 / step]         008       RTIFF       *CTL       [0 to 99999999 / 0 / 1 / step]         009       PDF       *CTL       [0 to 99999999 / 0 / 1 / step]         010       PCL5e/5c       *CTL       [0 to 99999999 / 0 / 1 / step]         011       PCL XL       *CTL       [0 to 99999999 / 0 / 1 / step]         012       IPDL-C       *CTL       [0 to 99999999 / 0 / 1 / step]         013       BM-Links       *CTL       Japan Only         014       Other       *CTL       [0 to 99999999 / 0 / 1 / step]         015       IPDS       *CTL       [0 to 99999999 / 0 / 1 / step]	004	R98	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
007       R55       *CTL       [0 to 99999999 / 0 / 1 / step]         008       RTIFF       *CTL       [0 to 99999999 / 0 / 1 / step]         009       PDF       *CTL       [0 to 99999999 / 0 / 1 / step]         010       PCL5e/5c       *CTL       [0 to 99999999 / 0 / 1 / step]         011       PCL XL       *CTL       [0 to 99999999 / 0 / 1 / step]         012       IPDL-C       *CTL       [0 to 99999999 / 0 / 1 / step]         013       BM-Links       *CTL       Japan Only         014       Other       *CTL       [0 to 99999999 / 0 / 1 / step]         015       IPDS       *CTL       [0 to 99999999 / 0 / 1 / step]	005	R16	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
008       RTIFF       *CTL       [0 to 99999999 / 0 / 1 / step]         009       PDF       *CTL       [0 to 99999999 / 0 / 1 / step]         010       PCL5e/5c       *CTL       [0 to 99999999 / 0 / 1 / step]         011       PCL XL       *CTL       [0 to 99999999 / 0 / 1 / step]         012       IPDL-C       *CTL       [0 to 99999999 / 0 / 1 / step]         013       BM-Links       *CTL       Japan Only         014       Other       *CTL       [0 to 99999999 / 0 / 1 / step]         015       IPDS       *CTL       [0 to 99999999 / 0 / 1 / step]	006	GL/GL2	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
009 PDF       *CTL       [0 to 99999999 / 0 / 1 / step]         010 PCL5e/5c       *CTL       [0 to 99999999 / 0 / 1 / step]         011 PCL XL       *CTL       [0 to 99999999 / 0 / 1 / step]         012 IPDL-C       *CTL       [0 to 99999999 / 0 / 1 / step]         013 BM-Links       *CTL       Japan Only         014 Other       *CTL       [0 to 99999999 / 0 / 1 / step]         015 IPDS       *CTL       [0 to 99999999 / 0 / 1 / step]	007	R55	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
010       PCL5e/5c       *CTL       [0 to 99999999 / 0 / 1 / step]         011       PCL XL       *CTL       [0 to 99999999 / 0 / 1 / step]         012       IPDL-C       *CTL       [0 to 99999999 / 0 / 1 / step]         013       BM-Links       *CTL       Japan Only         014       Other       *CTL       [0 to 99999999 / 0 / 1 / step]         015       IPDS       *CTL       [0 to 99999999 / 0 / 1 / step]	008	RTIFF	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
011       PCL XL       *CTL       [0 to 99999999 / 0 / 1 / step]         012       IPDL-C       *CTL       [0 to 99999999 / 0 / 1 / step]         013       BM-Links       *CTL       Japan Only         014       Other       *CTL       [0 to 99999999 / 0 / 1 / step]         015       IPDS       *CTL       [0 to 99999999 / 0 / 1 / step]	009	PDF	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
012       IPDL-C       *CTL       [0 to 99999999 / 0 / 1 / step]         013       BM-Links       *CTL       Japan Only         014       Other       *CTL       [0 to 99999999 / 0 / 1 / step]         015       IPDS       *CTL       [0 to 99999999 / 0 / 1 / step]	010	PCL5e/5c	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
013       BM-Links       *CTL       Japan Only         014       Other       *CTL       [0 to 99999999 / 0 / 1 / step]         015       IPDS       *CTL       [0 to 99999999 / 0 / 1 / step]	011	PCL XL	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
014 Other *CTL [0 to 99999999 / 0 / 1 / step] 015 IPDS *CTL [0 to 99999999 / 0 / 1 / step]	012	IPDL-C	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
015 IPDS *CTL [0 to 99999999 / <b>0</b> / 1 / step]	013	BM-Links	*CTL	Japan Only
	014	Other	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
016 XPS	015	IPDS	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
	016	XPS	-	-

- $\bullet$  SP8 511 and SP8 514 return the same results as they are both limited to the Print application.
- Print jobs output to the document server are not counted.

8521	[T:PriPGS/FIN]
0321	These SPs count by finishing mode the total number of pages printed by all applications.
	[C:PrtPGS/FIN]
8522	These SPs count by finishing mode the total number of pages printed by the Copy application.
	[F:PrtPGS/FIN]
8523	These SPs count by finishing mode the total number of pages printed by the Fax application.
	NOTE: Print finishing options for received faxes are currently not available.

	[P:PrtPGS/FIN]				
8524	These SPs count by finishing mode the total number of pages printed by the Print application.				
	[S:PrtPGS/FIN]				
8525	These SPs count by finishing mo application.	de the toto	Il number of pages printed by the Scanner		
	[L:PrtPGS/FIN]				
8526	These SPs count by finishing mo document server mode window		al number of pages printed from within the eration panel.		
001	Sort	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
002	Stack	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
003	3 Staple *CTL [0 to 99999999 / <b>0</b> / 1 / step]				
004	Booklet	et *CTL [0 to 99999999 / <b>0</b> / 1 / ste			
005	Z-Fold	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
006	Punch	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
007	Other	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
008	Inside Fold	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
000	Half-Fold (FM2) (Multi Fold Unit)				
009	Three-IN-Fold	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
009	Letter Fold-in (FM4) (Multi Fold	Unit)			
010	Three-OUT-Fold	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
010	Letter Fold-out (FM3) (Multi Fold Unit)				
011	Four Fold	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
011	Double Parallel Fold (FM5) (Multi Fold Unit)				
012	KANNON-Fold	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
012	Gate Fold (FM6) (Multi Fold Ur	nit)			

013	Perfect-Bind	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
	Perfect Binder		
014	Ring-Bind	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
014	Ring Binder		



- If stapling is selected for finishing and the stack is too large for stapling, the unstapled pages are still counted.
- The counts for staple finishing are based on output to the staple tray, so jam recoveries are counted.

8531	[Staples]	*CTL	This SP counts the amount of staples used by the machine.  [0 to 9999999 / 0 / 1 / step]
------	-----------	------	--

8551	[T:PrtBooks/FIN]		
001	Perfect-Bind	*CTL	Booklet finishing
002	Ring-Bind	*CTL	Not used

8552	[C:PrtBooks/FIN]		
001	Perfect-Bind	*CTL	Booklet finishing
002	Ring-Bind	*CTL	Not used

8554	[P:PrtBooks/FIN]		
001	Perfect-Bind	*CTL	Booklet finishing
002	Ring-Bind	*CTL	Not used

8556	[L:PrtBooks/FIN]		
001	Perfect-Bind	*CTL	Booklet finishing
002	Ring-Bind	*CTL	Not used

8561	[T:A Sheet Of Paper]		
001	Total: Over A3/DLT	*CTL	
002	Total: Under A3/DLT	*CTL	[0.1.00000000 / 0./1]
003	Duplex: Over A3/DLT	*CTL	[0 to 99999999 / <b>0</b> / 1]
004	Duplex: Under A3/DLT	*CTL	

8562	[C:A Sheet Of Paper]		
001	Total: Over A3/DLT	*CTL	
002	Total: Under A3/DLT	*CTL	[0. 00000000 / 0 / 1]
003	Duplex: Over A3/DLT	*CTL	[0 to 99999999 / <b>0</b> / 1]
004	Duplex: Under A3/DLT	*CTL	

8563	[F:A Sheet Of Paper]		
001	Total: Over A3/DLT	*CTL	
002	Total: Under A3/DLT	*CTL	[0. 00000000 / 0 / 1]
003	Duplex: Over A3/DLT	*CTL	[0 to 99999999 / <b>0</b> / 1]
004	Duplex: Under A3/DLT	*CTL	

8564	[P:A Sheet Of Paper]		
001	Total: Over A3/DLT	*CTL	
002	Total: Under A3/DLT	*CTL	[0+, 00000000 / <b>0</b> / 1]
003	Duplex: Over A3/DLT	*CTL	[0 to 99999999 / <b>0</b> / 1]
004	Duplex: Under A3/DLT	*CTL	

8566	[L:A Sheet Of Paper]

001	Total: Over A3/DLT	*CTL	
002	Total: Under A3/DLT	*CTL	[0.1.00000000 / 0./1]
003	Duplex: Over A3/DLT	*CTL	[0 to 99999999 / <b>0</b> / 1]
004	Duplex: Under A3/DLT	*CTL	

8567	[O:A Sheet Of Paper]		
001	Total: Over A3/DLT	*CTL	
002	Total: Under A3/DLT	*CTL	[0 to 99999999 / <b>0</b> / 1]
003	Duplex: Over A3/DLT	*CTL	[0 10 44444444 / 0 / 1]
004	Duplex: Under A3/DLT	*CTL	

	[T:Counter]		
8581	These SPs count the total output broken down by output, regardless of the application used. In addition to being displayed in the SMC Report, these counters are also displayed in the User Tools display on the copy machine.		
001	Total	*CTL	[0 to 99999999 / <b>0</b> / 1]
032	Total(A3)	-	-

		[O:Counter]			
8	3591	These SPs count the totals for A3/DLT paper use, number of duplex pages printed, the number of staples used. These totals are for Other (O:) applications only.			
	001	A3/DLT	*CTL		
	002	Duplex	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]	

[T:Coverage Counter]				
8001	These SPs count the total coverage for the total printout pages for each printing mo			
001	B/W	*CTL	[0 to 2147483647 / <b>0</b> / 1% / step]	
011	B/W Printing Pages	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]	

9400	[C:Coverage Counter]			
8602				
001	B/W	*CTL	[0 to 2147483647 / <b>0</b> / 1% / step]	

	[F:Coverage Counter]			
8003				
	001	B/W	*CTL	[0 to 2147483647 / <b>0</b> / 1% / step]

8604	[P:Coverage Counter]				
0004	-				
001	B//W	*CTL	[0 to 2147483647 / <b>0</b> / 1% / step]		

[L:Coverage Counter]			
8000	-		
001	B/W	*CTL	[0 to 2147483647 / <b>0</b> / 1% / step]

861 <i>7</i>	[SDK Apli Counter]				
8017	These SPs count the total printout pages for each SDK application.				
001	SDK-1	*CTL			
002	SDK-2	*CTL			
003	SDK-3	*CTL	[0 +- 00000000 / 0 / 1 / ++1		
004	SDK-4	*CTL [0 to 999	[0 to 99999999 / <b>0</b> / 1 / step]		
005	SDK-5	*CTL			
006	SDK-6	*CTL			

007	SDK-7	*CTL	
008	SDK-8	*CTL	
009	SDK-9	*CTL	[0.4, 00000000 / 0. / 1. / 44]
010	SDK-10	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
011	SDK-11	*CTL	
012	SDK-12	*CTL	

8621	Func Use Counter		
8021	-		
001	Function-001	*CTL	
002	Function-002	*CTL	
003	Function-003	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
004	Function-004	*CTL	
005	Function-005	*CTL	
006	Function-006 *C1	*CTL	
007	Function-007	*CTL	
008	Function-008	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
009	Function-009	*CTL	
010	Function-010	*CTL	
011	Function-011	*CTL	
012	Function-012	*CTL	
013	Function-013	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
014	Function-014	*CTL	
015	Function-015	*CTL	

O16   Function-016				
018   Function-018	016	Function-016	*CTL	
019   Function-019   *CTL     020   Function-020   *CTL     021   Function-021   *CTL     022   Function-022   *CTL     023   Function-023   *CTL     024   Function-024   *CTL     025   Function-025   *CTL     026   Function-026   *CTL     027   Function-027   *CTL     028   Function-028   *CTL     029   Function-029   *CTL     030   Function-030   *CTL     031   Function-031   *CTL     032   Function-032   *CTL     033   Function-033   *CTL     034   Function-034   *CTL     035   Function-035   *CTL     036   Function-036   *CTL     077   Function-036   *CTL     078   Function-036   *CTL     079   Function-037   *CTL     080   Function-038   *CTL     090   Function-039   *CTL     090   Function-030   *CTL     090   Function-031   *CTL     090	017	Function-017	*CTL	
020   Function-020   *CTL     021   Function-021   *CTL     022   Function-022   *CTL     023   Function-023   *CTL     024   Function-024   *CTL     025   Function-025   *CTL     026   Function-026   *CTL     027   Function-027   *CTL     028   Function-028   *CTL     029   Function-029   *CTL     030   Function-030   *CTL     031   Function-031   *CTL     032   Function-032   *CTL     033   Function-034   *CTL     035   Function-035   *CTL     036   Function-036   *CTL     077   Function-036   *CTL     078   Function-036   *CTL     079   Function-037   *CTL     070   Function-038   *CTL     071   Function-039   *CTL     070   Function-031   *CTL     071   Function-034   *CTL     071   Function-035   *CTL     071   Function-036   *CTL     070   Function-036   *CTL     071   Function-036   *CTL     071   Function-036   *CTL     071   Function-036   *CTL     071   Function-036   *CTL     072   Function-036   *CTL     073   Function-036   *CTL     074   Function-036   *CTL     075   Function-036   *CTL     076   Function-036   *CTL     077   Function-036   *CTL     078   Function-036   *CTL     079   Function-036   *CTL     070   Function-037   *CTL     070   Function-038   *CTL     070	018	Function-018	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
021   Function-021   *CTL     022   Function-022   *CTL     023   Function-023   *CTL     024   Function-024   *CTL     025   Function-025   *CTL     026   Function-026   *CTL     027   Function-027   *CTL     028   Function-028   *CTL     029   Function-029   *CTL     030   Function-030   *CTL     031   Function-031   *CTL     032   Function-032   *CTL     033   Function-034   *CTL     034   Function-035   *CTL     035   Function-036   *CTL     036   Function-036   *CTL     037   Function-036   *CTL     038   Function-037   *CTL     039   Function-037   *CTL     030   Function-037   *CTL     031   Function-037   *CTL     032   Function-037   *CTL     033   Function-037   *CTL     034   Function-037   *CTL     035   Function-037   *CTL     036   Function-036   *CTL     037   Function-036   *CTL     038   Function-036   *CTL     039   Function-036   *CTL     040   Function-036   *CTL     050   Function-036   *CTL     060   Function-036   *CTL     070   Function-037   *CTL     070   Function-038   *CTL     070   Function-039   *CTL     070	019	Function-019	*CTL	[0 10 77777777 <b>0</b> / 1 / Siep]
022       Function-022       *CTL         023       Function-023       *CTL         024       Function-024       *CTL         025       Function-025       *CTL         026       Function-026       *CTL         027       Function-027       *CTL         028       Function-028       *CTL         029       Function-029       *CTL         030       Function-030       *CTL         031       Function-031       *CTL         032       Function-032       *CTL         033       Function-033       *CTL         034       Function-034       *CTL         035       Function-035       *CTL         036       Function-036       *CTL	020	Function-020	*CTL	
023       Function-023       *CTL       [0 to 99999999 / 0 / 1 / step]         024       Function-024       *CTL         025       Function-025       *CTL         026       Function-026       *CTL         027       Function-027       *CTL         028       Function-028       *CTL         029       Function-029       *CTL         030       Function-030       *CTL         031       Function-031       *CTL         032       Function-032       *CTL         033       Function-033       *CTL         034       Function-034       *CTL         035       Function-035       *CTL         036       Function-036       *CTL	021	Function-021	*CTL	
024       Function-024       *CTL         025       Function-025       *CTL         026       Function-026       *CTL         027       Function-027       *CTL         028       Function-028       *CTL         029       Function-029       *CTL         030       Function-030       *CTL         031       Function-031       *CTL         032       Function-032       *CTL         033       Function-033       *CTL         034       Function-034       *CTL         035       Function-035       *CTL         036       Function-036       *CTL	022	Function-022	*CTL	
025       Function-025       *CTL         026       Function-026       *CTL         027       Function-027       *CTL         028       Function-028       *CTL         029       Function-029       *CTL         030       Function-030       *CTL         031       Function-031       *CTL         032       Function-032       *CTL         033       Function-033       *CTL         034       Function-034       *CTL         035       Function-035       *CTL         036       Function-036       *CTL	023	Function-023	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
026       Function-026       *CTL         027       Function-027       *CTL         028       Function-028       *CTL         029       Function-029       *CTL         030       Function-030       *CTL         031       Function-031       *CTL         032       Function-032       *CTL         033       Function-033       *CTL         034       Function-034       *CTL         035       Function-035       *CTL         036       Function-036       *CTL	024	Function-024	*CTL	
027       Function-027       *CTL         028       Function-028       *CTL         029       Function-029       *CTL         030       Function-030       *CTL         031       Function-031       *CTL         032       Function-032       *CTL         033       Function-033       *CTL         034       Function-034       *CTL         035       Function-035       *CTL         036       Function-036       *CTL	025	Function-025	*CTL	
028       Function-028       *CTL       [0 to 99999999 / 0 / 1 / step]         029       Function-029       *CTL         030       Function-030       *CTL         031       Function-031       *CTL         032       Function-032       *CTL         033       Function-033       *CTL         034       Function-034       *CTL         035       Function-035       *CTL         036       Function-036       *CTL	026	Function-026	*CTL	
029       Function-029       *CTL         030       Function-030       *CTL         031       Function-031       *CTL         032       Function-032       *CTL         033       Function-033       *CTL         034       Function-034       *CTL         035       Function-035       *CTL         036       Function-036       *CTL	027	Function-027	*CTL	
030       Function-030       *CTL         031       Function-031       *CTL         032       Function-032       *CTL         033       Function-033       *CTL         034       Function-034       *CTL         035       Function-035       *CTL         036       Function-036       *CTL	028	Function-028	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
031       Function-031       *CTL         032       Function-032       *CTL         033       Function-033       *CTL         034       Function-034       *CTL         035       Function-035       *CTL         036       Function-036       *CTL	029	Function-029	*CTL	
032       Function-032       *CTL         033       Function-033       *CTL         034       Function-034       *CTL         035       Function-035       *CTL         036       Function-036       *CTL    [0 to 99999999 / 0 / 1 / step]	030	Function-030	*CTL	
033       Function-033       *CTL         034       Function-034       *CTL         035       Function-035       *CTL         036       Function-036       *CTL    [0 to 99999999 / 0 / 1 / step]	031	Function-031	*CTL	
034       Function-034       *CTL         035       Function-035       *CTL         036       Function-036       *CTL    [0 to 99999999 / 0 / 1 / step]	032	Function-032	*CTL	
035 Function-035 *CTL  036 Function-036 *CTL  [0 to 99999999 / 0 / 1 / step]	033	Function-033	*CTL	
036 Function-036 *CTL [0 to 99999999 / <b>0</b> / 1 / step]	034	Function-034	*CTL	
036 Function-036 *CTL	035	Function-035	*CTL	[0 to 00000000 / <b>0</b> / 1 / stan]
037 Function-037 *CTL	036	Function-036	*CTL	[ [0 10 77777777   <b>0</b> / 1 / siep]
	037	Function-037	*CTL	
038 Function-038 *CTL	038	Function-038	*CTL	
039 Function-039 *CTL	039	Function-039	*CTL	
040 Function-040 *CTL	040	Function-040	*CTL	

041	Function-041	*CTL	
042	Function-042	*CTL	
043	Function-043	*CTL	
044	Function-044	*CTL	
045	Function-045	*CTL	[0.1.00000000 / 0./ 1./]
046	Function-046	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
047	Function-047	*CTL	
048	Function-048	*CTL	
049	Function-049	*CTL	
050	Function-050	*CTL	
051	Function-051	*CTL	
052	Function-052	*CTL	
053	Function-053	*CTL	
054	Function-054	*CTL	
055	Function-055	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
056	Function-056	*CTL	[0 10 77777777 <b>0</b> / 1 / siep]
057	Function-057	*CTL	
058	Function-058	*CTL	
059	Function-059	*CTL	
060	Function-060	*CTL	
061	Function-061	*CTL	
062	Function-062	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
063	Function-063	*CTL	[[0 10 /7777777 <b>0</b> / 1 / siep]
064	Function-064	*CTL	

	0421	[T:FAX TX PGS]		
These SPs count the number of pages sent by fax to a telephone number				by fax to a telephone number.
	001	B/W	*CTL	[0 to 9999999 / <b>0</b> / 1 step]

0422	[F:FAX TX PGS]	[F:FAX TX PGS]			
8633	These SPs count the number of p	by fax to a telephone number.			
001	B/W	*CTL	[0 to 9999999 / <b>0</b> / 1 step]		

- If a document has color and black-and-white pages mixed, the pages are counted separately as B/W.
- At the present time, this feature is provided for the Fax application only so SP8631 and SP8633 are the same.
- The counts include error pages.
- If a document is sent to more than one destination with a Group transmission, the count is done for each destination.
- Polling transmissions are counted but polling RX are not.
- Relay, memory, and confidential mailbox transmissions and are counted for each destination.

8641	[T:IFAX TX PGS]				
0041	These SPs count the number of p	oages sent	by fax to as fax images using I-Fax.		
001	B/W *CTL [0 to 9999999 / <b>0</b> / 1 step]				

8643	[F:IFAX TX PGS]				
0043	These SPs the number of pages	sent by Fa	as fax images using I-Fax.		
001	B/W	*CTL	[0 to 9999999 / <b>0</b> / 1 step]		

- If a document has black-and-white pages mixed, the pages are counted separately as B/W.
- At the present time, this feature is provided for the Fax application only so SP8641 and SP8643 are the same.
- The counts include error pages.
- If a document is sent to more than one destination with a Group transmission, the count is done for each destination.
- Polling transmissions are counted but polling RX are not.

5

• Relay, memory, and confidential mailbox transmissions and are counted for each destination.

	[T:S-to-Email PGS]			
8651	umber of pages attached to an e-mail for both s.			
001	*CTL [0 to 9999999 / <b>0</b> / 1 step]			
002	2 Color *CTL [0 to 9999999 / 0 / 1 step]			

	[S:S-to-Email PGS]			
8655	These SPs count by color mode the Scan and document server of		total number of pages attached to an e-mail for both lications.	
001	001 B/W *CTL [0 to 9999999 / 0 / 1 step]			
002	Color	*CTL	[0 to 9999999 / <b>0</b> / 1 step]	



- The count for B/W and Color pages is done after the document is stored on the HDD. If the job is cancelled before it is stored, the pages are not counted.
- If Scan-to-Email is used to send a 10-page document to 5 addresses, the count is 10 (the pages are sent to the same SMTP server together).
- If Scan-to-PC is used to send a 10-page document to 5 folders, the count is 50 (the document is sent to each destination of the SMB/FTP server).
- Due to restrictions on some devices, if Scan-to-Email is used to send a 10-page document to a large number of destinations, the count may be divided and counted separately. For example, if a 10-page document is sent to 200 addresses, the count is 10 for the first 100 destinations and the count is also 10 for the second 100 destinations, for a total of 20.).

	[T:Deliv PGS/Svr]		
8661	These SPs count by color mode both Scan and LS applications.	the total nu	the total number of pages sent to a Scan Router server by  *CTL [0 to 9999999 / 0 / 1 step]
001 B/W *CTL [0 to 9999999 / 0 / 1 step]			
002	Color	*CTL	[0 to 9999999 / <b>0</b> / 1 step]

	[S:Deliv PGS/Svr]				
8665	These SPs count by color mode the total number of pages sent to a Scan Router server by the Scan application.				
001	B/W	*CTL	[0 to 9999999 / <b>0</b> / 1 step]		
002	Color	*CTL	[0 to 9999999 / <b>0</b> / 1 step]		

#### UNote

- The B/W and Color counts are done after the document is stored on the HDD of the Scan Router server.
- If the job is canceled before storage on the Scan Router server finishes, the counts are not done.
- The count is executed even if regardless of confirmation of the arrival at the Scan Router server.

	[T:Deliv PGS/PC]			
8671	These SPs count by color mode the total number of pages sent to a folder on a PC (Scanto-PC) with the Scan and LS applications.			
	[S: Deliv PGS/PC]			
These SPs count by color mode the total number of Scan application.		umber of pages sent with Scan-to-PC with the		
001	B/W	*CTL	[0 to 9999999 / <b>0</b> / 1 step]	
002	Color	*CTL	[0 to 9999999 / <b>0</b> / 1 step]	

8681	[T:PCFAX TXPGS]	*CTL	These SPs count the number of pages sent by
8683	[F:PCFAX TXPGS]	*CTL	PC Fax. These SPs are provided for the Fax application only, so the counts for SP8 681 and SP8 683 are the same.  [0 to 9999999 / 0 / 1 / step]

- This counts pages sent from a PC using a PC fax application, from the PC through the copier to the destination.
- When sending the same message to more than one place using broadcasting, the pages are only
  counted once. (For example, a 10-page fax is sent to location A and location B. The counter goes
  up by 10, not 20.)

8691	[T:TX PGS/LS]	*CTL	These SPs count the number of pages sent
8692	[C:TX PGS/LS]	*CTL	from the document server. The counter for the application that was used to store the pages
8693	[F:TX PGS/LS]	*CTL	is incremented.
8694	[P:TX PGS/LS]	*CTL	[0 to 9999999/ <b>0</b> / 1 / step] The L: counter counts the number of pages
8695	[S:TX PGS/LS]	*CTL	stored from within the document server mode screen at the operation panel. Pages stored
8696	[L:TX PGS/LS]	*CTL	with the Store File button from within the Copy mode screen go to the C: counter.



- Print jobs done with Web Image Monitor and Desk Top Binder are added to the count.
- If several documents are merged for sending, the number of pages stored are counted for the application that stored them.
- When several documents are sent by a Fax broadcast, the F: count is done for the number of pages sent to each destination.

	[TX PGS/Port]				
8701	These SPs count the number of pages sent by the physical port used to send them. For example, if a 3-page original is sent to 4 destinations via ISDN G4, the count for ISDN (G3, G4) is 12.				
001	PSTN-1	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]		
002	PSTN-2	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]		
003	PSTN-3	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]		
004	ISDN (G3,G4)	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]		
005	Network	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]		

8711	[T:Scan PGS/Comp]		
9715	[S:Scan PGS/Comp]		
8715	by each compression mode.		
001	JPEG/JPEG2000	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]
002	TIFF(Multi/Single)	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]

003	PDF	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]
004	Other	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]
005	PDF/Comp	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]
006	PDF/A	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]
007	PDF(OCR)	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]
800	PDF/Comp(OCR)	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]
009	PDF/A(OCR)	-	-

8721	[T:Deliv PGS/WSD/DSM]		
0705	[S: Deliv PGS/WSD/DSM]		
8725	These SPs count the number of pages scanned by each scanner mode.		
001	B/W	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]
002	Color	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]

8 <b>7</b> 31	[T:Scan PGS/Media]			
	[S:Scan PGS/Media]			
8735	These SPs count the number of pages scanned and saved in a meia by each scanner mode.			
001	B/W	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]	
002	Color	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]	

8741	[RX PGS/Port]				
These SPs count the number of pages received by		ived by the physical port used to receive them.			
001	PSTN-1	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]		
002	PSTN-2	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]		
003	PSTN-3	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]		
004	ISDN (G3,G4)	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]		

005	Network	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]		
	[Dev Counter]				
8771	These SPs count the frequency of use (number of rotations of the development rollers) for black toner.				
001	Total	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
	Toner_Bottle_Info.	*CTL	[0 to 9999999 / <b>0</b> / 1 / step]		
8781	These SPs display the number of already replaced toner bottles.				
0/01	NOTE: Currently, the data in SP7-833-011 through 014 and the data in SP8-781-001 through 004 are the same.				
001	Toner: BK	The numb	per of black-toner bottles		
			The CD links and the Co		
8 <b>7</b> 91	[LS Memory Remain]	*CTL	This SP displays the percent of space available on the document server for storing documents.		
			[0 to 100 / 0 / 1 / step]		
	[Toner Remain]				
8801	These SPs display the percent of toner remaining for each color. This SP allows the check the toner supply at any time.				
001	К	*CTL	[0 to 100 / <b>0</b> / 10% / step]		

0011	[Eco Counter]		
8811	-		
001	Eco Total	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
004	Duplex	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
005	Combine	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
008	Duplex (%)	*CTL	[0 to 100 / <b>0</b> / 1% / step]
009	Combine (%)	*CTL	[0 to 100 / <b>0</b> / 1% / step]

010	Paper Cut (%)	*CTL	[0 to 100 / <b>0</b> / 1% / step]
101	Eco Totalr:Last	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
104	Duplex:Last	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
105	Combine:Last	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
108	Duplex (%):Last	*CTL	[0 to 100 / <b>0</b> / 1% / step]
109	Combine (%):Last	*CTL	[0 to 100 / <b>0</b> / 1% / step]
110	Paper Cut (%):Last	*CTL	[0 to 100 / <b>0</b> / 1% / step]

	[Cvr Cnt: 0-10%]			
These SPs display the number of scanned sheets on which the coverage of e from 0% to 10%.				
011	0 to 2%: BK	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]	
021	3 to 4%: BK	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]	
031	5 to 7%: BK	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]	
041	8 to 10%: BK	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]	

	[Cvr Cnt: 11-20%]			
These SPs display the number of scanned sheets on which the coverage of ecfrom 11% to 20%.				
001	ВК	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]	

	[Cvr Cnt: 21-30%]			
8871	These SPs display the number of scanned sheets on which the coverage of each col from 21% to 30%.			
001	ВК	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]	

	[Cvr Cnt: 31%-]
8881	These SPs display the number of scanned sheets on which the coverage of each color is 31% or higher.

001 BK	<	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
--------	---	------	---------------------------------------

8891	[Page/Toner Bottle]			
0091	These SPs display the amount of the remaining current toner for each color.			
001	ВК	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]	

8901	[Page/Toner_Prev1]				
0901	These SPs display the amount of the remaining previous toner for each color.				
001	ВК	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		

8911	[Page/Toner_Prev2]				
0711	These SPs display the amount of the remaining 2nd previous toner for each color.				
001	ВК	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		

8921	[Cvr Cnt/Total]		
0721	Displays the total coverage and total printout number for each color.		
001	Coverage (%) Bk	*CTL	[0 to 2147483647 / <b>0</b> / 1% / step]
011	Coverage /P: Bk	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]

	[Machine Status]				
8941	These SPs count the amount of time the machine spends in each operation mode. These SPs are useful for customers who need to investigate machine operation for improvement in their compliance with ISO Standards.				
	Operation Time	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
001	Engine operation time. Does not include time while controller is saving data to HDD (while engine is not operating).				
	Standby Time	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
002	Engine not operating. Includes time while controller saves data to HDD. Does not include time spent in Energy Save, Low Power, or Off modes.				

003	Energy Save Time	*CTL	[0 to 99999999 / <b>0</b> / 10 / step]		
003	Includes time while the machine is performing background printing.				
	Low Power Time	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
004	Includes time in Energy Save mode with Engine on. Includes time while machine is performing background printing.				
	Off Mode Time	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
005	Includes time while machine is performing background printing. Does not include time machine remains powered off with the power switches.				
006	SC	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
000	Total time when SC errors have been staying.				
007	PrtJam	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
007	Total time when paper jams have been staying during printing.				
008	OrgJam	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
008	Total time when original jams have been staying during scanning.				
009	Supply PM Unit End	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
009	Total time when toner end has been staying				

0051	[AddBook Register]				
8951	These SPs count the number of events when the machine manages data registration.				
001	User Code/User ID	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]		
001	User code registrations.				
000	Mail Address	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]		
002	Mail address registrations.				
002	Fax Destination	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]		
003	Fax destination registrations.				
004	Group	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]		
004	Group destination registrations.				

005	Transfer Request	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]		
003	Fax relay destination registratio	ns for relay	, TX.		
006	F-Code	*CTL	[0 to 9999999/ <b>0</b> / 1 / step]		
F-Code box registrations.					
007	Copy Program	*CTL	[0 to 255 / <b>0</b> / 255 / step]		
007	Copy application registrations with the Program (job settings) feature.				
008	Fax Program	*CTL	[0 to 255 / <b>0</b> / 255 / step]		
008	Fax application registrations with the Program (job settings) feature.				
009	Printer Program	*CTL	[0 to 255 / <b>0</b> / 255 / step]		
009	Printer application registrations with the Program (job settings) feature.				
010	Scanner Program	*CTL	[0 to 255 / <b>0</b> / 255 / step]		
010	Scanner application registrations with the Program (job settings) feature.				

8961	[Electricity Status]				
0901	-				
001	Ctrl Standby Time	*CTL			
002	STR Time	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
003	Main Power Off Time	*CTL	[0 10 99999999 / <b>0</b> / 1 / siep]		
004	Reading and Printing Time	*CTL			
005	Printing Time	*CTL			
006	Reading Time	*CTL			
007	Eng Waiting Time	*CTL			
008	Low Power State Time	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]		
009	Silent State Time	*CTL			
010	Heater Off State Time	*CTL			
011	LCD on Time	*CTL			

8971	[Unit Control]			
-				
001	Engine Off Recovery Count	*CTL		
002	Power Off Count	*CTL	[0 to 99999999 / 0 / 1 / step]	
003	Force Power Off Count	*CTL		

0000	[Admin. Counter List]		
8999	Displays each total print out and	tal print out and total coverage.	
001	Total	*CTL [0 to 99999999 / 0 / 1 / step]	
003	Copy: BW	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
007	Printer: BW	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
010	Fax Print: BW	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
012	A3/DLT	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
013	Duplex	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
023	Copy: BW (%)	*CTL	[0 to 2147483647 / <b>0</b> / 1% / step]
027	Printer: BW (%)	*CTL	[0 to 2147483647 / <b>0</b> / 1% / step]
030	Fax Print: BW (%)	*CTL	[0 to 2147483647 / <b>0</b> / 1% / step]
101	Transmission Total: Color	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
102	Transmission Total: BW	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
103	Fax Transmission	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
104	Scanner Transmission: Color	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]
105	Scanner Transmission: BW	*CTL	[0 to 99999999 / <b>0</b> / 1 / step]

# **Printer SP Mode**

#### SP1-XXX (Service Mode)

1001	[Bit Swi	itch]			
001	Bit Swit	rch 1 Setting	0	1	
	bit 0	DFU	-	-	
	bit 1	You can switch the information displayed under the "sysName" standard MIB object between the normal data (PnP model name) and data for a custom model (host name). The host name is the name appearing under SP5-828-080.	Normal	Host Name (Custom)	
	bit 2	DFU	-	-	
	bit 3	No I/O Timeout	Disabled	Enabled	
		Enables/Disables MFP I/O Timeouts. If enabled, the MFP I/O Timeout setting will have no affect. I/O Timeouts will never occur.			
	bit 4	SD Card Save Mode	Disabled	Enabled	
		If this bit switch is enabled, print jobs will be saved to to paper.	the GW SD slo	t and not output	
	bit 5	DFU	-	-	
	bit 6	DFU	-	-	
	bit 7	[RPCS,PCL]: Printable area frame border	Disabled	Enabled	
		Prints all RPCS and PCL jobs with a border around the	e printable arec	1.	

|--|

5

			i	
002	Bit Swit	ch 2 Setting	0	1
	bit 0	DFU	-	-
	bit 1	DFU	-	-
	bit 2	Applying a Collate Type	Shift Collate	Normal Collate
		A collate type (shift or normal) will be applied to all jo define a collate type.	obs that do not	explicitely
		Note: If #5-0 is enabled, this BitSwitch has no effect.		
	bit 3	[PCL5e/c,PS]: PDL Auto Switching	Enabled	Disabled
		Enables/Disables the MFPs ability to change the PDL processor mid-job.		
		Some host systems submit jobs that contain both PS as switching is disabled, these jobs will not be printed pr		Auto PDL
	bit 4	DFU	-	-
	bit 5	DFU	-	-
	bit 6	DFU	-	-
	bit 7	DFU	-	-

003	Bit Swit	ch 3 Setting	0	1
	bit 0	DFU	-	-
	bit 1	DFU	-	-
	bit 2	[PCL5e/c]: Legacy HP compatibility	Disabled	Enabled
		Uses the same left margin as older HP models such as In other words, the left margin defined in the job (usua changed to " <esc>*r1A".</esc>	•	
	bit 3	DFU	-	-
	bit 4	DFU	-	-
	bit 5	DFU	-	-
	bit 6	DFU	-	-
	bit 7	DFU	-	-

1001	[Bit Swi	[Bit Switch]				
004	Bit Swit	t Switch 4 Setting		1		
	bit 0	DFU	-	-		
	bit 1	DFU	-	-		
	bit 2	DFU	-	-		
	bit 3	IPDS print-side reversal	Disabled	Enabled		
		If enabled, the simplex pages of IPDS jobs will be printing on the back side of the page. This might re				
	bit 4	DFU	-	-		
	bit 5	DFU	-	-		
	bit 6	DFU	-	-		
	bit 7	You can enable/disable the port for IPDS printing.	OFF	ON		

1001	[Bit Switch]		
005	Bit Switch 5 Setting	0	1

bit 0	Show "Collate Type", "Staple Type" and "Punch Type" buttons on the operation panel.	Disabled	Enabled	
	If enabled, users will be able to configure a Collate Type from the operation panel. The available Types we configured options.			
	After enabling this BitSw, the settings will appear under	er:		
	"User Tools > Printer Features > System"			
bit 1	Multiple copies if a paper size or type mismatch  Disabled  Enabled			
	occurs	(single copy)	(multiple)	
	If a paper size or type mismatch occurs during the printing of multiple copies, only a single copy is output by default. Using this BitSw, the device can be configured to print all copies even if a paper mismatch occurs.			
bit 2	Prevent SDK applications from altering the contents of a job.	Disabled	Enabled	
	If this BitSw is enabled, SDK applications will not be able to alter print data. This is achieved by preventing SDK applications from accessing a module called the "GPS Filter".			
	Note: The main purpose of this BitSw is for troubleshooting the effects of SDK applications on data.			
bit 3	[PS] PS Criteria	Pattern3	Pattern 1	
Change the number of PS criterion used by the PS interpereter to determine whe a job is PS data or not.				
bit 4	Increase max. number of stored jobs.	Disabled (100)	Enabled (750)	
	Changes the maximum number of jobs that can be s (disabled) is 100. If this is enabled, the max. will depending on the model.			
bit 5	DFU	-	-	

	bit 6	Method for determining the image rotation for the edge to bind on.	Disabled	Enabled	
		If enabled, the image rotation will be performed as they were in the specifications of older models for the binding of pages of mixed orientation jobs.			
The old models are below:					
		- PCL: Pre-04A models			
		- PS/PDF/RPCS:Pre-05S models			
	bit 7		D. 11.1	Enabled	
		Letterhead mode printing	Disabled	(Duplex)	
		Routes all pages through the duplex unit.			
If this is disabled, simplex pages or the last page of an odd-paged of not routed through the duplex unit. This could result in problems with printed pages.					
		Only affects pages specified as Letterhead paper.			

1001	[Bit Swi	[Bit Switch]			
006	Bit Switch 6 Setting		0	1	
	bit 0	DFU	-	-	
	bit 1	DFU	-	-	
	bit 2	DFU	-	-	
	bit 3	DFU	-	-	
	bit 4	DFU	-	-	
	bit 5	DFU	-	-	
	bit 6	DFU	-	-	
	bit 7	DFU	-	-	

1001
------

007	Bit Swi	tch 7 Setting	0	1
		Print path	Disabled	Enabled
	bit 0	If enabled, simplex pages (in mixed simplex/duplex PS/PCL5 jobs only) and the last page of an odd paged duplex job (PS, PCL5, PCL6), are always routed through the duplex unit. Not having to switch paper paths increases the print speed slightly.		
	bit 1	DFU	-	-
	bit 2	DFU	-	-
	bit 3	DFU	-	-
	bit 4	DFU	-	-
	bit 5	DFU	-	-
	bit 6	DFU	-	-
	bit 7	DFU	-	-

1001	[Bit Switch]			
------	--------------	--	--	--

008	Bit Swit	tch 8 Setting	0	1
	bit 0	DFU	-	-
	bit 1	DFU	-	-
	bit 2	DFU	-	-
	bit 3	[PCL,PS]: Allow BW jobs to print without requiring User Code	Disabled	Enabled (allow BW jobs to print without a user code)
		BW jobs submitted without a user code will authentication is enabled.	be printed ev	en if usercode
		Note: Color jobs will not be printed without a valid us	ser code.	
	bit 4	DFU	-	-
	bit 5	DFU	-	-
	bit 6	PCL, RPCS, PS: Forced BW print	Enabled	Disabled
		Switches whether to ignore PDL color command.		
	bit 7	[PDF]: Orientation Auto Detect Fuction	Enabled	Disabled
		Automatically chooses page orientations of PDF jobs on the content.	(Landscape or	Portrait) based

1001	[Bit Swi	itch]		
009	Bit Swit	rch 9 Setting	0	1
	bit 0	PDL Auto Detection timeout of jobs submitted via USB or Parallel Port (IEEE 1284).	Disabled (Immediatel y)	Enabled (10 seconds)
		To be used if PDL auto-detection fails. A failure of PDL necessarily mean that the job can't be printed. This bit to time-out immediately (default) upon failure or to we	t switch tells the	

bi	it 1	DFU	-	-	
bi	oit 2	Job Cancel	Disabled (Not cancelled)	Enabled (Cancelled)	
		If this bit switch, all jobs will be cancelled after a jam	occurs.		
		<b>Note:</b> If this bitsw is enabled, printing under the follow problems:	ving conditions	might result in	
		- Job submission via USB or Parallel Port			
		- Spool printing (WIM >Configuration > Device Settings > System)			
bi	it 3	PCL/PS bypass tray paper rotation (SEF/LEF)	Disabled	Enabled	
		This bitsw causes the device to revert to the behavior of previous generations. It only takes effect if "Bypass Tray Setting Priority" = "Driver/Command".			
		Previous spec (bitsw=1): If a standard sized paper mi tray, the MFP always prompted for SEF paper.	smatch occurre	d in the bypass	
		If this bitsw=0 (default) then in the event of a standard MFP will always prompt for paper of the rotation (SEI bypass tray paper setting or by the bypass tray senso	LEF) determin		
bi	oit 4	Timing of the PJL Status ReadBack (JOB END) when printing multiple collated copies.	Disable	Enable	
		This bitsw determines the timing of the PJL USTATUS Jacoblated copies are being printed.	OB END sent w	hen multiple	
		O (default): JOB END is sent by the device to the client after the first copy has completed printing. This causes the page counter to be incremented after the first copy and then again at the end of the job.			
		1: JOB END is sent by the device to the client after the This causes the page counter to be incremented at the	. ,		

bit	t 5	Display UTF-8 text in the operation panel	Enabled	Disabled
		Enabled (=0):		
		Text composed of UTF-8 characters can be displayed	I in the operation	on panel.
		Disabled (=1):		
		UTF-8 characters cannot be displayed in the operation	on panel.	
		For example, job names are sometimes stored in the <i>t</i> characters. When these are displayed on the operation unless this BitSw is enabled (=0).	•	
bit	t 6	Disable super option	Enabled	Disabled
		Switches super option disable on / off. It this is On, multiple jobs are grouped at LPR port. PJL settings are enabled even jobs that are specified queue names are sent.		
bit	t 7	Enable/Disable Print from USB/SD's Preview function	Enabled	Disabled
		Determines whether Print from USB/SD will have the Preview function.		
		Enabled (=0): Print from USB/SD will have the Preview function.		
		Disabled (=1): Print from USB/SD will not have the Preview function.		

1001	[Bit Swi	[Bit Switch]				
010	Bit Swit	rch A Setting	0	1		
	bit 0	DFU	-	-		
	bit 1	DFU	-	-		
	bit 2	DFU	-	-		
	bit 3	DFU	-	-		
	bit 4	DFU	-	-		
	bit 5	Store and Skip Errored Job locks the queue	Queue is not locked after SSEJ	Queue locked after SSEJ		
		If this is 1, then after a job is stored using Store and S jobs cannot be added to the queue until the stored job	•			

bit 6	Allow use of Store and Skip Errored Job if connected to an external charge device.	Does not allow SSEJ with ECD	Allows SSEJ with ECD
	If this is 0, Store and Skip Errored Job (SSEJ) will be external charge device is connected.  Note: We do not officially support enabling this bitsv	,	
bit 7	Job cancels remaining pages when the paid-for pages have been printed on an external charge device	Job does not cancel	Job cancels
	When setting 1 is enabled, after printing the paid-for pages on an external charge device, the job that includes any remaining pages will be canceled.  This setting will prevent the next user from printing the unnecessary pages from the previous user's print job.		

1001	[Bit Sw	vitch]					
011	Bit Sw	itch B Setting	0	1			
	bit 0	Show Menu List	Hide Menu List	Show Menu List			
		If this is 0, the Menu List button will be removed from	Printer Features				
	bit 1	Print job interruption  Does not allow interruption  Allow interruption					
		O (default): Print jobs are not interrupted. If a job is properties of the queue, it will wait for the currently printing job to finis		op of the print			
		1: If a job is promoted to the top of the queue, it will job and start printing immediately.	interrupt the curi	ently printing			
	bit 2 DFU You can specify whether or not to apply "Extended Auto Tray Switching" to the bypass tray when Printer Features > System > Tray Setting Priority > Bypass Tray is set to "Any Size/Type" (when the bypass tray is set to receive any type of paper).		Off	On			
	bit 3	Error setting for booklet printing	Job cancel	Continue			

	bit 4  If this BitSwitch is set to "1" (enabled), the "Apply Auto Paper Select" setting will decide if the paper size or paper type that is specified in the device settings should be overwritten by the job's commands when "Tray Setting Priority" is set to "Driver/ Command" or "Any Type".		Disabled	Enabled
		<ul> <li>Apply Auto Paper Select = OFF: Overwritten (priority is given to the job's commands)</li> <li>Apply Auto Paper Select = ON: Not overwritten (priority is given to the device settings)</li> </ul>		
	bit 5	DFU	-	-
	bit 6	DFU	-	-
	bit 7	DFU	-	-

1001	[Bit Swi	[Bit Switch]						
012	Bit Swit	Bit Switch C Setting		1				
	bit 0	DFU	-	-				
	bit 1	DFU	-	-				
	bit 2	DFU	-	-				
	bit 3	DFU	-	-				
	bit 4	DFU	-	-				
	bit 5	DFU	-	-				
	bit 6	DFU	-	-				
	bit 7	DFU	-	-				

1003	[Clear Setting]			
1-003-001	Initialize System	*CTL	[- / <b>-</b> / -] [Execute]	
	Initializes settings in the "System" menu of the user mode.			

1-003-003 Delete Pro	ogram *CTL	[- / <b>-</b> / -] [Execute]
----------------------	------------	---------------------------------

	1004	[Print Summary]				
	1004	Prints the service summar	y sheet (a s	ummary of all the controller settings).	the controller settings).	
	1-004-001	Print Summary	*CTL	[- / - / -] [Execute]		

1005	[Display Version]		
1-005-002	Printer Version	*CTL	[-/-/-]
1-005-002	Displays the version of the controller firmware.		r firmware.

1006	[Sample/Locked Print]		
	Sample / Locked Print	*CTL	[0 or 1 / <b>0</b> / 1 /step] 0: Linked, 1: On
1-006-002	server is enabled or disal	oled in acc	server. When you select "0," the document ordance with Copy Service Mode SP5-967. server is enabled regardless of Copy Service

1110	[Media Print Device Setting]		
1110	Selects the setting for the media print device.		
1-110-002	0: Disable 1: Enable	*CTL	[0 or 1 / 1 / 1 / step]

1111	[All Job Delete Mode]			
1-111-001	-	*CTL	[ 0 or 1 / 1 / 1 / step ]  0: Excluding New Job  1: Including New Job	
	Selects whether to includ cancellation from the SC	•	e processing job in jobs subject to full	

# Scanner SP Mode

#### SP1-XXX (System and Others)

	[Scan Nv Version]		
1001	Displays the scanner firmware version stored in NVRAM in a 9-digit format: Func.  Name_Model Name_History No.		
1-001-005	-	*CTL	[- / - / -]

[Erase Margin(Remote scan)]						
1005	Creates an erase margin for all edges of the scanned image.					
	If the machine has scanned the edge of the original, create a margin. This SP is activated only when the machine uses TWAIN scanning.					
1-005-001	Range from 0 to 5 mm	*CTL	[0 to 5 / <b>0</b> / 1 mm / step]			

1009	[Remote scan disable]		
1-009-001	0: Enable 1: Disable	*CTL	[0 or 1 / <b>0</b> / 1 / step]  0: Enable 1: Disable
	This SP switches the TWAIN scanner function on/off. This is one of the scanner application functions.		

1010	[Non Display ClearLight PDF]		
1-010-001	0: Display 1: Nondisplay	*CTL	[0 or 1 / <b>0</b> / 1 / step] 0: Display, 1: Nondisplay
	Display or Non display remote scan.		

1011	[Org Count Display]
------	---------------------

5

1-011-001	0: ON 1: OFF	*CTL	[0 or 1 / 0 / 1 / step] 0: ON (count displays) 1: OFF (no display)	
	This SP codes switches the o	e original count display on/off.		

1012	[UserInfo Release]				
	0: NO 1: YES	*CTL	[0 or 1 / 1 / 1 / step] 1: No 0: Yes		
	This SP code sets the machine to release or not release the following items at job end.				
1-012-001	Destination (E-mail/Folder/CS)				
	Sender name				
	Mail Text				
	Subject line				
	File name				

1013	[Scan to Media Device Setting]			
	0: OFF 1: ON	*CTL	[0 or 1 / 1 / 1 / step] 0: OFF 1: ON	
1-013-002	Sets enable or disable multi-media function.  Default is different with operation panel type.  If media slot (USB/SD) mounted on the operation panel is standard, default is "1".  If media slot (USB/SD) mounted on the operation panel is optional, default is "0".			

1013	[Scan to Media Device Setting]
------	--------------------------------

1.012.002	0: OFF 1: ON	*CTL	[0 or 1 / 1 / 1 / step] 0: OFF 1: ON		
1-013-003	Determines to disable/enable Scan-To-Media.  0: Disables  1: Enables				

1014	[Scan to Folder Pass Input Set]				
1-014-001	0: OFF 1: ON	*CTL	[0 or 1 / <b>0</b> / 1 / step] 0: OFF 1: ON		
	Sets enable or disable the p	oassword s	assword setting when make a Scan to Folder job.		

1041	[Scan:FlairAPI Setting]				
	0x00 – 0xff	*CTL		* see Bit	Switch below:
1-041-001	Sets Scanner FlairAPI F This SP is set by BitSwit		-		machine after making changes.
bit	C - Min - n	mear	ning	s	Description
DII	Setting	0		1	- Description
bit 0	Start of FlairAPI Server	Off (Do not Start)		On (Start)	Sets whether to start exclusive FlairAPI http server. If it is 0, scanning FlairAPI function and simple UI function will be disabled. The machine installed Android operating panel option, set "1", others set "0".
bit 1	Access permission of FlairAPI from outside of the machine	Disabled	E	Enabled	If it is "0", accessing is limited from the machine only, such as operating panel, SDK/J, MFP browsers etc If it is "1", accessing is allowed from outside of FlairAPI such as PC, Remote UI, IT-Box etc

bit 2	Reserved	-	-	-
bit 3	Reserved	-	-	-
bit 4	Reserved	-	-	Reserved
bit 5	Reserved	-	-	Reserved
bit 6	Reserved	-	-	-
bit 7	Reserved	-	-	-

## SP2-XXX (Scanning-image quality)

	[Compression Level (Grayscale)]				
2021	Selects the compression ratio for grayscale processing mode (JPEG) for the five settings that can be selected at the operation panel.				
2-021-001	Comp1:5-95	*CTL	[5 to 95 / <b>20</b> / 1 / step]		
2-021-002	Comp2:5-95	*CTL	[5 to 95 / <b>40</b> / 1 / step]		
2-021-003	Comp3:5-95	*CTL	[5 to 95 / <b>65</b> / 1 / step]		
2-021-004	Comp4:5-95	*CTL	[5 to 95 / <b>80</b> / 1 / step]		
2-021-005	Comp5:5-95	*CTL	[5 to 95 / <b>95</b> / 1 / step]		

	[Compression ratio of ClearLight PDF]				
2024	Selects the compression rat selected at the operation pe	atio for clearlight PDF for the two settings that can be panel.			
2-024-001	Compression Ratio (Normal)	*CTL	[5 to 95 / <b>25</b> / 1 / step]		
2-024-002	Compression Ratio (High)	*CTL	[5 to 95 / <b>20</b> / 1 / step]		

	[Compression ratio of ClearLightPDF JPEG2000]
2025	Selects the compression ratio for clearlight PDF for the two settings that can be selected at the operation panel.

2030	[OCR PDF DetectSens]		
2-030-001	White Lumi Value: 0 - 255	*CTL	[0 to 255 / <b>250</b> / 1 / step]
2-030-002	White Pix Ratio: 0 - 100	*CTL	[0 to 100 / <b>80</b> / 1 / step]
2-030-003	White Tile Ratio: 0 -100	*CTL	[0 to 100 / <b>80</b> / 1 / step]

5

#### 5

# **Input Check Table**

#### Main Machine – Input check

5803	[INPUT Check]			
5-803-001 R	Registration Sensor	ENG	[0 or 1 / 0 / 1/step] 0: paper exist 1: paper non exist	
	Responds to paper existence on registe (0: paper exist, 1: paper non exist)	r sensor posi	tion.	
5-803-002	Paper Feed Sensor 1	ENG	[0 or 1 / <b>0</b> / 1/step]  0: paper exist  1: paper non exist	
	Responds to paper existence on 1st par (O: paper exist, 1: paper non exist)	ds to paper existence on 1st paper feed sensor	sor position.	
5-803-003	Transport Sensor 1	ENG	[0 or 1 / <b>0</b> / 1/step]  0: paper exist  1: paper non exist	
Responds to pape	Responds to paper existence on 1st car (O: paper exist, 1: paper non exist)	er existence on 1st carry sensor position. : paper non exist)		
5-803-004	Paper Feed Sensor 2	ENG	[0 or 1 / <b>0</b> / 1/step] 0: paper exist 1: paper non exist	
	Responds to paper existence on 2nd po (O: paper exist, 1: paper non exist)	ds to paper existence on 2nd paper feed sensor position. er exist, 1: paper non exist)		
5-803-005	Transport Sensor 2	ENG	[0 or 1 / <b>0</b> / 1/step]  0: paper exist  1: paper non exist	
	Responds to paper existence on 2nd carry sensor position.  (0: paper exist, 1: paper non exist)			

			[0 or 1 / <b>0</b> / 1/step]
	Fusing Exit Sensor	ENG	0: paper exist
5-803-006			1: paper non exist
	Responds to paper existence on fusing	exit sensor po	osition.
	(0: paper exist, 1: paper non exist)		
			[0 or 1 / <b>0</b> / 1/step]
	Fusing Entrance Sensor	ENG	0: paper exist
5-803-007			1: paper non exist
	Responds to paper existence on fusing paper non exist)	entrance sen	sor position. (0: paper exist, 1:
			[0 or 1 / <b>0</b> / 1/step]
	Paper Exit Sensor	ENG	0: paper exist
5-803-008			1: paper non exist
	Responds to paper existence on paper	exit sensor p	osition.
	(0: paper exist, 1: paper non exist)	ENG  O: paper exist  1: paper non e  using exit sensor position.  t)  ENG  O: paper exist  1: paper non e  using entrance sensor position. (0: paper exist  1: paper non e  paper exit sensor position.  t)  ENG  O: paper exist  1: paper non e  everse sensor position.  t)  ENG  O: paper exist  1: paper non e  everse sensor position.  t)  ENG  O: paper exist  1: paper non e  duplex exit sensor position.  t)  ENG  O: paper exist  1: paper non e  duplex exit sensor position.  t)  ENG  O: paper exist  1: paper non e  duplex exit sensor position.	
			[0 or 1 / <b>0</b> / 1/step]
	Inverter Sensor	ENG	0: paper exist
5-803-009			1: paper non exist
	Responds to paper existence on reverse	e sensor posit	ion.
	(0: paper exist, 1: paper non exist)	ENG () ENG () ENG () ENG ()	
			[0 or 1 / <b>0</b> / 1/step]
	Duplex Exit Sensor	ENG	0: paper exist
5-803-010			1: paper non exist
	Responds to paper existence on duplex	exit sensor p	position.
	(0: paper exist, 1: paper non exist)		
			[0 or 1 / <b>0</b> / 1/step]
	Duplex Entrance Sensor	ENG	0: paper exist
5-803-011			1: paper non exist
	Responds to paper existence on duplex	entrance sei	nsor position.
	(0: paper exist, 1: paper non exist)		•

			1		
			[0 or 1 / <b>0</b> / 1/step]		
	Paper Exit Tray Full Sensor	ENG	0: Not full		
5-803-012			1: full		
	Detects paper full of main unit paper ex	it tray.			
	(0: Not full, 1: full)				
			[0 to 3 / <b>0</b> / 1/step]		
			When full is 100%,		
	T 10 . C l	EN IO	11: 71 to 100%		
	Tray 1 Remain Switch	ENG	01: 31 to 70%		
			00: 11 to 30%		
5-803-013			10: 1 to 10%		
	Detects remaining paper amount of 1st	paper feed t	tray.		
	(When full is 100%,				
	11: 71 to 100%, 01: 31 to 70%, 00: 11 to 30%, 10: 1 to 10%)				
	*Check SP5-803-015 for paper end.				
	Tray 1: Upper Limit Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
			0: less then limit		
5-803-014			1: high then limit		
	Detects the height of paper loaded in 1st paper feed tray.				
	(0: less then limit, 1: high then limit)				
			[0 or 1 / <b>0</b> / 1/step]		
	Tray 1 Paper End Sensor	ENG	0: No paper		
5-803-015			1: paper remaining		
	Detects paper is running out on 1st pap	er feed tray.			
	(0: No paper, 1: paper remaining)				
			[0 or 1 / <b>0</b> / 1/step]		
	Tray 1 Set Switch	ENG	O: set		
5-803-016			1:not set		
	Detects that 1st paper feed tray is set to main unit.				
	(0: set, 1:not set)				
	<u>'</u>				

			[0 to 3 / <b>0</b> / 1/step]	
			When full is 100%,	
		FNIC	11:71 to 100%	
	Tray 2 Remain Switch	ENG	01: 31 to 70%	
			00: 11 to 30%	
5-803-017			10: 1 to 10%	
	Detects remaining paper amount of 2nd	d paper feed	tray.	
	(When full is 100%,			
	11: 71 to 100%, 01: 31 to 70%, 00: 1	1 to 30%, 1	0: 1 to 10%)	
	*Check SP5-803-019 for paper end.			
			[0 or 1 / <b>0</b> / 1/step]	
	Tray 2 Upper Limit Sensor	ENG	0: less then limit	
5-803-018			1: high then limit	
	Detects the height of paper loaded in 2nd paper feed tray.			
	(O: less then limit, 1: high then limit)			
	Tray 2 Paper End Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
			0: No paper	
5-803-019			1: paper remaining	
	Detects paper running out of 2nd paper feed tray.			
	(0: No paper, 1: paper remaining)			
			[0 or 1 / <b>0</b> / 1/step]	
	Tray 2 Set Switch	ENG	0: set	
5-803-020			1: not set	
	Detects that 2nd paper feed tray is set to main unit.			
	(0: set, 1:not set)			
5.000.005	Tray 2 Size Switch	ENG	[0 to 15 / <b>0</b> / 1/step]	
5-803-021	Value changes depending on paper size (fence position) set to 2nd paper feed tray.			

	By-pass: Paper End Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
			0: No paper		
5-803-022			1: paper remaining		
	Detects paper is running out on bypass	tray.			
	(0: No paper, 1: paper remaining)				
5-803-023	Bypass Main Scan Length Switch	ENG	[0 to 31 / <b>0</b> / 1/step]		
3-803-023	Value changes depending on main sca	n direction o	f paper set to bypass tray.		
5-803-024	Bypass Sub Scan Length Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
3 000 024	Value changes depending on sub scan	direction of p	paper set to bypass tray.		
			[0 to 1 / <b>0</b> / 1/step]		
	Main Door Interlock Switch	ENG	00: Unlocked		
5-803-025			11: Locked		
	Detects open/close of interlock switch (front cover/right cover).				
	(00: Unlocked, 11: Locked)				
	Right Door Open/Close Switch	ENG	[0 or 1 / <b>0</b> / 1/step]		
			0: close		
5-803-026			1: open		
	Detects right door status.				
	(0: close, 1: open)				
		ENG	[0 or 1 / <b>0</b> / 1/step]		
	Duplex Guide Plate Open/Close Switch		0: close		
5-803-027	Swiich		1: open		
	Detects duplex guide plate status.				
	(0: close, 1: open)				
			[0 or 1 / <b>0</b> / 1/step]		
	Transfer Open/Close Sensor	ENG	0: open		
5-803-028			1: close		
	Detects paper transfer unit status.				
	(0: open, 1: close)				

5-803-029	Transfer Contact Sensor	ENG	[0 or 1 / <b>0</b> / 1/step] 0: Abutting 1: Alienate	
	Detects image transfer roller and photon (0: Abutting, 1: Alienate)	receptors dis	tance.	
5-803-032	Waste Toner Bottle Near Full Sensor	ENG	[0 or 1 / <b>0</b> / 1/step] 0: Not full 1: full	
	Detects full of waste toner bottle. (0: Not full, 1: full)			
5-803-033	Toner Bottle Set Switch	ENG	[0 or 1 / <b>0</b> / 1/step] 0: set 1: not set	
	Detects that toner bottle is set to main unit. (O: set, 1:not set)			
5-803-038	Fusing Set & Country Detection	ENG	[0 to 15 / <b>0</b> / 1/step] 0111:200V system 1011:100V System	
	Detects region of fusing unit. (0111: 200V system, 1011: 100V System)			
5-803-039	Fusing New Fuse Blown Detection	ENG	[0 or 1 / <b>0</b> / 1/step] 0: New 1: Old	
	Detects New/Old of fusing unit. (0: New, 1: Old)			
5-803-048	Fusing Exit Fan:Lock	ENG	[0 or 1 / <b>0</b> / 1/step] 0: Running 1: Stopped, or locked	
	Detects locking of fusing exit fan. (0: Running, 1: Stopped, or locked)			

			1		
	PSU Cooling Fan:Lock	ENG	[0 or 1 / <b>0</b> / 1/step] 0: Running		
5-803-051	,		1: Stopped, or locked		
	Detects locking of PSU cooling fan.				
	(0: Running, 1: Stopped, or locked)				
			[0 or 1 / <b>0</b> / 1/step]		
	Main Exhaust Fan:Lock	ENG	O: Running		
5-803-057			1: Stopped, or locked		
	Detects locking of main unit exhaust hed	at fan.			
	(0: Running, 1: Stopped, or locked)				
			[0 or 1 / <b>0</b> / 1/step]		
	Paper Exit Cooling Fan: Lock	ENG	0: Running		
5-803-058			1: Stopped, or locked		
	Detects locking of paper exit cooling fan.				
	(0: Running, 1: Stopped, or locked)				
	Toner Bottle Cooling Fan:Lock	ENG	[0 or 1 / <b>0</b> / 1/step]		
			0: Running		
5-803-060			1: Stopped, or locked		
	Detects locking of toner supply bottle cooling fan.				
	(0: Running, 1: Stopped, or locked)				
			[0 or 1 / <b>0</b> / 1/step]		
	Development Motor : Lock	ENG	0: Running		
5-803-061			1: Stopped, or locked		
	Detects locking of developer motor (K).				
	(O: Running, 1: Stopped, or locked)				
			[0 or 1 / <b>0</b> / 1/step]		
	Fusing/Fusing Exit Motor:Lock	ENG	0: Running		
5-803-065			1: Stopped, or locked		
	Detects locking of fusing motor.				
	(O: Running, 1: Stopped, or locked)				

5-803-066	Drum Motor:Lock  Detects locking of transfer drum motor K (0: Running, 1: Stopped, or locked)	ENG (.	[0 or 1 / <b>0</b> / 1/step]  0: Running  1: Stopped, or locked		
5-803-067	HVP/Separation DC/(-):Abnormal Detection	ENG	[0 or 1 / <b>0</b> / 1/step] 0: SC detected 1: Normal		
	Detects SC of HVP (secession). (0: SC detected, 1: Normal)				
5-803-068	HVP/ChargeDC/(-):Abnormal Detection	ENG	[0 or 1 / <b>0</b> / 1/step] 0: SC detected 1: Normal		
	Detects SC of HVP (electrify/develop). (0: SC detected, 1: Normal)				
5-803-069	HVP/PTR DC/(+)&(-):Abnormal Detection	ENG	[0 or 1 / <b>0</b> / 1/step] 0: SC detected 1: Normal		
	Detects SC of HVP (transfer). (0: SC detected, 1: Normal)				
5-803-070	HVP/Development DC/(-):Abnormal Detection	ENG	[0 or 1 / <b>0</b> / 1/step] 0: SC detected 1: Normal		
	Detects SC of HVP (Development). (0: SC detected, 1: Normal)				

			[0 or 1 / <b>0</b> / 1/step]		
			0: set		
	Key Counter:Set Sensor 1	ENG	1:unset		
5-803-072			key counter: set 1=0, 2=1 for set, others for unset		
			3ci, ollicis for oliser		
	Detects setting of key counter.				
	(O: set, 1:unset)				
	(key counter: set 1=0, 2=1 for set, other	rs for unset)			
			[0 or 1 / <b>0</b> / 1/step]		
			0: set		
	Key Counter:Set Sensor 2	ENG	1:unset		
£ 000 070			key counter: set 1=0, 2=1 for		
5-803-073			set, others for unset		
	Detects setting of key counter.				
	(0: unset, 1:set)				
	(key counter: set 1=0, 2=1 for set, other	rs for unset)			
			[0 or 1 / <b>0</b> / 1/step]		
	Key Card: Set Detection	ENG	0: set		
5-803-074			1: not set		
	Detects that key card is set to main unit.				
	(O: set, 1:not set)				
			[0 or 1 / <b>0</b> / 1/step]		
	1-Bin Remain Paper Detection	ENG	0: paper exist		
5-803-075	'		1: paper non exist		
3-003-073					
	Detects that paper is left upon the tray.  (0: paper exist, 1: paper non exist)				
	(o. paper exist, 1. paper from exist)				
			[0 or 1 / <b>0</b> / 1/step]		
	1-Bin Set Detection	ENG	0: paper exist		
5-803-076			1: paper non exist		
	Detects that tray is set to main unit.				
	(0: set, 1:not set)				
	<u> </u>				

			[0 or 1 / <b>0</b> / 1/step]		
	Bridge Relay Sensor	ENG	0: paper exist		
5 000 077		LINO	1: paper non exist		
5-803-077					
	Responds to paper existence on carry s	ensor positio	n or bridge unit.		
	(0: paper exist, 1: paper non exist)				
			[0 or 1 / <b>0</b> / 1/step]		
	Bridge Exit Sensor	ENG	0: Paper exist		
5-803-078			1: Paper do not exist		
	Responds to paper existence on paper	exit sensor po	osition or bridge unit.		
	(0: paper exist, 1: paper non exist)				
			[0 or 1 / <b>0</b> / 1/step]		
	Relay Set Detection Mechanism	ENG	0: set		
5-803-079			1:not set		
	Detects that bridge unit is set to main unit.				
	(10: set, 11:not set)				
		ENG	[0 or 1 / <b>0</b> / 1/step]		
	RelayTransCov OP Detect/ LeftTransCov OP Sn		0: close		
5-803-082	Lentituriscov Of Sir	1: open			
3-603-062	Detects open/close of the relay exit cov	ver open/clo	se sensor (bridge unit) and the		
	left transport cover open/close sensor (left exit tray).				
	(0: close, 1: open)				
			[0 or 1 / <b>0</b> / 1/step]		
	RelayPprExitCovOP Detect/ UpperTransCovOP Sn	ENG	0: close		
5-803-083	appointances ver en		1: open		
3-003-003	Detects open/close of the relay exit cover open/close sensor (bridge unit) and the upper transport cover open/close sensor (left exit tray).				
	(0: close, 1: open)				
	<u> </u>				

5-803-084	Shift Tray Set Detection Mechanism  Detects that shift tray is set to main unit.  (01: set, 11:not set)	ENG	[0 or 1 / <b>0</b> / 1/step] 01: set 11:not set		
5-803-085	Shift Tray: Position Sensor 1	ENG	[0 or 1 / 0 / 1/step]  0: Stop on this side. during moving towards inner  1: Stop on inner side. during moving towards this side		
	Detects shift tray position.  (0: Stop on this side. during moving towards inner,  1: Stop on inner side. during moving towards this side)				
5-803-094	GAVD Open/Close Detection	ENG	[0 or 1 / 0 / 1/step]		
3-603-094	For checking door open/close during process. No need to operate.				
5-803-095	Relay Fuse Blown Detection +24V	ENG	[0 or 1 / <b>0</b> / 1/step] 0: Not cut 1: Cut		
	Detects state of 24V fuse on the bridge unit. (0: Not cut, 1: Cut)				
5-803-096	Relay Fuse Blown Detection +5V	ENG	[0 or 1 / <b>0</b> / 1/step] 0: Not cut 1: Cut		
	Detects state of 5V fuse on the bridge unit. (0: Not cut, 1: Cut)				
	PCB Ver Management	ENG	[0 to 31 / <b>0</b> / 1/step]		
5-803-100	Displays PCB version management ID. Displays in order of ID0, ID1, ID2, ID3, ID4 from the left.				

	Tray 1 Size Switch	ENG	[0 to 15 / <b>0</b> / 1/step]		
5-803-101	Value changes depending on paper size of tray 1.				
5-803-102	Controller Fan:Lock	ENG	[0 or 1 / <b>0</b> / 1/step] 0: Running		
0 000 102			1: Stopped, or locked		
	Detects CTL fan lock status.	I			
5-803-200	HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
3 000 200	Tests the scanner HP sensor.				
5-803-201	Platen Cover Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
3-603-201	Tests the book open/close sensor.				
[INPUT Check]					
5803	Gets information of specified sensor.				
5-803-211	Bank: Tray3: Feed Sensor	ENG			
5-803-212	Bank: Tray4: Feed Sensor	ENG			
5-803-213	Bank: Tray5: Feed Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
5-803-214	Bank: Tray3: Transport Sensor	ENG	0: paper not detected 1: paper detected.		
5-803-215	Bank: Tray4: Transport Sensor	ENG			
5-803-216	Bank: Tray5: Transport Sensor	ENG			
5-803-217	Bank: Feed Cover Open Detection 1	ENG	[0 or 1 / <b>0</b> / 1/step]		
5-803-218	Bank: Feed Cover Open Detection 2	ENG	0: cover open		
5-803-219	LCT Paper Supply Open/Close	ENG	1: cover closed		
5-803-220	LCT Slide Open/Close	ENG	[0 or 1 / 0 / 1/step] 0: slide open 1: slide closed		

#### ADF D779 – Input check

4007	[ADF INPUT Check]			
6007	Gets sensor information from ADF. Displays signal level of sensor as it is.			
6-007-001	Original Length 1 (B5 Detection Sensor)	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-007-002	Original Length 2 (A4 Detection Sensor)	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-007-003	Original Length 3 (LG Detection Sensor)	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-007-004	Original Width 1	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-007-005	Original Width 2	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-007-006	Original Width 3	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-007-007	Original Width 4	ENG	[0 or 1 / 0 / 1/step]	
6-007-008	Original Width 5	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-007-009	Original Detection	ENG	[0 or 1 / 0 / 1/step]	
6-007-011	Skew Correction	ENG	[0 or 1 / 0 / 1/step]	
6-007-013	Registration Sensor	ENG	[0 or 1 / 0 / 1/step]	
6-007-014	Exit Sensor	ENG	[0 or 1 / 0 / 1/step]	
6-007-015	Feed Cover Sensor	ENG	[0 or 1 / 0 / 1/step]	
6-007-016	Lift Up Sensor	ENG	[0 or 1 / 0 / 1/step]	
6-007-023	Rear Edge Detection	ENG	[0 or 1 / 0 / 1/step]	

#### 1-Pass ADF D683 – Input check

6011	[1-Pass ADF INPUT Check]
0011	For Single-Pass simultaneous duplex models only.

( 011 001	Original Length 1 (B5 Sensor)	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-011-001	Gets sensor information from ADF. Gives 1 when there is a paper at sensor area.			
6-011-002	Original Length 2 (A4 Sensor)	ENG	[0 or 1 / <b>0</b> / 1/step]	
	Gets sensor information from Al	DF. Gives 1 wh	en there is a paper at sensor area.	
6-011-003	Original Length 3 (LG Sensor)	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-011-003	Gets sensor information from Al	DF. Gives 1 wh	en there is a paper at sensor area.	
6-011-004	Original Width 1	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-011-004	Gets sensor information from Al	DF. Gives 1 wh	en there is a paper at sensor area.	
6-011-005	Original Width 2	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-011-003	Gets sensor information from Al	DF. Gives 1 wh	en there is a paper at sensor area.	
6-011-006	Original Width 3	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-011-006	Gets sensor information from ADF. Gives 1 when there is a paper at sensor area.			
6-011-007	Original Width 4	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-011-007	Gets sensor information from ADF. Gives 1 when there is a paper at sensor area.			
6-011-008	Original Width 5	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-011-008	Gets sensor information from ADF. Gives 1 when there is a paper at sensor area.			
6-011-009	Original Detection	ENG	[0 or 1 / <b>0</b> / 1/step]	
8-011-009	Gets sensor information from ADF. Gives 1 when original is set.			
6-011-010	Separation Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-011-010	Gets sensor information from Al	DF. Gives 1 wh	en there is a paper at sensor area.	
6.011.011	Skew Correction	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-011-011	Gets sensor information from Al	DF. Gives 1 wh	en there is a paper at sensor area.	
6.011.010	Scan Entrance Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-011-012	Gets sensor information from Al	DF. Gives 1 wh	en there is a paper at sensor area.	

6-011-013	Registration Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0 011 010	Gets sensor information from Al	DF. Gives 1 wh	en there is a paper at sensor area.	
6-011-014	Exit Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-011-014	Gets sensor information from Al	DF. Gives 1 wh	en there is a paper at sensor area.	
6-011-015	Feed Cover Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-011-015	Gets sensor information from Al	DF. Gives 1 wh	en cover is open.	
6-011-016	Lift Up Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-011-010	Gets sensor information from ADF. Gives 1 when lift up.			
6-011-018	Pick-Up Roller HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-011-018	Gets sensor information from ADF. Gives 1 when pick up roller is not in home position.			
6-011-021	Bottom Plate HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-011-021	Gets sensor information from ADF. Gives 1 when bottom plate is not in home position.			
	Bottom Plate Position Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-011-022	Gets sensor information from ADF. Gives 1 when pick up roller is not in the correct position.			
6-011-023	Original Length 4 (LT/A4 Tail Sensor)	ENG	[0 or 1 / <b>0</b> / 1/step]	
	Gets sensor information from Al	DF. Gives 1 wh	en there is a paper at sensor area.	

## 2000/3000 Sheets Finisher D688 / D689 – Input check

6123	[INPUT Check: 2K/3K FIN]		
6-123-001	Entrance Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
	Gets information of specified sensor. Displays signal level of sensor as it is.		
6-123-002	Horizontal Transport Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
	Gets information of specified sensor. Displays signal level of sensor as it is.		

			I		
6-123-003	Switchback Transport Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0 120 000	Gets information of specified sensor. Displays signal level of sensor as it is.				
6-123-004	Proof Tray Exit Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-123-004	Gets information of specified se	nsor. Displays	signal level of sensor as it is.		
6-123-005	Shift Tray Exit Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-123-003	Gets information of specified se	nsor. Displays	signal level of sensor as it is.		
4 122 004	Booklet Stapler Exit Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-123-006	Gets information of specified se	nsor. Displays	signal level of sensor as it is.		
6-123-007	Paper Exit Open/Close Guide HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Gets information of specified se	nsor. Displays	signal level of sensor as it is.		
6-123-008	Punch HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-123-006	Gets information of specified sensor. Displays signal level of sensor as it is.				
6-123-009	Punch Move HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-123-009	Gets information of specified sensor. Displays signal level of sensor as it is.				
6-123-010	S-to-S Registration Detection HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Gets information of specified sensor. Displays signal level of sensor as it is.				
6-123-011	Lower Junction Solenoid HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Gets information of specified se	nsor. Displays	signal level of sensor as it is.		
6-123-012	Jogger HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-123-012	Gets information of specified se	nsor. Displays	signal level of sensor as it is.		
6-123-013	Positioning Roller HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-123-013	Gets information of specified se	nsor. Displays	signal level of sensor as it is.		
6-123-014	Feed-out HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-123-014	Gets information of specified se	nsor. Displays	signal level of sensor as it is.		

6-123-015	Stapler Moving HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-123-013	Gets information of specified sensor. Displays signal level of sensor as it is.				
6-123-016	Booklet Stapler HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-123-010	Gets information of specified se	nsor. Displays	signal level of sensor as it is.		
6-123-017	Booklet Jogger HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-123-017	Gets information of specified se	nsor. Displays	signal level of sensor as it is.		
6-123-018	Booklet Jog Solenoid HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Gets information of specified se	nsor. Displays	signal level of sensor as it is.		
6-123-019	Booklet Standard Fence HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Gets information of specified se	nsor. Displays	signal level of sensor as it is.		
6-123-020	Booklet Stapler HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-123-020	Gets information of specified sensor. Displays signal level of sensor as it is.				
6-123-022	Folder Blade Cam HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-123-022	Gets information of specified sensor. Displays signal level of sensor as it is.				
6-123-023	Folder Blade HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-123-023	Gets information of specified sensor. Displays signal level of sensor as it is.				
6-123-024	Shift Roller HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-123-024	Gets information of specified sensor. Displays signal level of sensor as it is.				
	Shift Jogger HP Sensor: Front	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-123-025	Gets information of specified sensor. Displays signal level of sensor as it is.  * Not Use: Currently, Booklet Finisher SR3170 (D688) / Finisher SR3160 (D689) do not have setting jogger in system configuration.				
	Shift Jogger HP Sensor: Rear	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-123-026	Gets information of specified se  * Not Use: Currently, Booklet F not have setting jogger in system	inisher SR3170	) (D688) / Finisher SR3160 (D689) do		

	Shift Jogger Retraction HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-123-027	Gets information of specified se	nsor. Displays	signal level of sensor as it is.	
	* Not Use: Currently, Booklet F not have setting jogger in syster		) (D688) / Finisher SR3160 (D689) do	
6-123-028	Drag Roller Vibrating HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
	Gets information of specified se	nsor. Displays	signal level of sensor as it is.	
4 102 020	LE Guide HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-123-029	Gets information of specified se	nsor. Displays	signal level of sensor as it is.	
6-123-030	TE Stack Plate HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-123-030	Gets information of specified se	nsor. Displays	signal level of sensor as it is.	
4 102 021	Staple Tray Paper Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-123-031	Gets information of specified sensor. Displays signal level of sensor as it is.			
4 102 022	ITB Paper Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-123-032	Gets information of specified sensor. Displays signal level of sensor as it is.			
6-123-033	Booklet Stapler Transport Paper Sn: Upper	ENG	[0 or 1 / <b>0</b> / 1/step]	
	Gets information of specified sensor. Displays signal level of sensor as it is.			
6-123-034	Booklet Stapler Transport Paper Sn: Lower	ENG	[0 or 1 / <b>0</b> / 1/step]	
	Gets information of specified sensor. Displays signal level of sensor as it is.			
4 100 005	Paper Height Sensor: Shift	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-123-035	Gets information of specified sensor. Displays signal level of sensor as it is.			
6-123-036	Corner Stapler Paper Height Sensor 1	ENG	[0 or 1 / <b>0</b> / 1/step]	
	Gets information of specified se	nsor. Displays	signal level of sensor as it is.	

6-123-037	Corner Stapler Paper Height Sensor 2	ENG	[0 or 1 / <b>0</b> / 1/step]			
	Gets information of specified se	nsor. Displays :	signal level of sensor as it is.			
6-123-038	Proof Tray Full Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]			
0-123-036	Gets information of specified se	Gets information of specified sensor. Displays signal level of sensor as it is.				
6-123-039	Booklet Stapler Full Sensor 1	ENG	[0 or 1 / <b>0</b> / 1/step]			
0-123-039	Gets information of specified se	nsor. Displays :	signal level of sensor as it is.			
6-123-040	Booklet Stapler Full Sensor 2	ENG	[0 or 1 / <b>0</b> / 1/step]			
0-123-040	Gets information of specified se	nsor. Displays :	signal level of sensor as it is.			
6-123-041	S-to-S Registration Detection Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]			
	Gets information of specified se	nsor. Displays :	signal level of sensor as it is.			
6-123-042	Punch RPS Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]			
0-123-042	Gets information of specified sensor. Displays signal level of sensor as it is.					
6-123-043	Corner Stapler Leading Edge Detection Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]			
	Gets information of specified sensor. Displays signal level of sensor as it is.					
6-123-044	Corner Stapler Staple End Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]			
	Gets information of specified sensor. Displays signal level of sensor as it is.					
6-123-045	Booklet Stapler Staple End Sensor: Front	ENG	[0 or 1 / <b>0</b> / 1/step]			
	Gets information of specified se	nsor. Displays	signal level of sensor as it is.			
6-123-046	Booklet Stapler Staple End Sensor: Rear	ENG	[0 or 1 / <b>0</b> / 1/step]			
	Gets information of specified sensor. Displays signal level of sensor as it is.					

6-123-047	Shift Tray Lower Limit Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Gets information of specified sensor. Displays signal level of sensor as it is.				
6-123-048	Shift Tray Lower Limit Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Gets information of specified sensor. Displays signal level of sensor as it is.				
6-123-049	Shift Tray Lower Limit Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Gets information of specified sensor. Displays signal level of sensor as it is.				
6-123-050	Shift Tray Lower Limit Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Gets information of specified sensor. Displays signal level of sensor as it is.				
6-123-051	Shift Tray Lower Limit Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Gets information of specified sensor. Displays signal level of sensor as it is.				
4 102 052	Punch Chad Full Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-123-052	Gets information of specified sensor. Displays signal level of sensor as it is.				
	Punch Set Detection	ENG	[0 or 1 / <b>0</b> / 1/step]		
/ 100 050			0: connected		
6-123-053			1: not connected		
	Gets connection status of punch unit.				
6-123-054			[0 or 1 / <b>0</b> / 1/step]		
	Shift Jogger Set Detection	ENG	0: connected		
			1: not connected		
	Gets connection status of setting jogger unit.				
	* Not Use: Currently, Booklet Finisher SR3170 (D688) / Finisher SR3160 (D689) do not have setting jogger in system configuration.				

6-123-055	Booklet Stapler Set Detection	ENG	[0 or 1 / <b>0</b> / 1/step] 0: not connected 1: connected		
	Gets connection status of saddle stitch unit.				
6-123-056	Front Door SW	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Gets information of specified switch. Displays signal level of switch as it is.				
6-123-057	Dynamic Roller Open/Close Guide Plate Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Gets information of specified switch. Displays signal level of switch as it is.				
/ 100 050	Tray Upper Limit SW	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-123-058	Gets information of specified switch. Displays signal level of switch as it is.				
6-123-059	Paper Exit Open/Close Guide Plate Limit SW	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Gets information of specified switch. Displays signal level of switch as it is.				
6-123-060	Punch Selection DIPSW 1	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Gets information of specified switch. Displays signal level of switch as it is.				
6-123-061	Punch Selection DIPSW 2	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Gets information of specified switch. Displays signal level of switch as it is.				

### Internal Finisher D690 – Input check

6135	[INPUT Check: FrontFIN]			
	Gets information of specified sensor. Displays signal level of sensor as it is.			
6-135-001	Entrance Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-135-002	Carry Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-135-003	Exit Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-135-004	Staple Tray Paper Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-135-005	Front Jogger HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	

	I		I
6-135-006	Rear Jogger HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
6-135-007	Sft Roller HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
6-135-008	Hitroll HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
6-135-009	Ext Guide Plate HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
6-135-010	Staple Moving HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
6-135-011	Shift Tray Paper Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
6-135-012	Shift Tray Limit Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
6-135-013	Staple Rotation Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
6-135-014	Staple Near End Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
6-135-015	Self Priming Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
6-135-016	Stopper HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
6-135-017	Punch HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
6-135-018	Punch Pluse Count Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
6-135-019	Punch Chad Full Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
6-135-020	Punch Moving HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
6-135-021	Punch Registration Detection HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
6-135-022	Punch Registration Detection Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
6135	[INPUT Check: FrontFIN]		
	Gets information of specified switch. Displays signal level of switch as it is.		
6-135-023	Slide Door SW	ENG	[0 or 1 / <b>0</b> / 1/step]
6-135-024	Shift Tray Upper Limit SW	ENG	[0 or 1 / <b>0</b> / 1/step]

## 1000 Sheets Finisher D687 – Input check

[FIN (1K FIN) INPUT Check]				
Gets information of specified sensor. Displays signal level of sensor as it is.				
Entrance Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
Upper Cover Open/Close Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
Proof Tray Exit Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
Proof Tray Full Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
Shift HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
Exit Guide Plate Open/Close HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
Shift Paper Exit (Lift Tray Exit) Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
Positioning Roller HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
Lift Tray Paper Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
Jogger HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
Feed Out HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
Lift Tray Lower Limit Sensor (Upper)	ENG	[0 or 1 / <b>0</b> / 1/step]		
Lift Tray Lower Limit Sensor (Lower)	ENG	[0 or 1 / <b>0</b> / 1/step]		
Staple Tray Paper Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
Stapler Moving HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
Near End Sensor (Common: Corner/Bklt Stplr)	ENG	[0 or 1 / <b>0</b> / 1/step]		
Self Priming Sensor (Common:Crnr/Bklt Stplr)	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Gets information of specified se Entrance Sensor  Upper Cover Open/Close Sensor  Proof Tray Exit Sensor  Proof Tray Full Sensor  Shift HP Sensor  Exit Guide Plate Open/Close HP Sensor  Shift Paper Exit (Lift Tray Exit) Sensor  Positioning Roller HP Sensor  Lift Tray Paper Sensor  Jogger HP Sensor  Feed Out HP Sensor  Lift Tray Lower Limit Sensor (Upper)  Lift Tray Lower Limit Sensor (Lower)  Staple Tray Paper Sensor  Stapler Moving HP Sensor  Near End Sensor (Common: Corner/Bklt Stplr)  Self Priming Sensor	Gets information of specified sensor. Displays  Entrance Sensor ENG  Upper Cover Open/Close Sensor ENG  Proof Tray Exit Sensor ENG  Proof Tray Full Sensor ENG  Shift HP Sensor ENG  Exit Guide Plate Open/Close HP Sensor ENG  Shift Paper Exit (Lift Tray Exit) Sensor ENG  Cift Tray Paper Sensor ENG  Lift Tray Paper Sensor ENG  Lift Tray Lower Limit Sensor ENG  Lift Tray Lower Limit Sensor ENG  Clower)  Staple Tray Paper Sensor ENG  Stapler Moving HP Sensor ENG  Stapler Moving HP Sensor ENG  Near End Sensor (Common: Corner/Bklt Stplr)  Self Priming Sensor		

Driver HP Sensor (Corner/ Booklet Stapler)	ENG	[0 or 1 / <b>0</b> / 1/step]	
Driver Timing Sensor(Corner/ Booklet Stapler)	ENG	[0 or 1 / <b>0</b> / 1/step]	
Clincher HP Sensor (Corner/ Booklet Stapler)	ENG	[0 or 1 / <b>0</b> / 1/step]	
Clincher Timing Sensor (Corner/Bklt Stapler)	ENG	[0 or 1 / <b>0</b> / 1/step]	
Stapler Retraction Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
Punch HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
Punch RP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
Punch Hopper Full Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
Punch Move HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
S-to-S Registration Detection HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
S-to-S Registration Detection Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
[FIN (1K FIN) INPUT Check]	-1		
Gets information of specified sw	vitch. Displays s	signal level of switch as it is.	
Punch Selection DIPSW 1	ENG	[0 or 1 / <b>0</b> / 1/step]	
Punch Selection DIPSW 2	ENG	[0 or 1 / <b>0</b> / 1/step]	
[FIN (1K FIN) INPUT Check]			
Gets information of specified se	nsor. Displays	signal level of sensor as it is.	
ITB Transport Sensor: Right	ENG	[0 or 1 / <b>0</b> / 1/step]	
ITB Transport Sensor: Left	ENG	[0 or 1 / <b>0</b> / 1/step]	
Stack Transport Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
Stack Trans Upper Pressure Release HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
	Booklet Stapler)  Driver Timing Sensor(Corner/Booklet Stapler)  Clincher HP Sensor (Corner/Booklet Stapler)  Clincher Timing Sensor (Corner/Bklt Stapler)  Stapler Retraction Sensor  Punch HP Sensor  Punch Hopper Full Sensor  Punch Move HP Sensor  S-to-S Registration Detection HP Sensor  S-to-S Registration Detection Sensor  [FIN (1K FIN) INPUT Check]  Gets information of specified swall punch Selection DIPSW 1  Punch Selection DIPSW 2  [FIN (1K FIN) INPUT Check]  Gets information of specified selection DIPSW 2  [FIN (1K FIN) INPUT Check]  Stack Transport Sensor: Left  Stack Transport Sensor  Stack Trans Upper Pressure	Booklet Stapler)  Driver Timing Sensor(Corner/Booklet Stapler)  Clincher HP Sensor (Corner/Booklet Stapler)  Clincher Timing Sensor (Corner/Booklet Stapler)  Clincher Timing Sensor (Corner/Bklt Stapler)  Stapler Retraction Sensor ENG  Punch HP Sensor ENG  Punch RP Sensor ENG  Punch Hopper Full Sensor ENG  Punch Move HP Sensor ENG  S-to-S Registration Detection HP Sensor ENG  S-to-S Registration Detection ENG  [FIN (1K FIN) INPUT Check]  Gets information of specified switch. Displays sometimes and provided sensor. Displays sometimes are provided sensor. Display	

6-161-035	Stack Trans Lower Pressure Release HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-161-036	Fold Blade HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-161-037	Fold Cam HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-161-038	TE Stopper Transport Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-161-039	TE Stopper HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-161-040	Booklet Folder Exit Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-161-041	Booklet Folder Tray Full Sensor: Upper	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-161-042	Booklet Folder Tray Full Sensor: Lower	ENG	[0 or 1 / <b>0</b> / 1/step]	
4141	[FIN (1K FIN) INPUT Check]			
6161	Gets information of specified sv	ed switch. Displays signal level of switch as it is.		
6-161-043	Door Open/Close SW	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-161-044	Lift Tray Upper Limit SW	ENG	[0 or 1 / <b>0</b> / 1/step]	

## Bridge Unit D685 – Input check

6170	[Bridge: INPUT Check]					
	Bridge Exit Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]			
6-170-001	Gets information from sensor (rebridge unit.	rmation from sensor (relay paper exit sensor internal paper exit part) of it.				
	Bridge Relay Sensor ENG		[0 or 1 / <b>0</b> / 1/step]			
6-170-002	Gets information from sensor (reunit.	on from sensor (relay carry sensor relay carry to finisher) of bridge				
4 170 002	Bridge Set Detection	ENG [0 or 1 / <b>0</b> / 1/step]				
6-170-003	Gets connection information of bridge unit and main unit. When connected, 1.					

	Bridge Exit Cover	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-170-004	Gets micro SW information of b	oridge unit. Whe	en cover open, 1. Main unit paper exit		
6-170-005	Bridge Relay Cover ENG [0 or 1 / 0 / 1/step]				
Gets micro SW information of bridge unit. When cover open, 1. Finisher side cover					

### Internal Finisher D766 – Input check

6184	[Input Check:NoStplBindFIN]				
	Entrance Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-184-001	Gets the entrance sensor information of non staple finisher. (0: Sensor Off, 1: Sensor On)				
	Exit Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-184-002	Gets the paper exit sensor informati (0: Sensor Off, 1: Sensor On)	on of non stap	ole finisher.		
4 10 4 000	Horizontal Registration Detection Sensor  ENG [0 or 1 / 0 / 1/step]				
Gets the horizontal registration sensor information of non staple finisher.  (0: Sensor Off, 1: Sensor On)			n of non staple finisher.		
	Shift HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-184-004	Gets the shift HP sensor information of non staple finisher.  (0: Sensor Off, 1: Sensor On)				
	Junction Solenoid HP Sensor	ENG	[0 or 1 / 0 / 1/step]		
6-184-005	Gets the junction solenoid HP sensor information of non staple finisher. (0: Sensor Off, 1: Sensor On, "0" appears if sensor detects home position)				
	Exit Pressure Release HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-184-006	Gets the exit pressure release HP sensor information of non staple finisher. (0: Sensor Off, 1: Sensor On)				

	Stapler HP Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-184-007	Gets the stapler HP sensor information of non staple finisher. (0: Sensor Off, 1: Sensor On, "0" appears if sensor detects home position)			
	Tray Full Detection Sensor 1	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-184-008 Gets the tray full detection sensor 1 information of non staple finisher. (0: Po overflow )			non staple finisher. (0: Paper	
	Tray Full Detection Sensor 2	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-184-009	Gets the tray full detection sensor 2 information of non staple finisher. (0: Paper overflow )			
6-184-010	Slide Door Open/Close Door SW	ENG [0 or 1 / <b>0</b> / 1/step]		
	Gets the slide door switch information of non staple finisher. (0: Close, 1: Open)			

## Internal Shift Tray D691 – Input check

6172	[Shift Tray: INPUT Check]		
6-172-001	Shift Tray Set Detection	ENG	[0 or 1 / <b>0</b> / 1/step]
0-1/2-001	Gets connection information of shift tray and main unit. When connected, 1.		
4 170 000	Shift Tray Position Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
6-172-002	Gets shift tray position sensor information.		

## 1 Bin Tray D692 – Input check

6174	[1 Bin: INPUT Check]		
		[0 or 1 / <b>0</b> / 1/step]	
6-174-001	Gets connection information of 1 bin and main unit. When connected, 1.		
6-174-002	1 bin Paper Detection Sensor	ENG	[0 or 1 / <b>0</b> / 1/step]
0-1/4-002	Gets paper existence sensor information from 1 bin.		

## **Output Check Table**

### Main Machine – Output check

5804	[OUTPUT Check]			
5-804-001	Tray 1 Pickup Solenoid	ENG	[0 or 1 / <b>0</b> / 1/step]	
3-604-001	Moves 1st paper feed tray pick up solenoid.			
E 004 000	Tray 2 Pickup Solenoid	ENG	[0 or 1 / <b>0</b> / 1/step]	
5-804-002	Moves 2nd paper feed tray pick up soler	noid.		
5-804-003	Bypass Pickup Solenoid	ENG	[0 or 1 / <b>0</b> / 1/step]	
3-604-003	Moves bypass pick up solenoid.			
5 904 004	Paper Exit Junction Gate Solenoid	ENG	[0 or 1 / <b>0</b> / 1/step]	
5-804-004	Moves output paper divide solenoid.			
5804	[OUTPUT Check]			
3604	Moves paper feed tray rising motor.			
5-804-005	Tray 1 Lift Motor:CW	ENG		
5-804-006	Tray 1 Lift Motor:CCW	ENG	[0 1 /0 /1/]	
5-804-007	Tray 2 Lift Motor:CW	ENG	[0 or 1 / <b>0</b> / 1/step]	
5-804-008	Tray 2 Lift Motor:CCW	ENG		
5804	[OUTPUT Check]			
3604	Moves register motor.			
5-804-009	Registration Motor:CCW:Std Speed	ENG		
5-804-010	Registration Motor:CCW:Mid Speed	ENG	[0 or 1 / <b>0</b> / 1/step]	
5-804-011	Registration Motor:CCW:Low Speed	ENG		
5-804-012	Registration Motor:CCW:Std Speed:IncSpd	ENG	[0 or 1 / <b>0</b> / 1/step]	
5804	[OUTPUT Check]			

5-804-015	Registration Motor:CCW:Position Hold	ENG	[0 or 1 / <b>0</b> / 1/step]
	Holds position of register motor.		
5804	[OUTPUT Check]		
3604	Moves paper feed motor.		
5-804-016	Feed Motor:CW:Std Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-017	Feed Motor:CW:Mid Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-018	Feed Motor:CW:Low Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-019	Feed Motor:CW:Std Speed:IncSpd	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-022	Feed Motor:CCW:Std Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-023	Feed Motor:CCW:Mid Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-024	Feed Motor:CCW:Low Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-025	Feed Motor:CCW:Std Speed:IncSpd	ENG	[0 or 1 / <b>0</b> / 1/step]
5804	[OUTPUT Check]		
3604	Moves vertical carry motor.		
5-804-028	Vertical Transport Motor:CW:Std Speed	ENG	
5-804-029	Vertical Transport Motor:CW:Mid Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-030	Vertical Transport Motor:CW:Low Speed	ENG	
5-804-031	Vertical Transport Motor:CW:Std Speed:IncSpd	ENG	[0 or 1 / <b>0</b> / 1/step]
5804	[OUTPUT Check]		
F 00 1 00 1	Vertical Transport Motor:Position Hold	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-034 Holds position of vertical carry motor.			
5004	[OUTPUT Check]		
Moves paper exit motor.			

5-804-041	Paper Exit Motor:CW:Std Speed	ENG	
5-804-042	Paper Exit Motor:CW:Mid Speed	ENG	
5-804-043	Paper Exit Motor:CW:Low Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-044	Paper Exit Motor:CW:Std Speed:IncSpd		
5804	[OUTPUT Check]		
3604	Moves inverter motor.		
5-804-047	Inverter Motor:CW:Std Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-048	Inverter Motor:CW:Mid Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-049	Inverter Motor:CW:Low Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-052	Inverter Motor:CW:Std Speed:Feed Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-054	Inverter Motor:CW:Low Speed:Feed Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-055	Inverter Motor:CW:Mid Speed:Feed Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-056	Inverter Motor:CCW:Std Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-057	Inverter Motor:CCW:Mid Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-058	Inverter Motor:CCW:Low Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-061	Inverter Motor:CCW:Std Speed:IncSpd	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-062	Inverter Motor:CCW:Mid Speed:IncSpd	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-063	Inverter Motor:CCW:Low Speed:IncSpd	ENG	[0 or 1 / <b>0</b> / 1/step]
5004	[OUTPUT Check]		
5804	Moves duplex entrance motor.		
	1		

5-804-065	Duplex Entrance Motor:CW:Std Speed	ENG	
5-804-066	Duplex Entrance Motor:CW:Mid Speed	ENG	
5-804-067	Duplex Entrance Motor:CW:Low Speed		
5-804-068	Duplex Entrance Motor:CW:Std Speed:FeedSpeed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-069	Duplex Entrance Motor:CW:Low Speed: FeedSpeed	ENG	
5-804-070	Duplex Entrance Motor:CW:Std Speed:IncSpd	ENG	
5004	[OUTPUT Check]		
5804	Moves duplex bypass motor.		
5-804-071	Duplex Bypass Motor:CW:Std Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-072	Duplex Bypass Motor:CW:Mid Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-073	Duplex Bypass Motor:CW:Low Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-074	Duplex Bypass Motor:CW:Std Speed:Feed Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-075	Duplex Bypass Motor:CW:Low Speed:Feed Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-077	Duplex Bypass Motor:CCW:Std Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-078	Duplex Bypass Motor:CCW:Mid Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-079	Duplex Bypass Motor:CCW:Low Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-080	Duplex Bypass Motor:CCW:Std Speed:Feed Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-081	Duplex Bypass Motor:CCW:Low Speed:Feed Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-082	Duplex Bypass Motor:CW:Std Speed:IncSpd	ENG	[0 or 1 / <b>0</b> / 1/step]
5804	[OUTPUT Check]		
5 00 4 00 0	Duplex Bypass Motor:Position Hold	ENG	[0 or 1 / <b>0</b> / 1/step]
5-804-083	Holds position of duplex bypass motor.		

5804	[OUTPUT Check]		
3604	Moves fusing motor. *See Important below		
5-804-092	Fusing/Fusing Exit Motor:CCW:Std Speed	ENG	
5-804-093	Fusing/Fusing Exit Motor:CCW:Mid Speed ENG		[0 - 1 / 0 / 1 / ]
5-804-094	804-094 Fusing/Fusing Exit Motor:CCW:Low Speed ENG [0 or 1 / <b>0</b> / 1/s		[0 or 1 / <b>0</b> / 1 / step]
5-804-098	Fusing/Fusing Exit Motor:CW:Low Speed	ENG	

**Important:** Use the procedure below to do the output checks for the fusing exit motor. If you do not follow this procedure, a kink will form in the fusing belt sleeve, and the fusing sleeve belt unit will need to be replaced.

- 1. Do one of the following:
  - Open the right cover of the paper bank
  - · Remove one of the toner bottles
  - Pull out the waste toner bottle half-way
  - Remove the fusing unit
- 2. Enter SP mode.
- 3. Do the following out output checks:
  - SP5-804-092 (Fusing Motor:CW:Standard Speed)
  - SP5-804-093 (Fusing Motor:CW:Middle Speed)
  - SP5-804-094 (Fusing Motor:CW:Low Speed)
  - SP5-804-098 (Fusing Motor:CCW:Low Speed)
- 4. Without exiting SP mode, turn the main power switch off and then on again.

**Important:** If you exit SP mode before you turn the main power switch off, the fusing exit motor will stay off when the machine warms up. Heat will be concentrated in one area of the fusing belt sleeve and cause a kink to form. If this happens, you will need to replace the fusing sleeve belt unit.

5. Do the reverse of what you did in step 1 (for example, reattach the fusing unit).

5804	[OUTPUT Check]				
5 904 104	Polygon Motor: L	ENG	[0 or 1 / <b>0</b> / 1/step]		
5-804-104	Runs motor with 30236 rpm.				
5-804-105	Polygon Motor: M	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Runs motor with 35433 rpm.				

5-804-106	Polygon Motor: H	E۱	٧G	[0 or 1 ,	/ 0 / 1 / step]
	Runs motor with 38267 rpm.				
5-804-110	Fusing Fan: Full Speed	E۱	٧G	[0 or 1 ,	/ <b>0</b> / 1/step]
3-804-110	Moves fusing exhaust heat fan.				
5-804-111	Fusing Fan: Half Speed	E۱	٧G	[0 or 1 ,	/ <b>0</b> / 1/step]
3-604-111	Moves fusing exhaust heat fan.				
5-804-112	Dev Fan: Left/Toner Supply Cooling Fan	EN	٧G	[0 or 1 ,	/ <b>0</b> / 1/step]
	Moves develop left exhaust air fan and to	ners	supply	cooling	fan.
F 004 112	PSU Cooling Fan	E۱	٧G	[0 or 1 ,	/ <b>0</b> / 1/step]
5-804-113	Moves PSU cooling fan and exhaust heat	fan.			
5-804-114	Toner Bottle Cooling Fan	E١	ENG [0 or 1 / <b>0</b> / 1/step]		/ <b>0</b> / 1/step]
5-804-114	Moves ozone exhaust heat fan.				
5-804-115	Main Exhaust Fan:Half Speed	E١	٧G	[0 or 1 ,	/ <b>0</b> / 1/step]
3-604-113	Moves electric BOX cooling fan.				
5-804-116	Main Exhaust Fan:Full Speed	E۱	٧G	[0 or 1 ,	/ <b>0</b> / 1/step]
3-604-116	Moves electric BOX cooling fan.				
5 004 110	Paper Exit Cooling Fan:Half Speed	E۱	٧G	[0 or 1 ,	/ <b>0</b> / 1/step]
5-804-118	Moves paper exit cooling fan.				
5 00 A 110	Paper Exit Cooling Fan:Full Speed	EN	٧G	[0 or 1 ,	/ <b>0</b> / 1/step]
5-804-119	Moves develop solenoid.				
5004	[OUTPUT Check]				
5804	Moves develop motor.				
5-804-120	Development Motor:Std Speed		E	NG	[0 or 1 / <b>0</b> / 1/step]
5-804-121	Development Motor:Mid Speed		E	NG	[0 or 1 / <b>0</b> / 1/step]
5-804-122	Development Motor:Low Speed		E	NG	[0 or 1 / <b>0</b> / 1/step]

5-804-124	Drum Motor:Std Speed			ENG	[0 or 1 / <b>0</b> / 1/step]	
5-804-125	Drum Motor:Mid Speed		ENG		[0 or 1 / <b>0</b> / 1/step]	
5-804-126	Drum Motor:Low Speed		ŀ	ENG	[0 or 1 / <b>0</b> / 1/step]	
5804	[OUTPUT Check]					
3604	Moves paper transfer divide motor.					
5-804-140	Transfer Contact Motor:CW	EN	VG	[0 or 1	/ <b>0</b> / 1/step]	
5-804-141	Transfer Contact Motor:CCW	E1	١G	[0 01 1 /	/ <b>0</b> / 1/siepj	
5804	[OUTPUT Check]					
3604	Moves toner bottle drive motor.					
5-804-162	Toner Bottle Motor	EI	1G	[0 or 1 ,	/ <b>0</b> / 1/step]	
	[OUTPUT Check]					
5804	Moves relay carry motor (bridge unit)/le tray).	ft pal	oer ex	kit carry m	otor (left paper exit	
5-804-163	Bridge Relay/Left Paper Feed Motor:Std Speed	E1	٧G			
5-804-164	Bridge Relay/Left Paper Feed Motor:Mid Speed	E1	۱G			
5-804-165	Bridge Relay/Left Paper Feed Motor:Low Speed	E1	٧G	[0 or 1 / <b>0</b> / 1/step]		
5-804-166	BridgeRelay/LefExit Motor:Std Speed:IncSpd	E1	٧G			
5804	[OUTPUT Check]					
5.004.140	BridgeRelay/LeftExit Junction Gate Solenoid	E1	٧G	[0 or 1 ,	/ <b>0</b> / 1/step]	
5-804-169	Moves relay divide solenoid (bridge unit)/left paper exit divide solenoid (left paper exit tray).					
F 004 170	<shift tray=""> Lift Motor:CW</shift>	EI	۱G	[0 or 1 ,	/ <b>0</b> / 1/step]	
5-804-170	Moves shift tray motor.					

	<shift tray=""> Lift Motor:CCW</shift>	ENG	[0 or 1	/ 0 / 1/step]	
5-804-171	Moves shift tray motor.				
	[OUTPUT Check]				
5804	Outputs PWM for electrify HVP (DC/AC)				
5-804-179	HVP/ChargeDC/(-):PWM	EN	G	[0 or 1 / <b>0</b> / 1/step]	
500.4	[OUTPUT Check]				
5804	Outputs PWM for develop HVP.				
5-804-187	HVP/Development DC/(-):PWM	EN	G	[0 or 1 / <b>0</b> / 1/step]	
5804	[OUTPUT Check]				
3604	Outputs PWM for divide HVP.				
5-804-194	HVP/Separation DC/(-):PWM	EN	G	[0 or 1 / <b>0</b> / 1/step]	
5804	[OUTPUT Check]				
3604	Outputs PWM for transfer HVP (paper tra	nsfer: +/-			
5-804-199	HVP/PTR DC/(+):PWM	EN	G	[0 or ] / <b>0</b> / ] /stop]	
5-804-200	HVP/PTR DC/(-):PWM	ENG [0 or 1 / <b>0</b> / 1/ste		[0 01 1 / <b>0</b> / 1 / siep]	
5804	[OUTPUT Check]				
	Scanner Lamp	EN	G	[0 or 1 / 0 / 1/step]	
5-804-202	Checks output of scanner lamp.  Use to check light source malfunction when SC101-01, SC101-02, SC102-00, SC142-00 occurs.				
5.004.007	Transfer Open/Close LED	EN	G	[0 or 1 / <b>0</b> / 1/step]	
5-804-206	Lights paper transfer open/close LED.				
5-804-209	ID Sensor	EN	G	[0 or 1 / <b>0</b> / 1/step]	
3-004-209	Lights TM/P sensor: Center glowing part.				
5-804-211	ID Tag Power	EN	G	[0 or 1 / 0 / 1/step]	
J-0U4-Z11	Powers the HST sensor.				

5004	[OUTPUT Check]  Continuously drives specified motor for operation test.			
5804				
5-804-241	Bank: Tray3: Feed Mt: Standard Speed	ENG		
5-804-242	Bank: Tray4: Feed Mt: Standard Speed	ENG		
5-804-243	Bank: Tray5: Feed Mt: Standard Speed	ENG		
5-804-244	Bank: Tray3: Transport Mt: Standard Speed	ENG	[0 or 1 / <b>0</b> / 1/step]	
5-804-245	Bank: Tray4: Transport Mt: Standard Speed	ENG		
5-804-246	Bank: Tray5: Transport Mt: Standard Speed	ENG		
5804	[OUTPUT Check]			
3604	Drives specified motor for a certain period of time to test operation.			
5-804-247	Bank: Tray3: PU Solenoid	ENG		
5-804-248	Bank: Tray4: PU Solenoid	ENG	[0 or 1 / <b>0</b> / 1/step]	
5-804-249	Bank: Tray5: PU Solenoid	ENG		
5804	[OUTPUT Check]			
5-804-251	OPC Quenching LCD	ENG	[0 or 1 / 0 / 1/step]	
3-804-231	Turns OPC quenching LCD on			
5-804-252	Waste Toner Open/Close Solenoid:CW	ENG	[0 or 1 / <b>0</b> / 1/step]	
	Moves waste toner open/close solenoid clockwise.			
5-804-253	Anti-Condensation Heater Relay	ENG	[0 or 1 / 0 / 1/step]	
3-604-233	Turns Anti-Condensation Heater Relay on			
5-804-254	Waste Toner Open/Close Solenoid:CCW	ENG	[0 or 1 / <b>0</b> / 1/step]	
	Moves waste toner open/close solenoid counterclockwise.			

## ADF D779 – Output check

6008	[ADF OUTPUT Check]				
8008	Checks operation of the load of ADF.				
6-008-003	Feed Motor Forward	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-006-003	Rotates paper feed motor for	ward.			
6-008-004	Feed Motor Reverse	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-006-004	Rotates paper feed motor ba	ckward.			
6-008-005	Relay Motor Forward	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-006-003	Rotates carry motor forward.				
6-008-006	Relay Motor Reverse	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-006-006	Rotates carry motor backward.				
6-008-011	Inverter Solenoid	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-006-011	Interval drives reverse solenoid.				
6-008-012	Stamp	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-006-012	Interval drives DONE stamp.				
6-008-013	Fan Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-006-013	Interval drives FAN motor.				
6-008-014	Feed Clutch	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-006-014	Interval drives paper feed clutch.				
6-008-015	Feed Solenoid	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-006-015	Interval drives paper feed solenoid.				

## 1-Pass ADF D683 – Output check

	[1-Pass ADF OUTPUT Check]	
6012	For Single-Pass simultaneous duplex models only.	

6-012-001	Pick-Up Motor Forward  Forwardly rotates ADF pick u	ENG p motor.	[0 or 1 / <b>0</b> / 1/step] 0:Off 1:On  [0 or 1 / <b>0</b> / 1/step]		
6-012-003	Feed Motor Forward	ENG	0:Off 1:On		
	Forwardly rotates ADF paper	feed motor.			
6-012-005	Relay Motor Forward	ENG	[0 or 1 / <b>0</b> / 1/step] 0:Off 1:On		
	Forwardly rotates ADF paper	carry motor.			
6-012-009	Exit Motor Forward	ENG	[0 or 1 / <b>0</b> / 1/step] 0:Off 1:On		
	Forwardly rotates ADF paper exit motor.				
6-012-010	Bottom Plate Motor For/Rev	ENG	[0 or 1 / <b>0</b> / 1/step] 0:Off 1:On		
	Moves up/down the bottom backward.	plate by drivir	ng the ADF bottom plate motor forward,		
6-012-012	Stamp	ENG	[0 or 1 / <b>0</b> / 1/step] 0:Off 1:On		
	Stamps the DONE stamp.				
6-012-015	Pull-Out Motor Forward	ENG	[0 or 1 / <b>0</b> / 1/step] 0:Off 1:On		
	Forwardly rotates ADF pull out motor.				

6-012-016	Middle Motor Forward	ENG	[0 or 1 / <b>0</b> / 1/step] 0:Off 1:On	
	Forwardly rotates ADF middle motor.			

## 2000/3000 Sheets Finisher D688 / D689 – Output check

6124	[OUTPUT Check: 2K/3K FIN]			
6-124-001	Entrance Transport Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-124-001	Drives specified motor for a c	ertain period c	of time to test operation.	
6-124-002	Horizontal Transport Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-124-002	Drives specified motor for a c	ertain period c	of time to test operation.	
6-124-003	Pre-Stack Transport Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-124-003	Drives specified motor for a c	ertain period c	of time to test operation.	
6-124-004	ITB Transport Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-124-004	Drives specified motor for a certain period of time to test operation.			
4 124 005	Paper Exit Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-124-005	Drives specified motor for a certain period of time to test operation.			
6-124-006	Upper Junction Solenoid	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-124-006	Turns NO/OFF specified solenoid for validation.			
4 104 007	TE Stack Plate Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-124-007	Drives specified motor for a c	ertain period c	of time to test operation.	
6-124-008	Paper Exit Open/Close Guide Plate Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
	Drives specified motor for a certain period of time to test operation.			
6-124-009	Punching Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-124-009	Drives specified motor for a c	ertain period c	of time to test operation.	

6-124-010	Punch Move Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-124-010	Drives specified motor for a c	ertain period o	f time to test operation.		
6-124-011	S-to-S Registration Detection Move Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Drives specified motor for a c	ertain period o	f time to test operation.		
6-124-012	Lower Junction Solenoid Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Drives specified motor for a c	ertain period o	f time to test operation.		
6-124-013	Jogger Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-124-013	Drives specified motor for a c	ertain period o	f time to test operation.		
6-124-014	Positioning Roller Rotation Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Drives specified motor for a certain period of time to test operation.				
6-124-015	Feed-out Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-124-013	Drives specified motor for a certain period of time to test operation.				
6-124-016	Booklet Stapler Move Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Drives specified motor for a certain period of time to test operation.				
6-124-017	Corner Stapler Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-124-017	Drives specified motor for a certain period of time to test operation.				
6-124-018	Booklet Stapler Jogger Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Drives specified motor for a certain period of time to test operation.				
6-124-019	Booklet Stapler Jog Solenoid Move Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Drives specified motor for a c	ertain period o	f time to test operation.		

6-124-020	Booklet Stapler Standard Fence Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
	Drives specified motor for a c	ertain period o	f time to test operation.	
6-124-021	Booklet Stapler Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-124-021	Drives specified motor for a c	ertain period o	f time to test operation.	
6-124-022	Dynamic Roller Transport Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
	Drives specified motor for a c	ertain period o	f time to test operation.	
6-124-023	Folder Transport Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-124-023	Drives specified motor for a c	ertain period o	f time to test operation.	
6-124-025	Press-fold Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-124-025	Drives specified motor for a certain period of time to test operation.			
6-124-026	Tray Lift Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-124-020	Drives specified motor for a certain period of time to test operation.			
6-124-027	Shift Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-124-027	Drives specified motor for a certain period of time to test operation.			
	Front Shift Jogger Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-124-028	Drives specified motor for a co * Not Use: Currently, Bookle do not have setting jogger in	t Finisher SR31.	70 (D688) / Finisher SR3160 (D689)	
	Rear Shift Jogger Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-124-029	Drives specified motor for a certain period of time to test operation.			
	* Not Use: Currently, Booklet Finisher SR3170 (D688) / Finisher SR3160 (D689) do not have setting jogger in system configuration.			
6-124-030	Shift Jogger Retraction Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
	Drives specified motor for a certain period of time to test operation.  * Not Use: Currently, Booklet Finisher SR3170 (D688) / Finisher SR3160 (D689) do not have setting jogger in system configuration.			

г.	=	Ξ	
15	Ξ	7	
٦		0	1

6-124-031	Drag Roller Vibrating Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Drives specified motor for a certain period of time to test operation.				
6-124-032	LE Guide Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
0-124-032	Drives specified motor for a certain period of time to test operation.				
6-124-033	Navigation LED (All)	ENG	[0 or 1 / <b>0</b> / 1/step]		
	Lights all guide LED.				

## Internal Finisher D690 – Output check

6136	[OUTPUT Check: FrontFIN]			
0130	Continuously drives specified motor for operation test.			
6-136-001	Entrance Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-136-002	Carry Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-136-003	Exit Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6136	[OUTPUT Check: FrontFIN]			
0130	Drives specified motor for a c	ertain period o	f time to test operation.	
6-136-004	Front Jogger Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-136-005	Rear Jogger Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-136-006	Shift Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-136-007	Hitroll Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-136-008	Exit Guide Plate Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-136-009	Staple Moving Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-136-010	Tray Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-136-011	Staple Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-136-012	Stopper Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-136-013	Punch Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	

6-136-014	Punch Moving Motor	ENG	[0 or 1 / <b>0</b> / 1/step]
6-136-015	Punch Registration Moving Motor	ENG	[0 or 1 / <b>0</b> / 1/step]

## 1000 Sheets Finisher D687 – Output check

(1/0	[FIN (1K FIN) OUTPUT Check]				
6162	Continuously runs specified motor for operation test.				
6-162-001	Entrance Transport Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-162-002	Proof Transport Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-162-003	Paper Feed/Positioning & Move Roller Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
4140	[FIN (1K FIN) OUTPUT Chec	k]			
6162	Drives specified motor for a c	ertain period c	of time to test operation.		
6-162-004	Junction Solenoid	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-162-005	Shift Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-162-006	Jogger Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-162-007	Exit Guide Plate Open/ Close Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-162-008	Feed-out Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-162-009	Tray Lift Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-162-011	Positioning Roller Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-162-012	Stapler Shift Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-162-013	Stapler Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-162-014	Punch Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-162-015	Punch Move Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-162-016	S-to-S Registration Detection Move Motor	ENG	[0 or 1 / <b>0</b> / 1/step]		

6-162-017	Stack Transport Motor: Upper	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-162-018	Stck Trns Uppr Prss Rls/ Stndrd Fence Rtrct M	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-162-019	Stack Lower Pressure Release Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6162	[FIN (1K FIN) OUTPUT Chec	k]		
0102	Continuously runs specified motor for operation test.			
6-162-020	Folder Transport Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
4140	[FIN (1K FIN) OUTPUT Check]			
0102	Drives specified motor for a certain period of time to test operation.			
6-162-021	TE Stopper Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-162-022	Folder Blade Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
/1/0	[FIN (1K FIN) OUTPUT Check]			
0102	Lights all guide LED.			
6-162-023	Navigation LED (All)	ENG	[0 or 1 / <b>0</b> / 1/step]	
6162 6-162-021 6-162-022 6162	[FIN (1K FIN) OUTPUT Checonomics specified motor for a content of the content of	ertain period o ENG ENG	f time to test operation.  [0 or 1 / 0 / 1/step]  [0 or 1 / 0 / 1/step]	

## Bridge Unit D685 – Output check

6171	[Bridge: OUTPUT Check]				
4 171 000	Bridge Relay Motor: Low Speed	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-171-009	Checks operation of the load of relay motor. Rotates forward the carry motor for 73 mm/s.				
4 171 010	Bridge Relay Motor: Middle Speed	ENG	[0 or 1 / <b>0</b> / 1/step]		
6-171-010	Checks operation of the load of relay motor. Rotates forward the carry motor for 256 mm/s.				

	6-171-011	Bridge Relay Motor: Standard Speed	ENG	[0 or 1 / <b>0</b> / 1/step]
		Checks operation of the load of relay motor. Rotates forward the carry motor for 450 mm/s.		
	4 171 010	Junction Solenoid	ENG	[0 or 1 / <b>0</b> / 1/step]
6-171-012	Checks operation of the load of solenoid. Turns ON the solenoid.			

## Internal Shift Tray D691 – Output check

6173	[Shift Tray: OUTPUT Check]			
	Shift Tray Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-173-001	Checks operation of the load of shift tray motor. Rotates forward.			

### Internal Finisher D766 – Output check

6185	[Output Check:NoStplBindFIN]			
	Transport Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
6-185-001	Checks the transport motor clockwise at 256 mm/sec.	's movement of non sta	ple finisher. Turn the motor	
6-185-002	Shift Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-163-002	Checks the shift motor's movement of non staple finisher.			
6-185-003	Junction Solenoid Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
0-165-003	Checks the junction solenoid motor's movement of non staple finisher.			
6-185-004	Exit Pressure Release Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
	Checks the exit pressure release motor's movement of non staple finisher.			
6-185-005	Stapler Motor	ENG	[0 or 1 / <b>0</b> / 1/step]	
	Checks the stapler motor's movement of non staple finisher.			

## **Test Pattern Printing**

Printing Test pattern: SP2-109

Some of these test patterns are used for copy image adjustments but most are used primarily for design testing.



- Do not operate the machine until the test pattern is printed out completely. Otherwise, SC will
  occur.
- 1. Enter the SP mode then select SP2-109-003 "Pattern Selection".
- 2. Select test pattern for print from the list then press [OK].
- To change the density of the test pattern, select the density with SP2-109-006, then press [#].



- If select "0" with SP2-109-006, the color adjusted so will not show up in the test pattern.
- 4. To print, touch [Copy Window], then set settings within the following window for test print (paper size etc...).
- 5. Press "Start" key to start test print.
- 6. After checking test pattern, touch "SP Mode" on the LCD to return to SP mode display.
- 7. Reset all settings to the default values (SP2-109-003, SP2-109-006).
- 8. Exit SP mode.

No.	Pattern	No.	Pattern
0	None	13	4dot Ind. Pttrn (4dot Independent Pattern)
1	1 dot Vertical Line	14	Trimming Area
2	2dot Vertical Line	15	Hounds tooth H
3	1 dot Horizontal Line	16	Hounds tooth V
4	2dot Horizontal Line	17	Black Band H (Horizontal)
5	Grid Vert (Grid Vert ical Line)	18	Black Band V (Vertical)
6	Grid Horizontal (Grid Horizontal Line)	19	Checker Flag Pattern
7	Grid Pattern Small	20	Grayscale V (Vertical)
8	Grid Pattern Large	21	Grayscale H (Horizontal)

5

No.	Pattern	No.	Pattern
9	Argyle Pattern Small	22	2 Beam Density Pttrn
10	Argyle P:L (Argyle Pattern Large)	23	Full Dot Pattern
11	1 dot Ind. Pttrn (1 dot Independent Pattern)	24	All White Pattern
12	2dot Ind. Pttrn (2dot Independent Pattern)	-	-

# Firmware Update

### Overview

In order to update the firmware of this machine, it is necessary to download the latest version of firmware on a SD card.

Insert the SD card in SD card slot 2 beside the left rear of the controller box.

### Firmware type

Firmware type	Function	Firmware position	Message display
System/Copy	Operating system	Controller board	System/Copy
Engine		BCU	Engine
Control panel		Control panel	Lcdc
Network support		Controller board	Network Support
Language 1		Control panel	Language 1
Language 2		Controller board	Language 2
RPCS		Controller board	RPCS
PCL (PCLXL)		Controller board	PCL (PCLXL)
Media print JPEG/TIFF		Controller board	MediaPrint:JPEG/TIF
Font		Controller board	FONT
Font 1		Controller board	FONT1
Network document box		Controller board	NetworkDocBox
Printer		Controller board	Printer
Scanner		Controller board	Scanner
Web support		Controller board	Websupport
Web Application		Controller board	WebUapl

5





• Even when not using a RPCS driver, the XPS driver requires RPCS firmware.


#### **Procedure**




- A SD card is a precision device, so when you handle an SD card, respect the following.
- When the power is switched ON, do not insert or remove a card.
- During installation, do not switch the power OFF.
- Since the card is manufactured to high precision, do not store it in a hot or humid location, or in direct sunlight.
- Do not bend the card, scratch it, or give it a strong shock.
- Before downloading firmware on an SD card, check whether write-protection of the SD card is canceled. If write-protection is enabled, an error code (error code 44, etc.) will be displayed during download, and the download will fail.
- Before updating firmware, remove the network cable from this machine.
- If SC818 is generated during software update, switch the power OFF -> ON, and complete the
  update which was interrupted.
- During software update, network cables, remove interface cables, wireless boards, etc., (so that they are not accessed during update).

#### Update procedure

- 1. First download the software to be updated to the SD card.
- 2. Switch the power OFF.
- 3. Remove the SD card slot cover [A]. ( \*\*\text{SD} \times 1)

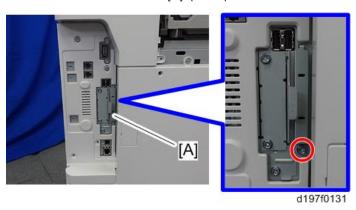


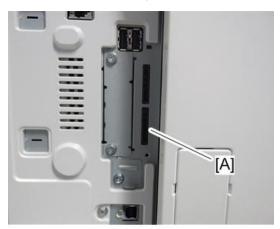

d197f0133a



- Check whether the card is properly in the SD card slot. When a SD card is inserted, a click is heard, and it is locked.
- To remove the card, release by pressing once in the set state.
- 5. Switch the power ON.
- Wait until the update screen starts (about 45 seconds).When it appears, "Please Wait" is displayed.
- Check whether a program installation screen is displayed. (English display) When two or more software modules are contained in the SD card, they are displayed as follows.

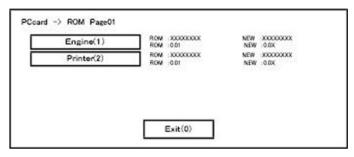

#### When two or more software names are displayed

- 1. Press the module selection button or 10 keypad [1] [5].
- 2. Choose the appropriate module. (If already selected, cancel the selection)

5

### Operation of keys or buttons

Keys or buttons to press	Contents
[Exit] or 10 key [0]	Returns to normal screen.
[Start] Key	Select all modules.
[Clear/Stop] key	Cancel all selection states.

### **Display contents**

On the above screen, two programs, i.e., engine firmware and printer application are displayed. (The screen may change depending on the firmware or application).


The display contents are as follows:

Display	Contents	
ROM:	Display installed module number / version information.	
NEW: Display module number / version information in the card.		

- \* The upper row corresponds to the module number, the lower row corresponds to the version name.
- 8. Select the module with the module selection button or 10 key operation. The selected module is highlighted, and [Verify] and [Update] are displayed.




 Depending on the combination of update software, it may not be possible to select simultaneously.

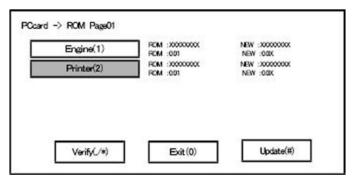

### Key or button operations


Keys or buttons to press	Contents
[Update] or [#] key	Update the ROM of the selected module.
[Verify] button or [./*] key	Perform verification of the selected module.

- 9. Press the [Update] or [#] key, and perform software update.
- 10. During firmware update, a "firmware update/ verification progress screen" is displayed. When firmware update is complete, a "firmware update end screen" is displayed.

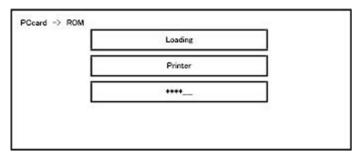

- In the middle row, the name of the module currently being updated is displayed. (in this case, the printer is being updated)
- In the lower row, a progress bar is displayed in ten steps. (The more \*, the more the progress.)
- When updating the control unit program, since progress cannot be displayed on the screen, the ROM update process is determined when the LED of the [Start] key changes from red to green.

#### Firmware update end screen

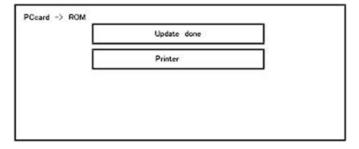


- This screen is displayed when all selected firmware modules are to be updated. "printer"
  in the second row shows that the module updated last is the printer. (When more than
  one are updated simultaneously, only what was updated last is displayed.)
- When Verify has completed normally, the Update done display of the above screen is "Verify done." If "Verify Error" is displayed, reinstall the software of the application displayed in the lower row.

- 11. After switching power OFF, remove the SD card.
- 12. Again, switch the power ON, and check whether the machine is operating normally.
- 13. Return the SD card slot cover to the original position.



- When the power supply is switched OFF during firmware update, update is interrupted, and the power is switched ON again, normal operation cannot be guaranteed.
- To guarantee operation, an update error continues to be displayed until update is successful.
- In this case, insert the SD card again, switch the power ON, and continue download of firmware from the SD card automatically.
- Web access card software: EXJS (EXtended Java Script) is a Type-C ESA application, and like a conventional Web access card, update using an sdk folder is required.
- The PS3 firmware program is included in the preinstalled PDF firmware.
- In the default state, although the PS3 firmware program is hidden in the disabled state, the function is enabled by installing the PS3 card.
- (The program installed in the PS3 card is a dongle (key) for enabling PS3 function).
- Due to the above specification, the self-diagnosis result report shows the ROM module number / software version of the PDF firmware at the PS location.

### **Error Screens During Updating**

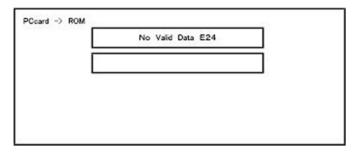

EXX shows an error code.

(This error is generated if update was performed when a printer application startup card is removed after system startup. An error indicating failure of card access is displayed on the screen.)

For error codes, refer to the following table:

#### **Error Code List**

Code	Contents	Solutions
20	Physical address mapping cannot be performed.	<ul> <li>Switch the main power supply off and on to try again.</li> <li>Re-insert the SD card to reboot it.</li> <li>Replace the controller board if the above solutions do not solve the problem.</li> </ul>
21	Insufficient memory for the download	<ul> <li>Switch the main power supply off and on to try again.</li> <li>Replace the controller board if the updating cannot be done by switching the power off and on.</li> </ul>
22	Decompression of compressed data failed.	<ul> <li>Switch the main power supply off and on to try again.</li> <li>Replace the SD card used for the update.</li> <li>Replace the controller board if the above solutions do not solve the problem.</li> </ul>
24	SD card access error	<ul> <li>Re-insert the SD card.</li> <li>Switch the main power supply off and on to try again.</li> <li>Replace the SD card used for the update.</li> <li>Replace the controller board if the above solutions do not solve the problem.</li> </ul>
32	The SD card used after download suspension is incorrect.  SD cards are different between the one which was inserted before power interruption and the one which was inserted after power interruption.	<ul> <li>Insert the SD card containing the same program as when the firmware update was suspended, and then switch the main power supply off and on to try again.</li> <li>There is a possibility that the SD card is damaged if the update cannot be done after the correct SD card has been inserted. In this case, try again with a different SD card.</li> <li>Replace the controller board if the above solutions do not solve the problem.</li> <li>Replace all relevant boards if the update is done for the BCU and FCU.</li> <li>Replace the operation panel unit if the update is done for the operation panel.</li> </ul>

Code	Contents	Solutions
33	Card version error. The wrong card version is downloaded.	Install the correct ROM update data for each version in the SD card.
34	Destination error.  A card for the wrong destination is inserted.	<ul> <li>Install the correct ROM update data for each destination (JPN/ EXP/ OEM) in the SD card.</li> </ul>
35	Model error.  A card for the wrong model is inserted.	Install the correct ROM update data for each model in the SD card.
36	Module error.  The program to be downloaded does not exist on the main unit.  The download destination specified by the card does not match up to the destination for the main unit's program.	<ul> <li>Install the program to be updated in advance.</li> <li>There is a possibility that the SD card containing the program to be updated has not been mounted. Check to confirm that the SD card has been correctly mounted.</li> <li>The SD card is incorrect if the program to be updated has been correctly installed. In this case, insert the correct SC card.</li> </ul>
38	The version of the downloaded program has not been authorized for the update.	<ul> <li>Make sure that the program to be overwritten is the specified version.</li> </ul>
40	Engine download fails.	<ul> <li>Switch the main power supply off and on to try again.</li> <li>If the download fails again, replace the controller board and the BCU.</li> </ul>
41	Fax download fails.	<ul> <li>Switch the main power supply off and on to try again.</li> <li>If the download fails again, replace the controller board and the FCU board.</li> </ul>
42	Control panel / language download fails.	<ul> <li>Switch the main power supply off and on to try again.</li> <li>If the download fails again, replace the controller board and the operation panel unit.</li> </ul>

Code	Contents	Solutions
43	Printing download fails.	<ul> <li>Switch the main power supply off and on to try again.</li> <li>The SD card media is damaged if the update fails again. Replace the SD card media.</li> </ul>
44	The data to be overwritten cannot be accessed when controller-related programs are downloaded.	<ul> <li>Switch the main power supply off and on to try again.</li> <li>Install the correct ROM update data in the SD card.</li> <li>Replace the controller board if the data to be overwritten is contained on the controller board.</li> </ul>
49	Firmware updates are currently prohibited.	The setting of Update Firmware in the Administrator Tools has been set to [Prohibit] by an administrator. Amend the setting to [Do not Prohibit] and try again.
50	The results of the electronic authorization check have rejected the update data.	Install the correct ROM update data in the SD card.
57	@Remote is not connected at the date/time reserved for receiving the package firmware update from the network.	Check the @Remote connection.
58	Update cannot be done due to a reception route problem.	Check the @Remote connection.
59	HDD is not mounted.	Check the HDD connection.
60	HDD could not be used during the package firmware update.	<ul><li>Try again.</li><li>Replace the HDD if the download fails again.</li></ul>
61	The module ID for the package firmware update is incorrect.	Prepare the correct package files.
62	The configuration of the package firmware update files is incorrect.	Prepare the correct package files.

Code	Contents	Solutions
63	Reception fails due to the power off at the reserved date/time of the remote firmware update from the network.	Update is to be done automatically when the next reception time has elapsed.
64	Reception fails due to the power off at the reserved date/time of the package firmware update from the network.	Reset the reservation date/time for the remote update.
65	Reception fails due to the status error of the machine at the reserved date/time of the remote firmware update from the network.	Update is to be done automatically when the next reception time has elapsed.
66	Reception failed due to the status error of the machine at the reserved date/time of the package firmware update from the network.	Reset the reservation date/time for the remote update.
67	Acquisition of the latest version information from the Gateway fails at the reserved date/time of the remote firmware update from the network.	Check that the network is connected correctly.
68	Acquisition of the latest version information from the Gateway fails.	Check that the network is connected correctly.
69	Download fails at the reserved date/time of the remote firmware update from the network.	Check that the network is connected correctly.
70	Package firmware download from the network fails.	Check that the network is connected correctly.
71	Network communication error occurs at the reserved date/time of the package firmware update from the network.	Check that the network is connected correctly.

Code	Contents	Solutions
72	The setting of @Remote is invalid at the reserved date/time of the package firmware update from the network.	Set the setting of @Remote Service in the Administrator Tools to [Do not Prohibit].
57	@Remote is not connected at the date/time reserved for receiving the package firmware update from the network.	Check the @Remote connection.
58	Update cannot be done due to a reception route problem.	Check the @Remote connection.
59	HDD is not mounted.	Check the HDD connection.
60	HDD could not be used during the package firmware update.	<ul><li>Try again.</li><li>Replace the HDD if the download fails again.</li></ul>
61	The module ID for the package firmware update is incorrect.	Prepare the correct package files.
62	The configuration of the package firmware update files is incorrect.	Prepare the correct package files.
63	Reception fails due to the power off at the reserved date/time of the remote firmware update from the network.	Update is to be done automatically when the next reception time has elapsed.
64	Reception fails due to the power off at the reserved date/time of the package firmware update from the network.	Reset the reservation date/time for the remote update.
65	Reception fails due to the status error of the machine at the reserved date/time of the remote firmware update from the network.	Update is to be done automatically when the next reception time has elapsed.

Code	Contents	Solutions
66	Reception failed due to the status error of the machine at the reserved date/time of the package firmware update from the network.	Reset the reservation date/time for the remote update.
67	Acquisition of the latest version information from the Gateway fails at the reserved date/time of the remote firmware update from the network.	Check that the network is connected correctly.
68	Acquisition of the latest version information from the Gateway fails.	<ul> <li>Check that the network is connected correctly.</li> </ul>
69	Download fails at the reserved date/time of the remote firmware update from the network.	<ul> <li>Check that the network is connected correctly.</li> </ul>
70	Package firmware download from the network fails.	Check that the network is connected correctly.
71	Network communication error occurs at the reserved date/time of the package firmware update from the network.	Check that the network is connected correctly.
72	The setting of @Remote is invalid at the reserved date/time of the package firmware update from the network.	Set the setting of @Remote Service in the Administrator Tools to [Do not Prohibit].



- The PDF firmware installed as standard contains a program required to print PS3 data as default.
   However, this PS3 program is normally disabled.
- The PS3 firmware is a dongle (key) which enables PS3 data printing functions. When the PS3 firmware is installed, the PS3 program in the PDF firmware is enabled. Due to this specification, the self-diagnosis result report shows the ROM part number/software version of the PDF firmware contained in the PS3 program.

# **Updating JavaVM**

# Creating an SD Card for Updating

- Download the update modules from Firmware Download Center. As one of the model modules, "Java VM v11 UpdateTool" is available for download. (The version differs depending on the model.)
- Unzip the downloaded file. Copy the whole "sdk" folder to the root of the SD card directly below.



• When unzipping the downloaded file, two subfolders ("update" and "sdk") exist in the "sdk" folder. Rather than just copying the subfolder "sdk", copy the whole folder "sdk".

### **Updating Procedure**

# **CAUTION**

- SD card can be inserted with the machine power off.
- During the updating process, do not turn off the power.
- If you turn off the power during the updating, the machine performance is not guaranteed. (There is a possibility that an SC and boot failure occurs.)
- If you accidentally turn off the power during the updating, retry the updating procedure from the beginning. (If the update fails again, you will need to replace the controller board.)
- If the boot priority application is set to the ESA application, switch to the copy application. ([System Settings]-[General Features]-[Function Priority])
- 2. Insert the SD card you created into the service slot, and then turn ON the main power switch.

3. After booting Java VM, update of the application is started. "Updating SDK/J" appears in the banner message of the touch panel display. (Estimated time: about 2 minutes)



- 4. When the update is complete, "Update SDK / J done SUCCESS" will appear in the banner message of the touch panel display. After turning off the power, remove the SD card from the slot.
  - When you fail to update, "Update SDK/J done FAIL" is displayed. You can confirm the cause of the error message below.
- Reconfigure the Heap size. ([Extended Feature Settings]-[Administrator Tools]-[Heap/ Stack Size Settings]).
  - See the manual for the ESA application to know what value to set for the heap size.
- 6. Return to the previous setting for the boot priority application.

### List of Error Messages

Update results are output as a text file on the SD card called "sdkjversionup.log" in the "\sdk \update" folder.

Result	File contents	Description of the output
Success	script file = /mnt/sd0/sdk/update/ bootscript 2012/08/22 17:57:47 start 2012/08/22 17:59:47 end SUCCESS	Boot script path  Boot scripts processing start time  End time boot script processing, the results

Result	File contents	Description of the output
Failure	script file = /mnt/sd0/sdk/update/ bootscript 2012/08/22 17:57:47 start XXXX Error 2012/08/22 17:57:57 end FAIL	Boot script path  Boot scripts processing start time  Error message (Possibly multiple)  End time boot script processing, the results


Error Message	Cause	Remedy	
PIECEMARK Error,machine=XXXXX	Applied the wrong updating tool (Using the updating tool of a different model)	Use the correct updating tool for this model.	
pasePut() - error : The file of the copy origin is not found Put Error!	Inadequacy with the SD card for updating (Files are missing in the updating tool)	Re-create the SD card for updating.	
paseCopy() - error : The file of the copy origin is not found. Copy Error!	Inadequacy SD card for updating (Files in the updating tool are missing)	Inadequacy SD card for updating (Files in the updating tool are missing)	
[file name: XX] error, No space left on device pasePut() - error : The destination directory cannot be made. pasePut() - error : fileCopy Error. Put Error!	Writing destination is full. (The NAND flash memory on the controller board is full.)	Uninstall the unnecessary SDK applications.  If you can not uninstall it, implement escalation, stating the "model name, application configuration, SMC sheet (SP5-990-006/024/025), and error file."	

Error Message	Cause	Remedy
[file name: XX] error, No space left on device paseCopy() - error : The destination directory cannot be made. paseCopy() - error : fileCopy Error. Copy Error!	Writing destination is full. (The NAND flash memory on the controller board is full.)	Uninstall the unnecessary SDK applications.  If you can not uninstall it, implement escalation stating the "model name, application configuration, SMC sheet (SP5-990-006/024/025), and error file."
Put Error! * 1  Copy Error! * 1  Delete Error!  [XXXXX] is an unsupported command.  Version Error	Error, not normally expected to occur	If you cannot uninstall it, implement escalation stating the "model name, application configuration, SMC sheet (SP5-990-006/024/025), and error file."  * 1 Without the foregoing error message, only "Put Error / Copy Error" will be displayed


# **Updating the EXJS**

# To Update EXJS

1. Remove the SD card slot cover [A] (\$\mathbb{O}^{\times} \times 1).

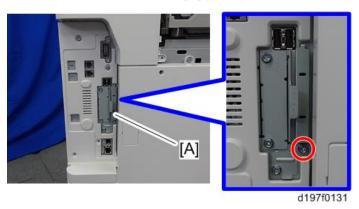

2. Put the SD card containing the firmware to install in SD card slot 2 [A].

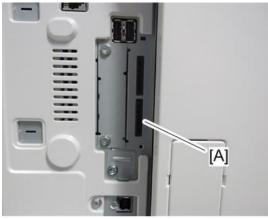

d197f0133a

- 3. Turn on the main power switch.
- 4. Wait until the update screen starts.
- 5. When the update screen is displayed, select [browser], and press the [Update (#)] button.
- **6.** When "Update done." is displayed, switch the power OFF, and remove the SD card from SD card slot 2.
  - <When updating Extension JavaScript, add the following steps>
- 7. Switch the power ON.

- 8. Press the [Default setting/counter] key.
- 9. Press the [Extension function default setting] button.
- Press the [Extension function default setting] button on the [Extension function default menu setting] screen.
- 11. Stop "Extended JS" on the "Startup setting" condition with a tab.
- 12. Switch the power OFF.
- 13. Insert the Extended JavaScript upgrade SD card in SD card slot 2.
- 14. Switch the power ON.
- 15. Press the [Default setting/counter] key.
- 16. Press the [Extension function default setting] button.
- Press the [Extension function default setting] button on the [Extension function default menu setting] screen.
- 18. Press the [Install] tab.
- 19. Press [SD card], and select "Extended JS" from the list of extension functions.
- 20. Select [MFP hard disk] as the installation location, and press [Next].
- 21. After checking extension function information on the "Installation preparation complete" screen, press the [Enter] button.
- 22. "The following extension functions are already installed. The message "Overwrite extension function?" is displayed. Press the [Continue] button.
- 23. When installation is complete, the message "Extension function has been installed" is displayed. Press the [OK] button.
- 24. On the [Startup settings] tab, set [Extended JS] to the startup standby state, and switch the power OFF.
- 25. Remove the SD card from SD card slot 2, and return the controller cover.
- 26. Switch the power ON.
- 27. Press the [Default setting/counter] key.
- 28. Press the [Extension function default setting] button.
- Press the [Extension function default setting] button on the [Extension function default menu setting] screen.
- 30. Check the version of [Extended JS] on the [Startup settings] tab is the latest version.



- If the power is ON before starting Step 1, switch the power OFF after first performing Steps 5-9, and perform Step 1 and subsequent steps. In that case, skip Steps 5-10. (This saves time.)
- If you do not plan to update Extension JavaScript, return the controller cover to the original position after performing Step 5.

# When checking the version of EXJS

- 1. Switch the power ON.
- 2. Press the [Default setting/counter] key.
- 3. Press the [Extension function default setting] button.
- 4. Press the [Extension function default setting] button on the [Extension function default menu setting] screen.
- 5. Check the version of [Extended JS] on the [Startup settings] tab is the latest version.



• If checked apart from the above procedure (firmware version displayed in system default settings), a different version from the actual version may be displayed.

占


# **NVRAM Data Upload/Download**

# Uploading Content of NVRAM to an SD card


Do the following procedure to upload SP code settings from NVRAM to an SD card.



- This data should always be uploaded to an SD card before the NVRAM is replaced.
- Make sure that the write protection of an SD card is unlocked
- Do SP5-990-001 (SMC Print) before you switch the machine off. You will need a record of the NVRAM settings if the upload fails.
- 2. Switch the copier main power switch off.
- 3. Remove the SD card slot cover [A] ( x1).

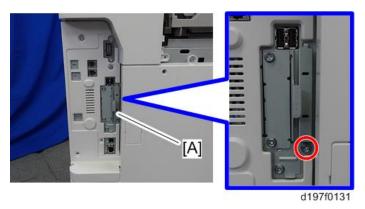

4. Insert the SD card into SD slot 2 [A].

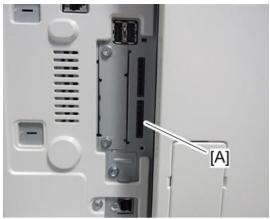

d197f0133a

5. Turn on the main power switch.


The file is saved to the path and the following filename:

#### NVRAM\<serial number>.NV

Here is an example with Serial Number "K5000017114":

#### NVRAM\K5000017114.NV

8. In order to prevent an error during the download, be sure to mark the SD card that holds the uploaded data with the number of the machine from which the data was uploaded.



• You can upload NVRAM data from more than one machine to the same SD card.

# Downloading an SD Card to NVRAM

Do the following procedure to download SP data from an SD card to the NVRAM in the machine.

- The NVRAM data down load may fail if the SD card with the NVRAM data is damaged, or if the connection between the controller and BCU is defective.
- Do the download procedure again if the download fails.
- Do the following procedure if the second attempt fails:
- Enter the NVRAM data manually using the SMC print you created before uploading the NVRAM data.
- 1. Switch the copier main power switch off.
- 2. Remove the controller cover (\$\mathbb{O}^{\pi} \x 1\$).
- 3. Insert the SD card with the NVRAM data into SD slot 2.
- 4. Switch the copier main power switch on.
- 5. Do SP5-825-001 (NVRAM Data Download) and press the "Execute" key.



 The serial number of the file on the SD card must match the serial number of the machine for the NVRAM data to download successfully. The download fails if the serial numbers do not match.

This procedure does not download the following data to the NVRAM:

- Total Count
- C/O, P/O Count

### 5

# **UP/SP Data Import/Export**

### Overview

# Import/export conditions

Import/export is possible between devices only if their model type, region of use, and the following device configurations match.

- Input Tray
- Output Tray
- ARDF
- Whether or not equipped with a hard disk
- Whether or not equipped with a finisher and the type of finisher

# **UP Data Import/Export**

### Data that can be imported and exported

- Copier / Document Server Features
- Printer Features
- Scanner Features
- Facsimile Features
- Browser Features
- Extended Feature Settings
- Program (Document Server)
- Program (Copier)
- Program (Scanner)
- Web Image Monitor Setting
- Web Service Settings
- System Settings

### Data that cannot be imported or exported

Some System Settings \*1 \*2

- \* 1 The setting for the date, settings that require the device certificate, and settings that need to be adjusted for each machine (for example, image adjustment settings) cannot be imported or exported.
- \*2 Settings only for executing functions and settings only for viewing cannot be imported or exported.
- Extended Feature Settings
- Address book
- Programs (fax function)
- Programs (printer function)
- User stamp in Copier / Document Server Features
- Settings that can be specified via telnet
- @Remote-related data
- Counters
- EFI printer unit settings
- Settings that can only be specified via Web Image Monitor or Web Service (for example, Bonjour, SSDP setting)


### **Exporting Device Information**

This can be exported / imported by an administrator with all privileges.

When exporting SP device information from the control panel, the data is saved on an SD card.


- 1. Insert an SD card into the media slot on the side of the control panel.
- 2. Log in from the control panel as an administrator with all privileges.
- 3. Press [System Settings].
- 4. Press [Administrator Tools].
- 5. Press [Next] four times.

### 6. Press [Device Setting Information: Export (Memry Strge Devc)].

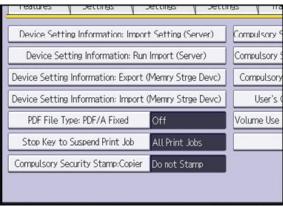

w d1825501

### 7. Set the export conditions.

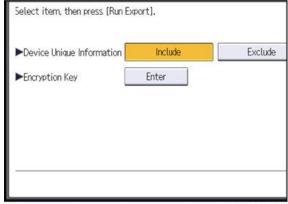

w\_d1825502

- Specify whether to [Include] or [Exclude] the "Device Unique Information". "Device Unique Information" includes the IP address, host name, fax number, etc.
- Specify an encryption key.
- 8. Press [Run Export].
- 9. Press [OK].
- 10. Press [Exit].
- 11. Log out.




- If data export fails, the details of the error can be viewed in the log.
- When device Information is periodically imported, it is necessary to create the device setting information file with special software and store it on the web server.

# Importing Device Information

This can be exported / imported by an administrator with all privileges.

Import device information saved on an SD card.

- 1. Insert an SD card into the media slot on the side of the control panel.
- 2. Log in from the control panel as an administrator with all privileges.
- 3. Press [System Settings].
- 4. Press [Administrator Tools].
- 5. Press [Next] four times.
- 6. Press [Device Setting Information: Import (Memry Strge Devc)].
- 7. Configure the import conditions.

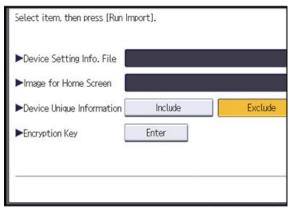

w d1825503

- Press [Select] of the "Device Setting Info. File" to select the file(s) to import.
- When inserting a file into a home screen, press [Select] for the Image for Home screen and select the file. You cannot use this setting when using the Smart Operation Panel.
- Specify whether to [Include] or [Exclude] the "Device Unique Information". "Device Unique Information" includes the IP address, host name, fax number, etc.
- Enter the encryption key that was specified when the file was exported.
- 8. Press [Run Import].
- 9. Press [OK].
- 10. Press [Exit].

The machine restarts.



If data export fails, the details of the error can be viewed in the log.

### 5

# **SP Data Import/Export**

### Data that can be imported and exported

- System SP
- Printer SP
- Fax SP
- Scanner SP

### **Exporting Device Information**

When exporting SP device information from the control panel, the data is saved on an SD card.

- 1. Insert an SD card into the media slot on the side of the control panel.
- 2. Enter SP mode.
- 3. Press SP5-749-001 (Import/Export: Export)
- 4. Select "Target" SP settings (System/Printer/Fax/Scanner) to be exported.
- 5. Select "Option" settings (Unique/Secret).

Item	Specification	Note
Unique	Unique information of the machine is included in the exported file if you select "Unique" setting.	Unique information that can be updated #1. Items that are to be used to identify the machine. Example: Network Information/ Host name / Information related to fax number / Mail address assigned to the machine #2. Items for specifying the options equipped on the machine. Example: Lot number for developer Unique information that cannot be updated #1. Items that may cause a problem if imported Example: Serial number / Information related to @Remote #2. Items for managing the history of the machine Example: Time and date / Counter information / Installation date #3. Setting values for the Engine

Item	Specification	Note
Secret	Secret information is exported if you select "Secret" setting.	Secret information #1. Data that cannot be exported without being encrypted. (Exported data is encrypted.) Example: Password / Encryption key / PIN code #2. Confidential information for the customer Example: User name / User ID / Department code / Mail address / Phone number #3. Personal information Example: Document name / Image data #4. Sensitive information for the customer Example: MAC address / Network parameters

<sup>\*</sup> The IP address is exported when both 'Unique' and 'Secret' are selected.

# 6. Select "Crpt config" setting (Encryption).

Encryption	Select whether to encrypt or not when exporting.  If you push the "Encryption" key, you can export secret information.	If the encryption function is used, setting of an encryption key is required by direct input.  Type the arbitrary password using the soft keyboard  Can enter up to 32 characters
------------	--	---

- 7. Press [Execute].
- 8. Press [OK].



• If data export fails, the details of the error can be viewed in the log.

# **Importing Device Information**

Import device information saved on an SD card.

- 1. Insert an SD card into the media slot on the side of the control panel.
- 2. Enter SP mode.
- 3. Press SP5-749-101(Import/Export: Import)
- 4. Select a unique setting.

- 5. Press [Encryption Key], if the encryption key was created when the file was exported.
- 6. Select an encryption setting.

Unique	If you want to apply the unique information to the target machine, select the "Unique" key.	Refer to the above information.
Encryption	If an encrypted file is selected as the import file, this setting is required.	

- 7. Press [Execute].
- 8. Press [OK].



• If data export fails, the details of the error can be viewed in the log.

# Possible solutions for import/export problems

The access log file is created when export/import is executed. The file is stored in the same location as the exported device setting information file.

If an error occurs, check the log's result code in the access log file first. Values other than 0 indicate that an error occurred.

The result code will appear in the circled area illustrated below.

- Example of a log file

```
"1.0.0"

"ExecType", "Date", "SerialNo",PnP", "Model", "Destinaion","IP","Host", "Storage","FileNam e","FileID", "Totalitem", "NumOfOkitem", "ResultCode", "ResultName", "Identifier"

"IMPORT"

"2012-07-05T15:29:16+09:00"

"3C35-7M0014"

"Brand Name"

"Product Name"

"0"

"10"

"10.250.155.125"

"RNP00267332582D"

"SD"

"201207051519563C35-710220.csv"

"201207051519563C35-710220.csv"

"201207051519563C35-710220"

"1"

"TargetID", "ModuleID", "PrefiD", "Item", "NgCode", "NgName"
```

w\_d1825500

If you cannot solve the problem or do not know how to solve it after checking the code, note down the error log entry, then contact your supervisor.

Result Code	Cause	Solutions
2 (INVALID REQUEST)	A file import was attempted between different models or machines with different device configurations.	Import files exported from the same model with the same device configurations.
4 (INVALID OUTPUT DIR)	Failed to write the device information to the destination device.	Check whether the destination device is operating normally.
7( MODULE ERROR)	An unexpected error occurred during import or export.	Switch the power off and then back on, and then try the operation again. If the error persists, contact your supervisor.
8 (DISK FULL)	The available storage space on the external medium is insufficient.	Execute the operation again after making sure there is enough storage space.
9 (DEVICE ERROR)	Failed to write or read the log file.	Check whether the path to the folder for storing the file or the folder in which the file is stored is missing.
10 (LOG ERROR)	The hard disk is faulty.	Contact your supervisor.

Result Code	Cause	Solutions
20 (PART FAILED)	Failed to import some settings.	The reason for the failure is logged in "NgCode". Check the code.
		Reason for the Error (Ng-Name)
		2. INVALID VALUE
		The specified value exceeds the allowable range.
		3. PERMISSION ERROR
		The permission to edit the setting is missing.
		4. NOT EXIST
		The setting does not exist in the system.
		5. INTERLOCK ERROR
		The setting cannot be changed because of the system status or interlocking with other specified settings.
		6. OTHER ERROR
		The setting cannot be changed for some other reason.
21 (INVALID FILE)	Failed to import the file	Check whether the file format is correct.
	because it is in the wrong format in the external medium.	The import file should be a CSV file.
22 (INVALID KEY)	The encryption key is not valid.	Use the correct encryption key.




- When exporting device information from the control panel, the data can be saved only on an SD card.
- The file format for exports is CSV.

# **Address Book Export/Import**


# Export

Backup address book information on SD card formatted with the specified software.

- 1. Switch the power OFF.
- 2. Remove the SD slot cover [A] (@x1).

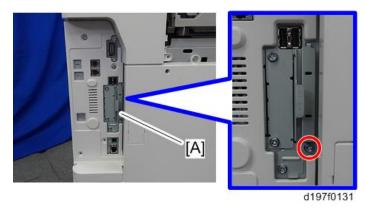

3. Insert the SD card in the service slot [A].

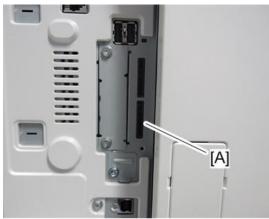

d197f0133a

- 4. Switch the power ON.
- 5. Execute SP5-846-051 full address book backup.
- 6. Switch the power OFF.
- 7. Remove the SD card.

5

8. Attach the SD slot cover to the original position (@x1).



- When local user information to be uploaded is not contained in the SD card, an execute malfunction is displayed. It cannot be used in the write-protect state.
- Since the address book is the customer's information, take care about handling it, and never bring it back.

### **Import**

- 1. Switch the power OFF.
- 2. After removing the SD slot cover of the controller unit, set the SD card in the service slot.
- 3. Switch the power ON.
- 4. Execute SP5-846-052 (address book information restore).
- 5. Switch the power OFF.
- 6. Remove the SD card.
- Attach the SD slot cover to the original position (\$\mathbb{O}^{\infty} \times 1\$).
- 8. Switch the power ON, and check that the address book has been restored.



- User code counter information is initialized.
- Administrator and supervisor information is not backed up. Also, it is not erased during restore.
- If a download file does not exist, or if erasure is complete, execution malfunction is displayed.

# Specification


The information which can be exported /imported is the following items.

- Entry information
- User code information
- E-mail information
- Protection code information
- Fax information
- Fax additional information
- Group information
- Title information

- Title position information
- Folder information
- SMTP attestation
- Local authorization
- Folder authorization information
- Account ACL information
- New document initial ACL information
- LDAP authorization information

# RFU Updating the Firmware

In this machine, software can be updated by remote control using @Remote.

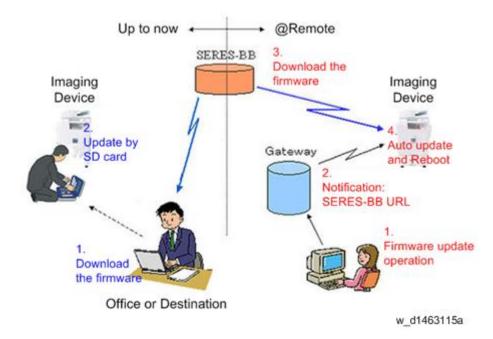

# **RFU Performable Condition**

RFU is performable for a device which meets the following conditions.

- 1. The customer consents to the use of RFU.
- 2. The devise is connected to a network via TCP/IP for @Remote.

# Package Firmware Update

# **ACAUTION**


 The HDD unit must be installed on the machine to enable the SFU or the package firmware update via SD card.

### Overview

Each firmware module (such as System/Copy, Engine, etc) used to be updated individually. However, an all-inclusive firmware package (package\_ALL) is now available.

There are two ways to update using the firmware package.

- Package Firmware Update via a network: SFU (Smart Firmware Update)
- Package Firmware Update with an SD card

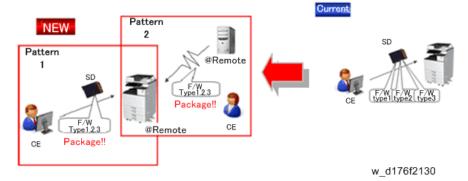

#### Package Firmware Update via a network: SFU (Smart Firmware Update)

- There are two methods for SFU.
  - Immediate Update: To update the firmware when visiting
  - Update at the next visit: To set the date and time for downloading. The firmware will be automatically downloaded beforehand and updated at the following visit.
- "Update at the next visit" is recommended since firmware download may take some minutes
  due to the network condition.



 SFU requires the connection to @Remote via a device which has the embedded @Remote communicating function. When a machine is connected to @Remote via an intermediate device (RC Gate), the SFU function is disabled.

### Package Firmware Update via an SD Card

Package firmware update can also be performed using the conventional SD card method by writing the package firmware directly to the SD card.

### Types of firmware update files, supported update methods:


	SFU	SD	RFU
Individual firmware	N/A	Available	Available
Package firmware	Available	Available	N/A

# **Immediate Update**

Enter the [Firmware Update] menu in the SP mode and update the package firmware.




- The [Firmware Update] button will appear even when a machine is connected to @Remote with a device which does not have an embedded @Remote communicating function.
- If an error code is displayed, refer to Error screens during updating (page 1001).
- 1. Enter the SP mode.
- 2. Touch [Firmware Update].

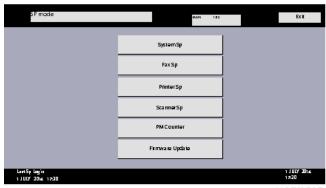


d197f0507

### 3. Touch [Update].

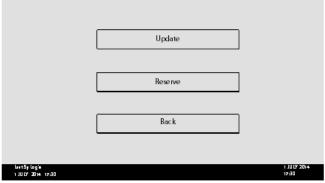


d197f0508

### 4. Touch [Execute Update].

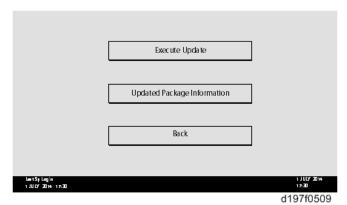


# 5. Touch [YES].

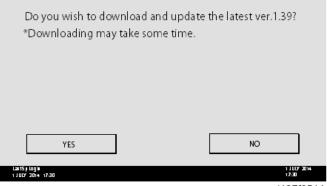

d197f0514

# 6. The following display will be displayed.

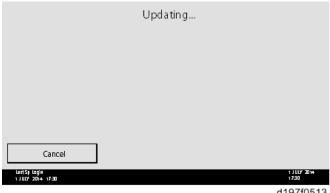


d197f0513

**U** Note

• If the error code E66, which indicates that the download of the firmware has failed, is displayed, implement this procedure from step 1.

5


- Update will be started automatically after the download is finished.
- When the machine is in the update mode, the automatic update is suspended if a print job is implemented. After the print job is finished, touch [YES] on the display shown with the following picture to restart updating.

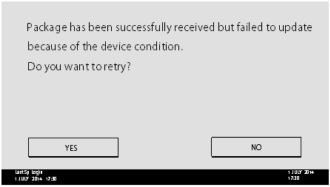

d197f0515

### 1. [Update done] is displayed.

• The machine will automatically reboot itself.

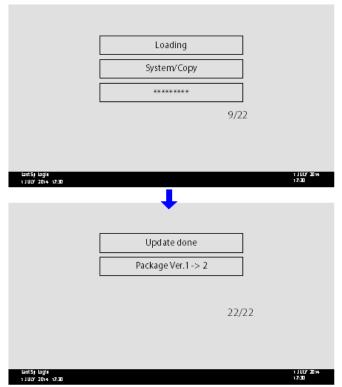

d197f0518



• The figures at the lower right of the display indicate "Number of updated items/ All items to be updated".

# Update at the Next Visit (Reserve)

It is possible to set the machine to download the package firmware which is necessary for SFU in advance, and then perform the actual installation at the next service visit. This saves waiting time for the firmware to download at the service visit.

### How to Set the Machine to Download Firmware Later (RESERVE)

Enter the [Firmware Update] menu in the SP mode and update the package firmware.




- The [Firmware Update] button will appear even when a machine is connected to @Remote with a device which does not have an embedded @Remote communicating function. If an error code is displayed, refer to page 1001.
- 1. Enter the SP mode.
- 2. Touch [Firmware Update].




d197f0507

# 3. Touch [Reserve].

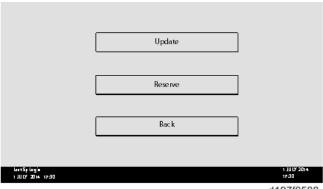

d197f0508

### 4. Touch [Reservation setting].

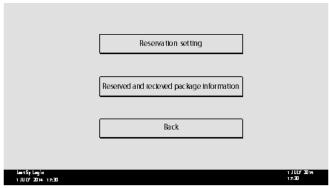

d197f0510

### 5. Enter the dates and times of next visit and start of receiving data.


- "Next time to visit this customer": The package firmware will be automatically downloaded by this time/date.
- "When to receive? (1-7)": The download of the package firmware will begin this number of days before the next visit.



d197f0512

Successful Download

In the two diagrams below, the firmware is set to be downloaded by the day before the next scheduled visit. In the first diagram, the download is successful on the first try. In the second diagram, the download fails three times and is successful on the fourth try.

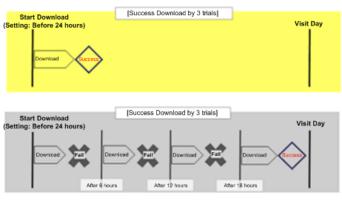

w\_d197f0507


- If the firmware download fails or cannot be completed due to the network settings/condition, no power to the machine, or other reason, the machine will continue retrying every six hours until the scheduled deadline (up to a maximum of four tries). For example, if the download is set for the day before the next visit, the machine will attempt the download at 24 hours before the visit, and then continue trying every six hours (max. four tries total).
- The retry is only performed in cases when the firmware download has failed.
- If the machine is in Energy Saver mode when the download is scheduled to begin, the download will be performed in the background and the machine/panel will stay in Energy Saver mode.
- The download will continue uninterrupted even if the customer initiates a print job, copy job, fax receiving or other operation while the download is in progress.
- The download will be terminated if the customer turns the power off while the download is in progress.
- If the download cannot be completed successfully by the time of the next scheduled visit, the machine will stop trying to download the firmware.

#### How to Check if the Firmware Downloaded with RESERVE

#### 1. Enter the SP mode.


### 5

# 2. Touch [Firmware Update].

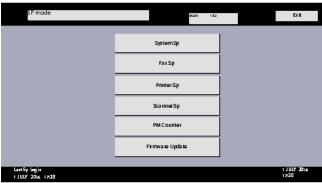


d197f0507

### 3. Touch [Reserve].

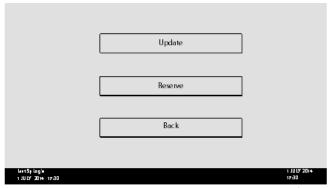

d197f0508


### 4. Touch [Reserve and received package information].

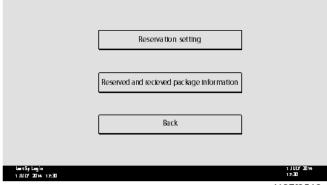

d197f0510

### 5. Check the information displayed.

When the package firmware is downloaded successfully, the details of the download result are displayed as the following picture shows.

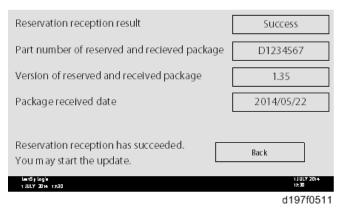




• This information will only be displayed if the reserved firmware has already been downloaded. If not, all the data items are indicated with "-".


### How to Install Firmware Downloaded with RESERVE

- 1. Enter the SP mode.
- 2. Touch [Firmware Update].

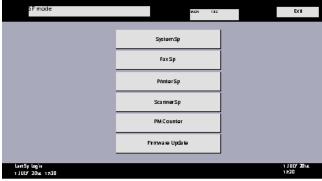


d197f0507

# 3. Touch [Update].

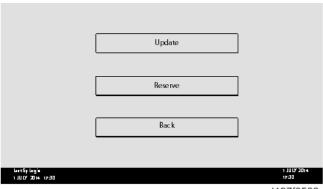

d197f0508

4. Touch [Execute Update].

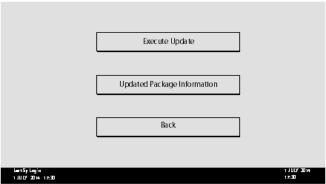

d197f0509


- 5. Check the version of the received package firmware, and then touch [YES].
  - Update is started.



d197f0516




• If the version of the reserved package in the HDD is older than the latest version, the messages shown in the following picture are displayed.

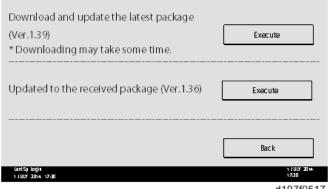


d197f0517

- If you wish to download the latest version, touch [Execute] beside the message "Download and update the latest package." Then update of the package firmware will be started.
- If you wish to update using the firmware in the HDD (old version), touch [Execute] beside the
  message "Update to the received package."
- 6. [Update done] message is displayed.
  - The machine will automatically reboot itself.

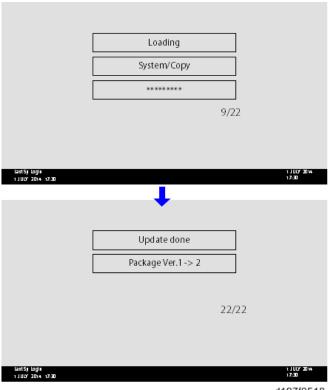

d197f0518



• The figures at the lower right of the display indicate "Number of updated items/ All items to be updated".

# Update via SD card

Update with an SD card, which is the conventional method, is available if you write the package firmware to the SD card.



- If an error code is displayed, refer to page 1001.
- 1. Create a new folder in the SD card, and then name it "package".

2. Copy the package firmware (xxxxxxxx.pkg) to this folder.



d197f0504



- If you copy the package firmware into the conventional "romdata" folder, the update will not work.
- Only one version of the package firmware should be copied into the folder. If you copy
  multiple versions of package firmware to the SD card, the machine will select only one version
  of the firmware randomly.
- 3. Turn the power OFF.
- 4. Insert the SD card which contains the package into SD card slot 2 (for service).
- 5. Turn the power ON and touch [Update].




d176f2127




 When the SD card contains both a firmware package and one or more modules, the following display may show up. Select [Package] and touch [OK] to move to step 4 above.



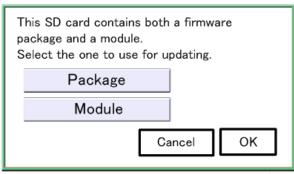


d176f2128

- **6.** Update is started automatically after the package firmware download to the HDD has been completed.
- 7. When update is completed, "Update done" is displayed.

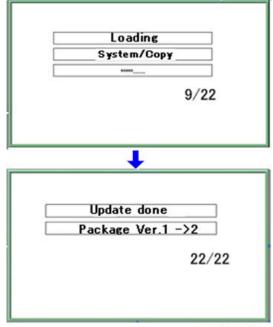

w\_d177z0021a



- The figures at the lower right of the display indicate "Number of updated items/ All items to be updated".
- 8. Turn the main power switch OFF, and then pull out the SD card from SD card slot 2.
- 9. Turn the power ON.

# Capturing the Debug Logs

#### Overview

With this feature, you can save debug logs that are stored in the machine (HDD or operation panel) on an SD card. It allows the Customer Engineer to save and retrieve error information for analysis.

The Capturing Log feature saves debug logs for the following three.

- Controller debug log
- Engine debug log
- Debug log of the operation panel



- In older models, a technician enabled the logging tool after a problem occurred. After that, when the problem had been reproduced, the technician was able to retrieve the debug log.
- However, this new feature saves the debug logs at the time that problems occur. Then you can
  copy the logs to an SD card.
- You can retrieve the debug logs using a SD card without a network.
- Analysis of the debug log is effective for problems caused by the software. Analysis of the debug log is not valid for the selection of defective parts or problems caused by hardware.

#### Types of debug logs that can be saved

Туре	Storage Timing	Destination (maximum storage capacity)
Controller debug log (GW debug log)	Saved at all times	HDD (4 GB)  Compressed when written to an SD card from the HDD (from 4 GB to about 300 MB)
Engine debug log	<ul> <li>When an engine SC occurs</li> <li>When paper feeding/output stop by jams</li> <li>When the machine doors are opened during normal operation</li> </ul>	HDD (Up to 300 times)

Туре	Storage Timing	Destination (maximum storage capacity)
Operation panel debug log	<ul> <li>When a controller SC occurs</li> <li>When saving by manual operation with the Number keys and the Reset key (Press "Reset", "0", "1" and "C" (hold for 3 seconds))</li> <li>When the operation unit detects an error</li> </ul>	Operation panel (400 MB /Up to 30 times)  When updating the firmware for the operation panel, the debug logs are erased.
	When the operation panel detects an error	



- Debug logs are not saved in the following conditions.
- While erasing all memory
- While data encryption equipment is installed
- While changing the firmware configuration
- Forced power OFF (accidentally disconnecting the outlet)
- Engine debug log in shutdown
- When the power supply to the HDD is off because of energy saving (engine OFF mode / STR mode)

# Security of the Operation Log

The following operation logs related to security are not saved.

- User ID
- Password
- IP address
- Telephone number
- Encryption key
- Transition to SP mode

Also the following operation logs are not saved.

- Number keys (0 to 9) on the operation panel
- Soft keyboard on the touch panel display
- External keyboard

# Retrieving the Debug Logs



- Retrieve debug logs to identify the date of occurrence of the problems and to find details of the problems
- e.g.: At around 8:00 am on March 10, an engine stall occurred. The operation panel does not respond. Turn the main power supply off / on.
- You need to retrieve the debug logs dating back three days from the date of the problem.
- Analysis of the debug log is effective for problems caused by the software. Analysis of the debug log is not valid for the selection of defective parts or problems caused by hardware.

## Procedure for Retrieving the Debug Log

1. Insert the SD card into the slot on the side of the operation panel.




- It is recommended to use the SD card provided as a service part. This is because the log data
  can be acquired much faster than when using commercially available SD cards.
- 2. Enter SP mode.
- 3. Set the start date of the log with SP5-857-101 (Start date of debug log output)
  - e.g.: March 28, 2013: input 20130328 (yyyymmdd)



- Set the date three days earlier than the occurrence of the problems.
- 4. Set the end date of the log with SP5-857-102 (End date of debug log output)

e.g.: March 31, 2013: input 20130331 (yyyymmdd)

Execute SP5-857-103 (Get a debug log of all) to write the debug log to the SD card.
 If the transfer is finished successfully, 'completed' is displayed on the touch panel display.



- The approximate time it takes to transfer the debug log is as follows. Transfer time may be
  affected by the type or format of the SD card. (It is recommended that you format the SD card
  using the Panasonic SD Formatter (freeware)).
- Controller debug log (GW debug log): 2 20 minutes
- Engine debug log: 2 minutes
- Operation panel debug log: 2 20 minutes
- 6. Make sure that the SD card access LED is off, then remove the SD card.



• If 'failed' appears on the touch panel display, turn the power off, and then recover from step 1 again.

The debug logs are saved with the following file names.

Controller debug log (GW debug log)	/LogTrace/machine number/watching/ yyyymmdd_hhmmss_unique identification number.gz
Engine debug log	/LogTrace/machine number/engine/ yyyymmdd_hhmmss.gz
Operation panel debug log	/LogTrace/machine number/opepanel/ yyyymmdd_hhmmss.tar.gz

# SP Text Mode (Saving SMC List to SD Card)


# Overview

## **SP Text Mode**

This function is used to save the SMC list as CSV files to the SD card inserted into service slot 2 or the operation panel card slot.

# **Procedure**

- 1. Turn the main power switch OFF.
- 2. Insert the SD card into slot 2 or the operation panel SD card slot. Then turn the power ON.
- 3. Enter SP mode.
- 4. Select "Copy SP".

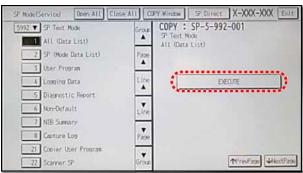

d1440127


- 5. Select SP5-992 (SP Text Mode).
- 6. Select a detail SP number shown below to save data on the SD card.

SP5-992-xxx (SP Text Mode)

Detail No.	SMC Categories to Save
001	All (Data List)
002	SP (Mode Data List)
003	User Program
004	Logging Data

Detail No.	SMC Categories to Save
005	Diagnostic Report
006	Non-Default
007	NIB Summary
008	Capture Log
021	Copier User Program
022	Scanner SP
023	Scanner User Program
024	SDK/J Summary
025	SDK/J Application Info
026	Printer SP

# 7. Press [EXECUTE].

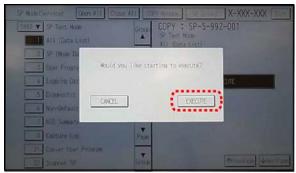


d1440128

# 8. Press [EXECUTE] again to start. Press [CANCEL] to cancel the saving.



d1440130

9. "It is executing it" is shown on the screen while executing.

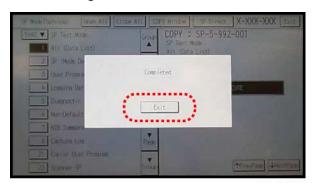

d1440129

10. Wait for 2 to 3 minutes until "Completed" is shown.




- The SMC list saving may take from 2 to 3 minutes to complete.
- Press [CANCEL] to abort executing.
- 11. Press [Exit] to exit from SP mode.

# File Names of the Saved SMC Lists

The SMC list data saved on the SD card will be named automatically. The file naming rules are as follows.

Example:



d1822109

A: Machine serial number (fixed for each machine)

B: The first four digits indicate the SP number. The last three digits indicate the branch number.

C: File creation date (YYYY/MM/DD)

D: File creation time (HH/MM/SS)



 A folder named by the machine serial number will be created on the SD card when this function is executed.

# **Error Messages**

# • Failed:

Read-only file system, No space left on device. If an error occurs, pressing "Exit" will cause the device to discard the job and return to the ready state.

# 6. Troubleshooting

# Self-Diagnostic Mode

# Service Call Codes

## **Service Call Conditions**

Pattern	Display	How to reset	SC call or SC alarm in customer support system
A	The SC is displayed on the operation panel, and the machine cannot be used (safety-related SC).	Execute CE reset SP mode, and switch main power from OFF to ON.  CAUTION  When canceling a fusing unit SC, (SC544-00/SC554-00/SC564-00/SC574-00), perform part replacement in accordance with the above procedure.	Occurrence & alarm count ↓ Immediate alarm
В	When a function is selected, the SC is displayed on the operation panel, and the machine cannot be used (downtime mitigation).	Switch main power from OFF to ON.	Occurrence & alarm count  ↓  Power OFF → ON  ↓  Alarm count and alarm only  if recurrence
С	No display on the operation panel, and use is permitted.	Count only logging.	Occurrence  ↓  Logging count & alarm  count

Pattern	Display	How to reset	SC call or SC alarm in customer support system
D	The SC is displayed on the operation panel, and the machine cannot be used (machine-error SC).	Switch main power from OFF to ON.	Occurrence & alarm count  ↓  Power OFF → ON  ↓  Alarm count and alarm only  if recurrence



- When an ordinary SC (type D) is generated, an automatic reboot is performed. When an event is reported by the customer support system, even in the event of an ordinary SC, reboot is not performed. During automatic reboot, a confirmation screen is displayed after the reboot.
- When automatic reboot occurs twice continuously, an SC is displayed without rebooting, and logging count is performed. Also, when an SMC print is output, an \* mark is added alongside the SC number for clarity.
- Automatic reboot can be enabled or disabled with SP5-875-001 (SC automatic reboot setting) (default value: ON).

# **SC Logging**

When an SC is generated, the "total count value when the SC is generated" and the "SC code" are logged. However, if the total count value during the SC is the same as last time, logging is not performed.

Logged data can be checked by outputting an administrative report (SMC print). The SC history is logged up to the last 10 entries, and if there are more than 10 entries, data are progressively deleted starting from the oldest.

#### SC Automatic Reboot

When an ordinary SC (pattern D) is generated, automatically reboot is performed. Automatic reboot or reboot by user operation can be set by SP5-875-001 (SC automatic reboot setting out) (default value: 0 "Automatic reboot").

When a type D occurs, automatic reboot is done or the machine display asks the customer if it can reboot. However, when the SC occurs twice in a short time, the machine sends a report to the @Remote server without rebooting. This is because just rebooting may not be a good solution if an SC occurs twice.

When an automatic reboot is performed, a confirmation screen is displayed after reboot. The confirmation screen can be cancelled by pressing the [OK] key (display is not cancelled only when the main power switch is switched OFF to ON).

## Screen display during reboot

- Status display on the current screen
  - Post-processing ..... Post-processing during printing, etc.
  - Automatic reboot .... After operation end

Post-processing



Until automatic reboot

• Reset key (Reboot key)

Key to perform reboot

# Cancel key is not displayed.

• Turn on spanner LED (same as when an SC is generated).

## **Operation during SC reboot**

· Timing of SC reboot

When @Remote is enabled, and when a NRS alarm\*1 is not generated, the corresponding SC is the object of an automatic reboot.


- \* 1 NRS alarm: Issued when an ordinary SC (type D) is generated twice while the total counter counts 10 times
- Time to automatic reboot

Reboot is performed 30 seconds after an engine reboot is possible, after the end of post-processing during printing, etc.

At that time, a reboot is performed even if the MFP is operating. The engine does not start process control when a reboot is possible.

Automatic reboot

See the flowchart below.

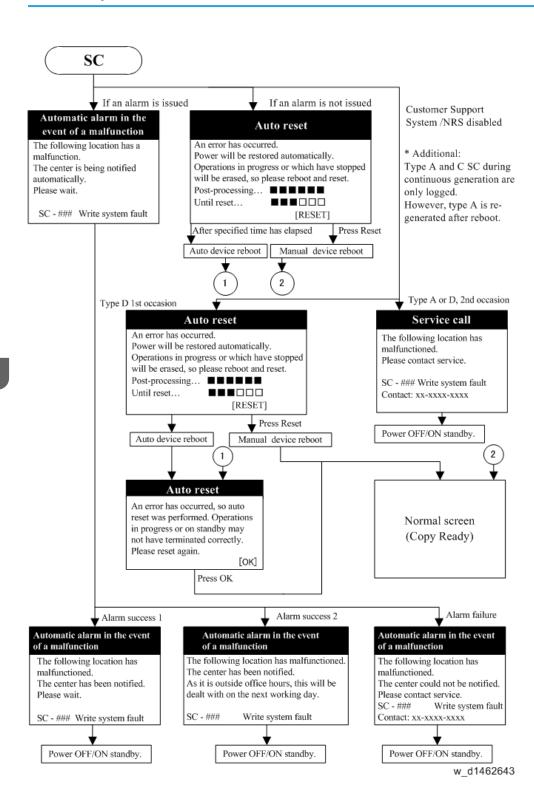

# SC Tables: SC1xx (Scanning)

# SC101-01 to SC195-00

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC101-01	D	Lamp Error (Scanning)
		The white level peak did not reach the prescribed threshold when the white plate was scanned.
		LED defective     IDB (LED driver) defective
		SBU defective
		IPU defective
		Power/signal harness defective
		Condensation in scanner unit
		Mirrors or lenses dirty or positioned incorrectly
		White plate dirty or installed incorrectly
		1. Turn the power off/on.
		2. Perform the following operations:
		Reconnect the power/signal harness.
		Reattach/clean the mirrors/lenses.
		Reattach/clean the white plate.
		3. Replace the following parts:
		Replace the scanner lamp (LED board).
		Replace the SIO board.
		Replace the lens block (SBU board).
		Replace the IPU board.
		Replace the power/signal harness.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC101-02	D	Lamp Error (LED illumination adjustment)
		LED error was detected.
		LED defective
		IDB (LED driver) defective
		Power/signal harness defective
		1. Turn the power off/on.
		2. Perform the following operations:
		Reconnect the power/signal harness.
		3. Replace the following parts:
		Replace the scanner lamp (LED board).
		Replace the SIO board.
		Replace the power/signal harness.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution	
SC102-00	D	LED Illumination Adjustment Error	
		The white level peak reached the prescribed threshold when the white plate was scanned after a specified number of adjustments.	
		LED defective	
		IDB (LED driver) defective	
		SBU defective	
		IPU defective	
		Power/signal harness defective	
		1. Turn the power off/on.	
		2. Reconnect the power/signal harness.	
		3. Replace the following parts:	
		Replace the scanner lamp (LED board).	
		Replace the lens block (SBU board).	
		Replace the SIO board.	
		Replace the IPU board.	
		Replace the power/signal harness.	

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC120-00	D	Scanner Home Position Error 1
		The scanner home position sensor does not go OFF.
		Details:
		Error detection timing
		During homing (when the machine is turned ON or when it returns from energy save mode)
		During an automatic adjustment (when the machine is turned ON or when it returns from energy save mode)
		During a scan from the ADF or exposure glass.
		Scanner motor driver defective
		Scanner motor defective
		Scanner HP sensor defective
		Harness defective
		Timing belt, pulley, wire, or carriage not installed correctly
		Replace the following parts:
		Replace the HP sensor
		Replace the scanner motor
		Replace the harness.
		Reattach or replace the timing belt, pulleys, wires, or carriage unit.

## SC121 RTB 42

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC121-00	D	Scanner Home Position Error 2
		The scanner home position sensor does not go ON.
		Details:
		Error detection timing
		During homing
		During an automatic adjustment
		During a scan from the ADF or exposure glass.
		Scanner motor driver defective
		Scanner motor defective
		Scanner HP sensor defective
		Harness defective
		Timing belt, pulley, wire, or carriage not installed correctly
		Replace the following parts:
		Replace the home position sensor
		Replace the scanner motor
		Replace the harness.
		Reattach or replace the timing belt, pulleys, wires, or carriage unit.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC141-00	D	Black Level Detection Error
		The black level cannot be adjusted within the target during auto gain control.
		SBU defective     IPU defective     Power/signal harness defective
		Tower/signal namess detective     Turn the power off/on.     Reconnect the power/signal harness.
		3. Replace the following parts:  • Replace the lens block (SBU board).  • Replace the IPU board.
		Replace the power/signal harness.

## SC142 RTB 67

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC142-00	D	White Level Detection Error
		The white level cannot be adjusted to the second target level within the target during auto gain control.
		SBU defective
		LED defective
		IDB (LED driver) defective
		IPU defective
		Power/signal harness defective
		Scanner drive error
		Condensation in scanner unit
		Mirrors or lenses dirty or positioned incorrectly
		White plate dirty or installed incorrectly

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		1. Turn the power off/on.
		2. Perform the following operations:
		<ul> <li>Reconnect the power/signal harness.</li> </ul>
		<ul> <li>Reattach/clean the mirrors/lenses.</li> </ul>
		Reattach/clean the white plate.
		3. Replace the following parts:
		<ul> <li>Replace the lens block (SBU board).</li> </ul>
		<ul> <li>Replace the scanner lamp (LED board).</li> </ul>
		Replace the IPU board.
		Replace the SIO board.
		<ul> <li>Replace the power/signal harness.</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC144-00	D	SBU Communication Error
		<ul> <li>Connection to SBU cannot be confirmed. (Connection detection error)</li> <li>Cannot communicate with the SBU, or the communication result is abnormal.</li> </ul>
		SBU defective
		<ul> <li>The other side of the communication (BCU, IPU etc.) defective</li> <li>Power/signal harness defective</li> </ul>
		1. Turn the power off/on.
		2. Reconnect the power/signal harness.
		3. Replace the following parts:
		<ul> <li>Replace the lens block (SBU board).</li> </ul>
		Replace the IPU board.
		Replace the BCU board.
		Replace the power/signal harness.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC165-00	D	Copy Data Security Unit Error
	The copy data security option is enabled in the User Tools but the option board is detected as missing or defective.	
		The copy data security option was detected as defective when the machine was turned on or returned from energy save mode.
		Copy data security unit board not installed correctly     Copy data security unit board defective
		<ul> <li>Reinstall the copy data security unit board.</li> <li>Replace the copy data security unit board.</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC185-00	D	CIS Transmission Error
		The data read from the ASIC register on the CIS were not as expected.
		Occurs when a serial communication error between the CIS board and the DF board is detected. Occurs also when an error is detected during initialization of the ASIC on the CIS.
		This can happen during initialization and feeding. The first and second consecutive occurrences of each constitute jams. The third occurrence constitutes an SC.
		Connector or harness between DF board and CIS board is disconnected or defective
		<ul> <li>ASIC on the CIS is defective</li> <li>Boot failure of ASIC on the CIS</li> </ul>
		Reconnect the power/signal harness.
		Replace the CIS unit (CIS and CIPB).
		Replace the ADF control board.
		Replace the power/signal harness.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC186-00	D	CIS LED Error

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		During initialization:
		<ul> <li>The ratio between the average values of leading-edge area and rear-edge area is out of specification.</li> </ul>
		Shading data peak value is below specification.
		During scanning:
		Shading data peak value is below specification.
		Details:
		During initialization:
		<ul> <li>Occurs when one out of two CIS LEDs is malfunctioning, causing the difference between the average values of leading-edge area and rear-edge area to be large (CIS LED error detection).</li> </ul>
		<ul> <li>Occurs when both of the CIS LEDs are malfunctioning (unlit), causing the shading data peak value to be extremely low (CIS white level adjustment).</li> </ul>
		During scanning:
		<ul> <li>Occurs when both of the CIS LEDs are malfunctioning (unlit), causing the shading data peak value to be extremely low (CIS scan control, gray balance adjustment / confirmation).</li> </ul>
		The first and second consecutive occurrences of each constitute initial/feed jams. The third occurrence constitutes an SC.
		During initialization:
		One or two out of two CIS LEDs are defective
		During scanning:
		Both of the CIS LEDs are defective.
		Reconnect the power/signal harness.
		Replace the CIS unit (CIS and CIPB).
		Replace the CIS background white roller.
		Replace the power/signal harness.
		Replace the ADF main control board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC187-00	D	CIS Black Level Error

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		The black level scanned by CIS is abnormal.  Details:  Occurs when abnormality is detected in the process of black level generation – detection.
		The first and second consecutive occurrences constitute initial jams.  The third occurrence constitutes an SC.
		CIS defective
		Replace the CIS unit (CIS and CIPB).

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC188-00	D	CIS White Level Error
	The shading data peak value read out from the CIS is abnormal.  Details:	
		Occurs when abnormality is detected in the process of CIS shading data peak detection.
		The first and second consecutive occurrences constitute initial jams.  The third occurrence constitutes an SC.
		CIS defective
		CIS background white roller is scratched, dirt, or improperly connected.
		Reconnect the power/signal harness.
		Replace the CIS unit (CIS and CIPB).
		Replace the CIS background white roller.
		Replace the power/signal harness.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC195-00	D	Machine Serial Number Error
		Comparison of the product identification code in the machine serial number (11 digits).
		The product identification code in the machine serial number (11 digits) does not match.
		Re-enter the machine serial number.

# SC Tables: SC2xx (Exposure)

# SC202-00 to SC270-10

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC202-00	D	Polygon Motor: ON Timeout Error
		After the polygon motor turned on, or within 10 sec. after the rpm's changed, the motor did not enter READY status.
		The interface harness to the polygon motor driver damaged or not connected correctly.
		Polygon motor or polygon motor driver defective
		Polygon motor drive pulse cannot be output correctly. (Polygon controller)
		XSCRDY signal observation failing (Polygon controller)
		Turn the power off/on.
		Replace the laser unit.
		Replace the harness.
		Replace the IPU board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC203-00	D	Polygon Motor: OFF Timeout Error
		The XSCRDY signal (polygon ready) never becomes inactive (H) within 3 sec. after the polygon motor went OFF.
		The interface harness to the polygon motor driver damaged or not connected correctly.
		Polygon motor or polygon motor driver defective
		Polygon motor drive pulse cannot be output correctly. (Polygon controller)
		XSCRDY signal observation failing (Polygon controller)
		Turn the power off/on.
		Replace the laser unit.
		Replace the harness.
		Replace the IPU board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC204-00	D	Polygon Motor: XSCRDY Signal Error
		During polygon motor rotation, the XSCRDY signal was inactive (H) for longer than one rotation of the polygon.
		The interface harness to the polygon motor driver damaged or not connected correctly.
		Polygon motor or polygon motor driver defective
		Turn the power off/on.
		Replace the laser unit.
		Replace the harness.
		Replace the IPU board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC220-00	D	Laser Synchronization Detection Error: Leading Edge
		The laser synchronizing detection signal for the start position of the LD was not output for 200msec. after LDB unit turned on with the polygon motor rotating normally.
		The interface harness to the synchronization detection unit damaged or not connected correctly.
		Synchronization detection board defective
		Beam does not enter photo detector.
		Abnormality around GAVD
		IDB (LED driver) defective
		LDB defective
		IPU defective
		Turn the power off/on.
		Replace the laser unit.
		Replace the harness.
		Replace the IPU board

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC230-00	D	FGATE ON Error
		The FGATE signal did not turn ON within the given time period after the writing process started.
		GAVD defective
		Image processing ASIC defective
		BCU, controller board not connected correctly or defective
		Harness between BCU and LDB defective
		Turn the power off/on.
		Replace the harness between IPU and laser unit.
		Replace the IPU board.
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC240-00	D	LD Error
		<ul> <li>The LD error status of LD driver is asserted after the LD is initialized.</li> <li>The LD driver's error signal is detected during LD initialization.</li> </ul>
		<ul> <li>LD degradation (LD broken, shift of output characteristics etc.)</li> <li>The interface harness damaged or not connected correctly.</li> <li>LD driver defective</li> </ul>
		<ul> <li>Cycle the main power off/on.</li> <li>Replace the laser unit.</li> <li>Replace the harness.</li> <li>Replace the IPU board.</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC270-00	D	GAVD Communication Error
		When machine starts or cancels the energy saving
		GAVD defective
		CPU defective
		BCU defective
		Cycle the main power off/on.
		Replace the IPU board.
		Replace the controller board.
		Replace the BCU board.
		Set the FCC between BCU and IPU.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC272-01	D	LD Driver Communication Error
		If the value is not same when the machine reads and writes the same registration at the machine start-up.  If the communication parity retries three consecutive times, the SC is generated.
		<ul> <li>CPU defective</li> <li>IPU defective</li> <li>BCU defective</li> <li>Harness defective</li> </ul>
		<ul> <li>Cycle the main power off/on.</li> <li>Replace the laser unit.</li> <li>Replace the harness</li> <li>Replace the IPU board</li> </ul>

SC No.

Level

CPU defective

the door.

LD Driver Communication Error: Others

Error Name/Error Condition/Major Cause/Solution

If the "Door Open" status does not change to "Door Close" after closing

# SC Tables: SC3xx (Image Processing1 (Charge, Development))

# SC302-00 to SC392-01

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC302-00	D	High Voltage Power Source: Charge: Output Error
		The machine detects the error detection signal "L (unexpected)" 10 times for 200 msec consecutively when monitoring the error signal every 20 msec during outputting the PWM signal.
		Hardware error
		Input / Output connector is disconnected.
		Input / Output harness is short-circuited.
		Surface/air clearance insufficient (arc discharge)
		BCU error (signal error)
		HVPS defective
		Load error
		Grounding fault of charging output, short-circuit with other outputs
		Surface/air clearance insufficient in charging output path (including distance from other outputs)
		Unexpected deterioration of drum and over current due to pinholes gap error between the drum and charge roller (PCU error).
		Over current due to drum surface condensation
		PCU is disconnected.
		Cycle the main power off/on.
		Replace the high HVPS.
		Replace the harness of the HVPS.
		Replace the harness of the PCU.
		Replace the PCU.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC324-01	D	Development Motor: Bk: Lock
		Lock signals are observed at 2 sec intervals during motor ON, and a High level is detected at least 20 times
		Motor defective
		Connector disconnected
		Harness broken
		BCU defective
		Unit torque increased
		Replace the development motor.
		Reconnect the connector.
		Replace the harness.
		Replace the BCU.
		Replace the development unit.
		Replace the driven unit.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC360-01	D	TD Sensor Adjustment Error
		When Mu count exceeds the judgment threshold of no developer status.
		<ul> <li>When Mu count does not satisfy the following target ranges for 3 times in a row.</li> </ul>
		Upper threshold
		Lower threshold
		TD sensor defective
		Loose connection
		Harness broken
		Developer toner density differs from initial developer
		Replace the TD sensor.
		Replace the development unit.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC361-01	D	TD Sensor Output Error: Upper Limit (K)
		The following condition continuously exceeds the upper limit threshold value (SP3-211-003).
		• TD sensor output: Vt (SP3-210-001) > output upper limit error threshold (SP3-211-002)
		TD sensor connector dropout (connection fault)
		Check if the TD sensor connector is connected.
		Check the harness of the TD sensor (disconnection, etc.).
		Replace the TD sensor.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC362-01	D	TD Sensor Output Error: Lower limit (K)
		TD sensor output: Vt (SP3-210-001) < output lower limit error threshold (SP3-211-004) is continuously below the lower limit occurrence threshold value (SP3-211-005)
		TD sensor connector missing/dropout
		Check if the TD sensor connector is connected.
		Check the harness of the TD sensor (disconnection, etc.).
		Replace the TD sensor.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC370-00	С	ID Sensor Calibration Error
		Regular reflection optical output voltage of the ID sensor: Vsg_reg cannot be adjusted to within target range.
		Upper limit (SP3-320-013: initial value 4.5V)
		Lower limit (SP3-320-014: initial value 3.5V)
		ID sensor connector missing/ connection fault
		ID sensor detection window dirt
		ID sensor malfunction
		Check for ID sensor connector missing. If it is missing, reconnect it.
		Check for dirt on the ID sensor detection window. If the detection window is dirty, clean by predetermined method (do not wipe dry).
		If neither of the above have occurred, perform ID sensor replacement.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC391-00	D	High Voltage Power Source: Development : Output Error
		When the machine detects the error detection signal "L (abnormal)" 10 times for 200 ms consecutively by monitoring the error ditection signal every 20ms during output of the PWM signal used as an error detection target.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Hardware error
		Input / Output connector is disconnected.
		Surface/air clearance insufficient (arc discharge)
		Input / Output harness is short-circuited.
		BCU error (signal error)
		HVPS defective
		Load error
		Grounding fault of charging output, short-circuit with other outputs
		Surface/air clearance insufficient in charging output path (including distance from other outputs)
		Unexpected deterioration of drum, and over current due to pinholes
		Over current due to drum surface condensation
		PCDU is not set properly.
		Cycle the main power off/on
		Replace the harness between the BCU and HVPS.
		Reconnect or replace the harness between the BCU and HVPS.
		Reinstall or replace the development unit.
		<ul> <li>Check if the contact and separation movement of the transfer works correctly.</li> </ul>
		Replace the HVPS.
		Replace the BCU.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC396-01	D	Drum Motor Lock
		Lock signals are observed at 2 sec intervals during motor ON, and a High level is detected at least 20 times.
		Motor defective
		Connector disconnected
		Harness broken
		BCU defective
		PCU torque increased
		Reconnect the connector.
		Replace the harness of the drum/waste toner motor.
		Replace the drum/waste toner motor.
		Replace the PCU.
		Replace the BCU.

# SC Tables: SC4xx (Image Processing2 (Around the Drum))

### SC440-00 to SC498-00

SC No.	Level	Error Name/Error Condition/Major Cause/Solution	
SC440-00	D	High Voltage Power Source: Paper Transfer : Output Error	
		The machine detects the error detection signal "L (unexpected)" 10 times for 200 msec consecutively when monitoring the error signal every 20 msec during outputting the PWM signal.	
		Hardware error	
		Input / Output connector is disconnected.	
		Input / Output harness is short-circuited.	
		BCU error (signal error)	
		Load error	
		Transfer roller's impedance increases.	
		Transfer unit is not set properly.	
			Cycle the main power off/on.
		Reconnect or replace the harness of the HVPS (power pack).	
		Reconnect or replace the harness between the BCU and the HVPS.	
		Rset or replacee the transfer unit.	
		Check if the contact and separation movement of the transfer unit works correctly.	
		Replace the HVPS.	
		Replace the BCU.	

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC452-00	D	Transfer Roller Contact Motor Error
		When the machine does not detect the high/low signal for a specified time after the transfer roller contact motor has been turned on.
		Motor overload, Motor defective
		Connector disconnected
		Harness broken
		Interlock mechanism is defective.
		Cycle the main power off/on
		Check if the contact and separation movement of the transfer unit works correctly.
		Replace the transfer roller contact motor.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC460-00	D	High Voltage Power Source: Separation : Output Error
		The machine detects the error detection signal "L (unexpected)" 10 times for 200 msec consecutively when monitoring the error signal every 20 msec during outputting the PWM signal.
		Hardware error
		Input / Output connector is disconnected.
		Input / Output harness is short-circuited.
		Transfer unit is not set properly.
		BCU error (signal error)
		HVPS defective
		Load error
		Grounding fault of separation power output, short-circuit with other outputs
		Surface/air clearance insufficient in separation power output path (including distance from other outputs)
		Cycle the main power off/on
		Reconnect or replacethe harness of the HVPS (power pack).
		Reconnect or replace the harness between the BCU to the HVPS.
		Reset or replace the trausfer unit.
		<ul> <li>Check if the contact and separation movement of the transfer unit works correctly.</li> </ul>
		Replace the HVPS.
		Replace the BCU.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC498-00	С	Temperature and Humidity Sensor Error (Main machine)
		The output of the temperature/humidity sensor is out of the following range.  • 0.76 V or less/ 2.90 V or more (temperature sensor)  • 2.4 V or more (humidity sensor)
		<ul> <li>Connector disconnected or broken</li> <li>Temperature/Humidity sensor defective</li> <li>Reconnect or replace the harness.</li> <li>Replace the temperature/humidity sensor.</li> </ul>

6

#### 6

# SC Tables: SC5xx (Paper Feed and Fusing)

## SC501-01 to SC589-02

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC501-01	В	1st Tray Lift Error
		The machine detects the error of the 1st tray lift motor 3 times consecutively when the 1st tray is lifted
		(The message of resetting the tray is displayed when the machine detects the error consecutively 2 times or less.)
		1 st tray limit sensor connector disconnection, malfunction or sensor's dirt.
		1 st tray lift motor connector disconnection, malfunction
		Foreign matter, such as paper scrap, is caught between the paper
		feed tray and the tray lift motor.
		Paper set fault
		Reset the paper.
		Remove the foreign matter.
		1st tray limit sensor, 1st tray lift motor
		Check the harness.
		Reset the connector.
		Replacement
		1st paper feed unit, 1st tray
		Replacement
		BCU
		Replacement

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC501-02	В	1st Tray Lowering Error
		The machine detects the error of the 1st tray lift motor 5 times consecutively when the 1st tray is lowered.
		(The message of resetting the tray is displayed when the machine detects the error consecutively 4 times or less.)
		1 st tray limit sensor connector disconnection, malfunction or sensor's dirt.
		1 st tray lift motor connector disconnection, malfunction
		<ul> <li>Foreign matter, such as paper scrap, is caught between the paper feed tray and the tray lift motor.</li> </ul>
		Paper set fault
		Paper overload
		Reset the paper.
		Remove the foreign matter.
		1st tray limit sensor, 1st tray lift motor
		Check the harness.
		Reset the connector.
		Replacement
		1 st paper feed unit, 1 st tray
		Replacement
		BCU
		Replacement

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC502-01	В	2nd Tray Lift Error
		The machine detects the error of the 2nd tray lift motor 3 times consecutively when the 2nd tray is lifted
		(The message of resetting the tray is displayed when the machine detects the error consecutively 2 times or less.)
		2nd tray limit sensor connector disconnection, malfunction, dirt
		2nd tray lift motor connector disconnection, malfunction
		Foreign matter, such as paper scrap, is caught between the paper feed tray and the tray lift motor
		Paper set fault
		Reset the paper.
		Remove the foreign matter.
		2nd tray limit sensor, 2nd tray lift motor
		Check the harness.
		Reset the connector.
		Replacement
		2nd paper feed unit, 2nd tray
		Replacement
		BCU
		Replacement

SC No.	Level	Error Name/Error Condition/Major Cause/Solution	
SC502-02	В	2nd Tray Lowering Error	
		The machine detects the error of the 2nd tray lift motor 5 times consecutively when the 2nd tray is lowered.	
		(The message of resetting the tray is displayed when the machine detects the error consecutively 4 times or less.)	
		The 2nd paper feed tray limit sensor connector disconnection, malfunction, and dirt	
		2nd tray lift motor connector disconnection, malfunction	
		Foreign matter, such as paper scrap, is caught between the paper feed tray and the tray lift motor	
		Paper set fault	
		Paper overload	
		Reset the paper.	
		Remove the foreign matter.	
		2nd tray limit sensor, 2nd tray lift motor	
		Check the harness.	
		Reset the connector.	
		Replacement	
			2nd paper feed unit, 2nd tray
		Replacement	
		BCU	
		Replacement	

SC No.	Level	Error Name/Error Condition/Major Cause/Solution	
SC503-01	В	3rd Tray Lift Error (D694)	
		The machine detects the lift error of the tray lift motor for the PFU (D694) 3 times consecutively when the 3rd tray is lifted at the machine's initialization.	
		(The message of resetting the tray is displayed when the machine detects the error consecutively 2 times or less.)	
		Tray lift motor connector disconnected	
		Limit sensor harness disconnected or broken	
		Control board defective	
		Foreign matter, such as paper scrap, is caught between the paper feed tray and the tray lift motor	
			Paper set fault
		Reset the paper.	
		Remove the foreign matter.	
		Replace the tray lift motor.	
		Reset the connector.	
		Replace the harness.	
		Replace the limit sensor.	
		Replace the control board for the optional PFU (D694).	
		Replace the tray.	
		Replace the paper feed roller.	
		Replace the pick-up arm.	

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC503-02	В	3rd Tray Lowering Error (D694)
		The machine detects the lowering error of the tray lift motor for the PFU (D694) 3 times consecutively when the 3rd tray is lowered at the machine's initialization.
		(The message of resetting the tray is displayed when the machine detects the error consecutively 2 times or less.)
		Tray lift motor connector disconnected
		Limit sensor harness disconnected or broken
		Control board defective
		Paper overload
		<ul> <li>Foreign matter, such as paper scrap, is caught between the paper feed tray and the tray lift motor</li> </ul>
		Paper set fault
		Reset the paper.
		Remove the foreign matter.
		Replace the tray lift motor.
		Reset the connector.
		Replace the harness.
		Replace the limit sensor.
		<ul> <li>Replace the control board for the optional PFU (D694).</li> </ul>
		Replace the tray.
		Replace the paper feed roller.
		Replace the pick-up arm.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC503-11	В	3rd Tray Lift Error (D787)
		The machine detects the lift error of the tray lift motor for the PFU (D787) 3 times consecutively when the 3rd tray is lifted at the machine's initialization.
		(The message of resetting the tray is displayed when the machine detects the error consecutively 2 times or less.)
		Tray lift motor connector disconnected
		Limit sensor harness disconnected or broken
		Control board defective
		<ul> <li>Foreign matter, such as paper scrap, is caught between the paper feed tray and the tray lift motor</li> </ul>
		Reset the paper.
		Remove the foreign matter.
		Replace the tray lift motor.
		Reset the connector.
		Replace the harness.
		Replace the limit sensor.
		<ul> <li>Replace the control board for the optional PFU (D787).</li> </ul>
		Replace the tray.
		Replace the paper feed roller.
		Replace the pick-up arm.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC503-12	В	3rd Tray Lowering Error (D787)
		The machine detects the lowering error of the tray lift motor for the PFU (D787) 3 times consecutively when the 3rd tray is lowered at the machine's initialization.
		(The message of resetting the tray is displayed when the machine detects the error 2 times consecutively.)
		Tray lift motor connector disconnected
		Limit sensor harness disconnected or broken
		Control board defective
		Paper overload
		Foreign matter, such as paper scrap, is caught between the paper feed tray and the tray lift motor
		Paper set fault
		Reset the paper.
		Remove the foreign matter.
		Replace the tray lift motor.
		Reset the connector.
		Replace the harness.
		Replace the limit sensor.
		Replace the control board for the optional PFU (D787).
		Replace the tray.
		Replace the paper feed roller.
		Replace the pick-up arm.
SC503-31	В	3rd Tray Lift Error (LCIT: D695)
		<ul> <li>The machine detects the lift error of the tray lift motor for the LCIT (D695) 3 times consecutively when the 3rd tray is lowered at the machine's initialization.</li> </ul>
		The machine detects the lift error of the tray lift motor for the LCIT (D695) 3 times consecutively when the 3rd tray is lifted at the machine's initialization.
		(The message of resetting the tray is displayed when the machine detects the error consecutively 2 times or less.)

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Tray lift motor connector disconnected
		<ul> <li>Limit sensor harness disconnected or broken</li> </ul>
		Control board defective
		<ul> <li>Foreign matter, such as paper scrap, is caught between the right tray and the tray lift motor.</li> </ul>
		Paper set fault
		Timing belt damage or dropout
		Timing pulley damage or dropout
		<ul> <li>Base plate damaged or plate horizontality fault</li> </ul>
		Paper feed roller missing
		Pickup arm damage
		Foreign matter, such as paper scrap, is caught inside the right tray.
		Reset the paper.
		Remove the foreign matter.
		Replace the tray lift motor.
		Reset the connector.
		Replace the harness.
		Replace the limit sensor.
		<ul> <li>Replace the control board for the optional LCIT (D695).</li> </ul>
		Replace the tray.
		Replace the paper feed roller.
		Replace the pick-up arm.
		Replace the timing belt.
		Replace the timing pulley.
		Replace the base plate.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC503-32	В	3rd Tray Lowering Error (LCIT: D695)
		The machine detects the lift error of the tray lift motor for the LCIT (D695) 3 times consecutively when the 3rd tray is lowered at the machine's initialization.
		<ul> <li>The machine detects the lift error of the tray lift motor for the LCIT (D695) 3 times consecutively when the 3rd tray is lifted at the machine's initialization.</li> </ul>
		(The message of resetting the tray is displayed when the machine detects the error consecutively 2 times or less.)
		Tray lift motor connector disconnected
		Lower limit sensor harness disconnected or broken
		Control board defective
		Foreign matter, such as paper scrap, is caught between the right tray and the tray lift motor.
		Paper set fault
		Timing belt damage or dropout
		Timing pulley damage or dropout
		Base plate damaged or plate horizontality fault
		Foreign matter, such as paper scrap, is caught inside the right tray.
		Reset the paper.
		Remove the foreign matter.
		Replace the tray lift motor.
		Reset the connector.
		Replace the harness.
		Replace the lower limit sensor.
		Replace the control board for the LCIT (D695).
		Replace the tray.
		Replace the timing belt.
		Replace the timing pulley.
		Replace the base plate.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC503-33	В	3rd Tray Paper Overload Error (LCIT: D695)
		Both of the upper limit and lower limit detects the base plate 3 times consecutively at the machine's initialization.
		(The message of resetting the tray is displayed when the both sensors detect the error consecutively 2 times or less.)
		Paper overload
		Paper set fault
		Limit sensor harness disconnected or broken
		Lower limit sensor harness disconnected or broken
		Control board defective
		Foreign matter, such as paper scrap, is caught inside the right tray.
		Reset the paper.
		Remove the foreign matter.
		Reset the connector.
		Replace the harness.
		Replace the limit sensor.
		Replace the lower limit sensor.
		Replace the control board for the LCIT (D695).

SC No.	Level	Error Name/Error Condition/Major Cause/Solution	
SC503-34	В	3rd Tray Paper Position Error (LCIT: D695)	
			During left/right tray set, or when power is switched ON, or when transfer is complete, "open" is detected 3 times consecutively by end fence open/close detection.
		(The message of resetting the tray is displayed when the both sensors detect the error consecutively 2 times or less.)	
		<ul> <li>Paper set fault (paper is offset from position for pushing end fence)</li> <li>Foreign matter entry (foreign matter is caught in the position for pushing end fence)</li> <li>End fence open/close sensor error/connector missing</li> <li>Harness broken</li> <li>Bank control board defective</li> </ul>	
		<ul> <li>Reset the paper.</li> <li>Remove the foreign matter.</li> <li>Reset the connector.</li> <li>Replace the harness.</li> <li>Replace the sensor.</li> <li>Replace the control board for the optional paper feed tray.</li> </ul>	

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC503-35	В	3rd Tray Transfer Error (LCIT: D695)
		Transfer end detection error
		At right tray paper end (right tray lower limit detection, left tray paper detection), left tray paper is transferred to the right tray, but the left tray paper sensor is detected although a predetermined time elapsed (transfer paper missing is not detected), for 3 times consecutively.
		(The message of resetting the tray is displayed when the both sensors detect the error consecutively 2 times or less.)
		Transfer motor error/connector missing
		Left tray paper sensor error/connector missing
		Harness broken
		Bank control board defective
		Paper overload
		Foreign matter, such as paper scrap, is caught between the left tray and the tray transfer motor
		Paper set fault
		Timing belt damage/dropout
		Timing pulley damage/dropout
		Transfer fence defective
		Foreign matter, such as paper scrap, is caught inside the left tray
		Replace the motor.
		Reset the connector.
		Replace the harness.
		Replace the sensor.
		Replace the control board for the optional paper feed tray.
		Reset the paper.
		Remove the foreign matter.
		Replace the tray.
		Replace the timing belt.
		Replace the timing pulley.
		Replace the end fence of the left tray.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution	
SC503-36	В	3rd Tray Transfer HP Error (LCIT: D695)	
	HP detection error (during transfer start)  At right tray paper end (right tray lower limit detection, left tray paper detection), left tray paper is transferred to the right tray, but the left tray transfer fence HP sensor is detected although a predetermined time elapsed (HP sensor missing cannot be detected).		
			HP detection error (during transfer fence HP return)
		During left tray transfer fence HP not detected (stop after paper transfer, during power supply ON, during left tray set), the left tray transfer fence is moved to HP, but the left tray HP sensor is not detected although a predetermined time elapsed.	
		*If an error occurs 3 times consecutively: LCIT transmits "3rd paper feed tray transfer HP error" to the main machine.	
		(The message of resetting the tray is displayed when the both sensors detect the error consecutively 2 times or less.)	

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Transfer motor error/connector missing
		<ul> <li>Left tray transfer fence HP sensor error/connector missing</li> </ul>
		Harness broken
		Bank control board defective
		Paper overload
		<ul> <li>Foreign matter, such as paper scrap, is caught between the left tray and the tray transport motor</li> </ul>
		Paper set fault
		Timing belt damage/dropout
		Timing pulley damage/dropout
		Transfer fence defective
		<ul> <li>Foreign matter, such as paper scrap, is caught inside the left tray</li> </ul>
		Replace the motor.
		Reset the connector.
		Replace the harness.
		Replace the sensor.
		<ul> <li>Replace the control board for the optional paper feed tray.</li> </ul>
		Reset the paper.
		Remove the foreign matter.
		Replace the tray.
		Replace the timing belt.
		Replace the timing pulley.
		Replace the end fence of the left tray.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC504-21	В	4th Tray Lift Error (D787)
		Lift motor ascent error detection
		During tray initialization (upper limit not detected/lower limit detection), the tray base plate is raised to check the tray base plate position, but the limit sensor is not detected although a predetermined time elapsed, for 3 times consecutively.
		(The message of resetting the tray is displayed when the both sensors detect the error consecutively 2 times or less.)
		Lift motor error/connector missing
		Limit sensor error/connector missing
		Harness broken
		Bank control board defective
		Foreign matter, such as paper scrap, is caught between the paper feed tray and the tray lift motor
		Paper set fault
		Reset the paper.
		Remove the foreign matter.
		Replace the motor.
		Reset the connector.
		Replace the harness.
		Replace the sensor.
		Replace the control board for the optional paper feed tray.
		Replace the tray.
		Replace the paper feed roller.
		Replace the pick-up arm.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC504-22	В	4th Tray Lowering Error (D787)
		Lift motor descent error detection
		During tray initialization, the tray base plate is lowered to check the tray base plate position, but the limit sensor is detected although a predetermined time elapsed, for 3 times consecutively.
		(The message of resetting the tray is displayed when the both sensors detect the error consecutively 2 times or less.)
		Lift motor error/connector missing
		Limit sensor error/connector missing
		Harness broken
		Bank control board defective
		Paper overload
		<ul> <li>Foreign matter, such as paper scrap, is caught between the paper feed tray and the tray lift motor</li> </ul>
		Paper set fault
		Reset the paper.
		Remove the foreign matter.
		Replace the motor.
		Reset the connector.
		Replace the harness.
		Replace the sensor.
		Replace the control board for the optional paper feed tray.
		Replace the tray.
		Replace the paper feed roller.
		Replace the pick-up arm.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC505-41	В	Side LCIT Limit Detection Error (D696)
		Upper limit detection error (during descent)
		During tray initialization (upper limit detection/lower limit not detected), the tray base plate is lowered to check the tray base plate position, but the limit sensor is detected although a predetermined time elapsed.
		Upper limit detection error (during ascent)
		During tray initialization (upper limit not detected /lower limit detection), the tray base plate is raised to check the tray base plate position, but the limit sensor is not detected although a predetermined time elapsed.
		(The message of resetting the tray is displayed when the both sensors detect the error consecutively 2 times or less.)

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Lift motor error/connector missing
		Limit sensor error/connector missing
		Harness broken
		Bank control board defective
		Paper set fault
		Timing belt damage/dropout
		Timing pulley damage/dropout
		Base plate damage/horizontality fault
		Paper feed roller missing item
		Pickup arm defective
		Foreign matter, such as paper scrap, is caught inside the tray
		Reset the paper.
		Remove the foreign matter.
		Replace the motor.
		Reset the connector.
		Replace the harness.
		Replace the sensor.
		<ul> <li>Replace the control board for the optional side LCT.</li> </ul>
		Replace the tray.
		Replace the paper feed roller.
		Replace the pick-up arm.
		Replace the timing belt.
		Replace the timing pulley.
		Replace the base plate.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC505-42	В	Side LCIT Lower Limit Detection Error (D696)
	<ul> <li>Lower limit detection error (during descent)</li> <li>During tray initialization (upper limit not detected /lower limit eject detection), the tray base plate is lowered to check the tray base plate position, but the lower limit sensor is not detected although a predetermined time elapsed.</li> </ul>	
		Alternatively, at paper end, the tray base plate is lowered, but the lower limit sensor is not detected although a predetermined time elapsed.
		Lower limit detection error (during ascent)
		During tray initialization (upper limit not detected/lower limit detection), the tray base plate is raised to check the tray base plate position, but the lower limit sensor is detected although a predetermined time elapsed.
		*If an error occurs for 3 times consecutively: the side LCIT transmits a "5th paper feed tray upper limit detection error" to the main machine.
		(The message of resetting the tray is displayed when the both sensors detect the error consecutively 2 times or less.)

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Lift motor error/connector missing
		Lower limit sensor error/connector missing
		Harness broken
		Bank control board defective
		Paper set fault
		Timing belt damage/dropout
		Timing pulley damage/dropout
		Base plate damage/horizontality fault
		Foreign matter, such as paper scrap, is caught inside the tray
		Reset the paper.
		Remove the foreign matter.
		Replace the motor.
		Reset the connector.
		Replace the harness.
		Replace the sensor.
		<ul> <li>Replace the control board for the optional side LCT.</li> </ul>
		Replace the tray.
		Replace the timing belt.
		Replace the timing pulley.
		Replace the base plate.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC505-43	В	Side LCIT Paper Overload Error (D696)
		During tray initialization, both the upper limit and lower limit are detected for 3 times consecutively.
		(The message of resetting the tray is displayed when the both sensors detect the error consecutively 2 times or less.)
		Paper overload
		Paper set fault
		Limit sensor error/connector missing
		Lower limit sensor error/connector missing
		Harness broken
		Bank control board defective
		Foreign matter, such as paper scrap, is caught inside the tray
		Reset the paper.
		Remove the foreign matter.
		Reset the connector.
		Replace the harness.
		Replace the sensor.
		Replace the control board for the optional side LCT.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC520-01	С	Registration Motor: Lock
SC520-02	С	Paper feed Motor: Lock
SC520-03	С	Transport Motor: Lock

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		During motor ON, after checking the motor error notification registers (err_velo and err_posi) for 500msec, the error state of either register was detected at least 5 times.
		Motor defective
		Connector disconnected
		Harness broken
		BCU defective
		Encoder defective
		Replace the motor.
		Reset the connector.
		Replace the harness.
		Replace the BCU.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC521-01	С	Duplex Entrance Motor: Lock
SC521-02	С	Duplex By-pass Motor: Lock
		During motor ON, after checking the motor error notification registers (err_velo and err_posi) for 500msec, the error state of either register was detected at least 5 times.
		<ul> <li>Motor defective</li> <li>Connector disconnected</li> <li>Harness broken</li> <li>BCU defective</li> <li>Encoder defective</li> </ul>
		<ul> <li>Replace the motor.</li> <li>Reset the connector.</li> <li>Replace the harness.</li> <li>Replace the BCU.</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution		
SC522-00	С	Paper Exit Motor: Lock		
		During motor ON, after checking the motor error notification registers (err_velo and err_posi) for 500msec, the error state of either register was detected at least 5 times.		
		Motor defective		
		Connector disconnected		
		Harness broken		
			BCU defective	
		Replace the motor.		
		Reset the connector.		
		Replace the harness.		
		Replace the BCU.		

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC530-00	D	Fusing Fan Lock
		In the motor ON state, the value of the lock sensor is checked every 100msec.  If a lock signal is not obtained for 50 times consecutively.
		<ul> <li>Motor defective</li> <li>Connector disconnected</li> <li>Harness broken</li> <li>BCU defective</li> </ul>
		<ul> <li>Replace the fusing fan.</li> <li>Reset the connector.</li> <li>Replace the harness.</li> <li>Replace the BCU.</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC531-00	D	Development Bearing Cooling Fan Lock

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		In the motor ON state, the value of the lock sensor is checked every 100msec.
		If a lock signal is not obtained for 50 times consecutively.
		Motor defective
		Connector disconnected
		Harness broken
		IBCU defective
		Replace the development bearing cooling fan
		Reset the connector.
		Replace the harness.
		Replace the BCU.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC533-00	D	PSU Cooling Fan Lock
SC533-01	D	Development Bearing Cooling Fan
		In the motor ON state, the value of the lock sensor is checked every 100msec.  If a lock signal is not obtained for 50 times consecutively.
		<ul> <li>Motor defective</li> <li>Connector disconnected</li> <li>Harness broken</li> <li>BCU defective</li> </ul>
		<ul> <li>Replace the development bearing cooling fan.</li> <li>Reset the connector.</li> <li>Replace the harness.</li> <li>Replace the BCU.</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC534-00	D	Development Exhaust Fan

6

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC535-00	D	Paper Exit Cooling Fan Lock
		In the motor ON state, the value of the lock sensor is checked every 100msec.  If a lock signal is not obtained for 50 times consecutively.
		<ul> <li>Motor defective</li> <li>Connector disconnected</li> <li>Harness broken</li> <li>BCU defective</li> <li>Replace the paper exit cooling fan.</li> <li>Reset the connector.</li> <li>Replace the harness.</li> <li>Replace the BCU.</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution	
SC540-00	D	Fusing/paper Exit Motor: Lock	
		During motor ON, after checking lock signals for 2sec, a High level was detected at least 20 times.	
		Motor defective	
		Connector disconnected	
			Harness broken
		BCU defective	
		Unit torque increased	
		Replace the fusing/paper exit motor.	
		Reset the connector.	
		Replace the harness.	
		Replace the BCU.	

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC541-01	Α	Fusing Central Thermopile Disconnection
		Below a predetermined temperature (or below CB) is detected for specified seconds continuously.  Detection frequency: 10 times or more.
		Disconnection     Connector disconnected
		<ul> <li>Replace the thermopile.</li> <li>Reset the connector.</li> <li>Replace the connector.</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC541-02	Α	Central NC Sensor Disconnection
		3ED - 3FF (FB voltage: 3.243V-3.300V) is detected for specified seconds continuously (NC sensor center: detection & compensation NC sensor edge: detection & compensation).  Detection period: 100 ms, detection frequency: 10 times or more.
		NC sensor disconnection     Connector disconnected
		<ul> <li>Reset the NC sensor.</li> <li>Reset the connector.</li> <li>Replace the connector.</li> </ul>
SC541-03	А	Central NC Sensor Short-circuit
		AD value: 0-13 (FB voltage: 0.000V-0.041V) is detected for specified seconds continuously.  Detection period: 100 ms, detection frequency: 10 times or more.
		NC short-circuit     Connector disconnected
		<ul> <li>Reset the NC sensor.</li> <li>Reset the connector.</li> <li>Replace the connector.</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC542-02	Α	Fusing Central Thermopile Does Not Reload
		When the fusing central thermopile does not reach a predetermined temperature for 7 seconds consecutively.
SC542-03	Α	Fusing Central Thermopile Does Not Reload
		When the fusing central thermopile does not reach the permission temperature of heat central reloading for specified seconds continuously.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Fusing Central Thermopile Does Not Reload (Low Voltage)
SC542-05	D	When the fusing central thermopile does not reach a predetermined temperature for 7 seconds consecutively.
		Fusing Central Thermopile Does Not Reload (Low Voltage)
SC542-06	D	When the fusing central thermopile does not reach the permission temperature of heat central reloading for specified seconds continuously.
		<ul> <li>Thermopile lens dirt</li> <li>Thermopile modification/float</li> <li>Outside input voltage guarantee</li> <li>After excessive temperature rise prevention unit operation</li> <li>Replace the thermopile.</li> <li>Check that the input voltage is within acceptable limits.</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC543-00	Α	Fusing Central Thermopile High Temperature Detection (Software)
		When the fusing central thermopile detects a predetermined temperature or above for specified seconds consecutively.
		Detection period 100ms, detection count: 10 times or more.
		Triac short-circuit
		-• IOB board defective RTB 64
		BCU board defective
		Replace the IOB board.
		Replace the BCU board.
		Replace the fusing unit.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC544-01 A	А	Fusing High Temperature Detection (hardware) (Central Thermopile High Temperature Error)
		In the event of an error  Triac defective (short-circuit)  Engine controller defective  Heating central thermopile defective
		Fusing control software: out of control
		<ul> <li>If the triac is defective, replace the AC power supply board.</li> <li>If necessary, replace the BCU or the heating central thermopile.</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC544-02	А	Fusing High Temperature Detection (hardware) (Non-Contact thermistor High Temperature Error)  In the event of an error
		<ul> <li>Triac defective (short-circuit)</li> <li>Engine controller defective</li> <li>Heating central thermopile defective</li> <li>Fusing control software: out of control</li> </ul>
		<ul> <li>Attach the new fusing unit, then run SP-5-810-002.</li> <li>If the triac is defective, replace the AC power supply board.</li> <li>If necessary, replace the BCU or the Fusing central NC sensor.</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC545-01	Α	Fusing Central Heater Continuously Heat
		After waiting for full power for more than specified seconds continuously, not detected for specified seconds.
		Definition of heater full power
		Continuously heating rate set point (maximum heating rate)
		Measurement start point
		After reload (after heater extinguished, after rotation complete) below the standby temperature (target temperature), measurement starts after a heater heat-up request is issued.
		Measurement stop condition
		Rotation started due to a print signal during measurement or other.
		Maximum heat-up Duty (SP interlinked value) 0% is excluded.
		Thermistor deformation/float
		Heater disconnection
		After excessive temperature rise prevention unit operates
		Replace the thermistor.
		Replace the fusing lamp.
		Replace the fusing unit.
SC545-05	D	Fusing Central Heater Continuously Heat (Low Voltage)

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC547-01	D	Zero cross Error (relay-contact soldering)
		In the event of an error
		Fusing relay defective (contact soldering)
		Fusing relay drive circuit fault
		Turn the main power supply switch OFF/ON
		<ul> <li>If the fusing relay is damaged, replace the PSU.</li> </ul>
		Check the connection between PSU and control board, and replace harness and board if necessary.

### SC547-02 RTB 59

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC547-02	D	Zero cross Error (relay contact fault)
		In the event of an error
		Fusing relay damage (contact open)
		Fusing relay drive circuit fault
		PSU fuse (24VS) blowout
		Turn the main power supply switch OFF/ON.
		If the fusing relay is damaged, replace the PSU.
		<ul> <li>Check the connection between PSU and control board, and replace harness and board if necessary.</li> </ul>
		If the PSU fuse (24VS) blows out, replace the fuse.
SC547-03	D	Zero cross Error (low-frequency error)
		In the event of an error
		Frequency instability of commercial power line
		Turn the main power supply switch OFF/ON.
		Check the power source.
		Check the connection between PSU and control board, and replace harness and board if necessary.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC551-01	А	Fusing Edge Thermopile Disconnection
	When the fusing edge thermopile detects a predetermined temperature or less for specified seconds consecutively.	
		Thermopile disconnection
		Connector disconnected
		Replace the thermopile.
		Reset the connector.
		Replace the connector.
		Replace the fusing unit.

6

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC551-02	Α	Edge NC Sensor Disconnection
		3ED - 3FF (FB voltage: 3.243V-3.300V) is detected for specified seconds continuously (NC sensor center: detection & compensation NC sensor edge: detection & compensation).
		Detection period: 100 ms, detection frequency: 10 times or more.
		NC sensor disconnection
		Connector disconnected
		Replace the NC sensor.
		Reset the connector.
		Replace the connector.
		Replace the fusing unit.
SC551-03	Α	Edge NC Sensor Short-circuit
		AD value: 0-13 (FB voltage: 0.000V-0.041V) is detected for specified seconds continuously.
		Detection period: 100 ms, detection frequency: 10 times or more.
		NC sensor short-circuit
		Connector disconnected
		Replace the NC sensor.
		Reset the connector.
		Replace the connector.
		Replace the fusing unit.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution	
SC552-02	Α	Fusing Edge Thermopile Does Not Reload	
		When the fusing edge thermopile does not reach a predetermined temperature for specified seconds consecutively.	
SC552-03	Α	Fusing Edge Thermopile Does Not Reload	
		Heating edge reload permission temperature not reached after heater 1 ON for specified seconds.	

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Fusing Edge Thermopile Does Not Reload (Low Voltage)
SC552-05	D	When the fusing edge thermopile does not reach a predetermined temperature for specified seconds consecutively.
		Fusing Edge Thermopile Does Not Reload (Low Voltage)
SC552-06	D	When the fusing edge thermopile does not reach the permission temperature of heat edge reloading for specified seconds continuously.
		Thermopile lens dirt
		Thermopile modification, float
		Outside input voltage guarantee
		After excessive temperature rise prevention unit operation
		Replace the thermopile.
		Make sure that the input voltage is within acceptable limits.
		Replace the fusing unit.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution	
SC553-00	Α	Fusing End Thermopile High Temperature Detection (software)	
		Above a predetermined temperature detected for specified seconds continuously.  Detection period: 100ms, detection count: 10 times or more.	
		Triac short-circuit  IOB defective  RTB 64  BCU defective	
		Replace the IOB.     Replace the BCU.     Replace the fusing unit.	

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC554-01	Α	Fusing End Thermopile High Temperature Detection (hardware)
		In the event of an error
		Triac defective (short-circuit)
		Engine controller defective
		Heating edge thermopile defective
		Fusing control software: out of control
		If the triac is defective, replace the AC power supply board.
		If necessary, replace the BCU or heating edge thermopile.
SC554-02	А	Fusing End NC Sensor High Temperature Detection (hardware)
		In the event of an error
		Triac defective (short-circuit)
		Engine controller defective
		Heating edge thermopile defective
		Fusing control software: out of control
		Attach the new fusing unit, then run SP-5-810-002.
		If necessary, replace the BCU or Fusing edge NC sensor.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC555-01	Α	Fusing Edge Heater Continuously Heat
SC555-05	D	Fusing Edge Heater Continuously Heat (Low Voltage)

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		After waiting for full power for more than specified seconds continuously, not detected for specified seconds.
		Definition of heater full power
		Continuously heating rate set point (maximum heating rate)
		Measurement start point
		After reload (after heater extinguished, after rotation complete) below the standby temperature (target temperature), measurement starts after a heater heat-up request is issued.
		Measurement stop condition
		Rotation started due to a print signal during measurement or other
		Maximum heat-up Duty (SP interlinked value) 0% is excluded
		Thermistor deformation/float
		Heater disconnection
		After excess temperature rise prevention unit operation
		Replace the thermistor.
		Replace the fusing lamp.
		Replace the fusing unit.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution	
SC557-00	С	Zero Cross Frequency Exceeded	
		In the event of an error	
		Frequency instability of commercial power line/Noise	
		-	

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC559-00	А	Fusing Jam Detected for 3 Times Consecutively
		Fusing jam (does not reach fusing exit sensor) is detected for 3 times consecutively.
		Detection conditions
		Displays the SC559-00 at the time of integrating the counter each time fusing jam occurs, became fusing jam counter value = 3.
		The counter value is retained without fusing jam also reset by OFF/ON the power supply.
		Control ON/OFF
		And enables ON / OFF is this SC, the default is set to OFF, then ON at the time of customer requirements.
		SP1-142-001 0: OFF (default), 1: ON (Set at the time of customer requirements)
		Counter reset condition occurs fusing jam
		<ol> <li>Normal paper exit has been done during this continuous fusing jam, fusing jam counter is reset.</li> </ol>
		2. When "1" is changed to "0" SP1-142-001, to reset the (SP9-912-001) fusing jam counter.
		<ol> <li>When after displaying SC559, SC release is made, reset the (SP9912-001) fusing jam counter.</li> </ol>
		Fusing unit paper jam
		Remove the jam.

SC No.

Level

Error Name/Error Condition/Major Cause/Solution

ľ	а	•
ш	a	-
B.	ч	ш,

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC562-02	Α	Pressurized Central Thermistor Does Not Reload
SC562-05	D	Pressurized Central Thermistor Does Not Reload (Low Voltage)
		When the pressurized central thermistor does not reach a predetermined temperature for specified seconds consecutively.
		<ul> <li>Thermistor dirt</li> <li>Thermistor deformation, float</li> <li>Outside input voltage guarantee</li> <li>After excess temperature rise prevention unit operation</li> <li>Replace the thermistor.</li> <li>Make sure that the input voltage is within acceptable limits.</li> <li>Replace the fusing unit.</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC563-00	Α	Pressurized Central Thermistor High Temperature Detection (software)
		Above a predetermined temperature detected for specified seconds continuously.
		Detection period: 100ms, detection count: 10 times or more.
		Triac short-circuit
		→ IOB defective RTB 64
		BCU defective
		Replace the IOB.
		Replace the BCU.
		Replace the fusing unit.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC564-00	A	Fusing High Temperature Detection (hardware) (Pressure Roller Thermistor Error)
		In the event of an error  Triac short-circuit  Pressure roller thermistor defective  BCU controller defective  Fusing control: out of control
		<ul> <li>Replace the BCU.</li> <li>Replace the pressure roller thermistor.</li> <li>Replace the fusing unit.</li> </ul>

SC No.

Level

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC572-02	А	Pressurized Edge Thermistor Does Not Reload
		When the temperature does not reach 40 degrees Centigrade for 100 seconds consecutively.
		Thermistor dirt
		Thermistor deformation, float
		Outside input voltage guarantee
		After excess temperature rise prevention unit operation
		Replace the thermistor.
		Make sure that the input voltage is within acceptable limits.

• Replace the fusing unit.

6

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC573-00	A	Pressurized Edge Thermistor High Temperature Detection (software)
		When the pressurized edge thermistor detects a predetermined temperature or above for specified second consecutively.
		Triac short-circuit  IOB defective RTB 64  BCU defective
		Replace the IOB.     Replace the BCU.     Replace the fusing unit.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC574-00	А	Pressurized Edge Thermistor High Temperature Detection (hardware)
		Above a predetermined temperature detected
		Triac short-circuit
		Pressure roller thermistor defective
		BCU defective
		Fusing control: out of control
		Replace the BCU.
		Replace the pressure roller thermistor.
		Replace the fusing unit.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC589-01	D	Fusing center: Low Temperature Detection
		When the fusing center thermopile detects the temperature which is 180 degrees Centigrade lower than target Temperature for 12 seconds consecutively.
		Heater harness disconnected
		Connector defective
		Replace the Heater harness.
		Replace the connector.
		Fusing edge: Low Temperature Detection
SC589-02	D	When the fusing edge thermopile detects the temperature which is 180 degrees Centigrade lower than target Temperature for 12 seconds consecutively.
		Heater harness disconnected
		Connector defective
		Replace the Heater harness.
		Replace the connector.

# SC Tables: SC6xx (Communication and Others)

## SC620-01 to SC687-00

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC620-01	D	ADF Communication Error
SC620-02	D	ADF Communication Error
		SC620-01  After ADF connection was recognized on startup, an error is detected. (disconnection detection)  SC620-02:  After ADF connection was recognized on startup, an error is detected. (Retry out due to communication error)  • ADF connection fault  • ADF defection  • IPU board defection  • Noise contamination  • ADF machine code unmatched  • Check the ADF cable connection  • Replace the ADF
		Replace the ADF which matches the machine code

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC621-00	D	Finisher Communication Error
		<ul> <li>Detected an error when connecting the communication line.</li> <li>Received a communication error notification from the UART.</li> </ul>
		<ul> <li>Finisher control board defective.</li> <li>BCU defective</li> <li>Connection fault between finisher and main machine.</li> </ul>
		<ul> <li>Turn the power off/on.</li> <li>Reconnect the Finisher interface cable</li> <li>Replace the BCU</li> <li>Replace the finisher</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC622	D	Paper Bank Communication Error
SC622-01	D	Paper Bank 1 Communication Error (D694)
SC622-11	D	Paper Bank 1 Communication Error (D787)
SC622-12	D	Paper Bank 1 Communication Error (D787)
SC622-31	D	Paper Bank 1 Communication Error (D695)
		Detected an error when connecting the communication line.
		Paper bank control board defective
		BCU defective
		Paper bank-main machine connection fault
		Turn the power off/on.
		Reconnect the optional paper tray connection cable.
		Replace the BCU.
		Replace the optional paper tray.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution		
SC623-00	D	Paper Bank Communication Error (D696)		
		When two trays PFU (D787) and side LICT (D696) or LCIT (D695) and side LCIT (D696) are installed,		
		When the upper stream unit (D787 or D695) recognizes the lower stream unit (D696), the break of the lower stream unit is not canceled within predetermined milliseconds.		
			2. After the upper stream unit (D787 or D695) recognizes the lower stream unit (D696), there is no ACK within predetermined milliseconds after transmission of a data frame to the lower stream unit, and a timeout error occurs for 3 times consecutively even if retransmission is performed.	
		<ul> <li>Turn the power off/on.</li> <li>Reset the optional paper tray connecting cable.</li> <li>Replace the BCU.</li> <li>Replace the optional paper tray.</li> </ul>		

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC632-00	В	Counter Device Error 1
		After 3 attempts to send a data frame to the optional counter device via the serial communication line, no ACK signal was received within 100 ms.
		Serial line between the optional counter device, the relay board and copier control board is disconnected or damaged.
		<ul><li>Turn the main power off/on.</li><li>Check the serial communication line.</li></ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC633-00	В	Counter Device Error 2
		After communication was established, the controller received the brake signal from the accounting device.
		Serial line between the optional counter device, the relay board and copier control board is disconnected or damaged.
		Turn the main power off/on.
		Check the serial communication line.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC634-00	В	Counter Device Error 3
		A backup RAM error was returned by the counter device.
		Counter device control board or the backup battery of counter device defective
		Replace the counter device control board.     Replace the backup battery.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC635-00	В	Counter Device Error 4
		A backup battery error was returned by the counter device.
		Counter device control board or the backup battery of counter device defective
		<ul><li>Replace the counter device control board.</li><li>Replace the backup battery.</li></ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		IC Card Error (Expanded Authentication Module Error)
		Issued when expanded authentication management is set to "ON" but either of the following occur.
		There is no expanded authentication module in the machine.
	D	The SD card or the file of the expanded authentication module is broken.
		There is no DESS module in the machine.
SC636-01		There is no DESS module in the machine (models on which the function is optional).
		There is no expanded authentication module in the machine.
		The SD card or the file of the expanded authentication module is broken.
		Set a working SD card/expanded authentication module file.
		Install the DESS module.
		• In the SSP mode set SP5-401-160 to "0".
		• In the SSP mode, set SP5-401-161 to "0".
		Replace the NVRAM.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC636-02	D	IC Card Error (Version error)
		The version of the expanded authentication module is not correct.
		Incorrect module version
		Install the correct file of the expanded authentication module.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		IC Card Error (OSM user code file error)
		The correct "usercode" file could not be found in the root folder of the SD card.
		The "usercode" file on the SD card could not be read.
	D	The "usercode" file does not exist on the SD card.
SC636-11		The "usercode" file on the SD card is an invalid file.
		Data in the "usercode" file on the SD card is invalid.
		"usercode" file was not moved when moving the application to another SD card
		Use the user code configuration tool for OSM users (Idissuer.exe) to create the "usercode" and store it in the root folder of the SD card containing the IC card module (eccm.mod).

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Tracking Information Notification Error (Tracking application error)
		Tracking information was lost.
SC637-01	D	Tracking SDK application error
		Internal notification error
		Turn the main power off/on.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Tracking Information Notification Error (Management server error)
		Tracking information was lost.
		Communication with tracking management server failed.
SC637-02	D	Network error
		tracking management server error
		Tracking SDK application error
		Turn the main power off/on.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC641-00	D	Communication Error between Engine and Controller
		Although frame is sent from controller, engine does not reply to it.
		Controller Board soft error
		BCU soft error
		BCU and controller board connection error
		Turn the main power off/on.
		Check the connection between the BCU and controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC650-01	В	Remote Service Modem Communication Error (Dialup authentication failure)
		An error related to communication (dialup connection, modem board etc.) using the RC Gate Type M was detected or an error that prevents RC Gate operation was detected at power on.
		Displayed only when an error is detected while RC Gate is operating.
		<ul> <li>SC is not issued if an error occurs during RC Gate installation (because it can be referenced using SP).</li> </ul>
		Dialup authentication failure
		Check the following SPs.
		• SP5-816-156
		• SP5-816-1 <i>57</i>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC650-05	В	Remote Service Modem Communication Error (insufficient current or connection fault)
		An error related to communication (dialup connection, modem board etc.) using the RC Gate Type M was detected or an error that prevents RC Gate operation was detected at power on.
		<ul> <li>Displayed only when an error is detected while RC Gate is operating.</li> </ul>
		<ul> <li>SC is not issued if an error occurs during RC Gate installation (because it can be referenced using SP).</li> </ul>
		Insufficient current or connection fault
		The line is not supported and nothing can be done.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC650-13	В	Remote Service Modem Communication Error (RC Gate Type Mwas installed but modem is not present (detected during operation))
		An error related to communication (dialup connection, modem board etc.) using the RC Gate Type M was detected or an error that prevents RC Gate operation was detected at power on.
		<ul> <li>Displayed only when an error is detected while RC Gate is operating.</li> </ul>
		SC is not issued if an error occurs during RC Gate installation (because this error can be referred by using SP).
		RC Gate Type M was installed but modem is not present (detected during operation).
		If a modem board is not installed, install it.
		<ul> <li>Check again if the modem driver configurations (SP5-816-160, SP5-816-165 to 171, SP5-816-165 to 171) are correct.</li> </ul>
		If the problem is not solved, replace the modem.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC650-14	В	Remote Service Modem Communication Error (RC Gate Type N was installed but modem is present or wired/wireless LAN is not working correctly)
		An error related to communication (dialup connection, modem board etc.) using the RC Gate was detected or an error that prevents RC Gate operation was detected at power on.
		Displayed only when an error is detected while RC Gate is operating.
		SC is not issued if an error occurs during RC Gate installation (because this error can be referred by using SP).
		RC Gate Type N was installed but modem is present or wired/wireless LAN is not working correctly
		<ul><li> If a modem board is attached, remove it.</li><li> Check if wired/wireless LAN works.</li></ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC651-02	С	Illegal Remote Service Dial-up (Chat program execution error)
		An unexpected error occurred when RC Gate dialed up the NRS Center.
		Software bug
		Logging only.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Remote service ID2 mismatching
		There was an authentication mismatch between ID2 for @Remote, the controller board, and NVRAM.
		Used controller board installed
		<ul> <li>Used NVRAM installed (such action is not allowed.)</li> </ul>
SC652-00	D	If this occurs during RC Gate installation:
		Check the validity of the certificate and the NVRAM, check the machine serial number, write the common certificate, and then begin installation again.
		If this occurs after RC Gate installation:
		Clear the RC Gate install status, check the validity of the certificate and the NVRAM, check the machine serial number, write the common certificate, and then begin installation again.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC653-00	D	Incorrect remote service ID2  ID2 stored in the NVRAM has either of the following problems.  • Number of characters is not 17.  • Includes a character that cannot be printed.  • All spaces  • NULL  Replace the NVRAM.  Clear the RC Gate install status, write the common certificate, and then begin installation again.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC664		ASIC on the BCU SRAM Program Expansion Error
SC664-01	D	Access Permission Error to ASIC on the BCU SRAM (write permission fails)
SC664-02	D	Write Error to ASIC on the BCU SRAM (write result error)
SC664-03	D	ASIC on the BCU Program Startup Error
		<ul> <li>Electrical Noise.</li> <li>Hardware defection.</li> <li>Replace the imaging BCU and paper transport BCU.</li> <li>Check the harness.</li> </ul>

FFC set error is detected by port lead and AD value read-out

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC665		FFC Set Detection (* See "page 1240")

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC665-01	D	BCU-IPU Connection Error
		The machine checks the FFC (Flat Flexible Cable) connections at the HORUS module on the BCU to see whether the connections are "H" or "L" to determine whether the connections are correct and secure.
		The check returns an "H" is the connection is secure, and returns an     "L" if the connection is not secure.
		This SC is issued if the check returns an "L".
		FFC harness between BCU and IPU broken
		FFC harness between BCU and IPU not connected fully
		BCU damaged
		IPU damaged
		Replace the FFC harness between BCU and IPU.
		Reconnect the FFC harness between BCU and IPU.
		Replace the BCU board.
		Replace the IPU.
SC665-04	D	IO ASIC Does Not Start
		The IO ASIC start-up signal is checked every 10 milliseconds. The SC is issued when the IO ASIC start-up signal is not detected although 3 seconds elapsed.
		BCU defective
		Replace the BCU board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC669		EEPROM Communication Error
SC669-01	D	EEPROM OPEN: ID error
SC669-02	D	EEPROM OPEN: Channel error
SC669-03	D	EEPROM OPEN: Device error
SC669-04	D	EEPROM OPEN: Communication abort error
SC669-05	D	EEPROM OPEN: Communication timeout error

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC669-06	D	EEPROM OPEN: Operation stopped error
SC669-07	D	EEPROM OPEN: Buffer full
SC669-08	D	EEPROM OPEN: No error code
SC669-09	D	EEPROM CLOSE: ID error
SC669-10	D	EEPROM CLOSE: No error code
SC669-11	D	EEPROM Data write: ID error
SC669-12	D	EEPROM Data write: Channel error
SC669-13	D	EEPROM Data write: Device error
SC669-14	D	EEPROM Data write: Communication abort error
SC669-15	D	EEPROM Data write: Communication timeout error
SC669-16	D	EEPROM Data write: Operation stopped error
SC669-17	D	EEPROM Data write: Buffer full
SC669-18	D	EEPROM Data write: No error code
SC669-19	D	EEPROM Data read: ID error
SC669-20	D	EEPROM Data read: Channel error
SC669-21	D	EEPROM Data read: Device error
SC669-22	D	EEPROM Data read: Communication abort error
SC669-23	D	EEPROM Data read: Communication timeout error
SC669-24	D	EEPROM Data read: Operation stopped error
SC669-25	D	EEPROM Data read: Buffer full
SC669-26	D	EEPROM Data read: No error code

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Received an error notification during EEPROM communication and does not resume after 3 retries.
		Electrical noise.     EEPROM damaged.
		<ul><li>Turn the power off/on.</li><li>Replace the EEPROM.</li></ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC669-36	D	EEPROM: Verify Error
		The machine receives an error notification during EEPROM (BCU) communication and does not resume after 2 retries.
		Electrical noise
		Turn the power off/on.
SC669-37	D	EEPROM: Failure Detection Error
		The machine receives an error notification during EEPROM (BCU) communication and does not resume after 2 retries.
		Electrical noise     EEPROM damaged
		Turn the power off/on. Replace the EEPROM on the BCU.

## SC670 RTB 72

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Engine start up error (* See "page 1240")
		Case 1
		<ul> <li>/ENGRDY signal was not asserted when the machine was turned on or returned from energy saver mode.</li> </ul>
0047000		<ul> <li>/IPURDY signal was not asserted when the machine was turned on or returned from energy saver mode.</li> </ul>
SC670-00	D	EC response was not received within specified time from power on.
		PC response was not received within specified time from power on.
		SC response was not received within specified time from power on.
		Writing to Rapi driver failed (the other party not found through PCI).
		Case 2
		Unexpected down status was detected after /ENGRDY assertion.
		Case 1
		Engine board does not start up.
		Case 2
		Engine board reset unexpectedly.
		Check the connection between the engine board and the controller board.
		<ul> <li>If it is always reproduced, replace the engine board. If the problem persists, consider replacing the controller board or other boards between them.</li> </ul>
		If reproducibility is low, multiple causes are to be considered, such as software, engine board, controller board, and PSU.

SC No.

Level

Error Name/Error Condition/Major Cause/Solution

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Controller start up error
		After the machine was powered on, communication between the controller and the operation panel was not established, or communication with controller was interrupted after a normal startup.
		Controller stalled
		Board installed incorrectly
SC672-11	D	Controller board defective
		<ul> <li>Operation panel connector loose, broken, or defective</li> </ul>
		Controller late
		Turn the main power off/on.
		<ul> <li>Check the connection of the controller board.</li> </ul>
		Replace the controller board.
		Check the control panel harness.

### SC672-12 RTB 55

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Controller start up error
		Communication with controller was interrupted after a normal startup.
		Controller stalled
		Board installed incorrectly
	2 D	Controller board defective
SC672-12		Operation panel connector loose, broken, or defective
		Controller late
		Turn the main power off/on.
		Check the connection of the controller board.
		Replace the controller board.
		Check the control panel harness.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Controller start up error
		The operation panel detected that the controller is down.
		Controller stalled
	3 D	Board installed incorrectly
		Controller board defective
SC672-13		Operation panel connector loose, broken, or defective
		Controller late
		Turn the main power off/on.
		Check the connection of the controller board.
		Replace the controller board.
		Check the control panel harness.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC682		PCU: ID Chip Communication Error
SC682-01	D	Invalid Device ID
SC682-06	D	Channel Error
SC682-11	D	Device Error
SC682-16	D	Communication Aborted (error during communication)
SC682-21	D	Communication Timeout
SC682-26	D	Device Stopped (logically stopped)
SC682-31	D	Requested Buffer Full

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Received an error notification during EEPROM communication and does not resume after 3 retries.
		<ul> <li>Device ID date error</li> <li>Mu sesnsor / EEPROM defective</li> <li>Electrical noise</li> <li>PCU is not set properly.</li> </ul>
		<ul><li>Turn the power off/on.</li><li>Replace the PCU.</li></ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC682-36	D	PCU: Verify Error
		Received a error notification during EEPROM communication and does not resume after 2 retries.
		Device ID date error
		Mu sesnsor / EEPROM defective
		Electrical noise
		PCU is not set properly.
		Turn the power off/on.
		Replace the PCU.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC687-00	D	PER Not Received Error
		Unable to receive the PER command from the controller.
		Communication error
		Turn the power off/on.

# SC Tables: SC7xx (Peripherals)

# SC700-01 to SC792-00

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC700		SPDF error
SC700-01	D	Base Plate Lift Motor Error (SPDF)
SC700-02	D	Original Pick-up Error (SPDF)
SC700-04	D	Paper Feed Motor Error (SPDF)
SC700-05	D	Pullout Motor Error (SPDF)
SC700-06	D	Intermediate Motor Error (SPDF)
SC700-07	D	Scanning Motor Error (SPDF)
SC700-09	D	Paper Exit Motor Error (SPDF)
		SC700-01
		Even if the base plate motor is rotated in the base plate ascent direction, the base plate paper feed correct position sensor does not detect.
		Even if the base plate motor is rotated in the base plate descent direction, the base plate home position sensor does not detect.
		SC700-02
		Even if the pick up arm motor is rotated, the pick up arm home position sensor does not detect.
		SC700-04, 05, 06, 07, 09
		When an error notification signal is detected during the motor drive period.

ദ

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		SC700-01
		Base plate paper feed correct position sensor error (output error)
		Base plate home position sensor error (output error)
		Base plate motor error (does not rotate)
		Controller error
		SC700-02
		Pick-up home position sensor error (output error)
		Pick-up motor error (does not rotate)
		Controller error
		SC700-04, 05, 06, 07, 09
		Motor defective
		Connector disconnected
		Harness broken
		Overload
		SC700-01, 02
		Check the sensor harness and motor harness connection
		Replace the sensor harness and motor harness
		Replace the sensor
		Replace the motor
		Replace the controller
		SC700-04, 05, 06, 07, 09
		Check the harness connection
		Replace the harness
		Replace the motor

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC701-02	D	Original Pick-up Motor Driver Error (SPDF)
		When the protective function of motor driver IC detects:
		Over current
		Heating
		and an error is output
		Motor driver IC detects an error
		Check the motor harness connection
		Check of paper scrap in transport path, and foreign matter contamination in drive unit
		Replace the motor harness
		Replace the motor
		Replace the ADF control board.
SC701-03	D	Paper Feed Motor Driver Error (ARDF)
		Detection of error signal from motor driver
		Encoder disconnection
		Encoder connector dropout
		Encoder defective
		Overload
		Motor deterioration
		Replace the encoder harness
		Check the harness connection
		Replace the motor

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC701-08	D	Paper Exit Motor Driver Error (ARDF)
		Detection of error signal from motor driver.
		Encoder disconnection
		Encoder connector dropout
		Encoder defective
		Overload
		Motor deterioration
		Replace the encoder harness
		Check the harness connection
		Replace the motor

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC702-01	D	Protection Device Intercept Error 1 (ARDF)
		When original source 5V power supply is ON, protection device intercept of 24V power supply system is detected.
		Any of feed motor, transport motor, reverse solenoid, paper feed solenoid, paper feed clutch and FAN motor defective, a harness short-circuit occurs, and the protection device of the 24V power supply system intercepts.
		Replace the blown fuse or circuit board     Replace the short-circuited parts
SC702-02	D	Protection Device Intercept Error 2 (ARDF)
		When original source 5V power supply is ON, protection device intercept of 24V OUT power supply system is detected.
		Solenoid defective or harness short-circuit occurs in 24VOUT power supply system.
		Replace the blown fuse or circuit board     Replace the short-circuited parts

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC702-03	D	Protection Device Intercept Error 3 (ARDF)
		When original source 5V power supply is ON, protection device intercept of 5VE power supply system is detected.
		Sensor defective or a harness short-circuit occur in 5VE power supply system.
		Replace the blown fuse or circuit board
		Replace the short-circuited parts
SC702-04	D	Protection Device Intercept Error 4 (SPDF)
		Motor defective in any of the pickup motor, completion stamp, base plate motor or FAN motor, or a harness short-circuit occurs, and the protection device of the non-interlocking power supply system intercepts.
		Motor defective or a harness short-circuit occurs in the non-interlocking power supply system.
		Replace the blown fuse or circuit board
		Replace the short-circuited parts
SC702-05	D	Protection Device Intercept Error 5 (SPDF)
		Motor defective in the paper feed motor, pullout motor, intermediate motor, scanner motor or paper exit motor, or a harness short-circuit occurs, and the protection device of the interlocking power supply system intercepts.
		Motor defective or a harness short-circuit occurs in the interlocking power supply system.
		<ul> <li>Replace the blown fuse or circuit board</li> <li>Replace the short-circuited parts</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution	
SC720		2K/3K Sheet finisher Error	

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC720-03	В	Protection Device Intercept Error 1 (2K/3K sheet finisher)
		Protection device intercept error state (fuse break) is detected.
		Short-circuit defective
		Overload defective
		Motor defective
		Solenoid defective
		Check the harness
		Replace the main board of the finisher
		Replace the motor
		Replace the solenoid

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC720		2K/3K Sheet Finisher Error
SC720-10	В	Entrance Transport Motor Error (2K/3K sheet finisher)
SC720-11	В	Horizontal Transport Motor Error (2K/3K sheet finisher)
SC720-12	В	Prestack Transport Motor Error (2K/3K sheet finisher)
SC720-13	В	Intermediate Transport Motor Error (2K/3K sheet finisher)
SC720-16	В	Paper Exit Motor Error (2K/3K sheet finisher)
		Motor driver detects an error state (DC motor control error).  (1st time is jam notification, 2nd time is SC notification)  • Motor defective  • Connector disconnected  • Overload  • Encoder defective  • Check the motor connection  • Replace the motor
		Replace the main board of the finisher

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC720		2K/3K Sheet Finisher Error
SC720-20	В	Lower Separation Claw Motor Error (2K/3K sheet finisher)
SC720-24	В	Paper Exit Open/Close Guide Plate Motor Error (2K/3K sheet finisher)
SC720-25	В	Punching Motor Error (2K/3K sheet finisher)
SC720-27	В	Punch Displacement Motor Error (2K/3K sheet finisher)
SC720-28	В	Horizontal Registration Detection Displacement Motor Error (2K/3K sheet finisher)
SC720-30	В	Jogger Motor Error (2K/3K sheet finisher)
SC720-33	В	Strike Roller Drive Motor Error (2K/3K sheet finisher)
SC720-41	В	Release Motor Error (2K/3K sheet finisher)
SC720-42	В	Edge Stapler Displacement Motor Error (2K/3K sheet finisher)
SC720-50	В	Booklet Jogger Motor Error (2K/3K sheet finisher)
SC720-51	В	Booklet Adjustment Claw Displacement Motor Error (2K/3K sheet finisher)
SC720-53	В	Booklet Reference Fence Motor Error (2K/3K sheet finisher)
SC720-65	В	Press Folding Motor Error (2K/3K sheet finisher)
SC720-71	В	Shift Motor Error (2K/3K sheet finisher)
SC720-72	В	Shift Jogger Front Motor Error (2K/3K sheet finisher)
SC720-73	В	Shift Jogger Rear Motor Error (2K/3K sheet finisher)
SC720-74	В	Shift Jogger Retreat Motor Error (2K/3K sheet finisher)
SC720-77	В	Edge Guide Motor Error (2K/3K sheet finisher)

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		<ul> <li>Motor driver detects an error (short-circuit/ overheating) (1 st time, SC).</li> </ul>
		<ul> <li>During movement to home, the home position could not be detected within a predetermined pulse (p0 pulse) (1 st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During movement from home, the home position was detected for longer than a predetermined pulse (p1 pulse) (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		The return pulse to home and pulse coming from home during normal operation are calculated and measured. The pulses which are 1.5-2 times the normal operation pulse are taken as p0 and p1.
		Motor defective
		Connector disconnected
		Overload
		Encoder defective (*SC720-25 only)
		Home position sensor defective
		Check the motor
		Check the home position sensor connection
		Replace the motor
		Replace the home position sensor
		Replace the main board of the finisher

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC720		2K/3K Sheet Finisher Error
SC720-44	В	Edge Stapler Motor Error (2K/3K sheet finisher)
SC720-60	В	Booklet Stapler Motor Error (2K/3K sheet finisher)
SC720-75	В	Reverse Roller Rocking Motor Error (2K/3K sheet finisher)
SC720-78	В	Rear End Press Motor Error (2K/3K sheet finisher)

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Motor driver detects an error (DC motor control error) (1st time is jam notification, 2nd time is SC notification) *SC720-75, 78 only.
		<ul> <li>During movement to home, the home position could not be detected within a predetermined time (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During movement from home, the home position was detected for longer than a predetermined time (t1sec) (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		The time to return to home without fail, the time coming from home, and the time for which the encoder output can be counted during normal operation, are taken as t0, t1 and t2.
		Motor defective
		Connector disconnected
		Overload
		Home position sensor defective
		Check the motor
		Check the home position sensor connection
		Replace the motor
		Replace the home position sensor
		Replace the main board of the finisher

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC720		2K/3K Sheet Finisher Error
SC720-62	В	Transfer Roller Transport Motor Error (2K/3K sheet finisher)
SC720-63	В	Folding Transport Motor Error (2K/3K sheet finisher)

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		• SC720-62
		Motor driver detects an error (DC motor control error) (1st time is jam notification, 2nd time is SC notification).
		• SC720-63
		Motor driver detects an error (short-circuit/ overheating) (1st time is jam notification, 2nd time is SC notification).
		Motor defective
		Connector disconnected
		Overload
		Encoder defective
		Check the motor
		Replace the motor
		Replace the main board of the finisher

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC720-70	В	Tray Lift Motor Error (2K/3K sheet finisher)
		Motor controller detects an error (overload) (1 st time is jam notification, 2nd time is SC notification).
		<ul> <li>During descent, the paper surface sensor still detects paper even after a predetermined time elapses (1 st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During ascent, the paper surface sensor could not detect the paper surface even after a predetermined time elapses (1 st time is jam notification, 2nd time is SC notification).</li> </ul>
		The time to return to home without fail, the time coming from home, and the time for which the encoder output can be counted during normal operation, are taken as t0, t1 and t2.
		Motor defective
		Connector disconnected
		Overload
		Home position sensor defective
		Check the motor
		Check the home position sensor connection
		Replace the motor
		Replace the home position sensor
		Replace the main board of the finisher

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC721-03	В	Protection Device Intercept Error 1 (1K sheet finisher)
		Fuse blowout is detected
		Overload (board defective, harness short-circuit, solenoid defective)
		Replace the main board of the finisher
		Replace the harness
		Replace the solenoid

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC721-10	В	Entrance Transport Motor Error (1K sheet finisher)
	Motor driver detects an error state (DC motor control error).  1 st error detection is determined as a jam and 2nd error detection is determined as an SC.	
		<ul> <li>Motor defective</li> <li>Connector disconnected</li> <li>Overload</li> <li>Encorder error</li> </ul>
		<ul> <li>Replace the entrance transport motor</li> <li>Reset the connector</li> <li>Replace the harness</li> <li>Replace the main board of the finisher</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC721-11	В	Proof Transport Motor Error (1K sheet finisher)
		Motor driver detects an error state (DC motor control error).  1 st error detection is determined as a jam and 2nd error detection is determined as an SC.
		<ul> <li>Motor defective</li> <li>Connector disconnected</li> <li>Overload</li> <li>Encorder error</li> </ul>
		<ul> <li>Replace the proof transport motor</li> <li>Reset the connector</li> <li>Replace the harness</li> <li>Replace the main board of the finisher</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC721-17	В	Paper Eject Transport Motor Error (1K sheet finisher)
		Motor driver detects an error state (DC motor control error).  1 st error detection is determined as a jam and 2nd error detection is determined as an SC.
		<ul> <li>Motor defective</li> <li>Connector disconnected</li> <li>Overload</li> <li>Encorder error</li> </ul>
		<ul> <li>Replace the paper eject transport motor</li> <li>Reset the connector</li> <li>Replace the harness</li> <li>Replace the main board of the finisher</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC721-24	В	Paper Eject Cover Open/Close Motor Error (1K sheet finisher)
		<ul> <li>During movement to home, the home position could not be detected within a predetermined pulse (p0 pulse) (1 st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During movement from home, the home position was detected for longer than a predetermined pulse (p1 pulse) (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		The return pulse to home and pulse coming from home during normal operation are calculated and measured. The pulses which are 1.5-2 times the normal operation pulse are taken as p0 and p1.
		Motor defective
		Connector disconnected
		Overload
		HP sensor defective
		Replace the paper eject cover open/close motor
		Reset the connector
		Replace the paper guide plate open/close sensor
		Replace the harness
		Replace the main board of the finisher

SC No.	Level	Error Name/Error Condition/Major Cause/Solution		
SC721-25	21-25 B	Punch Motor Error (1K sheet finisher)		
		<ul> <li>During movement to home, the home position could not be detected within a predetermined time (tO sec) (1st time is jam notification, 2nd time is SC notification).</li> </ul>		
		<ul> <li>During movement from home, the home position was detected even after a predetermined time (t1 sec) elapsed (1st time is jam notification, 2nd time is SC notification).</li> </ul>		
		<ul> <li>Output from the encoder could not be counted for a predetermined number of times within a predetermined time (t0 sec) (1 st time is jam notification, 2nd time is SC notification).</li> </ul>		
		The time to return to home without fail, the time coming from home, and the time for which the encoder output can be counted during normal operation, are taken as t0, t1 and t2.		
		Motor defective		
		Connector disconnected		
		Overload		
		HP sensor defective		
				Encorder error
		Replace the punch motor		
		Reset the connector		
		Replace the punch rotation pulse senser		
		Replace the harness		
		Replace the main board of the finisher		

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC721-27	В	Punch Movement Motor Error (1K sheet finisher)
		<ul> <li>During movement to home, the home position could not be detected within a predetermined pulse (p0 pulse) (1 st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During movement from home, the home position was detected for longer than a predetermined pulse (p1 pulse) (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		The return pulse to home and pulse coming from home during normal operation are calculated and measured. The pulses which are 1.5-2 times the normal operation pulse are taken as p0 and p1.
		Motor defective
		Connector disconnected
		Overload
		HP sensor defective
		Replace the punch movement motor
		Reset the connector
		Replace the punch movement HP sensor
		Replace the harness
		Replace the main board of the finisher

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC721-28	В	Punch Horizontal Registration Detection Error (1K sheet finisher)
		<ul> <li>During movement to home, the home position could not be detected within a predetermined pulse (p0 pulse) (1 st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During movement from home, the home position was detected for longer than a predetermined pulse (p1 pulse) (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		The return pulse to home and pulse coming from home during normal operation are calculated and measured. The pulses which are 1.5-2 times the normal operation pulse are taken as p0 and p1.
		Motor defective
		Connector disconnected
		Overload
		HP sensor defective
		Replace the paper position sensor slide motor
		Reset the connector
		Replace the paper position sensor
		Replace the harness
		Replace the main board of the finisher

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC721-30	В	Jogger Motor 1 Error (1K sheet finisher)
		During movement to home, the home position could not be detected within a predetermined pulse (p0 pulse) (1 st time is jam notification, 2nd time is SC notification).
		<ul> <li>During movement from home, the home position was detected for longer than a predetermined pulse (p1 pulse) (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		The return pulse to home and pulse coming from home during normal operation are calculated and measured. The pulses which are 1.5-2 times the normal operation pulse are taken as p0 and p1.
		Motor defective
		Connector disconnected
		Overload
		HP sensor defective
		Replace the jogger motor
		Reset the connector
		Replace the jogger HP sensor
		Replace the harness
		Replace the main board of the finisher

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC721-33	В	Positioning Roller Motor Error (1K sheet finisher)
		<ul> <li>During movement to home, the home position could not be detected within a predetermined pulse (p0 pulse) (1 st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During movement from home, the home position was detected for longer than a predetermined pulse (p1 pulse) (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		The return pulse to home and pulse coming from home during normal operation are calculated and measured. The pulses which are 1.5-2 times the normal operation pulse are taken as p0 and p1.
		Motor defective
		Connector disconnected
		Overload
		HP sensor defective
		Replace the positioning roller motor
		Reset the connector
		Replace the positioning roller HP sensor
		Replace the harness
		Replace the main board of the finisher

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC721-41	В	Release Claw Motor Error (1K sheet finisher)
		<ul> <li>During movement to home, the home position could not be detected within a predetermined pulse (p0 pulse) (1 st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During movement from home, the home position was detected even after a predetermined pulse (p1 pulse) elapsed (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		The return pulse to home and pulse coming from home during normal operation are calculated and measured. The pulses which are 1.5-2 times the normal operation pulse are taken as p0 and p1.
		Motor defective
		Connector disconnected
		Overload
		HP sensor defective
		Replace the release claw motor
		Reset the connector
		Replace release claw HP sensor
		Replace the harness
		Replace the main board of the finisher

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC721-42	В	Stapler Transfer Motor Error (1K sheet finisher)
		<ul> <li>During movement to home, the home position could not be detected within a predetermined pulse (p0 pulse) (1 st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During movement from home, the home position was detected even after a predetermined pulse (p1 pulse) elapsed (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During movement from home, retreat sensor ON could not be detected even after a predetermined pulse (p2 pulse) elapsed (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During initialization, retreat sensor ON was detected simultaneously when the home position is detected (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		The return pulse to home and pulse coming from home during normal operation are calculated and measured. The pulses which are 1.5-2 times the normal operation pulse are taken as p0, p1 and p2.
		Motor defective
		Connector disconnected
		Overload
		HP sensor defective
		Retreat sensor error
		Replace the stapler transfer motor
		<ul> <li>Reset the connector</li> <li>Replace the stapler transfer HP sensor</li> </ul>
		Replace the harness
		Replace the main board of the finisher

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC721-44	В	Stapler Error (1K sheet finisher)
		Motor driver detects an error (short-circuit and overheating) (1st time is SC).
		<ul> <li>During movement to home, the home position could not be detected even after a predetermined time (tO sec) elapsed (1 st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During movement from home, the home position was detected even after a predetermined time (t1 sec) elapsed (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During motor drive, the output from the encoder could not be counted for a predetermined number of times within a predetermined time (tO sec) (1 st time is jam notification, 2nd time is SC notification).</li> </ul>
		The time to return to home without fail, the time coming from home, and the time for which the encoder output can be counted during normal operation, are taken as t0, t1 and t2.
		Staple jam
		Motor defective
		Connector disconnected
		Overload
		HP sensor defective
		Encorder error
		Replace the stapler unit
		Reset the connector
		Replace the harness
		Replace the main board of the finisher

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC721-52	В	Folding Blade Motor Error (1K sheet finisher)
		Motor driver detects an error (short-circuit and overheating) (1 st time is SC).
		<ul> <li>During movement to home, the home position could not be detected within a predetermined pulse (p0 pulse) (1 st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During movement from home, the home position was detected for longer than a predetermined pulse (p1 pulse) (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		The return pulse to home and pulse coming from home during normal operation are calculated and measured. The pulses which are 1.5-2 times the normal operation pulse are taken as p0 and p1.
		Motor defective
		Connector disconnected
		Overload
		Center-folding blade HP sensor, or center-foliding cam HP sensor defective
		Replace the folding blade motor
		Reset the connector
		Replace the center-folding blade HP sensor
		Replace the harness
		Replace the main board of the finisher

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC721-53	В	Trailing Edge Stopper Motor Error (1K sheet finisher)
		<ul> <li>During movement to home, the home position could not be detected within a predetermined pulse (p0 pulse) (1 st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During movement from home, the home position was detected for longer than a predetermined pulse (p1 pulse) (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		The return pulse to home and pulse coming from home during normal operation are calculated and measured. The pulses which are 1.5-2 times the normal operation pulse are taken as p0 and p1.
		Motor defective
		Connector disconnected
		Overload
		HP sensor defective
		Replace the trailing edge stopper motor
		Reset the connector
		Replace the trailing edge stopper HP sensor
		Replace the harness
		Replace the main board of the finisher

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC721-58	В	Paper Bundle Transport Upper Pressure Release Motor Error (1K sheet finisher)
		<ul> <li>During movement to home, the home position could not be detected within a predetermined pulse (p0 pulse) (1 st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During movement from home, the home position was detected for longer than a predetermined pulse (p1 pulse) (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		The return pulse to home and pulse coming from home during normal operation are calculated and measured. The pulses which are 1.5-2 times the normal operation pulse are taken as p0 and p1.
		Motor defective
		Connector disconnected
		Overload
		HP sensor defective
		Replace the paper bundle transport upper pressure release motor
		Reset the connector
		Replace the stapler tray paper detection sensor
		Replace the harness
		Replace the main board of the finisher

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC721-59	В	Paper Bundle Transport Lower Pressure Release Motor Error (1K sheet finisher)
		<ul> <li>During movement to home, the home position could not be detected within a predetermined pulse (p0 pulse) (1 st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During movement from home, the home position was detected for longer than a predetermined pulse (p1 pulse) (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		The return pulse to home and pulse coming from home during normal operation are calculated and measured. The pulses which are 1.5-2 times the normal operation pulse are taken as p0 and p1.
		Motor defective
		Connector disconnected
		Overload
		HP sensor defective
		Replace the paper bundle transport lower pressure release motor
		Reset the connector
		Replace paper bundle transport lower pressure release HP sensor
		Replace the harness
		Replace the main board of the finisher

SC721-70 RTB 53

6

SC No.	Level	Error Name/Error Condition/Major Cause/Solution	
SC721-70	В	Tray Lift Motor Error (1K sheet finisher)	
		<ul> <li>Motor driver detects an error (short-circuit or overheating) (1 st time is SC).</li> </ul>	
		<ul> <li>During descent, the paper surface sensor still detects paper even after a predetermined time (tOsec) elapses (1 st time is jam notification, 2nd time is SC notification).</li> </ul>	
		<ul> <li>During ascent, the paper surface sensor could not detect the paper surface even after a predetermined time (tOsec) elapses (1 st time is jam notification, 2nd time is SC notification).</li> </ul>	
		The return pulse to home and pulse coming from home during normal operation are calculated and measured. The pulses which are 1.5-2 times the normal operation pulse are taken as p0 and p1.	
		Motor defective	
		Connector disconnected	
		Overload	
		•	Paper surface sensor defective
		Replace the tray lift motor	
		Reset the connector	
		Replace the following sensors: Shift tray paper surface sensor, Shift tray lower limit sensor (upper) or Shift tray upper limit sensor (lower)	
		Replace the harness	
		Replace the main board of the finisher	

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC721-71	В	Shift Motor 1 Error (1K sheet finisher)
		<ul> <li>During movement to home, the home position could not be detected within a predetermined pulse (p0 pulse) (1 st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During movement from home, the home position was detected for longer than a predetermined pulse (p1 pulse) (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		The return pulse to home and pulse coming from home during normal operation are calculated and measured. The pulses which are 1.5-2 times the normal operation pulse are taken as p0 and p1.
		Motor defective
		Connector disconnected
		Overload
		HP sensor defective
		Replace the shift motor
		Reset the connector
		Replace the shift HP sensor
		Replace the harness
		Replace the main board of the finisher

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC721-80	В	Folding Transport Motor Error (1K sheet finisher)
		Motor driver detects an error (short-circuit or overheating) (1 st time is SC)
		Motor defective
		Connector disconnected
		Overload
		Replace folding transport motor
		Reset the connector
		Replace the main board of the finisher

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC723-03	В	Power Supply Error (Internal Finisher: Non-Staple Bind)
		When original source 24V power supply is ON, protection device intercept of non-interlock power supply system is detected.
		A motor failure or harness short-circuit occur in the non-interlock power supply system.
		Replace the short-circuited harnesses
		Replace the protection devices
SC723-10	В	Transport Motor Error (Internal Finisher: Non-Staple Bind)
		The DCM driver error detection is started after reset, and predetermined milliseconds error signal is detected.
		This SC will be issued when the above phenomenon repeated 2 times.
		Transport Motor failure
		Harness short-circuit
		Circuit board failure
		Over current
		Abnormal temperature
		Replace the motor
		Replace the harness
		Replace the circuit board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC723-20	В	Junction Solenoid Motor Error (Internal Finisher: Non-Staple Bind)
		When the junction claw HP sensor was not turned off while predetermined seconds applied to the solenoid motor with the HP sensor turned on.
		When the junction claw HP sensor was not turned on while predetermined seconds applied to the solenoid motor with the HP sensor turned off.
		This SC will be issued when the above phenomenon repeated 2 times.
		Junction Solenoid Motor failure
		Connector disconnected
		Over load
		Junction claw HP sensor error
		Check the connection
		Replace the motor/sensor
		Replace the harness
SC723-24	В	Exit Paper Pressure Motor Error (Internal Finisher: Non-Staple Bind)
		When the exit paper pressure HP sensor was not turned off while predetermined seconds applied to the exit pressure release motor with the HP sensor turned on.
		When paper output pressure HP sensor was not turned on while predetermined seconds applied to the exit pressure release motor with the HP sensor turned off.
		This SC will be issued when the above phenomenon repeated 2 times.
		Exit Pressure Release Motor failure
		Connector disconnected
		Over load
		Exit pressure release HP sensor error
		Check the connection
		Replace the motor/sensor
		Replace the harness

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC723-44	В	Stapler Motor Error (Internal Finisher: Non-Staple Bind)
		When the stapler drive HP sensor was not turned off while predetermined seconds applied to the stapler motor with the HP sensor turned on.
		When stapler drive HP sensor was not turned on while predetermined seconds applied to the stapler motor with the HP sensor turned off.
		The STM driver error detection is started after reset, and predetermined seconds error signal is detected.
		This SC will be issued when the above phenomenon repeated 2 times.
		Stapler Motor failure
		Connector disconnected
		Stapler Motor overload
		Stapler HP sensor error
		Harness short-circuit
		Circuit board failure
		Excess current
		Abnormal temperature
		Check the connection
		Replace the motor/sensor
		Replace the harness
		Replace the circuit board

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC723-71	В	Shift Motor Error (Internal Finisher: Non-Staple Bind)
		When the shift HP sensor was not turned off while predetermined seconds applied to the shift motor with the HP sensor turned on.
		When shift HP sensor was not turned on while predetermined seconds applied to the shift motor with the HP sensor turned off.
		The STM driver error detection is started after reset, and predetermined seconds error signal is detected.
		This SC will be issued when the above phenomenon repeated 2 times.
		Shift Motor failure
		Connector disconnected
		Shift Motor overload
		Shift HP sensor error
		Harness short-circuit
		Circuit board failure
		Excess current
		Abnormal temperature
		Check the connection
		Replace the motor/sensor
		Replace the harness
		Replace the circuit board

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC724		Internal Finisher Error
SC724-24	В	Paper Output Open/Close Guide Plate Motor Error (Internal finisher)
		<ul> <li>When Paper Output Open/Close Guide Plate Motor is driven for predetermined seconds after paper exit guide plate HP sensor ON, the HP sensor does not switch OFF (1 st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>When Paper Output Open/Close Guide Plate Motor is driven for predetermined seconds after paper exit guide plate HP sensor OFF, the HP sensor does not switch ON (1st time is jam notification, 2nd time is SC notification).</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC724-25	В	Punch Motor Error (Internal finisher)
		When punch motor is driven for predetermined seconds after punch HP sensor ON, the HP sensor does not switch OFF (1 st time is jam notification, 2nd time is SC notification).
		<ul> <li>When punch motor is driven for predetermined seconds after punch HP sensor OFF, the HP sensor does not switch ON (1st time is jam notification, 2nd time is SC notification).</li> </ul>
SC724-27	В	Horizontal Registration Movement Unit Motor Error (Internal finisher)
		<ul> <li>When Horizontal Registration Movement Unit Motor is driven for predetermined seconds when horizontal registration movement HP sensor is ON, the HP sensor does not switch OFF (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>When Horizontal Registration Movement Unit Motor is driven for predetermined seconds when horizontal registration movement HP sensor is OFF, the HP sensor does not switch ON (1st time is jam notification, 2nd time is SC notification).</li> </ul>
SC724-28	В	Punch Horizontal Registration Detection Unit Motor Error (Internal finisher)
		When Punch Horizontal Registration Detection Unit Motor is driven for predetermined seconds when horizontal registration detection HP sensor is ON, the HP sensor does not switch OFF (1st time is jam notification, 2nd time is SC notification).
		<ul> <li>When Punch Horizontal Registration Detection Unit Motor is driven for predetermined seconds when horizontal registration detection HP sensor is OFF, the HP sensor does not switch ON (1st time is jam notification, 2nd time is SC notification).</li> </ul>
SC724-31	В	Jogger Fence Motor (Front) Error (Internal finisher)
		When Jogger Fence Motor (Front) is driven for predetermined seconds when front jogger HP sensor is ON, the HP sensor does not switch OFF (1st time is jam notification, 2nd time is SC notification).
		<ul> <li>When Jogger Fence Motor (Front) is driven for predetermined seconds when front jogger HP sensor is OFF, the HP sensor does not switch ON (1 st time is jam notification, 2nd time is SC notification).</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC724-32	В	Jogger Fence Motor (Rear) Error (Internal finisher)
		When Jogger Fence Motor (Rear) is driven for predetermined seconds when rear jogger HP sensor is ON, the HP sensor does not switch OFF (1st time is jam notification, 2nd time is SC notification).
		<ul> <li>When Jogger Fence Motor (Rear) is driven for predetermined seconds when rear jogger HP sensor is OFF, the HP sensor does not switch ON (1st time is jam notification, 2nd time is SC notification).</li> </ul>
SC724-33	В	Strike Roller Motor Error (Internal finisher)
		<ul> <li>During initialization/strike descent, even when the strike roller motor is driven for predetermined seconds when the strike roller HP sensor is ON, the HP sensor does not switch OFF (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During initialization, even when the strike roller motor is driven for predetermined seconds when the strike roller HP sensor is OFF, the HP sensor does not switch ON (1 st time is jam notification, 2nd time is SC notification).</li> </ul>
		When the strike roller is lifted from the press position, even when driven for predetermined seconds the HP sensor does not switch ON (1st time is jam notification, 2nd time is SC notification).
SC724-38	В	Paper Bail Motor Error (Internal finisher)
		<ul> <li>When the paper press HP sensor is ON and the paper press motor is driven for predetermined seconds, the HP sensor does not switch OFF (1st time is jam notification, 2nd time is SC notification).</li> <li>When the paper press HP sensor is OFF and the paper press motor is driven for predetermined seconds, the HP sensor does not switch ON (1st time is jam notification, 2nd time is SC notification).</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC724-42	В	Stapler Displacement Movable Motor Error (Internal finisher)
		<ul> <li>Sifter stapler displacement HP sensor ON, even when the stapler displacement motor is driven for predetermined seconds, the HP sensor does not switch OFF (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>After stapler displacement HP sensor OFF, even when the stapler displacement motor is driven for predetermined seconds, the HP sensor does not switch ON (1st time is jam notification, 2nd time is SC notification).</li> </ul>
SC724-70	В	Tray Lift Motor Error (Internal finisher)
		During ascent from paper surface sensor ON, even after predetermined seconds elapses, the paper surface sensor does not switch OFF (1st time is jam notification, 2nd time is SC notification).
		<ul> <li>During descent from paper surface sensor OFF, the paper surface sensor does not switch ON even after predetermined seconds elapses (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		<ul> <li>During descent to the packing position, the full sensor does not switch ON even if predetermined seconds elapses.</li> </ul>
		Shift Motor Error
SC724-71	В	If the shift sensor has no response after the shift motor starts moving 1.86 sec.
SC724-80	В	Shift Motor Error (Internal finisher)
		<ul> <li>When the shift roller HP sensor is ON, the HP sensor does not switch OFF even when the shift roller motor is driven for predetermined seconds (1st time is jam notification, 2nd time is SC notification)</li> <li>When the shift roller HP sensor is OFF, the HP sensor does not switch ON even when the shift roller motor is driven for predetermined seconds (1st time is jam notification, 2nd time is SC notification).</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC724-86	В	Stapler Motor Error (Internal finisher)
		HP sensor does not switch OFF even when the stapler motor is driven for predetermined seconds after the stapler HP sensor switches ON (1st time is jam notification, 2nd time is SC notification).
		<ul> <li>HP sensor does not switch ON even when the stapler motor is driven for predetermined seconds after the stapler HP sensor switches OFF (1st time is jam notification, 2nd time is SC notification).</li> </ul>
		Motor defective
		Connector disconnected
		Motor overload
		Home position sensor error
		Paper surface sensor error (*SC724-38, 70 only)
		Staple jam (*SC724-86 only)
		Reset the connector
		Replace the motor
		Replace the sensor
		Replace the harness
		Remove the staple jam (*SC724-86 only)

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC761		Protection Device Intercept Error *V (Bridge unit or Side Tray)
SC761-03	В	Protection Device Intercept Error 5V
SC761-04	В	Protection Device Intercept Error 24V
		Fuse blowout occurs due to over current during power injection (output detected for longer than 2 seconds).
		Over current of bridge unit motor     Over current due to short-circuit in PCB
		Replace the bridge unit     Replace the PCB.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC780-01	D	Bank 1 (Upper optional paper tray) Protection Device Intercept Error
		When original source of 5V power supply is ON, protection device intercept of 24V power system is detected.
		In 24V power supply system:
		Motor defective
		Solenoid defective
		Harness short- circuit
		Replace the PCB
		Replace the short-circuited part (harness, motor, solenoid)

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC781-01	D	Bank 2 (Lower optional paper tray) Protection Device Intercept Error
		When original source of 5V power supply is ON, protection device intercept of 24V power system is detected.
		In 24V power supply system:
		Motor defective
		Solenoid defective
		Harness short- circuit
		Replace the PCB
		Replace the short-circuited part (harness, motor, solenoid)

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC791-0	) D	No Bridge Unit when Finisher is Present

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		When power supply is switched on or paper is transported, finisher set is detected but bridge unit set is not detected.  (during internal finisher connection, not detected)
		Bridge unit not attached     Bridge unit defective
		<ul><li>Reset the bridge unit</li><li>Turn the power off/on</li></ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC792-00	В	No Finisher, Bridge Unit Provided
		When a machine which has a bridge unit is powered on, no finisher is detected
		Finisher connector set fault
		In a machine which has a bridge unit connected, a finisher is not fitted
		Finisher defective
		Connect finisher or disconnect bridge unit, and turn the power off/on

## SC Tables: SC8xx

## SC816 to SC899

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC816	[0x0000]	Energy save I/O subsystem error
SC816-01	D	Subsystem error
SC816-02	D	Sysarch (LPUX_GET_PORT_INFO) error
SC816-03	D	Transition to STR was denied.
SC816-04	D	Interrupt in kernel communication driver
SC816-05	D	Preparation for transition to STR failed.
SC816-07	D	Sysarch (LPUX_GET_PORT_INFO) error
SC816-08	D	Sysarch (LPUX_ENGINE_TIMERCTRL) error
SC816-09	D	Sysarch (LPUX_RETURN_FACTOR_STR) error
SC816-10 to 12	D	Sysarch (LPUX_GET_PORT_INFO) error
SC816-13	D	open() error
SC816-14	D	Memory address error
SC816-15 to 18	D	open() error
SC816-19	D	Double open() error
SC816-20	D	open() error
SC816-22	D	Parameter error
SC816-23, 24	D	read() error
SC816-25	D	write () error
SC816-26 to 28	D	write() communication retry error
SC816-29, 30	D	read() communication retry error
SC816-35	D	read() error

6

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC816-36 to 94	D	Subsystem error
		Energy save I/O subsystem detected some abnormality.
		Energy save I/O subsystem defective
		<ul> <li>Energy save I/O subsystem detected a controller board error (non-response).</li> </ul>
		Error was detected during preparation for transition to STR.
		<ul><li>Turn the main power off/on.</li><li>Replace the controller board.</li></ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
	D	Monitor error: File detection / Digital signature error
SC817-00		Bootloader cannot read any of diagnostic module, kernel, or root filesystem.
		In a bootloader SD card, the digital signature cheking for any of diagnostic module, kernel, or root filesystem is failed.
		Any of the following items does not exist or is broken: OS Flash ROM, Diagnostic module in SD card, Kernel, Root filesystem
		Any of the following items is revised fraudulently: Diagnostic module in SD card, Kernel, Root filesystem
		ROM update for controller system
		Use another booting SD card having a valid digital signature

se/Solution
endless loop of the ess to stop.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution	
SC819-00	D	Kernel halt error	
		[xxxx]: Detailed error code	
		Due to a control error, a RAM overflow occurred during system processing. One of thefollowing messages was displayed on the operation panel.	
	[0x5032]	HAIC-P2 error	
		HAIC-P2 decompression error (An error occurred in the ASIC compression/decompression module.)	
		Turn the main power off/on.	
		Replace the HDD.	
		Repace the memory	
		Replace the controller board.	
		Fix the software	
	[0x6261]	HDD defective	
		6261 6420 6469 7200 00 -> "bad dir"	
		Replace the HDD.	

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
	[0x696e]	gwinit processing end
		If the SCS process is ended for some reason
		If an unexpected error occurs at SCS processing end, gwint processing also halts (this result is judged a kernel stop error, by gwinit specification) "0x69742064" -> "init died"
		Turn the main power off/on.
	[0x766d]	VM full error
		Occurs when too much RAM is used during system processing
		"vm_pageout: VM is full"
		Turn the main power off/on.
	Console	Other error (characters on operation panel)
	string	System detected internal mismatch error
		Software defective     Insufficient memory     Hardware driver defective (RAM, FLASH memory)
		<ul><li>Turn the main power off/on.</li><li>Replace the controller board.</li></ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC820-00	6	Self-diagnostics error: CPU
	D	[xxxx]: Detailed error code

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
[0001] to [06FF] [0801] to [4005]		CPU error
		During the self-diagnosis, the controller CPU detects an error. There are 47 types of error code (0001 to 4005) depending on the cause of the error. The CPU detects an error and displays the specific error code with the program address where the error occurs.
		System firmware problem
		Defective controller
		1. Turn the main power switch off and on.
		2. Reinstall the controller system firmware.
		3. Replace the controller.
		When the problem cannot be fixed with the above procedure, the following information displayed on the screen needs to be reported to the technical support center.
		- SC code
		- Detailed error code
		- Program address
[0701] to	[070A]	CPU/Memory Error
		System firmware problem
		Defective RAM-DIMM
		Defective controller
		Reinstall the controller system software.
		Replace the RAM-DIMM.
		Replace the controller.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC821-00	D	Self-diagnostics error: ASIC
		[xxxx]: Detailed error code

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
	[OBOO]	ASIC register check error
		The write-&-verify check has occurred in the ASIC.
		Defective ASIC device
		Replace the controller board.
	[0D05]	Comparison error of CPU and ASIC timer
		The CPU checks if the ASIC timer works correctly compared with the CPU timer. If the ASIC timer does not function in the specified range, this SC code is displayed.
		Defective ASIC timer device     Defective CPU device
		Replace the controller board.
	[50A2]	Video bridge device (ASIC) register error
		The CPU detects the video bridge device, but detects error data from the video bridgedevice.
		Defective I/F between the video bridge device and the controller
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC822-00	В	Self-diagnostic error: HDD
		[xxxx]: Detailed error code

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
	[3003]	HDD timeout
		Check performed only when HDD is installed:
		HDD device busy for over 31 sec.
		After a diagnostic command is set for the HDD, but the device remains busy for over 6sec
		HDD defective
		HDD harness disconnected, defective
		Controller board defective
		Replace the HDD.
		Replace the HDD connector.
		Replace the controller board.
	[3004]	Diagnostic command error
		No response to the self-diagnostic command from the ASIC to the HDD.
		HDD defective
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC823-00	В	Self-diagnostics error: NIC [XXXX]: Detailed error code
	[6101]	MAC address check sum error
		The result of the MAC address check sum does not match the check sum stored in ROM.
		<ul><li>Defective SEEP ROM</li><li>Defective I2C bus (connection)</li></ul>
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
	[6104]	PHY IC error
		The PHY IC on the controller cannot be correctly recognized.
		Defective PHY chip     Defective ASIC MII I/F
		Replace the controller board.
	[6105]	PHY IC loop-back error
		An error occurred during the loop-back test for the PHY IC on the controller.
		PHY chip
		Defective MAC of ASIC (SIMAC/COMIC/CELLO)
		Defective I/F with the PHY board
		Defective solder on the PHY board
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC824-00	D	Self-diagnostics error: NVRAM (resident) [XXXX]: Detailed error code
	[1401]	NVRAM verify error
		NVRAM device is missing or NVRAM device is damaged.
		The NVRAM device is missing.
		The NVRAM device is damaged.
		NVRAM backup battery exhausted
		NVRAM socket damaged
		Replace the NVRAM device.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC827-00	D	Self-diagnostic error: Standard SDRAM DIMM
		[XXXX]: Detailed error code

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
	[0201]	Verification error
		Error detected during a write/verify check for the standard RAM (SDRAM DIMM).
		Loose connection
		Defective SDRAM DIMM
		Defective controller
		Replace the controller board or RAM DIMM.
	[0202]	Resident memory error
		The SPD values in all RAM DIMM are incorrect or unreadable.
		Defective RAM DIMM
		Defective SPD ROM on RAM DIMM
		Defective 12C bus
		Replace the RAM DIMM

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC828-00	D	Self-diagnostic error: ROM [xxxx]: Detailed error code
	[0101]	Check sum error 1
		The boot monitor and OS program stored in the ROM DIMM is checked.  If the check sum of the program is incorrect, this SC code is displayed.
		Defective FLASH ROM device     Defective CPU device
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC835-00	В	Self-diagnostic error: Centronic device
		[xxxx]: Detailed error code

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
	[1102]	Verify error
		The loopback connector is connected but check results is an error.
		IEEE1284 connector error
		Centronic loopback connector defective
		Replace the controller board.
	[110C]	DMA verify error
		The loopback connector is connected but check results is an error.
		ASIC device error
		IEEE1284 connector error
		Centronic loopback connector is defective
		Replace the controller board.
	[1120]	Loopback connector undetected
		Centronic loopback connector is not connected for detailed self-diagnostic test.
		Centronic loopback connector not connected correctly
		Centronic loopback connector is defective
		ASIC device is defective
		Connect the centronic loopback connector
		Replace the centronic loopback connector
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC838-00	D	Self-diagnostic Error: Clock Generator
		[xxxx]: Detailed error code
	[2701]	Verify error
		A verify error occurred when setting data was read from the clock generator via the I2C bus.
		Defective clock generator
		Defective I2C bus
		Defective I2C port on the CPU
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC839-00	D	Self-diagnostic Error: Serial Flash [xxxx]: Detailed error code
	[9001]	Serial Flash access error
		USB NAND Flash ROM cannot be read.
		Defective controller board
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC840-00	D	EEPROM access error
		During the I/O processing, a reading error occurred. The 3rd reading failure causes this SC code.
		During the I/O processing, a writing error occurred.
		Defective EEPROM
		-

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC841-00	D	EEPROM read data error
		Mirrored data of the EEPROM is different from the original data in EEPROM.
		Data in the EEPROM is overwritten for some reason.
		-

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
	1 B	Insufficient Nand-Flash blocks (threshold exceeded)
SC842-01		At startup, or when machine returned from low power mode, the Nand-Flash status was read and judged that the number of unusable blocks had exceeded threshold, and then SCS generated the SC code.
		Number of unusable blocks exceeded threshold for Nand-Flash
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC842-02	В	Number of Nand-Flash block deletions exceeded
		At startup, or when the machined returned from low power mode, the Nand-Flash was read and judged that the number of deleted blocks had exceeded threshold, and then SCS generated this SC code.
		Number of blocks deleted exceeded threshold for Nand-Flash
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC853-00	В	Bluetooth device connection error
		The Bluetooth hardware (USB type) was connected after the machine was turned on.
		The Bluetooth hardware (USB type) was connected after the machine was turned on.
		Always connect the Bluetooth device (USB type) before the machine is turned on.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC854-00	В	Bluetooth device disconnected
		The Bluetooth hardware (USB type) was disconnected after the machine was turned on.
		The Bluetooth hardware (USB type) was disconnected after the machine was turned on.
		Never remove Bluetooth (USB type) after machine starts

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC855-01	01 B	Wireless LAN board error (driver attachment failure)
		Wireless LAN board error (wireless LAN card: 802.11 is covered)
		Defective wireless LAN board
		Loose connection
		Turn the main power off/on.
		Replace wireless LAN board

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
	В	Wireless LAN board error (driver initialization failure)
		Wireless LAN board error (wireless LAN card: 802.11 is covered)
SC855-02		Defective wireless LAN board
		Loose connection
		Turn the main power off/on.
		Replace wireless LAN board

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		USB I/F Error
		The USB interface is unusable because of a driver error.
SC857-00	В	USB driver error (There are three causes of USB error: RX error/CRC error/STALL. SC is issued only in the case of STALL.)
		Check USB connection.     Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
	Α	Data encryption conversion error (Key Setting Error)
SC858-00		A serious error occurred during an attempt to update the encryption key.
		USB Flash, other data, corrupted
		Communication error caused by electrostatic noise
		Controller board defective
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
	A	Data encryption conversion error (HDD Key Setting Error)
		A serious error occurred during an attempt to update the encryption key.
SC858-01		USB Flash, other data, corrupted
		Communication error caused by electrostatic noise
		Controller board defective
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC858-02	A	Data encryption conversion error (NVRAM Read/Write Error)
		A serious error occurred after data conversion during an attempt to update the encryption key.
		NVRAM defective
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC858-30	A	Data encryption conversion error (NVRAM Before Replace Error)
		A serious error occurred after data conversion during an attempt to update the encryption key.
		Software error such as conversion parameters being invalid.
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC858-31	A	Data encryption conversion error (Other Error)
		A serious error occurred after data conversion during an attempt to update the encryption key.
		Controller board defective
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
	В	Data encryption conversion HDD conversion error
		When the data encryption key was updated, HDD data was converted, but not correctly. Image displayed at conversion only (this SC is not displayed), but SC is displayed after machine is cycled off/on.
0005000		HDD conversion was set with the data encryption key update function, but the HDD was removed.
SC859-00		Machine lost power during data encryption key update
		Electrostatic noise, or an HDD error occurred, during data encryption key update, and data was not encrypted.
		Check HDD connection.
		Format the HDD.
		If there is a problem with the HDD, it has to be replaced.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Data encryption conversion HDD conversion error (HDD check error)
		When the data encryption key was updated, HDD data was converted, but not correctly. Image displayed at conversion only (this SC is not displayed), but SC is displayed after machine is cycled off/on.
0005001		HDD conversion was set with the data encryption key update function, but the HDD was removed.
SC859-01	В	Machine lost power during data encryption key update
		Electrostatic noise, or an HDD error occurred, during data encryption key update, and data was not encrypted.
		Check HDD connection.
		Format the HDD.
		If there is a problem with the HDD, it has to be replaced.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Data encryption conversion HDD conversion error (Power failure during conversion)
		When the data encryption key was updated, HDD data was converted, but not correctly. Image displayed at conversion only (this SC is not displayed), but SC is displayed after machine is cycled off/on.
SC859-02	В	Details:  NVRAM/HDD conversion is incomplete.
		Power failure occurred during encryption key update.
		None
		The display after restart instructs the user to format the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Data encryption conversion HDD conversion error (Data read/write command error)
		When the data encryption key was updated, HDD data was converted, but not correctly. Image displayed at conversion only (this SC is not displayed), but SC is displayed after machine is cycled off/on.  Details:
SC859-10	В	Abnormal DMAC return value has been received two or more times (DMAC timeout, serial communication error etc.)
		HDD was not successfully converted during encryption key update due to HDD errors or cable noises.
		Check HDD connection.     Format the HDD.
		If there is a problem with the HDD, it has to be replaced.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC860-00	В	HDD startup error at main power on (HDD error)

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		The HDD is connected but the driver detected the following errors.
		<ul> <li>SS_NOT_READY:/* (-2)HDD does not become READY*/</li> </ul>
		<ul> <li>SS_BAD_LABEL:/* (-4)Wrong partition type*/</li> </ul>
		<ul> <li>SS_READ_ERROR:/* (-5)Error occurred while reading or checking the label*/</li> </ul>
		<ul> <li>SS_WRITE_ERROR:/* (-6)Error occurred while writing or checking the label*/</li> </ul>
		<ul> <li>SS_FS_ERROR:/* (-7)Failed to repair the filesystem*/</li> </ul>
		SS_MOUNT_ERROR:/* (-8)Failed to mount the filesystem*/
		<ul> <li>SS_COMMAND_ERROR:/* (-9)Drive not responding to command*/</li> </ul>
		<ul> <li>SS_KERNEL_ERROR:/* (-10)Internal kernel error*/</li> </ul>
		<ul> <li>SS_SIZE_ERROR:/* (-11)Drive size too small*/</li> </ul>
		<ul> <li>SS_NO_PARTITION:/* (-12)The specified partition does not exist*/</li> </ul>
		<ul> <li>SS_NO_FILE:/* (-13)Device file does not exist*/</li> </ul>
		Attempted to acquire HDD status through the driver but there has been no response for 30 seconds or more.
		Unformatted HDD
		Label data corrupted
		HDD defective
		Format the HDD through SP mode.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-01	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation.
		(An error occurred in an area that does not belong to a partition, such as the disklabel area.)
		Guide for when to replace the HDD
		1. When SC863 has occurred ten times or more
		The interval is short.
		<ul> <li>Repeatedly occurs in the same situation (At power-on, etc.).</li> </ul>
		Startup takes a long time when the main power is turned on.
		It takes a long time after main power on for the operation panel to become ready.
		HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863	D	HDD data read failure
-02 to 23		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation.
		(An error occurred in partition "a" (SC863-02) to partition "v" (SC863-23)).
		Guide for when to replace the HDD
		1. When SC863 has occurred ten times or more
		The interval is short.
		<ul> <li>Repeatedly occurs in the same situation (At power-on, etc.).</li> </ul>
		Startup takes a long time when the main power is turned on.
		It takes a long time after main power on for the operation panel to become ready.
		HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-00	D	HD data CRC error
		During HD operation, the HD cannot respond to a CRC error query. Data transfer did not execute normally while data was being written to the HD.
		HD defective
		-

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-01	D	HDD data CRC error
		During HDD operation, the HDD cannot respond to a CRC error query.  Data transfer did not execute normally while data was being written to the HDD.
		Bad sectors were generated during operation.  (An error occurred in an area that does not belong to a partition, such as the disklabel area.)
		Format the HDD.     Replace the HDD.

	SC No.	Level	Error Name/Error Condition/Major Cause/Solution
	SC864	D	HDD data CRC error
	-02 to 23		During HDD operation, the HDD cannot respond to a CRC error query.  Data transfer did not execute normally while data was being written to the HDD.
			Bad sectors were generated during operation.  (An error occurred in partition "a" (SC864-02) to partition "v" (SC864-23)).
			<ul><li>Format the HDD.</li><li>Replace the HDD.</li></ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-00	D	HD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error).
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		HDD access error
		During HDD operation, the HDD returned an error.
SC865-01	D	The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error).
		(An error occurred in an area that does not belong to a partition, such as the disklabel area.)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865	D	HDD access error
-02 to 23		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error).
		(An error occurred in partition "a" (SC865-02) to partition "v" (SC865-23)).
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865 -50 to 73	D	HDD time-out error
		The machine does not detect a reply from the HDD during the HDD operation.
		The HDD does not respond to the read/ write command from the machine.
		Check the harness connections between the controller board and HDD.
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC867-00	D	SD card removed
		The SD card was removed while the machine is on.
		An application SD card has been removed from the slot (mount point of /mnt/sd0).
		Turn the main power off/on.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC867-01	D	SD card removed
		The SD card was removed while the machine is on.
		An application SD card has been removed from the slot (mount point of /mnt/sd1).
		Turn the main power off/on.

6

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		SD card access error
		The SD controller returned an error during operation.
		(An error occurred at the mount point of /mnt/sd0)
	D	SD card defective
SC868-00		SD controller defective
		Reformat the SD card (using the "SD Formatter" made by Panasonic).*
		Check the SD card insertion status.
		Replace the SD card.
		Replace the controller board.

<sup>\*</sup> Do not format an SD card supplied with the main machine or sold as an option. You may only format SD cards used for Firmware Update by a Customer Engineer.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		SD card access error
		The SD controller returned an error during operation.
		(An error occurred at the mount point of /mnt/sd1)
		SD card defective
	D	SD controller defective
		SD card that starts an application
		Turn the main power off and check the SD card insertion status.
		<ul> <li>If no problem is found, insert the SD card and turn the main power on.</li> </ul>
SC868-01		If an error occurs, replace the SD card.
		SD card for users
		<ul> <li>In case of a file system error, reformat the SD card (using the "SD Formatter" made by Panasonic).*</li> </ul>
		<ul> <li>In case of a device access error, turn the main power off and check the SD card insertion status.</li> </ul>
		<ul> <li>If no problem is found, insert the SD card and turn the main power on.</li> </ul>
		If an error occurs, use another SD card.
		If the error persists even after replacing the SD card, replace the controller board.

<sup>\*</sup> Do not format an SD card supplied with the main machine or sold as an option. You may only format SD cards used for Firmware Update by a Customer Engineer.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		SD card access error
		The SD controller returned an error during operation.
		(An error occurred at the mount point of /mnt/sd1)
		SD card defective
		SD controller defective
		SD card that starts an application
		Turn the main power off and check the SD card insertion status.
	D	<ul> <li>If no problem is found, insert the SD card and turn the main power on.</li> </ul>
SC868-02		If an error occurs, replace the SD card.
		SD card for users
		<ul> <li>In case of a file system error, reformat the SD card (using the "SD Formatter" made by Panasonic).*</li> </ul>
		<ul> <li>In case of a device access error, turn the main power off and check the SD card insertion status.</li> </ul>
		<ul> <li>If no problem is found, insert the SD card and turn the main power on.</li> </ul>
		If an error occurs, use another SD card.
		If the error persists even after replacing the SD card, replace the controller board.

\* Do not format an SD card supplied with the main machine or sold as an option. You may only format SD cards used for Firmware Update by a Customer Engineer.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC870-00	В	Address Book data error (Anytime: Address Book Error.)
SC870-01	В	Address Book data error (On startup: Media required for storing the Address Book is missing.)
SC870-02	В	Address Book data error (On startup: encryption is configured but the module required for encryption (DESS) is missing.)
SC870-03	В	Address Book data error (Initialization: Failed to generate a file to store internal Address Book.)

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC870-04	В	Address Book data error (Initialization: Failed to generate a file to store delivery sender.)
SC870-05	В	Address Book data error (Initialization: Failed to generate a file to store delivery destination.)
SC870-06	В	Address Book data error (Initialization: Failed to generate a file to store information required for LDAP search.)
SC870-07	В	Address Book data error (Initialization: Failed to initialize entries required for machine operation.)
SC870-08	В	Address Book data error (Machine configuration: HDD is present but the space for storing the Address Book is unusable.)
SC870-09	В	Address Book data error (Machine configuration: Inconsistency in the NVRAM area used for storing settings required for Address Book configuration.)
SC870-10	В	Address Book data error (Machine configuration: Cannot make a directory for storing the Address Book in the SD/USB FlashROM.)
SC870-11	В	Address Book data error(On startup: Inconsistency in Address Book entry number.)
SC870-20	В	Address Book data error (File I/O: Failed to initialize file.)
SC870-21	В	Address Book data error (File I/O: Failed to generate file.)
SC870-22	В	Address Book data error (File I/O: Failed to open file.)
SC870-23	В	Address Book data error (File I/O: Failed to write to file.)
SC870-24	В	Address Book data error (File I/O: Failed to read file.)
SC870-25	В	Address Book data error (File I/O: Failed to check file size.)
SC870-26	В	Address Book data error (File I/O: Failed to delete data.)
SC870-27	В	Address Book data error (File I/O: Failed to add data.)
SC870-30	В	Address Book data error (Search: Failed to obtain data from cache when searching in the machine Address Book. delivery destination/sender.)
SC870-31	В	Address Book data error (Search:Failed to obtain data from cache during LDAP search.)

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC870-32	В	Address Book data error (Search:Failed to obtain data from cache while searching the WS-Scanner Address Book.)
SC870-41	В	Address Book data error (Cache: failed to obtain data from cache.)
SC870-50	В	Address Book data error (On startup: Detected abnormality of the Address Book encryption status.)
SC870-51	В	Address Book data error (Encryption settings: Failed to create directory required for conversion between plaintext and encrypted text.)
SC870-52	В	Address Book data error (Encryption settings: Failed to convert from plaintext to encrypted text.)
SC870-53	В	Address Book data error (Encryption settings: Failed to convert from encrypted text to plaintext.)
SC870-54	В	Address Book data error (Encryption settings: Detected data inconsistency when reading the encrypted Address Book.)
SC870-55	В	Address Book data error (Encryption settings: Failed to delete file when changing encryption setting.)
SC870-56	В	Address Book data error (Encryption settings: Failed to erase the file that records the encryption key during an attempt to change the encryption setting.)
SC870-57	В	Address Book data error (Encryption settings: Failed to move a file during an attempt to change the encryption setting.)
SC870-58	В	Address Book data error (Encryption settings: Failed to delete a directory during an attempt to change the encryption setting.)
SC870-59	В	Address Book data error (Encryption settings: Detected a resource shortage during an attempt to change the encryption setting.)
SC870-60	В	Address Book data error (Unable to obtain the on/off setting for administrator authentication (06A and later).)

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		When an error related to the Address Book is detected during startup or operation.
		Software bug
		<ul> <li>Inconsistency of Address Book source location (machine/delivery server/LDAP server)</li> </ul>
		<ul> <li>Inconsistency of Address Book encryption setting or encryption key (NVRAM or HDD was replaced individually without formatting the Address Book)</li> </ul>
		<ul> <li>Address Book storage device (SD/HDD) was temporarily removed or hardware configuration does not match the application configuration.</li> </ul>
		Address Book data corruption was detected.
		Check the HDD connection.
		<ul> <li>Initialize all UCS settings and address/authentication information (SP5-846-046).</li> </ul>
		<ul> <li>Initialize the Address Book partition (SP5-832-006).</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		HDD mail reception error
		An error was detected on the HDD immediately after the machine was turned on.
		HDD defective
		Power was turned of while the machine used the HDD.
SC872-00	В	• Format the HDD (SP5-832-007).
		Replace the HDD.
		When you do the above, the following information will be initialized.
		Partly received partial mail messages.
		<ul> <li>Already-read statuses of POP3-received messages (All messages on the mail server are handled as new messages).</li> </ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
	В	HDD mail reception error
		An error was detected on the HDD immediately after the machine was turned on.
		HDD defective
		Power was turned of while the machine used the HDD.
SC873-00		• Format the HDD (SP5-832-007).
		Replace the HDD.
		When you do the above, the following information will be initialized.
		Default sender name/password (SMB/FTP/NCP)
		Administrator mail address
		Scanner delivery history

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC875-01	D	Delete all error (HDD erasure) (hddchack –i error)
SC875-02	D	Delete all error (HDD erasure) (Data deletion failure)
		An error was detected before HDD/data erasure starts. (Failed to erase data/failed to logically format HDD)
		<ul><li> HDD logical formatting failed.</li><li> The modules failed to erase data.</li></ul>
		Turn the main power off/on.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Log Data Error
		An error was detected in the handling of the log data at power on or during machine operation.
		<ul> <li>Damaged log data file.</li> <li>Log encryption is enabled but encryption module is not installed.</li> </ul>
		<ul> <li>Inconsistency of encryption key between NV-RAM and HDD.</li> <li>Software bug.</li> </ul>
		Try the SC876-01 to -99 solutions listed below. If it is not solved, do the following steps (for when only an HDD is replaced):
SC876-00	D	Disconnect the HDD and turn on the main power.
		2. Execute SP5-801-019.
		3. Turn off the main power.
		4. Connect the HDD and turn on the main power.
		5. Execute SP5-832-004.
		6. Turn off the main power.
		* The following step is to configure the logging/encryption setting again.
		7. Turn of the main power.
		8. Set SP9-730-002 through -004 to 1.
		9. Turn off/on the main power.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC876-01	D	Log Data Error 1
		An error was detected in the handling of the log data at power on or during machine operation.
		Damaged log data file
		Initialize the HDD (SP5-832-004).

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC876-02	D	Log Data Error 2
		An error was detected in the handling of the log data at power on or during machine operation.
		Log encryption is enabled but encryption module is not installed.
		<ul><li>Replace or set again the encryption module.</li><li>Disable the log encryption setting.</li></ul>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Log Data Error 3
		An error was detected in the handling of the log data at power on or during machine operation.
SC876-03	D	Inconsistency of encryption key between NV-RAM and HDD.
		Disable the log encryption setting.
		Initialize LCS memory (SP5801-019).
		Initialize the HDD (SP5-832-004).

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Log Data Error 4
		An error was detected in the handling of the log data at power on or during machine operation.
SC876-04 D	D	<ul> <li>Log encryption key is disabled but the log data file is encrypted.</li> <li>(NVRAM data corruption)</li> </ul>
		<ul> <li>Log encryption key is enabled but the log data file is not encrypted.</li> <li>(NVRAM data corruption)</li> </ul>
		Initialize the HDD (SP5-832-004).

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Log Data Error 5
		An error was detected in the handling of the log data at power on or during machine operation.
		Only the NV-RAM has been replaced with one previously used in another machine.
SC876-05	D	Only the HDD has been replaced with one previously used in another machine.
		Attach the original NV-RAM.
		Attach the original HDD.
		With the configuration that caused the SC, initialize the HDD (SP5-832-004).

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC876-99		Log Data Error 99
		An error was detected in the handling of the log data at power on or during machine operation.
		Other causes
		-

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC878-00	D	TPM authentication error
		TPM electronic recognition failure
		<ul> <li>Update of system module attempted without correct update path</li> <li>USB flash memory not operating correctly</li> </ul>
		Replace the controller board.

### Trusted Platform Module

• In computing, Trusted Platform Module (TPM) is both the name of a published specification detailing a secure crypto processor that can store cryptographic keys that protect information, as well as the general name of implementations of that specification, often called the "TPM chip" or "TPM Security Device" (as designated in certain Dell BIOS settings).

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC878-01	D	USB flash error
		There is a problem in the file system of the USB flash memory.
		USB Flash system files corrupted
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC878-02	D	TPM error
		An error occurred in either TPM or the TPM driver
		TPM not operating correctly
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC878-03	D	TCSD dffof
		An error occurred in the TPM software stack.
		TPM, TPM software cannot start
		A file required by TPM is missing
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC880-00	D	MLB error
		Reply to MLB access was not returned within a specified time.
		MLB defective
		Replace the MLB.
		Remove the MLB.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
	D	Software performance error (signal reception end)
		Unknown software error occurred.
		Occurs when an internal program behaves abnormally.
SC899-00		In case of a hardware defect
		Replace the hardware.
		In case of a software error
		Turn the main power off/on.
		Try updating the firmware.

6

# SC Tables: SC9xx (Others)

## SC900-00 to SC995-04

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
	D	Electrical total counter error  The total counter contains data that is not a number.
SC900-00		NVRAM incorrect type     NVRAM defective or corrupted     Unexpected error from external source     When PRT received signals at SRM, the requested count did not
		complete.  Replace the NVRAM.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC920-00	В	Printer application error (No response within determined time in Printing)
SC920-01	В	Printer application error (Timeout during Printing)
SC920-02	В	Printer Error 1 (WORK memory not acquired)
SC920-03	В	Printer application error (Filter process not started)
SC920-04	В	Printer Error 1 (Filter processing ended abnormally)
		When an error is detected in the application, which makes continued operation impossible.
		Software bug     Unexpected hardware configuration (such as insufficient memory)
		Turn the main power off/on.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC921-00	В	Printer application error (Resident font not found)
		Resident font was not found at printer startup.
		Preinstalled font files not found.
		Turn the main power off/on.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC925-00	В	NetFile function error
SC925-01	В	NetFile function error
		The NetFile file management on the HDD cannot be used, or a NetFile management file is corrupted and operation cannot continue. The HDDs are defective and they cannot be debugged or partitioned, so the Scan Router functions (delivery of received faxes, document capture, etc.), Web services, and other network functions cannot be used.  HDD status codes are displayed below the SC code:
		HDD defective     Power loss while data was writing to HDD
		Software bug
		See the table and the procedure below.

## Here is a list of HDD status codes:

Display	Meaning
(-1)	HDD not connected
(-2)	HDD not ready
(-3)	No label
(-4)	Partition type incorrect
(-5)	Error returned during label read or check
(-6)	Error returned during label read or check
(-7)	"filesystem" repair failed

(-8)	"filesystem" mount failed
(-9)	Drive does not answer command
(-10)	Internal kernel error
(-11)	Size of drive is too small
(-12)	Specified partition does not exist
(-13)	Device file does not exist

### Recovery from SC 925

#### Procedure 1

1. If the machine shows SC codes for HDD errors (SC860 to SC865) with SC 925, do the recovery procedures for SC860 to SC865.

#### Procedure 2

- 1. If the machine does not show one of the five HDD errors (SC860 to SC865), turn the machine power off and on.
- 2. If this is not the solution for the problem, then initialize the NetFile partition on the HDD with SP5-832-11 (HDD Formatting Ridoc I/F).

NetFiles: These are jobs printed from the document server using a PC and DeskTopBinder. Before you initialize the NetFile partition on the HDD, tell the customer:

- · Received faxes on the delivery server will be erased
- All captured documents will be erased
- Desk Top Binder/Print Job Manager/Desk Top Editor job history will be erased
- Documents on the document server, and scanned documents, will not be erased.
- The first time that the network gets access to the machine, the management information must be configured again (this will use a lot of time).
- 3. Before you initialize the Netfile partition with SP5-832-11, do these steps:
- 4. In the User Tools mode, do Document Management> Batch Delete Transfer Documents.
- 5. Do SP5-832-11, and turn the machine off and on.

#### Procedure 3

- 1. If "Procedure 2" is not the solution for the problem, do SP5-832-1 (HDD Formatting All)
- 1. Cycle the machine off/on.



 SP5-832-001 erases all document and address book data on the hard disks. Consult with the customer before you do this SP code.

## Procedure 4

1. If "Procedure 3" does not solve the problem, replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC994-00	С	Application Item Error
		The numbers of executed application items on the operation panel reach the maximum limit for the operation panel structure.
		Too many executed application items
		Logging only

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC995-01	D	CPM setting error 1
		Comparison of machine serial number (11 digits) and machine identification code.  Details:
		Machine serial number cannot be identified because of BICU replacement or malfunctioning.
		Machine serial number cannot be identified because of NV-RAM replacement
		Machine serial number (11 digits) or machine identification code does not match.
		<ul> <li>Enter the machine serial number using SP5-811, and then turn the power on/off.</li> </ul>
		Attach the NV-RAM that was installed previously.

SC 990, 991, 997 RTB 56


SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC995-02	D	CPM setting error 2
		Comparison of machine serial number (11 digits) and machine identification code.
		Details:
		Machine serial number cannot be identified because of NV-RAM replacement or malfunctioning.
		Machine serial number (11 digits) or machine identification code does not match.
		Attach the NV-RAM that was installed previously.
		Download data on the NV-RAM using SP5-825.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC995-03	D	CPM setting error 3
		Comparison of machine serial number (11 digits) and machine identification code.
		Details:
		Unable to recognize machine identification code because the controller was replaced incorrectly or is malfunctioning.
		Machine serial number (11 digits) or machine identification code does not match.
		Replace it with a specified controller.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC995-04	D	CPM setting error 4
		Comparison of machine serial number (11 digits) and machine identification code.
		Machine serial number (11 digits) or machine identification code does not match.
		Return the parts to the original configuration, and then replace them according to the manual.

# When SC549 Is Displayed

## **Troubleshooting Flowchart**

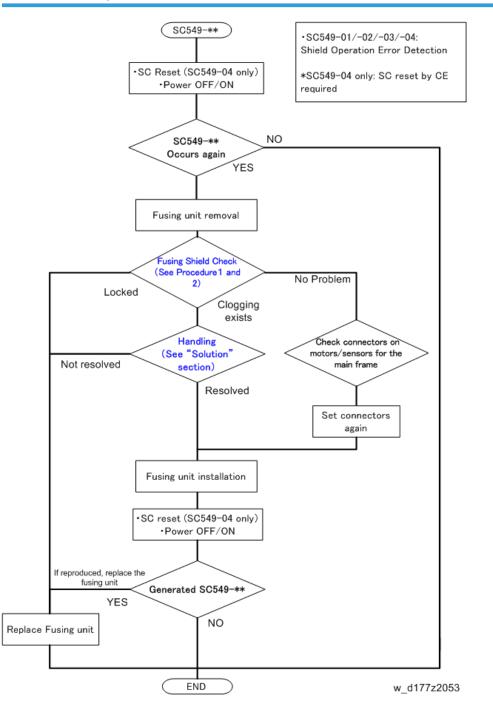


6

#### o

### **Fusing Shield Check**

<Procedure 1: Operation check for the lower side of the shield detection feeler>


1. Place the fusing unit on a flat place and tilt it towards the drawer connector [A].

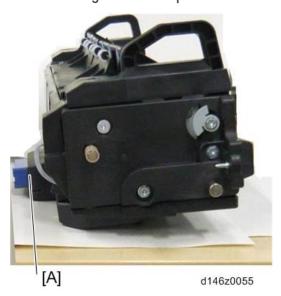

2. Move the shield drive gear with your hands to put the upper surface of the feeler [A] in a horizontal position.



3. Keep your fingers off the shield drive gear.

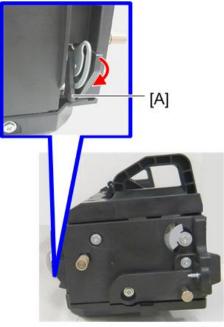


d146z0057

- The feeler moves smoothly: OK
- The feeler does not move / stops during moving / moves but slowly: NG


<Procedure 2: Operation check for the upper side of the shield detection feeler>

1. Place the fusing unit on a flat place with the drawer connector [A] turned up and the handle [B] touching a flat surface.

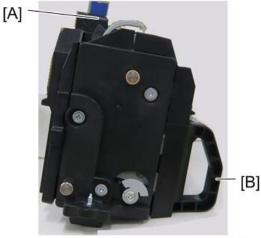


d146z0058

2. Move the shield drive gear with your hands to put the upper surface of the feeler [A] in a vertical position.

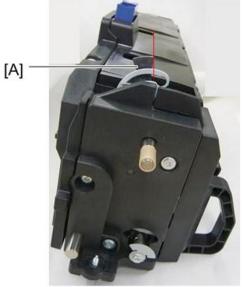

d146z0059

- 3. Keep your fingers off of the shield drive gear.
- 4. Make sure that the shield detection feeler [A] moves up to the highest point by its own weight.

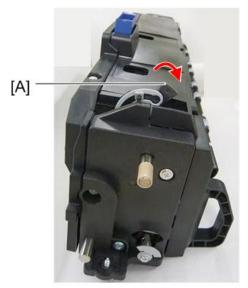

d146z0060

- The feeler moves smoothly: OK
- The feeler does not move / stops during moving / moves but slowly: NG


#### <Results>

- Both Procedure 1 and 2 are OK: No problem.
- Either Procedure 1 or 2 is NG: The mechanism is blocked.
- The shield detection feeler never moves while moving the shield drive gear by hands or fingers: Locked.

#### Solution

By tilting the fusing unit, you can check whether the feeler does not move smoothly due to burrs on a part in the unit, and remove the burrs.

1. Tilt the fusing unit [A] approx. 30°.

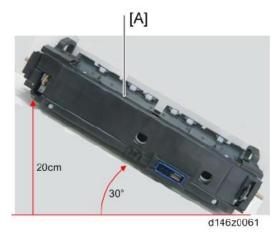


- 2. Put the fusing unit back to the horizontal position.
- 3. Perform the checking procedures (page 1223).

There is no blockage: Resolved

There is some blockage: Not resolved

4. Tilt the fusing unit [A] approx.  $30^{\circ}$  in the opposite direction from step 1.

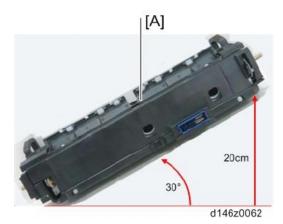


There is no blockage: Resolved

There is some blockage: Not resolved

## **Jam Detection**

### **Paper Jam Display**

When a jam occurs, the location is displayed on the operation panel.

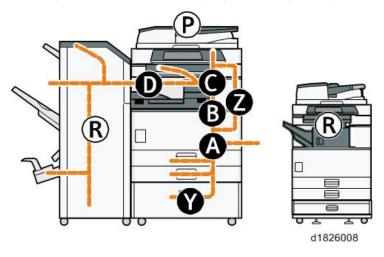

SP7-507 shows the paper jam history.

CODE :011 SIZE :05h TOTAL:000034

DATE: Fri Feb 15 11:44:50 2006

- CODE: Indicates the jam code.
- SIZE: Indicates the paper Size Code.
- TOTAL: Indicates the total counter (SP7-502-001).
- DATE: indicates the date when the jam occurred.



- The 10 latest printer jams are displayed.
- Initial jams are not recorded.

### Jam Codes and Display Codes



- Jam code: Shows the cause of a jam. Appears in the log data.
- Position code: Shows the location of a jam. Appears on the operation panel.

These are lists of jam codes for the main machine and peripheral devices. Please note:

- Late jam. The paper has failed to arrive within the prescribed time due to a jam that has occurred upstream of the referenced sensor.
- Lag jam. The paper has failed to leave the location of the referenced sensor within the prescribed time due to a jam downstream of the referenced sensor.

#### Main Machine

Jam code	Jam description	Position code
1	Initial jam	*1
3	Tray 1 No Feed	A1
4	Tray 2 No Feed	A2
5	Tray 3 No Feed	Y1
6	Tray 4 No Feed	Y2
7	LCT No Feed	U1
8	Bypass Paper Feed Sensor	А
9	Duplex No Feed	Z
11	1 st Vertical Transport Sensor: Late Jam	А
12	2nd Vertical Transport Sensor: Late Jam	А
13	3rd Vertical Transport Sensor: Late Jam	Y
14	4th Vertical Transport Sensor: Late Jam	Y
15	LCT Transport Sensor: Late Jam	U
17	Registration Sensor: Late Jam	А
18	Fusing entrance Sensor: Late Jam	В

Jam code	Jam description	Position code
19	Fusing exit Sensor: Late Jam	С
20	Exit Sensor: Late Jam	С
21	Relay Exit Sensor: Late Jam	D
22	Relay Transport Sensor: Late Jam	D
24	Invert Sensor: Late Jam	С
25	Duplex Exit Sensor: Late Jam	Z
27	Duplex Entrance Sensor: Late Jam	Z
51	1 st Vertical Transport Sensor: Lag Jam	А
52	2nd Vertical Transport Sensor: Lag Jam	А
53	3rd Vertical Transport Sensor: Lag Jam	Y
54	4th Vertical Transport Sensor: Lag Jam	Y
55	LCT Transport Sensor: Lag Jam	U
57	Registration Sensor: Lag Jam	В
60	Exit Sensor: Lag Jam	С
61	Relay Exit Sensor: Lag Jam	D
62	Relay Transport Sensor: Lag Jam	D
64	Invert Sensor: Lag Jam	С
65	Duplex Exit Sensor: Lag Jam	Z
67	Duplex Entrance Sensor: Lag Jam	Z

### \* 1 Initial Jam

Jam description	Position code
Main Machine	
1 st Vertical Transport Sensor	А
2nd Vertical Transport Sensor	Α

Jam description	Position code	
3rd Vertical Transport Sensor	Υ	
4th Vertical Transport Sensor	Υ	
LCT Transport Sensor	U	
Registration Sensor	В	
Exit Sensor	С	
Relay Exit Sensor	D	
Relay Transport Sensor	D	
Invert Sensor	С	
Duplex Exit Sensor	Z	
Duplex Entrance Sensor:	Z	
ARDF DF3080		
Initial jam, Overload jam	Р	
Booklet Finisher SR3170/ Finisher SR3160		
Entrance Sensor	R1-R5	
Horizontal Transport Sensor	R1-R5	
Switchback Transport Sensor	R1-R5	
Proof Tray Paper Exit Sensor	R1-R5	
Shift Tray Paper Exit Sensor	R1-R5	
Fold Exit Sensor	R6-R11	

#### ARDF DF3090

Jam code	Jam description	Position code
14	Skew Correction Sensor: Late Jam	Р
64	Skew Correction Sensor: Lag Jam	Р

Jam code	Jam description	Position code
16	Original Registration Sensor: Late Jam	Р
66	Original Registration Sensor: Lag Jam	Р
17	Original Exit Sensor: Late Jam	Р
67	Original Exit Sensor: Lag Jam	Р
239	Misfeed:Original Removed	Р

### ARDF DF3080

Jam code	Jam description	Position code
13	Separation Sensor: Late Jam	Р
63	Separation Sensor: Lag Jam	Р
14	Skew Correction Sensor: Late Jam	Р
64	Skew Correction Sensor: Lag Jam	Р
15	Original Set Sensor: Late Jam	Р
65	Original Set Sensor: Lag Jam	Р
16	Original Registration Sensor: Late Jam	Р
66	Original Registration Sensor: Lag Jam	Р
17	Original Exit Sensor: Late Jam	Р
67	Original Exit Sensor: Lag Jam	Р
239	Misfeed:Original Removed	Р

## Booklet Finisher SR3170/ Finisher SR3160

Jam code	Jam description	Position code
150	Entrance Sensor: Late Jam	R1-R5
151	Entrance Sensor: Lag Jam	R1-R5

Jam code	Jam description	Position code
152	Horizontal Transport Sensor: Late Jam	R1-R5
153	Horizontal Transport Sensor: Lag Jam	R1-R5
154	Switchback Transport Sensor: Late Jam	R1-R5
155	Switchback Transport Sensor: Lag Jam	R1-R5
156	Proof Tray Jam	R1-R5
157	Shift Tray Jam	R1-R5
158	Booklet Tray Jam	R6-R11
159	Entrance Transport Motor Jam	R1-R5
160	Horizontal Transport Motor Jam	R1-R5
161	Pre Stack Transport Motor Jam	R1-R5
162	Middle Transport Motor Jam	R1-R5
163	Tray Exit Motor Jam	R1-R5
164	Trailing Edge Pressure Plate Motor Jam	R1-R5
165	Paper Exit Gate Motor Jam	R1-R5
166	Punch Motor Jam	R1-R5
167	Punch Drive Motor Jam	R1-R5
168	Paper Position Sensor Side Motor Jam	R1-R5
169	Lower Junction Gate Motor Jam	R1-R5
170	Jogger Motor	R1-R5
171	Positioning Roller Motor Jam	R1-R5
172	Feed Out Motor Jam	R1-R5
173	Corner Stapler Movement Motor Jam	R1-R5
174	Corner Stapling Motor Jam	R1-R5
175	Booklet Jogger Motor	R6-R11
176	Booklet Guide Motor Jam	R6-R11

Jam code	Jam description	Position code
177	Booklet Fence Motor Jam	R6-R11
178	Booklet Stapling Motor Jam	R6-R11
179	Movement Roller Transport Motor Jam	R6-R11
180	Folding Transport Motor Jam	R6-R11
181	Booklet Positioning Roller Motor Jam	-
182	Press Folding Motor Jam	R6-R11
183	Tray Lift Motor Jam	R1-R5
184	Shift Motor Jam	R1-R5
185	Shift Jogger Front Motor Jam	R1-R5
186	Shift Jogger Rear Motor Jam	R1-R5
187	Shift Jogger Retraction Motor Jam	R1-R5
188	Stacking Roller Motor Jam	R1-R5
189	No Response for Paper Output Complete	R1-R5
190	Main Machine Data Corrupt	R1-R5

## Booklet Finisher SR3150/ Finisher SR3140

Jam code	Jam description	Position code
200	Entrance Sensor: Late Jam	R1-R4
201	Entrance Sensor: Lag Jam	R1-R4
202	Proof Tray Paper Exit: Late Jam	R1-R4
203	Proof Tray Paper Exit: Lag Jam	R1-R4
204	Middle Transport (right): Late Jam	R1-R4
205	Middle Transport (left): Late Jam	R1-R4
206	Middle Transport (left): Lag Jam	R1-R4


Jam code	Jam description	Position code
207	Shift Tray Paper Exit: Late Jam	R1-R4
208	Shift Tray Paper Exit: Lag Jam	R1-R4
209	Stapler Exit: Late Jam	R5-R10
210	Trailing Edge Stopper Transport: Late Jam	R5-R10
211	Trailing Edge Stopper Transport: Lag Jam	R5-R10
212	Fold Exit: Late Jam	R5-R10
213	Fold Exit: Lag Jam	R5-R10
220	Entrance Transport Motor Jam	R1-R4
221	Proof Transport Motor Jam	R1-R4
222	Output Transport/ Positioning, Stacking Roller Motor Jam	R1-R4
223	Shift Motor Jam	R1-R4
224	Jogger Motor Jam	R1-R4
225	Paper Exit Gate Motor Jam	R1-R4
226	Feed Out Motor Jam	R1-R4
227	Tray Lift Motor Jam	R1-R4
228	Positioning Roller Motor Jam	R1-R4
229	Stapler Movement Motor Jam	R1-R4
230	Stapling Motor Jam	R1-R4
231	Punch Motor Jam	R1-R4
232	Stuck Transport Motor Jam	R5-R10
233	Trailing Edge Stopper Motor Jam	R5-R10
234	Folding Blade Motor Jam	R5-R10
248	No Response for Paper Output Complete	R1-R4
249	Main Machine Data Corrupt	R1-R4

#### Jam code Position code Jam description 100 Entrance Sensor: Late Jam R1-R2 101 Entrance Sensor: Lag Jam R1-R2 102 Transport Sensor: Late Jam R1-R2 103 Transport Sensor: Lag Jam R1-R2 104 Paper Exit Jam R1-R2 105 Front Jogger Motor Jam R1-R2 106 Rear Jogger Motor Jam R1-R2 107 Shift Roller Motor Jam R1-R2 108 Positioning Roller Motor Jam R1-R2 109 Paper Exit Gate Motor Jam R1-R2 110 R1-R2 Stapler Movement Motor Jam 111 R1-R2 Shift Tray Lift Motor Jam 112 Stapling Motor Jam R1-R2 113 Paper Press Motor Jam R1-R2 114 Punch Motor Jam R1-R2 115 Punch Movement Motor Jam R1-R2 116 Registration Motor Jam R1-R2 No Response for Paper Output Complete 148 R1-R2 149 Main Machine Data Corrupt R1-R2

#### Internal Finisher SR3180

Jam code	Jam description	Position code
300	Entrance Sensor: Late Jam	R1-R2

Jam code	Jam description	Position code
301	Entrance Sensor: Lag Jam	R1-R2
302	Exit Sensor: Late Jam	R1-R2
303	Exit Sensor: Lag Jam	R1-R2
304	Shift Motor Jam	R1-R2
305	Junction Solenoid Motor Jam	R1-R2
306	Exit Paper Pressure Motor Jam	R1-R2
307	Stapler Motor Jam	R1-R2
308	Exit Lag Jam	R1-R2
348	No Response for Paper Output Complete	R1-R2
349	Main Machine Data Corrupt	R1-R2

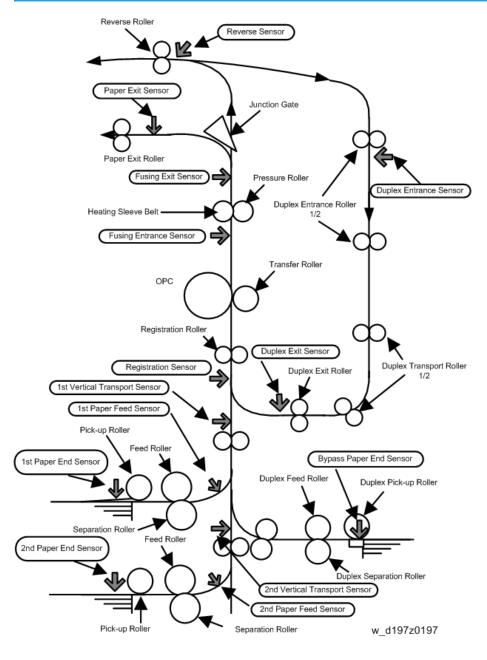


## Paper Size Codes

Paper size codes are as follows.

\* The unit of Main Scan/Sub Scan Length is 0.1 mm.


Size Code	Paper Size Name	Orientation	Main Scan Length	Sub Scan Length
132(84H)	A3	SEF	2970	4200
005(05H)	A4	LEF	2970	2100
133(85H)	A4	SEF	2100	2970
141(8DH)	B4	SEF	2570	3640
006(06H)	A5	LEF	2100	1480
134(86H)	A5	SEF	1480	2100
014(OEH)	B5	LEF	2570	1820
142(8EH)	B5	SEF	1820	2570
135(87H)	A6	SEF	1050	1480
143(8FH)	В6	SEF	1280	1820
160(A0H)	11"x17"(DLT)	SEF	2794	4318
164(A4H)	8 1/2"x14"(LG)	SEF	2159	3556
166(A6H)	8 1/2"x11"(LT)	SEF	2159	2794
038(26H)	8 1/2"x11"(LT)	LEF	2794	2159
172(ACH)	5 1/2"x8 1/2"(HLT)	SEF	1397	2159
175(AFH)	12" x 18"	SEF	3048	4572

### When SC670 Is Displayed

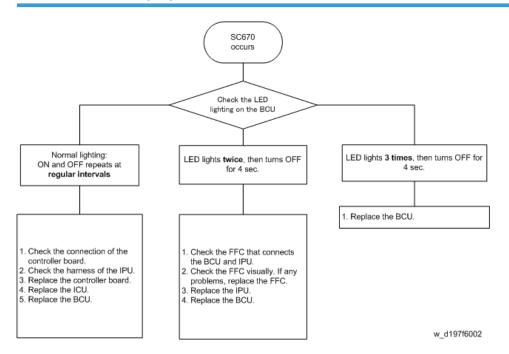

## Marks (Vertical Streaks) on Prints and Copies due to Scanning Problems

Marks on prints and copies are mostly due to dirt on the DF exposure glass [A], generally caused by adhesive contaminants (such as ball point pen ink and correction fluid).

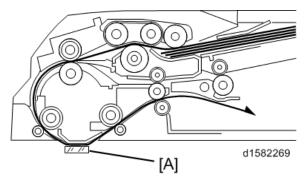

Compared to non-adhesive contaminants (such as paper fragments and eraser dust), adhesive contaminants are more likely to lead to complaints from customers because of the following:

Vertical streaks caused by adhesive contaminants are more visible in terms of image quality.

- Unless removed by cleaning, adhesive contaminants continue to produce vertical streaks, while non-adhesive contaminants stop producing streaks after they are dislodged.
- Many adhesive contaminants are difficult to remove by cleaning.

The ARDF DF3090 (D779) features a system (non-contact scanning) to reduce vertical streaks caused by adhesive contaminants.

Contact scanning: Other ADFs/ARDFs	Non-contact scanning: DF3090 (D779)
In contact scanning, the whole of the original comes into contact with the DF exposure glass [A] so that non-adhesive contaminants can be removed.	By means of the Mylar sheet [B], originals are kept slightly above the DF exposure glass [A], preventing adhesive contaminants from adhering to the glass.
d1582271	[B] d1582270

The ARDF DF3090 (D779) can be converted from non-contact scanning to contact scanning for users who wish to reduce vertical streaks caused by non-adhesive contaminants.

SP No.	Contact scanning	Non-contact scanning
SP4-688-001 (DF Density Adjustment ARDF)	97%	102%

### Finisher Registration Adjustment

A side-to-side registration error can be produced when the paper is being fed from the mainframe to the finisher.


#### For SR3170/SR3160

The docking bracket for SR3170/SR3160 [A] (and its screw [B]) can adjust the side-to-side registration.

To adjust the side-to-side registration:

Change the position of the standard bracket [B] by rotating it 90 degrees as shown by the arrow. This makes the docking bracket [A] easier to slide horizontally.


Then reattach the docking bracket [A] to the mainframe.

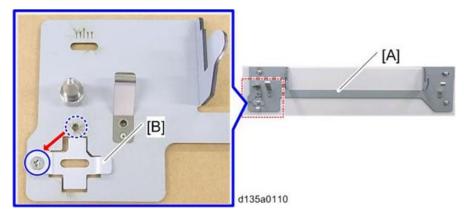

#### If the paper shifts toward the front

Slide the docking bracket forward by the amount which corresponds to that of the shift, to move the finisher in the same direction.

e.g.: When paper has shifted by 4 mm from the center toward the front (2 mm/division of the scale), move the docking bracket toward the front by 4 mm (2 divisions). The divisions move backward.

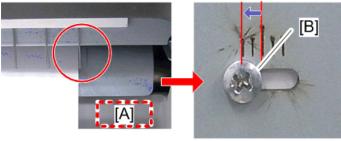

d197f0214

6


[A]: Proof tray

[B]: Docking Bracket Screw

#### If the paper shifts toward the rear

Slide the docking bracket backward by the amount which corresponds to that of the shift, to move the finisher in the same direction.

e.g.: When paper has shifted by 4 mm from the center toward the rear (2 mm/division of the scale), move the docking bracket backward by 4 mm (2 divisions). The divisions move forward.

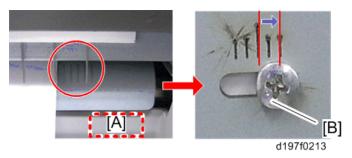

[A]: Proof tray


[B]: Docking Bracket Screw




• After the adjustment, check the side-to-side registration by feeding paper out to the proof tray. If the shift has not been solved, adjust the docking bracket (screw for the docking bracket) slightly again.

### For SR3150/SR3140

Side-to-side registration can be adjusted by the docking bracket for SR3150/SR3140 [A] (and the docking bracket screw [B]).

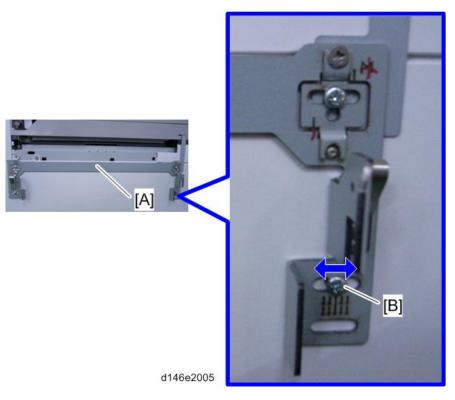


1. Eject a sheet of A4(LEF) or A3 A4(LEF) paper to the proof tray and check for how many divisions of the scale the edge of the paper has shifted from the center.

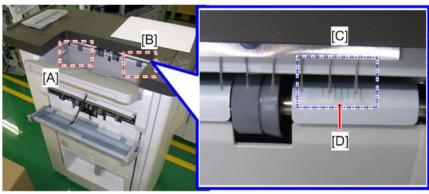

d135a3121

- [A]: Scale marks for DLT
- [B]: Scale marks for A3
- [C]: 7 scale marks in 2mm intervals
- [D]: Center mark

Change the position of the standard bracket by rotating it 180 degrees as shown below. This makes the docking bracket easier to slide horizontally. Then reattach the docking bracket to the mainframe.

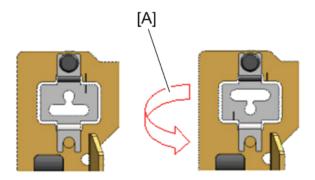


d197f0210

[A]: Reverse

#### If paper shifts toward the front

Slide the docking bracket backward by the amount which corresponds to that of the shift, in order to move the finisher in the same direction.

e.g.: When paper has shifted by 4 mm from the center toward the rear (2 mm/division of the scale), move the docking bracket backward by 4 mm (2 divisions). The divisions move forward.

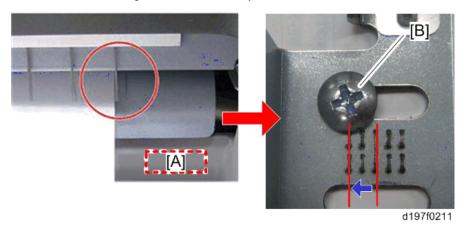


[A]: Proof Tray

[B]: Docking Bracket Screw

#### If paper shifts toward the rear

Slide the docking bracket backward by the amount which corresponds to that of the shift, in order to move the finisher in the same direction.

e.g.: When paper has shifted by 4mm from the center toward the rear (2 mm/division of the scale), move the docking bracket backward by 4 mm (2 divisions). The divisions move forward.

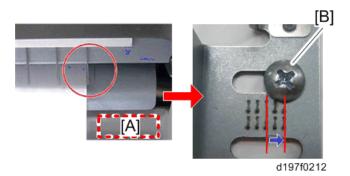

[A]: Proof Tray

[B]: Docking Bracket Screw



6

• After the adjustment, check the side-to-side registration by feeding paper out to the proof tray. If the shift has not been solved, adjust the docking bracket (screw for the docking bracket) slightly again.

### Stacking Problem at the 1000-sheet Finisher


Stacking problem may occur due to paper curl depending on the paper type / size. In this case, it is possible to avoid the problem by attaching the auxiliary tray.




d1826011

### Installation procedure for attaching the sheet

1. Clean the back [B] of the auxiliary tray [A] with alcohol

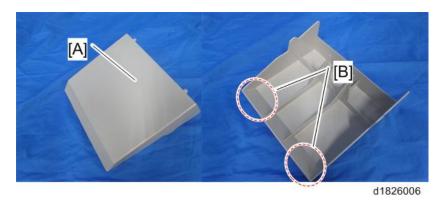


2. Attach the fixing sheet [B] to the auxiliary tray [A].

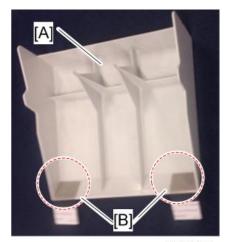

d1826001




• Place the sheet on the outer end [A] of the auxiliary tray and hook the bent portion [B] at the edge of the tray.

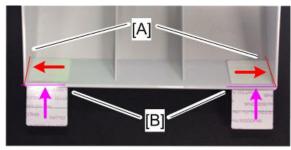

d1826002

### Installation procedure for attaching the auxiliary tray to the 1000-sheet finisher


- 1. Turn on the machine.
- Manually lift the paper surface detection feeler [A] to keep the sensor "ON".
   Keep lifting the feeler until step 4.

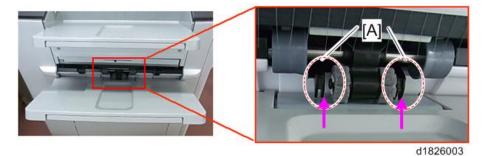

3. Open and close the upper cover [A] or the front cover [B]. The shift tray [C] starts to descend.



- 4. "JAM227" is displayed about 3 seconds later. The shift tray descent is stopped. Release your hand from the feeler.
- 5. Clean the place [A] to attach the fixing sheet with alcohol.

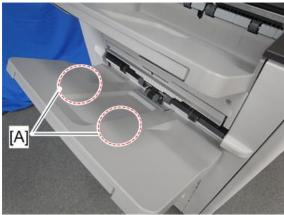

d1826007

- 6. Place the auxiliary tray [A] on the shift tray.
- 7. Attach the fixing sheet [B] on the shift tray and fasten the auxiliary tray.
- 8. Open and close the front cover or the upper cover. The shift tray starts to rise [C], and "JAM227" is cleared.



### Early Paper Full Detection at the 1000-sheet Finisher


Early paper full detection may occur due to paper stacking depending on the paper type / size. In this case, it is possible to avoid the early detection by attaching the auxiliary tray



d1826009

#### Installation procedure

1. Place the auxiliary tray [B] into the dent in the proof tray [A].

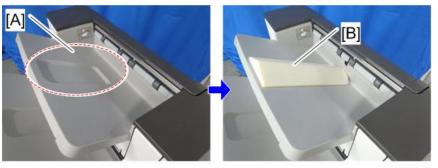


#### d1826010

### Finisher Jogger Problem

### Jogger Width Adjustment Procedure


If a paper alignment problem occurs as below, do the following procedure to adjust the jogger width.

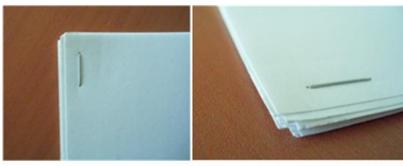

d146z0091

- 1. Place an A4 original (SEF) on the exposure glass.
- 2. Select [Staple] on the operation panel (you can select any staple location: top or bottom.)
- 3. Press [Start].
- 4. A copy is put out on the staple tray, and is stopped with the jogger not holding the sheet. (Firmware version 01.150.04 and older, a copy is stopped with the jogger holding the sheet.)

5. Check the jogger operation with eyes in the previous step, and then check the position and distance of jogger width and sheet.

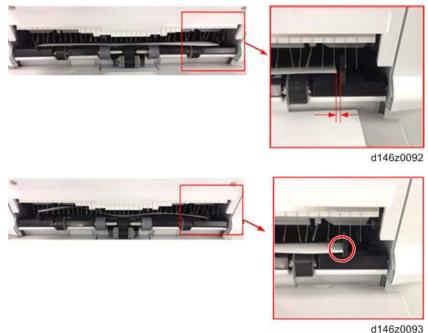

- d 140200.
- 7. Adjust the jogger width with SP6-143-004 (adjustable threshold: -1.5 to +1.5 mm for each paper size).
- 8. Repeat step 3 through step 6 to complete the adjustment.



6. Press the [#] button.


• Adjust the jogger width to be slightly narrower (approximately -0.5 mm) than the paper width.

### Early Paper Full Detection Mylar for Internal Finisher SR3130 (D690)

Paper curl may occur when output gets to near full. Paste the mylar to the full detection feeler to detect paper full early before paper curl occurs.


## **Pasting Mylar Procedure**

### 1. Pull the finisher [A]

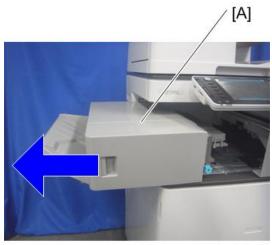

d1462876

# 2. Finisher front cover (©x2)

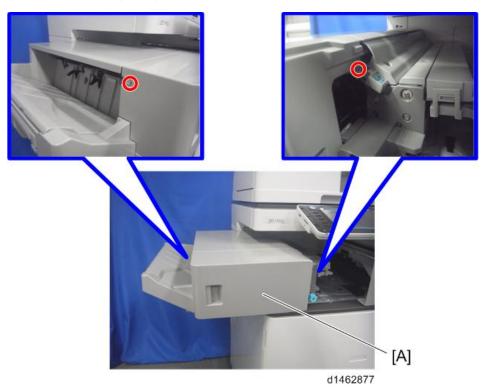


#### Ö


# 3. Left lower cover [A] (\$\mathbb{O}^2 x2)




### 4. Rotate the gear [A] to lift down the movable tray [B].

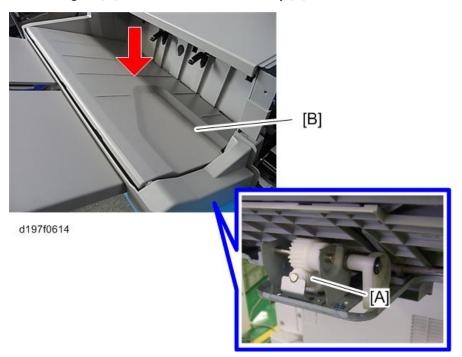

# 5. Paper output tray [A] (@x2)

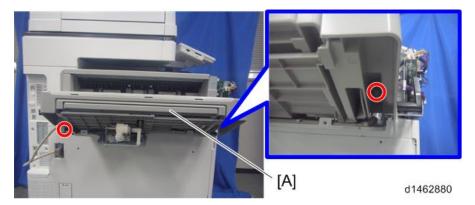


6. Paste the mylar [A] on the full detection feeler [B].

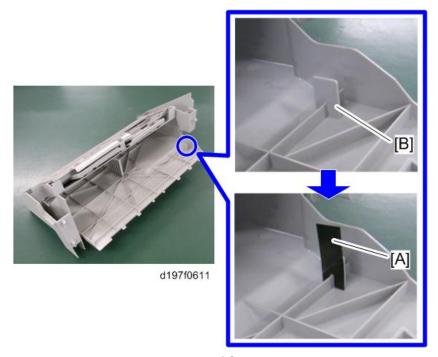

7. Re-assemble the paper output tray ( $\mathfrak{F}x2$ )

8. Move the movable tray [A] up and down to check that the mylar does go through the sensor properly.

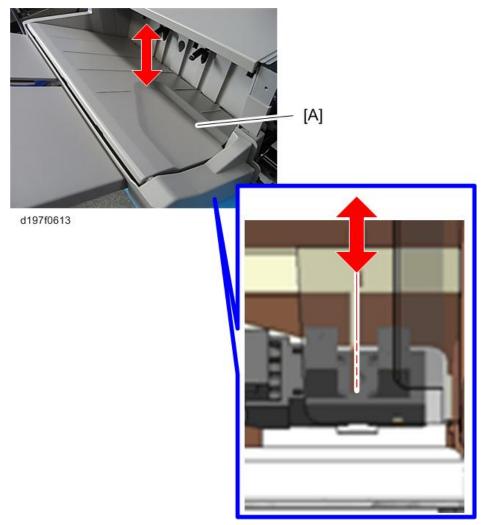

- 9. Re-assemble the left lower cover (©x2)
- 10. Re-assemble the finisher front cover (©x2)

## How to Re-Install the OCR Unit Type M2

When the OCR unit is installed, its function is stored in the HDD, and its ID information in the SD card is stored in the NVRAM. So the OCR unit must be installed again when you replace the HDD and/or NVRAM.

If you have the original SD card and when you replaced:

Only HDD

Re-install the unit with the original SD card.

Only NVRAM

Re-install with the original SD card if you upload/download of the NVRAM data.

Order a new SD card and Re-install with the new SD card if you do not upload/download of the NVRAM data.

Both the HDD and NVRAM at the same time
 Re-install the original SD card.

#### If you do not have the original SD card:

Order a new SD card and Re-install with the new SD card.



• Re-installation procedure is the same as the installation procedure (page 357)

### Paper Curl Problem for SR3180

When using the mixing mode, duplex (curl towards the lower) over the simplex (curl towards the upper) and occur paper curl, attach the auxiliary tray (D7667010), disable the paper full detection sensor, and paste the mylar.

1. Paper output cover [A] (©×2)




2. Release the clamp and disconnect the harness of the paper output full sensor 1 [A].




d197z0500

3. Loop and clamp the harness [A] as shown.

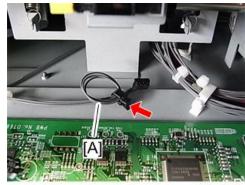


d197z0501

4. Release the clamp and disconnect the harness of the paper output full sensor 2 (Staple) [A].

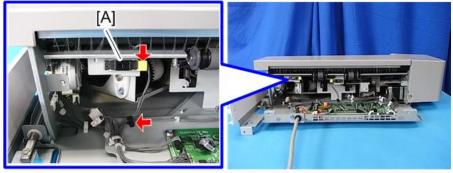

d197z0502

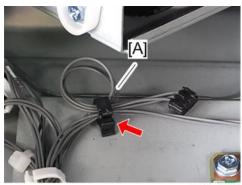

d197z0503




• If the harness cable is short to loop, clamp the harness without looping.




d197z0504

- 6. Re-attach the paper output cover (©x2)
- 7. Attach the auxiliary tray (D7667010) [B] to the paper output tray [A]

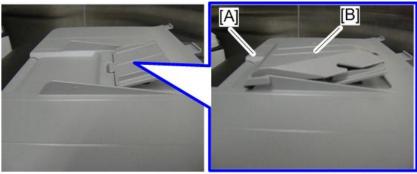

d197z0505

### 8. Paste the mylars [A] on the frame of the finisher.

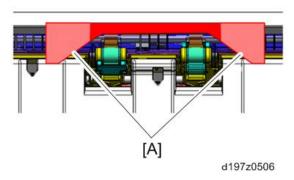

# **Blown Fuse Condition**

Fuse: EU


Name	Output connector	Capacit y	Part number	Field replacement possible
		Voltage Part name	Part name	Remarks
		8A	11071346	Yes
FU101 CN902 (Fusing Lamp)		AC	FIH250V8A (EM/CR)	-
		5A	11071344	Yes
FU102	FU102 CN904 (DHB)	AC	FIH 250V 5A(TP/CR)	-
F11105	FU105 CN913-5, 12 (Zero cross circuit / DH Heater)	2A	-	No
FU105		AC	SCT250V2A	-
F1111	CNOTT O (IDII)	5A	-	No
FU11	CN911-3 (IPU)	5V	SLT250V5A	-
			11071216	Yes
FU12	2 CN912-5, 6 (SIO)	24V	FBT250V10A (EM)	-
		10A	11071216	Yes
FU13	CN912-7 (BCU)	24V	FBT250V10A (EM)	-
		10A	11071216	Yes
FU14	CN912-8 (BCU)	24V	FBT250V10A (EM)	-

6

#### Fuse: NA

Name	Output connector	Capacit y	Part number	Field replacement possible
		Voltage	Part name	Remarks
FU101	CNIOO2 (Euris and Europa)	15A	11071241	Yes
FUIUI	CN902 (Fusing Lamp)	AC	TLC-15A-N4	-
		10A	11071347	Yes
FU102	U102 CN904 (DHB)		FIH 250V 10A(EM/CR)	-
FULLOF	CN913-5, 12 (Zero cross	2A	-	No
FU105	circuit / DH heater)	AC	SLT250V2A	-
F1111	CNIGHT O (IDIII)	5A	-	No
FU11	CN911-3 (IPU)	5V	SLT250V5A	-
			11071216	Yes
FU12	CN912-5, 6 (SIO)	24V	FBT250V10A (EM)	-
		10A	11071216	Yes
FU13	CN912-7 (BCU)	24V	FBT250V10A (EM)	-
		10A	11071216	Yes
FU14	CN912-8 (BCU)	24V	FBT250V10A (EM)	-

#### **Fuse Location**

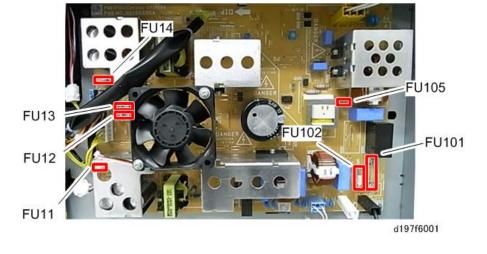

# 7. Energy Saving

## **Energy Saving**

#### **Energy Save**

#### If the Energy Saver Button Is Pressed During Machine Operation

#### Previous models:

The job in progress is cancelled and the machine switches to Energy Saver mode immediately.


#### This model:

The following sequence is followed.

- The [Energy Saver] key lights up and a pop-up message is displayed informing the user that
  the machine will switch to Energy Saver mode as soon as the current job is completed. The job
  continues until the end.
- 2. When the job has been completed, the machine enters Energy Saver mode.




• If the [Energy Saver] key is pressed again during the job, the machine returns to the Ready condition.

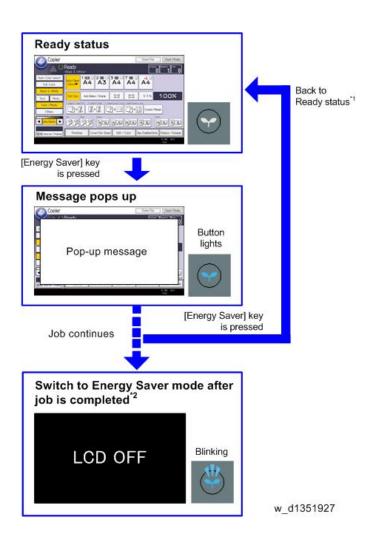

- \* 1: The machine return to ready status by doing one of the following,
  - Press the [Energy Saver] key
  - Open the platen cover
  - Set an original in the ADF
- \*2: Recovering from the Energy Saver mode is the same as previous models. Do one of the following.
  - Press the [Energy Saver] key
  - Open the platen cover
  - Set an original in the ADF

#### **Energy Saver Timer**

- With this timer, the user can choose when the machine will automatically enter and recover from
  Energy Saver mode, as well as when it will turn on and off. The user does not need to worry about
  turning the machine on or off in the morning, during lunchtime, or when leaving the office. As a
  result, the machine contributes to overall energy saving in the user's office environment, while at the
  same time helping to improve work efficiency.
- The user is able to control how far the machine will power down, i.e. only to Energy Saver mode or all the way off.
- With auto power ON and OFF, the user need not remember to turn the machine on and off every day.
  - Auto power ON:
     Improves work efficiency, as machine warm-up is already completed by the time the user is ready to begin work (the user is not made to wait).
  - Auto power OFF:
     Prevents unnecessary power consumption during after-work hours, saving power.

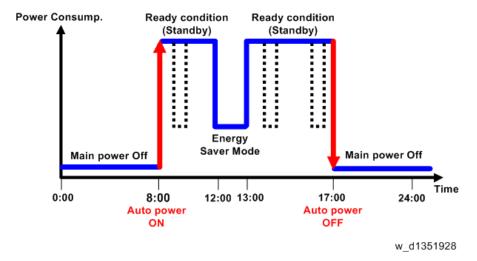

- The user can disable the Weekly Timer, so that the machine power is not turned on automatically during extended periods of inactivity (Ex. Summer holiday).
- A password can be set so that the machine can be used during this period if necessary, but only by the select group who know this password.




 You can set the energy saver timer setting on "Weekly Timer" in "Timer Settings" menu under "System Settings".

# **Paper Save**

### **Effectiveness of Duplex/Combine Function**

Duplexing and the combine functions reduce the amount of paper used. This means that less energy overall is used for paper production, which improves the environment.

#### 1. Duplex:

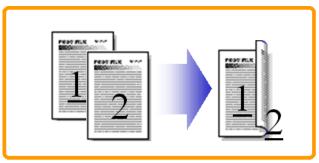

d1351966

Reduce paper volume in half!

#### 2. Combine mode:




d1351967

Reduce paper volume in half!

7

#### 3. Duplex + Combine:

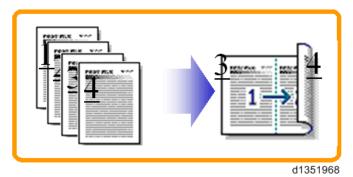

Using both features together can further reduce paper volume by 3/4!

To check the paper consumption, look at the total counter and the duplex counter.

The total counter counts all pages printed.

- For one duplex page, the total counter goes up by 2.
- For a duplex job of a three-page original, the total counter goes up by 3.
- The duplex counter counts pages that have images on both sides.
- For one duplex page, the duplex counter goes up by 1.
- For a duplex job of a three-page original, the duplex counter will only increase by 1, even though two sheets are used.

#### **Paper Savings and Counter**

• Total counter: SP 8581-001

• Duplex counter: SP 8411-001

• Single-sided with combine mode: SP 8421-004

• Duplex with combine mode: SP 8421-005

The following table shows paper savings and how the counters increase for some simple examples of single-sided and duplex jobs.

#### Duplex mode:

Originals	Simplex Sheet used	Duplex Sheets used	Paper Saved	Total counter SP8581-001	Duplex counter SP8411-001
1	1	1	0	1	0
2	2	1	1	2	1

Originals	Simplex Sheet used	Duplex Sheets used	Paper Saved	Total counter SP8581-001	Duplex counter SP8411-001
3	3	2	1	3	1
4	4	2	2	4	2
5	5	3	2	5	2
10	10	5	5	10	5
20	20	10	10	20	10

If combine mode is used, the total and duplex counters work in the same way as explained previously. The following table shows paper savings and how the counters increase for some simple examples of duplex/combine jobs.

#### 2 in 1 mode:

Originals	Simplex Sheet used	Duplex Sheets used	Paper Saved	Total counter SP8581-001	Duplex counter SP8411-001
1	1	1	0	1	1
2	2	1	1	1	1
3	3	2	1	2	2
4	4	2	2	2	2
5	5	3	2	3	2
10	10	5	5	5	5
20	20	10	10	10	10

### Duplex + 2 in 1 mode:

Originals	Simplex Sheet used	Duplex Sheets used	Paper Saved	Total counter SP8581-001	Duplex counter SP8411-001
1	1	1	0	1	0
2	2	1	1	1	0

/

Originals	Simplex Sheet used	Duplex Sheets used	Paper Saved	Total counter SP8581-001	Duplex counter SP8411-001
3	3	1	2	2	1
4	4	1	3	2	1
5	5	2	3	3	1
6	6	2	4	3	1
7	7	2	5	4	2
8	8	2	6	4	2
9	9	3	6	5	2
10	10	3	7	5	2
11	11	3	8	6	3
12	12	3	9	6	3

MEMO

MEMO

MEMO



# **Model Cor-C1 Machine Code:**

D197/D198/D199/D200/D201/D202

# **Appendices**

# **TABLE OF CONTENTS**

### 1. Appendices:Specifications

General Specifications	3
Mainframe	3
Printer Specifications	15
Scan Specifications	16
Supported Paper Sizes	24
Original Size Detection	24
Paper Feed	26
Paper Exit	30
Main Unit Tray, 1 Bin Tray, Shift Tray, Side Tray	30
Software Accessories	33
Printer Drivers	33
Windows Environment	33
Mac OS and UNIX Environment	37
Scanner and LAN Fax Drivers	38
Optional Equipment	40
Paper Feed Unit PB3210/PB3220 (D787)	40
Paper Feed Unit PB3150 (D694)	40
LCIT PB3170/PB3230 (D695)	41
LCIT RT3030 (D696)	41
Caster Table Type B (D178)	41
Platen Cover PN2000 (D700)	42
ARDF DF3090 (D779)	42
SPDF DF3080 (D683)	43
Bridge Unit BU3070 (D685)	43
1 Bin Tray BN3110 (D692)	43
Internal Shift Tray SH3070 (D691)	44
Side Tray Type M3 (D725)	44
Booklet Finisher SR3170 (D688) / Finisher SR3160 (D689)	45
Punch Unit PU3060 (D706)	50
Booklet Finisher SR3150 (D686) / Finisher SR3140 (D687)	50
Punch Unit PU3050 (D717)	53
Internal Finisher SR3180 (D766)	53

Internal Finisher SR3130 (D690)	54			
Punch Unit PU3040 (D716)	56			
2. Appendices:Preventive Maintenance Tables				
Preventive Maintenance	57			
Preventive Maintenance Items	57			
Mainframe: D197/D198/D199	57			
Mainframe: D200/D201/D202	61			
ARDF DF3090	65			
SPDF DF3080	66			
Paper Feed Unit PB3150/PB3210/PB3220	67			
LCIT PB3170/PB3230	67			
LCIT RT3030	67			
1 Bin Tray BN3110	68			
Bridge Unit BU3070	68			
Internal Shift Tray SH3070	68			
Side Tray Type M3	68			
Booklet Finisher SR3150 / Finisher SR3140	69			
Booklet Finisher SR3170 / Finisher SR3160	69			
Internal Finisher SR3130	70			
Internal Finisher SR3180	70			
Others Yield Parts	70			

# 1. Appendices: Specifications

# **General Specifications**

### Mainframe

Item	Spec.	
Configuration:	Desktop	
Color Supported:	Black and White	
Scanning Element:	One-dimensional solid scanning through CCD	
Printing process:	D197/D198/D199: Single Laser beam scanning and electro-photographic printing D200/D201/D202: Twin Laser beam Scanning and electro-photographic printing	
Development:	Dry two-component magnetic brush development system	
Fusing System:	QSU-DH Fusing System	
Max. Imageable Area:	297 x 432 mm (11" x 17")	
Target Monthly ACV:	D197: 4K D198: 5K D199: 7K D200: 10K D201: 15K D201: 20K	
First Copy Time (LT/A4 LEF, 1st tray):	D197/D198: 4.6 sec D199: 4.3 sec D200: 4.0 sec D201/D202: 2.9 sec	

Item	Spec.
Warm-up Time (From main switch):	11.0 sec  * If HDD installed: 14.0 sec  * If Smart Operation Panel installed: 71.0 sec  (Nominal Value)
Power Source:	NA: 120V-127V 60 Hz 12A EU/Asia/China: 220-240V 50-60 Hz 8A TW: 110V 60 Hz 13.6A
Max Power Consumption (Full Configuration):	NA: 1.6 kW or less EU/Asia/China: 1.6 kW or less (D197/D198/D199), 1.78 kW or less (D200/D201/D202)
Dimensions (W x D x H):	<ul> <li>Mainframe:</li> <li>587 x 680 x 788 (23.1" x 26.8" x 31.0") (Mainframe; when Operation panel is at home position)</li> <li>668 x 765 x 1035 (26.3" x 30.1" x 40.7") (with 2-Tray Optional Bank, and Fall-Prevention Material)</li> <li>With ARDF:</li> <li>587 x 680 x 913 (23.1" x 26.8" x 35.9") (Mainframe; when Operation panel is at home position)</li> <li>668 x 765 x 1160 (26.3" x 30.1" x 45.7") (with 2-Tray Optional Bank, and Fall-Prevention Material)</li> <li>With SPDF:</li> <li>587 x 680 x 963 (23.1" x 26.8" x 37.9") (Mainframe; when Operation panel is at home position)</li> <li>668 x 765 x 1210 (26.3" x 30.1" x 47.6") (with 2-Tray Optional Bank, and Fall-Prevention Material)</li> </ul>

Item		Spec.
Weight:		Mainframe only  • Less than 60 kg (132.3 lbs)  With ARDF  • Less than 68.5 kg (151.0 lbs)  With SPDF  • Less than 74 kg (163.1 lbs)
CPU:		PMC-Sierra RM7035-533MHz
RAM:		Standard: 2GB
HDD:		320GB  * Optional for Basic model. Standard with SP model. Shared with other features (Copy, Fax, and Scanner). Regarding HDD, users can use 206GB only to enhance response rate for storing and loading data.
Max Email Address in HDD:		2,000 Without HDD: 1,000
Register Group Address in HDD:		Max. 100 Group (Max. 500 addresses in one group address)
Register client folder address in HDD:		Max. 2,000 folders Without HDD: 1,000
Recommended Paper Size:	Standard Tray:	A3 SEF, A4 SEF/LEF, A5 SEF/LEF, A6 SEF, B4 SEF, B5 SEF/LEF, B6 SEF, 11"x 17"(DLT) SEF, 8.5"x 14"(LG) SEF, 8.5"x 13"(Foolscap) SEF, 8.5"x 11"(LT) SEF/LEF, 8.25"x 14"(Government LG) SEF, 8.25"x 13"(Folio) SEF, 8"x 13"(F/GL) SEF, 8"x 10"(Eng Quatro) SEF, 7.25"x 10.5"(Executive) SEF/LEF, 11"x15" SEF, 10"x14" SEF, 8K SEF, 16K SEF/LEF, 5.5"x 8.5" (Half Letter SEF), Com10 SEF/LEF, Monarch SEF, C5 SEF/LEF, C6 SEF/LEF, DL Env SEF/LEF <custom paper="" size=""> Width: 90 mm (3.55 inch) – 297 mm (11.69 inch), Length: 148 mm (5.83 inch) - 431.8 mm (17.00 inch)</custom>

Item		Spec.
Recommended Paper Size:	2nd, 3rd & 4th Paper Tray (3rd & 4th Paper Tray optional):	A3 SEF, A4 SEF/LEF, A5 SEF/LEF, A6 SEF, B4 SEF, B5 SEF/LEF, B6 SEF, 11"x 17"(DLT) SEF, 8.5"x 14"(LG) SEF, 8.5"x 13"(Foolscap) SEF, 8.5"x 11"(LT) SEF/LEF, 8.25"x 14"(Government LG) SEF, 8.25"x 13"(Folio) SEF, 8"x 13"(F/GL) SEF, 8"x 10"(Eng Quatro) SEF/LEF, 7.25"x 10.5"(Executive) SEF/LEF, 11"x15" SEF, 10"x14" SEF, 8K SEF, 16K SEF/LEF, 5.5"x 8.5" Half Letter SEF, Com10 SEF/LEF, Monarch SEF, C5 SEF/LEF, C6 SEF/LEF, DL Env SEF/LEF
		<custom paper="" size=""></custom>
		Width: 90 mm (3.55 inch) – 297 mm (11.69 inch), Length: 148 mm (5.83 inch) - 431.8 mm (17.00 inch)
Recommended Paper Size:	Bypass:	A3 SEF, A4 SEF/LEF, A5 SEF/LEF, A6 SEF, B4 SEF, B5 SEF/LEF, B6 SEF, 11"x 17"(DLT) SEF, 8.5"x 14"(LG) SEF, 8.5"x 13"(Foolscap) SEF, 8.5"x 11"(LT) SEF/LEF, 8.25"x 14"(Government LG) SEF, 8.25"x 13"(Folio) SEF, 8"x 13"(F/GL) SEF, 8"x 10"(Eng Quatro) SEF/LEF, 7.25"x 10.5"(Executive) SEF/LEF, 11"x15" SEF, 12"x18" SEF, 10"x14" SEF, 8K SEF, 16K SEF/LEF, 5.5"x 8.5" (Half Letter SEF), Com10 SEF/LEF, Monarch SEF/LEF, C5 SEF/LEF, C6 SEF/LEF, DL Env SEF/LEF <custom paper="" size=""> Width: 90 mm (3.55 inch) - 304.8 mm (12.00 inch), Length: 148 mm (5.83 inch) - 600 mm (23.62 inch)  Note  Image quality is not assured for the length over 432 mm.</custom>
	Tandem LCT:	A4 LEF, LT LEF
	Side LCT:	A4 LEF, LT LEF, B5 LEF

Item		Spec.
Paper Feeding Capacity (LT/A4: 80gsm paper):	Std:	1,200 sheets (550 sheets + 550 sheets + 100 Sheets/ Bypass)
	Option:	Paper Feed Unit: 550 sheets x 2 trays Paper Feed Unit: 550 sheets x 1 tray
		Tandem LCT: 1,000 sheets x 2 Side LCT: 1500 sheets
	Мах:	4,700 sheets (550 x 2 +1000 x 2 + 1500 + 100)
Paper Output Capacity (LT/A4: 80gsm paper):	Std:	Face Down: 500 sheets (A4/LT or smaller) / 250 sheets (B4/LG or larger)
		*When Bridge Unit or Side Tray is attached:
		250 sheets (A4/LT or smaller), 125 sheets (B4/LG or larger)

Item		Spec.
Paper Output Capacity (LT/A4: 80gsm paper):	Option:	1 Bin Tray: 125 sheets or Shift Sort Tray: 250 sheets (A4/LT or smaller), 125 sheets(B4/LG or larger) <d197 d198="" d199=""> Side Tray: 125 sheets or 1000 sheets Finisher: 1,000 + 250 sheets(A4/LT or smaller), 500 + 50 sheets(B4/LG or larger) or Internal Finisher: 500 sheets, 250 sheets(B4/LG or larger) or Stapleless stapler: 250 sheets(A4/LT or smaller), 125 sheets(B4/LG or larger)  <d200 d201="" d202=""> Side Tray: 125 sheets or 1000 sheets Finisher: 1,000 + 250 sheets(A4/LT or smaller), 500 + 50 sheets(B4/LG or larger) or 2000 sheets Booklet Finisher: 2,000 + 250 sheets(A4/LT or smaller), 1,500 + 50 sheets(B4/LG or larger) or 3000 sheets Finisher: 3,000 + 250 sheets(A4/LT or smaller), 1,000 + 50 sheets (B4/LG or larger) or Booklet Finisher: 2,000 + 250 sheets, 1000 + 50 sheets(B4/LG or larger) or Internal Finisher: 500 sheets</d200></d197>
Paper Output Capacity (LT/A4: 80gsm paper):	Max:	3,625 sheets (with 3,000 sheets Finisher (3,250 sheets) + bridge unit (250 sheets) + 1 bin tray (125 sheets))

ltem		Spec.
Paper Type	Std Tray:	[Paper Type]
Capacity:		Plain Paper (Not Displayed as Paper Type), Recycle Paper, Color Paper, Special Paper, Letterhead, Preprinted Paper, Prepunched Paper, Bond Paper, Cardstock, Plain Paper Backside, Envelope
		[Thickness]
		Thin Paper, Plain Paper 1, Plain Paper 2, Middle Thick, Thick Paper 1, Thick Paper 2, Thick Paper 3, Thick Paper 4
	Bypass Tray:	[Paper Type]
		Plain Paper (Not Displayed as Paper Type), Recycle Paper, Color Paper, Special Paper, Letterhead, Preprinted Paper, Pre-punched Paper, Bond Paper, Cardstock, OHP, Label, Plain Paper Backside, Envelope
		[Thickness]
		Thin Paper, Plain Paper 1, Plain Paper 2, Middle Thick, Thick Paper 1, Thick Paper 2, Thick Paper 3, Thick Paper 4
	Option:	[Paper Type]
		Plain Paper (Not Displayed as Paper Type), Recycle Paper, Color Paper, Special Paper, Letterhead, Preprinted Paper, Pre-punched Paper, Bond Paper, Cardstock, Plain Paper Backside
		[Thickness]
		Thin Paper, Plain Paper 1, Plain Paper 2, Middle Thick, Thick Paper 1, Thick Paper 2, Thick Paper 3, Thick Paper 4

Item		Spec.
Paper Weight:	Std Tray:	60 - 300 g/m² (16 - 80 lb. Bond)
	Bypass:	52 – 300 g/m² (14 – 80 lb. Bond)
	Duplex Unit:	52 - 256 g/m² (14 - 68.3 lb. Bond)
	2 tray Paper Feed Unit:	60 - 300 g/m² (16 - 80 lb. Bond)
	1 tray Paper Feed Unit:	52 – 300 g/m² (14 – 80 lb. Bond)
	Tandem LCT:	52 - 300 g/m² (14 - 80 lb. Bond)
	Side LCT:	52 - 300 g/m² (14 - 80 lb. Bond)
Reliability:	Max Monthly CV (5 years):	D197: 15K,
		D198: 20K,
		D199: 30K,
		D200/D201/D202: 50K
	PM Cycle:	D197/D198/D199: 120K
		D200/D201/D202: 160K
	MCBC (Mean Copy Between Calls):	D197: 43.1K,
		D198: 47.8K,
		D199: 56.0K,
		D200: 74.8K,
		D201: 87.6K,
		D202: 94.5K

#### 1

### **Copier Specifications**

Item		Spec.
CPM Black:		D197: 25,
		D198: 30,
		D199: 35,
		D200: 40,
		D201: 50,
		D202: 60
CPM Color:		-
Copy Resolution	n:	600 dpi/bit
Multiple Copyir	ng:	Up to 999 copies
Reproduction Ratio:	NA:	400%, 200%, 155%, 129%, 121%, 100%, 93%, 85%, 78%, 73%, 65%, 50%, 25%
	EU/Asia:	400%, 200%, 141%, 122%, 115%, 100%, 93%, 82%, 75%, 71%, 65%, 50%, 25%
Zoom:		From 25% to 400% in 1% step
Number of Cop	y Reservations:	8 jobs
Image Density:		Auto Density Selection
		Manual: 9 levels
Copy Mode:		Default = Text /
		Auto Text&Photo Separation
		(Printed/Glossy/Copied), Photo (Printed/Glossy/Copied), Text, Pale, Generation
Paper Selection	:	Default = Auto Paper Selection (APS)
		Auto Paper Selection (APS)
		1 st Tray
		2nd Tray
		3rd Tray (with Paper Bank)
		4th Tray (with Paper Bank)
		5th Tray LCT
		Bypass Tray

Item		Spec.
Auto Tray Switch:		Yes
Duplex:		1 sided to 2 sided, 2sided to 2 sided(w/ARDF), Book to 2 sided, Front and Back to 2 sided
Book:	Booklet:	Yes (HDD option is required.)
	Magazine:	
	Layout & Booklet:	
Series:	Book to simplex:	Yes
	2 sided original to simplex:	
Combine (Layou	ut):	The following combinations are supported:
		2 into 1 simplex,
		4 into 1 simplex,
		8 into 1 simplex,
		1 duplex into 1 simplex,
		2 duplex into 1 simplex,
		4 duplex into 1 simplex,
		4 into 1 duplex,
		8 into 1 duplex,
		16 into 1 duplex,
		2 duplex into 1 duplex,
		4 duplex into 1 duplex,
		8 duplex into 1 duplex

Item		Spec.
Shift/Erase/	Centering:	Yes
Margin Adjustment:	Cornering:	No
Aujusiiileiii.	Margin Adjustment:	1 mm step (0-30mm)
		Default=Front Page:5mm left, Back Page:5mm right
	Scan Position Adjustment:	No
	Creep Adjustment:	No
	Erase Center:	1 mm step (2-99mm), Default=10mm
	Erase Border:	1 mm step (2-99mm)
		Default = 10mm
Cover Sheet	Front Cover:	Copy or Blank (Default=Copy)
Chapter	Front and Back	
Slip Sheets:	Cover:	
	Chapter:	Yes (Up to 20 chapters)
	Slip Sheets:	Yes
Image Rotation:		Yes (A4, LT, B5)
Electronic	Without Shift Sort:	With finisher: No
Sort:		Without finisher: Yes
	Rotate Sort:	With finisher: Yes
		Without finisher: Yes
		* Not from By-pass
	Shift Sort:	With finisher: Yes
		Without finisher: No
Electronic Stack:		Yes (with Finisher)
Stapling:		Yes (with Finisher)

Item		Spec.
Image	Repeat:	Yes
Creation:	Double Copy:	Yes
	Mirror:	No
	Positive/Negative:	Yes
	Erase Inside:	No
	Erase Outside:	No
Stamp/ Numbering:	Preset Stamp:	Yes (8 Stamps / 2 sizes) * Not from By-pass * HDD option is required.
	User Stamp:	Yes (4 Stamps / 1 sizes) * Not from By-pass * HDD option is required.
	Date Stamp:	Yes (5 Stamps) * Not from By-pass
	Page Number:	Yes (6 Stamps) * Not from By-pass
	Bates Numbering:	Yes * Not from By-pass
	Printing copy prevention pattern:	Yes * Not from By-pass
Sharp/Soft:		7 levels
Contrast:		9 levels
Background De	nsity Adjustment:	9 levels
Job Programs:		Mode: 25 Program
		Default: 1 Program
User Code:		8 digits / 1000 user codes
Interrupt Copy:		Yes
Auto Start:		Yes
Job Preset:		Yes(8 jobs)  * HDD option is required.
Sample Copy:		Yes

\* 1 A4 LEF, 1st paper feed tray, with book scanner.

### Printer Specifications

Item	Spec.
Deinten Language	Standard: PCL 5e/6, PDF
Printer Language:	Option: PostScript 3, IPDS, XPS
	Max: 1200 x 1200 dpi (1bit)
	PCL5c: 300 x 300 dpi (1bit), 600 x 600 dpi (1bit, default)
Print Resolution:	PCL6: 600 x 600 dpi (1bit, default), 1200 x 1200 dpi (1bit)
Thin Resolution.	PS3: 600 x 600 dpi (1bit, default), 1200 x 1200 dpi (1bit), 300 x 300 dpi
	XPS/IPDS: 300 x 300 dpi (1bit), 600 x 600 dpi (1bit, default)
	Standard:
	PCL: Scalable 45 fonts + international 13 fonts
Font:	PS3: 136 Roman fonts
	Option:
	IPDS: 108 Roman fonts
	Standard:
	Ethernet (1000BASE-T/ 100BASE-TX/ 10BASE-T),
Host Interfaces:	USB 2.0 Type A (2 port on back of the machine, 1 port on operational panel), Type B, SD Slot on operational panel
	Option:
	IEEE1284/ECP, Wireless LAN (IEEE802.11a/b/g/n), Bluetooth, Additional NIC(2nd port)
Network Protocol:	TCP/IP (IPv4, IPv6), IPX/SPX
	Standard:
MIB:	MIB-II(RFC1213), Host Resource (RFC1514), Printer MIB (RFC1759), Printer Port Monitor MIB
	Private:
	Ricoh Original

Item	Spec.
	Windows XP/Vista/7/8/Server 2003/Server 2008/ Server 2008R2/Server 2012
	Netware: 6.5*
Network/Operating System:	Unix: Sun Solaris, HP-UX, SCO OpenServer, Red Hat Linux, IBM AIX
	Mac OS X v.10.26 or later
	SAP R/3, NDPS Gateway,
	IBM iSeries, AS/400-using OS/400 Host Print Transform
	*Netware Option required

### Scan Specifications

Item		Spec.
Color Scan:		Std (SP model or "Printer/ Scanner upgraded" MFP)
Scanning Speed (ARDF):	BW:	80 pages/minute (A4 LEF, 200dpi/300dpi ) Push Scan 79 pages/minute (LT LEF, 200dpi/300dpi ) Push Scan
	Color:	80pages/minute (A4 LEF, 200dpi/300dpi ) Push Scan 79 pages/minute (LT LEF, 200dpi/300dpi ) Push Scan
Scanning Speed (SPDF):	BW:	Simplex:  110 pages/minute (A4 LEF/LT LEF, 200 dpi/300 dpi ) Push Scan  Duplex:  180 pages/minute (A4 LEF/LT LEF, 200 dpi/300 dpi ) Push Scan
	Color:	Simplex:  1 10 pages/minute (A4 LEF/ LT LEF, 200 dpi/ 300 dpi ) Push Scan  Duplex:  1 80 pages/minute (A4 LEF/ LT LEF, 200 dpi/ 300 dpi ) Push Scan
Scanning Resolution:		100 / 200 (default) / 300 / 400 / 600 dpi

Item		Spec.
Auto Size Detection (NA):	Exposure Glass:	11"x17"(DLT) SEF, 8 ½"x14"(LG) SEF, 8 ½"x11"(LT) LEF/SEF, 8 1/2"×5 1/2"(HLT) LEF  *SP mode adjustment is required: 8 1/2"×5 1/2"(HLT)SEF
	ARDF:	11"x17" (DLT)SEF, 8 ½"x14" (LG)SEF, 8 ½"x11"(LT) LEF/SEF, 5 ½"x8 ½"(HLT) LEF/SEF, 8 1/2"×13"(Foolscap) SEF 10"x14"SEF, 11"x15"SEF (detected the same as DLT SEF, Default = DLT SEF), 8"x10"SEF (detected the same as LT SEF, Default = LT SEF), 7 1/4"x10½" LEF/SEF(detected the same as LEF/SEF, Default=SEF)
	Exposure Glass:	A3 SEF, B4 SEF, A4 LEF/SEF, B5 LEF/SEF, A5 LEF, 8 1/2"x13"(Foolscap) SEF
		*SP mode adjustment is required:
Auto Size Detection (EU/AS/		A5 SEF, 8"x13"(F) SEF, 8 1/4"x13"(Folio) SEF, 8K SEF, 16K LEF/SEF
	ARDF:	A3 SEF, B4 SEF, A4 LEF/SEF, B5 LEF/SEF, A5 LEF/SEF, B6 LEF/ SEF, DLT SEF, LT SEF/LEF, 8 1/2"x13"(Foolscap) SEF
CHN):		*SP mode adjustment is required:
		8"x13"(F) SEF, 8 1/4"x13"(Folio) SEF
		8K SEF (detected the same as DLT SEF, Default = DLT SEF), 16K SEF (detected the same as LT SEF, Default = LT SEF), 16K LEF (detected the same as LT LEF, Default = LT LEF)
	Main:	297 mm (11.6 inches)
Scan Area	Sub:	432 mm (17.0 inches)
sRGB Supported:		No
Network Interface:		LAN: Local Area Network
		Ethernet/ 10base-T, 100base-TX, 1000Base-T
		Wireless LAN (IEEE 802.11a/b/g/n)
		*Option

Item		Spec.
Protocol:		Network: TCP/IP
		Sending E-mail: SMTP, POP, IMAP4
		Scan to Folder: SMB, FTP, NCP*
		Web Services on Devices for Scanning
		*Option
		BW: 1 bit (MH, MR, MMR, JBIG2*), Grayscale (JPEG)
Compression Method:		*PDF format only
		Color: JPEG
Scan Mode:		BW: BW Text/Line Art, BW Text, BW Text/Photo, BW Photo, BW Grayscale
		Color: FC Text/Photo, FC Glossy Photo, ACS(Auto Color Selection)
Image Density:		Auto Density Selection(Effective in BW/Grayscale and FC scan mode)
		Manual: 7 levels (Effective in BW/Grayscale and FC scan mode)
Image Rotation:		Yes
SADF/Batch Mode:		Yes
Mixed Size Mode:		Yes
Reduce and Enlarge:		Yes
Split scan from Booklet type Original:		Yes
Digital Signature for PDF:		Yes
C. I D. TIEF	On	BW 1bit / (MH, MR or MMR)
Single Page TIFF:	Off	BW 1bit, BW Grayscale or Full Color
Multi Page TIEE	On	BW 1bit /(MH, MR or MMR)
Multi Page TIFF:	Off	BW 1bit, BW Grayscale or Full Color
Single Page JPEG:	On	BW Grayscale or Full Color / (JPEG)
Single Lage JLLG.	Off	-

Item		Spec.
Single Page PDF:	On	BW 1bit / (MH, MR, MMR or JBIG2), BW Grayscale / (JPEG), Full Color / (JPEG)
	Off	BW 1bit, BW Grayscale or Full Color
Multi PagePDF:	On	BW 1bit / (MH, MR, MMR or JBIG2), BW Grayscale / (JPEG), Full Color / (JPEG)
	Off	BW 1bit, BW Grayscale or Full Color
Single Page High	On	BW Grayscale / (JPEG or JPEG2000), Full Color / (JPEG or JPEG2000)
Compression PDF:	Off	-
Multi Page High	On	BW Grayscale / (JPEG or JPEG2000), Full Color / (JPEG or JPEG2000)
Compression PDF:	Off	-
Single Page PDF-A:	On	BW 1bit / (MH, MR, MMR or JBIG2), BW Grayscale / (JPEG), Full Color / (JPEG)
	Off	BW 1bit, BW Grayscale or Full Color
Multi Page PDF-A:	On	BW 1bit / (MH, MR, MMR or JBIG2), BW Grayscale / (JPEG), Full Color / (JPEG)
	Off	BW 1bit, BW Grayscale or Full Color

#### Scan to Email

Item	Spec.
Requirement (Mail Protocol, Transmission Protocol, Protocol):	SMTP (Mail Server) Gateway, POP, IMAP4
Authorization Function:	SMTP authentication, POP before SMTP authentication
Resolution:	100, 200 (Default), 300, 400, 600
Max Email Address in HDD:	2,000
Register Group Address in HDD:	Max. 100 Group (Max. 500 addresses in one group address)
Input of Destination E-mail Address via Soft Key:	Possible, Max. 100 destinations per job

Item	Spec.
Search methods of Email Address in HDD:	Direct input on operation panel, Web Image Monitor, Smart Device Monitor for Admin
LDAP Search:	Yes
Max Address Numbers Per Send:	Max. 500 addresses per send
	From HDD: Max 500
Address Numbers Per Send:	Direct Print: Max 100*
	Via LDAP: Max 100*
Simultaneous Transmission:	Max. 550
Attention:	To, cc, bcc
Email Size:	With Restriction: 128 – 102,400 KB
Email Size:	Without Restriction: 2,000 MB
	Manual:
	Max. 128 Characters via soft key (1 byte: up to 128 characters, 2 byte: up to 64 characters)
Input Subject:	User Pre-register:
	22 subjects.
	Max. 20 Characters per a subject (1 byte: up to 20 characters, 2 byte: up to 10 characters)
	Manual:
	Max. 80 Characters via soft key (1 byte: up to 80 characters, 2 byte: up to 40 characters)
	User Pre-register:
Input Main body text:	Max. 400 Characters via soft key (80 characters x 5 lines)
	(1 byte: up to 400 characters, 2 byte: up to 200 characters)
	Preset:
	Yes
Input File Name:	Yes

Item	Spec.
File Type:	Single Page:
	TIFF/ JPEG/ PDF/ PDF-A/ High Compression PDF, encryption PDF, OCR*
	Multi Page:
	TIFF/ PDF/ PDF-A/ High Compression PDF, encryption PDF, OCR*
	*Option required
Program User Settings:	Up to 25 programs
Divide and send Email (If the file size exceed the max size.):	Yes (By page or size) / No, Default = Yes(By size)*  *If the sent file size exceeded the maximum E-mail size, it would be divided to multiple sending. In addition, the sent files might not be accepted by the receiving side due to the limitation in the receiving capacity at the receiver SMTP server or E-mail software setting.
Resend:	Yes / No, Default = Yes

#### Scan to Folder

Item	Spec.
Protocol Support:	SMB, FTP, NCP*
	*Option
Security:	Client folder log-in (log-in name and password), Encryption of log-in name and password during transmission
Resolution:	100 dpi, 200 dpi (default), 300 dpi, 400 dpi, 600 dpi
Register client folder address in HDD:	Max. 2,000 folders
Maintain client folder address in HDD:	Direct input on operation panel, Web Image Monitor, Smart Device Monitor

Item	Spec.
Direct addressing of destination client folder via soft key:	Yes  SMB: Network path -> Client folder -> Password  FTP: Server -> Network path -> User account -> Password  NCP: Network path -> User account -> Password -> Bindery or  NDS
Search client folder:	SMB: Browsing directly to the designated folders  FTP: By client folder name  NCP: Browsing (*Optional)
Homefolder over LDAP:	Yes
Max. client folder numbers per send:	Max. 50 client folders / PCs per send
Simultaneous Transmission:	Max. 550
Group address:	Max. 500 destinations (Folder destination must be less than 50) e.g. 500 destinations (50 folders included) >OK 500 destinations (51 folders included) >Failure
Input File Name:	Yes
Input Subject:	Max. 128 Characters via soft key (1 byte: up to 128 characters, 2 byte: up to 64 characters)
Scan to File size	2,000
File Size when combined Scan to Folder & Scan to E-mail:	128 - 102, 400 KB, Default = 2,048 KB (With restriction) 725MB (Without restriction), (Scan to E-mail file size applied).
File Type:	Single Page TIFF/JPEG/PDF/PDF-A/High Compression PDF, encryption PDF, OCR* Multi Page TIFF/PDF/PDF-A/High Compression PDF, encryption PDF, OCR* *Option required

Item	Spec.
Program User Settings:	Up to 25 programs
Resend:	Yes (Default) / No

#### **Network TWAIN Driver**

Item		Spec.			
OS:		32bit/64bit: Windows XP, Vista, 7, 8, Server 2003/2008 64bit: Windows Server 2008R2, Server 2012 (Operates in 32-bit compatibility mode on 64-bit operating systems)			
Scanning Speed:	BW	ARDF: 72 (A4 200dpi) / 71 (LT 200dpi) SPDF: 104 (A4 200dpi) / 103 (LT 200dpi)			
Color		ARDF: 72 (A4 200dpi) / 71 (LT 200dpi) SPDF: 104 (A4 200dpi) / 103 (LT 200dpi)			
Resolution:	BW:	100 – 1200 dpi (Black and White / Grayscale)			
	Color:	100 – 1200 dpi (Full Color)			
Scan Mode:	'	Standard / Photo / OCR / Filing			
Image Adjustment:		Brightness / Contrast / Threshold / Gamma Adjustment / Halftone Pattern			
Endorser:		Supported.  Date / Page Number / Text			
Stamp:		Supported			

# **Supported Paper Sizes**

### **Original Size Detection**

#### Remarks:

Υ	Yes; available	
-	Not available	

C' /\A/1\ [1	1	<b>NA</b>	EU/Asia		
Size (W x L) [mm]	Book	ADF	Book	ADF	
A3 SEF (297 x 420)	-	Y	Y*4	Y	
B4 SEF (257 x 364)	-	-	Y*4	Y	
A4 SEF (210 x 297)	γ*5	Y	γ*4, 5	Y	
A4 LEF (297 x 210)	γ*5	Y	γ*4, 5	Y	
B5 SEF (182 x 257)	-	-	Y*4	Y	
B5 LEF (257 x 182)	-	-	Y*4	Y	
A5 SEF (148 x 210)	-	-	γ*2, 4	Y	
A5 LEF (210 x 148)	-	-	Y*4	Y	
B6 SEF (128 x 182)	-	-	-	Y	
B6 LEF (182 x 128)	-	-	-	Y	
DLT SEF (11" x 17")	Y	Y*Db	-	Y*Df	
LG SEF (8 <sup>1</sup> / <sub>2</sub> " x 14")	Y	γ*Dc	-	-	
LT SEF (8 <sup>1</sup> / <sub>2</sub> " x 11")	γ*5	γ*Dd	γ*5	Y*Dg	
LT LEF (11" x 8 <sup>1</sup> / <sub>2</sub> ")	γ*5	γ*De	γ*5	Y*Dh	
HLT SEF (5 <sup>1</sup> / <sub>2</sub> " x 8 <sup>1</sup> / <sub>2</sub> ")	γ*2	Y	-	-	
HLT LEF $(8^{1}/_{2}" \times 5^{1}/_{2}")$	Y	Y	-	-	
F SEF (8" x 13")	-	-	γ*\$3	γ*\$3	

и

C: (\A/ 1) []	٨	IA	EU/Asia		
Size (W x L) [mm]	Book	ADF	Book	ADF	
Foolscap SEF (8 <sup>1</sup> / <sub>2</sub> " x 13")	-	γ*Sc	γ*D3	γ*D3	
Folio SEF (8 <sup>1</sup> / <sub>4</sub> " x 13")	-	-	γ*\$3	γ*\$3	
Folio SEF (11" x 15")	-	Y*Sb	-	-	
Folio SEF (10" x 14")	-	Y	-	-	
Folio SEF (8" x 10")	-	Y*Sd	-	-	
US EXE SEF $(7^{1}/_{4}" \times 10^{1}/_{2}")$	-	Y	-	-	
US EXE LEF $(10^{1}/_{2} \times 7^{1}/_{4}")$	-	γ*Se	-	-	
8K SEF (267 x 390)	-	-	γ*4	Y*Sf	
16K SEF (195 x 267)	-	-	γ*4	γ*Sg	
16K LEF (267 x 195)	-	-	γ*4ν	Y*Sh	

Sizes with letters (a, b, c) means only either size with the corresponding letter can be selected for size detection. "D" is for default set sizes, and when setting "S" sizes for size detection from SP mode, "D" sizes can no longer be detected.

(\*2)For detected originals smaller then A5 size, with SP mode either "detect as A5" or "Detect as Unknown" can be selected. (Default is "Detect as unknown")

(\*3)F Sizes  $(8.5" \times 13" \text{ SEF}, 8.25" \times 13" \text{ SEF}, 8" \times 13" \text{ SEF})$  will be available by SP mode settings.

(\*4)Switch Book scanner original detection between "K" series and "A/B" series from SP mode.

(Can not set both to detect, but 8K/16K detect can de set from SO mode)

8K SEF -> Switch between A3, B4 SEF

16K SEF -> Switch between A4, A5, B5 SEF

16K LEF -> Switch between A4, A5, B5 LEF \*Can not switch only either size.

(\*5)Can be selected with switching A4/LT from SP mode:

- Standard detect (default)
- When placing A4/LT size LEF, detect as A4 LEF. When placing SEF, detect as LT SEF.
- When placing A4/LT size LEF, detect as LT LEF. When placing SEF, detect as A4 SEF.

#### Remarks:

Α Auto detectable. Also can be selected with size button of initial setting. В Can be selected with size button from initial setting. C Select this size by setting the dial. Set dial to "\*", then select with size button from initial setting. D Bypass setting Ε Copy window/Bypass/Standard size/Size select or select with the print bypass paper size/ size button from initial setting. Select with SP from preset paper sizes. F Can not be selected from printer driver. Switches which size to set as auto detect with SP. \*Example: The combination of A1-G1. G (When not auto detectable) will be as same as B. G Combinations are only made from same region same tray. \*Example: The combination of G1 and J1. G (When not auto detectable) will be as same as E. Combinations are only made from same region same tray. Н Size fixed when shipping. Bypass setting 1 With bypass tray, after 1st sheet trailing edge goes through, auto detects size, then fixed to size detected from the 2<sup>nd</sup> sheet. Bypass setting Auto detect of Copy window/Bypass/Standard size/Select with size button. Select with SP from preset paper sizes. Κ Can be selected from printer driver. Not available Even the paper size is in the range or available sizes for duplex, envelopes can not be done \* 1 so.

1

Tray 1 through 3

Size (W x L) [mm]	Tray 1		Tray 2		Tray 3/4 1 drawer /2 drawers bank	
Region (EU/AA)	NA	EU/AA	NA	EU/AA	NA	EU/AA
A3 SEF	G2	A2	G2	A2	G2	A2
A4 SEF	А	Α	Α	A	Α	Α
A4 LEF	G1	A1	G1	A1	G1	A1
A5 SEF	В	В	В	В	В	В
A5 LEF	А	А	Α	А	Α	А
A6 SEF	В	В	В	В	В	В
B4 SEF	G3	А3	G3	А3	G3	А3
B5 SEF	А	А	Α	A	Α	А
B5 LEF	G4	A4	G4	A4	G4	A4
B6 SEF	В	В	В	В	В	В
DLT SEF	A2	G2	A2	G2	A2	G2
Legal SEF	A3	G3	А3	G3	А3	G3
Foolscap SEF	В	В	В	В	В	В
Letter SEF	А	А	Α	A	Α	Α
Letter LEF	A1	G1	A1	G1	A1	G1
GovernmentLG SEF	В	В	В	В	В	В
Folio SEF	В	В	В	В	В	В
F/GL SEF	В	В	В	В	В	В
Eng Quatro SEF	В	В	В	В	В	В
Executive SEF	В	В	В	В	В	В
Executive LEF	A4	G4	A4	G4	A4	G4

Ш

Size (W x L) [mm]	Tray 1		Tray 2		Tray 3/4 1 drawer /2 drawers bank	
Region (EU/AA)	NA	EU/AA	NA	EU/AA	NA	EU/AA
Half Letter SEF	В	В	В	В	В	В
Com10 SEF	В	В	В	В	В	В
Com 10 LEF	В	В	В	В	В	В
Monarch SEF	В	В	В	В	В	В
Monarch LEF	-	-	-	-	-	-
C5 SEF	В	В	В	В	В	В
C5 LEF	В	В	В	В	В	В
C6 SEF	В	В	В	В	В	В
C6 LEF	В	В	В	В	В	В
DL Env SEF	В	В	В	В	В	В
DL Env LEF	В	В	В	В	В	В
8K SEF	В	В	В	В	В	В
16K SEF	В	В	В	В	В	В
16K LEF	В	В	В	В	В	В
12x18 SEF	-	-	-	-	-	-
11x15 SEF	В	В	В	В	В	В
10x14 SEF	В	В	В	В	В	В

**Bypass Trays** 

Size (W x L) [mm]	Bypass		One Action Bypass	
Region (EU/AA)	NA EU/AA		NA	EU/AA
A3 SEF	E	J	E	J
A4 SEF	Е	J	J	J

Size (W x L) [mm]	Bypass		One Act	ion Bypass
Region (EU/AA)	NA	EU/AA	NA	EU/AA
A4 LEF	Е	J	J	J
A5 SEF	E	J	J	J
A5 LEF	E	J	J	J
A6 SEF	E	J	E	E
B4 SEF	E	J	J	J
B5 SEF	E	J	J	J
B5 LEF	E	J	J	J
B6 SEF	J	E	J	J
DLT SEF	G1	E	G1	E
Legal SEF	E	E	E	E
Foolscap SEF	J1	E	J1	E
Letter SEF	J	E	J	J
Letter LEF	E	E	E	E
Gov. LG SEF	E	E	E	E
Folio SEF	E	E	J	J
F/GL SEF	E	E	E	E
Eng Quatro SEF	E	E	E	E
Executive SEF	E	E	J	J
Executive LEF	J	E	J	J
Half Letter SEF	E*1	E*1	E*1	E*1
Com10 SEF	E*1	E*1	J*1	J*1
Com10 LEF	E*1	E*1	E*1	E*1
Monarch SEF	E*1	E*1	J*1	J*1
Monarch LEF	E*1	E*1	E*1	E*1

Size (W x L) [mm]	Bypass		One Act	ion Bypass
Region (EU/AA)	NA	EU/AA	NA	EU/AA
C5 SEF	E*1	E*1	J3*1	J3*1
C5 LEF	E*1	E*1	E*1	E*1
C6 SEF	E*1	E*1	J*1	J*1
C6 LEF	E*1	E*1	E*1	E*1
DL Env SEF	E*1	E*1	J*1	J*1
DL Env LEF	E	E	J	J
8K SEF	Е	Е	E	Е
16K SEF	Е	E	E	Е
16K LEF	J	E	J	J
12x18 SEF	Е	E	E	E
11x15 SEF	Е	E	J	J
10x14 SEF	Е	J	E	J

## Paper Exit

### Main Unit Tray, 1 Bin Tray, Shift Tray, Side Tray

C: (\\d\ 1) [1	Main Unit Tray	1 Bin Tray	Shift Tray		Side Tray	
Size (W x L) [mm]	Main unit tray	Upper tray	shift	shifting	Bridge upper exit	Side tray
A3 SEF	А	А	Α	Α	А	А
A4 SEF	А	А	Α	Α	А	А
A4 LEF	А	А	Α	Α	А	А
A5 SEF	А	А	А	Α	Α	А

C: /\/  \\	Main Unit Tray	1 Bin Tray	Shi	ft Tray	Side Tray	
Size (W x L) [mm]	Main unit tray	Upper tray	shift	shifting	Bridge upper exit	Side tray
A5 LEF	А	А	А	Α	А	Α
A6 SEF	А	B*1	Α	Α	А	Α
B4 SEF	А	А	Α	Α	А	Α
B5 SEF	А	А	Α	Α	Α	А
B5 LEF	А	А	А	Α	Α	А
B6 SEF	А	B*1	А	Α	Α	Α
DLT SEF	А	А	Α	Α	А	Α
Legal SEF	А	А	Α	Α	А	Α
Foolscap SEF	А	А	Α	Α	А	Α
Letter SEF	А	А	Α	Α	Α	Α
Letter LEF	А	А	Α	Α	А	Α
Gov. LG SEF	А	А	Α	Α	А	Α
Folio SEF	А	А	Α	Α	Α	Α
F/GL SEF	А	А	Α	Α	А	Α
Eng Quatro SEF	А	А	Α	Α	А	Α
Executive SEF	А	А	А	Α	А	Α
Executive LEF	А	А	А	Α	А	Α
Half Letter SEF	А	А	Α	Α	А	Α
Com10 SEF	А	B*1	Α	Α	А	Α
Com10 LEF	А	B*1	Α	Α	A*1,2,3	-
Monarch SEF	А	B*1	А	Α	А	Α
Monarch LEF	А	B*1	Α	А	A*1,2,3	-

Ш

C: //A/ 1 \ []	Main Unit Tray	1 Bin Tray	Shil	t Tray	Side Tray	
Size (W x L) [mm]	Main unit tray	Upper tray	shift	shifting	Bridge upper exit	Side tray
C5 SEF	А	B*1	Α	Α	А	А
C5 LEF	А	B*1	Α	Α	Α	Α
C6 SEF	А	B*1	Α	Α	А	Α
C6 LEF	А	B*1	Α	Α	A*1,2,3	-
DL Env SEF	А	B*1	Α	Α	А	Α
DL Env LEF	А	B*1	Α	Α	A*1,2,3	-
8K SEF	А	А	Α	Α	А	Α
16K SEF	А	А	Α	Α	А	Α
16K LEF	А	Α	Α	Α	Α	Α
12x18 SEF	А	B*1	А	Α	А	Α
11x15 SEF	А	А	А	Α	А	Α
10x14 SEF	А	Α	Α	А	Α	Α

#### Remarks:

Α	Paper through, paper exit available.
В	Will not guarantee, but paper can go through or exit.
-	Not available.

* 1	Out of the true up precision guarantee.
*2	Envelopes can only go through each at a time.
*3	Except envelops with triangle flap.

#### 1

## **Software Accessories**

The printer drivers and utility software are provided on one CD-ROM. An auto-run installer allows you to select which components to install.

Y = Supported; N = Not Supported

#### **Printer Drivers**

#### **Windows Environment**

OS	Туре	PCL5e	PCL6	PostScript3	XPS
Windows	Professional	N	N	N	N
2000	Server	N	N	N	N
	Advanced Server	N	N	N	N
	Datacenter Server	N	N	N	N
Windows XP	Professional	Y	Y*2	Y*2	N
	Home Edition	Y	Y*2	Y*2	N
Windows Vista	Starter	N	N	N	N
	Home Basic	Y	Y*1	Y*1	Y*1
	Home Premium	Y	Y*1	Y*1	Y*1
	Business	Y	Y*1	γ*1	Y*1
	Ultimate	Y	Y*1	γ*1	Y*1
	Enterprise	Y	Y*1	γ*1	Y*1

OS	Туре	PCL5e	PCL6	PostScript3	XPS
Windows 7	Starter	N	N	N	N
	Home Basic	N	N	N	N
	Home Premium	Y	Y	Υ	Y
	Professional	Y	Υ	Y	Y
	Ultimate	Y	Y	Y	Y
	Enterprise	Y	Y	Y	Y
Windows 8	Windows 8	Y	Y	Y	Y
	Pro	Y	Y	Y	Y
	Enterprise	Y	Y	Y	Y
	RT	N	N	N	N
Windows	Standard Edition	Y*3	Y	Y	N
Server 2003	Enterprise Edition	Y*3	Y	Y	N
	Datacenter Edition	N	N	N	N
	Web Edition	N	N	N	N
Windows	Standard Edition	Y*3	Y	Y	N
Server 2003 R2	Enterprise Edition	Y*3	Y	Y	N
	Datacenter Edition	N	N	N	N
Windows	Standard Edition	Y	Y	Y	Y
Server 2008	Enterprise Edition	Y	Y	Y	Y
	Datacenter Edition	N	N	N	N
	Web Edition	N	N	N	N
Windows	Standard Edition	Y	Y	Y	Y
Server 2008R2	Enterprise Edition	Y	Y	Y	Y
	Datacenter Edition	N	N	N	N
	Web Edition	N	N	N	N

OS	Туре	PCL5e	PCL6	PostScript3	XPS
Windows Server 2012	Foundation	Υ	Υ	Υ	Υ
	Essentials	Y	Υ	Υ	Y
	Standard	Y	Y	Y	Y
	Datacenter	N	N	N	N

<sup>\*</sup>RPCS driver has been discontinued.

#### **Point and Print**

Windows OS		Drivers					
Server	Client(Push to)	PCL5e	PCL6	PostScript3	XPS		
Windows Server	7	Y	Y	Υ	N		
2003 /2003 R2	8	Y	Y	Y	N		
	Vista	Y	Y	Y	N		
	XP	Y	Y	Y	N		
	W2K Pro	N	N	N	N		
Windows Server	7	Y	Y	Y	Y		
2008	8	Y	Y	Y	Y		
	Vista	Y	Y	Y	Y		
	XP	Y	Y	Y	N		
	W2K Pro	N	N	N	N		

<sup>\*1:</sup>SP1 or later is recommended

 $<sup>^{*2}</sup>$ :SP3 or later (Windows XP Professional x64 Edition recommended to  $^{*3}$ )

<sup>\*3:</sup>SP2 or later is recommended

Windows OS			Drive	ers	
Server	Client(Push to)	PCL5e	PCL6	PostScript3	XPS
Windows Server	7	Y	Y	Y	Υ
2008R2	8	Y	Y	Y	Y
	Vista	Y	Y	Y	Y
	XP	Y	Y	Y	N
	W2K Pro	N	N	N	N
Windows 2000	7	N	N	N	N
Professional Server &	8	N	N	N	N
Advanced Server	Vista	N	N	N	N
	XP	N	N	N	N
	W2K Pro	N	N	N	N
Windows XP	7	Y	Y	Y	N
Professional	8	Y	Y	Y	N
	Vista	Y	Y	Y	N
	XP	Y	Y	Y	N
	W2K Pro	N	N	N	N
Windows Vista	7	Y	Y	Y	Y
	8	Y	Y	Y	Y
	Vista	Y	Y	Y	Y
	XP	Y	Y	Y	N
	W2K Pro	N	N	N	N

Windows OS		Drivers					
Server	Client(Push to)	PCL5e	PCL6	PostScript3	XPS		
Windows 7	7	Y	Y	Y	Y		
	8	Y	Y	Y	Y		
	Vista	Y	Y	Y	Y		
	XP	Y	Y	Y	N		
	W2K Pro	N	N	N	N		
Windows 8	7	Y	Y	Y	Y		
	8	Y	Y	Y	Y		
	Vista	Y	Y	Y	Y		
	XP	Y	Y	Y	N		
	W2K Pro	N	N	N	N		
Windows Server	7	Y	Y	Y	Y		
2012	8	Y	Y	Y	Y		
	Vista	Y	Y	Y	Y		
	XP	Y	Y	Y	N		

#### Mac OS and UNIX Environment

#### Mac OS

OS	PostScript3	Printer Utility for Mac
Mac OS 8.6 or later, Mac OS X classic	N	N
Mac OS X Native: v.10.6 or later	Y	N

### Supported platforms for Unix filter

Platforms	Version
Sun Solaris	9, 10
HP-UX	11.x, 11iv2, 11iv3

Platforms	Version
Red Hat Linux	Enterprise V4, V5, V6
SCO OpenServer	5.0.7, 6.0
IBM AIX	V 5L, V5.3, V6.1, V7.1

#### Scanner and LAN Fax Drivers

Operating System	Driver	
	TWAIN*9	LAN-FAX
Windows XP*1*6	Y	Υ
Windows Vista*2*6	Y	Y
Windows 7*3*6	Y	Y
Windows 8 <sup>*6*7</sup>	Y	Y
Windows 8.1	Y	Y
Windows Server 2003*4*6	Y	Υ
Windows Server 2008*5*6	Y	Υ
Windows Server 2012 <sup>*8</sup>	Y	Y
Macintosh	N	N

<sup>\* 1</sup> Microsoft Windows XP Professional Edition / Home Edition / Media Center Edition / Tablet PC Edition

<sup>\*2</sup> Microsoft Windows Vista Ultimate / Enterprise / Business / Home Premium / Home Basic

<sup>\*3</sup> Microsoft Windows 7 Home Premium / Professional / Ultimate / Enterprise

<sup>\*4</sup> Microsoft Windows Server 2003 Standard Edition / Enterprise Edition / Microsoft Windows Server 2003 R2 Standard Edition / Enterprise Edition

<sup>\*5</sup> Microsoft Windows Server 2008 Standard / Enterprise / Microsoft Windows Server 2008 R2 Standard / Enterprise

<sup>\*6</sup> Supports both 32bit, 64bit (Scanner driver works on 32bit compatible mode)

<sup>\*7</sup> Microsoft Windows 8 (Core Edition) / Pro / Enterprise

<sup>\*8</sup> Microsoft Windows Server 2012 Standard / Datacenter / Essentials

f

\*9 TWAIN scanner runs on a 64-bit operating system, but is not compatible with 64-bit applications. Use it with 32-bit applications.



- With LAN-FAX driver, sending documents directly from PC will be available.
- Also Address Book Editor and Cover Sheet Editor will installed along.
- Network TWAIN driver will be provided on the scanner driver CD-ROM.

# **Optional Equipment**

### Paper Feed Unit PB3210/PB3220 (D787)

ltem	Description
Number of Trays:	2
Paper Size:	12 x 18 / DLT SEF – A5 LEF
Paper Weight:	60 -300 g/m² (16 - 80 lb.)
Paper Capacity (80 g/m², 20 lb. Bond):	1100 sheets (550 sheets × 2 trays with 80g/m² paper)
Power Consumption:	Less than 21 W (Average)
Dimension (W x D x H):	587 × 685 × 247 mm (23.2 × 27.0 × 9.8 inches)
Weight:	20.1 kg (44.3 lb.)

### Paper Feed Unit PB3150 (D694)

ltem	Description
Paper Size:	12 x 18 / DLT SEF – A5 LEF
Paper Weight:	52 - 300 g/m <sup>2</sup> (14 - 80 lb.)  * Complies with specification of the mainframe
Paper Output Capacity:	550 sheets (550 sheets x 1 tray with 80 g/m <sup>2</sup> paper)
Power Consumption:	Less than 19 W (Average)
Dimension (W x D x H):	587 x 685 x 120 mm (13.1 x 27.0 x 4.7 inches)
Weight:	10.9 kg (24 lb.)

1

### LCIT PB3170/PB3230 (D695)

ltem	Description
Paper Size:	A4/LT LEF
Paper Weight:	52 – 300 g/m² (14 – 80 lb.)  * Complies with specification of the mainframe
Paper Output Capacity:	2000 sheets (1000sheets x 2 trays)  * Paper thickness: 0.1 mm. Auto paper detection in the left tray: Minimum 30 sheets.
Power Consumption:	Less than 15 W
Dimension (W x D x H):	587 x 685 x 247 mm (13.1 x 27.0 x 9.7 inches)
Weight:	20 kg (44.1 lb.)

### LCIT RT3030 (D696)

ltem	Description
Paper Size:	A4/LT LEF, B5 LEF
Paper Weight:	52 - 300 g/m² (14 - 80 lb.)
	* Complies with specification of the mainframe
Paper Output Capacity:	1500 sheets
	* Paper thickness: 0.1 mm.
Power Consumption:	Less than 13 W
Dimension (W x D x H):	340 x 544 x 290 mm (13.4 x 21.4 x 11.7 inches)
Weight:	9.8 kg (21.6 lb.)

## Caster Table Type B (D178)

Item	Description
Dimension (W x D x H):	565 x 550 x 80 mm (22.2 x 21.7 x 3.2 inches)

Item	Description
Weight:	7.5 kg (16.5 lb.) or less

## Platen Cover PN2000 (D700)

ltem	Description
Dimension (W x D x H):	561 x 497 x 63.8 mm (22.1 x 19.6 x 2.5 inches)
Weight:	2.3 kg (5.1 lb.) or less

## ARDF DF3090 (D779)

lte	em	Description
Original Size:	Simplex:	A3, A4, A5, B4, B5, B6 / DLT, LG, LT, HLT(11"*17" - 5.5"*8.5")
		Custom Paper:
		Vertical: 5.1"-11.7" / 128-297 mm
		Horizontal: 5.1"- 49.6" / 128 - 1, 260 mm)
		*Image quality of custom paper is not guaranteed.
	Duplex:	A3, A4, A5, B4, B5 / LG, LT, HLT, DLT (8.5" × 14" – 5.5"*8.5")
Original	Simplex:	40 – 128 g/m² (10.7 – 34.1 lb.)
Weight: Duplex:	Duplex:	52.3 – 128 g/m² (13.9 – 34.1 lb.)
Stack Capacity:		100 sheets
Power Consump	otion:	42 W or less
Dimension (W x	( D x H):	565 x 500 x 125 mm (22.24 x 19.69 x 4.92 inches)
Weight:		8.2 kg (18.08 lb.) or less

### SPDF DF3080 (D683)

ltem		Description
Original Size:	Simplex:	A3, A4, A5, B4, B5, B6, DLT, LG, LT, HLT
	Duplex:	A3, A4, A5, B4, B5, DLT, LG, LT, HLT
Original Weight:	Simplex:	40 – 128 g/m² (10.7 – 34.1 lb.)
	Duplex:	52.3 - 128 g/m² (13.9 - 34.1 lb.)
Stack Capacity:		220 sheets
Power Consumption:		72.2 W or less
Dimension (W x D x H):		587 x 520 x 175 mm (23.11 x 20.47 x 6.89 inches)
Weight:		13.9 kg (30.64 lb.) or less

## Bridge Unit BU3070 (D685)

ltem	Description
Stack Capacity (80 g/m², 20 lb. Bond):	<ul> <li>250 sheets: A4, 81/2 x 11 or smaller</li> <li>125 sheets: B4 JIS, 81/2 x 14 or larger</li> </ul>
Power Consumption:	15 W or less
Dimensions (W x D x H):	412 x 466 x 143 mm (16.3 x 18.4 x 5.7 inches)
Weight:	Approx. 4 kg (8.9 lb.)

### 1 Bin Tray BN3110 (D692)

ltem	Description
Paper Size:	12.6"x17.7" - A5LEF, DLT SEF - HLT SEF
Paper Weight:	52 - 300 g/m² (14 - 80 lb.)
Paper Output Capacity:	125 sheet with 80 g/m² paper
Power Consumption:	Max 0.15 W

ltem	Description
Dimension (W x D x H):	444 x 450 x 150 mm (17.5 x 17.7 x 5.9 inches)
Weight:	1.4 kg (3.1 lb.)

## Internal Shift Tray SH3070 (D691)

ltem	Description
Paper Size:	320 x 600 mm or smaller *320 x 1260 mm by using SP mode.
Paper Weight:	52 - 300 g/m² (14 - 80 lb.)
Paper Output Capacity:	250 sheets with 80 g/m2 paper (A4, LT or smaller) 125 sheets with 80 g/m2 paper (B4, LG or smaller)
Power Consumption:	Max. 4.3 W
Dimension (W x D x H):	420 x 489 x 107 mm (16.5 x 19.3 x 4.2 inches)
Weight:	1.4 kg (3.09 lb.) or less

## Side Tray Type M3 (D725)

ltem	Description
Paper Size:	Internal Tray:
	320 x 600 mm or smaller
	320 x 1260 mm by using SP mode
	Left side:
	320 x 457.2 mm or smaller
Paper Weight:	52 - 300 g/m² (14 - 80 lb.)

ltem	Description
Paper Output Capacity:	Internal Tray:
	250 sheets with 80 g/m <sup>2</sup> paper (A4, LT)
	125 sheets with 80 g/m <sup>2</sup> paper (B4, LG)
	Left side:
	125 sheets with 80 g/m <sup>2</sup> paper
Power Consumption:	12 W
Dimension (W x D x H)	800 x 549 x 156 mm (31.5 x 21.7 x 6.2 inches)
Weight:	3.8 kg (8.4 lb.)

## Booklet Finisher SR3170 (D688) / Finisher SR3160 (D689)

ltem		Description
Paper Size:		A3 SEF – A5, B6 SEF, A6 SEF, 12" x 18" SEF, HLT – DLT SEF, SRA3 SEF
		Custom size: 90 x 139.7 – 330.2 x 487.7 mm
		*Shift supports 125 x 139.7mm - 12" x 18".
Paper Weight:	Proof Tray:	52 - 220 g/m² (14 - 58.7 lb.)
	Shift Tray:	52 - 300 g/m² (14 - 80 lb.)

lte	em	Description
Stack	Proof Tray:	250 sheets : A4, LT or smaller
Capacity:		50 sheets: B4, LG or larger
	Shift Tray:	[D688]
		2000 sheets: A4 LEF, LT LEF
		<b>1,000 sheets:</b> A3 SEF, A4 SEF, B4 SEF, B5, DLT SEF, LG SEF, LT SEF, 12"x18" SEF, SRA3 SEF
		500 sheets: A5 LEF
		100 sheets: A5 SEF, B6 SEF, A6 SEF, HLT SEF
		*Paper size not listed above:
		1,000 sheets: Length: 182 – 488 mm
		<b>500 sheets:</b> Length: 148 – 182 mm
		[D689]
		3,000 sheets:A4 LEF, LT LEF
		<b>1,500 sheets:</b> A3 SEF, A4 SEF, B4 SEF, B5, DLT SEF, LG SEF, LT SEF, 12"x18" SEF, SRA3 SEF, 13" x 19.2" SEF
		500 sheets:A5 LEF
		100 sheets:A5 SEF, B6 SEF, A6 SEF, HLT SEF
		*Paper size not listed above:
		<b>1,500 sheets:</b> Length: 182 – 488 mm
		<b>500 sheets:</b> Length: 148 – 182 mm

lte	em	Description
Stack Capacity:	Normal Staple Sort:	[D688] 2-12 sheets/set A4/LT LEF: No. of sets: 150 set Max Stack Capacity: 2,000 sheets 13-50 sheets/set A4/LT LEF: No. of sets: 150-40 set Max Stack Capacity: 2,000 sheets 2-9 sheets/set A4/LT SEF, B5: No. of sets: 100 set Max Stack Capacity: 1,000 sheets 10-50 sheets/set A4/LT SEF, B5: No. of sets: 100-20 set Max Stack Capacity: 1,000 sheets 2-9 sheets/set Paper size not listed above:
		No. of sets: 100 set  Max Stack Capacity: 1,000sheets
		10-50 sheets/set Paper size not listed above:
		No. of sets: 100-20 set  Max Stack Capacity: 1,000sheets

lte	em	Description
Stack	Normal Staple	[D689]
Capacity:	Sort:	2-9 sheets/set A4/LT LEF:
		No. of sets: 150 set
		Max Stack Capacity: 3,000 sheets
		20-50 sheets/set A4/LT LEF:
		No. of sets: 150-60 set
		Max Stack Capacity: 3,000 sheets
		2-14 sheets/set A4/LT SEF, B5:
		No. of sets: 100 set
		Max Stack Capacity: 1,500 sheets
		15-50 sheets/set A4/LT SEF ,B5:
		No. of sets: 100-30 set
		Max Stack Capacity: 1,500 sheets
		2-14 sheets/set Paper size not listed above:
		No. of sets: 100 set
		Max Stack Capacity: 1,500sheets
		15-50 sheets/set Paper size not listed above:
		No. of sets: 100-30 set
		Max Stack Capacity: 1,500sheets
Stack Capacity:	Mixed Size (D689 only):	<b>2-50 sheets:</b> A4 LEF and A3 SEF, B5 LEF and B4 SEF, LT LEF and DLT SEF
		No. of sets: 30set
	Saddle Stitch Staple Sort (D688 only):	2-5 sheets/set (No. of sets: 30 set)
		6-10 sheets/set (No. of sets: 15 set)
		11-15 sheets/set (No. of sets: 10 set)
		16-20 sheets/set (No. of sets: 6 set)

ltem	Description
Staple Capacity (80g/m2):	Normal Staple:
	Same Paper Size: 50 sheets
	Mixed Paper Size: 50 sheets (A4 LEF&A3 / B5 LEF&B4 / LT LEF&DLT SEF)
	Saddle Stitch Staple (D688 only):
	<b>20 sheets:</b> B5 – A3
Staple Paper Size:	Normal Staple: B5-A3 SEF / LT-DLT SEF
	Saddle Stitch Staple (D688 only): B5-A3 SEF / LT-DLT SEF / 12" x 18"
Staple Paper Weight:	<b>Normal Staple:</b> 52 – 105 g/m² (14 – 28 lb.)
	Saddle Stitch Staple (D688 only): 64 – 105 g/m² (17 – 28 lb.)
Staple Position:	Top, Bottom, 2 Staple, Top-slant
	Booklet (D688 only)
Staple Cartridge Capacity:	Normal Staple: 5,000 pins per cartridge
	Saddle Stitch Staple (D688 only): 2,000 pins per cartridge
Power Consumption:	<b>D688:</b> 59.3 W or less
	<b>D689:</b> 55.7 W or less
Dimension (W x D x H):	657 x 613 x 960 mm (25.87 x 24.13 x 37.8 inches)
Weight:	[D688]
	52.5 kg (115.7 lb.) or less
	56.5 kg (124.6 lb.) or less with Punch Unit
	[D689]
	33.5 kg (73.9 lb.) or less
	38.0 kg (83.8 lb.) or less with Punch Unit

### **Punch Unit PU3060 (D706)**

ltem		Description
Paper Size:	NA/2 Holes:	SEF: A5 - A3, HLT - DLT LEF: A5 - A4, HLT, LT
	NA/3 Holes:	SEF: B4, A3, DLT LEF: A4, B5, LT
	EU/4 Holes:	SEF: A3, B4, DLT LEF: A4, B5, LT
	SC/4 Holes:	SEF: A5 - A3, HLT - DLT LEF: A5 - A4, HLT, LT
Paper Weight:		52 - 256 g/m² (14 - 68 lb.)

### Booklet Finisher SR3150 (D686) / Finisher SR3140 (D687)

ltem		Description
Paper Size:		A3 SEF to A5, B6 SEF, A6 SEF, 12" x 18" SEF, HLT – DLT SEF, SRA3 SEF*
		Custom size: 90 x 139.7 – 330.2 x 600.0 mm
Paper Weight:	Proof Tray:	D686: 52 - 220 g/m² (14 -58.7 lb.) D687: 52 - 169 g/m² (14 - 45 lb.)
	Shift Tray:	52 - 300 g/m² (14 - 80 lb.)

П

lte	em	Description
Stack Capacity:	Proof Tray:	250 sheets: A4, LT or smaller
	,	50 sheets: B4, LG or larger
	Shift Tray:	[D686]
	,	3,000 sheets: A4 LEF, LT LEF
		<b>1,500 sheets:</b> A3 SEF, A4 SEF, B4 SEF, B5, DLT SEF, LG SEF, LT SEF, 12"x18" SEF, SRA3 SEF, 13" x 19.2" SEF
		500 sheets: A5 LEF
		100 sheets: A5 SEF, B6 SEF, A6 SEF, HLT SEF
		*Paper size not listed above:
		<b>1,500 sheets:</b> Length: 182 – 488 mm
		<b>500 sheets:</b> Length: 148 – 182 mm
		[D687]
		1000 sheets: A4, LT or smaller
		500 sheets: B4, LG or larger
Stack	Normal Staple	[D686]
Capacity:	Sort:	2-9 sheets/set A4/B5/LT LEF:
		No. of sets: 100 set
		10-50 sheets/set A4/B5/LT LEF:
		No. of sets: 100-20 set
		Max Stack Capacity: 1,000 sheets
		2-9 sheets/set A4/B5/LT SEF:
		No. of sets: 50set
		10-50 sheets/set A4/B5/LT SEF:
		No. of sets: 50-10 set
		Max Stack Capacity: 500 sheets
		2-9 sheets/set A3/B4/DLT/LG:
		No. of sets: 50 set
		10-30 sheets/set A3/B4/DLT/LG:
		No. of sets: 50-10 set
		Max Stack Capacity: 500 sheets

ltem		Description
Stack	Normal Staple	[D687]
Capacity:	Sort:	2-9 sheets/set A4/B5/LT LEF:
Stack		No. of sets: 100 set
Capacity:		10-50 sheets/set A4/B5/LT LEF:
		No. of sets: 100-20 set
		Max Stack Capacity: 1,000 sheets
		2-9 sheets/set A4/B5/LT SEF:
		No. of sets: 50 set
		10-50 sheets/set A4/B5/LT SEF:
		No. of sets: 50-10 set
		Max Stack Capacity: 500 sheets
		2-9 sheets/set A3/B4/DLT/LG:
		No. of sets: 50 set
		10-30 sheets/set A3/B4/DLT/LG:
		No. of sets: 50-10 set
		Max Stack Capacity: 500 sheets
	Mixed Size (D687 only):	<b>2-22 sheets:</b> A4 LEF and A3 SEF, B5 LEF and B4 SEF, LT LEF and DLT SEF (No. of sets: 22 set)
	Saddle Stitch	2-5 sheets/set (No. of sets: 20set)
	Staple Sort (D686 only):	6-10 sheets/set (No. of sets: 10set)
		11-15 sheets/set (No. of sets: 7set)
Staple Capacity	<u>'</u> :	Normal Staple:
, ,		2 – 50 sheets: A4/LT or smaller
		2 – 30 sheets: B4/LG or larger
		Saddle Stitch Staple (D686 only):
		15 sheets
Staple Paper Size:		Normal Staple:
· ·		A3 - B5, DLT - LT, 12" x 18"
		Saddle Stitch Staple (D686 only):
		12" x 18", A3 SEF, B4 SEF, A4 SEF, B5 SEF, DLT SEF, LG SEF, LT SEF

ltem	Description
Staple Paper Weight:	52 - 105 g/m² (14 - 28 lb.)
Staple Position:	Top, Bottom, 2 Staple Booklet (D686 only)
Staple Cartridge Capacity:	5,000
Power Consumption:	35.4 W or less
Dimension (W x D x H):	646 x 620 x 960 mm (25.4 x 24.4 x 37.8 inches)
Weight:	D686: 39.6 kg (87.3 lb.) D687: 27 kg (60 lb.)

## Punch Unit PU3050 (D717)

ltem		Description
Paper Size:	NA/2 Holes:	SEF: A5 - A3, HLT - DLT
		LEF: A5 - A4, HLT, LT
	NA/3 Holes:	SEF: B4, A3, DLT
		LEF: A4, B5, LT
	EU/4 Holes:	SEF: A3, B4, DLT
		LEF: A4, B5, LT
	SC/4 Holes:	SEF: A5 - A3, HLT - DLT
		LEF: A5 - A4, HLT, LT
Paper Weight:		52 - 256 g/m² (14 - 68 lb.)

## Internal Finisher SR3180 (D766)

Item	Description
Paper Size:	A3 – A6 SEF, DLT-HLT, 12.6" x 17.7", 12"x18"
	Custom size:
	90 – 320 mm x 148 – 1260 mm

ltem	Description
Paper Weight:	52 - 300 g/m² (14 - 80 lb.)
Stack Capacity:	Shift Tray:
	250 sheets: A4 LEF / B5 SEF, B5 LEF / LT SEF, LT LEF
	125 sheets: A3 SEF – A4 SEF / B4 SEF / LG SEF, DLT SEF
	Normal Staple Sort:
	2-5 sheets/set A4 LEF / LT LEF: No. of sets: 30 set
	2-5 sheets/set B5: No. of sets: 20set
	2-5 sheets/set A3 SEF – A4 SEF/ B4 SEF / DLT SEF, LT SEF: No. of sets: 15set
Staple Capacity:	2-5 sheets/set
Staple Paper Size:	A3 SEF – B5 SEF / DLT SEF – LT SEF
Staple Paper Weight:	64 - 80 g/m <sup>2</sup>
Staple Position:	Top, 1 staple
Power Consumption:	30 W or less
Dimension (W x D x H):	435 x 515 x 150 mm (17.1 x 20.3 x 5.9 inches)
Weight:	9.8 kg (21.6 lb.) or less

## Internal Finisher SR3130 (D690)

ltem	Description
Paper Size:	A3 – A6 SEF, DLT – HLT, 12.6" x 17.7", 12"x18"
	Custom size:
	90 – 320 x 148 – 1260 mm
Paper Weight:	52 - 300 g/m2 (14 - 80 lb.)

Item	Description
Stack Capacity:	Shift Tray:
	500 sheets: A4/LT or smaller
	250 sheets: B4/LG or larger
	Normal Staple Sort:
	2-9 sheets/set:A4/B5/LT LEF (No. of sets:55-46set)
	10-50 sheets/set:A4/B5/LT LEF (No. of sets: 45-10set)
	2-9 sheets/set:A4/B5/LT SEF (No. of sets: 55-27set)
	10-50 sheets/set:A4/B5/LT SEF (No. of sets: 25-8set)
	2-9 sheets/set:A3/B4/DLT/LG (No. of sets: 55-27set)
	10-30 sheets/set:A3/B4/DLT/LG (No. of sets: 25-8set)
Staple Capacity:	50 sheets
	30 sheets: A3, B4, DLT, LG, Foolscap, Government LG, Folio 8K, Mixed size
Staple Paper Size:	A3, B4, A4 SEF/LEF, B5 SEF/LEF, DLT, LG, LT SEF/LEF, Foolscap , Government LG, Folio, Executive SEF/LEF, 8K, 16K SEF/LEF
Staple Paper Weight:	$52 - 105 \text{ g/m}^2 (14 - 28 \text{ lb.})$
Staple Position:	Top, Bottom, 2 staple
Staple Cartridge Capacity:	5,000 pcs. / cartridge
Power Consumption:	47 W or less
	60 W or less with Punch Unit
Dimension (W x D x H):	546 x 523 x 170 mm (21.5 x 20.6 x 6.7 inches)
Weight:	12.8 kg (28.2 lb.) or less

### Punch Unit PU3040 (D716)

ltem		Description
Paper Size:	NA/2 Holes:	SEF: A3, A4, DLT, LG, LT, Foolscap, Executive LEF: A4, LT
	NA/3 Holes:	SEF: A3, DLT LEF: A4, LT
	EU/2 Holes:	SEF: A3, A4, B4, B5, DLT, LG, LT, Foolscap, Executive, 8K, 16K LEF: A4, B5, LT, 16K
	EU/4 Holes:	SEF: A3, DLT LEF: A4, LT
	SC/2 Holes:	SEF: A3, A4, B4, B5, DLT, LG, LT, Foolscap, Executive LEF: A4, B5, LT
Paper Weight:		52 - 163 g/m² (14 - 43 lb.)

1

# 2. Appendices:Preventive Maintenance Tables

# **Preventive Maintenance**

#### **Preventive Maintenance Items**



• The amounts mentioned as the PM interval indicate the number of prints.

Chart: A4/LT (LEF) / 6%

Mode:

D197/D198: 3 copies/original (prints/job)

D199/D200/D201/D202: 5 copies/original (prints/job)

Environment: Normal temperature and humidity

Yield may change depending on circumstances and print conditions.

Symbol keys: C: Clean, R: Replace, L: Lubricant, I: Inspect

#### Mainframe: D197/D198/D199

ltem	120K	240K	360K	EM	Life	Note
Reflector	-	C/I/L	-	-	-	Clean with an optics
1 st Mirror	-	C/I/L	-	-	-	cloth.
2nd Mirror	-	C/I/L	-	-	-	
3rd Mirror	-	C/I/L	-	-	-	
Exposure Glass	-	C/I/L	-	-	-	Clean with the RICOH's exposure glass cleaner.
	-	-	-	C/I/L		
Scanner Guide Rails	-	C/I/L	-	-	-	Clean with a dry Cloth.
ADF Exposure Glass	-	C/I/L	-	-	-	Clean with the RICOH's exposure glass cleaner.
	-	-	-	C/I/L		

RTB 47 Modified

ltem	120K	240K	360K	EM	Life	Note
Shield Glass	-	-	-	C/I/L		Clean with an optics Cloth.
Developer	R	-	-	-	-	Clear PM counter.
Development Roller	C/I/L	-	-	-	-	
Development Filter	R	-	-	-	-	Clear PM counter.
Development Case	C/I/L	-	-	-	-	Clean guide plate and spots where toner adheres.
Development Entrance Seal	C/I/L	-	-	C/I/L	-	Remove dust.
Development Mixing Auger Bearing		R				Clear PM counter.
Development Side Seal	R	-	-	-	-	
Doctor Blade	C/I/L	-	-	-	-	Remove adhering developer.
Charge Roller	R	-	-	-	-	Clear PM counter.
Charge Roller Cleaner	R	-	-	-	-	
Cleaning Blade	R	-	-	-	-	
Cleaning Blade Side Seal	C/I/L	-	-	-	-	
Cleaning Entrance Seal	C/I/L	-	-	-	-	
OPC Drum	R	-	-	-	-	Clear PM counter.
Pick-off Pawl	R	-	-	-	-	
Waste Toner Bottle	R	-	-	C/I/L	-	Replace when waste toner full is detected. Clear PM counter.

Item	120K	240K	360K	EM	Life	Note
Quenching Lamp	C/I/L	-	-	-	-	
PCL	C/I/L	-	-	-	-	
Transfer Unit	R	-	-	-	-	Clear PM counter.
Fusing Exit Guide	C/I/L	-	-	-	-	
ID Sensor	C/I/L	-	-	C/I/L	-	Use blower brush. Initialize ID sensor after Cleaning.
Heating Sleeve Belt Unit	-	R	-	-	260k	Clear PM counter.
Fusing Entrance Guide Plate	-	-	-	C/I/L	-	Remove adhering toner.
Fusing Exit Guide Plate	-	-	-	C/I/L	-	
Stripper Plate	-	-	-	C/I/L	-	
Pressure Roller	-	R	-		260k	Clear PM counter.
Pressure Roller Bearing	-	R	-		260k	Lubricate (FLUOTRIBO MG GREASE) after replace the bearing.
Thermopile	-	C/I/L	-	C/I/L	-	Clean with a dry cloth.
Pressure Roller Gear	-	-	-	C/I/L	-	Replace when the gear
Idler Gear	-	-	-	C/I/L	-	is worn out.
Fusing Entrance Sensor	C/I/L	-	-	C/I/L	-	Clean the sensor part with blower brush.
Fusing Exit Sensor	C/I/L	-	-	C/I/L	-	1
Registration Roller	-	-	-	С	-	Wipe with a cloth dampened with ethyl alcohol.

Item	120K	240K	360K	EM	Life	Note
Registration Sensor	-	-	-	С	-	Remove dust with dry cloth when sensor failure occurs.
Paper Dust Collection Unit	-	-	-	С	-	Remove dust when paper dust is full.
Vertical Transport Roller	-	-	-	С	-	Wipe with a cloth dampened with ethyl alcohol.
Vertical Transport Sensor	-	-	-	С	-	Remove dust with dry cloth.
Paper Feed Sensor	-	-	-	С	-	Remove dust with dry cloth when sensor failure occurs.
Paper Feed Roller	-	-	-	С	500K	Wipe with a cloth
Separation Roller	-	-	-	С	500K	dampened with ethyl alcohol.  *Life is just for reference.
Pickup Roller	-	-	-	С	500K	
Vertical Transport Roller	-	-	-	С	-	Wipe with a cloth dampened with ethyl alcohol.
Vertical Transport Sensor	-	-	-	С	-	Remove dust with dry cloth.
Paper Feed Sensor	-	-	-	С	-	
Paper Feed Roller	-	-	-	С	-	Wipe with a cloth
Separation Roller	-	-	-	С	-	dampened with ethyl alcohol.
Pickup Roller	-	-	-	С	-	
Duplex Transport Roller	-	-	-	С	-	
Duplex Exit Sensor	-	-	-	С	-	Remove dust with dry cloth when sensor failure occurs.

ltem	120K	240K	360K	EM	Life	Note
Duplex Exit Roller	-	-	-	С	-	Wipe with a cloth dampened with ethyl alcohol.
Bypass Feed Roller	-	-	-	С	120K	Wipe with a cloth
Bypass Separation Roller	-	-	-	С	120K	dampened with ethyl alcohol.  *Life is just for
Bypass Pickup Roller	-	-	-	С	120K	reference.
Bypass Transport Roller	-	-	-	С	-	Wipe with a cloth dampened with ethyl
Reverse Roller	-	-	-	С	-	alcohol.
Reverse Sensor	-	-	-	С	-	Remove dust with dry cloth.
Paper Exit Roller	-	-	-	С	-	Wipe with a cloth dampened with ethyl alcohol.
Paper Exit Sensor	-	-	-	С	-	Remove dust with dry cloth.

# Mainframe: D200/D201/D202

ltem	160K	320K	480K	EM	Life	Note
Reflector	-	C/I/L	-	-	-	Clean with an optics
1 st Mirror	-	C/I/L	-	-	-	cloth.
2nd Mirror	-	C/I/L	-	-	-	
3rd Mirror	-	C/I/L	-	-	-	
Exposure Glass	-	C/I/L	-	-	-	Clean with the RICOH's exposure glass cleaner.
	-		-	C/I/L	-	
Scanner Guide Rails	-	C/I/L	-	-	-	Clean with a dry Cloth.

RTB 47 Modified

ltem	160K	320K	480K	EM	Life	Note
ADF Exposure Glass	-	C/I/L	-	-	-	Clean with the
	-	-	-	C/I/L	-	RICOH's exposure glass cleaner.
Shield Glass	-	-	-	C/I/L	-	Clean with an optics Cloth.
Developer	R	-	-	-	-	Clear PM counter.
Development Roller	C/I/L	-	-	-	-	
Development Filter	R	-	-	-	-	Clear PM counter.
Development Case	C/I/L	-	-	-	-	
Development Entrance Seal	C/I/L	-	-	C/I/L	-	Remove dusts.
Development Mixing Auger Bearing	-	R	-	-	-	Clear PM counter.
Development Side Seal	R	-	-	-	-	
Doctor Blade	C/I/L	-	-	-	-	Remove adhering developer.
Charge Roller	R	-	-	-	-	Clear PM counter.
Charge Roller Cleaner	R	-	-	-	-	
Cleaning Blade	R	-	-	-	-	
Cleaning Blade Side Seal	C/I/L	-	-	-	-	1
Cleaning Entrance Seal	C/I/L	-	-	-	-	
OPC Drum	R	-	-	-	-	Clear PM counter.
Pick-off Pawl	R	-	-	-	-	

ltem	160K	320K	480K	EM	Life	Note
Waste Toner Bottle	R	-	-	C/I/L	-	Replace when waste toner full is detected.
						Clear PM counter.
Quenching Lamp	C/I/L	-	-	-	-	
PCL	C/I/L	-	-	-	-	
Transfer Unit	R	-	-	-	-	Clear PM counter.
Fusing Exit Guide	C/I/L	-	-	-	-	
ID Sensor	C/I/L	-	-	C/I/L	-	Use a blower brush.
						Initialize ID sensor after Cleaning.
Heating Sleeve Belt Unit	-	R	-	-	260k	Clear PM counter.
Fusing Entrance Guide Plate	-	-	-	C/I/L	-	Remove adhering toner.
Fusing Exit Guide Plate	-		-	C/I/L	-	
Stripper Plate	-		-	C/I/L	-	
Pressure Roller	-	R	-	-	260k	Clear PM counter.
Pressure Roller Bearing	-	R	-	-	260k	Lubricate (FLUOTRIBO MG GREASE) after replace the bearing.
Thermopile	-	C/I/L	-	C/I/L	-	Clean with a dry cloth.
Pressure Roller Gear	-	-	-	C/I/L	-	Replace if the gear is
Idler Gear	-	-	-	C/I/L	-	worn out.
Fusing Entrance Sensor	C/I/L	-	-	C/I/L	-	Clean the sensor part with blower brush.
Fusing Exit Sensor	C/I/L			C/I/L	-	

ltem	160K	320K	480K	EM	Life	Note
Registration Roller	-	-	-	С	-	Wipe with a cloth dampened with ethyl alcohol.
Registration Sensor	-	-	-	С	-	Remove dust with dry cloth when sensor failure occurs.
Paper Dust Collection Unit	-	-	-	С	-	Remove dust when paper dust is full.
Vertical Transport Roller	-	-	-	С	-	Wipe with a cloth dampened with ethyl alcohol.
Vertical Transport Sensor	-	-	-	С	-	Remove dust with dry cloth.
Paper Feed Sensor	-	-	-	С	-	Remove dust with dry cloth when sensor failure occurs.
Paper Feed Roller	-	-	-	С	500K	Wipe with a cloth
Separation Roller	-	-	-	С	500K	dampened with ethyl alcohol.
Pickup Roller	-	-	-	С	500K	*Life is just for reference.
Vertical Transport Roller	-	-	-	С	-	Wipe with a cloth dampened with ethyl alcohol.
Vertical Transport Sensor	-	-	-	С	-	Remove dust with dry cloth.
Paper Feed Sensor	-	-	-	С	-	
Paper Feed Roller	-	-	-	С	-	Wipe with a cloth
Separation Roller	-	-	-	С	-	dampened with ethyl alcohol.
Pickup Roller	-	-	-	С	-	
Duplex Transport Roller	-	-	-	С	-	

ltem	160K	320K	480K	EM	Life	Note
Duplex Entrance Sensor	-	-	-	С	-	Remove dust with dry cloth when sensor
Duplex Exit Sensor	-	-	-	С	-	failure occurs.
Duplex Exit Roller	-	-	-	С	-	Wipe with a cloth
Duplex Entrance Sensor	-	-	-	С	-	dampened with ethyl alcohol.
Bypass Feed Roller	-	-	-	С	120K	Wipe with a cloth
Bypass Separation Roller	-	-	-	С	120K	dampened with ethyl alcohol.  *Life is just for reference.
Bypass Pickup Roller	-	-	-	С	120K	
Bypass Transport Roller	-	-	-	С	-	Wipe with a cloth dampened with ethyl
Reverse Roller	-	-	-	С	-	alcohol.
Reverse Sensor	-	-	-	С	-	Remove dust with dry cloth.
Paper Exit Roller	-	-	-	С	-	Wipe with a cloth dampened with ethyl alcohol.
Paper Exit Sensor	-	-	-	С	-	Remove dust with dry cloth.

### ARDF DF3090

ltem	EM	120K	240K	360K	Note
Pick-up Roller	С	R	R	R	Wipe with a cloth dampened with ethyl alcohol.
Feed Belt	С	R	R	R	Wipe with a cloth dampened with ethyl alcohol or water.
Separation Roller	С	R	R	R	Wipe with a cloth dampened with ethyl alcohol.

ltem	EM	120K	240K	360K	Note		
Sensors	С	-	-	-	Clean with a blower brush.		
Gears	L	-	-	-	Lubricate, if necessary.		
Platen Sheet	С	-	-	-			
Other Rollers	С	-	-	-	Wipe with a cloth dampened with ethyl alcohol.		
Scanner Guide Plate	С	-	-	-	with ethyl diconol.		

#### **SPDF DF3080**

Item	EM	120K	240K	360K	Note
Pick-up Roller	С	R	R	R	Wipe with a cloth dampened with ethyl alcohol.
Feed Belt	С	R	R	R	Wipe with a cloth dampened with ethyl alcohol or water.
Separation Roller	С	R	R	R	Wipe with a cloth dampened with ethyl alcohol.
CIS (Glass area)	-	-	-	-	Clean with the RICOH's glass cleaner.
Sensors	С	-	-	-	Clean with a blower brush.
Gears	L	-	-	-	Lubricate, if necessary.
Platen Sheet	С	-	-	-	
Other Rollers	С	-	-	-	Wipe with a cloth dampened with ethyl alcohol.
Scanner Guide Plate	С	-	-	-	,

# Paper Feed Unit PB3150/PB3210/PB3220

ltem	EM	Note
Paper Feed Roller	С	
Pick-up Roller	С	
Separation Roller	С	Wipe with a cloth dampened with ethyl alcohol.
Relay Rollers	С	
Bottom Plate Pad	С	D
Sensors	С	Remove dust with dry cloth.

## LCIT PB3170/PB3230

ltem	EM	Note				
Paper Feed Roller	С					
Pick-up Roller	С					
Separation Roller	С	Wipe with a cloth dampened with ethyl alcohol.				
Relay Rollers	С					
Bottom Plate Pad	С					
Sensors	С	Remove dust with dry cloth.				

#### **LCIT RT3030**

ltem	EM	Note
Paper Feed Roller	С	
Pick-up Roller	С	NAC
Separation Roller	С	Wipe with a cloth dampened with ethyl alcohol.
Relay Rollers	С	

ltem	EM	Note
Bottom Plate Pad	С	Remove dust with dry cloth.
Sensors	С	Remove dusi wiin dry Ciolli.

# 1 Bin Tray BN3110

ltem	EM	Note
Rollers	С	Wipe with a cloth dampened with ethyl alcohol.
Сору Тгау	С	Clean with a damp cloth, and then wipe with a dry cloth.
Sensors	С	Clean with a blower brush.
Bearings	С	Lubricate with silicone oils when noise occurred.

## Bridge Unit BU3070

ltem	EM	Note	
Rollers	С	Wipe with a cloth dampened with ethyl alcohol.	

# Internal Shift Tray SH3070

ltem	EM	Note
Exit Tray	С	Clean with a damp cloth, and then wipe with a dry cloth.

# Side Tray Type M3

ltem	EM	Note
Rollers	С	Wipe with a cloth dampened with ethyl alcohol.
Sensors	С	Remove dusts with dry cloth.

# Booklet Finisher SR3150 / Finisher SR3140

ltem	500K	EM	Note
Rollers	-	С	Wipe with a cloth dampened with ethyl alcohol.
Quenching brush	-	С	Clean with a dry cloth if dirt adheres on it.
Bearings	-	С	Lubricate with silicone oils when noise occurred.
Sensors	-	С	Clean with a blower brush.
Jogger Fence	-	С	Lubricate with silicone oils when noise or malfunction detected.
Stapler	R	С	Replace when staple counter on logging data reached 500 thousand times.  Staple some times for test after replacement.

# Booklet Finisher SR3170 / Finisher SR3160

ltem	300K	3000K	4000K	EM	Note
Rollers	-	-	-	С	Wipe with a cloth dampened with ethyl alcohol.
Quenching brush	-	-	-	С	Clean with a dry cloth if dirt adheres on it.
Bearings	-	-	-	С	Lubricate with silicone oils when noise occurred.
Sensors	-	-	-	С	Clean with a blower brush.
Stapler (Corner)	-	-	R	С	Replace when staple counter on logging data reached 500 thousand times.  Staple some times for test after replacement.
Booklet Stapler	-	-	R	С	Replace when staple counter on logging data reached 200 thousand times.

ltem	300K	3000K	4000K	EM	Note
Punch	-	R	-	С	Remove paper dust in the transport unit.
Punch dust	С	-	-	С	Discard paper dust when a full of paper dust is detected.

#### Internal Finisher SR3130

ltem	EM	Note
Rollers	С	Wipe with a cloth dampened with ethyl alcohol.
Sensors	С	Clean with a blower brush.
Stapler	R	Replace when staple counter on logging data reached 200 thousand times.
Bearing	С	Lubricate silicon oil.

#### Internal Finisher SR3180

ltem	EM	Note
Rollers	С	Wipe with a cloth dampened with ethyl alcohol.
Sensors	С	Clean with a blower brush.
Stapler	R	Replace when staple counter on logging data reached 200 thousand times.

### Others Yield Parts

The parts mentioned in the table below have a target yield. However, the total copy/print volume made by the machine will not reach the target yield within the machine's targeted lifetime if the machine is used under the target usage conditions (ACV, color ratio, P/J, and C/O). So, these parts are categorized not as PM parts but as yield parts (EM parts).



• Symbol keys: U: Unique for this model, C: Common with listed model

### Mainframe:

Part Number	Description	Q'ty/Unit	Expected Yield (Pages)	Unique or Common
D8693021	Development Unit	1	D197/D198/D199: 420k D200/D201/D202: 900k	U

## ARDF DF3090 (D779):

Part Number	Description	Q'ty/Unit	Expected Yield (Pages)	Unique or Common
D5412121	Paper Feed Belt	1	120k	C (D146)
D6832228	Pick-up Roller	1		
D5412241	Reverse Roller	1		

## SPDF DF3080 (D779):

Part Number	Description	Q'ty/Unit	Expected Yield (Pages)	Unique or Common
D5412121	Paper Feed Belt	1	120k	C (D146)
D6832228	Pick-up Roller	1		
D5412241	Reverse Roller	1		

MEMO

