


Pro 907EX Pro 1107EX Pro 1357EX

Operating Instructions Network and System Settings Guide

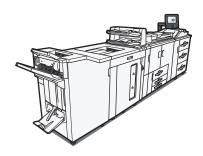

- 1 System Settings
- 2 Tray Paper Settings
- 3 Connecting the Machine
- 4 Using a Printer Server
- 5 Monitoring and Configuring the Printer
- 6 Registering Addresses and Users for Scanner Functions
- 7 Special Operations under Windows
- 8 Appendix

TABLE OF CONTENTS

Manuals for This Machine	10
Notice	12
Important	12
How to Read This Manual	13
Symbols	13
Names of Major Items	13
Note	14
About IP Address	14
Laws and Regulations	15
Legal Prohibition	15
Display Panel	16
Accessing User Tools	17
Changing Default Settings	17
Quitting User Tools	18
1. System Settings	
General Features	19
Output Tray Settings	23
Paper Tray Priority Settings	26
Timer Settings	28
Interface Settings	31
Network	31
Parallel Interface	34
Wireless LAN	35
Print List	37
File Transfer	39
Administrator Tools	45
Programming the LDAP server	55
Programming the LDAP server	55
Changing the LDAP server	59
Deleting the LDAP server	60
Programming the Realm	61
Programming the Realm	61
Changing the Realm	62

Deleting the Realm	63
System Settings on Main and Sub-machines	64
General Features	64
Timer Settings	65
Administrator Tools	66
2. Tray Paper Settings	
Accessing Tray Paper Settings	67
Changing Tray Paper Settings	67
Quitting Tray Paper Settings	68
Items of Tray Paper Settings	69
Tray 1	69
Tray 1 (with the optional A3/11×17 Tray Unit)	71
Tray 2	73
Tray 3	75
Tray 4 (with the optional Large Capacity Tray)	77
Tray 4 (with the optional Wide Large Capacity Tray)	79
Tray 5 (with the optional Large Capacity Tray)	82
Tray 5 (with the optional Wide Large Capacity Tray)	84
Tray 6 (with the optional Large Capacity Tray)	87
Tray 6 (with the optional Wide Large Capacity Tray)	88
Tray 7 (with the optional Multi Bypass Tray and LCT)	91
Tray 7 (with the optional Multi Bypass Tray and Wide LCT)	93
Interposer Upper and Lower Tray (with the Optional Cover Interposer Tray CI5010)	96
Interposer Upper and Lower Tray (with the optional Cover Interposer Tray Type GB5000)	97
Tray Paper Setting on Main and Sub-machines	98
3. Connecting the Machine	
Connecting to the Interfaces	103
Connecting to the Ethernet Interface	104
Connecting to the Gigabit Ethernet Interface	105
Connecting to the USB Interface	107
Connecting to the IEEE 1284 Interface	108
Connecting to the Wireless LAN Interface	109
Network Settings Required to Use the Printer	111

Ethernet	111
Wireless LAN	112
Network Settings Required to Use E-mail Function	114
Ethernet	114
Wireless LAN	115
Network Settings Required to Use Scan to Folder Function	118
Ethernet	118
Wireless LAN	119
Network Settings Required to Use the Network Delivery Scanner	121
Ethernet	121
Wireless LAN	122
Network Settings Required to Use WSD Scanner	124
Ethernet	124
Wireless LAN	125
Network Settings Required to Use Network TWAIN Scanner	127
Ethernet	127
Wireless LAN	128
Network Settings Required to Use Document Server	130
Ethernet	130
Wireless LAN	131
Using Utilities to Make Network Settings	133
Interface Settings	133
File Transfer	140
4. Using a Printer Server	
Preparing Printer Server	143
Using NetWare	144
Setting Up as a Print Server (NetWare 3.x)	145
Setting Up as a Print Server (NetWare 4.x, 5/5.1, 6/6.5)	146
Using Pure IP in the NetWare 5/5.1 or 6/6.5 Environment	147
Setting Up as a Remote Printer (NetWare 3.x)	149
Setting Up as a Remote Printer (NetWare 4.x, 5/5.1, 6/6.5)	151
5. Monitoring and Configuring the Printer	
Using Web Image Monitor	155

Displaying Top Page	156
When User Authentication is Set	158
About Menu and Mode	158
Access in the Administrator Mode	160
List of Setting Items	160
Displaying Web Image Monitor Help	166
Using SmartDeviceMonitor for Admin	168
Installing SmartDeviceMonitor for Admin	169
Changing the Network Interface Board Configuration	170
Locking the Menus on the Machine's Control Panel	171
Changing the Paper Type	172
Managing User Information	172
Configuring Energy Save Mode	178
Setting a Password	178
Checking the Machine Status	179
Changing Name and Comment	180
Viewing and Deleting Spool Print Jobs	181
Managing Address Information	182
Using SmartDeviceMonitor for Client	183
Monitoring Printers	183
Checking the Machine Status	184
When Using IPP with SmartDeviceMonitor for Client	184
Printer Status Notification by E-Mail	186
Setting the Account for E-mail Notification	188
Mail Authentication	188
Auto E-mail Notification	189
On-demand E-mail Notification	190
Format of On-demand E-mail Messages	191
Remote Maintenance by telnet	192
Using telnet	192
8021x	193
access	194
appletalk	195

authfree	196
autonet	196
bonjour	197
btconfig	198
devicename	199
dhcp	199
dhcp6	200
diprint	201
dns	202
domainname	203
etherauth	204
etherconfig	204
help	205
hostname	205
ifconfig	205
info	207
ipp	207
ipsec	208
ipv6	208
logout	208
lpr	209
netware	209
passwd	210
pathmtu	211
prnlog	211
route	212
rhpp	213
set	
show	217
slp	
smb	
snmp	
sntp	

spoolsw	222
ssdp	223
ssh	223
status	224
syslog	224
upnp	224
web	225
wiconfig	225
wins	229
wsmfp	230
SNMP	232
Getting Printer Information over the Network	233
Current Printer Status.	233
Printer Configuration	251
Understanding the Displayed Information	253
Print Job Information	253
Print Log Information	253
Configuring the Network Interface Board	254
Message List	266
System Log Information	266
6. Registering Addresses and Users for Scanner Functions	
Address Book	275
Managing Names in the Address Book	278
Sending E-mail by Quick Dial	278
Sending Scanned Files to a Shared Folder Directly	279
Preventing Unauthorized User Access to Shared Folders from the Machine	279
Managing Users and Machine Usage	279
Registering Names	280
Registering Names	280
Changing a Registered Name	281
Deleting a Registered Name	282
Authentication Information	284
Registering an User Code	284

Changing an User Code	286
Deleting an User Code	287
Displaying the Counter for Each User	289
Printing the Counter for Each User	289
Printing the Counter for All Users	290
Clearing the Number of Prints	291
E-mail Destination	293
Registering an E-mail Destination	293
Changing an E-mail Destination	294
Deleting an E-mail Destination	296
Registering Folders	297
Registering a SMB Folder	297
Changing a SMB Folder	300
Deleting a SMB Registered Folder	302
Registering a FTP Folder	303
Changing a FTP Folder	305
Deleting a FTP Folder	307
Registering a NCP Folder	308
Changing a NCP Registered Folder	311
Deleting a NCP Folder	312
Registering Names to a Group	314
Registering a Group	314
Registering Names to a Group	315
Adding a Group to Another Group	317
Displaying Names Registered in a Group	318
Removing a Name from a Group	319
Deleting a Group Within Another Group	320
Changing a Group Name	321
Deleting a Group	322
Registering a Protection Code	324
Registering a Protection Code to a Single User	324
Registering a Protection Code to a Group User	325
Registering SMTP and LDAP Authentication	327

SMTP Authentication	327
LDAP Authentication	328
7. Special Operations under Windows	
Printing Files Directly from Windows	331
Setup	331
Using a Host Name Instead of an IPv4 Address	331
Printing Commands	332
Printing with Bluetooth Connection	336
Supported Profiles	336
Adding a Bluetooth Printer	336
8. Appendix	
Adjustment Settings for Operators	339
Changing the Adjustment Settings for Operators	339
Setting Values	340
When Using Windows Terminal Service/Citrix Presentation Server/Citrix XenApp	384
Operating Environment	384
Supported Printer Drivers	384
Limitations	384
Using DHCP	386
Using AutoNet	386
Configuring the WINS Server	387
Using Web Image Monitor	387
Using telnet	387
Using the Dynamic DNS Function	389
Updating	389
DNS Servers Targeted for Operation	390
DHCP Servers Targeted for Operation	390
Setting the Dynamic DNS Function	390
Precautions	392
Connecting a Dial-Up Router to a Network	392
NetWare Printing	393
When the IEEE 802.11 Interface Unit is Installed	395
Configuring IEEE 802.1X	396

Installing a Site Certificate	396
Installing Device Certificate	397
Setting Items of IEEE 802.1X for Ethernet	398
Setting Items of IEEE 802.1X for Wireless LAN	399
Specifications	401
Copyrights	403
expat	403
NetBSD	403
Sablotron	405
JPEG LIBRARY	406
SASL	406
MD4	407
MD5	407
Samba(Ver 3.0.4)	407
RSA BSAFE®	408
Open SSL	408
Open SSH	410
Open LDAP	414
Heimdal	415
IPS TM print language emulations	415
Trademarks	416
INDEX	419

Manuals for This Machine

Read this manual carefully before you use this machine.

Refer to the manuals that are relevant to what you want to do with the machine.

- Media differ according to manual.
- The printed and electronic versions of a manual have the same contents.
- Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.
- A Web browser must be installed in order to view the html manuals.

About This Machine

Before using the machine, be sure to read the section of this manual entitled Safety Information.

This manual introduces the machine's various functions. It also explains the control panel, preparation procedures for using the machine, how to enter text, how to install the CD-ROMs provided, and how to replace paper, toner, staples, and other consumables.

Troubleshooting

Provides a guide for resolving common usage-related problems.

Copy and Document Server Reference

Explains Copier and Document Server functions and operations. Also refer to this manual for explanations on how to place originals.

Printer Reference

Explains Printer functions and operations.

Scanner Reference

Explains Scanner functions and operations.

Network and System Settings Guide

Explains how to connect the machine to a network, configure and operate the machine in a network environment, and use the software provided. Also explains how to change User Tools settings and how to register information in the Address Book.

Security Reference

This manual is for administrators of the machine. It explains security functions that you can use to prevent unauthorized use of the machine, data tampering, or information leakage. For enhanced security, we recommend that you first make the following settings:

- Install the Device Certificate.
- Enable SSL (Secure Sockets Layer) Encryption.
- Change the user name and password of the administrator using Web Image Monitor.

For details, see "Setting Up the Machine", Security Reference.

Be sure to read this manual when setting the enhanced security functions, or user and administrator authentication.

PostScript 3 Supplement

Explains how to set up and use PostScript 3.

Other manuals

- UNIX Supplement
- Quick Reference Copy Guide
- Quick Reference Printer Guide
- Quick Reference Scanner Guide
- Manuals for DeskTopBinder Lite
 - DeskTopBinder Lite Setup Guide
 - DeskTopBinder Introduction Guide
 - Auto Document Link Guide



- Manuals provided are specific to machine types.
- For "UNIX Supplement", please visit our Web site or consult an authorized dealer. This manual includes descriptions of functions and settings that might not be available on this machine.
- The following software products are referred to using general names:

Product Name	General name
DeskTopBinder Lite and DeskTopBinder Professional* 1	DeskTopBinder
ScanRouter EX Professional* 1 and ScanRouter EX Enterprise* 1	the ScanRouter delivery software

^{*1} Optional

Notice

Important

In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

For good copy quality, the supplier recommends that you use genuine toner from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

How to Read This Manual

Symbols

This manual uses the following symbols:



Indicates important safety notes.

Ignoring these notes could result in moderate or minor injury, or damage to the machine or to property. Be sure to read these notes. They can be found in the "Safety Information" section of About This machine.

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

U Note

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

Reference

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[]

Indicates the names of keys that appear on the machine's display panel.

[]

Indicates the names of keys on the machine's control panel.

Names of Major Items

Major options of this machine are referred to as follows in this manual:

- Decurl Unit DU5000 → Decurler
- High Capacity Stacker SK5010 → Stacker
- Large capacity tray → LCT
- Wide large capacity tray → Wide LCT
- Finisher SR5000 → Finisher
- Booklet Finisher SR5020 → Booklet finisher
- Multi-Folding Unit FD5000 → Multi-Folding Unit
- Perfect Binder GB5000 → Perfect Binder

- Ring Binder RB5000 → Ring Binder
- Trimmer Unit TR5020 → Trimmer

Note

Contents of this manual are subject to change without prior notice.

Two kinds of size notation are employed in this manual. With this machine refer to the inch version.

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Depending on which country you are in, certain units may be optional. For details, please contact your local dealer.

This machine comes in three models which vary in copy/print speed. To ascertain which model you have, see "Machine Types", About This Machine.

About IP Address

In this manual, "IP address" covers both IPv4 and IPv6 environments. Read the instructions that are relevant to the environment you are using.

Laws and Regulations

Legal Prohibition

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

Display Panel

The display panel shows machine status, error messages, and function menus.

The function items displayed serve as selector keys. You can select or specify an item by lightly pressing it.

When you select or specify an item on the display panel, it is highlighted like Program / Charge. Keys appearing as cannot be used.



• A force or impact of more than 30 N (about 3 kgf) will damage the display panel.

To display the following screen, press the [User Tools] key to display the User Tools menu, and then press [System Settings].

Using the System Settings menu screen as an example, this section explains how to use the machine's display panel.



- 1. The menu tabs for various settings appear. To display the setting you want to specify or change, press the appropriate menu tab.
- 2. A list of settings appears. To specify or change a setting, press the appropriate key in the list.
- 3. Press this to quit the User Tools menu.

Accessing User Tools

This section describes how to access User Tools menu.

User Tools allow you to change or set defaults.




- · Operations for system settings differ from normal operations. Always quit User Tools when you have finished.
- · Any changes you make with User Tools remain in effect even if the main power switch or operation switch is turned off, or the [Energy Saver] or [Clear Modes] key is pressed.

Changing Default Settings

This section describes how to change the settings of User Tools.

Mportant !

- If Administrator Authentication Management is specified, contact your administrator.
- 1. Press the [User Tools] key.

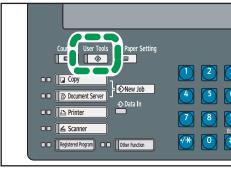

- 2. Press [System Settings].
- 3. Select the user tool you want to change.
- 4. Change settings by following instructions on the display, and then press [OK].



- To cancel changes made to settings and return to the initial display, press the [User Tools] key.
- For details about specifying System Settings, see "System Settings".
- · For details about specifying other settings such as changing the language, checking inquiry and counter, see "Remarks", About This Machine.




• p.19 "System Settings"

Quitting User Tools

This section describes how to quit the settings of User Tools.

1. Press the [User Tools] key.

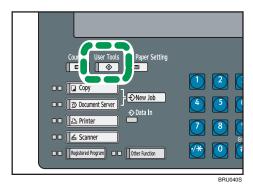

₩Note

• You can also quit User Tools by pressing [Exit].

1. System Settings

This chapter describes user tools in the System Settings menu. For details on how to access System Settings, see "Accessing User Tools".

General Features

This section describes the user tools in the General Features menu under System Settings.

Program / Change / Delete User Text

You can register text phrases you often use when specifying settings, such as ".com" and "Regards".

You can register up to 40 entries.

- Program / Change
 - 1. Press the [User Tools] key.
 - 2. Press [System Settings].
 - 3. Check that [General Features] is selected.
 - 4. Press [Program / Change / Delete User Text].
 - 5. Check that [Program / Change] is selected.
 - 6. Select the user text you want to change.

To program new user text, press [Not Programmed].

- 7. Enter the user text, and then press [OK].
 - Enter the user text using up to 80 characters.
- 8. Press [Exit].
- 9. Press the [User Tools] key.
- Delete
 - 1. Press the [User Tools] key.
 - 2. Press [System Settings].
 - 3. Check that [General Features] is selected.
 - 4. Press [Program / Change / Delete User Text].
 - 5. Press [Delete].
 - 6. Select the user text you want to delete.
 - 7. Press [Yes].
 - 8. Press [Exit].
 - 9. Press the [User Tools] key.

Panel Key Sound

The beeper (key tone) sounds when a key is pressed.

The default setting is [Medium].

Warm-up Beeper (copier/Document Server)

You can have the beeper sound when the machine becomes ready to copy after leaving Energy Saver mode, or when the power is turned on.

The default setting is [On].

If the Panel Tone setting is [Off], the beeper does not sound, whatever the Warm Up Notice setting.

Copy Count Display (copier/Document Server)

The copy counter can be set to show the number of copies made (count up) or the number of copies yet to be made (count down).

The default setting is [Up].

Function Priority

Specify the mode to be displayed immediately after the operation switch is turned on, or when System Reset mode is turned on.

The default setting is [Copier].

Print Priority

Print Priority is given to the mode selected.

The default setting is [Display Mode].

Function Reset Timer

You can set the length of time the machine waits before changing modes when using the multi-access function.

This is useful if you are making many copies and have to change settings for each copy. If you set a longer reset period, you can prevent interruption from other functions.

The default setting is [Set Time].

When you select [Set Time], enter the time (3 - 30 seconds, in 1 second increments) using the number keys.

The default setting for Function Reset Time is "3" second (s).

The Function Reset Timer setting is ignored if [Immediate] is set for Print Priority.

Interleave Print

You can set the timing for changing modes when "Print Priority" has been set to [Interleave].

The default setting is "10" sheet (s).

You can set the number from 1 to 20 sheets using the number keys.

Status Indicator

You can specify whether the status indicator shows the machine status or not.

The default setting is On.

Screen Color Setting

You can select the screen color among from five types.

The default setting is [Blue Type].

Output: Copier (copier)

Specify a tray to which document are delivered.

The default setting can vary depending on which options are attached.

Output: Document Server (Document Server)

Specify a tray to which document are delivered.

The default setting can vary depending on which options are attached.

Output: Printer (printer)

Specify a tray to which document are delivered.

The default setting can vary depending on which options are attached.

Paper Tray Priority: Copier

Specify a tray to supply paper for output.

The default setting is Tray 1.

Paper Tray Priority: Printer

Specify a tray to supply paper for output.

The default setting is Tray 1.

System Status/Job List Display Time

Specify how long to display the System Status and Job List display for.

The default setting is [On], "15" second (s).

By selecting [On], you can specify a display time between 10 and 999 seconds.

Time Interval between Printing Jobs

Specify interval time after printing is completed until starting the next printing.

The default setting is [Set Time], "3" second (s).

By selecting [Set Time], you can specify an interval time between 0 and 999 seconds.

ADF Original Table Elevation

You can set the timing for elevating the ADF original table.

The default setting is [When Original is Set].

ADF Feed Speed

When you use thick paper, you can slow down the printing speed to avoid fusing the image by selecting [Slow].

The default setting is [Normal].

Key Repeat

You can enable or disable repetition of an operation if a key on the screen or control panel is pressed continuously.

The keys affected by the key repeat setting can vary depending on the selected function.

The default setting is [Normal].

Z-fold Position

You can adjust the position of the lines of the Z-fold in steps of 1 mm.

Half Fold Position

You can adjust the position of the lines of the half fold in steps of 1 mm.

Letter Fold-out Position

You can adjust the position of the lines of the letter fold-out in steps of 1 mm.

When you specify multifold, you cannot change the positions of the folds. Any adjusted settings will be cleared if you press [OK] when prompted to select multifold.

Letter Fold-in Position

You can adjust the position of the lines of the letter fold-in in steps of 1 mm.

Double Parallel Fold Position

You can adjust the position of the lines of the double parallel fold in steps of 1 mm.

Gate Fold Position

You can adjust the position of the lines of the gate fold in steps of 1 mm.

Output Tray Setting

Use this setting to switch output tray selection between Function-dependant Tray Select and Auto Tray Select.

This setting appears only when two or more stacker trays are attached to the machine.

You can select the "[Auto Change] is available for Output Tray, only when [Job Order] is selected at Print Priority".

If you often make copies with different settings for each page, specify a high value for this setting to avoid other jobs starting before the current job is finished.

This setting appears only when more than one output tray is attached.

Paper Curl Correction Level

You can specify the level of paper curl correction.

Reference


• p.17 "Accessing User Tools"


Output Tray Settings


Note that default settings can vary by machine model.

Output Tray Settings with Booklet Finisher


This illustration shows the output trays that can be selected when using Booklet Finisher.

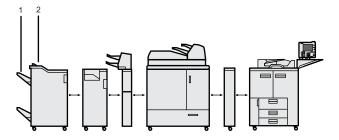

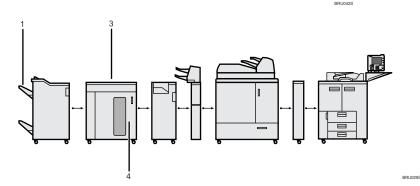

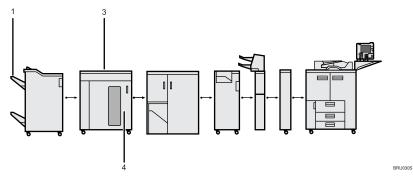

23

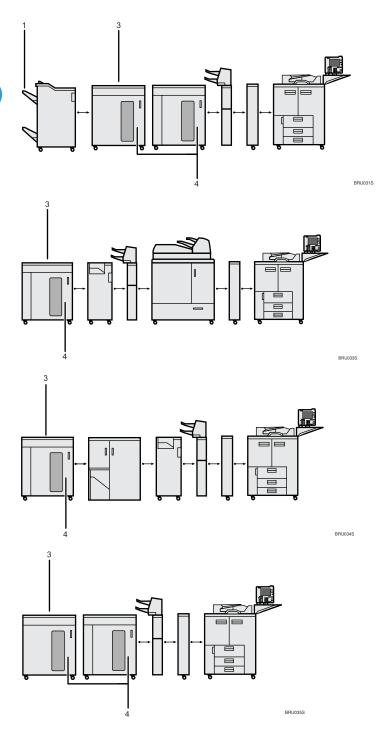


- 1. Finisher Shift Tray
- 2. Finisher Upper Tray
- 3. Stacker Upper Tray


4. Stacker Tray

Output Tray Settings with Finisher


This illustration shows the output trays that can be selected when using Finisher.

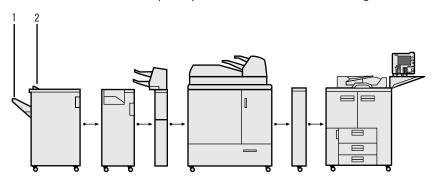


BRU012S

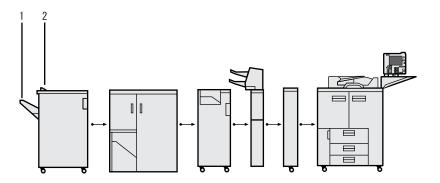

BRU013S

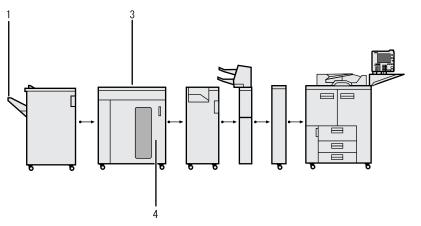

BRU014S

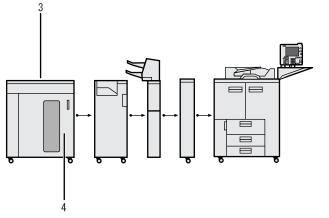


BRU038S

- 1. Finisher Shift Tray
- 2. Finisher Upper Tray
- 3. Stacker Upper Tray
- 4. Stacker Tray

Paper Tray Priority Settings

Note that default settings can vary depending on which options are attached.

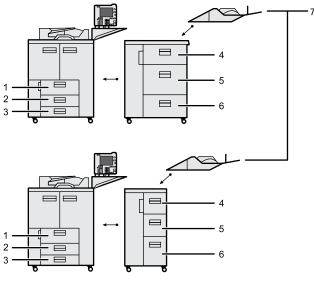

BRU009S

- 1. Tray 1
- 2. Tray 2
- 3. Tray 3

- 4. Tray 4
- 5. Tray 5
- 6. Tray 6
- 7. Tray 7

Timer Settings

This section describes the user tools in the Timer Settings menu under System Settings.

Auto Off Timer (Type 1)

After a specified period has passed, following job completion, the machine automatically turns off, in order to conserve energy. This function is called "Auto Off".

The machine status after the Auto Off operation is referred to as "Sleep mode".

For the Auto Off Timer, specify the time to elapse before Auto Off.

The default setting is "90" min.

The time can be set from 10 seconds to 240 minutes, using the number keys.

Auto Off may not work when error messages appear.

Auto Off Timer (Type 2,3)

After a specified period has passed, following job completion, the machine automatically turns off, in order to conserve energy. This function is called "Auto Off".

The machine status after the Auto Off operation is referred to as "Sleep mode".

For the Auto Off Timer, specify the time to elapse before Auto Off.

The default setting is "120" min.

The time can be set from 10 seconds to 240 minutes, using the number keys.

Auto Off may not work when error messages appear.

Energy Saver Timer

Set the amount of time the machine waits before switching to lower-power mode after printing has finished or the last operation is performed.

The time can be set from 1 to 240 minutes, using the number keys.

The default setting is "15" minute (s).

Panel Off Timer

Set the amount of time the machine waits before switching the panel off after copying has finished or the last operation is performed.

Enter a time interval between 10 seconds and 240 minutes, using the number keys.

The default setting is "1" minute (s).

System Auto Reset Timer

The System Reset setting automatically switches the screen to that of the function set in Function Priority when no operations are in progress, or when an interrupted job is cleared. This setting determines the system reset interval.

The time can be set from 10 to 999 seconds, using the number keys.

The default setting is [On], "60" second (s).

Copier / Document Server Auto Reset Timer (copier/Document Server)

Specifies the time to elapse before copier and Document Server modes reset.

If [Off] is selected, the machine does not automatically switch to the user code entry screen.

The time can be set from 10 to 999 seconds, using the number keys.

The default setting is [On], "60" second (s).

Printer Auto Reset Timer (printer)

Specify the time to elapse before the printer function resets.

The time can be set from 10 to 999 seconds, using the number keys.

The default setting is [On], "60" second (s).

Scanner Auto Reset Timer (scanner)

Specify the time to elapse before the scanner function resets.

If [Off] is selected, the machine will not automatically switch to the user code entry screen.

The time can be set from 10 to 999 seconds, using the number keys.

The default setting is [On], "60" second (s).

Set Date

Set the date for the copier's internal clock using the number keys.

To change between year, month, and day, press $[\leftarrow]$ and $[\rightarrow]$.

Set Time

Set the time for the copier's internal clock using the number keys.

Enter the time using the 12 - hour format (in 1 second increments).

To change between hours, minutes and seconds, press $[\leftarrow]$ and $[\rightarrow]$.

Auto Logout Timer

Specify whether or not to automatically log out an user when the user does not operate the machine for a specified period of time after logging in.

The time can be set from 60 to 999 seconds, in one second increments, using the number keys.

The default setting is [On], "180" second (s).

Weekly Timer Code

Set a password (using not more than eight digits) for turning on the power during the time periods when "Weekly Timer" turns off the machine's power.

In order to make this setting, administrator authentication must be enabled. For details, consult your administrator.

The default setting is Off.

If you have selected "On", enter the password.

When you select "On", you cannot use the machine even if you turn the power switch to "On", unless you enter the password.

If you select "Off", you do not have to enter a password to switch on the machine, you need only turn the power switch to "On".

Weekly Timer: Monday - Sunday

Set the daily time when the power is switched on/off.

Enter the time using the 12 - hour system.

Enter the "hour" and "minute" using the number keys.

Binding Glue Heater Auto Off Timer

Specify how long the machine keeps the glue heated.

If you select "Off", the binding glue heater does not turn off automatically. You can specify a heating time of 10 minutes to 4 hours.

The default setting is "10" minutes.

■ Reference

• p.17 "Accessing User Tools"

Interface Settings

This section describes the user tools in the Interface Settings menu under System Settings.

Network

This section describes the user tools in the Network menu under Interface Settings.

Machine IPv4 Address

Specify the machine's IPv4 network address.

The default setting is [Auto-Obtain (DHCP)].

When you select [Specify], enter the IPv4 address and subnet mask as "xxx.xxx.xxx.xxx" ("x" indicates a number).

When you select [Specify], make sure that IPv4 address is different from that of other machines on the network.

The physical address (MAC address) also appears.

IPv4 Gateway Address

A gateway is a connection or interchange point between two networks.

Specify the gateway address for the router or host computer used as a gateway.

The default setting is "0.0.0.0".

Machine IPv6 Address

Displays the machine's IPv6 network address.

Link-local Address

The machine's specified link-local address appears.

• Manual Configuration Address

The machine's manually configured address appears.

• Stateless Address: 1-5

The specified stateless address appears.

IPv6 Gateway Address

Displays the machine's IPv6 gateway address.

IPv6 Stateless Address Autoconfiguration

Specify IPv6 Stateless Address Autoconfiguration.

The default setting is [Active].

DNS Configuration

Make settings for the DNS server.

The default setting is [Auto-Obtain (DHCP)].

When you select [Specify], enter the DNS Server IPv4 address as "xxx.xxx.xxx.xxx" ("x" indicates a number).

DDNS Configuration

Specify the DDNS settings.

The default setting is [Active].

IPsec

Specify the machine's IPsec function Active/Inactive.

The default setting is [Inactive].

Domain Name

Specify the domain name.

The default setting is [Auto-Obtain (DHCP)].

When you select [Specify], enter the domain name using up to 63 characters.

WINS Configuration

Specify the WINS server settings.

The default setting is [On].

If [On] is selected, enter the WINS Server IPv4 address as "xxx.xxx.xxx" ("x" indicates a number).

If DHCP is in use, specify the Scope ID. Enter a Scope ID using up to 31 characters.

Effective Protocol

Select the Protocol to use in the network.

The default setting for "IPv4" is [Active].

The default setting for "IPv6" is [Inactive].

The default setting for "NetWare" is [Inactive].

The default setting for "SMB" is [Active].

The default setting for "AppleTalk" is [Inactive].

NCP Delivery Protocol

Select the protocol NCP delivery.

The default setting is [TCP / IP Priority].

If you select [IPX Only] or [TCP / IP Only], you cannot switch the protocol even if you cannot connect with it. If "NetWare" in "Effective Protocol" is set to [Inactive], you can only use TCP/IP.

NW Frame Type

Select the frame type when you use NetWare.

The default setting is [Auto Select].

SMB Computer Name

Specify the SMB computer name.

Enter the computer name using up to 15 characters.

"*+,/:;<>=?[\]|. and spaces cannot be entered.

Do not set a computer name starting with RNP and rnp.

Use uppercase letters for alphabets.

SMB Work Group

Specify the SMB work group.

Enter the computer name using up to 15 characters.

"*+,/:;<>= $?[\]$]. and spaces cannot be entered.

Use uppercase letters for alphabet.

Ethernet Speed

Set the access speed for networks.

The default setting is [Auto Select].

Select a speed that matches your network environment. [Auto Select] should usually be selected.

	10Mbps Half Duplex	10Mbps Full Duplex	100Mbps Half Duplex	100Mbps Full Duplex	Auto Select
10Mbps Half Duplex	•	_	_	_	•
10Mbps Full Duplex	_	•	_	_	_
100Mbps Half Duplex	_	_	•	_	•
100Mbps Full Duplex	_	_	_	•	_
Auto Select	•	_	•	_	•

IEEE 802.1X Authentication for Ethernet

Specify the IEEE 802.1X authentication for Ethernet.

The default setting is [Inactive].

For details about IEEE 802.1X authentication, see "Configuring IEEE 802.1X".

Restore IEEE 802.1X Authentication to Defaults

You can return the IEEE 802.1X authentication settings to their defaults.

For details about IEEE 802.1X authentication, see "Configuring IEEE 802.1X".

LAN Type

When you have installed the Wireless LAN interface unit, select the method of connection.

The default setting is [Ethernet].

[LAN Type] is displayed when wireless LAN board is installed. If Ethernet and Wireless LAN are both connected, the selected interface has priority.

Ping Command

Check the network connection with ping command using given IPv4 address.

If you fail to connect to the network, check the following, and then retry the ping command.

- Make sure that "IPv4" in [Effective Protocol] is set to [Active].
- Check that the machine with assigned IPv4 address is connected to the network.
- There is a possibility that the same IPv4 address is used for the specified equipment.

Permit SNMPv3 Communication

Set the encrypted communication of SNMPv3.

The default setting is [Encryption / Cleartext].

If you select to [Encryption Only], you need to set an encryption password for the machine.

Permit SSL / TLS Communication

Set the encrypted communication of SSL/TLS.

The default setting is [Ciphertext Priority].

If you set to [Ciphertext Only], you need to install the SSL certificate for the machine.

Host Name

Specify the host name.

Enter the host name using up to 63 characters.

Machine Name

Specify the machine name.

Enter the machine name using up to 31 characters.

■ Reference

- p.17 "Accessing User Tools"
- p.396 "Configuring IEEE 802.1X"

Parallel Interface

This section describes the user tools in the Parallel Interface menu under Interface Settings.

[Parallel Interface] is displayed when this machine is installed with the IEEE 1284 interface board.

Parallel Timing

Sets the timing for the control signal of the parallel interface.

Normally, you do not need to change this setting.

The default setting is [ACK Outside].

Parallel Communication Speed

Sets the communication speed for the parallel interface. If the speed is too high, data may not be transferred smoothly. If this happens, change the setting to [Standard].

The default setting is [High Speed].

Selection Signal Status

Sets the level for the select signal of the parallel interface.

The default setting is [High].

Input Prime

Sets whether to validate or invalidate the input prime signal upon reception.

Normally, you do not need to change this setting.

The default setting is [Inactive].

Bidirectional Communication

Sets the printer's response mode to a status acquisition request when using a parallel interface. If you experience problems using another manufacturer's machine, set this to [Off].

The default setting is [On].

When set to [Off], the bidirectional communication function will be disabled, and the printer driver will not be installed under Windows Auto Detect function.

Signal Control

Specifies the machine's response to errors that occur during printing.

Normally, you do not need to change this setting.

The default setting is [Job Acceptance Priority].

Reference

• p.17 "Accessing User Tools"

Wireless LAN

This section describes the user tools in the Wireless LAN menu under Interface Settings.

[Wireless LAN] is displayed when this machine is installed with the wireless LAN interface board.

Be sure to make all settings simultaneously.

Communication Mode

Specifies the communication mode of the wireless LAN.

The default setting is [Infrastructure Mode].

SSID Setting

Specifies SSID to distinguish the access point in [Infrastructure Mode] or [802.11 Ad-hoc Mode].

The characters that can be used are ASCII 0x20-0x7e (32 bytes).

If blank is specified in [802.11 Ad-hoc Mode], "ASSID" appears.

Ad-hoc Channel

Specify the channel to use when [802.11 Ad-hoc Mode] has been selected. Set the channel that matches the type of wireless LAN being used.

The following channels are available:

- IEEE 802.11 b/g(2.4GHz) Wireless LAN
 - [1] [11] channels
- IEEE 802.11 a (5GHz) Wireless LAN
 - [36], [40], [44], and [48] channels

The default setting is [11].

The channel in use might differ depending on the country.

Security Method

Specifies the encryption of the Wireless LAN.

The default setting is [Off].

If you select [WEP], always enter WEP key. If you select [WPA], specify the encryption and authentication methods.

Specify "WPA", when [Communication Mode] is set to [Infrastructure Mode].

WEP

If you select [WEP], enter WEP key.

When using 64 bit WEP, up to 10 characters can be used for hexadecimal and up to 5 characters for ASCII. When using 128 bit WEP, up to 26 characters can be used for hexadecimal and up to 13 characters for ASCII.

The number of characters that can be entered is limited to 10 or 26 for hexadecimal and 5 or 13 for ASCII.

- WPA
 - WPA Encryption Method
 Select either [TKIP] or [CCMP (AES)].
 - WPA Authent. Method

Select either [WPA-PSK], [WPA], [WPA2-PSK], or [WPA2].

If you selected [WPA-PSK] or [WPA2-PSK], enter the pre-shared key (PSK) of 8 - 63 characters in ASCII code.

When [WPA] or [WPA2] are selected, authentication settings and certificate installation settings are required. For details about setting methods, see "Configuring IEEE 802.1X".

Wireless LAN Signal

When using in infrastructure mode, you can check the machine's radio wave status using the control panel.

Radio wave status is displayed when you press [Wireless LAN Signal].

Restore Factory Defaults

You can return the wireless LAN settings to their defaults.

Reference

- p.17 "Accessing User Tools"
- p.396 "Configuring IEEE 802.1X"

Print List

This section describes how to print the configuration page.


You can check items related to the network environment.

The configuration page shows the current network settings and network information.


- 1. Press the [User Tools] key.
- 2. Press [System Settings].



3. Press [Interface Settings].

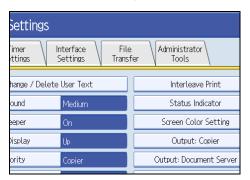

4. Press [Print List].

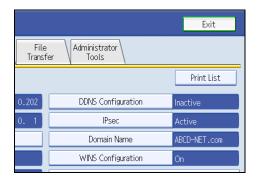

5. Press the [Start] key.

The configuration page is printed.

- 6. Press [Exit].
- 7. Press the [User Tools] key.



• You can also exit by pressing [Exit] on the User Tools main menu.

Reference

• p.17 "Accessing User Tools"

File Transfer

This section describes the user tools in the File Transfer menu under System Settings.

Delivery Option

Enables or disables sending stored or scanned documents to the ScanRouter delivery server.

The default setting is [Off].

Specify this option when selecting whether or not to use the ScanRouter delivery software. If you do, you will have to preregister I/O devices in the ScanRouter delivery software.

Capture Server IPv4 Address

Specify the capture server IPv4 address.

This setting appears when the File Format Converter is installed, and when the capture function is being used by the ScanRouter delivery software.

SMTP Server

Specify the SMTP server name.

If DNS is in use, enter the host name.

If DNS is not in use, enter the SMTP server IPv4 address.

The default setting for "Port No." is "25".

Enter the server name using up to 127 characters. Spaces cannot be entered.

Enter port number between 1 and 65535 using the number keys, and then press the $[^{\pm}]$ key.

The SMTP server shares the same port number with the Direct SMTP server.

SMTP Authentication

Specify SMTP authentication (PLAIN, LOGIN, CRAMMD5, DIGEST-MD5). When sending e-mail to a SMTP server, you can enhance the SMTP server security level using authentication that requires entering the user name and password.

If the SMTP server requires authentication, set [SMTP Authentication] to [On], and then specify the user name, password and encryption.

The default setting is [Off].

• Enter the user name using up to 191 characters.

Spaces cannot be entered. Depending on the SMTP server type, "realm" must be specified. Add "@" after the user name, as in "user name@realm".

- Enter the E-mail address using up to 128 characters.
- Enter the password using up to 128 characters.

Spaces cannot be entered.

Select Encryption as follows:

"Encryption"-[Auto]

1

Use if the authentication method is PLAIN, LOGIN, CRAM-MD5, or DIGEST-MD5.

"Encryption"-[On]

Use if the authentication method is CRAMMD5 or DIGEST-MD5.

"Encryption"-[Off]

Use if the authentication method is PLAIN, or LOGIN.

POP before SMTP

Specify POP authentication (POP before SMTP).

When sending e-mail to a SMTP server, you can enhance the SMTP server security level by connecting to the POP server for authentication.

The default setting is [Off].

If you set POP before SMTP to [On], specify the waiting time after authentication, user name, e-mail address, and password.

• Wait Time after Authent.: "300" msec.

Specify [Wait Time after Authent.] from 0 to 10,000 milliseconds, in increments of one millisecond.

User Name

Enter the user name using up to 191 characters. Spaces cannot be entered.

E-mail Address

Enter the E-mail Address using up to 128 characters. Spaces cannot be entered.

• Password

Enter the password using up to 128 characters. Spaces cannot be entered.

To enable POP server authentication before sending e-mail via the SMTP server, set [POP before SMTP] to [On]. E-mail is sent to the SMTP server after the time specified for [Wait Time after Authent.] has elapsed.

If you select [On], enter server name in POP3/IMAP4 Settings. Also, check POP3 port number in Email Communication Port.

Reception Protocol

Specify the Reception Protocol for receiving e-mail.

The default setting is [POP3].

POP3 / IMAP4 Settings

Specify the POP3/IMAP4 server name for receiving e-mail.

The specified POP3/IMAP4 server name is used for [POP before SMTP].

The default setting is [Auto].

Server Name

If DNS is in use, enter the host name.

If DNS is not in use, enter the POP3/IMAP4 or server IPv4 address.

Enter POP3/IMAP4 server name using up to 127 characters. Spaces cannot be entered.

• Select Encryption as follows:

"Encryption"-[Auto]

Password encryption is automatically set according to the POP/IMAP server settings.

"Encryption"-[On]

Encrypt password.

"Encryption"-[Off]

Do not encrypt password.

Administrator's E-mail Address

Specify the Administrator's E-mail Address.

If a failure occurs in the machine or consumables need to be replaced, e-mail messages are sent to the Administrator's E-mail Address by E-mail Notification function.

On e-mailed scanned documents, if the sender is not specified this appears as the sender's address.

When sending e-mail, administrator's e-mail address will appear as the sender's address under the following conditions:

- The sender has not been specified and the machine's e-mail address has not been registered.
- The specified sender is not registered in the machine's address book and the machine's e-mail address has not been registered.

When conducting SMTP authentication for the transmitted files, the Administrator's E-mail Address will appear in the "From:" box. If you have specified the user name and e-mail address in [SMTP Authentication], make sure to specify this setting.

Enter up to 128 characters.

On e-mailed scanned documents, if [Auto Specify Sender Name] is [Off], specify the sender.

E-mail Communication Port

Specify the port numbers for receiving E-mail. The specified POP3 port number is used for [POP before SMTP].

The default setting for POP3 is "110".

The default setting for IMAP4 is "143".

Enter a port number between 1 and 65535 using the number keys, and then press the [#] key.

E-mail Reception Interval

Specify, in minutes, the time interval for via POP3 or IMAP4 server.

The default setting is [On], "15" minute (s).

If [On] is selected, the time can be set from 2 to 1440 minutes in increments of one minute.

Max. Reception E-mail Size

Specify the maximum reception e-mail size.

The default setting is "2" MB.

Enter a size from 1 - 50 MB in increments of one megabyte.

E-mail Storage in Server

Specify whether or not to store received e-mails on the POP3 or IMAP4 server.

The default setting is [Off].

Default User Name / Password (Send)

Specify the user name and password required when sending scan files directly to a shared folder on a computer running Windows, to a FTP server, or to a NetWare server.

Enter in up to 128 characters.

Program / Change / Delete E-mail Message

You can program, change, or delete the e-mail message used when sending an or scan file as an attachment.

- Program/Change:
 - 1. Press the [User Tools] key.
 - 2. Press [System Settings].
 - 3. Press [File Transfer].
 - 4. Press [Program / Change / Delete E-mail Message].
 - 5. Check that [Program / Change] is selected.
 - 6. Press [*Not Programmed].

To change the registered e-mail message, select the e-mail message to change.

- 7. Press [Change] under the "Name".
- 8. Enter a name, and then press [OK].

Enter the name using up to 20 characters.

9. Press [Edit].

To start a new line, press [OK] to return to the e-mail message screen, and then press [▼ Next] in "Select Line to Edit:".

10. Enter the text, and then press [OK].

Enter up to five lines of text. Each line can consist of up to 80 characters.

- 11. Press [OK].
- 12. Press [Exit].
- 13. Press the [User Tools] key.
- Delete:

- 1. Press the [User tools] key.
- 2. Press [System Settings].
- 3. Press [File Transfer].
- 4. Press [Program / Change / Delete E-mail Message].
- 5. Press [Delete].
- 6. Select the e-mail message to delete.

The confirmation message about deleting appears.

- 7. Press [Yes].
- 8. Press [Exit].
- 9. Press the [User Tools] key.

Auto Specify Sender Name

Set whether or not to specify the name of the sender when sending e-mail.

The default setting is [Off].

• On

If you select [On], the specified e-mail address will appear in the "From:" box. If you do not specify the sender's address, the administrator's e-mail address will appear in the "From:" box.

If you do not specify the sender when sending a file by e-mail, or if the specified e-mail address is not registered in the machine's address book, the machine's e-mail address will appear in the "From:" box. If the machine does not have an e-mail address, the administrator's e-mail address will appear in the "From:" box.

Off

If you select [Off], the specified e-mail address will appear in the "From:" box, but you cannot send e-mail without specifying the sender's e-mail address. you cannot send e-mail if the specified sender's e-mail address is not registered in the machine's address book.

Scanner Resend Interval Time

Specify the time that must elapse before a scan file is resent if transfer to the delivery server, mail server, or file server fails.

The default setting is "300" second (s).

The interval time can be set from 60 to 900 seconds in one second increments, using the number keys.

This setting is for the scanner function.

This setting is not valid for the WSD scanner function.

Number of Scanner Resends

Specify the maximum number of times a scan file is resent if transfer to the delivery server, mail server, or file server fails.

The default setting is [On], "3" time (s).

1

If [On] is selected, the number of times can be set from 1 to 99.

This setting is for the scanner function.

This setting is not valid for the WSD scanner function.

■ Reference

• p.17 "Accessing User Tools"

Administrator Tools

This section describes the user tools in the Administrator Tools menu under System Settings.

Administrator Tools are used by the administrator. To change these settings, contact the administrator.

We recommend specifying Administrator Authentication before making Administrator Tools settings.

Address Book Management

You can add, change or delete information registered in the Address Book.

For details, see "Address Book".

• Program / Change

You can register and change names as well as user codes.

Names

You can register a name, key display, registration number, and title selection.

• Auth. Info

You can register a user code, and specify the functions available to each user code. You can also register user names and passwords to be used when sending e-mail, sending files to folders, or accessing a LDAP server.

• Protection

You can register a protection code.

• E-mail

You can register an e-mail address.

Folder

You can register the protocol, path, port number, and server name.

Add to Group

You can put names registered in the Address Book into a group.

• Delete

You can delete a name from the Address Book.

You can register up to 2,000 names.

You can register up to 500 user codes.

You can also register and manage names in the Address Book using Web Image Monitor or SmartDeviceMonitor for Admin.

Address Book: Program / Change / Delete Group

Names registered in the Address Book can be added into a group. You can then easily manage the names registered in each group.

Program/Change

П

You can register and change groups.

Names

You can register a name, key display, registration number, and title selection.

• Programmed User/Group

You can check the names or groups registered in each group.

Protection

You can register a protection code.

• Add to Group

You can put groups registered in the Address Book into a group.

Delete

You can delete a group from the Address Book.

You can register up to 100 groups.

You can also register and manage groups in the Address Book using Web Image Monitor or SmartDeviceMonitor for Admin.

Use SmartDeviceMonitor for Admin provided with the printer scanner unit.


Address Book: Change Order

Changes the order of registered names.


You can rearrange the order of items on the same page, but you cannot move items to another page.

For example, you cannot move an item from "PLANNING" ([OPQ]) to "DAILY" ([CD]).

- 1. Press the [User Tools] key.
- 2. Press [System Settings].
- 3. Press [Administrator Tools].
- 4. Press [Address Book: Change Order].

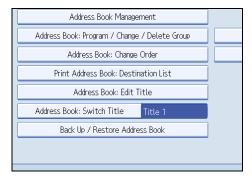


5. Press the name key to be moved.

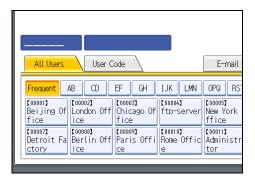

You can select a name using the number keys.


6. Press the name key in place you want to move it to.

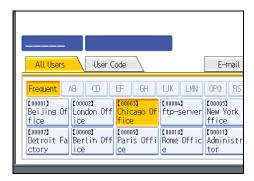

The user key is moved to the selected position, and the user key currently at the selected position is moved forward or backward.

If you move the selected user key forward, the user key currently at the selected position is moved backward.

If you move the selected user key backward, the user key currently at the selected position is moved forward.

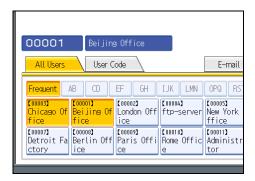

You can also select a name using the number keys.

Print Address Book: Destination List

You can print the destination list registered in the Address Book.

• Print in Title 1 Order

Prints the Address Book in Title 1 order.

• Print in Title 2 Order

Prints the Address Book in Title 2 order.

Print in Title 3 Order

Prints the Address Book in Title 3 order.

• Print Group Dial List


Prints the group Address Book.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].
- 3. Press [Administrator Tools].
- 4. Press [Print Address Book: Destination List].
- 5. Select the print format.
- 6. To print the list on two-sided pages, select [Print on 2 Sides].
- Press the [Start] key.The list prints out.


Address Book: Edit Title

You can edit the title to easily find a user.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].
- 3. Press [Administrator Tools].
- 4. Press [Address Book: Edit Title].

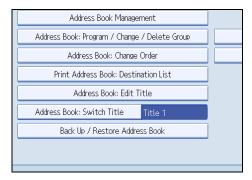

5. Press the title key you want to change.

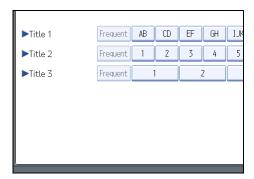

- 6. Enter the new name, and then press [OK].
- 7. Press [OK].
- 8. Press the [User Tools] key.

Address Book: Switch Title

Specifies the title to select a name.

The default setting is [Title 1].

Back Up / Restore Address Book

You can back up the machine's address book to external storage or restore the backup copy from the external storage.

Restore data overwrites Address Book data stored on the machine, and clears the counter of each registered user of the machine.

You can also back up and restore the machine's Address Book using Web Image Monitor or SmartDeviceMonitor for Admin. For details, see the Help files of Web Image Monitor or SmartDeviceMonitor for Admin.

Back Up

You can back up the machine's address book to external storage.

Restore

You can restore the backup copy of the address book from external storage.

Format

You can format the external storage.

Obtain Media Info

The free space and occupied space of the external storage are displayed.

Display / Print Counter

Allows you to view and print the number of prints.

Display / Print Counter

Displays the number of prints for each function (Total, Copier, Printer, A3/DLT, Duplex Scanner Send).

Print Counter List

Prints a list of the number of prints made under each function.

Display / Clear / Print Counter per User

Allows you to view and print the numbers of prints accessed with user codes, and to set those values to 0.

Press [▲Previous] and [▼Next] to show all the numbers of prints.

The number of prints may differ from the counter values shown in Display/Print Counter.

• Print Counter List for All Users

Prints the counter value for all the users.

Clear Counter List for All Users

Resets the counter value for all the users.

• Print Counter List Per User

Prints the counter value for each user.

• Clear Counter List Per User

Resets the counter value for each user.

• Select All on the Page

Select all the users on the page.

User Authentication Management

• User Code Auth.

Using User Code Authentication, you can limit the available functions and supervise their use.

When using User Code Authentication, register the user code.

Using the Printer PC Control function, you can obtain a log of prints corresponding to the codes entered using the printer driver.

For details about Basic Authentication, Windows Authentication, LDAP Authentication, and Integration Server Authentication, consult your administrator.

• Functions to Restrict

[Copier], [Document Server], [Printer], [Printer: PC Control], [Scanner]

• Printer Job Authentication

[Entire], [Simple (Limitation)], [Simple (All)]

- Basic Auth.
- Windows Auth.
- LDAP Auth.
- Integration Svr. Auth.
- Off

The default setting is [Off].

Administrator Authentication Management

For details about this function, consult your administrator.

Program / Change Administrator

For details about this function, consult your administrator.

Key Counter Management

You can specify the function you want to manage with the key counter.

• Copier: On / Off

• Document Server: On / Off

• Printer: On / Off

• Other Functions: On / Off

External Charge Unit Management

For details about this function, consult your administrator.

Enhanced External Charge Unit Management

For details about this function, consult your administrator.

Extended Security

You can specify whether or not to use the extended security function. For details about the extended security functions, consult your administrator.

Auto Delete File in Document Server

You can specify whether documents stored in the Document Server will or will not be deleted after a specified period of time.

The default setting is [On], "3" day (s).

If you select [On], documents stored subsequently are deleted after the specified period.

If you select [Off], documents are not automatically deleted.

If you select [On], enter a number of days from 1 to 180 (in 1 day increments).

The default is 3 days, this means documents are deleted 3 days (72 hours) after they are stored.

Delete All Files in Document Server

You can delete files stored in the Document Server, including files stored for Sample Print, Locked Print, Hold Print, and Stored Print under the printer function.

Even if a password is always set, all documents are deleted.

A confirmation message appears. To delete all documents, select [Yes].

Program / Change / Delete LDAP Server

You can program the LDAP server to find up e-mail destinations in the LDAP server Address Book directly. This function is possible when using sending scan files by e-mail using the scanner.

- Name
- Server Name
- Search Base
- Port Number
- Use Secure Connection (SSL)
- Authentication
- User Name
- Password
- Realm Name
- Search Conditions
- Search Options

To start a LDAP search, make sure that the items listed below are set. For other items, check your environment and make any necessary changes.

This function supports LDAP Version 2.0 and 3.0.

To use the LDAP server, select [On] under LDAP Search.

For details about how to program the LDAP Server, see "Programming the LDAP server".

LDAP Search

You can specify whether or not to use the LDAP server for searching.

The default setting is [Off].

If you select [Off], LDAP server list will not appear on the searching display.

Program / Change / Delete Realm

You can program the realm to be used for Kerberos authentication.

- Realm Name
- KDC Server Name
- Domain Name

Be sure to set both the realm name and KDC server name when programming a realm.

For details about Program/Change/Delete Realm, see "Programming the Realm".

AOF (Always On)

You can specify whether or not to use Auto Off.

The default setting is [On].

Service Mode Lock

For details about this function, consult your administrator.

Firmware Version

You can check the version of the software installed in this machine.

Network Security Level

For details about this function, consult your administrator.

Auto Erase Memory Setting

For details about this function, consult your administrator.

Erase All Memory

For details about this function, consult your administrator.

Delete All Logs

For details about this function, consult your administrator.

Transfer Log Setting

For details about this function, consult your administrator.

Data Security for Copying

For details about this function, consult your administrator.

Fixed USB Port

You can specify whether or not to fix the USB port.

The default setting is [Off].

If a computer with the printer driver installed is connected through USB to another printer of the same model, selecting [Level 1] for this option eliminates the need for reinstallation of the driver. If you want to select [Level 2], contact your sales or service representative.

Machine Data Encryption Settings

For details about this function, consult your administrator.

Print Backup: Delete All Files

For details about this function, consult your administrator.

Print Backup: Default Format

For details about this function, consult your administrator.

Print Backup: Default Resolution

For details about this function, consult your administrator.

Print Backup: Default User Name

For details about this function, consult your administrator.

Print Backup: Compression

For details about this function, consult your administrator.

Data Carry-over Setting for Address Book Auto-program

With the Address Book Auto-program function, you can specify whether or not the user authentication policy is carried over from the user information registered under "Windows Authentication", "LDAP Authentication", or "Integration Server Authentication":

- [Carry-over Data]
- [Do not Carry-over]

If you select [Carry-over Data], you must then specify the data you want to carry over by entering the relevant registration number.

For details about Windows Authentication, LDAP Authentication, or Integration Server Authentication, consult your administrator.

■ Reference

- p.17 "Accessing User Tools"
- p.55 "Programming the LDAP server"
- p.61 "Programming the Realm"

Programming the LDAP server

This section describes how to specify the LDAP server settings.

This function supports LDAP version 2.0 and 3.0.

Program the LDAP server to find e-mail destinations in the LDAP server Address Book directly.

This function is possible when sending scan files by e-mail using the scanner.

To start a LDAP search, make sure that the items listed below are set. For other items, check your environment and make any necessary changes.

- Server Name
- · Search Base
- Port Number
- Authentication
- Search Conditions

If [Kerberos Authentication] is selected be sure to set the "User Name", "Password", and the "Realm Name".

If [Digest Authentication] or [Cleartext Authentication] is selected be sure to set the "User Name" and "Password".

To use the LDAP server in Administrator Tools, select [On] under "LDAP Search".

The LDAP version 2.0 does not support Digest Authentication.

To select Kerberos Authentication, a realm must be registered in advance.

Programming the LDAP server

This section describes how to program the LDAP server.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].
- 3. Press [Administrator Tools].
- 4. Press [VNext].
- 5. Press [Program / Change / Delete LDAP Server].
- 6. Check that [Program / Change] is selected.
- 7. Select the LDAP server you want to program or change.

When programming the server, select [*Not Programmed].

- 8. Press [Change] right "Name".
- 9. Enter the name, and then press [OK].
- 10. Press [Change] right "Server Name".

11. Enter the server name, and then press [OK].

12. Press [Change] right "Search Base".

Select the root folder to start the search from e-mail addresses registered in the selected folder which is search targets.

13. Enter the search base, and then press [OK].

For example, if the search target is the sales department of ABC company, enter "dc=sales department, o=ABC". (In this example, the description is for an active directory. "dc" is for the organization unit, and "o" is for the company.)

Search base registration may be required depending on your server environment. When registration is required, unspecified searches will result in error.

Check your server environment and enter any required specifications.

14. Press [Change] right "Port Number".

Specify the port number for communicating with the LDAP server. Specify a port that is compliant with your environment.

15. Enter the port number using the number keys, and then press the [#] key.

When SSL is set to [On], the port number automatically changes to "636".

16. right "Use Secure Connection (SSL)", press [On].

Use SSL to communicate with the LDAP server.

For SSL to function, the LDAP server must support SSL.

If you set SSL to [On], the port number automatically changes to "636".

If you do not enable SSL, security problems may occur. To enable SSL, you must use the machine's settings. For details, consult your network administrator.

17. Press [▼Next].

18. Select the authentication method.

To make a search request to the LDAP server, use the administrator account for authentication.

Authentication settings must comply with your server's authentication settings. Check your server settings before setting this machine.

[Digest Authentication] is available only with LDAP Version 3.0.


If you select [Cleartext Authentication], a password is sent to the LDAP server as is, without any encryption processing.

If you select [Digest Authentication], a password is sent using an encryption process that prevents passwords from being revealed during transmission to the LDAP server.

If you select [Kerberos Authentication], a password is sent using an encryption process that prevents passwords from being revealed during transmission to the KDC server where authentication occurs. If you select [Off], proceed to step 24.

If you select [Digest Authentication] or [Cleartext Authentication], proceed to step 19 to 22, and then proceed to step 24.

If you select [Kerberos Authentication], proceed to step 19 to 23, and then proceed to step 24.

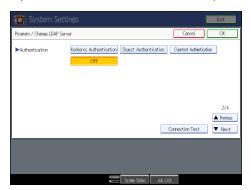

19. Press [Change] right "User Name".

When [Kerberos Authentication], [Digest Authentication], or [Cleartext Authentication] is selected for the authentication setting, use the administrator account name and password. Do not enter the administrator account name and password when using authentication for each individual or each search.

20. Enter the user name, and then press [OK].

Procedures for the user name setting differ depending on server environment. Check your server environment before making the setting.

Example: Domain Name\User Name, User Name@Domain Name, CN=Name, OU=Department Name, DC=Server Name

21. Press [Change] right "Password".


22. Enter the password, and then press [OK].

The user name and password are required for administrator authentication to access the LDAP server.

You can connect to the LDAP server using an user name and password stored in the Address Book. For details, see "Registering SMTP and LDAP Authentication".

If you select [Digest Authentication] or [Cleartext Authentication], proceed to step 24.

23. Select the Realm.

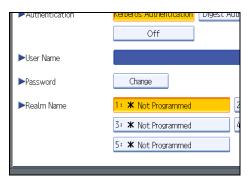

24. Press [Connection Test].

Access the LDAP server to check that the proper connection is established. Check authentication works according to the authentication settings.

25. Press [Exit].

If the connection test fails, check your settings and try again.

This function does not check search conditions or the search base.

- 26. Press [VNext].
- 27. Press [Change] for items you want to use as search conditions from the following: "Name", "E-mail Address", "Company Name", "Fax Number" and "Department Name".

You can enter an attribute as a typical search keyword. Using the entered attribute, the function searches the LDAP server's Address Book.

28. Enter the attribute you want to use when searching for e-mail addresses, and then press [OK].

The attribute value may change depending on the server environment. Check that the attribute value complies with your server environment before setting it.

You can leave items blank, but you cannot leave attributes blank when searching for e-mail addresses from the LDAP server Address Book.


- 29. Press [VNext].
- 30. Press [Change] right "Attribute".
- 31. Enter the attribute you want to use when searching for e-mail addresses, and then press [OK].

The attribute value may change depending on the server environment. Check that the attribute complies with your server environment before setting it.


- 32. Press [Change] right "Key Display".
- 33. Enter the key display, and then press [OK].

The registered "Key Display" appears as a keyword for searching LDAP.

• Without key display registration

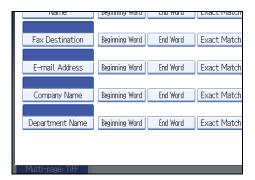

• With key display registration

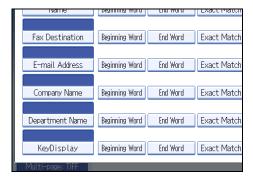

The key does not appear on the search screen unless both "Attribute" and "Key Display" are registered. Make sure you register both to use the optional search.

- 34. Press [OK].
- 35. Press [Exit].
- 36. Press the [User Tools] key.
- Reference
 - p.327 "Registering SMTP and LDAP Authentication"

Changing the LDAP server

This section describes how to change the programmed LDAP server.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].
- 3. Press [Administrator Tools].
- 4. Press [▼Next].
- 5. Press [Program / Change / Delete LDAP Server].
- 6. Check that [Program / Change] is selected.

- 1
- 7. Select the LDAP server you want to change.
- 8. Change the settings as necessary.
- 9. Press [OK] after changing each item.
- 10. Press [Exit].
- 11. Press the [User Tools] key.

Deleting the LDAP server

This section describes how to delete the programmed LDAP server.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].
- 3. Press [Administrator Tools].
- 4. Press [Vext].
- 5. Press [Program / Change / Delete LDAP Server].
- 6. Press [Delete].
- 7. Select the LDAP server you want to delete.
- 8. Press [Yes].
- 9. Press [Exit].
- 10. Press the [User Tools] key.

Programming the Realm

This section describes how to specify the Realm settings.

Program the realm to be used for Kerberos authentication.

A realm is the network area in which Kerberos authentication is used. After confirming the network environment, specify the necessary items.

You can register up to 5 realms.

Programming the Realm


This section describes how to program the Realm.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].
- 3. Press [Administrator Tools].
- 4. Press [VNext].
- 5. Press the [Program / Change / Delete Realm].
- 6. Check that [Program / Change] is selected.



7. Press [*Not Programmed].

8. Press [Change] right "Realm Name".

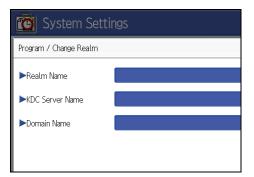

9. Enter the realm name, and then press [OK].

Enter the realm name, or host name.

You can enter a realm name using up to 64 characters.

- 10. Press [Change] right "KDC Server Name".
- 11. Enter the KDC server name, and then press [OK].

Enter the KDC server name, host name, or IPv4 address.

You can enter a KDC server name using up to 64 characters.

- 12. Press [Change] right "Domain Name".
- 13. Enter the domain name, and then press [OK].

Enter the domain name, or host name.

You can enter a domain name using up to 64 characters.

- 14. Press [OK].
- 15. Press [Exit].
- 16. Press the [User Tools] key.

Changing the Realm

This section describes how to change the programmed Realm.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].
- 3. Press [Administrator Tools].
- 4. Press [VNext].
- 5. Press [Program / Change / Delete Realm].
- 6. Check that [Program / Change] is selected.
- 7. Select the Realm you want to change.

- 8. To change the realm name, press [Change] right "Realm Name".
- 9. Enter the realm name, and then press [OK].

You can enter a realm name using up to 64 characters.

- 10. To change the KDC server name, press [Change] right "KDC Server Name".
- 11. Enter the KDC server name, and then press [OK].

You can enter a KDC server name using up to 64 characters.

- 12. To change the domain name, press [Change] right "Domain Name".
- 13. Enter the domain name, and then press [OK].

You can enter a domain name using up to 64 characters.

- 14. Press [OK].
- 15. Press [Exit].
- 16. Press the [User Tools] key.

Deleting the Realm

This section describes how to delete the programmed Realm.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].
- 3. Press [Administrator Tools].
- 4. Press [Vext].
- 5. Press [Program / Change / Delete Realm].
- 6. Press [Delete].
- 7. Select the realm you want to delete.
- 8. Press [Yes].
- 9. Press [Exit].
- 10. Press the [User Tools] key.

System Settings on Main and Sub-machines

This section explains the System Settings on the two machines during Connect Copy.

General Features

How the defaults in the General Features of copying of the main and sub-machines are used in connect copy will be explained.

Only the functions described in this section affect the Connect Copy function.

Panel Key Sound

• The main and sub-machines follow their respective set values.

Copy Count Display (copier/Document Server)

- The set values of the main and sub-machines do not affect the connect copy.
- The copy counter is always displayed as Up (count up).

Function Priority

- The set values of the main and sub-machines do not affect the connect copy.
- When the Auto Reset time of the main machine has lapsed, Connect Copy will be canceled.
 After that, the machine switches back to the mode selected in Function Priority upon reaching the System Reset time.

Print Priority

- The set values of the main and sub-machines do not affect the connect copy.
- When the Auto Reset time of the main machine has lapsed, Connect Copy will be canceled.
 After that, the machine switches back to the mode selected in Function Priority upon reaching the System Reset time.

Function Reset Timer

• The set values of the main and sub-machines do not affect the connect copy.

Interleave Print

• The set values of the main and sub-machines do not affect the connect copy.

Output: Copier

• The main and sub-machines follow their respective set values.

Output: Document Server

• The main and sub-machines follow their respective set values.

Paper Tray Priority: Copier

• The main and sub-machines follow their respective set values.

ADF Original Table Elevation

The main machine follows the values that are set in it. The set values of the sub-machines do not
affect the connect copy.

System Status/Job List Display Time

• The main and sub-machines follow their respective set values.

Timer Settings

How the defaults in the Timer Settings of copying of the main and sub-machines are used in connect copy will be explained.

Only the functions described in this section affect the Connect Copy function.

Auto Off Timer

• The main machine follows the values that are set in it. The set values of the sub-machines do not affect the connect copy.

Energy Saver Timer

- The set values of the main and sub-machines do not affect the connect copy.
- In Connect Copy mode, neither machine will enter Energy Saver modes (Low Power mode, or Energy Saver mode).

Panel Off Timer

- The set values of the main and sub-machines do not affect the connect copy.
- In Connect Copy mode, neither machine will enter Energy Saver modes (Low Power mode, or Energy Saver mode). When the preset time elapses after the connect copy is cleared, the machines will transit to the power saving status.

Copier / Document Server Auto Reset Timer

• The set values of the main and sub-machines do not affect the connect copy.

Weekly Timer Code

- The set values of the main and sub-machines do not affect the connect copy.
- If the sub-machine is off when the timer code has to be entered, turn on the sub-machine and enter the code. Connect Copy is not possible if the sub-machine is off.

Weekly Timer: Monday-Sunday

- The set values of the main and sub-machines do not affect the connect copy.
- In Connect Copy mode, Weekly timer settings on the sub-machine will be disabled.

Administrator Tools

How the defaults in the Administrator Tools of copying of the main and sub-machines are used in connect copy will be explained.

Only the functions described in this section affect the Connect Copy function.

User Authentication Management

• The main machine follows the values that are set in it. The set values of the sub-machines do not affect the connect copy.

Administrator Authentication Management

• The main machine follows the values that are set in it. The set values of the sub-machines do not affect the connect copy.

Program / Change Administrator

 The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

Key Counter Management

The main machine follows the values that are set in it. The sub-machines follows the settings made
on the main machine, regardless of the settings made in it.

External Charge Unit Management

• The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

Enhanced External Charge Unit Management

The main machine follows the values that are set in it. The sub-machines follows the settings made
on the main machine, regardless of the settings made in it.

AOF (Always On)

- The set values of the main and sub-machines do not affect the connect copy.
- During connect copy, neither the main machine nor the sub-machines is automatically switched
 off. Once the connect copy is cleared, the power is cut off as the time period set in "Auto-Off
 Time Setting" elapses in accordance with the setting of AOF.

2. Tray Paper Settings


This chapter describes various items of Tray Paper Settings available in this machine. If the specified paper size differs from the actual size of the paper loaded in the paper tray, a misfeed might occur because the correct paper size was not detected.

Accessing Tray Paper Settings

Changing Tray Paper Settings

This section describes how to change the settings of Tray Paper Settings.

1. Press the [Tray Paper Setting] key.

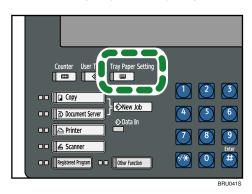

2. Select the tray that you want to change the settings.




3. Change settings, and then press [OK].



Quitting Tray Paper Settings

This section describes how to quit the settings of Tray Paper Settings.

1. Press the [Tray Paper Settings] key.

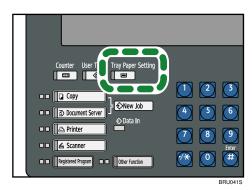

UNote

• You can also quit Tray Paper Settings by pressing [Exit].

2

Items of Tray Paper Settings

This section describes the items in Tray Paper Settings menu.

Default settings are shown in **bold type**.



• If the specified paper size differs from the actual size of the paper loaded in the paper tray, a misfeed might occur because the correct paper size was not detected.

Tray 1

Paper Size

You can specify the size of the paper in Tray 1 when printing data from the computer.

The paper size you can set for Tray 1 are as follows:

$$8^{1}/_{2} \times 11^{\square}$$

The paper guide for the tray 1 is fixed. If you need to change the paper size, contact your service representative.

Paper Type

You can set the display so you can see what type of paper is loaded in the paper tray.

The paper types you can set for Tray 1 are as follows:

[Do not Display], [Recycled Paper], [Special Paper], [Color Paper 1], [Color Paper 2], [Yellow], [Green], [Blue], [Purple], [Ivory], [Orange], [Pink], [Red], [Gray], [Letterhead], [Preprinted Paper], [Bond Paper], [Cardstock], [Prepunched Paper]

Paper Thickness

The paper thicknesses you can set for Tray 1 are as follows:

• Plain Paper

$$52 - 105 \text{ g/m}^2 (14 - 28 \text{ lb BOND})$$

Middle Thick

$$106 - 163 \text{ g/m}^2 (28 \text{ lb BOND} - 90 \text{ lb INDEX})$$

• Thick Paper 1

$$164-216 \text{ g/m}^2 \text{ (90 lb INDEX - 80 lb COVER)}$$

The default setting for "Paper Type" is **Do not Display**.

The default setting for "Paper Thickness" is Plain Paper.

The default setting for "Apply Duplex" is Yes.

The default setting for "Apply Auto Paper Select" is Yes.

The key mark is displayed next to the paper tray if [No] is selected in "Apply Auto Paper Select".

For details about the relations between possible paper sizes and thickness, see "Recommended Paper Sizes and Types", About This Machine.

For details about the recommended conditions for using thick paper, see "Thick Paper", About This Machine.

Designation Sheet 1 - 9

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

• Select Designation Sheet from 1-9

You can specify paper tray 1-9 as the source trays for designation sheets.

• Display Time

You can select [At Mode Selected] or [Full Time].

· Apply Duplex

You can select [Yes] or [No].

Cover Sheet Tray

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Back Cover Sheet Tray

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

• Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Slip Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

· Display Time

You can select [At Mode Selected] or [Full Time].

Separation Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

• Display Time

You can select [At Mode Selected] or [Full Time].

Tray 1 (with the optional A3/11×17 Tray Unit)

Paper Size

You can select the size of the paper loaded in the optional A3/11×17 tray unit.

The paper size you can set for Tray 1 (with the optional A3/11×17 tray unit) are as follows:

11×17□

The paper guide for the tray 1 is fixed. If you need to change the paper size, contact your service representative.

Paper Type

You can set the display so you can see what type of paper is loaded in the paper tray.

The paper types you can set for Tray 1 (with the optional A3/11 \times 17 tray unit) are as follows:

[Do not Display], [Recycled Paper], [Special Paper], [Color Paper 1], [Color Paper 2], [Yellow], [Green], [Blue], [Purple], [Ivory], [Orange], [Pink], [Red], [Gray], [Letterhead], [Preprinted Paper], [Bond Paper], [Cardstock], [Prepunched Paper]

Paper Thickness

The paper thicknesses you can set for Tray 1 (with the optional A3/11×17 tray unit) are as follows:

• Plain Paper

$$52 - 105 \text{ g/m}^2 (14 - 28 \text{ lb BOND})$$

Middle Thick

$$106 - 163 \text{ g/m}^2 (28 \text{ lb BOND} - 90 \text{ lb INDEX})$$

• Thick Paper 1

$$164 - 216 \text{ g/m}^2$$
 (90 lb INDEX - 80 lb COVER)

The default setting for "Paper Type" is **Do not Display**.

The default setting for "Paper Thickness" is **Plain Paper**.

The default setting for "Apply Duplex" is Yes.

The default setting for "Apply Auto Paper Select" is Yes.

The key mark is displayed next to the paper tray if [No] is selected in "Apply Auto Paper Select".

For details about the relations between possible paper sizes and thickness, see "Recommended Paper Sizes and Types", About This Machine. For details about the recommended conditions for using thick paper, see "Thick Paper", About This Machine.

Designation Sheet 1 - 9

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

Select Designation Sheet from 1-9

You can specify paper tray 1-9 as the source trays for designation sheets.

• Display Time

You can select [At Mode Selected] or [Full Time].

· Apply Duplex

You can select [Yes] or [No].

Cover Sheet Tray

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Back Cover Sheet Tray

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

• Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Slip Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time

You can select [At Mode Selected] or [Full Time].

Separation Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time

You can select [At Mode Selected] or [Full Time].

Tray 2

Paper Size

You can select the size of the paper loaded in the paper tray.

The paper sizes you can set for Tray 2 are as follows:

- [Auto Detect]
- 13×18□, 12×18□, 11×17□, 11×15□, 11×14□, 10×15□, 10×14□, 8¹/₂×14□, 8¹/₂×13□, 8¹/₂×11□, 8¹/₄×14□, 8¹/₄×13□, 8×13□, 8×10□, 7¹/₄×10¹/₂□, 5¹/₂×8¹/₂□, A3□, A4□, A5□, B4 JIS□, B5 JIS□, SRA3□, SRA4□, 310×432 mm□, 226×310 mm□, 8K□, 16K□
- 8¹/₂×11^D, 7¹/₄×10¹/₂D, 5¹/₂×8¹/₂D, A4D, A5D, B5 JISD, SRA4D, 226×310 mmD, 16KD
- [Custom Size]

You can specify a custom size of between 5.5 - 13.0 inches (139.7 - 330.2 mm) vertically, and between 5.5 - 18.03 inches (139.7 - 458.0 mm) horizontally.

The default setting is Auto Detect.



 For details about paper sizes that can be automatically detected, see "Recommended Paper Sizes and Types", About This Machine.

Paper Type

You can set the display so you can see what type of paper is loaded in the paper tray.

The print function uses this information to automatically select the paper tray.

The paper types you can set for Tray 2 are as follows:

[Do not Display], [Recycled Paper], [Special Paper], [Color Paper 1], [Color Paper 2], [Yellow], [Green], [Blue], [Purple], [Ivory], [Orange], [Pink], [Red], [Gray], [Letterhead], [Translucent Paper], [Preprinted Paper], [Bond Paper], [Cardstock], [OHP (Transparency)], [Prepunched Paper]

Paper Thickness

The paper thicknesses you can set for Tray 2 are as follows:

- Plain Paper
 52 105 a/m² (14 28 lb BOND)
- Middle Thick

 $106 - 163 \text{ g/m}^2 \text{ (28 lb BOND - 90 lb INDEX)}$

Thick Paper 1
 164-216 g/m² (90 lb INDEX - 80 lb COVER)

The default setting for "Paper Type" is **Do not Display**.

The default setting for "Paper Thickness" is Plain Paper.

The default setting for "Apply Duplex" is Yes.

The default setting for "Apply Auto Paper Select" is Yes.

The key mark is displayed next to the paper tray if [No] is selected in "Apply Auto Paper Select".

For details about the relations between possible paper sizes and thickness, see "Recommended Paper Sizes and Types", About This Machine.

For details about the recommended conditions for using thick paper, see "Thick Paper", About This Machine.

Designation Sheet 1 - 9

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

• Select Designation Sheet from 1-9

You can specify paper tray 1-9 as the source trays for designation sheets.

Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Cover Sheet Tray

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Back Cover Sheet Tray

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Slip Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

• Display Time

You can select [At Mode Selected] or [Full Time].

Separation Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

• Display Time

You can select [At Mode Selected] or [Full Time].

Tray 3

Paper Size

The paper sizes you can set for Tray 3 are as follows:

- [Auto Detect]
- 13×18¬, 12×18¬, 11×17¬, 11×15¬, 11×14¬, 10×15¬, 10×14¬, 8¹/₂×14¬, 8¹/₂×13¬, 8¹/₂×11¬, 8¹/₄×14¬, 8¹/₄×13¬, 8×13¬, 8×10¬, 7¹/₄×10¹/₂¬, 5¹/₂×8¹/₂¬, A3¬, A4¬, A5¬, B4 JIS¬, B5 JIS¬, SRA3¬, SRA4¬, 310×432 mm¬, 226×310 mm¬, 8K¬, 16K¬
- 8¹/₂×11^D, 7¹/₄×10¹/₂D, 5¹/₂×8¹/₂D, A4D, A5D, B5 JISD, SRA4D, 226×310 mmD, 16KD
- [Custom Size]

You can specify a custom size of between 5.5 - 13.0 inches (139.7 - 330.2 mm) vertically, and between 5.5 - 18.03 inches (139.7 - 458.0 mm) horizontally.

The default setting is Auto Detect.



 For details about paper sizes that can be automatically detected, see "Recommended Paper Sizes and Types", About This Machine.

Paper Type

You can set the display so you can see what type of paper is loaded in each paper tray.

The print function uses this information to automatically select the paper tray.

The paper types you can set for Tray 3 are as follows:

[Do not Display], [Recycled Paper], [Special Paper], [Color Paper 1], [Color Paper 2], [Yellow], [Green], [Blue], [Purple], [Ivory], [Orange], [Pink], [Red], [Gray], [Letterhead], [Translucent Paper], [Preprinted Paper], [Bond Paper], [Cardstock], [OHP (Transparency)], [Prepunched Paper]

Paper Thickness

The paper thicknesses you can set for Tray 3 are as follows:

• Plain Paper

52 - 105 g/m² (14 - 28 lb BOND)

• Middle Thick

 $106 - 163 \text{ g/m}^2 (28 \text{ lb BOND} - 90 \text{ lb INDEX})$

• Thick Paper 1

164 - 216 g/m² (90 lb INDEX - 80 lb COVER)

The default setting for "Paper Type" is **Do not Display**.

The default setting for "Paper Thickness" is Plain Paper.

The default setting for "Apply Duplex" is Yes.

The default setting for "Apply Auto Paper Select" is Yes.

The key mark is displayed next to the paper tray if [No] is selected in "Apply Auto Paper Select".

For details about the relations between possible paper sizes and thickness, see "Recommended Paper Sizes and Types", About This Machine.

For details about the recommended conditions for using thick paper, see "Thick Paper", About This Machine.

Designation Sheet 1 - 9

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

• Select Designation Sheet from 1-9

You can specify paper tray 1-9 as the source trays for designation sheets.

Display Time

You can select [At Mode Selected] or [Full Time].

· Apply Duplex

You can select [Yes] or [No].

Cover Sheet Tray

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Back Cover Sheet Tray

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

• Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Slip Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time

You can select [At Mode Selected] or [Full Time].

Separation Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

· Display Time

You can select [At Mode Selected] or [Full Time].

Tray 4 (with the optional Large Capacity Tray)

Paper Size

You can select the size of the paper loaded in the optional large capacity tray (LCT).

This menu appears only when the LCT is installed.

The paper sizes you can set for Tray 4 (with the optional LCT) are as follows:

- [Auto Detect]
- $5^{1}/_{2} \times 8^{1}/_{2} \square$, A5 \square
- 81/2×11D, 51/2×81/2D, A4D, A5D, B5 JISD

You can specify a custom size. To use a custom size paper on this tray, additional setup is required. For details, contact your service representative.

The default setting is Auto Detect.



 For details about paper sizes that can be automatically detected, see "Recommended Paper Sizes and Types", About This Machine.

Paper Type

You can set the display so you can see what type of paper is loaded in the paper tray.

The print function uses this information to automatically select the paper tray.

The paper types you can set for Tray 4 (with the optional LCT) are as follows:

[Do not Display], [Recycled Paper], [Special Paper], [Color Paper 1], [Color Paper 2], [Yellow], [Green], [Blue], [Purple], [Ivory], [Orange], [Pink], [Red], [Gray], [Letterhead], [Translucent Paper], [Preprinted Paper], [Bond Paper], [Cardstock], [OHP (Transparency)], [Prepunched Paper], [Tab Stock]

Paper Thickness

The paper thicknesses you can set for Tray 4 (with the optional LCT) are as follows:

• Plain Paper

$$52 - 105 \text{ g/m}^2 (14 - 28 \text{ lb BOND})$$

Middle Thick

$$106 - 163 \text{ g/m}^2 (28 \text{ lb BOND} - 90 \text{ lb INDEX})$$

• Thick Paper 1

The default setting for "Paper Type" is **Do not Display**.

The default setting for "Paper Thickness" is Plain Paper.

The default setting for "Apply Duplex" is Yes.

The default setting for "Apply Auto Paper Select" is Yes.

The key mark is displayed next to the paper tray if [No] is selected in "Apply Auto Paper Select".

For details about the relations between possible paper sizes and thickness, see "Recommended Paper Sizes and Types", About This Machine.

For details about the recommended conditions for using thick paper, see "Thick Paper", About This Machine.

The optional tab sheet holder is required when using tab stock in Tray 4.

The Tab Position Shift can be set in millimeters, when Tab Stock has been selected.

The Tab Position Shift can be set in 1 inch (1 millimeter) units, within a range of 0 to 0.6 inches (0 to 15 mm). The default is "0.5" inches (13 mm).

Designation Sheet 1 - 9

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

• Select Designation Sheet from 1-9

You can specify paper tray 1-9 as the source trays for designation sheets.

Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Cover Sheet Tray

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

• Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Back Cover Sheet Tray

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

• Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Slip Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time

You can select [At Mode Selected] or [Full Time].

Separation Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time

You can select [At Mode Selected] or [Full Time].

Tray 4 (with the optional Wide Large Capacity Tray)

Paper Size

The paper sizes you can set for Tray 4 (with the optional Wide LCT) are as follows:

- [Auto Detect]
- 13×19¹/₅□, 13×19□, 13×18□, 12×18□, 12³/₅×19¹/₅□, 12³/₅×18¹/₂□,

 11×17□, 11×15□, 11×14□, 10×15□, 10×14□, 8¹/₂×14□, 8¹/₂×13□,

 8¹/₂×11□, 8¹/₄×14□, 8¹/₄×13□, 8×13□, 8×10□, 7¹/₄×10¹/₂□, 5¹/₂×8¹/₂□,

 A3□, A4□, A5□, A6□, B4 JIS□, B5 JIS□, B6 JIS□, SRA3□, SRA4□,

310×432 mm□, 226×310 mm□, 210×340 mm□, 8K□, 16K□

- 8¹/₂×11^D, 7¹/₄×10¹/₂D, 5¹/₂×8¹/₂D, A4D, A5D, B5 JISD, SRA4D, 226×310 mmD, 182×210 mmD, 170×210 mmD, 16KD
- [Custom Size]

You can specify a custom size of between 5.5 - 13.0 inches (139.7 - 330.2 mm) vertically, and between 5.5 - 19.2 inches (139.7 - 487.7 mm) horizontally.

You can specify a custom size between 3.94 - 5.5 inches (100.0 - 139.7 mm) horizontally. To use the custom size paper, additional setup is required. For details, contact your service representative.

The default setting is Auto Detect.



 For details about paper sizes that can be automatically detected, see "Recommended Paper Sizes and Types", About This Machine.

Paper Type

You can set the display so you can see what type of paper is loaded in each paper tray.

The print function uses this information to automatically select the paper tray.

The paper types you can set for Tray 4 (with the optional Wide LCT) are as follows:

[Do not Display], [Recycled Paper], [Special Paper], [Color Paper 1], [Color Paper 2], [Yellow], [Green], [Blue], [Purple], [Ivory], [Orange], [Pink], [Red], [Gray], [Letterhead], [Translucent Paper], [Preprinted Paper], [Bond Paper], [Cardstock], [OHP (Transparency)], [Prepunched Paper], [Coated Paper], [Tab Stock]

Paper Thickness

The paper thicknesses you can set for Tray 4 (with the optional Wide LCT) are as follows:

• Plain Paper

$$52 - 105 \text{ g/m}^2 (14 - 28 \text{ lb BOND})$$

• Middle Thick

$$106 - 163 \text{ g/m}^2 (28 \text{ lb BOND} - 90 \text{ lb INDEX})$$

Thick Paper 1

$$164 - 216 \text{ g/m}^2 \text{ (90 lb INDEX - 80 lb COVER)}$$

• Thick Paper 2

The default setting for "Paper Type" is **Do not Display**.

The default setting for "Paper Thickness" is Plain Paper.

The default setting for "Apply Duplex" is Yes.

The default setting for "Apply Auto Paper Select" is Yes.

The key mark is displayed next to the paper tray if [No] is selected in "Apply Auto Paper Select".

For details about the relations between possible paper sizes and thickness, see "Recommended Paper Sizes and Types", About This Machine.

For details about the recommended conditions for using thick paper, see "Thick Paper", About This Machine.

Designation Sheet 1 - 9

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

• Select Designation Sheet from 1-9

You can specify paper tray 1-9 as the source trays for designation sheets.

• Display Time

You can select [At Mode Selected] or [Full Time].

· Apply Duplex

You can select [Yes] or [No].

Cover Sheet Tray

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Back Cover Sheet Tray

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

• Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Slip Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

• Display Time

You can select [At Mode Selected] or [Full Time].

Separation Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

• Display Time

You can select [At Mode Selected] or [Full Time].

Tray 5 (with the optional Large Capacity Tray)

Paper Size

You can select the size of the paper loaded in the optional large capacity tray (LCT).

This menu appears only when the LCT is installed.

The paper sizes you can set for Tray 5 (with the optional LCT) are as follows:

- [Auto Detect]
- 5¹/₂×8¹/₂□, A5□
- 81/2×110, 51/2×81/20, A40, A50, B5 JISD

You can specify a custom size. To use a custom size paper on this tray, additional setup is required. For details, contact your service representative.

The default setting is Auto Detect.



 For details about paper sizes that can be automatically detected, see "Recommended Paper Sizes and Types", About This Machine.

Paper Type

You can set the display so you can see what type of paper is loaded in the paper tray.

The print function uses this information to automatically select the paper tray.

The paper types you can set for the Paper Tray 5 (with the optional LCT) are as follows:

[Do not Display], [Recycled Paper], [Special Paper], [Color Paper 1], [Color Paper 2], [Yellow], [Green], [Blue], [Purple], [Ivory], [Orange], [Pink], [Red], [Gray], [Letterhead], [Translucent Paper], [Preprinted Paper], [Bond Paper], [Cardstock], [OHP (Transparency)], [Prepunched Paper], [Label Paper], [Tab Stock]

Paper Thickness

The paper thicknesses you can set for Tray 5 (with the optional LCT) are as follows:

- Plain Paper
 - $52 105 \,\mathrm{g/m^2} \,(14 28 \,\mathrm{lb} \,\mathrm{BOND})$
- Middle Thick

106 - 163 g/m² (28 lb BOND - 90 lb INDEX)

• Thick Paper 1

 $164 - 216 \text{ g/m}^2$ (90 lb INDEX - 80 lb COVER)

The default setting for "Paper Type" is **Do not Display**.

The default setting for "Paper Thickness" is Plain Paper.

The default setting for "Apply Duplex" is Yes.

The default setting for "Apply Auto Paper Select" is Yes.

The key mark is displayed next to the paper tray if [No] is selected in "Apply Auto Paper Select".

For details about the relations between possible paper sizes and thickness, see "Recommended Paper Sizes and Types", About This Machine.

For details about the recommended conditions for using thick paper, see "Thick Paper", About This Machine.

The optional tab sheet holder is required when using tab stock in Tray 5.

The Tab Position Shift can be set in millimeters, when Tab Stock has been selected.

The Tab Position Shift can be set in 1 inch (1 millimeter) units, within a range of 0 to 0.6 inches (0 to 15 mm). The default is **"0.5" inches (13 mm)**.

Designation Sheet 1 - 9

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

Select Designation Sheet from 1-9

You can specify paper tray 1-9 as the source trays for designation sheets.

· Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Cover Sheet Tray

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

· Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Back Cover Sheet Tray

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

• Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex
 You can select [Yes] or [No].

Slip Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time
 You can select [At Mode Selected] or [Full Time].

Separation Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time
 You can select [At Mode Selected] or [Full Time].

Tray 5 (with the optional Wide Large Capacity Tray)

Paper Size

The paper sizes you can set for Tray 5 (with the optional Wide LCT) are as follows:

- [Auto Detect]
- 13×19¹/₅□, 13×19□, 13×18□, 12×18□, 12³/₅×19¹/₅□, 12³/₅×18¹/₂□, 11×17□, 11×15□, 11×14□, 10×15□, 10×14□, 8¹/₂×14□, 8¹/₂×13□, 8¹/₂×11□, 8¹/₄×14□, 8¹/₄×13□, 8×13□, 8×10□, 7¹/₄×10¹/₂□, 5¹/₂×8¹/₂□, A3□, A4□, A5□, A6□, B4 JIS□, B5 JIS□, B6 JIS□, SRA3□, SRA4□, 310×432 mm□, 226×310 mm□, 210×340 mm□, 8K□, 16K□
- 8¹/₂×11^D, 7¹/₄×10¹/₂D, 5¹/₂×8¹/₂D, A4D, A5D, B5 JISD, SRA4D, 226×310 mmD, 182×210 mmD, 170×210 mmD, 16KD
- [Custom Size]

You can specify a custom size of between 5.5 - 13.0 inches (139.7 - 330.2 mm) vertically, and between 5.5 - 19.2 inches (139.7 - 487.7 mm) horizontally.

You can specify a custom size between 3.94 - 5.5 inches (100.0 - 139.7 mm) horizontally. To use the custom size paper, additional setup is required. For details, contact your service representative.

The default setting is Auto Detect.



 For details about paper sizes that can be automatically detected, see "Recommended Paper Sizes and Types", About This Machine.

Paper Type

You can set the display so you can see what type of paper is loaded in each paper tray.

The print function uses this information to automatically select the paper tray.

The paper types you can set for Tray 5 (with the optional Wide LCT) are as follows:

[Do not Display], [Recycled Paper], [Special Paper], [Color Paper 1], [Color Paper 2], [Yellow], [Green], [Blue], [Purple], [Ivory], [Orange], [Pink], [Red], [Gray], [Letterhead], [Translucent Paper], [Preprinted Paper], [Bond Paper], [Cardstock], [OHP (Transparency)], [Prepunched Paper], [Label Paper], [Coated Paper], [Tab Stock]

Paper Thickness

The paper thicknesses you can set for Tray 5 (with the optional Wide LCT) are as follows:

• Thin Paper

• Plain Paper

$$52 - 105 \text{ g/m}^2 (14 - 28 \text{ lb BOND})$$

Middle Thick

$$106 - 163 \text{ g/m}^2 (28 \text{ lb BOND} - 90 \text{ lb INDEX})$$

• Thick Paper 1

$$164 - 216 \text{ g/m}^2$$
 (90 lb INDEX - 80 lb COVER)

• Thick Paper 2

$$217 - 256 \text{ g/m}^2 \text{ (80 lb COVER - 140 lb INDEX)}$$

• Thick Paper 3

The default setting for "Paper Type" is **Do not Display**.

The default setting for "Paper Thickness" is Plain Paper.

The default setting for "Apply Duplex" is Yes.

The default setting for "Apply Auto Paper Select" is Yes.

The key mark is displayed next to the paper tray if [No] is selected in "Apply Auto Paper Select".

For details about the relations between possible paper sizes and thickness, see "Recommended Paper Sizes and Types", About This Machine.

For details about the recommended conditions for using thick paper, see "Thick Paper", About This Machine.

The optional tab sheet holder is required when using tab stock in Tray 5.

The Tab Position Shift can be set in millimeters, when Tab Stock has been selected.

The Tab Position Shift can be set in 1 inch (1 millimeter) units, within a range of 0 to 0.6 inches (0 to 15 mm). The default is "0.5" inches (13 mm).

Designation Sheet 1 - 9

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

• Select Designation Sheet from 1-9

You can specify paper tray 1-9 as the source trays for designation sheets.

• Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Cover Sheet Tray

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

· Display Time

You can select [At Mode Selected] or [Full Time].

• Apply Duplex

You can select [Yes] or [No].

Back Cover Sheet Tray

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

• Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Slip Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time

You can select [At Mode Selected] or [Full Time].

Separation Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time

You can select [At Mode Selected] or [Full Time].

Tray 6 (with the optional Large Capacity Tray)

Paper Size

You can select the size of the paper loaded in the optional large capacity tray (LCT).

This menu appears only when the LCT is installed.

The paper sizes you can set for Tray 6 (with the optional LCT) are as follows:

$$8^{1}/_{2} \times 11^{\square}$$

You can load only A4 size paper on this tray. To change the paper size, additional setup is required. For details, contact your service representative.

Paper Type

You can set the display so you can see what type of paper is loaded in the paper tray.

The print function uses this information to automatically select the paper tray.

The paper types you can set for the Paper Tray 6 (with the optional LCT) are as follows:

[Do not Display], [Recycled Paper], [Special Paper], [Color Paper 1], [Color Paper 2], [Yellow], [Green], [Blue], [Purple], [Ivory], [Orange], [Pink], [Red], [Gray], [Letterhead], [Translucent Paper], [Preprinted Paper], [Bond Paper], [Cardstock], [OHP (Transparency)], [Prepunched Paper]

Paper Thickness

The paper thicknesses you can set for Tray 6 (with the optional LCT) are as follows:

• Plain Paper

$$52 - 105 \, \text{g/m}^2 \, (14 - 28 \, \text{lb BOND})$$

Middle Thick

The default setting for "Paper Type" is **Do not Display**.

The default setting for "Paper Thickness" is Plain Paper.

The default setting for "Apply Duplex" is Yes.

The default setting for "Apply Auto Paper Select" is Yes.

The key mark is displayed next to the paper tray if [No] is selected in "Apply Auto Paper Select".

For details about the relations between possible paper sizes and thickness, see "Recommended Paper Sizes and Types", About This Machine.

For details about the recommended conditions for using thick paper, see "Thick Paper", About This Machine.

Designation Sheet 1 - 9

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

• Select Designation Sheet from 1-9

You can specify paper tray 1-9 as the source trays for designation sheets.

· Display Time

You can select [At Mode Selected] or [Full Time].

· Apply Duplex

You can select [Yes] or [No].

Cover Sheet Tray

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

· Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Back Cover Sheet Tray

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

• Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Slip Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time

You can select [At Mode Selected] or [Full Time].

Separation Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time

You can select [At Mode Selected] or [Full Time].

Tray 6 (with the optional Wide Large Capacity Tray)

Paper Size

The paper sizes you can set for Tray 6 (with the optional Wide LCT) are as follows:

- [Auto Detect]
- 13×19¹/₅□, 13×19□, 13×18□, 12³/₅×19¹/₅□, 12³/₅×18¹/₂□, 12×18□, 11×17□, 11×15□, 11×14□, 10×15□, 10×14□, 8¹/₂×14□, 8¹/₂×13□, 8¹/₂×11□, 8¹/₄×14□, 8¹/₄×13□, 8×13□, 8×10□, 7¹/₄×10¹/₂□, ¹/₂×8¹/₂□, A3□, A4□, A5□, A6□, B4 JIS□, B5 JIS□, B6 JIS□, SRA3□, SRA4□, 310×432 mm□, 226×310 mm□, 210×340 mm□, 8K□, 16K□
- 8¹/₂×11^D, 7¹/₄×10¹/₂D, 5¹/₂×8¹/₂D, A4D, A5D, B5 JISD, SRA4D, 226×310 mmD, 182×210 mmD, 170×210 mmD, 16KD
- [Custom Size]

You can specify a custom size of between 5.5 - 13.0 inches (139.7 - 330.2 mm) vertically, and between 5.5 - 19.2 inches (139.7 - 487.7 mm) horizontally.

You can specify a custom size between 3.94 - 5.5 inches (100.0 - 139.7 mm) horizontally. To use the custom size paper, additional setup is required. For details, contact your service representative.

The default setting is Auto Detect.



 For details about paper sizes that can be automatically detected, see "Recommended Paper Sizes and Types", About This Machine.

Paper Type

You can set the display so you can see what type of paper is loaded in each paper tray.

The print function uses this information to automatically select the paper tray.

The paper types you can set for Tray 6 (with the optional Wide LCT) are as follows:

[Do not Display], [Recycled Paper], [Special Paper], [Color Paper 1], [Color Paper 2], [Yellow], [Green], [Blue], [Purple], [Ivory], [Orange], [Pink], [Red], [Gray], [Letterhead], [Translucent Paper], [Preprinted Paper], [Bond Paper], [Cardstock], [OHP (Transparency)], [Prepunched Paper], [Coated Paper], [Tab Stock]

Paper Thickness

The paper thicknesses you can set for Tray 6 (with the optional Wide LCT) are as follows:

- Plain Paper
 52 105 g/m² (14 28 lb BOND)
- Middle Thick

 $106 - 163 \text{ g/m}^2 (28 \text{ lb BOND} - 90 \text{ lb INDEX})$

- Thick Paper 1
 164 216 g/m² (90 lb INDEX 80 lb COVER)
- Thick Paper 2

217 - 256 g/m² (80 lb COVER - 140 lb INDEX)

The default setting for "Paper Type" is **Do not Display**.

The default setting for "Paper Thickness" is Plain Paper.

The default setting for "Apply Duplex" is Yes.

The default setting for "Apply Auto Paper Select" is Yes.

The key mark is displayed next to the paper tray if [No] is selected in "Apply Auto Paper Select".

For details about the relations between possible paper sizes and thickness, see "Recommended Paper Sizes and Types", About This Machine.

For details about the recommended conditions for using thick paper, see "Thick Paper", About This Machine.

The optional tab sheet holder is required when using tab stock in Tray 6.

The Tab Position Shift can be set in millimeters, when Tab Stock has been selected.

The Tab Position Shift can be set in 1 inch (1 millimeter) units, within a range of 0 to 0.6 inches (0 to 15 mm). The default is "0.5" inches (13 mm).

Designation Sheet 1 - 9

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

• Select Designation Sheet from 1-9

You can specify paper tray 1-9 as the source trays for designation sheets.

Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Cover Sheet Tray

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

• Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Back Cover Sheet Tray

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex
 You can select [Yes] or [No].

Slip Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time
 You can select [At Mode Selected] or [Full Time].

Separation Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time
 You can select [At Mode Selected] or [Full Time].

Tray 7 (with the optional Multi Bypass Tray and LCT)

Paper Size

You can select the size of the paper loaded in the Tray 7.

This menu appears only when the optional Multi Bypass Tray is installed.

The paper sizes you can set for Tray 7 are as follows:

- [Auto Detect]
- 12×18□, 11×17□, 11×15□, 11×14□, 10×15□, 10×14□, 8¹/₂×14□, 8¹/₂×13□, 8¹/₂×11□, 8¹/₄×14□, 8¹/₄×13□, 8×13□, 8×10□, 7¹/₄×10¹/₂□, 5¹/₂×8¹/₂□, A3□, A4□, A5□, A6□, B4 JIS□, B5 JIS□, B6 JIS□, SRA4□, 226×310 mm□, 210×340 mm□, 8K□, 16K□
- 8¹/₂×11^D, 7¹/₄×10¹/₂D, 5¹/₂×8¹/₂D, A4D, A5D, B5 JISD, 182×210 mmD, 170×210 mmD, 16KD
- [Custom Size]

You can specify a custom size of between 3.94 - 12.0 inches (100.0 - 305.0 mm) vertically, and between 5.5 - 19.2 inches (139.7 - 487.7 mm) horizontally.

The default setting is Auto Detect.



 For details about paper sizes that can be automatically detected, see "Recommended Paper Sizes and Types", About This Machine.

Paper Type

You can set the display so you can see what type of paper is loaded in the paper tray.

The print function uses this information to automatically select the paper tray.

The paper types you can set for Tray 7 are as follows:

[Do not Display], [Recycled Paper], [Special Paper], [Color Paper 1], [Color Paper 2], [Yellow], [Green], [Blue], [Purple], [Ivory], [Orange], [Pink], [Red], [Gray], [Letterhead], [Translucent Paper], [Preprinted Paper], [OHP (Transparency)], [Bond Paper], [Cardstock], [Prepunched Paper], [Tab Stock]

Paper Thickness

The paper thicknesses you can set for Tray 7 are as follows:

• Plain Paper

$$52 - 105 \text{ g/m}^2 (14 - 28 \text{ lb BOND})$$

Middle Thick

$$106 - 163 \text{ g/m}^2 (28 \text{ lb BOND} - 90 \text{ lb INDEX})$$

• Thick Paper 1

• Thick Paper 2

$$217 - 256 \text{ g/m}^2 \text{ (80 lb COVER} - 140 lb INDEX)}$$

The default setting for "Paper Type" is **Do not Display**.

The default setting for "Paper Thickness" is Plain Paper.

The default setting for "Apply Duplex" is Yes.

The default setting for "Apply Auto Paper Select" is Yes.

The key mark is displayed next to the paper tray if [No] is selected in "Apply Auto Paper Select".

For details about the relations between possible paper sizes and thickness, see "Recommended Paper Sizes and Types", About This Machine.

For details about the recommended conditions for using thick paper, see "Thick Paper", About This Machine.

The optional tab sheet holder is required when using tab stock in Tray 7.

The Tab Position Shift can be set in millimeters, when Tab Stock has been selected.

The Tab Position Shift can be set in 1 inch (1 millimeter) units, within a range of 0 to 0.6 inches (0 to 15 mm). The default is "0.5" inches (13 mm).

Designation Sheet 1 - 9

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

• Select Designation Sheet from 1-9

You can specify paper tray 1-9 as the source trays for designation sheets.

· Display Time

You can select [At Mode Selected] or [Full Time].

· Apply Duplex

You can select [Yes] or [No].

Cover Sheet Tray

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

· Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Back Cover Sheet Tray

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

• Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Slip Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time

You can select [At Mode Selected] or [Full Time].

Separation Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time

You can select [At Mode Selected] or [Full Time].

Tray 7 (with the optional Multi Bypass Tray and Wide LCT)

Paper Size

You can select the size of the paper loaded in the Tray 7.

This menu appears only when the optional Multi Bypass Tray is installed.

The paper sizes you can set for Tray 7 are as follows:

- [Auto Detect]
- 13×19¹/₅□, 13×19□, 13×18□, 12³/₅×19¹/₅□, 12³/₅×18¹/₂□, 12×18□, 11×17□, 11×15□, 11×14□, 10×15□, 10×14□, 8¹/₂×14□, 8¹/₂×11□, 8¹/₄×14□, 8¹/₂×13□, 8¹/₄×13□, 8×13□, 8×10□, 7¹/₄×10¹/₂□, 5¹/₂×8¹/₂□, A3□, A4□, A5□, A6□, B4 JIS□, B5 JIS□, B6 JIS □, SRA3□, SRA4□, 310×432 mm□, 226×310 mm□, 210×340 mm□, 8K□, 16K□
- 8¹/₂×11^D, 7¹/₄×10¹/₂D, 5¹/₂×8¹/₂D, A4D, A5D, B5 JISD, SRA4D, 226×310 mmD, 182×210 mmD, 170×210 mmD, 16KD
- [Custom Size]

You can specify a custom size of between 3.94 - 13.0 inches (100.0 - 330.2 mm) vertically, and between 5.5 - 19.2 inches (139.7 - 487.7 mm) horizontally.

The default setting is Auto Detect.



 For details about paper sizes that can be automatically detected, see "Recommended Paper Sizes and Types", About This Machine.

Paper Type

You can set the display so you can see what type of paper is loaded in the paper tray.

The print function uses this information to automatically select the paper tray.

The paper types you can set for Tray 7 are as follows:

[Do not Display], [Recycled Paper], [Special Paper], [Color Paper 1], [Color Paper 2], [Yellow], [Green], [Blue], [Purple], [Ivory], [Orange], [Pink], [Red], [Gray], [Letterhead], [Translucent Paper], [Preprinted Paper], [OHP (Transparency)], [Bond Paper], [Cardstock], [Prepunched Paper], [Tab Stock]

Paper Thickness

The paper thicknesses you can set for Tray 7 are as follows:

- Plain Paper
 52 105 g/m² (14 28 lb BOND)
- Middle Thick
 106 163 g/m² (28 lb BOND 90 lb INDEX)
- Thick Paper 1
 164 216 g/m² (90 lb INDEX 80 lb COVER)
- Thick Paper 2

217 - 256 g/m² (80 lb COVER - 140 lb INDEX)

The default setting for "Paper Type" is **Do not Display**.

The default setting for "Paper Thickness" is Plain Paper.

The default setting for "Apply Duplex" is Yes.

The default setting for "Apply Auto Paper Select" is Yes.

The key mark is displayed next to the paper tray if [No] is selected in "Apply Auto Paper Select".

For details about the relations between possible paper sizes and thickness, see "Recommended Paper Sizes and Types", About This Machine.

For details about the recommended conditions for using thick paper, see "Thick Paper", About This Machine.

The optional tab sheet holder is required when using tab stock in Tray 7.

The Tab Position Shift can be set in millimeters, when Tab Stock has been selected.

The Tab Position Shift can be set in 1 inch (1 millimeter) units, within a range of 0 to 0.6 inches (0 to 15 mm). The default is "0.5" inches (13 mm).

Designation Sheet 1 - 9

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

• Select Designation Sheet from 1-9

You can specify paper tray 1-9 as the source trays for designation sheets.

Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Cover Sheet Tray

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

• Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Back Cover Sheet Tray

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex
 You can select [Yes] or [No].

Slip Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time
 You can select [At Mode Selected] or [Full Time].

Separation Sheet Tray

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time
 You can select [At Mode Selected] or [Full Time].

Interposer Upper and Lower Tray (with the Optional Cover Interposer Tray CI5010)

Paper Size

You can select the size of the paper loaded in the Interposer Upper and Lower Tray.

This menu appears only when the optional Cover Interposer Tray is installed.

The paper sizes you can set for Interposer Upper and Lower Tray are as follows:

- [Auto Detect]
- 13×19¹/₅□, 13×19□, 13×18□, 12³/₅×19¹/₅□, 12³/₅×18¹/₂□, 12×18□, 11×17□, 11×15□, 11×14□, 10×15□, 10×14□, 8¹/₂×14□, 8¹/₂×13□, 8¹/₂×11□, 8¹/₄×14□, 8¹/₄×13□, 8×13□, 8×10□, 7¹/₄×10¹/₂□, 5¹/₂×8¹/₂□, A3□, A4□, A5□, B4 JIS□, B5 JIS□, SRA3□, SRA4□, 310×432 mm□, 226×310 mm□, 210×340 mm□, 8K□, 16K□
- 8¹/₂×11^D, 7¹/₄×10¹/₂D, 5¹/₂×8¹/₂D, A4D, A5D, B5 JISD, SRA4D, 226×310 mmD, 182×210 mmD, 170×210 mmD, 16KD
- [Custom Size]

You can specify a custom size of between 5.5 - 13.0 inches (139.7 - 330.2 mm) vertically, and between 5.5 - 19.2 inches (139.7 - 487.7 mm) horizontally.

The default setting is Auto Detect.



 For details about paper sizes that can be automatically detected, see "Recommended Paper Sizes and Types", About This Machine.

Designation Sheet 1 - 9

The destination sheet 1 - 9 can be specified.

Cover Sheet Tray

You can select [On] or [Off].

The default setting is [Off].

Back Cover Sheet Tray

You can select [On] or [Off].

The default setting is [Off].

Interposer Upper and Lower Tray (with the optional Cover Interposer Tray Type GB5000)

Paper Size

You can select the size of the paper loaded in the Interposer Upper and Lower Tray.

This menu appears only when the optional Cover Interposer Tray is installed.

The paper sizes you can set for Interposer Upper and Lower Tray are as follows:

- [Auto Detect]
- 13×19¹/₅□, 13×19□, 13×18□, 12³/₅×19¹/₅□, 12³/₅×18¹/₂□, 12×18□, 11×17□, 11×15□, A3□, B4 JIS□, SRA3□, 310×432 mm□, 8K□
- [Custom Size]

You can specify a custom size of between 10.12 - 13.0 inches (257.0 - 330.2 mm) vertically, and between 14.34 - 19.2 inches (364.0 - 487.7 mm) horizontally.

The default setting is Auto Detect.



 For details about paper sizes that can be automatically detected, see "Recommended Paper Sizes and Types", About This Machine.

Tray Paper Setting on Main and Sub-machines

This section explains the Tray Paper Setting on the two machines during Connect Copy.

While connect copy is under way, the [User Tools] keys of the sub-machines remain disabled. If it is desired to change the defaults, press [Connect Copy] that appears in reverse video on the control screen of the main machine, and then, clear the connect copy before making changes.

How the defaults in the Tray Paper Settings of copying of the main and sub-machines are used in connect copy will be explained.

Only the functions described in this section affect the Connect Copy function.

Tray Priority: Copier (Copier/Document Server)

• The main and sub-machines follow their respective set values.

Paper Size: Tray 1

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
 are set in common on the main and sub-machines can be used. To make the most of the connect
 copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Size: Tray 1 (with the optional A3/11×17 Tray Unit)

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
 are set in common on the main and sub-machines can be used. To make the most of the connect
 copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Size: Tray 2

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
 are set in common on the main and sub-machines can be used. To make the most of the connect
 copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Size: Tray 3

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
 are set in common on the main and sub-machines can be used. To make the most of the connect
 copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Size: Tray 4 (with the optional Large Capacity Tray)

• The main and sub-machines follow their respective set values.

In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
are set in common on the main and sub-machines can be used. To make the most of the connect
copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Size: Tray 4 (with the optional Wide Large Capacity Tray)

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
 are set in common on the main and sub-machines can be used. To make the most of the connect
 copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Size: Tray 5 (with the optional Large Capacity Tray)

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
 are set in common on the main and sub-machines can be used. To make the most of the connect
 copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Size: Tray 5 (with the optional Wide Large Capacity Tray)

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
 are set in common on the main and sub-machines can be used. To make the most of the connect
 copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Size: Tray 6 (with the optional Large Capacity Tray)

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
 are set in common on the main and sub-machines can be used. To make the most of the connect
 copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Size: Tray 6 (with the optional Wide Large Capacity Tray)

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
 are set in common on the main and sub-machines can be used. To make the most of the connect
 copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Size: Tray 7 (with the optional Multi Bypass Tray and LCT)

• The Tray 7 on both of the main and sub-machines are used only for the cover sheet and the designation sheet.

Paper Size: Tray 7 (with the optional Multi Bypass Tray and Wide LCT)

The Tray 7 on both of the main and sub-machines are used only for the cover sheet and the
designation sheet.

Paper Size: Interposer Upper and Lower Tray (With the Optional Cover Interposer Tray CI5010)

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
 are set in common on the main and sub-machines can be used. To make the most of the connect
 copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Size: Interposer Upper and Lower Tray (With the optional Cover Interposer Tray Type GB5000)

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
 are set in common on the main and sub-machines can be used. To make the most of the connect
 copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Type: Tray 1

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
 are set in common on the main and sub-machines can be used. To make the most of the connect
 copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Type: Tray 1 (with the optional A3/11×17 Tray Unit)

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
 are set in common on the main and sub-machines can be used. To make the most of the connect
 copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Type: Tray 2

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
 are set in common on the main and sub-machines can be used. To make the most of the connect
 copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Type: Tray 3

• The main and sub-machines follow their respective set values.

In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
are set in common on the main and sub-machines can be used. To make the most of the connect
copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Type: Tray 4 (with the optional Large Capacity Tray)

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
 are set in common on the main and sub-machines can be used. To make the most of the connect
 copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Type: Tray 4 (with the optional Wide Large Capacity Tray)

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
 are set in common on the main and sub-machines can be used. To make the most of the connect
 copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Type: Tray 5 (with the optional Large Capacity Tray)

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
 are set in common on the main and sub-machines can be used. To make the most of the connect
 copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Type: Tray 5 (with the optional Wide Large Capacity Tray)

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
 are set in common on the main and sub-machines can be used. To make the most of the connect
 copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Type: Tray 6 (with the optional Large Capacity Tray)

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that
 are set in common on the main and sub-machines can be used. To make the most of the connect
 copy function, it is advisable that you make the same paper settings on both the main and submachines.

Paper Type: Tray 6 (with the optional Wide Large Capacity Tray)

- The main and sub-machines follow their respective set values.
- In connect copy, only the paper tray corresponding to the paper size, orientation, and type that are set in common on the main and sub-machines can be used. To make the most of the connect

copy function, it is advisable that you make the same paper settings on both the main and sub-machines.

Paper Type: Tray 7 (with the optional Multi Bypass Tray and LCT)

• The Tray 7 on both of the main and sub-machines are used only for the cover sheet and the designation sheet.

Paper Type: Tray 7 (with the optional Multi Bypass Tray and Wide LCT)

• The Tray 7 on both of the main and sub-machines are used only for the cover sheet and the designation sheet.

3

3. Connecting the Machine


This chapter describes how to connect the machine to the network and specify the network settings.

Connecting to the Interfaces

This section explains how to identify the machine's interface and connect the machine according to the network environment.



A network interface cable with a ferrite core must be used for RF interference suppression.

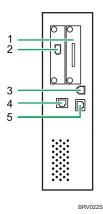

1. Slot A

Install an optional interface or expansion board in this slot.

The Bluetooth interface, File Format Converter, or one of the following interface boards can be installed in this slot:

- IEEE 1284 interface board: Required if you want to connect an IEEE 1284 cable to this machine. When
 installed in Slot A, this board allows you to connect the machine to a computer through an IEEE 1284
 cable.
- Wireless LAN interface unit: Required if you want to connect this machine to a wireless LAN. When installed
 in Slot A, this unit allows you to connect the machine to an IEEE 802. a or IEEE 802.11 b/g wireless LAN.

2. Slot B

Install the optional Copy Connector.

 Copy Connector (optional): Required if you want to connect this machine to a sub-machine in order to use the connect copy function.

3. USB 2.0 (Type B) Interface

Port for connecting the USB 2.0 (Type B) Interface cable.

4. Gigabit Ethernet port (optional)

Port for using the 1000BASE-T, 100BASE-TX, or 10BASE-T cable.

5. 10BASE-T/100BASE-TX port

Port for connecting the 100BASE-TX or 10BASE-T cable.




- Slot A can contain one module only: You can install only one 1284 Interface board, one Wireless LAN Interface Unit, one Bluetooth Unit, or one File Format Converter at a time in this slot.
- The Ethernet and Gigabit Ethernet port cannot be used simultaneously. If the optional Gigabit Ethernet board is installed, connect the Ethernet cable to the port on the Gigabit Ethernet board Communication with the machine will fail if cables are connected to both ports simultaneously.

Connecting to the Ethernet Interface


This section describes how to connect Ethernet interface cable to the Ethernet interface.

- If the main power switch is on, turn it off.
- Use the following Ethernet cables.
 - Unshielded Twisted Pair Cable (UTP) or Shielded Twisted Pair Cable (STP) and Category type
 5 or more
- 1. Make sure the main power switch of the machine is off.
- 2. Connect the Ethernet interface cable to the 10BASE-T/100BASE-TX port.

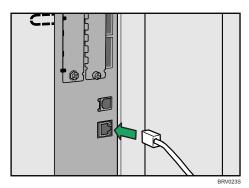

3. Connect the other end of the Ethernet interface cable to a network connection device such as a hub.

4. Turn on the main power switch of the machine.

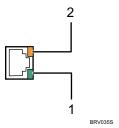

1. Indicator (green)

Lights up green when the machine is connected correctly to the network.

2. Indicator (yellow)

Lights up yellow when 100 BASE-TX is in operation. Goes off when 10 BASE-T is in operation.



- For details about how to turn on the main power switch, see "Turning On the Main Power", About This Machine
- For details about installing the printer driver, see "Preparing the Machine", Printer Reference.


Connecting to the Gigabit Ethernet Interface

This section describes how to connect the Ethernet interface cable to the Gigabit Ethernet port.




- If the main power switch is on, turn it off.
- Use the following Ethernet cables.
 - When using 100BASE-TX/10BASE-T:
 Unshielded Twisted Pair Cable (UTP) or Shielded Twisted Pair Cable (STP) and Category type
 5 or more
 - When using 1000BASE-T:
 Unshielded Twisted Pair Cable (UTP) or Shielded Twisted Pair Cable (STP) and Category type
 5e or more

1. A ferrite core for the Ethernet interface cable is supplied with this machine. Make a loop in the cable about 2.1 inch (5 cm) (1) from the machine end of the cable. Attach the ferrite core.

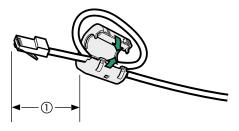


BBM011S

- 2. Make sure the main power switch of the machine is off.
- 3. Connect the Ethernet interface cable to the Gigabit Ethernet port.

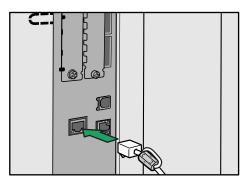

BRU006

- 4. Connect the other end of the Ethernet interface cable to a network connection device such as a hub.
- 5. Turn on the main power switch of the machine.

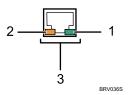

1. Indicator (green)

When 10BASE-T is operating, the LED is lit green. When 100BASE-TX is operating it is turned off.

2. Indicator (yellow)

When 100BASE-TX is operating, the LED is lit yellow. When 10BASE-T is operating, it is turned off.

3

3. Indicators (both green and yellow)

When 1000BASE-T is operating, both LED are lit.




- For details about how to turn on the main power switch, see "Turning On the Main Power", About This Machine.
- For details about installing the printer driver, see "Preparing the Machine", Printer Reference.

Connecting to the USB Interface

This section describes how to connect the USB2.0 interface cable to the USB2.0 port.



- Properly shielded and grounded cables and connectors must be used for connections to a host computer (and/or peripheral) in order to meet emission limits.
- 1. Connect the USB2.0 interface cable to the USB2.0 port.

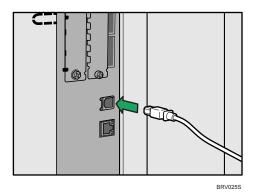

2. Connect the other end to the USB2.0 port on the host computer.



- This machine does not come with a USB interface cable. Make sure you purchase the appropriate cable for the machine and your computer.
- The USB2.0 interface board is supported by Windows 2000/XP/Vista, Windows Server 2003/2003 R2/2008, Mac OS X 10.3.3 or higher.
 - For Mac OS:

To use Macintosh, the machine must be equipped with the optional PostScript 3 unit. When used with Mac OS X 10.3.3 or higher, a transfer speed of USB2.0 is supported.


• For details about installing the printer driver, see "Preparing the Machine", Printer Reference.

Connecting to the IEEE 1284 Interface

This section describes how to connect the IEEE 1284 interface cable to the IEEE 1284 interface board.

CAUTION

- Properly shielded and grounded cables and connectors must be used for connections to a host computer (and/or peripheral) in order to meet emission limits.
- 1. Make sure the main power switch on the machine is off.
- 2. Turn off the main power switch of the host computer.
- 3. Connect the IEEE 1284 interface cable to the IEEE 1284 port.

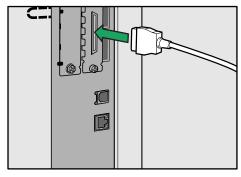

BRV0268

You might have to use a conversion adapter to connect the cable to the interface. For details about acquiring a conversion adapter, consult your sales or service representative.

- 4. Connect the other end of the cable into the interface connector on the host computer.
 - Check the shape of the connector to the computer. Connect the cable firmly.
- 5. Turn on the main power switch of the machine.
- 6. Turn on the host computer.

When using Windows 2000/XP/Vista and Windows Server 2003/2003 R2/2008, a printer driver installation screen might appear when the computer is turned on. If this happens, click [Cancel] on the screen.



- For details about how to turn on the main power switch, see "Turning On the Main Power", About This Machine.
- For details about installing the printer driver, see "Preparing the Machine", Printer Reference.

3

Connecting to the Wireless LAN Interface

This section describes how to connect to the wireless LAN interface.




- Check the machine's IPv4 address and subnet mask, or the IPv6 address settings.
- For details about how to set the IPv4 address and subnet mask from the control panel of the machine, see "Interface Settings".
- Before using this machine with a wireless LAN interface, you must select [Wireless LAN] in [LAN Type].

Setup Procedure

This section describes how to setup wireless LAN interface.

Set up wireless LAN according to the following procedure:

■ Wireless LAN setup procedure

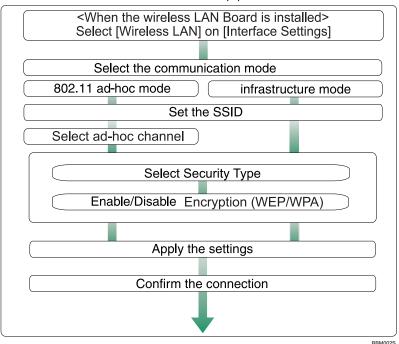

Note

- Select [802.11 Ad-hoc Mode] when connecting Windows XP as a wireless LAN client using Windows XP standard driver or utilities, or when not using the infrastructure mode.
- When [802.11 Ad-hoc Mode] is selected in Communication mode, select the channel for [Ad-hoc Channel]. Set a channel that matches the type of wireless LAN being used. For details about setting the Ad-hoc Channel, see "Interface Settings".

- You can specify either "WEP" or "WPA" to the Security Method.
- Specify "WPA", when [Communication Mode] is set to [Infrastructure Mode].
- If you select the [WPA] option for Security Method, select one of the following: [WPA-PSK], [WPA], [WPA2-PSK], or [WPA2]. If you select [WPA-PSK] or [WPA2-PSK], enter your PSK. If you select [WPA] or [WPA2], authentication settings and certificate installation settings are required. For details about setting methods, see "Configuring IEEE 802.1X".
- For details about how to specify wireless LAN settings from the control panel on the machine, see "Interface Settings".

- p.31 "Interface Settings"
- p.396 "Configuring IEEE 802.1X"

Checking the Signal

This section describes how to check the machine's radio wave status.

When using in infrastructure mode, you can check the machine's radio wave status using the control panel.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].
- 3. Press [Interface Settings].
- 4. Press [Wireless LAN].
- Press [Wireless LAN Signal].
 The machine's radio wave status appears.
- 6. After checking radio wave status, press [Exit].
- 7. Press the [User Tools] key.

3

Network Settings Required to Use the Printer

This section lists the network settings required to use the printer function.



 These settings should be made by the system administrator, or with the advice of the system administrator.

Ethernet

This section lists the settings required to use the printer function with an Ethernet connection. For details about how to specify the settings, see "Interface Settings".

Menu	User Tool	Setting Requirements
Interface Settings/Network	Machine IPv4 Address	Necessary
Interface Settings/Network	IPv4 Gateway Address	As required
Interface Settings/Network	Machine IPv6 Address	As required
Interface Settings/Network	IPv6 Gateway Address	As required
Interface Settings/Network	IPv6 Stateless Address Autoconfiguration	As required
Interface Settings/Network	DNS Configuration	As required
Interface Settings/Network	DDNS Configuration	As required
Interface Settings/Network	IPsec	As required
Interface Settings/Network	Domain Name	As required
Interface Settings/Network	WINS Configuration	As required
Interface Settings/Network	Effective Protocol	Necessary
Interface Settings/Network	NCP Delivery Protocol	As required
Interface Settings/Network	NW Frame Type	As required
Interface Settings/Network	SMB Computer Name	As required
Interface Settings/Network	SMB Work Group	As required
Interface Settings/Network	Ethernet Speed	As required

Menu	User Tool	Setting Requirements
Interface Settings/Network	IEEE 802.1X Authentication for Ethernet	As required
Interface Settings/Network	Restore IEEE 802.1X Authentication to Defaults	As required
Interface Settings/Network	LAN Type	Necessary
Interface Settings/Network	Ping Command	As required
Interface Settings/Network	Permit SNMPv3 Communication	As required
Interface Settings/Network	Permit SSL / TLS Communication	As required
Interface Settings/Network	Host Name	As required
Interface Settings/Network	Machine Name	As required



- For the Effective Protocol setting, check that the protocol you want to use is set to [Active].
- [LAN Type] is displayed when the wireless LAN board is installed. If Ethernet and wireless LAN are both connected, the selected interface has priority.

• p.31 "Interface Settings"

Wireless LAN

This section lists the settings required to use the printer function with a wireless LAN connection. For details about how to specify the settings, see "Interface Settings".

Menu	User Tool	Setting Requirements
Interface Settings/Network	Machine IPv4 Address	Necessary
Interface Settings/Network	IPv4 Gateway Address	As required
Interface Settings/Network	Machine IPv6 Address	As required
Interface Settings/Network	IPv6 Gateway Address	As required
Interface Settings/Network	IPv6 Stateless Address Autoconfiguration	As required

Menu	User Tool	Setting Requirements
Interface Settings/Network	DNS Configuration	As required
Interface Settings/Network	DDNS Configuration	As required
Interface Settings/Network	IPsec	As required
Interface Settings/Network	Domain Name	As required
Interface Settings/Network	WINS Configuration	As required
Interface Settings/Network	Effective Protocol	Necessary
Interface Settings/Network	NCP Delivery Protocol	As required
Interface Settings/Network	NW Frame Type	As required
Interface Settings/Network	SMB Computer Name	As required
Interface Settings/Network	SMB Work Group	As required
Interface Settings/Network	LAN Type	Necessary
Interface Settings/Network	Permit SNMPv3 Communication	As required
Interface Settings/Network	Permit SSL / TLS Communication	As required
Interface Settings/Network	Host Name	As required
Interface Settings/Network	Machine Name	As required
Interface Settings/Wireless LAN	Communication Mode	Necessary
Interface Settings/Wireless LAN	Ad-hoc Channel	As required
Interface Settings/Wireless LAN	SSID Setting	As required
Interface Settings/Wireless LAN	Security Method	As required



- For the Effective Protocol setting, check that the protocol you want to use is set to [Active].
- [Wireless LAN] and [LAN Type] are displayed when the wireless LAN interface board is installed. If both Ethernet and wireless LAN are connected, the selected interface takes precedence.

• p.31 "Interface Settings"

Network Settings Required to Use E-mail Function

This section lists the network settings required for sending e-mail.



 These settings should be made by the system administrator, or with the advice of the system administrator.

Ethernet

This section lists the settings required for sending e-mail with an Ethernet connection.

For details about how to specify the settings, see "Interface Settings" and "File Transfer".

Menu	User Tool	Setting Requirements
Interface Settings/Network	Machine IPv4 Address	Necessary
Interface Settings/Network	IPv4 Gateway Address	Necessary
Interface Settings/Network	Machine IPv6 Address	As required
Interface Settings/Network	IPv6 Gateway Address	As required
Interface Settings/Network	IPv6 Stateless Address Autoconfiguration	As required
Interface Settings/Network	DNS Configuration	As required
Interface Settings/Network	DDNS Configuration	As required
Interface Settings/Network	IPsec	As required
Interface Settings/Network	Domain Name	As required
Interface Settings/Network	WINS Configuration	As required
Interface Settings/Network	Effective Protocol	Necessary
Interface Settings/Network	Ethernet Speed	As required
Interface Settings/Network	IEEE 802.1X Authentication for Ethernet	As required
Interface Settings/Network	LAN Type	Necessary

3

Menu	User Tool	Setting Requirements
Interface Settings/Network	Permit SNMPv3 Communication	As required
Interface Settings/Network	Permit SSL / TLS Communication	As required
Interface Settings/Network	Host Name	As required
File Transfer	SMTP Server	Necessary
File Transfer	SMTP Authentication	As required
File Transfer	POP before SMTP	As required
File Transfer	Reception Protocol	As required
File Transfer	POP3 / IMAP4 Settings	As required
File Transfer	Administrator's E-mail Address	As required
File Transfer	E-mail Communication Port	As required
File Transfer	Program / Change / Delete E- mail Message	As required
File Transfer	Scanner Resend Interval Time	As required
File Transfer	Number of Scanner Resends	As required

U Note

- For the Effective Protocol setting, check that the protocol you want to use is set to [Active].
- [LAN Type] is displayed when the wireless LAN interface board is installed. If both Ethernet and wireless LAN are connected, the selected interface takes precedence.
- When POP before SMTP is set to [On], also make settings for Reception Protocol and POP3 / IMAP4 Settings.
- When setting POP before SMTP to [On], check POP3 port number in E-mail Communication Port.

Reference

- p.31 "Interface Settings"
- p.39 "File Transfer"

Wireless LAN

This section lists the settings required for sending e-mail with a Wireless LAN connection.

For details about how to specify the settings, see "Interface Settings" and "File Transfer".

Menu	User Tool	Setting Requirements
Interface Settings/Network	Machine IPv4 Address	Necessary
Interface Settings/Network	IPv4 Gateway Address	Necessary
Interface Settings/Network	Machine IPv6 Address	As required
Interface Settings/Network	IPv6 Gateway Address	As required
Interface Settings/Network	IPv6 Stateless Address Autoconfiguration	As required
Interface Settings/Network	DNS Configuration	As required
Interface Settings/Network	DDNS Configuration	As required
Interface Settings/Network	IPsec	As required
Interface Settings/Network	Domain Name	As required
Interface Settings/Network	WINS Configuration	As required
Interface Settings/Network	Effective Protocol	Necessary
Interface Settings/Network	LAN Type	Necessary
Interface Settings/Network	Permit SNMPv3 Communication	As required
Interface Settings/Network	Permit SSL / TLS Communication	As required
Interface Settings/Network	Host Name	As required
Interface Settings/Wireless LAN	Communication Mode	Necessary
Interface Settings/Wireless LAN	SSID Setting	As required
Interface Settings/Wireless LAN	Ad-hoc Channel	As required
Interface Settings/Wireless LAN	Security Method	As required
File Transfer	SMTP Server	Necessary
File Transfer	SMTP Authentication	As required
File Transfer	POP before SMTP	As required
File Transfer	Reception Protocol	As required

Menu	User Tool	Setting Requirements
File Transfer	POP3 / IMAP4 Settings	As required
File Transfer	Administrator's E-mail Address	As required
File Transfer	E-mail Communication Port	As required
File Transfer	Program / Change / Delete E- mail Message	As required
File Transfer	Scanner Resend Interval Time	As required
File Transfer	Number of Scanner Resends	As required

U Note

- For the Effective Protocol setting, check that the protocol you want to use is set to [Active].
- [LAN Type] is displayed when the wireless LAN interface board is installed. If both Ethernet and wireless LAN are connected, the selected interface takes precedence.
- When POP before SMTP is set to [On], you must also make settings for Reception Protocol and POP3 / IMAP4 Settings.
- When setting POP before SMTP to [On], check POP3 port number in E-mail Communication Port.

■ Reference

- p.31 "Interface Settings"
- p.39 "File Transfer"

Network Settings Required to Use Scan to Folder **Function**

This section lists the network settings required for sending files.



• These settings should be made by the system administrator, or with the advice of the system administrator.

Ethernet

This section lists the settings required for sending files with an Ethernet connection.

For details about how to specify the settings, see "Interface Settings" and "File Transfer".

Menu	User Tool	Setting Requirements
Interface Settings/Network	Machine IPv4 Address	Necessary
Interface Settings/Network	IPv4 Gateway Address	Necessary
Interface Settings/Network	Machine IPv6 Address	As required
Interface Settings/Network	IPv6 Gateway Address	As required
Interface Settings/Network	IPv6 Stateless Address Autoconfiguration	As required
Interface Settings/Network	DNS Configuration	As required
Interface Settings/Network	DDNS Configuration	As required
Interface Settings/Network	IPsec	As required
Interface Settings/Network	Domain Name	As required
Interface Settings/Network	WINS Configuration	As required
Interface Settings/Network	Effective Protocol	Necessary
Interface Settings/Network	Ethernet Speed	As required
Interface Settings/Network	IEEE 802.1X Authentication for Ethernet	As required
Interface Settings/Network	LAN Type	Necessary

Menu	User Tool	Setting Requirements
Interface Settings/Network	Permit SNMPv3 Communication	As required
Interface Settings/Network	Permit SSL / TLS Communication	As required
Interface Settings/Network	Host Name	As required
File Transfer	Default User Name / Password (Send)	As required
File Transfer	Scanner Resend Interval Time	As required
File Transfer	Number of Scanner Resends	As required

U Note

- For the Effective Protocol setting, check that the protocol you want to use is set to [Active].
- [LAN Type] is displayed when the wireless LAN interface board is installed. If both Ethernet and wireless LAN are connected, the selected interface takes precedence.

Reference

- p.31 "Interface Settings"
- p.39 "File Transfer"

Wireless LAN

This section lists the settings required for sending files with a Wireless LAN connection.

For details about how to specify the settings, see "Interface Settings" and "File Transfer".

Menu	User Tool	Setting Requirements
Interface Settings/Network	Machine IPv4 Address	Necessary
Interface Settings/Network	IPv4 Gateway Address	Necessary
Interface Settings/Network	Machine IPv6 Address	As required
Interface Settings/Network	IPv6 Gateway Address	As required
Interface Settings/Network	IPv6 Stateless Address Autoconfiguration	As required
Interface Settings/Network	DNS Configuration	As required
Interface Settings/Network	DDNS Configuration	As required

Menu	User Tool	Setting Requirements
Interface Settings/Network	IPsec	As required
Interface Settings/Network	Domain Name	As required
Interface Settings/Network	WINS Configuration	As required
Interface Settings/Network	Effective Protocol	Necessary
Interface Settings/Network	LAN Type	Necessary
Interface Settings/Network	Permit SNMPv3 Communication	As required
Interface Settings/Network	Permit SSL / TLS Communication	As required
Interface Settings/Network	Host Name	As required
Interface Settings/Wireless LAN	Communication Mode	Necessary
Interface Settings/Wireless LAN	SSID Setting	As required
Interface Settings/Wireless LAN	Ad-hoc Channel	As required
Interface Settings/Wireless LAN	Security Method	As required
File Transfer	Default User Name / Password (Send)	As required
File Transfer	Scanner Resend Interval Time	As required
File Transfer	Number of Scanner Resends	As required



- For the Effective Protocol setting, check that the protocol you want to use is set to [Active].
- [Wireless LAN] and [LAN Type] are displayed when the wireless LAN interface board is installed. If both Ethernet and wireless LAN are connected, the selected interface takes precedence.

- p.31 "Interface Settings"
- p.39 "File Transfer"

3

Network Settings Required to Use the Network Delivery Scanner

This section lists the network settings required for delivering data to the network.



 These settings should be made by the system administrator, or with the advice of the system administrator.

Ethernet

This section lists the settings required for delivering data to the network with an Ethernet connection. For details about how to specify the settings, see "Interface Settings" and "File Transfer".

Menu	User Tool	Setting Requirements
Interface Settings/Network	Machine IPv4 Address	Necessary
Interface Settings/Network	IPv4 Gateway Address	As required
Interface Settings/Network	Machine IPv6 Address	As required
Interface Settings/Network	IPv6 Gateway Address	As required
Interface Settings/Network	IPv6 Stateless Address Autoconfiguration	As required
Interface Settings/Network	DNS Configuration	As required
Interface Settings/Network	DDNS Configuration	As required
Interface Settings/Network	IPsec	As required
Interface Settings/Network	Domain Name	As required
Interface Settings/Network	WINS Configuration	As required
Interface Settings/Network	Effective Protocol	Necessary
Interface Settings/Network	Ethernet Speed	As required
Interface Settings/Network	IEEE 802.1X Authentication for Ethernet	As required
Interface Settings/Network	LAN Type	Necessary

Menu	User Tool	Setting Requirements
Interface Settings/Network	Permit SNMPv3 Communication	As required
Interface Settings/Network	Permit SSL / TLS Communication	As required
Interface Settings/Network	Host Name	As required
File Transfer	Delivery Option	Necessary
File Transfer	Scanner Resend Interval Time	As required
File Transfer	Number of Scanner Resends	As required

U Note

- For the Effective Protocol setting, check that the protocol you want to use is set to [Active].
- [Wireless LAN] and [LAN Type] are displayed when the wireless LAN interface board is installed. If both Ethernet and wireless LAN are connected, the selected interface takes precedence.
- If Delivery Option is set to [On], check that IPv4 Address is specified.

Reference

- p.31 "Interface Settings"
- p.39 "File Transfer"

Wireless LAN

This section lists the settings required for delivering data to the network with a wireless LAN connection. For details about how to specify the settings, see "Interface Settings" and "File Transfer".

Menu	User Tool	Setting Requirements
Interface Settings/Network	Machine IPv4 Address	Necessary
Interface Settings/Network	IPv4 Gateway Address	As required
Interface Settings/Network	Machine IPv6 Address	As required
Interface Settings/Network	IPv6 Gateway Address	As required
Interface Settings/Network	IPv6 Stateless Address Autoconfiguration	As required
Interface Settings/Network	DNS Configuration	As required

Menu	User Tool	Setting Requirements
Interface Settings/Network	DDNS Configuration	As required
Interface Settings/Network	IPsec	As required
Interface Settings/Network	Domain Name	As required
Interface Settings/Network	WINS Configuration	As required
Interface Settings/Network	Effective Protocol	Necessary
Interface Settings/Network	LAN Type	Necessary
Interface Settings/Network	Permit SNMPv3 Communication	As required
Interface Settings/Network	Permit SSL / TLS Communication	As required
Interface Settings/Network	Host Name	As required
Interface Settings/Wireless LAN	Communication Mode	Necessary
Interface Settings/Wireless LAN	SSID Setting	As required
Interface Settings/Wireless LAN	Ad-hoc Channel	As required
Interface Settings/Wireless LAN	Security Method	As required
File Transfer	Delivery Option	Necessary
File Transfer	Scanner Resend Interval Time	As required
File Transfer	Number of Scanner Resends	As required

U Note

- For the Effective Protocol setting, check that the protocol you want to use is set to [Active].
- [Wireless LAN] and [LAN Type] are displayed when the wireless LAN interface board is installed. When both Ethernet and wireless LAN are connected, the selected interface takes precedence.
- If Delivery Option is set to [On], check that IPv4 Address is specified.

■ Reference

- p.31 "Interface Settings"
- p.39 "File Transfer"

Network Settings Required to Use WSD Scanner

This section lists the network settings required to use WSD Scanner function.



 These settings should be made by the system administrator, or with the advice of the system administrator.

Ethernet

This section lists the settings required to use WSD Scanner function with an Ethernet connection. For details about how to specify the settings, see "Interface Settings".

Menu	User Tool	Setting Requirements
Interface Settings/Network	Machine IPv4 Address	Necessary
Interface Settings/Network	IPv4 Gateway Address	As required
Interface Settings/Network	Machine IPv6 Address	As required
Interface Settings/Network	IPv6 Gateway Address	As required
Interface Settings/Network	IPv6 Stateless Address Autoconfiguration	As required
Interface Settings/Network	DNS Configuration	As required
Interface Settings/Network	DDNS Configuration	As required
Interface Settings/Network	IPsec	As required
Interface Settings/Network	Domain Name	As required
Interface Settings/Network	WINS Configuration	As required
Interface Settings/Network	Effective Protocol	Necessary
Interface Settings/Network	NCP Delivery Protocol	As required
Interface Settings/Network	NW Frame Type	As required
Interface Settings/Network	SMB Computer Name	As required
Interface Settings/Network	SMB Work Group	As required
Interface Settings/Network	Ethernet Speed	As required

3

Menu	User Tool	Setting Requirements
Interface Settings/Network	IEEE 802.1X Authentication for Ethernet	As required
Interface Settings/Network	LAN Type	Necessary
Interface Settings/Network	Permit SNMPv3 Communication	As required
Interface Settings/Network	Permit SSL / TLS Communication	As required
Interface Settings/Network	Host Name	As required
Interface Settings/Network	Machine Name	As required



- For the Effective Protocol setting, check that the protocol you want to use is set to [Active].
- [LAN Type] is displayed when the wireless LAN board is installed. If Ethernet and wireless LAN are both connected, the selected interface has priority.

• p.31 "Interface Settings"

Wireless LAN

This section lists the settings required to use WSD Scanner function with a wireless LAN connection. For details about how to specify the settings, see "Interface Settings".

Menu	User Tool	Setting Requirements
Interface Settings/Network	Machine IPv4 Address	Necessary
Interface Settings/Network	IPv4 Gateway Address	As required
Interface Settings/Network	Machine IPv6 Address	As required
Interface Settings/Network	IPv6 Gateway Address	As required
Interface Settings/Network	IPv6 Stateless Address Autoconfiguration	As required
Interface Settings/Network	DNS Configuration	As required
Interface Settings/Network	DDNS Configuration	As required

Menu	User Tool	Setting Requirements
Interface Settings/Network	IPsec	As required
Interface Settings/Network	Domain Name	As required
Interface Settings/Network	WINS Configuration	As required
Interface Settings/Network	Effective Protocol	Necessary
Interface Settings/Network	NCP Delivery Protocol	As required
Interface Settings/Network	NW Frame Type	As required
Interface Settings/Network	SMB Computer Name	As required
Interface Settings/Network	SMB Work Group	As required
Interface Settings/Network	LAN Type	Necessary
Interface Settings/Network	Permit SNMPv3 Communication	As required
Interface Settings/Network	Permit SSL / TLS Communication	As required
Interface Settings/Network	Host Name	As required
Interface Settings/Network	Machine Name	As required
Interface Settings/Wireless LAN	Communication Mode	Necessary
Interface Settings/Wireless LAN	Ad-hoc Channel	As required
Interface Settings/Wireless LAN	SSID Setting	As required
Interface Settings/Wireless LAN	Security Method	As required



- For the Effective Protocol setting, check that the protocol you want to use is set to [Active].
- [Wireless LAN] and [LAN Type] are displayed when the wireless LAN interface board is installed. If both Ethernet and wireless LAN are connected, the selected interface takes precedence.

• p.31 "Interface Settings"

3

Network Settings Required to Use Network TWAIN Scanner

This section lists the network settings required to use the TWAIN Scanner under the network environment.



 These settings should be made by the system administrator, or with the advice of the system administrator.

Ethernet

This section lists the settings required to use the network TWAIN Scanner with an Ethernet connection. For details about how to specify the settings, see "Interface Settings".

Menu	User Tool	Setting Requirements
Interface Settings/Network	Machine IPv4 Address	Necessary
Interface Settings/Network	DNS Configuration	As required
Interface Settings/Network	DDNS Configuration	As required
Interface Settings/Network	IPsec	As required
Interface Settings/Network	Domain Name	As required
Interface Settings/Network	WINS Configuration	As required
Interface Settings/Network	Effective Protocol	Necessary
Interface Settings/Network	Ethernet Speed	As required
Interface Settings/Network	IEEE 802.1X Authentication for Ethernet	As required
Interface Settings/Network	LAN Type	Necessary
Interface Settings/Network	Permit SNMPv3 Communication	As required
Interface Settings/Network	Permit SSL / TLS Communication	As required
Interface Settings/Network	Host Name	As required

- For the Effective Protocol setting, check that the protocol you want to use is set to [Active].
- [LAN Type] is displayed when the wireless LAN interface board is installed.
- When both Ethernet and wireless LAN are connected, the selected interface takes precedence.

• p.31 "Interface Settings"

Wireless LAN

This section lists the settings required to use the network TWAIN Scanner a wireless LAN connection. For details about how to specify the settings, see "Interface Settings".

Menu	User Tool	Setting Requirements
Interface Settings/Network	Machine IPv4 Address	Necessary
Interface Settings/Network	IPv4 Gateway Address	As required
Interface Settings/Network	DNS Configuration	As required
Interface Settings/Network	DDNS Configuration	As required
Interface Settings/Network	IPsec	As required
Interface Settings/Network	Domain Name	As required
Interface Settings/Network	WINS Configuration	As required
Interface Settings/Network	Effective Protocol	Necessary
Interface Settings/Network	LAN Type	Necessary
Interface Settings/Network	Permit SNMPv3 Communication	As required
Interface Settings/Network	Permit SSL / TLS Communication	As required
Interface Settings/Network	Host Name	As required
Interface Settings/Wireless LAN	Communication Mode	Necessary
Interface Settings/Wireless LAN	SSID Setting	As required
Interface Settings/Wireless LAN	Ad-hoc Channel	As required
Interface Settings/Wireless LAN	Security Method	As required



- For the Effective Protocol setting, check that the protocol you want to use is set to [Active].
- [Wireless LAN] and [LAN Type] are displayed when the wireless LAN interface board is installed. When both Ethernet and wireless LAN are connected, the selected interface takes precedence.

• p.31 "Interface Settings"

3

Network Settings Required to Use Document Server

This section lists the settings required to use the Document Server function under the network environment.



 These settings should be made by the system administrator, or with the advice of the system administrator.

Ethernet

This section lists the settings required to use the Document Server function with an Ethernet connection. For details about how to specify the settings, see "Interface Settings".

Menu	User Tool	Setting Requirements
Interface Settings/Network	Machine IPv4 Address	Necessary
Interface Settings/Network	IPv4 Gateway Address	As required
Interface Settings/Network	Machine IPv6 Address	As required
Interface Settings/Network	IPv6 Gateway Address	As required
Interface Settings/Network	IPv6 Stateless Address Autoconfiguration	As required
Interface Settings/Network	DNS Configuration	As required
Interface Settings/Network	DDNS Configuration	As required
Interface Settings/Network	IPsec	As required
Interface Settings/Network	Domain Name	As required
Interface Settings/Network	WINS Configuration	As required
Interface Settings/Network	Effective Protocol	Necessary
Interface Settings/Network	Ethernet Speed	As required
Interface Settings/Network	IEEE 802.1X Authentication for Ethernet	As required
Interface Settings/Network	LAN Type	Necessary

Menu	User Tool	Setting Requirements
Interface Settings/Network	Permit SNMPv3 Communication	As required
Interface Settings/Network	Permit SSL / TLS Communication	As required
Interface Settings/Network	Host Name	As required



- For the Effective Protocol setting, check that the protocol you want to use is set to [Active].
- [LAN Type] is displayed when the wireless LAN interface board is installed.
- When both Ethernet and wireless LAN are connected, the selected interface takes precedence.

• p.31 "Interface Settings"

Wireless LAN

This section lists the settings required to use the Document Server function with a wireless LAN connection. For details about how to specify the settings, see "Interface Settings".

Menu	User Tool	Setting Requirements
Interface Settings/Network	Machine IPv4 Address	Necessary
Interface Settings/Network	IPv4 Gateway Address	As required
Interface Settings/Network	Machine IPv6 Address	As required
Interface Settings/Network	IPv6 Gateway Address	As required
Interface Settings/Network	IPv6 Stateless Address Autoconfiguration	As required
Interface Settings/Network	DNS Configuration	As required
Interface Settings/Network	DDNS Configuration	As required
Interface Settings/Network	IPsec	As required
Interface Settings/Network	Domain Name	As required
Interface Settings/Network	WINS Configuration	As required
Interface Settings/Network	Effective Protocol	Necessary

Menu	User Tool	Setting Requirements
Interface Settings/Network	LAN Type	Necessary
Interface Settings/Network	Permit SNMPv3 Communication	As required
Interface Settings/Network	Permit SSL / TLS Communication	As required
Interface Settings/Network	Host Name	As required
Interface Settings/Wireless LAN	Communication Mode	Necessary
Interface Settings/Wireless LAN	SSID Setting	As required
Interface Settings/Wireless LAN	Ad-hoc Channel	As required
Interface Settings/Wireless LAN	Security Method	As required
Interface Settings/Wireless LAN	Transmission Speed	As required



- For the Effective Protocol setting, check that the protocol you want to use is set to [Active].
- [Wireless LAN] and [LAN Type] are displayed when the wireless LAN interface board is installed. When both Ethernet and wireless LAN are connected, the selected interface takes precedence.

Reference

• p.31 "Interface Settings"

3

Using Utilities to Make Network Settings

This section describes how to make network settings using utilities.

You can also specify network settings using utilities such as Web Image Monitor, SmartDeviceMonitor for Admin, and telnet.



- These settings should be made by the system administrator, or with the advice of the system administrator.
- For details about using Web Image Monitor, see "Using Web Image Monitor".
- For details about using SmartDeviceMonitor for Admin, see "Using SmartDeviceMonitor for Admin".
- For details about using telnet, see "Using telnet".

Reference

- p.155 "Using Web Image Monitor"
- p.168 "Using SmartDeviceMonitor for Admin"
- p.192 "Remote Maintenance by telnet"

Interface Settings

This section describes how to make Interface settings using utilities.

Change settings by using Web Image Monitor, SmartDeviceMonitor for Admin, and telnet.

[Network] → [Machine IPv4 Address] → [Auto-Obtain (DHCP)]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Machine IPv4 Address] → [Specify] → "IPv4 Address"

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Machine IPv4 Address] → [Specify] → "Subnet Mask"

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [IPv4 Gateway Address]

• Web Image Monitor: Can be used for specifying the setting.

- SmartDeviceMonitor for Admin: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Machine IPv6 Address] → "Manual Configuration Address"

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [IPv6 Gateway Address]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [IPv6 Stateless Address Autoconfiguration]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [DNS Configuration] → [Auto-Obtain (DHCP)]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [DNS Configuration] → [Specify] → "DNS Server 1-3"

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [DDNS Configuration]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [IPsec]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Domain Name] → [Auto-Obtain (DHCP)]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.

• telnet: Can be used for specifying the setting.

[Network] → [Domain Name] → [Specify] → "Domain Name"

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [WINS Configuration] → [On] → "Primary WINS Server"

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [WINS Configuration] → [On] → "Secondary WINS Server"

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [WINS Configuration] → [On] → "Scope ID"

- · Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [WINS Configuration] → [Off]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Effective Protocol] → "IPv4"

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: You can specify the TCP/IP settings if SmartDeviceMonitor for Admin is communicating with the machine using IPX/SPX.
- telnet: Can be used for specifying the setting.

[Network] → [Effective Protocol] → "IPv6"

- · Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Effective Protocol] → "NetWare"

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: You can specify the IPX/SPX settings if SmartDeviceMonitor for Admin is communicating with the machine using TCP/IP.

• telnet: Can be used for specifying the setting.

[Network] → [Effective Protocol] → "SMB"

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Effective Protocol] → "AppleTalk"

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [NCP Delivery Protocol] → [IPX Priority]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[Network] → [NCP Delivery Protocol] → [TCP / IP Priority]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[Network] → [NCP Delivery Protocol] → [IPX Only]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[Network] → [NCP Delivery Protocol] → [TCP / IP Only]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

$[Network] \rightarrow [NW Frame Type] \rightarrow [Auto Select]$

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [NW Frame Type] → [Ethernet II]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] \rightarrow [NW Frame Type] \rightarrow [Ethernet 802.2]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

$[Network] \rightarrow [NW Frame Type] \rightarrow [Ethernet 802.3]$

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

$[Network] \rightarrow [NW Frame Type] \rightarrow [Ethernet SNAP]$

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [SMB Computer Name]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [SMB Work Group]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Ethernet Speed]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [IEEE 802.1X Authentication for Ethernet]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Restore IEEE 802.1X Authentication to Defaults]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [LAN Type] → [Ethernet]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [LAN Type] → [Wireless LAN]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Ping Command]

- Web Image Monitor: Cannot be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[Network] → [Permit SNMPv3 Communication] → [Encryption Only]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Permit SNMPv3 Communication] → [Encryption / Cleartext]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Permit SSL / TLS Communication] → [Ciphertext Only]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[Network] → [Permit SSL / TLS Communication] → [Ciphertext Priority]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[Network] → [Permit SSL / TLS Communication] → [Ciphertext / Cleartext]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[Network] → [Host Name]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Machine Name]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Wireless LAN] → [Communication Mode] → [802.11 Ad-hoc Mode]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Wireless LAN] → [Communication Mode] → [Infrastructure Mode]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Wireless LAN] → [SSID Setting]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Wireless LAN] → [Ad-hoc Channel]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Wireless LAN] → [Security Method]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Wireless LAN] → [Restore Factory Defaults]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Can be used for specifying the setting.

File Transfer

This section describes how to make File Transfer settings using utilities.

Change settings by using Web Image Monitor, SmartDeviceMonitor for Admin, and telnet.

[File Transfer] → [Delivery Option]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [SMTP Server]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [SMTP Authentication]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [POP before SMTP]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] \rightarrow [Reception Protocol] \rightarrow [POP3]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [Reception Protocol] → [IMAP4]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [Reception Protocol] → [SMTP]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [POP3 / IMAP4 Settings]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [Administrator's E-mail Address]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [E-mail Communication Port]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [E-mail Reception Interval]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [Max. Reception E-mail Size]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [E-mail Storage in Server]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [Default User Name / Password (Send)]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [Program / Change / Delete E-mail Message]

- Web Image Monitor: Can be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

- [File Transfer] → [Auto Specify Sender Name]
 - Web Image Monitor: Can be used for specifying the setting.
 - SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
 - telnet: Cannot be used for specifying the setting.

[File Transfer] → [Scanner Resend Interval Time]

- Web Image Monitor: Cannot be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [Number of Scanner Resends]

- Web Image Monitor: Cannot be used for specifying the setting.
- SmartDeviceMonitor for Admin: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

3

4. Using a Printer Server

This chapter describes how to configure the machine as a network printer.

Preparing Printer Server

This section explains how to configure the machine as a Windows network printer. The machine is configured to enabling network clients to use it. When the network printer is connected via SmartDeviceMonitor for Client, you can set the printing notification function to notify clients of the results of their print jobs.



- Under Windows XP Professional or Windows Server 2003/2003 R2, to change printer properties
 in the [Printer] or [Printers and Faxes] window, you need Printer Management access authentication;
 under Windows Vista, and Windows Server 2008, Full Control access authentication. Log on to the
 file server as an Administrator or member of the Power Users group.
- Open the [Printers and Faxes] window from the [Start] menu.
 - The [Printers and Faxes] window appears.
- 2. Click the icon of the machine you want to use. On the [File] menu, click [Properties]. The printer properties appear.
- 3. On the [Sharing] tab, click [Share this printer].
- 4. To share the machine with users using a different version of Windows, click [Additional Drivers...].
 - If you have installed an alternative driver by selecting [Share As:] during the printer driver installation, this step can be ignored.
- 5. Click [OK], and then close the printer properties.

Using NetWare

This section describes the setting procedure for network printers in the NetWare environment. In the NetWare environment, you can connect the machine as a "print server" or "remote printer".



• IPv6 cannot be used on this function.

Setting procedure

- · When using the machine as a print server
 - 1. Installing SmartDeviceMonitor for Admin.
 - 2. Setting the network interface board.
 - 3. Turning the machine off and then back on.
- When using the machine as a remote printer
 - 1. Installing SmartDeviceMonitor for Admin.
 - 2. Setting the network interface board.
 - 3. Setting NetWare.
 - 4. Starting the print server.



- This procedure assumes an environment is already prepared for normal NetWare running the printing service setting.
- The procedure is explained with the following example settings:
 - File server's name ... CAREE
 - Print server's name ... PSERV
 - Printer's name ...R-PRN
 - Queue name ...R-QUEUE

Using SmartDeviceMonitor for Admin

To use the machine in a NetWare environment, use SmartDeviceMonitor for Admin to set the NetWare printing environment.

Printers listed by SmartDeviceMonitor for Admin

SmartDeviceMonitor for Admin lists printers connected to the network. If you cannot identify the machine you want to configure, print configuration page, and then check the machine name.



- The NetWare Client provided by Novell is required to set the printing environment using SmartDeviceMonitor for Admin under the following environments:
 - NDS or Bindery mode in Windows 2000

- NDS or Bindery mode in Windows XP
- For details about SmartDeviceMonitor for Admin, see "Using SmartDeviceMonitor for Admin".

Reference

• p.168 "Using SmartDeviceMonitor for Admin"

Setting Up as a Print Server (NetWare 3.x)

Follow the procedure below to connect the machine as a print server using NetWare 3.x.

- 1. Start Web Image Monitor.
- 2. Click [Login].

A dialog box for entering the login user name and password appears.

- Enter the login user name and password, and then click [Login].
 For details about the login user name and password, consult your network administrator.
- 4. Click [Configuration] in the left area, and then click [NetWare].
 - Print Server Name: Enter the NetWare print server name. To use the interface board as a print server, enter the name of a print server that is not active on the file server. Use up to 47 characters.
 - Logon Mode: Specify whether to designate a file server or NDS tree when logging on to NetWare.
 - File Server Name: When a file server name is entered here, only the specified file server is searched for. This item is mandatory. Use up to 47 characters.
 - NDS Tree: To enable NDS mode, enter the name of the NDS tree you want to log on to. Use up to 32 alphanumeric characters.
 - NDS Context Name: To enable NDS mode, enter the print server context. Use up to 127 characters.
 - Operation Mode: Specify whether to use the interface board as a print server or a remote printer.
 - Remote Printer No.: This item is effective when the interface board is specified as a remote printer.
 Enter the same number as the number of the printer to be created on the print server (0 to 254 characters).
 - Job Timeout: When the interface board is used as a NetWare remote printer, the printer cannot
 detect when a print job ends. Therefore, the printer terminates printing when a certain period of
 time has elapsed since it last received print data (i.e., when it has not received print data for a
 certain period of time). Specify here this period of time (3 to 255 seconds). The initial value is
 15 (seconds).
 - Frame Type: Select the frame type from the drop-down menu.
 - Print Server Protocol: Select the protocol for NetWare from the drop-down menu.
 - NCP Delivery Protocol: Select the protocol for NCP delivery.

5. Confirm the settings, and then click [Device Name].

Configuration is now complete. Wait several before restarting Web Image Monitor.

6. Click [Logout].



• To check the configuration is correct, enter the following from the command prompt:

F:> USERLIST

- If the printer works as configured, the name of the print server appears as a connected user.
- If you cannot identify the printer you want to configure, check the printer name against the configuration page printed from the printer.
- If no printer names appear in the list, match the frame types of IPX/SPXs for the computer and printer.
 Use the [Network] dialog box of Windows to change the frame type of the computer.
- For details about Web Image Monitor, see "Using Web Image Monitor".
- For details about login user names and passwords, see Security Reference, which is the administrator's manual.

Reference

• p.155 "Using Web Image Monitor"

Setting Up as a Print Server (NetWare 4.x, 5/5.1, 6/6.5)

Follow the procedure below to connect the machine as a print server using NetWare 4.x, NetWare 5/5.1, or NetWare 6/6.5.



- When using the printer as a print server in NetWare 4.x, NetWare 5/5.1, or NetWare 6/6.5, set it to the NDS mode.
- When using NetWare 5/5.1 or NetWare 6/6.5, set the printer as a print server.
- 1. Start Web Image Monitor.
- 2. Click [Login].

A dialog box for entering the login user name and password appears.

- Enter the login user name and password, and then click [Login].For details about the login user name and password, consult your network administrator.
- 4. Click [Configuration] in the left area, and then click [NetWare].
- Confirm the settings, and then click [Device Name].
 Configuration is now complete. Wait several minutes before restarting Web Image Monitor.
- 6. Click [Logout].

7. Quit Web Image Monitor.



• To check the configuration is correct, enter the following from the command prompt:

F:> USFRIIST

- If the printer works as configured, the name of the print server appears as a connected user.
- If you cannot identify the printer you want to configure, check the printer name against the
 configuration page printed from the printer. If no printer names appear in the list, match the frame
 types of IPX/SPXs for the computer and printer. Use the [Network] dialog box of Windows to change
 the frame type of the computer.
- For details about Web Image Monitor, see "Using Web Image Monitor".
- For details about login user names and passwords, see Security Reference, which is the administrator's manual.

■ Reference

• p.155 "Using Web Image Monitor"

Using Pure IP in the NetWare 5/5.1 or 6/6.5 Environment

Follow the procedure below to connect the machine as a print server in a pure IP environment of NetWare 5/5.1 or NetWare 6/6.5.



- When creating a queued print server in a pure IP environment of NetWare 5/5.1 or NetWare 6/6.5, create a print queue on the file server using NetWare Administrator.
- This printer is not available as a remote printer for use in a pure IP environment.
- To use the printer in a pure IP environment, set it to IPv4.

Setting up using NWadmin

- 1. From Windows, start NWadmin.
 - For details about NWadmin, see the NetWare manuals.
- 2. Select the object in which the print queue is located in the directory tree, and then click [Create] on the [Object] menu.
- 3. In the [Class of new object] box, click [Print Queue], and then click [OK].
- 4. In the [Print Queue Name] box, enter the name of the print queue.
- 5. In the [Print Queue Volume] box, click [Browse].
- 6. In the [Available objects] box, click the volume in which the print queue is created, and then click [OK].

- Check the settings, and then click [Create].
- 8. Select the object in which the printer is located, and then click [Create] on the [Object] menu.
- In the [Class of new object] box, click [Printer], and then click [OK]. For NetWare 5, click [Printer (Non NDPS)].
- 10. In the [Printer name] box, enter the printer name.
- 11. Select the [Define additional properties] check box, and then click [Create].
- 12. Click [Assignments], and then click [Add] in the [Assignments] area.
- 13. In the [Available objects] box, click the queue you created, and then click [OK].
- 14. Click [Configuration], click [Parallel] in the [Printer type] list, and then click [Communication].
- 15. Click [Manual load] in the [Communication type] area, and then click [OK].
- 16. Check the settings, and then click [OK].
- 17. Select a context specified, and then click [Create] on the [Object] menu.
- 18. In the [Class of new object] box, click [Print Server], and then click [OK]. For NetWare 5, click [Print Server (Non NDPS)].
- 19. In the [Print Server Name] box, enter the print server name.
 Use the same print server name specified using SmartDeviceMonitor for Admin.
- 20. Select the [Define additional properties] check box, and then click [Create].
- 21. Click [Assignments], and then click [Add] in the [Assignments] area.
- 22. In the [Available objects] box, click the queue you created, and then click [OK].
- 23. Check the settings, and then click [OK].
- 24. Start the print server by entering the following from the console of the NetWare server.

If the print server is in operation, quit and restart it.

To quit

CAREE: unload pserver

To start

CAREE: load pserver [print server name]

Setting up using Web Image Monitor

- 1. Start Web Image Monitor.
- 2. Click [Login].

A dialog box for entering the login user name and login password appears.

3. Enter the user login user name and password, and then click [Login].

For details about the login name and password, consult your network administrator.

- 4. Click [Configuration] in the left area, and then click [NetWare].
- Confirm the settings, and then click [Device Name].
 Configuration is now complete. Wait several minutes before restarting Web Image Monitor.
- 6. Click [Logout].
- 7. Quit Web Image Monitor.



- If you cannot identify the printer you want to configure, check the printer name against the configuration page printed from the printer.
- If no printer names appear in the list, match the frame types of IPX/SPXs for the computer and printer.

 Use the [Network] dialog box of Windows to change the frame type of the computer.
- For details about Web Image Monitor, see "Using Web Image Monitor".
- For details about login user names and passwords, see Security Reference, which is the administrator's manual.

Reference

• p.155 "Using Web Image Monitor"

Setting Up as a Remote Printer (NetWare 3.x)

Follow the procedure below to use the machine as a remote printer under NetWare 3.x.

Setting up using PCONSOLE

1. Enter "PCONSOLE" from the command prompt.

F:> PCONSOLE

2. Create a print queue.

When using the existing print queue, go to the procedure for creating a printer.

- 3. From the [Available Options] menu, select [Print Queue Information], and then press the [Enter] key.
- 4. Press [Insert] key, and then enter a print queue name.
- 5. Press [Esc] key to return to the [Available Options] menu.
- 6. Set up the network connection to a printer.
- On the [Available Options] menu, click [Print Server Information], and then press the [Enter] key.
- 8. To create a new print server, press the [Insert] key, and then enter a print server name.

For a currently defined print server, select a print server in the [Print Server] list.

Use the same printer name specified using SmartDeviceMonitor for Admin.

- 9. From the [Print Server Information] menu, select [Print Server Configuration].
- 10. From the [Print Server Configuration] menu, select [Printer Configuration].
- 11. Select the printer indicated as [Not Installed].

Use the same printer number specified as the remote printer number using SmartDeviceMonitor for Admin.

12. To change the printer name, enter a new name.

A name "printer x" is assigned to the printer. The "x" stands for the number of the selected printer.

13. As type, select [Remote Parallel, LPT1].

The IRQ, Buffer size, Starting form, and Queue service mode are automatically configured.

- 14. Press the [Esc] key, and then click [Yes] on the confirmation message.
- 15. Press the [Esc] key to return to [Print Server Configuration Menu].
- 16. Assign print queues to the created printer.
- 17. From [Print Server Configuration Menu], select [Queues Serviced By Printer].
- 18. Select the printer created.
- 19. Press the [Insert] key to select a queue serviced by the printer.

You can select several queues.

20. Follow the instructions on the screen to make other necessary settings.

Following these steps, check that the queues are assigned.

- 21. Press the [Esc] key until "Exit?" appears, and then select [Yes] to exit PCONSOLE.
- 22. Start the print server by entering the following from the console of the NetWare server.

If the print server is in operation, quit and restart it.

To quit

CAREE: unload pserver

To start

CAREE: load pserver [print server name]

If the printer works as configured, the message "Waiting for job" appears.

Setting up using Web Image Monitor

- 1. Start Web Image Monitor.
- 2. Click [Login].

A dialog box for entering the login user name and login password appears.

3. Enter the login user name and password, and then click [Login].

For details about the login user name and password, consult your network administrator.

4. Click [Configuration] in the left area, and then click [NetWare].

5. Confirm the settings, and then click [Device Name].

Configuration is now complete. Wait several minutes before restarting Web Image Monitor.

- 6. Click [Logout].
- 7. Quit Web Image Monitor.



- If you cannot identify the printer you want to configure, check the printer name against the configuration page printed from the printer.
- If no printer names appear in the list, match the frame types of IPX/SPXs for the computer and printer.

 Use the [Network] dialog box of Windows to change the frame type of the computer.
- For details about Web Image Monitor, see "Using Web Image Monitor".
- For details about login user names and passwords, see Security Reference, which is the administrator's manual.

Reference

• p.155 "Using Web Image Monitor"

Setting Up as a Remote Printer (NetWare 4.x, 5/5.1, 6/6.5)

Follow the procedure below to use the printer as a remote printer under NetWare 4.x, 5/5.1 and 6/6.5.

- To use the printer as a remote printer under NetWare 4.x, 5/5.1, 6/6.5, set it to NDS mode.
- Do not use the printer as a remote printer when Pure IP is used.

Setting up using NWadmin

- 1. From Windows, start NWadmin.
 - For details about NWadmin, see the NetWare manuals.
- 2. Set up the network connection to a print queue. Select the object in which the print queue is located in the directory tree, and then click [Create] on the [Object] menu.
- 3. In the [Class of new object] box, click [Print Queue], and then click [OK].
- 4. In the [Print Queue Name] box, enter the name of the print queue.
- 5. In the [Print Queue Volume] box, click [Browse].
- 6. In the [Available objects] box, click the volume in which the print queue is created, and then click [OK].
- 7. Check the settings, and then click [Create].
- 8. Set up the network connection to a printer. Select the object in which the printer is located, and then click [Create] on the [Object] menu.

- 9. In the [Class of new object] box, click [Printer], and then click [OK]. For NetWare 5, click [Printer (Non NDPS)].
- 10. In the [Printer name] box, enter the printer name.
- 11. Select the [Define additional properties] check box, and then click [Create].
- 12. Assign print queues to the created printer. Click [Assignments, and then click [Add] in the [Assignments] area.
- 13. In the [Available objects] box, click the queue you created, and then click [OK].
- 14. Click [Configuration], click [Parallel] in the [Printer type] list, and then click [Communication].
- 15. Click [Manual load] in the [Communication type] area, and then click [OK]. Check the settings, and then click [OK].
- 16. Set up the network connection to a print server. Select a context specified, and then click [Create] on the [Object] menu.
- 17. In the [Class of new object] box, click [Print Server], and then click [OK]. For NetWare 5, click [Print Server (Non NDPS)].
- 18. In the [Print Server Name:] box, enter the print server name.
 Use the same print server name specified using SmartDeviceMonitor for Admin.
- 19. Select the [Define additional properties] check box, and then click [Create].
- 20. Assign the printer to the created print server. Click [Assignments], and then click [Add] in the [Assignments] area.
- 21. In the [Available objects] box, click the queue you created, and then click [OK].
- 22. In the [Printers] area, click the printer you assigned, and then click [Printer Number].
- 23. Enter the printer number, and then click [OK]. Check the settings, and then click [OK].

 Use the same printer number specified as the remote printer number using SmartDeviceMonitor for Admin.
- 24. Start the print server by entering the following from the console of the NetWare server.

 If the print server is in operation, guit and restart it.

To exit

CAREE: unload pserver

To start

CAREE: load pserver [print server name]

- 25. Enter the printer server name as the context name, and then press the [Enter] key.
- 26. Select the printer name on the context menu, and then press the [Enter] key.

Setting up using Web Image Monitor

Start Web Image Monitor.

2. Click [Login].

A dialog box for entering the login user name and login password appears.

3. Enter the user login name and password, and then click [Login].

For details about the login user name and password, consult your network administrator.

- 4. Click [Configuration] in the left area, and then click [NetWare].
- 5. Confirm the settings, and then click [Device Name].

Configuration is now complete. Wait several minutes before restarting Web Image Monitor.

- 6. Click [Logout].
- 7. Quit Web Image Monitor.



- If you cannot identify the printer you want to configure, check the printer name against the configuration page printed from the printer.
- If no printer names appear in the list, match the frame types of IPX/SPXs for the computer and printer.

 Use the [Network] dialog box of Windows to change the frame type of the computer.
- For details about Web Image Monitor, see "Using Web Image Monitor".
- For details about login user names and passwords, see Security Reference, which is the administrator's manual.

Reference

• p.155 "Using Web Image Monitor"

5. Monitoring and Configuring the Printer

This chapter describes how to monitor and configure the printer.

Using Web Image Monitor

Using Web Image Monitor, you can check the machine status and change settings.

Available operations

The following operations can be remotely performed using Web Image Monitor from a client computer.

- · Displaying machine status or settings
- · Checking the print job status or history
- · Checking, modifying, printing, or deleting print jobs stored in the Document Server
- Interrupting currently printing jobs
- · Resetting the machine
- · Managing the Address Book
- Making machine settings
- · Making network protocol settings
- Making security settings

Configuring the machine

To perform the operations from Web Image Monitor, TCP/IP is required. After the machine is configured to use TCP/IP, operations from Web Image Monitor become available.

Recommended Web browser

• Windows:

Internet Explorer 5.5 SP2 or higher

Firefox 1.0 or higher

Mac OS:

Firefox 1.0 or higher

Safari 1.0, 1.2, 2.0 (412.2) or higher

Web Image Monitor supports screen reader software. We recommend JAWS 7.0 or a later version.



Safari cannot be used on Mac OS X 10.4.1.

- Display and operation problems can occur if you do not enable JavaScript and cookies, or if you are using a non-recommended Web Browser.
- If you are using a proxy server, change the Web browser settings. Contact your administrator for information about the settings.
- If you click your browser's back button but the previous page does not appear, click the browser's refresh button and try again.
- Machine information is not automatically updated. To perform an update, click [Refresh] in the display
 area.
- We recommend using Web Image Monitor in the same network.
- You cannot access to the machine from outside the firewall.
- When using the machine under DHCP, the IP address may be automatically changed by the DHCP server settings. Enable DDNS setting on the machine, and then connect using the machine's host name.
 Alternatively, set a static IP address to the DHCP server.
- If the HTTP port is disabled, connection to the machine using the machine's URL cannot be established. SSL setting must be enabled on this machine. For details, consult your network administrator.
- When using the SSL encryption protocol, enter "https://(machine's IP address or host name)/".
- Internet Explorer must be installed on your computer. Use the most recent available version. We recommend Internet Explorer 6.0 or later.
- When you are using Firefox, fonts and colors may be different, or tables may be out of shape.
- When using a host name under Windows Server 2003/2003 R2/2008, or Windows Vista with IPv6 protocol, perform host name resolution using an external DNS server. The host file cannot be used.
- To use JAWS 7.0 under Web Image Monitor, you must be running Windows OS and Microsoft Internet Explorer 5.5 SP2, or a later version.

Displaying Top Page


This section explains the Top Page and how to display Web Image Monitor.

Mportant !

- When entering an IPv4 address, do not begin segments with zeros. For example: If the address is "192.168.001.010", you must enter it as "192.168.1.10".
- 1. Start your Web browser.
- 2. Enter "http://(machine's IP address or host name)/" in your Web browser's URL bar.
 Top Page of Web Image Monitor appears.
 - If the machine's host name has been registered on the DNS or WINS server, you can enter it.

When setting SSL, a protocol for encrypted communication, under environment which server authentication is issued, enter "https://(machine's IP address or host name)/".

Every Web Image Monitor page is divided into the following areas:

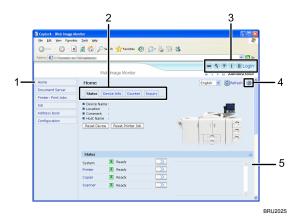

1. Menu area

If you select menu, its content will be shown on the work area, or the sub area.

2. Tab area

Details about each menu appear.

3. Header area

The dialog box for switching to the user mode and administrator mode appears, and each mode's menu will be displayed.

The link to help and dialog box for keyword search appears.

4. Help

Use Help to view or download Help file contents.

5. Display area

Displays the contents of the item selected in the menu area.

Machine information in the display area is not automatically updated. Click [Refresh] at the upper right in the display area to update the machine information. Click the Web browser's [Refresh] button to refresh the entire browser screen.



 When using a host name under Windows Server 2003/2003 R2/2008, or Windows Vista with IPv6 protocol, perform host name resolution using an external DNS server. The host file cannot be used.

When User Authentication is Set

Login (using Web Image Monitor)

Follow the procedure below to log on when user authentication is set.

- 1. Click [Login].
- Enter a login user name and password, and then click [Login].
 For details about the login user name and password, consult your network administrator.



- For user code authentication, enter a user code in [Login User Name], and then click [Login].
- The procedure may differ depending on the Web browser used.

Log out (using Web Image Monitor)

Click [Logout] to log off.



• When you log on and made the setting, always click [Logout].


About Menu and Mode

There are two modes available with Web Image Monitor: guest mode and administrator mode.

Displayed Items may differ depending on the machine type.

Guest Mode

In the guest mode, machine status, settings, and print job status can be viewed, but the machine settings cannot be changed.

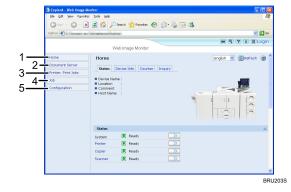

5

1. Home

The [Status], [Device Info], [Counter], and [Inquiry] tab are displayed. Details of the tab menu are displayed on the work area.

2. Document Server

Displays files stored in the Document Server.

3. Printer: Print Jobs

Allows you to display list of Sample Print, Locked Print, Hold Print, and Stored Print jobs.

4. Job

Displays all print files.

5. Configuration

Displays current machine and network settings.

Administrator Mode

In the administrator mode, you can configure various machine settings.



1. Home

The [Status], [Device Info], [Counter], and [Inquiry] tab are displayed. Details of the tab menu are displayed on the work area.

2. Document Server

Displays files stored in the Document Server.

3. Printer: Print Jobs

Allows you to display list of Locked Print, Sample Print, Hold Print, and Stored Print jobs.

4. Job

Displays all print files.

5. Address Book

User information can be registered, displayed, changed, and deleted.

6. Configuration

System settings for the machine, interface and security can be made.

7. Reset Device

Click to reset the printer. If a print job is being processed, the printer will be reset after the print job is completed. This button is located on Top Page.

8. Reset Printer Job

Click to reset current print jobs and print jobs in queue. This button is located on Top Page.

Access in the Administrator Mode

Follow the procedure below to access Web Image Monitor in the administrator mode.

1. On Top Page, click [Login].

The window for entering the login user name and password appears.

2. Enter your login user name and password, and then click [Login].

For details about the login user name and password, consult your network administrator.

List of Setting Items

The following tables show Web Image Monitor items that can be viewed or modified depending on the selected mode on the Web browser. Select one of the following modes to log on Web Image Monitor:

- Guest mode: logged on as an user
- Administrator mode: logged on as an administrator

Home

Status

Menu	Guest mode	Administrator mode
Reset Device	None	Modify
Reset Printer Job	None	Modify
Status	Read	Read
Toner	Read	Read
Input Tray	Read	Read
Output Tray	Read	Read

Device Info

Menu	Guest mode	Administrator mode
Functions	Read	Read
System	Read	Read
Version	Read	Read
Printer Language	Read	Read

Counter

Menu	Guest mode	Administrator mode
Copier	Read	Read
Printer	Read	Read
Send/TX Total	Read	Read
Scanner Send	Read	Read
Other Function(s)	Read	Read

Inquiry

Menu	Guest mode	Administrator mode
Machine Maintenance/Repair	Read	Read
Sales Representative	Read	Read

Document Server

Document Server

Guest mode	Administrator mode
Read/Modify	Read/Modify

Printer: Print Jobs

Print Job List

Guest mode	Administrator mode
Read/Modify	Read/Modify

5

Job

Job List

Menu	Guest mode	Administrator mode
Current/Waiting Jobs	Read	Read/Modify
Job History	Read	Read

Printer

Menu	Guest mode	Administrator mode
Job History	Read	Read
Spool Printing	Read	Read
Error Log	Read	Read

Document Server

Menu	Guest mode	Administrator mode
Print Job History	Read/Modify	Read/Modify
Scanner Remote Send History	Read/Modify	Read/Modify

Address Book

Menu	Guest mode	Administrator mode
Address Book	None	Read/Modify

Configuration

Device Settings

Menu	Guest mode	Administrator mode
System	Read	Read/Modify
Paper	Read	Read/Modify
Date/Time	Read	Read/Modify
Timer	Read	Read/Modify

Menu	Guest mode	Administrator mode
Logs	None	Read/Modify
Download Logs	None	Read/Modify
E-mail	Read	Read/Modify
Auto E-mail Notification	None	Read/Modify
On-demand E-mail Notification	None	Read/Modify
File Transfer	None	Read/Modify
User Authentication Management	None	Read/Modify
Administrator Authentication Management	None	Read/Modify
Program/Change Administrator	None	Read/Modify
LDAP Server	None	Read/Modify
Firmware Update	None	Read/Modify
Program/Change Realm	None	Modify

Printer

Menu	Guest mode	Administrator mode
Basic Settings	Read	Read/Modify
Tray Parameters (PCL)	None	Read/Modify
Tray Parameters (PS)	None	Read/Modify
Virtual Printer Settings	Read	Read/Modify
PDF Temporary Password	Modify	None
PDF Group Password	None	Modify
PDF Fixed Password	None	Modify

Scanner

Menu	Guest mode	Administrator mode
General Settings	Read	Read/Modify
Scan Settings	Read	Read/Modify
Send Settings	Read	Read/Modify
Initial Settings	Read	Read/Modify
Default Settings for Normal Screens on Device	Read	Read/Modify
Default Settings for Simplified Screens on Device	Read	Read/Modify

Interface

Menu	Guest mode	Administrator mode
Interface Settings	Read	Read/Modify
Wireless LAN Settings	Read	Read/Modify

Network

Menu	Guest mode	Administrator mode
IPv4	Read	Read/Modify
IPv6	Read	Read/Modify
NetWare	Read	Read/Modify
AppleTalk	Read	Read/Modify
SMB	Read	Read/Modify
SNMP	None	Read/Modify
SNMPv3	None	Read/Modify
SSDP	None	Read/Modify
Bonjour	Read	Read/Modify
System Log	Read	Read

Security

Menu	Guest mode	Administrator mode
Network Security	None	Read/Modify
Access Control	None	Read/Modify
IPP Authentication	None	Read/Modify
SSL/TLS	None	Read/Modify
ssh	None	Read/Modify
Site Certificate	None	Read/Modify
Device Certificate	None	Read/Modify
IPsec	None	Read/Modify
User Lockout Policy	None	Read/Modify
IEEE 802.1X (WPA/WPA2)	None	Read/Modify
S/MIME	None	Read/Modify

RC Gate

Menu	Guest mode	Administrator mode
Setup RC Gate	None	Read/Modify
Update RC Gate Firmware	None	Read
RC Gate Proxy Server	None	Read/Modify

Webpage

Menu	Guest mode	Administrator mode
Webpage	Read	Read/Modify

Extended Feature Settings

Menu	Guest mode	Administrator mode
Startup Setting	None	Read/Modify

Menu	Guest mode	Administrator mode
Extended Feature Info	None	Read
Install	None	Read/Modify
Uninstall	None	Read/Modify
Change Allocation	None	Read/Modify
Administrator Tools	None	Read/Modify
Additional Program Startup Setting	None	Read/Modify
Install Additional Program	None	Read/Modify
Uninstall Additional Program	None	Read/Modify
Copy Extended Features	None	Read/Modify
Copy Card Save Data	None	Read/Modify



• Some items are not displayed depending on the security settings.

Displaying Web Image Monitor Help

When using Help for the first time, clicking the icon marked "?" () makes the following screen appear, in which you can view Help in two different ways, as shown below:

Viewing Help on our Web site

Downloading Help to your computer

Downloading and Checking Help

You can download Help to your computer. As the Help URL, you can specify the path to the local file to view the Help without connecting to the Internet.



- By clicking "?" (2) in the header area, the contents of Help appear.
- By clicking "?" (?), the Help icon in the display area, Help for the setting items in the display area appears.

5

Downloading Help

- 1. In the [OS] list, select the operating system.
- 2. In the [Language] list, select the language.
- 3. Click [Download].
- 4. Download Help by following the instructions on the screen.
- 5. Store the downloaded compressed file in a given location, and then decompress the file.
 To create a link for the Help button (??), save the downloaded Help files on a Web server.


Linking the URL of the downloaded Help

You can link the URL of the help file on a computer or Web server to the "?" button.

- 1. Log on to Web Image Monitor in the administrator mode.
- 2. In the menu area, click [Configuration].
- 3. Click [Webpage].
- 4. In the [Set Help URL Target] box, enter the URL of the help file.

If you saved the help file to "C:\HELP\EN", enter "file://C:/HELP/". For example, if you saved the file to a Web server, and the URL of the index file is "http://a.b.c.d/HELP/EN/index.html", enter "http://a.b.c.d/HELP/".

5. Click [OK].

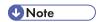

If you save the Help files on your hard disk, you must access them directly - you cannot link to them
using the Help button (??).

Using SmartDeviceMonitor for Admin

Using SmartDeviceMonitor for Admin, you can monitor the network printers. Also, you can change the configuration of the network interface board using TCP/IP or IPX/SPX.



• IPv6 cannot be used on this function.

Protocol stack provided with Operating System

Windows 2000

TCP/IP

IPX/SPX

NetWare

Client for Windows XP/2000, Novell

• Windows Server 2003/2003 R2

TCP/IP

IPX/SPX

NetWare

Novell Client for Windows XP/2003

Windows Server 2008

TCP/IP

Windows XP

TCP/IP

IPX/SPX

NetWare

Novell Client for Windows XP/2003

• Windows Vista

TCP/IP

Available operations

The following functions are available:

- Limits settings done from the control panel, and disables changes made to certain items.
- Enables selection of paper type loaded in the machine.
- Switches to, and comes out of Energy Saver mode.
- Checks information about printing, paper quantity, etc.
- Simultaneously monitors multiple printers. When there are many printers, you can create groups
 and classify printers to facilitate management.

- Checks the machine's network settings and detailed device information.
- Enables you to change the machine's network settings.
- You can check details of print jobs sent from a computer.
- Allows you to check job histories of printed, scanned, and photocopied documents identified by user codes.
- Allows selection of functions such as printing and scanning for each user code.
- E-mail addresses stored in the machine can be changed and saved by computer.
- You can make settings for and display the status changes of group devices.
- Using Address Management Tool, you can manage, user names for Scan to Folder, and addresses for sending and receiving.
- The e-mail sender's name and folder can be protected.

Installing SmartDeviceMonitor for Admin

Follow the procedure below to install SmartDeviceMonitor for Admin

- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The following languages are available: Czech, Danish, German, English, Spanish, French, Italian, Hungarian, Dutch, Norwegian, Polish, Portuguese, Finnish, Swedish, Chinese Simple and Chinese Traditional.

- 4. Click SmartDeviceMonitor for Admin.
- 5. Click [Next].

The software license agreement appears in the License Agreement dialog box.

- 6. After reading through its contents, click [Next].
- 7. Follow the instructions on the screen.

A message appears when the installation is completed.

8. Click [OK].

A message about restarting the computer may appear. Restart the computer to complete installation.



- Auto Run may not work under certain operating system settings. In this case, launch "Setup.exe" located on the CD-ROM root directory.
- If you are required to restart the computer after installing SmartDeviceMonitor for Admin, restart the computer and continue the configuration.

Changing the Network Interface Board Configuration

Follow the procedure below to change the network interface board configuration using SmartDeviceMonitor for Admin.

- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.

If you are using IPv4 SNMPv3, enter the user authentication.

- 3. In the list, select a machine whose configuration you want to change.
- 4. On the [Tools] menu, click [NIB Setup Tool].



A Web browser opens and the window for entering the login user name and password for the Web Image Monitor administrator appears.

NIB Setup Tool starts. Click [Web browser], and then click [OK].

5. Enter the login user name and password, and then click [Login].

For details about the login user name and password, consult your network administrator.

- 6. Configure settings using Web Image Monitor.
- 7. Click [Logout].
- 8. Quit Web Image Monitor.
- 9. Quit SmartDeviceMonitor for Admin.



- For details about login user names and passwords, see Security Reference, which is the administrator's manual.
- For details about Web Image Monitor, see "Using Web Image Monitor".

Reference

• p.155 "Using Web Image Monitor"

5

Locking the Menus on the Machine's Control Panel

Follow the procedure below to lock the menus on the machine's control panel.


- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.

If you are using IPv4 SNMPv3, enter the user authentication.

- 3. Select a machine.
- 4. On the [Tools] menu, point to [Device Settings], and then click [System].

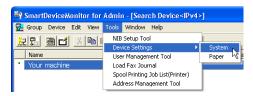

A Web browser opens and the window for entering the login user name and password for the Web Image Monitor administrator appears.

5. Enter the login user name and password, and then click [Login].

For details about the user name and password, consult your network administrator.

The [System] page of Web Image Monitor appears.

- 6. On the [Protect Printer Display Panel], select [Level 1] or [Level 2].
- 7. Click [OK].
- 8. Click [Logout].
- 9. Quit Web Image Monitor.
- 10. Quit SmartDeviceMonitor for Admin.



- For details about login user names and passwords, see Security Reference, which is the administrator's manual.
- For details about Web Image Monitor, see "Using Web Image Monitor".

Reference

• p.155 "Using Web Image Monitor"

Changing the Paper Type

Follow the procedure below to change the paper type.

- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.

If you are using IPv4 SNMPv3, enter the user authentication.

- 3. In the list, select a machine whose configuration you want to change.
- 4. On the [Tools] menu, point to [Device Settings], and then click [Paper].

A Web browser opens and the window for entering the login user name and password for the Web Image Monitor administrator appears.

5. Enter the login user name and password, and then click [Login].

For details about the login user name and password, consult your network administrator.

The [Paper] page appears.

Select a paper type in the [Paper Type] list for each tray. Enter required setting items.

- 6. Click [Logout].
- 7. Quit Web Image Monitor.
- 8. Quit SmartDeviceMonitor for Admin.



- For details about login user names and passwords, see Security Reference, which is the administrator's manual.
- For details about Web Image Monitor, see "Using Web Image Monitor".
- For details about setting items, see Help in the General Settings on Configuration page.

Reference

• p.155 "Using Web Image Monitor"

Managing User Information

Follow the procedure below to manage the user's information using SmartDeviceMonitor for Admin.

Prints jobs can be managed and functions restricted by user codes.

5

Starting User Management Tool

Follow the procedure below to start User Management Tool.

- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.

If you are using IPv4 SNMPv3, enter the user authentication.

- 3. In the list, select a machine you want to manage.
- 4. On the [Tools] menu, click [User Management Tool].



A Web browser opens and the window for entering the login user name and password for the Web Image Monitor administrator appears.

5. Enter the user name and password, and then click [Login].

For details about the user name and password, consult your network administrator.

User Management Tool starts.



- For details about login user names and passwords, see Security Reference, which is the administrator's manual
- For details about User Management Tool, see SmartDeviceMonitor for Admin Help.

Displaying the Number of Sheets Printed

Follow the procedure below to display the number of sheets printed under each user.

1. Start SmartDeviceMonitor for Admin User Management Tool.




The number of pages printed under each user appears.

3. Click [Exit] on the [File] menu to quit User Management Tool.

Exporting the information about the number of pages printed

Follow the procedure below to export the information of the number of pages printed under each user as a CSV file.

- Start SmartDeviceMonitor for Admin User Management Tool.
- 2. Click the [User Counter Information] tab of User Management Tool.
- 3. On the [File] menu, click [Export User Statistics List].

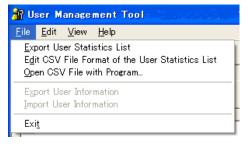

- 4. Specify the save location and file name, and then click [Save].
- 5. Click [Exit] on the [File] menu to quit User Management Tool.

Resetting the number of pages printed to 0.

Follow the procedure below to reset the number of pages printed under each user to 0.

- 1. Start SmartDeviceMonitor for Admin User Management Tool.
- 2. Click the [User Counter Information] tab of User Management Tool.
- 3. Select the user whose information you want to reset.

5

4. On the [Edit] menu, click [Reset User Counters].



5. Select the check box of the items you want to reset, and then click [OK].

A confirmation message appears.

6. Click [OK].

The count for the selected paper type becomes 0 and [Modified] is displayed for [Status].

7. On the [Edit] menu, click [Apply Settings].



Changes are applied to information on the User Counter Information tab.

8. Click [Exit] on the [File] menu to quit User Management Tool.

Restricting Functions

Follow the procedure below to restrict use of individual functions.

- 1. Start SmartDeviceMonitor for Admin User Management Tool.
- 2. Click the [User Counter Information] tab of User Management Tool.
- 3. Click the user whose functions you want to restrict.
- 4. On the [Edit] menu of User Management Tool, click [Restrict Access To Device].



- 5. Select the check box of the functions you want to restrict.
- 6. Click [OK].

A confirmation message appears.

7. Click [Yes].

The settings are applied.


8. Click [Exit] on the [File] menu to quit User Management Tool.

Setting Applicable Functions to New Users

Follow the procedure below to add new users and set functions applicable to them.

1. Start SmartDeviceMonitor for Admin User Management Tool.

2. Click the [Access Control List] tab of User Management Tool.

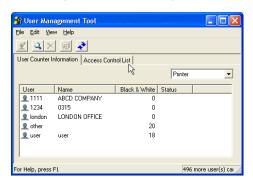

3. On the [Edit] menu, click [Add New User].



- 4. Enter the user code and user name.
- 5. Select the check box of the functions applicable to the new user.
 If the check boxes are unavailable, there is no restriction to use that function.
- 6. Click [OK].

The user is added, and [New] is displayed for [Status].

7. On the [Edit] menu, click [Apply Settings].

The settings are applied.

8. Click [Exit] on the [File] menu to quit User Management Tool.



• For details about setting restrictions, see SmartDeviceMonitor for Admin Help.

Configuring Energy Save Mode

Follow the procedure below to configure Energy Save mode.

- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.


Select the protocol of the machine whose configuration you want to change.

If you are using IPv4 SNMPv3, enter the user authentication.

3. Select the machine whose settings you want to make.

To make settings for all machines in the selected group, select no machine.

 Click the [Group] menu, point to [Energy Save Mode], [Set Individually], and then click [On].

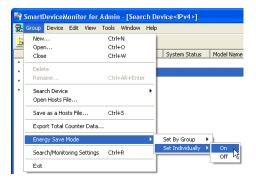

To select all the machines in the group, select [Set By Group].

To disable Energy Save mode, click [Off].

5. Quit SmartDeviceMonitor for Admin.



For details about the setting for Energy Save mode, see SmartDeviceMonitor for Admin Help.

Setting a Password

Follow the procedure below to set a password.

- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.

If you are using IPv4 SNMPv3, enter the user authentication.

- 3. In the list, select a machine whose configuration you want to change.
- 4. On the [Tools] menu, click [NIB Setup Tool].



A Web browser opens and the dialog box for entering the login user name and password for the Web Image Monitor administrator appears.

NIB Setup Tool starts when the network interface board is default. Follow the instructions on the screen.

- Enter the login user name and password, and then click [Login].
 For details about the user name and password, consult your network administrator.
- 6. Click [Configuration].
- Click [Program/Change Administrator] on the [Device Settings] area, and then change the settings.
- 8. Click [OK].
- 9. Click [Logout].
- 10. Quit Web Image Monitor.
- 11. Quit SmartDeviceMonitor for Admin.



• For details about login user names and passwords, see Security Reference, which is the administrator's manual.

Checking the Machine Status

Follow the procedure below to check machine status.

- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.

If you are using TCP/IP SNMPv3, enter the user authentication.

- 3. Click the [View] menu, and then click [Select Device List Columns].
- From [Device] in the [Select Device List Columns] dialog box, select the items you want to display, and then click [Add].

Selected items will move to [Show].

5. Move all the items you want to display, and then click [OK].

An icon in the list indicates the machine's status.

6. For information about a machine's status, select the machine you want to know about, and then click [Open] in the [Device Settings] menu.

The dialog box of the selected machine appears.

7. Click the application whose status you want to view.

The machine's status is displayed.

8. Quit SmartDeviceMonitor for Admin.



• For details about items in the dialog box, see SmartDeviceMonitor for Admin Help.

Changing Name and Comment

Follow the procedure below to change the name and comment for the machine.

- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.

If you are using IPv4 SNMPv3, enter the user authentication.

Select a machine in the list, and then click [NIB Setup Tool] on the [Tools] menu.

A Web browser opens and the window for entering the login user name and password for the Web Image Monitor administrator appears.

NIB Setup Tool starts when the network interface board is default. Follow the instructions on the screen.

4. Enter the login user name and password, and then click [Login].

For details about the login user name and password, consult your network administrator.

- 5. Click [Configuration].
- 6. Click [System] on the [Device Settings] area, and then change the settings.
- 7. Click [OK].
- 8. Click [Logout].

- 9. Quit Web Image Monitor.
- 10. Quit SmartDeviceMonitor for Admin.



- In the [Device Name] box, enter a device name on the machine using up to 31 characters.
- In the [Comment] box, enter a comment on the machine using up to 31 characters.
- For details about login user names and passwords, see Security Reference, which is the administrator's manual.
- For details about Web Image Monitor, see "Using Web Image Monitor".

Reference

• p.155 "Using Web Image Monitor"

Viewing and Deleting Spool Print Jobs

- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.

If you are using IPv4 SNMPv3, enter the user authentication.

 Select a machine in the list, and then click [Spool Printing Job List(Printer)] on the [Tools] menu.

A Web browser opens and the dialog box for entering the login user name and password for the Web Image Monitor administrator appears.

4. Enter the login user name and password, and then click [Login].

For details about the login user name and password, consult your network administrator.

[Spool Printing Job List] appears in the Web Image Monitor.

- Click [Logout].
- Quit Web Image Monitor.
- 7. Quit SmartDeviceMonitor for Admin.



- To display Spool Printing Job List, [Spool Printing] must be set to [Active] on Web Image Monitor in advance.
- To delete the Spool Printing Job, select the document you want to delete and then click [Delete].
- For details, see Help in the [Spool Printing Job List] area.

- For details about login user names and passwords, see Security Reference, which is the administrator's manual.
- For details about Web Image Monitor, see "Using Web Image Monitor".

Reference

• p.155 "Using Web Image Monitor"

Managing Address Information

- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.

If you are using IPv4 SNMPv3, enter the user authentication.

- 3. Select a machine in the list, and then click [Address Management Tool] on the [Tools] menu.
 - The dialog box for entering the login user name and password appears.
- 4. Enter the login user name and password, and then click [OK].

For details about the login user name and password, consult your network administrator.

[Address Management Tool] starts. Make the necessary settings.

- 5. Click [Exit].
- 6. Quit SmartDeviceMonitor for Admin.



- For details, see Address Management Tool Help.
- For details about login user names and passwords, see Security Reference, which is the administrator's manual.

5

Using SmartDeviceMonitor for Client

To view the status of machines using SmartDeviceMonitor for Client, configure SmartDeviceMonitor for Client beforehand.

Monitoring Printers


Follow the procedure below to monitor the machine using SmartDeviceMonitor for Client.

 Right-click the SmartDeviceMonitor for Client icon, point to [Properties], and then click [Monitor Device Settings...].



The [SmartDeviceMonitor for Client - Options] dialog box appears.

2. On the [Printers Folder] tab, select the machine you want to monitor, and then select the [To Be Monitored] check box in the Monitoring Information Settings area.

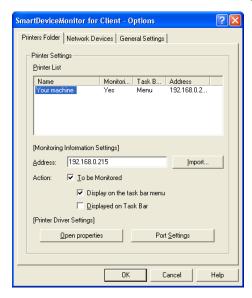

To display the machine status on the task bar, you must first select the [To be Monitored] check box, and then select the [Displayed on Task Bar] check box.

3. Click [OK].

The dialog box closes and the configured machine is monitored.





• For details about status icons, see SmartDeviceMonitor for Client Help.

Checking the Machine Status

Follow the procedure below to check machine status using SmartDeviceMonitor for Client.

1. Right-click the SmartDeviceMonitor for Client icon, and then click the machine.



The machine status appears in the dialog box.



• For details about items in the dialog box, see SmartDeviceMonitor for Client Help.

When Using IPP with SmartDeviceMonitor for Client

When using IPP with SmartDeviceMonitor for Client, note the following:

- The network printer can only receive one print job from SmartDeviceMonitor for Client at a time. While
 the network printer is printing, another user cannot access it until the job is finished. In this case,
 SmartDeviceMonitor for Client tries to access the network printer until the retry interval expires.
- If SmartDeviceMonitor for Client cannot access the network printer and times out, it will stop sending
 the print job. In this case, you should cancel the paused status from the print queue window.
 SmartDeviceMonitor for Client will resume access to the network printer. You can delete the print job
 from the print queue window, but canceling a print job printed by the network printer might cause the
 next job sent from another user to be incorrectly printed.
- If a print job sent from SmartDeviceMonitor for Client is interrupted and the network printer cancels the job because something went wrong, send the print job again.
- Print jobs sent from another computer do not appear in the print queue window, regardless of protocol.
- If various users send print jobs using SmartDeviceMonitor for Client to network printers, the printing
 order might not be the same as that in which the jobs were sent.
- An IP address cannot be used for the IPP port name because the IP address is used for the SmartDeviceMonitor for Client port name.

- When setting SSL, a protocol for encrypted communication, under environment which server
 authentication is issued, enter "https://(machine's IP address or host name)/ ". Internet Explorer
 must be installed on your computer. Use the highest version. Internet Explorer 6.0 or higher is
 recommended.
- If the [Security Alert] dialog box appears when accessing the machine using IPP to create or configure
 an IPP port, or when printing, install the certificate. To select the certificate store location when using
 Certificate Import Wizard, click [Place all certificates in the following store], and then click [Local
 Computer] under [Trusted Root Certification Authorities].



• For details about SSL settings, consult your network administrator.

Printer Status Notification by E-Mail

Whenever a paper tray becomes empty or paper is jammed, an e-mail alert is issued to the registered addresses to notify the printer status.

For this notification, you can make the e-mail notification settings.

Notification timing and e-mail content can be set.



Depending on your e-mail application, a phishing warning might appear after you receive an e-mail
message. To prevent phishing warnings appearing after you receive e-mail from a specified sender,
you must add the sender to your e-mail application's exclusion list. For details about how to do this,
see your e-mail application's Help.

The e-mail notification functions you can set are as follows:

- Auto e-mail notification
 - Information including the machine status is automatically sent by e-mail. Before you use this function, register the e-mail address to be used.
- On-demand e-mail notification
 Information including the machine status is sent by e-mail when a request from the administrator is

The information that can be notified by auto e-mail notification is as follows:

• Call Service

received.

- Out of Toner
- Toner Almost Empty
- Paper Misfeed
- Cover Open
- · Out of Paper
- · Almost Out of Paper
- Paper Tray Error
- Output Tray Full
- Unit Connection Error
- Duplex Unit Error
- Waste Toner Bottle is Full
- Waste Toner Bottle is Almost Full
- Add Staples
- Hole Punch Receptacle is Full

5

- File Storage Memory Full Soon
- Log Error
- Device Access Violation
- Replacement Required: Unit
- Replacement Required Soon: Unit
- Out of Binding Ring Combs
- · Out of Binding Glue
- Waste Paper Receptacle is Full
- Binder Tray Error
- 1. Log on to Web Image Monitor in administrator mode.
- 2. In the menu area, click [Configuration].
- 3. Click [E-mail] on the [Device Settings] area.
- 4. Make the following settings:
 - Items in the Reception column: Make the necessary settings for sending and receiving e-mail.
 - Items in the SMTP column: Configure the SMTP server. Check your mailing environment, and then specify the necessary items. You can also perform mail authentication for the SMTP server.
 - Items in the POP before SMTP column: Configure the POP server. Check your mailing environment, and then specify the necessary items. You can also perform mail authentication for the POP server.
 - Items in the POP3/IMAP4 column: Configure the POP3 or IMAP4 server. Check your mailing environment, and then specify the necessary items.
 - Items in the E-mail Communication Port column: Configure the port to be used for access to the mail server.
 - Items in the E-mail Notification Account column: Specify these items If you want to use e-mail notification.
- 5. Click [OK].
- 6. Click [Logout].
- 7. Quit Web Image Monitor.



- For details about login user name and password, see Security Reference, which is the administrator's manual.
- For details about the settings, see Web Image Monitor Help.
- For details about Web Image Monitor, see "Using Web Image Monitor".



• p.155 "Using Web Image Monitor"

Setting the Account for E-mail Notification

Before you use Auto E-mail Notification or On-demand E-mail notification, setup an e-mail account to be used for the function. Perform the following configuration task in Web Image Monitor.

- 1. Log on to Web Image Monitor in administrator mode.
- 2. Click [Configuration] in the menu area, and then click [E-mail] on the [Device Settings] area.
- 3. Make the following settings in E-mail Notification Account:
 - E-mail Notification E-mail Address: Enter the address using alphanumeric characters.
 - Receive E-mail Notification: Specify whether to use on-demand e-mail notification.
 - E-mail Notification User Name: Enter the administrator's user name as the mail originator name.
 - E-mail Notification Password: Enter the password of the mail notification user.
- 4. Click [OK].
- 5. Click [Logout].
- 6. Quit Web Image Monitor.



The user name and e-mail address that is already registered as e-mail destination cannot be specified
as the recipient of e-mail notification.

Mail Authentication

You can configure mail authentication to prevent illegal use of the mail server.

SMTP Authentication

Specify SMTP authentication.

When mail is sent to the SMTP server, authentication is performed using the SMTP AUTH protocol by prompting the mail originator to enter the user name and password. This prevents illegal use of the SMTP server.

- 1. Log on to Web Image Monitor in administrator mode.
- 2. Click [Configuration] in the menu area, and then click [E-mail] on the [Device Settings] area.
- 3. Make the following settings in SMTP column:
 - SMTP Server Name: Enter the IP address or host name of the SMTP server.
 - SMTP Port No.: Enter the port number used when sending e-mail to the SMTP server.

- SMTP Authentication: Enable or disable SMTP authentication.
- SMTP Auth. E-mail Address: Enter the e-mail address.
- SMTP Auth. User Name: Enter the SMTP account name.
- SMTP Auth. Password: To set or change the password for SMTP AUTH.
- SMTP Auth. Encryption: Select whether to encrypt the password or not.

Encryption-Auto Select: If the authentication method is PLAIN, LOGIN, CRAM-MD5, or DIGEST-MD5.

Encryption-Active: If the authentication method is CRAM-MD5 or DIGEST-MD5.

Encryption-Inactive: If the authentication method is PLAIN or LOGIN.

- 4. Click [OK].
- 5. Click [Logout].
- 6. Quit Web Image Monitor.

POP before SMTP Authentication

Select whether to log on to the POP3 server before sending e-mail.

- 1. Log on to Web Image Monitor in administrator mode.
- 2. Click [Configuration] in the menu area, and then click [E-mail] on the [Device Settings] area.
- 3. Make the following settings in POP before SMTP column:
 - POP before SMTP: Enable or disable POP before SMTP.
 - POP E-mail Address: Enter the e-mail address.
 - POP User Name: Enter the POP account name.
 - POP Password: To set or change the POP password.
 - Timeout setting after POP Auth.: Enter the time available before connecting to the SMTP server after logging on to the POP server.
- 4. Click [OK].
- Click [Logout].
- 6. Quit Web Image Monitor.

Auto E-mail Notification

- 1. Log on to Web Image Monitor in administrator mode.
- Click [Configuration] in the menu area, and then click [Auto E-mail Notification] on the [Device Settings] area.

The dialog box for making notification settings appears.

- Notification Message: You can set this according to your needs, for example, the machine's location, service representative contact information.
- Items in the Groups to Notify column: E-mail notification addresses can be grouped as required.
- Items in the Select Groups/Items to Notify column: Select groups for each notification type, such
 as machine status and error.

To make detailed settings for these items, click [Edit] next to [Detailed Settings of Each Item].

- 4. Click [OK].
- 5. Click [Logout].
- 6. Quit Web Image Monitor.



- For details about Web Image Monitor, see "Using Web Image Monitor".
- For details about the settings, see Web Image Monitor Help.

Reference

• p.155 "Using Web Image Monitor"

On-demand E-mail Notification

- 1. Log on to Web Image Monitor in administrator mode.
- 2. Click [Configuration] in the menu area, and then click [On-demand E-mail Notification] on the [Device Settings] area.

The dialog box for making notification settings appears.

- 3. Make the following settings:
 - Notification Subject: Enter a text string to be added to the subject line of return e-mails.
 - Notification Message: You can set this according to your needs, for example, the machine's location, service representative contact information.
 - Restriction to Device Status Info.: Select whether or not to allow access to the information such
 as the machine settings and status.
 - Items in the Receivable E-mail Address/Domain Name Settings column: Enter an e-mail address
 or domain name to use for requesting information by e-mail and to receive its return e-mail.
- 4. Click [OK].
- 5. Click [Logout].
- 6. Quit Web Image Monitor.



For details about Web Image Monitor, see "Using Web Image Monitor".

E

5

• For details about the settings, see Web Image Monitor Help.

Reference

• p.155 "Using Web Image Monitor"

Format of On-demand E-mail Messages

To use mail notification, you need to send an on-demand e-mail message to this machine.

Using your mail software, enter the following:

ltem	Description
Subject (Referred to as Subject)	Enter "requeststatus".
From (Referred to as From)	Specify a valid mail address. The device information will be sent to the address specified here.



- A mail message must be within 1 MB in size.
- E-mail may be incomplete if sent immediately after power on.
- The subject is not case sensitive.
- The body of a request e-mail has no meaning. Any text written in the e-mail body is ignored.

Remote Maintenance by telnet

- Remote Maintenance should be protected so that access is allowed to administrators only.
- The password is the same as the one of Web Image Monitor administrator. When the password is changed using "mshell", other's change also.

Using telnet

Follow the procedure below to use telnet.



- Only one user at a time can log on to perform remote maintenance.
- If you are using Windows Vista, you must enable the telnet server and telnet client beforehand.
- 1. Use the IP address or the host name of the machine to start telnet.

% telnet "IP address"

2. Enter your user name and password.

For details about the user name and password, consult your network administrator.

For user authentication, enter a login user name and password.

For user code authentication, enter a user code in User Name.

- 3. Enter a command.
- 4. Quit telnet.

msh> logout

The configuration message about saving the changes appears.

5. Enter "yes" to save the changes, and then press the [Enter] key.

If you do not want to save the changes, enter "no", and then press the [Enter] key. To make further changes, enter "return" at the command line, and then press the [Enter] key.



- If the message "Can not write NVRAM information" appears, the changes are not saved. Repeat the procedure above.
- When the changes are saved, the network interface board is reset automatically with that changes.
- When the network interface board resets, the print job in print process will be printed. However, print
 jobs in queue will be canceled.

5

5

8021x

Use the "8021x" command to display IEEE 802.1x related information.

View settings

msh> 8021x

Configuration

msh> 8021x eap {tls|ttls|leap|peap} {chap|mschap|mschapv2|pap|md5|tls}

- You can specify the EAP authentication type.
- tls: EAP-TLS (default)
- ttls: EAP-TTLS
- leap: LEAP
- peap: PEAP
- chap, mschap, mschapv2, pap, md5, or tls are settings for the phase 2 method, and must be set when using EAP-TTLS or PEAP.
- Do not make these settings when using other EAP authentication types.
- If you select EAP-TTLS, you can select chap, mschap, mschapv2, pap, or md5.
- If you select PEAP, you can select mschapv2 or tls.

msh> 8021x username "character string"

- You can specify the login user name for the Radius server.
- Usable characters: ASCII 0x20-0x7e (31 bytes).
- The default is blank.

msh> 8021x username2 "character string"

- You can specify the phase 2 username for EAP-TTLS/PEAP phase 2 authentication.
- Usable characters: ASCII 0x20-0x7e (31 bytes).
- The default is blank.

msh> 8021x domain name "character string"

- You can specify the login domain name for the Radius server.
- The characters you can enter are ASCII 0x20-0x7e (31 bytes), but not "@" or "\".
- The default is blank.

msh> 8021x password "character string"

- You can specify the login for the Radius server.
- Usable characters: ASCII 0x20-0x7e (128 bytes). The default is blank.

msh> 8021x srvcert {on|off}

You can set the server certificate. The default is "off".

msh> 8021x imca {on|off}

You can enable or disable the certificate when the intermediate certificate authority is present.
 The default is "off".

msh> 8021x srvid "character string"

- You can set the server ID and subdomain of the certificate server.
- Usable characters: ASCII 0x20-0x7e (128 bytes). The default is blank.

msh> 8021x subdomain

• You can specify permissions for the subdomain.

msh> 8021x clear {a each command all}

- · Returns the selected setting to its default value.
- If you specify "all", all settings will be restored to their default values. However, IEEE 802.1x Auth. status (enable or disable) for Ethernet and wireless LAN will not be initialized.

access

Use the "access" command to view and configure access control. You can also specify two or more access ranges.

View settings

msh> access

IPv4 configuration display

msh> access ID range

IPv6 configuration display

msh> access ID range6

IPv6 access mask configuration display

msh> access ID mask6

IPv4 configuration

msh> access ID range "start-address end-address"

Example: to specify accessible IPv4 addresses between 192.168.0.10 and 192.168.0.20:

msh> access 1 range 192.168.0.10 192.168.0.20

IPv6 configuration

msh> access ID range6 "start-address end-address"

Example: to specify accessible IPv6 addresses between 2001:DB8::100 and 2001:DB8::200.

msh> access 1 range6 2001:DB8::100 2001:DB8::200

IPv6 access mask configuration

```
msh> access ID mask6 "base-address prefixlen"

Example: to specify accessible IPv6 addresses to 2001:DB8::/32

msh> access 1 mask6 2001:DB8:: 32
```

Access control initialization

msh> access flush

 Use the "flush" command to restore the default settings so that all access ranges become "0.0.0.0" for IPv4, and "::" for IPv6.



- You can specify each IPv6 entry by either range or mask. For the range parameter, you can select "start-address end-address". For the mask parameter, you can select "base-address prefixlen".
- The access range restricts computers from use of the machine by IP address. If you do not need to restrict printing, make the setting "0.0.0.0" for IPv4, and "::" for IPv6.
- Valid ranges must be from lower (start address) to higher (end address).
- For IPv4 and IPv6, you can select an ID number between 1 and 5.
- IPv6 can register and select the range and the mask for each access ranges.
- IPv6 mask ranges between 1 128 can be selected.
- Up to five access ranges can be specified. The entry is invalid if the target number is omitted.
- You cannot send print jobs, or access Web Image Monitor and diprint from a restricted IP address.

appletalk

Use the "appletalk" command to view and configure AppleTalk parameters.

View settings

msh> appletalk

- [2] means "active" and [0] means "inactive".
- The default is [2].

Changing PAP timeout configuration

msh> appletalk ptimeout value > 0

Timeout value becomes effective.

msh> appletalk ptimeout value = 0

• Timeout value becomes ineffective.

authfree

Use the "authfree" command to view and configure AuthFree parameters.

View settings

The following command displays the current AuthFree settings:

msh> authfree

 If print job authentication exclusion is not set, authentication exclusion control cannot be displayed.

IPv4 address settings

```
msh> authfree "ID" range_addr1 range_addr2
```

IPv6 address settings

```
msh> authfree "ID" range6_addr1 range6_addr2
```

IPv6 address mask configuration

```
msh> authfree "ID" mask6_addr1 masklen
```

Parallel/USB settings

```
msh> authfree [parallel | usb] [on|off]
```

• To enable authfree, set to on. To disable authfree, set to off. Always specify the interface.

Authentication exclusion control initialization

msh> authfree flush

autonet

Use the "autonet" command to configure AutoNet parameters.

View settings

The following command displays the current AutoNet settings:

msh> autonet

Configuration

You can configure AutoNet settings.

```
msh> autonet {on|off}
```

• {on} means "active" and {off} means "inactive".

Current interface priority configuration display

msh> autonet priority

Interface priority configuration

```
msh> autonet priority "interface name"
```

- You can give interface's AutoNet parameter priority.
- Priority settings are available when multiple interfaces are installed.
- wlan can be specified only when the IEEE 802.11 interface is installed.

Interface	Interface configured
ether	Ethernet interface
wlan	IEEE 802.11 interface



- If an interface is not selected, the current interface connection settings remain in effect.
- For details about AutoNet, refer to autonet parameters.

bonjour

Use the "bonjour" command to display Bonjour-related settings.

View settings

Bonjour settings are displayed.

msh> bonjour

Bonjour service name setting

You can specify the Bonjour service name.

msh> bonjour cname "computer name"

- The computer name can be entered using up to 63 alphanumeric characters.
- If you do not specify a character string, the current setting is displayed.

Bonjour Installation location information setting

You can enter information about the location where the printer is installed.

msh> bonjour location "location"

- Information about location can be entered using up to 32 alphanumeric characters.
- If you do not specify a character string, current setting is displayed.

Setting order of priority for each protocol

- msh> bonjour diprint [0-99]
- msh> bonjour lpr [0-99]
- msh> bonjour ipp [0-99]

You can specify the order of priority for "diprint", "lpr", and "ipp". Smaller numbers indicate higher priority.

IP TTL setting

msh> bonjour ip ttl [1-255]

You can specify the IP TTL (the number of routers a packet can pass through).

• The default is 255.

Resetting the computer name and location information

You can reset the computer name and location information.

msh> bonjour clear {cname|location}

- cname: Reset the computer name. The default computer name will be displayed when the computer is restarted.
- location: Reset the location information. The previous location information will be deleted.

Interface configuration

msh> bonjour linklocal "interface_name"

- If you do not specify an interface, the Ethernet interface is selected automatically.
- If many types of interface are installed, configure the interface that communicates with linklocal address.
- If you do not specify an interface, the Ethernet interface is automatically selected.
- wlan can be specified only when the IEEE 802.11 interface is installed.

Interface	Interface configured
ether	Ethernet interface
wlan	IEEE 802.11 interface

Setting IPP-SSL printing

msh> bonjour ippport {ipp|ssl}

- If IPP-SSL Printing is set to ssl, the IPP port number will appear as 443, and IPP-SSL printing can be performed with higher security.
- If IPP-SSL Printing is set to ipp, the IPP port number will appear as 631. Port 631 is the port for normal IPP printing.

btconfig

Use the "btconfig" command to make Bluetooth settings.

View settings

Bluetooth settings are displayed.

msh> btconfig

Mode settings

You can set the Bluetooth operation mode to {private} or {public}.

msh> btconfig {private|public}

• The default is {public}.

devicename

Use the "devicename" command to display and change the printer name.

View settings

msh> devicename

Printer name configuration

msh> devicename name "string"

- Enter a printer name using up to 31 alphanumeric characters.
- Set single names for each printer.

Printer name initialization

msh> devicename clear name

• Reset the printer name to its default.

dhcp

Use the "dhcp" command to configure DHCP settings.

View settings

The following command displays the current DHCP settings.

msh> dhcp

Configuration

You can configure DHCP.

msh> dhcp "interface_name" {on|off}

- Click {on} to enable dhcp. Click {off} to disable DHCP.
- If the DNS server address and domain name are obtained from DHCP, be sure to click {on}.
- wlan can be specified only when the IEEE 802.11 interface is installed.

Interface name	Interface configured
ether	Ethernet interface
wlan	IEEE 802.11 interface

Current interface priority configuration display

msh> dhcp priority

Interface priority configuration

msh> dhcp priority "interface_name"

- You can select which interface has DHCP parameter priority.
- Priority settings are available when multiple interfaces are installed.

DNS server address selection

msh> dhcp dnsaddr {dhcp|static}

- Specify whether to obtain the DNS server address from the DHCP server or use the address set by a user.
- To obtain the DNS server address from the DHCP server, specify "dhcp". To use the address set by a user, specify "static".

Domain name selection

msh> dhcp domainname {dhcp|static}

- Specify whether to obtain the domain name from the DNS server or use the domain name set by a user.
- To obtain the domain name from the DHCP server, specify "dhcp". To use the domain name set by a user, specify "static".

■ Reference

p.386 "Using DHCP"

dhcp6

Use the "dhcp6" command to display or configure DHCPv6 settings.

View settings

The following command displays the current DHCPv6 settings.

msh> dhcp6

DHCPv6-lite configuration and display

msh> dhcp6 "interface name" lite {on|off}

Viewing and specifying DNS server address selection (obtained from the dhcpv6 server/user specified value)

msh> dhcp6 dnsaddr {dhco|static}

DUID(DHCP unique ID) deletion and display

msh> dhcp6 duid clear

5

Viewing and specifying the time required to re-obtain the parameter obtained from dhcpv6

msh> dhcp6 option lifetime [0-65535]

- It can be entered between 0 and 65535 minutes.
- The default is 60 minutes.
- If you specify "0", you cannot re-obtain the value.

diprint

The direct printing port enables direct printing from a network-connected computer.

Use the "diprint" command to change direct printing port settings.

View settings

The following command displays the current direct printing port settings:

msh> diprint

Example output:

port 9100

timeout=300(sec)

bidirect on

conn multi

apl async

- The "port" specifies the port number of the direct printing port.
- The "bidirect" setting indicates whether the direct printing port is bidirectional or not.

Setting timeout

msh> diprint timeout [30-5535]

- You can specify the timeout interval to use when the printer is expecting data from the network.
- The default is 300 seconds.
- This command functions in conjunction with the "lpr" command.

Specifying the number of concurrent connections

msh> diprint conn {multi|single}

- The above command specifies the number of concurrent diprint connections. Specify "multi" for multiple connections or "single" for a single connection.
- The default is "multi".

dns

Use the "dns" command to configure or display DNS (Domain Name System) settings.

View settings

The following command displays current DNS settings:

msh> dns

IPv4 DNS server configuration

The following command enables or disables the IPv4 DNS server address:

msh> dns "ID" server "server address"

The following command displays a configuration using the IP address 192.168.15.16 on a DNS 1 server:

msh> dns 1 server 192.168.15.16

- You can register IPv4 DNS Server address.
- You can select an ID number between 1 and 3. You can select up to three ID numbers.
- You cannot use "255.255.255.255" as the DNS server address.

IPv6 DNS server configuration

The following command enables or disables the IPv4 DNS server address:

msh> dns "ID" server6 "server address"

- You can register IPv6 DNS Server address.
- The selectable ID number is between 1 and 3. You can select up to 3 ID.

Dynamic DNS function setting

msh> dns "interface_name" ddns {on|off}

- You can set the dynamic DNS function "active" or "inactive".
- {on} means "active" and {off} means "inactive".
- wlan can be specified only when the IEEE 802.11 interface is installed.

Interface name	Interface configured
ether	Ethernet interface
wlan	IEEE 802.11 interface

Specifying the record overlap operation

msh> dns overlap {update|add}

- You can specify operations performed when records overlap.
- update: To delete old records and register new records.

- add: To add new records and store the old records.
- When CNAME overlaps, it is always changed, irrespective of settings.

CNAME registration

msh> dns cname {on|off}

- You can specify whether to register CNAME.
- {on} means "active" and {off} means "inactive".
- The CNAME registered is the default name beginning with rnp. CNAME cannot be changed.

A records registration

msh> dns arecord {dhcp|own}

- dhcp: You can specify the method of registering an A record when the dynamic DNS function is enabled and DHCP is used.
- own: To register an A record using the printer as the DNS client.

The DNS server address and the domain name already designated are used for the registration.

Record updating interval settings

msh> dns interval [1-255]

- You can specify the interval after which records are updated when using the dynamic DNS function.
- The updating interval is specified hourly. It can be entered between 1 and 255 hours.
- The default is 24 hours.

resolv.conf display

msh> dns resolv

Specifying the protocol when asking names during dual stacking

msh> dns resolv protocol {ipv4|ipv6}

• Appears during dual stacking only.

domainname

Use the "domainname" command to display or configure the domain name settings.

You can configure the Ethernet interface or IEEE 802.11 interface.

View settings

The following command displays the current domain name:

msh> domainname

Interface domain configuration

msh> domainname "interface_name"

Setting the Domain Name

msh> domainname "interface_name" name "domain name"

- A domain name can be entered using up to 63 alphanumeric characters.
- The Ethernet interface and IEEE 802.11 interface will have the same domain name.
- wlan can be specified only when the IEEE 802.11 interface is installed.

Interface	Interface set
ether	Ethernet interface
wlan	IEEE 802.11 interface

Deleting the Domain Name

msh> domainname "interface_name" clear name

etherauth

Use the "Ethernet" command to display or modify the authentication related parameters for Ethernet.

View settings

msh> etherauth

802.1x Configuration

msh> etherauth 8021x {on|off}

• {on} means "active" and {off} means "inactive".

etherconfig

Use the "etherconfig" command to view and configure the Ethernet parameters.

View settings

msh> etherconfig

Specify Ethernet Speed

msh> etherconfig speed {auto|10f|10h|100f|100h}

- auto = Auto Select
- 10f = 10 Mbps Full Duplex
- 10h = 10 Mbps Half Duplex
- 100f = 100 Mbps Full Duplex
- 100h = 100 Mbps Half Duplex

The default is "auto".

help

Use the "help" command to display the available command list and the procedures for using those commands.

Command list display

msh> help

Display of procedure for using commands

msh> help "command_name"

hostname

Use the "hostname" command to change the printer name.

View settings

msh> hostname

IPv4 Configuration

msh> hostname "interface_name" "printer_name"

- Enter the printer name using up to 63 alphanumeric characters.
- You cannot use a printer name beginning "RNP" (in either upper or lower case).
- The Ethernet interface and IEEE 802.11 interface will have the same printer name.
- wlan can be specified only when the IEEE 802.11 interface is installed.
- If you do not specify an interface, the Ethernet interface is selected automatically.

Interface name	Interface configured
ether	Ethernet interface
wlan	IEEE 802.11 interface

Initializing the printer name for each interface

msh> hostname "interface_name" clear name

ifconfig

Use the "ifconfig" command to view and configure TCP/IP (IP address, subnet mask, broadcast address, default gateway address) for the printer.

View settings

msh> ifconfig

IPv4 configuration

msh> ifconfig "interface_name" "parameter" "address"

- If you did not enter an interface name, it is automatically set to the Ethernet interface.
- wlan can be specified only when the IEEE 802.11 interface is installed.

Interface name	Interface configured
ether	Ethernet Interface
wlan	IEEE 802.11 Interface

The following explains how to configure an IPv4 address 192.168.15.16 on Ethernet interface.

msh> ifconfig ether 192.168.15.16

IPv6 configuration

msh> ifconfig ether inet6 "interface_name" "printer_name"

The following explains how to configure an IPv6 address to 2001:DB8::100 with prefix length 64 on the Ethernet interface.

msh> ifconfig ether inet6 2001:DB8::100 64

Netmask configuration

msh> ifconfig "interface name" netmask "address"

The following explains how to configure a subnet mask 255.255.255.0 on Ethernet interface.

msh> ifconfig ether netmask 255.255.255.0

Broadcast address configuration

msh> ifconfig "interface_name" broadcast "address"

Changing the interface

msh> ifconfig "interface" up

 When using the optional IEEE 802.11 interface unit, you can specify either Ethernet or IEEE 802.11 interface.



- To get the above addresses, contact your network administrator.
- Use the default configuration if you cannot obtain setting addresses.
- The IP address, subnet mask and broadcast address are the same as that for the Ethernet interface and IEEE 802.11 interface.

- TCP/IP configuration is the same for both Ethernet and IEEE 802.11 interface. If interfaces are changed, the new interface inherits the configuration.
- Use "0x" as the initial two letters of a hexadecimal address.

info

Use the "info" command to display printer information such as paper tray, output tray, and printer language.

Printer information display

msh> info

Reference

• p.233 "Getting Printer Information over the Network"

ipp

Use the "ipp" command to view and configure IPP settings.

Viewing settings

The following command displays the current IPP settings:

msh> ipp

IPP timeout configuration

Specify how many seconds the computer waits before canceling an interrupted print job. The time can be entered between 30 to 65535 seconds.

```
msh> ipp timeout [30-65535]
```

IPP user authorization configuration

Use IPP user authorization to restrict users to print with IPP. The default is "off".

msh> ipp auth {basic|digest|off}

- User authorization settings are "basic" and "digest".
- If user authorization is specified, register a user name. You can register up to 10 users.

IPP user name configuration

Configure IPP users according to the following messages:

msh> ipp user

The following message appears:

msh> Input user number (1 to 10):

Enter the number, user name, and password.

msh> IPP user name:user1

5

msh> IPP :*****

After configuring the settings, the following message appears:

User configuration changed.

ipsec

Use the "ipsec" command to view and configure IPsec settings.

Viewing settings

The following command displays the current IPsec settings:

msh> ipsec



• For details about displayed contents, see Security Reference.

ipv6

Use the "ipv6" command to display and configure IPv6 settings.

View Setting

msh> ipv6

IPv6 stateless address

msh> ipv6 stateless {on|off}

If "on" is selected, IPv6 requests information required for maintaining stateful connection to the router for as long as the printer power is turned on. This setting allows information from the router to be obtained constantly, and periodically refreshes the effective period of the stateless address.

logout

Use the "logout" command to save the changes and quit telnet.

Quit telnet

msh> logout

A confirmation message appears.

{yes|no|return}

Enter [yes], [no] or [return] by typing the word, and then press the [Enter] key.

To save the changes and quit telnet, enter [yes].

To discard the changes and quit telnet, enter [no].

To continue making changes, enter [return].

lpr

Use the "lpr" command to view and configure LPR settings.

View Setting

msh> lpr

Checking host name when deleting the job

msh> lpr chkhost {on|off}

• The default is "on".

If "on" is selected, you can delete print jobs only from the IP address of the host that sent the print job. If LPR is disabled, you can also delete print jobs sent from IP addresses other than that of the host.

Printer Error Detection Function

lpr prnerrchk {on|off}

The default is "off".

If you set this to "on", the printer stops receiving data and will wait until the error is resolved before continuing processing a job.

netware

Use the "netware" command to view and configure the NetWare settings such as the print server name or file server name.

NetWare Printer Server Names

msh> netware pnamecharacter string

• Enter the NetWare print server name using up to 47 characters.

NetWare File Server Names

msh> netware fname character string

• Enter the NetWare file server name using up to 47 characters.

Encap type

msh> netware encap {802.3|802.2|snap|ethernet2|auto}

Remote Printer Number

msh> netware rnum [0-254]

• The default is 0.

Timeout

msh> netware timeout [3-255]

5

• The default is 15.

Printer server mode

msh> netware mode pserver
msh> netware mode ps

Remote printer mode

msh> netware mode rprinter
msh> netware mode rp

NDS context name

msh> netware context "character string"

SAP interval

msh> netware "sap_interval [0-3600]"

It can be entered between 0 and 3600 seconds.

Setting login mode for file server

msh> netware login server

Setting login mode for NDS tree

msh> netware login tree

Setting login mode for NDS tree name

msh> netware tree "NDS tree name"

File transfer protocol

msh> netware trans {ipv4pri|ipxpri|ipv4|ipx}

• If you do not specify the protocol, the current setting is displayed.

Protocol	Set Protocol
ipv4pri	IPv4+IPX (IPv4)
ipxpri	IPv4+IPX (IPX)
ipv4	IPv4
ірх	IPX

passwd

Use the "passwd" command to change the remote maintenance password.

Changing the

msh> passwd

- Enter the current password.
- Enter the new password.
- Re-enter the new password to confirm it.

Changing the password of the administrators using the Supervisor

msh> passwd {Administrator ID}

- Enter the new password.
- Re-enter the new password to confirm it.



- Be sure not to forget or lose the password.
- The password can be entered using up to 32 alphanumeric characters. Characters are case-sensitive.
 For example, "R" is not the same as "r".

pathmtu

Use the "pathmtu" command to display and configure the PathMTU Discovery service function.

View settings

msh> pathmtu

Configuration

msh> pathmtu {on|off}

- The default is "on".
- If the MTU size of the sent data is larger than the router's MTU, the router will declare it
 impassable, and communication will fail. If this happens, selecting the "pathmtu" to "on" optimizes
 the MTU size and prevents data output failure.
- Depending on the environment, information might not be obtained from the router, and communication will fail. If this happens, select the "pathmtu" to "off".

prnlog

Use the "prnlog" command to obtain printer log information.

Print logs display

msh> prnlog

• Display previous print jobs.

msh> prnlog "ID Number"

 Specify the ID number of the displayed print log information to display additional details about a print job.

Reference

• p.253 "Understanding the Displayed Information"

route

Use the "route" command to view and control the routing table.

Specified route information display

msh> route get "destination"

• Specify the IPv4 address to destination.

"0.0.0.0" cannot be specified as destination address.

Enabling/disabling specified IPv4 destination

msh> route active {host|net} "destination" {on|off}

• If you do not specify {host | net}, the host setting is automatically selected.

Adding IPv4 Routing Table

msh> route add {host|net} "destination" "gateway"

- Adds a host or network route to "destination", and a gateway address to "gateway" in the table.
- Specify the IPv4 address to destination and gateway.
- If you do not specify {host | net}, the host setting is selected automatically.
- You cannot specify"0.0.0.0" as the destination address.

Setting the Default IPv4 Gateway

msh> route add default "gateway"

Deleting specified IPv4 destination from Routing Table

msh> route delete {host|net} "destination"

- If you do not specify {host | net}, the host setting is automatically selected.
- IPv4 address of destination can be specified.

Setting IPv6 Default Gateway

msh> route add6 default gateway

Adding a specified IPv6 destination to Routing Table

msh> route add6 "destination" "prefixlen [1-128]" "gateway"

- Specify the IPv6 address to destination and gateway.
- If the prefix of the address is between 1 and 127, the network is selected. If the prefix of the address is 128, the host is selected.
- You cannot register a record that has the same destination and prefix as a registered record.

You cannot register a record that uses "0000:0000:0000:0000:0000:0000:0000" as
its destination.

Deleting a specified IPv6 destination from Routing Table

msh> route delete6 "destination" "prefixlen"

• Specify the IPv6 address to destination and gateway.

Display information about a specified IPv6 route information

msh> route get6 "destination"

• Specify the IPv6 address to destination and gateway.

Enabling/disabling a specified IPv6 destination

msh> route active6 "destination" "prefixlen [1-128]" {on|off}

Route initialization

msh> route flush



- The maximum number of IPv4 routing tables is 16.
- The maximum number of IPv6 routing tables is 2.
- Set a gateway address when communicating with devices on an external network.
- The same gateway address is shared by all interfaces.
- "Prefixlen" is a number between 1 and 128.

rhpp

Use the "rhpp" command to view and configure RHPP settings.

View settings

msh> rhpp

Changing rhpp port number

msh> rhpp [1024-65535]

• The default is 59100.

Setting timeout

msh> rhpp timeout [30-65535]

• The default is 300 seconds.



• "RHPP" is an abbreviation of "Reliable Host Printing Protocol", which is a manufacturer-original printing protocol.

set

Use the "set" command to set the protocol information display "active" or "inactive".

View settings

The following command displays protocol information (active/inactive).

```
msh> set ipv4
msh> set ipv6
msh> set ipsec
msh> set appletalk
msh> set netware
msh> set smb
msh> set protocol
```

• When protocol is specified, information about TCP/IP, AppleTalk, NetWare and SMB appears.

```
msh> set lpr
msh> set 1pr6
msh> set ftp
msh> set ftp6
msh> set rsh
msh> set rsh6
msh> set diprint
msh> set diprint6
msh> set web
msh> set snmp
msh> set ssl
msh> set ss16
msh> set nrs
msh> set rfu
msh> set rfu6
msh> set ipp
msh> set ipp6
msh> set http
msh> set http6
```

msh> set bonjour

5

```
msh> set bonjour6
msh> set nbt
msh> set ssdp
msh> set ssh
msh> set sftp
msh> set sftp6
msh> set wsdev
msh> set wsdev6
msh> set wsprn
msh> set wsscn
msh> set rhpp
msh> set rhpp6
```

Configuration

• Enter "up" to enable protocol, and enter "down" to disable protocol.

You can set the protocol to "active" or "inactive".

```
msh> set ipv4 {up|down}
```

- If you disable IPv4, you cannot use remote access after logging off. If you did this by mistake, you can use the control panel to enable remote access via IPv4.
- Disabling IPv4 also disables lpr, ftp, rsh, diprint, web, snmp, ssl, ipp, http, bonjour, wsdev, and sftp.

```
msh> set ipv6 {up|down}
```

- If you disable IPv6, you cannot use remote access after logging off. If you did this by mistake, you can use the control panel to enable remote access via IPv6.
- Disabling IPvó also disables lpró, ftpó, rshó, diprintó, ssló, ippó, httpó, bonjouró, wsdevó, and sftpó.

```
msh> set ipsec {up|down}
msh> set appletalk {up|down}
msh> set netware {up|down}
msh> set smb {up|down}
msh> set lpr {up|down}
msh> set lpr {up|down}
msh> set ftp {up|down}
msh> set ftp {up|down}
msh> set ftp {up|down}
msh> set ftp6 {up|down}
msh> set rsh {up|down}
```

```
5
```

```
msh> set rsh6 {up|down}
msh> set diprint {up|down}
msh> set diprint6 {up|down}
msh> set web {up|down}
msh> set snmp {up|down}
msh> set ssl {up|down}
msh> set ss16 {up|down}

    If Secured Sockets Layer (SSL, an encryption protocol) function is not available for the printer,

    you cannot use the function by enabling it.
msh> set nrs {up|down}
msh> set rfu {up|down}
msh> set rfu6 {up|down}
msh> set ipp {up|down}
msh> set ipp6 {up|down}
msh> set http {up|down}
msh> set http6 {up|down}
msh> set bonjour {up|down}
msh> set bonjour6 {up|down}
msh> set ssh {up|down}
msh> set ssdp {up|down}
msh> set nbt {up|down}
msh> set sftp {up|down}
msh> set sftp6 {up|down}
msh> set wsdev {up|down}
msh> set wsdev6 {up|down}
  • If "wsdev" and "wsdev6" are enabled simultaneously, both appear as "up" on the protocol
    information display, but both use IPv4 for WSD (Device), WSD (Printer) and WSD (Scanner).
msh> set wsprn {up|down}
msh> set wsscn {up|down}
msh> set rhpp {up|down}
```

msh> set rhpp6 {up|down}

5

show

Use the "show" command to display network interface board configuration settings.

View settings

msh> show

• If "-p" is added, you can view settings one by one.

Reference

• p.253 "Understanding the Displayed Information"

slp

Use the "slp" command to view and configure SLP settings.

msh> slp ttl "ttl_val [1-255]"

- You can search the NetWare server using SLP in the PureIP environment of NetWare 5/5.1. Using the "slp" command, you can configure the value of TTL which can be used by SLP multicast packet.
- The default value of TTL is 1. A search is executed only within a local segment. If the router does not support multicast, the settings are not available even if the TTL value is increased.
- The acceptable TTL value is between 1 and 255.

smb

Use the "smb" command to configure or delete the computer or workgroup name for SMB.

Computer name settings

msh> smb comp "computer name"

- Set computer name using up to 15 characters.
- Names beginning with "RNP" or "rnp" cannot be entered.

Working group name settings

msh> smb group "work group name"

• Set workgroup name using up to 15 characters.

Comment settings

msh> smb comment "comment"

• Set comment using up to 31 characters.

Notify print job completion

msh> smb notif {on|off}

• To notify print job completion, specify "on". Otherwise, specify "off".

Deleting computer name

msh> smb clear comp

Deleting group name

msh> smb clear group

Deleting comment

msh> smb clear comment

View protocol

msh> smb protocol

snmp

Use the "snmp" command to display and edit SNMP configuration settings such as the community name.

View settings

msh> snmp

• Default access settings 1 is as follows:

Community name:public

IPv4 address:0.0.0.0

IPv6 address:::

IPX address:00000000:000000000000

Access type:read-only

Effective Protocol: IPv4/IPv6/IPX

• Default access settings 2 is as follows:

Community name:admin

IPv4 address:0.0.0.0

IPv6 address:::

IPX address:00000000:000000000000

Access type:read-write

Effective Protocol: IPv4/IPv6/IPX

- If "-p" is added, you can view settings one by one.
- To display the current community, specify its registration number.

Display

msh> snmp ?

Community name configuration

msh> snmp "number" name "community_name"

- You can configure ten SNMP access settings numbered 1-10.
- The printer cannot be accessed from SmartDeviceMonitor for Admin or SmartDeviceMonitor for Client if "public" is not registered in numbers 1-10. When changing the community name, use SmartDeviceMonitor for Admin and SNMP Setup Tool to correspond with printer settings.
- The community name can be entered using up to 15 characters.

Deleting community name

msh> snmp "number" clear name

Access type configuration

msh> snmp "number" type "access_type"

Access type	Type of access permission
no	not accessible
read	read only
write	read and write
trap	user is notified of trapmessages

Protocol configuration

Use the following command to set protocols "active" or "inactive": If you set a protocol "inactive", all access settings for that protocol are disabled.

msh> snmp {ipv4|ipv6|ipx} {on|off}

- Specify "ipv4" for IPv4, "ipv6" for IPv6, or "ipx" for IPX/SPX.
- {on} means "active" and {off} means "inactive".
- All protocols cannot be turned off concurrently.

Configuration of protocol for each registration number

msh> snmp "number" active {ipv4|ipv6|ipx} {on|off}

• To change the protocol of access settings, use the following command. However, if you have disabled a protocol with the above command, activating it here has no effect.

Access configuration

msh> snmp "number" {ipv4|ipv6|ipx} "address"

• You can configure a host address according to the protocol used.

- The network interface board accepts requests only from hosts that have IPv4, IPv6, and IPX
 addresses with access types of "read-only" or "read-write". Enter "0" to have network interface
 board accept requests from any host without requiring a specific type of access.
- Enter a host address to deliver "trap" access type information to.
- To specify IPv4 or IPv6, enter "ipv4" or "ipv6" followed by a space, and then the IPv4 or IPv6
 address.
- To specify IPX/SPX, enter "ipx" followed by a space, the IPX address followed by a decimal, and then the MAC address of the network interface board.

sysLocation configuration

msh> snmp location

Deleting sysLocation

msh> snmp clear location

sysContact setting

msh> snmp contact

Deleting sysContact

msh> snmp clear contact

SNMP v1v2 function configuration

msh> snmp v1v2 {on|off}

• Specify "on" to enable, and "off" to disable.

SNMP v3 function configuration

msh> snmp v3 {on|off}

• Specify "on" to enable, and "off" to disable.

SNMP TRAP configuration

 $msh > snmp trap\{v1|v2|v3\} \{on|off\}$

• Specify "on" to enable, and "off" to disable.

Remote Configuration Authorization configuration

msh> snmp remote {on|off}

Specify "on" to enable, and "off" to disable the SNMP v1v2 setting.

SNMP v3 TRAP configuration display

msh> snmp v3trap
msh> snmp v3trap [1-5]

• If a number from 1 to 5 is entered, settings are displayed for that number only.

Configuring a sending address for SNMP v3 TRAP

msh> snmp v3trap [1-5] {ipv4|ipv6|ipx} "address"

Configuring a sending protocol for SNMP v3 TRAP

msh> snmp v3trap [1-5] active {ipv4|ipv6|ipx} {on|off}

Configuring an user account for SNMP v3 TRAP

msh> snmp v3trap [1-5] account "account_name"

• Enter an account name using up to 32 alphanumeric characters.

Deleting a SNMP v3 TRAP user account

msh> snmp v3trap [1-5] clear account

Configuring a SNMP v3 encryption algorithm

msh> snmp v3auth {md5|sha1}

Configuring SNMP v3 encryption

msh> snmp v3priv {auto|on}

- Set "auto" for automatic encryption configuration.
- If you select "on", plain-text communication becomes impossible only encrypted communication is possible.



• "Encrypted communication" means an encrypted password is set on the machine.

sntp

The printer clock can be synchronized with a NTP server clock using Simple Network Time Protocol (SNTP). Use the "sntp" command to change SNTP settings.

View settings

msh> sntp

NTP IPv4 server address configuration

You can specify the IPv4 address of the NTP server.

msh> sntp server "IPv4_address"

NTP hostname configuration

You can specify the hostname of the NTP server.

msh> sntp server "hostname"

Deleting NTP server configuration

msh> sntp server clear

Interval configuration

msh> sntp interval "polling_time"

- You can specify the interval at which the printer synchronizes with the operator-specified NTP server. The default is 60 minutes.
- The interval can be entered from 0, or between 15 and 10,080 minutes.
- If you set 0, the printer synchronizes with the NTP server only when you turn the printer on. After that, the printer does not synchronize with the NTP server.

Time-zone configuration

```
msh> sntp timezone "±hour_time"
```

 You can specify the time difference between the printer clock and NTP server clock. The values are between -12:00 and +13:00.



• You can only select either the address or host name for the ntp server.

spoolsw

Use the "spoolsw" command to view and configure Job Spool settings.

You can only specify diprint, trap, lpr, ipp, ftp, sftp, wsd (printer), and smb (TCP/IP) protocol.

 The "spoolsw" command for configuring Job Spool settings is available only when the optional hard disk is installed.

View settings

The Job Spool setting appears.

msh> spoolsw

Job Spool setting

```
msh> spoolsw spool {on|off}
```

• Specify "on" to enable Job Spool, or "off" to disable it.

Resetting Job spool setting

```
msh> spoolsw clear job {on|off}
```

When the printer power is cut during job spooling, this determines whether to reprint the spooled
job.

Protocol configuration

```
msh> spoolsw diprint {on|off}
msh> spoolsw lpr {on|off}
msh> spoolsw ipp {on|off}
msh> spoolsw smb {on|off}
msh> spoolsw ftp {on|off}
msh> spoolsw ftp {on|off}
```

5

msh> spoolsw wsprn {on|off}

ssdp

Use the "ssdp" command to view and configure SSDP settings.

View settings

msh> ssdp

Setting effective time

msh> ssdp profile [1801-86400] The default is 10800 seconds.

Advertise packet TTL settings

msh> ssdp ttl [1-255]

The default is 4.

ssh

Use the "ssh" command to view and configure SSH settings.

View settings

msh> ssh

Data compression communication settings

msh> ssh compression {on|off}
The default is "on".

SSH/SFTP communication port setting

msh> ssh port [22, 1024-65535]

The default is 22.

SSH/SFTP communication timeout setting

msh> ssh timeout [0-65535] The default is 300.

SSH/SFTP communication login timeout setting

msh> ssh logintimeout [0-65535] The default is 300.

Setting an open key for SSH/SFTP

msh> ssh genkey {512|768|1024} "character string" Create an open key for SSH/SFTP communication.

Usable characters are ASCII 0x20-0x7e (32 bytes) other than "0".

The default key length is 1024, and the character string is blank.

If you do not specify this parameter, an open key with the default value will be created.

Deleting open key for ssh/sftp communication

msh> ssh delkey



- If you do not specify a character string, current setting is displayed.
- ssh can be used only with sftp.

status

Use the "status" command to display the printer status.

view messages

msh> status

■ Reference

p.233 "Getting Printer Information over the Network"

syslog

Use the "syslog" command to display the information stored in the printer's system log.

View message

msh> syslog

Reference

• p.266 "Message List"

upnp

Use the "upnp" command to display and configure the universal plug and play.

Public URL display

msh> upnp url

Public URL configuration

msh> upnp url "string"

• Enter the URL string in the character string.

5

web

Use the "web" command to display and configure parameters on Web Image Monitor.

View Settings

msh> web

URL Configuration

You can set URLs linked by clicking [URL] on Web Image Monitor.

msh> web "ID" url http:// "The URL or IP address you want to register"/

Specify "1" or "2" for ID as the number corresponding to the URL. Up to two URLs can be registered and specified.

Resetting URLs registered as link destinations

```
msh> web "ID" clear url
```

Specify "1" or "2" for ID as the corresponding number to the URL.

Link name configuration

You can enter the name for URL that appears on Web Image Monitor.

msh> web "ID" name "Name you want to display"

Specify "1" or "2" for ID the corresponding number to the link name.

Resetting URL names registered as link destinations

```
msh> web "ID" clear name
```

Specify "1" or "2" for ID as the number corresponding to the link name.

Help URL Configuration

You can set URLs linked by clicking "?" on Web Image Monitor.

msh> web help http://"Help URL or IP address"/help/

Resetting Help URL

msh> web clear help

wiconfig

Use the "wiconfig" command to make settings for IEEE 802.11.

View settings

msh> wiconfig

View IEEE 802.11 settings

msh> wiconfig cardinfo

If IEEE 802.11 is not working correctly, its information is not displayed.

Configuration

msh> wiconfig mode {ap|802.11adhoc}

- You can set the infrastructure mode (ap) or the 802.11 Ad hoc mode (802.11 adhoc).
- The default is the infrastructure mode.

msh> wiconfig ssid "ID value"

- You can specify a SSID in infrastructure mode. The characters you can enter in the SSID string are ASCII 0x20-0x7e (32 bytes). If you do not specify a character string, the machine will connect to the nearest access point.
- The default SSID is blank.

msh> wiconfig channel frequency "channel no."

- In 802.11 ad hoc mode, you can select a channel between 1 and 14, or 36, 40, 44, or 48.
- Be sure to set the same channel for all ports that will transmit and receive data.
- The default is "11".

msh> wiconfig key "key value" val [1|2|3|4]

- You can specify the WEP key when entering in hexadecimal.
- With a 64-bit WEP, you can use 10 digit hexadecimals. With a 128-bit WEP, you can use 26 digit hexadecimals.
- Up to four WEP keys can be registered. Specify the number to be registered with "val".
- When a WEP is specified by key, the WEP specified by key phrase is overwritten.
- To use this function, set the same key number and WEP key for all ports that transmit data to each
 other. Put "Ox"on the front of WEP key.
- You can omit the numbers with "val". The key number is set to 1 when making these omissions. The default is blank.

msh> wiconfig keyphrase "phrase" val [1|2|3|4]

- · You can specify the WEP key when entering in ASCII.
- With a 64-bit WEP, you can use 5 digit hexadecimals. With a 128-bit WEP, you can use 13 digit hexadecimals.
- Up to four WEP keys can be registered. Specify the number to be registered with "val".
- When a WEP is specified by key phrase, the WEP specified by key is overwritten.
- To use this function, set the same key number and WEP key for all ports that transmit data to each other.
- You can omit the numbers with "val". The key number is set to 1 when making these omissions.
 The default is blank.

msh> wiconfig encval [1|2|3|4]

You can specify which of the four WEP keys is used for packet encoding. "1" is set if a number
is not specified.

msh> wiconfig wepauth {open|shared}

- You can set an authorization mode when using WEP. The specified value and authorized mode are as follows:
- open: open system authorized (default)
- shared: shared key authorized rate

msh> wiconfig security {none|wep|wpa}

- You can specify the security mode.
- none: No encryption (default)
- wep: WEP encryption
- wpa: WPA encryption

msh> wiconfig wpaenc {tkip|ccmp}

- You can specify WPA encryption key when using WPA encryption.
- tkip: TKIP
- ccmp: CCMP (AES) (default)

msh> wiconfig wpaauth {wpapsk|wpa|wpa2psk|wpa2}

- You can specify the WPA authentication mode when using WPA encryption.
- wpapsk: WPA-PSK authentication (default)
- wpa: WPA authentication
- wpa2psk: WPA2-PSK authentication
- wpa2: WPA2 authentication

msh> wiconfig psk "character string"

- You can specify the Pre-Shared key.
- Usable characters: ASCII 0x20-0x7e (8 to 63 bytes).
- The default is blank.

msh> wiconfig eap {tls|ttls|leap|peap} {chap|mschap|mschapv2|pap|md5|tls}

- You can specify the EAP authentication type.
- tls: EAP-TLS (default)
- ttls: EAP-TTLS
- leap: LEAP
- peap: PEAP
- chap, mschap, mschapv2, pap, md5, or tls are settings for the phase 2 method, and must be set when using EAP-TTLS or PEAP.

- Do not make these settings when using other EAP authentication types.
- If you select EAP-TTLS, you can select chap, mschap, mschapv2, pap, or md5.
- If you select PEAP, you can select mschapv2 or tls.

msh> wiconfig username "character string"

- You can specify the login user name for the Radius server.
- Usable characters: ASCII 0x20-0x7e (31 bytes).
- The default is blank.

msh> wiconfig username2 "character string"

- You can specify the phase 2 username for EAP-TTLS/PEAP phase 2 authentication.
- Usable characters: ASCII 0x20-0x7e (31 bytes).
- The default is blank.

msh> wiconfig domain "character string"

- You can specify the login domain name for the Radius server.
- The characters you can enter are ASCII 0x20-0x7e (31 bytes), but not "@" or "\".
- The default is blank.

msh> wiconfig password "character string"

- You can specify the login for the Radius server.
- Usable characters: ASCII 0x20-0x7e (128 bytes). The default is blank.

msh> wiconfig srvcert {on|off}

• You can set the server certificate. The default is "off".

msh> wiconfig imca {on|off}

You can enable or disable the certificate when the intermediate certificate authority is present.
 The default is "off".

msh> wiconfig srvid "character string"

- You can set the server ID and subdomain of the certificate server.
- Usable characters: ASCII 0x20-0x7e (128 bytes). The default is blank.

msh> wiconfig Connectinfo

• Obtains connection information.

msh> wiconfig clear {a each command|all}

- Returns the selected setting to its default value.
- If you specify "all", all settings will be restored to their default values.

msh> wiconfig miccheck {on|off}

• You can enable or disable the MIC check function.

- The default setting is "On" (enabled).
- If you specify "Off", you cannot perform MIC checks. We recommend you specify "On" for the MIC check function when using this machine.

wins

Use the "wins" command to configure WINS server settings.

Viewing settings

msh> wins

• If the IPv4 address obtained from DHCP differs from the WINS IPv4 address, the DHCP address is the valid address.

Configuration

msh> wins "interface_name" {on|off}

- {on} means "active" and {off} means "inactive".
- Be sure to specify the interface.
- wlan can be specified only when the IEEE 802.11 interface is installed.

Interface name	Interface configured
ether	Ethernet interface
wlan	IEEE 802.11 interface

Address configuration

Use the following command to configure a WINS server IP address:

wins "interface_name" {primary|secondary} "IP address"

- Use the "primary" command to configure a primary WINS server IP address.
- Use the "secondary" command to configure a secondary WINS server IP address.
- Do not use "255.255.255.255" as the IP address.

NBT (NetBIOS over TCP/IP) Scope ID Selection

You can specify the NBT scope ID.

msh> wins "interface_name" scope "scope ID"

- The scope ID can be entered using up to 31 alphanumeric characters.
- Be sure to specify the interface.
- wlan can be specified only when the IEEE 802.11 interface is installed.

Interface name	Interface configured
ether	Ethernet interface
wlan	IEEE 802.11 interface

wsmfp

Use the "wsmfp" command to view and configure WSD (Device), WSD (Printer) and WSD (Scanner) settings.

View settings

msh> wsmfp

Comment settings

msh> wsmfp comments "comment"

• If you do not specify a comment, current setting is displayed.

Location configuration

msh> wsmfp location "location"

• If you do not specify a comment, current setting is displayed.

Presentation URL configuration

msh> wsmfp url "URL"

• Enter the URL string in the "URL".

WSD (Device) TCP port configuration

msh> wsmfp devport "port_number"

• The Default is 53000.

WSD (Printer) TCP port configuration

msh> wsmfp prnport "port_number"

• The Default is 53001.

WSD (Printer) Timeout configuration

msh> wsmfp prntimeout [30-65535]

• The default is 900 seconds.

WSD (Scanner) TCP port configuration

msh> wsmfp scnport "port_number"

• The Default is 53002.

Comment initialization

msh> wsmfp clear comments

5

Location initialization

msh> wsmfp clear location

Presentation URL initialization

msh> wsmfp clear url

Using the SNMP manager, you can get information about the machine.

The SNMP agent operating on UDP and IPX is incorporated into the built-in Ethernet board and optional IEEE 802.11 interface unit of this machine.

This machine also supports SNMPv3, which increases user authentication, data encryption, and access control security.

To encrypt communication by SNMPv3, you must specify the machine's encrypted password.

Mportant (

 If you changed the machine's community name, change the configuration of the connected computer accordingly, using SNMP Setup Tool. For details, see SNMP Setup Tool Help.

The default community names are [public] and [admin]. You can get MIB information using these community names.

Start SNMP Setup Tool

- Windows 2000:
 - 1. Click the [Start] button.
 - 2. Point to [SmartDeviceMonitor for Admin] on the [Programs] menu.
 - 3. Click [SNMP Setup Tool].
- Windows XP/Vista, Windows Server 2003/2003 R2/2008
 - 1. Click the [Start] button.
 - 2. Point to [SmartDeviceMonitor for Admin] on the [All Programs] menu.
 - 3. Click [SNMP Setup Tool].

5

5

Getting Printer Information over the Network

This section explains details of each item displayed in the printer status and information.

Current Printer Status

This section explains how you can check the machine's status and the items displayed. Depending on the options installed on the machine, some items might not be displayed.

- UNIX: Use the "lpq" command and "rsh", "rcp", "ftp", and "sftp" parameters.
- mshell: Use the "status" command.

Access Restricted

The job was canceled because user have no authority.

Access Restricted (Classi-Code)

The job was canceled because no classification code is specified.

Add staples (Booklet: Back)

The staple of booklet finisher (back) is exhausted.

Add staples (Booklet: Both)

The staple of booklet finisher is exhausted.

Add staples (Booklet: Front)

The staple of booklet finisher (front) is exhausted.

Adjusting Bind-glue Temperature

The machine is adjusting the binding-glue temperature.

Adjusting...

The machine is initializing or calibrating.

Call Service Center

There is a malfunction in the machine.

Canceled

The job is reset.

Canceling Job...

The job is being reset.

Cannot Eject Original Through

The original cannot be ejected.

Cannot multi-install: SD Card

The SD card has been configured using another device.

Card/Counter not inserted

The machine is waiting for prepaid card or key.

Coin or amount not inserted

The machine is waiting for coin to be inserted.

Coin/Key Counter not inserted

The machine is waiting for coin or key counter.

Configuring...

Setting is being changed.

Cooling Down Fusing Unit...

The fusing unit is cooling down.

Cover Open: ADF

The document feeder is open.

Cover Open: Binder Interposer

The cover of the Binder Interposer is open.

Cover Open: Binder Interps Cver

The Binder interps cover is open.

Cover Open: Decurler Front Cover

The decurler front cover is open.

Cover Open: Duplex Unit

The cover of the duplex unit is open.

Cover Open: Finisher

The cover of Finisher is open.

Cover Open: Finisher Front

The front cover of Finisher is open.

Cover Open: Front Cover

The front cover is open.

Cover Open: Interposer Base

The cover of the Interposer Base is open.

Cover Open: Interposer Right

The cover of the Interposer Right is open.

Cover Open: LCT Front Cover

The LCT front cover is open.

Cover Open: Perfect Binder Top

The cover of the perfect binder top is open.

Cover Open: PerfectBinder Front

The cover of the perfect binder front is open.

Cover Open: PerfectBinderL Tray

The cover of the perfect binderL tray is open.

Cover Open: PerfectBinderR Tray

The cover of the perfect binderR tray is open.

Cover Open: PerfectBindr Bridge

The cover of the perfect binder bridge is open.

Cover Open: Ring Binder Front

The cover of the ring binder front is open.

Cover Open: Ring Binder Tray

The cover of the ring binder tray is open.

Cover Open: Stacker Front

The cover of the stacker front is open.

Cover Open: Stacker Upper

The cover of the stacker upper is open.

Cover Open: Trimmer Front Cover

The trimmer front cover is open.

Cover Open: Upper Right Cover

The upper right cover is open.

Cover Open: Fold Unit Front Cover

The fold unit front cover is open.

Cover Open: Interposer Lwr Cover

The Interposer Lower cover is open.

Cover Open: Interposer Upr Cover

The Interposer Upper cover is open.

Cover Open: Second Stacker Front

The cover of the second stacker front is open.

Cover Open: Second Stacker Upper

The cover of the second stacker upper is open.

Cover/Tray not Set: 2nd Stacker

The 2nd stacker is not set correctly.

Cover/Tray not Set: Stacker

The stacker is not set correctly.

Current Job Suspended

The current job is suspended.

Data Size Error

The data size error occurred.

Empty: Black Toner

The black toner cartridge is almost empty.

Empty: one of two bottles

The one of two bottles cartridge is almost empty.

Energy Saver Mode

The machine is in Energy Saver Mode.

Envelope Setting Error: None

Printing paper type other than envelope is instructed when B2 lever is down.

Envelope Setting Error: Others

Printing envelope is instructed when B2 lever is down.

Error

An error has occurred.

Error: Address Book

An error has occurred in the data of the address book.

Error: Command Transmission

An error has occurred in the machine.

Error: DIMM Value

A memory error occurred.

Error: Ethernet Board

An Ethernet board error has occurred.

Error: HDD Board

A hard disk drive board error has occurred.

Error: Media Link Board

An error has occurred on the file format converter.

Error: Memory Switch

A memory switch error has occurred.

Error: Optional Font

An error has occurred in the font file of the machine.

Error: Optional RAM

An error has occurred in the optional memory unit.

Error: Parallel I/F Board

An error has occurred in the parallel interface.

Error: PDL

An error has occurred in the page description language.

Error: Rem. Certificate Renewal

An error has occurred in the remote server renewal.

Error: USB Board

An error has occurred in the USB interface board.

Error: USB Interface

An error has occurred in the USB interface.

Error: Wireless Board

An error has occurred in the wireless interface board or IEEE 802.11 interface unit.

Error: Wireless Card

Wireless card is not inserted during start up, or the IEEE 802.11 interface unit or the wireless card is taken out after start up.

Exceed Booklet Stapling Limit

The printing has exceeded the stapling limit of the booklet finisher.

Exceed Stapling Limit

The printing has exceeded the stapling limit.

Full: Comb Hole Punch Receptal

Comb hole punch receptacle is full.

Full: Finisher

Finisher tray is full.

Full: Finisher Booklet Tray

Booklet tray of Finisher is full.

Full: Finisher Shift Tray

Shift tray of finisher is full.

Full: Finisher Shift Tray 1, 2

The shift tray 1 and 2 of finisher are full.

Full: Finisher Upper Tray

Finisher's upper tray is full.

Full: Folding Unit Tray

Folding unit tray is full.

Full: Hole Punch Receptacle

Punch chip receptacle for hole punch is full.

Full: Internal Tray 1

The internal tray is full.

Full: Log Data Capacity

The log data capacity is full.

Full: Perfect Binder Low-L Tray

Perfect binder row-L tray is full.

Full: Ring Binder Tray

Ring binder tray is full.

Full: Second Stacker Tray

Second stacker tray is full.

Full: Stacker tray

Stacker tray is full.

Full: Stacker Upper Tray

Stacker upper tray is full.

Full: Trimmer Waste Paper Box

Trimmer waste paper box is full.

Full: Waste Paper Receptacle

Waste paper receptacle is full.

Full: Waste Staples

Waste staples is full.

Full: Waste Toner Bottle

Waste toner bottle is full.

Full: Waste Toner Bottle 2

The waste toner bottle 2.

Hex Dump Mode

It is a hex dump mode.

Immed. Trans. not connected

It did not connect directly with the other party of the transmission.

Immediate Transmission Failed

An error has occurred while transmitting directly.

In Use: Copier

The copier is being used.

In Use: Finisher

Another function is using finisher.

In Use: Folding Unit

Another function is using folding unit.

In Use: Input Tray

Another function is using the input tray.

In Use: Perfect Binder

Another function is using perfect binder.

In Use: Ring Binder

Another function is using ring binder.

In Use: Stacker

Another function is using stacker.

In Use: Staple Unit

Another function is using the staple unit.

Independent-supplier Toner

Toner that is not recommended is set.

Jobs Suspended

All jobs are suspended.

Key Card not inserted

The machine is waiting for key card to be inserted.

Key Card/Counter not inserted

The machine is waiting for key card or key counter to be inserted.

Key Counter not inserted

The machine is waiting for key counter to be left in it.

Loading Toner...

Toner is being supplied.

Log Data Transfer failed

Log transfer has failed.

Low: Black Toner

The black toner cartridge is not set correctly, or toner is almost running out.

Low: Toner

The black toner cartridge is not set correctly, or toner is almost running out.

Malfunction: Booklet Processor

There is a problem with booklet finisher.

Malfunction: Booklet Stapler

There is a problem with Booklet Stapler.

Malfunction: Duplex Unit

There is a problem with duplex unit.

Malfunction: Ext. Charge Unit

There is a problem with the external charge unit.

Malfunction: Finisher

There is a problem with the finisher.

Malfunction: Finisher Tray

There is a problem with the Folding Unit.

Malfunction: Folding Unit

There is a problem with the Folding Unit.

Malfunction: Interposer

There is a problem with Interposer.

Malfunction: Multi-hole Punch

There is a problem with the Multi-hole Punch.

Malfunction: Output Tray

There is a problem with the output tray.

Malfunction: Perfect Binder

There is a problem with Perfect Binder.

Malfunction: Punch Unit

There is a problem with the punch unit.

Malfunction: Ring Binder

There is a problem with Ring Binder.

Malfunction: Second Stacker

There is a problem with Second Stacker.

Malfunction: Stacker

There is a problem with Stacker.

Malfunction: Staple Unit

There is a problem with the staple unit.

Malfunction: Tray 1

There is a problem with tray 1.

Malfunction: Tray 2

There is a problem with tray 2.

Malfunction: Tray 3

There is a problem with tray 3.

Malfunction: Tray 4

There is a problem with tray 4.

Malfunction: Tray 5

There is a problem with tray 5.

Malfunction: Tray 6

There is a problem with tray 6.

Malfunction: Tray 7

There is a problem with tray 7.

Malfunction: Trimmer

There is a problem with Trimmer.

Malfunction: Lower Paper Tray(s)

There is a problem with Lower Paper Tray(s).

Memory Low: Copy

Memory shortage has occurred while the copy was operating.

Memory Low: Data Storage

Memory shortage has occurred while the document was being accumulated.

Memory Low: Scanning

Memory shortage has occurred while the Scanning was operating.

Miscellaneous Error

Other error has occurred.

Mismatch: Paper Size

Indicated paper tray does not contain paper of selected size.

Mismatch: Paper Size and Type

Indicated paper tray does not contain paper of selected size and type.

Mismatch: Paper Type

Indicated paper tray does not contain paper of selected type.

Multiple Printing Sheet Feed

Multiple printing sheet feed (jam) has occurred. Paper was ejected to the nearest output tray.

Near Replacing: Black PCU

Prepare the new black photoconductor unit.

Near Replacing: Fusing Unit

Prepare the new fusing unit.

Near Replacing: Int. Transfer

Prepare the new Transfer Roller.

Nearly Full: Log Data Capacity

The log is nearing data capacity.

Nearly Full: Waste Toner

Waste toner bottle is nearly full.

Nearly Full: Waste Toner Bottle2

Waste toner bottle 2 is nearly full.

Need more Staples

Stapler has almost run out of staples.

No Paper: Binder Interps L-tray

There is no paper in binder interps L-tray.

No Paper: Binder Interps U-tray

There is no paper in binder interps U-tray.

No Paper: Interposer Lower Tray

There is no paper in interposer rower tray.

No Paper: Interposer Tray

There is no paper in interposer unit.

No Paper: Interposer Upper Tray

There is no paper in interposer upper tray.

No Paper: Selected Tray

There is no paper in specified tray.

No Paper: Tray 1

There is no paper in tray 1.

No Paper: Tray 2

There is no paper in tray 2.

No Paper: Tray 3

There is no paper in tray 3.

No Paper: Tray 4

There is no paper in tray 4.

No Paper: Tray 5

There is no paper in tray 5.

No Paper: Tray 6

There is no paper in tray 6.

No Paper: Tray 7

There is no paper in tray 7.

Not Detected: 2nd Stacker Tray

There is no paper in 2nd stacker tray.

Not Detected: B2 Lever

B2 lever is not correctly set.

Not Detected: Black Toner

Black toner is not correctly set.

Not Detected: Cleaning Unit

Cleaning unit is not correctly set.

Not Detected: Decurler Unit

Decurler unit is not correctly set.

Not Detected: Develop. Unit (K)

The development unit (black) is not correctly set.

Not Detected: Duplex Feed Unit

The duplex unit is not correctly set.

Not Detected: Duplex Unit

The duplex feed unit is not correctly set.

Not Detected: Finisher

The finisher is not correctly set.

Not Detected: Fusing Unit

The fusing unit is not correctly set.

Not Detected: Input Tray

The paper feed tray is not correctly set.

Not Detected: PCU (K)

The photoconductor unit (black) is not correctly set.

Not Detected: Stacker Tray

Stacker tray is not correctly set.

Not Detected: Tab Stock

Tab stock is not correctly set.

Not Detected: Transfer Unit

The transfer unit is not correctly set.

Not Detected: Tray 1

Tray 1 is not correctly set.

Not Detected: Tray 2

Tray 2 is not correctly set.

Not Detected: Tray 3

Tray 3 is not correctly set.

Not Detected: Tray 4

Tray 4 is not correctly set.

Not Detected: Tray 5

Tray 5 is not correctly set.

Not Detected: Tray 6

Tray 6 is not correctly set.

Not Detected: Tray 7

Tray 7 is not correctly set.

Not Detected: WasteToner Bottle

Waste toner bottle is not correctly set.

Not Detected: Z-fold'g Internal

Z-fold'g internal is not correctly set.

Not Detected: Int. Transfer Unit

Int.transfer unit is not correctly set.

Not Reached, Data Deleted

Unreached job is deleted.

Not Reached, Data Stored

Unreached documents are saved.

Not Set Properly: BindRing Comb

The binding ring comb is not correctly set.

Offline

Machine is offline.

Operating Thermo-range Error

The machine is operating outside the permissible temperature range.

Original on Exposure Glass

The original remains on the exposure glass.

Panel Off Mode

The machine is in panel-Off mode.

Panel Off Mode>>Printing ava.

The machine is in control panel-Off mode.

Paper in Duplex Unit

The paper remains in the duplex unit.

Paper in Finisher

The paper remains in finisher.

Paper in Folding Unit

The paper remains in folding unit.

Paper in Second Stacker Tray

The paper remains in second stacker tray.

Paper in Stacker Tray

The paper remains in stacker tray.

Paper in the Folding Unit

The paper remains in the folding unit.

Paper Misfeed: ADF

The paper has jammed in document feeder.

Paper Misfeed: Decurler

The paper has jammed in decurler.

Paper Misfeed: Duplex Unit

The paper has jammed in duplex unit.

Paper Misfeed: Finisher

The paper has jammed in finisher.

Paper Misfeed: Input Tray

The paper has jammed in input tray.

Paper Misfeed: Internal Path

The paper has jammed in internal path.

Paper Misfeed: Interposer

The paper has jammed in interposer.

Paper Misfeed: Perfect Binder

The paper has jammed in perfect binder.

Paper Misfeed: Ring Binder

The paper has jammed in ring binder.

Paper Misfeed: Second Stacker

The paper has jammed in second stacker.

Paper Misfeed: Stacker

The paper has jammed in stacker.

Paper Misfeed: Trimmer

The paper has jammed in trimmer.

Paper Misfeed: Folding unit

The paper has jammed in folding unit.

Paper Misfeed:Booklet Processor

The paper has jammed in booklet processor.

Paper on Finisher Shift Tray 1, 2

The paper remains in finisher shift tray 1 and 2.

Paper on Finisher Shift Tray 2

The paper remains in finisher shift tray 2.

Paper on Perfect Binder L Tray

The paper remains in perfect binder L tray.

Paper on Ring Bind Aligner Tray

The paper remains in ring bind aligner tray.

Perfect Binding in process

Output sheets are perfect bound and delivered automatically to the output tray.

Prepaid Card not inserted

The prepaid card is not inserted, or has insufficient credit.

Print Complete

The print was completed.

Printing...

Printing is in progress.

Processing

Data is being processed.

Proxy Address/Port Incorrect

The proxy address and port setting is incorrect.

Proxy User / Password Incorrect

The proxy user name and password setting is incorrect.

RC Gate Connection Error

Failed connect with RC gate.

Readjusting...

The machine is readjusting itself.

Ready

The machine is ready to print.

Renewing Remote Certificate

The remote certificate is being renewed.

Replace Black PCU

It is time to replace the black photoconductor unit.

Replace Charger Kit

It is time to replace the charger kit.

Replace Cleaning Web

It is time to replace the cleaning web.

Replace Develop. Unit

It is time to replace the development unit.

Replace Develop. Unit (Black)

It is time to replace the development unit (black).

Replace Developer

It is time to replace the development unit.

Replace Developer (Black)

It is time to replace the development unit (black).

Replace Fusing Unit

It is time to replace the fusing unit.

Replace Int. Transfer Unit

It is time to replace the int. transfer unit.

Replace Maintenance Kit

It is time to replace the maintenance kit.

Replace Toner Suction Motor

It is time to replace the toner suction motor.

Replace Transfer Cleaning Unit

It is time to replace the transfer cleaning unit.

Replace Transfer Roller

It is time to replace the transfer roller.

Replenish Binding Glue

The binding glue requires replenishing.

Replenish Binding Ring Combs

Add new binding ring combs.

Reset IPDS fonts

An IPDS font error occurred.

Retarding...

Printing has stopped momentarily to allow printed sheets to dry.

Ring Binder Punch Unit not Set

The ring binder punch unit is not correctly set.

SD Card Authentication failed

SD card authentication failed.

SD Card not inserted

The machine is waiting for SD card.

Skipped due to Error

Skipped the error.

Storage Complete

The storage is complete.

Storage Failed

The storage has failed.

Supplies Order Call failed

The supply order call has failed.

Suspend / Resume Key Error

Finisher stop button was pressed.

Transmission Aborted

The transmission was interrupted.

Transmission Complete

The transmission completion was completed.

Transmission Failed

The transmission has failed.

Tray Error: Chaptering

The paper feed tray specification error has occurred because chaptering as well as the normal paper use the same tray for printing.

Tray Error: Duplex Printing

Selected paper tray cannot be used for duplex printing.

Unit Left Open: ADF

Document feeder is opened.

Waiting for Job Suspension

The machine is waiting for Job Suspension.

Warming Up...

The machine is warming up.



- For details about UNIX commands, see UNIX Supplement.
- Check the error contents that may be printed in the configuration page.

Printer Configuration

You can check the printer configuration using telnet.

This section explains the checking procedure for input/output tray and printer language.

- UNIX: Use the "info" command and "rsh", "rcp", "ftp", and "sftp" parameters.
- mshell: Use the "info" command.

Input Tray

ltem	Description
No.	ID number of the paper tray
Name	Name of the paper tray
Page Size	Size of paper loaded in the paper tray
Status	Current status of the paper tray Normal: Normal NolnputTray: No tray
	PaperEnd: No paper

Output Tray

ltem	Description
No.	ID number of the output tray

ltem	Description
Name	Name of the output tray
Status	Current status of the output tray Normal: Normal PaperExist: Paper exist OverFlow: Paper is full Error: Other errors

Printer Language

ltem	Description
No.	ID number of the printer language used by the printer
Name	Name of the printer language used in the printer
Version	Version of the printer language



• For details about UNIX commands and parameters, see UNIX Supplement.

5

Understanding the Displayed Information

This section explains how to read status information returned by the network interface board.

Print Job Information

Use the following command to display print job information:

- UNIX: Use the "info" command and "rsh", "rcp", "ftp", and "sftp" parameters.
- mshell: Use the "info" command.

Rank

Print job status.

Active

Printing or preparing for printing.

• 1st, 2nd, 3rd, 4th...

Waiting to be transferred to the printer.

Owner

Print request user name.

Job

Print request number.

Files

The name of the document.

Total Size

The size of the data (spooled).

The default is 0 bytes.



• For details about UNIX commands and parameters, see UNIX Supplement.

Print Log Information

This is a record of the most recent jobs printed.

Use the following command to display print log information:

- UNIX: Use the "prnlog" command and "rsh", "rcp", "ftp", and "sftp" parameters.
- telnet: Use the "prnlog" command.

ID

Print request ID.

User

Print request user name.

Page

Number of pages printed

Result

Print Request Result

Communication Result

OK

Print was completed normally. However, the print result may not be as required due to printer problems.

NG

Printing was not completed normally.

Canceled

A "rcp", "rsh", or "lpr" command print request was canceled, possibly due to the printing application. Not applicable to the "ftp" or "rprinter" command.

Time

Time the print requested was received.

Time of print request reception

User ID (when designating Job ID on telnet)

Printer driver-configured User ID.

Appears when the print request ID is specified.

JobName (when designating Job ID on telnet)

Name of the document for printing

Appears when the print request ID is specified.



• For details about UNIX commands and parameters, see UNIX Supplement.

Configuring the Network Interface Board

Use the following command to display network interface board settings:

• telnet: Use the "show" command.

Common

ltem		Description
Mode		
Protocol Up/Down		Protocol Settings
	AppleTalk	
	IPv4	
	IPv6	
	IPsec	
	NetWare	
	SMB	
Device Up/Down		Device Settings
	Parallel	
	USB	
	Bluetooth	
Ethernet interface		
Syslog priority		
NVRAM version		
Device name		
Comment		
Location		
Contact		
Soft switch		

AppleTalk (AppleTalk settings)

ltem	Description
Mode	
Net	

Item	Description
Object	
Туре	
Zone	

TCP/IP (TCP/IP settings)

ltem	Description
Mode (IPv4)	
Mode (IPv6)	
ftp	
lpr	
rsh	
telnet	
diprint	
web	
http	
ftpc	
snmp	
ірр	
autonet	
Bonjour	
ssl	
nrs	
rfu	
nbt	
ssdp	

	Item	Description
	ssh	
	sftp	
	WSD (Device)	
	WSD (Printer)	
	WSD (Scanner)	
	rhpp	
IPv	4	
	DHCP	
	Address	
	Netmask	
	Broadcast	
	Gateway	
IPv6		
	Stateless	
	Manual	
	Gateway	
	DHCPv6-lite	
	DUID	
	DHCPv6 option lifetime	
IPsec		
	Manual Mode	
	Excluded Protocol	
	https	
	dns	
	dhcp	

ltem		Description
	wins	
EncapType		
Host name		
DNS D	Oomain	
Access	s Control	Access Control settings
IPv	<i>v</i> 4	
	Access Entry [X]	X can be set between 1 and 5.
IP	1 6	
	Access Entry [X]	X can be set between 1 and 5.
SNTP Server		Time settings
Time Zone		
SNTP Server polling time		
SYSLOG server		Websys settings
Home page URL1		
Home page link name 1		
Home page URL2		
Home page link name2		
Help page URL		
RHPP F	Port	
RHPP t	imeout	

NetWare

Item	Description
ЕпсарТуре	
RPRINTER number	

Item	Description
Print server name	
File server name	
Context name	
Switch	
Mode	
NDS/Bindery	
Packet negotiation	
Login Mode	
Print job timeout	
Protocol	
SAP interval time	
NDS Tree Name	
Transfer Protocol	

SMB (SMB settings)

	ltem	Description
Sw	itch	
	Mode	
	Direct print	
	Notification	
W	orkgroup name	
Со	mputer name	
Comment		
Share name [1]		
Pro	tocol	

5

Wireless LAN (Wireless LAN settings)

ltem	Description
Host Name	
Communication Mode	
SSID	
Channel	
Security	
WEP Authentication	
WEP Encryption key number	
WEP Encryption keys [X]	X can be set between 1 and 4.
WPA Encryption	
WPA Authentication	
Pre-Shared Key	
User name	
Domain name	
EAP Type	
Password	
Phase 2 user name	
Phase 2 Method TTLS	
Phase 2 Method PEAP	
Server cert.	
Intermediate CA	
Server ID	
Sub domain	
MIC check	

5

DNS (DNS settings)

ltem	Description
IPv4	
Server [X]	X can be set between 1 and 3.
Selected IPv4 DNS Server	
IPvó	
Server [X]	X can be set between 1 and 3.
Selected IPv6 DNS Server	
Resolver Protocol	

Domain Name

ltem	Description
ether	
wlan	

DDNS

ltem	Description
ether	
wlan	

Ethernet

ltem	Description
802.1X Authentication	

WINS (WINS settings)

	ltem	Description
eth	er	
	Primary WINS	

	ltem	Description
	Secondary WINS	
wlo	n	
	Primary WINS	
	Secondary WINS	

Bluetooth (Bluetooth settings)

Item	Description
Bluetooth mode	Bluetooth connection mode

SSDP (SSDP settings)

Item	Description
UUID	
Profile	
TTL	

UPnP (UPnP settings)

ltem	Description
URL	

Bonjour (Bonjour settings)

ltem	Description
Computer Name (cname)	
Local Hostname (ether)	
Local Hostname (wlan)	
Location	
Priority (diprint)	
Priority (lpr)	

ltem	Description
Priority (ipp)	
IP TTL	
LinkLocal Route for Multi I/F	
IPP Port	

SNMP (SNMP settings)

Item	Description
SNMPv1v2	
SNMPv3	
protocol	
v1Trap	
v2Trap	
v3Trap	
SNMPv1v2 Remote Setting	
SNMPv3 Privacy	

Ssh (ssh settings)

ltem	Description
Compression	
Port	
TimeOut	
Login TimeOut	

AuthFree (Authfree settings)

Item	Description
IPv4	

	Item	Description
	AuthFree Entry [X]	X can be set between 1 and 5.
ΙΡν	6	
	AuthFree Entry [X]	X can be set between 1 and 5
Pai	rallel	
US	В	

LPR

ltem	Description
lprm check host	
lpr prnerr chk	

Certificate

ltem	Description
Verification	

WS-MFP

Item	Description
Network Device Name	
Comments	
Location	
Presentation URL	
WSD (Device) TCP Port	
WSD (Printer) TCP Port	
WSD (Printer) Job Timeout	
WSD (Scanner) TCP Port	
MetadataVersion	

ltem	Description
UUID	

IEEE 802.1X (IEEE 802.1X settings)

Item	Description
User Name	
Domain name	
EAP Type	
Password	
Phase 2 user name	
Phase 2 Method TTLS	
Phase 2 Method PEAP	
Server cert	
Intermediate CA	
Server ID	
Sub domain	

Shell mode (Remote maintenance tool mode)

This is a list of messages that appear in the machine's system log. The system log can be viewed using the "syslog" command.

System Log Information

Use the following command to display the system log information:

- UNIX: Use the "syslog" command and "rsh", "rcp", "ftp", and "sftp" parameters.
- telnet: Use the "syslog" command.

Access to NetWare server <file server name> denied. Either there is no account for this print server on the NetWare server on password was incorrect.

Login to the file server failed when the print server was online. Make sure the print server is registered in <file server name>. If a password is specified for the print server, delete the password.

account is unavailable: same account name be used.

User account is disabled. This could be because it use the same account name as the administrator account.

account is unavailable: The authentication password is not set up.

User account is disabled. This could be because the authentication password is not set, and only the encryption account is set.

account is unavailable: encryption is impossible.

Encryption is not possible and account is disabled. This could be because:

- · Security option is not installed.
- Encryption password has not been specified.

add_sess_IPv4: bad trap addr: <IPv4 address>, community: <community name>

The IPv4 address (0.0.0.0.) is unavailable when the community access type is TRAP. Specify the host IPv4 address for the TRAP destination.

add_sess_IPv6: bad trap addr: <IPv6 address>, community: <community name>

The IPv6 address [::] is unavailable when the community access type is TRAP. Specify the host IPv6 address for the TRAP destination.

add_sess_IPv4: community <community name> already defined.

The same community name already exists. Use another community name.

add_sess_IPv6: community <community name> already defined.

The same community name already exists. Use another community name.

add_sess_IPX: bad trap addr: <IPX address> community <community name>

The IPX address (00:00:00:00:00:00) is unavailable when the community access type is TRAP. Specify the host IPX address for the TRAP destination.

add_sess_IPX: community <community name> already defined.

The same community name already exists. Use another community name.

adjust time server <NTP server name> offset: xx sec.

ncsd tells you the timing of the NTP server and whether or not the time system clock is set.

- NTP Server: NTP server name
- offset: number of seconds of delay (minus number if a time in advance is specified)

Attach FileServer=<file server>

Connection to the file server as the negrest server has been established.

Attach to print queue <print queue name>

The system connects to the print queue when the print server goes online.

btd is disabled.

Bluetooth connection could not be established. Enable "btd" in the security mode setting.

centrod is disabled.

Parallel communication could not be established. Enable "centrod" in the security mode setting.

child process exec error!

The network service failed to start. Turn the printer off and then on. If this does not work, contact your service or sales representative.

connected DHCPv6 server <IPv6 address>

The IP address was successfully received from the DHCPv6 server.

Could not attach to FileServer <error number>

Connection to the file server could not be established when the remote printer went online. The file server refused the connection for unknown reason. Check the file server's configuration.

Could not attach to PServer <print server>

Connection to the print server has not been established when the remote printer is turned on. The print server has refused the connection. Check the print server configuration.

connection from <IP address>

A user logged in from the host <IP address>.

Current Interface Speed: <Ethernet I/F Speed>

Speed of the network (10Mbps, 100 Mbps, or 1Gbps).

Current IPX address <IPX address>

The current IP address is <IPX address>.

Duplicate IP=<IP address> (from<MAC address>).

A conflicting IPv4 or IPv6 address was used. Each IPv4 or IPv6 address must be unique.

Check the device address in [MAC address].

DHCPv6 server not found.

The DHCPv6 server was not found. Make sure that the DHCPv6 is on the network.

Established SPX Connection with PServer, (RPSocket=<socket number>, connID=<connection ID>)

Connection to the print server was established when the remote printer went online.

Frametype=<frametype name>

The specified frame type name <frame type name> is for NetWare use.

IEEE 802.11 Card does NOT support WPA.

A wireless card that does not support WPA is installed. Install a wireless card that supports WPA.

IEEE 802.11 Card Firmware REV.<version>

Displays the version number of the 802.11 card's firmware.

IEEE 802.11 current channel <channel number>

Displays the current channel number of the active wireless card (in ad hoc and infrastructure mode).

IEEE 802.11 MAC Address = <MAC address>

Displays the MAC address of the wireless interface.

IEEE 802.11 SSID <ssid> (AP MAC Address <MAC address>)

The MAC address and SSID of the access point are connected in infrastructure mode.

IEEE 802.11 <communication mode> mode

Displays IEEE 802.11 communication mode.

(IKE phase-1) mismatched authentication type: local=<authentication type 1> remote=<authentication type 2>

This machine's <authentication type 1> in IKE phase 1 does not match the communicating host's <authentication type 2>, Make sure this machine's ISAKMP SA authentication type matches that of the communicating host.

(IKE phase-1) mismatched encryption type: <encryption algorithm 1> remote=<encryption algorithm 2>

This machine's ISAKMP SA Oakley group <encryption algorithm 1> in IKE phase 1 does not match the communicating host's ISAKMP SA Oakley group < encryption algorithm 2>, Make sure this machine's ISAKMP SA Oakley group matches that of the communicating host.

(IKE phase-1) mismatched DH group: local=<DH group number 1> remote=<DH group number 2>

This machine's ISAKMP SA Oakley group <DH group number 1> in IKE phase 1 does not match the communicating host's ISAKMP SA Oakley group <DH group number 2>, Make sure this machine's ISAKMP SA Oakley group matches that of the communicating host.

(IKE phase-1) mismatched hash type: local=<Hash Algorithm 1> remote=<Hash Algorithm 2>

This machine's ISAKMP SA <Hash Algorithm 1> in IKE phase 1 does not match the communicating host's ISAKMP SA <Hash Algorithm 2>, Make sure this machine's ISAKMP SA Hash Algorithm matches that of the communicating host.

IKE [% s] is disable, set PSK text

The specified IKE entry is invalid. Enter the PSK text.

< Interface > started with IP: < IP address >

IP address (IPv4 or IPv6 address) has been set for the interface and is operating.

job canceled. jobid=%d.

The spooled job was canceled due to error or user request.

Lease Time=<lease time>(sec), RenewTime=<renew time>(sec).

The resource lease time received from the DHCP server is displayed in [lease time] in seconds. The renewal time is displayed in [renew time] in seconds.

Login to fileserver <file server name> (<IPX | IP>), <NDS | BINDERY>

When the print server was online, the system logged in to <file server> in NDS or BINDERY mode. The transfer protocol in use is also displayed.

Manual [% s] is disable, set authentication key

The specified manual SA entry is invalid. Set the authentication key.

Manual [% s] is disable, set encryption key

The specified manual SA entry is invalid. Set the authentication key.

Name registration failed. name=<NetBIOS name>

Name registration of <NetBIOS Name> failed. Change to a different NetBIOS name.

Name registration success in Broadcast name=<NetBIOS name>

Name registration by <NetBIOS Name> broadcast was successful.

Name registration success. WINS server=<WINS server address> NetBIOS Name=<NetBIOS name>

Name registration of <NetBIOS Name> to <WINS server address> was successful.

Open log file <file name>

The specified log file was opened when the print server was online.

Printer <printer name> has no queue

The print queue is not assigned to the printer when the print server was online. Assign the print queue to the printer using NetWare administrator account, and then restart the printer.

Printer queue <print queue name> cannot be serviced by printer 0, <print server name>

The print queue cannot be established when the print server is online. Make sure that the print queue exists on the specified file server.

Print server <print server name> has no printer

The printer was not assigned to the print server when the print server was online. Use the NetWare administrator account to assign the printer, and then restart the printer.

Print sessions full

No more print jobs can be accepted. Wait a while before sending any more print jobs.

Required file server (<file server name>) not found

The required file server <file server name> could not be found.

sap enable, saptype=<SAP type>, sapname=<SAP name>

The SAP function was started. The SAP packet is issued to advertise the service in the SAP table on the NetWare server.

session IPv4 <community name> not defined.

The requested community name is not defined.

session IPv6 <community name> not defined.

The requested community name is not defined.

session_IPX <community name> not defined.

The requested community name is not defined.

Set context to <NDS context name>

The NDS context name < NDS context name > has been set.

shutdown signal received. network service rebooting...

The network reboot process is starting.

SMTPC: failed to get smtp server ip-address.

The SMTP server IP address could not be obtained. This could be because:

- The specified DNS server could not be found.
- No connection to the network has been established.
- The specified DNS server could not be found.
- An incorrect DNS server is specified.
- The specified SMTP server IP address could not be found in the DNS server.

SMTPC: failed to connect smtp server. timeout.

Connection to the SMTP server failed due to timeout. This could be because the specified SMTP server name is incorrect, or no connection to the network has been established, or the network configuration is incorrect, so there is no response from the SMTP server. Check the SMTP server name, or the network connection and configuration.

SMTPC: refused connect by smtp server.

Connection to the SMTP server is denied. This could be because server other than the SMTP server has been specified, or the specified SMTP server port number is incorrect. Check the SMTP server name, port number, or the SMTP server port number.

SMTPC: no smtp server. connection close.

Connection to the SMTP server failed due to no response from SMTP. This could be because a server other than the SMTP server has been specified, or the specified SMTP server port number is incorrect. Check the SMTP server name, port number, or the SMTP server port number.

SMTPC: failed to connect smtp server.

Connection to the SMTP server failed. This could be because no connection to the network has been established, or the network configuration is incorrect, so there is no response from the SMTP server, or the specified SMTP server name is incorrect, or the specified SMTP server IP address could not be found in the DNS server, or a server other than the SMTP server has been specified, or the specified SMTP server port number is incorrect. Check the DNS Server's IP address and SMTP server's IP address, or the SMTP server name and SMTP port number, or the SMTP server's SMTP port number, or the network connection and configuration.

SMTPC: username or password wasn't correct. [response code] (information)

Connection to the SMTP server failed, because the specified SMTP user name is incorrect, or the specified SMTP password is incorrect. Check the SMTP user name and password.

Snmp over IPv4 is ready

Communication over IPv4 with snmp is available.

Snmp over IPv6 is ready.

Communication over IPv6 with snmp is available.

Snmp over IPX is ready.

Communication over IPX with snmp is available.

The print server received error <error number> during attempt to log in to the network. Access to the network was denied. Verify that the print server name and password are correct.

Login to the file server failed when the print server was online. The print server is not registered or a password is specified. Register the print server without specifying a password.

trap account is unavailable.

v3Trap cannot be sent. This could be because the Trap destination account is different from the account specified by the printer.

Updated (option name) (value) via DHCPv6 Server

The parameter obtained from the DHCP server has been updated.

WINS name registration: No response to server (WINS server address)

There was no response from the WINS server. Check that the correct WINS server address is entered. Also, check that the WINS server is functioning properly.

WINS wrong scope ID=<scope ID>

The scope ID is invalid. Use a valid scope ID.

write error occurred. (diskfull)

A "diskfull" error occurred while the machine was writing to the spool file. Wait for the current print job to finish, When it finishes, more HDD space will be available. Only pages that were spooled when the error occurred will be printed.

write error occurred. (fatal)

A "diskfull" error occurred while the machine was writing to the spool file. Wait for the current print job to finish, When it finishes, more HDD space will be available. Only pages that were spooled when the error occurred will be printed.

#[nfa (process ID)] <time date> + Failed to send logos to a log collection server <IP address>.

An error occurred while trying to send a log file to both the primary and secondary log collection servers.

#[nfa (process ID)] <time date> + Failed to send logs to a collection server <IP address> n time (s) in 1 hour.

60 minutes has passed since the last log entry. During that time, an error occurred while trying to send the log file to both the primary and secondary log collection servers.



• For details about UNIX commands and parameters, see UNIX Supplement.

Registering Addresses and Users for Scanner Functions

This chapter describes how to register destinations and users in the Address Book.

Address Book

This section describes Address Book settings.

Registering information such as the names of users and their e-mail addresses in the Address Book allows you to manage them easily.



- Address Book data is stored on the hard disk. It can be lost if there is some kind of hard disk failure.
- The manufacturer shall not be held responsible for any damages resulting in data loss.

You can register and manage the following items in the Address Book:

Names


You can register the name of the user and the key display. This is the basic information required for managing users of the machine.

To register a e-mail address in the address book, you must register information such as the user name and destination name in advance.




Auth. Info

You can register user codes in order to restrict particular functions to certain users, and to check their use of each function. You can also register login user names and login passwords to be used when sending e-mail, sending to folders, or accessing a LDAP server.

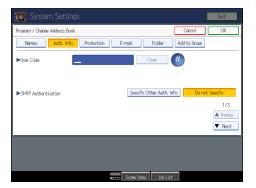


Protection

You can set protection codes to stop sender's name from being used or folders from being accessed without authorization.

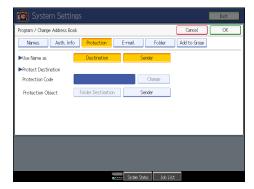

E-mail

You can register e-mail destinations in the Address Book.

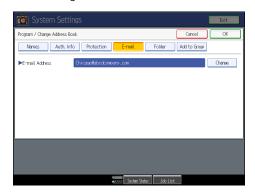


Folder

You can register the protocol, path name and server name.

• SMB



• FTP

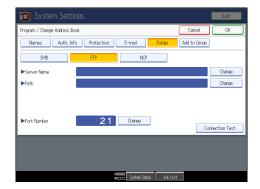

• NCP



Add to Group

You can put registered e-mail and folder destinations into a group for easier management.





- You can also use Web Image Monitor to register names in the Address Book. With SmartDeviceMonitor for Admin, you can register multiple names at the same time. For details about using Web Image Monitor, see Web Image Monitor Help.
- Using Address Management Tool in SmartDeviceMonitor for Admin, you can backup Address Book data. We recommend backing up data when using the Address Book. For operating instructions, see SmartDeviceMonitor for Admin Help.

Managing Names in the Address Book

By registering a name and key display beforehand, you can specify e-mail and folder destinations simply by selecting the name key.

■ Reference

• p.280 "Registering Names"

Sending E-mail by Quick Dial

By registering e-mail addresses in the Address Book, you can specify e-mail destinations simply by selecting them from the when sending a document by e-mail.

You can also specify an e-mail address by selecting the destination shown on the initial scanner display when sending a document using the scanner function. A registered e-mail address can be used as the sender's address, and the sender's addresses are automatically entered in the "From" field of an e-mail header.

Reference

• p.293 "E-mail Destination"

6

Sending Scanned Files to a Shared Folder Directly

After registering the path name, user name and password, you can connect to a shared folder simply by selecting the destination shown on the whenever sending files using the to a shared folder. You can also connect to a shared folder by selecting the destination shown on the initial scanner display whenever sending files using the scanner function.

To share the folder using Windows, select the SMB protocol.

To register the folder to the FTP server, select the FTP protocol.

To register the folder to the NetWare server, select the NCP protocol.

Reference

• p.297 "Registering Folders"

Preventing Unauthorized User Access to Shared Folders from the Machine

After registering a protection code, you can specify the object of protection to prevent an e-mail destination from being used without permission.

You can prevent unauthorized access to registered folders.

Reference

• p.324 "Registering a Protection Code"

Managing Users and Machine Usage

Register user codes to limit users to the following functions and check their use of each function:

- Copier
- Document Server
- Printer
- Scanner

■ Reference

• p.284 "Authentication Information"

Registering Names

Register user information including their names.

The user name is useful for selecting a destination when sending e-mail.

You can also use it as a folder destination.

You can register up to 2,000 names.

Registering Names

This section describes how to register names.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].




- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Press [New Program].
- 7. Press [Change] right "Name".

The name entry display appears.

8. Enter the name, and then press [OK].

9. Press the key for the classification you want to use right "Select Title".

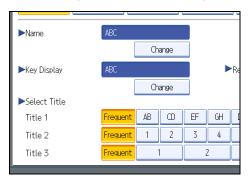

The keys you can select are as follows:

- [Frequent]: Added to the page that is displayed first.
- [AB], [CD], [EF], [GH], [IJK], [LMN], [OPQ], [RST], [UVW], [XYZ], [1] to [10]: Added to the list of items in the selected title.

You can select [Frequent] and one more page for each title.

- 10. Press [OK].
- 11. Press [Exit].
- 12. Press the [User Tools] key.



• The name can be used for documents in the Document Server. For details about the Document Server, see "Using the Document Server", Copy and Document Server Reference.

Changing a Registered Name

This section describes how to change a name.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Select the registered name you want to change.
 Press the name key, or enter the registered number using the number keys.
- 7. To change the name or key display, press [Change] on the right "Name" or "Key Display".
- 8. Enter the name or key display, and then press [OK].
- 9. To change the title, press the key for the classification you want to use from "Select Title".
- 10. To change the registration number, press [Change] right "Registration No.".
- 11. Enter a new registration number using the number keys, and then press the $[^{\sharp}]$ key.
- 12. Press [OK].
- 13. Press [Exit].
- 14. Press the [User Tools] key.



• You can search by the registered name, folder name, e-mail address.

Deleting a Registered Name

This section describes how to delete a name.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Press [Delete].
- 6. Select the name you want to delete.

Press the name key, or enter the registered number using the number keys.

- 7. Press [Yes].
- 8. Press [Exit].
- 9. Press the [User Tools] key.

Authentication Information

Following describes the procedure for authenticating a user code.



 The functions associated with each user code are the same. If you change or delete user codes, management data and limits associated with that code become invalid.

Register user codes to limit users to the following functions and check their use of each function:

- Copier
- Document Server
- Printer
- Scanner



- You can register up to 500 user codes.
- The number of copies scanned using the scanner function is counted for each user code. This allows
 you to check each user's usage.
- To automatically register the printer driver user code, select [PC Control] under Printer for the printer
 in User Code Authentication. To use the user code set in User Tools, set the user codes registered in
 User Tools for the printer driver.
- For details about setting user codes for the printer driver, see the printer driver Help.

Reference

• p.284 "Authentication Information"

Registering an User Code

This section describes how to register a user code.

1. Press the [User Tools] key.

2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Press the name whose code is to be registered, or enter the registered number using the number key.


You can search by the registered name, folder name, and e-mail address.

- 7. Press [Auth. Info].
- 8. Enter the user code using the number keys, and then press the [#] key.



If you make a mistake, press [Clear] or the [Clear/Stop] key.

9. Press [▼Next].

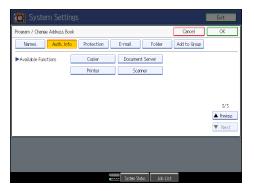

- 11. Press [OK].
- 12. Press [Exit].
- 13. Press the [User Tools] key.



- You can enter a one-to eight-digit user code.
- To register the name, see "Registering Names".

■ Reference

• p.280 "Registering Names"

Changing an User Code

This section describes how to change a user code.



- Even if you change a user code, the counter value will not be cleared.
- 1. Press the [User Tools] key.
- 2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Select the user whose user code you want to change.

Press the name key, or enter the registered number using the number keys. You can search by the registered name, folder name, and e-mail address.

- 7. Press [Auth. Info].
- 8. Press [Change], and then enter the new user code using the number keys.



- 9. Press the [#] key.
- 10. To change the available functions, press [Auth. Info], and then press [▼Next].
- 11. Press the key to select the functions to enable them.

Press the key to highlight it, and then the function is enabled. To cancel a selection, press the highlighted key.

- 12. Press [OK].
- 13. Press [Exit].
- 14. Press the [User Tools] key.
- **U** Note
 - To change the name, key display and title, see "Registering Name".
- Reference
 - p.280 "Registering Names"

Deleting an User Code

This section describes how to delete a user code.



• After clearing the user code, the counter is automatically cleared.



- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Press [Program / Change].
- 6. Select the name whose code is to be deleted.

Press the name key, or enter the registered number using the number keys. You can search by the registered name, folder name, and e-mail address.

- 7. Press [Auth. Info].
- 8. Press [Change] to delete the user code, and then press the [#] key.



- 9. Press [OK].
- 10. Press [Exit].
- 11. Press the [User Tools] key.
- UNote
 - To delete a name from the Address Book entirely, see "Registering Names".
- Reference
 - p.280 "Registering Names"

6

Displaying the Counter for Each User

This section describes how to display the counter for each user.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Display / Clear / Print Counter per User].
- Select the function usage you want to print from [Copier Counter], [Printer Counter] or [Scanner Counter].

Counters for individual function usage under each user code appear.

Printing the Counter for Each User


This section describes how to print the counter for each user.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].




- 3. Press [Administrator Tools].
- 4. Press [Display / Clear / Print Counter per User].

5. Select a user code from the left side of the display.

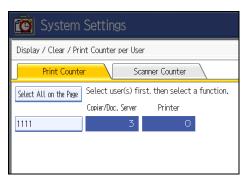

Press [Select All on the Page] to select all user codes on the page.

6. Press [Print Counter List] under "Per User".

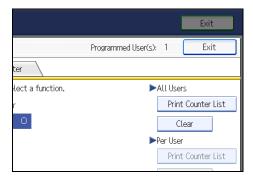

Enter the user code, and then press the $[^{\sharp}]$ key if the user code is registered.

- 7. Select the function usage you want to print from [Copier Counter], [Printer Counter], [Scanner Counter], and [Total Prints].
- 8. Press [Print].

Printing the Counter for All Users


This section describes how to print the counter for all users.

1. Press the [User Tools] key.

2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Display / Clear / Print Counter per User].
- 5. Press [Print Counter List] under "All Users".

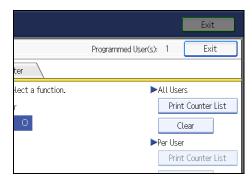

Enter the user code, and then press the $[^{\sharp}]$ key if the user code is registered.

- Select the function usage you want to print from [Copier Counter], [Printer Counter], [Scanner Counter], and [Total Prints].
- 7. Press [Print].


Clearing the Number of Prints

This section describes how to clear the counter.

1. Press the [User Tools] key.



- 3. Press [Administrator Tools].
- 4. Press [Display / Clear / Print Counter per User].
- 5. Select the user code to clear.
- 6. To clear the number of prints made under a user code, select the user code from the left side of the display.

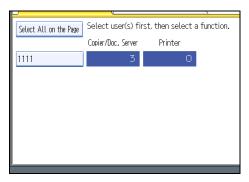

Press [Select All on the Page] to select all user codes on the page.

- 7. Press [Clear] under "Per User".
- 8. Select the function usage you want to clear from [Copier Counter], [Printer Counter], [Scanner Counter], and [Total Prints].
- 9. Press [OK].
- 10. To clear the number of prints for all user codes, press [Clear] under "All Users".
- Select the function usage you want to clear from [Copier Counter], [Printer Counter],
 [Scanner Counter], and [Total Prints].
- 12. Press [OK].
- 13. Press [Exit].
- 14. Press the [User Tools] key.

6

E-mail Destination

This section describes the procedure for registering, changing, and deleting E-mail Destination.

Register e-mail destinations so you do not need to enter an e-mail address every time, and can send scan files from scanner by e-mail.

- It is easy to select the e-mail destination if you register "Name" and "Key Display" as the e-mail destination.
- You can register e-mail destinations as a group.
- You can use the e-mail address as the sender's address when sending scan files in scanner mode. If
 you want to do this, set a protection code on the sender address to prevent unauthorized access.



 You can select an e-mail address from a LDAP server, and then register it in the Address Book. See "Sending Scan File by E-mail", Scanner Reference.


Registering an E-mail Destination

This section describes how to register an e-mail destination.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Select the name whose e-mail address you want to register.
 Press the name key, or enter the registered number using the number keys.
- 7. Press [E-mail].

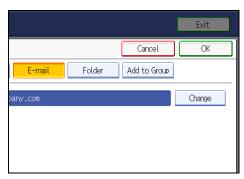

9. Enter the e-mail address.



- 10. Press [OK].
- 11. Select [E-mail].
- 12. Press [OK].
- 13. Press [Exit].
- 14. Press the [User Tools] key.



- You can enter up to 128 characters for the e-mail address.
- To register the name, see "Registering Names".

■ Reference

• p.280 "Registering Names"

Changing an E-mail Destination

This section describes how to change an e-mail destination.

1. Press the [User Tools] key.


2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Select the name whose e-mail address you want to change.
 Press the name key, or enter the registered number using the number keys.

You can search by the registered name, folder name, and e-mail address.

- 7. Press [E-mail].
- 8. Press [Change] right "E-mail Address".

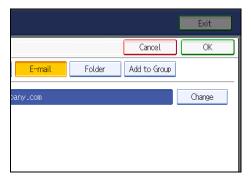

- 9. Enter the e-mail address, and then press [OK].
- 10. Press [OK].
- 11. Press [Exit].
- 12. Press the [User Tools] key.



• To change the name, key display and title, see "Registering Names".

Reference

• p.280 "Registering Names"

This section describes how to delete an e-mail destination.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Select the name whose e-mail address you want to delete.

Press the name key, or enter the registered number using the number keys. You can search by the registered name, folder name, and e-mail address.

- 7. Press [E-mail].
- 8. Press [Change] right "E-mail Address".
- 9. Press [Delete All], and then press [OK].
- 10. Press [OK].
- 11. Press [Exit].
- 12. Press the [User Tools] key.



To delete the name, key display and title, see "Registering Names".

Reference

• p.280 "Registering Names"

6

Registering Folders

This section describes the procedure for registering, changing, and deleting folders.

By registering a shared folder, you can send scan files to it directly.

There are three types of protocol you can use:

• SMB

For sending files to shared Windows folders.

FTP

Use when sending files to a FTP server.

NCP

Use when sending files to a NetWare server.



- For details about protocols, server names, and folder levels, consult your network administrator.
- You can prevent unauthorized users from accessing folders from the machine. See "Registering a Protection Code".
- You can only select either SMB, FTP, or NCP. If you change protocol after finishing your settings, all previous entries are cleared.

Reference

• p.324 "Registering a Protection Code"

Registering a SMB Folder

This section describes how to register a SMB folder.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].



3. Press [Administrator Tools].

- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Select the name whose folder you want to register.

Press the name key, or enter the registered number using the number keys.

7. Press [Auth. Info], and then press [▼Next].




8. Press [Specify Other Auth. Info] on the right side of Folder Authentication.

When [Do not Specify] is selected, the SMB User Name and SMB Password that you have specified in Default User Name/Password (Send) of File Transfer settings applies.

- 9. Press [Change] right "Login User Name".
- 10. Enter the login user name, and then press [OK].
- 11. Press [Change] right "Login Password".
- 12. Enter the password, and then press [OK].
- 13. Enter the password again to confirm, and then press [OK].
- 14. Press [Folder].
- 15. Press [SMB].

To specify a folder, you can either enter the path manually or locate the folder by browsing the network.

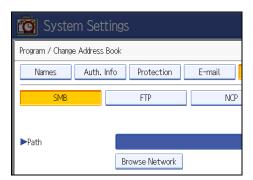

16. Specify the path.

For details about how to specify the path manually, see "Locating the SMB folder manually".

For details about how to specify the path using Browse Network, see "Locating the SMB folder using browse network".

- 17. Press [Connection Test] to check the path is set correctly.
- 18. Press [Exit].

If the connection test fails, check the settings, and then try again.

- 19. Press [OK].
- 20. Press [Exit].
- 21. Press the [User Tools] key.



- To register the name, see "Registering Names".
- You can enter up to 64 characters for the user name.
- You can enter up to 64 characters for the password.
- You can enter a path using up to 128 characters.
- If User Authentication is specified, contact your administrator.

Reference

• p.280 "Registering Names"

Locating the SMB folder manually

This section describes how to locate the SMB folder manually.

- 1. Press [Change] right "Path".
- 2. Enter the path where the folder is located.
- 3. Press [OK].

If the format of the entered path is not correct, a message appears. Press [Exit], and then enter the path again.



- Enter the path using this format: "\\ ComputerName\PathName".
- You can also enter an IPv4 address.
- You can enter a path using up to 128 characters.

Locating the SMB folder using browse network


This section describes how to locate the SMB folder using Browse Network.

The client computers sharing the same network as the machine appear.

Network display only lists client computers you are authorized to access.

2. Select a client computer.

Shared folders under it appear.

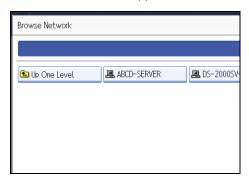

You can press [Up One Level] to switch between levels.

- 3. Select the folder you want to register.
- 4. Press [OK].

If a login screen appears

This section describes how to log on to the machine if the login screen appears when you try to access a folder by browsing the network.

If you have not specified folder authentication, or if an incorrect user name or password has been entered for folder authentication, the login screen appears.

1. Enter the login user name, and then press [OK].

Enter the login user name specified for folder authentication.

2. Enter the password, and then press [OK].

The path to the selected folder appears.

If a message appears, press [Exit], and then enter the login user name and password again.

Changing a SMB Folder

This section describes how to change settings of the registered SMB folder.

1. Press the [User Tools] key.

2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Select the name whose folder you want to change.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, folder name, and e-mail address.

- 7. Press [Folder].
- 8. Select the items you want to change.

When specifying a folder, enter the path directly or select it by referencing the network. For more information, see "Locating the SMB folder manually" and "Locating the SMB folder using browse network".

- 9. Press [Connection Test] to check the path is set correctly.
- 10. Press [Exit].
- 11. Press [OK].
- 12. Press [Exit].
- 13. Press the [User Tools] key.



• To change the name, key display and title, see "Registering Names".




• p.280 "Registering Names"

Changing the protocol

This section describes how to change the protocol.

1. Press [FTP] or [NCP].

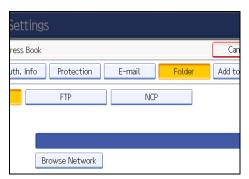

A confirmation message appears.

2. Press [Yes].

Changing the protocol will clear all settings made under the previous protocol.

3. Enter each item again.

Deleting a SMB Registered Folder

This section describes how to delete the registered SMB folder.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Select the name whose folder you want to delete.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, folder name, and e-mail address.

7. Press [Folder].

8. Press the protocol which is not currently selected.

A confirmation message appears.

- 9. Press [Yes].
- 10. Press [OK].
- 11. Press [Exit].
- 12. Press the [User Tools] key.
- **U** Note
 - To delete the name, key display and title, see "Registering Names".
- Reference
 - p.280 "Registering Names"

Registering a FTP Folder

This section describes how to register a FTP folder.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Select the name whose folder you want to register.

You can search by the registered name, folder name, and e-mail address.


7. Press [Auth. Info], and then press [▼Next].



8. Press [Specify Other Auth. Info] on the right side of Folder Authentication.

When [Do not Specify] is selected, the FTP User Name and FTP Password that you have specified in Default User Name/Password (Send) of File Transfer settings applies. For details, see "File Transfer".

- 9. Press [Change] right "Login User Name".
- 10. Enter the login user name, and then press [OK].
- 11. Press [Change] right "Login Password".
- 12. Enter the password, and then press [OK].
- 13. Enter the password again to confirm, and then press [OK].
- 14. Press [Folder].
- 15. Press [FTP].

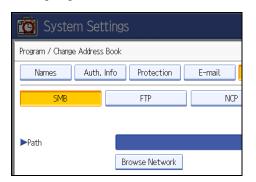

- 16. Press [Change] right "Server Name".
- 17. Enter the server name, and then press [OK].
- 18. Press [Change] right "Path".
- 19. Enter the path, and then press [OK].

You can enter an absolute path, using this format: "/user/ home/username"; or a relative path, using this format: "directory/sub-directory".

If you leave the path blank, the login directory is assumed to be the current working directory.

You can also enter an IPv4 address.

You can enter a path using up to 256 characters.

- 20. To change the port number, press [Change] right "Port Number".
- 21. Enter the port number using the number keys, and then press the [#] key.

You can enter 1 to 65535.

- 22. Press [Connection Test] to check the path is set correctly.
- 23. Press [Exit].

If the connection test fails, check the settings, and then try again.

- 24. Press [OK].
- 25. Press [Exit].
- 26. Press the [User Tools] key.



- To register the name, see "Registering Names".
- You can enter up to 191 characters for the user name.
- You can enter up to 128 characters for the password.
- You can enter a server name using up to 64 characters.
- If User Authentication is specified, contact your administrator.

Reference

- p.39 "File Transfer"
- p.280 "Registering Names"

Changing a FTP Folder

This section describes how to change the registered FTP folder.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].



- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Select the name whose folder you want to change.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, folder name, and e-mail address.

- 7. Press [Folder].
- 8. Select the items you want to change.
- 9. Press [Connection Test] to check the path is set correctly.
- 10. Press [Exit].
- 11. Press [OK].
- 12. Press [Exit].
- 13. Press the [User Tools] key.



• To change the name, key display and title, see "Registering Names".


Reference

• p.280 "Registering Names"

Changing the protocol

This section describes how to change the protocol.

1. Press [SMB] or [NCP].

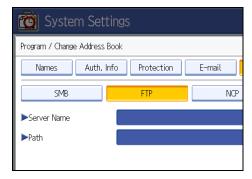

A confirmation message appears.

2. Press [Yes].

Changing the protocol will clear all settings made under the previous protocol.

3. Enter each item again.

Changing the registered FTP folder

This section describes how to change the registered FTP folder.

- 1. Press [Change] right "Port Number".
- 2. Enter the new port number, and then press the [#] key.
- 3. Press [Change] right "Server Name".
- 4. Enter the new server name, and then press [OK].
- 5. Press [Change] right "Path".
- 6. Enter the new path, and then press [OK].

Deleting a FTP Folder

This section describes how to delete the registered FTP folder.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Select the name whose folder you want to delete.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, folder name, and e-mail address.

- 7. Press [Folder].
- 8. Press the protocol which is not currently selected.

A confirmation message appears.

- 9. Press [Yes].
- 10. Press [OK].

- 11. Press [Exit].
- 12. Press the [User Tools] key.
- **U**Note
 - To delete a name entirely, see "Registering Names".
- Reference
 - p.280 "Registering Names"

Registering a NCP Folder

This section describes how to register a NCP folder.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].




- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Press the name you want to register or enter the registered number using the number keys.
 You can search by the registered name, folder name, and e-mail address.
- 7. Press [Auth. Info], and then press [▼Next].



8. Press [Specify Other Auth. Info] on the right side of Folder Authentication.

When [Do not Specify] is selected, the NCP User Name and NCP Password that you have specified in Default User Name/Password (Send) of File Transfer settings applies. For details, see "File Transfer".

- 9. Press [Change] right "Login User Name".
- 10. Enter the login user name, and then press [OK].
- 11. Press [Change] right "Login Password".
- 12. Enter the password, and then press [OK].
- 13. Enter the password again to confirm, and then press [OK].
- 14. Press [Folder].
- 15. Press [NCP].

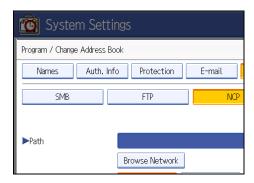

16. Select "Connection Type".

If you want to specify a folder in a NDS tree, press [NDS]. If you want to specify a folder on a NetWare server, press [Bindery].

If you have set "Connection Type" to [NDS], enter the user name followed by the name of the context where the user object is located. If the user name is "user" and the context name is "context", enter "user.context".

17. Specify the path.

For details about how to specify the path manually, see "Locating the NCP folder manually".

For details about how to specify the path using Browse Network, see "Locating the NCP folder using Browse Network".

- 18. Press [Connection Test] to check the path is set correctly.
- 19. Press [Exit].
- 20. Press [OK].
- 21. Press [Exit].
- 22. Press the [User Tools] key.



• To register the name, see "Registering Names".

- You can enter up to 64 characters for the password.
- To specify a folder, you can either enter the path manually or locate the folder by browsing the network.
- If User Authentication is specified, contact your administrator.

■ Reference

- p.39 "File Transfer"
- p.280 "Registering Names"

Locating the NCP folder manually

This section describes how to locate the NCP folder manually.

- 1. Press [Change] right "Path".
- 2. Enter the path where the folder is located.
- 3. Press [OK].
- 4. Press [Connection Test] to check the path is set correctly.
- 5. Press [Exit].

Note

- If you set "Connection Type" to [NDS], and if the NDS tree name is "tree", the name of the context including the volume is "context", the volume name is "volume" and the folder name is "folder", then the path will be "\\tree\volume. context\folder".
- If you set "Connection Type" to [Bindery], and if the NetWare server name is "server", the volume name is "volume" and the folder name is "folder", then the path will be "\\server\volume\folder".
- You can enter a path using up to 256 characters.
- If the connection test fails, check the settings, and then try again.

Locating the NCP folder using browse network

This section describes how to locate the NCP folder using Browse Network.

- 1. Press [Browse Network].
- If you have set "Connection Type" to [NDS], a list of items in the NDS tree appears. If you have set "Connection Type" to [Bindery], a list of items on the NetWare server appears.
- 3. Search for the destination folder in the NDS tree or NetWare server.
 - You can press [Up One Level] to switch between levels.
- 4. Select the folder you want to register.

5. Press [OK].



- Only the folders you are allowed to access appear in [Browse Network].
- If the languages used on the machine and the destination you want to view differ, the items in the list may not appear correctly.
- Up to 100 items can be displayed in the list.

Changing a NCP Registered Folder

This section describes how to change the registered NCP folder.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Select the user of the registered folder you want to change.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, folder name, and e-mail address.

- 7. Press [Folder].
- 8. Select "Connection Type".

If you want to specify a folder in a NDS tree, press [NDS]. If you want to specify a folder on a NetWare server, press [Bindery].

9. Specify the folder.

To specify a folder, you can either enter the path manually or locate the folder by browsing the network.

10. Press [Connection Test] to check the path is set correctly.

- 12. Press [OK].
- 13. Press [Exit].
- 14. Press the [User Tools] key.



• To change the name, key display and title, see "Registering Names".


Reference

• p.280 "Registering Names"

Changing the protocol

This section describes how to change the protocol.

1. Press [SMB] or [FTP].

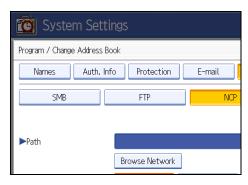

A confirmation message appears. Press [Yes].
 Changing the protocol will clear all settings made under the previous protocol.

3. Enter each item again.

Deleting a NCP Folder

This section describes how to delete the registered NCP folder.

1. Press the [User Tools] key.

2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Select a user of the folder you want to delete.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, folder name, and e-mail address.

- 7. Press [Folder].
- 8. Press the protocol which is not currently selected.

A confirmation message appears.

- 9. Press [Yes].
- 10. Press [OK].
- 11. Press [Exit].
- 12. Press the [User Tools] key.



• To delete a name entirely, see "Registering Names".

Reference

• p.280 "Registering Names"

Registering Names to a Group

This section describes how to register names to a group.

You can register names to a group to enable easy management of e-mail addresses and folders for each group.

To add names to a group, the groups must be registered beforehand.



- When using Scan to Folder function, you cannot send scan files to a group with over 50 folders registered.
- The maximum number of destinations registerable to a group is 500.



You can set a protection code to prevent unauthorized access to the folders registered in a group.
 For details, see "Registering a Protection Code".

Reference

• p.280 "Registering Names"

Registering a Group

This section describes how to register a group.


- 1. Press the [User Tools] key.
- 2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book: Program / Change / Delete Group].
- 5. Check that [Program / Change] is selected.
- 6. Press [New Program].



7. Press [Change] right "Group Name".

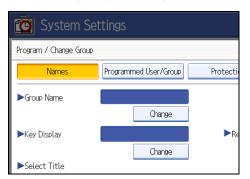

8. Enter the group name, and then press [OK].

The Key Display name is set automatically.

9. Press the title key right "Select Title", if necessary.

The keys you can select are as follows:

- [Frequent]: Added to the page that is displayed first.
- [AB], [CD], [EF], [GH], [UK], [LMN], [OPQ], [RST], [UVW], [XYZ], [1] to [10]. Added to the list of items in the selected title.

You can select [Frequent] and one more page for each title.

- 10. When you want to change the key display, press [Change] right "Key Display".
- 11. Enter the key display, and then press [OK].
- 12. Press [OK].
- 13. Press [Exit].
- 14. Press the [User Tools] key.

Registering Names to a Group

This section describes how to register names to a registered group.

You can put names that have been registered in the Address Book into a group.

When registering new names, you can also register groups at the same time.

1. Press the [User Tools] key.

2. Press [System Settings].




- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Select the name to register in a group.


Press the name key, or enter the registered number using the number keys.

You can search by the registered name, folder name, and e-mail address.

- 7. Press [Add to Group].
- 8. Select a group to which you want to add the name.

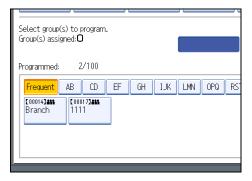

The group key that you have selected becomes highlighted, and the name is added to it.

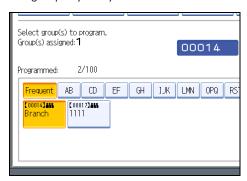

- 9. Press [OK].
- 10. Press [Exit].
- 11. Press the [User Tools] key.

Adding a Group to Another Group

This section describes how to add a group to another group.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book: Program / Change / Delete Group].
- 5. Check that [Program / Change] is selected.
- 6. Select the group that you want to put into another group.

Press the group key, or enter the registered number using the number keys.

You can search by the registered name, folder name, and e-mail address.

- 7. Press [Add to Group].
- 8. Select the group to which you want to add.



The group key that you have selected becomes highlighted, and the group is added to it.

- 9. Press [OK].
- 10. Press [Exit].
- 11. Press the [User Tools] key.

Displaying Names Registered in a Group

This section describes how to display names registered in a group.

You can check the names or groups registered in each group.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book: Program / Change / Delete Group].
- 5. Check that [Program / Change] is selected.
- **6.** Select the group where the members you want to check is registered.

You can search by the registered name, folder name, and e-mail address.

7. Press [Programmed User/Group].

All the names registered will be displayed.

8. Press [OK].

- 9. Press [Exit].
- 10. Press the [User Tools] key.

Removing a Name from a Group

This section describes how to remove a name from a group.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].




- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Select the name to remove from a group.

Press the name key, or enter the registered number using the number keys.


You can search by the registered name, folder name, and e-mail address.

- 7. Press [Add to Group].
- 8. Select the group from which you want to remove the name.

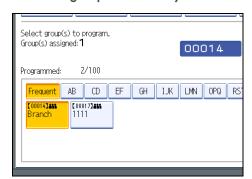

The group key is deselected and the name is removed from it.

9. Press [OK].

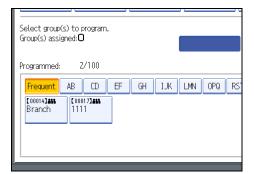

- 10. Press [Exit].
- 11. Press the [User Tools] key.

Deleting a Group Within Another Group

This section describes how to delete a group within another group.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book: Program / Change / Delete Group].
- 5. Check that [Program / Change] is selected.
- 6. Select the group that you want to delete from.


Press the group key, or enter the registered number during the number keys.

You can search by the registered name, folder name, and e-mail address.

7. Press [Add to Group].

The keys of groups in which the group is registered appear highlighted.

8. Select the group that you want to delete from.

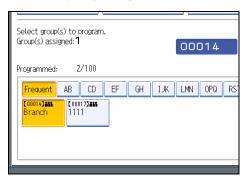

The group key is deselected and the group is deleted from it.

9. Press [OK].



- 10. Press [Exit].
- 11. Press the [User Tools] key.

Changing a Group Name

This section describes how to change a group name.


- 1. Press the [User Tools] key.
- 2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book: Program / Change / Delete Group].
- 5. Check that [Program / Change] is selected.
- 6. Press the group key you want to change.

You can search by the registered name, folder name, and e-mail address.

7. To change the group name and key display, press [Change] right "Group Name" or "Key Display".

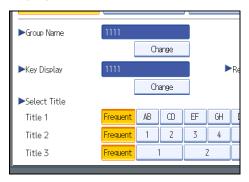

- 8. Enter the new group name or key display, and then press [OK].
- 9. To change the title, press the title key right "Select Title".
- 10. To change the registration number, press [Change] right "Registration No.".
- 11. Enter the new registration number using the number keys.
- 12. Press the [#] key.
- 13. Press [OK].
- 14. Press [Exit].
- 15. Press the [User Tools] key.

Deleting a Group

This section describes how to delete a group.

1. Press the [User Tools] key.

b

2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book: Program / Change / Delete Group].
- 5. Press [Delete].
- 6. Press a group key you want to delete.

You can search by the registered name, folder name, and e-mail address.

- 7. Press [Yes].
- 8. Press [Exit].
- 9. Press the [User Tools] key.

Registering a Protection Code

This section describes how to register a Protection Code.

You can stop sender's names or folders being accessed by setting a protection code.

You can use this function to protect the following:

• Folders

You can prevent unauthorized access to folders.

• Sender's names

You can prevent misuse of sender's names.

Registering a Protection Code to a Single User

This section describes how to register a Protection code to a single user.

- 1. Press the [User Tools] key.
- 2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Select the name whose protection code you want to register.


You can search by the registered name, folder name, and e-mail address.

6

7. Press [Protection].



8. Press [Destination] or [Sender] right "Use Name as".

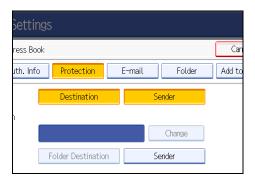

Both [Destination] and [Sender] can be selected at the same time.

- 9. Press [Change] right "Protection Code".
- 10. Enter a protection code using the number keys, and then press the [#] key.
- 11. Press [OK].
- 12. Press [Exit].
- 13. Press the [User Tools] key.



- Specify a protection code of up to eight digits. You can also specify "Protection" without specifying a protection code.
- To change the protection code settings, repeat step 3 to 11.

Registering a Protection Code to a Group User

This section describes how to register a Protection Code to a Group User.

1. Press the [User Tools] key.



- 3. Press [Administrator Tools].
- 4. Press [Address Book: Program / Change / Delete Group].
- 5. Check that [Program / Change] is selected.
- Press the group key you want to register or enter the registered number using the number keys.

You can search by the registered name, folder name, and e-mail address.

- 7. Press [Protection].
- 8. Press [Folder Destination] right "Protection Object".
- 9. Press [Change] right "Protection Code".
- 10. Enter a protection code using the number keys, and then press the $[^{\sharp}]$ key.
- 11. Press [OK].
- 12. Press [Exit].
- 13. Press the [User Tools] key.



- Specify a protection code of up to eight digits. You can also specify "Protection" without specifying a
 protection code.
- To change the protection code settings, repeat step 3 to 11.

6

Registering SMTP and LDAP Authentication

This section describes how to register SMTP and LDAP Authentication.

SMTP Authentication

This section describes how to register SMTP Authentication.

For each user registered in the Address Book, you can register a login user name and login password to be used when accessing a SMTP server.

To use a SMTP server, you need to program it beforehand.



- When [Do not Specify] is selected for SMTP Authentication the User Name and Password that you
 have specified in SMTP Authentication of File Transfer settings applies. For details, see "File Transfer".
- 1. Press the [User Tools] key.
- 2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- 6. Press the name you want to register or enter the registered number using the number keys.
 You can search by the registered name, folder name, and e-mail address.
- 7. Press [Auth. Info].
- 8. Press [Specify Other Auth. Info] right "SMTP Authentication".



- 10. Enter the login user name, and then press [OK].
- 11. Press [Change] right "Login Password".
- 12. Enter the password, and then press [OK].
- 13. Enter the password again to confirm, and then press [OK].
- 14. Press [OK].
- 15. Press [Exit].
- 16. Press the [User Tools] key.

UNote

- To register the name, see "Registering Names".
- You can enter up to 191 characters for the user name.
- When using POP before SMTP Authentication, you can enter up to 63 characters.
- You can enter up to 128 characters for the password.
- To change the SMTP Authentication settings, repeat step 3 to 14.

■ Reference

- p.39 "File Transfer"
- p.280 "Registering Names"

LDAP Authentication

This section describes how to register LDAP Authentication.


For each user registered in the Address Book, you can register a login user name and login password to be used when accessing a LDAP server.

To use a LDAP server, you need to program it beforehand. For details, see "Programming the LDAP server".

- When [Do not Specify] is selected for LDAP Authentication, the User Name and Password that you
 have specified in Program / Change LDAP Server of Administrator Tools settings applies. For details,
 see "Programming the LDAP server".
- 1. Press the [User Tools] key.
- 2. Press [System Settings].



- 3. Press [Administrator Tools].
- 4. Press [Address Book Management].
- 5. Check that [Program / Change] is selected.
- **6.** Press the name you want to register or enter the registered number using the number keys. You can search by the registered name, folder name, and e-mail address.
- 7. Press [Auth. Info], and then press [▼Next].
- 8. Press [Specify Other Auth. Info] right "LDAP Authentication".
- 9. Press [Change] right "Login User Name".

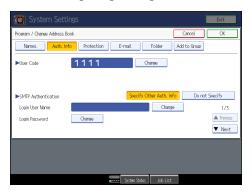

- 10. Enter the login user name, and then press [OK].
- 11. Press [Change] right "Login Password".
- 12. Enter the password, and then press [OK].
- 13. Enter the password again to confirm, and then press [OK].

- 14. Press [OK].
- 15. Press [Exit].
- 16. Press the [User Tools] key.
- **U** Note
 - To register the name, see "Registering Names".
 - You can enter up to 128 characters for the user name.
 - You can enter up to 128 characters for the password.
 - To change the LDAP Authentication settings, repeat step 3 to 14.

■ Reference

- p.55 "Programming the LDAP server"
- p.280 "Registering Names"

7. Special Operations under Windows

This chapter describes how to print files directly from Windows, or print with Bluetooth devices.

Printing Files Directly from Windows

You can print files directly using Windows commands. For example, you can print PostScript files for PostScript 3.

Windows 2000/XP, Windows Server 2003/2003 R2

You can print files directly using lpr, rcp, ftp or sftp command.

Windows Vista, Windows Server 2008

You can print files directly using lpr, ftp or sftp command.

Setup

Follow the procedure below to make network environment settings.

 Enable TCP/IP with the control panel, and then set up the printer's network environment about TCP/IP including IP addresses.

TCP/IP of the printer is set as default.

2. Install a TCP/IP in Windows to set up the network environment.

Consult the network administrator for the local setting information.

 To print under Windows 2000/XP/Vista, Windows Server 2003/2003 R2/2008, install "Printing service for UNIX" as the network application.

Reference

• p.386 "Using DHCP"

Using a Host Name Instead of an IPv4 Address

When a host name is defined, you can specify a printer by host name instead of IP address. The host names vary depending on the network environment.

When using DNS

Use the host name set to the data file on the DNS server.

When setting the IPv4 address of a printer using DHCP

Use the printer name on the configuration page as the host name.

In other cases

Add the IP address and host name of the network printer to the hosts file on the computer used for printing. Methods of addition vary depending on operating systems.

1. Open the hosts file using memo pad files, for instance.

The hosts file is in the following folder:

\WINNT\SYSTEM32\DRIVERS\ETC\HOSTS

"\WINNT" is the directory of the installation destination for Windows 2000/XP/Vista, and Windows Server 2003/2003 R2/2008.

2. Add an IPv4 or IPv6address and host name to the hosts file using the following format:

192.168.15.16 host # NP

"192.168.15.16" is the IPv4 address, "host" is the printer's host name, and "#NP" is replaced by comments. Insert a space or tab between "192.168.15.16" and "host", between "host" and "#NP" respectively, using one line for this format.

2001:DB::100 host # NP

"2001:DB::100" is the IPv6 address, "host" is the printer's host name, and "#NP" is replaced by comments. Insert a space or tab between "2001:DB::100" and "host", between "host" and "#NP" respectively, using one line for this format.

3. Save the file.



 When using a host name under Windows Server 2003/2003 R2/2008, or Windows Vista, with IPv6 protocol, perform host name resolution using an external DNS server. The host file cannot be used.

Printing Commands

The following explains printing operations using the "lpr", "rcp", "ftp" and "sftp" commands.

Enter commands using the command prompt window. The location of the command prompts varies depending on operating systems:

Windows 2000

[Start] - [Programs] - [Accessories] - [Command Prompt]

Windows XP/Vista, Windows Server 2003/2003 R2/2008

[Start] - [All Programs] - [Accessories] - [Command Prompt]

_/

U Note

- Match the data format of the file to be printed with the emulation mode of the printer.
- The "rcp" command cannot be used under Windows Vista and Windows Server 2008.
- If the message "print requests full" appears, no print jobs can be accepted. Try again when sessions end. For each command, the amount of possible sessions is indicated as follows:
 - lpr: 5(When the spool printing function is available: 10)
 - rcp, rsh: 5
 - ftp: 3
 - sftp: 3
- Enter the file name in a format including the path from the directory executing commands.
- The "option" specified in a command is an intrinsic printer option and its syntax is similar to printing from UNIX. For details, see UNIX Supplement.

lpr

When specifying a printer by IP address

c:> lpr -Sprinter's IP address [-Poption] [-ol] \path\file name

When using a host name instead of an IP address

c:> lpr -Sprinter's host name [-Poption] [-ol] \path\file name

When printing a binary file, add the "-ol" option (lowercase O, and lowercase L).

When using a printer with the host name "host" to print a PostScript file named "file 1" located in the "C:\PRINT" directory, the command line is as follows:

c:> lpr -Shost -Pfiletype=RPS -ol C:\PRINT\file1

Printing from the virtual printer

C:\>lpr -S "printer's IP address" -P[virtual printer name] [-ol] \path\file name

Reference

For details about the virtual printer configuration, see "Using the Virtual Printer", Printer Reference.

rcp

First, register the printer's host name in the hosts file.

c:> rcp [-b] \path\file name [path\file name...] printer's host name:[option]
In file names, "*" and "?" can be used as wild cards.

When printing a binary file, add the "-b" option.

When using a printer with the host name "host" to print a PostScript file named "file 1" or "file 2" located in the "C:\PRINT" directory, the command line is as follows:

c:> rcp -b C:\PRINT\file1 C:\PRINT\file2 host:filetype=RPS

Printing from the virtual printer

c:> rcp [-b] \path\file name [\path\file name...] printer's host name:[virtual
printer name]

Reference

• For details about the virtual printer configuration, see "Using the Virtual Printer", Printer Reference.

ftp / sftp

Use the "put" or "mput" command according to the number of files to be printed.

When one file is printed

ftp> put \path\file name [option]

Printing from the virtual printer

ftp> put \path\file name [virtual printer name]

When multiple files are printed

ftp> mput \path\file name [\path\file name...] [option]

Follow the procedure below to print using the "ftp" command.

1. Formulate the printer's IP address or the host name of the hosts file printer as an argument and use the "ftp" command.

```
% ftp "printer's IP address"
```

2. Enter the user name and password, and then press the [Enter] key.

For details about the user name and password, consult your network administrator.

User:

Password:

When user authentication is set, enter a login user name and password.

3. When printing a binary file, set the file mode to binary.

ftp> bin

When printing a binary file in ASCII mode, print may not come out correctly.

4. Specify files to be printed.

The following shows the examples of printing a PostScript file named "file 1" in the "C:\PRINT" directory and printing file 1 and file 2.

```
ftp> put C:\PRINT\file1 filetype=RPS
ftp> mput C:\PRINT\file1 C:\PRINT\file2
```

7

5. Quit ftp.

ftp> bye

UNote

- "=", ",", "_", and ";" cannot be used for filenames. File names will be read as option strings.
- If you are using ftp, you cannot specify an option using the "mput" command.
- If you are using ftp, you cannot specify an option using the "pwd" command.
- If you are using sftp, you cannot specify an option using the "cd" command.
- If you are using sftp, you cannot specify an option using the "pwd" command.
- To use SFTP, you must create an open key for SSH communication. Use Web Image Monitor to create an open key. For details, see Web Image Monitor help.
- If personal authentication (Basic, Windows, LDAP, or Integrated Server Authentication) is enabled, only authenticated users (users authenticated by login user name and password) can log on.
- For "mput" command, "*" and "?" can be used as wild cards in file names.
- When printing a binary file in ASCII mode, print may not come out correctly.
- For details about login user name and password, see Security Reference, which is the administrator's manual.
- For details about the virtual printer configuration, see "Using the Virtual Printer", Printer Reference.

Printing with Bluetooth Connection

This describes how to print with Bluetooth devices.

Supported Profiles

The following profiles are supported:

- SPP (Serial Port Profile)
- HCRP (Hardcopy Cable Profile)
- BIP (Basic Imaging Profile)

Restrictions on SPP, HCRP

- A maximum of two Bluetooth adaptor or Bluetooth-equipped computers can be connected at the same time using the Bluetooth interface: one by SPP, one by HCRP.
- When connecting more than one Bluetooth adaptor or Bluetooth-equipped computer at the same time, the first device that establishes connection is selected. When selecting the connection between the other devices, cancel the first established connection.
- SPP connection does not support bidirectional communications.
- HCRP connection supports bidirectional communications.

Restrictions on BIP

- For BIP connection, a module including PostScript 3 must be installed in the machine.
- Only one Bluetooth adaptor or Bluetooth-equipped computer can be connected via BIP.
- Only JPEG images can be printed using BIP.
- User codes are disabled for BIP.
- You cannot print if print functions are restricted.
- Some printers do not support BIP.

Instructions in this manual relate to printing via HRCP. To print using SPP or BIP, see the Help supplied with the Bluetooth adapter you want to use, or the Microsoft Web site.

Adding a Bluetooth Printer

The following procedures explain how to install a Bluetooth printer on a computer that is running Windows XP or Windows Vista.

If your computer is running SP1 or an earlier version of Windows XP, there are additional applications that you must install. For details about these, see the Help supplied with your Bluetooth device.

- To perform a printer installation, your account must have Manage Printers permission. Log on as an Administrators or Power Users group member.
- To connect to a Bluetooth printer, your computer must have a Bluetooth device installed. Make sure
 a Bluetooth device is installed on your computer.

Windows XP

1. On the [Start] menu, click [Printers and Faxes].

The [Printers and Faxes] window appears.

2. Click [Add a printer].

The [Add Printer Wizard] window opens.

- Click [Next >].
- 4. Click [Bluetooth Printer], and then click [Next >].

The computer begins searching for available Bluetooth printers.

If a new printer is discovered, the [Found New Hardware Wizard] window appears. To ignore a discovered device and continue searching, click [Cancel]. The computer resumes searching for other available Bluetooth printers.

- 5. Click [No, I will not connect], and then click [Next >].
- 6. Click [Install from a list or specific location (Advanced)], and then click [Next >].
- 7. Insert the CD-ROM provided with this machine into your computer's CD-ROM drive, select the [Search removable media (floppy, CD-ROM...)] check box, and then click [Next >].
- 8. If the [Hardware Installation] window appears, click [Continue].
- 9. If the installation was successful, click [Finish].
- 10. Select [Test Print], and then click [Next >].
- 11. Click [Finish].



- Actual Bluetooth printer operations will vary according to your Bluetooth device and/or Bluetoothinstalled computer. For details, see the Help supplied with your Bluetooth device and/or Bluetoothequipped computer.
- After printing the test page, check it, and then click [Close] to close the window.
- If there is a problem with the test page, click [Troubleshooting] in the test print window.

Windows Vista



- To perform a printer installation, your account must have Manage Printers permission. Log on as an Administrators or Power Users group member.
- 1. On the [Start] menu, click [Control Panel].
- 2. In the "Hardware and Sound" area, click [Printers].
- 3. In the top part of the window, click [Add a printer].
- 4. In the [Add Printer] window, select [Add a network, wireless or Bluetooth printer], and then click [Next].

The computer begins searching for available Bluetooth devices.

From the list of discovered devices, select the printer you want to use, and then click [Next].

All discovered wireless printers appear in the list of discovered printers, not only Bluetooth printers. Make sure the printer you select is a Bluetooth printer.

- 6. Insert the CD-ROM provided with this machine into your computer's CD-ROM drive, and then click [Browse my computer for driver software (advanced)] on the [Found New Hardware] display.
- 7. In the [Found New Hardware] window, select the printer driver you want to use, and then click [Next].

The printer driver installation starts.

- 8. If the [Windows Security] window appears, click [Install this driver software anyway].
- 9. Click [Close].
- If you want to change the printer name, enter the new name in the [Printer Name Settings]
 window.
- 11. If you want to print a test page, click [Printing Test Page] on the "Test Print" page.

 Otherwise, click [Finish].




- If you print the test page, after checking it, click [Close] to close the test print window.
- If there is a problem with the test page, click [Troubleshooting Printer Problems] in the test print window.

8. Appendix


Adjustment Settings for Operators

Changing the Adjustment Settings for Operators

1. Press the [User Tools] key.

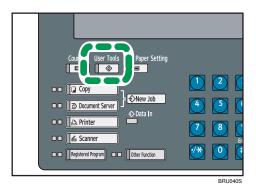

2. Press [Adjustment Settings for Operators].

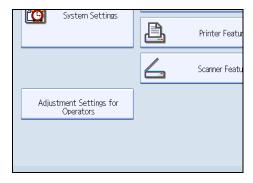

- 3. Select the item that you want to change the value.
- 4. Specify the setting value.

To select the setting value, press the value on the display.

To change the value, enter adjustment value with [+] or [-].

To change the selecting item, select item that you want to change.


- 5. Press [OK].
- 6. Press [Exit].

Setting Values

0101: Adjust Image Position Across Feed Direction


Adjust the vertical position of the print image. Press [+] or [-] to move the image backward or forward.

One-sided printing (Straight feeding)

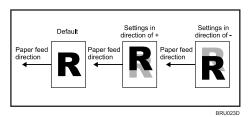

Same when feeding in reverse direction.

Duplex printing (Straight feeding)

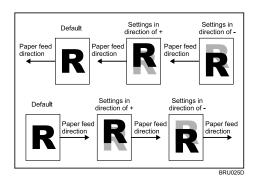

Same when feeding in reverse direction.

• Tray 1

• Max.: 2.0 mm

• Min.: -2.0 mm

• Step: 0.1 mm

The default setting is "0" mm.

• Tray 2

Max.: 2.0 mm

• Min.: -2.0 mm

• Step: 0.1 mm

The default setting is "O" mm.

• Tray 3

- Max.: 2.0 mm
- Min.: -2.0 mm
- Step: 0.1 mm

The default setting is "O" mm.

- Tray 4
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.1 mm

The default setting is "0" mm.

- Tray 5
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.1 mm

The default setting is "0" mm.

- Tray 6
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.1 mm

The default setting is "0" mm.

- Tray 7
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.1 mm

The default setting is "0" mm.

- Tray 1 (Back Side)
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.1 mm

The default setting is "O" mm.

- Tray 2 (Back Side)
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.1 mm

The default setting is "0" mm.

- Tray 3 (Back Side)
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.1 mm

The default setting is "0" mm.

- Tray 4 (Back Side)
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.1 mm

The default setting is "O" mm.

- Tray 5 (Back Side)
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.1 mm

The default setting is "0" mm.

- Tray 6 (Back Side)
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.1 mm

The default setting is "0" mm.

- Tray 7 (Back Side)
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.1 mm

The default setting is "0" mm.




- If sheets are delivered face down, turn them over horizontally and check the image position.
- You can also use Frame Image to adjust image position: under [Select Test Pattern for image Position Adjustment], select [Frame Image].

0102: Adjust Image Position With Feed Direction


Adjust the vertical position of the printed image. Press [+] or [-] to move the image feed direction or reverse feed direction.

8


One-sided printing (Straight feeding)

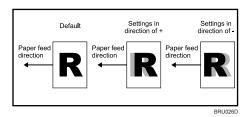

One-sided printing (reverse feeding)

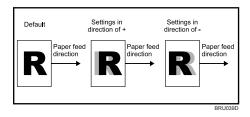

Duplex printing (Straight feeding)

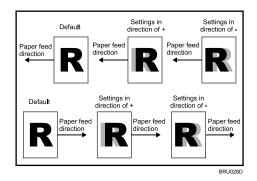

Same when feeding in reverse direction.

• Front Side

Max.: 2.0 mm

• Min.: -2.0 mm

• Step: 0.1 mm

The default setting is "0" mm.

• Back Side

• Max.: 2.0 mm

• Min.: -2.0 mm

• Step: 0.1 mm

The default setting is "0" mm.

Front Side (Slow Paper Feed Speed)

• Max.: 2.0 mm

• Min.: -2.0 mm

• Step: 0.1 mm

The default setting is "0" mm.

• Back Side (Slow Paper Feed Speed)

Max.: 2.0 mm

Min.: -2.0 mm

• Step: 0.1 mm

The default setting is "O" mm.



- If sheets are delivered face down, turn them over horizontally and check the image position.
- You can also use Frame Image to adjust image position: under [Select Test Pattern for image Position Adjustment], select [Frame Image].

0104: Adjust Magnification Across Feed Direction

Make the magnification ratio adjustment with more precision than can be done using the normal print setting. Press [+] to increase the magnification ratio, or [-] to decrease it.

• Front Side

• Max.: 0.3 %

Min.: -0.3 %

• Step: 0.1 %

The default setting is "0" %.

• Back Side

Max.: 0.3 %

• Min.: -0.3 %

• Step: 0.1 %

The default setting is "0" %.

0105: Adjust Magnification With Feed Direction

Use this to make the magnification ratio adjustment with more precision than can be done using the normal print setting. Press [+] to increase the magnification ratio, or [-] to decrease it. Note however that, the magnification adjustment setting for the back side is applied only if the copy paper's length (along the feed direction) is 330 mm (13.3 inches) or more.

• Front Side

Max.: 0.3 %

• Min.: -0.3 %

• Step: 0.1 %

The default setting is "0" %.

Back Side

Max.: 0.4 %

• Min.: -0.4 %

• Step: 0.1 %

The default setting is "0" %.



- Settings specified for the front side of sheets are applied to both the front and back side of each sheet;
 settings specified for the back sides of sheets are applied only to the back side of each sheet.
- If settings for both the front and back sides of sheets are specified, the magnification setting for the back side of each sheet is determined based on the value specified for "front side".

0106: Select Test Pattern for Image Position Adjustment

Select the test image used when adjusting the image position.

Copy Image

The scanned image is printed.

• Frame Image

The framed image is printed. The scanned image will not be printed.

0107: Adjust Toner Fusing Temperature

Adjust the toner fusing unit temperature according to the paper type/thickness. A higher temperature produces improves toner fixation. A lower Temperature reduces paper curl and corrugation but degrades toner fixation.

- Normal
- Higher
- High
- Lower
- Low

The default setting is "Normal".

0108: Adjust Paper Feed Speed

When using non-standard paper such as thick paper or special paper, select a paper feed speed that is suitable for the paper type.

Change this setting if adjusting [Adjust Toner Fusing Temperature] setting does not produce satisfactory results.

8

- Normal
- Slower
- Slow

The default setting is "Normal".



- The speed settings that are available vary according to the model series of your machine:
 - Pro907 series: "Normal" only.
 - Pro1107 series: "Normal" or "Slower" can be selected.

0109: Double Feed Detect

Specify whether or not to detect double or multiple sheet feeds. Setting can be made for each tray independently. If "On" is selected, the machine detects double or multiple sheet feeds, preventing blank sheets being mixed into the output paper.

If you are using special paper such as released paper, malfunctions might occur. If this happens, select "Off" and disable this function.

- Tray 1
 - On
 - Off

The default setting is "On".

- Tray 2
 - On
 - Off

The default setting is "On".

- Tray 3
 - On
 - Off

The default setting is "On".

- Tray 4
 - On
 - Off

The default setting is "On".

- Tray 5
 - On
 - Off

The default setting is "On".

- Tray 6
 - On
 - Off

The default setting is "On".

- Tray 7
 - On
 - Off

The default setting is "On".

When Double Feed is Detected

Specify how the machine responds when it detects a double feed.

- Suspended
- Auto Eject

The default setting is "Auto Eject".

0110: After Double Feed Paper is Automatically Ejected

Specify how the machine responds when it detects a double feed.

If you select [Continue Printing], the machine delivers the double fed sheets onto the proof tray, and then continues printing.

If you select [Suspended], the machine delivers the double fed sheets onto the proof tray, and then displays a message asking you if you want to continue or cancel printing. If you select [Suspended] for setting 0109, the machine will suspend printing regardless of the setting specified here.

- Continue Printing
- Suspended

The default setting is "Suspended".

0111: Auto Image Position Adjustment Across Feed Direction

Specify whether or not the machine automatically detects paper pathway deviations during the paper feeding process and adjusts the horizontal position of the print image accordingly. This setting can be specified for each tray independently.

This function relies on a sensor that receives light reflected from the paper's surface. For this reason, it might not work with non-reflective paper such as paper that is darkly colored, or with transparent film such as OHP transparencies, or with printed paper that has no margins. If this function does not work with the paper you have loaded, disable it by selecting "Off".

- Tray 1
 - On
 - Off

The default setting is "On".

- Tray 2
 - On
 - Off

The default setting is "On".

- Tray 3
 - On
 - Off

The default setting is "On".

- Tray 4
 - On
 - Off

The default setting is "On".

- Tray 5
 - On
 - Off

The default setting is "On".

- Tray 6
 - On
 - Off

The default setting is "On".

- Tray 7
 - On
 - Off

The default setting is "On".

- Back Side
 - On
 - Off

The default setting is "On".

0114: Adjust Wide LCT Fan Timer

Specify the duration of the airflow from the fans in each tray of the Wide LCT. This setting can be made for each tray independently. A longer duration will prevent multiple sheets of thick, coated, or other special paper being fed in together and becoming jammed.

Tray 4

This setting controls the duration of the airflow generated by the tray's fan. Press [+] or [-] to increase or decrease the duration of the airflow.

- Max.: 10 second (s)
- Min.: 1 second (s)
- Step: 1 second (s)

The default setting is "1" second (s).

• Tray 5

This setting controls the duration of the airflow generated by the tray's fan. Press [+] or [-] to increase or decrease the duration of the airflow.

- Max.: 10 second (s)
- Min.: 1 second (s)
- Step: 1 second (s)

The default setting is "1" second (s).

• Tray 6

This setting controls the duration of the airflow generated by the tray's fan. Press [+] or [-] to increase or decrease the duration of the airflow.

- Max.: 10 second (s)
- Min.: 1 second (s)
- Step: 1 second (s)

The default setting is "1" second (s).

0116: Adjust Image Quality

Use this function to clean the drum and prevent white spots appearing on the printed image.

0118: Temperature / Humidity around the Machine

Use this function to display the air temperature or humidity in the vicinity of the machine. Report this information if your service representative requests it.

- Temperature
- Humidity

0201: Adjust Staple Position / Finisher

Adjust the vertical position of stapling when using the optional finisher. Press [+] to move the position forward (up), or [-] to move it backward (down).

- A3 □
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.1 mm

The default setting is "0" mm.

- B4 JIS □
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.1 mm

The default setting is "0" mm.

- A4 □
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.1 mm

The default setting is "0" mm.

- A4 D
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.1 mm

The default setting is "0" mm.

- B5 JIS □
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.1 mm

The default setting is "0" mm.

- B5 JIS □
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.1 mm

The default setting is "0" mm.

- 11×17 □
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.1 mm

The default setting is "0" mm.

- 8¹/₂×14 □
 - Max.: 2.0 mm

• Min.: -2.0 mm

• Step: 0.1 mm

The default setting is "0" mm.

• 8¹/₂×11 □

• Max.: 2.0 mm

• Min.: -2.0 mm

• Step: 0.1 mm

The default setting is "0" mm.

• 8¹/₂×11 □

• Max.: 2.0 mm

• Min.: -2.0 mm

• Step: 0.1 mm

The default setting is "0" mm.

• Other Paper Sizes

Max.: 2.0 mm

Min.: -2.0 mm

• Step: 0.1 mm

The default setting is "O" mm.

0202: Adjust Punch Position With Feed Dir. / Finisher

Adjust the horizontal position of the punch holes when using the optional finisher. Press [+] to move the position closer to the bottom (right) relative to the paper feed direction, or [-] to move it closer to the top (left).

• 2 Holes Type JP / EU

• Max.: 7.5 mm

• Min.: -7.5 mm

• Step: 0.5 mm

The default setting is "O" mm.

• 3 Holes Type US

Max.: 7.5 mm

• Min.: -7.5 mm

• Step: 0.5 mm

The default setting is "O" mm.

• 4 Holes Type EU

Max.: 7.5 mm

• Min.: -7.5 mm

• Step: 0.5 mm

The default setting is "0" mm.

• 4 Holes Type NE

• Max.: 7.5 mm

• Min.: -7.5 mm

• Step: 0.5 mm

The default setting is "O" mm.

• 2 Holes Type US

Max.: 7.5 mm

• Min.: -7.5 mm

• Step: 0.5 mm

The default setting is "O" mm.

0301: Adjust Staple Position for Booklet

To use the optional booklet finisher, you must adjust the position of the booklet staples relative to the paper feed direction: Press [+] to move the staple position rightward (across horizontally-spreading pages), or press [-] to move it leftward.

• A3 □

Max.: 1.0 mm

• Min.: -1.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• B4 JIS □

• Max.: 1.0 mm

• Min.: -1.0 mm

• Step: 0.2 mm

The default setting is "O" mm.

• A4 □

• Max.: 1.0 mm

• Min.: -1.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• B5 JIS □

Max.: 1.0 mm

• Min.: -1.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

- 12×18 □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 13×19 □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

- 11×17 □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 8¹/₂×14 □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

- 8¹/₂×11 □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- Other Paper Sizes
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

0302: Adjust Folding Position for Booklet

To use the optional booklet finisher, you must adjust the position of the booklet staples relative to the paper feed direction: Press [+] to move the staple position rightward (across horizontally-spreading pages), or press [-] to move it leftward.

- A3 □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- B4 JIS □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- A4 □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

- B5 JIS □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 12×18 □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 13×19 □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

Q

- 11×17 □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 8¹/₂×14 □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 8¹/₂×11 □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- Other Paper Sizes
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

0303: Adjust Staple Position / Booklet Finisher

Adjusts the vertical position of the booklet staples when using the optional booklet finisher. Press [+] to move the position up (backward), and [-] to move it down (forward).

- A3 □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.5 mm

The default setting is "O" mm.

- B4 JIS □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.5 mm

The default setting is "O" mm.

• A4 □

- Max.: 1.0 mm
- Min.: -1.0 mm
- Step: 0.5 mm

The default setting is "0" mm.

- A4 D
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.5 mm

The default setting is "0" mm.

- B5 JIS □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.5 mm

The default setting is "0" mm.

- B5 JIS □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.5 mm

The default setting is "0" mm.

- 11×17 □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.5 mm

The default setting is "O" mm.

- 8¹/₂×14 □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.5 mm

The default setting is "0" mm.

- 8¹/₂×11 □
 - Max.: 1.0 mm
 - Min.: -1.0 mm

• Step: 0.5 mm

The default setting is "0" mm.

- 8¹/₂×11 □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.5 mm

The default setting is "O" mm.

- 8K □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.5 mm

The default setting is "O" mm.

- 16K □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.5 mm

The default setting is "O" mm.

- 16K □
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.5 mm

The default setting is "0" mm.

- Other Paper Sizes
 - Max.: 1.0 mm
 - Min.: -1.0 mm
 - Step: 0.5 mm

The default setting is "O" mm.

0304: Adjust Punch Position Across Feed Dir. / Booklet Finisher

Adjust the horizontal position of the punch holes when using the optional booklet finisher. Press [+] to move the position forward (up), or [-] to move it backward (down).

- 2 Holes Type JP / EU
 - Max.: 2.0 mm
 - Min.: -2.0 mm

• Step: 0.5 mm

The default setting is "0" mm.

- 3 Holes Type US
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.5 mm

The default setting is "0" mm.

- 4 Holes Type EU
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.5 mm

The default setting is "0" mm.

- 4 Holes Type NE
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.5 mm

The default setting is "O" mm.

- 2 Holes Type US
 - Max.: 2.0 mm
 - Min.: -2.0 mm
 - Step: 0.5 mm

The default setting is "0" mm.

0305: Adjust Punch Position With Feed Dir. / Booklet Finisher

Adjust the horizontal position of the punch holes when using the optional booklet finisher. Press [+] to move the holes toward the top edge (left), and [-] to move them toward the bottom edge (right) relative to the paper feed direction.

- 2 Holes Type JP / EU
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.5 mm

The default setting is "O" mm.

- 3 Holes Type US
 - Max.: 4.0 mm
 - Min.: -4.0 mm

• Step: 0.5 mm

The default setting is "0" mm.

- 4 Holes Type EU
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.5 mm

The default setting is "0" mm.

- 4 Holes Type NE
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.5 mm

The default setting is "0" mm.


- 2 Holes Type US
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.5 mm

The default setting is "O" mm.

0501: Adjust Z-fold Position 1

Adjust the width of the bottom end segment (s) of Z-fold sheets when using the optional Multi-Folding Unit. Press [+] to make the end segment wider, or [-] to make it narrower.

The O mark indicates the leading edge (relative to the paper feed direction), and the mark indicates the trailing edge.

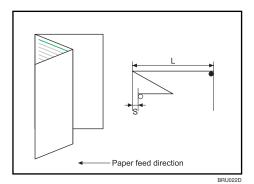

- A3 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm

- B4 JIS □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- A4 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

- 11×17 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 8¹/₂×14 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 8¹/₂×11 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 12×18 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

8K □

8

• Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "O" mm.

• Other Paper Sizes

Max.: 4.0 mm

• Min.: -4.0 mm


• Step: 0.2 mm

The default setting is "O" mm.

0502: Adjust Z-fold Position 2

Adjust the overall size (L) of Z-fold sheets when using the optional Multi-Folding Unit. Press [+] to increase the overall size, or [-] to reduce it.

The O mark indicates the leading edge (relative to the paper feed direction), and the mark indicates the trailing edge.

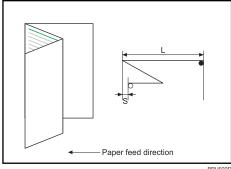

BRU0221

• A3 □

Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

B4 JIS □

Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "O" mm.

A4 □

- Max.: 4.0 mm
- Min.: -4.0 mm
- Step: 0.2 mm

- 11×17 🗗
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

- 8¹/₂×14 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 8¹/₂×11 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 12×18 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 8K □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

- Other Paper Sizes
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm


8

The default setting is "O" mm.

0503: Adjust Half Fold Position

Adjust the fold position (S) of half fold sheets when using the optional Multi-Folding Unit. Press [+] to move the fold to the right, or [-] to move to it left.

The O mark indicates the leading edge (relative to the paper feed direction), and the \bullet mark indicates the trailing edge.

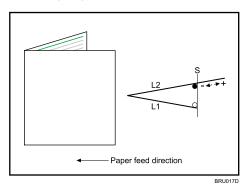

• A3 □

• Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

B4 JIS □

• Max.: 4.0 mm

Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• A4 □

• Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• 11×17 □

Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

- 8¹/₂×14 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

- 8¹/₂×11 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 12×18 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 8K □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- B5 JIS □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

- 13×19¹/₅ □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

- 13×19 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

- $12^3/_5 \times 19^1/_5 \square$
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- $12^3/_5 \times 18^1/_2 \square$
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 13×18 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- SRA3 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- SRA4 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 226×310 mm □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

• 310×432 mm □

• Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "O" mm.

• Other Paper Sizes

 Max.: 4.0 mm Min.: -4.0 mm

• Step: 0.2 mm


The default setting is "O" mm.

0504: Adjust Letter Fold-out Position 1

Adjust the fold position for the bottom segment (S2) of letter fold-out sheets when using the optional Multi-Folding Unit.

When you specify multifold, you cannot change the positions of the folds. Any adjusted settings will be cleared if you press [OK] when prompted to select multifold.

The O mark indicates the leading edge (relative to the paper feed direction), and the ● mark indicates the trailing edge.

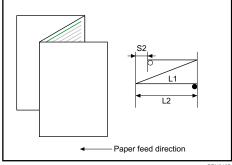

A3 □

Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "O" mm.

B4 JIS □

Max.: 4.0 mm

Min.: -4.0 mm

• Step: 0.2 mm

• A4 □

- Max.: 4.0 mm
- Min.: -4.0 mm
- Step: 0.2 mm

The default setting is "0" mm.

- 11×17 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 8¹/₂×14 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 8¹/₂×11 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 12×18 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 8K □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

- B5 JIS □
 - Max.: 3.0 mm
 - Min.: -3.0 mm

Step: 0.2 mm

The default setting is "0" mm.

• Other Paper Sizes

Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm


The default setting is "O" mm.

0505: Adjust Letter Fold-out Position 2

Adjust the overall fold size (L2) of letter fold-out sheets when using the optional Multi-Folding Unit.

When you specify multifold, you cannot change the overall size of the folds. Any adjusted settings will be cleared if you press [OK] when prompted to select multifold.

The ^O mark indicates the leading edge (relative to the paper feed direction), and the [●] mark indicates the trailing edge.

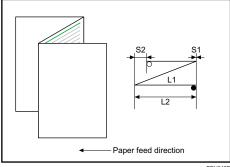

BRU045D

- A3 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- B4 JIS □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- A4 □
 - Max.: 4.0 mm

Q

- Min.: -4.0 mm
- Step: 0.2 mm

- 11×17 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 8¹/₂×14 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

- 8¹/₂×11 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 12×18 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 8K □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- B5 JIS □
 - Max.: 3.0 mm
 - Min.: -3.0 mm
 - Step: 0.2 mm

• Other Paper Sizes

Max.: 4.0 mm

• Min.: -4.0 mm


• Step: 0.2 mm

The default setting is "0" mm.

0506: Adjust Letter Fold-in Position 1

Adjust the fold position of the bottom segment (S) of letter fold-out sheets when using the optional Multi-Folding Unit.

The O mark indicates the leading edge (relative to the paper feed direction), and the \bullet mark indicates the trailing edge.

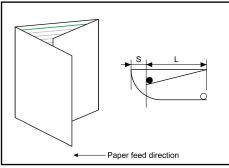

BRU018D

• A3 □

• Max.: 4.0 mm

Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

B4 JIS □

• Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• A4 □

Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• 11×17 □

Q

- Max.: 4.0 mm
- Min.: -4.0 mm
- Step: 0.2 mm

- 8¹/₂×14 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

- 8¹/₂×11 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 12×18 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 8K □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.


- B5 JIS □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

- Other Paper Sizes
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

0507: Adjust Letter Fold-in Position 2

Adjust the overall fold size (L2) of letter folded in sheets when using the optional Multi-Folding Unit.

The O mark indicates the leading edge (relative to the paper feed direction), and the ● mark indicates the trailing edge.

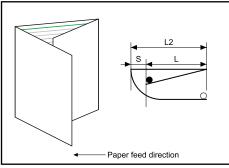

BRI IN46D

- A3 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- B4 JIS □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- A4 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 11×17 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

- 8¹/₂×14 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

- 8¹/₂×11 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

- 12×18 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 8K □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- B5 JIS □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm


The default setting is "0" mm.

- Other Paper Sizes
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

0508: Adjust Double Parallel Fold Position 1

Adjust the fold width for segment 1 of double parallel fold (S1) sheets when using the optional Multi-Folding Unit. Press [+] to increase the segment width (L1), or [-] to decrease it.

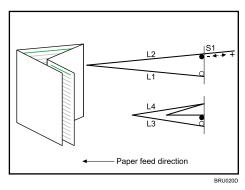

A3 □

Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• B4 JIS □

• Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• A4 □

Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• 11×17 🗗

Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• 8¹/₂×14 □

Max.: 4.0 mm

• Min.: -4.0 mm

8

• Step: 0.2 mm

The default setting is "O" mm.

- 8¹/₂×11 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

- 12×18 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

- 8K □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

- B5 JIS □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

- Other Paper Sizes
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

0509: Adjust Double Parallel Fold Position 2

Adjust the fold width of segment 2 of double parallel fold (S2) sheets when using the optional Multi-Folding Unit. Press [+] to increase the segment width (L3), or [-] to decrease.

The upper right illustration shows a partly opened, double parallel-folded sheet (folded in half), and the lower right illustration shows a fully folded sheet. The O mark indicates the leading edge (relative to the paper feed direction), and the lacktriangle mark indicates the trailing edge.

A3 □

• Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

B4 JIS □

Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• A4 □

Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• 11×17 🗗

• Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• 8¹/₂×14 □

• Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

8

- 8¹/₂×11 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

- 12×18 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

- 8K □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- B5 JIS □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- Other Paper Sizes
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

0510: Adjust Gate Fold Position 1

Adjust the fold position (S1) of segment 1 of gate fold sheets when using the optional Multi-Folding Unit.

The upper right illustration shows a partly opened, double parallel-folded sheet (folded in half), and the lower right illustration shows a fully folded sheet. The O mark indicates the leading edge (relative to the paper feed direction), and the \bullet mark indicates the trailing edge.

• A3 □

• Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

B4 JIS □

• Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• A4 □

• Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• 11×17 □

Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• 8¹/₂×14 □

Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

8

• 8¹/₂×11 □

Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "O" mm.

8K □

Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "O" mm.

B5 JIS □

Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• Other Paper Sizes

• Max.: 4.0 mm

• Min.: -4.0 mm


• Step: 0.2 mm

The default setting is "0" mm.

0511: Adjust Gate Fold Position 2

Adjust the fold position (S2) of segment 2 of gate fold sheets when using the optional Multi-Folding Unit.

The upper right illustration shows a partly opened, double parallel-folded sheet (folded in half), and the lower right illustration shows a fully folded sheet. The O mark indicates the leading edge (relative to the paper feed direction), and the lacktop mark indicates the trailing edge.

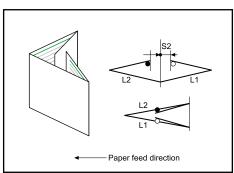

BRU048D

- A3 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

- B4 JIS □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- A4 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 11×17 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 8¹/₂×14 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

- 8¹/₂×11 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

- 8K □
 - Max.: 4.0 mm
 - Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• B5 JIS □

Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• Other Paper Sizes

Max.: 4.0 mm

• Min.: -4.0 mm


• Step: 0.2 mm

The default setting is "O" mm.

0512: Adjust Gate Fold Position 3

Adjust the fold position (S3) of segment 3 of gate fold sheets when using the optional Multi-Folding Unit.

The upper right illustration shows a partly opened, double parallel-folded sheet (folded in half), and the lower right illustration shows a fully folded sheet. The O mark indicates the leading edge (relative to the paper feed direction), and the mark indicates the trailing edge.

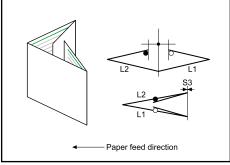

BRU049D

• A3 □

Max.: 4.0 mm

Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "O" mm.

B4 JIS □

Max.: 4.0 mm

• Min.: -4.0 mm

- A4 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 11×17 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

- 12×18 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 8¹/₂×14 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "O" mm.

- 8¹/₂×11 □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

- 8K □
 - Max.: 4.0 mm
 - Min.: -4.0 mm
 - Step: 0.2 mm

The default setting is "0" mm.

• B5 JIS □

Q

• Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

• Other Paper Sizes

• Max.: 4.0 mm

• Min.: -4.0 mm

• Step: 0.2 mm

The default setting is "0" mm.

0901: Reset All Adjustment Settings

Press [Start] to return the adjustment settings to their default values.

When Using Windows Terminal Service/Citrix Presentation Server/Citrix XenApp

The following explains how to use Windows Terminal Service and Maintenance.

Operating Environment

The following operating systems and Citrix Presentation Server/Citrix XenApp versions are supported.

Windows 2000 Server / Advanced Server

- Citrix Presentation Server 4.0
- Citrix XenApp 4.5

Windows server 2003/2003 R2

- Citrix Presentation Server 4.0
- Citrix XenApp 4.5

Supported Printer Drivers

When Windows Terminal Service is operating

- PCL drivers
- PostScript 3
- RPCS drivers



• Some RPCS printer driver functions do not work if Windows Terminal Service is installed.

Limitations

The following limitations apply to the Windows Terminal Service environment.

These limitations are built in Windows Terminal Service or Citrix Presentation Server/Citrix XenApp.

Windows Terminal Service

In the Windows Terminal Service environment, some of the printer driver's functions are unavailable. In an environment where Windows Terminal Service is installed, some of the printer driver's functions are available, even if any function of Windows Terminal Service is not used. When you install SmartDeviceMonitor for Client in an environment where the Terminal Service is running on the Windows 2000 Server family computer, be sure to install it using the install mode. The following are the two methods of installation using the install mode:

8

- 1. Use [Add/Remove Programs] in [Control Panel] to install SmartDeviceMonitor for Client.
- 2. Enter the following command in the MS-DOS command prompt:

CHANGE USER /INSTALL

To guit the install mode, enter the following command in the MS-DOS command prompt.

CHANGE USER /EXECUTE

Citrix Presentation Server/Citrix XenApp [Auto-creating client printers]

Using [Auto-creating client printers] can select a logical printer created by copying the client's local printer data to the MetaFrame server. We strongly recommend testing this function in your network environment before using it for your work.

- The settings for optional equipment will not be stored in the server after the equipment is
 disconnected. The settings for optional equipment will be restored to its defaults each time the
 client computer logs on to the server.
- When printing a large number of bitmap images or using the server in a WAN environment over dial-up lines such as ISDN, printing may not be possible or errors may occur, depending on data transfer rates.

Citrix Presentation Server/Citrix XenApp [Printer driver replication]

Using [Printer driver replication] can distribute printer drivers across all servers in a server farm. We strongly recommend testing this function in your network environment before using it for your work.

• If the printer drivers are not properly copied, install them directly onto each server.

Using DHCP

You can use the printer in a DHCP environment. You can also register the printer NetBIOS name on a WINS server when it is running.

- Printers that register the printer NetBIOS name on a WINS server must be configured for the WINS server.
- Supported DHCP servers are Microsoft DHCP Server included with Windows 2000 Server, and Windows Server 2003/2003 R2, and Windows Server 2008, and the DHCP server included with NetWare and UNIX.
- If you do not use the WINS server, reserve the printer's IP address in the DHCP server so the same IP address is assigned every time.
- To use the WINS server, change the WINS server setting to "active" using the control panel.
- Using the WINS server, you can configure the host name via the remote network printer port.
- DHCP relay-agent is not supported. If you use DHCP relay-agent on a network via ISDN, it will result
 in increased line charges. This is because your computer connects to the ISDN line whenever a packet
 is transferred from the printer.
- If there is more than one DHCP server, use the same setting for all servers. The machine operates using data from the DHCP server that responds first.
- DHCP servers can operate in an IPv6 environment, but they cannot be configured to allocate IPv6 addresses or obtain host names.

Using AutoNet

If the printer IPv4 address is not automatically assigned by the DHCP server, a temporary IP address starting with 169.254 and not used on the network can be automatically selected by the printer.



- The IP address assigned by the DHCP server is given priority over that selected by AutoNet.
- You can confirm the current IPv4 address on the configuration page.
- When AutoNet is running, the NetBIOS name is not registered on the WINS server.
- The machine cannot communicate with devices that do not have the AutoNet function. However, this
 machine can communicate with Macintosh computers running Mac OS X 10.2.3. or higher.

8

Configuring the WINS Server

This section explains configuring the WINS server.

The printer can be configured to register its NetBIOS name with a WINS server when the power is turned on. This enables the NetBIOS name of the printer to be specified from SmartDeviceMonitor for Admin even in a DHCP environment.



- The WINS server is supported with Windows 2000 Servers WINS Manager.
- For details about the WINS server settings, see Windows Help.
- If there is no reply from the WINS server, the NetBIOS name is registered by broadcast.
- The NetBIOS name can be entered using up to 13 alphanumeric characters.

Using Web Image Monitor

- 1. Start a Web browser.
- 2. Enter "http://(machine's IP address or host name) /" in the address bar to access the printer whose settings you want to change.

Top Page of Web Image Monitor appears.

3. Click [Login].

The dialog box for entering the user name and password appears.

4. Enter the user name and password, and then click [Login].

Contact your administrator for information about the settings.

- 5. In the left area, click [Configuration], and then click [Network].
- 6. Click [TCP/IP].
- Check that [Enable] is selected for [WINS] in the [Ethernet + Wireless LAN] column, and then
 enter the WINS server IPv4 address in [Primary WINS Server] and [Secondary WINS
 Server].
- 8. Click [Apply].
- 9. Quit Web Image Monitor.



• p.155 "Using Web Image Monitor"

Using telnet

You can also use telnet to configure WINS.

Use the "wins" command to make the setting with telnet.



• p.192 "Remote Maintenance by telnet"

8

Using the Dynamic DNS Function

Dynamic DNS is a function which dynamically updates (registers and deletes) records (A record, AAAA record, CNAME, and PTR record) managed by the DNS server. When a DNS server is part of the network environment to which this printer, a DNS client, is connected, records can be dynamically updated using this function.

Updating

Updating procedure varies depending on whether the printer IP address is static or acquired by DHCP.



• Dynamic update using message authentication (TSIG, SIG(0)) is not supported.

For a static IPv4 setting

If the IP address or host name is changed, the A and PTR records are updated. If the A record is registered, CNAME is also registered. CNAMEs that can be registered are as follows:

Ethernet and IEEE 802.11 a/b/g
 RNPXXXXXX (XXXXXX represents the last 3 hexadecimal bytes of the MAC address)
 However, if CNAME (PRNXXXXXX) overlaps with the host name, CNAME will not be registered.

For DHCPv4 settings

As a substitute for the printer, the DHCP server updates the record, and one of the following occurs:

- When the printer acquires the IP address from the DHCP server, the DHCP server updates the A
 and PTR records.
- When the printer acquires the IP address from the DHCP server, the printer updates the A record, and the DHCP server updates the PTR record.

If the A record is registered, CNAME is also registered. CNAMEs that can be registered are as follows:

• Ethernet and IEEE 802.11 a/b/g

RNPXXXXXX (XXXXXX represents the last 3 hexadecimal bytes of the MAC address)

For IPv6 settings

This machine updates the AAAA record and PTR record.

It also updates CNAME when the AAAA record is updated.

When a stateless address is newly set, it is automatically registered on the DNS server also.



- When the dynamic DNS function is not used, records managed by the DNS server must be updated manually, if the printer's IP address is changed.
- To update the record using the printer, the DNS server has to have one of the following:

- No security settings made.
- If security settings are made, an IP-specified client (this printer) permits updating.

DNS Servers Targeted for Operation

For static IP setting

- Microsoft DNS servers with standard Windows 2000 Server/Windows Server 2003/2003 R2/2008 features
- BIND 8.2.3 or higher

For DHCP setup, when the printer updates the A record

- Microsoft DNS servers with standard Windows 2000 Server/Windows Server 2003/2003 R2/2008 features
- BIND 8.2.3 or higher

For DHCP setup, when the DHCP server updates records

- Microsoft DNS servers with standard Windows 2000 Server/Windows Server 2003/2003 R2/2008 features
- BIND 8.2.3 or higher
- DNS servers with standard NetWare 5 (or a higher version) features

For IPv6 setting

- Microsoft DNS servers with standard Windows Server 2003/2003 R2/2008 features
- BIND 9.2.3 or higher

DHCP Servers Targeted for Operation

As a substitute for the printer, DHCP servers capable of updating the A record and PTR record are as follows:

- Microsoft DHCP servers with standard Windows 2000 Server (Service Pack 3 or higher versions)/ Windows Server 2003/2003 R2/2008 features
- ISC DHCP 3.0 or higher
- DHCP server with standard NetWare 5 features

Setting the Dynamic DNS Function

Make settings with telnet using the "dns" command.

Q

- Note
 - For details, see "Using telnet".
- Reference
 - p.192 "Remote Maintenance by telnet"

Precautions

Please pay attention to the following when using the network interface board. When configuration is necessary, follow the appropriate procedures below.

Connecting a Dial-Up Router to a Network

When using NetWare (file server)

If the NetWare file server and printer are on opposite sides of a router, packets are sent back and forth continuously, possibly incurring communications charges. Because packet transmission is a feature of NetWare, you need to change the configuration of the router. If the network you are using does not allow you to configure the router, configure the machine instead.

Configuring the router

Filter packets so they do not pass over the dial-up router.

Reference

- The MAC address of the filtering printer is printed on the printer configuration page.
- For more information about configuring the printer if the router cannot be configured, see the following
 instructions.

Configuring the printer with NetWare

- 1. Following the setup method described earlier in this manual, configure the file server.
- 2. Set the frame type for NetWare environment.



• For more information about selecting a frame type, see "Interface Settings".

Reference

• p.31 "Interface Settings"

Configuring the printer without NetWare

 When not printing, the network interface board sends packets over the network. Set NetWare to "inactive".

UNote

• For more information about selecting a protocol, see "Interface Settings".

Reference

• p.31 "Interface Settings"

When using network utility

If the machine is connected to a network, observe the following points when setting up the machine or changing settings:

For more details, see the operating instructions and Help for the ScanRouter delivery software and DeskTopBinder.

When a dial-up router is connected in a network environment

The settings for the delivery server to be connected must be made appropriately for the machine with the ScanRouter delivery software, Auto Document Link, or DeskTopBinder. In addition, set up connected devices using the I/O settings of the ScanRouter delivery software administration utility.

If the network environment changes, make the necessary changes for the delivery server using the machine, the administration utility of client computers, Auto Document Link, and DeskTopBinder. Also, set the correct information for the connected devices using the I/O settings of the ScanRouter delivery software administration utility.



If the machine is set up to connect to the delivery server via a dial-up router, the router will dial and
go online whenever a connection to the delivery server is made. Telephone charges may be incurred.

When connected to a computer that uses dial-up access

- Do not install the ScanRouter delivery software on a computer which uses dial-up access.
- When using the ScanRouter delivery software, DeskTopBinder, Auto Document Link, or a TWAIN driver on a computer with dial-up access, a dial-up connection may be performed when connecting to the delivery server and other equipment, depending on the setup. If the computer is set up to connect to the Internet automatically, the confirmation dialog box will not appear, and telephone charges may be incurred without your being aware of it. To prevent unnecessary connections, the computer should be set up so the confirmation dialog box always appears before establishing a connection. Do not make unnecessary connections when using the above listed software.

NetWare Printing



IPvó cannot be used on this function.

Form feed

You should not configure form feed on NetWare. Form feed is controlled by the printer driver on Windows. If NetWare form feed is configured, the printer might not work properly. If you want to change form feed settings, always configure them using Windows.

 Under Windows 2000/XP and Windows Server 2003/2003 R2, clear the [Form feed] check box on the [NetWare Settings] tab in the printer properties dialog box.

Banner page

You should not configure a banner page on NetWare. If you want to change the banner page setting, always configure it using Windows.

 Under Windows 2000/XP and Windows Server 2003/2003 R2, clear the [Enable banner] check box on the [NetWare Settings] tab in the printer properties dialog box.

Printing after resetting the machine

After resetting the remote printer, the connection from the print server will be cut off for about 30-40 seconds before re-connecting. Depending on the NetWare specification, print jobs may be accepted, but they will not be printed during this interval.

When using the machine as a remote printer, wait about two minutes after resetting before attempting to print.

8

When the IEEE 802.11 Interface Unit is Installed

Please pay attention to the following when using the IEEE 802.11 interface on the network.

When using the wireless LAN interface on the network, note the following:

When moving the machine

Detach the antennas when relocating the machine locally.

After moving the machine, reattach the antennas, ensuring that:

- The antennas are positioned clear of obstacles.
- There is 40 to 60 mm (1.6 to 2.4 inches) between the antennas, so that they do not touch.
- The exposure glass cover and the ADF do not knock the antennas.

If the network area provides poor radio environment

Where radio wave conditions are bad, the network may not function due to interrupted or failed connections. When checking the wireless LAN signal and the access point, follow the procedure below to improve the situation:

- Position the access point nearer to the machine.
- Clear the space between access point and machine of obstructions.
- Move radio wave generating appliances, such as microwaves, away from the machine and access point.



• For more information about access point radio wave conditions, refer to the access point manual.

Configuring IEEE 802.1X

IEEE 802.1X can be configured using Web Image Monitor's administrator mode. You can select four types of EAP authentication method: EAP-TLS, LEAP, EAP-TTLS and PEAP. Note that each EAP authentication method has different configuration settings and authentication procedures.

Types and requirements of certificates are as follows:

If a certificate is required, configure all settings after installing the certificate.

EAP Types Requiring a "Site Certificate"

EAP-TLS, EAP-TTLS, PEAP (Necessary except LEAP)

EAP Types Requiring a "Site Certificate" and a "Device Certificate"

EAP-TLS, PEAP (Phase 2 is for TLS only)

- To set IEEE 802.1X, you must enable SSL. For details about setting SSL configuration, see "Protection Using Encryption", Security Reference.
- To set IEEE 802.1X, you must use Web Image Monitor.

Installing a Site Certificate

- Access the authentication server and obtain the CA certificate.
 Methods of obtaining certificates differ according to the operating system you are using.
- Log on to Web Image Monitor in the administrator mode.
- 3. Click [Configuration].
- 4. [Site Certificate] in the "Security" area.
- Click [Browse] on the "Site Certificate to Import" window, and then select the CA certificate you obtained.
- 6. Click [Import].
- Check that the imported certificate's [Status] shows "Trustworthy".

If [Site Certificate Check] shows [Active], and the [Status] of the certificate shows [Untrustworthy], communication might not be possible.

- 8. Click [OK].
- 9. Click [Logout].
- 10. Quit the Web Image Monitor.

Q

Installing Device Certificate

- 1. Log on to Web Image Monitor in the administrator mode.
- 2. Click [Configuration].
- 3. Click [Device Certificate] in "Security" area.
- 4. Click [Certificate 2] on the "Device Certificate" window, and then click [Request].
- Enter appropriate "Common Name" and "Country Code" on "Certificate Information" page, and then click [OK].
- 6. "Updating..." appears. Wait for about 2 minutes, and then click [OK].
- Click [Details], shown in the "Device Certificate" window as the memo pad icon for "Requesting".
- 8. Select all, and then copy the entire "Text for Requested Certificate" text that is displayed in the "Certificate Status" window.
- Access the certificate authority server, and then obtain the CA signified certificate using the text copied into "Text for Requested Certificate" windows.
 - Obtaining the certificate differs depending on the environment you want to use.
- 10. Click [Certificate 2] on "Device Certificate" window, and then click [Install].
- 11. Using a text editor, open the CA signified certificate downloaded in step 9, and then copy over all the text.
- In the [Install Certificate] window, paste all the text copied into the CA signified certificate.
- 13. Click [OK].
- 14. "Updating..." appears. Wait for about one or two minutes, and then click [OK].
- 15. Check that the "Device Certificate" shows "Installed".
- 16. Click [Certificate 2] on "Certification", and then click [OK].
- 17. Click [Logout].
- 18. Quit Web Image Monitor.



- You request two certificates simultaneously, the certificate authority might not display either certificate.
 Click [Cancel Request] to cancel the request.
- You can select [Certificate 1-4] in the "Device Certificate" window. Note that if you select [Certificate 1] in the "Device Certificate" window, you must select "Certificate 1" in the "IEEE 802.1X (WPA/WPA2)" drop down menu in the "Certification" window.
- Click [Cancel Request] to cancel the request for the server certificate.
- If "Not found" appears after clicking [OK] in steps 6 and 14, wait one or two minutes, and then click [Refresh].

8

Setting Items of IEEE 802.1X for Ethernet

- 1. Log on to Web Image Monitor in the administrator mode.
- 2. Click [Configuration].
- 3. Select [IEEE 802.1X (WPA/WPA2)] in "Security" area.
- 4. In "User Name", enter the user name set in the RADIUS server.
- 5. Enter the domain name in "Domain Name".
- 6. Select "EAP Type". Configurations differ according to the EAP Type.

EAP-TLS

- Make the following settings according to the operating system you are using:
 - Select [On] or [Off] in "Authenticate Server Certificate".
 - Select [On] or [Off] in "Trust Intermediate Certificate Authority".
 - Enter the host name of the RADIUS server on "Server ID".

LEAP

• Click [Change] in "Password", and then enter the password set in the RADIUS server.

EAP-TTLS

- Click [Change] in "Password", and then enter the password set in the RADIUS server.
- Click [Change] in "Phase 2 User Name", and then enter the user name set in the RADIUS server.
- Select [CHAP], [MSCHAP], [MSCHAPv2], [PAP], or [MD5] in "Phase 2 Method".
- Certain methods might not be available, depending on the RADIUS server you want to use.
- Make the following settings according to the operating system you are using:
 - Select [On] or [Off] in "Authenticate Server Certificate".
 - Select [On] or [Off] in "Trust Intermediate Certificate Authority".
 - Enter the host name of the RADIUS server in "Server ID".

PEAP

- Click [Change] in "Password", and then enter the password set in the RADIUS server.
- Click [Change] on "Phase 2 User Name", and then enter the user name set in the RADIUS server.
- Select [MSCHAPv2] or [TLS] in "Phase 2 Method".
- When you select [TLS], you must install "IEEE 802.1X Client Certificate".
- Make the following settings according to the operating system you are using:
 - Select [On] or [Off] in "Authenticate Server Certificate".
 - Select [On] or [Off] in "Trust Intermediate Certificate Authority".
 - Enter the host name of the RADIUS server on "Server ID".

- 7. Click [OK].
- 8. Click [Configuration], and then click [Interface Settings] in the "Interface" area.
- 9. Select [Active] in "Ethernet Security".
- 10. Click [OK].
- 11. Click [Logout].
- 12. Quit the Web Image Monitor.



- If there is a problem with settings, you might not be able to communicate with the printer. To identify the problem, print a network summary.
- If you cannot identify the problem, reset the printer interface to normal, and then repeat the procedure from the beginning.

Setting Items of IEEE 802.1X for Wireless LAN

- 1. Log on to Web Image Monitor in the administrator mode.
- 2. Click [Configuration].
- 3. Select [IEEE 802.1X (WPA/WPA2)] in "Security" area.
- 4. In "User Name", enter the user name set in the RADIUS server.
- 5. Enter the domain name in "Domain Name".
- 6. Select "EAP Type". Configurations differ according to the EAP Type.

EAP-TLS

- Make the following settings according to the operating system you are using:
 - Select [On] or [Off] in "Authenticate Server Certificate".
 - Select [On] or [Off] in "Trust Intermediate Certificate Authority".
 - Enter the host name of the RADIUS server on "Server ID".

LEAP

• Click [Change] in "Password", and then enter the password set in the RADIUS server.

EAP-TTLS

- Click [Change] in "Password", and then enter the password set in the RADIUS server.
- Click [Change] in "Phase 2 User Name", and then enter the user name set in the RADIUS server.
- Select [CHAP], [MSCHAP], [MSCHAPv2], [PAP], or [MD5] in "Phase 2 Method".
- Certain methods might not be available, depending on the RADIUS server you want to use.
- Make the following settings according to the operating system you are using:
 - Select [On] or [Off] in "Authenticate Server Certificate".

- Select [On] or [Off] in "Trust Intermediate Certificate Authority".
- Enter the host name of the RADIUS server in "Server ID".

PEAP

- Click [Change] in "Password", and then enter the password set in the RADIUS server.
- Click [Change] on "Phase 2 User Name", and then enter the user name set in the RADIUS server.
- Select [MSCHAPv2] or [TLS] in "Phase 2 Method".
- When you select [TLS], you must install "IEEE 802.1X Client Certificate".
- Make the following settings according to the operating system you are using:
 - Select [On] or [Off] in "Authenticate Server Certificate".
 - Select [On] or [Off] in "Trust Intermediate Certificate Authority".
 - Enter the host name of the RADIUS server on "Server ID".
- 7. Click [OK].
- 8. Click [Configuration], and then click [Wireless LAN Settings] in the "Interface" area.
- 9. Select [Wireless LAN] in "LAN Type".
- 10. Select [Infrastructure Mode] in "Communication Mode".
- 11. Enter the alphanumeric characters (a-z, A-Z, or 0-9) in [SSID] according to the access point you want to use.
- 12. Select [WPA] in "Security Method".
- Select [TKIP] or [CCMP (AES)] in "WPA Encryption Method" according to the access point you want to use.
- 14. Select [WPA] or [WPA2] in "WPA Authentication Method".
- 15. Click [OK].
- 16. Click [Logout].
- 17. Quit the Web Image Monitor.



- If there is a problem with settings, you might not be able to communicate with the printer. To identify
 the problem, print a network summary.
- If you cannot identify the problem, reset the printer interface to normal, and then repeat the procedure from the beginning.

Q

Specifications

Interface	1000BASE-T, 100BASE-TX, 10BASE-T, IEEE 802.11 a/b/g	
Frame type	Ethernet II, IEEE 802.2, IEEE 802.3, SNAP	
Printer	TCP/IP (IPv4/IPv6)	
	LPR	
	RSH	
	RCP	
	DIPRINT	
	FTP	
	IPP	
	IPP-SSL	
	RHPP	
	IPX/SPX (NetWare)	
	AppleTalk	
	SMB	
	WSD (Printer)	
Network Scanner	IPv4/IPv6	
	FTP	
	FTP-C	
	SMTP	
	SMTP-C	
	POP3	
	SMB	
	NCP	

	WSD (Scanner)	
Document Server	TCP/IP (IPv4/IPv6)	
	FTP	
	FTP-C	
	НТТР	
	HTTPS	
Management Function	TCP/IP (IPv4/IPv6)	
	RSH	
	RCP	
	FTP	
	FTP-C	
	SNMP	
	SNMP-C	
	НТТР	
	HTTPS	
	TELNET (mshell)	
	NBT	
	DHCP	
	DNS	
	DNS-C	
	LDAP	

To use IPP and SMB, use the SmartDeviceMonitor for Client port.

To use IPP under Windows XP/Vista, Windows Server 2003/2003 R2/2008, use the Standard IPP port.

To use IPP under Windows 2000, use SmartDeviceMonitor for Client.

AppleTalk can be used when the PostScript 3 module is installed.

Under Windows Vista, or Windows Server 2008, WSD (Printer), WSD (Scanner), uses the WSD Port.

Only the rsh / rcp commands in the Unix OS standard command set are supported.

Copyrights

expat

- The software including controller, etc. (hereinafter "software") installed on this product uses the expat under the conditions mentioned below.
- The product manufacturer provides warranty and support to the software of the product including the
 expat, and the product manufacturer makes the initial developer and copyright holder of the expat,
 free from these obligations.
- Information relating to the expat is available at: http://expat.sourceforge.net/

Copyright (c) 1998, 1999, 2000 Thai Open Source Software Centre, Ltd. and Clark Cooper.

Copyright (c) 2001, 2002 Expat maintainers.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

NetBSD

1. Copyright Notice of NetBSD

For all users to use this product:

This product contains NetBSD operating system:

For the most part, the software constituting the NetBSD operating system is not in the public domain; its authors retain their copyright.

The following text shows the copyright notice used for many of the NetBSD source code. For exact copyright notice applicable for each of the files/binaries, the source code tree must be consulted.

A full source code can be found at http://www.netbsd.org/.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. All advertising materials mentioning features or use of this software must display the following acknowledgment:
 - This product includes software developed by The NetBSD Foundation, Inc. and its contributors.
- 4. Neither the name of The NetBSD Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE NETBSD FOUNDATION, INC. AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

2. Authors Name List

All product names mentioned herein are trademarks of their respective owners.

The following notices are required to satisfy the license terms of the software that we have mentioned in this document:

- This product includes software developed by the University of California, Berkeley and its contributors.
- This product includes software developed by Jonathan R. Stone for the NetBSD Project.
- This product includes software developed by the NetBSD Foundation, Inc. and its contributors.
- This product includes software developed by Manuel Bouyer.
- This product includes software developed by Charles Hannum.
- This product includes software developed by Charles M. Hannum.
- This product includes software developed by Christopher G. Demetriou.
- This product includes software developed by Tools GmbH.
- This product includes software developed by Terrence R. Lambert.
- This product includes software developed by Adam Glass and Charles Hannum.
- This product includes software developed by Theo de Raadt.

- This product includes software developed by Jonathan Stone and Jason R. Thorpe for the NetBSD Project.
- This product includes software developed by the University of California, Lawrence Berkeley Laboratory and its contributors.
- This product includes software developed by Christos Zoulas.
- This product includes software developed by Christopher G. Demetriou for the NetBSD Project.
- This product includes software developed by Paul Kranenburg.
- This product includes software developed by Adam Glass.
- This product includes software developed by Jonathan Stone.
- This product includes software developed by Jonathan Stone for the NetBSD Project.
- This product includes software developed by Winning Strategies, Inc.
- This product includes software developed by Frank van der Linden for the NetBSD Project.
- This product includes software developed for the NetBSD Project by Frank van der Linden.
- This product includes software developed for the NetBSD Project by Jason R. Thorpe.
- The software was developed by the University of California, Berkeley.
- This product includes software developed by Chris Provenzano, the University of California, Berkeley, and contributors.

Sablotron

Sablotron (Version 0.82) Copyright (c) 2000 Ginger Alliance Ltd. All Rights Reserved.

- a) The application software installed on this product includes the Sablotron software Version 0.82 (hereinafter, "Sablotron 0.82"), with modifications made by the product manufacturer. The original code of the Sablotron 0.82 is provided by Ginger Alliance Ltd., the initial developer, and the modified code of the Sablotron 0.82 has been derived from such original code provided by Ginger Alliance Ltd.
- b) The product manufacturer provides warranty and support to the application software of this product including the Sablotron 0.82 as modified, and the product manufacturer makes Ginger Alliance Ltd., the initial developer of the Sablotron 0.82, free from these obligations.
- c) The Sablotron 0.82 and the modifications thereof are made available under the terms of Mozilla Public License Version 1.1 (hereinafter, "MPL 1.1"), and the application software of this product constitutes the "Larger Work" as defined in MPL 1.1. The application software of this product except for the Sablotron 0.82 as modified is licensed by the product manufacturer under separate agreement (s).
- d) The source code of the modified code of the Sablotron 0.82 is available at: http://support-download.com/services/device/sablot/notice082.html
- e) The source code of the Sablotron software is available at: http://www.gingerall.com
- f) MPL 1.1 is available at: http://www.mozilla.org/MPL/MPL-1.1.html

JPEG LIBRARY

The software installed on this product is based in part on the work of the Independent JPEG Group.

SASL

CMU libsasl

Tim Martin

Rob Earhart

Rob Siemborski

Copyright (c) 2001 Carnegie Mellon University. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. The name "Carnegie Mellon University" must not be used to endorse or promote products derived from this software without prior written permission.

For permission or any other legal details, please contact:

Office of Technology Transfer

Carnegie Mellon University

5000 Forbes Avenue

Pittsburgh, PA 15213-3890

(412) 268-4387, fax: (412) 268-7395

tech-transfer@andrew.cmu.edu

 Redistributions of any form whatsoever must retain the following acknowledgment: "This product includes software developed by Computing Services at Carnegie Mellon University (http:// www.cmu.edu/computing/)."

CARNEGIE MELLON UNIVERSITY DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, IN NO EVENT SHALL CARNEGIE MELLON UNIVERSITY BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

MD4

Copyright (c) 1990-2, RSA Data Security, Inc. All rights reserved.

License to copy and use this software is granted provided that it is identified as the "RSA Data Security, Inc. MD4 Message-Digest Algorithm" in all material mentioning or referencing this software or this function.

License is also granted to make and use derivative works provided that such works are identified as "derived from the RSA Data Security, Inc. MD4 Message-Digest Algorithm" in all material mentioning or referencing the derived work.

RSA Data Security, Inc. makes no representations concerning either the merchantability of this software or the suitability of this software for any particular purpose. It is provided "as is" without express or implied warranty of any kind.

These notices must be retained in any copies of any part of this documentation and/or software.

MD5

Copyright (c) 1991-2, RSA Data Security, Inc. Created 1991. All rights reserved.

License to copy and use this software is granted provided that it is identified as the "RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing this software or this function.

License is also granted to make and use derivative works provided that such works are identified as "derived from the RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing the derived work.

RSA Data Security, Inc. makes no representations concerning either the merchantability of this software or the suitability of this software for any particular purpose. It is provided "as is" without express or implied warranty of any kind.

These notices must be retained in any copies of any part of this documentation and/or software.

Samba(Ver 3.0.4)

For SMB transmission, this machine uses Samba ver 3.0.4 (hereinafter referred to as Samba 3.0.4). Copyright (c) Andrew Tridgell 1994-1998.

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA.

- The source code for SMB transmission by this machine can be downloaded from the following website:
- http://support-download.com/services/scbs

RSA BSAFE®



- This product includes RSA BSAFE(c) cryptographic or security protocol software from RSA Security Inc.
- RSA and BSAFE are registered trademarks of RSA Security Inc. in the United States and/or other countries.
- RSA Security Inc. All rights reserved.

Open SSL

Copyright (c) 1998-2004 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. All advertising materials mentioning features or use of this software must display the following acknowledgment:
- "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (http://www.openssl.org/)"
- 4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact openssl-core@openssl.org.

- 5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
- 6. Redistributions of any form whatsoever must retain the following acknowledgment:

"This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (http://www.openssl.org/)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes cryptographic software written by Eric Young (eay@cryptsoft.com). This product includes software written by Tim Hudson (tjh@cryptsoft.com).

Original SSLeay License

Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com) All rights reserved.

This package is an SSL implementation written by Eric Young (eay@cryptsoft.com). The implementation was written so as to conform with Netscapes SSL.

This library is free for commercial and non-commercial use as long as the following conditions are aheared to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. All advertising materials mentioning features or use of this software must display the following acknowledgement: "This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)" The word 'cryptographic' can be left out if the rouines from the library being used are not cryptographic related :-).

4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence.

[including the GNU Public Licence.]

Open SSH

The licences which components of this software fall under are as follows. First, we will summarize and say that all components are under a BSD licence, or a licence more free than that.

OpenSSH contains no GPL code.

1)

Copyright (c) 1995 Tatu Ylonen <ylo@cs.hut.fi>, Espoo, Finland All rights reserved

As far as I am concerned, the code I have written for this software can be used freely for any purpose. Any derived versions of this software must be clearly marked as such, and if the derived work is incompatible with the protocol description in the RFC file, it must be called by a name other than "ssh" or "Secure Shell".

[Tatu continues]

However, I am not implying to give any licenses to any patents or copyrights held by third parties, and the software includes parts that are not under my direct control. As far as I know, all included source code is used in accordance with the relevant license agreements and can be used freely for any purpose (the GNU license being the most restrictive); see below for details.

[However, none of that term is relevant at this point in time. All of these restrictively licenced software components which he talks about have been removed from OpenSSH, i.e.,

- RSA is no longer included, found in the OpenSSL library
- IDEA is no longer included, its use is deprecated
- DES is now external, in the OpenSSL library
- GMP is no longer used, and instead we call BN code from OpenSSL

- Zlib is now external, in a library
- The make-ssh-known-hosts script is no longer included
- TSS has been removed
- MD5 is now external, in the OpenSSL library
- RC4 support has been replaced with ARC4 support from OpenSSL
- Blowfish is now external, in the OpenSSL library

[The licence continues]

Note that any information and cryptographic algorithms used in this software are publicly available on the Internet and at any major bookstore, scientific library, and patent office worldwide. More information can be found e.g. at "http://www.cs.hut.fi/crypto".

The legal status of this program is some combination of all these permissions and restrictions. Use only at your own responsibility. You will be responsible for any legal consequences yourself; I am not making any claims whether possessing or using this is legal or not in your country, and I am not taking any responsibility on your behalf.

NO WARRANTY

BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

2)

The 32-bit CRC compensation attack detector in deattack.c was contributed by CORE SDI S.A. under a BSD-style license.

Cryptographic attack detector for ssh - source code

Copyright (c) 1998 CORE SDI S.A., Buenos Aires, Argentina. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that this copyright notice is retained.

THIS SOFTWARE IS PROVIDED "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES ARE DISCLAIMED. IN NO EVENT SHALL CORE SDI S.A. BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OR MISUSE OF THIS SOFTWARE.

Ariel Futoransky <futo@core-sdi.com>

http://www.core-sdi.com

3)

One component of the ssh source code is under a 3-clause BSD license, held by the University of California, since we pulled these parts from original Berkeley code.

Copyright (c) 1983, 1990, 1992, 1993, 1995

The Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

4)

Remaining components of the software are provided under a standard 2-term BSD licence with the following names as copyright holders:

Markus Friedl

Theo de Raadt

Niels Provos

Dug Song

Kevin Steves

Daniel Kouril

Wesley Griffin

Per Allansson

Iason Downs

Solar Designer

Todd C. Miller

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

5)

Portable OpenSSH contains the following additional licenses:

c) Compatibility code (openbsd-compat)

Apart from the previously mentioned licenses, various pieces of code in the openbsd-compat/subdirectory are licensed as follows:

Some code is licensed under a 3-term BSD license, to the following copyright holders:

Todd C. Miller

Theo de Raadt

Damien Miller

Eric P. Allman

The Regents of the University of California

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Open LDAP

The OpenLDAP Public License Version 2.8, 17 August 2003.

Redistribution and use of this software and associated documentation ("Software"), with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions in source form must retain copyright statements and notices,
- 2. Redistributions in binary form must reproduce applicable copyright statements and notices, this list of conditions, and the following disclaimer in the documentation and/or other materials provided with the distribution, and
- 3. Redistributions must contain a verbatim copy of this document.

The OpenLDAP Foundation may revise this license from time to time. Each revision is distinguished by a version number. You may use this Software under terms of this license revision or under the terms of any subsequent revision of the license.

THIS SOFTWARE IS PROVIDED BY THE OPENLDAP FOUNDATION AND ITS CONTRIBUTORS "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OPENLDAP FOUNDATION, ITS CONTRIBUTORS, OR THE AUTHOR(S) OR OWNER(S) OF THE SOFTWARE BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The names of the authors and copyright holders must not be used in advertising or otherwise to promote the sale, use or other dealing in this Software without specific, written prior permission. Title to copyright in this Software shall at all times remain with copyright holders.

OpenLDAP is a registered trademark of the OpenLDAP Foundation.

Copyright (c) 1999-2003 The OpenLDAP Foundation, Redwood City, California, USA. All Rights Reserved. Permission to copy and distribute verbatim copies of this document is granted.

Heimdal

Copyright (c) 1997-2005 Kungliga Tekniska Högskolan (Royal Institute of Technology, Stockholm, Sweden). All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. Neither the name of the Institute nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE INSTITUTE AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE INSTITUTE OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

IPSTM print language emulations

Copyright (c) 1987-2006 Zoran Corporation. All rights reserved.

Trademarks

Microsoft®, Windows®, Windows Server®, and Windows Vista® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Adobe, Acrobat, Acrobat Reader, PostScript, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or countries.

Apple, AppleTalk, Bonjour, EtherTalk, Macintosh, Mac OS, and TrueType are registered trademarks of Apple Inc., registered in the U.S. and other countries.

Citrix[®] and MetaFrame[®] are registered trademarks of Citrix Systems, Inc.

IPS is a trademark or registered trademark of Zoran Corporation and/or its subsidiaries in the United States or other countries.

Linux[®] is the registered trademark of Linus Torvalds in the U.S. and other countries.

Monotype is a registered trademark of Monotype Imaging Inc.

NetWare, IPX, IPX/SPX are either registered trademarks or trademarks of Novell, Inc.

PCL® is a registered trademark of Hewlett-Packard Company.

The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Ricoh Company, Ltd is under license.

UNIX is a registered trademark in the United States and other countries, licensed exclusively through, X/ Open Company Limited.

UPnP is a trademark of the UPnP Implementers Corporation.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all right to those marks.

The proper names of the Windows operating systems are as follows:

*The product names of Windows 2000 are as follows:

Microsoft® Windows® 2000 Professional

Microsoft® Windows® 2000 Server

Microsoft® Windows® 2000 Advanced Server

*The product names of Windows XP are as follows:

Microsoft® Windows® XP Professional

Microsoft® Windows® XP Home Edition

Microsoft® Windows® XP Media Center Edition

Microsoft® Windows® XP Tablet PC Edition

*The product names of Windows Vista are as follows:

Microsoft® Windows Vista® Ultimate

Microsoft® Windows Vista® Business

Microsoft® Windows Vista® Home Premium

Microsoft® Windows Vista® Home Basic

Microsoft® Windows Vista® Enterprise

*The product names of Windows Server 2003 are as follows:

Microsoft® Windows Server® 2003 Standard Edition

Microsoft® Windows Server® 2003 Enterprise Edition

Microsoft® Windows Server® 2003 Web Edition

Microsoft® Windows Server® 2003 Datacenter Edition

*The product names of Windows Server 2003 R2 are as follows:

Microsoft® Windows Server® 2003 R2 Standard Edition

Microsoft® Windows Server® 2003 R2 Enterprise Edition

Microsoft® Windows Server® 2003 R2 Datacenter Edition

*The product names of Windows Server 2008 are as follows:

Microsoft® Windows Server® 2008 Standard

Microsoft® Windows Server® 2008 Enterprise

Microsoft® Windows Server® 2008 Datacenter

INDEX

A	Changing the adjustment settings for operators3	
Ad-hoc channel3		
Adding a group to another group313		
Address book27		
Address book change order4		
Address book edit title4		
Address book management4		
Address book program / change / delete group	Copier/Document server auto reset timer29	
	Copy count display20	
ADF feed speed2	Copyrights403	
ADF original table elevation2		
Adjustment settings for operators	,	
Administrator authentication management		
Administrator mode		
Administrator tools		
Administrator's e-mail address4	5 1 1161 . 1	
AOF	_	
Authentication information28		
Auto delete file in document server5	B. L	
Auto erase memory setting5	= 1 · · · · · · · · · · · · · · · · · ·	
Auto logout timer		
Auto off timer	Deleting a NCP folder312	
type 1	0 0	
type 22	3	
Auto specify sender name4	9	
AutoNet38		
В	Delivery option	
Back up / Restore address book4	Designation Sheet	
Bidirectional communication	114) /	
Binding glue heater auto off timer3	DITCI	
Bluetooth	. Direct servers largered for operation	
adding a printer33	Δ11C1 γ0	
	Didi-up rouler	
С	Direct printing331	
Capture server IP address3	Display / Clear / Print counter per user50	
Changing a FTP folder30	Display / Print counter49	
Changing a group name32	Display panel16	
Changing a NCP registered folder31	Displayed information253	
Changing a registered name28	Displaying names registered in a group318	
Changing a SMB folder30	Displaying the counter for each user289	
Changing an e-mail destination29	DNS configuration31	
Changing an user code28		

Document server	The second secon
Ethernet	
wireless LAN	IEEE 1284 interface108
Domain name32	IEEE 802.11 a/b/g interface
Double parallel fold position22	checking the signal
Dynamic DNS389	connecting
E	setup procedure
	IEEE 802.11 interface
e-mail114	IEEE 802.1X
E-mail	device certificate397 Ethernet398
Ethernet114	site certificate
wireless LAN115	wireless LAN 399
E-mail communication port41	IEEE 802.1X authentication for Ethernet33
E-mail destination293	
E-mail reception interval41	info251, 253
E-mail storage in server42	Input prime35
Effective protocol32	Interface settings31
energy saver timer28	Interleave print20
Enhanced external charge unit management51	IP address14
Erase all memory53	IPsec32
etherconfig	IPv4 gateway address31
Ethernet interface	IPv6 gateway address31
Ethernet speed	IPv6 stateless address autoconfiguration31
•	K
Extended security	
External charge unit management51	Key counter management51
F	Key repeat22
File transfer39	L
Firmware version53	LAN type34
Fixed USB port53	Laws and regulations15
ftp233, 251, 253, 266, 332	LDAP55
Function priority20	changing
Function reset timer20	deleting60
	programming55
G	LDAP authentication328
Gate fold position22	
General features19, 64	Legal prohibition15
Gigabit Ethernet interface105	Letter fold-in position22
Group	Letter fold-out position22
registering names to group315	Limitations
Guest mode158	Locating the NCP folder manually310
н	Locating the NCP folder using browse network
	310
Half fold position22	
Host name 24 221	

Locating the SMB folder using Browse Network	Network interface board configuration254
2	Network security level53
Login	Network settings
administrator mode	ille irdrisier140
Web Image Monitor	interface sellings133
lpr233, 3	Network TWAIN scanner
M	Ethernet127
A	wireless LAN
Machine data encryption settings	1 1010
Machine IPv4 address	INOTICEI Z
Machine IPv6 address	Number of scanner resenas43
Machine name	1N VV Trame type32
Machine status1	
Major Items	
Booklet finisher	Olipui copieizi
Decurler	Output document server21
Finisher	Output printer 21
LCT Multi-Folding Unit	Output tray
Multi-rolaing Unit Perfect Binder	.13
Ring Binder	10
Stacker Stacker	·
Trimmer	D 11 1
Wide LCT	.13 Panel off timer
Managing names in the address book2	Paper curl correction level22
Managing users and machine usage2	Б
Max. reception e-mail size	T 1 40 71
Message	Tray 2 73
<u> </u>	Irav 3/5
Monitoring printers	Tray 477
N	Tray 582, 84
NCP delivery protocol	Tray 6
NetWare	1ray /91, 93
banner page	11dy Cl301070
form feed	1rdy type Gb300097
printing3	Paper tray priority26
NetWare 3.x145, 1	Copier
NetWare 4.x146, 1	1 1111161
NetWare 5146, 147, 1	- uraller collilloriscation speed
NetWare 5.1146, 147, 1	raidici illoriaco
NetWare 6146, 147, 1	
	r eriili or vivir vo commonication
NetWare 6.5146, 147, 1	1 CHINI GOL / TEO COMMINIMICANOM
Network	Tilig collillaria
Network delivery scanner	POP before SMTP40
Ethernet	PUPS / IMIAPA Settings //U
wireless LAN1	LL

Precautions	392	status	233
Preventing unauthorized user access to		Printing commands	
folders from the machine		ftp	
Print address book destination list	47	lpr	
Print backup compression	53	rcp	
Print backup default format	53	sftp	
Print backup default resolution	53	Printing the counter for all users	
Print backup default user name	53	Printing the counter for each user	289
Print backup delete all files	53	prnlog	253
Print job information		Program / Change / Delete e-mail mess	
ftp	253		
info	253	Program / Change / Delete LDAP serve	
rcp	253	Program / Change / Delete realm	52
rsh	253	Program / Change / Delete User Text	19
sftp	253	Program / Change administrator	51
Print list	37	Pure IP environment	
Print log information		NetWare 5	147
ftp	253	NetWare 5.1	
prnlog		NetWare 6	
rcp		NetWare 6.5	147
rsh		Q	
sftp		O tut	
Print priority	20	Quitting tray paper settings	68
Print server	1.45	R	
NetWare 3.x NetWare 4.x		rcp233, 251, 253,	266 335
NetWare 5		Realm	
NetWare 5.1		changing	
NetWare 6		deleting	
NetWare 6.5		programming	
Printer		Reception protocol	
Ethernet		Registering a FTP folder	
wireless LAN		Registering a group	
Printer auto reset timer	29	Registering a NCP folder	
Printer configuration			
ftp	251	Registering a protection code	
info	251	Registering a protection code to a group	user
rcp		Registering a protection code to a single	
rsh	251		
sftp	251	Registering a SMB folder	
Printer server	143	Registering an e-mail destination	
Printer status		Registering an user code	
ftp	233	Registering folders	
lpr	233		
rcp	233	Registering names	
rsh		Registering names to a group	
sftp	233	Remote maintenance	192

Remote printer		restricting functions	176
NetWare 3.x	149	setting a password	
NetWare 4.x	151	spool print	181
NetWare 5	151	user information	172
NetWare 5.1	151	user management tool	173
NetWare 6	151	SmartDeviceMonitor for Client	183
NetWare 6.5	151	IPP	184
Removing a name from a group	319	machine status	184
Restore factory defaults	37	monitoring printers	183
Restore IEEE 802.1X authentication to de		SMB computer name	33
	33	SMB work group	33
rsh233, 251,	253, 266	SMTP authentication	
S		SMTP server	39
		SNMP	232
Scan to folder function		Specifications	
Ethernet		SSID setting	
wireless LAN		status	
Scanner auto reset timer	29		
Scanner resend interval time	43	Status indicator	
Screen color setting	21	Supported printer drivers	
Security method	36	Symbol	
Selection signal status	35	syslog	
Sending e-mail by quick dial	278	System auto reset timer	28
Sending scanned files to a shared folder		System log information	
		ftp	
Service mode lock	52	rcp	
Set date	29	rsh	
Set time	29	sftp	
Setting the dynamic DNS function	390	syslog	
Setting values		System settings	
sftp233, 251, 253,		System status/job list display time	21
Signal control		T	
SmartDeviceMonitor for Admin		. 1 .	100
address information		telnet 8021x	
comment		-	
energy save mode		accessappletalk	
exporting the information on about the number		authfree	
printed		autonet	
installing	169	bonjour	
locking the menus	171	btconfig	
machine status	179	devicename	
name	180	dhcp	
Network interface board	170	dhcp6	
new users		diprint	
number of sheets printed		dns	202
paper type		domainname	203
resetting the number of pages printed	174		

etherauth	204	Tray 2	
help	205	Back cover sheet tray	73
hostname	205	Cover sheet tray	73
ifconfig	205	Designation sheet	73
info	207	Paper thickness	73
IPP	207	Paper type	73
ipsec	208	Separation sheet tray	73
IPv6	208	Slip sheets tray	73
logout	208	Tray 3	
lpr	209	Back cover sheet tray	75
netware	209	Cover sheet tray	
passwd	210	Designation sheet	
pathmtu	211	Paper size	
prnlog	211	Paper thickness	
rhpp	213	Paper type	
route	212	Separation sheet tray	
set	214	Slip sheets tray	
show	217	Tray 4	
slp	217	Back cover sheet tray	77 70
smb	217	Cover sheet tray	
snmp	218	Designation sheet	
sntp	221	Designation Sheet	
spoolsw	222	Paper settings	
ssdp	223	Paper size	
ssh	223	Paper thickness	
status	224	Paper type	
syslog	224	Separation sheet tray	
upnp	224	Slip sheets tray	
web			//,/
wiconfig	225	Tray 5	00.0
wins	229	Back cover sheet tray	
wsmfp		Cover sheet tray	
Time interval between printing jo		Designation sheet	
		Designation Sheet	
Timer settings		Paper size	
Top Page		Paper thickness	•
Trademarks	416	Paper type	
Transfer log setting	53	Separation sheet tray	
Tray 1		Slip sheets tray	82, 84
Back cover sheet tray	69, 71	Tray 6	
Cover sheet tray	69, 71	Back cover sheet tray	87, 88
Designation sheet	69, 71	Cover sheet tray	87, 88
Paper size	69, 71	Designation Sheet	
Paper thickness	69, 71	Paper size	
Paper type		Paper thickness	,
Separation sheet tray		Paper type	87, 88
Slip sheets tray		Separation sheet tray	87, 88
tray 2		Slip sheets tray	87, 88
Paper size	73	Tray 7	

Back cover sheet tray	
Cover sheet tray	91, 93
Designation Sheet	93
Paper size	91, 93
Paper thickness	91, 93
Paper type	91, 93
Separation sheet tray	91, 93
Slip sheets tray	91, 93
Tray CI5010	
Paper size	96
Tray paper setting	
Tray paper settings	
, , ,	07, 09
Tray type GB5000 Paper size	07
two machines during connect copy	
Two machines during connect copy	98
U	
Updating	
USB interface	107
User authentication management	50
User tools	17
change the settings	17
quit the settings	
V	
Virtual printer	332
w	
vv	
Warm-up beeper	20
Web Image Monitor	155
account for e-mail notification	
administrator mode	158
auto e-mail notification	189
e-mail notification	186
Format of on-demand e-mail messages	191
guest mode	
help	
log out	
login	
mail authentication	
menu	
mode	
on-demand e-mail notification	
setting items	
top page	
weekly time code	29

Weekly timer	
, Monday - Sunday	30
Windows Terminal Service	384
WINS configuration	32
WINS server	387
telnet	387
Web Image Monitor	387
Wireless LAN	35, 395
Wireless LAN interface	
checking the signal	110
connecting	109
setup procedure	109
Wireless LAN signal	37
WSD scanner	
Ethernet	124
wireless LAN	125
Z	
Z-fold position	22

MEMO

MEMO

MEMO

428 EN USA D060



