


Operating Instructions Troubleshooting



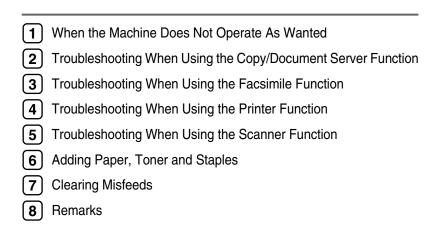

Read this manual carefully before you use this machine and keep it handy for future reference. For safe and correct use, be sure to read the Safety Information in "About This Machine" before using the machine.

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Notes:

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer. Depending on which country you are in, certain units may be optional. For details, please contact your local dealer.

Caution:

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

For good copy quality, the supplier recommends that you use genuine toner from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

Power Source

220-240 V, 50/60 Hz, 10 A or more.

Please be sure to connect the power cord to a power source as shown above. For details about power source, see p.125 "Power Connection".

Manuals for This Machine

Refer to the manuals that are relevant to what you want to do with the machine.

∰Important

- □ Media differ according to manual.
- **D** The printed and electronic versions of a manual have the same contents.
- □ Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.
- Depending on which country you are in, there may also be html manuals. To view these manuals, a Web browser must be installed.

* About This Machine

Be sure to read the Safety Information in this manual before using the machine.

This manual provides an introduction to the functions of the machine. It also explains the control panel, preparation procedures for using the machine, how to enter text, and how to install the CD-ROMs provided.

Troubleshooting

Provides a guide to solving common problems, and explains how to replace paper, toner, and other consumables.

Copy/Document Server Reference

Explains Copier and Document Server functions and operations. Also refer to this manual for explanations on how to place originals.

✤ Facsimile Reference

Explains Facsimile functions and operations.

Printer Reference

Explains Printer functions and operations.

Scanner Reference

Explains Scanner functions and operations.

Network Guide

Explains how to configure and operate the machine in a network environment, and use the software provided.

This manual covers all models, and includes descriptions of functions and settings that might not be available on this machine. Images, illustrations, and information about operating systems that are supported might also differ slightly from those of this machine.

General Settings Guide

Explains User Tools settings, and Address Book procedures such as registering fax numbers, e-mail addresses, and user codes. Also refer to this manual for explanations on how to connect the machine.

✤ Security Reference

This manual is for administrators of the machine. It explains security functions that you can use to prevent unauthorized use of the machine, data tampering, or information leakage. For enhanced security, we recommend that you first make the following settings:

- Install the Device Certificate.
- Enable SSL (Secure Sockets Layer) Encryption.
- Change the user name and password of the administrator using Web Image Monitor.

For details, see "Setting Up the Machine", Security Reference.

Be sure to read this manual when setting the enhanced security functions, or user and administrator authentication.

PostScript 3 Supplement

Explains how to set up and use PostScript 3.

UNIX Supplement

For "UNIX Supplement", please visit our Web site or consult an authorized dealer.

Other manuals

- Manuals for DeskTopBinder Lite
 - DeskTopBinder Lite Setup Guide
 - DeskTopBinder Introduction Guide
 - Auto Document Link Guide

🖉 Note

- □ Manuals provided are specific to machine types.
- "PostScript3 Supplement" and "UNIX Supplement" include descriptions of functions and settings that might not be available on this machine.
- **D** The following software products are referred to using general names:

Product name	General name
DeskTopBinder Lite and DeskTopBinder Professional ^{*1}	DeskTopBinder

*1 Optional

TABLE OF CONTENTS

Manuals for This Machinei	i
How to Read This Manual1	
Symbols1	

1. When the Machine Does Not Operate As Wanted

Indicators	3
Panel Tone	
Checking Machine Status and Settings	5
When the Function Status Indicator Lights Up in Red	
When You Have Problems Operating the Machine	
When a Job Is Not Performed	

2. Troubleshooting When Using the Copy/Document Server Function

Messages Displayed When Using the Copy/Document Server Function17	
When You Cannot Make Clear Copies	22
When You Cannot Make Copies As Wanted	24
Display During Connect Copy	29
If Connect Copy Is Canceled	29
If You Cannot Exit from Connect Copy	
When Memory Is Full	

3. Troubleshooting When Using the Facsimile Function

Adjusting the Volume	33
Messages Displayed When Using the Facsimile Function	35
When You Cannot Send or Receive Fax Messages as Wanted	43
When Memory Is Full	
When an Error Report Is Printed	47
Turning Off the Main Power / In the Event of Power Failure	48
When an Error Occurs Using Internet Fax	49
Error Mail Notification	49
Error Report (E-Mail)	49
Server-Generated Error E-mail	49

4. Troubleshooting When Using the Printer Function

When You Cannot Connect to the USB Interface	51
Messages Displayed When Installing the Printer Driver	
Windows 2000	
Windows XP, Windows Server 2003	53
Windows Vista	53
Messages Displayed When Using the Printer Function	54
Status Messages	
Messages Displayed on the Control Panel When Using the Printer Function	
Messages Printed on the Error Logs or Reports	56
Checking the Error Log	62

When You Cannot Print	63
When the Data In Indicator Does Not Light Up or Flash	65
Other Printing Problems	66

5. Troubleshooting When Using the Scanner Function

When Scan Results Are Not As Expected	71
When You Cannot Send Scanned Files	72
When Stored Files Cannot Be Accessed	72
When You Cannot Browse the Network to Send a Scan file	72
When the TWAIN Driver Cannot Be Started	72
When Stored Files Cannot Be Edited	73
When the Network Delivery Function Cannot Be Used	73
Operations Are Not Possible When Messages Are Displayed	73
Messages Displayed When Using the Scanner Function	74
When a Message Is Displayed on the Control Panel	
When a Message Is Displayed on the Client Computer	

6. Adding Paper, Toner and Staples

Loading Paper	85
Loading Paper into Tray 1 (Tandem Tray)	
Loading Paper into Tray 2 and 3	
Loading Paper into the Large Capacity Tray (LCT)	
Loading Paper in the Interposer	89
Changing the Paper Size	92
Changing the Paper Size in Tray 2 and 3	
Adding Toner	97
Inserting Toner	
Used Toner	
Sending Fax Messages When Toner Has Run Out	99
Adding Staples	
3,000 Sheet-50 Sheet Staple Finisher and Booklet Finisher	
3,000 Sheet-100 Sheet Staple Finisher	
Booklet Finisher (Saddle Stitch)	

7. Clearing Misfeeds

Removing Jammed Paper	
Locating Jammed Paper	
When A Is lit	
When B Is lit	
When C Is lit	
When D Is lit	
When E Is lit	
When F Is lit	
When N Is Lit	
When P Is Lit	
When Q Is lit	
When R Is Lit	
When W Is lit	
When U Is lit	

Removing Jammed Staples	116
3,000 Sheet-50 Sheet Staple Finisher and Booklet Finisher	
3,000 Sheet-100 Sheet Staple Finisher	
Booklet Finisher (Saddle Stitch)	
Removing Punch Waste	119
3,000 Sheet-50 Sheet Staple Finisher and Booklet Finisher	119
3,000 Sheet-100 Sheet Staple Finisher	120

8. Remarks

Where to Put Your Machine	
Machine Environment	-
Moving	
Power Connection	
Access to the Machine	
Maintaining Your Machine	
Cleaning the Exposure Glass	
Cleaning the Exposure Glass Cover	
Cleaning the Auto Document Feeder	129
INDEX	130

How to Read This Manual

Symbols

This manual uses the following symbols:

A WARNING:

Indicates important safety notes.

Ignoring these notes could result in serious injury or death. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

A CAUTION:

Indicates important safety notes.

Ignoring these notes could result in moderate or minor injury, or damage to the machine or to property. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

∰Important

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

🔗 Note

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

PReference

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[]

Indicates the names of keys that appear on the machine's display panel.

Indicates the names of keys on the machine's control panel.

1. When the Machine Does Not Operate As Wanted

This chapter describes basic troubleshooting procedures that are applicable to all functions of this machine.

Indicators

This section describes Indicators displayed when the machine requires the user to remove misfed paper, add paper, or perform other procedures.

° 小 : Misfeed indicator	Appears when a misfeed occurs. See p.103 "Removing Jammed Paper".
🛓: Add Paper indicator	Appears when paper-out condition occurs. See p.85 "Loading Paper".
よ: Add Toner indicator	Appears when toner runs out. See p.97 "Adding Toner".
📩: Add Staple indicator	Appears when staples run out. See p.116 "Removing Jammed Staples".
Empty Hole Punch Receptacle indicator	Appears when the hole punch receptacle is full. See p.119 "Removing Punch Waste"
1 : Service Call indicator	Appears when the machine is malfunctioning or re- quires maintenance.
□ *: Open Cover indicator	Appears when the front cover, etc., is open.

Panel Tone

The following table describes the meaning of the various beep patterns that the machine produces to alert users about left originals and other machine conditions.

Beep pattern	Meaning	Cause
Two long beeps.	Machine has warmed up.	A control panel or screen key was pressed. Single short beeps are pro- duced only when valid keys are pressed.
Single short beep.	Panel/screen input ac- cepted.	A control panel or screen key was pressed. Single short beeps are pro- duced only when valid keys are pressed.
Single long beep.	Job completed.	A Copier / Document Server Features job has finished.
Five long beeps.	Soft alert.	The screen is changing back to the ini- tial screen after the machine came out of energy-saving mode or was reset.
Five long beeps repeated four times.	Soft alert.	An original has been left on the expo- sure glass.
Five short beeps repeated five time.	Strong alert.	Machine requires user attention. Paper might have jammed or toner might need replenishing.

🖉 Note

□ Users cannot mute the machine's beep alerts. When the machine beeps to alert users of a paper jam or toner request, if the machine's covers are opened and closed repeatedly within a short space of time, the beep alert might continue, even after normal status has resumed.

Reference

For details about enabling or disabling beep alerts, see "System Settings", General Settings Guide.

Checking Machine Status and Settings

You can check the machine's system status.

Maintenance Info

You can check the following items under [Maintenance Info]:

- [Remaining Toner] Displays the amount of remaining toner.
- **[No Staples]** Displays the amount of remaining staples.
- [Punch Receptacle Full] Displays whether the hole punch receptacle is full.
- **[Paper Tray]** Displays the paper type and size loaded in the paper tray.
- **[Output Tray Full]** Displays whether the output tray is overloaded.
- **[Original Misfeed]** Displays state of and solutions for original misfeeds.
- **[Paper Misfeed]** Displays state of and solutions for paper jams.
- [Cover Open] Indicates whether front cover, duplex unit, etc, is open.

✤ Data Storage

You can check the following items under [Data Storage]:

- [HDD Remaining Memory] Displays the amount of available hard disk drive memory.
- [HDD File(s)] Displays the total number of jobs stored in the hard disk drive.
- [Print Job(s)] Displays the number of jobs for Hold print/Stored print/Locked print/Sample print.
- [Fax TX / RX File(s)] Displays the number of TX standby files, Print memory lock files, Reception print files, and other files stored in the hard disk drive.
- [Memory Erase Status] Displays the state of the memory data.

Machine Address Info

You can check the following items under [Machine Address Info]:


- [Fax No.] Displays the machine's fax number.
- **[H.323 Own Fax No.]** Displays the machine's alias telephone number.
- [SIP User Name] Displays the machine's SIP user name.
- [Fax E-mail Account] Displays the machine's fax e-mail account.
- [Machine IPv4 Address] Displays the machine's IPv4 address.
- [Machine IPv6 Address] Displays the machine's IPv6 address.

Enquiry


You can check the following items under [Enquiry]:

- [Machine Repairs] Displays the machine number and contact number that are required for service.
- [Sales Representative] Displays the sales representative's telephone number.
- [Supply Order] Displays the contact number for placing supply orders.
- **[Supply Details]** Displays the name of toner, staples, etc, used on the machine.


1 On the control panel, press [System Status].

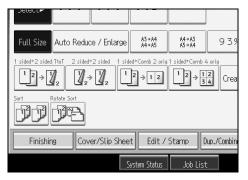

2 Press each tab and check the contents.

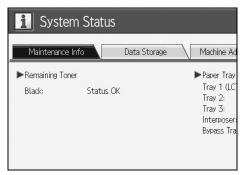

After checking the information, press [Exit]. The previous screen returns.

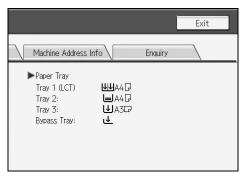

🖉 Note

- □ [No Staple], [Punch Receptacle Full], [Output Tray Full], [Original Misfeed], [Paper Misfeed], and [Cover Open] appear only when these errors occur.
- □ For details about how to locate and remove misfeeds, see "Locating Jammed Paper" or "Removing Jammed Paper".

Reference

p.104 "Locating Jammed Paper".

p.103 "Removing Jammed Paper".

When the Function Status Indicator Lights Up in Red

When an indicator to the right of a function key lights up, press the corresponding function key. Then, follow the instructions displayed on the control panel.

Problem	Cause	Solution
Documents and reports do not print out.	The paper output tray is full.	Remove the paper from the tray.
Documents and reports do not print out.	There is no copy paper left.	Add more paper. See p.85 "Loading Paper".
An error has occurred.	The function whose indi- cator is lit is defective.	Record the code number shown in the display and contact your service repre- sentative. See "When a Message Ap- pears" of each chapter. You can use other functions normally.
The machine is unable to connect to the network.	A network error has oc- curred.	 Check the displayed message and take an appropriate action. See "When a Message Appears" of each chapter. Check that the machine is correctly connected to the network, and that the machine is correctly set. See "Network Settings", General Settings Guide. Contact the administrator. When the function key is still lit, even if you take the measures above, contact your service representative.

🖉 Note

□ If an error occurs in the function you are using, check the message that appears on the control panel, and then refer to "When a Message is Displayed" for the relevant function.

PReference

p.17 "Messages Displayed When Using the Copy/Document Server Function".

- p.35 "Messages Displayed When Using the Facsimile Function".
- p.52 "Messages Displayed When Installing the Printer Driver".
- p.74 "Messages Displayed When Using the Scanner Function".

When You Have Problems Operating the Machine

The following chart gives explanations of common problems and messages. If other messages appear, follow the instructions displayed.

∰Important

□ Check the contact address and Serial No. of Machine shown in the call service message, and then contact your service representative.

Problem	Cause	Solution
"Please wait." appears.	This message appears when you turn on the op- eration switch.	Wait for the machine to get ready.
"Please wait."ap- pears.	This message appears when you change the ton- er bottle.	Wait for the machine to get ready.
Although the copier screen appears when the machine is turned on us- ing the main power switch, it cannot be switched to another screen by pressing the [Printer] or [Scanner] key.	Functions other than the copier function are not yet ready.	Wait a little longer.
The machine has just been turned on and the User Tools screen is dis- played, but the User Tools menu has items missing.	Functions other than the copier function are not yet ready. Time required varies by function. Func- tions appear in the User Tools menu when they become ready for use.	Wait a little longer.
The display is off.	The screen contrast knob is turned to the dark posi- tion.	Set the screen contrast knob to the light position to see the display panel prop- erly. See "Control Panel", About This Machine.
The display is off.	The machine is in Energy Saver mode.	Press the [Energy Saver] key to cancel Energy Saver Mode.
The display is off.	The operation switch is turned off.	Turn on the operation switch.
Nothing happens when the operation switch is turned on.	The main power switch is turned off.	Turn on the main power switch.

Problem	Cause	Solution
"Memory is full. Do you want to store scanned file?" appears.	The scanned originals ex- ceed the number of sheets/pages that can be stored in the hard disk.	 Press [Store File] to store pages that have been scanned. Delete unneces- sary files with [Delete File]. Press [No] if you are not storing pag- es that have been scanned. Delete unnecessary files with [Delete File].
The main power indica- tor continues blinking and does not turn off when pressed.	 This occurs in the following cases: The exposure glass cover or ADF is open. The machine is communicating with external equipment. The hard disk is active. 	Close the exposure glass cover or ADF, and check if the machine is communi- cating with a computer.
"Self checking" appears.	The machine is perform- ing image adjustment op- erations.	The machine may perform periodic maintenance during operations. The frequency and duration of maintenance depends on the humidity, temperature, and printing factors such as number of prints, paper size, and paper type. Wait for the machine to get ready.
Original images are printed on the reverse side of the paper.	You may have loaded the paper incorrectly.	Load paper correctly. Place paper in the paper tray with the print side down. Load paper into the bypass tray with the print side up. See p.91 "Orientation- Fixed Paper or Two-Sided Paper".
Misfeeds occur frequently.	The tray's side fence may not be locked.	 Remove the paper. See p.103 "Removing Jammed Paper". Check the side fence is locked. See p.92 "Changing the Paper Size".
Misfeeds occur frequently.	The tray's end fence may not be set properly.	 Remove the paper. See p.103 "Removing Jammed Paper". Check the end fence is set properly. See p.92 "Changing the Paper Size".
Misfeeds occur frequently.	Paper of undetectable size has been loaded.	 Remove the paper. See p.103 "Removing Jammed Paper". When loading the paper of undetectable size, specify the paper size in "Tray Paper Size". See "Tray Paper Size: Tray 2", "Tray Paper Size: Tray 3", General Settings Guide and "Copy Paper", About This Machine.
Misfeeds occur frequently.	There is a foreign object on the finisher tray.	 Remove the paper. See p.103 "Removing Jammed Paper". Do not place anything on the finisher tray. It may cause a paper jam.

Problem	Cause	Solution
Misfeeds occur frequently.	The staple cartridge is not set correctly.	The Booklet Finisher requires the sad- dle stitch stapler cartridge also. See p.100 "Adding Staples".
An error message re- mains, even if misfed pa- per is removed.	 When a misfeed message appears, it remains until you open and close the cover as required. Paper is still jammed in the tray. 	Clear misfed paper, and then open and close the front cover. see p.103 "Remov- ing Jammed Paper".
Cannot print in duplex mode.	You cannot use paper in the bypass tray for du- plex printing.	For duplex printing, select Tray 1-3 in copier mode or with the printer driver.
Cannot print in duplex mode.	You have selected a tray which is set to [1 Sided Copy] in [Tray Paper Set- tings] in [System Settings].	Set the tray to [2 Sided Copy] in [Tray Pa- per Settings] in [System Settings] .
The user code entry screen is displayed.	Users are restricted by user management.	Enter the user code (up to eight digits), and then press [#] .
The Authentication screen appears.	Basic Authentication, Windows Authentica- tion, LDAP Authentica- tion or Integration Server Authentication is set.	Enter your login user name and user password. See "When the Authentica- tion Screen is Displayed", About This Machine.
"You do not have the privileges to use this func- tion." is displayed.	The use of the function is restricted to authenticated users only.	Contact the administrator.
"You do not have the privileges to use this func- tion." continues to be displayed even though you have entered a valid user code.	This user code is not al- lowed to use the function selected.	Press the [Energy Saver] key. Confirm that the display goes off, and then press the [Energy Saver] key again. The dis- play will return to the user code entry display. When printing under the copi- er or printer function, press the [Energy Saver] key only after printing has fin- ished.
Authentication failed.	The entered login user name or login password is not correct.	Inquire the user administrator for the correct login user name and login pass-word.
Authentication failed.	The machine cannot per- form authentication.	Contact the administrator.
The selected file(s) con- tained file(s) without ac- cess privileges. Only file(s) with access privi- leges will be deleted.	You have tried to delete files without the authori- ty to do so.	Files can be deleted by the person who created the file. To delete a file which you are not authorized to delete, con- tact the person who created the file.

🖉 Note

- □ If you cannot make copies as you want because of paper type, paper size, or paper capacity problems, use recommended paper. See "Copy Paper", About This Machine.
- Using curled paper often causes misfeeds, soiled paper edges, or slipped positions while performing staple or stack printing. When using curled paper, take the stiffness out of the paper with your hands to straighten out the curl, or load the paper upside down. Also, to prevent paper from curling, lay paper on a flat surface, and do not lean it against the wall.

1

When a Job Is Not Performed

If you are not able to carry out your job, it may be that the machine is being used by another function.

Wait until the current job is completed before trying again. In certain cases, you can carry out another job using a different function while the current job is being performed. Performing multiple functions simultaneously like this is called "Multi-accessing".

Combination Chart

Function Compatibility

The chart shows Function Compatibility when print priority is set to "Interleave". See "Print Priority", General Settings Guide.

 Δ : Simultaneous operations are possible.

• : Operation is enabled when the relevant function key is pressed and remote switching (of the scanner/external extension) is done.

O : Operation is enabled when the **[Interrupt]** key is pressed to interrupt the preceding operation.

 \rightarrow : Operation is performed automatically once the preceding operation ends. × : The operation must be started once the preceding operation ends. (Simultaneous operations are not possible.)

Function	n you want to select	Coj	pier		20		Fac	sim	ile				Pri	nter										ver
					Interrupt Copying		Operation	Transmission			Reception			Print		Scanner		TWAIN	Document Server			DeskTopBinder		Web Document Server
Eunction	in progress Operations for Copying	× Operations for Copying	× Stapling	× Sort	O Operations for Copying	O Copying	Transmission Operation/Manual Reception Operation	Scanning an Original for Memory Transmission Transmission	D Memory Transmission	Immediate Transmission	D Memory Reception	Printing Received Data	Data Reception	D Printing	D Stapling	Operations for Scanning	• Scanning	Scanning	Operations for Document Server	Scanning a Document to Store in Document Server	Printing from Document Server	Printing from Document Server	D Sending a Facsimile from Document Server	D Printing
Ŭ	Stapling	∆ *1	$\rightarrow {}^{*1}$	$\rightarrow {}^{*1}$	0	O *5	•	● *2	Δ	• *2	Δ	Δ	Δ	Δ	\rightarrow	•	• *2	×	•	• *2	∆ *4	Δ	∆ ∗4	∆ ∗4
	Sort	∆ *1	$\rightarrow {}^{*1}$	$\rightarrow {}^{*1}$	0	0	•	• *2	Δ	• *2	Δ	Δ	Δ	Δ	Δ	•	• *2	×	•	• *2	Δ	Δ	Δ	Δ
Interrupt Copying	Operations for Copying	0	0	0	×	×	×	×	Δ	×	Δ	Δ	Δ	Δ	Δ	0	0	0	×	×	×	Δ	Δ	Δ
Inte Coj	Copying	0	0	0	×	×	×	×	Δ	×	Δ	\rightarrow	Δ	\rightarrow	\rightarrow	0	0	0	×	×	×	\rightarrow	Δ	\rightarrow

Fun	ction	you want to select	Coj	pier		20		Fac	sim	ile				Pri	nter										ver
						Interrupt Copying		Operation	Transmission			Reception			Print		Scanner		TWAIN	Document Server	_		DeskTopBinder		Web Document Server
	-	in progress	Operations for Copying	Stapling	Sort	Operations for Copying	Copying	Transmission Operation/Manual Reception Operation	Scanning an Original for Memory Transmission Transmission	Memory Transmission	Immediate Transmission	Memory Reception	Printing Received Data	Data Reception	Printing	Stapling	Operations for Scanning	Scanning	Scanning	Operations for Document Server	Scanning a Document to Store in Document Server	Printing from Document Server	Printing from Document Server	Sending a Facsimile from Document Server	Printing
Facsimile	tior	nsmission Opera- n/Manual Recep- n Operation	•	•	•	0	0	×	×	Δ	×	Δ	Δ	Δ	Δ	Δ	•	•	•	•	•	•	Δ	Δ	Δ
		Scanning an original for Memory Trans- mission	×	×	×	×	×	×	×	Δ	×	Δ	Δ	Δ	Δ	Δ	•	• *2	×	×	×	×	Δ	Δ	Δ
	ission	Memory Trans- mission	Δ	Δ	Δ	Δ	Δ	Δ	Δ	∆ *3	∆ *3	∆ *3	∆ *7	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	\rightarrow	Δ
	Transmission	Immediate Transmission	×	×	×	×	×	×	×	∆ *3	×	∆ *3	Δ	Δ	Δ	Δ	•	• *2	×	×	×	×	Δ	\rightarrow	Δ
	, uc	Memory Reception	Δ	Δ	Δ	Δ	Δ	Δ	Δ	∆ *3	∆ *3	∆ *3	∆ *7	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ
	Reception	Printing Received Data	Δ	Δ	Δ	Δ	Δ	Δ	Δ	∆ *7	Δ	∆ *7	×	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ
nter	Dat	a Reception	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	\rightarrow	\rightarrow	\rightarrow	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ
Printer		Printing	Δ	Δ	Δ	0	0	Δ	Δ	Δ	Δ	Δ	Δ	Δ	\rightarrow	\rightarrow	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ
	Print	Stapling	Δ	\rightarrow	Δ	0	O *5	Δ	Δ	Δ	Δ	Δ	Δ	Δ	\rightarrow	\rightarrow	Δ	Δ	Δ	Δ	Δ	∆ *4	∆ *4	Δ	∆ *4
Scanner		Operations for scanning	•	•	•	0	_	•	•		•	Δ	Δ			Δ	×	×	•	•	•	Δ	Δ	Δ	Δ
		Scanning	•	• *2	• *2	0	0	•	• *2	Δ	• *2	Δ	Δ	Δ	Δ	Δ	×	×	×	•	• *2	Δ	Δ	Δ	Δ
TWA	JN	Scanning	×	×	×	×	×	×	×	×	×	Δ	Δ	Δ	Δ	Δ	×	×	×	×	×	Δ	Δ	Δ	Δ
Server		Operations for Document Server	•	•	•	0	0	•	•	Δ	•	Δ	Δ	Δ	Δ	Δ	•	•	•	×	×	×	Δ	Δ	Δ
Document Server		Scanning a Docu- ment to Store in Document Server		×	×	0	0	•	×	Δ	×	Δ	Δ	Δ	Δ	Δ	•	• *2	×	×	×	×	Δ	Δ	Δ
Do		Printing from Document Server	•	Δ	Δ	0	0	∆ *4	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	∆ *6	∆ *6	∆ *6	Δ	Δ	Δ

Function	n you want to select	Coj	pier		50		Fac	sim	ile				Pri	nter										ver
					Interrupt Copying		Operation	Transmission			Reception			Print		Scanner		TWAIN	Document Server			DeskTopBinder		Web Document Server
	in progress	Operations for Copying	Stapling	Sort	Operations for Copying	Copying	Transmission Operation/Manual Reception Operation	Scanning an Original for Memory Transmission Transmission	Memory Transmission	Immediate Transmission	Memory Reception	Printing Received Data	Data Reception	Printing	Stapling	Operations for Scanning	Scanning	Scanning	Operations for Document Server	Scanning a Document to Store in Document Server	Printing from Document Server	Printing from Document Server	Sending a Facsimile from Document Server	Printing
Binder	Printing from Document Server	Δ	Δ	Δ	Δ	Δ	∆ *4	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ
DeskToF	Sending a Facsim- ile from Docu- ment Server	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	\rightarrow	Δ
Web Document DeskTopBinder Server	Printing	Δ	Δ	Δ	Δ	Δ	∆ *4	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ

^{*1} Simultaneous operations are only possible after the preceding job documents are all scanned and **[New Job]** key appears.

- ^{*2} You can scan a document after the preceding job documents are all scanned.
- ^{*3} Operation is possible when extra lines are added.
- ^{*4} During stapling, printing automatically starts after the current job.
- *5 Stapling is not available.
- ^{*6} Simultaneous operation become possible after you press **[New Job]** key.
- *7 During parallel reception, any subsequent job is suspended until the receptions are completed.

🔗 Note

- □ Stapling cannot be used at the same time for multiple functions.
- □ If the machine is capable of executing multiple functions simultaneously, specify which function should have priority in "Print Priority". This setting is factory-preset to "Display Mode". For setting of Printing Priority Function, see "Print Priority", General Settings Guide.
- When 3,000 Sheet-50 Sheet Staple Finisher, 3,000 Sheet-100 Sheet Staple Finisher or Booklet Finisher is installed on the machine, you can specify the output tray where documents are delivered. See "Output tray settings", General Settings Guide.
- While printing is in progress, scanning a document using another function may take more time.

2. Troubleshooting When Using the Copy/Document Server Function

This chapter describes likely causes of and possible solutions for copier/document server function problems.

Messages Displayed When Using the Copy/Document Server Function

This section describes the machine's main messages. If other messages appear, follow the instructions they contain.

∰Important

- If you cannot make copies as you want because of the paper type, paper size or paper capacity problems, use recommended paper. See "Copy Paper", About This Machine.
- □ For messages that are not listed here, see p.9 "When You Have Problems Operating the Machine".

Message	Cause	Solution
Cannot detect original size.	Improper original is placed.	Select paper manually, not in Auto Pa- per Select mode, and do not use Auto Reduce / Enlarge function. See "Sizes difficult to detect", Copy/Document Server Reference.
Cannot detect original size.	Improper original is placed.	Place the original on the exposure glass. See "Placing Originals on the Exposure Glass" and "Sizes difficult to detect", Copy/Document Server Reference.
Cannot detect original size.	Original is not placed.	Place your originals.
Check original orientation.	Original is not placed in a proper orientation.	Change the orientation of the original.
Check paper size.	Improper paper size is set.	If you press the [Start] key, copy will start onto the selected paper.
Rotate Sort is not available with this paper size.	A size of paper for which Rotate Sort is not availa- ble is selected.	Select the proper paper size. See "Sort", Copy/Document Server Reference.

Message	Cause	Solution
Cannot punch this paper size.	The Punch function cannot be used with paper size selected.	The following paper sizes are available for Punch mode: • 2 holes: A3□, B4□, A4□□, B5□□, A5□□, B6□, A6□, 11"×17"□, 11"×15"□, 11"×14"□, 10"×15"□, 10"×14"□, Legal ($8^{1}/_{2}$ "×14")□, Letter ($8^{1}/_{2}$ "×11")□□, Half Letter ($5^{1}/_{2}$ "× $8^{1}/_{2}$ ")□□, Executive ($7^{1}/_{4}$ "×10 ¹ / ₂ ")□□, F/GL (8 "×13")□, Foolscap ($8^{1}/_{2}$ "×13")□, Folio ($8^{1}/_{4}$ "×13")□, $8^{1}/_{4}$ "×14"□, 8"×10 ¹ / ₂ "□□, 8"×10"□□, 8K□, 16K□□, 210×340□, 210×182□□, 210×170□□. Select one of these sizes. • 3 holes: A3□, B4□, A4□, B5□, 11"×17"□, 11"×15"□, 11"×14"□, 10"×15"□, 10"×14"□, Letter($8^{1}/_{2}$ "×11")□, Executive ($7^{1}/_{4}$ "×10 ¹ / ₂ ")□, 8"×10 ¹ / ₂ "□, 8"×10"□, 8K□, 16K□. Select one of these sizes. • 4 holes: Metric version: A3□, B4□, A4□, B5□, 11"×17"□, 11"×15"□, 11"×14"□, Letter($8^{1}/_{2}$ "×11")□, Executive ($7^{1}/_{4}$ "×10 ¹ / ₂ ")□, 8"×10 ¹ / ₂ "□, 8K□, 16K□. Narrow 2 × 2 version: A3□, B4□, A4□□, B5□, 11"×17"□, 11"×15"□, 11"×14"□, 10"×15"□, 10"×14"□, Legal($8^{1}/_{2}$ "×14")□, Letter($8^{1}/_{2}$ "×11")□, Executive ($7^{1}/_{4}$ "×10 ¹ / ₂ ")□, F/GL (8 "×13")□, Foolscap ($8^{1}/_{2}$ "×13")□, Folio ($8^{1}/_{4}$ "×13")□, $8^{1}/_{4}$ "×14"□, 8"×10 ¹ / ₂ "□, 8"×10"□, 78K□, 16K□, 210×340□, 210×182□, 210×170□, Select one of these sizes.
Stapling capaci- ty exceeded.	The number of sheets per set is over the staple capacity.	Check the stapler capacity. See "Supple- mentary Information", Copy/Docu- ment Server Reference.
Cannot staple pa- per of this size.	The Staple function can- not be used with paper size selected.	Select a paper size that can be used in Staple mode. See "Supplementary In- formation", Copy/Document Server Reference.

Message	Cause	Solution
Duplex is not available with this paper size.	A paper size not available in Duplex mode has been selected.	The following paper sizes are available for Duplex mode: A3, B4, A4, A4, B5, B5, C, A5, C, 11"×17", 11"×15", 11"×14", 10"×15", 10"×15", 10"×14", Legal ($8^{1}/_{2}$ "×14"), Letter ($8^{1}/_{2}$ "×11"), C, Half Letter ($8^{1}/_{2}$ "×11"), C, Half Letter ($5^{1}/_{2}$ "×8 ¹ / ₂ "), F/GL (8"×13"), Folio ($7^{1}/_{4}$ "×10 ¹ / ₂ "), F/GL (8"×13"), Folio ($8^{1}/_{4}$ "×13"), $8^{1}/_{4}$ "×14", 5, 8"×10 ¹ / ₂ ", 8"×10", 8K, 16K, C. Select one of these sizes.
Maximum number of sets is nn. (A figure is placed at n.)	The number of copies ex- ceeds the maximum copy quantity.	You can change the maximum copy quantity. See "Max. Copy Quantity", General Settings Guide.
File being stored exceeded max. number of pages per file. Copying will be stopped.	The scanned originals have too many pages to store as one document.	Press [Exit] , and then store again with an appropriate number of pages.
Magazine or Book- let mode is not available due to mixed image mode.	You selected the Maga- zine or Booklet function for originals scanned us- ing different functions, such as copy and printer.	Make sure originals for the Magazine or Booklet function are scanned using the same function.
Orig. is being scanned by anoth- er function. Please wait.	Document Server or Scanner function is in use.	To cancel the job in process, press [Exit], and then press the [Document Server] or [Scanner] key. Next, press the [Clear/Stop] key. When the message "The Clear / Stop key was pressed. Are you sure you want to stop scanning?" ap- pears, press [Cancel].
You do not have the privileges to use this func- tion.	This user code is not al- lowed to use the function selected.	Contact the administrator.
You do not have the privileges to use this func- tion.	This user code is not al- lowed to use the function selected.	If the message continues to be displayed and you cannot switch the screen, press the [Energy Saver] key. Confirm that the display goes off, and then press the [En- ergy Saver] key again. The display will return to the user code entry display. When printing under the copier or printer function, press the [Energy Sav- er] key only after printing has finished.

Message	Cause	Solution
Authentication has failed.	The entered login user name or login password is not correct.	Inquire the user administrator for the correct login user name and login password.
Authentication has failed.	The machine cannot per- form authentication.	Contact the administrator.
The selected file(s) con- tained file(s) without access privileges. Only file(s) with ac- cess privileges will be deleted.	You have tried to delete files without the authori- ty to do so.	Files can be deleted by the person who created the file. To delete a file which you are not authorized to delete, contact the person who created the file.
Please wait.	The destination list is be- ing updated from the net- work using SmartDeviceMonitor for Admin. Depending on the number of destina- tions to be updated, there may be some delay be- fore you can resume op- eration. Operations are not possible while this message is displayed.	Wait until the message disappears. Do not switch off the power while this mes- sage is displayed.

Connect Copy

Message	Cause	Solution
Cannot connect to the sub-machine. Check the status of the sub-ma- chine.	 The indicator is lit. The hard disk of the sub-machine is malfunctioning. 	Press [Exit] on the main machine and follow the instructions on the display.
Cannot print from the sub-machine. Check the status of the sub-ma- chine.	A paper misfeed has oc- curred on the sub-ma- chine, or toner or other supplies need to be re- plenished.	Follow the instructions displayed. For details, see p.97 "Adding Toner", p.103 "Removing Jammed Paper", p.116 "Re- moving Jammed Staples". If the sub-machine's display indicates that a cover is open, follow the instruc- tions displayed.
Cannot print from the sub-machine. Check the status of the sub-ma- chine.	The sub-machine's User Tools menu is open.	Press the [User Tools/Counter] key to close the User Tools menu.
Sub-machine is in Interrupt mode.	The sub-machine is in In- terrupt mode.	Press the [Interrupt] key on the sub-ma- chine to cancel Interrupt mode.

Message	Cause	Solution
Sub-machine does not have the same paper setting(s).	Paper type or tray set- tings on the two ma- chines do not match.	Make the same settings on both ma- chines.
The Cover Sheet setting(s) of the sub-machine is different from the main machine.	Cover settings on the two machines do not match.	Make the same settings on both ma- chines.
The Slip Sheet setting(s) of the sub-machine is different from the main machine.	Slip Sheet settings on the two machines do not match.	Make the same settings on both ma- chines.
The Designation Sheet setting(s) of sub-machine is different from main machine.	Designation Sheet set- tings on the two ma- chines do not match.	Make the same settings on both ma- chines.
Sub-machine paper settings must be the same to use this tray.	Paper tray settings on the two machines do not match.	Make the same settings on both ma- chines.
No stamp data in the sub-machine.	Stamp data on the sub- machine has been delet- ed.	Reprogram the stamp on the sub-ma- chine.
Cannot print from the sub-machine. Sub-machine will be disconnected.	The sub-machine has stopped due to power failure or communication error.	Continue copying using the main ma- chine.
Z-fold is availa- ble only when Sort mode is se- lected in Connect Copy.	Sort has not been selected with Z-fold.	Select the Sort function.

PReference

p.9 "When You Have Problems Operating the Machine"

21

2

When You Cannot Make Clear Copies

This section describes likely causes of and possible solutions for unclear copies.

Problem	Cause	Solution
Copies appear dirty.	Image density is too high.	Adjust the image density. See "Adjust- ing Copy Image Density", Copy/Docu- ment Server Reference.
Copies appear dirty.	Auto Image Density is not selected.	On the control panel, select [Auto Density] .
The reverse side of an original image is copied.	Image density is too high.	Adjust the image density. See "Adjust- ing Copy Image Density", Copy/Docu- ment Server Reference.
The reverse side of an original image is copied.	Auto Image Density is not selected.	On the control panel, select [Auto Density] .
A shadow appears on copies if you use pasted originals.	Image density is too high.	Adjust the image density. See "Adjust- ing Copy Image Density", Copy/Docu- ment Server Reference.
		Change the orientation of the original. Put mending tape on the pasted part.
The same copy area is dirty whenever making copies.	The exposure glass, scan- ning glass, or ADF is dirty.	Clean them. See p.127 "Maintaining Your Machine".
The same copy area is dirty whenever making copies.	Original type is set to [Text / Photo], and an orig- inal with text and photo- graphs that can hardly be distinguished from each other is loaded.	Select [Generation Copy] , and then begin copying. See "Generation Copy", Copy/Document Server Reference.
Copies are too light.	Image density is too light.	Adjust the image density. See "Adjust- ing Copy Image Density", Copy/Docu- ment Server Reference.
Copies are too light.	A light copy may result when you use damp or rough grain paper.	Use the recommended paper. See "Copy Paper", About This Machine. Contact your service representative.
Copies are too light.	Toner bottle is almost empty.	Add toner. See p.97 "Adding Toner".
Copies are too light.	The paper is damp.	Use paper that has been stored in the recommended temperature and hu- midity condition. See "Copy Paper", About This Machine.
Parts of images are not copied.	The original is not set cor- rectly.	Set originals correctly. See "Placing Originals", Copy/Document Server Reference.
Parts of images are not copied.	The correct paper size is not selected.	Select the proper paper size.

Problem	Cause	Solution
Images appear only par- tially.	The paper is damp.	Use paper that has been stored in the recommended temperature and hu- midity condition. See "Copy Paper", About This Machine.
Black lines appear.	The exposure glass or scanning glass is dirty.	Clean them. See p.127 "Maintaining Your Machine".
White lines appear.	The exposure glass or scanning glass is dirty.	Clean them. See p.127 "Maintaining Your Machine".
White lines appear.	When 🚵 is blinking, ton- er is beginning to run out.	Add toner. See p.97 "Adding Toner".
Copies are blank.	The original is not set cor- rectly.	When using the exposure glass, face the originals down. When using the ADF, face them up.
A moiré pattern is pro- duced on copies.	Your original has a dot pattern image or many lines.	Place the original on the exposure glass at a slight angle.
Black spots appear on the copy of a photographic print.	Because of high humidi- ty, the photographic print has stuck to the exposure glass.	 Place the print on the exposure glass in either of the following ways: Place an OHP transparency on the exposure glass, and then place the print on top of the OHP transparency. Place the print on the exposure glass, and then place two or three sheets of white paper on top of it. Leave the exposure glass cover or auto-document feeder (ADF) open when copying.

When You Cannot Make Copies As Wanted

This section describes likely causes of and possible solutions for unclear copies.

✤ Basic

Problem	Cause	Solution
Misfeeds occur frequently.	The number of sheets loaded exceeds the capac- ity of the machine.	Load paper only as high as the upper limit markings on the side fence of the paper tray or bypass tray. See "Copy Paper", About This Machine.
Misfeeds occur frequently.	The paper tray's side fences are set too tightly.	Push the side fences lightly, and then reset it. Also, we recommend you set at least 20 sheets of thick paper.
Misfeeds occur frequently.	The paper is damp.	Use paper that has been stored in the recommended temperature and hu- midity condition. See "Copy Paper", About This Machine.
Misfeeds occur frequently.	The paper is too thick or too thin.	Use recommended paper. See "Copy Paper", About This Machine.
Misfeeds occur frequently.	The copy paper is wrin- kled or has been fold- ed/creased.	Use recommended paper. Use paper that has been stored in the recommend- ed temperature and humidity condi- tion. See "Copy Paper", About This Machine.
Misfeeds occur frequently.	Printed paper is being used.	Use recommended paper. Do not use paper that has been already copied or printed onto. See "Copy Paper", About This Machine.
Copy paper becomes creased.	The paper is damp.	Use paper that has been stored in the recommended temperature and hu- midity condition. See "Copy Paper", About This Machine.
Copy paper becomes creased.	The paper is too thin.	Use recommended paper. See "Copy Paper", About This Machine.
Copies are not stapled.	There are jammed staples in the stapler.	Remove jammed staples. See p.116 "Re- moving Jammed Staples".
Copies are not stapled.	The number of copies exceeds the capacity of the stapler.	Check the stapler capacity. See "Sup- plementary Informations", Copy/Doc- ument Server Reference.
Copies are not stapled.	Copy paper is curled.	Turn the copy paper over in the tray.
Staples are wrongly posi- tioned.	Originals are not set cor- rectly.	Check the correct position to place the originals. See "Staple", Copy/Docu- ment Server Reference.

Problem	Cause	Solution
You cannot combine sev- eral functions.	Selected functions cannot be used together.	Check the combination of functions and make the settings again. See "Func- tion Compatibility", Copy/Document Server Reference.
When sorting, the pages are divided into two blocks.	The memory became full in the middle of sorting and the pages were deliv- ered in two blocks.	You can interrupt copying when the memory becomes full. See "Memory Full Auto Scan Restart", General Set- tings Guide.
Saddle-stitched docu- ments come apart and do not stack properly.	Certain types of paper are resistant to folding and open out after being fold- ed and stitched.	Use recommended paper. See "Recom- mended Paper Sizes and Types", About This Machine.
Paper does not output during printing with sta- pling.	When you stop printing while using the staple function, paper not sta- pled during printing may be left in the staple unit.	Press the [Clear Modes] key and cancel copy settings, including stapling.
The copy is grayed out or a text pattern appears in the background of the copy.	You have copied a copy- guarded document pro- tected from unauthorized copying.	Check the document. See "Using [Data Security for Copying]", Printer Reference.
Images are skewed.	The side fence in the pa- per feed tray is not locked.	Make sure the side fence is locked. See p.92 "Changing the Paper Size".
Images are skewed.	The paper is feeding in at a slant.	Load the paper correctly. See p.85 "Loading Paper".

✤ Edit

Problem	Cause	Solution
In Double Copies mode, parts of the original im- age are not copied.	Combination of original and copy paper is not cor- rect.	Select A3 \square for A4 \square originals and A4 for A5 originals.
In Erase Border, Erase Centre, or Erase Centre / Border mode, parts of the original image are not copied.	You set a wide erased margin.	Make the margin width narrower. You can adjust it between 2 - 99 mm (0.1" - 3.9"). See "Erase Border Width" and "Erase Centre Width", General Settings Guide.
In Erase Border, Erase Centre, or Erase Centre / Border mode, parts of the original image are not copied.	Originals are not scanned correctly.	Place the originals correctly.

Problem	Cause	Solution
In Margin Adjustment mode, parts of the origi- nal image are not copied.	You set a wide erased margin.	Set a narrower margin with User Tools. You can set the width between 0 - 30 mm $(0'' - 1.2'')$.
		See "Front Margin: Left/Right", "Back Margin: Left/Right", "Front Margin: Top/Bottom" and "Back Margin: Top/Bottom", General Settings Guide.
In Margin Adjustment mode, parts of the origi- nal image are not copied.	There is a lack of margin space on the opposite side of the binding posi-	Set a narrower margin with User Tools. You can set the width between $0 - 30$ mm (0" - 1.2").
	tion.	See "Front Margin: Left/Right", "Back Margin: Left/Right", "Front Margin: Top/Bottom" and "Back Margin: Top/Bottom", General Settings Guide.
In Image Repeat mode, the original image is not copied repeatedly.	You selected copy paper the same size as the origi- nals, or you did not select the proper reproduction ratio.	Select copy paper larger than the originals or select the proper reproduction ratio.

✤ Stamp

Problem	Cause	Solution
The stamp position is wrong.	The paper orientation is wrong.	Check the paper orientation and stamp position.

✤ Combine

Problem	Cause	Solution
You cannot make a book from Booklet or Maga- zine mode by folding copies.	You selected a setting ("Open to left" or "Open to right") that does not match the orientation of originals.	In [Copier / Document Server Features], un- der [Edit], set [Orientation: Booklet, Maga- zine] properly.
When using Combine, parts of the image are not copied.	You specified a reproduc- tion ratio that does not match the sizes of your originals and copy paper.	When you specify a reproduction ratio using Manual Paper Select mode, make sure that the ratio matches your origi- nals and the copy paper. Select the cor- rect reproduction ratio before using Combine mode.
Copies are not in correct order.	You placed the originals in the incorrect order.	When placing a stack of originals in the ADF, the last page should be on the bot-tom.
		If you place an original on the exposure glass, start with the first page to be copied.

✤ Duplex

Problem	Cause	Solution
Cannot print in duplex mode.	You have loaded paper on the bypass tray.	Remove paper loaded on the bypass tray. Load paper in another tray.
Cannot print in duplex mode.	You have loaded paper exceeding 110 g/m^2 .	Change the paper.
Cannot print in duplex mode.	You have selected a tray which is set to [1 Sided Copy] in [Tray Paper Set- tings] in [System Settings].	Set the tray to [2 Sided Copy] in [Tray Pa- per Settings] in [System Settings] . See "System Settings", General Settings Guide.
Copies are not in correct order.	You placed the originals in the incorrect order.	When placing a stack of originals in the ADF, the last page should be on the bottom.
		If you place an original on the exposure glass, start with the first page to be copied.
		Furthermore, set [Face Down] in [Copy Eject Face Method in Glass Mode], [Input / Output] under [Copier / Document Server Features]. See "Input/Output", General Settings Guide.
When using Duplex, copy is made Top to Bot- tom even though [Top to Top] is selected.	You placed the originals in the wrong orientation.	Place the original in the correct orienta- tion. See "Original Orientation", Copy/Document Server Reference.

✤ Document Server

Problem	Cause	Solution
"Exceeded max. number of pages per file. Do you want to store the scanned pages as 1 file?" appears.	The number of scanned pages exceeds the capaci- ty per file of the Docu- ment Server.	To store scanned pages as a file, press [Store File]. Scanned data is stored as a file in the Document Server. If you do not want to store scanned pages, press [No]. Scanned data is deleted.
You forgot your pass- word.	You cannot access a pro- tected file without enter- ing the password.	Contact the administrator. To delete the files stored in the docu- ment server, select [Delete All Files in Doc- ument Server] in [Administrator Tools] in [System Settings]. As this will perma- nently delete every single file, make sure the document server does not con- tain any files you want to keep. See "Delete All Files in Document Server", General Settings Guide.

Problem	Cause	Solution
You cannot find out what is stored in a file.	You may not be able to ascertain the contents of a file simply from the file name.	You can switch the Select File screen be- tween [List] and [Thumbnail] display to check the contents of the file. In list dis- play, the file name, and date of storage, and user name are shown. In thumbnail display, an image of the stored file ap- pears. You can enlarge the image by pressing [Preview] . Use the Select File screen to check information other than the file name. See "Checking the Details of a Stored Document", Copy/Docu- ment Server Reference.
Memory frequently be- comes full.	The document server memory is full.	 Delete unnecessary files. On the file selection display, select unnecessary files, and then press [Delete File]. If this does not increase available memory, do the following. Switch to the scanner screen, and then delete unnecessary files stored under the scanner function. Switch to the printer screen, and then delete unnecessary files stored under Sample Print, Locked Print, Hold Print, or Stored Print.
You want to check print quality before making a large print run.	You can print a single copy without specifying the setting again.	Check print quality by printing out only the first set using the [Sample Copy] key.
"Original is be- ing scanned by another function. Please wait." ap- pears.	Copier or Scanner func- tion is in use.	To cancel a job in progress, first press [Exit], and then press the [Copy] key or [Scanner] key. Next, press the [Clear/Stop] key. When the message "The Stop key was pressed. Stop copying?" appears, press [Stop].
"Cannot display preview of this page." appears, and you can not check the thumbnail image.	The image data may have been corrupted.	Pressing [Exit] displays the preview screen without a thumbnail.

Connect Copy

Problem	Cause	Solution
You cannot staple, punch, or Z-fold.	The main and sub-ma- chines do not have the same option installed.	Press [Connect Copy] to cancel Connect Copy.
You get different copy re- sults from the main and sub-machines.	The Copy Quality setting differs on the two ma-chines.	Make the same Copy Quality setting one the two machines.

Display During Connect Copy

Problem	Cause	Solution
[Connect Copy] is not displayed.	The sub-machine's main power is off.	Turn on the main machine's main power.
[Connect Copy] is not displayed.	Functions that cannot be used with Connect Copy are selected on the main machine (such as storing or copying the first page of a document in the Doc- ument Server).	Cancel the functions selected on the main machine.
[Connect Copy] is not displayed.	The main machine is in Interrupt mode.	Press the [Interrupt] key on the sub-ma- chine to cancel Interrupt mode.
[Connect Copy] is not displayed.	The [Connect Copy Key Dis- play] setting is off.	Select [Display] for the [Connect Copy Key Display] setting.
[Connect Copy] is not displayed.	The cable connecting the two machines is damaged.	Contact your service representative.
[Connect Copy] is not displayed.	The 1 is lit.	Follow the instructions displayed.
[Connect Copy] appears faded.	Functions that cannot be used with Connect Copy have been set.	Press the [Clear Modes] key to clear the settings.

This section describes about the display during Connect Copy.

If Connect Copy Is Canceled

This section describes about causes and remedies when Connect Copy is canceled.

Problem	Cause	Solution
The machine cancels Connect Copy.	The main machine's main power is off, or the opera- tion switch has been pressed.	Turn on the sub-machine's main power or operation switch, and then press [Connect Copy].
The machine cancels Connect Copy.	The sub-machine's main power is off.	A message instructing you to check the sub-machine appears on the display of the main machine. Press [Cancel] to clear Connect Copy. Turn on the sub-ma- chine's main power, press [Connect Copy] and then make your settings again.
The machine cancels Connect Copy.	The Weekly Timer setting is coming into effect on the main machine.	Turn on the main machine's operation switch , and then press [Connect Copy] .
An error message indi- cates the main machine has broken down.	The ì is lit.	Copying is not possible. Follow the in- structions displayed.

If You Cannot Exit from Connect Copy

This section describes about causes and remedies if you cannot exit from Connect Copy.

Problem	Cause	Solution
There is no response when you press [Connect Copy] .	Scanning is in progress.	Press the [Clear/Stop] key on the main machine, and then press [Stop] .
There is no response when you press [Connect Copy] .	Copying is in progress.	Press the [Clear/Stop] key on the main machine, and then press [Stop] .
There is no response when	A paper misfeed has oc-	Follow the instructions displayed.
you press [Connect Copy].	curred on either the main machine or sub-machine.	For details, see p.103 "Removing Jammed Paper" and p.116 "Removing Jammed Staples".
		If the sub-machine's display indicates that a cover is open, follow the instruc- tions displayed.
There is no response when you press [Connect Copy] .	A paper misfeed has oc- curred on either the main or sub-machine.	To cancel Connect Copy, Press the [Clear/Stop] key on the main machine, and then press [Stop] .
There is no response when	A paper misfeed has oc-	Follow the instructions displayed.
you press [Connect Copy] .	curred on one of the ma- chine, or toner or other supplies need to be re- placed.	For details, see p.85 "Loading Paper", p.97 "Adding Toner", and p.103 "Re- moving Jammed Paper".
There is no response when you press [Connect Copy] .	A paper misfeed has oc- curred on one of the ma- chine, or toner or other supplies need to be re- placed.	To cancel Connect Copy, press the [Clear/Stop] key on the main machine, and then press [Stop] .
There is no response when	A paper misfeed has oc-	Removed the jammed paper.
you press [Connect Copy].	curred during stapling.	For details, see p.116 "Removing Jammed Staples".
		To cancel Connect Copy, press the [Clear/Stop] key on the main machine, and then press [Stop] .

When Memory Is Full

This section describes likely causes of and possible solutions for problems related to full memory.

Message	Cause	Solution
Memory is full. nn originals have been scanned. Press [Print] to copy scanned originals. Do not remove remaining originals. "n" in the message repre- sents a changeable number.	The scanned originals ex- ceeds the number of pag- es that can be stored in memory.	Press [Print] to copy scanned originals and cancel the scanning data. Press [Stop] to cancel the scanning data and not copy.
Press [Continue] to scan and copy remaining origi- nals.	The machine checked if the remaining originals should be copied, after the scanned originals was printed.	To continue copying, remove all copies, and then press [Continue] . To stop copying, press [Stop] .

Connect Copy

Message	Cause	Solution
Sub-machine mem- ory is full. Sub- machine will be disconnected.		Continue printing on the main machine.

🖉 Note

□ If you set **[Memory Full Auto Scan Restart]** in User Tools to **[On]**, even if the memory becomes full, the memory overflow message will not be displayed. The machine will make copies of the scanned originals first, then automatically proceed scanning and copying the remaining originals. In this case, the resulting sorted pages will not be sequential. See "Input / Output", General Settings Guide.

3. Troubleshooting When Using the Facsimile Function

This chapter explains likely causes of and possible solutions for facsimile function problems.

Adjusting the Volume

The following describes how to adjust the volume.

You can change the volume of the following sounds that the machine makes.

On Hook Mode

Heard when the **[On Hook]** is pressed.

✤ At Transmission

Heard when Immediate transmission is performed.

✤ At Reception

Heard when the machine receives a document.


✤ At Dialing

Heard after pressing the [Start] key, until the line connects to the destination.


✤ At Printing

Heard when a received document is printed.

Press the [User Tools/Counter] key.

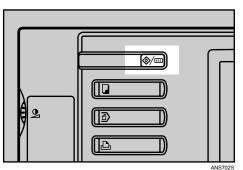

2 Press [Facsimile Features].

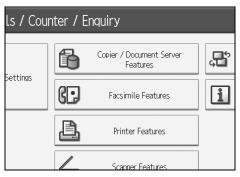

Press [Adjust Sound Volume].

1 Check that [General Settings] screen appears.

Quick Operation Key 2 TX File Status E Quick Operation Key 3 RX File Status On I Switch Title Title 1 Search Destination Address Book Communication Page Count Adjust Sound Volume

5 Press [Lower] or [Louder] to adjust the volume, and then press [OK].

Ψ.	
¥.	
Ψ.	
¥.,	
	¥. ¥.

D Press the **[User Tools/Counter]** key.

The standby display appears.

🖉 Note

- □ You can adjust the On Hook volume when you press the **[On Hook]**. See "On Hook Dial", Facsimile Reference.
- □ When you press **[Check]** on the Adjust Sound Volume screen, you will hear a confirmation sound so you can check the volume.
- □ If you press **[Cancel]**, the volume setting is canceled. The display returns to that of step **4**.
- □ You can set the volume level to between 0 and 7.

Messages Displayed When Using the Facsimile Function

This section explains the machine's main messages. If other messages appear, follow their instructions.

Message	Cause	Solution
Error occurred, and transmission was cancelled.	 Original jammed during Immediate Transmission. A problem occurred in the machine, or noise occurred on the telephone line. 	Press [Exit] , and then send the documents again.
Put original back, check it and press the Start key.	Original jammed during Memory Transmission.	Place originals that have not been scanned on the exposure glass or ADF again.
Cannot detect original size. Place original again, then press the Start key.	The machine failed to de- tect the size of the origi- nal.	Place original again, and then press the [Start] key.
Functional prob- lems with facsim- ile. Data will be initialized.	There is a problem with the fax.	Record the code number shown in the display and contact your service representative. Other functions can be used.
Remove the paper from Internal Tray 1.	The Internal Tray 1 is full.	Remove the paper. If the other tray is also full, the tray name shown in the display changes. Remove paper from the tray indicated in the display.
Original is being scanned by anoth- er function. Switch to the following func- tion, then press the Stop key to cancel scanning or press the Start key to con- tinue.	The machine is scanning an original under another function.	Before sending a file by fax, cancel the job in progress. To do this, press [Exit], and then press the [Copy] or [Document Server] key to display the suspended function. Then, on the copier or docu- ment server screen, press the [Clear/Stop] key to display the "The Stop key has been pressed. Are you sure you want to stop copying? "or "The Clear / Stop key was pressed. Are you sure you want to stop scanning?" prompt, and then press [Stop].

Message	Cause	Solution
Updating the des- tination list Please wait. Specified desti- nation(s) or sender's name has been cleared.	The destination list is be- ing updated from the net- work using SmartDeviceMonitor for Admin or Web Image Monitor. Depending on the number of destina- tions to be updated, there may be some delay be- fore you can resume op- eration. Operation is not possible while this mes- sage is displayed.	Wait until the message disappears. Do not switch off the power while this message is displayed.
The selected file(s) contained file(s) without access privileg- es. Only file(s) with access priv- ileges will be deleted.	You tried to delete a doc- ument for which you do not have permission to delete.	Only the administrator can delete this document. Contact the administrator if you want to delete a document for which you do not have permission to delete.
Connection with LDAP server has failed. Check the server status.	A network error has oc- curred and connection has failed.	Try the operation once more. If the mes- sage is still shown, the network may be crowded. Check the information of [System Settings] . See "System Settings", General Settings Guide.
LDAP server au- thentication has failed. Check the settings.	The user name or pass- word does not match that specified for LDAP serv- er authentication.	Make settings correctly for the user name and the password for LDAP serv- er authentication.
Exceeded max. No. of display search results.Max.:	The number of search re- sults has exceeded the maximum number of items that can be dis- played.	Search again after changing the search conditions.
Exceeded time limit for LDAP server search. Check the server status.	A network error has oc- curred and connection has failed.	Try the operation once more. If the mes- sage is still shown, the network may be crowded. Check the information of [System Settings] . See "System Settings", General Settings Guide.

Message	Cause	Solution
The specified group contains some destina- tion(s) that do not have access privileges. Do you want to se- lect only the privileged desti- nation(s)?	The specified group con- tains some destinations for sending by e-mail and some destinations for sending by Scan to Fold- er.	To select destinations for sending by e- mail, press [Select] for the message dis- played on the e-mail screen. To select destination for sending by Scan to Fold- er, press [Select] for the message dis- played on the Scan to Folder screen.
Cannot find the specified path. Please check the settings.	The name of the compu- ter or folder entered as the destination is wrong.	Check whether the computer name and the folder name for the destination are correct.
Sender has not been specified.	The sender has not been specified.	A sender's name should be specified before sending e-mail. Send e-mail after specifying the sender's name.
E-mail address entered is not correct. Please re-enter.	The entered e-mail ad- dress is wrong.	Make sure the e-mail address is correct, and then enter it again.
You do not have the privileges to use this func- tion.	Use of this function is re- stricted.	Contact the administrator.
Authentication has failed.	Wrong login user name or password.	Confirm correct login user name or password.
Authentication has failed.	Authentication is not possible from this ma- chine.	Contact the administrator.
Check whether there are any network problems. [13-10]	The alias telephone number you entered is al- ready registered on the gatekeeper by another device.	 In [Facsimile Features], under [Initial Settings], select [H.323 Settings], and then check the alias telephone number is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. Consult the administrator.
Check whether there are any network problems. [13-11]	Cannot access gatekeep- er.	 In [Facsimile Features], under [Initial Settings], select [H.323 Settings], and then check "Gatekeeper Address" is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. Consult the administrator.

Message	Cause	Solution
Check whether there are any network problems. [13-17]	Registering of user name is rejected by SIP server.	 In [Facsimile Features], under [Initial Settings], select [SIP Settings], and then check "SIP Server IP Address" and "SIP User Name" are correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. Consult the administrator.
Check whether there are any network problems. [13-18]	Cannot access SIP server.	 In [Facsimile Features], under [Initial Settings], select [SIP Settings], and then check "SIP Server IP Address" is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. Consult the administrator.
Check whether there are any network problems. [13-24]	The password registered for the SIP server is not the same as the password registered for this ma- chine.	Contact the administrator.
Check whether there are any network problems. [13-25]	In [Effective Protocol] , [IPv4] is not enabled, or an incorrect IP address has been registered.	 In [System Settings], under [Interface Settings], select [Effective Protocol], and then check [IPv4] is pro- grammed to [Active]. You can also use the Web Image Monitor for con- firmation. See the Web Image Mon- itor's Help. In [System Settings], under [Interface Settings], select [Machine IPv4 Ad- dress], and then check the IP address is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. Contact the network administrator.
Check whether there are any network problems. [13-26]	The [Effective Protocol] and [SIP Server IPv4 Ad- dress] settings are differ- ent, or an incorrect IP address has been regis- tered.	 In [System Settings], under [Interface Settings], select [Machine IPv4 Ad- dress], and then check the IP address is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. Contact the network administrator.

Message	Cause	Solution
Check whether there are any network problems. [14-01]	Cannot find the DNS server, SMTP Server or folder for forwarding.	• Check that the DNS server IPv4 ad- dress is correctly programmed us- ing Web Image Monitor. See the Web Image Monitor's Help.
		• Check that the host name and IPv4 address of SMTP Server are correct- ly programmed using Web Image Monitor. See the Web Image Moni- tor's Help.
		• Check that the SMTP server is cor- rectly programmed using Web Im- age Monitor. See the Web Image Monitor's Help.
		• Check that the folder for forwarding is correctly specified.
		• Check that the computer in which the folder for forwarding is specified is correctly operated.
		 Check that the LAN cable is correctly connected to the machine. Correct the administrator.
		Consult the administrator.

Message	Cause	Solution
Check whether there are any network problems. [14-09]	E-mail transmission was refused by SMTP authen- tication, POP before SMTP authentication or login authentication of the computer in which the folder for transfer is specified.	 Check that the machine e-mail address is correctly programmed from [File Transfer] under [System Settings]. See "File Transfer", General Settings Guide. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. Check that the user name and password of the E-mail Account are correctly programmed from [File Transfer] under [System Settings]. See "File Transfer", General Settings Guide. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. Check that the user ID and password for the computer in which the folder for forwarding is specified are correctly programmed. Check that the folder for forwarding is correctly specified. Check that the computer in which the folder for forwarding is specified. Check that the computer in which the folder for forwarding is specified. Check that the computer in which the folder for forwarding is specified. Check that the computer in which the folder for forwarding is specified. Check that the computer in which the folder for forwarding is specified. Check that the computer in which the folder for forwarding is specified. Check that the computer in which the folder for forwarding is specified. Check that the computer in which the folder for forwarding is specified.
Check whether there are any network problems. [14-33]	No machine's e-mail ad- dress is programmed.	 Check that the e-mail address of mail account is correctly programmed using [File Transfer] under [System Settings]. See "File Transfer", General Settings Guide. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. Consult the administrator.
Check whether there are any network problems. [15-01]	No POP3/IMAP4 server address is programmed.	 Check that the host name or IPv4 address of the POP3/IMAP4 server is correctly programmed using the Web Image Monitor. See the Web Image Monitor's Help. Consult the administrator.
Check whether there are any network problems. [15-02]	Cannot log on to the POP3/IMAP4 server.	 Check that the user name and password of the E-mail Account are correctly programmed using [File Transfer] under [System Settings]. See "File Transfer", General Settings Guide. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. Consult the administrator.

Message	Cause	Solution
Check whether there are any network problems. [15-03]	No machine e-mail ad- dress is programmed.	 Check that the machine e-mail address is correctly programmed using [File Transfer] under [System Settings]. See "File Transfer", General Settings Guide. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.
Check whether there are any network problems. [15-11]	Cannot find the DNS server or POP3/IMAP4 server.	 Check that the DNS server IPv4 address is correctly programmed using Web Image Monitor. See the Web Image Monitor's Help. Check that the DNS server is correctly programmed using Web Image Monitor. See the Web Image Monitor's Help. Check that the host name or IPv4 address of the POP3/IMAP4 server is correctly programmed using Web Image Monitor's Help. Check that the POP3/IMAP4 server is correctly programmed using Web Image Monitor. See the Web Image Monitor's Help. Check that the POP3/IMAP4 server is correctly programmed using Web Image Monitor. See the Web Image Monitor's Help. Check that the POP3/IMAP4 server is correctly programmed using Web Image Monitor. See the Web Image Monitor's Help. Check that the LAN cable is correctly connected to the machine. Consult the administrator.
Check whether there are any network problems. [15-12]	Cannot log on to the POP3/IMAP4 server.	 Check that the user name and password of the E-mail Account are correctly programmed from [File Transfer] under [System Settings]. See "File Transfer", General Settings Guide. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. Check that the user name and password for POP before SMTP authentication are correctly programmed from [File Transfer] under [System Settings]. See "File Transfer", General Settings Guide. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor for confirmation.

🖉 Note

- □ If the "Check whether there are any network problems." message appears, the machine is not correctly connected to the network or the settings of the machine are not correct. If you do not need to connect to a network, you can specify the setting so this message is not displayed, and then the **[Facsimile]** key no longer lights. See "Parameter Settings", General Settings Guide. If you reconnect the machine to the network, be sure to set "Display" with User Parameters.
- □ If the paper tray runs out of paper, "Add paper." appears on the display, asking you to add more paper. If there is paper left in the other trays, you can receive documents as usual, even if the message appears on the display. You can turn this function on or off with "Parameter Setting". See "Parameter Settings", General Settings Guide.

When You Cannot Send or Receive Fax Messages as Wanted

This section explains likely causes of and possible solutions for transmission and reception-related problems.

Transmission/Reception

Problem	Cause	Solution
Both transmission and re- ceiving are impossible.	The modular cord may be disconnected.	Make sure that the modular cord is cor- rectly connected. See "Connecting the Machine to a Telephone Line and Tele- phone", General Settings Guide.

✤ Transmission

Problem	Cause	Solution
Document appears blank at the other end.	The original was placed upside down.	When the original is placed directly on the exposure glass, the side to be scanned must face down. When the original is fed via the ADF, the side to be scanned must face up.
Transmission failed due to "maximum e-mail size" error.	If the e-mail size specified on the machine is too large, the Internet Fax document cannot be sent.	In [Facsimile Features] , under [Send Set- tings] , set [Max. E-mail Size] to [Off] , or set the maximum e-mail size to larger val- ue. Then, re-send the document.
When using On Hook Dial or Manual Dial, "Receiving da- ta" appears and transmission is not al- lowed.	If the machine fails to de- tect the size of the origi- nal when [Start] key is pressed, it performs a re- ceiving operation.	Press [Scan Size] in [Scan Settings] , select the scan area, and then resend the doc- ument. If you use On Hook Dial or Manual Dial frequently, it is recom- mended that you set "Receive docu- ments by pressing the [Start] key when originals are not set." to "Off" in User Parameters. If this is set to "Off", when using Manual Dial you cannot receive by pressing the [Start] key. See "Param- eter Settings", General Settings Guide.
LAN-Fax Driver does not work.	The entered login user name, login password, or driver encryption key is incorrect.	Check your login user name, login password, or driver encryption key, and enter them correctly. Contact the administrator.
LAN-Fax Driver does not work.	A high security level is set by the extended secu- rity function.	Contact the administrator.

Problem	Cause	Solution
Although a group specifi- cation was set for the fol- lowing, reception was not possible. Receiving Station of In- formation Box, Forward- ing, Forwarding of Special Sender, Reception Report e-mail, Email TX Results, routing e-mail received via SMTP.	The number of specified destinations exceeds the maximum number that can be specified as a group.	A maximum of 500 parties can be spec- ified for a group. Check if there are over the specified numbers registered in the address book. If a group was registered in another group or designated in 1-5 of Transfer Box, transmission is canceled but an error message does not appear. See "Registering a Group", General Set- tings Guide.

Reception

Problem	Cause	Solution
The machine failed to print received fax docu- ments.	If this happened when the Receive File indicator was lit, low paper may have caused printing to stop.	 Load paper into the tray. Add toner. See "Substitute Reception", Facsimile Reference.
The machine failed to print received fax docu- ments.	In [Facsimile Features], un- der [Reception Settings], [Store] has been selected for [Reception File Setting].	Print the fax documents using a Web browser or the Print Stored RX File function. See "Printing Received and Stored Documents" and "Printing fax information using a Web browser", Facsimile Reference.
The machine failed to print received fax documents.	Add Paper indicator is lit.	Load paper into the tray. See p.85 "Loading Paper".

Printing

Problem	Cause	Solution
Print is slanted.	The tray's side fences might not be locked.	Check the side fences are locked. See p.92 "Changing the Paper Size".
Print is slanted.	The paper is fed at a slant.	Load the paper correctly. See p.85 "Loading Paper".
Misfeeds occur frequently.	The number of feeding in exceeds the capacity of the machine.	Load paper only as high as the upper limit markings on the side fences of the paper tray or bypass tray. See "Copy Paper", About This Machine.
Misfeeds occur frequently.	The paper is damp.	Use paper that has been stored in the recommended temperature and hu- midity condition. See "Copy Paper", About This Machine.
Misfeeds occur frequently.	The paper is too thick or too thin.	Use recommended paper. See "Copy Paper", About This Machine.

Problem	Cause	Solution
Misfeeds occur frequently.	The copy paper is wrin- kled or has been fold- ed/creased.	Use recommended paper. Use paper that has been stored in the recommend- ed temperature and humidity condi- tion. See "Copy Paper", About This Machine.
Copy paper becomes creased.	Printed paper is being used.	Use recommended paper. See "Copy Paper", About This Machine.
Copy paper becomes creased.	The paper is damp.	Use paper that has been stored in the recommended temperature and hu- midity condition. See "Copy Paper", About This Machine.
Copy paper becomes creased.	The paper is too thin.	Use recommended paper. See "Copy Paper", About This Machine.
Images are only partially printed.	The paper is damp.	Use paper that has been stored in the recommended temperature and hu- midity condition. See "Copy Paper", About This Machine.
Black lines appear on the print produced at the destination.	The exposure glass or scanning glass is dirty.	Clean them. See p.127 "Maintaining Your Machine".
Background of received images appears dirty. Im- ages from the back of the page appear.	Image density is too high.	Adjust scan density. See "Image Densi- ty (Contrast)", Facsimile Reference.
Printed or sent images are spotty.	The ADF, exposure glass or scanning glass is dirty.	Clean them. See p.127 "Maintaining Your Machine".
		Make sure that ink or correction fluid is dry before placing originals.
Received image is too light.	When using moist, rough, or processed pa- per, areas of print may not be fully reproduced.	Only use recommended paper. See "Copy Paper", About This Machine.
Received image is too light.	When 🛓 is blinking, ton- er is beginning to run out.	Add toner. See p.97 "Adding Toner".
Received image is too light.	• The image density has been set too low.	• Increase the scanning density. See "Density (Contrast)", Facsimile Reference.
Received image is too light.	The original of the trans- mitted fax was printed on paper that is too thin.	Ask the sender to reprint the original on thicker paper and fax it again.

✤ Others

Problem	Cause	Solution
All fax documents stored in memory have been lost. Those documents in- clude ones stored through Memory Trans- mission/Reception, Memory Lock, Substitute Reception, or Auto Docu- ment.	When about one hour passes after power to the machine is turned off, all fax documents stored in memory are lost.	If any documents have been lost for this reason, a Power Failure Report is auto- matically printed when the machine is turned on. If fax documents stored for Memory Transmission have been lost, check the destinations and resend the documents. If fax documents received through Memory, Memory Lock or Substitute Reception have been lost, ask the senders to resend the docu- ments. If Auto Documents have been lost, reprogram them. See p.48 "Turn- ing Off the Main Power / In the Event of Power Failure".
When a correct password is entered, you cannot print documents that ap- pear in the confidential box or bulletin board box, or transmit / print out stored documents.	Documents are locked by a security function if in- correct passwords are en- tered a certain number of times.	Contact the administrator.
[Prg. Dest.] or [Manual En- try] does not appear.	This function is made un- available by the en- hanced security function.	Contact the administrator.
The following functions are not available: For- warding, Store File in the Information Box, routing e-mail received via SMTP.	This function is made un- available by the en- hanced security function.	Contact the administrator.

When Memory Is Full

This section explains likely causes of and possible solutions for problems related to full memory.

Problem	Cause	Solution
Memory is full.	The memory is full.	If you press [Exit], the machine returns
Cannot scan any more.		to standby mode and starts transmit-
Transmitting scanned pages only.		ting the stored pages.

When an Error Report Is Printed

An Error Report is printed if a document cannot be successfully sent or received.

Possible causes include a problem with the machine or noise on the telephone line. If an error occurs during transmission, resend the original. If an error occurs during reception, ask the sender to resend the document.

🖉 Note

- □ If an error happens frequently, contact your service representative.
- The "Page" column gives the total number of pages. The "Page not sent" or "Page not received" column gives the number of pages not sent or received successfully.
- You can display a destination with the User Parameters. See "Parameter Settings", General Settings Guide.
- □ You can display a sender name with the User Parameters. See "Parameter Settings", General Settings Guide.

Turning Off the Main Power / In the Event of Power Failure

This section explains the machine status when the power is turned off or if the power fails.

A CAUTION:

• When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).

∰Important

- Do not turn off the main power switch while the power indicator is lit or blinking. If you do, the hard disk and memory may be damaged and failure could result.
- Turn off the main power switch before pulling out the plug. If you pull out the plug with the switch on, the hard disk and memory may be damaged and failure could result.
- □ Make sure that 100% is shown on the display before you unplug the machine. If a lower value is shown, some data is currently present in memory.
- Right after a power failure, the internal battery needs to be sufficiently recharged to guard against future data loss. Keep the machine plugged in and the main power switch on for about 24 hours after the power loss.

Even if the main power switch is turned off, the contents of the machine memory (for example, programmed numbers) will not be lost. However, if power is lost for about one hour because the main power switch is turned off, there is a power cut, or the power cable is removed, contents of the Fax memory are lost. Lost items will include any fax documents stored in memory using Memory Transmission/Reception, Auto Document, Confidential Reception, Memory Lock, or Substitute Reception.

If a file was deleted from memory, a Power Failure Report is automatically printed as soon as the power is restored.

This report can be used to identify lost files. If a memory stored for Memory Transmission was lost, resend it. If a document received by Memory Reception or Substitute Reception was lost, ask the sender to resend it.

When an Error Occurs Using Internet Fax

This section explains reports that the machine sends if an Internet Fax error occurs.

Error Mail Notification

The machine sends the Error Mail Notification to the sender when it is unable to successfully receive a particular e-mail message. A "cc" of this notification is also sent to the administrator's e-mail address when one is specified.

∰Important

□ If an incoming Internet Fax from another party bypasses the SMTP server, even if reception is not successful, an Error Mail Notification is not sent to the sender.

🖉 Note

- □ You can select to send Error Mail Notification with User Parameters. See "Parameter Settings", General Settings Guide.
- □ If Error Mail Notification cannot be sent, the Error Report (E-Mail) is printed by the machine.
- □ If an error occurs when an e-mail is received via SMTP, the SMTP server sends an error e-mail to the originator of the document.

Error Report (E-Mail)

The Error Report (E-Mail) is printed by the machine when it is unable to send an Error Mail Notification.

Server-Generated Error E-mail

The transmitting server sends this error e-mail to the originator of e-mail that cannot be transmitted successfully (due to reasons such as specifying an incorrect e-mail address).

∰Important

□ If an Internet Fax transmission bypasses the SMTP server, even if transmission is not successful, an error e-mail is not sent from the server.

🖉 Note

□ After a server-generated error e-mail is printed, the first page of the sent document is printed.

4. Troubleshooting When Using the Printer Function

This chapter describes likely causes of and possible solutions for printer function problems.

When You Cannot Connect to the USB Interface

This section describes how to troubleshoot a problem related to USB connection.

Problem	Cause	Solution
The machine is not auto- matically recognized.	The USB cable is not con- nected properly.	Turn off the power of the machine, re- connect the USB cable, and then turn it on again.
Windows has already configured the USB set- tings.	Check whether the com- puter has identified the machine as an unsup- ported device.	Open Windows' Device Manager, and then, under [Universal Serial Bus control- lers] , remove any unauthorized devic- es. Unauthorized devices have a [!] or [?] icon by them. Take care not to acci- dentally remove required devices. For details, see Windows Help.

Messages Displayed When Installing the Printer Driver

This section describes what to do if a message appears when installing the printer driver.

The following describes operations when a message appears during installation of the printer driver. Message number 58 or 34 indicates that the printer driver cannot be installed using Auto Run. Install the printer driver using **[Add Printer]** or **[Install Printer]**.

Windows 2000

This section describes the procedure under Windows 2000.

U On the [Start] menu, point to [Settings], and then click [Printers].

2 Double-click the Add Printer icon.

E Follow the instructions in Add Printer Wizard.

If the CD-ROM drive is D, the source files of the printer driver are stored in the following location:

- RPCS ("Printer Driver and Utilities" CD-ROM) D:\DRIVERS\RPCS\XP_VISTA\(Language)\DISK1
- PCL 5e ("Printer Driver and Utilities" CD-ROM) D:\DRIVERS\PCL5E\XP_VISTA\(Language)\DISK1
- PCL 6 ("Printer Driver and Utilities" CD-ROM) D:\DRIVERS\PCL6\XP_VISTA\(Language)\DISK1
- PostScript 3 ("Scanner Driver and Utilities" CD-ROM) D:\DRIVERS\PS\XP_VISTA\(Language)\DISK1

If the installer starts, click **[Cancel]** to quit.

Windows XP, Windows Server 2003

This section describes the procedure under Windows XP or Windows Server 2003.

On the [Start] menu, click [Printers and Faxes].

2 Click [Add a printer].

3 Follow the instructions in Add Printer Wizard.

If the CD-ROM drive is D, the source files of the printer driver are stored in the following location:

- RPCS ("Printer Driver and Utilities" CD-ROM) D:\DRIVERS\RPCS\XP_VISTA\(Language)\DISK1
- PCL 5e ("Printer Driver and Utilities" CD-ROM) D:\DRIVERS\PCL5E\XP_VISTA\(Language)\DISK1
- PCL 6 ("Printer Driver and Utilities" CD-ROM) D:\DRIVERS\PCL6\XP_VISTA\(Language)\DISK1
- PostScript 3 ("Scanner Driver and Utilities" CD-ROM) D:\DRIVERS\PS\XP_VISTA\(Language)\DISK1

If the installer starts, click [Cancel] to quit.

Windows Vista

This section describes the procedure under Windows Vista.

On the [Start] menu, click [Control Panel].

2 Click [Hardware and Sound].

Click [Add a printer] on the [Printers] area.

4 Follow the instructions in Add Printer Wizard.

If the CD-ROM drive is D, the source files of the printer driver are stored in the following location:

- RPCS ("Printer Driver and Utilities" CD-ROM) D:\DRIVERS\RPCS\XP_VISTA\(Language)\DISK1
- PCL 5e ("Printer Driver and Utilities" CD-ROM) D:\DRIVERS\PCL5E\XP_VISTA\(Language)\DISK1
- PCL 6 ("Printer Driver and Utilities" CD-ROM) D:\DRIVERS\PCL6\XP_VISTA\(Language)\DISK1
- PostScript 3 ("Scanner Driver and Utilities" CD-ROM) D:\DRIVERS\PS\XP_VISTA\(Language)\DISK1

If the installer starts, click [Cancel] to quit.

Messages Displayed When Using the Printer Function

This section describes the principal messages that appear on the panel display. If a message not described here appears, act according to the message.

Reference

Before turning the main power off, see "Turning On the Power", About This Machine.

Status Messages

Message	Problem
Ready	This is the default ready message. The machine is ready for use. No action is required.
Printing	The machine is printing. Wait a while.
Waiting	The machine is waiting for the next data to print. Wait a while.
Offline	The machine is offline. To start printing, switch the machine online by pressing [Online] key.
Please wait.	The machine is preparing the development unit. Wait a while.
Resetting job	The machine is resetting the print job. Wait until "Ready" appears on the display panel.
Setting change	The machine is setting changing. Wait a while.
Hex Dump Mode	In the Hex Dump mode, the machine receives data in hexadecimal format. Turn off the machine after printing, and then turn back on.

This section describes the machine status messages.

Messages Displayed on the Control Panel When Using the Printer Function

This section describes likely causes of and possible solutions for the error messages that appear on the control panel.

Message	Cause	Solution
Cannot connect with the wireless card. Turn the main power switch off, then check the card./Prob- lems with the wireless card./ Problems with the wireless board.	 IEEE 802.11b interface unit was not inserted when the machine was turned on, or it was pulled out after the machine turned on. The settings are not updated although the unit is detected, or er- rors are found while accessing the unit. 	Turn off the machine and check the IEEE 802.11b interface unit is inserted correctly. Then, turn the machine on again. If the message appears again, call your service representative.
Failed to obtain file system.	PDF direct printing could not be performed because the file system could not be obtained.	Decrease the number of files sent to the machine.
File system is full.	PDF file do not print out because the capacity of file system is full.	Delete all unnecessary files from the hard disk, or decrease the number of files sent to the machine.
Problem with Hard Disk.	An error has occurred in the hard disk drive.	Turn off the main power switch, and back on again. If the message appears again, contact your service representa- tive.
The entered pass- word is incorrect.	The password of the en- crypted PDF file has been entered incorrectly.	Enter the correct password.
USB has a problem.	An error has occurred in the USB interface.	Turn off the main power switch, and back on again. If the message appears again, contact your service representa- tive.
The tray selected for other pages is the same as the one for Slip Sheets ([Desig- nate]).Cannot print. Check the setting.	The tray selected for oth- er pages is the same as the one for slip sheets.	Reset the job. Be sure that the tray you select for slip sheets is not providing paper for other pages.

Message	Cause	Solution
Hardware Problem: Ethernet	An error has occurred in the Ethernet board.	Turn off the main power switch, and back on again. If the message appears again, contact your service representa- tive.
You do not have the privileges to use this function.	Use of this function is re- stricted.	Contact the administrator.
Authentication has failed.	 The login user name or password entered is incorrect. The machine current- ly cannot perform au- thentication. 	Check your login user name and password.Contact the administrator.
Parallel I/F board has a problem.	An error has occurred in the parallel interface board.	Turn off the main power switch, and back on again. If the message appears again, contact your service representative.
Printer font error.	An error has occurred in the font settings.	Contact your service representative.
Memory Overflow	Maximum capacity of PCL 5e/6 or PostScript 3 list display has been ex- ceeded.	Reduce the value of [Resolution] in the printer driver. Alternatively, select [Frame Priority] from [Memory Usage] in [System] . If this message continues to appear after taking these steps, de- crease the number of files sent to the machine.

Messages Printed on the Error Logs or Reports

This section describes likely causes of and possible solutions for the error messages that are printed on the error logs or reports.

Message	Cause	Solution
84: Error	There is no work area available for image processing.	 In [Printer Features], under [System], set [Memory Usage] to [Font Priority]. Decrease the number of files sent to the machine.
85: Error	The specified graphics li- brary is unavailable.	Check that the data is valid.
86: Error	Parameters of the control code are invalid.	Set the parameters correctly.
Address Book is currently in use by another func- tion. Authentica- tion has failed.	The machine currently cannot perform authenti- cation because the address book is being used by an- other function.	Wait a while, and then retry the operation.

Message	Cause	Solution
Auto-registration of user informa- tion has failed.	Automatic registration of information for LDAP Au- thentication or Windows Authentication failed be- cause the address book is full.	Contact the administrator.
Cannot store data of this size.	The paper size exceeded the capacity of the docu- ment server.	Reduce the paper size of the file that you want to send to a size that the document server can store. Custom size files can be sent but not stored afterward.
Collate has been cancelled.	Collate was canceled.	Turn the main power switch off and then back on again. If the message appears again, contact your sales or service representative.
Command Error	An RPCS command error occurred.	 Check using the following procedure: Check if the communication between the computer and the machine is working correctly. Check if the correct printer driver is being used. Check if the machine's memory size is set correctly in the printer driver. Check that the printer driver is the most up-to-date version available.
Data storage error.	You tried to print a Sample Print, Locked Print, Hold Print, or Stored Print file, or to store a file in the doc- ument server when the HDD is malfunctioning.	Contact your service representative.
Document Server is not available to use. Cannot store.	You cannot use the docu- ment server function.	Contact the administrator.
Duplex has been cancelled.	Duplex printing was can- celed.	 Select the proper paper size for the duplex function. See "Specifi- cations for the Main Unit", About This Machine. In [System Settings], under [Tray Paper Settings], select [2 Sided Copy].
Error has occurred.	A syntax error, etc., oc- curred.	Check that the PDF file is valid.

Message	Cause	Solution
Exceeded max. ca- pacity of Document Server. Cannot store.	The HDD became full after a file was stored.	Delete some of the files stored in the document server or reduce the size that you want to send.
Exceeded max. number of files of Document Server. Cannot store.	The maximum file capacity of the document server was exceeded.	Delete some of the files stored in the document server.
Exceeded max. number of files to print for tempo- rary / stored jobs.	While printing a Sample Print, Locked Print, Hold Print or Stored Print file, the maximum file capacity was exceeded.Delete unneeded files store machine.	
Exceeded max. number of pages of Document Server. Cannot store.	The maximum page capac- ity of the document server was exceeded.	Delete some of the files stored in the document server or reduce the number of pages that you want to send.
Exceeded max. number of pages to print for tempo- rary / stored jobs.	While printing a Sample Print, Locked Print, Hold Print or Stored Print file, the maximum page capaci- ty was exceeded.	Delete unneeded files stored in the machine. Reduce the number of pages to print.
Exceeded max. pag- es. Collate is in- complete.	The number of pages ex- ceeds the maximum number of sheets that you can use Collate with.	Reduce the number of pages to print.
Failed to obtain file system.	PDF direct printing could not be performed because the file system could not be obtained.	In [Printer Features], under [System], set [Memory Usage] to [Font Priority].
File system is full.	PDF file do not print out because the capacity of file system is full.	Delete all unnecessary files from the hard disk, or decrease the file size sent to the machine.
HDD is full.	The HDD became full while printing a Sample Print, Locked Print, Hold Print or Stored Print file.	Delete unneeded files stored in the machine. Alternatively, reduce the data size of the Sample Print, Locked Print, Hold Print or Stored Print file.
HDD is full.	When printing with the PostScript 3 printer driver, the HDD's capacity for fonts and forms has been exceeded.	Delete unneeded forms or fonts reg- istered in the machine.

Message	Cause	Solution
Hardware Problem: Ethernet	An error has occurred in the Ethernet board.	Turn off the main power switch, and back on again. If the message ap- pears again, contact your service representative.
Hardware Problem: HDD	An error has occurred in the hard disk drive.	Turn off the main power switch, and back on again. If the message ap- pears again, contact your service representative.
Hardware Problem: Parallel I/F	An error has occurred in the parallel interface board.	Turn off the main power switch, and back on again. If the message ap- pears again, contact your service representative.
Hardware Problem: USB	An error has occurred in the USB interface.	Turn off the main power switch, and back on again. If the message ap- pears again, contact your service representative.
Hardware Problem: Wireless Board	Access to the wireless board in which the wire- less LAN interface unit is inserted is possible, but an error was detected.	Turn off the machine, and check the wireless board is inserted correctly. Then, turn the machine on again. If the message appears again, call your service representative.
Hardware Problem: Wireless Card	 A wireless card that the machine cannot use has been installed. An error has occurred with the wireless card. 	Turn off the machine, and check the wireless card. Then, turn the ma- chine on again. If the message ap- pears again, call your service representative.
I/O buffer over- flow.	An input buffer overflow occurred.	 In [Printer Features], under [System], set [Memory Usage] to [Font Priority]. In [Printer Features], under [Host Interface], select [I/O Buffer], and then set the maximum buffer size to a larger value. Reduce the number of files being sent to the machine.
Information for user authentica- tion is already registered for an- other user.	The user name for LDAP or RDH authentication was already registered in a different server with a dif- ferent ID, and a duplica- tion of the user name occurred due to a switch- ing of domains (serv- ers),etc.	Contact the administrator.
Insufficient Memo- ry	A memory allocation error occurred.	On the RPCS printer driver's [Print Quality] tab, open the [Change User Settings] dialog box, and then, on the [Image Adjustments] tab, specify a lower value for [Resolution] .

Message	Cause	Solution
Memory Overflow	The memory is full.	 On the RPCS printer driver's [Print Quality] tab, open the [Change User Settings] dialog box, and then, on the [Image Ad- justments] tab, specify a lower value for [Resolution]. In [Printer Features], under [Sys-
		tem], set [Memory Usage] to [Font Priority]. If this message continues to appear
		after taking these steps, decrease the number of files sent to the machine.
Memory Retrieval Error	A memory allocation error occurred.	Turn off the main power switch, and back on again. If the message ap- pears again, replace the RAM.
No response from the server. Au- thentication has failed.	A timeout occurred while connecting to the server for LDAP authentication or Windows Authentication.	Check the status of the server.
Output tray has been changed.	The output tray was changed because the paper size of the specified output tray is limited.	Specify the proper output tray.
Print overrun.	Images were discarded while printing.	On the RPCS printer driver's [Print Quality] tab, open the [Change User Settings] dialog box, and then, on the [Image Adjustments] tab, specify a lower value for "Resolution".
Problem: Printer Font Error	An error has occurred in the font settings.	Contact your service representative.
Punch has been cancelled.	Punch printing was can- celed.	Check the paper orientation, print orientation, and punch position. Certain settings can produce print results that might not be as expected.
Receiving data failed.	Data reception was aborted.	Resend the data.
Sending data failed.	The machine received a command to stop trans- mission from the printer driver.	Check if the computer is working correctly.
Staple has been cancelled.	Stapling printing was can- celed.	Check the paper orientation, paper quantity, print orientation, and sta- ple position. Certain settings can produce print results that might not be as expected.

Message	Cause	Solution
The entered pass- word is incorrect.	The password of the en- crypted PDF file has been entered incorrectly.	Enter the correct password.
The print job has been cancelled be- cause capture file(s) could not be stored: Exceed- ed max. memory.	The HDD became full after a file was stored.	Delete the files stored in the docu- ment server or reduce the file size to be sent.
The print job has been cancelled be- cause capture file(s) could not be stored: Exceed- ed max. number of files.	The maximum file capacity of the document server was exceeded.	Delete the files stored in the docu- ment server.
The print job has been cancelled be- cause capture file(s) could not be stored: Exceed- ed max. number of pages per file.	The maximum page capac- ity of the document server was exceeded.	Delete some of the files stored in the document server or reduce the number of pages that you want to send.
You do not have a privilege to use this function. This job has been cancelled.	The entered login user name or login password is not correct.	Check that the user name and pass- word are correct.
You do not have a privilege to use this function. This job has been cancelled.	The logged in user is not allowed to use the selected function.	Contact the administrator.
Z-fold error.	Z-folding was canceled.	Check the tray, paper orientation, print orientation, and Z-fold settings again.

If the printing does not start, contact your service representative.

🖉 Note


□ The contents of errors may be printed on the Configuration Page. Check the Configuration Page in conjunction with the error log. For details about how to print the Configuration Page, see "List / Test Print", General Settings Guide.


Checking the Error Log

If files could not be stored due to printing errors, identify the cause of the errors by checking the error log on the control panel.

∰Important

- □ The most recent 50 errors are stored in the error log. If a new error is added when there are 50 errors already stored, the oldest error is deleted. However, if the earliest error is a Sample Print, Locked Print, Hold Print, or Stored print error, it is not deleted. The error is stored separately until the number of errors reaches 30.
- □ If the main power switch is turned off, the log is deleted.

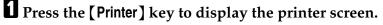

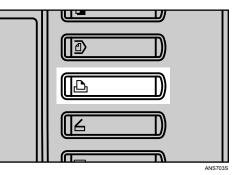

2 Press [Error Log].

▶Paper Tray	Status				
	1 Щ D A4	2 ⊔ □ A4	3 ⊔ □ A3	≡ A4	
►Job Lists &	X Error Log		Erro	or Log	
			System Status	Job Lis	t

An error log list appears.

When You Cannot Print

Use the following procedures if printing does not start even after performing **[Print]**.

Problem	Cause	Solution
Printing does not start.	The power is off.	Check the cable is securely plugged into the power outlet and the machine. Turn on the main power switch.
Printing does not start.	The machine is set to "Of- fline".	Press [Online] key.
Printing does not start.	The cause is displayed on the display of the control panel.	Check the error message or warning status on the display panel and take the required action.
Printing does not start.	The interface cable is not connected correctly.	Connect the interface cable securely. If it has a fastener, fasten that securely as well. See "Connecting to the Interfac- es", General Settings Guide.
Printing does not start.	The correct interface cable is not being used.	The type of interface cable you should use depends on the computer. Be sure to use the correct one. If the cable is damaged or worn, replace it. See "Con- necting to the Interfaces", General Set- tings Guide.
Printing does not start.	The interface cable was connected after the ma- chine was switched on.	Connect the interface cable before turn- ing on the machine.
Printing does not start.	If the machine is operat- ing in an extended wire- less LAN, failure to print might result from a weak wireless signal.	To check signal status, press the [User Tools/Counter] key, and then press [Sys- tem Settings] on the display panel. On the [Interface Settings] tab, select [IEEE 802.11b] , and then press [Wireless LAN Signal] . If signal quality is poor, move the machine to a location where radio waves can pass or remove objects that might cause interference. (You can check signal status only when using wireless LAN in the infrastruc- ture mode.)
Printing does not start.	If the machine is operat- ing in an extended wire- less LAN, SSID settings are incorrect.	Check using the machine's display pan- el that the SSID is correctly set. See "Network Settings", General Settings Guide.

Problem	Cause	Solution
Printing does not start.	If the machine is operat- ing in an extended wire- less LAN, the receiver's MAC address may be preventing communica- tion with the access point.	Check access point settings when in the infrastructure mode. Depending on the access point, client access may be limit- ed by MAC address. Also, check there are no problems in transmission be- tween access point and wired clients, and between access point and wireless clients.
Printing does not start.	The extended wireless LAN has not started.	Confirm the orange LED is lit, and the green LED is lit or blinks during trans- mission.
Printing does not start.	The login user name, login password, or driver encryption key is invalid.	Check the login user name, login pass- word, or driver encryption key.
Printing does not start.	Advanced encryption has been set using the Ex- tended Security function.	Check the settings of the Extended Se- curity function with the administrator.
Data-in indicator does not blink or light up.	If the data-in indicator is unlit or not flashing even after performing [Print] , the machine has not re- ceived the data.	 When the machine is connected to a computer via a cable, check the computer print port settings are correct. See "Confirming the Connection Method", Printer Reference. When it is networked with a computer, Contact the administrator.
The status indicator of the printer is lit.	The cause is displayed on the display of the control panel.	Check the error message on the display panel and take required action. See p.54 "Messages Displayed When Using the Printer Function".
"Updating the destination list Please wait. Specified destination(s) or sender's name has been cleared." ap- pears.	The destination list is be- ing updated from the net- work using SmartDeviceMonitor for Admin.	Wait until the message disappears. Do not switch off the power while this message is displayed. Depending on the number of destinations to be updat- ed, there may be some delay before you can resume operation. Operations are not possible while this message is dis- played.
[List / Test Print] is disabled.	A mechanical error might have occurred.	Contact your service representative. See "List/Test Print", General Settings Guide.
Printing does not start when using the extended wireless LAN in Ad-hoc mode.	The correct Communica- tion Mode is not set.	Turn the main power off and back on. See "Turning On the Power", About This Machine. Or, change the settings for [System Set- tings] , [Interface Settings] , and [Network] . See "Network Settings", General Set- tings Guide.

If the printing does not start, consult your service representative.

When the Data In Indicator Does Not Light Up or Flash

When the Data In indicator does not light up or flash after starting a print job, data is not being sent to the machine.

When the machine is connected to the computer using the interface cable

The following shows how to check the print port when the data-in indicator does not light up or blink.

Check if the print port setting is correct. When it is connected using a parallel interface, connect it to LPT1 or LPT2.

For Windows 2000

- ① Click the [Start] button, point to [Settings], and then click [Printers].
- ② Click the icon of the machine. On the [File] menu, click [Properties].
- ③ Click the **[Ports]** tab.
- ④ In the **[Print to the following port(s)]** list, confirm the correct port is selected.

For Windows XP Professional or Windows Server 2003

- ① Click the [Start] button, and then click [Printers and Faxes].
- ② Click the icon of the machine. On the [File] menu, click [Properties].
- ③ Click the **[Ports]** tab.
- ④ In the **[Print to the following port(s)]** list, confirm the correct port is selected.

For Windows XP Home Edition

- ① Click the [Start] button, and then click [Control Panel].
- ② Click [Printers and Other Hardware].
- **③** Click [Printers and Faxes].
- ④ Click the icon of the machine. On the [File] menu, click [Properties].
- (5) Click the **[Ports]** tab.
- (6) In the **[Print to the following port(s)]** list, confirm the correct port is selected.

For Windows Vista

- ① Click the [Start] button, and then click [Control Panel].
- ② Click [Hardware and Sound].
- 3 Click [Printers].
- ④ Right-click the icon of the machine, and then click [Properties].
- ⑤ In the [Print to the following port(s)] list, confirm the correct port is selected.

Other Printing Problems

This section describes likely causes of and possible solutions for problems that can occur when printing from a computer.

Problem	Cause	Solution
Print has smudges.	Settings for thick pa- per have not been made when printing on thick paper in the bypass tray.	 PCL 5e/6 and PostScript 3 Select [Thick] in the [Type:] list on the [Paper] tab. RPCS Select [Thick] in the [Paper type:] list on the [Print Settings] or [Setup] tab.
The print on the entire page is faded.	When 🕍 is blinking, toner is beginning to run out.	Add toner. See p.97 "Adding Toner".
The print on the entire page is faded.	The paper is damp.	Use paper that has been stored in the recom- mended temperature and humidity condition. See "Copy Paper", About This Machine.
The print on the entire page is faded.	The paper is unsuita- ble.	Use the recommended paper. (Printing on coarse or treated paper might result in faint print image.) See "Copy Paper", About This Machine.
The print on the entire page is faded.	If the [Toner saving] check box is selected in the printer driver settings, the entire page will be faded when printed.	For the RPCS printer driver, [Toner saving] is located on the [Print Quality] tab. For the Post-Script 3 printer driver, see PostScript 3 Supplement. See the printer driver Help.
Fine lines are fuzzy, of inconsistent thick- ness or colour, or do not appear.	Super fine lines have been specified in the application, or a col- our that is too light has been specified for the lines.	Change the dithering settings. See the printer driver Help. If the problem continues after you change the dithering settings, use the settings of the appli- cation in which the image was created to change the colour and thickness of the lines.
Image bleeds when rubbed.	If you are using thick paper, [Paper type:] might not be set to [Thick] .	On the printer driver's [Print Settings] or [Setup] tab, set [Paper type:] to [Thick] . See the printer driver Help.
Paper is not fed from the selected tray.	When you are using a Windows operating system, printer driver settings override those settings using the display panel.	Set the desired input tray using the printer driver. See the printer driver Help.

Problem	Cause	Solution
The printed image is different from the im- age on the computer's display.	With certain func- tions, such as enlarge- ment and reduction, image layout might be different to that on the computer display.	In the application, change the layout, character size, and character settings.
The printed image is different from the im- age on the computer's display.	You might have se- lected to replace True Type fonts with ma- chine fonts in the printing process.	To print an image similar to that of the compu- ter display, make settings to print True Type fonts as an image. See the printer driver Help.
Images are printed at slant.	The tray's side fence might not be locked.	Check the side fence are locked. See p.92 "Changing the Paper Size".
Print is slanted.	The paper is feeding in at a slant.	Load the paper correctly. See p.85 "Loading Paper".
Misfeeds occur fre- quently.	The number of sheets loaded exceeds the ca- pacity of the machine.	Load paper only as high as the upper limit markings on the side fence of the paper tray or bypass tray. See "Copy Paper", About This Machine.
Misfeeds occur fre- quently.	The paper is damp.	Use paper that has been stored in the recom- mended temperature and humidity condition. See "Copy Paper", About This Machine.
Misfeeds occur fre- quently.	The paper is too thick or too thin.	Use recommended paper. See "Copy Paper", About This Machine.
Misfeeds occur fre- quently.	The copy paper is wrinkled or has been folded/creased.	Use recommended paper. Use paper that has been stored in the recommended temperature and humidity condition. See "Copy Paper", About This Machine.
Misfeeds occur fre- quently.	Printed paper is being used.	Use recommended paper. See "Copy Paper", About This Machine.
Copy paper becomes creased.	The paper is damp.	Use paper that has been stored in the recom- mended temperature and humidity condition. See "Copy Paper", About This Machine.
Copy paper becomes creased.	The paper is too thin.	Use recommended paper. See "Copy Paper", About This Machine.
White lines appear.	When 🕍 is blinking, toner is beginning to run out.	Add toner. See p.97 "Adding Toner".
When printing graph- ics, the output and the screen are different.	If the printer driver is configured to use the graphics command, the graphics com- mand from the ma- chine is used to print.	If you want to print accurately, set the printer driver to print without using the graphics command. See the printer driver Help.
Garbled characters are printed.	The correct printer language might have not been selected.	Set the correct printer language.

Problem	Cause	Solution
Images are printed in the wrong orienta- tion.	The feed orientation you selected and the feed orientation se- lected in the printer driver's option setup might not be the same.	Set the machine's feed orientation and the printer driver's feed orientation accordingly. See the printer driver Help.
There is considerable delay between the print start instruction and actual printing.	"Sleep mode" might be set.	The machine requires time to warm up if it has been in "Sleep mode". In [System Settings] , un- der [Timer Settings] , select [Auto Off Timer] , and then specify "Sleep mode".
There is considerable delay between the print start instruction and actual printing.	Processing time de- pends on data vol- ume. High volume data, such as graph- ics-heavy documents, take longer to process.	 If the data-in indicator is blinking, data has been received by the printer. Wait for a moment. Making the following setting on the printer driver may reduce the computer's workload. PCL 5e/6 Select the lower value for [Resolution] on the [Print Quality] tab in the printer properties dialog box. PostScript 3 Select the lower value in Resolution. The location of this setting is given below. If your operating system is Windows, select [Optimize for Speed] in [PostScript Output Option]. [PostScript Output Option] is located as follows: Windows 2000/XP/Vista, Windows 2003 Server [PostScript Output Option] in [PostScript Options] on [Advanced] on [Layout] tab in the printing preferences dialog box. Mac OS 9.x [Printer Specifications] in the print dialog box. Mac OS X [Set 3] tab in [Printer Features] in the print dialog box. On the [Print Quality] tab, select [Speed] in the [Print quality] tab, select [Speed] in the [Change User Settings] dialog box, and then, on the [Image Adjustments] tab, specify a lower value for [Resolution]. To enable [Change User Settings], select the [User settings] check box.

Problem	Cause	Solution
Images are cut off, or excess is printed.	You may be using pa- per smaller than the size selected in the ap- plication.	Use the same size paper as that selected in the application. If you cannot load paper of the correct size, use the reduction function to reduce the image, and then print. See the printer driver Help.
Page layout is not as expected.	Print areas differ de- pending on machine used. Information that fits on a single page on one machine may not fit on a single page of another ma- chine.	Adjust the [Printable area:] setting in the [Printer Configuration] in the RPCS printer driver. See the printer driver Help.
Photo images are coarse.	Some applications print at lower resolu- tion.	Use the application's settings to specify a higher resolution.
Solid lines are printed as broken lines.	Dither patterns do not match.	Make the following settings with the printer driver: Change the [Dithering:] setting on the [Image Adjustments] tab in the [Change User Set- tings] dialog box, on the [Print Quality] tab in the RPCS printer driver. See the printer driver Help.
Optional components connected to the ma- chine are not recognized when using Windows 2000/XP/Vista and Windows Server 2003.	Bidirectional commu- nication is not work- ing.	Set up optional devices on the Properties of the printer. See the printer driver Help.
Duplex printing is malfunctioning.	Duplex printing can- not be done with pa- per set in the bypass tray.	When using duplex printing, make settings to use paper from a tray other than the bypass tray.
Duplex printing is malfunctioning.	You have loaded thick paper heavier than 110 g/m^2 .	Specify another paper type.
Duplex printing is malfunctioning.	Duplex printing can- not be done with a tray for which [1 Sided Copy] has been speci- fied as Paper Type on the System Settings menu.	In [System Settings], under [Tray Paper Settings], select [2 Sided Copy].
When using Win- dows 2000/XP/Vista or Windows Server 2003, combined print- ing or booklet print- ing does not come out as expected.	The correct applica- tion or printer driver settings are not made.	Make sure the application's paper size and ori- entation settings match those of the printer driver. If a different paper size and orientation are set, select the same size and orientation.

Problem	Cause	Solution
A print instruction was issued from the computer, but print- ing did not start.	User Authentication may have been set.	• Ask the administrator for the user code, which must be specified in the printer driv- er before printing. On the [Printer Configura- tion] tab in the printer properties dialog box, click [User Code] , and then enter the user code in the dialog box that opens.
PDF files do not print out/cannot perform [PDF Direct Print].	PDF files are pass- word-protected.	 To print password-protected PDF files, enter the password in the [PDF Menu] or on Web Im- age Monitor. For details about [PDF Menu], see "PDF Menu", General Settings Guide. For details about Web Image Monitor, see the Web Image Monitor Help.
PDF files do not print out/cannot perform [PDF Direct Print].	PDF files cannot be printed if they are print-disabled via PDF File Security.	Change the PDF File Security setting.
PDF files do not print out/cannot perform [PDF Direct Print].	High compression PDF files created us- ing the machine's scanner function can- not print directly.	Open the application used to create the PDF, and then print the file using the application's driver. Re-save the file in normal (non-compressed) PDF format. Some types of High Compression PDF files are not supported. Consult your sales representa- tive about the supported file types.
[PDF Direct Print] pro- duces strange or mal- formed characters.	Fonts were not em- bedded.	Embed fonts in the PDF file you want to print and then print.
Printing by Bluetooth is slow.	The number of jobs exceeds the capacity of the machine.	Reduce the number of jobs.
Printing by Bluetooth is slow.	 A communication error might have occurred. Interference from IEEE 802.11b (wireless LAN) devices can reduce communication speed. Bluetooth trans- mission speeds are not high. 	 Remove the machine from close proximity with IEEE 802.11b wireless LAN devices. If there are active IEEE 802.11b wireless LAN devices or other Bluetooth devices nearby, relocate the machine or disable those devices.

If the problem cannot be solved, contact your service representative.

5. Troubleshooting When Using the Scanner Function

This chapter describes likely causes of and possible solutions for scanner function problems.

When Scan Results Are Not As Expected

This section describes causes and remedies when scan results are not as expected.

Problem	Cause	Solution
The scanned image is dirty.	The exposure glass or auto docu- ment feeder (ADF) is dirty.	Clean these parts. See p.127 "Maintaining Your Machine".
The image is distorted or out of position.	The original was moved during scanning.	Do not move the original during scanning.
The image is distorted or out of position.	The original was not pressed flat against the exposure glass.	Make sure that the original is pressed flat against the exposure glass.
The scanned image is upside down.	The original was placed upside down.	Place the original in the correct orientation. See "Placing Origi- nals", Copy/Document Server Reference.
No image results from scanning.	The original was placed with the front and back reversed.	When the original is placed directly on the exposure glass, the side to be scanned must face down. When the original is fed via the ADF, the side to be scanned must face up. See "Placing Originals", Copy/Docu- ment Server Reference.
Images are scanned in rotated.	If you set the original with its up- per edge backward and save gray scale images as a TIFF or JPEG file, they are scanned in rotated.	When placing a stack of originals in the ADF, place their upper edges first.
The scanned image contains white spaces.	 If you scan originals using functions other than the network TWAIN scanner function, certain paper size and resolution settings may produce scanned images that are larger than the specified size because of mar- gins being added to the sides. If the File Format Converter (optional) is installed, the margins may become wider. 	Scanning at a higher resolution may reduce the margins.
The scanned image is grayed out or a text pat- tern appears in the background.	You have copied a copy guarded document protected from unau- thorized copying.	Check the document. For details about how to prevent unauthor- ized copying of the document, see "Using [Data Security for Copy- ing] ", Printer Reference.

When You Cannot Send Scanned Files

The following sections explain likely causes of and solutions for Network Delivery and E-mail Sending-related problems.

When Stored Files Cannot Be Accessed

This section describes likely causes of and possible solutions for job access-related problems.

Problem	Cause	Solution
The stored file is locked and is not accessible.	The file, which is password pro- tected, is locked because the pass- word was incorrectly entered ten times.	Contact the administrator.

When You Cannot Browse the Network to Send a Scan file

This section describes likely causes of and possible solutions for the Browser Network failing to operate when files are sent.

Problem	Cause	Solution
The network cannot be browsed when specify- ing the destination fold- er.	may not be correct:	Check the settings. See "Network Settings", General Settings Guide.

When the TWAIN Driver Cannot Be Started

This section describes likely causes of and possible solutions for the TWAIN driver failing to operate.

Problem	Cause	Solution
The Scanner Properties dialog box cannot be displayed.	Advanced encryption has been specified in the extended security setting.	For details about the extended se- curity setting, contact an admin- istrator.

When Stored Files Cannot Be Edited

This section describes likely causes of and possible solutions for the TWAIN driver failing to operate.

Problem	Cause	Solution
Stored files cannot be deleted. File names and passwords cannot be changed. Files cannot be redelivered.	Limits have been imposed using the available extended security function.	Contact the administrator.

When the Network Delivery Function Cannot Be Used

This section describes likely causes of and possible solutions for the Network Delivery function failing to operate.

Problem	Cause	Solution
The network delivery function cannot be used.	The delivery software may be an old version or a security setting may be specified.	Contact the administrator.
The network delivery function cannot be used.	The network delivery function setting is not correct.	Specify it correctly. See "Settings Required to Use the Network De- livery Scanner", General Settings Guide.

Operations Are Not Possible When Messages Are Displayed

This section describes likely causes of and possible solutions for messages that appear and when the machine fails to operate.

Message	Cause	Solution
Destination list / machine settings are updated. Se- lected destina- tions or function settings have been cleared. Please re-select the set- tings.	The destination list is being up- dated from the network using SmartDeviceMonitor for Admin. Depending on the number of des- tinations to be updated, there may be some delay before you can resume operation. Opera- tions are not possible while this message is displayed.	Wait until the message disap- pears. Do not switch off the pow- er while this message is displayed.

Messages Displayed When Using the Scanner Function

This section describes likely causes of and possible solutions for error messages that may appear on the machine's control panel.

When a Message Is Displayed on the Control Panel

This section describes causes and remedies if an error message appears on the display of the control panel.

∰Important

If a message not described here appears, act according to the message. For information about how to turn off the main power switch, see About This Machine.

Message	Cause	Solution
Connection with LDAP server has failed. Check the server status.	A network error has oc- curred and connection has failed. Try the opera- tion once more.	Try the operation once more. If the mes- sage is still shown, the network may be crowded. Check the information of [System Settings] . See "System Settings", General Settings Guide.
LDAP server au- thentication has failed. Check the settings.	The user name and pass- word differ from those set for LDAP Authentica- tion.	Make settings correctly for the user name and the password for LDAP serv- er authentication.
The destination list has been up- dated. Specified destination(s) or sender's name has been cleared.	A specified destination or sender's name was cleared when the destina- tion list in the delivery server was updated.	Specify the destination or sender's name again.
Updating the des- tination list has failed. Try again?	A network error has oc- curred.	Check whether the server is connected.
The destination list has been up- dated. Specified destination(s) or sender's name has been cleared.	The destination list is be- ing updated.	If a destination or sender's name was al- ready selected, re-select it after this message disappears.

Message	Cause	Solution
Exceeded max. number of files which can be sent at the same time. Reduce the number of the selected files.	The number of files ex- ceeded the maximum number possible.	Reduce the number of files and send them again.
Cannot detect original size. Place original again, then press the Start key.	You have loaded paper of a size not shown on the paper size selector.	 Place the original correctly. Specify the scan size. When placing an original directly on the exposure glass, the lifting/ lowering action of the ADF triggers the automatic original size detection process. Lift the ADF by more than 30 degrees. See "Placing Originals", Copy/Document Server Reference.
Exceeded max. No. of results to display.Max.:	Search results have ex- ceeded the max. display- able number.	Search again after changing the search conditions.
You do not have the privileges to use this func- tion.	The machine has not been set to allow you to use the function.	Contact the administrator.
Exceeded max. number of standby files.Try again after the current file is sent.	The maximum number of standby files was exceed- ed.	There are 100 files waiting in the send- ing queue for e-mail, Scan to Folder, or delivery functions. Wait until files have been sent.
Exceeded time limit for LDAP server search. Check the server status.	A network error has oc- curred and connection has failed.	Try the operation once more. If the mes- sage is still shown, the network may be crowded. Check the information of [System Settings] . See "System Settings", General Settings Guide.
The specified group contains some destina- tion(s) that do not have access privileges. Do you want to se- lect only the privileged desti- nation(s)?	The specified group con- tains some destinations for sending by e-mail and some destinations for sending by Scan to Fold- er.	To select destinations for sending by e- mail, press [Select] for the message dis- played on the e-mail screen. To select destination for sending by Scan to Fold- er, press [Select] for the message dis- played on the Scan to Folder screen.

Message	Cause	Solution
Cannot find the specified path. Please check the settings.	The destination compu- ter name or folder name is invalid.	Check whether the computer name and the folder name for the destination are correct.
Exceeded max. number of alpha- numeric charac- ters for the path.	The maximum number of specifiable alphanumeric characters in a path has been exceeded.	The maximum number of characters which can be entered for the path is 128. Check the number of character you en- tered, and then enter the path again. See "Transmission function", Scanner Reference.
The selected file(s) contained file(s) without access privileg- es. Only file(s) with access priv- ileges will be deleted.	You have tried to delete files without the authori- ty to do so.	The files can be deleted by the file ad- ministrator. To delete a file which you are not authorized to delete, contact the administrator.
Some of selected files are cur- rently in use. They could not be deleted.	You cannot delete a file which is waiting to be transmitted ("Waiting" status displayed) or whose information is be- ing changed with Desk- TopBinder.	Cancel transmission ("Waiting"status cleared) or the DeskTopBinder setting, and then delete the file.
Cannot cancel sending all se- lected file(s). Certain file(s) are currently be- ing sent.	You cannot cancel a file currently being sent.	You can only cancel files waiting to be sent. You cannot cancel files already sent or currently being sent, files that were sent but did not reach the destina- tion, or files that have been canceled.
Selected file is currently in use. Cannot change file name.	You cannot change the name of a file whose sta- tus is "Waiting" or that is being edited with DeskTopBinder.	Change the file name after canceling delivery or completing editing.
Selected file is currently in use. Cannot change password.	You cannot change the name of a file whose sta- tus is "Waiting" or that is being edited with DeskTopBinder.	Delete the password after canceling de- livery or completing editing.
Selected file is currently in use. Cannot change user name.	You cannot change the password of a file whose status is "Waiting" or that is being edited with DeskTopBinder.	A sender's name should be specified before sending e-mail. Send e-mail after specifying the sender's name.

Message	Cause	Solution
Connection with the destination has failed. Check the status and connection. To check the current status, press [Scanned Files Status].	The correct Network set- tings are not made.	 Check the network settings of the client computer. Check that components such as the LAN cable are connected properly. Check that the server settings are correct and the server is working properly.
Authentication with the destina- tion has failed. Check settings. To check the cur- rent status, press [Scanned Files Status].	The entered user name or password was invalid.	 Check that the user name and password are correct. Check that the ID and password for the destination folder are correct. A password of 128 or more characters may not be recognized.
Sender has not been specified.	The sender's name was not specified.	A sender's name should be specified before sending e-mail. Send e-mail after specifying the sender's name.
Exceeded max. E- mail size. Send- ing E-mail has been cancelled. Check [Max. E- mail Size] in Scanner Features.	The maximum e-mail size has been exceeded.	 Increase the size of [Max. E-mail Size]. Set [Divide & Send E-mail] to [Yes (per Page)] or [Yes (per Max. Size)]. See "Send Settings", General Settings Guide.
Sending the data has failed. The data will be re- sent later.	A network error has oc- curred and a file was not sent correctly.	Wait until sending is retried automati- cally after the preset interval. If sending fails again, contact the administrator.
Transmission has failed. To check the current sta- tus, press [Scanned Files Status].	While a file was being sent, a network error oc- curred and the file could not be sent correctly.	Try the operation once more. If the mes- sage is still shown, the network may be crowded. Contact the administrator. If multiple files were sent, use the Scanned Files Status screen to check for which file the problem occurred.
Transmission has failed. Insuffi- cient memory in the destination hard disk. To check the current status, press [Scanned Files Status].	Transmission has failed. There was not enough free space on the hard disk of the SMTP server, FTP server, or client com- puter at the destination.	Allocate sufficient space.

Message	Cause	Solution
Output buffer is full. Sending the data has been cancelled. Please try again later.	Too many jobs are in standby state, and send- ing was canceled.	Retry sending after sending jobs in standby state completes.
Exceeded max. number of pages per file. Do you want to store the scanned pages as 1 file?	The file being stored has exceeded the max. number of pages for one file.	Specify whether to use the data or not. Scan the pages that were not scanned and store them as a new file. See "Stor- ing Files Using the Scanner Function" Scanner Reference.
Exceeded maximum number of file to store. Delete all unnecessary files.	Too many files are wait- ing to be delivered.	Please try again after they have been delivered.
Exceeded max. number of stored files. Cannot send the scanned data as capturing files is unavail- able.	Too many files are wait- ing to be delivered.	Please try again after they have been delivered.
Exceeded max. number of files which can be used in Document Serv- er at the same time.	The maximum number of files that can be stored in the document server has been exceeded.	Check the files stored by the other func- tions, and then delete unneeded files. See "Document Server", Copy/Docu- ment Server Reference.
Entered protec- tion code for destination is incorrect. Please re-enter.	The correct protect desti- nation code was not en- tered.	Make sure the protection code is cor- rect, and then enter it again. See "Regis- tering a Protection Code", General Settings Guide.
Entered user code is not correct.	The entered user code is incorrect.	Check the authentication setting, and then specify a correct user code.
Exceeded max. number of alpha- numeric charac- ters.	The maximum enterable number of alphanumeric characters has been ex- ceeded.	Make sure the maximum number of characters which can be entered, and then enter it again. See "Values of Vari- ous Set Items for Transmission/Stor- age/Delivery Function", Scanner Reference.
Authentication has failed.	The entered login user name or login password is incorrect.	Check the login user name and login password. The machine is unable to au- thenticate. Contact an administrator.

Message	Cause	Solution
The entered path is not correct. Please re-enter.	The entered path format is incorrect.	Confirm the destination computer and the path, and then enter it again.
Captured file ex- ceeded max. number of pages per file. Cannot send the scanned data.	The maximum number of pages per file has been exceeded.	Reduce the number of pages in the transmitted file, and then resend the file. See "Storage function", Scanner Reference.
Original is being scanned by anoth- er function. Please wait.	The machine is using an- other function such as copying.	Retry scanning after the operation with the other function is completed.
E-mail address entered is not correct. Please re-enter.	The entered e-mail ad- dress is incorrect.	Make sure the e-mail address is correct, and then enter it again.
Memory is full. Scanning has been cancelled. Press [Send] to send the scanned data, or press [Cancel] to delete.	Because there is not enough free hard disk space in the machine for delivering or sending by e-mail while storing in the Document Server, only some of the pages could be scanned.	Specify whether to use the data or not.
Memory is full. Cannot scan. The scanned data will be deleted.	Because of insufficient hard disk space, the first page could not be scanned.	 Try one of the following measures: Wait for a while, and then retry the scan operation. Reduce the scan area or scanning resolution. See "Items for Specifying Scan Settings", Scanner Reference. Delete unneeded stored files. See "Deleting a Stored File", Scanner Reference.
Memory is full. Do you want to store scanned file?	Because there is not enough free hard disk space in the machine for storing in the Document Server, only some of the pages could be scanned.	Specify whether to use the data or not.
No paper. Load paper of one of the following sizes, then press [Start Printing].	No paper is set in the specified paper tray.	Load paper of the sizes listed in the message.

Message	Cause	Solution
Exceeded max. data capaci- ty.Check the scanning resolu- tion, then reset original(s).	The scanned original ex- ceeded maximum data capacity.	Specify the scan size and resolution again. Note that it may not be possible to scan very large originals at a high resolution. See "Relationship between Resolution and File Size", Scanner Ref- erence.
Exceeded max. data capaci- ty.Check scanning resolution, then press Start key again.	The scanned data exceed- ed maximum data capac- ity.	Specify the scan size and resolution again. Note that it may not be possible to scan very large originals at a high resolution. See "Relationship between Resolution and File Size", Scanner Ref- erence.
Exceeded max. page capacity per file. Press [Send] to send the scanned data, or press [Cancel] to delete.	The number of scanned pages exceeded maxi- mum page capacity.	Select whether to send the data so far.

When a Message Is Displayed on the Client Computer

This section describes likely causes of and possible solutions for the main error messages displayed on the client computer when using the TWAIN driver.

∰Important

□ If a message not described here appears, act according to the message. For information about how to turn off the main power switch, see About This Machine.

Message	Cause	Solution
Clear Misfeed(s) in ADF.	A paper misfeed has oc- curred inside the ADF.	Remove jammed originals, and place them again.
		Check whether the originals are suitable to be scanned by the machine.
Invalid Winsock version. Please use version 1.1 or higher.	You are using an invalid version of Winsock.	Install the operating system of the com- puter or copy Winsock from the operat- ing system CD-ROM.
The name is al- ready in use. Check the regis- tered names.	You tried to register a name that is already in use.	Use another name.

Message	Cause	Solution
Cannot detect the paper size of the original. Specify the scanning size.	The set original was mis- aligned.	 Place the original correctly. Specify the scan size. When placing an original directly on the exposure glass, the lift- ing/lowering action of the ADF triggers the automatic original size detection process. Lift the ADF by more than 30 degrees.
Cannot add any more scanning mode.	The maximum number of registerable scan modes has been exceeded.	The maximum number of modes that can be stored is 100. Delete unneeded modes.
Cannot specify any more scanning area.	The maximum number of registerable scan areas has been exceeded.	The maximum number of scanning are- as that can be stored is 100. Delete un- needed scanning area.
Call Service Please call your service repre- sentative.	An unrecoverable error has occurred in the ma- chine.	Call your service representative.
Scanner is not available on the specified device.	The TWAIN scanner function cannot be used on this machine.	Contact your service representative.
Scanner is not available. Check the scanner con- nection status.	 The machine's main power switch is off. The machine is not connected to the network correctly. 	 Set the main power switch to "On". Check whether the machine is connected to the network correctly. Deselect the personal firewall function of the client computer. Use an application such as telnet to make sure SNMPv1 or SNMPv2 is set as the machine's protocol. See "Network Settings", General Settings Guide and "Using telnet", Network Guide.
No response from the scanner.	The machine is not con- nected to the network correctly.	Check whether the machine is connected to the network correctly.
No response from the scanner.	The network is crowded.	Wait for a while, and then try to reconnect.
Error has oc- curred in the scanner.	The application-speci- fied scan conditions have exceeded the setting range of the machine.	Check whether the scanning settings made with the application exceed the setting range of the machine.
Fatal error has occurred in the scanner.	An unrecoverable error has occurred on the ma- chine.	An unrecoverable error has occurred in the machine. Call your service repre- sentative.

Message	Cause	Solution
Cannot connect to the scanner. Check the network Access Mask set- tings in User Tools.	An access mask is set.	Contact the network or scanner admin- istrator.
Scanner is not ready. Check the scanner and the options.	The ADF cover is open.	Check whether the ADF cover is closed.
Insufficient mem- ory. Reduce the scanning area.	Scanner memory is insufficient.	 Reset the scan size. Lower the resolution. Set with no compression. See TWAIN Driver help. The problem may be due to the follow- ing cause: Scanning cannot be performed if large values are set for brightness when using halftone or high resolu- tion. See "Relationship between Res- olution and Original Size", Scanner Reference.
Insufficient mem- ory. Reduce the scanning area.	When a paper misfeed occurs in the machine during printing, scanning cannot be performed.	After the misfed paper has been re- moved, proceed with scanning.
Cannot find "XXX" scanner used for the previous scan. "YYY" will be used instead. ("XXX" and "YYY" indi- cate scanner names.)	 The main power switch of the previ- ously used scanner is not set to "On". The machine is not connected to the net- work correctly. 	 Check whether the main power switch of the scanner used for the previous scan is turned off. Check the previously used scanner is connected to the network correct- ly. Cancel the Personal Firewall of the client computer. Use an application such as telnet to make sure SNMPv1 or SNMPv2 is set as the machine's protocol. See "Network Settings", General Set- tings Guide and "Using telnet", Network Guide. Select the scanner used for the pre- vious scan.

Message	Cause	Solution
Error has oc- curred in the scanner driver.	An error has occurred in the driver.	 Check whether the network cable is connected correctly to the client computer. Check whether the Ethernet board of the client computer is recognized correctly by Windows. Check whether the client computer can use the TCP/IP protocol.
Communication er- ror has occurred on the network.	A communication error has occurred on the net- work.	Check whether the client computer can use the TCP/IP protocol.
Scanner is in use for other func- tion. Please wait.	A function of the machine other than the scanner function is being used such as the copier func- tion.	Wait for a while and reconnect.
Insufficient mem- ory. Close all other applica- tions, then re- start scanning.	Memory is insufficient.	 Close all the unnecessary applications running on the client computer. Uninstall the TWAIN driver, and then reinstall it after restarting the computer.
No User Code is registered. Con- sult your system administrator.	Access is restricted with user codes.	Contact the administrator of the ma- chine.
Any of Login User Name, Login Pass- word or Driver Encryption Key is incorrect.	The entered login user name, password, or driv- er encryption key was invalid.	 Check the login user name, login password, and driver encryption key. Permission to use this function has not been granted. Contact the administrator.

6. Adding Paper, Toner and Staples

This chapter describes troubleshooting procedures that are applicable to all the machine's functions.

Loading Paper

This section describes what to do when paper runs out and needs reloading.

A CAUTION:

When loading paper, take care not to trap or injure your fingers.

Tray 1 use A4 \square paper exclusively. Load only A4 \square at all times.

🖉 Note

- □ Fan the paper before loading.
- □ Straighten curled or warped paper before loading.
- □ If you want to load paper other then A4 □ paper in Tray 1, contact your service representative.
- For paper types and sizes, see "Recommended Paper Sizes and Types", About This Machine.
- □ To load paper in the bypass tray, see "Copying from the Bypass Tray", Copy/Document Server Reference.


Loading Paper into Tray 1 (Tandem Tray)

The following procedure describes loading paper into Tray 1.

∰Important


- □ When paper loaded in the right side of Tray 1 runs out, paper on the left is automatically shifted to the right. While the paper is moving, a message instructing you to wait appears. Do not pull out the tray at this time.
- For the right stack, align the right edge of the copy paper with the right edge of the tray. For the left stack, align the left edge of the copy paper to the left edge of the tray.
- □ Tray 1 uses A4 □ paper. If you want to load paper other then A4 □ paper, contact your service representative.
- **D** Do not stack paper over the limit mark.

1 Carefully pull out the paper tray until it stops.

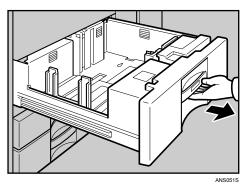


2 Square the paper and place it print side down.

• Whole tray pulled out

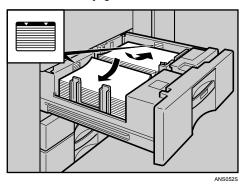

• Left half of the tray pulled out

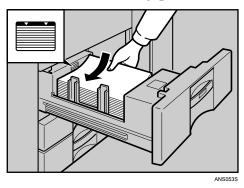

3 Carefully push the paper tray fully in.

🖉 Note

□ You can load paper even while making copies from Tray 1. You can pull out the left half of the tray while copying is in.


Loading Paper into Tray 2 and 3

The following procedure describes loading paper into Tray 2 and 3.


∰Important

- □ Various sizes of paper can be loaded in Tray 2 and 3 by adjusting the positions of side fence and end fence.
- □ Check the paper edges are aligned at the right side.
- **D** Do not stack paper over the limit mark.

1 Carefully pull out the paper tray until it stops.

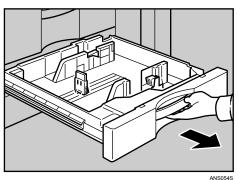

2 Square the paper and load it print side down.

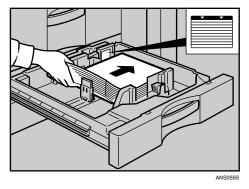

E Carefully push the paper tray fully in.

🖉 Note

- □ If you load a paper size that is not selected automatically, you will need to specify the paper size with the control panel. Following paper sizes that are not selected automatically.
- □ The tray can hold up to 550 sheets.

${}^{\mathcal{P}}$ Reference

p.92 "Changing the Paper Size"

p.94 "Changing to a Size that is Not Automatically Detected"


Loading Paper into the Large Capacity Tray (LCT)

The following procedure describes loading paper into the large capacity tray (LCT).


∰Important

- \square The LCT loads A4 \square , B5 \square , 8¹/₂ × 11 \square paper.
- □ Align the paper neatly and press its edge to the right and left plate. Poorly loaded paper causes misfeeds.
- **□** Check that the paper edges are aligned at the left side.
- □ Do not stack paper over the limit mark.

1 Open the top cover of the large capacity tray (LCT).

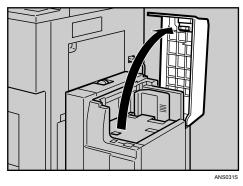


2 Load the paper in the tray along the edge on the left.

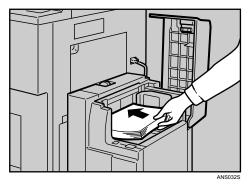

Press the [Down] key.

The key blinks while the bottom plate is moving down.

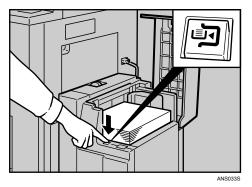

Load paper by repeating steps 2 and 3.

5 Close the top cover of the large capacity tray (LCT).

🖉 Note

□ The tray can hold up to 4,000 sheets.


Loading Paper in the Interposer

The following procedure describes loading paper into the interposer.


∰Important

- Load paper on the side already printed (the front side). If you are using the Booklet Finisher (Saddle Stitch), load sheets print side down.
- Load paper in the interposer in the same orientation as paper in the paper tray.
- □ The staple or punching location will be on the left side of the paper, when you are facing the machine.
- Do not place anything on top of or leave documents on the sensor. This may lead to the paper size not being correctly scanned or paper jams.
- □ When using the Z-fold function, the paper in the interposer must be of the same size as the prints after they have been Z-folded. If the paper in the interposer is larger than the Z-folded sheets, a misfeed might occur.

Load paper orderly.

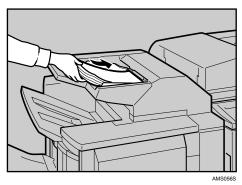


2 Adjust the side fence to the paper size.

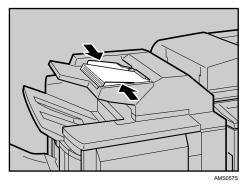

🖉 Note

□ To set the paper in the interposer, align the orientation of originals in the ADF as shown below.

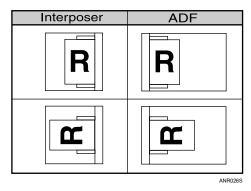


Orientation-Fixed Paper or Two-Sided Paper

The following describes paper with its orientation and printing surface specified (letterhead paper).


Orientation-fixed (top to bottom) or two-sided paper (for example, letterhead paper, punched paper, or copied paper) might not print correctly, depending on how the originals and paper are placed. Select **[On]** in **[Letterhead Setting]** under **[Copier / Document Server Features]**, and then place the original and paper as shown below. See "Letterhead Setting", General Settings Guide. When printing with the printer function, placement orientation is the same.

For printing using the printer function, load paper in the same orientation.

✤ Orig. orientation

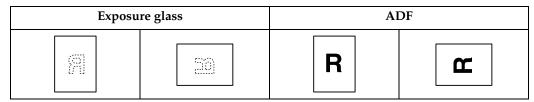

Paper orientation

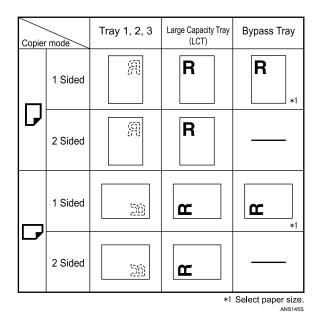

🖉 Note

□ For **[System Settings]**, specify Letterhead as "Paper Type" for the paper tray you want to use. See "Tray Paper Settings", General Settings Guide.

Changing the Paper Size

This section describes how to change a paper size.

Procedures for changing the paper size differ depending on the tray (tray 1 or other optional paper tray units). Make sure you are following the appropriate procedure before you begin.

🖉 Note


- Be sure to select the paper size with User Tools. If you do not, misfeeds might occur.
- □ Fan the paper before loading.
- □ Straighten curled or warped paper before loading.
- □ For details about paper sizes and types, see "Copy Paper", About This Machine.

Changing the Paper Size in Tray 2 and 3

The following procedure describes how to change a paper size in Tray 2 and 3.


∰Important

- □ If a paper tray is pushed vigorously when putting it back into place, the position of the tray's side fence may slip out of place.
- **□** Check the top of the paper is aligned to the right side.
- **D** Do not stack paper over the limit mark.
- Check that paper in the paper tray is not being used for copying, and then pull the tray carefully out until it stops.

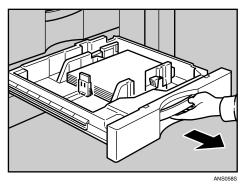


2 Remove paper if loaded.


3 Release the lock on the side fence.

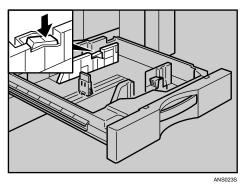

While pressing down the release lever, slide the side fence until they are aligned the paper size you want to load.

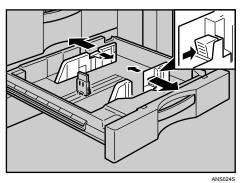


5 Slide the end fence until it is aligned with the size of paper to you want to load.

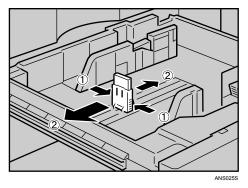

6 Square the paper and load it print side down.

Re-lock the side fence again.

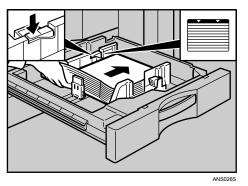

2 Carefully slide the paper tray fully in.

B Check the size on the display.

🖉 Note

□ If there is space between the side fence and paper, bring the side fence flush against the edge of the paper.

Changing to a Size that is Not Automatically Detected


If you load a paper size that is not selected automatically, you need to specify the paper size with the control panel. This section describes how to load these paper taking $11'' \times 15'' \square$ as an example.

∰Important


□ Following paper sizes that are not selected automatically.

• 11"×15", 11"×14", 10"×15", 8¹/₄"×14", 8"×10¹/₂", 210×340, 210×182, 210×170


Press the [User Tools/Counter] key.

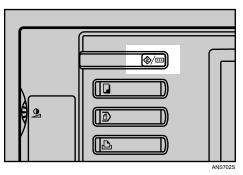


2 Press [System Settings].

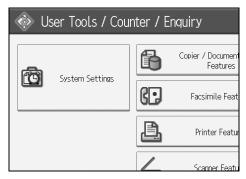


B Press [Tray Paper Settings] tab.

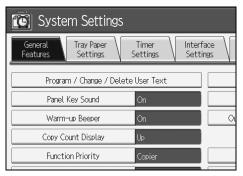


Select the tray for which you want to change the paper settings. Press either of [Tray Paper Size: Tray 2] and [Tray Paper Size: Tray 3].

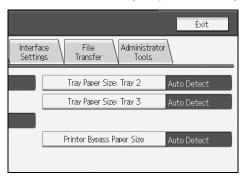

5 Select the loaded paper size and feed direction, and then press [OK].

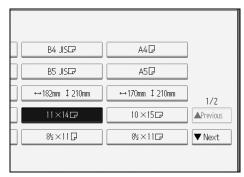

The set paper size and feed direction is displayed.

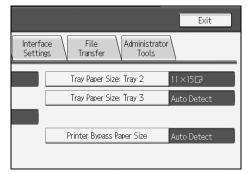

6 Press the **[User Tools/Counter]** key.

The initial display is shown.

🖉 Note

If you want to print on paper that is selected automatically after printing on a paper size that is not selected automatically, you must return the setting to "Auto Detect". Reload the paper, repeat step 1 to 4. and select "Auto Detect" in step 5. The setting is returned to "Auto Detect".

Adding Toner

This section describes adding and storing toner.

A WARNING:

 Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations.

A CAUTION:

• Do not open toner containers forcefully. Toner can spill, dirtying your clothes or hands, and possibly resulting in accidental ingestion.

A CAUTION:

• Keep toner (used or unused) and toner containers out of reach of children.

A CAUTION:

• If toner or used toner is inhaled, gargle with plenty of water and move into a fresh air environment. Consult a doctor if necessary.

A CAUTION:

• If toner or used toner gets into your eyes, flush immediately with large amounts of water. Consult a doctor if necessary.

A CAUTION:

• If toner or used toner is swallowed, dilute by drinking a large amount of water. Consult a doctor if necessary.

A CAUTION:

- Avoid getting toner on your clothes or skin when removing a paper jam or replacing toner. If your skin comes into contact with toner, wash the affected area thoroughly with soap and water.
- If toner gets on your clothing, wash with cold water. Hot water will set the toner into the fabric and may make removing the stain impossible.

A CAUTION:

• Our products are engineered to meet high standards of quality and functionality, and we recommend that you use only the expendable supplies available at an authorized dealer.

∰Important

- □ Fault may occur if you use toner other than the recommended type.
- When adding toner, do not turn off the operation switch. If you do, settings will be lost.
- □ Always add toner when the machine instructs you.
- □ When a message "L Add Toner" is shown on the display, replace the toner.
- □ Store toner containers in a cool, dry place free from direct sunlight.
- □ Store on a flat surface.

🖉 Note


- □ You can still make about 1000 copies after the messages "▲ Toner Cartridge is almost empty.." and "Replace Toner Cartridge." appear cyclically, but replace toner early to prevent poor copy quality.
- □ You can check name of the required toner name and the replacement procedure using the "▲ Add Toner" screen.
- □ Press **[System Status]** to check contact number for consumables' order. For system status, see p.5 "Checking Machine Status and Settings".

Inserting Toner


The following describes how to replace toner.

∰Important

D Do not shake the removed toner bottle. The remaining toner might scatter.

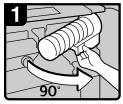


- 1. Open the front cover of the machine.
- Pull out the lever under the toner bottle toward you 90°.

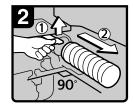

3. Raise the green lever, and then gently pull out the toner bottle.




 Hold the new bottle horizontally, and then shake it five or six times without removing the outer cap.

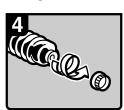

5. Remove the outer cap.

Note Do not remove the inner cap.

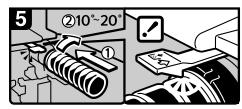

6. Place the toner bottle in position, then push it in until the green lever clicks.

Note

If you cannot get it to click in, pull out the toner bottle a little, slightly rotate it to the right by $10 - 20^{\circ}$ then try again.

- o Correction
- 7. Return the lever under the toner bottle to its original position.
- 8. Close the front cover of the machine.

Used Toner

Toner cannot be re-used.

Bring the stored used container to your sales representative or service representative for recycling through our recycling system. If you discard it on your own, treat it as general plastic waste material.

Sending Fax Messages When Toner Has Run Out

When the machine has run out of toner, the indicator on the display lights. Note that even if there is no toner left, you can still send fax documents.

∰Important

If number of communications executed after the toner has run out and not listed in the automatically output Journal exceeds 200, communication is not possible.

1 Make sure that the machine is in facsimile mode.

2 Press [Exit], and then perform transmission operation.

The error message disappears.

🔗 Note

- The Memory Storage Report, Polling RX Reserve Report, and Confidential File Report are not printed.
- □ If the fax screen does not appear in step **1**, press the **[Facsimile]** key.

6

Adding Staples

This section describes what to do when staples need replacing.

∰Important


□ Stapling failures or jams may occur if you use a staple cartridge other than that recommended.

Refill the stapler according to the finisher type. (Check the type if you are unsure.) For details about type of finisher, see "Options", About This Machine.

3,000 Sheet-50 Sheet Staple Finisher and Booklet Finisher

The following procedure describes how to add staples to the 3,000 Sheet-50 Sheet Staple Finisher and Booklet Finisher.




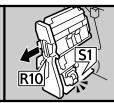

3,000 Sheet - 50 Sheet Staple Finisher:


Booklet Finisher:

1. Open the finisher front cover. 2. Pull out the staple unit.

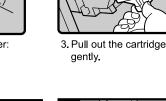





4. Holding both sides of the cartridge, pull up the upper unit.

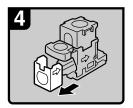


5. Remove the empty refill in the direction of the arrow.

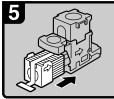

6. Push the new refill into the cartridge until it clicks.

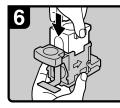


7. Push the upper unit gently into the cartridge.

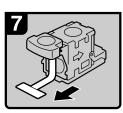

8.Pull out the ribbon.



9. Push the cartridge down until it clicks.

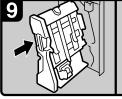

3,000 Sheet - 50 Sheet Booklet Finisher: Staple Finisher:

Return the staple unit to its original position.
 Close the finisher front cover.




6

🖉 Note


□ If you cannot pull out the upper unit of the cartridge, there are staples remaining inside the cartridge. Use all the staples, do not add more.

3,000 Sheet-100 Sheet Staple Finisher


The following procedure describes how to add staples to the 3,000 Sheet-100 Sheet Staple Finisher.

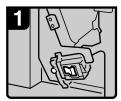

1. Open the finisher front cover.

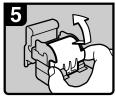


5. Raise the cover up.

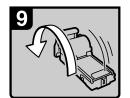


9. Turn the cartridge around.




2. Pull out the cartridge lever.

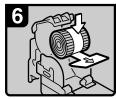

6. Set the new refill.

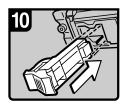

10. Reinstall the cartridge.

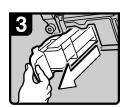

3. Pull out the cartridge.



Lower the cover until it clicks.



11. Push the cartridge in until it clicks.



4. Put the cartridge down on a level surface.



6

8. Pull out the ribbon.



12. Close the finisher front cover.

ANS048S

Booklet Finisher (Saddle Stitch)

The following procedure describes how to add staples to the Booklet Finisher.




2. Pull out the staple unit.


cover.

2

3. Pull lever S2.

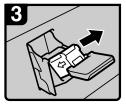


4. Pull out the cartridge gently.

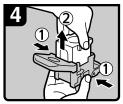


5. Holding both sides of the cartridge, pull up the upper unit.

Note If you cannot pull out the upper unit, there are staples remaining inside the cartridge. Use all the staples, do not add more.

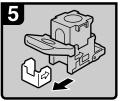


6. Remove the empty refill in the direction of the arrow.

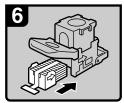


7. Push the new refill into the cartridge until it clicks.




8. Push the upper unit gently into the cartridge.

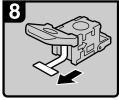

9. Pull out the ribbon.

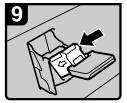

10. Push the cartridge down until it clicks.

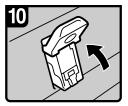

11. Return lever S2 to its original position.

Return the staple unit to its original position.
 Close the finisher front cover.

ANS060S

7. Clearing Misfeeds

This chapter describes what to do when paper or originals misfeed (become jammed inside the machine).

Removing Jammed Paper

This section describes how to locate and remove jammed paper.

A CAUTION:

• The inside of the machine could be very hot. Do not touch any parts other than specified in this document when removing misfed paper. Otherwise, it may cause burn injury.

A CAUTION:

• The fusing section of this machine might be very hot. Caution should be taken when removing misfed paper.


∰Important

- When clearing misfeeds, do not turn off the operation switch. If you do, your copy settings will be lost.
- □ To prevent misfeeds, do not leave any torn scraps of paper inside the machine.
- □ Contact your service representative if misfeeds occur frequently.

Locating Jammed Paper

If a misfeed happens, remove the misfed paper or original following the procedures stated on the sticker on the rear of main unit front cover.

A misfeed has occurred in the place corresponding to the letter displayed on the control panel.

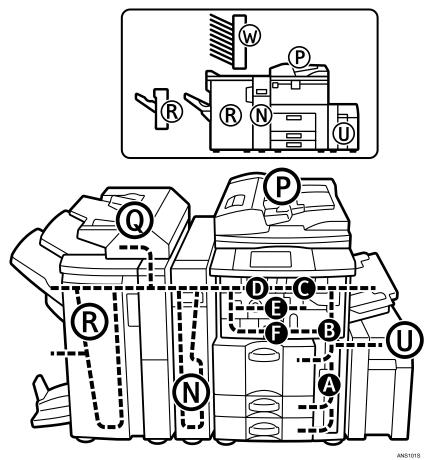

1 Press the key of the section from where you want to remove the jammed paper.



2 After each step is complete, press [Next]. To go back to the previous step, press [Previous].



2 When the jammed paper is entirely removed, restore the machine to its original state.

🖉 Note

□ More than one misfeed may be indicated. When this happens, check all the areas indicated.

p.106 "When A Is lit"

p.106 "When B Is lit" p.106 "When C Is lit"

p.107 "When D Is lit"

p.107 "When E Is lit"

p.108 "When F Is lit"

p.109 "When N Is Lit"

p.110 "When P Is Lit"

p.111 "When Q Is lit"


p.112 "When R Is Lit"

p.115 "When W Is lit"

p.115 "When U Is lit"

When A Is lit

This section describes how to remove jammed paper when A is lit.

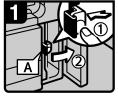

 Open the front cover.
 Push button A and open the guide plate



Remove misfed paper.
 Close the guide plate.
 Close the front cover.

When B Is lit

This section describes how to remove jammed paper when B is lit.



 Open the front cover.
 Turn knob B1 counterclockwise and remove misfed paper




 Return lever B2 to its original position.
 Close the front cover.

ANS003S


BFQ001S

When C Is lit

This section describes how to remove jammed paper when C is lit.

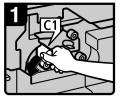

 Open the front cover.
 Turn lever C1 to the left.

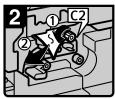

3. Turn lever C2 couterclockwise and remove misfed paper.

4. Return lever C1 to its original position. 5. Close the front cover.

BFQ008S

When D Is lit

This section describes how to remove jammed paper when D is lit.




 Open the front cover.
 Turn fuser unit knob D1/E1 11-12 times counterclockwise to eject the paper.




- 6. Remove the paper being careful not to touch the area around lever D4.
- Return lever D3/D4 to its original position, and then push back the fuser unit.




3.Pull handle D2 and pull out the fuser unit.

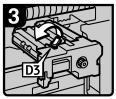

4. Raise lever D3.

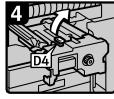

5 Raise lever D4.

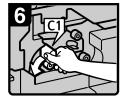

8. Turn lever C1 to the left.



 9. Remove misfed paper.
 10. Return lever C1 to its original position.
 11. Close the front cover.

BFQ002S

When E Is lit

This section describes how to remove jammed paper when E is lit.




 Open the front cover.
 Turn fuser unit knob D1/E1 11-12 times

counterclockwise to



3. Pull handle E2 and fully pull out the duplex unit.

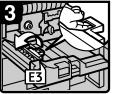


4. Raise lever E3.



5 Remove the paper being careful not to touch the area around lever E3.

 Return lever E3 to its original position, and then push back the duplex unit.

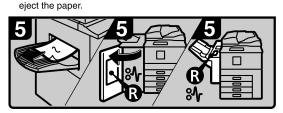

7. Remove the paper from the output tray if it is visible. (When the finisher is installed, open the finisher front cover and remove misfed paper.)

8. Close the front cover.


BFQ003S

When F Is lit

This section describes how to remove jammed paper when F is lit.



 Open the front cover.
 Pull handle E2 and fully pull out the duplex unit.

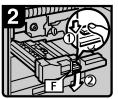

3. Lower lever F while pressing it.




 Remove misfed paper.
 Return lever F to its original position, and then push back the duplex unit.
 Close the front cover.

BFQ004S

When N Is Lit

This section describes how to remove jammed paper when N1-N3 is lit (when Z-Folding Unit is installed).

When N1 is lit

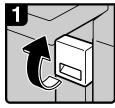

1. Open the front cover.




2. Lift the N1 lever.




3. Remove misfed paper. 4. Lower the N1 lever. 5. Close the front cover.

ANS008S

When N2 or N3 is lit

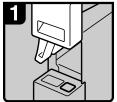

1. Open the front cover. Lift the N1 lever.

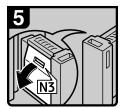

5. If you cannot remove the misfed paper, open the N3 cover.



2. Pull out the Z-folding unit.

6



6. Remove misfed paper. Close the N3 cover.



3. Open the N2 cover.



4. Remove misfed paper. Close the N2 cover.

7. Return the Z-folding unit to its original position.

- 8. Lower the N1 lever.
- 9. Close the front cover.

ANS009S

When P Is Lit

This section describes how to remove jammed paper when P1-P2 is lit.

When P1 is lit





1. Open the document feeder cover.

2. Raise the feed roller.



Remove misfed originals.
 Close the document feeder cover.

ANS010S

When P2 is lit



1. Lift the document feeder.



2. Slide the lever and open the cover.




Remove misfed originals.
 Close the cover.

ANS011S

When Q Is lit

This section describes how to remove jammed paper when Q is lit (when Interposer is installed).

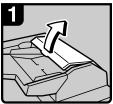


1. Open the interposer upper cover.




2. Raise the feed roller.



 Remove misfed paper.
 Close the interposer upper cover.

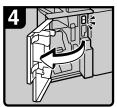

5. Open the finisher front cover.

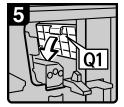

6. Lower lever Q1.



Remove misfed paper.
 Close the finisher front cover.


ANS012S

When R Is Lit


This section describes how to remove jammed paper when R1-R12 is lit.

3,000 Sheet-50 Sheet Staple Finisher



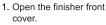


2. Turn lever R1 to the left.

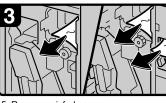



3. Turn knob R2 counterclockwise. 4. When the optional interposer is installed, lower lever Q2, and then turn knob R2 counterclockwise.

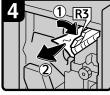

6. If you cannot remove misfed paper, open lever R3 to the right and remove it.




7. Raise lever R4 and remove misfed paper.

8 Close the finisher front cover.

5. Remove misfed paper.


When R5 - R8 is lit

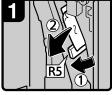


- 1. Open the finisher front cover.
- 2. Lower lever R5 and remove misfed paper.



3. If you cannot remove misfed paper, raise lever R6 and remove it.

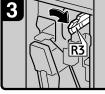

4. Open lever R3 to the right.

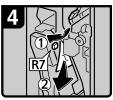


5. Lower lever R7 and remove misfed paper.

- 6. Pull handle R8 and pull out the staple unit, then
- remove misfed paper.
- 7 Close the finisher front cover.

BFQ005S


3,000 Sheet-100 Sheet Staple Finisher

When R1 - R3 is lit

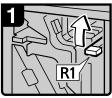




- 1. Open the finisher front cover.
- 2. Raise lever R1.
- 3. Remove misfed paper.

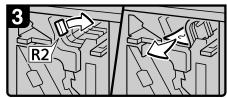

4. If you cannot remove misfed paper, turn lever R2 to the right and remove it.

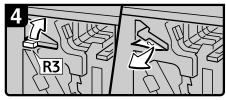

5. If you cannot remove misfed paper, raise lever R3 and remove it.

When R4 or R5 is lit



- 1. Open the finisher front cover.
- 2. Pull lever R4 and remove misfed paper.




3. If you cannot remove misfed paper, pull lever R5 and remove it.

When R6 or R7 is lit



1. If you cannot remove misfed paper, raise lever R6 and remove it.

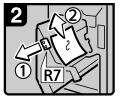

- 2. Pull handle R7 and pull out the staple unit, then remove misfed paper.
- 3 Close the finisher front cover.

BFQ009S


Booklet Finisher (Saddle Stitch)

When R1 - R4 is lit






- 1. Open the finisher front cover.
- 2. Turn lever R1 to the left.
- 3. Turn knob R2 counterclockwise. 4. When the optional interposer is installed, lower lever Q2, and then turn knob R2 counterclockwise.

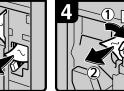


6. If you cannot remove misfed paper, open lever R3 to the right and remove it.

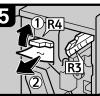


- 7. Raise lever R4 and remove misfed paper. 8 Close the finisher front cover.





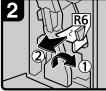

3. If you cannot remove misfed paper, raise lever R6 and remove it.

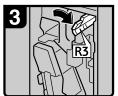

4. Open lever R3 to the right.



5. Lower lever R7 and remove misfed paper. 6. Close the finisher front cover.

BFQ006S




1. Open the finisher front

2. Lower lever R5 and re-

move misfed paper.

cover.

- 1. Open the finisher front cover.
- 2. Turn lower knob R8 clockwise.

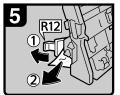

6. If you cannot remove misfed paper, open lever R12 to the left and remove it.

- R9
- 3. Turn upper knob R9 9-11 times clockwise.




4. Pull lever R10 and pull out the staple unit, then remove misfed paper.



5. If you cannot remove misfed paper, open lever R11 to the left and remove it.

When W Is lit

This section describes how to remove jammed paper when W is lit (when Mailbox is installed).

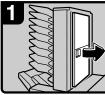





2. Remove misfed paper.



3. Remove misfed paper. 4. Close the mailbox right cover.

ANS017S

When U Is lit

right cover.

This section describes how to remove jammed paper when U is lit (when Large Capacity Tray (LCT) is installed).



1. Open the top cover and remove misfed paper. 2. Close the top cover.

ANS018S

Note 🖉

- □ Inside the finisher, or inside the front cover, there is a sticker explaining how to remove misfed paper.
- □ If a detailed removal instruction appears on the right of the screen, follow it.
- □ You can also use the procedure indicated in [System Status] to remove jammed paper.

Removing Jammed Staples

This section describes how to remove jammed staples.

∰Important

- Curled paper may cause staples to jam. To avoid this, turn copy paper over in the tray.
- □ When the finisher is installed, after removing jammed staples, staples will not be ejected the first few times you try to use the stapler.

Remove the jammed staples according to the finisher type. (Check the type if you are unsure.) For details about type of finisher, see "Options", About This Machine.


3,000 Sheet-50 Sheet Staple Finisher and Booklet Finisher

The following procedure describes how to remove jammed staples from the 3,000 Sheet-50 Sheet Staple Finisher and Booklet Finisher.





- 3,000 Sheet 50 Sheet Staple Finisher:
- Booklet Finisher:
- 1. Open the finisher front cover.
- 2. Pull out the staple unit.

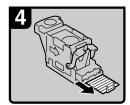


5. Remove the jammed staples.




6. Pull down the face plate until it clicks.



3. Pull out the cartridge gently.

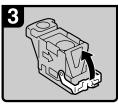

4. Open the face plate.

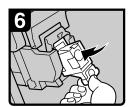

7. Pull down the cartridge until it clicks.




3,000 Sheet - 50 Sheet Staple Finisher:

```
Booklet Finisher:
```


- 8. Return the staple unit to its original position.
- 9. Close the finisher front cover.

3,000 Sheet-100 Sheet Staple Finisher


The following procedure describes how to remove jammed staples from the 3,000 Sheet-100 Sheet Staple Finisher.

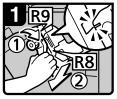


- 1. Open the finisher front cover.
- 2. Turn knob R9 until the markings align.
- 3. Pull lever R8 and pull the staple unit completely out.

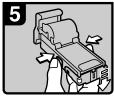


7. Push the buttons on the both sides of the cartridge and open the face plate.

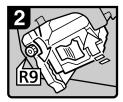

4. Turn knob R9 to rotate the staple unit.

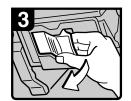

5. Pull out the cartridge lever.

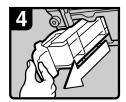


6. Pull out the cartridge.




8. Remove jammed staples.




9 Lower the face plate until it clicks.

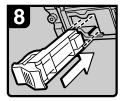

10. Reinstall the cartridge.

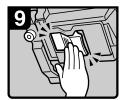

11. Push the cartridge in until it clicks.

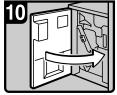


- 12. Turn knob R9 counterclockwise 13. Push back the staple unit. until the markings align.

 - 14. Close the finishers front cover.

BFQ010S


Booklet Finisher (Saddle Stitch)

The following procedure describes how to remove jammed staples from the Booklet Finisher.

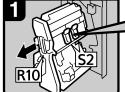


1. Open the finisher front cover.


2. Pull out the staple unit.

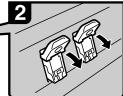


3. Pull lever S2.

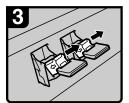

4. Pull out the cartridge gently.

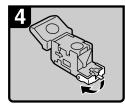


5. Open the face plate of the cartridge.

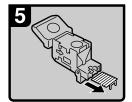


6. Remove the jammed staples.




7. Pull the face plate down until it clicks.

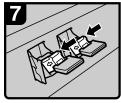

8. Push the cartridge down until it clicks.

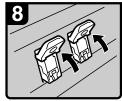

9. Return lever S2 to its original position.

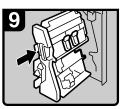

10. Return the staple unit to its original position.

11. Close the finisher front cover.

ANS062S

Removing Punch Waste

This section describes how to remove punch waste.


🖉 Note

□ While "Hole Punch Receptacle is full." is displayed, you cannot use the Punch function.


3,000 Sheet-50 Sheet Staple Finisher and Booklet Finisher

The following procedure describes how to remove punch wastes from the 3,000 Sheet-50 Sheet Staple Finisher and Booklet Finisher.


1 Open the front cover of finisher.

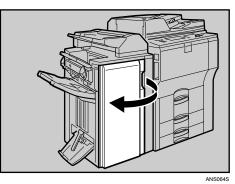

2 Pull out the punch waste box carefully, and then remove punch waste.

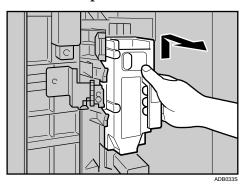

3 Reinstall the punch waste box.

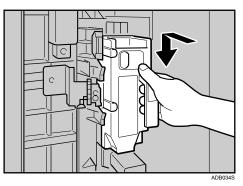

4 Close the front cover of finisher.

"Hole Punch Receptacle is full." disappears.


🖉 Note

- □ If you do not reinstall the punch waste box in Step 3, the "Hole Punch Receptacle is full." message continues to be displayed.
- □ If the message is still displayed, reinstall the punch waste box.


3,000 Sheet-100 Sheet Staple Finisher

The following procedure describes how to remove punch wastes from the 3,000 Sheet-100 Sheet Staple Finisher.


1 Open the front cover of finisher.

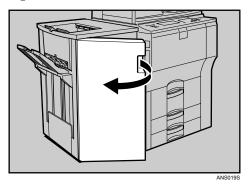

2 Pull out the punch waste box carefully, and then remove punch waste.

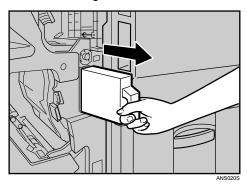

3 Reinstall the punch waste box.

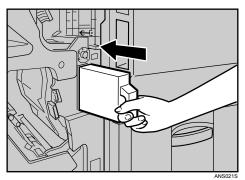

Close the finisher front cover.

"Hole Punch Receptacle is full." disappears.

🖉 Note

- □ If you do not reinstall the punch waste box in Step **B**, the "Hole Punch Receptacle is full." message continues to be displayed.
- □ If the message is still displayed, reinstall the punch waste box.

8. Remarks

This chapter describes how to maintain and operate the machine.

Where to Put Your Machine

This section provides precautions for installation, movement and disposal.

Machine Environment

Choose your machine's location carefully.

Environmental conditions greatly affect its performance.

Optimum environmental conditions

The following describes precautions when locating the machine.

A CAUTION:

- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.

A CAUTION:

• After you move the machine, use the caster fixture to fix it in place. Otherwise the machine might move or come down to cause an injury.

A CAUTION:

- Make sure the room where you are using the machine is well ventilated and spacious. Good ventilation is especially important when the machine is used heavily.
- Temperature: 10-32 °C (50-89.6 °F) (humidity to be 54% at 32 °C, 89.6 °F)
- Humidity: 15-80% (temperature to be 27 °C, 80.6 °F at 80%)
- A strong and level base.
- The machine must be level within 5 mm, 0.2 inches: both front to rear and left to right.
- To avoid possible buildup of ozone, make sure to locate this machine in a large well ventilated room that has an air turnover of more than 30 m³/hr/person.

Environments to avoid

- Locations exposed to direct sunlight or other sources of strong light (more than 1,500 lux).
- Locations directly exposed to cool air from an air conditioner or heated air from a heater. (Sudden temperature changes can cause condensation to form inside the machine.)
- Locations close to machines generating ammonia, such as a diazo copy machine.
- Places where the machine will be subject to frequent strong vibration.
- Dusty areas.
- Areas with corrosive gases.

Moving

The following describes precautions when moving the machine.

A CAUTION:

• Before moving the machine, be sure to disconnect all external connections, especially the power cord from the wall outlet. Damaged power cords are a fire and electric shock hazard.

A CAUTION:

• Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.

∰Important

D Be careful when moving the machine. Take the following precautions:

- Turn off the main power.
- Unplug the power cord from the wall outlet. When you pull out the plug from the socket, grip the plug to avoid damaging the cord, thereby reducing the risk of fire or electric shock.
- Close all covers and trays, including the front cover and bypass tray.
- Keep the machine level and carry it carefully, taking care not to jolt or tip it. Rough handling may cause a malfunction or damage the hard disk or memory, resulting in loss of stored files.
- □ Do not take off the holding stand.
- Protect the machine from strong shocks. Impact can damage the hard disk and cause stored files to be lost. As a precautionary measure, files should be copied to another computer.

Power Connection

The following describes power supply.

A WARNING:

- Connect the machine to the power source specified on the inside front cover of this manual and do not use any other power sources. Connect the power cord directly to a wall outlet and do not use an extension cord. Power sources not specified on the inside front cover of this manual and extension cords are electric shock or fire hazards.
- Power cords that are damaged, broken, modified, trapped under heavy objects, pulled hard, or bent severely are electric shock and fire hazards.

A WARNING:

• If the power cord is damaged (exposure of the core, disconnection, etc.), contact your service representative to change a new one. Operating the machine with a damaged power cord may cause an electric shock or fire.

A CAUTION:


• When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).

A CAUTION:

- To disconnect the power cord, pull it out by plug. Do not drag the cord itself. Doing so may result in damage to the cord, leading to fire or electric shock.
- Make sure the plug is inserted firmly in the wall outlet.
- Voltage must not fluctuate by more than 10%.
- The wall outlet shall be installed near the machine and shall be easily accessible.

Access to the Machine

Place the machine near the power source, providing the clearance areas shown.

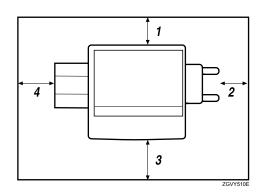

- **1.** Rear: 5 cm (2") or more
- 2. Right: 4 cm (1.6") or more
- 3. Front: 70 cm (27.5") or more
- 4. Left: 10 cm (4") or more
- 🖉 Note
- □ For the required space when options are installed, contact your service representative.

Maintaining Your Machine

If the exposure glass, exposure glass cover, or ADF belt is dirty, copy clarity may be reduced. Clean these parts if they are dirty.

∰Important

- Do not use chemical cleaners or organic solvents, such as thinner or benzene. If such substances get inside the machine or melt plastic parts, a failure might occur.
- Do not clean parts other than those explicitly specified in this manual. Other parts should only be cleaned by your service representative.

How to maintain

Cleaning the machine Wipe the machine with a soft, damp cloth, and then wipe it with a dry cloth to remove the water.

Cleaning the Exposure Glass


The following procedure describes how to clean the exposure glass and the scanning glass.



Clean 1 and 2.

Cleaning the Exposure Glass Cover

The following procedure describes how to clean the exposure glass cover.

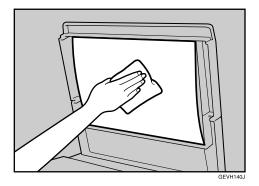


Cleaning the Auto Document Feeder


The following procedure describes how to clean the ADF.

1 Clean the white sheet of the ADF.


Clean 1 and 2.

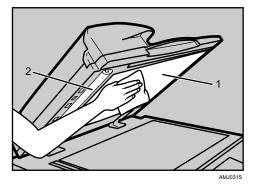

2 Pull the lever.

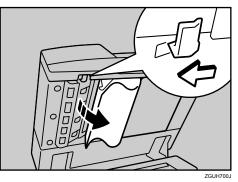

B Wipe the scanning glass.

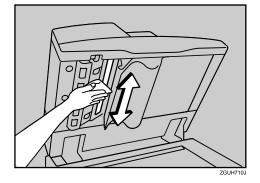

8

INDEX

3,000 Sheet-100 SheetStaple Finisher, 101, 117, 1203,000 Sheet-50 SheetStaple Finisher, 100, 116, 119

A

Access to the Machine, 126 Adding paper, 85 Adding staples, 100 Adding toner, 97 Adjusting the Volume, 33 Alert Messages, 55 Auto Document Feeder (ADF), 129

В

Booklet Finisher, 100, 102, 116, 118, 119

С

Cannot Browse the Network to Send a Scan File, 72 Cannot Exit from Connect Copy, 30 Cannot Make Clear Copies, 22 Cannot Make Copies As Wanted, 24 Cannot Print, 63 Cannot Send or Receive Fax Messages as Wanted, 43 Cannot Send Scanned Files, 72 Changing the Paper Size, 92 Changing to a Size that is Not Automatically Detected, 94 Checking Machine Status and Settings, 5 Checking the Error Log, 62 Cleaning the Auto Document Feeder, 129 Cleaning the Exposure Glass, 127 Cleaning the Exposure Glass Cover, 128 Clearing Misfeeds, 103 Combine, 24 Connect Copy, 29, 30, 31 Connect Copy is Canceled, 29 Copy Function, 17

D

Data Storage, 5 Display During Connect Copy, 29 Document Server, 9 Duplex, 24

Ε

Edit, 24 Enquiry, 5 Environment, 123 Environments to avoid, 124 Error Log, 62 Error Mail Notification, 49 Error Occurs Using Internet Fax, 49 Error Report (E-Mail), 49 Exposure Glass, 127 Exposure Glass Cover, 128

F

Facsimile Function, 33

Η

How to Read This Manual, 1

I

If an Error Report is Printed, 47 Indicators, 3 Inserting Toner, 98 Interposer, 89

J

Job is Not Performed, 13

L

Large Capacity Tray (LCT), 88 LCT, 88 Letterhead, 91 Loading Paper, 85 Loading Paper in the Interposer, 89 Loading Paper into the Large Capacity Tray (LCT), 88 Loading Paper into Tray 1 (Tandem Tray), 85 Loading Paper into Tray 2 and 3, 87 Locating Jammed Paper, 104 Machine Address Info, 5 Machine environment, 123 Maintaining Your Machine, 127 Maintenance Info, 5 Memory is Full, 31 Messages Displayed When Using the Copy/Document Server Function, 17 Messages Displayed When Using the Facsimile Function, 35 Messages Displayed When Using the Printer Function, 54 Messages Displayed When Using the Scanner Function, 74 Moving, 124 Multi-accessing, 13

Ν

Network Delivery Function Cannot be Used, 73

0

Operations are Not Possible When Messages Appear, 73 Optimum environmental conditions, 123 Orientation-Fixed Paper or Two-Sided Paper, 91 Other Printing Problems, 66

Ρ

Panel Tone, 4 Power Connection, 125 Printer Function, 52 Printing, 43 Printing Surface, 91 Problems Operating the Machine, 9 Punch Waste, 119

R

Reception, 43 Removing Jammed Paper, 103 Removing Jammed Staples, 116 Removing Punch Waste, 119

S

Scanner Function, 71 Scanning is Not Done as Expected, 71 Server-Generated Error E-mail, 49 Stamp, 24 Status Messages, 54 Stored Files Cannot Be Accessed, 72 Stored Files Cannot be Edited, 73

Т

Toner, 97, 99 Transmission, 43 Transmission/Reception, 43 Tray 2 and 3, 92 Turning Off the Main Power / In the Event of Power Failure, 48 TWAIN, 72, 80 TWAIN Driver Cannot be Started, 72

U

USB Connection Fails, 51 Used Toner, 99

W

When a Message Appears during Installation of the Printer Driver, 52 When a Message Is Displayed on the Client Computer, 80 When an Indicator to the Right of a Function Key is Lit, 8 When Memory is Full, 46 When the Machine Does Not Operate As wanted, 3 Windows 2000, 52 Windows Server 2003, 53 Windows Vista, 53 Windows XP, 53 In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

means POWER ON.

O means POWER OFF.

Trademarks

Adobe, Acrobat, Acrobat Reader, PostScript, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Mac OS and TrueType are registered trademarks of Apple Inc., registered in the U.S. and other countries.

Microsoft[®], Windows[®], Windows Server[®], and Windows VistaTM are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Monotype is a registered trademark of Monotype Imaging, Inc.

PCL® is a registered trademark of Hewlett-Packard Company.

The Bluetooth[®] word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Ricoh Company, Ltd. is under license.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

- The product names of Windows 2000 are as follows:
 - Microsoft[®] Windows[®] 2000 Professional

Microsoft[®] Windows[®] 2000 Server

Microsoft[®] Windows[®] 2000 Advanced Server

- The product names of Windows XP are as follows: Microsoft[®] Windows[®] XP Professional Microsoft[®] Windows[®] XP Home Edition Microsoft[®] Windows[®] XP Media Center Edition Microsoft[®] Windows[®] XP Tablet PC Edition
- The product names of Windows Vista are as follows: Microsoft[®] Windows VistaTM Ultimate Microsoft[®] Windows VistaTM Enterprise Microsoft[®] Windows VistaTM Business Microsoft[®] Windows VistaTM Home Premium Microsoft[®] Windows VistaTM Home Basic
- The product names of Windows Server 2003 are as follows: Microsoft[®] Windows Server[®] 2003 Standard Edition Microsoft[®] Windows Server[®] 2003 Enterprise Edition Microsoft[®] Windows Server[®] 2003 Web Edition Microsoft[®] Windows Server[®] 2003 Datacenter Edition





