# **FAX Unit**

# Field Service Manual Ver 1.0

Latest Release: June, 2019 Initial Release: June, 2019 (c) 2019 Ricoh Co.,Ltd.

## Important Safety Notices

#### Important Safety Notices

#### **WARNING**

- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never connect the telephone line for business phones to the Fax Line jack of the machine.
   Doing so will damage the fax board.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Always use caution when installing or modifying telephone lines.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be
  a remote risk of electric shock from lightning.
- Do not use a telephone or cellular phone to report a gas leak in the vicinity of the leak.

#### **ACAUTION**

- Before installing the fax unit, switch off the main switch, and disconnect the power cord.
- The fax unit contains a lithium battery. The danger of explosion exists if a battery of this type is incorrectly replaced. Replace only with the same or an equivalent type recommended by the manufacturer.
- Discard batteries in accordance with the manufacturer's instructions and local regulations.

#### **Note for Australia**

Unit must be connected to Telecommunication Network through a line cord that meets the requirements of ACA Technical Standard TS008.

# Symbols and Abbreviations

This manual uses the following symbols and abbreviations:

#### Symbols:


0m	Screw
C) Da	Black screw
ØF.	Connector
<b>635</b>	Flexible flat cable (FFC)
•	Hook
	Clamp
<b>%</b>	Clip ring
	E-ring
	C-ring
	Timing belt
TOS.	Spring
0	Location of a screw(s) to be tightened or loosened.
<b>&gt;</b>	Location of a connector(s), clamp(s) or spring(s) to be removed
<b>₹</b> →	Direction (Rotating or moving)

#### **Abbreviations:**



Abbreviations such as (M1), (S1), or (TH1) after the names of some electrical components indicate that those components are shown on a Point-to-Point diagram.

Abbreviation	Meaning
SEF	Short edge feed
LEF	Long edge feed

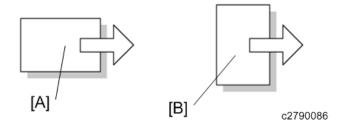

[A] Short edge feed (SEF)

[B] Long edge feed (LEF)

#### **Destination:**

Abbreviation	Destination
EU (-27)	European Union
AP (-29)	Asia-Pacific
CHN (-21,-25)	China

## **Trademarks**

Adobe, Acrobat, PageMaker, PostScript, and Genuine Adobe® PostScript® 3TM are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Ricoh Company, Ltd. is under license.

Firefox and Thunderbird are registered trademarks of the Mozilla Foundation.

Dropbox is a registered trademark or trademark of Dropbox, Inc.

Google, Google Cloud Print, Google Chrome, Google Play, and Android are registered trademarks for Google Inc.

Java is a registered trademark of Oracle and/or its affiliates.

JAWS® is a registered trademark of Freedom Scientific, Inc., St. Petersburg, Florida and/or other countries.

Kerberos is a trademark of the Massachusetts Institute of Technology (MIT).

Linux is a registered trademark of Linus Torvalds.

Macintosh, OS X, Bonjour, Safari, and TrueType are trademarks of Apple Inc., registered in the U.S. and other countries.

Microsoft, Windows, Windows Server, Internet Explorer, Microsoft Edge, and Outlook are either registered trademarks or trademarks of Microsoft Corp. in the United States and/or other countries. QR Code is a registered trademark of DENSO WAVE INCORPORATED in Japan and in other countries.

"Red Hat" is a registered trademark of Red Hat, Inc.

The SD and SD logo are trademarks of SD-3C, LLC.

UNIX is a registered trademark of The Open Group.

UPnP is a trademark of UPnP Implementers Corporation.



This product includes RSA BSAFE® Cryptographic software of EMC Corporation. RSA and BSAFE are registered trademarks or trademarks of EMC Corporation in the United States and other countries.

The proper names of Internet Explorer 9, 10, and 11 are as follows:

- Windows® Internet Explorer® 9
- Internet Explorer® 10
- Internet Explorer® 11

The proper names of the Windows operating systems are as follows:

- The product names of Windows Vista are as follows: Microsoft® Windows Vista® Ultimate
   Microsoft® Windows Vista® Business Microsoft® Windows Vista® Home Premium Microsoft®
   Windows Vista® Home Basic Microsoft® Windows Vista® Enterprise
- The product names of Windows 7 are as follows: Microsoft® Windows® 7 Home Premium Microsoft® Windows® 7 Professional Microsoft® Windows® 7 Ultimate Microsoft® Windows® 7 Enterprise
- The product names of Windows 8.1 are as follows: Microsoft® Windows® 8.1 Microsoft®
   Windows® 8.1 Pro Microsoft® Windows® 8.1 Enterprise
- The product names of Windows 10 are as follows: Microsoft® Windows® 10 Home Premium Microsoft® Windows® 10 Pro Microsoft® Windows® 10 Enterprise Microsoft® Windows® 10 Education
- The product names of Windows Server 2008 are as follows: Microsoft® Windows Server® 2008
   Standard Microsoft® Windows Server® 2008 Enterprise
- The product names of Windows Server 2008 R2 are as follows: Microsoft® Windows Server® 2008 R2 Standard Microsoft® Windows Server® 2008 R2 Enterprise
- The product names of Windows Server 2012 are as follows: Microsoft® Windows Server® 2012
   Foundation Microsoft® Windows Server® 2012 Essentials Microsoft® Windows Server® 2012
   Standard
- The product names of Windows Server 2012 R2 are as follows: Microsoft® Windows Server® 2012 R2 Foundation Microsoft® Windows Server® 2012 R2 Essentials Microsoft® Windows Server® 2012 R2 Standard
- The product names of Windows Server 2016 are as follows: Microsoft® Windows Server® 2016
   Standard Microsoft® Windows Server® 2016 Essentials Microsoft® Windows Server® 2016
   Datacenter Microsoft® Windows Server® 2016 MultiPoint Premium Server

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

Microsoft product screen shots reprinted with permission from Microsoft Corporation.

## Table of Contents

1.	Installation	3
	Fax Connection Unit Type M37 (D3GF-15, 16, 17)	3
	Accessory Check	3
	Installation Procedure	3
	Fax Memory Unit Type M19 64MB (D3BZ)	13
	Accessory Check	13
	Installation Procedure	13
2.	Replacement and Adjustment	18
	FCU	18
	SRAM Data Transfer Procedure	18
3.	Troubleshooting	31
	Error Codes	31
	Error Codes	31
	Fax Connection Unit Error Codes	49
	Fax Connection Unit Error Code List	49
	IFAX Troubleshooting	51
	IFAX Troubleshooting	51
	IP-Fax Troubleshooting	53
	IP-Fax Transmission	53
	IP-Fax Reception	55
4.	Service Tables	58
	Service Program Tables	58
	SP1-XXX (BIT Switches)	58
	SP2-XXX (RAM)	58
	SP3-XXX (Machine Set)	59
	SP4-XXX (ROM Versions)	59
	SP5-XXX (RAM Clear)	59
	SP6-XXX (Reports)	60
	SP7-XXX (Tests)	61
	Bit Switches - 1	62
	System Switches	62
	Bit Switches - 2	73
	I-Fax Switches	73
	Printer Switches	78
	Bit Switches - 3	84
	Communication Switches	84
	Bit Switches - 4	92

	G3 Switches	92
	Bit Switches - 5	100
	IP Fax Switches	100
	NCU Parameters	107
	Dedicated Transmission Parameters	110
	Programming Procedure	110
	Parameters	110
	Service RAM Addresses	117
	Service RAM Addresses	117
5.	Detailed Section Descriptions	128
	Overview	128
	Boards	129
	FCU	129
	Video Data Path	131
	Transmission	131
	Reception	132
	Fax Communication Features	134
	Document Server	134
	Internet Mail Communication	135
	IP-Fax	143
	What is IP-FAX?	143
	T.38 Packet Format	143
	Settings	143
6.	Specifications	144
	General Specifications	144
	FCU	144
	Capabilities of Programmable Items	145
	IFAX Specifications	146
	IP-FAX Specifications	147
	Fax Unit Configuration	148

## 1. Installation

### Fax Connection Unit Type M37 (D3GF-15, 16, 17)

#### **Accessory Check**

No.	Description	Q'ty
1	Fax Connection Unit SD card	1
- EMC address decal (EU only)		1
- RoHS sheet (AP/CHN only) 1		1
-	RoHS decal (AP/CHN only)	1



d255a1297

#### Installation Procedure

This unit allows a machine without the fax unit installed (client machine) to send and receive faxes via a machine with the fax unit installed (remote machine).

#### Requirements:

- Up to six machines can be registered as the client machines.
- Machines that have the fax unit installed cannot be used as the client machine.
- Only one machine can be registered as the Remote Machine.
- Firmware for this unit: "aics" (software number: D3CP5759)
- Remote Fax transmissions are possible on a G3 line.
- The remote fax function does not support User Code Authentication. Disable the User Code Authentication on the remote machine.
- Use this function to check the contents of a file that is stored in memory and not yet sent. Also, use this function to cancel a transmission from the client machine.

#### Order of installation:

- Install the Fax Connection Unit in the remote machine (fax unit is already installed).
- 2. Install the Fax Connection Unit in the client machine (fax unit is not installed).
- 3. Register the client machine in the remote machine.



Do not register the remote machine before the client machine is registered on the remote


machine. Otherwise, the remote machine can not be registered.

4. Register the remote machine in the client machine.


#### Installing the fax connection unit



- Before starting this procedure, connect the network cable to the target machine(s), and then configure the network settings.
- When installing more than one SD card, perform the merge operation. For details about how to merge, refer to "SD Card Appli Move" in "Main Chapters" of the field service manual.
- 1. Turn OFF the main power.
- **<u>2.</u>** Open the rear upper cover [A].

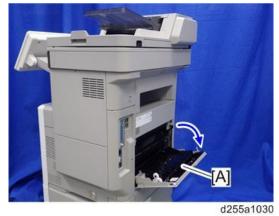

3. Insert a flathead screwdriver into [A] to release a hook of the controller cover [B].

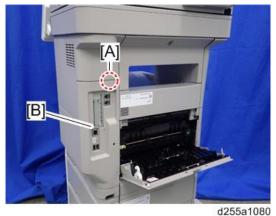

4. Release the hook by opening the right side of the cover, and then remove the cover [A] by rotating


it in the direction of the blue arrow.



**↓** Note

• Be careful not to damage the hooks at the rear of the controller cover when you remove or install the controller cover.

d255a1032

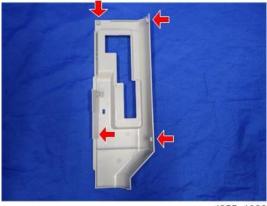

d255a1033

**<u>5.</u>** Insert the Fax Connection Unit Type M24 SD card into SD card slot 1 [A] (upper slot).



- 6. Reassemble the machine.
- 7. Turn ON the main power.

#### 1.Installation

- **8.** Press [Firmware Version] in the [Administrator Tools].
  - [User Tools] > [Machine Features] > [System Settings] > [Administrator Tools]
- 9. Check whether the aics version is displayed.



dobtailoo


#### Registering the client machine(s)



• Do not register the remote machine in the client machine before registering the client machine in the remote machine. Otherwise, registering the remote machine fails.



- Before starting this procedure, connect the network cable to the target machine(s), and then configure the network settings.
- 1. On the remote machine, press the [User Tools] icon on the operation panel.
- 2. Press [Machine Features].
- 3. Press [System Settings].
- 4. Press [Administrator Tools].
- 5. Press [Program/Change/Delete Remote Machine].

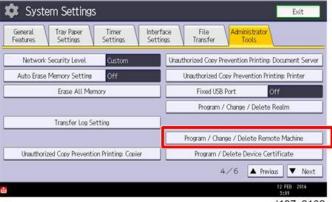


d197z2102

**<u>6.</u>** Press [\* Not Programmed], and then enter the IP address or host name of one of the client machines.




• Up to six machines can be registered as the client machines.

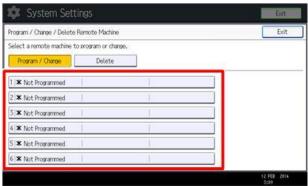

d197z2103

7. Press [Connection Test] to check the connection with the client machine.

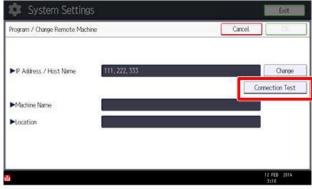

d197z2104


• If an error message is displayed, check the network connection with the client- machine and make sure that the IP address of the client machine is correct.



d197z2105

#### 1.Installation

8. Press [OK] after "Connection Test" has been successfully done.

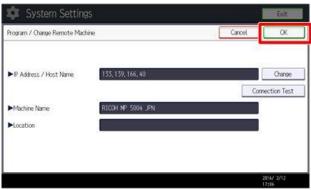

d197z2106

#### 9. Press [Exit].


#### Registering the remote machine



- Only one machine can be registered as the remote machine.
- First register the client machine in the remote machine before proceeding this procedure. Otherwise, registering the remote machine fails.
- 1. On the client machine, press [User Tools] icon on the operation panel.
- 2. Press [Machine Features].
- 3. Press [System Settings].
- 4. Press [Administrator Tools].
- **5.** Press [Program/Change/Delete Remote Machine].
- **<u>6.</u>** Press [\* Not Programmed], and then enter the IP address or host name of o the remote machine.




• Only one machine can be registered as the remote machine.

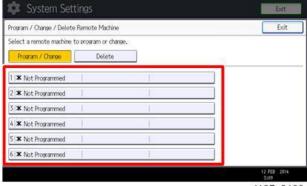

d197z2103

<u>7.</u> Press [Connection Test] to check the connection with the remote machine.

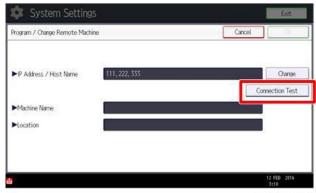


d197z2104

 If an error message is displayed, check the network connection with the remote machine and make sure that the IP address of the remote machine is correct.



d197z2105

8. Press [OK] after "Connection Test" has been successfully done.

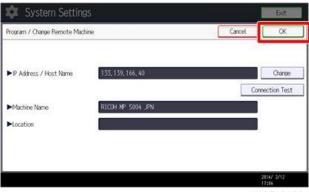

d197z2106

#### 9. Press [Exit].

#### Configuring the remote reception settings

Perform the following procedure to enable the client machine(s) to receive faxes via the remote machine. You can forward or route received documents per line or special sender.



 By performing procedures described above (Installing the fax connection unit, Registering the client machine(s), Registering the remote machine), the client machines can **send** faxes via

#### 1.Installation


the remote machine. The procedures shown below are necessary to enable the client machines to **receive** faxes.

#### 1) If you use "Remote Reception Setting per Line"

- **1.** On the remote machine, press [User Tools] icon on the operation panel.
- 2. Press [Facsimile Features] in [Machine Features].
- 3. Press [Remote Reception Setting per Line] in [Reception Settings].
- 4. Enter an IP address or a host name of the client machine to connect.
- **<u>5.</u>** Press [Set], and [Exit] to exit from the setting.


#### 2) If you use "Remote Reception per Sender"

- 1. On the remote machine, press [User Tools] icon on the operation panel.
- 2. Press [Facsimile Features] in [Machine Features].
- 3. Press [Program Special Sender] in [Reception Settings].
- **<u>4.</u>** Select the Special Sender.

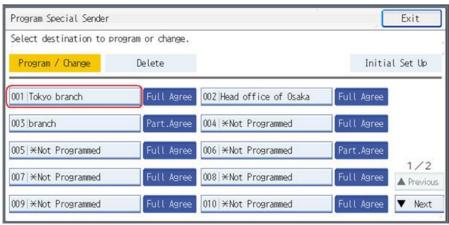

d1661001


**5.** Press [Remote Reception Setting per Sender].

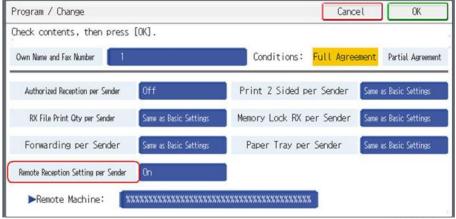

d1661002

6. Press [On].

#### 7. Press [Remote Machine].

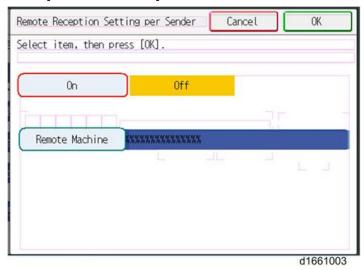

- 8. Enter an IP address or a host name of the client machine to connect.
- **9.** Press [OK] to exit from the setting.

#### Remote fax icon addition for remote machine

This procedure allows the [Remote Fax] icon to appear on the home screen of the operation panel.



- The [Remote Fax] icon is supposed to appear automatically on the home screen of the client machine(s) after installing the Remote Fax Function. If the icon does not appear, perform the procedure below to add the [Remote Fax] icon manually.
- **1.** Press the application list icon in the home screen.



2. Press [APPS] tab.




#### 1.Installation

- <u>3.</u> Press and hold down the [Remote Fax] icon from the list.
- **<u>4.</u>** Drag the icon to where you want to place it on the home screen.

## Fax Memory Unit Type M19 64MB (D3BZ)

#### **Accessory Check**

No.	Description	Q'ty	Remarks
1	Bracket	1	Not used for this machine.
2	Memory unit	1	
3	Screws M3x6	2	Not used for this machine.
4	Screws	1	Not used for this machine.
5	Clamp	1	Not used for this machine.

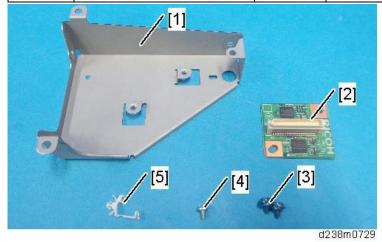


#### Installation Procedure

1. Open the rear upper cover [A].



2. IM 550F/600F only: Insert a flathead screwdriver into [A] to release a hook of the controller cover

[B].

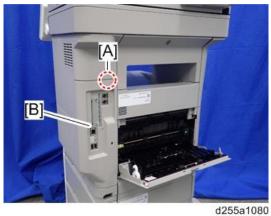

**3.** Release the hook by opening the right side of the cover as shown below, and then remove the cover [A] by rotating it in the direction of the blue arrow.



• Be careful not to damage the hooks on the inside of the controller cover when you remove or install the controller cover.




d255a1033

- Insert a flathead screwdriver in the order of [1], [2], and [3] to release three hooks.IM 600SRF only: Release the hook [4].
- 5. Remove the rear left stay [A].

IM 550F/600F:



#### IM 600SRF:

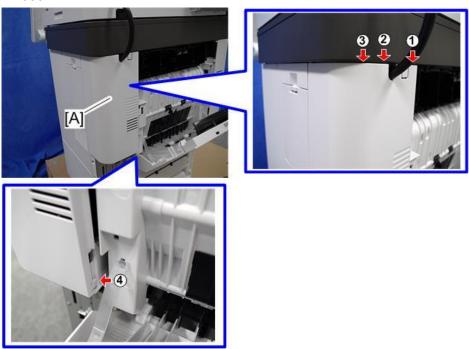

d0bta1075

**U**Note

 Be careful not to damage the hooks on the inside of the rear left stay when you remove or install the rear left stay.

IM 550F/600F:

#### 1.Installation




d0bta1115

#### IM 600SRF:



d0bta1076

## 6. IM 600F only: Remove the cover [A].

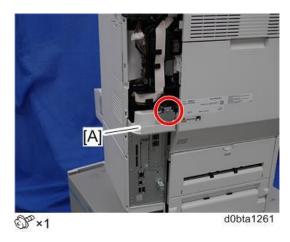


## 7. Disconnect the connector of the speaker.




16

#### 8. Remove the fax unit [A].

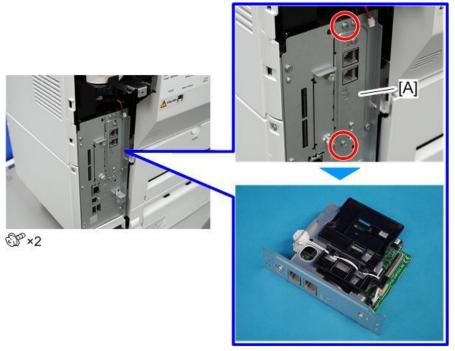


d0bta1263

9. Remove the bracket [A] by sliding it in the direction of the arrow while lifting the stopper [B].

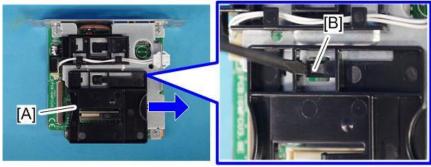

d0bta1278

10. Attach the memory unit [B] to the FCU connector [A].

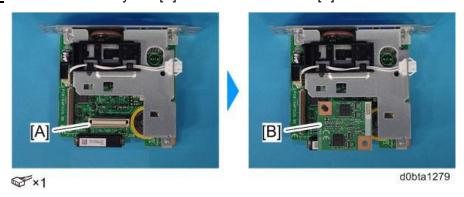

- 11. Reattach the bracket.
- 12. Reinstall the FCU in the interface slot.
- 13. Re-assemble the machine.

## 2. Replacement and Adjustment

#### **FCU**

#### **SRAM Data Transfer Procedure**


When you replace the FCU board, transfer the SRAM data from the old FCU board to the new FCU board. Perform the following procedure to back up the SRAM data.



- The following data can be transferred: TTI, RTI, CSI, Fax bit switch settings, RAM address settings, NCU parameter settings.
- 1. Open the rear upper cover [A].



IM 550F/600F only: Insert a flathead screwdriver into [A] to release a hook of the controller cover[B].

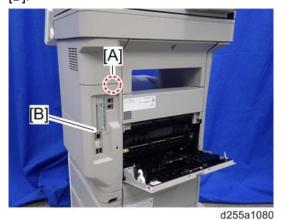

3. Release the hook by opening the right side of the cover as shown below, and then remove the

cover [A] by rotating it in the direction of the blue arrow.







d255a1032

**U** Note

Be careful not to damage the hooks on the inside of the controller cover when you remove or install the controller cover.



d255a1033

- **4.** Insert a flathead screwdriver in the order of ①, ②, and ③ to release three hooks. IM 600SRF only: Release the hook 4.
- 5. Remove the rear left stay [A].


IM 550F/600F:

#### 2.Replacement and Adjustment



#### IM 600SRF:

**₩**Note

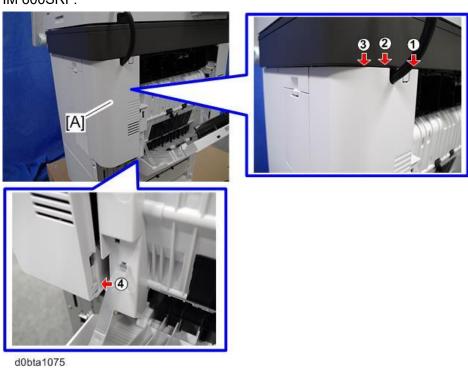

• Be careful not to damage the hooks on the inside of the rear left stay when you remove or install the rear left stay.

#### IM 550F/600F:




d0bta1115

IM 600SRF:



d0bta1076

## 6. IM 600F only: Remove the cover [A].

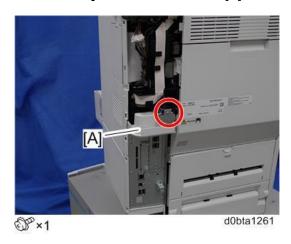


#### <u>7.</u> Disconnect the connector of the speaker.




#### 2.Replacement and Adjustment

#### 8. Remove the fax unit [A].

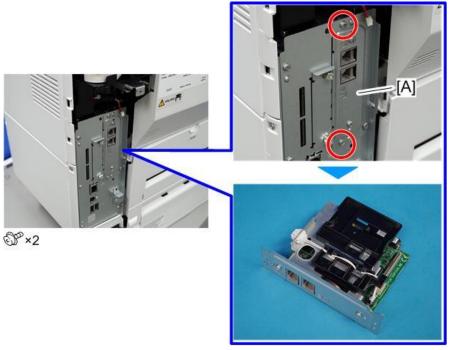

d0bta1263


## 9. Remove the bracket [A].

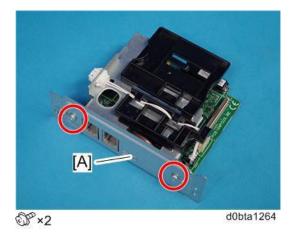

## 10. Disconnect the connector.




11. Remove the FCU board [A].

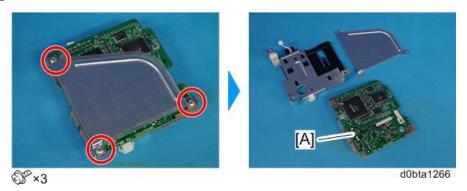


12. Change the orientation of the battery jumper switch [A] on the removed FCU board [B], and then attach the battery jumper switch [C].

The battery jumper switch [C] is provided with the new FCU board.

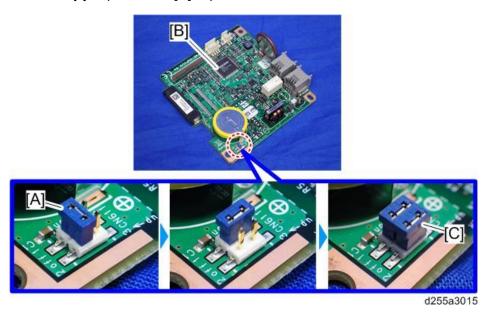


13. Change the orientation of the battery jumper switch [A] on the new FCU board [B].

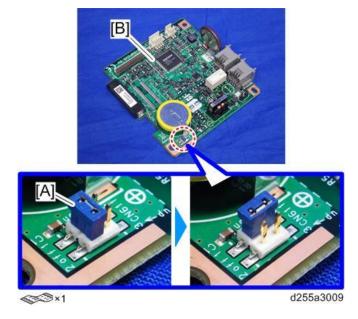

#### 2.Replacement and Adjustment




- If the battery jumper switch is not in the correct position, SC820 will occur.
- 14. Install the new FCU board to the fax unit.
  - 1. Attach the two brackets [A] to the new FCU board [B].

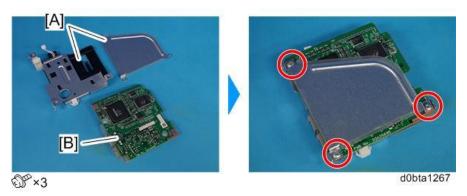


2. Connect the connector.




3. Attach the bracket [A].

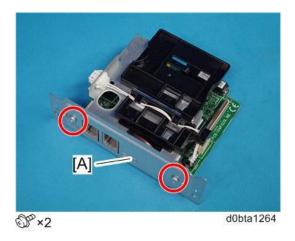


15. Attach the flat cable [A] to CN603 of the new fax unit.
Make sure that the blue tape of the flat cable faces outward.

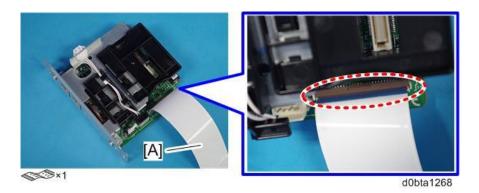


#### 16. Remove the slot cover [A].

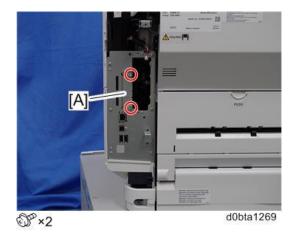

## 17. Remove the controller box cover [A].

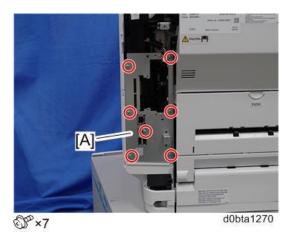


18. Install the new fax unit [A] to the main machine.

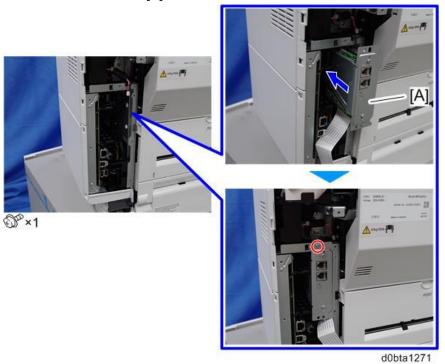


UNote


• When installing the new fax unit [A], be careful not to damage the flat cable [B]. After installing the new fax unit [A], pull out the flat cable [B] from the main machine, as shown below.

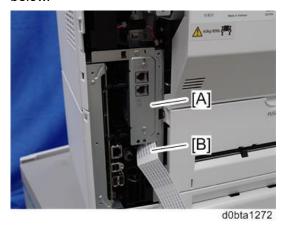

19. Connect the connector of the speaker.

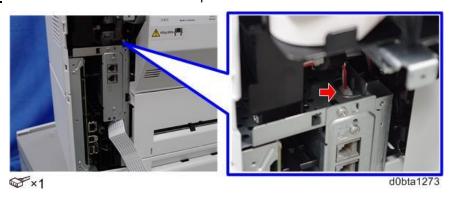

20. Connect the flat cable [A] to CN603 of the removed FCU board [B].

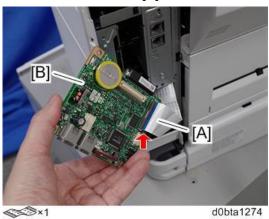


#### **21.** Turn ON the main power.

SRAM data transmission starts. When the transmission is completed, you will hear a beeper sound.



- The beeper sound is at the same volume as the speaker sound.
- The beeper sounds even if the speaker sound is turned off.
- If the beeper does not sound, repeat the main power OFF/ON until the beeper sounds, and then perform the transmission procedure. If the data cannot be transmitted, repeat transmission 2 or 3 times.
- If the beeper does not sound after turning the main power OFF/ON 3 times, you need to input the settings stored in SRAM memory manually.
- 22. When the message "Ready" is displayed on the operation panel, turn the main power OFF.
- 23. Disconnect the flat cable [A] from the removed FCU board [B].

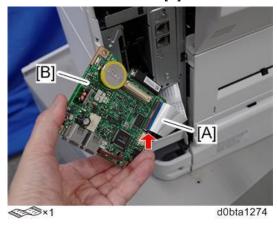

#### 2.Replacement and Adjustment


#### 24. Disconnect the connector of the speaker.



25. Remove the new FCU board [A] from the main machine.




26. Reattach the controller box cover [A].

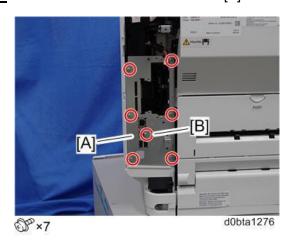

**◆** Note

• The screw [B] is a small screw. Be careful not to use the wrong screw.


#### 27. Reattach the slot cover [A].

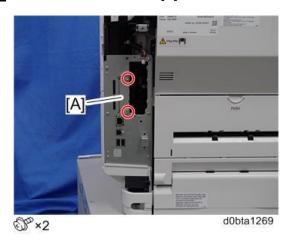

28. Install the new fax unit [A] to the main machine.



29. Connect the connector of the speaker.

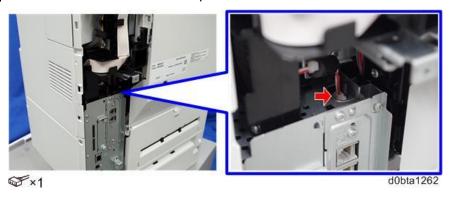


- 30. Reassemble the machine.
- 31. Turn ON the main power. Execute SP6-101 to print the system parameter list.
- <u>32.</u> Check the system parameter list to make sure that the data is transferred correctly.
- 33. Set the correct date and time from the [User Tools].
  - User Tools > Machine Features > System Settings > Timer Setting > Set Date/Time
  - Note
    - If any of the SRAM data was not transferred, input those settings manually.

#### When replacing the Fax modular cable


When you replace the Fax modular cable, attach the ferrite core with the following procedure.

## 2.Replacement and Adjustment

**1.** Make three loops 5 cm (2.0 inches) [A] from the end of the modular cable (connection side to the machine) and attach the ferrite core to the loops as shown.

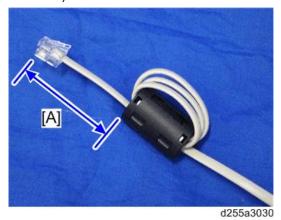

**2.** Fix the modular cable with the bind [A] as shown below.

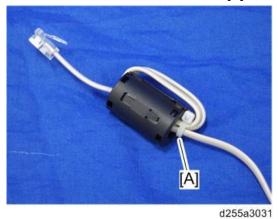

## **Error Codes**

#### **Error Codes**

If an error code is displayed, retry communication. If the same problem occurs, try to fix the problem as suggested below.



• Error codes appear in the error code display and on the service report.

Code	Meaning	Suggested Cause/Action
0-00	DIS/NSF not detected within 40 s of	Check the connection.
	Start being pressed	The other party may be incompatible.
		Replace the FCU.
		Check for DIS/NSF with an oscilloscope.
		If the RX signal is weak, there may be a bad
		connection.
0-01	DCN received unexpectedly	The other party is out of paper or has a paper
		jam.
		The other party pressed [Stop] during
		communication.
0-03	Incompatible modem at the other	The other party is incompatible.
	party	
0-04	CFR or FTT not received after	Check the connection.
	modem training	Try changing the TX level and/or cable equalizer
		settings.
		Replace the FCU.
		The other machine may be defective. Try
		sending to another machine.
		If the RX signal is weak or defective, there may
		be a bad connection.
		Reference:
		TX level: NCU Parameter 01 (PSTN)
		Cable equalizer: G3 Switch 07 (PSTN)
		Dedicated TX parameters in Service Program
		Mode
0-05	Modem training fails even G3 shifts	Check the connection.
	down to 2400 bps.	Try adjusting the TX level and/or cable equalizer.

Code	Meaning	Suggested Cause/Action
		Replace the FCU.
		Check for line problems.
		Reference:
		See error code 0-04.
0-06	The other terminal did not reply to	Check the connection.
	DCS	Try adjusting the TX level and/or cable equalizer
		settings.
		Replace the FCU.
		The other party may be defective or
		incompatible; try sending to another machine.
		Check for line problems.
		Reference:
		See error code 0-04.
0-07	No post-message response from the	Check the connection.
	other party after a page was sent	Replace the FCU.
		The other party is out of paper or has a paper
		jam.
		The other party may have disconnected the call.
		Check for a bad line.
		The other machine may be defective. Try
		sending to another machine.
0-08	The other party sent RTN or PIN	Check the connection.
	after receiving a page, because there	Replace the FCU.
	were too many errors	The other party may have a paper jam, or run
		out of paper or memory space.
		Try adjusting the TX level and/or cable equalizer
		settings.
		The other party may have a defective
		modem/FCU; try sending to another machine.
		Check for line problems and noise.
		Reference:
		TX level: NCU Parameter 01 (PSTN)
		Cable equalizer: G3 Switch 07 (PSTN)
		Dedicated TX parameters in Service Program
		Mode
0-14	Non-standard post message	Incompatible or defective remote terminal; try
	response code received	sending to another machine.
		Noisy line; resend.

Code	Meaning	Suggested Cause/Action
		Try adjusting the TX level and/or cable equalizer
		settings.
		Replace the FCU.
		Reference:
		See error code 0-08.
0-15	The other terminal is not capable of	The other party is unable to accepting the following
	specific functions.	functions, or the other party's memory is full.
		Confidential RX
		Transfer function
		SEP/SUB/PWD/SID
0-16	CFR or FTT not detected after	Check the connection.
	modem training in confidential or	Replace the FCU.
	transfer mode	Try adjusting the TX level and/or cable equalizer
		settings.
		The other machine may have disconnected, or it
		may be defective. Try sending to another
		machine.
		If the RX signal level is too low, there may be a
		line problem.
		Reference:
		See error code 0-08.
0-17	Communication was interrupted by	If [Stop] was not pressed and this error keeps
	pressing [Stop]	occurring, replace the operation panel or the
		operation panel drive board.
0-20	Facsimile data not received within 6	Check the connection.
	s of retraining	Replace the FCU.
		Check for line problems.
		Try calling another fax machine.
		Try adjusting the reconstruction time for the first
		line and/or RX cable equalizer setting.
		Reference:
		Reconstruction time - G3 Switch 0A, Bit 6
		RX cable equalizer - G3 Switch 07 (PSTN)
0-21	EOL signal (end-of-line) from the	Check the connection between the FCU and
	other party not received within 5 s of	line.
	the previous EOL signal	Check for line noise or other line problems.
		Replace the FCU.
		The remote machine may be defective or may

Code	Meaning	Suggested Cause/Action
	3	have been disconnected.
		Reference:
		Maximum interval between EOLs and between ECM
		frames - G3 Bit Switch 0A, Bit 4
0-22	The signal from the other party was	Check the connection.
	interrupted for more than the	Replace the FCU.
	acceptable modem carrier drop time	The remote machine may be defective.
	(default: 200 ms)	Check for line noise or other line problems.
		Try adjusting the acceptable modem carrier drop
		time.
		Reference:
		Acceptable modem carrier drop time: G3 Switch 0A,
		Bits 0 and 1
0-23	Too many errors during reception	Check the connection.
		Replace the FCU.
		The remote machine may be defective.
		Check for line noise or other line problems.
		Try asking the other party to adjust their TX
		level.
		Try adjusting the RX cable equalizer setting
		and/or RX error criteria.
		Reference:
		RX cable equalizer: G3 Switch 07 (PSTN)
		RX error criteria: Communication Switch 02, Bits 0
		and 1
0-29	Data block format failure in ECM	Check for line noise or other line problems.
	reception	Check the FCU - NCU connectors.
		Replace the NCU or FCU.
0-30	The other terminal did not reply to	Check the connection.
	NSS(A) in AI short protocol mode	Try adjusting the TX level and/or cable equalizer
		settings.
		The other terminal may not be compatible.
		Reference:
		Dedicated TX parameters - Section 4
0-32	The other terminal sent a DCS,	Check the protocol dump list.
	which contained functions that the	Ask the other party to contact the manufacturer.
	receiving machine cannot handle.	
0-33	The data reception (not ECM) is not	Check the connection.

Code	Meaning	Suggested Cause/Action
	completed within 10 minutes.	The other terminal may have a defective
		modem/FCU.
0-52	Polarity changed during	Check the connection.
	communication	Retry communication.
0-55	FCU does not detect the SG3.	FCU firmware or board defective.
		SG3 firmware or board defective.
0-56	The stored message data exceeds	SG3 firmware or board defective.
	the capacity of the mailbox in the	
	SG3.	
0-70	The communication mode specified	The other terminal did not have a compatible
	in CM/JM was not available	communication mode (e.g., the other terminal
	(V.8 calling and called terminal)	was a V.34 data modem and not a fax modem.)
		A polling TX file was not ready at the other
		terminal when polling RX was initiated from the
		calling terminal.
0-74	The calling terminal fell back to T.30	The calling terminal could not detect ANSam due
	mode, because it could not detect	to noise, etc.
	ANSam after sending CI.	ANSam was too short to detect.
		Check the connection and condition.
		Try making a call to another V.8/V.34 fax.
0-75	The called terminal fell back to T.30	The terminal could not detect ANSam.
	mode, because it could not detect a	Check the connection and condition.
	CM in response to ANSam (ANSam	Try receiving a call from another V.8/V.34 fax.
	timeout).	
0-76	The calling terminal fell back to T.30	The called terminal could not detect a CM due to
	mode, because it could not detect a	noise, etc.
	JM in response to CM	Check the connection. and condition.
	(CM timeout).	Try making a call to another V.8/V.34 fax.
0-77	The called terminal fell back to T.30	The calling terminal could not detect a JM due to
	mode, because it could not detect a	noise, etc.
	CJ in response to JM	A network that has narrow bandwidth cannot
	(JM timeout).	pass JM to the other party.
		Check the connection and condition.
		Try receiving a call from another V.8/V.34 fax.
0-79	The called terminal detected CI while	Check for line noise or other line problems.
	waiting for a V.21 signal.	If this error occurs, the called terminal falls back
		to T.30 mode.
0-80	The line was disconnected due to a	The guard timer expired while starting these

timeout in V.34 phase 2 – line probing.  0-81 The line was disconnected due to a timeout in V.34 phase 3 – equalizer training.  0-82 The line was disconnected due to a timeout in the V.34 phase 4 – control channel start-up.  0-83 The line was disconnected due to a timeout in the V.34 control channel restart sequence.  0-84 The line was disconnected due to a timeout in the V.34 control channel restart sequence.  0-85 The line was disconnected due to a babnormal signaling in V.34 phase 4 – control channel start-up.  0-85 The line was disconnected due to a abnormal signaling in V.34 control channel restart.  0-86 The line was disconnected due to abnormal signaling in V.34 control channel restart.  0-87 The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  0-88 The line was disconnected because PR was transmitted/received 9 (default) times within the same ECM frame.  2-11 Only one V.21 connection flag was received  0-81 Modem clock irregularity  0-82 Modem clock irregularity  0-83 Modem clock irregularity  0-84 PR Modem clock irregularity  0-85 PR Modem clock irregularity  0-86 PR Modem clock irregularity  0-87 PR Was transmitted/received 9 (default) times within the same ECM frame.  0-88 PR Was transmitted/received 9 (default) times within the same ECM frame.  0-89 Modem clock irregularity  0-80 PR Modem clock irregularity  0-80 PR Was transmitted/received 9 (default) times within the same ECM frame.  0-80 PR Was transmitted/received 9 (default) times within the same ECM frame.  0-80 PR Was transmitted/received 9 (default) times within the same ECM frame.  0-80 PR Was transmitted/received 9 (default) times within the same ECM frame.  0-80 PR Was transmitted/received 9 (default) times within the same ECM frame.  0-80 PR Was transmitted/received 9 (default) times within the same ECM frame.  0-80 PR Was transmitted/received 9 (default) times within the same ECM frame.  0-81 PR Was transmitted/received 9 (default) times withi	Code	Meaning	Suggested Cause/Action
The line was disconnected due to a timeout in V.34 phase 3 – equalizer training.  The line was disconnected due to a timeout in the V.34 phase 4 – control channel start-up.  The line was disconnected due to a timeout in the V.34 control channel restart sequence.  The line was disconnected due to a timeout in the V.34 control channel restart sequence.  The line was disconnected due to a timeout in the V.34 control channel restart sequence.  The line was disconnected due to a timeout in the V.34 control channel restart sequence.  The line was disconnected due to a abnormal signaling in V.34 phase 4 – control channel start-up.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  The control channel started after an unsuccessful primary channel.  The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  The control channel started after an unsuccessful primary channel.  The line was disconnected because the other terminal restarted the control channel because data reception in the primary channel was not successful.  The signal did not stop within 10 s.  Turn OFF the main power, and then turn it back ON.  The time was disconnected because the other terminal restarted the control channel because data reception in the primary channel was not result in an error communication.  The line was di		timeout in V.34 phase 2 – line	phases. Serious noise, narrow bandwidth, or low
timeout in V.34 phase 3 – equalizer training.  0-82 The line was disconnected due to a timeout in the V.34 phase 4 – control channel start-up.  0-83 The line was disconnected due to a timeout in the V.34 control channel restart sequence.  0-84 The line was disconnected due to a timeout in the V.34 control channel restart sequence.  0-85 The line was disconnected due to a banormal signaling in V.34 phase 4 – control channel start-up.  0-86 The line was disconnected due to a banormal signaling in V.34 control channel restart.  0-87 The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  0-88 The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  1 Try using V.17 or a slower modem using dedicated TX parameters.  1 Try using V.17 or a slower modem using dedicated TX parameters.  1 Try adjusting the TX cable equalizer setting.  1 Try adjusting the TX level.  1 Try allies errors happen at the receiving terminal:  1 The signal did not stop within 10 s.  1 Turn OFF the main power, and then turn it back ON.  2 Turn OFF the main power, and then turn it back ON.  3 Turn OFF the main power, and then turn it back ON.  4 The signal did not stop within 10 s.  5 Turn OFF the main power, and then turn it back ON.  5 Turn OFF the main power, and then turn it back ON.  6 The signal did not stop within 10 s.  7 The signal did not stop within 10 s.  8 The signal did not stop within 10 s.  9 The signal did not stop within 10 s.  9 Th		probing.	signal level can cause these errors.
training.  The line was disconnected due to a timeout in the V.34 phase 4 – control channel start-up.  The line was disconnected due to a timeout in the V.34 control channel restart sequence.  The line was disconnected due to a timeout in the V.34 control channel restart sequence.  The line was disconnected due to a timeout in the V.34 control channel restart sequence.  The line was disconnected due to abnormal signaling in V.34 phase 4 – control channel start-up.  The line was disconnected due to abnormal signaling in V.34 phase 4 – control channel start-up.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  The control channel started after an unsuccessful primary channel.  The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  Try using V.17 or a slower modem using dedicated TX parameters.  Try adjusting the TX level.  Try adjusting the TX cable equalizer setting.  Try adjusting the RX cable equalizer setting.  Try adjusting the TX level.  Try adjusting the TX level.  Try adjusting the TX cable equalizer setting.	0-81	The line was disconnected due to a	If these errors happen at the transmitting terminal:
The line was disconnected due to a timeout in the V.34 phase 4 – control channel start-up.  The line was disconnected due to a timeout in the W.34 control channel restart sequence.  The line was disconnected due to a timeout in the W.34 control channel restart sequence.  The line was disconnected due to abnormal signaling in V.34 phase 4 – control channel start-up.  The line was disconnected due to abnormal signaling in V.34 phase 4 – control channel start-up.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  The control channel started after an unsuccessful primary channel.  The control channel started after an unsuccessful primary channel.  The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  Try adjusting the TX cable equalizer setting.		timeout in V.34 phase 3 – equalizer	Try making a call later.
timeout in the V.34 phase 4 – control channel start-up.  The line was disconnected due to a timeout in the V.34 control channel restart sequence.  The line was disconnected due to a timeout in the V.34 control channel restart sequence.  Try using V.17 or a slower modern if the same error is frequent when receiving from multiple senders.  The line was disconnected due to abnormal signaling in V.34 phase 4 – control channel start-up.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  The control channel started after an unsuccessful primary channel.  The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  2-11 Only one V.21 connection flag was received		training.	Try using V.17 or a slower modem using
channel start-up.  The line was disconnected due to a timeout in the V.34 control channel restart sequence.  The line was disconnected due to a timeout in the V.34 control channel restart sequence.  The line was disconnected due to abnormal signaling in V.34 phase 4 – control channel start-up.  The line was disconnected due to abnormal signaling in V.34 phase 4 – control channel start-up.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  The control channel started after an unsuccessful primary channel.  The control channel started after an unsuccessful primary channel.  The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  Try adjusting the TX cable equalizer setting.  Try adjusting the RX cable equalizer setting.  Try adjusting the RX cable equalizer setting.  Try adjusting the TX level.  Try adjusting the RX cable equalizer setting.  Try adjusting the RX cable equalizer setting.  Try adjusting the TX level.  Try adjusting	0-82	The line was disconnected due to a	dedicated TX parameters.
The line was disconnected due to a timeout in the V.34 control channel restart sequence.  1 Try adjusting the RX cable equalizer setting. 1 Try using V.17 or a slower modem if the same error is frequent when receiving from multiple senders.  1 The line was disconnected due to abnormal signaling in V.34 phase 4 – control channel start-up.  1 The line was disconnected due to abnormal signaling in V.34 control channel restart.  1 The line was disconnected due to abnormal signaling in V.34 control channel restart.  2 The line was disconnected due to abnormal signaling in V.34 control channel restart.  3 The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  3 The control channel started after an unsuccessful primary channel.  4 The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  2 -11 Only one V.21 connection flag was received  2 Replace the FCU.  4 If these errors happen at the receiving terminal:  5 Try adjusting the RX cable equalizer setting.  5 Try using V.17 or a slower modem if the same error is frequent when receiving from multiple senders.  6 Turn OFF the main power, and then turn it back ON.  9 The signal did not stop within 10 s.  9 The signal did not stop within 10 s.  9 The signal did not stop within 10 s.  9 The signal did not stop within 10 s.  9 The signal did not stop within 10 s.  9 The signal did not stop within 10 s.  9 The signal did not stop within 10 s.  9 The signal did not stop within 10 s.  9 The signal did not stop within 10 s.  9 The signal did not stop within 10 s.  9 The signal did not stop within 10 s.  9 The signal did not stop within 10 s.  9 The signal did not stop within 10 s.  9 Turn OFF the main power, and then turn it back ON.  9 The signal did not stop within 10 s.  9 The signal did not stop within 10 s.  9 The signal did not stop within 10 s.  9 The signal did not stop within 10 s.  9 The signal did not stop within 10 s.  9 The		timeout in the V.34 phase 4 – control	Try increasing the TX level.
timeout in the V.34 control channel restart sequence.  Try adjusting the RX cable equalizer setting.  Try increasing the TX level.  Try using V.17 or a slower modem if the same error is frequent when receiving from multiple senders.  The line was disconnected due to abnormal signaling in V.34 phase 4 – control channel start-up.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  The control channel started after an unsuccessful primary channel.  The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  Try adjusting the RX cable equalizer setting.  Try using V.17 or a slower modem if the same error is frequent if the same error is frequent, replace the FCU.  The signal did not stop within 10 s.  The signal did not stop within 10		channel start-up.	Try adjusting the TX cable equalizer setting.
restart sequence.  Try using V.17 or a slower modem if the same error is frequent when receiving from multiple senders.  The line was disconnected due to abnormal signaling in V.34 phase 4 – control channel start-up.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  The control channel started after an unsuccessful primary channel.  The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  Try using V.17 or a slower modem if the same error is frequent when receiving from multiple senders.  The signal did not stop within 10 s.  The signal di	0-83	The line was disconnected due to a	If these errors happen at the receiving terminal:
Try using V.17 or a slower modem if the same error is frequent when receiving from multiple senders.  The line was disconnected due to abnormal signaling in V.34 phase 4 – control channel start-up.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected due to abnormal signaling in V.34 control channel restart.  The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  The control channel started after an unsuccessful primary channel.  The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  Try using V.17 or a slower modem if the same error is frequent when receiving terminal to s.  Turn OFF the main power, and then turn it back ON.  The other terminal was incompatible.  The other terminal was incompatible.  The other terminal was incompatible.  The other terminal restarted the control channel because data reception in the primary channel was not successful.  This does not result in an error communication.  Try using a lower data rate at the start.  Try adjusting the cable equalizer setting.		timeout in the V.34 control channel	Try adjusting the RX cable equalizer setting.
error is frequent when receiving from multiple senders.  0-84 The line was disconnected due to abnormal signalling in V.34 phase 4 – control channel start-up.  0-85 The line was disconnected due to abnormal signalling in V.34 control channel restart.  0-86 The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  0-87 The control channel started after an unsuccessful primary channel.  0-88 The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  2-11 Only one V.21 connection flag was received		restart sequence.	Try increasing the TX level.
Senders.   Senders.			Try using V.17 or a slower modem if the same
O-84 The line was disconnected due to abnormal signaling in V.34 phase 4 – control channel start-up.  O-85 The line was disconnected due to abnormal signaling in V.34 control channel restart.  O-86 The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  O-87 The control channel started after an unsuccessful primary channel.  O-88 The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  O-89 On.  The signal did not stop within 10 s.  Turn OFF the main power, and then turn it back ON.  Turn OFF the main power, and then turn it back ON.  Turn OFF the main power, and then turn it back ON.  Turn OFF the main power, and then turn it back ON.  Turn OFF the main power, and then turn it back ON.  The signal did not stop within 10 s.  Turn OFF the main power, and then turn it back ON.  The signal did not stop within 10 s.  The signal did not stop within 10 s.  Turn OFF the main power, and then turn it back ON.  The signal did not stop within 10 s.  Turn OFF the main power, and then turn it back ON.  The stop of the same provide power.  The signal area of the fCU.			error is frequent when receiving from multiple
abnormal signaling in V.34 phase 4 – control channel start-up.  1 Turn OFF the main power, and then turn it back ON.  1 If the same error is frequent, replace the FCU.  2 Turn OFF the main power, and then turn it back ON.  2 The line was disconnected due to abnormal signaling in V.34 control channel restart.  3 Turn OFF the main power, and then turn it back ON.  4 The signal did not stop within 10 s.  5 Turn OFF the main power, and then turn it back ON.  6 The signal did not stop within 10 s.  7 Turn OFF the main power, and then turn it back ON.  8 Turn OFF the main power, and then turn it back ON.  9 Turn OFF the main power, and then			senders.
control channel start-up.  ON. If the same error is frequent, replace the FCU.  The signal did not stop within 10 s. Turn OFF the main power, and then turn it back ON. If the same error is frequent, replace the FCU.  The signal did not stop within 10 s. Turn OFF the main power, and then turn it back ON. If the same error is frequent, replace the FCU.  The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  The control channel started after an unsuccessful primary channel.  The control channel started after an unsuccessful primary channel.  The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  Tollow Picture Turn OFF the main power, and then turn it back ON.  The other terminal was incompatible.  The other terminal was incompatible.  The other party to contact the manufacturer.  The receiving terminal restarted the control channel because data reception in the primary channel was not successful.  This does not result in an error communication.  Try using a lower data rate at the start.  Try adjusting the cable equalizer setting.  Replace the FCU.	0-84	The line was disconnected due to	The signal did not stop within 10 s.
The line was disconnected due to abnormal signaling in V.34 control channel restart.      The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  The control channel started after an unsuccessful primary channel.  The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  The control channel started after an unsuccessful primary channel.  The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  The signal did not stop within 10 s.  Turn OFF the main power, and then turn it back ON.  The other terminal was incompatible.  The other terminal was incompatible.  The other party to contact the manufacturer.  The receiving terminal restarted the control channel because data reception in the primary channel was not successful.  Try using a lower data rate at the start.  Try adjusting the cable equalizer setting.		abnormal signaling in V.34 phase 4 –	Turn OFF the main power, and then turn it back
O-85 The line was disconnected due to abnormal signaling in V.34 control channel restart.  O-86 The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  O-87 The control channel started after an unsuccessful primary channel.  O-88 The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  O-80 The line was disconnected because POI only one V.21 connection flag was received  O-85 The line was disconnected due to abnormal signaling in V.34 control con.  O-86 The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  O-87 The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  O-88 Replace the FCU.		control channel start-up.	ON.
abnormal signaling in V.34 control channel restart.  ON.  If the same error is frequent, replace the FCU.  The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  O-87 The control channel started after an unsuccessful primary channel.  The receiving terminal restarted the control channel because data reception in the primary channel was not successful.  This does not result in an error communication.  Try using a lower data rate at the start.  Try adjusting the cable equalizer setting.  Replace the FCU.			If the same error is frequent, replace the FCU.
Channel restart.  ON. If the same error is frequent, replace the FCU.  The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  O-87 The control channel started after an unsuccessful primary channel.  The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  ON.  The other terminal was incompatible.  Ask the other party to contact the manufacturer.  The receiving terminal restarted the control channel because data reception in the primary channel was not successful.  This does not result in an error communication.  Try using a lower data rate at the start.  Try adjusting the cable equalizer setting.  Replace the FCU.	0-85	The line was disconnected due to	The signal did not stop within 10 s.
<ul> <li>If the same error is frequent, replace the FCU.</li> <li>The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.</li> <li>The control channel started after an unsuccessful primary channel.</li> <li>The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.</li> <li>If the same error is frequent, replace the FCU.</li> <li>The other terminal was incompatible.</li> <li>Ask the other party to contact the manufacturer.</li> <li>The receiving terminal restarted the control channel because data reception in the primary channel was not successful.</li> <li>Try using a lower data rate at the start.</li> <li>Try adjusting the cable equalizer setting.</li> <li>Replace the FCU.</li> </ul>		abnormal signaling in V.34 control	Turn OFF the main power, and then turn it back
<ul> <li>The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.</li> <li>The control channel started after an unsuccessful primary channel.</li> <li>The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.</li> <li>The other terminal was incompatible.</li> <li>Ask the other party to contact the manufacturer.</li> <li>The receiving terminal restarted the control channel because data reception in the primary channel was not successful.</li> <li>Try using a lower data rate at the start.</li> <li>Try adjusting the cable equalizer setting.</li> <li>Replace the FCU.</li> </ul>		channel restart.	ON.
the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.  0-87 The control channel started after an unsuccessful primary channel.  The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  1			If the same error is frequent, replace the FCU.
rate using MPh that was not available in the currently selected symbol rate.  0-87 The control channel started after an unsuccessful primary channel.  • The receiving terminal restarted the control channel because data reception in the primary channel was not successful.  • This does not result in an error communication.  1 Try using a lower data rate at the start.  • Try adjusting the cable equalizer setting.  1 Try adjusting the cable equalizer setting.  1 PR was transmitted/received 9 (default) times within the same ECM frame.  2-11 Only one V.21 connection flag was received	0-86	The line was disconnected because	The other terminal was incompatible.
available in the currently selected symbol rate.  O-87 The control channel started after an unsuccessful primary channel.  O-88 The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  O-10 Available in the currently selected symbol rate.  The receiving terminal restarted the control channel because data reception in the primary channel was not successful.  This does not result in an error communication.  Try using a lower data rate at the start.  Try adjusting the cable equalizer setting.  PReplace the FCU.		the other terminal requested a data	Ask the other party to contact the manufacturer.
symbol rate.  0-87 The control channel started after an unsuccessful primary channel.  0-88 The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.  2-11 Only one V.21 connection flag was received  • The receiving terminal restarted the control channel because data reception in the primary channel was not successful.  • Try using a lower data rate at the start.  • Try adjusting the cable equalizer setting.  • Replace the FCU.		rate using MPh that was not	
The control channel started after an unsuccessful primary channel.  The receiving terminal restarted the control channel because data reception in the primary channel was not successful.  This does not result in an error communication.  Try using a lower data rate at the start.  PPR was transmitted/received 9 (default) times within the same ECM frame.  Try adjusting the cable equalizer setting.  Replace the FCU.		available in the currently selected	
unsuccessful primary channel.  channel because data reception in the primary channel was not successful.  This does not result in an error communication.  Try using a lower data rate at the start.  PPR was transmitted/received 9 (default) times within the same ECM frame.  Try adjusting the cable equalizer setting.  Replace the FCU.		symbol rate.	
channel was not successful.  This does not result in an error communication.  Try using a lower data rate at the start.  Try adjusting the cable equalizer setting.  Replace the FCU.	0-87	The control channel started after an	The receiving terminal restarted the control
<ul> <li>This does not result in an error communication.</li> <li>The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.</li> <li>Try using a lower data rate at the start.</li> <li>Try adjusting the cable equalizer setting.</li> <li>A Replace the FCU.</li> </ul>		unsuccessful primary channel.	channel because data reception in the primary
<ul> <li>The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.</li> <li>Try using a lower data rate at the start.</li> <li>Try adjusting the cable equalizer setting.</li> <li>Replace the FCU.</li> </ul>			channel was not successful.
PPR was transmitted/received 9 (default) times within the same ECM frame.  2-11 Only one V.21 connection flag was received  • Try adjusting the cable equalizer setting.  • Replace the FCU.			This does not result in an error communication.
(default) times within the same ECM frame.  2-11 Only one V.21 connection flag was received  • Replace the FCU.	0-88	The line was disconnected because	Try using a lower data rate at the start.
frame.  2-11 Only one V.21 connection flag was received  • Replace the FCU.		PPR was transmitted/received 9	Try adjusting the cable equalizer setting.
2-11 Only one V.21 connection flag was received • Replace the FCU.		(default) times within the same ECM	
received		frame.	
	2-11	Only one V.21 connection flag was	Replace the FCU.
2-12 Modem clock irregularity • Replace the FCU.		received	
	2-12	Modem clock irregularity	Replace the FCU.

Code	Meaning	Suggested Cause/Action
2-13	Modem initialization error	<ul> <li>Turn OFF the main power, and then turn it back ON.</li> <li>Update the modem ROM.</li> </ul>
		Replace the FCU.
2-22	Counter overflow error of JBIG chip	If error occurs frequently, change the settings for
	100	resolution, paper size, and compression type.
2-23	JBIG compression or reconstruction	Turn OFF the main power, and then turn it back ON.
2.24	error	Time OFF the major paying and them to me it head.
2-24	JBIG ASIC error	Turn OFF the main power, and then turn it back ON.
2-25	JBIG data reconstruction error (BIH	JBIG data error
	error)	Check the sender's JBIG function.
2-26	JBIG data reconstruction error (Float marker error)	Update the FCU ROM.
2-27	JBIG data reconstruction error (End marker error)	
2-28	JBIG data reconstruction error (Timeout)	
2-29	JBIG trailing edge maker error	FCU defective
		Check the destination device.
2-50	The machine resets itself for a fatal FCU system error	If this is frequent, update the ROM, or replace the FCU.
2-51	The machine resets itself because of a fatal communication error	If this is frequent, update the ROM, or replace the FCU.
2-53	Snd msg() in the manual task is an error because the mailbox for the operation task is full.	The user did the same operation many times, and this gave too much load to the machine.
4-01	Line current was cut	<ul> <li>Check the line connector.</li> <li>Check for line problems.</li> <li>Replace the FCU.</li> </ul>
4-10	Communication failed because of an	Get the ID Codes the same and/or the CSIs
	ID Code mismatch (Closed Network)	programmed correctly, and then resend.
	or Tel. No./CSI mismatch (Protection	The machine at the other party may be
	against Wrong Connections)	defective.
5-00	Data reconstruction not possible	Replace the FCU.
5-10	DCR timer expired	Replace the FCU.
5-20	Storage impossible because of a lack	Temporary memory shortage.

Code	Meaning	Suggested Cause/Action
	of memory	Test the SAF memory.
5-21	Memory overflow	
5-23	Print data error when printing a	Test the SAF memory.
	substitute RX or confidential RX	Ask the other party to resend the message.
	message	
5-25	SAF file access error	Replace an SD card or HDD.
		Replace the FCU.
6-00	G3 ECM - T1 time out during	Try adjusting the RX cable equalizer.
	reception of facsimile data	Replace the FCU.
6-01	G3 ECM - no V.21 signal was	
	received	
6-02	G3 ECM - EOR was received	
6-04	G3 ECM - RTC not detected	Check the connection.
		Check for a bad line or defective remote
		terminal.
		Replace the FCU.
6-05	G3 ECM - facsimile data frame not	Check the connection.
	received within 18 s of CFR, but	Check for a bad line or defective remote
	there was no line fail	terminal.
		Replace the FCU.
		Try adjusting the RX cable equalizer
		Reference:
		RX cable equalizer - G3 Switch 07 (PSTN)
6-06	G3 ECM - coding/decoding error	Defective FCU.
		The other terminal may be defective.
6-08	G3 ECM - PIP/PIN received in reply	The other party pressed [Stop] during
	to PPS.NULL	communication.
		The other terminal may be defective.
6-09	G3 ECM - ERR received	Check for a noisy line.
		Adjust the TX levels of the communicating
		machines.
		See code 6-05.
6-10	G3 ECM - error frames still received	Check for line noise.
	at the other party after all	Adjust the TX level (use NCU parameter 01 or
	communication attempts at 2400 bps	the dedicated TX parameter for that address).
		Check the connection.
		Defective remote terminal.

Code	Meaning	Suggested Cause/Action
6-21	V.21 flag detected during high speed	The other terminal may be defective or
	modem communication	incompatible.
6-22	The machine resets the sequence	Check for line noise.
	because of an abnormal handshake	If the same error occurs frequently, replace the
	in the V.34 control channel	FCU.
		Defective remote terminal.
6-99	V.21 signal not stopped within 6 s	Replace the FCU.
13-	SIP user name registration error	Double registration of the SIP user name.
17		Capacity for user-name registration in the SIP
		server is not sufficient.
13-	SIP server access error	Incorrect initial setting for the SIP server.
18		Defective SIP server.
13-	SIP authentication error	Registered password in the device does not
24		match the password in the SIP server.
13-	Network I/F setting error	IPV4 is not active in the active protocol setting.
25		IP address of the device is not registered.
13-	Network I/F setting error at power on	Active protocol setting does not match the I/F
26		setting for SIP server.
		IP address of the device is not registered.
13-	IP address setting error	IP address of the device is not registered.
27		
14-	SMTP Send Error	Error occurred during sending to the SMTP
00		server. Occurs for any error other than 14-01 to
		16. For example, the mail address of the system
		administrator is not registered.
14-	SMTP Connection Failed	Failed to connect to the SMTP server (timeout)
01		because the server could not be found.
		The PC is not ready to transfer files.
		SMTP server not functioning correctly.
		The DNS IP address is not registered.
		Network not operating correctly.
		Destination folder selection not correct.
14-	No Service by SMTP Service (421)	SMTP server operating incorrectly or the
02		destination for direct SMTP sending is not
		correct.
		Contact the system administrator and check that
		the SMTP server has the correct settings and
		operates correctly.

Code	Meaning	Suggested Cause/Action
		Contact the system administrator for direct     SMTP sending and check the sending
		destination.
14- 03	Access to SMTP Server Denied (450)	<ul> <li>Failed to access the SMTP server because the access is denied.</li> </ul>
		<ul> <li>SMTP server operating incorrectly. Contact the system administrator to determine if there is a problem with the SMTP server and to check that the SMTP server settings are correct.</li> <li>Folder send destination is incorrect. Contact the system administrator to determine that the SMTP server settings and path to the server are correct.</li> <li>Device settings incorrect. Confirm that the user name and password settings are correct.</li> <li>Direct SMTP destination incorrect. Contact the system administrator to determine if there is a problem at the destination and that the settings</li> </ul>
4.4	Access to CMTD Common Denied	at the destination are correct.
14- 04	Access to SMTP Server Denied (550)	<ul><li>SMTP server operating incorrectly</li><li>Direct SMTP sending not operating correctly</li></ul>
14-	SMTP Server HDD Full (452)	Failed to access the SMTP server because the
05	OWIT OCIVELTIDD Fall (402)	HDD on the server is full.
00		Insufficient free space on the HDD of the SMTP server. Contact the system administrator and check the amount of space remaining on the SMTP server HDD.
		Insufficient free space on the HDD where the destination folder is located. Contact the system administrator and check the amount of space remaining on the HDD where the target folder is located.
		<ul> <li>Insufficient free space on the HDD at the target destination for SMTP direct sending. Contact the system administrator. Check the amount of space remaining on the target HDD or check if the mail size setting is the default value (2MB).</li> <li>Check the size of the original data. For example,</li> </ul>

Code	Meaning	Suggested Cause/Action
		if the original has too many pages, the data size
		can be too big to send.
14-	User Not Found on SMTP Server	The designated user does not exist.
06	(551)	The designated user does not exist on the SMTP
		server.
		The designated address is not for use with direct
		SMTP sending.
14-	Data Send to SMTP Server Failed	Failed to access the SMTP server because the
07	(4XX)	transmission failed.
		PC not operating correctly.
		SMTP server operating incorrectly.
		Network not operating correctly.
		Destination folder setting incorrect.
		Direct SMTP sending not operating correctly.
14-	Data Send to SMTP Server Failed	Failed to access the SMTP server because the
08	(5XX)	transmission failed.
		SMTP server operating incorrectly.
		Destination folder setting incorrect.
		Direct SMTP sending not operating correctly.
		Software application error.
14-	Authorization Failed for Sending to	POP-Before-SMTP or SMTP authorization failed.
09	SMTP Server	Incorrect setting for file transfer
14-	Addresses Exceeded	Number of broadcast addresses exceeded the
10		limit for the SMTP server.
14-	Buffer Full	The send buffer is full so the transmission could
11		not be completed. Buffer is full due to using
		Scan-to-Email while the buffer is being used
		send mail at the same time.
14-	Data Size Too Large	Transmission was cancelled because the
12		detected size of the file was too large.
14-	Send Cancelled	Processing is interrupted because the user
13		pressed [Stop].
14-	Security Locked File Error	Update the software because of the defective
14		software.
14-	Mail Data Error	The transmitting a mail is interrupted via DCS
15		due to the incorrect data.
		Update the software because of the defective
		software.

Code	Meaning	Suggested Cause/Action
14-	Maximum Division Number Error	When a mail is divided for the mail transmission
16		and the division number of a mail are more than
		the specified number, the mail transmission is
		interrupted.
		Update the software because of the defective
		software.
14-	Incorrect Ticket	Update the software because of the defective
17		software.
14-	Access to MCS File Error	The access to MCS file is denied due to the no
18		permission of access.
		Update the software because of the defective
		software.
14-	SMTP Authentication error	Make sure the administrator's e-mail address is
20		same as the SMTP authentication address or
		POP before SMTP address.
14-	Transmission error of S/MIME	Register the correct user certificate and device
21		certificate.
14-	MCS File Creation Failed	Failed to create the MCS file because:
30		The number of files created with other
		applications on the Document Server has
		exceeded the limit.
		HDD is full or not operating correctly.
		Software error.
14-	UFS File Creation Failed	UFS file could not be created:
31		Not enough space in UFS area to handle both
		Scan-to-Email and IFAX transmission.
		HDD full or not operating correctly.
		Software error.
14-	Cancelled the Mail Due to Error	Error detected with NFAX and send was
32	Detected by NFAX	cancelled due to a software error.
14-	No Mail Address For the Machine	Neither the mail address of the machine nor the
33		mail address of the network administrator is
		registered.
14-	Address designated in the domain for	Operational error in normal mail sending or
34	SMTP sending does not exist	direct SMTP sending.
		Check the address selected in the address book
		for SMTP sending.
		Check the domain selection.

Code	Meaning	Suggested Cause/Action		
14-	Mail Job Task Error	Due to an FCU mail job task error, the send was		
50		cancelled:		
		Address book was being edited during creation		
		of the notification mail.		
		Software error.		
14-	UCS Destination Download Error	Not even one return notification can be downloaded:		
51		The address book was being edited.		
		The number for the specified destination does		
		not exist (it was deleted or edited after the job		
		was created).		
14-	Send Cancel Failed	The cancel operation by the user failed.		
60				
14-	Notification Mail Send Failed for All	All addresses for return notification mail failed.		
61	Destinations			
14-	Transmission Error due to the	When the 0 line page exists in received pages		
62	existence of zero line page	with G3 communication, the transmission is		
		interrupted.		
14-	Fax Communication Unit:	Check the followings.		
63	Transmission Error	Name of SMTP server		
		Port number of SMTP		
		DNS setting		
		Server name (FTP)		
		Path name (computer name and shared folder		
		name at SMTP/ NCP)		
		Active protocol setting (Netware/ NCP)		
		NW flame type (NCP)		
		Log-on mode (NDS tree/ bindery)		
-		Check the SMTP server.		
		Check if the SMTP server works normally and is		
		connected to the network.		
		Check if the settings of the SMTP are correct.		
-		Check the DNS server.		
		Check if the DNS server works normally and is		
		connected to the network.		
		Check if the settings of the DNS server are		
		correct.		
-		Check the network.		
		Check if the LAN works normally.		

Code	Meaning	Suggested Cause/Action
		Check if the no firewall exists.
-		Check the destination folder for the data transfer.
		Check if the destination folder works normally.
		Check if the settings of the destination folder are
		correct.
-		Ask an administrator of the direct SMTP server in
		which the data is supposed to be transferred.
		Check if the destination SMTP server works
		normally.
		Check if the settings of the destination SMTP
		server are correct.
15-	POP3/IMAP4 Server Not Registered	At startup, the system detected that the IP
01		address of the POP3/IMAP4 server has not been
		registered in the machine.
15-	POP3/IMAP4 Mail Account	The POP3/IMAP4 mail account has not been
02	Information Not Registered	registered.
15-	Mail Address Not Registered	The mail address has not been registered.
03		
15-	DCS Mail Receive Error	• Error other than 15-11 to 15-18.
10		
15-	Connection Error	The DNS or POP3/IMAP4 server could not be found:
11		The IP address for DNS or POP3/IMAP4 server
		is not stored in the machine.
		The DNS IP address is not registered.
		Network not operating correctly.
15-	Authorization Error	POP3/IMAP4 send authorization failed:
12		Incorrect IFAX user name or password.
		Another device, such as the PC, attempted
		access.
		POP3/IMAP4 settings incorrect.
15-	Receive Buffer Full	Occurs only during manual reception.
13		Transmission cannot be received due to
		insufficient buffer space. The buffer is being used
		for mail send or Scan-to-Email.
15-	Mail Header Format Error	The mail header is not standard format. For
14		example, the Date line description is incorrect.
15-	Mail Divide Error	The e-mail is not in standard format. There is no
15		boundary between parts of the e-mail, including

Code	Meaning	Suggested Cause/Action
		the header.
15-	Mail Size Receive Error	The mail cannot be received because it is too
16		large.
15-	Receive Timeout	May occur during manual receiving only because
17		the network is not operating correctly.
15-	Incomplete Mail Received	Only one portion of the mail was received.
18		
15-	Final Destination for Transfer	The format of the final destination for the transfer
31	Request Reception Format Error	request was incorrect.
15-	Send/Delivery Destination Error	The transmission cannot be delivered to the final
39		destination:
		Destination file format is incorrect.
		Could not create the destination for the file
		transmission.
15-	SMTP Receive Error	Reception rejected because the transaction
41		exceeded the limit for the "Auth. E-mail RX"
		setting.
15-	Off Ramp Gateway Error	The delivery destination address was specified
42		with Off Ramp Gateway OFF.
15-	Address Format Error	Format error in the address of the Off Ramp
43		Gateway.
15-	Addresses Over	The number of addresses for the Off Ramp
44		Gateway exceeded the limit of 30.
15-	Attachment File Format Error	The attached file is not TIFF format.
61		
15-	TIFF File Compatibility Error	Could not receive transmission due to:
62		Resolution error
		Image of resolution greater than 200 dpi without
		extended memory.
		Resolution is not supported.
		Page size error
		The page size was larger than A3.
		Compression error
		File was compressed with other than MH, MR, or
		MMR.
15-	TIFF Parameter Error	The TIFF file sent as the attachment could not be
63		received because the TIFF header is incorrect:

Code	Meaning	Suggested Cause/Action
		The TIFF file attachment is a type not supported.
		The TIFF file attachment is corrupted.
		Software error.
15-	TIFF Decompression Error	The file received as an attachment caused the TIFF
64		decompression error:
		The TIFF format of the attachment is corrupted.
		Software error.
15-	Not Binary Image Data	The file could not be received because the
71		attachment was not binary image data.
15-	MDN Status Error	The disposition line in the header of the Return
73		Receipt could not be found, or there is a problem
		with the firmware.
15-	MDN Message ID Error	Could not find the Original Message ID line in
74		the header of the Return Receipt, or there is a
		problem with the firmware.
15-	Mail Job Task Read Error	Could not receive the transmission because the
80		destination buffer is full and the destination could
		not be created (this error may occur when
		receiving a transfer request or a request for
		notification of reception).
15-	Repeated Destination Registration	Could not repeat receive the transmission
81	Error	because the destination buffer is full and the
		destination could not be created (this error may
		occur when receiving a transfer request or a
		request for notification of reception).
15-	Send Registration Error	Could not receive the file for transfer to the final
91		destination:
		The format of the final destination or the transfer
		destination is incorrect.
		Destinations are full so the final and transfer
		destinations could not be created.
15-	Memory Overflow	Transmission could not be received because
92		memory overflowed during the transaction.
15-	Memory Access Error	Transaction could not complete due to a
93		malfunction of SAF memory.
15-	Incorrect ID Code	The machine rejected an incoming e-mail for
94		transfer request, because the ID code in the
		incoming e-mail did not match the ID code

Code	Meaning	Suggested Cause/Action
		registered in the machine.
15-	Transfer Station Function	The machine rejected an incoming e-mail for
95		transfer because the transfer function was
		unavailable.
16-	No IP address registered	The machine does not get an IP address
00		because the DNS server has not been registered
		for the remote machine or IP address of the
		remote machine has not been registered.
		Register the DNS server for the remote machine
		or configure an IP address of the remote
		machine.
22-	Original length exceeded the	Divide the original into more than one page.
00	maximum scan length	Check the resolution used for scanning. Lower
		the scan resolution if possible.
		Add optional page memory.
22-	Memory overflow while receiving	Wait for the files in the queue to be sent.
01		Delete unnecessary files from memory.
		Transfer the substitute reception files to another
		fax machine, if the machine's printer is busy or
		out of order.
		Add an optional SAF memory card or hard disk.
22-	TX or RX job stalled due to line	The job started normally but did not finish
02	disconnection at the other party	normally; data may or may not have been
		received fully.
		Restart the machine.
22-	The machine cannot store received	Update the ROM
04	data in the SAF	Replace the FCU.
22-	No G3 parameter confirmation	<ul> <li>Defective FCU board or firmware.</li> </ul>
05	answer	
22-	The fax number / e-mail address	Software error.
06	entered or selected by the user does	Install latest FCU firmware.
	not match that of the destination.	FCU board defective
	(This may occur because of a bug.)	Replace the FCU.
22-	File to send missing during IP-Fax /	
07	Internet Fax / Scan to Email / Scan to	
	Folder transmission.	
22-	File missing when printing the	
08	configuration page.	

Code	Meaning		Suggested Cause/Action
22-	File missing when receiving fax.		
09			
22-	File missing is when storing a		
10	received fax file.		
23-	Data read timeout during	•	Restart the machine.
00	construction	•	Replace the FCU.
25-	The machine software resets itself	•	Update the ROM
00	after a fatal transmission error	•	Replace the FCU.
	occurred		
F0-	V.34 modem error	•	Replace the FCU.
xx			
F6-	SG3 modem error	•	Update the SG3 modem ROM.
xx		•	Replace the SG3 board.
		•	Check for line noise or other line problems.
		•	Try communicating another V.8/V.34 fax.

## **Fax Connection Unit Error Codes**

## Fax Connection Unit Error Code List

#### **MACHINE**

Error	Possible Causes	Troubleshooting Procedures
Code		
01(1)	IPv4/IPv6 not enabled	Enable IPv4 and IPv6
01(3)	"Cancel" is pressed by user.	-
01(4)	A false connection ID is being used.	Check that the network is
01(5)	Network is disconnected because of no response within a	established.
	specified time.	
01(14)	Either this machine or the machine at the other party	Exit SP mode or initial
	has entered SP mode or Initial settings.	settings.
	An established connection exists.	Wait until the connection
		has finished.

#### **MACHINE**

Error	Possible Causes			Troubleshooting Procedures
Code				
02(5)	•	Wrong IP address/host name was used.	•	Enter the correct IP
	•	The main power of the other machine at		address/host name
		destination is OFF.	•	Turn ON the main power.
	•	LAN cable is disconnected.	•	Connect the LAN cable
	•	Network is rebooting.	•	Wait until rebooting has
				finished.

#### **MACHINE**

Error	Possible Causes		Troubleshooting Procedures	
Code				
03	•	No user authentication (i.e.	Configure the use	r authentication
		Basic/Windows/LDAP/Custom Auth.) applies to	setting for client and remote	
		fax application.	machines as follo	ws:
	•	Settings other than user authentication are	Client Machine	Remote Machine
		applied to the fax application.	OFF	OFF
			ON	OFF
			ON	ON

## MACHINE

Error	Possible Causes		Troubleshooting Procedures
Code			
04	Although the same user is registered on the remote	•	Register the same user to both
	machine and client machine, the user name and		the remote machine and client
	login password do not match.		machine.
		•	Make sure to match the
			username and login password.

## MACHINE

Error Code	Possible Causes	Troubleshooting Procedures	
05	An unauthorized user tried to connect.	Authorize the user to use fax connection.	

#### MACHINE

Error	Possible Causes	Troubleshooting Procedures
Code		
06	Timeout error on the node	Adjust the value of SP5-741-001 to prolong the timeout
	authentication	for node authentication.

## MACHINE

Error	Possible Causes	Troubleshooting Procedures
Code		
07	Multiple destinations are set in the	On the client machine, execute SP5-801-021 to
	client machine.	clear AICS memory

#### MACHINE

Error		Possible Causes		Troubleshooting Procedures
Code				
08(1)	•	A client machine connects to another	•	Connect to the remote machine.
		client machine.	•	Register the client machine to the
	•	The client machine is not registered on		remote machine as a destination.
		the remote machine as destinations.		
08(2)	•	A remote machine connects to another	•	Connect to the client machine.
		Remote Machine.	•	Check the remote machine
	•	The wrong remote machine is registered		registered on the client machine.
		on the client machine.		

## **IFAX Troubleshooting**

## IFAX Troubleshooting

Use the following procedures to determine whether the machine or another part of the network is causing the problem.

Communication Route	Item	Troubleshooting Procedures
General LAN	1. Connection with the LAN	<ul> <li>Check that the LAN cable is connected to the machine.</li> <li>Check that the LEDs on the hub are lit.</li> </ul>
	2. LAN activity	Check that other devices connected to the LAN can communicate through the LAN.
Between IFAX and PC	Network settings on the PC	<ul> <li>Check the network settings on the PC.</li> <li>Check with the network administrator for the IP address. (Is the IP address registered in the TCP/IP properties in the network setup correct?)</li> </ul>
	2. Check that PC can connect with the machine	Use the "ping" command on the PC to contact the machine.  At the MS-DOS prompt, type ping then the IP address of the machine, then press Enter.
	3. LAN settings in the machine	<ul> <li>Check the LAN parameters</li> <li>Check if there is an IP address conflict with other PCs.</li> <li>Use the "Network" function in the User Tools.</li> <li>If there is an IP address conflict, inform the administrator.</li> </ul>
Between machine and e-mail server	1. LAN settings in the machine	Check the LAN parameters     Check if there is an IP address conflict with other PCs.  Use the "Network" function in the User Tools.  If there is an IP address conflict, inform the administrator.
	2. E-mail account on the server	<ul> <li>Make sure that the machine can log into the email server.</li> <li>Check that the account and password stored in the server are the same as in the machine. Ask the administrator to check.</li> </ul>

Communication	Item	Troubleshooting Procedures
Route		
	3. E-mail server	Make sure that the client devices which have an
		account in the server can send/receive e-mail.
		Ask the administrator to check.
		Send a test e-mail with the machine's own number
		as the destination. The machine receives the
		returned e-mail if the communication is performed
		successfully.
Between e-mail	1. E-mail account on	Make sure that the PC can log into the e-mail
server and internet	the Server	server.
		Check that the account and password stored in
		the server are the same as in the machine.
		Ask the administrator to check.
	2. E-mail server	Make sure that the client devices which have an
		account in the server can send/receive e-mail.
		Ask the administrator to check.
		Send a test e-mail with the machine's own number
		as the destination. The machine receives the
		returned e-mail if the communication is performed
		successfully.
	3. Destination e-mail	Make sure that the e-mail address is actually
	address	used.
		Check that the e-mail address contains no
		incorrect characters such as spaces.
	4. Router settings	Use the "ping" command to contact the router.
		Check that other devices connected to the
		router can sent data over the router.
		Ask the administrator of the server to check.
	5. Error message by e-	Check whether e-mail can be sent to another
	mail from the network	address on the same network, using the
	of the destination.	application e-mail software.
		Check the error e-mail message.
		Inform the administrator of the LAN.

## **IP-Fax Troubleshooting**

## **IP-Fax Transmission**

## Cannot send by IP Address/Host Name

Che	eck Point	Troubleshooting Procedures
1	LAN cable connected?	Check the LAN cable connection.
2	Specified IP address/hostname correct?	Check the IP address/host name.
3	Firewall/NAT installed?	The firewall cannot be breached. Send
		by another method (Fax, Internet Fax)
4	Transmission sent manually?	Manual sending not supported.
5	IP address of local machine registered?	Register the IP address.
6	Remote terminal port number setting other than	Send by specifying the port number.
	1720 (when using H.323) or 5060 (when using	
	SIP)?	
7	Specified port number correct?	Confirm the port number of the remote
		fax.
8	DNS server registered when host name specified?	Contact the network administrator.
9	Remote fax a T.38 terminal?	Check whether the remote fax is a T38
		terminal.
10	Remote fax switched off or busy?	Check that the remote fax is ON.
11	Network bandwidth too narrow?	Request the network administrator to
		increase the bandwidth.
		Raise the delay level.
		(IPFAX SW 01 Bit 0 to 3)
		IP-Fax bandwidth is the same as the
		DCS speed. Set IP-Fax SW00 Bit 6 to 1.
12	Remote fax cancelled transmission?	Check whether the remote fax cancelled
		the transmission.

## Cannot send via VoIP Gateway

Check Point		Troubleshooting Procedures
1	LAN cable connected?	Check the LAN cable connection.
2	VoIP Gateway T.38 standard?	Contact the network administrator.
3	VoIP Gateway installed correctly?	Contact the network administrator.
4	VoIP Gateway power switched on?	Contact the network administrator.
5	Is the IP address/host name of the	Check the IP address/host name.
	specified Gateway correct?	
6	Number of the specified fax correct?	Check the remote fax number.

7	Firewall/NAT installed?	The firewall cannot be breached. Send by another
		method (Fax, Internet Fax)
8	Transmission sent manually?	Manual sending not supported.
9	IP address of local fax registered?	Register the IP address.
10	DNS registered when host name	Contact the network administrator.
	specified?	
11	Remote fax a G3 fax?	Check that the remote fax is a G3 fax.
12	G3 fax connected to VoIP gateway?	Check that G3 fax is connected.
13	Remote G3 fax turned ON?	Check that G3 fax is ON.
14	Network bandwidth too narrow?	Request the network administrator to increase the
		bandwidth.
		Raise the network delay level.
		(IPFAX SW 01 Bit 0 to 3)
		IP-Fax bandwidth is the same as the DCS speed.
		Set IP-Fax SW00 Bit 6 to 1.

## Cannot send by Alias Fax number

Check Point  1 LAN cable connected?  2 Number of specified Alias fax correct?  3 Firewall/NAT installed?  4 Transmission sent manually?  Troubleshooting Procedures  Check the LAN cable connection.  Confirm the Alias of the remote fax.  Error Code: 13-14  The firewall cannot be breached. Send by another method (Fax, Internet Fax)  Manual sending not supported.	
2 Number of specified Alias fax correct?  Confirm the Alias of the remote fax.  Error Code: 13-14  3 Firewall/NAT installed?  The firewall cannot be breached. Send by another method (Fax, Internet Fax)	
Error Code: 13-14  3 Firewall/NAT installed? The firewall cannot be breached. Send by another method (Fax, Internet Fax)	
3 Firewall/NAT installed? The firewall cannot be breached. Send by another method (Fax, Internet Fax)	
another method (Fax, Internet Fax)	
4 Transmission sent manually? Manual sending not supported.	
5 Gatekeeper/SIP server installed correctly? Contact the network administrator.	
6 Gatekeeper/SIP server power turned ON? Contact the network administrator.	
7 IP address/host name of Gatekeeper/SIP Check the IP address/host name.	
server correct?	
8 DNS server registered when Gatekeeper/SIP Contact the network administrator.	
server host name specified?	
9 Enable H.323/Enable SIP SW is set to on? Check the settings.	
See User Parameter SW 34 Bit 0/SW 34 E	it 1
10 IP address of local fax registered? Register the IP address of the local fax.	
11 Alias number of local fax registered? Register the Alias number of the local fax.	
12 Remote fax registered in Gatekeeper? Contact the network administrator.	
13 Remote fax a T.38 terminal? Check whether the remote fax is a T38	
terminal.	
14 Remote fax switched off or busy? Contact the network administrator.	

15	Network bandwidth too narrow?	Request the system administrator to increase
		the bandwidth.
		Raise the delay level.
		(IPFAX SW 01 Bit 0 to 3)
		Lower the modem transmission baud rate.
		(IPFAX SW 05)
16	Remote fax cancelled transmission?	Check whether the remote fax cancelled the
		transmission.

## IP-Fax Reception

## Cannot receive via IP Address/Host Name

01	1 D : 4	T 11 1 6 B 1
Cr	neck Point	Troubleshooting Procedures
1	LAN cable connected?	Check the LAN cable connection.
2	Firewall/NAT installed?	The firewall cannot be breached. Send by another
		method (Fax, Internet Fax)
3	IP address of local fax registered?	Register the IP address.
4	Port number specified at remote sender	Request the sender to specify the port number.
	fax (if required)?	
5	Specified port number correct (if	Request the sender to check the port number.
	required)?	
6	DNS server registered when host name	Contact the network administrator.
	specified on sender side?	₩Note
		The sender machine displays this error code
		if the sender fax is a Ricoh model.
7	Network bandwidth too narrow?	Request the system administrator to increase the
		bandwidth.
		Lower the start modem reception baud rate on the
		receiving side.
		(IPFAX SW06)
8	Remote fax cancelled transmission?	Check whether the remote fax cancelled the
		transmission.

## Cannot receive by VoIP Gateway

Check Point		Troubleshooting Procedures
1	LAN cable connected?	Check the LAN cable connection.
2	Firewall/NAT installed?	The firewall cannot be breached. Send by
		another method (Fax, Internet Fax)
3	VoIP Gateway installed correctly?	Contact the network administrator.

4	VoIP Gateway power turned ON?	Contact the network administrator.
5	IP address/host name of specified VoIP	Request the remote fax to check the IP
	Gateway correct on sender's side?	address/host name.
6	DNS server registered when host name	Contact the network administrator.
	specified on sender side?	
7	Network bandwidth too narrow?	Request the network administrator to increase
		the bandwidth.
8	G3 fax connected?	Check that G3 fax is connected.
9	G3 fax power turned ON?	Check that G3 fax is ON.

## Cannot receive by Alias Fax number

Cha	eck Point	Troublesheating Procedures
		Troubleshooting Procedures
1	LAN cable connected?	Check the LAN cable connection.
2	Firewall/NAT installed?	The firewall cannot be breached. Send by
		another method (Fax, Internet Fax)
3	Gatekeeper/SIP server installed correctly?	Contact the network administrator.
		<b>↓</b> Note
		The sender machine displays this
		error code when the sender fax is a
		Ricoh model.
4	Power to Gatekeeper/SIP server turned ON?	Contact the network administrator.
		<b>♦</b> Note
		The sender machine displays this
		error code when the sender fax is a
		Ricoh model.
5	IP address/host name of Gatekeeper/SIP	Request the sender to check the IP
	server correct on the sender's side?	address/host name.
		<b>♦</b> Note
		The sender machine displays this
		error code when the sender fax is a
		Ricoh model.
6	DNS server registered when Gatekeeper/SIP	Contact the network administrator.
	server host name specified on sender's side?	<b>♦</b> Note
		The sender machine displays this
		error code when the sender fax is a
		Ricoh model.
7	Enable H.323/Enable SIP SW set to on?	Request the sender to check the settings.
		User Parameter SW 34 Bit 0/SW 34 Bit 1

		<b>U</b> Note
		Only if the remote sender fax is a
		Ricoh fax.
8	Local fax IP address registered?	Register the IP address.
9	Local fax Alias number registered?	Register the Alias number.
10	Network bandwidth too narrow?	Request the system administrator to increase
		the bandwidth.
		Lower the start modem reception baud rate on
		the receiving side.
		(IPFAX SW06)
11	Remote fax cancelled transmission?	Check whether the remote fax cancelled the
		transmission.
12	Local fax registered in Gatekeeper/SIP	Contact the network administrator.
	server?	Note
		The sender machine displays this
		error code when the sender fax is a
		Ricoh model.

# **4. Service Tables**

## **Service Program Tables**

## SP1-XXX (BIT Switches)

4	Mada Na		Function
1	Mode No.		Function
101	System Switch		
	001 –	00 –	Change the bit switches for system settings for the fax option
	032	1F	Refer to Bit Switches - 1: "System Switches".
102	Ifax Switch		
	001 –	00 –	Change the bit switches for internet fax settings for the fax option
	016	0F	Refer to Bit Switches - 2: "I-Fax Switches".
103	Printer Swi	tch	
	001 –	00 –	Change the bit switches for printer settings for the fax option
	016	0F	Refer to Bit Switches - 2: "Printer Switches".
104	Communication Switch		
	001 –	00 –	Change the bit switches for communication settings for the fax option
	032	1F	Refer to Bit Switches - 3: "Communication Switches".
105	G3-1 Switc	h	
	001 –	00 –	Change the bit switches for the protocol settings of the standard G3
	016	0F	board
			Refer to Bit Switches - 4: "G3 Switches".
111	IP fax Switch		
	001 –	00 –	Change the bit switches for optional IP fax parameters
	016	0F	Refer to Bit Switches - 5: "IP Fax Switches".

## SP2-XXX (RAM)

2	Mode No.		Function
101	RAM Read/Write		
	001		Change RAM data for the fax board directly.
			Refer to Service RAM Addresses.
102	Memory Dump		
	001	G3-1 Memory Dump	Print out RAM data for the fax board.
			Refer to Service RAM Addresses.
103	G3-1 NCU Parameters		
	001 – 023	CC, 01 – 22	NCU parameter settings for the standard G3 board.
			Refer to NCU Parameters.

## SP3-XXX (Machine Set)

3	Mode N	lo.	Function	
101	Service	Station		
	001	Fax Number	Enter the fax number of the service station.	
	002	Select Line	Select the line type.	
102	Serial N	lumber		
	000		Enter the fax unit's serial number.	
103	PSTN-1	Port Settings		
	001	Select Line	Select the line type setting for the G3-1 line. If the machine is	
			installed on a PABX line, select "PABX", "PABX (GND)" or "PABX	
			(FLASH)".	
	002	PSTN Access	Enter the PSTN access number for the G3-1 line.	
		Number		
	003	Memory Lock	Select whether to disable Memory Lock Reception.	
		Disabled		
107	IPFAX F	IPFAX Port Settings		
	002	SIP Port	Sets the SIP port number.	
	003	RAS Port	Sets the RAS port number.	
	004	Gatekeeper port	Sets the Gatekeeper port number.	
	005	T.38 Port	Sets the T.38 port number.	
	006	SIP Server Port	Sets the SIP port number.	
	007	IPFAX Protocol	Select "H323" or "SIP".	
		Priority		
201	FAX SW			
	001 –	00 – 1F		
	032			
301	Fax:Fla	irAPI Setting		
	001	-		

## SP4-XXX (ROM Versions)

4	Mode No.		Function
101	001	FCU ROM Version	Displays the FCU ROM version.
102	001	Error Codes	Displays the latest 64 fax error codes.

## SP5-XXX (RAM Clear)

5	Mode	Function
	No.	

#### 4. Service Tables

	T			
101	Initialize	itialize SRAM (except Secure)		
	000	Initializes the bit switches and user parameters, user data in the SRAM, files in the		
		SAF memory, and clock.		
102	Erase All	Files		
	000	Erases all files stored in the SAF memory.		
103	Reset Bit	t SW (except Secure)		
	000	Resets the bit switches and user parameters.		
104	Factory S	Setting		
	000	Resets the bit switches and user parameters, user data in the SRAM and files in the		
		SAF memory.		
105	Reset All	Bit Switches		
	000	Resets all the current bit switch settings.		
106	Reset Se	Reset Secure Bit Switches		
	000	Resets only the security bit switches. If you select automatic output/display for the		
		user parameter switches, the security settings are initialized.		

## SP6-XXX (Reports)

6	Mode		Function
101		em Parameter List	T direction
101	001	-	Touch the "ON" button to print the system parameter list.
102	Serv	ice Monitor Report	
	001	-	Touch the "ON" button to print the service monitor report.
103	G3 F	rotocol Dump List	
	001	G3 All	Prints the protocol dump list of all communications for all G3 lines.
		Communications	
	002	G3-1 (All	Prints the protocol dump list of all communications for the G3-1
		Communications)	line.
	003	G3-1	Prints the protocol dump list of the last communication for the G3-
		(1 Communication)	1 line.
105	All Fi	les print out	
	001	-	Prints out all the user files in the SAF memory, including
			confidential messages.
			<b>♥</b> Note
			Do not use this function, unless the customer is having
			trouble printing confidential messages or recovering files
			stored using the memory lock feature.
106	Jouri	nal Print out	
	001	All Journals	The machine prints all the communication records on the report.

	002	Specified Date	The machine prints all communication records after the specified
		•	date.
107	Log I	List Print out	
	001	All log files	These log print out functions are for designer use only.
	002	Printer	
	003	SC/TRAP Stored	
	004	Decompression	
	005	Scanner	
	006	JOB/SAF	
	007	Reconstruction	
	800	JBIG	
	009	Fax Driver	
	010	G3 CCU	
	011	Fax Job	
	012	CCU	
	013	Scanner Condition	
108	IP Pr	otocol Dump List	
	001	All Communications	Prints the protocol dump list of all communications for the IP fax
			line.
	002	1 Communication	Prints the protocol dump list of the last communication for the IP
			fax line.

## SP7-XXX (Tests)

These are the test modes for PTT approval.

7	Function	
101	G3-1 Modem Tests	
102	G3-1 DTMF Tests	
103	Ringer Test	
104	G3-1 V34 (S2400baud)	
105	G3-1 V34 (S2800baud)	
106	G3-1 V34 (S3000baud)	
107	G3-1 V34 (S3200baud)	
108	G3-1 V34 (S3429baud)	
109	Recorded Message Test	

## Bit Switches - 1



• Do not adjust a bit switch or use a setting that is described as "Not used", as this may cause the machine to malfunction or to operate in a manner that is not accepted by local regulations. Such bits are for use only in other areas, such as Japan.

Default settings for bit switches are not listed in this manual. Refer to the System Parameter List printed by the machine.

## System Switches

Sys	System Switch 00 (SP No. 1-101-001)			
No	Function	Comments		
0	Dedicated transmission	Set this bit to 1 before changing any dedicated transmission		
	parameter programming	parameters.		
	0: Disabled	This setting is automatically reset to "0" after turning off and on.		
	1: Enabled			
1	Not used	Do not change this setting.		
2	Technical data printout on	1: Instead of the personal name, the following data are listed in		
	the journal	the journal for each G3 communication.		
	0: Disabled			
	1: Enabled			
	Example:			
	<b>0000 32V34 288/264</b> (1) (2)(3) (4) (5)	<b>L0100 03 04</b> (6) (7) (8)		
	(1): EQM value (Line quality	data). A larger number means more errors.		
	(2): Symbol rate (V.34 only)			
	(3): Final modem type used			
	(4): Starting data rate (for ex	ample, 288 means 28.8 kbps)		
	(5): Final data rate			
	(6): RX level (see below for I	now to read the RX level)		
	(7): Total number of error line	es that occurred during non-ECM reception.		
	(8): Total number of burst en	or lines that occurred during non-ECM reception.		
	<b>U</b> Note			
	<ul> <li>EQM and RX level</li> </ul>	are fixed at "FFFF" in TX mode.		
	The seventh and ei	ghth numbers are fixed at "00" for transmission records and ECM		
	reception records.			
	RX level calculation			
	Example:			

	0000 32V34 288/264 (1) (2)(3) (4) (5)	L0100 03 04 (6) (7) (8)	
	The four-digit hexadecimal value (N) after "L" indicates the RX level.		
	The <b>high</b> byte is given first, followed by the <b>low</b> byte. Divide the decimal value of N by -16 to		
	ecimal value of N (= 0100 [H]) is 256.		
	So, the actual RX level is 256/-16 = -16 dB		
3	Not used	Do not change this setting.	
4	Line error mark print	When "1" is selected, a line error mark is printed on the printout if	
	0: OFF, 1: ON (print)	a line error occurs during reception. This shows error locations	
		when ECM is turned off.	
5	G3 communication	This is a fault-finding aid. The LCD shows the key parameters	
	parameter display	(see "G3 Communication Parameters" below this table). This is	
	0: Disabled	normally disabled because it cancels the CSI display for the user.	
	1: Enabled	Be sure to reset this bit to "0" after testing.	
6	Protocol dump list output	This is only used for communication troubleshooting. It shows the	
	after each communication	content of the transmitted facsimile protocol signals. Always reset	
	0: Off	this bit to 0 after finishing testing.	
	1: On	If system switch 09 bit 6 is at "1", the list is only printed if there	
		was an error during the communication.	
7	Not used	Do not change the setting.	

#### **G3 Communication Parameters**

200 00001 400 40001
336: 33600 bps 168: 16800 bps
312: 31200 bps 144: 14400 bps
288: 28800 bps 120: 12000 bps
264: 26400 bps 96: 9600 bps
240: 24000 bps 72: 7200 bps
216: 21600 bps 48: 4800 bps
192: 19200 bps 24: 2400 bps
S: Standard (8 x 3.85 dots/mm)
D: Detail (8 x 7.7 dots/mm)
F: Fine (8 x 15.4 dots/mm)
SF: Superfine (16 x 15.4 dots/mm)
21: Standard (200 x 100 dpi)
22: Detail (200 x 200 dpi)
44: Superfine (400 x 400 dpi)
MMR: MMR compression
MR: MR compression
MH: MH compression

#### 4. Service Tables

	JBO: JBIG compression (Optional mode)	
	JBB: JBIG compression (Basic mode)	
Communication	ECM: With ECM	
mode	NML: With no ECM	
Width and reduction	A4: A4 (8.3"), no reduction	
	B4: B4 (10.1"), no reduction	
	A3: A3 (11.7"), no reduction	
I/O rate	0: 0 ms/line	
	5: 5 ms/line	
	10: 10 ms/line	
	20: 20 ms/line	
	25: 2.5 ms/line	
	40: 40 ms/line	
	<b>♦</b> Note	
	"40" is displayed while receiving a fax message using AI short	
	protocol.	

## **System Switch 01** - Not used (Do not change the factory settings.)

System Switch 02 (SP No. 1-101-003)				
No	Function	Comments		
0-	Not used	Do not change these settings.		
1				
2	Forced reset after	With this setting on, the machine resets itself automatically if a		
	transmission stalls	transmission stalls and fails to complete the job.		
	0: Off			
	1: On			
3	Not used	Do not change these settings.		
4	File retention time	1: A file that had a communication error will not be erased unless		
	0: Depends on User	the communication is successful.		
	Parameter 24 [18(H)]			
	1: No limit			
5-	-	Do not change this setting		
7				

## System Switch 03 - Not used (Do not change the factory settings.)

## System Switch 04 (SP No. 1-101-005)

No	Function	Comments
0-	Not used	Do not change these settings.
2		
3	Printing dedicated TX	1: Each Quick/Speed dial number on the list is printed with the
	parameters on Quick/Speed	dedicated TX parameters (10 bytes each).
	Dial Lists	The first 10 bytes of data are the programmed dedicated TX
	0: Disabled	parameters; 34 bytes of data are printed (the other 24 bytes
	1: Enabled	have no use for service technicians).
4-	Not used	Do not change these settings.
7		

System Switch 05 - Not used (Do not change the factory settings.)
System Switch 06 - Not used (Do not change the factory settings.)
System Switch 07 - Not used (Do not change the factory settings.)
System Switch 08 - Not used (Do not change the factory settings.)

Sys	stem Switch 09 (SP No. 1-101-010)		
No	Function	Comments	
0	Addition of image data from	If this feature is enabled, the top half of the first page of	
	confidential transmissions on the	confidential messages will be printed on transmission	
	transmission result report	result reports.	
	0: Disabled 1: Enabled		
1	Print timing of communication	0: The Journal is printed only when image data is sent.	
	reports on the Journal when no	1: The Journal is printed when any data is sent.	
	image data was exchanged.		
	0: After DCS/NSS communication		
	(default),		
	1: After polling		
2	Automatic error report printout	0: Error reports will not be printed.	
	0: Disabled 1: Enabled	1: Error reports will be printed automatically after failed	
		communications.	
3	Printing of the error code on the	1: Error codes are printed on the error reports.	
	error report	This can be used for detecting an error which occurs	
	0: No 1: Yes	rarely.	
4	Not used	Do not change this setting.	
5	Power failure report	1: A power failure report will be automatically printed	
	0: Disabled	after the power is turned ON if a fax message	
	1: Enabled (default)	disappeared from the memory when the power was	

		turned off last.
		NOTE: If "0" is selected, no reports are printed and no
		one may recognize that fax data is gone due to a power
		failure.
6	Conditions for printing the protocol	This switch becomes effective only when system switch
	dump list	00 bit 6 is set to 1.
	0: Print for all communications	1: Set this bit to 1 when you wish to print a protocol
	1: Print only when there is a	dump list only for communications with errors.
	communication error	NOTE: The memory size is limited. Use this bit switch
		only when some log reports are necessary.
7	Not used	Do not change this setting.

Sys	System Switch 0A (SP No. 1-101-011)		
No	Function	Comments	
0-	Not used	Do not change these settings.	
3			
4	Dialing on the ten-key	0: Prevents dialing from the ten-key pad while the external	
	pad when the external	telephone is off-hook. Use this setting when the external telephone	
	telephone is off-hook	is not by the machine, or if a wireless telephone is connected as an	
	0: Disabled 1: Enabled	external telephone.	
		1: The user can dial on the machine's ten-key pad when the	
		handset is off-hook.	
5	On hook dial	0: On hook dial is disabled.	
	0: Disabled 1: Enabled		
6-	Not used	Do not change these settings	
7			

System Switch 0B - Not used (Do not change the factory settings.)		
System Switch 0C - Not used (Do not change the factory settings.)		
System Switch 0D - Not used (Do not change the factory settings.)		

Sys	stem Switch 0E (SP No. 1-101-015)		
No	Function	Comments	
0-	Not used	Do not change the settings.	
1			
2	Enable/disable for direct	Direct sending cannot operate when the capture function is on	
	sending selection	during sending. Setting this switch to "1" enables direct sending	
	0: Direct sending off	without capture.	

	1: Direct sending on	Setting this switch to "0" masks the direct sending function on the
		operation panel so direct sending with ScanRouter cannot be
		selected.
3	Action when the external	0: Manual TX is possible while the external handset is off-hook.
	handset goes off-hook	However, manual TX during handset off-hook may not be sent to
	0: Manual TX and RX	a correct direction. Manual TX is not possible.
	operation	1: The display stays in standby mode even when the external
	1: Memory TX and RX	handset is used, so that other people can use the machine for
	operation (the display	memory TX operation. Note that manual TX and RX are not
	remains the same)	possible with this setting.
4-	Not used	Do not change these settings.
7		

Sys	stem Switch 0F (SP No. 1-101-016)		
No	Function		Comments
0	Country/area	code for	This country/area code determines the factory settings of bit
to	to functional settings (Hex)		switches and RAM addresses. However, it has no effect on the
7	00: France	12: Asia	NCU parameter settings and communication parameter RAM
	01:	13: Japan	addresses.
	Germany		Cross reference
	02: UK	14: Hong	NCU country code:
		Kong	SP No. 2-103-001 for G3-1
	03: Italy	15: South	SP No. 2-104-001 for G3-2
		Africa	SP No. 2-105-001 for G3-3
	04: Austria	16: Australia	
	05: Belgium	17: New	
		Zealand	
	06:	18: Singapore	
	Denmark		
	07: Finland	19: Malaysia	
	08: Ireland	1A: China	
	09: Norway	1B: Taiwan	
	0A:	1C: Korea	
	Sweden		
	0B: Switz.	1D: Brazil	
	0C:	20: Turkey	
	Portugal		
	0D: Holland	21: Greece	

	0E: Spain	22: Hungary
	0F: Israel	23: Czech
	10:	24: Poland
	11: USA	

Syst	System Switch 10 (SP No. 1-101-017)		
No	Function	Comments	
0-7	Threshold memory level for parallel memory transmission	Threshold = N x 128 KB + 256 KB	
		N can be between 00 - FF(H)	
		Default setting: 02(H) = 512 KB	

Sys	System Switch 11 (SP No. 1-101-018)		
No	Function	Comments	
0	TTI printing position	Change this bit to 1 if the TTI overprints information that the	
	0: Superimposed on the page	customer considers to be important (G3 transmissions).	
	data	NOTE: If "1" is selected, it is possible that sent data is	
	1: Printed before the data	printed on two sheets of paper.	
	leading edge		
1-	Not used	Do not change these settings.	
2			
3	TTI used for broadcasting	1: The TTI (TTI_1 or TTI_2) which is selected for all	
	0: The TTIs selected for each	destinations during broadcasting.	
	Quick/Speed dial are used		
	1: The same TTI is used for all		
	destinations		
4-	Not used	Do not change these settings.	
7			

Sys	System Switch 12 (SP No. 1-101-019)		
No	Function	Comments	
0-	TTI printing	TTI: 08 to 92 (BCD) mm	
7	position in the	Input even numbers only.	
	main scan	This setting determines the print start position for the TTI from the left edge	
	direction	of the paper. If the TTI is moved too far to the right, it may overwrite the file	
		number which is on the top right of the page. On an A4 page, if the TTI is	
		moved over by more than 50 mm, it may overwrite the page number.	

System Switch 13 - Not used (do not change these settings)

### System Switch 14 - Not used (do not change these settings)

Sys	System Switch 15 (SP No. 1-101-022)			
No	Function			Comments
0-	Not used			Do not change these settings.
3				
4-	Interval for	preventing the	e machine from	If there is a file waiting for transmission, the
5	entering En	ergy Saver m	ode if there is a	machine does not go to Energy Saver mode
	pending tra	pending transmission file.		during the selected period.
	Bit 5	Bit 4	Setting	After transmitting the file, if there is no file
	0	0	1 min	waiting for transmission, the machine goes to
	0	1	30 min	the Energy Saver mode.
	1	0	1 hour	
	1	1	24 hours	
6-	Not used			Do not change
7				

Sys	System Switch 16 (SP No. 1-101-023)		
No	Function	Comments	
0	Parallel	1: The machine sends messages simultaneously using all available ports	
	Broadcasting	during broadcasting.	
	0: Disabled	NOTE: If a customer wants to keep a line available for fax reception or	
	1: Enabled	other reasons, select "0" (Disable).	
1-	Not used	Do not change these settings.	
7			

System Switch 17 - Not used (do not change these settings)

System Switch 18 - Not used (do not change these settings)

Sys	System Switch 19 (SP No. 1-101-026)		
No	Function	Comments	
0-	Not used	Do not change the settings.	
5			
6	Extended scanner	0: After installing the memory expansion option, the scanner page	
	page memory after	memory is extended to 4 MB from 2 MB.	
	memory option is	1: If this bit is set to 1 after installing the memory expansion option,	
	installed	the scanner page memory is extended to 12 MB. But the SAF	
	0: Disabled	memory decreases to 18 MB.	

	1: Enabled	
7*	Special Original mode	1: If the customer frequently wishes to transmit a form or letterhead
	0: Disabled	which has a colored or printed background, change this bit to "1".
	1: Enabled	"Original 1" and "Original 2" can be selected in addition to the "Text",
		"Text/Photo" and "Photo" modes.

<sup>\*</sup> This setting can be used for the client machine which has no FCU.

Sys	System Switch 1A (SP No. 1-101-027)		
No	Function	Comments	
0	LS RX memory	Sets the value to x4KB. When the amount of available memory drops	
to	capacity threshold	below this setting, RX documents are printed to conserve memory.	
7	setting	Initial setting 0x80 (512 KB)	
	00-FF (0-1020 Kbyte:	<b>♦</b> Note	
	Hex)	If a customer wants available memory size to be larger,	
		decrease this threshold.	

System Switch 1B - Not used (do not change these settings)

System Switch 1C - Not used (do not change these settings)

Sys	System Switch 1D (SP No. 1-101-030)		
No	Function	Comments	
0	RTI/CSI/CPS code	0: RTI, CSI, CPS codes are displayed on the top line of the LCD panel	
	display	during communication.	
	0: Enable	1: Codes are switched off (no display)	
	1: Disable		
1-	Not used	Do not change these settings.	
7			

Sys	System Switch 1E (SP No. 1-101-031)		
No	Function	Comments	
0	Communication after the	0: When this switch is on and the journal history becomes full,	
	Journal data storage area has	the next report prints. If the journal history is not deleted, the	
	become full	next transmission cannot be received. This prevents	
	0: Impossible	overwriting communication records before the machine can	
	1: Possible	print them.	
		1: If the buffer memory of the communication records for the	
		Journal is full, fax communications are still possible. But the	
		machine will overwrite the oldest communication records.	

		Note
		This county to choose only whom take had counter
		printout is enabled but the machine cannot print the
4 4	A //	report (e.g., no paper).
1*	Action when the SAF memory	0: If the SAF memory becomes full during scanning for a
	has become full during	memory transmission, the successfully scanned pages are
	scanning	transmitted.
	0: The current page is erased.	1: If the SAF memory becomes full during scanning for a
	1: The entire file is erased.	memory transmission, the file is erased and no pages are
		transmitted.
		<b>♦</b> Note
		This setting is effective only when Automatic Journal
		printout is enabled but the machine cannot print the
		report (e.g., no paper).
2	RTI/CSI display priority	This bit determines which identifier, RTI or CSI, is displayed on
	0: RTI 1: CSI	the LCD while the machine is communicating in G3 non-
		standard mode.
3	File No. printing	1: File numbers are not printed on any reports.
	0: Enabled	NOTE: The file numbers may not be printed in the sequential
	1: Disabled	order. If a customer does not like this numbering, select "0".
4	Action when authorized	0: If the user has stored no acceptable sender RTIs or CSIs,
	reception is enabled but	the user can select "ON" in the authorized reception setting
	authorized RTIs/CSIs are not	but the setting becomes invalid ("OFF"). The machine will not
	yet programmed	be able to receive any fax messages.
	0: All fax reception is disabled	If the customer wishes to receive messages from any sender
	1: Faxes can be received if the	that includes an RTI or CSI, and to block messages from
	sender has an RTI or CSI	senders that do not include an RTI or CSI, change this bit to
		"0", then enable Authorized Reception.
		Otherwise, keep this bit at "1 (default setting)".
_	Notuced	Do not change the settings
5-	Not used	Do not change the settings

<sup>\*</sup> This setting can be used for the client machine which has no FCU.

Sys	System Switch 1F (SP No. 1-101-032)		
No	Function	Comments	
0	Not used	Do not change the settings.	
1	Report printout after an original jam	0: When an original jams, or the SAF memory	
	during SAF storage or if the SAF	overflows during scanning, a report will be printed.	
	memory fills up	Change this bit to "1" if the customer does not want to	
	0: Enabled	have a report in these cases.	

	1: Disabled	Memory TX – Memory storage report
		Parallel memory TX – Transmission result report
2	Not used	Do not change the settings.
3	Received fax print start timing	0: The machine prints each page immediately after the
	(G3 reception)	machine receives it.
	0: After receiving each page	1: The machine prints the complete message after the
	1: After receiving all pages	machine receives all the pages in the memory.
4-	Not used	Do not change the factory settings.
6		
7	Action when a fax SC has occurred	0: When the fax unit detects a fax SC code other than
	0: Automatic reset	SC1201 and SC1207, the fax unit automatically resets
	1: Fax unit stops	itself.
		1: When the fax unit detects any fax SC code, the fax
		unit stops.
		Reference:
		For fax SC codes, see "Troubleshooting".

#### Bit Switches - 2

#### 

• Do not adjust a bit switch or use a setting that is described as "Not used", as this may cause the machine to malfunction or to operate in a manner that is not accepted by local regulations. Such bits are for use only in other areas, such as Japan.

Default settings for bit switches are not listed in this manual. Refer to the System Parameter List printed by the machine.

#### **I-Fax Switches**

I-fax	I-fax Switch 00 (SP No. 1-102-001)		
No	Function	Comments	
Origin	nal Width of TX	This setting sets the maximum size of the original that the destination	
Attachment File		can receive. (Bits 3 to 6 are reserved for future use or not used.)	
0	A4	-	
1	B4		
2	A3		
3-6	Reserved		
7	Not used		

0: Off (not selected), 1: On (selected)

If more than one of these three bits is set to "1", the larger size has priority. For example, if both Bit 2 and Bit 1 are set to "1" then the maximum size is "A3" (Bit 2).

When mail is sent, there is no negotiation with the receiving machine at the destination, so the sending machine cannot make a selection for the receiving capabilities (original width setting) of the receiving machine. The original width selected with this switch is used as the RX machine's original width setting, and the original is reduced to this size before sending. The default is A4.

If the width selected with this switch is higher than the receiving machine can accept, the machine detects this and this causes an error.

I-fax	I-fax Switch 01 (SP No. 1-102-002)			
No	No Function Comments			
Original Line Resolution		These settings set the maximum resolution of the original that the		
of TX Attachment File		destination can receive.		
0	200x100 Standard	0: Not selected		
1	200x200 Detail	1: Selected		
2 200x400 Fine		If more than one of these three bits is set to "1", the higher resolution		
3	300 x 300 Reserve	has priority. For example, if both Bit 0 and Bit 2 are set to "1" Then The		
4	400 x 400 Super	Resolution is set for "Bit 2 200 x 400.		

	Fine
5	600 x 600 Reserve
6	Reserve
7	mm/inch

This setting selects mm/inch conversion for mail transmission.

0: Off (No conversion), 1: On (Conversion)

When on (set to "1"), the machine converts millimeters to inches for sending mail. There is no switch for converting inches to millimeters.

Unlike G3 fax transmissions which can negotiate between sender and receiver to determine the setting, mail cannot negotiate between terminals; the mm/inch selection is determined by the sender fax.

When this switch is Off (0):

- Images scanned in inches are sent in inches.
- Images scanned in mm are sent in mm.
- Images received in inches are transmitted in inches.
- Images received in mm are transmitted in mm.

When this switch is On (1):

- Images scanned in inches are sent in inches.
- Images scanned in mm are converted to inches.
- Images received in inches are transmitted in inches.
- Images received in mm are converted to inches.

I-fax	Switch 02 (SP No. 1-102-003)					
No	Function	Comments				
0	RX Text Mail Header Processing					
	This setting determines whether the header	This setting determines whether the header information is printed with text e-mails when they				
	are received.					
	0: Prints only text mail.					
	1: Prints mail header information attached to	: Prints mail header information attached to text mail.				
	When a text mail is received with this switch On (1), the "From" address and "Subject" address					
When a mail with only binary data is received (a TIFF-F file, for example), this setting and no header is printed.						
				1	Output from Attached Document at E-mail TX Error	
	This setting determines whether only the first	st page or all pages of an e-mail attachment are				
printed at the sending station when a transmission error occurs. This allows the cu						
	see which documents have not reached their intended destinations if sent to the wrong e-mail					
	addresses, for example.					
	0: Prints 1st page only.					

## 1: Prints all pages. 2-3 Text String for Return Receipt This setting determines the text string output for the Return Receipt that confirms the transmission was received normally at the destination. 00: "Dispatched" Sends from PC mail a request for a Return Receipt. Receives the Return Receipt with "dispatched" in the 2nd part: Disposition: Automatic-action/MDN-send automatically; dispatched The "dispatched" string is included in the Subject string. 01: "Displayed" Sends from PC mail a request for a Return Receipt. Receives the Return Receipt with "displayed" in the 2nd part: Disposition: Automatic-action/MDN-send automatically; displayed The "displayed" string is included in the Subject string. 10: Reserved 11: Reserved A mail requesting a Return Receipt sent from an IFAX with this switch set to "00" (for "dispatched") received by Microsoft Outlook 2000 may cause an error. If any setting other than "displayed" (01) causes a problem, change the setting to "01" to enable normal sending of the Return Receipt. 4 Media accept feature This setting adds or does not add the media accept feature to the answer mail to confirm a reception. 0: Does not add the media accept feature to the answer mail 1: Adds the media accept feature to the answer mail. Use this bit switch if a problem occurs when the machine receives an answer mail, which contains the media accept feature field. 5-6 Not Used 7 Image Resolution of RX Text Mail This setting determines the image resolution of the received mail. 0: 200 x 200 1: 400 x 400 The "1" setting requires installation of the Memory Unit in order to have enough SAF (Store and Forward) memory to receive images at 400 x 400 resolution.

#### I-fax Switch 03 - Not used (do not change these settings)

#### I-fax Switch 04 (SP No. 1-102-005)

No	Function	Comments				
0	Subject for Delivery TX/Memory Transfer					
	This setting determines whether the RTI/CSI registered on this machine or the RTI/CSI of the					
	originator is used in the subject lines of trans	ferred documents.				
	0: Puts the RTI/CSI of the originator in the S	ubject line. If this is used, either the RTI or CSI is				
	used. Only one of these can be received for	use in the subject line.				
	1: Puts the RTI/CSI registered on this machin	ne in the Subject line.				
	When this switch is used to transfer and deli	ver mail to a PC, the information in the Subject line				
	that indicates where the transmission origina	ted can be used to determine automatically the				
	destination folder for each e-mail.					
1	Subject corresponding to mail post database					
	0: Standard subject					
	1: Mail post database subject					
	The standard subject is replaced by the mail post database subject in the following three cases:					
	1) When the service technician sets the service (software) switch.					
	2) When memory sending or delivery specific	ed by F code is applied by the SMTP server				
	3) With relay broadcasting (1st stage without the Schmidt 4 function).					
	<b>♦</b> Note					
	This switch does not apply for cond	ition 3) when the RX system is set up for memory				
	sending, delivery by F-code, sendin	g with SMTP RX and when operators are using				
	FOL (to prevent problems when rec	eiving transmissions).				
2-7	Not Used					

I-fax	I-fax Switch 05 (SP No. 1-102-006)				
No	Function Comments				
0	Mail Addresses of SMTP Broadcast Recipients				
	Determines whether the e-mail addresses of	f the destinations that receive transmissions			
	broadcasted using SMTP protocol are recor	ded in the Journal.			
	For example:				
	"1st destination + Total number of destination	ns: 9" in the Journal indicates a broadcast to 9			
	destinations.				
	0: Not recorded				
	1: Recorded				
1	IFAXTX Retries				
	Determines whether the machine retries ser	nding IFAX when connection and transmission fails			
	due to errors.				
	0: Disabled				
	1: Enabled				
2	Size Setting: Tiff: Mail/Folder				

	Enables or disables a function to adjust the file size in the main scan direction when sending a
	TIFF file to e-mail destination or folder destination.
	0: OFF (Disable)
	1: ON (Enable)
3-7	Not Used

I-fax Switch 06 - Not used (do not change the settings)
I-fax Switch 07 - Not used (do not change the settings)

I-fax	I-fax Switch 08 (SP No. 1-102-009)				
No	Function Comments				
0-7	Memory Threshold for POP Mail Reception				
	This setting determines the amount of SAF (Store and Forward) memory. (SAF stores fax				
	messages to send later for transmission to more than one location, and also holds incoming				
	messages if they cannot be printed.) When the amount of SAF memory available falls below				
	this setting, mail can no longer be received; received mail is then stored on the mail server.				
	00-FF (0 to 1024 KB: HEX)				
	The hexadecimal number you enter is multip	olied by 4 KB to determine the amount of memory.			

I-fax	I-fax Switch 09 (SP No. 1-102-010)			
No	Function Comments			
0-	Not used	Do not change the settings		
3				
4-	Restrict TX	This setting determines the number of retries when connection and		
7	Retries	transmission fails due to errors.		
		01-F (1-15 Hex)		

I-fax Switch 0A - Not used (do not change the settings)

I-fax Switch 0B - Not used (do not change the settings)

I-fax Switch 0C - Not used (do not change the settings)

I-fax	I-fax Switch 0D (SP No. 1-102-014)				
No	Function		Comments		
0-	Not used			Do not change the	
1			settings		
2-	Select the sign	ature whe	In response to		
3	results		IEEE2600.1.		
	Bit 2	Bit 3	Setting		

	0	0	No sign	
	0	1	No setting	
	1	0	Individual setting	
	1	1	Always sign	
4-	Select the sign	ature whe	n sending mail.	In response to
5				IEEE2600.1.
	Bit 5	Bit	Setting	
		4		
	0	0	No sign	
	0	1	No setting	
	1	0	Individual setting	
	1	1	Always sign	
6-	Not used			Do not change the
7				settings.

## I-fax Switch 0E - Not used (do not change the settings)

I-fax	I-fax Switch 0F (SP No. 1-102-016)			
No	Function Comments			
0	Delivery Method for SMTP RX Files			
	This setting determines whether files receive	red with SMTP protocol are delivered or output		
	immediately.			
	0: Off. Files received via SMTP are output i	mmediately without delivery.		
	1: On. Files received via SMTP are delivered immediately to their destinations.			
1	Set to select the signature when receiving SMTP mail.  0: No sign 1: Always sign			
2	Set to encrypt the data when receiving SMTP mail.			
	0: No encryption			
	1: Encryption			
3-7	Not used			

## Printer Switches

Printer Switch 00 (SP No. 1-103-001)			
No Function Comments			
0	Select page separation	0: If a 2 page RX transmission is split, [*] is printed in the bottom	
	marks	right corner of the 1st page and only a [2] is printed in the upper	
	0: Off	right corner of the 2nd page.	

	1: On	1: If a 2 page RX transmission is split into two pages, for example,
		[*] [2] is printed in the bottom right corner of the 1st page and only
		a [2] is printed in the upper right corner of the 2nd page.
		Note
		This helps the user to identify pages that have been split
		because the size of the paper is smaller than the size of
		the document received. (When A5 is used to print an A4
		size document, for example.)
1	Repetition of data when	1: Default. 10 mm of the trailing edge of the previous page are
	the received page is	repeated at the top of the next page.
	longer than the printer	0: The next page continues from where the previous page stopped
	paper	without any repeated text.
	0: Off	
	1: On	
2	Prints the date and time	This switch is only effective when user parameter 02 - bit 2
	on received fax messages	(printing the received date and time on received fax messages) is
	0: Disabled	enabled.
	1: Enabled	1: The machine prints the received and printed date and time at
		the bottom of each received page.
3-	Not used	Do not change the settings.
7		

Printer Switch 01 (SP No. 1-103-002)			
No	Comments		
0-7 Not used D		Do not change the settings.	

Prin	Printer Switch 02 (SP No. 1-103-003)				
No	Function	Comments			
0*	1st paper feed	0: The paper feed station can be used to print fax messages and			
	station usage for fax	reports.			
	printing	1: The specified paper feed station will not be used for printing fax			
	0: Enabled	messages and reports.			
	1: Disabled	Note			
1*	2nd paper feed	<ul> <li>Do not disable usage for a paper feed station which has been</li> </ul>			
	station usage for fax	specified by User Parameter Switch 0F (15), or which is used			
	printing	for the Specified Cassette Selection feature.			
	0: Enabled				
	1: Disabled				

2*	3rd paper feed	
	station usage for fax	
	printing	
	0: Enabled	
	1: Disabled	
3*	4th paper feed	
	station usage for fax	
	printing	
	0: Enabled	
	1: Disabled	
4*	LCT usage for fax	
	printing	
	0: Enabled	
	1: Disabled	
5-	Not used	Do not change the settings.
7		

<sup>\*</sup> This setting can be used for the client machine which has no FCU.

Prin	Printer Switch 03 (SP No. 1-103-004)				
No	Function	Comments			
0*	Length reduction of received data	0: Incoming pages are printed without length reduction.			
	0: Disabled	(Page separation threshold: Printer Switch 03, bits 4 to			
	1: Enabled	7)			
		1: Incoming page length is reduced when printing.			
		(Maximum reducible length: Printer Switches 04, bits 0			
		to 4)			
1-	Not used	Do not change the settings			
3					
4	Page separation setting when sub	Page separation threshold (with reduction disabled with			
to	scan compression is forbidden	switch 03-0 above).			
7	00-0F (0-15 mm: Hex)	For example, if this setting is set to "10", and A4 is the			
	Default: 6 mm	selected paper size:			
		If the received document is 10 mm or less longer than			
		A4, then the 10 mm are cut and only 1 page prints.			
		If the received document is 10 mm longer than A4, then			
		the document is split into 2 pages.			

<sup>\*</sup> This setting can be used for the client machine which has no FCU.

Prin	ter Switch 04 (SP No. 1-103-005)	
No	Function	Comments

0	Maximum reducible length when length reduction is enabled with switch 03-0 above.						
to	[Maximum reducible length] = [Paper length] + (N x 5mm)						
4	"N" is the decimal value of the binary setting of bits 0 to 4.						
	Bit 4	Bit 3	Bit	2 Bit 1		Bit 0	Setting
	0	0	0	0		0	0 mm
	0	0	0	0		1	5 mm
	0	0	1	0		0	20 mm
	1	1	1	1		1	155 mm
	For A5 sideways and B5 sideways paper						
[Maximum reducible length] = [Paper length] + 0.75 x (N x 5mm)					N x 5mm)		
5	Length of the duplicated image on the next page, when page separation has taken place.				on has taken place.		
6	Bit 6		Bit 5		Setting		
	0	(		0		4 mm	
	0		1		10 mm		
	1		0		15 mm		
	1		1		Not used		
7	Not used.			Do not change the setting.			

### Printer Switch 05 - Not used (do not change the settings)

Prin	Printer Switch 06 (SP No. 1-103-007)				
No	Function	Comments			
0*	Printing while a paper cassette is pulled out, when the Just Size	Reference:			
	Printing feature is enabled.	Just size printing on/off –			
	0: Printing will not start	User switch 05, bit 5			
	1: Printing will start if another cassette has a suitable size of				
	paper, based on the paper size selection priority tables.				
1	Automatic reduction of received documents	0: Disabled			
		1: Enabled			
2-	Not used.	Do not change the settings.			
7					

<sup>\*</sup> This setting can be used for the client machine which has no FCU.

Prin	Printer Switch 07 (SP No. 1-103-008)				
No	Function	Comments			
0	Not used.	Do not change the settings.			
1	Selects whether or not to print at a reduced size (95%)	0:OFF			
	when printing on sheets with the width of letter-size paper	1:ON			
2-	Not used.	Do not change the settings.			

3		
4	Receiver name printed on the transmission result report	Selects the printing target on the
		transmission result report.
		0: All receivers
		1: Printing only receivers which
		have received fax transmission.
5-	Not used.	Do not change the settings.
7		

Printer Switch 08 - Not used (do not change the settings)
Printer Switch 09 - Not used (do not change the settings)
Printer Switch 0A - Not used (do not change the settings)
Printer Switch 0B - Not used (do not change the settings)
Printer Switch 0C - Not used (do not change the settings)

Prin	rinter Switch 0E (SP No. 1-103-015)						
No	Function			Comments			
0*	Paper size selection priority		selection priority	0: A paper size that has the same width as the received data is			
	0: W	idth		selected first.			
	1: Le	ength		1: A paper size which has enough length to print all the			
				received lines without reduction is selected first.			
1*	Pape	er size	selected for	This switch determines which paper size is selected for			
	printi	ing A4	width fax data	printing A4 width fax data, when the machine has both A4 and			
	0: 8.	5" x 11	" size	8.5" x 11" size paper.			
	1: A4	size					
2	Page	e sepa	ration	1: If all paper sizes in the machine require page separation to			
	0: Enabled			print a received fax message, the machine does not print the			
	1: Disabled		d	message (Substitute Reception is used).			
				After a larger size of paper is set in a cassette, the machine			
				automatically prints the fax message.			
3-	Print	ing the	e sample image on	"Same size" means the sample image is printed at 100%,			
4	repo	rts		even if page separation occurs.			
	Bit	Bit	Setting	User Parameter Switch 19 (13H) bit 4 must be set to "0" to			
	4	3		enable this switch.			
	0	0	The upper half				
			only				
	0	1	50% reduction				
			(sub-scan only)				

	1	0	Same size	
	1	1	Not used	
5-	Not u	ısed		Do not change the settings.
6				
7	Equalizing the reduction ratio		the reduction ratio	0: When page separation has taken place, all the pages are
	among separated pages		parated pages	reduced with the same reduction ratio.
	(Page Separation)		aration)	1: Only the last page is reduced to fit the selected paper size
	0: Er	nabled		when page separation has taken place. Other pages are
	1: Di	sabled	i	printed without reduction.

<sup>\*</sup> This setting can be used for the client machine which has no FCU.

Prin	rinter Switch 0F (SP No. 1-103-016)			
No	Funct	Function		Comments
0-	Smoo	thing fe	ature	(0, 0) (0, 1): Disable smoothing if the machine receives halftone
1*	Bit 1	Bit 0	Setting	images from other manufacturers fax machines frequently.
	0	0	Disabled	
	0	1	Disabled	
	1	0	Enabled	
	1	1	Not used	
2*	Duplex printing		ıg	1: The machine always prints received fax messages in duplex
	0: Disa	abled		printing mode:
	1: Enabled			
3	Bindin	g direct	tion for	0: Sets the binding for the left edge of the stack.
	Duple	Duplex printing		1: Sets the binding for the top of the stack.
	0: Left binding		9	
	1: Top	binding	)	
4-7	Not us	sed		Do not change the settings.

<sup>\*</sup> This setting can be used for the client machine which has no FCU.

# **Bit Switches - 3**

#### 

• Do not adjust a bit switch or use a setting that is described as "Not used", as this may cause the machine to malfunction or to operate in a manner that is not accepted by local regulations. Such bits are for use only in other areas, such as Japan.

Default settings for bit switches are not listed in this manual. Refer to the System Parameter List printed by the machine.

#### **Communication Switches**

Con	nmun	icatio	n Switch 00 (SP No. 1-	104-001)
No	Fun	ction		Comments
0-	Compression modes available in		on modes available in	These bits determine the compression capabilities to be
1	rece	ive mo	de	declared in phase B (handshaking) of the T.30 protocol.
	Bit	Bit	Modes	
	1	0		
	0	0	MH only	
	0	1	MH/MR	
	1	0	MH/MR/MMR	
	1	1	MH/MR/MMR/JBIG	
2-	Com	pressi	on modes available in	These bits determine the compression capabilities to be
3	trans	smit m	ode	used in the transmission and to be declared in phase B
	Bit	Bit	Modes	(handshaking) of the T.30 protocol.
	3	2		
	0	0	MH only	
	0	1	MH/MR	
	1	0	MH/MR/MMR	
	1	1	MH/MR/MMR/JBIG	
4	Not	used		Do not change the settings.
5	JBIG	comp	ression method:	Change the setting when communication problems occur
	Rece	eption		using JBIG compression.
	0: O	nly bas	sic supported	
	1: Ba	asic ar	nd optional both	
	supp	orted		
6	JBIG	comp	ression method:	Change the setting when communication problems occur
	Tran	smissi	on	using JBIG compression.
	0: Ba	asic m	ode priority	
	1: 0	otional	mode priority	
7	Clos	ed net	work (reception)	1: Reception will not go ahead if the polling ID code of the

0: Disabled	remote terminal does not match the polling ID code of the
1: Enabled	local terminal. This function is only available in NSF/NSS
	mode.

Con	mmunication Switch 01 (SP No. 1-104-002)			
No	Funct	tion		Comments
0	ECM	ECM		If this bit is set to 0, ECM is switched off for all communications.
	0: Off	1: Or	1	In addition, V.8 protocol and JBIG compression are switched off
				automatically.
1	Not us	sed		Do not change the setting.
2-	Wrong	g con	nection	(0,1): The machine will disconnect the line without sending a fax
3	preve	ntion	method	message, if the last 8 digits of the received CSI do not match the
	Bit 3	Bit 2	2 Setting	last 8 digits of the dialed telephone number. This does not work
	0	0	None	when manually dialed.
	0	1	8 digit CSI	(1,0): The same as above, except that only the last 4 digits are
	1	0	4 digit CSI	compared.
	1	1	CSI/RTI	(1,1): The machine will disconnect the line without sending a fax
				message, if the other end does not identify itself with an RTI or
	-			CSI.
				(0,0): Nothing is checked; transmission will always go ahead.
				Note
				This function does not work when dialing is done from the
				external telephone.
4-	Not us	sed		Do not change the setting.
5				
6-	Maxin	num p	orintable page	The setting determined by these bits is informed to the
7	length available		able	transmitting terminal in the pre-message protocol exchange (in the
	Bit 7	Bit	Setting	DIS/NSF frames).
		6		
	0	0	No limit	
	0	1	B4 (364 mm)	
	1	0	A4 (297 mm)	
	1	1	Not used	

Con	Communication Switch 02 (SP No. 1-104-003)			
No	Function Comments			
0	G3 Burst error threshold	If there are more consecutive error lines in the received		
	0: Low 1: High	page than the threshold, the machine will send a negative		

		response. The Low and	d High threshold values depend on
		the sub-scan resolution	n, and are as follows.
		100 dpi	6(L) →12(H)
		200 dpi	12(L) →24(H)
		300 dpi	18(L) →36(H)
		400 dpi	24(L) →48(H)
1	Acceptable total error line ratio	If the error line ratio for	a page exceeds the acceptable ratio,
	0: 5% 1: 10%	RTN will be sent to the	other end.
2	Treatment of pages received	0: Pages received with	errors are not printed.
	with errors during G3 reception		
	0: Deleted from memory without		
	printing		
	1: Printed		
3	Hang-up decision when a	0: The next page will be	e sent even if RTN or PIN is received.
	negative code (RTN or PIN) is	1: The machine will ser	nd DCN and hang up if it receives
	received during G3 immediate	RTN or PIN.	
	transmission	This bit is ignored for m	nemory transmissions or if ECM is
	0: No hang-up, 1: Hang-up	being used.	
4-	Not used	Do not change these s	ettings.
7			

Con	Communication Switch 03 (SP No. 1-104-004)			
No	Function	Comments		
0-	Maximum number of page retransmissions in a G3	00 - FF (Hex) times.		
7	memory transmission	This setting is not used if ECM is		
		switched on.		
		Default setting - 03(H)		

Con	Communication Switch 04 (SP No. 1-104-005)			
No	Function	Comments		
0	Remote mode switch	Set this bit to ON when you wish to switch TEL mode to FAX mode		
	(TEL mode)	remotely.		
	0: Disable			
	1: Enable (Active)			
1	Remote mode switch	Set this bit to ON when you wish to turn on the remote mode switch		
	(FAX mode)	after automatic reception with FAX mode.		
	0: Disable			
	1: Enable (Active)			

2	Remote mode switch	Set this bit to ON when you wish to turn on the remote mode switch
	(AUTO mode)	after automatic reception with AUTO mode.
	0: Disable	
	1: Enable (Active)	
3-	Not used	Do not change the settings.
7		

Con	Communication Switch 05 (SP No. 1-104-006)			
No	Function Comments			
0-	Remote mode switch	Enter the number to switch between TEL/FAX modes using the		
3	number	external phone.		
	00-09 (0-9:HEX)			
4-	Not used	Do not change the settings.		
7				

Communication Switch 06 - Not used (do not change the settings)
Communication Switch 07 - Not used (do not change the settings)
Communication Switch 08 - Not used (do not change the settings)

Con	Communication Switch 09 (SP No. 1-104-009)		
No	No Function Comments		
0-	Minimum interval between	This value is the minimum time that the machine waits	
7	automatic dialing attempts before it dials the next destination.		

Communication Switch 0A (SP No. 1-104-011)			
No	Function Comments		
0	Point of resumption of memory	0: The transmission begins from the page where	
	transmission upon redialing	transmission failed the previous time.	
	0: From the error page	1: Transmission begins from the first page, using	
	1: From page 1	normal memory transmission.	
1-	Not used	Do not change these settings.	
7			

Con	Communication Switch 0B (SP No. 1-104-012)		
No	Function Comments		
0-	Not used	Do not change these settings.	
2			
3	Conditions required for	0: Always transmitted	

	Transfer Result Report	1: Only transmitted if there was an error
	transmission	
4	Printout of the message	When the machine is acting as a Transfer Station, this bit
	when acting as a Transfer	determines whether the machine prints the fax message
	Station	coming in from the Requesting Terminal.
	0: Disabled, 1: Enabled	
5-	Not used	Do not change the settings.
7		

### **Communication Switch 0C** - Not used (do not change the settings)

Con	Communication Switch 0D (SP No. 1-104-014)		
No	Function	Comments	
0-	The available memory threshold,	00 to FF (Hex), unit = 4 Kbytes	
7	below which ringing detection (and	(e.g., 06(H) = 24 Kbytes)	
	therefore reception into memory) is	One page is about 24 Kbytes.	
	disabled	The machine refers to this setting before each fax	
		reception. If the amount of remaining memory is below	
		this threshold, the machine cannot receive any fax	
		messages.	
		If this setting is kept at 0, the machine will detect ringing	
		signals and go into receive mode even if there is no	
		memory available. This will result in communication	
		failure.	

Communication Switch 0E (SP No. 1-104-015)		
No	o Function Comments	
0-	Minimum interval between	06 to FF (Hex), unit = 2 s
7	automatic dialing attempts	(e.g., 06(H) = 12 s)
		This value is the minimum time that the machine waits
		before it dials the next destination.

## Communication Switch 0F - Not used (do not change the settings.)

Communication Switch 10 (SP No. 1-104-017)		
No	Function Comments	
0-	Memory transmission: Maximum number of dialing attempts to the same	01 – FE (Hex)
7	destination	times

### Communication Switch 11 – Not used (do not change the settings.)

Con	Communication Switch 12 (SP No. 1-104-019)		
No	Function Comments		
0-	Memory transmission: Interval between dialing attempts to the same	01 – FF (Hex)	
7	destination	minutes	

#### Communication Switch 13 – Not used (do not change the settings.)

Con	Communication Switch 14 (SP No. 1-104-021)			
No	Function			Comments
0	Inch-to-	Inch-to-mm conversion during		0: In immediate transmission, data scanned in inch format are
	transm	transmission		transmitted without conversion.
	0: Disa	0: Disabled, 1: Enabled		In memory transmission, data stored in the SAF memory in
				mm format are transmitted without conversion.
				Note: When storing the scanned data into SAF memory, the
				fax unit always converts the data into mm format.
				1: The machine converts the scanned data or stored data in
				the SAF memory to the format which was specified in the set-
				up protocol (DIS/NSF) before transmission.
1-	Not used			Do not change the factory settings.
5				
6-	Availab	ole unit o	f resolution in	For the best performance, do not change the factory settings.
7	which f	which fax messages are		The setting determined by these bits is informed to the
	receive	received		transmitting terminal in the pre-message protocol exchange (in
	Bit 7	Bit 6	Unit	the DIS/NSF frames).
	0	0	mm	
	0	1	inch	
	1	0	mm and inch	
	1	1	Not used	

Communication Switch 15 – Not used (do not change the settings)

Communication Switch 16 – Not used (do not change the settings)

Communication Switch 17 (SP No. 1-104-024)		
No Function Comments		Comments
0	SEP reception	0: Polling transmission to another maker's machine using
	0: Disabled	the SEP (Selective Polling) signal is disabled.

	1: Enabled	
1	SUB reception	0: Confidential reception to another maker's machine using
	0: Disabled	the SUB (Sub-address) signal is disabled.
	1: Enabled	
2	PWD reception	0: Disables features that require PWD (Password) signal
	0: Disabled	reception.
	1: Enabled	
3-	Not used	Do not change the settings.
4		
5	PSTN dial-in routing setting	1: The machine sets multiple PSTN dial-in numbers in the
	0: OFF	PSTN dial-in line and transfers received data from each
	1: ON	PSTN dial-in number to each address.
6	Not used	Do not change the settings.
7	Action when there is no box with	Change this setting when the customer requires.
	an F-code that matches the	
	received SUB code	
	0: Disconnect the line	
	1: Receive the message	
	(using normal reception mode)	

Com	Communication Switch 18 (SP No. 1-104-025)		
No	Function Comments		
0-4	Not used	Do not change the settings.	
5	IP-Fax dial-in routing selection	1: Transfers received data to each IP-Fax dial-in number.	
	0: Off	IP-Fax dial-in number is a 4-digit number.	
	1: On		
6-7	Not used	Do not change the settings.	

Communication Switch 19 - Not used (do not change the settings)

Communication Switch 1A - Not used (do not change the settings)

Con	Communication Switch 1B (SP No. 1-104-028)			
No	Function	Comments		
0-	Extension access code	If the PABX does not support V.8/V.34 protocol procedure, set this bit		
7	(0 to 7) to turn V.8	to "1" to disable V.8.		
	protocol On/Off	Example: If "0" is the PSTN access code, set bit 0 to 1. When the		
	0: On	machine detects "0" as the first dialed number, it automatically		
	1: Off	disables V.8 protocol. (Alternatively, if "3" is the PSTN access code,		

		set bit 3 to 1.)
--	--	------------------

Communication Switch 1C (SP No. 1-104-029)				
No	Function Comments			
0-	Extension access code	Refer to communication switch 1B.		
1	(8 and 9) to turn V.8	Example: If "8" is the PSTN access code, set bit 0 to 1. When the		
	protocol On/Off	machine detects "8" as the first dialed number, it automatically		
	0: On	disables V.8 protocol. (If "9" is the PSTN access code, use bit 1.)		
	1: Off			
2-	Not used	Do not change the settings.		
7				

Communication Switch 1D - Not used (do not change the settings)			
Communication Switch 1E - Not used (do not change the settings)			
Communication Switch 1F - Not used (do not change the settings)			

## **Bit Switches - 4**

#### 

• Do not adjust a bit switch or use a setting that is described as "Not used", as this may cause the machine to malfunction or to operate in a manner that is not accepted by local regulations. Such bits are for use only in other areas, such as Japan.

Default settings for bit switches are not listed in this manual. Refer to the System Parameter List printed by the machine.

### G3 Switches

G3 :	Switch	00 (SP	No. 1-105-001)	
No	Function			Comments
0	Monito	or speak	er during	(0, 0): The monitor speaker is disabled all through the
1	comm	unicatio	n (TX and RX)	communication.
	Bit 1	Bit 0	Setting	(0, 1): The monitor speaker is on up to phase B in the T.30
	0	0	Disabled	protocol.
	0	1	Up to Phase B	(1, 0): Used for testing. The monitor speaker is on all through
	1	0	All the time	the communication. Make sure that you reset these bits after
	1	1 1 Not used		testing.
2	Monito	or speak	ker during memory	1: The monitor speaker is enabled during memory
	transm	nission		transmission.
	0: Disa	abled 1:	Enabled	
3-	Not us	ed		Do not change the settings.
5				
6	Dedicated G3 line mode			Set this bit to 1 when you wish to dedicate a line for G3.
	selection 0: Off 1: On (Dedicated)			
7	Not us	ed		Do not change this setting.

G3 9	G3 Switch 01 (SP No. 1-105-002)			
No	Function	Comments		
0-	Not used	Do not change the settings.		
3				
4	DIS frame length	1: The bytes in the DIS frame after the 4th byte will not be transmitted (set		
	0: 10 bytes 1: 4	to 1 if there are communication problems with PC-based faxes which		
	bytes	cannot receive the extended DIS frames).		
5	Not used	Do not change the setting.		
6	Forbid	Do not change this setting (Default: 0: Off), unless communication problem		

	CED/ANsam	is caused by a CED or ANSam transmission.
	output	
	0: Off	
	1: On (Forbid	
	output)	
7	Not used	Do not change this setting.

G3 S	G3 Switch 02 (SP No. 1-105-003)			
No	Function	Comments		
0	G3 protocol mode	Change this bit to 1 only when the other end can only communicate with		
	used	machines that send T.30-standard frames only.		
	0: Standard and	1: Disables NSF/NSS signals (these are used in non-standard mode		
	non-standard	communication)		
	1: Standard only			
1-	Not used	Do not change the settings.		
6				
7	Short preamble	Refer to Appendix B in the Group 3 Facsimile Manual for details about		
	0: Disabled 1:	Short Preamble.		
	Enabled			

G3 :	G3 Switch 03 (SP No. 1-105-004)				
No	Function	Comments			
0	DIS detection number	0: The machine will hang up if it receives the same DIS frame			
	(Echo countermeasure)	twice.			
	0: 1	1: Before sending DCS, the machine will wait for the second			
	1: 2	DIS which is caused by echo on the line.			
1	Not Used	Do not change the settings.			
2	Not Used	Do not change the settings.			
3	ECM frame size	Keep this bit at "0" in most cases.			
	0: 256 bytes				
	1: 64 bytes				
4	CTC transmission conditions	0: When using ECM in non-standard (NSF/NSS) mode, the			
	0: After one PPR signal	machine sends a CTC to drop back the modem rate after			
	received	receiving a PPR, if the following condition is met in			
	1: After four PPR signals	communications at 14.4, 12.0, 9.6, and 7.2 kbps.			
	received (ITU-T standard)	√NTransmit≤NRe send			
		NTransmit- Number of transmitted frames			

		NResend- Number of frames to be retransmitted
		1: When using ECM, the machine sends a CTC to drop back
		the modem rate after receiving four PPRs.
		PPR, CTC: These are ECM protocol signals.
		This bit is not effective in V.34 communications.
5	Modem rate used for the next	1: The machine's TX modem rate will fall back before sending
	page after receiving a	the next page if a negative code is received. This bit is ignored
	negative code (RTN or PIN)	if ECM is being used.
	0: No change 1: Fallback	
6	Not used	Do not change the settings
7	Select detection of reverse	This switch is used to prevent reverse polarity in ringing on the
	polarity in ringing	phone line (applied to PSTN-G3 ringing). Do not change this
	0: Off	setting
	1: On	0: No detection
		1: Detection (Japan and Korea only)

G3 Switch 04 (SP No. 1-105-005)				
No	Function Comments			
0-	Training error	0 - F (Hex); 0 - 15 bits		
3	detection threshold	If the number of error bits in the received TCF is below this threshold,		
		the machine informs the sender that training has succeeded.		
4-	Not used	Do not change the settings.		
7				

G3 S	G3 Switch 05 (SP No. 1-105-006)				06)	
No	Function					Comments
0-	Initial Tx modem rate (kbps)			ate (kbp	os)	These bits set the initial starting modem rate for
3	Bit 3	Bit	Bit	Bit 0	kbps	transmission.
		2	1			Use the dedicated transmission parameters if you need to
	0	0	0	1	2.4	change this for specific receivers.
	0	0	1	0	4.8	If a modem rate 14.4 kbps or slower is selected, V.8
	0	0	1	1	7.2	protocol should be disabled manually.
	0	1	0	0	9.6	Cross reference
	0	1	0	1	12.0	V.8 protocol on/off - G3 switch 03, bit 2
	0	1	1	0	14.4	
	0	1	1	1	16.8	
	1	0	0	0	19.2	

		_				
	1	0	0	1	21.6	
	1	0	1	0	24.0	
	1	0	1	1	26.4	
	1	1	0	0	28.8	
	1	1	0	1	31.2	
	1	1	1	0	33.6	
	Other	setting	js - N	ot used		
4-	Initial r	noden	n type	e for 9.6	k or	These bits set the initial modern type for 9.6 and 7.2 kbps, if
5	7.2 kb <sub>l</sub>	os.				the initial modem rate is set at these speeds.
	Bit 5	Bi	t S	Setting		
		4				
	0	0	٧	′.29		
	0	1	٧	′.17		
	1	0	٧	′.34		
	1	1	١	lot used		
6-	Not us	ed				Do not change the settings.
7						

G3 5	G3 Switch 06 (SP No. 1-105-007)						
No	Function					Comments	
0-	Initial RX modem ra	te(kbp	os)			These bits set the initial starting modem rate for	
3	Bit 3	Bit	Bit	Bit	kbps	reception.	
		2	1	0		Use a lower setting if high speeds pose problems	
	0	0	0	1	2.4	during reception.	
	0	0	1	0	4.8	If a modem rate 14.4 kbps or slower is selected,	
	0	0	1	1	7.2	V.8 protocol should be disabled manually.	
	0	1	0	0	9.6	Cross reference	
	0	1	0	1	12.0	V.8 protocol on/off - G3 switch 03, bit2	
	0	1	1	0	14.4		
	0	1	1	1	16.8		
	1	0	0	0	19.2		
	1	0	0	1	21.6		
	1	0	1	0	24.0		
	1	0	1	1	26.4		
	1	1	0	0	28.8		
	1	1	0	1	31.2		
	1	1	1	0	33.6		
	Other settings - Not	used	•	•	•		

Modem types available for reception
 The setting of these bits is used to inform the transmitting terminal of the available modem type for the machine in receive mode.

If V.34 is not selected, V.8 protocol must be disabled manually.

Cross reference

V.8 protocol on/off - G3 switch 03, bit 2

Bit 7	Bit	Bit	Bit	Types
	6	5	4	
0	0	0	1	V.27ter
0	0	1	0	V.27ter, V.29
0	0	1	1	V.27ter, V.29, V.33
0	1	0	0	V.27ter, V.29, V.17
0	1	0	1	V.27ter, V.29, V.17, V.34

Other settings - Not used

G3 9	Switch	า 07	(SP	No. 1-105-0	008)
No	Fund	ction			Comments
0-	PSTN cable equalizer			equalizer	Use a higher setting if there is signal loss at higher frequencies
1	(TX mode: Internal)			ternal)	because of the length of wire between the modem and the telephone
	Bit	Bit	0	Setting	exchange.
	1				Use the dedicated transmission parameters for specific receivers.
	0	0		None	Also, try using the cable equalizer if one or more of the following
	0	1		Low	symptoms occurs.
	1	0		Medium	Communication error
	1	1		High	Modem rate fallback occurs frequently.
			•	<b>◆</b> Note	
					This setting is not effective in V.34 communications.
2-	PSTI	N cal	ole e	equalizer	Use a higher setting if there is signal loss at higher frequencies
3	(RX	mode	e: In	ternal)	because of the length of wire between the modem and the telephone
	Bit 3	ı	Bit	Setting	exchange.
		2	2		Also, try using the cable equalizer if one or more of the following
	0	(	)	None	symptoms occurs.
	0		1	Low	Communication error with error codes such as 0-20, 0-23, etc.
	1	(	)	Medium	Modem rate fallback occurs frequently.
	1		1	High	Note
			•	This setting is not effective in V.34 communications.	
4	PSTI	N cal	ole e	equalizer	Keep this bit at "1".
	(V.8/	V.17	RX	mode:	

	External)	
	0: Disabled	
	1: Enabled	
5	Not used	Do not change the settings.
6	Parameter selection for	0: This uses the fixed table in the ROM for dial tone detection.
	dial tone	1: This uses the specific parameter adjusted with SRAM (69ECBEH -
	detection	69ECDEH). Select this if the dial tone cannot be detected when the
	0: Normal parameter	"Normal parameter: 0" is selected.
	1: Specific parameter	
7	Not used	Do not change the settings.

G3 Switch 08 - Not used (do not change the settings)

G3 Switch 09 - Not used (do not change the settings)

G3 :	Switch	0A (SP	No. 1-105-01	11)
No	Function			Comments
0-	Maximum allowable			These bits set the acceptable modem carrier drop time.
1	carrier	drop d	uring image	Try a longer setting if error code 0-22 is frequent.
	data re	eceptio	n	
	Bit 1	Bit 0	Value	
			(ms)	
	0	0	200	
	0	1	400	
	1	0	800	
	1	1	Not used	
2	Select cancellation of		lation of	This switch setting determines if high-speed receiving ends if the
	high-speed RX if carrier			carrier signal is lost when receiving during non-ECM mode
	signal	lost wh	ile receiving	
	0: Off			
	1: On			
3	Not used			Do not change the settings
4	Maxim	num allo	owable	This bit set the maximum interval between EOL (end-of-line) signals
	frame	interva	l during	and the maximum interval between ECM frames from the other
	image	data re	eception.	end.
	0: 5 s 1: 13 s			Try using a longer setting if error code 0-21 is frequent.
5	Not us	sed		Do not change the settings.

6	Reconstruction time for	When the sending terminal is controlled by a computer, there may
	the first line in receive	be a delay in receiving page data after the local machine accepts
	mode	set-up data and sends CFR. This is outside the T.30
	0: 6 s 1: 12 s	recommendation. But, if this delay occurs, set this bit to 1 to give
		the sending machine more time to send data.
		Refer to error code 0-20.
		ITU-T T.30 recommendation: The first line should come within 5 s of
		CFR.
7	Not used	Do not change the settings.

G3 Switch 0B Not used (do not change the settings).				
G3 Switch 0C Not used (do not change the settings).				
G3 Switch 0D Not used (do not change the settings).				

G3 S	G3 Switch 0E (SP No. 1-105-015)					
No	Function	Comments				
0-	Set CNG send time i	end time interval				
7	Some machines on t	Some machines on the receiving side may not be able to automatically switch the 3-second				
	CNG interval.					
	High order bit	3000-2250ms: 3000-50xNms				
	3000 – 50 x Nms 0F (3000 ms) <= N <= FF (2250 ms)					
	Low order bit 00-0E(3000-3700ms: 3000+50xNms					
		3000 – 50 x Nms 0F (3000 ms) <= N <= 0F (3700 ms)				

G3 \$	Switch 0F (SP No. 1-105-016)	
No	Function	Comments
0	Alarm when an error occurred in	If the customer wants to hear an alarm after each error
	Phase C or later	communication, change this bit to "1".
	0: Disabled	
	1: Enabled	
1	Alarm when the handset is off-hook	If the customer wants to hear an alarm if the handset is
	at the end of communication	off-hook at the end of fax communication, change this bit
	0: Disabled	to "1".
	1: Enabled	
2-	Not used	Do not change these settings.
3		
4	Manual calibration setting	1: manually calibrates for communication with a line
	0: Off	whose current change occurs such as an optical fiber line.

	1: On	
5-	Not used	Do not change the settings.
7		

# **Bit Switches - 5**

#### 

• Do not adjust a bit switch or use a setting that is described as "Not used", as this may cause the machine to malfunction or to operate in a manner that is not accepted by local regulations. Such bits are for use only in other areas, such as Japan.

Default settings for bit switches are not listed in this manual. Refer to the System Parameter List printed by the machine.

#### **IP Fax Switches**

IP Fa	ax Switch 00 (SP No. 1-	111-001)
No.	Function	Comments
0	Not used	Do not change this setting.
1	IP Fax Transport	Selects TCP or UDP protocol for IP-Fax
	0: TCP, 1: UDP	
2	IP Fax single port	Selects single data port.
	selection	
	0: OFF, 1: ON	
	(enable)	
3	IP Fax double ports	Selects whether IP-Fax uses a double port.
	(single data port)	
	selection	
	0: OFF, 1: ON	
	(enable)	
4	IP Fax Gatekeeper	Enables/disables the gatekeeper for IP-Fax.
	0: OFF, 1: ON	
	(enable)	
5	IP Fax T30 bit signal	Reverses the T30 bit signal.
	reverse	
	0: LSB first, 1: MSB	
	first	
6	IP Fax max bit rate	When "0" is selected, the max bit rate does not affect the value of the
	setting	DIS/DCS.
	0: Not affected, 1:	When "1" is selected, the max bit rate affects the value of the
	Affected	DIS/DCS.
7	IP Fax received	When "0" is selected, fax data is received without checking the
	telephone number	telephone number.
	confirmation	When "1" is selected, fax data is received only when confirming that
	0: No confirmation, 1:	the telephone number from the sender matches the registered

Confirmation	telephone number in this machine. If this confirmation fails, the line is
	disconnected.

IP Fa	P Fax Switch 01 (SP No. 1-111-002)						
No.	Function			Commo	ents		
0-3	IP Fax delay l	level setting					
	Selects the a	cceptable delay	/ level.				
	Level 0 is the	highest quality	,				
	Default is "00	00" (level 0).					
	Bit 3	Bit 2	Bit 1		Bit 0		
	0	0	0		0	Level 0	
	0	0	0		1	Level 1	
	0	0	1		0	Level 2	
	0	0	1		1	Level 3	
4-7	IP Fax pream	ble wait time s	etting	Selects the preamble wait time.			
				[00 to 0	f]		
					There are 16 values in this 4-bit binary switch combination.		
					Waiting time: set value level x 100 ms		
					Max: 0f (1500 ms) Min: 00 (No wait time)		
				The def	fault is "0000" (00H).		

IP Fa	ax Switch 02 (SP No. 1-111-003)	
No.	Function	Comments
0	IP Fax bit signal reverse setting	When "0" is selected, the bit signal reverse method is
	0: Maker code setting	decided by the maker code.
	1: Internal bit switch setting	When "1" is selected, the bit signal reverse method is
		decided by the internal bit switch.
		When communicating between IP Fax devices, LSB first is
		selected.)
1	IP Fax transmission speed	Selects the transmit speed for IP Fax communication.
	setting	
	0: Modem speed	
	1: No limitation	
2	SIP transport setting	This bit switch sets the transport that has priority for
	0: TCP	receiving IP Fax data.
	1: UDP	This function is activated only when the sender has both
		TCP and UDP.
3	CCM connection	When "1" is selected, only the connection call message with

	0: No CCM connection	H.323 or no tunneled H.245 is transmitted via CCM.
	1: CCM connection	
4	Message reception selection	0: This answers the INVITE message from the SIP server
	from non-registered SIP server	not registered for the machine.
	0: Answer	1: This does not receive the INVITE message from the SIP
	1: Not answer	server not registered for the machine and send a refusal
		message.
5	ECM communication setting	0: This does not limit the type of the image compression
	0: No limit for image	with ECM communication.
	compression	1: When the other end machine is Ciscco, this permits the
	1: Limit for image compression	image compression other than JBIG or MMR with ECM
		communication.
6-7	Not used	Do not change these settings.

IP Fa	ax Switch 03 (SP No. 1-111-004)			
No.	Function	Comments		
0	Effective field limitation for G3	Limits the effective field for standard G3 function		
	standard function information	information.		
	0: OFF, 1: 4byte (DIS)			
1	Switching between G3 standard and	Enables/disables switching between G3 standard and		
	G3 non standard	G3 non-standard.		
	0: Enable switching			
	1: G3 standard only			
2	Not used	Do not change this setting.		
3	ECM frame size selection at	Selects the ECM frame size for sending.		
	transmitting			
	0: 256byte, 1: 64byte			
4	DIS detection times for echo	Sets the number of times for DIS to detect echoes.		
	prevention			
	0: 1 time, 1: 2 times			
5	CTC transmission selection	When "0" is selected, the transmission condition is		
	0: PPRx1	decided by error frame numbers.		
	1: PPRx4	When "1" is selected, the transmission condition is		
		based on the ITU-T method.		
6	Shift down setting at receiving	Selects whether to shift down when negative codes		
	negative code	are received.		
	0: OFF, 1: ON			
7	Not used	Do not change this setting.		

IP Fax	IP Fax Switch 04 (SP No. 1-111-005)				
No.	o. Function Comments				
0-3	TCF error threshold	Sets the TCF error threshold level. [00 to 0f]			
		The default is "1111" (0fH).			
4-7	Not used	Do not change these settings.			

IP Fax Switch 05 (SP No. 1-111-006)							
No.	Function					Comments	
0-3	Modem bi	it rate	setting for t	ransr	nission	Sets the modem bit rate for transmission. The	
	(kbps)					default is "0110" (14.4K bps).	
	Bit 3	Bit	Bit 1	Bit	kbps		
		2		0			
	0 0 0 0 0 0 1		0	1	2.4		
			1	4.8			
	0	0	1	1	7.2		
	0	1	0	0	9.6		
	0	1	0	1	12.0		
	0	1	1	0	14.4		
4-5	Modem se	etting	for transmis	ssion	•	Sets the modem type for transmission.	
	Bit 5	В	sit 4	٦	Types	The default is "00" (V29).	
	0	0		١	/29		
	0	1 V17		/17			
	1	0	0		Not used		
	1	1		Not used			
6-7	Not used			•		Do not change these settings.	

IP Fa	IP Fax Switch 06 (SP No. 1-111-007)							
No.	Function			C	omments			
0-3	Modem bit rate setting for reception							
	Sets the mo	dem bit rate	for reception.	The de	fault is "0110" (14.4K bps).			
4-7	Modem setting for reception							
	Sets the mo	dem type for	reception. Th	e defau	ılt is "0100" (V27ter, V29, V17).			
	Bit 7	Bit 6	Bit 5	Bit 4	Types			
	0	0	0	1	V.27ter			
	0	0	1	0	V.27ter, V.29			
	0	V.27ter, V.29, V.33						
	0 1 0 V.27ter, V.29, V.17/V.33							
	Other settin	gs - Not used						

IP Fa	ax Switch 07 (SP No. 1-111-008)	
No.	Function	Comments
0	TSI information	Adds or does not add TSI information to NSS(S).
	0: Not added, 1: Added	
1	DCN transmission setting at T1 timeout	Transmits or does not transmit DCN at T1 timeout.
	0: Not transmitted	
	1: Transmitted	
2	Not used	Do not change this setting.
3	Hang up setting at DIS reception disabled	Sets whether the machine disconnects after DIS
	0: No hang up	reception.
	1: Hang up after transmitting DCN	
4	Number of times for training	Selects the number of times training is done at the
	0: 1 time, 1: 2 times	same bit rate.
5	Space CSI transmission setting at no CSI	When "0" is selected, frame data is enabled.
	registration	When "1" is selected, the transmitted data is all
	0: Not transmitted	spaces.
	1: Transmitted	
6-7	Not used	Do not change these settings.

IP Fa	IP Fax Switch 08 (SP No. 1-111-009)						
No.	Function			Comments			
0-1	T1 time	er adjus	tment	Adjusts the T1 timer.			
	Bit 1	Bit 0		The default is "00" (35 seconds).			
	0	0	35 s				
	0	1	40 s				
	1	0	50 s				
	1	1	60 s				
2-3	T4 time	er adjus	tment	Adjust the T4 timer.			
	Bit 3	Bit 2		The default is "00" (3 seconds).			
	0	0	3 s				
	0	1	3.5				
			s				
	1	0	4 s				
	1	1	5 s				
4-5	T0 timer adjustment		tment	Adjusts the fail safe timer. This timer sets the interval between "setup"			
	Bit 5	Bit 4		data transmission and T.38 phase decision. If your destination return is			
	0	0	75 s	late on the network or G3 fax return is late, adjust the longer interval			

	0	1	120	timer.
			s	The default is "00" (75 seconds).
	1	0	180	
			s	
	1	1	240	
			s	
6-7	Not used Do			Do not change these settings.

IP Fa	ax Switch	09 (SP N	o. 1-111-010)	
No.	Functio	n		Comments
0	Network I/F setting for SIP			Selects the connection type (IPV4 or IPV6) to connect to the
	connection			SIP server.
	0: IPv4			
	1: IPv6.			
1	Network	I/F setting	for Fax	0: The I/F setting for fax communication follows the setting
	commun	nication		for SIP server connection.
	0: Same	setting as	SIP server	1: The negotiation between the SIP server and the device
	connecti	ion		decides whether IPv4 or IPv6 is used for the I/F setting for
	1: Auton	natic settin	g	fax communication.
2	Record-	route settii	ng	0: Disables the record-route function of the SIP server.
	0: Disab	le		1: Enables the record-route function of the SIP server.
	1: Enabl	е		
3-4	re-INVIT	E transmi	ssion delay	This changes the interval for transmit re-INVITE after
	timer se	tting		receiving the ACK message transmitted by T.38 device.
	Bit 4	Bit 3		
	0	0	No delay	
	0	1	1 sec	
	1	0	2 sec	
	1	1	3 sec	
5	SIP-IPFAX: Adding vender			0: Use this setting normally.
	informat	ion selecti	on	1: This setting is used only when a customer wants to
	0: Declare T38VendorInfo=RICOH			connect the machine with SIP server + VOIP-GW provided
				by AVAYA Inc.
	1: Not de	eclare		
	T38Vend	dorInfo=RI	СОН	
6-7	Not used	d.		Do not change these settings.

IP Fax Switch 0A - Not used (do not change the settings)

IP Fax Switch 0B - Not used (do not change the settings)
IP Fax Switch 0C - Not used (do not change the settings)
IP Fax Switch 0D - Not used (do not change the settings)

IP Fa	IP Fax Switch 0E (SP No. 1-111-013)						
No.	Function	Comments					
0-1	SIP: IP-FAX port mode	Switch the port mode for IP-FAX (T38 transport: UDP) at SIP call					
	(UDP)	control.					
	00: 3 port mode						
	01: 2 port mode						
	10: 1 port mode						
2-3	SIP: IP-FAX port mode	Switch the port mode for IP-FAX (T38 transport: TCP) at SIP call					
	(TCP)	control.					
	00: 3 port mode						
	01: 2 port mode						
	10: 1 port mode						
4-7	Not used.	Do not change these settings.					

# **NCU Parameters**

The following tables give the RAM addresses and the parameter calculation units that the machine uses for ringing signal detection and automatic dialing. The factory settings for each country are also given. Most of these must be changed by RAM read/write (SP2-102), but some can be changed using NCU Parameter programming (SP2-103); if SP2-103 can be used, this will be indicated in the Remarks column. The RAM is programmed in hex code unless (BCD) is included in the Unit column.



• The following addresses describe settings for the standard NCU.

#	RAM	Function	Remarks
	Addr.		
CC	680500	Country/Area code for	Use the Hex value to program the country/area code
		NCU parameters	directly into this address, or use the decimal value to
			program it using SP2-103-001

# **Country Code List**

Country	Decimal	Hex	Country	Decimal	Hex
/Area			/Area		
France	00	00	Asia	18	12
Germany	01	01	Japan	19	13
UK	02	02	Hong Kong	20	14
Italy	03	03	South Africa	21	15
Austria	04	04	Australia	22	16
Belgium	05	05	New Zealand	26	17
Denmark	06	06	Singapore	24	18
Finland	07	07	Malaysia	25	19
Ireland	08	08	China	26	1A
Norway	09	09	Taiwan	27	1B
Sweden	10	0A	Korea	28	1C
Switzerland	11	0B	Brazil	29	1D

#	RAM	Function	Unit	Remarks
	Addr.			
01	6805B4	PSTN: Tx level from the modem	-N – 3	SP2-103-002
			dBm	
02	680572	Acceptable ringing signal frequency:	1000/ N	SP2-103-003
		range 1, upper limit	(Hz).	
03	680573	Acceptable ringing signal frequency:		SP2-103-004
		range 1, lower limit		

range 2, upper limit  05 680575 Acceptable ringing signal frequency: range 2, lower limit  06 680576 Number of rings until a call is detected  1 SP2-103-006  SP2-103-007 The setting must not be zero.  07 680577 Minimum required length of the first 20 ms See Note B.	).
range 2, lower limit  06 680576 Number of rings until a call is 1 SP2-103-007 detected The setting must not be zero.	).
06 680576 Number of rings until a call is 1 SP2-103-007 The setting must not be zero.	).
detected The setting must not be zero.	).
	).
07 680577 Minimum required length of the first 20 ms See Note B.	
ring SP2-103-008	
08         680578         Minimum required length of the         20 ms         SP2-103-009	
second and subsequent rings	
09 680579 Ringing signal detection reset time 20 ms SP2-103-010	
(LOW)	
10 68057A Ringing signal detection reset time SP2-103-011	
(HIGH)	
11 68054A Time between opening or closing the 1 ms See Notes A, D and E. SP2-10	103-
DO relay and opening the OHDI relay 012	
12 68054B Break time for pulse dialing 1 ms See Note A.	
SP2-103-013	
13 68054C Make time for pulse dialing 1 ms See Note A.	
SP2-103-014	
14 68054D Time between final OHDI relay 1 ms EU only.	
closure and DO relay opening or SP2-103-015	
closing See Notes A, D and E.	
15 68054E Minimum pause between dialed digits 20 ms See Note A and E. SP2-103-01	016
(pulse dial mode)	
16 68054F Time waited when a pause is entered SP2-103-017	
at the operation panel See Note A.	
17 680550 DTMF tone on time 1 ms SP2-103-018	
18         680551         DTMF tone off time         SP2-103-019	
19 680552 Tone attenuation level of DTMF -N x 0.5 SP2-103-020	
signals while dialing —3.5 dBm See Note C.	
20 680553 Tone attenuation value difference -dBm x SP2-103-021	
between high frequency tone and low 0.5 The setting must be less than -	n –
frequency tone in DTMF signals 5dBm, and should not exceed	ed :
the setting at 680552h above.	∍.
See Note C.	
21 680554 PSTN: DTMF tone attenuation level -N x 0.5 SP2-103-022	
after dialling –3.5 dBm See Note C.	

22	680555	ISDN: DTMF tone attenuation level	-dBm x	See Note C
		after dialling	0.5	

# **U** Note

- A: Pulse dial parameters (addresses 68054A to 68054F) are the values for 10 pps. If 20 pps is used, the machine automatically compensates.
- B: The first ring may not be detected until 1 to 2.5 wavelengths after the time specified by this parameter.
- C: The calculated level must be between 0 and 10.

The attenuation levels calculated from RAM data are:

High frequency tone:

- 0.5 x N680552/680554-3.5 dBm
- 0.5 x N680555 dBm

Low frequency tone:

- 0.5 x (N680552/680554 + N680553) -3.5 dBm
- 0.5 x (N680555 + N680553) dBm
- \*Note: N680552, for example, means the value stored in address 680552(H)
- D: 68054A: Europe Between Ds opening and Di opening, France Between Ds closing and Di opening
  - 68054D: Europe Between Ds closing and Di closing, France Between Ds opening and Di closing
- E: 68054A, 68054D, 68054E: The actual inter-digit pause (pulse dial mode) is the sum of the period specified by the RAM addresses 68054A, 68054D, and 68054E.

# **Dedicated Transmission Parameters**

There are two sets of transmission parameters: Fax and E-mail

Each Quick Dial Key and Speed Dial Code has eight bytes of programmable parameters allocated to it. If transmissions to a particular machine often experience problems, store that terminal's fax number as a Quick Dial or Speed Dial, and adjust the parameters allocated to that number.

The programming procedure will be explained first. Then, the eight bytes will be described.

# **Programming Procedure**

- 1. Set the bit 0 of System Bit Switch 00 to 1.
- 2. Press the [Address Book Management] icon in the home screen.
- 3. Select the address book that you want to program.
- 4. For the fax parameter, select [Fax Dest.], for the E-mail parameter, select [Email], then press [Start].
- 5. The settings for the switch 00 are now displayed. Press the bit number that you wish to change.



- To scroll through the parameter switches, press [Next] or [Previous].
- 6. After the setting is changed, press [OK].
- 7. After finishing, reset bit 0 of System Bit Switch 00 to 0.

#### **Parameters**

# **Fax Parameters**

The initial settings of the following fax parameters are all FF (H) - all the parameters are disabled.

#### Switch 00

## **FUNCTION AND COMMENTS**

ITU-T T1 time (for PSTN G3 mode)

If the connection time to a particular terminal is longer than the NCU parameter setting, adjust this byte. The T1 time is the value stored in this byte (in hex code), multiplied by 1 second.

#### Range:

0 to 120 s (00h to 78h)

FFh - The local NCU parameter factory setting is used.

Do not program a value between 79h and FEh.

Swi	Switch 01								
No	FUNCTION						COMMENTS		
0-	TX level			If communication with a particular remote terminal					
4	Bit4	Bit3	Bit2	Bit1	Bit0		often contains errors, the signal level may be		
	0	0	0	0	0	0	inappropriate. Adjust the TX level for communications		

0	0	0	0	1	<b>–1</b>
0	0	0	1	0	-2
0	0	0	1	1	-3
0	0	1	0	0	<b>-4</b>
$\rightarrow$	$\rightarrow$	$\rightarrow$	$\rightarrow$	$\rightarrow$	<b>→</b>
0	1	1	1	1	<b>–15</b>
1	1	1	1	1	Disabled

with that terminal until the results are better.

If the setting is "Disabled", the NCU parameter 01 setting is used.

# **U** Note

 Do not use settings other than listed on the left.

5- Cable equalizer

7 Bit 7: 0, Bit 6: 0, Bit 5: 0 = None

Bit 7: 0, Bit 6: 0, Bit 5: 1 = Low

Bit 7: 0, Bit 6: 1, Bit 5: 0 = Medium

Bit 7: 0, Bit 6: 1, Bit 5: 1 = High

Bit 7: 1, Bit 6: 1, Bit 5: 1 = Disabled

Use a higher setting if there is signal loss at higher frequencies because of the length of wire between the modem and the telephone exchange when calling the number stored in this Quick/Speed Dial.

Also, try using the cable equalizer if one or more of the following symptoms occurs.

Communication error with error codes such as 0-20, 0-23, etc.

Modem rate fallback occurs frequently.



 Do not use settings other than listed on the left.

If the setting is "Disabled", the bit switch setting is used.

Swi	tch 02					
No	FUN	CTION	l			COMMENTS
0-	Initia	ITX m	odem	rate		If training with a particular remote terminal always takes too
3	Bit3	Bit2	Bit1	Bit0	bps	long, the initial modem rate may be too high. Reduce the
	0	0	0	0	Not	initial TX modem rate using these bits.
					used	For the settings 14.4 or kbps slower, Switch 04 bit 4 must
	0	0	0	1	2400	be changed to 0.
	0	0	1	0	4800	<b>↓</b> Note
	0	0	1	1	7200	Do not use settings other than listed on the left. If
	0	1	0	0	9600	the setting is "Disabled", the bit switch setting is
	0	1	0	1	12000	used.
	0	1	1	0	14400	
	0	1	1	1	16800	
	1	0	0	0	19200	
	1	0	0	1	21600	
	1	0	1	0	24000	

	1	0	1	1	26400	
	1	1	0	0	28800	
	1	1	0	1	31200	
	1	1	1	0	33600	
	1	1	1	1	Disabled	
	Othe	r settii	ngs: <b>N</b>	ot use	d	
4-	4- Not used					Do not change the settings.
7						

Swi	tch 03	
No	FUNCTION	COMMENTS
0-	Inch-mm conversion	If "inch only" is selected on the machine uses inch-based resolutions
1	before TX	for scanning, the printed copy may be slightly distorted at the other
	Bit 1: 0, Bit 0: 0	end if that machine uses mm-based resolutions.
	= Inch-mm conversion	If the setting is "Inch-mm conversion available ", Inch-mm conversion
	available	become effective to the special senders.
	Bit 1: 0, Bit 0: 1 = Inch	If the setting is "Disabled", the bit switch setting is used.
	only	
	Bit 1: 1, Bit 0: 0 = Not	
	used	
	Bit 1: 1, Bit 0: 1 =	
	Disabled	
2-	DIS/NSF detection	(0, 1): Use this setting if echoes on the line are interfering with the set-
3	method	up protocol at the start of transmission. The machine will then wait for
	Bit 3: 0, Bit 2: 0	the second DIS or NSF before sending DCS or NSS.
	= First DIS or NSF	If the setting is "Disabled", the bit switch setting is used.
	Bit 3: 0, Bit 2: 1	
	= Second DIS or NSF	
	Bit 3: 1, Bit 2: 0 = Not	
	used	
	Bit 3: 1, Bit 2: 1 =	
	Disabled	
4	V.8 protocol	If transmissions to a specific destination always end at a lower modem
	0: Off	rate (14,400 bps or lower), disable V.8 protocol so as not to use V.34
	1: Disabled	protocol.
		0: V.34 communication will not be possible.
		If the setting is "Disabled", the bit switch setting is used.
5	Compression modes	This bit determines the capabilities that are informed to the other

	available in transmit	terminal during transmission.	
	mode	If the setting is "Disabled", the bit switch setting is used.	
	0: MH only		
	1: Disabled		
6-	ECM during	For example, if ECM is switched on but is not wanted when sending to	
7	transmission	a particular terminal, use the (0, 0) setting.	
	Bit 7: 0, Bit 6: 0 = Off	Note	
	Bit 7: 0, Bit 6: 1 = On	V.8/V.34 protocol and JBIG compression are automatically	
	Bit 7: 1, Bit 6: 0 = Not	disabled if ECM is disabled.	
	used	If the setting is "Disabled", the bit switch setting is used.	
	Bit 7: 1, Bit 6: 1 =		
	Disabled		

Switch 04 - Not used (do not change the settings)
Switch 05 - Not used (do not change the settings)
Switch 06 - Not used (do not change the settings)
Switch 07 - Not used (do not change the settings)
Switch 08 - Not used (do not change the settings)
Switch 09 - Not used (do not change the settings)

# E-mail Parameters

The initial settings of the following e-mail parameters are all "0" (all parameters disabled).

Swi	tch 00	
No	FUNCTION	COMMENTS
0	MH Compression mode for e-mail	Switches MH compression on and off for files attached
	attachments	to e-mails for sending.
	<b>0</b> : Off	
	1: On	
1	MR Compression mode for e-mail	Switches MR compression on and off for files attached
	attachments	to e-mails for sending.
	<b>0</b> : Off	
	1: On	
2	MMR Compression mode for e-mail	Switches MMR compression on and off for files attached
	attachments	to e-mails for sending.
	<b>0</b> : Off	
	1: On	
3-	Not used	Do not change these settings.
6		
7	Designates the bits to reference for	The "0" selection (default) references the settings for

compression method of e-mail	Bits 00, 01, 02 above. The "1" selection ignores the
attachments	selections of Bits 00, 01, 02.
0: Registered (Bit 0 to 6)	
1: No registration.	

Swi	tch 01	
No	FUNCTION	COMMENTS
0	Original width of e-mail attachment:	Sets the original width of the e-mail attachment as A4.
	A4	
	<b>0</b> : Off	
	1: On	
1	Original width of e-mail attachment:	Sets the original width of the e-mail attachment as B4.
	B4	
	<b>0</b> : Off	
	1: On	
2	Original width of e-mail attachment:	Sets the original width of the e-mail attachment as A3.
	A3	
	<b>0</b> : Off	
	1: On	
3-	Not used	Do not change these settings.
6		
7	Designates the bits to reference for	The "0" selection (default) references the settings for Bits
	original size of e-mail attachments	00, 01, 02 above. The "1" selection ignores the selections
	<b>0</b> : Registered (Bit 0 to 6)	of Bit 00.
	1: No registration.	

Switch 02		
No	FUNCTION	COMMENTS
0	Line resolution of e-mail	Sets the line resolution of the e-mail attachment as 200
	attachment: 200 x 100	x100.
	<b>0</b> : Off	
	1: On	
1	Line resolution of e-mail	Sets the line resolution of the e-mail attachment as 200 x
	attachment: 200 x 200	200.
	<b>0</b> : Off	
	1: On	
2	Line resolution of e-mail	Sets the line resolution of the e-mail attachment as 200 x
	attachment: 200 x 400	400.

	0: Off	
	1: On	
3	Not used	Do not change these settings.
4	Line resolution of e-mail	Sets the line resolution of the e-mail attachment as 400 x
	attachment: 400 x 400	400.
	<b>0</b> : Off	
	1: On	
5-	Not used	Do not change these settings.
5- 6	Not used	Do not change these settings.
_	Not used  Designates the bits to reference	Do not change these settings.  The "0" selection (default) references the settings for Bits
6		
6	Designates the bits to reference	The "0" selection (default) references the settings for Bits
6	Designates the bits to reference for original size of e-mail	The "0" selection (default) references the settings for Bits 00, 01, 02, 04 above. The "1" selection ignores the

# Switch 03 - Not used (do not change the settings)

Switch 04		
No	FUNCTION	COMMENTS
0	Full mode address	If the other ends have the addresses, which have the full mode function
	selection	flag ("0"), this machine determines them as full mode standard machines.
	0: Full mode	This machine attaches the "demand of reception confirmation" to a
	address	message when transmitting.
	1: No full mode	This machine updates the reception capability to the address book
	(simple mode)	when receiving.
1-	Not used	Do not change these settings.
7		

Swit	tch 05	
No	FUNCTION	COMMENTS
0	Directr transmission selection to SMTP	Allows or does not allow the direct transmission to
	server	SMTP server.
	0: ON	
	1: OFF	
1-	Not used	Do not change these settings.
7		

# Switch 06 - Not used (do not change the settings)

Switch 07 - Not used (do not change the settings)
Switch 08 - Not used (do not change the settings)
Switch 09 - Not used (do not change the settings)

# Service RAM Addresses

#### Service RAM Addresses



Do not change the settings that are marked as "Not used" or "Read only."

680001 to 680004(H) - ROM version (Read only)

680001(H) - Revision number (BCD)

680002(H) - Year (BCD)

680003(H) - Month (BCD)

680004(H) - Day (BCD)

**680006 to 680015(H)** – Machine's serial number (16 digits - ASCII)

680016(H) - Language code

0: Japanese, 1: UK English, 2: US English, 3: French, 4: German, 5: Spanish, 6: Italian, 7: Dutch, 8:

Swedish, 9: Norwegian, 10: Danish, 11: Finnish, 12: Czech, 13: Hungarian, 14: Polish, 15: Portuguese,

16: Russian, 17: Traditional Chinese, 18: Simplified Chinese, 19: Korean

680018(H) - Total program checksum (low)

**680019(H)** - Total program checksum (high)

680020 to 68003F(H) - System bit switches

680050 to 68005F(H) - Printer bit switches

680060 to 68007F(H) - Communication bit switches

680080 to 68008F(H) - G3 bit switches

680090 to 68009F(H) - G3-2 bit switches: Not used

6800A0 to 6800AF(H) - G3-3 bit switches: Not used

6800D0(H) - User parameter switch 00 (SWUER 00): Not used

6800D1(H) - User parameter switch 01 (SWUSR\_01): Not used

6800D2(H) - User parameter switch 02 (SWUSR 02)

Bit 0: Forwarding mark printing on forwarded messages 0: Disabled, 1: Enabled

Bit 1: Center mark printing on received copies

(This switch is not printed on the user parameter list.)

0: Disabled, 1: Enabled

Bit 2: Reception time printing

(This switch is not printed on the user parameter list.)

0: Disabled, 1: Enabled

Bit 3: TSI print on received messages 0: Disabled, 1: Enabled

Bit 4: Checkered mark printing

(This switch is not printed on the user parameter list.)

0: Disabled, 1: Enabled

Bit 5: Not used

Bit 6: Not used

#### Bit 7: Not used

# 6800D3(H) - User parameter switch 03 (SWUSR\_03: Automatic report printout)

Bit 0: Transmission result report (memory transmissions) 0: Off, 1: On

Bit 1: Not used

Bit 2: Memory storage report 0: Off, 1: On

Bit 3: Polling reserve report (polling reception) 0: Off, 1: On

Bit 4: Polling result report (polling reception) 0: Off, 1: On

Bit 5: Transmission result report (immediate transmissions) 0: Off, 1: On

Bit 6: Not used

Bit 7: Journal 0: Off, 1: On

# 6800D4(H) - User parameter switch 04 (SWUSR\_04: Automatic report printout)

Bit 0: Not used

Bit 1: Automatic communication failure report and transfer result report output 0: Off, 1: On

Bits 2 to 3: Not used

Bit 4: Indicates the parties 0: Not indicated, 1: Indicated

Bit 5: Include sender's name on reports 0: Off, 1: On

Bit 6: Not used

Bit 7: Inclusion of a sample image on reports 0: Off, 1: On

# 6800D5(H) - User parameter switch 05 (SWUSR\_05)

Bit 0: Substitute reception when the base copier is in an SC condition

0: Enabled, 1: Disabled

Bits 1 and 2: Condition for substitute RX when the machine cannot print messages (Paper end, toner end, jam, and during night mode)

Bit 2: 0, Bit 1: 0 = The machine receives all the fax messages.

Bit 2: 0, Bit 1: 1 = The machine receives the fax messages with RTI or CSI.

Bit 2: 1, Bit 1: 0 = The machine receives the fax messages with the same ID code.

Bit 2: 1, Bit 1: 1 = The machine does not receive anything.

Bit 3: Not used

Bit 4: Not used

Bit 5: Just size printing 0: Off, 1: On

Bit 6: Not used

Bit 7: Add paper display when a cassette is empty 0: Off, 1: On

# 6800D6(H) - User parameter switch 06 (SWUSR\_06)

Bit 0: Specify the order of the information shown under "Destination" in the Journal, the Immediate TX Result Report, and on the [Transmission File Status] screen for fax transmission.

Bit 1: V8 protocol (G3-1: Super G3) 0: Off, 1: On

Bit 2: V8 protocol (G3-2: Super G3) 0: Off, 1: On

Bit 3: V8 protocol (G3-3: Super G3) 0: Off, 1: On

# 6800D7(H) - User parameter switch 07 (SWUSR\_07)

Bit 0 Ringing 0: Off, 1: On

Bit1: Automatic answering message 0: Off, 1: On

Bit 2: Parallel memory transmission 0: Off, 1: On

Bits 3 and 4: Not used

Bit 5: Remote control 0: Off, 1: On

Bits 6 and 7: Not used

#### 6800D8(H) - User parameter switch 08 (SWUSR\_08)

Bits 0 and 1: Not used.

Bit 2: Authorized reception

0: Only faxes from senders whose RTIs/CSIs are specified for this feature are accepted.

1: Only faxes from senders whose RTIs/CSIs are not specified for this feature are accepted.

Bits 3 to 7: Not used.

## 6800D9(H) - User parameter switch 09 (SWUSR\_09): Not used

## 6800DA(H) - User parameter switch 10 (SWUSR\_0A)

Bits 0 to 2: Not used

Bit 3: Page reduction 0: Off, 1: On

Bits 4 and 5: Not used

Bit 6: Use both e-mail notification and printed reports to confirm the transmission results 0: Off, 1: On

Bit 7: Not used

# 6800DB(H) - User parameter switch 11 (SWUSR\_0B)

Bits 0 and 1: Not used

Bit 2: White original detection 0: Off, 1: On (alarm and alert message on the LCD)

Bit 3: Receive rejection for 1300 Hz transmission 0: Off (receive), 1: On (not receive)

Bit 5: Not used

Bit 6: Printout of messages received while acting as a forwarding station 0: Off, 1: On

Bit 7: Not used

6800DC(H) - User parameter switch 12 (SWUSR\_0C): Not used

6800DD(H) - User parameter switch 13 (SWUSR 0D): Not used

6800DE(H) - User parameter switch 14 (SWUSR\_0E)

Bit 0: Message printout while the machine is in Night Printing mode 0: On, 1: Off

Bit 1: Maximum document length detection 0: Double letter, 1: Longer than double-letter (well log) – up

to 1,200 mm

Bit 2: Not used

Bit 3: Fax mode settings, such as resolution, before a mode key (Copy/Fax/Printer/Scanner) is pressed

0: Not cleared, 1: Cleared

Bits 4 to 6: Not used

Bit 7: Not used

#### 6800DF(H) - User parameter switch 15 (SWUSR\_0F)

(This switch is not printed on the user parameter list.)

Bits 0, 1 and 2: Cassette for fax printout

Bit 2: 0, Bit 1: 0, Bit 0: 1 = 1st paper feed station

Bit 2: 0, Bit 1: 1, Bit 0: 0 = 2nd paper feed station

Bit 2: 0, Bit 1: 1, Bit 0: 1 = 3rd paper feed station

Bit 2: 1, Bit 1: 0, Bit 0: 0 = 4th paper feed station

Bit 2: 1, Bit 1: 0, Bit 0: 1 = LCT

Other settings Not used

Bits 3 and 4: Not used

Bit 5: Using the cassette specified by bits 0, 1 and 2 above only 0: On, 1: Off

Bits 6 and 7: Not used

#### 6800E0(H) - User parameter switch 16 (SWUSR 10)

(This switch is not printed on the user parameter list.)

Bits 0 and 1: Not used

Bit 2: Paper size selection priority for an A4 size fax message when A4/LT size paper is not available. 0:

A3 has priority, 1: B4 has priority

Bits 3 to 7: Not used

# 6800E1(H) - User parameter switch 17 (SWUSR\_11)

Bit 0: Not used

Bit 1: Not used

Bit 2: Inclusion of the "Add" button when a sequence of Quick/Speed dials is selected for broadcasting

0: Not needed, 1: Needed

Bits 3 to 6: Not used

Bit 7: Press "Start" key without an original when using the on hook dial or the external telephone,

0: displays "Cannot detect original size". 1: Receives fax messages.

# 6800E2(H) - User parameter switch 18 (SWUSR\_12)

Bit 0: TTI date 0: Off, 1: On

Bit 1: TTI sender 0: Off, 1: On
Bit 2: TTI file number 0: Off, 1: On
Bit 3: TTI page number 0: Off, 1: On

Bits 4 to 6: Not used

Bit 7: Japan only

#### 6800E3(H) - User parameter switch 19 (SWUSR\_13)

Bit 0: Not used

Bit 1: Journal format

0: The Journal is separated into transmissions and receptions

1: The Journal is separated into G3-1, G3-2, and G3-3 communications

Bit 2: Not used

Bit 3: 90° image rotation during B5 portrait TX (This switch is not printed on the user parameter list.) 0:

Off, 1: On

Bit 4: Reduction of sample images on reports to 50% in the main scan and sub-scan directions. (This switch is not printed on the user parameter list.) 0: Technician adjustment (printer switch 0E bits 3 and 4), 1: 50% reduction

Bit 5: Use of A5 size paper for reports (This switch is not printed on the user parameter list.) 0: Off, 1: On

Bits 6 and 7: Not used

## 6800E4(H) - User parameter switch 20 (SWUSR\_14)

Bit 0: Automatic printing of the LAN fax result report 0: Off, 1: On

Bit 1: Not used.

Bits 2 to 5: Store documents in memory, which could not be printed from PC fax (LAN fax) driver

Bit 5	Bit 4	Bit 3	Bit 2	Setting
0	0	0	0	0 min.
0	0	0	1	1 min.
<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>	<b>→</b>
1	1	1	0	<b>↓</b> 14 min.

Bits 6 and 7: Not used.

# 6800E5(H) - User parameter switch 21 (SWUSR\_15)

Bit 0: Print results of sending reception notice request message 0: Disabled (print only when error occurs), 1: Enabled

Bit 1: Respond to e-mail reception acknowledgment request 0: Disabled, 1: Enabled

Bit 2: Not used

Bit 3: File format for forwarded folders 0: TIFF, 1: PDF

Bit 4: Transmit Journal by E-mail 0: Disabled, 1: Enabled

Bit 5: Not used

Bit 6: Network error display 0: Displayed, 1: Not displayed

Bit 7: Transmit error mail notification 0: Enabled, 1: Disabled

#### 6800E6(H) - User parameter switch 22 (SWUSR\_16)

(This switch is not printed on the user parameter list.)

Bit 0: Dial tone detection (PSTN 1) 0: Disabled, 1: Enabled

Bits 1 to 7: Not used

6800E7(H) - User parameter switch 23 (SWUSR 17): Not used

6800E8(H) - User parameter switch 24 (SWUSR\_18): Not used

6800E9(H) - User parameter switch 25 (SWUSR\_19)

Bit 0: Not used

Bit 1: Reception mode switch timer 0: Off, 1: On (switching Fax or Fax/Tel)

Bit 2: Mode priority switch 0: Fax first, 1: Tel first

Bit 3: Dial in function (Japan Only)

Bit 4: Do not Change this Bit.

Bits 5 to 7: Not used

6800EA(H) and 6800EB(H) - User parameter switches 26 and 27 (SWUSR 1A and 1B): Not used

6800EC(H) - User parameter switch 28(SWUSR\_1C): Not used

6800ED(H) - User parameter switch 29(SWUSR\_1D): Not used

6800EE(H) and 6800EF(H) - User parameter switches 30 and 31 (SWUSR\_1E and 1F): Not used 6800F0(H) - User parameter switch 32 (SWUSR\_20)

Bit 0: Quotation priority for a destination when there is no destination of the specified type

0: Paper output priority = Priority order: 1. IP-fax destination, 2. Fax Number, 3. E-mail address, 4. Folder

1: Electric putout order = Priority order: 1. E-mail address, 2. Folder, 3. IP-fax destination, 4. Fax number

Bits 1 to 7: Not used

6800F1(H) - User parameter switch 33 (SWUSR\_21): Not used

6800F2(H) - User parameter switch 34 (SWUSR\_22)

Bit 0: Gatekeeper server used with IP-Fax 0: Disabled, 1: Enabled

Bit 1: SIP server used with IP-Fax 0: Disabled, 1: Enabled

Bits 2 to 7: Not used

6800F3(H) - User parameter switch 35 (SWUSR\_23)

Redial interval when sending a backup file

6800F4(H) - User parameter switch 36 (SWUSR 24)

Maximum number of redials when sending a backup file

6800F5(H) - User parameter switch 37 (SWUSR 25)

Bit 0: Whether to stop sending a backup file if the destination folder becomes full while the machine is sending or waiting to send a fax or the backup file. 0: No, • 1: Yes

Bit 2 and 3: Backup file is printed along with the TX communication failure report when a backup file transmission failure occurs. 00: Do not print, 01: Print first page only, 10: Print whole file

Bit 4: Display the sender's information in the file name of documents that are forwarded to folder destinations. 0: Disabled, 1: Enabled

Bit 5: Limit the file names of documents that are forwarded to folder destinations to plain characters only. 0: Disabled, 1: Enabled

Bit 6: When using the remote fax function, the sub-machine beeps to let you know when it has printed a received document (If you specify "On", the machine will beep according to the setting of [Panel Key Sound] under [System Settings].) 0: On, 1: Off

Bit 7: Not used

# 6800F6(H) - User parameter switch 38 (SWUSR\_26)

Maximum number of transmissions the machine attempts before determining that a fax cannot be forwarded from a sender (including special senders) to a folder destination

#### 6800F7(H) - User parameter switch 39 (SWUSR\_27)

Interval (in minutes) between resend attempts after failing to forward a fax from a sender (including

special senders) to a folder destination

# 6800F8(H) - User parameter switch 40 (SWUSR\_28)

Bit 0: When memory space is insufficient, the machine prints and then deletes the oldest faxes, creating memory space for storage of new faxes. 0: Disabled, 1: Enabled

Bit 1 to 7: Not used

# 6800FD(H) - User parameter switch 45 (SWUSR\_2D)

Bit 0 and 1:

Bit 2: File format for files transmitted to e-mail addresses and folders registered as forwarding, destinations of backup file transmission, receivers for Personal Box, or end receivers for Transfer Box.

0: PDF 1: PDF/A

Bit 3:

Bit 4 to 7: Not used

680100 to 68010F(H) - G4 Parameter Switches - Not used

**680110 to 68012F(H) - G4 Internal Switches – Not used** 

**680130 to 68016F(H)** - Service Switches

680170 to 68017F(H) - IFAX Switches

680180 to 68018F(H) - IP-FAX Switches

680190 to 6801A3(H) - PSTN-1 RTI (Max. 20 characters - ASCII) - See the following note.

**6801A4 to 6801B7(H)** - PSTN-2 RTI (Max. 20 characters - ASCII)

**6801B8 to 6801CB(H)** - PSTN-3 RTI (Max. 20 characters - ASCII)

**6801CF to 68020E(H)** - TTI 1 (Max. 64 characters - ASCII) - See the following note.

68020F to 68024E(H) - TTI 2

68024F to 68028E(H) - TTI 3

68028F to 6802CE(H) - TTI 4

6802CF to 68030E(H) - TTI 5

68030F to 68034E(H) - TTI 6

68034F to 68038E(H) - TTI 7

68038F to 6803CE(H) - TTI 8

6803CF to 68040E(H) - TTI 9

68040F to 68044E(H) - TTI 10



• If the number of characters is less than the maximum (20 for RTI, 32 for TTI), add a stop code (00[H]) after the last character.

## 68044F(H)

Printing format for TTI 1

0: DOM (Japan), 1:EXP (Export)

#### 680450(H)

Printing format for TTI 2

0: DOM, 1: EXP

# 680451(H)

Printing format for TTI 3

0: DOM, 1:EXP

## 680452(H)

Printing format for TTI 4

0: DOM, 1:EXP

# 680453(H)

Printing format for TTI 5

0: DOM, 1:EXP

#### 680454(H)

Printing format for TTI 6

0: DOM, 1:EXP

# 680455(H)

Printing format for TTI 7

0: DOM, 1:EXP

#### 680456(H)

Printing format for TTI 8

0: DOM, 1:EXP

#### 680457(H)

Printing format for TTI 9

0: DOM, 1:EXP

# 680458(H)

Printing format for TTI 10

0: DOM, 1: EXP

**680459 to 68046C(H)** - PSTN-1 CSI (Max. 20 characters - ASCII)

**68046D to 680480(H)** - PSTN-2 CSI (Max.20 characters - ASCII)

**680481 to 680494(H)** - PSTN-3 CSI (Max.20 characters - ASCII)

680495(H) - Number of PSTN-1 CSI characters (Hex)

**680496(H)** - Number of PSTN-2 CSI characters (Hex)

**680497(H)** - Number of PSTN-3 CSI characters (Hex)

6804C6(H) - Memory Lock ID (BCD)

**6804D2 to 6804D9(H)** - Last power off time (Read only)

6804D2(H) - 01(H) - 24-hour clock, 00(H) - 12-hour clock (AM), 02(H) - 12-hour clock (PM)

6804D3(H) - Year (BCD)

6804D4(H) - Month (BCD)

6804D5(H) - Day (BCD)

6804D6 (H) - Hour

6804D7 (H) – Minute

6804D8(H) - Second

```
6804D8 (H) - 00: Monday, 01: Tuesday, 02: Wednesday, ///, 06: Sunday
6804E6(H) - Optional equipment (Read only – Do not change the settings)
Bit 0: Page Memory
                        0: Not installed, 1: Installed
Bit 1: SAF Memory (4M) 0: Not installed, 1: Installed
Bit 2: SAF Memory
                        0: Not installed, 1: Installed
Bits 3 to 7; Not used
6804E7(H) - Optional equipment (Read only – Do not change the settings)
Bits 0 to 3: Not used
Bit 4: G3-2 0: Not installed, 1: Installed
Bit 5: G3-3 0: Not installed, 1: Installed
Bit 6 and 7: Not used
6804EE(H) - Machine code (Check ram 3)
680500(H) - Start address of G3 table for G3-1
680600(H) - Start address of G3 table for G3-2
680700(H) - Start address of G3 table for G3-3
680800 to 68081F(H) - Service station's fax number (SP3-101)
680820 to 680829(H) - Own fax PABX extension number - Not used
68082A to 680833(H) - Own fax number (PSTN) - Not used
680834 to 680847(H) - Own fax number (ISDN G4) - Not used
680848 to 680853(H) - The first subscriber number (ISDN G3) - Not used
680854 to 68085F(H) - The second subscriber number (ISDN G3) - Not used
680860 to 68086B(H) - The first subscriber number (ISDN G4) - Not used
68086C to 680877(H) - The second subscriber number (ISDN G4) - Not used
6808A0 to 6808B7(H) - G4TID registered information (Max.24 characters - ASCII)
6808B8 to 6808CB(H) - ISDN CSI (Max.20 characters - ASCII)
6808CC(H) - Number of ISDN CSI characters (Hex)
6808D1 to 6808D4(H) - ISDN G3 sub address registered information
6808D5 to 6808D8(H) - G4 sub address registered information
6808DE to 6808E2 – Option G3 board (G3-2) ROM information (Read only)
6808DE(H) - Suffix (BCD)
6808DF(H) - Version (BCD)
6808E0(H) - Year (BCD)
6808E1(H) - Month (BCD)
6808E2(H) - Day (BCD)
6808E3 to 6808E7 – Option G3 board (G3-3) ROM information (Read only)
6808E3(H) - Suffix (BCD)
6808E4(H) - Version (BCD)
6808E5(H) - Year (BCD)
6808E6(H) - Month (BCD)
```

```
6808E7(H) - Day (BCD)
6808E8(H) - G3-1 Modem ROM version (Read only)
6808EA(H) - G3-2 Modem ROM version (Read only)
6808EC(H) - G3-3 Modem ROM version (Read only)
6808F8(H) - Number of multiple sets print (Read only)
68094E(H) - Time for economy transmission (Not used)
68094F(H) - Time for economy transmission (Not used)
68096A(H) - Transmission monitor volume 00 - 07(H)
68096B(H) - Reception monitor volume 00 - 07(H)
68096C(H) - On-hook monitor volume 00 - 07(H)
68096D(H) - Dialing monitor volume 00 - 07(H)
68096E(H) - Buzzer volume
                             00 - 07(H)
68096F(H) - Beeper volume
                              00 - 07(H)
680980(H) - Machine code (Check ram 4)
680982(H) - Machine serial number (ASCII)
687178 to 68717B(H) - Transmission counter (Max.24 characters - ASCII)
68717C to 68717F(H) - Reception counter (Max.24 characters - ASCII)
6871E8 to 6871EB(H) - Mail transmission counter (Max.24 characters - ASCII)
6871EC to 6871EF(H) - Mai reception counter (Max.24 characters - ASCII)
6A6DEE(H) to 6A70ED(H) - SIP server address (Read only)
6A6DEE(H) - Proxy server - Main (Max. 128 characters - ASCII)
6A6E6E(H) - Proxy server - Sub (Max. 128 characters - ASCII)
6A6EEE(H) - Redirect server - Main (Max. 128 characters - ASCII)
6A6F6E(H) - Redirect server - Sub (Max. 128 characters - ASCII)
6A6FEE(H) - Registrar server - Main (Max. 128 characters - ASCII)
6A706E(H) - Registrar server - Sub (Max. 128 characters - ASCII)
6A70EE(H) - Gatekeeper server address - Main (Max. 128 characters - ASCII)
6A716E(H) - Gatekeeper server address - Sub (Max. 128 characters - ASCII)
6A71EE(H) - Alias Number (Max. 128 characters - ASCII)
6A726E(H) - SIP user name (Max. 128 characters - ASCII)
6A72EE(H) - SIP digest authentication password (Max. 128 characters - ASCII)
6A736E(H) - Gateway address information (Max. 7100 characters - ASCII)
6A8F2A(H) - NGN initial setting method 0: Simple, 1: Manual
6A8F2B(H) - SIP digest authentication user name (Max. 128 characters - ASCII)
6A8FAB(H) - NGN-SIP domain name (Max. 64 characters - ASCII)
6A8FEB(H) - NGN-home gateway address (Max. 128 characters - ASCII)
6A906C(H) - Stand-by port number for H.323 connection
6A906E(H) - Stand-by port number for SIP connection
6A9070(H) - RAS port number
```

**6A9072(H)** - Gatekeeper port number

6A9074(H) - Port number of data waiting for T.38

6A9076(H) - Port number of SIP server

6A9078(H) - Priority for SIP and H.323 0: H.323, 1: SIP

6A9079(H) - SIP function 0: Disabled, 1: Enabled

6A907A(H) - H.323 function 0: Disabled, 1: Enabled

6A907B(H) - SIP digest authentication function 0: Disabled, 1: Enabled

6B3AE4(H) - 6B3B04 (H) - Dial tone detection parameter (Max. 11 x 3 lines)

This initializes following order. [0x04, 0x40, 0x03, 0x60, 0x64, 0xf4, 0x01,0x64, 0x04, 0xc8, 0x00]

**6B3AE4(H)** – Dial tone detection frequency – Upper limit (High)

Defaults: NA: 06, EU: 06, ASIA: 06

**6B3AE5(H)** – Dial tone detection frequency – Upper Limit (Low)

Defaults: NA: 50, EU: 50, ASIA: 50

**6B3AE6(H)** – Dial tone detection frequency – Lower Limit (High)

Defaults: NA: 03, EU: 02, ASIA: 02

**6B3AE7(H)** – Dial tone detection frequency – Lower Limit (Low)

Defaults: NA: 60, EU: 90, ASIA: 90

**6B3AE8(H)** –Dial tone detection waiting time (20 ms)

Defaults: NA: 64, EU 64, ASIA: 64

**6B3AE9 to 6B3AEA** – Dial tone detection monitoring time (20 ms)

# Defaults

Area	6B35A9	6B35AA
NA	F4	01
EU	F4	01
ASIA	F4	01

**6B3AEB(H)** – Dial tone detect judge time (20 ms)


Defaults: NA: 64, EU: 1B, ASIA: 32

**6B3AEC(H)** – Dial tone disconnect permission time (20 ms)

Defaults: NA: 11, EU: 0F, ASIA: 11

# **5. Detailed Section Descriptions**


# **Overview**

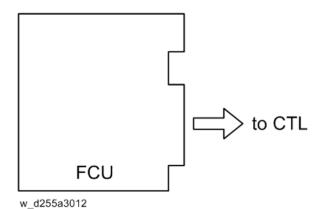

The FCU controls all the fax communications and fax features, in cooperation with the controller board. Also, the FCU contains the ROM, SRAM and NCU circuits.

# **Boards**

# **FCU**

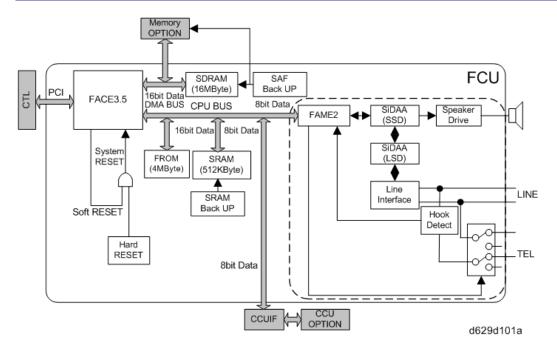

The FCU (Facsimile Control Unit) controls fax communications, the video interface to the base copier's engine, and all the fax options.

# FACE3.5 (Fax Application Control Engine)

- CPU
- Data compression and reconstruction (DCR)
- DMA control
- Clock generation
- DRAM backup control

# Modem (FAME2)

V.34, V33, V17, V.29, V.27ter, V.21, and V.8

# **DRAM**

The 16 MB of DRAM is shared as follows.

- SAF memory: 4MB
- Working memory: 4MB
- Page memory: 4MB
- The SAF memory is backed up by a rechargeable battery.

# SAF Memory Back-up

A rechargeable battery backs up the SAF memory (DRAM) for 12 hours.

# 5.Detailed Section Descriptions

# ROM

4 MB flash ROMs for system software storage

# **SRAM**

The 512 KB SRAM for system and user parameter storage is backed up by a lithium battery.

# SRAM Back-up

A lithium battery backs up the system parameters and programmed items in the SRAM, in case the base copier's main power switch is turned off.

#### **Switches**


Item	Description	
SW1	Switches the SRAM backup battery on/off.	

# CPU

This controls the energy-efficient operation of the FCU board.

# Video Data Path

# **Transmission**

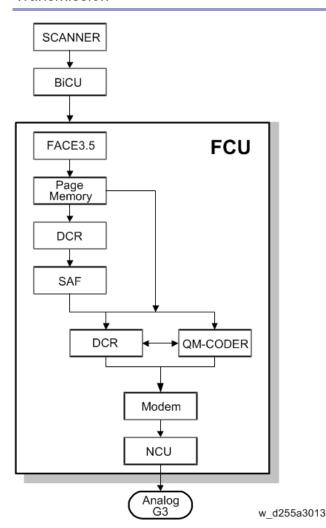

Memory Transmission and Parallel Memory Transmission

The base copier's scanner scans the original at the selected resolution in inch format. The BiCU processes the data and transfers it to the FCU.



 When scanning a fax original, the BiCU uses the MTF, independent dot erase and thresholding parameter settings programmed in the fax unit's scanner bit switches, not the copier's SP modes.

Then, the FCU converts the data to mm format, and compresses the data in MMR or raw format to store it in the SAF memory. If image rotation will be done, the image is rotated in page memory before compression.

At the time of transmission, the FCU decompresses the stored data, then re-compresses and/or reduces the data if necessary for transmission. The NCU transmits the data to the line.

#### Immediate Transmission

The base copier's scanner scans the original at the resolution agreed with the receiving terminal. The BiCU video processes the data and transfers it to the FCU.



 When scanning a fax original, the BiCU uses the MTF, independent dot erase and thresholding parameter settings programmed in the fax unit's scanner bit switches, not the copier's SP modes.


Then the FCU stores the data in page memory, and compresses the data for transmission. The NCU transmits the data to the line.

#### JBIG Transmission

**Memory transmission:** If the receiver has JBIG compression, the data goes from the DCR to the QM-Coder. Then the NCU transmits the data to the line.

**Immediate transmission:** If the receiver has JBIG compression, the data goes from the page memory to the QM-Coder. Then the NCU transmits the data to the line.

# Reception

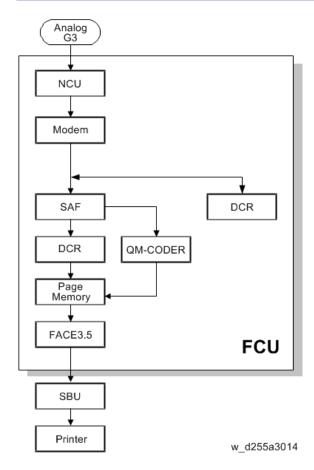

First, the FCU stores the incoming data from either an analog line to the SAF memory. (The data goes to the FACE3 at the same time, and is checked for error lines/frames.)

The FCU then decompresses the data and transfers it to page memory. If image rotation will be done, 132


the image is rotated in the page memory. The data is transferred to the BiCU.

# **JBIG Reception**

When data compressed with JBIG comes in on PSTN-1 (the standard analog line), the data is sent to the QM-CODER for decompression. Then the data is stored in the page memory, and transferred to the BiCU.

# **Fax Communication Features**

#### **Document Server**

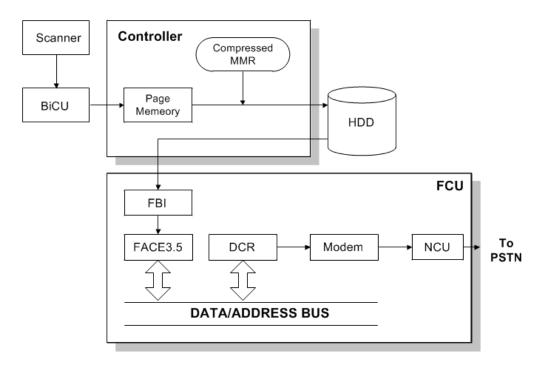

w\_d255a3028

The base copier's scanner scans the original at the selected resolution. The BiCU video processes the data and transfers it to the controller board.

Then the controller stores the data in the page memory for the copier function, and compresses the data in MMR (by software) to store it in the HDD. If image rotation will be done, the image is rotated in the page memory before compression.

For transmission, the stored image data is transferred to the FCU. The FCU decompresses the image data, then recompresses and/or reduces the data if necessary for transmission. The NCU transmits the data to the line.

The documents can be stored in the HDD (Document Server) from the fax application. The stored documents in the document sever can be used for the fax transmission in many times. More than one document and the scanned document can be combined into one file and then the file can be transmitted.

- When using the document server, the SAF memory is not used.
- The document is compressed with MMR and stored.
- Up to 9,000 pages can be stored (1 file: Up to 1,000 pages) from the fax application.
- Only stored documents from the fax application can be transmitted.
- Scanned documents are given a name automatically, such as "FAX001". But it is possible to change the file name, user name and password.
- Up to 30 files can be selected at once.



- The compression method of the fax application is different from the copy application. The storing time is longer than the copier storing.
- When selecting "Print 1st page", the stored document will be reduced to A4 size.

# **Internet Mail Communication**

# Mail Transmission

This machine supports T.37 full mode. (ITU-T Recommendation, RFC2532). The difference between T.37 simple mode and full mode is as follows.

Function	T.37 Simple Mode	T.37 Full Mode
Resolution	200 x 100	200 x100
	200 x 200	200 x 200
		200 x 400
		400 x 400 (if available)
RX Paper Width	A4, 8.5" x 14"	A4, B4, A3
RX Data	МН	MH (default), MR, MMR
Compression		
Method		
Signals	Image data	Image data transmission, exchange of capability
	transmission only	information between the two terminals, and
		acknowledgement of receipt of fax messages

### **Data Formats**

The scanned data is converted into a TIFF-F formatted file.

The fields of the e-mail and their contents are as follows:

Field	Content		
From	Mail address of the sender		
Reply To	Destination requested for reply		
То	Mail address of the destination		
Bcc	Backup mail address		
Subject	From CSI or RTI (Fax Message No. xxxx)		
Content Type	Multipart/mixed		
	Attached files: image/tiff		
Content Transfer	Base 64, 7-bit, 8-bit, Quoted Printable		
Encoding			
Message Body	MIME-converted TIFF-F (MIME standards specify how files are attached to		
	e-mail messages)		

#### **Direct SMTP Transmission**

Internet Fax documents can be sent directly to their destinations without going through the SMTP server. (Internet Faxes normally transmit via the SMTP server.)

# For example:

e-mail address:	gts@ricoh.co.jp
SMTP server address:	gts.abcd.com

In this case, this feature destination e-mail address (gts@ricoh.co.jp) is read as the SMTP server address "gts.abcd.com", and the transmissions bypass the SMTP server.

## Selectable Options

These options are available for selection:

- With the default settings, the scan resolution can be either standard or detail. Inch-mm conversion before TX depends on IFAX SW01 Bit 7. Detail resolution will be used if Super Fine resolution is selected, unless Fine resolution is enabled with IFAX SW01.
- The requirements for originals (document size, scan width, and memory capacity) are the same as for G3 fax memory TX.
- The default compression is TIFF-F format.
- IFAX SW00: Acceptable paper widths for sending
- IFAX SW09: Maximum number of attempts to the same destination

#### Secure Internet Transmission

#### SMTP Authentication:

- User Tools > Machine Features > System Settings > File Transfer > SMTP Authentication POP Before SMTP:
- User Tools > Machine Features > System Settings > File Transfer > POP Before SMTP

#### Mail Reception

This machine supports three types of e-mail reception:

- POP3 (Post Office Protocol Ver. 3.)
- IMAP4 (Internet Messaging Access Protocol)
- SMTP (Simple Mail Transfer Protocol)



For details: Core Technology Manual – Facsimile Processes – Faxing from a PC –
 Internet/LAN Fax Boards – Mail Reception

#### POP3/IMAP4 Mail Reception Procedure

The machine automatically picks up e-mail from the server at an interval which is adjustable in the range 2 to 1440 min. in 1-minute steps:

• User Tools > Machine Features > System Settings > File Transfer > E-mail Reception Interval

### **SMTP Reception**

- 1. The IFAX must be registered as an SMTP server in the MX record of the DNS server, and the address of the received mail must specify the IFAX.
- To enable SMTP reception: User Tools > Machine Features > System Settings > File Transfer > Reception Protocol
  - Even if the MX record on the DNS server includes the IFAX, mail cannot be received with SMTP until SMTP reception is enabled:
  - However, if SMTP reception is selected and the machine is not registered in the MX record of the DNS server, then either IMAP4 or POP3 is used, depending on the setting: User Tools > Machine Features > System Settings > File Transfer > Reception Protocol

### Mail Delivery Conditions: Transferring Mail Received With SMTP

- The machine must be set up for SMTP mail delivery:
   User Tools > Machine Features > Facsimile Features > Reception Settings > SMTP RX File
   Delivery Settings
- 2. If the user wishes to limit this feature so that the machine will only deliver mail from designated senders, the machine's "Auth. E-mail RX" feature must be set (User Tools> Machine Features > Facsimile Features> E-mail Settings > SMTP RX File Delivery Settings).
- If the "SMTP RX File Delivery Setting" is set to "0" to prohibit SMTP receiving, and if there is mail
  designated for delivery, then the machine responds with an error. (User Tools > Machine Features
  > Facsimile Features > E-mail Settings > SMTP RX File Delivery Settings)
- 4. If the quick dial, speed dial, or group dial entry is incorrect, the mail transmission is lost, and the IFAX issues an error to the SMTP server and outputs an error report.

### Auth. E-mail RX

In order to limit access to mail delivery with IFAX, the addresses of senders must be limited using the Access Limit Entry. Only one entry can be registered.

1. Access Limit Entry

For example, to limit access to @IFAX.ricoh.co.jp:

gts@IFAX.ricoh.co.jp	Matches and is delivered.
gts@IFAX.abcde.co.jp	Does not match and is not delivered.
IFAX@ricoh.co.jp	Does not match and is not delivered.

### 2. Conditions

- The length of the Access Limit Entry is limited to 127 characters.
- If the Access Limit Entry address and the mail address of the incoming mail do not match, the
  incoming mail is discarded and not delivered, and the SMTP server responds with an error.
   However, in this case an error report is not output.
- If the Access Limit Entry address is not registered, and if the incoming mail specifies a delivery destination, then the mail is delivered unconditionally.

### Handling Mail Reception Errors

#### Abnormal files

When an error of this type occurs, the machine stops receiving and commands the server to erase the message. Then the machine prints an error report and sends information about the error by e-mail to the sender address (specified in the "From" or "Reply-to" field of the message). If there is an incomplete received message in the machine memory, it will be erased.

The machine prints an error message when it fails to send the receive error notification after a certain number of attempts.

The following types of files are judged to be abnormal if one or more of the following are detected:

1. Unsupported MIME headers.

Supported types of MIME header

Header	Supported Types	
Content-Type	Multipart/mixed, text/plain, message/rfc822 Image/tiff	
Charset	US-ASCII, ISO 8859 X. Other types cannot be handled, and some	
	garbage may appear in the data.	
Content-Transfer-	Base 64, 7-bit, 8-bit, Quoted Printable	
Encoding		

- 2. MIME decoding errors
- 3. File format not recognized as TIFF-F format
- 4. Resolution, document size, or compression type cannot be accepted

#### Remaining SAF capacity error

The machine calls the server but does not receive e-mail if the remaining SAF capacity is less than a certain value (the value depends on IFAX Switch 08. The e-mail will be received when the SAF capacity increases (for example, after substitute reception files have been printed). The error handling method for this type of error is the same as for "Abnormal files".

If the capacity of the SAF memory drops to zero during reception, the machine operates in the same way as when receiving an abnormal file (refer to "Abnormal files" above).

#### Secure Internet Reception

To enable password encryption and higher level security: User Tools> Machine Features > System Settings > File Transfer > POP3/IMAP4 Settings > Encryption (set to "On")

Transfer Request: Request By Mail

For details: Core Technology Manual – Facsimile Processes – Faxing from a PC – Internet/LAN Fax Boards – Transfer Request

The fields of the e-mail and their contents are as follows:

Field	Content
From	E-mail address of the requesting terminal

Field	Content
То	Destination address (Transfer Station address)
Bcc	Blind carbon copy
Subject	From TSI (Fax Message No. xxxx)
Content-Type	Multipart/mixed
	Text/Plain (for a text part), image/tiff (for attached files)
Content-Transfer-Encoding	Base 64, 7-Bit, 8-bit, Quoted Printable
Mail body (text part)	RELAY-ID-: xxxx (xxxx: 4 digits for an ID code)
	RELAY: #01#*X#**01
Message body	MIME-converted TIFF-F.

## E-Mail Options (Sub TX Mode)

The following features are available as options for mail sending: entering a subject, designating the level of importance, confirming reception of the mail.

## Subject and Level of Importance

You can enter a subject message with: Sub TX Mode > E-mail Options

The Subject entry for the mail being sent is limited to 64 characters. The subject can also be prefixed with an "Urgent" or "High" notation.

## How the Subject Differs According to Mail Type


Mail Type	Item	Item 2		Item 3
	1			
Subject Entry		Entry Condition		Fax Message No.
No Subject Entry		1. "CSI" ("RTI")		+
		2. "RTI"	CSI not registered	File No.
		3. "CSI"	RTI not registered	
		4. None	CSI, RTI not	
			registered	
Confirmation of	From	1. "CSI" ("RTI")		Normal:
Reception		2. "RTI"	CSI not registered	Return Receipt
				(dispatched).
				You can select
				"displayed" with IFAX
				SW02 Bits 2 and 3.
		3. "CSI"	RTI not registered	Error:
		4. None	CSI, RTI not	Return Receipt
			registered	(processed/error)
Mail delivery, memory	From	RTI or CSI of the	Mail delivery	Fax Message No. + File

## 5. Detailed Section Descriptions

Mail Type	Item	lter	n 2	Item 3
	1			
transfer, SMTP		station designated		Number
receiving and delivery		for delivery		
		RTI or CSI of	Mail sending from	
		sender	G3 memory	
		Mail address of	Memory sending	
		sender		
		Mail address of	SMTP receiving	
		sender	and delivery (Off	
			Ramp Gateway)	
Mail error notification		Error Message No.	xxxx From CSI (RTI)	

Items 1, 2, and 3 in the table above are in the Subject.

## Subjects Displayed on the PC

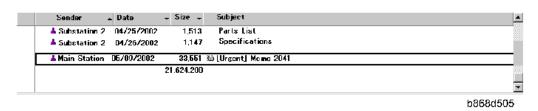

## E-mail Messages

After entering the subject, you can enter a message with: Sub TX Mode> E-mail Options

An e-mail message (up to 5 lines) can be pre-registered with: User Tools > Machine Features > System

Settings > File Transfer > Program/Change/Delete E-mail Message

#### **Limitations on Entries**

Item	Maximum
Number of Lines	5 lines
Line Length	80 characters
Name Length	20 characters

## Message Disposition Notification (MDN)

For details: Core Technology Manual – Facsimile Processes – Faxing from a PC – Internet/LAN Fax Boards – E-mail Options

The network system administrator can confirm whether a sent mail has been received correctly or not. This function is enabled only when "I-FAX switch 02 Bit 4" is set to "1". This confirmation is done in four steps.

- 1. Send request for confirmation of mail reception. To enable or disable this request (known as MDN):
- 2. Sub TX Mode> E-mail Options

- 3. Mail reception (receive confirmation request)
- 4. Send confirmation of mail reception
- 5. Receive confirmation of mail reception

The other party's machine will not respond to the request unless the two conditions below are met:

- The other party's machine must be set up to respond to the confirmation request.
- The other party's machine must support MDN (Message Disposition Notification).
- Setting up the Receiving Party -

The receiving party will respond to the confirmation request if:

- 1. The "Disposition Notification To" field is in the received mail header (automatically inserted in the 4th line in the upper table on the previous page, if MDN is enabled), and
- 2. Sending the disposition notification must be enabled (User Parameter Setting SW21 (15 [H]) Bit 1 for this model). The content of the response is as follows:

Normal reception:	"Return Receipt (dispatched)" in the Subject line	
IFAX SW02 (Bit 2, 3)	"Return Receipt (displayed)" in the Subject line	
Error:	"Return Receipt (processed/error)" in the Subject line	

## Handling Reports

- Sending a Request for a Return Receipt by Mail
   After the mail sender transmits a request for a return receipt, the mail sender's journal is annotated with two hyphens (--) in the Result column and a "Q" in the Mode column.
- 2. Mail Receipt (Request for Receipt Confirmation) and Sending Mail Receipt Response
  After the mail receiver sends a response to the request for a return receipt, the mail receiver's
  journal is annotated with two hyphens (--) in the Result column and an "A" in the Mode column.
- 3. Receiving the Return Receipt Mail
  - After the mail sender receives a return receipt, the information in the mail sender's journal about the receipt request is replaced, i.e. the journal is annotated with "OK" in the Result column.
  - When the return receipt reports an error, the journal is annotated with an "E" in the Result column.
  - The arrival of the return receipt is not recorded in the journal as a separate communication. Its arrival is only reported by the presence of "OK" or "E" in the Result column.
  - If the mail address used by the sender specifies a mailing list (i.e., a Group destination; the machine sends the mail to more than one location. See "How to set up Mail Delivery"), the Result column of the Journal is updated every time a return receipt is received. For example, if the mailing list was to 5 destinations, the Result column indicates the result of the communication with the 5th destination only. The results of the communications to the first 4 destinations are not shown.

Exceptions: If one of the communications had an error, the Result column will indicate E, even if subsequent communications were OK.

## 5.Detailed Section Descriptions

If two of the communications had an error, the Journal will indicate the destination for the first error only.

## Report Sample

DATE	TTYE	ADDRESS MODE TIME	PAGE
		RESCHI	
MAY. 5	10:15	fuser 010domig, ricoh, co. Mail SM 0º09"	2
	10:16	fuser_013domlq. ricoh. co. xail 8xQ 0°05"	1
	10:17	s_tadashi@domig. ricoh. co. Xail SXQ 0°09"	2
	10:19	m_masataka@domlg. riSch. co. Mail SMA 0'05"	1

b868d506

## **IP-Fax**

## What is IP-FAX?

For details: Core Technology Manual – Facsimile Processes – Faxing from a PC – Internet/LAN Fax Boards – IP-FAX

## T.38 Packet Format

TCP is selected by default for this machine, but you can change this to UDP with IPFAX SW 00 Bit 1.

## **UDP Related Switches**

	IP-Fax Switch 01						
No.	No. Function					Comments	
0-3	Sele	ct IP I	AX D	elay l	_evel	Raise the level by selecting a higher setting if too many	
	Bit	Bit	Bit	Bit	Level	transmission errors are occurring on the network.	
	3	2	1	0		If TCP/UDP is enabled on the network, raise this setting on the	
	0	0	0	0	0	T.30 machine. Increasing the delay time allows the recovery of	
	0	0	0	1	1	more lost packets.	
	0	0	1	0	2	If only UDP is enabled, increase the number of redundant	
	0	0	1	1	3	packets.	
						Level 1~2: 3 Redundant packets	
						Level 3: 4 Redundant packets	

## Settings

User parameter switch 34 (22[H]), bit 0

IP-Fax Gate Keeper usage, 0: No, 1: Yes

IP Fax Switches: Various IP-FAX settings (see the bit switch table)

# 6. Specifications

# **General Specifications**

## FCU

Item	Spec.
Type:	Desktop type transceiver
Circuit:	PSTN
	PABX
Connection	Direct couple
Original Size:	Book (Face down)
	Maximum Length: 356 mm (14.0 inch)
	Maximum Width: 216 mm (8.5 inch)
	DF (Face up)
	Maximum Length: 356 mm (14.0 inch)
	Maximum Width: 216 mm (8.5 inch)
Scanning	Flat bed, with CCD
Method:	
Resolution:	8 × 3.85 lines/mm, 200 × 100 dpi (Standard character), 8 × 7.7 lines/mm, 200 ×
	200 dpi (Detail character)
Transmission	3 seconds at 28,800 bps, Standard resolution (JBIG transmission: 2 seconds)
Time:	
Data	MH, MR, MMR, JBIG
Compression:	
Protocol:	Group 3 with ECM
Modulation:	TCM: V.34, V.17
	QAM: V.29, V.17
	PhM: V27ter
	FSK: V.8, V21
Data Rate:	33,600 / 31,200 / 28,800 / 26,400 / 24,000 / 21,600 / 19,200 / 16,800 / 14,400 /
	12,000 / 9,600 / 7,200 / 4,800 / 2,400 bps (auto shift down system)
I/O Rate:	With ECM: 0 ms/line
	Without ECM: 2.5, 5, 10, 20, or 40 ms/line
Memory	SAF: 4 MB
Capacity:	Page Memory: 4 MB

## Capabilities of Programmable Items

The following table shows the capabilities of each programmable items.

Item	Maximum Value
Number of destinations you can register in the address book	2000
Number of groups you can register	100
Number of destinations you can register in a group	500
Number of destinations you can register into a keystroke program	500
Number of programs you can register in a group	100
Number of communication results you can check on this machine	1000
Number of special senders you can register	250
Number of documents you can store in memory for memory transmission	800
Number of pages you can send for memory transmission	1000
Number of pages you can store in memory for memory transmission *1	320

<sup>\*1:</sup> Measured using an ITU-T #1 test document (Slerexe letter) at standard resolution, auto image density mode, and Text mode.


# **IFAX Specifications**

Item	Spec.	
Connectivity:	Standard: Ethernet interface (1000BASE-T/100 BASE-TX/10 BASE-T)	
	Optional: IEEE 802.11a/b/g/n wireless LAN interface	
Resolution:	200 × 100 dpi (Standard resolution), 200 × 200 dpi (Detail resolution)	
Transmission	1 s (through a LAN to the server)	
Time:	Condition: ITU-T #1 test document (Slerexe Letter)	
	MTF correction: OFF	
	TTI: None	
	Resolution: 200 × 100 dpi	
	Communication speed: 10 Mbps	
	Correspondent device: E-mail server	
	Line conditions: No terminal access	
Document Size:	Maximum Original Size: A4	
E-mail File	Single/Multi-part, MIME Conversion	
Format:	Attached file format: TIFF-F (MH, MR*, MMR*)	
	*: Full mode	
Protocol:	Transmission: SMTP, TCP/IP	
	Reception: POP3, SMTP, IMAP4, TCP/IP	
Data Rate:	1000 Mbps (1000 Base-T), 100 Mbps (100 Base-Tx), 10 Mbps (10 Base-T)	
Authentication	SMTP-AUTH, POP before SMTP, A-POP	
Method:		
Remark:	The machine must be set up as an e-mail client before installation. Any client PCs	
	connected to the machine through a LAN must also be e-mail clients, or some	
	features will not work (e.g. Autorouting).	

# **IP-FAX Specifications**

Item	Spec.
Network:	Standard: Ethernet interface (1000BASE-T/100 BASE-TX/10 BASE-
	T)
	Optional: IEEE 802.11a/b/g/n wireless LAN interface
Scan line density:	200 × 100dpi (standard character), 200 × 200dpi (detail character)
Maximum Original size:	A4 (SEF), 81/2" × 14" (SEF)
Maximum scanning	216 mm × 356 mm (8.5" × 14.0")
size:	
Transmission protocol:	Recommendation: T.38, TCP, UDP/IP communication, SIP (RFC 3261
	compliant), H.323 v2
Compatible machines:	IP-Fax compatible machines
IP-Fax transmission	Specify IP address and send faxes to an IP-Fax compatible fax through a
function:	network.
	Also capable of sending faxes to a G3 fax connected to a telephone line
	via a VoIP gateway.
IP-Fax reception	Receive faxes sent from an IP-Fax compatible fax through a network.
function:	Also capable of receiving faxes from a G3 fax connected to a telephone
	line via a VoIP gateway.

## **Fax Unit Configuration**

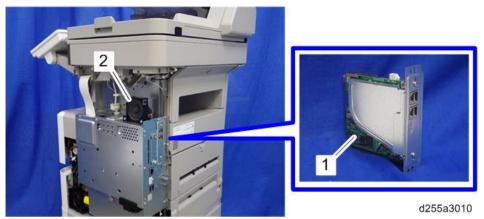

No.	Component
1	FCU
2	Speaker