




Network Guide

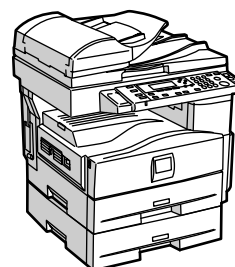

-
- 1** Functions Available over a Network
 - 2** Connecting the Network Cable to the Network
 - 3** Setting Up the Machine on a Network
 - 4** Windows Configuration
 - 5** Using the Printer Function
 - 6** Configuring the Network Interface Board Using a Web Browser
 - 7** Appendix

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

Trademarks

Microsoft®, Windows® and Windows NT® are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

- The product name of Windows® 98 is Microsoft® Windows 98.
- The product name of Windows® Me is Microsoft® Windows Millennium Edition (Windows Me).
- The product names of Windows® 2000 are as follows:
Microsoft® Windows® 2000 Advanced Server
Microsoft® Windows® 2000 Server
Microsoft® Windows® 2000 Professional
- The product names of Windows® XP are as follows:
Microsoft® Windows® XP Professional
Microsoft® Windows® XP Home Edition
- The product names of Windows™ Server 2003 are as follows:
Microsoft® Windows™ Server 2003 Standard Edition
Microsoft® Windows™ Server 2003 Enterprise Edition
Microsoft® Windows™ Server 2003 Web Edition

Note:

Some illustrations in this manual might be slightly different from the machine.

Manuals for This Machine

The following manuals describe the operational procedures of this machine. For particular functions, see the relevant parts of the manual.

Note

- ☐ Manuals provided are specific to machine type.
- ☐ Adobe Acrobat Reader is necessary to view the manuals as a PDF file.

❖ **General Settings Guide**

Provides an overview of the machine and describes System Settings (paper trays, Key Operator Tools, etc.), and troubleshooting.

❖ **Network Guide (this manual)**

Describes procedures for configuring the machine and computers in a network environment.

❖ **Copy Reference**

Describes operations, functions, and troubleshooting for the machine's copier function.

❖ **Printer/Scanner Reference**

Describes system settings, functions, troubleshooting and operations for the machine's printer and scanner function.

❖ **Other Manuals**

- Manuals for This Machine
- Safety Information
- Quick Reference Copy Guide
- Quick Reference Printer / Scanner Guide

TABLE OF CONTENTS

Manuals for This Machine	i
How to Read This Manual	1
1. Functions Available over a Network	
<hr/>	
Using the Printer	3
Network TWAIN Scanner	4
2. Connecting the Network Cable to the Network	
<hr/>	
Confirming Connection	5
Connecting to the Ethernet Interface	6
3. Setting Up the Machine on a Network	
<hr/>	
User Tools Menu (Interface Settings)	7
Printer.....	7
Network TWAIN Scanner	7
Network Configuration.....	8
Settings You Can Change with User Tools	9
4. Windows Configuration	
<hr/>	
Configuring TCP/IP	11
Configuring a Windows 98SE / Me Computer.....	11
Configuring a Windows 2000 Computer	11
Configuring a Windows XP Computer.....	12
Configuring a Windows Server 2003 computer.....	12
Configuring a Windows NT 4.0 Computer.....	13
5. Using the Printer Function	
<hr/>	
Printing with a Print Server.....	15
Printing without a Print Server	16
Using TCP/IP Port Type P10001	16
Using Standard TCP/IP Port	17
Using LPR Port	17
Using the IPP Port.....	18
6. Configuring the Network Interface Board Using a Web Browser	
<hr/>	
Features	19
Settings You Can Change Using a Web Browser	20
Configuring the Network Interface Board Using.....	21

7. Appendix

Using DHCP	23
SNMP.....	24
Error Messages on the Display	25
Messages without Code Numbers	25
Messages with Code Numbers	26
Specifications.....	27
INDEX.....	28

How to Read This Manual

Symbols

In this manual, the following symbols are used:

WARNING:

This symbol indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

CAUTION:

This symbol indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury, or damage to property.

* The statements above are notes for your safety.

Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates prior knowledge or preparation is required before operation.

Note

This symbol indicates precautions for operation, or actions to take after mal-operation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

Reference

This symbol indicates a reference.

[]

Keys that appear on the machine's display.

[]

Keys and buttons that appear on the computer's display.

[]

Keys built into the machine's control panel.

[]

Keys on the computer's keyboard.


1. Functions Available over a Network

This machine provides printer and scanner functions over a network.

Using the Printer

The network interface board is compatible with Windows NT4.0 / 2000 (TCP/IP, IPP^{*1}), Windows XP (TCP/IP, IPP^{*1}), Windows Server 2003 (TCP/IP, IPP^{*1}), and Windows 98SE / Me operating systems and protocols. This flexibility allows you to operate the machine in networks that use different protocols and operating systems.

^{*1} IPP (Internet Printing Protocol) is a protocol for printing via the Internet.

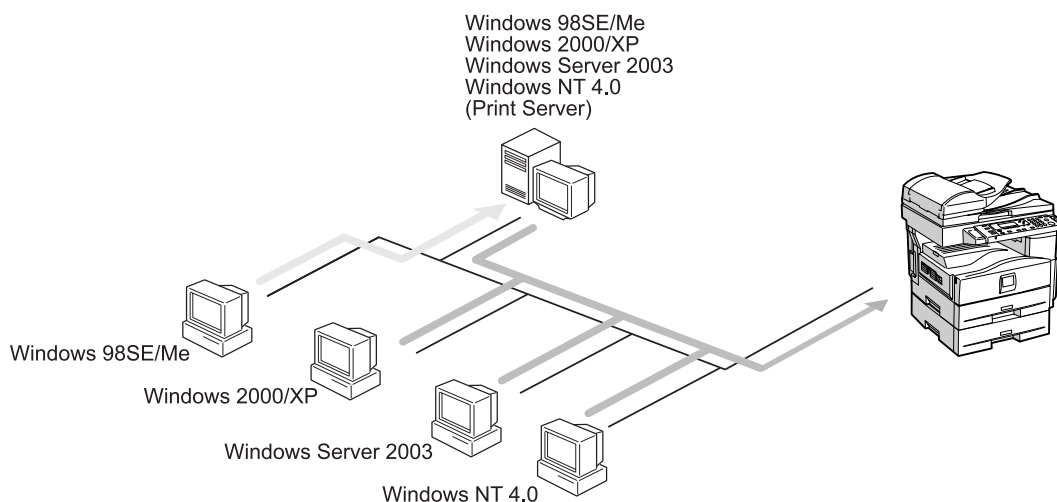

ARL001S

Reference


For details about network settings you need to make, see p.7 “Setting Up the Machine on a Network”.

For details about network printing, see p.15 “Using the Printer Function”.

Network TWAIN Scanner

1

You can use the scanning function of this machine from a computer connected via a network. You can scan documents the same way you would if you were using a scanner connected directly to your computer.

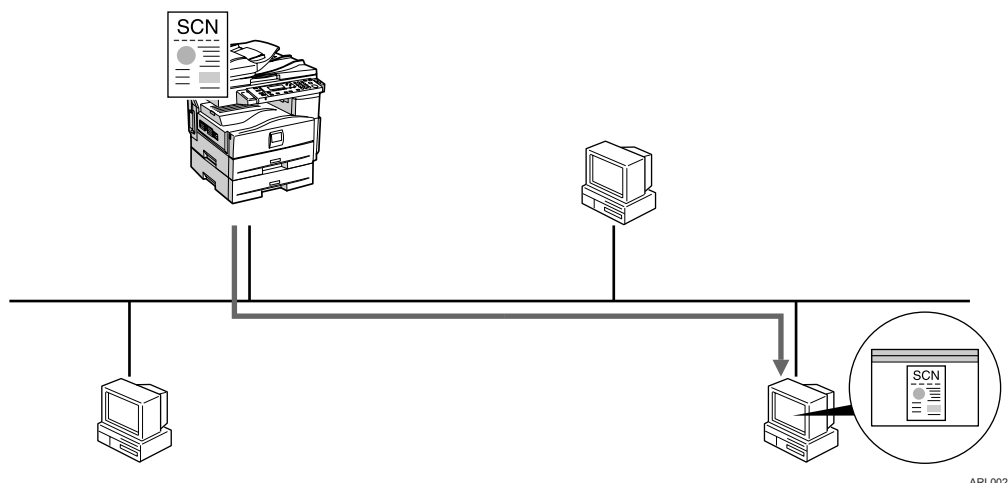


Reference

For details about network settings you need to make, see p.7 "Setting Up the Machine on a Network".

For details about TWAIN scanning over a network, see "Using the TWAIN Scanner Function", **Printer / Scanner Reference**.

2. Connecting the Network Cable to the Network

Confirming Connection

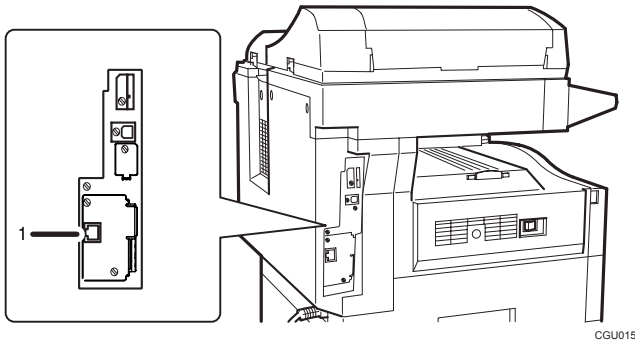

1. 10BASE-T/100BASE-TX port

Port for connecting the network interface cable.

Connecting to the Ethernet Interface

The network interface board supports 10BASE-T or 100BASE-TX connections.

⚠ CAUTION:


- A network interface cable with a ferrite core must be used for RF interference suppression.

1 Turn off the main power switch.

⚡ Important


- ☐ Make sure the main power is off. See "Turning On the Power", Copy Reference.

2 A ferrite core for the Ethernet interface cable is supplied with this machine. Attach the ferrite core at the machine end of the Ethernet cable.

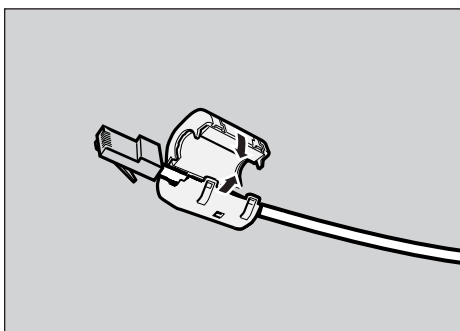


CGU020

3 Connect the network interface cable to the 10BASE-T/100BASE-TX port.

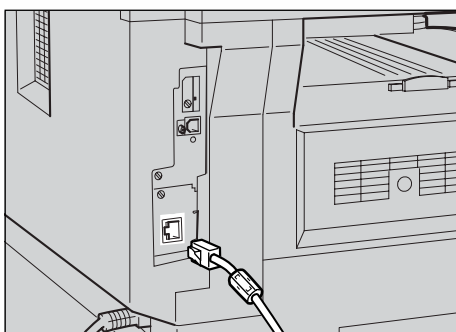

CGU016

4 Turn on the main power switch.

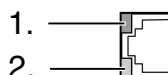

AAW022S1

1. Indicator (green)

Remains green when the machine is properly connected to the network.

2. Indicator (yellow)

Turns yellow when 100 BASE-TX is operating. Turns off when 10 BASE-T is operating.

3. Setting Up the Machine on a Network

User Tools Menu (Interface Settings)

This section describes the network settings you can change with User Tools (Interface Settings). Make settings according to the functions you want to use and the interface to be connected.

 **Important**

- ❑ These settings should be made by the systems administrator, or after consulting with the systems administrator.

 **Reference**

For details about settings, see p.9 “Settings You Can Change with User Tools”

❖ **Viewing the Information Displayed in the List**

- These items must be set to use the function. Be sure to set them before attempting to use the corresponding function.
- These items must be set if required.

Printer

Settings		
Interface Settings/Network See p.9 “Interface Settings”.	IP Address	●
	Gateway Address	○
	Ethernet Speed	○

Network TWAIN Scanner

Settings		
Interface Settings/Network See p.9 “Interface Settings”.	IP Address	●
	Gateway Address	○
	Ethernet Speed	○

Network Configuration

Changes made with User Tools remain in effect after the main power switch or operation switch is turned off, or the **[Clear Modes]** key is pressed.

Configuring the network using the control panel

 **Note**

- ☐ Operations for Interface Settings are different from normal operations. To exit User Tools, press the **[User Tools/Counter]** key.
- ☐ If a key operator code has been set, the key operator code entry screen appears. Enter the code, and then press the **[OK]** key. For details about the key operator code, see *General Settings Guide*.

1 Press the **[User Tools/Counter]** key.

2 Select **[Interface Settings]** using the **[▲]** or **[▼]** key, and then press the **[OK]** key.

3 Select the setting you want to change, and then press the **[OK]** key.

4 Change the setting, and then press the **[OK]** key.

 **Note**

- ☐ Press the **[Escape]** key to cancel the setting.

5 Press the **[User Tools/Counter]** key.

Configuring the network using other utilities

Network settings can be made not only from the control panel, but by Web browser also. The following table shows the settings you can make using a Web browser:

 **Note**

- ☐ ○ Indicates machine settings that can be changed.
- ☐ - Indicates the setting cannot be changed from that device.

Name on the control panel				Web browser	
Interface Set- tings	Network	IP Address	Auto-Obtain (DHCP)	○	
			Specify	IP Add.	○
				Subnet M	○
				Mac Add.	-
		Gateway Address			○
		Ethernet Speed			-

Settings You Can Change with User Tools

Interface Settings

❖ IP Address

To use this machine in a network environment, you must first configure its IP address and subnet mask.

- Auto-Obtain (DHCP)
- Specify
When you select **[Specify]**, enter **[IP Address:]** and **[Sub-net Mask:]** as "xxx.xxx.xxx.xxx" ("x" indicates a number).
 - IP Address: 011.022.033.044
 - Sub-net Mask: 000.000.000.000

Note

- ☐ Default: Auto-Obtain (DHCP)
- ☐ When you select **[Specify]**, be sure not to set the same **[IP Address:]** as that of another machine on the network.
- ☐ The physical address (MAC address) also appears.

❖ Gateway Address

A gateway is a connection or interchange point between two networks. Configure the gateway address for the router or host computer used as a gateway.

- Gateway Address: 000.000.000.000

Note

- ☐ Default: 000.000.000.000

❖ Ethernet Speed

Set the network access speed.

Select a speed that is suitable for your network environment. **[Auto Select]** should usually be selected.

- Auto Select
- 100Mbps Fixed
- 10Mbps Fixed

Note

- ☐ Default: Auto Select

4. Windows Configuration

Configuring TCP/IP

This section explains configuring Windows for TCP/IP and IPP.

Configuring a Windows 98SE / Me Computer

Follow the procedure below to configure a Windows 98SE / Me computer to use TCP/IP.

- 1** Open [Control Panel], and then double-click the Network icon. Make sure [TCP/IP] is selected in the [The following network components are installed] box on the [Configuration] tab.

 **Note**

- ☐ Select TCP/IP if it is not already selected.
- ☐ If TCP/IP is not installed, click [Add] on the [Configuration] tab to install it. For details about installing TCP/IP, see Windows 98SE / Me Help.

- 2** Click [Properties].
- 3** Configure TCP/IP using the appropriate IP address, subnet mask, and other settings.

Check with the network administrator that the settings are correct.

Configuring a Windows 2000 Computer

Follow the procedure below to configure a Windows 2000 computer to use TCP/IP.

- 1** On the [Start] menu, point to [Settings], and then click [Network and Dial-up Connections].
- 2** Double-click [Local Area Connection]. On the [General] tab, click [Properties].
- 3** Make sure [Internet Protocol (TCP/IP)] is selected in the [Components checked are used by this connection] box on the [General] tab.

 **Note**

- ☐ Select TCP/IP if it is not already selected.
- ☐ If TCP/IP is not installed, click [Install] on the [General] tab to install it. For details about installing TCP/IP, see Windows 2000 Help.

- 4** Click [Properties].
- 5** Configure TCP/IP using the appropriate IP address, subnet mask, and other settings.

Check with the network administrator that the settings are correct.

Configuring a Windows XP Computer

Follow the procedure below to configure a Windows XP computer to use TCP/IP.

- 1** On the [Start] menu, click [Control Panel], and then click [Network Connections].
- 2** Click [Network Connections], and then double-click [Local Area Connection].
- 3** On the [General] tab, click [Properties].
- 4** Make sure [Internet Protocol (TCP/IP)] is selected in the [This connection uses the following items] box on the [General] tab.

Note

- ☐ Select TCP/IP if it is not already selected.
- ☐ If TCP/IP is not installed, click [Install] on the [General] tab to install it. For details about installing TCP/IP, see Windows XP Help.

- 5** Click [Properties].
- 6** Configure TCP/IP using the appropriate IP address, subnet mask, and other settings.

Check with the network administrator that the settings are correct.

Configuring a Windows Server 2003 computer

Follow the procedure below to configure a Windows Server 2003 computer to use TCP/IP.

- 1** On the [Start] menu, point to [Control Panel], point to [Network Connections], and then click [Local Area Connection].
- 2** On the [General] tab, click [Properties].
- 3** Make sure [Internet Protocol (TCP/IP)] is selected in the [This connection uses the following items] box on the [General] tab.

Note

- ☐ Select TCP/IP if it is not already selected.
- ☐ If TCP/IP is not installed, click [Install] on the [General] tab to install it. For details about installing TCP/IP, see Windows Server 2003 Help.

- 4** Click [Properties].
- 5** Configure TCP/IP using the appropriate IP address, subnet mask, and other settings.

Check with the network administrator that the settings are correct.

Configuring a Windows NT 4.0 Computer

Follow the procedure below to configure a Windows NT 4.0 computer to use TCP/IP.

- 1** Open [Control Panel], and then double-click the Network icon. Make sure [TCP/IP Protocol] is selected in the [Network protocols] box on the [Protocols] tab.

 **Note**

- ☐ Select TCP/IP if it is not already selected.
- ☐ If TCP/IP is not installed, click [Add] on the [Protocols] tab to install it. For more information about installing TCP/IP, see Windows NT 4.0 Help.

- 2** Click [Properties].

- 3** Configure TCP/IP using the appropriate IP address, subnet mask, and other settings.

Check with the network administrator that the settings are correct.

5. Using the Printer Function


Printing with a Print Server

This section explains configuring a network client computer when using Windows 2000 / XP or Windows Server 2003 as a print server.

When using a Windows 2000 / XP or Windows Server 2003 print server, select a shared printer.

This section describes running **[Add Printer Wizard]** on each client computer, and adding the Windows 2000 / XP, or Windows Server 2003 print server as the network printer.

These instructions are for Windows 98SE.

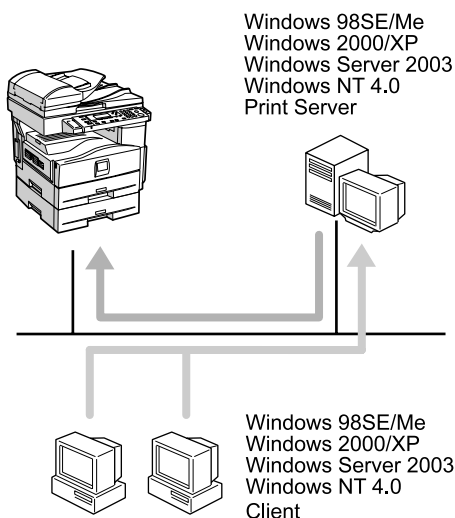

This section assumes the client is already configured to communicate with a Windows 2000 / XP, or Windows Server 2003 print server. Do not begin the following procedure until the client computer is set up and configured correctly.

! Limitation

- ❑ If you are using a Windows XP print server, client computers cannot receive notification of print job completion.

1 Right-click **[Network Neighborhood]**, and then click **[Explore]** in the context menu.

2 On the network tree, double-click the name of the computer used as the print server. The printers connected to the network are displayed.

3 Double-click the name of the printer you want to use, and then click **[Yes]**.

The printer icon appears in the **[Printers]** window.

Printing without a Print Server

You can use this machine as a network printer without connecting to a print server.

You can configure the following ports:

❖ TCP/IP Port Type P10001

Print via TCP/IP using TCP/IP Port Type P10001.

Note

- ☐ TCP/IP Port Type P10001 can be used with Windows 98SE / Me.

❖ Standard TCP/IP port

Print via TCP/IP using a standard TCP/IP port.

Note

- ☐ A standard TCP/IP port can be used with Windows 2000 / XP or Windows Server 2003.

❖ LPR port

Print via TCP/IP using an LPR port.

Note

- ☐ An LPR port can be used with Windows 2000 / XP, or Windows Server 2003.

❖ IPP port

Print via ipp or http using an IPP port.

Note

- ☐ An IPP port can be used with Windows XP, or Windows Server 2003.

Using TCP/IP Port Type P10001

TCP/IP Port Type P10001 can be used with Windows 98SE / Me if the necessary printer driver has been installed.

1 In the [Printers] window, click the icon of the printer you want to use. On the [File] menu, click [Properties].

2 Click the [Details] tab, and then click [Add Port].

3 Click the [Other] radio button, click [TCP/IP Port Type P10001], and then click [OK].

Add TCP/IP Port Type P10001 Wizard will start.

4 Click [Next >].

5 Enter the IP address, and then click [Next >].

Note

- ☐ Enter [Port Name:] if necessary.

6 Click [Finish].

Configuring the port settings

1 In the [Printers] window, click the icon of the printer you want to use. On the [File] menu, click [Properties].

2 Click the [Details] tab, and then click [Port Settings...].

The TCP/IP Port Type P10001 Configuration dialog box appears.

- You can select either Raw or LPR port.
- You can change the IP address of the port.

Note

- ☐ If the IP address of the machine is changed, you must change the port settings also.
- Both Raw and LPR support SNMP.

Important

- ☐ Do not change Port Number, Timeout, or Queue Name.

Using Standard TCP/IP Port

This procedure explains changing the port settings under Windows 2000 when a printer driver has been installed.

1 In the [Printers] window, click the icon of the printer you want to use. On the [File] menu, click [Properties].

2 Click the [Ports] tab, and then click [Add Port].

3 Click [Standard TCP/IP], and then click [New Port].

4 In the [Add Standard TCP/IP Printer Port Wizard] dialog box, click [Next >].

5 In the [Printer Name or IP Address] box, enter the printer name or IP address, and then click [Next >].

6 In the [Add Standard TCP/IP Printer Port Wizard] dialog box, click [Finish].

7 Click [Close].

8 Check the location of the selected printer, and then click [Close].

Using LPR Port

This procedure explains changing the port settings under Windows 2000 when a printer driver has been installed.

1 In the [Printers] window, click the icon of the printer you want to use. On the [File] menu, click [Properties].

2 Click the [Ports] tab, and then click [Add Port].

3 Click [LPR Port], and then click [New Port].

4 In the [Name or address of server providing lpd] box, enter the printer's IP address.

You must install "Print Services for Unix" before you can use the LPR port. If the dialog box does not appear, install the necessary print service, and then try again.

For details about performing installations, see your operating system's Help files.

5 In the [Name of printer or print queue on that server] box, enter "lp", and then click [OK].

6 Click [Close].

7 Check the location for the selected printer, and then click [Close].

Using the IPP Port

An IPP port can be used with Windows 2000 / XP or Windows Server 2003.

This procedure explains making the port settings under Windows XP.

1 In the [Printers and Faxes] window, click [Add printer] on the [File] menu.

Add Printer Wizard will start.

2 Click [Next >].

3 Click the [A network printer or a attached to another computer] radio button, and then click [Next >].

4 Click the [Connect to a printer on the Internet or on a home or office network:] radio button, and then enter "http://printer's IP address/ipp/port1" or "ipp://printer's IP address/ipp/port1" in the [URL:] box.

(Example: IP address is 192.168.15.16)

**http://192.168.15.16/ipp/
port1**

**ipp://192.168.15.16/ipp/
port1**

5 Click [Next >].

6 Click [Have Disk], and then click [Browse].

7 Select the printer driver.

The printer driver paths are as follows:

- Windows 98SE / Me
CD-ROM
drive:DRIVERSDDSTWIN9X_
ME(language)DISK1
- Windows 2000 / XP or Windows Server 2003
CD-ROM
drive:DRIVERSDDSTWIN2K_
XP(language)DISK1

8 Click [OK] twice.

9 Click [Next >], and then [Finish].

6. Configuring the Network Interface Board Using a Web Browser

Features

You can check the status of the machine and change its settings using a Web browser.

❖ What can I do?

You can remotely check the status of the machine remotely, and if necessary change its settings over the network using a Web browser.

The following functions are available using a Web browser:

- Displaying machine status/settings
- Resetting network settings
- Making machine settings

❖ Configuring the machine

This requires TCP/IP to be installed. After the machine has been configured to use TCP/IP, it will be possible to adjust its settings using a Web browser.

Reference

For details about configuring the machine to use TCP/IP, see p.7 “Setting Up the Machine on a Network”.

❖ Browser

Note

- ☐ If you are using a proxy server, change the Web browser settings. Consult your network administrator about the settings.
- ☐ The machine's information is not updated automatically. Click **[Reload]** or **[Refresh]** on the Web browser to update it.

❖ Specifying the address

Enter the machine's IP address in the [Address] box, using the following format: `http://XXX.XXX.XXX.XXX` (Replace XXX with the appropriate numbers.) Alternatively, you can enter the machine's host name if it is already registered on the DNS or WINS server.

Settings You Can Change Using a Web Browser

❖ System

- **Reset**
Reset the machine's settings.
- **Factory Defaults**
Reset the machine's settings to their default values.
- **Unit Status**
Display the machine's network settings.
- **Network Address**
Display the machine's serial number and Ethernet address (MAC address).
- **Change Password**
Change the password.

❖ Protocols

- **Setup TCP/IP**
Configure the machine's TCP/IP settings.
- **Setup IPP**
Configure the machine's IPP settings.

❖ Others

- **Printer Status**
Display the machine's printer status.

Configuring the Network Interface Board Using

- 1** Start the Web browser.
- 2** Enter the machine's IP address in the [Address] box, using the following format: `http://XXX.XXX.XXX.XXX` (Replace XXX with the appropriate numbers.)

The Web browser identifies the machine by its IP address, and then displays the status of that machine.

- 3** In the menu area, select the setting you want to change, and then configure it as necessary.

 **Note**

- ☐ Enter a password if necessary.
- ☐ Default password is "sysadm".

Using DHCP

If this machine is configured for DHCP, and the DHCP request fails four times, BOOTP takes over the request. If the BOOTP request fails three times, the Default IP address is used.

SNMP

The machine is equipped with an SNMP (Simple Network Management Protocol) agent that operates under UDP and IPX on the Ethernet interface. The SNMP manager enables you to get information about the machine.

The default community names are “public” and “private”. You can get MIB information using these community names.

❖ Supported MIBs

- MIB-II
- PrinterMIB
- HostResourceMIB

Error Messages on the Display

This section explains the most common network-related messages that appear on the display. If a message not shown here appears, follow its instructions.

Messages without Code Numbers

Message	Causes	Solutions
⚡ Cannot connect to network Check IP Address	Network connection could not be established.	Check the machine's IP address.
⚡ Cannot connect to network Contact key operator	Network connection could not be established.	Check the network. If this message continues to appear, contact your key operator.
Ethernet Board Error	An Ethernet board error has occurred.	Turn off the main power switch, wait a few seconds, and then turn it back on. If this message continues to appear, contact your sales or service representative.
⚡ Server communicat. failed Contact key operator	Cannot communicate with the server.	Check the server. If this message continues to appear, contact your key operator.

Reference

Before turning the main power off, see “Turning On the Power”, **Copy Reference**.

Messages with Code Numbers

Message	Causes	Solutions	Code numbers
Cannot connect with DHCPserver	The DHCP server cannot be found.	Check the DHCP server is running on the network.	101
The same IP Address already exists	The specified IP address overlaps another IP address.	The IP address specified for the machine overlaps another IP address in use. Check the address of the device indicated in <MAC address>.	102
Check network settings	An unauthorized value is specified as the IP address or gateway address.	Change the IP address, subnet mask, or gateway address to the correct value.	103
The same IP Address exists on several interfaces	IP addresses overlap across multiple interfaces. IP addresses of simultaneously operating interfaces overlap.	The IP address of the specified interface overlaps the IP address of another interface. Configure the IP address so it does not overlap.	004
Cannot set within the same subnet range	The subnet masks of simultaneously operating interfaces overlap.	The subnet range of the specified interface overlaps the subnet range of another interface. Configure the subnet mask so it does not overlap.	005

❖ Code Numbers

Displays the problem interface.

- 1XX: Ethernet
- 0XX: Independent of interface

Specifications

Interface	100BASE-TX, 10BASE-T
Protocol	<ul style="list-style-type: none">• Printer TCP/IP LPR IPP• Network Scanner TCP/IP• Management Function TCP/IP SNMP HTTP DHCP
SNMP	MIB-II, PrinterMIB, HostResourceMIB

INDEX

C

configuration
 Web Browser, 19

D

DHCP, 23

E

Ethernet Speed, 9

G

Gateway Address, 9

I

Interface Settings, 9
IP Address, 9

M

MIB, 24

S

SNMP, 24
specifications, 27

W

Web Browser, 19

