Fax Option Type M1 Machine Code: D702

Field Service Manual

Important Safety Notices

WARNING

- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a
 remote risk of electric shock from lightning. Do not use a telephone or cellular phone to report a gas
 leak in the vicinity of the leak.

CAUTION

- Before installing the fax unit, switch off the main switch, and disconnect the power cord.
- The fax unit contains a lithium battery. The danger of explosion exists if a battery of this type is
 incorrectly replaced. Replace only with the same or an equivalent type recommended by the
 manufacturer. Discard batteries in accordance with the manufacturer's instructions and local
 regulations.




- Note for Australia:
- Unit must be connected to Telecommunication Network through a line cord which meets the requirements of ACA Technical Standard TS008.

Symbols and Abbreviations

Conventions Used in this Manual

This manual uses several symbols.

Symbol	What it means	
	See or Refer to	
ê	Screws	
	Connector	
C	E-ring	
ℴ	Clip ring	
Ę,	Clamp	

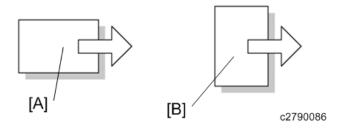

[A] Short Edge Feed (SEF)

[B] Long Edge Feed (LEF)

Cautions, Notes, etc.

The following headings provide special information:

MARNING

• Failure to obey warning information could result in serious injury or death.

ACAUTION

• Obey these guidelines to ensure safe operation and prevent minor injuries.

Important

- Obey these guidelines to avoid problems such as misfeeds, damage to originals, loss of valuable data and to prevent damage to the machine.
- Always obey these guidelines to avoid serious problems such as misfeeds, damage to originals, loss of valuable data and to prevent damage to the machine. bold is added for emphasis.



• This document provides tips and advice about how to best service the machine.

TABLE OF CONTENTS

Important Safety Notices	1
Symbols and Abbreviations	2
Conventions Used in this Manual	2
Cautions, Notes, etc	2
1. Installation	
Fax Option Installation	7
Component Check	7
Fax Option Installation Procedure	8
Fax Settings	14
Fax Unit Options	16
Handset (D645)	16
2. Replacement and Adjustment	
FCU	
SRAM Data Transfer Procedure	19
3. Troubleshooting	
Error Codes	
IFAX Troubleshooting	52
IP-Fax Troubleshooting	55
IP-Fax Transmission	55
Cannot send by IP Address/Host Name	55
Cannot send via VoIP Gateway	56
Cannot send by Alias Fax number	56
IP-Fax Reception	58
Cannot receive via IP Address/Host Name	58
Cannot receive by VoIP Gateway	58
Cannot receive by Alias Fax number	59
4. Service Tables	
Cautions	61
Service Program Tables	62
SP1-XXX (Bit Switches)	62
SP2-XXX (RAM Data)	63
SP3-XXX (Tel Line Settings)	63
SP4-XXX (ROM Versions)	64

SP5-XXX (RAM Clear)	64
SP6-XXX (Reports)	65
SP7-XXX (Tests)	67
Bit Switches - 1	68
System Switches	68
Bit Switches - 2	81
I-Fax Switches	81
Printer Switches	88
Bit Switches - 3	95
Communication Switches	95
Bit Switches - 4.	104
G3 Switches	104
Bit Switches - 6	113
IP Fax Switches	113
NCU Parameters	123
Dedicated Transmission Parameters	138
Programming Procedure	138
Parameters	138
Fax Parameters	138
E-mail Parameters	143
5. Specifications	
General Specifications	
FCU	147
Capabilities of Programmable Items	148
IFAX Specifications	
IP-FAX Specifications	1.52


1. Installation

Fax Option Installation

Component Check

Check the quantity and condition of the components against the following list.


No.	Description	Q'ty
1	FCU	1
2	Telephone Cable (NA only)	1
3	Screw	6
4	Fax Decal for Operation Panel	1
5	Board Cover	1
6	Grounding Plate (2-tip)	1
7	Grounding Plate (3-tip)	1
8	EMC Address (EU only)	1
9	Serial Number Decal	1
10	FCC Decal (NA only)	1
-	Installation Procedure (NA only)	1
-	RoHS Decal (China only)	1
-	RoHS Date Decal (China only)	1

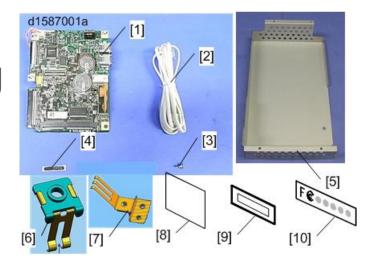


Fax Option Installation Procedure

Important


- Before installation:
- If there is a printer option in the machine, print out all data in the printer buffer.
- Turn the main switch on to put the machine in standby mode. Make sure the power LED is off, turn the main switch off, and then disconnect the power cord and the network cable.
- The copier must be connected to a properly grounded socket outlet.
- 1. Rear cover [A] (x 9)

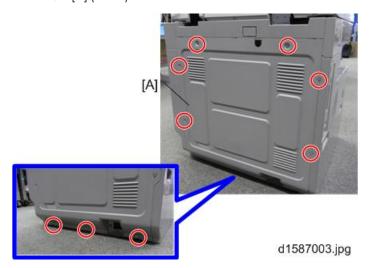

2. Five screws

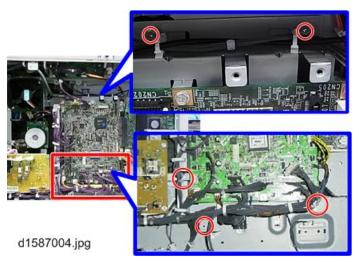


- **U** Note
 - Small arrows carved in the frame indicate the screws to remove.
 - 1. Slide the engine board [A] to the left as shown, to detach it from the controller board [B].

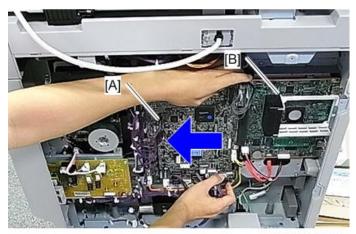

d1587005.jpg

- 2. Controller slot cover [A] (*\begin{align*} x 1)
- 3. Four screws [B]



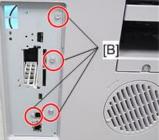

d1587002.jpg

4. Three screws







- Small arrows carved in the frame indicate the screws to remove.
- 1. Slide the controller board [A] to the left and pull as shown.




- 2. Detach the FCU from the speaker bracket ($\ensuremath{\ensuremath{\mathcal{F}}} \times 3)$
- 3. Insert the grounding plate (3-tip) [A] between the bracket and the FCU.
- 4. Reattach the FCU.

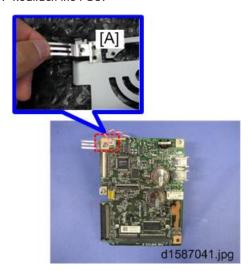

5. Attach the grounding plate (2-tip) [A] on the back of the FCU (\mathscr{F} x1).

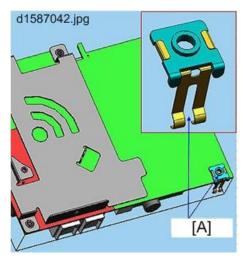


6. Attach the FCU to the controller board as shown.

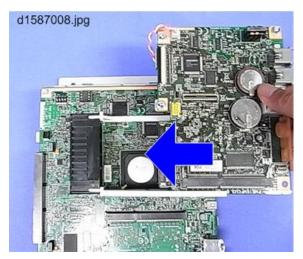




- Make sure that the **FCU** is seated correctly. If not, SC672 occurs.
- 1. Remove the jumper [A] (set to OFF) and set it to ON.

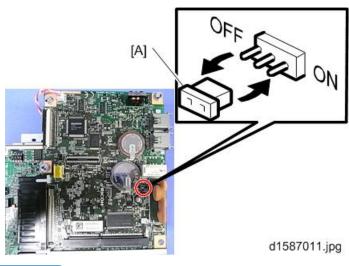

- **U** Note
 - The machine may issue SC819 or SC820 if the jumper is not set to "ON" correctly.
 - 1. For installation in Brazil, move the jumper switch (CN613) from "3" to "1".
 - 2. Cut away the knockouts for LINE and TEL from the controller slot cover.

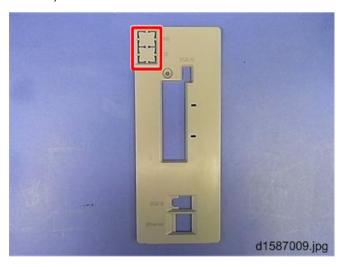

- 3. Install the controller board in the machine
- 4. Fasten the five circled screws.





- The arrow in the picture above indicates the screw that is added to fasten the FCU.
- 1. Attach the board cover [A] as shown below. (F x 4)



- 2. Connect the telephone cord to the LINE jack.
- 3. Attach the Fax decal near the function key on the operation panel.

Fax Settings

Initializing the Fax unit

When you press the Fax key for the first time after installation, the error "SRAM problem occurred / SRAM was formatted" will show on the LCD for initializing the program of the fax unit. Turn the main power switch off/on to clear the error display.

U Note

- If another error occurs after initialization, this can be a functional problem.
- 1. Select fax SP1-101-016 and specify the country code.
- 2. Select fax SP3-101-001 and specify the service station.
- For Fax option only (without printer/scanner option)
- 1. Turn the main switch on.
- 2. Start the SP mode.
- 3. Select SP5-985-001 (NIC setting) and change the setting value to "0" (OFF).
- 4. Select SP5-985-002 (USB setting) and change the setting value to "O" (OFF).

Turn the main switch off and on.

Fax Unit Options

Handset (D645)



- The optional handset is available for the U.S. version only.
- 1. Make two screw holes in the upper left cover.





d1585021

2. Install the bracket [A].



d1585022

3. Install the cradle.



d1585023

4. Install the handset.

<lllustration>

5. Cut away the knockout for TEL and insert the TEL cable.



d1585024

2. Replacement and Adjustment


FCU

SRAM Data Transfer Procedure


When you replace the FCU board, transfer the SRAM data from the old FCU board to the new FCU board. Do the following procedure to back up the SRAM data.




- The following data can be transfered: TTI, RTI, CSI, Fax bit switch settings, RAM address settings, NCU parameter settings
- 1. Rear cover [A] (x 9)

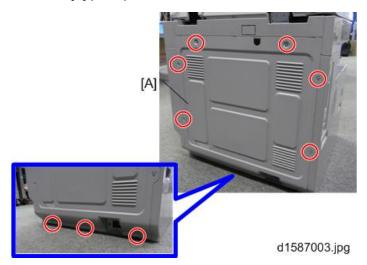

2. Board cover [A] (* x 4)

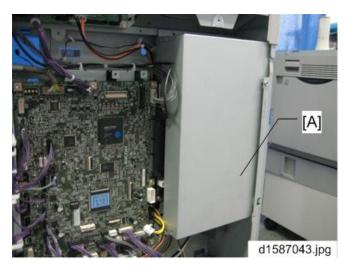


3. Five screws

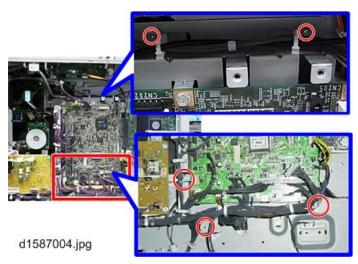




- Small arrows carved in the frame indicate the screws to remove.
- 1. Slide the engine board [A] to the left as shown, to detach it from the controller board [B].

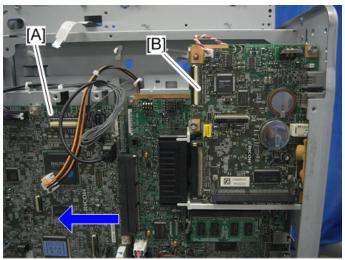


d1585039

- 2. Controller slot cover [A] (x1)
- 3. Four screws [B]

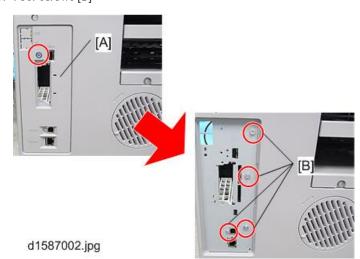


4. Three screws

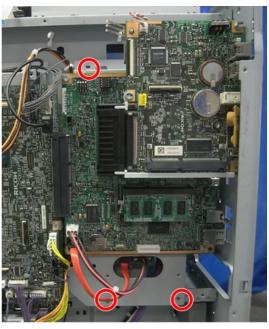

d1585040




- Small arrows carved in the frame indicate the screws to remove.
- 1. Slide the controller board [A] to the left and pull as shown.

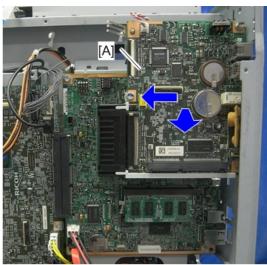

d1585041

- 2. Detach the FCU board.
- 3. Speaker bracket [A] (*x 3, * x 1).

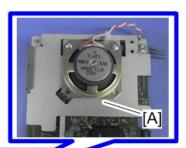




d1585036

4. Grounding plate (3-tip) [A].







5. Grounding plate (2-tip) [A] on the back of the FCU ($\ensuremath{\widehat{\mathcal{F}}}$ x 1).

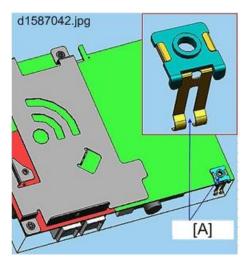

- 6. Attach the speaker bracket, Grounding plate (3-tip), and Grounding plate (2-tip) to the new FCU (x 3, x 1) (removed in steps 10-12).
- 7. Move the jumper switch [A] of the new FCU board from "OFF" to "ON".

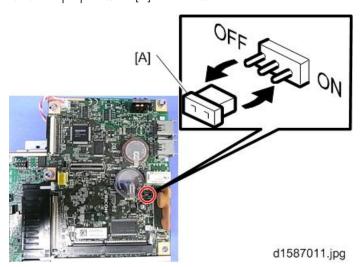


8. Connect a flat flexible cable [A] to the new FCU board. This cable is shipped with the new FCU board.

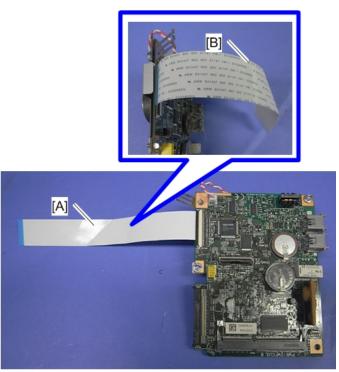

d1585042




- The green side [B] of the flat flexible cable must face outwards as shown above.
- 9. Attach the FCU to the controller board as shown.

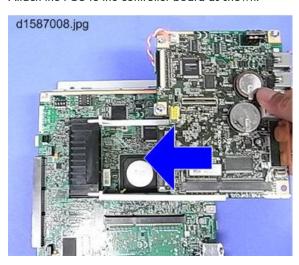

U Note


• Make sure that the FCU is seated correctly. If not, SC672 occurs.

- 10. Install the controller board in the machine.
- 11. Attach the jumper switch [A] to the old FCU board to turn it on.

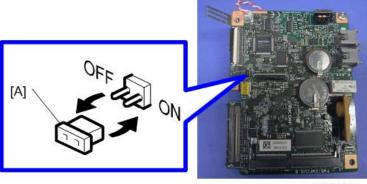

w d1585043

12. Connect the flat flexible cable to the old FCU board [A].

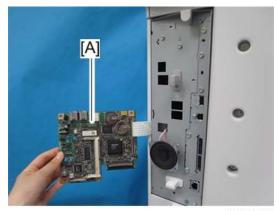

d629r107

- 13. Turn on the main power switch.
- 14. SRAM data transmission starts. When the transmission is completed, you will hear a beeper sound.



- The beeper sound is the same volume as the speaker sound.
- The beeper sounds even if the sperker sound is turned off.
- If the beeper does not sound, turn the main power switch on and off repeatedly and do the transmission procedure 2 or 3 times.
- If the beeper does not sound after turning the main switch on and off 3 times, you need to input the settings stored in SRAM memory manually.
- 15. When "Ready" appears on the copy display, turn off the main power switch, and then disconnect the flat flexible cable from the old FCU board.
- 16. Disconnect the flat flexible cable from the new FCU board.

17. Reattach the controller slot cover (F x 6).



d1585044

18. Attach the board cover [A] as shown below. (*\beta x 4)



- 19. Turn on the main power switch, then do SP6-101 to print the system parameter list.
- 20. Check the system parameter list to make sure that the data was transferred correctly.
- Set the correct date and time with the User Tools: User Tools > System Settings > Timer Settings >
 Set Date/Set Time.



• If any of the SRAM data was not transferred, input those settings manually.

3. Troubleshooting

Error Codes

If an error code occurs, retry the communication. If the same problem occurs, try to fix the problem as suggested below. Note that some error codes appear only in the error code display and on the service report.

Code	Meaning	Suggested Cause/Action
0-00	DIS/NSF not detected within 40 s of Start being pressed	 Check the line connection. The machine at the other end may be incompatible. Replace the FCU. Check for DIS/NSF with an oscilloscope. If the rx signal is weak, there may be a bad line.
0-01	DCN received unexpectedly	 The other party is out of paper or has a jammed printer. The other party pressed Stop during communication.
0-03	Incompatible modem at the other end	The other terminal is incompatible.
0-04	CFR or FTT not received after modem training	 Check the line connection. Try changing the tx level and/or cable equalizer settings. Replace the FCU. The other terminal may be faulty; try sending to another machine. If the rx signal is weak or defective, there may be a bad line. Cross reference Tx level - NCU Parameter 01 (PSTN)
		Cable equalizer - G3 Switch 07 (PSTN) Dedicated Tx parameters in Service Program Mode

Code	Meaning	Suggested Cause/Action
0-05	Modem training fails even G3 shifts down to 2400 bps.	 Check the line connection. Try adjusting the tx level and/or cable equalizer. Replace the FCU. Check for line problems. Cross reference See error code 0-04.
0-06	The other terminal did not reply to DCS	 Check the line connection. Try adjusting the tx level and/or cable equalizer settings. Replace the FCU. The other end may be defective or incompatible; try sending to another machine. Check for line problems. Cross reference See error code 0-04.
0-07	No post-message response from the other end after a page was sent	 Check the line connection. Replace the FCU. The other end may have jammed or run out of paper. The other end user may have disconnected the call. Check for a bad line. The other end may be defective; try sending to another machine.

Code	Meaning	Suggested Cause/Action
0-08	The other end sent RTN or PIN after receiving a page, because there were too many errors	 Check the line connection. Replace the FCU. The other end may have jammed, or run out of paper or memory space. Try adjusting the tx level and/or cable equalizer settings. The other end may have a defective modem/FCU; try sending to another machine. Check for line problems and noise. Cross reference Tx level - NCU Parameter 01 (PSTN) Cable equalizer - G3 Switch 07 (PSTN) Dedicated Tx parameters in Service Program Mode
0-14	Non-standard post message response code received	 Incompatible or defective remote terminal; try sending to another machine. Noisy line: resend. Try adjusting the tx level and/or cable equalizer settings. Replace the FCU. Cross reference See error code 0-08.
0-15	The other terminal is not capable of specific functions.	The other terminal is not capable of accepting the following functions, or the other terminal's memory is full. Confidential rx Transfer function SEP/SUB/PWD/SID

Code	Meaning	Suggested Cause/Action
0-16	CFR or FTT not detected after modem training in confidential or transfer mode	 Check the line connection. Replace the FCU. Try adjusting the tx level and/or cable equalizer settings. The other end may have disconnected, or it may be defective; try calling another machine. If the rx signal level is too low, there may be a line problem. Cross reference See error code 0-08.
0-17	Communication was interrupted by pressing the Stop key	If the Stop key was not pressed and this error keeps occurring, replace the operation panel or the operation panel drive board.
0-20	Facsimile data not received within 6 s of retraining	 Check the line connection. Replace the FCU. Check for line problems. Try calling another fax machine. Try adjusting the reconstruction time for the first line and/or rx cable equalizer setting. Cross reference Reconstruction time - G3 Switch OA, bit 6 Rx cable equalizer - G3 Switch O7 (PSTN)
0-21	EOL signal (end-of-line) from the other end not received within 5 s of the previous EOL signal	Check the connections between the FCU and line. Check for line noise or other line problems. Replace the FCU. The remote machine may be defective or may have disconnected. Cross reference Maximum interval between EOLs and between ECM frames - G3 Bit Switch OA, bit 4

Code	Meaning	Suggested Cause/Action
0-22	The signal from the other end was interrupted for more than the acceptable modem carrier drop time (default: 200 ms)	 Check the line connection. Replace the FCU. Defective remote terminal. Check for line noise or other line problems. Try adjusting the acceptable modem carrier drop time. Cross reference Acceptable modem carrier drop time - G3 Switch OA, bits 0 and 1
0-23	Too many errors during reception	 Check the line connection. Replace the FCU. Defective remote terminal Check for line noise or other line problems. Try asking the other end to adjust their tx level. Try adjusting the rx cable equalizer setting and/or rx error criteria. Cross reference Rx cable equalizer - G3 Switch 07 (PSTN) Rx error criteria - Communication Switch 02, bits 0 and 1
0-29	Data block format failure in ECM reception	 Check for line noise or other line problems. Check the FCU - NCU connectors. Replace the NCU or FCU.
0-30	The other terminal did not reply to NSS(A) in Al short protocol mode	 Check the line connection. Try adjusting the tx level and/or cable equalizer settings. The other terminal may not be compatible. Cross reference Dedicated tx parameters - Section 4
0-32	The other terminal sent a DCS, which contained functions that the receiving machine cannot handle.	 Check the protocol dump list. Ask the other party to contact the manufacturer.

Code	Meaning	Suggested Cause/Action
0-33	The data reception (not ECM) is not completed within 10 minutes.	 Check the line connection. The other terminal may have a defective modem/FCU.
0-52	Polarity changed during communication	Check the line connection. Retry communication.
0-55	FCU does not detect the SG3.	FCU firmware or board defective.SG3 firmware or board defective.
0-56	The stored message data exceeds the capacity of the mailbox in the SG3.	SG3 firmware or board defective.
0-70	The communication mode specified in CM/JM was not available (V.8 calling and called terminal)	 The other terminal did not have a compatible communication mode (e.g., the other terminal was a V.34 data modem and not a fax modem.) A polling tx file was not ready at the other terminal when polling rx was initiated from the calling terminal.
0-74	The calling terminal fell back to T. 30 mode, because it could not detect ANSam after sending CI.	 The calling terminal could not detect ANSam due to noise, etc. ANSam was too short to detect. Check the line connection and condition. Try making a call to another V.8/V.34 fax.
0-75	The called terminal fell back to T. 30 mode, because it could not detect a CM in response to ANSam (ANSam timeout).	 The terminal could not detect ANSam. Check the line connection and condition. Try receiving a call from another V.8/V.34 fax.
0-76	The calling terminal fell back to T. 30 mode, because it could not detect a JM in response to CM (CM timeout).	 The called terminal could not detect a CM due to noise, etc. Check the line connection and condition. Try making a call to another V.8/V.34 fax.

Code	Meaning	Suggested Cause/Action
0-77	The called terminal fell back to T. 30 mode, because it could not detect a CJ in response to JM (JM timeout).	 The calling terminal could not detect a JM due to noise, etc. A network that has narrow bandwidth cannot pass JM to the other end. Check the line connection and condition. Try receiving a call from another V.8/V.34 fax.
0-79	The called terminal detected CI while waiting for a V.21 signal.	 Check for line noise or other line problems. If this error occurs, the called terminal falls back to T.30 mode.
0-80	The line was disconnected due to a timeout in V.34 phase 2 – line probing.	The guard timer expired while starting these phases. Serious noise, narrow bandwidth, or low signal level can cause these errors.
0-81	The line was disconnected due to a timeout in V.34 phase 3 – equalizer training.	If these errors happen at the transmitting terminal: Try making a call at a later time. Try using V.17 or a slower modem using
0-82	The line was disconnected due to a timeout in the V.34 phase 4 – control channel start-up.	dedicated tx parameters. Try increasing the tx level. Try adjusting the tx cable equalizer setting.
0-83	The line was disconnected due to a timeout in the V.34 control channel restart sequence.	 If these errors happen at the receiving terminal: Try adjusting the rx cable equalizer setting. Try increasing the tx level. Try using V.17 or a slower modem if the same error is frequent when receiving from multiple senders.
0-84	The line was disconnected due to abnormal signaling in V.34 phase 4 – control channel start-up.	 The signal did not stop within 10 s. Turn off the main power switch, then turn it back on. If the same error is frequent, replace the FCU.
0-85	The line was disconnected due to abnormal signaling in V.34 control channel restart.	 The signal did not stop within 10 s. Turn off the main power switch, then turn it back on. If the same error is frequent, replace the FCU.

Code	Meaning	Suggested Cause/Action
0-86	The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.	 The other terminal was incompatible. Ask the other party to contact the manufacturer.
0-87	The control channel started after an unsuccessful primary channel.	 The receiving terminal restarted the control channel because data reception in the primary channel was not successful. This does not result in an error communication.
0-88	The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.	 Try using a lower data rate at the start. Try adjusting the cable equalizer setting.
2-11	Only one V.21 connection flag was received	Replace the FCU.
2-12	Modem clock irregularity	Replace the FCU.
2-13	Modem initialization error	 Turn off the machine, then turn it back on. Update the modem ROM. Replace the FCU.
2-22	Counter overflow error of JBIG chip	If error occurs frequently, change the settings for resolution, paper size, compression type.
2-23	JBIG compression or reconstruction error	Turn off the machine, then turn it back on.
2-24	JBIG ASIC error	Turn off the machine, then turn it back on.
2-25	JBIG data reconstruction error (BIH error)	JBIG data error Check the sender's JBIG function.
2-26	JBIG data reconstruction error (Float marker error)	Update the FCU ROM.
2-27	JBIG data reconstruction error (End marker error)	
2-28	JBIG data reconstruction error (Timeout)	

Code	Meaning	Suggested Cause/Action
2-29	JBIG trailing edge maker error	FCU defective Check the destination device.
2-50	The machine resets itself for a fatal FCU system error	If this is frequent, update the ROM, or replace the FCU.
2-51	The machine resets itself because of a fatal communication error	If this is frequent, update the ROM, or replace the FCU.
2-53	Snd msg() in the manual task is an error because the mailbox for the operation task is full.	The user did the same operation many times, and this gave too much load to the machine.
4-01	Line current was cut	Check the line connector.Check for line problems.Replace the FCU.
4-10	Communication failed because of an ID Code mismatch (Closed Network) or Tel. No./CSI mismatch (Protection against Wrong Connections)	 Get the ID Codes the same and/or the CSIs programmed correctly, then resend. The machine at the other end may be defective.
5-00	Data reconstruction not possible	Replace the FCU.
5-10	DCR timer expired	Replace the FCU.
5-20	Storage impossible because of a lack of memory	Temporary memory shortage. Test the SAF memory.
5-21	Memory overflow	
5-23	Print data error when printing a substitute rx or confidential rx message	 Test the SAF memory. Ask the other end to resend the message.
5-25	SAF file access error	Replace an SD card or HDD. Replace the FCU.

Code	Meaning	Suggested Cause/Action
6-00	G3 ECM - T1 time out during reception of facsimile data	Try adjusting the rx cable equalizer.Replace the FCU.
6-01	G3 ECM - no V.21 signal was received	
6-02	G3 ECM - EOR was received	
6-04	G3 ECM - RTC not detected	 Check the line connection. Check for a bad line or defective remote terminal. Replace the FCU.
6-05	G3 ECM - facsimile data frame not received within 18 s of CFR, but there was no line fail	 Check the line connection. Check for a bad line or defective remote terminal. Replace the FCU. Try adjusting the rx cable equalizer Cross reference Rx cable equalizer - G3 Switch 07 (PSTN)
6-06	G3 ECM - coding/decoding error	Defective FCU. The other terminal may be defective.
6-08	G3 ECM - PIP/PIN received in reply to PPS.NULL	 The other end pressed Stop during communication. The other terminal may be defective.
6-09	G3 ECM - ERR received	 Check for a noisy line. Adjust the tx levels of the communicating machines. See code 6-05.
6-10	G3 ECM - error frames still received at the other end after all communication attempts at 2400 bps	 Check for line noise. Adjust the tx level (use NCU parameter 01 or the dedicated tx parameter for that address). Check the line connection. Defective remote terminal.

Code	Meaning	Suggested Cause/Action
6-21	V.21 flag detected during high speed modem communication	The other terminal may be defective or incompatible.
6-22	The machine resets the sequence because of an abnormal handshake in the V.34 control channel	 Check for line noise. If the same error occurs frequently, replace the FCU. Defective remote terminal.
6-99	V.21 signal not stopped within 6 s	Replace the FCU.
13-17	SIP user name registration error	 Double registration of the SIP user name. Capacity for user-name registration in the SIP server is not sufficient.
13-18	SIP server access error	Incorrect initial setting for the SIP server.Defective SIP server.
13-24	SIP authentication error	Registered password in the device does not match the password in the SIP server.
13-25	Network I/F setting error	IPV4 is not active in the active protocol setting.IP address of the device is not registered.
13-26	Network I/F setting error at power on	 Active protocol setting does not match the I/F setting for SIP server. IP address of the device is not registered.
13-27	IP address setting error	IP address of the device is not registered.
13-28	Failed to obtain the HGW extension number	Check the HGW setting, and then remove extension numbers not being used, to make available space for obtaining extension numbers.
13-29	HGW access error	Check the HGW IP address and LAN cable connection and solve any problem.
13-30	HGW error for not being registered	Check the user settings.
13-31	An error due to lack of communication resources	

Code	Meaning	Suggested Cause/Action
13-32	An error due to disconnected communication	Check the user settings.
13-33	Capability exchange failure	The connected device may not be guaranteed by Ricoh to support connection.
13-34	An error due to connecting to a non-IP Fax device	The machine at the other end does not support IP-FAX.
13-35	A temporary error at the connected device	Check the destination device.
13-36	An error due to congestion	Contact your phone service representative.
13-37	Network error	
13-38	An error due to NGN being temporarily unavailable	
13-39	Failed to receive a response from the connected device	 Check the LAN cable connection. Check the user's connection environment and solve any problem.
13-40	Other errors	Received other SIP-related error
13-41	Fax session connection error	The connected device may not be guaranteed by Ricoh to support connection.
14-00	SMTP Send Error	Error occurred during sending to the SMTP server. Occurs for any error other than 14-01 to 16. For example, the mail address of the system administrator is not registered.
14-01	SMTP Connection Failed	 Failed to connect to the SMTP server (timeout) because the server could not be found. The PC is not ready to transfer files. SMTP server not functioning correctly. The DNS IP address is not registered. Network not operating correctly. Destination folder selection not correct.

Code	Meaning	Suggested Cause/Action
14-02	No Service by SMTP Service (421)	 SMTP server operating incorrectly, or the destination for direct SMTP sending is not correct.
		 Contact the system administrator and check that the SMTP server has the correct settings and operates correctly.
		 Contact the system administrator for direct SMTP sending and check the sending destination.
14-03	Access to SMTP Server Denied (450)	Failed to access the SMTP server because the access is denied.
		 SMTP server operating incorrectly. Contact the system administrator to determine if there is a problem with the SMTP server and to check that the SMTP server settings are correct.
		 Folder send destination is incorrect. Contact the system administrator to determine that the SMTP server settings and path to the server are correct.
		Device settings incorrect. Confirm that the user name and password settings are correct.
		 Direct SMTP destination incorrect. Contact the system administrator to determine if there is a problem at the destination at that the settings at the destination are correct.
14-04	Access to SMTP Server Denied (550)	SMTP server operating incorrectlyDirect SMTP sending not operating correctly

Code	Meaning	Suggested Cause/Action
14-05	SMTP Server HDD Full (452)	 Failed to access the SMTP server because the HDD on the server is full. Insufficient free space on the HDD of the SMTP server. Contact the system administrator and check the amount of space remaining on the SMTP server HDD.
		Insufficient free space on the HDD where the destination folder is located. Contact the system administrator and check the amount of space remaining on the HDD where the target folder is located.
		 Insufficient free space on the HDD at the target destination for SMTP direct sending. Contact the system administrator and check the amount of space remaining on the target HDD.
14-06	User Not Found on SMTP Server (551)	 The designated user does not exist. The designated user does not exist on the SMTP server. The designated address is not for use with direct SMTP sending.
14-07	Data Send to SMTP Server Failed (4XX)	 Failed to access the SMTP server because the transmission failed. PC not operating correctly. SMTP server operating incorrectly Network not operating correctly. Destination folder setting incorrect. Direct SMTP sending not operating correctly.
14-08	Data Send to SMTP Server Failed (5XX)	 Failed to access the SMTP server because the transmission failed. SMTP server operating incorrectly Destination folder setting incorrect. Direct SMTP sending not operating correctly. Software application error.

Code	Meaning	Suggested Cause/Action
14-09	Authorization Failed for Sending to SMTP Server	 POP-Before-SMTP or SMTP authorization failed. Incorrect setting for file transfer
14-10	Addresses Exceeded	Number of broadcast addresses exceeded the limit for the SMTP server.
14-11	Buffer Full	The send buffer is full so the transmission could not be completed. Buffer is full due to using Scan-to-Email while the buffer is being used send mail at the same time.
14-12	Data Size Too Large	Transmission was cancelled because the detected size of the file was too large.
14-13	Send Cancelled	Processing is interrupted because the user pressed Stop.
14-14	Security Locked File Error	Update the software because of the defective software.
14-15	Mail Data Error	 The transmitting a mail is interrupted via DCS due to the incorrect data. Update the software because of the defective software.
14-16	Maximum Division Number Error	 When a mail is divided for the mail transmission and the division number of a mail are more than the specified number, the mail transmission is interrupted. Update the software because of the defective software.
14-17	Incorrect Ticket	Update the software because of the defective software.
14-18	Access to MCS File Error	 The access to MCS file is denied due to the no permission of access. Update the software because of the defective software.
14-20	SMTP Authentication error	Make sure the administrator's e-mail address is same as the SMTP authentication address or POP before SMTP address.

Code	Meaning	Suggested Cause/Action
14-21	Transmission error of S/MIME	Register the correct user certificate and device certificate.
14-22	Destination certificate is invalid in S/MIME transmission	Register the correct destination certificate.
14-23	Device certificate is invalid in S/ MIME transmission	Register the correct device certificate.
14-24	Destination and device certificate is in valid in S/MIME	Register the correct user certificate and device certificate.
14-30	MCS File Creation Failed	 Failed to create the MCS file because: The number of files created with other applications on the Document Server has exceeded the limit. HDD is full or not operating correctly. Software error.
14-31	UFS File Creation Failed	 UFS file could not be created: Not enough space in UFS area to handle both Scan-to-Email and IFAX transmission. HDD full or not operating correctly. Software error.
14-32	Cancelled the Mail Due to Error Detected by NFAX	Error detected with NFAX and send was cancelled due to a software error.
14-33	No Mail Address For the Machine	Neither the mail address of the machine nor the mail address of the network administrator is registered.
14-34	Address designated in the domain for SMTP sending does not exist	 Operational error in normal mail sending or direct SMTP sending. Check the address selected in the address book for SMTP sending. Check the domain selection.

Code	Meaning	Suggested Cause/Action
14-50	Mail Job Task Error	Due to an FCU mail job task error, the send was cancelled:
		 Address book was being edited during creation of the notification mail.
		Software error.
14-51	UCS Destination Download Error	Not even one return notification can be downloaded: • The address book was being edited.
		The number for the specified destination does not exist (it was deleted or edited after the job was created).
14-60	Send Cancel Failed	The cancel operation by the user failed to cancel the send operation.
14-61	Notification Mail Send Failed for All Destinations	All addresses for return notification mail failed.
14-62	Transmission Error due to the existence of zero line page	When the 0 line page exists in received pages with G3 communication, the transmission is interrupted.
15-01	POP3/IMAP4 Server Not Registered	At startup, the system detected that the IP address of the POP3/IMAP4 server has not been registered in the machine.
15-02	POP3/IMAP4 Mail Account Information Not Registered	The POP3/IMAP4 mail account has not been registered.
15-03	Mail Address Not Registered	The mail address has not been registered.
15-10	DCS Mail Receive Error	• Error other than 15-11 to 15-18.
15-11	Connection Error	The DNS or POP3/IMAP4 server could not be found:
		The IP address for DNS or POP3/IMAP4 server is not stored in the machine.
		The DNS IP address is not registered.
		Network not operating correctly.

Code	Meaning	Suggested Cause/Action
15-12	Authorization Error	POP3/IMAP4 send authorization failed: Incorrect IFAX user name or password. Access was attempted by another device, such as the PC. POP3/IMAP4 settings incorrect.
15-13	Receive Buffer Full	Occurs only during manual reception. Transmission cannot be received due to insufficient buffer space. The buffer is being used for mail send or Scan-to-Email.
15-14	Mail Header Format Error	The mail header is not standard format. For example, the Date line description is incorrect.
15-15	Mail Divide Error	The e-mail is not in standard format. There is no boundary between parts of the e-mail, including the header.
15-16	Mail Size Receive Error	The mail cannot be received because it is too large.
15-17	Receive Timeout	May occur during manual receiving only because the network is not operating correctly.
15-18	Incomplete Mail Received	Only one portion of the mail was received.
15-31	Final Destination for Transfer Request Reception Format Error	The format of the final destination for the transfer request was incorrect.
15-39	Send/Delivery Destination Error	The transmission cannot be delivered to the final destination: • Destination file format is incorrect.
		Could not create the destination for the file transmission.
15-41	SMTP Receive Error	Reception rejected because the transaction exceeded the limit for the "Auth. E-mail RX" setting.
15-42	Off Ramp Gateway Error	The delivery destination address was specified with Off Ramp Gateway OFF.

Code	Meaning	Suggested Cause/Action
15-43	Address Format Error	Format error in the address of the Off Ramp Gateway.
15-44	Addresses Over	The number of addresses for the Off Ramp Gateway exceeded the limit of 30.
15-50	NFAX: Text part-related error	Check the received mail.Update the software.
15-60	NFAX: FIFF file-related error	Check the TIFF file attached to the mail Update the software.
15-61	Attachment File Format Error	The attached file is not TIFF format.
15-62	TIFF File Compatibility Error	 Could not receive transmission due to: Resolution error Image of resolution greater than 200 dpi without extended memory. Resolution is not supported. Page size error The page size was larger than A3. Compression error File was compressed with other than MH, MR, or MMR.
15-63	TIFF Parameter Error	The TIFF file sent as the attachment could not be received because the TIFF header is incorrect: • The TIFF file attachment is a type not supported. • The TIFF file attachment is corrupted. • Software error.
15-64	TIFF Decompression Error	The file received as an attachment caused the TIFF decompression error: • The TIFF format of the attachment is corrupted. • Software error.
15-71	Not Binary Image Data	The file could not be received because the attachment was not binary image data.

Code	Meaning	Suggested Cause/Action
15-73	MDN Status Error	Could not find the Disposition line in the header of the Return Receipt, or there is a problem with the firmware.
15-74	MDN Message ID Error	 Could not find the Original Message ID line in the header of the Return Receipt, or there is a problem with the firmware.
15-80	Mail Job Task Read Error	Could not receive the transmission because the destination buffer is full and the destination could not be created (this error may occur when receiving a transfer request or a request for notification of reception).
15-81	Repeated Destination Registration Error	Could not repeat receive the transmission because the destination buffer is full and the destination could not be created (this error may occur when receiving a transfer request or a request for notification of reception).
15-91	Send Registration Error	Could not receive the file for transfer to the final destination:
		The format of the final destination or the transfer destination is incorrect.
		Destinations are full so the final and transfer destinations could not be created.
15-92	Memory Overflow	Transmission could not be received because memory overflowed during the transaction.
15-93	Memory Access Error	Transaction could not complete due to a malfunction of SAF memory.
15-94	Incorrect ID Code	The machine rejected an incoming e-mail for transfer request, because the ID code in the incoming e-mail did not match the ID code registered in the machine.
15-95	Transfer Station Function	The machine rejected an incoming e-mail for transfer because the transfer function was unavailable.

Code	Meaning	Suggested Cause/Action
16-00	NCS: A network error to a device with an option to connect to a fax machine.	Register the IP address Connect to a network.
22-00	Original length exceeded the maximum scan length	 Divide the original into more than one page. Check the resolution used for scanning. Lower the scan resolution if possible. Add optional page memory.
22-01	Memory overflow while receiving	 Wait for the files in the queue to be sent. Delete unnecessary files from memory. Transfer the substitute reception files to an another fax machine, if the machine's printer is busy or out of order. Add an optional SAF memory card or hard disk.
22-02	Tx or rx job stalled due to line disconnection at the other end	 The job started normally but did not finish normally; data may or may not have been received fully. Restart the machine.
22-03	The hard disk for cache is full during fax reception.	Replace the HDD. Replace the FCU.
22-04	The machine cannot store received data in the SAF	Update the ROM Replace the FCU.
22-05	No G3 parameter confirmation answer	Defective FCU board or firmware.
23-00	Data read timeout during construction	Restart the machine. Replace the FCU.
25-00	The machine software resets itself after a fatal transmission error occurred	Update the ROM Replace the FCU.

Code	Meaning	Suggested Cause/Action
31-00	Remote printer capacity (transfer mode) not matching	 The other terminal is incompatible. Capability mismatch
31-01	Remote printer capacity (compression format) not matching	
31-02	Remote printer capacity (page memory capacity) not matching	
31-03	Remote printer capacity (resolution) not matching	
31-04	Remote printer capacity (paper size) not matching	
31-05	Remote printer capacity (emulation) not matching	
31-06	RP-A header error	 BFT file format error BFT file accumulation error A bug detected in the RP-A1 header-search algorithm for BFT files Check the FCU board/Printer board/Driver
31-07	Remote printer capacity (RPCS language version connection criteria) not matching	The other terminal is incompatible. Capability mismatch
31-20	Memory has run out during PC fax storage.	 Check the memory capacity. Wait for the file in the queue to be sent. Add an optional SAF memory (if available for this model).
31-21	Operation cancelled during PC fax storage	-
31-22	FCU error during PC fax storage	Replace the FCU.
31-23	Other errors during PC fax storage	Replace the controller board.
31-24	Check sum error during PC fax storage	Retry. Replace the FCU.

Code	Meaning	Suggested Cause/Action
32-00	Merged reception data error	 The other terminal is incompatible. Check the memory capacity.
F0-xx	V.34 modem error	Replace the FCU.
F6-xx	SG3 modem error	 Update the SG3 modem ROM. Replace the SG3 board. Check for line noise or other line problems. Try communicating with another V.8/V.34 fax machine.

IFAX Troubleshooting

Use the following procedures to determine whether the machine or another part of the network is causing the problem.

Communication Route	ltem	Action [Remarks]
General LAN	1. Connection with the LAN	 Check that the LAN cable is connected to the machine. Check that the LEDs on the hub are lit.
	2. LAN activity	Check that other devices connected to the LAN can communicate through the LAN.
Between IFAX and PC	1. Network settings on the PC	Check the network settings on the PC. [Is the IP address registered in the TCP/IP properties in the network setup correct? Check the IP address with the administrator of the network.]
	2. Check that PC can connect with the machine	Use the "ping" command on the PC to contact the machine. [At the MS-DOS prompt, type ping then the IP address of the machine, then press Enter.]
	3. LAN settings in the machine	Check the LAN parameters Check if there is an IP address conflict with other PCs. [Use the "Network" function in the User Tools. If there is an IP address conflict, inform the administrator.]

Communication Route	ltem	Action [Remarks]
Between machine and e-mail server	1. LAN settings in the machine	Check the LAN parameters Check if there is an IP address conflict with other PCs. [Use the "Network" function in the User Tools. If there is an IP address conflict, inform the administrator.]
	2. E-mail account on the server	 Make sure that the machine can log into the e-mail server. Check that the account and password stored in the server are the same as in the machine. [Ask the administrator to check.]
	3. E-mail server	Make sure that the client devices which have an account in the server can send/receive e-mail. [Ask the administrator to check. Send a test e-mail with the machine's own number as the destination. The machine receives the returned e-mail if the communication is performed successfully.]

Communication Route	ltem	Action [Remarks]
Between e-mail server and internet	E-mail account on the Server	Make sure that the PC can log into the e- mail server.
		Check that the account and password stored in the server are the same as in the machine.
		[Ask the administrator to check.]
	2. E-mail server	Make sure that the client devices which have an account in the server can send/ receive e-mail.
		[Ask the administrator to check.
		Send a test e-mail with the machine's own number as the destination. The machine receives the returned e-mail if the communication is performed successfully.]
	3. Destination e-mail address	Make sure that the e-mail address is actually used.
		Check that the e-mail address contains no incorrect characters such as spaces.
	4. Router settings	Use the "ping" command to contact the router.
		Check that other devices connected to the router can sent data over the router.
		[Ask the administrator of the server to check.]
	5. Error message by e-mail from the network of the destination.	Check whether e-mail can be sent to another address on the same network, using the application e-mail software.
		Check the error e-mail message.
		[Inform the administrator of the LAN.]

3

IP-Fax Troubleshooting

IP-Fax Transmission

Cannot send by IP Address/Host Name

	Check Point	Action
1	LAN cable connected?	Check the LAN cable connection.
2	Specified IP address/host name correct?	Check the IP address/host name.
3	Firewall/NAT is installed?	Cannot breach the firewall. Send by using another method (Fax, Internet Fax)
4	Transmission sent manually?	Manual sending not supported.
5	IP address of local machine registered?	Register the IP address.
6	Remote terminal port number setting other than 1720 (when using H.323) or 5060 (when using SIP)?	Send by specifying the port number.
7	Specified port number correct?	Confirm the port number of the remote fax.
8	DNS server registered when host name specified?	Contact the network administrator.
9	Remote fax a T.38 terminal?	Check whether the remote fax is a T38 terminal.
10	Remote fax switched off or busy?	Check that the remote fax is switched on.
		Request the network administrator to increase the bandwidth.
11	Network bandwidth too narrow?	Raise the delay level. IPFAX SW 01 Bit 0 to 3
		IP-Fax bandwidth is the same as the DCS speed. Set IP-Fax SW00 Bit 6 to 1.
12	Remote fax cancelled transmission?	Check whether the remote fax cancelled the transmission.

3

Cannot send via VoIP Gateway

	Check Point	Action
1	LAN cable connected?	Check the LAN cable connection.
2	VoIP Gateway T.38 standard?	Contact the network administrator.
3	VoIP Gateway installed correctly?	Contact the network administrator.
4	VoIP Gateway power switched on?	Contact the network administrator.
5	Is the IP address/host name of the specified Gateway correct?	Check the IP address/host name.
6	Number of the specified fax correct?	Check the remote fax number.
7	Firewall/NAT is installed?	Cannot breach the firewall. Send by using another method (Fax, Internet Fax)
8	Transmission sent manually?	Manual sending not supported.
9	IP address of local fax registered?	Register the IP address.
10	DNS registered when host name specified?	Contact the network administrator.
11	Remote fax a G3 fax?	Check that the remote fax is a G3 fax.
12	G3 fax is connected to VoIP gateway?	Check that G3 fax is connected.
13	Remote G3 fax turned on?	Check that G3 fax is switched on.
		Request the network administrator to increase the bandwidth.
14	Network bandwidth too narrow?	Raise the network delay level. IPFAX SW 01 Bit 0 to 3
		IP-Fax bandwidth is the same as the DCS speed. Set IP-Fax SW00 Bit 6 to 1.

Cannot send by Alias Fax number.

Check Point		Action
1	LAN cable connected?	Check the LAN cable connection.

2	Number of specified Alias fax correct?	Confirm the Alias of the remote fax. Error Code: 13-14
3	Firewall/NAT installed?	Cannot breach the firewall. Send by using another method (Fax, Internet Fax)
4	Transmission sent manually?	Manual sending not supported.
5	Gatekeeper/SIP server installed correctly?	Contact the network administrator.
6	Gatekeeper/SIP server power switched on?	Contact the network administrator.
7	IP address/host name of Gatekeeper/SIP server correct?	Check the IP address/host name.
8	DNS server registered when Gatekeeper/SIP server host name specified?	Contact the network administrator.
9	Enable H.323/Enable SIP SW is set to on?	Check the settings. See User Parameter SW 34 Bit 0/SW 34 Bit 1
10	IP address of local fax registered?	Register the IP address of the local fax.
11	Alias number of local fax registered?	Register the Alias number of the local fax.
12	Remote fax registered in Gatekeeper?	Contact the network administrator.
13	Remote fax a T.38 terminal?	Check whether the remote fax is a T38 terminal.
14	Remote fax switched off or busy?	Contact the network administrator.
	Network bandwidth too narrow?	Request the system administrator to increase the bandwidth.
15		Raise the delay level. IPFAX SW 01 Bit 0 to 3
		Lower the modem transmission baud rate. IPFAX SW 05
16	Remote fax cancelled transmission?	Check whether the remote fax cancelled the transmission.

IP-Fax Reception

Cannot receive via IP Address/Host Name.

	Check Point	Action
1	LAN cable connected?	Check the LAN cable connection.
2	Firewall/NAT is installed?	Cannot breach the firewall. Send by using another method (Fax, Internet Fax)
3	IP address of local fax registered?	Register the IP address.
4	Port number specified at remote sender fax (if required)?	Request the sender to specify the port number.
5	Specified port number correct (if required)?	Request the sender to check the port number.
6	DNS server registered when host name specified on sender side?	Contact the network administrator. Note The sender machine displays this error code if the sender fax is a Ricoh model.
7	Network bandwidth too narrow?	Request the system administrator to increase the bandwidth. Lower the start modem reception baud rate on
		the receiving side. IPFAX SW06
8	Remote fax cancelled transmission?	Check whether the remote fax cancelled the transmission.

Cannot receive by VoIP Gateway.

	Check Point	Action
1	LAN cable connected?	Check the LAN cable connection.
2	Firewall/NAT is installed?	Cannot breach the firewall. Request the remote fax to send by using another method (Fax, Internet Fax)

3	VoIP Gateway installed correctly?	Contact the network administrator.
4	VoIP Gateway power switched on?	Contact the network administrator.
5	IP address/host name of specified VoIP Gateway correct on sender's side?	Request the remote fax to check the IP address/ host name.
6	DNS server registered when host name specified on sender side?	Contact the network administrator.
7	Network bandwidth too narrow?	Request the network administrator to increase the bandwidth.
8	G3 fax connected?	Check that G3 fax is connected.
9	G3 fax power switched on?	Check that G3 fax is switched on.

Cannot receive by Alias Fax number.

	Check Point	Action
1	LAN cable connected?	Check the LAN cable connection.
2	Firewall/NAT is installed?	Cannot the breach firewall. Request the remote fax to send by using another method (Fax, Internet Fax)
3	Gatekeeper/SIP server installed correctly?	Contact the network administrator. Note The sender machine displays this error code when the sender fax is a Ricoh model.
4	Power to Gatekeeper/SIP server switched on?	Contact the network administrator. Note The sender machine displays this error code when the sender fax is a Ricoh model.
5	IP address/host name of Gatekeeper/SIP server correct on the sender's side?	Request the sender to check the IP address/host name. Note The sender machine displays this error code when the sender fax is a Ricoh model.

6	DNS server registered when Gatekeeper/SIP server host name specified on sender's side?	Contact the network administrator. Note The sender machine displays this error code when the sender fax is a Ricoh model.
7	Enable H.323/Enable SIP SW is set to on?	Request the sender to check the settings. User Parameter SW 34 Bit 0/SW 34 Bit 1 Note Only if the remote sender fax is a Ricoh fax.
8	Local fax IP address registered?	Register the IP address.
9	Local fax Alias number registered?	Register the Alias number.
		Request the system administrator to increase the bandwidth.
10	Network bandwidth too narrow?	Lower the start modem reception baud rate on the receiving side. IPFAX SW06
11	Remote fax cancelled transmission?	Check whether the remote fax cancelled the transmission.
12	Local fax registered in Gatekeeper/SIP server?	Contact the network administrator. Note The sender machine displays this error code when the sender fax is a Ricoh model.

4. Service Tables

Cautions

Mportant !

Never turn off the main power switch when the power LED is lit or flashing. To avoid damaging the
hard disk or memory, press the operation power switch to switch the power off, wait for the power
LED to go off, and then switch the main power switch off.



The main power LED lights or flashes while the platen cover or ARDF is open, while the main
machine is communicating with a facsimile or the network server, or while the machine is accessing
the hard disk or memory for reading or writing data.

Service Program Tables

SP1-XXX (Bit Switches)

1	Mode No.		Function	
	System Switch			
101	001 – 032	00 – 1F	Change the bit switches for system settings for the fax option p.68 "Bit Switches - 1"	
	Ifax Switch			
102	001 – 016	00 – 0F	Change the bit switches for internet fax settings for the fax option • p.81 "I-Fax Switches"	
	Printer Switch			
103	001 – 016	00 – 0F	Change the bit switches for printer settings for the fax option p.88 "Printer Switches"	
	Communication Switch			
104	001 – 032	00 – 1F	Change the bit switches for communication settings for the fax option p.95 "Bit Switches - 3"	
	G3-1 Switch			
105	001 – 016	00 – 0F	Change the bit switches for the protocol settings of the standard G3 board p.104 "Bit Switches - 4"	
	IP fax Switch			
111	001 – 016	00 – 0F	Change the bit switches for optional IP fax parameters p.113 "Bit Switches - 6"	

4

SP2-XXX (RAM Data)

2	Mode No.		Function
101	RAM Read/Write		
101	001		Change RAM data for the fax board directly.
102	Memory Dump		
102	001	G3-1 Memory Dump	Print out RAM data for the fax board.
	G3-1 NCU Pa	urameters	
103	001 – 023	CC, 01 – 22	NCU parameter settings for the standard G3 board. p.123 "NCU Parameters"

SP3-XXX (Tel Line Settings)

3	Mode No.		Function
101	Service Station	1	
101	001	Fax Number	Enter the fax number of the service station.
102	Serial Number	Γ	
102	000		Enter the fax unit's serial number.
	PSTN-1 Port S	ettings	
	001	Select Line	Select the line type setting for the G3-1 line. If the machine is installed on a PABX line, select "PABX", "PABX(GND)" or "PABX(FLASH)".
103	002	PSTN Access Number	Enter the PSTN access number for the G3-1 line.
	003	Memory Lock Disabled	Not used

	IPFAX Port Settings		
	001	H323 Port	Sets the H323 port number.
	002	SIP Port	Sets the SIP port number.
	003	RAS Port	Sets the RAS port number.
107	004	Gatekeeper port	Sets the Gatekeeper port number.
	005	T.38 Port	Sets the T.38 port number.
	006	SIP Server Port	Sets the SIP port number.
	007	IPFAX Protocol Priority	Select "H323" or "SIP".
201	FAX SW		
	001 – 032	00 – 1F	

SP4-XXX (ROM Versions)

4	Mode No.		Function
101	001	FCU ROM Version	Displays the FCU ROM version.
102	001	Error Codes	Displays the latest 64 fax error codes.
103	001	G3-1 ROM Version	Displays the G3-1 modem version.

SP5-XXX (RAM Clear)

5	Mode No.	Function	
Initialize SRAM (Except Secure)		pt Secure)	
101	000	Initializes the bit switches and user parameters, user data in the SRAM, files in the SAF memory, and clock.	
100	Erase All Files		
102	000	Erases all files stored in the SAF memory.	

100	Reset Bit Switches (Except Secure)		
103	000	Resets the bit switches and user parameters.	
	Factory Setting		
104	000	Resets the bit switches and user parameters, user data in the SRAM and files in the SAF memory.	
105	Reset All Bit Switches		
105	000	Resets all the current bit switch settings.	
	Reset Security Bit Swit	ches	
106	000	Resets only the security bit switches. If you select automatic output/display for the user parameter switches, the security settings are initialized.	

SP6-XXX (Reports)

6	Mode No.		Function
101	System Parameter List		
	000	-	Touch the "ON" button to print the system parameter list.
102	Service Monitor Report		
	000	-	Touch the "ON" button to print the service monitor report.
	G3 Protocol Dump List		
103	002	G3-1 (All Communications)	Prints the protocol dump list of all communications for the G3-1 line.
	003	G3-1 (1 Communication)	Prints the protocol dump list of the last communication for the G3-1 line.

	All Files print out		
105	000	-	Prints out all the user files in the SAF memory, including confidential messages. Note
			Do not use this function, unless the customer is having trouble printing confidential messages or recovering files stored using the memory lock feature.
	Journal Print out		
106	001	All Journals	The machine prints all the communication records on the report.
	002	Specified Date	The machine prints all communication records after the specified date.
	Log List Print out		
	001	All log files	
	002	Printer	These log print out functions are for designer use only.
	003	SC/TRAP Stored	
	004	Decompression	
	005	Scanner	
107	006	JOB/SAF	
107	007	Reconstruction	
	008	JBIG	
	009	Fax Driver	
	010	G3CCU	
	011	Fax Job	
	012	CCU	
	013	Scanner Condition	

	IP Protocol Dump List		
108	001	All Communications	Prints the protocol dump list of all communications for the IP fax line.
	002	1 Communication	Prints the protocol dump list of the last communication for the IP fax line.

SP7-XXX (Tests)

These are the test modes for PTT approval.

7	Function
101	G3-1 Modem Tests
102	G3-1 DTMF Tests
103	Ringer Test
104	G3-1 V34 (S2400baud)
105	G3-1 V34 (S2800baud)
106	G3-1 V34 (S3000baud)
107	G3-1 V34 (S3200baud)
108	G3-1 V34 (S3429baud)
109	Recorded Message Test

Bit Switches - 1



• Do not adjust a bit switch or use a setting that is described as "Not used", as this may cause the machine to malfunction or to operate in a manner that is not accepted by local regulations. Such bits are for use only in other areas, such as Japan.

Default settings for bit switches are not listed in this manual. Refer to the System Parameter List printed by the machine.

System Switches

System Switch 00 (SP No. 1-101-001)		
No	Function	Comments
0	Dedicated transmission parameter programming 0: Disabled 1: Enabled	Set this bit to 1 before changing any dedicated transmission parameters. This setting is automatically reset to "O" after turning off and on.
2	Technical data printout on the Journal 0: Disabled 1: Enabled	1: Instead of the personal name, the following data are listed on the Journal for each G3 communication.

4

Example:

0000 32V34 288/264 L0100 03 04

- (1) (2)(3) (4) (5) (6) (7)(8)
- (1): EQM value (Line quality data). A larger number means more errors.
- (2): Symbol rate (V.34 only)
- (3): Final modem type used
- (4): Starting data rate (for example, 288 means 28.8 kbps)
- (5): Final data rate
- (6): Rx revel (see below for how to read the rx level)
- (7): Total number of error lines that occurred during non-ECM reception.
- (8): Total number of burst error lines that occurred during non-ECM reception.



- EQM and rx level are fixed at "FFFF" in tx mode.
- The seventh and eighth numbers are fixed at "00" for transmission records and ECM reception records.

Rx level calculation

Example:

0000 32V34 288/264 L0100 03 04 (1) (2)(3) (4) (5) (6) (7) (8)

The four-digit hexadecimal value (N) after "L" indicates the rx level.

The **high** byte is given first, followed by the **low** byte. Divide the decimal value of N by -16 to get the rx level.

In the above example, the decimal value of N (= 0100 [H]) is 256.

So, the actual rx level is 256/-16 = -16 dB


4	Line error mark print 0: OFF, 1: ON (print)	When "1" is selected, a line error mark is printed on the printout if a line error occurs during reception. This shows error locations when ECM is turned off.
5	G3/G4 communication parameter display 0: Disabled 1: Enabled	This is a fault-finding aid. The LCD shows the key parameters (see "G3 Communication Parameters" below this table). This is normally disabled because it cancels the CSI display for the user. Be sure to reset this bit to "O" after testing.

4

Protocol dump list output after each communication 0: Off 1: On	This is only used for communication troubleshooting. It shows the content of the transmitted facsimile protocol signals. Always reset this bit to 0 after finishing testing. If system switch 09 bit 6 is at "1", the list is only printed if there was an error during the communication.
---	--

G3 Communication Parameters

	336: 33600 bps 168: 16800 bps
	312: 31200 bps 144: 14400 bps
	288: 28800 bps 120: 12000 bps
Modem rate	264: 26400 bps 96: 9600 bps
	240: 24000 bps 72: 7200 bps
	216: 21600 bps 48: 4800 bps
	192: 19200 bps 24: 2400 bps
	S: Standard (8 x 3.85 dots/mm)
Resolution	D: Detail (8 x 7.7 dots/mm)
Resolution	21: Standard (200 x 100 dpi)
	22: Detail (200 x 200 dpi)
	MMR: MMR compression
	MR: MR compression
Compression mode	MH: MH compression
	JBO: JBIG compression (Optional mode)
	JBB: JBIG compression (Basic mode)
Commission	ECM: With ECM
Communication mode	NML: With no ECM
	A4: A4 (8.3"), no reduction
Width and reduction	B4: B4 (10.1"), no reduction
	A3: A3 (11.7"), no reduction

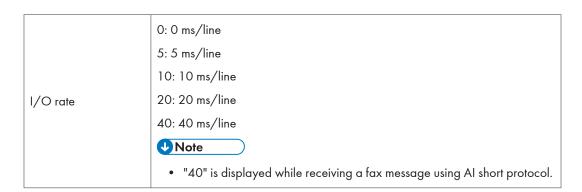

		02 (SP No. 1-101-003)		
No	Function			Comments
2	Forced reset after transmission stalls 0: Off 1: On		er transmission stalls	With this setting on, the machine resets itself automatically if a transmission stalls and fails to complete the job.
4	File retention time 0: Depends on User Parameter 24 [18(H)] 1: No limit			1: A file that had a communication error will not be erased unless the communication is successful.
	Memory read/write by RDS		write by RDS	(0,0): All RDS systems are always locked out.
	Bit 7	Bit 6	Setting	(0,1), (1,0): Normally, RDS systems are locked out, but the user can temporarily switch RDS on to allow
	0	0	Always disabled	RDS operations to take place. RDS will automatically
6-7	0	1	User selectable	be locked out again after a certain time, which is stored in System Switch 03. Note that if an RDS
	1	0	User selectable	operation takes place, RDS will not switch off until this time limit has expired.
	1 1 Always enabled		Always enabled	(1,1): At any time, an RDS system can access the machine.

System Switch 03 (SP No. 1-101-004)			
No	Function	Comments	

0	Length of time that RDS is	00 - 99 hours (BCD).
to	temporarily switched on when bits 6	This setting is only valid if bits 6 and 7 of System Switch 02 are set to "User selectable". The default setting is 24 hours.
		The delduit selling is 24 hours.

System Switch 04 (SP No. 1-101-005)			
No	Function	Comments	
3	Printing dedicated tx parameters on Quick/Speed Dial Lists 0: Disabled 1: Enabled	1: Each Quick/Speed dial number on the list is printed with the dedicated tx parameters (10 bytes each). The first 10 bytes of data are the programmed dedicated tx parameters; 34 bytes of data are printed (the other 24 bytes have no use for service technicians).	

	System Switch 09 (SP No. 1-101-010)			
No	Function	Comments		
0	Addition of image data from confidential transmissions on the transmission result report O: Disabled 1: Enabled	If this feature is enabled, the top half of the first page of confidential messages will be printed on transmission result reports.		
1	Print timing of communication reports on the Journal when no image data was exchanged. O: After DCS/NSS communication (default), 1: After polling	O: The Journal is printed only when image data is sent. 1: The Journal is printed when any data is sent.		
2	Automatic error report printout 0: Disabled 1: Enabled	O: Error reports will not be printed. 1: Error reports will be printed automatically after failed communications.		
3	Printing of the error code on the error report 0: No 1: Yes	This can be used for detecting an error which occurs rarely.		

4	Not used	Do not change this setting.
5	Power failure report O: Disabled 1: Enabled (default)	1: A power failure report will be automatically printed after the power is switched on if a fax message disappeared from the memory when the power was turned off last. Note If "0" is selected, no reports are printed and no one may recognize that fax data is gone due to a power failure.
6	Conditions for printing the protocol dump list O: Print for all communications 1: Print only when there is a communication error	This switch becomes effective only when system switch 00 bit 6 is set to 1. 1: Set this bit to 1 when you wish to print a protocol dump list only for communications with errors. Note • The memory size is limited. Use this bit switch only when some log reports are necessary.
7	Priority given to various types of remote terminal ID when printing reports O: RTI > CSI > Dial label > Tel. number 1: Dial label > Tel. number > RTI > CSI	This bit determines which set of priorities the machine uses when listing remote terminal names on reports. Dial Label: The name stored, by the user, for the Quick/Speed Dial number.

System Switch OA (SP No. 1-101-011)				
No	Function	Comments		
0	Automatic port selection O: Disabled, 1: Enabled	When "1" is selected, a suitable port is automatically selected if the selected port is not used. • Note • This bit is useful if all communication lines at a customer site are not the same quality.		

4	Dialing on the ten-key pad when the external telephone is off-hook O: Disabled 1: Enabled	O: Prevents dialing from the ten-key pad while the external telephone is off-hook. Use this setting when the external telephone is not by the machine, or if a wireless telephone is connected as an external telephone. 1: The user can dial on the machine's ten-key pad when the handset is off-hook.
5	On hook dial O: Disabled 1: Enabled	0: On hook dial is disabled.

System Switch OE (SP No. 1-101-015)			
No	Function	Comments	
2	Enable/disable for direct sending selection O: Direct sending off 1: Direct sending on	Direct sending cannot operate when the capture function is on during sending. Setting this switch to "1" enables direct sending without capture. Setting this switch to "0" masks the direct sending function on the operation panel so direct sending with	
	Action when the external handset goes off-hook	O: Manual tx is possible while the external handset is off-hook. However, manual tx during handset off-hook may not be sent to a correct direction. Manual	
3	0: Manual tx and rx operation 1: Memory tx and rx operation (the display remains the same)	tx is not possible. 1: The display stays in standby mode even when the external handset is used, so that other people can use the machine for memory tx operation. Note that manual tx and rx are not possible with this setting.	

System Switch OF (SP No. 1-101-016)				
No Function Comments				

	Country/area co	ode for functional settings	
	00: France	12: Asia	
	01: Germany 02: UK 03: Italy	13: Japan	
		14: Hong Kong	
		15: South Africa	
	04: Austria	16: Australia	This country/area code determines the factory
	05: Belgium 06: Denmark	17: New Zealand	settings of bit switches and RAM addresses. However, it has no effect on the NCU parameter settings and communication
		18: Singapore	
0	07: Finland	19: Malaysia	parameter RAM addresses. Cross reference
to 7	08: Ireland 1A: China 09: Norway 1B: Taiwan 0A: Sweden 1C: Korea 0B: Switz. 1D: Brazil 0C: Portugal 20: Turkey	1A: China	NCU country code: SP No. 2-103-001 for G3-1
		1B: Taiwan	
		1C: Korea	
		1 D: Brazil	
		20: Turkey	
	0D: Holland	21: Greece	
	0E: Spain	22: Hungary	
	OF: Israel	23: Czech	
	10:	24: Poland	
	11: USA		

System Switch 10 (SP No. 1-101-017)			
No Function		Comments	
0-7	Threshold memory level for parallel memory transmission	Threshold = N x 128 KB + 256 KB N can be between 00 - FF(H) Default setting: 02(H) = 512 KB	

	System Switch 11 (SP No. 1-101-018)			
No	Function	Comments		
0	TTI printing position 0: Superimposed on the page data 1: Printed before the data leading edge	Change this bit to 1 if the TTI overprints information that the customer considers to be important (G3 transmissions). • Note • If "1" is selected, it is possible that sent data is printed on two sheets of paper.		
1	CIL printing position 0: Superimposed on the page data 1: Printed before the data leading edge	Change this bit to 1 if the CIL overprints information that the customer considers to be important (G3 transmissions).		
3	TTI used for broadcasting 0: The TTIs selected for each Quick/ Speed dial are used 1: The same TTI is used for all destinations	1: The TTI (TTI_1 or TTI_2) which is selected for all destinations during broadcasting.		
7	G4 quick memory data sending 0: Disabled 1: Enabled	Change this bit to 1 when sending G4 quick memory data.		

System Switch 12 (SP No. 1-101-019)			
No	Function	Comments	
		TTI: 08 to 92 (BCD) mm Input even numbers only. This setting determines the print start position for the	
0-7	TTI printing position in the main scan direction	TTI from the left edge of the paper. If the TTI is moved too far to the right, it may overwrite the file number which is on the top right of the page. On an A4 page, if the TTI is moved over by more than 50 mm, it may overwrite the page number.	

System Switch 15 (SP No. 1-101-022)		
No	Function	Comments

1	Going automo 0: Enak 1: Disa	atically oled	inergy Saver mode	1: The machine will restart from the Energy Saver mode quickly, because the +5V power supply is active even in the Energy Saver mode. The LED of the operation switch is flashing instead of entering Energy Saver mode. Use this setting if an external telephone has to be used when the machine is in the Energy Saver mode.
	Interval for preventing the machine from entering Energy Saver mode if there is a pending transmission file.		nergy Saver mode if	If there is a file waiting for transmission, the machine
	Bit 5	Bit 4	Setting	does not go to Energy Saver mode during the selected period. After transmitting the file, if there is no file waiting for transmission, the machine goes to the Energy Saver mode.
4-5	0	0	1 min	
	0	1	30 min	
	1	0	1 hour	inioue.
	1 1 24 hours		24 hours	

	System Switch 16 (SP No. 1-101-023)			
No	Function	Comments		
0	Parallel Broadcasting 0: Disabled 1: Enabled	1: The machine sends messages simultaneously using all available ports during broadcasting. • Note • If a customer wants to keep a line available for fax reception or other reasons, select "0" (Disable).		
1	Priority setting for the G3 line. 0: PSTN-1 > PSTN-2 or 3 1: PSTN-2 or 3 > PSTN-1	This function allows the user to select the default G3 line type. The optional SG3 units are required to use the PSTN-2 or 3 setting.		

System Switch 19 (SP No. 1-101-026)		
No	Function	Comments

6	Extended scanner page memory after memory option is installed 0: Disabled 1: Enabled	O: After installing the memory expansion option, the scanner page memory is extended to 4 MB from 2 MB. 1: If this bit is set to 1 after installing the memory expansion option, the scanner page memory is extended to 12 MB. But the SAF memory decreases to 18 MB.
7	Special Original mode 0: Disabled 1: Enabled	1: If the customer frequently wishes to transmit a form or letterhead which has a colored or printed background, change this bit to "1". "Original 1" and "Original 2" can be selected in addition to the "Text", "Text/Photo" and "Photo" modes.

System Switch 1A (SP No. 1-101-027)			
No	lo Function Comments		
0 to 7	LS RX memory capacity threshold setting 00-FF (0-1020 Kbyte: Hex)	Sets the value to x4KB. When the amount of available memory drops below this setting, RX documents are printed to conserve memory. Initial setting 0x80 (512 KB)	
		 If a customer wants available memory size to be larger, decrease this threshold. 	

System Switch 1D (SP No. 1-101-030)			
No Function Comments			
0	RTI/CSI/CPS code display 0: Enable 1: Disable	O: RTI, CSI, CPS codes are displayed on the top line of the LCD panel during communication. 1: Codes are switched off (no display)	

System Switch 1E (SP No. 1-101-031)		
No	Function	Comments

0	Communication after the Journal data storage area has become full 0: Impossible 1: Possible	O: When this switch is on and the journal history becomes full, the next report prints. If the journal history is not deleted, the next transmission cannot be received. This prevents overwriting communication records before the machine can print them. 1: If the buffer memory of the communication records for the Journal is full, fax communications are still possible. But the machine will overwrite the oldest communication records. • This setting is effective only when Automatic Journal printout is enabled but the machine cannot print the report (e.g., no paper).
1	Action when the SAF memory has become full during scanning 0: The current page is erased. 1: The entire file is erased.	O: If the SAF memory becomes full during scanning for a memory transmission, the successfully scanned pages are transmitted. 1: If the SAF memory becomes full during scanning for a memory transmission, the file is erased and no pages are transmitted. • This setting is effective only when Automatic Journal printout is enabled but the machine cannot print the report (e.g., no paper).
2	RTI/CSI display priority 0: RTI 1: CSI	This bit determines which identifier, RTI or CSI, is displayed on the LCD while the machine is communicating in G3 non-standard mode.
3	File No. printing 0: Enabled 1: Disabled	1: File numbers are not printed on any reports. Note • The file numbers may not be printed in the sequential order. If a customer does not like this numbering, select "O".

4	Action when authorized reception is enabled but authorized RTIs/CSIs are not yet programmed O: Faxes can be received if the sender has an RTI or CSI 1: All fax reception is disabled	O: If the user has stored no acceptable sender RTIs or CSIs, the user can select "ON" in the authorized reception setting but the setting becomes invalid ("OFF"). The machine will not be able to receive any fax messages. If the customer wishes to receive messages from any sender that includes an RTI or CSI, and to block messages from senders that do not include an RTI or CSI, change this bit to "O", then enable Authorized Reception. Otherwise, keep this bit at "1 (default setting)".
---	---	---

System Switch 1F (SP No. 1-101-032)			
No	Function	Comments	
1	Report printout after an original jam during SAF storage or if the SAF memory fills up 0: Enabled 1: Disabled	O: When an original jams, or the SAF memory overflows during scanning, a report will be printed. Change this bit to "1" if the customer does not want to have a report in these cases. Memory tx – Memory storage report Parallel memory tx – Transmission result report	
3	Received fax print start timing (G3 reception) 0: After receiving each page 1: After receiving all pages	O: The machine prints each page immediately after the machine receives it. 1: The machine prints the complete message after the machine receives all the pages in the memory.	
4	Received fax print start timing (G4 reception) 0: After receiving each page 1: After receiving all pages	O: The machine prints each page immediately after the machine receives it. 1: The machine prints the complete message after the machine receives all the pages in the memory.	
7	Action when a fax SC has occurred 0: Automatic reset 1: Fax unit stops	O: When the fax unit detects a fax SC code other than SC1201 and SC1207, the fax unit automatically resets itself. 1: When the fax unit detects any fax SC code, the fax unit stops.	

Bit Switches - 2



• Do not adjust a bit switch or use a setting that is described as "Not used", as this may cause the machine to malfunction or to operate in a manner that is not accepted by local regulations. Such bits are for use only in other areas, such as Japan.

Default settings for bit switches are not listed in this manual. Refer to the System Parameter List printed by the machine.

I-Fax Switches

I-fax Switch 00 (SP No. 1-102-001)			
No	Function	Comments	
Original Width of TX Attachment File		This setting sets the maximum size of the original that the destination can receive. (Bits 3~7 are reserved for future use or not used.)	
0	A4		
1	B4		
2	A3	-	
3-6 Reserved			

0: Off (not selected), 1: On (selected)

If more than one of these three bits is set to "1", the larger size has priority. For example, if both Bit 2 and Bit 1 are set to "1" then the maximum size is "A3" (Bit 2).

When mail is sent, there is no negotiation with the receiving machine at the destination, so the sending machine cannot make a selection for the receiving capabilities (original width setting) of the receiving machine. The original width selected with this switch is used as the RX machine's original width setting, and the original is reduced to this size before sending. The default is A4.

If the width selected with this switch is higher than the receiving machine can accept, the machine detects this and this causes an error.

I-fax Switch 01 (SP No. 1-102-002)			
No	Function	Comments	

Original Line Resolution of TX Attachment File		These settings set the maximum resolution of the original that the destination can receive.	
0	200x100 Standard		
1	200x200 Detail	0: Not selected	
2	200x400 Fine	1: Selected	
3	300 x 300 Reserve	If more than one of these three bits is set to "1", the	
4	400 x 400 Super Fine	higher resolution has priority. For example, if both 0 and Bit 2 are set to "1" Then The Resolution is se	
5	600 x 600 Reserve	"Bit 2 200 x 400.	
6	Reserve		
7	mm/inch		

This setting selects mm/inch conversion for mail transmission.

0: Off (No conversion), 1: On (Conversion)

When on (set to "1"), the machine converts millimeters to inches for sending mail. There is no switch for converting inches to millimeters.

Unlike G3 fax transmissions which can negotiate between sender and receiver to determine the setting, mail cannot negotiate between terminals; the mm/inch selection is determined by the sender fax.

When this switch is Off (0):

- Images scanned in inches are sent in inches.
- Images scanned in mm are sent in mm.
- Images received in inches are transmitted in inches.
- Images received in mm are transmitted in mm.

When this switch is On (1):

- Images scanned in inches are sent in inches.
- Images scanned in mm are converted to inches.
- Images received in inches are transmitted in inches.
- Images received in mm are converted to inches.

I-fax Switch 02 (SP No. 1-102-003)			
No	Function	Comments	

RX Text Mail Header Processing This setting determines whether the header information is printed with text e-mails when they are received. O: Prints only text mail. 0 1: Prints mail header information attached to text mail. When a text mail is received with this switch On (1), the "From" address and "Subject" address are printed as header information. When a mail with only binary data is received (a TIFF-F file, for example), this setting is ignored and no header is printed. Output from Attached Document at E-mail TX Error This setting determines whether only the first page or all pages of an e-mail attachment are printed at the sending station when a transmission error occurs. This allows the customer to 1 see which documents have not reached their intended destinations if sent to the wrong e-mail addresses, for example. 0: Prints 1st page only. 1: Prints all pages.

Text String for Return Receipt

This setting determines the text string output for the Return Receipt that confirms the transmission was received normally at the destination.

00: "Dispatched"

Sends from PC mail a request for a Return Receipt. Receives the Return Receipt with "dispatched" in the 2nd part:

Disposition: Automatic-action/MDN-send automatically; dispatched

The "dispatched" string is included in the Subject string.

2-3 01: "Displayed"

Sends from PC mail a request for a Return Receipt. Receives the Return Receipt with "displayed" in the 2nd part:

Disposition: Automatic-action/MDN-send automatically; displayed

The "displayed" string is included in the Subject string.

10: Reserved

11: Reserved

A mail requesting a Return Receipt sent from an IFAX with this switch set to "00" (for "dispatched") received by Microsoft Outlook 2000 may cause an error. If any setting other than "displayed" (01) causes a problem, change the setting to "01" to enable normal sending of the Return Receipt.

Media accept feature

This setting adds or does not add the media accept feature to the answer mail to confirm a reception.

4 0: Does not add the media accept feature to the answer mail

1: Adds the media accept feature to the answer mail.

Use this bit switch if a problem occurs when the machine receives an answer mail, which contains the media accept feature field.

Image Resolution of RX Text Mail

This setting determines the image resolution of the received mail.

7 0: 200 x 200

1:400 x 400

The "1" setting requires installation of the Memory Unit in order to have enough SAF (Store and Forward) memory to receive images at 400×400 resolution.

I-fax Switch 04 (SP No. 1-102-005)					
No	Function	Comments			
	Subject for Delivery TX/Memory Transfer				
	This setting determines whether the RTI originator is used in the subject lines o	/CSI registered on this machine or the RTI/CSI of the ftransferred documents.			
0	O: Puts the RTI/CSI of the originator in the Subject line. If this is used, either the RTI or CSI is used. Only one of these can be received for use in the subject line.				
	1: Puts the RTI/CSI registered on this r	nachine in the Subject line.			
	When this switch is used to transfer and deliver mail to a PC, the information in the Subject line that indicates where the transmission originated can be used to determine automatically the destination folder for each e-mail.				
	Subject corresponding to mail post database				
	0: Standard subject				
	1: Mail post database subject				
	The standard subject is replaced by the mail post database subject in the following three cases:				
1	1) When the service technician sets the service (software) switch.				
1	2) When memory sending or delivery specified by F code is applied by the SMTP server				
	3) With relay broadcasting (1 st stage without the Schmidt 4 function).				
	₩ Note				
	 This switch does not apply for condition 3) when the RX system is set up for memory sending, delivery by F-code, sending with SMTP RX and when operators are using FOL (to prevent problems when receiving transmissions). 				

I-fax Switch 05 (SP No. 1-102-006)			
No	Function	Comments	

	Mail Addresses of SMTP Broadcast Recipients
	Determines whether the e-mail addresses of the destinations that receive transmissions broadcasted using SMTP protocol are recorded in the Journal.
0	For example:
	"1st destination + Total number of destinations: 9" in the Journal indicates a broadcast to 9 destinations.
	0: Not recorded
	1: Recorded
	IFAXTX Retries
1	Determines whether the machine retries sending IFAX when connection and transmission fails due to errors.
	0: Disabled
	1: Enabled

I-fax Switch 08 (SP No. 1-102-009)				
No	No Function Comments			
0-7	Memory Threshold for POP Mail Reception			
	This setting determines the amount of SAF (Store and Forward) memory. (SAF stores fax messages to send later for transmission to more than one location, and also holds incoming messages if they cannot be printed.) When the amount of SAF memory available falls below this setting, mail can no longer be received; received mail is then stored on the mail server.			
	00-FF (0 to 1024 KB: HEX)			
	The hexadecimal number you enter is multiplied by 4 KB to determine the amount of memory.			

I-fax Switch 09 (SP No. 1-102-010)			
No Function Comments			
4-7	Restrict TX Retries	This setting determines the number of retries when connection and transmission fails due to errors. O1-F (1-15 Hex)	

I-fax Switch 0D (SP No. 1-102-014)			
No Function		Comments	

	Set to select the signature when sending mail notification of the send results.		-	
	Bit 2	Bit 3	Setting	
2-3	0	0	No sign	In response to IEEE2600.1.
	0	1	No setting Individual setting	
	1	0		
	1	1	Always sign	
	Set to select the signature when sending mail.		ature when sending mail.	
	Bit 5	Bit 4	Setting	
4-5	0	0	No sign	In room once to IEEE2400 1
4-3	0	1	No setting	In response to IEEE2600.1.
	1	0	Individual setting	
	1	1	Always sign	

I-fax Switch OF (SP No. 1-102-016)				
No	o Function Comments			
	Delivery Method for SMTP RX Files			
0	This setting determines whether files received with SMTP protocol are delivered or output immediately.			
	0: Off. Files received via SMTP are output immediately without delivery.			
	1: On. Files received via SMTP are delivered immediately to their destinations.			
1	Set to select the signature when receiving SMTP mail.			
	0: No sign			
	1: Always sign			
	Set to encrypt the data when receiving	g SMTP mail.		
2	0: No encryption			
	1: Encryption			

Printer Switches

Printer Switch 00 (SP No. 1-103-001)			
No	Function	Comments	
	Select page separation marks 0: Off 1: On	O: If a 2 page RX transmission is split, [*] is printed in the bottom right corner of the 1st page and only a [2] is printed in the upper right corner of the 2nd page.	
0		1: If a 2 page RX transmission is split into two pages, for example, [*] [2] is printed in the bottom right corner of the 1st page and only a [2] is printed in the upper right corner of the 2nd page. Note	
		This helps the user to identify pages that have been split because the size of the paper is smaller than the size of the document received. (When A5 is used to print an A4 size document, for example.)	
1	Repetition of data when the received page is longer than the printer paper 0: Off 1: On	1: Default. 10 mm of the trailing edge of the previous page are repeated at the top of the next page. 0: The next page continues from where the previous page stopped without any repeated text.	
2	Prints the date and time on received fax messages O: Disabled 1: Enabled	This switch is only effective when user parameter 02 - bit 2 (printing the received date and time on received fax messages) is enabled. 1: The machine prints the received and printed date and time at the bottom of each received page.	

Printer Switch 01 (SP No. 1-103-002)

	Maximum print width used in the setup protocol			
3-4	Bit 4	Bit 3	Setting	
	0	0	Not used	These bits are only effective when bit 7 of printer switch 01 is "1".
	0	1	А3	switch OT is "T".
	1	0	B4	
	1	1	A4	
	Received message width restriction in the protocol signal to the sender			O: The machine informs the transmitting machine of the print width depending on the paper size available from the paper feed stations.
_				in the protocol signal to the sender Refer to the table on the next page for how the
7	0: Disable			machine chooses the paper width used in the setup protocol (NSF/DIS).
	1: Enable	d		1: The machine informs the transmitting machine of the fixed paper width which is specified by bits 3 and 4 above.

Relationship between available paper sizes and printer width used in the setup protocol

Available Paper Size	Printer width used in the Protocol (NSF/DIS)
A4 or 8.5" x 11"	297 mm width
B5	256 mm width
A5 or 8.5" x 5.5"	216 mm width
No paper available (Paper end)	216 mm width

	Printer Switch (02 (SP No. 1-103-003)
No	Function	Comments

0	1 st paper feed station usage for fax printing 0: Enabled 1: Disabled	
1	2nd paper feed station usage for fax printing 0: Enabled 1: Disabled	O: The paper feed station can be used to print fax messages and reports. 1: The specified paper feed station will not be used
2	3rd paper feed station usage for fax printing 0: Enabled 1: Disabled	for printing fax messages and reports. Note Do not disable usage for a paper feed station which has been specified by User Parameter
3	4th paper feed station usage for fax printing 0: Enabled 1: Disabled	Switch OF (15), or which is used for the Specified Cassette Selection feature.
4	LCT usage for fax printing 0: Enabled 1: Disabled	

	Printer Switch 03 (SP No. 1-103-004)			
No	Function	Comments		
		0: Incoming pages are printed without length reduction.		
0	Length reduction of received data O: Disabled	(Page separation threshold: Printer Switch 03, bits 4 to 7)		
	1: Enabled	I: Incoming page length is reduced when printing. (Maximum reducible length: Printer Switches 04, bits 0 to 4)		

Page separation threshold (with reduction disabled with switch 03-0 above).

Page separation setting when sub scan compression is forbidden

O0-0F (0-15 mm: Hex)

Default: 6 mm

Page separation threshold (with reduction disabled with switch 03-0 above).

For example, if this setting is set to "10", and A4 is the selected paper size:

If the received document is 10 mm or less longer than A4, then the 10 mm are cut and only 1 page prints.

If the received document is 10 mm longer than A4, then the document is split into 2 pages.

		Printer S	Switch 04 (SP N	o. 1-103-005)		
No		Function	Comments			
	Maximum red	ucible length wh	en length reduct	ion is enabled w	vith switch 03-0	above.
	[Maximum red	lucible length] =	[Paper length] +	(N x 5mm)		
	"N" is the deci	mal value of the	binary setting of	bits 0 to 4.		
	Bit 4	Bit 3	Bit 2	Bit 1	Bit O	Setting
0	0	0	0	0	0	0 mm
to 4	0	0	0	0	1	5 mm
·	0	0	1	0	0	20 mm
	1	1	1	1	1	155 mm
	For A5 sideways and B5 sideways paper					
	[Maximum reducible length] = [Paper length] + $0.75 \times (N \times 5mm)$					
	Length of the duplicated image on the next page, when page separation has taken place.					aken place.
	Bi	Bit 6		Bit 5		tting
5	(0	0		4 mm	
6	(0	1		10 mm	
		1	()	15 mm	
		1	1	l	Not	used

Printer Switch 06 (SP No. 1-103-007)

No	Function	Comments		
	Printing while a paper cassette is pulled out, when the Just Size Printing feature is enabled.			
0	0: Printing will not start	Cross reference		
O	1: Printing will start if another cassette has a suitable size of paper, based on the paper size selection priority tables.	Just size printing on/off – User switch 05, bit 5		

	Printer Switch 07 (SP No. 1-103-008)		
No	Function	Comments	
4	List of destinations in the Communication Failure Report for broadcasting 0: All destinations 1: Only destinations where communication failure occurred	Only destinations where communication failure occurred are printed on the Communication Failure Report.	

	Printer Switch 0E (SP No. 1-103-015)		
No	Function	Comments	
	Paper size selection priority	O: A paper size that has the same width as the received data is selected first.	
0	0: Width 1: Length	1: A paper size which has enough length to print all the received lines without reduction is selected first.	
1	Paper size selected for printing A4 width fax data 0: 8.5" x 11" size 1: A4 size	This switch determines which paper size is selected for printing A4 width fax data, when the machine has both A4 and 8.5" x 11" size paper.	

Printing	the same		
	'	ole image on reports	
Bit 4	Bit 3	Setting	"Same size" means the sample image is printed
0	0	The upper half only	at 100%, even if page separation occurs.
0	1	50% reduction (sub-scan only)	User Parameter Switch 19 (13H) bit 4 must be set to "0" to enable this switch. Refer to Detailed Section Descriptions for more
1	0	Same size	on this feature.
1	1	Not used	
Equalizing the reduction ratio among separated pages (Page Separation) O: Enabled 1: Disabled			O: When page separation has taken place, all the pages are reduced with the same reduction ratio. 1: Only the last page is reduced to fit the selected paper size when page separation has taken place. Other pages are printed without
	0 0 1 1 Equalizing separation (Page Society) 0: Enab	0 0 0 1 1 0 1 1 Equalizing the reseparated page (Page Separated	O O The upper half only O 1 50% reduction (sub-scan only) 1 O Same size 1 1 Not used Equalizing the reduction ratio among separated pages (Page Separation) O: Enabled

		Printer	o. 1-103-016)	
No		Function		Comments
	Smoothing fea	ture		
	Bit 1	Bit O	Setting	
0.1	0	0	Disabled	(0, 0) (0, 1): Disable smoothing if the
0-1	0	1	Disabled	machine receives halftone images from other manufacturers fax machines frequently.
	1	0	Enabled	
	1	1	Not used	

2	Duplex printing 0: Disabled 1: Enabled	1: The machine always prints received fax messages in duplex printing mode:
3	Binding direction for Duplex printing 0: Left binding 1: Top binding	O: Sets the binding for the left edge of the stack. 1: Sets the binding for the top of the stack.

Bit Switches - 3



• Do not adjust a bit switch or use a setting that is described as "Not used", as this may cause the machine to malfunction or to operate in a manner that is not accepted by local regulations. Such bits are for use only in other areas, such as Japan.

Default settings for bit switches are not listed in this manual. Refer to the System Parameter List printed by the machine.

Communication Switches

		Со	mmunication Switch 00 (SP	No. 1-104-001)
No	Function			Comments
	Compression modes available in receive mode			
	Bit 1	Bit 1 Bit 0 Modes		
0.1	0	0	MH only	These bits determine the compression
0-1	0	1	MH/MR	capabilities to be declared in phase B (handshaking) of the T.30 protocol.
	1	0	MH/MR/MMR	
	1	1	MH/MR/MMR/JBIG	
	Compression modes available in transmit mode			
	Bit 3	Bit 2	Modes	
0.0	0	0	MH only	These bits determine the compression capabilities to be used in the
2-3	0	1	MH/MR	transmission and to be declared in phase B (handshaking) of the T.30 protocol.
	1	0	MH/MR/MMR	b (fluitustidking) of the 1.30 prolocol.
	1	1	MH/MR/MMR/JBIG	
	JBIG compression method: Reception		thod: Reception	
5	O: Only basic supported 1: Basic and optional both supported			Change the setting when communication problems occur using JBIG compression.

6	JBIG compression method: Transmission 0: Basic mode priority 1: Optional mode priority	Change the setting when communication problems occur using JBIG compression.
7	Closed network (reception) O: Disabled 1: Enabled	1: Reception will not go ahead if the polling ID code of the remote terminal does not match the polling ID code of the local terminal. This function is only available in NSF/NSS mode.

		C	ommunication Sw	vitch 01 (SP No. 1-104-002)
No	Function		on	Comments
0	ECM 0: Off 1: On			If this bit is set to 0, ECM is switched off for all communications. In addition, V.8 protocol and JBIG compression are switched off automatically.
	Wrong connection prevention method		revention	(0,1): The machine will disconnect the line without sending a fax message, if the last 8 digits of the
	Bit 3	Bit 2	Setting	received CSI do not match the last 8 digits of the dialed telephone number. This does not work when
	0	0	None	manually dialed.
	0	1	8 digit CSI	(1,0): The same as above, except that only the last 4 digits are compared.
2-3	1	0	4 digit CSI	(1,1): The machine will disconnect the line without
	1	1	CSI/RTI	sending a fax message, if the other end does not identify itself with an RTI or CSI.
				(0,0): Nothing is checked; transmission will always go ahead.
				◆ Note
				This function does not work when dialing is done from the external telephone.

	Maximum printable page length available		e page length	
	Bit 7	Bit 6	Setting	
6-7	0	0	No limit	The setting determined by these bits is informed to the transmitting terminal in the pre-message protocol
	exchange (in the DIS/NSF frames).			
	1	0	A4 (297 mm)	
	1	1	Not used	

	Communication Switch 02 (SP No. 1-104-003)				
No	Function		Comments		
	G3 Burst error threshold	received pag will send a ne threshold valu	ore consecutive error lines in the e than the threshold, the machine egative response. The Low and High ues depend on the sub-scan d are as follows.		
0	0: Low 1: High	100 dpi	6(L) →12(H)		
		200 dpi	12(L) →24(H)		
		300 dpi	18(L) →36(H)		
		400 dpi	24(L) →48(H)		
1	Acceptable total error line ratio 0: 5% 1: 10%		e ratio for a page exceeds the tio, RTN will be sent to the other		
2	Treatment of pages received with errors during G3 reception 0: Deleted from memory without printing 1: Printed	0: Pages rece	ived with errors are not printed.		

3	Hang-up decision when a negative code (RTN or PIN) is received during G3 immediate transmission O: No hang-up, 1: Hang-up	O: The next page will be sent even if RTN or PIN is received. 1: The machine will send DCN and hang up if it receives RTN or PIN. This bit is ignored for memory transmissions or if ECM is being used.
---	--	---

	Communication Switch 03 (SP No. 1-104-004)			
No	Function	Comments		
0-7	Maximum number of page retransmissions in a G3 memory transmission	00 - FF (Hex) times. This setting is not used if ECM is switched on. Default setting - 03(H)		

	Communication Switch 04 (SP No. 1-104-005)			
No	Function	Comments		
0	Remote mode switch (TEL mode) 0: Disable 1: Enable (Active)	Set this bit to ON when you wish to switch TEL mode to FAX mode remotely.		
1	Remote mode switch (FAX mode) 0: Disable 1: Enable (Active)	Set this bit to ON when you wish to turn on the remote mode switch after automatic reception with FAX mode.		
2	Remote mode switch (AUTO mode) 0: Disable 1: Enable (Active)	Set this bit to ON when you wish to turn on the remote mode switch after automatic reception with AUTO mode.		

	Communication Switch 05 (SP No. 1-104-006)			
No	Function	Comments		
0-3	Remote mode switch number 00-09 (0-9:HEX)	Enter the number to switch between TEL/FAX modes using the external phone.		

	Communication Switch 07 (SP No. 1-104-008)			
No	Function	Comments		
0	G3/G4 auto route selection 0: Disable 1: Enable	Select whether to change the route to G4 to G3 when G4 communication failed.		
4	G3/G4 auto route selection (when communication failed) 0: Disable 1: Enable	If there is a switching system error, select whether to switch the route to G4 to G3.		

	Communication Switch 09 (SP No. 1-104-009)			
No	Function	Comments		
0-7	Minimum interval between automatic dialing attempts	This value is the minimum time that the machine waits before it dials the next destination.		

Communication Switch OA (SP No. 1-104-011)			
No Function Comments			
0	Point of resumption of memory transmission upon redialing	O: The transmission begins from the page where transmission failed the previous time.	
	0: From the error page	1: Transmission begins from the first page, using	
	1: From page 1	normal memory transmission.	

Communication Switch OB (SP No. 1-104-012)				
No	No Function Comments			
4	Printout of the message when acting as a Transfer Station O: Disabled, 1: Enabled	When the machine is acting as a Transfer Station, this bit determines whether the machine prints the fax message coming in from the Requesting Terminal.		

Communication Switch OD (SP No. 1-104-014)		
No	Function	Comments

0-7	The available memory threshold, below which ringing detection (and therefore reception into memory) is disabled	00 to FF (Hex), unit = 4 kbytes (e.g., 06(H) = 24 kbytes) One page is about 24 kbytes. The machine refers to this setting before each fax reception. If the amount of remaining memory is below this threshold, the machine cannot receive any fax messages. If this setting is kept at 0, the machine will detect ringing signals and go into receive mode even if there is no memory available. This will result in communication
		signals and go into receive mode even if there is no memory available. This will result in communication failure.

	Communication Switch OE (SP No. 1-104-015)			
No	No Function Comments			
0-7	Minimum interval between automatic dialing attempts	06 to FF (Hex), unit = 2 s (e.g., 06(H) = 12 s) This value is the minimum time that the machine waits before it dials the next destination.		

	Communication Switch 10 (SP No. 1-104-017)			
No	Function	Comments		
0-7	Memory transmission: Maximum number of dialing attempts to the same destination	01 – FE (Hex) times		

	Communication Switch 12 (SP No. 1-104-019)		
No	Function	Comments	
0-7	Memory transmission: Interval between dialing attempts to the same destination	01 – FF (Hex) minutes	

Communication Switch 14 (SP No. 1-104-021)		
No	Function	Comments

0	Inch-to-mm conversion during transmission O: Disabled, 1: Enabled			O: In immediate transmission, data scanned in inch format are transmitted without conversion. In memory transmission, data stored in the SAF memory in mm format are transmitted without conversion. Note: When storing the scanned data into SAF memory, the fax unit always converts the data into mm format.
				1: The machine converts the scanned data or stored data in the SAF memory to the format which was specified in the set-up protocol (DIS/NSF) before transmission.
	Available unit of resolution in which fax messages are received			
	Bit 7	Bit 6	Unit	For the best performance, do not change the factory settings.
6-7	0	0	mm	The setting determined by these bits is
	0	1	inch	informed to the transmitting terminal in the pre- message protocol exchange (in the DIS/NSF
	1	0	mm and inch	frames).
	1	1	Not used	

	Communication Switch 17 (SP No. 1-104-024)			
No	Function	Comments		
0	SEP reception O: Disabled 1: Enabled	O: Polling transmission to another maker's machine using the SEP (Selective Polling) signal is disabled.		
1	SUB reception O: Disabled 1: Enabled	O: Confidential reception to another maker's machine using the SUB (Sub-address) signal is disabled.		
2	PWD reception 0: Disabled 1: Enabled	O: Disables features that require PWD (Password) signal reception.		

3-4	Not used	Do not change the settings.
5	PSTN dial-in routing setting 0: OFF 1: ON	1: The machine sets multiple PSTN dial-in numbers in the PSTN dial-in line and transfers received data from each PSTN dial-in number to each address.
6	Not used	Do not change the settings.
7	Action when there is no box with an F-code that matches the received SUB code	
	0: Disconnect the line	Change this setting when the customer requires.
	1: Receive the message	
	(using normal reception mode)	

	Communication Switch 18 (SP No. 1-104-025)			
No	Function	Comments		
5	IP-Fax dial-in routing selection 0: Off 1: On	1: Transfers received data to each IP-Fax dial-in number. IP-Fax dial-in number is a 4-digit number.		
6	PSTN 2 dial-in routing 0: Off 1: On	Enables or disables dial-in routing for the PSTN 2 connection.		
7	PSTN 3 dial-in routing 0: Off 1: On	Enables or disables dial-in routing for the PSTN 3 connection.		

	Communication Switch 1B (SP No. 1-104-028)			
No Function Comments		Comments		
0-7	Extension access code (0 to 7) to turn V.8 protocol On/Off 0: On 1: Off	If the PABX does not support V.8/V.34 protocol procedure, set this bit to "1" to disable V.8. Example: If "0" is the PSTN access code, set bit 0 to 1. When the machine detects "0" as the first dialed number, it automatically disables V.8 protocol. (Alternatively, if "3" is the PSTN access code, set bit 3 to 1.)		

	Communication Switch 1C (SP No. 1-104-029)			
No	Function	Comments		
0-1	Extension access code (8 and 9) to turn V.8 protocol On/Off 0: On 1: Off	Refer to communication switch 1B. Example: If "8" is the PSTN access code, set bit 0 to 1. When the machine detects "8" as the first dialed number, it automatically disables V.8 protocol. (If "9" is the PSTN access code, use bit 1.)		

Bit Switches - 4



• Do not adjust a bit switch or use a setting that is described as "Not used", as this may cause the machine to malfunction or to operate in a manner that is not accepted by local regulations. Such bits are for use only in other areas, such as Japan.

Default settings for bit switches are not listed in this manual. Refer to the System Parameter List printed by the machine.

G3 Switches

	G3 Switch 00 (SP No. 1-105-001)		
No	Function	Comments	
2	Monitor speaker during memory transmission O: Disabled 1: Enabled	1: The monitor speaker is enabled during memory transmission.	
6	Dedicated G3 line mode selection 0: OFF 1: ON (Dedicated)	Set this bit to 1 when you wish to dedicate a line for G3.	
10	Transmission line monitor 00: OFF 01: ON (as far as the recipients) 10: ON (all transmissions) 11: Reserved	Select the monitorable distance for transmissions.	

	G3 Switch 01 (SP No. 1-105-002)		
No Function Comments			
4	DIS frame length 0: 10 bytes 1: 4 bytes	1: The bytes in the DIS frame after the 4th byte will not be transmitted (set to 1 if there are communication problems with PC-based faxes which cannot receive the extended DIS frames).	

4

/ / / / / / / / / / / / / / / / /		Forbid CED/AMsam output	Do not change this setting (Default: 0: Off), unless	
	6	0: Off 1: On (Forbid output)	communication problem is caused by a CED or ANSam transmission.	

G3 Switch 02 (SP No. 1-105-003)			
No Function Comments			
0	G3 protocol mode used O: Standard and non-standard 1: Standard only	Change this bit to 1 only when the other end can only communicate with machines that send T.30-standard frames only. 1: Disables NSF/NSS signals (these are used in non-standard mode communication)	
7	Short preamble 0: Disabled 1: Enabled	Refer to Appendix B in the Group 3 Facsimile Manual for details about Short Preamble.	

	G3 Switch 03 (SP No. 1-105-004)		
No Function		Comments	
0	DIS detection number (Echo countermeasure)	O: The machine will hang up if it receives the same DIS frame twice.	
0	0: 1 1: 2	1: Before sending DCS, the machine will wait for the second DIS which is caused by echo on the line.	
2	V.8 protocol 0: Disabled 1: Enabled	O: V.8/V.34 communications will not be possible. Note Do not set to 0 unless the line condition is always bad enough to slow down the data rate to 14.4 kbps or lower.	
3	ECM frame size 0: 256 bytes 1: 64 bytes	Keep this bit at "O" in most cases.	

4	CTC transmission conditions 0: After one PPR signal received 1: After four PPR signals received (ITU-T standard)	O: When using ECM in non-standard (NSF/NSS) mode, the machine sends a CTC to drop back the modem rate after receiving a PPR, if the following condition is met in communications at 14.4, 12.0, 9.6, and 7.2 kbps. √NTransmit≤NRe send NTransmit-Number of transmitted frames NResend- Number of frames to be retransmitted 1: When using ECM, the machine sends a CTC to drop back the modem rate after receiving four PPRs. PPR, CTC: These are ECM protocol signals. This bit is not effective in V.34 communications.
5	Modem rate used for the next page after receiving a negative code (RTN or PIN) O: No change 1: Fallback	1: The machine's tx modem rate will fall back before sending the next page if a negative code is received. This bit is ignored if ECM is being used.
7	Select detection of reverse polarity in ringing 0: Off 1: On	This switch is used to prevent reverse polarity in ringing on the phone line (applied to PSTN-G3 ringing). Do not change this setting 0: No detection 1: Detection (Japan and Korea only)

G3 Switch 04 (SP No. 1-105-005)			
No	Function	Comments	
0-3	Training error detection threshold	0 - F (Hex); 0 - 15 bits If the number of error bits in the received TCF is below this threshold, the machine informs the sender that training has succeeded.	

	G3 Switch 05 (SP No. 1-105-006)		
No	Function	Comments	

	Initial Tx	modem ro	ate (kbps)		
	Bit 3	Bit 2	Bit 1	Bit O	kbps	
	0	0	0	1	2.4	
	0	0	1	0	4.8	
	0	0	1	1	7.2	
	0	1	0	0	9.6	These bits set the initial starting modem rate for
	0	1	0	1	12.0	transmission.
	0	1	1	0	14.4	Use the dedicated transmission parameters if you need to change this for specific receivers.
0-3	0	1	1	1	16.8	If a modem rate 14.4 kbps or slower is
	1	0	0	0	19.2	selected, V.8 protocol should be disabled manually.
	1	0	0	1	21.6	Cross reference
	1	0	1	0	24.0	V.8 protocol on/off - G3 switch 03, bit 2
	1	0	1	1	26.4	
	1	1	0	0	28.8	
	1	1	0	1	31.2	
	0	0	1	1	33.6	
	Other se	ttings - No	ot used			
	Initial ma	odem type	for 9.6 k	or 7.2 kl	ops.	
	Bit 5	Bit 4		Setting		
4-5	0	0		V.29		These bits set the initial modem type for 9.6 and 7.2 kbps, if the initial modem rate is set at these
4-3	0	1		V.17		speeds.
	1	0		V.34		
	1	1		Not use	d	

	G3 Switch 06 (SP No. 1-105-007)				
No	Function	Comments			

	Initial Rx	modem ro	ite(kbps)			
	Bit 3	Bit 2	Bit 1	Bit O	kbps	
	0	0	0	1	2.4	
	0	0	1	0	4.8	
	0	0	1	1	7.2	
	0	1	0	0	9.6	These bits set the initial starting modem rate for reception.
	0	1	0	1	12.0	Use a lower setting if high speeds pose
0-3	0	1	1	0	14.4	problems during reception.
0-3	0	1	1	1	16.8	If a modem rate 14.4 kbps or slower is selected, V.8 protocol should be disabled manually. Cross reference V.8 protocol on/off - G3 switch 03, bit2
	1	0	0	0	19.2	
	1	0	0	1	21.6	
	1	0	1	0	24.0	
	1	0	1	1	26.4	
	1	1	0	0	28.8	
	1	1	0	1	31.2	
	Other se	ttings - No	t used			

Modem types available for reception

The setting of these bits is used to inform the transmitting terminal of the available modem type for the machine in receive mode.

If V.34 is not selected, V.8 protocol must be disabled manually.

Cross reference

Other settings - Not used

V.8 protocol on/off - G3 switch 03, bit 2

	Bit 7	Bit 6	Bit 5	Bit 4	Types
4-7	0	0	0	1	V.27ter
	0	0	1	0	V.27ter, V.29
	0	0	1	1	V.27ter, V.29, V.33
	0	1	0	0	V.27ter, V.29, V.17/V.33
	0	1	0	1	V.27ter, V.29, V.17/V33, V.34

G3 Switch 07 (SP No. 1-105-008) No **Function** Comments PSTN cable equalizer Use a higher setting if there is signal loss at higher frequencies because of the length of (tx mode: Internal) wire between the modem and the telephone Bit 1 Bit O Setting exchange. Use the dedicated transmission parameters for 0 0 None specific receivers. 0 1 low Also, try using the cable equalizer if one or 0-1 more of the following symptoms occurs. 1 0 Medium Communication error 1 1 High Modem rate fallback occurs frequently. **U** Note • This setting is not effective in V.34 communications.

	PSTN cable equalizer (rx mode: Internal)			Use a higher setting if there is signal loss at higher frequencies because of the length of wire between the modem and the telephone
	Bit 3	Bit 2	Setting	exchange.
	0	0	None	Also, try using the cable equalizer if one or more of the following symptoms occurs.
2-3	0	1	Low	Communication error with error codes such as
	1	0	Medium	0-20, 0-23, etc.
	1	1	High	Modem rate fallback occurs frequently. • Note
				This setting is not effective in V.34 communications.
4	PSTN cable equalizer (V.8/V.17 rx mode: External) 0: Disabled 1: Enabled			Keep this bit at "1".
	Parameter sele	ection for dial t	one	O: This uses the fixed table in the ROM for dial tone detection.
6	detection			1: This uses the specific parameter adjusted
	0: Normal pa			with SRAM (69ECBEH - 69ECDEH). Select this if the dial tone cannot be detected when the "Normal parameter: 0" is selected.

	G3 Switch 0A (SP No. 1-105-011)						
No			Function	Comments			
		m allow	able carrier drop during				
	Bit 1	Bit O	Value (ms)	These bits set the acceptable modem carrier			
0-1	0	0	200	drop time.			
	0	1	400	Try a longer setting if error code 0-22 is frequent.			
	1	0	800				
	1 1 Not used		Not used				

2	Select cancellation of high-speed RX if carrier signal lost while receiving 0: Off 1: On	This switch setting determines if high-speed receiving ends if the carrier signal is lost when receiving during non-ECM mode
4	Maximum allowable frame interval during image data reception. 0: 5 s 1: 13 s	This bit set the maximum interval between EOL (end-of-line) signals and the maximum interval between ECM frames from the other end. Try using a longer setting if error code 0-21 is frequent.

	G3 Switch 0C (SP No. 1-105-013)						
No	Function	Comments					
	Select detection of DTMF/DP detection when using remote switch.	This setting determines how to detect the signals from the handset when remote switch is active.					
4-5	00: DTMF+PSTN (Simultaneous detection)						
	01: DTMF						
	10: DP (10PPPS)						
	11: DP (20PPS)						

	G3 Switch 0E (SP No. 1-105-015)					
No	Function	Comments				
	Set CNG send time interval Some machines on the receiving side may not be able to automatically switch the 3-second CNG interval.					
0-7	High order bit	3000-2250ms: 3000-50xNms 3000 - 50 x Nms 0F (3000 ms) <= N <= FF (2250 ms)				
	Low order bit	00-0E(3000-3700ms: 3000+50xNms 3000 - 50 x Nms 0F (3000 ms) <= N <= 0F (3700 ms)				

G3 Switch OF (SP No. 1-105-016)

No	Function	Comments
0	Alarm when an error occurred in Phase C or later 0: Disabled 1: Enabled	If the customer wants to hear an alarm after each error communication, change this bit to "1".
1	Alarm when the handset is off- hook at the end of communication 0: Disabled 1: Enabled	If the customer wants to hear an alarm if the handset is off-hook at the end of fax communication, change this bit to "1".
4	Sidaa manual calibration setting 0: Off 1: On	manually calibrates for communication with a line whose current change occurs such as an optical fiber line.

Bit Switches - 6



• Do not adjust a bit switch or use a setting that is described as "Not used", as this may cause the machine to malfunction or to operate in a manner that is not accepted by local regulations. Such bits are for use only in other areas, such as Japan.

Default settings for bit switches are not listed in this manual. Refer to the System Parameter List printed by the machine.

IP Fax Switches

	IP Fax Switch 00 (SP No. 1-111-001)				
No.	Function	Comments			
0	Not used	Do not change this setting.			
1	IP Fax Transport 0: TCP, 1: UDP	Selects TCP or UDP protocol for IP-Fax			
2	IP Fax single port selection 0: OFF, 1: ON (enable)	Selects single data port.			
3	IP Fax double ports (single data port) selection 0: OFF, 1: ON (enable)	Selects whether IP-Fax uses a double port.			
4	IP Fax Gatekeeper 0: OFF, 1: ON (enable)	Enables/disables the gatekeeper for IP-Fax.			
5	IP Fax T30 bit signal reverse 0: LSB first, 1: MSB first	Reverses the T30 bit signal.			
6	IP Fax max bit rate setting O: Not affected, 1: Affected	When "0" is selected, the max bit rate does not affect the value of the DIS/DCS. When "1" is selected, the max bit rate affects the value of the DIS/DCS.			

		When "0" is selected, fax data is received without checking the telephone number.
7	IP Fax received telephone number confirmation	When "1" is selected, fax data is received only when confirming that the telephone number from
	0: No confirmation, 1: Confirmation	the sender matches the registered telephone number in this machine. If this confirmation fails, the line is disconnected.

	IP Fax Switch 01 (SP No. 1-111-002)						
No.	Function				Comments		
	IP Fax delay level setting Selects the acceptable delay level. Level 0 is the highest quality Default is "0000" (level 0).						
0-3	Bit 3	Bit 2	Bit 1	Bit O			
	0	0	0	0	Level 0		
	0	0	0	1	Level 1		
	0	0	1	0	Level 2		
	0	0	1	1	Level 3		
4-7	IP Fax preamble wait time setting			combination. Waiting time: set v	es in this 4-bit binary switch alue level x 100 ms) Min: 00 (No wait time)		

IP Fax Switch 02 (SP No. 1-111-003)				
No.	Function	Comments		

0	IP Fax bit signal reverse setting O: Maker code setting 1: Internal bit switch setting	When "0" is selected, the bit signal reverse method is decided by the maker code. When "1" is selected, the bit signal reverse method is decided by the internal bit switch. When communicating between IP Fax devices, LSB first is selected.)
1	IP Fax transmission speed setting 0: Modem speed 1: No limitation	Selects the transmit speed for IP Fax communication.
2	SIP transport setting 0: TCP 1: UDP	This bit switch sets the transport that has priority for receiving IP Fax data. This function is activated only when the sender has both TCP and UDP.
3	CCM connection 0: No CCM connection 1: CCM connection	When "1" is selected, only the connection call message with H.323 or no tunneled H.245 is transmitted via CCM.
4	Message reception selection from non-registered SIP server 0: Answer 1: Not answer	O: This answers the INVITE message from the SIP server not registered for the machine. 1: This does not receive the INVITE message from the SIP server not registered for the machine and send a refusal message.
5	ECM communication setting 0: No limit for image compression 1: Limit for image compression	O: This does not limit the type of the image compression with ECM communication. 1: When the other end machine is Ciscco, this permits the image compression other than JBIG or MMR with ECM communication.

IP Fax Switch 03 (SP No. 1-111-004)					
No.	Function	Comments			
0	Effective field limitation for G3 standard function information O: OFF, 1: 4byte (DIS)	Limits the effective field for standard G3 function information.			

1	Switching between G3 standard and G3 non standard 0: Enable switching 1: G3 standard only	Enables/disables switching between G3 standard and G3 non-standard.
3	ECM frame size selection at transmitting 0: 256byte, 1: 64byte	Selects the ECM frame size for sending.
4	DIS detection times for echo prevention 0: 1 time, 1: 2 times	Sets the number of times for DIS to detect echoes.
5	CTC transmission selection 0: PPRx1 1: PPRx4	When "0" is selected, the transmission condition is decided by error frame numbers. When "1" is selected, the transmission condition is based on the ITU-T method.
6	Shift down setting at receiving negative code 0: OFF, 1: ON	Selects whether to shift down when negative codes are received.

	IP Fax Switch 04 (SP No. 1-111-005)			
No. Function Comments		Comments		
0-3	TCF error threshold	Sets the TCF error threshold level. [00 to 0f] The default is "1111" (0fH).		

IP Fax Switch 05 (SP No. 1-111-006)				
No.	Function	Comments		

	Modem bit rate setting for transmission (kbps)					
	Bit 3	Bit 2	Bit 1	Bit O	kbps	
	0	0	0	1	2.4	
0-3	0	0	1	1	4.8	Sets the modem bit rate for transmission.
0-3	0	0	1	1	7.2	The default is "0110" (14.4K bps).
	0	1	0	0	9.6	
	0	1	0	1	12.0	
	0	1	1	0	14.4	
	Modem setting for transmission					
	Bit 5		Bit 4 Ty		Гуреs	
4-5	0		0		V29	Sets the modem type for transmission.
4-3	0		1		V17	The default is "00" (V29).
	1		0		ot used	
	1		1	N	ot used	

	IP Fax Switch 06 (SP No. 1-111-007)					
No.	No. Function Comments					
0-3	O-3 Modem bit rate setting for reception Sets the modem bit rate for reception. The default is "O110" (14.4K bps).					

	Modem setting for reception Sets the modem type for reception. The default is "0100" (V27ter, V29, V17).							
	Bit 7	Bit 6	Bit 5	Bit 4	Types			
	0	0	0	1	V.27ter			
4-7	0	0	1	0	V.27ter, V.29			
	0	0	1	1	V.27ter, V.29, V.33			
	0	1	0	0	V.27ter, V.29, V.17/V.33			
	Other settin	Other settings - Not used						

IP Fax Switch 07 (SP No. 1-111-008)				
No.	Function	Comments		
0	TSI information 0: Not added, 1: Added	Adds or does not add TSI information to NSS(S).		
1	DCN transmission setting at T1 timeout 0: Not transmitted 1: Transmitted	Transmits or does not transmit DCN at T1 timeout.		
2	Not used	Do not change this setting.		
3	Hang up setting at DIS reception disabled 0: No hang up 1: Hang up after transmitting DCN	Sets whether the machine disconnects after DIS reception.		
4	Number of times for training 0: 1 time, 1: 2 times	Selects the number of times training is done at the same bit rate.		
5	Space CSI transmission setting at no CSI registration O: Not transmitted 1: Transmitted	When "0" is selected, frame data is enabled. When "1" is selected, the transmitted data is all spaces.		

IP Fax Switch 08 (SP No. 1-111-009)

No.	Function			Comments
	T1 timer adjustment			
	Bit 1	Bit O		
0-1	0	0	35 s	Adjusts the T1 timer.
0-1	0	1	40 s	The default is "00" (35 seconds).
	1	0	50 s	
	1	1	60 s	
	T4 timer adju	stment		
2-3	Bit 3	Bit 2		
	0	0	3 s	Adjust the T4 timer.
2-3	0	1	3.5 s	The default is "00" (3 seconds).
	1	0	4 s	
	1	1	5 s	
	T0 timer adju	stment		
	Bit 5	Bit 4		Adjusts the fail safe timer. This timer sets the
4-5	0	0	75 s	interval between "setup" data transmission and T. 38 phase decision. If your destination return is
4-3	0	1	120 s	late on the network or G3 fax return is late, adjust the longer interval timer.
	1	0	180 s	The default is "00" (75 seconds).
	1	1	240 s	
6-7	Not used			Do not change these settings.

	IP Fax Switch 09 (SP No. 1-111-010)				
No.	Function	Comments			
0	Network I/F setting for SIP connection 0: IPv4 1: IPv6.	Selects the connection type (IPV4 or IPV6) to connect to the SIP server.			

1	Network I/F setting for Fax communication 0: Same setting as SIP server connection 1: Automatic setting			O: The I/F setting for fax communication follows the setting for SIP server connection. 1: The negotiation between the SIP server and the device decides whether IPv4 or IPv6 is used for the I/F setting for fax communication.	
2	Record-route setting 0: Disable 1: Enable			O: Disables the record-route function of the SIP server. 1: Enables the record-route function of the SIP server.	
	re-INVITE transmission delay timer setting				
	Bit 4	Bit 3		TI. 1	
3-4	0	0	No delay	This changes the interval for transmit re-INVITE after receiving the ACK message transmitted by T.	
	0	1	1 sec	38 device.	
	1	0	2 sec		
	1 1 3 sec				
5	SIP-IPFAX: Adding vender information selection 0: Declare T38VendorInfo=RICOH 1: Not declare T38VendorInfo=RICOH				

	IP Fax Switch OA (SP No. 1-111-011)				
No.	Function	Comments			
1	Text String for specifying the 1stINVITE t38 media to be declared in SDP (HGW). 0: m=application t38 1: m=image t38				

2-3	Specify the media for 1stINVITE to be declared (no-HGW). 00: audio only 01: audio + t38 10: t38 only
4	Declare the non-use media information for SDP (when answering SDP) O: Declare the available port for non-use media information as "O".
	O: Delete the non-use media information.
5	IP-FAX: Declaration for SDP speed (no-HGW).
	0: Bandwidth offer 1: No-Bandwidth offer

IP Fax Switch OB (SP No. 1-111-012)				
No.	Function	Comments		
0-7	Maximum sending speed registration - High (HGW)	Specify the maximum sending speed (sending		
	Indicate in 8-bit format	bandwidth) for sending IP-FAX.		
	Increase in units of 8 kbps			

IP Fax Switch OC (SP No. 1-111-013)				
No.	Function	Comments		
0-7	Maximum sending speed registration - Med (HGW)	Specify the maximum sending speed (sending		
	Indicate in 8-bit format Increase in units of 8 kbps	bandwidth) for sending IP-FAX.		

	IP Fax Switch OD (SP No. 1-111-013)				
No.	Function	Comments			

Maximum sending speed registration - Low (HGW) Indicate in 8-bit format Increase in units of 8 kbps	Specify the maximum sending speed (sending bandwidth) for sending IP-FAX.
---	---

	IP Fax Switch OE (SP No. 1-111-013)				
No. Function		Comments			
0-1	SIP: IP-FAX port mode (UDP) 00: 3 port mode 01: 2 port mode 10: 1 port mode	Switch the port mode for IP-FAX (T38 transport: UDP) at SIP call control.			
2-3	SIP: IP-FAX port mode (TCP) 00: 3 port mode 01: 2 port mode 10: 1 port mode	Switch the port mode for IP-FAX (T38 transport: TCP) at SIP call control.			

4

NCU Parameters

The following tables give the RAM addresses and the parameter calculation units that the machine uses for ringing signal detection and automatic dialing. The factory settings for each country are also given. Most of these must be changed by RAM read/write (SP2-101), but some can be changed using NCU Parameter programming (SP2-103); if SP2-103 can be used, this will be indicated in the Remarks column. The RAM is programmed in hex code unless (BCD) is included in the Unit column.



• The following addresses describe settings for the standard NCU.

Address	Function						
	Country/Area code for NCU parameters						
	Use the Hex value to program the country/area code directly into this address, or use the decimal value to program it using SP2-103-001						
	Country /Area	Decimal	Hex	Country /Area	Decimal	Hex	
	France	00	00	Asia	18	12	
	Germany	01	01	Japan	19	13	
	UK	02	02	Hong Kong	20	14	
	Italy	03	03	South Africa	21	15	
	Austria	04	04	Australia	22	16	
	Belgium	05	05	New Zealand	26	17	
680500	Denmark	06	06	Singapore	24	18	
	Finland	07	07	Malaysia	25	19	
	Ireland	08	08	China	26	1A	
	Norway	09	09	Taiwan	27	1B	
	Sweden	10	0A	Korea	28	1C	
	Switzerland	11	ОВ	Brazil	29	1D	
	Portugal	12	0C	Turkey	32	20	
	Holland	13	OD	Greece	33	21	
	Spain	14	OE	Hungary	34	22	
	Israel	15	OF	Czech	35	23	
	USA	17	11	Poland	36	24	

Address	Function	Unit	Remarks	
680501	Line current detection time		Line current detection is	
680502	Line current wait time	20 ms	disabled. Line current is not detected if	
680503	Line current drop detect time		680501 contains FF.	
680504	PSTN dial tone frequency upper limit (high byte)	H= (BCD)	If both addresses contain	
680505	PSTN dial tone frequency upper limit (low byte)	Hz (BCD)	FF(H), tone detection is disabled.	
680506	PSTN dial tone frequency lower limit (high byte)	Hz (BCD)	If both addresses contain	
680507	PSTN dial tone frequency lower limit (low byte)	THZ (BCD)	FF(H), tone detection is disabled.	
680508	PSTN dial tone detection time			
680509	PSTN dial tone reset time (LOW)	20 ms	If 680508 contains FF(H), the machine pauses for the pause time (address 68050D / 68050E). Italy: See Note 2.	
68050A	PSTN dial tone reset time (HIGH)			
68050B	PSTN dial tone continuous tone time			
68050C	PSTN dial tone permissible drop time		,	
68050D	PSTN wait interval (LOW)		-	
68050E	PSTN wait interval (HIGH)			
68050F	PSTN ring-back tone detection time	20 ms	Detection is disabled if this contains FF.	
680510	PSTN ring-back tone off detection time	20 ms	-	
680511	PSTN detection time for silent period after ring-back tone detected (LOW)	20 ms	-	
680512	0512 PSTN detection time for silent period after ring-back tone detected (HIGH)		-	

Address	Function	Unit	Remarks	
680513	PSTN busy tone frequency upper limit (high byte)	- Hz (BCD)	If both addresses contain FF(H), tone detection is	
680514	PSTN busy tone frequency upper limit (low byte)	- HZ (BCD)	disabled.	
680515	PSTN busy tone frequency lower limit (high byte)	11 (000)	If both addresses contain	
680516	PSTN busy tone frequency lower limit (low byte)	Hz (BCD)	FF(H), tone detection is disabled.	
680517	PABX dial tone frequency upper limit (high byte)	11 (0.00)	If both addresses contain	
680518	PABX dial tone frequency upper limit (low byte)	Hz (BCD)	FF(H), tone detection is disabled.	
680519	PABX dial tone frequency lower limit (high byte)		If both addresses contain	
68051A	PABX dial tone frequency lower limit (low byte)	Hz (BCD)	FF(H), tone detection is disabled.	
68051B	PABX dial tone detection time			
68051C	PABX dial tone reset time (LOW)		If 68051B contains FF, the machine pauses for the pause time (680520 /	
68051D	PABX dial tone reset time (HIGH)			
68051E	PABX dial tone continuous tone time	20 ms	680521).	
68051F	PABX dial tone permissible drop time			
680520	PABX wait interval (LOW)			
680521	PABX wait interval (HIGH)	1	-	
680522	PABX ringback tone detection time	20 ms	If both addresses contain	
680523	680523 PABX ringback tone off detection time		FF(H), tone detection is disabled.	

Address	Function	Unit	Remarks
680524	PABX detection time for silent period after ringback tone detected (LOW)	20 ms	If both addresses contain FF(H), tone detection is disabled.
680525	PABX detection time for silent period after ringback tone detected (HIGH)	20 ms	
680526	PABX busy tone frequency upper limit (high byte)	II- (DCD)	If both addresses contain
680527	PABX busy tone frequency upper limit (low byte)	Hz (BCD)	FF(H), tone detection is disabled.
680528	PABX busy tone frequency lower limit (high byte)	H- (BCD)	If both addresses contain
680529	PABX busy tone frequency lower limit (low byte)	Hz (BCD) FF(H), tone detection is disabled.	
68052A	Busy tone ON time: range 1		
68052B	Busy tone OFF time: range 1		
68052C	Busy tone ON time: range 2	20 ms	
68052D	Busy tone OFF time: range 2		
68052E	Busy tone ON time: range 3		-
68052F	Busy tone OFF time: range 3		
680530	Busy tone ON time: range 4		
680531	Busy tone OFF time: range 4	20 ms	
680532	Busy tone continuous tone detection time		

Address	Function	Unit	Remarks					
	Busy tone signal state time tolerance for all ranges, and number of cycles required for detection (a setting of 4 cycles means that ON-OFF-ON or OFF-ON-OFF must be detected twice).							
	Tolerance (±)							
680533	Bit 1: 0, Bit 0: 0 = 75% Bits 2 and 3 must always be kept at 0.							
	Bit 1: 0, Bit 0: 0 = 50% Bits 2 and 3 must	t always be kept	at 0.					
	Bit 1: O, Bit O: O = 25%							
	Bit 1: O, Bit O: O = 12.5%							
	Bits 7, 6, 5, 4 - number of cycles require	d for cadence de	etection					
680534	International dial tone frequency upper limit (high byte)	H- (BCD)	If both addresses contain					
680535	International dial tone frequency upper limit (low byte)	Hz (BCD)	FF(H), tone detection is disabled.					
680536	International dial tone frequency lower limit (high byte)	11 (000)	If both addresses contain					
680537	International dial tone frequency lower limit (low byte)	Hz (BCD)	FF(H), tone detection is disabled.					
680538	International dial tone detection time							
680539	International dial tone reset time (LOW)							
68053A	International dial tone reset time (HIGH)		If 680538 contains FF, the machine pauses for the pause time (68053D/					
68053B	International dial tone continuous tone time	20 ms	68053E). Belgium: See Note 2.					
68053C	International dial tone permissible drop time							
68053D	International dial wait interval (LOW)							
68053E	International dial wait interval (HIGH)		-					

Address	Function	Unit	Remarks
68053F	Country dial tone upper frequency limit (HIGH)		If both addresses contain
680540	Country dial tone upper frequency limit (LOW)	H~ (BCD)	FF(H), tone detection is disabled.
680541	Country dial tone lower frequency limit (HIGH)	Hz (BCD)	If both addresses contain FF(H), tone detection is
680542	Country dial tone lower frequency limit (LOW)		disabled.
680543	Country dial tone detection time		If 680543 contains FF, the
680544	Country dial tone reset time (LOW)	20 ms	machine pauses for the pause time (680548 /
680545	Country dial tone reset time (HIGH)		680549).
680546	Country dial tone continuous tone time	-	-
680547	Country dial tone permissible drop time		
680548	Country dial wait interval (LOW)	20 ms	-
680549	Country dial wait interval (HIGH)		
68054A	Time between opening or closing the DO relay and opening the OHDI relay	1 ms	See Notes 3, 6 and 8. SP2-103-012 (parameter 11).
68054B	Break time for pulse dialing	1 ms	See Note 3. SP2-103-013 (parameter 12).
68054C	Make time for pulse dialing	1 ms	See Note 3. SP2-103-014 (parameter 13).
68054D	Time between final OHDI relay closure and DO relay opening or closing	1 ms	See Notes 3, 6 and 8. SP2-103-015 (parameter 14). This parameter is only valid in Europe.

Address	Function	Unit	Remarks
68054E	Minimum pause between dialed digits (pulse dial mode)	20 ms	See Note 3 and 8. SP2-103-016 (parameter 15).
68054F	Time waited when a pause is entered at the operation panel		SP2-103-017 (parameter 16). See Note 3.
680550	DTMF tone on time	1	SP2-103-018 (parameter 17).
680551	DTMF tone off time	1 ms	SP2-103-019 (parameter 18).
680552	Tone attenuation level of DTMF signals while dialing	-N x 0.5 -3.5 dBm	SP2-103-020 (parameter 19). See Note 5.
680553	Tone attenuation value difference between high frequency tone and low frequency tone in DTMF signals	-dBm x 0.5	SP2-103-021 (parameter 20). The setting must be less than –5dBm, and should not exceed the setting at 680552h above. See Note 5.
680554	PSTN: DTMF tone attenuation level after dialling	-N x 0.5 -3.5 dBm	SP2-103-022 (parameter 21). See Note 5.
680556	Not used	-	Do not change the settings.
680557	Time between 68054Dh (NCU parameter 14) and 68054Eh (NCU parameter 15)	1 ms	This parameter takes effect when the country code is set to France.
680558	Not used	-	Do not change the setting.
680559	Grounding time (ground start mode)	20 ms	The Gs relay is closed for this interval.
68055A	Break time (flash start mode)	1 ms	The OHDI relay is open for this interval.

Address	Function	Unit	Remarks	
68055B	International dial access code (High)		For a code of 100:	
68055C	International dial access code (Low)	BCD	68055B - F1	
	mornanonal dial access code (LOW)		68055C - 00	
68055D	PSTN access pause time	20 ms	This time is waited for each pause input after the PSTN access code. If this address contains FF[H], the pause time stored in address 68054F is used. Do not set a number more	
			than 7 in the UK.	
		Bit 7: 0, Bit 6: 0, Bit 5: 0 = -25.0 dBm		
		Bit 7: 0, Bit 6: 0, Bit 5: 1 = -35.0 dBm		
68055E	Progress tone detection level, and	Bit 7: 0, Bit 6: 1, Bit 5: 0 = -30.0 dBm		
000331	cadence detection enable flags	Bit 7: 1, Bit 6: 0), Bit 5: 0 = -40.0 dBm	
		Bit 7: 1, Bit 6: 1, Bit 5: 0 = -49.0 dBm		
		Bits 2, 0 - See Note 2.		
68055F				
То	Not used	-	Do not change the settings.	
680564				
680565	Long distance call prefix (HIGH)	BCD	For a code of 0:	
400544	Lange distances call a section (LOVA)	0.00	680565 – FF	
680566	Long distance call prefix (LOW)	BCD	680566 - FF	
680567				
to	Not used	-	Do not change the settings.	
680571				

Address	Function	Unit	Remarks
680572	Acceptable ringing signal frequency: range 1, upper limit		SP2-103-003 (parameter 02).
680573	Acceptable ringing signal frequency: range 1, lower limit	1000/N	SP2-103-004 (parameter 03).
680574	Acceptable ringing signal frequency: range 2, upper limit	(Hz).	SP2-103-005 (parameter 04).
680575	Acceptable ringing signal frequency: range 2, lower limit		SP2-103-006 (parameter 05).
680576	Number of rings until a call is detected	1	SP2-103-007 (parameter 06). The setting must not be zero.
680577	Minimum required length of the first ring	20 ms	See Note 4. SP2-103-008 (parameter 07).
680578	Minimum required length of the second and subsequent rings	20 ms	SP2-103-009 (parameter 08).
680579	Ringing signal detection reset time (LOW)	20 ms	SP2-103-010 (parameter 09).
68057A	Ringing signal detection reset time (HIGH)	20 ms	SP2-103-011 (parameter 10).
68057B to 680580	Not used	-	Do not change the settings.
680581	Interval between dialing the last digit and switching the Oh relay over to the external telephone when dialing from the operation panel in handset mode.	20 ms	Factory setting: 500 ms

Address	Function	Remarks	
680582	Bits 0 and 1 - Handset off-hook detection Bit 1:0, Bit 0: 0 = 200 ms Bit 1:0, Bit 0: 1 = 800 ms Other Not used Bits 2 and 3 - Handset on-hook detection Bit 3: 0, Bit 2: 0 = 200 ms Bit 3: 0, Bit 2: 1 = 800 ms Other Not used Bits 4 to 7 - Not used	-	
680583 To 6805A0	Not used	Do not change the settings.	
6805A1	Acceptable CED detection frequency upper limit (high byte)		If both addresses contain
6805A2	Acceptable CED detection frequency upper limit (low byte)	FF(H), tone detection is disabled.	
6805A3	Acceptable CED detection frequency lower limit (high byte)		If both addresses contain
6805A4	Acceptable CED detection frequency lower limit (low byte)	BCD (Hz)	FF(H), tone detection is disabled.
6805A5	CED detection time	20 ms ± 20 ms	Factory setting: 200 ms
6805A6	Acceptable CNG detection frequency upper limit (high byte)	DCD (III.)	If both addresses contain
6805A7	Acceptable CNG detection frequency upper limit (low byte)		FF(H), tone detection is disabled.
6805A8	Acceptable CNG detection frequency lower limit (high byte)	PCD (III-)	If both addresses contain
6805A9	Acceptable CNG detection frequency lower limit (low byte)	BCD (Hz)	FF(H), tone detection is disabled.
6805AA	Not used	-	Do not change the setting.

Address	Function	Unit	Remarks	
6805AB	CNG on time	20 ms	Factory setting: 500 ms	
6805AC	CNG off time	20 ms	Factory setting: 3000 ms	
6805AD	Number of CNG cycles required for detection	-	The data is coded in the same way as address 680533.	
6805AE	Not used	-	Do not change the settings.	
6805AF	Acceptable AI short protocol tone (800Hz) detection frequency upper limit (high byte)	Hz (BCD)	If both addresses contain	
6805B0	Acceptable Al short protocol tone (800Hz) detection frequency upper limit (low byte)	TIZ (BCD)	FF(H), tone detection is disabled.	
6805B1	Acceptable AI short protocol tone (800Hz) detection frequency lower limit (high byte)	· Hz(BCD)	If both addresses contain FF(H), tone detection is	
6805B2	Acceptable AI short protocol tone (800Hz) detection frequency lower limit (low byte)	1 HZ(BCD)	disabled.	
6805B3	Detection time for 800 Hz AI short protocol tone	20 ms	Factory setting: 360 ms	
6805B4	PSTN: Tx level from the modem	-N – 3 dBm	SP2-103-002 (parameter 01).	
6805B5	PSTN: 1100 Hz tone transmission level	- N 6805B4 - 0 See Note 7.	0.5N 6805B5 -3.5 (dB)	
6805B6	PSTN: 2100 Hz tone transmission level	- N6805B4 - 0 See Note 7.	.5N 6805B6 –3 (dB)	
6805B7	PABX: Tx level from the modem	- dBm		
6805B8	PABX: 1100 Hz tone transmission level	- N 6805B7 - 0	0.5N 6805B8 (dB)	
6805B9	PABX: 2100 Hz tone transmission level	- N 6805B7 - (0.5N 6805B9 (dB)	

Address	Function	Unit	Remarks		
6805BD	Modem turn-on level (incoming signal detection level)	-37-0.5N (dBm)			
6805BE to 6805C6	Not used	-	Do not change the settings.		
6805C7	Bits 0 to 3 – Not used Bit 4 = V.34 protocol dump 0: Simple, 1: Bits 5 to 7 – Not used .	: Detailed (defau	lt)		
6805C8 to 6805D9	Not used	-	Do not change the settings.		
6805DA	T.30 T1 timer	1 s			
6805E0 bit	Maximum wait time for post message	0: 12 s 1: 30 s	1: Maximum wait time for post message (EOP/EOM/MPS) can be changed to 30 s. Change this bit to "1" if communication errors occur frequently during V.17 reception.		
6805E3	Bits 0 and 1 – DCV (TIP/RING) Voltage Bit 1:0, Bit 0: 0 = 3.1 V Bit 1:0, Bit 0: 1 = 3.2 V Bit 1:1, Bit 0: 0 = 3.35 V Bit 1:1, Bit 0: 1 = 3.5 V Bits 2 and 3 – MINI (minimum loop electric current) Bit 2:0, Bit 3: 0 = 10 mA Bit 2:0, Bit 3: 0 = 14 mA Bit 2:1, Bit 3: 0 = 14 mA Bit 2:1, Bit 3: 1 = 16 mA Bits 6 and 7 – ACIM (AC impedance) Bit 7:0, Bit 6: 0 Bit 5:0, Bit 4: 0= 600 Bit 7:0, Bit 6: 0 Bit 5:1, Bit 4: 0= TBR21				

Address	Function Unit Remarks						
	Bit 0 – OHS (on hook speed)						
	0: OHS=0						
	1: OHS=1						
	Bit 1 – SQ (spark quench)						
	0: SQ=00						
	1: SQ=11						
	Bit 2 – RZ (call signal Impedance)						
	O: RZ=O (high)						
	1: RZ=1 (low)						
	Bit 3 – RT (call signal detection level)						
	O: RT=O (low)						
6805E4	1: RT=1 (high)						
	Bit 4 – ILIM (DC limitation)						
	0: ILIM=0 (CTR 21)						
	1: ILIM=1 (other than CTR 21)						
	Bit 5 –FILTER						
	0: FILTER=0 (around 5Hz)						
	1: FILTER=1 (around 200Hz)						
	Bits 6 to 7 – Calibration in off hook state						
	Bit 6:0, Bit 7: 0 = off hook to ACAL:128	ms, off hook to N	1CAL: 1000 ms				
	Bit 6:1, Bit 7: 0 = off hook to ACAL:128	ms, off hook to N	1CAL: 500 ms				
	Bit 6:0, Bit 7: 1 = off hook to ACAL:128	ms (no MCAL)					
	Bit 6:1, Bit 7: 1 = off hook to ACAL:8 ms	(no MCAL)					
	Bits 0 to 6 – Not used						
6805F5	Bits 7 – Energy saving for DSP, COMBLE	K, SiDAA					
0003E3	0: Does not save energy						
	1: Saves energy						

NOTES

- 1. If a setting is not required, store FF in the address.
- 2. Italy and Belgium only

RAM address 68055E: the lower four bits have the following meaning.

Bit 2 - 1: International dial tone cadence detection enabled (Belgium)

Bit 1 - Not used

Bit 0 - 1: PSTN dial tone cadence detection enabled (Italy)

If bit 0 or bit 2 is set to 1, the functions of the following RAM addresses are changed.

680508 (if bit 0 = 1) or 680538 (if bit 2 = 1): tolerance for on or off state

duration (%), and number of cycles required for detection, coded as in address 680533.

68050B (if bit 0 = 1) or 68053B (if bit 2 = 1): on time, hex code (unit = 20 ms)

68050C (if bit 0 = 1) or 68053C (if bit 2 = 1): off time, hex code (unit = 20 ms)

- 3. Pulse dial parameters (addresses 68054A to 68054F) are the values for 10 pps. If 20 pps is used, the machine automatically compensates.
- 4. The first ring may not be detected until 1 to 2.5 wavelengths after the time specified by this parameter.
- 5. The calculated level must be between 0 and 10.


The attenuation levels calculated from RAM data are:

High frequency tone:

- $-0.5 \times N_{680552}/_{680554}-3.5 \text{ dBm}$
- $-0.5 \times N_{680555} dBm$

Low frequency tone:

- $-0.5 \times (N_{680552}/_{680554} + N_{680553}) -3.5 \text{ dBm}$
- $-0.5 \times (N_{680555} + N_{680553}) dBm$



- N₆₈₀₅₅₂, for example, means the value stored in address 680552(H)
- 68054A: Europe Between Ds opening and Di opening, France Between Ds closing and Di opening

68054D: Europe - Between Ds closing and Di closing, France - Between Ds opening and Di closing

- 7. Tone signals which frequency is lower than 1500Hz (e.g., 800Hz tone for AI short protocol) refer to the setting at 6805B5h. Tones which frequency is higher than 1500Hz refer to the setting at 6805B6h.
- 8. 68054A, 68054D, 68054E: The actual inter-digit pause (pulse dial mode) is the sum of the period specified by the RAM addresses 68054A, 68054D, and 68054E.

Dedicated Transmission Parameters

There are two sets of transmission parameters: Fax and E-mail

Each Quick Dial Key and Speed Dial Code has eight bytes of programmable parameters allocated to it. If transmissions to a particular machine often experience problems, store that terminal's fax number as a Quick Dial or Speed Dial, and adjust the parameters allocated to that number.

The programming procedure will be explained first. Then, the eight bytes will be described.

Programming Procedure

- 1. Set the bit 0 of System Bit Switch 00 to 1.
- 2. Enter Address Book Management mode ([User Tools]> System Settings> Key Operator> Address Book Management).
- 3. Select the address book that you want to program.
- 4. For the fax parameter, select "Fax Dest.", for the E-mail parameter, select "E-mail", then press "Start". Make sure that the LED of the Start button lights green.
- 5. The settings for the switch 00 are now displayed. Press the bit number that you wish to change.
- 6. To scroll through the parameter switches, either:
- 7. Select the next switch: press "Next" or Select the previous switch: "Prev." until the correct switch is displayed. Then go back to step 6.
- 8. After the setting is changed, press "OK".
- 9. After finishing, reset bit 0 of System Bit Switch 00 to 0.

Parameters

Fax Parameters

The initial settings of the following fax parameters are all FF(H) - all the parameters are disabled.

Switch 00

FUNCTION AND COMMENTS

4

ITU-T T1 time (for PSTN G3 mode)

If the connection time to a particular terminal is longer than the NCU parameter setting, adjust this byte. The T1 time is the value stored in this byte (in hex code), multiplied by 1 second.

Range:

0 to 120 s (00h to 78h)

FFh - The local NCU parameter factory setting is used.

Do not program a value between 79h and FEh.

Switch	01						
No	FUNCTION						COMMENTS
	Tx leve	el					
	Bit4	Bit3	Bit2	Bit1	BitO		
	0	0	0	0	0	0	If communication with a particular remote terminal often contains errors, the signal
	0	0	0	0	1	-1	level may be inappropriate. Adjust the Tilevel for communications with that termin
0 4	0	0	0	1	0	-2	until the results are better.
0-4	0	0	0	1	1	-3	If the setting is "Disabled", the NCU parameter 01 setting is used.
	0	0	1	0	0	-4	♦ Note
	\	+	4	4	+	4	Do not use settings other than listed on the left.
	0	1	1	1	1	-15	
	1	1	1	1	1	Disabled	

5-7

Bit 7: 0, Bit 6: 0, Bit 5: 0 = None

Bit 7: 0, Bit 6: 0, Bit 5: 1 = Low

Bit 7: 0, Bit 6: 1, Bit 5: 1 = High

Bit 7: 0, Bit 6: 1, Bit 5: 0 = Medium

Bit 7: 1, Bit 6: 1, Bit 5: 1 = Disabled

at higher frequencies because of the length of wire between the modem and the telephone exchange when calling the number stored in this Quick/Speed Dial.

Also, try using the cable equalizer if one or more of the following symptoms occurs.

Use a higher setting if there is signal loss

Communication error with error codes such as 0-20, 0-23, etc.

Modem rate fallback occurs frequently.



 Do not use settings other than listed on the left.

If the setting is "Disabled", the bit switch setting is used.

Switc	h 02	
No	FUNCTION	COMMENTS

	Initial	Tx mode	em rate			
	Bit3	Bit2	Bit1	BitO	bps	
	0	0	0	0	Not used	
	0	0	0	1	2400	
	0	0	1	0	4800	
	0	0	1	1	7200	
	0	1	0	0	9600	If training with a particular remote terminal always
	0	1	0	1	12000	takes too long, the initial modem rate may be too high. Reduce the initial Tx modem rate using these
	0	1	1	0	14400	bits.
0-3	0	1	1	1	16800	For the settings 14.4 or kbps slower, Switch 04 bit 4 must be changed to 0.
	1	0	0	0	19200	₩Note
	1	0	0	1	21600	Do not use settings other than listed on the left. If the setting is "Disabled", the bit switch setting is used.
	1	0	1	0	24000	
	1	0	1	1	26400	
	1	1	0	0	28800	
	1	1	0	1	31200	
	1	1	1	0	33600	
	1	1	1	1	Disabled	
	Other	settings	: Not us	sed		
4-7	4-7 Not used					Do not change the settings.

Switch 03			
No	FUNCTION	COMMENTS	

0-1	Inch-mm conversion before tx Bit 1: 0, Bit 0: 0 = Inch-mm conversion available Bit 1: 0, Bit 0: 1 = Inch only Bit 1: 1, Bit 0: 0 = Not used Bit 1: 1, Bit 0: 1 = Disabled	If "inch only" is selected on the machine uses inch-based resolutions for scanning, the printed copy may be slightly distorted at the other end if that machine uses mm-based resolutions. If the setting is "Inch-mm conversion available ", Inch-mm conversion become effective to the special senders. If the setting is "Disabled", the bit switch setting is used.
2-3	DIS/NSF detection method Bit 3: 0, Bit 2: 0 = First DIS or NSF Bit 3: 0, Bit 2: 1 = Second DIS or NSF Bit 3: 1, Bit 2: 0 = Not used Bit 3: 1, Bit 2: 1 = Disabled	(0, 1): Use this setting if echoes on the line are interfering with the set-up protocol at the start of transmission. The machine will then wait for the second DIS or NSF before sending DCS or NSS. If the setting is "Disabled", the bit switch setting is used.
4	V.8 protocol 0: Off 1: Disabled	If transmissions to a specific destination always end at a lower modem rate (14,400 bps or lower), disable V.8 protocol so as not to use V.34 protocol. O: V.34 communication will not be possible. If the setting is "Disabled", the bit switch setting is used.
5	Compression modes available in transmit mode O: MH only 1: Disabled	This bit determines the capabilities that are informed to the other terminal during transmission. If the setting is "Disabled", the bit switch setting is used.
6-7	ECM during transmission Bit 7: 0, Bit 6: 0 = Off Bit 7: 0, Bit 6: 1 = On Bit 7: 1, Bit 6: 0 = Not used Bit 7: 1, Bit 6: 1 = Disabled	For example, if ECM is switched on but is not wanted when sending to a particular terminal, use the (0, 0) setting. • V.8/V.34 protocol and JBIG compression are automatically disabled if ECM is disabled. • If the setting is "Disabled", the bit switch setting is used.

Switch 04 - Not used (do not change the settings)

Switch 05 - Not used (do not change the settings)

 $\textbf{Switch 06 - Not used} \; (\text{do not change the settings})$

Switch 07 - Not used (do not change the settings)

Switch 08 - Not used (do not change the settings)

Switch 09 - Not used (do not change the settings)

E-mail Parameters

The initial settings of the following e-mail parameters are all "0" (all parameters disabled).

Switch 00			
No	FUNCTION	COMMENTS	
0	MH Compression mode for e-mail attachments 0: Off 1: On	Switches MH compression on and off for files attached to e-mails for sending.	
1	MR Compression mode for e-mail attachments 0: Off 1: On	Switches MR compression on and off for files attached to e-mails for sending.	
2	MMR Compression mode for e-mail attachments 0: Off 1: On	Switches MMR compression on and off for files attached to e-mails for sending.	
3-6	Not used	Do not change these settings.	
7	Designates the bits to reference for compression method of e-mail attachments O: Registered (Bit 0 to 6) 1: No registration.	The "0" selection (default) references the settings for Bits 00, 01, 02 above. The "1" selection ignores the selections of Bits 00, 01, 02.	

Switch 01	
-----------	--

No	FUNCTION	COMMENTS
0	Original width of e-mail attachment: A4 0: Off 1: On	Sets the original width of the e-mail attachment as A4.
1	Original width of e-mail attachment: B4 O: Off 1: On	Sets the original width of the e-mail attachment as B4.
2	Original width of e-mail attachment: A3 O: Off 1: On	Sets the original width of the e-mail attachment as A3.
3-6	Not used	Do not change these settings.
7	Designates the bits to reference for original size of e-mail attachments O: Registered (Bit 0 to 6) 1: No registration.	The "0" selection (default) references the settings for Bits 00, 01, 02 above. The "1" selection ignores the selections of Bits 00, 01, 02.

Switch 02			
No	FUNCTION	COMMENTS	
0	Line resolution of e-mail attachment: 200 x 100 0: Off 1: On	Sets the line resolution of the e-mail attachment as 200 x100.	
1	Line resolution of e-mail attachment: 200 x 200 O: Off 1: On	Sets the line resolution of the e-mail attachment as 200 x 200.	

2	Line resolution of e-mail attachment: 200 x 400 0: Off 1: On	Sets the line resolution of the e-mail attachment as 200 x 400.	
3	Not used	Do not change these settings.	
4	Line resolution of e-mail attachment: 400 x 400 O: Off 1: On	Sets the line resolution of the e-mail attachment as 400 x 400.	
5-6	Not used	Do not change these settings.	
7	Designates the bits to reference for original size of e-mail attachments O: Registered (Bit 0 to 6) 1: No registration.	The "O" selection (default) references the settings for Bits 00, 01, 02, 04 above. The "1" selection ignores the selections of Bits 00, 01, 02, 04.	

$\textbf{Switch 03 - Not used} \; (\text{do not change the settings})$

Switch 04 No FUNCTION			
		COMMENTS	
Full mode address sele	1: No full mode (simple	If the other ends have the addresses, which have the full mode function flag ("0"), this machine determines them as full mode standard machines. • This machine attaches the "demand of reception confirmation" to a message when transmitting. • This machine updates the reception capability to the address book when receiving.	
1-7	Not used	Do not change these settings.	

Switch 0	5	
No	FUNCTION	COMMENTS

0	Directr transmission selection to SMTP server 0: ON 1: OFF	Allows or does not allow the direct transmission to SMTP server.
1-7	Not used	Do not change these settings.

Switch 06 - Not used (do not change the settings)	
Switch 07 - Not used (do not change the settings)	
Switch 08 - Not used (do not change the settings)	
Switch 09 - Not used (do not change the settings)	

5. Specifications

General Specifications

FCU

Туре:	Desktop type transceiver
C. I	PSTN
Circuit:	PABX
Connection:	Direct couple
	Book (Face down)
	Maximum Length: 432 mm [17 ins]
	Maximum Width: 297 mm [11.7 ins]
	ARDF (Face up)
Original Siza.	(Single-sided document)
Original Size:	Length: 128 - 1200 mm [5.0 - 47.2 ins]
	Width: 128 - 297 mm [5.0 - 11.7 inch]
	(Double-sided document)
	Length: 128 - 432 mm [5.0 - 17 inch]
	Width: 128 - 297 mm [5.0 - 11.7 inch]
Scanning Method:	Flat bed, with CCD
	G3
	8 x 3.85 lines/mm (Standard)
Resolution:	8 x 7.7 lines/mm (Detail)
	200 x 100 dpi (Standard)
	200 x 200 dpi (Detail)
Transmission Time:	G3: 3 s at 28800 bps; Measured with G3 ECM using memory for an ITU-T #1 test document (Slerexe letter) at standard resolution
Data Compression:	MH, MR, MMR, JBIG
Protocol:	Group 3 with ECM

Modulation:	V.34, V.17 (TCM), V.29 (QAM), V.27ter (PHM), V.8, V.21 (FSK)
Data Rate:	G3: 33600/31200/28800/26400/24000/21600/ 19200/16800/14400/12000/9600/7200/4800/2400 bps Automatic fallback
I/O Rate:	With ECM: 0 ms/line Without ECM: 5, 10, 20, or 40 ms/line
Memory Capacity:	SAF Standard: 4 MB With optional Expansion Memory: 28 MB (4 MB+ 24 MB) Page Memory Standard: 4 MB With optional Expansion Memory: 8 MB

Capabilities of Programmable Items

The following table shows the capabilities of each programmable items.

Item	Standard	With Optional HDD
Quick Dial (*without HDD)	1000	2000
Groups	10	100
Destination per Group	500	500
Destinations dialed from the ten-key pad overall	500	500
Programs	100	100
Communication records for Journal stored in the memory	200	200
Specific Senders	250	250

The following table shows how the capabilities of the document memory will change after the Expansion Memory are installed.

	Without the Expansion Memory	With the Expansion Memory
Memory Transmission file	800	800
Maximum number of page for memory transmission	1000	1000
Memory capacity for memory transmission (Note 1)	320	2240



• Measured using an ITU-T #1 test document (Slerexe letter) at the standard resolution, the auto image density mode and the Text mode.

5

IFAX Specifications

Connectivity:	Local area network Ethernet 100base-Tx/10base-T	
	Gigabit Ethernet 1000 Base-T	
	IEEE802.11a/g, g (wireless LAN),	
Resolution:	200 × 100 dpi (Standard resolution), 200 × 200 dpi (Detail resolution)	
	1 s (through a LAN to the server)	
	Condition: ITU-T #1 test document (Selerexe Letter)	
	MTF correction: OFF	
Transmission Time:	TTI: None	
Transmission time.	Resolution: 200 x 100 dpi	
	Communication speed: 10 Mbps	
	Correspondent device: E-mail server	
	Line conditions: No terminal access	
	Maximum Original Size: A3/DLT.	
Document Size:	↓ Note	
Document Size:	• To use B4 and A3 width, IFAX SW00 Bit 1 (B4) and/or Bit 2 (A3) must be set to "1".	
	Single/multi-part	
E-mail File Format:	MIME conversion	
	Image: TIFF-F (MH, MR, MMR)	
	Transmission:	
Protocol:	SMTP, TCP/IP	
Profocol:	Reception:	
	POP3, SMTP, IMAP4, TCP/IP	
	1000 Mbps (1000 Base-T)	
Data Rate:	100 Mbps (100 base-Tx)	
	10 Mbps (10 base-T)	

		7
г		

Authentication Method:	SMTP-AUTH POP before SMTP A-POP
Remark:	The machine must be set up as an e-mail client before installation. Any client PCs connected to the machine through a LAN must also be e-mail clients, or some features will not work (e.g. Autorouting).

IP-FAX Specifications

Network:	Local Area Network Ethernet/10base-T, 100 base-TX Gigabit Ethernet/1000 Base-T IEEE802.11a/g, g (wireless LAN)
Scan line density:	8 x 3.85 lines/mm, 200 x 100 dpi (standard character), 8 x 7.7 lines/mm, 200 x 200 dpi (detail character),
Maximum Original size:	A3 or 11" x 17" (DLT) Custom: 297 mm x 1200 mm (11.7" x 47.3")
Maximum scanning size:	297 mm x 1200 mm (11.7" x 47.3")
Transmission protocol:	Recommended: T.38 Annex protocol, TCP, UDP/IP communication, SIP (RFC 3261 compliant), H.323 v2
Compatible machines:	IP-Fax compatible machines
IP-Fax transmission function:	Specify IP address and send faxes to an IP-Fax compatible fax through a network. Also capable of sending faxes from a G3 fax connected to a telephone line via a VoIP gateway.
IP-Fax reception function:	Receive faxes sent from an IP-Fax compatible fax through a network. Also capable of receiving faxes from a G3 fax connected to a telephone line via a VoIP gateway.

