

**FAX OPTION TYPE 2238**  
**(Machine Code: B603)**

**SERVICE MANUAL**

31 October, 2003  
Subject to change

# TABLE OF CONTENTS

<b>1. INSTALLATION.....</b>	<b>1-1</b>
1.1 PROCEDURE OVERVIEW.....	1-1
1.2 FAX UNIT .....	1-3
Accessory Check .....	1-3
Installation Procedure .....	1-4
1.3 G3 INTERFACE UNIT .....	1-6
Accessory Check .....	1-6
Installation Procedure .....	1-7
1.4 FAX FUNCTION UPGRADE UNIT .....	1-10
1.5 EXPANSION MEMORY.....	1-11
1.6 HANDSET.....	1-12
Accessory Check .....	1-12
Installation Procedure .....	1-13
<b>2. TROUBLESHOOTING.....</b>	<b>2-1</b>
2.1 ERROR CODES .....	2-1
2.2 FAX SC CODE AND ERROR MESSAGES .....	2-9
SC871 FCU Flash ROM Abnormal .....	2-9
FCU Flash ROM Access Limit Exceeded.....	2-9
SRAM Abnormal .....	2-9
Expansion SRAM Abnormal.....	2-9
<b>3. SERVICE TABLES.....</b>	<b>3-1</b>
3.1 SERVICE PROGRAM MODE.....	3-1
3.1.1 SERVICE PROGRAM MODE OPERATION .....	3-1
Entering and Exiting SP mode .....	3-1
SP2-XXX (RAM Data).....	3-3
SP3-XXX (Tel Line Settings).....	3-3
SP4-XXX (ROM Versions) .....	3-4
SP5-XXX (Initializing).....	3-4
SP6-XXX (Reports).....	3-5
SP7-XXX (Tests).....	3-7
3.2 BIT SWITCHES .....	3-8
3.2.1 SYSTEM SWITCHES .....	3-8
3.2.2 FAX SWITCHES .....	3-19
3.2.3 PRINTER SWITCHES .....	3-23
3.2.4 COMMUNICATION SWITCHES .....	3-28
3.2.5 G3-1 SWITCHES .....	3-37
3.2.6 G3-2 SWITCHES .....	3-45
3.3 NCU PARAMETERS .....	3-51
3.4 DEDICATED TRANSMISSION PARAMETERS .....	3-61
3.4.1 PROGRAMMING PROCEDURE .....	3-61
3.4.2 PARAMETERS .....	3-62
3.5 SERVICE RAM ADDRESSES .....	3-66

<b>4. DETAILED SECTION DESCRIPTIONS.....</b>	<b>4-1</b>
4.1 OVERVIEW .....	4-1
4.2 BOARDS.....	4-2
4.2.1 FCU .....	4-2
4.2.2 MBU.....	4-3
4.2.3 NCU (US).....	4-4
4.2.4 NCU (EUROPE/ASIA) .....	4-5
4.2.5 SG3-D BOARD .....	4-6
4.3 ADDRESS BOOK .....	4-7
With Printer Scanner Unit.....	4-7
Without Optional Printer Scanner Unit (Asia Model Only) .....	4-7

<b>SPECIFICATIONS.....</b>	<b>SPEC-1</b>
1. GENERAL SPECIFICATIONS.....	SPEC-1
2. CAPABILITIES OF PROGRAMMABLE ITEMS .....	SPEC-2
3. MACHINE CONFIGURATION .....	SPEC-4

# 1. INSTALLATION

## 1.1 PROCEDURE OVERVIEW

**⚠ WARNING**

1. Never install telephone wiring during a lightning storm.
2. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
3. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
4. Use caution when installing or modifying telephone lines.
5. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be remote risk of electric shock from lightning.
6. Do not use a telephone or cellular phone to report a gas leak in the vicinity of the leak.


**⚠ CAUTION**

1. Before installing the fax unit, switch off the main switch, and disconnect the power cord.
2. The fax unit contains a lithium battery. The danger of explosion exists if a battery of this type is incorrectly replaced. Replace only with the same or an equivalent type recommended by the manufacturer. Discard batteries in accordance with the manufacturer's instructions and local regulations.

**NOTE FOR AUSTRALIA**

Unit must be connected to Telecommunication Network through a line cord which meets the requirements of ACA Technical Standard TS008.

The flowchart illustrates your installation procedure.

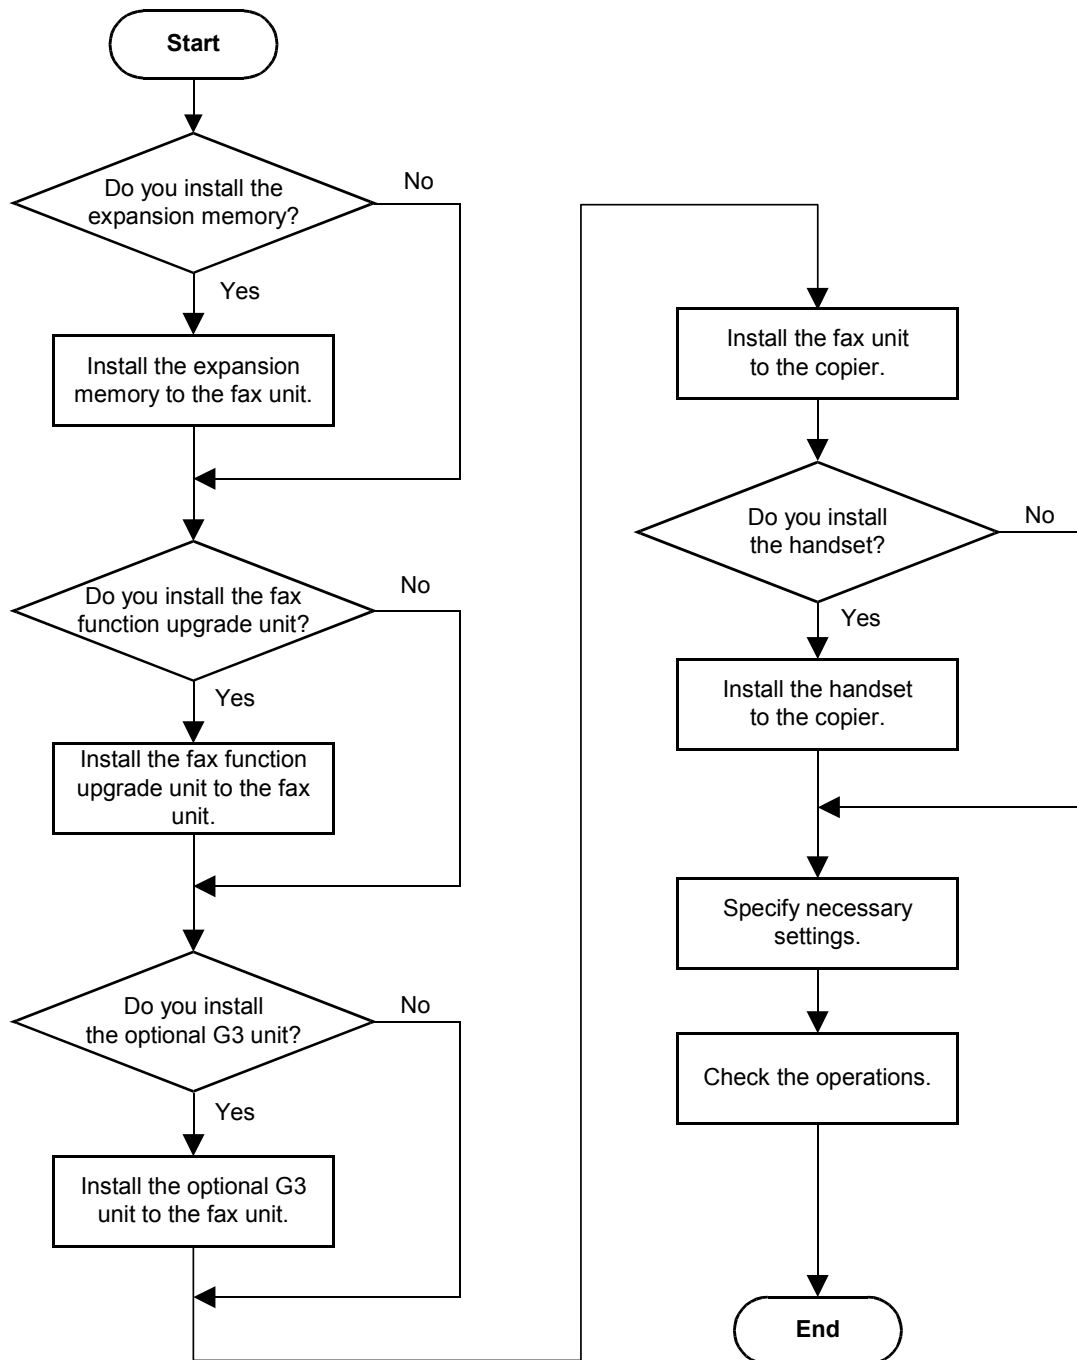


B603I910.WMF

## 1.2 FAX UNIT

### Accessory Check

Check the quantity and condition of the accessories.

Description	Q'ty
1. Fax key .....	2
2. Fax panel .....	2
3. Stamp.....	1
4. G3 decal.....	1
5. Serial number decal .....	1
6. FCC decal (for North America model only) .....	1
7. Cable holder.....	1

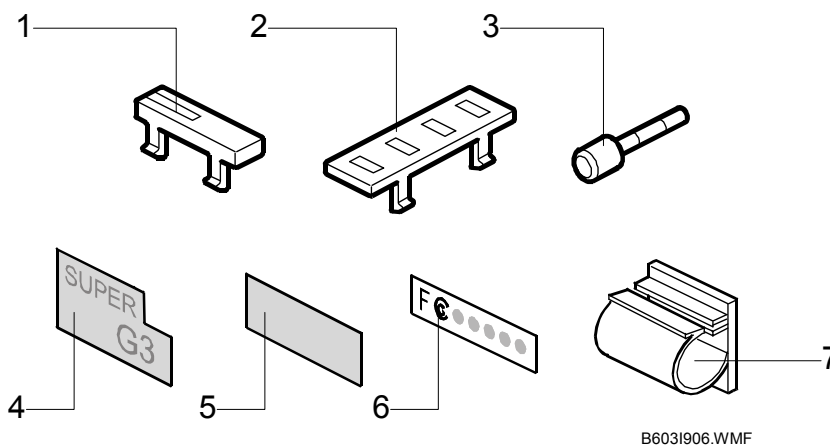


**NOTE:** You need the cable holder when installing the optional handset (for the North America model only).


**Installation Procedure**

<p><b>⚠ CAUTION</b></p> <p><b>Before installing this option, do the following:</b></p> <ol style="list-style-type: none"> <li><b>1. If there is a printer option in the machine, print out all data in the printer buffer.</b></li> <li><b>2. Press the operation switch to be the standby mode. Make sure the power LED is not lit then, turn off the main switch and disconnect the power cord and the network cable.</b></li> </ol>
--


1. Remove the option cover [A] (⚙ x 2).
2. Turn the battery switch on [B].
3. Install the fax unit [C] (⚙ x 2).
4. Attach the serial number decal [D] on the rear cover.
5. Attach the FCC decal on the rear cover (only for USA/Canada).

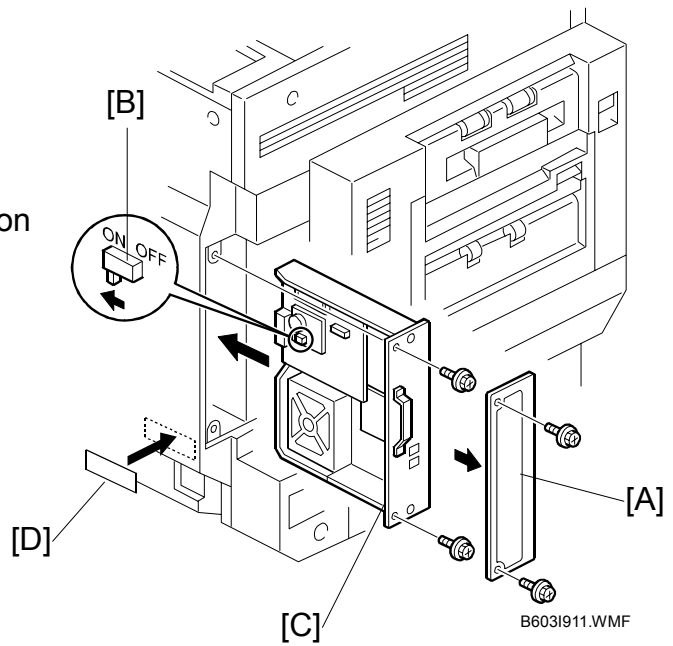

6. Remove the key cover [E] and install one of the fax keys [F].
7. Remove the panel cover [G] and install the fax panel [H].

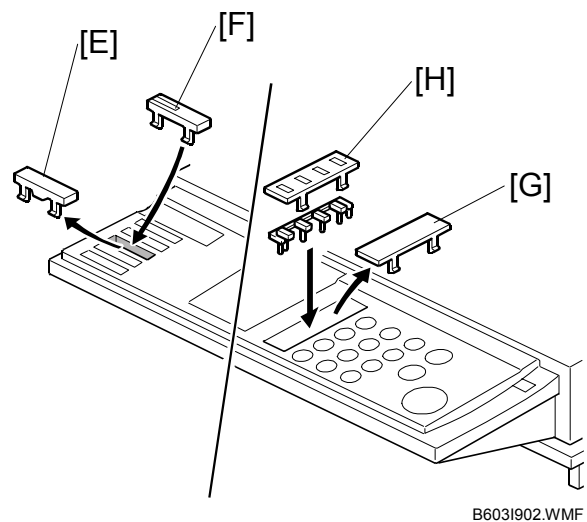


8. Attach the G3 decal [A].

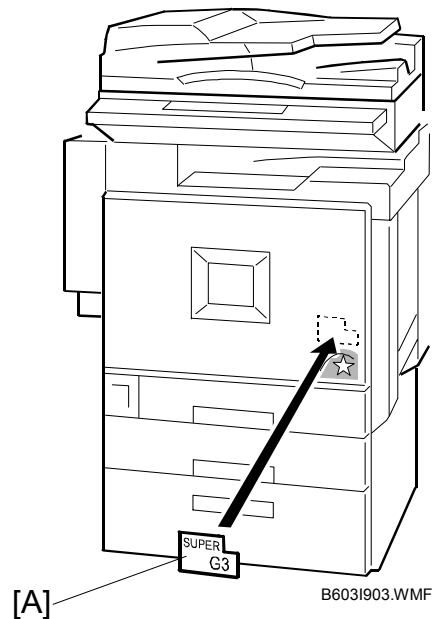

Installation

9. Install the stamp [B] to the ADF [C] (if installed).  
 10. Connect the telephone line to the "LINE 1" jack at the left of the machine.  
 11. Turn the main switch on.

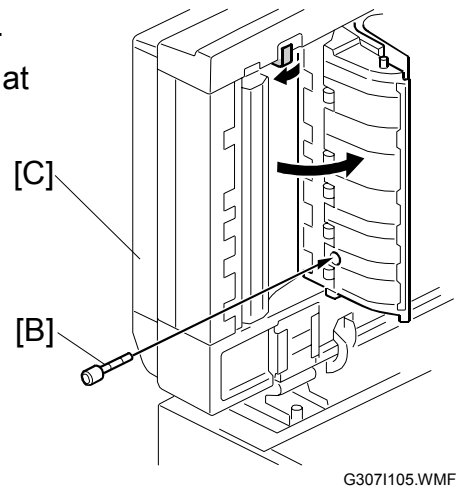

12. Wait until the following messages are displayed:  
 Function Problems  
 Functional problems with facsimile.  
 Data will be initialized.
13. Touch "OK" on the touch panel. The initialization starts.
14. Make sure that the date and time are correctly set.
15. Enter the service mode and program the serial number into the fax unit (SP3-102-000). The serial number can be found on the serial number decal (attached to the machine in step 4).




### 1.3 G3 INTERFACE UNIT

#### Accessory Check

Check the quantity and condition of the accessories.

Description	Q'ty
1. NCU .....	1
2. Interface board.....	1
3. G3 board .....	1
4. Cable.....	1
5. Flat cable .....	1
6. Spacer.....	4
7 Screw M3 x 6 .....	6

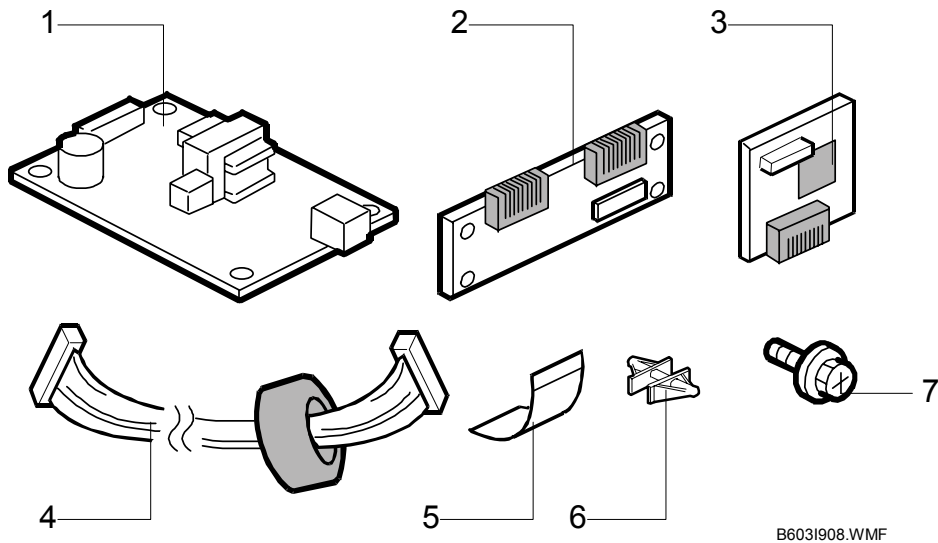


**Installation Procedure****⚠ CAUTION**


Before installing this option, do the following:

1. If there is a printer option in the machine, print out all data in the printer buffer.
2. Press the operation switch to be the standby mode. Make sure the power LED is not lit then, turn off the main switch and disconnect the power cord and the network cable.

Installation

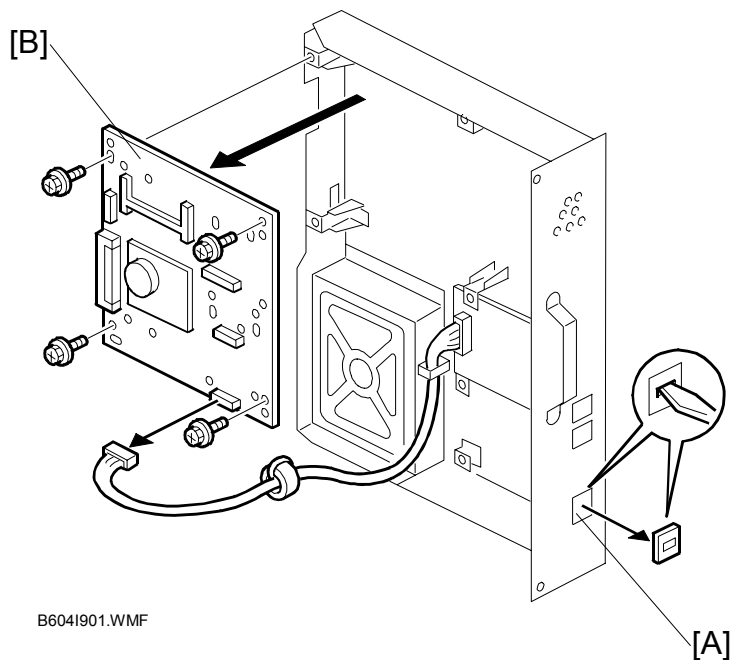


1. Remove the "LINE 2" cover [A] on the fax-controller board.
2. Remove the fax controller board [B] (⚙ x 1, 🔩 x 4).

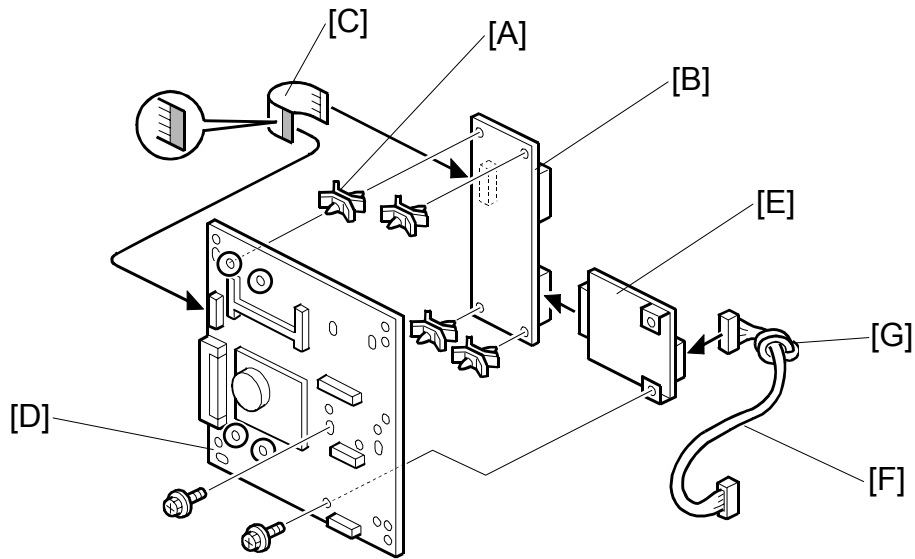

B6041903.WMF

3. Install the four spacers [A] to the rear of the fax-controller unit.
4. Install the interface board [B] on the spacers.
5. Install the flat cable [C] to the interface board.
6. Connect the flat cable to the fax-controller board [D] (the connector is on the front of the fax-controller board).
7. Connect the G3 board [E] to the interface board (⚙ x 2).  
**NOTE:** See the diagram above and connect the G3 board to the correct slot. Leave the other slot open—this slot is used by some local models.
8. Connect the cable [F] to the G3 board.  
**NOTE:** The core [G] is on an end of the cable. Connect this end to the G3 board.

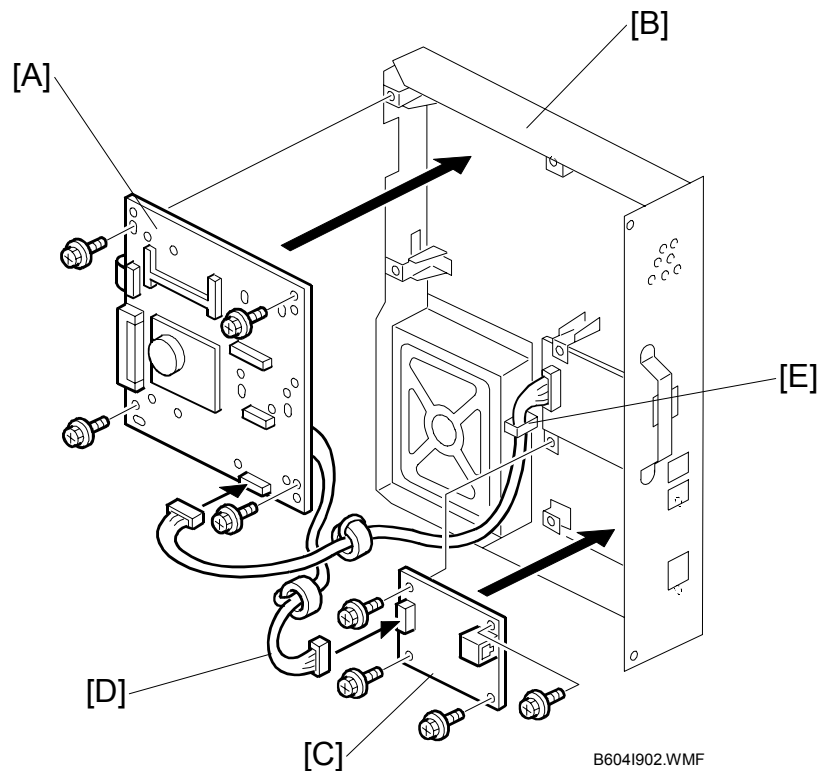


9. Install the fax-controller board (with the G3 board and interface board) [A] to the fax-controller base [B] (⚙ x 4, 📌 x 1).
10. Install the NCU [C] to the fax-controller unit (⚙ x 4).
11. Connect the cable [D] on the G3 board to the NCU.
12. Fix the cable to the clamp [E].
13. Install the fax unit to the copier.
14. Turn the main switch on.
15. Enter the service mode. Set bit 1 of communication switch 16 to "1."
16. Turn the main switch off and on.
17. Print out the system parameter list and check that "G3" is listed as an option.
18. Set up and program the items required for PSTN-2 communications.

## 1.4 FAX FUNCTION UPGRADE UNIT

### CAUTION

Before installing this option, do the following:

1. Print out all data in the printer buffer.
2. Turn off the main switch and disconnect the power cord and the network cable.

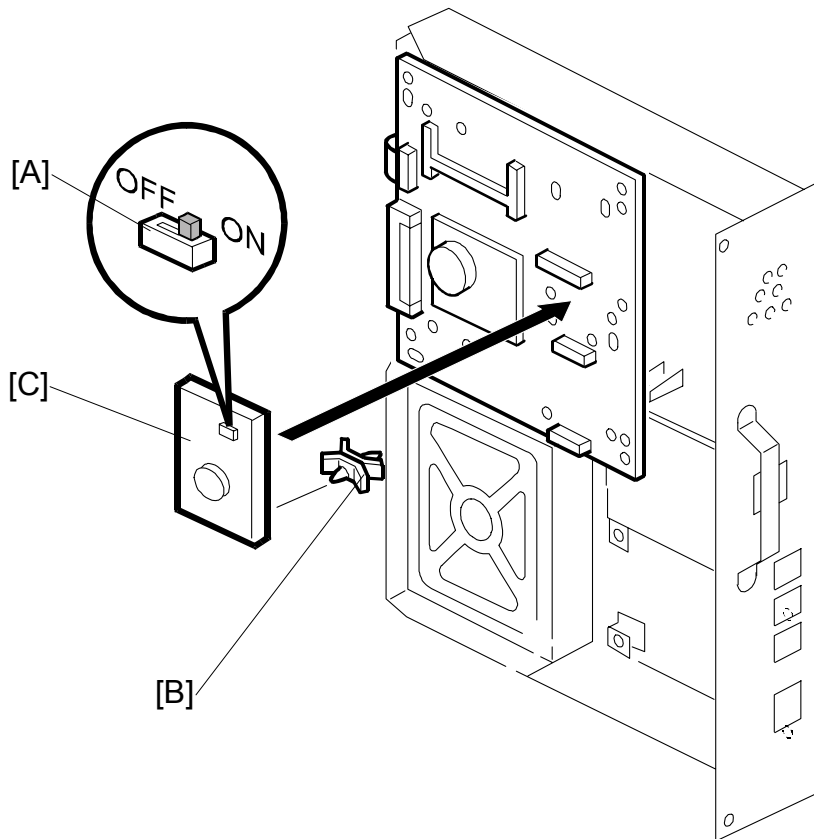

A8921901.WMF


1. Turn on the DIP switch [A].  
**NOTE:** The DIP switch works as the power switch.
2. Attach the spacer [B].
3. Install the fax function upgrade unit [C].
4. Turn the main switch on.
5. Enter the service mode. Set bit 7 of system switch 1E to "1."

## 1.5 EXPANSION MEMORY

### **⚠ CAUTION**

**Before installing this option, do the following:**

- 1. Print out all data in the printer buffer.**
- 2. Turn off the main switch and disconnect the power cord and the network cable.**

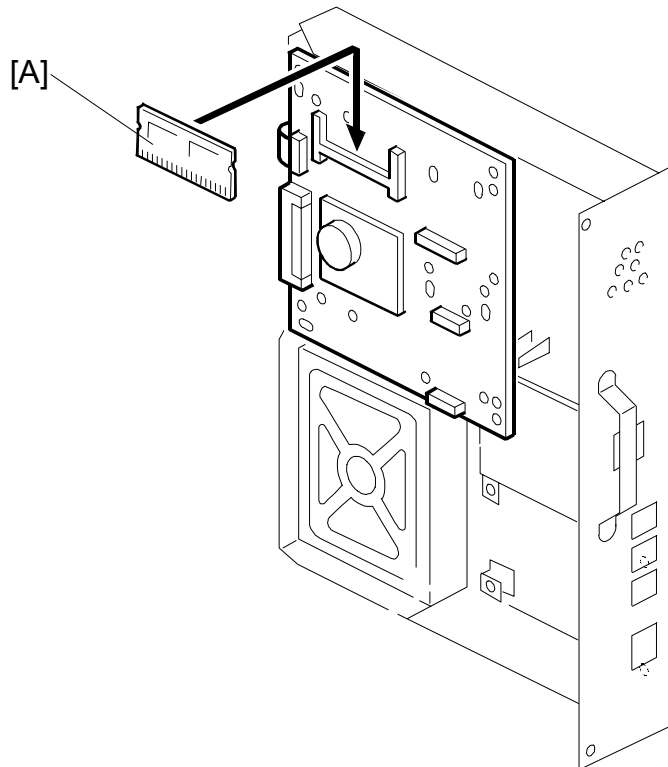

G578I901.WMF

Install the expansion memory [A] into the memory slot.


## 1.6 HANDSET

The optional handset is available for the U.S. version only.


### ***Accessory Check***

Check the quantity and condition of the accessories.

<b>Description</b>	<b>Q'ty</b>
1. Base bracket.....	1
2. Handset cradle.....	1
3. Handset.....	1
4. Screw M3 x 6 .....	4

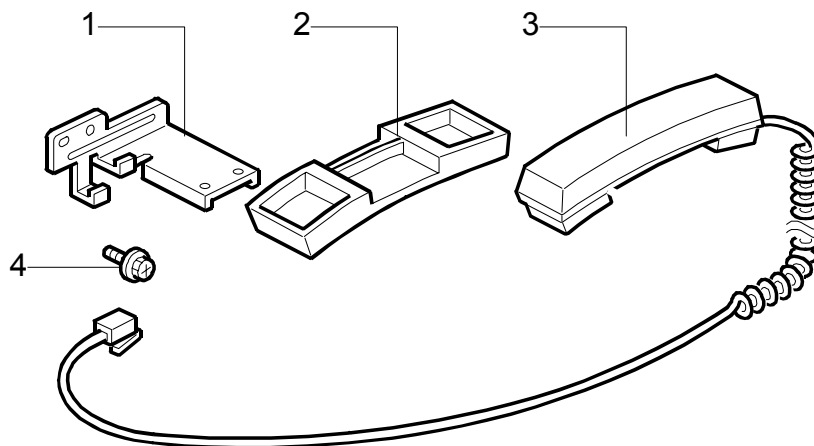

B6031909.WMF

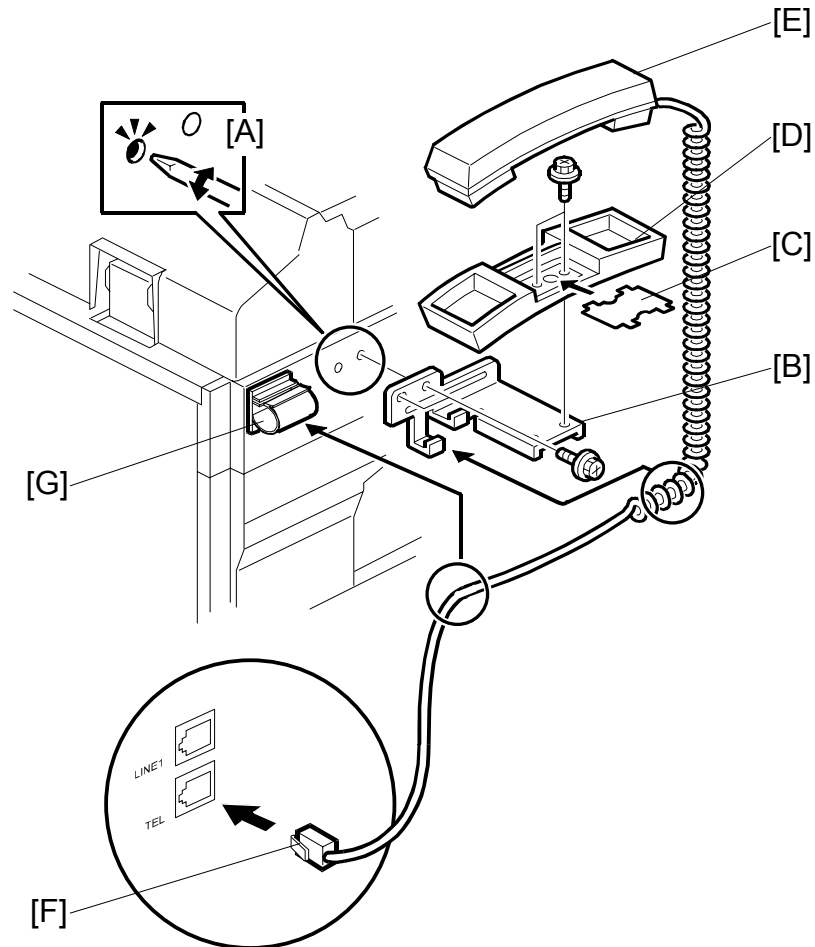**Installation Procedure**

B603I907.WMF

1. Make two holes [A] in the scanner left cover.
2. Attach the bracket [B] enclosed with the fax unit (⚙ x 2) as shown.
3. Remove the label [C] from the handset cradle [D].
4. Attach the cradle to the bracket [B] (⚙ x 2), then replace the label [C].
5. Install the handset [E] on the cradle.
6. Connect the cable [F] to the "TEL" jack at the rear of the machine.
7. Attach the cable holder [G].

**NOTE:** The cable holder is distributed with the fax unit (not with the handset).

8. Fix the cable to the holder.



## 2. TROUBLESHOOTING

### 2.1 ERROR CODES

If an error code occurs, retry the communication. If the same problem occurs, try to fix the problem as suggested below. Note that some error codes appear only in the error code display and on the service report.

Code	Meaning	Suggested Cause/Action
0-00	DIS/NSF not detected within 40 s of Start being pressed	<ul style="list-style-type: none"> <li>• Check the line connection.</li> <li>• Check the NCU - FCU connectors.</li> <li>• The machine at the other end may be incompatible.</li> <li>• Replace the NCU or FCU.</li> <li>• Check for DIS/NSF with an oscilloscope.</li> <li>• If the rx signal is weak, there may be a bad line.</li> </ul>
0-01	DCN received unexpectedly	<ul style="list-style-type: none"> <li>• The other party is out of paper or has a jammed printer.</li> <li>• The other party pressed Stop during communication.</li> </ul>
0-03	Incompatible modem at the other end	<ul style="list-style-type: none"> <li>• The other terminal is incompatible.</li> </ul>
0-04	CFR or FTT not received after modem training	<ul style="list-style-type: none"> <li>• Check the line connection.</li> <li>• Check the NCU - FCU connectors.</li> <li>• Try changing the tx level and/or cable equalizer settings.</li> <li>• Replace the FCU or NCU.</li> <li>• The other terminal may be faulty; try sending to another machine.</li> <li>• If the rx signal is weak or defective, there may be a bad line.</li> </ul> <p><b>Cross reference</b></p> <ul style="list-style-type: none"> <li>• Tx level - NCU Parameter 01 (PSTN)</li> <li>• Cable equalizer - G3 Switch 07 (PSTN)</li> <li>• Dedicated Tx parameters - Section 4</li> </ul>
0-05	Unsuccessful after modem training at 2400 bps	<ul style="list-style-type: none"> <li>• Check the line connection.</li> <li>• Check the NCU - FCU connectors.</li> <li>• Try adjusting the tx level and/or cable equalizer.</li> <li>• Replace the FCU or NCU.</li> <li>• Check for line problems.</li> </ul> <p><b>Cross reference</b></p> <ul style="list-style-type: none"> <li>• See error code 0-04.</li> </ul>

Code	Meaning	Suggested Cause/Action
0-06	The other terminal did not reply to DCS	<ul style="list-style-type: none"> <li>• Check the line connection.</li> <li>• Check the FCU - NCU connectors.</li> <li>• Try adjusting the tx level and/or cable equalizer settings.</li> <li>• Replace the NCU or FCU.</li> <li>• The other end may be defective or incompatible; try sending to another machine.</li> <li>• Check for line problems.</li> </ul> <p><b>Cross reference</b></p> <ul style="list-style-type: none"> <li>• See error code 0-04.</li> </ul>
0-07	No post-message response from the other end after a page was sent	<ul style="list-style-type: none"> <li>• Check the line connection.</li> <li>• Check the FCU - NCU connectors.</li> <li>• Replace the NCU or FCU.</li> <li>• The other end may have jammed or run out of paper.</li> <li>• The other end user may have disconnected the call.</li> <li>• Check for a bad line.</li> <li>• The other end may be defective; try sending to another machine.</li> </ul>
0-08	The other end sent RTN or PIN after receiving a page, because there were too many errors	<ul style="list-style-type: none"> <li>• Check the line connection.</li> <li>• Check the FCU - NCU connectors.</li> <li>• Replace the NCU or FCU.</li> <li>• The other end may have jammed, or run out of paper or memory space.</li> <li>• Try adjusting the tx level and/or cable equalizer settings.</li> <li>• The other end may have a defective modem/NCU/FCU; try sending to another machine.</li> <li>• Check for line problems and noise.</li> </ul> <p><b>Cross reference</b></p> <ul style="list-style-type: none"> <li>• Tx level - NCU Parameter 01 (PSTN)</li> <li>• Cable equalizer - G3 Switch 07 (PSTN)</li> <li>• Dedicated Tx parameters - Section 4</li> </ul>
0-14	Non-standard post message response code received	<ul style="list-style-type: none"> <li>• Check the FCU - NCU connectors.</li> <li>• Incompatible or defective remote terminal; try sending to another machine.</li> <li>• Noisy line: resend.</li> <li>• Try adjusting the tx level and/or cable equalizer settings.</li> <li>• Replace the NCU or FCU.</li> </ul> <p><b>Cross reference</b></p> <ul style="list-style-type: none"> <li>• See error code 0-08.</li> </ul>

Code	Meaning	Suggested Cause/Action
0-15	The other terminal is not capable of specific functions.	<p>The other terminal is not capable of accepting the following functions, or the other terminal's memory is full.</p> <ul style="list-style-type: none"> <li>• Confidential rx</li> <li>• Transfer function</li> <li>• SEP/SUB/PWD/SID</li> </ul>
0-16	CFR or FTT not detected after modem training in confidential or transfer mode	<ul style="list-style-type: none"> <li>• Check the line connection.</li> <li>• Check the FCU - NCU connectors.</li> <li>• Replace the NCU or FCU.</li> <li>• Try adjusting the tx level and/or cable equalizer settings.</li> <li>• The other end may have disconnected, or it may be defective; try calling another machine.</li> <li>• If the rx signal level is too low, there may be a line problem.</li> </ul> <p><b>Cross reference</b></p> <ul style="list-style-type: none"> <li>• See error code 0-08.</li> </ul>
0-17	Communication was interrupted by pressing the Stop key.	If the Stop key was not pressed and this error keeps occurring, replace the operation panel.
0-20	Facsimile data not received within 6 s of retraining	<ul style="list-style-type: none"> <li>• Check the line connection.</li> <li>• Check the FCU - NCU connectors.</li> <li>• Replace the NCU or FCU.</li> <li>• Check for line problems.</li> <li>• Try calling another fax machine.</li> <li>• Try adjusting the reconstruction time for the first line and/or rx cable equalizer setting.</li> </ul> <p><b>Cross reference</b></p> <ul style="list-style-type: none"> <li>• Reconstruction time - G3 Switch 0A, bit 6</li> <li>• Rx cable equalizer - G3 Switch 07 (PSTN)</li> </ul>
0-21	EOL signal (end-of-line) from the other end not received within 5 s of the previous EOL signal	<ul style="list-style-type: none"> <li>• Check the connections between the FCU, NCU, &amp; line.</li> <li>• Check for line noise or other line problems.</li> <li>• Replace the NCU or FCU.</li> <li>• The remote machine may be defective or may have disconnected.</li> </ul> <p><b>Cross reference</b></p> <ul style="list-style-type: none"> <li>• Maximum interval between EOLs and between ECM frames - G3 Bit Switch 0A, bit 4</li> </ul>
0-22	The signal from the other end was interrupted for more than the acceptable modem carrier drop time (default: 200 ms)	<ul style="list-style-type: none"> <li>• Check the line connection.</li> <li>• Check the FCU - NCU connectors.</li> <li>• Replace the NCU or FCU.</li> <li>• Defective remote terminal.</li> <li>• Check for line noise or other line problems.</li> <li>• Try adjusting the acceptable modem carrier drop time.</li> </ul> <p><b>Cross reference</b></p> <ul style="list-style-type: none"> <li>• Acceptable modem carrier drop time - G3 Switch 0A, bits 0 and 1</li> </ul>

Code	Meaning	Suggested Cause/Action
0-23	Too many errors during reception	<ul style="list-style-type: none"> <li>• Check the line connection.</li> <li>• Check the FCU - NCU connectors.</li> <li>• Replace the NCU or FCU.</li> <li>• Defective remote terminal.</li> <li>• Check for line noise or other line problems.</li> <li>• Try asking the other end to adjust their tx level.</li> <li>• Try adjusting the rx cable equalizer setting and/or rx error criteria.</li> </ul> <p><b>Cross reference</b></p> <ul style="list-style-type: none"> <li>• Rx cable equalizer - G3 Switch 07 (PSTN)</li> <li>• Rx error criteria - Communication Switch 02, bits 0 and 1</li> </ul>
0-30	The other terminal did not reply to NSS(A) in AI short protocol mode	<ul style="list-style-type: none"> <li>• Check the line connection.</li> <li>• Check the FCU - NCU connectors.</li> <li>• Try adjusting the tx level and/or cable equalizer settings.</li> <li>• The other terminal may not be compatible.</li> </ul> <p><b>Cross reference</b></p> <ul style="list-style-type: none"> <li>• Dedicated tx parameters - Section 4</li> </ul>
0-32	The other terminal sent a DCS, which contained functions that the receiving machine cannot handle.	<ul style="list-style-type: none"> <li>• Check the protocol dump list.</li> <li>• Ask the other party to contact the manufacturer.</li> </ul>
0-52	Polarity changed during communication	<ul style="list-style-type: none"> <li>• Check the line connection.</li> <li>• Retry communication.</li> </ul>
0-70	The communication mode specified in CM/JM was not available (V.8 calling and called terminal)	<ul style="list-style-type: none"> <li>• The other terminal did not have a compatible communication mode (e.g., the other terminal was a V.34 data modem and not a fax modem.)</li> <li>• A polling tx file was not ready at the other terminal when polling rx was initiated from the calling terminal.</li> </ul>
0-74	The calling terminal fell back to T.30 mode, because it could not detect ANSam after sending CI.	<ul style="list-style-type: none"> <li>• The calling terminal could not detect ANSam due to noise, etc.</li> <li>• ANSam was too short to detect.</li> <li>• Check the line connection and condition.</li> <li>• Try making a call to another V.8/V.34 fax.</li> </ul>
0-75	The called terminal fell back to T.30 mode, because it could not detect a CM in response to ANSam (ANSam timeout).	<ul style="list-style-type: none"> <li>• The terminal could not detect ANSam.</li> <li>• Check the line connection and condition.</li> <li>• Try receiving a call from another V.8/V.34 fax.</li> </ul>
0-76	The calling terminal fell back to T.30 mode, because it could not detect a JM in response to a CM (CM timeout).	<ul style="list-style-type: none"> <li>• The called terminal could not detect a CM due to noise, etc.</li> <li>• Check the line connection and condition.</li> <li>• Try making a call to another V.8/V.34 fax.</li> </ul>

Code	Meaning	Suggested Cause/Action
0-77	The called terminal fell back to T.30 mode, because it could not detect a CJ in response to JM (JM timeout).	<ul style="list-style-type: none"> <li>The calling terminal could not detect a JM due to noise, etc.</li> <li>A network that has narrow bandwidth cannot pass JM to the other end.</li> <li>Check the line connection and condition.</li> <li>Try receiving a call from another V.8/V.34 fax.</li> </ul>
0-79	The called terminal detected CI while waiting for a V.21 signal.	Check for line noise or other line problems. If this error occurs, the called terminal falls back to T.30 mode.
0-80	The line was disconnected due to a timeout in V.34 phase 2 – line probing.	<ul style="list-style-type: none"> <li>The guard timer expired while starting these phases. Serious noise, narrow bandwidth, or low signal level can cause these errors.</li> </ul>
0-81	The line was disconnected due to a timeout in V.34 phase 3 – equalizer training.	<p>If these errors happen at the transmitting terminal:</p> <ul style="list-style-type: none"> <li>Try making a call at a later time.</li> <li>Try using V.17 or a slower modem using dedicated tx parameters.</li> <li>Try increasing the tx level.</li> <li>Try adjusting the tx cable equalizer setting.</li> </ul>
0-82	The line was disconnected due to a timeout in the V.34 phase 4 – control channel start-up.	<p>If these errors happen at the receiving terminal:</p> <ul style="list-style-type: none"> <li>Try adjusting the rx cable equalizer setting.</li> <li>Try increasing the tx level.</li> <li>Try using V.17 or a slower modem if the same error is frequent when receiving from multiple senders.</li> </ul>
0-83	The line was disconnected due to a timeout in the V.34 control channel restart sequence.	<ul style="list-style-type: none"> <li>Try adjusting the rx cable equalizer setting.</li> <li>Try increasing the tx level.</li> <li>Try using V.17 or a slower modem if the same error is frequent when receiving from multiple senders.</li> </ul>
0-84	The line was disconnected due to abnormal signaling in V.34 phase 4 – control channel start-up.	<ul style="list-style-type: none"> <li>The signal did not stop within 10 s.</li> <li>Turn off the machine, then turn it back on.</li> <li>If the same error is frequent, replace the FCU.</li> </ul>
0-85	The line was disconnected due to abnormal signaling in V.34 control channel restart.	<ul style="list-style-type: none"> <li>The signal did not stop within 10 s.</li> <li>Turn off the machine, then turn it back on.</li> <li>If the same error is frequent, replace the FCU.</li> </ul>
0-86	The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.	<ul style="list-style-type: none"> <li>The other terminal was incompatible.</li> <li>Ask the other party to contact the manufacturer.</li> </ul>
0-87	The control channel started after an unsuccessful primary channel.	<ul style="list-style-type: none"> <li>The receiving terminal restarted the control channel because data reception in the primary channel was not successful.</li> <li>This does not result in an error communication.</li> </ul>
0-88	The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.	<ul style="list-style-type: none"> <li>Try using a lower data rate at the start.</li> <li>Try adjusting the cable equalizer setting.</li> </ul>
2-10	The modem cannot enter tx mode	<ul style="list-style-type: none"> <li>Replace the FCU.</li> </ul>
2-11	Only one V.21 connection flag was received	<ul style="list-style-type: none"> <li>Replace the FCU.</li> </ul>

<b>Code</b>	<b>Meaning</b>	<b>Suggested Cause/Action</b>
2-12	Modem clock irregularity	<ul style="list-style-type: none"> <li>• Replace the FCU.</li> </ul>
2-13	Modem initialization error	<ul style="list-style-type: none"> <li>• Turn off the machine, then turn it back on.</li> <li>• Update the modem ROM.</li> <li>• Replace the FCU.</li> </ul>
2-20	Abnormal coding/decoding (cpu not ready)	<ul style="list-style-type: none"> <li>• Replace the FCU.</li> </ul>
2-23	JBIG compression or reconstruction error	<ul style="list-style-type: none"> <li>• Turn off the machine, then turn it back on.</li> <li>• Replace the EXFUNC board if the error is frequent.</li> </ul>
2-24	JBIG ASIC error	<ul style="list-style-type: none"> <li>• Turn off the machine, then turn it back on.</li> <li>• Replace the EXFUNC board if the error is frequent.</li> </ul>
2-25	JBIG data reconstruction error (BIH error)	<ul style="list-style-type: none"> <li>• JBIG data error</li> <li>• Check the sender's JBIG function.</li> <li>• Update the MBU ROM.</li> </ul>
2-26	JBIG data reconstruction error (Float marker error)	
2-27	JBIG data reconstruction error (End marker error)	
2-28	JBIG data reconstruction error (Timeout)	
2-50	The machine resets itself for a fatal FCU system error	<ul style="list-style-type: none"> <li>• If this is frequent, update the ROM, or replace the FCU.</li> </ul>
2-51	The machine resets itself because of a fatal communication error	<ul style="list-style-type: none"> <li>• If this is frequent, update the ROM, or replace the FCU.</li> </ul>
4-01	Line current was cut	<ul style="list-style-type: none"> <li>• Check the line connector.</li> <li>• Check the connection between FCU and NCU.</li> <li>• Check for line problems.</li> <li>• Replace the FCU or the NCU.</li> </ul>
4-10	Communication failed because of an ID Code mismatch (Closed Network) or Tel. No./CSI mismatch (Protection against Wrong Connections)	<ul style="list-style-type: none"> <li>• Get the ID Codes the same and/or the CSIs programmed correctly, then resend.</li> <li>• The machine at the other end may be defective.</li> </ul>
5-00	Data construction not possible	<ul style="list-style-type: none"> <li>• Replace the FCU.</li> </ul>
5-01	Data reconstruction not possible	
5-10	DCR timer expired	
5-20	Storage impossible because of a lack of memory	<ul style="list-style-type: none"> <li>• Temporary memory shortage.</li> <li>• Test the SAF memory.</li> <li>• Replace the FCU or optional EXMEM board</li> </ul>
5-21	Memory overflow	<ul style="list-style-type: none"> <li>• Wait for the messages which are currently in the memory to be sent or delete some files from memory.</li> </ul>
5-22	Mode table overflow after the second page of a scanned document	

Code	Meaning	Suggested Cause/Action
5-23	Print data error when printing a substitute rx or confidential rx message	<ul style="list-style-type: none"> <li>• Test the SAF memory.</li> <li>• Ask the other end to resend the message.</li> <li>• Replace the FCU or optional EXMEM board.</li> </ul>
5-24	Memory overflow after the second page of a scanned document	<ul style="list-style-type: none"> <li>• Try using a lower resolution setting.</li> <li>• Wait for the messages which are currently in the memory to be sent or delete some files from memory.</li> </ul>
5-25	SAF file access error	<ul style="list-style-type: none"> <li>• Replace the FCU or EXMEM board.</li> </ul>
6-00	G3 ECM - T1 time out during reception of facsimile data	<ul style="list-style-type: none"> <li>• Try adjusting the rx cable equalizer.</li> <li>• Replace the FCU or NCU.</li> </ul>
6-01	G3 ECM - no V.21 signal was received	
6-02	G3 ECM - EOR was received	
6-04	G3 ECM - RTC not detected	<ul style="list-style-type: none"> <li>• Check the line connection.</li> <li>• Check connections from the NCU to the FCU.</li> <li>• Check for a bad line or defective remote terminal.</li> <li>• Replace the FCU or NCU.</li> </ul>
6-05	G3 ECM - facsimile data frame not received within 18 s of CFR, but there was no line fail	<ul style="list-style-type: none"> <li>• Check the line connection.</li> <li>• Check connections from the NCU to the FCU.</li> <li>• Check for a bad line or defective remote terminal.</li> <li>• Replace the FCU or NCU.</li> <li>• Try adjusting the rx cable equalizer</li> </ul> <p><b>Cross reference</b></p> <ul style="list-style-type: none"> <li>• Rx cable equalizer - G3 Switch 07 (PSTN)</li> </ul>
6-06	G3 ECM - coding/decoding error	<ul style="list-style-type: none"> <li>• Defective FCU.</li> <li>• The other terminal may be defective.</li> </ul>
6-08	G3 ECM - PIP/PIN received in reply to PPS.NULL	<ul style="list-style-type: none"> <li>• The other end pressed Stop during communication.</li> <li>• The other terminal may be defective.</li> </ul>
6-09	G3 ECM - ERR received	<ul style="list-style-type: none"> <li>• Check for a noisy line.</li> <li>• Adjust the tx levels of the communicating machines.</li> <li>• See code 6-05.</li> </ul>
6-10	G3 ECM - error frames still received at the other end after all communication attempts at 2400 bps	<ul style="list-style-type: none"> <li>• Check for line noise.</li> <li>• Adjust the tx level (use NCU parameter 01 or the dedicated tx parameter for that address).</li> <li>• Check the line connection.</li> <li>• Defective remote terminal.</li> </ul>
6-21	V.21 flag detected during high speed modem communication	<ul style="list-style-type: none"> <li>• The other terminal may be defective or incompatible.</li> </ul>
6-22	The machine resets the sequence because of an abnormal handshake in the V.34 control channel	<ul style="list-style-type: none"> <li>• Check for line noise.</li> <li>• If the same error occurs frequently, replace the FCU.</li> <li>• Defective remote terminal.</li> </ul>
6-99	V.21 signal not stopped within 6 s	<ul style="list-style-type: none"> <li>• Replace the FCU.</li> </ul>

<b>Code</b>	<b>Meaning</b>	<b>Suggested Cause/Action</b>
22-00	Original length exceeded the maximum scan length	<ul style="list-style-type: none"> <li>• Divide the original into more than one page.</li> <li>• Check the resolution used for scanning. Lower the scan resolution if possible.</li> <li>• Add optional page memory.</li> </ul>
22-01	Memory overflow while receiving	<ul style="list-style-type: none"> <li>• Wait for the files in the queue to be sent.</li> <li>• Delete unnecessary files from memory.</li> <li>• Transfer the substitute reception files to an another fax machine, if the machine's printer is busy or out of order.</li> <li>• Add an optional SAF memory card or hard disk.</li> </ul>
22-02	Tx or rx job stalled due to line disconnection at the other end	<ul style="list-style-type: none"> <li>• The job started normally but did not finish normally; data may or may not have been received fully.</li> <li>• Restart the machine.</li> </ul>
22-04	The machine cannot store received data in the SAF	<ul style="list-style-type: none"> <li>• Update the ROM</li> <li>• Replace the FCU.</li> </ul>
23-00	Data read timeout during construction	<ul style="list-style-type: none"> <li>• Restart the machine.</li> <li>• Replace the FCU</li> </ul>
25-00	The machine software resets itself after a fatal transmission error occurred	<ul style="list-style-type: none"> <li>• Update the ROM</li> <li>• Replace the FCU.</li> </ul>
F0-xx	V.34 modem error	<ul style="list-style-type: none"> <li>• Replace the FCU.</li> </ul>



## 2.2 FAX SC CODE AND ERROR MESSAGES

### ***SC871 FCU Flash ROM Abnormal***

Message: **Flash ROM error.  
Quick Dial Table is Unavailable  
Please call service.**

The flash ROM mounted in the fax unit where the address book is stored has been detected as abnormal.

- Replace the FCU.

### ***FCU Flash ROM Access Limit Exceeded***

Message: **Flash ROM replacement is now  
necessary for the Quick Dial Table.**

The access limit of the flash ROM mounted in the fax unit has exceeded the limit. You can continue to use the machine after this error occurs.

- Replace the FCU.

### ***SRAM Abnormal***

Message: **Functional problems with facsimile.  
Data will be initialized.**

This message may appear immediately after the fax unit is installed, or when the SRAM (backup RAM) is detected abnormal.

On this message screen:

- Initialize SRAM.
- Set the SRAM backup switch to ON.

### ***Expansion SRAM Abnormal***

Message: **Some data will be deleted by installing Fax Memory Board.  
Will you continue to install it? If you want to cancel, turn main power switch  
off and take the Board out.**

This message may appear immediately after installation of the Function Upgrade Kit, or when the SRAM (backup RAM) is detected abnormal.

On this message screen:

- Initialize the expansion SRAM
- For the Function Upgrade Kit, set the backup switch to ON.

### 3. SERVICE TABLES

<p><b>⚠ CAUTION</b></p> <p><b>Never turn off the main power switch when the power LED is lit or flashing. To avoid damaging the hard disk or memory, press the operation power switch to switch the power off, wait for the power LED to go off, and then switch the main power switch off.</b></p>
---

**NOTE:** The main power LED lights or flashes while the platen cover or ARDF is open, while the main machine is communicating with a facsimile or the network server, or while the machine is accessing the hard disk or memory for reading or writing data.




Service  
Tables

### 3.1 SERVICE PROGRAM MODE

#### 3.1.1 SERVICE PROGRAM MODE OPERATION

The service program (SP) mode is used to check electrical data, change modes, and adjust values.

##### *Entering and Exiting SP mode*

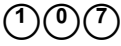-  1 Press the Clear Mode key.
- .
-  2 Use the keypad to enter "107".
- .
-  3 Hold down Clear/Stop for at least 3 seconds.
- .
- Fax SP** 4 On the touch-panel, press Fax SP.
- .
- Exit** 5 Press Exit twice to return to the copy window.
- .

**SP1-XXX (Bit Switches)** ➤ Section 3.2 Bit Switches

<b>1</b>	<b>Mode No.</b>		<b>Function</b>
101	System Switch		Change the bit switches for system settings for the fax option ➤ Section 3.2 Bit Switches
	001 – 032	00 – 1F	
102	IFAX SW (➤ Internet Fax (IFAX) Model J-C1 Service Manual)		
103	Printer Switch		Change the bit switches for printer settings for the fax option ➤ Section 3.2 Bit Switches
	001 – 016	00 – 0F	
104	Communication Switch		Change the bit switches for communication settings for the fax option ➤ Section 3.2 Bit Switches
	001 – 032	00 – 1F	
105	G3-1 Switch		Change the bit switches for the protocol settings of the standard G3 board ➤ Section 3.2 Bit Switches
	001 – 016	00 – 0F	
106	G3-2 Switch		Change the bit switches for the protocol settings of the optional G3 board ➤ Section 3.2 Bit Switches
	001 – 016	00 – 0F	
108	G4 Internal Switch		Change the bit switches for the optional ISDN settings ➤ Section 3.2 Bit Switches <b>(Japan Only)</b>
	001 – 032	00 – 1F	
109	G4 Parameter Switch		Change the bit switches for optional ISDN parameters ➤ Section 3.2 Bit Switches <b>(Japan Only)</b>
	001 – 016	00 – 0F	

**SP2-XXX (RAM Data)**

<b>2</b>	<b>Mode No.</b>		<b>Function</b>
101	RAM Read/Write		
	001		Change RAM data for the fax board directly. ☛ Section 3.5 Service RAM Addresses
102	Memory Dump		
	001	G3-1 Memory Dump	Print out RAM data for the fax board. ☛ Section 3.5 Service RAM Addresses
	002	G3-2 Memory Dump	Print out RAM data for the SG3-1 board.
	004	G4 Memory Dump	Print out RAM data for the SiG4 board. <b>(Japan Only)</b>
103	G3-1 NCU Parameters		
	001 – 023	CC, 01 – 22	NCU parameter settings for the standard G3 board. ☛ Section 3.3 NCU Parameters
104	G3-2 NCU Parameters		
	001 – 023	CC, 01 – 22	NCU parameter settings for the optional G3 board. ☛ Section 3.3 NCU Parameters

**SP3-XXX (Tel Line Settings)**

<b>3</b>	<b>Mode No.</b>		<b>Function</b>
101	Service Station		
	001	Fax Number	Enter the fax number of the service station.
	002	Select Line	Select the line type.
102	Serial Number		
	000		Enter the fax unit's serial number.
103	PSTN-1 Port Settings		
	001	Select Line	Select the line type setting for the G3-1 line. If the machine is installed on a PABX line, select "PABX", "PABX(GND)" or "PABX(FLASH)".
	002	PSTN Access Number	Enter the PSTN access number for the G3-1 line.
	003	Memory Lock Disabled	If the customer does not want to receive transmissions using Memory Lock on this line, turn this SP on.
104	PSTN-2 Port Settings		
	001	Select Line	Select the line setting for the G3-2 line. If the machine is installed on a PABX line, select "PABX", "PABX(GND)" or "PABX(FLASH)".
	002	PSTN Access Number	Enter the PSTN access number for the G3- 2 line.
	003	Memory Lock Disabled	If the customer does not want to receive transmissions using Memory Lock on this line, change this SP to on.
	004	Transmission Disabled	If you turn this SP on, the machine does not send any fax messages on the G3-2 line.

<b>3</b>	<b>Mode No.</b>		<b>Function</b>
106	ISDN Port Settings		
	001	Select Line	Select the line setting for the ISDN line. If the machine is installed to the PABX line, select "PABX". <b>(Japan Only)</b>
	002	PSTN Access Number	Enter the PSTN access number for ISDN line. <b>(Japan Only)</b>
	003	Memory Lock Disabled	If the customer does not want to receive transmissions using Memory Lock on this line, change this SP to on. <b>(Japan Only)</b>
	004	Transmission Disabled	If you turn this SP on, the machine does not send any fax messages on the ISDN line. <b>(Japan Only)</b>
201	FAX Switches		
	001 – 032	00 – 1F	Change the bit switches for scanner settings for the fax option ☛ Section 3.2.2 Fax Switches

**SP4-XXX (ROM Versions)**

<b>4</b>	<b>Mode No.</b>		<b>Function</b>
101	001	FCU ROM Version	Displays the FCU ROM version.
102	001	Error Codes	Displays the latest 64 fax error codes.
103	001	G3-1 ROM Version	Displays the G3-1 modem version.
104	001	G3-2 ROM Version	Displays the G3-2 modem version.
106	001	G4 ROM Version	Displays the G4 (ISDN) ROM version. <b>(Japan Only)</b>
107	001	Charge ROM Version	Not used.

**SP5-XXX (Initializing)**

<b>5</b>	<b>Mode No.</b>		<b>Function</b>
101	Initialize SRAM		
	000		Initializes the bit switches and user parameters, user data in the SRAM, files in the SAF memory, and clock.
102	Erase All Files		
	000		Erases all files stored in the SAF memory.
103	Reset Bit Switches		
	000		Resets the bit switches and user parameters.
104	Factory setting		
	000		Resets the bit switches and user parameters, user data in the SRAM and files in the SAF memory.

**SP6-XXX (Reports)**

<b>6</b>	<b>Mode No.</b>		<b>Function</b>	
101	System Parameter List		Touch the "ON" button to print the system parameter list.	
	000			
102	Service Monitor Report		Touch the "ON" button to print the service monitor report.	
	000			
103	G3 Protocol Dump List			
	001	G3 All Communications		Prints the protocol dump list of all communications for all G3 lines.
	002	G3-1 (All Communications)		Prints the protocol dump list of all communications for the G3-1 line.
	003	G3-1 (1 Communication)		Prints the protocol dump list of the last communication for the G3-1 line.
	004	G3-2 (All Communications)		Prints the protocol dump list of all communications for the G3-2 line.
	005	G3-2 (1 Communication)		Prints the protocol dump list of the last communication for the G3-2 line.
104	G4 Protocol Dump List		Prints the protocol dump lists for the G4 line. <b>(Japan Only)</b>	
	001	Dch + Bch 1		
	002	Dch		
	003	Bch 1 Link Layer		
	004	Dch Link Layer		
	005	Dch +Bch 2		
	006	Bch 2 Link Layer		
105	All Files print out		Prints out all the user files in the SAF memory, including confidential messages. <b>NOTE:</b> Do not use this function, unless the customer is having trouble printing confidential messages or recovering files stored using the memory lock feature.	
	000			
106	Journal Print out			
	001	All Journals		The machine prints all the communication records on the report.
	002	Specified Date		The machine prints all communication records after the specified date.

<b>6</b>	<b>Mode No.</b>		<b>Function</b>
107	Log List Print out		
	001	All log files	These log print out functions are for designer use only.
	002	Printer	
	003	SC/TRAP Stored	
	004	Decompression	
	005	Scanner	These log print out functions are for designer use only.
	006	JOB/SAF	
	007	Reconstruction	
	008	JBIG	
	009	Fax Driver	
	010	G3 CCU	
	011	Fax Job	
	012	CCU	
	013	Scanner Condition	

**SP7-XXX (Tests)**

These are the test modes for PTT approval.

<b>7</b>	<b>Function</b>
101	G3-1 Modem Tests
102	G3-1 DTMF Tests
103	Ringer Test
104	G3-1 V34 (S2400baud)
105	G3-1 V34 (S2800baud)
106	G3-1 V34 (S3000baud)
107	G3-1 V34 (S3200baud)
108	G3-1 V34 (S3429baud)
109	Recorded Message Test
110	G3-2 Modem Tests
111	G3-2 DTMF Tests
112	G3-2 V34 (S2400baud)
113	G3-2 V34 (S2800baud)
114	G3-2 V34 (S3000baud)
115	G3-2 V34 (S3200baud)
116	G3-2 V34 (S3429baud)
124	IG3-1 Modem Tests <b>(Japan Only)</b>
125	IG3-1 DTMF Tests <b>(Japan Only)</b>
126	IG3-1 V34 (S2400baud) <b>(Japan Only)</b>
127	IG3-1 V34 (S2800baud) <b>(Japan Only)</b>
128	IG3-1 V34 (S3000baud) <b>(Japan Only)</b>
129	IG3-1 V34 (S3200baud) <b>(Japan Only)</b>
130	IG3-1 V34 (S3429baud) <b>(Japan Only)</b>
131	IG3-2 Modem Tests <b>(Japan Only)</b>
132	IG3-2 DTMF Tests <b>(Japan Only)</b>
133	IG3-2 V34 (S2400baud) <b>(Japan Only)</b>
134	IG3-2 V34 (S2800baud) <b>(Japan Only)</b>
135	IG3-2 V34 (S3000baud) <b>(Japan Only)</b>
136	IG3-2 V34 (S3200baud) <b>(Japan Only)</b>
137	IG3-2 V34 (S3429baud) <b>(Japan Only)</b>



### 3.2 BIT SWITCHES

**⚠ WARNING**

**Do not adjust a bit switch or use a setting that is described as “Not used”, as this may cause the machine to malfunction or to operate in a manner that is not accepted by local regulations. Such bits are for use only in other areas, such as Japan.**

**NOTE:** Default settings for bit switches are not listed in this manual. Refer to the System Parameter List printed by the machine.

#### 3.2.1 SYSTEM SWITCHES

System Switch 00		SP No. 1-101-001
No	FUNCTION	COMMENTS
0	Dedicated transmission parameter programming 0: Disabled 1: Enabled	Set this bit to 1 before changing any dedicated transmission parameters. Reset this bit to 0 after programming dedicated transmission parameters.
1	Not used	Do not change the setting.
2	Technical data printout on the Journal 0: Disabled 1: Enabled	1: Instead of the personal name, the following data are listed on the Journal for each G3 communication.
<p>e.g. <b>0000 32V34 288/264 L0100 03 04</b>                      (1) (2)(3) (4) (5) (6) (7) (8)</p> <p>(1): EQM value (Line quality data). A larger number means more errors.                      (2): Symbol rate (V.34 only)                      (3): Final modem type used                      (4): Starting data rate (for example, 288 means 28.8 kbps)                      (5): Final data rate                      (6): Rx level (refer to the note after this table for how to read the rx level)                      (7): Total number of error lines that occurred during non-ECM reception.                      (8): Total number of burst error lines that occurred during non-ECM reception.</p> <p><b>Note:</b>                      EQM and rx level are fixed at “FFFF” in tx mode.                      The seventh and eighth numbers are fixed at “00” for transmission records and ECM reception records.</p>		

System Switch 00		SP No. 1-101-001
No	FUNCTION	COMMENTS
2	<p><b>Rx level calculation</b></p> <p><b>Example:</b> 0000 32 V34 288/264 L <u>01 00</u> 03 04</p> <p>The four-digit hexadecimal value (N) after “L” indicates the rx level. The <u>high</u> byte is given first, followed by the <u>low</u> byte. Divide the decimal value of N by -16 to get the rx level.</p> <p>In the above example, the decimal value of N (= 0100 [H]) is 256. So, the actual rx level is 256/-16 = -16 dB</p>	
3	Not used	Do not change the settings.
4	<p>Line error mark on the received page</p> <p>0: Disabled 1: Enabled</p>	If this bit is 1, a mark will be printed on the left edge of the page at any place where a line error occurred in the data. Such errors are caused by a noisy line for example.
5	<p>G3/G4 communication parameter display</p> <p>0: Disabled 1: Enabled</p>	This is a fault-finding aid. The LCD shows the key parameters (see below). This is normally disabled because it cancels the CSI display for the user. Be sure to reset this bit to 0 after testing.
6	<p>Protocol dump list output after each communication</p> <p>0: Off 1: On</p>	This is only used for communication troubleshooting. It shows the content of the transmitted facsimile protocol signals. Always reset this bit to 0 after finishing testing. If system switch 09 bit 6 is at “1”, the list is only printed if there was an error during the communication.
7	Not used	Do not change the setting.

Service Tables

**G3 Communication Parameters**

Modem rate	<p>336: 33600 bps    168: 16800 bps</p> <p>312: 31200 bps    144: 14400 bps</p> <p>288: 28800 bps    120: 12000 bps</p> <p>264: 26400 bps    96: 9600 bps</p> <p>240: 24000 bps    72: 7200 bps</p> <p>216: 21600 bps    48: 4800 bps</p> <p>192: 19200 bps    24: 2400 bps</p>
Resolution	<p>S: Standard (8 x 3.85 dots/mm)</p> <p>D: Detail (8 x 7.7 dots/mm)</p> <p>F: Fine (8 x 15.4 dots/mm)</p> <p>SF: Superfine (16 x 15.4 dots/mm)</p> <p>21: Standard (200 x 100 dpi)</p> <p>22: Detail (200 x 200 dpi)</p> <p>44: Superfine (400 x 400 dpi)</p>
Compression mode	<p>MMR: MMR compression</p> <p>MR: MR compression</p> <p>MH: MH compression</p> <p>JBO: JBIG compression (Optional mode)</p> <p>JBB: JBIG compression (Basic mode)</p>
Communication mode	<p>ECM: With ECM</p> <p>NML: With no ECM</p>

Width and reduction	A4: A4 (8.3"), no reduction B4: B4 (10.1"), no reduction A3: A3 (11.7"), no reduction
I/O rate	0: 0 ms/line      10: 10 ms/line 25: 2.5 ms/line      20: 20 ms/line 5: 5 ms/line      40: 40 ms/line <b>Note:</b> "40" is displayed while receiving a fax message using AI short protocol.

**System Switch 01** - Not used (Do not change the factory settings.)

<b>System Switch 02</b>		<b>SP No. 1-101-003</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 1</b>	Not used	Do not change the setting.
<b>2</b>	Communication error reset	0: OFF/1: ON Bit 2 turns on or off the communication error reset switch. When this switch is on, the system forcefully terminates the job under the following conditions: 1. A communication job has started, and 2. The job does not end within an hour. After terminating the job, the system goes back to the ready status. When this switch is on, the system can automatically recover from a communication error. You cannot adjust the timer for the second condition above.
<b>3</b>	Not used	Do not change the setting.
<b>4</b>	File retention time 0: Depends on User Parameter 24 [18(H)] 1: No limit	1: A file that had a communication error will not be erased unless the communication is successful.
<b>5</b>	Not used	Do not change the setting.
<b>6 to 7</b>	Memory read/write by RDS <b>Bit 7    6    Setting</b> 0    0    Always disabled 0    1    User selectable 1    0    User selectable 1    1    Always enabled	(0,0): All RDS systems are always locked out. (0,1), (1,0): Normally, RDS systems are locked out, but the user can temporarily switch RDS on to allow RDS operations to take place. RDS will automatically be locked out again after a certain time, which is stored in System Switch 03. Note that if an RDS operation takes place, RDS will not switch off until this time limit has expired. (1,1): At any time, an RDS system can access the machine.

<b>System Switch 03</b>		<b>SP No. 1-101-004</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 7</b>	Length of time that RDS is temporarily switched on when bits 6 and 7 of System Switch 02 are set to "User selectable"	00 - 99 hours (BCD).  This setting is only valid if bits 6 and 7 of System Switch 02 are set to "User selectable". The default setting is 24 hours.

<b>System Switch 04</b>		<b>SP No. 1-101-005</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	Program registration list output key display selection	This setting determines whether the key to print the program registration list is displayed on the screen.
<b>1-2</b>	Not used	Do not change the settings.
<b>3</b>	Printing dedicated tx parameters on Quick/Speed Dial Lists <b>0:</b> Disabled <b>1:</b> Enabled	<b>1:</b> Each Quick/Speed dial number on the list is printed with the dedicated tx parameters (10 bytes each). The first 10 bytes of data are the programmed dedicated tx parameters; 34 bytes of data are printed (the other 24 bytes have no use for service technicians).
<b>4-7</b>	Not used	Do not change the settings.

Service Tables

<b>System Switch 05</b> - Not used (Do not change the factory settings.)
<b>System Switch 06</b> - Not used (Do not change the factory settings.)
<b>System Switch 07</b> - Not used (Do not change the factory settings.)
<b>System Switch 08</b> - Not used (Do not change the factory settings.)

<b>System Switch 09</b>		<b>SP No. 1-101-010</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	Addition of image data from confidential transmissions on the transmission result report <b>0:</b> Disabled <b>1:</b> Enabled	If this feature is enabled, the top half of the first page of confidential messages will be printed on transmission result reports.
<b>1</b>	Inclusion of communications on the Journal when no image data was exchanged. <b>0:</b> Disabled <b>1:</b> Enabled	<b>0:</b> Communications that reached phase C (message tx/rx) of the T.30 protocol are listed on the Journal. <b>1:</b> Communications that reached phase A (call setup) of T.30 protocol are listed on the Journal. This will include telephone calls.
<b>2</b>	Automatic error report printout <b>0:</b> Disabled <b>1:</b> Enabled	<b>0:</b> Error reports will not be printed. <b>1:</b> Error reports will be printed automatically after failed communications.
<b>3</b>	Printing of the error code on the error report <b>0:</b> No <b>1:</b> Yes	<b>1:</b> Error codes are printed on the error reports.
<b>4</b>	Not used	Do not change the setting.
<b>5</b>	Power failure report <b>0:</b> Disabled <b>1:</b> Enabled	<b>1:</b> A power failure report will be automatically printed after the power is switched on if a fax message disappeared from the memory when the power was turned off last.
<b>6</b>	Conditions for printing the protocol dump list <b>0:</b> Print for all communications <b>1:</b> Print only when there is a communication error	This switch becomes effective only when system switch 00 bit 6 is set to 1. <b>1:</b> Set this bit to 1 when you wish to print a protocol dump list only for communications with errors.
<b>7</b>	Priority given to various types of remote terminal ID when printing reports <b>0:</b> RTI > CSI > Dial label > Tel. number <b>1:</b> Dial label > Tel. number > RTI > CSI	This bit determines which set of priorities the machine uses when listing remote terminal names on reports. <b>Dial Label:</b> The name stored, by the user, for the Quick/Speed Dial number.

<b>System Switch 0A</b>		<b>SP No. 1-101-011</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0-2</b>	Not used	Do not change the settings.
<b>3</b>	Continuous polling reception <b>0:</b> Disabled <b>1:</b> Enabled	This feature allows a series of stations to be polled in a continuous cycle. This will continue until the polling reception file is erased. The dialing interval is the same as memory transmission.
<b>4</b>	Dialing on the ten-key pad when the external telephone is off-hook <b>0:</b> Disabled <b>1:</b> Enabled	<b>0:</b> Prevents dialing from the ten-key pad while the external telephone is off-hook. Use this setting when the external telephone is not by the machine, or if a wireless telephone is connected as an external telephone. <b>1:</b> The user can dial on the machine's ten-key pad when the handset is off-hook.
<b>5</b>	On hook dial <b>0:</b> Disabled <b>1:</b> Enabled	<b>0:</b> On hook dial is disabled.
<b>6</b>	Not used	Do not change the settings.
<b>7</b>	Line used when the machine falls back to G3 from G4 if the other end is not a G4 machine <b>0:</b> PSTN <b>1:</b> ISDN ( <b>Japan Only</b> )	This bit switch has no effect if Communication Switch 07 bit 0 is set to 0.

<b>System Switch 0B</b> - Not used (Do not change the factory settings.)
<b>System Switch 0C</b> - Not used (Do not change the factory settings.)
<b>System Switch 0D</b> - Not used (Do not change the factory settings.)

<b>System Switch 0E</b>		<b>SP No. 1-101-015</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0-2</b>	Not used	Do not change the settings.
<b>3</b>	Action when the external handset goes off-hook <b>0:</b> Manual tx and rx operation <b>1:</b> Memory tx and rx operation (the display remains the same)	<b>0:</b> Manual tx and rx are possible while the external handset is off-hook. However, memory tx is not possible. <b>1:</b> The display stays in standby mode even when the external handset is used, so that other people can use the machine for memory tx operation. Note that manual tx and rx are not possible with this setting.
<b>4-7</b>	Not used	Do not change the settings.

System Switch 0F		SP No. 1-101-016
No	FUNCTION	COMMENTS
<b>0 to 7</b>	Country/area code for functional settings (Hex)  00: France    11: USA 01: Germany 12: Asia 02: UK        13: Japan 03: Italy      14: Hong Kong 04: Austria   15: South Africa 05: Belgium   16: Australia 06: Denmark 17: New Zealand 07: Finland   18: Singapore 08: Ireland   19: Malaysia 09: Norway   1A: China 0A: Sweden   1B: Taiwan 0B: Switz.   1C: Korea 0C: Portugal 20: Turkey 0D: Holland   21: Greece 0E: Spain     22: Hungary 0F: Israel    23: Czech 10: Canada   24: Poland	This country/area code determines the factory settings of bit switches and RAM addresses. However, it has no effect on the NCU parameter settings and communication parameter RAM addresses.  <b>Cross reference</b> NCU country code: Function 06, parameter C.C.

**System Switch 10** - Not used (Do not change the factory settings.)

System Switch 11		SP No. 1-101-018
No	FUNCTION	COMMENTS
<b>0</b>	TTI printing position <b>0:</b> Superimposed on the page data <b>1:</b> Printed before the data leading edge	Change this bit to 1 if the TTI overprints information that the customer considers to be important (G3 transmissions).
<b>1</b>	TSI (G3) or CIL/TID (G4) printing position <b>0:</b> Superimposed on the page data <b>1:</b> Printed before the data leading edge ( <b>Japan Only</b> )	Change this bit to 1 if the TSI (G3) or CIL/TID (G4) overprints information that the customer considers to be important.  CIL: Command Information Line (Group 4)
<b>2-6</b>	Not used	Do not change the factory setting.
<b>7</b>	Use of parallel memory transmission with G4 transmission <b>0:</b> Disabled <b>1:</b> Enabled ( <b>Japan Only</b> )	This determines whether parallel transmission can be used with a G4 transmission or not. Note that this bit is only effective if Parallel Memory transmission is enabled (User Parameter 07 - bit 2).

<b>System Switch 12</b>		<b>SP No. 1-101-019</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 7</b>	TTI/CIL printing position in the main scan direction	TTI/CIL: 08 to 92 (BCD) mm Input even numbers only. This setting determines the print start position for the TTI and CIL from the left edge of the paper. If the TTI is moved too far to the right, it may overwrite the file number which is on the top right of the page. On an A4 page, if the CIL is moved over by more than 50 mm, it may overwrite the page number.

**System Switch 13** - Not used (do not change the settings)

**System Switch 14** - Not used (do not change the settings)

<b>System Switch 15</b>		<b>SP No. 1-101-022</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	Not used	Do not change the setting.
<b>1</b>	Going into the Energy Saver mode automatically <b>0:</b> Enabled <b>1:</b> Disabled	<b>1:</b> The machine will restart from the Energy Saver mode quickly, because the +5V power supply is active even in the Energy Saver mode.
<b>2-7</b>	Not used	Do not change the settings.

**System Switch 16** - Not used (do not change the settings)

**System Switch 17** - Not used (do not change the settings)

**System Switch 18** - Not used (do not change the settings)

<b>System Switch 19</b>		<b>SP No. 1-101-026</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0-2</b>	Not used	Do not change the settings.
<b>3</b>	Selects a temporary address for the number PC-FAX #.	<b>0:</b> When prefixed by #, handled only as a stored address. <b>1:</b> When prefixed by #, when a digit exists that prevents handling the transaction as a Coded, One-Touch, or Group dialing, handles temporarily.
<b>4</b>	Number of jobs controlled for PC-FAX TX <b>0:</b> 64 Jobs <b>1:</b> No limitations (but conforms to device limitations)	Sets the number of jobs controlled for PC-FAX transactions. If "1" is selected (no limitations), control is relinquished to the device (standard 400, expandable to 800).
<b>6</b>	Not used	Do not change the settings.
<b>7</b>	Special Original mode <b>0:</b> Disabled <b>1:</b> Enabled	<b>1:</b> If the customer frequently wishes to transmit a form or letterhead which has a colored or printed background, change this bit to "1". "Original 1" and "Original 2" can be selected in addition to the "Text", "Text/Photo" and "Photo" modes.



System Switch 1A		SP No. 1-101-026
No	FUNCTION	COMMENTS
0 to 7	LS RX memory remaining refresh value setting	Sets a value of 4K. If the amount of memory remaining falls below 4K, documents received in memory are printed to create more space in memory. Initial value: 0x80 (512K) 00-FF (0-1020 KB: Hex)

<b>System Switch 1B</b> - Not used (do not change the settings)
<b>System Switch 1C</b> - Not used (do not change the settings)

System Switch 1D		SP No. 1-101-030
No	FUNCTION	COMMENTS
0	RTI/CSI/CPS display 0: Disabled 1: Enabled	1: RTI/CSI/CPS is displayed on the top line of the LCD panel during communication.
1-7	Not used	Do not change the settings.

System Switch 1E		SP No. 1-101-031
No	FUNCTION	COMMENTS
0	Communication after the Journal data storage area has become full 0: Impossible 1: Possible	This setting is effective only when Automatic Journal printout is enabled but the machine cannot print the report (e.g., no paper). 0: If the buffer memory of the communication records for the Journal has become full, fax communications will become impossible, to prevent overwriting the communication records before the machine prints them out. 1: If the buffer memory of the communication records for the Journal is full, fax communications are still possible. But the machine will overwrite the oldest communication records. <b>Cross Reference</b> <ul style="list-style-type: none"> <li>• Automatic Journal output - User switch 03 bit 7</li> <li>• Number of communication records for the Journal: 200 records (standard) 1000 records (with the Function Upgrade unit installed)</li> </ul>
1	Action when the SAF memory has become full during scanning 0: The current page is erased. 1: The entire file is erased.	0: If the SAF memory becomes full during scanning, the successfully scanned pages are transmitted. 1: If the SAF memory becomes full during scanning, the file is erased and no pages are transmitted.  This bit switch is ignored for parallel memory transmission.

System Switch 1E		SP No. 1-101-031
No	FUNCTION	COMMENTS
2	RTI/CSI display priority 0: RTI 1: CSI	This bit determines which identifier, RTI or CSI, is displayed on the LCD while the machine is communicating in G3 non-standard mode.
3	File No. printing 0: Enabled 1: Disabled	1: File numbers are not printed on any reports.
4	Action when authorized reception is enabled but authorized RTIs/CSIs are <b>not yet</b> programmed  0: All fax reception is disabled 1: Faxes can be received if the sender has an RTI or CSI	If authorized reception is enabled but the user has stored no acceptable sender RTIs or CSIs, the machine will not be able to receive any fax messages. If the customer wishes to receive messages from any sender that includes an RTI or CSI, and to block messages from senders that do not include an RTI or CSI, change this bit to "1", then enable Authorized Reception. Otherwise, keep this bit at "0 (default setting)".
5-6	Not used	Do not change the setting.
7	RAM initialization after the optional Function Upgrade unit is installed or removed 0: Enabled 1: Disabled	When the machine detects that a Function Upgrade unit has been installed or removed, the machine shows the following message on the display for the customer.  <i>"Adding/Removing FAX Feature Expander causes data loss. Turn Main Power Switch off and remove/replace it to avoid loss. To continue, press Yes."</i>  If Yes is pressed, the machine initializes the RAM to the "with" or "without card" configuration. However, changing this bit to "1" disables this initialization, even if Yes is pressed.  Change this bit to 1 after installing the Function Upgrade unit.  0: When the above message is displayed, the machine initializes the RAM if Yes is pressed. The amount of data lost depends on whether the board is in or out. To avoid losing data, the user must switch off immediately and put the Function Upgrade unit back in. 1: When the above message is displayed, the machine does not initialize the RAM even if Yes is pressed. However, the fax unit cannot be used until the user switches off, puts the Function Upgrade unit back in, then switches back on. No data is lost.

<b>System Switch 1F</b>		<b>SP No. 1-101-032</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	Not used	Do not change the setting.
<b>1</b>	Report printout after an original jam during SAF storage or if the SAF memory fills up <b>0:</b> Enabled <b>1:</b> Disabled	<b>0:</b> When an original jams, or the SAF memory overflows during scanning, a report will be printed. Change this bit to "1" if the customer does not want to have a report in these cases. Memory tx – Memory storage report Parallel memory tx – Transmission result report
<b>2</b>	Not used	Do not change the setting.
<b>3</b>	Received fax print start timing (G3 reception) <b>0:</b> After receiving each page <b>1:</b> After receiving all pages	<b>0:</b> The machine prints each page immediately after the machine receives it. <b>1:</b> The machine prints the complete message after the machine receives all the pages in the memory.
<b>4</b>	Received fax print start timing (G4 reception) ( <b>Japan Only</b> ) <b>0:</b> After receiving each page <b>1:</b> After receiving all pages	
<b>5-6</b>	Not used	Do not change the factory settings.
<b>7</b>	Action when a fax SC has occurred <b>0:</b> Automatic reset <b>1:</b> Fax unit stops	<b>0:</b> When the fax unit detects a fax SC code other than SC1201 and SC1207, the fax unit automatically resets itself. <b>1:</b> When the fax unit detects any fax SC code, the fax unit stops.  <b>Cross Reference</b> Fax SC codes - See "Troubleshooting"

### 3.2.2 FAX SWITCHES

**FAX Switch 00** - Not used (do not change the settings)

<b>FAX Switch 01</b>		<b>SP No. 3-201-002</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b> <b>to</b> <b>7</b>	Scan density step value (Text mode)	When scan density is adjusted manually away from the Normal setting, the threshold value for binary picture processing changes for each step from the value specified by Scanner Switch 02, by the amount programmed here. For example, with the default setting (14), the threshold value changes as follows. +3 (Darkest) : 71 (= 85 – 14) +2 : 85 (= 99 – 14) +1 : 99 (= 113 – 14) 0 (Normal) : 113 (Scanner Switch 02 setting) -1 : 127 (= 113 + 14) -2 : 141 (= 127 + 14) -3 (Lightest) : 155 (= 141 + 14)  For smaller steps, input a lower value.

Service Tables

<b>FAX Switch 02</b>		<b>SP No. 3-201-003</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b> <b>to</b> <b>7</b>	Binary picture processing: Threshold for Text mode - Normal setting (center position)	This setting determines the threshold value for binary picture processing in Text mode (when the scan density setting is at the center). The value can be between 01 and FF. For a darker threshold, input a lower value. Default setting: 71(H) = 113(D)

**FAX Switch 03** - Not used (do not change the settings)

<b>FAX Switch 04</b>		<b>SP No. 3-201-005</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b> <b>to</b> <b>7</b>	Binary picture processing: Threshold for monotone background special original 1 mode - Normal setting (center position)	This setting determines the threshold value for binary picture processing in monotone background special original 1 mode (when the scan density setting is at the center). The value can be between 01 and FF. For a darker threshold, input a lower value. Default setting: A4(H) = 164(D)

<b>FAX Switch 05</b>		<b>SP No. 3-201-006</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 7</b>	Binary picture processing: Threshold for colored background special original 2 mode - Normal setting (center position)	This setting determines the threshold value for binary picture processing in colored background special original 2 mode (when the scan density setting is at the center). The value can be between 01 and FF. For a darker threshold, input a lower value. Default setting: 28(H) = 40(D)

<b>FAX Switch 06</b>		<b>SP No. 3-201-007</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 3</b>	MTF filter level (Text mode) The value can be between 0(Off) and F. For a weaker threshold, input a lower value. Default setting: 7 This setting is independent from the threshold specified by the copier SP modes.	
<b>4 to 7</b>	MTF filter level (Text/Photo mode) The value can be between 0(Off) and F. For a weaker threshold, input a lower value. Default setting: 7 This setting is independent from the threshold specified by the copier SP modes.	

<b>FAX Switch 07</b>		<b>SP No. 3-201-008</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 2</b>	Smoothing filter level (Photo mode)	The value can be between 0(Off) and 7. For a weaker threshold, input a lower value. Default setting: 2 This setting is independent from the threshold setting specified by the copier SP modes.
<b>3-7</b>	Not used	Do not change the settings.

<b>FAX Switch 08 – Not used (do not change the settings)</b>	<b>SP No. 3-201-009</b>
--	-------------------------

<b>FAX Switch 09 – Not used (do not change the settings)</b>	<b>SP No. 3-201-010</b>
--	-------------------------

FAX Switch 0A		SP No. 3-201-011
No	FUNCTION	COMMENTS
0-3	Not used	Do not change the settings.
4 to 7	MTF filter level (Colored background special original mode) The value can be between 0 (Off) and F. For a weaker threshold, input a lower value. Default setting: 7 This setting is independent from the threshold specified by the copier SP modes.	

FAX Switch 0B		SP No. 3-201-012
No	FUNCTION	COMMENTS
0 to 3	Scan margin setting (right and left margin in book scan ADF mode) The setting can be between 0 and F (H) (unit 0.5 mm). Default setting: 2 mm	
4 to 7	Scan margin setting (top and bottom margin in book scan and ADF mode) The setting can be between 0 and 7 (H) (unit 0.5 mm). Default setting: 3 mm	

Service Tables

FAX Switch 0C		SP No. 3-201-013
No	FUNCTION	COMMENTS
0	Action when an original jam has occurred while scanning the original into memory for memory tx <b>0:</b> Continues scanning after recovery <b>1:</b> Stops scanning and erases all scanned pages for that job	This bit is only effective when parallel memory tx is disabled (user parameter 07 - bit 2). If parallel memory tx is enabled, the machine always erases the scanned pages when an original jam occurs. The machine then asks the user to retry from the first page, even if the parallel memory tx is not actually used. <b>0:</b> The machine displays a message asking the user to put the jammed page back into the original stack, and continues scanning. The message is displayed for the time period specified by scanner switch 0E, bit 2. <b>1:</b> The machine erases all the scanned pages and asks the user to retry from the first page.
1 to 2	Setting when an original size cannot be recognized <b>Bit 2 1 Setting</b> 0 0 No original 0 1 A5 □ 1 0 A5 □ 1 1 No original	
3-7	Not used	Do not change the settings.

<b>FAX Switch 0D</b>		<b>SP No. 3-201-014</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0-6</b>	Not used	Do not change the settings.
<b>7</b>	Scan width for A5 lengthwise or B5 lengthwise originals <b>0:</b> 210 mm (8.5") <b>1:</b> Original width	<b>0:</b> The machine scans the original as 210 mm (8.5") width. The transmitted image has a blank area on the right. <b>1:</b> The machine scans 148 mm (A5) or 182 mm (B5) and centers the scanned data on a 216 mm width transmitted image.

<b>FAX Switch 0E</b>		<b>SP No. 3-201-015</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	Not used	Do not change the settings.
<b>1</b>	Scan resolution unit <b>0:</b> mm <b>1:</b> inches	This bit determines which resolution unit will be used for scanning a fax message. Default setting: mm
<b>2-7</b>	Not used	Do not change the settings.

<b>FAX Switch 0F</b>		<b>SP No. 3-201-015</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	A4/LT LEF-to-SEF turn	<b>0:</b> OFF/ <b>1:</b> ON Bit 0 activates or deactivates the A4/LT LEF-to-SEF turn function. When this function is activated, the machine sends A4/LT SEF data even when the machine has fed an A4/LT LEF original.
<b>1</b>	Not used	Do not change the setting.
<b>2</b>	A5/HLT SEF-to-LEF turn	<b>0:</b> OFF/ <b>1:</b> ON Bit 2 activates or deactivates the A5/HLT SEF-to-LEF turn function. When this function is activated, the machine sends A5/HLT LEF data even when the machine has fed an A5/HLT SEF original.
<b>3-7</b>	Not used	Do not change the settings.

<b>FAX Switch 10 ~ 1F - Not used (do not change the settings)</b>	<b>SP No. 3-201-016</b>
---	-------------------------

**3.2.3 PRINTER SWITCHES**

<b>Printer Switch 00</b>		<b>SP No. 1-103-001</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	Page separation mark <b>0:</b> Disabled <b>1:</b> Enabled	<b>0:</b> No marks are printed. <b>1:</b> If a received page has to be printed out on two sheets, an asterisk inside square brackets is printed at the bottom right hand corner of the first sheet, and a "2" inside a small box is printed at the top right hand corner of the second sheet. This helps the user to identify pages that have been split.
<b>1</b>	Repetition of data when the received page is longer than the printer paper <b>0:</b> Disabled <b>1:</b> Enabled	<b>0:</b> The next page continues from where the previous page left off. <b>1:</b> The final few mm of the previous page are repeated at the top of the next page. The amount of repeated data depends on printer switch 04, bits 5 and 6.
<b>2</b>	Prints the date and time on received fax messages <b>0:</b> Disabled <b>1:</b> Enabled	This switch is only effective when user parameter 02 - bit 2 (printing the received date and time on received fax messages) is enabled. <b>1:</b> The machine prints the received and printed date and time at the bottom of each received page.
<b>3-7</b>	Not used	Do not change the settings.

Service Tables

<b>Printer Switch 01</b>		<b>SP No. 1-103-002</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0-2</b>	Not used	Do not change the settings.
<b>3-4</b>	Maximum print width used in the setup protocol <b>Bit 4 3      Setting</b> 0 0      Not used 0 1      A3 1 0      B4 1 1      A4	These bits are only effective when bit 7 of printer switch 01 is "1".
<b>5-6</b>	Not used	Do not change the settings.
<b>7</b>	Received message width restriction in the protocol signal to the sender <b>0:</b> Disabled <b>1:</b> Enabled	<b>0:</b> The machine informs the transmitting machine of the print width depending on the paper size available from the paper feed stations. Refer to the table on the next page for how the machine chooses the paper width used in the setup protocol (NSF/DIS). <b>1:</b> The machine informs the transmitting machine of the fixed paper width which is specified by bits 3 and 4 above.



**Relationship between available paper sizes and printer width used in the setup protocol**

Available Paper Size	Printer width used in the Protocol (NSF/DIS)
A4 or 8.5" x 11"	297 mm width
B5	256 mm width
A5 or 8.5" x 5.5"	216 mm width
No paper available (Paper end)	216 mm width

Printer Switch 02		SP No. 1-103-003
No	FUNCTION	COMMENTS
0	1st paper feed station usage for fax printing 0: Enabled 1: Disabled	<b>0:</b> The paper feed station can be used to print fax messages and reports.  <b>1:</b> The specified paper feed station will not be used for printing fax messages and reports.  <b>Note:</b> Do not disable usage for a paper feed station which has been specified by User Parameter Switch 0F (15), or which is used for the Specified Cassette Selection feature.
1	2nd paper feed station usage for fax printing 0: Enabled 1: Disabled	
2	3rd paper feed station usage for fax printing 0: Enabled 1: Disabled	
3	4th paper feed station usage for fax printing 0: Enabled 1: Disabled	
4	LCT usage for fax printing 0: Enabled 1: Disabled	
5-7	Not used	Do not change the settings.

Printer Switch 03		SP No. 1-103-004
No	FUNCTION	COMMENTS
0	Length reduction of received data 0: Disabled 1: Enabled	<b>0:</b> Incoming pages are printed without length reduction. (Page separation threshold: Printer Switch 03, bits 4 to 7) <b>1:</b> Incoming page length is reduced when printing. (Maximum reducible length: Printer Switches 04, bits 0 to 4)
1-3	Not used	

Printer Switch 03		SP No. 1-103-004						
No	FUNCTION	COMMENTS						
4 to 7	<p>Page separation threshold (with reduction disabled with switch 03-0 above)</p> <p>If the incoming page is up to x mm longer than the length of copy paper, the excess portion will not be printed. If the incoming page is more than x mm longer than the length of copy paper, the excess portion will be printed on the next page. The value of x is determined by these four bits.</p> <p>Hex value of bits 4 to 7 x (mm)</p> <table style="margin-left: 40px;"> <tr><td>0</td><td>0</td></tr> <tr><td>1</td><td>1</td></tr> </table> <p>and so on until</p> <table style="margin-left: 40px;"> <tr><td>F</td><td>15</td></tr> </table> <p>Default setting: 6 mm</p> <p><b>Cross reference</b> Length reduction On/Off: Printer Switch 03, Bit 0</p>	0	0	1	1	F	15	
0	0							
1	1							
F	15							

Service Tables

Printer Switch 04		SP No. 1-103-005												
No	FUNCTION	COMMENTS												
0 to 4	<p>Maximum reducible length when length reduction is enabled with switch 03-0 above. &lt;Maximum reducible length&gt; = &lt;Paper length&gt; + (N x 5mm) "N" is the decimal value of the binary setting of bits 0 to 4.</p> <p>Bit 4 3 2 1 0 Setting</p> <table style="margin-left: 40px;"> <tr><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0 mm</td></tr> <tr><td>0</td><td>0</td><td>0</td><td>0</td><td>1</td><td>5 mm</td></tr> </table> <p>0 0 1 0 0 20 mm (default setting)</p> <p>1 1 1 1 1 155 mm</p> <p>For A5 sideways and B5 sideways paper &lt;Maximum reducible length&gt; = &lt;Paper length&gt; + 0.75 x (N x 5mm)</p>	0	0	0	0	0	0 mm	0	0	0	0	1	5 mm	
0	0	0	0	0	0 mm									
0	0	0	0	1	5 mm									
5 to 6	<p>Length of the duplicated image on the next page, when page separation has taken place.</p> <p><math>\begin{pmatrix} 0 \\ 0 \end{pmatrix} = 4 \text{ mm}, \begin{pmatrix} 1 \\ 0 \end{pmatrix} = 10 \text{ mm}, \begin{pmatrix} 0 \\ 1 \end{pmatrix} = 15 \text{ mm}, \begin{pmatrix} 1 \\ 1 \end{pmatrix} = \text{Not Used}</math></p>													
7	Not used.	Do not change the setting.												

**Printer Switch 05 - Not used (do not change the settings)**

<b>Printer Switch 06</b>		<b>SP No. 1-103-007</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	Printing while a paper cassette is pulled out, when the Just Size Printing feature is enabled. <b>0:</b> Printing will not start <b>1:</b> Printing will start if another cassette has a suitable size of paper, based on the paper size selection priority tables.	<b>Cross reference</b> Just size printing on/off – User switch 05, bit 5
<b>1-7</b>	Not used.	Do not change the settings.

<b>Printer Switch 07</b>		<b>SP No. 1-103-008</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	Reduction for Journal printing <b>0:</b> Off <b>1:</b> On	<b>1:</b> The Journal is reduced to 91% to ensure that there is enough space in the left margin for punch holes or staples.
<b>2-3</b>	Not used.	Do not change the settings.
<b>4</b>	List of destinations in the Communication Failure Report for broadcasting <b>0:</b> All destinations <b>1:</b> Only destinations where communication failure occurred	<b>1:</b> Only destinations where communication failure occurred are printed on the Communication Failure Report.
<b>5-7</b>	Not used.	Do not change the settings.

<b>Printer Switch 08</b> - Not used (do not change the settings)
<b>Printer Switch 09</b> - Not used (do not change the settings)
<b>Printer Switch 0A</b> - Not used (do not change the settings)
<b>Printer Switch 0B</b> - Not used (do not change the settings)
<b>Printer Switch 0C</b> - Not used (do not change the settings)
<b>Printer Switch 0D</b> - Not used (do not change the settings)

<b>Printer Switch 0E</b>		<b>SP No. 1-103-015</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	Paper size selection priority <b>0:</b> Width <b>1:</b> Length	<b>0:</b> A paper size that has the same width as the received data is selected first. <b>1:</b> A paper size which has enough length to print all the received lines without reduction is selected first.
<b>1</b>	Paper size selected for printing A4 width fax data <b>0:</b> 8.5" x 11" size <b>1:</b> A4 size	This switch determines which paper size is selected for printing A4 width fax data, when the machine has both A4 and 8.5" x 11" size paper.

Printer Switch 0E		SP No. 1-103-015
No	FUNCTION	COMMENTS
<b>2</b>	Page separation <b>0:</b> Enabled <b>1:</b> Disabled	<b>1:</b> If all paper sizes in the machine require page separation to print a received fax message, the machine does not print the message (Substitute Reception is used). After a larger size of paper is set in a cassette, the machine automatically prints the fax message.
<b>3 to 4</b>	Printing the sample image on reports <b>Bit 4 Bit 3 Setting</b> 0 0 The upper half only 0 1 50% reduction in sub-scan only 1 0 Same size 1 1 Not used	“Same size” means the sample image is printed at 100%, even if page separation occurs. User Parameter Switch 19 (13H) bit 4 must be set to “0” to enable this switch. Refer to Detailed Section Descriptions for more on this feature.
<b>5-6</b>	Not used	Do not change the settings.
<b>7</b>	Equalizing the reduction ratio among separated pages (Page Separation) <b>0:</b> Enabled <b>1:</b> Disabled	<b>0:</b> When page separation has taken place, all the pages are reduced with the same reduction ratio. <b>1:</b> Only the last page is reduced to fit the selected paper size when page separation has taken place. Other pages are printed without reduction.

Printer Switch 0F		SP No. 1-103-016
No	FUNCTION	COMMENTS
<b>0 to 1</b>	Smoothing feature <b>Bit 1 Bit 0 Setting</b> 0 0 Disabled 0 1 Disabled 1 0 Enabled 1 1 Not used	<b>(0, 0) (0, 1):</b> Disable smoothing if the machine receives halftone images from other manufacturers fax machines frequently.
<b>2</b>	Duplex printing <b>0:</b> Disabled <b>1:</b> Enabled	<b>1:</b> The machine always prints received fax messages in duplex printing mode:
<b>3</b>	Binding direction for Duplex printing <b>0:</b> Left binding <b>1:</b> Top binding	
<b>4</b>	Printing fax messages in user code mode <b>0:</b> Enabled <b>1:</b> Disabled	<b>1:</b> The machine holds the received fax messages until the machine exits the restricted access mode (user code or key counter). If the machine enters the restricted access mode again while printing fax messages, the machine stops printing the machine exits the mode again.
<b>5-7</b>	Not used	Do not change the settings.

**3.2.4 COMMUNICATION SWITCHES**

<b>Communication Switch 00</b>		<b>SP No. 1-104-001</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 1</b>	Compression modes available in receive mode <b>Bit 1 0 Modes</b> 0 0 MH only 0 1 MH/MR 1 0 MH/MR/MMR 1 1 MH/MR/MMR/JBIG	These bits determine the compression capabilities to be declared in phase B (handshaking) of the T.30 protocol.
<b>2 to 3</b>	Compression modes available in transmit mode <b>Bit 3 2 Modes</b> 0 0 MH only 0 1 MH/MR 1 0 MH/MR/MMR 1 1 MH/MR/MMR/JBIG	These bits determine the compression capabilities to be used in the transmission and to be declared in phase B (handshaking) of the T.30 protocol.
<b>4</b>	Not used	Do not change the setting.
<b>5</b>	JBIG compression method: Reception <b>0:</b> Only basic supported <b>1:</b> Basic and optional both supported	Change the setting when communication problems occur using JBIG compression.
<b>6</b>	JBIG compression method: Transmission <b>0:</b> Basic mode priority <b>1:</b> Optional mode priority	Change the setting when communication problems occur using JBIG compression.
<b>7</b>	Closed network (reception) <b>0:</b> Disabled <b>1:</b> Enabled	<b>1:</b> Reception will not go ahead if the ID code of the other terminal does not match the ID code of this terminal. This function is only available in NSF/NSS mode.

Communication Switch 01			SP No. 1-104-002
No	FUNCTION		COMMENTS
0	ECM 0: Off 1: On		If this bit is set to 0, ECM is switched off for all communications. In addition, V.8 protocol and JBIG compression are switched off automatically.
1	Not used		Do not change the setting.
2 to 3	Wrong connection prevention method		<p>(0,1) - The machine will disconnect the line without sending a fax message, if the last 8 digits of the received CSI do not match the last 8 digits of the dialed telephone number. This does not work when manually dialed.</p> <p>(1,0) - The same as above, except that only the last 4 digits are compared.</p> <p>(1,1) - The machine will disconnect the line without sending a fax message, if the other end does not identify itself with an RTI or CSI.</p> <p>(0,0) - Nothing is checked; transmission will always go ahead.</p> <p><b>Note:</b> This function does not work when dialing is done from the external telephone.</p>
3	<b>Bit 3</b>	<b>Bit 2</b> <b>Setting</b>	
	0	0    None	
	0	1    8 digit CSI	
	1	0    4 digit CSI	
	1	1    CSI/RTI	
4-5	Not used		Do not change the settings.
6 to 7	Maximum printable page length available		The setting determined by these bits is informed to the transmitting terminal in the pre-message protocol exchange (in the DIS/NSF frames).
7	<b>Bit 7</b>	<b>6</b> <b>Setting</b>	
	0	0    No limit	
	0	1    B4 (364 mm)	
	1	0    A4 (297 mm)	
	1	1    Not used	

Service Tables

Communication Switch 02			SP No. 1-104-003																
No	FUNCTION		COMMENTS																
0	Burst error threshold 0: Low 1: High		<p>If there are more consecutive error lines in the received page than the threshold, the machine will send a negative response.</p> <p>The Low and High threshold values depend on the sub-scan resolution, and are as follows.</p> <table border="1"> <thead> <tr> <th>Resolution</th> <th>100 dpi</th> <th>200 dpi</th> <th>400 dpi</th> </tr> <tr> <td></td> <td>3.85 l/mm</td> <td>7.7 l/mm</td> <td>15.4 l/mm</td> </tr> </thead> <tbody> <tr> <td>Low settings</td> <td>6</td> <td>12</td> <td>24</td> </tr> <tr> <td>High settings</td> <td>12</td> <td>24</td> <td>48</td> </tr> </tbody> </table>	Resolution	100 dpi	200 dpi	400 dpi		3.85 l/mm	7.7 l/mm	15.4 l/mm	Low settings	6	12	24	High settings	12	24	48
Resolution	100 dpi	200 dpi	400 dpi																
	3.85 l/mm	7.7 l/mm	15.4 l/mm																
Low settings	6	12	24																
High settings	12	24	48																
1	Acceptable total error line ratio 0: 5% 1: 10%		If the error line ratio for a page exceeds the acceptable ratio, RTN will be sent to the other end.																
2	Treatment of pages received with errors during G3 reception 0: Deleted from memory without printing 1: Printed		0: Pages received with errors are not printed.																

<b>Communication Switch 02</b>		<b>SP No. 1-104-003</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>3</b>	Hang-up decision when a negative code (RTN or PIN) is received during G3 immediate transmission <b>0:</b> No hang-up, <b>1:</b> Hang-up	<b>0:</b> The next page will be sent even if RTN or PIN is received. <b>1:</b> The machine will send DCN and hang up if it receives RTN or PIN.  This bit is ignored for memory transmissions or if ECM is being used.
<b>4-6</b>	Not used	Do not change the settings.
<b>7</b>	Method of total error rate calculation <b>0:</b> Normal method <b>1:</b> French PTT requirement	<b>0:</b> Error rate is calculated by dividing the number of total lines by the number of error lines. <b>1:</b> Error rate is calculated by dividing the number of total plus error lines by the number of error lines.

<b>Communication Switch 03</b>		<b>SP No. 1-104-004</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 7</b>	Maximum number of page retransmissions in a G3 memory transmission	00 - FF (Hex) times. This setting is not used if ECM is switched on. Default setting - 03(H)

<b>Communication Switch 04</b> - Not used (do not change the settings)
<b>Communication Switch 05</b> - Not used (do not change the settings)
<b>Communication Switch 06</b> - Not used (do not change the settings)

<b>Communication Switch 07</b>		<b>SP No. 1-104-008</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	Fallback from G4 to G3 if the other terminal is not a G4 terminal <b>0:</b> Disabled <b>1:</b> Enabled ( <b>Japan Only</b> )	Also see system switch 0A bit 7. Refer to the ISDN G4 option service manual (G4 Internal Switches 17, 18, 1A, 1B, and 1C) for the CPS code set (Cause Value set) that determines G4 to G3 fallback.
<b>1</b>	Not used	Do not change the setting.
<b>2</b>	Not used	Do not change the setting.
<b>3</b>	Fallback from G4 to G3 reflected in programmed Quick/Speed dials <b>0:</b> Fallback enabled <b>1:</b> Always start with G4 ( <b>Japan Only</b> )	<b>0:</b> If a communication falls back from G4 to G3, the machine will always start transmission with G3 from the next communication. <b>1:</b> The machine will always start to transmit with G4.
<b>4</b>	Fallback from G4 to G3 when G4 communication fails on the ISDN B-channel <b>0:</b> Fallback disabled <b>1:</b> Fallback enabled ( <b>Japan Only</b> )	<b>1:</b> Enable this switch only when G4 communication errors occur because the exchanger connects G4 calls to the PSTN. This problem occurs with some types of exchanger.
<b>5</b>	Not used	Do not change the setting.
<b>6</b>	Not used	Do not change the setting.
<b>7</b>	Not used	Do not change the setting.

**Communication Switch 08** - Not used (do not change the settings)

**Communication Switch 09** - Not used (do not change the settings)

<b>Communication Switch 0A</b>		<b>SP No. 1-104-011</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	Point of resumption of memory transmission upon redialing <b>0:</b> From the error page <b>1:</b> From page 1	<b>0:</b> The transmission begins from the page where transmission failed the previous time. <b>1:</b> Transmission begins from the first page, using normal memory transmission.
<b>1-6</b>	Not used	Do not change the settings.
<b>7</b>	Emergency calls using 999 <b>0:</b> Enabled <b>1:</b> Disabled	If this bit is at 1, the machine will not allow you to dial 999 at the auto-dialer. This is a PTT requirement in the Hong Kong.



<b>Communication Switch 0B</b>		<b>SP No. 1-104-012</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	Use of Economy Transmission during a Transfer operation to end receivers <b>0:</b> Disabled <b>1:</b> Enabled	These bits determine whether the machine uses the Economy Transmission feature when it is carrying out a Transfer operation as a Transfer Station.
<b>1</b>	Use of Economy Transmission during a Transfer operation to the Next Transfer Stations <b>0:</b> Disabled <b>1:</b> Enabled	
<b>2</b>	Use of Label Insertion for the End Receivers in a Transfer operation <b>0:</b> Disabled <b>1:</b> Enabled	This bit determines whether the machine uses the Label Insertion feature when it is carrying out a Transfer operation as a Transfer Station.
<b>3</b>	Conditions required for Transfer Result Report transmission <b>0:</b> Always transmitted <b>1:</b> Only transmitted if there was an error	<b>0:</b> When acting as a Transfer Station, the machine will always send a Transfer Result Report back to the Requesting Station after completing the Transfer Request, even if there were no problems. <b>1:</b> The machine will only send back a Transfer Result Report if there were errors during communication, meaning one or more of the End Receivers could not be contacted.
<b>4</b>	Printout of the message when acting as a Transfer Station <b>0:</b> Disabled <b>1:</b> Enabled	When the machine is acting as a Transfer Station, this bit determines whether the machine prints the fax message coming in from the Requesting Terminal.
<b>5</b>	Action when there is no fax number in the programmed Quick/Speed dials which meets the requesting terminal's own fax number <b>0:</b> Transfer is disabled <b>1:</b> Transfer is enabled	After the machine receives a transfer request, the machine compares the last N digits of the requesting terminal's own fax number with all the Quick/Speed dials programmed in the machine. (N is the number programmed in communication switch 0C.) <b>0:</b> If there is no matching number programmed in the machine, the machine rejects the transfer request. <b>1:</b> Even if there is no matching number programmed in the machine, the machine accepts the transfer request. The result report will be printed at the transfer terminal, but will not be sent back to the requesting terminal.
<b>6-7</b>	Not used	Do not change the settings.

<b>Communication Switch 0C</b>		<b>SP No. 1-104-013</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 4</b>	Number of digits compared to find the requester's fax number from the programmed Quick/Speed Dials when acting as a Transfer Station	<p>00 - 1F (0 to 31 digits)</p> <p>After the machine receives a transfer request, the machine compares the own telephone number sent from the Requesting Terminal with all Quick/Speed Dials programmed in the machine, starting from Quick Dial 01 to the end of the Speed Dials. This number determines how many digits from the end of the telephone numbers the machine compares.</p> <p>If it is set to 00, the machine will send the report to the first Quick/Speed Dial that the machine compared. If Quick Dial 01 is programmed, the machine will send the report to Quick 01. If Quick Dial 01 through 04 are not programmed and Quick Dial 05 is programmed, the machine will send the report to Quick 05.</p> <p>Default setting - 05(H) = 5 digits</p>
<b>5-7</b>	Not used	Do not change the settings.

<b>Communication Switch 0D</b>		<b>SP No. 1-104-014</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 7</b>	The available memory threshold, below which ringing detection (and therefore reception into memory) is disabled	<p>00 to FF (Hex), unit = 4 kbytes (e.g., 06(H) = 24 kbytes)</p> <p>One page is about 24 kbytes.</p> <p>The machine refers to this setting before each fax reception. If the amount of remaining memory is below this threshold, the machine cannot receive any fax messages.</p> <p>If this setting is kept at 0, the machine will detect ringing signals and go into receive mode even if there is no memory available. This will result in communication failure.</p>

<b>Communication Switch 0E</b>		<b>SP No. 1-104-015</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 7</b>	Minimum interval between automatic dialing attempts	<p>06 to FF (Hex), unit = 2 s (e.g., 06(H) = 12 s)</p> <p>This value is the minimum time that the machine waits before it dials the next destination.</p>

**Communication Switch 0F** - Not used (do not change the settings.)

<b>Communication Switch 10</b>		<b>SP No. 1-104-017</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 7</b>	Memory transmission: Maximum number of dialing attempts to the same destination	01 - FE (Hex) times

**Communication Switch 11** - Not used (do not change the settings.)

<b>Communication Switch 12</b>		<b>SP No. 1-104-019</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 7</b>	Memory transmission: Interval between dialing attempts to the same destination	01 - FF (Hex) minutes

**Communication Switch 13** - Not used (do not change the settings.)

<b>Communication Switch 14</b>		<b>SP No. 1-104-021</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	Inch-to-mm conversion during transmission <b>0:</b> Disabled <b>1:</b> Enabled	<b>0:</b> In immediate transmission, data scanned in inch format are transmitted without conversion. In memory transmission, data stored in the SAF memory in mm format are transmitted without conversion. <b>Note:</b> When storing the scanned data into SAF memory, the fax unit always converts the data into mm format. <b>1:</b> The machine converts the scanned data or stored data in the SAF memory to the format which was specified in the set-up protocol (DIS/NSF) before transmission.
<b>1-5</b>	Not used	Do not change the factory settings.
<b>6 to 7</b>	Available unit of resolution in which fax messages are received <b>Bit 7    Bit 6    Unit</b> 0        0        mm 0        1        inch 1        0        mm and inch (default) 1        1        Not used	For the best performance, do not change the factory settings.  The setting determined by these bits is informed to the transmitting terminal in the pre-message protocol exchange (in the DIS/NSF frames).

**Communication Switch 15** - Not used (do not change the settings)

<b>Communication Switch 16</b>		<b>SP No. 1-104-023</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	Standard G3 unit <b>0:</b> Disabled <b>1:</b> Enabled ( <b>Japan Only</b> )	Set this bit to 0 if the user wants to use only the ISDN line (option G4 unit), even for G3 communications. However, for ISDN on hook dialing, bit 7 of user parameter 30 must be set to 1. <b>Note:</b> If the optional G4 unit is not installed, but this bit is changed to 'disabled', no document can be transmitted.
<b>1</b>	Optional G3 unit (G3-2) <b>0:</b> Not installed <b>1:</b> Installed	Change this bit to 1 when installing the first optional G3 unit.
<b>2</b>	Optional ISDN unit <b>0:</b> Not installed <b>1:</b> Installed ( <b>Japan Only</b> )	Change this bit to 1 when installing the optional ISDN unit.
<b>3</b>	Not used	Do not change the setting.
<b>4</b>	Not used	Do not change the setting.
<b>5</b>	Not used	Do not change the setting.
<b>6</b>	Not used	Do not change the setting.
<b>7</b>	G4 Dual communication <b>0:</b> Enabled <b>1:</b> Disabled ( <b>Japan Only</b> )	<b>1:</b> The machine uses only one B channel for communication. This enables a customer to occupy another B channel for other purposes such as internet communication.

Service  
Tables

<b>Communication Switch 17</b>		<b>SP No. 1-104-024</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	SEP reception <b>0:</b> Disabled <b>1:</b> Enabled	<b>0:</b> Polling transmission to another maker's machine using the SEP (Selective Polling) signal is disabled.
<b>1</b>	SUB reception <b>0:</b> Disabled <b>1:</b> Enabled	<b>0:</b> Confidential reception to another maker's machine using the SUB (Sub-address) signal is disabled.
<b>2</b>	PWD reception <b>0:</b> Disabled <b>1:</b> Enabled	<b>0:</b> Disables features that require PWD (Password) signal reception.
<b>3-6</b>	Not used	Do not change the settings.
<b>7</b>	Action when there is no box with an F-code that matches the received SUB code <b>0:</b> Disconnect the line <b>1:</b> Receive the message (using normal reception mode)	Change this setting when the customer requires.

**Communication Switch 18** - Not used (do not change the settings)

**Communication Switch 19** - Not used (do not change the settings)

**Communication Switch 1A** - Not used (do not change the settings)

<b>Communication Switch 1B</b>		<b>SP No. 1-104-028</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 7</b>	Extension access code (0 to 7) to turn V.8 protocol On/Off <b>0:</b> On <b>1:</b> Off	If the PABX does not support V.8/V.34 protocol procedure, set this bit to "1" to disable V.8. <b>Example:</b> If "0" is the PSTN access code, set bit 0 to 1. When the machine detects "0" as the first dialed number, it automatically disables V.8 protocol. (Alternatively, if "3" is the PSTN access code, set bit 3 to 1.)

<b>Communication Switch 1C</b>		<b>SP No. 1-104-029</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 1</b>	Extension access code (8 and 9) to turn V.8 protocol On/Off <b>0:</b> On <b>1:</b> Off	Refer to communication switch 1E. <b>Example:</b> If "8" is the PSTN access code, set bit 0 to 1. When the machine detects "8" as the first dialed number, it automatically disables V.8 protocol. (If "9" is the PSTN access code, use bit 1.)
<b>2-7</b>	Not used	Do not change the settings.

**Communication Switch 1D** - Not used (do not change the settings)

**Communication Switch 1E** - Not used (do not change the settings)

**Communication Switch 1F** - Not used (do not change the settings)

### 3.2.5 G3-1 SWITCHES

G3-1 Switch 00		SP No. 1-105-001															
No	FUNCTION	COMMENTS															
<b>0</b>	Monitor speaker during communication (tx and rx)	<b>(0, 0):</b> The monitor speaker is disabled all through the communication.															
<b>1</b>	<table border="1"> <thead> <tr> <th>Bit 1</th> <th>Bit 0</th> <th>Setting</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>Disabled</td> </tr> <tr> <td>0</td> <td>1</td> <td>Up to Phase B</td> </tr> <tr> <td>1</td> <td>0</td> <td>All the time</td> </tr> <tr> <td>1</td> <td>1</td> <td>Not used</td> </tr> </tbody> </table>	Bit 1	Bit 0	Setting	0	0	Disabled	0	1	Up to Phase B	1	0	All the time	1	1	Not used	<b>(0, 1):</b> The monitor speaker is on up to phase B in the T.30 protocol. <b>(1, 0):</b> Used for testing. The monitor speaker is on all through the communication. Make sure that you reset these bits after testing.
Bit 1	Bit 0	Setting															
0	0	Disabled															
0	1	Up to Phase B															
1	0	All the time															
1	1	Not used															
<b>2</b>	Monitor speaker during memory transmission 0: Disabled 1: Enabled	<b>1:</b> The monitor speaker is enabled during memory transmission.															
<b>3-7</b>	Not used	Do not change the settings.															

G3-1 Switch 01		SP No. 1-105-002
No	FUNCTION	COMMENTS
<b>0-3</b>	Not used	Do not change the settings.
<b>4</b>	DIS frame length 0: 10 bytes 1: 4 bytes	<b>1:</b> The bytes in the DIS frame after the 4th byte will not be transmitted (set to 1 if there are communication problems with PC-based faxes which cannot receive the extended DIS frames).
<b>5</b>	Not used	Do not change the setting.
<b>6</b>	CED/ANSam transmission 0: Disabled 1: Enabled	Do not change this setting, unless the communication problem is caused by the CED/ANSam transmission.
<b>7</b>	Not used	Do not change the setting.

G3-1 Switch 02		SP No. 1-105-003
No	FUNCTION	COMMENTS
<b>0</b>	G3 protocol mode used 0: Standard and non-standard 1: Standard only	Change this bit to 1 only when the other end can only communicate with machines that send T.30-standard frames only. <b>1:</b> Disables NSF/NSS signals (these are used in non-standard mode communication)
<b>1-4</b>	Not used	Do not change the settings.
<b>5</b>	Use of modem rate history for transmission using Quick/Speed Dials 0: Disabled 1: Enabled	<b>0:</b> Communications using Quick/Speed Dials always start from the highest modem rate. <b>1:</b> The machine refers to the modem rate history for communications with the same machine when determining the most suitable rate for the current communication.
<b>6</b>	AI short protocol (transmission and reception) 0: Disabled 1: Enabled	Refer to Appendix B in the Group 3 Facsimile Manual for details about AI Short Protocol.
<b>7</b>	Short preamble 0: Disabled 1: Enabled	Refer to Appendix B in the Group 3 Facsimile Manual for details about Short Preamble.

<b>G3-1 Switch 03</b>		<b>SP No. 1-105-004</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	DIS detection number (Echo countermeasure) <b>0:</b> 1 <b>1:</b> 2	<b>0:</b> The machine will hang up if it receives the same DIS frame twice. <b>1:</b> Before sending DCS, the machine will wait for the second DIS which is caused by echo on the line.
<b>1</b>	V.8 protocol in manual reception <b>0:</b> Disabled <b>1:</b> Enabled	<b>0:</b> The machine sends CED instead of ANSam when starting a manual reception. <b>1:</b> The machine sends ANSam during manual reception.
<b>2</b>	V.8 protocol <b>0:</b> Disabled <b>1:</b> Enabled	<b>0:</b> V.8/V.34 communications will not be possible. <b>Note:</b> Do not set to 0 unless the line condition is always bad enough to slow down the data rate to 14.4 kbps or lower.
<b>3</b>	ECM frame size <b>0:</b> 256 bytes <b>1:</b> 64 bytes	Keep this bit at "0" in most cases.
<b>4</b>	CTC transmission conditions <b>0:</b> After one PPR signal received <b>1:</b> After four PPR signals received (ITU-T standard)	<b>0:</b> When using ECM in non-standard (NSF/NSS) mode, the machine sends a CTC to drop back the modem rate after receiving a PPR, if the following condition is met in communications at 14.4, 12.0, 9.6, and 7.2 kbps.  $\sqrt{N_{\text{Transmit}}} \leq N_{\text{Resend}}$ N <sub>Transmit</sub> - Number of transmitted frames N <sub>Resend</sub> - Number of frames to be retransmitted  <b>1:</b> When using ECM, the machine sends a CTC to drop back the modem rate after receiving four PPRs.  PPR, CTC: These are ECM protocol signals.  This bit is not effective in V.34 communications.
<b>5</b>	Modem rate used for the next page after receiving a negative code (RTN or PIN) <b>0:</b> No change <b>1:</b> Fallback	<b>1:</b> The machine's tx modem rate will fall back before sending the next page if a negative code is received. This bit is ignored if ECM is being used.
<b>6</b>	V.8 protocol in manual transmission <b>0:</b> Disabled <b>1:</b> Enabled	<b>1:</b> The machine detects either ANSam or CED during manual transmission.
<b>7</b>	Not used	Do not change the setting.

<b>G3-1 Switch 04</b>		<b>SP No. 1-105-005</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 3</b>	Training error detection threshold	0 - F (Hex); 0 - 15 bits If the number of error bits in the received TCF is below this threshold, the machine informs the sender that training has succeeded.
<b>4-7</b>	Not used	Do not change the settings.

<b>G3-1 Switch 05</b>		<b>SP No. 1-105-006</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 3</b>	Initial Tx modem rate <b>Bit 3 2 1 0 Setting (bps)</b> 0 0 0 1 2.4 k 0 0 1 0 4.8 k 0 0 1 1 7.2 k 0 1 0 0 9.6 k 0 1 0 1 12.0 k 0 1 1 0 14.4 k 0 1 1 1 16.8 k 1 0 0 0 19.2 k 1 0 0 1 21.6 k 1 0 1 0 24.0 k 1 0 1 1 26.4 k 1 1 0 0 28.8 k 1 1 0 1 31.2 k 1 1 1 0 33.6 k Other settings - Not used	These bits set the initial starting modem rate for transmission.  Use the dedicated transmission parameters if you need to change this for specific receivers.  If a modem rate 14.4 kbps or slower is selected, V.8 protocol should be disabled manually.  <b>Cross reference</b> V.8 protocol on/off - G3 switch 03, bit2
<b>4 to 5</b>	Initial modem type for 9.6 k or 7.2 kbps. <b>Bit 5 Bit 4 Setting</b> 0 0 V.29 0 1 V.17 1 0 V.34 1 1 Not used	These bits set the initial modem type for 9.6 and 7.2 kbps, if the initial modem rate is set at these speeds.
<b>6-7</b>	Not used	Do not change the settings.

Service Tables



<b>G3-1 Switch 06</b>		<b>SP No. 1-105-007</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 3</b>	Initial Rx modem rate <b>Bit 3 2 1 0 Setting (bps)</b> 0 0 0 1 2.4 k 0 0 1 0 4.8 k 0 0 1 1 7.2 k 0 1 0 0 9.6 k 0 1 0 1 12.0 k 0 1 1 0 14.4 k 0 1 1 1 16.8 k 1 0 0 0 19.2 k 1 0 0 1 21.6 k 1 0 1 0 24.0 k 1 0 1 1 26.4 k 1 1 0 0 28.8 k 1 1 0 1 31.2 k 1 1 1 0 33.6 k Other settings - Not used	These bits set the initial starting modem rate for reception.  Use a lower setting if high speeds pose problems during reception.  If a modem rate 14.4 kbps or slower is selected, V.8 protocol should be disabled manually.  <b>Cross reference</b> V.8 protocol on/off - G3 switch 03, bit2
<b>4 to 7</b>	Modem types available for reception <b>Bit 7 6 5 4 Setting</b> 0 0 0 1 V.27ter 0 0 1 0 V.27ter, V.29 0 0 1 1 V.27ter, V.29 V.33 0 1 0 0 V.27ter, V.29, V.17/V.33 0 1 0 1 V.27ter, V.29, V.17/V33, V.34 Other settings - Not used	The setting of these bits is used to inform the transmitting terminal of the available modem type for the machine in receive mode.  If V.34 is not selected, V.8 protocol must be disabled manually.  <b>Cross reference</b> V.8 protocol on/off - G3 switch 03, bit2

<b>G3-1 Switch 07</b>		<b>SP No. 1-105-008</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 1</b>	PSTN cable equalizer (tx mode: Internal) <b>Bit 1 Bit 0 Setting</b> 0 0 None 0 1 Low 1 0 Medium 1 1 High	Use a higher setting if there is signal loss at higher frequencies because of the length of wire between the modem and the telephone exchange. Use the dedicated transmission parameters for specific receivers.  Also, try using the cable equalizer if one or more of the following symptoms occurs. <ul style="list-style-type: none"> <li>• Communication error</li> <li>• Modem rate fallback occurs frequently.</li> </ul> <b>Note:</b> This setting is not effective in V.34 communications.

G3-1 Switch 07			SP No. 1-105-008
No	FUNCTION	COMMENTS	
2 to 3	PSTN cable equalizer (rx mode: Internal)	Use a higher setting if there is signal loss at higher frequencies because of the length of wire between the modem and the telephone exchange.  Also, try using the cable equalizer if one or more of the following symptoms occurs. <ul style="list-style-type: none"> <li>• Communication error with error codes such as 0-20, 0-23, etc.</li> <li>• Modem rate fallback occurs frequently.</li> </ul> <b>Note:</b> This setting is not effective in V.34 communications.	
	<b>Bit 3 Bit 2 Setting</b>		
	0 0 None		
	0 1 Low		
	1 0 Medium		
1 1 High			
4	PSTN cable equalizer (V.8/V.17 rx mode: External) 0: Disabled 1: Enabled	Keep this bit at "1".	
5	PSTN cable equalizer (V.34 rx mode; External)	Keep this bit at "1".	
6-7	Not used	Do not change the settings.	

Service Tables

G3-1 Switch 08 - Not used (do not change the settings)

G3-1 Switch 09			SP No. 1-105-010
No	FUNCTION	COMMENTS	
0 to 1	ISDN cable equalizer (tx mode: Internal)	Use a higher setting if there is signal loss at higher frequencies because of the length of wire between the modem and the telephone exchange.  Use the dedicated transmission parameters for specific receivers.  Also, try using the cable equalizer if one or more of the following symptoms occurs. <ul style="list-style-type: none"> <li>• Communication error</li> <li>• Modem rate fallback occurs frequently.</li> </ul> <b>Note:</b> This setting is not effective in V.34 communications.	
	<b>Bit 1 Bit 0 Setting</b>		
	0 0 None		
	0 1 Low		
	1 0 Medium		
1 1 High			
	<b>(Japan Only)</b>		

<b>G3-1 Switch 09</b>		<b>SP No. 1-105-010</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>2 to 3</b>	ISDN cable equalizer (rx mode: Internal) <b>Bit 3 Bit 2 Setting</b> 0 0 None 0 1 Low 1 0 Medium 1 1 High <b>(Japan Only)</b>	Use a higher setting if there is signal loss at higher frequencies because of the length of wire between the modem and the telephone exchange.  Also, try using the cable equalizer if one or more of the following symptoms occurs. <ul style="list-style-type: none"> <li>• Communication error with error codes such as 0-20, 0-23, etc.</li> <li>• Modem rate fallback occurs frequently.</li> </ul> <b>Note:</b> This setting is not effective in V.34 communications.
<b>4</b>	ISDN cable equalizer (V.8/V.17 rx mode: External) <b>0: Disabled</b> <b>1: Enabled (Japan Only)</b>	Keep this bit at "0" in most cases.
<b>5</b>	ISDN cable equalizer (V.34 rx mode: External) <b>0: Disabled</b> <b>1: Enabled (Japan Only)</b>	Keep this bit at "0" in most cases.
<b>6-7</b>	Not used	Do not change the settings.

<b>G3-1 Switch 0A</b>		<b>SP No. 1-105-011</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 1</b>	Maximum allowable carrier drop during image data reception <b>Bit 1 Bit 0 Value (ms)</b> 0 0 200 0 1 400 1 0 800 1 1 Not used	These bits set the acceptable modem carrier drop time. Try using a longer setting if error code 0-22 is frequent.
<b>2-3</b>	Not used	Do not change the settings.
<b>4</b>	Maximum allowable frame interval during image data reception. <b>0: 5 s 1: 13 s</b>	This bit set the maximum interval between EOL (end-of-line) signals and the maximum interval between ECM frames from the other end. Try using a longer setting if error code 0-21 is frequent.
<b>5</b>	Not used	Do not change the setting.
<b>6</b>	Reconstruction time for the first line in receive mode <b>0: 6 s 1: 12 s</b>	When the sending terminal is controlled by a computer, there may be a delay in receiving page data after the local machine accepts set-up data and sends CFR. This is outside the T.30 recommendation. But, if this delay occurs, set this bit to 1 to give the sending machine more time to send data. Refer to error code 0-20. ITU-T T.30 recommendation: The first line should come within 5 s of CFR.
<b>7</b>	Not used	Do not change the setting.

<b>G3-1 Switch 0B</b>		<b>SP No. 1-105-012</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	Protocol requirements: Europe <b>0: Disabled 1: Enabled</b>	The machine does not automatically reset these bits for each country after a country code (System Switch 0F) is programmed. Change the required bits manually at installation.
<b>1</b>	Protocol requirements: Spain <b>0: Disabled 1: Enabled</b>	
<b>2</b>	Protocol requirements: Germany <b>0: Disabled 1: Enabled</b>	
<b>3</b>	Protocol requirements: France <b>0: Disabled 1: Enabled</b>	
<b>4</b>	PTT requirements: Germany <b>0: Disabled 1: Enabled</b>	
<b>5</b>	PTT requirements: France <b>0: Disabled 1: Enabled</b>	
<b>6</b>	Not used	Do not change the setting.
<b>7</b>	DTS requirements : Germany <b>0: Disabled 1: Enabled</b>	Change this bit manually if required.

<b>G3-1 Switch 0C</b>		<b>SP No. 1-105-013</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	Pulse dialing method	P = Number of pulses sent out, N = Number dialed.
<b>1</b>	<b>Bit 1 Bit 0 Setting</b>	
	0 0 Normal(P=N)	
	0 1 Oslo (P=10 - N)	
	1 0 Sweden (N+1)	
	1 1 Not used	
<b>2-7</b>	Not used	Do not change the settings.

<b>G3-1 Switch 0D</b>		<b>SP No. 1-105-014</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0-1</b>	Not used	Do not change the settings.
<b>2 to 5</b>	Data rate threshold during V.34 reception <b>Bit 5 4 3 2 Setting</b>	The machine changes the modulation parameters in the MPH signal to lower the initial modem rate during V.34 reception. If this switch is set to "0111", the machine lowers the initial speed one step, for example, from 28,800 to 26,400 bps. This switch reduces transmission time if the machine frequently sends PPR signals during V.34 reception.
	0 0 0 0 Normal	
	0 1 1 1 Lower by one step	
	1 1 1 1 Lower by two steps	
<b>6</b>	Not used	Do not change the setting.
<b>7</b>	B signal detection time for V.34 polling transmission <b>0: 75 ms (default setting)</b> <b>1: 65 ms</b>	Change this switch only when there are communication errors during V.34 polling transmission to a machine with a Panasonic modem.

<b>G3-1 Switch 0E - Not used (do not change the settings)</b>
---

<b>G3-1 Switch 0F</b>		<b>SP No. 1-105-016</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	Alarm when an error occurred in Phase C or later <b>0:</b> Disabled <b>1:</b> Enabled	If the customer wants to hear an alarm after each error communication, change this bit to "1".
<b>1</b>	Alarm when the handset is off-hook at the end of communication <b>0:</b> Disabled <b>1:</b> Enabled	If the customer wants to hear an alarm if the handset is off-hook at the end of fax communication, change this bit to "1".
<b>2-7</b>	Not used	Do not change the settings.

### 3.2.6 G3-2 SWITCHES

These switches require an optional G3 interface unit.

G3-2 Switch 00			SP No. 1-106-001
No	FUNCTION	COMMENTS	
0-1	Monitor speaker during communication (tx and rx)	<b>(0, 0):</b> The monitor speaker is disabled all through the communication. <b>(0, 1):</b> The monitor speaker is on up to phase B in the T.30 protocol. <b>(1, 0):</b> Used for testing. The monitor speaker is on all through the communication. Make sure that you reset these bits after testing.	
	<b>Bit 1</b> <b>Bit 0</b> <b>Setting</b>		
	0      0      Disabled		
	0      1      Up to Phase B		
	1      0      All the time		
1      1      Not used			
2	Monitor speaker during memory transmission 0: Disabled 1: Enabled	1: The monitor speaker is enabled during memory transmission.	
3-6	Not used	Do not change the settings.	

G3-2 Switch 01			SP No. 1-106-002
No	FUNCTION	COMMENTS	
0-3	Not used	Do not change the settings.	
4	DIS frame length 0: 10 bytes 1: 4 bytes	1: The bytes in the DIS frame after the 4th byte will not be transmitted (set to 1 if there are communication problems with PC-based faxes which cannot receive the extended DIS frames).	
5	Not used	Do not change the setting.	
6	CED/ANSam transmission 0: Disabled 1: Enabled	Do not change this setting, unless the communication problem is caused by the CED/ANSam transmission.	
7	Not used	Do not change the setting.	

G3-2 Switch 02			SP No. 1-106-003
No	FUNCTION	COMMENTS	
0	G3 protocol mode used 0: Standard and non-standard 1: Standard only	Change this bit to 1 only when the other end can only communicate with machines that send T.30-standard frames only. 1: Disables NSF/NSS signals (these are used in non-standard mode communication)	
1-4	Not used	Do not change the settings.	
5	Use of modem rate history for transmission using Quick/Speed Dials 0: Disabled 1: Enabled	0: Communications using Quick/Speed Dials always start from the highest modem rate. 1: The machine refers to the modem rate history for communications with the same machine when determining the most suitable rate for the current communication.	
6	AI short protocol (transmission and reception) 0: Disabled 1: Enabled	Refer to Appendix B in the Group 3 Facsimile Manual for details about AI Short Protocol.	
7	Short preamble 0: Disabled 1: Enabled	Refer to Appendix B in the Group 3 Facsimile Manual for details about Short Preamble.	

<b>G3-2 Switch 03</b>		<b>SP No. 1-106-004</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b>	DIS detection number (Echo countermeasure) <b>0:</b> 1 <b>1:</b> 2	<b>0:</b> The machine will hang up if it receives the same DIS frame twice. <b>1:</b> Before sending DCS, the machine will wait for the second DIS which is caused by echo on the line.
<b>1</b>	Not used	Do not change the setting.
<b>2</b>	V.8 protocol <b>0:</b> Disabled <b>1:</b> Enabled	<b>0:</b> V.8/V.34 communications will not be possible. <b>Note:</b> Do not set to 0 unless the line condition is always bad enough to slow down the data rate to 14.4 kbps or lower.
<b>3</b>	ECM frame size <b>0:</b> 256 bytes <b>1:</b> 64 bytes	Keep this bit at "0" in most cases.
<b>4</b>	CTC transmission conditions <b>0:</b> After one PPR signal received <b>1:</b> After four PPR signals received (ITU-T standard)	<b>0:</b> When using ECM in non-standard (NSF/NSS) mode, the machine sends a CTC to drop back the modem rate after receiving a PPR, if the following condition is met in communications at 14.4, 12.0, 9.6, and 7.2 kbps.  $\sqrt{N_{\text{Transmit}} \leq N_{\text{Resend}}}$  N <sub>Transmit</sub> - Number of transmitted frames N <sub>Resend</sub> - Number of frames to be retransmitted  <b>1:</b> When using ECM, the machine sends a CTC to drop back the modem rate after receiving four PPRs.  PPR, CTC: These are ECM protocol signals.  This bit is not effective in V.34 communications.
<b>5</b>	Modem rate used for the next page after receiving a negative code (RTN or PIN) <b>0:</b> No change <b>1:</b> Fallback	<b>1:</b> The machine's tx modem rate will fall back before sending the next page if a negative code is received. This bit is ignored if ECM is being used.
<b>6</b>	Not used	Do not change the setting.
<b>7</b>	Not used	Do not change the setting.

<b>G3-2 Switch 04</b>		<b>SP No. 1-106-005</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0 to 3</b>	Training error detection threshold	0 - F (Hex); 0 - 15 bits If the number of error bits in the received TCF is below this threshold, the machine informs the sender that training has succeeded.
<b>4-7</b>	Not used	Do not change the settings.

G3-2 Switch 05		SP No. 1-106-006																																																																											
No	FUNCTION	COMMENTS																																																																											
0 to 3	<p>Initial Tx modem rate</p> <table border="1"> <thead> <tr> <th>Bit 3</th> <th>2</th> <th>1</th> <th>0</th> <th>Setting (bps)</th> </tr> </thead> <tbody> <tr><td>0</td><td>0</td><td>0</td><td>1</td><td>2.4 k</td></tr> <tr><td>0</td><td>0</td><td>1</td><td>0</td><td>4.8 k</td></tr> <tr><td>0</td><td>0</td><td>1</td><td>1</td><td>7.2 k</td></tr> <tr><td>0</td><td>1</td><td>0</td><td>0</td><td>9.6 k</td></tr> <tr><td>0</td><td>1</td><td>0</td><td>1</td><td>12.0 k</td></tr> <tr><td>0</td><td>1</td><td>1</td><td>0</td><td>14.4 k</td></tr> <tr><td>0</td><td>1</td><td>1</td><td>1</td><td>16.8 k</td></tr> <tr><td>1</td><td>0</td><td>0</td><td>0</td><td>19.2 k</td></tr> <tr><td>1</td><td>0</td><td>0</td><td>1</td><td>21.6 k</td></tr> <tr><td>1</td><td>0</td><td>1</td><td>0</td><td>24.0 k</td></tr> <tr><td>1</td><td>0</td><td>1</td><td>1</td><td>26.4 k</td></tr> <tr><td>1</td><td>1</td><td>0</td><td>0</td><td>28.8 k</td></tr> <tr><td>1</td><td>1</td><td>0</td><td>1</td><td>31.2 k</td></tr> <tr><td>1</td><td>1</td><td>1</td><td>0</td><td>33.6 k</td></tr> </tbody> </table> <p>Other settings - Not used</p>	Bit 3	2	1	0	Setting (bps)	0	0	0	1	2.4 k	0	0	1	0	4.8 k	0	0	1	1	7.2 k	0	1	0	0	9.6 k	0	1	0	1	12.0 k	0	1	1	0	14.4 k	0	1	1	1	16.8 k	1	0	0	0	19.2 k	1	0	0	1	21.6 k	1	0	1	0	24.0 k	1	0	1	1	26.4 k	1	1	0	0	28.8 k	1	1	0	1	31.2 k	1	1	1	0	33.6 k	<p>These bits set the initial starting modem rate for transmission.</p> <p>Use the dedicated transmission parameters if you need to change this for specific receivers.</p> <p>If a modem rate 14.4 kbps or slower is selected, V.8 protocol should be disabled manually.</p> <p><b>Cross reference</b> V.8 protocol on/off - SG3 switch 03, bit 2</p>
Bit 3	2	1	0	Setting (bps)																																																																									
0	0	0	1	2.4 k																																																																									
0	0	1	0	4.8 k																																																																									
0	0	1	1	7.2 k																																																																									
0	1	0	0	9.6 k																																																																									
0	1	0	1	12.0 k																																																																									
0	1	1	0	14.4 k																																																																									
0	1	1	1	16.8 k																																																																									
1	0	0	0	19.2 k																																																																									
1	0	0	1	21.6 k																																																																									
1	0	1	0	24.0 k																																																																									
1	0	1	1	26.4 k																																																																									
1	1	0	0	28.8 k																																																																									
1	1	0	1	31.2 k																																																																									
1	1	1	0	33.6 k																																																																									
4 to 5	<p>Initial modem type for 9.6 k or 7.2 kbps.</p> <table border="1"> <thead> <tr> <th>Bit 5</th> <th>Bit 4</th> <th>Setting</th> </tr> </thead> <tbody> <tr><td>0</td><td>0</td><td>V.29</td></tr> <tr><td>0</td><td>1</td><td>V.17</td></tr> <tr><td>1</td><td>0</td><td>V.34</td></tr> <tr><td>1</td><td>1</td><td>Not used</td></tr> </tbody> </table>	Bit 5	Bit 4	Setting	0	0	V.29	0	1	V.17	1	0	V.34	1	1	Not used	<p>These bits set the initial modem type for 9.6 and 7.2 kbps, if the initial modem rate is set at these speeds.</p>																																																												
Bit 5	Bit 4	Setting																																																																											
0	0	V.29																																																																											
0	1	V.17																																																																											
1	0	V.34																																																																											
1	1	Not used																																																																											
6-7	Not used	Do not change the settings.																																																																											

Service Tables

G3-2 Switch 06		SP No. 1-106-007																																																																											
No	FUNCTION	COMMENTS																																																																											
0 to 3	<p>Initial Rx modem rate</p> <table border="1"> <thead> <tr> <th>Bit 3</th> <th>2</th> <th>1</th> <th>0</th> <th>Setting (bps)</th> </tr> </thead> <tbody> <tr><td>0</td><td>0</td><td>0</td><td>1</td><td>2.4 k</td></tr> <tr><td>0</td><td>0</td><td>1</td><td>0</td><td>4.8 k</td></tr> <tr><td>0</td><td>0</td><td>1</td><td>1</td><td>7.2 k</td></tr> <tr><td>0</td><td>1</td><td>0</td><td>0</td><td>9.6 k</td></tr> <tr><td>0</td><td>1</td><td>0</td><td>1</td><td>12.0 k</td></tr> <tr><td>0</td><td>1</td><td>1</td><td>0</td><td>14.4 k</td></tr> <tr><td>0</td><td>1</td><td>1</td><td>1</td><td>16.8 k</td></tr> <tr><td>1</td><td>0</td><td>0</td><td>0</td><td>19.2 k</td></tr> <tr><td>1</td><td>0</td><td>0</td><td>1</td><td>21.6 k</td></tr> <tr><td>1</td><td>0</td><td>1</td><td>0</td><td>24.0 k</td></tr> <tr><td>1</td><td>0</td><td>1</td><td>1</td><td>26.4 k</td></tr> <tr><td>1</td><td>1</td><td>0</td><td>0</td><td>28.8 k</td></tr> <tr><td>1</td><td>1</td><td>0</td><td>1</td><td>31.2 k</td></tr> <tr><td>1</td><td>1</td><td>1</td><td>0</td><td>33.6 k</td></tr> </tbody> </table> <p>Other settings - Not used</p>	Bit 3	2	1	0	Setting (bps)	0	0	0	1	2.4 k	0	0	1	0	4.8 k	0	0	1	1	7.2 k	0	1	0	0	9.6 k	0	1	0	1	12.0 k	0	1	1	0	14.4 k	0	1	1	1	16.8 k	1	0	0	0	19.2 k	1	0	0	1	21.6 k	1	0	1	0	24.0 k	1	0	1	1	26.4 k	1	1	0	0	28.8 k	1	1	0	1	31.2 k	1	1	1	0	33.6 k	<p>These bits set the initial starting modem rate for reception.</p> <p>Use a lower setting if high speeds pose problems during reception.</p> <p>If a modem rate 14.4 kbps or slower is selected, V.8 protocol should be disabled manually.</p> <p><b>Cross reference</b> V.8 protocol on/off - SG3 switch 03, bit 2</p>
Bit 3	2	1	0	Setting (bps)																																																																									
0	0	0	1	2.4 k																																																																									
0	0	1	0	4.8 k																																																																									
0	0	1	1	7.2 k																																																																									
0	1	0	0	9.6 k																																																																									
0	1	0	1	12.0 k																																																																									
0	1	1	0	14.4 k																																																																									
0	1	1	1	16.8 k																																																																									
1	0	0	0	19.2 k																																																																									
1	0	0	1	21.6 k																																																																									
1	0	1	0	24.0 k																																																																									
1	0	1	1	26.4 k																																																																									
1	1	0	0	28.8 k																																																																									
1	1	0	1	31.2 k																																																																									
1	1	1	0	33.6 k																																																																									



G3-2 Switch 06		SP No. 1-106-007
No	FUNCTION	COMMENTS
4 to 7	Modem types available for reception	The setting of these bits is used to inform the transmitting terminal of the available modem type for the machine in receive mode.  If V.34 is not selected, V.8 protocol must be disabled manually.  <b>Cross reference</b> V.8 protocol on/off - SG3 switch 03, bit 2
	<b>Bit 7 6 5 4 Setting</b>	
	0 0 0 1 V.27ter	
	0 0 1 0 V.27ter, V.29	
	0 0 1 1 V.27ter, V.29 V.33	
	0 1 0 0 V.27ter, V.29, V.17/V.33	
	0 1 0 1 V.27ter, V.29, V.17/V33, V.34	
Other settings - Not used		

G3-2 Switch 07		SP No. 1-106-008
No	FUNCTION	COMMENTS
0 to 1	PSTN cable equalizer (tx mode: Internal)	Use a higher setting if there is signal loss at higher frequencies because of the length of wire between the modem and the telephone exchange.  Use the dedicated transmission parameters for specific receivers.  Also, try using the cable equalizer if one or more of the following symptoms occurs. <ul style="list-style-type: none"> <li>• Communication error</li> <li>• Modem rate fallback occurs frequently.</li> </ul> Note: This setting is not effective in V.34 communications.
	<b>Bit 1 Bit 0 Setting</b>	
	0 0 None	
	0 1 Low	
	1 0 Medium	
1 1 High		
2 to 3	PSTN cable equalizer (rx mode: Internal)	Use a higher setting if there is signal loss at higher frequencies because of the length of wire between the modem and the telephone exchange.  Also, try using the cable equalizer if one or more of the following symptoms occurs. <ul style="list-style-type: none"> <li>• Communication error with error codes such as 0-20, 0-23, etc.</li> <li>• Modem rate fallback occurs frequently.</li> </ul> Note: This setting is not effective in V.34 communications.
	<b>Bit 3 Bit 2 Setting</b>	
	0 0 None	
	0 1 Low	
	1 0 Medium	
1 1 High		
4	PSTN cable equalizer (V.8/V.17 rx mode: External) 0: Disabled 1: Enabled	Keep this bit at "1".
5	PSTN cable equalizer (V.34 rx mode; External)	Keep this bit at "1".
6-7	Not used	Do not change the settings.

<b>G3-2 Switch 08</b> - Not used (do not change the settings)
<b>G3-2 Switch 09</b> - Not used (do not change the settings)

<b>G3-2 Switch 0A</b>			<b>SP No. 1-106-011</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>	
<b>0</b> <b>1</b>	Maximum allowable carrier drop during image data reception <b>Bit 1 Bit 0 Value (ms)</b> 0 0 200 0 1 400 1 0 800 1 1 Not used	These bits set the acceptable modem carrier drop time. Try using a longer setting if error code 0-22 is frequent.	
<b>2-3</b>	Not used	Do not change the settings.	
<b>4</b>	Maximum allowable frame interval during image data reception. <b>0: 5 s 1: 13 s</b>	This bit set the maximum interval between EOL (end-of-line) signals and the maximum interval between ECM frames from the other end. Try using a longer setting if error code 0-21 is frequent.	
<b>5</b>	Not used	Do not change the setting.	
<b>6</b>	Reconstruction time for the first line in receive mode <b>0: 6 s 1: 12 s</b>	When the sending terminal is controlled by a computer, there may be a delay in receiving page data after the local machine accepts set-up data and sends CFR. This is outside the T.30 recommendation. But, if this delay occurs, set this bit to 1 to give the sending machine more time to send data. Refer to error code 0-20. ITU-T T.30 recommendation: The first line should come within 5 s of CFR.	
<b>7</b>	Not used	Do not change the setting.	

Service Tables

<b>G3-2 Switch 0B</b>			<b>SP No. 1-106-012</b>
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>	
<b>0</b>	Protocol requirements: Europe <b>0: Disabled 1: Enabled</b>	The machine does not automatically reset these bits for each country after a country code (System Switch 0F) is programmed. Change the required bits manually at installation.	
<b>1</b>	Protocol requirements: Spain <b>0: Disabled 1: Enabled</b>		
<b>2</b>	Protocol requirements: Germany <b>0: Disabled 1: Enabled</b>		
<b>3</b>	Protocol requirements: France <b>0: Disabled 1: Enabled</b>		
<b>4</b>	PTT requirements: Germany <b>0: Disabled 1: Enabled</b>		
<b>5</b>	PTT requirements: France <b>0: Disabled 1: Enabled</b>		
<b>6</b>	Not used	Do not change the setting.	
<b>7</b>	Not used	Do not change the setting.	

<b>G3-2 Switch 0C</b>			<b>SP No. 1-106-013</b>
<b>No</b>	<b>FUNCTION</b>		<b>COMMENTS</b>
<b>0</b>	Pulse dialing method		P = Number of pulses sent out, N = Number dialed.
<b>1</b>	<b>Bit 1 Bit 0 Setting</b>		
	0 0	Normal(P=N)	
	0 1	Oslo (P=10 - N)	
	1 0	Sweden (N+1)	
	1 1	Not used	
<b>2-7</b>	Not used		Do not change the settings.

<b>G3-2 Switch 0D</b> - Not used (do not change the settings)
<b>G3-2 Switch 0E</b> - Not used (do not change the settings)
<b>G3-2 Switch 0F</b> - Not used (do not change the settings)

### 3.3 NCU PARAMETERS

The following tables give the RAM addresses and the parameter calculation units that the machine uses for ringing signal detection and automatic dialing. The factory settings for each country are also given. Most of these must be changed by RAM read/write (SP2-102), but some can be changed using NCU Parameter programming (SP2-103, 104 and 105); if SP2-103, 104 and 105 can be used, this will be indicated in the Remarks column. The RAM is programmed in hex code unless (BCD) is included in the Unit column.

**NOTE:** The following addresses describe settings for the standard NCU.  
Change the fourth digit from “5” to “6” (e.g. 680500 to 680600) for the settings for the first optional G3 interface unit.  
Change the fourth digit from “5” to “7” (e.g. 680500 to 680700) for the settings for the second optional G3 interface unit.

Address	Function	Unit	Remarks																																																																																																
680500	Country/Area code for NCU parameters	Use the Hex value to program the country/area code directly into this address, or use the decimal value to program it using SP2-103-001  <table border="1"> <thead> <tr> <th>Country/Area</th> <th>Decimal</th> <th>Hex</th> </tr> </thead> <tbody> <tr><td>France</td><td>00</td><td>00</td></tr> <tr><td>Germany</td><td>01</td><td>01</td></tr> <tr><td>UK</td><td>02</td><td>02</td></tr> <tr><td>Italy</td><td>03</td><td>03</td></tr> <tr><td>Austria</td><td>04</td><td>04</td></tr> <tr><td>Belgium</td><td>05</td><td>05</td></tr> <tr><td>Denmark</td><td>06</td><td>06</td></tr> <tr><td>Finland</td><td>07</td><td>07</td></tr> <tr><td>Ireland</td><td>08</td><td>08</td></tr> <tr><td>Norway</td><td>09</td><td>09</td></tr> <tr><td>Sweden</td><td>10</td><td>0A</td></tr> <tr><td>Switzerland</td><td>11</td><td>0B</td></tr> <tr><td>Portugal</td><td>12</td><td>0C</td></tr> <tr><td>Holland</td><td>13</td><td>0D</td></tr> <tr><td>Spain</td><td>14</td><td>0E</td></tr> <tr><td>Israel</td><td>15</td><td>0F</td></tr> <tr><td>USA</td><td>17</td><td>11</td></tr> <tr><td>Asia</td><td>18</td><td>12</td></tr> <tr><td>Hong Kong</td><td>20</td><td>14</td></tr> <tr><td>South Africa</td><td>21</td><td>15</td></tr> <tr><td>Australia</td><td>22</td><td>16</td></tr> <tr><td>New Zealand</td><td>23</td><td>17</td></tr> <tr><td>Singapore</td><td>24</td><td>18</td></tr> <tr><td>Malaysia</td><td>25</td><td>19</td></tr> <tr><td>China</td><td>26</td><td>1A</td></tr> <tr><td>Taiwan</td><td>27</td><td>1B</td></tr> <tr><td>Korea</td><td>28</td><td>1C</td></tr> <tr><td>Greece</td><td>33</td><td>21</td></tr> <tr><td>Hungary</td><td>34</td><td>22</td></tr> <tr><td>Czech</td><td>35</td><td>23</td></tr> <tr><td>Poland</td><td>36</td><td>24</td></tr> </tbody> </table>		Country/Area	Decimal	Hex	France	00	00	Germany	01	01	UK	02	02	Italy	03	03	Austria	04	04	Belgium	05	05	Denmark	06	06	Finland	07	07	Ireland	08	08	Norway	09	09	Sweden	10	0A	Switzerland	11	0B	Portugal	12	0C	Holland	13	0D	Spain	14	0E	Israel	15	0F	USA	17	11	Asia	18	12	Hong Kong	20	14	South Africa	21	15	Australia	22	16	New Zealand	23	17	Singapore	24	18	Malaysia	25	19	China	26	1A	Taiwan	27	1B	Korea	28	1C	Greece	33	21	Hungary	34	22	Czech	35	23	Poland	36	24
Country/Area	Decimal	Hex																																																																																																	
France	00	00																																																																																																	
Germany	01	01																																																																																																	
UK	02	02																																																																																																	
Italy	03	03																																																																																																	
Austria	04	04																																																																																																	
Belgium	05	05																																																																																																	
Denmark	06	06																																																																																																	
Finland	07	07																																																																																																	
Ireland	08	08																																																																																																	
Norway	09	09																																																																																																	
Sweden	10	0A																																																																																																	
Switzerland	11	0B																																																																																																	
Portugal	12	0C																																																																																																	
Holland	13	0D																																																																																																	
Spain	14	0E																																																																																																	
Israel	15	0F																																																																																																	
USA	17	11																																																																																																	
Asia	18	12																																																																																																	
Hong Kong	20	14																																																																																																	
South Africa	21	15																																																																																																	
Australia	22	16																																																																																																	
New Zealand	23	17																																																																																																	
Singapore	24	18																																																																																																	
Malaysia	25	19																																																																																																	
China	26	1A																																																																																																	
Taiwan	27	1B																																																																																																	
Korea	28	1C																																																																																																	
Greece	33	21																																																																																																	
Hungary	34	22																																																																																																	
Czech	35	23																																																																																																	
Poland	36	24																																																																																																	
680501	Line current detection time	20 ms	Line current detection is disabled. Line current is not detected if 680501 contains FF.																																																																																																
680502	Line current wait time																																																																																																		
680503	Line current drop detect time																																																																																																		
680504	PSTN dial tone frequency upper limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.																																																																																																
680505	PSTN dial tone frequency upper limit (low byte)																																																																																																		
680506	PSTN dial tone frequency lower limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.																																																																																																
680507	PSTN dial tone frequency lower limit (low byte)																																																																																																		

Address	Function	Unit	Remarks
680508	PSTN dial tone detection time	20 ms	If 680508 contains FF(H), the machine pauses for the pause time (address 68050D / 68050E).  Italy: See Note 2.
680509	PSTN dial tone reset time (LOW)		
68050A	PSTN dial tone reset time (HIGH)		
68050B	PSTN dial tone continuous tone time		
68050C	PSTN dial tone permissible drop time		
68050D	PSTN wait interval (LOW)		
68050E	PSTN wait interval (HIGH)		
68050F	PSTN ring-back tone detection time	20 ms	Detection is disabled if this contains FF.
680510	PSTN ring-back tone off detection time	20 ms	
680511	PSTN detection time for silent period after ring-back tone detected (LOW)	20 ms	
680512	PSTN detection time for silent period after ring-back tone detected (HIGH)	20 ms	
680513	PSTN busy tone frequency upper limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.
680514	PSTN busy tone frequency upper limit (low byte)		
680515	PSTN busy tone frequency lower limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.
680516	PSTN busy tone frequency lower limit (low byte)		
680517	PABX dial tone frequency upper limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.
680518	PABX dial tone frequency upper limit (low byte)		
680519	PABX dial tone frequency lower limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.
68051A	PABX dial tone frequency lower limit (low byte)		
68051B	PABX dial tone detection time	20 ms	If 68051B contains FF, the machine pauses for the pause time (680520 / 680521).
68051C	PABX dial tone reset time (LOW)		
68051D	PABX dial tone reset time (HIGH)		
68051E	PABX dial tone continuous tone time		
68051F	PABX dial tone permissible drop time		
680520	PABX wait interval (LOW)		
680521	PABX wait interval (HIGH)		
680522	PABX ringback tone detection time	20 ms	If both addresses contain FF(H), tone detection is disabled.
680523	PABX ringback tone off detection time	20 ms	
680524	PABX detection time for silent period after ringback tone detected (LOW)	20 ms	If both addresses contain FF(H), tone detection is disabled.
680525	PABX detection time for silent period after ringback tone detected (HIGH)	20 ms	

Address	Function	Unit	Remarks																				
680526	PABX busy tone frequency upper limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.																				
680527	PABX busy tone frequency upper limit (low byte)																						
680528	PABX busy tone frequency lower limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.																				
680529	PABX busy tone frequency lower limit (low byte)																						
68052A	Busy tone ON time: range 1	20 ms																					
68052B	Busy tone OFF time: range 1																						
68052C	Busy tone ON time: range 2																						
68052D	Busy tone OFF time: range 2																						
68052E	Busy tone ON time: range 3																						
68052F	Busy tone OFF time: range 3																						
680530	Busy tone ON time: range 4																						
680531	Busy tone OFF time: range 4																						
680532	Busy tone continuous tone detection time																						
680533	<p>Busy tone signal state time tolerance for all ranges, and number of cycles required for detection (a setting of 4 cycles means that ON-OFF-ON or OFF-ON-OFF must be detected twice).</p> <p>Tolerance (<math>\pm</math>)</p> <table border="0"> <tr> <td><b>Bit</b></td> <td><b>1</b></td> <td><b>0</b></td> <td></td> </tr> <tr> <td></td> <td>0</td> <td>0</td> <td>75% Bits 2 and 3 must always</td> </tr> <tr> <td></td> <td>0</td> <td>1</td> <td>50% be kept at 0.</td> </tr> <tr> <td></td> <td>1</td> <td>0</td> <td>25%</td> </tr> <tr> <td></td> <td>1</td> <td>1</td> <td>12.5%</td> </tr> </table> <p>Bits 7, 6, 5, 4 - number of cycles required for cadence detection</p>			<b>Bit</b>	<b>1</b>	<b>0</b>			0	0	75% Bits 2 and 3 must always		0	1	50% be kept at 0.		1	0	25%		1	1	12.5%
<b>Bit</b>	<b>1</b>	<b>0</b>																					
	0	0	75% Bits 2 and 3 must always																				
	0	1	50% be kept at 0.																				
	1	0	25%																				
	1	1	12.5%																				
680534	International dial tone frequency upper limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.																				
680535	International dial tone frequency upper limit (low byte)																						
680536	International dial tone frequency lower limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.																				
680537	International dial tone frequency lower limit (low byte)																						
680538	International dial tone detection time	20 ms	<p>If 680538 contains FF, the machine pauses for the pause time (68053D / 68053E).</p> <p>Belgium: See Note 2.</p>																				
680539	International dial tone reset time (LOW)																						
68053A	International dial tone reset time (HIGH)																						
68053B	International dial tone continuous tone time																						
68053C	International dial tone permissible drop time																						
68053D	International dial wait interval (LOW)																						
68053E	International dial wait interval (HIGH)																						

Address	Function	Unit	Remarks
68053F	Country dial tone upper frequency limit (HIGH)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.
680540	Country dial tone upper frequency limit (LOW)		
680541	Country dial tone lower frequency limit (HIGH)		If both addresses contain FF(H), tone detection is disabled.
680542	Country dial tone lower frequency limit (LOW)		
680543	Country dial tone detection time	20 ms	If 680543 contains FF, the machine pauses for the pause time (680548 / 680549).
680544	Country dial tone reset time (LOW)		
680545	Country dial tone reset time (HIGH)		
680546	Country dial tone continuous tone time		
680547	Country dial tone permissible drop time		
680548	Country dial wait interval (LOW)		
680549	Country dial wait interval (HIGH)		
68054A	Time between opening or closing the DO relay and opening the OHDl relay	1 ms	See Notes 3, 6 and 8. Function 06-2 (parameter 11).
68054B	Break time for pulse dialing	1 ms	See Note 3. Function 06-2 (parameter 12).
68054C	Make time for pulse dialing	1 ms	See Note 3. Function 06-2 (parameter 13).
68054D	Time between final OHDl relay closure and DO relay opening or closing	1 ms	See Notes 3, 6 and 8. Function 06-2 (parameter 14). This parameter is only valid in Europe.
68054E	Minimum pause between dialed digits (pulse dial mode)	20 ms	See Note 3 and 8. Function 06-2 (parameter 15).
68054F	Time waited when a pause is entered at the operation panel		Function 06-2 (parameter 16). See Note 3.
680550	DTMF tone on time	1 ms	Function 06-2 (parameter 17).
680551	DTMF tone off time		Function 06-2 (parameter 18).
680552	Tone attenuation level of DTMF signals while dialing	-N x 0.5 -3.5 dBm	Function 06-2 (parameter 19). See Note 5.
680553	Tone attenuation value difference between high frequency tone and low frequency tone in DTMF signals	-dBm x 0.5	Function 06-2 (parameter 20). The setting must be less than -5dBm, and should not exceed the setting at 680552h above. See Note 5.



Address	Function	Unit	Remarks
680554	PSTN: DTMF tone attenuation level after dialling	-N x 0.5 -3.5 dBm	Function 06-2 (parameter 21). See Note 5.
680555	ISDN: DTMF tone attenuation level after dialling	-dBm x 0.5	See Note 5
680556	Not used		Do not change the settings.
680557	Time between 68054Dh (NCU parameter 14) and 68054Eh (NCU parameter 15)	1 ms	This parameter takes effect when the country code is set to France.
680558	Not used		Do not change the setting.
680559	Grounding time (ground start mode)	20 ms	The Gs relay is closed for this interval.
68055A	Break time (flash start mode)	1 ms	The OHDI relay is open for this interval.
68055B	International dial access code (High)	BCD	For a code of 100: 68055B - F1 68055C - 00
68055C	International dial access code (Low)		
68055D	PSTN access pause time	20 ms	This time is waited for each pause input after the PSTN access code. If this address contains FF[H], the pause time stored in address 68054F is used. Do not set a number more than 7 in the UK.
68055E	Progress tone detection level, and cadence detection enable flags	Bit 7 Bit 6 Bit 5    dBm 0 0 0    -25.0 0 0 1    -35.0 0 1 0    -30.0 1 0 0    -40.0 1 1 0    -49.0  Bits 2, 0 - See Note 2.	
68055F to 680564	Not used		Do not change the settings.
680565	Long distance call prefix (HIGH)	BCD	For a code of 0: 680565 - FF 680566 - F0
680566	Long distance call prefix (LOW)	BCD	
680567 to 680571	Not used		Do not change the settings.
680572	Acceptable ringing signal frequency: range 1, upper limit	1000/ N (Hz).	Function 06-2 (parameter 02).
680573	Acceptable ringing signal frequency: range 1, lower limit		Function 06-2 (parameter 03).
680574	Acceptable ringing signal frequency: range 2, upper limit		Function 06-2 (parameter 04).
680575	Acceptable ringing signal frequency: range 2, lower limit		Function 06-2 (parameter 05).

Address	Function	Unit	Remarks
680576	Number of rings until a call is detected	1	Function 06-2 (parameter 06). The setting must not be zero.
680577	Minimum required length of the first ring	20 ms	See Note 4. Function 06-2 (parameter 07).
680578	Minimum required length of the second and subsequent rings	20 ms	Function 06-2 (parameter 06-2).
680579	Ringing signal detection reset time (LOW)	20 ms	Function 06-2 (parameter 09).
68057A	Ringing signal detection reset time (HIGH)		Function 06-2 (parameter 10).
68057B to 680580	Not used		Do not change the settings.
680581	Interval between dialing the last digit and switching the Oh relay over to the external telephone when dialing from the operation panel in handset mode.	20 ms	Factory setting: 500 ms
680582	<p>Bits 0 and 1 - Handset off-hook detection time</p> <p><b>Bit 1 0 Setting</b>  0 0 200 ms  0 1 800 ms  Other Not used</p> <p>Bits 2 and 3 - Handset on-hook detection time</p> <p><b>Bit 3 2 Setting</b>  0 0 200 ms  0 1 800 ms  Other Not used</p> <p>Bits 4 to 7 - Not used</p>		
680583 to 6805A0	Not used		Do not change the settings.
6805A1	Acceptable CED detection frequency upper limit (high byte)	BCD (Hz)	If both addresses contain FF(H), tone detection is disabled.
6805A2	Acceptable CED detection frequency upper limit (low byte)		
6805A3	Acceptable CED detection frequency lower limit (high byte)	BCD (Hz)	If both addresses contain FF(H), tone detection is disabled.
6805A4	Acceptable CED detection frequency lower limit (low byte)		
6805A5	CED detection time	20 ms ± 20 ms	Factory setting: 200 ms
6805A6	Acceptable CNG detection frequency upper limit (high byte)	BCD (Hz)	If both addresses contain FF(H), tone detection is disabled.
6805A7	Acceptable CNG detection frequency upper limit (low byte)		

Address	Function	Unit	Remarks
6805A8	Acceptable CNG detection frequency lower limit (high byte)	BCD (Hz)	If both addresses contain FF(H), tone detection is disabled.
6805A9	Acceptable CNG detection frequency lower limit (low byte)		
6805AA	Not used		Do not change the setting.
6805AB	CNG on time	20 ms	Factory setting: 500 ms
6805AC	CNG off time	20 ms	Factory setting: 200 ms
6805AD	Number of CNG cycles required for detection		The data is coded in the same way as address 680533.
6805AE	Not used		Do not change the settings.
6805AF	Acceptable AI short protocol tone (800Hz) detection frequency upper limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.
6805B0	Acceptable AI short protocol tone (800Hz) detection frequency upper limit (low byte)		
6805B1	Acceptable AI short protocol tone (800Hz) detection frequency lower limit (high byte)	Hz(BCD)	If both addresses contain FF(H), tone detection is disabled.
6805B2	Acceptable AI short protocol tone (800Hz) detection frequency lower limit (low byte)		
6805B3	Detection time for 800 Hz AI short protocol tone	20 ms	Factory setting: 360 ms
6805B4	PSTN: Tx level from the modem	-N – 3 dBm	Function 06-2 (parameter 01).
6805B5	PSTN: 1100 Hz tone transmission level	- N 6805B4 - 0.5N 6805B5 –3.5 (dB) See Note 7.	
6805B6	PSTN: 2100 Hz tone transmission level	- N6805B4 - 0.5N 6805B6 –3 (dB) See Note 7.	
6805B7	PABX: Tx level from the modem	- dBm	
6805B8	PABX: 1100 Hz tone transmission level	- N 6805B7 - 0.5N 6805B8 (dB)	
6805B9	PABX: 2100 Hz tone transmission level	- N 6805B7 - 0.5N 6805B9 (dB)	
6805BA	ISDN: Tx level from the modem <b>(Japan Only)</b>	- dBm	The setting must be between -12dBm and -15dBm.
6805BB	ISDN: 1100 Hz tone transmission level <b>(Japan Only)</b>	- N 6805BA - 0.5N 6805BB (dB)	
6805BC	ISDN: 2100 Hz tone transmission level <b>(Japan Only)</b>	- N 6805BA - 0.5N 6805BC (dB)	
6805BD	Modem turn-on level (incoming signal detection level)	-37-0.5N (dBm)	

Address	Function	Unit	Remarks
6805BE to 6805C6	Not used		Do not change the settings.
6805C7	Bits 0 to 3 – Not used. Bit 4 – V.34 protocol dump <b>0</b> : Simple, <b>1</b> : Detailed (default) Bits 5 to 7 – Not used.		
6805C8 to 6805D9	Not used		Do not change the settings.
6805DA	T.30 T1 timer	1 s	
6805E0 bit 3	Maximum wait time for post message	<b>0</b> : 12 s <b>1</b> : 30 s	<b>1</b> : Maximum wait time for post message (EOP/EOM/MPS) can be changed to 30 s. Change this bit to “1” if communication errors occur frequently during V.17 reception.

**NOTES:**

1. If a setting is not required, store FF in the address.
2. Italy and Belgium only

RAM address 68055E: the lower four bits have the following meaning.

Bit 2 - 1: International dial tone cadence detection enabled (Belgium)

Bit 1 - Not used

Bit 0 - 1: PSTN dial tone cadence detection enabled (Italy)

If bit 0 or bit 2 is set to 1, the functions of the following RAM addresses are changed.

680508 (if bit 0 = 1) or 680538 (if bit 2 = 1): tolerance for on or off state duration (%), and number of cycles required for detection, coded as in address 680533.

68050B (if bit 0 = 1) or 68053B (if bit 2 = 1): on time, hex code (unit = 20 ms)

68050C (if bit 0 = 1) or 68053C (if bit 2 = 1): off time, hex code (unit = 20 ms)

3. Pulse dial parameters (addresses 68054A to 68054F) are the values for 10 pps. If 20 pps is used, the machine automatically compensates.
4. The first ring may not be detected until 1 to 2.5 wavelengths after the time specified by this parameter.
5. The calculated level must be between 0 and 10.  
The attenuation levels calculated from RAM data are:  
High frequency tone: – 0.5 x N<sub>680552/680554</sub>–3.5 dBm  
– 0.5 x N<sub>680555</sub> dBm  
Low frequency tone: – 0.5 x (N<sub>680552/680554</sub> + N<sub>680553</sub>) –3.5 dBm  
– 0.5 x (N<sub>680555</sub> + N<sub>680553</sub>) dBm

**NOTE:** N<sub>680552</sub>, for example, means the value stored in address 680552(H)

6. 68054A: Europe - Between Ds opening and Di opening, France - Between Ds closing and Di opening  
68054D: Europe - Between Ds closing and Di closing, France - Between Ds opening and Di closing
7. Tone signals which frequency is lower than 1500Hz (e.g., 800Hz tone for AI short protocol) refer to the setting at 6805B5h. Tones which frequency is higher than 1500Hz refer to the setting at 6805B6h.
8. 68054A, 68054D, 68054E: The actual inter-digit pause (pulse dial mode) is the sum of the period specified by the RAM addresses 68054A, 68054D, and 68054E.


## 3.4 DEDICATED TRANSMISSION PARAMETERS

Each Quick Dial Key and Speed Dial Code has eight bytes of programmable parameters allocated to it. If transmissions to a particular machine often experience problems, store that terminal's fax number as a Quick Dial or Speed Dial, and adjust the parameters allocated to that number.

The programming procedure will be explained first. Then, the eight bytes will be described.


### 3.4.1 PROGRAMMING PROCEDURE

1. Set the bit 0 of System Bit Switch 00 to 1.
2. Press "Dest. Management" in the facsimile standby mode.
3. Press "Program/Change/Delete Quick Dial".
4. Select the destination key you want to program.
5. When the programmed dial number is displayed, press "Start".  
Make sure that the LED of the Start button is lit as green.

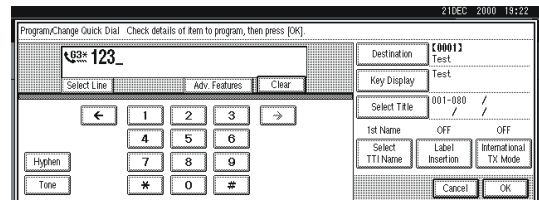

B603S901.WMF

6. The settings for the switch 01 are now displayed. Press the bit number that you wish to change.
7. To scroll through the parameter switches, either:
8. Select the next switch: press "Next"  
or  
Select the previous switch: "Prev." until the correct switch is displayed.  
Then go back to step 6.
9. After the setting is changed, press "OK".
10. After finishing, reset bit 0 of System Bit Switch 00 to 0.

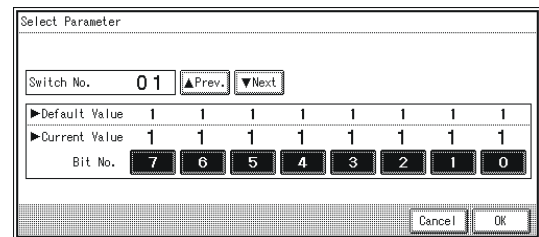

B603S902.WMF

### 3.4.2 PARAMETERS

The initial settings of the following parameters are all FF(H) - all the parameters are disabled.

<b>Switch 00</b>	
<b>FUNCTION AND COMMENTS</b>	
ITU-T T1 time (for PSTN G3 mode) If the connection time to a particular terminal is longer than the NCU parameter setting, adjust this byte. The T1 time is the value stored in this byte (in hex code), multiplied by 1 second.	
<b>Range:</b> 0 to 120 s (00h to 78h) FFh - The local NCU parameter factory setting is used. Do not program a value between 79h and FEh.	

<b>Switch 01</b>																																																																								
No	FUNCTION	COMMENTS																																																																						
<b>0 to 4</b>	<p>Tx level</p> <table border="0"> <tr> <td><b>Bit</b></td> <td><b>4</b></td> <td><b>3</b></td> <td><b>2</b></td> <td><b>1</b></td> <td><b>0</b></td> <td><b>Setting</b></td> </tr> <tr> <td></td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td></td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>-1</td> </tr> <tr> <td></td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>0</td> <td>-2</td> </tr> <tr> <td></td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>1</td> <td>-3</td> </tr> <tr> <td></td> <td>0</td> <td>0</td> <td>1</td> <td>0</td> <td>0</td> <td>-4</td> </tr> <tr> <td></td> <td></td> <td>:</td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td>:</td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td>0</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>-15</td> </tr> <tr> <td></td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>Disabled</td> </tr> </table>	<b>Bit</b>	<b>4</b>	<b>3</b>	<b>2</b>	<b>1</b>	<b>0</b>	<b>Setting</b>		0	0	0	0	0	0		0	0	0	0	1	-1		0	0	0	1	0	-2		0	0	0	1	1	-3		0	0	1	0	0	-4			:							:						0	1	1	1	1	-15		1	1	1	1	1	Disabled	<p>If communication with a particular remote terminal often contains errors, the signal level may be inappropriate. Adjust the Tx level for communications with that terminal until the results are better.</p> <p>If the setting is "Disabled", the NCU parameter 01 setting is used.</p> <p><b>Note:</b> Do not use settings other than listed on the left.</p>
<b>Bit</b>	<b>4</b>	<b>3</b>	<b>2</b>	<b>1</b>	<b>0</b>	<b>Setting</b>																																																																		
	0	0	0	0	0	0																																																																		
	0	0	0	0	1	-1																																																																		
	0	0	0	1	0	-2																																																																		
	0	0	0	1	1	-3																																																																		
	0	0	1	0	0	-4																																																																		
		:																																																																						
		:																																																																						
	0	1	1	1	1	-15																																																																		
	1	1	1	1	1	Disabled																																																																		
<b>5 to 7</b>	<p>Cable equalizer</p> <table border="0"> <tr> <td><b>Bit</b></td> <td><b>7</b></td> <td><b>6</b></td> <td><b>5</b></td> <td><b>Setting</b></td> </tr> <tr> <td></td> <td>0</td> <td>0</td> <td>0</td> <td>None</td> </tr> <tr> <td></td> <td>0</td> <td>0</td> <td>1</td> <td>Low</td> </tr> <tr> <td></td> <td>0</td> <td>1</td> <td>0</td> <td>Medium</td> </tr> <tr> <td></td> <td>0</td> <td>1</td> <td>1</td> <td>High</td> </tr> <tr> <td></td> <td>1</td> <td>1</td> <td>1</td> <td>Disabled</td> </tr> </table>	<b>Bit</b>	<b>7</b>	<b>6</b>	<b>5</b>	<b>Setting</b>		0	0	0	None		0	0	1	Low		0	1	0	Medium		0	1	1	High		1	1	1	Disabled	<p>Use a higher setting if there is signal loss at higher frequencies because of the length of wire between the modem and the telephone exchange when calling the number stored in this Quick/Speed Dial.</p> <p>Also, try using the cable equalizer if one or more of the following symptoms occurs.</p> <ul style="list-style-type: none"> <li>• Communication error with error codes such as 0-20, 0-23, etc.</li> <li>• Modem rate fallback occurs frequently.</li> </ul> <p><b>Note:</b> Do not use settings other than listed on the left.</p> <p>If the setting is "Disabled", the bit switch setting is used.</p>																																								
<b>Bit</b>	<b>7</b>	<b>6</b>	<b>5</b>	<b>Setting</b>																																																																				
	0	0	0	None																																																																				
	0	0	1	Low																																																																				
	0	1	0	Medium																																																																				
	0	1	1	High																																																																				
	1	1	1	Disabled																																																																				

Switch 02				
No	FUNCTION			COMMENTS
<b>0</b> <b>to</b> <b>3</b>	Initial Tx modem rate <b>Bit3 2 1 0 Setting (bps)</b>			<p>If training with a particular remote terminal always takes too long, the initial modem rate may be too high. Reduce the initial Tx modem rate using these bits.</p> <p>For the settings 14.4 or kbps slower, Switch 04 bit 4 must be changed to 0.</p> <p><b>Note:</b> Do not use settings other than listed on the left.</p> <p>If the setting is "Disabled", the bit switch setting is used.</p>
	0 0 0 0	Not used		
	0 0 0 1	2,400		
	0 0 1 0	4,800		
	0 0 1 1	7,200		
	0 1 0 0	9,600		
	0 1 0 1	12,000		
	0 1 1 0	14,400		
	0 1 1 1	16,800		
	1 0 0 0	19,200		
	1 0 0 1	21,600		
	1 0 1 0	24,000		
	1 0 1 1	26,400		
	1 1 0 0	28,800		
	1 1 0 1	31,200		
	1 1 1 0	33,600		
	1 1 1 1	Disabled		
	Other settings: Not used			
<b>4-5</b>	Not used			Do not change the settings.
<b>6</b>	AI short protocol <b>0:</b> Off <b>1:</b> Disabled			Refer to Appendix B in the Group 3 Facsimile Manual for details about AI Short Protocol. If the setting is "Disabled", the bit switch setting is used.
<b>7</b>	Not used			Do not change the settings.

Service Tables

Switch 03				
No	FUNCTION			COMMENTS
<b>0</b> <b>to</b> <b>1</b>	Inch-mm conversion before tx <b>Bit 1 Bit 0 Setting</b>			<p>The machine uses inch-based resolutions for scanning. If "inch only" is selected, the printed copy may be slightly distorted at the other end if that machine uses mm-based resolutions.</p> <p>If the setting is "Disabled", the bit switch setting is used.</p>
	0 0	Inch-mm conversion available		
	0 1	Inch only		
	1 0	Not used		
	1 1	Disabled		
<b>2</b> <b>to</b> <b>3</b>	DIS/NSF detection method <b>Bit 3 Bit 2 Setting</b>			<p><b>(0, 1):</b> Use this setting if echoes on the line are interfering with the set-up protocol at the start of transmission. The machine will then wait for the second DIS or NSF before sending DCS or NSS.</p> <p>If the setting is "Disabled", the bit switch setting is used.</p>
	0 0	First DIS or NSF		
	0 1	Second DIS or NSF		
	1 0	Not used		
	1 1	Disabled		



<b>Switch 03</b>																		
<b>No</b>	<b>FUNCTION</b>		<b>COMMENTS</b>															
<b>4</b>	V.8 protocol <b>0:</b> Off <b>1:</b> Disabled		If transmissions to a specific destination always end at a lower modem rate (14,400 bps or lower), disable V.8 protocol so as not to use V.34 protocol. <b>0:</b> V.34 communication will not be possible. If the setting is "Disabled", the bit switch setting is used.															
<b>5</b>	Compression modes available in transmit mode <b>0:</b> MH only <b>1:</b> Disabled		This bit determines the capabilities that are informed to the other terminal during transmission. If the setting is "Disabled", the bit switch setting is used.															
<b>6 to 7</b>	ECM during transmission	<table border="1"> <thead> <tr> <th><b>Bit 7</b></th> <th><b>Bit 6</b></th> <th><b>Setting</b></th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>Off</td> </tr> <tr> <td>0</td> <td>1</td> <td>On</td> </tr> <tr> <td>1</td> <td>0</td> <td>Not used</td> </tr> <tr> <td>1</td> <td>1</td> <td>Disabled</td> </tr> </tbody> </table>	<b>Bit 7</b>	<b>Bit 6</b>	<b>Setting</b>	0	0	Off	0	1	On	1	0	Not used	1	1	Disabled	For example, if ECM is switched on but is not wanted when sending to a particular terminal, use the (0, 0) setting. Note that V.8/V.34 protocol and JBIG compression are automatically disabled if ECM is disabled. If the setting is "Disabled", the bit switch setting is used.
<b>Bit 7</b>	<b>Bit 6</b>	<b>Setting</b>																
0	0	Off																
0	1	On																
1	0	Not used																
1	1	Disabled																

<b>Switch 04</b> - Not used (do not change the settings)
<b>Switch 05</b> - Not used (do not change the settings)

<b>Switch 06 - Optional ISDN G4 kit required - (Japan Only)</b>																											
<b>No</b>	<b>FUNCTION</b>		<b>COMMENTS</b>																								
<b>0 to 3</b>	Data rate	<table border="1"> <thead> <tr> <th><b>Bits</b></th> <th><b>3</b></th> <th><b>2</b></th> <th><b>1</b></th> <th><b>0</b></th> <th><b>Setting</b></th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>64 kbps</td> </tr> <tr> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>56 kbps</td> </tr> <tr> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>Disabled</td> </tr> </tbody> </table>	<b>Bits</b>	<b>3</b>	<b>2</b>	<b>1</b>	<b>0</b>	<b>Setting</b>	0	0	0	0	0	64 kbps	0	0	0	0	1	56 kbps	1	1	1	1	1	Disabled	If the setting is "Disabled", the current setting of G4 parameter switch 2 (bits 0 and 1) is used.
<b>Bits</b>	<b>3</b>	<b>2</b>	<b>1</b>	<b>0</b>	<b>Setting</b>																						
0	0	0	0	0	64 kbps																						
0	0	0	0	1	56 kbps																						
1	1	1	1	1	Disabled																						
<b>4-7</b>	Not used		Do not change the settings.																								

<b>Switch 07</b> - Not used (do not change the settings)
--

<b>Switch 08 - Optional ISDN G4 kit required - (Japan Only)</b>		
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b> <b>to</b> <b>3</b>	Layer 3 protocol <b>Bits 3 2 1 0 Setting</b> 0 0 0 0 ISO 8208 0 0 0 1 T.70 NULL 1 1 1 1 Disabled	If the setting is "Disabled", the current setting of G4 parameter switch 6 (bit 0) is used.
<b>4</b> <b>to</b> <b>7</b>	Packet modulus <b>Bits 3 2 1 0 Setting</b> 0 0 0 0 Modulo 8 0 0 0 1 Modulo 128 1 1 1 1 Disabled	If the setting is "Disabled", the current setting of G4 parameter switch 6 (bit 4) is used.

<b>Switch 09 - Optional ISDN G4 kit required - (Japan Only)</b>		
<b>No</b>	<b>FUNCTION</b>	<b>COMMENTS</b>
<b>0</b> <b>to</b> <b>1</b>	Attachment of the Higher Layer Capabilities	This bit determines whether Higher Layer Capabilities are informed in the [SETUP] signal or not.
<b>2</b> <b>to</b> <b>3</b>	ISDN G3 information transfer capability <b>0:</b> 3.1 kHz audio <b>1:</b> Speech	In tx mode, this determines the information transfer capability informed in the [SETUP] messages. In rx mode, this determines the information transfer capability that the machine can use to receive a call. Set this bit to 1 if the ISDN does not support 3.1 kHz audio.
<b>4-7</b>	Not used	Do not change the settings.

### 3.5 SERVICE RAM ADDRESSES

<b>⚠ CAUTION</b>
------------------

<b>Do not change the settings which are marked as "Not used" or "Read only."</b>
--

#### **680001 to 680004(H) - ROM version (Read only)**

680001(H) - Revision number (BCD)

680002(H) - Year (BCD)

680003(H) - Month (BCD)

680004(H) - Day (BCD)

#### **680006 to 680015(H) - Machine's serial number (16 digits - ASCII)**

**680018(H)** - Total program checksum (low)

**680019(H)** - Total program checksum (high)

**680020 to 68003F(H)** - System bit switches

**680040 to 68004F(H)** - Scanner bit switches

**680050 to 68005F(H)** - Printer bit switches

**680060 to 68007F(H)** - Communication bit switches

**680080 to 68008F(H)** - G3 bit switches

**680090 to 68009F(H)** - G3-2 bit switches

**6800A0 to 6800AF(H)** - G3-3 bit switches

**6800D0(H) - User parameter switch 00 (SWUER\_00)** : Not used

**6800D1(H) - User parameter switch 01 (SWUSR\_01)** : Not used

#### **6800D2(H) - User parameter switch 02 (SWUSR\_02)**

Bit 0: Forwarding mark printing on forwarded messages 0: Disabled, 1: Enabled

Bit 1: Center mark printing on received copies

(This switch is not printed on the user parameter list.)

0: Disabled, 1: Enabled

Bit 2: Reception time printing

(This switch is not printed on the user parameter list.)

0: Disabled, 1: Enabled

Bit 3: TSI print on received messages 0: Disabled, 1: Enabled

Bit 4: Checkered mark printing

(This switch is not printed on the user parameter list.)

0: Disabled, 1: Enabled

Bit 5: CIL printing (G4) 0: Disabled, 1: Enabled **(Japan Only)**

Bit 6: TID printing (G4) 0: Disabled, 1: Enabled **(Japan Only)**

Bit 7: Not used

**6800D3(H) - User parameter switch 03 (SWUSR\_03: Automatic report printout)**

Bit 0: Transmission result report (memory transmissions) 0: Off, 1: On

Bit 1: Not used

Bit 2: Memory storage report 0: Off, 1: On

Bit 3: Polling reserve report (polling reception) 0: Off, 1: On

Bit 4: Polling result report (polling reception) 0: Off, 1: On

Bit 5: Transmission result report (immediate transmissions) 0: Off, 1: On

Bit 6: Polling clear report 0: Off, 1: On

Bit 7: Journal 0: Off, 1: On

**6800D4(H) - User parameter switch 04 (SWUSR\_04: Automatic report printout)**

Bit 0: Automatic confidential reception report output 0: Off, 1: On

Bits 1 to 6: Not used

Bit 7: Inclusion of a sample image on reports 0: Off, 1: On

**6800D5(H) - User parameter switch 05 (SWUSR\_05)**

Bit 0: Substitute reception when the base copier is in an SC condition

0: Enabled, 1: Disabled

Bits 1 and 2: Condition for substitute rx when the machine cannot print messages (Paper end, toner end, jam, and during night mode)

Bit 2 1 Setting

0 0 The machine receives all the fax messages.

0 1 The machine receives the fax messages with RTI or CSI.

1 0 The machine receives the fax messages with the same ID code.

1 1 The machine does not receive anything.

Bit 3: Not used

Bit 4: Not used

Bit 5: Just size printing 0: Off, 1: On

Bit 6: Not used

Bit 7: Add paper display when a cassette is empty 0: Off, 1: On

**6800D6(H) - User parameter switch 06 (SWUSR\_06)**

Bits 0 to 5: Not used

Bit 6: Scan sequence in Book transmission

0: Left page then right page, 1: Right page then left page

Bit 7: Not used

**6800D7(H) - User parameter switch 07 (SWUSR\_07)**

Bits 0 and 1: Not used

Bit 2: Parallel memory transmission 0: Off, 1: On

Bits 3 to 7: Not used

**6800D8(H) - User parameter switch 08 (SWUSR\_08)**

Bits 0 and 1: Not used.

Bit 2: Authorized reception

0: Only faxes from senders whose RTIs/CSIs are specified for this feature are accepted.

1: Only faxes from senders whose RTIs/CSIs are not specified for this feature are accepted.

Bits 3 to 7: Not used.

**6800D9(H) - User parameter switch 09 (SWUSR\_09) : Not used****6800DA(H) - User parameter switch 10 (SWUSR\_0A)**

Bit 0: Not used

Bit 1: 2 into 1 0: Off, 1: On

Bit 2: Not used

Bit 3: Page reduction 0: Off, 1: On

Bits 4 to 7: Not used

**6800DB(H) - User parameter switch 11 (SWUSR\_0B)**

Bit 0: Not used

Bit 1: Method of transmitting numbers after the "Tone" mark over an ISDN line

0: UUI, 1: Tone (**Japan Only**)

Bits 2 to 5: Not used

Bit 6: Printout of messages received while acting as a forwarding station

0: Off, 1: On

Bit 7: Polling Standby duration 0: Once, 1: No limit

**6800DC(H) - User parameter switch 12 (SWUSR\_0C): Not used****6800DD(H) - User parameter switch 13 (SWUSR\_0D) (Japan Only)**

(This switch is not printed on the user parameter list.)

Bits 0 to 4: Not used

Bit 5: Action when receiving a SETUP signal containing no called number and the G4 subscriber number was programmed in this machine.

0: Respond to the call, 1: Do not respond to the call

Bit 6: Action when the received HLC (Higher Level Capabilities) is Tel or BC (Bearer Capabilities) is Speech.

0: Do not respond to the call, 1: Respond to the call

This switch determines which information transfer capabilities the machine can accept when receiving a call.

1: When the received HLC is Tel (digital telephone) or BC is Speech (voice), the machine responds to the call. In short, the machine receives every call.

This switch is useful for communication problems when the other terminal informs the above transfer capabilities although it is a fax machine.

Bit 7: ISDN SPID programming (used only in the USA)

**6800DE(H) - User parameter switch 14 (SWUSR\_0E)**

Bit 0: Message printout while the machine is in Night Printing mode 0: On, 1: Off

Bit 1: Maximum document length detection

0: Double letter, 1: Longer than double-letter (well log) – up to 1,200 mm

Bit 2: Batch transmission 0: Off, 1: On

Bit 3: Fax mode settings, such as resolution, before a mode key (Copy/Fax/Printer/Scanner) is pressed

0: Not cleared, 1: Cleared

Bits 4 to 6: Not used

Bit 7: Manual service call (sends the system parameter list to the service station)

0: Off, 1: On

**6800DF(H) - User parameter switch 15 (SWUSR\_0F)**

Bits 0, 1 and 2: Cassette for fax printout

Bit 2	1	0	Setting
-------	---	---	---------

0	0	1	1st paper feed station
---	---	---	------------------------

0	1	0	2nd paper feed station
---	---	---	------------------------

0	1	1	3rd paper feed station
---	---	---	------------------------

1	0	0	4th paper feed station
---	---	---	------------------------

1	0	1	LCT
---	---	---	-----

Other settings Not used

Bits 3 and 4: Not used

Bit 5: Using the cassette specified by bits 0, 1 and 2 above only 0: On, 1: Off

Bits 6 and 7: Not used

**6800E0(H) – User parameter switch 16 (SWUSR\_10)**

(This switch is not printed on the user parameter list.)

Bits 0 and 1: Not used

Bit 2: Paper size selection priority for an A4 size fax message when A4/LT size paper is not available.

0: A3 has priority, 1: B4 has priority

Bits 3 to 7: Not used

**6800E1(H) – User parameter switch 17 (SWUSR\_11)**

Bits 0 and 1: Not used

Bit 2: Inclusion of the “Add” button when a sequence of Quick/Speed dials is selected for broadcasting

0: Not needed, 1: Needed

Bits 3 to 6: Not used

Bit 7: Press “Start” key without an original when using the on hook dial or the external telephone,

0: displays “Cannot detect original size”.

1: Receives fax messages.

**6800E2(H) - User parameter switch 18 (SWUSR\_12)**

Bit 0: TTI date 0: Off, 1: On

Bit 1: TTI sender 0: Off, 1: On

Bit 2: TTI file number 0: Off, 1: On

Bit 3: TTI page number 0: Off, 1: On

Bit 4 to 7: Not used

**6800E3(H) - User parameter switch 19 (SWUSR\_13)**

Bit 0: Offset sort function for the fax (only using the shift tray on the 1,000 sheet finisher)

0: Disabled, 1: Enabled

Bit 1: Journal format

0: The Journal is separated into transmissions and receptions

1: The Journal is separated into G3-1, G3-2, and G3-3 communications

Bit 2: Action when the paper cassette that was selected by the specified cassette selection feature becomes empty.

(This switch is not printed on the user parameter list.)

0: The machine will not print any received files until paper is added.

1: The machine will use other cassettes to print received files that are not specified by this feature.

Bit 3: 90° image rotation during B5 portrait Tx

(This switch is not printed on the user parameter list.)

0: Off, 1: On

Bit 4: Reduction of sample images on reports to 50% in the main scan and sub-scan directions. (This switch is not printed on the user parameter list.)

0: Technician adjustment (printer switch 0E bits 3 and 4), 1: 50% reduction

Bit 5: Use of A5 size paper for reports

(This switch is not printed on the user parameter list.)

0: Off, 1: On

Bits 6 and 7: Not used

**6800E4(H) - User parameter switch 20 (SWUSR\_14)**

Bit 0: Automatic printing of the PC FAX error report

0: Off, 1: On

Bit 1: Reprint the documents fail to print from PC Fax driver

0: Off, 1: On

Bits 2 to 5: Store documents in memory which could not be printed from PC Fax driver

Bit	5	4	3	2	Setting
	0	0	0	0	0 min.
	0	0	0	1	1 min.
			↓		↓
	1	1	1	0	14 min.
	1	1	1	1	15 min.

Bits 6 and 7: Not used.

**6800E5(H) - User parameter switch 21 (SWUSR\_15) : Not used**

**6800E6(H) - User parameter switch 22 (SWUSR\_16): Not used**

**6800E7(H) - User Parameter switch 23 (SWUSR\_17) : Not used**

**6800E8(H) - User parameter switch 24 (SWUSR\_18)**

Bits 0 and 1: File retention time (Cross reference: System switch 02 bit 4)

Bit	1	0	Setting
	0	0	File retention impossible
	0	1	24 hours
	1	0	File retention impossible
	1	1	72 hours

Bits 2 to 7: Not used

**6800E9(H) - User parameter switch 25 (SWUSR\_19)**

Bits 0 to 3: Not used

Bit 4: RDS operation

0: Not acceptable

1: Acceptable for the limit specified by system switch 03

**NOTE:** This bit is only effective when RDS operation can be selected by the user (see system switch 02).

Bits 5 to 7: Not used

**6800EA to 6800ED(H) - User parameter switch 26 to 29 (SWUSR\_1A to 1D)**

: Not used

**680EE(H) - User parameter switch 30 (SWUSR\_1E)**

Bits 0 to 6: Not used

Bit7: On hook dialing

0: PSTN, 1: ISDN (**Japan Only**)**NOTE:** If this bit set to 1, the on hook dialing is available on the ISDN line. But, the machine cannot use the G3 standard analog line for detecting the ringing and on hook dialing.**6800F0 to 6800FF(H) - G4 Parameter Switches (Japan Only)****680100 to 68011F(H) - G4 Internal Switches (Japan Only)****680180 to 68019F(H) - Service station's fax number (SP3-101)**

See 68036C(H) for the type of network used for this number.

**6801A0 to 6801A3(H) - Own fax PABX extension number****6801AA to 6801B3(H) - Own fax number (PSTN)****6801B4 to 6801C7(H) - Own fax number (ISDN G4) (Japan Only)****6801C8 to 6801D3(H) - The first subscriber number (ISDN G3) (Japan Only)****6801D4 to 6801DF(H) - The second subscriber number (ISDN G3) (Japan Only)****6801E0 to 6801EB(H) - The first subscriber number (ISDN G4) (Japan Only)****6801EC to 6801F7(H) - The second subscriber number (ISDN G4) (Japan Only)****6801F8 to 68020B(H) - PSTN-1 RTI (Max. 20 characters - ASCII) - See the note below.****68020C to 68021F(H) - PSTN-2 RTI (Max. 20 characters - ASCII) - See the note below.****680220 to 680233(H) - PSTN-3 RTI (Max. 20 characters - ASCII) - See the note below.****680237 to 680276(H) - TTI 1 (Max. 64 characters - ASCII) - See the note below.****680277 to 6802B6(H) - TTI 2 (Max. 64 characters - ASCII) - See the note below.****6802B7 to 6802F6(H) - TTI 3 (Max. 64 characters - ASCII) - See the following**



**6802F7 to 68030A(H)** - PSTN-1 CSI (Max. 20 characters - ASCII)

**68030B to 68031E(H)** - PSTN-2 CSI (Max.20 characters - ASCII)

**68031F to 680332(H)** – PSTN-3 CSI (Max. 20 characters - ASCII)

**680333(H)** - Number of PSTN-1 CSI characters (Hex)

**680334(H)** - Number of PSTN-2 CSI characters (Hex)

**680335(H)** - Number of PSTN-3 CSI characters (Hex)

**NOTE:** If the number of characters is less than the maximum (20 for RTI, 64 for TTI), add a stop code (FF[H]) after the last character.

**680340 to 680342(H)** - PSTN-1 line settings

680340

Bits 0 and 1: PSTN access method from behind a PABX.

Bit	1	0	Setting
	0	0	Loop start
	0	1	Ground start
	1	0	Flash start
	1	1	Not used

Bit 2: Telephone line type.

0: PSTN, 1: PABX

Bits 3 and 4: Dialing type.

Bit	4	3	Setting
	0	0	Pulse dialing
	0	1	Not used
	1	0	Tone dialing
	1	1	Not used

Bits 4 to 7: Not used

680341: PSTN access number for loop start

Access number Hex value to program (BCD)

0	F0
↓	↓
9	F9
00	00
↓	↓
99	99

680342

Bit 0: Transmission disabled

0: Tx and Rx, 1: Rx only

Bit 1: Memory Lock reception

0: Enabled, 1: Disabled

Bits 2 to 7: Not used

**680348 to 68034A(H)** - PSTN-2 line settings

**680350 to 680352(H)** - PSTN-3 line settings

**680358 to 68035A(H)** - ISDN line settings (**Japan Only**)

**680360(H)** - ID code (low - Hex)

**680361(H)** - ID code (high - Hex)

**680362(H)** - Confidential ID (low - BCD)

**680363(H)** - Confidential ID (high - BCD)

**680364(H)** - Memory Lock ID (low - BCD)

**680365(H)** - Memory Lock ID (high - BCD)

**68036C(H)** - Network type used for the service station number

0 1 (H) - PSTN-1

0 2 (H) - PSTN-2

1 0 (H) - G4 (**Japan Only**)

0 7 (H) - G3 auto selection

**680370 to 680377(H)** - Last power off time (Read only)

680370(H) - 01(H) - 24-hour clock, 00(H) - 12-hour clock (AM),  
02(H) - 12-hour clock (PM)

680371(H) - Year (BCD)

680372(H) - Month (BCD)

680373(H) - Day (BCD)

680374(H) - Hour

680375(H) - Minute

680376(H) - Second

680377(H) - 00: Monday, 01: Tuesday, 02: Wednesday, ..... , 06: Sunday

**680384(H)** - Optional equipment (Read only – Do not change the settings)

Bit 0 to 3: Not used

Bit 4: Function Upgrade unit 0: Not installed, 1: Installed

Bit 5 to 7: Not used

**680385(H)** - Optional equipment (Read only – Do not change the settings)

Bit 0: Function Upgrade unit 0: Not installed, 1: Installed

Bit 1 to 3: Not used

Bit 4: G3-2 0: Not installed, 1: Installed

Bit 5: Not used

Bit 6: ISDN unit 0: Not installed, 1: Installed (**Japan Only**)

Bit 7: Not used

**6803B8 to 6803CF(H)** - G4 terminal ID (ASCII - Max. 24 characters) (**Japan Only**)

**6803D0 to 6803E3(H)** - ISDN CSI (**Japan Only**)

**6803E4(H)** - Number of ISDN CSI characters (Hex) (**Japan Only**)

**6803E9 to 6803EC(H)** - ISDN G3 sub-address (**Japan Only**)

**6803ED to 6803F0(H)** - ISDN G4 sub-address (**Japan Only**)

**6803F1 to 6803F5(H)** - SiG4 board ROM information (Read only) (**Japan Only**)

6803F1(H) - Suffix

6803F2(H) - Version (BCD)

6803F3(H) - Year (BCD)

6803F4(H) - Month (BCD)

6803F5(H) - Day (BCD)

**6803F6 to 6803FA(H)** – Option G3 board (G3-2) ROM information (Read only)

6803F6(H) - Suffix (BCD)

6803F7(H) - Version (BCD)

6803F8(H) - Year (BCD)

6803F9(H) - Month (BCD)

6803FA(H) - Day (BCD)

**680402(H)** - Option G3 board (G3-2) modem ROM version (Read only)

**680406 to 68040B(H)** - Modem ROM version (Read only)

- 680406(H) - Part number (low)
- 680407(H) - Part number (high)
- 680408(H) - Control (low)
- 680409(H) - Control (high)
- 68040A(H) - DSP (low)
- 68040B(H) - DSP (high)

**680464(H)** - Time for economy transmission (hour in 24h clock format - BCD)

**680465(H)** - Time for economy transmission (minute - BCD)

**680482(H)** - Transmission monitor volume 00 - 07(H)

**680483(H)** - Reception monitor volume 00 - 07(H)

**680484(H)** - On-hook monitor volume 00 - 07(H)

**680485(H)** - Dialing monitor volume 00 - 07(H)


**680486(H)** - Buzzer volume 00 - 07(H)

**6BA000 – 6BA1FF(H)** – Latest 64 error codes (Read only)

**6BE988 – 6BF35F(H)** – Latest 20 error communication records

## 4. DETAILED SECTION DESCRIPTIONS

### 4.1 OVERVIEW

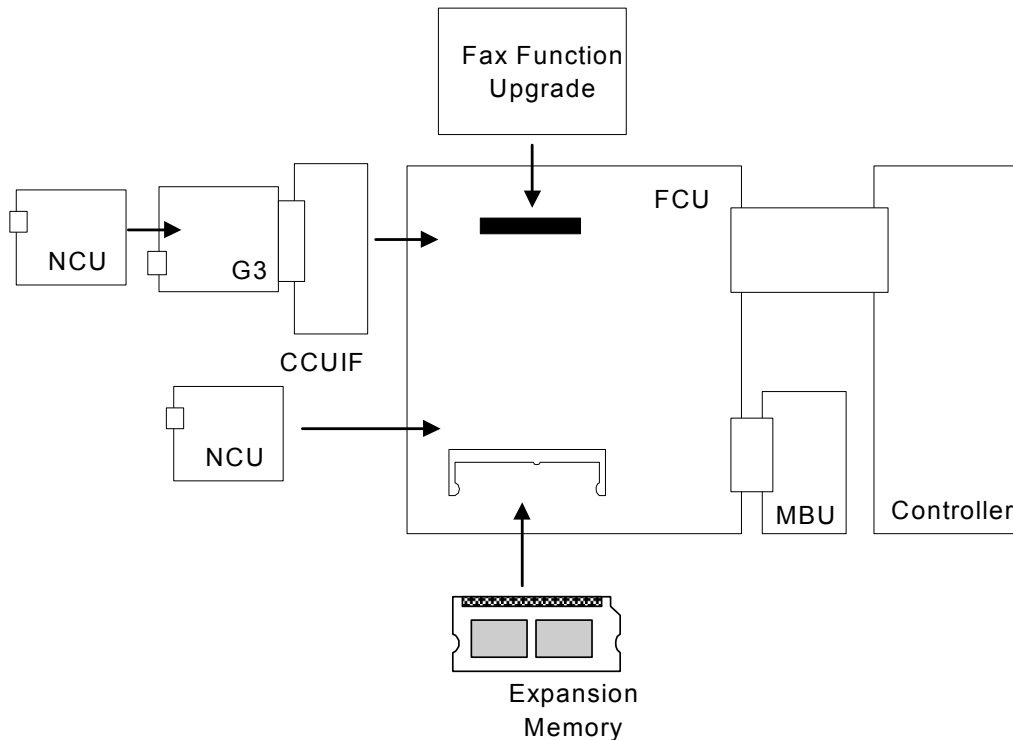

Detailed  
Descriptions

B603D901.WMF

The basic fax unit consists of three PCBs: an FCU, an MBU and an NCU.


The FCU controls all the fax communications and fax features, in cooperation with the controller board. The MBU contains the ROM and SRAM. The NCU switches the analog line between the fax unit and the external telephone.

#### Fax Options:

1. Extra G3 Interface option: This provides one more analog line interface. This allows full dual access. Only one extra G3 interface option can be installed. The optional G3 unit consists of three PCBs: G3 board, NCU, and CCUIF.
2. Fax Function Upgrade Unit: JBIG compression becomes available. In addition, this expands the system's SRAM capacity to hold programmed telephone numbers, memory files, etc.
3. Memory Expansion: This expands the SAF memory and the page memory (used for image rotation); without this expansion, the page memory is not big enough for image rotation at 400 dpi, so transmission at 400 dpi is not possible.

## 4.2 BOARDS

### 4.2.1 FCU

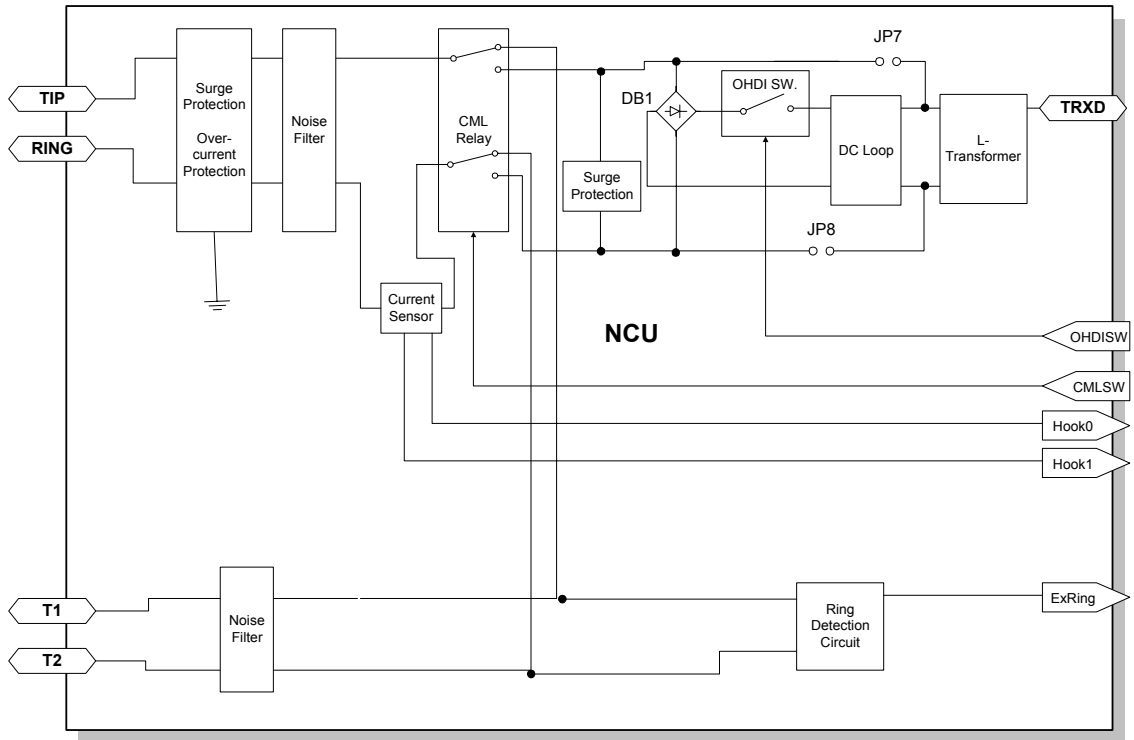

B603D902.WMF

The FCU (Facsimile Control Unit) controls fax communications, the video interface to the base copier's engine, and all the fax options.

#### *FACE2 (Fax Application Control Engine)*

- CPU
- Data compression and reconstruction (DCR)
- DMA control
- Clock generation
- DRAM backup control
- Ringing signal/tone detection

#### *FBI (FACE Bridge Interface)*

- Interface between the PCI bus and the FACE
- DMA control

#### *Modem (Panasonic MN195006-E)*

- V.34, V33, V17, V.29, V.27ter, V.21, and V.8

**DRAM**

- The 16 MB of DRAM is shared as follows.  
 SAF memory : 4 MB  
 Working memory : 4 MB  
 Page memory : 8 MB
- The SAF memory is backed up by a rechargeable battery.

**Memory back-up**

- A Rechargeable battery backs up the SAF memory (DRAM) for 1 hour.

**Switches**

Item	Description
SW1	Reset switch, to reboot the FCU board

**4.2.2 MBU**

On this board, the flash ROM contains the FCU firmware, and the SRAM contains the system data and user parameters. Even if the FCU is changed, the system data and user parameters are kept on the MBU board.

Detailed Descriptions

**ROM**

- 3MB flash ROMs for system software storage  
 2MB (16bit x 1MB) + 1MB (16bit x 512K)

**SRAM**

- The 256 KB SRAM for system and user parameter storage is backed up by a lithium battery.


**Memory back-up**

- A lithium battery backs up the system parameters and programmed items in the SRAM, in case the base copier's main switch is turned off.

**Switches**

Item	Description
SW1	Switches the SRAM backup battery on/off.

**4.2.3 NCU (US)**

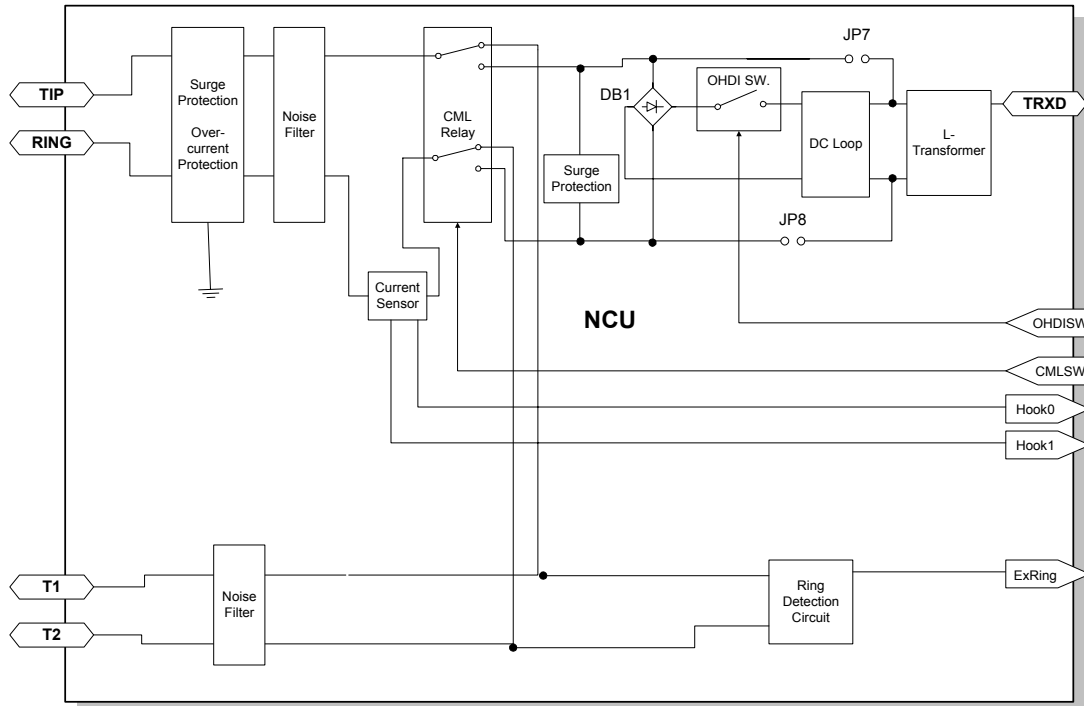


B603D903.WMF

**Jumpers**

Item	Description
JP7	These jumpers should be shorted when the machine is connected to a dry line.
JP8	
DB1	Also remove DB1 when the machine is connected to a dry line.

### 4.2.4 NCU (EUROPE/ASIA)

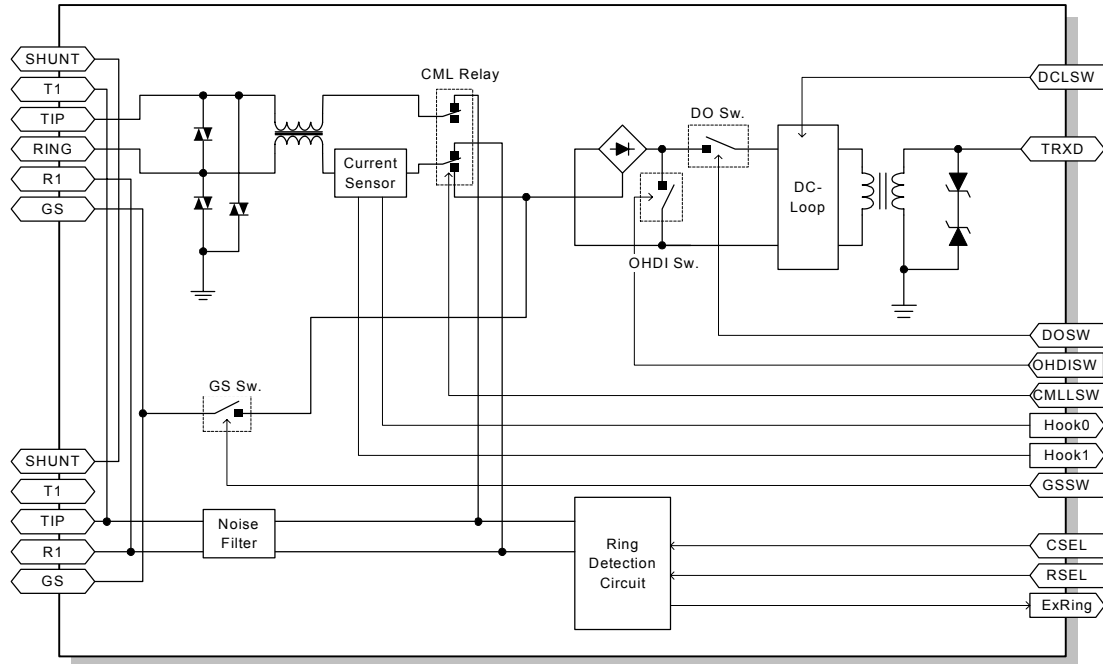

B603D904.WMF

Detailed Descriptions

#### Control Signals and Jumpers


Country	CSEL1	RSEL
	CN2-5	CN1-13
CTR21	H	H
Australia	H	H
South Africa	H	H
Malaysia	H	H
Hong Kong	L	L
New Zealand	L	L
Singapore	L	L
Asia	L	L
	L: Low, H: High	

#### CTR21 (Common Technical Regulation 21):

France, Germany, UK, Italy, Austria, Belgium, Denmark, Finland, Ireland, Norway, Sweden, Switzerland, Portugal, Holland, Spain, Israel, Greece



## 4.2.5 SG3-D BOARD

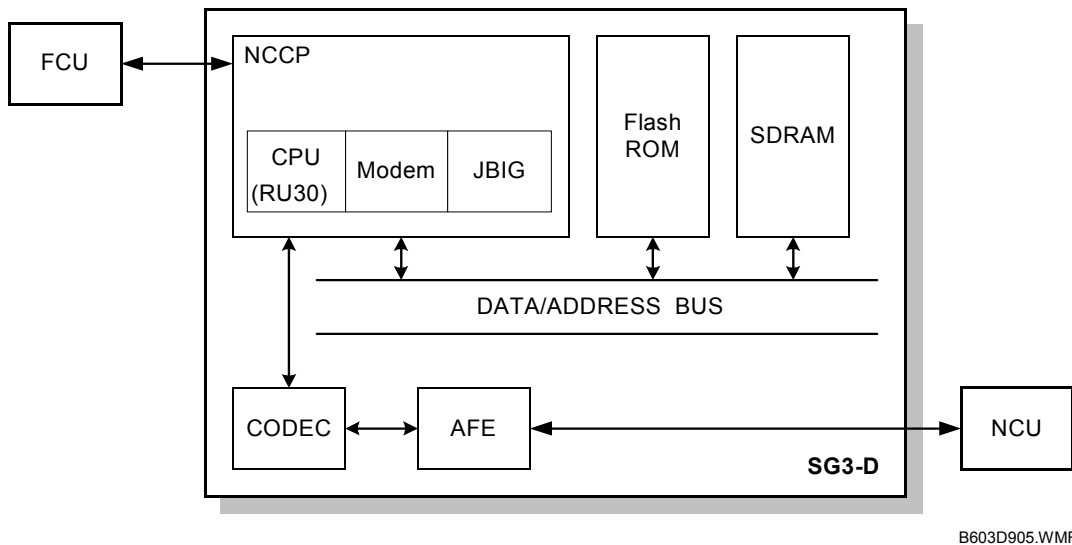

The SG3-D board allows up to two simultaneous communications when used with the the FCU.

### NCCP (New Communication Control Processor)

- Controls the SG3-D board
- CPU (RU30)
- Modem (V.34)
- JBIG

### Flash ROM

- 8 MB flash ROM shared between the SG3 software and modem softare.

### SDRAM

- 16 MB DRAM shared between the ECM buffer, line buffer, and work memory.

### CODEC

- Converts analog data to binary data.
- Converts binary data to analog data.

### AFE (Analog Front End)

- Analog circuit
- Data transfer

## 4.3 ADDRESS BOOK

The address book (directory) for this machine combines under one user name the fax address and mail address.

### ***With Printer Scanner Unit***

All the address data is stored on the HDD. Up to a maximum of 2,000 items can be stored for addresses.

### ***Without Optional Printer Scanner Unit (Asia Model Only)***

All the address data is stored in the FCU.

- Standard: 500 items
- With Expansion Memory: 500 items
- With Fax Function Upgrade Unit: 1,200 items
- With Expansion Memory and Fax Function Upgrade Unit: 1,200

---

# SPECIFICATIONS

## 1. GENERAL SPECIFICATIONS

Type:	Desktop type transceiver
Circuit:	PSTN (max. 2ch.) PABX
Connection:	Direct couple
Original Size:	Book (Face down) Maximum Length: 432 mm [17 ins] Maximum Width: 297 mm [11.7 ins] ARDF (Face up) (single sided document) Length: 128 - 1200 mm [5.0 - 47.2 ins] Width: 105 - 297 mm [4.1 - 11.7 inch]  (double sided document) Length: 128 - 432 mm [5.0 - 17 inch] Width: 105 - 297 mm [4.1 - 11.7 inch]
Scanning Method:	Flat bed, with CCD
Resolution:	G3 8 x 3.85 lines/mm (Standard) 8 x 7.7 lines/mm (Detail) 8 x 15.4 line/mm (Fine) Note1 16 x15.4 line/mm (Super Fine) See Note.  200 x 100 dpi (Standard) 200 x 200 dpi (Detail) 400 x 400 dpi (Super Fine) See Note.  <b>Note 1:</b> Optional Expansion Memory required
Transmission Time:	G3: 3 s at 28800 bps; Measured with G3 ECM using memory for an ITU-T #1 test document (Slerexe letter) at standard resolution
Data Compression:	MH, MR, MMR JBIG (optional Fax Function Upgrade Unit required)
Protocol:	Group 3 with ECM
Modulation:	V.34, V.33, V.17 (TCM), V.29 (QAM), V.27ter (PHM), V.8, V.21 (FM)
Data Rate:	G3: 33600/31200/28800/26400/24000/21600/ 19200/16800/14400/12000/9600/7200/4800/2400 bps Automatic fallback
I/O Rate:	With ECM: 0 ms/line Without ECM: 2.5, 5, 10, 20, or 40 ms/line

Memory Capacity: ECM: 128 KB  
 SAF  
     Standard: 4 MB  
     With optional Expansion Memory: 28 MB (4 MB+ 24 MB)  
 Page Memory  
     Standard: 8 MB (Print: 4 MB + Scanner: 4 MB)  
     With optional Expansion Memory: 16 MB (8 MB + 8 MB)  
     (Print 8 MB + Scanner: 8 MB)

## 2. CAPABILITIES OF PROGRAMMABLE ITEMS

The following table shows how the capabilities of each programmable item will change after the optional Fax Function Upgrade Unit is installed.

Item	Standard	With Fax Function Upgrade Unit
Quick Dial	500	1200 (2000*)
Groups	100	100
Destination per Group	500	500
Boxes (Information/Personal/Transfer)	150	400
Destinations dialed from the ten-key pad overall	500	2,000
Programs	100	200
Auto Document	6	18
Communication records for Journal stored in the memory	200	1,000
Specific Senders	30	50

\*: With the Printer/Scanner Option


The following table shows how the capabilities of the document memory will change after the optional Fax Function Upgrade Unit and the Expansion Memory are installed.

		<b>Without the Expansion Memory</b>	<b>With the Expansion Memory</b>
Memory Transmission file	<b>Without the Fax Function Upgrade Unit</b>	400	400
Maximum number of page for memory transmission		1,000	3,000
Memory capacity for memory transmission <b>(Note1)</b>		320	2,280
Memory Transmission file	<b>With the Fax Function Upgrade Unit</b>	800	800
Maximum number of page for memory transmission		1,000	3,000
Memory capacity for memory transmission <b>(Note1)</b>		320	2,280

**NOTE:** 1) Measured using an ITU-T #1 test document (Slerexe letter) at the standard resolution, the auto image density mode and the Text mode.



### 3. MACHINE CONFIGURATION

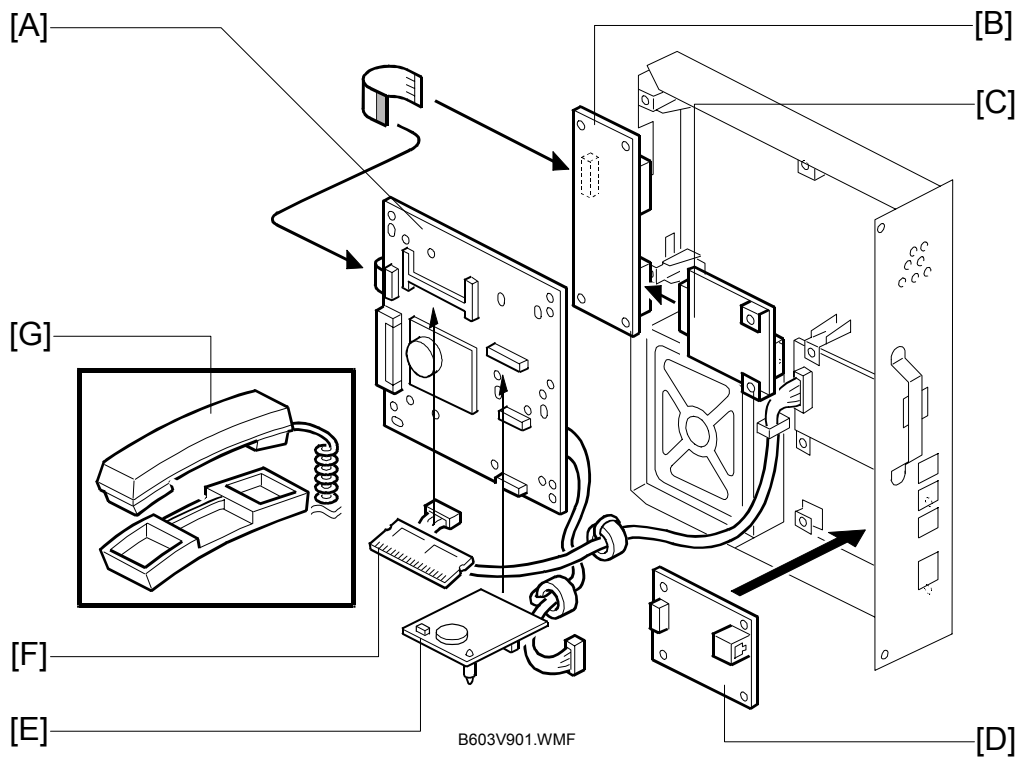

Component	Machine Code		Remarks
Fax Unit	B603	[A]	
Interface Board	B604	[B]	Included in the optional G3 unit.
G3 Board		[C]	
NCU		[D]	
Fax Function Upgrade Unit	A892	[E]	
Expansion Memory	G578	[F]	
Handset	B433	[E]	For USA model only.

**Internet Fax (IFAX)**

**Model J-C1**

**SERVICE MANUAL**

# TABLE OF CONTENTS

<b>1. INSTALLATION.....</b>	<b>1-1</b>
1.1 IFAX INSTALLATION .....	1-1
1.2 INITIAL SETTINGS.....	1-1
<b>2. TROUBLESHOOTING.....</b>	<b>2-1</b>
2.1 ERROR CODES FOR LAN COMMUNICATION.....	2-1
2.2 TROUBLESHOOTING PROCEDURES.....	2-6
<b>3. SERVICE TABLES AND PROCEDURES .....</b>	<b>3-1</b>
3.1 ACCESSING IFAX BIT SWITCHES .....	3-1
3.2 SP1102 IFAX SWITCH.....	3-2
3.3 FIRMWARE UPDATE PROCEDURE .....	3-8
3.4 IFAX RAM ADDRESSES.....	3-9
<b>4. DETAILED SECTION DESCRIPTIONS.....</b>	<b>4-1</b>
4.1 INTERNET FAX.....	4-1
4.1.1 INTERNET FAX FEATURES .....	4-1
4.1.2 DNS SERVICE.....	4-2
4.2 INTERNET MAIL COMMUNICATION.....	4-3
4.2.1 MAIL TRANSMISSION .....	4-3
Procedure.....	4-3
Data Formats .....	4-3
Errors .....	4-3
Results .....	4-4
Selectable Options .....	4-4
Secure Internet Transmission .....	4-5
4.2.2 MAIL RECEPTION.....	4-6
POP3/IMAP4 Mail Reception Procedure.....	4-6
Characteristics of POP3/IMAP4 Reception .....	4-7
SMTP Reception .....	4-7
SMTP Reception Characteristics .....	4-8
Delivery: Transferring Mail Received With SMTP (Off Ramp Gateway) .....	4-9
Overview .....	4-9
Handling Mail Reception Errors.....	4-12
Printing Received Mail .....	4-13
Multi-part Messages.....	4-13
Manual e-mail reception.....	4-13
Secure Internet Reception .....	4-13
4.2.3 MAIL BROADCASTING (E-MAIL AND G3 FAX ARE COMBINED).....	4-14
4.2.4 TRANSFER REQUEST .....	4-15
Operation at the Transfer Requester.....	4-15
Operation at the Transfer Station .....	4-17
4.2.5 AUTOROUTING .....	4-19
4.2.6 TRANSFER BOX.....	4-19



4.3 E-MAIL OPTIONS (SUB TX MODE).....	4-20
4.3.1 SUBJECT AND LEVEL OF IMPORTANCE .....	4-20
How the Subject Differs According to Mail Type .....	4-20
Subjects Displayed on the PC.....	4-20
4.3.2 E-MAIL MESSAGES.....	4-21
4.3.3 MESSAGE DISPOSITION NOTIFICATION (MDN) .....	4-22
Handling Mail .....	4-23
Setting up the Receiving Party .....	4-24
Handling Reports .....	4-24
<b>SPECIFICATIONS.....</b>	<b>SPEC-1</b>
1. IFAX SPECIFICATIONS .....	SPEC-1

---

# 1. INSTALLATION

## 1.1 IFAX INSTALLATION

IFAX requires the installation of the Fax Unit and the Printer/Scanner Controllers. For details about installation, please refer to the main machine and the Fax Unit manuals for the machine.

## 1.2 INITIAL SETTINGS

Users can set the IFAX initial settings. Please refer to the Network Guide Operating Instructions.

Make sure that the following items are registered in the mail server before machine installation.

- IP address
- Host name
- Mail account and the password

**CAUTION:** The initial settings include items related to user security, such as the login password and IP addresses. So, please ask the user to input the initial settings of the IFAX. If the user asks you to input the initial settings, be sure to keep the settings confidential.

To enable IFAX functions, do the following procedure in the User Tools mode:

User Tools > Facsimile Features > E-Mail Settings > Internet Fax Settings

## 2. TROUBLESHOOTING

### 2.1 ERROR CODES FOR LAN COMMUNICATION

If an error code occurs, retry the communication. If the same problem occurs, try to solve the problem as suggested below.

Code	Meaning	Cause	Action
14-00	SMTP Send Error	Error occurred during sending to the SMTP server. Occurs for any error other than 14-01 to 16. For example, the mail address of the system administrator is not registered.	<ul style="list-style-type: none"> <li>Register the address of the system administrator.</li> <li>Set the User Parameter Switch 21 (15[H]) Bit 4 to "Off".</li> </ul>
14-01	SMTP Connection Failed	Failed to connect to the SMTP server (timeout) because the server could not be found. <ul style="list-style-type: none"> <li>The IP address for the SMTP server is not stored in the machine.</li> <li>The DNS IP address is not registered.</li> <li>Network not operating correctly.</li> </ul>	<ul style="list-style-type: none"> <li>Check the IP address of the SMTP/DNS server.</li> <li>Check the traffic on the LAN.</li> <li>Check the machine settings such as the SMTP port setting, DNS server setting, and so on.</li> </ul>
14-02	No Service by SMTP Service (421)	SMTP server operating incorrectly.	Contact the network administrator. Confirm correct SMTP server settings and operation.
14-03	Access to SMTP Server Denied (450)	SMTP server operating incorrectly	Contact the network administrator. Confirm correct SMTP server settings and operation.
14-04	Access to SMTP Server Denied (550)	SMTP server operating incorrectly	Contact the network administrator. Confirm correct SMTP server settings and operation.
14-05	SMTP Server HDD Full (452)	SMTP Server hard disk full.	Contact the network administrator. Free space on the HDD of the SMTP server.
14-06	User Not Found on SMTP Server (551)	The user does not exist locally.	<ul style="list-style-type: none"> <li>Check that the mail address is correct.</li> <li>Contact the network administrator. Check that the e-mail the user intended to send exists on the SMTP server.</li> </ul>
14-07	Data Send to SMTP Server Failed (4XX)	SMTP server operating incorrectly	Contact the network administrator. Confirm correct SMTP server settings and operation.
14-08	Data Send to SMTP Server Failed (5XX)	SMTP server operating incorrectly	Contact the network administrator. Confirm correct SMTP server settings and operation.

Code	Meaning	Cause	Action
14-09	Authorization Failed for Sending to SMTP Server	POP-Before-SMTP or SMTP authorization failed.	POP-Before-SMTP: <ul style="list-style-type: none"> <li>• Check the IFAX user name and password.</li> <li>• Check that POP server is set correctly.</li> <li>• Check the SMTP server settings.</li> </ul> SMTP Authorization: <ul style="list-style-type: none"> <li>• Check the SMTP server user name and password.</li> <li>• Check the encryption settings.</li> <li>• Check the SMTP server settings.</li> </ul>
14-10	Addresses Exceeded	Number of broadcast addresses exceeded the limit for the SMTP server.	The maximum number of addresses depends on the SMTP server.
14-11	Buffer Full	The send buffer is full so the transmission could not be completed. Buffer is full due to using Scan-to-Email while the buffer is being used send mail at the same time.	No action required. The transmission will be recalled and sent as soon as buffer space is available.
14-12	Data Size Too Large	Transmission was cancelled because the detected size of the file was too large.	<ul style="list-style-type: none"> <li>• Divide the original into sections and send as separate files.</li> <li>• Use G3 to send the original.</li> <li>• Reduce the TX mail size.</li> </ul>
14-13	Send Cancelled	Processing is interrupted because the user pressed Stop.	No action required.
14-30	MCS File Creation Failed	Failed to create the MCS file because: <ul style="list-style-type: none"> <li>• The number of files created with other applications on the Document Server has exceeded the limit.</li> <li>• HDD is full or not operating correctly.</li> <li>• Software error.</li> </ul>	<ul style="list-style-type: none"> <li>• Delete unneeded files from the Document Server.</li> <li>• Initialize the HDD.</li> <li>• If initialization fails to correct the problem, replace the HDD.</li> <li>• Update the software.</li> </ul>
14-31	UFS File Creation Failed	UFS file could not be created: <ul style="list-style-type: none"> <li>• Not enough space in UFS area to handle both Scan-to-Email and IFAX transmission.</li> <li>• HDD full or not operating correctly.</li> <li>• Software error.</li> </ul>	No action required. Once the job currently using the UFS area is finished sufficient space will become available. If this does not solve the problem: <ul style="list-style-type: none"> <li>• Initialize the HDD.</li> <li>• If initialization fails to correct the problem, replace the HDD.</li> <li>• Update the software.</li> </ul>
14-32	Cancelled the Mail Due to Error Detected by NFAX	Error detected with NFAX and send was cancelled due to a software error.	Update the software.
14-33	No Mail Address For the Machine	Neither the mail address of the machine nor the mail address of the network administrator is registered.	Contact the network administrator. Check that these e-mail addresses are registered correctly.
14-50	Mail Job Task Error	Due to an FCU mail job task error, the send was cancelled: <ul style="list-style-type: none"> <li>• Address book was being edited during creation of the notification mail.</li> <li>• Software error.</li> </ul>	No action required. If the problem persists, update the firmware.

Code	Meaning	Cause	Action
14-51	UCS Destination Download Error	Not even one return notification can be downloaded: <ul style="list-style-type: none"> <li>The address book was being edited.</li> <li>The number for the specified destination does not exist (it was deleted or edited after the job was created).</li> </ul>	Check the address in the address book.
14-60	Send Cancel Failed	The cancel operation by the user failed to cancel the send operation.	No action required.
14-61	Notification Mail Send Failed for All Destinations	All addresses for return notification mail failed.	<ul style="list-style-type: none"> <li>Correct the mail address for the PC.</li> <li>Contact the network administrator. Check the other error codes to determine if other errors occur at the same time.</li> </ul>
15-01	POP3/IMAP4 Server Not Registered	At startup, the system detected that the IP address of the POP3/IMAP4 server has not been registered in the machine.	Register the name of the POP3/IMAP4 server.
15-02	POP3/IMAP4 Mail Account Information Not Registered	The POP3/IMAP4 mail account has not been registered.	Register the e-mail account, user name, and password.
15-03	Mail Address Not Registered	The mail address has not been registered.	Register the e-mail account and e-mail address.
15-10	DCS Mail Receive Error	Error other than 15-11 to 15-18.	Update the firmware, update the server software.
15-11	Connection Error	The DNS or POP3/IMAP4 server could not be found: <ul style="list-style-type: none"> <li>The IP address for DNS or POP3/IMAP4 server is not stored in the machine.</li> <li>The DNS IP address is not registered.</li> <li>Network not operating correctly.</li> </ul>	<p>Contact the network administrator.</p> <ul style="list-style-type: none"> <li>Check that the DNS address is correct.</li> <li>Check that the POP3/IMAP4 IP addresses are correct.</li> <li>Confirm correct operation of the network.</li> </ul>
15-12	Authorization Error	POP3/IMAP4 send authorization failed: <ul style="list-style-type: none"> <li>Incorrect IFAX user name or password.</li> <li>Access was attempted by another device, such as the PC.</li> <li>POP3/IMAP4 settings incorrect.</li> </ul>	<p>Contact the network administrator:</p> <ul style="list-style-type: none"> <li>Check that the IFAX user name and password are correct.</li> <li>Determine whether another device of the same account attempted access at same time.</li> <li>Check that the POP/IMAP4 settings are correct.</li> </ul>
15-13	Receive Buffer Full	Occurs only during manual reception. Transmission cannot be received due to insufficient buffer space. The buffer is being used for mail send or Scan-to-Email.	No action required. The next transmission can be received as soon as the other application releases the buffer area.
15-14	Mail Header Format Error	The mail header is not standard format. For example, the Date line description is incorrect.	Advise the sender to send e-mails in the standard format.
15-15	Mail Divide Error	The e-mail is not in standard format. There is no boundary between parts of the e-mail, including the header.	Advise the sender to send e-mails in the standard format.

Code	Meaning	Cause	Action
15-16	Mail Size Receive Error	The mail cannot be received because it is too large.	<ul style="list-style-type: none"> <li>• Increase the setting that limits the size of e-mail that can be received (in the User Tools&gt; System Settings&gt; File Transfer menu).</li> <li>• Ask the sender to break the e-mail into smaller parts and send them separately.</li> </ul>
15-17	Receive Timeout	May occur during manual receiving only because the network is not operating correctly.	Contact the network administrator and check that the network is operating correctly.
15-18	Incomplete Mail Received	Only one portion of the mail was received.	Ask the sender to send as one transmission.
15-31	Final Destination for Transfer Request Reception Format Error	The format of the final destination for the transfer request was incorrect.	Ask the sender to check the final destination.
15-39	Send/Delivery Destination Error	The transmission cannot be delivered to the final destination: <ul style="list-style-type: none"> <li>• Destination file format is incorrect.</li> <li>• Could not create the destination for the file transmission.</li> </ul>	<ul style="list-style-type: none"> <li>• Delete the destination file to enable receiving.</li> <li>• Ask the sender to check the transfer destination and final destination.</li> </ul>
15-41	SMTP Receive Error	Reception rejected because the transaction exceeded the limit for the "Auth. E-mail RX" setting.	<ul style="list-style-type: none"> <li>• Check the content of the "From" entry in the mail header.</li> <li>• Check the "Auth. E-mail RX" setting.</li> </ul>
15-42	Off Ramp Gateway Error	The delivery destination address was specified with Off Ramp Gateway OFF.	<ul style="list-style-type: none"> <li>• Enable the Off Ramp Gateway function.</li> <li>• Ask the sender not to specify the Off Ramp Gateway address.</li> </ul>
15-43	Address Format Error	Format error in the address of the Off Ramp Gateway.	Ask the sender to check the mail destination.
15-44	Addresses Over	The number of addresses for the Off Ramp Gateway exceeded the limit of 30.	Ask the sender to check the mail destination.
15-61	Attachment File Format Error	The attached file is not TIFF format.	Try to check the format of the sent mail, then ask the user to use TIFF format.
15-62	TIFF File Compatibility Error	Could not receive transmission due to: <p>Resolution error</p> <ul style="list-style-type: none"> <li>• Image of resolution greater than 200 dpi without extended memory.</li> <li>• Resolution is not supported.</li> </ul> <p>Page size error</p> <ul style="list-style-type: none"> <li>• The page size was larger than A3.</li> </ul> <p>Compression error</p> <ul style="list-style-type: none"> <li>• File was compressed with other than MH, MR, or MMR.</li> </ul>	<p>Ask the sender to check the following:</p> <ul style="list-style-type: none"> <li>• File was sent in TIFF format.</li> <li>• Compatibility of the resolution setting.</li> <li>• Size of the page.</li> <li>• Method used to compress the file.</li> </ul>
15-63	TIFF Parameter Error	The TIFF file sent as the attachment could not be received because the TIFF header is incorrect: <ul style="list-style-type: none"> <li>• The TIFF file attachment is a type not supported.</li> <li>• The TIFF file attachment is corrupted.</li> <li>• Software error.</li> </ul>	<ul style="list-style-type: none"> <li>• Ask the sender to check that the attachment was sent in correct TIFF format.</li> <li>• If the problem persists, update the software.</li> </ul>

Code	Meaning	Cause	Action
15-64	TIFF Decompression Error	The file received as an attachment caused the TIFF decompression error: <ul style="list-style-type: none"> <li>The TIFF format of the attachment is corrupted.</li> <li>Software error.</li> </ul>	<ul style="list-style-type: none"> <li>Ask the sender to check that the attachment was sent in correct TIFF format.</li> <li>If the problem persists, update the software.</li> </ul>
15-71	Not Binary Image Data	The file could not be received because the attachment was not binary image data.	Ask the sender to check the content of the attachment.
15-73	MDN Status Error	Could not find the Disposition line in the header of the Return Receipt, or there is a problem with the firmware.	Ask the sender to resend the mail. If the problem persists, update the firmware.
15-74	MSDN Message ID Error	Could not find the Original Message ID line in the header of the Return Receipt, or there is a problem with the firmware.	Ask the sender to resend the mail. If the problem persists, update the firmware.
15-80	Mail Job Task Read Error	Could not receive the transmission because the destination buffer is full and the destination could not be created (this error may occur when receiving a transfer request or a request for notification of reception).	No action required. When destinations are used and a space opens in the buffer, the transmission will be received.
15-81	Repeated Destination Registration Error	Could not repeat receive the transmission because the destination buffer is full and the destination could not be created (this error may occur when receiving a transfer request or a request for notification of reception).	No action required. When destinations are used and a space opens in the buffer, the transmission will be received.
15-91	Send Registration Error	Could not receive the file for transfer to the final destination: <ul style="list-style-type: none"> <li>The format of the final destination or the transfer destination is incorrect.</li> <li>Destinations are full so the final and transfer destinations could not be created.</li> </ul>	<ul style="list-style-type: none"> <li>As the send to check both the transfer destination and the final destination.</li> <li>When destinations open, the transmission will be received.</li> </ul>
15-92	Memory Overflow	Transmission could not be received because memory overflowed during the transaction.	<ul style="list-style-type: none"> <li>Expand SAF memory.</li> <li>Ask the sender to break up the file and send the parts separately.</li> </ul>
15-93	Memory Access Error	Transaction could not complete due to a malfunction of SAF memory.	Initialize memory. If the problem persists, replace the MBU.
15-94	Incorrect ID Code	The machine rejected an incoming e-mail for transfer request, because the ID code in the incoming e-mail did not match the ID code registered in the machine.	<ul style="list-style-type: none"> <li>Ask the sender to correct the ID code.</li> <li>Set IFAX SW03 Bit 3 to "1".</li> </ul>
15-95	Transfer Station Function	The machine rejected an incoming e-mail for transfer because the transfer function was unavailable.	Inform the transfer requester that this machine does not support the transfer station function.

## 2.2 TROUBLESHOOTING PROCEDURES

Use the following procedures to determine whether the machine or another part of the network is causing the problem.

Communication Route	Item	Action	Remarks
General LAN	1. Connection with the LAN	<ul style="list-style-type: none"> <li>• Check that the LAN cable is connected to the machine.</li> <li>• Check that the LEDs on the hub are lit.</li> </ul>	
	2. LAN activity	<ul style="list-style-type: none"> <li>• Check that other devices connected to the LAN can communicate through the LAN.</li> </ul>	
Between IFAX and PC	1. Network settings on the PC	<ul style="list-style-type: none"> <li>• Check the network settings on the PC.</li> </ul>	<ul style="list-style-type: none"> <li>• Is the IP address registered in the TCP/IP properties in the network setup correct? Check the IP address with the administrator of the network.</li> </ul>
	2. Check that PC can connect with the machine	<ul style="list-style-type: none"> <li>• Use the "ping" command on the PC to contact the machine.</li> </ul>	<ul style="list-style-type: none"> <li>• At the MS-DOS prompt, type ping then the IP address of the machine, then press Enter.</li> </ul>
	3. LAN settings in the machine	<ul style="list-style-type: none"> <li>• Check the LAN parameters</li> <li>• Check if there is an IP address conflict with other PCs.</li> </ul>	<ul style="list-style-type: none"> <li>• Use the "Network" function in the User Tools.</li> <li>• If there is an IP address conflict, inform the administrator.</li> </ul>
Between machine and e-mail server	1. LAN settings in the machine	<ul style="list-style-type: none"> <li>• Check the LAN parameters</li> <li>• Check if there is an IP address conflict with other PCs.</li> </ul>	<ul style="list-style-type: none"> <li>• Use the "Network" function in the User Tools.</li> <li>• If there is an IP address conflict, inform the administrator.</li> </ul>
	2. E-mail account on the server	<ul style="list-style-type: none"> <li>• Make sure that the machine can log into the e-mail server.</li> <li>• Check that the account and password stored in the server are the same as in the machine.</li> </ul>	<ul style="list-style-type: none"> <li>• Ask the administrator to check.</li> </ul>
Between machine and e-mail server	3. E-mail server	<ul style="list-style-type: none"> <li>• Make sure that the client devices which have an account in the server can send/receive e-mail.</li> </ul>	<ul style="list-style-type: none"> <li>• Ask the administrator to check.</li> <li>• Send a test e-mail with the machine's own number as the destination. The machine receives the returned e-mail if the communication is performed successfully.</li> </ul>
Between e-mail server and internet	1. E-mail account on the Server	<ul style="list-style-type: none"> <li>• Make sure that the PC can log into the e-mail server.</li> <li>• Check that the account and password stored in the server are the same as in the machine.</li> </ul>	<ul style="list-style-type: none"> <li>• Ask the administrator to check.</li> </ul>





Communication Route	Item	Action	Remarks
	2. E-mail server	<ul style="list-style-type: none"> <li>• Make sure that the client devices which have an account in the server can send/receive e-mail.</li> </ul>	<ul style="list-style-type: none"> <li>• Ask the administrator to check.</li> <li>• Send a test e-mail with the machine's own number as the destination. The machine receives the returned e-mail if the communication is performed successfully.</li> </ul>
	3. Destination e-mail address	<p>Make sure that the e-mail address is actually used. Check that the e-mail address contains no incorrect characters such as spaces.</p>	
	4. Router settings	<p>Use the "ping" command to contact the router. Check that other devices connected to the router can send data over the router.</p>	<ul style="list-style-type: none"> <li>• Ask the administrator of the server to check.</li> </ul>
Between e-mail server and internet	1. Error message by e-mail from the network of the destination.	<ul style="list-style-type: none"> <li>• Check whether e-mail can be sent to another address on the same network, using the application e-mail software.</li> <li>• Check the error e-mail message.</li> </ul>	<ul style="list-style-type: none"> <li>• Inform the administrator of the LAN.</li> </ul>

Trouble-shooting

---

## 3. SERVICE TABLES AND PROCEDURES

### 3.1 ACCESSING IFAX BIT SWITCHES

1. Ensure that the machine is in standby mode.
2. Press , enter ① ① ⑦ with the 10-key pad, then hold down  for more than 3 seconds. The SP mode main menu opens.
3. Touch "Fax SP" on the touch-panel to enter the fax service mode.
4. Use SP1102 1~16 to set the bit switches for IFAX. For details, refer to the Service Tables on the following pages.

** WARNING**

**Never adjust a bit switched marked "DFU" or "Japan Only," as this may cause the machine to malfunction or to operate in a manner that is not accepted by local regulations. Such bits are for use only in other areas, such as Japan.**

**NOTE:** Default settings for bit switches are not listed in this manual. Refer to the System Parameter List print out.

### 3.2 SP1102 IFAX SWITCH

Only one SP number is used to access IFAX bit switches. These bit switches are described in the tables below.

SP	IFAX SW														
1102 1	00														
	<p><b>Bits 0~6:</b> Original Width of TX Attachment File</p> <p>This setting sets the maximum size of the original that the destination can receive. (Bits 3~7 are reserved for future use or not used.)</p> <p>0: On 1: Off</p> <p><b>Note:</b> If more than one of these three bits is set to "1", the larger size has priority. For example, if both Bit 2 and Bit 1 are set to "1" then the maximum size is "A3" (Bit 2).</p> <table border="1"> <thead> <tr> <th>Bit 6</th> <th>Bit 5</th> <th>Bit 4</th> <th>Bit 3</th> <th>Bit 2</th> <th>Bit 1</th> <th>Bit 0</th> </tr> </thead> <tbody> <tr> <td>Reserved</td> <td>Reserved</td> <td>Reserved</td> <td>Reserved</td> <td>A3</td> <td>B4</td> <td>A4</td> </tr> </tbody> </table> <p>When mail is sent, there is no negotiation with the receiving machine at the destination, so the sending machine cannot make a selection for the receiving capabilities (original width setting) of the receiving machine. The original width selected with this switch is used as the RX machine's original width setting, and the original is reduced to this size before sending. The default is A4.</p> <p><i>If the width selected with this switch is higher than the receiving machine can accept, the machine detects this and this causes an error.</i></p>	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	Reserved	Reserved	Reserved	Reserved	A3	B4	A4
Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0									
Reserved	Reserved	Reserved	Reserved	A3	B4	A4									
	<b>Bit 7:</b> Not Used.														

<b>SP</b>	<b>IFAX SW</b>					
1102 2	01					
<b>Bits 0~ 6: Original Line Resolution of TX Attachment File</b>						
<p>This setting sets the maximum resolution of the original that the destination can receive.</p> <p>0: Not selected 1: Selected</p> <p><b>Note:</b> If more than one of these three bits is set to "1", the higher resolution has priority. For example, if both Bit 3 and Bit 2 are set to "1" then the resolution is set for "Reserve (300 x 300)" (Bit 3).</p>						
<b>Bit 6</b>		<b>Bit 5</b>		<b>Bit 4</b>		<b>Bit 3</b>
Reserved		Reserved		400 x 400 Super Fine		Reserved
				200x400 Fine		200x200 Detail
						200x100 Standard
<p>When mail is sent, there is no negotiation with the receiving machine at the destination, so the sending machine cannot make a selection for the receiving capabilities (resolution setting) of the receiving machine.</p> <p>The resolution selected with this switch is used as the RX machine's resolution setting, and the original resolution is converted before sending.</p> <p>The default is both 200 x 100 and 200 x 200 are selected.</p> <p>If the resolution set with this switch is higher than the receiving fax can accept, the machine detects this and this causes an error.</p> <p><b>Note:</b> The "1" setting requires installation of the Function Upgrade Card in order to have enough SAF (Store and Forward) memory to receive images at 400 x 400 resolution.</p>						
<b>Bit 7: mm/inch</b>						
<p>This setting selects mm/inch conversion for mail transmission.</p> <p>0: Off (No conversion) 1: On (Conversion)</p> <p>When on (set to "1"), the machine converts millimeters to inches for sending mail. There is no switch for converting inches to millimeters.</p> <p><b>Note:</b> Unlike G3 fax transmissions which can negotiate between sender and receiver to determine the setting, mail cannot negotiate between terminals; the mm/inch selection is determined by the sender fax.</p> <p>Only two choices are available for transmission: inch statements and inch images, or inch statements and mm images.</p> <p>When this switch is Off (0):</p> <ul style="list-style-type: none"> <li>• Images scanned in inches are sent in inches.</li> <li>• Images scanned in mm are sent in mm.</li> <li>• Images received in inches are transmitted in inches.</li> <li>• Images received in mm are transmitted in mm.</li> </ul> <p>When this switch is On (1):</p> <ul style="list-style-type: none"> <li>• Images scanned in inches are sent in inches.</li> <li>• <i>Images scanned in mm are converted to inches.</i></li> <li>• <i>Images received in inches are transmitted in inches.</i></li> <li>• <i>Images received in mm are converted to inches.</i></li> </ul>						

Service Tables



SP	IFAX SW
1102 4	03
	<p><b>Bit 0: Original Output at Transfer Station</b></p> <p>This setting determines whether the original is output at the transfer station when it is received from the sender that initiated the transfer transmission. This feature is the same as for G3 transfer transmissions.</p> <p>0: Received original not output at the transfer station.                      1: Received original output. The original is printed after the transfer station has transferred it to the destinations, so its output confirms that the original has been transferred.</p>
	<p><b>Bit 1: Transfer Result Report</b></p> <p>This setting determines when a Transfer Result Report is generated and returned to the transfer requestor.</p> <p>0: Returns the report after each transfer.                      1: Returns the report only if an error occurred during transfer.</p>
	<p><b>Bit 2: Destination Error Handling for Reception Transfer Request</b></p> <p>This setting restricts transfer transmission based on whether the final destinations are correct or not.</p> <p>0: The transfer station transmits to correct destinations only (addresses with no errors in them).                      1: If any address has an error in it, the transfer station transfers no transmissions and returns a transfer transmission failure report to the requestor that initiated the transfer.</p> <p>There is no negotiation between the transfer initiator and the transfer station to determine whether the final destination addresses are correct or not. This setting determines whether or not the transfer station transfers the transmissions if there is a mistake in even one of the final destination addresses.</p>
	<p><b>Bit 3: Polling ID Check for Reception of Transfer Request</b></p> <p>This setting determines whether the polling IDs of incoming transmissions are checked to ensure that the polling IDs match.</p> <p>0: Receives and transfers only messages that have matching polling IDs.                      1: Receives and transfers all messages, even if the polling IDs do not match.</p>
	<p><b>Bits 4~7: Not Used</b></p>

SP	IFAX SW
1102 5	04
	<p><b>Bit 0: Subject for Delivery TX/Memory Transfer</b></p> <p>This setting determines whether the RTI/CSI registered on this machine or the RTI/CSI of the originator is used in the subject lines of transferred documents.</p> <p>0: Puts the RTI/CSI of the originator in the Subject line. If this is used, either the RTI or CSI is used. Only one of these can be received for use in the subject line.                      1: Puts the RTI/CSI registered on this machine in the Subject line.</p> <p>When this switch is used to transfer and deliver mail to a PC, the information in the Subject line that indicates where the transmission originated can be used to determine automatically the destination folder for each e-mail.</p>
	<p><b>Bits 1~7: Not Used</b></p>

SP	IFAX SW
1102 6	05
	<b>Bit 0:</b> Mail Addresses of SMTP Broadcast Recipients
	Determines whether the e-mail addresses of the destinations that receive transmissions broadcasted using SMTP protocol are recorded in the Journal. For example: "1st destination + Total number of destinations: 9" in the Journal indicates a broadcast to 9 destinations. 0: Not recorded 1: Recorded
	<b>Bits 1~7:</b> Not Used

SP	IFAX SW
1102 7	06
	Not Used

SP	IFAX SW
1102 8	07
	Not Used

SP	IFAX SW
1102 9	08
	<b>Bits 0~7:</b> Memory Threshold for POP Mail Reception
	This setting determines the amount of SAF (Store and Forward) memory. (SAF stores fax messages to send later for transmission to more than one location, and also holds incoming messages if they cannot be printed.) When the amount of SAF memory available falls below this setting, mail can no longer be received; received mail is then stored on the mail server. 00-FF (0 to 1024 KB: HEX) <b>Note:</b> The hexadecimal number you enter is multiplied by 4 KB to determine the amount of memory.

SP	IFAX SW
1102 10	09
	<b>Bits 0~3:</b> Not Used
	<b>Bits 4~7:</b> Restrict TX Retries
	This setting determines the number of retries when connection and transmission fails due to errors. 01-F (1-15 Hex)

SP	IFAX SW
1102 11	0A
	Not Used.

SP	IFAX SW
1102 12	0B
	Not Used.

SP	IFAX SW
1102 13	0C
	Not Used.

SP	IFAX SW
1102 14	0D
	Not Used

SP	IFAX SW
1102 15	0E
	Not Used

SP	IFAX SW
1102 16	0F
	<b>Bit 0:</b> Delivery Method for SMTP RX Files This setting determines whether files received with SMTP protocol are delivered or output immediately. 0: Off. Files received via SMTP are output immediately without delivery. 1: On. Files received via SMTP are delivered immediately to their destinations.
	<b>Bits 1~7:</b> Not Used



### **3.3 FIRMWARE UPDATE PROCEDURE**

When you need to update the firmware for IFAX, follow the firmware update procedures described in the main machine Service Manual.

### 3.4 IFAX RAM ADDRESSES

Parameter	Function	Data Format	Address	Comments
Mail Address	Mail address of the fax account.	ASC: 128 bytes	69FEAE	128 x 3 area provided, but only the first is used.
User Name	User name of the fax account.	ASC: 64 bytes	6A002E	64 x 3 area provided, but only the first is used.
Password	Password of the fax account.	ASC: 64 bytes	6A00EE	64 x 3 area provided, but only the first is used.
RX Mail Capacity	---	4 Bytes	6A01AE	64-1024 Kbytes
SMTP RX Permission Address	Address or partial address that is used to limit access to mail delivery (see pg. 4-11, "Auth E-Mail Rx").	ASC: 128 bytes	6A01B2	
Doc. Svr. RX Notification No	Number of RX Notification Mails that have been sent in order to notify receipt of a fax message on the document server.	2 bytes	6A0232	

Service Tables

---

## 4. DETAILED SECTION DESCRIPTIONS

### 4.1 INTERNET FAX

#### 4.1.1 INTERNET FAX FEATURES

The Internet fax produced by Ricoh is also known as IFAX.

An Internet fax converts fax hard copy document data to e-mail format and transmits the data over the Internet. Another IFAX or a PC can receive the e-mail sent by an IFAX. Rather than inputting the telephone number of the destination, the user inputs the applicable e-mail address.

Documents are sent as e-mail messages with an attached TIFF-F image (the scanned original), so a MIME-compatible e-mail reader is required in order to view documents received on a PC. To view an attached image, software capable of displaying TIFF-F formatted images is required.

**NOTE:** The IFAX must be connected to a LAN and set up correctly in order to use its Internet fax functions.

The main IFAX features are:

- TCP/IP communication protocols that support connection to a LAN with e-mail.
- Easy-to-master operations that are identical to those of a standard fax machine.
- Fax transmission and reception over a telephone line.
- Using a browser (such as Netscape or Internet Explorer) to check the settings and status of an IFAX from a PC This uses the Web Status Monitor application built into the machine.
- Transferring or mailing received faxes directly to a PC.
- Using the Internet to reduce communication costs.
- Reducing paper expenses by eliminating the use of paper for fax transmission and reception.
- The IFAX communicates with a server over a LAN (it does not communicate directly with another party).
- If an error occurs, a mail error report is sent back to the sender.

Some minor restrictions of IFAX are:

- If an Internet related error occurs, the sender might not receive an error report.
- The level of security for Internet communications is low. The use of standard subscriber lines is recommended for confidential communication.
- Voice communications are not supported over a LAN.
- Internet fax delivery might be delayed due to network congestion. Use standard fax communication whenever time is a crucial factor.

The following functions are supported with standard fax transmission, but not with Internet faxing.

These functions are not supported by e-mail transmission:

- Immediate Transmission
- Confidential Transmission
- ID Transmission
- Polling Transmission
- Chain Dial
- Transmission by F-Code (SUB) - e-mail protocol cannot specify an F-Code
- On Hook Dial
- Manual Dial
- JBIG Transmission
- Batch Transmission
- ECM (Error Correction Mode)

These functions are not supported by e-mail reception:

- Confidential Reception
- Memory Lock Reception
- Polling Reception
- F-Code (SUB) Reception using Personal Box (e-mail protocol cannot specify an F-Code)
- Preventing nuisance faxes by destination
- Setting Reception Print by Destination

#### **4.1.2 DNS SERVICE**


IFAX supports DNS (Domain Name System). See the Core Technology Manual for more details (Facsimile Processes – Faxing From a PC – Internet/LAN Fax Boards – E-mail Basics).

The IFAX can use the Domain Names for the SMTP and POP3/IMAP4 server instead of the actual IP addresses, if there is a DNS server on the same LAN as the SMTP server, POP3/IMAP4 server, and the IFAX.

With models that do not support DNS, the user has to input the actual IP addresses of the SMTP server and the POP3/IMAP4 server.

## 4.2 INTERNET MAIL COMMUNICATION

### 4.2.1 MAIL TRANSMISSION

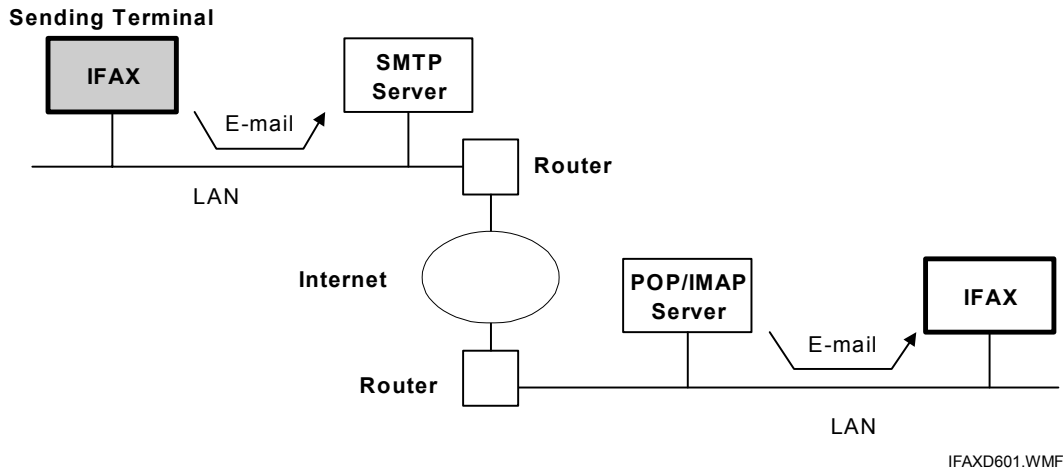

#### Procedure

Scanned documents are sent as electronic mail (e-mail).

All messages are sent using memory transmission.

All e-mail transmissions are controlled using Simple Mail Transfer Protocol (SMTP) procedures. There must be an SMTP server on the same LAN as the sending machine, or the machine will not be able to send e-mail (it is not necessary to set up an SMTP account).

#### Data Formats

The scanned data is converted into a TIFF-F formatted file (only MH compression can be used).

The fields of the e-mail and their contents are as follows:

Field	Content
From	Mail address of the sender
Reply To	Destination requested for reply
To	Mail address of the destination
Bcc	Backup mail address
Subject	From CSI or RTI (Fax Message No. xxxx)
Content Type	Multipart/mixed Attached files: image/tiff
Content Transfer Encoding	Base 64, 7-bit, 8-bit, Quoted Printable
Message Body	MIME-converted TIFF-F (MIME standards specify how files are attached to e-mail messages)

#### Errors

An error report is generated if an error occurs during communication between the machine and the SMTP server. However, it is possible that the sender will not

Detailed Description

receive reports of errors that occurred between the SMTP server and the receiving terminal.

The interval between attempts to resend mail to the same destination when an SMTP error occurs is the same as for G3 fax transmission.

To view what happens when an error occurs when the machine is receiving, refer to the Mail Reception section.

### ***Results***

The transmission result is listed in the Journal. The file list for e-mail transmissions is created in the same way as for G3 memory transmissions. The TTI for the mail message includes the word "Mail" at the head of the information in the TTI column.

### ***Selectable Options***

These options are available for selection:

- With the default settings, the scan resolution can be either standard or detail. Inch-mm conversion before TX depends on IFAX SW01 Bit 7. Detail resolution will be used if Super Fine resolution is selected, unless Fine resolution is enabled with IFAX SW01.
- The requirements for originals (document size, scan width, and memory capacity) are the same as for G3 fax memory tx.
- The default compression is TIFF-F format.
- IFAX SW00: Acceptable paper widths for sending
- IFAX SW09: Maximum number of attempts to the same destination

### ***Secure Internet Transmission***

To transmit e-mail via the Internet more securely, use SMTP authentication, and POP before SMTP for IFAX.

- **SMTP Authentication.** SMTP Authentication requires user authentication before they can access the server. This prevents unauthorized access to the server. To use SMTP authentication, your server must support CRAM-MD5, PLAIN, or LOGIN. The account name and password specified in the “Mail Server” settings are used for SMTP authentication. Other account names and passwords cannot be specified.

To set up SMTP Authentication:


User Tools> System Settings> File Transfer> SMTP Authentication

- **POP Before SMTP.** Prevents unauthorized access to the SMTP server and requires users to access and log onto the POP3 server before sending e-mail.

To set up POP Before SMTP:

User Tools> System Settings> File Transfer> POP Before SMTP

## 4.2.2 MAIL RECEPTION

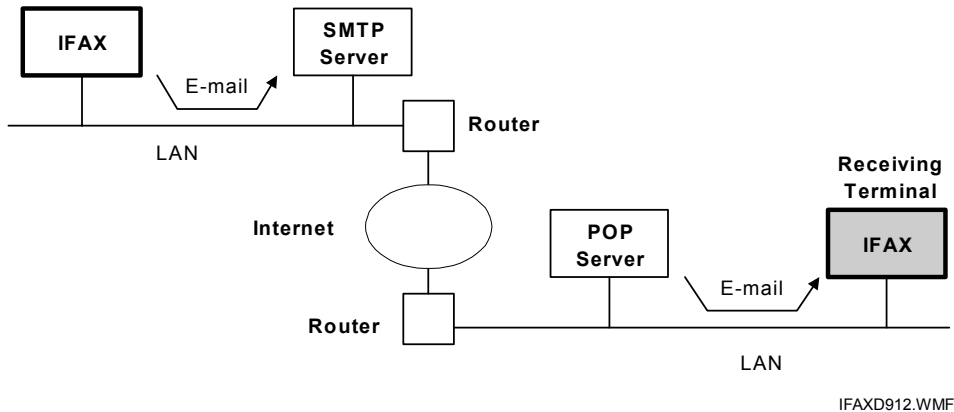

This machine supports three types of e-mail reception:

- POP3 (Post Office Protocol Ver. 3.)
- IMAP4 (Internet Messaging Access Protocol)
- SMTP (Simple Mail Transfer Protocol)

### ***POP3/IMAP4 Mail Reception Procedure***

In order for the fax machine to receive e-mail, 1) there must be a POP3/IMAP4 server on the same LAN as the IFAX, and 2) an account must be set up for the fax machine.

The machine automatically picks up e-mail from the server at an interval which is adjustable in the range 2 to 1440 min. in 1-minute steps:

User Tools> System Settings> File Transfer> E-mail Reception Interval

When the arrival of new e-mail is detected, the IFAX receives the mail.

If the POP3/IMAP4 server is holding several e-mails for the IFAX, the machine picks up the e-mails one at a time, in the order of arrival at the server.

After POP3 has picked up the mail from a POP3 server, it deletes it from the server. IMAP4 also picks up the mail from a server, but it does not delete the mail from the server.

- However, the server setting is given higher priority than the machine setting. E-mail reception conforms to POP3 (Post Office Protocol version 3.0) procedures or IMAP4 (Internet Message Access Protocol).



### ***Characteristics of POP3/IMAP4 Reception***

Here are some general characteristics of POP3/IMAP4 receiving:

- **No MX record registration.** There is no need to register the machine in the MX record of the DNS server.
- **Power can be switched off.** As long as the machine is not receiving mail, mail stored in the mail server is not lost when the power is switched off. With SMTP reception, if the machine is switched off, the SMTP server sends an error report back to the sender, and the machine will not receive the mail unless the sender sends it again after the machine is switched on.
- **Dial-up compliance.** POP3/IMAP4 can be accessed spontaneously, making it ideal for dial-up operation.

### ***SMTP Reception***

#### ***SMTP Mail Reception Procedure***

By registering the IFAX as an SMTP server in the MX record of the DNS server, you can enable direct receiving of mail from the SMTP server.

When mail is sent to the mail address specified for the IFAX, it is received immediately without checking the server for the arrival of new mail (as is done in the POP/IMAP protocol). Also, with SMTP, the received mail can be routed to another fax (this is known as “delivery”).

#### ***Setting Method***

The following settings are required for SMTP receiving:

- The IFAX must be registered as an SMTP server in the MX record of the DNS server, and the address of the received mail must specify the IFAX.
- Enable SMTP reception:

User Tools> System Settings> File Transfer> Reception Protocol

Even if the MX record on the DNS server includes the IFAX, mail cannot be received with SMTP until SMTP reception is enabled:

However, if SMTP reception is selected and the machine is not registered in the MX record of the DNS server, then either IMAP4 or POP3 is used, depending on the setting:

User Tools> System Settings> File Transfer> Reception Protocol

**SMTP Reception Characteristics**

- **Expanded RX mail delivery.** The Off Ramp Gateway feature allows expansion for RX mail delivery to a G3 fax. The machine transfers incoming mail is sent to the G3 fax specified by the local part. For example, in a destination address specified as:

`fax=0454778907@c101.dom1.ricoh.co.jp`


the "local part" is **0454778907**.

- **A POP3/IMAP4 server is not required.** For example, in an environment where there is only a UNIX server or in an intranet environment where Notes is used for mail, mail received from outside is handled via the SMTP gateway.
- **Immediacy of response is slightly better.** There is no interval in the acquisition of mail as with POP3/IMAP4, thus slightly improving the response time.
- **Easier error handling.** When an error occurs with POP3/IMAP4, the receiving terminal sends an error mail back to the sender in order to inform them that an error has occurred. With SMTP mail reception, however, in almost all cases the SMTP server sends the error mail to the sender.

### **Delivery: Transferring Mail Received With SMTP (Off Ramp Gateway) Overview**

If the address of the mail received with SMTP contains the following information, it can be delivered to another G3 fax:

**Fax = " Delivery Number"@IFAX Host Name.Domain"**

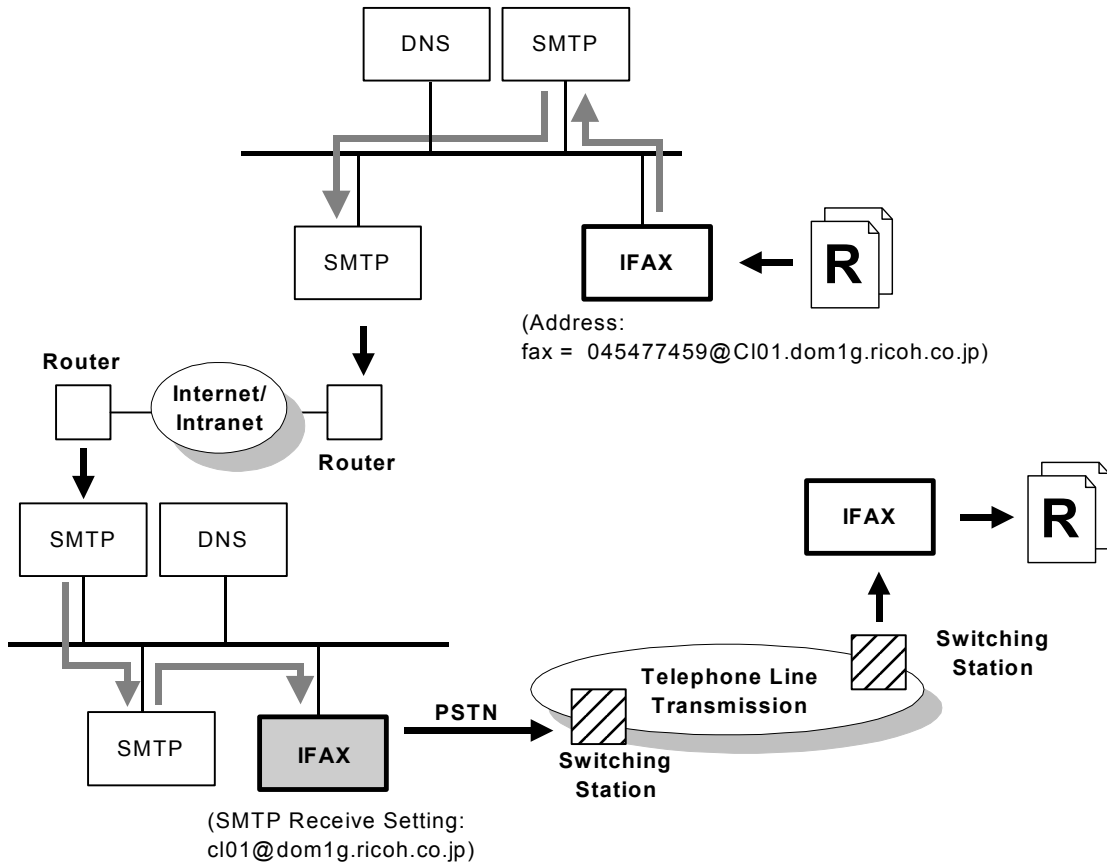

Detailed Description

IFAXD901.WMF

### *How to Set Up Mail Delivery*

The sender must set the mail address in the following format:

1) When dialing using a fax number

**fax=<Delivery Destination Fax Number>@<IFAX Host Name>.<Domain Name>**

Example:

fax=0454771459@cl01.dom1g.ricoh.co.jp → Delivers to fax number 0454771459

2) When dialing using a Quick dial destination

**fax=<# Quick Dial Number>@<IFAX Host Name>.<Domain Name>**

Example:

fax=#001@cl01.dom1g.ricoh.co.jp → Delivers to the number registered for Quick dial key 001.

3) When dialing using a Group dial destination

**fax=<#\*\*Group Dial Number>@<IFAX Host Name>.<Domain Name>**

Example:

fax=#\*\*05@cl01.dom1g.ricoh.co.jp → Delivers to numbers registered for Group dial key 05.

### *Mail Delivery Conditions*

1) The machine must be set up for SMTP mail delivery:

User Tools> Facsimile Features> E-mail Settings> SMTP RX File Delivery Settings

- 2) If the user wishes to limit this feature so that the machine will only deliver mail from designated senders, the machine's "Auth. E-mail RX" feature must be set (User Tools> Facsimile Features> E-mail Settings> SMTP RX File Delivery Settings).
- 3) If the "SMTP RX File Delivery Setting" is set to 0 to prohibit SMTP receiving, and if there is mail designated for delivery, then the machine responds with an error. (User Tools> Facsimile Features> E-mail Settings> SMTP RX File Delivery Settings)
- 4) The "fax=" setting does not distinguish between upper and lower case letters.
- 5) More than one destination cannot be specified in the mail address. A Group counts as 1 destination.
- 6) If the quick dial, speed dial, or group dial entry is incorrect, the mail transmission is lost, and the IFAX issues an error to the SMTP server and outputs an error report.

***Auth. E-mail RX***

In order to limit access to mail delivery with IFAX, the addresses of senders must be limited using the Access Limit Entry. Only one entry can be registered.

## 1) Access Limit Entry

For example, to limit access to @IFAX.ricoh.co.jp:

gts@IFAX.ricoh.co.jp	Matches and is delivered.
gts@IFAX.abcde.co.jp	Does not match and is not delivered.
IFAX@ricoh.co.jp	Does not match and is not delivered.

## 2) Conditions

- The length of the Access Limit Entry is limited to 127 characters.
- If the Access Limit Entry address and the mail address of the incoming mail do not match, the incoming mail is discarded and not delivered, and the SMTP server responds with an error. However, in this case an error report is not output.
- If the Access Limit Entry address is not registered, and if the incoming mail specifies a delivery destination, then the mail is delivered unconditionally.

## ***Handling Mail Reception Errors***

### ***Errors during POP3/IMAP4 procedures***

When an error of this type occurs, the machine stops receiving and the message stays in the server. An error report is output. After a prescribed interval, the machine calls the server and starts to receive, starting with the interrupted message. If there is an incomplete received message in memory, it will be erased.

### ***Abnormal files***

When an error of this type occurs, the machine stops receiving and commands the server to erase the message. Then the machine prints an error report and sends information about the error by e-mail to the sender address (specified in the "From" or "Reply-to" field of the message). If there is an incomplete received message in the machine memory, it will be erased.

The machine prints an error message when it fails to send the receive error notification after a certain number of attempts.

The following types of files are judged to be abnormal if one or more of the following are detected:

1. Unsupported MIME headers.

Supported types of MIME header

<b>Header</b>	<b>Supported Types</b>
Content-Type	Multipart/mixed, text/plain, message/rfc822 Image/tiff
Charset	US-ASCII, ISO 8859 X. Other types cannot be handled, and some garbage may appear in the data.
Content-Transfer-Encoding	Base 64, 7-bit, 8-bit, Quoted Printable

2. MIME decoding errors
3. File format not recognized as TIFF-F format
4. Resolution, document size, or compression type cannot be accepted

### ***Remaining SAF capacity error***

The machine calls the server but does not receive e-mail if the remaining SAF capacity is less than a certain value (the value depends on IFAX Switch 08. The e-mail will be received when the SAF capacity increases (for example, after substitute reception files have been printed). The error handling method for this type of error is the same as for "Abnormal files".

If the capacity of the SAF memory drops to zero during reception, the machine operates in the same way as when receiving an abnormal file (refer to "Abnormal files" above).

### ***Printing Received Mail***

To print received e-mail:

- The machine detects whether it has received a TIFF-F format image, then prints it.
- Text in US ASCII or ISO 8859 X format can also be printed. When a line of text is longer than the paper width, the excess data will be truncated and lost.

### ***Multi-part Messages***

When a multi-part e-mail message contains several text parts and binary files, the message will be divided by boundaries, and each portion will be printed separately. If the machine cannot determine where the boundary is, it will print an error report, and then send error information e-mail back to the sender.

### ***Manual e-mail reception***

The manual e-mail reception function can be stored in a Quick Operation Key. When the key is pressed, the machine calls the POP3/IMAP4 server immediately.

The timer for automatic e-mail reception is not reset when the machine calls the POP3/IMAP4 server manually.

Here is an example of the sequence

1. Automatic e-mail reception interval: 30 minutes.
2. The machine calls the POP3 server (automatic e-mail reception)
3. 10 minutes later, the user calls the POP3 server (manual e-mail reception)
4. The machine will call the POP3 server again automatically after 20 minutes.

### ***Secure Internet Reception***


**APOP:** Passwords are encrypted when e-mail is received, making it safer than POP3 authentication (clear text), which is not encrypted. APOP requires a POP server that supports APOP.

**IMAP-AUTH (Mail Reception):** If the IMAP Server supports the AUTHENTICATE command (CRAM-MD5, PLAIN, or LOGIN confirmation), then higher-level security confirmation can be implemented for users logging in.

To enable password encryption and higher level security:

User Tools> System Settings> File Transfer> POP3/IMAP4 Settings> Encryption (set to "On")

### 4.2.3 MAIL BROADCASTING (E-MAIL AND G3 FAX ARE COMBINED)

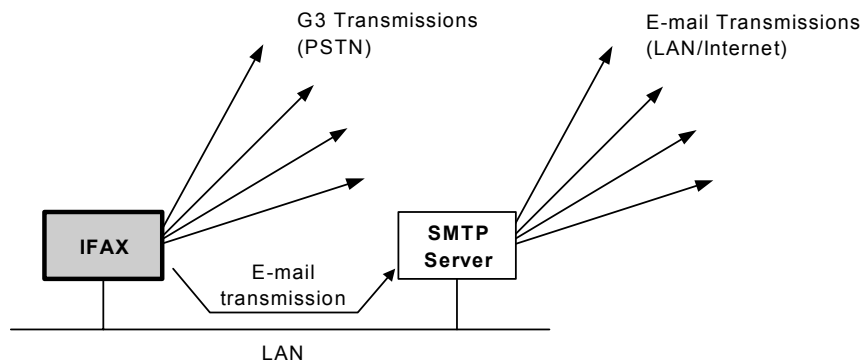

IFAXD913.WMF

The machine can send the same message to several destinations in one operation. Some destinations can be G3 faxes and others can be e-mail. For the G3 fax transmissions, each address has to be dialed separately. However, all e-mail addresses can be sent with the message to the SMTP server in one transmission. The SMTP server then sends the message to each destination.

The following example for broadcasting to three e-mail destinations and two G3 fax destinations shows how G3 fax messages are each sent individually. However, the e-mail destinations are all sent to the server at the same time.

- Order of inputting the addresses at the operation panel  
G3 fax (1) - mail (1) - G3 fax (2) - mail (2) - mail (3)
- Order of transmission  
G3 fax (1) - mail (1), (2), (3) - G3 fax (2)

The SMTP server cannot broadcast the message if the message contents included individual information for each terminal in the transmitted data (such as a label insertion). If this type of feature is used, the machine sends the e-mails to the server one by one.


With the default settings, up to 500 destinations (including both e-mail and G3 fax) can be dialed for one broadcast. The maximum number of e-mail destinations in a broadcast depends on the limitations of the mail server.



## 4.2.4 TRANSFER REQUEST

### *Operation at the Transfer Requester*

#### *Request by Mail*

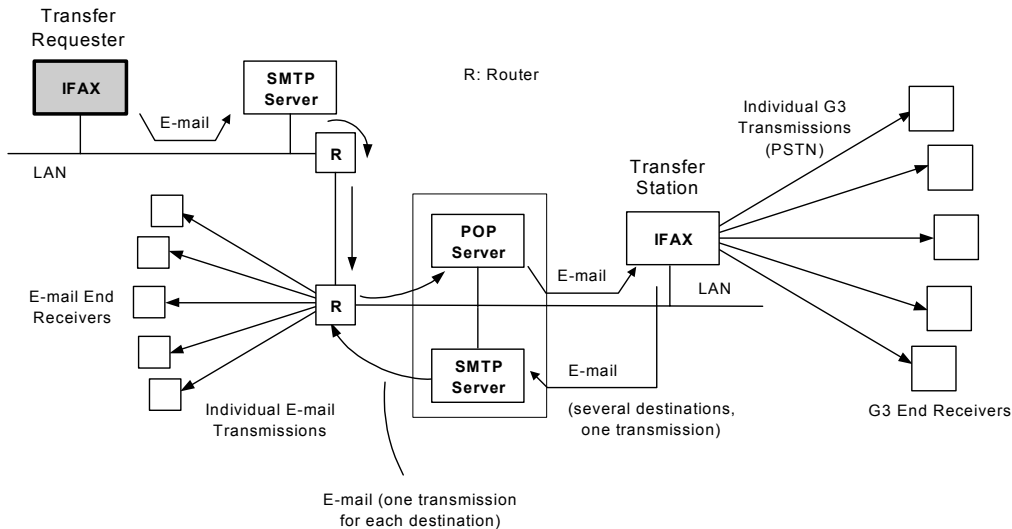

IFAXD914.WMF

Detailed  
Description

The requesting terminal dials the Transfer Station, and requests it to transfer the message to end receivers stored as quick dials, speed dials, and group dials in the Transfer Station.

- A quick dial number is indicated by a “#” and 1 to 5 digits.
- A group dial is indicated by “#\*\*” and 1 to 5 digits.

The machine can request transfer to a maximum of 30 end receivers for each Transfer Station. The end receivers can be a mixture of e-mail and G3 fax addresses.

The transfer request goes to the SMTP server as an e-mail message. The dialing codes (Quick, Speed, Group) and the ID code are included in the mail body field of the e-mail as text. The message arrives at the POP3/IMAP4 server of the Transfer Station.


The Transfer Station sends the message to the end receivers.

The Transfer Station sends back a transfer result report. The original may be attached to the transfer result report, depending on the G3 settings of the fax machine. For transmissions to e-mail end receivers, the transfer result report only indicates whether the message was successfully transmitted from the Transfer Station to its SMTP server.

The fields of the e-mail and their contents are as follows:

Field	Content
From	E-mail address of the requesting terminal
To	Destination address (Transfer Station address)
Bcc	Backup mail address
Subject	From TSI (Fax Message No. xxxx)
Content-Type	Multipart/mixed Text/Plain (for a text part), image/tiff (for attached files)
Content-Transfer-Encoding	Base 64, 7-Bit, 8-bit, Quoted Printable
Mail body (text part)	RELAY-ID-: xxxx (xxxx: 4 digits for an ID code) RELAY: #01#*X#**01....
Message body	MIME-converted TIFF-F.

**Request by G3 Fax**

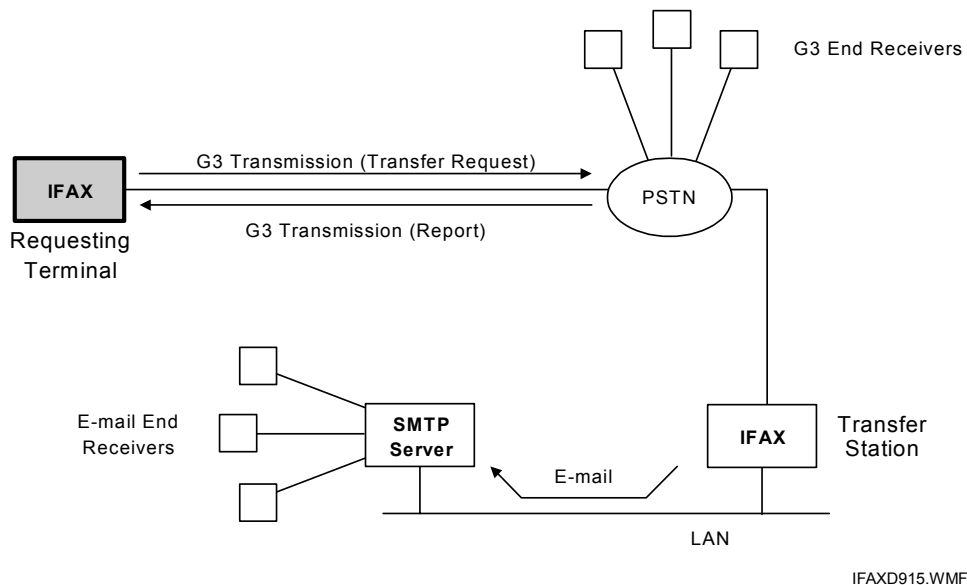

The procedures are the same as for a normal G3 fax machine.

The requesting terminal dials the Transfer Station, and requests it to transfer the message to end receivers stored as quick dials, speed dials, and group dials in the Transfer Station.


The machine uses NSF to send an ID code and the machine telephone number. Up to 30 end receivers can be requested.

End receiver destinations can also be selected using tone signals, in the same way as for other recent fax models. An e-mail address can also be selected in this way, as end receivers and as the destinations for receiving the transfer result report.

The receiving IFAX machine receives the transfer request on the PSTN connection. It then handles the transfer request in the same way as explained in "Request by Mail".

## Operation at the Transfer Station

### Request by Mail

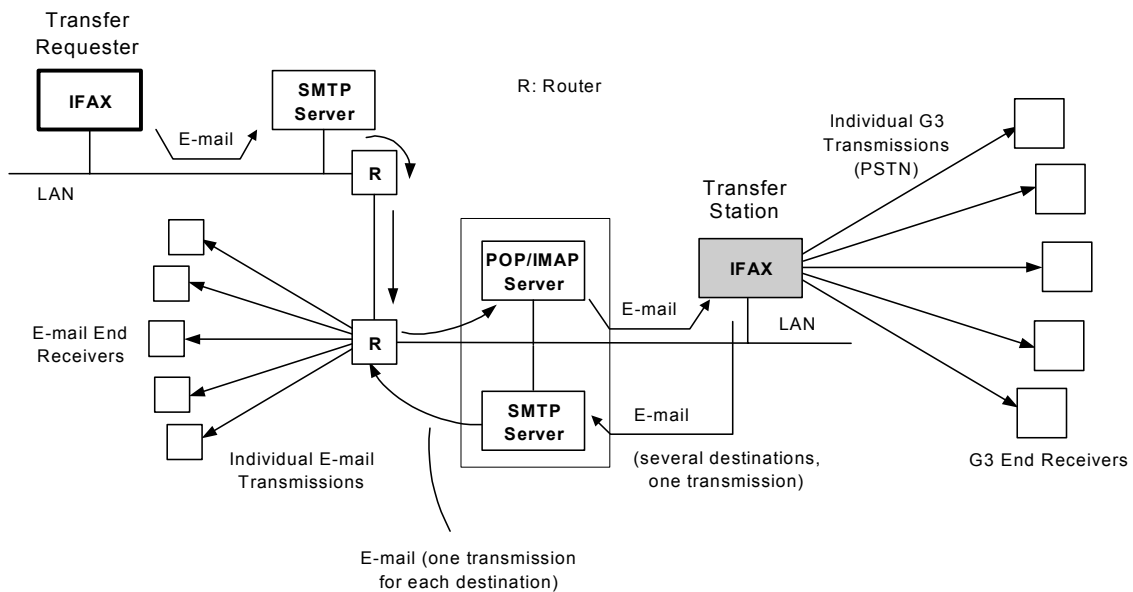

IFAXD605.WMF

Detailed  
Description


The IFAX polls the POP3/IMAP4 server at regular intervals. If a transfer request has come in, it receives the e-mail from the server, then sends the message to the end receivers by G3 fax or e-mail, depending on the type of end receiver address.

The IFAX sends each G3 fax as an individual transmission. However, for the e-mail, the IFAX sends the message to the SMTP server once, and the server broadcasts the message to the e-mail end receivers one at a time.

The Transfer Station sends back a transfer result report to the address in the "From" field of the received e-mail. If an administrator address is registered, the result report is also sent to that address. The original may also be attached to the transfer result report, depending on the G3 settings of the fax machine.

For transmission to e-mail end receivers, the transfer result report only indicates whether the message was successfully transmitted from the Transfer Station to its SMTP server. The Transfer Station does not know what happens to the messages on the way to the end receivers.

If a communication error occurs between the machine and the SMTP server during result report transmission, the machine prints the result report.

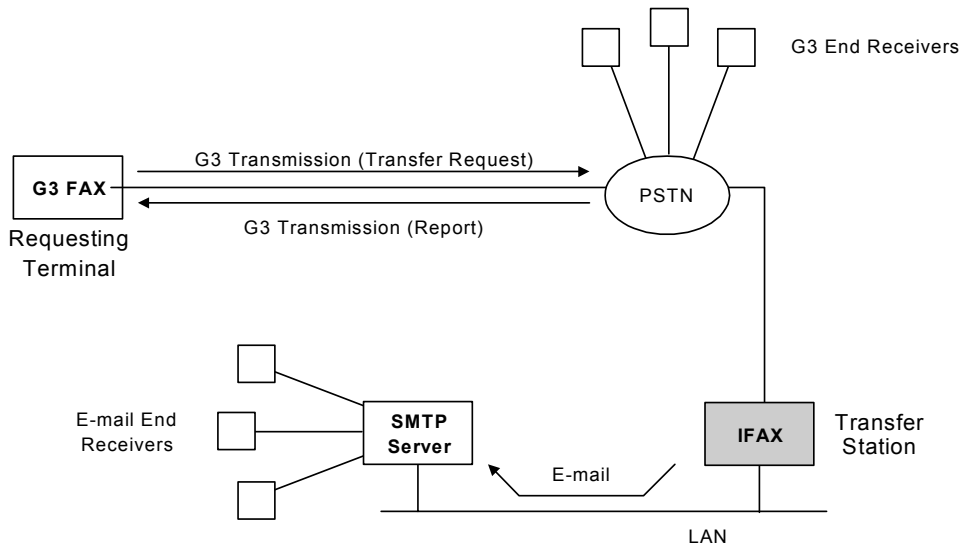*Request by Fax*


IFAXD916.WMF

When the machine receives a transfer request by G3 fax, it sends the message to the e-mail and G3 end receivers in the same way as for a request by mail.

The machine sends back the transfer result report to the telephone number of the requesting terminal, which it specified in the NSF signal. The machine prints the result report if it cannot be sent.

The IFAX can accept end receiver destinations and transfer result report destinations that were sent from the requester as DTMF tones. This applies to e-mail or PSTN G3 addresses.

### 4.2.5 AUTOROUTING

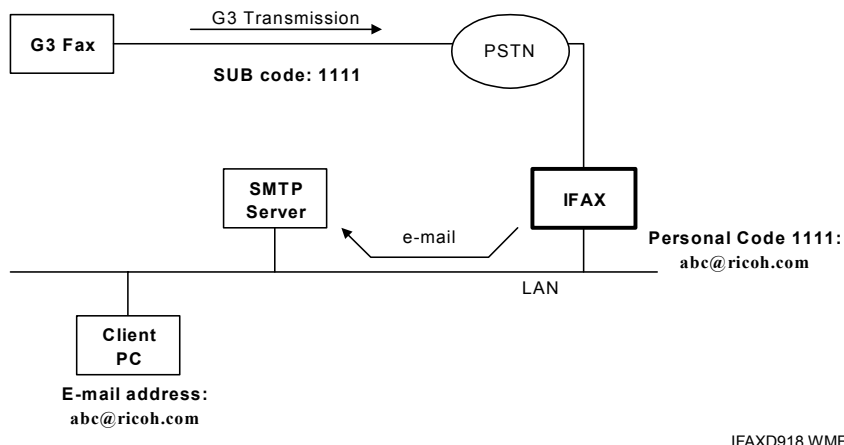

When a G3 fax message is received with a SUB code (max. 20 digits), the machine compares this SUB code with the Personal Box SUB codes stored in the machine with e-mail addresses. If there is a match, the machine routes the message to that e-mail address by e-mail.

There can be only one destination. If there is no destination attached to the SUB code of the personal box, the incoming message is kept in the fax machine's SAF memory.

A communication failure report will be printed if a transmission error occurs between the machine and the SMTP server.

The RTI or CSI of the forwarding machine is indicated in the subject field of the forwarded e-mail. The format is "From RTI (or CSI) (Fax Message No.xxxx)".

### 4.2.6 TRANSFER BOX

When a G3 fax message is received with a SUB code, the machine compares this SUB code with the Transfer Box SUB codes stored in the machine with e-mail addresses. If there is a match, the machine uses e-mail to transfer the message to the e-mail addresses specified in the Transfer Box.

Up to 5 destinations, including both e-mail and G3 fax addresses, can be stored in one Transfer Box. There must be at least one destination.

Detailed Description

### 4.3 E-MAIL OPTIONS (SUB TX MODE)

The following features are available as options for mail sending: entering a subject, designating the level of importance, confirming reception of the mail.

#### 4.3.1 SUBJECT AND LEVEL OF IMPORTANCE

You can enter a subject message with: Sub TX Mode> E-mail Options

The Subject entry for the mail being sent is limited to 64 characters. The subject can also be prefixed with an "Urgent" or "High" notation.

***How the Subject Differs According to Mail Type***

Mail Type	①	②		③
Subject Entry	---	Entry Condition		Fax Message No. + File No.
No Subject Entry		1. "CSI" ("RTI")		
		2. "RTI"	CSI not registered	
		3. "CSI"	RTI not registered	
		4. None	CSI, RTI not registered	
Confirmation of Reception	From	1. "CSI" ("RTI")		Normal: Return Receipt (dispatched). You can select "displayed" with IFAX SW02 Bits 2 and 3.
		2. "RTI"	CSI not registered	
		3. "CSI"	RTI not registered	Error: Return Receipt (processed/error)
		4. None	CSI, RTI not registered	
Mail delivery, memory transfer, SMTP receiving and delivery	From	RTI or CSI of the station designated for delivery	Mail delivery	Fax Message No. + File Number
		RTI or CSI of sender	Mail sending from G3 memory	
		Mail address of sender	Memory sending	
		Mail address of sender	SMTP receiving and delivery (Off Ramp Gateway)	
Mail error notification	---	Error Message No. xxxx From CSI (RTI)		

Items ① ② ③ of the table above are in the Subject.

***Subjects Displayed on the PC***

Sender	Date	Size	Subject
Substation 2	04/25/2002	1,513	Parts List
Substation 2	04/26/2002	1,147	Specifications
Main Station	05/09/2002	33,551	[Urgent] Memo 2041
		21,624,288	

### 4.3.2 E-MAIL MESSAGES

After entering the subject, you can enter a message with:

Sub TX Mode> E-mail Options

An e-mail message (up to 5 lines) can be pre-registered with:

User Tools> System Settings> File Transfer> Program/Change/Delete E-mail Message

#### Limitations on Entries

Item	Maximum
Number of Lines	5 lines
Line Length	80 characters
Name Length	20 characters


### 4.3.3 MESSAGE DISPOSITION NOTIFICATION (MDN)

The network system administrator can confirm whether a sent mail has been received correctly or not. This confirmation is done in four steps.

1. Send request for confirmation of mail reception. To enable or disable this request (known as MDN):  
Sub TX Mode> E-mail Options
2. Mail reception (receive confirmation request)
3. Send confirmation of mail reception
4. Receive confirmation of mail reception


The other party's machine will not respond to the request unless the two conditions below are met:

- The other party's machine must be set up to respond to the confirmation request.
- The other party's machine must support MDN (Message Disposition Notification).

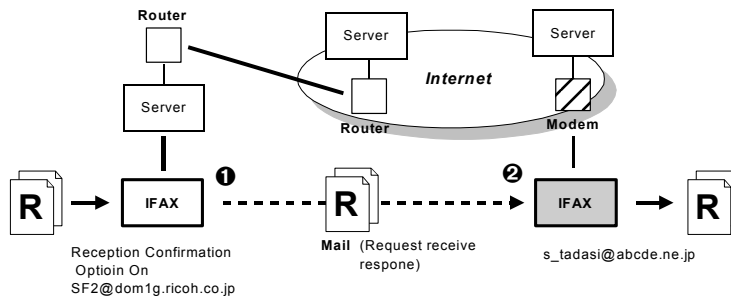

1 \*\*\* JOURNAL \*\*\*

Time	ADDRESS	Mode	Time	PAGE	RESULT
10:17AM	s_tadasi@abcde.ne.jp	MailSMQ	0'09"	2	--

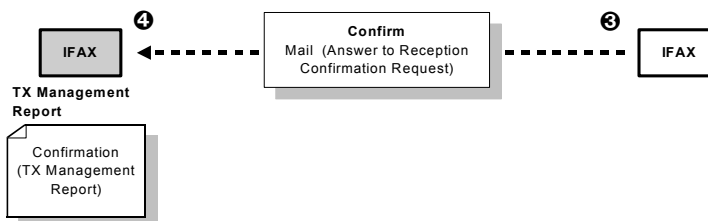

3 \*\*\* JOURNAL \*\*\*

Time	ADDRESS	Mode	Time	PAGE	RESULT
10:18AM	SF2@dom1g.ricoh	MailSMA	0'09"	2	--

4 \*\*\* JOURNAL \*\*\*

Time	ADDRESS	Mode	Time	PAGE	RESULT
10:17AM	s_tadasi@abcde.ne.jp	MailSMQ	0'09"	2	OK

IFAXD920.WMF



## Handling Mail

### Handling Mail on the Send Side

When mail is sent, a “Disposition Notification To” notation is included in the header as a request for confirmation that the mail was received.

```

X-Mozilla Status      : 0001
X-Mozilla Status2     : 00000000
Message-ID            : <3A23379A.81BE0ABD@domlg.ricoh.co.jp>
Disposition-Notification-To : T.Suzuki <s_tadashi@domlg.ricoh.co.jp>
Date                  : Tue, 28 Nov 2000 13:4203 +0900
From                  : T.Suzuki <s_tadashi@domlg.ricoh.co.jp>
X-Mailer              : Mozilla 4.73 [ja]C-CCK-MCD BDP jm-Sony 3
                       (Win95: U)
X-Accept-Language    : ja
MIME-Version          : 1.0
To                    : fuser_01@domlg.ricoh.co.jp
Subject               : Mail Request for Reception Confirmation
Content-Type          : text/plain: charset=iso-2022-jp
Content-Transfer-Encoding : 7bit

```

Detailed  
Description

### Handling Mail on the Receive Side

```

Return Path: <>
Received           : From fuser_01 ([133.139.157.20]) by domlg.ricoh.co.jp (post
office MTA V1.9.3 ID# 0100110-37392) with SMTP id AAA163
for<S_tadasi@domlg.ricoh.co.jp>
Date               : 28 Nov 2000 13:4236 +0900
X-Mailer          : ICFAX Version 1.0
MIME-Version      : 1.0
Content-Type      : multipart/report: report-type=disposition-notification:
boundary="--ICFAX_000000EF48--"
To                : T.Suzuki <s_tadashi@domlg.ricoh.co.jp>
Message-ID        : <20001128133423664.ICFAX-XFC9BE-X26986@133.139.157.20>
From              : fuser_01@domlg.ricoh.co.jp
Subject           : From @81454771459" ("RICOH GTS) Return Receipt (dispatched)
X-Mozilla-status  : 8001
X-Mozilla-Status2 : 00000000
X-UIDL           : 20001128044713447.AAA163@fuser_01

This is a Return Receipt for the mail that you sent to "fuser_01@domlg.ricoh.co.jp"
Final Receipt: rfc822:fuser_01#domlg.ricoh.co.jp
Original Message ID: <3A23379A.81BE0ABD@domlg.ricoh.co.jp>
Disposition: automatic action/MDN-send-automatically: dispatched      Respond Mail Text

```

### ***Setting up the Receiving Party***

The receiving party will respond to the confirmation request if:

- 1) The "Disposition Notification To" field is in the received mail header (automatically inserted in the 4th line in the upper table on the previous page, if MDN is enabled), and
- 2) Sending the disposition notification must be enabled (User Parameter Setting SW21 (15 [H]) Bit 1 for this model). The content of the response is as follows:

Normal reception:	"Return Receipt (dispatched)" in the Subject line
IFAX SW02 (Bit 2, 3)	"Return Receipt (displayed)" in the Subject line
Error:	"Return Receipt (processed/error)" in the Subject line

### ***Handling Reports***

#### 1. Sending a Request for a Return Receipt by Mail

After the mail sender transmits a request for a return receipt, the mail sender's journal is annotated with two hyphens (--) in the Result column and a "Q" in the Mode column.

#### 2. Mail Receipt (Request for Receipt Confirmation) and Sending Mail Receipt Response

After the mail receiver sends a response to the request for a return receipt, the mail receiver's journal is annotated with two hyphens (--) in the Result column and an "A" in the Mode column.

#### 3. Receiving the Return Receipt Mail

- After the mail sender receives a return receipt, the information in the mail sender's journal about the receipt request is replaced, i.e. the journal is annotated with "OK" in the Result column.
- When the return receipt reports an error, the journal is annotated with an "E" in the Result column.
- The arrival of the return receipt is not recorded in the journal as a separate communication. Its arrival is only reported by the presence of "OK" or "E" in the Result column.
- If the mail address used by the sender specifies a mailing list (i.e., a Group destination; the machine sends the mail to more than one location. See "How to set up Mail Delivery"), the Result column of the Journal is updated every time a return receipt is received. For example, if the mailing list was to 5 destinations, the Result column indicates the result of the communication with the 5<sup>th</sup> destination only. The results of the communications to the first 4 destinations are not shown.

Exceptions:

If one of the communications had an error, the Result column will indicate E, even if subsequent communications were OK.

If two of the communications had an error, the Journal will indicate the destination for the first error only.

**Report Sample**

DATE	TIME	ADDRESS	MODE	TIME	PAGE	RESULT
MAY. 5	10:15	fuser_01@domlg. ricoh. co.	Mail SM	0'09"	2	--
	10:16	fuser_01@domlg. ricoh. co.	Mail SMQ	0'05"	1	--
	10:17	s_tadashi@domlg. ricoh. co.	Mail SMQ	0'09"	2	OK
	10:19	m_masataka@domlg. ricoh. co.	Mail SMA	0'05"	1	--

IFAXD921.WMF

**Detailed  
Description**

---

# SPECIFICATIONS

## 1. IFAX SPECIFICATIONS

### Type

Fax Unit and Printer/Scanner Unit

### Connectivity

Local area network  
Ethernet 100base-Tx/10base-T

### Connection

100base-Tx/10base-T direct connection

### Resolution

**Main scan:** 200 dpi  
**Sub scan:** 400 dpi, 200 dpi, 100 dpi

**NOTE:** To use 400 dpi, IFAX SW01 Bit 4 must be set to "1".

### Transmission Time

1 s (through a LAN to the server)  
Condition: ITU-T #1 test document  
(Selerexe Letter)  
MTF correction: OFF  
TTI: None  
Resolution: 200 x 100 dpi  
Communication speed: 10 Mbps  
Correspondent device: E-mail server  
Line conditions: No terminal access

### Document Size

Maximum message width is A4/LT.  
**Note:** To use B4 and A3 width, IFAX SW00 Bit 1 (B4) and/or Bit 2 (A3) must be set to "1".

### E-mail File Format

Single/multi-part  
MIME conversion  
Image: TIFF-F (MH) format only

### Protocol

(Supported by TCP/IP protocol)

#### Transmission:

IETF RFC821 SMTP procedure

#### Reception:

IETF RFC1725 POP3 procedure  
IETF RFC2026 IMAP4 procedure

### Data rate

100 Mbps(100base-Tx)  
10 Mbps (10base-T)

### Remark

The machine must be set up as an e-mail client before installation. Any client PCs connected to the machine through a LAN must also be e-mail clients, or some features will not work (e.g. Autorouting).