



Network Interface Board Type 450-E (Option)



Quick Configuration Guide



Read this manual carefully before you use this product and keep it handy for future reference.

For safety, please follow the instructions in this manual.

Introduction

To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

Please read the Safety Information in the "Copy Reference" before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.

Important

Parts of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Trademarks

NetWare® is a registered trademark of Novell, Incorporated. Windows® is a registered trademark of Microsoft Corporation in the United States and/or other countries.

Macintosh® is a registered trademark of Apple Computer, Incorporated.

All other products referenced are trademarks or registered trademarks of their respective companies.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights in those marks.

Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Note

The name of the applications do not appear in the following pages. Confirm which applications you will be using before reading this manual.

Descriptions in this manual	Application
PRINTER MANAGER FOR ADMINISTRATOR	Aficio Manager for Admin
PRINTER MANAGER FOR CLIENT	Aficio Manager for Client

Notes:

Some illustrations might be slightly different from your machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

How to Read This Manual

Symbols

In this manual, the following symbols are used:

Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Note

This symbol indicates precautions for operation, or actions to take after misoperation.

Reference

This symbol indicates a reference.

[]

Keys that appear on the machine's panel display.

Keys and buttons that appear on the computer's display.

【 】

Keys built into the machine's operation panel.

Keys on the computer's keyboard.

Manuals for This Machine

There are seven manuals that separately describe the procedures for the installation of a machine and for the operation and maintenance of the machine and its optional equipment.

To enhance safe and efficient operation of the machine, all users should read and follow the instructions contained in the following manuals.

❖ **System Settings**

Describes the procedures and functions for adjusting the settings and defaults of this machine for the copier.

❖ **Copy Reference**

Describes the procedures and functions for using this machine as a copier.

❖ **Printer Reference 1**

Describes the system settings, procedures and functions for using this machine as a printer.

❖ **Printer Reference 2**

Describes the procedures and provides necessary information about using this machine as a printer. The manual is included as a PDF file on the CD-ROM labeled "Printer Drivers and Utilities".

❖ **Network Interface Board Quick Configuration Guide**

Describes the procedures and provides necessary information about setting up and using the printer under the network environment. The manual is included as a PDF file on the CD-ROM labeled "Printer Drivers and Utilities". (This Manual)

Read this manual as your first choice before referring to the paper version of the Quick Configuration Guide which comes with optional Network Interface Board Type 450-E.

❖ **PostScript 3 Operating Instructions Supplement**

Describes the menus and features you can set using the PostScript printer driver. The manual is included as a PDF file on the CD-ROM labeled "Printer Drivers and Utilities".

❖ **Network Interface Board Type 450-E Owner's Manual**

Describes the procedures and provides necessary information about setting up and using the printer under the network environment. The manual is provided as a PDF file which is included on the CD-ROM labeled "Print Server Software and Documentation" which comes with optional Network Interface Board Type 450-E.

TABLE OF CONTENTS

1. Getting Ready for Software Installation

Configuration Programs	1
Installing the NIB Setup Tool.....	3
Installing PRINTER MANAGER FOR ADMINISTRATOR.....	3
Running the NIB Setup Tool	4

2. Windows 95/98 Configuration

Windows 95/98 Configuration	5
Using PortNavi.....	6
Installing PortNavi	6
Setting Up the Printer Driver	7
Using IP Peer-to-Peer.....	9
Installing IP Peer-to-Peer	9
Selecting the Printer Port	11
Deleting the Port	11
Using IPX Peer-to-Peer	13
Installing IPX Peer-to-Peer.....	13
Selecting the Printer Port	14

3. Windows NT 4.0 Configuration

Windows NT 4.0 Configuration	17
Using PortNavi.....	18
Installing PortNavi	18
Setting Up the Printer Driver	20
Using IP Peer-to-Peer.....	22
Installing IP Peer-to-Peer	22
Selecting the Printer Port	24
Deleting the Port	24
Setting Up LPR Printing.....	25

4. Dynamic Host Configuration Protocol(DHCP)

Dynamic Host Configuration Protocol (DHCP).....	27
--	-----------

5. NetWare Configuration

Quick Setup Using the NIB Setup Tool Wizard.....	29
NetWare 3.x - Advanced Settings	32
Setting Up as a Print Server.....	32

NetWare 4.x, 5 - Advanced Settings	35
Setting Up as a Print Server.....	35
Setting Up a Client Computer.....	39
Windows 95/98.....	39
Windows NT 4.0.....	40

6. Macintosh Configuration

Configuring a Macintosh	41
Changing to EtherTalk	41
Changing the Printer Name.....	41

7. UNIX Configuration

UNIX Configuration	43
Setting the IP Address	43
Setting Other TCP/IP Parameters.....	44
INDEX.....	46

1. Getting Ready for Software Installation

Support programs for the installation and configuration of Network Interface Board are included on two CD-ROMs. One is "Printer Drivers and Utilities" which comes with this printer and the other is "Print Server Software and Documentation" which comes with optional Network Interface Board.

You can select any of the programs listed in the Configuration Programs.

Configuration Programs

The CD-ROM named "Printer Drivers and Utilities" includes the following utilities.

❖ PortNavi

IP Peer-to-Peer printing software

PortNavi is a utility that helps you to use network printers effectively. It is useful in environments where two or more network printers are used. It is recommended that you install PortNavi to use Parallel Printing and Recovery Printing. For more information about PortNavi, see Help of PortNavi.

Note

Parallel Printing and Recovery Printing are not available when you print without using the PCL6/5e printer driver.

• PortNavi Features

Allow you to send a print job directly to the network printers without using a print server.

- Equally divide the number of copies to be printed among the selected printers in the printer group (Parallel Printing).

Important

The following settings must be the same for the specified printer and the printers selected for Parallel Printing.

- Printers are the exact same model.
 - Installed options (e.g. Paper Tray)
 - Size and orientation of paper in each paper tray
 - Total memory
 - Installed fonts (including the downloaded fonts)
- Allow you to print documents using other printers in the printer group when the specified printer is busy (Recovery Printing).

Important

The following settings must be the same for the specified printer and the printers selected for Recovery Printing.

- Printers are the exact same model.
- Installed options (e.g. Paper Tray)

- Size and orientation of paper in each paper tray
- Total memory
- Installed fonts (including the downloaded fonts)

❖ **PRINTER MANAGER FOR ADMINISTRATOR**

A utility for the system administrator to manage printers on the network.

Reference

For the name of PRINTER MANAGER FOR ADMINISTRATOR, see inside the front cover of this manual.

See PRINTER MANAGER FOR ADMINISTRATOR Online Help for more information about using PRINTER MANAGER FOR ADMINISTRATOR.

❖ **PRINTER MANAGER FOR CLIENT**

A utility for users to manage their own print status on the network.

Reference

For the name of PRINTER MANAGER FOR CLIENT, see inside the front cover of this manual.

See PRINTER MANAGER FOR CLIENT Online Help for more information about using PRINTER MANAGER FOR CLIENT.

The CD-ROM named "Print Server Software and Documentation" includes the following utilities.

❖ **MAP**

Web-based configuration utility

❖ **IPX Peer-to-Peer**

IPX Peer-to-Peer printing software

❖ **IP Peer-to-Peer**

IP Peer-to-Peer printing software

❖ **BootP Lite**

Used to configure the IP parameters of Network Interface Board

❖ **NWSetup**

NetWare Print Service Configuration

The five utilities are included on the "Print Server Software and Documentation" CD-ROM, but you need this CD-ROM only if you use "IPX Peer-to-Peer" or "IP Peer-to-Peer" printing.

Although you can use the "MAP", "BootP Lite", or "NWSetup" utilities on the "Print Server Software and Documentation" CD-ROM, it is easier to use the NIB Setup Tool included on the "Printer Drivers and Utilities" CD-ROM.

To use "MAP", "BootP Lite", or "NWSetup" from the "Print Server Software and Documentation" CD-ROM, see the "Owner's Manual" (Type 450-E Manual) on the CD-ROM labeled "Print Server Software and Documentation" for instructions.

Installing the NIB Setup Tool

A utility called NIB Setup Tool is provided to configure the printer to work in a network environment. This section describes how to install PRINTER MANAGER FOR ADMINISTRATOR, and how to run the NIB Setup Tool.

Limitation

- The NIB Setup Tool is supported to work with the following operating systems.
 - Microsoft Windows 95/98
 - Microsoft Windows NT 4.0

Installing PRINTER MANAGER FOR ADMINISTRATOR

Follow these steps to install PRINTER MANAGER FOR ADMINISTRATOR.

Preparation

You should install PRINTER MANAGER FOR ADMINISTRATOR on the computer. If you install PRINTER MANAGER FOR ADMINISTRATOR from a file server or run it via the network, PRINTER MANAGER FOR ADMINISTRATOR might not work correctly.

Be sure to close all applications before starting the installation procedure.

- 1** Close all the applications that are currently running.
- 2** Insert the CD-ROM labeled "Printer Drivers and Utilities" into the CD-ROM drive.

If the setup menu starts automatically, follow the instructions on the screen. If not, go to step **3**.
- 3** Open [Control Panel], and double-click the [Add/Remove Programs] icon.
- 4** In the [Install/Uninstall] tab, click [Install].
- 5** Click [Next >].
- 6** In the [command line for installation program] box, type the name of the CD-ROM drive followed by "PRINTMAN\ADMIN\SETUP.EXE" (do not include the quotation marks) and then click [Finish].

Note

- An example would be "D:\PRINTMAN\ADMIN\SETUP.EXE" when the CD-ROM drive name is "D".
- 7** From the [Choose Setup Language] pop-up menu, select the language you want to use.

8 In the **[Welcome]** dialog box, click **[Next >]**.

9 The **Software License Agreement** appears.

After reading through all of the contents by clicking **[PageDown]**, click **[Yes]** to agree with the License Agreement.

10 Select a folder to install **PRINTER MANAGER FOR ADMINISTRATOR** in, and then click **[Next >]**.

If you want to change the displayed folder, click **[Browse]** to select another one.

The installation program starts.

When a confirmation dialog box appears, the installation program is complete.

Running the NIB Setup Tool

1 Click **[Start]**, point to **[Programs]**, and then click **[NIB Setup Tool]** in the **[PRINTER MANAGER FOR ADMINISTRATOR]** program folder.

.....

 **Status page**

The status page of Network Interface Board will be automatically printed in the following cases:

- when the printer is turned on.
- when Network Interface Board is reset.

This feature can be disabled with NIB Setup Tool.

To disable this feature, check **[Property Sheet]** in the “NIB Setup Tool” screen, click **[Detailed...]** in the **[General]** tab and remove the check from the box for **[Print configuration page on startup]**.

.....

2. Windows 95/98 Configuration

Windows 95/98 Configuration

This section describes how to configure Peer-to-Peer printing. The Peer-to-peer printing software that is included on the CD-ROM labeled "Printer Drivers and Utilities" which contains PortNavi or "Print Server Software and Documentation" allows Windows 95/98 PCs to communicate directly with network attached printers. A network server, such as NetWare or Windows NT, is not required for Peer-to-peer printing.

There are three types of Peer-to-peer printing. You can select "PortNavi", "IP Peer-to-Peer" and "IPX Peer-to-Peer" according to your network environment.

The Peer-to-peer printing software must be installed on each PC that uses Peer-to-peer printing. Once Peer-to-peer printing software is installed, all Network Interface Boards on the network automatically appear in the list of available printer ports.

The Peer-to-peer printing software can also be used in networks where servers are present; however, server based print services are often utilized instead. Server based print services offer centralized printing management and spooling and do not require software (other than the printer driver) to be installed on each PC.

If you use the printer in a network where servers are present, select either Peer-to-peer printing or the server based print service.

Reference

For more information about setting IP parameters, see "*Configuring the Printer for the Network with the Operation Panel*" in "Printer Reference 1".

Using PortNavi

Important

- To use PortNavi, you must install PRINTER MANAGER FOR CLIENT and use the TCP/IP protocol. For the name of PRINTER MANAGER FOR CLIENT you use, see the inside the front cover of this manual.

2

Installing PortNavi

Follow these instructions to install PortNavi.

- 1** Configure the IP parameters on Network Interface Board using the operation panel.

Reference

For more information about setting IP parameters, see “Configuring the printer for the Network with the Operation Panel” in “Printer Reference 1”.

- 2** Insert the CD-ROM labeled “Printer Drivers and Utilities” into the CD-ROM drive.

Note

- If the installer starts automatically, use it to install PortNavi, and then go to step **6**.

- 3** Open [Control Panel], and double-click the [Add/Remove Programs] icon.

- 4** In the [Install/Uninstall] tab, click [Install].

- 5** Click [Next >].

- 6** Type the name of the CD-ROM drive in the [Command line for installation program] box, followed by “:\NETWORK\PORTNAVI\DISK1\SETUP.EXE” (do not include the quotation marks), and then click [Finish].

Note

- An example would be “D:\NETWORK\PORTNAVI\DISK1\SETUP.EXE” when the drive letter is “D”.

- 7** After the [Welcome] dialog box appears, click [Next >].

- 8** If PRINTER MANAGER FOR CLIENT is not installed, the [Question] dialog box appears. When this occurs, click [No] and install PRINTER MANAGER FOR CLIENT. If PRINTER MANAGER FOR CLIENT is installed, click [Yes].

- 9** Click [Yes].

The [Question] dialog box appears.

10 If you want to read “Readme File”, click [Yes].

11 After the [Setup Complete] dialog box appears, click [Yes, I want to restart my computer now.], and click [Finish].

The computer restarts, and PortNavi can now be used. If you select “No”, be sure to restart the computer manually before launching PortNavi for the first time.

Deleting the Port

The following procedure allows you to delete the printer port. If you want to delete the port which is currently used in Windows, switch the port to another such as "FILE", then delete it. For more information about PortNavi, see Help of PortNavi.

1 From the [Printers] window, click to select the icon of the printer which uses PortNavi to print, and then click [Properties] in the [File] menu.

2 Click the [Details] tab and confirm that the PortNavi port is shown in the [Print to the following port] box.

Remember the port name because this port should be deleted later.

3 From the drop-down menu in the [Print to the following port] box, select [FILE].

4 Click [Apply].

The port which is currently in use is changed.

5 Click [Delete Port].

6 Click to select the PortNavi port name as confirmed in step **2**, then click [OK].

The port is deleted.

7 Click [OK] to close the printer properties.

Setting Up the Printer Driver

The following procedure allows you to configure the printer port to use PortNavi with Windows 95/98.

Important

If you want to switch the IP Peer-to-Peer port to the PortNavi port for printing, delete or rename the IP Peer-to-Peer port before adding the PortNavi port.

1 Install the printer driver you want to use.

2 From the [Printers] window, click to select the installed printer icon, and then click [Properties] in the [File] menu.

3 Click the [Details] tab and click [Add Port].

4 Click [Other], click to select [PortNavi] from the list and then click [OK].

The [Select Printer] dialog box appears.

The displayed items are as follows:

Model Name: The Model Name of the printer.

Name: The name of Network Interface Board.

Comment: Additional information about Network Interface Board.

Address: The IP address of the printer.

5 Click to select the model name of the printer, and then click [OK].

If you want to select a printer which is not shown here, click [IP Address] to type the IP address.

6 Confirm that the PortNavi port name is shown in the [Print to the following port] box, and click [OK].

The PortNavi port name is shown as "IP address@model name".

The configuration is now complete.

When printing, select the configured printer here and print as usual. Printing will be done automatically by PortNavi.

Accessing the Port Settings Dialog Box

This section describes accessing the Port Settings dialog box to enable Parallel Printing and Recovery Printing.

Reference

For more information about the procedures for Parallel Printing and Recovery Printing, see Help of PortNavi.

1 Click [Start] on the taskbar, point to [Settings], and click [Printers].

2 Click the icon of the printer you want to use. On the [File] menu, click [Properties].

3 Select the [Details] tab and click [Port Settings].

The PortNavi settings dialog box appears.

Using IP Peer-to-Peer

Important

- The TCP/IP protocol is required for IP Peer-to-Peer printing. Confirm that the TCP/IP protocol is installed, if not, install it before starting the following procedure.

Installing IP Peer-to-Peer

Follow these steps to install IP Peer-to-Peer.

Important

- Confirm that the printer power is turned on before starting the following procedure.
- If you want to switch the PortNavi port to the IP Peer-to-Peerport for printing, delete or rename the PortNavi port before adding the IP Peer-to-Peerport.

- 1** **Configure the IP parameters on Network Interface Board using the operation panel.**

Reference

For more information about setting IP parameters, see “*Configuring the printer for the Network with the Operation Panel*” in “Printer Reference 1”.

- 2** **Insert the CD-ROM labeled “Print Server Software and Documentation” into the CD-ROM drive.**

The main screen appears.

Note

- If Adobe Acrobat Reader is not installed, click **[Install Adobe Acrobat Reader 3.0]**.

- 3** **Click [CD ROM Contents].**

The “Introduction” page appears.

- 4** **Click [Installation/Configuration Programs].**

The “Configuration Programs” page appears.

- 5** **Click [Windows 95/98 & NT 4.x IP Peer-to-Peer Printing].**

The “Windows 95/98 and NT 4.x IP Peer-to-Peer Printing” page appears.

This page describes the functions of this utility.

- 6** **At the bottom of the page, click the blue word [here] to begin installing.**

A dialog box appears asking if the “Setup.exe” program should be started.

7 Click **[Yes]**.

The **[Welcome]** dialog box appears.

8 Click **[Next]**.

The **[Installation Notes]** dialog box appears.

9 Click **[Yes]**.

The **[Choose Destination Directory]** dialog box appears.

10 Click **[Browse]** to set a different folder.

The default installation folder is C:\PROGRAM FILES\IP-P2P.

11 Click **[Next]**.

The **[Select Program Folder]** dialog box appears.

This allows you to set the name of the folder that contains the shortcut links inside the Program Folder.

12 Type the name that you wish to see in “Program Folder:” and click **[Next]**.

The files are then copied to the computer in the specified directories.

The **[Information]** dialog box appears.

13 Click **[OK]** to complete the installation. **Reference**

For more information about installing IP Peer-to-Peer, see the “Owner's Manual” (Type 450–E Manual) on the CD-ROM labeled “Print Server Software and Documentation”.

**For manual installation**

Follow these steps to install the software on your operating system (Windows 95/98).

- ① Insert the CD-ROM into the CD-ROM drive.
- ② Close all the applications that are currently running.
- ③ Click **[Start]** on the task bar, and click **[Run]**.
- ④ Type <Drive>:\IP-P2P\SETUP.EXE (where <Drive> is your CD-ROM drive name).
- ⑤ Click **[OK]**.
The **[Welcome]** dialog box appears.

The remaining steps are identical to **6-11** in the preceding procedure. ⇒ P.7 “Setting Up the Printer Driver”

Selecting the Printer Port

The Peer-to-peer printing software should be installed on each Windows 95/98 PC that will use Peer-to-peer printing services.

1 Install the printer driver you want to use.

If the printer drivers have already been installed, you can go to the next step.

 **Reference**

For more information about the printer drivers, see *“Installing the PCL 6/5e Printer Driver”* or *“Installing the PostScript Printer Driver”* in “Printer Reference 1”.

2 Click [Start] on the taskbar, point to [Settings], and then click [Printers].

The [Printers] window appears.

3 Click the icon of the printer you want to set for Peer-to-peer printing.

4 On the [File] menu, click [Properties].

The Printer Properties appear.

5 Click the [Details] tab.

6 From the [Print to the following port:] list box, select the port of the printer you want to use for Peer-to-peer printing.

- Select the IP address of the printer. If you do not find the IP address of the printer, the printer is not in your local subnet. Then you need to configure IP Peer-to-Peer port manually as described in the “Owner's Manual” (Type 450–E Manual) on the CD-ROM labeled “Print Server Software and Documentation”.

7 Click [OK].

Deleting the Port

The following procedure allows you to delete the printer port. If you want to delete the port which is currently used in Windows, switch the port to another such as “FILE”, then delete it. For more information about IP Peer-to-Peer, see the “Owner's manual” (Type 450–E Manual).

1 Click [Start] on the taskbar, point to [Programs], and then click [IP-P2P].

The [IP-Peer to Peer Setup] window appears.

2 Click [Printers...].

3 Click [Find Printers].

Available printers appear.

- 4** Click to select the port you want to delete from “Unit Name” list.
- 5** Click [Delete].

Using IPX Peer-to-Peer

Important

- The IPX protocol is required for IPX Peer-to-Peer printing. Confirm that the IPX protocol is installed, if not, install it before starting the following procedure.

Installing IPX Peer-to-Peer

Follow these steps to install IPX Peer-to-Peer.

- 1** Insert the CD-ROM labeled “Print Server Software and Documentation” into the CD-ROM drive.

The main screen appears.

Note

- If Adobe Acrobat Reader is not installed, click **[Install Adobe Acrobat Reader 3.0]**.

- 2** Click **[CD ROM Contents]**.

The “Introduction” page appears.

- 3** Click **[Installation/Configuration Programs]**.

The “Configuration Programs” page appears.

- 4** Click **[Windows 95/98 & NT 4.x IPX Peer-to-Peer Printing]**.

The “Windows 95/98 and NT 4.x IPX Peer-to-Peer Printing” page appears.

This page describes the functions of this utility.

- 5** At the bottom of the page, click the blue word **[here]** to begin installing.

A dialog box appears asking if the “Setup.exe” program should be started.

- 6** Click **[Yes]**.

The **[Welcome]** dialog box appears.

- 7** Click **[Next]**.

The **[Installation Notes]** dialog box appears.

- 8** Click **[Yes]**.

The files are then copied to the computer in the specified directories.

The **[Installation Complete]** dialog box appears.

- 9** Click **[Finish]** to complete the installation.

 **For manual installation**

Follow these steps to install the software on your operating system (Windows 95/98).

- ① Insert the CD-ROM into the CD-ROM drive.
- ② Close all the applications that are currently running.
- ③ Click **[Start]** on the taskbar, and click **[Run]**.
- ④ Type <Drive>:\IPX-P2P\SETUP.EXE (where <Drive> is your CD-ROM drive name).
- ⑤ Click **[OK]**.
The **[Welcome]** dialog box appears.

The remaining steps are identical to **6** - **8** in the preceding procedure. ⇒ P.13 “Installing IPX Peer-to-Peer”

Selecting the Printer Port

The Peer-to-peer printing software should be installed on each Windows 95/98 PC that will use Peer-to-peer printing services.

1 Install the printer driver you want to use.

If the printer drivers have already been installed, you can go to the next step.

Important

- Using IPX Peer-to-Peer printing, confirm that the printer power is turned on before continuing the following steps.

Reference

For more information about the printer drivers, see “Installing the PCL 6/5e Printer Driver” or “Installing the PostScript Printer Driver” in “Printer Reference 1”.

2 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

3 Click the icon of the printer you want to set for the Peer-to-peer printing.

4 On the **[File]** menu, click **[Properties]**.

The Printer Properties appear.

5 Click the **[Details]** tab.

6 From the [Print to the following port:] list box, select the port of the printer you want to use for Peer-to-peer printing.

- Select the printer name. The printer name is shown in "Peer-to-Peer Connection Information" on the network configuration page. The default setting of the printer name is "RDP_" followed by the six digit serial number.

7 Click [OK].

3. Windows NT 4.0 Configuration

Windows NT 4.0 Configuration

There are several options for setting up printing in a Windows NT environment.

- If a NetWare server is present, NetWare print services might be used by following the NetWare Configuration instructions in this guide.
- Peer-to-peer print services can be available by using "PortNavi" or "IP Peer-to-Peer".
- LPR print services can be used via TCP/IP by following the instructions in this section.

Windows NT printing is very flexible. It is possible to configure the individual Windows NT or Windows 95/98 workstations to print using a different protocol from the Windows NT server. For example, a Windows NT server could be configured to print to Network Interface Board via TCP/IP using the instructions in this section. Network Interface Board could then be designated as shared on the NT server, allowing workstations to print via the NT server using a different protocol (such as NetBEUI).

The optimum Windows NT printing configuration depends on the particular environment and user as well as administrator experience and preferences. Generally, LPR printing over TCP/IP covered in the following instructions is the best choice for environments where TCP/IP is already in use.

Using PortNavi

Important

- To use PortNavi, you must install PRINTER MANAGER FOR CLIENT and use the TCP/IP protocol. For the name of PRINTER MANAGER FOR CLIENT you use, see the inside of the front cover of this manual.

Installing PortNavi

3

Follow these instructions to install PortNavi.

- 1** Configure the IP parameters on Network Interface Board using the operation panel.

Reference

For more information about setting IP parameters, see “Configuring the printer for the Network with the Operation Panel” in “Printer Reference 1”.

- 2** Insert the CD-ROM labeled “Printer Drivers and Utilities” into the CD-ROM drive.

Note

- If the installer starts automatically, use it to install PortNavi, and then go to step **6**.

- 3** Open [Control Panel], and double-click the [Add/Remove Programs] icon.

- 4** In the [Install/Uninstall] tab, click [Install].

- 5** Click [Next >].

- 6** Type the name of the CD-ROM drive in the [Command line for installation program] box, followed by “:\NETWORK\PORTNAVI\DISK1\SETUP.EXE” (do not include the quotation marks), and then click [Finish].

Note

- An example would be “D:\NETWORK\PORTNAVI\DISK1\SETUP.EXE” when the drive letter is “D”.

- 7** After the [Welcome] dialog box appears, click [Next >].

- 8** If PRINTER MANAGER FOR CLIENT is not installed, the [Question] dialog box appears. When this occurs, click [No] and install PRINTER MANAGER FOR CLIENT. If PRINTER MANAGER FOR CLIENT is installed, click [Yes].

- 9** Click [Yes].

The [Question] dialog box appears.

- 10** If you want to read “Readme File”, click **[Yes]**.
- 11** After the **[Setup Complete]** dialog box appears, click **[Yes, I want to restart my computer now.]**, and click **[Finish]**.

The computer restarts, and PortNavi can now be used. If you select “No”, be sure to restart the computer manually before launching PortNavi for the first time.

Deleting the Port

The following procedure allows you to delete the printer port. If you want to delete the port which is currently used in Windows, switch the port to another such as "FILE", then delete it. For more information about PortNavi, see Help of PortNavi.

- 1** From the **[Printers]** window, click to select the icon of the printer which uses the PortNavi port to print, then click **[Properties]** in the **[File]** menu.
- 2** Click to select the **[Ports]** tab, then confirm that the PortNavi port is shown in the **[Print to the following port(s)]** box and that the check box is selected.

Remember the port name because this port should be deleted later.
- 3** Click to select the **[FILE]** check box in the **[Port]** column.
- 4** Click **[OK]** to close the Printer Properties.

The port which is currently in use is changed.
- 5** Open the Printer Properties of the same printer.
- 6** Click to select the **[Ports]** tab.
- 7** At the **[Port]** column in the **[Print to the following port(s)]** dialog box, click to select the PortNavi port name as confirmed in step **2**.

Do not select the check box.
- 8** Click **[Delete Port]**.
- 9** When the confirmation message appears, click **[Yes]**.

The port is deleted.
- 10** Click **[OK]** to close the Printer Properties.

Setting Up the Printer Driver

The following procedure allows you to configure the printer port to use PortNavi with Windows NT 4.0.

Important

- If you want to switch the IP Peer-to-Peer port to the PortNaviport for printing, delete or rename the IP Peer-to-Peer port before adding the PortNavi port.

3

- 1** Install the printer driver you want to use.
- 2** From the [Printers] window, click to select the installed printer icon then click [Properties] in the [File] menu.
- 3** Click to select the [Ports] tab and then click [Add Port].
- 4** Click to select [PortNavi] in the [Available Printer Ports] box, and then click [New Port].

The [Select Printer] dialog box appears and printers on the network are browsed.

The displayed items are as follows:

Model Name: The model name of the printer.

Name: The name of Network Interface Board.

Comment: Additional information about Network Interface Board.

Address: The IP address of the printer.

- 5** Click to select the model name of the printer, and then click [OK].
If you want to select a printer which is not shown here, click [IP Address] to type the IP address.
- 6** Click [Close] in the [Printer Ports] dialog box.
- 7** Confirm that the name of the PortNavi port is shown in the [Print to the following port(s)] dialog box and its check box is selected, and then click [OK].
The name of the PortNavi port is shown as "IP address@model name".
The configuration is now complete.
When printing, select the configured printer and print as usual. Printing will be done automatically by PortNavi.

Accessing the Port Settings Dialog Box

This section describes accessing the Port Settings dialog box to enable Parallel Printing and Recovery Printing.

Reference

For more information about the procedures for Parallel Printing and Recovery Printing, see Help of PortNavi.

- 1** Click **[Start]** on the taskbar, point to **[Settings]**, and click **[Printers]**.
- 2** Click the icon of the printer you want to use. On the **[File]** menu, click **[Properties]**.
- 3** Select the **[Ports]** tab and click **[Configure Port]**.

The PortNavi settings dialog box appears.

Using IP Peer-to-Peer

Important

- The TCP/IP protocol is required for IP Peer-to-Peer printing. Confirm that the TCP/IP protocol is installed, if not, install it before starting the following procedure.

Installing IP Peer-to-Peer

3

Follow these steps to install IP Peer-to-Peer.

Important

- Confirm that the printer power is turned on before starting the following procedure.

- 1** Configure the IP parameters on Network Interface Board using the operation panel.

Reference

For more information about setting IP parameters, see “Configuring the printer for the Network with the Operation Panel” in “Printer Reference 1”.

- 2** Insert the CD-ROM labeled “Print Server Software and Documentation” into the CD-ROM drive.

The main screen appears.

Note

- If Adobe Acrobat Reader is not installed, click **[Install Adobe Acrobat Reader 3.0]**.

- 3** Click **[CD ROM Contents]**.

The “Introduction” page appears.

- 4** Click **[Installation/Configuration Programs]**.

The “Configuration Programs” page appears.

- 5** Click **[Windows 95/98 & NT 4.x IP Peer-to-Peer Printing]**.

The “Windows 95/98 and NT 4.x IP Peer-to-Peer Printing” page appears.

This screen describes the functions of this utility.

- 6** At the bottom of the page, click the blue word **[here]** to begin installing.

A dialog box appears asking if the “Setup.exe” program should be started.

- 7** Click **[Yes]**.

The **[Welcome]** dialog box appears.

8 Click **[Next]**.

The **[Installation Notes]** dialog box appears.

9 Click **[Yes]**.

The **[Choose Destination Directory]** dialog box appears.

10 Click **[Browse]** to set a different folder.

The default installation folder is C:\PROGRAM FILES\IP-P2P.

11 Click **[Next]**.

The **[Select Program Folder]** dialog box appears.

This allows you to set the name of the folder that contains the shortcut links inside the Program Folder.

12 Type the name that you want to see in the Program Folder and click **[Next]**.

The files are then copied to the computer in the specified directories.

The **[Information]** dialog box appears.

13 Click **[OK]** to complete the installation.
 **For manual installation**

Follow these steps to install the software on your operating system (Windows NT 4.0).

- ① Insert the CD-ROM into the CD-ROM drive.
- ② Close all the applications that are currently running.
- ③ Click **[Start]** on the taskbar, and click **[Run]**.
- ④ Type <Drive>:\IP-P2P\SETUP.EXE (where <Drive> is your CD-ROM drive name).
- ⑤ Click **[OK]**.
The **[Welcome]** dialog box appears.

The remaining steps are identical to **8-11** in the preceding procedure. ⇒ P.22 "Installing IP Peer-to-Peer"



Selecting the Printer Port

The IP Peer-to-Peer printing software should be installed on each Windows NT 4.0 PC that uses Peer-to-peer printing services.

Important

- The IP Peer-to-Peer printing software must be installed before selecting the printer port.
- If you want to switch the PortNavi port to the IP Peer-to-Peer port for printing, delete or rename the PortNavi port before adding the IP Peer-to-Peer port.

1 Close all the applications that are currently running.

2 Insert the CD-ROM labeled "Printer Drivers and Utilities" into the CD-ROM drive.

If the setup menu starts automatically, you can go to the next step. If not, see "Installing the PCL 6/5e Printer Driver" in "Printer Reference 1" to start the installation and then go to the next step.

3 The [Printer Installation] dialog box appears.

4 From the [Port] list, select the IP address of the printer you want to set up, and click [Next >].

5 Follow the instructions on the screen to finish the installation of the printer driver.

Deleting the Port

The following procedure allows you to delete the printer port. If you want to delete the port which is currently used in Windows, switch the port to another such as "FILE", then delete it. For more information about IP Peer-to-Peer, see the "Owner's manual" (Type 450-E Manual).

1 Click [Start] on the taskbar, point to [Programs], and then click [IP-P2P].

The [IP-Peer to Peer Setup] window appears.

2 Click [Printers...].

3 Click [Find Printers].

Available printers appear.

4 Click to select the port you want to delete from "Unit Name" list.

5 Click [Delete].

Setting Up LPR Printing

Follow these steps to set up LPR printing.

Note

- In the following instructions, some fields or dialog box names may differ depending on the NT service pack in use.

1 Configure the IP parameters on Network Interface Board using the operation panel.

Reference

For more information about setting IP parameters, see “Configuring the printer for the Network with the Operation Panel” in “Printer Reference 1”.

2 Click [Start] on the taskbar, point to [Settings], and then click [Control Panel].

3 Double-click [Network] and select the [Protocols] tab to confirm that the TCP/IP protocol is installed.

If the TCP/IP protocol is not in the list of Network Protocols, click [Add] to install it.

4 Select the [Services] tab.

If Microsoft TCP/IP Printing is not on the list of Network Services, click [Add] to install it.

5 Click [Close] when all protocols and services have been added.

If the TCP/IP protocol has just been added, set the IP address and other TCP/IP parameters.

The new protocols and services will be available after the system is restarted.

Important

- If the printer driver has not been installed yet, install it before continuing.

6 Click [Start] on the taskbar, point to [Settings], and then click [Printers].

7 Right click the appropriate printer and select [Properties].

8 On the [Ports] tab, click [Add Port].

9 Double-click [LPR Port] in the list of available printer ports.

10 In the [Name or address of server providing lpd:] field, type the IP address of Network Interface Board (that was assigned with the operation panel).

11 In the [Name of printer or print queue on that server:] field, type “PORT1” (quotation marks are not included) in capital letters and click [OK].

12 Click **[Close]** to close the **[Printer Ports]** dialog box.

The IP address of Network Interface Board is now displayed and currently selected on the list of ports.

13 If the printer is to be shared, click the **[Sharing]** tab, select **Shared** and type the Share name.

14 Click **[OK]**.

4. Dynamic Host Configuration Protocol(DHCP)

Dynamic Host Configuration Protocol (DHCP)

The Dynamic Host Configuration Protocol (DHCP) provides a mechanism for delivering IP configuration parameters, including the IP address, subnet mask and default gateway, to devices (hosts) on an IP network. A DHCP server manages the pool of available IP addresses and grants device requests for an IP address.

At power-up, Network Interface Board broadcasts a DHCP request for an IP address. If a DHCP server is present, the request is processed, and an IP address is returned to Network Interface Board. Upon receipt of the IP address, Network Interface Board resets, and prints a network configuration page. The network configuration page lists the new IP address (and Subnet mask and default gateway). Once an IP address has been assigned to Network Interface Board, it no longer broadcasts DHCP requests.

Important

- The IP address of Network Interface Board assignment by DHCP works only if Network Interface Board does not have an existing IP address.

The DHCP server leases a temporary IP address which expires after a period of time, or leases a permanent or unlimited lease which does not expire.

Devices that are granted a temporary lease are notified before the lease expires and asked if they want to extend the lease. Network Interface Board continues extending its lease indefinitely (unless prohibited by your DHCP server configuration) and thus maintains a consistent IP address.

Important

- If Network Interface Board is not turned on or is not connected to the network during the period when the DHCP server is sending requests to extend the lease, the lease will not be extended. The DHCP server cancels the lease and assigns the IP address to another device. Therefore, it is highly recommended that you reserve an IP address for Network Interface Board in your DHCP server configuration.

If you do not use DHCP for IP address assignment, it can be disabled using the NIB Setup Tool. The NIB Setup Tool allows you to use a Wizard or a Property Sheet to configure Network Interface Board. Use the Property Sheet to disable this feature. After you select Network Interface Board with the NIB Setup Tool, click **[Configure]** and then click the **[TCP/IP]** tab. If you do not use DHCP, select **[Specify an IP Address]** and set the IP address, the subnet mask and the default gateway address.

5. NetWare Configuration

Quick Setup Using the NIB Setup Tool Wizard

Using the NIB Setup Tool, you can easily set up a NetWare printing environment.

Reference

For more information about setting up the NIB Setup Tool, see P.3 “*Installing the NIB Setup Tool*”.

You can select **[Wizard]** or **[Property Sheet]** as an installation method.

When you configure Network Interface Board for the first time, use the Wizard method.

If you want to use the Property Sheet method, see P.32 “*NetWare 3.x - Advanced Settings*” and P.35 “*NetWare 4.x, 5 - Advanced Settings*”.

Note

- This section assumes that NetWare is functional and that the necessary environment for NetWare Print Services is available.
- If you configure Network Interface Board in a NetWare environment using the NIB Setup Tool, you should install the client software released from Novell in the following cases.
 - Windows 95/98 in NDS mode configuration
 - Windows NT 4.0 in NDS mode configuration
 - Windows NT 4.0 in Bindery mode configuration

1 Log on to the Netware file server or the NDS tree as an Admin or Admin equivalent.

2 Run the NIB Setup Tool.

Reference

⇒ P.4 “*Running the NIB Setup Tool*”

3 Click **[Wizard]** and click **[OK]**.

The **[Network board list]** dialog box of Network Interface Board appears.

4 Click **[IPX protocol]**.

5 Click to select the IPX address of Network Interface Board you are configuring, and click **[Next >]**.

Note

- If you do not know which Network Interface Board you are configuring, print a network configuration page to confirm the MAC address (Network address).

6 Confirm that the MAC address and IPX address are correct, and click [Finish].

7 Type the print server name into the [Device Name] box, and click [Next >].

The default setting is “RDP_” followed by the 6 digit serial number. We recommend that you change it to something that is easier to remember or something based on the structure of your network.

8 In a dialog box for selecting a network environment, click to select the [NetWare] check box and click to clear the [TCP/IP] check box.

9 Click [Next >].

A dialog box for configuring the NetWare environment appears.

10 Select [Bindery] when printing under Bindery mode, or select [NDS] when printing under NDS mode.

When you are using NetWare version 4.x, you should select [NDS].

11 If you selected [Bindery], type into the [File Server Name:] box the name of the file server in which a print server is to be created.

Clicking [Browse], you can select a file server among those listed in the [Browse] dialog box.

12 If you selected [NDS], type into the [Tree:] box the name of the NDS tree in which the print server is created, and type the context into the [Context:] box.

Clicking [Browse], you can select a NDS tree and a NDS context among those listed in the [Browse] dialog boxes.

As a context, object names are typed from a lower object and divided by a period. For example, if you want to create a print server into NET under DS, type “NET.DS”.



13 Click [Next >].

14 Type the name of the printer into the [Printer Name] box, and the name of the print queue into the [Print Queue Name] box.

The default setting for Printer Name is “Print Server Name” followed by “_1” and that for Print Queue Name is “Print Server Name” followed by “_Q” (quotation marks are not included). You can change them if necessary.

- 15** If you have selected NDS mode, type the volume of the print queue into the **[Queue Volume]** box.

Clicking **[Browse]**, you can select one of those shown in the **[Browse]** dialog box.

- 16** Click **[Next >]**.

A dialog box to confirm the printing environment appears.

- 17** After confirming the environment, click **[Next >]**.


If you want to change the settings, click **[< Back]** and make the settings again.

Clicking **[Next >]**, the NIB Setup Tool automatically creates the Print Server, the Printer, and the Print Queue in the NetWare network.

- 18** After a confirmation dialog box appears, select **[Quit]** and click **[Finish]** to exit the NIB Setup Tool.

NetWare 3.x - Advanced Settings

This section describes how to configure your printer to use as a print server in the NetWare 3.x environment.

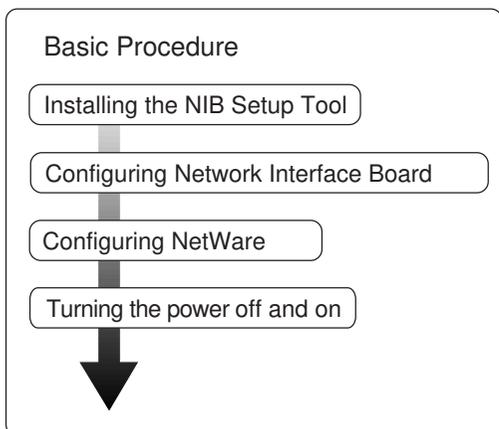

5

Preparation

The following procedures use the Property Sheet method in configuring Network Interface Board. If you configure Network Interface Board as a NetWare print server for the first time, we recommend you use the Wizard method. For more information, see P.29 *“Quick Setup Using the NIB Setup Tool Wizard”*.

Note

- This section assumes NetWare is functional and that the necessary environment for the NetWare Print Service is available.

Setting Up as a Print Server

1 Log on to the file server as a Supervisor or a Supervisor equivalent.

2 Run the NIB Setup Tool.

Reference

⇒ P.4 *“Running the NIB Setup Tool”*

3 Click [Property Sheet] and click [OK].

The [Browse] dialog box of Network Interface Board appears.

4 Click [IPX protocol].

5 Click to select the IPX address of Network Interface Board which is to be configured, and then click [Next >].

Note

- If you do not know which Network Interface Board you are configuring, see the network configuration page to confirm the MAC address (Network Address).

- 6** Confirm that the MAC address and IPX address are correct, and click **[Finish]**.

The **[NIB Setup Tool]** window appears.

- 7** Click **[Configure]**.

The property sheet appears.

- 8** Click the **[General]** tab, and type the name of the print server into the **[Device Name]** box.

- 9** Click the **[NetWare]** tab, and make the following settings.

- 1** Select **[Bindery]**.

- 2** In the **[File Server Name:]** box, type the name of the file server in which a print server is to be created.

Click **[Browse]** to select a file server among those listed in the **[Browse]** dialog box.

- 3** Click **[OK]** to close the property sheet.

- 4** After a confirmation dialog box appears, click **[OK]**.

- 10** On the **[NIB]** menu, click **[Exit]** to exit the NIB Setup Tool.

- 11** Type "PCONSOLE" from the command prompt.

```
F:> PCONSOLE
```

- 12** Create a print queue as follows.

 **Note**

- If you use a currently defined print queue, go to step **8**.

- 1** From the **[Available Options]** menu, select **[Print Queue Information]** and press the **[ENTER]** key.

- 2** Press the **[INSERT]** key and type a print queue name.

- 3** Press the **[ESC]** key to return to the **[Available Options]** menu.

- 13** Create a printer as follows.

- 1** From the **[Available Options]** menu, select **[Print Server Information]** and press the **[ENTER]** key.

- 2** To create a new print server, press the **[INSERT]** key and type a print server name.

If you use a currently defined print server, select one of the print servers shown in the **[Print Server]** list.

 **Important**

- Use the same name as that specified in the NIB Setup Tool. (Step **8**).

- 3** From the **[Print Server Information]** menu, select **[Print Server Configuration]**.

- 4 From the [Print Server Configuration menu], select [Printer Configuration].
- 5 Select the printer which is indicated as "Not Installed".
- 6 If you change the name of the printer, type a new name.

A name "Printer x" is assigned to the printer. "x" stands for the number of the selected printer.

- 7 As Type, select [Remote Other/Unkown].

The IRQ, Buffer size, Starting form, and Queue service mode are automatically configured.

- 8 Press the [ESC] key, and click [Yes] in the confirmation dialog box.
- 9 Press the [ESC] key to return to the [Print Server Configuration] menu.

14 Assign print queues to the created printer as follows.

- 1 From the [Print Server Configuration] menu, select [Queues Serviced By Printer].
- 2 Select the printer created in step 13.
- 3 Press the [INSERT] key to select a queue serviced by the printer.

Note

- You can select more than one queue at a time.

- 4 Follow the instructions on the screen to make other necessary settings.

When you have finished the previous steps, confirm that the queues are assigned.

15 Press the [ESC] key until "Exit?" appears, and select [Yes] to exit PCONSOLE.

16 Turn the printer power off and on.

Note

- To confirm that the printer is configured correctly, type as follows from the command prompt.

F:> USERLIST


- If the printer works as configured, the name of the print server appears as an attached user.

NetWare 4.x, 5 - Advanced Settings

This section describes how to configure your printer to use as a print server in the NetWare 4.x and 5 environment.

❖ To use NetWare 5

- Load the IPX protocol into the file server in advance.
- You cannot use Pure IP and NDPS (Novell Distributed Print Services) mode.

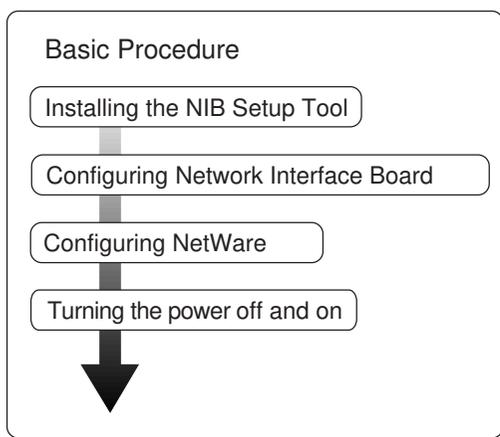

5

Preparation

The following procedures use the Property Sheet method in configuring Network Interface Board. If you configure Network Interface Board as a NetWare print server for the first time, we recommend you use the Wizard method. For more information, see P.29 “*NetWare Configuration*”.

Note

- This section assumes NetWare is functional and that the necessary environment for the NetWare Print Service is available.
- You should install the client software released from Novell on Windows before running the NIB Setup Tool for configuring in NDS mode or using Windows NT 4.0.

Setting Up as a Print Server

Important

- You can set up the print server using NDS or Bindery mode in NetWare 4.x, 5. The following procedure is for setting up the print server using NDS mode in NetWare 4.1. When you set up the print server using Bindery mode, use the NIB Setup Tool Wizard. ⇒ P.29 “*Quick Setup Using the NIB Setup Tool Wizard*”

1 Log on to the file server as an Admin or an Admin equivalent.

2 Run the NIB Setup Tool.

 **Reference**

⇒ P.4 "Running the NIB Setup Tool"

3 Click **[Property Sheet]** and click **[OK]**.

The **[Browse]** dialog box of Network Interface Board appears.

4 Click **[IPX protocol]**.

5 Click to select the IPX address of Network Interface Board which is to be configured, and click **[Next >]**.

 **Note**

If you do not know which Network Interface Board you are configuring, see the network configuration page to confirm the MAC address (Network Address).

6 Confirm that the MAC address and IPX address are correct, and click **[Finish]**.

The **[NIB Setup Tool]** window appears.

7 Click **[Configure]**.

The property sheet appears.

8 Click the **[General]** tab, and type the name of the print server into the **[Device Name]** box.

9 Click the **[NetWare]** tab, and make the following settings.

1 Select **[NDS]**.

2 Type into the **[Tree:]** box the name of the NDS tree in which the print server is created, and type the context into the **[Context:]** box.

Clicking **[Browse]**, you can select a NDS tree and a NDS context among those listed in the **[Browse]** dialog boxes.

As a context, object names are typed from a lower object and divided by a period. For example, if you want to create a print server into NET under DS, type "NET.DS".



- ③ Click [OK] to close the property sheet.
- ④ After a confirmation dialog box appears, click [OK].

10 On the [NIB] menu, click [Exit] to exit the NIB Setup Tool.

11 From Windows, run NWAdmin.

Reference

For more information about NWAdmin, see the documentation that comes with NetWare.

12 Create a print queue as follows.

- ① Select the container object the print queue is located in among those in the directory tree, and click [Create] on the [Object] menu.
- ② In the [Class of new object] box, click to select "Print Queue", and click [OK].
- ③ In the [Print Queue name] box, type the name of the print queue.
- ④ In the [Print Queue Volume] box, click the [Browse] button.
- ⑤ In the [Available objects] box, click to select the volume in which the print queue is created, and click [OK].
- ⑥ After confirming the settings, click [Create].

13 Create a printer as follows.

- ① Select the container object the printer is located in, and click [Create] on the [Object] menu.
- ② In the [Class of new object] box, click "Printer", and click [OK]. When you are using NetWare 5, click "Printer (Non NDPS)".
- ③ In the [Printer name] box, type the name of the printer.
- ④ Click to select [Define additional properties] to check a box, and click [Create].

14 Assign print queues to the created printer as follows.

- ① Click [Assignments], and click [Add] in the [Assignments] group.
- ② In the [Available objects] box, click the queue created in step 12, and click [OK].
- ③ Click [Configuration], and in the [Printer type] box, select [Parallel] using the dropdown menu, and then click [Communication].
- ④ Click [Manual load] in the [Communication type] group, and click [OK].
- ⑤ After confirming the settings, click [OK].

15 Create a print server as follows.

- ① Select the context specified using the NIB Setup Tool (step 9-A), and on the [Object] menu, click [Create].
- ② In the [Class of new object] box, click "Print Server", and click [OK].

③ In the [Print Server name] box, type the name of the print server.

 **Important**

Use the same name as that specified using the NIB Setup Tool. (Step ③)

④ Click to select [Define additional properties] check box, and click [Create].

16 Assign the printer to the created print server as follows.

① Click [Assignments], and click [Add] in the [Assignments] group.

② In the [Available objects] box, click to select the printer created in step 16, and click [OK].

③ After confirming the settings, click [OK].

17 Turn the printer power off and on.

 **Note**

If the printer works as configured, the name of the print server appears as an attached user.

Setting Up a Client Computer

This section describes how to set up a client computer when using a NetWare print server.

Note

- This section assumes that the client has NetWare client applications installed and is correctly configured to communicate with a NetWare print server. If not, install the necessary applications before starting the setup procedure.

Windows 95/98

Follow these steps to set up a Windows 95/98 client.

Preparation

Log on to the NetWare file server before starting the following procedure.

- 1** Install the printer driver you want to use as “Local printer”.

Reference

For more information about installing the printer driver, see “Installing the PCL 6/5e Printer Driver” in “Printer Reference 1” and “Installing the Post-Script Printer Driver” in “Printer Reference 1”.

Note

- Any port can be selected during the installation, however, LPT1 is recommended.

- 2** Click [Start], point to [Settings], and then click [Printers].
- 3** In the [Printers] window, click the icon of the printer you want to use.
- 4** On the [File] menu, click [Properties].
- 5** Click the [Details] tab, and click [Add Port].
- 6** Click [Network] and click [Browse].
- 7** On the network tree, double-click the name of the file server.
The queues appear.
- 8** Click the queue you want to print, and click [OK].
- 9** Click [OK].
In the [Print to the following port] box, a network path to the printer appears.
- 10** Click [OK] to close the Printer Properties, and again, open it.

- 1 Click the [Printer Settings] tab.
- 2 Clear the [Form feed] and [Enable banner] check boxes.

 **Note**

- You should not select these check boxes because they should be specified using the printer driver. If they are selected, the printer might not print correctly.

When Using the PostScript Printer Driver

Follow these steps to set up for the PostScript Printer Driver

- 1 Click the [PostScript] tab.
 - 2 Click [Advanced].
 - 3 Click to clear the [Send CTRL+D before job] and [Send CTRL+D after job] check boxes.
- 5 **13** Click [OK] to close the Printer Properties.

Windows NT 4.0

Follow these steps to set up a Windows NT 4.0 client.

 **Preparation**

Log on to the NetWare file server before starting the following procedure.

- 1 Double-click the [Network Neighborhood] icon on the desktop and navigate to the queue you want to use, and then double-click it.
The [Printers] dialog box appears.
- 2 Click [No].
- 3 Close all the applications that are currently running.
- 4 Insert the CD-ROM labeled "Printer Drivers and Utilities" into the CD-ROM drive.
If the setup menu starts automatically, you can go to the next step. If not, see "Installing the PCL 6/5e Printer Driver" and "Installing the PostScript Printer Driver" in "Printer Reference 1" to start the installation and then go to the next step.
- 5 The [Printer Installation] dialog box appears.
- 6 From the [Port] list, select the queue you selected in step 1, and click [Next >].
- 7 Follow the instructions on the screen to finish the installation of the printer driver.

6. Macintosh Configuration

Configuring a Macintosh

This section describes how to configure a Macintosh computer to use EtherTalk. The actual procedures to configure a Macintosh may differ depending on the version of the Mac OS. If you are not using Mac OS 8, see the manual that comes with your version of the Mac OS for more information.

Changing to EtherTalk

Reference

For more information about installing the software required for EtherTalk, see the Macintosh manuals.

- 1** Open [Control Panels], and double-click the [AppleTalk] icon.
- 2** Select [Ethernet] from the [Connect via:] pop-up menu.
- 3** If you change zones, select a name from the [Current zone:] pop-up menu.
- 4** Close the [AppleTalk] control panels.
- 5** Restart the Macintosh.

Changing the Printer Name

If the network has several same model printers, the names will be the same. Printers that have the same name will have their names changed slightly in the Chooser. For example, three printers named “printer” will appear in the Chooser as “printer0”, “printer1” and “printer2”.

Use applications such as Apple Printer Utility or LaserWriter Utility to change printer names in the Macintosh EtherTalk environment. These utilities are distributed by Apple Computer, Inc.

7. UNIX Configuration

UNIX Configuration

UNIX printing utilizes a line printer daemon (lpd) to direct jobs to the printer. With printer-based lpd, Network Interface Board acts as the line printer daemon host and accepts print jobs directly.

TCP/IP configuration of Network Interface Board is needed for all versions of UNIX. See the "Owner's Manual" (Type 450-E Manual) for lpd configuration.

Note

- Be sure to turn the printer off and on after changing the network configuration.

Reference

For information about setting IP parameters, see "Configuring the Printer for the Network" in "Printer Reference 1" that comes with the printer.

Setting the IP Address

The IP address of Network Interface Board may initially be set in a variety of ways; including with the MAP utility when a NetWare server is present, with the UNIX bootp daemon, with rarp, or with the standard UNIX command line utility, arp.

The following instructions use arp, but the other methods may be used instead, depending on user preference.

For more information about using one of the other methods, see the "Owner's Manual" (Type 450-E Manual).

1 Turn the printer off and then on and wait for the power-up network status page to print.

2 Add an entry to the hosts file (usually etc/hosts) that includes the printer's name and the IP address.

For example, to name the printer and associate it with an IP address of 197.42.211.5, place the following entry in the hosts file: 197.42.211.5 <Printer-Name>

3 At the UNIX command prompt, type: `arp -s <desired_IP_address> <NIB_Ethernet_address>`

(The Ethernet address is listed on the network status page as Network Address.)

For example, `arp -s 197.42.211.5 00:40:AF:13:A2:70`

4 At the UNIX command prompt, type: `ping <desired_IP_address>`

For example, ping 197.42.211.5. Network Interface Board will not respond to this ping command, but will read the IP address.

5 After a few minutes (usually between one and two minutes, but possibly up to five minutes on very large or busy networks), Network Interface Board will reset and print its network status page.

The new IP address will be listed in the TCP/IP Network Information section. If the status page is not printed, recheck the Ethernet address of Network Interface Board entry in the arp command.

Once the status page is printed, the new IP address may also be verified with the ping command.

Setting Other TCP/IP Parameters

Once the IP address is set, Network Interface Board can be configured via telnet or with a standard web browser.

The following steps describe configuration with a standard browser.

For more information about configuring via telnet, see the “Owner's Manual” (Type 450–E Manual).

1 In the browser, connect to `http://<NIB_IP_address>`

For example, `http://197.42.211.5`

2 At Home Page of Network Interface Board, click Network Configuration.**3** Many of the configuration options are password protected.

The default password is: sysadm

The password is case sensitive.

To change the password, select Change Password in the System column.

4 Select Setup TCP/IP in the Protocols column and change the settings as appropriate.

If unsure of the correct Subnet mask, and the first number in the IP address of Network Interface Board is from 192 to 254, then use 255.255.255.0 as the Subnet mask.

5 Type the sysadm password in the appropriate box and click Accept Settings.

After a few seconds, the screen should report that the update was successful. Click the Back Arrow icon twice to return to the Network Configuration page.

6 Optional: Click Configure Status Page in the Printer column to define power-up status page settings, for example, disabling the power-up status page.

7 The changes made to Network Interface Board do not take effect until the unit is reset.

Click Reset in the System column and click Reset Unit.

After a few seconds, a message should appear on the screen saying that the unit was reset.

TCP/IP configuration is now complete.

INDEX

C

Copy Reference, ii

D

Dynamic Host Configuration Protocol (DHCP), 27

I

IP address, 27, 43

IP Peer-to-Peer, 2, 9, 22

Installing IP Peer-to-Peer

Windows 95/98, 9

Windows NT, 22

Selecting the Printer Port, 11

Windows NT, 24

IPX Peer-to-Peer, 2, 13

Installing IPX Peer-to-Peer

Windows 95/98, 13

Selecting the Printer Port, 14

L

LPR Printing, 25

M

Macintosh, 41

EtherTalk, 41

N

NetBEUI, 17

NetWare, 29

NetWare 3.x - Advanced Settings, 32

NetWare 4.x, 5 - Advanced Settings, 35

Quick Setup, 29

Setting Up a Client Computer, 39

NIB Setup Tool, 3

Installing PRINTER MANAGER

FOR ADMINISTRATOR, 3

Running the NIB Setup Tool, 4

P

PortNavi, 1, 6

Deleting the Port

Windows 95/98, 7, 11, 24

Windows NT, 19

Installing PortNavi

Windows 95/98, 6

Windows NT, 18

Setting Up the Printer Driver

Windows NT, 20

Setting up the Printer Driver

Windows 95/98, 7

PRINTER MANAGER FOR

ADMINISTRATOR, 2

PRINTER MANAGER FOR CLIENT, 2

S

Status page, 4

System Settings, ii

T

TCP/IP, 27

U

UNIX, 43



Network Interface Board Type 450-E (Option) Quick Configuration Guide



Addendum for

Network Interface Board Quick Configuration Guide

Windows 2000 Configuration

This manual describes the procedures and provides necessary information about setting up and using the printer under the network environment using Windows 2000. It is useful to see "Network Interface Board Type 450-E Quick Configuration Guide" for further information in addition to this manual.

See "Addendum for Printer Reference" to install the printer driver.

Configuration Programs

❖ PortNavi

IP Peer-to-Peer printing software

PortNavi is a utility that helps you to use network printers effectively. It is useful in environments where two or more network printers are used. It is recommended that you install PortNavi to use Parallel Printing and Recovery Printing. For more information about PortNavi, see Help of PortNavi.

🚨 Important

- ❑ If you upgrade to Windows 2000 from Windows 95/98, PortNavi must be uninstalled prior to installing Windows 2000. You must reinstall it after upgrading to the Windows 2000 environment.

📝 Note

- ❑ Parallel Printing and Recovery Printing are not available when you print without using the PCL6/5e printer driver.

- PortNavi Features

Allow you to send a print job directly to the network printers without using a print server.

- Equally divide the number of copies to be printed among the selected printers in the printer group (Parallel Printing).

🚨 Important

- ❑ The following settings must be the same for the specified printer and the printers selected for Parallel Printing.
 - Printers are the exact same model.
 - Installed options (e.g. Paper Tray)
 - Size and orientation of paper in each paper tray
 - Total memory
 - Installed fonts (including the downloaded fonts)
- Allow you to print documents using other printers in the printer group when the specified printer is busy (Recovery Printing).

🚨 Important

- ❑ The following settings must be the same for the specified printer and the printers selected for Recovery Printing.
 - Printers are the exact same model.
 - Installed options (e.g. Paper Tray)
 - Size and orientation of paper in each paper tray
 - Total memory
 - Installed fonts (including the downloaded fonts)

❖ **PRINTER MANAGER FOR ADMINISTRATOR**

A utility for the system administrator to manage printers on the network.

Reference

For the name of PRINTER MANAGER FOR ADMINISTRATOR, see the inside of the front cover of "Quick Configuration Guide" for optional Network Interface Board which is included as a PDF file on the CD-ROM labeled "Printer Drivers and Utilities".

See PRINTER MANAGER FOR ADMINISTRATOR Online Help for more information about using PRINTER MANAGER FOR ADMINISTRATOR.

❖ **PRINTER MANAGER FOR CLIENT**

A utility for users to manage their own print status on the network.

Reference

For the name of PRINTER MANAGER FOR CLIENT, see the inside of the front cover of "Quick Configuration Guide" for optional Network Interface Board which is included as a PDF file on the CD-ROM labeled "Printer Drivers and Utilities".

See PRINTER MANAGER FOR CLIENT Online Help for more information about using PRINTER MANAGER FOR CLIENT.

Important

- ❑ Configuration programs of IP Peer-to-Peer and IPX Peer-to-Peer which are included on the CD-ROM labeled "Print Server Software and Documentation" that comes with optional Network Interface Board, are not guaranteed to work correctly in the Windows 2000 environment.

Installing NIB Setup Tool

A utility called NIB Setup Tool is provided to configure the printer to work in a network environment. This section describes how to install PRINTER MANAGER FOR ADMINISTRATOR, and how to run NIB Setup Tool.

Installing PRINTER MANAGER FOR ADMINISTRATOR

Follow these steps to install PRINTER MANAGER FOR ADMINISTRATOR.

Preparation

You should install PRINTER MANAGER FOR ADMINISTRATOR on the computer. If you install PRINTER MANAGER FOR ADMINISTRATOR from a file server or run it via the network, PRINTER MANAGER FOR ADMINISTRATOR might not work correctly.

Be sure to close all applications before starting the installation procedure.

- 1** Close all the applications that are currently running.
- 2** Insert the CD-ROM labeled "Printer Drivers and Utilities" into the CD-ROM drive.
If the setup menu starts automatically, follow the instructions on the screen.
If not, go to step **3**.
- 3** Open [Control Panel], and double-click the [Add/Remove Programs] icon.
- 4** Click [Add New Programs], and then click [CD or Floppy].
- 5** Click [Next >].
- 6** In the [Open] box, type the name of the CD-ROM drive followed by ":\NETWORK\PRINTMAN\ADMIN\DISK1\SETUP.EXE" (do not include the quotation marks) and then click [Finish].

Note

- An example would be "D:\NETWORK\PRINTMAN\ADMIN\DISK1\SETUP.EXE" when the CD-ROM drive name is "D".

- 7** From the [Choose Setup Language] pop-up menu, select the language you want to use.
- 8** In the [Welcome] dialog box, click [Next >].
- 9** The Software License Agreement appears.
After reading through all of the contents by clicking [PageDown], click [Yes] to agree with the License Agreement.

10 Select a folder to install **PRINTER MANAGER FOR ADMINISTRATOR** in, and then click **[Next >]**.

If you want to change the displayed folder, click **[Browse]** to select another one.

The installation program starts.

When a confirmation dialog box appears, the installation program is complete.

Running NIB Setup Tool

1 Click **[Start]**, point to **[Programs]**, and then click **[NIB Setup Tool]** in the **[PRINTER MANAGER FOR ADMINISTRATOR]** program folder.

.....

 **Status page**

The status page of Network Interface Board will be automatically printed in the following cases:

- when the printer is turned on.
- when Network Interface Board is reset.

This feature can be disabled with NIB Setup Tool.

To disable this feature, check **[Property Sheet]** in the “NIB Setup Tool” screen, Click **[Detailed..]** in the **[General]** tab and remove the check from the box for “Print configuration page on start up.”

.....

Using PortNavi

Important

- To use PortNavi, you must install PRINTER MANAGER FOR CLIENT and use the TCP/IP protocol. For the name of PRINTER MANAGER FOR CLIENT you use, see the inside of the front cover of “Quick Configuration Guide” for optional Network Interface Board which is included as a PDF file on the CD-ROM labeled “Printer Drivers and Utilities”.

Installing PortNavi

Follow these instructions to install PortNavi.

- 1** Configure the IP parameters on Network Interface Board using the operation panel.

Reference

For more information about setting IP parameters, see “Configuring the printer for the Network with the Operation Panel” in “Printer Reference 1”.

- 2** Insert the CD-ROM labeled “Printer Drivers and Utilities” into the CD-ROM drive.

Note

- If the installer starts automatically, use it to install PortNavi, and then go to step **6**.

- 3** Open [Control Panel], and double-click the [Add/Remove Programs] icon.

- 4** Click [Add New Programs], and then click [CD or Floppy].

- 5** Click [Next >].

- 6** Type the name of the CD-ROM drive in the [Open] box, followed by “:\NETWORK\PORTNAVI\DISK1\SETUP.EXE” (do not include the quotation marks), and then click [Finish].

Note

- An example would be “D:\NETWORK\PORTNAVI\DISK1\SETUP.EXE” when the drive letter is “D”.

- 7** After the [Welcome] dialog box appears, click [Next >].

- 8** If PRINTER MANAGER FOR CLIENT is not installed, the [Question] dialog box appears. When this occurs, click [No] and install PRINTER MANAGER FOR CLIENT. If PRINTER MANAGER FOR CLIENT is installed, click [Yes].

9 Click **[Yes]**.

The **[Question]** dialog box appears.

10 If you want to read "Readme File", click **[Yes]**.

11 After the **[Setup Complete]** dialog box appears, click **[Yes, I want to restart my computer now]**, and click **[Finish]**.

The computer restarts, and PortNavi can now be used. If you select "No", be sure to restart the computer manually before launching PortNavi for the first time.

Deleting the Port

The following procedure allows you to delete the printer port. If you want to delete the port which is currently used in Windows, switch the port to another such as "FILE", then delete it. For more information about PortNavi, see Help of PortNavi.

1 From the **[Printers]** window, click to select the icon of the printer which uses PortNavi port to print, and then click **[Properties]** in the **[File]** menu.

2 Click to select the **[Ports]** tab, then confirm that the PortNavi port is shown in the **[Print to the following port(\$)]** box and that the check box is selected.

Remember the port name because this port should be deleted later.

3 Click to select the **[FILE]** check box in the **[Port]** column.

4 Click **[OK]** to close the Printer Properties.

The port which is currently in use is changed.

5 Open the Printer Properties of the same printer.

6 Click to select the **[Ports]** tab.

7 At the **[Port]** column in the **[Print to the following port(\$)]** dialog box, click to select the PortNavi port name as confirmed in step **2**.

8 Click **[Delete Port]**.

9 When the confirmation message appears, click **[Yes]**.

The port is deleted.

10 Click **[OK]** to close the Printer Properties.

Setting Up the Printer Driver

The following procedure allows you to configure the printer port to use PortNavi with Windows 2000.

Important

- If you want to switch the IP Peer-to-Peer port to the PortNavi port for printing, delete the IP Peer-to-Peer port before adding the PortNavi port.

1 Install the printer driver you want to use.

2 From the [Printers] window, click to select the installed printer icon then click [Properties] in the [File] menu.

3 Click to select the [Ports] tab and then click [Add Port].

4 Click to select [PortNav] in the [Port types] box and then click [New Port].

The [Select Printer] dialog box appears and printers on the network can be browsed.

The displayed items are as follows:

Model Name: The model name of the printer.

Name: The name of Network Interface Board.

Comment: Additional information about Network Interface Board.

Address: The IP address of the printer.

5 Click to select the model name of the printer then click [OK].

If you want to select a printer which is not shown here, click [IP Address] to type the IP address.

6 Click [Close] in the [Printer Port] dialog box.

7 Confirm that the name of the PortNavi port is shown in the [Print to the following port(s)] dialog box and its check box is selected then click [OK].

The name of the PortNavi port is shown as "IP address@model name".

The configuration is now complete.

When printing, select the configured printer and print as usual. Printing will be done automatically by PortNavi.

Accessing the Port Settings Dialog Box

This section describes how to access the Port Settings dialog box to enable Parallel Printing and Recovery Printing.

Reference

For more information about the procedures for Parallel Printing and Recovery Printing, see Help of PortNavi.

- 1** Click **[Start]** on the taskbar, point to **[Settings]**, and click **[Printers]**.
- 2** Click the icon of the printer you want to use. On the **[File]** menu, click **[Properties]**.
- 3** Select the **[Ports]** tab and click **[Configure Port]**.
The PortNavi settings dialog box appears.

Standard TCP/IP Printing

Standard TCP/IP is a standard port of Windows 2000 to enable Peer-to-Peer printing in a network environment.

For more information about Standard TCP/IP settings, see Help of Windows 2000.

NetWare Configuration

This section describes how to set up a Windows 2000 client.

For more information about server settings, see "Network Interface Board Type 450-E Quick Configuration Guide" which is included as a PDF file on the CD-ROM labeled "Printer Drivers and Utilities".

Setting Up a Client Computer

This section describes how to set up a client computer when using a NetWare print server.

Follow these steps to set up a Windows 2000 client.

Preparation

Log on to the NetWare file server before starting the following procedure.

1 Double-click the **[My Network Places]** icon on the desktop and navigate to the queue you want to use, and then double-click it.

The **[Printers]** dialog box appears.

2 Click **[No]**.

3 Close all the applications that are currently running.

4 Insert the CD-ROM labeled "Printer Drivers and Utilities" into the CD-ROM drive.

If the setup menu starts automatically, you can go to the next step. If not, see "Installing the PCL 6/5e Printer Driver" and "Installing the PostScript Printer Driver" in the "Addendum for Printer Reference" to start the installation and then go to the next step.

5 The **[Printer Installation]** dialog box appears.

6 From the **[Port]** list, select the queue you selected in step **1**, and click **[Next >]**.

7 Follow the instructions on the screen to finish the installation of the printer driver.

UE 
B358-8721



Network Interface Board Type 450-E (option)



Quick Configuration Guide

-
- 1** Getting Ready for Software Installation
 - 2** Windows 95/98/Me Configuration
 - 3** Windows 2000/XP Configuration
 - 4** Windows NT 4.0 Configuration
 - 5** Dynamic Host Configuration Protocol (DHCP)
 - 6** NetWare Configuration
 - 7** Macintosh Configuration

Introduction

This manual describes detailed instructions on the operation and notes about the use of this machine. To get maximum versatility from this machine all operators are requested to read this manual carefully and follow the instructions. Please keep this manual in a handy place near the machine.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Trademarks

NetWare® is a registered trademark of Novell, Incorporated. Windows® is a registered trademark of Microsoft Corporation in the United States and/or other countries.

Macintosh® is a registered trademark of Apple Computer, Incorporated.

All other products referenced are trademarks or registered trademarks of their respective companies.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights in those marks.

Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Notes:

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

TABLE OF CONTENTS

How to Read This Manual	1
Manuals for This Machine.....	2
Manuals for this Machine	2
 1. Getting Ready for Software Installation <hr/>	
Configuration Programs.....	3
 2. Windows 95/98/Me Configuration <hr/>	
Windows 95/98/Me Configuration.....	5
Using SmartNetMonitor for Client.....	6
Installing the SmartNetMonitor for Client/Admin	6
Using IP Peer-to-Peer	8
Installing IP Peer-to-Peer	8
Selecting the Printer Port	10
Deleting the Port	11
Using IPX Peer-to-Peer.....	12
Installing IPX Peer-to-Peer.....	12
Selecting the Printer Port	13
 3. Windows 2000/XP Configuration <hr/>	
Windows 2000/XP Configuration.....	15
Using SmartNetMonitor for Client.....	16
Installing SmartNetMonitor for Client	16
Printing with a Standard TCP/IP Port.....	18
Installing the Printer Driver.....	18
 4. Windows NT 4.0 Configuration <hr/>	
Windows NT 4.0 Configuration.....	19
Using the SmartNetMonitor for Client.....	20
Installing the SmartNetMonitor for Client	20
Using IP Peer-to-Peer	22
Installing IP Peer-to-Peer	22
Selecting the Printer Port	24
Deleting the Port	24
Setting Up LPR Printing	25
 5. Dynamic Host Configuration Protocol (DHCP) <hr/>	
Dynamic Host Configuration Protocol (DHCP)	27

6. NetWare Configuration

NetWare 3.x - Advanced Settings	29
Setting Up as a Print Server.....	30
NetWare 4.x, 5.x - Advanced Settings	32
Setting Up as a Print Server.....	32
Setting Up a Client Computer	35
Windows 95/98/Me.....	35
Windows 2000/XP	36
Windows NT 4.0.....	37

7. Macintosh Configuration

Configuring Macintosh	39
Changing to EtherTalk	39
Configuring the Printer	40
Changing the Printer Name.....	40
Changing the Zone.....	40
INDEX	41

How to Read This Manual

Symbols

In this manual, the following symbols are used:

Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates the prior knowledge or preparations required before operating.

Note

This symbol indicates precautions for operation, or actions to take after misoperation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

Reference

This symbol indicates a reference.

[]

Keys that appear on the machine's display panel.

Keys and buttons that appear on the computer's display.

【 】

Keys built into the machine's control panel.

Keys on the computer's keyboard.

Manuals for This Machine

Manuals for this Machine

There are seven manuals that separately describe the procedures for the installation of a machine and for the operation and maintenance of the machine and its optional equipment.

To enhance safe and efficient operation of the machine, all users should read and follow the instructions contained in the following manuals.

❖ **Copy Reference**

Describes the procedures and functions for using this machine as a copier.

❖ **System Settings**

Describes the system settings of this machine.

❖ **Printer Reference 1**

Describes the system settings, procedures and functions for using this machine as a printer.

❖ **Printer Reference 2**

Describes the procedures and provides necessary information about using this machine as a printer. The manual is included as a PDF file on the CD-ROM labeled "Printer Drivers and Utilities".

❖ **Network Interface Board Quick Configuration Guide**

Describes the procedures and provides necessary information about setting up and using the printer under the network environment. We recommend this manual as your first choice. The manual is included as a PDF file on the CD-ROM labeled "Printer Drivers and Utilities". (This Manual)

Read this manual as your first choice before referring to the paper version of the Quick Configuration Guide which comes with optional Network Interface Board Type 450-E.

❖ **PostScript 3 Operating Instructions Supplement**

Describes the menus and features you can set using the PostScript 3 printer driver. The manual is included as a PDF file on the CD-ROM labeled "Printer Drivers and Utilities".

❖ **Network Interface Board Type 450-E Owner's Manual**

Describes the procedures and provides necessary information about setting up and using the printer under the network environment. The manual is provided as a PDF file which is included on the CD-ROM labeled "Print Server Software and Documentation" which comes with optional Network Interface Board Type 450-E.

1. Getting Ready for Software Installation

Supported programs for the installation and configuration of the Network Interface Board are provided on two CD-ROMs. One is "Printer Drivers and Utilities" which comes with this machine, and the other is "Print Server Software and Documentation" which comes with the optional Network Interface Board type 450-E.

You can select any of the programs listed in the Configuration Programs.

Configuration Programs

The CD-ROM labeled "Printer Drivers and Utilities" includes the following utilities.

❖ **SmartNetMonitor for Admin**

SmartNetMonitor for Admin is software that uses the TCP/IP and IPX/SPX protocols to monitor the printers in a network. It can monitor multiple network printers having IP addresses. We recommend network administrators to use this software.

Reference

For more information about SmartNetMonitor for Admin, see the SmartNetMonitor for Admin Help file.

❖ **SmartNetMonitor for Client**

SmartNetMonitor for Client is software equipped with the following functions. We recommend all users of this machine to install this software.

- Provides the function to print in a Peer-to-Peer network.
- Uses the TCP/IP and IPX/SPX protocols to monitor the status of devices in a network constantly.

Reference

For more information about SmartNetMonitor for Client, see the SmartNetMonitor for Client Help file.

The CD-ROM labeled "Print Server Software and Documentation" includes the following utilities.

❖ **MAP**

Web-based configuration utility

❖ **IPX Peer-to-Peer**

IPX Peer-to-Peer printing software

❖ **IP Peer-to-Peer**

IP Peer-to-Peer printing software

❖ **NWSetup**

NetWare Print Service Configuration

The four utilities are provided on the “Print Server Software and Documentation” CD-ROM, but you need this CD-ROM only if you use “IPX Peer-to-Peer” or “IP Peer-to-Peer” printing.

1 Although you can use the “MAP” or “NWSetup” utilities on the “Print Server Software and Documentation” CD-ROM, it is easier to use the SmartNetMonitor for Client/Admin provided on the “Printer Drivers and Utilities” CD-ROM.

To use “MAP” or “NWSetup” from the “Print Server Software and Documentation” CD-ROM, see the “Owner's Manual” on the CD-ROM labeled “Print Server Software and Documentation” for instructions.

2. Windows 95/98/Me Configuration

Windows 95/98/Me Configuration

This section describes how to configure the Peer-to-Peer printing. The Peer-to-Peer printing software that is provided on the CD-ROM labeled "Printer Drivers and Utilities". "Print Server Software and Documentation" allows Windows 95/98/Me PCs to communicate directly with network attached printers. A network server, such as NetWare or Windows NT, is not required for Peer-to-Peer printing.

There are three types of Peer-to-Peer printing. You can select "SmartNetMonitor for Client/Admin", "IP Peer-to-Peer" and "IPX Peer-to-Peer" according to your network environment.

The Peer-to-Peer printing software must be installed on each PC that uses Peer-to-Peer printing. Once Peer-to-Peer printing software is installed, all Network Interface Boards on the network automatically appear in the list of available printer ports.

The Peer-to-Peer printing software can also be used in networks where servers are present; however, server based print services are often utilized instead. Server based print services offer centralized printing management and spooling and do not require software (other than the printer driver) to be installed on each PC.

If you use the machine in a network where servers are present, select either Peer-to-Peer printing or the server based print service.

Reference

For more information about setting IP parameters, see "Configuring the Printer for the Network with the Control Panel" in the "Printer Reference 1" manual.

Using SmartNetMonitor for Client

Installing the SmartNetMonitor for Client/Admin

For information about installing the SmartNetMonitor for Client, see “Installing the SmartNetMonitor for Client/Admin” in the “Printer Reference 1” manual.

2

Setting up the printer driver

- 1** Install the printer driver you want to use.
- 2** From the [Printers] window, click the icon of the machine whose printer driver you want to use, and then click [Properties] in the [File] menu.
- 3** Click the [Details] tab and click [Add Port].
- 4** Click [Other], click to select [SmartNetMonitor] from the list and then click [OK].
Available machines will be listed.
- 5** Select a machine you want to use.

TCP/IP

- 1** Click the machine you want to use.

 **Note**

- Machines that respond to an IP broadcast from the computer will be displayed. To print to a machine not listed here, click [Specify Address], and then type the IP address or host name.
- You cannot add an address partially similar to that already used. For example, when “192.168.0.2” is already used, “192.168.0.2xx” cannot be used. Similarly, when “192.168.0.20” is already used, “192.168.0.2” cannot be used.

- 6** Click [OK].
- 7** Confirm that the selected port is highlighted, and then click [OK].
- 8** Restart the computer after the installation is complete.
- 9** Set up the options with the printer driver.

 **Reference**

For more information about settings for options, see “Installing the Printer Driver and Software” in the “Printer Reference 1” manual.

Accessing the Port Settings Dialog Box

This section describes how to access the **[Port Settings]** dialog box to change the settings of SmartNetMonitor for Client.

Reference

For more information about these settings, see SmartNetMonitor for Client Help.

- 1** Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.
- 2** Click the icon of the machine you want to use.
- 3** On the **[File]** menu, click **[Properties]**.
- 4** Click the **[Details]** tab, and then click **[Port Settings]**.
The **[Port Settings]** dialog box appears.

Using IP Peer-to-Peer

Important

- The TCP/IP protocol is required for IP Peer-to-Peer printing. Confirm that the TCP/IP protocol is installed, if not, install it before starting the following procedure.

2

Installing IP Peer-to-Peer

Follow these steps to install IP Peer-to-Peer.

Important

- Confirm that the machine power is turned on before starting the following procedure.

- 1** Configure the IP parameters on the Network Interface Board using the control panel.

Reference

For more information about setting IP parameters, see “Configuring the Printer for the Network with the Control Panel” in the “Printer Reference 1” manual.

- 2** Insert the CD-ROM labeled “Print Server Software and Documentation” into the CD-ROM drive.

The main screen appears.

Note

- If Adobe Acrobat Reader is not installed, click **[Install Adobe Acrobat Reader 4.0]**.

- 3** Click **[CD ROM Contents]**.

The “Introduction” page appears.

- 4** Click **[Installation/Configuration Programs]**.

The “Configuration Programs” page appears.

- 5** Click **[Windows 95/98 & NT 4.x IP Peer-to-Peer Printing]**.

The “Windows 95/98 and NT 4.x IP Peer-to-Peer Printing” page appears. This page describes the functions of this utility.

- 6** At the bottom of the page, click the blue word **[here]** to begin installing.

A dialog box appears asking if the “Setup.exe” program should be started.

- 7** The **[Welcome]** dialog box appears.

8 Click **[Next]**.

The **[Installation Notes]** dialog box appears.

9 Click **[Yes]**.

The **[Choose Destination Directory]** dialog box appears.

10 Click **[Browse]** to set a different folder.

The default installation folder is C:\Program Files\IP-P2P.

11 Click **[Next]**.

The **[Select Program Folder]** dialog box appears.

This allows you to set the name of the folder that contains the shortcut links inside the Program Folder.

12 Type the name that you wish to see in “Program Folder:” and click **[Next]**.

The files are then copied to the computer in the specified directories.

13 Follow the instructions on the screen.**14** Click **[OK]** to complete the installation. **Reference**

For more information about installing IP Peer-to-Peer, see the “Owner's Manual” on the CD-ROM labeled “Print Server Software and Documentation”.

 **For manual installation**

Follow these steps to install the software on your operating system (Windows 95/98/Me).

- ① Insert the CD-ROM into the CD-ROM drive.
- ② Close all the applications that are currently running.
- ③ Click **[Start]** on the task bar, and click **[Run]**.
- ④ Type <Drive>:\IP-P2P\SETUP.EXE (where <Drive> is your CD-ROM drive name).
- ⑤ Click **[OK]**.

The **[Welcome]** dialog box appears.

The remaining steps are identical to **7-12** in the preceding procedure. ⇒ p.8 “Installing IP Peer-to-Peer”

Selecting the Printer Port

The Peer-to-Peer printing software should be installed on each Windows 95/98/Me PC that will use Peer-to-Peer printing services.

1 Install the printer driver you want to use.

If the printer drivers have already been installed, you can go to the next step.

 **Reference**

For more information about the printer drivers, see “Installing the PCL 6/5e Printer Driver” or “Installing the PostScript 3 Printer Driver” in the “Printer Reference 1” manual.

2 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

3 Click the icon of the machine you want to set up for Peer-to-Peer printing.

4 On the **[File]** menu, click **[Properties]**.

The **[Printer Properties]** dialog box appears.

5 Click the **[Details]** tab.

6 From the **[Print to the following port:]** list box, select the port of the machine you want to use for Peer-to-Peer printing.

- Select the IP address of the machine. If you do not find the IP address of the machine, the machine is not in your local subnet. Then you need to configure IP Peer-to-Peer port manually as described in the “Owner's Manual” on the CD-ROM labeled “Print Server Software and Documentation”.

7 Click **[OK]**.

Deleting the Port

The following procedure allows you to delete the printer port. If you want to delete the port which is currently used in Windows, switch the port to another such as "FILE", then delete it. For more information about IP Peer-to-Peer, see the "Owner's Manual" on the CD-ROM labeled "Print Server Software and Documentation".

- 1** Click [Start] on the taskbar, point to [Programs], and then click [IP-P2P].

The [IP-PeerToPeer Setup] window appears.

- 2** Click [Printers...].

- 3** Click [Find Printers].

Available machines appear.

- 4** Click to select the port you want to delete from "Unit Name" list.

- 5** Click [Delete].

Using IPX Peer-to-Peer

Important

- The IPX protocol is required for IPX Peer-to-Peer printing. Confirm that the IPX protocol is installed, if not, install it before starting the following procedure.

Note

- IPX protocol can be used with Windows 95/98.

Installing IPX Peer-to-Peer

Follow these steps to install IPX Peer-to-Peer.

- 1** Insert the CD-ROM labeled “Print Server Software and Documentation” into the CD-ROM drive.

The main screen appears.

Note

- If Adobe Acrobat Reader is not installed, click **[Install Adobe Acrobat Reader 4.0]**.

- 2** Click **[CD ROM Contents]**.

The “Introduction” page appears.

- 3** Click **[Installation/Configuration Programs]**.

The “Configuration Programs” page appears.

- 4** Click **[Windows 95/98 IPX Peer-to-Peer Printing]**.

The “Windows 95/98 IPX Peer-to-Peer Printing” page appears.

This page describes the functions of this utility.

- 5** At the bottom of the page, click the blue word **[here]** to begin installing.

A dialog box appears asking if the “Setup.exe” program should be started.

- 6** Click **[Yes]**.

The **[Welcome]** dialog box appears.

- 7** Click **[Next]**.

The **[IPX Setup]** dialog box appears.

- 8** Click **[OK]**.

The files are then copied to the computer in the specified directories.

The **[Installation Complete]** dialog box appears.

- 9** Click **[Finish]** to complete the installation.

For manual installation

Follow these steps to install the software on your operating system (Windows 95/98/Me).

- ① Insert the CD-ROM into the CD-ROM drive.
- ② Close all the applications that are currently running.
- ③ Click **[Start]** on the taskbar, and click **[Run]**.
- ④ Type <Drive>:\IPX-P2P\SETUP.EXE (where <Drive> is your CD-ROM drive name).
- ⑤ Click **[OK]**.
The **[Welcome]** dialog box appears.

The remaining steps are identical to **7** - **9** in the preceding procedure. ⇒ p.12 “Installing IPX Peer-to-Peer”

Selecting the Printer Port

The Peer-to-Peer printing software should be installed on each Windows 95/98/Me PC that will use Peer-to-Peer printing services.

1 Install the printer driver you want to use.

If the printer drivers have already been installed, you can go to the next step.

Important

- Using IPX Peer-to-Peer printing, confirm that the machine power is turned on before continuing the following steps.

Reference

For more information about the printer drivers, see “Installing the PCL 6/5e Printer Driver” or “Installing the PostScript 3 Printer Driver” in the “Printer Reference 1” manual.

2 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

3 Click the icon of the machine you want to set up for the Peer-to-Peer printing.

4 On the **[File]** menu, click **[Properties]**.

The **[Printer Properties]** dialog box appears.

5 Click the **[Details]** tab.

6 From the [Print to the following port:] list box, select the port of the machine you want to use for Peer-to-Peer printing.

- Select the machine name. The machine name is shown in “Peer-to-Peer Connection Information” on the network configuration page. The default setting of the printer name is “RDP_” followed by the 6 digit serial number.

2

7 Click [OK].

3. Windows 2000/XP Configuration

Windows 2000/XP Configuration

This manual describes the procedures and provides necessary information about setting up and using the machine under the network environment using Windows 2000/XP.

- If a NetWare server is present, NetWare print services might be used by following the NetWare Configuration instructions in this guide.

Using SmartNetMonitor for Client

Installing SmartNetMonitor for Client

Limitation

- If your system is Windows 2000/XP, installing software by Auto Run requires Administrators permission. When you install a printer driver by Auto Run, log on using an account that has Administrators permission.

For information about installing the SmartNetMonitor for Client, see “Installing the SmartNetMonitor for Client/Admin” in the “Printer Reference 1” manual.

Setting up the printer driver

1 Install the printer driver you want to use.

2 From the [Printers] window, click the icon of the machine whose printer driver you want to use, and then click [Properties] in the [File] menu.

Note

- In Windows XP, from the [Printers and Faxes] window, click the icon of the machine whose printer driver you want to use, and then click [Properties] in the [File] menu.

3 Click the [Details] tab and click [Add Port].

Note

- In Windows XP, click the [Ports] tab and click [Add Port].

4 Click [Other], click to select [SmartNetMonitor] from the list and then click [OK].

Available machines will be listed.

Note

- In Windows XP, click to select [SmartNetMonitor] from the list and then click [New Port].

5 Select a machine you want to use.

TCP/IP

1 Click the machine you want to use.

Note

- Machines that respond to an IP broadcast from the computer will be displayed. To print to a machine not listed here, click **[Specify Address]**, and then type the IP address or host name.
- You cannot add an address partially similar to that already used. For example, when “192.168.0.2” is already used, “192.168.0.2xx” cannot be used. Similarly, when “192.168.0.20” is already used, “192.168.0.2” cannot be used.

6 Click [OK].

7 Confirm that the selected port is highlighted, and then click [Close].

Accessing the Port Configuration Dialog Box

This section describes how to access the **[Port Configuration]** dialog box to change the settings of SmartNetMonitor for Client.

Reference

For more information about these settings, see SmartNetMonitor for Client Help.

1 Click **[Start]** on the taskbar, point to **[Settings]**, and click **[Printers]**.

Note

- In Windows XP Professional, access the **[Printers and Faxes]** window from **[Start]** on the taskbar.
- In Windows XP Home Edition, access the **[Printers and Faxes]** window. Click **[Start]** on the taskbar, click **[Control Panel]**, **[Printers and Other Hardware]** and then **[Printers and Faxes]**.

2 Click the icon of the machine you want to use.

3 On the **[File]** menu, click **[Properties]**.

4 Click the **[Ports]** tab, and then click **[Configure Port]**.

The **[Port Configuration]** dialog box appears.

Printing with a Standard TCP/IP Port

Installing the Printer Driver

- 1** Install the printer driver you want to use.
- 2** From the [Printers] window, click the icon of the machine whose printer driver you want to use, and then click [Properties] in the [File] menu.

 **Note**

- In Windows XP, from the [Printers and Faxes] window, click the icon of the machine whose printer driver you want to use, and then click [Properties] in the [File] menu.

- 3** Click the [Ports] tab and click [Add Port].

 **Note**

- In Windows XP, click the [Ports] tab and click [Add Port].

- 4** Select [Standard TCP/IP Port], and then click [OK].

The [Add Standard TCP/IP Printer Port Wizard] window appears.

 **Note**

- In Windows XP, select [Standard TCP/IP Port], and then click [New Port].

- 5** Click [Next] in the “Add Standard TCP/IP Printer Port Wizard” window.

- 6** Type the IP address in the “Printer Name or IP Address” box, and then click [Next].

- 7** Click [Finish] in the “Add Standard TCP/IP Printer Port Wizard” window.

 **Note**

- During configuration of Standard TCP/IP port, the [Additional Port Information Required] dialog box may appear. In this case, click [Standard] in the [Device Type] box and then select [RICOH Network Printer D model] from the list.

4. Windows NT 4.0 Configuration

Windows NT 4.0 Configuration

There are several options for setting up printing in a Windows NT environment.

- If a NetWare server is present, NetWare print services might be used by following the NetWare Configuration instructions in this guide.
- Peer-to-Peer print services can be available by using "IP Peer-to-Peer".
- LPR print services can be used via TCP/IP by following the instructions in this section.

Windows NT printing is very flexible. It is possible to configure the individual Windows NT or Windows 95/98/Me workstations to print using a different protocol from the Windows NT server. For example, a Windows NT server could be configured to print to the Network Interface Board via TCP/IP using the instructions in this section. The Network Interface Board could then be designated as shared on the NT server, allowing workstations to print via the NT server using a different protocol.

The optimum Windows NT printing configuration depends on the particular environment and user as well as administrator experience and preferences. Generally, LPR printing over TCP/IP covered in the following instructions is the best choice for environments where TCP/IP is already in use.

Using the SmartNetMonitor for Client

Installing the SmartNetMonitor for Client

Limitation

- If your system is Windows NT 4.0 , installing software by Auto Run requires Administrators permission. When you install a printer driver by Auto Run, log on using an account that has Administrators permission.

For information about installing the SmartNetMonitor for Client, see “Installing the SmartNetMonitor for Client/Admin” in the “Printer Reference 1” manual.

4

Setting up the printer driver

- 1** Install the printer driver you want to use.
- 2** From the [Printers] window, click the icon of the machine whose printer driver you want to use, and then click [Properties] in the [File] menu.
- 3** Click the [Ports] tab and click [Add Port].
- 4** Click to select [SmartNetMonitor] from the list and then click [New Port].
Available machines will be listed.
- 5** Select a machine you want to use.

TCP/IP

- 1** Click the machine you want to use.

Note

- Machines that respond to an IP broadcast from the computer will be displayed. To print to a machine not listed here, click [Specify Address], and then type the IP address or host name.
- You cannot add an address partially similar to that already used. For example, when “192.168.0.2” is already used, “192.168.0.2xx” cannot be used. Similarly, when “192.168.0.20” is already used, “192.168.0.2” cannot be used.

- 6** Click [OK].
- 7** Confirm that the selected port is highlighted, and then click [OK].
- 8** Restart the computer after the installation is complete.

9 Set up the options with the printer driver.

Reference

For more information about settings for options, see “Installing the Printer Driver and Software” in the “Printer Reference 1” manual.

Accessing the Port Configuration Dialog Box

This section describes how to access the **[Port Configuration]** dialog box to change the settings of SmartNetMonitor for Client.

Reference

For more information about these settings, see SmartNetMonitor for Client Help.

- 1** Click **[Start]** on the taskbar, point to **[Settings]**, and click **[Printers]**.
- 2** Click the icon of the machine you want to use.
- 3** On the **[File]** menu, click **[Properties]**.
- 4** Click the **[Ports]** tab and click **[Configure Port]**.
The **[Port Configuration]** dialog box appears.

Using IP Peer-to-Peer

Important

- The TCP/IP protocol is required for IP Peer-to-Peer printing. Confirm that the TCP/IP protocol is installed, if not, install it before starting the following procedure.

Installing IP Peer-to-Peer

Follow these steps to install IP Peer-to-Peer.

Important

- Confirm that the machine power is turned on before starting the following procedure.

- 1** Configure the IP parameters on the Network Interface Board using the control panel.

Reference

For more information about setting IP parameters, see “Configuring the Printer for the Network with the Control Panel” in the “Printer Reference 1” manual.

- 2** Insert the CD-ROM labeled “Print Server Software and Documentation” into the CD-ROM drive.

The main screen appears.

Note

- If Adobe Acrobat Reader is not installed, click **[Install Adobe Acrobat Reader 4.0]**.

- 3** Click **[CD ROM Contents]**.

The “Introduction” page appears.

- 4** Click **[Installation/Configuration Programs]**.

The “Configuration Programs” page appears.

- 5** Click **[Windows 95/98 & NT 4.x IP Peer-to-Peer Printing]**.

The “Windows 95/98 and NT 4.x IP Peer-to-Peer Printing” page appears. This screen describes the functions of this utility.

- 6** At the bottom of the page, click the blue word **[here]** to begin installing.

A dialog box appears asking if the “Setup.exe” program should be started.

- 7** Click **[Yes]**. The **[Welcome]** dialog box appears.

8 Click **[Next]**.

The **[Installation Notes]** dialog box appears.

9 Click **[Yes]**.

The **[Choose Destination Directory]** dialog box appears.

10 Click **[Browse]** to set a different folder.

The default installation folder is C:\Program Files\IP-P2P.

11 Click **[Next]**.

The **[Select Program Folder]** dialog box appears.

This allows you to set the name of the folder that contains the shortcut links inside the Program Folder.

12 Type the name that you want to see in the Program Folder and click **[Next]**.

The files are then copied to the computer in the specified directories.

13 Follow the instructions on the screen.**14** Click **[OK]** to complete the installation.
 **Reference**

For more information about installing IP Peer-to-Peer, see the “Owner's Manual” on the CD-ROM labeled “Print Server Software and Documentation”.

 **For manual installation**

Follow these steps to install the software on your operating system (Windows NT 4.0).

- ① Insert the CD-ROM into the CD-ROM drive.
 - ② Close all the applications that are currently running.
 - ③ Click **[Start]** on the taskbar, and click **[Run]**.
 - ④ Type <Drive>:\IP-P2P\SETUP.EXE (where <Drive> is your CD-ROM drive name).
 - ⑤ Click **[OK]**.
- The **[Welcome]** dialog box appears.

The remaining steps are identical to **7-12** in the preceding procedure. ⇒ p.22 “Installing IP Peer-to-Peer”

Selecting the Printer Port

The IP Peer-to-Peer printing software should be installed on each Windows NT 4.0 PC that uses Peer-to-Peer printing services.

Important

- The IP Peer-to-Peer printing software must be installed before selecting the printer port.

1 Close all the applications that are currently running.

2 Insert the CD-ROM labeled “Printer Drivers and Utilities” into the CD-ROM drive.

If the setup menu starts automatically, you can go to the next step. If not, see “Installing the PCL 6/5e Printer Driver” in the “Printer Reference 1” manual to start the installation and then go to the next step.

3 In the [Install Printer Driver] dialog box, select the Port from the Printer Name.

4 From the [Change settings for 'Port'] list, select the IP address of the machine you want to set up, and click [Next].

5 Follow the instructions on the screen to finish the installation of the printer driver.

Deleting the Port

The following procedure allows you to delete the printer port. If you want to delete the port which is currently used in Windows, switch the port to another such as “FILE”, then delete it. For more information about IP Peer-to-Peer, see the “Owner's Manual” on the CD-ROM labeled “Print Server Software and Documentation”.

1 Click [Start] on the taskbar, point to [Programs], and then click [Ip-p2p].

The [IP-PeerToPeer Setup] window appears.

2 Click [Printers...].

3 Click [Find Printers].

Available machines appear.

4 Click to select the port you want to delete from “Unit Name” list.

5 Click [Delete].

Setting Up LPR Printing

Follow these steps to set up LPR printing.

Note

- In the following instructions, some fields or dialog box names may vary depending on the NT service pack in use.

1 Configure the IP parameters on the Network Interface Board using the control panel.

Reference

For more information about setting IP parameters, see “Configuring the Printer for the Network with the Control Panel” in the “Printer Reference 1” manual.

2 Click [Start] on the taskbar, point to [Settings], and then click [Control Panel].

3 Double-click [Network] and select the [Protocols] tab to confirm that the TCP/IP protocol is installed.

If the TCP/IP protocol is not on the list of Network Protocols, click [Add] to install it.

4 Select the [Services] tab.

If Microsoft TCP/IP Printing is not on the list of Network Services, click [Add] to install it.

5 Click [OK] when all protocols and services have been added.

If the TCP/IP protocol has just been added, set the IP address and other TCP/IP parameters.

The new protocols and services will be available after the computer is restarted.

Important

- If the printer driver has not been installed yet, install it before continuing.

6 Click [Start] on the taskbar, point to [Settings], and then click [Printers].

7 From the [Printers] window, click the icon of the machine whose printer driver you want to use, and then click [Properties] in the [File] menu.

8 Click the [Ports] tab, and click [Add Port].

9 Double-click [LPR Port] in the list of Available Printer Ports.

10 In the [Name or address of server providing lpd:] field, type the IP address of the Network Interface Board (that was assigned with the control panel).

11 In the [Name of printer or print queue on that server:] field, type “PORT1” (quotation marks are not included) in capital letters and click [OK].

12 Click [Close] to close the [Printer Ports] dialog box.

The IP address of the Network Interface Board is now displayed and currently selected on the list of ports.

13 If the printer is to be shared, click the [Sharing] tab, select [Shared] and type the [Share name].

14 Click [OK].

5. Dynamic Host Configuration Protocol (DHCP)

Dynamic Host Configuration Protocol (DHCP)

The Dynamic Host Configuration Protocol (DHCP) provides a mechanism for delivering IP configuration parameters, including the IP address, subnet mask and default gateway, to devices (hosts) on an IP network. A DHCP server manages the pool of available IP addresses and grants device requests for an IP address.

When the DHCP is set to on, the Network Interface Board broadcasts a DHCP request for an IP address. If a DHCP server is present, the request might be processed, and the IP address might be returned to the Network Interface Board. Upon receipt of the IP address, the Network Interface Board resets, and prints a network configuration page. The network configuration page might list the new IP address (and Subnet mask and default gateway). Once an IP address has been assigned to the Network Interface Board, it might no longer broadcast DHCP requests.

Important

- The IP address of the Network Interface Board assignment by DHCP works only if the Network Interface Board does not have an existing IP address.

The DHCP server leases a temporary IP address which expires after a period of time, or leases a permanent or unlimited lease which does not expire.

Devices that are granted a temporary lease are notified before the lease expires and asked if they want to extend the lease. The Network Interface Board continues extending its lease indefinitely (unless prohibited by your DHCP server configuration) and thus maintains a consistent IP address.

Important

- If the Network Interface Board is not turned on or is not connected to the network during the period when the DHCP server is sending requests to extend the lease, the lease will not be extended. The DHCP server might cancel the lease and might assign the IP address to another device. Therefore, it is highly recommended that you reserve an IP address for the Network Interface Board in your DHCP server configuration.

If you change DHCP setting for IP address assignment, it can be enabled using the NIB Setup Tool. The NIB Setup Tool allows you to use a Wizard or a Property Sheet to configure the Network Interface Board. Use the Property Sheet to enable or disable this feature. After you select the Network Interface Board with the NIB Setup Tool, click **[Configure]** and then click the **[TCP/IP]** tab. If you do not use DHCP, select **[Specify an IP Address]** and set the IP address, the subnet mask and the default gateway address. If you use DHCP, select Obtain an IP Address from DHCP server.

 **Note**

- If the IP address is not assigned to the Network Interface Board, you need to install IPX protocol into your system and set IPX protocol in the NIB Setup Tool.
- You can run the NIB Setup Tool on the **[Tools]** menu in the SmartNetMonitor for Admin. For more information about installing the SmartNetMonitor for Admin, see the “Printer Reference 1” manual.

6. NetWare Configuration

This chapter describes how to configure the machine to use as a print server in a NetWare environment.

❖ SmartNetMonitor for Admin

To use a machine in a NetWare environment, configure the NetWare printing environment by using SmartNetMonitor for Admin.

Note

❑ If you configure NetWare printing environment by using SmartNetMonitor for Admin under following environment, NetWare Client which is provided by Novell is required.

- NDS mode in Windows 95/98/Me
- NDS or Bindary mode in Windows 2000/XP/Windows NT4.0


❖ Printers listed by SmartNetMonitor for Admin

SmartNetMonitor for Admin displays a list of printers, which are connected to the network.

If you cannot find out the machine from the displayed list, refer to the configuration page printed from the machine. For more information about printing a configuration page, see "Printer Condition" in the "Printer Reference 2" manual.

NetWare 3.x - Advanced Settings

This section describes how to configure your machine to use as a print server in the NetWare 3.x environment.

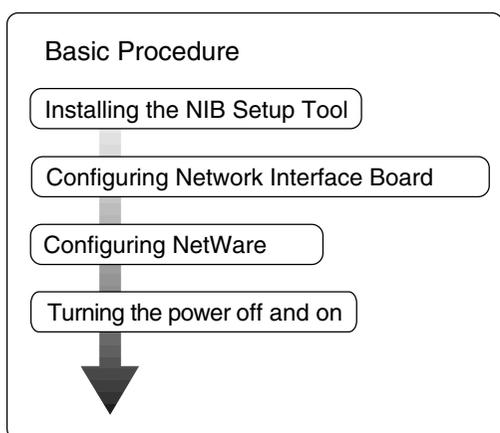

NW312-G-011

Note

❑ This section assumes NetWare is functional and that the necessary environment for the NetWare Print Service is available.

Setting Up as a Print Server

Follow these steps to set up the machine as a print server.

Preparation

Confirm that the SmartNetMonitor for Admin is installed. If it is not installed, see “Installing the Printer Driver and Software” in the “Printer Reference 1” manual to install it.

1 Log on to the file server as a Supervisor or a Supervisor equivalent.

2 Run SmartNetMonitor for Admin.

3 Click the [Group] menu and click [Open LAN] and select [IPX/SPX].

A list of printers appears.

Note

- If you cannot identify which machine to configure from the list of printers, print Configuration Page from the machine and find the desired machine. For more information about printing Configuration Page, see “Printer Condition” in the “Printer Reference 2” manual.

4 Click the machine you want to configure, and then click [NIB Setup Tool] on the [Tools] menu.

5 Click [Wizard], and then click [OK].

6 Type the device name into the [Device Name] box and comment into the [Comment] box as necessary, and then click [Next].

7 Select the [NetWare] check box, and then click [Next].

8 Click [Bindery], type the file server name into the [File Server Name:] box, and then click [Next].

In the [File Server Name:] box, type the name of the file server in which a print server is to be created. You can also select a file server from the list that appears by clicking [Browse].

9 Type the print server name into the [Print Server Name] box, machine name into the [Printer Name] box, and print queue name into the [Print Queue Name] box, and then click [Next].

- In the [Print Server Name] box, type the name of the NetWare print server within 47 characters.
- In the [Printer Name] box, type the name of the NetWare machine.
- In the [Print Queue Name] box, type the name of the print queue to be added to NetWare.

10 After confirming the settings, click [Next].

The settings take effect, and the NIB setup tool exits.

11 Exit SmartNetMonitor for Admin.

12 Turn the machine power off and on.

 **Note**

- To confirm that the machine is configured correctly, type as follows from the command prompt.

F : > USERLIST


If the machine works as configured, the name of the print server appears as an attached user.P

NetWare 4.x, 5.x - Advanced Settings

This section describes how to configure your machine to use as a print server in the NetWare 4.x, 5.x environment.

❖ To use NetWare 5.x

- If you use Pure IP, use the machine as a print server. You cannot use the machine as a remote printer when you use Pure IP.

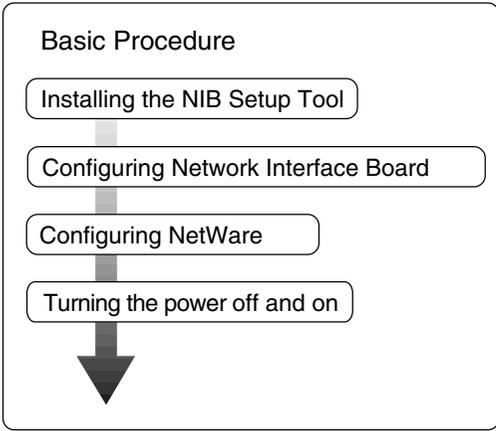

6

Setting Up as a Print Server

Follow these steps to set up the machine as a print server.

Preparation

Confirm that the SmartNetMonitor for Admin is installed. If it is not installed, see “Installing the Printer Driver and Software” in the “Printer Reference 1” manual to install it.

- 1** Log on to the file server as a Supervisor or a Supervisor equivalent.
- 2** Run SmartNetMonitor for Admin.
- 3** Click the [Group] menu and click [Search Device] and select [IPX/SPX] or [TCP/IP].

A list of printers appears.

Note

- If you use Pure IP, select [TCP/IP].
- If you cannot identify which machine to configure from the list of printers, print Configuration Page from the machine and find the desired machine. For more information about printing Configuration Page, see “Printer Condition” in the “Printer Reference 2” manual.

- 4 Click the machine you want to configure, and then click **[NIB Setup Tool]** on the **[Tools]** menu.

 **Note**

- If you use Pure IP, see p.34 "Using Pure IP in the NetWare 5.x environment".

- 5 Click **[Wizard]**, and then click **[OK]**.

- 6 Type the device name into the **[Device Name]** box and comment into the **[Comment]** box as necessary, and then click **[Next]**.

- 7 Select the **[NetWare]** check box, and then click **[Next]**.

- 8 Click **[NDS]**, type the file server name into the **[File Server Name:]** box, the NDS tree name into the **[Tree:]** box and the context into the **[Context:]** box, and then click **[Next]**.

In the **[File Server Name:]** box, type the name of the file server in which a print server is to be created. You can also select a file server from the list that appears by clicking **[Browse]**.

Clicking **[Browse]**, you can select a NDS context among those listed in the **[Browse]** dialog box.

As a context, object names are typed from a lower object and divided by a period. For example, if you want to create a print server into NET under DS, type "NET.DS".

- 9 Type the print server name into the **[Print Server Name]** box, machine name into the **[Printer Name]** box, print queue name into the **[Print Queue Name]** box, and print queue volume into the **[Print Queue Volume]** box, and then click **[Next]**.

- In the **[Print Server Name]** box, type the name of the NetWare print server within 47 characters.
- In the **[Printer Name]** box, type the name of the NetWare machine.
- In the **[Print Queue Name]** box, type the name of the print queue to be added to NetWare.
- In the **[Print Queue Volume]**, type the volume of print queue. As a volume, object names are typed from a lower object and divided by a period. You can select a volume by clicking **[Browse]**.

- 10 After confirming the settings, click **[Next]**.

The settings take effect, and the NIB setup tool exits.

- 11 Exit SmartNetMonitor for Admin.

- 12 Turn the machine power off and on.

Note

- To confirm that the machine is configured correctly, type as follows from the command prompt.

```
F:> NLIST USER /A/B
```

If the machine works as configured, the name of the print server appears as an attached user.

Using Pure IP in the NetWare 5.x environment

1 Log on to the file server as an Admin or an Admin equivalent.

2 Run SmartNetMonitor for Admin.

3 Click [Property Sheet] and click [OK].

The [NIB Setup Tool] dialog box appears.

4 Click the [NetWare] tab, and make the following settings.

1 In the [Print Server Name:] box, type the name of the print server.

2 In the [File Server Name:] box, type the name of the file server in which a print server is to be created.

Clicking [Browse], you can select a file server among those listed in the [Browse File Server] dialog box.

3 In the [NDS Context:] box, type the context of the print server.

Clicking [Browse], you can select a NDS tree and a NDS context among those listed in the [Browse Context] dialog box.

As a context, object names are typed from a lower object and divided by a period. For example, if you want to create a print server into NET under DS, type "NET.DS".



4 In the [Print Server Operation Mode] group, click [As Print Server].

5 Click [OK] to close the property sheet.

A confirmation dialog box appears.

6 Click [OK].

5 Exit SmartNetMonitor for Admin.

After this step, go to step 9 on p.32 "Setting Up as a Print Server".

Setting Up a Client Computer

This section describes how to set up a client computer when using a NetWare print server.

After installing the printer driver, change the print port to NetWare queue.

Note

- This section assumes that the client has NetWare client applications installed and is correctly configured to communicate with a NetWare print server. If not, install the necessary applications before starting the setup procedure.

Windows 95/98/Me

Follow these steps to set up a Windows 95/98/Me client.

Preparation

Log on to the NetWare file server before starting the following procedure.

1 Install the printer driver you want to use.

Reference

For more information about installing the printer driver, see the “Printer Reference 1” manual.

Note

- Any port is selected during the installation, however, LPT1 is recommended.

2 Click [Start], point to [Settings], and then click [Printers].

3 In the [Printers] window, click the icon of the machine you want to use.

4 On the [File] menu, click [Properties].

5 Click the [Details] tab, and click [Add Port].

6 Click [Network] and click [Browse].

7 On the network tree, double-click the name of the file server.

The queues are displayed.

8 Click the queue you want to print, and click [OK].

9 Click [OK].

In the [Print to the following port] box, a network path to the machine appears.

10 Click [OK] to close the [Printer Properties] dialog box, and again, open it.

- 11** Click the **[Printer Settings]** tab.
- 12** Clear the **[Form feed]** and the **[Enable banner]** check boxes.

 **Note**

- You should not select these check boxes because they should be specified using the printer driver. If they are selected, the machine might not print correctly.

When Using the PostScript 3 Printer Driver

Follow these steps to set up for the PostScript 3 Printer Driver.

- 1** Click the **[PostScript]** tab.
 - 2** Click **[Advanced]**.
 - 3** Click to clear the **[Send CTRL+D before job]** and the **[Send CTRL+D after job]** check boxes.
- 13** Click **[OK]** to close the **[Printer Properties]** dialog box.

6

Windows 2000/XP

Follow these steps to set up a Windows 2000/XP client.

 **Preparation**

Log on to the NetWare file server before starting the following procedure.

- 1** Double-click the **[My Network Place]** icon on the desktop and navigate to the queue you want to use, and then double-click it.
The **[Printers]** dialog box appears.
- 2** Click **[No]**.
- 3** Close all applications that are currently running.
- 4** Insert the CD-ROM labeled “Printer Drivers and Utilities” into the CD-ROM drive.
If the setup menu starts automatically, you can go to the next step. If not, see the “Printer reference 1” manual.
- 5** Install the printer driver you want to use.

- 6** Click **[Start]**, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

 **Note**

- In Windows XP Professional, access the **[Printers and Faxes]** window from **[Start]** on the task bar.
- In Windows XP Home Edition, access the **[Printers and Faxes]** window. Click **[Start]** on the task bar, click **[Control Panel]**, **[Printers and Other Hardware]** and then **[Printers and Faxes]**. The **[Printers and Faxes]** window appears.

- 7** Click the icon of the machine you want to use.

- 8** On the **[File]** menu, click **[Properties]**.

- 9** Select the queue you selected in step **1** from the **[Port]** list in the **[Ports]** tab, and then click **[OK]**.

Windows NT 4.0

Follow these steps to set up a Windows NT 4.0 client.

 **Preparation**

Log on to the NetWare file server before starting the following procedure.

- 1** Double-click the **[Network Neighborhood]** icon on the desktop and navigate to the queue you want to use, and then double-click it.

The **[Printers]** dialog box appears.

- 2** Click **[No]**.

- 3** Close all the applications that are currently running.

- 4** Insert the CD-ROM labeled "Printer Drivers and Utilities" into the CD-ROM drive.

If the setup menu starts automatically, you can go to the next step. If not, see the "Printer Reference 1" manual.

- 5** Install the printer driver you want to use.

- 6** Click **[Start]**, point to **[Settings]**, and then click **[Printers]**.

- 7** In the **[Printers]** window, click the icon of the machine you want to use.

- 8** On the **[File]** menu, click **[Properties]**.


- 9** From the **[Port]** tab, select the queue you selected in step **1**, and then click **[Next]**.

- 10** Follow the instructions on the screen.

7. Macintosh Configuration

Configuring Macintosh

This section describes how to configure a Macintosh to use EtherTalk. The actual procedures to configure a Macintosh may vary depending on the version of the Mac OS. The following procedure describes how to configure Mac OS 8. If you are not using Mac OS 8, see the manual that comes with your version of the Mac OS for more information.

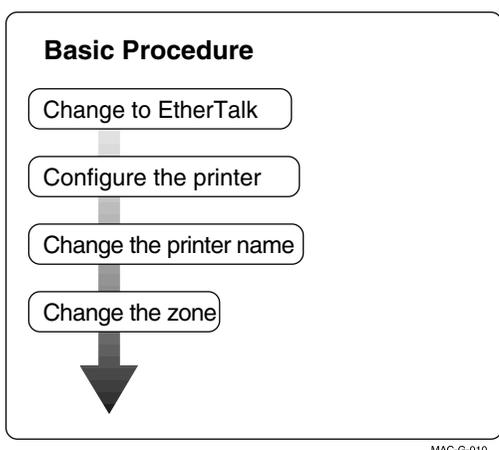

! Limitation

- For use with Macintosh OS 8 or 9. With Mac OS X, the machine operates in only Classic mode.

Changing to EtherTalk

Follow the procedure to configure a Macintosh to use EtherTalk.

🔍 Reference

For more information about installing the software required for EtherTalk, see the Macintosh manuals.

- 1** Open [Control Panel], and then double-click the [AppleTalk] icon.
- 2** From the [Connect via:] pop-up menu, select "Ethernet".
- 3** If you change zones, select a name from the [Current zone:] pop-up menu.
- 4** Close the [AppleTalk] control panels.
- 5** Restart the computer.

Configuring the Printer

Use the control panel to activate the AppleTalk protocol. (The factory default is active.)

Changing the Printer Name

If the network has several same model machines, the names will be the same. Machines that have the same name will have their names changed slightly in the Chooser. For example, three machines named “printer” will appear in the chooser as “printer0”, “printer1” and “printer2”.

For more information about changing the printer name, see the “PostScript 3 Operating Instructions Supplement” manual.

Changing the Zone

It may be necessary to change the zone configuration.

Use applications such as Apple Printer Utility or LaserWriter Utility to change the zone configuration in the Macintosh EtherTalk environment. These utilities are distributed by Apple Computer, Inc.

Follow these steps to use the Apple Printer Utility.

- ① Insert the CD-ROM into the CD-ROM drive.
- ② Copy the “Zone Name.ps” file in the “Zone Name” folder to the hard disk.
- ③ Open the copied “Zone Name.ps” file using a text editor, and change “New-Zone”, which is in the second line from the bottom, to the name of the new zone.

```
%!PS-Adobe2.0
%%Title: Changing Zone (EtherNet only)
%%CreationDate: Tue Dec 16 1997
%%EndComments
true 0 startjob not {ERROR} if
(%EtherTalk%) << /EtherTalkZone (NewZone) >> setdevparams
%%EOF
```
- ④ Save “Zone Name.ps”.
- ⑤ Run the Apple Printer Utility, and select the machine for which the new zone name is to be used.
- ⑥ Select [**Send PostScript File**] in the [**Utilities**] menu, and send “Zone Name.ps” to the machine.

INDEX

A

- Accessing the Port Configuration Dialog Box
 - Windows 2000/XP*, 17
 - Windows NT 4.0*, 21
- Accessing the Port Settings Dialog Box
 - Windows 95/98/Me*, 7

C

- configuration
 - Macintosh*, 39

D

- Deleting the Port
 - Windows 95/98/Me*, 11, 24
- Dynamic Host Configuration Protocol (DHCP), 27

E

- EtherTalk, 39

I

- Installing SmartNetMonitor for Client
 - Windows 2000/XP*, 16
- Installing the SmartNetMonitor for Client
 - Windows NT 4.0*, 20
- Installing the SmartNetMonitor for Client/Admin
 - Windows 95/98/Me*, 6
- IP address, 27
- IP Peer-to-Peer, 3, 8, 22
 - Installing IP Peer-to-Peer*
 - Windows 95/98/Me*, 8
 - Installing IP Peer-to-Peer Windows NT*, 22
 - Selecting the Printer Port*, 10
 - Selecting the Printer Port Windows NT*, 24
- IPX Peer-to-Peer, 3, 12
 - Installing IPX Peer-to-Peer Windows 95/98/Me*, 12
 - Selecting the Printer Port*, 13

L

- LPR Printing, 25

M

- Macintosh, 39

N

- NetWare, 29
 - NetWare 3.x - Advanced Settings*, 29
 - NetWare 4.x, 5.x - Advanced Settings*, 32
 - Setting Up a Client Computer*, 35

P

- printer name, 40
- Pure IP, 34

S


- Setting up the printer driver
 - Windows 2000/XP*, 16
 - Windows 95/98/Me*, 6
 - Windows NT 4.0*, 20
- SmartNetMonitor for Admin, 3
- SmartNetMonitor for Client, 3
- Standard TCP/IP
 - Windows 2000/XP*, 18

T

- TCP/IP, 27

Z

- zone, 40

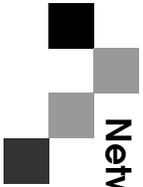

Network Interface Board Type 450-E (option) Quick Configuration Guide