



GelSprinter GX 2500

User Guide



-
- 1** Read This First
 - 2** Preparing for Printing
 - 3** Printer Driver
 - 4** Monitoring and Configuring the Printer
 - 5** Maintaining
 - 6** Troubleshooting
 - 7** Appendix

TABLE OF CONTENTS

1. Read This First

About This Product.....	7
Introduction.....	7
Trademarks.....	7
Disclaimer.....	8
User's Notes.....	8
Manuals for This Printer.....	10
How to Read This Manual.....	12
Description for the Specified Model.....	12
Symbols.....	12
Installing User Guide.....	13
How to Use User Guide.....	14
Removing the User Guide.....	16
Guide to Components.....	17
Machine Body.....	17
Machine Rear.....	18
Control Panel.....	19
Making Printer Settings Using the Control Panel.....	22
Options.....	25
Network Interface Board Type GX3a.....	25
Recommended Functions.....	26

2. Preparing for Printing

Setting Up the Hardware.....	27
Checking the Computer and Installation Area.....	27
Checking the Supplied Items and Unpacking the Printer.....	30
Attaching the Options.....	31
Installing the Print Cartridges.....	32
Plugging in the Power Cord and Turning the Power On.....	34
Loading Paper.....	36
Printing a Configuration Page.....	38
Connecting the Computer and Installing the Software (USB Connection).....	40
Before Installing the Software (USB).....	40
Quick Install for USB.....	41

Connecting the Computer and Installing the Software (Network Connection).....	44
Before Installing the Software (Network Interface Board).....	44
Quick Install for Network.....	47
Checking the Printer Status and Settings using the Printer's Control Panel (List/Test Print Menu)	49
Interpreting the Configuration Page.....	49
Confirming the Connection Method.....	50
Installing the Printer Driver (USB).....	52
Sharing the Printer.....	54
Specifying the Interface and Network Settings using the Printer's Control Panel (Host Interface Menu)	57
Changing the Host Interface Menu.....	59
Installing the Drivers for Network Connection.....	60
Installing the Printer Driver (Network).....	61
Installing the DeskTopBinder - SmartDeviceMonitor for Client.....	67
Paper.....	69
Compatible Paper Types.....	69
Loadable Paper Sizes and Quantities.....	69
Paper Handling Precautions.....	70
Specifying the Paper Settings using the Printer's Control Panel (Paper Input Menu)	76
Changing the Paper Input Menu.....	76

3. Printer Driver

Two Types of Printer Properties Dialog Box.....	79
Opening the Printer Properties Dialog Box.....	79
Opening the Printing Preferences Dialog Box.....	79
Opening from an Application.....	80
Specifying Settings on [Accessories] Tab.....	81
Conditions for Bidirectional Communication.....	81
If Bidirectional Communication is Disabled.....	81
Printing.....	83
Unauthorized Copy Control.....	84
Canceling Printing.....	86
Canceling Printing from the Status Monitor.....	86
Canceling Printing Using the [Job Reset] Key of the Printer.....	86

Canceling Printing from the Taskbar.....	87
--	----

4. Monitoring and Configuring the Printer

Using the Status Monitor.....	89
Receiving Notification of Print Job Status via the Status Monitor.....	89
Using SmartDeviceMonitor for Client.....	90
Using Notification via SmartDeviceMonitor for Client.....	91
Specifying the Settings for Monitoring the Printer.....	92
Displaying the Printer Status.....	93
Using Web Browser.....	94
Displaying Top Page.....	94
Menu.....	95
Checking the Printer Status.....	96
Changing the Printer Settings.....	96
Notifying the Printer Status by E-mail.....	97
About the Web Browser Help.....	109
SNMP.....	110

5. Maintaining

Checking the Number of Printed Pages using the Control Panel (Counter Menu).....	111
Displaying the Counter.....	111
Performing Maintenance using the Control Panel (Maintenance Menu).....	113
Nozzle Check.....	114
Head-cleaning.....	115
Head-flushing.....	117
Head Position.....	118
Adj.Paper Feed.....	120
Registration.....	122
De-condensation.....	125
Specifying System Settings using the Control Panel (System Menu).....	127
Changing the System Menu.....	128
Selecting the Control Panel Language.....	130
Restricting Printer Functions.....	132
Locking the Keys.....	132
Unlocking the Keys.....	132

Replacing a Print Cartridge.....	134
Checking the Remaining Ink.....	134
Replacing a Print Cartridge.....	136
Handling Print Cartridges.....	138
Cleaning.....	140
Moving.....	141
Moving a Short Distance.....	141
Moving a Long Distance.....	141
Disposing.....	143
When Not Using for a Long Period of Time.....	144

6. Troubleshooting

Software Cannot Be Installed.....	145
Confirming Installation.....	145
Checking Your Computer Environment.....	145
Printer Driver Cannot Be Installed.....	148
USB Connection is not Automatically Detected.....	148
If Test Print Fails.....	150
Uninstalling.....	151
Uninstalling the Printer Driver.....	151
Deleting Devices.....	152
Printing Will Not Start.....	154
Power Cannot Be Turned On.....	154
Paper Will Not Feed Even When the Power Is On.....	154
An Error Occurs.....	154
Paper Is Not Fed or Delivered Normally.....	156
Paper Jam.....	158
Using the [Form Feed / Head-cleaning] Key to Remove Jammed Paper.....	158
Removing Paper Jammed in Tray 1	159
Removing Paper Jammed under the Top Cover.....	160
Removing Paper Jammed around the Guide Board.....	164
If You Cannot Remove Jammed Paper.....	167
Print Results Are Not Satisfactory.....	171
Prints are Unsatisfactory.....	171

Colors Do Not Match the Displayed Image.....	173
Positions Do Not Match the Displayed Image.....	173
Other Problems.....	174
Checking the Consumables.....	176
If a Message Appears during Installation.....	177
Error & Status Messages on the Control Panel.....	178
Control Panel Error Messages.....	178
Status Monitor Errors.....	182
Status Monitor Does Not Open.....	182
No Response from Printer.....	182
No Paper/Tray Not Detected (Tray 1).....	182
Paper Size Mismatch/Paper Type Mismatch (Tray 1).....	183
Paper Size Mismatch/Paper Type Mismatch (Auto Tray Select).....	184
Cover Open.....	185
Cover Open/Tray Not Detected (Tray 1).....	187
Cover Open / Print Cartridge(s) Not Detected.....	188
Cartridge End.....	190
Cartridge/Print-head Tank Empty.....	191
Used Cartridge.....	193
Ink Collector Unit Not Detected.....	193
Out of Printable Temperature Range.....	195
Printer Error.....	195
Network Interface Board Error.....	196
Envelope Selector Position Mismatch.....	196

7. Appendix

Updating the Firmware.....	201
Checking the Current Printer Driver Version.....	202
Software on the CD-ROM.....	203
Files.....	203
RPCS Raster Printer Drivers.....	203
SmartDeviceMonitor for Client.....	204
Manuals (HTML files).....	204
Cautions to Take When Using in a Network.....	206

Using DHCP.....	206
Electromagnetic Interference.....	207
Specifications.....	208
Printer Body.....	208
Option (Network Interface Board).....	210
Information about Installed Applications.....	211
expat.....	211
NetBSD.....	211
Samba(Ver 2.2.2-1.1).....	213
JPEG LIBRARY.....	213
Where to Inquire.....	214
Recommended Consumables.....	215
Option and Consumables.....	216
INDEX	217

1. Read This First

About This Product

1

This section tells you about the product.

Introduction

This manual describes detailed instructions on the operation and notes about the use of this machine. To get maximum versatility from this machine, all operators are requested to read this manual carefully and follow the instructions. Please keep this manual in a handy place near the machine.

For safe and correct use, please be sure to read the Safety Information in the "Safety Information" that comes with this machine before using the machine.

Trademarks

Microsoft, Windows, Windows NT are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Adobe, Flash, Macromedia and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

UNIX is a registered trademark in the United States and other countries, licensed exclusively through X/Open Company Limited.

Netscape is a registered trademark of Netscape Communication Corporation in the U.S. and/or other countries.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

- The product name of Windows 98 is Microsoft® Windows® 98.
- The product name of Windows Me is Microsoft® Windows® Millennium Edition (Windows Me).
- The product names of Windows 2000 are as follows:
 - Microsoft® Windows® 2000 Professional
 - Microsoft® Windows® 2000 Server
 - Microsoft® Windows® 2000 Advanced Server
- The product names of Windows XP are as follows:
 - Microsoft® Windows® XP Home Edition
 - Microsoft® Windows® XP Professional
- The product names of Windows Vista are as follows:

Microsoft® Windows Vista™ Ultimate

Microsoft® Windows Vista™ Enterprise

Microsoft® Windows Vista™ Business

Microsoft® Windows Vista™ Home Premium

Microsoft® Windows Vista™ Home Basic

- The product names of Windows Server 2003 are as follows:

Microsoft® Windows Server® 2003 Standard Edition

Microsoft® Windows Server® 2003 Enterprise Edition

Microsoft® Windows Server® 2003 Web Edition

- The product names of Windows NT 4.0 are as follows:

Microsoft® Windows NT® Workstation 4.0


Microsoft® Windows NT® Server 4.0

Disclaimer

1. Contents of this manual are subject to change without prior notice.
2. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

User's Notes


- High temperatures inside the printer can cause a breakdown. Do not lean anything against the vent or block it in any way.

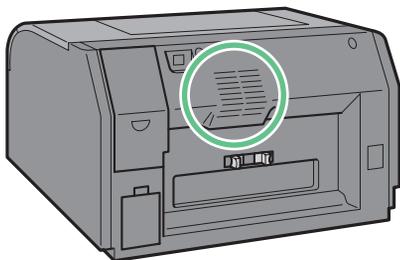

BAG049S

- Warm air from the vent is normal and not a cause for concern.
- Do not leave the left, top, or right front cover open. If you do, dust or other matter might get inside the printer, and this will reduce print quality.

- During printing, do not move the printer or open its covers.
- Do not open the left, top, or right front cover during printing. If you do, printing will stop.
- During printing, do not pull out a paper tray. Printing will stop and the paper will jam.
- Do not touch the feed belt, the transparent black band, print head rail rod, ink tubes, or paper pressing board. Take care not to snag the sleeves of your clothing on the ink tubes.

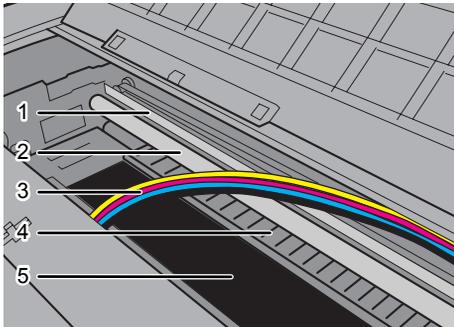

BAJ089S

1. Transparent black band
2. Print head rail rod
3. Ink tubes
4. Paper pressing board
5. Feed belt

- Take care not to let paper clips and other foreign objects fall inside the printer.
- After you install the print cartridge and switch the printer on for the first time, the print head priming process will begin. This process sometimes clogs the print head. If this happens, perform the head cleaning procedure.
- During printing, do not turn off the power or unplug the power cord from the wall outlet.
- During printing, do not subject the printer to external shock such as that caused by tapping paper on it.
- When not using the printer, turn off the power.
- You can place up to 20 kg (44.1 lb.) of evenly spread weight on the printer. Do not place any concentrated weight of more than 5 kg (11.1 lb.) on the printer.
- Do not place unsteady objects on the printer. If they fall, they will cause injury to users and/or damage to the printer.
- This printer has a nominal operational life of 5 years if used normally for 12 hours a day to produce up to 1,700 A4 prints a month. Exceeding these limits may reduce the operational life. The operational life also depends on the environment in which the printer is used.
- "Total Counter" displays the number of pages printed. Use "Total Counter" to estimate the number of pages that can be printed within the printer's remaining operational life. The printer's operational

life is calculated based on the number of pages that it can print on plain paper in [Speed priority] mode.

- This printer is designed to have an operational life of 5 years or be good for 100,000 pages.
- Depending on your printing document, the ink collector unit may fill up sooner than normal.

An "Ink Collector almost full" message appears shortly before the ink collector unit is full. Although the printer remains usable until the unit is completely full, contact your sales or service representative as early as possible (charge incurred).

- Print cartridges should be used up before their expiry date, ideally within six months of being removed from their packaging.
- Cartridges that are no longer usable for printing reserve a small quantity of ink for maintenance usage.
- Print cartridges and supplies comply with the manufacturer's safety specifications. To ensure safety and reliability, use genuine print cartridges and supplies.
- For print quality and consistency, this printer always uses all the available ink colors (black, cyan, yellow, and magenta) to produce print images. Even if your print image is black and white or [Black and White] is selected in the printer properties dialog box, all ink colors will still be used.
- Printing stops if one of the print cartridges becomes empty. If a cartridge containing a color ink such as cyan, yellow, or magenta becomes empty, you cannot print, even in black/white. If a message prompting you to change the print cartridge appears, change the cartridge as soon as possible.
- Printing hundreds of copies in a single day might cause the print head to clog the following day. If this happens, perform the head cleaning procedure.
- This printer performs regular automatic maintenance, after and during printing, to ensure consistent print quality. Maintenance is also performed when printing begins after a period of disuse.
- Color ink may be used even if you print all-black text or if you specify black and white printing. It may also be used for print head cleaning and refreshing, which are done to maintain printer performance.
- If the printer will not be used for a long time, turn its power off, disconnect the USB cable, and unplug the power cord from the wall outlet. Because the printer consumes a lot of ink for maintenance and print head cleaning when switched on after a long period of inactivity, we recommended you use the printer at least once a month.
- Do not move the printer while it is powered. Even when it is off, make sure the printer is on a level surface and safe from shock and vibration.
- Do not switch the printer off while it is busy. Make sure the printer is idle before switching it off.
- Condensation can form inside the printer if it is moved from a cold place to a warm place. Allow any condensation to fully evaporate by not switching the printer on for at least an hour after moving it.

Manuals for This Printer

Read the appropriate manual according to what you want to do.

Quick Installation Guide

This guide briefly explains how to unpack and install the printer.

User Guide (HTML)

This guide, which is on the CD-ROM, explains in detail how to use the printer.

The guide explains how to make network and printer driver settings, and how to make and check printer settings using a Web browser and other utilities.

The guide also contains troubleshooting procedures, such as those related to printing and paper jams, and important information about types of paper and replacing consumables.

We recommend you install this guide on your computer so you can refer to it easily.

Safety Information

This booklet contains important information about using the machine safely and correctly. Be sure to read this before using the machine.

How to Read This Manual

Be sure to read this section before anything else.

- This guide uses Windows XP procedures for its examples. Procedures and screens might vary depending on the operating system you are using.
- The color samples in this manual may differ slightly from the colors of actual copies.
- Some illustrations in this manual might be slightly different from the machine.

Description for the Specified Model

In this manual, the following items explain about the machine for the specified models:

220-240V

This explains about the 220~240 V model machine. You can identify the model by checking the label on the rear of the machine.

Read if you purchase this model.


120V

This explains about the 120 V model machine. You can identify the model by checking the label on the rear of the machine.

Read if you purchase this model.

Note

- You can identify the machine's model by checking the label on the rear of the machine as shown.

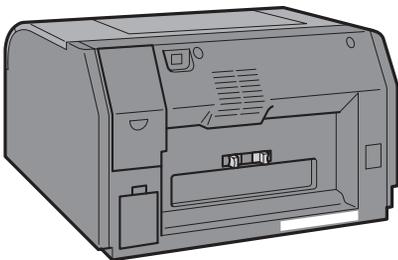

BAG050S

Symbols

The following set of symbols is used in this manual.

WARNING

Indicates important safety notes.

Ignoring these notes could result in serious injury or death. Be sure to read these notes.

They can be found in the "Safety Information".

CAUTION

Indicates important safety notes.

Ignoring these notes could result in moderate or minor injury, or damage to the machine or to property. Be sure to read these notes.

They can be found in the "Safety Information".

Important

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

Note

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

Reference

This symbol is located at the end of sections.

It indicates where you can find further relevant information.

[]

Indicates the names of keys and buttons.

Installing User Guide

Follow the procedure below to install User Guide only.

If you installed the software when performing [Quick Install for USB] or [Quick Install for Network], there is no need to install it again here.

Important

- The following explanation uses Windows XP as an example. Procedures under other operating systems may differ.
- Screens vary according to the operating environment.

1. Start Windows, and insert the provided CD-ROM into the CD-ROM drive.

Quit all other applications currently running.

After inserting the CD-ROM, the [Driver, Manual & Utility] dialog box appears. If it does not, double-click the CD-ROM drive icon under [My Computer] or [Explorer], and then double-click [SETUP.EXE].

1

- 2. Select a language for the interface, and then click [OK].**
- 3. Click [User Guide].**

- 4. Read the entire license agreement carefully. If you accept its terms, click [I accept the terms of the license agreement], and then click [Next >].**

- 5. Confirm the location in which you want to install User Guide, and then click [Next >].**

To change the installation location, click [Change...].

- 6. Confirm the program folder in which you want to install User Guide, and then click [Next >].**

- 7. Click [Install].**

Installation starts.

During installation, a message asking whether you want to create a desktop shortcut icon is displayed. Click [Yes] or [No] as appropriate.

- 8. When installation is complete, click [Finish].**

Reference

- To use the printer, the printer driver must be installed. See p.52 "Installing the Printer Driver (USB)".

How to Use User Guide

User Guide (on the provided CD-ROM) includes detailed information about this printer and a troubleshooting guide.

Use one of the browsers below to display User Guide.

- Microsoft Internet Explorer Version 4.01 SP2 or later
- Netscape 6.2 or later

To view the video files of User Guide, Adobe Flash Player (Macromedia Flash Player 5 or later) plug-in is required.

When using screen reader software or when you cannot install Adobe Flash Player (Macromedia Flash Player 5 or later) plug-ins

When using screen reader software to listen to User Guide or when video files cannot be displayed because Flash plug-ins cannot be installed, click [For screen reader] to display User Guide version optimized for screen reader software.

Use the button in the upper right window to change the screen.

When using a non-recommended browser

When using Internet Explorer 3.02 or Netscape Navigator 4.05 or later versions, a simplified User Guide is displayed.

Note

- If the simplified User Guide does not automatically appear, in the "Driver, Manual & Utility" CD-ROM's [unv] folder, open index.htm.

Opening from the Icon

This section explains how to open User Guide from the desktop icon.

1. Double-click the [User Guide] icon on your desktop.



The browser opens, and then User Guide appears.

Opening from the [Start] Menu

This section explains how to open User Guide from the Windows Start menu.

1. On the [Start] menu, point to [All Programs], point to [Product Name], and then click [Product Name User Guide].

The browser opens, and then User Guide appears.

Note

- Depending on the settings made during installation, menu folder names may differ.

Opening from the Printer Driver

This section explains how to open User Guide from the printer driver.

1. In the printer properties dialog box, click [User Guide] on the [Setup] tab.

The browser opens, and then User Guide appears.

Opening from the CD-ROM

This section explains how to open User Guide from the supplied CD-ROM.

1. Start Windows, and insert the provided CD-ROM into the CD-ROM drive.

After inserting the CD-ROM, the [Driver, Manual & Utility] dialog box appears. If it does not, double-click the CD-ROM drive icon under [My Computer] or [Explorer], and then double-click [SETUP.EXE].

2. Select a language for the interface, and then click [OK].

3. Click [Browse User Guide].

The browser opens, and then User Guide appears.

Opening from Printer Status Error Messages

This section explains how to open User Guide when Printer Status error message is displayed.

1. The Status monitor displays an error message if a problem occurs.

2. Click [User Guide].

The browser opens, and then User Guide appears.

Open User Guide from here if a problem occurs while using the printer.

Removing the User Guide

Follow the procedure below to remove the User Guide installed on your computer.

Removing the User Guide using its [Uninstall] function

1. On [Start] menu, point to [All Programs].

2. Point to the installed [Product name], and then click [Uninstall User Guide].

3. Follow the instructions that appear to remove the User Guide.

Removing the User Guide using [Add/Remove Programs]

1. On [Start] menu, click [Control Panel].

2. Click [Add or Remove Programs].

3. Select the installed [Product name User Guide], and then click [Change/Remove].

4. Follow the instructions that appear to remove the User Guide.


Guide to Components

The names and functions of parts of the printer body, control panel, and options are explained.


1

Machine Body

This is a front view of the printer.

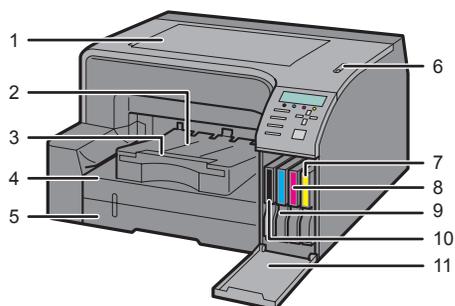

BAG027S

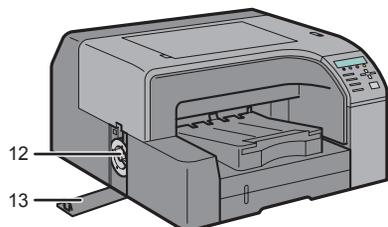

BAG034S

1. Top cover

Normally, keep this cover closed. If you cannot locate paper jams, or jammed paper cannot be removed easily, you can check the condition of paper from the top of the printer.

2. Tray 1 output ramp

Prints are delivered on top of the Tray 1 cover.

3. Tray 1 output ramp extension

Pull out when using large paper to keep the printed paper from falling.

4. Tray 1 cover

This is attached to Tray 1.

To load paper, lift off the Tray 1 cover.

5. Tray 1

Load paper here.

6. Envelope selector

For envelopes, set the lever to the rear position ; for everything else, set the lever to the forward position .

7. Print cartridge (yellow)

8. Print cartridge (magenta)

9. Print cartridge (cyan)

10. Print cartridge (black)

11. Right front cover

Normally, keep this cover close. Open to install or replace Print cartridges.

12. Paper feed wheel


Use to wind out paper jammed around the guide board.

13. Left cover


Normally, keep this cover closed. Open this cover when you need to turn the paper feed wheel.

Machine Rear

This is a rear view of the printer.

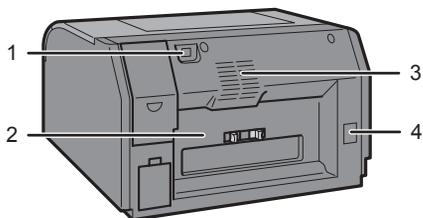

BAG002S

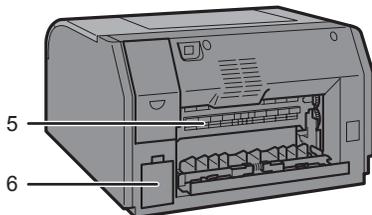

BAG004S

1. USB slot

Connect the USB cable from the computer here.

2. Rear Cover

Open this when paper is jammed inside the printer.

3. Vent

Air is vented here to prevent the inside of the printer from getting too warm. Do not lean anything against the vent or block it in any way. If the inside of the printer gets too warm, a breakdown could occur.

4. Power inlet

Plug the power cord.

Plug one end of the power cord into the printer's power inlet and the other end into a wall outlet.

Connect the grounding wire attached to the power plug directly to a grounding terminal.

5. Guide board

To remove paper that has jammed inside the printer, open the guide board by removing the rear cover.

6. Ink collector unit cover


The ink collector unit for storing ink is installed in the printer.

Be careful not to spill the ink.

Remove the ink collector unit only when necessary.

Control Panel

The illustrations in this manual show the **220-240V** model. The **120V** model may differ slightly from the illustrated model.

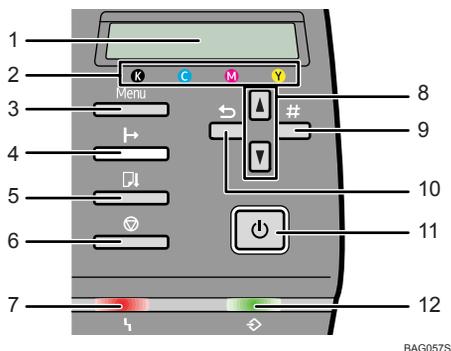

1. Display

Displays current printer status and error messages.

2. Print Cartridge End LED

Each LED corresponds to a print cartridge. From the left, the LEDs show the status of the black (K), cyan (C), magenta (M), and yellow (Y) cartridges.

3. [Menu] key

Press this key to make and check the current printer settings.

4. [↔Online] key

Indicates whether the printer is online or offline. Press this to switch between online and offline.

When the lamp is lit, the printer is online, enabling data reception from the host computer.

When the lamp is unlit, the printer is offline, disabling data reception from the host computer.

Press to return to the ready condition.

5. [Form Feed / Head-cleaning] key

When the printer is offline, press this to print all data left in the printer's input buffer.

You can use this to force the printer to print data received in the online status when the paper size or type does not match the actually set size or type.

If a message prompting you to remove the jammed paper by pressing the [Form Feed / Head-cleaning] key appears, press this key.

When the printer is offline, press and hold down the [Form Feed / Head-cleaning] key for three seconds to clean the cyan, magenta, yellow, and black print heads.

6. [Job Reset] key

When the printer is online, press this key to cancel an ongoing print job.

7. Alert indicator

Lights up whenever a printer error occurs. A red light indicates an error has occurred that makes printing impossible; the yellow light indicates a potential error during printing.

If the red light is on, follow the instructions that appear on the display.

8. [▲][▼] keys

Use these keys to increase or decrease values on the display when making settings.

Keep the key pressed to quicken scrolling, and increase or decrease values on the display in units of 10.

To apply this function: under [Maintenance], set [Key Repeat] to [On].

9. [#Enter] key

Press this key to execute menu items selected on the display.

10. [Escape] key

Press this key to return to the previous condition on the display.

11. [Power] key

- Press to turn the power on and off.
- To turn the power on, press and hold down the [Power] key for one second until it lights.
- After the power is turned on, the [Power] key will flash until the printer is ready for printing, at which point the key will stop flashing and remain lit.
- When the power is turned off, the key will blink slowly until the printer has completely shut down at which point the key will be dark.
- ⏻ means "standby". To avoid any power consumption, disconnect the power plug from the wall outlet.

12. Data In indicator

Blinks when the printer is receiving data from a computer. The Data In indicator is lit if there is data to be printed.

Reference

- For details about the Key Repeat, see p.113 "Performing Maintenance using the Control Panel (Maintenance Menu)".

Making Printer Settings Using the Control Panel

This section explains how to change the default settings of the printer and provides information about the parameters included in each menu. For details about procedures and settings, see the information under in [Reference](#).

Counter

Menu
Show Counter
Print

Paper Input

Menu
Tray Paper Size
Paper Type
Aut.Tray Select

List/Test Print

Menu
Config. Page

Maintenance

Menu
Nozzle Check
Head-cleaning
Head-flushing
Head Position
Adj.Paper Feed
Registration
Key Repeat

Menu
Paper Feed Test
De-condensation

System

Menu
Auto Continue
Sub Paper Size
Energy Saver
Notify by Email
Unit of Measure
Ink CU Replace
Env.Slctr.Alert

Host Interface

Menu
I/O Timeout
Network Setup
USB Setting

Language

Menu
Japanese
English
German
French
Italian

Menu
Dutch
Danish
Swedish
Norwegian
Spanish
Portuguese

Reference

- p.111 "Checking the Number of Printed Pages using the Control Panel (Counter Menu)"
- p.76 "Specifying the Paper Settings using the Printer's Control Panel (Paper Input Menu) "
- p.49 "Checking the Printer Status and Settings using the Printer's Control Panel (List/Test Print Menu) "
- p.113 "Performing Maintenance using the Control Panel (Maintenance Menu)"
- p.127 "Specifying System Settings using the Control Panel (System Menu)"
- p.57 "Specifying the Interface and Network Settings using the Printer's Control Panel (Host Interface Menu) "
- p.130 "Selecting the Control Panel Language"
- p.132 "Restricting Printer Functions"


Options

This section explains the names and functions of the various available options.

1

Network Interface Board Type GX3a

By installing this optional network interface board in the machine, you can print over the network.

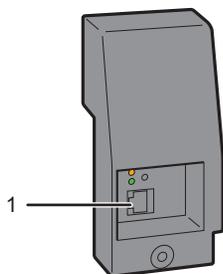

BAG001S

1. Ethernet Port

Use a network interface cable to connect the printer to a network.

Recommended Functions

This section lists useful and recommended functions.

1

Automatically selecting the tray for printing

See p.76 "Specifying the Paper Settings using the Printer's Control Panel (Paper Input Menu)".

Copy-guard of printed documents for preventing information leaks

See p.83 "Printing".

Notifying the printer status by e-mail on an occasion such as if the printer runs out of paper or paper is jammed

See p.97 "Notifying the Printer Status by E-mail".

2. Preparing for Printing

Setting Up the Hardware

This section explains how to install the printer.

Checking the Computer and Installation Area

The printer's location should be carefully chosen because environmental conditions greatly affect its performance.

The area where the printer is to be placed


★ Important

- To avoid malfunctions, position the machine away from the following:
 - direct sunlight
 - flow of air from air conditioners or heaters
 - radios, televisions, or other electronic devices
 - areas of high/low temperature and high/low moisture
 - humidifying appliances
 - oil stoves and ammonia-emitting appliances (such as diazo copiers)

Choose a flat, stable area to install the machine.


- The surface should be level within two degrees, left to right and front to back.
- To prevent condensation, install the machine in an area where temperature and humidity conditions do not exceed those indicated in the diagram below.
- The machine may cease to print if these limitations are exceeded.

220-240V

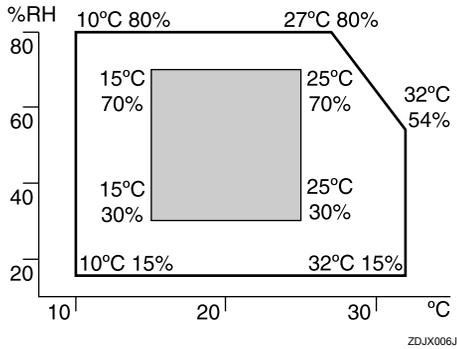


ZDJX006J

120V

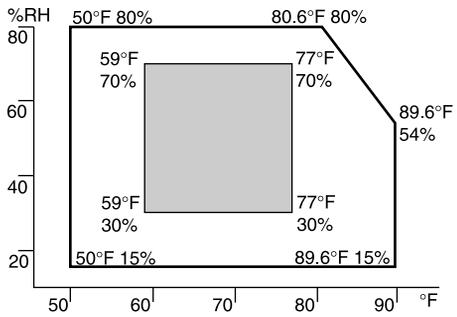

TS4K031E

- White area: Permissible Range
- Gray area: Recommended Range
- The diagram below shows the ideal clearance for loading paper, replacing print cartridges, and removing jammed paper

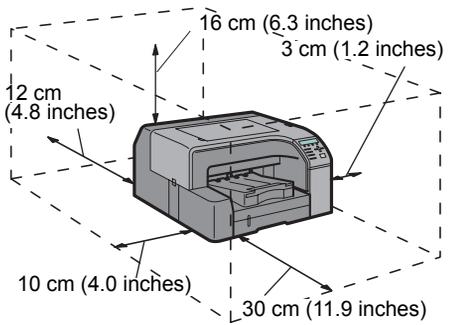

BAG024S

Check the power source

⚠ WARNING

- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.

- Place the machine on a strong and level surface. Otherwise, the machine might fall and cause personal injury.
- If you use the machine in a confined space, confirm that there is a continuous flow of air.
- Only connect the machine to the power source described on this sheet.
- Avoid multi-wiring.
- Connect the power cord directly into a wall outlet and never use an extension cord.
- Do not damage, break or make any modifications to the power cord. Do not place heavy objects on it. Do not pull it hard nor bend it more than necessary. These actions could cause an electric shock or fire.
- Do not plug or unplug the power cord with your hands wet. Otherwise, an electric shock might occur.
- Make sure the wall outlet is near the machine and freely accessible so that in event of an emergency it can be unplugged easily.

The power requirements of this machine are as follows:

220-240V

- 50/60 Hz, 0.45 A or more.

120V

- 50/60 Hz, 0.85 A or more.

Checking the Computer to be Connected

To use this printer, computers must meet the following specifications:

- PC/AT-compatible computer with USB or network interface
- Operating system: Windows 98/Me/2000/XP/Vista, Windows Server 2003, Windows NT 4.0 or later
- 80-100MB or more available hard disk space

Note

- For Windows NT 4.0, IE 4.0 or later is required.
- Windows NT 4.0 does not support USB connection. Connect your printer via a network in this case.
- USB connection is supported by Windows 98/Me/2000/XP/Vista and Windows Server 2003.
- USB connection speed under Windows 98/Me is USB 1.1 equivalent.
- To operate this printer, your computer must have at least the amount of memory necessary to run its operating system.
- The machine does not support Windows XP/Vista 64-Bit Edition or Windows Server 2003 64-Bit Edition.


Checking the Supplied Items and Unpacking the Printer

⚠ CAUTION

- The machine weighs around 13 kg (28.7 lb).
- To avoid injury to self and damage to the machine, lift the machine slowly and carefully by gripping the central areas near the base on both sides.
- Careless handling and over exertion when lifting can result in breakage and/or injury.

★ Important

- Do not turn the machine on until you have read how to do so.

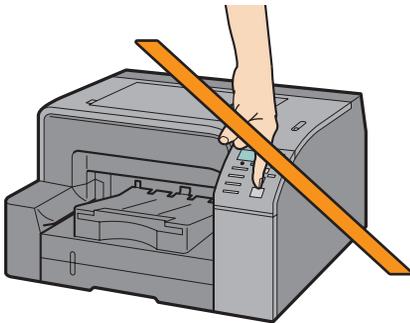

BAG010S

Open the box and take out all supplied items. Check that all the following items are present:


- Power Cord
- Starter cartridge - Cyan
- Starter cartridge - Magenta
- Starter cartridge - Yellow
- Starter cartridge - Black
- Quick Installation Guide
- Safety information
- CD-ROM; User Guide is included on this.

1. Take off the protective covering.

2. Remove the plastic bag.

3. Lift the printer and move it to the place where you want to install it.

Grip the indented area at the base of the printer's sides, as shown. Lift and carry the printer slowly and carefully.

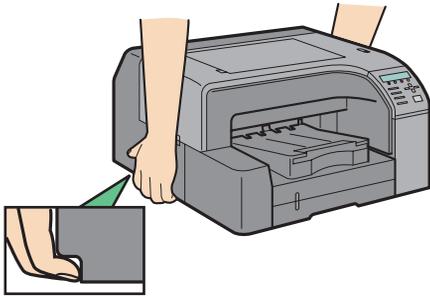

BAG030S

4. Remove the orange tape from the printer body.

↓ Note


- We recommend you keep the box, so you can use it again when relocating the printer.
- Remove all the orange tape, except the tape around the power cord.
- USB and LAN cables are not supplied.

Attaching the Options

Attaching the Network Interface Board Type GX3a

★ Important


- Before touching the network interface board, ground yourself by touching something metal to discharge any static electricity.
 - Do not subject the network interface board to impact or other physical stress.
1. Check the product and its supplied components.
 2. Make sure the printer's power cord is unplugged.
 3. Remove the cover.

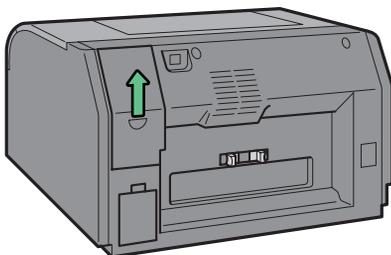

BAG006S


2

4. Check the network interface board's orientation, and then install the network interface board gently.

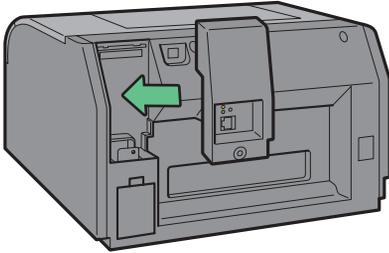

BAG007S

5. Secure the network interface board with the screw provided.

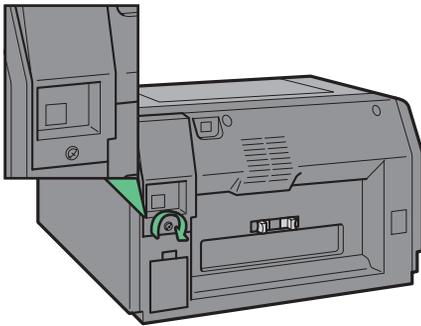

BAG003S

Note

- Be sure to push the network interface board fully into the printer.
- If the network interface board is not installed properly, repeat the entire installation procedure. If you cannot install it properly even after attempting reinstallation, contact your sales or service representative.
- Dispose of the removed component as general plastic waste or hand it in for collection.


Installing the Print Cartridges

CAUTION

- If ink comes into contact with your eyes, rinse immediately in running water. For other symptoms, consult a doctor.
- If ink is ingested, induce vomiting by drinking a strong saline solution. Consult a doctor immediately.
- If your skin comes into contact with ink, wash the affected area thoroughly with soap and water.
- Keep the ink or ink container out of reach of children.

★ Important

- Do not turn the machine on until you have read how to do so.

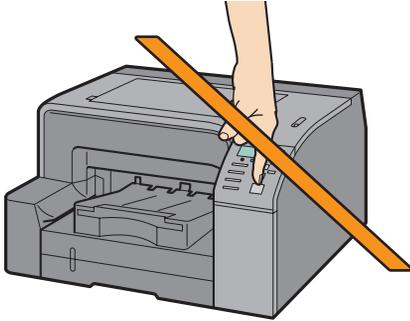


BAG010S


- Be sure to install the unused print cartridge that is supplied. Installing any other cartridge could result in incomplete ink filling and malfunction.

1. Remove the packaging from the print cartridges.

Do not touch the ink supply ports or silicon substrates of print cartridges.

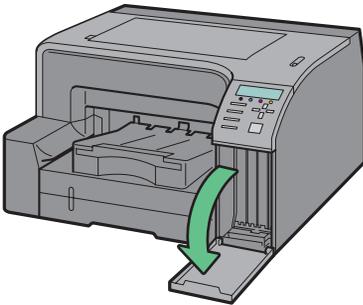2. Open the right front cover.

BAG035S

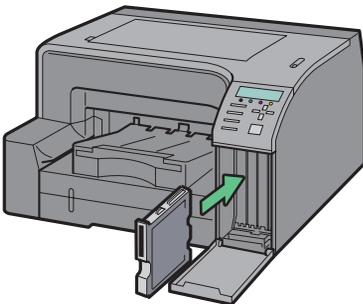
3. Check the orientation of each cartridge, and then install them gently.

BAG036S

Install in the following order from the left: black, cyan, magenta, and yellow.

2

4. Push in each cartridge by pressing on the PUSH area.
5. Repeat steps 3 to 4 for all four cartridges.
6. Close the right front cover.

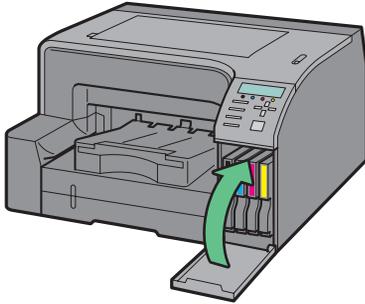

BAG026S

Plugging in the Power Cord and Turning the Power On

Before connecting the printer to a computer, connect the printer's power cord and switch the printer on.

WARNING


- Only connect the machine to the power source described on this sheet.
- Avoid multi-wiring.
- Connect the power cord directly into a wall outlet and never use an extension cord.
- Do not damage, break or make any modifications to the power cord. Do not place heavy objects on it. Do not pull it hard nor bend it more than necessary. These actions could cause an electric shock or fire.
- Do not plug or unplug the power cord with your hands wet. Otherwise, an electric shock might occur.

Important

- Do not handle the machine while the cartridge is being filled.
- Ink filling begins when the machine's power is switched on. Until the "Loading Ink..." message disappears from the control panel.

1. Remove the orange tape from around the power cord.


2. Plug the power cord fully into the printer.

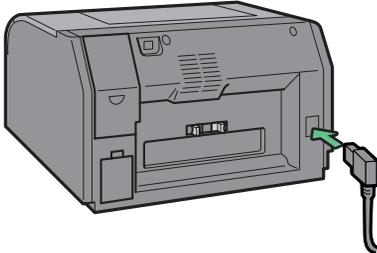

BAG033S

2

3. Plug the power cord fully into the wall outlet.

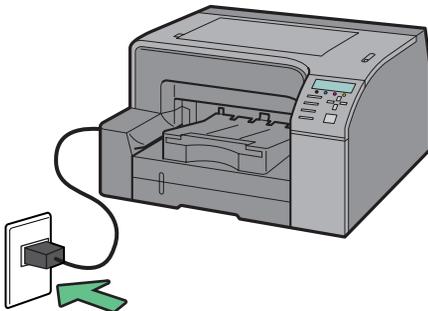


BAG037S

The surface should be level within two degrees.

Make sure the power cord is not trapped under the printer.

4. Press the [Power] key.

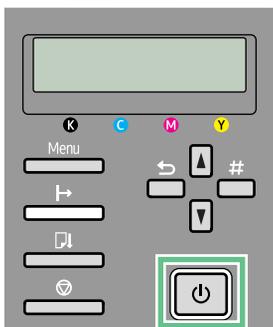

BAG052S

The printer starts feeding ink into its print-heads (taking approximately 6 minutes).

Make sure the "Ready" message is displayed on the control panel.

Do not switch off the power of the machine during this period. Make sure the plug is not removed from the wall outlet.

You might hear a clicking sound while the print heads are filling. This is not a malfunction. It will stop after a while.

Loading Paper

2

Load paper into the paper tray.

Note

- Load paper with the paper grain parallel to the feed direction.


Loading Paper into Tray 1

Follow the procedure below to load paper into tray 1.

A4/Letter size paper is loaded here.


Important

- Load A4/Letter size paper in  orientation.
1. Hold the Tray 1 grip, pull the tray halfway out, lift it slightly (①), and then pull it out further (②).

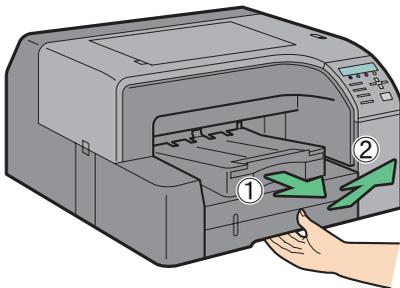


BAG020S

Pull tray 1 completely out. Take care not to drop it.

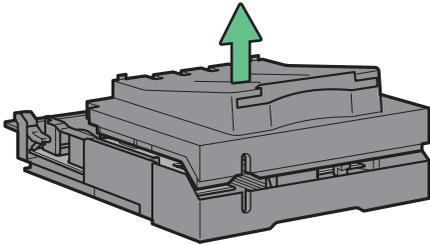2. Lift off the tray 1 cover.


BAG032S

Do not place the paper tray cover on top of the printer.

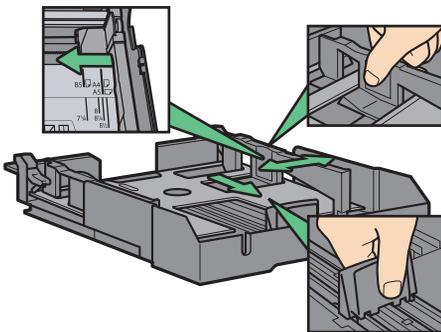3. While squeezing the catch on the paper guide, slide the guide so it is positioned according to the paper size.

BAG025S


Beforehand, make sure to squeeze the front end paper guide, and then expand the guide.

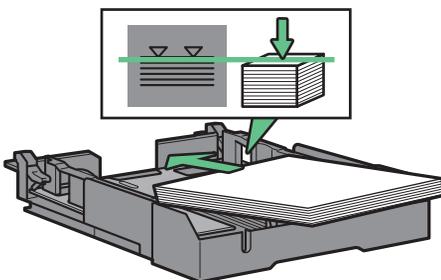4. Load paper with the print side face down but not over the limit mark.

BAG038S


5. Squeeze the front end paper guide, and then slide it to meet the edge of the paper.

2

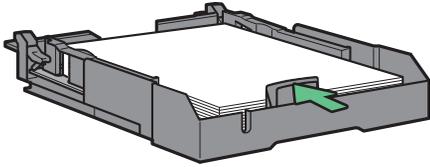


BAG039S

6. Re-attach the tray 1 cover.

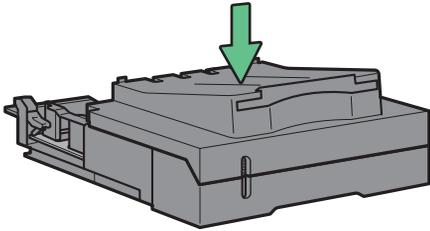

BAG031S

7. Push tray 1 gently in until it stops.

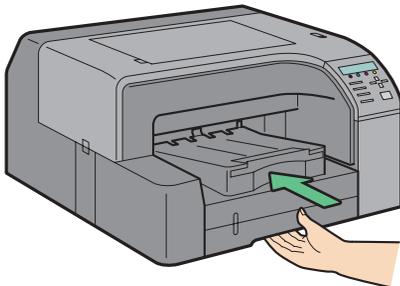

BAG015S

Printing a Configuration Page

After setting up the hardware and before connecting the printer to a computer, make a test print by printing the configuration page.


Printing the configuration page as a test print primes the print heads and allows you to check that the printer is functional.

You can also use the configuration page to check the printer's configuration and system settings.

★ Important

- The configuration page is printed on A4 or Letter (8 1/2" × 11") size paper, so load them in the same paper tray.

1. Press the [Menu] key.

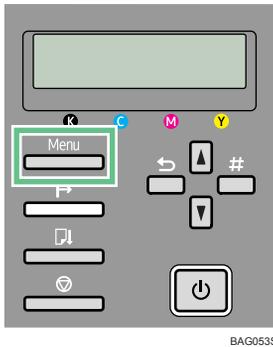

2. Press the [▲] or [▼] key to display [List/Test Print], and then press the [#Enter] key.

```
Menu:
List/Test Print
```

3. Press the [▲] or [▼] key to display [Config. Page], and then press the [#Enter] key.

```
List/Test Print:
Config. Page
```

The configuration page is printed.

The List/Test Print menu screen returns on completion of printing.

Check whether the print-head nozzles are clogged up or not by printing a nozzle check test pattern.

4. Hold the [Power] key down until the printer shuts down.

If you are connecting the printer to a computer via USB, proceed to p.40 "Connecting the Computer and Installing the Software (USB Connection)".

If you are connecting the printer to a network, proceed to p.44 "Connecting the Computer and Installing the Software (Network Connection)".

📖 Reference

- For details about printing a nozzle check test pattern, see p.114 "Nozzle Check".
- For details about the items on the configuration page, see p.49 "Checking the Printer Status and Settings using the Printer's Control Panel (List/Test Print Menu)".

Connecting the Computer and Installing the Software (USB Connection)

After setting up the hardware and making a test print, connect the printer to your computer. This section explains how to connect the printer to a computer using a USB cable, and how to install the software using "Quick Install".

Reference

- For details about the connection method, see p.50 "Confirming the Connection Method".
- For details about the installing the printer driver only, see p.52 "Installing the Printer Driver (USB)".

Before Installing the Software (USB)

Before installing the software, connect the printer to your computer using a USB cable.


Note

- Even if the computer that you are connecting the printer to via USB is networked, you can still connect the printer and computer according to the procedure explained in this section. For details about sharing the printer, see p.54 "Sharing the Printer".

Connecting the Printer via USB

1. Make sure the printer is off.


Do not turn the printer on until you have read how to do so.

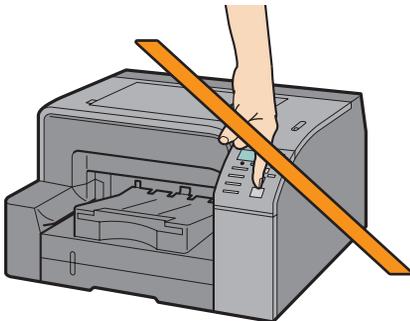

BAG010S

2. Turn on the power of the computer, and start Windows.

3. Remove the seal on the USB slot located on the rear of the printer, and then insert the USB cable's hexagonal (type B) plug firmly into the slot.

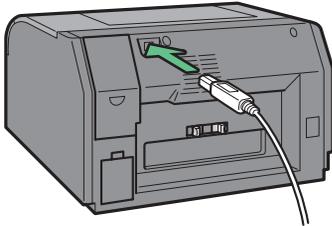

BAG040S

4. Insert the USB cable's rectangular (type A) plug firmly into the computer's USB slot.

Note


- Insert the USB cable's plug with the USB mark facing up.
- Make sure that the USB cable is fully inserted.
- Make sure the USB cable is connected properly, especially when the multi bypass tray is attached to the printer, because the tray makes connecting the cable difficult.

Quick Install for USB

Follow the procedure below to install the printer driver and User Guide.

Important

- Do not turn the printer on until you have read how to do so.

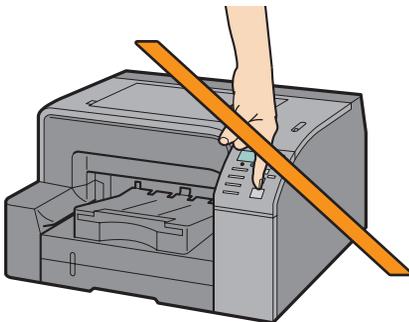

BAG010S

- To install under Windows 2000/XP/Vista, Windows Server 2003 or WindowsNT4.0, you must log on as a user with administrator rights.

Notes on the Installation (USB Connection)

If the message “Digital Signature Not Found” or the [Software Installation] , [Hardware Installation] or [Windows can't verify the publisher of this driver software] dialog box appears:

1. Click [Yes], [Continue Anyway] or [Install this driver software anyway] to continue the installation.

If the [Found New Hardware Wizard] dialog box appears:

1. Click [Install from a list or specific location (Advanced)], and then click [Next >].
2. Click [Include this location in the search], and then click [Browse].
3. Browse to “DRIVERS” on the CD-ROM, and then click [OK]. Select the folder appropriate for your operating system.

Be sure to clear the [Search remove media (floppy, CD-ROM...)] check box.

For details about the files stored on the CD-ROM labeled, see p.203 "Software on the CD-ROM".

1. Start Windows, and insert the provided CD-ROM into the CD-ROM drive.

Quit all applications currently running.

When you start Windows, the “Add New Hardware Wizard” may appear. If this happens, click [Cancel]. Check again that the power is off.

2. Select a language for the interface, and then click [OK].

3. Click [Quick Install for USB].

4. Read the entire license agreement carefully. If you accept its terms, click [I accept the agreement], and then click [Next >].

5. Check that the power of the printer is off, and then click [Next >].

6. Check again that the power of the printer is off, and then click [Next >].

Check that the dialog box below appears.

If the [Software Installation] or [Windows can't verify the publisher of this driver software] dialog box appears, see “Notes on the Installation”.

7. Make sure that the computer and printer are properly connected, and then press the [Power] key.

Installation starts.

If the connection to the computer was not confirmed, make the port settings again after installation is complete.

If the message “Digital Signature Not Found” or the [Found New Hardware Wizard] or [Hardware Installation] dialog box appears, see “Notes on the Installation”.

8. Select whether or not to open the printer status monitor automatically, and then click [Next >].

9. Check the installation result, and then click [Next >].

Install User Guide.

10. Click [Finish].

The printer driver and User Guide are now installed.

If the message "Digital Signature Not Found" or the [Found New Hardware Wizard] or [Hardware Installation] dialog box appears, see "Notes on the Installation".

↓ Note

- After inserting the CD-ROM, the [Drivers, Manual & Utilities] dialog box appears. If it does not, doubleclick the CD-ROM drive icon under [My Computer] or [Explorer], and then double-click [Setup.exe].
- When installation is complete, the User Guide icon appears on your desktop.
- If a message prompting you to restart the computer appears, restart the computer.
- Confirm the printer driver is correctly installed by checking the printer's [Power] key is lit, and then performing a test print.

Connecting the Computer and Installing the Software (Network Connection)

After setting up the hardware and making a test print, connect the printer to your computer. This section explains how to connect the printer when it is fitted with the optional network interface board to a computer via Ethernet cable, and how to use "Quick Install".

Reference

- For details about the connection method, see p.50 "Confirming the Connection Method".
- For details about the installing the printer driver only, see p.60 "Installing the Drivers for Network Connection".

Before Installing the Software (Network Interface Board)

Connect the printer and computer via Ethernet cable. Then, on the printer's control panel, specify the printer's network settings according to the network environment, and then install the software.


Connecting the Printer via the Network

Be sure to install all necessary network equipment, such as hubs, etc. before connecting the Ethernet cable to the printer.

You can connect a 10BASE-T or 100BASE-TX cable to the printer.

Important


- **Ethernet cables are not supplied with this printer. Select your cable according to the network environment.**
1. **Plug the Ethernet cable into the Ethernet port on the rear of the printer.**

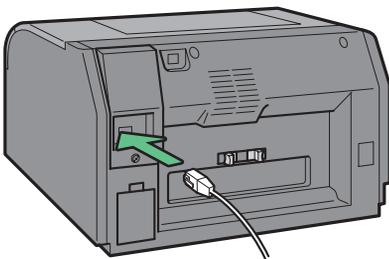

BAG051S

2. **Connect the other end of the cable to the printer's network, such as to a hub.**

Check the LEDs on the Ethernet port

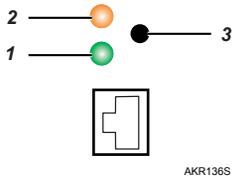

1. Indicator (green)

Remains green as long as the machine is properly connected to the network via 100 BASE-TX cable. Unlit if 10 BASE-T cable is connected.

2. Indicator (orange)

Lights whenever the printer is sending or receiving data via the network.

3. [Reset] key

Press this to initialize and reboot the network interface board.

Specifying Settings on the Control Panel

Make the following network settings according to the network interface you are using.

If you have connected the printer to a network, make the required network environment settings.


The following table shows the control panel settings and their default values. These items appear in the [Network Setup] menu.

Setting Name	Value
1.DHCP	On
2.IP Address	0.0.0.0
3.Subnet Mask	0.0.0.0
4.Gateway Address	0.0.0.0
5.Active Protocol	TCP/IP: Active
6.Ethernet Speed	Auto Select


The following example explains making settings for TCP/IP.

2

1. Press the [Power] key.

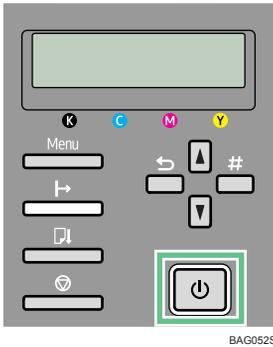


2. Press the [Menu] key.

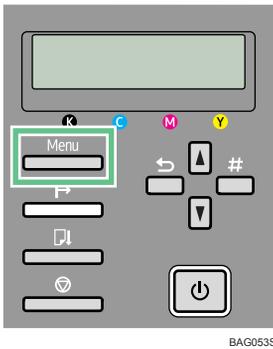

The Menu screen appears on the display.

3. Press the [▲] or [▼] key to display the [Host Interface] menu, and then press the [#Enter] key.

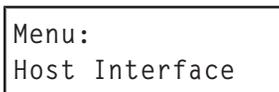

4. Press the [▲] or [▼] key to display [Network Setup], and then press the [#Enter] key.



5. Press the [▲] or [▼] key to select [IP Address], and then press [#Enter] key.



The current IP address appears on the display.

6. Press the [▲] or [▼] key to enter the left most entry field of the IP address, and then press the [#Enter] key.



■ . 0 . 0 . 0

To get an IP address for the printer, contact your network administrator.

The value moves by 10 if the [▲] or [▼] key is kept pressed.

When the [#Enter] key is pressed, the cursor moves to the next field.

7. Press the [#Enter] key.

As the specified value is entered in each field, the cursor moves to the next field.

IP Address:
192. ■ . 0 . 0

8. Repeating the steps, specify values in all fields, and then press the [#Enter] key.

To return to the previous field, press the [Escape] key.

9. Specify "Subnet Mask" and "Gateway Address" in the same way as when specifying the IP address.

10. After you have made all the settings, press the [Online] key.

The specified settings are set and the initial printer screen reappears.

You can print the configuration page to confirm the specified settings.

Reference

- For details about how to print a configuration page, see p.38 "Printing a Configuration Page".

Quick Install for Network

Follow the procedure below to install the printer driver, User Guide, and DeskTopBinder - SmartDeviceMonitor for Client.

Important

- If the version of SmartDeviceMonitor for Client already installed in the computer is newer than that on the CD-ROM, you cannot use "Quick Install" to install the printer driver. Install the printer driver, and then create the port.
- To install under Windows 2000/XP/Vista, Windows Server 2003 or WindowsNT4.0, you must have an account that has Manage Printers permission. Log on as an Administrator.

Notes on the Installation (Network Connection)

If the message "Digital Signature Not Found" or the [Software Installation], [Hardware Installation] or [Windows can't verify the publisher of this driver software] dialog box appears:

1. Click [Yes], [Continue Anyway] or [Install this driver software anyway] to continue the installation.

1. Start Windows, and insert the provided CD-ROM into the CD-ROM drive.

Quit all other applications currently running.

2. Select a language for the interface, and then click [OK].
3. Click [Quick Install for Network].
4. Read the entire license agreement carefully. If you accept its terms, click [I accept the agreement], and then click [Next >].
5. The search for the network printer starts. If the selection dialog box appears, select the model of printer you want to use, and then click [Install].

Installation starts.

If the [Software Installation], or [Windows can't verify the publisher of this driver software] dialog box appears, see "Notes on the Installation".

If the printer cannot be found and only "Printer Port" appears in the printer selection dialog box, either the printer's IP address has not been specified or the computer and printer are not on the same network segment. Before installing the software, check the printer's IP address and the network topology. Otherwise, select "Printer Port" in the dialog box, and then install the printer driver. If you do this, SmartDeviceMonitor for Client will not be simultaneously installed, so install it afterwards, and then configure the port.

If the message "Digital Signature Not Found" or [Hardware Installation] dialog box appears, see "Notes on the Installation".

6. Click [Finish].

The printer driver, User Guide, and DeskTopBinder - SmartDeviceMonitor for Client are now installed.

Note

- After inserting the CD-ROM, the [Drivers, Manual & Utilities] dialog box appears. If it does not, doubleclick the CD-ROM drive icon under [My Computer] or [Explorer], and then double-click [Setup.exe].
- When installation is complete, the User Guide icon appears on your desktop.
- If a message prompting you to restart the computer appears, restart the computer.
- Confirm the printer driver is correctly installed by checking the printer's [Power] key is lit, and then performing a test print.

Checking the Printer Status and Settings using the Printer's Control Panel (List/Test Print Menu)

Using the List/Test Print menu on the control panel, you can print a configuration page to check whether the printer is working properly and to ascertain the printer's status and settings.

Config. Page

You can print the current configuration of the printer.

Reference

- For details about how to print a configuration page, see p.38 "Printing a Configuration Page".

Interpreting the Configuration Page

System Reference

Information such as the printer's version, attached options, printer language name, and remaining amount of ink are printed in this area.

Unlike [Counter] displayed on the machine's control panel, the "Total Counter" numbers include test patterns printed using "Maintenance", system configurations printed using "List/Test Print", and counter printouts made using "Counter".

Paper Input

The specified [Tray Priority] setting and the specified settings in the Paper Input Menu, such as the size and type of paper loaded in tray 1, are printed in this area.

Host Interface, Interface Information

The specified settings in the Host Interface Menu are printed in this area.

Confirming the Connection Method

This printer supports local and network connection.

Before installing the drivers, check how the printer is connected. Follow the driver installation procedure that is appropriate to the connection method.

2

Local Connection

If the printer is connected via USB, install the necessary software by inserting the supplied CD-ROM into your computer and then clicking [Quick Install for USB].

Installation Key	Installed Software
Quick Install for USB	<ul style="list-style-type: none"> • Printer driver • User Guide
Printer Driver	Printer driver
User Guide	User Guide
DeskTopBinder - SmartDeviceMonitor for Client	DeskTopBinder - SmartDeviceMonitor for Client

Network Connection

If the printer is connected via the network, install the necessary software by inserting the supplied CD-ROM into your computer and then clicking [Quick Install for Network], [Printer Driver], and [DeskTopBinder - SmartDeviceMonitor for Client].

Installation Key	Installed Software
Quick Install for Network	<ul style="list-style-type: none"> • Printer driver • User Guide • DeskTopBinder - SmartDeviceMonitor for Client
Printer Driver	Printer driver
User Guide	User Guide
DeskTopBinder - SmartDeviceMonitor for Client	DeskTopBinder - SmartDeviceMonitor for Client

↓ Note

- Once the settings are complete, the printer becomes ready for use.

- With a network connection, you can use the Windows printer port to send print jobs to the printer directly (peer-to-peer transfer) or use the printer as a network printer and send print jobs to the printer from a client computer via a print server.

Reference

- p.61 "Using the SmartDeviceMonitor for Client Port"
- p.65 "Using as the Windows Network Printer"
- p.67 "Installing the DeskTopBinder - SmartDeviceMonitor for Client"
- p.47 "Quick Install for Network"
- p.41 "Quick Install for USB"

Installing the Printer Driver (USB)


This section explains how to install only the printer driver when the printer is connected to a computer via USB.

If you installed the printer driver by performing Quick Install for USB, there is no need to install it again here.

2

★ Important

- To install the printer driver under Windows 2000/XP/Vista or Windows Server 2003, you must log on as a user with administrator rights.
- Do not turn on the power at this point.

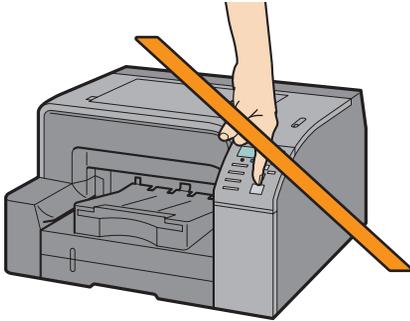

BAG010S

The following explanation uses Windows XP as an example. Procedures under other operating systems may differ.

Screens vary according to the operating environment.

1. Start Windows, and insert the provided CD-ROM into the CD-ROM drive.

Quit all other applications currently running.

When you start Windows, the Add New Hardware Wizard may appear. If this happens, click [Cancel]. Check again that the power is off, and then proceed to step 2.

After inserting the CD-ROM, the [Driver, Manual & Utility] dialog box appears. If it does not, double-click the CD-ROM drive icon under [My Computer] or [Explorer], and then double-click [SETUP.EXE].


If the [Driver, Manual & Utility] screen does not appear even when you double-click the [SETUP.EXE] icon, or if an error occurs during installation, access the CD-ROM drive from [My Computer] or [Explorer], double-click the [English] icon, and then install the printer driver by following the instructions that appear on the screen.

2. Select a language for the interface, and then click [OK].

3. Click [Printer Driver].

4. Read the entire license agreement carefully. If you accept its terms, click [I accept the agreement], and then click [Next >].
5. Click [Connected with USB cable], and then click [Next >].
6. Check again that the power of the printer is off, and then click [Next >].
Check that the dialog box below appears.
7. Make sure that the computer and printer are properly connected, and then press the [Power] key.

2

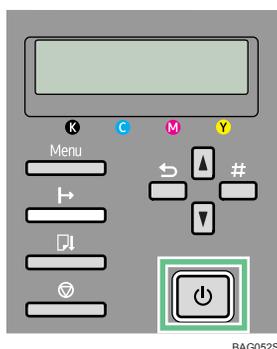

Installation starts.

8. Select whether or not to open the Status monitor automatically, and then click [Next >].
9. Check the installation result, and then click [Finish].

↓ Note

- You cannot select [Connected with USB cable] under Windows NT 4.0.
- If the message "Digital Signature Not Found" or the [Found New Hardware Wizard] or [Hardware Installation] dialog box appears:
 - Click [Yes], [Continue Anyway] or [Install this driver software anyway] to continue the installation.
- If the message prompting you to restart the computer appears, restart the computer.
- Confirm the printer driver is correctly installed by checking that the [Power] key of the printer is lit and performing a test print.
- To perform a test print, open the printer properties dialog box, click [Print Test Page] on the [Maintenance] tab.
- To specify a USB port for sharing the printer on a server running Windows Firewall, add the port to Windows Firewall before using Status Monitor.
 1. On Windows Firewall dialog box, click the [Exception] tab, and then select the [File and Print Sharing] check box.
 2. Click [Add Port...], make sure [TCP] is selected, and then enter "55665" in [Port number].

Reference

- For details about installing User Guide only, see Setup p.13 "Installing User Guide".
- For details about sharing the printer, see p.54 "Sharing the Printer".
- p.177 "If a Message Appears during Installation"
- p.150 "If Test Print Fails"

2

Sharing the Printer

This section explains how to share the printer over a network by connecting it via USB to a computer acting as a print server.

Setting Up a Server

Follow the procedure below to set up a print server so that the printer can be shared by users.

Important

- For Windows 2000/XP/Vista, Windows Server 2003, and Windows NT 4.0, log on as an administrator (a user with an administrator right).

Configure a computer connected to the printer as the print server.

The print server is a computer used to manage the shared printer on the network.

1. On the [Start] menu, click [Control Panel].
2. Click [Network and Internet Connections].
3. Click [Network Connections].
4. Click [Local Area Connection] to highlight it, and then, in the [File] menu, click [Properties].
5. Select the [Client for Microsoft Networks] check box.
6. Click [OK].
7. Install the printer driver.
8. On the [Start] menu, click [Printers and Faxes].
9. Click the icon of the printer, and then click [Sharing...] on the [File] menu.
10. Click [Share this printer], and then enter a name in the [Share name] box.
11. Click [OK].

Note

- Configure a computer connected to the network, where the print server is connected, as a client computer.

Reference

- p.55 "Setting Up a Client Computer"

Setting Up a Client Computer

Follow the procedure below to configure a computer as a client computer and connect it to the shared printer. Make this setting when installing the printer driver from the CD-ROM provided.

2**Important**

- For Windows 2000/XP/Vista, Windows Server 2003, and Windows NT 4.0, log on as an administrator (a user with an administrator right).

Configure a computer connected to the network where the print server is connected.

1. Start Windows, and then insert the "Driver, Manual & Utility" CD-ROM into the CD-ROM drive.

Quit all other applications currently running.

When starting Windows, a wizard for adding new hardware may open. If this happens, click [Cancel]. Check again that the power is off.

2. Select a language for the interface, and then click [OK].
3. Click [Printer Driver].
4. Read the entire license agreement carefully. If you accept its terms, click [I accept the agreement], and then click [Next >].
5. Click [Connected via LAN].
6. Click [Next >].
7. Click the plus mark next to a printer name.
8. Click [Port:< LPT1: >] under [Printer name:].
9. Click [Add].
10. Click [Network Printer].
11. Click [OK].
12. Select a shared printer.
13. Click [OK].
14. Check that [<\servername\sharedprintername>] appears after [Port:].
15. Click [Continue].
Installation starts.
16. Select whether or not to open the Status monitor automatically.
17. Click [Next >].
18. Check the installation result, and then click [Finish].

 **Note**

- When the CD-ROM is inserted, the [Driver, Manual & Utility] dialog box appears. If it does not, double-click the CD-ROM drive icon under [My Computer] or [Explorer], and then double-click [SETUP.EXE].
- If the message prompting you to restart the computer appears, restart the computer.

Specifying the Interface and Network Settings using the Printer's Control Panel (Host Interface Menu)

In the Host Interface menu, you can make network settings and settings for the computer to printer USB connection (if used). Settings made using the Host Interface menu remain effective even if you turn the printer off.

To configure the printer's network settings, use "Network Setup" on the printer's control panel.

I/O Timeout

Specify how long the printer waits for the currently-connected interface to respond. When the specified time elapses, the printer can receive data from another interface.

If you make the I/O Timeout period too short, timeout might occur while data transfer is in progress. If this happens, the print job will be interrupted by a new job from another interface.

- 10 seconds
- 15 seconds
- 20 seconds
- 25 seconds
- 60 seconds

Default: 15 seconds

Network Setup

You can make network-related settings.

DHCP

You can specify the DHCP.

- On
- Off

Default: On

IP Address

You can specify the IP address.

When DHCP is set to on, the IP address cannot be changed. To change it, set DHCP to off.

Contact your network administrator for information about the network configuration.

Default: 0.0.0.0

Subnet Mask

You can specify the subnet mask.

When DHCP is set to on, the subnet mask cannot be changed. To change it, set DHCP to off. Contact your network administrator for information about the network configuration.

Default: 0.0.0.0

Gateway Address

You can specify the gateway address.

When DHCP is set to on, the gateway address cannot be changed. To change it, set DHCP to off. Contact your network administrator for information about the network configuration.

Default: 0.0.0.0

Active Protocol

You can select the active protocol.

- TCP/IP

Default: Active

Ethernet Speed

You can select the network speed to operate the printer.

- Auto Select
- 10Mbps Half D.
- 10Mbps Full D.
- 100Mbps Half D.
- 100Mbps Full D.

Default: Auto Select

USB Setting

You can specify the settings related to communication when the computer and printer are connected via USB. Usually, you do not need to change these settings.

After changing this setting, turn the machine off and then back on.

USB Speed

- Full Speed
- Auto

Default: Auto

Port Setting


- On
- Off

Default: Off

Changing the Host Interface Menu

This section gives an example of changing a setting in the Host Interface menu.

1. Press the [Menu] key.

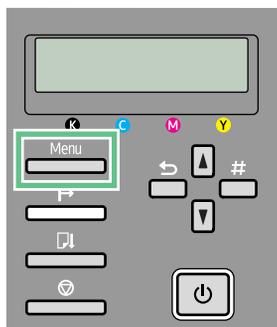

BAG053S

2. Press the [▲] or [▼] key to display [Host Interface], and then press the [#Enter] key.

```
Menu:
Host Interface
```

3. Press the [▲] or [▼] key to display [I/O Timeout], and then press the [#Enter] key.

```
Host Interface:
I/O Timeout
```

4. Press the [▲] or [▼] key to display [20 seconds], and then press the [#Enter] key.

```
I/O Timeout:
20 seconds
```

The [Host Interface] menu appears.

5. Press the [Online] key.

The initial screen appears.

Installing the Drivers for Network Connection


This section explains how to install the printer driver for a network printer and configure it according to the printer port.

Using this Printer as the Windows Printing Port

2

Network connections can be established through Ethernet.

Available ports are determined based on the combination of Windows operating system version and connection method used.

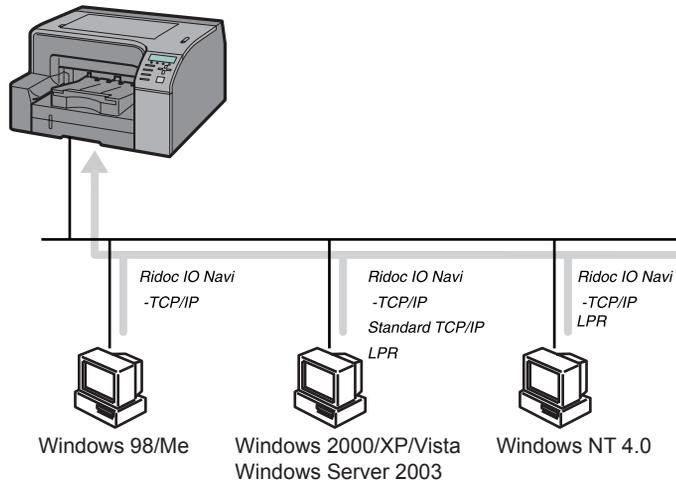

BAG041S

Windows 98/Me

Connection Method	Available Ports
Ethernet	SmartDeviceMonitor for Client port

Windows 2000/XP/Vista, Windows Server 2003


Connection Method	Available Ports
Ethernet	SmartDeviceMonitor for Client port Standard TCP/IP port LPR port

Windows NT 4.0

Connection Method	Available Ports
Ethernet	SmartDeviceMonitor for Client port LPR port

Using as a Network Printer

This printer can be used as the Windows network printer.

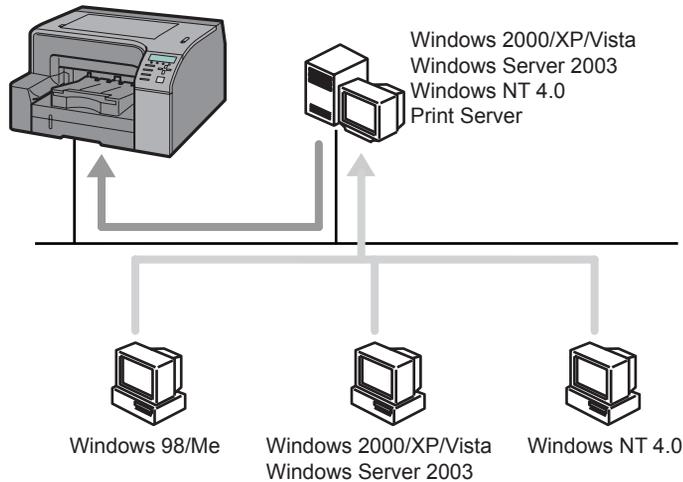

BAG042S

Reference

- p.65 "Using as the Windows Network Printer"

Installing the Printer Driver (Network)

Using the SmartDeviceMonitor for Client Port

This section explains how to install the printer driver (TCP/IP) and set up the SmartDeviceMonitor for Client port.

To use the SmartDeviceMonitor for Client port, you need to install the SmartDeviceMonitor for Client.

Important

- To install this printer driver under Windows 2000/XP Professional/Vista, Windows Server 2003, and Windows NT 4.0, you must have an account that has Manage Printers permission. Log on as an Administrators or Power Users group member.

1. Start Windows, and then insert the provided CD-ROM into the CD-ROM drive.

Quit all applications currently running.

2. Select an interface language, and then click [OK].

3. Click [Printer Driver].

The software license agreement appears in the [<License Agreement>] dialog box.

4. Read the entire license agreement carefully. If you accept its terms, click [I accept the agreement], and then click [Next >].

5. Click [Connected via LAN].

6. Double-click the printer name to display the printer settings.

The details shown in [Comment:], [Driver:], and [Port:] vary depending on the operating system, printer model, and port.

7. Click [Port:], and then click [Add].

8. Click [SmartDeviceMonitor], and then click [OK].

9. Click [TCP/IP], and then click [Search].

A list of printers using TCP/IP appears.

10. Select the printer you want to use, and then click [OK].

Only printers that respond to a broadcast from the computer appear. To use a printer not listed here, click [Specify Address], and then enter the IP address or host name of the printer.

Under Windows 98/Me, you cannot add an IP address partially similar to the one already used. For example, if "192.168.0.2" is in use, "192.168.0.2xx" cannot be used. Similarly, if "192.168.0.20" is in use, "192.168.0.2" cannot be used.

11. Check that the port of the selected printer is displayed in [Port:].

12. Select the [Default Printer] check box to configure the printer as default.

13. Click [Continue].

Installation starts.

14. Select whether or not to open the Status monitor automatically.

15. Click [Next >].

16. Click [Finish] in the installation completion dialog box.

A message about restarting the computer may appear. Restart the computer to complete installation.

Note

- A message about restarting the computer may appear. Restart the computer to complete installation.
- If the message "Digital Signature Not Found" or the [Software Installation], [Hardware Installation] or [Windows can't verify the publisher of this driver software] dialog box appears:
 - Click [Yes], [Continue Anyway] or [Install this driver software anyway] to continue the installation.

Reference

- A message appears if there is a newer version of the printer driver already installed. If there is, you cannot install the printer driver using Auto Run. If you still want to install the printer driver, use [Add Printer]. See p. 177 "If a Message Appears during Installation".

Using the Standard TCP/IP Port

2

This section explains how to install the printer driver (TCP/IP) and set up the Standard TCP/IP Port.

Important

- **To install printer driver under Windows 2000/XP Professional/Vista, and Windows Server 2003, you must have an account that has Manage Printers permission. Log on as an Administrators or Power Users group member.**
1. **Start Windows, and then insert the provided CD-ROM into the CD-ROM drive.**
Quit all applications currently running.
 2. **Select an interface language, and then click [OK].**
 3. **Click [Printer Driver].**
The software license agreement appears in the [<License Agreement>] dialog box.
 4. **Read the entire license agreement carefully. If you accept its terms, click [I accept the agreement], and then click [Next >].**
 5. **Click [Connected via LAN].**
 6. **Double-click the printer name to display the printer settings.**
The details shown in [Comment:], [Driver:], and [Port:] vary depending on the operating system, printer model, and port.
 7. **Click [Port:], and then click [Add].**
 8. **Click [Standard TCP/IP], and then click [OK].**
Configure the Standard TCP/IP port settings, and then see Windows Help if [Standard TCP/IP Port] does not appear.
 9. **Click [Next >] in the [Add Standard TCP/IP Printer Port Wizard] dialog box.**
 10. **Enter the printer name or IP address in the [Printer Name or IP Address] box.**
The [Port Name] text box automatically obtains a port name. Change this name if necessary.
When screen for Device selection appears, select "RICOH Network Printer Driver C Model".
 11. **Click [Finish] in the [Add Standard TCP/IP Printer Port Wizard] dialog box.**
The installation start dialog box reappears.
 12. **Check that the port of the selected printer is displayed in [Port:].**

13. Configure the default printer as necessary.

14. Click [Continue].

The printer driver installation starts.

15. Select whether or not to open the Status monitor automatically.

16. Click [Next >].

17. Click [Finish] in the installation completion dialog box.

A message about restarting the computer may appear. Restart the computer to complete installation.

Note

- If the message "Digital Signature Not Found" or the [Software Installation], [Hardware Installation] or [Windows can't verify the publisher of this driver software] dialog box appears:
 - Click [Yes], [Continue Anyway] or [Install this driver software anyway] to continue the installation.
- A message about restarting the computer may appear. Restart the computer to complete installation.

Reference

- A message appears if there is a newer version of the printer driver already installed. If there is, you cannot install the printer driver using Auto Run. If you still want to install the printer driver, use [Add Printer]. See p. 177 "If a Message Appears during Installation".

Using the LPR Port

This section explains how to install the printer driver (TCP/IP) and set up the LPR Port.

Important

- **To install this printer driver under Windows 2000/XP Professional/Vista, Windows Server 2003, and Windows NT 4.0, you must have an account that has Manage Printers permission. Log on as an Administrators or Power Users group member.**

1. Start Windows, and then insert the provided CD-ROM into the CD-ROM drive.

Quit all applications currently running.

2. Select an interface language, and then click [OK].

3. Click [Printer Driver].

The software license agreement appears in the [<License Agreement>] dialog box.

4. Read the entire license agreement carefully. If you accept its terms, click [I accept the agreement], and then click [Next >].

5. Click [Connected via LAN].

6. Double-click the printer name to display the printer settings.

The details shown in [Comment:], [Driver:], and [Port:] vary depending on the operating system, printer model, and port.

7. Click [Port:], and then click [Add].

8. Click [LPR Port], and then click [OK].

If [LPR Port] does not appear, see Windows Help and install it.

9. Enter the printer's IP address in the [Name or address of server providing lpd] box.

10. Enter "lp" in the [Name or address of server providing lpd] box, and then click [OK].

The port is added.

11. Check that the port of the selected printer is displayed in [Port:].

12. Configure the default printer as necessary.

13. Click [Continue].

The printer driver installation starts

14. Select whether or not to open the Status monitor automatically.

15. Click [Next >].

16. Click [Finish] in the installation completion dialog box.

↓ Note

- If the message "Digital Signature Not Found" or the [Software Installation], [Hardware Installation] or [Windows can't verify the publisher of this driver software] dialog box appears:
 - Click [Yes], [Continue Anyway] or [Install this driver software anyway] to continue the installation.
- A message about restarting the computer may appear. Restart the computer to complete installation.

📖 Reference

- A message appears if there is a newer version of the printer driver already installed. If there is, you cannot install the printer driver using Auto Run. If you still want to install the printer driver, use [Add Printer]. See p.177 "If a Message Appears during Installation".

Using as the Windows Network Printer

This section assumes that the client has already been configured to communicate with a Windows 2000/XP/Vista, Windows Server 2003, or Windows NT 4.0 print server. Do not begin the following procedure before the client is set up and configured correctly.

To use the print server, install the printer driver by selecting "Network printer server", and then select the Windows 2000/XP/Vista, Windows Server 2003, or Windows NT 4.0 shared printer.

★ Important

- To install printer driver under Windows 2000/XP Professional/Vista, Windows Server 2003, and Windows NT 4.0, you must have an account that has Manage Printers permission. For this, log on as an Administrators or Power Users group member.
- If you print with a print server connected to the printer using the SmartDeviceMonitor port, Recovery Printing and Parallel Printing cannot be used from the client.

2

- If you print with a Windows XP/Vista or Windows Server 2003 print server, notification functions of SmartDeviceMonitor may not be used with the client.
- If you print with a Windows NT 4.0 print server, install the printer driver before you connect the print server to the printer.

1. Start Windows, and then insert the provided CD-ROM into the CD-ROM drive.

Quit all applications currently running.

2. Select an interface language, and then click [OK].

3. Click [Printer Driver].

The software license agreement appears in the [<License Agreement>] dialog box.

4. Read the entire license agreement carefully. If you accept its terms, click [I accept the agreement], and then click [Next >].

5. Click [Connected via LAN].

6. Select the [Printer Name:] check box to select the printer models you want to use.

The printer name can be changed in the [Change settings for 'Printer Name'] box.

7. Double-click the printer name to display the printer settings.

The details shown in [Comment:], [Driver:], and [Port:] vary depending on the operating system, printer model, and port.

8. Click [Port:], and then click [Add].

9. Click [Network Printer], and then click [OK].

10. Double-click the computer name you want to use as a print server in the [Browse for Printer] window.

11. Select the printer you want to use, and then click [OK].

12. Check that the port of the selected printer is displayed in [Port:].

13. Configure the user code as necessary.

For an RPCS raster printer driver, a user code can be set after the printer driver installation. For information about user code, see the printer driver Help.

14. Select the [Default Printer] check box to configure the printer as default.

15. Click [Continue].

The printer driver installation starts.

16. Click [Finish] in the installation completion dialog box.

Note

- If the message “Digital Signature Not Found” or the [Software Installation], [Hardware Installation] or [Windows can't verify the publisher of this driver software] dialog box appears:
 - Click [Yes], [Continue Anyway] or [Install this driver software anyway] to continue the installation.

- A message about restarting the computer may appear. Restart the computer to complete installation.

Reference

- A message appears if there is a newer version of the printer driver already installed. If there is, you cannot install the printer driver using Auto Run. If you still want to install the printer driver, use [Add Printer]. See p. 177 "If a Message Appears during Installation".
- p.54 "Setting Up a Server"

Installing the DeskTopBinder - SmartDeviceMonitor for Client

Follows the procedure below to install the Installing DeskTopBinder - SmartDeviceMonitor for Client.

Important

- To install SmartDeviceMonitor for Client under Windows 2000/XP Professional/Vista, Windows Server 2003, and Windows NT 4.0, you must have an account that has Manage Printers permission. Log on as an Administrator.
- Install SmartDeviceMonitor for Client before installing the printer driver when using the SmartDeviceMonitor for Client port.

You can install SmartDeviceMonitor for Client in either of the following two ways:

Full install

Installs all modules.

Custom Install

You can select which modules to install.

This section explains the procedure for Full install.

1. **Start Windows, and then insert the provided CD-ROM into the CD-ROM drive.**
Quit all applications currently running.
2. **Select an interface language, and then click [OK].**
3. **Click [DeskTopBinder - SmartDeviceMonitor for Client].**
4. **Select the language to be used for installation, and then click [Next >].**
5. **Click [Next >].**
6. **The software license agreement appears in the [<License Agreement>] dialog box. After reading through its contents, click [Yes] to accept it.**
7. **Click [Full install].**
8. **Select the folder in which you want to install the files, and then click [Next >].**
9. **Register the Program folder.**
10. **Click [Next >].**

11. Check the specified setting, and then click [Next >].

12. Click [Complete].

If you are required to restart the computer after installing SmartDeviceMonitor for Client, restart the computer.

Note

- After inserting the CD-ROM, the “Drivers, Manual & Utilities” dialog box appears. If it does not, doubleclick the CD-ROM drive icon under [My Computer] or [Explorer], and then double click [Setup.exe].

Paper

This section explains the available paper types and how to load paper.

Compatible Paper Types

2

You can use various types of paper.

- Plain paper
This paper is normally used for copying and printing. Unlike inkjet plain paper or glossy paper, it is uncoated.
- Inkjet plain paper
This extra-white plain paper makes the printed colors appear more vivid. Since it does not have an ink-absorbent coating, you can write on it and use it for photocopying, just like regular plain paper.
- Glossy paper
This machine prints best on glossy paper for laser. For details the types of glossy paper, contact your sales or service representative.
- Envelopes
For details about the types of envelope that can be used, see Paper Handling Precautions.

Reference

- p.70 "Paper Handling Precautions"

Loadable Paper Sizes and Quantities

You can load the paper of the following size and number in tray 1.

Tray 1

Type	Size	Paper capacity
Plain / Inkjet Plain Paper	A4 (210 × 297 mm) 	Maximum paper capacity: 250 sheets
	A5 (148 × 210 mm) 	
	A6 (105 × 148 mm) 	Maximum paper output capacity: 150 sheets
	B5 JIS (182 × 257 mm) 	
	Letter (8 ¹ / ₂ " × 11") 	
	8 ¹ / ₂ " × 5 ¹ / ₂ " 	
	Executive (7 ¹ / ₄ " × 10 ¹ / ₂ ") 	
16K 		

Type	Size	Paper capacity
	Custom paper sizes Vertical: 139.7-297.0 mm (5.50-11.69 inch), Horizontal: 88.0- 216.0 mm (3.46-8.50 inch)	
Glossy Paper	A4 (210 × 297 mm) 	Maximum paper capacity: 250 sheets Maximum paper output: 1 sheets
Envelope	Com10 Envelope (4 ¹ / ₈ " × 9 ¹ / ₂ ")  Monarch Envelope (3 ⁷ / ₈ " × 7 ¹ / ₂ ")  C6 Envelope (114 × 162 mm)  C5 Envelope (162 × 229 mm)  DL Envelope (110 × 220 mm) 	Maximum paper capacity: 20 sheets Maximum paper output capacity: 20 sheets

Paper Handling Precautions


To ensure optimum print results, take care when handling paper before and after printing.

Loading Precautions

To ensure correct printing, handle the paper carefully.


Cautions when Loading Paper

- Pull the tray completely out before loading it with paper.
- Load only supported paper in the paper tray.
- Load paper with the print side face down in the paper trays.
- Load paper with the paper grain parallel to the feed direction.
- Do not load paper of different types at the same time.
- To load a different type of paper than that already loaded, first remove all currently loaded paper.
- Do not stack paper over the limit mark.

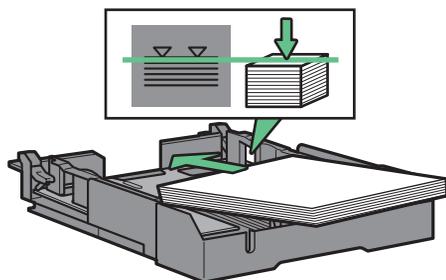


BAG038S

- Curled paper may jam. Straighten any curls before loading.

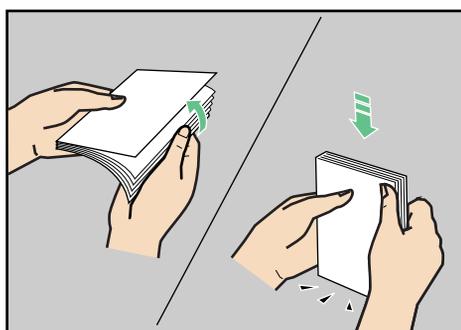

ZD.VY.202.J


- Before loading envelopes, make sure their edges are sharply creased by rubbing the edges with a pen or similar object.

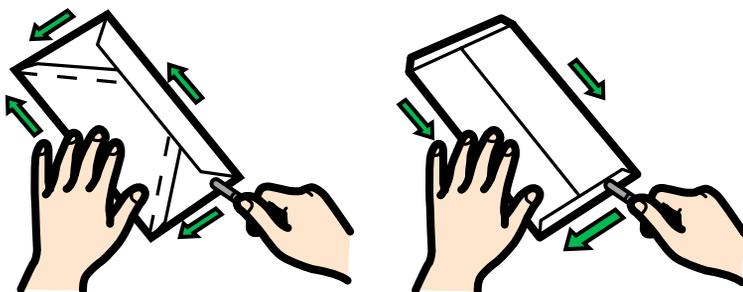

Correct Orientation of Preprinted Paper When Loaded in the Tray 1

Load paper print side down, shorter edge pointing in the paper feed direction.

Set paper according to the orientation of the print image, as follows.

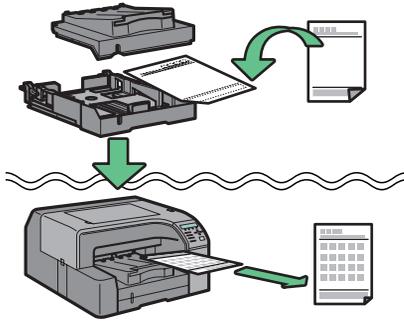

BAF003S

Paper Storage Precautions

This section gives cautions on storing paper.

If stored under adverse conditions, even paper suitable for printing can cause paper jams, poor print quality, or machine malfunctions. When you store paper, keep the following points in mind:

- Do not store paper in humid places.
- Do not store paper in direct sunlight.
- Store paper flat.
- Store unused paper in the original package.

Paper Type Precautions

Plain paper

- The only type of A6 (105 × 148 mm (4.2 × 5.9 inches)) paper that can be loaded in tray 1 is that of 80g/m² (21.5 lb.).

Inkjet plain paper

- When printing on inkjet plain paper, in the printer properties dialog box, click [Inkjet Plain Paper]. This allows printing at higher quality.
- Use as soon as possible after opening the package.

Glossy paper

- The time it takes for the ink to dry depends on the kind of printed image and the environmental conditions.
- If the temperature exceeds 25°C or the relative humidity exceeds 50%, problems with continuous feeding of glossy paper might occur. If this is the case, feed the sheets one by one.
- If you load multiple sheets of glossy paper and they do not feed in properly, feed them one by one.

- Ink smearing can be caused by environmental conditions (such as high humidity) and the type of image being printed (such as ink-heavy images). If smearing occurs, set [Print Quality] to [Quality priority] or [Speed priority]. This may stop the ink smearing.
- Roller marks might appear on printed images.
- If paper is fed from the bypass tray, roller marks might appear on the printed image.
- Some print images can cause the paper to curl, which creates patchy print. If this happens, set [Print Quality] to [Quality priority].
- When using these sheets, see the instructions supplied with them.

Envelopes

- Up to 20 envelopes can be loaded in tray 1.
- If the envelopes bulge, flatten them.
- Load envelopes carefully, because the printable area depends on the orientation.
- Set the lever to the rear position  before printing.

Cautions to Observe After Printing

Depending on the paper type, the ink may take a while to dry. Before handling, make sure printed sheets have fully dried. otherwise, the ink may smudge.

Note

- The ink may smear depending on the type of image. If this happens, set the envelope selector to the rear position .

Non-compatible Paper

Check if the paper is compatible.

Do not use paper that is:

- wrinkled, folded, or damaged
- wavy at the ends
- curled
- absorbent
- dry and conducive to static buildup
- already printed on (such as the back of preprinted paper)
- preprinted (unless specified)
- heat sensitive/non-carbon
- too thick or thin
- pre-stitched
- glued or tacked

- stapled or clipped together
- dark in places
- irregular in length and proportion


Note

- Even if compatible paper types are used, print quality may be lower than usual or paper jams may occur if the paper was improperly stored.

2

Printable Area


Printable and unprintable areas

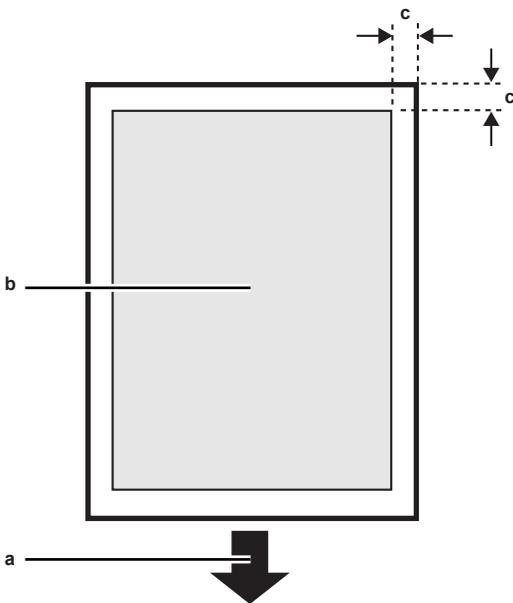

- a. Output Direction
- b. Printable Area
- c. 3 mm (0.12 inches)

Print images wider than A3 (297 mm) may be cropped.

When printing on envelopes, the following print area limitations apply.

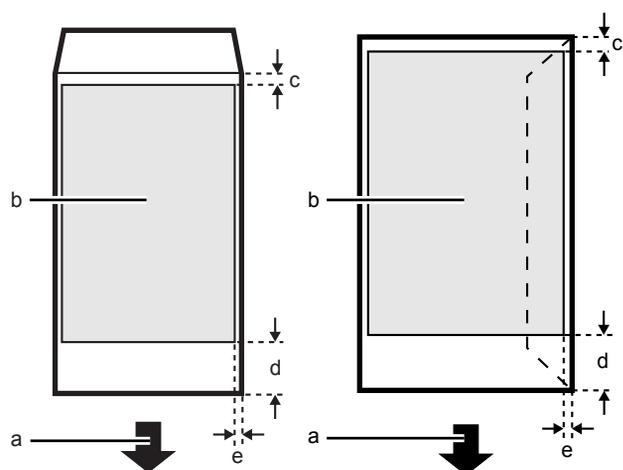

- a. Output Direction
- b. Printable Area
- c. 8 mm (0.4 inches)
- d. 38 mm (1.5 inches)
- e. 3 mm (0.2 inches)

Specifying the Paper Settings using the Printer's Control Panel (Paper Input Menu)

This section explains the settings you can specify in the Paper Input menu, such as those for the size and type of the paper loaded in tray 1.

The very first time you load paper or anytime you change to a different size or type of paper, you must specify the paper settings using "Paper Input Menu" on the printer's control panel.

Tray Paper Size

You can specify the size of the paper loaded in the paper feed tray.

Paper Type

You can specify the type of the paper loaded in the paper feed tray.

Aut.Tray Select

You can specify whether or not to automatically select the tray according to the paper size and paper type.

Tray Priority

You can specify the prioritized paper feed tray. This setting is factory-preset to "tray 1".

↓ Note

- If you select "Aut.Tray Select", the tray is automatically selected according to the paper size set for the tray in "Tray Paper Size".


📖 Reference

- p.69 "Compatible Paper Types"
- p.69 "Loadable Paper Sizes and Quantities"

Changing the Paper Input Menu

The following procedure is an example of setting the Tray Paper Size.

1. On the control panel, press the [Menu] key.

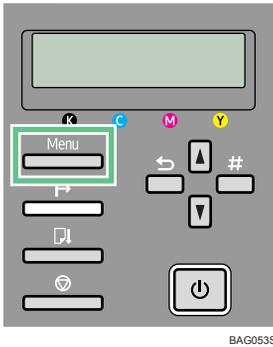

2. Press the [▲] or [▼] key to display [Paper Input], and then press the [#Enter] key.

```
Menu:  
Paper Input
```

3. Press the [▲] or [▼] key to display [Tray Paper Size], and then press the [#Enter] key.

```
Paper Input:  
Tray Paper Size
```

4. Press the [▲] or [▼] key to display the tray you want to specify, and then press the [#Enter] key.

```
Tray Paper Size:  
Tray 1
```

5. Press the [▲] or [▼] key to display appropriate paper size, and then press the [#Enter] key.

```
Tray 1:  
*A4 (297 x 210)
```

The setting is applied, and then, the Paper Input menu reappears.

6. Press the [Online] key.

The initial screen appears.

3. Printer Driver

Two Types of Printer Properties Dialog Box

There are two types of printer properties dialog box, namely: Custom Setting and Multi-tab. The default is Custom Setting.

- Custom Setting
This type is suitable for users who rarely need to change printer properties settings and print using generally the same settings.
- Multi-tab
This type is suitable for users who often need to change printer properties settings and print using a variety of settings.

To change the default Custom Setting to Multi-tab, do the following:

1. Click the [Printer Configuration] tab.
2. In the [Window type] area, click [Multi-tab].
3. Click [OK].

Opening the Printer Properties Dialog Box

This section explains how to open the printer properties dialog box from the [Printers and Faxes] window. Depending on the operating system settings, the actual procedure may differ.

1. On the [Start] menu, click [Printers and Faxes].
2. Click the icon of the printer, and then click [Properties] on the [File] menu.
The printer properties dialog box appears.
3. Click [Printing Preferences...].

Opening the Printing Preferences Dialog Box

This section explains how to open the [Printing Preferences] dialog box from the [Printers and Faxes] window.

Depending on the operating system settings, the actual procedure may differ.

1. On the [Start] menu, click [Printers and Faxes].
2. Click the icon of the printer, and then click [Printing Preferences...] on the [File] menu.
The printing preferences dialog box appears.

Opening from an Application

If you open the printer properties dialog box from an application, the factory settings appear. Change the settings as required and carry out printing.

Changes made here are only applicable with that application and only as long as that application stays open.

Some applications may automatically change the printer properties settings.

The procedure below is an example for Paint (included in the standard Windows package).

3

How to open the printer properties dialog box differs depending on the application. From most applications, the printer properties dialog box can be opened by clicking [Print...] or [Page Setup...] on the [File] menu, and then clicking [Properties] (Windows XP/Vista, Windows Server 2003: [Preferences]). For details, see Help of the application.

1. On the [File] menu, click [Print...].
2. In the Name list, select the name of this printer, and then click Properties (Windows XP/Vista, Windows Server 2003: Preferences).

The printer properties dialog box (Windows XP/Vista, Windows Server 2003: the [Printing Preferences] dialog box) appears.

Specifying Settings on [Accessories] Tab

If the printer and computer are not configured for bidirectional communication, display the printer driver settings and specify the size and type of paper loaded in the printer.

Conditions for Bidirectional Communication

Bidirectional communication allows information about paper size and feed direction settings to be automatically sent to the printer. You can check printer status from your computer.

If you use the RPCS raster printer driver and bidirectional communication is enabled, the [Accessories] tab is unavailable.

To support bidirectional communication, the following conditions must be met:

If the machine and computer are connected directly to each other with a USB cable

- Bidirectional communication is supported by Windows 98/Me/2000/XP/Vista, Windows Server 2003, and Windows NT 4.0.
- The printer must support bidirectional communication.

When connected with the network

- The printer must support bidirectional communication.

If Bidirectional Communication is Disabled

Perform this procedure only if the printer and computer are not communicating bidirectionally. This procedure enables you to display the printer driver settings, specify which optional units are installed, and specify the size and type of paper loaded in the printer.

Windows 98/Me

1. On the [Start] menu, point to [Settings], and then click [Printers].
2. Click the icon of the printer you want to use.
When you open the printer properties dialog box for the first time after installing the printer driver, or if you have not specified the attached options yet, a prompt to specify the options appears.
3. On the [File] menu, click [Properties].
4. Click [OK].
5. Select the appropriate size and type for the tray.
6. Click [OK] to close the printer properties dialog box.

Windows 2000/Vista or Windows NT 4.0

1. On the [Start] menu, point to [Settings] (Windows Vista: [Control Panel]), and then click [Printers].

The [Printers] window appears.

2. Click the icon of the printer you want to use.
3. On the [File] menu, click [Properties] (Windows Vista: Right-click the icon of the printer, and then click [Properties]).

When you open the printer properties dialog box for the first time after installing the printer driver, or if you have not specified the attached options yet, a prompt to specify the options appears.

4. Click [OK].
5. Click the [Accessories] tab.
If options in the [Accessories] tab are disabled, bidirectional connection is enabled. In this case, no change is necessary for option settings.
6. Select the appropriate size and type for the tray.
7. Click [OK] to close the printer properties dialog box.

Windows XP, Windows Server 2003

1. On the [Start] menu, click [Printers and Faxes].

The [Printers and Faxes] window appears.

2. Click the icon of the printer you want to use.
3. On the [File] menu, click [Properties].

When you open the printer properties dialog box for the first time after installing the printer driver, or if you have not specified the attached options yet, a prompt to specify the options appears.

4. Click the [Accessories] tab.
5. Select the appropriate size and type for the tray.
6. Click [OK] to close the printer properties dialog box.

↓ Note


- Under Windows 2000/XP/Vista and Windows Server 2003, Manage Printers permission is required to change the printer properties in the [Printers] folder. Log on as an Administrators or Power Users group member.
- Under Windows NT 4.0, Full Control permission is required to change the printer properties in the [Printers] folder. Log on as an Administrators or Power Users group member.

Printing

Follow the procedure below to print on plain paper.

★ Important

- Curled paper may jam. Straighten any curls before loading.
- Load paper with the print side face down in the paper trays.
- If ink smears appear and characters are not properly formed when printing white text on a black background, select [High speed] or [Speed priority] in the [Print Quality] area, and then print the job again.
- Printing on envelopes
 - Before loading envelopes, make sure their edges are sharply creased by rubbing the edges with a pen or similar object.
 - Squeeze the paper guide release, and then slide the paper guides into position according to the paper size.

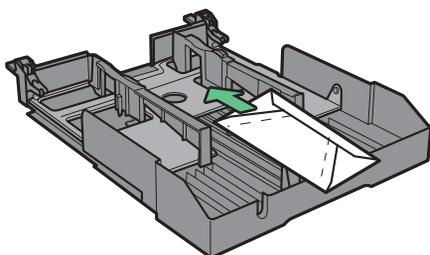

BAG048S

1. Load plain paper into tray.

How to load paper depends on the paper type.

2. Open the printer properties dialog box from the application.

3. Select the paper type from the [Paper type:] list.

After selecting the paper type as required, switch the envelope selector to "✎" (envelope icon).

4. Make the necessary settings, and then click [OK].

The printer properties dialog box closes.

5. Make print settings, and then click [OK].

↓ Note

- If you set [Paper Type] to [Glossy Paper] in the printer properties dialog box, be sure to remove each sheet as it is delivered to the tray 1 cover.
- You can load up to 20 envelopes.

Reference

- p.79 "Two Types of Printer Properties Dialog Box"
- p.70 "Paper Handling Precautions"
- p.74 "Printable Area"

Unauthorized Copy Control

3


To prevent unauthorized copying, you can embed patterns and text beneath the print. You do not need a special paper to use this function. If a paper with text or image patterns is copied by a copier or a multi-function printer, either the patterns are printed vividly or the copy is grayed out, so as to protect the information on the original from leaking. To print with protection against unauthorized copying, you can use [Data security for copying] and [Mask type:].

★ Important

- **This function is designed to discourage copying confidential documents; it does not prevent unauthorized use of information.**

In the printer properties dialog box, click [Setup] tab to select the [Unauthorized copy...] check box.


Printing a document using [Data security for copying]

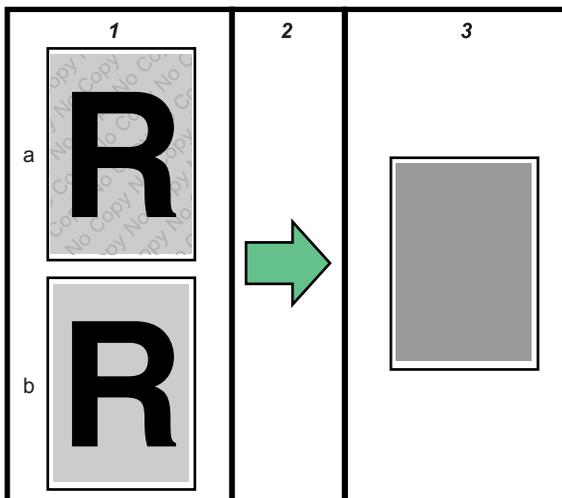

AQR147S

1. The pattern and text you have set is printed.
 - a: Text
 - b: Pattern
2. The document is copied to the machine that the Copy Data Security unit is installed.
3. The document is blanked by gray overprint.

Printing a Document Using [Mask type:]

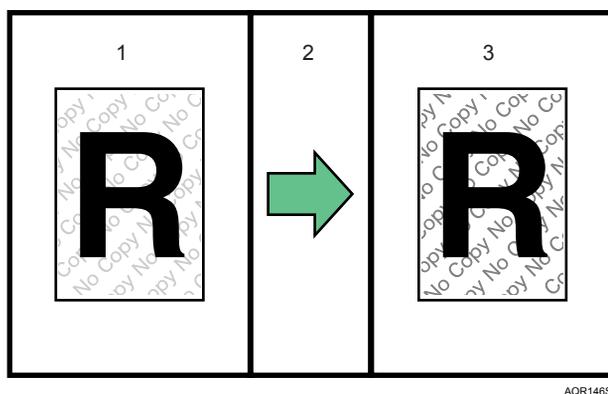

1. The print preview of the pattern and the text you set is displayed.
2. The document is copied to the copier or the multifunction machine.
3. The pattern and the text you set appear.

↓ Note

- When selecting [High speed], [Unauthorized copy...] is not available.
- When selecting [Level Color], [Unauthorized copy...] is not available.
- When selecting [Use error diffusion] and [Whole page], [Unauthorized copy...] is not available.

Important Notice

- The supplier does not provide warranty regarding the appearance of print patterns and other copy protection features. The appearance of the print patterns and the performance of Unauthorized Copy Control may vary depending on the quality of paper used and the machine model and settings.
- The supplier takes no responsibility for any damages sustained in connection with use of or inability to make use of Unauthorized Copy Control print patterns.

↓ Note

- For details, see the printer driver Help.

Canceling Printing

Print jobs can be canceled from either a printer or computer. How to cancel print jobs differs according to their job status. Check the job status first.

Canceling a Print Job Being Printed

Cancel the print job from the Status monitor or by pressing the [Job Reset] key of the printer.

Canceling a print job in queue


Cancel the print job from the taskbar of the computer.

3

Canceling Printing from the Status Monitor

Follow the procedure below to cancel a print job being printed.

1. Check that printing and the Status monitor have started.
2. Click [Stop Printing].

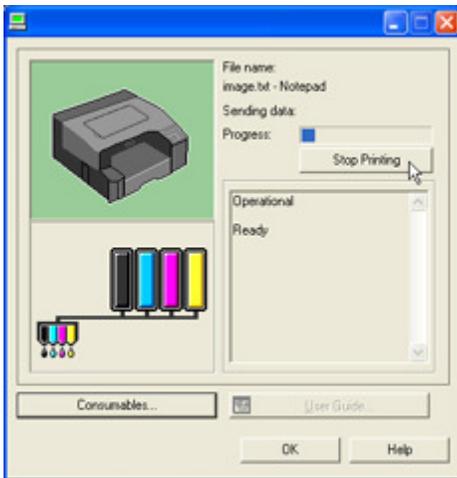

It will take a few moments for printing to stop.

Reference

- p.89 "Using the Status Monitor"

Canceling Printing Using the [Job Reset] Key of the Printer


Follow the procedure below to cancel a print job being printed.

1. Check that printing has started.

Not only the print job being printed but also the print jobs in queue will be canceled.

If you press the [Job Reset] key while the printer is receiving print data for a print job (the Data in lamp is blinking), that print job is also canceled.

2. Press the [Job Reset] key.

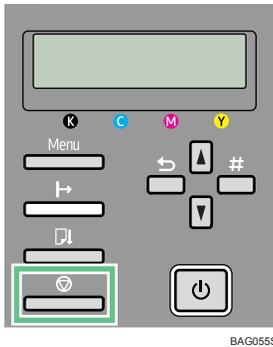

It will take a few moments for printing to stop.

Canceling Printing from the Taskbar

Follow the procedure below to cancel a print job in queue.

1. Double-click the icon of the printer on the taskbar.
2. Select the print job you want to cancel, and then click **Cancel** (Windows 98/Me: **Cancel Printing**) on the Document menu.

4. Monitoring and Configuring the Printer

Using the Status Monitor

Using the Status monitor, you can check the print job status, error messages amount of remaining ink, and other printer status information.

Reference

- p.134 "Replacing a Print Cartridge"
- p.182 "Status Monitor Errors"
- p.86 "Canceling Printing from the Status Monitor"

Receiving Notification of Print Job Status via the Status Monitor

You can specify how to receive notification of print job status via the Status monitor.

1. Open the printer properties dialog box.
2. Click the [Maintenance] tab.
3. Click [Status Monitor Settings].
4. From the list in the [Status Monitor display settings] area, select a method for launching the Status monitor.
5. Press [OK].
6. Press [OK].

Using SmartDeviceMonitor for Client

SmartDeviceMonitor for Client is an application that has functions such as the peer-to-peer printing machine monitoring. We recommend you install this application on the client computer. SmartDeviceMonitor for Client is required if you need to print over a network in a Windows 98/Me environment.

- Operating System: Windows 98/Me
Protocol Stack
TCP/IP protocol supplied with Windows 98/Me
- Operating System: Windows 2000
Protocol Stack
TCP/IP protocol supplied with Windows 2000
- Operating System: Windows Server 2003
Protocol Stack
TCP/IP protocol supplied with Windows Server 2003
- Operating System: Windows XP
Protocol Stack
TCP/IP protocol supplied with Windows XP
- Operating System: Windows Vista
Protocol Stack
TCP/IP protocol supplied with Windows Vista
- Operating System: Windows NT 4.0
Protocol Stack
TCP/IP protocol supplied with Windows NT 4.0

What can you do with it?

Using SmartDeviceMonitor for Client, you can do the following:

- Peer-to-peer printing
 - Send print jobs directly to the network printer without going through a print server.
 - Print using a substitute printer if there are too many jobs waiting on the specified printer, or if an error disables printing (Recovery Printing).
 - Allocate multiple print jobs to multiple printers (Parallel Printing).
 - Preregister groups of printers specified for Recovery Printing or Parallel Printing.
- Receive error message notification if an error occurs in the machine while it is printing or sending a job.
- Monitoring function

- Check the printer status such as the remaining amount of paper while printing.
- Simultaneously monitor multiple printers in use.
- Check the printer's network settings and system configuration.
- Be notified of print completion.
- View up to 100 print jobs that belong to you.

Using Notification via SmartDeviceMonitor for Client

This section explains how to use the Notification function in SmartDeviceMonitor for Client.

If a client computer uses SmartDeviceMonitor for Client to access a network printer, you can specify the Notification setting to allow the computer to receive print job status notification.

★ Important

- To change the printer properties in the [Printer] folder under Windows 2000, Windows XP Professional, Windows Server 2003, or Windows Vista, you must have access to "Printer Management access authentication". Under Windows NT 4.0, you must have access to "Full Control access authentication". To make this possible, log on as a member of the Administrators or Power Users group.

📖 Reference

- p.54 "Sharing the Printer"

Specifying the Print Server

Follow the procedure below to make the settings on the print server.

★ Important

- To change the print server setting under Windows 2000, Windows XP Professional, Windows Server 2003, or Windows Vista, you must have access to "Printer Management access authentication". Under Windows NT 4.0, you must have access to "Full Control access authentication". To make this possible, log on as a member of the Administrators or Power Users group.

1. On the [Start] menu, point to [All Programs], point to [DeskTopBinder], [SmartDeviceMonitor for Client], and then click [Print Server Setting].

The Print Server Setting dialog box appears.

2. Select the [Notify client PCs of printout/data-transmission] check box, and then click [OK].

Depending on the print server setting, a dialog box appears. Read the message in the dialog box, and then click [OK].

By clicking [Cancel], the changed setting is cancelled.

3. A dialog box about specifying the client computer setting appears. Click [OK].

The print server setting has been changed. However, you still need to specify the Notification setting on each client computer.

Note

- When the spooler stops, the print job in progress is completely reprinted.
- If [Extended Features] was not used, it is automatically enabled.

Specifying the Client Computer Settings

Follow the procedure below to make the settings on the client.

4

1. On the [Start] menu, point to [All Programs], point to [DeskTopBinder], [SmartDeviceMonitor for Client], and then click [Extended Features Settings].

The Extended Features Settings dialog box opens.

2. Select the [Use Extended Features] check box.

3. Select the [Notify of printout/data-transmission when using print server] check box in "Notification".

4. Click [OK].

The Extended Features dialog box closes.

Specifying the client computer settings is now complete.

Specifying the Settings for Monitoring the Printer

Use SmartDeviceMonitor for Client to monitor the status of the printer.

To use SmartDeviceMonitor for Client, you must make the following settings:

1. Launch SmartDeviceMonitor for Client.

The SmartDeviceMonitor for Client icon appears in the taskbar's system tray.

This will not appear if you click [Do not show this message again].

2. Right-click the SmartDeviceMonitor for Client icon, and then, in the pop-up menu, look for the printer you want to monitor.

3. If the printer you want to monitor does not appear, point to [Property], and then click [Option...].

The SmartDeviceMonitor for Client - Option dialog box opens.

4. **Select the printer you want to monitor, and then select the [To be Monitored] check box in [Settings].**

If you select the [Display on Task Bar] check box, you can reflect the printer status in the SmartDeviceMonitor for Client icon in the taskbar system tray.

5. **Click [OK].**

The SmartDeviceMonitor for Client - Settings dialog box closes and the selected printer is monitored.

Note

- For details about how the icon indicates the printer status, see the SmartDeviceMonitor for Client Help.

Reference

- If you are using the printer in a DHCP environment, see p.206 "Using DHCP".

Displaying the Printer Status

You can display the printer status.

1. **Launch SmartDeviceMonitor for Client.**

2. **Right-click the SmartDeviceMonitor for Client icon.**

The printer status is reflected in the SmartDeviceMonitor for Client icon in the taskbar system tray.

3. **To monitor the status in more detail, right-click the SmartDeviceMonitor for Client icon, and then select the printer you want to monitor.**

4. **Click [Printer].**

A dialog box displaying the printer status opens.

Note

- For details about the items in the dialog box, see the SmartDeviceMonitor for Client Help.
- For details about how the icon indicates the printer status, see the SmartDeviceMonitor for Client Help.

Using Web Browser

Available operations

The following operations can be remotely performed using Web browser from a client computer.

- Displaying printer status or settings
- Resetting the printer
- Making printer settings
- Making e-mail notification settings
- Making network protocol settings
- Making security settings

4

Configuring the printer

To perform the operations from Web browser, TCP/IP is required. After the printer is configured to use TCP/IP, operations from Web browser become available.

Recommended Web browsers

- Windows:
Internet Explorer 6.0 or higher

Supported Web browsers

- Windows:
Internet Explorer 5.5 sp2 or higher
Firefox 1.0 or higher

↓ Note

- If the previous versions of the Web browser above are used or JavaScript and cookies are not enabled with the Web browser used, display and operation problems may occur.
- Non-recommended Web browsers might not display certain screen elements correctly.
- If you are using a proxy server, change the Web browser settings. Contact your network administrator for information about the settings.
- The previous page may not appear even after the back button of a Web browser is clicked. If this happens, click the refresh button of a Web browser.
- Updating the printer information is not automatically performed. Click [Refresh] in the display area to update the printer information.


Displaying Top Page

This section explains the Top Page and how to display Web browser.

1. Launch the Web browser.
2. In the Web browser's address bar, enter "http://(printer's IP address)/" to access the printer.

If a DNS or WINS server is in use and the printer's host name has been specified, you can enter the host name instead of the IP address.

The displayed Web page is split into the following areas:

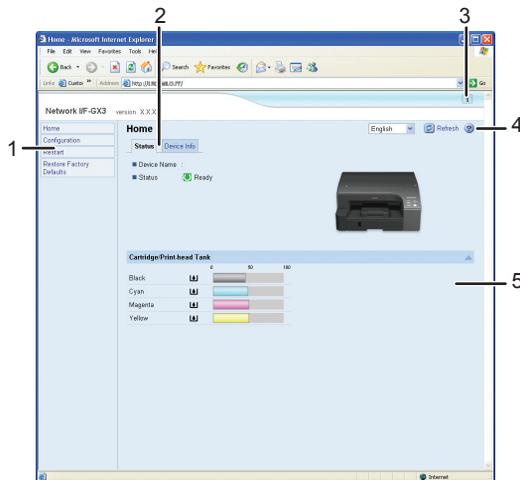

BAG062S

1. Menu Area

A menu appears.

When you click an item in the menu area, information about the item appears.

2. Tab area

Details about each menu appears.

3. Header area

The link to help appears.

4. Help

Use Help to view Help file contents.

5. Work Area

Information about an item selected in the menu area appears here.


Information displayed in the work area does not update automatically.

To update the information, click [Refresh] in the upper-right corner of the work area.

To refresh the entire Web browser window, click [Refresh] on the Web browser tool bar.

Menu

This section explains the items in the Web browser menu.

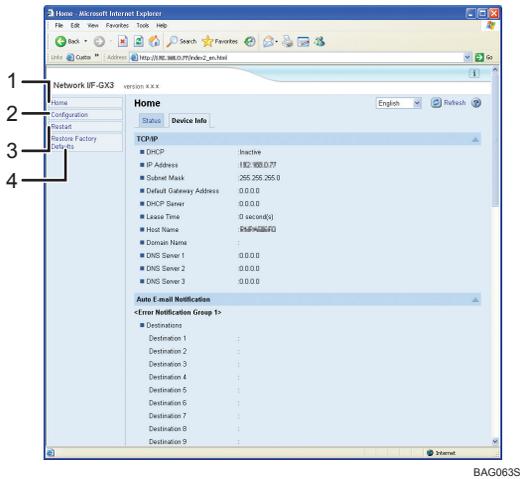

4

1. Home

The [Status] and [Device Info] tab are displayed. Details of the tab menu are displayed on the work area.

2. Configuration

Make system settings for the machine, interface settings, and security.

3. Restart

Click to restart the printer and apply the settings.

4. Restore Factory Defaults

Click to reset the printer.

Checking the Printer Status

You can check the printer status.

1. Launch the Web browser.

2. In the address bar, enter "http://(printer's IP address or host name)/".

The printer's top page appears.

3. In the menu area, click the item you want to check.

Changing the Printer Settings

You can change the printer settings.

1. Launch the Web browser.

2. In the address bar, enter "http://(printer's IP address or host name)/".

3. Click [Configuration], and then click [General Settings].

A dialog box for entering the user name and password opens.

4. Enter the user name and password, and then click [OK].

If this is the first time to do this, enter "admin" as the user name and leave the password blank.

To ensure security, it is important you change the password.

5. Specify the printer settings.**6. Click [OK].**

The specified settings are transmitted to the printer.

Notifying the Printer Status by E-mail

4

You can be notified of the printer status by e-mail on an occasion such as if the printer runs out of paper or paper is jammed.

The e-mail notifying the printer status will be sent to the e-mail address specified as the destination in advance.

You can also specify the timing and status to notify.

The following status can be notified:

- The printer error has occurred.
- The ink has run out.
- The ink will run out soon.
- The Ink Collector Unit must be replaced now.
- The Ink Collector Unit must be replaced soon.
- The paper has run out.
- The paper has been jammed.
- The paper type is wrong.
- The paper size is wrong.
- The paper size and type are wrong.
- A cover is open.
- The paper has been loaded incorrectly.
- The machine is out of its operational temperature range.

Flowchart showing how to specify notification by e-mail



Specify the network interface board setting (using the Web browser or telnet).

To specify the network interface board setting, use the Web browser or telnet. This section explains how to specify the network interface board setting using the Web browser.

Reference

- For details about specifying the printer setting, see p.127 "Specifying System Settings using the Control Panel (System Menu)".
- For details about specifying the network interface board setting, see p.96 "Changing the Printer Settings".

4

Specifying Notification the Printer Status by E-mail

In E-mail, you can specify the basic and authentication settings for sending e-mails.

Specifying SMTP Server

You can specify whether to use SMTP, and specify the SMTP server name and SMTP port number. The "Administrator E-mail Address" will appear in the e-mail message. The "Device E-mail Address" will appear in the "From" box.

Functions	Selectable value	Default
SMTP	Active Inactive	Inactive
SMTP Server Name	127 characters max. (1-byte alphanumeric)	None
SMTP Port Number	1-65535	25
Device E-mail Address	127 characters max. (1-byte alphanumeric)	None
Administrator E-mail Address	127 characters max. (1-byte alphanumeric)	None
Text in E-mail	255 characters max. (1-byte alphanumeric) (2-byte characters available)	None

Specifying SMTP Authentication

By specifying the SMTP authentication setting, you can send e-mails to destinations where the e-mail server carries out SMTP authentication.

By specifying the SMTP authentication setting, you can log on to SMTP servers which require authentication. The supported authentication protocols are: CRAM MD5, PLAIN, and LOGIN.

If you set [SMTP Authentication Encryption] to [Auto], the printer will try logging on using CRAM MD5, LOGIN, and then PLAIN.

If you set [SMTP Authentication Encryption] to [On], the printer will try logging on using only CRAM MD5. If you set [SMTP Authentication Encryption] to [Off], the printer will try logging on using LOGIN and then PLAIN.

Functions	Selectable value	Default
SMTP Authentication	Active Inactive	Inactive
SMTP Authentication Name	191 characters max. (1-byte alphanumerics)	None
SMTP Authentication Password	63 characters max. (1-byte alphanumerics)	None (No Password)
SMTP Authentication Encryption	Auto On Off	Auto

Specifying POP before SMTP

By specifying the SMTP authentication setting, you can send e-mails to destinations where the e-mail server carries out SMTP authentication.

By using POP before SMTP, you can log on to an SMTP server supporting POP before SMTP.

You can specify whether to use POP before SMTP, and specify the POP server name, POP port number, POP user name, and POP password.

If you set [POP Authentication Encryption] to [Auto], the printer will try logging on by APOP login, and then in plain text.

If you set [POP Authentication Encryption] to [On], the printer will try logging on only by APOP login. If you set [POP Authentication Encryption] to [Off], the printer will try logging on only in plain text.

In standby time following POP authentication (in milliseconds), you can specify how long the printer can wait for logging on to the SMTP server after logging on to the POP server.

Functions	Selectable value	Default
POP before SMTP	Active Inactive	Inactive

Functions	Selectable value	Default
POP Server Name	127 characters max. (1-byte alphanumerics)	None
POP Port Number	1-65535 (1-byte numeric characters)	110
POP User Name	127 characters max. (1-byte alphanumerics)	None
POP Password	63 characters max. (1-byte alphanumerics)	None (no password)
POP Authentication Encryption	Auto On Off	Auto
Wait Time after POP Authentication	0-10000 (millisecond(s))	300

Auto E-mail Notification: Error Notification Group 1-3

Group to Notify

Functions	Selectable value	Default
Group Name	19 characters max. (1-byte alphanumerics)(2-byte characters available)	None
E-mail Language	English Japanese French German Italian Spanish Dutch Swedish Norwegian Danish	English

Functions	Selectable value	Default
	Portuguese	
Subject	31 characters max. (1-byte alphanumerics) (2-byte characters available)	None
Text	255 characters max. (1-byte alphanumerics) (2-byte characters available)	None

Destinations (Destination 1-10)

Functions	Selectable value	Default
Name	19 characters max. (1-byte alphanumerics) (2-byte characters available)	None
E-mail Address	127 characters max. (1-byte alphanumerics)	None

Error Notification

This section lists the settings for notification by e-mail.

Functions	Selectable value	Default
Printer Error	ON OFF	OFF
Empty	ON OFF	OFF
Almost Empty	ON OFF	OFF
Replace Ink Collector Unit	ON OFF	OFF
Replace Ink Collector Unit Soon	ON OFF	OFF
No Paper	ON	OFF

Functions	Selectable value	Default
	OFF	
Paper Misfeed	ON OFF	OFF
Paper Size Mismatch	ON OFF	OFF
Paper Type Mismatch	ON OFF	OFF
Paper Size and Type Mismatch	ON OFF	OFF
Cover Open	ON OFF	OFF
Unit/Cartridge Not Set	ON OFF	OFF
Out of Printable Temperature Range	ON OFF	OFF

Auto E-mail Notification: Counter Notification Group

Group to Notify

Functions	Selectable value	Default
E-mail Language	English Japanese German French Italian Spanish Dutch Swedish Danish Norwegian	English

Functions	Selectable value	Default
	Portuguese	
Subject	31 characters max. (1-byte alphanumerics) (2-byte characters available)	None

Destination (Destination 1-10)

Functions	Selectable value	Default
Name	19 characters max. (1-byte alphanumerics) (2-byte characters available)	None
E-mail Address	127 characters max. (1-byte alphanumerics)	None

4

Counter Notification

Functions	Selectable value	Default
Machine Total	ON OFF	OFF

Auto E-mail Notification: Error Notification

Printer Error

Functions	Selectable value	Default
Notify when error	Occurs	Occurs
Notify within	0 5 10 15 20 25 30 (minutes)	5

Empty

Functions	Selectable value	Default
Notify when error	Occurs Occurs & Fixed	Occurs
Notify within	0 5 10 15 20 25 30 (minutes)	5

Almost Empty

Functions	Selectable value	Default
Notify when error	Occurs Occurs & Fixed	Occurs
Notify within	10 20 30 (%)	10

Replace Ink Collector Unit

Functions	Selectable value	Default
Notify when error	Occurs	Occurs
Notify within	0 5 10 15 20 25 30 (minutes)	5

Replace Ink Collector Unit Soon

Functions	Selectable value	Default
Notify when error	Occurs	Occurs
Notify within	0 5 10 15 20 25 30 (minutes)	5

4

No Paper

Functions	Selectable value	Default
Notify when error	Occurs Occurs & Fixed	Occurs
Notify within	0 5 10 15 20 25 30 (minutes)	5

Paper Misfeed

Functions	Selectable value	Default
Notify when error	Occurs Occurs & Fixed	Occurs
Notify within	0 5 10 15	5

Functions	Selectable value	Default
	20 25 30 (minutes)	

Paper Size Mismatch

Functions	Selectable value	Default
Notify when error	Occurs Occurs & Fixed	Occurs
Notify within	0 5 10 15 20 25 30 (minutes)	5

Paper Type Mismatch

Functions	Selectable value	Default
Notify when error	Occurs Occurs & Fixed	Occurs
Notify within	0 5 10 15 20 25 30 (minutes)	5

Paper Size and Type Mismatch

Functions	Selectable value	Default
Notify when error	Occurs Occurs & Fixed	Occurs
Notify within	0 5 10 15 20 25 30 (minutes)	5

4

Cover Open

Functions	Selectable value	Default
Notify when error	Occurs Occurs & Fixed	Occurs
Notify within	0 5 10 15 20 25 30 (minutes)	5

Unit/Cartridge Not Set

Functions	Selectable value	Default
Notify when error	Occurs Occurs & Fixed	Occurs
Notify within	0 5 10	5

Functions	Selectable value	Default
	15 20 25 30 (minutes)	

Out of Printable Temperature Range

Functions	Selectable value	Default
Notify when error	Occurs	Occurs
Notify within	0 5 10 15 20 25 30 (minutes)	5

4

Auto E-mail Notification: Counter Notification

Machine Total

Functions	Selectable value	Default
Notification Method	Number of Pages	Number of Pages
Notify Every	100 200 300 400 500 1000 2000 (pages)	100 (pages)

About the Web Browser Help

Using "Settings", you can view help on the things you can do through the Web browser.

1. Launch the Web browser.
2. In the address bar, enter "http://(printer's IP address or host name)".
3. Click .

Help on the things you can do through the Web browser appears.

SNMP

The Ethernet interface includes the Simple Network Management Protocol (SNMP) agent for UDP.

Using the SNMP manager, you can obtain printer data.

The default community name is "public". Using this community name, you can obtain MIB data.

Supporting MIB (SNMP v1/v2)

- MIB-II
- PrinterMIB
- HostResourceMIB
- RicohPrivateMIB

5. Maintaining

Checking the Number of Printed Pages using the Control Panel (Counter Menu)

You can check and print out the printer's counter figures.

Counters show the number of prints made by the printer. Print counter numbers do not include test patterns printed using "Maintenance", system configurations printed using "List/Test Print", and counter printouts made using "Counter".

Show Counter

- Color:
This counter shows the total number of pages printed in color.
- Black:
This counter shows the total number of pages printed in black and white.


Print

You can print out the printer's counter figures.

Displaying the Counter

You can display the counter.

1. Press the [Menu] key.

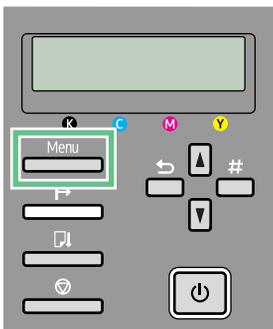

2. Press [▲] or [▼] to display [Counter], and then press the [#Enter] key.



3. Press [▲] or [▼] to display [Show Counter], and then press the [#Enter] key.

Menu: Show Counter

4. Checks the [Color] and [Black] on the display.

Color: 12345678
Black: 12345678

5. Press the [Online] key.

The operating screen appears.

Performing Maintenance using the Control Panel (Maintenance Menu)

Using the Maintenance menu, you can specify printer maintenance settings for adjusting settings such as gradation and density.

Nozzle Check

You can print a test pattern to check whether the inks are being correctly ejected from the print head nozzles.

Head-cleaning

You can clean the print head.

Clean the head if certain colors are not printed or are printed faintly.

Head cleaning consumes ink.

Head-flushing

You can clean the print head more thoroughly.

Because head flushing consumes more ink than head cleaning, do it only if the print head cannot be cleaned properly by head cleaning.

Head Position

If bidirectionally printed lines are vertically misaligned, or if printed images are blurred, print the test pattern and adjust the print head alignment.

Adj.Paper Feed

If printed lines are horizontally misaligned or if images are printed unevenly, print the test pattern and adjust the paper feed setting.

Registration

Print the test pattern and align the point where printing starts for each paper feed tray.

Key Repeat

The key repeat function allows you to specify setting values in units of ten or scroll the display quickly by pressing and holding down a control panel key. You can enable or disable this function.

- On
- Off

Default: On

Paper Feed Test

You can eject a sheet of paper without printing anything on it.


De-condensation

To remove moisture from inside the printer, you can eject three sheets of paper without printing anything on them.

Nozzle Check

Follow the procedure below to check whether the print-head nozzles are clogged up or not by printing a nozzle check test pattern.

1. Press the [Menu] key.

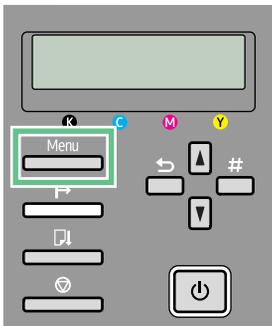

BAG053S

2. Press the [▲] or [▼] key to display [Maintenance], and then press the [#Enter] key.

```
Menu:
Maintenance
```

3. Press the [▲] or [▼] key to display [Nozzle Check], and then press the [#Enter] key.

```
Maintenance:
Nozzle Check
```

4. Press the [#Enter] key.

```
Press # to
print pattern
```


A test pattern is printed.

5. Press the [Online] key.

The initial screen appears.


6. Check the printed test pattern.

Normal

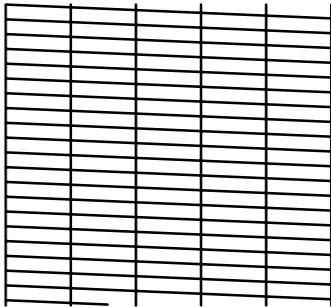

AKR172S

When print-heads are clogged

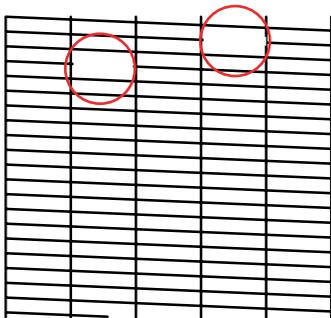


AKR173S

Head-cleaning

Follow the procedure below to perform a normal print-head cleaning. Perform a head cleaning when a particular color cannot be printed or print images are blurred. Head cleaning consumes ink.


When the Print cartridge is empty, replace it instead of performing a print-head cleaning. After a Print cartridge is replaced, a print-head cleaning will be automatically performed.

1. Slide the envelope selector  to the forward position.

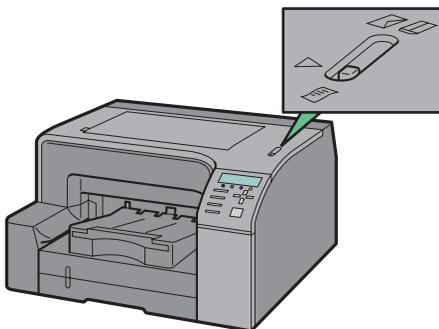

BAG043S

2. Press the [Menu] key.

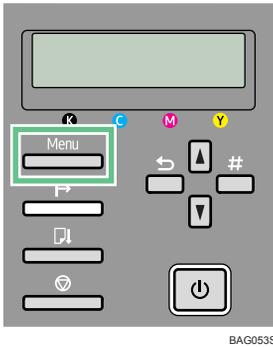

3. Press the [▲] or [▼] key to display [Maintenance], and then press the [#Enter] key.


Menu:
Maintenance

4. Press the [▲] or [▼] key to display [Head-cleaning], and then press the [#Enter] key.

Maintenance:
Head-cleaning

5. Press the [▲] or [▼] key to select a color, and then press the [#Enter] key.

Head-cleaning:
All Heads

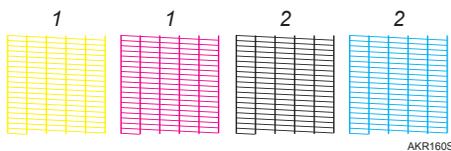

1. Head 1 (Yellow/Magenta)

2. Head 2 (Black/Cyan)

6. Press the [#Enter] key.

Press # to
clean heads

Head cleaning starts.

Maintenance
in process...

7. Press the [Online] key.

The initial screen appears.

↓ Note


- To clean the cyan, magenta, yellow, and black print heads, hold the [Form Feed / Head-cleaning] key down for three seconds while the printer is online.

Head-flushing

Follow the procedure below to perform a thorough print-head cleaning. Since this consumes more ink than a normal head cleaning does, perform this when the problem persists after performing a normal head cleaning.


When the Print cartridge is empty, replace it instead of performing a print-head cleaning. After a Print cartridge is replaced, a print-head cleaning will be automatically performed.

- Slide the envelope selector  to the forward position.

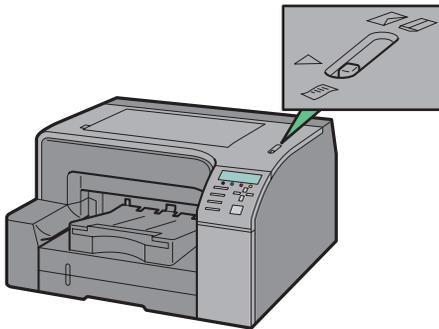

BAG043S

- Press the [Menu] key.

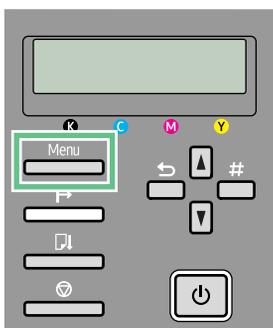

BAG053S

- Press the [▲] or [▼] key to display [Maintenance], and then press the [#Enter] key.

```
Menu:
Maintenance
```


- Press the [▲] or [▼] key to display [Head-flushing], and then press the [#Enter] key.

```
Maintenance:
```

Head-flushing

5. Press the [▲] or [▼] key to select a color, and then press the [#Enter] key.

Head-flushing:
All Heads

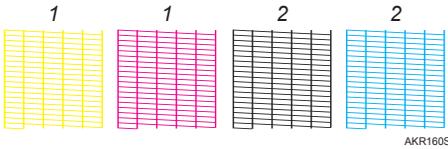

- 1. Head 1 (Yellow/Magenta)
- 2. Head 2 (Black/Cyan)

6. Press the [#Enter] key.

Press # to
flush heads

Head flushing starts.

Maintenance
in process...

7. Press the [Online] key.


The initial screen appears.

5

Head Position


Follow the procedure below to print a test pattern and adjust the print-head positions if vertical lines are printed unaligned or printed colors look blurred.

1. Slide the envelope selector to  the forward position.

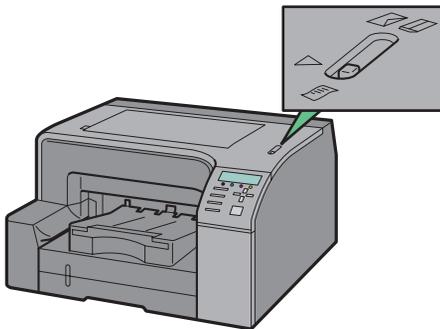

BAG043S

2. Press the [Menu] key.

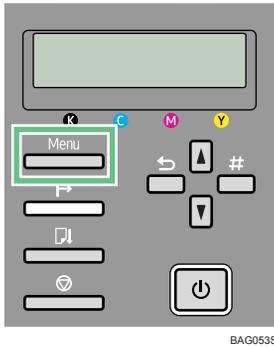

3. Press the [▲] or [▼] key to display [Maintenance], and then press the [#Enter] key.

Menu:
Maintenance

4. Press the [▲] or [▼] key to display [Head Position], and then press the [#Enter] key.

Maintenance:
Head Position

5. Press the [▲] or [▼] key to display [Pr.Test Pattern], and then press the [#Enter] key.

Head Position:
Pr.Test Pattern

6. Press the [▲] or [▼] key to select a test pattern, and then press the [#Enter] key.


Pr.Test Pattern:
High Speed

To adjust print-head positions for all resolutions, repeat this procedure selecting the other resolution.

A test pattern to adjust print-head positions is printed.

7. Check the optimal adjustment values on the printed test pattern.

The optimal adjustment value is the column number that appears above the lightest gray square with straight vertical lines on both sides. When the column number is "+2" for the "A" line, the optimal adjustment value is "+2" for "A".

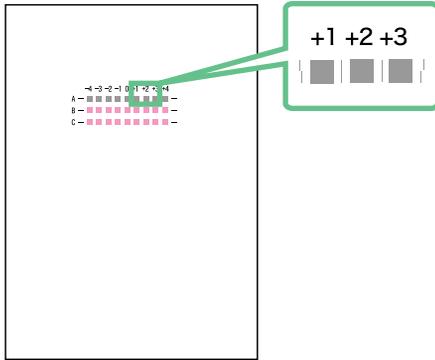

BBF010S

8. Press the [▲] or [▼] key to display [Adjustment], and then press the [#Enter] key.
9. Press the [▲] or [▼] key to select a resolution from step 5, and then press the [#Enter] key.

5

Adjustment:
High Speed

10. Press the [▲] or [▼] key to select a line, and then press the [#Enter] key.

Adjustment:
1.A

11. Enter the optimal adjustment values from step 6, and then press the [#Enter] key.

A:
(-4, +4) 0


12. Press the [Online] key.

The initial screen appears.

Adj.Paper Feed


If horizontal lines are printed unaligned, print images are patchy, or a black or white line is printed at regular intervals, print a test pattern, and then adjust the paper feed setting.

1. Slide the envelope selector to  the forward position.

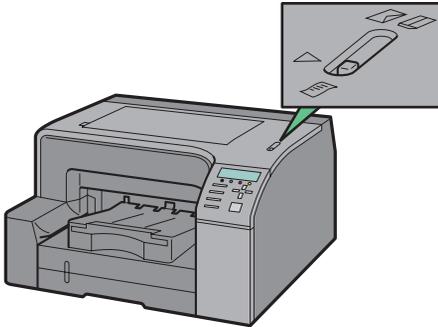

BAG043S

2. Press the [Menu] key.

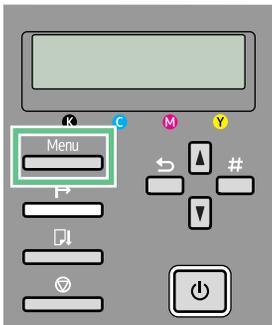

BAG053S

3. Press the [▲] or [▼] key to display [Maintenance], and then press the [#Enter] key.

Menu:
Maintenance

4. Press the [▲] or [▼] key to display [Adj.Paper Feed], and then press the [#Enter] key.

Maintenance:
Adj.Paper Feed


5. Press the [▲] or [▼] key to display [Pr.Test Pattern], and then press the [#Enter] key.

Adj.Paper Feed:
Pr.Test Pattern

A test pattern to adjust paper feed is printed.

6. Check the optimal adjustment values on the printed test pattern.


The optimal adjustment value is the number that appears on the left of the lightest gray square with straight horizontal lines on both sides. When this number is "+2", the optimal adjustment value is "+2".

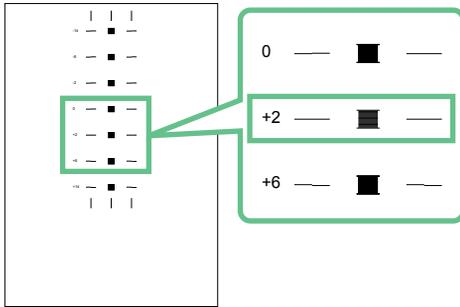

ZKX030J

When horizontal lines beside the lightest gray square are broken, select the optimal adjustment value by referring to the lines broken in the opposite direction. When the “+2” square is the lightest gray square and the “+6” horizontal lines are broken in the opposite direction, the optimal adjustment value is between “+3” and “+5”. After adjustment, check the adjustment result.

5

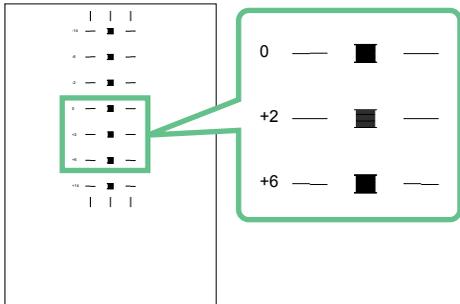

ZKX040J

7. Press the [▲] or [▼]key to display [Adjustment], and then press the [#Enter] key.

Adj.Paper Feed:
Adjustment

8. Press the [▲] or [▼] key to enter the adjustment value (-14 to +14) from step 5, and then press the [#Enter] key.

A:
(-14, +14) 0


9. Press the [Online] key.

The initial screen appears.

Registration


Follow the procedure below to adjust where to start printing on paper loaded in each paper tray after checking the test pattern printed.

1. Slide the envelope selector to  the forward position.

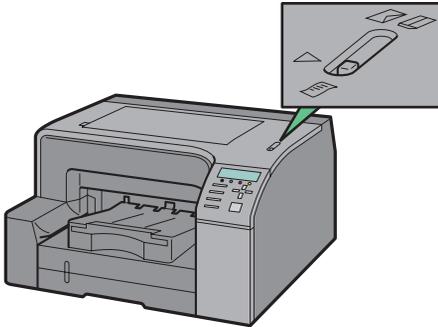

BAG043S

2. Press the [Menu] key.

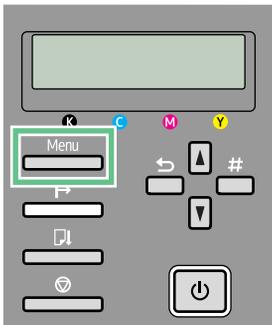

BAG053S

3. Press the [▲] or [▼] key to display [Maintenance], and then press the [#Enter] key.

Menu:
Maintenance

4. Press the [▲] or [▼] key to display [Registration], and then press the [#Enter] key.

Maintenance:
Registration

5. Press the [▲] or [▼] key to display [Pr.Test Pattern], and then press the [#Enter] key.

Registration:
Pr.Test Pattern

6. Press the [▲] or [▼] key to select a paper tray, and then press the [#Enter] key.

Pr.Test Pattern:
Tray 1


7. Press the [▲] or [▼] key to select a paper type, and then press the [#Enter] key.

Pr.Test Pattern:

*Plain Paper


A test pattern to adjust the print start position is printed.

8. Check the optimal adjustment values on the printed test pattern.
9. Fold the test pattern sheet in half lengthwise.

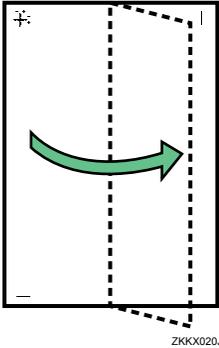

5

10. The optimal adjustment value is the difference between the single vertical line and the cross's vertical line that you can see when the folded paper is held to light. When the difference is one calibration mark in the "+" direction, the optimal adjustment value for the [Read Direction] is "+1.0".

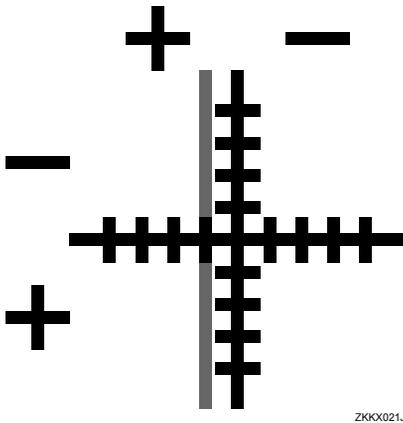

11. Fold the test pattern sheet in half widthwise, and then check the adjustment value for the [Feed Direction]

Adjustment values are in 0.1 increments.

12. Press the [▲] or [▼] key to display [Adjustment], and then press the [#Enter] key.

Registration:
Adjustment

13. Press the [▲] or [▼] key to select a paper tray, and then press the [#Enter] key.

Adjustment:

Tray 1

14. Press the [▲] or [▼] key to select a paper type, and then press the [#Enter] key.

Adjustment:
*Plain Paper

15. Press the [▲] or [▼] key to enter the adjustment values (-4.0 to +4.0) in the [Read Direction] from step 7, and then press the [#Enter] key.

Read Direction:
(-4, +4) 0.0

16. Press the [▲] or [▼] key to enter the adjustment values (-4.0 to +4.0) in the [Feed Direction] from step 7, and then press the [#Enter] key.

Feed Direction:
(-4, +4) 0.0

17. Press the [Online] key.

The initial screen appears.


Note

- If you select [Glossy Paper] as the paper type for Tray 1, you can adjust [Feed Direction] only.

De-condensation

If the "ERR (993) Power Off On / Call Service if error reoccurs" message appears, there might be condensation inside the printer. You can dry the printer's interior by performing the de-condensation procedure.

1. Press the [Menu] key.

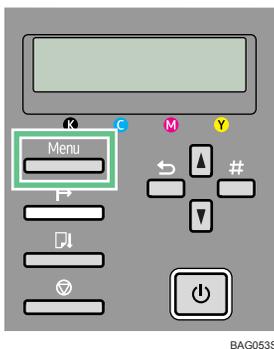

2. Press the [▲] or [▼] key to display [Maintenance], and then press the [#Enter] key.

Menu:


Maintenance

3. Press the [▲] or [▼] key to display [De-condensation], and then press the [#Enter] key.

Maintenance:
De-condensation

Three sheets are fed through the printer without anything being printed on them.

4. Switch the printer off and then back on again.

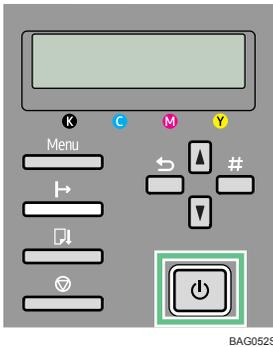

If the error message does not reappear, the printer's interior has fully dried.

If the error persists, switch the printer off, leave it for an hour, and switch it back on. If this does not solve the problem, contact your sales or service representative.

Note

- If the paper is smeared with ink after being ejected, contact your sales or service representative.

Reference

- p.214 "Where to Inquire"

Specifying System Settings using the Control Panel (System Menu)

You can set basic functions required to use the printer. The printer can be used on factory default, but the configuration can be changed depending on the condition of the user. The changed condition holds even if the printer is turned off.

Auto Continue

You can specify how the printer processes a print job when none of its trays contain paper of the size and type specified in the printer driver.

- Off

The printer waits until paper of the size and type required for the print job is loaded in one of its paper trays.

- Immediate

The printer prints even if the paper size or paper type is different from that specified.

Default: Off

Sub Paper Size

You can specify whether to print on A4 paper if the printer is not equipped with a paper tray that can feed Letter (8 1/2×11) paper specified on the printer driver, and vice versa.

- Auto
- Off

Default: Off

Energy Saver

Use Energy Saver mode to reduce the printer's power consumption.

You can specify how long the printer remains idle before it switches to Energy Saver mode. When the printer is in Energy Saver mode, it requires time to start up when it receives a print job.

- 5 minutes
- 15 minutes
- 30 minutes
- 45 minutes
- 60 minutes

Default: 5 minutes

Notify by Email

You can specify whether or not to send notification that a printer error has occurred to a particular e-mail address.

After changing this setting, turn the printer off and then back on.

- Off
- On

Default: Off

Unit of Measure

You can switch the measurement between “mm” and “inch”.

- mm
- inch

: Default: mm

: Default: inch

Ink CU Replace

You can reset the ink storage counter when replacing the ink collector unit.

5

Env.Slctr.Alert

You can specify whether or not to enable the Env.Slctr.Alert function.

- Display Alert

If you attempt bidirectional printing on sheets when the envelope selector is in the  (rear) position, printing does not begin and an error message notifying you that the envelope selector is incorrectly set will appear.

- No Alert & Prnt


Regardless of the envelope selector position, the printer ignores the error and continues printing.

Default: Display Alert

Changing the System Menu

This section explains setting Energy Saver mode as an example of how to change a System menu setting.

1. Press the [Menu] key.

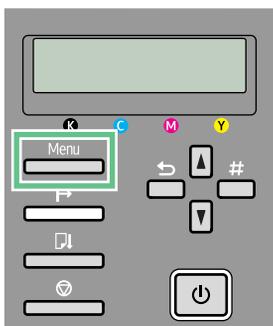

2. Press [▲] or [▼] key to display [System], and then press the [#Enter] key.

```
Menu:  
System
```

3. Press [▲] or [▼] key to display [Energy Saver], and then press the [#Enter] key.

```
System:  
Energy Saver
```

4. Press [▲] or [▼] key to select the lead time needed to switch to the Energy Saver mode.

```
E.Saver Timer:  
*5 minutes
```

5. Press the [#Enter] key.

The [System] screen appears.


6. Press the [Online] key.

The initial screen appears.

Selecting the Control Panel Language

This section explains how to select the language used for the settings and messages displayed on the control panel.

1. Press the [Menu] key.

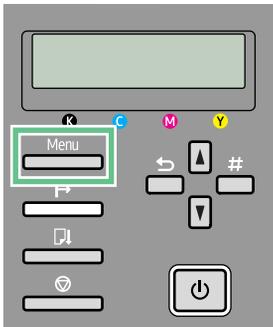

2. Press the [▲] or [▼] key to display [Language], and then press the [#Enter] key.

Menu:
Language

3. Press the [▲] or [▼] key to select the language, and then press the [#Enter] key.


Language:
*English

The Language screen appears.

4. Press the [Online] key.

The initial screen appears.

5. Switch the printer off and back on.

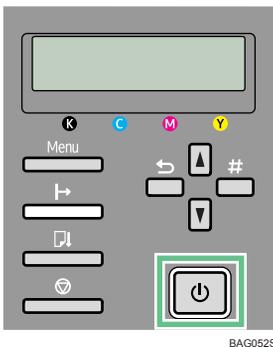

Use the following procedure to change the language setting.

1. Press the [Online] key.

The initial screen appears.

2. Press the [Menu] key.**3. Press the [▲] key once, and then press the [#Enter] key.**

The Language setting appears.

4. In the language list (shown below), find the language you require.

On the printer's control panel, the names of the available languages appear in English.

Language List

Language Name Displayed on Control Panel	Language
Japanese	Japanese
English	English
German	German
French	French
Italian	Italian
Dutch	Dutch
Swedish	Swedish
Norwegian	Norwegian
Danish	Danish
Spanish	Spanish
Portuguese	Portuguese

5. Select the language you require, and then press the [#Enter] key.**6. Press the [Online] key.****7. Switch the printer off and then back on.**

Restricting Printer Functions

This section explains how to lock keys on the printer's control panel to prevent general users from changing settings and performing certain functions.

By locking certain control panel keys, you can prevent users other than the administrator from doing the following:

- Pressing the [Menu] key to display the menu
- Holding the [Form Feed / Head-cleaning] key down to clean the print head
- Pressing the [Job Reset] key to cancel print jobs
- Pressing the [Power] key to switch the printer off
- Pressing the [Online] key to switch between online and offline modes

5

Locking the Keys

Use this procedure to lock the control panel keys.

1. **Simultaneously hold the [▼], [Escape], and [#Enter] keys down for 3 seconds, and then [#Enter] key.**

The following message appears.

Press # to
lock

2. **Press the [#Enter] key.**

The following message appears.

Panel Locked

The initial screen appears.

Unlocking the Keys

Use this procedure to unlock the control panel keys.


1. **Press the key you want to unlock.**

The following message appears:

Panel Locked
Cannot use

2. Simultaneously hold the [▼], [Escape], and [#Enter] keys down for 3 seconds, and then [#Enter] key.

The following message appears:

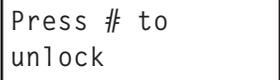

Press # to
unlock

3. Press the [#Enter] key.

The following message appears:



Panel Unlocked

The initial screen appears.

Replacing a Print Cartridge


Follow the procedure below to replace a Print cartridge.

Checking the Remaining Ink


Follow the procedure below to check when to replace Print cartridges using the Status monitor or the cartridge replacement indicators.

Checking the cartridge replacement indicators of the printer control panel

5

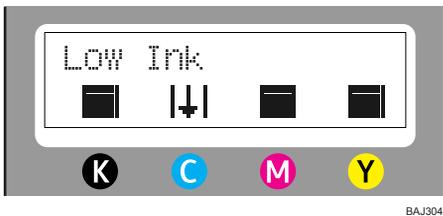

In the above illustration, the control panel is indicating that the cyan print cartridge is almost empty.

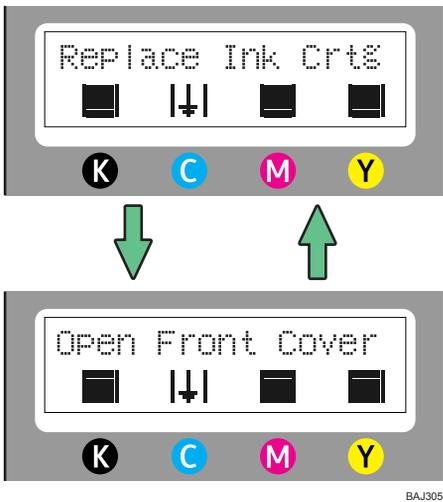

In the above illustration, the control panel is indicating that the cyan print cartridge is empty.


Checking Using the Status Monitor

1. Open the printer properties dialog box.
2. Click the [Maintenance] tab.

3. Click [Display Status Monitor].


The Status monitor dialog box appears.

4. Check the cartridge status.

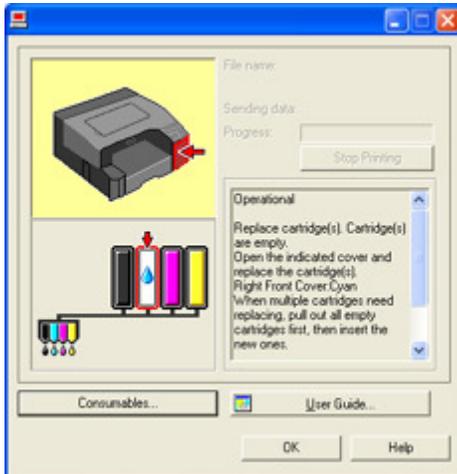

In the above illustration, the cyan Print cartridge is empty.

If the background of the image in the top left corner of dialog box is yellow, the indicated cartridge is empty. Printing can continue using ink remaining in the printer; however, no ink is left in the print cartridge. Check which color of cartridge needs to be replaced, and then replace it.

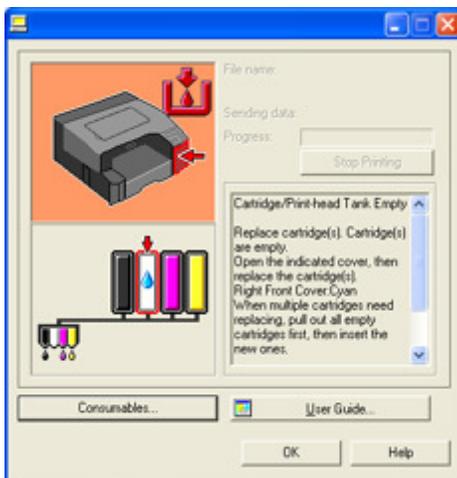


In the above illustration, the cyan ink has completely run out.

If the background of the image in the top left corner of dialog box is red, the printer has run out of the indicated ink. Printing cannot be performed. Replace the Print cartridge.


From left to right, the cartridge replacement indicators display the status of the black (K), cyan (C), magenta (M), and yellow (Y) Print cartridges.

↓ Note

- The cartridge status can be used for determination of cartridge change.

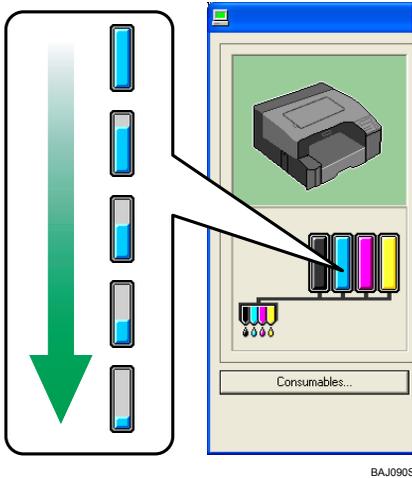

- A message indicating to replace a print cartridge can be also checked on the control panel.

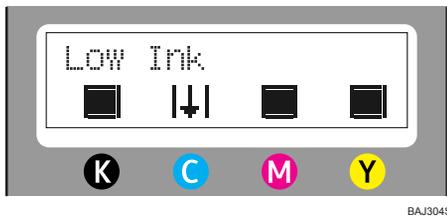

📖 Reference

- Be sure to insert the print cartridges correctly. If you insert them incorrectly, Status Monitor might not be able to detect the amount of ink that is remaining in the cartridges. For details about handling the print cartridges see p.138 "Handling Print Cartridges".

Replacing a Print Cartridge

Follow the procedure below to replace an empty Print cartridge.

Clear any errors, such as when there is a paper jam or when no paper is loaded, before replacing a Print cartridge.

⚠ CAUTION

- If ink comes into contact with your eyes, rinse immediately in running water. For other symptoms, consult a doctor.
- If ink is ingested, induce vomiting by drinking a strong saline solution. Consult a doctor immediately.


- If your skin comes into contact with ink, wash the affected area thoroughly with water or soap and water.
- Keep the ink or ink container out of reach of children.

★ Important

- **Take care to install the cartridges in the correct position.**

1. Remove the Print cartridges' packaging.


If multiple cartridges are empty, replace all the empty cartridges. You can shorten the time for needed replacement.

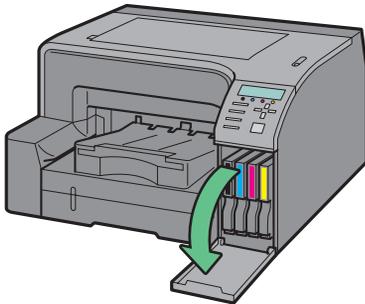2. Open the right front cover.

BAG011S

3. Take out the empty cartridges.

When doing this, be sure to hold the printer firmly so that it does not move.

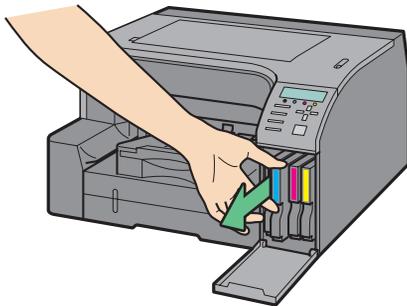


BAG013S

4. Check the cartridges' orientation, and then install them gently.


Install in the following order from the left: black, cyan, magenta, and yellow.

5. Push in the cartridge using the PUSH area.

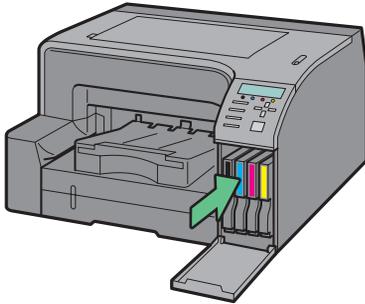

BAG046S

6. Close the right front cover.

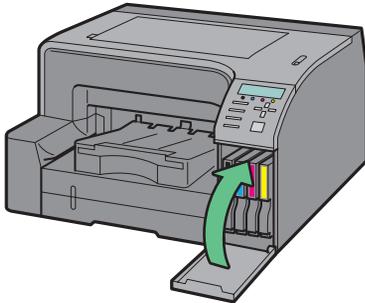

BAG026S

5

 Reference

- p.215 "Recommended Consumables"

Handling Print Cartridges

Important points about handling Print cartridges are explained.

 **CAUTION**

- If ink comes into contact with your eyes, rinse immediately in running water. For other symptoms, consult a doctor.
- If ink is ingested, induce vomiting by drinking a strong saline solution. Consult a doctor immediately.
- If your skin comes into contact with ink, wash the affected area thoroughly with water or soap and water.
- Keep the ink or ink container out of reach of children.

About Print cartridges

- Print cartridges comply with the manufacturer's safety specifications. To ensure safety and reliability, use genuine Print cartridges.

- When using the printer for the first time, install the Print cartridges supplied with the printer.
- As soon as you install the supplied print cartridges, the printer begins feeding ink to the print heads. Be sure not to reinstall used print cartridges.

Using Print cartridges

- Print cartridges should be used up before their expiry date, ideally within six months of being removed from their packaging.
- Do not open the package of a Print cartridge until the cartridge will be installed in the printer.
- Do not touch the print cartridges' ink inlets or chip contacts.
- Do not shake Print cartridges strongly. Ink may leak out.
- Do not take apart Print cartridges.
- Do not open the right front cover except when installing Print cartridges. Do not turn off the power or unplug the power cord during the process of installing the cartridges.
- Always confirm the color of a Print cartridge before installing it.
- Do not remove a Print cartridge once it has been installed unless necessary.
- Do not remove a Print cartridge while printing is being performed. Printing will stop.
- For print quality and consistency, this printer always uses all the available ink colors (black, cyan, yellow, and magenta) to produce print images. Even if your print image is black and white or [Black and White] is selected in the printer properties dialog box, all ink colors will still be used.
- Printing stops if one of the print cartridges becomes empty. If a cartridge containing a color ink such as cyan, yellow, or magenta becomes empty, you cannot print, even in black/white. If a message prompting you to change the print cartridge appears, change the cartridge as soon as possible.

Storing Print cartridges

- Store print cartridges at a temperature of between -20 and 43°C.

Ink consumption

- To protect the print head and ensure print quality, the printer performs periodic maintenance and print head cleaning when it is switched on and before printing. Both of these operations consume ink.
- The amount of ink consumed during cleaning depends on the cartridge size.

Cleaning

Clean the outside of the printer regularly to maintain the condition of the printer.

WARNING

- To avoid hazardous electric shock, do not remove any covers or screws other than those specified in this manual. When the machine needs to be checked, adjusted, or repaired, contact your service representative.
- Do not take apart or attempt any modifications to this machine. There is a risk of fire, electric shock, explosion or loss of sight.

To clean the exterior of the printer, wipe it with a soft, dry or damp cloth. If the dirt does not come off, wipe the printer first with a cloth moistened with a neutral detergent, then with a damp cloth, and finally with a dry cloth.

5

Important

- Do not use volatile chemicals like benzene or thinner, or insecticides on the printer. Using these chemicals could deform, crack, or change the color of the printer.
- When wiping the printer with a cloth moistened with detergent, be sure to wipe only the exterior.

Moving

The precautions when moving the printer a short distance or long distance are explained.

Moving a Short Distance


Do the following before relocating the printer inside the same room.

CAUTION

- The machine weighs around 13 kg (28.7 lb.).
- To avoid injury to self and damage to the machine, lift the machine slowly and carefully by gripping the central areas near the base on both sides.
- Careless handling and over exertion when lifting can result in breakage and/or injury.

Important

- **Be sure to keep the printer level. If it is unduly tilted, ink will leak from the ink collector.**
1. **Turn the power off, disconnect the USB cable, or ethernet cable, and then unplug the power cord from the wall outlet.**
Before moving the printer, be sure to disconnect the power cord from the printer, too.
 2. **Lift the printer and move it to the place where you want to install it.**

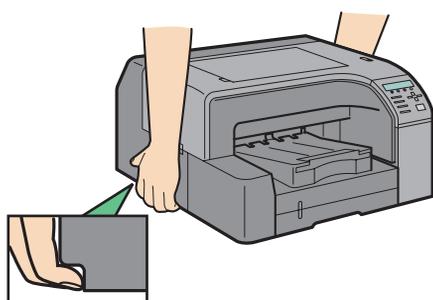

BAG030S

Grip the indented area at the base of the printer's sides, as shown. Lift and carry the printer slowly and carefully.

Make sure the power cord is not trapped under the printer.

Moving a Long Distance

1. **Turn the power off, disconnect the USB cable, or ethernet cable, and then unplug the power cord from the wall outlet. Do not remove the print cartridges. Remove the paper.**

- 2. Pack the printer for transport when moving it a long distance such as when changing office or residence. Disconnect all cables, place the printer in the box it was in when purchased, and transport in a level manner. After moving the printer, first remove and then reattach the network interface board.**

Contact sales or service representative for details.

↓ Note

- The inside of the printer may become dirty if the printer is not level when transported.
- When you move the printer, unplug the power cord from the printer, too.

Disposing

Consult with an authorized dealer to dispose of the printer.

When disposing of the printer yourself, be sure to comply with local disposal regulations.

When Not Using for a Long Period of Time

If the printer will not be used for a long time, turn its power off, disconnect the USB cable, and then unplug it from the wall outlet. It is recommended to print at least once a month, because the printer consumes a considerable amount of ink for periodic maintenance and print head cleaning when switched on after a long period of inactivity.

Be careful of the following:

- The nozzles of the print-heads may dry out and become clogged. To prevent this, periodically print something. Even if you do not print anything, turn the printer on for a few minutes once a month.
- If you do not use the printer for a long period of time, always check if the nozzles are clogged by printing a nozzle check test pattern. Clean the print-heads as necessary, and then begin printing.
- If you try to use the printer after it has been out of use for a long time, it may not print properly even if head cleaning is carried out several times. If this is the case, carry out head flushing. If the print heads are still clogged, leave the printer for about ten minutes, and then print the nozzle check pattern. If the problem persists, switch the printer off and leave it for at least eight hours. This should unclog the print heads.

Note

- After head cleaning is performed multiple times, clogged ink will dissolve over time, and normal printing may become possible.
- If there is no improvement after performing the steps above, contact sales or service representative.

Reference

- p.214 "Where to Inquire"
- p.114 "Nozzle Check"
- p.115 "Head-cleaning"
- p.117 "Head-flushing"

6. Troubleshooting

Software Cannot Be Installed

This section explains how to troubleshoot software installation problems under different environments.

Confirming Installation

Check whether the software has been installed.

Checking icons	<p>When the printer driver is properly installed, the icon of the printer appears in the [Printers and faxes] folder.</p> <p>When installation of User Guide is complete, User Guide icon appears on your desktop.</p> <p>If the icons do not appear, the software is not properly installed. In this case, you must repeat the installation procedure. See p.41 "Quick Install for USB".</p>
Checking the software	<p>You can install SmartDeviceMonitor for Client by clicking "Quick Install for Network" or "DeskTopBinder - SmartDeviceMonitor for Client".</p> <p>If SmartDeviceMonitor for Client is installed, the SmartDeviceMonitor for Client icon appears in the [SmartDeviceMonitor for Client] folder. To open the [SmartDeviceMonitor for Client] folder, select [Programs] on the [Start] menu, then select [DeskTopBinder], and then select [SmartDeviceMonitor for Client].</p>
Checking ports	<p>In the printer properties dialog box, check that USB connection or network printer is selected as a port. To check the connection, perform a test print. If the test print is not printed, see p.150 "If Test Print Fails".</p>

Checking Your Computer Environment

Check the system requirements for installing the software.

Quick Install for USB

The CD-ROM may not be inserted properly.	Check that the CD-ROM is inserted properly. Check also that it is not damaged and the CD-ROM drive is working properly.
The power cord or USB cable may not be properly connected.	Check that the power cord and USB cable are properly connected and not damaged.
The operating system is incompatible. There is insufficient hard disk space.	Check that the computer's operating system is fully compatible with this printer. See p.27 "Checking the Computer and Installation Area".
Other applications are not closed.	When installing software, quit all other applications. Installation may be disrupted if other applications are open. Also, quit any anti-virus applications that are running.
Windows made USB settings automatically.	Open Windows' Device Manager, and then, under [Universal Serial Bus controllers], remove any conflicting devices. Conflicting devices have a yellow [!] or [?] icon by them. Take care not to accidentally remove required devices. For details, see p.152 "Deleting Devices".
The printer is turned on before installation.	Switch the printer off and then on, and then try Quick Install for USB again.
Windows NT 4.0 is running.	<ul style="list-style-type: none"> • Windows NT 4.0 do not support USB connection with the printer. Connect the printer via a network in this case. • [Quick Install for USB] is unavailable. See p.52 "Installing the Printer Driver (USB)". • Configure the printer as a shared network printer. See p.61 "Installing the Printer Driver (Network)". • For details about network printer settings, see p.54 "Sharing the Printer".
The USB connection does not work.	Switch the printer off, unplug the USB cable from the printer, launch "Quick Install for USB" again, and then switch the printer on when the dialog box confirming printer driver installation appears. If this does not solve the problem, press the [Menu] key on the control panel, change "USB Setting" in [Host

	Interface] from [Auto] to [Full Speed], uninstall the printer driver, delete the device, and then launch "Quick Install for USB" again.
An error occurs during software installation.	If an error occurs because the printer is detected as an unidentified device, follow the instructions under "The USB connection does not work". If this does not solve the problem, do the following: First reboot Windows. Then, on the [Start] menu, select [Settings], and then select [Control Panel]. Double click the System icon, and then on the [Hardware] tab, click [Device Manager]. Under [Other Devices], select the printer, and then open its properties dialog box. On the [General] tab, click [Reinstall Driver] to reinstall the software.

Quick Install for Network

The CD-ROM may not be inserted properly.	Check that the CD-ROM is inserted properly. Check also that it is not damaged and the CD-ROM drive is working properly.
The power cord or Ethernet cable may not be properly connected.	Check that the power cord and Ethernet cable are properly connected and not damaged.
The operating system is incompatible. There is insufficient hard disk space.	Check that the computer's operating system is fully compatible with this printer. See p.27 "Checking the Computer and Installation Area".
Other applications are not closed.	When installing software, quit all other applications. Installation may be disrupted if other applications are open. Also, quit any anti-virus applications that are running.
The printer's IP address has not been specified. The computer and printer are not on the same network segment.	If the printer cannot be found and only "Printer Port" appears in the printer selection dialog box, either the printer's IP address has not been specified or the computer and printer are not on the same network segment. Before installing the software, check the printer's IP address and the network topology. Otherwise, select "Printer Port" in the dialog box, and then install the printer driver. If you do this, SmartDeviceMonitor for Client will not be simultaneously installed, so install it afterwards, and then configure the port.

<p>A newer version of SmartDeviceMonitor for Client is already installed.</p>	<p>If the version of SmartDeviceMonitor for Client already installed in the computer is newer than that on the CD-ROM, you cannot use "Quick Install" to install the printer driver. Install the printer driver, and then create the port.</p>
---	--

Printer Driver Cannot Be Installed

This section explains how to troubleshoot printer driver installation problems.

<p>The printer driver installer does not start. An error occurs during installation.</p>	<ul style="list-style-type: none">• If the screen does not appear even when you double-click the [SETUP.EXE] icon, or if an error occurs during installation, access the CD-ROM drive from [My Computer] or [Explorer]. Double-click the [RDISETUP.EXE] icon, and then install the printer driver by following the instructions that appear on the screen.• An error occurs if the path to the location of the stored data is too long. To install a printer driver downloaded from a Website or copied from a CD-ROM, save the printer driver directly on the hard disk, and then install it.• On the [Start] menu, point to [Settings], and then click [Printers and faxes]. In the [Printers and faxes] window, install the printer driver. For details, see Windows Help.
--	---

USB Connection is not Automatically Detected

If the USB connection is not automatically detected, do the following:

1. Delete the printer driver.
2. Delete the device.
3. Run [Quick Install for USB] again.

If these steps do not solve the problem, contact your sales or service representative.

Reference

- For details about deleting the printer driver, see p.151 "Uninstalling the Printer Driver".

- For details about deleting the device, see p.150 "If Test Print Fails".
- For details about [Quick Install for USB], see p.41 "Quick Install for USB".

If Test Print Fails

This section explains how to troubleshoot Test Print problems.

The power cord or USB cable or Ethernet cable is not properly connected.	Check that the power cord and USB cable, Ethernet cable are properly connected.
The port connection is not properly set.	<ol style="list-style-type: none"> 1. On the [Start] menu, point to [Settings], and then click [Printers]. 2. Click the icon of the printer, and then click [Properties] on the [File] menu. 3. Click the [Details] tab (Windows 2000/XP/Vista, Windows Server 2003, Windows NT 4.0: the [Ports] tab), and then check the printer port. <ul style="list-style-type: none"> • Select USB or network printer in the list when the selected port connection is something other than USB or network printer. • To connect via USB when USB does not appear in the list, you must re-install the printer driver. See p.148 "USB Connection is not Automatically Detected".
Ink feed is incomplete.	<p>Ink begins automatically feeding into the print-heads when the power of the printer is first turned on or when a cartridge is replaced.</p> <p>Wait until ink feed is complete at which point the [Power] key stops blinking and remains lit.</p>
The printer is offline.	Check if the printer's on-line indicator is lit. If the printer is offline, press the [Online] key on the control panel to switch the printer to the on-line mode.
A printer error has occurred.	Use the control panel to check if a printer error has occurred. If it has, correct the error, and then perform the print again.

If you cannot solve the problem, contact sales or service representative.

Reference

- If the Status monitor displays an error message, see p.182 "Status Monitor Errors".

Uninstalling

If software was installed incorrectly or incompletely, uninstall and then reinstall it.

★ Important

- Before uninstalling software or deleting devices, turn off any other printers connected to your computer via USB, or disconnect the USB cable to the printers.

↓ Note

- Screens vary according to the operating environment.
- To reinstall the software, restart Windows.

📖 Reference

- When reinstalling the software, see p.50 "Confirming the Connection Method"


Uninstalling the Printer Driver

To update the printer driver, uninstall the old printer driver before installing the new one.

★ Important

- The following explanation uses Windows 98 as an example. Procedures under other operating systems may differ.
- The Status monitor installed with the current printer driver is uninstalled when the current printer driver is uninstalled.
- Registered custom settings are also deleted. To continue using registered custom settings, save them as custom settings files before uninstalling.

1. Press the printer's [Power] key to turn the printer off.

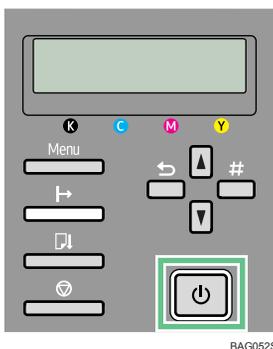

2. On the [Start] menu, point to [Settings], and then click [Printers].
3. Click the icon of the printer, and then click [Delete] on the [File] menu.

A confirmation message appears.

4. Click [Yes].

The printer driver is uninstalled.

5. Double-click [My computer].

6. On the [View] menu, click [Folder Options...].

7. Click the [View] tab.

8. In the [Advanced Settings:] box, click [Do not show hidden files], and then deselect the [Display the full path in title bar] check box.

9. Click [OK].

10. On the [Start] menu, point to [Find], and then click [Files or Folders...].

11. Click the [Name & Location] tab, and then enter a file name in the [Named:] field.

Enter "RCDAD19X.inf" as the INF name.

12. In the [Look in:] box, select the hard disk on which Windows is installed, and then click [Find Now].

13. Right-click the file displayed as the search result, and then click [Delete...].

The INF file is uninstalled.

14. After uninstalling the printer driver, restart Windows.

 **Reference**

- For details about storing registered custom settings, see the printer driver Help.
- For details about updating the printer driver, contact your sales or service representative.


Deleting Devices

If Windows automatically establishes a USB connection because of an unauthorized device, you can delete the device and any others like it. Be sure not to delete necessary devices. If USB connection is established normally, you do not need to perform this procedure.

 **Important**

- The following explanation uses Windows 98 as an example. Procedures under other operating systems may differ.

1. Press the printer's [Power] key to turn the printer on.

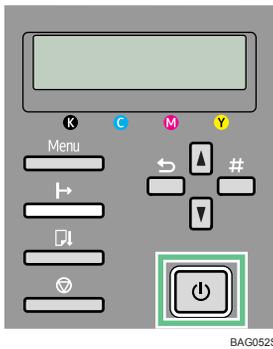

2. On the [Start] menu, point to [Settings], and then click [Control Panel].
3. Double-click [System].
4. Click the [Device Manager] tab.
5. Click [GJ USB Printing Support] or [Product Name].
6. Click [Remove].
A confirmation message appears.
7. Click [OK].
8. Click [Close].

Printing Will Not Start

If printing will not start, check whether the power of the printer is on or whether the power can be turned on or not.

If an error occurs when you try printing, change the computer or printer driver settings.

Power Cannot Be Turned On

If the [Power] key does not light or does not blink when it is pressed, check if there is something wrong with the power cord or wall outlet.

Check the following:

- Make sure that the power plug is firmly inserted into the wall outlet.
- Check if there is something wrong with the wall outlet. Do this by connecting another electronic product whose operation you are familiar with.

If the above steps do not solve the problem, turn the power off, pull out the power cable, and contact your sales or service representative. See p.214 "Where to Inquire".

6

Paper Will Not Feed Even When the Power Is On

If printing will not start even when the power is on, check if an error has occurred using the indicators or Status monitor.

An indicator is lit or blinking

Only the [Power] key is blinking.

The printer may be receiving data or replenishing its ink. Wait momentarily for the blinking [Power] key to stop and stay lit.

An error message is displayed on the Status monitor.

Click [User Guide...] to display the page corresponding to the error where you can check how to solve the problem in more detail. See p.182 "Status Monitor Errors".

An Error Occurs

If an error occurs when you try printing, change the computer or printer properties settings.

Do the following:

- Check the printer icon name does not exceed 32 alphanumeric characters.
(If it does, shorten it.)

- Check whether other applications are operating.
Close all other applications because these could be interfering with the installation. Be sure to close all resident programs also.
- Check the printer properties settings.
In the [Change User Settings] dialog box, on the [Misc.] tab, select the [Change data processing] check box.
- Check whether the latest printer driver is being used.
If the printer driver being used is not the latest one, update it with the latest version. see p.202 "Checking the Current Printer Driver Version".

Points to Remember when Printer Sharing under Windows 98/Me

When running printer sharing from a print server and connecting to a printer from a Windows 98/Me computer, there is a risk of printer driver installation failure on the client side. If this occurs, make the following settings on both the print server and the client:

Details of Problems that can Occur

Printer sharing is not displayed on the client computer, and when you attempt to print, print does not start and an "Error Message" appears.

Printer Server Settings

On the print server, from the Printers icon, open Printer Properties. On the [General] tab, delete [Comment].

Try the following if you cannot get out of "Printer Server Settings":

1. On the [Sharing] tab, enter the [Share Name] using less than seven letters.
2. On the [Sharing] tab, delete [Comment].
3. Enter the server machine name (computer name) using less than seven letters.

To Reset a Client Computer

1. Delete the client computer's printer driver, and then restart Windows.
2. On the print server, make the necessary settings under "Print Server Settings".
3. Reinstall the printer driver on the client computer.

Paper Is Not Fed or Delivered Normally

If the printer is operating but paper will not feed or paper jams multiple times, check the condition of the printer and paper.

Paper does not feed smoothly.

Paper guides are not adjusted properly.

- The paper guides of the paper tray do not match the paper loaded. Adjust the paper guides and load the paper again. See p.36 "Loading Paper".

Paper is not loaded properly.

- The paper is not loaded properly. Load the paper correctly. See p.36 "Loading Paper".

Paper is curled.

- Remove the loaded paper and check if it is curled. If it is, straighten the curl.

Paper that is not compatible is loaded.


- Remove the loaded paper and replace it with compatible paper. See p.73 "Non-compatible Paper".

6

Paper jams multiple times.

The guide board is not closed.

- Make sure the guide board is closed. Press the board on both sides until it clicks into place. See p.17 "Guide to Components".

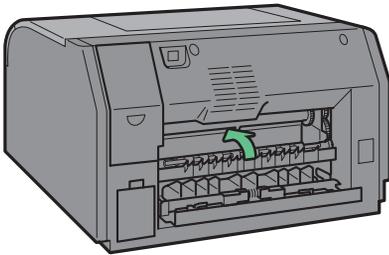

BAG005S

Push the PUSH area on both sides of the guide board until it firmly closes.

Printing densely colored images on both sides.

- When printing images containing areas of solid color that consume a lot of ink, we recommend single-sided printing.

Multiple sheets of paper are fed at one time.

Load the paper again. Remove the paper from the paper tray, fan it well, and tap it on a flat surface such as a desk to even the edges. Check the position of the paper guides of the paper tray, and then load the paper again. See p.70 "Paper Handling Precautions", p.36 "Loading Paper".

Though a paper jam is cleared, paper does not feed.

When a paper jam occurs, clear the paper jam, and then press the [Form Feed / Head-cleaning] key. See p.158 "Using the [Form Feed / Head-cleaning] Key to Remove Jammed Paper".

Note

- If an error is displayed on the Status monitor, follow the instructions to solve the problem. See p.182 "Status Monitor Errors".

Paper Jam

This explains how to remove a paper jam.


When a paper jam error appears in the Status monitor, remove the paper from the location indicated.

If you cannot locate paper jams or jammed paper cannot be removed easily, you can check the condition of paper from the top of the printer.

Using the [Form Feed / Head-cleaning] Key to Remove Jammed Paper


This section explains how to use the [Form Feed / Head-cleaning] key to remove jammed paper.

1. Press the [Form Feed / Head-cleaning] key.

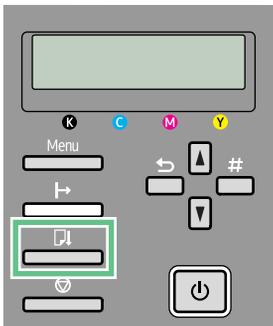

BAG054S

2. Remove jammed paper.

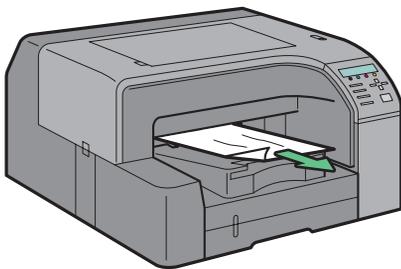

BAG045S

Printing starts.

↓ Note

- Sometimes, pressing the [Form Feed / Head-cleaning] key will not remove the jammed paper. If this is the case, pull Tray 1 out and remove the jammed paper manually.


Reference

- p.159 "Removing Paper Jammed in Tray 1 "

Removing Paper Jammed in Tray 1

Follow the procedure below to remove paper jammed in tray 1.


You can feed the jammed paper to tray 1 output ramp by opening the left cover and turning the paper feed wheel.

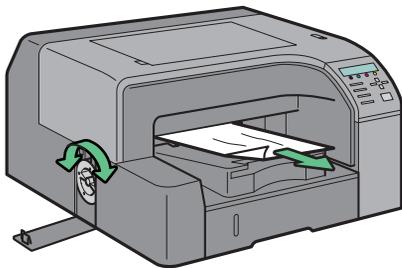

BAG061S

If turning the paper wheel does not remove the jammed paper, use the following procedure to remove it:


1. Hold the grip on tray 1, lift the tray slightly (①), and then pull it out (②).

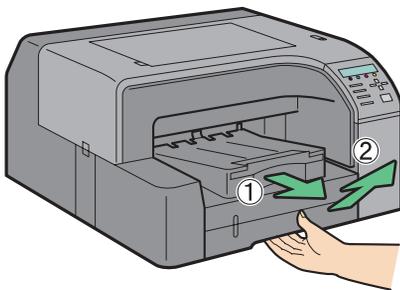

BAG020S

Pull tray 1 completely out. Take care not to drop it.


2. Remove jammed paper.

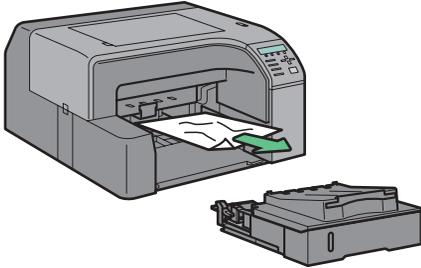

BAG028S

If you cannot remove the jammed paper or it is difficult to remove, the paper may be jammed inside the printer. Examine the paper carefully and remove.

3. Push tray 1 gently in until it stops.

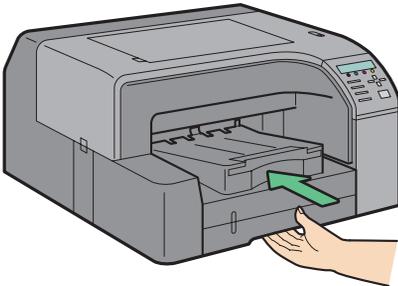

BAG015S

Printing starts.

Blank paper may be delivered after printing resumes.

↓ Note

- Before starting a print job, be sure to attach the tray 1 cover.

📖 Reference


- p.164 "Removing Paper Jammed around the Guide Board"
- p.156 "Paper Is Not Fed or Delivered Normally"

Removing Paper Jammed under the Top Cover

Follow the procedure below to remove paper jammed under the top cover.

★ Important


- If the printer's ink tube is preventing access to the jammed paper, carefully pull the tube to the side. Do not pull the tube upward. Pulling the tube upward will damage the printer.
- Do not touch the feed belt, the transparent black band, print head rail rod, ink tubes, or paper pressing board. Take care not to snag the sleeves of your clothing on the ink tubes.

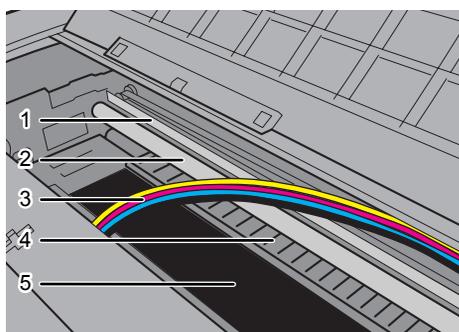

BAJ089S

1. Transparent black band
2. Print Head Rail Rod
3. Ink tubes
4. Paper pressing board
5. Feed belt


You can feed the jammed paper to tray 1 output ramp by opening the left cover and turning the paper feed wheel.

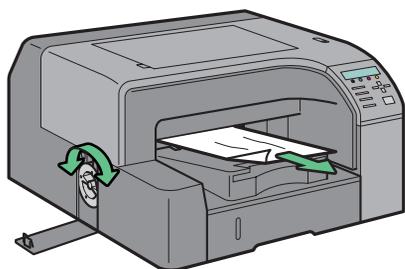

BAG061S

If turning the paper wheel does not remove the jammed paper, use the following procedure to remove it:


1. Open the top cover.

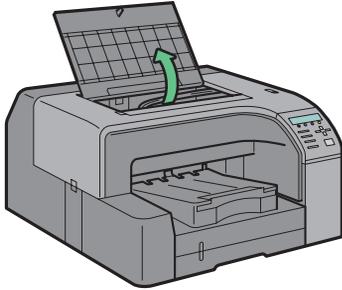

BAG018S


2. Open the left cover, and then turn the paper feed wheel.

Turn the wheel while looking for the jammed paper through the top cover opening.

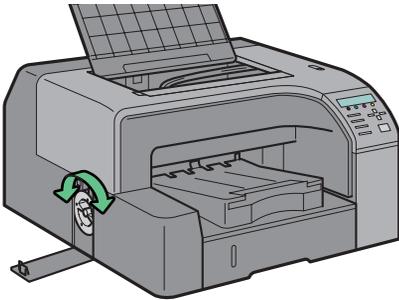

BAG060S


3. Remove the jammed paper through the top cover opening.

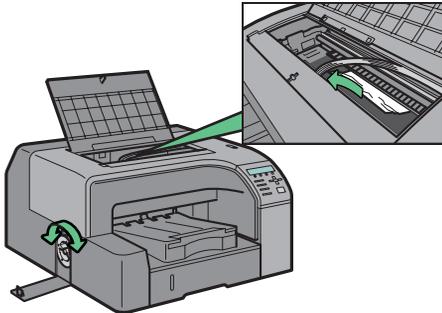

BAG068S


If the carriage has stopped halfway, move it to either end.

4. Close the left cover.

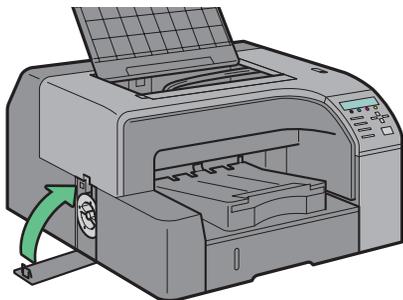

BAG059S

5. Close the top cover.

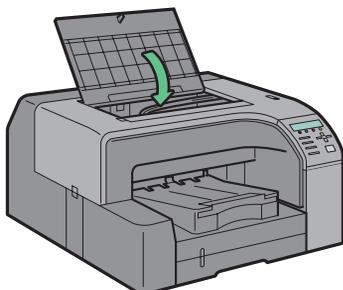


BAG019S

Printing starts.

After completing this procedure, print the nozzle check test pattern to make sure the print head's nozzles are not clogged.

↓ Note

- Before starting a print job, be sure to attach the tray 1 cover.
- Align the paper and reload it in the paper tray. Loading paper over the limit line in the tray may result in a paper jam.

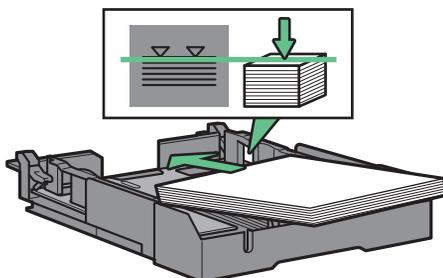

BAG038S

Reference


- p.36 "Loading Paper"
- p.114 "Nozzle Check"

Removing Paper Jammed around the Guide Board

Follow the procedure below to remove paper jammed around the guide board.


- 1. Release the rear cover by sliding the tabs on both sides toward the center, and then open the cover.**

Open the rear cover completely so you can see the guide board in the recess.

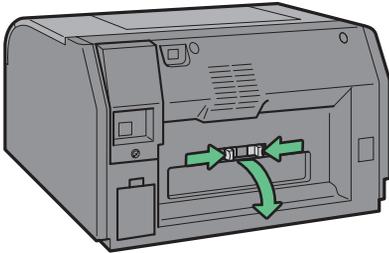


BAG008S

- 2. Unlock the guide board by moving the tabs on both sides toward the middle, and then open the guide board.**

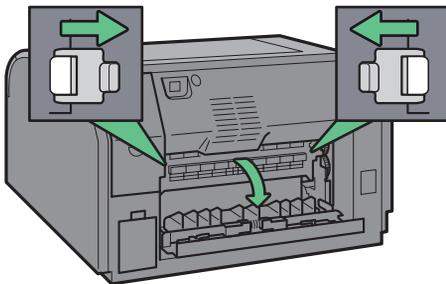


BAG009S

3. Open the left cover.

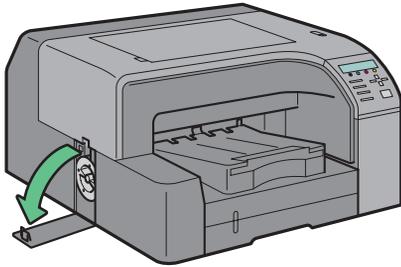

BAG016S


4. Turn the paper feed wheel to release paper from the feed belt.

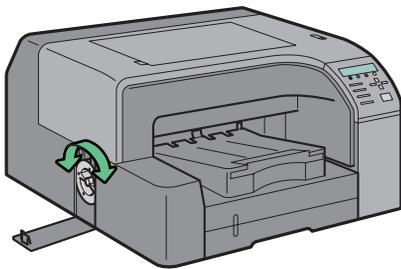

BAG029S

Release paper from the feed belt to make it removable.


5. Insert your finger between the paper and the feed belt, and then remove the paper slowly.

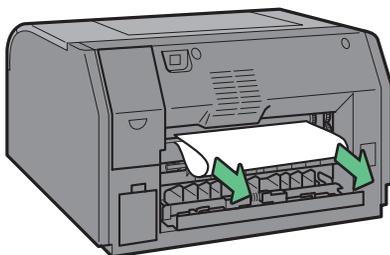

BAG012S

Do not touch the feed belt.


6. Close the guide board.

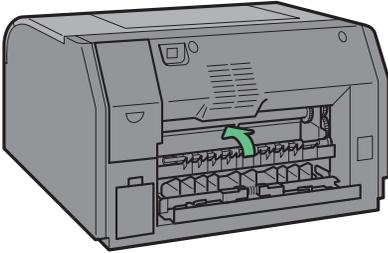

BAG005S


Push the PUSH area on both sides of the guide board until it firmly closes.

7. Close the rear cover.

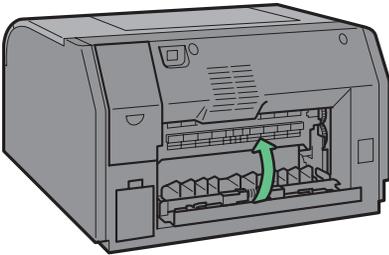

BAG014S

8. Close the left cover.

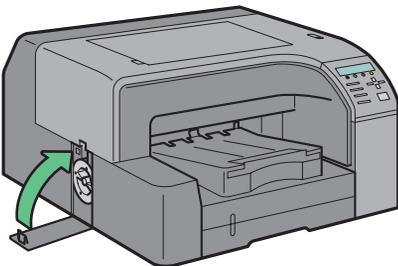

BAG017S

Printing starts.

↓ Note


- Depending on how the paper was jammed, printing may resume from the next page, not the one jammed.

If You Cannot Remove Jammed Paper

This section explains how to remove badly jammed paper that you cannot remove by the usual methods.

★ Important

- Do not touch the feed belt, the transparent black band, print head rail rod, ink tubes, or paper pressing board. Take care not to snag the sleeves of your clothing on the ink tubes.

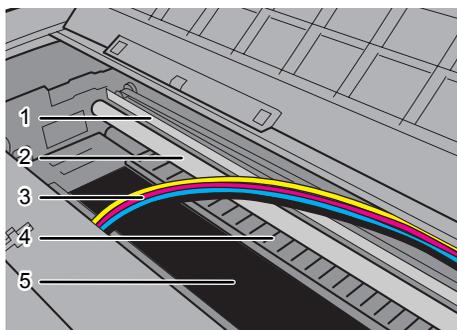


BAJ089S

- Transparent black band
- Print Head Rail Rod
- Ink tubes
- Paper pressing board
- Feed belt

- If the printer's ink tube is preventing access to the jammed paper, carefully pull the tube to the side. Do not pull the tube upward. Pulling the tube upward will damage the printer.


- Open the top cover.

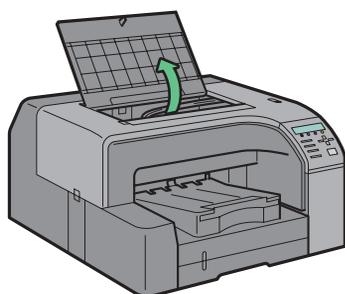

BAG018S


- Open the left cover, and then turn the paper feed wheel.

Turn the wheel while looking for the jammed paper through the top cover opening.

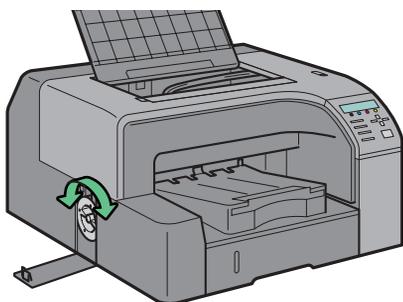


BAG060S

3. Remove the jammed paper through the top cover opening or back of the printer.

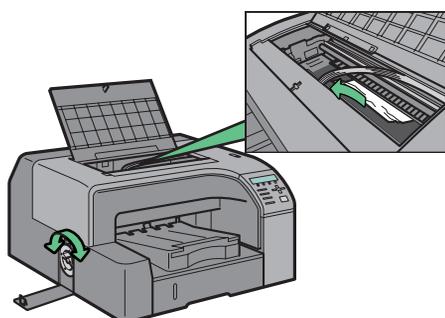


BAG058S

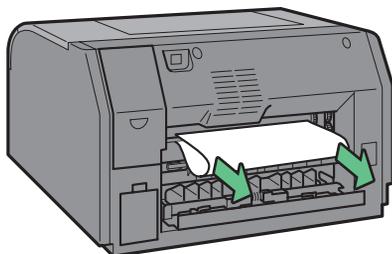

BAG012S


Before removing jammed paper from the back of the printer, remove the rear cover.

4. Close the left cover.

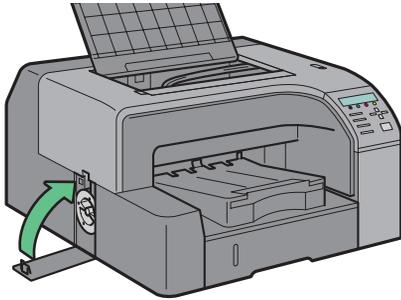

BAG059S

5. Close the top cover.

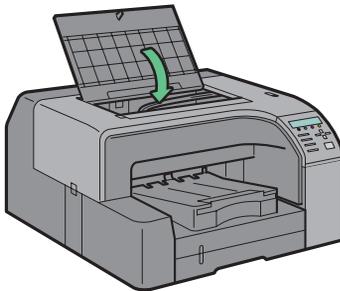


BAG019S

Printing starts.

↓ Note

- Before starting a print job, be sure to attach the tray 1 cover.
- Align the paper and reload it in the paper tray. Loading paper over the limit line in the tray may result in a paper jam.

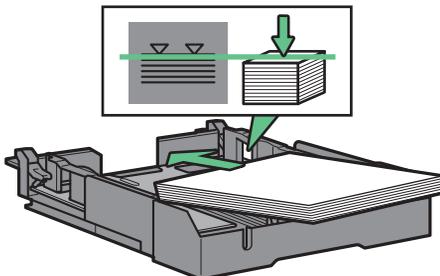

BAG038S

📖 Reference

- p.164 "Removing Paper Jammed around the Guide Board"

- p.36 "Loading Paper"

Print Results Are Not Satisfactory

If print quality is poor, check the printer and printer driver settings for problems. If no problems are apparent, check the print cartridge or other consumables.

Prints are Unsatisfactory

This section explains how to troubleshoot the printer when printing is uneven (due to the wrong amount of ink being used) or when prints are smudged, smeared, or blotchy.

Have you printed the nozzle check test pattern?

Print the nozzle check test pattern to check whether the print head nozzles are all ejecting ink properly, and, if necessary, carry out head cleaning or head-flushing. The procedure is as follows:

1. Print the nozzle check test pattern.
2. If the pattern is patchy, clean the print head, print the pattern again, and then check the result.
3. Do not use the printer for 5 to 10 minutes then, print the nozzle check test pattern again, and then check the result.
4. Clean the print head and print the nozzle check test pattern, clean and print a second time, and then check the result.
5. If the pattern is still patchy, flush the print head, print the pattern again, and then check the result.
6. Do not use the printer for 5 to 10 minutes, print the nozzle check test pattern again, and then check the result.
7. If the pattern is still patchy, switch the printer off, do not use it for about 8 hours, switch it back on, print the nozzle check test pattern, and then check the result.

If the pattern is still patchy, contact your sales or service representative.

See p.114 "Nozzle Check", p.115 "Head-cleaning" and p.117 "Head-flushing"

Does the envelope selector setting match?

Set the envelope selector according to the type of paper. For envelopes, set the lever to the rear position ; for everything else, set the lever to the forward position . See p.196 "Envelope Selector Position Mismatch".

Has the printer not been used for a long time?

The ink may be dry or the nozzles of the print-heads may be clogged. Print the nozzle check test pattern and clean the print-heads as necessary. See p.114 "Nozzle Check", p.115 "Head-cleaning".

Have you changed the envelope selector setting?

Depending on the thickness of the envelopes, changing the envelope selector setting might result in blurred or double lines being printed. If you switch the envelope selector to , be sure to select [Head Position],

as this will position the print heads correctly. If you switch the envelope selector to , be sure to select the [Uni-directional printing only] check box in the printer properties dialog box.

Have the print-heads been aligned?

Blurred or double lines indicate the print heads are incorrectly positioned. Resolve this by switching the envelope selector to  and then selecting [Head Position]. If the problem persists, print the nozzle check test pattern and clean the print-heads as necessary. See p.118 "Head Position", p.114 "Nozzle Check" and p.115 "Head-cleaning".

Is there a problem with the printer's location?

Make sure that the printer is level. Place the printer in a location where it will not be subject to shaking or excessive force.

Have you performed registration?

Perform registration if the print start point indicates misalignment. See p.122 "Registration".

Have you changed the paper feed setting?

If horizontal lines are printed unaligned, print images are patchy, or a black or white line is printed at regular intervals, print a test pattern, and then adjust the paper feed setting. p.120 "Adj.Paper Feed".

Does the paper type setting match?

Make sure that the paper type setting of the printer driver matches the type of paper loaded.

Are you printing on the wrong side of the paper?

Check which side should be printed on when using inkjet plain paper. If you print on the wrong side, the quality of the printing may be lower and the inside of the printer may get dirty. See p.70 "Paper Handling Precautions", p.69 "Compatible Paper Types".

Is the paper being used too thick or thin?

Check if the paper is compatible. The print heads will rub against paper that is too thick or thin, and this will cause smearing. See p.69 "Loadable Paper Sizes and Quantities".

Have you touched the printed side of paper?

Avoid touching the printed side of paper. Particularly, avoid touching glossy paper that have just been printed because these require longer than normal to dry. Remove them one at a time from the tray 1 cover without touching the printed side, and then let them dry fully. See p.70 "Paper Handling Precautions".

Is the paper loaded in the correct orientation?

Some paper cannot be loaded lengthwise depending on the size of the paper. Check the orientation in which the paper is loaded. See p.69 "Loadable Paper Sizes and Quantities".

Colors Do Not Match the Displayed Image

If there are differences between colors of the print results and the displayed image, the following questions should be addressed.

Has the hue of colors been adjusted?

Since printed colors and screen colors are produced by different methods, a color printed and a color displayed on a screen can have different hues even though they are the "same" color. Use the color matching function to make the hue of printed colors and displayed colors closer.

Has the nozzle check been performed?

The print-heads may be clogged and the amount of ink may not be able to be regulated. Print the nozzle check test pattern and clean the print-heads as necessary. See p.114 "Nozzle Check", p.115 "Head-cleaning".

Was printing done in black and white?

Check the color setting of the application and the color print setting of the printer driver.

Have the print quality settings been made?

In the [Print Quality] area, select [Quality priority], or [Speed priority], and then print.

Does the paper type setting match?

Make sure that the paper type setting of the printer driver matches the type of paper loaded.

Have you tried printing with inkjet plain paper?

Try printing with inkjet plain paper. The print results should be clearer.

Is bidirectional communication enabled?

If bidirectional communication is not enabled, the tone of printed images might differ from that of displayed images. Establish bidirectional communication.

See p.81 "If Bidirectional Communication is Disabled". For details about bidirectional communication settings, see the printer driver Help.

Positions Do Not Match the Displayed Image

If the position of printed items differs from the position of displayed items, the following questions should be addressed.

Have the settings for page layout been made?

Check whether page layout settings have been made with the application.

Does the paper size setting match?

Make sure that the paper size selected in the [Printout paper size:] list of the printer properties dialog box matches the size of the paper loaded.

Does the envelope selector setting match?

Set the envelope selector according to the type of paper. For envelopes, set the lever to the rear position ; for everything else, set the lever to the forward position . See p.196 "Envelope Selector Position Mismatch".

Blurred or double lines indicate the print heads are incorrectly positioned. Resolve this by switching the envelope selector to  and then selecting [Head Position].

Have the print-heads been aligned?

When bidirectional printing is performed, switch the envelope selector to  and select [Head Position] to align the print heads. If the problem persists, print the nozzle check test pattern and clean the print-heads as necessary. See p.118 "Head Position", p.114 "Nozzle Check" and p.115 "Head-cleaning".

Have you changed Printable area?

The problem may be solved by changing [Printable area:] in the printer properties dialog box. On the [Printer Configuration] tab, set [Printable area:] to [Maximum].

Have you changed Print Quality?

In the [Print Quality] area, select the [Uni-directional printing only] check box. Note, however, that this will slow printing down.

Is Binding Margins set correctly?

On the [Edit] tab, in the [Header/Footer/Adjust image position/Binding margins] dialog box, specify [Adjust Image Position] correctly.

Other Problems

You may eliminate certain problems by changing the printer driver settings as described below:

Cannot print certain data properly when using a certain application, or cannot print image data properly.

- In the [Print Quality] area, select [Quality priority], and then print.
- In the [Change User Settings] dialog box, on the [Image Adjustments] tab, under [Dithering], deselect the [Use error diffusion] check box.
- Set [Spool format:] to [RAW] or [EMF] in the [Printer Configuration] tab.
- In the [Change User Settings] dialog box, on the [Image Adjustments] tab, under [Image processing priority], deselect the [Adjust photos and images] and [Smooth low resolution images] check boxes.
- In the [Change User Settings] dialog box, on the [Misc.] tab, select the [Print as bitmap] check box.

- On the [Printer Configuration] tab, set [Adjust Color Density] to [Darker] or [Lighter], and then print.
- In the [Print Quality-User settings] dialog box, on the [Color Settings] tab, specify [Gray reproduction (Text/Line Art)].

Some characters are garbled or missing.

- In the [Change User Settings] dialog box, on the [Misc.] tab, select the [Change methods to extract TrueType fonts] check box.
- In the [Printer Configuration] tab, set [Spool format:] to [EMF]. In the [Change User Settings] dialog box, on the [Misc.] tab, select the [Print as bitmap] check box.

Some characters are printed faintly or not printed.

- In the [Print Quality] area, select [Quality priority], and then print.
- In the [Change User Settings] dialog box, on the [Image Adjustments] tab, under [Dithering], deselect the [Use error diffusion] check box.
- On the [Printer Configuration] tab, set [Spool format:] to [RAW] or [EMF].
- On the [Printer Configuration] tab, select the [Increase bold with font size] check box.
- In the [Print Quality-User settings] dialog box, on the [Color Settings] tab, specify [Gray reproduction (Text/Line Art)].
- To print text in black, in the [Print Quality-User settings] dialog box, on the [Color Settings] tab, select the [K (Black) for text only] check box.

Printing is slow and takes time, which delays release of the application.

- In the [Print Quality] area, select [Speed priority] or [High speed], and then print.
- In the [Printer Configuration] tab, set [Spool format:] to [EMF].
- In the [Change User Settings] dialog box, on the [Image Adjustments] tab, under [Image processing priority], deselect the [Adjust photos and images] and [Smooth low resolution images] check boxes.
- Close the resident application.

Printing stops halfway.

View the status monitor to check whether an error has occurred. See p.182 "Status Monitor Errors".

To print on preprinted or prepunched paper, select the [Use preprinted/prepunched paper] check box in the [Printer Configuration] tab.

Cannot carry out Layout print for Excel sheets.

In the printer properties dialog box, on the [Advanced Options] tab, select the [Increase auto-keep settings for applications] check box.

How can I make the Print mode change automatically according to the status of envelope selector?

To automatically do single-sided printing when the envelope selector is set to the envelope position, on the [Printer Configuration] tab, select the [When the envelope selector is set to Envelope Mode, use uni-directional printing only] check box.

Ink smudges and characters are not properly formed when printing white text on a black background.

In the [Print Quality] area, select [Quality priority], and then print.

Checking the Consumables

If you cannot find anything wrong with the printer or printer driver, check the consumables.

Is an old Print cartridge being used?

Print cartridges should be used up before their expiry date, preferably within six months of being removed from their packaging.

Is a genuine Print cartridge being used?

Using a cartridge other than a genuine Print cartridge or using a cartridge refilled with ink will lower the print quality and could cause a breakdown. Use a genuine Print cartridge. See p.215 "Recommended Consumables".

If a Message Appears during Installation

Message number 58 or 34 indicates the printer driver cannot be installed using Auto Run. Uninstall and then reinstall the printer driver.

Error & Status Messages on the Control Panel

This section explains what the messages that appear on the control panel mean and what to do when a particular message appears.

Depending on the "Auto Continue" and "Env.Slctr.Alert" settings specified on the System menu, some of the following messages might not appear.

Reference

- See p.127 "Specifying System Settings using the Control Panel (System Menu)"

Control Panel Error Messages

Hardware Problem Ethernet Board

An error in the network interface board (ethernet board) network function has occurred.

See p.196 "Network Interface Board Error".

6

Ink Collector is not set / Set the Ink Collector Unit

The ink collector unit has not been installed correctly. Reset the ink collector unit correctly.

See p.193 "Ink Collector Unit Not Detected".

Ink Collector Unit is full / Replace Ink Collector Unit

The ink collector unit is full. Replace the ink collector unit.

See p.214 "Where to Inquire".

Ink Collector almost full

The ink collector unit is almost full. Make sure you have a new ink collector on hand.

See p.214 "Where to Inquire".

Low Ink

The ink runs out. Change the print cartridge.

See p.134 "Replacing a Print Cartridge".

Open Front Cover / Replace Ink Crtg

The ink in the indicated print cartridge has run out. Change the indicated print cartridge.

See p.134 "Replacing a Print Cartridge".

Paper Misfeed / Press Form Feed

The printer failed to feed paper from the specified paper tray. Press the [Form Feed / Head-cleaning] key to feed the paper.

See p.158 "Using the [Form Feed / Head-cleaning] Key to Remove Jammed Paper".

Processing...

The printer is printing.

Ready

The printer is able to print.

Close Top Cover or Back Cover

The top cover, or rear cover is open, Close the top cover, or rear cover correctly.

See p.185 "Cover Open".

ERR(XXX) Power Off On / Call Service if error reoccurs

An error has occurred.

Switch the printer off and then on. If the message reappears, contact your service representative.

See p.214 "Where to Inquire".

Offline

The printer is offline. To print, put the printer online.

Temp. alert Please wait...

The printer is too hot or cold at start-up. Wait until "Ready" appears on the control panel.

Guide Board is open / Close the Guide Board

The guide board is open. Close the guide board.

Reset Cartridge

No print cartridge has been installed. Install the print cartridge correctly.

See p.188 "Cover Open / Print Cartridge(s) Not Detected".

Waiting...

Wait a moment.

Energy Saver

The printer is in Energy Saver mode. The printer is ready for use.

Cannot use High Temp. / Power Off On

The temperature is abnormally high.

Switch the printer off and then on. If the message reappears, contact your service representative.

See p.195 "Out of Printable Temperature Range".

Cannot use Low Temp. / Power Off On

The temperature is abnormally low.

Switch the printer off and then on. If the message reappears, contact your service representative.

See p.195 "Out of Printable Temperature Range".

Resetting Job...

The printer is reinitializing a print job.

Wait a moment.

Setting change

The printer is changing its settings. Wait a moment.

Load Paper:Tray# or Form Feed

The selected tray has run out of paper.

Reload the tray. Alternatively, press the [Form Feed / Head-cleaning] key, and then print. To cancel the print job, press the [Job Reset] key.

See p.182 "No Paper/Tray Not Detected (Tray 1)".

Change Setting Tray #/

The size of paper in the selected tray does not match the specified paper size.

Load the tray with paper of the specified size, and then change the paper size setting for the tray on the control panel. Alternatively, press the [Form Feed / Head-cleaning] key, and then print. To cancel the print job, press the [Job Reset] key.

See p.182 "No Paper/Tray Not Detected (Tray 1)".

Change Settings Tray #/

The type of paper in the selected tray does not match the specified paper type.

Load the tray with paper of the specified type, and then change the paper type setting for the tray on the control panel. Alternatively, press the [Form Feed / Head-cleaning] key, and then print. To cancel the print job, press the [Job Reset] key.

See p.182 "No Paper/Tray Not Detected (Tray 1)".

Panel Locked Cannot use

You have pressed a locked key. Unlock the key.

See p.132 "Restricting Printer Functions".

Reset Tray 1 correctly

The tray 1 has not been installed correctly. Reinstall the tray 1 correctly.

See p.187 "Cover Open/Tray Not Detected (Tray 1)".

Envelop. Selector position error / Reset E.Selector or FormFeed

The position of the envelope selector and the specified paper type do not match. This message appears also if the envelope selector is set to the  (rear) position while maintenance is carried out. Be sure to set the envelope selector to the right position.

See p.196 "Envelope Selector Position Mismatch".

Maintenance in process...

The printer is cleaning or flushing its print head. Wait a moment.

Right Front Cover is open / Close Right Front Cover

The right front cover is open. Close the print cartridge cover.

See p.188 "Cover Open / Print Cartridge(s) Not Detected".

Paper Misfeed Tray 1 / Set paper correctly

Paper has jammed in Tray 1. Clear the jam.

See p.159 "Removing Paper Jammed in Tray 1".

Remove Misfeed Top or Bck Cover / Use Feed Wheel in Left Cover

There is paper still jammed inside the printer.

Remove any jammed paper.

See p.164 "Removing Paper Jammed around the Guide Board" and p.167 "If You Cannot Remove Jammed Paper".

Remove Misfeed Open Top Cover / Use Feed Wheel in Left Cover

Paper has jammed under the top cover. Clear the jam.

See p.160 "Removing Paper Jammed under the Top Cover".

Left Cover is open / Close the Left Cover

The left cover is open. Close the left cover.

See p.185 "Cover Open".

Note

- If this does not eliminate the problem, contact your service representative.

Status Monitor Errors

If an error occurs with the printer, Status Monitor displays an error message. Click [User Guide...] to display the page corresponding to the error where you can check how to solve the problem in more detail.

Depending on the "Auto Continue" and "Env.Slctr.Alert" settings specified on the System menu, some of the following messages might not appear.

Reference

- See p.127 "Specifying System Settings using the Control Panel (System Menu)"

Status Monitor Does Not Open

If the Status monitor does not open for a shared printer, the following questions should be addressed.

Are the share settings correct?

Check the share settings of the printer. The printer driver must also be installed on the client computer. See p.54 "Setting Up a Server" and p.55 "Setting Up a Client Computer".

6

No Response from Printer

Follow the procedure below to check the port settings and the connection between the printer and computer.

1. Check that the power of the printer is on.
2. Make sure that the computer and printer are properly connected using a USB cable.
3. Open the printer properties dialog box.
4. Click the [Ports] tab.
5. Check that USB is selected in the [Print to the following port:] list.

Note

- Under Windows 98/Me, check that USB is selected in the list on the [Details] tab.
- If you want to connect the printer to the network, check the operating environment, and then change the port setting. For details about configuring the port, see p.61 "Using the SmartDeviceMonitor for Client Port", p.63 "Using the Standard TCP/IP Port", and p.64 "Using the LPR Port".

No Paper/Tray Not Detected (Tray 1)

Tray 1 is empty or the paper in it is not loaded properly. Do one of the following:

- Load the tray.
- Cancel the print job.


Reference

- To load the tray, see p.36 "Loading Paper".

Canceling the Print Job


Cancel the print job.

1. Press the [Job Reset] key.

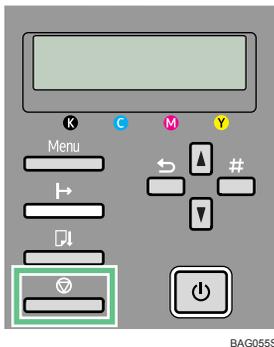

BAG055S

2. Press the [#Enter] key.

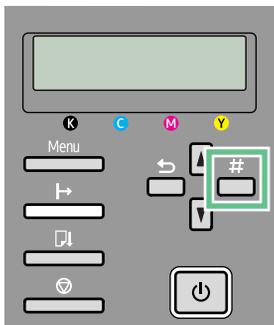

BAG056S

3. Press the [#Enter] key.

Paper Size Mismatch/Paper Type Mismatch (Tray 1)

The tray is not loaded with paper of the correct size or type. Do one of the following:

- Change the paper settings.
- Cancel the print job.


Reference

- To change the paper settings, see p.76 "Specifying the Paper Settings using the Printer's Control Panel (Paper Input Menu)".


Canceling the Print Job

Cancel the print job.

1. Press the [Job Reset] key.

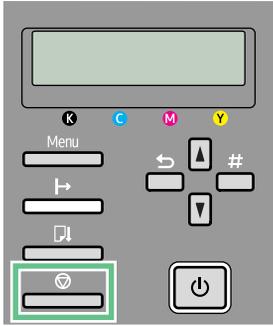

2. Press the [#Enter] key.

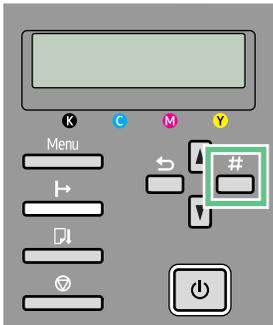

3. Press the [#Enter] key.

Paper Size Mismatch/Paper Type Mismatch (Auto Tray Select)

The automatically detected tray is not loaded with paper of the correct size or type. Do one of the following:

- Change the paper settings.
- Cancel the print job.


Reference

- To change the paper settings, see p.76 .


Canceling the Print Job

Cancel the print job.

1. Press the [Job Reset] key.

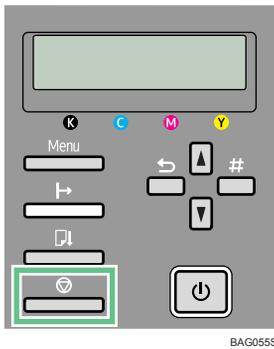

2. Press the [#Enter] key.

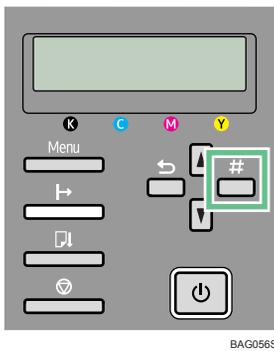

3. Press the [#Enter] key.

Cover Open


A cover is open. Make sure all covers are fully closed.

If the cover is already closed, open and then reclose it.

Follow the procedure below to close the cover.


1. Close the cover.

Top cover

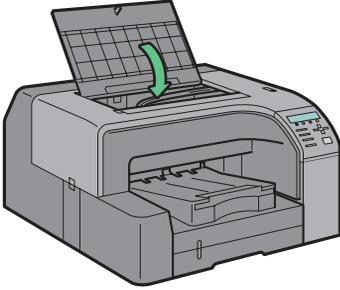


BAG019S

Rear cover

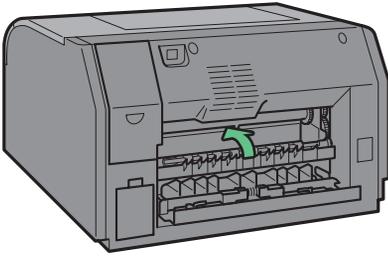

BAG005S


Left cover

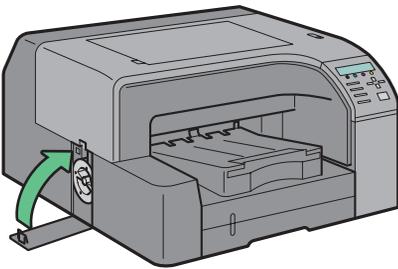

BAG017S

Note

- There is a guide board in the recess behind the rear cover. If the guide board is open, close it.

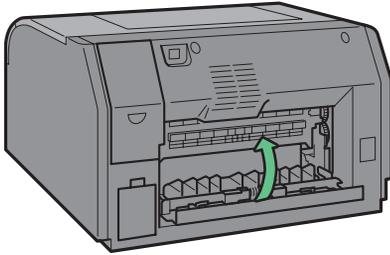

BAG014S

Reference


- p.17 "Guide to Components"

Cover Open/Tray Not Detected (Tray 1)

Tray 1 is not properly installed, or its cover is not properly attached. Make sure the tray is properly installed and its cover is properly attached.


1. Hold the grip on tray 1, lift the tray slightly (①), and then pull it out (②).

Pull tray 1 completely out. Take care not to drop it.

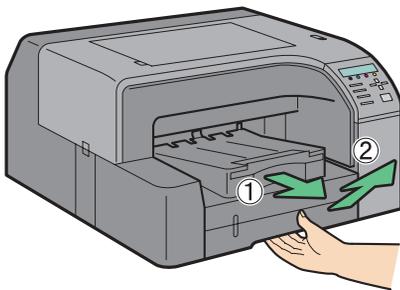


BAG020S

2. Attach the tray cover properly.

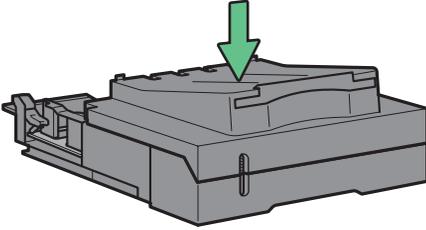

BAG031S

3. Push tray 1 gently in until it stops.

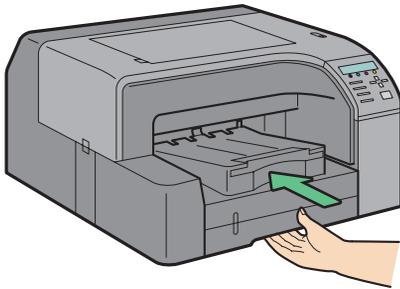

BAG015S

Note


- If the Tray 1 cover becomes misaligned or detached during printing, printing stops.

Cover Open / Print Cartridge(s) Not Detected

The right front cover is open. Close the right front cover. Alternatively, the print cartridges are not installed or are installed incorrectly. Install the print cartridges correctly.

If the cover is open:


1. Close the right front cover.

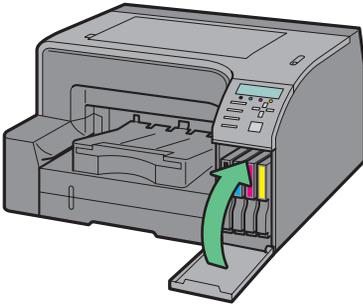

BAG026S


If the print cartridges are not installed or are installed incorrectly:

1. Open the right front cover.

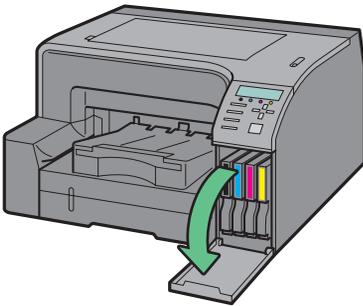


BAG011S

2. Push in the cartridge using the PUSH area.

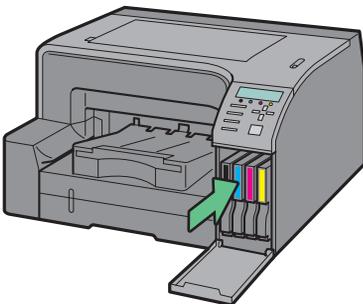

BAG046S

3. Close the right front cover.

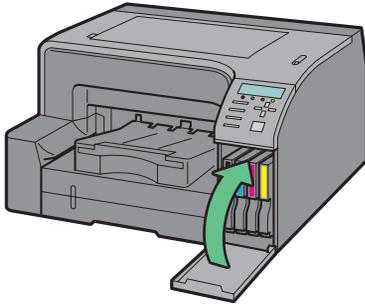

BAG026S

Note

- If the error persists, remove the print cartridge and then reinstall it. Do this once only.
- If there is a problem with the print cartridge, try installing a new cartridge.


6

Cartridge End

A Print cartridge is empty. Printing can continue using ink remaining in the printer; however, no ink is left in the Print cartridge. Check which color of cartridge needs to be replaced, and then replace it.


Checking ink colors

- Checking using the Status monitor

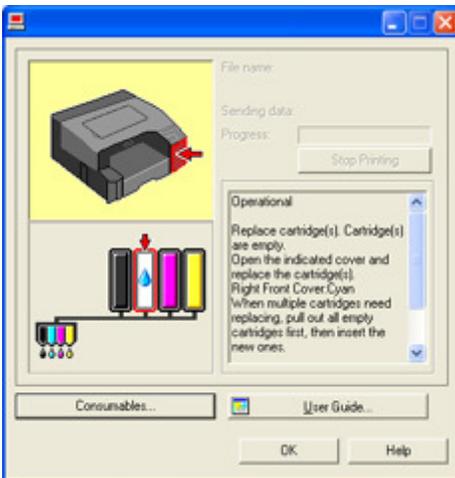

In the above illustration, the cyan Print cartridge is empty.

Checking the cartridge replacement indicators of the printer control panel

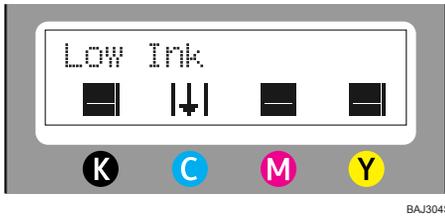

In the above illustration, the control panel is indicating that the cyan Print cartridge is empty.

↓ Note

- From left to right, the cartridge replacement indicators display the status of the black (K), cyan (C), magenta (M), and yellow (Y) Print cartridges.
- With glossy paper, if you print an image that needs a lot of ink, the printer may stop printing before the print is finished. An example of such an image is one containing a single large area of solid color, or one made up almost entirely of a few such areas.
- Do not carry out head cleaning or head flushing. If you do, the ink may run out.
- If you turn the power off and then back on, the printer will send the ink in the print cartridge to the printer. During this, the ink in the print cartridge may run out.

📖 Reference


- p.134 "Replacing a Print Cartridge"
- p.89 "Using the Status Monitor"

Cartridge/Print-head Tank Empty

The ink is completely depleted. Printing cannot be performed. Replace the Print cartridge.

Checking ink colors


- Checking using the Status monitor

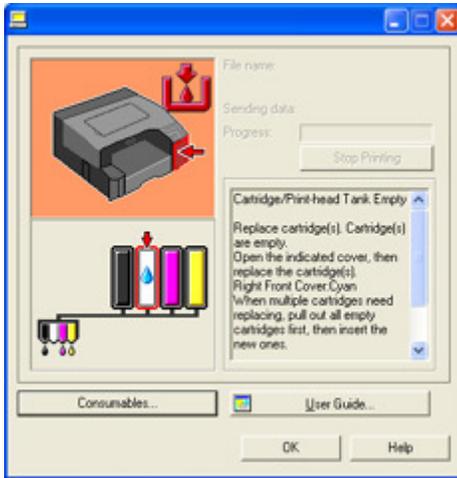

In the above illustration, the cyan Print cartridge has completely run out.

Checking the cartridge replacement indicators of the printer control panel

6

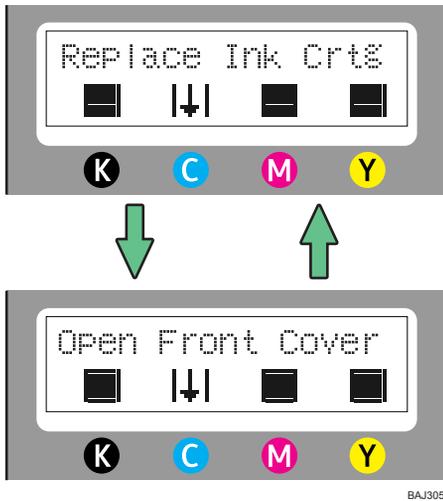

In the above illustration, the control panel is indicating that the cyan Print cartridge has completely run out.

↓ Note

- From left to right, the cartridge replacement indicators display the status of the black (K), cyan (C), magenta (M), and yellow (Y) Print cartridges.
- Under this condition, the printer cannot carry out head cleaning or head flushing.
- If the ink runs out during printing, the printer may eject blank or partially printed sheets.

📖 Reference


- p.134 "Replacing a Print Cartridge"

- p.89 "Using the Status Monitor"

Used Cartridge

The installed print cartridge has run out of ink. Printing cannot be performed. Replace the Print cartridge.

Checking the cartridge replacement indicators of the printer control panel

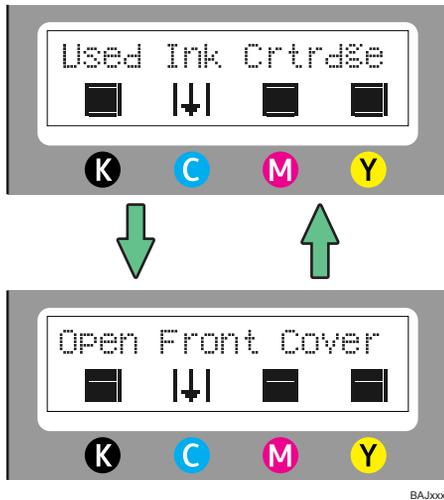

In the above illustration, the cyan print cartridge is empty.

↓ Note

- Under this condition, the printer cannot carry out head cleaning or head flushing.
- From left to right, the cartridge replacement indicators display the status of the black (K), cyan (C), magenta (M), and yellow (Y) Print cartridges.
- Cartridges that are no longer usable for printing reserve a small quantity of ink for maintenance usage. Make sure you do not install an empty print cartridge by mistake.
- Print cartridges should be used up before their expiry date, preferably within six months of being removed from their packaging.


📖 Reference

- p.134 "Replacing a Print Cartridge"
- p.89 "Using the Status Monitor"

Ink Collector Unit Not Detected


The ink collector unit is not attached correctly. Follow the procedure below to attach the ink collector unit correctly.

1. Open the ink collector unit cover slowly.

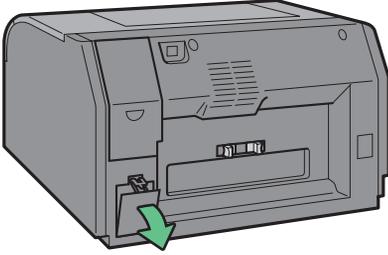


BAG021S

2. Attach the ink collector unit by pushing it in until it clicks. Take care not to spill the ink.
Remove the ink collector unit only when necessary.

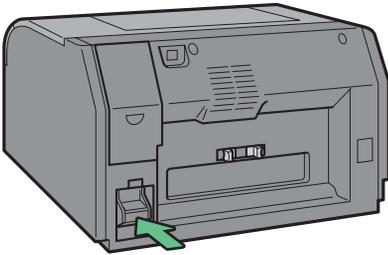

BAG023S

3. Close the ink collector unit cover slowly.

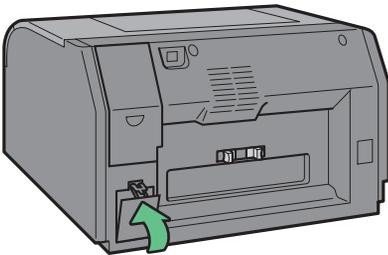

BAG022S

If the message reappears, contact your service representative.


Reference

- p.214 "Where to Inquire"

Out of Printable Temperature Range

Follow the procedure below to relocate the printer when the temperature inside the printer is inappropriate, extremely high or low, for printing.

1. Turn the printer off.

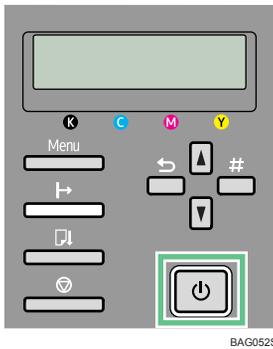

2. Place the printer in a 10 to 32°C (50 to 89.6°F) environment.

3. Turn the printer on.

↓ Note

- If humidity is more than 54%, the high end of the appropriate temperature range will be lower than usual.
- Even after the power is turned on, the printer may remain in the standby mode until it acclimates to the room temperature. If this happens, wait until the [Power] key stops blinking and stays lit.

📖 Reference

- For details about what conditions the printer can be used under (ambient temperature and humidity range), see p.27 "Checking the Computer and Installation Area".
- See p.141 "Moving".

Printer Error

An error has occurred in the printer. Turn the power off once, and then turn it back on.

↓ Note

- If the printer is relocated from a cold area to a warm area or the printer is placed in a room where the temperature varies greatly, condensation may form inside the printer causing errors. If this happens, perform the decondensation procedure.

📖 Reference


- For details about de-condensation, see p.125 "De-condensation".

- If the error still does not clear after the printer acclimates to room temperature and the power is turned back on, contact your sales or service representative.

Network Interface Board Error

An error in the network interface board network function has occurred. Do the following:

1. Turn the printer off.

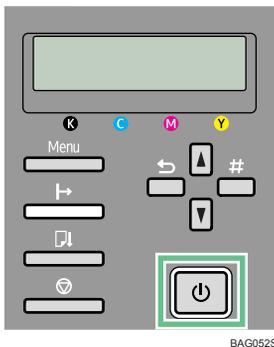

2. Turn the printer on.

If the message reappears, do the following:

3. Turn the printer off, and then unplug the power cord.

Unplug the power plug only after making sure the [Power] key indicator is off.

4. Turn the network interface board's screw counterclockwise and remove the board.

5. Plug the network interface board in securely, and then secure it by turning the screw.

6. Plug the printer's power cord into a nearby wall outlet, and then turn the printer on.

If the message reappears, contact your service representative.

Reference


- p.214 "Where to Inquire"

Envelope Selector Position Mismatch

The envelope selector is in the wrong position or the printer driver settings are wrong. Set the envelope selector to the right position or change the printer driver settings. Alternatively, press the [Form Feed / Head-cleaning] key, select a tray containing paper of the required size, and then print. To cancel the print job, press the [Job Reset] key.

Check the position of the envelope selector

1. For envelopes, set the lever to the rear position ; for everything else, set the lever to the forward position .

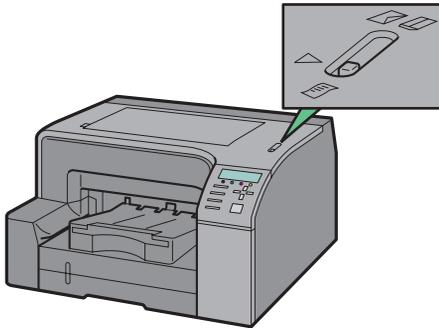


BAG043S

Check the printer driver settings

1. In the application, open the printer properties dialog box.
2. Click the [Setup] tab.
3. Check the [Paper type:] setting.

Select the paper type from the [Paper type] dropdown list. For envelopes, select [Envelope].

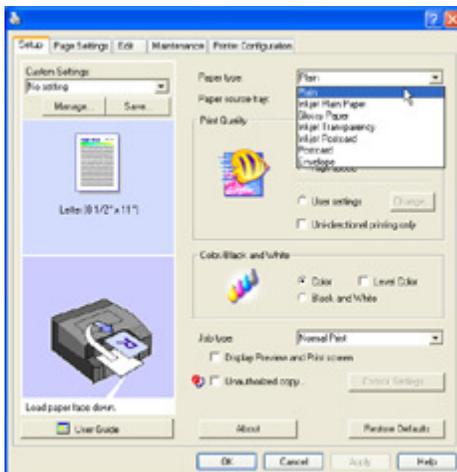


4. Click [OK].

Printing by Form Feed


Press the [Form Feed / Head-cleaning] key, and then print.

1. Press the [Form Feed / Head-cleaning] key.

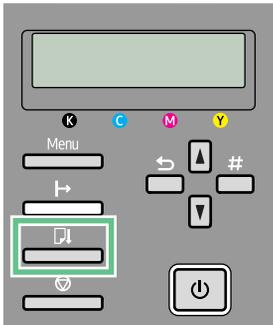

BAG054S

2. Press the [#Enter] key.

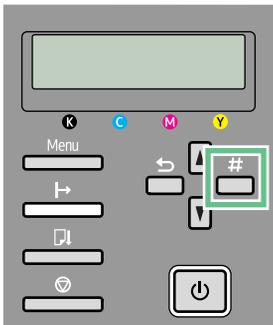


BAG056S

6

Canceling the Print Job


Cancel the print job.

1. Press the [Job Reset] key.

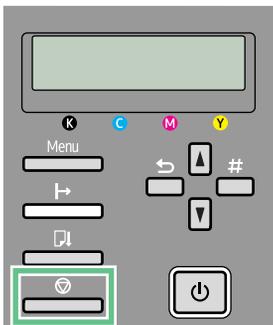

BAG055S

2. Press the [#Enter] key.

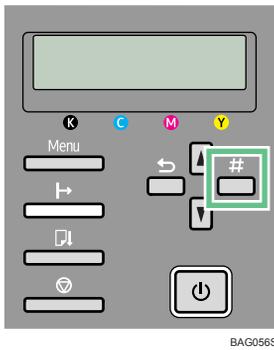

3. Press the [#Enter] key.

7. Appendix

Updating the Firmware

This section explains how to update the printer and network interface board firmware by downloading the latest firmware from the website and installing it.

1. **Download the file and decompress it.**
2. **Double-click the .exe file to install the firmware.**

Before updating the firmware, be sure to read the instruction files in the printer firmware folder.

↓ Note

- To check the current firmware version, print the system configuration page from the [List/Test Print] menu.

📖 Reference

- p.49 "Checking the Printer Status and Settings using the Printer's Control Panel (List/Test Print Menu)"

Checking the Current Printer Driver Version

Follow the procedure below to check the version of the printer driver currently installed.

1. **Open the printer properties dialog box.**
2. **Click the [Setup] tab.**
3. **Click [About].**

The [About] dialog box appears.

4. **Check the version.**

Software on the CD-ROM

This section describes the CD-ROM supplied with the printer.

Files

The following is a list of the files on the CD-ROM.

File Name
SETUP.EXE
Printer Driver for Windows 98/Me
Printer Driver for Windows NT 4.0
Printer Driver for Windows 2000/XP/Vista and Windows Server 2003
SmartDeviceMonitor for Client
ICM Color Profiles for Printer
Manuals (HTML files)

7

RPCS Raster Printer Drivers

This section gives the file locations of the different RPCS raster printer drivers and their system requirements.

File Location

The drivers are in the following folders on the supplied CD-ROM.

- RPCS raster printer driver for Windows 98/Me
DRIVERS\RPCS_R\WIN9X_ME\DISK1
- RPCS raster printer driver for Windows 2000/XP/Vista and Windows Server 2003
DRIVERS\RPCS_R\XP_VISTA\DISK1
- RPCS raster printer driver for Windows NT 4.0
DRIVERS\RPCS_R\NT4\DISK1

System Requirements for the Printer Drivers

- Computer
PC/AT-compatible computer with USB interface

- The Windows NT 4.0 printer driver is incompatible with any version of Windows NT 4.0 designed to run on a RISC processor (MIPS R series, Alpha AXP, or Power PC processors).
- Operating Systems
 - Windows 98/Me
 - Windows 2000/XP/Vista or Windows Server 2003
 - Windows NT 4.0
- Display Resolution
 - Minimum SVGA 800 × 600 pixels

Note

- The printer does not support by Windows XP 64-Bit Edition or Windows Server 2003 64-Bit Edition.
- The printer drivers do not support clustering technology under Windows 2000 and Windows Server 2003.
- For details about using the printer driver, see the printer driver Help.

SmartDeviceMonitor for Client

7

This section explains the functions and location of SmartDeviceMonitor for Client.

SmartDeviceMonitor for Client is software with the following functions. It is recommended that you install it on any computer you wish to use the printer with.

- Under Windows 98/Me, Windows 2000/XP/Vista, Windows Server 2003, and Windows NT 4.0, you can print over a peer-to-peer TCP/IP network.
- You can monitor the printer status over a TCP/IP network.

File Location

SmartDeviceMonitor for Client is in the following folder on the supplied CD-ROM.

NETWORK\DEVMON\CLIENT\DISK1

Note

- See "p.90", or the SmartDeviceMonitor for Client Help.

Reference

- For details about installing SmartDeviceMonitor for Client, see p.61 "Using the SmartDeviceMonitor for Client Port".

Manuals (HTML files)

This section gives the location of the manuals (HTML files).

File Location

The manuals are in the following folders on the supplied CD-ROM.

MANUAL

Cautions to Take When Using in a Network

Using DHCP

This printer can be used in a DHCP environment. In a WINS server environment, the printer name can simultaneously be registered with a WINS server.

↓ Note

- Supported DHCP server operating systems are: Windows 2000 Server, Windows 2003 Server, Windows NT 4.0 Server Service Pack 4 or higher, and UNIX standard.
- The IP address acquired from DHCP can be checked on the configuration page. For details about printing a configuration page, see "Checking the Printer Status and Settings using the Printer's Control Panel (List/Test Print Menu)".
- When there are multiple DHCP servers, make the same reservation for all. This printer uses information from the DHCP server that responds first.

📖 Reference

- p.49 "Checking the Printer Status and Settings using the Printer's Control Panel (List/Test Print Menu)"

Electromagnetic Interference

If another electronic device is placed next to the printer, each will influence the other negatively. In the case of a television or radio, noise may be generated. If this happens, do the following:

- Move the television or radio as far as possible from the printer.
- Change the position of the antenna of the television or radio.
- Use a different wall outlet on a different circuit.

Specifications

Specifications of the printer and options are listed.

Printer Body

Print speed

Measurements according to the manufacturer's measurement system

Black draft: 28 ppm

Color draft: 28 ppm

Depending on the operating environment, printing may take longer than normal.

Print direction

Supports bidirectional, minimum distance printing

Print resolution

Max 3600 × 1200 dpi equivalent

Nozzles

Black: 192 nozzles

Cyan, magenta, and yellow: 192 nozzles per color

Paper sizes (Tray 1 : standard)

Standard paper size: A4[□], A5[□], A6[□], B5 JIS[□], Letter (8¹/₂ × 11)[□], 5¹/₂ × 8¹/₂[□], Executive (7¹/₄ × 10¹/₂)[□], 16K[□], Com10 Envelope (4¹/₈ × 9¹/₂)[□], Monarch Envelope (3⁷/₈ × 7¹/₂)[□], C6 Envelope (114 × 162)[□], C5 Envelope (162 × 229)[□], DL Envelope (110 × 220)[□]

Custom paper sizes: 139.7-297 mm (5.5-11.69 inch) (length) × 88-216 mm (3.46-8.5 inch) (width)

Paper type

Plain paper

Recycled paper

Color paper

Inkjet plain paper

Glossy paper

Envelope

Paper weight

Tray 1/ optional tray: 60-157 g/m² (16.0-42.0 lb.)

Paper capacity

Tray 1: 250 sheets

Maximum paper capacity

250 sheets

Tray 1 output ramp capacity

150 sheets

The capacity may be less depending on the images printed.

Power supply

220-240V: 50/60 Hz, 0.45 A or more (when fully equipped)

120V: 50/60 Hz, 0.85 A or more (when fully equipped)

Power consumption

Average power consumption while printing:

35 W or less (not including options)

Energy Saver mode:

less than 4 W

To avoid any power consumption, disconnect the power plug from the wall outlet.

(Unplug the power plug only after making sure the [Power] key indicator is off.)

Operating environment

Temperature: 10 to 32°C (50 to 89.6°F)

Humidity: 15-80% RH (maximum wet-bulb temperature: 25°C (77°F))

Printing may stop to protect the printer for conditions outside those described above.

Storage environment

Temperature: 1 to 40°C (33.8 to 104°F)

Humidity: 5-80% RH

External dimensions

(W × D × H) 416 × 440 × 249 mm (16.3 × 17.3 × 9.3 inches)

Weight

Approximately 13 kg (28.7 lb.) (printer body with consumables)

Noise emission ^{*1}

Sound Power Level

	Main unit only
During Printing	Color : 61 dB(A) Black and white : 60.9 dB(A)
Standby	28.3 dB(A)

Sound Pressure Level*2

	Main unit only
During Printing	Color : 50.7 dB(A) Black and white : 50.8 dB(A)
Standby	16.8 dB(A)

*1 The preceding measurements made in accordance with ISO7779 are actual values.

*2 Measured at the position of a bystander.

Interface

USB 2.0 high speed

Printer language

RPCS Raster

Option (Network Interface Board)

7

Network Interface Board Type GX3a**Interface Connector:**

Ethernet (10BASE-T, 100BASE-TX)

Data Transmission Speed:

10Mbps, 100Mbps

Protocol:

TCP/IP

Information about Installed Applications

expat

Use of the software installed on this product, including the controller (hereinafter "software") and the expat Version 1.95.2 application software (hereinafter "expat 1.95.2"), is subject to the following conditions:

The product manufacturer provides warranty and support to the software of the product including expat 1.95.2 and the product manufacturer allows the initial developer of expat 1.95.2 to be free from these obligations.

Copyright © 1998, 1999, 2000 Thai Open Source Software Center Ltd
and Clark Cooper

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

↓ Note

- Information on expat 1.95.2 is available at:
<http://expat.sourceforge.net/>

NetBSD

Copyright Notice of NetBSD

For all users to use this product:

This product contains NetBSD operating system:

For the most part, the software constituting the NetBSD operating system is not in the public domain; its authors retain their copyright.

The following text shows the copyright notice used for many of the NetBSD source code. For exact copyright notice applicable for each of the files/binaries, the source code tree must be consulted.

A full source code can be found at <http://www.netbsd.org/>.

Copyright © 1999, 2000 The NetBSD Foundation, Inc.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment:

This product includes software developed by the NetBSD Foundation, Inc. and its contributors.

4. Neither the name of The NetBSD Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE NETBSD FOUNDATION, INC. AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Authors Name List

All product names mentioned herein are trademarks of their respective owners.

The following notices are required to satisfy the license terms of the software that we have mentioned in this document:

- This product includes software developed by the University of California, Berkeley and its contributors.
- This product includes software developed by Jonathan R. Stone for the NetBSD Project.
- This product includes software developed by the NetBSD Foundation, Inc. and its contributors.
- This product includes software developed by Manuel Bouyer.
- This product includes software developed by Charles Hannum.
- This product includes software developed by Charles M. Hannum.
- This product includes software developed by Christopher G. Demetriou.

- This product includes software developed by Tools GmbH.
- This product includes software developed by Terrence R. Lambert.
- This product includes software developed by Adam Glass and Charles Hannum.
- This product includes software developed by Theo de Raadt.
- This product includes software developed by Jonathan Stone and Jason R. Thorpe for the NetBSD Project.
- This product includes software developed by the University of California, Lawrence Berkeley Laboratory and its contributors.
- This product includes software developed by Christos Zoulas.
- This product includes software developed by Christopher G. Demetriou for the NetBSD Project.
- This product includes software developed by Paul Kranenburg.
- This product includes software developed by Adam Glass.
- This product includes software developed by Jonathan Stone.
- This product includes software developed by Jonathan Stone for the NetBSD Project.
- This product includes software developed by Winning Strategies, Inc.
- This product includes software developed by Frank van der Linden for the NetBSD Project.
- This product includes software developed for the NetBSD Project by Frank van der Linden
- This product includes software developed for the NetBSD Project by Jason R. Thorpe.
- The software was developed by the University of California, Berkeley.
- This product includes software developed by Chris Provenzano, the University of California, Berkeley, and contributors.

Samba(Ver 2.2.2-1.1)

Copyright © Andrew Tridgell 1994-1998

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version. This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details. You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA.

JPEG LIBRARY

- The software installed on this product is based in part on the work of the Independent JPEG Group.

Where to Inquire

For inquiries, contact your sales or service representative.

Recommended Consumables

Consumables recommended for this printer are listed.

Purchase necessary consumables before your supply runs out.

For information about consumables, contact your sales or service representative.

- Print cartridges

Option and Consumables

The following options can be used with the printer:

- Network Interface Board Type GX3a

You can print over the network.

Note

- For information about options and consumables, contact your service representative.

INDEX

A

About the Web Browser Help.....	109
About This Product.....	7
Adj. Paper Feed.....	120
Alert indicator.....	19
An Error Occurs.....	154
Attaching the Network Interface Board Type GX3a.....	31
Attaching the Options.....	31
Authors Name List.....	212

B

Before Installing the Software (Network Interface Board).....	44
Before Installing the Software (USB).....	40

C

Canceling printing.....	86
Canceling Printing.....	86
Canceling Printing from the Status Monitor.....	86
Canceling printing from the Taskbar.....	87
Canceling Printing Using the [Job Reset] Key of the Printer.....	86
Canceling the Print Job.....	183, 184
Cartridge End.....	190
Cartridge/Print-head Tank Empty.....	191
Cautions to Take When Using in a Network.....	206
Changing the Host Interface menu.....	59
Changing the Paper Input Menu.....	76
Changing the Printer Settings.....	96
Changing the System Menu.....	128
Check the power source.....	28
Checking the Computer and Installation Area.....	27
Checking the Computer to be Connected.....	29
Checking the Consumables.....	176
Checking the Current Printer Driver Version.....	202
Checking the Number of Printed Pages using the Control Panel.....	111
Checking the Printer Status.....	96
Checking the Printer Status and Settings using the Printer's Control Panel.....	49
Checking the Remaining Ink.....	134

Checking the Supplied Items and Unpacking the Printer.....	30
Checking Your Computer Environment.....	145
Cleaning.....	140
Colors Do Not Match the Displayed Image Do Not Match the Displayed Image.....	173
Compatible Paper Types.....	69
Conditions for Bidirectional Communication.....	81
Confirming Installation.....	145
Confirming the Connection Method.....	50
Connecting the Computer and Installing the Software (Network Connection).....	44
Connecting the Computer and Installing the Software (USB Connection).....	40
Connecting the Printer via the Network.....	44
Connecting the Printer via USB.....	40
Control Panel.....	19, 178
Correct Orientation of Preprinted Paper When Loaded in the Tray 1.....	71
Counter Menu.....	111
Cover Open.....	185
Cover Open/Tray Not Detected (Tray 1).....	187
Custom Setting.....	79

D

Data In indicator.....	19
De-condensation.....	125
Deleting Devices.....	152
Description for the Specified Model.....	12
Disclaimer.....	8
Display.....	19
Displaying the Counter.....	111
Displaying the Printer Status.....	89, 93
Displaying Top Page.....	94
Disposing.....	143

E

Electromagnetic Interference.....	207
Enter key.....	19
Envelope selector.....	17
Envelope Selector Position Mismatch.....	196
Envelopes.....	69
Error.....	178
Escape key.....	19
Ethernet Port.....	25

expat.....211

F

Feed.....156

Files.....203

Form Feed key.....19

G

Glossy paper.....69

Guide board.....18

Guide to Components.....17

H

Handling Print Cartridges.....138

Head Position.....118

Head-cleaning.....115

Head-flushing.....117

Host Interface Menu.....57

How to Use User Guide.....14

I

If a Message Appears during Installation.....177

If Bidirectional Communication is Disabled.....81

If Test Print Fails.....150

If You Cannot Remove Jammed Paper.....167

Important Notice.....85

Information about Installed Applications.....211

Ink.....136, 188, 190, 191

Ink collector unit cover.....18

Ink Collector Unit Not Detected.....193

Inkjet plain paper.....69

Install.....52, 61, 67

Installing the Drivers for Network Connection.....60

.....60

Installing the Print Cartridges.....32

Installing the Printer Driver (Network).....61

Installing the printer driver (USB).....52

Installing User Guide.....13

Interpreting the Configuration Page.....49

Introduction.....7

J

Job Reset.....86

Job Reset key.....19

JPEG LIBRARY.....213

L

Left cover.....17

List/Test Print Menu.....49

Loadable Paper Sizes and Quantities.....69

Loading paper.....36

Loading Paper into Tray 1.....36

Loading Precautions.....70

Locking the Keys.....132

M

Machine Body.....17

Machine Rear.....18

Maintenance Menu.....113

Making Printer Settings Using the Control Panel.....22

Manuals (HTML files).....204

Manuals for This Printer.....10

Menu.....95

Menu Chart.....22

Menu key.....19

Messages.....178

Moving.....141

Moving a Long Distance.....141

Moving a Short Distance.....141

Multi-tab.....79

N

NetBSD.....211

Network Interface Board Error.....196

Network Interface Board Type GX3a.....25

No Paper/Tray Not Detected (Tray 1).....182

No Response from Printer.....182

Non-compatible paper.....73

Notes on the Installation (Network Connection).....47

Notes on the Installation (USB Connection).....41

Notifying the Printer Status by E-mail.....97

Nozzle Check.....114

.....114

.....114

O

Online key.....19

Opening from an application.....80

Opening from Printer Status Error Messages.....16

Opening from the CD-ROM.....15

Opening from the Icon.....	15
Opening from the Printer Driver.....	15
Opening from the Start Menu.....	15
Opening the Printer Properties Dialog Box.....	79
Opening the Printing Preferences Dialog Box.....	79
Option (Network Interface Board).....	210
Options.....	25
Options and consumables.....	216
Other Problems.....	174
Out of Printable Temperature Range.....	195

P

Paper.....	69
Paper feed wheel.....	18
Paper Handling Precautions.....	70
Paper Input Menu.....	76
Paper Is Not Fed or Delivered Normally.....	156
Paper Jam.....	158
Paper Size Mismatch/Paper Type Mismatch (Tray 1).....	183
Paper Storage Precautions.....	72
Paper Type Precautions.....	72
Paper Will Not Feed Even When the Power Is On.....	154
Performing Maintenance using the Control Panel.....	113
Plain paper.....	69
Plugging in the Power Cord and Turning the Power On.....	34
Positions Do Not Match the Displayed Image.....	173
Power Cannot Be Turned On.....	154
Power inlet.....	18
Power key.....	19
Print cartridge.....	17
Print Cartridge End LED.....	19
Print Cartridge(s) Not Detected.....	188
Print results are not satisfactory.....	171
Printable area.....	74
Printer Body.....	208
Printer Driver.....	52, 61
Printer Driver Cannot Be Installed.....	148
Printer Error.....	195
Printer Properties Dialog Box.....	79, 83

Printing.....	83
Printing a Configuration Page.....	38
Printing a document using [Data security for copying].....	84
Printing a Document Using [Mask type].....	84
Printing Will Not Start.....	154
Prints are Unsatisfactory.....	171

Q

Quick Install for Network.....	47, 145
Quick Install for USB.....	41, 145

R

Rear Cover.....	18
Receiving Notification of Print Job Status via the Status Monitor.....	89
Recommended consumables.....	215
Recommended Functions.....	26
Registration.....	122
Removing Paper Jammed around the Guide Board.....	164
Removing Paper Jammed in Tray 1.....	159
Removing Paper Jammed under the Top Cover.....	160
Removing the User Guide.....	16
Replacing a Print Cartridge.....	134, 136
Restricting Printer Functions.....	132
Right front cover.....	17
RPCS Raster Printer Drivers.....	203

S

Samba(Ver 2.2.2-1.1).....	213
Selecting the Control Panel Language.....	130
Setting Up a Client Computer.....	55
Setting Up a Server.....	54
Setting Up the Hardware.....	27
Sharing the Printer.....	54
SmartDeviceMonitor for Client.....	67, 90, 204
SNMP.....	110
Software Cannot Be Installed.....	145
Software on the CD-ROM.....	203
Specifications.....	208
Specifying Settings on Accessories Tab.....	81
Specifying Settings on the Control Panel.....	45

Specifying System Settings using the Control Panel	127
Specifying the Client Computer Settings.....	92
Specifying the Interface and Network Settings using the Printer's Control Panel.....	57
Specifying the Paper Settings using the Printer's Control Panel.....	76
Specifying the Print Server.....	91
Specifying the Settings for Monitoring the Printer.....	92
Status Monitor.....	86, 182
Status Monitor Does Not Open.....	182
Status Monitor Errors.....	182
Symbols.....	12
System Menu.....	127

T

TCP/IP.....	61
The area where the printer is to be placed.....	27
Top cover.....	17
Trademarks.....	7
Tray 1.....	17
Tray 1 cover.....	17
Tray 1 output ramp.....	17
Tray 1 output ramp extension.....	17
Troubleshooting.....	178
Two Types of Printer Properties Dialog Box.....	79

U

Unauthorized Copy Control.....	84
Uninstalling.....	151
Uninstalling the Printer Driver.....	151
up arrow, down arrow keys.....	19
Updating the Firmware.....	201
USB Connection is not Automatically Detected.....	148
USB slot.....	18
User's Notes.....	8
Using as the Windows Network Printer.....	65
Using DHCP.....	206
Using Notification via SmartDeviceMonitor for Client.....	91
Using SmartDeviceMonitor for Client.....	90
Using the Form [Feed / Head-cleaning] Key to Remove Jammed Paper.....	158
Using the LPR Port.....	64

Using the SmartDeviceMonitor for Client Port.....	61
Using the Standard TCP/IP Port.....	63
Using the Status Monitor.....	89
Using Web Browser.....	94

V

Vent.....	18
-----------	----

W

When Not Using for a Long Period of Time.....	144
Where to Inquire.....	214

GelSprinter GX 2500 User Guide

